



Commercial Walk-Behind Mower Floating Deck T-Bar Hydro with 36in TURBO FORCE® Cutting Unit

Model No. 30494 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Clutch Assembly	 3	Cylinder and Crankcase Assembly Kawasaki FH541V-BS24	 23
Fuel System, Hydraulic Pump and Filter Assembly	 4	Piston and Crankshaft Assembly Kawasaki FH541V-BS24	 24
Hydraulic Pump Assembly No. 114-3400 and 114-3401	 5	Valve and Camshaft Assembly Kawasaki FH541V-BS24	 25
Pump Drive and Wheel Assembly	 6	Lubrication Equipment Assembly Kawasaki FH541V-BS24	 26
Hydraulic Wheel Motor Assembly No. 104-1171	 7	Cooling Equipment Assembly Kawasaki FH541V-BS24	 27
Lower Control Assembly	 8	Electric Equipment Assembly Kawasaki FH541V-BS24	 28
Hydraulic Hose Assembly	 9	Control Equipment Assembly Kawasaki FH541V-BS24	 29
Upper Control Assembly	 10	Carburetor Assembly Kawasaki FH541V-BS24	 30
Control Panel Assembly	 11	Air Filter and Muffler Assembly Kawasaki FH541V-BS24	 31
Battery Assembly	 12	Fuel Tank and Valve Assembly Kawasaki FH541V-BS24	 32
Parking Brake Assembly	 13	Starter Assembly Kawasaki FH541V-BS24	 33
Power-Take-Off Idler Assembly	 14	Label Assembly Kawasaki FH541V-BS24	 34
Carrier Frame Assembly	 15	Attachments and Accessories List	 35
Deck Drive and Baffle Assembly	 16		
Deck Assembly No. 112-7080	 17		
Lever Assembly No. 107-1664	 18		
Spindle Assembly No. 110-0730	 19		
Spindle Assembly No. 110-0728	 20		
Outer Deck Assembly	 21		
Deflector Assembly No. 110-0790	 22		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Kawasaki dealer

- ❸ Not serviced separately

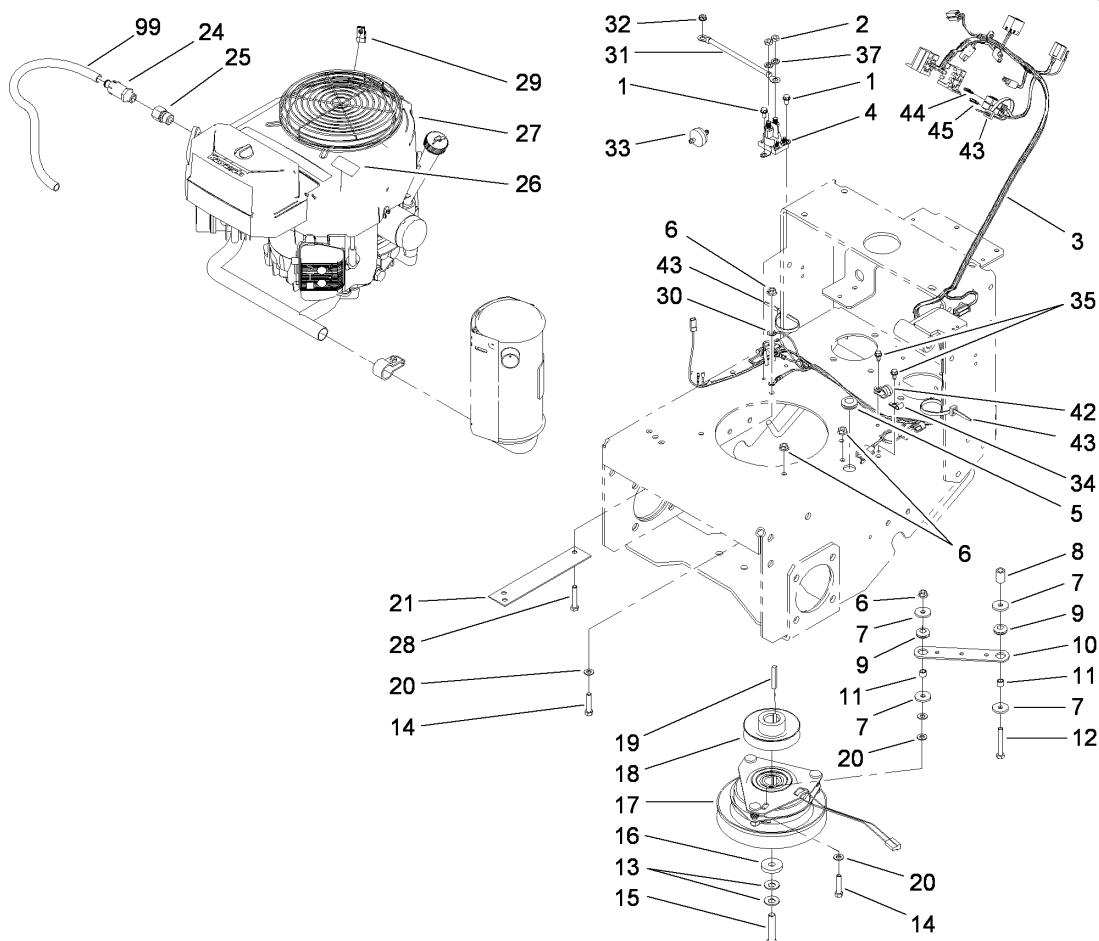

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32144-4	2	Screw-HWH	27		1	Engine-Kawasaki, FH541V-Bs24
2	3220-2	2	Nut-Jam	28	322-9	1	Screw-HH
3	114-3418	1	Harness-Wire	29	2412-87	1	Clamp-Cable
4	1-513075	1	Switch-Solenoid	30	3255-8	1	Washer-Lock
5	112-7069	1	Grommet	31	112-9707	1	Cable-Battery, Pos
6	32128-20	6	Nut-HF	32	32149-2	1	Nut-Keps
7	1-613235	4	Washer	33	56-6360	1	Filter-Fuel
8	104-6373	1	Tube-Retainer	34	2412-72	1	Clip-Closed, Insulated
9	1-633630	2	Grommet-Brake	35	12-3270	2	Screw
10	1-633543-03	1	Strap-Clutch, Brake	37	3253-4	2	Washer-Lock
11	1-633545	2	Spacer	42	2412-134	1	R-Clamp
12	322-11	1	Screw-HH	43	3290-378	3	Tie-Cable
13	1-603610	2	Washer-Spring	44	109102	1	Fuse-25 Amp
14	322-7	4	Screw-HH	45	109103	1	Fuse-30 Amp
15	3212-9	1	Screw-HH	99	103-1964	1	Hose-Drain, Oil
16	107-4136	1	Washer				
17	105-2635	1	Clutch / Brake				
18	44-5940	1	Pulley				
19	608006	1	Key-Square				
20	3256-23	5	Washer-Flat				
21	94-5847-01	1	Cover-Pulley				
24	92-6877	1	Valve-Drain, Oil				
25	103-1966	1	Adapter				
26	106-0699	1	Decal-Warning				

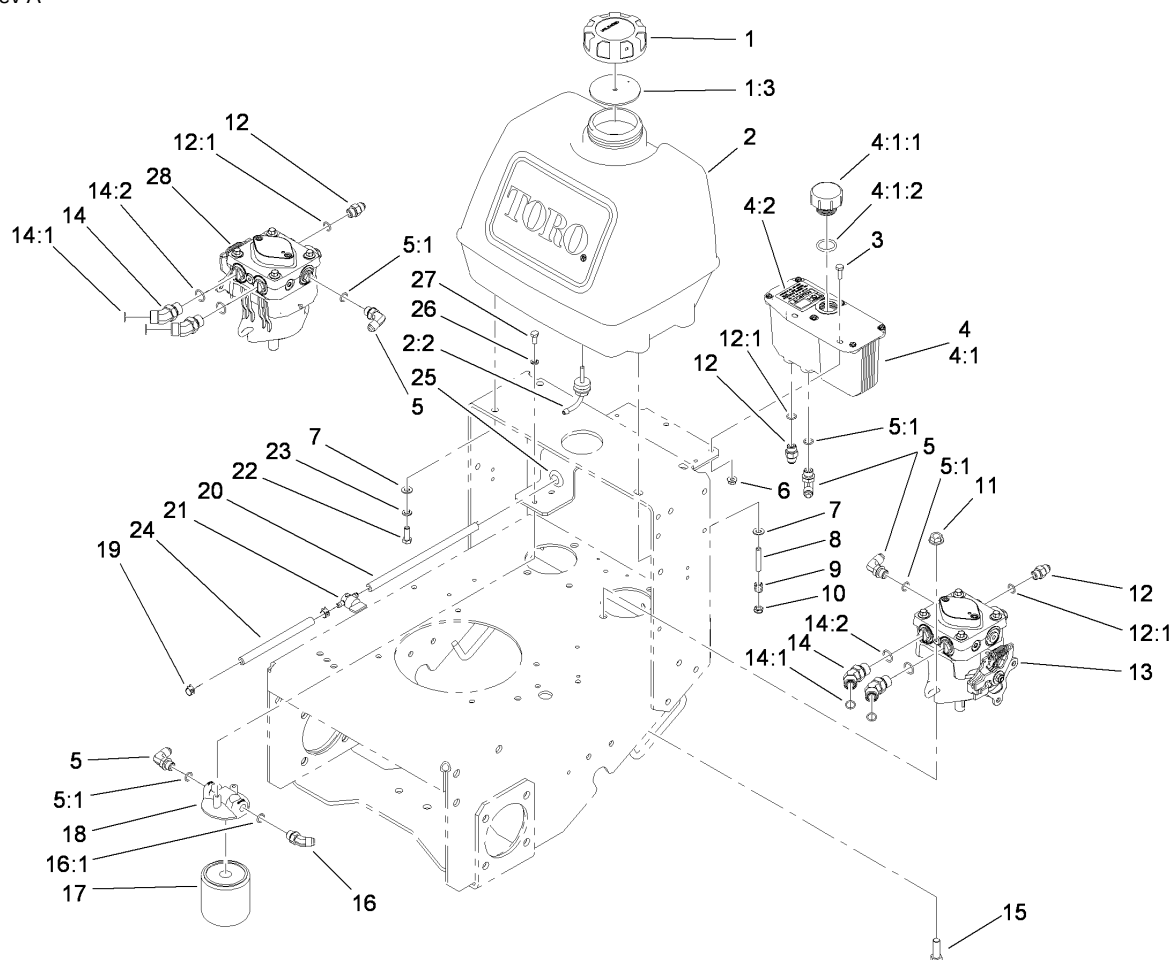

Fuel System, Hydraulic Pump and Filter Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	4	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	3	Fitting-Straight
12:1	237-42	1	O-Ring
13	114-3400	1	Pump-HYD, Left
14	340-101	4	Fitting-HYD, 45 DEG
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Fitting-HYD, 45 DEG
16:1	237-42	1	O-Ring
17	1-633752	1	Filter-HYD, Winter
17	1-633750	1	Filter-Oil, HYD
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	110-4894	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	107-0588	1	Hose-Fuel
25	112-7069	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	114-3401	1	Pump-HYD, Right

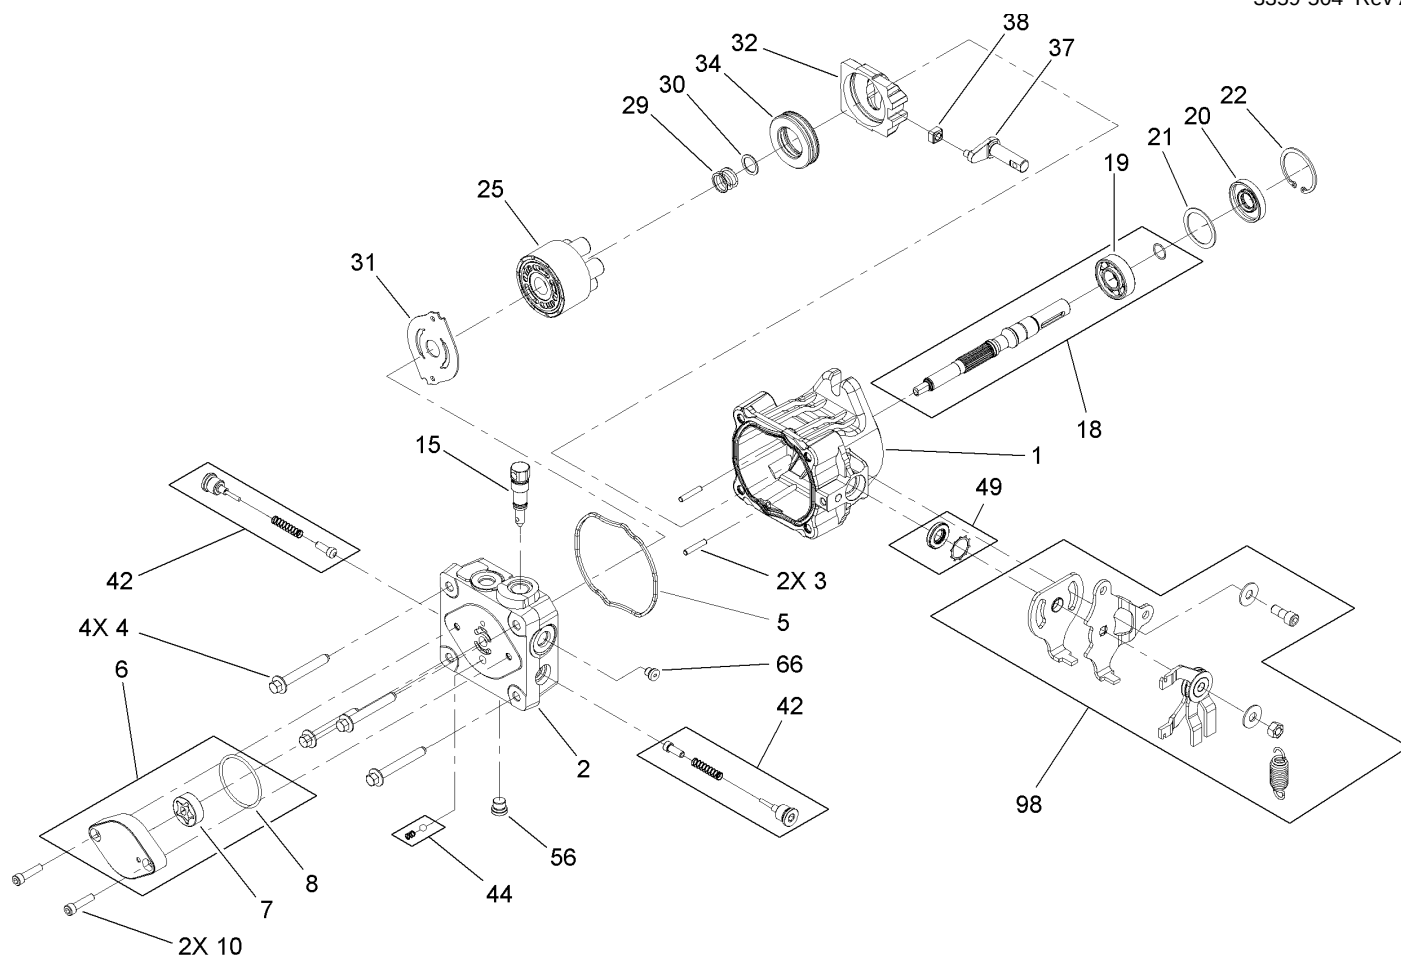

Hydraulic Pump Assembly No. 114-3400 and 114-3401

Ref	Part No.	Qty.	Description
1	114-0278	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	104-2111	2	Capscrew
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	103-2666	1	Cylinder Block Kit
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	104-2112	1	Trunnion ASM
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
98	114-0277	1	Return Kit
99	105-6184	1	Seal Kit

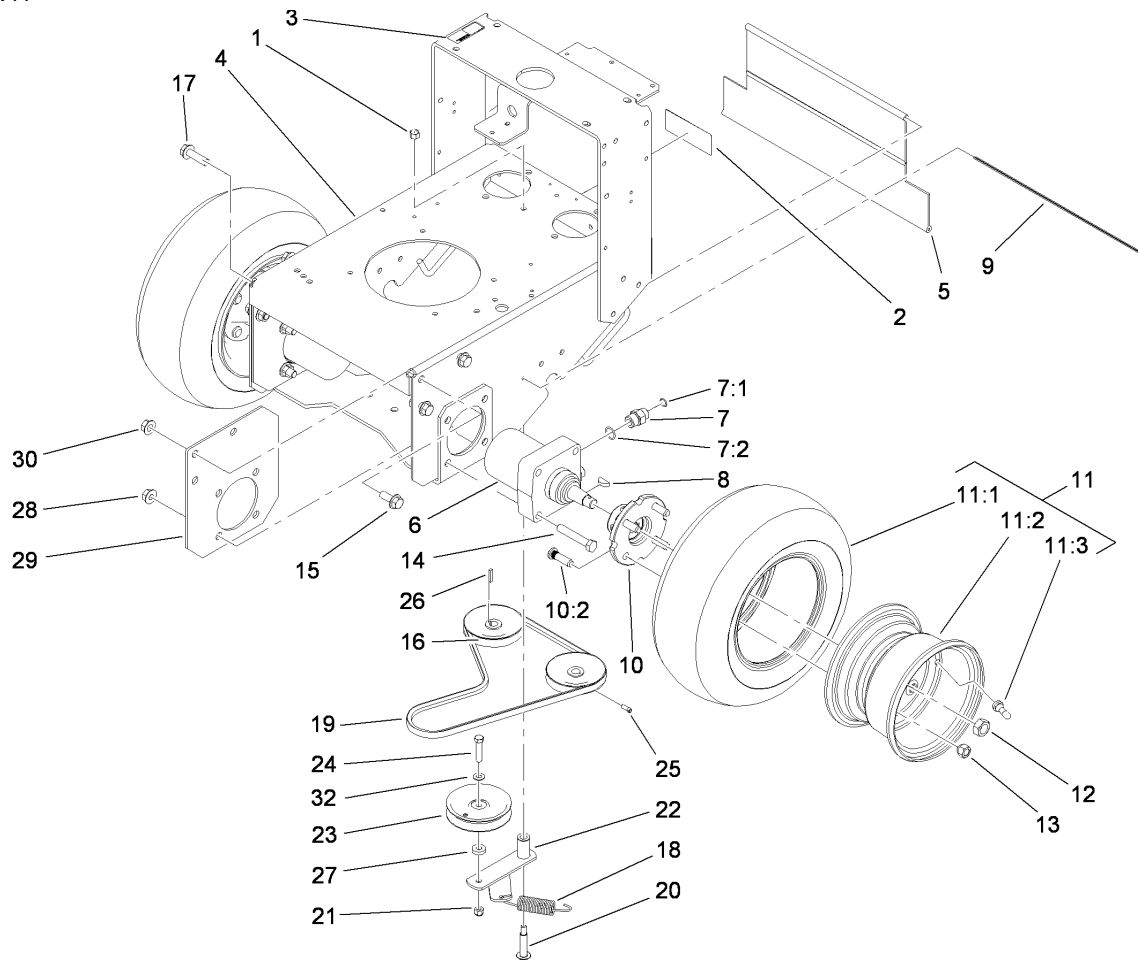

Pump Drive and Wheel Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	114-0243-01	1	Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-HYD, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub / Stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-12	8	Screw-HH
15	3234-32	4	Screw-HHF
16	105-5648	2	Pulley-Pump
17	3234-22	2	Screw-HHF
18	68-9950	1	Spring-Traction

Ref	Part No.	Qty.	Description
19	110-5049	1	Belt-V
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	93-1622	1	Pulley-Idler
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	1-807272	2	Key
27	9202204	1	Washer
28	32128-49	8	Nut-HHF
29	108-6657-01	2	Plate-Frame
30	32128-23	6	Nut-HF
32	3256-24	1	Washer-Flat

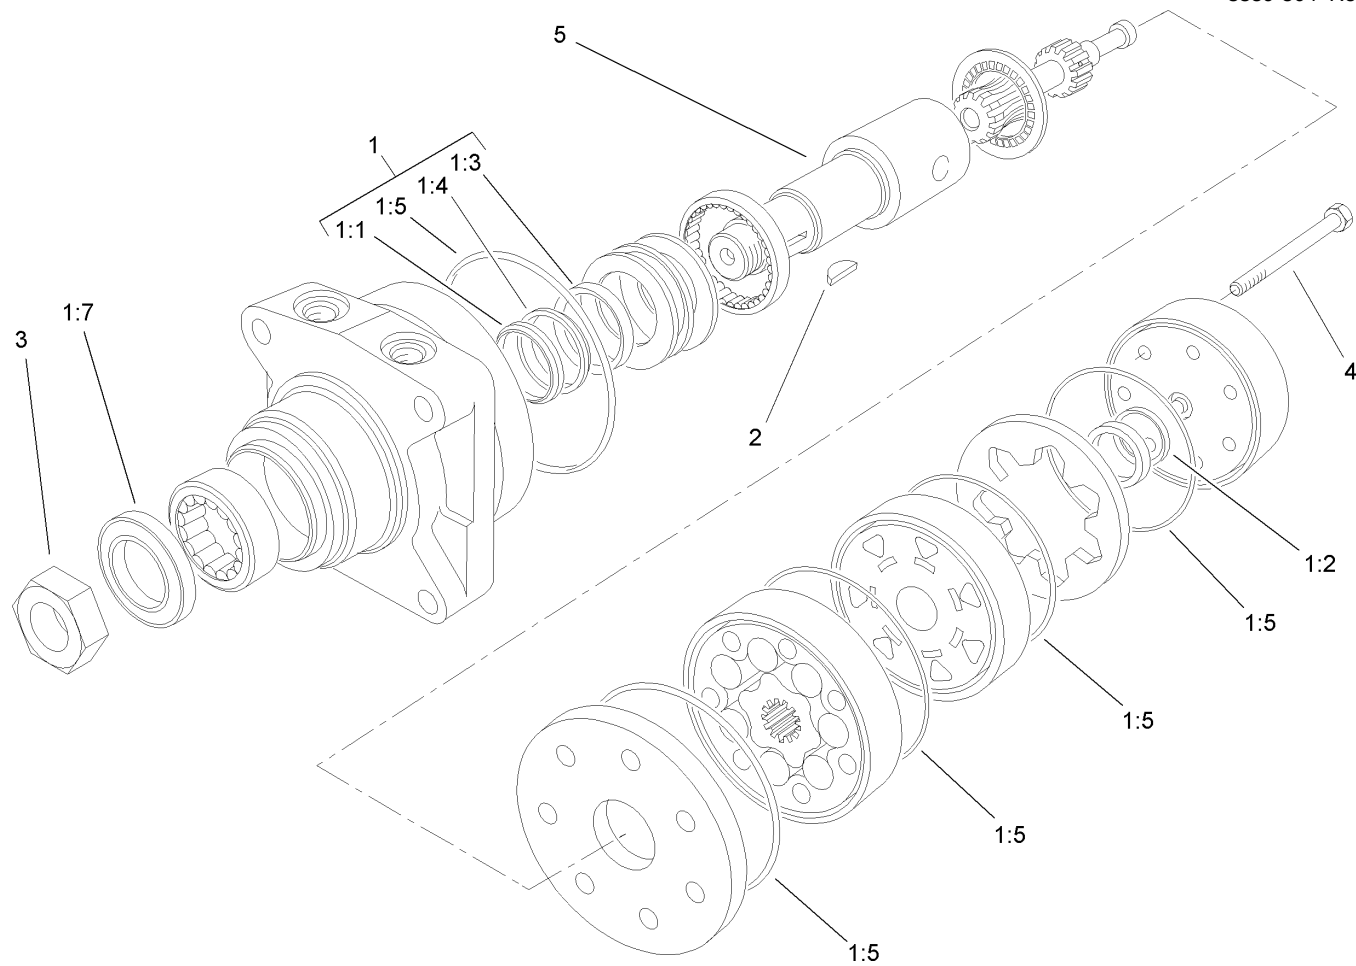


Hydraulic Wheel Motor Assembly No. 104-1171

Ref	Part No.	Qty.	Description				
1	1-000119	1	Seal Kit				
②1:1		1	Ring-Back Up				
②1:2		1	Seal-Commutator				
②1:3		1	Seal-Shaft (Viton)				
②1:4		1	Washer-Back Up, Steel				
②1:5		5	Ring-Seal (Viton)				
②1:7		1	Seal-Dirt And Water				
2	3257-8	1	Key-Woodruff				
3	85-7310	1	Nut-Motor, Wheel				
4	106-5549	6	Bolt-Special				
5	106-8764	1	Shaft-Coupling				

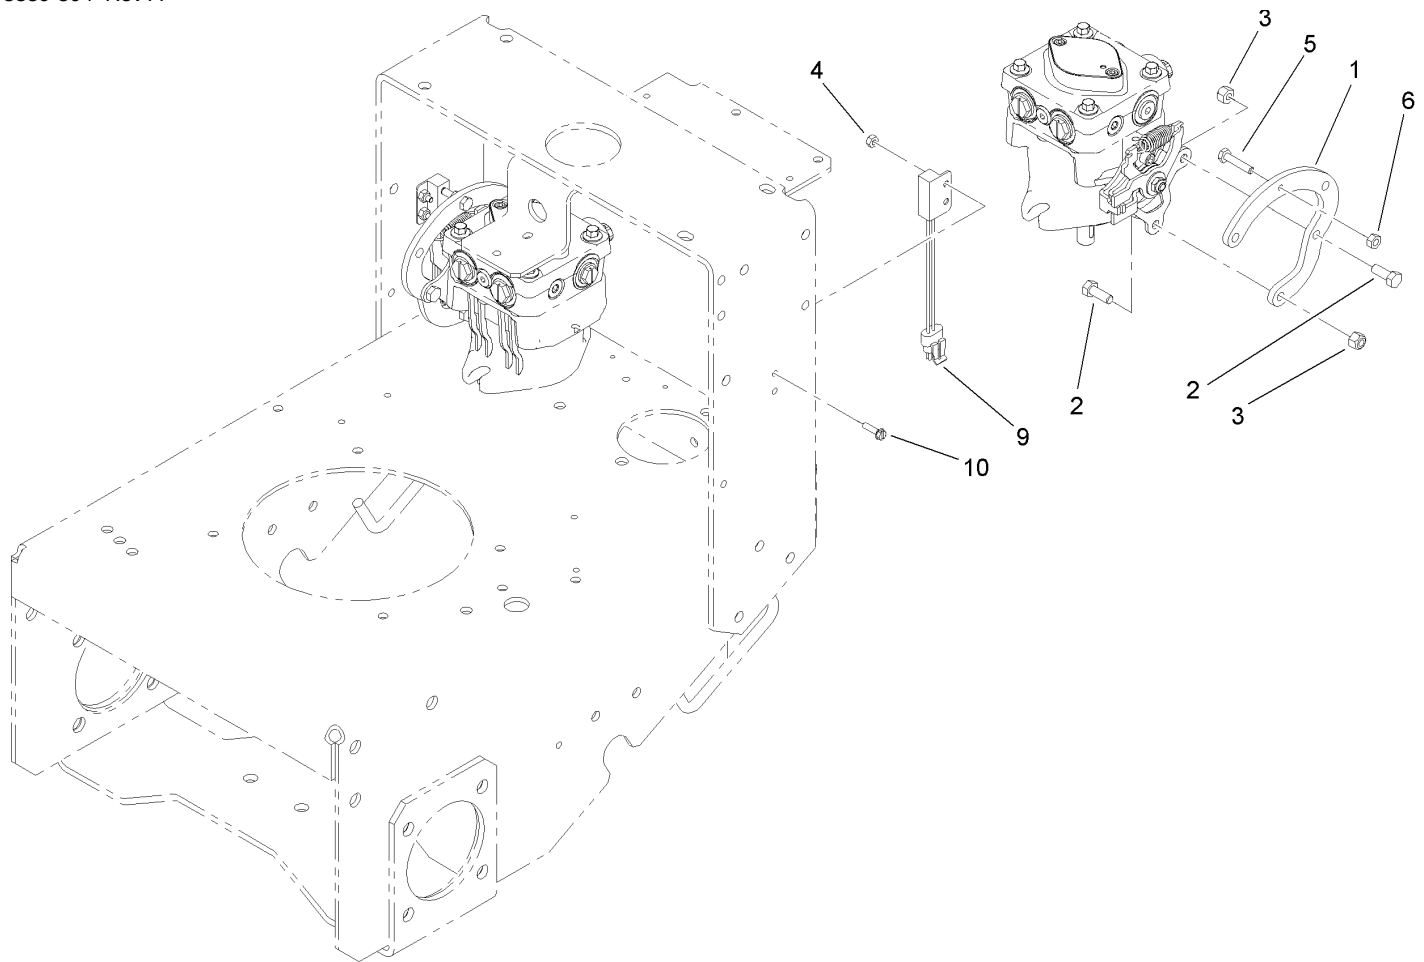


Lower Control Assembly

Ref	Part No.	Qty.	Description				
1	114-0227	2	Bracket-Adapter, Pump				
2	322-4	4	Screw-HH				
3	3296-29	4	Nut-Lock, NI				
4	3296-2	4	Nut-Lock				
5	114-0282	2	Screw-HH				
6	3217-5	2	Nut-Hex				
9	105-0023	2	Switch-Proximity				
10	32105-13	4	Screw-HWH				

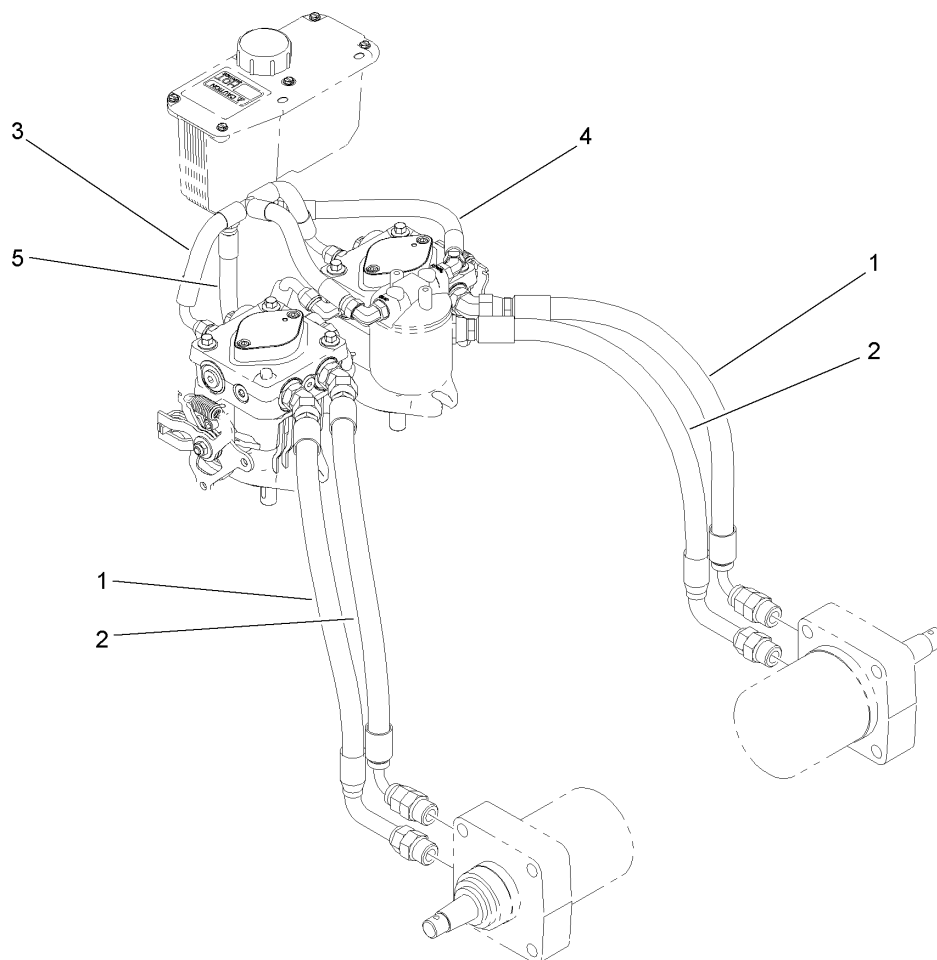


Hydraulic Hose Assembly

Ref	Part No.	Qty.	Description
1	112-9704	2	HYD Hose ASM
2	114-3430	2	HYD Hose ASM
3	105-5697	1	HYD Hose ASM
4	105-5699	1	HYD Hose ASM
5	114-3434	1	HYD Hose ASM

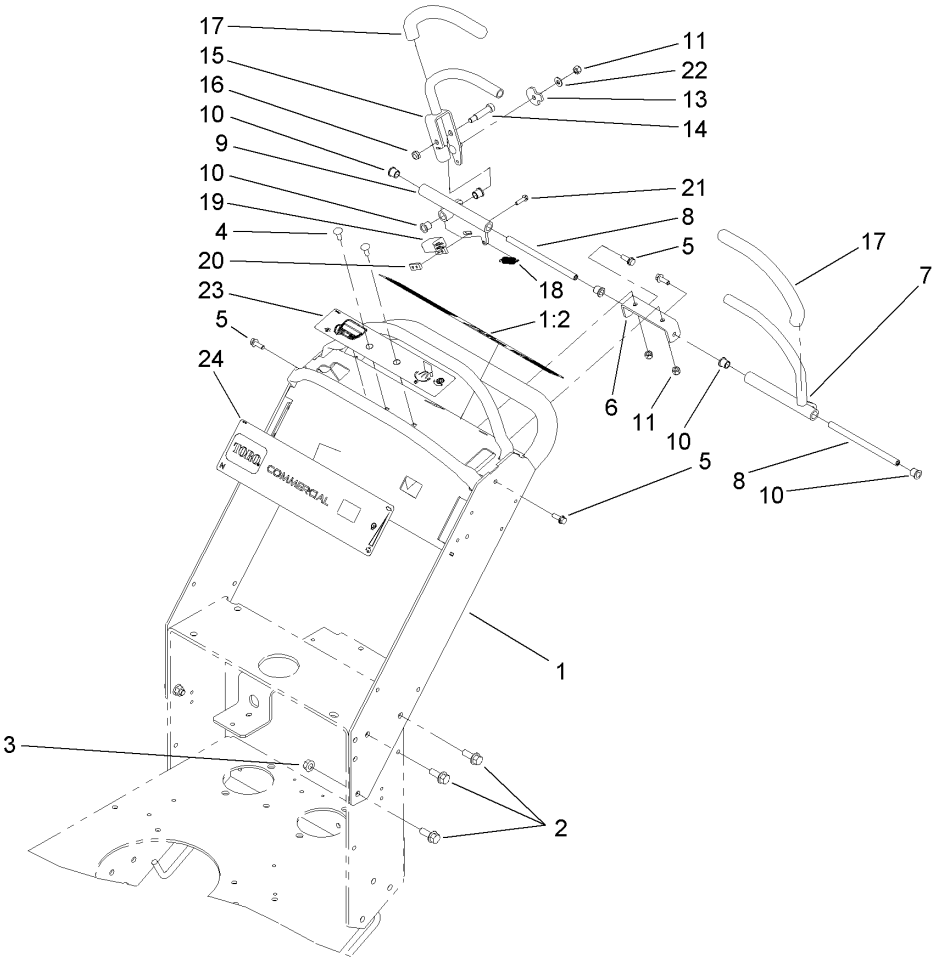


Upper Control Assembly

Ref	Part No.	Qty.	Description				
1	114-3435	1	Handle ASM				
1:2	114-3425	1	Decal-Warning, Control, Es				
2	3234-42	6	Screw-HHF				
3	32128-43	6	Nut-Flange				
4	3229-1	2	Screw-CARR				
5	3234-4	4	Screw-HHF				
6	114-0235	1	Bracket-Support				
7	114-0272	1	Control Lever ASM				
8	114-0260	2	Shaft-Pivot				
9	114-0234	1	Motion Control ASM				
10	103-9928	6	Bearing				
11	3296-42	3	Nut-Lock, NI				
13	114-0268	1	Cam-Lever, Handle Stop				
14	114-0239	1	Screw-HSH				
15	114-0238	1	Lever ASM				
16	3296-47	1	Nut-Lock, NI				
17	114-0241	2	Grip-Lever				
18	114-0249	1	Spring-Extension				
19	1-513152	1	Switch-Closed, Normally				
20	1-633181	1	Plate-Tapped				
21	32105-13	2	Screw-HWH				
22	3256-22	1	Washer-Flat				
23	114-3424	1	Decal-Control				
24	114-3423	1	Decal-Panel, Control				

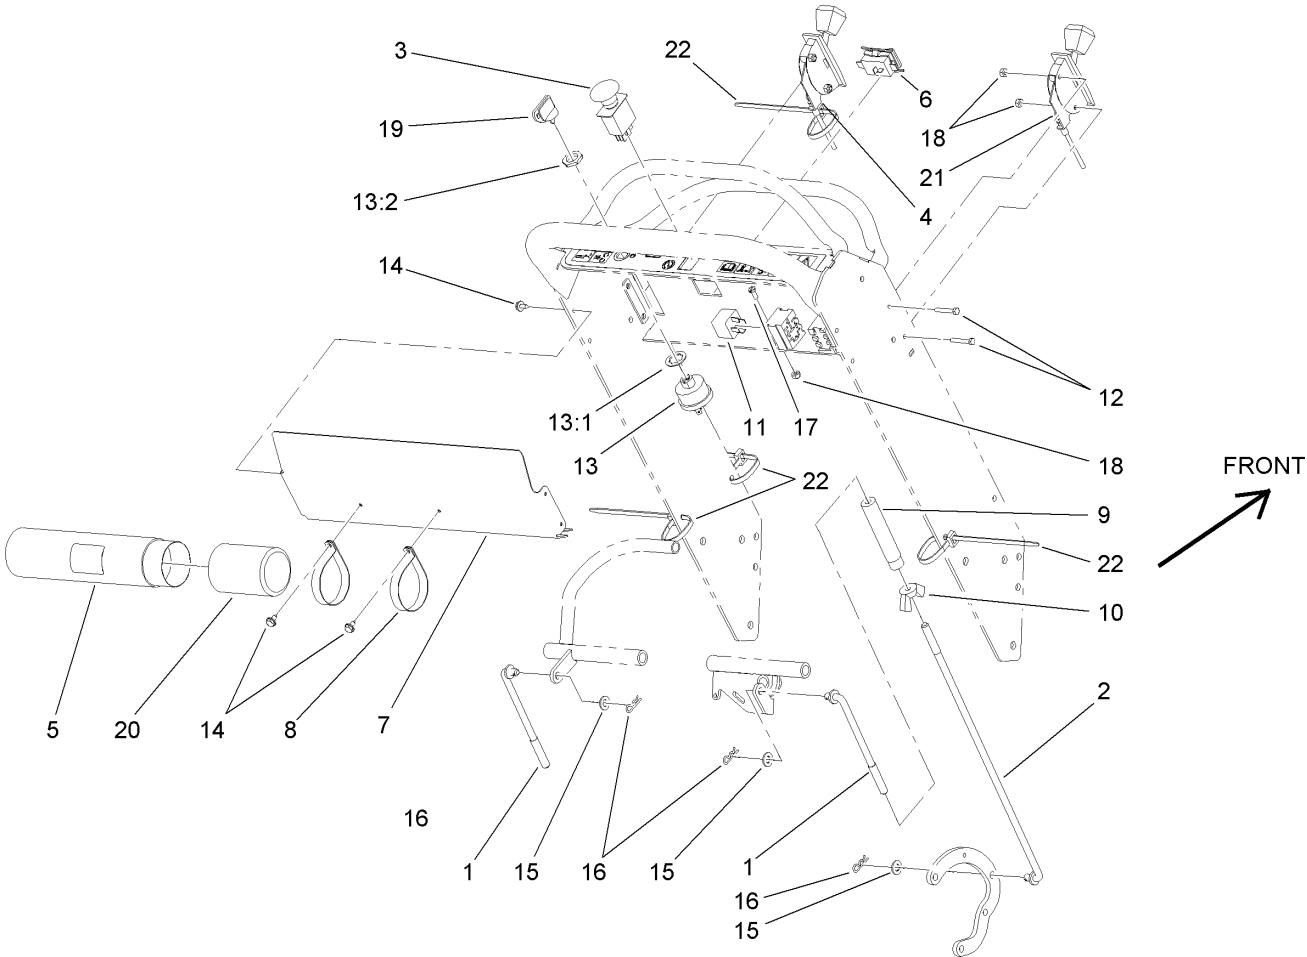


Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	114-0275	2	Rod-Control, Upper				
2	114-0276	2	Rod-Control, Lower				
3	114-0279	1	Switch-PTO				
4	110-4994	1	Cable-Throttle				
5	104-7050	1	Housing-Manual				
6	104-8143	1	Hourmeter				
7	114-0270-03	1	Cover-Panel, Control				
8	2412-120	2	R-Clamp				
9	95-1504	2	Turnbuckle				
10	32103-3	2	Nut-Wing				
11	98-7249	2	Relay				
12	3290-360	4	Screw-HH				
13	88-9830	1	Key Switch ASM				
13:1	3254-5	1	Washer-Tooth				
13:2	218-461	1	Nut-HH				
14	32104-76	6	Screw				
15	3256-23	4	Washer-Flat				
16	3290-307	4	Pin-Hair				
17	32105-8	2	Screw-SHH				
18	3296-2	6	Nut-Lock				
19	63-8360	1	Key-Ignition				
20	104-7048	1	Cap-Housing				
21	110-4995	1	Cable-Choke				
22	3290-378	4	Tie-Cable				

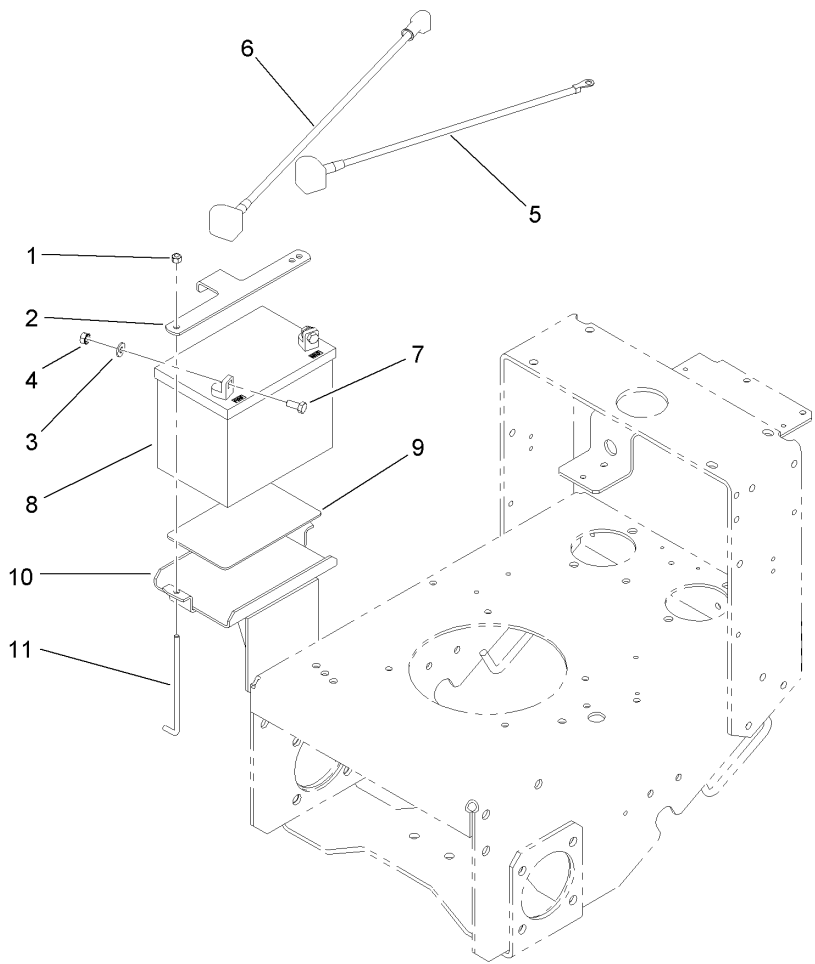

Battery Assembly


Ref	Part No.	Qty.	Description				
1	3296-42	2	Nut-Lock, NI				
2	104-8568-03	1	Plate-Hold Down, Battery				
3	3256-2	2	Washer-Flat				
4	32149-1	2	Nut-Keps				
5	112-9709	1	Cable-Battery, Black				
6	112-9708	1	Cable-Battery, Red				
7	322-3	2	Screw-HH				
8	104-8162	1	Battery				
9	62-4300	1	Pad-Skid, Anti				
10	105-3150-01	1	Battery Tray ASM				
11	104-8567	2	Holddown-Battery				

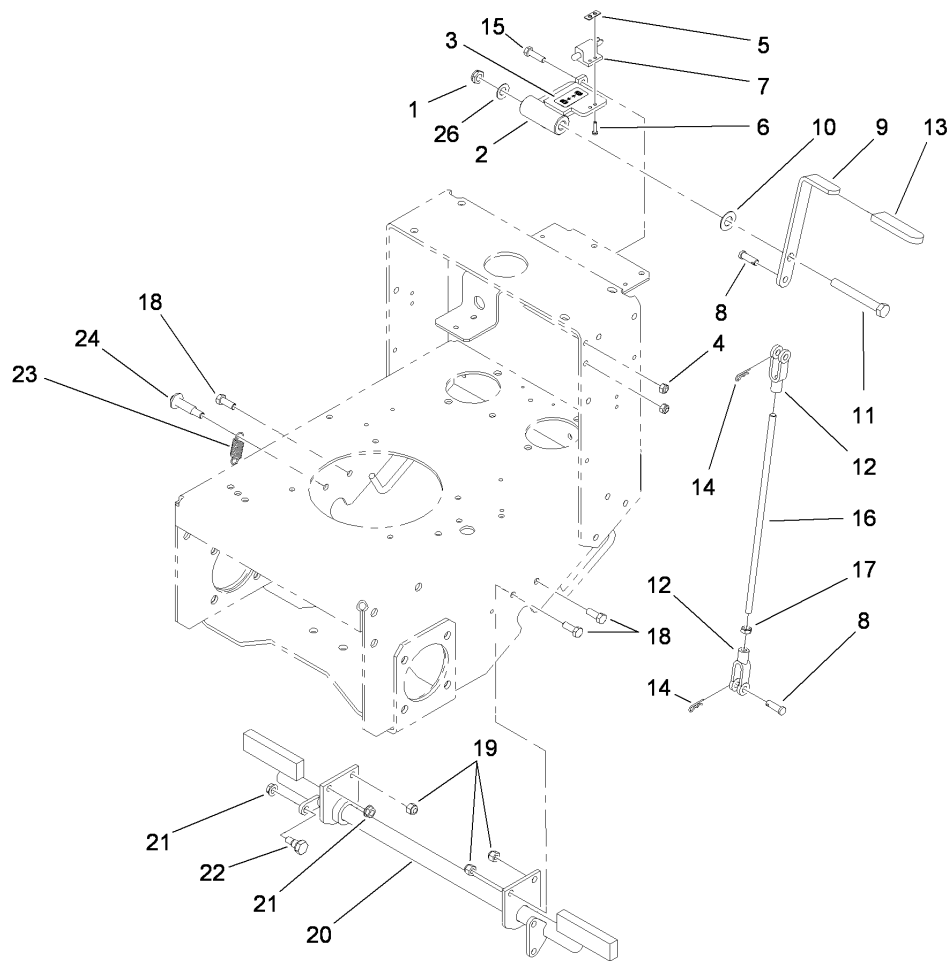

Parking Brake Assembly


Ref	Part No.	Qty.	Description
1	3296-45	1	Nut-Lock, NI
2	112-8716-01	1	Support-Handle
3	112-8720	1	Decal-Brake
4	3296-29	2	Nut-Lock, NI
5	1-633181	1	Plate-Tapped
6	32105-13	2	Screw-HWH
7	1-513152	1	Switch-Closed, Normally
8	1-808285	2	Pin-Clevis
9	106-0671-01	1	Handle-Brake
10	257-7	1	Bearing-Thrust
11	325-17	1	Screw-HH
12	1-633131	2	Yoke-Linkage, Brake
13	1-303020	1	Grip-Lever
14	3290-307	2	Pin-Hair
15	322-6	2	Screw-HH
16	108-2747	1	Rod-Brake
17	3220-3	1	Nut-HJ
18	323-6	3	Screw-HH
19	3296-39	3	Nut-Lock, NI
20	110-4976-01	1	Parking Brake ASM
21	3290-357	2	Nut-HHF, Whiz
22	27-5240	1	Bolt-Shoulder
23	613386	1	Spring-Brake
24	56-6590	1	Bolt-Wheel

Ref	Part No.	Qty.	Description
26	112-9972	1	Washer-Conical, Spring

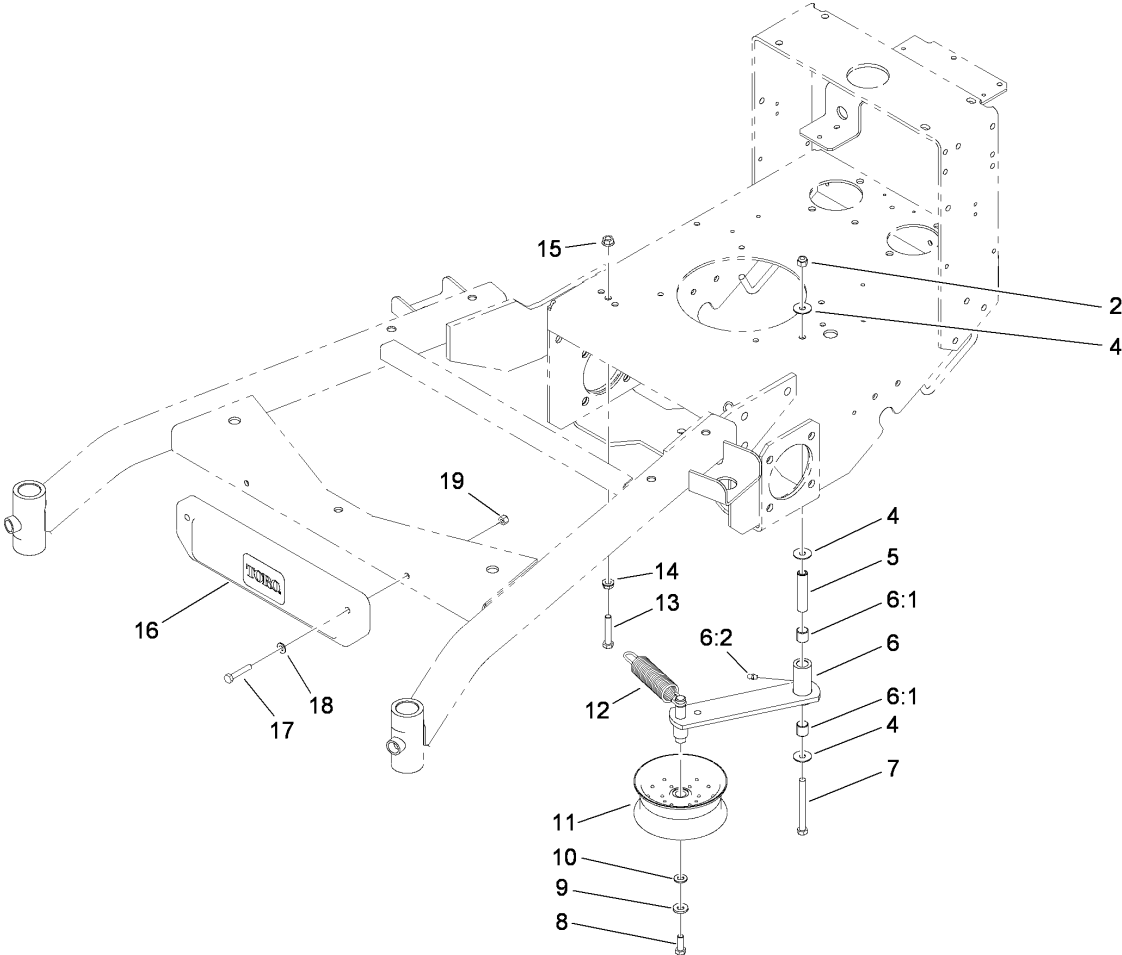


Power-Take-Off Idler Assembly

Ref	Part No.	Qty.	Description				
2	3296-39	1	Nut-Lock, NI				
4	52-2860	3	Washer				
5	104-6377	1	Tube-Idler				
6	112-7055	1	Idler Arm ASM				
6:1	1-513034	2	Sleeve-Bearing				
6:2	302-5	1	Fitting-Grease				
7	323-42	1	Screw-HH				
8	323-6	1	Screw-HH				
9	98-5975	1	Washer-Belleville				
10	3256-24	1	Washer-Flat				
11	1-413099	1	Pulley-Idler				
12	105-8443	1	Spring-Extension				
13	323-10	1	Screw-HH				
14	3290-357	1	Nut-HHF, Whiz				
15	32128-21	1	Nut-HF				
16	112-7059-01	1	Weight-Cast				
17	322-9	2	Screw-HH				
18	3256-23	2	Washer-Flat				
19	3296-26	2	Nut-Lock, NI				

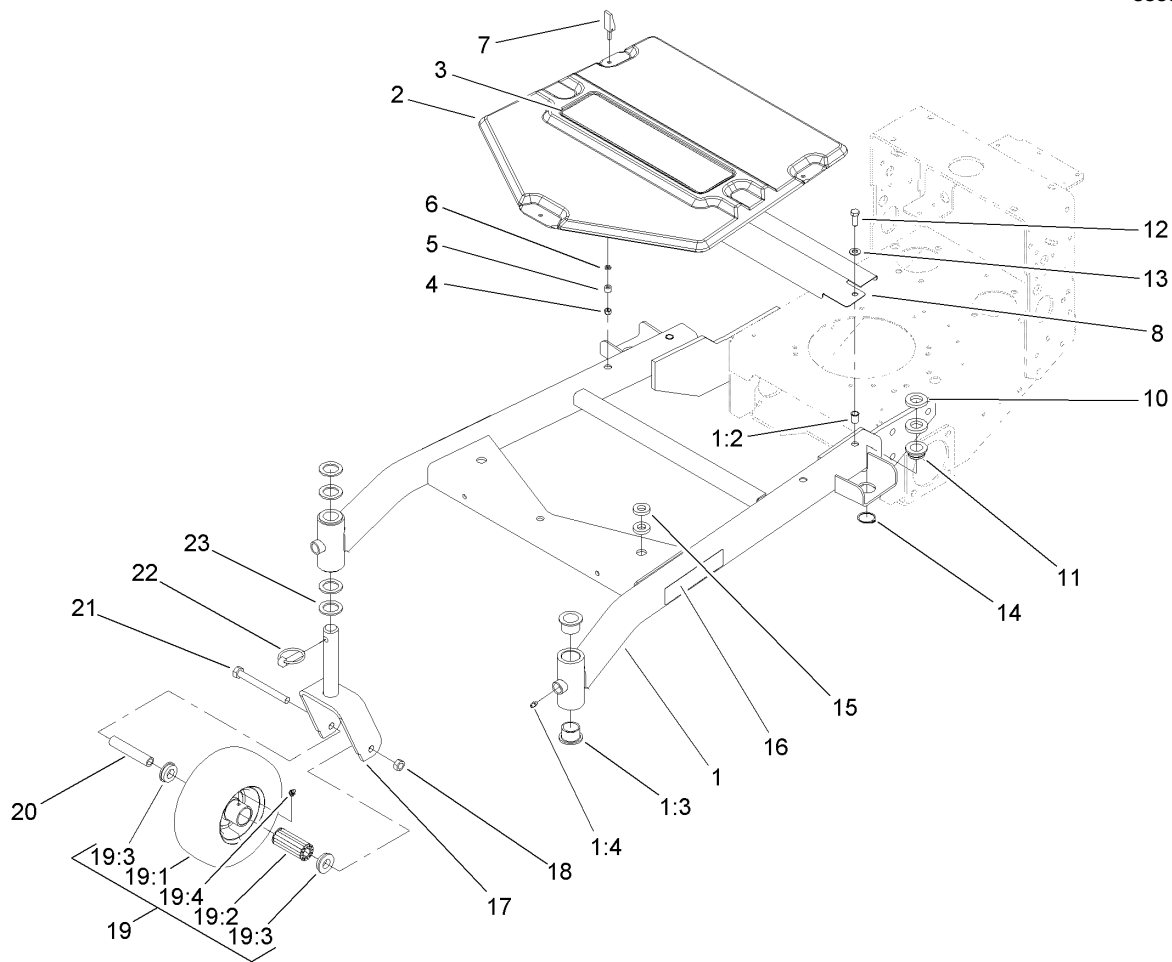


Carrier Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-6960	1	Carrier Frame ASM	19:4	302-61	1	Zerk
1:2	32148-9	2	Insert-Nut	20	100-6453	2	Bushing-Spanner
1:3	94-1291	4	Bushing	21	325-19	2	Screw-HH
1:4	302-5	2	Fitting-Grease	22	283-71	2	Pin-Lynch
2	110-6970	1	Cover-Frame, Carrier	23	3-6781	8	Washer-Thrust
3	112-9710	1	Decal				
4	1-804254	3	Nut				
5	106-6778	3	Bushing-Latch, Swell				
6	99-3058	3	Washer				
7	106-6777	3	Handle-Latch, Swell				
8	110-6971-01	1	Shield-Belt				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	323-6	2	Screw-HH				
13	3256-24	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	1-323539	4	Spacer				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	110-5024	2	Wheel And Tire ASM				
19:1	112-7065	1	Tire				
19:2	112-7066	1	Bearing-Roller				
19:3	1-513810	2	Bushing				

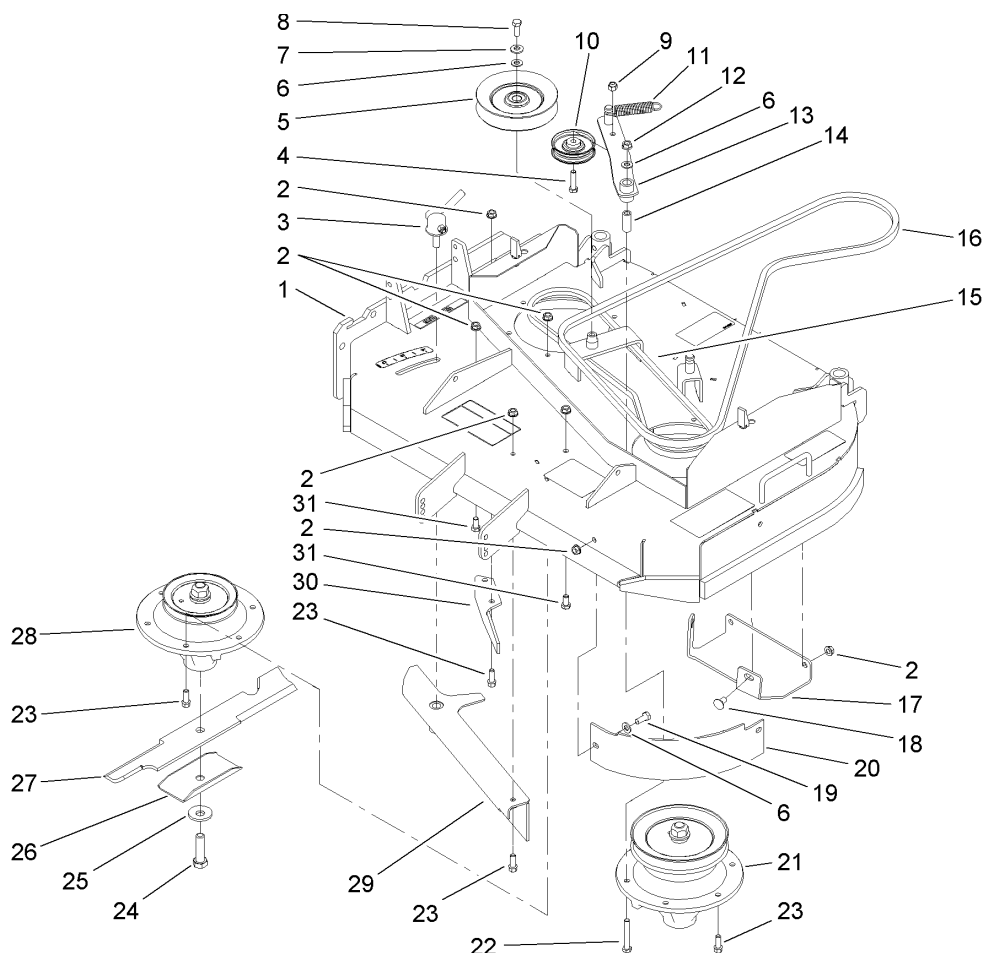

Deck Drive and Baffle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-7080	1	Deck ASM	25	103-0865	2	Washer-Blade Bolt, Heavy
2	3290-357	22	Nut-HHF, Whiz	26	108-2727	2	Stiffener-Blade
3	107-1664	1	Lever ASM	27	105-7781-03	2	Blade-18 Inch (Hi Flow)
4	323-8	1	Screw-HH	28	110-0728	1	Spindle ASM
5	1-633166	1	Pulley-Idler	29	110-6955-03	1	Adjust Baffle ASM
6	3256-24	4	Washer-Flat	30	110-0754-01	1	Baffle-Discharge
7	98-5975	1	Washer-Belleville	31	323-4	2	Screw-HH
8	323-6	1	Screw-HH				
9	3296-39	1	Nut-Lock, NI				
10	51-3660	1	Pulley-Idler				
11	105-2673	1	Spring-Extension				
12	32128-21	1	Nut-HF				
13	105-0889	1	Idler Arm ASM				
14	51-3641	1	Sleeve-Pivot, Idler				
15	110-6953	1	Belt-V				
16	110-6954	1	Belt-V				
17	110-2037-01	1	Plate-Skid				
18	3231-1	4	Screw-CARR				
19	323-5	2	Screw-HH				
20	110-6903-03	1	Baffle-Front, LH				
21	110-0730	1	Spindle ASM				
22	323-12	1	Screw-HH				
23	92-1624	14	Screw				
24	51-4060	2	Screw-Blade				

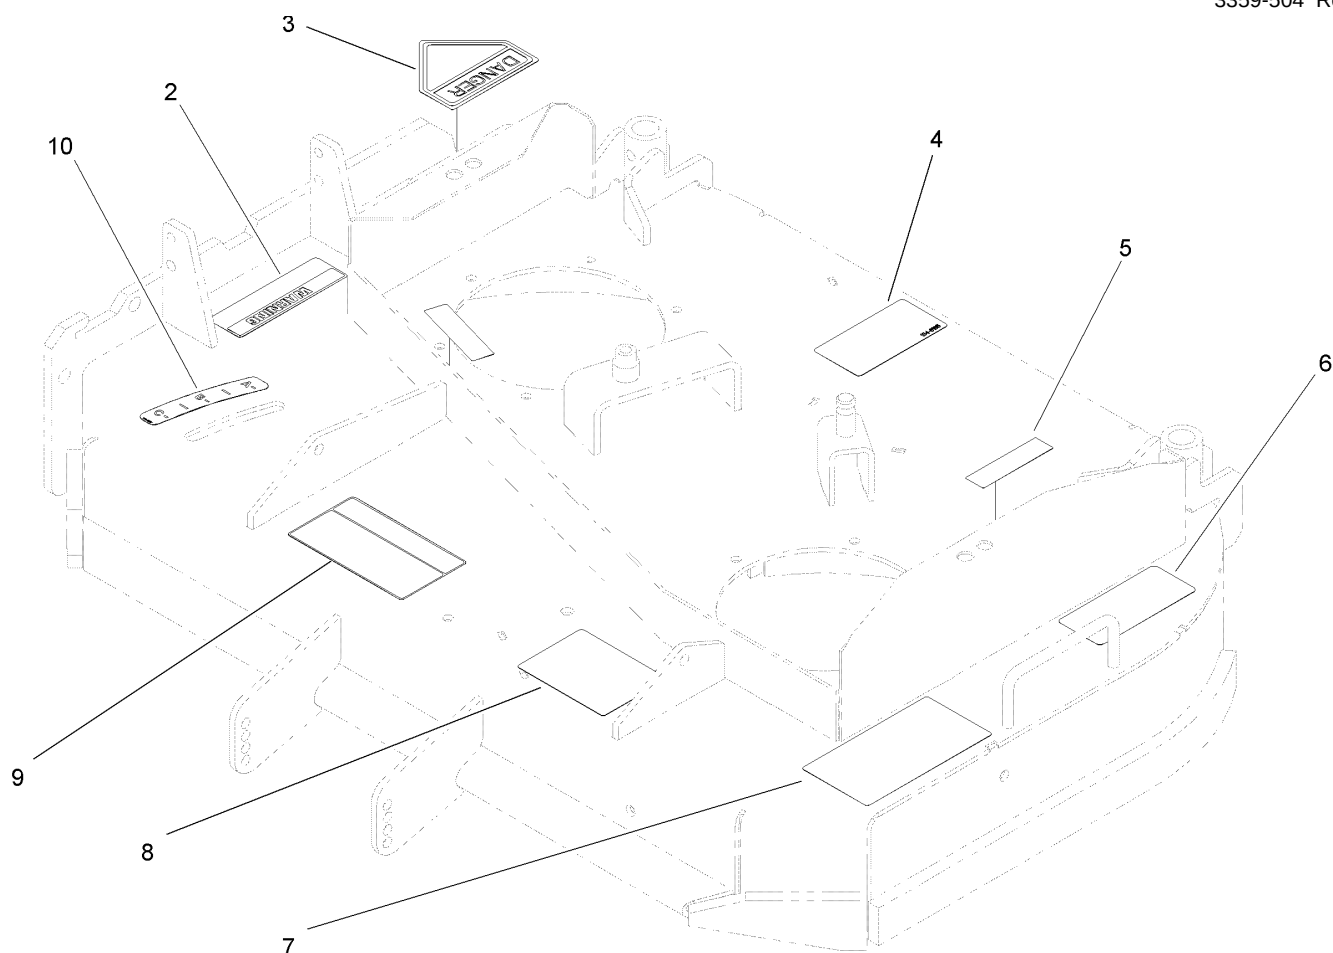


Deck Assembly No. 112-7080

Ref	Part No.	Qty.	Description
2	104-8569	1	Decal-Warning
3	43-8480	1	Decal-Danger
4	104-8185	1	Decal
5	98-5954	2	Decal-Cover, Missing
6	68-8340	1	Decal-Torque
7	66-1340	1	Decal-Danger
8	105-7798	1	Decal-Scalp, Anti
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

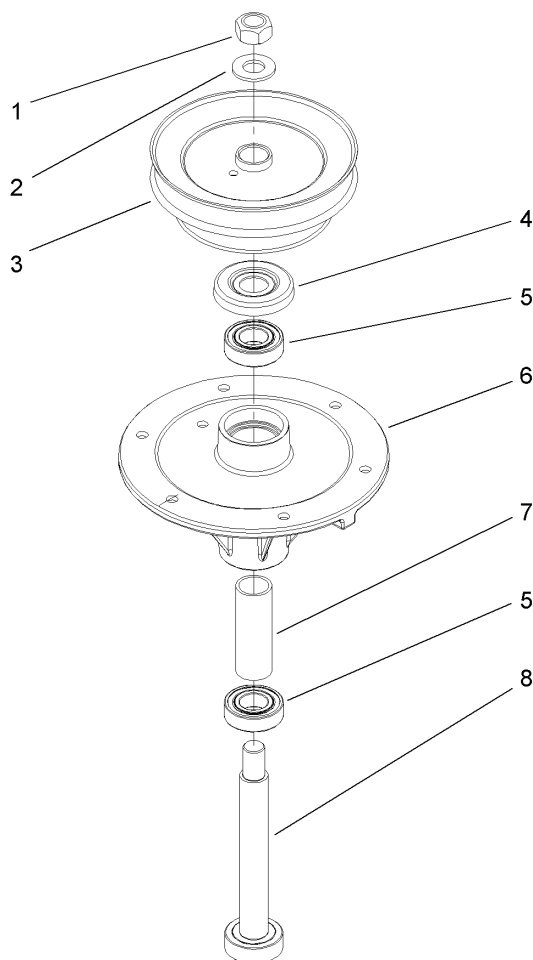


Spindle Assembly No. 110-0730

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	108-6627	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0725	1	Shaft-Spindle

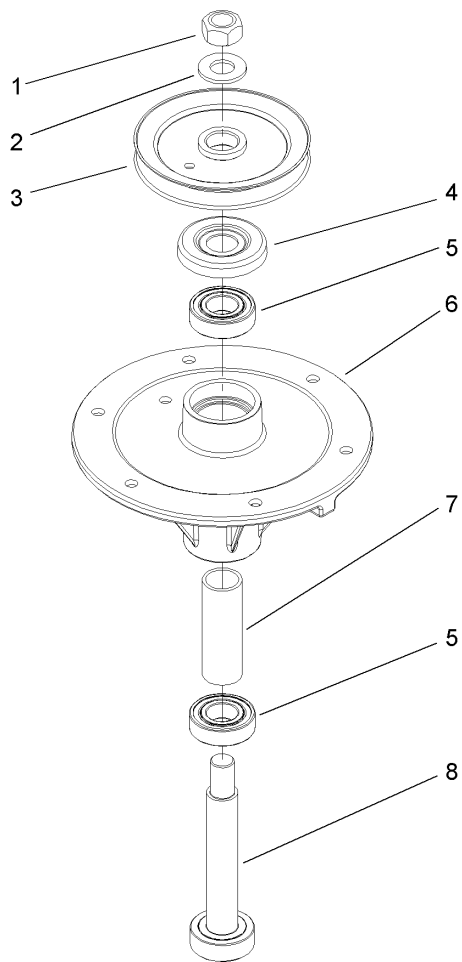


Spindle Assembly No. 110-0728

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1181	1	Pulley ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	108-6696	1	Housing-Spindle				
7	110-0727	1	Spacer-Bearing				
8	110-0726	1	Shaft-Spindle				

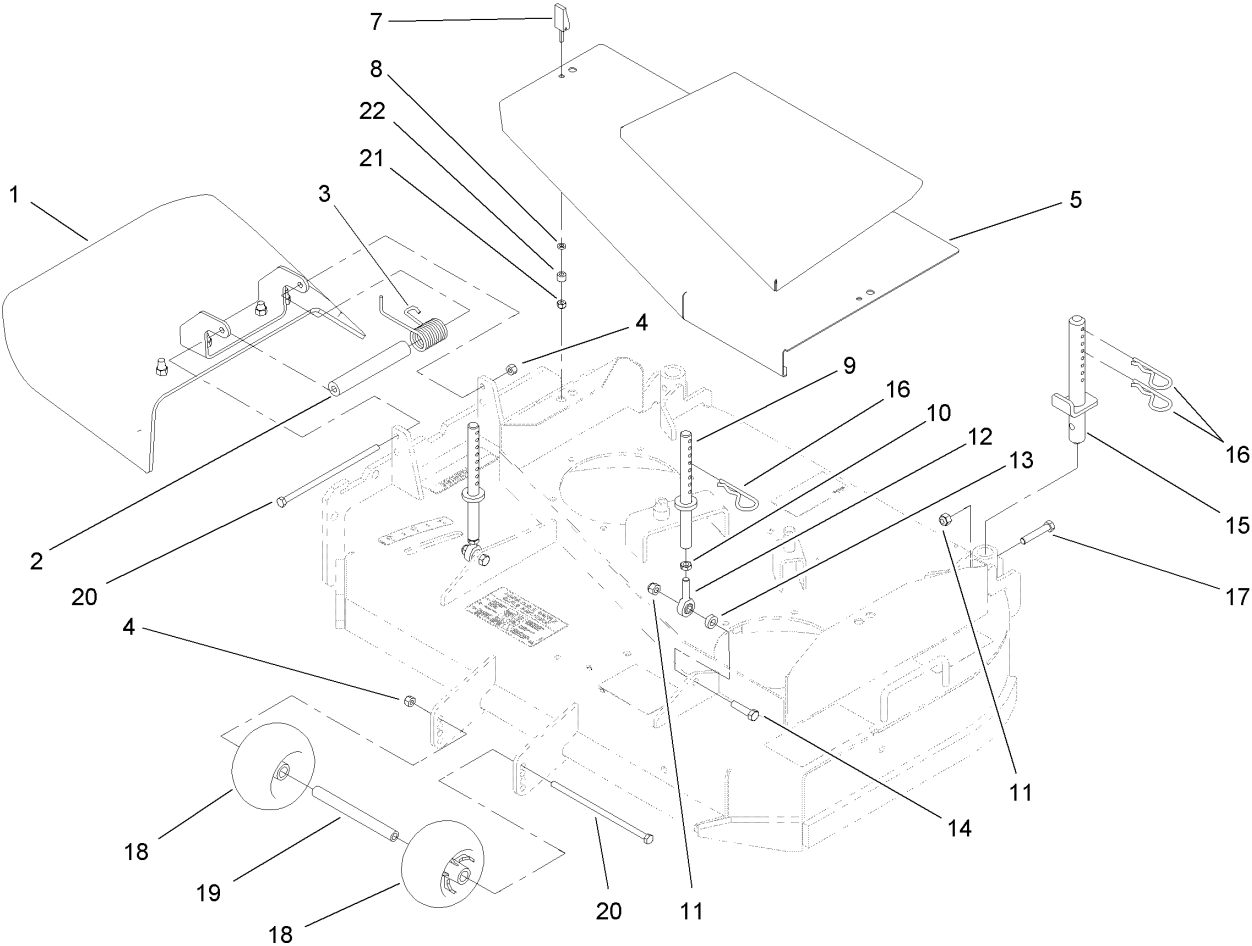


Outer Deck Assembly

Ref	Part No.	Qty.	Description				
1	110-0790	1	Deflector ASM				
2	105-4622	1	Spacer				
3	104-8554	1	Spring-Torsion				
4	3296-29	2	Nut-Lock, NI				
5	110-6964-01	1	Cover ASM				
7	106-6777	2	Handle-Latch, Swell				
8	99-3058	2	Washer				
9	108-2674	2	Front Pin ASM				
10	3220-3	2	Nut-HJ				
11	3296-39	4	Nut-Lock, NI				
12	1-613204	2	Balljoint				
13	104-1156	2	Spacer				
14	323-8	2	Screw-HH				
15	110-2086	2	Rear Pin ASM				
16	3290-256	6	Pin-Hair				
17	323-10	2	Screw-HH				
18	1-603299	2	Roller-Scalp, Anti				
19	98-5967	1	Spacer-Wheel				
20	322-50	2	Screw-HH				
21	1-804254	2	Nut				
22	106-6778	2	Bushing-Latch, Swell				

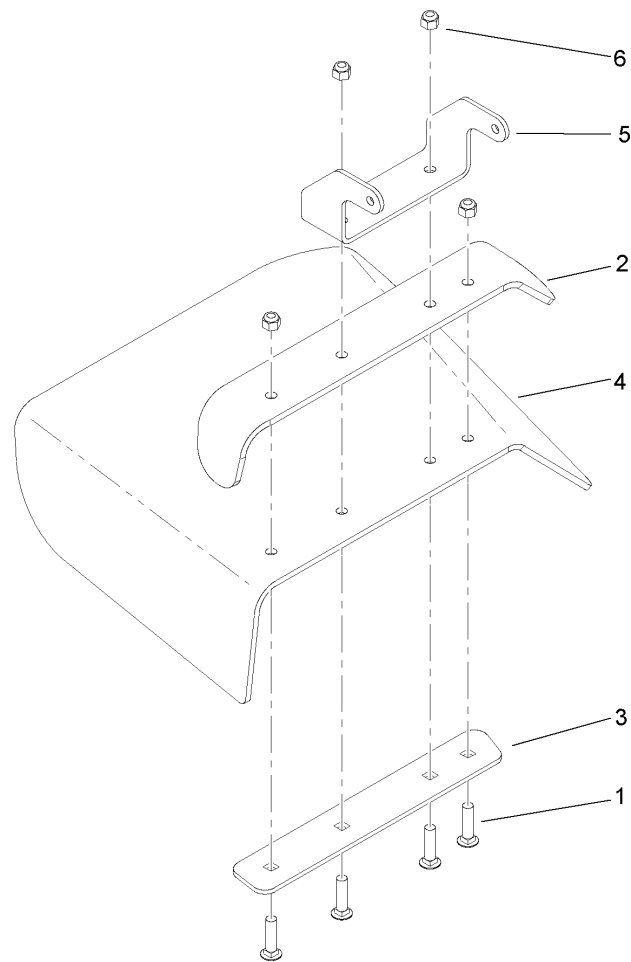

Deflector Assembly No. 110-0790


Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	110-0792-01	1	Deflector				
3	110-0793-03	1	Strap-Discharge				
4	110-0791	1	Deflector-Rubber				
5	107-4164-01	1	Bracket-Mounting, Deflector				
6	3296-39	4	Nut-Lock, NI				

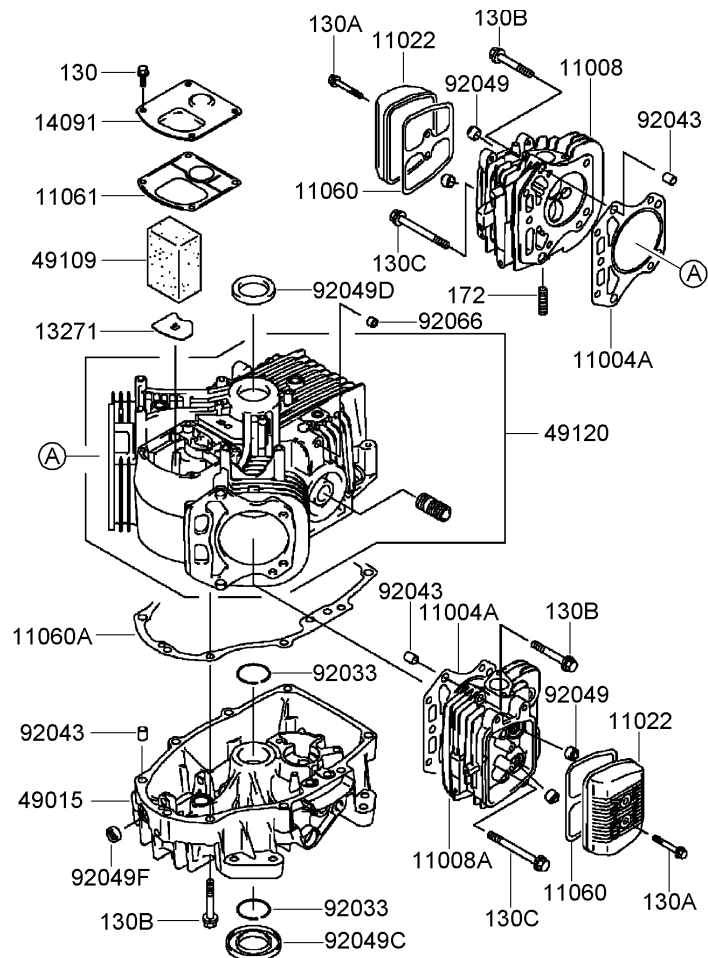

Cylinder and Crankcase Assembly


Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description				
❶11004A	11004-7016	2	Gasket-Head				
❶11008	11008-6043	1	Head-Cylinder, No. 1				
❶11008A	11008-7020	1	Head-Cylinder, No. 2				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6253	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-7023	1	Crankcase				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
❶92049C	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
❶92049D	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
❶92049F	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
❶92066	92066-7002	1	Plug				
❶130	130B0612	4	Bolt-Flanged (6X12)				
❶130A	130B0640	4	Bolt-Flanged (6X40)				
❶130B	130T0850	17	Bolt-Flanged (8X50)				
❶130C	130T0875	2	Bolt-Flanged (8X75)				
❶172	172G0818	4	Bolt-Stud (8X18)				

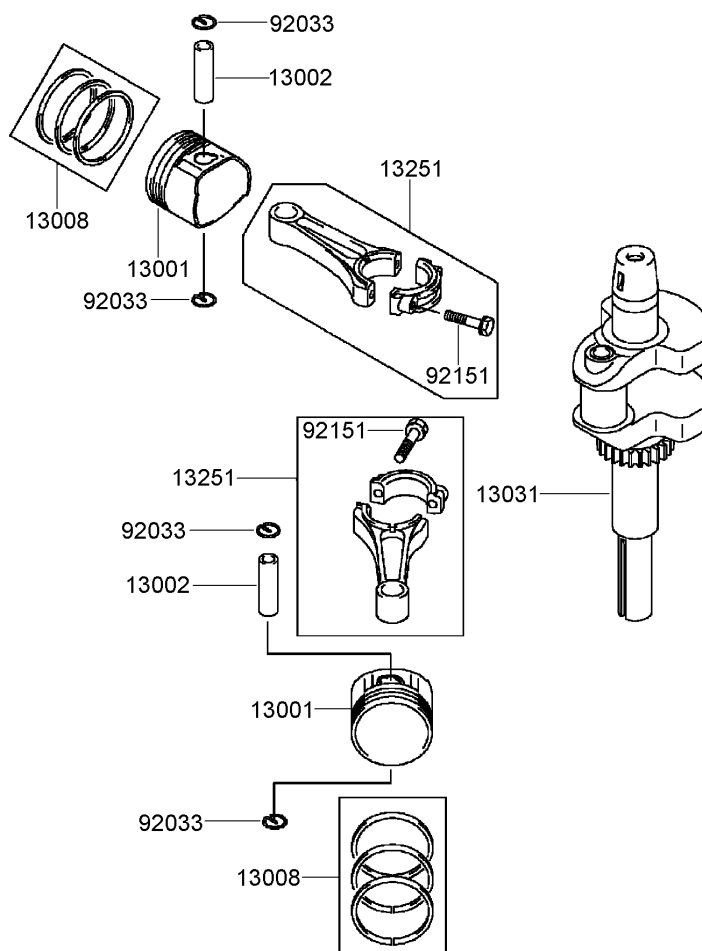


Piston and Crankshaft Assembly Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description				
③13001	13001-7010	2	Piston-Engine				
③13002	13002-7001	2	Pin-Piston				
③13008	13008-6060	2	Ring Set-Piston				
③13031	13031-7036	1	Crankshaft				
③13251	13251-7010	2	Connecting Rod ASM				
③92033	92033-7005	4	Ring-Snap				
③92151	92151-7017	4	Bolt (6X35)				

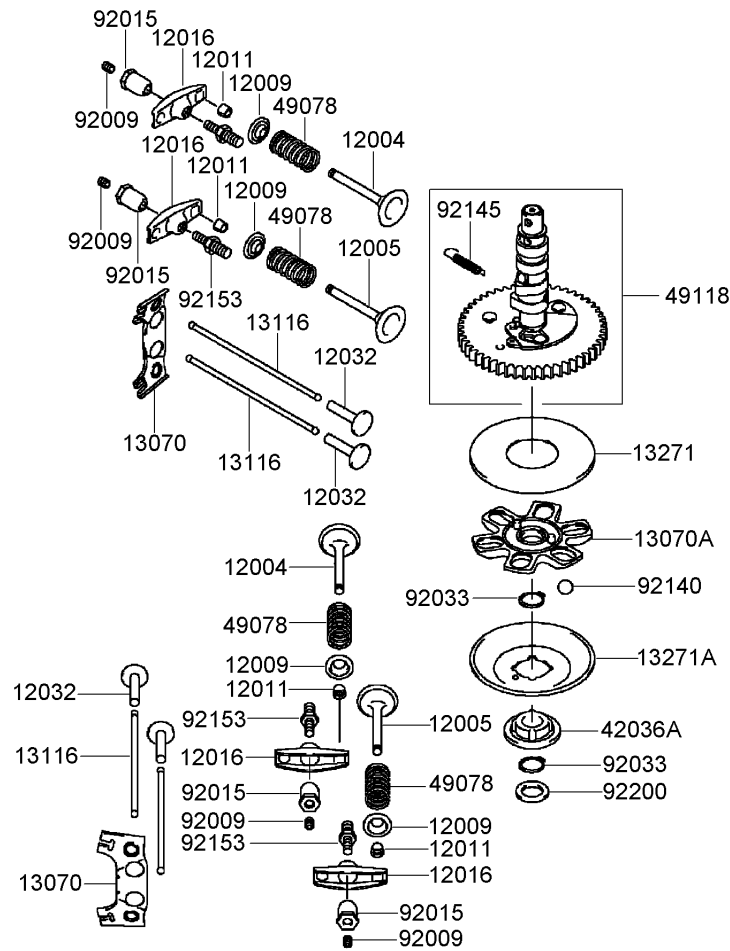


Valve and Camshaft Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description				
❶12004	12004-7003	2	Valve-Intake				
❶12005	12005-7003	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7001	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036A	42036-7010	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7004	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

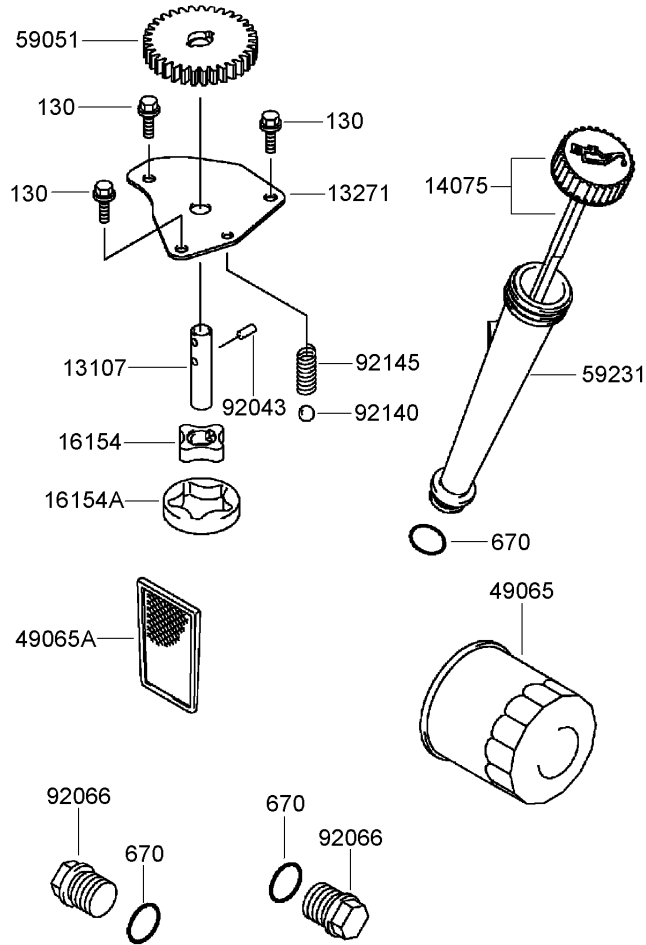

Lubrication Equipment Assembly
Kawasaki FH541V-BS24


Ref	Part No.	Qty.	Description				
❶13107	13107-7009	1	Shaft				
❶13271	13271-7017	1	Plate				
❶14075	14075-7009	1	Cap ASM				
❶16154	16154-2053	1	Rotor-Pump (In)				
❶16154A	16154-2054	1	Rotor-Pump (Out)				
❶49065	49065-2078	1	Filter-Oil				
❶49065A	49065-7004	1	Filter-Oil				
❶59051	59051-7011	1	Gear-Spur				
❶59231	59231-7005	1	Filler				
❶92043	92043-7003	2	Pin				
❶92066	92066-7003	2	Plug				
❶92140	92140-7003	1	Ball				
❶92145	92145-7002	1	Spring				
❶130	130B0612	3	Bolt-Flanged (6X12)				
❶670	670D2016	3	O-Ring (16Mm)				

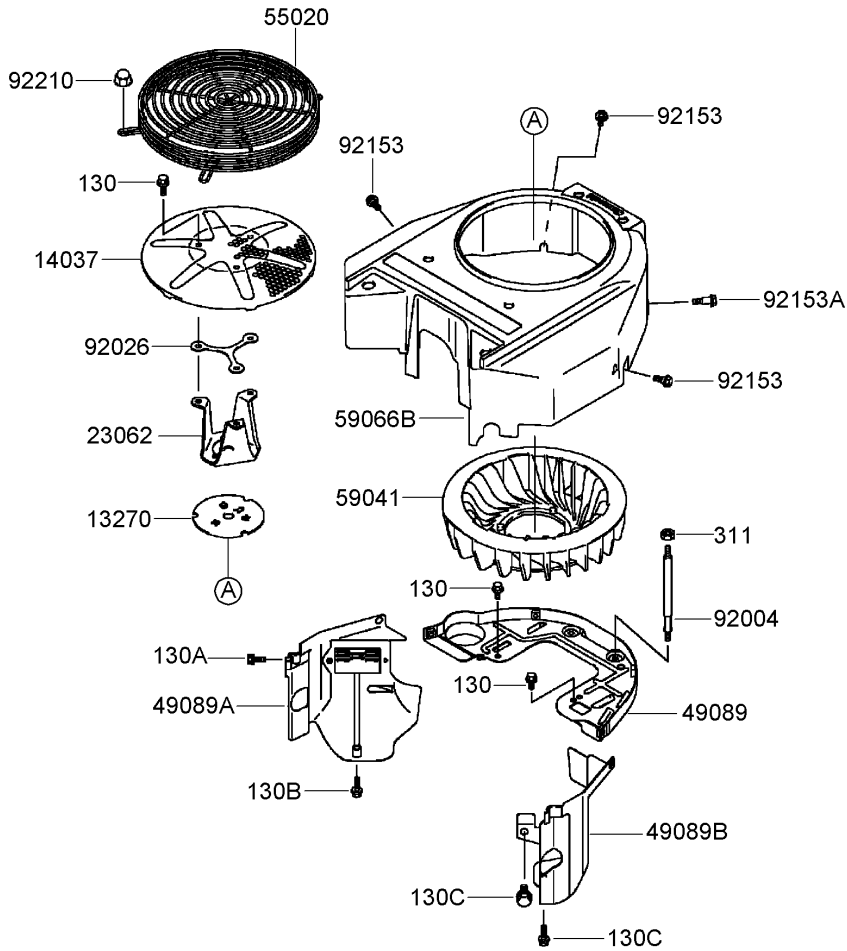

Cooling Equipment Assembly
Kawasaki FH541V-BS24


Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7020-9H	1	Screen				
❸23062	23062-7010	1	Bracket				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸55020	55020-7004	1	Guard				
❸59041	59041-7010	1	Fan				
❸59066B	59066-7037	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92026	92026-7007	1	Spacer				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸92210	92210-0003	4	Nut				
❸130	130B0612	5	Bolt-Flanged (6X12)				
❸130A	130B0616	2	Bolt-Flanged (6X16)				
❸130B	130B0625	2	Bolt-Flanged (6X25)				
❸130C	130B0816	1	Bolt-Flanged (8X16)				
❸311	311B0600	2	Nut-Hex (6Mm)				

29

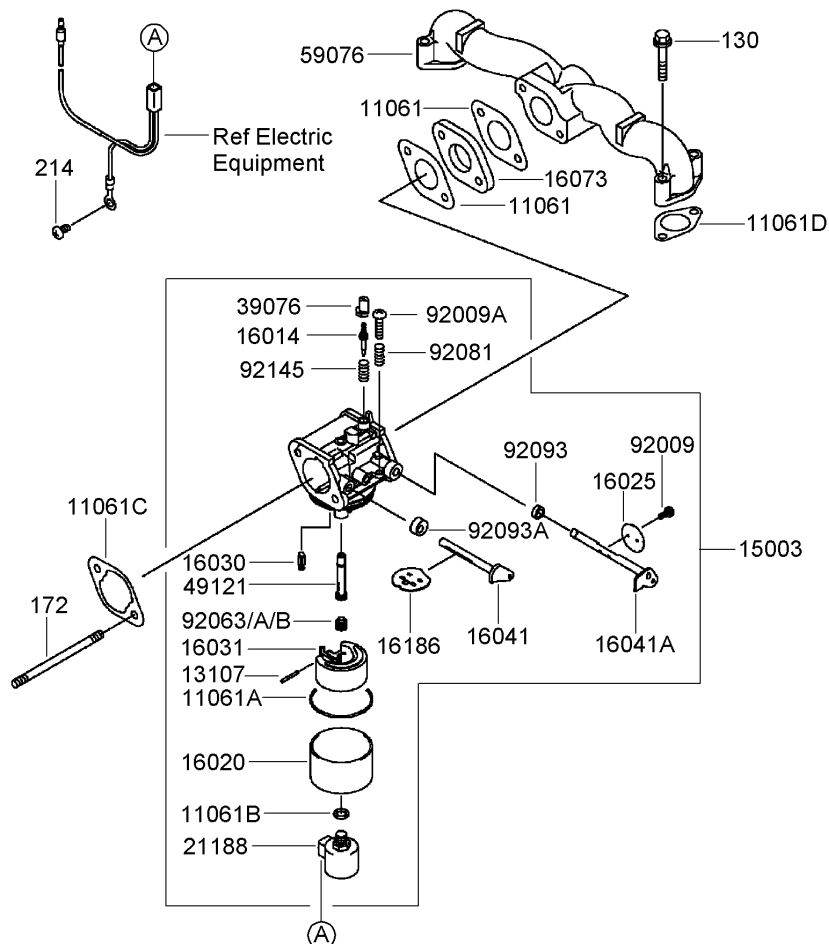


Carburetor Assembly Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
11061	11061-7004	2	Gasket-Insulator	92063B	92063-7066	1	Jet-Main, No. 108
11061A	11061-7009	1	Gasket-Chamber	92081	92081-2234	1	Spring
11061B	11061-7010	1	Gasket-Screw	92093	92093-2100	1	Seal
11061C	11061-7018	1	Gasket-Cleaner, Air	92093A	92093-7003	1	Seal
11061D	11061-7019	2	Gasket	92145	92145-7015	1	Spring
13107	13107-7018	1	Shaft	130	130B0635	4	Bolt-Flanged (6X35)
15003	15003-7106	1	Carburetor ASM	172	172G0690	2	Bolt-Stud (6X90)
16014	16014-7007	1	Screw-Air, Pilot	214	214B0510	1	Screw-Pan (5X10)
16020	16020-7003	1	Chamber-Float				
16025	16025-7006	1	Valve-Throttle				
16030	16030-7003	1	Valve-Float				
16031	16031-7002	1	Float				
16041	16041-7016	1	Shaft-Choke, Carburetor				
16041A	16041-7018	1	Shaft-Throttle, Carburetor				
16073	16073-7007	1	Insulator				
16186	16186-7004	1	Choke Valve ASM				
21188	21188-7002	1	Solenoid				
39076	39076-7001	1	Limiter				
49121	49121-7010	1	Nozzle-Main				
59076	59076-7001	1	Manifold-Intake				
92009	92009-2083	2	Screw				
92009A	92009-2349	1	Screw				
92063	92063-7062	1	Jet-Main No. 110				
92063A	92063-7065	1	Jet-Main, No. 112				

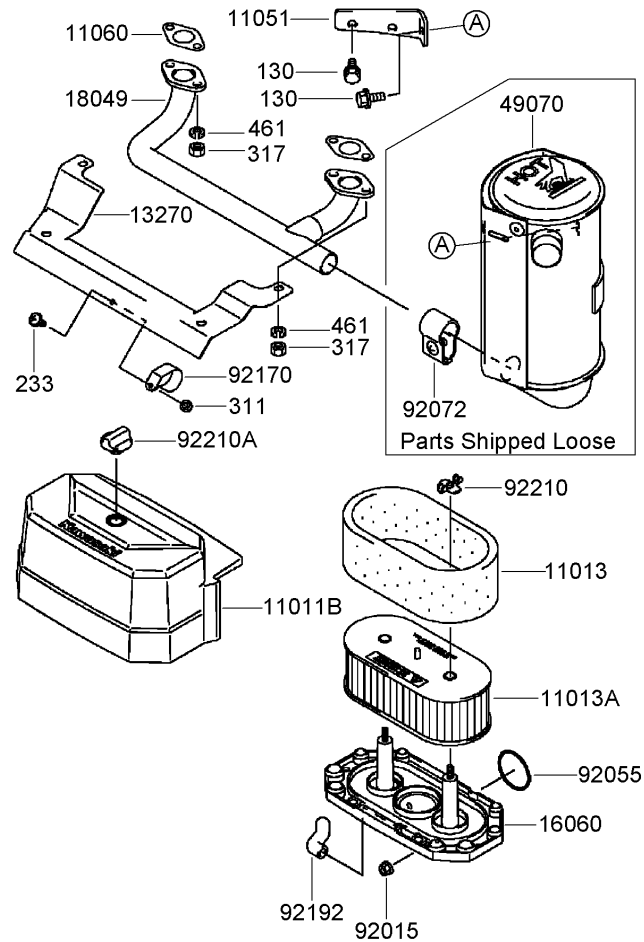


Air Filter and Muffler Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description				
❸11011B	11011-7046	1	Case-Air Filter				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11051	11051-7005-9H	1	Bracket				
❸11060	11060-7021	2	Gasket-Muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7015	1	Muffler				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7008	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸130	130B0816	2	Bolt-Flanged (8X16)				
❸233	233B0416	1	Screw (4X16)				
❸311	311B0400	1	Nut-Hex (4Mm)				
❸317	317R0800	4	Nut-Hex, Small (8Mm)				
❸461	461F0800	4	Washer-Spring (8Mm)				

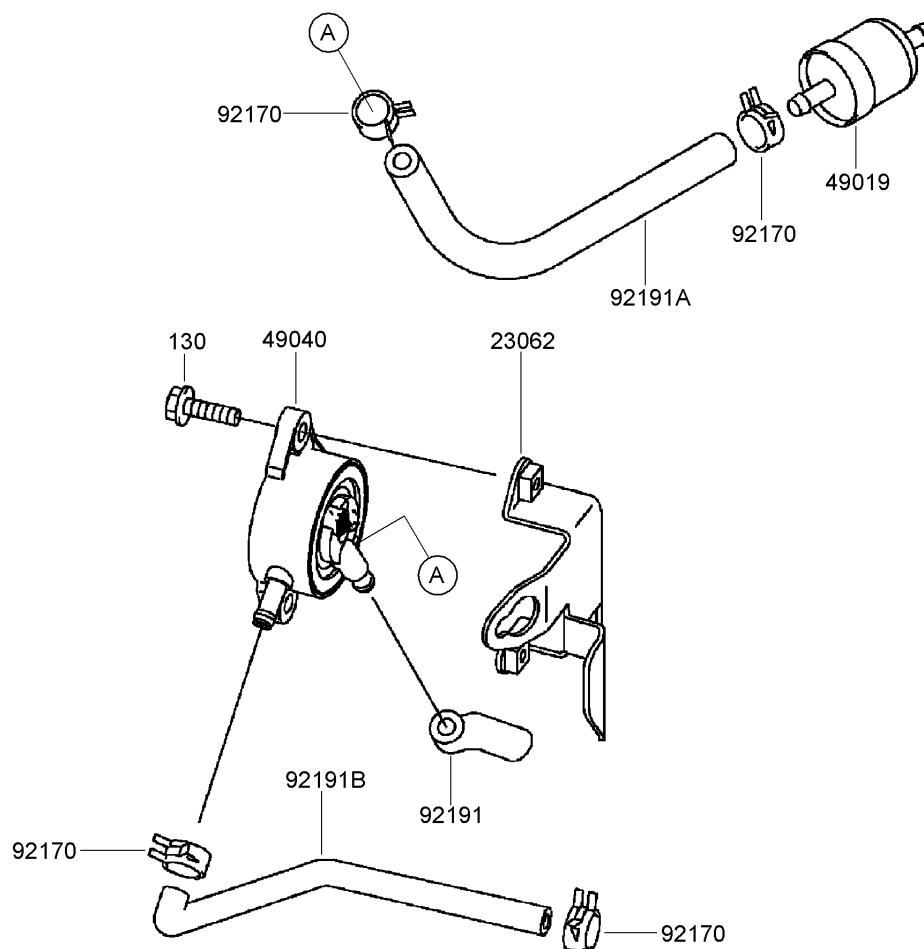

Fuel Tank and Valve Assembly Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35X12.7X160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged (6X20)				

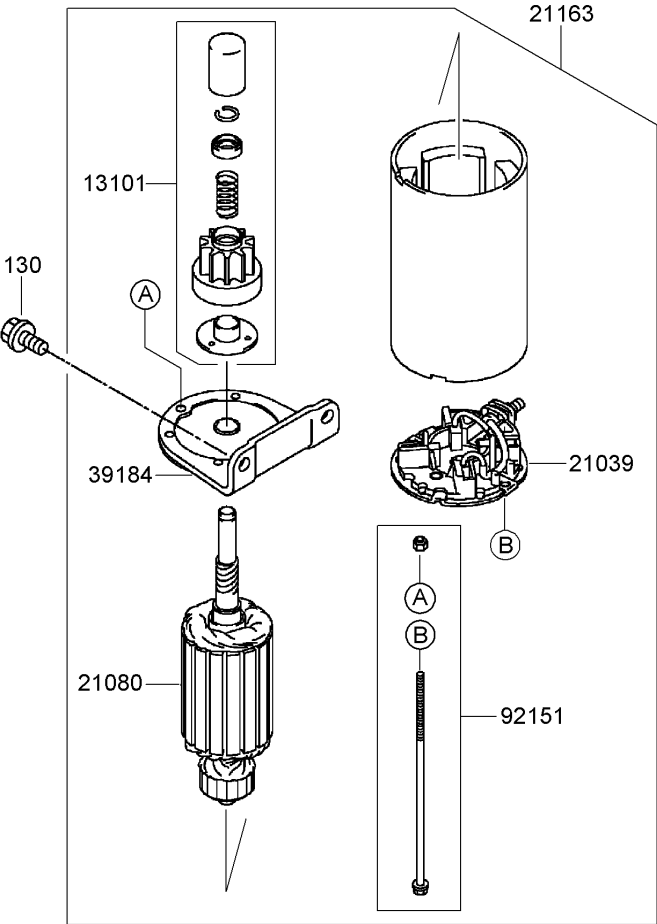

Starter Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description				
13101	13101-7003	1	Gear ASM				
21039	21039-7004	1	Brush				
21080	21080-7001	1	Armature				
21163	21163-7010	1	Starter-Electric				
39184	39184-7004	1	Bracket ASM				
92151	92151-7013	1	Bolt				
130	130B0816	2	Bolt-Flanged (8X16)				

Attachments and Accessories

For 30494 - Commercial Walk-Behind Mower, Floating Deck T-Bar Hydro with 36in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Recycler, 18 Inch	105-7779-03
Blade-Med Flow, 18 Inch	105-7794-03
Blade-Low Flow, 18 Inch	105-7795-03
Blade-Atomic, 18 Inch	105-7796-03
Blade-Hi-Flow, 18 Inch (6 Pack)	108-1117
Blade-Atomic, 18 Inch (6 Pack)	108-1118
Blade-Lo-Flow, 18 Inch (6 Pack)	110-0406
Blade-Recycler, 18 Inch (6 Pack)	110-0408
Blade-Med-Flow, 18 Inch (6 Pack)	110-0409
36 Inch Bagger Enhancement Kit	110-2026
36 Inch Recycler Kit	110-2080
Weight-Cast	112-7059-01
Weight Kit	112-9971
Soft Bag (3 Bushel)	30104
Tru Trak Sulky	30110

