



55cm Recycler[®] Lawn Mower

Model No. 20658 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute and Rear Door Assembly	 3	Carburetor Assembly Briggs and Stratton 126T02-0227-B1	 14
Front Axle Assembly	 4	Air Cleaner Assembly Briggs and Stratton 126T02-0227-B1	 15
Rear Axle and Transmission Assembly	 5	Governor Assembly Briggs and Stratton 126T02-0227-B1	 16
Transmission Assembly No. 106-3956	 6	Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0227-B1	 17
Handle Assembly	 7	Blower Housing Assembly Briggs and Stratton 126T02-0227-B1	 18
Electrical Assembly	 8	Starter Assembly Briggs and Stratton 126T02-0227-B1	 19
Rear Bag Assembly	 9	Engine Gasket Set Briggs and Stratton 126T02-0227-B1	 20
Engine Assembly	 10	Carburetor Overhaul Kit Briggs and Stratton 126T02-0227-B1	 21
Cylinder Assembly Briggs and Stratton 126T02-0227-B1	 11	Attachments and Accessories List	 22
Crankshaft Assembly Briggs and Stratton 126T02-0227-B1	 12		
Crankcase Assembly Briggs and Stratton 126T02-0227-B1	 13		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHE. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |

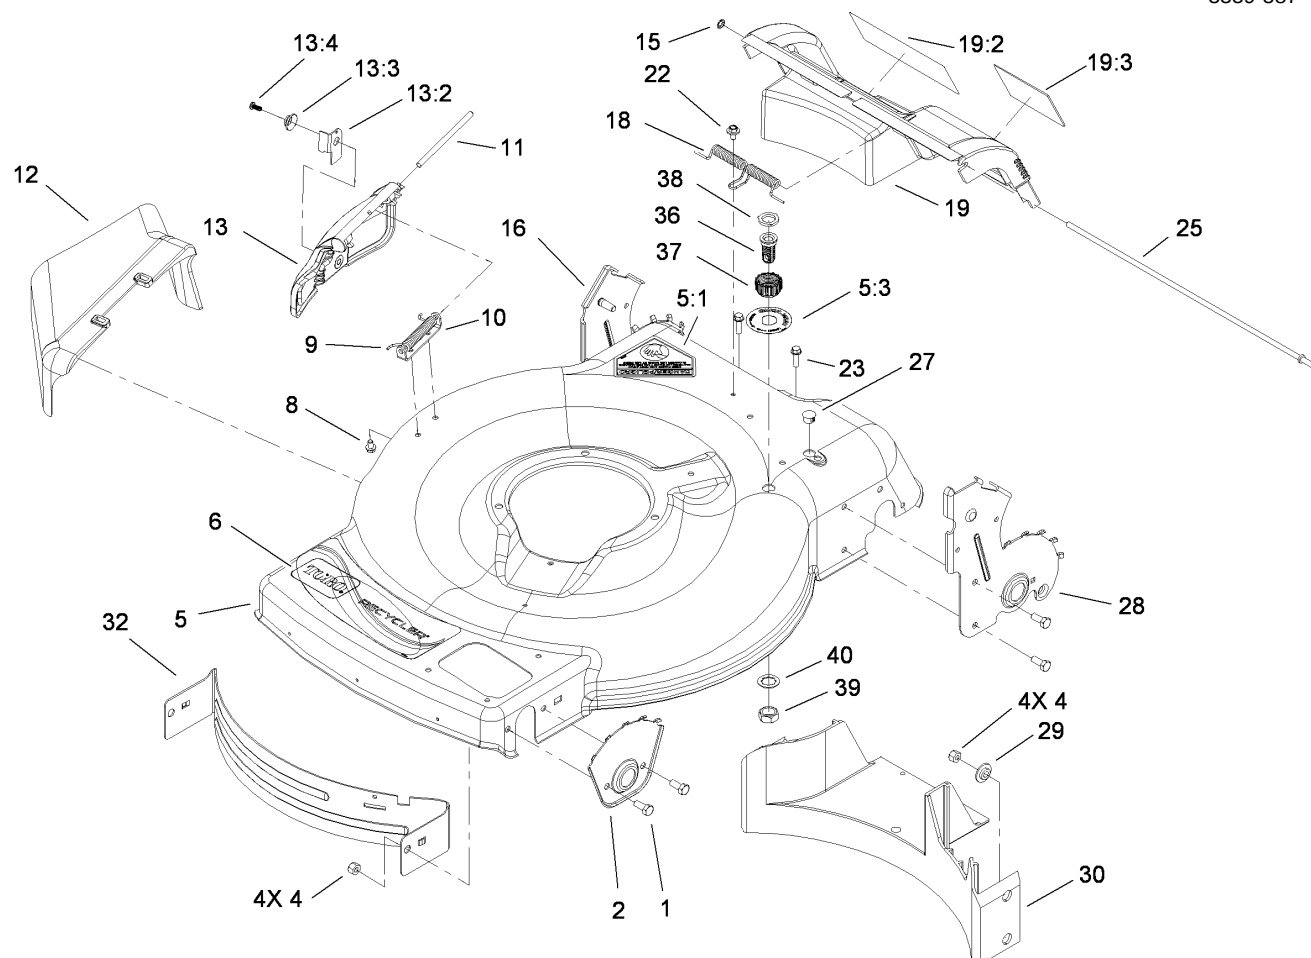

Deck, Side Chute and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-HOC, Front
4	3296-29	8	Nut-Lock, NI
5	115-2888	1	Housing ASM
5:1	112-8760	1	Decal-Danger, Ce
5:3	112-8867	1	Decal-Washout Port, Trilingual
6	114-0321	1	Decal-Deck
8	99-8445	2	Screw-HWH
9	99-5293	1	Spring-Torsion
10	112-6416	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	112-6441	1	8 Inch RH HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	112-8865	1	Rear Door ASM
19:2	112-8759	1	Decal-Warning
19:3	104-7908	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH

Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	112-6443	1	8 Inch LH HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-1834	1	Baffle-Rear
32	107-0793-03	1	Baffle-Front
36	112-6400	1	Port-Washout
37	112-6401	1	Coupling-Hose, Washout Port
38	112-6438	1	Washer-Seal, Washout Port
39	3218-6	1	Nut-Jam
40	3254-5	1	Washer-Tooth

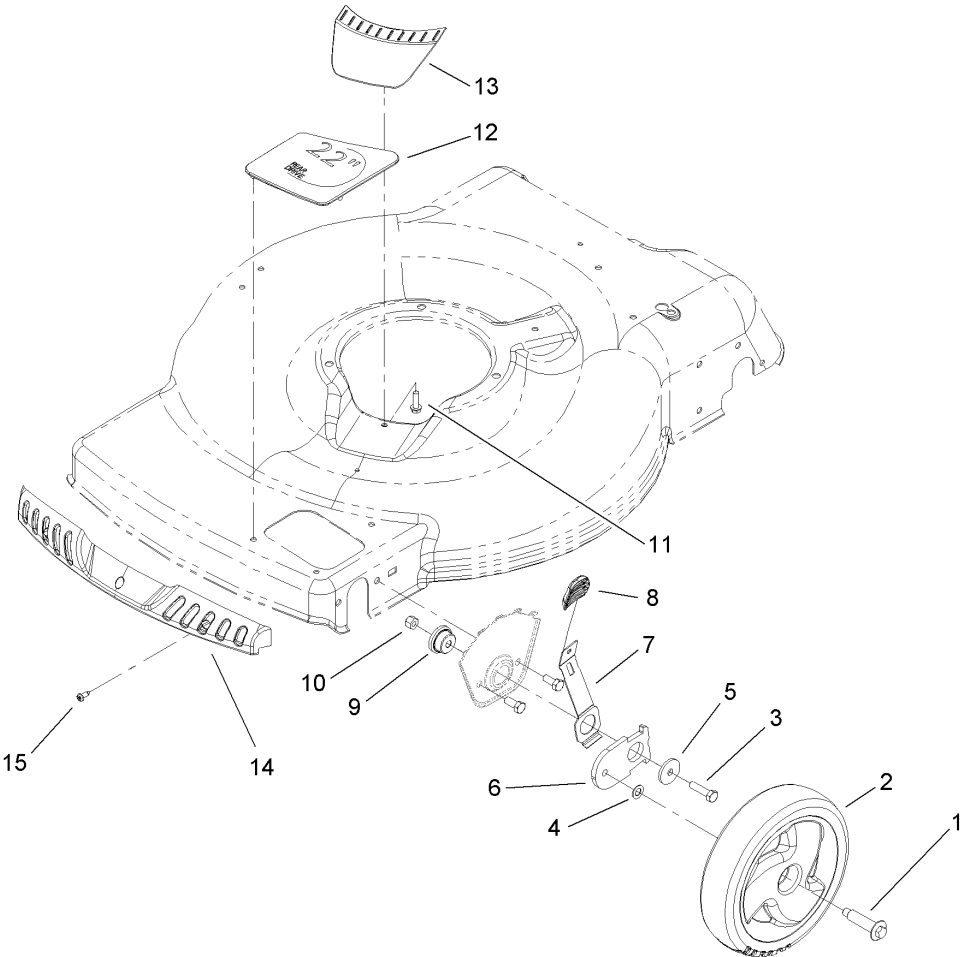


Front Axle Assembly

Ref	Part No.	Qty.	Description				
1	614650	2	Bolt-Shoulder				
2	105-1814	2	Wheel ASM				
3	322-6	2	Screw-HH				
4	110-7466	2	Washer-Bolt, Wheel				
5	105-3048	2	Washer-Flat				
6	105-1807	2	Arm-Pivot, Front				
7	105-1809	2	Arm-Spring				
8	105-3042	2	Knob-Lever, HOC				
9	105-1818	2	Bushing-Mount, HOC				
10	3296-29	2	Nut-Lock, NI				
11	46-8091	1	Screw-HWH				
12	104-9398	1	Cover-Cutout				
13	105-3005	1	Cover-Belt Opening				
14	104-9359	1	Bumper-Mower				
15	105-6849	3	Screw-Thread Forming				

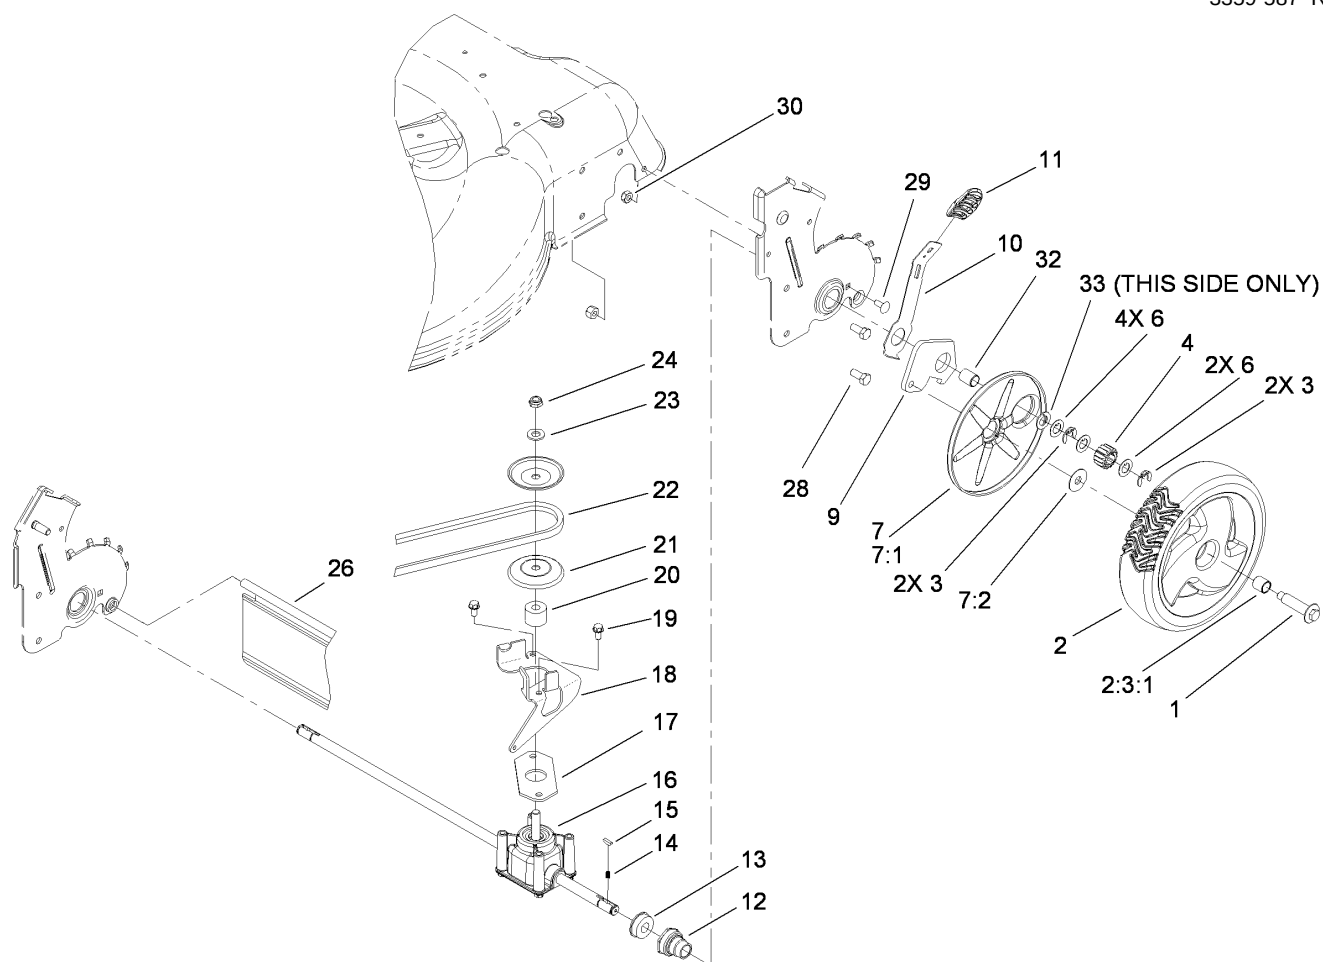


Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder	23	3256-24	1	Washer-Flat
2	105-3036	2	Wheel Gear ASM	24	3296-5	1	Nut-Lock
1 2 2:3		1	Wheel ASM	26	114-1585	1	Shield-Trailing
2:3:1	27-6250	2	Bushing	28	322-4	4	Screw-HH
3	65-2720	4	Ring-Clip, Locking	29	3229-11	2	Screw-CARR
4	105-3040	2	Gear-Pinion, 15T	30	3296-16	2	Nut-Lock, NI
6	105-6840	6	Washer-Thrust	32	108-9782	2	Bushing-Sleeve
7	110-1792	2	Wheel Cover ASM	33	110-7191	1	Washer-Thrust
2 7:1		1	Cover-Wheel				
7:2	614426	1	Washer-Stepped				
9	108-9781	2	Arm-Pivot, Rear				
10	108-9780	2	Arm-Spring				
11	105-3042	2	Knob-Lever, HOC				
12	108-9779	2	Retainer-Bushing, HOC				
13	104-8699	2	Bearing-Ball				
14	39-9650	2	Spring-Compression				
15	612066	2	Key				
16	106-3956	1	Transmission ASM				
17	108-9756	1	Gasket-Gearbox				
18	106-6809-03	1	Bracket-Pivot				
19	32144-4	2	Screw-HWH				
20	92-5791	1	Spacer				
21	100-1176	2	Pulley-Half				
22	91-2258	1	V-Belt				

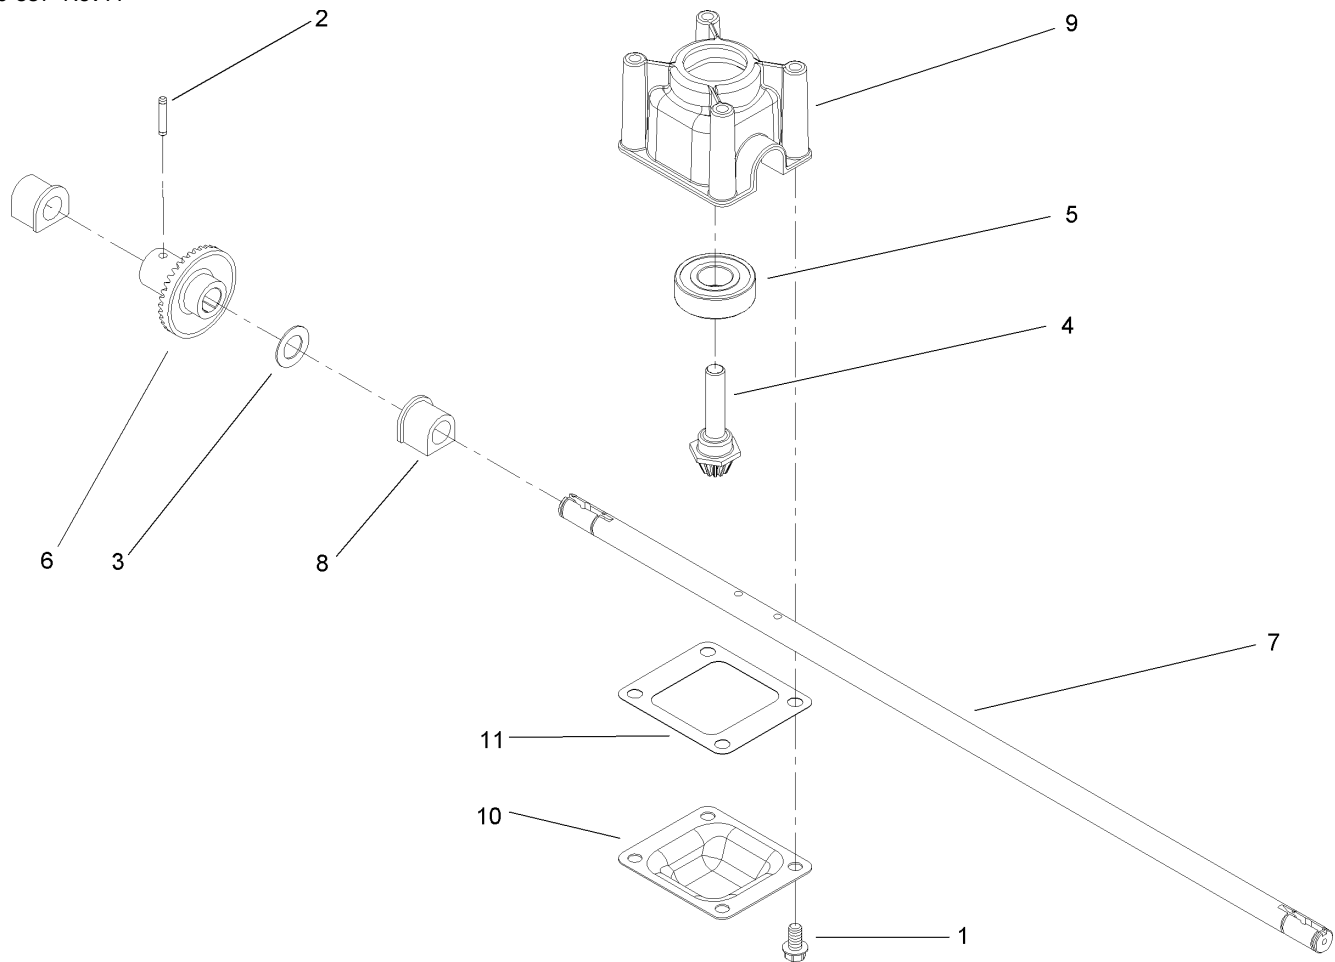


Transmission Assembly No. 106-3956

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	105-6817	1	Pin-Groove				
3	36-4780	1	Washer-Plain				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	106-3957	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

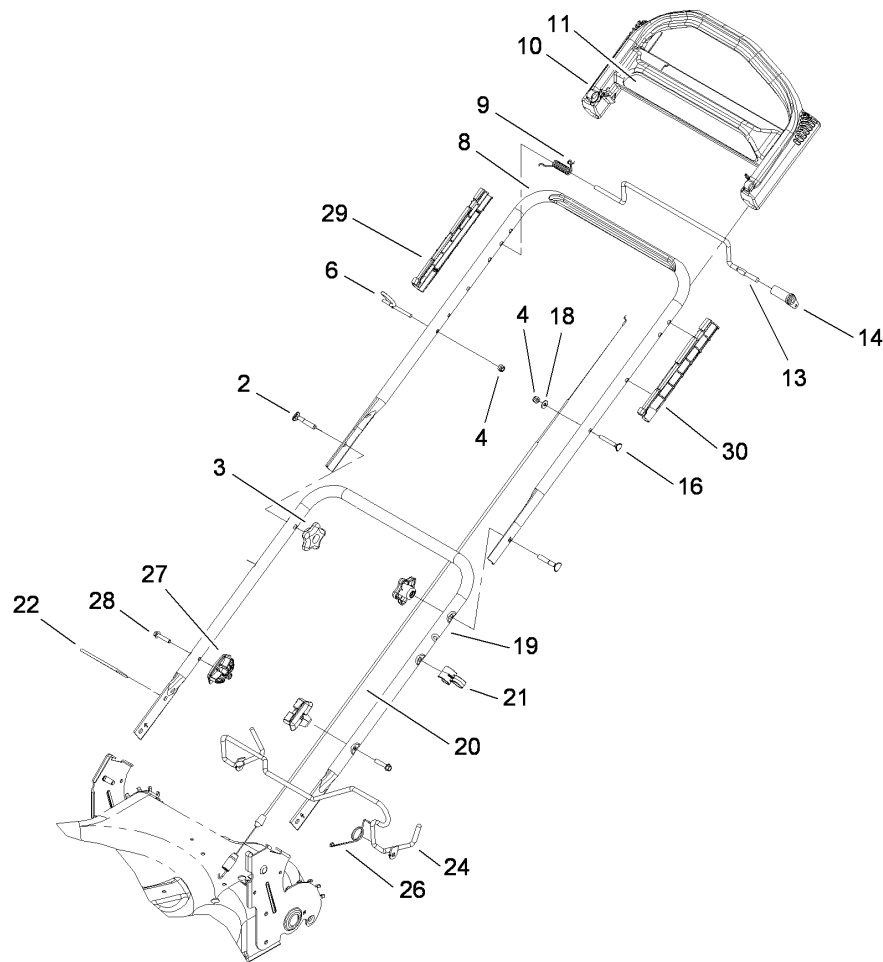


Handle Assembly

Ref	Part No.	Qty.	Description				
2	112-8876	2	Screw-Handle				
3	108-8162	2	Knob-Locking				
4	3296-73	2	Nut-Lock, NI				
6	86-9671	1	Guide-Rope				
8	104-8680-05	1	Handle-Upper				
9	104-8690	1	Spring-Torsion				
10	104-8678	1	Handle-Control				
11	110-7056	1	Decal-Ads, Handle				
13	99-1588	1	Bar-Control, Traction				
14	99-1589	1	Lever-Traction				
16	321-50	1	Screw-HH				
18	3256-1	1	Washer-Flat				
19	112-6440-05	1	Handle-Lower				
20	105-1844	1	Cable-Traction				
21	106-6805	1	Guide-Cable				
22	614249	1	Strap-Tie				
24	107-0768	1	Release Lever ASM				
26	107-7472	1	Spring-Torsion				
27	108-9788	2	Anchor-Bag				
28	32144-110	2	Screw-HWH				
29	105-6841	1	Guide-RH				
30	105-6842	1	Guide-LH				

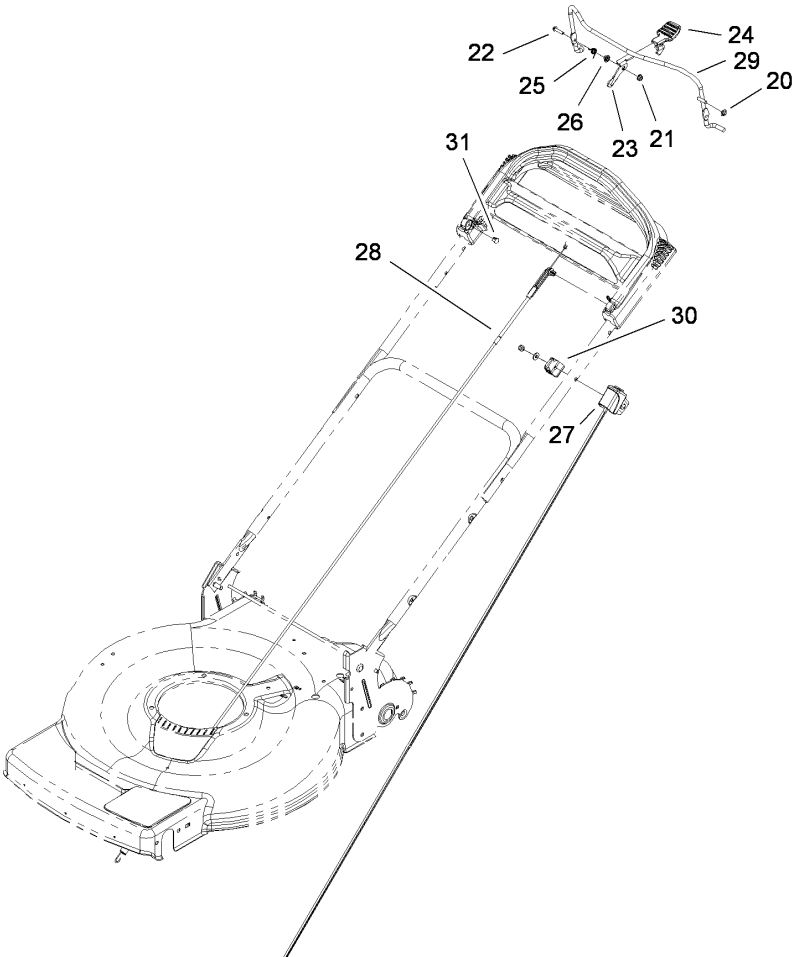


Electrical Assembly

Ref	Part No.	Qty.	Description				
20	3290-337	1	Nut-Speed				
21	32128-17	1	Nut-Lock, Flange				
22	106-9169	1	Screw				
23	106-6802	1	Lever				
24	112-8884	1	Knob-BBC				
25	107-7462	1	Spring-Torsion				
26	107-7463	1	Spacer				
27	108-8161	1	Switch Housing ASM				
28	107-0799	1	Cable ASM				
29	108-3788	1	Bail-Brake				
30	99-5239	1	Anchor-Cable				
31	104-9368	1	Plug-Dome				

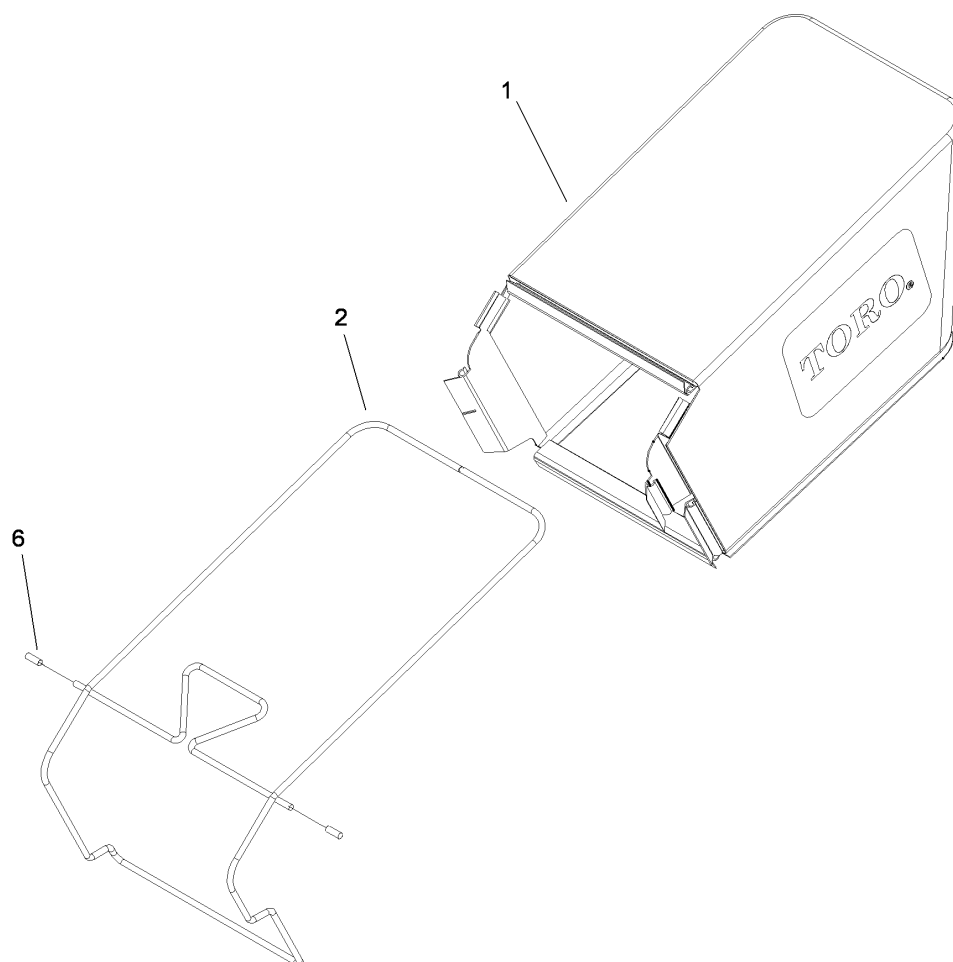

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	108-9792	1	Grass Bag ASM
2	108-9785-03	1	Frame-Bag
6	112-6439	2	Cap-End

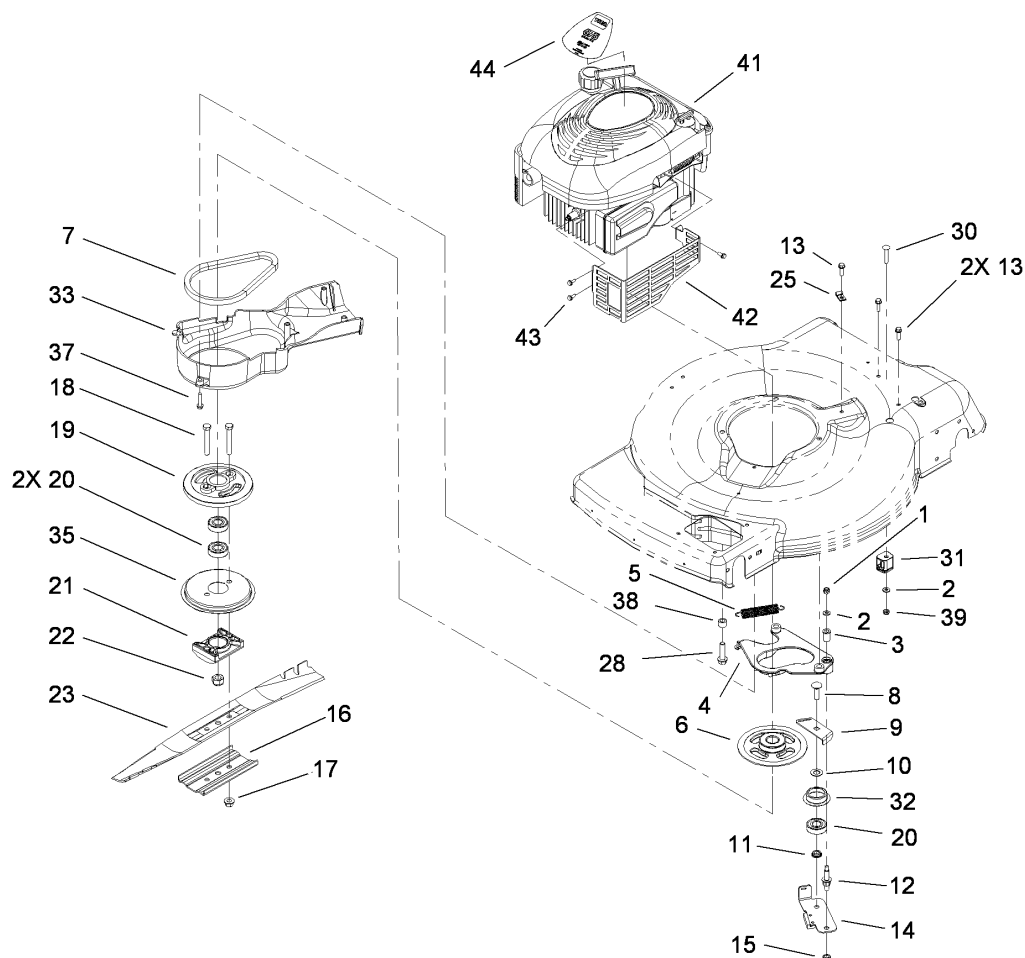

Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-73	1	Nut-Lock, NI
2	3256-16	2	Washer-Flat
3	107-0797	1	Bushing
4	108-9341	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	110-7456	1	Pulley
7	110-1790	1	Belt-BBC
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	46-8091	3	Screw-HWH
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	100-1048	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	108-9342	1	Nut-Hex
23	108-9783	1	Blade
25	2412-72	1	Clip-Closed, Insulated

Ref	Part No.	Qty.	Description
28	32144-102	3	Screw-HWH
30	3229-4	1	Screw-CARR
31	106-6801	1	Anchor-Cable, BBC
32	108-3790	1	Retainer-Belt
33	107-0798	1	Cover-BBC
35	108-3787	1	Disc
37	46-8092	1	Screw-Plastite
38	100-6447	1	Tube-Spacer
39	3296-56	1	Nut-Lock, NI
41		1	Engine-Briggs And Stratton, 126T02-0227-B1
42	104-7577-03	1	Shield-Muffler
43	32144-1	3	Screw-Taptite
44	115-4653	1	Decal

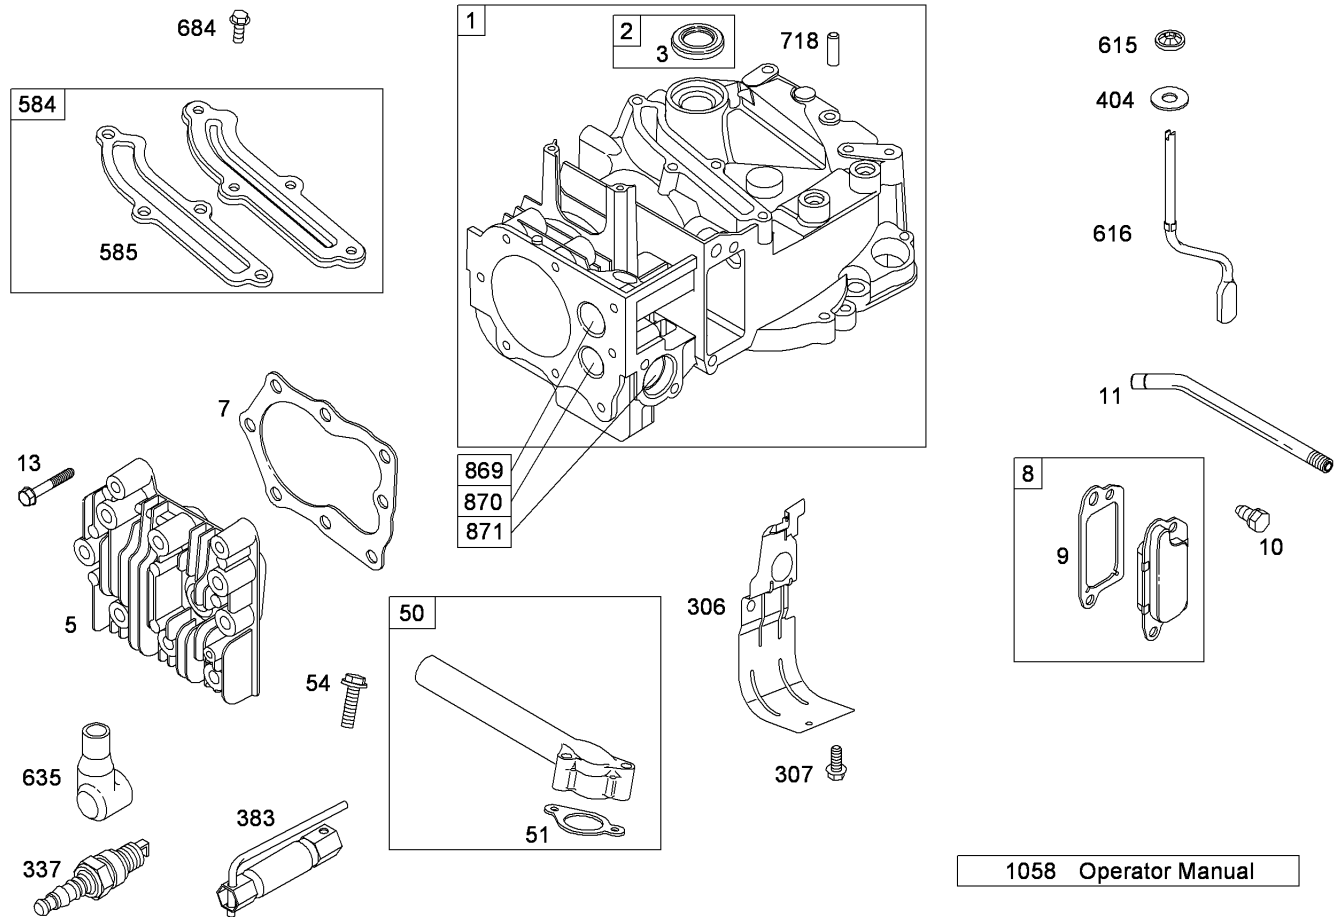


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	696125	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	794305	1	Manifold-Intake
51	794306	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	790836	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
337	802592s	1	Plug-Spark
383	89838s	1	Wrench-Spark Plug
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538s	1	Boot-Spark Plug
684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	MS3262	1	Operator Manual

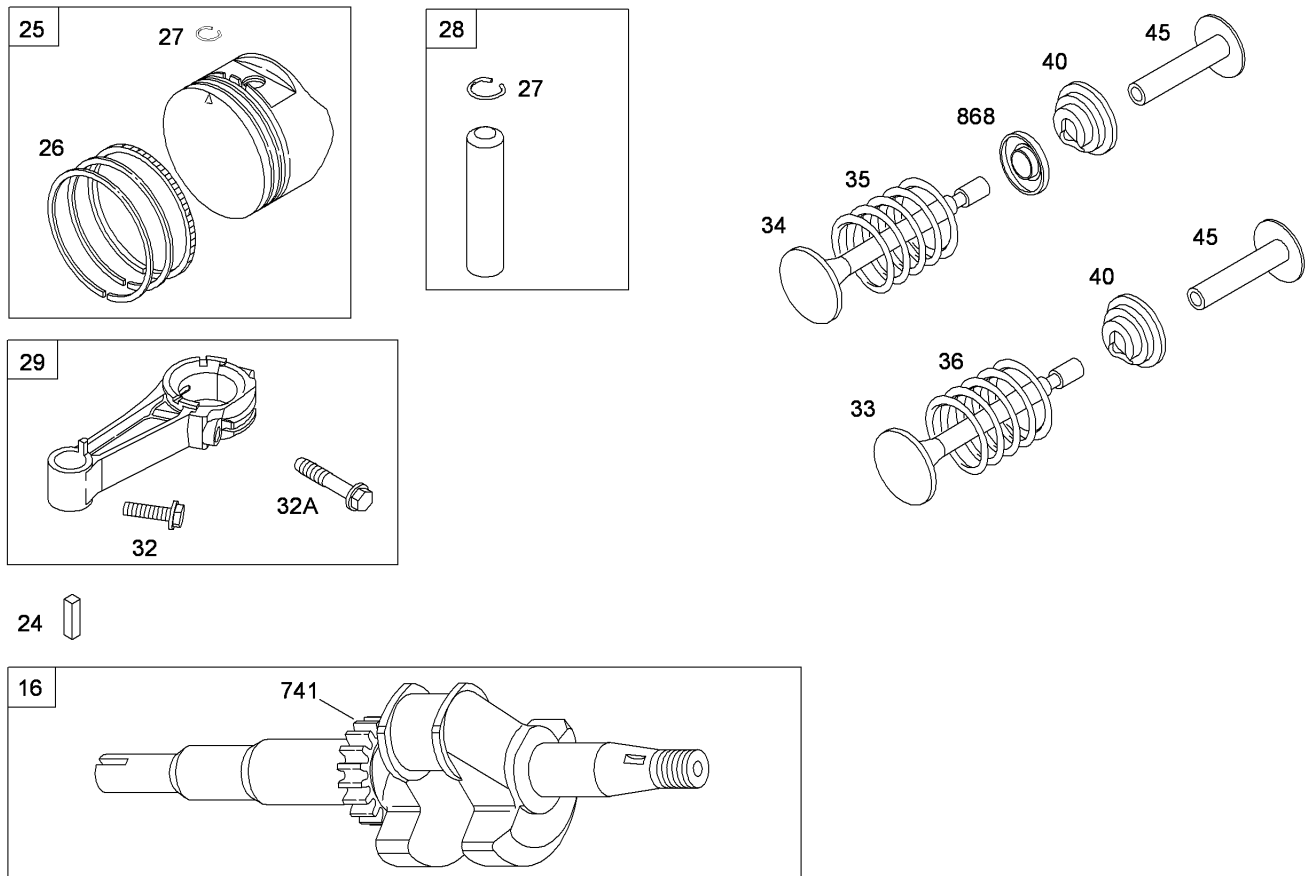


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 126T02-0227-B1


Ref	Part No.	Qty.	Description				
③16	791061	1	Crankshaft				
③24	222698s	1	Key-Flywheel				
③25	795429	1	Piston ASM (STD)				
③25	795430	1	Piston ASM (.020 Oversize)				
③26	795431	1	Ring Set (STD)				
③26	795432	1	Ring Set (.020 Oversize)				
③27	691866	1	Lock-Pin, Piston				
③28	499423	1	Pin-Piston (STD)				
③29	499424	1	Rod-Connecting				
③32	691664	1	Screw (Connecting Rod)				
③32A	695759	1	Screw (Connecting Rod)				
③33	262651s	1	Valve-Exhaust				
③34	262652s	1	Valve-Intake				
③35	691270	1	Spring-Valve (Intake)				
③36	691270	1	Spring-Valve (Exhaust)				
③40	692194	1	Retainer-Valve				
③45	690548	1	Tappet-Valve				
③741	790345	1	Gear-Timing				
③868	697338	1	Seal-Valve				

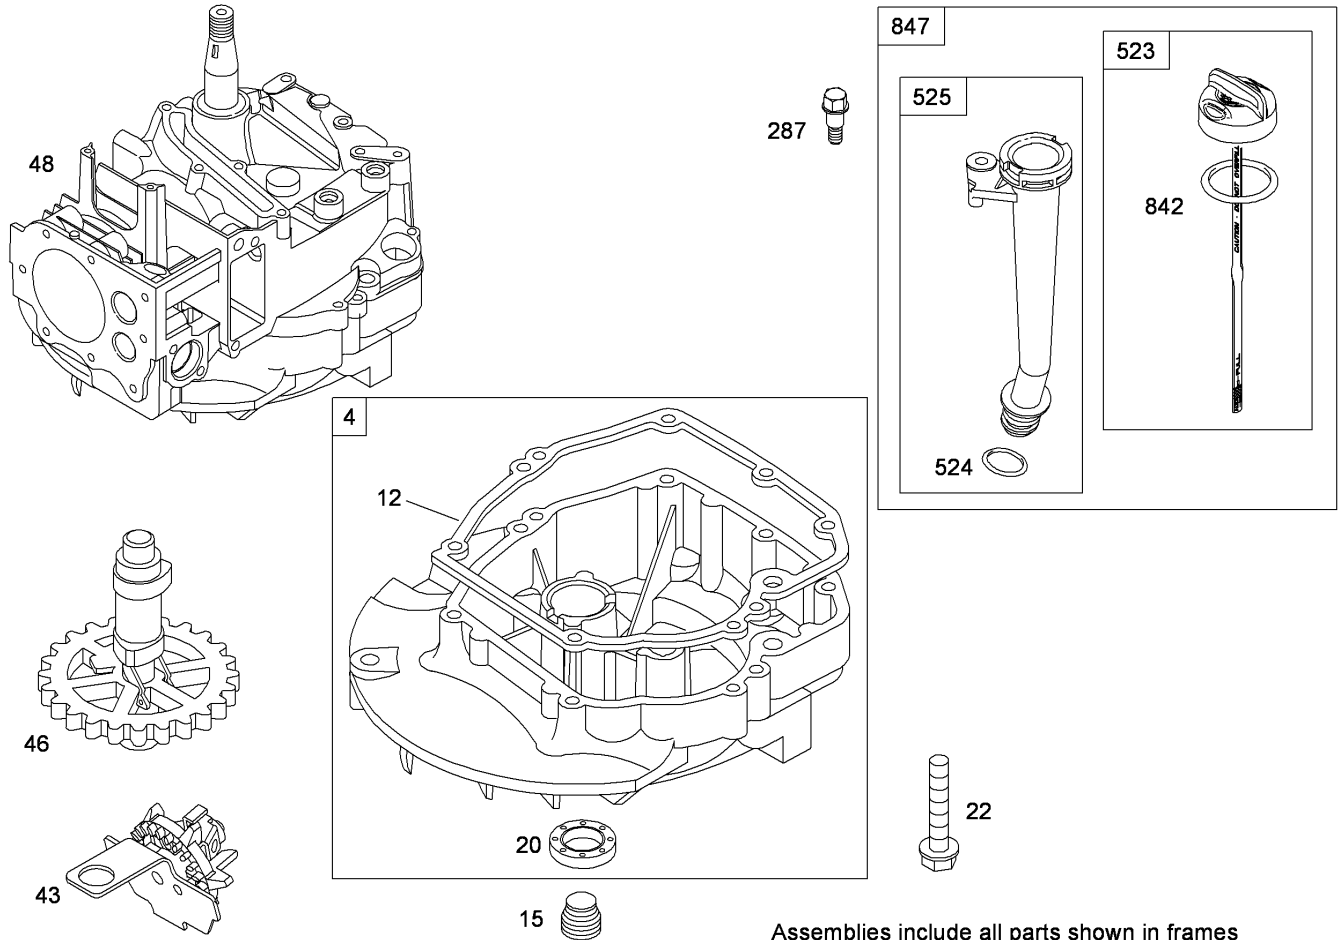

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 STD)				
15	691680	1	Plug-Drain, Oil				
20	399781s	1	Seal-Oil (PTO Side)				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Oil, Governor				
46	691449	1	Camshaft				
48	792742	1	Block-Short				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal-O Ring (Dipstick Tube)				
525	495265	1	Tube-Dipstick				
842	691031	1	Seal-O Ring (Dipstick Tube)				
847	692047	1	Dipstick Tube ASM				


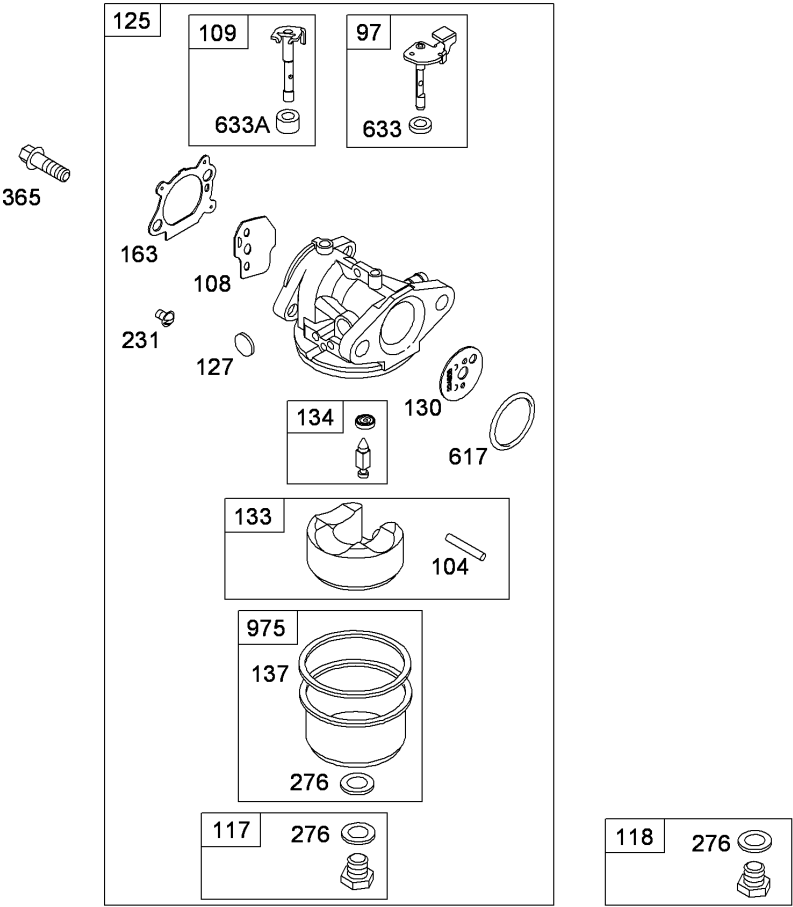


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description				
3 97	696565	1	Shaft-Throttle				
3 4 104	691242	1	Pin-Hinge, Float				
3 108	790844	1	Valve-Choke				
3 109	790843	1	Shaft-Choke				
3 117	691428	1	Jet-Main (STD)				
3 118	498977	1	Jet-Main (High Altitude)				
3 125	794304	1	Carburetor				
3 4 127	694468	1	Plug-Welch				
3 130	696564	1	Valve-Throttle				
3 133	398187	1	Float-Carburetor				
3 4 134	398188	1	Needle And Seat Kit				
4 6 137	693981	1	Gasket-Bowl, Float				
3 4 163	272653s	1	Gasket-Cleaner, Air				
3 6							
3 231	691636	1	Screw (Choke Valve)				
3 4 276	271716	1	Washer-Sealing				
6							
3 365	692524	1	Screw (Carburetor)				
3 4 617	270344s	1	Seal-O Ring (Intake Manifold)				
6							
3 4 633	691321	1	Seal-Shaft, Choke Throttle				
6							
3 4 633A	693867	1	Seal-Shaft, Choke Throttle				
6							
3 975	493640	1	Bowl-Float				

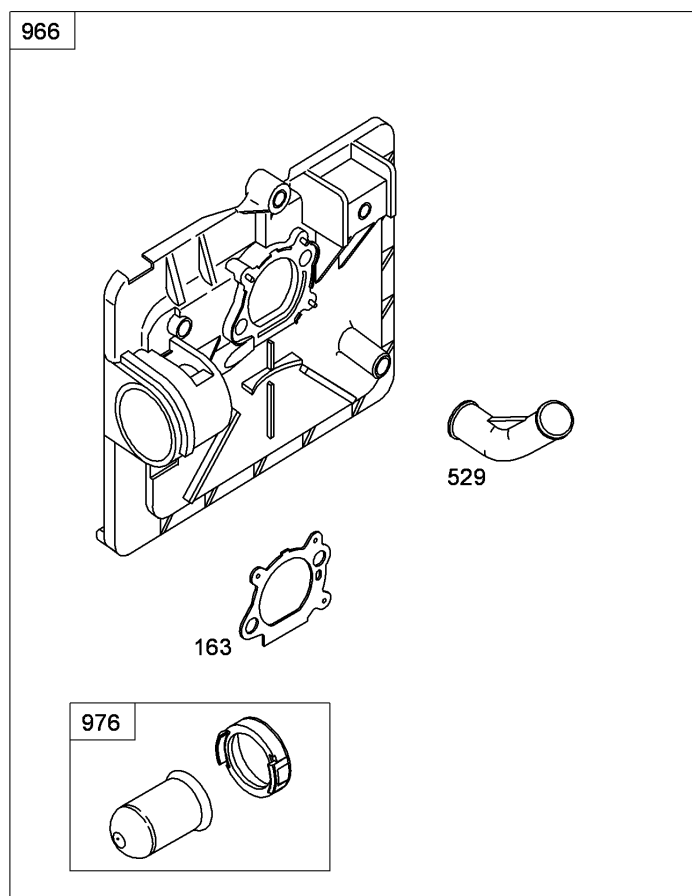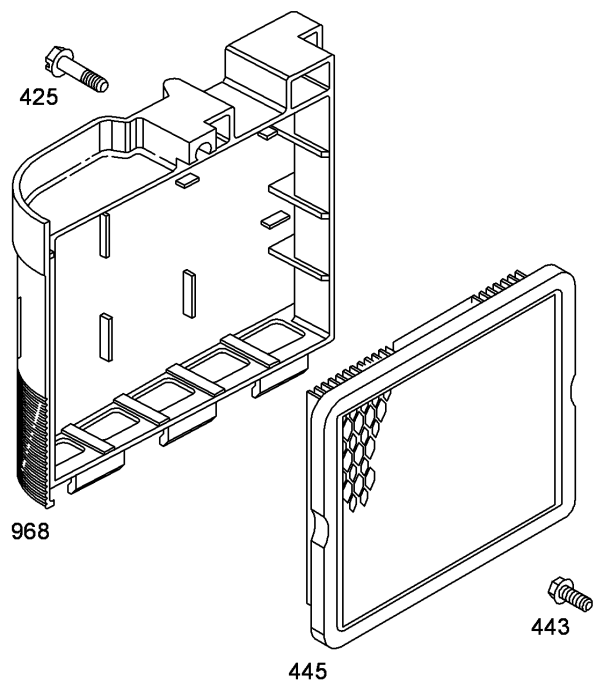


Assemblies include all parts shown in frames

Air Cleaner Assembly

Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description
③ ④ 163 ⑤ ⑥	272653s	1	Gasket-Cleaner, Air
③ 425	690670	1	Screw (Air Cleaner Cover)
③ 443	692523	1	Screw (Air Cleaner Primer Base)
③ 445	491588s	1	Filter-Cartridge, Air Cleaner
③ 529	691923	1	Grommet
③ 966	792040	1	Base-Primer, Air Cleaner
③ 968	692298	1	Cover-Cleaner, Air
③ 976	694395	1	Primer-Carburetor







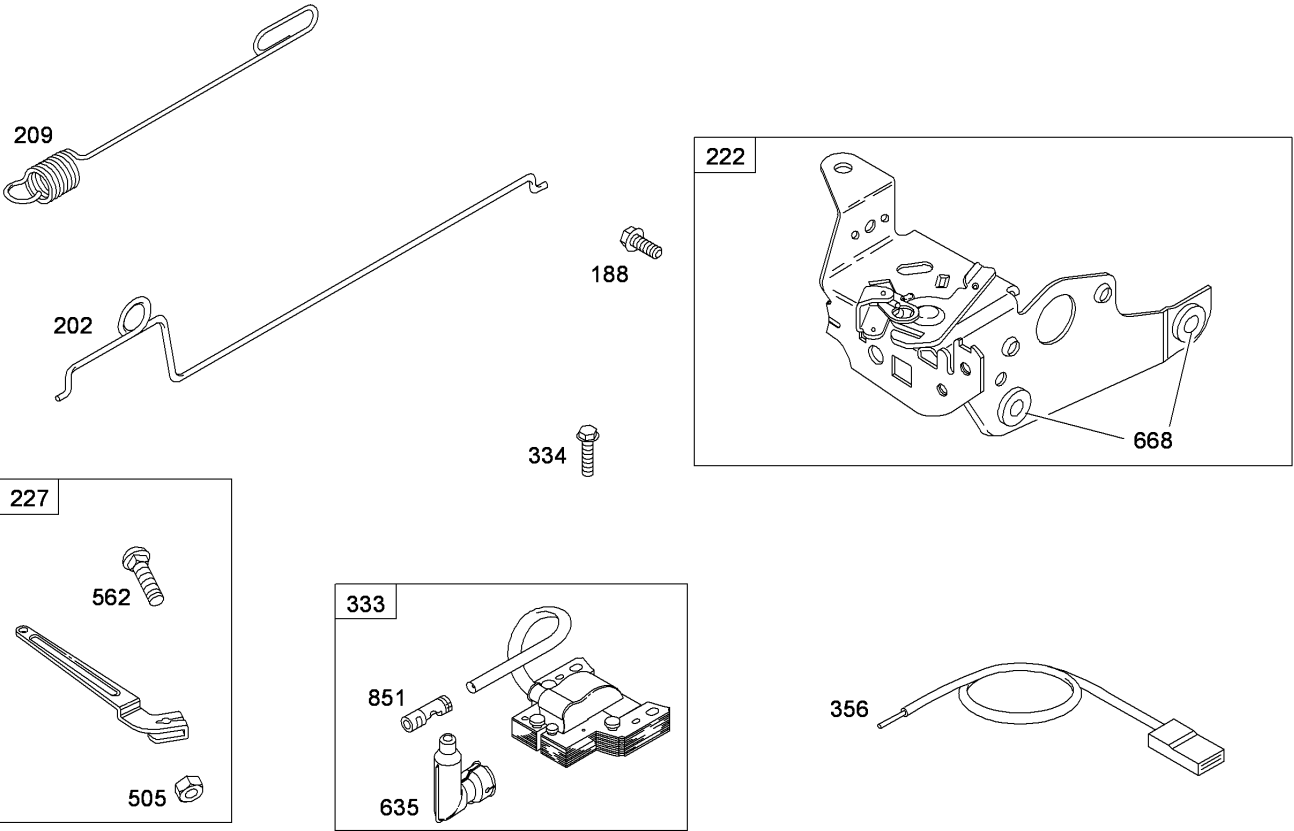


Assemblies include all parts shown in frames

Governor Assembly

Briggs and Stratton 126T02-0227-B1


Ref	Part No.	Qty.	Description				
188	693399	1	Screw (Control Bracket)				
202	691829	1	Link-Governor, Mechanical				
209	691292	1	Spring-Governor				
222	793754	1	Bracket-Control				
227	690783	1	Lever-Control, Governor				
333	793353	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
356	690791	1	Wire-Stop				
505	691251	1	Nut (Governor Control Lever)				
562	691119	1	Bolt (Governor Control Lever)				
635	793351	1	Boot-Spark Plug				
668	493823	1	Spacer				
851	692424	1	Terminal-Spark Plug				

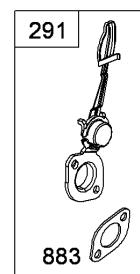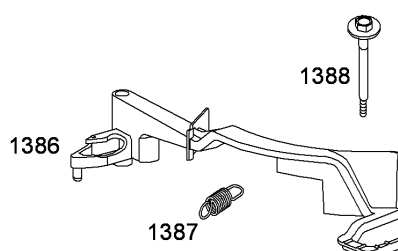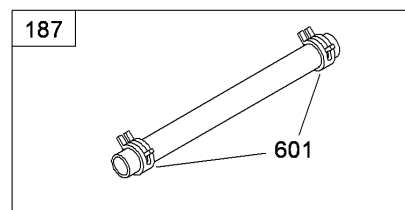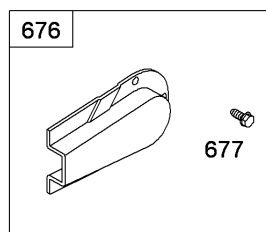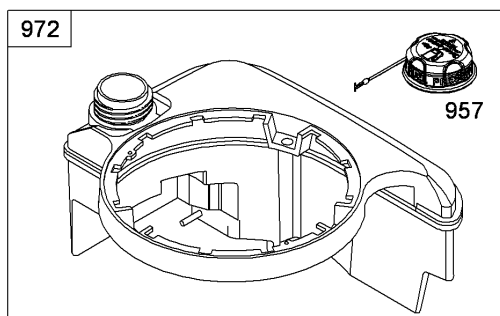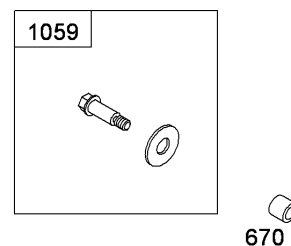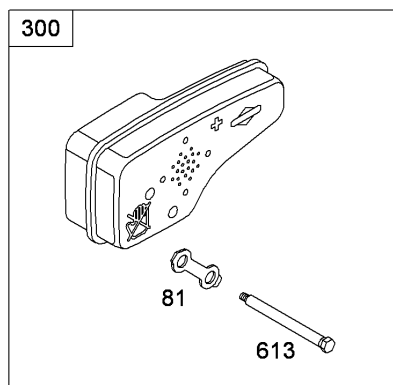

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description				
③81	691740	1	Lock-Screw, Muffler				
③187	791766	1	Line-Fuel (Cut To Required Length)				
③190	690940	1	Screw (Fuel Tank)				
③291	790830	1	Thermostat				
③300	692038	1	Muffler				
③601	791850	1	Clamp-Hose				
③613	691340	1	Screw (Muffler)				
③670	692294	1	Spacer-Tank, Fuel				
③676	493871	1	Deflector-Muffler				
③677	690661	1	Screw (Muffler Deflector)				
③883	691881	1	Gasket-Exhaust				
③957	699985	1	Cap-Tank, Fuel				
③972	699374	1	Tank-Fuel				
③1059	692311	1	Screw And Washer Kit				
③1386	790848	1	Vane-Air				
③1387	790849	1	Spring-Vane, Air				
③1388	790850	1	Screw (Air Vane)				

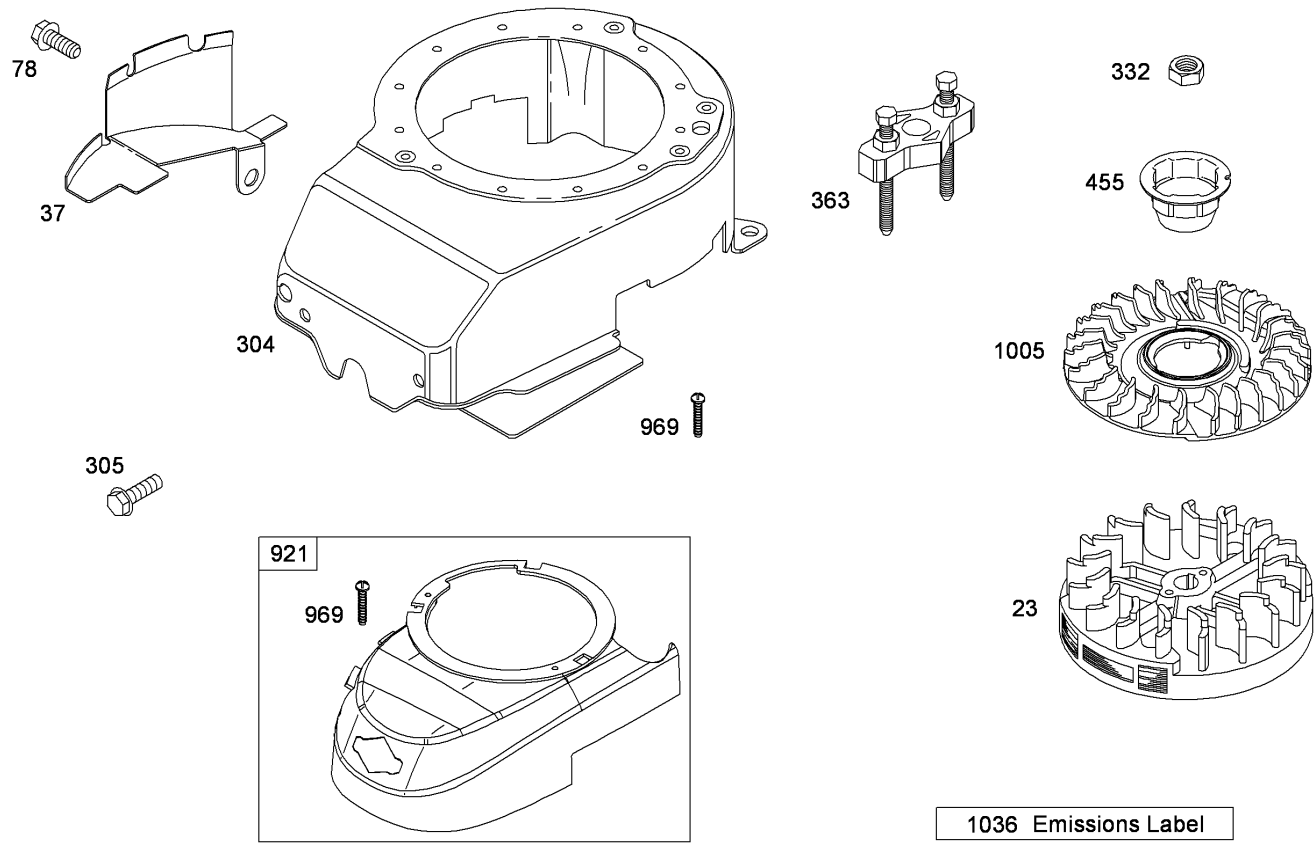


Assemblies include all parts shown in frames

Blower Housing Assembly

Briggs and Stratton 126T02-0227-B1


Ref	Part No.	Qty.	Description				
❶23	691992	1	Flywheel				
❶37	694086	1	Guard-Flywheel				
❶78	691108	1	Screw (Flywheel Guard)				
❶304	791288	1	Housing-Blower				
❶305	691108	1	Screw (Blower Housing)				
❶332	690662	1	Nut (Flywheel)				
❶363	19069	1	Puller-Flywheel				
❶455	791760	1	Cup-Flywheel				
❶921	790036	1	Cover-Housing, Blower				
❶969	691138	1	Screw (Blower Housing Cover)				
❶1005	691346	1	Fan-Flywheel				
❶1036		1	Label-Emissions				

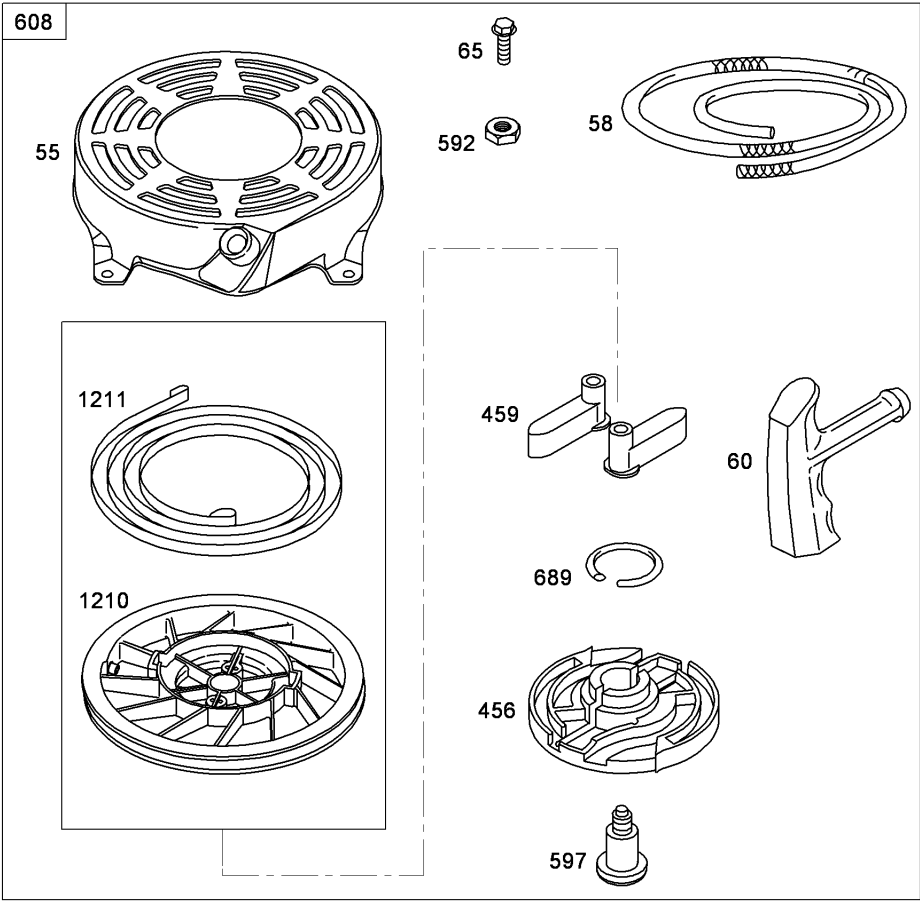

Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description				
❸55	691421	1	Housing-Starter, Rewind				
❸58	697316	1	Rope-Starter (Cut To Required Length)				
❸60	281434s	1	Grip-Rope, Starter				
❸65	690837	1	Screw (Rewind Starter)				
❸456	692299	1	Plate-Friction, Pawl				
❸459	281505s	1	Ratchet-Pawl				
❸592	690800	1	Nut (Rewind Starter)				
❸597	691696	1	Screw (Pawl Friction Plate)				
❸608	497680	1	Starter-Rewind				
❸689	691855	1	Spring-Friction				
❸1210	498144	1	Pulley And Spring ASM (Pulley)				
❸1211	498144	1	Pulley And Spring ASM (Spring)				

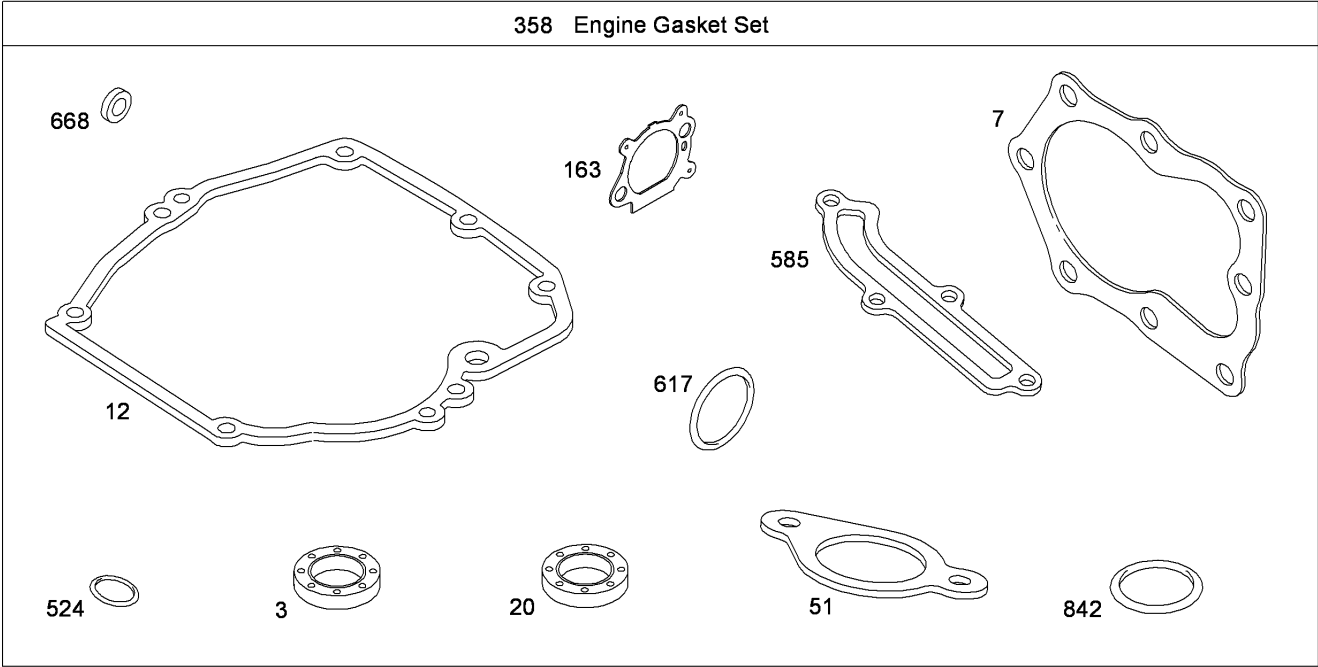


Assemblies include all parts shown in frames

Engine Gasket Set

Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description				
353	299819s	1	Seal-Oil (Magneto Side)				
357	692249	1	Gasket-Head, Cylinder				
3512	692232		Gasket-Crankcase (.015 STD)				
3520	399781s	1	Seal-Oil (PTO Side)				
3551	794306	1	Gasket-Intake				
34163	272653s	1	Gasket-Cleaner, Air				
36							
3358	794307	1	Engine Gasket Set				
35524	692296	1	Seal-O Ring (Dipstick Tube)				
35585	691879	1	Gasket-Passage, Breather				
34617	270344s	1	Seal-O Ring (Intake Manifold)				
36							
35668	493823	1	Spacer				
35842	691031	1	Seal-O Ring (Dipstick)				

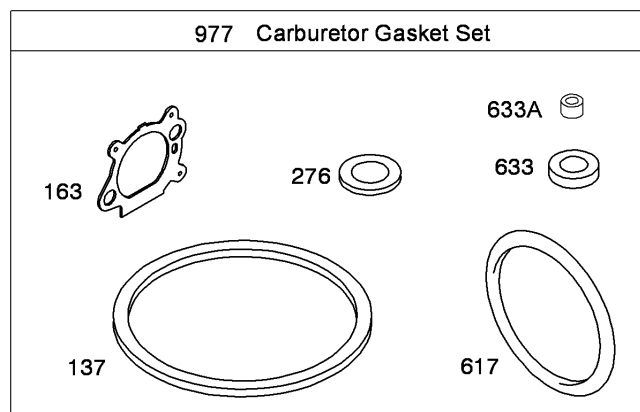

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 126T02-0227-B1

Ref	Part No.	Qty.	Description				
③④104	691242	1	Pin-Hinge, Float				
③121	498260	1	Carburetor Overhaul Kit				
③④127	694468	1	Plug-Welch				
③④134	398188	1	Needle And Seat Kit				
③④137	693981	1	Gasket-Bowl, Float				
⑤							
③④163	272653s	1	Gasket-Cleaner, Air				
⑤⑤							
③④276	271716	1	Washer-Sealing				
⑤							
③④617	270344s	1	Seal-O Ring (Intake Manifold)				
⑤⑤							
③④633	691321	1	Seal-Shaft, Choke Throttle				
⑤							
③④633A	693867	1	Seal-Shaft, Choke Throttle				
⑤							
③977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20658 - 55cm Recycler Lawn Mower

Product Name	Model/Part
Traction Assist Handle Kit	108-8120
Replacement Bag	59303
Bagger Kit	59304
22 Inch Blade Kit	59534

NOTES

