



Workman[®] 3300-D Utility Vehicle with Bed

Model No. 07362TC - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Bumper Assembly	 4	Tail Light and Fender Assembly	 38
Dash Panel Assembly	 5	Diesel Engine Assembly	 39
Steering Assembly	 6	Engine Support Assembly	 40
Steering Pump Assembly No. 106-6726	 8	Transaxle Assembly	 41
Hydraulic Cylinder Assembly No. 106-2262	 9	Case Assembly Transaxle Assembly No. 105-4180	 42
Brake Accelerator and Clutch Assembly	 10	Gear Shaft Assembly Transaxle Assembly No. 105-4180	 43
Master Cylinder Assembly No. 104-6782	 11	Countershaft Assembly Transaxle Assembly No. 105-4180	 44
Hydraulic Brake Assembly	 12	Shift Fork Assembly Transaxle Assembly No. 105-4180	 45
Clutch Linkage Assembly	 13	Differential Gear Assembly Transaxle Assembly No. 105-4180	 46
Shroud and Seat Assembly	 14	Diesel Hydraulic Filter and Relay Assembly	 47
LH Seat Assembly	 15	Battery Assembly	 48
RH Seat Assembly	 16	Diesel Fuel Tank and Air Cleaner Assembly	 49
Roll-Over Protection System Assembly	 17	Air Cleaner Assembly No. 106-2416	 50
Front Wheel Assembly	 18	Diesel Filter Assembly	 51
RH Front Brake Assembly No. 112-7969	 19	Full Bed and Side Panel Assembly	 52
LH Front Brake Assembly No. 112-7970	 20	Cylinder Assembly	 53
Console Assembly	 21	Crankshaft Assembly	 54
Shift Assembly No. 106-7887	 23	Cylinder Head Assembly	 55
Front Suspension Assembly	 24	Injection Pump Assembly	 56
Front Control Arm Assembly	 25	Camshaft Assembly	 57
Lift Valve and Hydraulic Assembly	 26	Oil Pan Assembly	 58
Control Valve Assembly No. 43-1950	 28	Gear Cover Assembly	 59
Hydraulic Cylinder Assembly No. 106-7939	 29	Gear Housing Assembly	 60
Hydraulic Gear Pump Assembly No. 112-2983	 30	Water Pump Assembly	 61
Rear Frame Assembly	 31	Manifold Assembly	 62
Rear Axle Assembly	 32	Starter Motor and Alternator Assembly	 63
LH Rear Brake Assembly No. 112-7961	 33	Engine Gasket Set	 64
RH Rear Brake Assembly No. 112-7962	 34	Attachments and Accessories List	 65
Driveshaft Assembly No. 98-2918	 35		
Radiator and Hydraulic Pump Assembly	 36		
Fan and Hydraulic Pump Drive Assembly	 37		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

Footnotes

- ❶** Not illustrated
- ❷** Not serviced separately

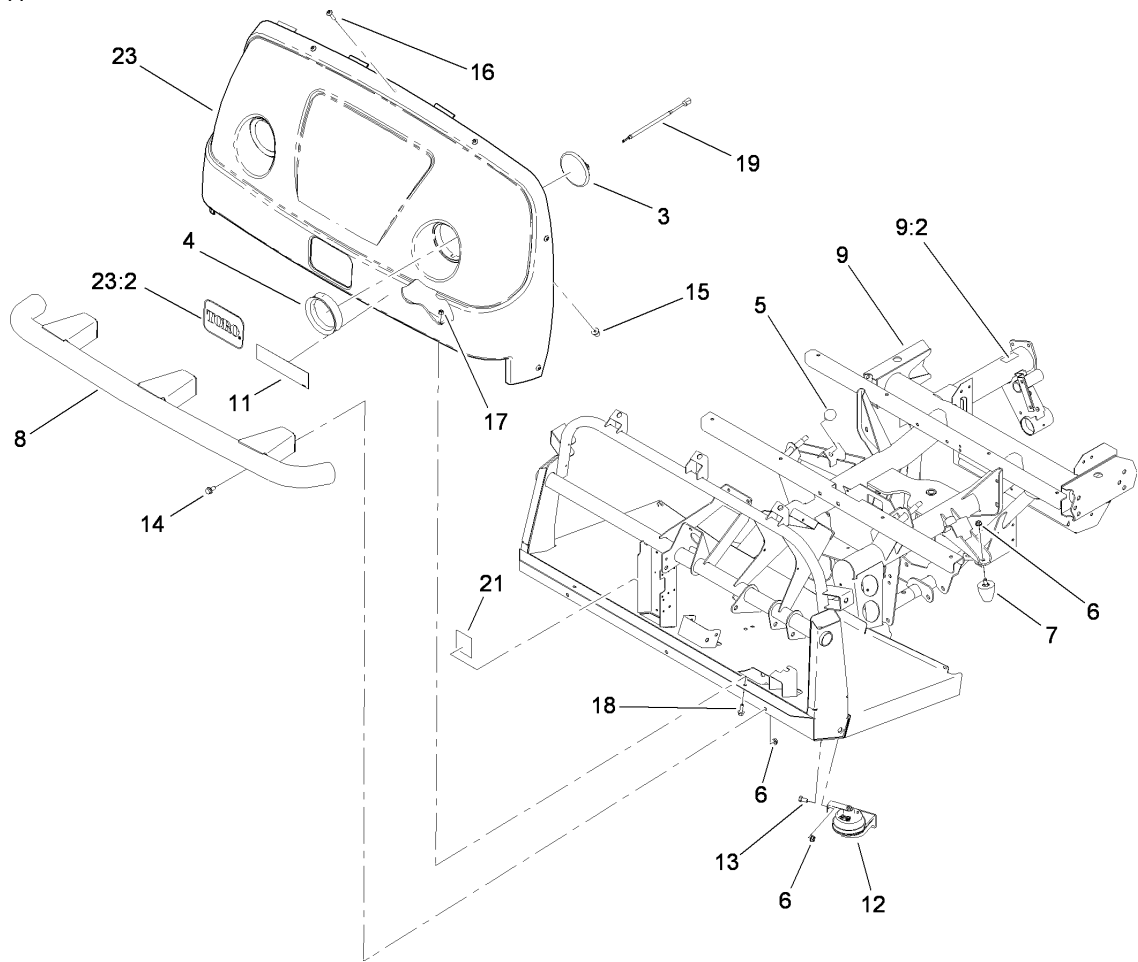


Hood and Bumper Assembly

Ref	Part No.	Qty.	Description				
3	99-7310	2	Headlight				
4	99-7311	2	Mount-Headlight				
5	87-2440	2	Bumper-Rubber				
6	3290-357	9	Nut-HHF, Whiz				
7	26-0071	2	Snubber-Rubber				
8	106-2369-03	1	Bumper ASM				
9	106-7884	1	Operator Frame ASM				
9:2	93-7814	1	Decal-Danger				
11	106-2395	1	Decal				
12	110-2594	1	Horn ASM				
13	323-4	1	Screw-HH				
14	3234-1	6	Screw-HHF				
15	106-7883	7	Nut-Well				
16	106-7922	7	Screw-PTH				
17	3296-29	2	Nut-Lock, NI				
18	3234-29	2	Screw-HHF				
19	106-2401	2	Harness-Headlight				
21	106-7894	1	Decal-Block, Fuse				
23	107-7979	1	Front Hood ASM				
23:2	62-5550	1	Decal				




Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	95-8999	1	Switch	18	114-9719	1	Harness-Wire, Front
2	106-2406	1	Gauge-Temperature	18:2	218-578	2	Fuse-10 Amp
3	95-7652	4	Light-Indicator	18:3	109355	2	Fuse-15 Amp
4	63-8360	2	Key-Ignition	19	322-3	3	Screw-HH
5	115-2319	1	Dash ASM	20	3296-29	3	Nut-Lock, NI
5:2	115-2320	1	Decal-Dash	21	3255-10	1	Washer-Lock / EXT
5:3	106-2355	1	Decal-Switch, Supervisor	22	114-9717	1	Harness-Wire, Rear (Diesel)
5:4	106-2353	1	Decal-Powerpoint	22:2	100-4918	2	Diode
5:5	110-2599	1	Decal-Warning, Dash	23	106-2360-03	1	Plate-Dash
6	18-2830	1	Button-Horn	24	99-7411	1	Point-Power
7	106-2405	1	Gauge-Fuel	25	99-7416	1	Cap
8	94-4208	1	Hourmeter	26	106-2358	1	Cover-Reservoir
9	106-2359	1	Plug-Cap	27	105-1406	1	Knob
13	32105-13	2	Screw-HWH	29	9202624	1	Washer
14	99-7420	3	Plug-Hole	30	33093-00	2	Washer-Flat
15	3296-2	2	Nut-Lock	31	33113-012	2	Screw-HH
16	27-2360	1	Switch	34	104-9368	1	Plug-Dome
16:1	218-446	1	Nut-Hex	36	321-4	1	Screw-HH
16:2	218-447	1	Washer-Lock	37	3296-16	1	Nut-Lock, NI
17	110-2580	1	Switch-Key, Supervisor				
17:1		1	Switch-Key				
17:2	108-8660	1	Nut-Mounting				
17:3	110-5221	1	Set-Key, Supervisor				
17:4	108-8659	1	Washer-Backup				

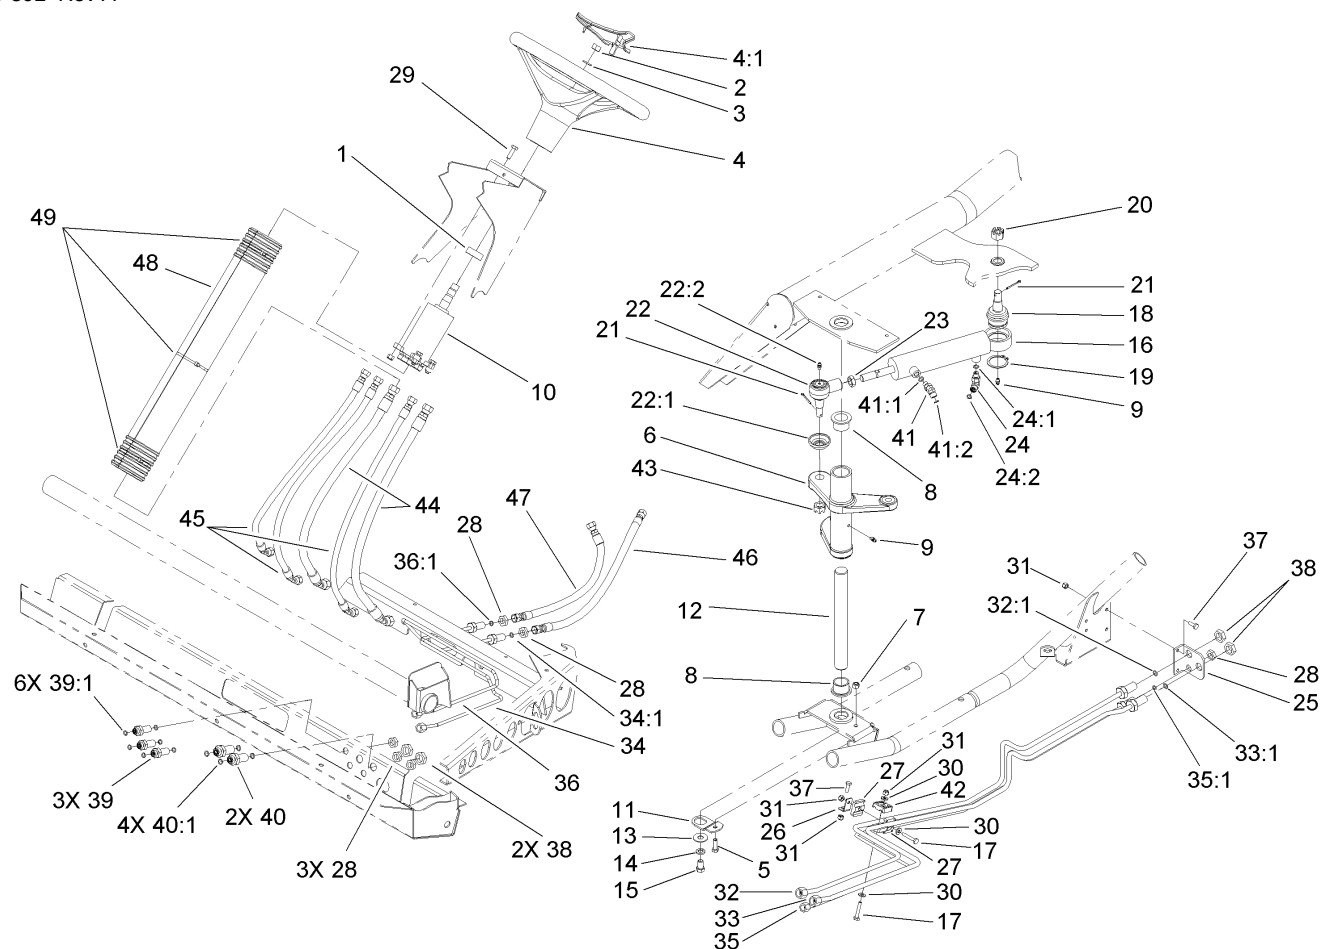 

Steering Assembly


Ref	Part No.	Qty.	Description
1	21-9260	1	Cover-Dust
2	3296-33	1	Nut-Lock, NI
3	3256-27	1	Washer-Flat
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	322-5	1	Screw-HH
6	106-2536	1	Arm-Pitman
7	3296-29	1	Nut-Lock, NI
8	94-1291	2	Bushing
9	302-5	2	Fitting-Grease
10	106-6726	1	Steering Pump ASM
11	106-2287	1	Plate
12	106-2271	1	Shaft-Pivot
13	3256-5	1	Washer-Flat
14	3253-6	1	Washer-Lock
15	324-2	1	Screw-HH
16	106-2262	1	Cylinder-HYD
17	321-8	2	Screw-HH
18	106-6774	1	Joint-Ball
19	32151-104	1	Ring-Retaining, External
20	32136-14	1	Nut-SHH
21	3272-12	2	Pin-Cotter
22	106-6898	1	Joint-Ball
22:1	106-6896	1	Seal

Ref	Part No.	Qty.	Description
22:2	302-5	1	Fitting-Grease
23	3220-11	1	Nut-Jam
24	340-132	1	Fitting-HYD, 90 DEG
24:1	237-78	1	O-Ring
24:2	237-21	1	O-Ring
25	106-7801-03	1	Bracket-Line, Steering
26	106-7807	1	Bracket-Line, Steering
27	106-7839	2	Clamp-Tube
28	340-78	6	Nut-Lock, Bulkhead
29	33114-020	4	Screw-HH
30	3256-22	3	Washer-Flat
31	3296-42	5	Nut-Lock, NI
32	108-6938	1	Tube-HYD
32:1	237-22	1	O-Ring
33	108-6939	1	Tube-HYD
33:1	237-22	1	O-Ring
34	106-7804	1	Tube-HYD
34:1	237-21	1	O-Ring
35	108-6940	1	Tube-HYD
35:1	237-21	1	O-Ring
36	106-7806	1	Tube-HYD
36:1	237-21	1	O-Ring
37	321-4	3	Screw-HH
38	340-70	4	Nut-Lock

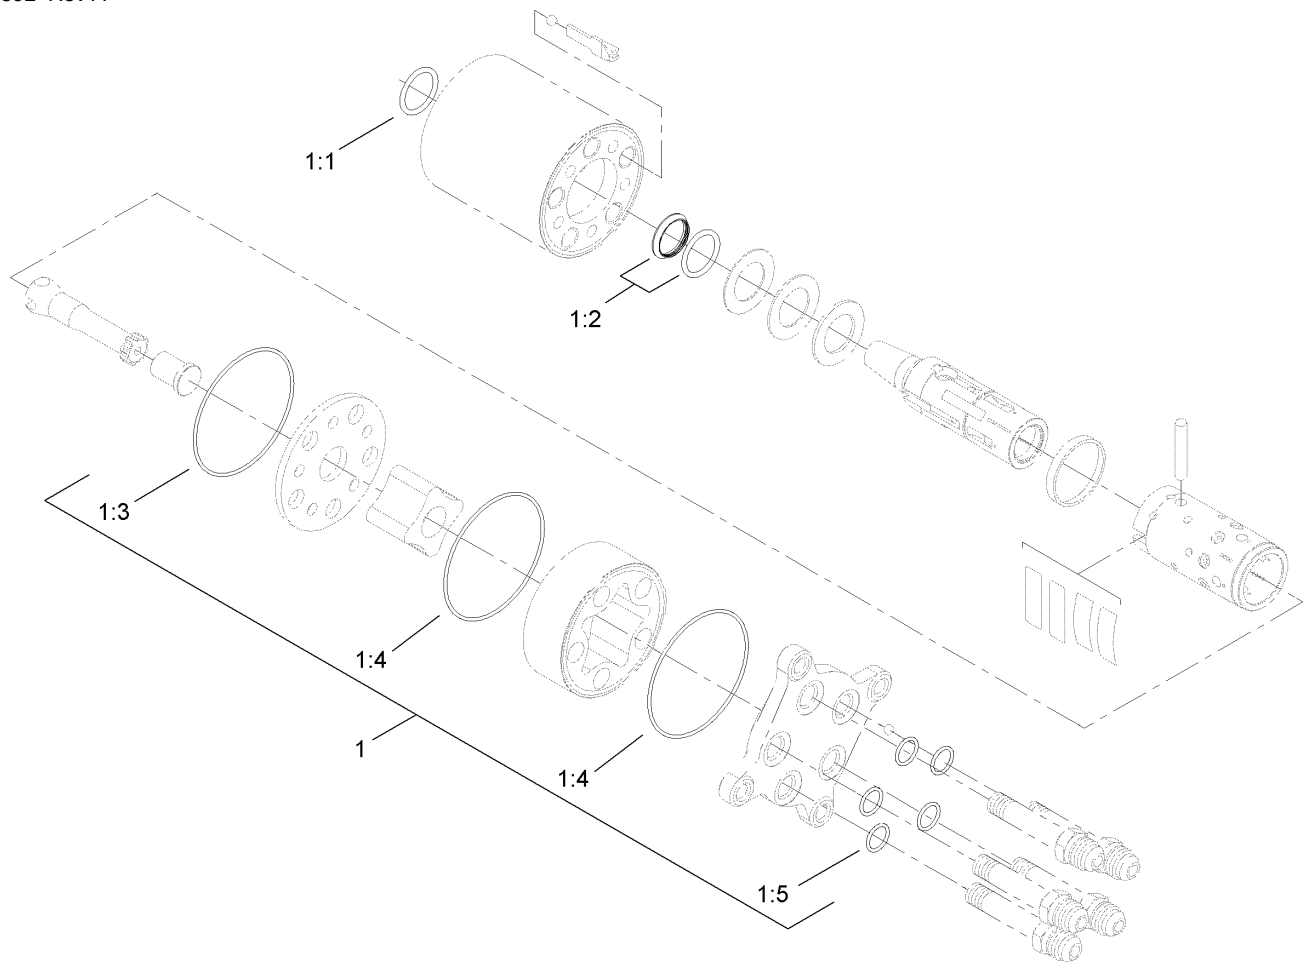 


Steering Pump Assembly No. 106-6726

Ref	Part No.	Qty.	Description				
1	106-6716	1	Seal Kit				
②1:1		1	Ring-Seal, Dust				
②1:2		1	Seal-Shaft				
②1:3		1	O-Ring				
②1:4		2	O-Ring				
②1:5		5	O-Ring				

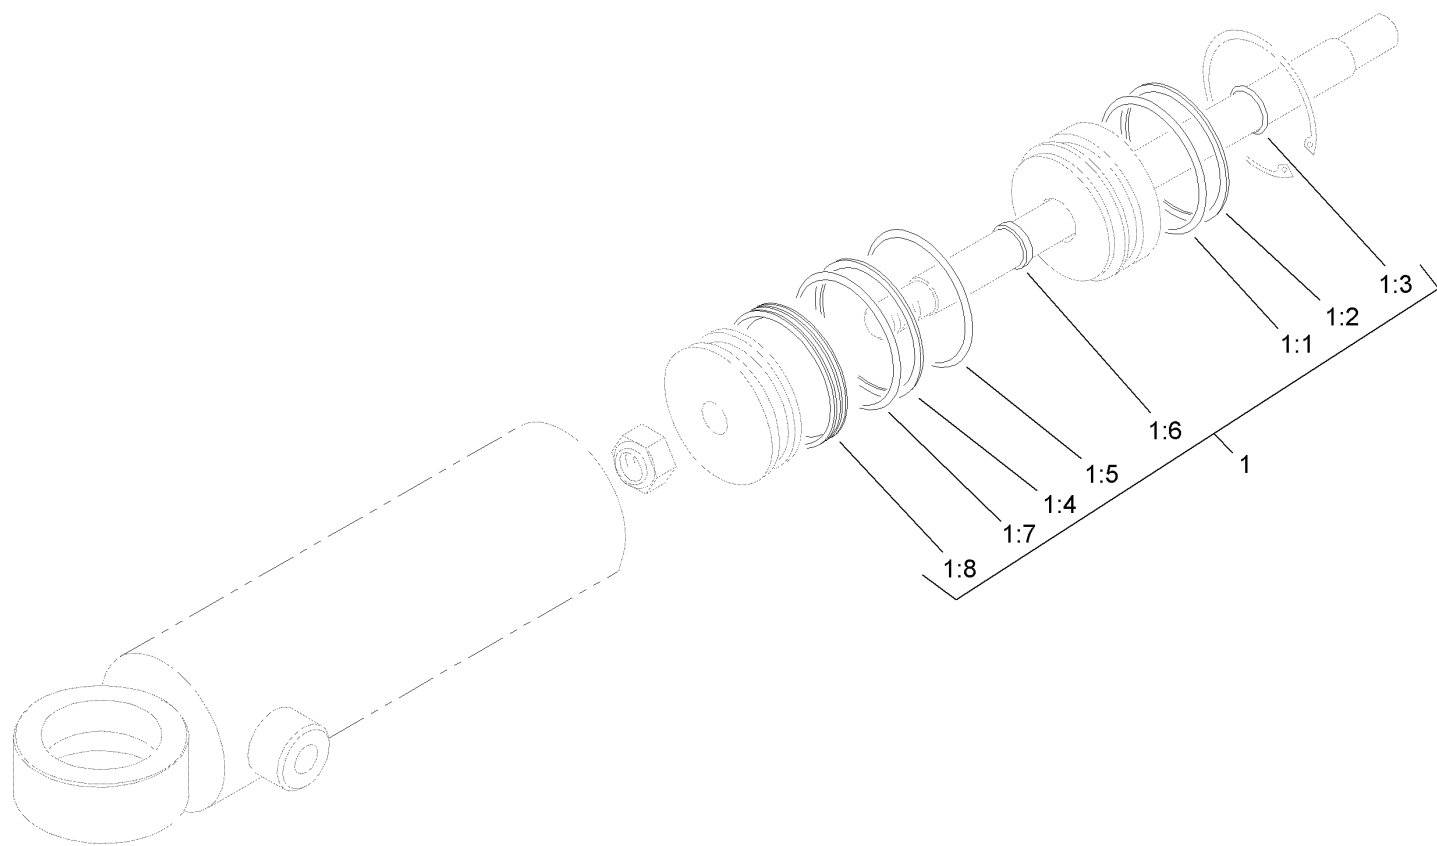 


Hydraulic Cylinder Assembly No. 106-2262

Ref	Part No.	Qty.	Description				
1	106-6712	1	Seal Kit				
1:1		1	O-Ring				
1:2		1	O-Ring				
1:3		1	Wiper				
1:4		1	O-Ring				
1:5		1	Back-Up				
1:6		1	Seal				
1:7		1	Seal				
1:8		1	Ring-Wear				

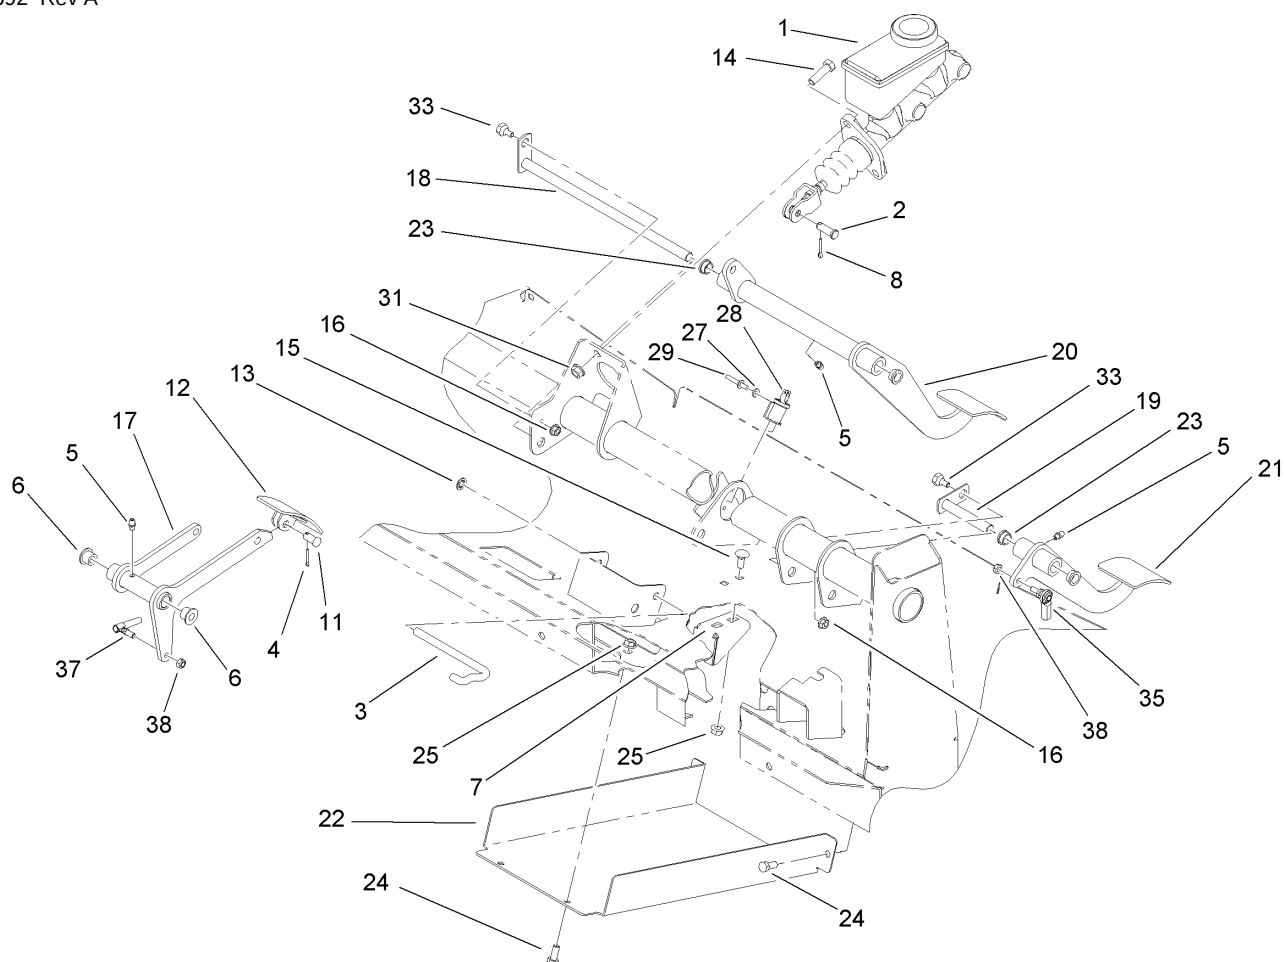 


Brake Accelerator and Clutch Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-6782	1	Cylinder-Master	28	95-1653	1	Switch-Pole, Single
2	283-2	1	Pin-Clevis	29	3290-382	2	Rivet-Pop
3	87-2880	1	Shaft-Pedal, Accelerator	31	3290-357	2	Nut-HHF, Whiz
4	3272-6	1	Pin-Cotter	33	63-3410	2	Screw-Shoulder
5	302-5	3	Fitting-Grease	35	110-2554	1	Rod End-Spherical
6	256-259	2	Bushing-Flange	37	18-1720	1	Governor Ball Joint ASM
7	106-2421	1	Bracket-Mount, Cable	38	3296-13	2	Nut-Lock NI
8	3272-10	1	Pin-Cotter				
11	283-85	1	Pin-Clevis				
12	93-8969-03	1	Pedal				
13	32151-56	1	Ring-Retaining, External				
14	323-7	2	Screw-HH				
15	3230-1	2	Bolt-CARR				
16	32128-33	2	Nut-HF				
17	106-2471-03	1	Arm-Pedal, Accelerator				
18	106-2475	1	Brake Shaft ASM				
19	106-2476	1	Clutch Shaft ASM				
20	106-2461-03	1	Brake Pedal ASM				
21	106-2457-03	1	Clutch Pedal ASM				
22	106-2427-03	1	Cover				
23	256-156	4	Bushing-Flange				
24	322-3	4	Screw-HH				
25	32128-20	6	Nut-HF				
27	3256-21	2	Washer-Flat				

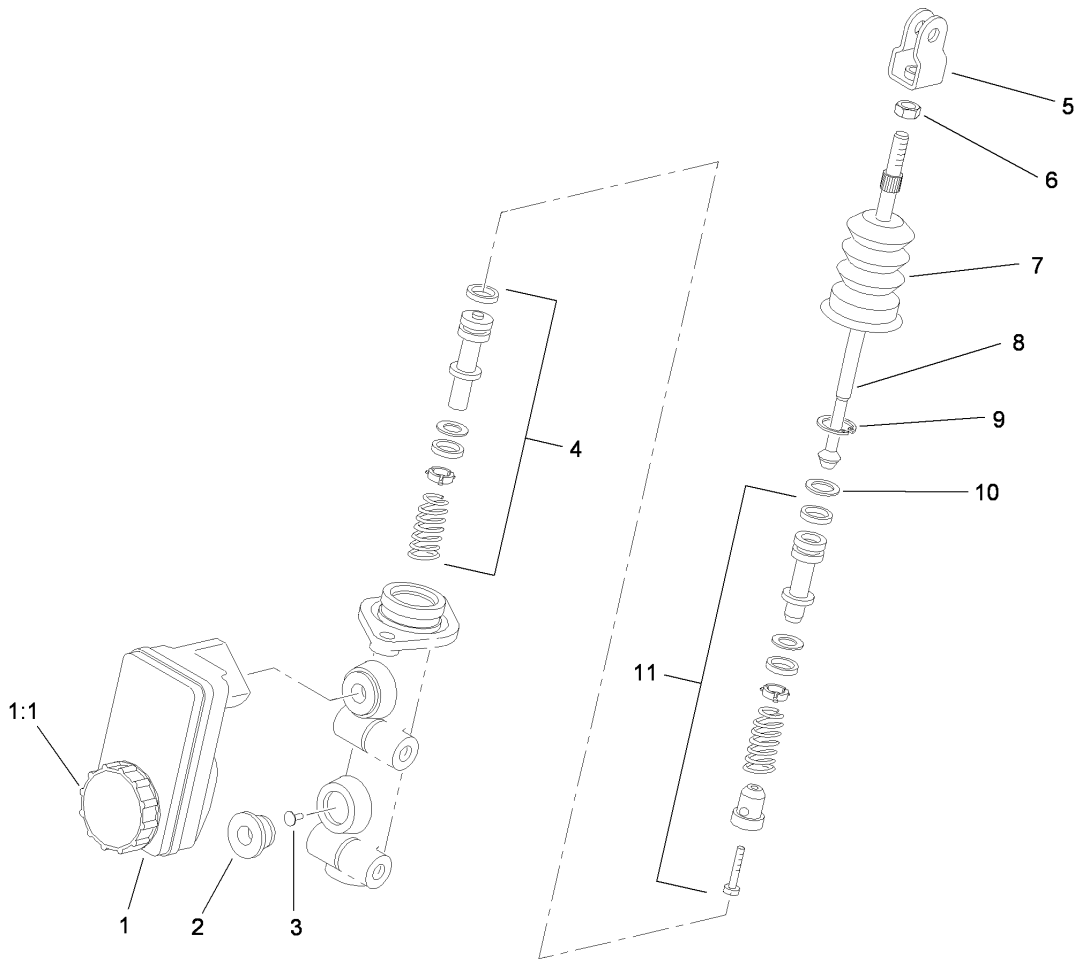 


Master Cylinder Assembly No. 104-6782

Ref	Part No.	Qty.	Description				
1	104-6845	1	Reservoir ASM				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Ring-Snap				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

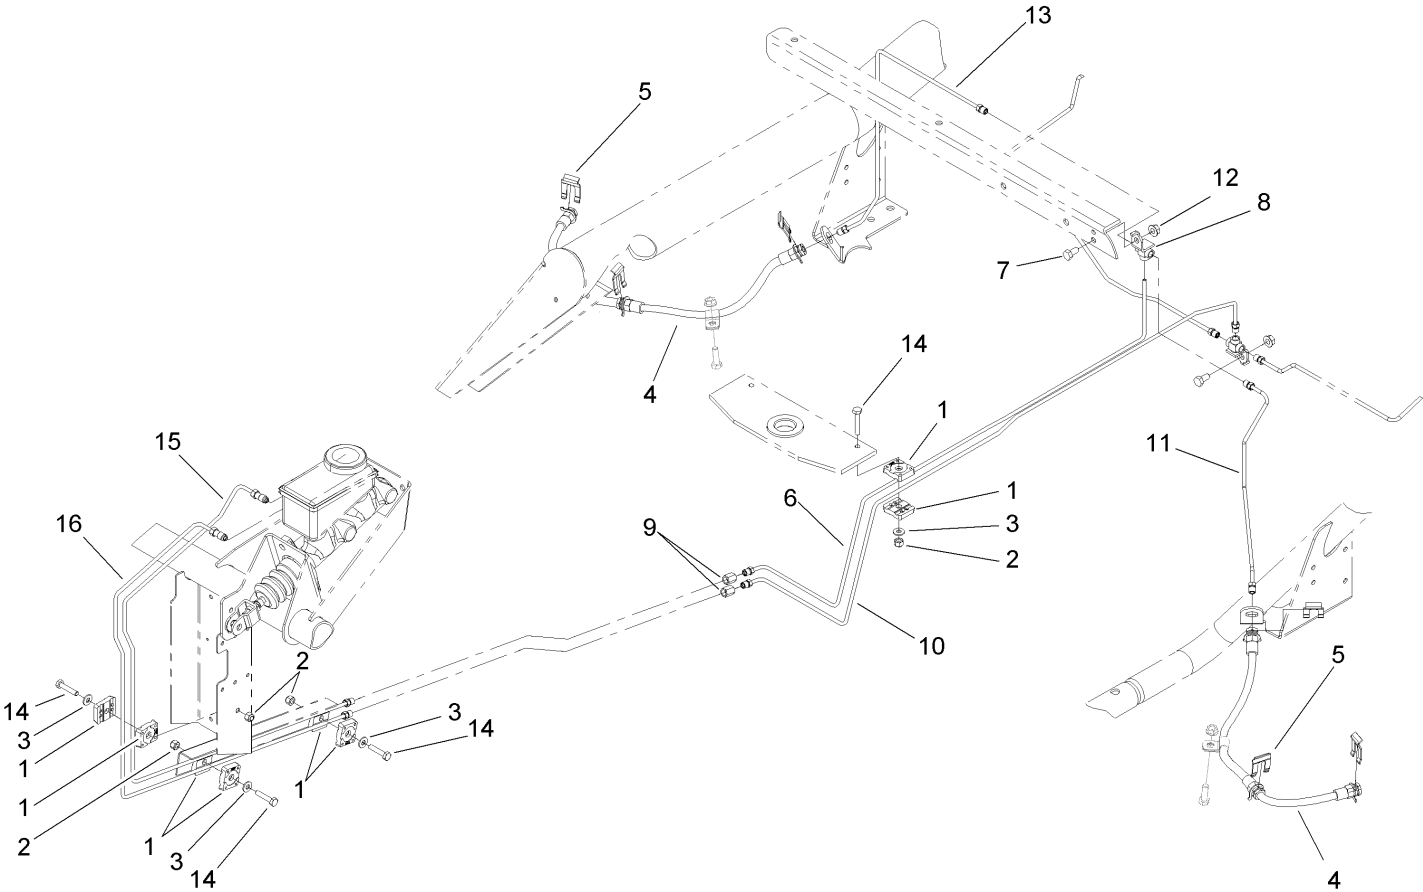 


Hydraulic Brake Assembly

Ref	Part No.	Qty.	Description				
1	87-7660	8	Clamp-Tube				
2	3296-42	4	Nut-Lock, NI				
3	3256-22	4	Washer-Flat				
4	93-7123	2	Front Brake Hose ASM				
5	87-3580	2	Clip-Retainer				
6	106-6686	1	Tube ASM				
7	322-2	1	Screw-HH				
8	87-3560	1	Tee				
9	87-3570	2	Union				
10	106-6687	1	Tube ASM				
11	106-6688	1	Tube ASM				
12	32128-20	1	Nut-HF				
13	106-6689	1	Tube ASM				
14	321-8	4	Screw-HH				
15	106-6683	1	Tube ASM				
16	106-6684	1	Tube ASM				

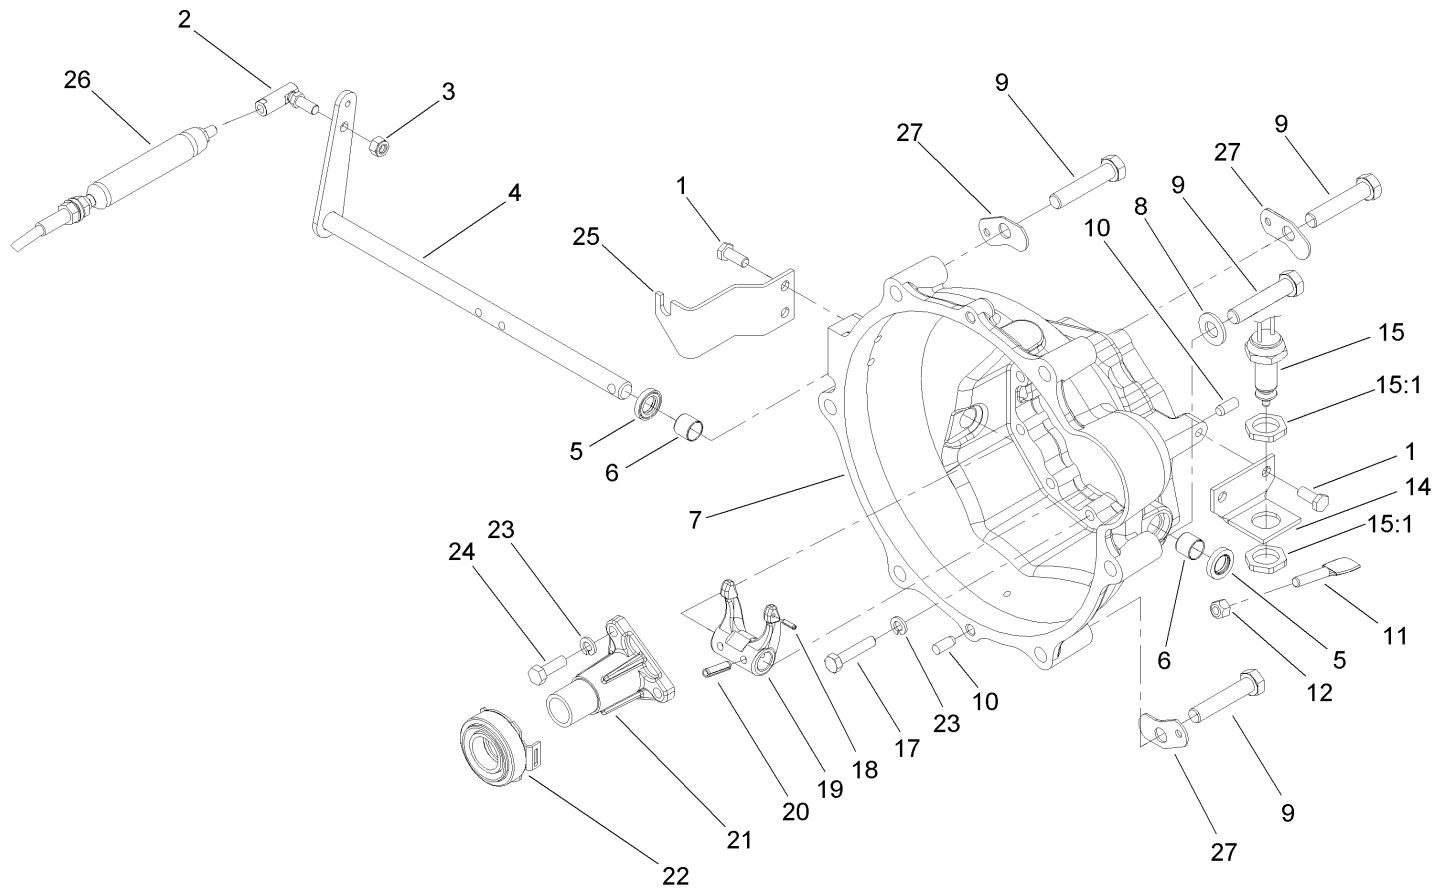 


Clutch Linkage Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33114-020	4	Screw-HH	26	110-2548	1	Cable-Clutch
2	2411-33	1	Balljoint-RH (W/Grommet)	27	87-6410	3	Bracket-Harness
3	3296-4	1	Nut-Lock				
4	105-1702	1	Release Shaft ASM				
5	87-1920	2	Seal-Oil				
6	87-3770	2	Bushing-Housing, Bell				
7	104-9249	1	Housing-Bell				
8	3256-26	3	Washer-Flat				
9	3215-2	6	Screw-HH				
10	87-1910	4	Pin-Dowel				
11	87-5360	1	Paddle-Switch, Clutch				
12	3296-29	1	Nut-Lock, NI				
14	87-5350	1	Bracket-Switch, Clutch				
15	87-5490	1	Switch-Clutch				
15:1	3218-20	2	Nut-Jam				
17	33114-040	9	Screw-HH				
18	32121-7	1	Pin-Roll, Slotted				
19	87-5300	1	Fork-Clutch				
20	32121-24	2	Pin-Spring				
21	115-2259	1	Guide-Release				
22	110-2538	1	Bearing-Release, Clutch				
23	3253-4	12	Washer-Lock				
24	33114-025	3	Screw-HH				
25	112-3116	1	Bracket-Cable, Clutch				

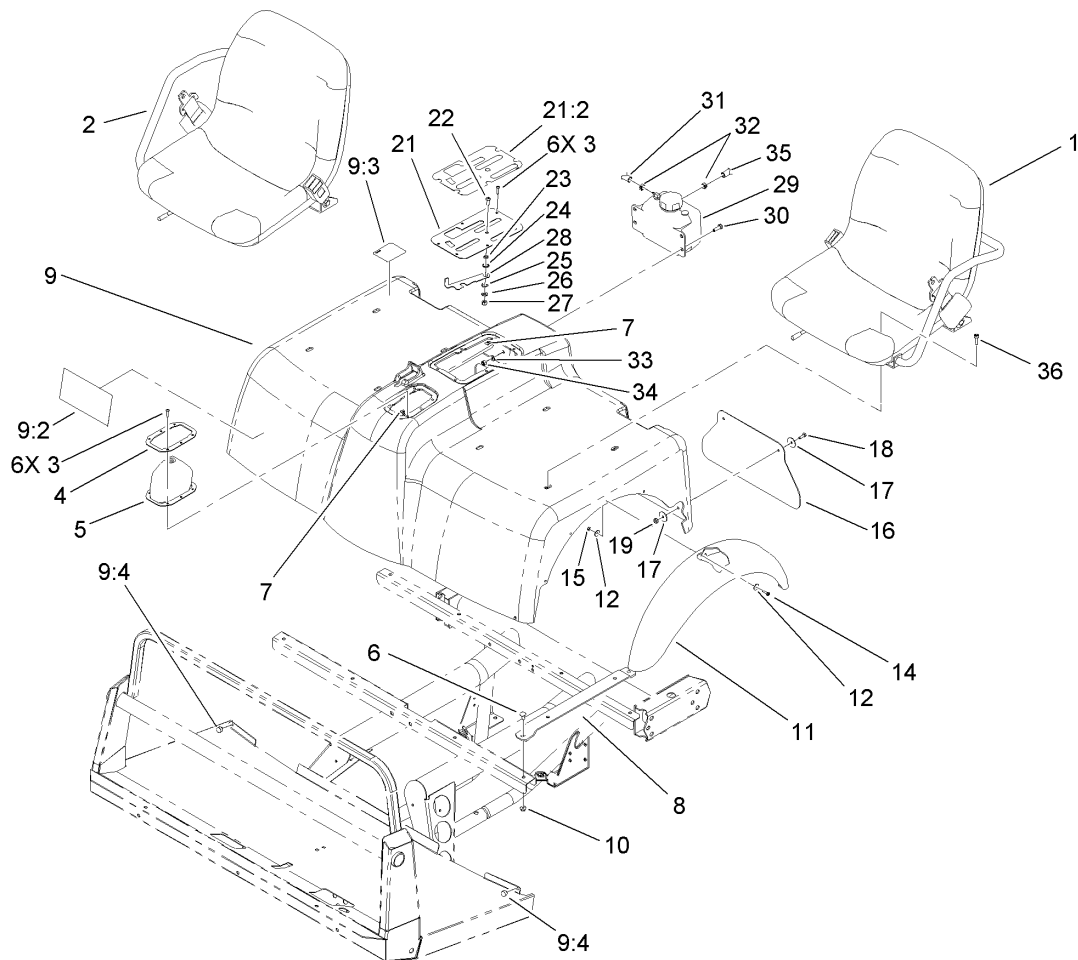 


Shroud and Seat Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		1	LH Seat ASM	23	82-4240	1	Spacer-Bearing
②2		1	RH Seat ASM	24	94-8196	1	Washer-Nylon
3	32144-36	12	Screw-PPH	25	3290-221	1	Washer-Spring
4	87-3760-03	1	Plate-Boot, Shift	26	3256-23	1	Washer-Flat
5	87-8620	1	Shift Boot ASM	27	3296-29	1	Nut-Lock, NI
6	3230-1	8	Bolt-CARR	28	106-7984	1	Lever-Detent
7	106-2388	12	Clip-Fastener	29	87-3710	1	Reservoir-Coolant
8	107-7957-03	4	Seat Bracket ASM	30	322-5	4	Screw-HH
9	106-2362	1	Seatbase ASM	31	110-4104	1	Hose-Fuel
9:2	106-2384	1	Decal-Reference, Quick	32	92-2379	2	Clamp-Hose
9:3	93-9448	1	Decal-Fuel	33	3256-23	4	Washer-Flat
9:4	107-8042	2	Bumper-Rubber	34	3296-29	4	Nut-Lock, NI
10	104-8300	8	Nut-Flange, NI	35	110-6186	1	Hose-Fuel
11	106-2375	2	Fender-Front	36	3274-22	8	Screw-HSH
12	3256-61	20	Washer-Flat				
14	32105-13	10	Screw-HWH				
15	3296-2	10	Nut-Lock				
16	106-2378	2	Mudflap				
17	3256-55	8	Washer-Flat				
18	321-4	4	Screw-HH				
19	3296-16	4	Nut-Lock, NI				
21	106-7886	1	Control Plate ASM				
21:2	106-2377	1	Decal-Console				
22	3274-55	1	Screw-HSBH				

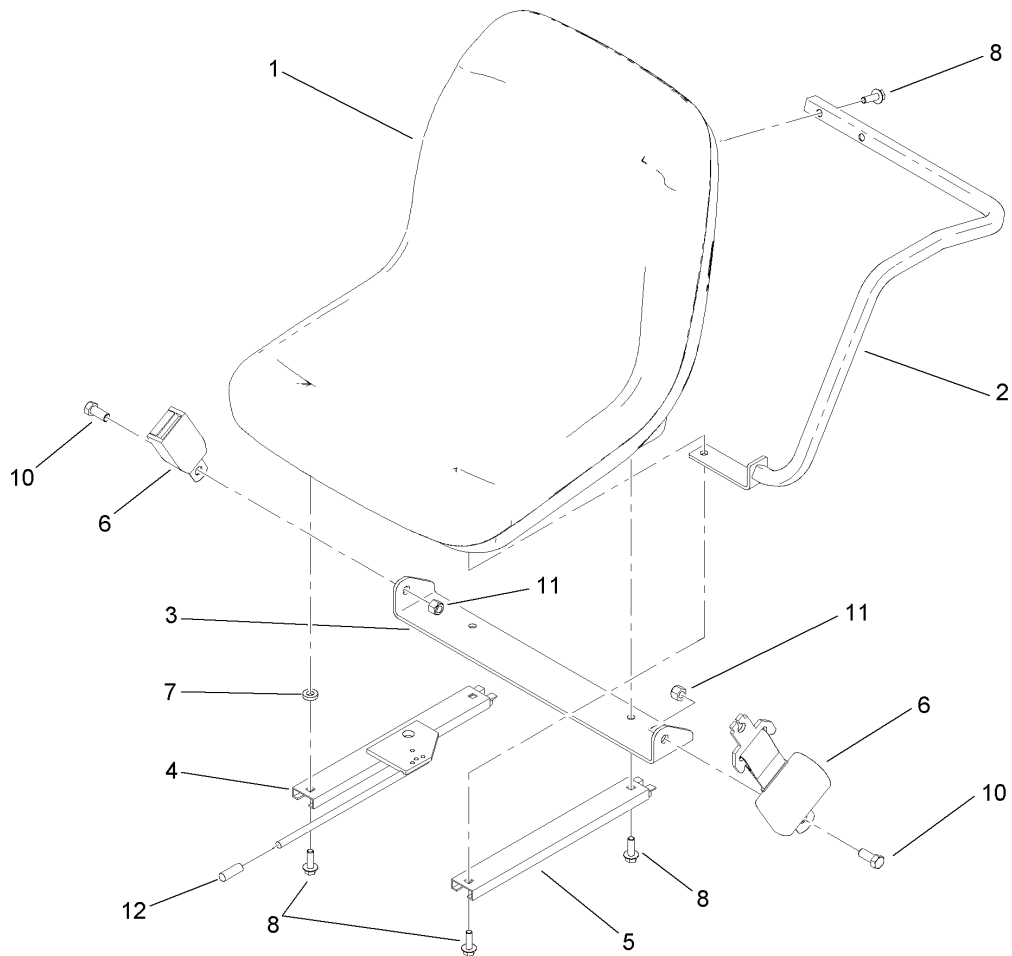 


LH Seat Assembly

Ref	Part No.	Qty.	Description				
1	112-2923	1	Seat ASM				
2	106-7842	1	LH Armrest ASM				
3	106-7845	1	Bracket-Belt, Seat				
4	106-7847	1	Adjuster-Seat, W/Handle				
5	107-7959	1	Adjuster-Slave, 7 Inch				
6	106-7848	1	Seat Belt ASM				
7	80-7730	1	Spacer				
8	3234-29	6	Screw-HHF				
10	3212-4	2	Screw-HH				
11	3296-7	2	Nut-Lock				
12	106-7953	1	Grip-Gray				

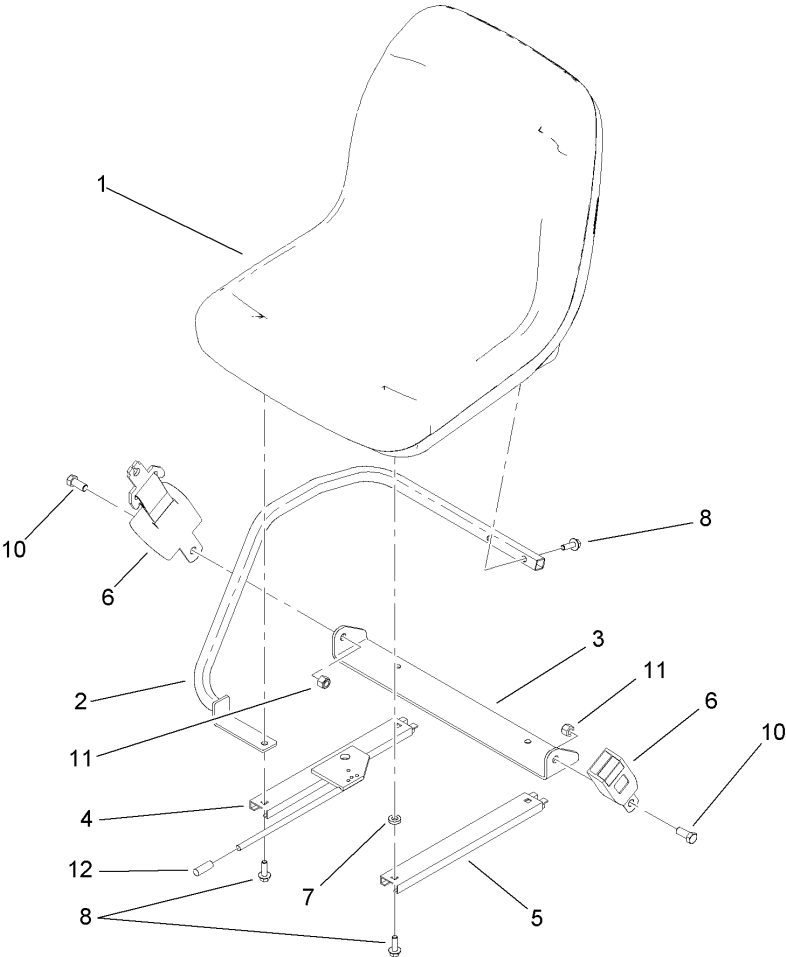 


RH Seat Assembly

Ref	Part No.	Qty.	Description				
1	112-2923	1	Seat ASM				
2	106-7844	1	RH Armrest ASM				
3	106-7845	1	Bracket-Belt, Seat				
4	106-7847	1	Adjuster-Seat, W/Handle				
5	107-7959	1	Adjuster-Slave, 7 Inch				
6	106-7848	1	Seat Belt ASM				
7	80-7730	1	Spacer				
8	3234-29	6	Screw-HHF				
10	3212-4	2	Screw-HH				
11	3296-7	2	Nut-Lock				
12	106-7953	2	Grip-Gray				

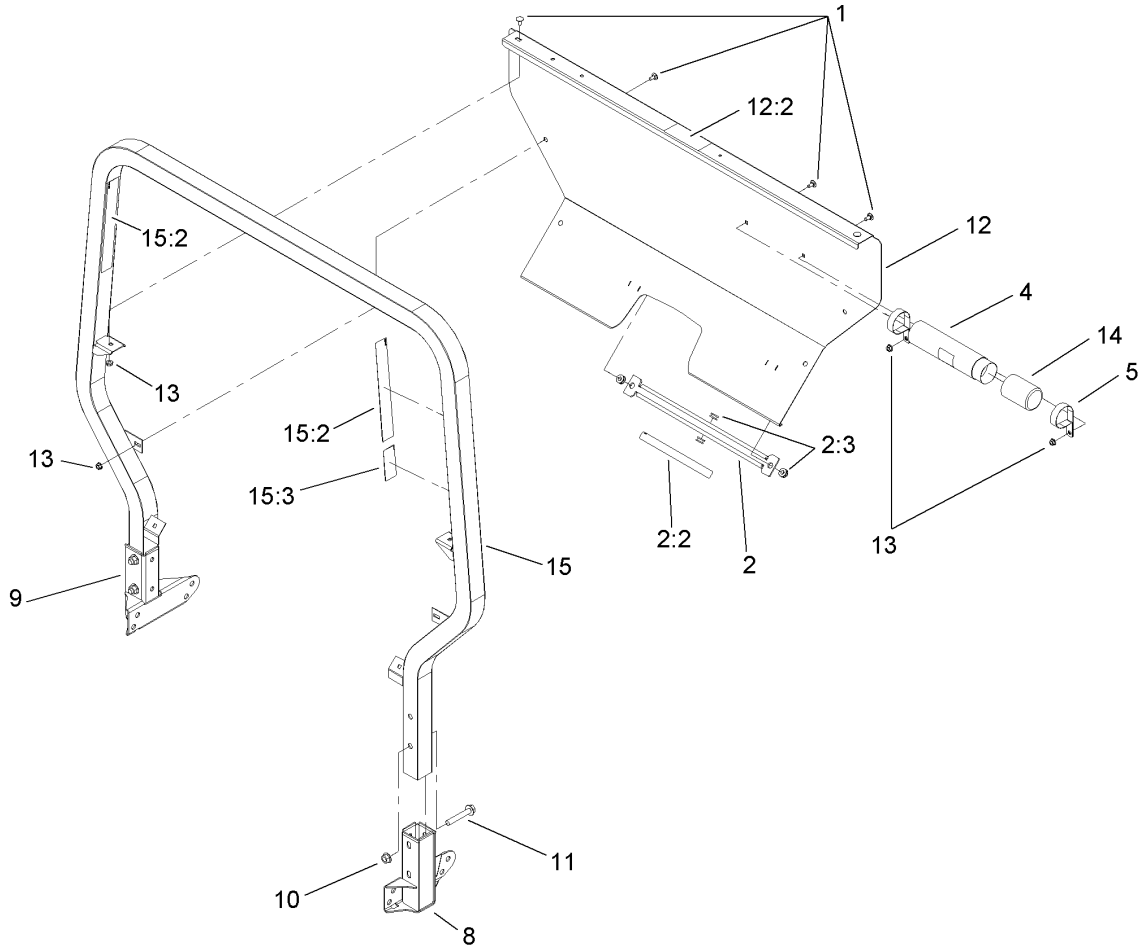 

Roll-Over Protection System Assembly


Ref	Part No.	Qty.	Description				
1	3230-18	8	Screw-CARR				
2	105-7960	1	Bed Support ASM				
2:2	93-9852	1	Decal-Warning				
2:3	92-5972	4	Grommet-Rubber				
4	104-7050	1	Housing-Manual				
5	2412-133	2	R-Clamp				
8	87-6950-03	1	LH Receiver ASM				
9	87-6960-03	1	RH Receiver ASM				
10	32128-23	4	Nut-HF				
11	3234-40	4	Screw-HF				
12	106-2409	1	ROPS Cover ASM				
12:2	105-4215	1	Decal-Caution				
13	32128-20	8	Nut-HF				
14	104-7048	1	Cap-Housing				
15	106-2412	1	ROPS ASM				
15:2	106-7767	2	Decal-ROPS				
15:3	93-9850	1	Decal-ROPS, Ce				

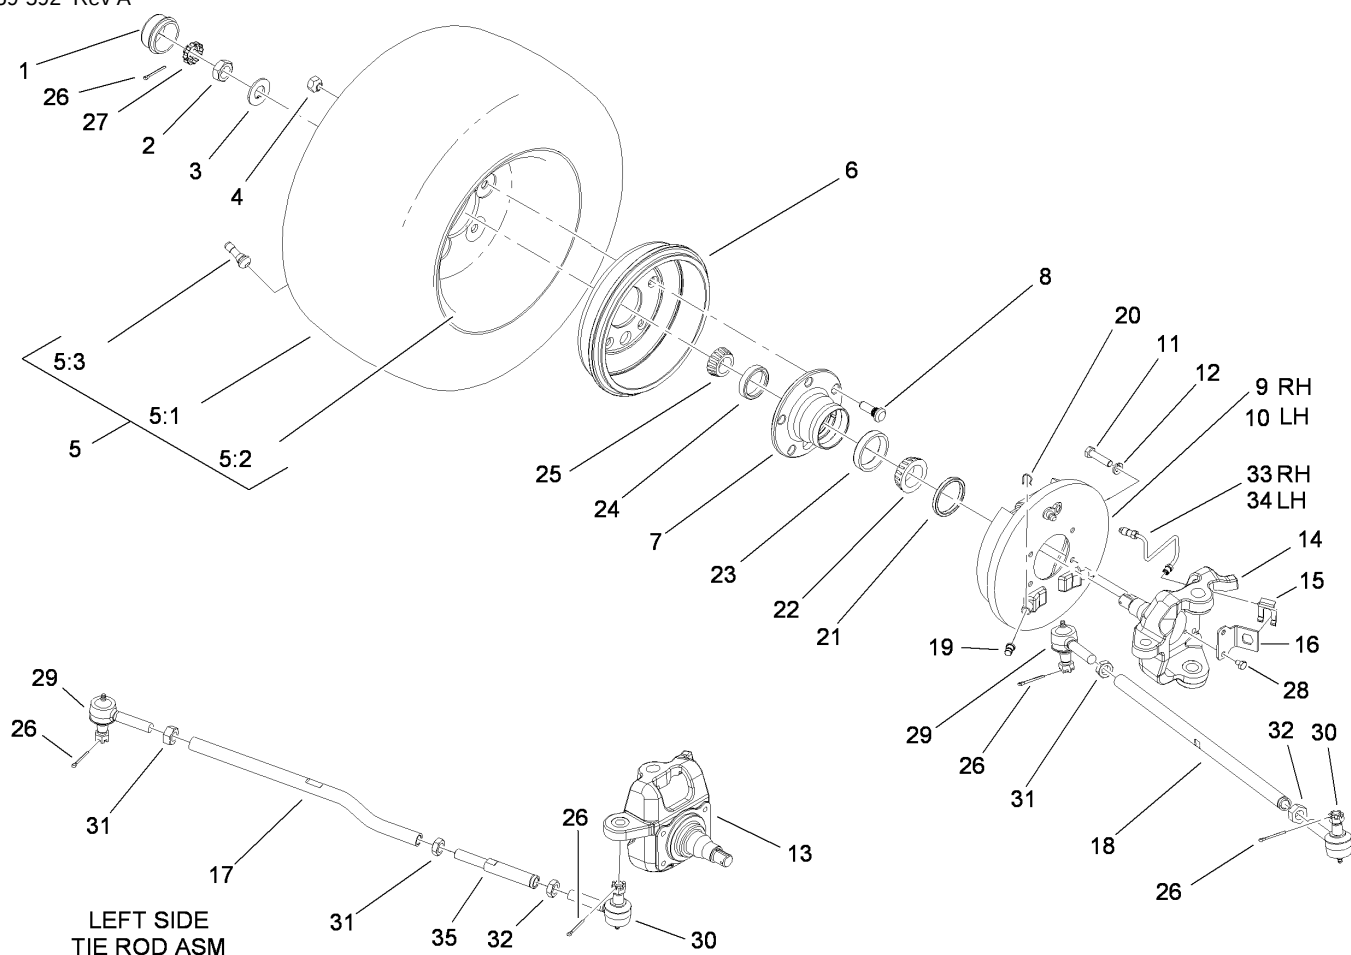 

Front Wheel Assembly


Ref	Part No.	Qty.	Description
1	241-119	2	Cap-Dust
2	3220-7	2	Nut-Jam
3	93-0309	2	Washer-Tab
4	23-7270	10	Nut-Wheel
5		2	Tire And Wheel Assembly
5:1	112-3163	1	Tire
5:2	87-5720	1	Front Rim ASM
5:3	232-27	1	Stem-Valve
6	93-7128	2	Drum-Brake
7	87-5560	2	Hub-Front
8	87-8730	10	Stud
9	112-7969	1	RH Front Brake ASM
10	112-7970	1	LH Front Brake ASM
11	3235-22	8	Screw-HH, Lock
12	3253-21	8	Washer-Lock
13	108-6942	1	Spindle-LH
14	106-6746	1	Spindle-RH
15	87-3580	2	Clip-Retainer
16	106-6747	2	Bracket-Spindle
17	108-6936	1	Rod-Tie, LH
18	106-2327	1	Rod-Tie, RH
19	87-3450	2	Plug-Plate, Brake (Front)
20	87-3310	2	Clip-Cable, Brake
21	108-7019	2	Seal-Shaft

Ref	Part No.	Qty.	Description
22	254-106	2	Cone-Bearing, Tapered
23	254-107	2	Cup-Bearing, Tapered
24	254-72	2	Bearing-Cup, Tapered
25	254-94	2	Bearing-Cone, Tapered
26	3272-12	6	Pin-Cotter
27	93-0307	2	Nut-Lock, Retainer
28	321-1	4	Screw-HH
29	110-2537	2	Ball Joint-RH
30	110-2536	2	Ball Joint-LH
31	3220-11	3	Nut-Jam
32	3218-21	2	Nut-Jam
33	106-7970	1	RH Brake Tube ASM
34	106-7971	1	LH Brake Tube ASM
35	108-6937	1	Turnbuckle-Tie Rod, LH

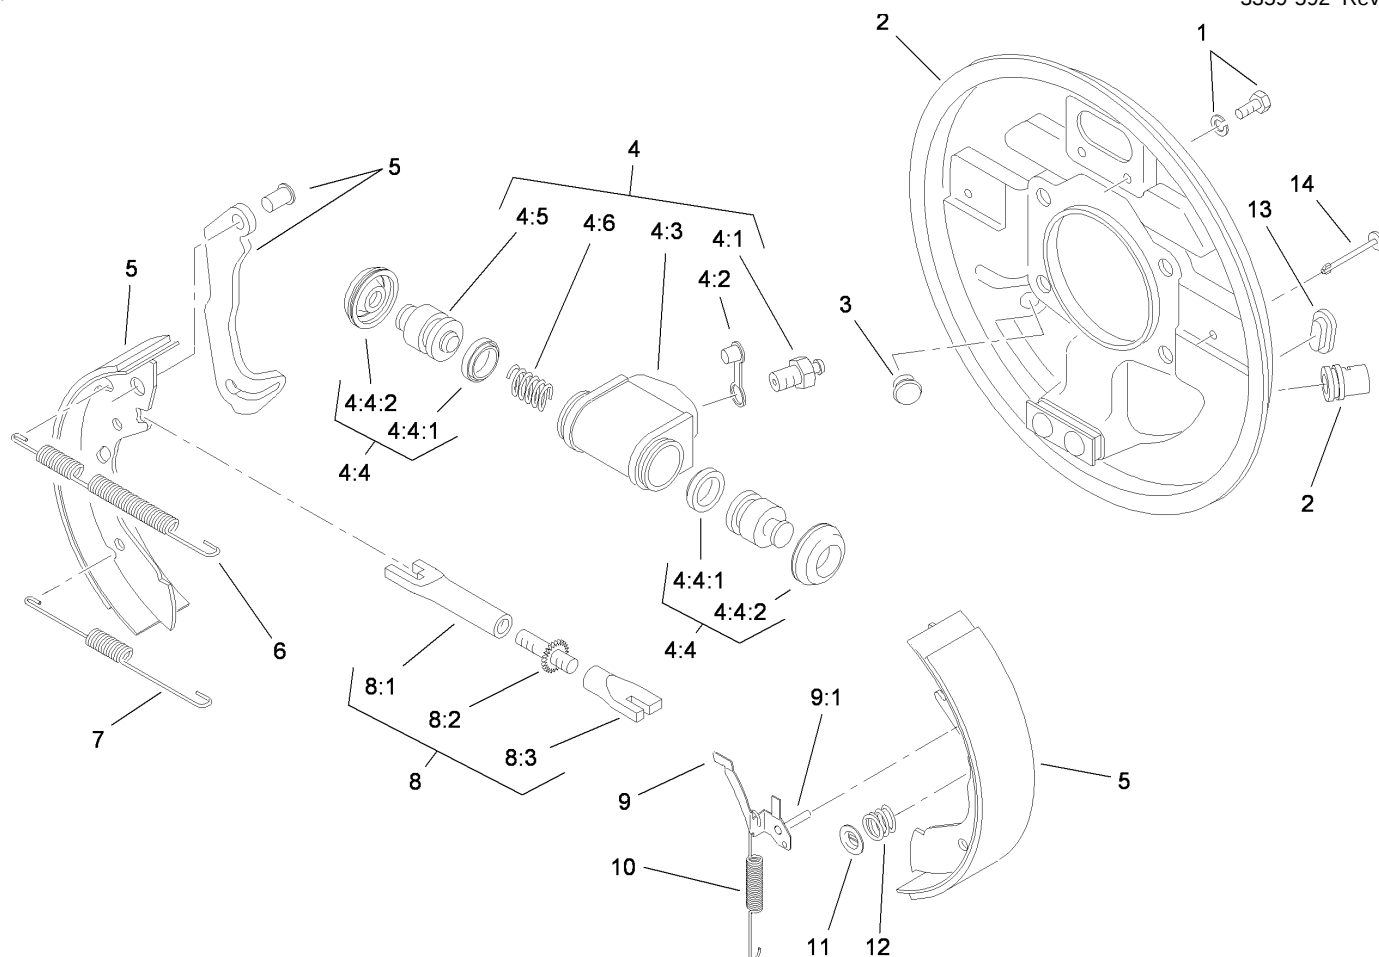 


RH Front Brake Assembly No. 112-7969

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set	13	92-4134	2	Plug-Inspection
2	112-7967	1	RH Backplate ASM	14	92-4133	2	Pin-Hold Down, Shoe
3	92-4146	1	Plunger ASM				
4	92-4118	1	Wheel Cylinder ASM				
4:1	92-4113	1	Screw-Bleed				
4:2	92-4114	1	Cap-Screw, Bleed				
4:3		1	Body				
4:4	92-4119	1	Seal Kit				
4:4:1		2	Seal-L Type				
4:4:2		2	Cover-Dust				
4:5		2	Piston				
4:6		1	Spring				
5	112-7978	1	Lined Shoe Kit				
6	92-4148	1	Spring-Return, Shoe (Upper, RH)				
7	92-4149	1	Spring-Return, Shoe (Lower)				
8	92-4145	1	RH Adjustor ASM				
8:1		1	Pushrod-Female				
8:2		1	Bolt-Adjuster				
8:3		1	Sleeve-Adjuster				
9	92-4124	1	RH Pawl Lever ASM				
9:1		1	Pin-Pawl				
10	92-4151	1	Spring-Adjuster, RH				
11	92-4131	2	Washer-Hold Down, Shoe				
12	92-4152	2	Spring-Hold Down, Shoe				

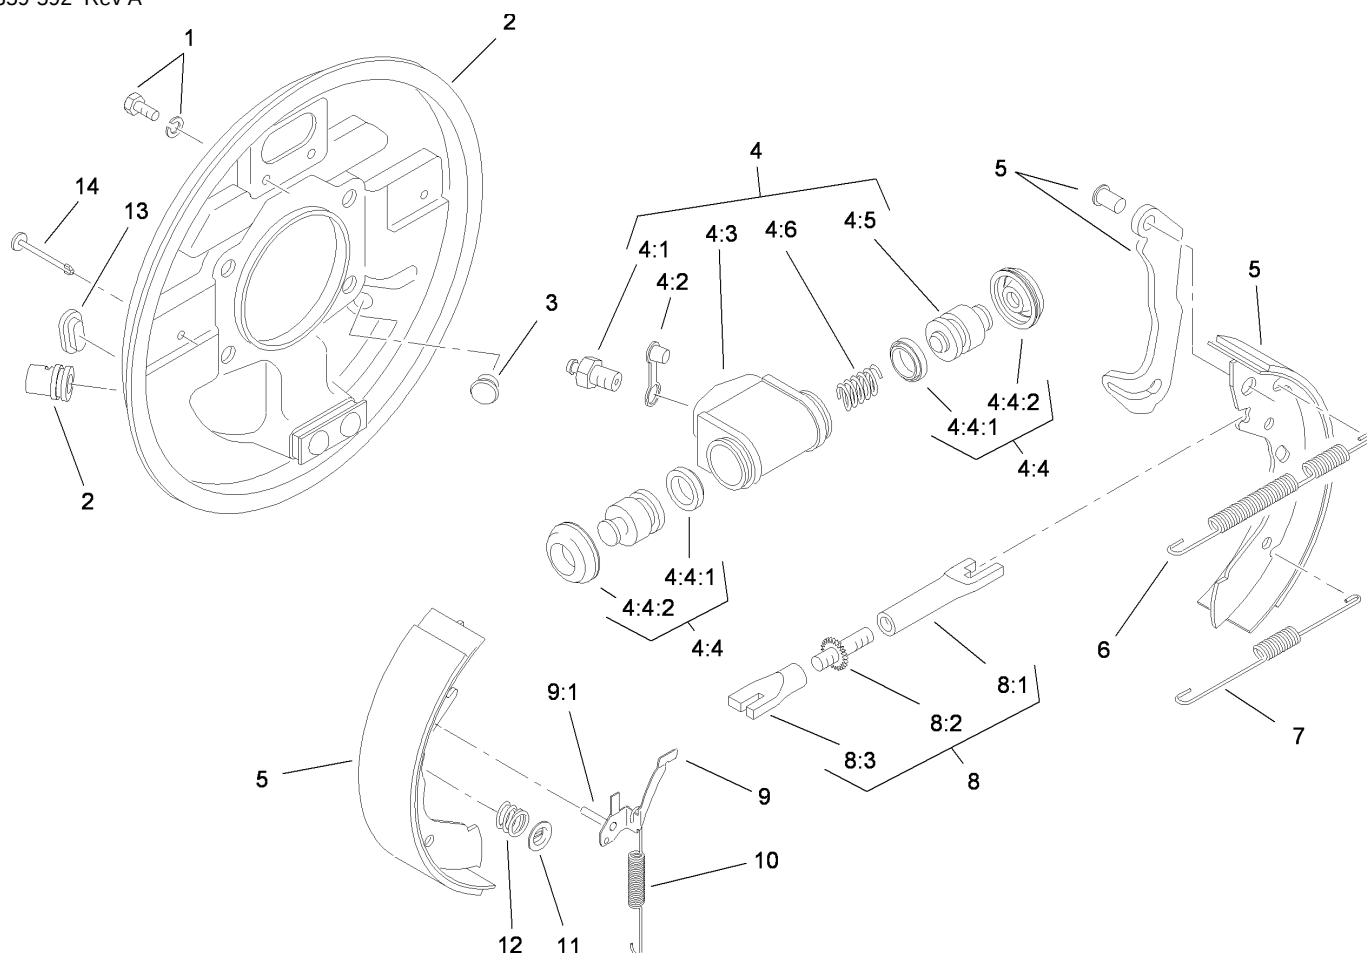 

LH Front Brake Assembly No. 112-7970


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set	13	92-4134	2	Plug-Inspection
2	112-7968	1	LH Backplate ASM	14	92-4133	2	Pin-Hold Down, Shoe
3	92-4146	1	Plunger ASM				
4	92-4117	1	Wheel Cylinder ASM				
4:1	92-4113	1	Screw-Bleed				
4:2	92-4114	1	Cap-Screw, Bleed				
4:3		1	Body				
4:4	92-4119	1	Seal Kit				
4:4:1		2	Seal-L Type				
4:4:2		2	Cover-Dust				
4:5		2	Piston				
4:6		1	Spring				
5	112-7978	1	Lined Shoe Kit				
6	92-4147	1	Spring-Return, Shoe (Upper, LH)				
7	92-4149	1	Spring-Return, Shoe (Lower)				
8	92-4144	1	LH Adjuster ASM				
8:1		1	Pushrod-Female				
8:2		1	Bolt-Adjuster				
8:3		1	Sleeve-Adjuster				
9	92-4123	1	LH Pawl Lever ASM				
9:1		1	Pin-Pawl				
10	92-4150	1	Spring-Adjuster, LH				
11	92-4131	2	Washer-Hold Down, Shoe				
12	92-4152	2	Spring-Hold Down, Shoe				

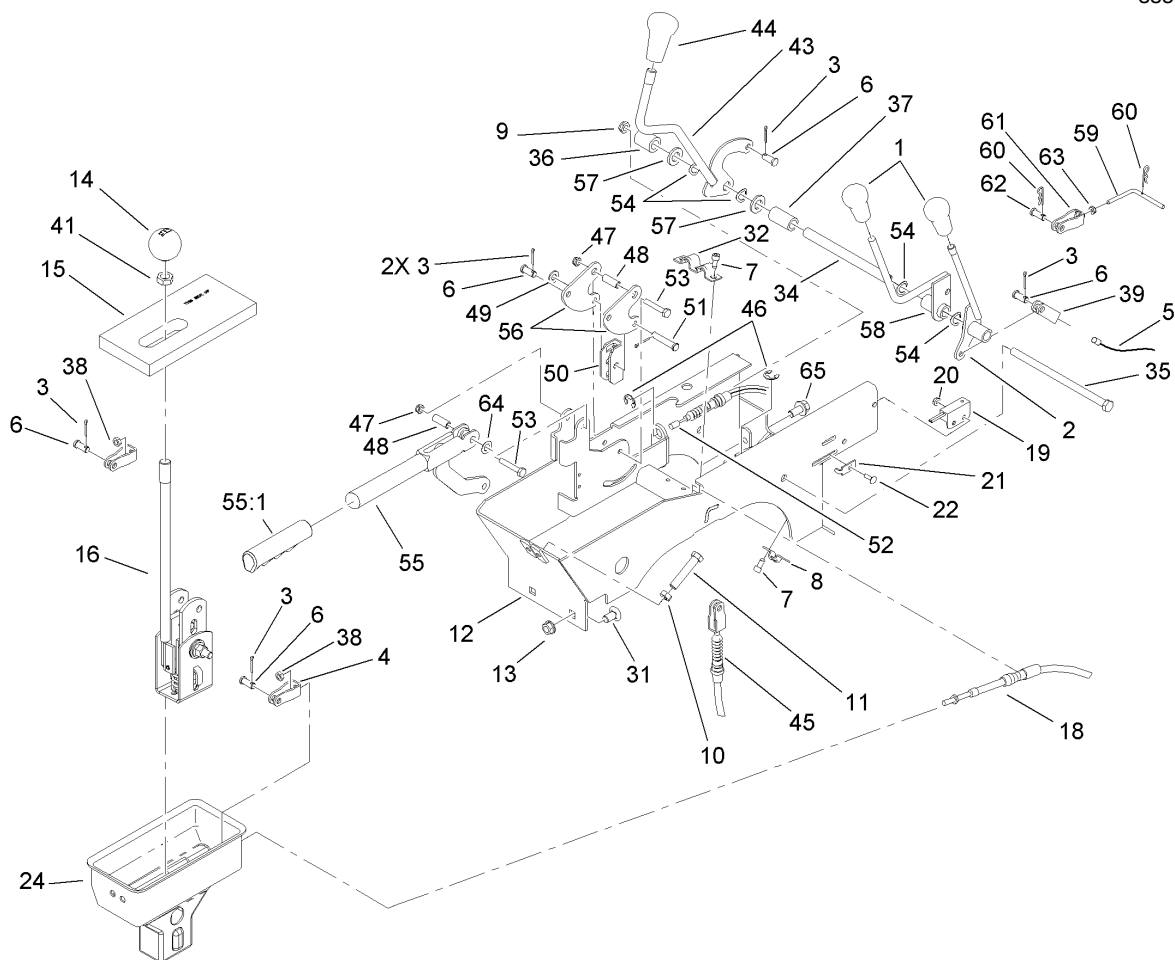 

Console Assembly


Ref	Part No.	Qty.	Description
1	106-7903	2	Knob-Control
2	106-7828	1	Lever ASM
3	3272-6	6	Pin-Cotter
4	87-2310	2	Clevis-Cable
5	106-6698	1	Cable-Hi-Low
6	283-62	5	Pin-Clevis
7	65-5220	5	Screw-HSH, Thread Forming
8	87-4340	1	Clamp-Cable
9	3296-59	1	Nut-Lock, NI
10	3217-7	2	Nut-Hex
11	323-10	2	Screw-HH
12	108-6914-03	1	Lever Support ASM
13	3290-357	2	Nut-HHF, Whiz
14	87-6720	1	Knob-Shift
15	87-6570	1	Seal-Boot, Lower
16	106-7887	1	Shift ASM
18	87-4260	2	Cable-Selector, Gear
19	100-1270	1	Switch-Proximity
20	3296-12	1	Nut-Lock
21	100-4872	1	Plate-Switch, Neutral
22	3229-34	1	Bolt-CARR
24	106-2376	1	Boot-Shift, Lower
31	3231-21	2	Screw-CARR
32	87-4960	1	Clamp-Cable

Ref	Part No.	Qty.	Description
34	106-7833	1	Spacer
35	323-36	1	Screw-HH
36	66-6501	1	Spacer-Wheel
37	106-7835	1	Spacer
38	3220-1	2	Nut-Jam
39	87-7160	1	Cable Clevis ASM
41	3218-18	1	Nut-Jam
43	87-5030	1	Lever-Lock, Differential
44	106-7952	1	Knob
45	87-4460	1	Cable-Lock, Differential
46	32120-47	3	Ring-Retaining, External
47	3296-56	2	Nut-Lock, NI
48	114402	2	Spacer
49	3256-23	1	Washer-Flat
50	87-3480	1	Bracket-Equalizer, Cable
51	94-3829	1	Pin-Clevis
52	106-6691	2	Cable-Brake, Park
53	321-9	2	Screw-HH
54	3290-221	4	Washer-Spring
55	104-6842	1	Lever-Brake, Park
55:1	106-7972	1	Grip-Handle
56	106-7814	2	Bellcrank
57	33096-00	2	Washer-Flat
58	106-7960	1	HYD Lever ASM

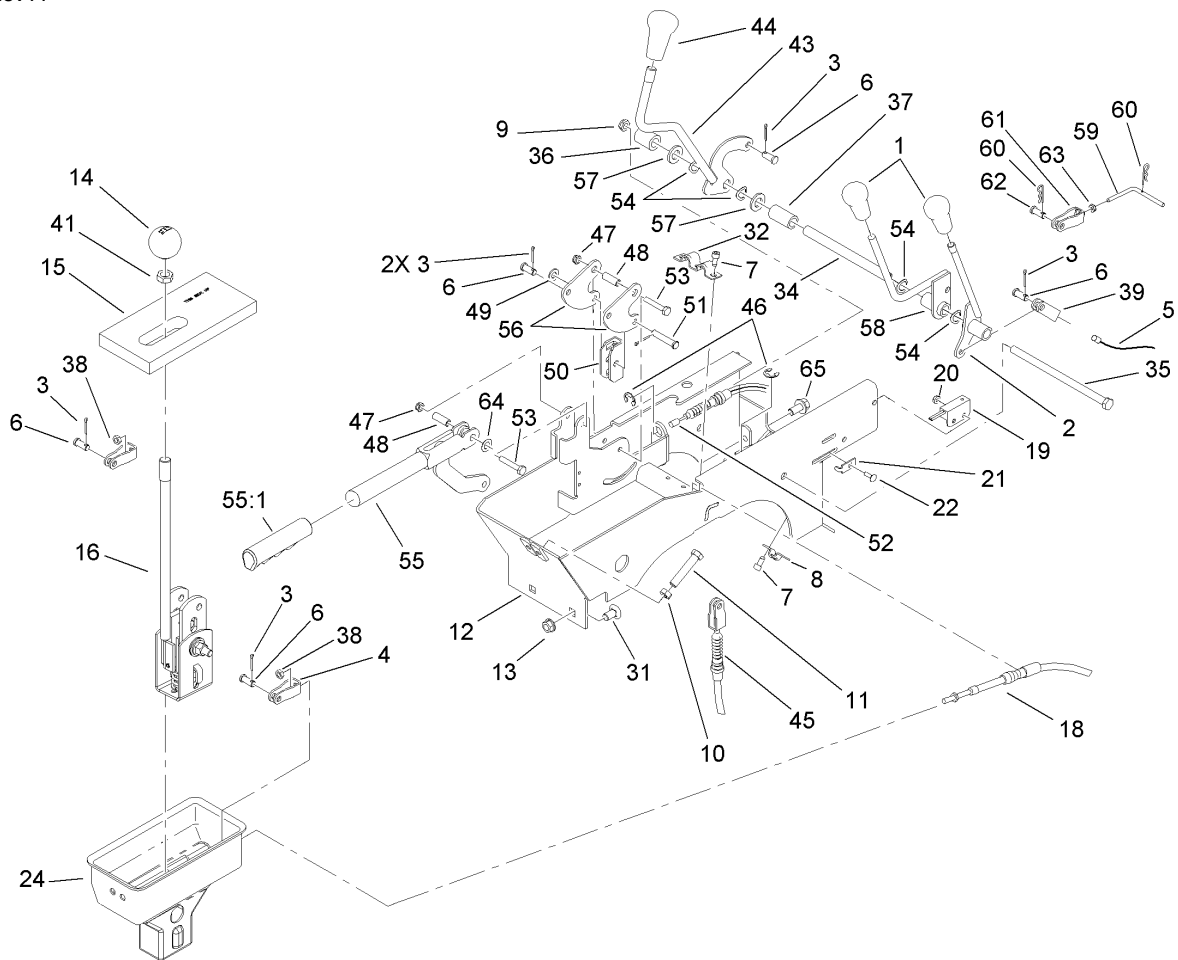 


Console Assembly (continued)

Ref	Part No.	Qty.	Description				
59	107-8000	1	Rod-Link				
60	3290-307	2	Pin-Hair				
61	107-7966	1	Clevis ASM				
62	283-62	1	Pin-Clevis				
63	3219-14	1	Nut-Hex				
64	3290-477	1	Washer-Curved				
65	3234-12	2	Screw-HHF				

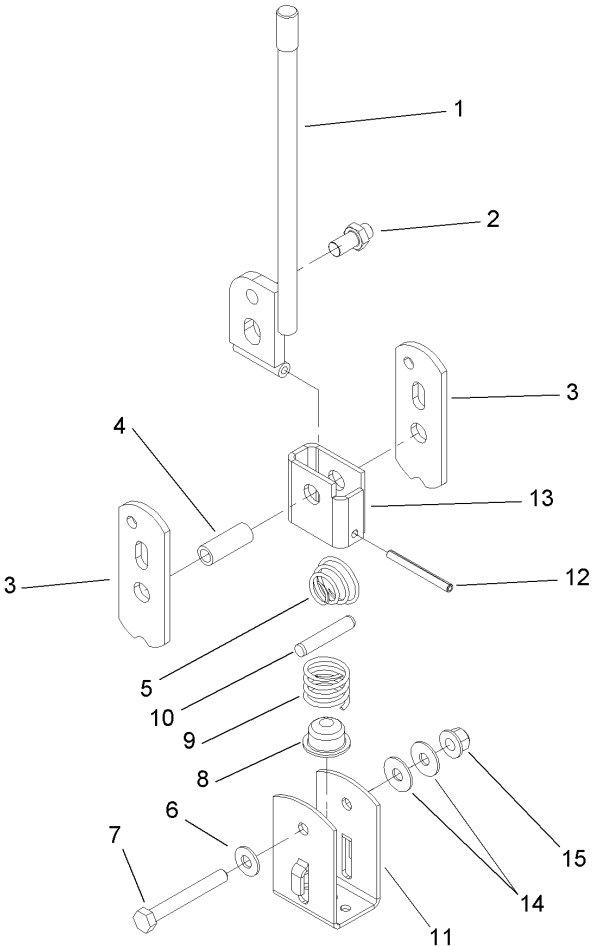 

Shift Assembly No. 106-7887


Ref	Part No.	Qty.	Description				
1	87-2040	1	Shift Lever ASM				
2	87-3650	1	Pin-Shift				
3	87-3540	2	Link-Shift				
4	87-2520	1	Tube-Pivot				
5	87-2900	1	Spring-Compression				
6	87-8640	1	Washer-Flat				
7	322-12	1	Screw-HH				
8	87-3530	1	Button-Shifter				
9	87-3660	1	Spring-Compression				
10	3290-507	1	Pin-Dowel				
11	87-3520	1	Clevis				
12	32121-48	1	Pin-Spring				
13	87-6040	1	Bracket-Shifter				
14	3290-456	2	Washer-Belleville				
15	104-8300	1	Nut-Flange, NI				

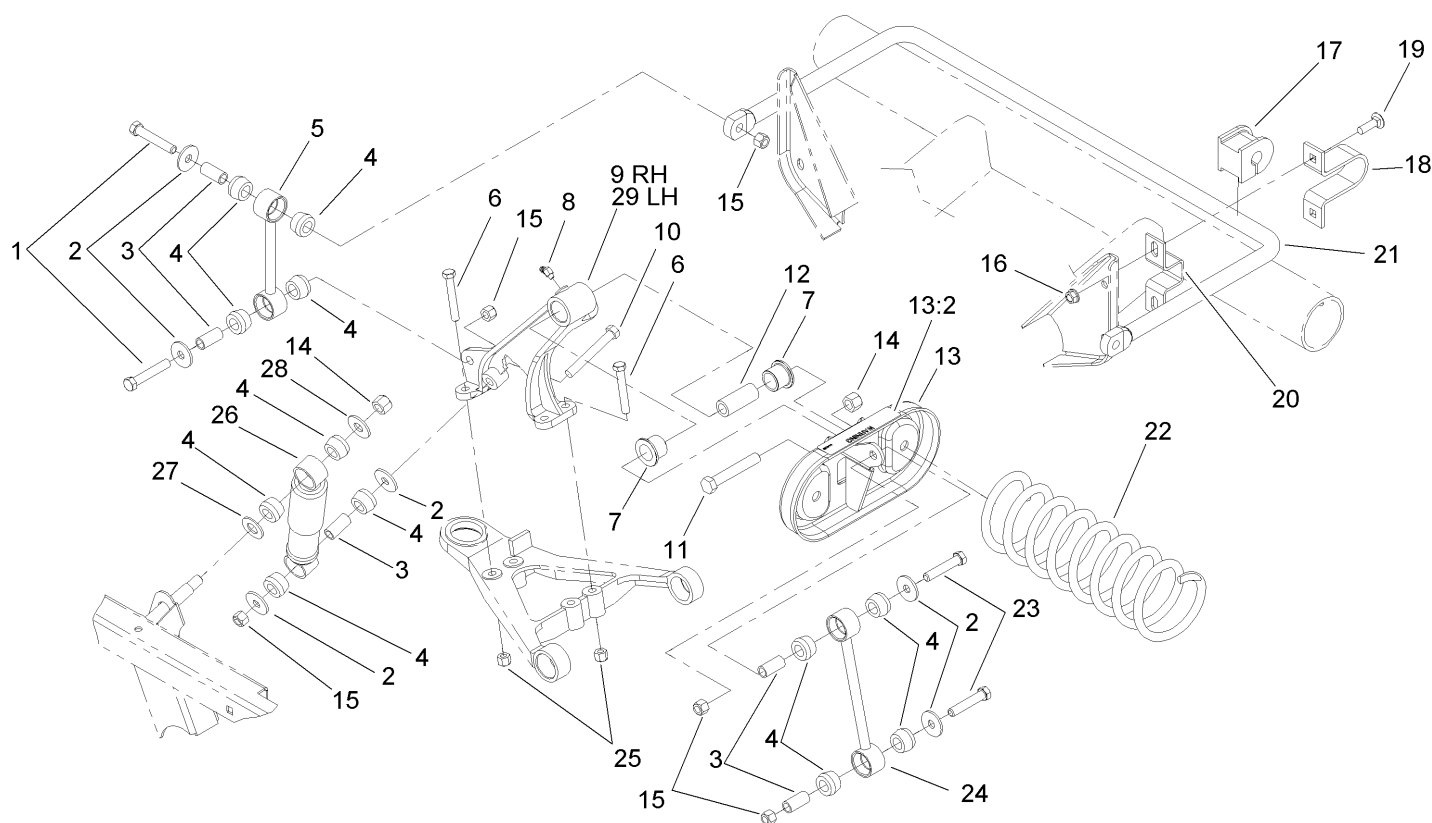 

Front Suspension Assembly


Ref	Part No.	Qty.	Description
1	324-10	4	Screw-HH
2	87-5330	12	Washer
3	87-3600	10	Spacer-Absorber, Shock
4	87-3920	24	Bushing
5	87-3860-03	2	Anti-Sway Bar Link ASM
6	323-12	8	Screw-HH
7	33-3090	4	Bushing
8	302-11	2	Fitting-Lube, 45 DEG
9	87-0150-03	1	Tower-Control Arm, RH
10	324-13	2	Screw-HH
11	325-13	2	Screw-HH
12	87-2500	2	Sleeve-Spring, Pivot
13	105-7958	2	Spring Cradle ASM
13:2	93-9879	1	Decal-Warning
14	3296-23	4	Nut-Lock, NI
15	3296-48	10	Nut-Lock, NI
16	3290-357	4	Nut-HHF, Whiz
17	87-3910	2	Bushing-Rubber
18	87-4010-03	2	Clamp-Bar, Sway
19	3231-25	4	Screw-CARR
20	87-3890-03	2	Bracket-Bar, Sway
21	87-3850-03	1	Bar-Sway, Anti
22	105-4183-01	2	Spring-Compression
23	324-9	4	Screw-HH

Ref	Part No.	Qty.	Description
24	106-2302-03	2	Stabilizer Link ASM
25	3296-39	8	Nut-Lock, NI
26	87-3110	2	Absorber-Shock
27	3256-27	2	Washer-Flat
28	3256-6	2	Washer-Flat
29	87-0160-03	1	Tower-Control Arm, LH

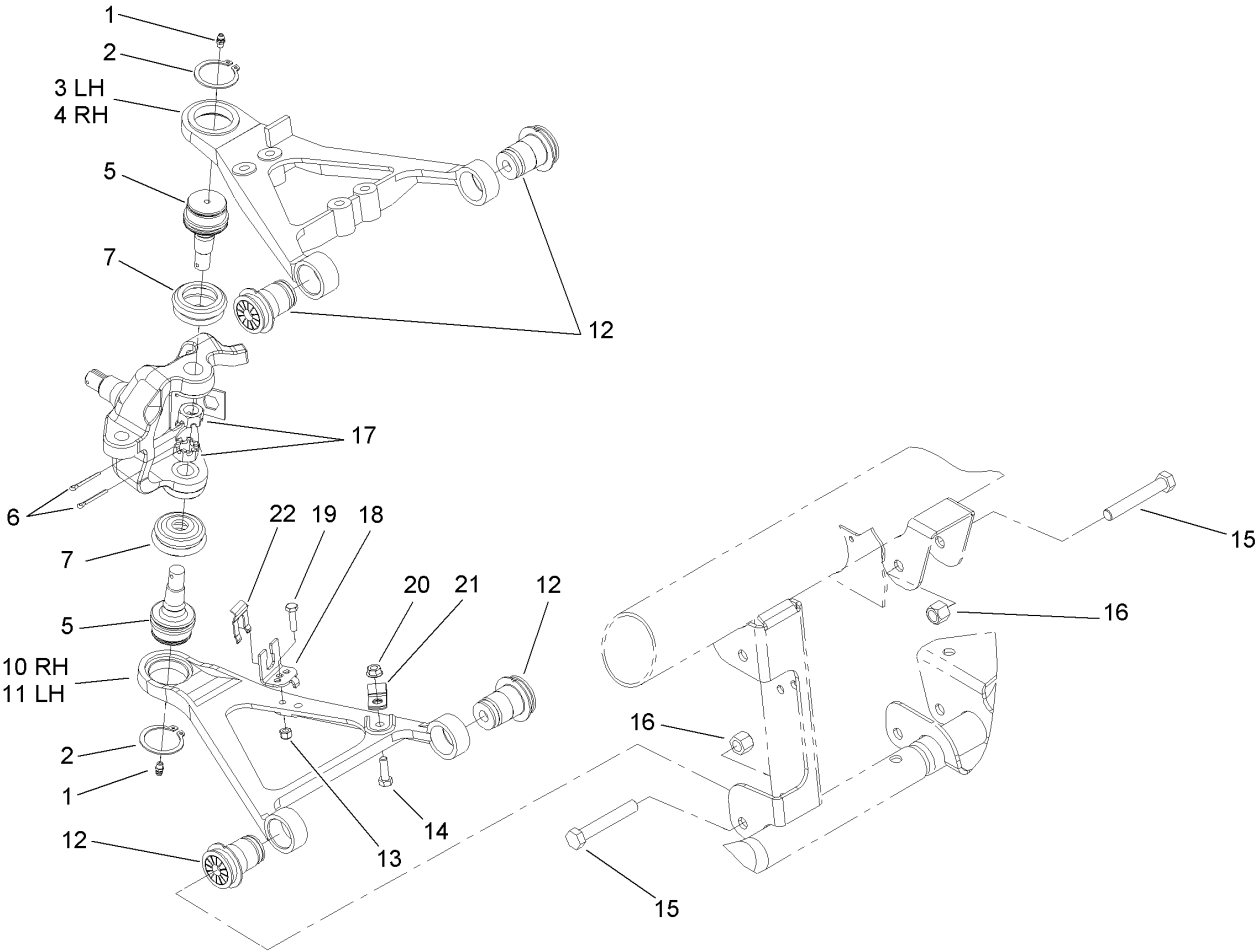 

Front Control Arm Assembly


Ref	Part No.	Qty.	Description				
1	302-5	4	Fitting-Grease				
2	32151-104	4	Ring-Retaining, External				
3	93-7135-03	1	Arm-Control, Top (RH)				
4	93-7133-03	1	Arm-Control, Top (LH)				
5	87-1430	4	Joint-Ball				
6	3272-12	4	Pin-Cotter				
7	87-2420	4	Seal-Joint, Ball				
10	87-0210-03	1	Arm-Control, Lower (RH)				
11	87-0220-03	1	Arm-Control, Lower (LH)				
12	87-1450	8	Bushing-Flange				
13	3296-42	2	Nut-Lock, NI				
14	322-5	2	Screw-HH				
15	325-14	8	Screw-HH				
16	3296-23	8	Nut-Lock, NI				
17	32136-2	4	Nut-SHH				
18	93-7070	2	Bracket-Hose, Brake				
19	321-6	2	Screw-HH				
20	32128-20	2	Nut-HF				
21	2412-10	2	R-Clamp				
22	87-3580	2	Clip-Retainer				

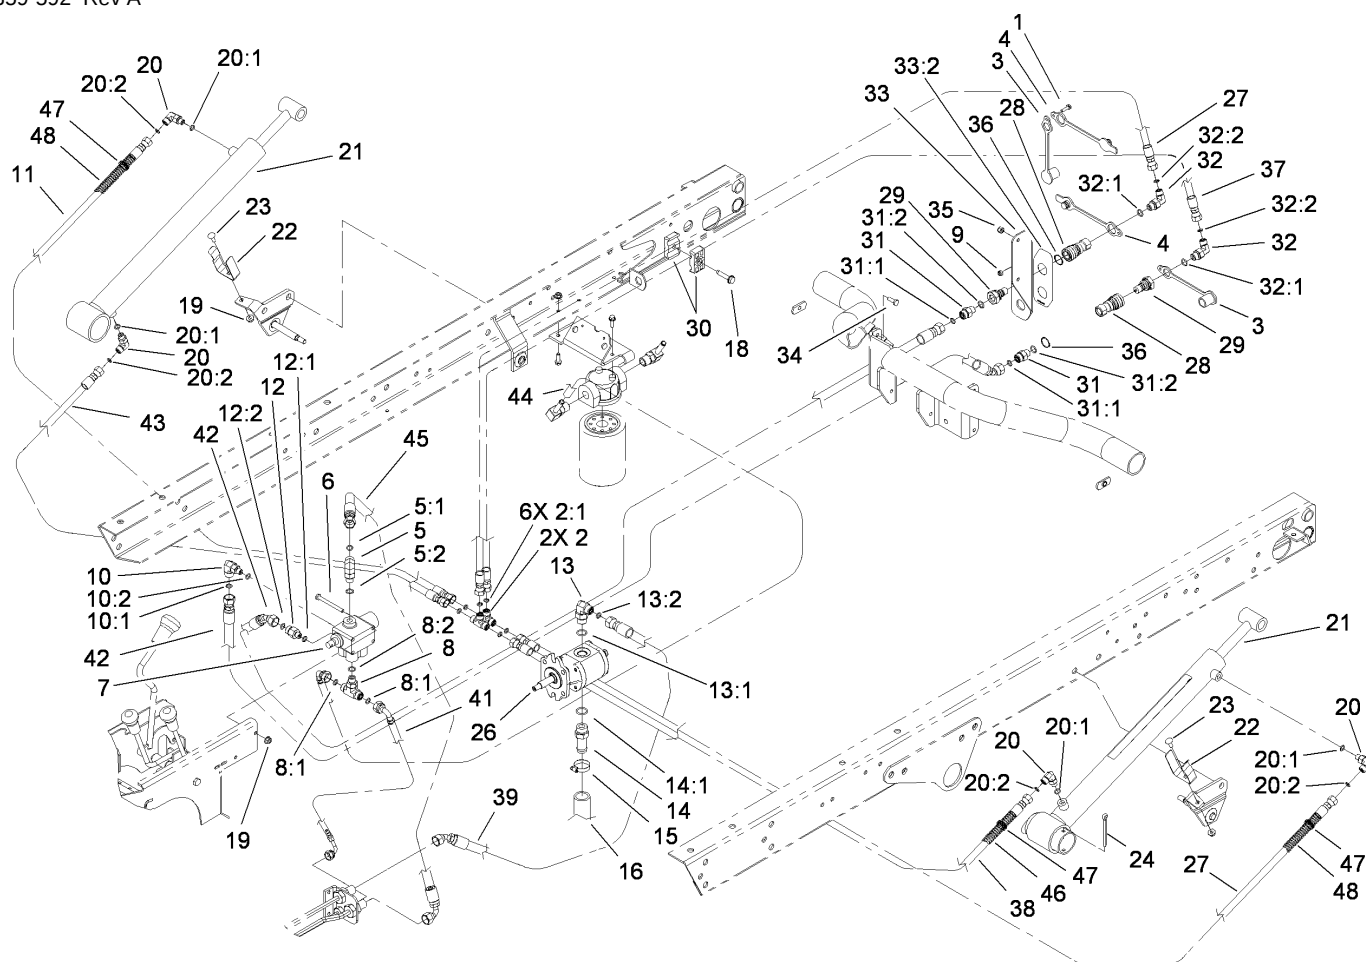 

Lift Valve and Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	32105-13	1	Screw-HWH
2	340-21	2	Fitting
2:1	237-21	3	O-Ring
3	106-7881	2	Cap-Dust, HYD
4	106-7882	2	Plug-Dust, HYD
5	340-77	1	Fitting-HYD, 90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	321-14	2	Screw-HH
7	43-1950	1	Valve-Control, HYD
8	340-94	1	Adapter
8:1	237-22	2	O-Ring
8:2	237-42	1	O-Ring
9	3296-2	1	Nut-Lock
10	340-97	1	Fitting-HYD, 90 DEG
10:1	237-22	1	O-Ring
10:2	237-78	1	O-Ring
11	92-7564	1	Hose ASM
12	340-88	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-78	1	O-Ring
13	340-18	1	Fitting-HYD, 90 DEG
13:1	237-79	1	O-Ring
13:2	237-22	1	O-Ring

Ref	Part No.	Qty.	Description
14	354-136	1	Fitting-HYD
14:1	237-80	1	O-Ring
15	2412-34	1	Clamp-Hose
16	87-3670	1	Hose-Suction
18	32144-57	1	Screw
19	32128-33	4	Nut-HF
20	340-132	4	Fitting-HYD, 90 DEG
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	106-7939	2	HYD Cylinder ASM
22	108-3109	2	Retainer-Cylinder
23	3229-1	2	Screw-CARR
24	3272-37	2	Pin-Cotter
26	112-2983	1	Pump-Gear, Hydraulic
27	104-3716	2	HYD Hose ASM
28	106-7968	2	Coupler-Quick, Female
29	106-7969	2	Coupler-Quick, Male
30	56-7976	2	Clamp-Tube
31	340-2	2	Fitting-HYD, Straight
31:1	237-22	1	O-Ring
31:2	237-42	1	O-Ring
32	340-82	2	Adapter
32:1	237-42	1	O-Ring
32:2	237-21	1	O-Ring

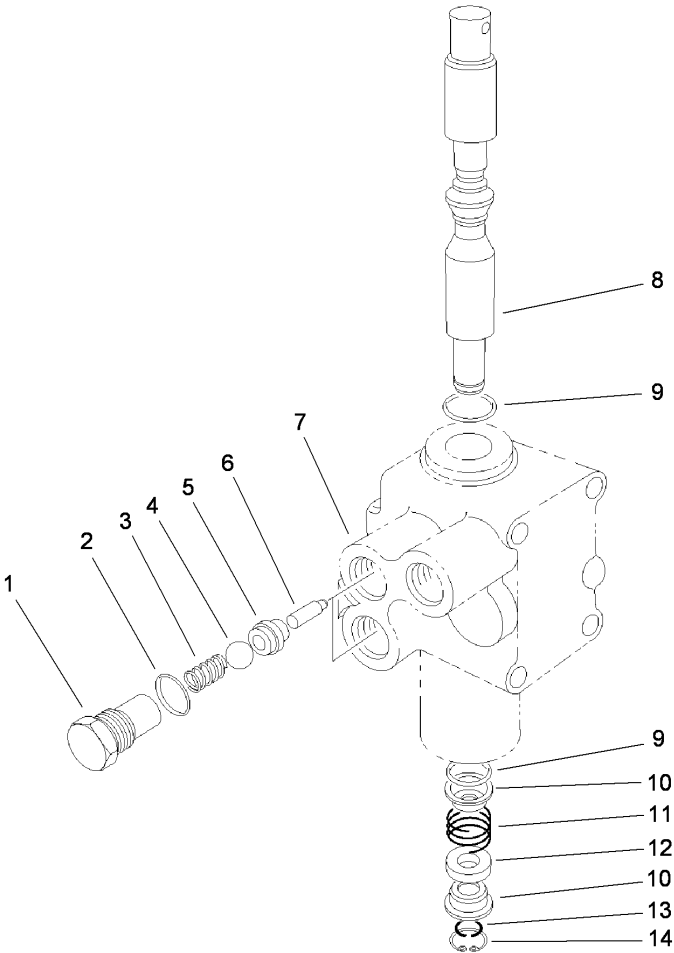 


Control Valve Assembly No. 43-1950

Ref	Part No.	Qty.	Description				
1	22-8330	2	Plug				
2	237-42	2	O-Ring				
3	22-8340	2	Spring				
4	22-8350	2	Ball				
5	22-8370	2	Seat-Valve				
6	22-8360	2	Pin				
7		1	Body				
8	22-8420	1	Spool				
9	22-8500	2	O-Ring				
10	22-8380	2	Retainer				
11	22-8410	1	Spring				
12	23-3030	1	Spacer				
13	22-8480	1	Ring-Snap				
14	22-8490	1	Ring-Snap				

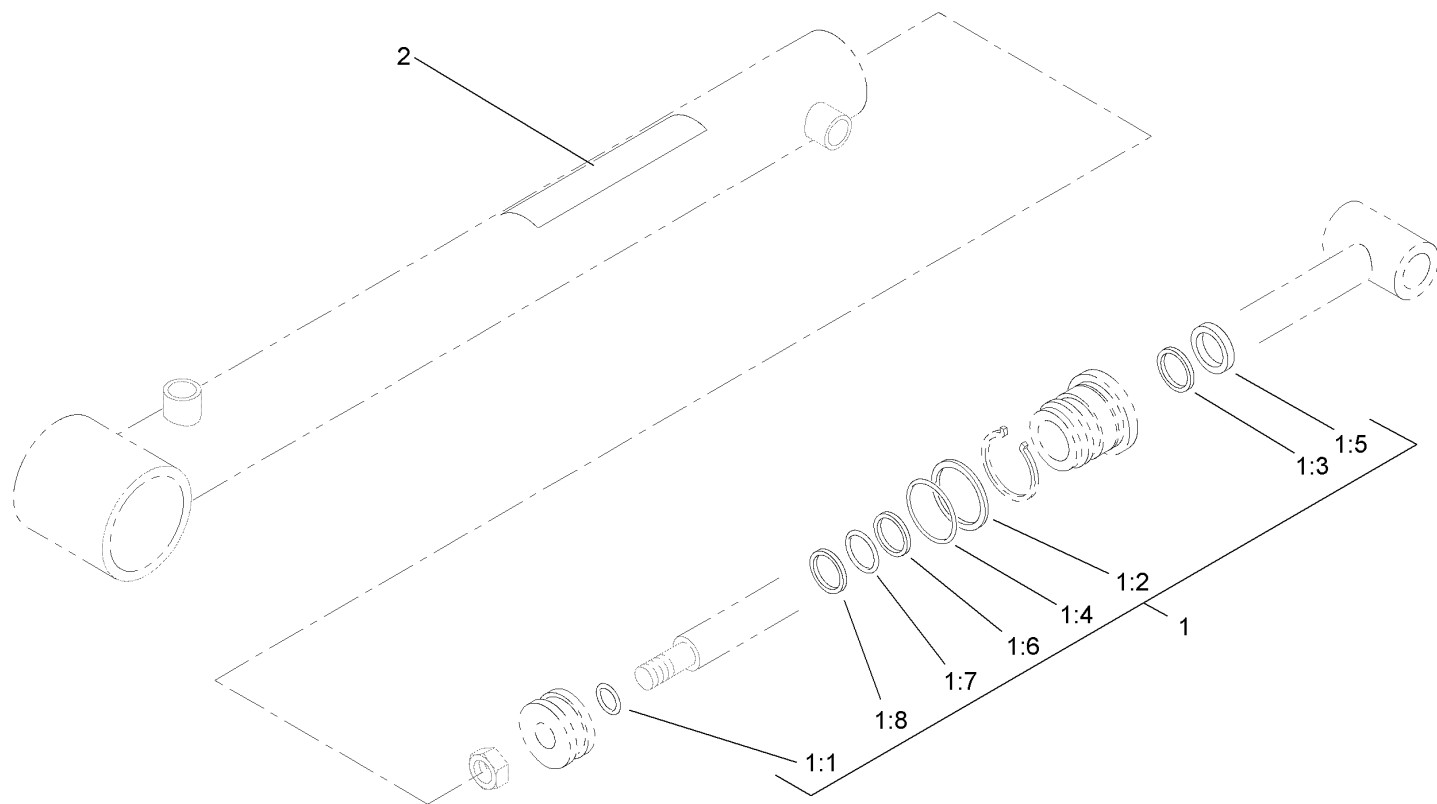 


Hydraulic Cylinder Assembly No. 106-7939

Ref	Part No.	Qty.	Description				
1	106-7941	1	Seal Kit				
1:1		1	O-Ring				
1:2		1	O-Ring				
1:3		1	Seal				
1:4		1	Back-Up				
1:5		1	Wiper				
1:6		1	Seal				
1:7		1	O-Ring				
1:8		1	Ring-Wear				
2	93-9852	1	Decal-Warning				

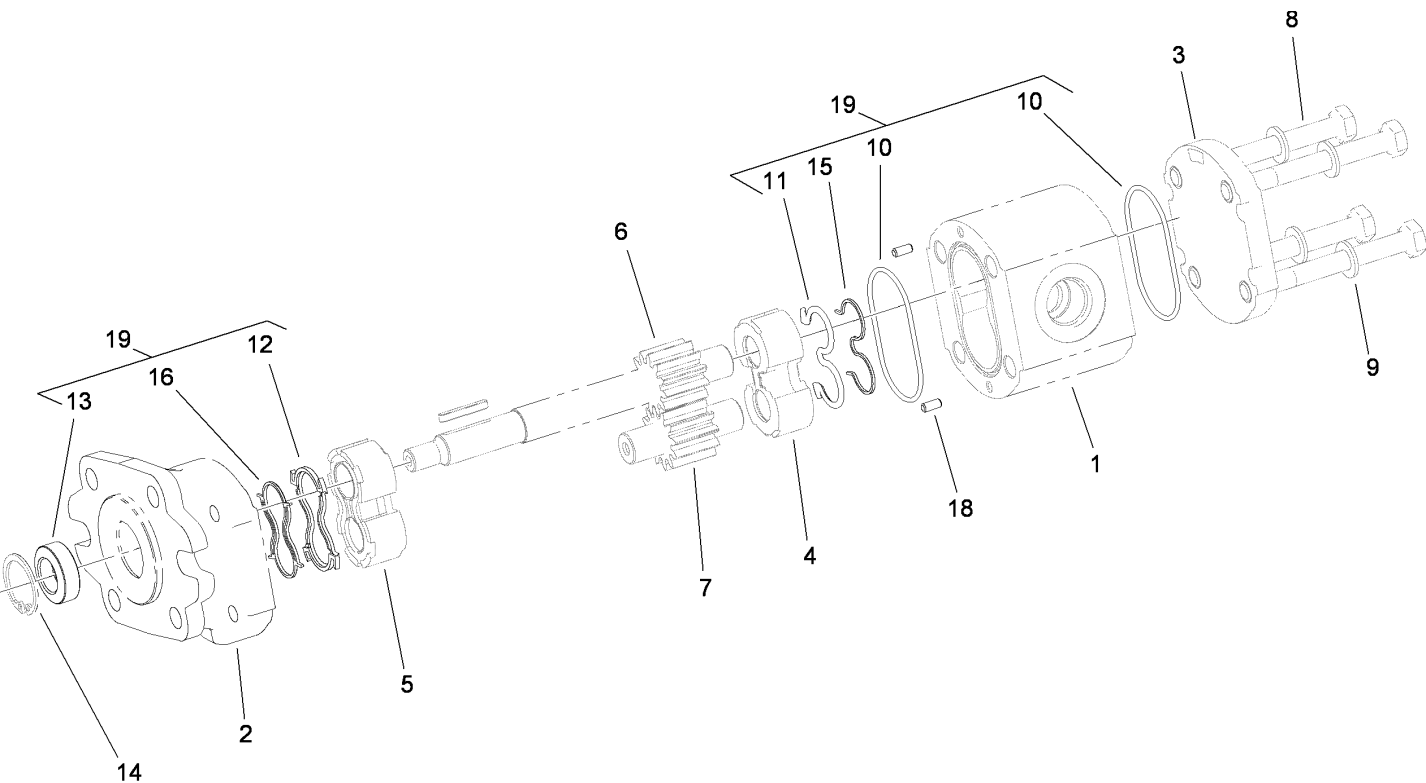 

Hydraulic Gear Pump Assembly No. 112-2983


Ref	Part No.	Qty.	Description				
1		1	Body				
2		1	Cover-Front				
3		1	Cover-Rear				
4		1	Plate-Thrust				
5		1	Plate-Thrust, Upper				
6		1	Shaft-Drive				
7		1	Gear-Driven				
8		4	Screw-HH				
9		4	Washer				
10		2	O-Ring Seal				
11		1	Seal				
12		1	Seal-Upper				
13		1	Seal-Shaft				
14		1	Ring-Clip				
15		1	Antiestrusion				
16		1	Antiestrusion				
18		1	Pin-Dowel				
19	112-0199	1	Seal Kit				

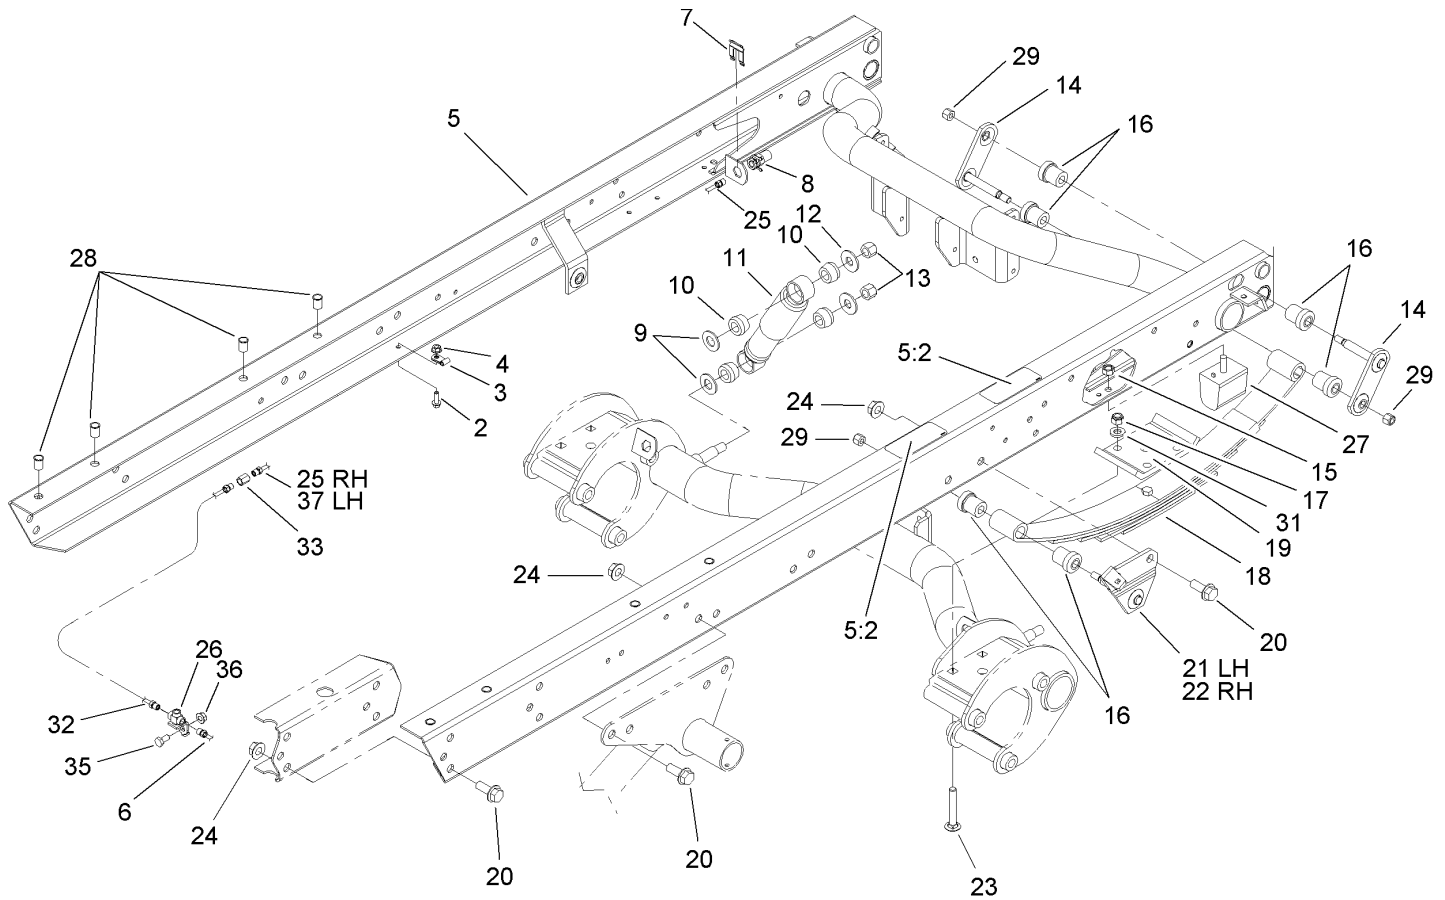 

Rear Frame Assembly

Ref	Part No.	Qty.	Description
2	3234-4	4	Screw-HHF
3	2412-149	4	Clamp-Hose
4	32128-33	4	Nut-HF
5	105-7959	1	Frame Channel ASM
5:2	93-8071	2	Decal-Surface, Hot
6	94-3843	1	LH Rear Brake Tube ASM
7	87-3580	2	Clip-Retainer
8	87-4100	2	Hose-Brake, Rear
9	3256-27	4	Washer-Flat
10	87-3920	8	Bushing
11	87-3110	2	Absorber-Shock
12	3256-6	4	Washer-Flat
13	3296-23	4	Nut-Lock, NI
14	87-3980	4	Shackle ASM
15	48-9520	2	Nut
16	87-4760	12	Bushing-Rubber
17	3296-76	8	Nut-Lock, NI
18	87-1490	2	Spring-Leaf, Rear
19	87-7470-03	2	Plate-Spring, Clamp
20	3234-38	24	Screw-HHF
21	87-3960	1	LH Spring Mount ASM
22	87-3940	1	RH Spring Mount ASM
23	3232-17	8	Screw-CARR
24	32128-23	24	Nut-HF


Ref	Part No.	Qty.	Description
25	94-3846	1	RH Rear Brake Tube ASM
26	87-3560	1	Tee
27	87-3470	2	Bumper-Axle, Rear
28	32148-9	8	Insert-Nut
29	3296-39	6	Nut-Lock, NI
31	87-7480	8	Washer
32	94-3845	1	RH Rear Brake Tube ASM
33	87-3570	2	Union
35	322-2	1	Screw-HH
36	32128-20	1	Nut-HF
37	94-3844	1	LH Rear Brake Tube ASM

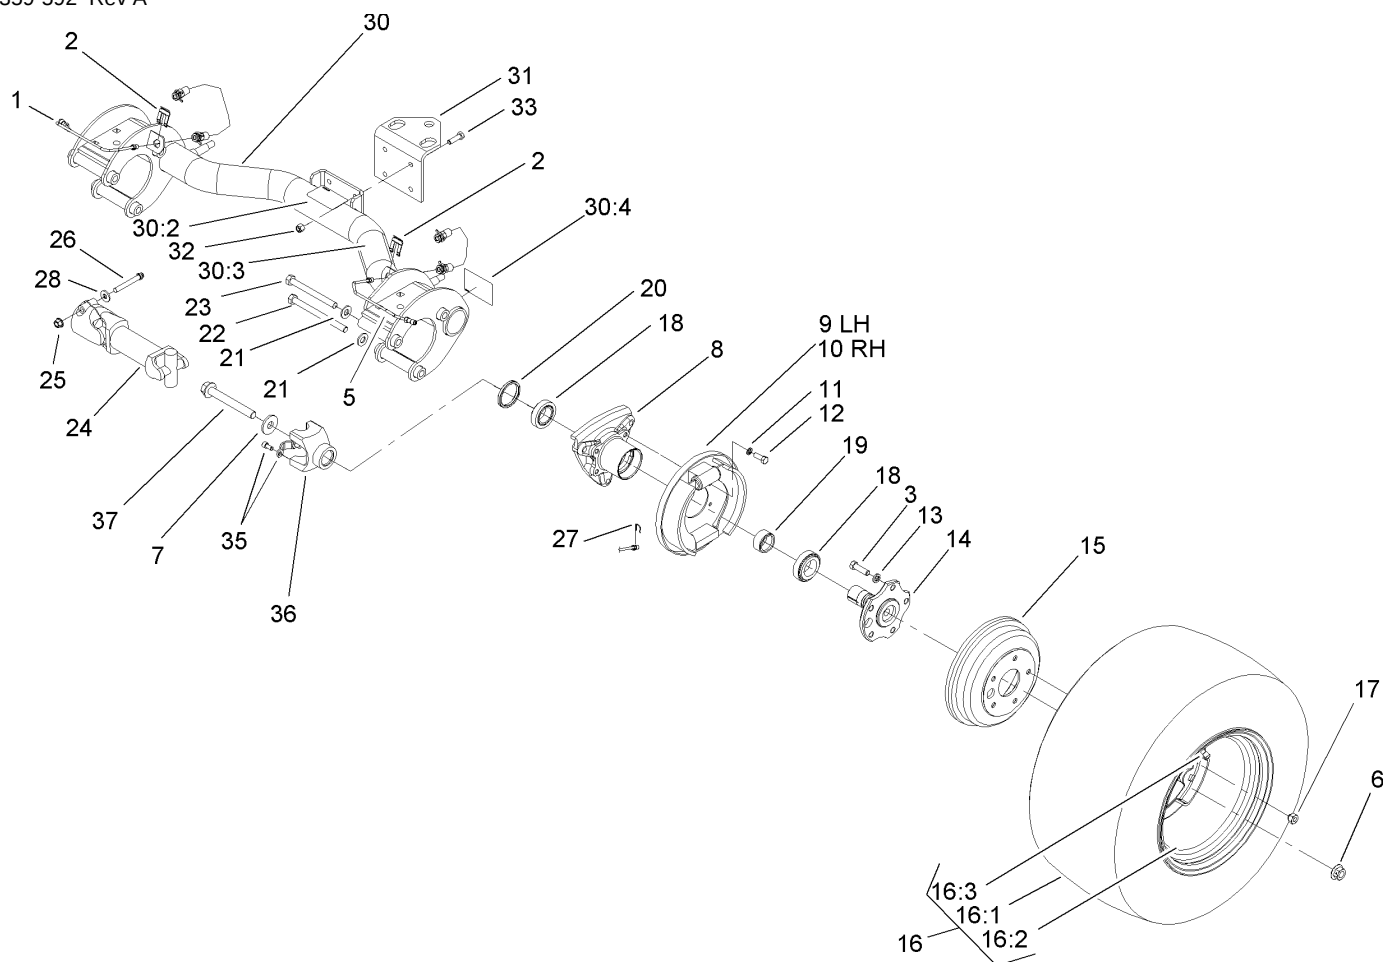 

Rear Axle Assembly


Ref	Part No.	Qty.	Description
1	87-4090	1	RH Rear Brake Tube ASM
2	87-3580	2	Clip-Retainer
3	87-2080	10	Bolt-Hex, TAP
5	87-4080	1	LH Rear Brake Tube ASM
6	105-1764	2	Nut-Flange, Side Lock
7	104-9216	2	Washer-Hardened
8	87-2240	2	Housing-Axle
9	112-7961	1	LH Rear Brake ASM
10	112-7962	1	RH Rear Brake ASM
11	3253-21	8	Washer-Lock
12	3235-22	8	Screw-HH, Lock
13	3253-6	10	Washer-Lock
14	105-1717-03	2	Axle-Stub
15	93-7128	2	Drum-Brake
16		2	Tire And Wheel ASM
16:1	106-7868	1	Tire
16:2	87-6750	1	Wheel
16:3	232-27	1	Stem-Valve
17	23-7270	10	Nut-Wheel
18	87-1970	2	Bearing
19	87-4060	2	Spacer-Bearing, Wheel
20	108-7019	2	Seal-Shaft
21	87-7270	6	Washer-Thrust
22	325-20	5	Screw-HH

Ref	Part No.	Qty.	Description
23	325-19	1	Screw-HH
24	98-2918	2	Driveshaft ASM
25	32128-36	4	Nut-HF
26	98-2939	4	Screw-Cap
27	87-3310	2	Clip-Cable, Brake
28	80-6990	4	Washer-Hardened
30	105-7961	1	Rear Axle ASM
30:2	93-9442	1	Decal-Atf
30:3	93-9862	1	Decal-Danger
30:4	93-9449	2	Decal-Driveshaft
31	92-5951-03	1	Angle-Hitch
32	3296-39	4	Nut-Lock, NI
33	323-7	4	Screw-HH
35	92-4189	2	Strap Kit
36	92-4190	2	Yoke
37	105-1763	2	Screw-HHF

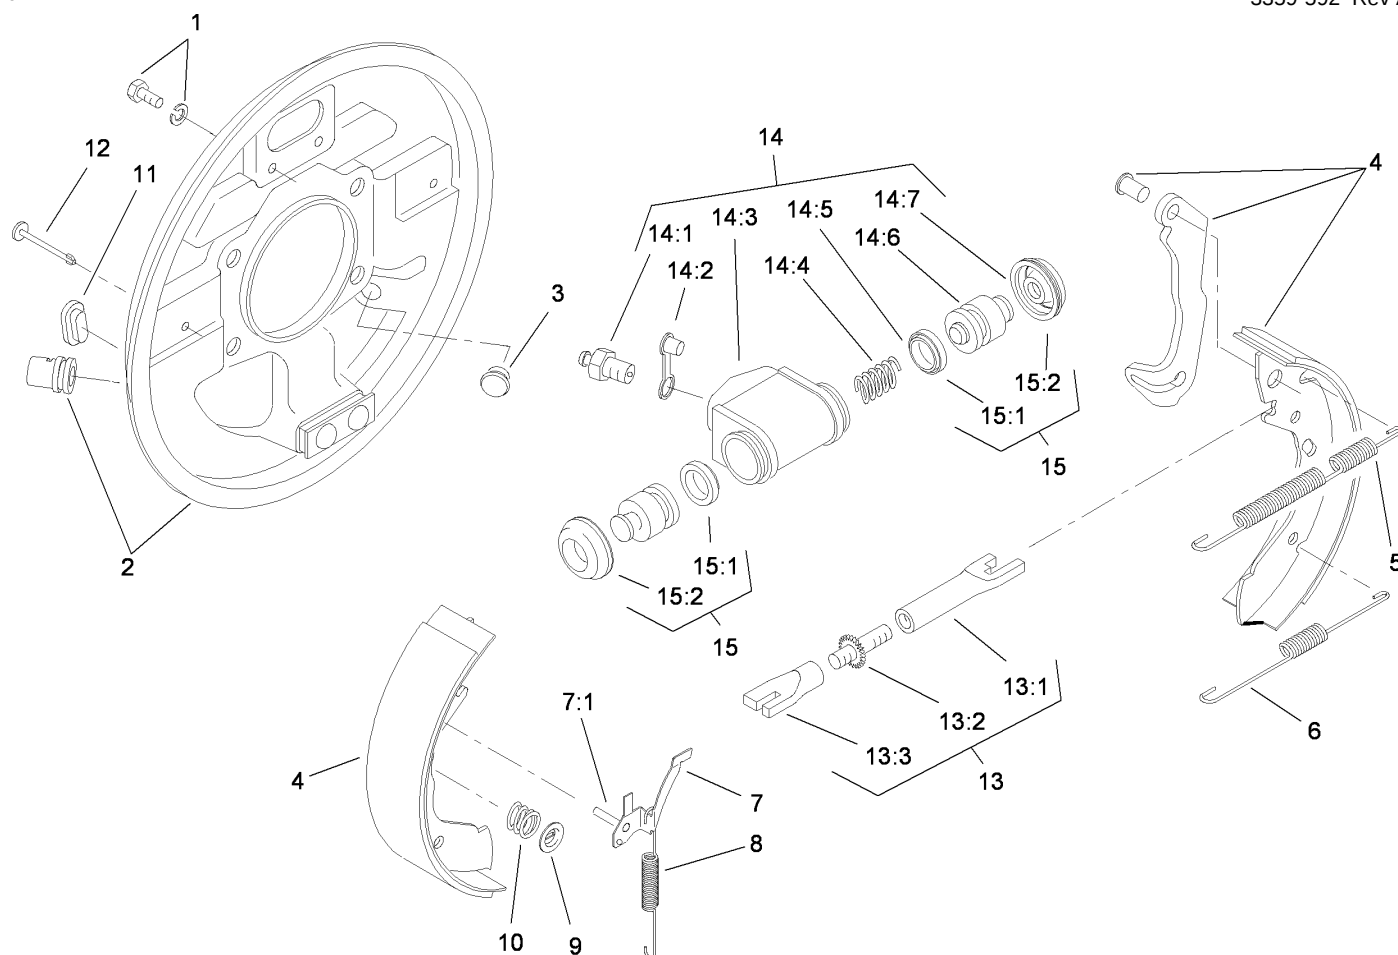 


LH Rear Brake Assembly No. 112-7961

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set	②14:7		2	Cover-Dust
2	112-7968	1	LH Backplate ASM	①15	92-4142	1	Seal Kit
3	92-4146	1	Plunger ASM	②15:1		2	Seal-L Type
4	112-7978	1	Lined Shoe Kit	②15:2		2	Cover-Dust
5	92-4147	1	Spring-Return, Shoe (Upper, LH)				
6	92-4149	1	Spring-Return, Shoe (Lower)				
7	92-4123	1	LH Pawl Lever ASM				
②7:1		1	Pin-Pawl				
8	92-4150	1	Spring-Adjuster, LH				
9	92-4131	2	Washer-Hold Down, Shoe				
10	92-4152	2	Spring-Hold Down, Shoe				
11	92-4134	1	Plug-Inspection				
12	92-4133	2	Pin-Hold Down, Shoe				
13	92-4144	1	LH Adjuster ASM				
②13:1		1	Pushrod-Female				
②13:2		1	Bolt-Adjuster				
②13:3		1	Sleeve-Adjuster				
14	92-4140	1	LH Wheel Cylinder ASM				
14:1	92-4137	1	Screw-Bleed				
14:2	92-4114	1	Cap-Screw, Bleed				
②14:3		1	Body				
②14:4		1	Spring				
②14:5		2	Seal-L Type				
②14:6		2	Piston				

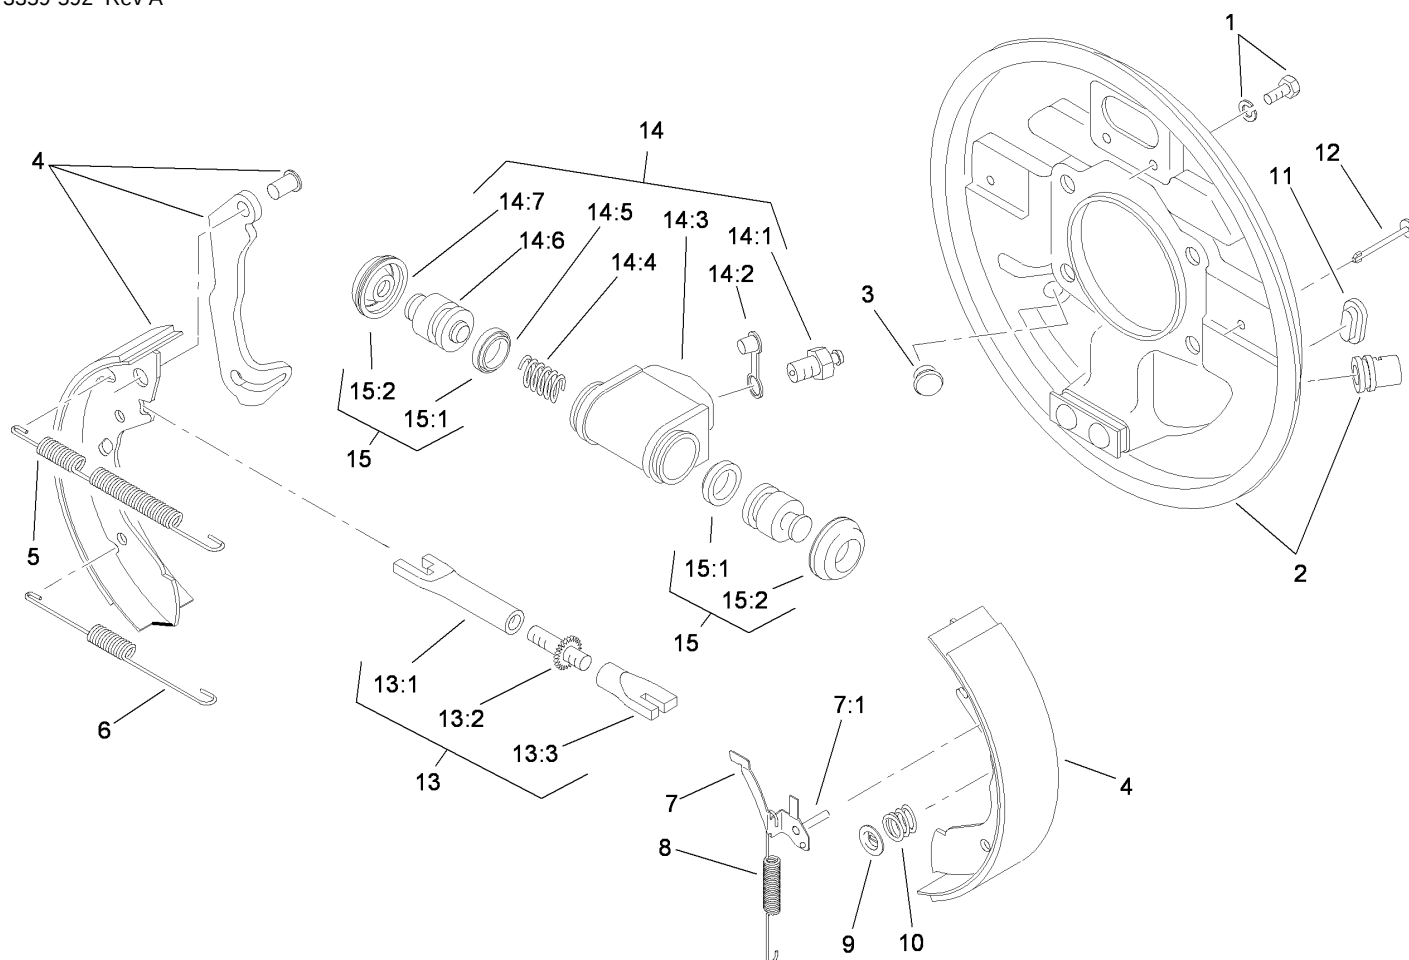 


RH Rear Brake Assembly No. 112-7962

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set	②14:7		2	Cover-Dust
2	112-7967	1	RH Backplate ASM	①15	92-4142	1	Seal Kit
3	92-4146	1	Plunger ASM	②15:1		2	Seal-L Type
4	112-7978	1	Lined Shoe Kit	②15:2		2	Cover-Dust
5	92-4148	1	Spring-Return, Shoe (Upper, RH)				
6	92-4149	1	Spring-Return, Shoe (Lower)				
7	92-4124	1	RH Pawl Lever ASM				
②7:1		1	Pin-Pawl				
8	92-4151	1	Spring-Adjuster, RH				
9	92-4131	2	Washer-Hold Down, Shoe				
10	92-4152	2	Spring-Hold Down, Shoe				
11	92-4134	1	Plug-Inspection				
12	92-4133	2	Pin-Hold Down, Shoe				
13	92-4145	1	RH Adjustor ASM				
②13:1		1	Pushrod-Female				
②13:2		1	Bolt-Adjuster				
②13:3		1	Sleeve-Adjuster				
14	92-4141	1	RH Wheel Cylinder ASM				
14:1	92-4137	1	Screw-Bleed				
14:2	92-4114	1	Cap-Screw, Bleed				
②14:3		1	Body				
②14:4		1	Spring				
②14:5		2	Seal-L Type				
②14:6		2	Piston				

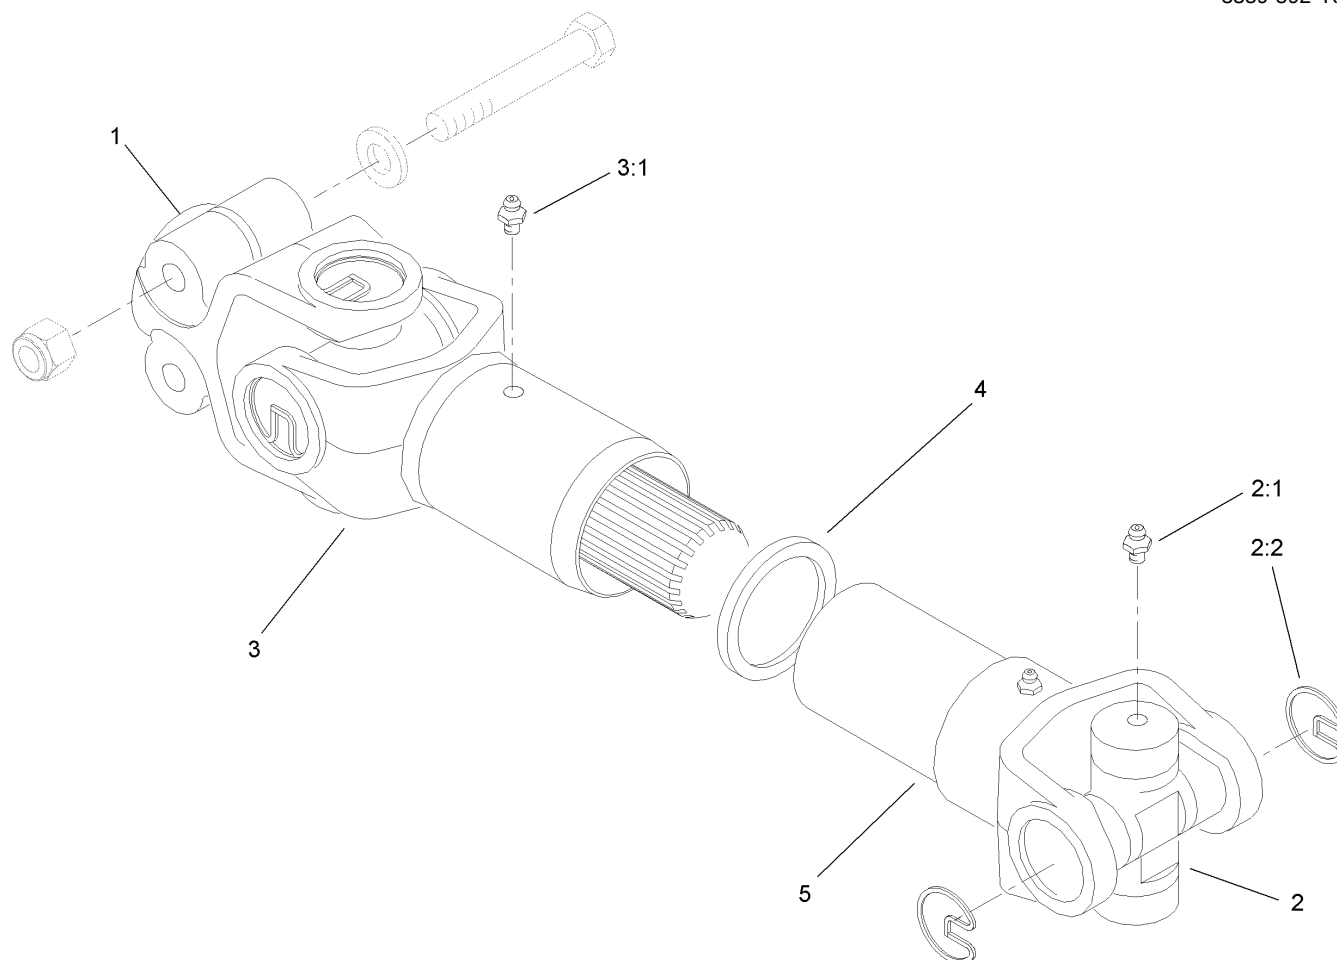 

Driveshaft Assembly No. 98-2918


Ref	Part No.	Qty.	Description
1	98-2940	1	Yoke
2	92-4187	2	Cross And Bearing Kit
2:1	302-58	2	Fitting-Straight
2:2	92-4188	2	Ring-Snap
3	92-4179	1	Yoke-Tube, Shaft And Seal
3:1	302-5	1	Fitting-Grease
4	92-4180	1	Seal
5	92-4182	1	Yoke And Hub

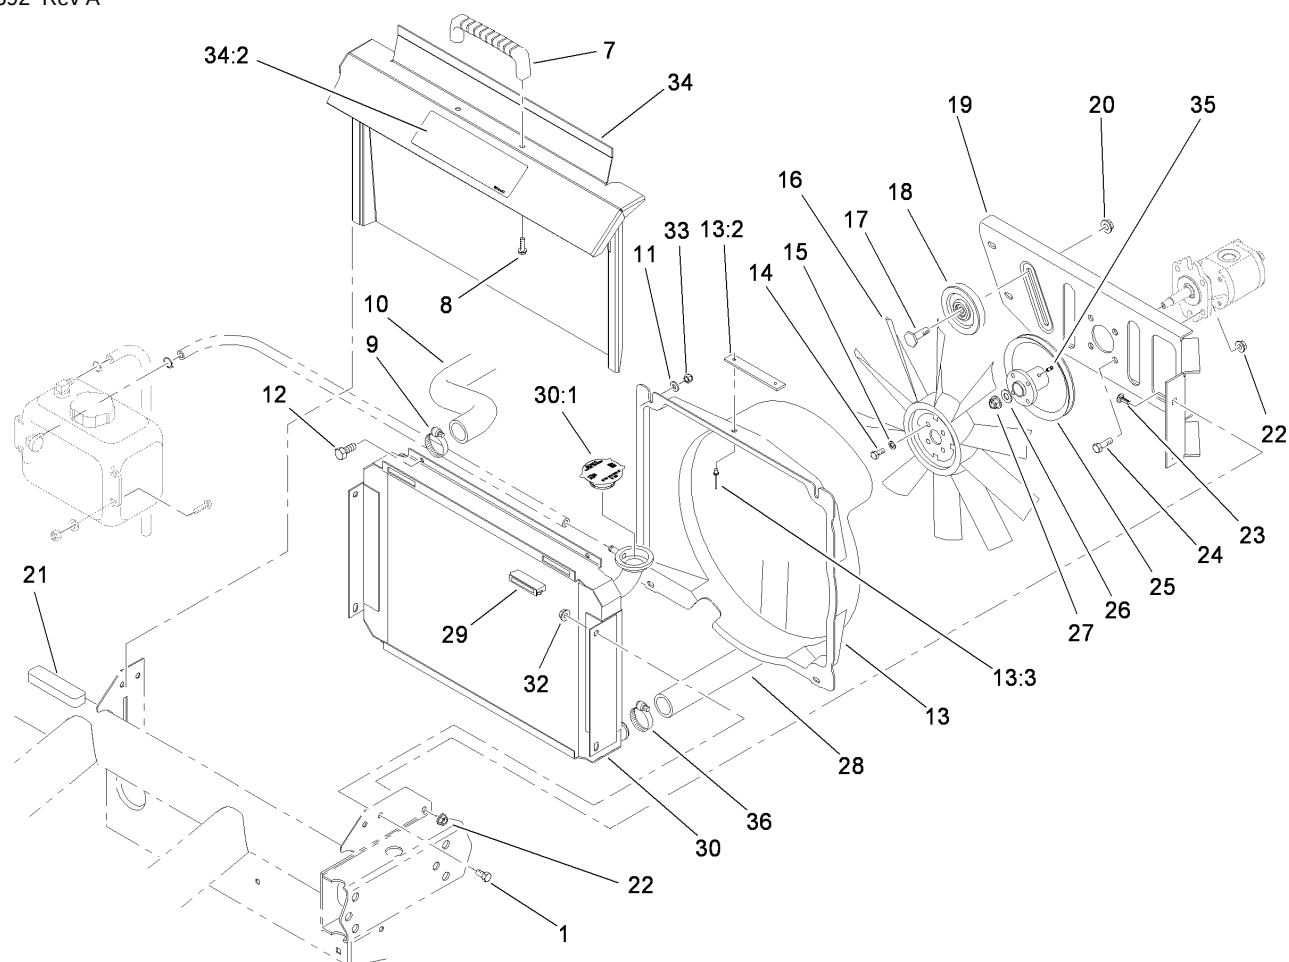 

Radiator and Hydraulic Pump Assembly


Ref	Part No.	Qty.	Description
1	322-2	4	Screw-HH
7	65-5100	1	Handle-Door
8	46-8091	2	Screw-HWH
9	2412-34	1	Clamp-Hose
10	105-1724	1	Hose-Radiator, Upper
11	3256-22	4	Washer-Flat
12	321-4	4	Screw-HH
13	105-7956	1	Fan Shroud ASM
13:2	98-9335	1	Plate-Warning, Fan
13:3	3290-271	2	Rivet-Pop
14	321-4	4	Screw-HH
15	3253-3	4	Washer-Lock
16	84-1880	1	Fan
17	32141-86	1	Screw-Leveler
18	63-8140	1	Pulley-Idler
19	93-7088-03	1	Plate-Mount, Pump
20	3290-357	1	Nut-HHF, Whiz
21	87-9810	1	Foam-Tank, Overflow
22	3296-29	8	Nut-Lock, NI
23	3230-23	4	Screw-CARR
24	322-5	4	Screw-HH
25	94-5237	1	Fan Hub ASM
26	3256-45	1	Washer-Flat
27	3296-5	1	Nut-Lock

Ref	Part No.	Qty.	Description
28	105-1725	1	Hose-Radiator, Lower
29	58-4250	2	Catch-Magnetic
30	115-2303	1	Radiator
30:1	66-3240	1	Cap-Radiator
32	32128-20	4	Nut-HF
33	3296-42	4	Nut-Lock, NI
34	105-4223	1	Radiator Cover ASM
34:2	93-9447	1	Decal-Caution
35	3245-31	1	Screw-HSH
36	2412-3	1	Clamp-Hose

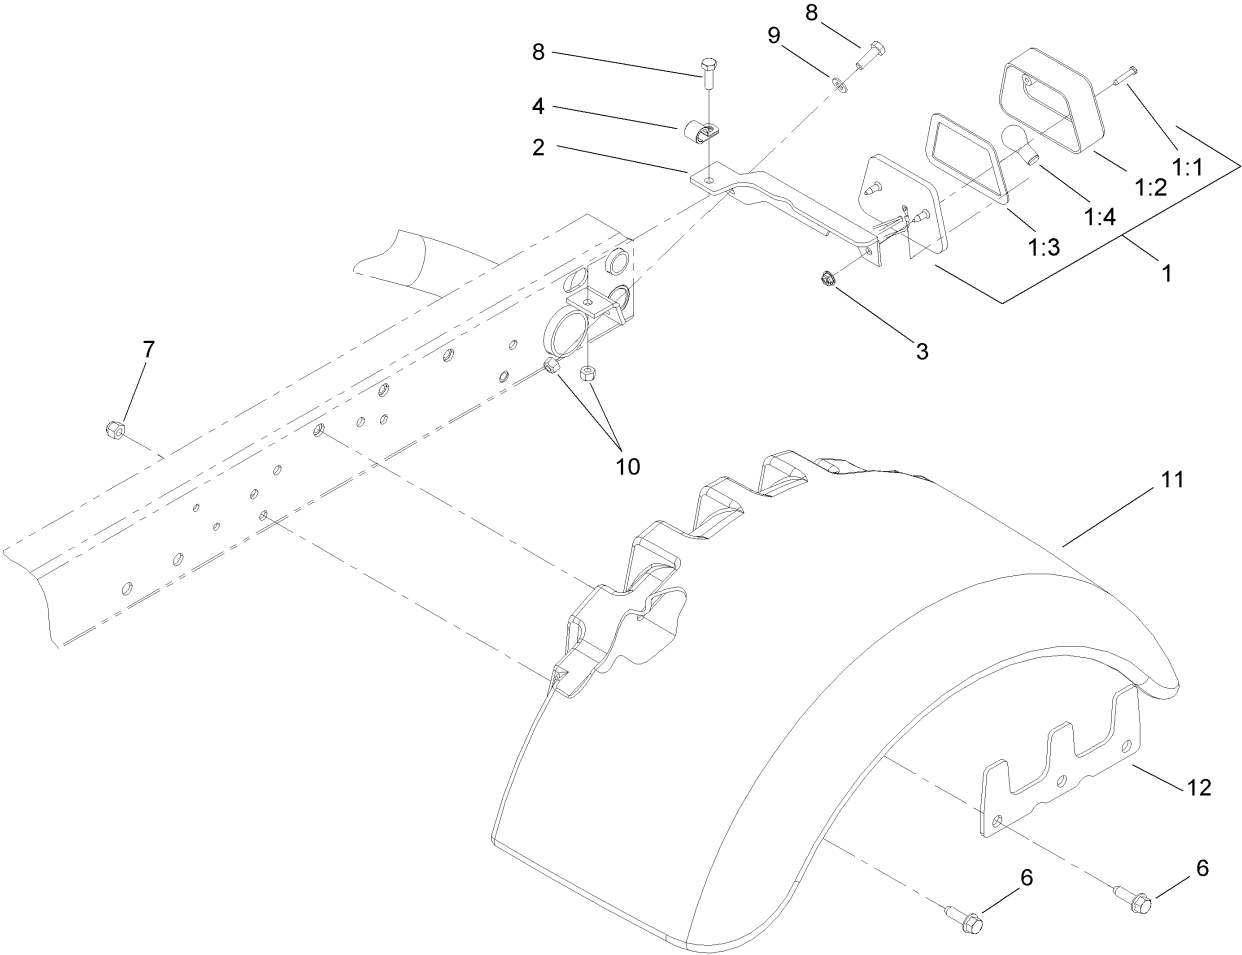 

Tail Light and Fender Assembly


Ref	Part No.	Qty.	Description				
1	87-2110	1	Light-Tail / Brake				
1:1	32144-93	4	Screw-PPHTF				
1:2	87-6300	2	Lens-Light, Tail				
1:3	87-6310	2	Gasket-Light, Tail				
1:4		1	Bulb				
2	106-7872-03	1	LH Tail Light Bracket ASM				
3	3290-506	2	Palnut				
4	2412-93	1	Clamp-R				
6	32144-109	10	Screw				
7	3296-39	2	Nut-Lock, NI				
8	322-5	2	Screw-HH				
9	3256-23	1	Washer-Flat				
10	3296-29	2	Nut-Lock, NI				
11	106-2373	2	Fender-Rear				
12	106-7895-03	2	Plate-Support				

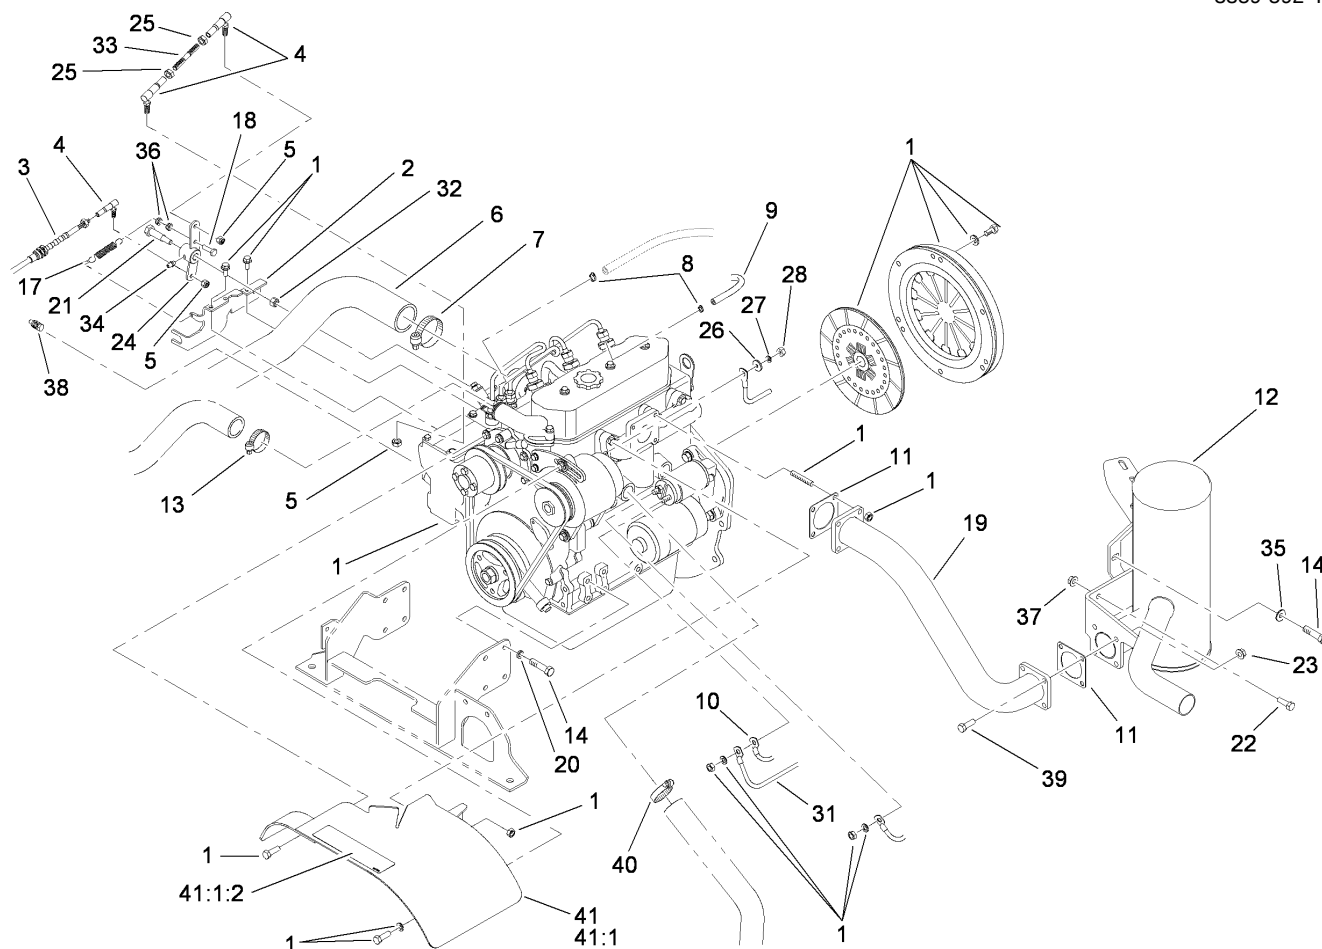 

Diesel Engine Assembly


Ref	Part No.	Qty.	Description
1	115-2290	1	Engine ASM
2	106-2403	1	Bracket-Throttle, Diesel
3	110-2549	1	Cable-Accelerator, Liquid-Cooled
4	18-1720	3	Governor Ball Joint ASM
5	3296-3	3	Nut-Lock
6	107-7960	1	Hose-Intake
7	2412-92	1	Clamp-Hose
8	2412-108	2	Clamp-Worm
9	109-0289	1	Hose-Fuel
10	99-3441	1	Harness-Wire, Fusible Link
11	105-4209	2	Gasket-Muffler
12	105-1778	1	Muffler-Exhaust
13	2412-34	1	Clamp-Hose
14	33114-020	9	Screw-HH
17	86-4760	1	Spring-Extension
18	321-5	1	Screw-HH
19	108-3066	1	Exhaust Tube ASM
20	3253-4	8	Washer-Lock
21	7-0030	1	Bolt-Shoulder
22	322-5	2	Screw-HH
23	32128-25	4	Nut-HF
24	105-1726	1	Bell Crank ASM
25	3220-1	2	Nut-Jam
26	3256-2	1	Washer-Flat

Ref	Part No.	Qty.	Description
27	43-5920	1	Washer-Lock, Spring
28	48-7880	1	Nut-Hex
31	110-1654	1	Cable-Positive
32	3296-29	1	Nut-Lock, NI
33	105-1789	1	Rod-Threaded
34	302-5	1	Fitting-Grease
35	87-8640	1	Washer-Flat
36	3296-56	2	Nut-Lock, NI
37	32128-20	2	Nut-HF
38	94-7621	1	Sender-Temperature
39	3274-22	4	Screw-HSH
40	2412-3	1	Clamp-Hose
41	115-2327	1	Engine Cover Kit
41:1		1	Engine Cover ASM
41:1:2	93-7814	1	Decal-Danger

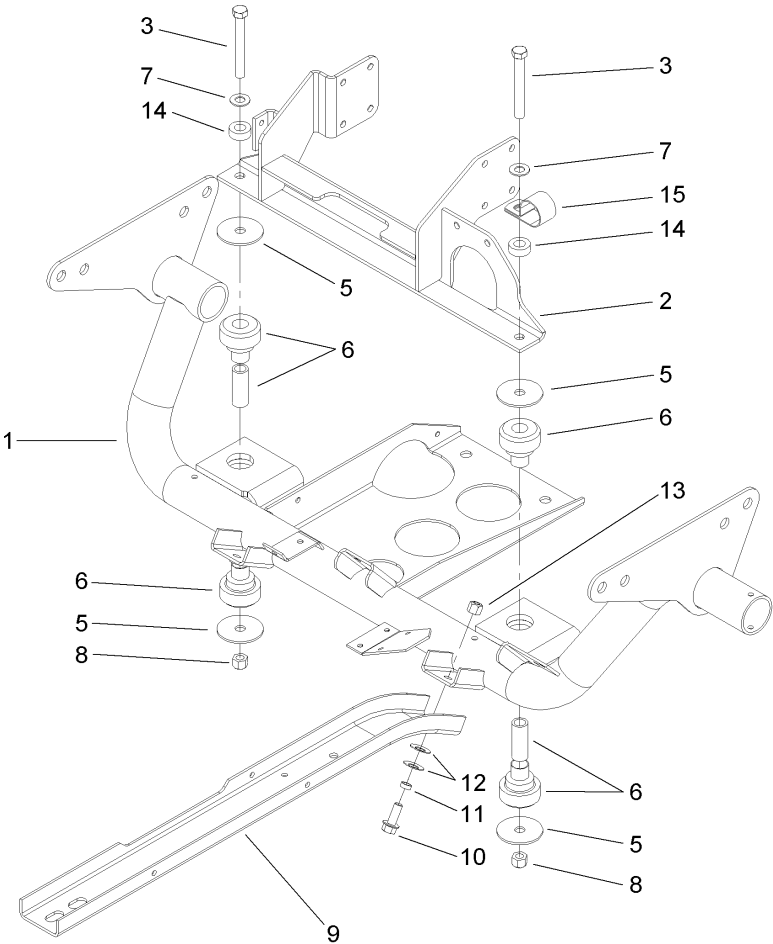 


Engine Support Assembly

Ref	Part No.	Qty.	Description				
1	105-4200-03	1	Engine Support ASM				
2	104-9238-03	1	Engine Mount ASM				
3	324-19	2	Screw-HH				
5	87-5100	4	Washer-Snubbing				
6	106-7865	2	Engine Mount ASM				
7	3256-25	2	Washer-Flat				
8	3296-48	2	Nut-Lock, NI				
9	87-4730-03	2	Guard-Belly				
10	3234-11	6	Screw-HHF				
11	76-9100	6	Spacer-Speed, Reel				
12	3290-413	12	Washer-Belleville				
13	3296-39	6	Nut-Lock, NI				
14	59-2290	2	Spacer				
15	2412-82	1	Clamp				

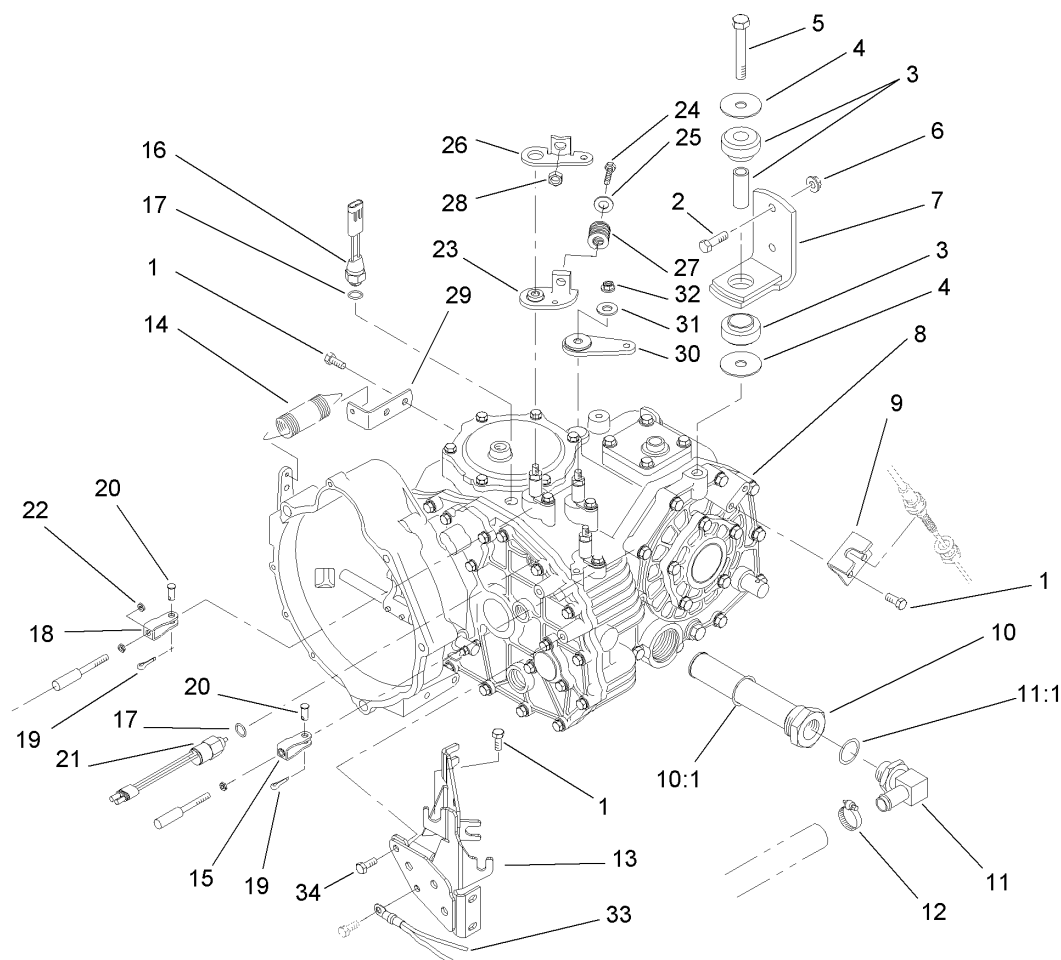 

Transaxle Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33114-020	5	Screw-HH	23	87-7970	1	Arm-Shift
2	323-7	4	Screw-HH	24	323-10	1	Screw-HH
3	106-7865	2	Engine Mount ASM	25	3256-4	1	Washer-Flat
4	87-5100	4	Washer-Snubbing	26	87-8250	1	Plate-Arm, Shift
5	33116-080	2	Screw-HH	27	87-6910	1	Spring-Compression
6	3296-39	4	Nut-Lock, NI	28	32128-21	1	Nut-HF
7	87-5800-03	2	Transaxle Mount ASM	29	87-7170	1	Bracket-Spring, Clutch
8	105-4180	1	2 Wheel Drive Transaxle ASM	30	87-7960	2	Lever-Shift
9	87-4470	1	Bracket-Lock, Differential	31	80-6990	3	Washer-Hardened
10	87-3990	1	Strainer-Transaxle	32	48-9520	3	Nut
10:1	237-123	1	O-Ring	33	87-3080	1	Cable-Battery, Negative
11	353-987	1	Fitting-HYD, 90	34	33114-025	2	Screw-HH
11:1	237-81	1	O-Ring				
12	2412-34	1	Clamp-Hose				
13	105-4207-03	1	Cable Mount ASM				
14	68-9950	1	Spring-Traction				
15	87-7160	1	Cable Clevis ASM				
16	72-4310	1	Switch-Ball				
17	237-30	2	O-Ring				
18	87-2310	2	Clevis-Cable				
19	3272-6	3	Pin-Cotter				
20	283-62	3	Pin-Clevis				
21	87-6710	1	Switch-Transmission				
22	3220-1	2	Nut-Jam				

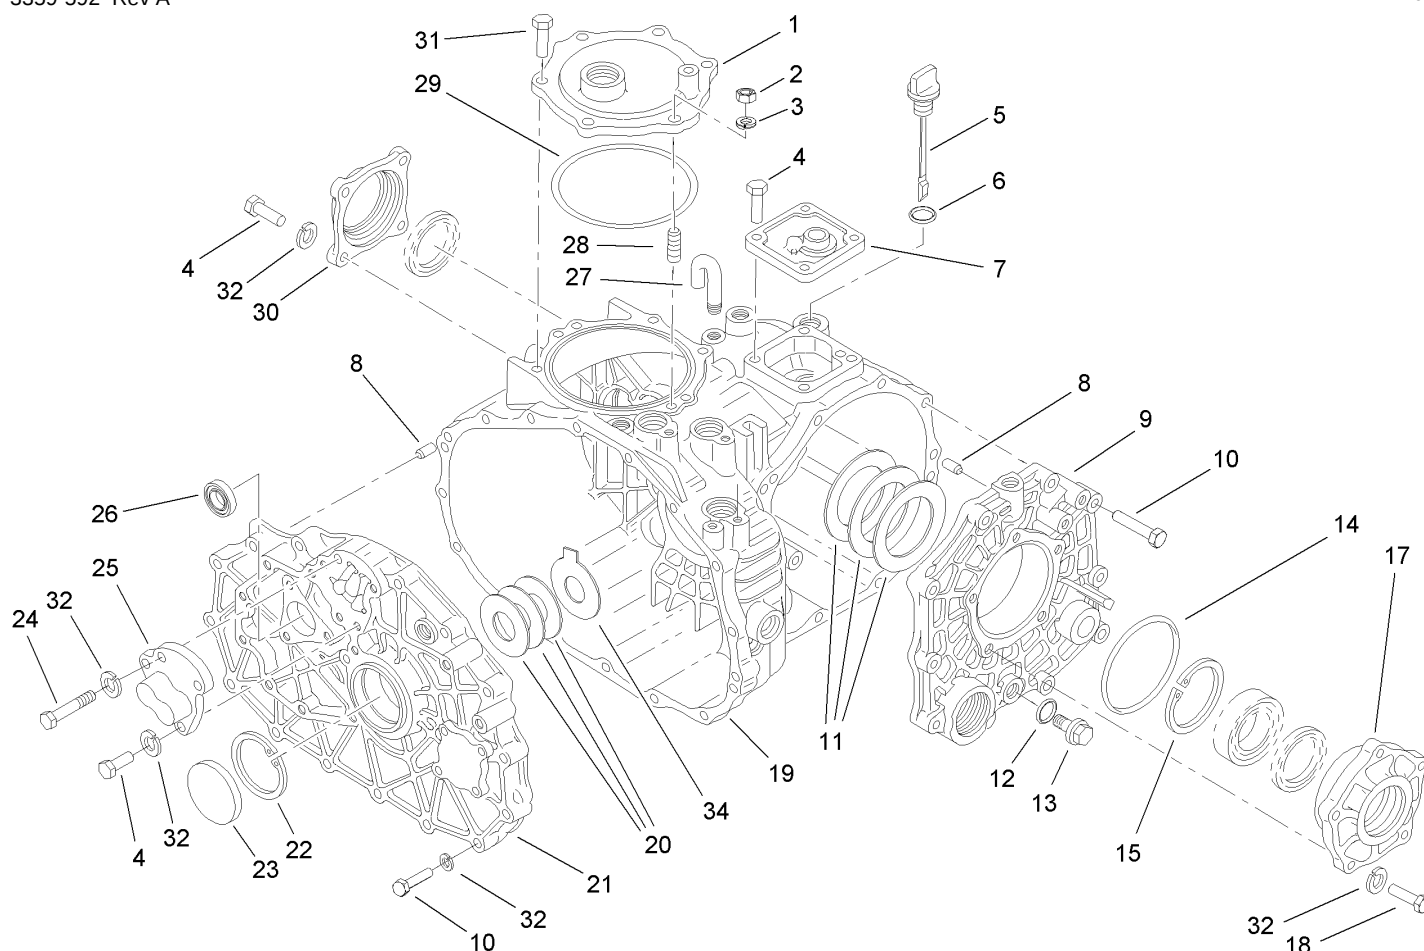 

Case Assembly Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description
1	92-0656	1	Cover-Upper, PTO
2	68-9400	1	Nut-Flange
3	92-0762	1	Washer-Spring
4	33114-025	11	Screw-HH
5	92-0662	1	Cap-Oil
6	92-0788	1	O-Ring
7	92-0652	1	Cover-Upper
8	92-0765	4	Pin-Parallel
9	92-0653	1	Cover-Side
10	33114-040	25	Screw-HH
11	92-0809	1	Set-Shim
12	92-0787	1	O-Ring
13	92-0773	1	Plug-Drain
14	92-0789	1	O-Ring
15	92-0760	1	Ring-Snap
17	92-0654	1	Carrier-Differential
18	33114-030	5	Screw-HH
19	92-0651	1	Case-Transmission
20	100-4460	1	Shim Set
21	100-4461	1	Plate-Center
22	92-0759	1	Ring-Snap
23	92-0807	1	Cap-Sealing
24	48-7560	1	Bolt-HH
25	92-0706	1	Shaft-Fork


Ref	Part No.	Qty.	Description
26	92-0791	1	Seal-Oil
27	92-0743	1	Breather-Air
28	92-0804	1	Stud
29	92-0790	1	O-Ring
30	92-0655	1	Cover-Seal, Axle
31	92-0796	5	Bolt
32	3253-4	42	Washer-Lock
34	100-4465	1	Shim (W/Tab)

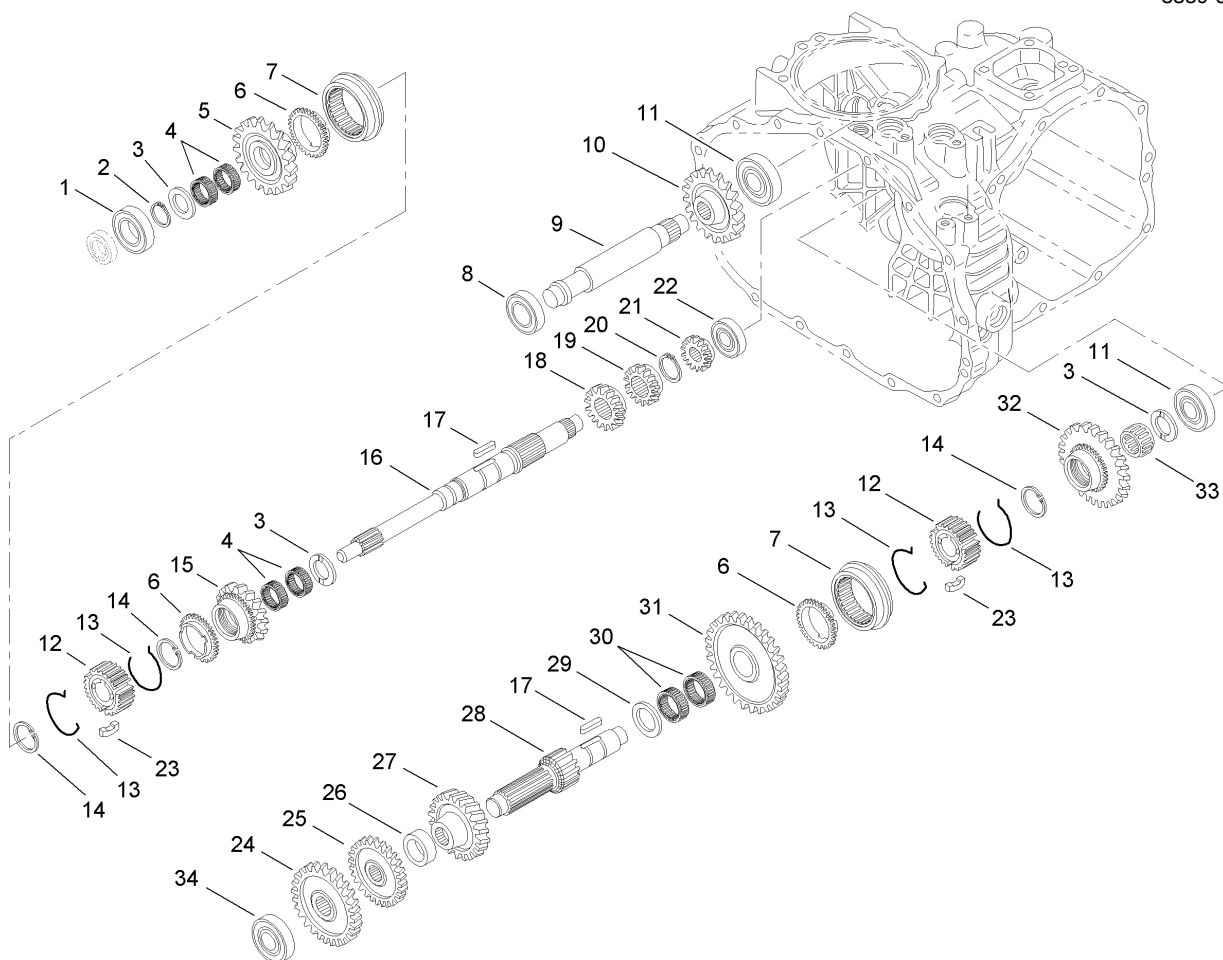 

Gear Shaft Assembly Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	251-8	1	Bearing-Ball
2	92-0753	1	Ring-Snap
3	92-0740	3	Washer-Thrust
4	92-0781	4	Bearing-Needle
5	110-2521	1	Gear-Main, 27T
6	92-0667	3	Ring-Synchro
7	92-0668	2	Shifter-Synchro
8	251-346	2	Bearing-Ball
9	92-0824	1	Shaft-Idler, Reverse
10	92-0684	1	Gear-Reverse, 33 Tooth
11	92-0778	2	Bearing
12	92-0664	2	Hub-Synchro
13	92-0666	4	Spring-Synchro
14	92-0763	3	Ring-Snap
15	110-2522	1	Gear- Main, 24T
16	92-0663	1	Shaft-Main
17	92-0772	2	Key
18	92-0687	1	Gear-Main, 16 Tooth
19	92-0672	1	Gear-Main, 18 Tooth
20	92-0754	1	Ring-Snap
21	92-0673	1	Gear-Main, 14 Tooth
22	92-0650	1	Bearing
23	92-0665	6	Key-Synchro
24	92-0822	1	Gear-Reduction, 28 Tooth

Ref	Part No.	Qty.	Description
25	92-0679	1	Gear-Reduction, H23 Tooth
26	92-0680	1	Collar
27	92-0823	1	Gear-Reduction, 43 Tooth
28	92-0674	1	Shaft-Reduction
29	92-0682	1	Washer-Thrust
30	92-0681	2	Bearing-Needle
31	110-2524	1	Gear- Reduction, 49T
32	92-0819	1	Gear-Reduction, 40 Tooth
33	92-0782	1	Bearing-Needle
34	105-7985	1	Bearing

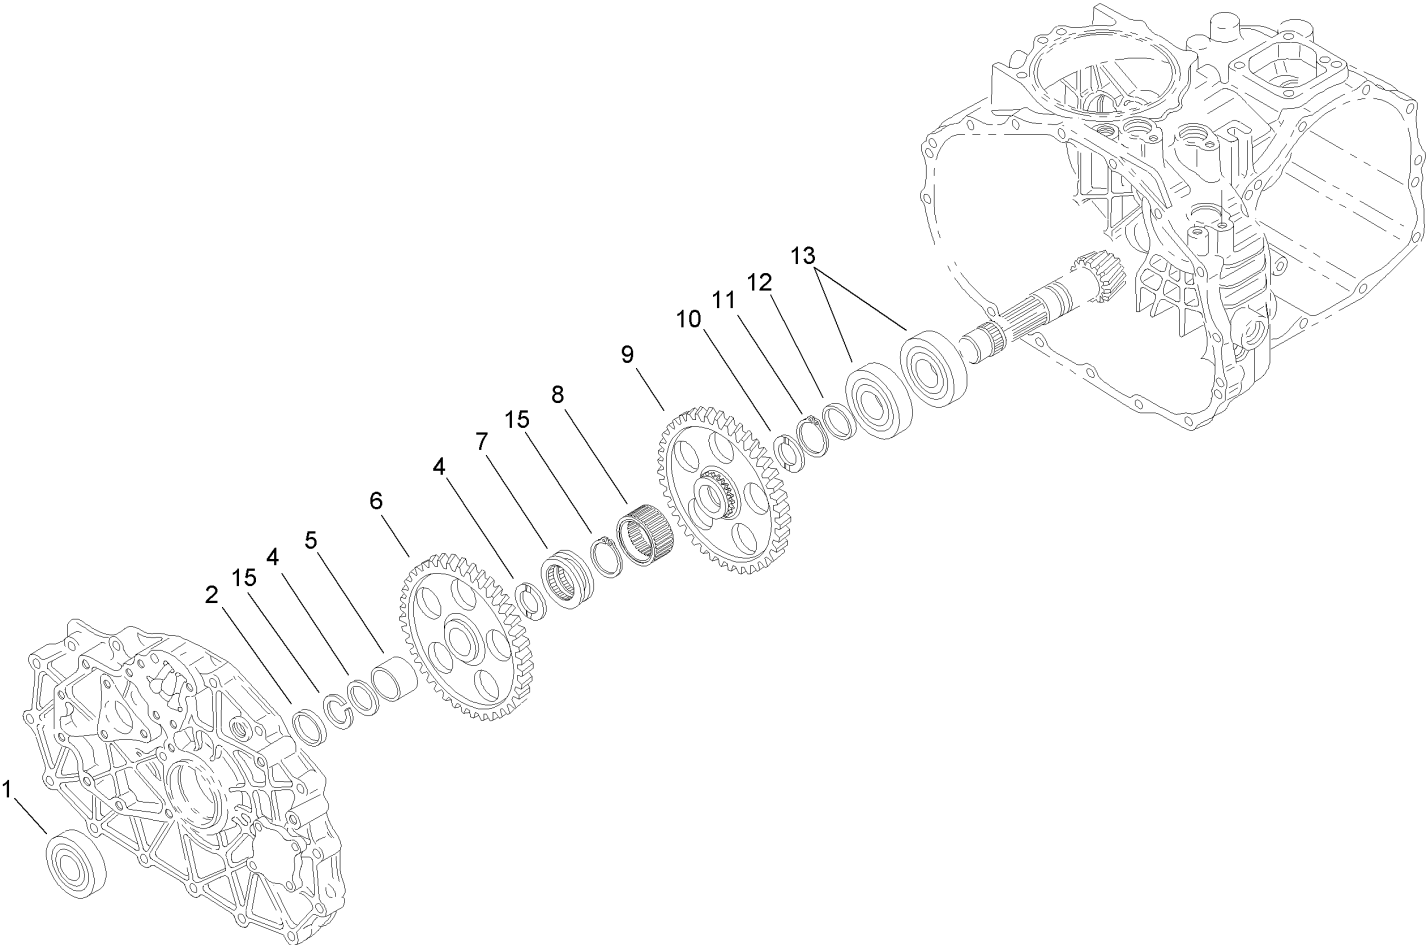 


Countershaft Assembly
Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0712	1	Bearing-Ball				
2	92-0716	1	Collar				
4	92-0711	2	Washer-Thrust				
5	92-0783	1	Race-Inner				
6	92-0715	1	Gear-Shaft, Counter				
7	92-0718	1	Shifter				
8	105-7986	1	Collar-Spline				
9	92-0717	1	Gear-Shaft, Counter				
10	92-0741	1	Washer-Thrust				
11	92-0755	1	Ring-Snap				
12	92-0713	1	Collar				
13	92-0714	2	Bearing				
15	105-7987	2	Ring-Snap				

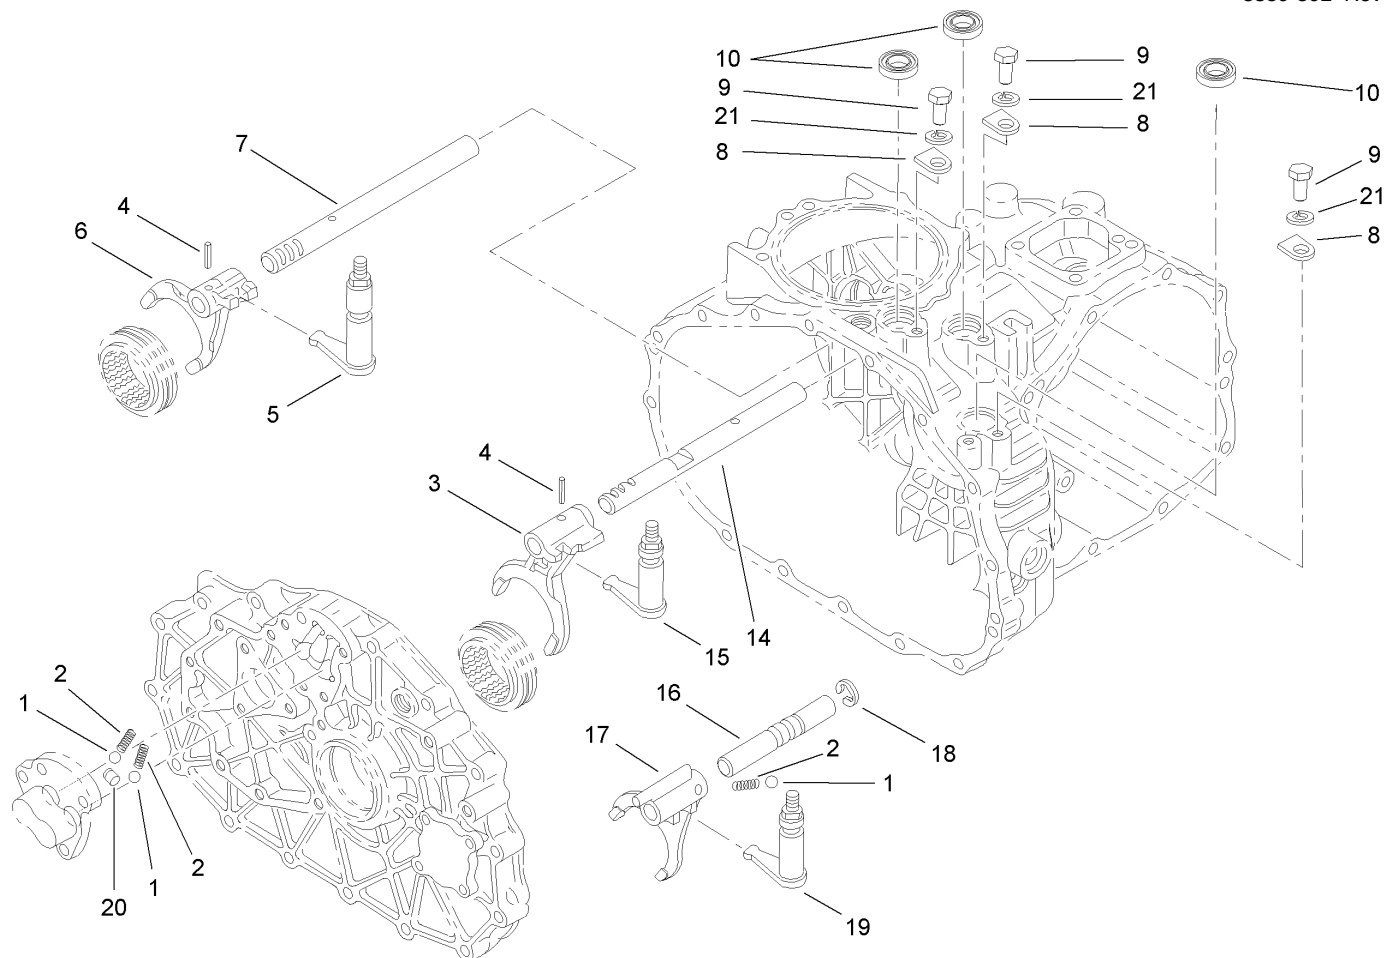 

Shift Fork Assembly
Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0785	3	Ball-Steel				
2	92-0731	3	Spring				
3	92-0700	1	Fork-Shift				
4	92-0769	2	Pin-Roll				
5	92-0817	1	Arm-Shift				
6	92-0701	1	Fork-Shift				
7	92-0699	1	Shaft-Fork				
8	92-0732	3	Plate-Keeper				
9	33114-016	3	Screw-HH				
10	92-0729	3	Seal-Oil				
14	92-0698	1	Shaft-Fork				
15	92-0816	1	Arm-Shift				
16	92-0708	1	Shaft-Fork				
17	92-0709	1	Fork-Shift				
18	92-0761	1	Ring-E				
19	92-0818	1	Arm-Shift				
20	92-0705	1	Lock-Spindle				
21	42-9850	3	Washer-Lock, Spring				

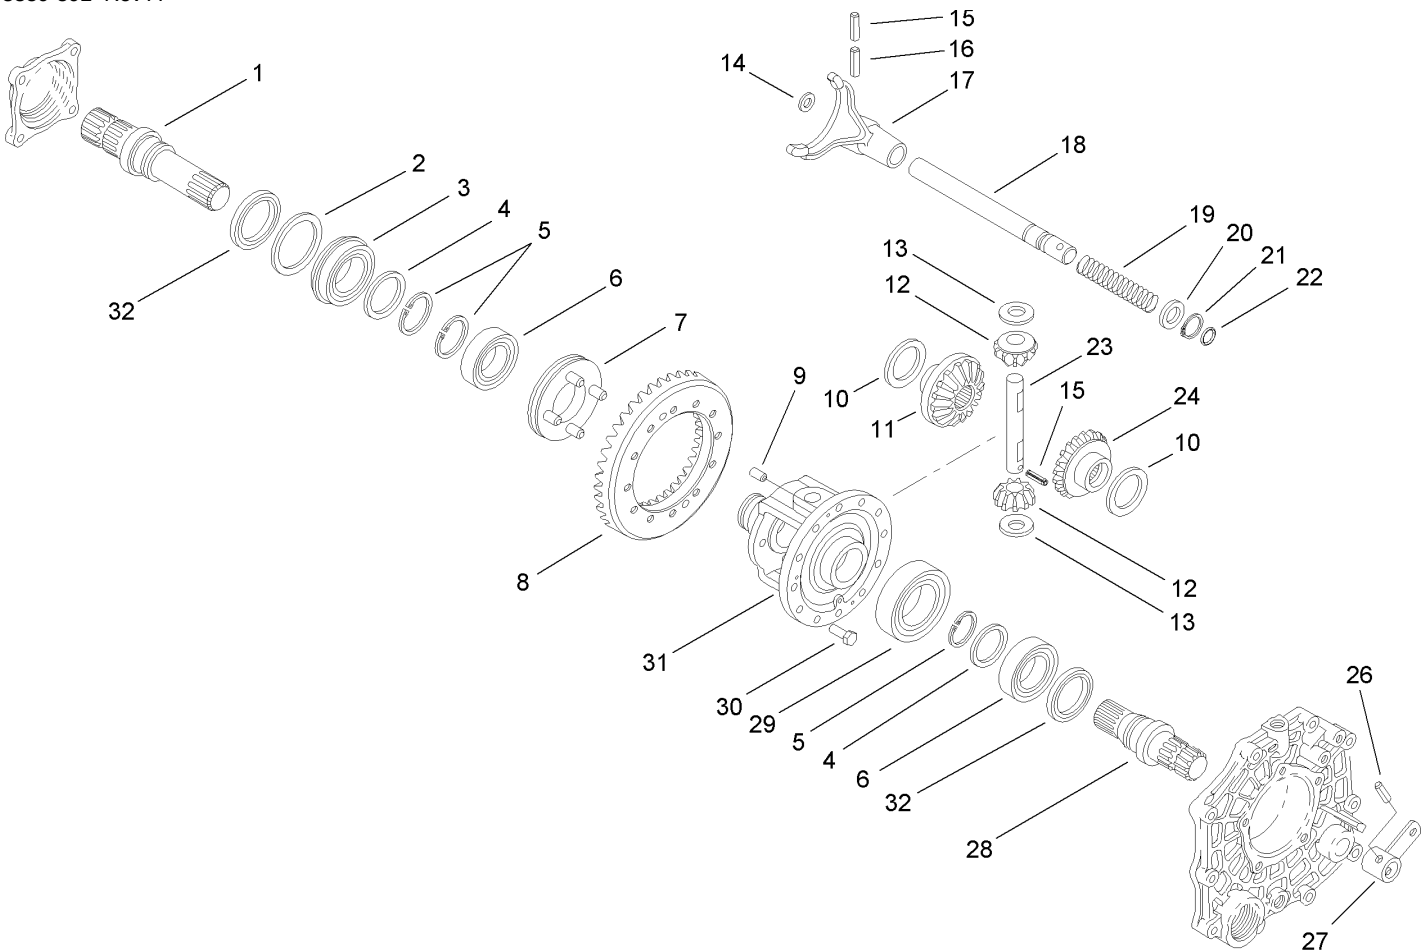 


Differential Gear Assembly

Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	92-0726	1	Shaft-Axle, Right
2	92-0728	1	Washer
3	92-0780	1	Bearing
4	92-0727	2	Washer
5	92-0756	3	Ring-Snap
6	92-0775	2	Bearing
7	92-0730	1	Slider-Differential, Lock
8	105-7983	1	Countershaft And Ring Gear
9	92-0765	2	Pin-Parallel
10	92-0747	2	Side-Gear, Left Inner
11	92-0746	1	Gear-Side, RH
12	92-0748	2	Pinion-Differential
13	92-0750	2	Washer
14	92-0744	1	Washer
15	92-0768	2	Pin-Roll, Spring
16	92-0771	1	Pin-Roll, Spring
17	92-0721	1	Fork-Lock, Differential
18	92-0722	1	Shaft-Fork, Lock Differential
19	92-0723	1	Spring-Lock, Differential
20	92-0733	1	Washer
21	92-0753	1	Ring-Snap
22	92-0787	1	O-Ring
23	92-0749	1	Shaft-Pinion
24	92-0745	1	Gear-Side, LH

Ref	Part No.	Qty.	Description
26	92-0770	1	Pin-Roll, Spring
27	92-0724	1	Arm-Lock, Differential
28	92-0725	1	Shaft-Axle, Left
29	92-0776	1	Bearing
30	92-0803	12	Bolt
31	92-0720	1	Case-Differential
32	92-0793	2	Seal-Oil

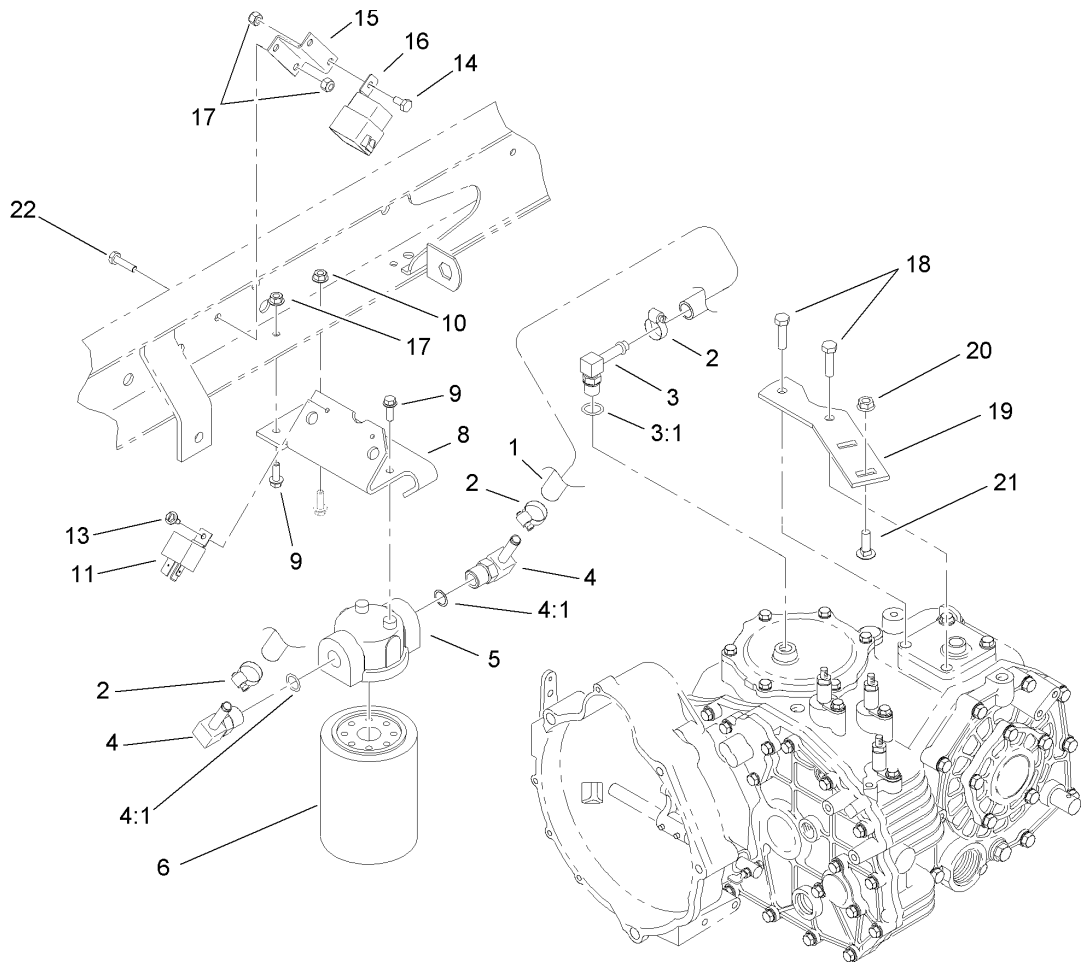 


Diesel Hydraulic Filter and Relay Assembly

Ref	Part No.	Qty.	Description				
1	87-5730	1	Hose				
2	2412-36	3	Clamp-Hose				
3	100-4887	1	Fitting-Barb				
3:1	237-42	1	O-Ring				
4	354-134	2	Fitting-HYD, 90 DEG				
4:1	237-79	1	O-Ring				
5	87-8780	1	Head-Filter				
6	54-0110	1	Filter-Oil, Transmission				
8	105-4199	1	Bracket-Mount, Filter				
9	3234-4	3	Screw-HHF				
10	32128-33	1	Nut-HF				
11	99-7435	1	Relay-Power				
13	32144-112	1	Screw-HWH				
14	321-2	1	Screw-HH				
15	105-1776	1	Bracket-Mount, Relay				
16	99-7430	1	Relay				
17	32128-33	3	Nut-HF				
18	33114-030	2	Screw-HH				
19	105-9472	1	Plate-Mount, Muffler				
20	32128-20	2	Nut-HF				
21	3230-2	2	Bolt-CARR				
22	321-4	2	Screw-HH				

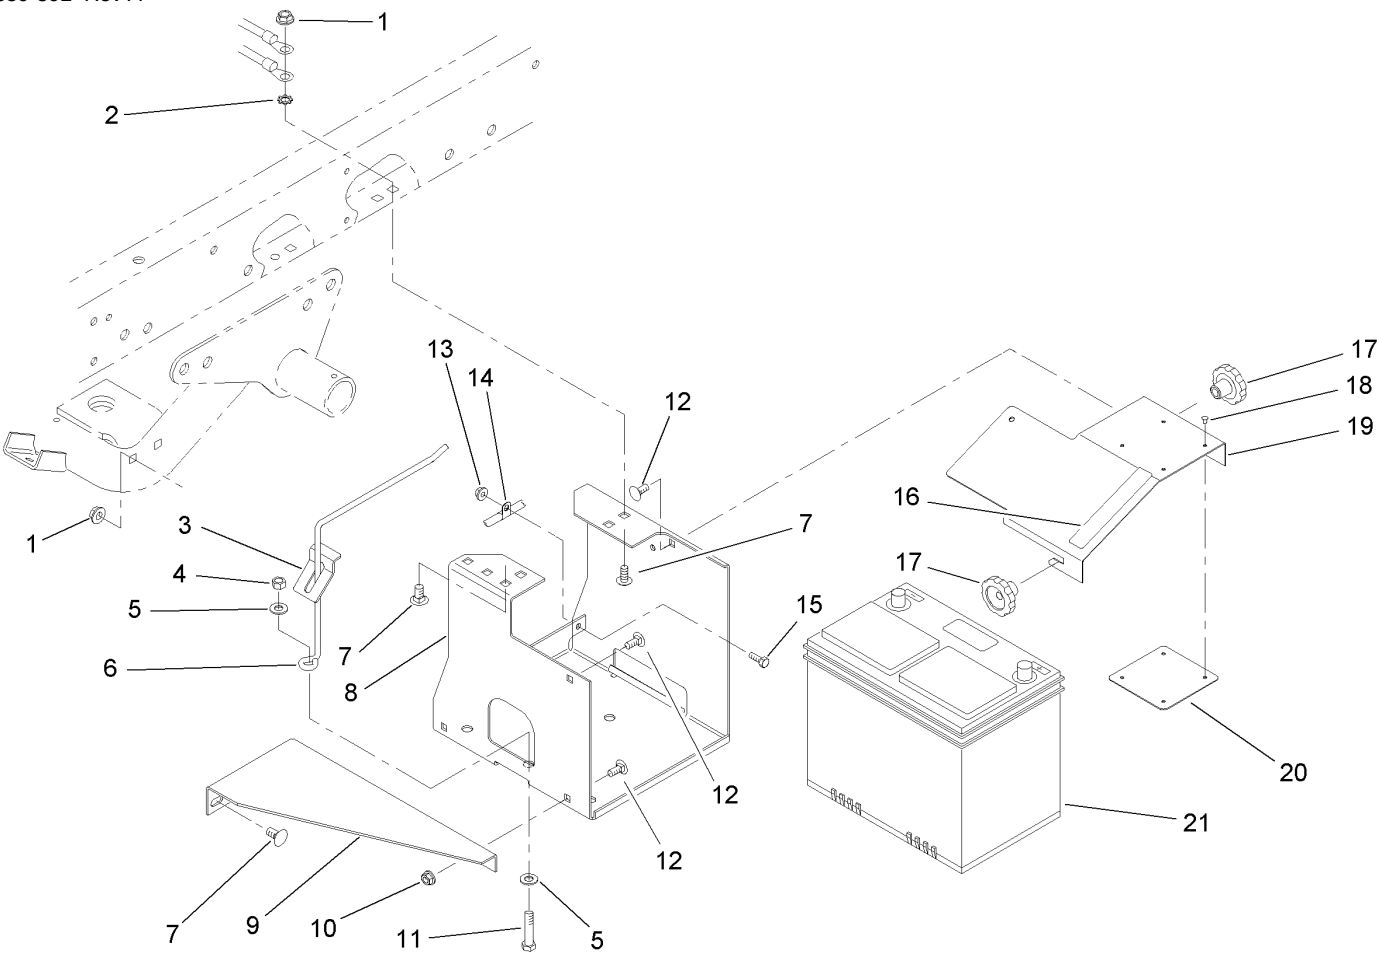 

Battery Assembly


Ref	Part No.	Qty.	Description				
1	3290-357	6	Nut-HHF, Whiz				
2	3255-9	1	Washer-Lock				
3	87-7610	1	Tab-Support, Battery				
4	3296-39	1	Nut-Lock, NI				
5	3256-24	2	Washer-Flat				
6	87-7600	1	Rod-Support, Battery				
7	3231-27	6	Screw-CARR				
8	87-5120-03	1	Bracket-Holder, Battery				
9	87-5110-03	1	Support-Base, Battery				
10	32128-20	2	Nut-HF				
11	323-9	1	Screw-HH				
12	3230-23	4	Screw-CARR				
13	32128-33	1	Nut-HF				
14	2412-89	1	Clamp				
15	321-4	1	Screw-HH				
16	93-6687	1	Decal-No Step				
17	19-4050	2	Knob				
18	3269-27	4	Rivet-Snap				
19	87-5130-03	1	Cover-Battery				
20	87-7620	1	Shield-Terminal, Battery				
21	106-5190	1	Battery				

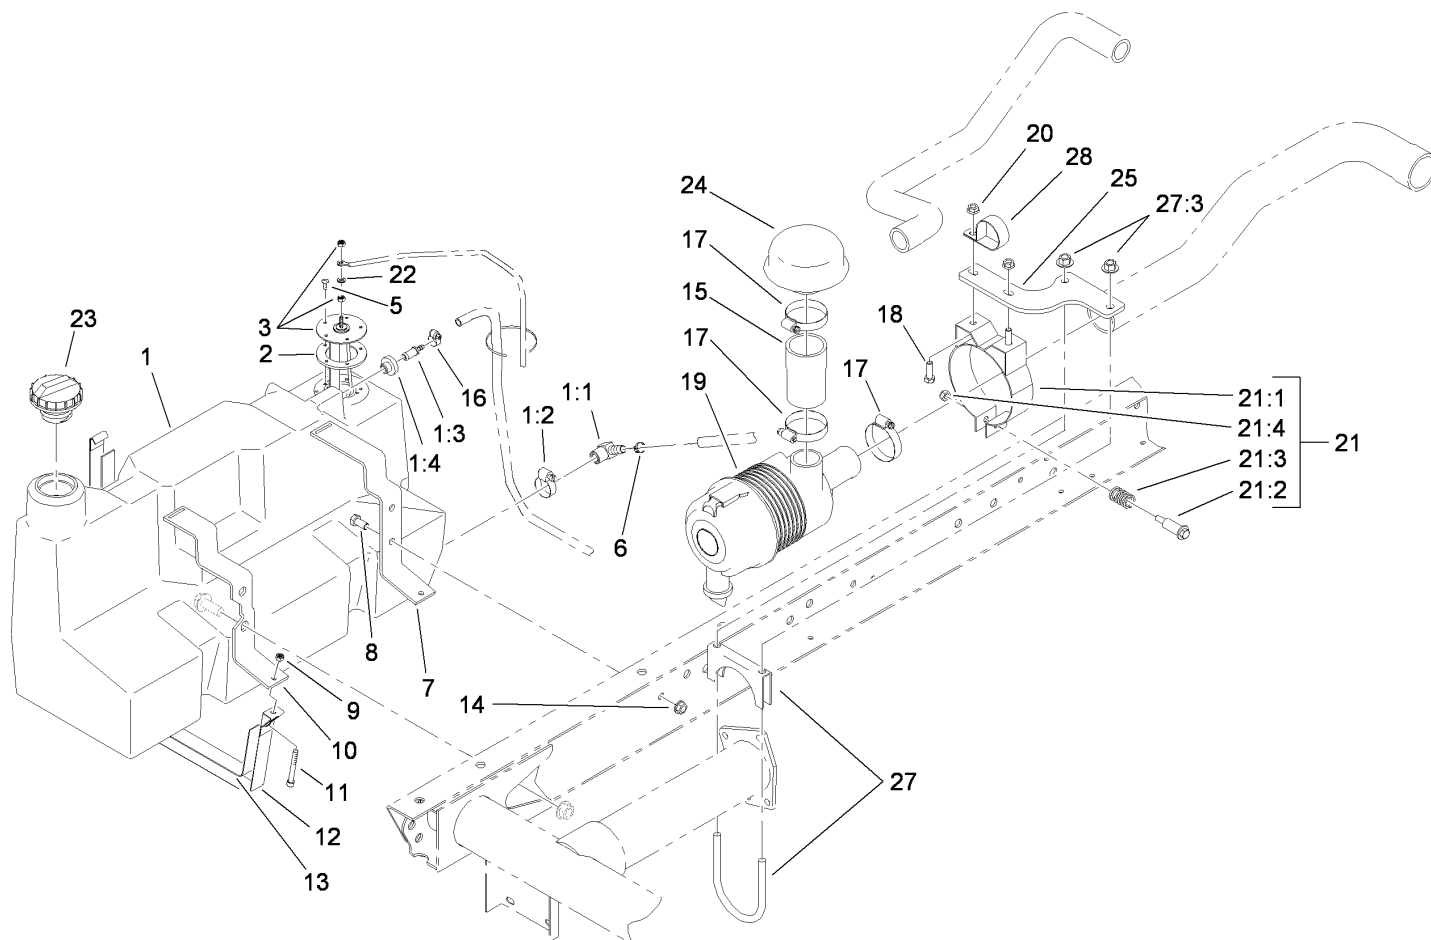 

Diesel Fuel Tank and Air Cleaner Assembly


Ref	Part No.	Qty.	Description
1	98-2915	1	Tank-Fuel
1:1	353-781	1	Fitting-Elbow
1:2	2412-36	1	Clamp-Hose
1:3	98-2952	1	Fitting-Straight
1:4	46-6560	1	Bushing
2	62-7650	1	Gasket
3	63-7640	1	Sender-Fuel
5	112-3169	5	Screw-HHF, Serrated
6	92-2379	1	Clamp-Hose
7	87-3140-03	1	Support-Gas Tank, Rear
8	323-4	2	Screw-HH
9	3296-42	2	Nut-Lock, NI
10	87-3150-03	1	Support-Gas Tank, Front
11	3274-54	2	Screw-HSH
12	87-3160	2	Strap-Tank, Gas
13	87-3170	2	Felt-Strap
14	3290-357	2	Nut-HHF, Whiz
15	107-7962	1	Hose-Cleaner, Air
16	2412-108	1	Clamp-Worm
17	2412-92	3	Clamp-Hose
18	322-5	2	Screw-HH
19	106-2416	1	Aircleaner ASM
20	32128-20	2	Nut-HF
21	93-2191	1	Band-Mounting, Air Cleaner

Ref	Part No.	Qty.	Description
21:1		1	Clamp ASM
21:2	94-3653	1	Bolt
21:3	94-3654	1	Spring
21:4	48-9510	1	Nut
22	5-3637	1	Spacer
23	115-3002	1	Cap-Biodiesel
24	46-7510	1	Hood-Inlet, Air
25	106-7948-03	1	Bracket-Mount
27	107-7954	1	Clamp-Muffler
27:3	32128-43	2	Nut-Flange
28	2412-147	1	Clamp

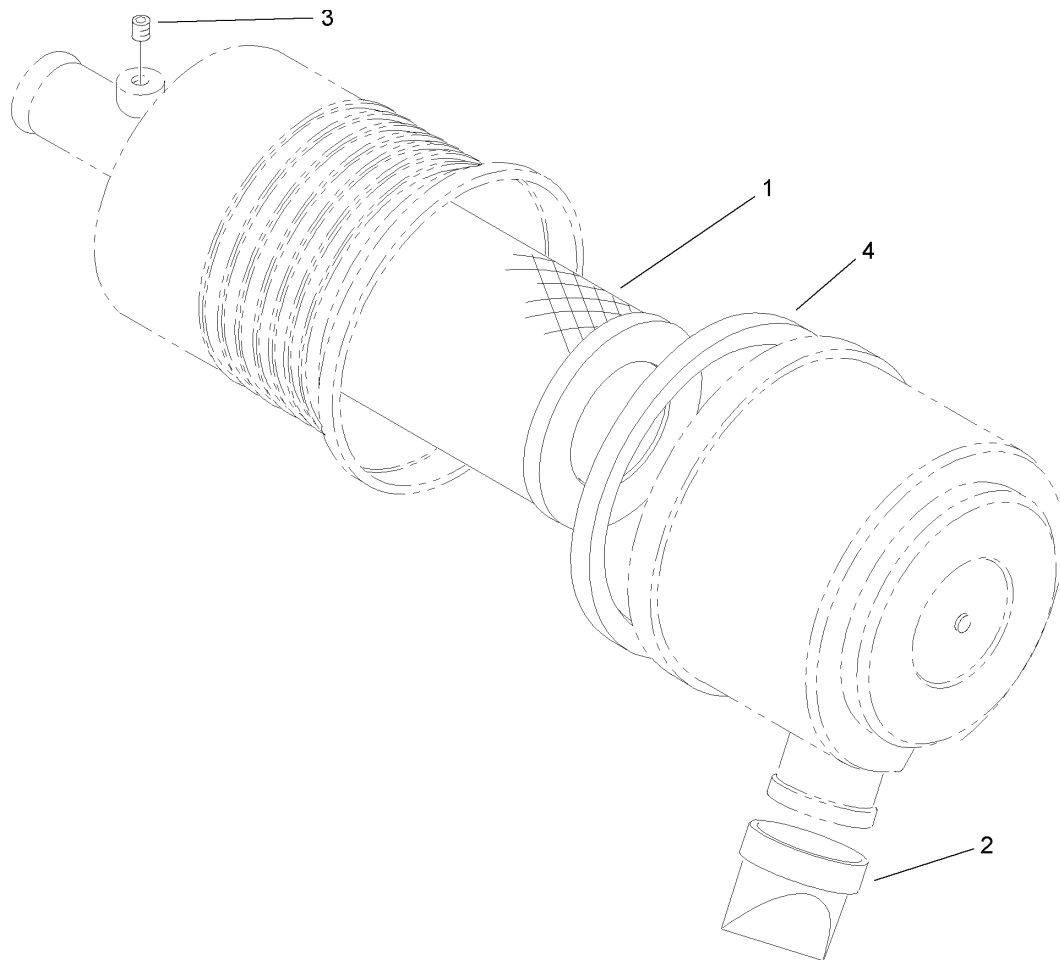 


Air Cleaner Assembly No. 106-2416

Ref	Part No.	Qty.	Description
1	108-3811	1	Filter-Air
2	104-0498	1	Valve-Vacuator
3	285-17	1	Plug-Pipe
4	106-6748	1	Gasket

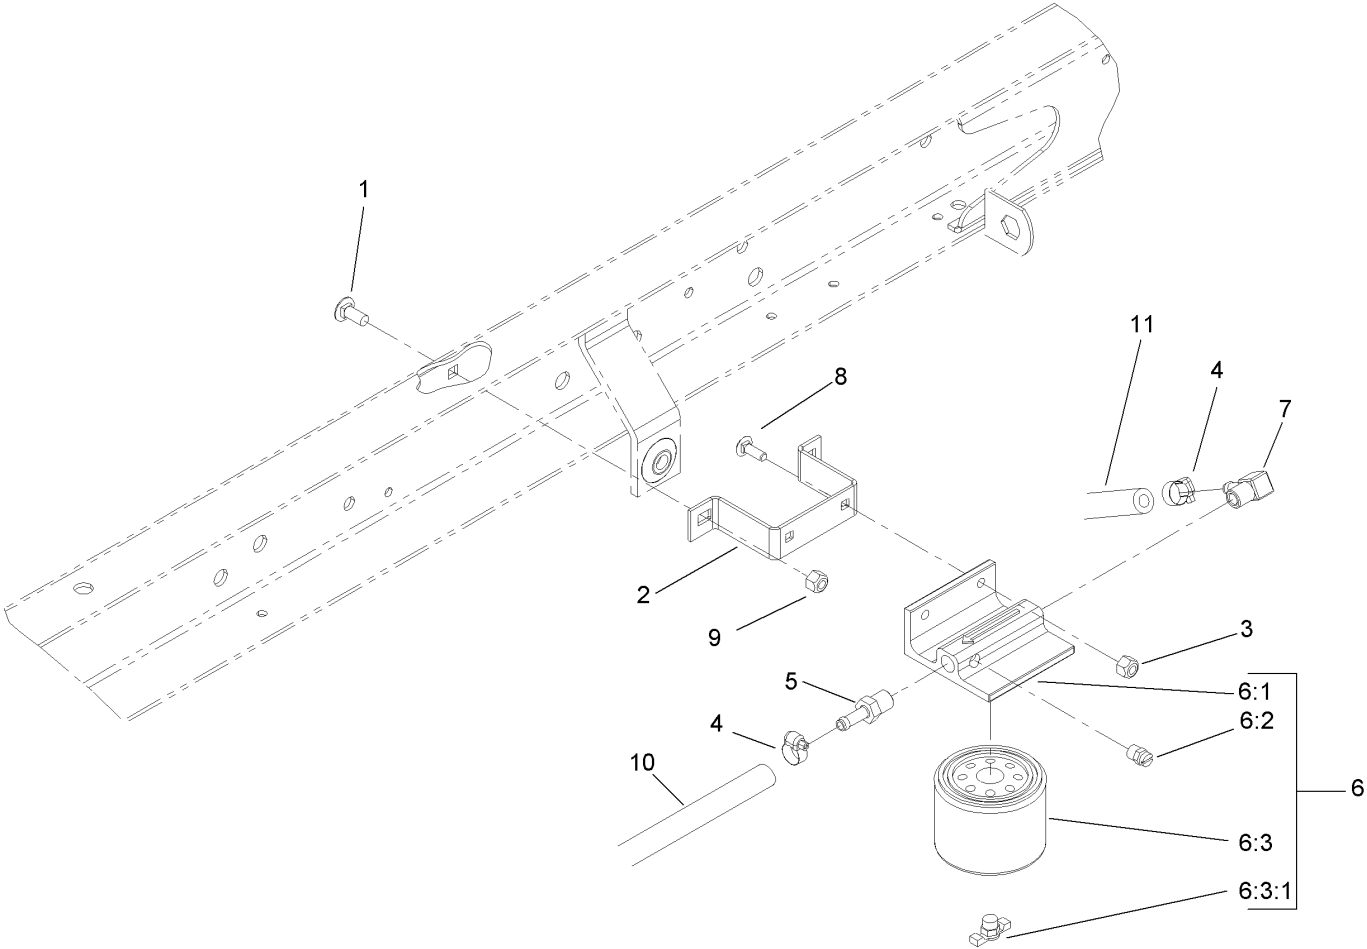 

Diesel Filter Assembly


Ref	Part No.	Qty.	Description				
1	3230-23	2	Screw-CARR				
2	105-4202	1	Bracket-Mount, Filter				
3	3296-42	2	Nut-Lock, NI				
4	2412-108	2	Clamp-Worm				
5	353-783	1	Fitting-Straight				
6	63-7650	1	Separator-Filter / Water				
6:1	63-8280	1	Head ASM				
6:2	63-8290	1	Vent-Air				
6:3	63-8300	1	Element-Spin On				
6:3:1	63-8310	1	Valve-Drain				
7	353-707	1	Fitting-HYD, 90 DEG				
8	3229-25	2	Screw-CARR				
9	3296-29	2	Nut-Lock, NI				
10	110-4104	1	Hose-Fuel				
11	109-0309	1	Hose-Fuel				

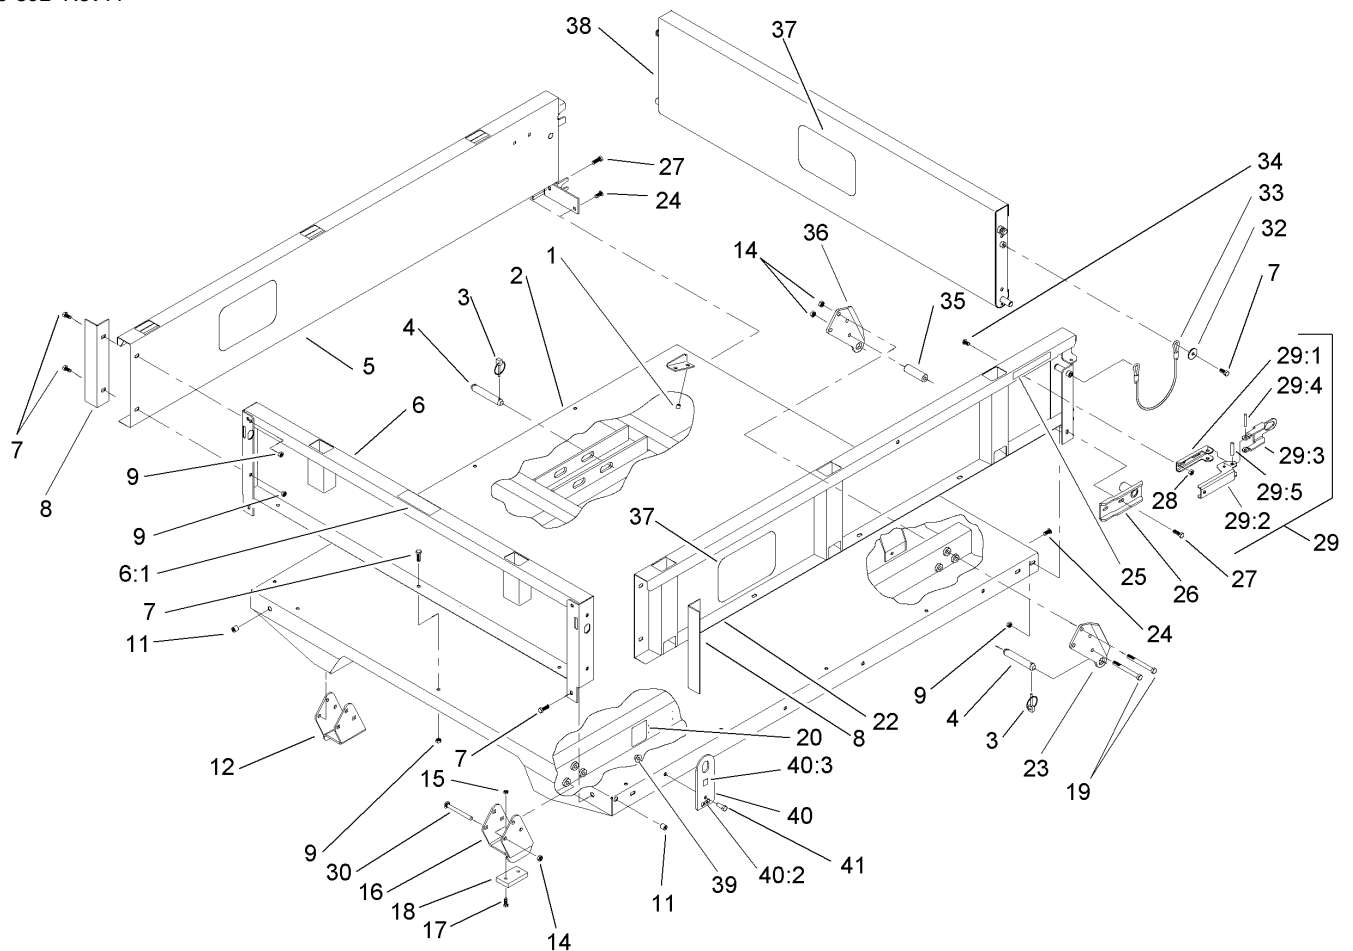 

Full Bed and Side Panel Assembly

Ref	Part No.	Qty.	Description
1	32148-6	4	Insert-Nut
2	93-9724-03	1	Flatbed-Full
3	92-1298	8	Pin-Lynch
4	92-1233	4	Pin-Clevis
5	92-1255-03	1	RH Side Panel ASM
6	92-5982	1	Front Panel ASM
6:1	93-6689	1	Decal-No Riders
7	3234-7	21	Screw-HHF
8	92-1320-03	2	Angle-Side
9	104-8300	23	Nut-Flange, NI
11	32148-7	4	Nut-Insert
12	106-2423-03	1	RH Spacer Bracket ASM
14	3296-44	14	Nut-Lock, NI
15	3296-42	4	Nut-Lock, NI
16	106-2422-03	1	LH Spacer Bracket ASM
17	3250-45	4	Screw-SPH
18	93-9719	2	Block-Wear
19	323-42	8	Screw-HH
20	93-9899	2	Decal-Warning
22	92-1248-03	1	LH Side Panel ASM
23	93-9720-03	2	Bracket-Pivot, Long (LH)
24	3230-1	2	Bolt-CARR
25	93-9868	2	Decal-Caution
26	92-1265-03	2	Bracket-Pivot


Ref	Part No.	Qty.	Description
27	3234-29	6	Screw-HHF
28	32128-20	4	Nut-HF
29	99-1123	2	Latch ASM
29:1	92-1271	1	Pivot-Latch
29:2	99-1113	1	Handle-Latch
29:3	99-1112	1	Plate-Retainer
29:4	32121-78	1	Pin-Roll
29:5	32121-25	1	Pin-Roll
30	3231-24	6	Screw-CARR
32	3256-57	4	Washer-Flat
33	93-9595	2	Lanyard
34	3230-15	4	Screw-CARR
35	93-9575	2	Tube-Pivot, Flatbed
36	93-9721-03	2	Bracket-Pivot, Long (RH)
37	105-4222	3	Decal
38	92-1259-03	1	Tailgate-Rear
39	32128-43	4	Nut-Flange
40	106-6733	4	Lift Plate ASM
40:2	93-9525	1	Decal
40:3	93-9084	1	Decal-Point, Lift
41	323-6	4	Screw-HH

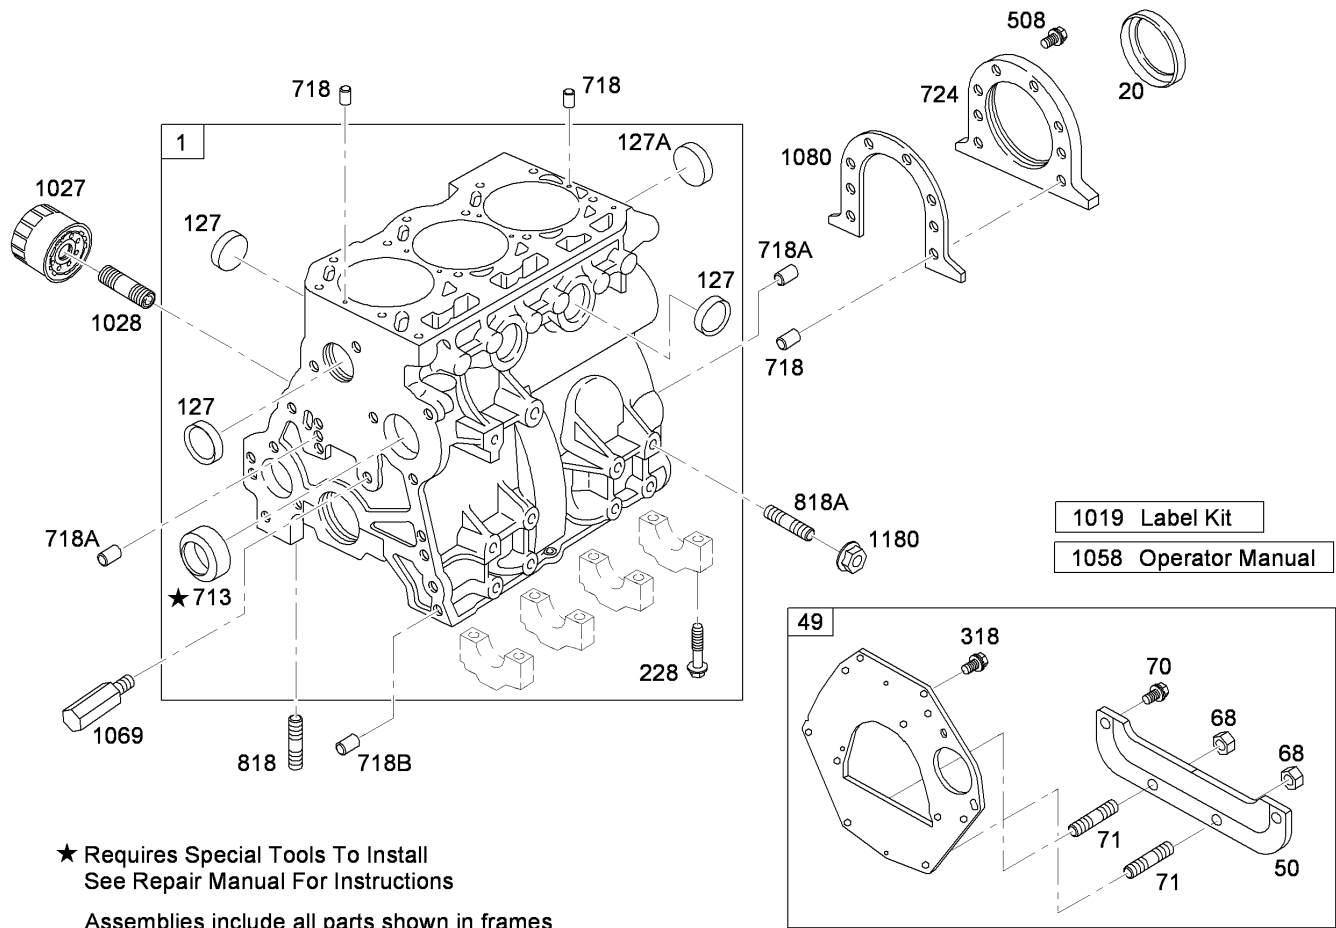 

Cylinder Assembly

Ref	Part No.	Qty.	Description
1	107-9891	1	Cylinder ASM
20	99-9003	1	Seal-Oil
49	115-2310	1	Backing Plate ASM
50	115-2309	1	Plate-End Shield
68	99-9114	1	Nut-Hex, Metric
70	115-2307	1	Screw
71	115-2306	1	Stud
127	99-9008	1	Plug-Welch
127A	107-9892	1	Plug-Welch (Cam)
228	99-9006	1	Screw-Hex
318	99-9005	1	Screw-Hex
508	99-9004	1	Screw-Hex
713	99-9002	1	Bushing
718	99-9012	1	Pin-Locating
718A	99-9013	1	Pin-Locating
718B	99-9014	1	Pin-Locating
724	99-9022	1	Retainer-Seal
818	99-9007	1	Stud-Metric
818A	99-9221	1	Stud-Standard
1019	110-2595	1	Label Kit
1027	108-3842	1	Filter-Oil
1028	105-9337	1	Adapter-Filter, Oil
1058	99-9602	1	Manual-Owner's
1069	99-9020	1	Nozzle-Oil


Ref	Part No.	Qty.	Description
1080	99-9021	1	Gasket-Retainer
1180	99-9176	1	Nut-Hex

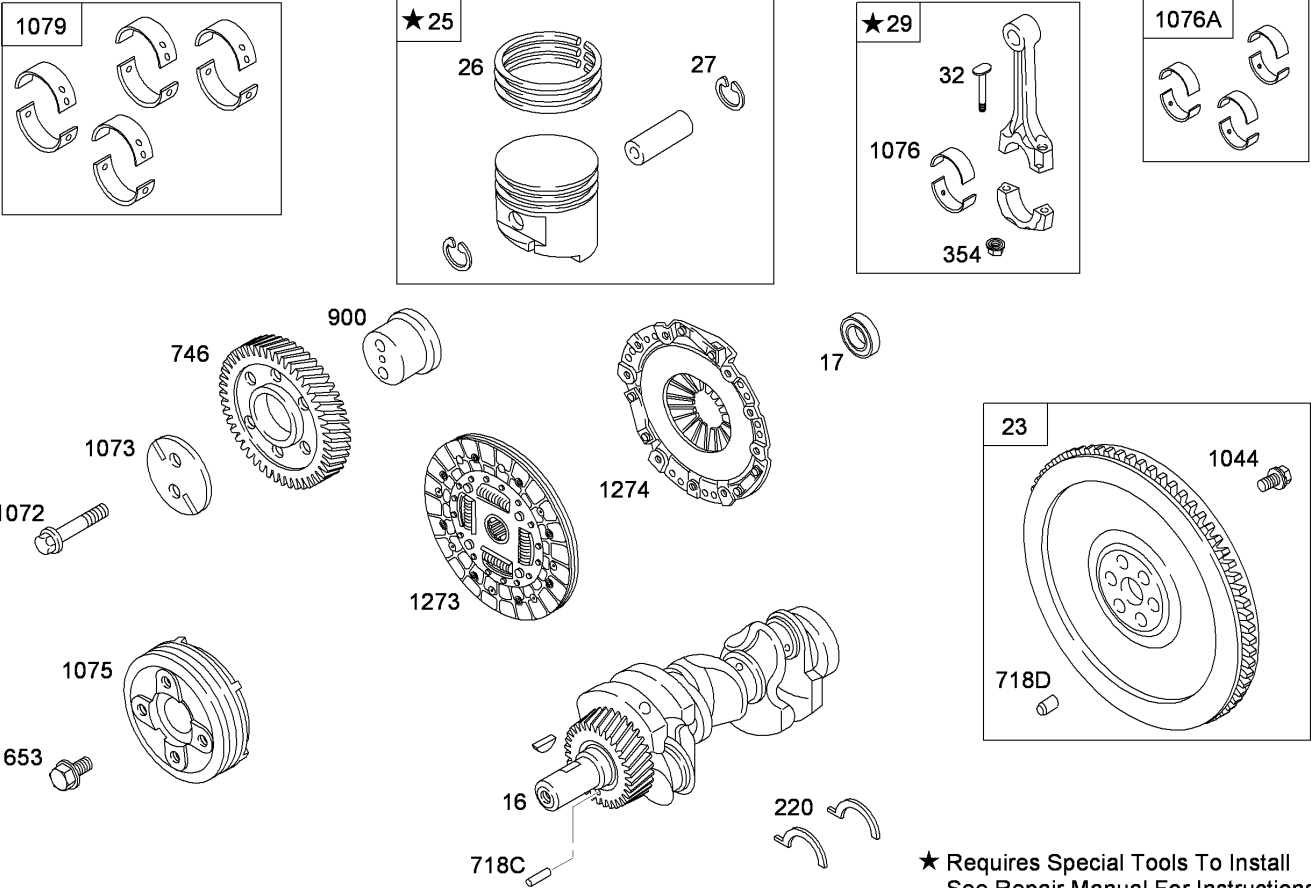 

Assemblies include all parts shown in frames

Crankshaft Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
16	105-9339	1	Crankshaft	1076A	99-9043	1	Set-Bearing, Rod
17	105-9324	1	Bearing-Ball, Radial	1076A	99-9044	1	Set-Bearing, Rod (.010 Undersized)
23	105-9323	1	Flywheel ASM	1079	99-9045	1	Set-Bearing, Main (Set Of 8)
25	107-9895	1	Piston ASM	1079	99-9046	1	Set-Bearing, Main (.010 Undersized)
25	107-9896	1	Piston ASM (Oversize)	1273	104-9219	1	Disc-Clutch
26	105-9340	1	Ring Set	1274	104-9231	1	Plate-Pressure, Clutch
26	99-9269	1	Ring Set (.010 In Oversized)				
27	99-9607	1	Lock-Pin, Piston				
29	99-9608	1	Rod-Connecting				
32	99-9030	1	Screw-Rod, Connecting				
220	99-9035	1	Washer-Thrust				
220	99-9036	1	Washer-Thrust (.005 In Oversized)				
354	99-9034	1	Nut-Hex				
653	107-9897	1	Screw-Hex				
746	99-9609	1	Gear-Drive				
718C	99-9037	1	Pin-Locating				
718D	106-1852	1	Pin-Locating				
900	99-9039	1	Shaft-Gear				
1044	99-9031	1	Screw-Hex				
1072	99-9032	1	Screw-Hex				
1073	99-9040	1	Plate-Gear, Idler				
1075	99-9041	1	Pulley-Crankshaft				
1076	99-9042	1	Bearing-Rod				

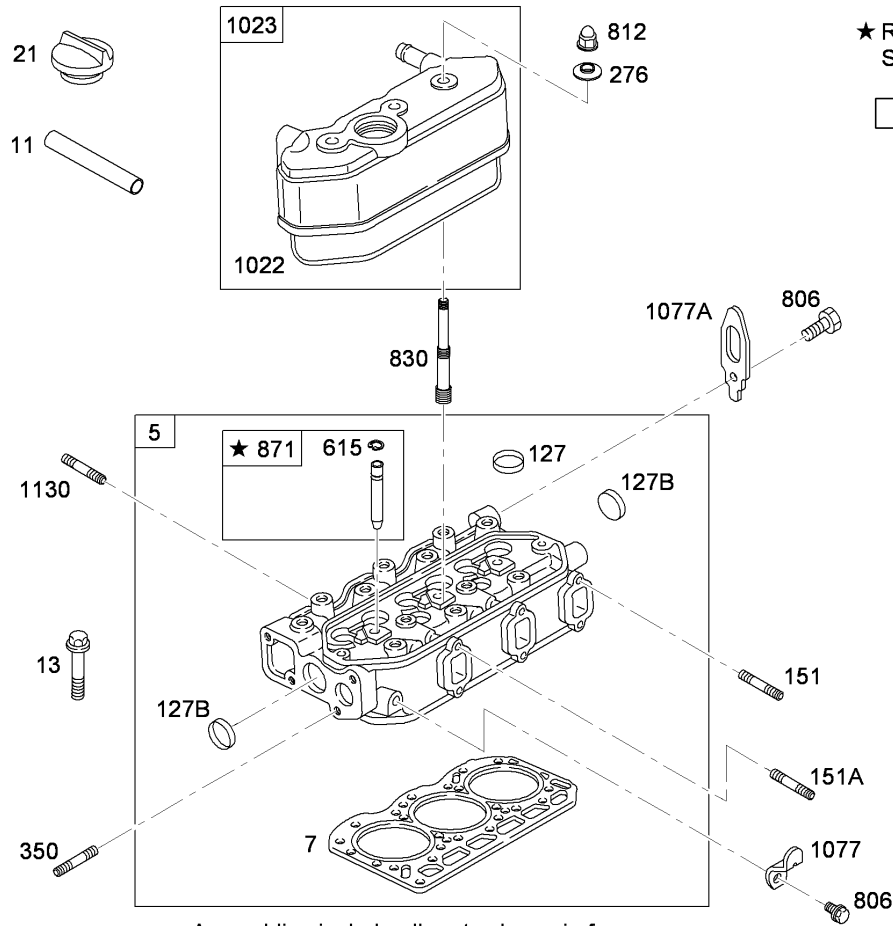 


★ Requires Special Tools To Install
See Repair Manual For Instructions

1036 Emission Label Kit

Assemblies include all parts shown in frames

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
5	110-2596	1	Head-Cylinder				
7	107-9898	1	Gasket-Head, Cylinder				
11	105-9342	1	Tube-Breather				
13	99-9614	1	Screw-Metric				
21	99-9052	1	Cap-Fill, Oil				
127	99-9060	1	Plug-Welch				
127B	99-9008	1	Plug-Welch				
151	99-9058	1	Stud-Metric				
151A	99-9059	1	Stud-Metric				
276	99-9063	1	Washer-Seal				
350	99-9057	1	Stud-Metric				
615	99-9067	1	Retainer				
806	99-9054	1	Screw-Hex				
812	99-9061	1	Nut-Hex, Metric				
830	99-9101	1	Stud-Arm, Rocker				
871	99-9070	1	Bushing-Guide				
1022	99-9073	1	Gasket-Cover, Rocker				
1023	100-6402	1	Cover-Rocker				
1036	99-9615	1	Emission Label Kit				
1077	99-9076	1	Bracket-Lifting				
1077A	99-9077	1	Bracket-Lifting				
1130	99-9055	1	Stud-Metric				

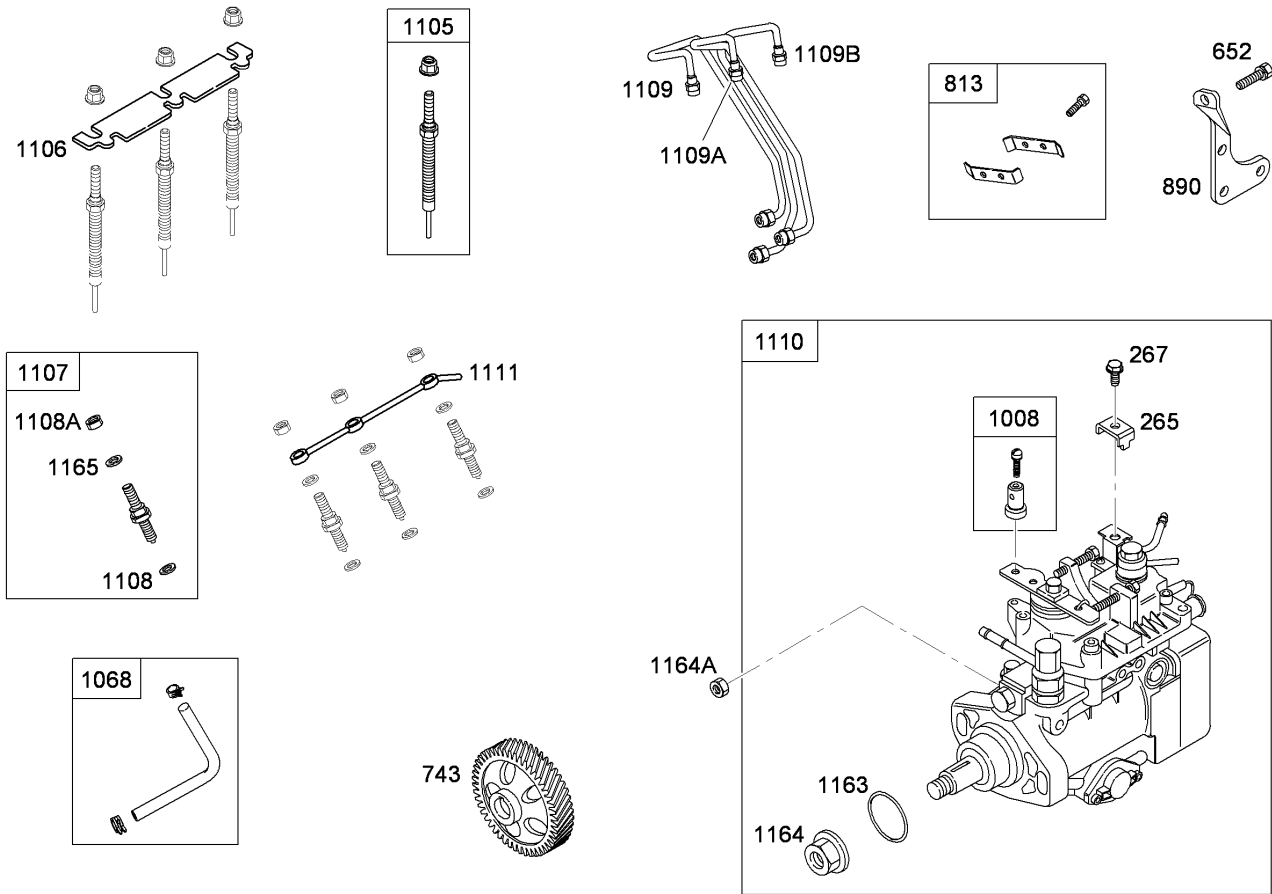 

Assemblies include all parts shown in frames

Injection Pump Assembly


Ref	Part No.	Qty.	Description				
265	99-9688	1	Clamp-Casing				
267	100-6403	1	Screw-Metric				
652	99-9616	1	Screw-Hex				
743	99-9624	1	Gear-Drive				
813	99-9625	1	Clamp				
890	99-9626	1	Bracket-Support				
1008	99-9628	1	Clamp-Swivel				
1068	99-9629	1	Hose / Clamp ASM				
1105	114-4695	1	Plug-Glow				
1106	99-9631	1	Strap-Plug, Glow				
1107	115-2295	1	Nozzle-Injector				
1108	99-9633	1	Seat-Injector				
1108A	105-9343	1	Seat-Injector				
1109A	99-9634	1	Pipe-Injector, No. 2				
1109B	99-9635	1	Pipe-Injector, No. 3				
1109	99-9690	1	Pipe-Injector, No. 1				
1110	115-2294	1	Pump-Injection				
1111	99-9637	1	Pipe-Return, Fuel				
1163	99-9618	1	O-Ring				
1164	99-9619	1	Nut-Hex, Metric				
1164A	99-9620	1	Nut-Hex, Metric				
1165	105-9345	1	Nut				

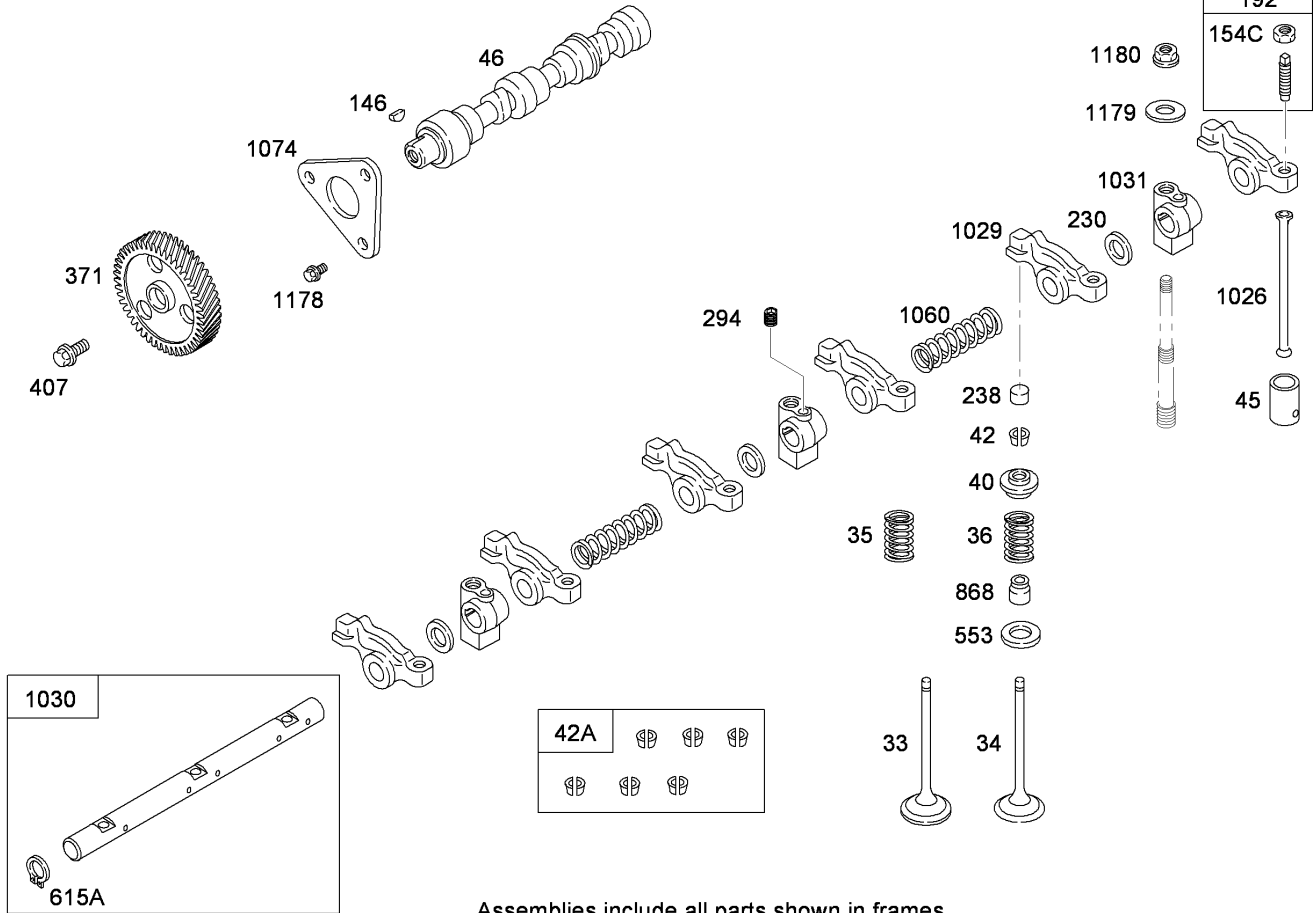 

Camshaft Assembly

Ref	Part No.	Qty.	Description
33	99-9638	1	Valve-Exhaust
34	99-9639	1	Valve-Intake
35	99-9640	1	Spring-Valve
36	99-9640	1	Spring-Valve
40	99-9084	1	Retainer-Valve
42	99-9086	1	Keeper-Valve (Set)
42A	99-9087	1	Keeper-Valve (Set Of 6)
45	99-9088	1	Tappet-Valve
46	99-9097	1	Shaft-Cam
146	99-9675	1	Key-Timing
154C	99-9091	1	Nut-Hex, Metric
192	112-2978	1	Adjuster-Rocker Arm
230	99-9093	1	Washer-Spacer
238	112-2979	1	Cap-Valve
294	99-9090	1	Screw-Metric
371	99-9641	1	Gear-Cam
407	99-9085	1	Screw-Metric
553	99-9096	1	Seat-Spring, Valve
615A	99-9099	1	Retainer
868	99-9643	1	Seal-Valve
1026	112-2980	1	Rod-Push
1029	99-9104	1	Arm-Rocker
1030	99-9106	1	Shaft-Arm, Rocker
1031	99-9107	1	Support-Arm, Rocker


Ref	Part No.	Qty.	Description
1060	99-9108	1	Spring-Shaft, Rocker
1074	99-9109	1	Retainer-Camshaft
1178	99-9083	1	Screw-Hex
1179	99-9079	1	Washer-Flat
1180	99-9091	1	Nut-Hex, Metric

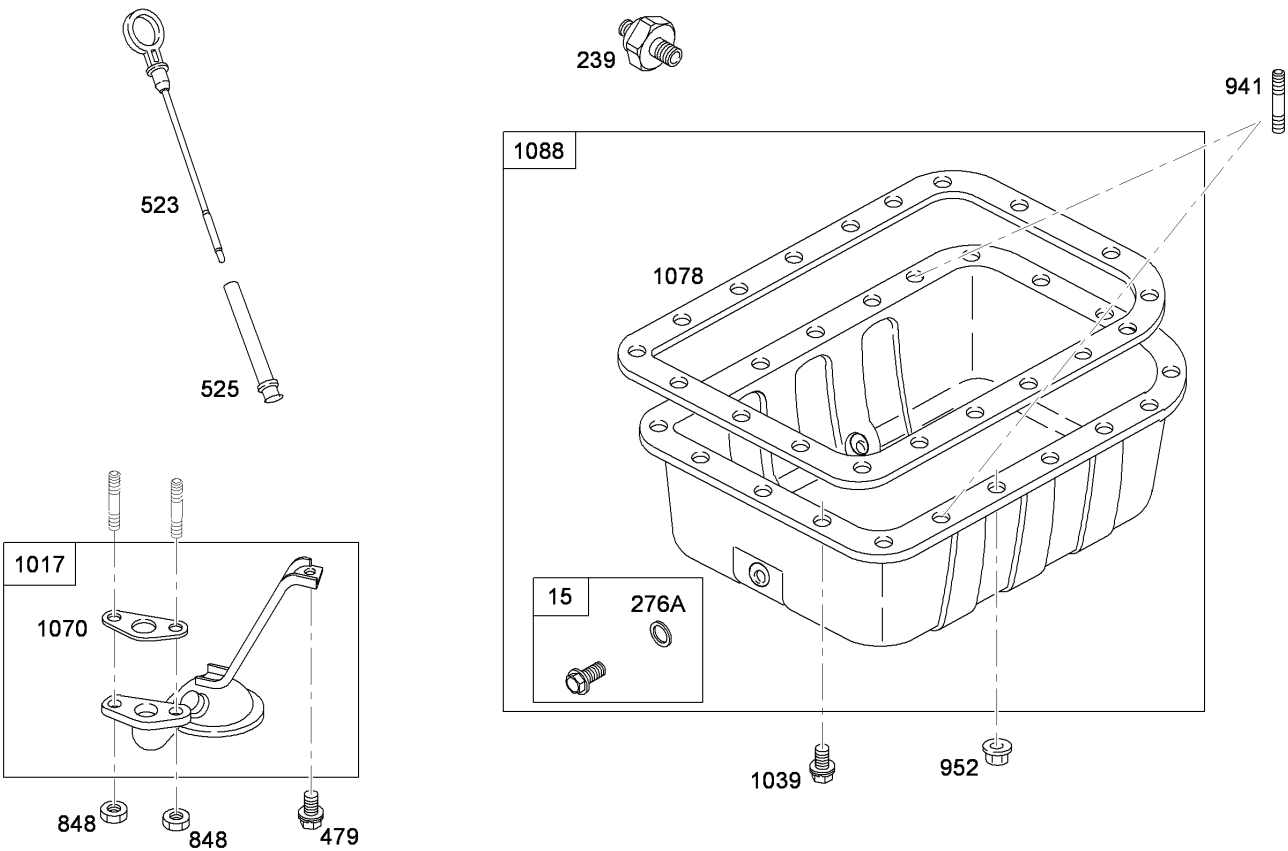 

Assemblies include all parts shown in frames

Oil Pan Assembly


Ref	Part No.	Qty.	Description				
15	99-9247	1	Plug-Drain, Oil				
239	107-9908	1	Switch-Pressure, Oil				
276A	99-9249	1	Washer-Seal				
479	99-9111	1	Screw-Hex				
523	110-2597	1	Dipstick				
525	99-9118	1	Tube-Dipstick				
848	99-9114	1	Nut-Hex, Metric				
941	99-9112	1	Stud-Metric				
952	99-9113	1	Nut-Hex, Metric				
1017	99-9116	1	Screen-Pump, Oil				
1039	99-9623	1	Screw-Hex				
1070	99-9120	1	Gasket-Strainer, Oil				
1078	99-9121	1	Gasket-Pan, Oil				
1088	99-9241	1	Pan-Oil				

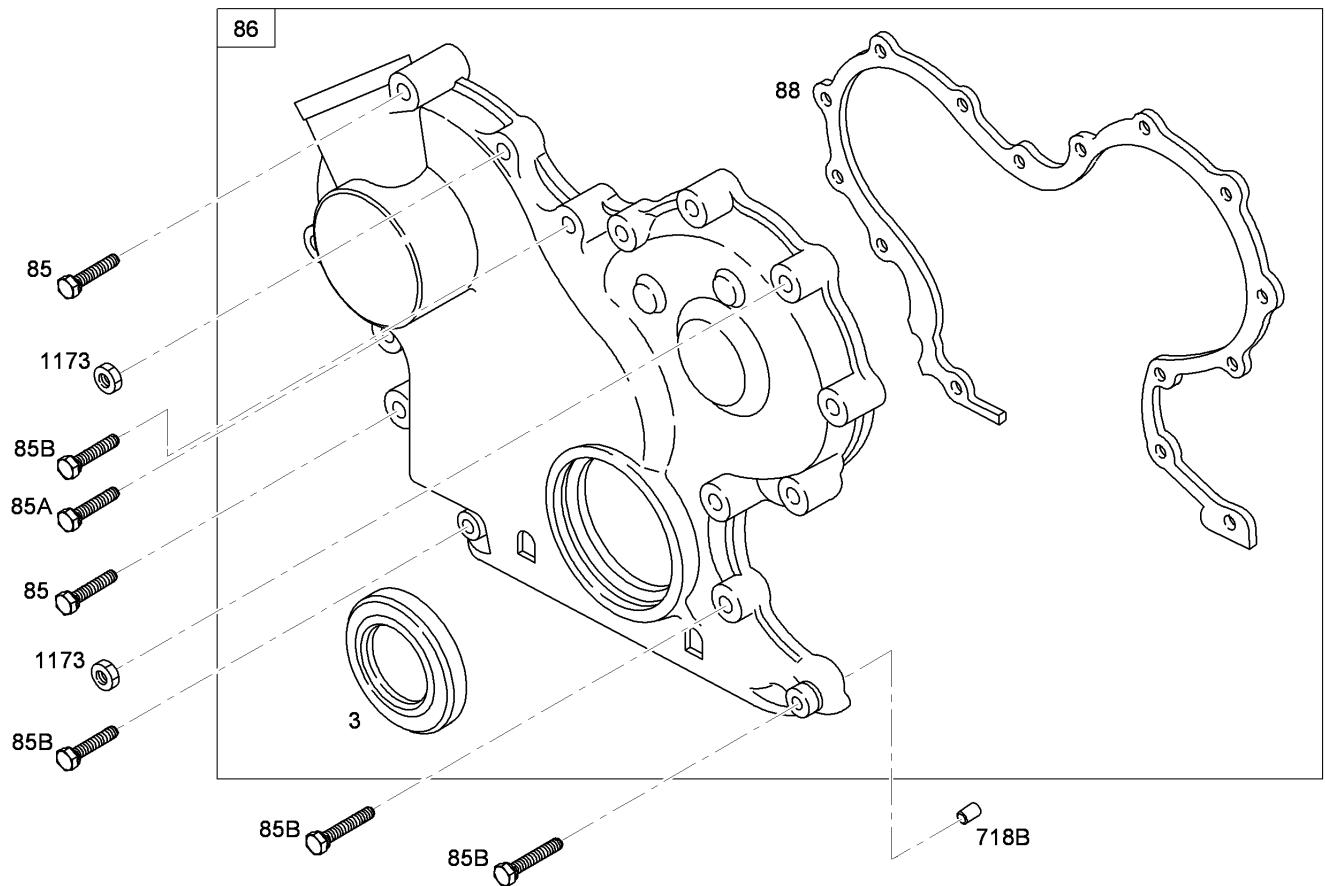 

Assemblies include all parts shown in frames

Gear Cover Assembly


Ref	Part No.	Qty.	Description				
3	115-2291	1	Seal-Oil				
85	99-9651	1	Screw-Hex				
85A	99-9128	1	Screw-Hex				
85B	99-9129	1	Screw-Hex				
86	115-2338	1	Gear Cover ASM				
88	99-9653	1	Gasket-Cover, Gear				
718B	99-9014	1	Pin-Locating				
1173	99-9114	1	Nut-Hex, Metric				

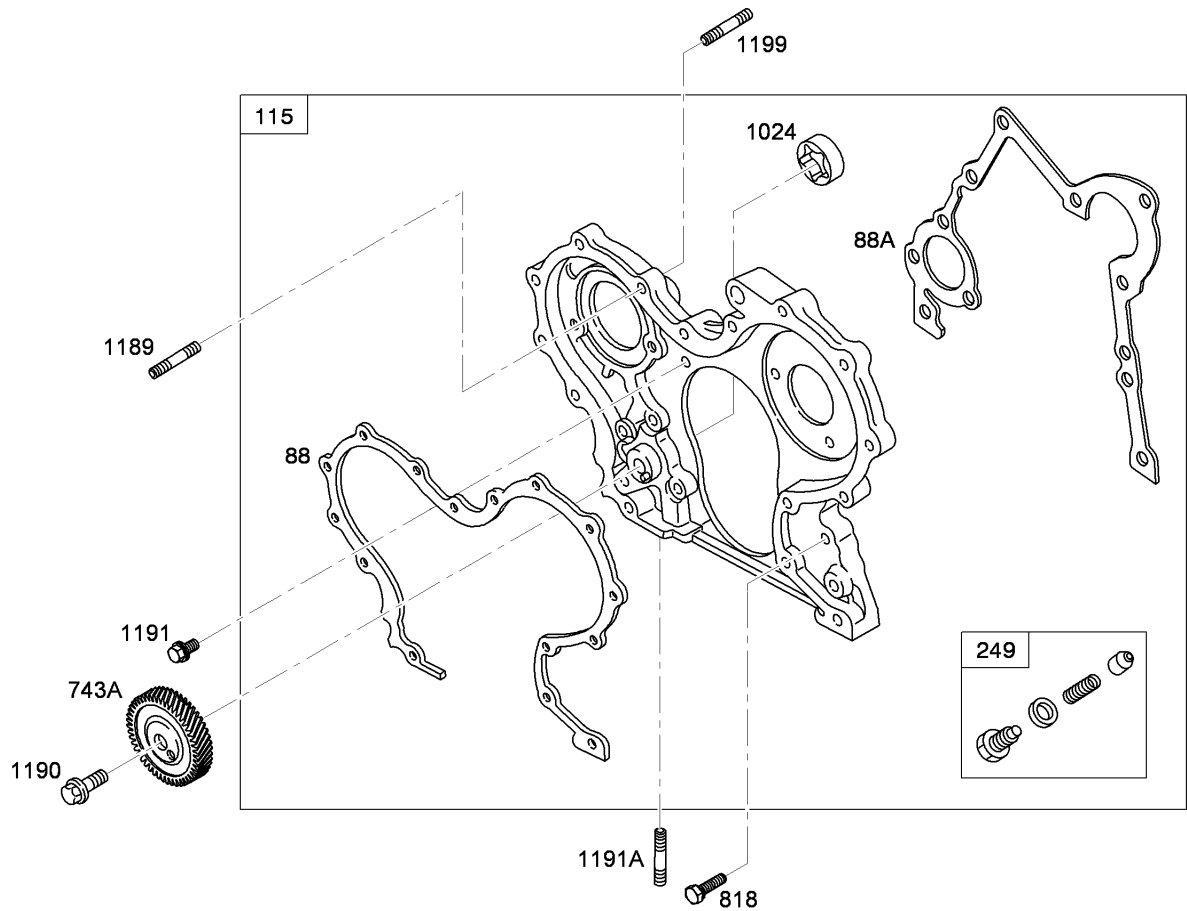 

Assemblies include all parts shown in frames

Gear Housing Assembly




Ref	Part No.	Qty.	Description				
88	99-9653	1	Gasket-Cover, Gear				
88A	99-9136	1	Gasket-Cover, Gear				
115	99-9655	1	Housing-Gear				
249	99-9142	1	Valve-Relief, Oil				
743A	99-9656	1	Gear-Drive				
818	99-9007	1	Stud-Metric				
1024		1	Pump-Oil				
1189	99-9137	1	Stud-Metric				
1190	99-9616	1	Screw-Hex				
1191	99-9134	1	Screw-Hex				
1191A	99-9133	1	Screw-Hex				
1199	99-9654	1	Stud-Metric				

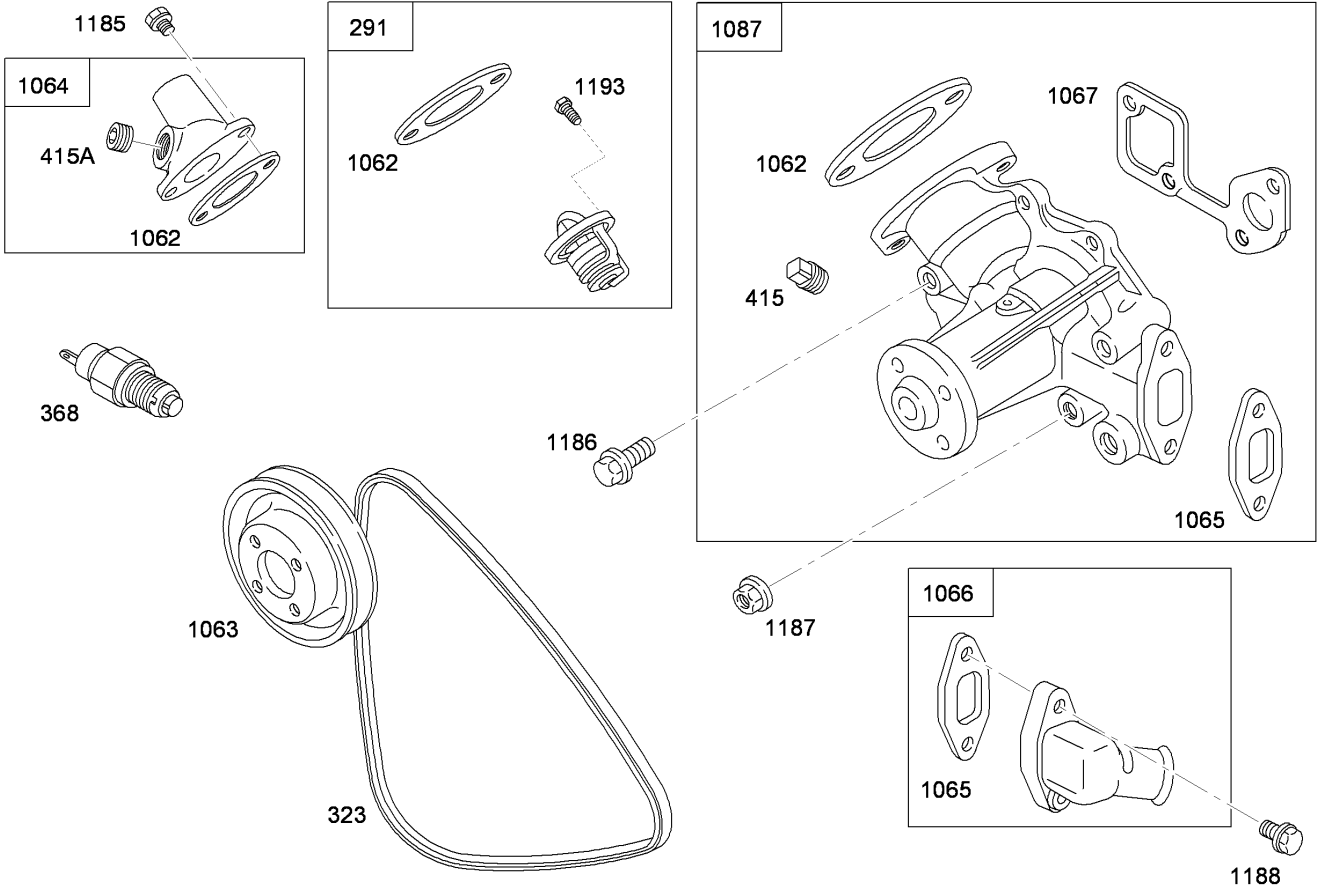 

Assemblies include all parts shown in frames

Water Pump Assembly


Ref	Part No.	Qty.	Description				
291	99-9155	1	Thermostat				
323	99-9156	1	Belt-V				
368	99-9157	1	Switch-Temperature, Water				
415	99-9159	1	Plug				
415A	99-9158	1	Plug				
1062	99-9163	1	Gasket-Outlet				
1063	99-9164	1	Pulley-Pump				
1064	99-9165	1	Housing-Outlet				
1065	99-9166	1	Gasket-Housing, Inlet				
1066	99-9167	1	Housing-Inlet				
1067	99-9168	1	Gasket-Pump, Water				
1087	105-9348	1	Pump-Water				
1185	99-9004	1	Screw-Hex				
1186	99-9151	1	Screw-Hex				
1187	99-9153	1	Nut-Hex, Metric				
1188	99-9004	1	Screw-Hex				
1193	99-9152	1	Screw-Metric				

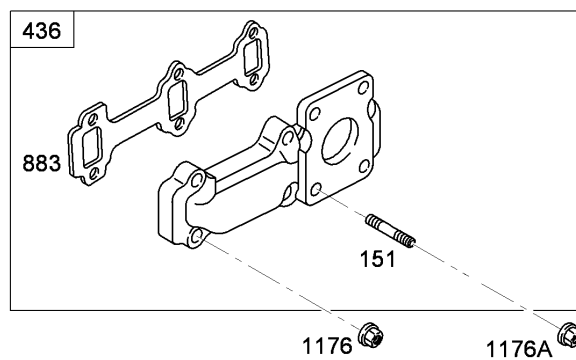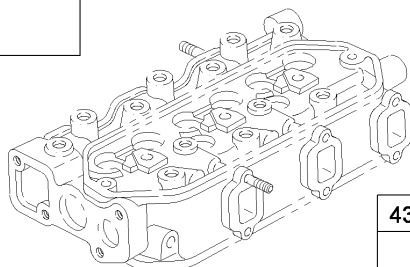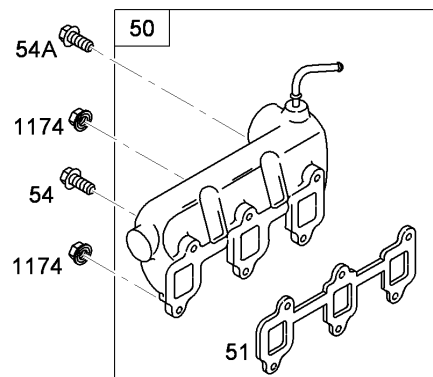   

Assemblies include all parts shown in frames

Manifold Assembly



Ref	Part No.	Qty.	Description
50	99-9661	1	Manifold-Intake
51	99-9662	1	Gasket-Intake
54	99-9083	1	Screw-Hex
54A	99-9660	1	Screw-Hex
151	99-9174	1	Stud-Manifold, Exhaust
436	99-9177	1	Manifold-Exhaust
883	106-1855	1	Gasket-Exhaust
1174	99-9114	1	Nut-Hex, Metric
1176	99-9175	1	Nut-Hex, Metric
1176A	99-9176	1	Nut-Hex

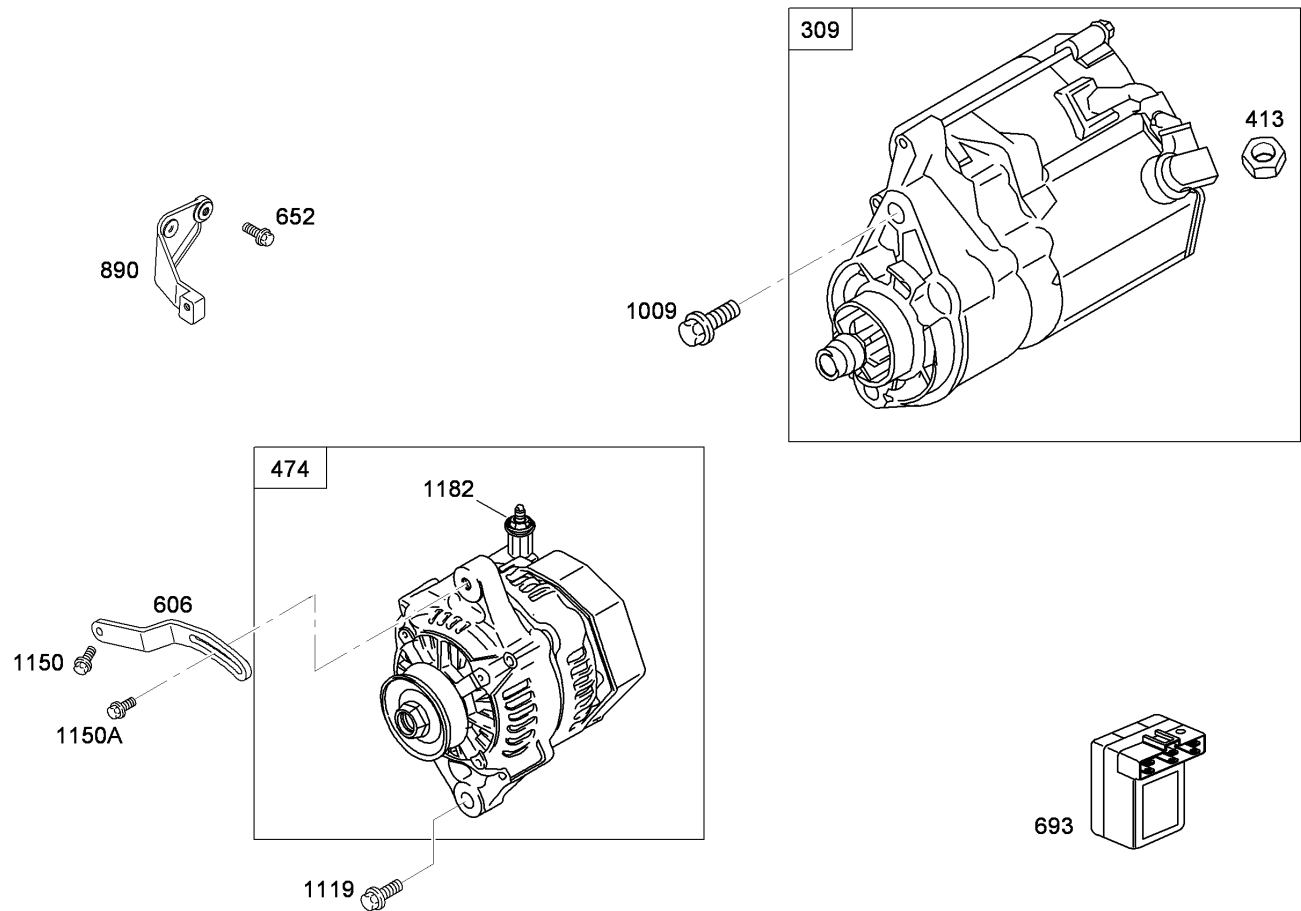 

Assemblies include all parts shown in frames

Starter Motor and Alternator Assembly

Ref	Part No.	Qty.	Description				
309	110-2598	1	Motor-Starter				
413	99-9206	1	Nut-Hex, Metric				
474	99-9209	1	Alternator				
606	106-1952	1	Strap-Adjusting				
652	99-9203	1	Screw-Hex				
693	115-2292	1	Timer-Glow Plug				
890	99-9211	1	Bracket-Support				
1009	99-9201	1	Screw-Hex				
1119	99-9205	1	Screw-Hex, Metric				
1150	99-9202	1	Screw-Hex				
1150A	107-9903	1	Screw-Hex, Metric				
1182	99-9114	1	Nut-Hex, Metric				

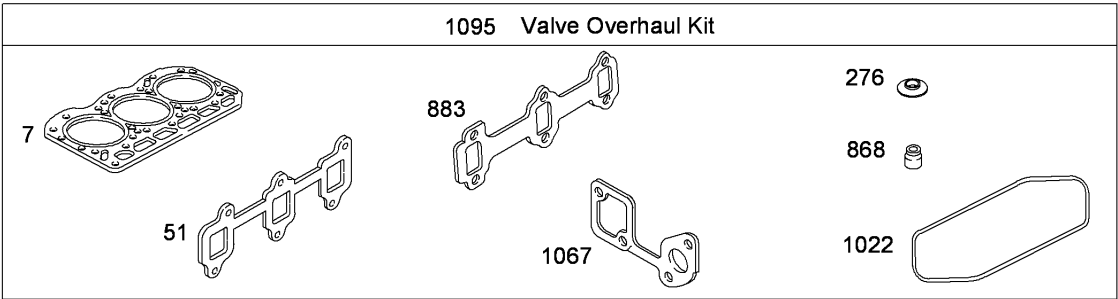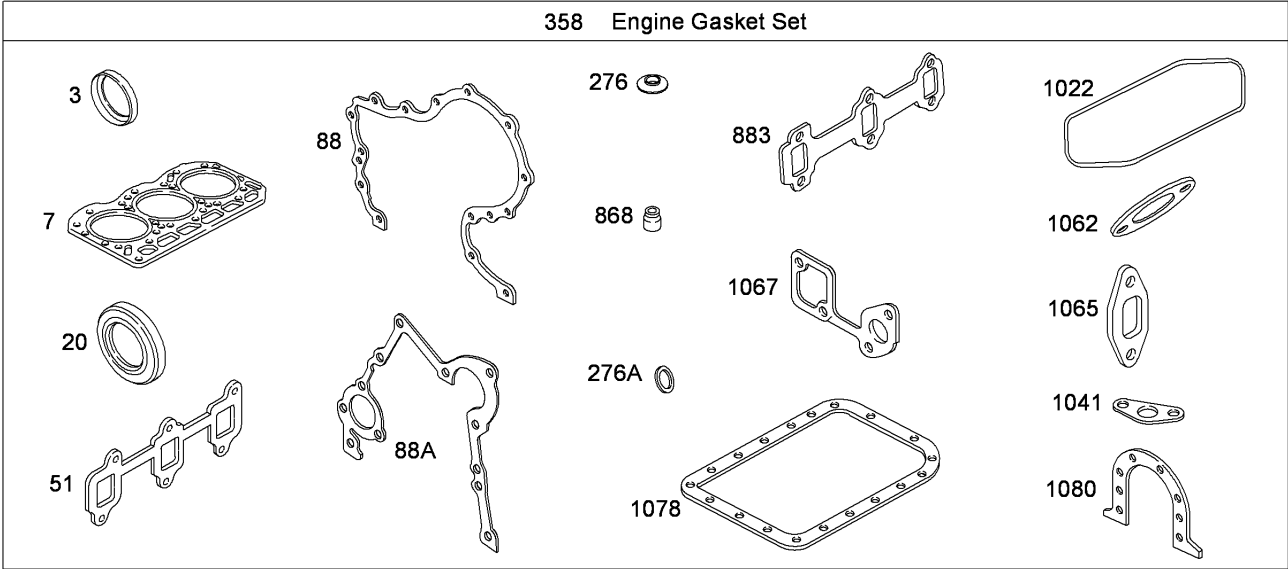  

Assemblies include all parts shown in frames

Engine Gasket Set

Ref	Part No.	Qty.	Description				
3	99-9003	1	Seal-Oil				
7	107-9898	1	Gasket-Head, Cylinder				
20	115-2291	1	Seal-Oil				
51	99-9662	1	Gasket-Intake				
88	99-9653	1	Gasket-Cover, Gear				
88A	99-9136	1	Gasket-Cover, Gear				
276	99-9063	1	Washer-Seal				
276A	99-9645	1	Washer-Seal				
358	115-2339	1	Gasket Kit				
868	99-9643	1	Seal-Valve				
883	106-1855	1	Gasket-Exhaust				
1022	99-9073	1	Gasket-Cover, Rocker				
1041	99-9120	1	Gasket-Strainer, Oil				
1062	99-9163	1	Gasket-Outlet				
1065	99-9166	1	Gasket-Housing, Inlet				
1067	99-9168	1	Gasket-Pump, Water				
1078	99-9121	1	Gasket-Pan, Oil				
1080	99-9021	1	Gasket-Retainer				
1095	107-9907	1	Valve Overhaul Kit				

Attachments and Accessories

For 07362TC - Workman 3300-D Utility Vehicle with Bed

Product Name	Model/Part
High-Flow Hydraulic Kit	07228
Full Area Flatbed	07301
Full Area Flatbed Side Kit	07302
Fold Down Side Kit	07303
Cab Kit with Doors	07319
2/3 Area Flatbed	07321
2/3 Area Flatbed Side Kit	07322
Heater Kit	07330
Bed Liner	07331
Sunshade Kit	07332
Fold-down Windshield Kit	07333
1/3 Area Flatbed	07341
1/3 Area Stake Side Kit	07342
1/3 Area Platform Lift	07344
Rear PTO Kit	07419
Hand Throttle Kit	07420
Cap-Diesel, Green	107-2172
Tachometer Kit	107-7976
Signal Light Kit	107-7985
Accessory Wire Harness Kit	107-7987
Work Light Kit	107-7988
High Air Intake Kit	107-8003
Remote Hydraulics Float Kit	107-8004
Backup Alarm Kit	107-8037
Side Mirror Kit	107-8048
Premium Engine Oil, 10w30 (Drum)	108-1179
Premium Engine Oil, 10w30 (Pail)	108-1180
Premium ATF Drum	108-1185
Premium ATF Pail	108-1186
Premium All Purpose Grease	108-1190
Mirror Kit	110-2510
Spark Arrestor Kit	112-1688
Single Nozzle Kit	41024
Hose Reel Kit	41097
Spray Gun Kit	41133
Pro Foam Concentrate (4 X 1 Gallon)	41157
Workman 200 Spray System	41235
Foam Marker Kit	41236
Spreader Base Unit	41253
Vicon Spreader	41256
Enclosed Boom	41355
Enclosed Walking Boom	41358
Enclosed Walking Boom Trailer	41359
Enclosed Boom Mount	41363
Power Holster Hitch Kit	44209
Drawbar Kit	44212
Hitch Frame and Draw Bar Kit	44213
Topdresser 1800	44225
Fifth Wheel Hitch Kit	44230
Core Harvester Adapter Kit	44242
1/3 Area Tool Box Mounting Kit	92-1219
Automatic Tailgate Release Kit	92-1220

Attachments and Accessories (continued)

For 07362TC - Workman 3300-D Utility Vehicle with Bed

Product Name	Model/Part
Block-Fuse	92-2641
PTO Over Running Clutch Kit	92-2655
Topdresser 1800 Lift Kit	92-4452
Mid-Mount Kit for Platform Lift	93-3741
1/3 Area Cover Kit	93-9225
Rear 1/3 Area Mounting Kit	93-9249

NOTES

