



53cm Heavy-Duty Rear Bagger Lawn Mower

Model No. 22179TE - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Grass Bag Assembly No. 110-2140	 12
Front Wheel and Tire Assembly No. 100-2870	 4	Cylinder and Crankcase Assembly	 13
Gear Case Assembly No. 110-2100	 5	Piston and Crankshaft Assembly	 14
Blade Brake Clutch Assembly	 6	Valve and Camshaft Assembly	 15
Engine and Fuel Tank Assembly	 7	Lubrication Equipment Assembly	 16
Handle Assembly	 8	Cooling Equipment Assembly	 17
Handle and Cable Assembly	 9	Electrical Equipment Assembly	 18
Rear Suspension Assembly	 10	Control Equipment Assembly	 19
Rear Wheel Assembly No. 100-2860	 11	Carburetor Assembly	 20
		Air Filter and Muffler Assembly	 21
		Starter Assembly	 22


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not serviced separately

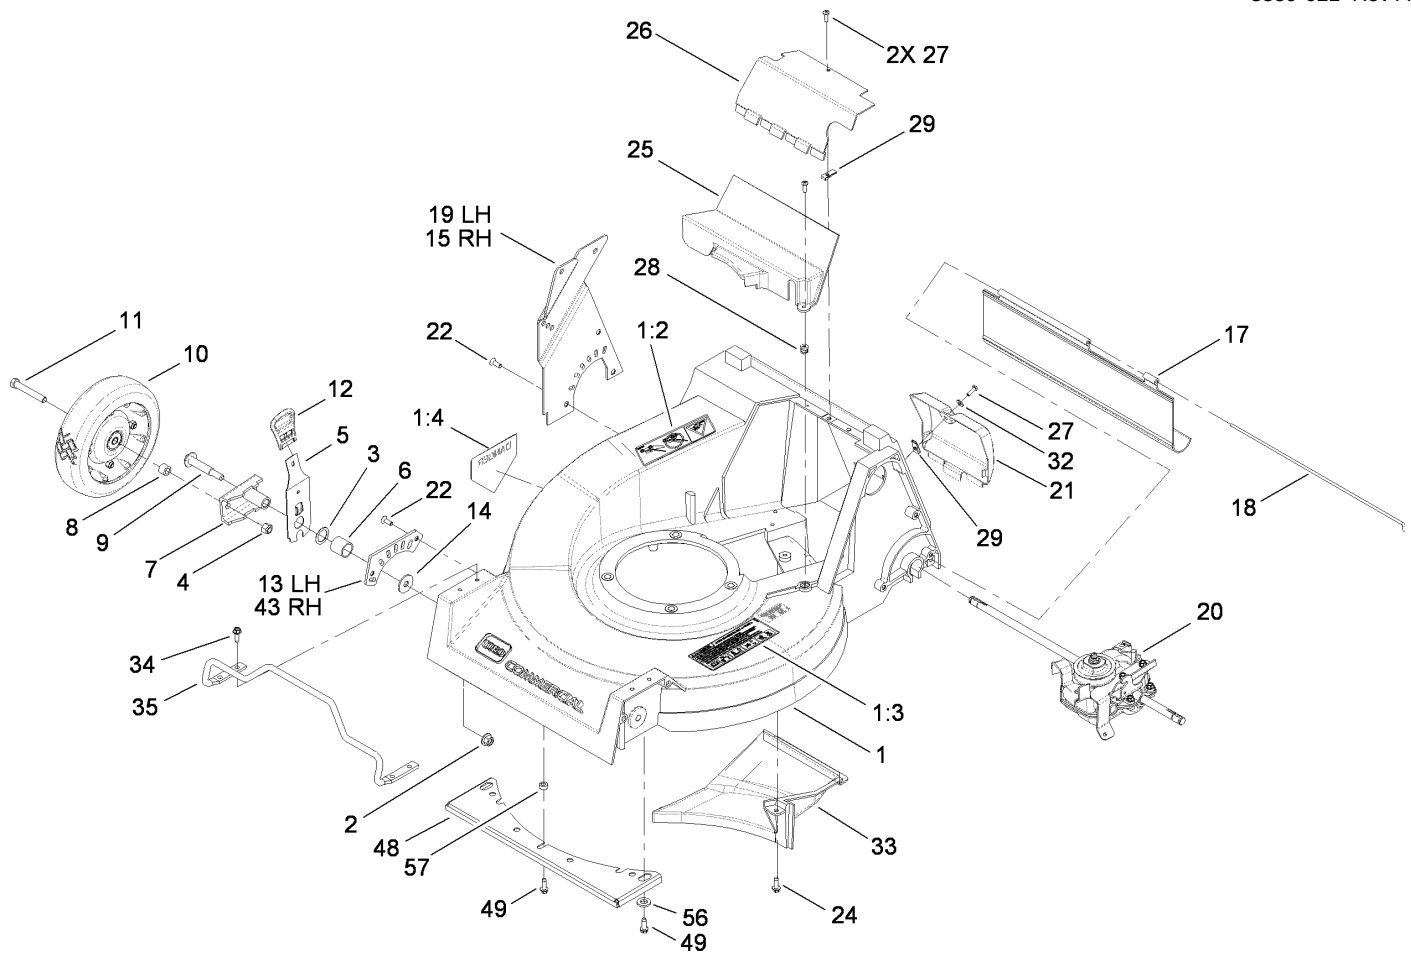

Housing Assembly


Ref	Part No.	Qty.	Description
1	115-0992	1	Deck ASM
1:2	110-4977	1	Decal-Danger
1:3	110-4978	1	Decal-Danger
1:4	112-8760	1	Decal-Danger
2	54-9190	2	Nut-Lock
3	115-0972	2	Washer
4	32152-2	2	Nut-Lock, Cone
5	115-0980	2	Front Spring Arm ASM
6	75-5310	2	Spacer-Bearing
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	114-3468	2	Screw-Shoulder
10	100-2870	2	Wheel And Tire ASM
11	323-12	2	Screw-HH
12	110-0549	2	Knob-HOC
13	115-0960	1	Plate-Front HOC, LH
14	115-0956	2	Washer
15	115-0978-01	1	Plate-Rear HOC, RH
17	110-0509	1	Shield-Trailing
18	33-3202	1	Rod-Shield
19	115-0977-01	1	Plate-Rear HOC, LH
20	110-2100	1	Gear Case ASM
21	107-4288	1	Door-Access, Rear
22	32144-17	10	Screw-HH

Ref	Part No.	Qty.	Description
24	49-2040	4	Screw-HWHTF
25	107-4297	1	Cover-Belt, Lower
26	107-4298	1	Cover-Belt, Upper
27	32144-32	3	Screw
28	611380	1	Nut-Clip
29	3290-171	2	Nut-Type J
32	3256-14	1	Washer-Flat
33	115-0973	1	Baffle-Chute, Floor
34	49-2040	4	Screw-HWHTF
35	110-4876	1	Guard-Engine
43	115-0961	1	Plate-Front HOC, RH
48	46-5400-03	1	Shield
49	49-2040	3	Screw-HWHTF
56	3256-2	2	Washer-Flat
57	95-6063	1	Tube-Spacer

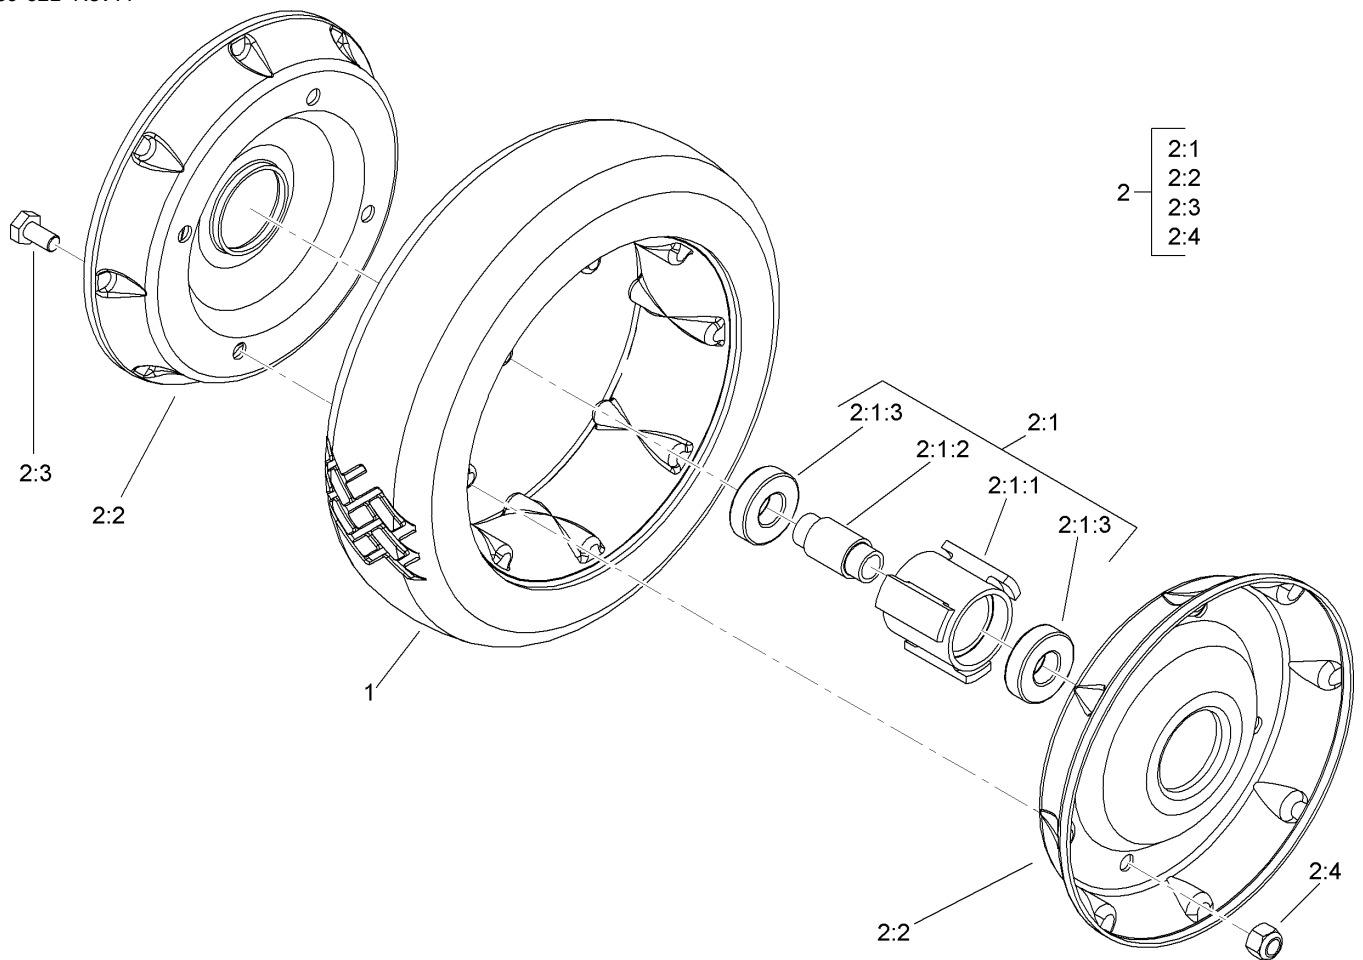


Front Wheel and Tire Assembly No. 100-2870

Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
①2		1	Wheel ASM				
①2:1		1	Hub And Bearing ASM				
2:1:1	52-2410	1	Hub-Bearing				
2:1:2	52-2440	1	Spacer-Bearing				
2:1:3	52-2450	2	Bearing-Wheel				
2:2	53-7780-06	2	Plate-Wheel, Half				
2:3	321-2	4	Screw-HH				
2:4	3296-42	4	Nut-Lock, NI				

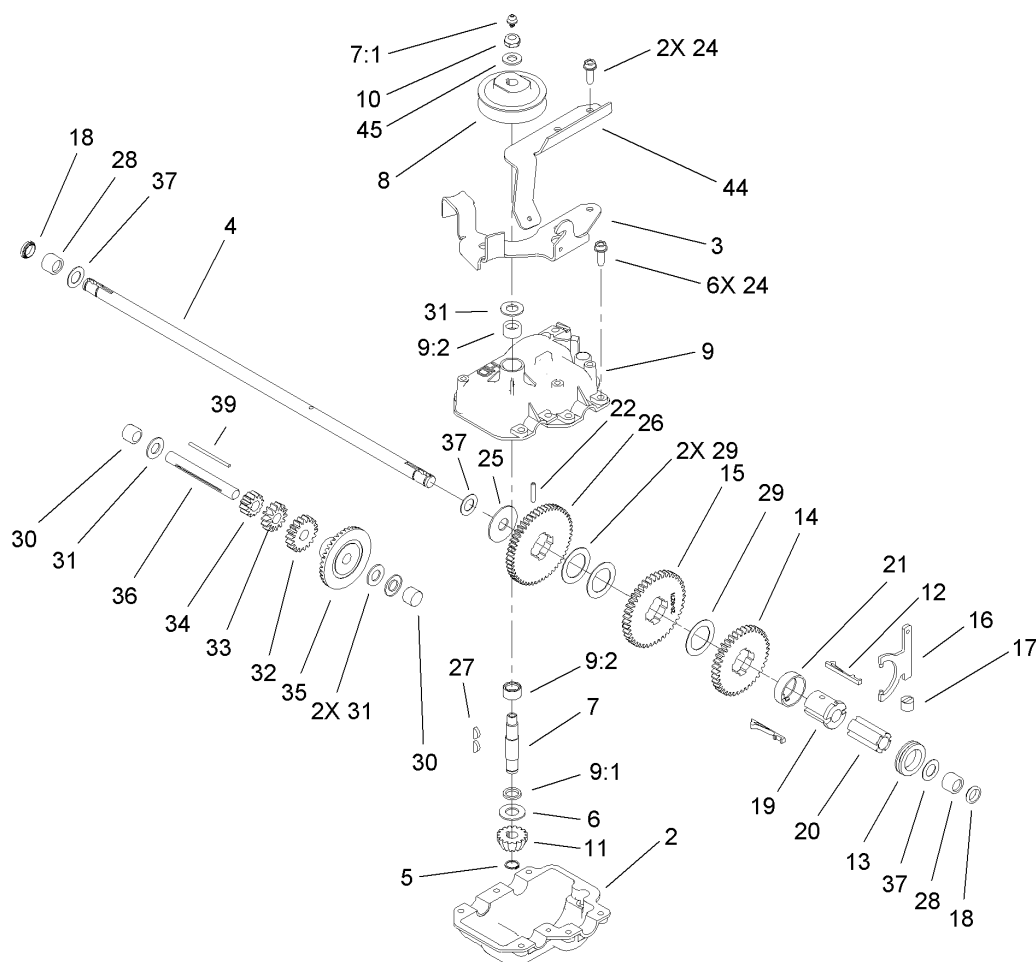

Gear Case Assembly No. 110-2100


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower	24	49-2040	8	Screw-HWHTF
3	49-8461-03	1	Bracket-Guide, Belt	25	29-9690	1	Washer
4	74-1890	1	Shaft-Output	26	46-3560	1	Gear
5	32151-57	1	Ring-Retaining	27	3257-1	2	Key-Woodruff
6	47-2910	1	Washer-Thrust	28	48-2060	2	Bearing-Roller
7	13-5149	1	Input Shaft ASM	29	36-4770	3	Washer
7:1	302-63	1	Zerk	30	252-103	2	Bearing-Closed
8	39-6740	1	Pulley	31	36-4792	4	Washer-Thrust
9	13-9739	1	Upper Gearcase ASM	32	39-6650	1	Gear-18T
9:1	47-7260	1	Seal	33	46-3550	1	Gear-14T
9:2	47-7270	2	Bearing	34	46-3540	1	Gear-12T
10	3296-5	1	Nut-Lock	35	74-1760	1	Gear-Bevel
11	39-6660	1	Pinion-Bevel	36	53-7950	1	Shaft-Intermediate
12	29-9330	2	Key-Shift	37	36-4780	3	Washer-Plain
13	29-9340	1	Collar-Shift	39	39-7842	1	Key
14	42-4740	1	Gear-38T	44	108-2648-03	1	Arm-Actuating, Gear Case
15	29-9271	1	Gear-42T	45	3256-45	1	Washer-Flat
16	60-8870	1	Yoke-Shift				
17	29-9570	1	Bushing-Yoke				
18	47-6730	2	Seal-Oil				
19	55-8010	1	Sleeve-Gear				
20	39-6720	1	Sleeve				
21	55-8020	1	Retainer-Key				
22	3285-19	1	Pin-Groove				

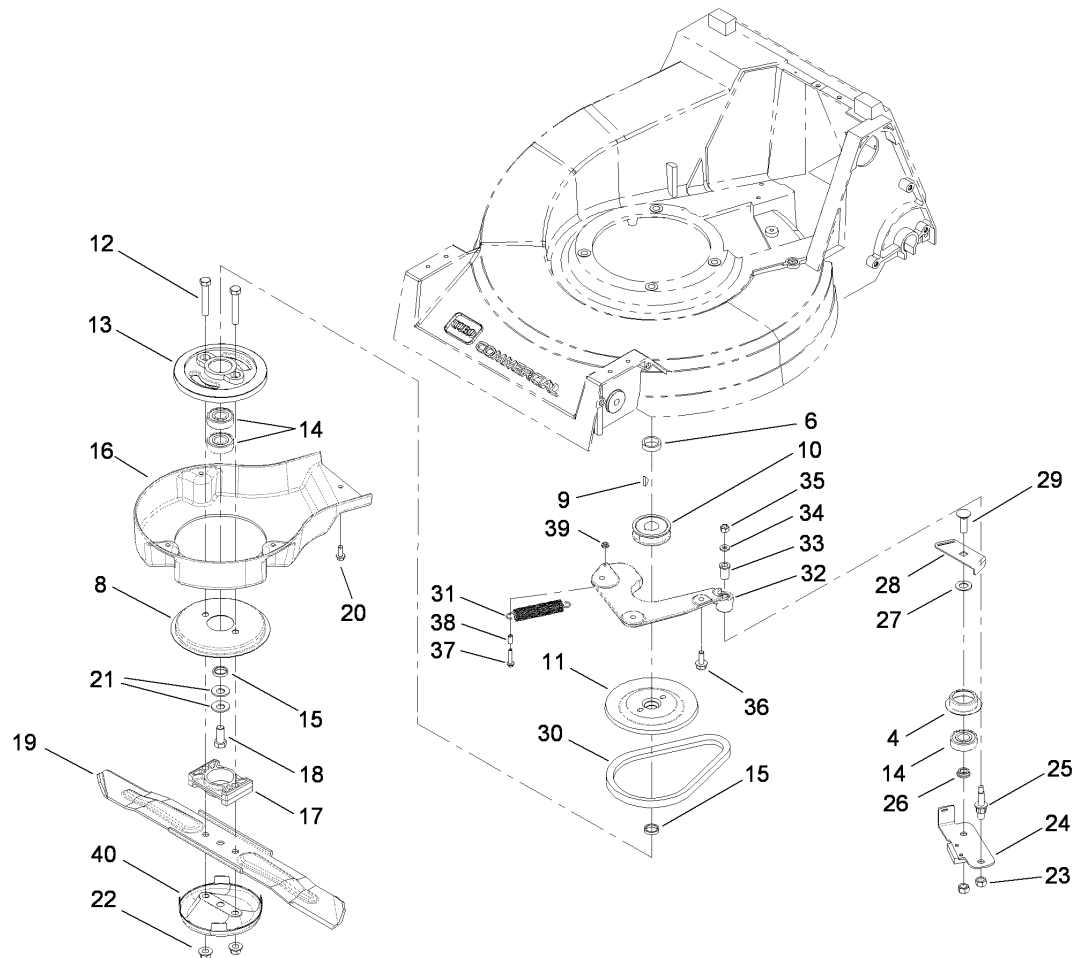

Blade Brake Clutch Assembly


Ref	Part No.	Qty.	Description
4	108-3790	1	Retainer-Belt
6	110-2142	1	Spacer-Pulley
8	108-3787	1	Disc
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	107-4277-03	1	Pulley-Driver, Upper
12	104-5936	2	Screw-HH
13	107-0754	1	Drum
14	100-1048	3	Bearing-Ball
15	107-4293	2	Spacer-Plate, BBC
16	110-0508	1	Shield-BBC
17	107-4275	1	Spacer-Blade
18	3212-4	1	Screw-HH
19	91-2256-03	1	Blade-21 Inch
20	32144-85	4	Screw-HWH
21	1-603610	2	Washer-Spring
22	54-9190	2	Nut-Lock
23	603773	2	Nut
24	107-7477	1	Brake Arm ASM
25	107-0759	1	Bolt-Shoulder
26	107-0758	1	Spacer-Bearing
27	605256	1	Washer
28	107-7471	1	Plate-Guide
29	3231-25	1	Screw-CARR

Ref	Part No.	Qty.	Description
30	110-1790	1	Belt-BBC
31	108-3792	1	Spring-Tension, Brake
32	107-4280	1	Plate-Mounting, BBC
33	107-0797	1	Bushing
34	3256-16	1	Washer-Flat
35	3296-42	1	Nut-Lock, NI
36	33104-020	3	Screw-HHF
37	32144-9	1	Screw-TAP
38	107-4292	1	Spacer-BBC
39	3296-27	1	Nut-Lock, NI
40	80-2770	1	Cup-Scalp, Anti

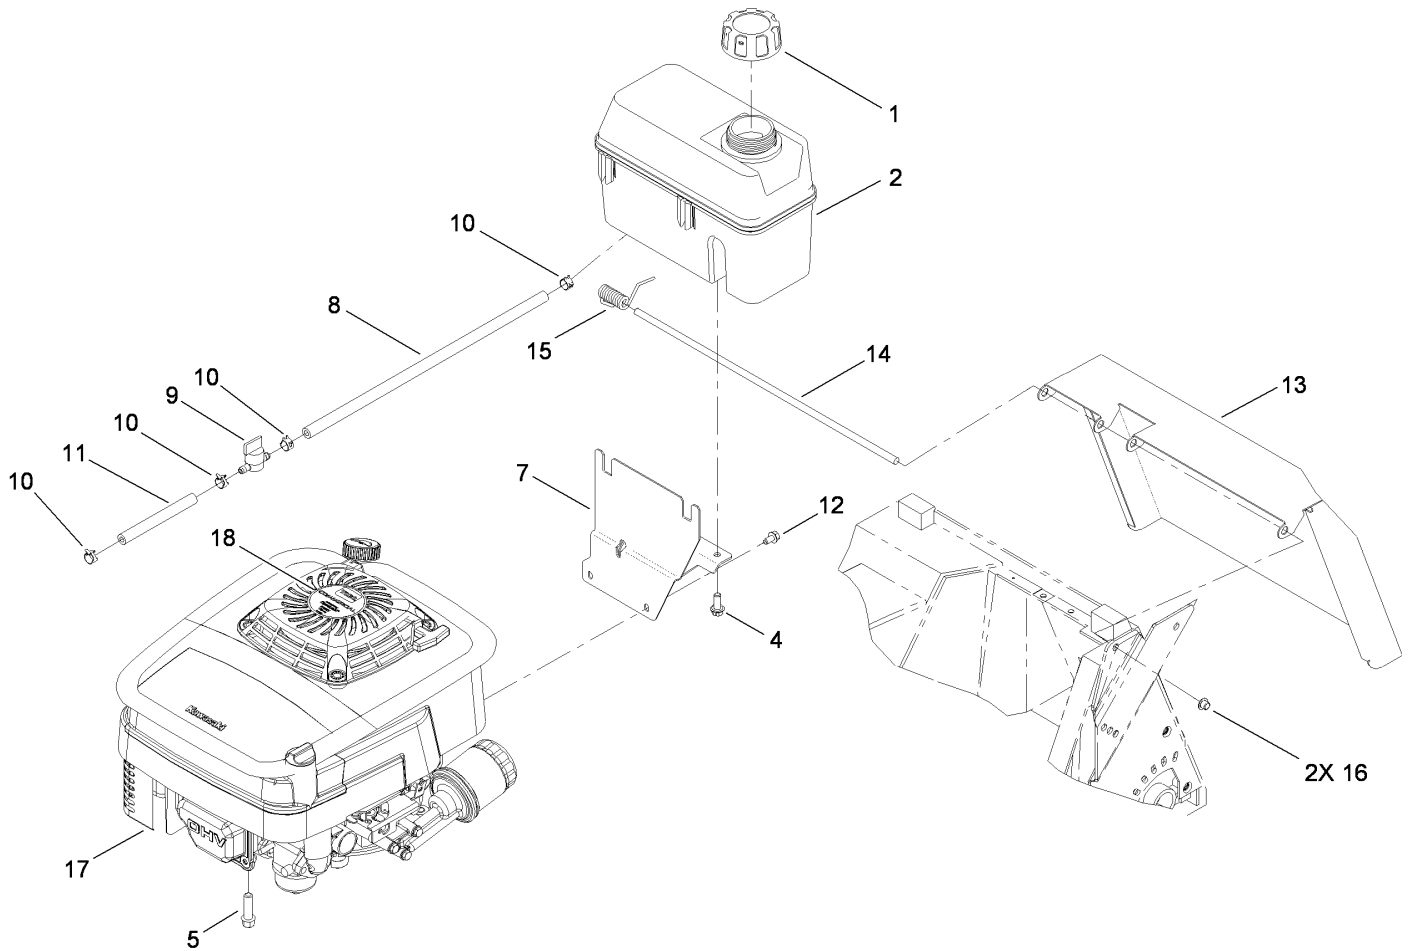


Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	93-7198	1	Gas Cap ASM				
2	106-0625	1	Tank-Fuel				
4	46-8091	2	Screw-HWH				
5	95-1727	4	Screw-Taptite				
7	115-0954-03	1	Tank Mount ASM				
8	109-0296	1	Hose-Fuel				
9	1-603770	1	Valve-Fuel				
10	2412-98	4	Clamp				
11	109-0650	1	Hose-Fuel				
12	104-2628	3	Screw-HWH				
13	114-3445-03	1	Door-Discharge, Rear				
14	107-4286	1	Rod-Door				
15	110-5005	1	Spring-Torsion, Door				
16	32112-1	2	Pushnut-Cap, Washer				
17	106-0845	1	Engine ASM				
18	110-0520	1	Decal				

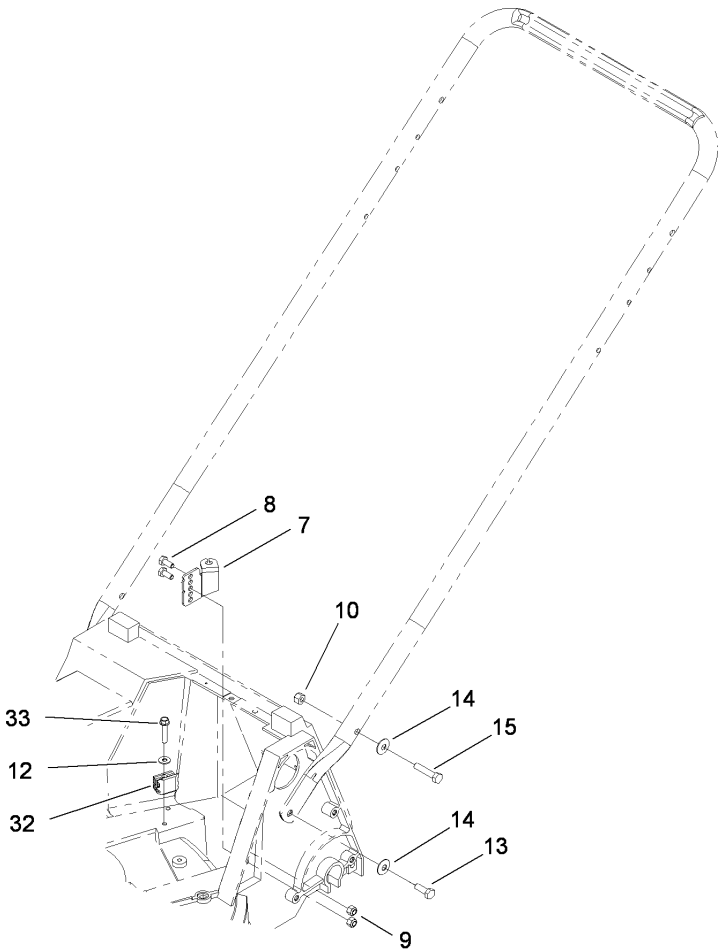

Handle Assembly


Ref	Part No.	Qty.	Description				
7	115-4453	1	Anchor-Cable				
8	321-3	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
10	3296-29	4	Nut-Lock, NI				
12	3256-1	2	Washer-Flat				
13	322-4	2	Screw-HH				
14	3290-456	4	Washer-Belleville				
15	322-7	2	Screw-HH				
32	92-7729	1	Anchor-Cable, Upper				
33	32144-110	1	Screw-HWH				

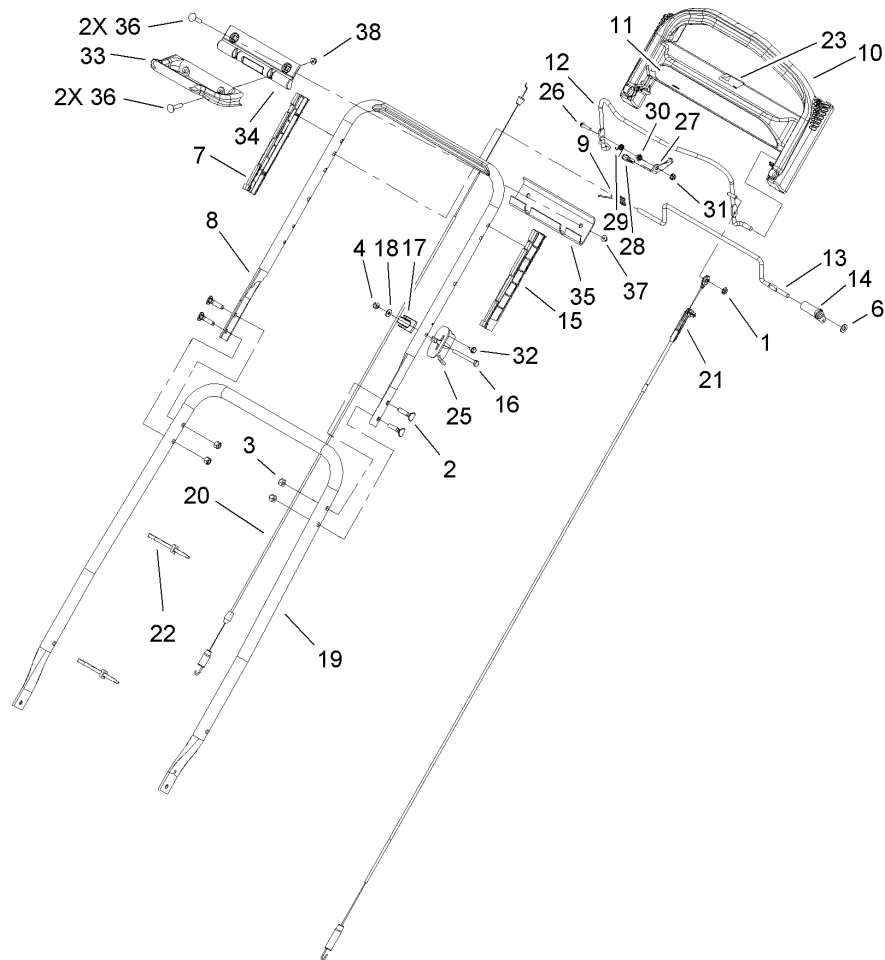

Handle and Cable Assembly


Ref	Part No.	Qty.	Description
1	3290-337	1	Nut-Speed
2	92-4095	4	Screw-Handle
3	3296-29	4	Nut-Lock, NI
4	3296-73	1	Nut-Lock, NI
6	3256-23	1	Washer-Flat
7	105-6841	1	Guide-RH
8	110-4874-03	1	Handle-Upper
9	104-8690	1	Spring-Torsion
10	104-8678	1	Handle-Control
11	110-4875	1	Decal-Handle
12	108-3788-03	1	Bail-Brake
13	99-1588	1	Bar-Control, Traction
14	99-1589	1	Lever-Traction
15	105-6842	1	Guide-LH
16	321-49	1	Screw-HH
17	99-5239	1	Anchor-Cable
18	3256-1	1	Washer-Flat
19	107-4278-03	1	Handle-Lower
20	107-3790	1	Cable-Traction
21	108-3760	1	Cable ASM
22	3290-378	3	Tie-Cable
23	98-4387	1	Decal-Protection, Ear
25	110-4877	1	Control-Throttle
26	106-9169	1	Screw

Ref	Part No.	Qty.	Description
27	110-4889	1	Lever-BBC
28	106-6803	1	Knob
29	107-7462	1	Spring-Torsion
30	107-7463	1	Spacer
31	32128-17	1	Nut-Lock, Flange
32	32104-76	1	Screw
33	99-1591	1	Handle-Assist, Traction
34	108-3756-03	1	Bracket-Handle, Assist
35	108-3758-03	1	Bracket-Handle, Assist
36	3230-29	4	Screw-CARR
37	3296-72	2	Nut-Lock, NI
38	32128-20	2	Nut-HF

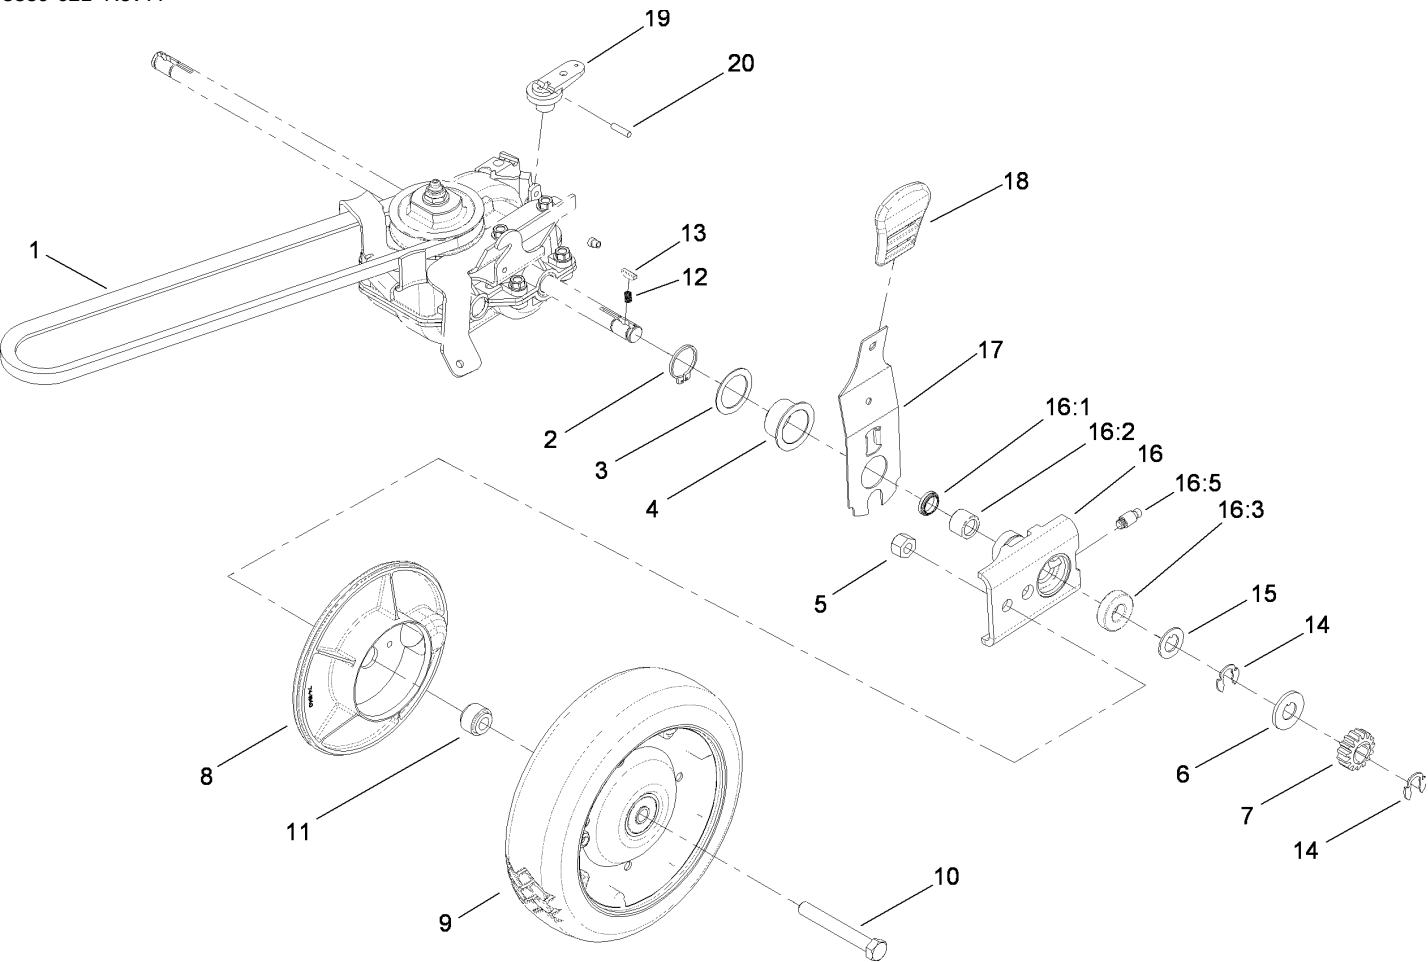


Rear Suspension Assembly

Ref	Part No.	Qty.	Description				
1	612652	1	V-Belt				
2	32151-36	2	Ring-Retaining				
3	74-1810	2	Washer				
4	115-0966	2	Bushing-Flange				
5	32152-2	2	Nut-Lock, Cone				
6	62-3830	2	Washer-Thrust, Outer				
7	39-9160	2	Gear-Pinion				
8	74-1640	2	Cover-Wheel				
9	100-2860	2	Wheel And Tire ASM				
10	323-13	2	Screw-HH				
11	74-1650	2	Spacer-Cover, Wheel				
12	39-9650	2	Spring-Compression				
13	612066	2	Key				
14	32151-68	4	Ring-Retaining				
15	49-7700	2	Washer-Thrust, Outer				
16	74-1851	2	Pivot Arm ASM				
16:1	47-6730	1	Seal-Oil				
16:2	48-2060	1	Bearing-Roller				
16:3	52-2450	1	Bearing-Wheel				
16:5	92-6316	1	Zerk				
17	115-0979	2	Rear Spring Arm ASM				
18	110-0549	2	Knob-HOC				
19	29-9560	1	Lever-Shift				
20	32121-99	1	Pin-Coil				

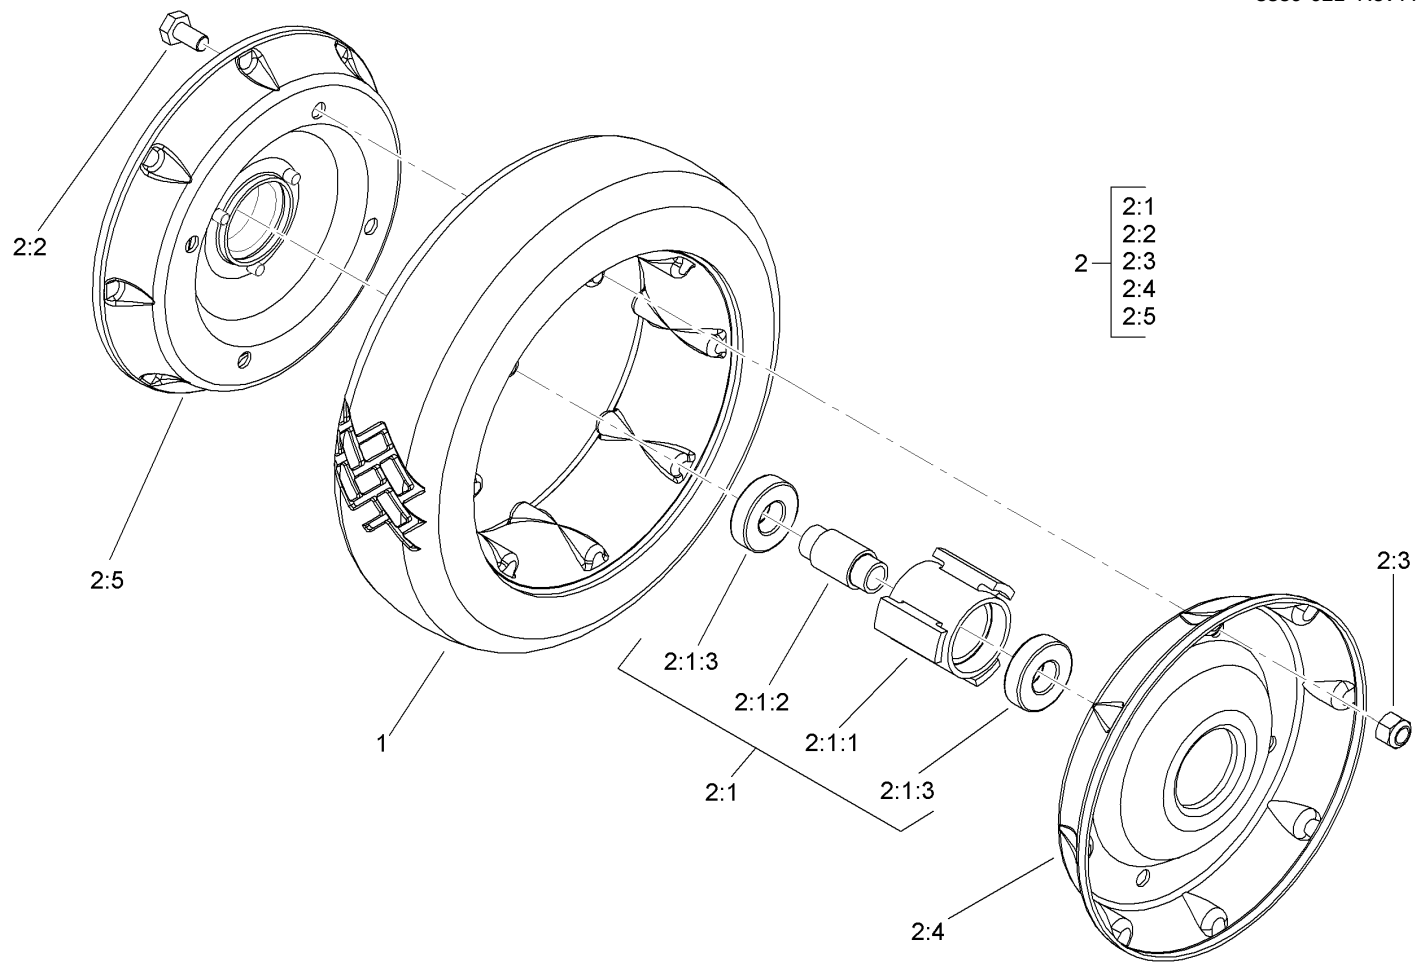


Rear Wheel Assembly No. 100-2860

Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
2		1	Wheel ASM				
2:1		1	Hub And Bearing ASM				
2:1:1	52-2410	1	Hub-Bearing				
2:1:2	52-2440	1	Spacer-Bearing				
2:1:3	52-2450	2	Bearing-Wheel				
2:2	321-2	4	Screw-HH				
2:3	3296-42	4	Nut-Lock, NI				
2:4	53-7780-06	1	Plate-Wheel, Half				
2:5	92-4957-06	1	Wheel Half And Gear ASM				

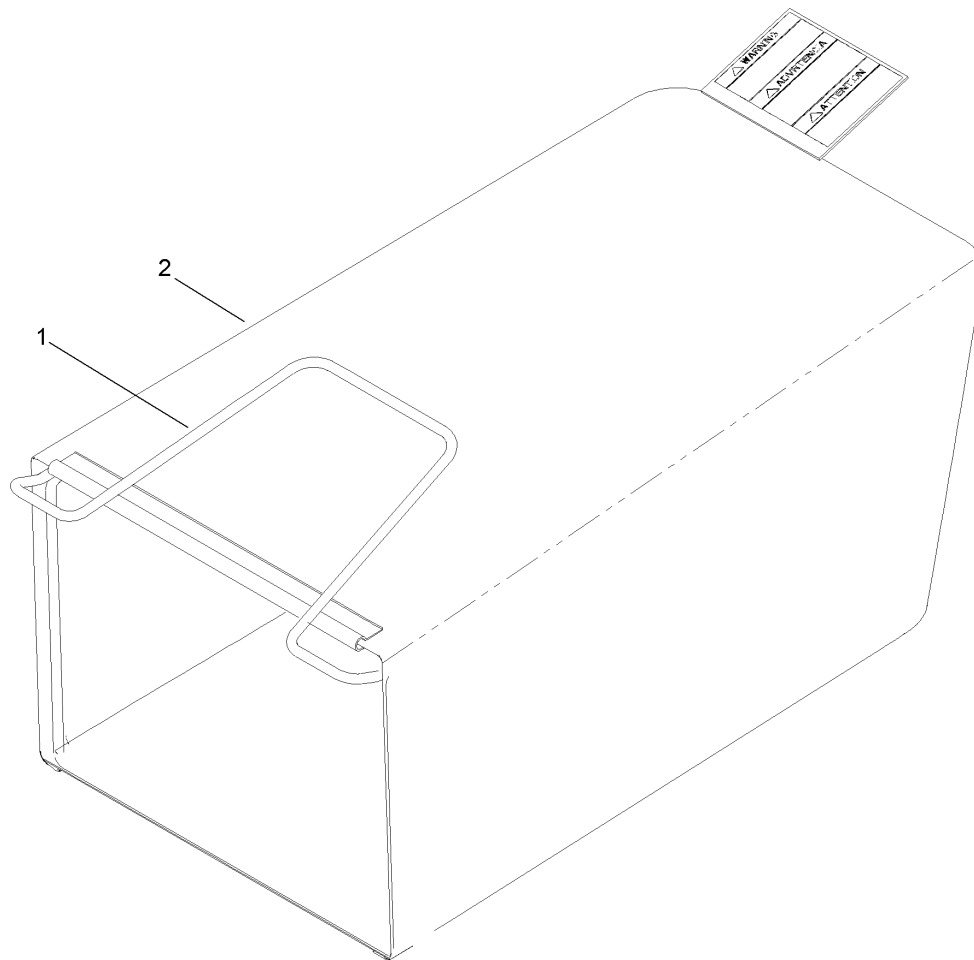


Grass Bag Assembly No. 110-2140

Ref	Part No.	Qty.	Description				
1	110-0510-03	1	Frame ASM				
2	110-0530	1	Bag-Grass				

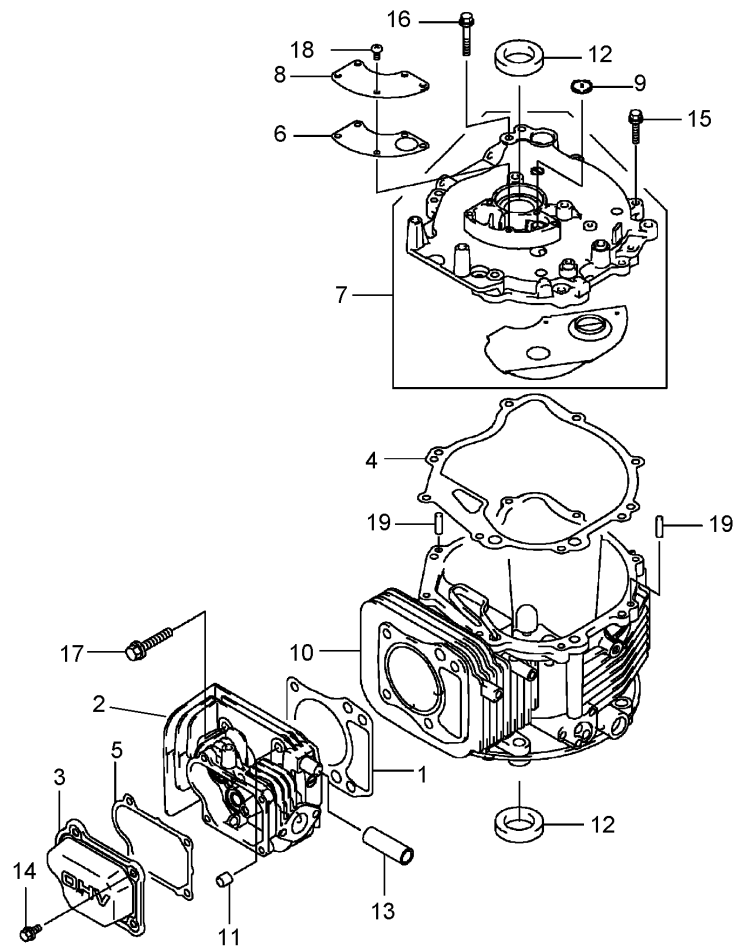


Cylinder and Crankcase Assembly

Ref	Part No.	Qty.	Description				
1	108-2627	1	Gasket-Head				
2	108-2501	1	Head-Cylinder				
3	108-2502	1	Case-Rocker				
4	108-2503	1	Gasket				
5	108-2504	1	Gasket-Case, Rocker				
6	108-2505	1	Gasket-Breather				
7	108-2506	1	Cover-Complete				
8	108-2507	1	Cover-Breather				
9	108-2508	1	Valve-Breather				
10	108-2509	1	Crankcase-Complete				
11	108-2510	2	Pin				
12	108-2511	2	Seal-Oil				
13	108-2512	1	Tube				
14	100-2804	4	Bolt-Flanged				
15	100-2610	7	Bolt-Flanged				
16	108-2513	1	Bolt-Flange				
17	108-2514	4	Bolt-Flange				
18	100-2763	5	Screw-Pan				
19	108-2515	2	Pin-Dowel				

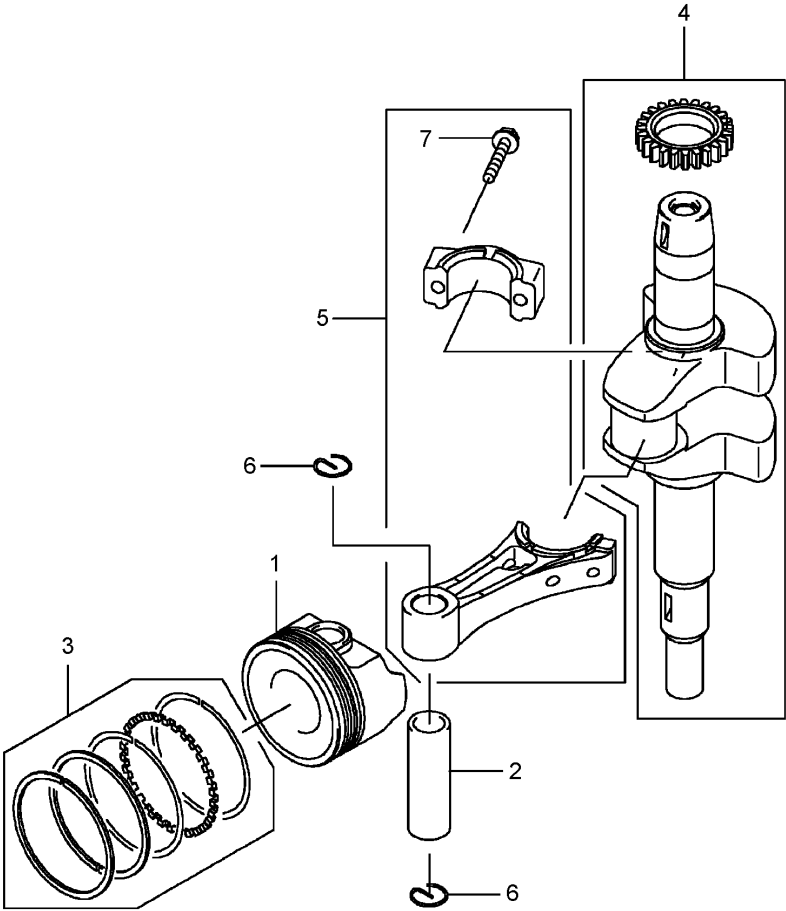


Piston and Crankshaft Assembly

Ref	Part No.	Qty.	Description				
1	108-2516	1	Piston-Engine				
2	108-2517	1	Pin-Piston				
3	108-2518	1	Ring-Set, Piston				
4	108-2626	1	Crankshaft-Comp (BBC)				
5	108-2520	1	Connecting Rod ASM				
6	108-2521	2	Ring-Snap				
7	108-2522	2	Bolt-Flange				

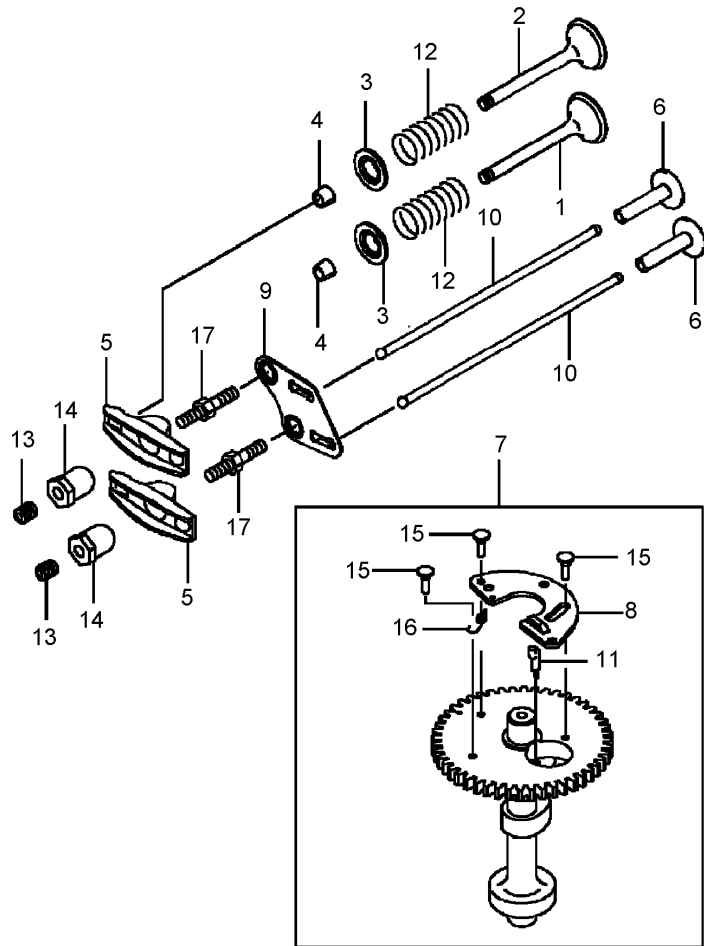


Valve and Camshaft Assembly

Ref	Part No.	Qty.	Description				
1	108-2523	1	Valve-Intake				
2	108-2524	1	Valve-Exhaust				
3	108-2525	2	Retainer-Spring, Valve				
4	95-9744	4	Collet				
5	108-2526	2	Arm-Rocker				
6	108-2527	2	Tappet				
7	108-2528	1	Camshaft Valve ASM				
8	108-2529	1	Weight				
9	108-2530	1	Guide				
10	108-2531	2	Rod-Push				
11	108-2532	1	Arm				
12	108-2533	2	Spring-Valve, Engine				
13	108-2534	2	Screw				
14	93-8534	2	Nut				
15	108-2535	3	Pin				
16	108-2536	1	Spring				
17	108-2537	2	Bolt				

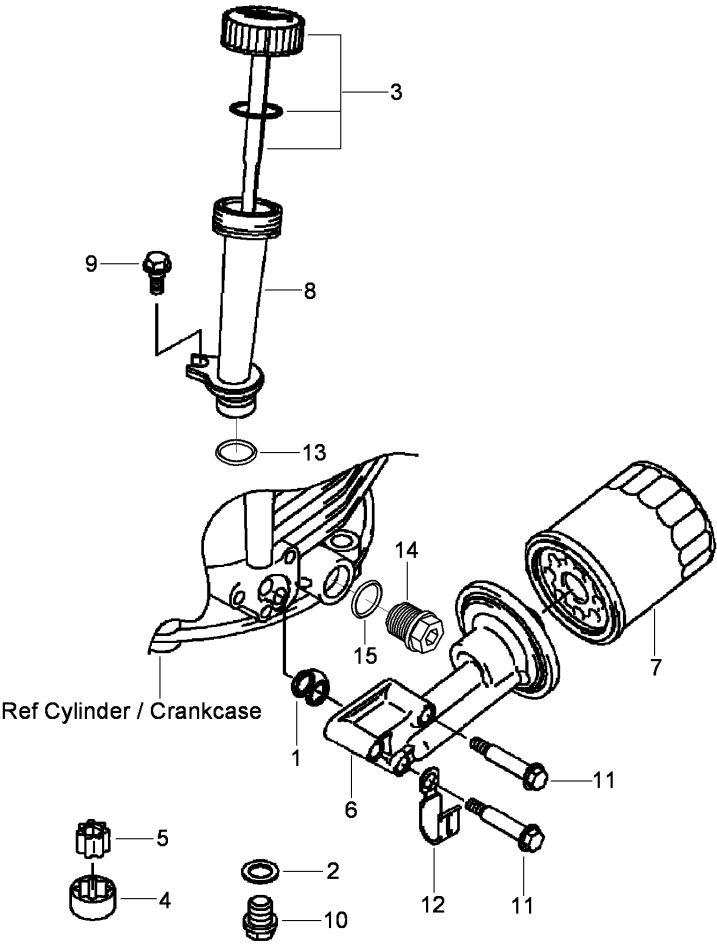


Lubrication Equipment Assembly

Ref	Part No.	Qty.	Description				
1	100-2644	1	Gasket				
2	108-2538	1	Gasket				
3	108-2539	1	Cap ASM				
4	108-2540	1	Rotor-Pump				
5	108-2541	1	Rotor-Pump				
6	108-2542	1	Pipe				
7	KW10761	1	Filter-Oil				
8	108-2543	1	Filler				
9	108-2544	1	Bolt				
10	108-2545	1	Bolt				
11	108-2546	3	Bolt				
12	108-2547	1	Clamp				
13	100-2690	1	O-Ring				
14	112-9991	1	Plug- Oil Drain				
15	100-2690	1	O-Ring				

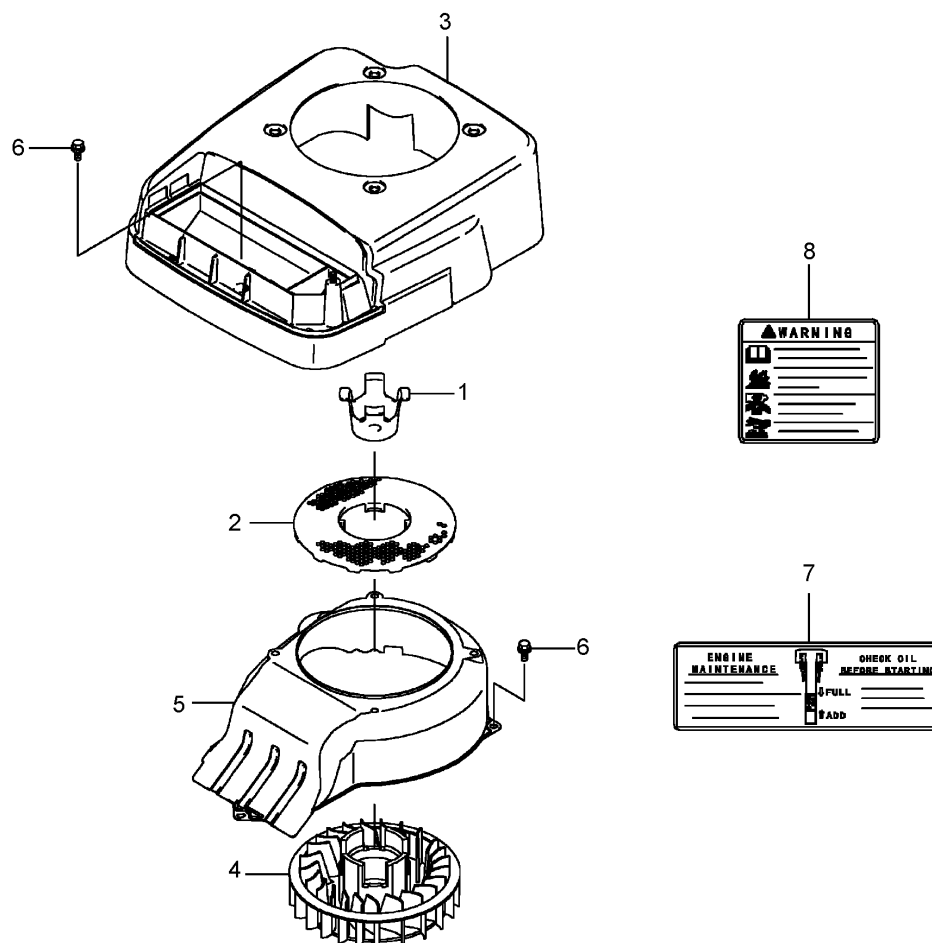


Cooling Equipment Assembly

Ref	Part No.	Qty.	Description				
1	108-2548	1	Bracket-Fan				
2	108-2549	1	Screen				
3	108-2550	1	Cover				
4	108-2551	1	Fan				
5	108-2552	1	Housing-Fan				
6	100-2804	2	Bolt-Flanged				
7	108-2624	1	Label-Manual				
8	108-2625	1	Label-Warning				

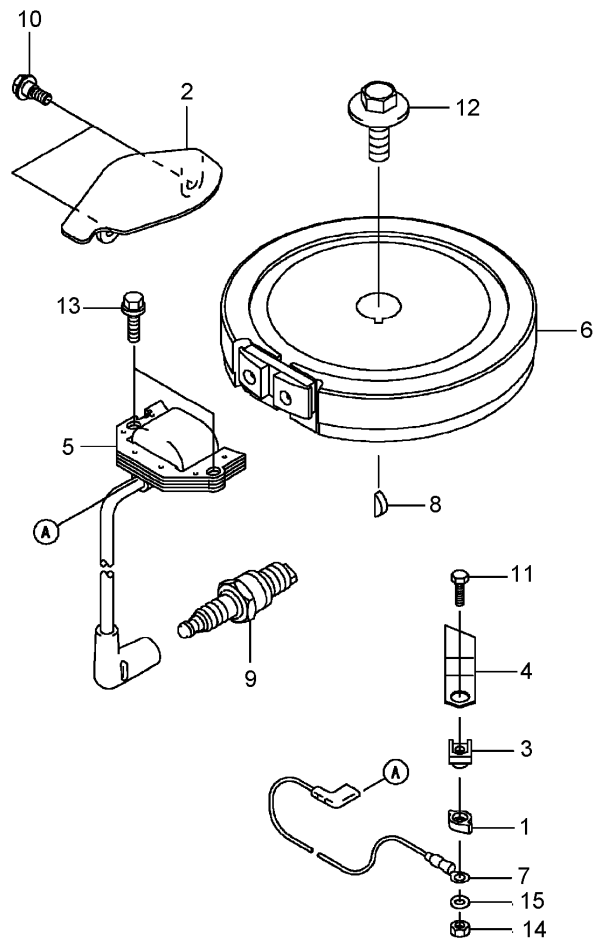

Electrical Equipment Assembly


Ref	Part No.	Qty.	Description				
1	100-2652	1	Cover				
2	108-2553	1	Cover				
3	100-2653	1	Insulator				
4	100-2796	1	Terminal				
5	108-2554	1	Coil Ignition ASM				
6	108-2555	1	Flywheel				
7	108-2556	1	Wire-Lead				
8	93-8571	1	Key				
9	KW10676	1	Spark Plug				
10	108-2544	2	Bolt				
11	108-2558	1	Bolt				
12	108-2559	1	Bolt				
13	95-9893	2	Bolt-Flanged				
14	100-2668	1	Nut-Hex				
15	100-2798	1	Washer-Plain				

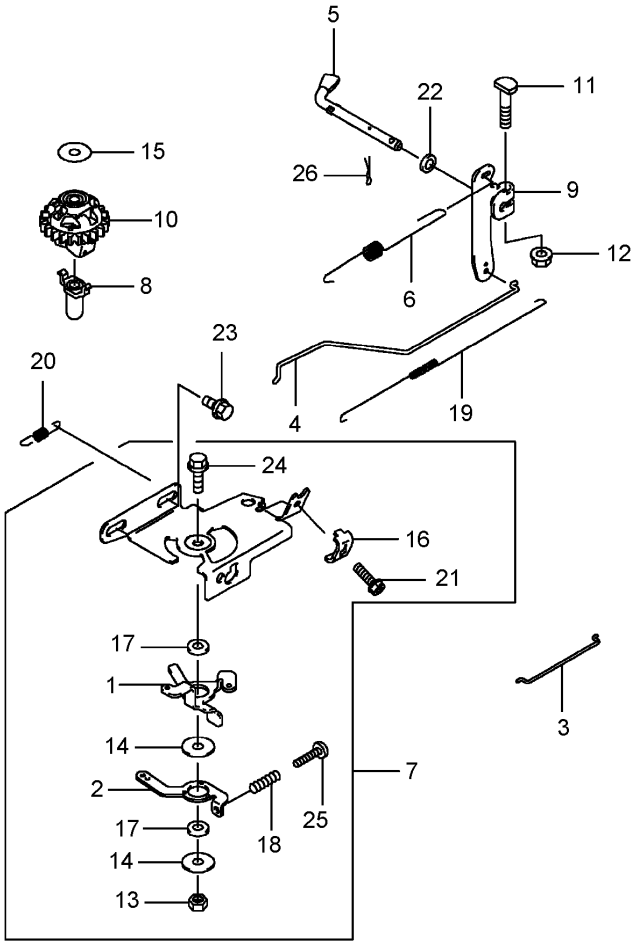

Control Equipment Assembly


Ref	Part No.	Qty.	Description
1	108-2560	1	Lever
2	108-2561	1	Lever
3	108-2562	1	Link-Choke
4	108-2563	1	Link-Throttle
5	108-2564	1	Arm-Pivot
6	108-2565	1	Spring-Govenor
7	108-2566	1	Control Panel ASM
8	108-2567	1	Sleeve
9	108-2568	1	Arm-Governor
10	108-2569	1	Governor ASM
11	108-2570	1	Bolt
12	108-2571	1	Nut
13	108-2572	1	Nut
14	100-2715	2	Washer
15	93-8612	1	Washer
16	95-9849	1	Clamp
17	100-2718	2	Collar
18	93-8588	1	Spring
19	108-2573	1	Spring-Throttle
20	108-2574	1	Spring
21	95-9853	1	Bolt
22	108-2575	1	Washer
23	100-2804	2	Bolt-Flanged
24	108-2576	1	Bolt-Flange

Ref	Part No.	Qty.	Description
25	108-2577	1	Screw-Pan
26	108-2578	1	Pin-Snap

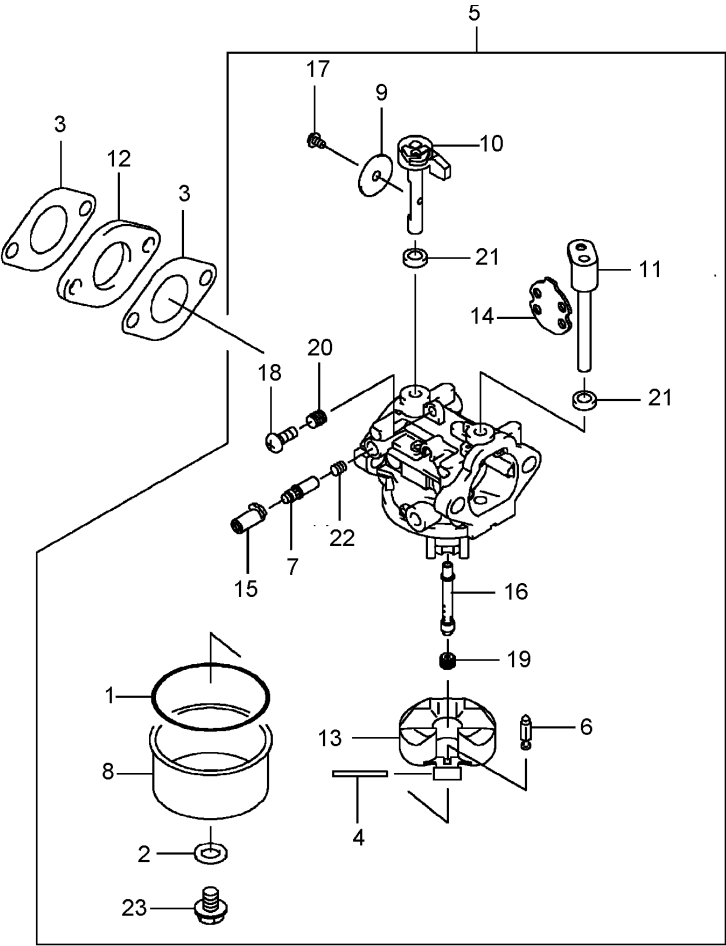

Carburetor Assembly

Ref	Part No.	Qty.	Description				
1	108-2579	1	Gasket				
2	108-2580	1	Gasket				
3	108-2581	2	Gasket				
4	108-2582	1	Shaft				
5	108-2583	1	Carburetor ASM				
6	108-2584	1	Needle-Jet				
7	108-2585	1	Screw-Pilot, Air				
8	108-2586	1	Chamber-Float				
9	108-2587	1	Valve-Throttle				
10	108-2588	1	Shaft-Carburetor				
11	108-2589	1	Shaft-Carburetor				
12	108-2590	1	Insulator				
13	108-2591	1	Float ASM				
14	108-2592	1	Choke Valve ASM				
15	108-2593	1	Limiter				
16	108-2594	1	Nozzle-Main				
17	108-2595	1	Screw				
18	108-2596	1	Screw				
19	108-2597	1	Jet-Main (#74)				
20	108-2598	1	Spring				
21	108-2599	2	Seal				
22	108-2600	1	Spring				
23	108-2601	1	Screw				

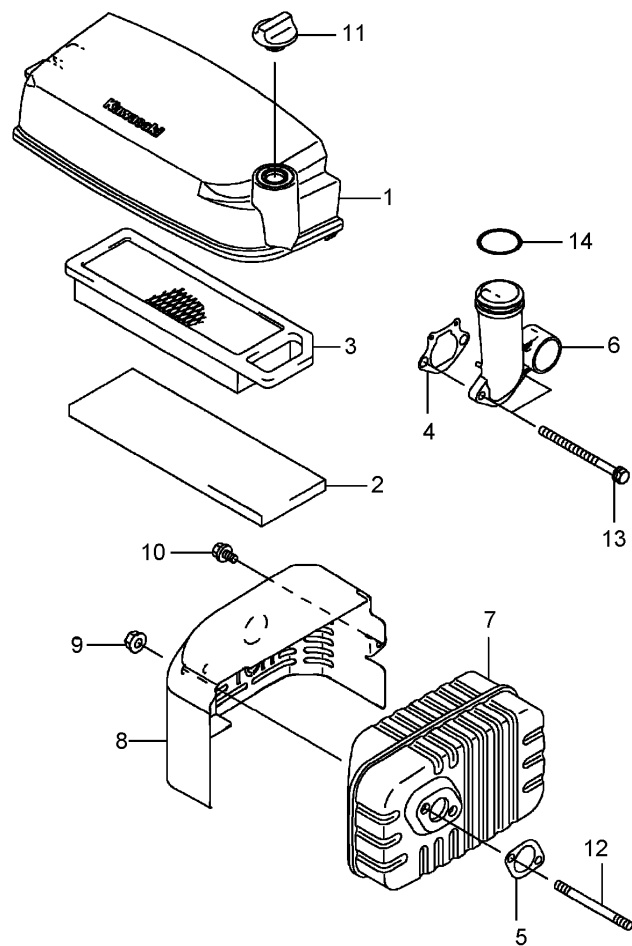

Air Filter and Muffler Assembly

Ref	Part No.	Qty.	Description				
1	108-2602	1	Case-Filter, Air				
2	108-2603	1	Element-Filter, Air				
3	108-2604	1	Air Filter Element ASM				
4	108-2605	1	Gasket-Pipe, Intake				
5	108-2606	1	Gasket-Muffler				
6	108-2607	1	Pipe-Intake				
7	108-2608	1	Muffler				
8	108-2609	1	Cover-Muffler				
9	108-2610	2	Nut				
10	108-2611	1	Bolt				
11	108-2612	1	Nut				
12	100-2761	2	Bolt-Stud				
13	100-2762	2	Bolt				
14	108-2613	1	O-Ring				

NOTES

