



21in Heavy-Duty Recycler[®]/Rear Bagger Lawn Mower

Model No. 22191 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing, Chute and Wheel Assembly	 3	Lubrication Equipment Assembly Kawasaki FJ180V-AS36	 17
Housing Assembly No. 98-7146	 5	Cooling Equipment Assembly Kawasaki FJ180V-AS36	 18
Wheel and Tire Assembly No. 100-2870	 6	Electric Equipment Assembly Kawasaki FJ180V-AS36	 19
Engine and Blade Assembly	 7	Control Equipment Assembly Kawasaki FJ180V-AS36	 20
Lower Handle Assembly	 9	Carburetor Assembly Kawasaki FJ180V-AS36	 21
Control Panel Assembly	 10	Air Filter and Muffler Assembly Kawasaki FJ180V-AS36	 22
Rear Drive and Wheel Assembly	 11	Fuel Tank and Fuel Valve Assembly Kawasaki FJ180V-AS36	 23
Rear Wheel Assembly No. 100-2860	 12	Starter Assembly Kawasaki FJ180V-AS36	 24
Grass Bag Assembly No. 106-0975	 13	Label Assembly Kawasaki FJ180V-AS36	 25
Cylinder and Crankcase Assembly Kawasaki FJ180V-AS36	 14		
Piston and Crankshaft Assembly Kawasaki FJ180V-AS36	 15		
Valve and Camshaft Assembly Kawasaki FJ180V-AS36	 16		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Kawasaki dealer

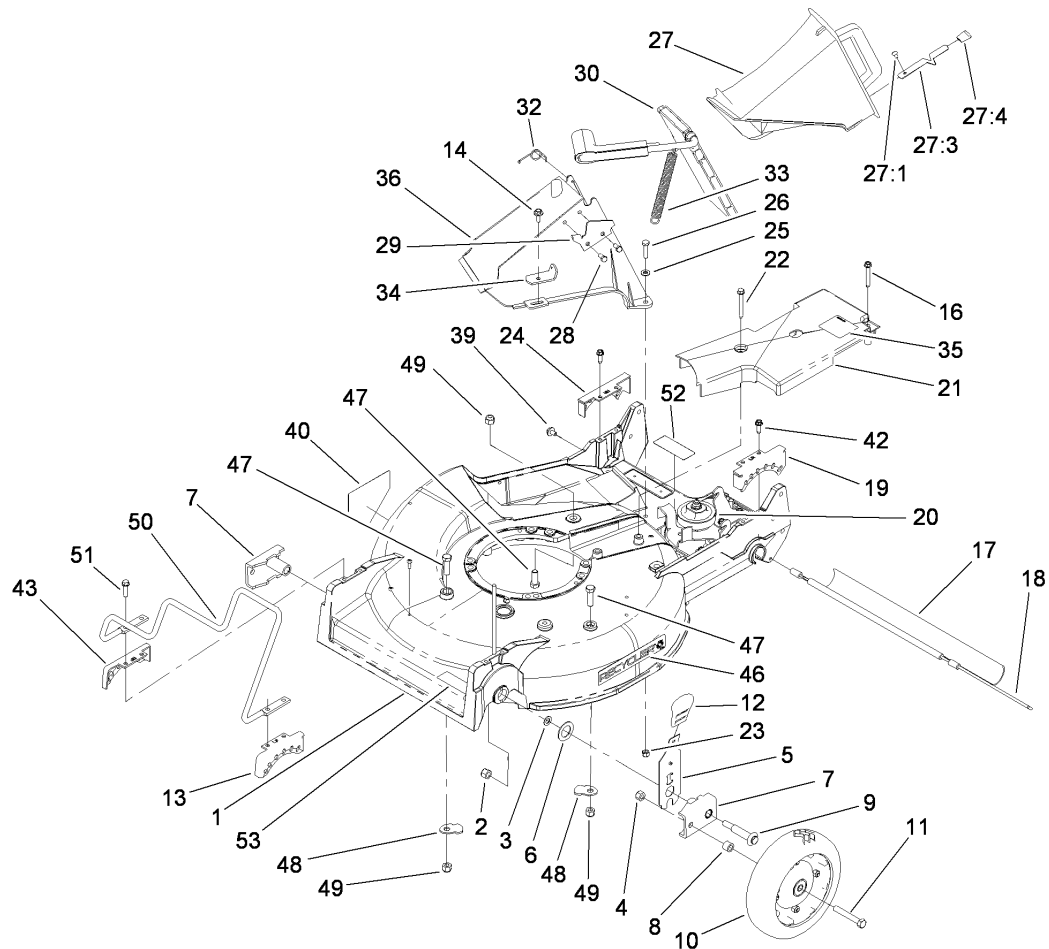


Housing, Chute and Wheel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	98-7146	1	Housing	26	321-8	2	Screw-HH
2	3296-6	2	Nut-Lock	27	77-0500	1	Discharge Plug ASM
3	40-1940	2	Washer	27:1	3295-35	1	Rivet-Head, Flat
4	32152-2	2	Nut-Lock, Cone	27:3	76-4640	1	Latch-Plug, Discharge
5	115-0980	2	Front Spring Arm ASM	27:4	76-4650	1	Grip-Latch
6	257-3	2	Washer-Thrust	28	46-8090	2	Screw-Plastite
7	61-8300	2	Arm-Pivot, Front	29	93-3154	1	Latch-Plate
8	52-2480	2	Spacer-Wheel	30	93-7351	1	Discharge Door ASM
9	114-3468	2	Screw-Shoulder	32	80-3770	1	Retainer-Door
10	100-2870	2	Wheel And Tire ASM	33	76-4660	1	Spring-Door
11	323-12	2	Screw-HH	34	71-9350	1	Bracket-Spring
12	110-0549	2	Knob-HOC	35	52-2620	1	Label-Grease
13	49-8760	1	Quadrant-Front, LH	36	82-9152	1	Tunnel-Discharge
14	46-6811	1	Screw-HWH	39	46-6810	1	Screw And Washer ASM
16	92-1616	1	Screw-HWHTF	40	43-8480	1	Decal-Danger
17	112-9989	1	Shield-Trailing	42	49-2040	4	Screw-HWHTF
18	33-3208	1	Rod-Shield	43	49-8770	1	Quadrant-Front, RH
19	49-8740	1	Quadrant-Rear, LH	46	106-0689	1	Decal
20	74-1860	1	Gear Case ASM	47	323-6	3	Screw-HH
21	74-1770	1	Cover-Belt	48	84-8930	2	Shield-Retainer
22	37-7260	1	Screw-HHFTF	49	3296-39	3	Nut-Lock, NI
23	3296-42	2	Nut-Lock, NI	50	109-7638	1	Guard-Engine
24	49-8750	1	Quadrant-Rear, RH	51	32144-86	4	Screw-HWHTF
25	3256-22	2	Washer-Flat	52	92-1779	1	Decal-Warning

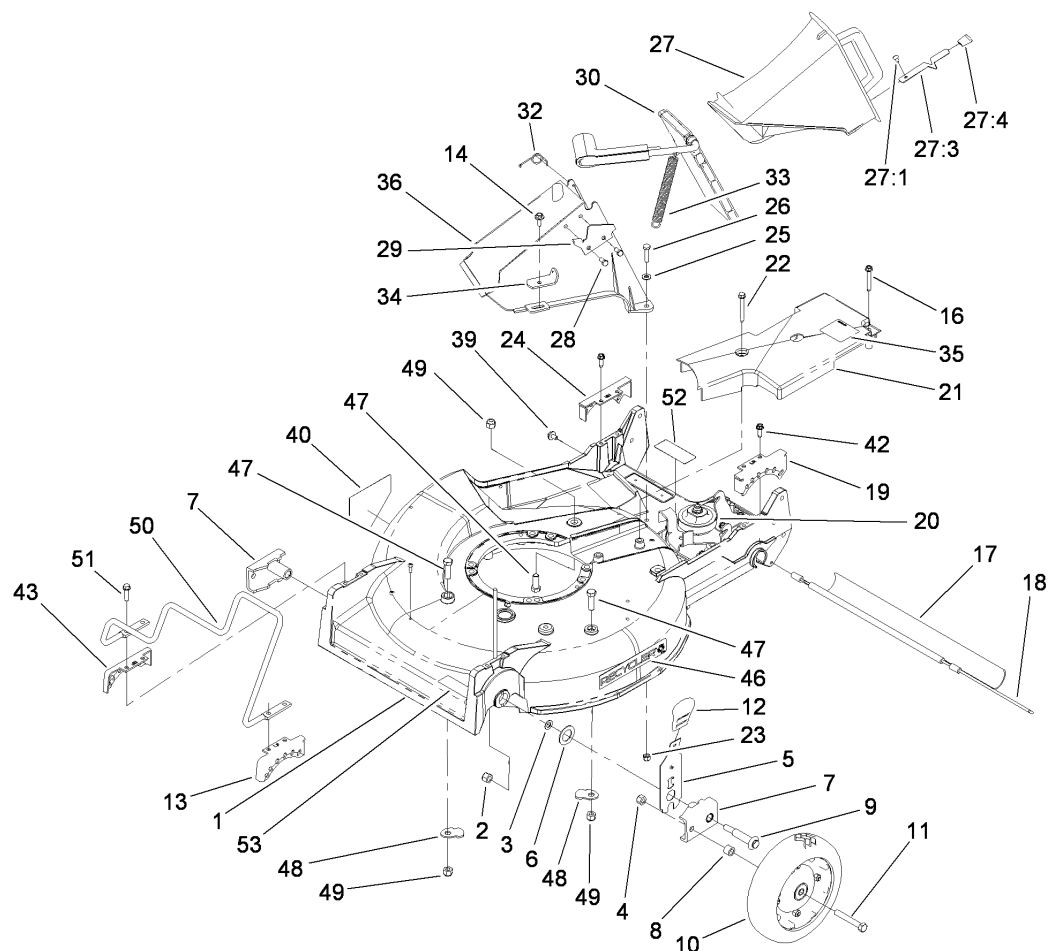 


Housing, Chute and Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
53	68-7410	1	Decal-Blade

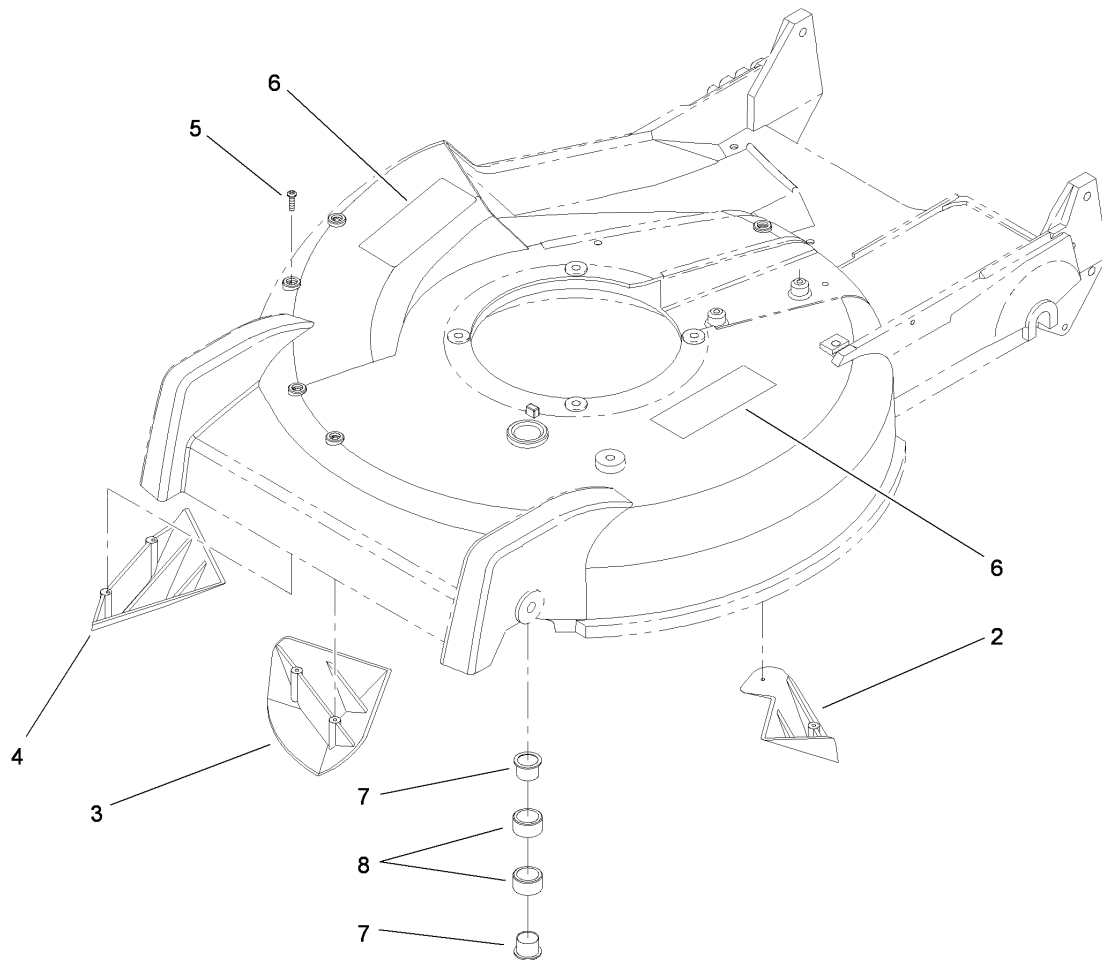 
**Housing Assembly No. 98-7146**

Ref	Part No.	Qty.	Description				
2	92-1750	1	Kicker-Rear, Sp				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-111	6	Screw-PPH				
6	110-4978	2	Decal-Danger				
7	2410-72	2	Caplug				
8	68-9780	2	Bearing				

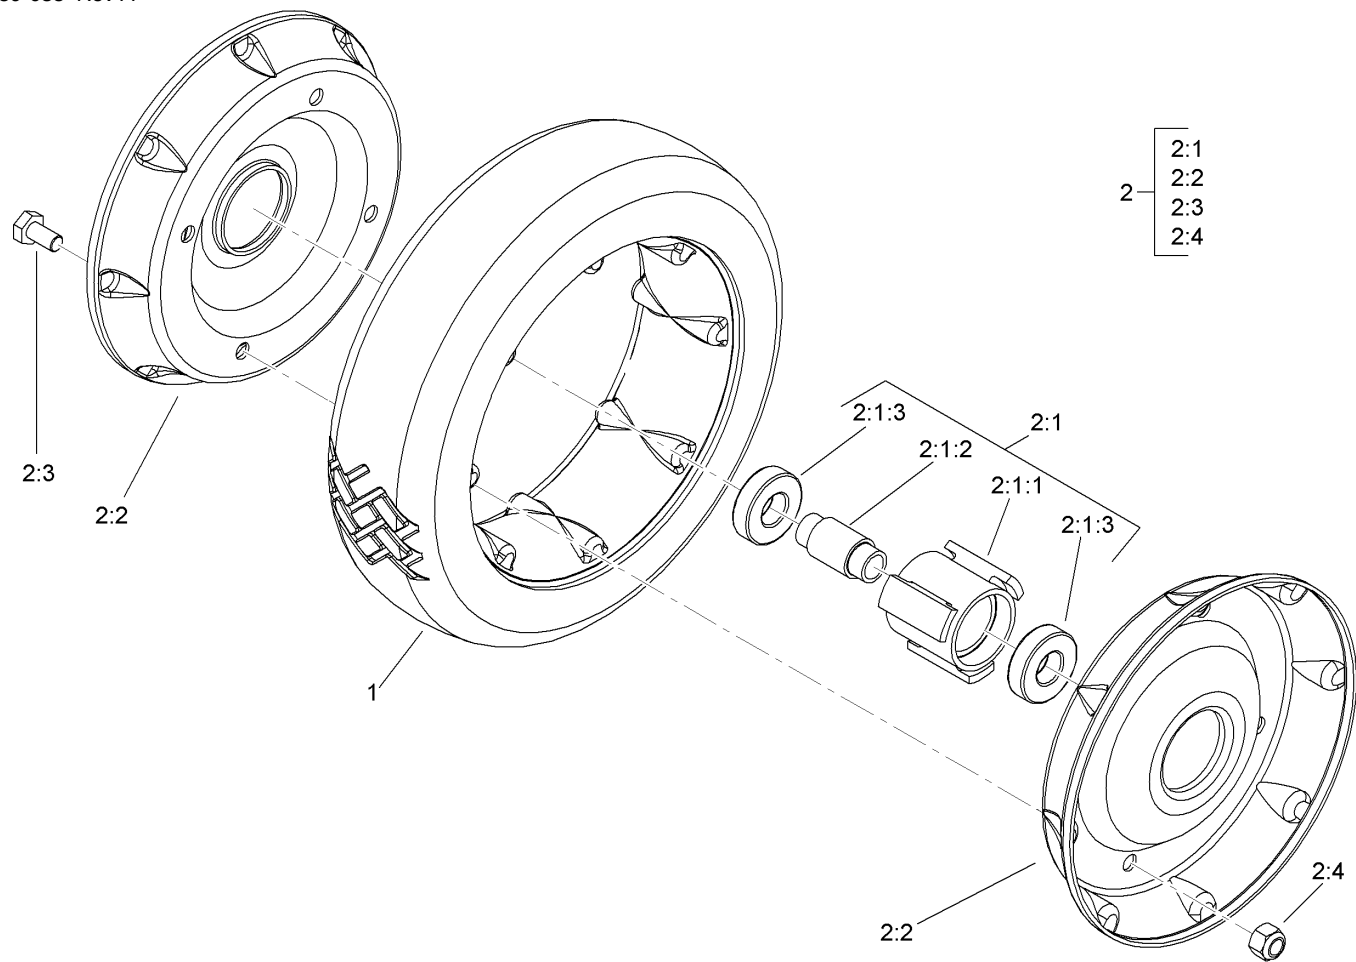 

Wheel and Tire Assembly No. 100-2870


Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
❶2		1	Wheel ASM				
❶2:1		1	Hub And Bearing ASM				
2:1:1	52-2410	1	Hub-Bearing				
2:1:2	52-2440	1	Spacer-Bearing				
2:1:3	52-2450	2	Bearing-Wheel				
2:2	53-7780-06	2	Plate-Wheel, Half				
2:3	321-2	4	Screw-HH				
2:4	3296-42	4	Nut-Lock, NI				

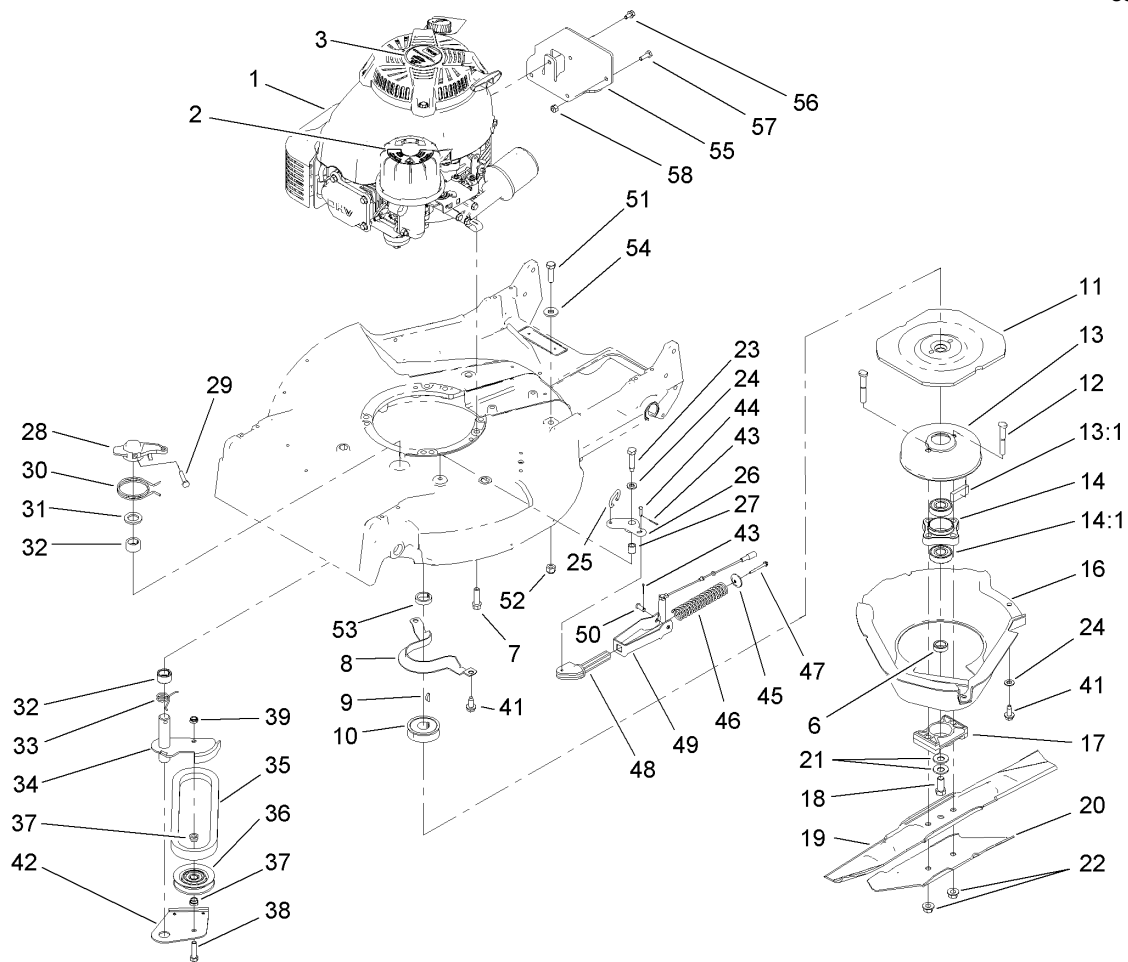 

Engine and Blade Assembly


Ref	Part No.	Qty.	Description
1	114-3433	1	Engine-Kawasaki, Fj180V-As36
2	114-3415	1	Decal-Air Cleaner
3	112-9967	1	Decal
6	107-4058	1	Spacer-Shaft, Output
7	95-1727	4	Screw-Taptite
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	56-6160-03	1	Flywheel-BBC
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampener-Vibration
14	42-6890	1	Hub ASM
14:1	100-1048	2	Bearing-Ball
16	46-5693	1	Shield
17	107-4275	1	Spacer-Blade
18	3212-4	1	Screw-HH
19	91-2256-03	1	Blade-21 Inch
20	91-2255-03	1	Stiffener-Blade
21	1-603610	2	Washer-Spring
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	3	Washer-Flat
25	49-2810	1	Link-Control

Ref	Part No.	Qty.	Description
26	49-7960	1	Bellcrank
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Arm-Idler
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Spacer-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	3	Screw-HWHTF
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWHTF
48	106-0842	1	Guide-Spring
49	107-4087-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable

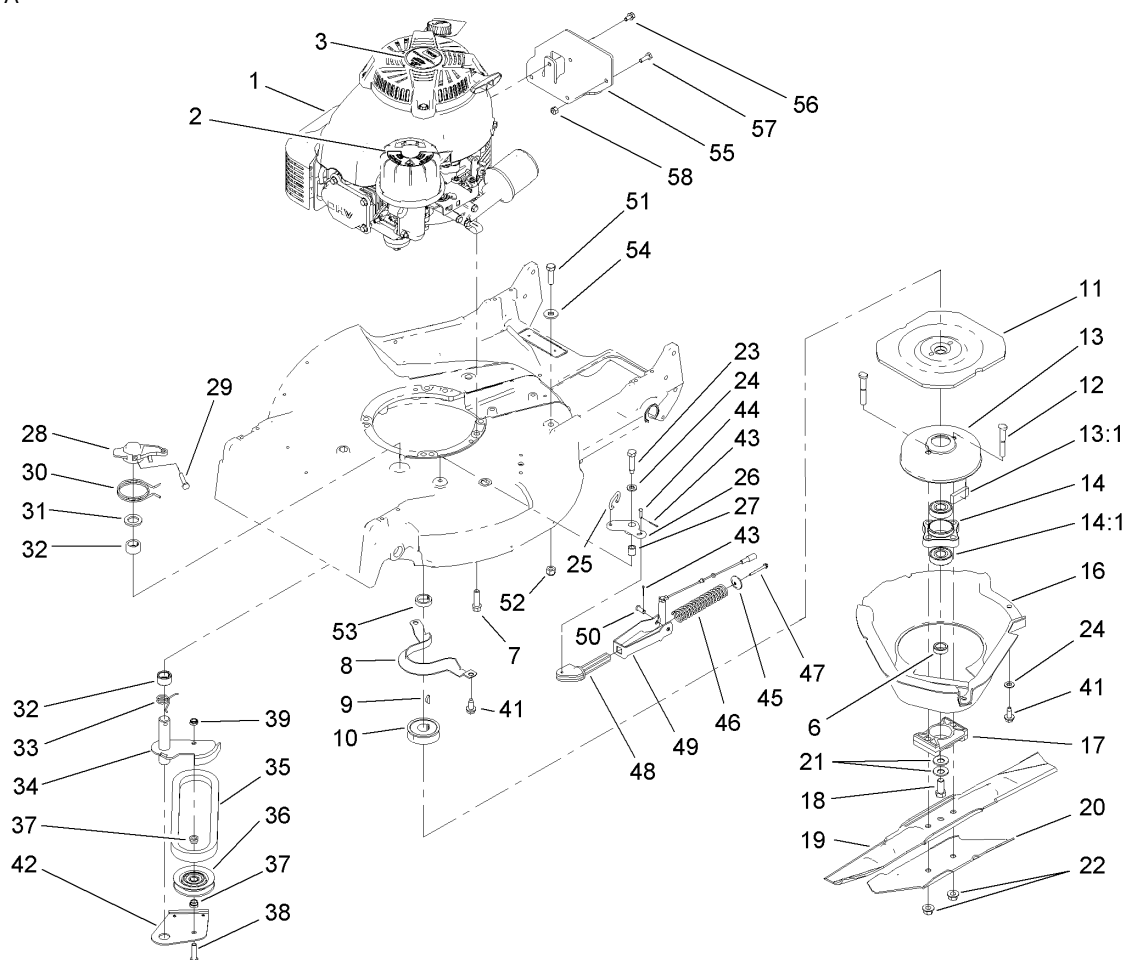 


Engine and Blade Assembly (continued)

Ref	Part No.	Qty.	Description				
51	323-7	1	Screw-HH				
52	3296-39	1	Nut-Lock, NI				
53	110-2142	1	Spacer-Pulley				
54	80-6990	1	Washer-Hardened				
55	112-9730-03	1	Bracket-Adapter, Tank				
56	115-1004	3	Screw-HWH				
57	321-4	2	Screw-HH				
58	3296-42	2	Nut-Lock, NI				

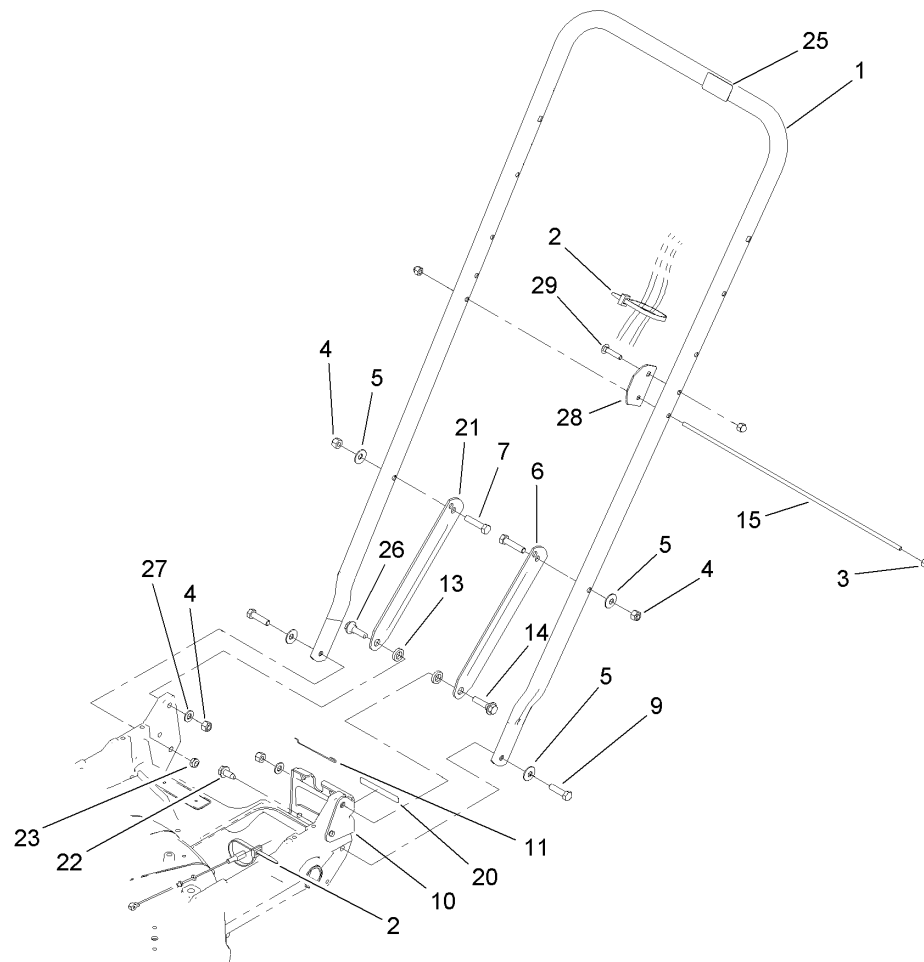 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	98-2385-03	1	Handle				
2	3290-378	3	Tie-Cable				
3	32111-7	3	Nut-Cap				
4	3296-29	4	Nut-Lock, NI				
5	3290-456	4	Washer-Belleville				
6	100-3298-03	1	Latch-Handle, LH				
7	322-7	2	Screw-HH				
9	322-6	2	Screw-HH				
10	74-1741	1	Bracket-Adjustment, Traction				
11	46-7030	1	Retainer-Cable				
13	3-3287	2	Spacer-Latch, Handle				
14	27-7210	1	Screw-Shoulder				
15	48-2810	1	Rod-Support, Bag				
20	74-1970	1	Decal-Position, Gear				
21	100-3297-03	1	Latch-Handle, RH				
22	32144-70	1	Screw-HWHTF				
23	3296-47	2	Nut-Lock, NI				
25	98-4387	1	Decal-Protection, Ear				
26	27-7211	1	Screw-Shoulder				
27	3256-23	2	Washer-Flat				
28	104-1326	1	Plate-Aligning, Bag				
29	3229-3	1	Screw-CARR				

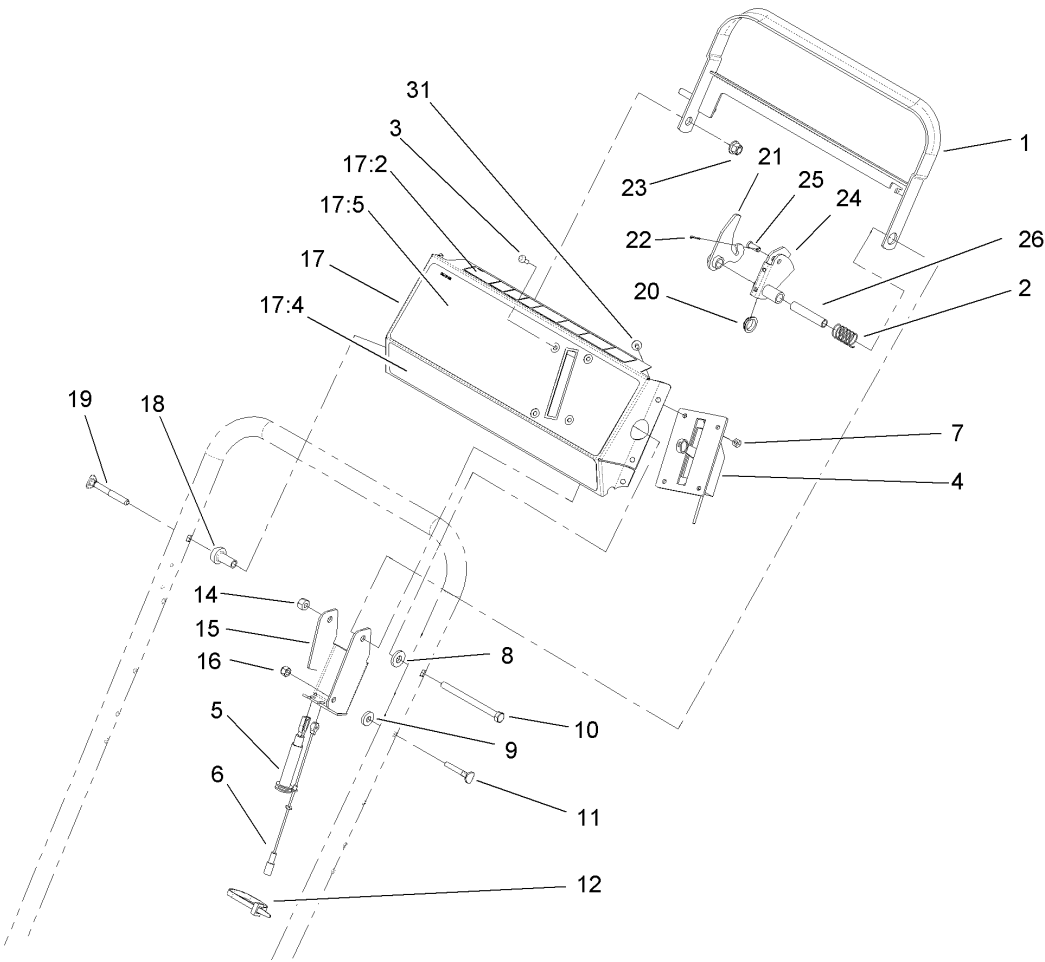 


Control Panel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control	23	3296-58	1	Nut-Lock, NI
2	85-6750	1	Spring-Control	24	84-8990	1	Lever-BBC
3	3250-12	4	Screw-PPH	25	84-9040	1	Pin-Cable
4	114-3447	1	Control-Throttle	26	84-9030	1	Spacer-Bracket, Control
5	84-9120	1	Cable-Traction	31	32104-76	6	Screw
6	84-9110	1	Cable-Clutch				
7	3296-2	4	Nut-Lock				
8	71-9310	1	Spacer				
9	71-9320	1	Spacer				
10	322-19	1	Screw-HH				
11	46-6430	1	Screw-Handle				
12	3290-378	1	Tie-Cable				
14	3296-29	1	Nut-Lock, NI				
15	92-1778-03	1	Bracket-Control				
16	3296-42	1	Nut-Lock, NI				
17	112-9739	1	Panel ASM				
17:2	104-8582	1	Decal-Panel, Danger				
17:4	106-0771	1	Decal-Panel				
17:5	112-9731	1	Decal-Panel, Control				
18	49-1631	1	Spacer-Support				
19	17-9427	1	Screw				
20	86-9320	1	Bushing-Flange				
21	84-9000	1	Lever-Traction				
22	3272-1	1	Pin-Cotter				

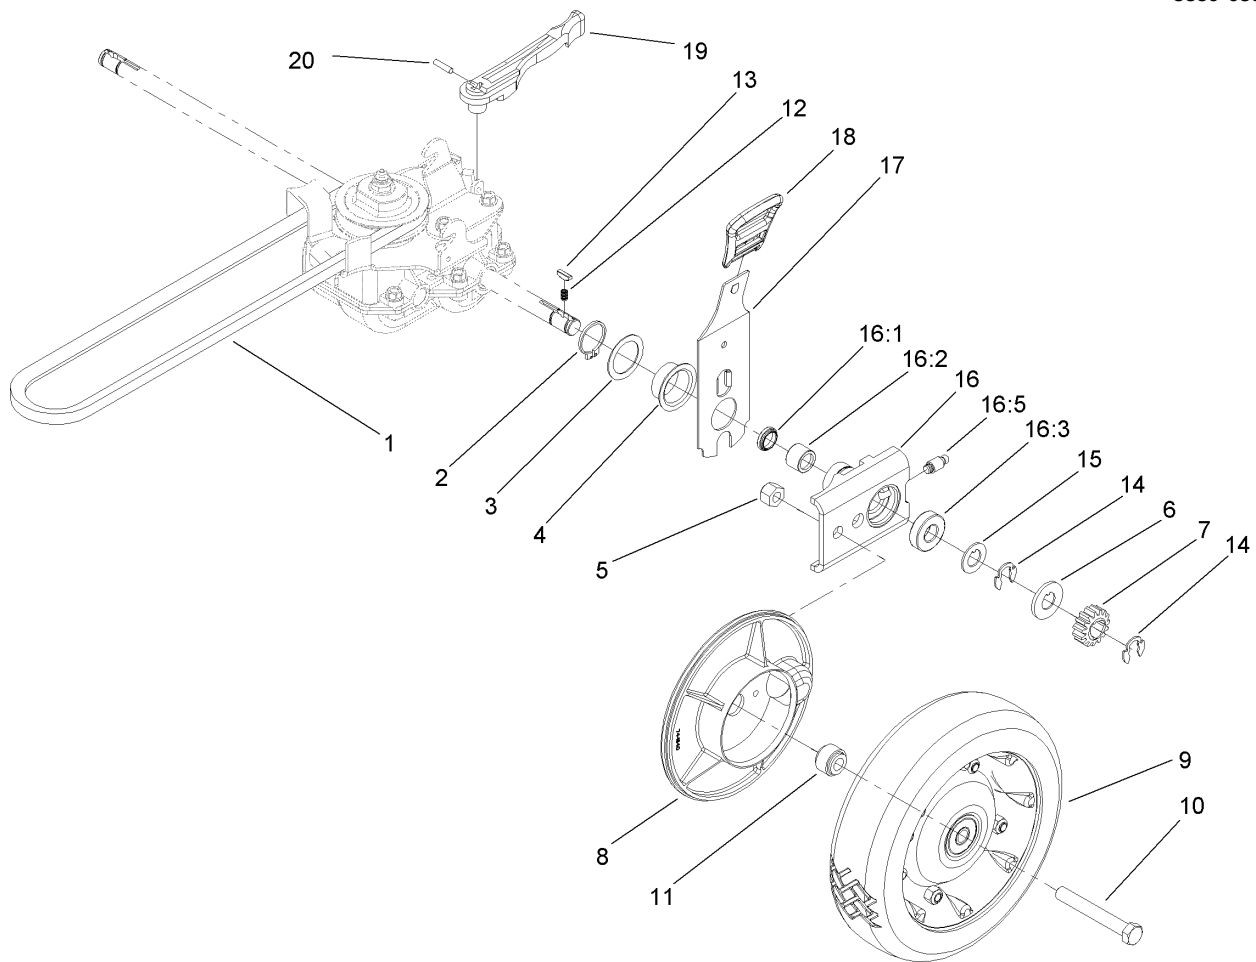 


Rear Drive and Wheel Assembly

Ref	Part No.	Qty.	Description				
1	36-8070	1	V-Belt				
2	32151-36	2	Ring-Retaining				
3	74-1810	2	Washer				
4	48-2170	2	Cap-End				
5	32152-2	2	Nut-Lock, Cone				
6	62-3830	2	Washer-Thrust, Outer				
7	39-9160	2	Gear-Pinion				
8	74-1640	2	Cover-Wheel				
9	100-2860	2	Wheel And Tire ASM				
10	323-13	2	Screw-HH				
11	74-1650	2	Spacer-Cover, Wheel				
12	39-9650	2	Spring-Compression				
13	612066	2	Key				
14	32151-68	4	Ring-Retaining				
15	49-7700	2	Washer-Thrust, Outer				
16	74-1851	2	Pivot Arm ASM				
16:1	47-6730	1	Seal-Oil				
16:2	48-2060	1	Bearing-Roller				
16:3	52-2450	1	Bearing-Wheel				
16:5	92-6316	1	Zerk				
17	115-0981	2	Rear Spring Arm ASM				
18	110-0549	2	Knob-HOC				
19	74-1960	1	Lever-Shift				
20	32121-99	1	Pin-Coil				

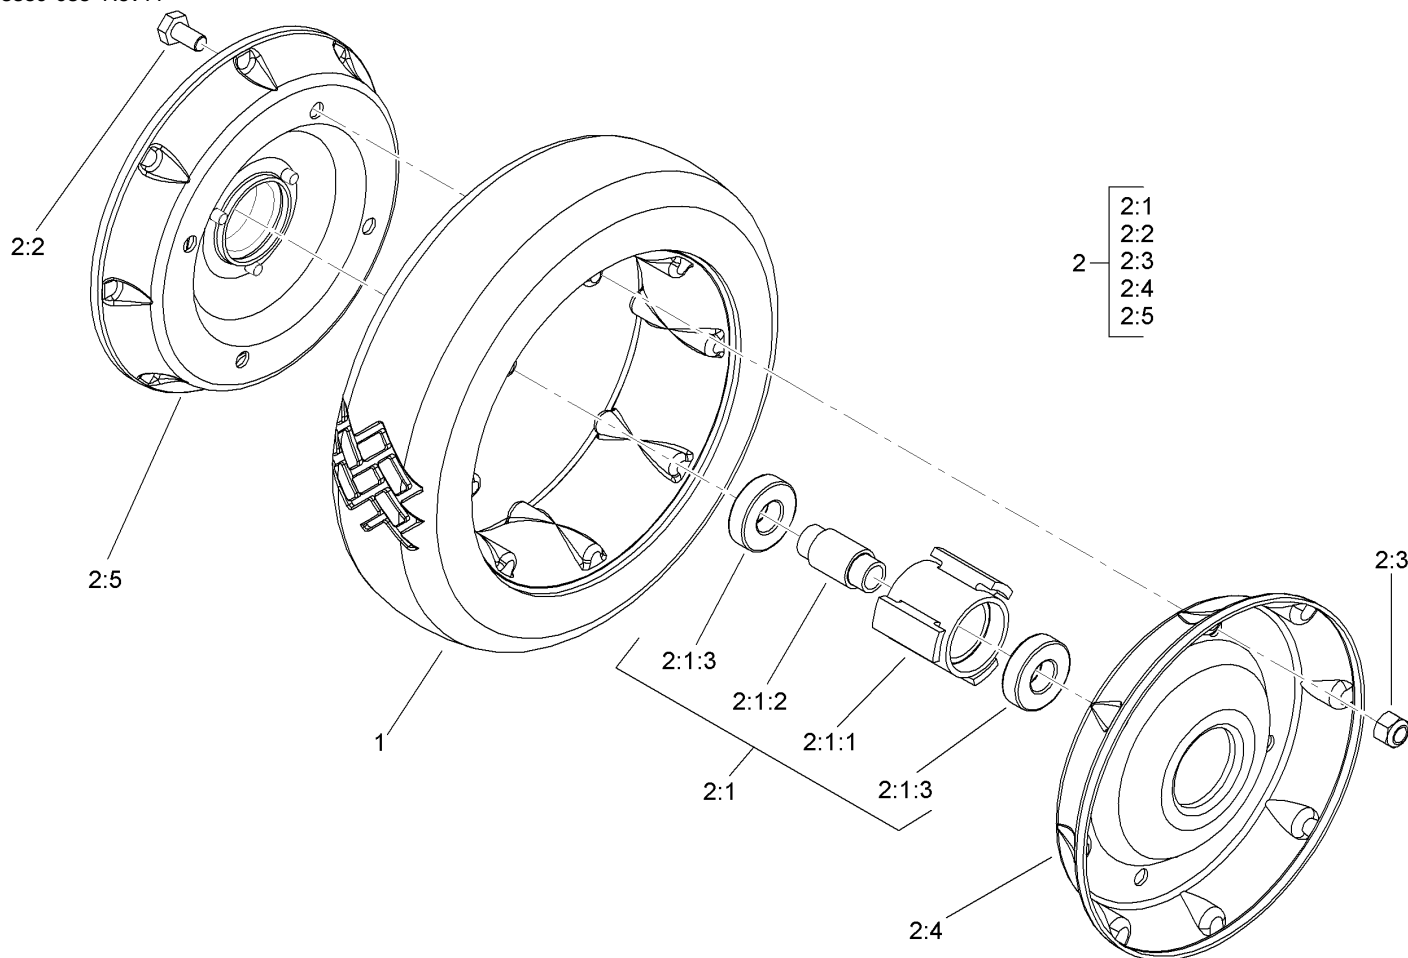 


Rear Wheel Assembly No. 100-2860

Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
①2		1	Wheel ASM				
①2:1		1	Hub And Bearing ASM				
2:1:1	52-2410	1	Hub-Bearing				
2:1:2	52-2440	1	Spacer-Bearing				
2:1:3	52-2450	2	Bearing-Wheel				
2:2	321-2	4	Screw-HH				
2:3	3296-42	4	Nut-Lock, NI				
2:4	53-7780-06	1	Plate-Wheel, Half				
2:5	92-4957-06	1	Wheel Half And Gear ASM				

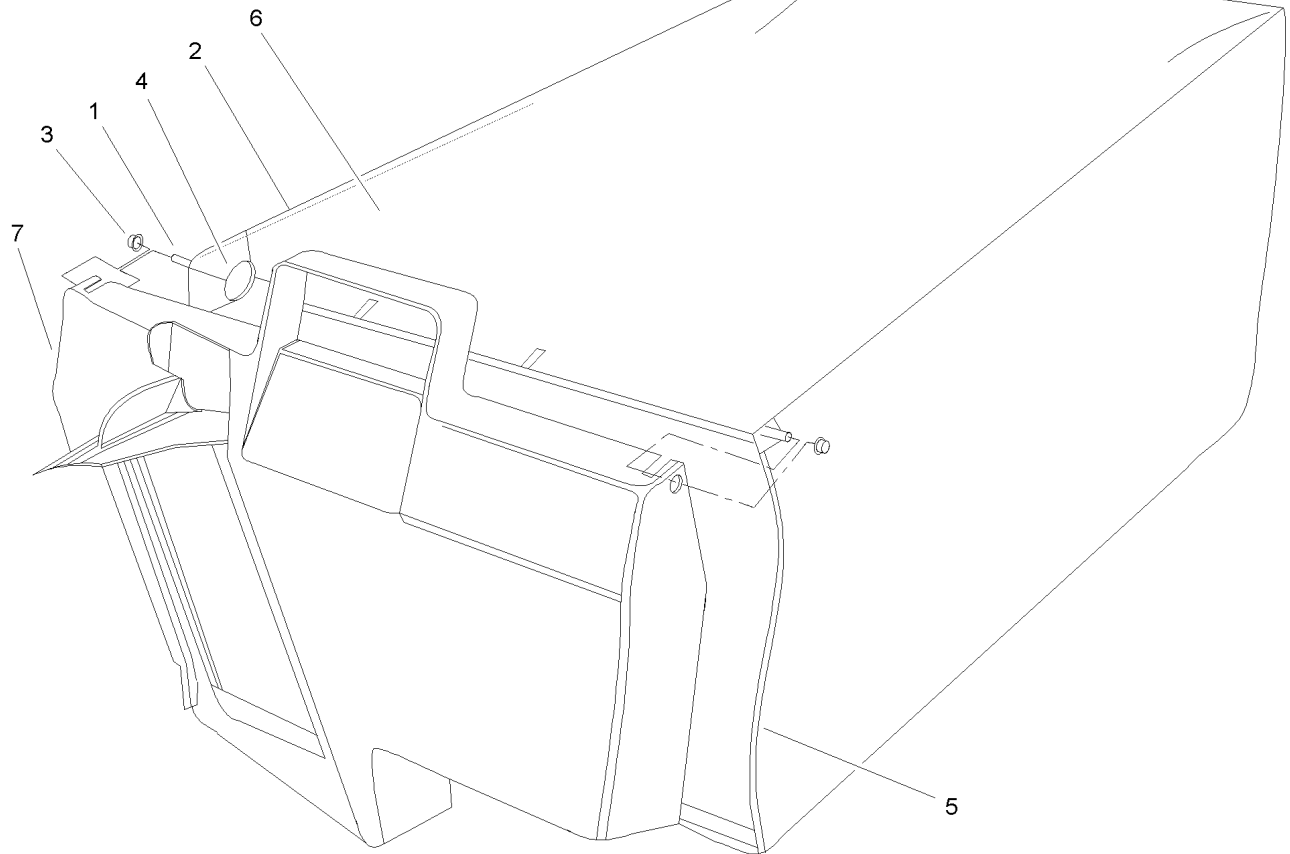


Grass Bag Assembly No. 106-0975

Ref	Part No.	Qty.	Description				
1	33-4820	1	Hinge-Door, Bag				
2	42-4030	1	Frame-Bag, Upper				
3	3290-422	2	Nut-Push				
4	36-6910	2	Spring				
5	42-4020	1	Frame-Bag				
6	106-0926	1	Bag-Grass				
7	48-2840	1	Door-Bag, Grass				

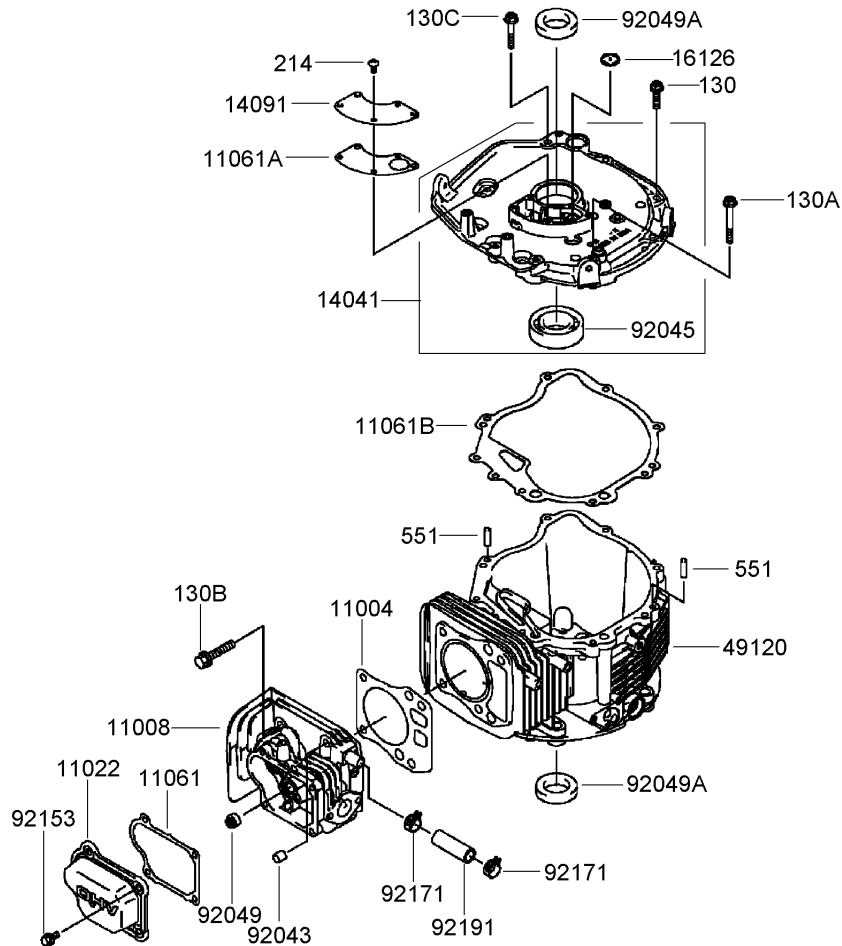 


Cylinder and Crankcase Assembly
Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
211004	11004-7020	1	Gasket-Head				
211008	11008-7025	1	Head-Cylinder				
211022	11022-7005	1	Case-Rocker				
211061	11061-7023	1	Gasket-Case, Rocker				
211061A	11061-7031	1	Gasket-Breather				
211061B	11061-7060	1	Gasket-Cover, Crankcase				
214041	14041-7010	1	Cover				
214091	14091-7010	1	Cover-Breather				
216126	16126-7014	1	Valve-Breather				
249120	49120-7082	1	Crankcase				
292043	92043-7001	2	Pin				
292045	92045-1207	1	Bearing-Ball (62/28)				
292049	92049-7001	1	Seal-Oil, R V C2 (6X11X10.2)				
292049A	92049-7008	2	Seal-Oil, 28-44-9 T C				
292153	92153-7043	4	Bolt (6X12)				
292171	92171-7024	2	Clamp				
292191	92191-7025	1	Tube (12X16X49)				
2130	130BA0625	7	Bolt-Flanged (6X25)				
2130A	130BA0650	1	Bolt-Flanged (6X50)				
2130B	130CA0840	4	Bolt-Flanged (8X40)				
2130C	130G0635	1	Bolt-Flanged (6X35)				
2214	214AA0510	5	Screw-Pan+- (5X10)				
2551	551A0612	2	Pin-Dowel (6X12)				

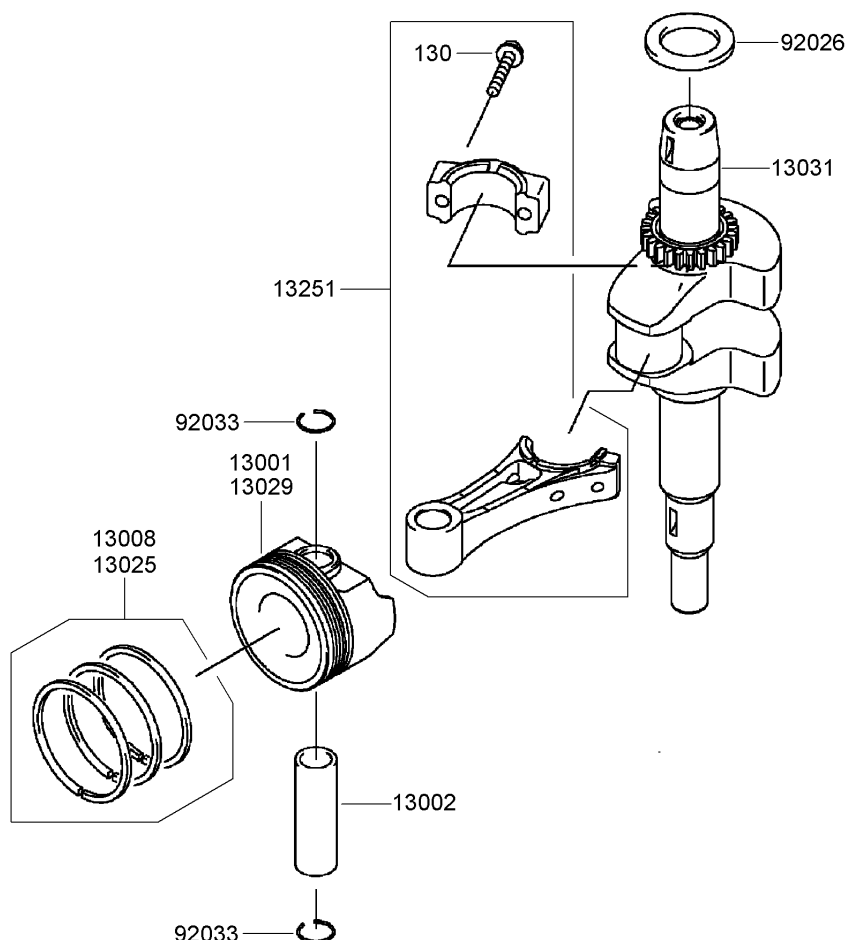 


Piston and Crankshaft Assembly Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
②13001	13001-7023	1	Piston-Engine				
②13002	13002-7001	1	Pin-Piston				
②13008	13008-7002	1	Piston Ring Set				
②13025	13025-7006	1	Piston Ring Set (L 0.50)				
②13029	13029-7005	1	Piston-Engine (L 0.50)				
②13031	13031-7057	1	Crankshaft				
②13251	13251-7011	1	Connecting Rod ASM				
②92026	92026-7020	1	Spacer				
②92033	92033-7002	2	Ring-Snap				
②130	130BA0630	2	Bolt-Flanged (6X30)				

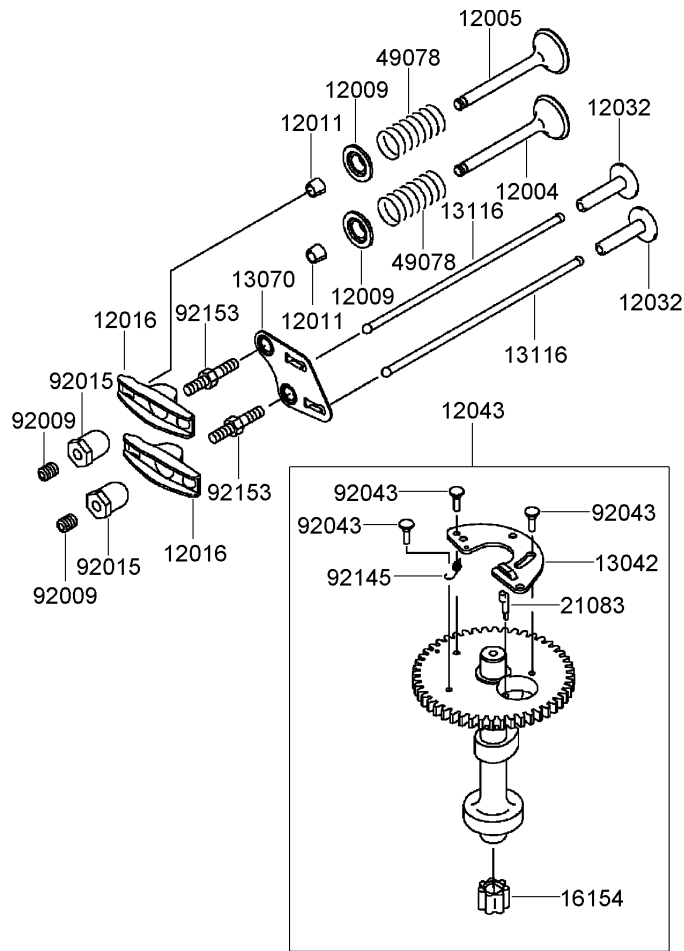 


Valve and Camshaft Assembly **Kawasaki FJ180V-AS36**

Ref	Part No.	Qty.	Description				
②12004	12004-7005	1	Valve-Intake				
②12005	12005-7006	1	Valve-Exhaust				
②12009	12009-7001	2	Retainer-Spring, Valve				
②12011	12011-2056	4	Collet				
②12016	12016-7008	2	Arm-Rocker				
②12032	12032-7001	2	Tappet				
②12043	12043-7005	1	Camshaft Valve ASM				
②13042	13042-7006	1	Weight				
②13070	13070-7009	1	Guide				
②13116	13116-7003	2	Rod-Push				
②16154	16154-7004	1	Rotor-Pump				
②21083	21083-7009	1	Arm				
②49078	49078-7001	2	Spring-Valve, Engine				
②92009	92009-2341	2	Screw				
②92015	92015-2253	2	Nut				
②92043	92043-7006	3	Pin				
②92145	92145-7016	1	Spring				
②92153	92153-7019	2	Bolt				

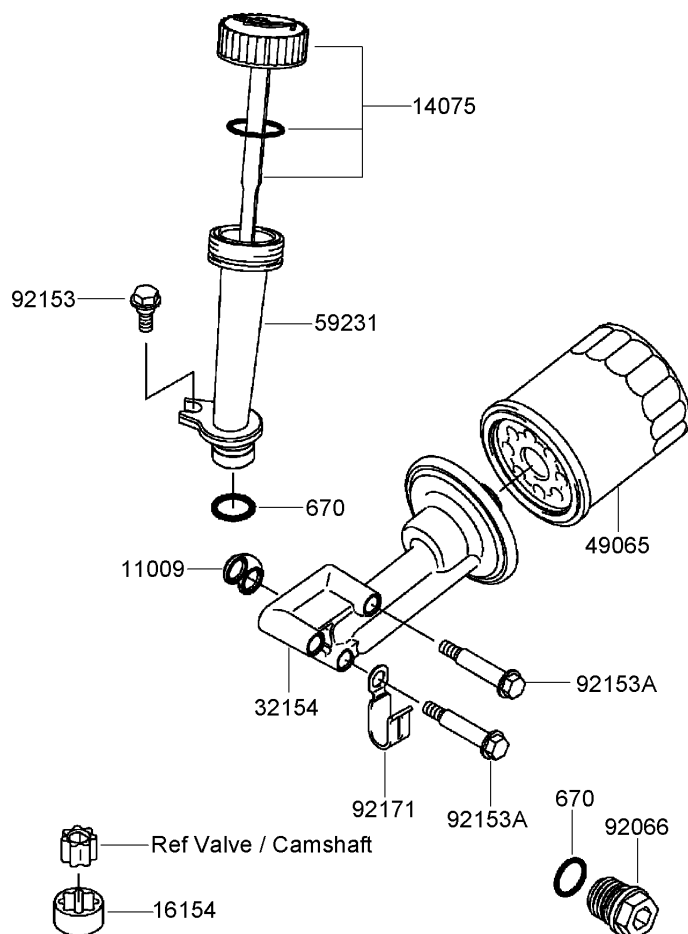 


Lubrication Equipment Assembly Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
②11009	11009-2860	1	Gasket				
②14075	14075-7007	1	Cap ASM				
②16154	16154-7002	1	Rotor-Pump				
②32154	32154-7018	1	Pipe				
②49065	49065-2078	1	Filter-Oil				
②59231	59231-7004	1	Filler				
②92066	92066-7003	1	Plug				
②92153	92153-7007	1	Bolt				
②92153A	92153-7028	3	Bolt				
②92171	92171-7008	1	Clamp				
②670	670D2016	2	O-Ring (16Mm)				

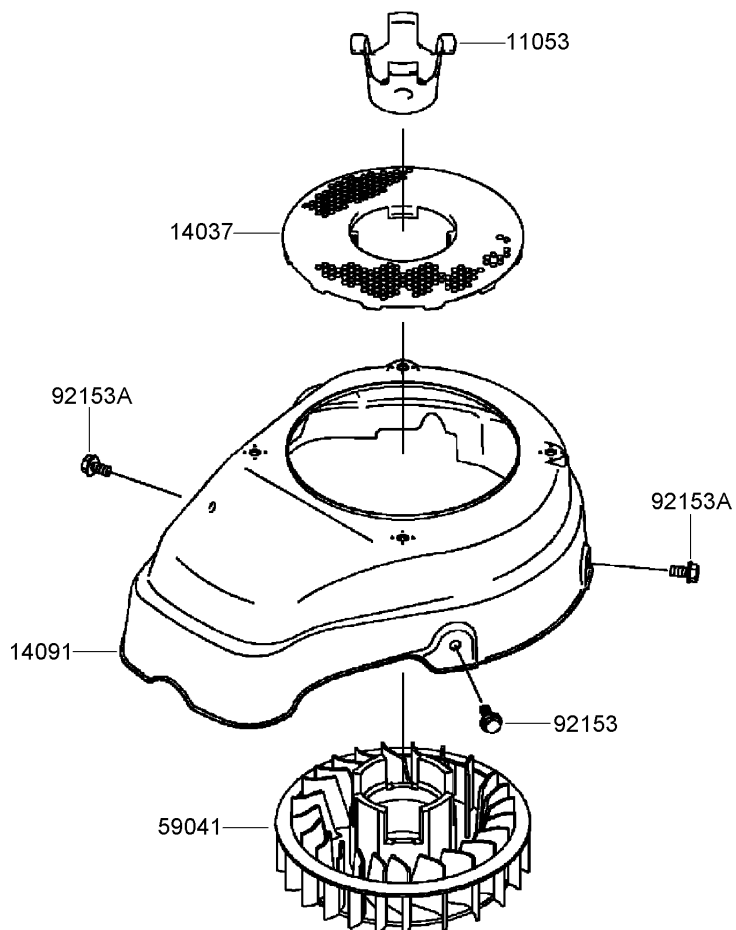 


Cooling Equipment Assembly Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
②11053	11053-7009	1	Bracket-Fan				
②14037	14037-7017	1	Screen				
②14091	14091-7053	1	Cover				
②59041	59041-7009	1	Fan				
②92153	92153-7007	1	Bolt				
②92153A	92153-7043	2	Bolt (6X12)				

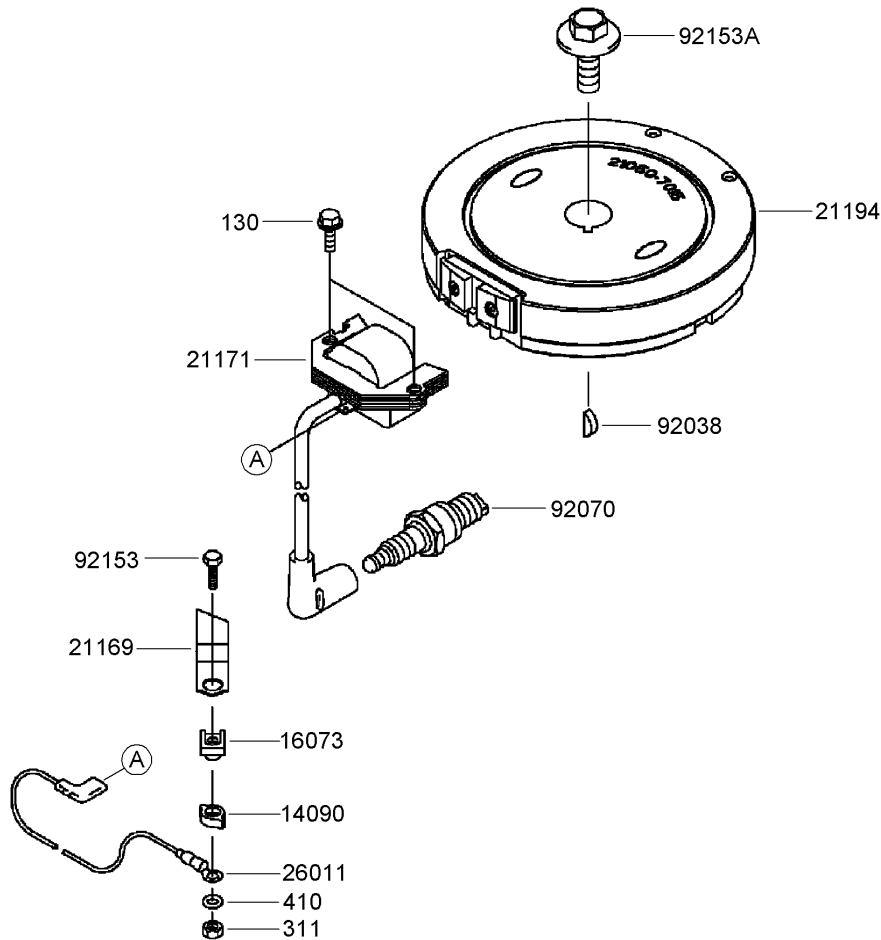 


Electric Equipment Assembly
Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
214090	14090-2108	1	Cover				
216073	16073-2192	1	Insulator				
221169	21169-2071	1	Terminal				
221171	21171-7030	1	Ignition Coil ASM				
221194	21194-7024	1	Flywheel				
226011	26011-7013	1	Wire-Lead				
292038	92038-2077	1	Key				
292070	92070-2088	1	Spark Plug, B P R 5E S (N G K) Solid				
292153	92153-7012	1	Bolt (4X16)				
292153A	92153-7030	1	Bolt (12X30)				
2130	130AA0620	2	Bolt-Flanged (6X20)				
2311	311B0400	1	Nut-Hex (4Mm)				
2410	410B0400	1	Washer-Plain, S (4Mm)				

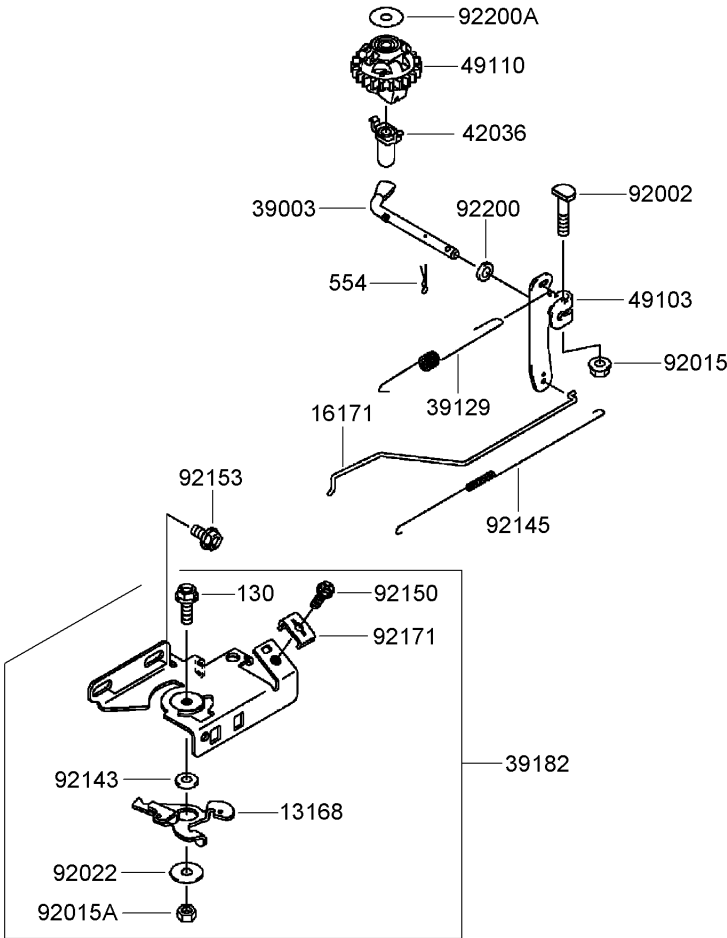 

Control Equipment Assembly **Kawasaki FJ180V-AS36**


Ref	Part No.	Qty.	Description				
213168	13168-7032	1	Lever				
216171	16171-7015	1	Link-Throttle				
239003	39003-7002	1	Arm-Pivot				
239129	39129-7014	1	Spring-Governor				
239182	39182-7010	1	Control Panel ASM				
242036	42036-2051	1	Sleeve				
249103	49103-7005	1	Arm-Governor				
249110	49110-7002	1	Governor ASM				
292002	92002-2269	1	Bolt (6X28)				
292015	92015-1193	1	Nut				
292015A	92015-2051	1	Nut				
292022	92022-2372	1	Washer (6X19X1.2)				
292143	92143-2135	1	Collar (6X13X2.3)				
292145	92145-7025	1	Spring-Throttle				
292150	92150-2182	1	Bolt (5X18)				
292153	92153-7043	2	Bolt (6X12)				
292171	92171-7016	1	Clamp				
292200	92200-2029	1	Washer (6.5X11.5X2.0)				
292200A	92200-2036	1	Washer (6.2X20X0.5)				
2130	130AA0618	1	Bolt-Flanged (6X18)				
2554	554A0600	1	Pin-Snap (1.2X21.2)				

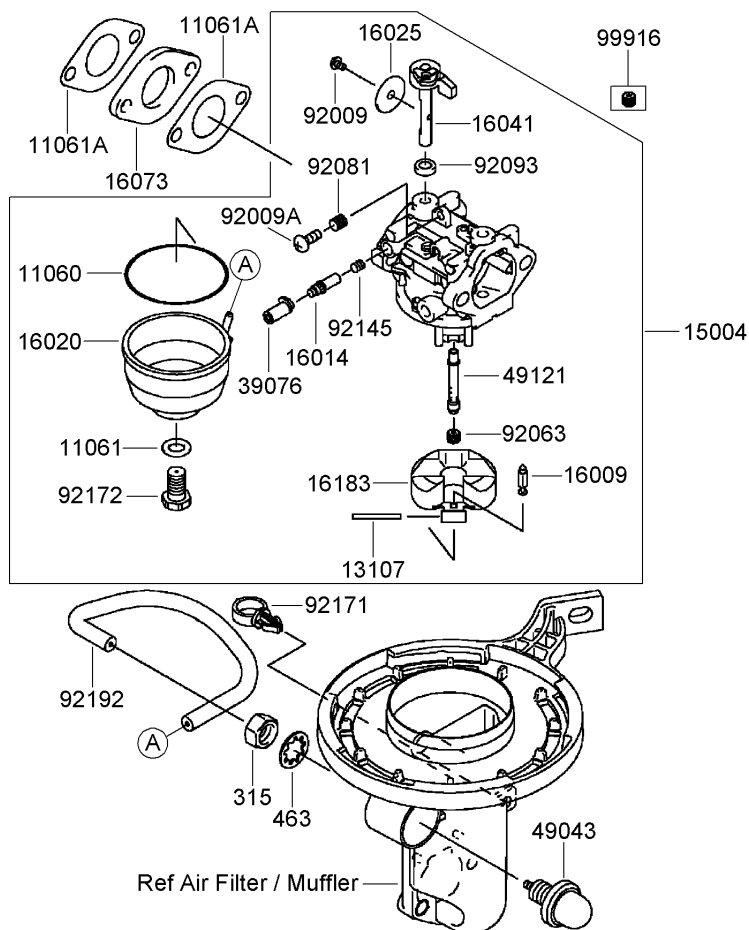 

Carburetor Assembly Kawasaki FJ180V-AS36


Ref	Part No.	Qty.	Description
②11060	11060-2190	1	Gasket
②11061	11061-7010	1	Gasket-Screw
②11061A	11061-7015	2	Gasket-Insulator
②13107	13107-7024	1	Shaft
②15004	15004-7011	1	Carburetor ASM
②16009	16009-2136	1	Needle-Jet
②16014	16014-7008	1	Screw-Air, Pilot
②16020	16020-7005	1	Chamber-Float
②16025	16025-7007	1	Valve-Throttle
②16041	16041-7019	1	Shaft-Carburetor
②16073	16073-7006	1	Insulator
②16183	16183-2002	1	Float ASM
②39076	39076-7001	1	Limiter
②49043	49043-7002	1	Pump-Priming
②49121	49121-7014	1	Nozzle-Main
②92009	92009-2083	1	Screw
②92009A	92009-2349	1	Screw
②92063	92063-7061	1	Jet-Main, No. 78
②92081	92081-2234	1	Spring
②92093	92093-2100	1	Seal
②92145	92145-7015	1	Spring
②92171	92171-7014	1	Clamp
②92172	92172-7003	1	Screw
②92192	92192-7092	1	Tube (2.2X7.3X190)

Ref	Part No.	Qty.	Description
②99916	99916-7007	1	Main Jet K H I Parts Kit
②315	315B1000	1	Nut-Hex, Fine (10Mm)
②463	463H1000	1	Washer-Toothed (10Mm)

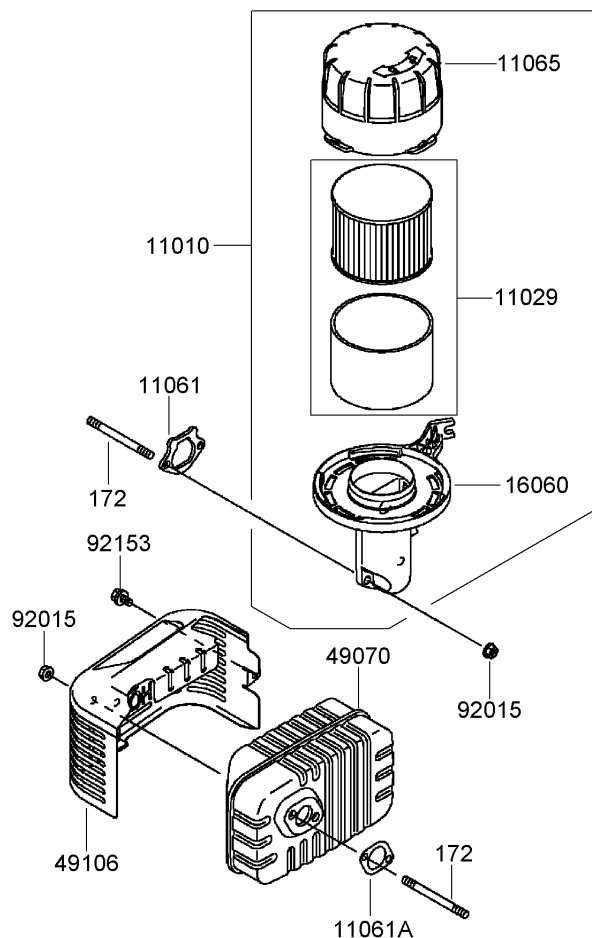 


Air Filter and Muffler Assembly Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
②11010	11010-7024	1	Air Filter ASM				
②11029	11029-7023	1	Air Filter Element ASM				
②11061	11061-7012	1	Gasket-Pipe, Intake				
②11061A	11061-7029	1	Gasket-Muffler				
②11065	11065-7019	1	Cap				
②16060	16060-7031	1	Pipe-Intake				
②49070	49070-7026	1	Muffler				
②49106	49106-7021	1	Cover-Muffler				
②92015	92015-1193	4	Nut				
②92153	92153-7023	1	Bolt (6X10)				
②172	172BA0680	4	Bolt-Stud (6X80)				

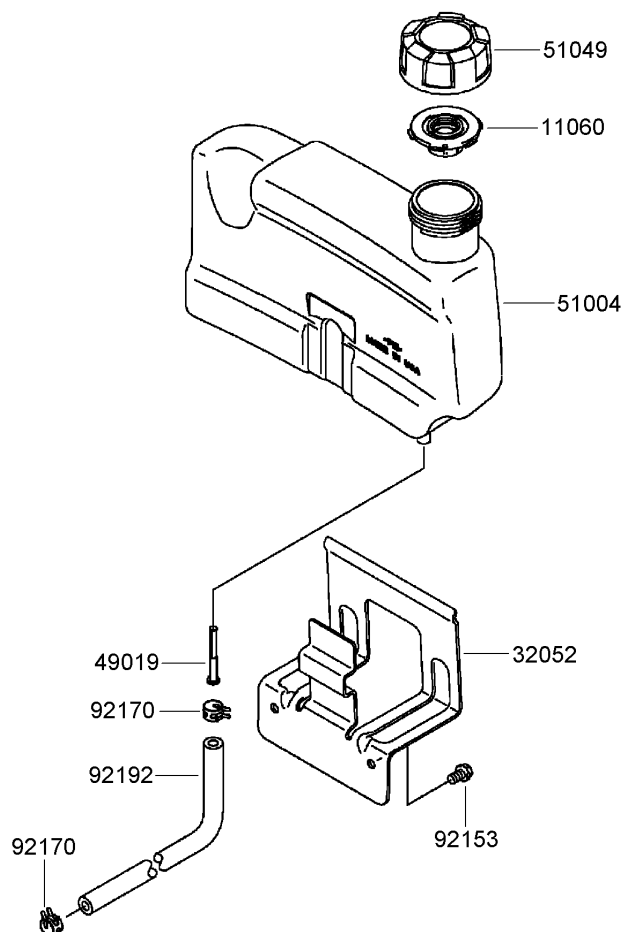 

Fuel Tank and Fuel Valve Assembly Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description
②11060	11060-2145	1	Gasket
②32052	32052-7001	1	Bracket-Tank
②49019	49019-7003	1	Filter-Fuel
②51004	51004-7004	1	Tank-Fuel
②51049	51049-7004	1	Cap-Tank
②92153	92153-7023	2	Bolt (6X10)
②92170	92170-2009	2	Clamp
②92192	92192-7084	1	Tube (6X12.7X375)

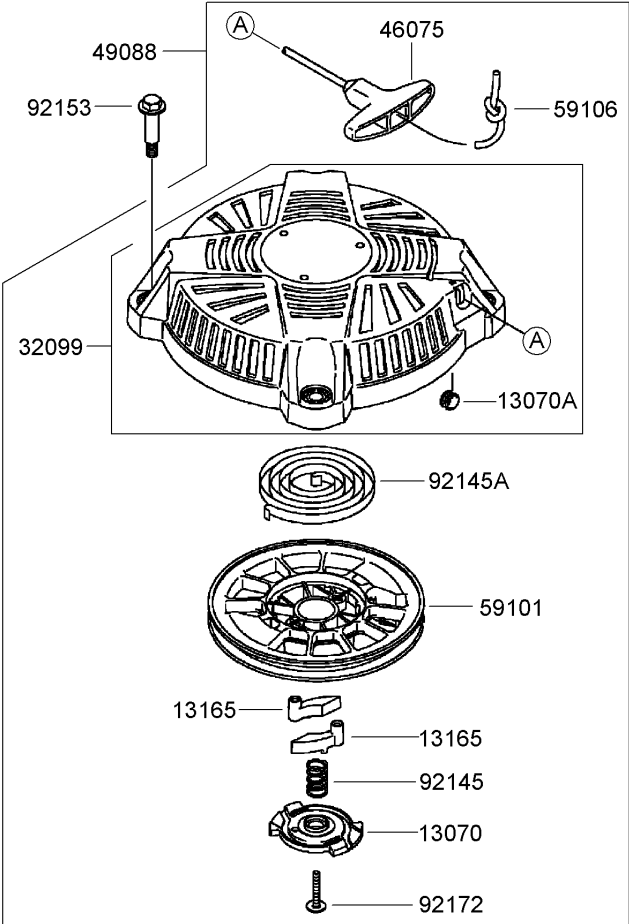 

Starter Assembly
Kawasaki FJ180V-AS36

Ref	Part No.	Qty.	Description				
2 13070	13070-7014	1	Guide				
2 13070A	13070-7015	1	Guide				
2 13165	13165-7002	2	Pawl-Starter, Recoil				
2 32099	32099-7004	1	Case-Starter, Recoil				
2 46075	46075-7002	1	Grip				
2 49088	49088-7026	1	Starter-Recoil				
2 59101	59101-7002	1	Reel-Starter, Recoil				
2 59106	59106-7006	1	Rope (1500Mm)				
2 92145	92145-7052	1	Spring				
2 92145A	92145-7053	1	Spring				
2 92153	92153-7021	4	Bolt (M6)				
2 92172	92172-7030	1	Screw				

NOTES

NOTES

