



Count on it.

Parts Catalog

Commercial Walk-Behind Mower Floating Deck T-Bar Hydro with 48in TURBO FORCE® Cutting Unit

Model No. 30498—Serial No. 270000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Engine and Clutch Assembly	4
Fuel System, Hydraulic Pump and Filter Assembly	5
Hydraulic Pump Assembly No. 114-3400 and 114-3401	6
Pump Drive and Wheel Assembly	7
Hydraulic Wheel Motor Assembly No. 104-1171	8
Lower Control Assembly	9
Hydraulic Hose Assembly	10
Upper Control Assembly	11
Control Panel Assembly	12
Battery Assembly	13
Parking Brake Assembly	14
Power-Take-Off Idler Assembly	15
Carrier Frame Assembly	16
Deck Drive and Baffle Assembly	17
Deck Assembly No. 112-7082	18
Spindle Assembly No. 110-0728	19
Spindle Assembly No. 110-0729	20
Lever Assembly No. 107-1664	21
Deck Assembly	22
Deflector Assembly No. 110-0758	23
Cylinder and Crankcase Assembly Kawasaki FH580V-DS28	24
Piston and Crankshaft Assembly Kawasaki FH580V-DS28	26
Valve and Camshaft Assembly Kawasaki FH580V-DS28	27
Lubrication Equipment Assembly Kawasaki FH580V-DS28	28
Cooling Equipment Assembly Kawasaki FH580V-DS28	29
Electric Equipment Assembly Kawasaki FH580V-DS28	30
Control Equipment Assembly Kawasaki FH580V-DS28	31
Carburetor Assembly Kawasaki FH580V-DS28	32
Air Filter and Muffler Assembly Kawasaki FH580V-DS28	33
Fuel Tank and Valve Assembly Kawasaki FH580V-DS28	34
Starter Assembly Kawasaki FH580V-DS28	35
Label Assembly Kawasaki FH580V-DS28	36
Attachments and Accessories	37

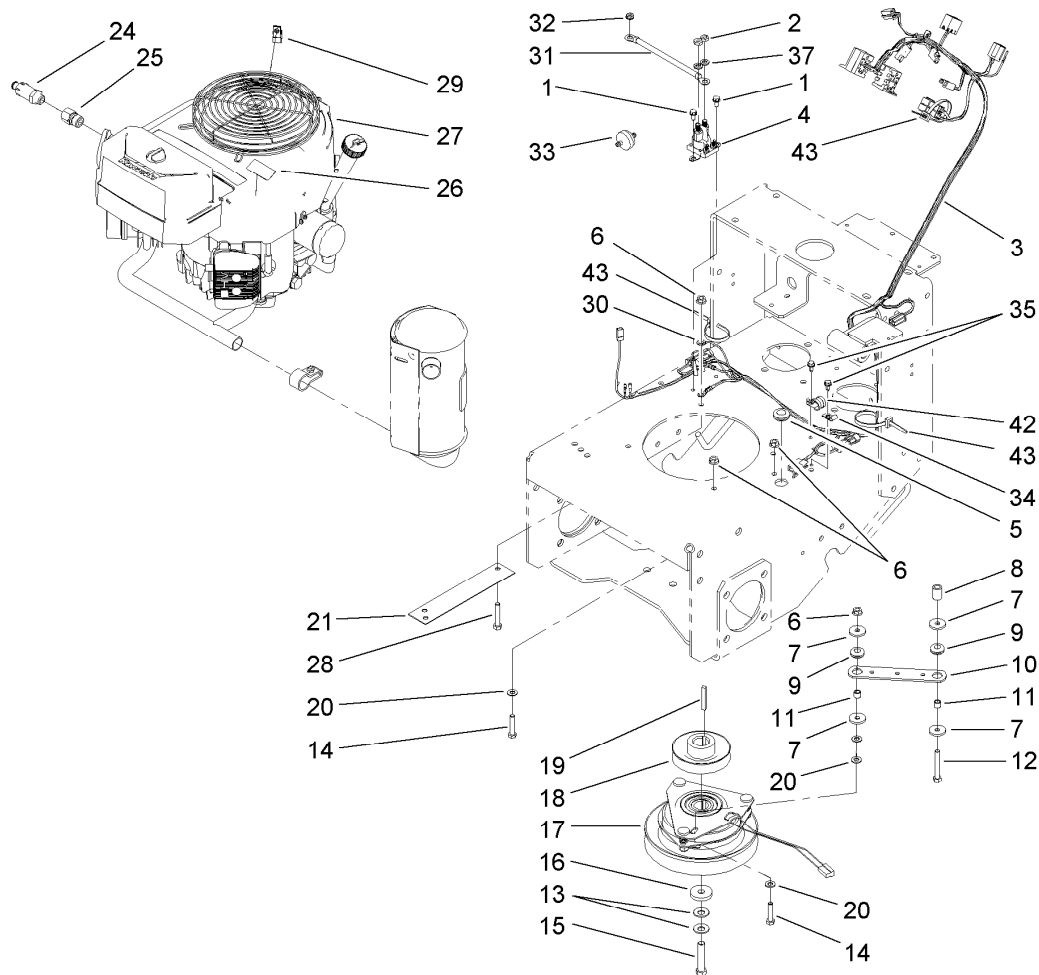


Engine and Clutch Assembly

Ref.	Part Number	Qty.	Description
1	32144-4	2	Screw-HWH
2	3220-2	2	Nut-Jam
3	114-3418	1	Harness-Wire
4	1-513075	1	Switch-Solenoid
5	112-7069	1	Grommet
6	32128-20	6	Nut-HF
7	1-613235	4	Washer
8	104-6373	1	Tube-Retainer
9	1-633630	2	Grommet
10	1-633543-03	1	Strap-Clutch, Brake
11	1-633545	2	Spacer
12	322-11	1	Screw-HH
13	1-603610	2	Washer-Spring
14	322-7	4	Screw-HH
15	3212-9	1	Screw-HH
16	107-4136	1	Washer
17	105-2635	1	Clutch / Brake ASM
18	44-5940	1	Pulley
19	608006	1	Key-Square

Ref.	Part Number	Qty.	Description
20	3256-23	5	Washer-Flat
21	94-5847-01	1	Cover-Pulley
24	92-6877	1	Valve-Drain, Oil
25	103-1966	1	Adapter
26	106-0699	1	Decal-Warning
27		1	Engine-Kawasaki, FH580V Bs24 ■
28	322-9	1	Screw-HH
29	2412-87	1	Clamp-Cable
30	3255-8	1	Washer-Lock
31	112-9707	1	Cable-Battery, Pos
32	32149-2	1	Nut-Keps
33	56-6360	1	Filter-Fuel
34	2412-72	1	Clip-Closed, Insulated
35	12-3270	2	Screw
37	3253-4	2	Washer-Lock
42	2412-134	1	Clamp-R
43	3290-378	3	Tie-Cable
99	103-1964	1	Hose-Drain, Oil ●

● Not illustrated

 ■ Obtain parts from www.kawpowerepc.com

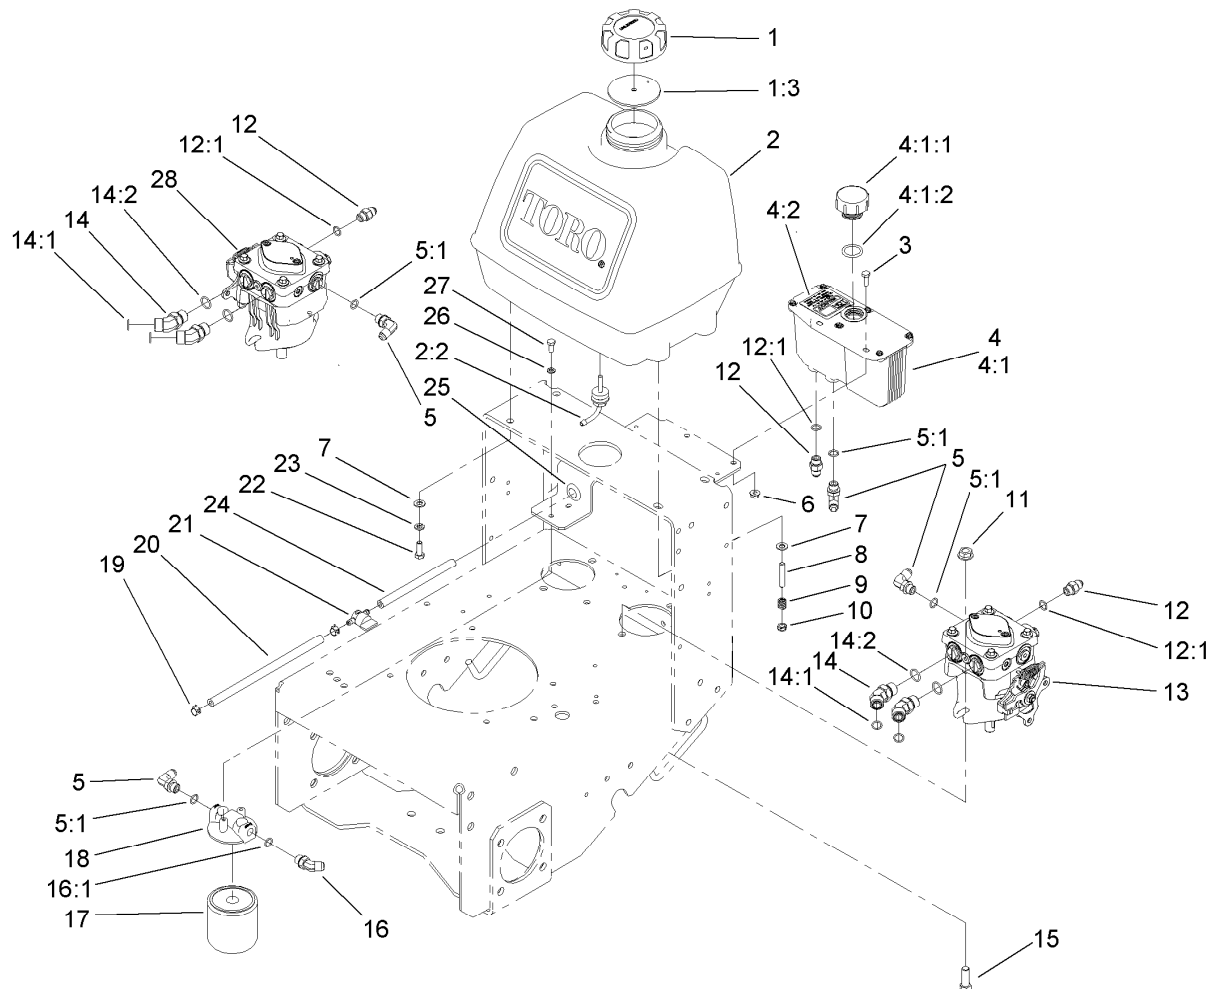


Fuel System, Hydraulic Pump and Filter Assembly

Ref.	Part Number	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
4:1		1	Reservoir-HYD ●
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	4	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	3	Fitting-Straight
12:1	237-42	1	O-Ring

Ref.	Part Number	Qty.	Description
13	114-3400	1	Pump-HYD, Left
14	340-101	4	Fitting-HYD, 45 DEG
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring
15	324-5	4	Screw-HH
16	353-212	1	Fitting-HYD, 45 DEG
16:1	237-42	1	O-Ring
17	1-633750	1	Filter-Oil, HYD
17	1-633752	1	Filter-Oil, HYD (Winter)
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp-Hose
20	110-4894	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	107-0588	1	Hose-Fuel
25	112-7069	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	114-3401	1	Pump-HYD, Right

 ● Not serviced separately

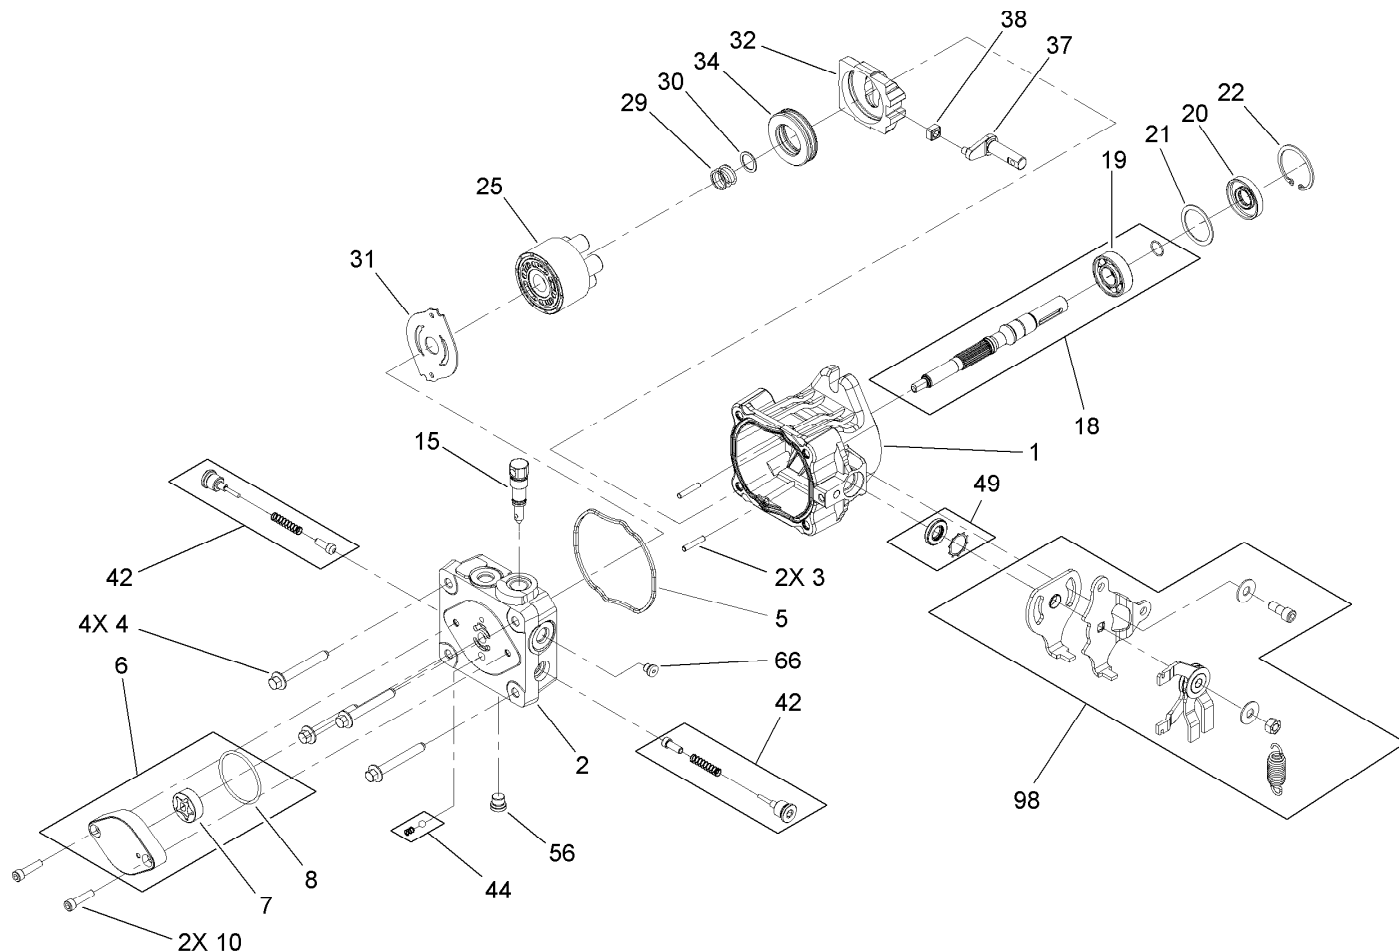


Hydraulic Pump Assembly No. 114-3400 and 114-3401

Ref.	Part Number	Qty.	Description
1	114-0278	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	104-2111	2	Capscrew
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining

Ref.	Part Number	Qty.	Description
25	103-2666	1	Cylinder Block Kit
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	104-2112	1	Trunnion ASM
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
98	114-0277	1	Return Kit
99	105-6184	1	Seal Overhaul Kit ●

 
● Not illustrated

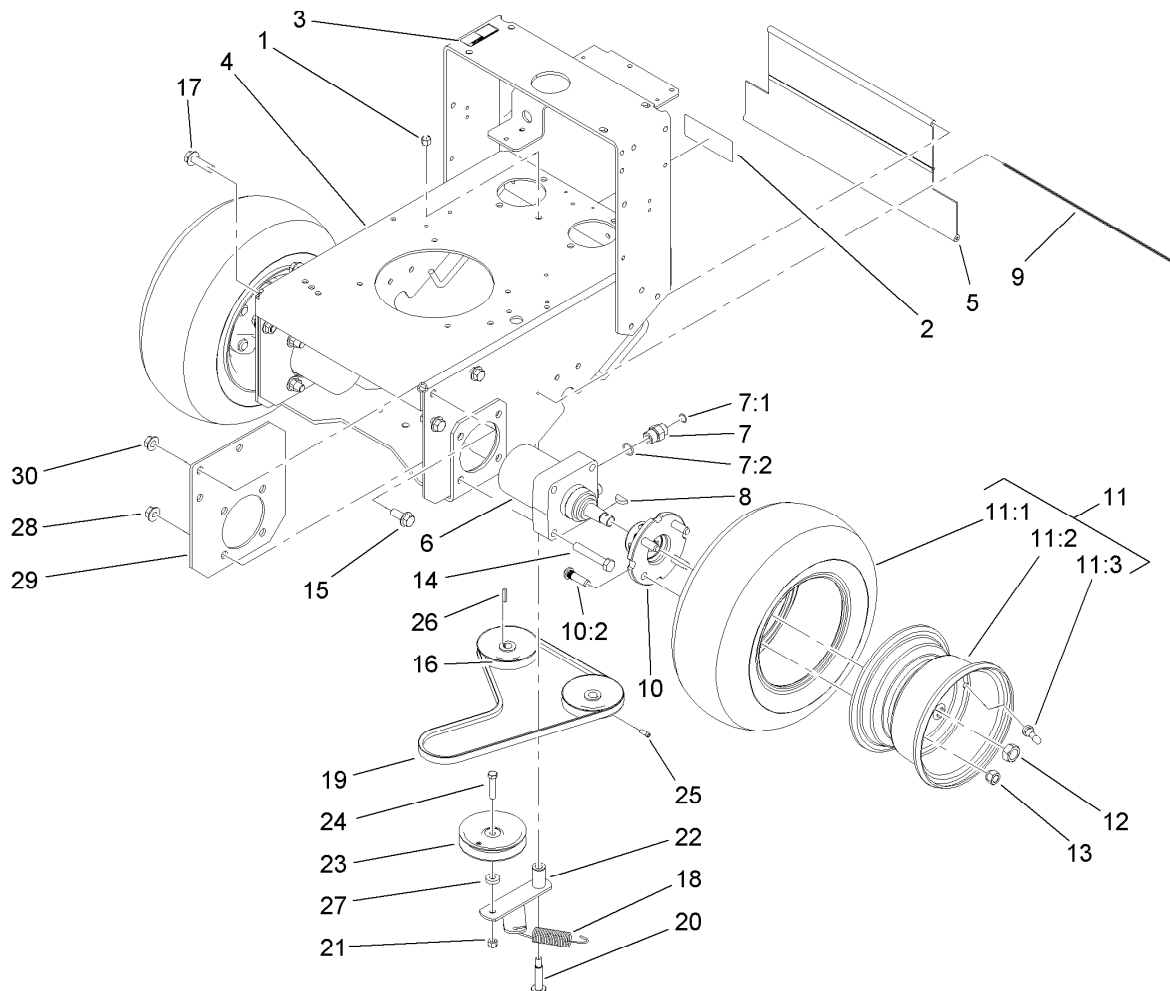

Pump Drive and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	3296-6	1	Nut-Lock
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	114-0222-01	1	Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	HYD Motor ASM
7	340-6	4	Fitting-HYD, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub ASM
10:2	10-6830	4	Stud-Type, Drive
11	104-1198	2	Wheel And Tire ASM
11:1	104-6320	1	Tire
11:2	104-1199	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel


Ref.	Part Number	Qty.	Description
13	242-50	8	Nut-Lug
14	325-12	8	Screw-HH
15	3234-32	4	Screw-HHF
16	105-5648	2	Pulley-Pump
17	3234-22	2	Screw-HHF
18	68-9950	1	Spring-Traction
19	110-5049	1	Belt-V
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	93-1622	1	Pulley-Idler
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	1-807272	2	Key
27	9202204	1	Washer
28	32128-49	8	Nut-HHF
29	108-6657-01	2	Plate-Frame
30	32128-23	6	Nut-HF

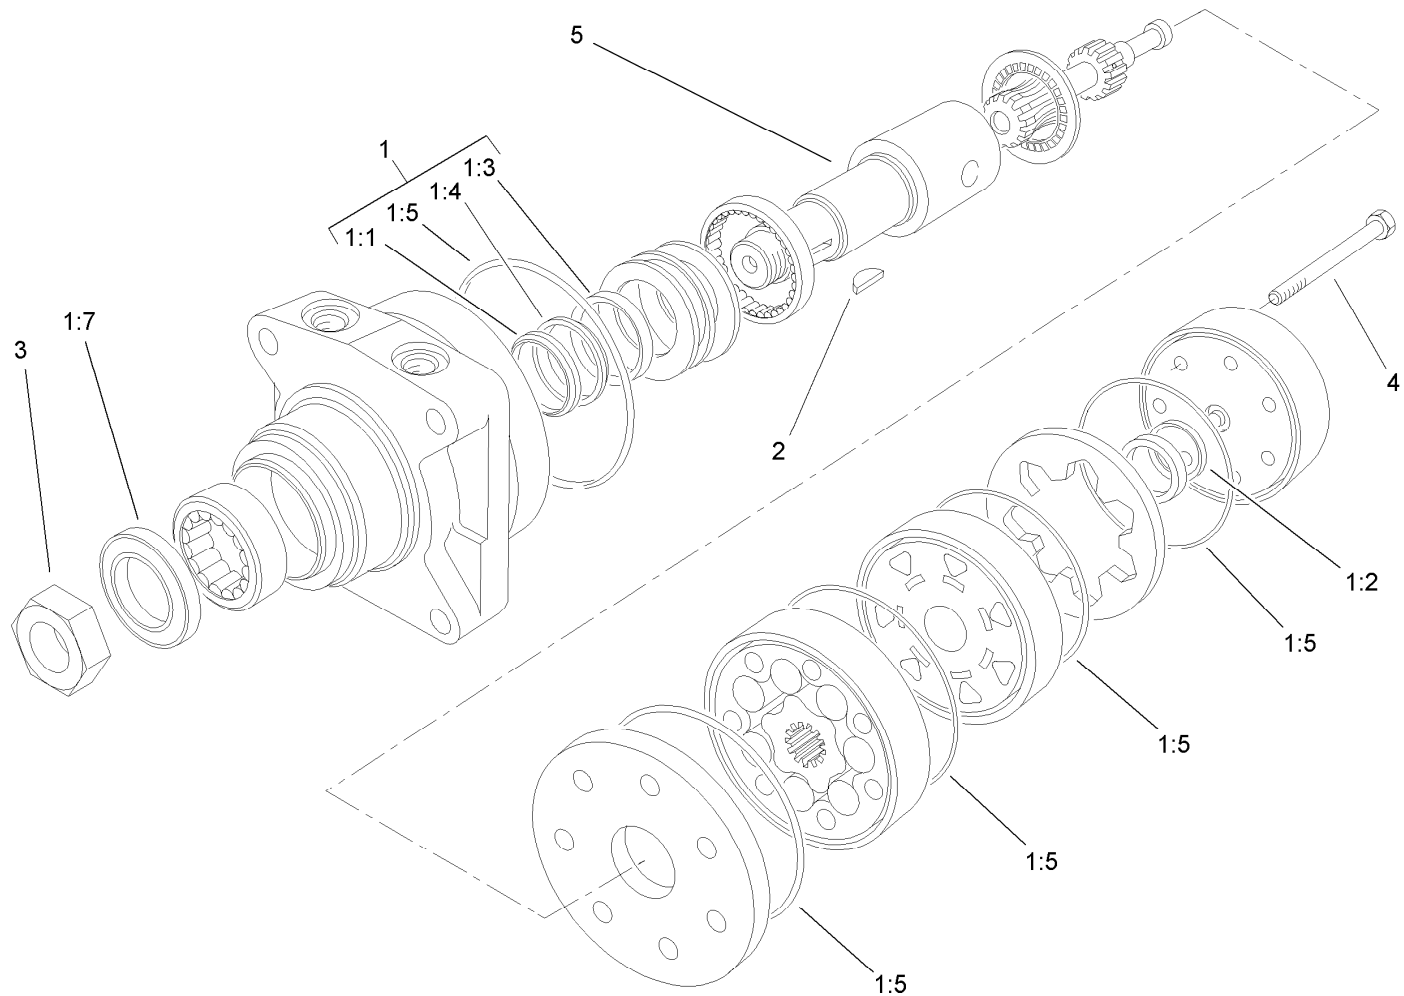 

Hydraulic Wheel Motor Assembly No. 104-1171


Ref.	Part Number	Qty.	Description
1	1-000119	1	Seal Kit
1:1		1	Ring-Back Up ●
1:2		1	Seal-Commutator ●
1:3		1	Seal-Shaft (Viton) ●
1:4		1	Washer-Back Up, Steel ●
1:5		5	Ring-Seal (Viton) ●
1:7		1	Seal-Dirt And Water ●
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

 ● Not serviced separately

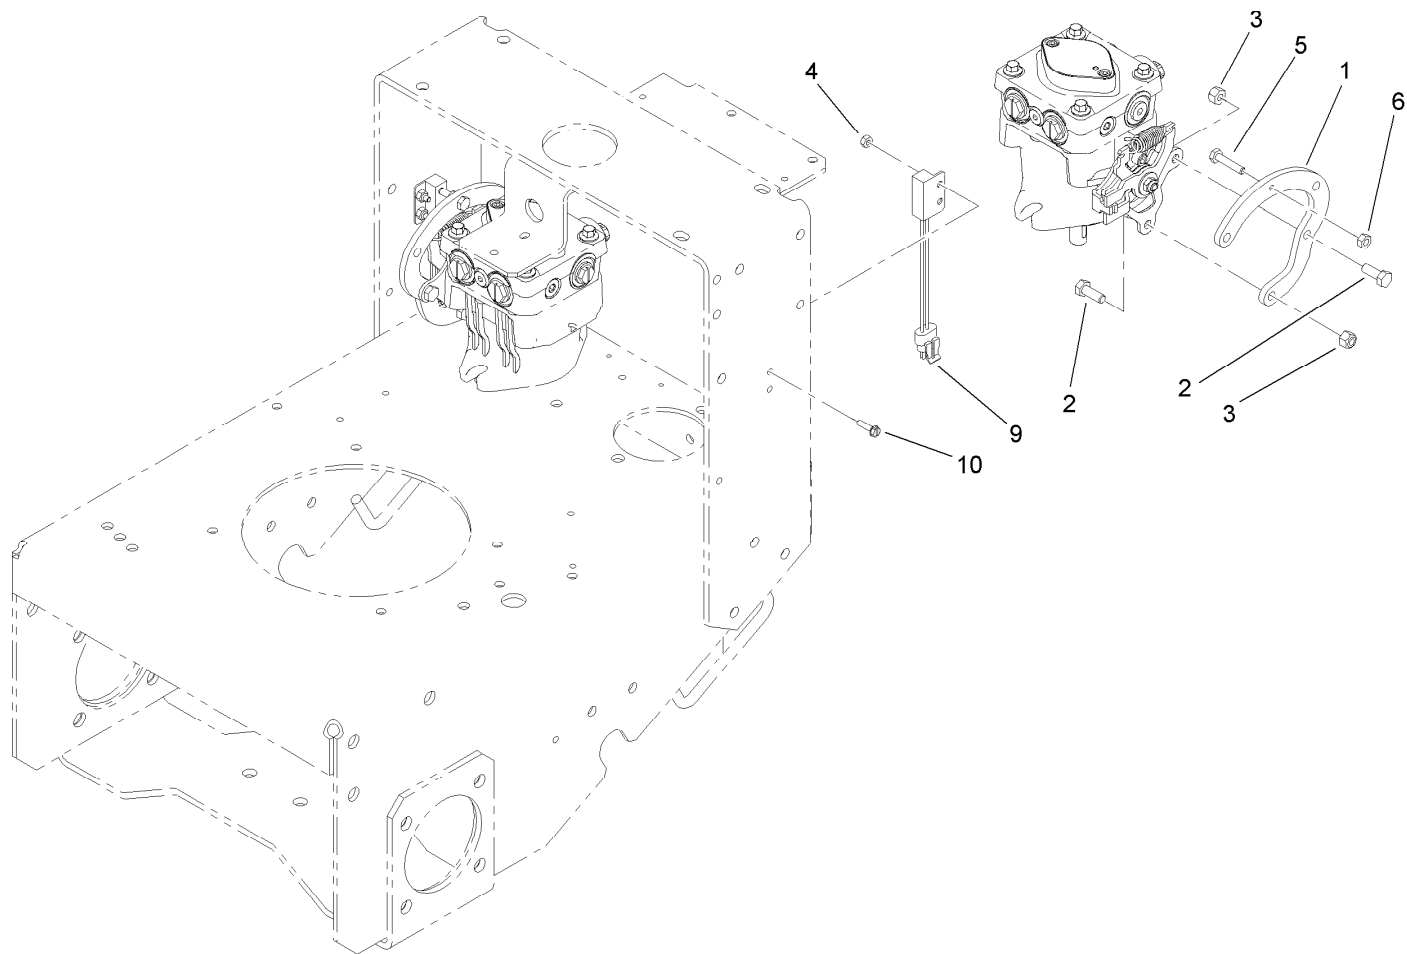


Lower Control Assembly

Ref.	Part Number	Qty.	Description
1	114-0227	2	Bracket-Adapter, Pump
2	322-4	4	Screw-HH
3	3296-29	4	Nut-Lock, NI
4	3296-2	4	Nut-Lock, NI
5	114-0282	2	Screw-HH
6	3217-5	2	Nut-Hex
9	105-0023	2	Switch-Proximity
10	32105-13	4	Screw-HWH

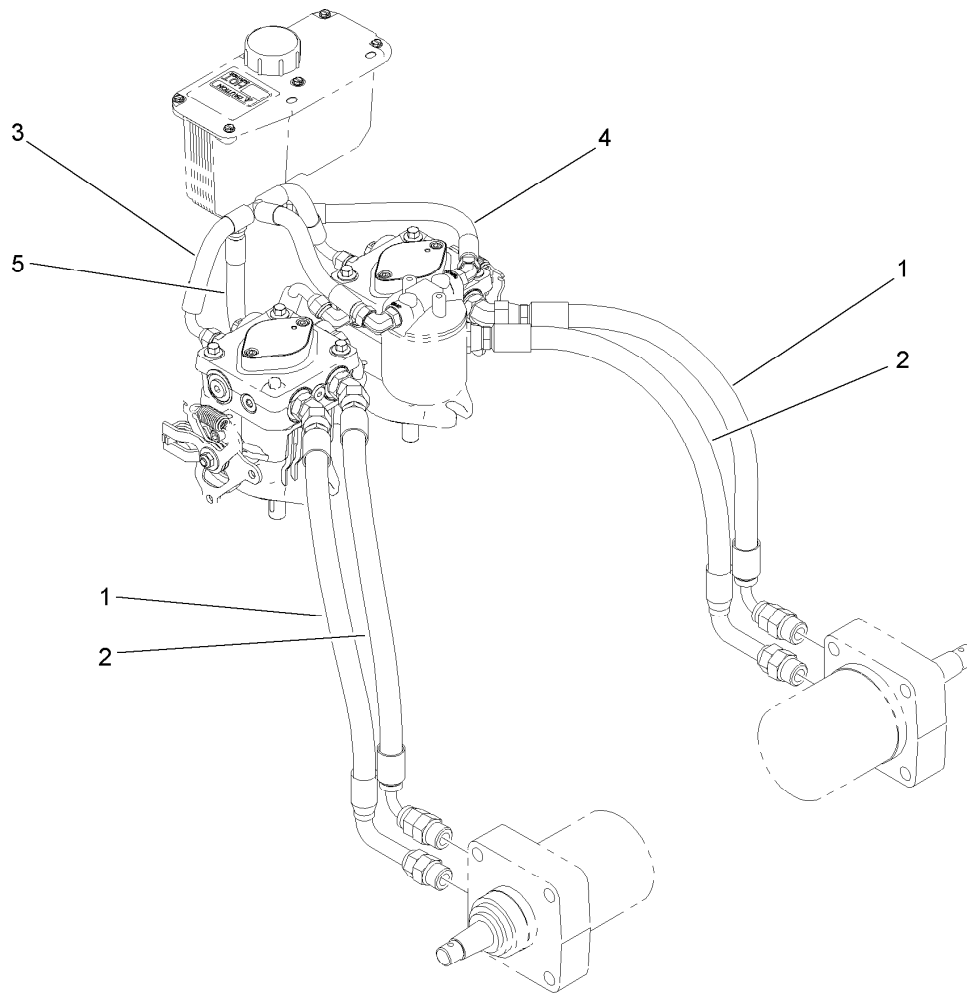 


Hydraulic Hose Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-9704	2	HYD Hose ASM
2	114-3430	2	HYD Hose ASM
3	105-5697	1	HYD Hose ASM
4	105-5699	1	HYD Hose ASM
5	114-3434	1	HYD Hose ASM

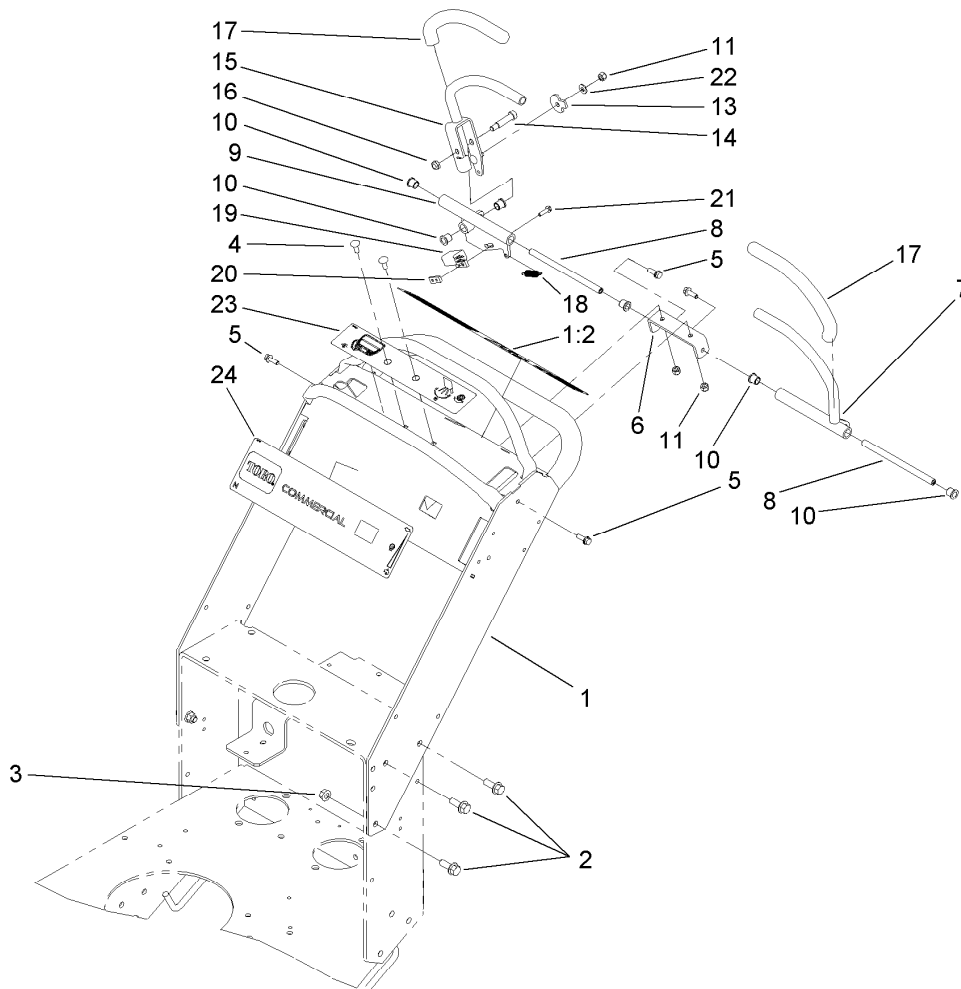 

Upper Control Assembly


Ref.	Part Number	Qty.	Description
1	114-3435	1	Handle ASM
1:2	114-3425	1	Decal-Warning, Control, Es
2	3234-42	6	Screw-HHF
3	32123-43	6	Nut-HF
4	3229-1	2	Bolt-CARR
5	3234-4	4	Screw-HHF
6	114-0235	1	Bracket-Support
7	114-0272	1	Control Lever ASM
8	114-0260	2	Shaft-Pivot
9	114-0234	1	Motion Control ASM
10	103-9928	6	Bearing
11	3296-42	3	Nut-Lock, NI
13	114-0268	1	Cam-Lever
14	114-0239	1	Screw-HSH
15	114-0238	1	Lever ASM
16	3296-47	1	Nut-Lock, NI
17	114-0241	2	Grip-Lever
18	114-0249	1	Spring-Extension
19	1-513152	1	Switch-Closed, Normally
20	1-633181	1	Plate-Tapped
21	32105-13	2	Screw-HWH
22	3256-22	1	Washer-Flat
23	114-3424	1	Decal-Control
24	114-3423	1	Decal-Panel, Control

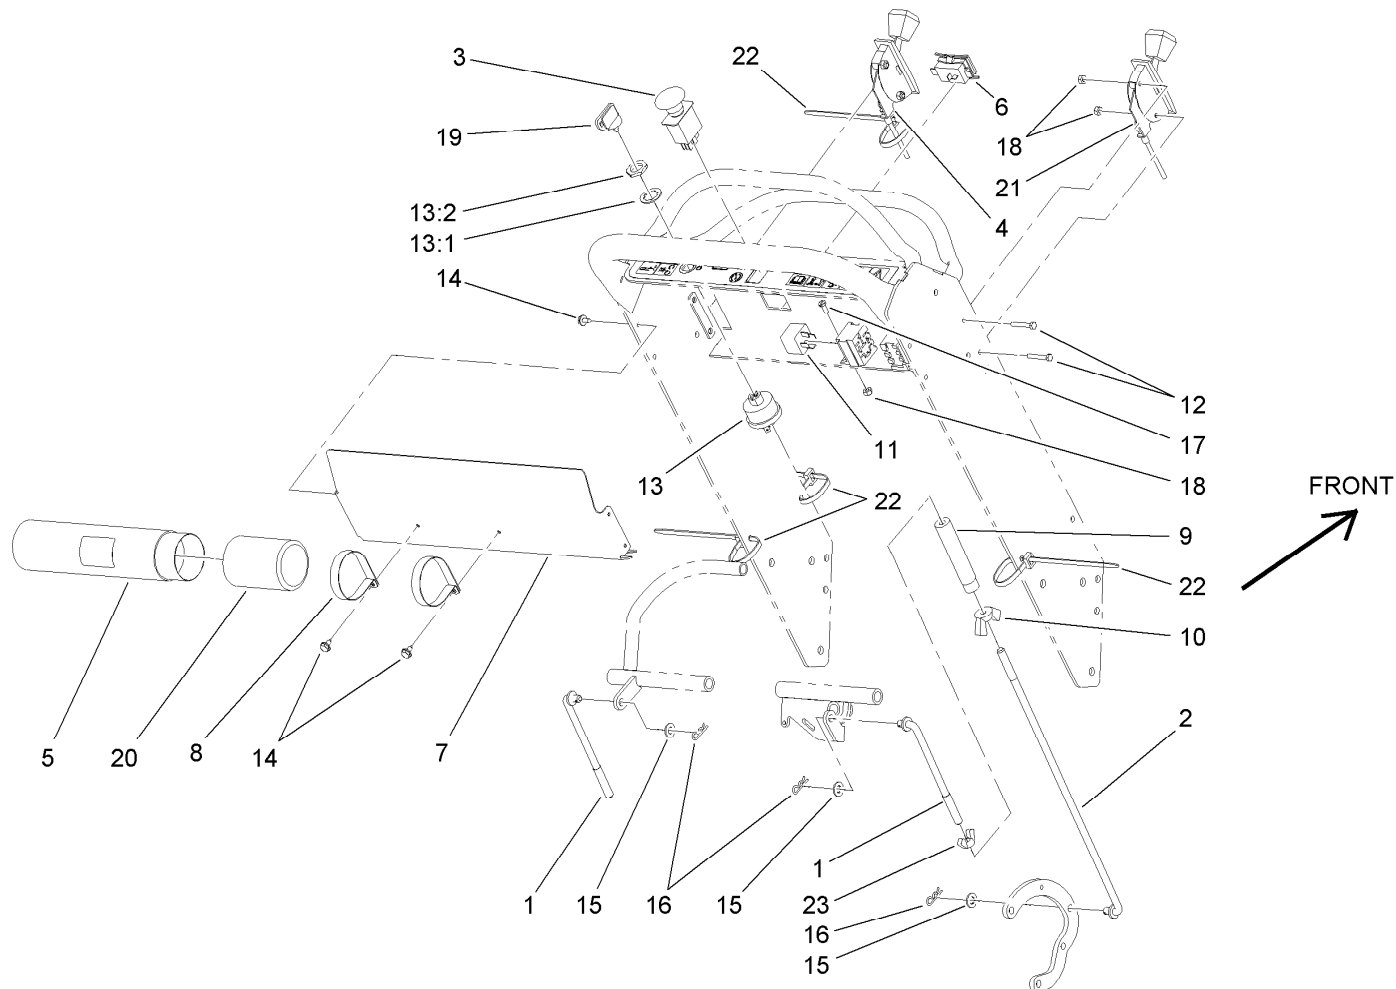 

Control Panel Assembly


Ref.	Part Number	Qty.	Description
1	114-0275	2	Rod-Control, Upper
2	114-0276	2	Rod-Control, Lower
3	114-0279	1	Switch-PTO
4	110-4994	1	Cable-Throttle
5	104-7050	1	Tube-Manual
6	104-8143	1	Hourmeter
7	114-0270-03	1	Cover-Panel, Control
8	2412-120	2	Clamp-R
9	95-1504	2	Turnbuckle
10	32103-3	2	Nut-Wing
11	98-7249	2	Relay
12	3290-360	4	Screw-HH
13	88-9830	1	Key Switch ASM

Ref.	Part Number	Qty.	Description
13:1	3254-5	1	Washer-Tooth, Internal
13:2	218-461	1	Nut-HH
14	32104-76	6	Screw-Thd Cutting,HWH
15	3256-23	4	Washer-Flat
16	3290-307	4	Pin-Hair
17	32105-8	2	Screw-SHH
18	3296-2	6	Nut-Lock, NI
19	63-8360	1	Key-Ignition (W/Shield)
20	104-7048	1	Cap-Housing
21	110-4995	1	Cable-Choke
22	3290-378	4	Tie-Cable
23	114-0281	2	Nut-Wing, LH

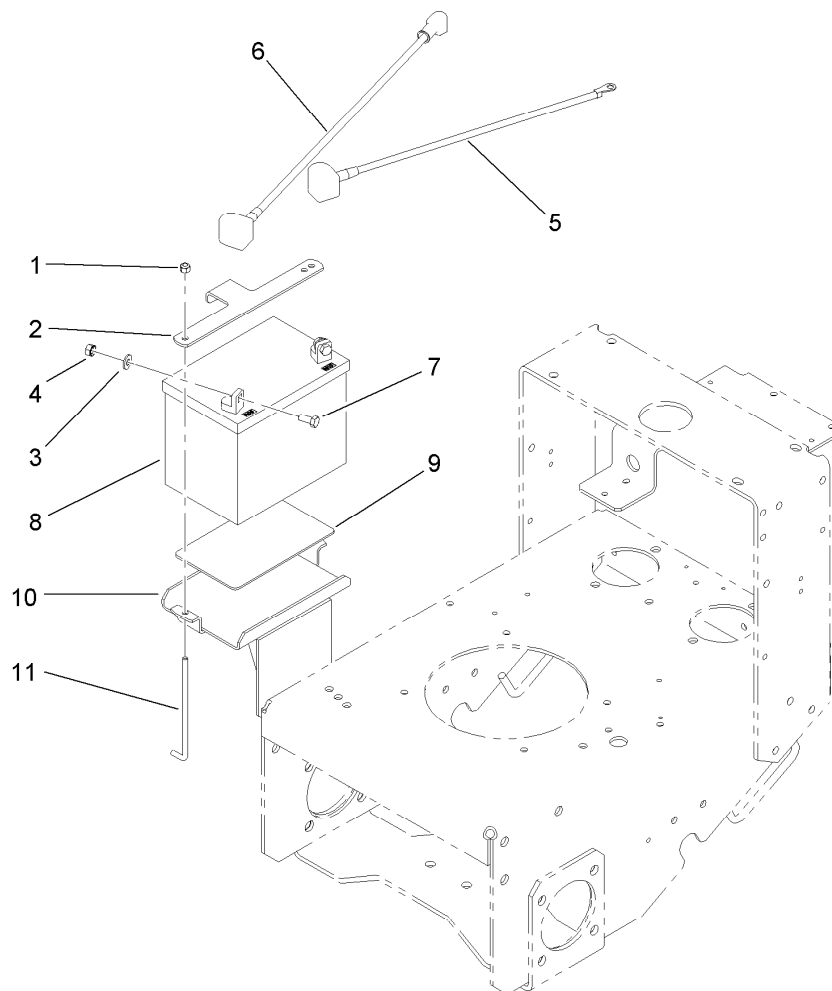 

Battery Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3296-42	2	Nut-Lock, NI
2	104-8568-03	1	Plate-Hold Down, Battery
3	3256-2	2	Washer-Flat
4	32149-1	2	Nut-Keps
5	112-9709	1	Cable-Battery, Black
6	112-9708	1	Cable-Battery, Red
7	322-3	2	Screw-HH
8	104-8162	1	Battery
9	62-4300	1	Pad-Skid, Anti
10	105-3150-01	1	Battery Tray ASM
11	104-8567	2	Holdown-Battery

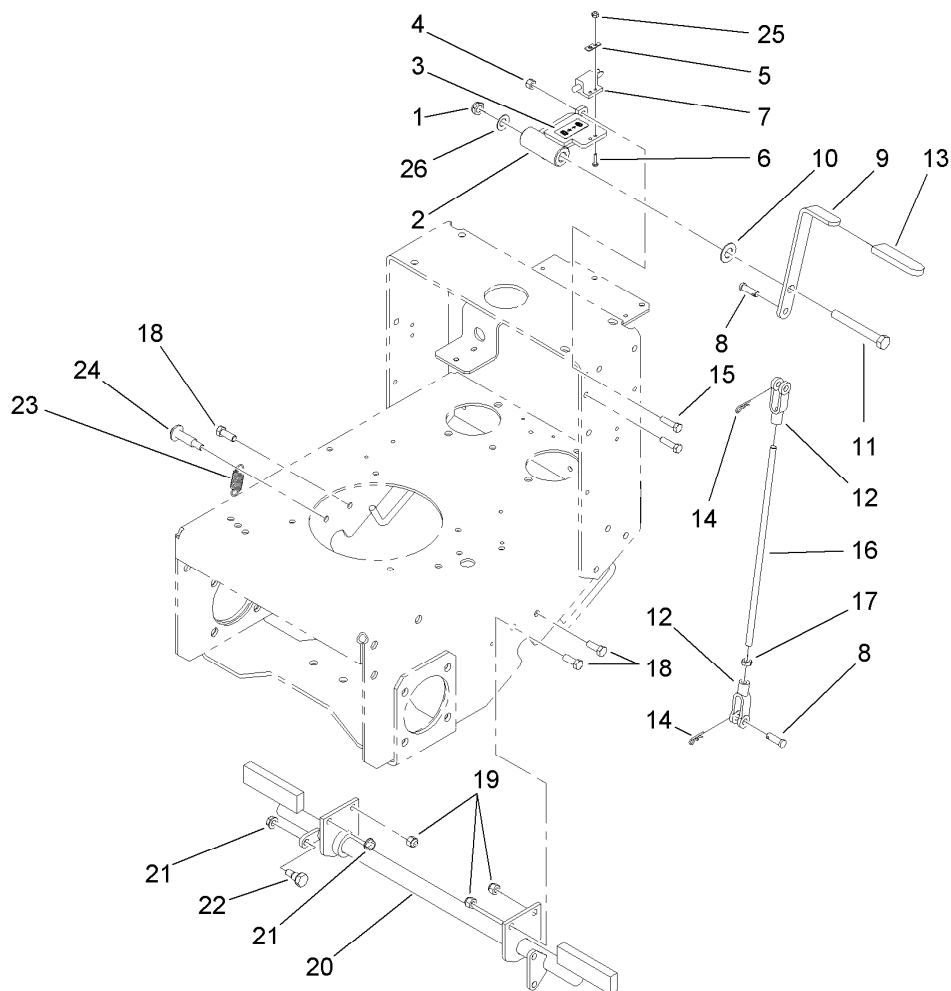 

Parking Brake Assembly


Ref.	Part Number	Qty.	Description
1	3296-45	1	Nut-Lock, NI
2	112-8716-01	1	Support-Handle
3	112-8720	1	Decal-Brake
4	3296-29	2	Nut-Lock, NI
5	82-4570	1	Plate-Switch
6	3250-17	2	Screw-PPH
7	95-1653	1	Switch-Pole, Single
8	1-808285	2	Pin-Clevis
9	106-0671-01	1	Handle-Brake
10	257-7	1	Bearing-Thrust
11	325-17	1	Screw-HH
12	1-633131	2	Yoke-Linkage, Brake
13	1-303020	1	Grip-Lever

Ref.	Part Number	Qty.	Description
14	3290-307	2	Pin-Hair
15	322-6	2	Screw-HH
16	108-2747	1	Rod-Brake
17	3220-3	1	Nut-HJ
18	323-6	3	Screw-HH
19	3296-39	3	Nut-Lock, NI
20	110-4976-01	1	Parking Brake ASM
21	3290-357	2	Nut-HHF, Whiz
22	27-5240	1	Bolt-Shoulder
23	613386	1	Spring-Brake
24	56-6590	1	Bolt-Wheel
25	3296-1	2	Nut-Lock
26	112-9972	1	Washer-Conical, Spring

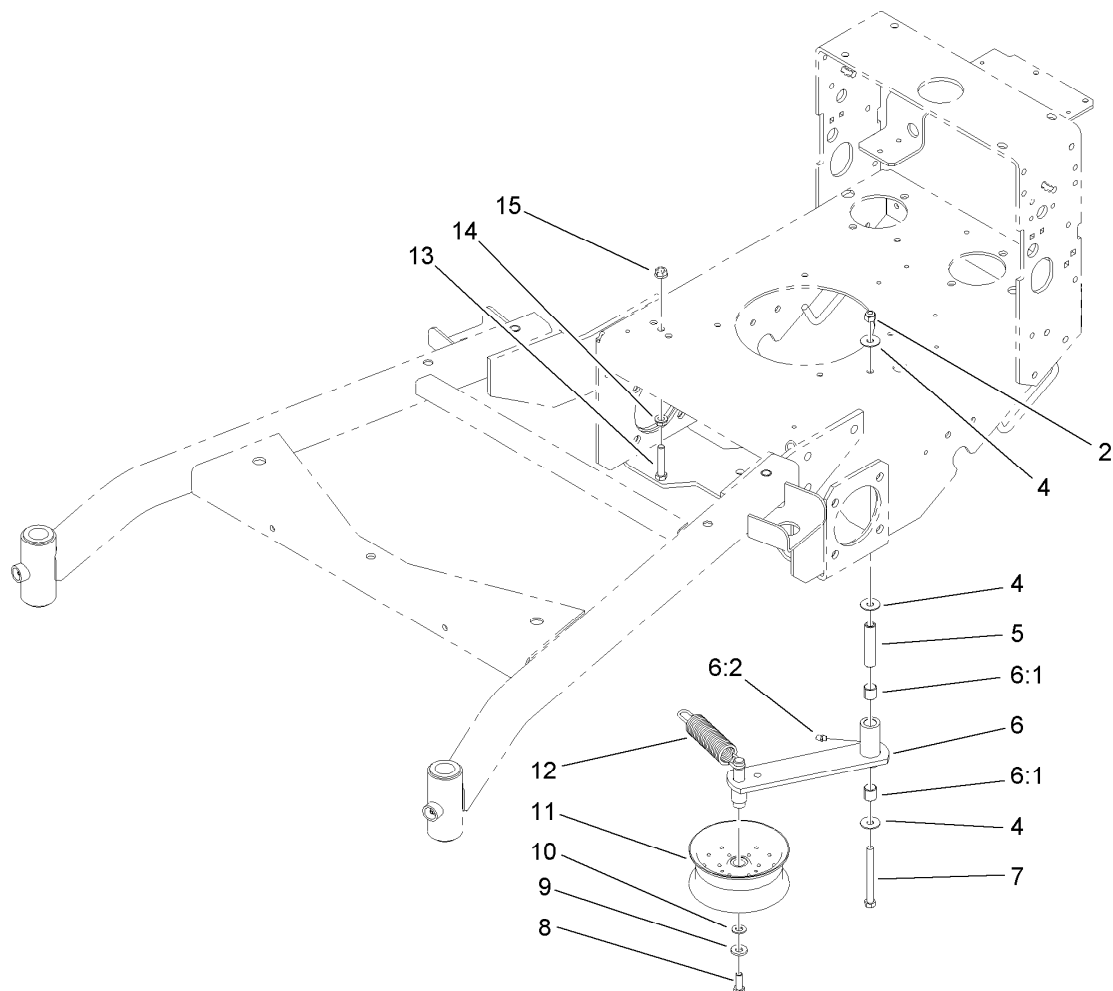 

Power-Take-Off Idler Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	108-2734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension
13	323-10	1	Screw-HH
14	3290-357	1	Nut-HHF, Whiz
15	32128-21	1	Nut-HF

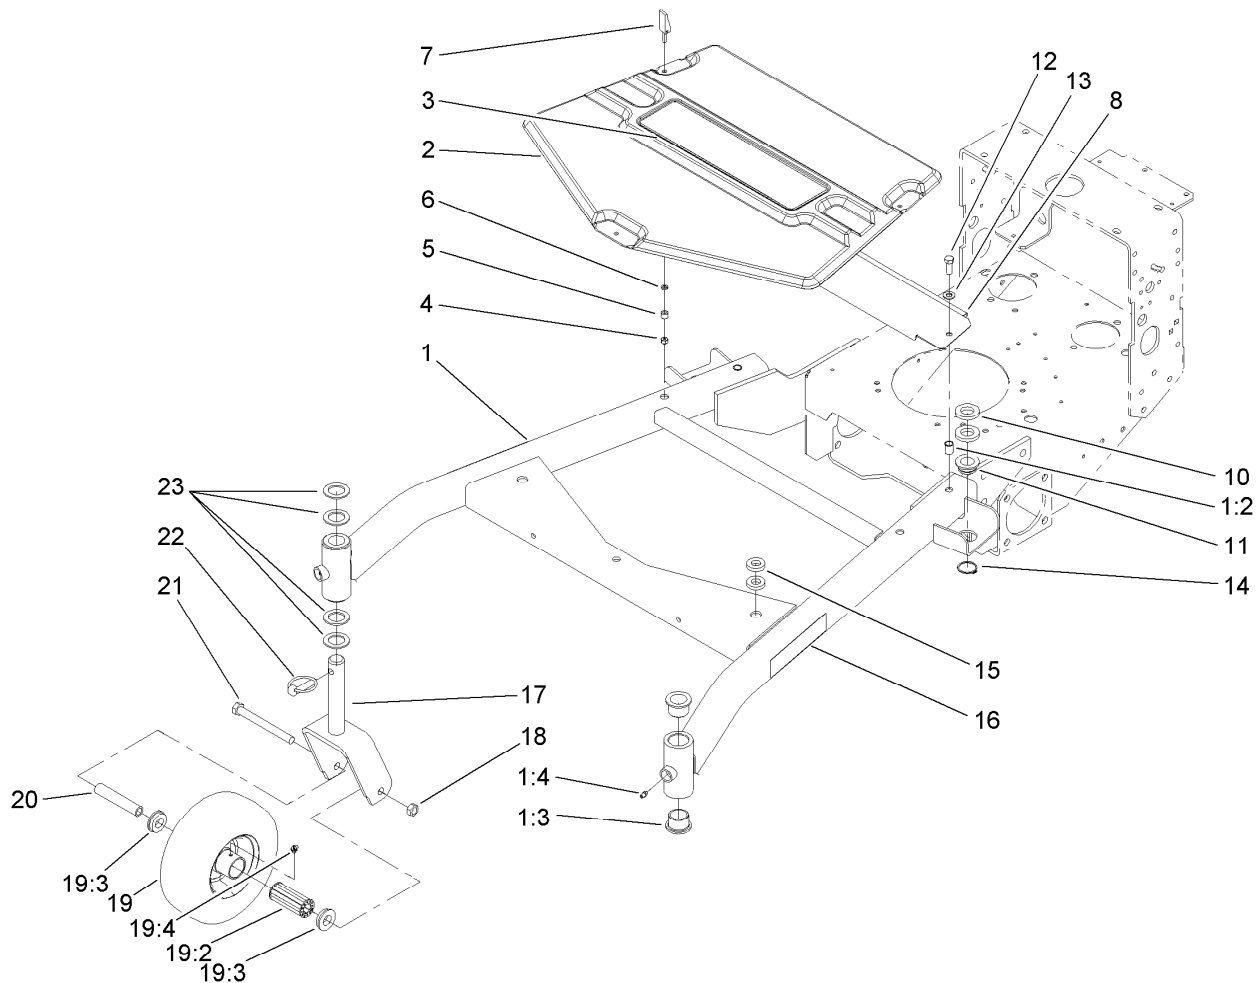 

Carrier Frame Assembly

Ref.	Part Number	Qty.	Description
1	108-2665	1	Carrier Frame ASM
1:2	32148-9	2	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	108-6625	1	Cover-Frame, Carrier
3	112-9712	1	Decal
4	1-804254	3	Nut-Lock, HH
5	106-6778	3	Bushing-Latch, Swell
6	99-3058	3	Washer
7	106-6777	3	Handle-Latch, Swell
8	112-7051-01	1	Shield-Belt
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	323-6	2	Screw-HH


Ref.	Part Number	Qty.	Description
13	3256-24	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	1-323539	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Hex
19	110-5024	2	Wheel And Tire ASM
19:2	112-7066	1	Bearing-Roller
19:3	1-513810	2	Bushing
19:4	302-61	1	Fitting-Grease
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust

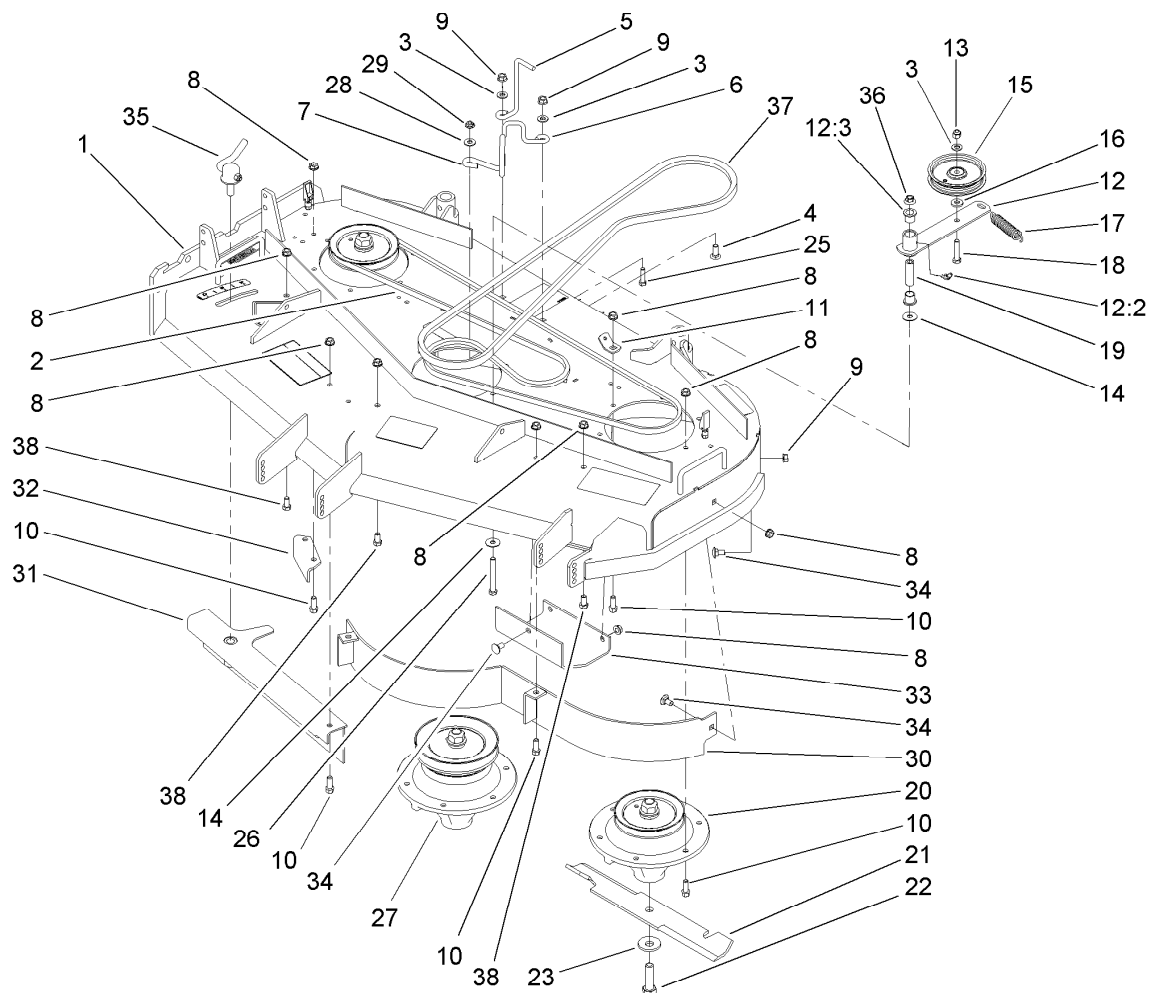 

Deck Drive and Baffle Assembly

Ref.	Part Number	Qty.	Description
1	112-7082	1	Deck ASM
2	108-2716	1	Belt-V
3	3256-24	3	Washer-Flat
4	3231-22	2	Screw-CARR
5	98-5980	1	Guide-Belt
6	110-6975	1	Guide-Belt
7	105-0850	1	Guide-Belt
8	3290-357	29	Nut-HHF, Whiz
9	32128-21	5	Nut-HF
10	92-1624	22	Screw-HWH
11	104-6374	1	Plate-Spring
12	108-2728	1	Idler Arm ASM
12:2	302-11	1	Fitting-Lube, 45 DEG
12:3	256-90	2	Bushing-Flange
13	3296-39	1	Nut-Lock, NI
14	52-2860	2	Washer
15	93-1622	1	Pulley-Idler
16	9202414	1	Washer-Spacer
17	51-3650	1	Spring-Extension
18	323-9	1	Screw-HH


Ref.	Part Number	Qty.	Description
19	112-7091	1	Spacer
20	110-0728	2	Spindle ASM
21	107-3192-03	3	Blade-16.5 Inch (High Flow)
22	51-4060	3	Screw-Blade
23	103-0865	3	Washer-Blade Bolt, Heavy
25	322-6	1	Screw-HH
26	323-14	1	Screw-HH
27	110-0729	1	Spindle ASM
28	3256-3	1	Washer-Flat
29	32128-13	1	Nut-HHF
30	110-0735-03	1	Baffle ASM
31	108-6698-03	1	Adjustable Baffle ASM
32	110-0744-01	1	Baffle-Discharge
33	107-3166-01	1	Skid
34	3231-1	7	Screw-CARR
35	107-1664	1	Lever ASM
36	32128-19	1	Nut-HF
37	108-2715	1	Belt-V
38	323-4	3	Screw-HH

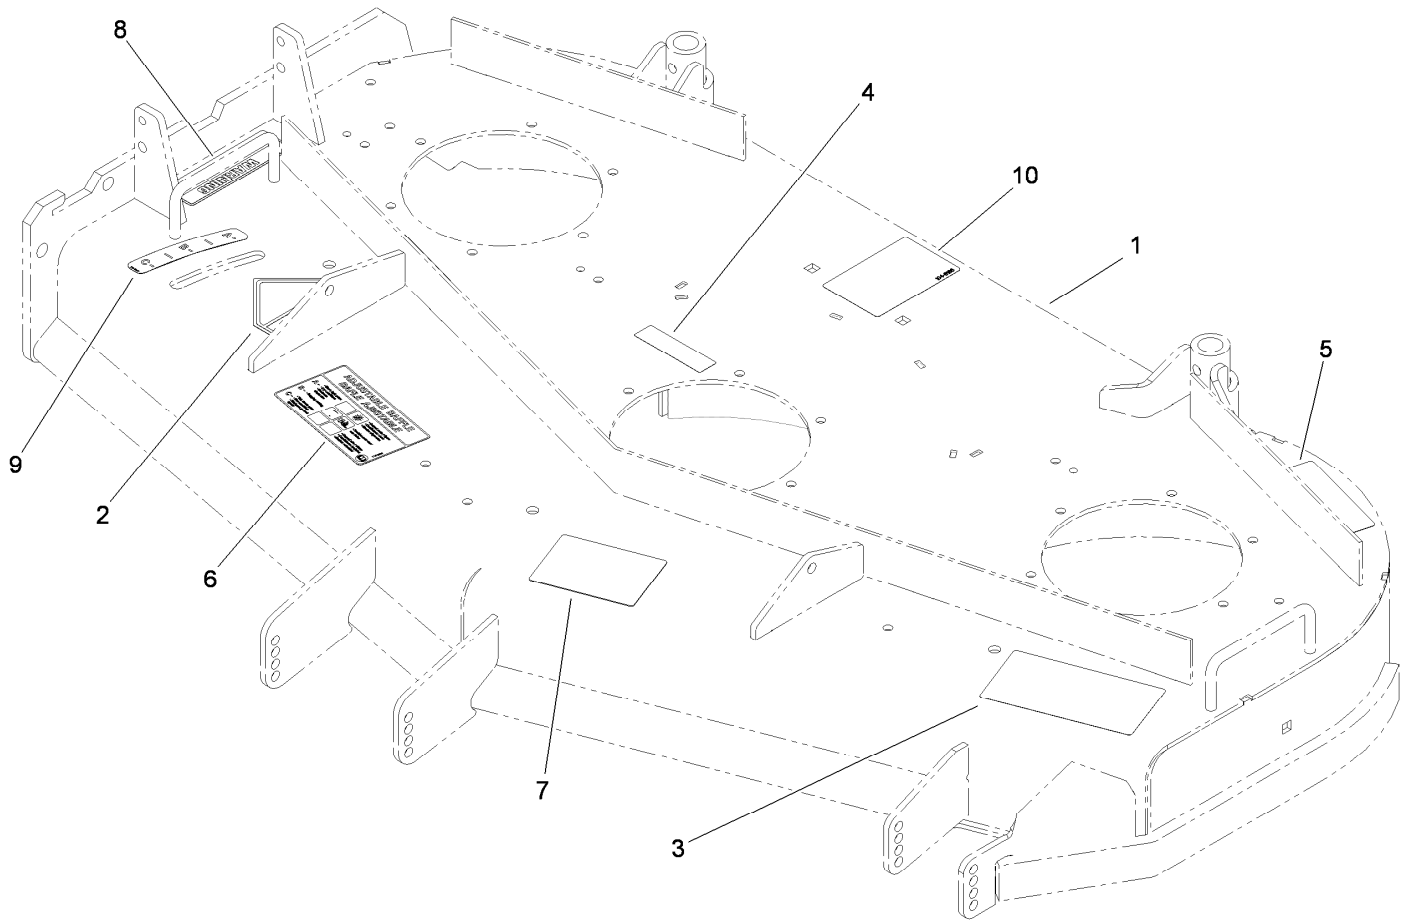 

Deck Assembly No. 112-7082


Ref.	Part Number	Qty.	Description
1		1	48 Inch Deck ASM ●
2	43-8480	1	Decal-Danger
3	66-1340	1	Decal-Danger, Thrown Object
4	98-5954	3	Decal-Cover, Missing
5	68-8340	1	Decal-Torque
6	110-2068	1	Decal-Adjustment, Baffle
7	105-7798	1	Decal-Scalp, Anti
8	104-8569	1	Decal-Warning
9	110-2067	1	Decal-Setting, Baffle
10	104-8186	1	Decal-Routing, Belt

 ● Not serviced separately

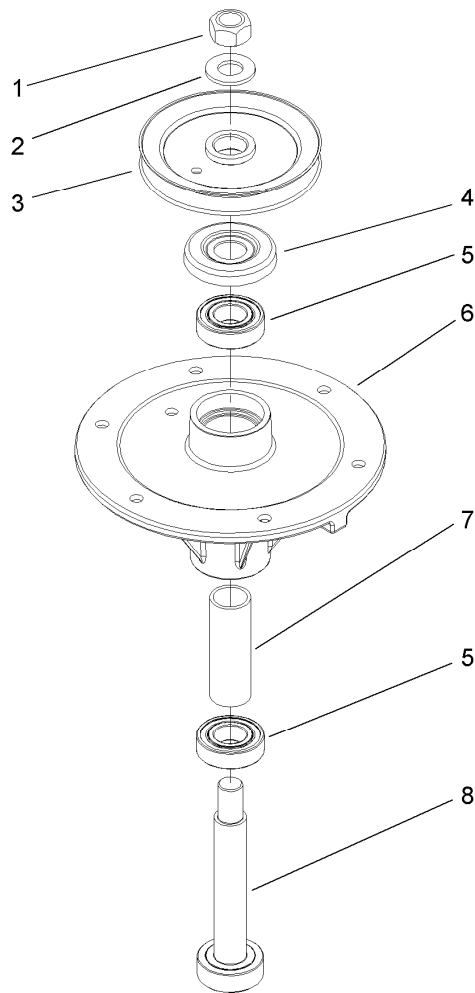


Spindle Assembly No. 110-0728

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle

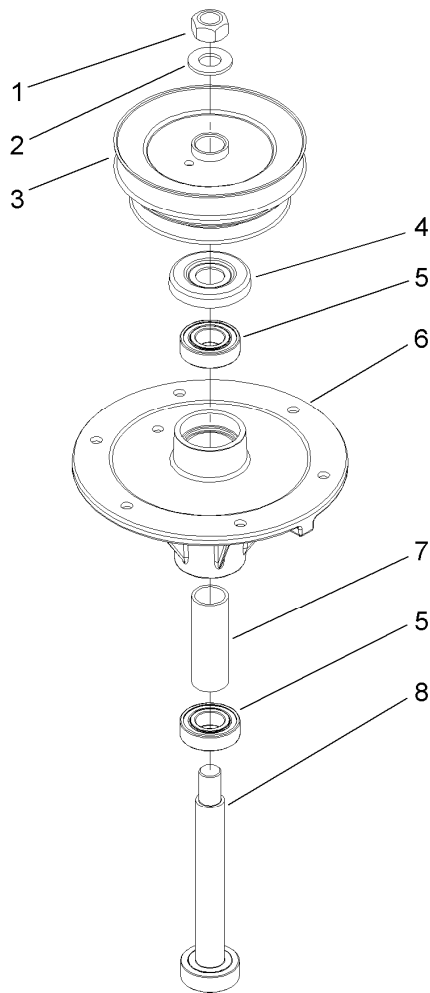 


Spindle Assembly No. 110-0729

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	108-2713	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0725	1	Shaft-Spindle

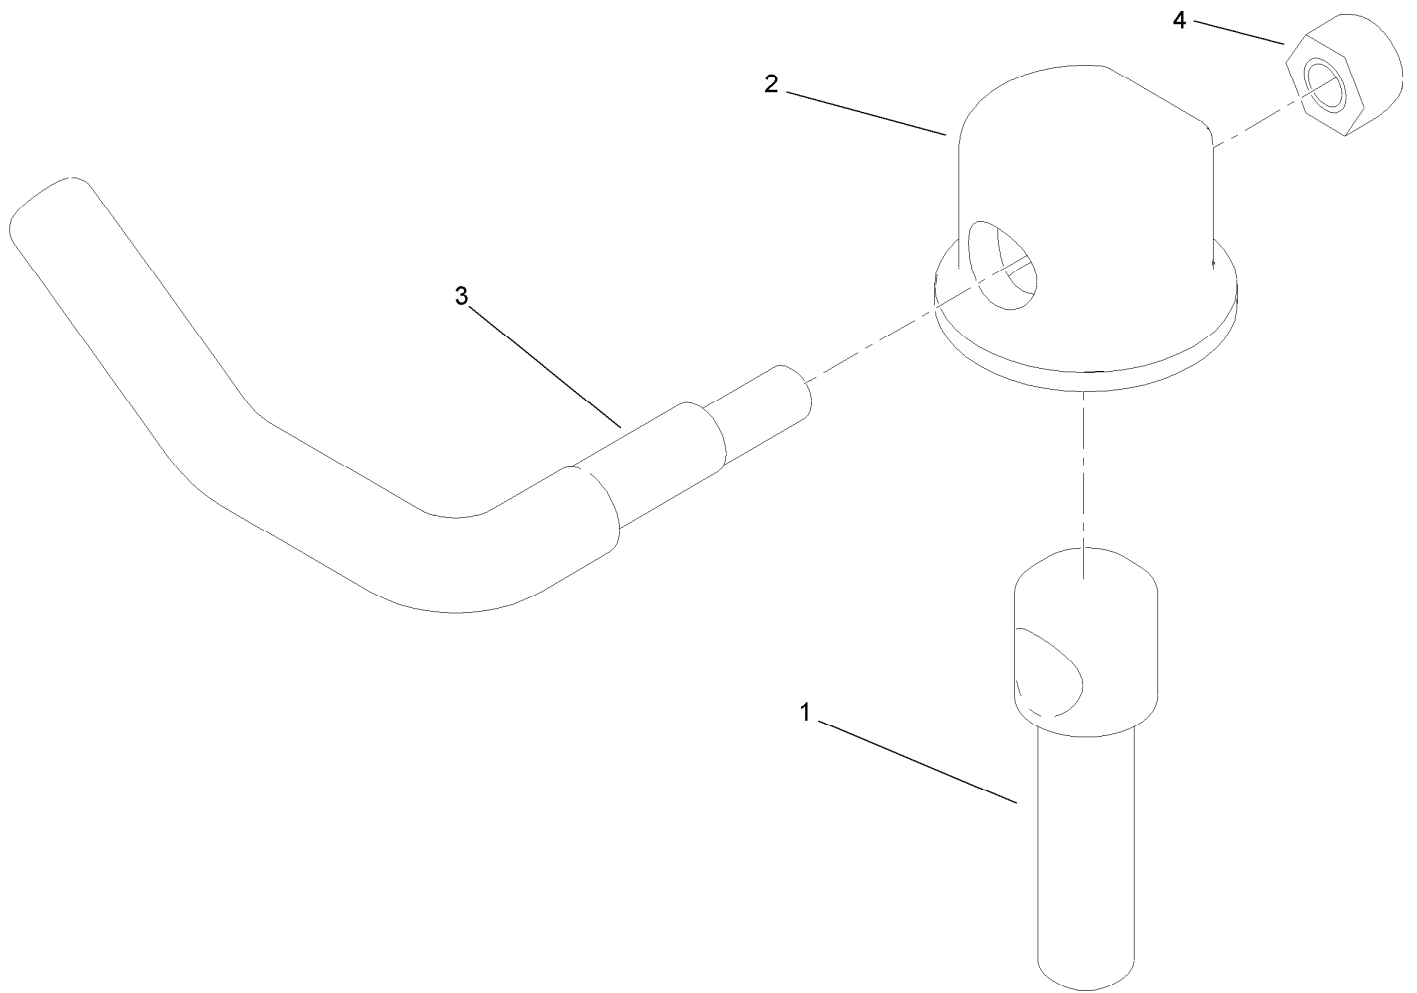 

Lever Assembly No. 107-1664


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

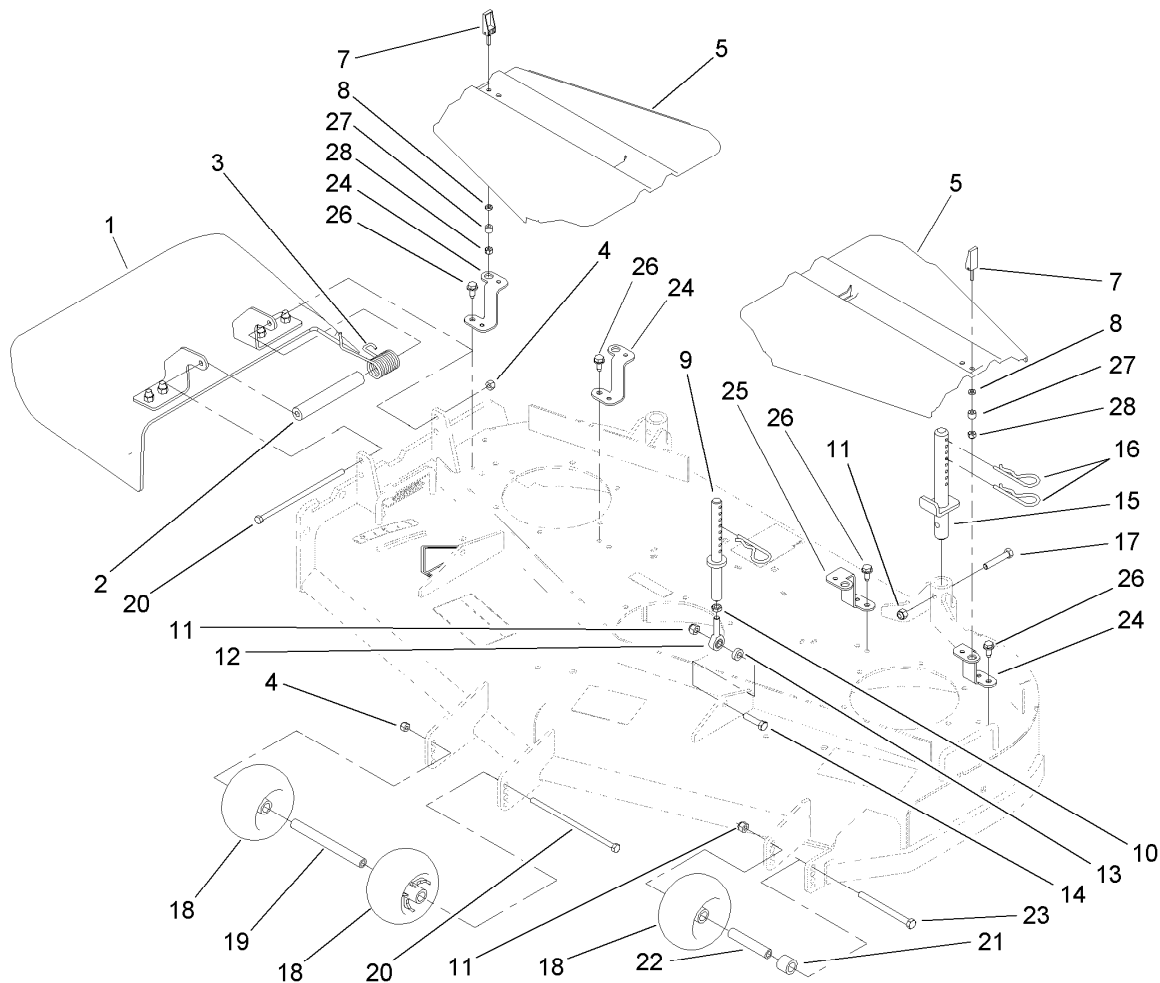 

Deck Assembly


Ref.	Part Number	Qty.	Description
1	110-0758	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	107-8536	2	Cover-Belt
7	106-6777	2	Handle-Latch, Swell
8	99-3058	2	Washer
9	108-2674	2	Front Pin ASM
10	3220-3	2	Nut-HJ
11	3296-39	5	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	110-2086	2	Rear Pin ASM

Ref.	Part Number	Qty.	Description
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	1-603299	3	Roller-Scalp, Anti
19	98-5967	1	Spacer-Wheel
20	322-50	2	Screw-HH
21	98-7913	1	Tube-Spacer
22	98-7912	1	Tube-Spanner
23	323-23	1	Screw-HH
24	108-2698-01	3	Bracket-Cover
25	108-2699-01	1	Bracket-Cover
26	32144-70	4	Screw-HWHTF
27	106-6778	2	Bushing-Latch, Swell
28	1-804254	2	Nut-Lock, HH

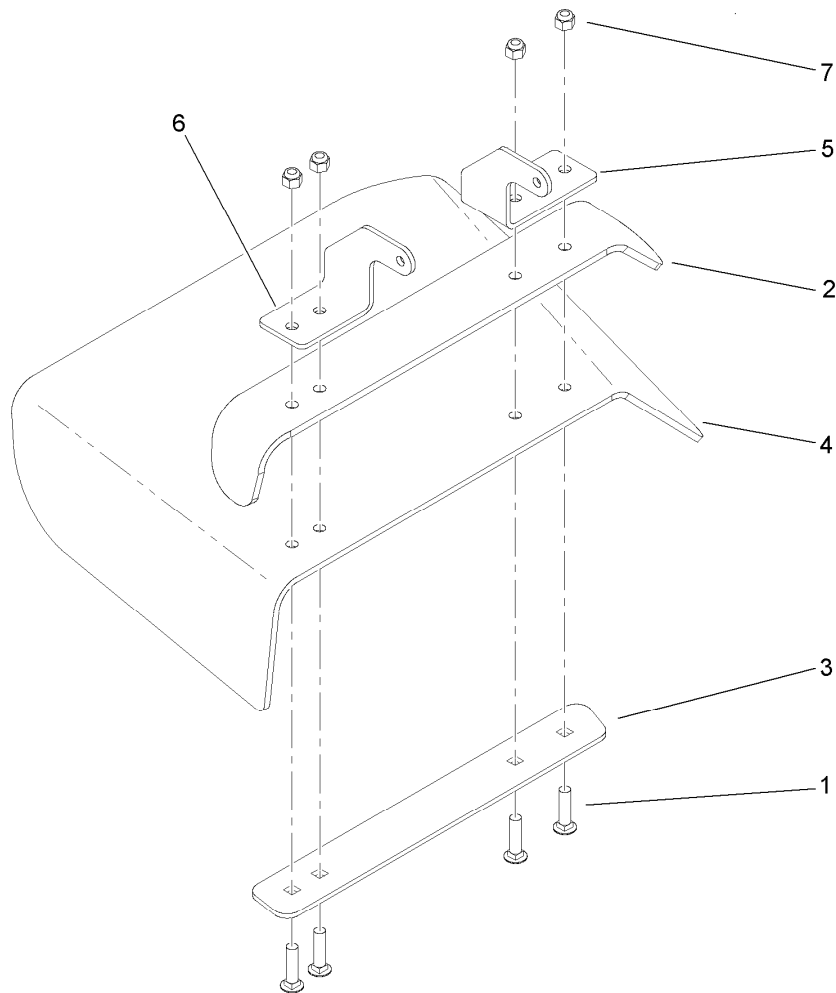 

Deflector Assembly No. 110-0758


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

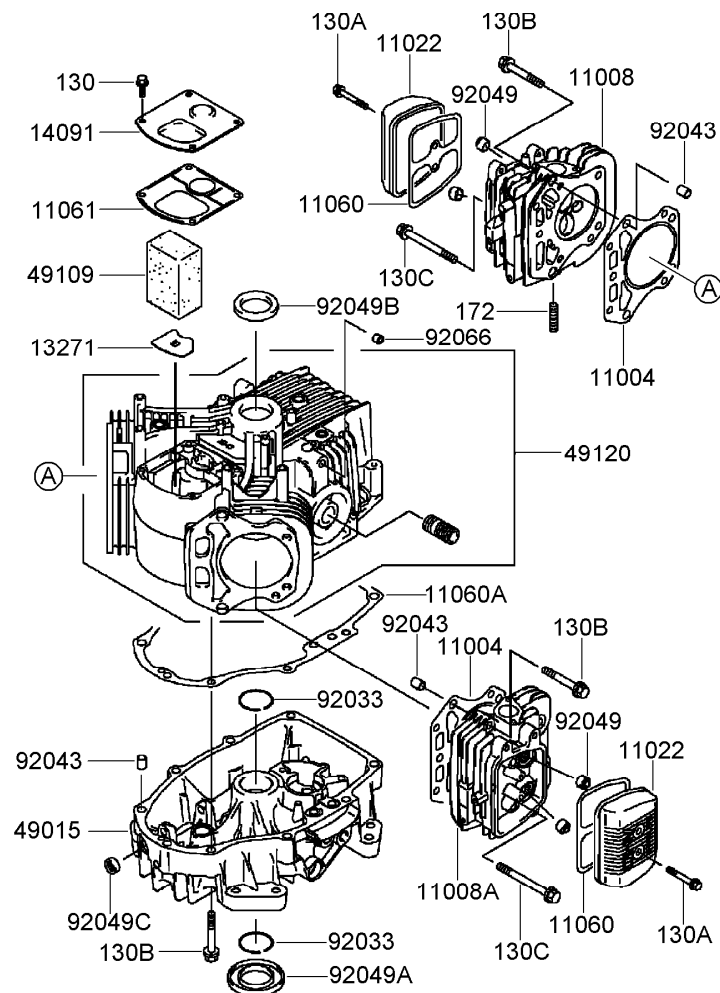 

Cylinder and Crankcase Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
11004	11004-7016	2	Gasket-Head ●
11008	11008-6043	1	Head-Cylinder, No. 1 ●
11008A	11008-7020	1	Head-Cylinder, No. 2 ●
11022	11022-7003	2	Case-Rocker ●
11060	11060-7001	2	Gasket-Case, Rocker ●
11060A	11060-7008	1	Gasket-Cover, Crankcase ●
11061	11061-7001	1	Gasket-Breather ●
13271	13271-7016	1	Plate ●
14091	14091-7006	1	Cover ●
49015	49015-6253	1	Cover-Crankcase ●
49109	49109-7002	1	Element-Breather ●
49120	49120-7023	1	Crankcase ●
92033	92033-7003	2	Ring-Snap ●
92043	92043-7001	6	Pin ●
92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2) ●
92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH) ●
92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH) ●
92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH) ●
92066	92066-7002	1	Plug ●
130	130B0612	4	Bolt-Flanged (6X12) ●
130A	130B0640	4	Bolt-Flanged (6X40) ●
130B	130T0850	17	Bolt-Flanged (8X50) ●

 
● Obtain parts from www.kawpowerepc.com

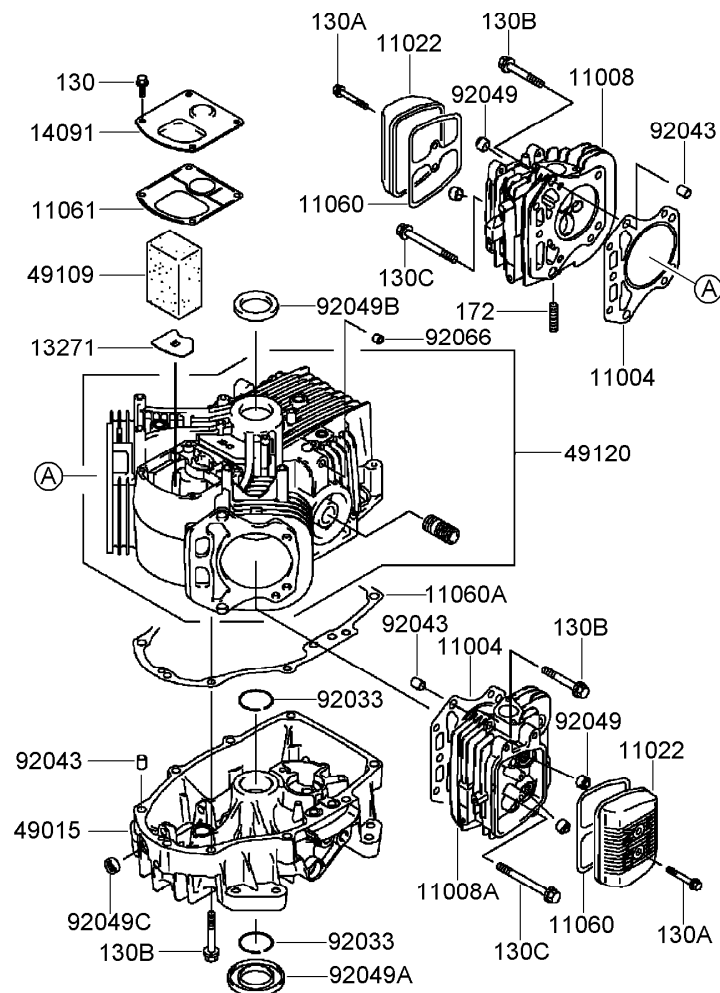

Cylinder and Crankcase Assembly Kawasaki FH580V-DS28 (continued)

Ref.	Part Number	Qty.	Description
130C	130T0875	2	Bolt-Flanged (8X75) ●
172	172G0818	4	Bolt-Stud (8X18) ●

 
● Obtain parts from www.kawpowerepc.com

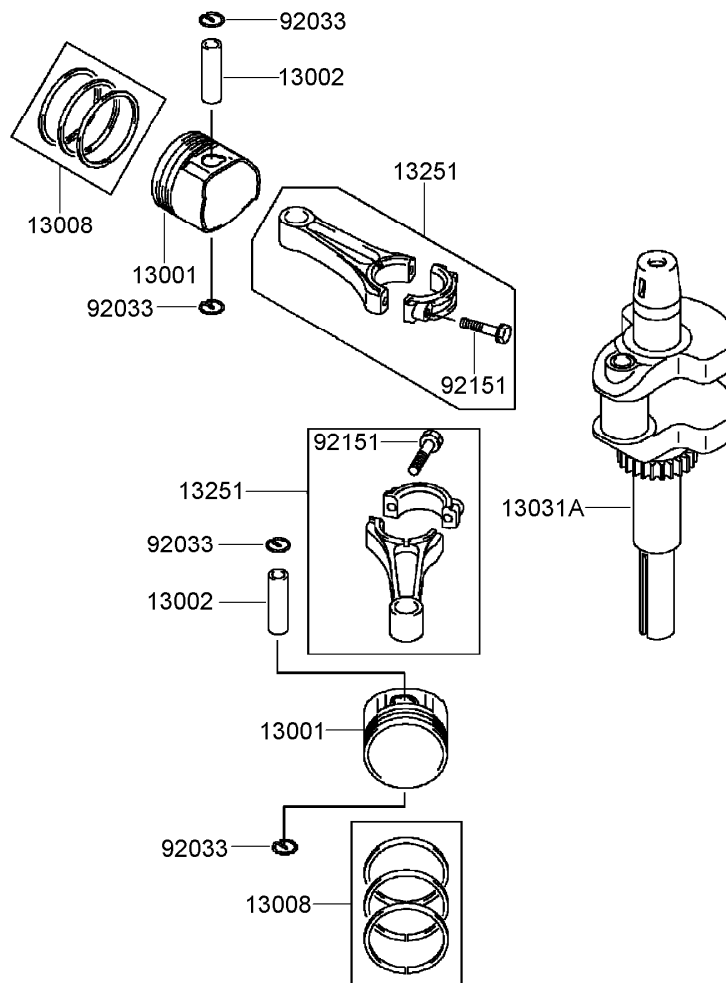

Piston and Crankshaft Assembly Kawasaki FH580V-DS28

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13001	13001-7010	2	Piston-Engine ●
13002	13002-7001	2	Pin-Piston ●
13008	13008-6060	2	Piston Ring Set ●
13031A	13031-7073	1	Crankshaft ●
13251	13251-7010	2	Connecting Rod ASM ●
92033	92033-7005	4	Ring-Snap ●
92151	92151-7017	4	Bolt (6X35) ●

 
● Obtain parts from www.kawpowerepc.com

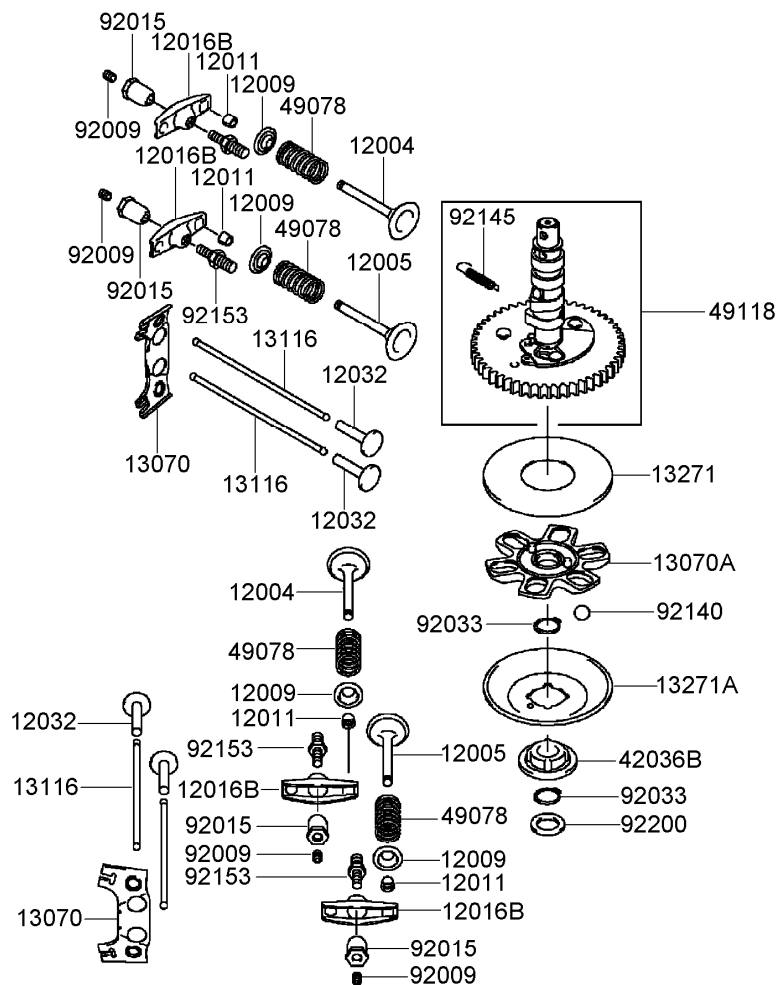

Valve and Camshaft Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
12004	12004-7003	2	Valve-Intake ●
12005	12005-7003	2	Valve-Exhaust ●
12009	12009-7001	4	Retainer-Spring, Valve ●
12011	12011-2056	8	Collet ●
12016B	12016-7008	4	Arm-Rocker ●
12032	12032-7001	4	Tappet ●
13070	13070-7001	2	Guide ●
13070A	13070-7004	1	Guide ●
13116	13116-2057	4	Rod-Push ●
13271	13271-7007	1	Plate ●
13271A	13271-7021	1	Plate-Governor ●
42036B	42036-7010	1	Sleeve ●
49078	49078-7001	4	Spring-Valve, Engine ●
49118	49118-7004	1	Camshaft ●
92009	92009-2341	4	Screw ●
92015	92015-2253	4	Nut ●
92033	92033-7001	2	Ring-Snap ●
92140	92140-7002	6	Ball ●
92145	92145-7001	1	Spring ●
92153	92153-7019	4	Bolt ●
92200	92200-7001	1	Washer ●

 
● Obtain parts from www.kawpowerepc.com

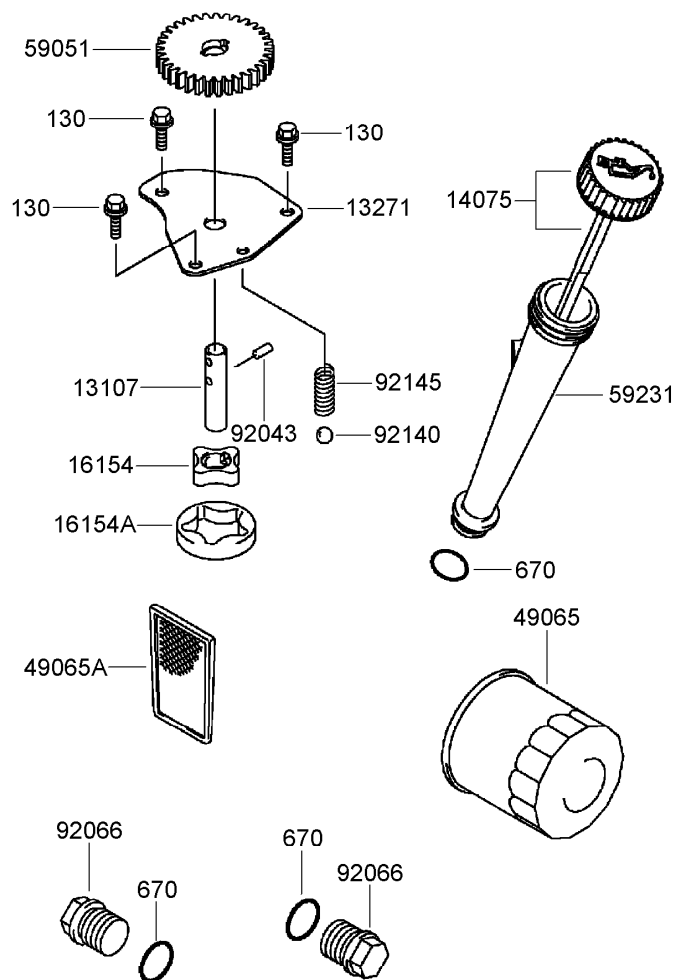

Lubrication Equipment Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
13107	13107-7009	1	Shaft ●
13271	13271-7017	1	Plate ●
14075	14075-7009	1	Cap ASM ●
16154	16154-2053	1	Rotor-Pump (In) ●
16154A	16154-2054	1	Rotor-Pump (Out) ●
49065	49065-2078	1	Filter-Oil ●
49065A	49065-7004	1	Filter-Oil ●
59051	59051-7011	1	Gear-Spur ●
59231	59231-7005	1	Filler ●
92043	92043-7003	2	Pin ●
92066	92066-7003	2	Plug ●
92140	92140-7003	1	Ball ●
92145	92145-7002	1	Spring ●
130	130B0612	3	Bolt-Flanged (6X12) ●
670	670D2016	3	O-Ring (16Mm) ●

 
● Obtain parts from www.kawpowerepc.com

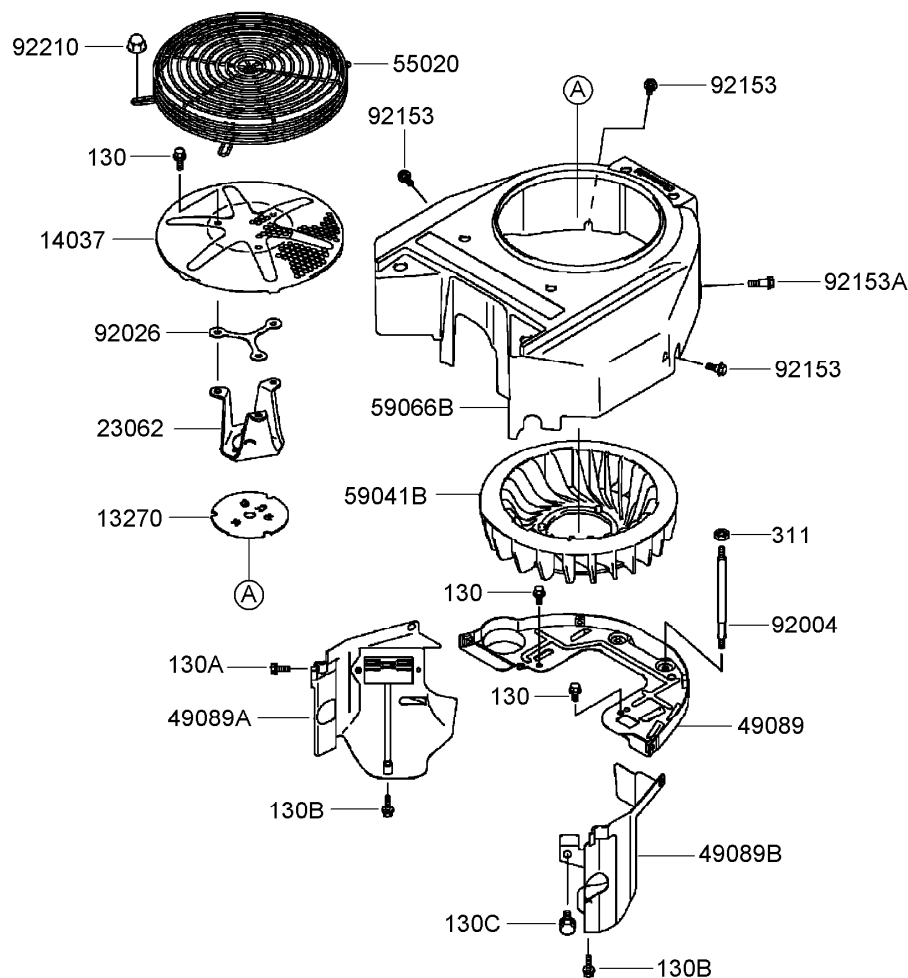

Cooling Equipment Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
13270	13270-7007	1	Plate ●
14037	14037-7020-9H	1	Screen ●
23062	23062-7010	1	Bracket ●
49089	49089-7032	1	Shroud-Engine ●
49089A	49089-7042	1	Shroud-Engine ●
49089B	49089-7043	1	Shroud-Engine ●
55020	55020-7004	1	Guard ●
59041B	59041-7012	1	Fan ●
59066B	59066-7037	1	Housing-Fan ●
92004	92004-7006	2	Stud ●
92026	92026-7007	1	Spacer ●
92153	92153-7007	3	Bolt ●
92153A	92153-7008	1	Bolt ●
92210	92210-0003	4	Nut ●
130	130B0612	5	Bolt-Flanged (6X12) ●
130A	130B0616	2	Bolt-Flanged (6X16) ●
130B	130B0625	2	Bolt-Flanged (6X25) ●
130C	130B0816	1	Bolt-Flanged (8X16) ●
311	311B0600	2	Nut-Hex (6Mm) ●

 
● Obtain parts from www.kawpowerepc.com

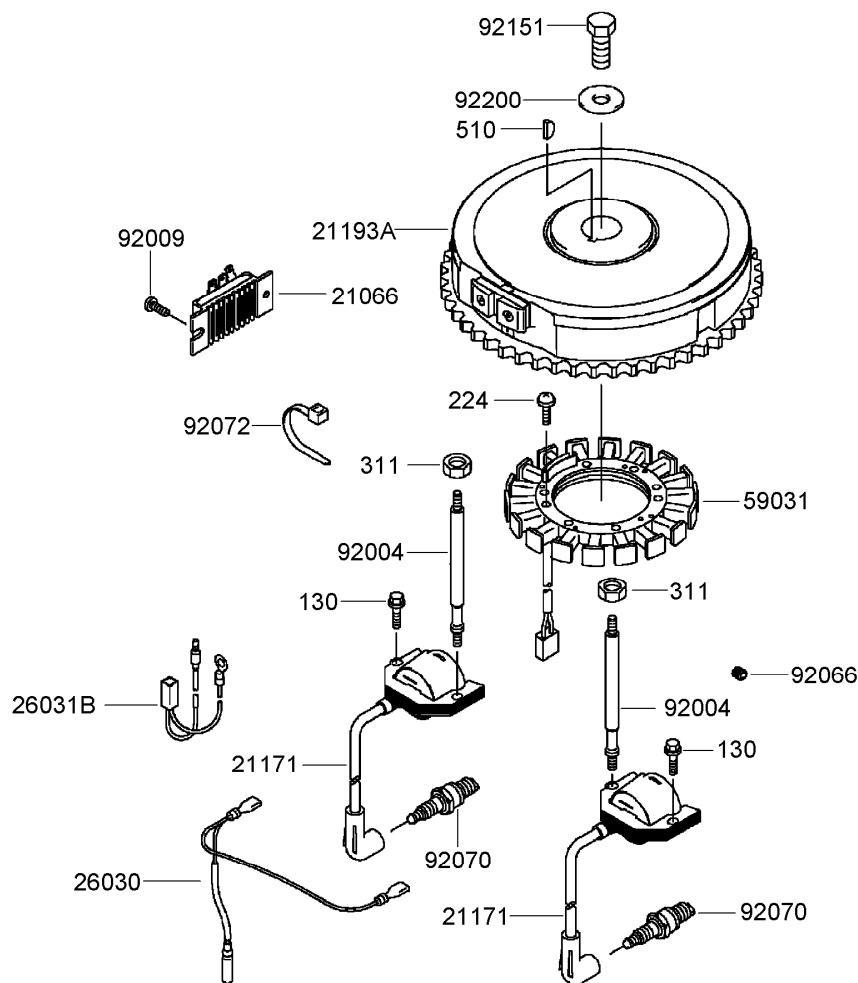

Electric Equipment Assembly Kawasaki FH580V-DS28


Ref.	Part Number	Qty.	Description
21066	21066-7011	1	Regulator-Voltage ●
21171	21171-7013	2	Ignition Coil ASM ●
21193A	21193-7032	1	Flywheel ASM ●
26030	26030-7001	1	Harness ●
26031B	26031-7012	1	Harness ●
59031	59031-7009	1	Coil-Charging ●
92004	92004-7009	2	Stud ●
92009	92009-2308	1	Screw ●
92066	92066-7002	1	Plug ●
92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid) ●
92072	92072-7003	2	Band ●
92151	92151-2097	1	Bolt (12X30) ●
92200	92200-7002	1	Washer ●
130	130B0620	2	Bolt-Flanged (6X20) ●
224	224B0520	4	Screw-Pan (5X20) ●
311	311B0600	2	Nut-Hex (6Mm) ●
510	510A5100	1	Key-Woodruff ●

 ● Obtain parts from www.kawpowerepc.com

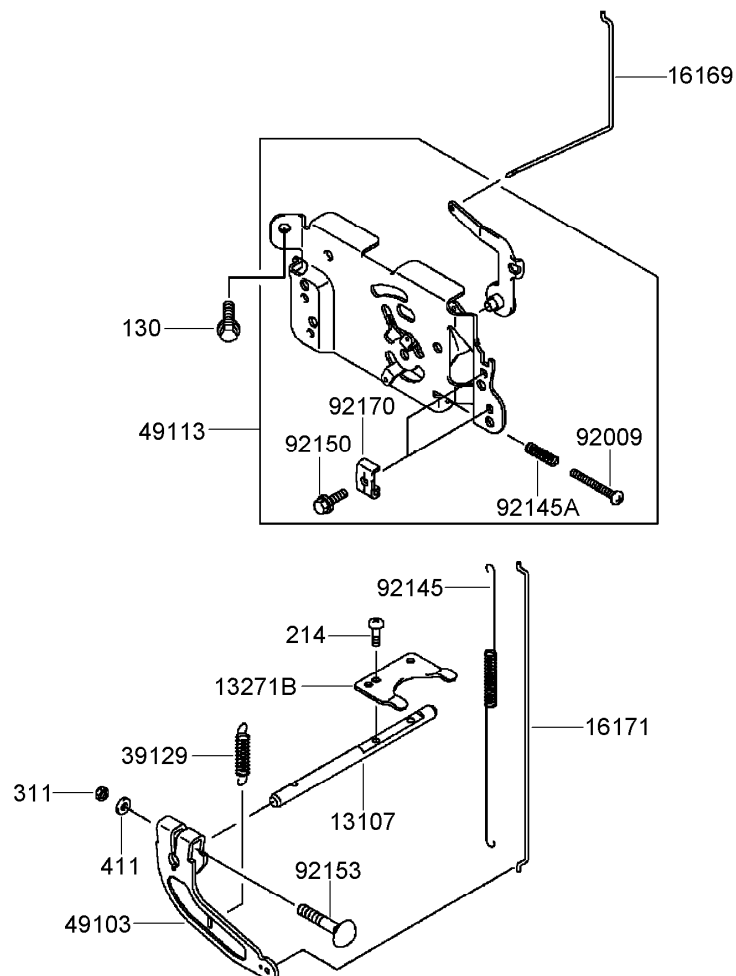

Control Equipment Assembly Kawasaki FH580V-DS28


Ref.	Part Number	Qty.	Description
13107	13107-7010	1	Shaft ●
13271B	13271-7032	1	Plate ●
16169	16169-7010	1	Link-Choke ●
16171	16171-7001	1	Link ●
39129	39129-7003	1	Spring-Governor ●
49103	49103-7004	1	Arm-Governor ●
49113	49113-7024	1	Panel-Control ●
92009	92009-7007	1	Screw (4X35) ●
92145	92145-7003	1	Spring ●
92145A	92145-7005	1	Spring ●
92150	92150-2182	2	Bolt (5X18) ●
92153	92153-7033	1	Bolt (6X35) ●
92170	92170-7001	2	Clamp ●
130	130B0612	2	Bolt-Flanged (6X12) ●
214	214B0408	2	Screw-Pan (4X8) ●
311	311B0600	1	Nut-Hex (6Mm) ●
411	411B0600	1	Washer-Plain (6Mm) ●

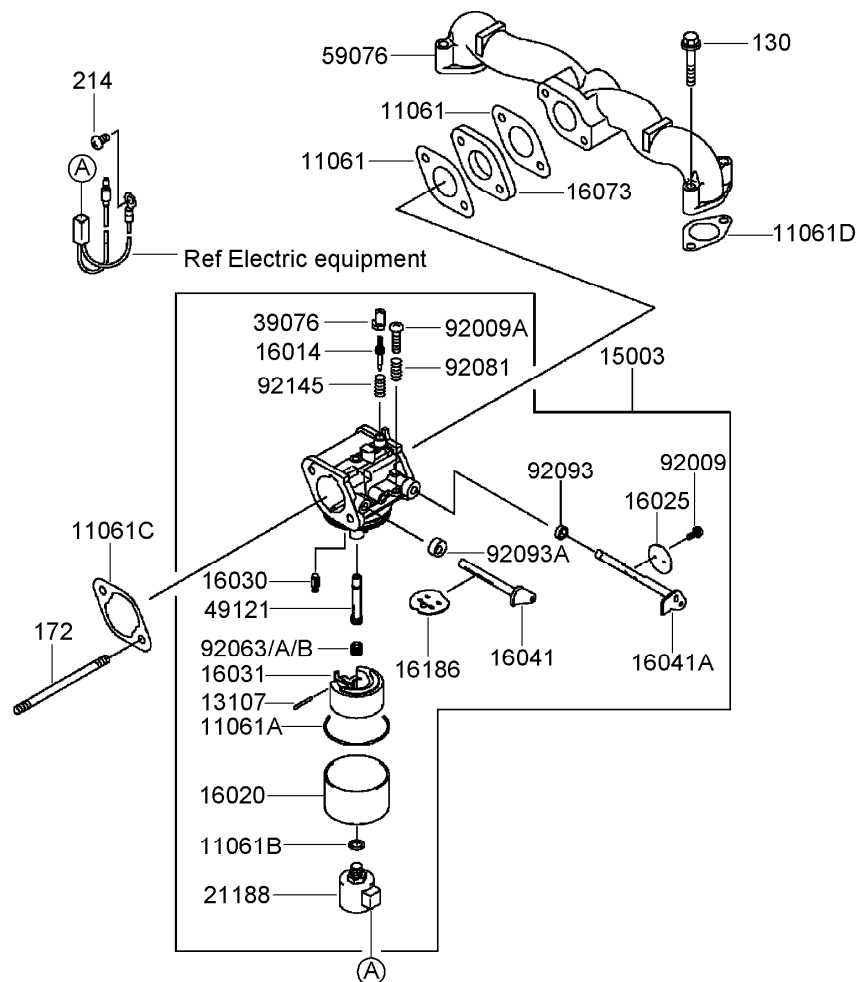 

Carburetor Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
11061	11061-7004	2	Gasket-Insulator ●	21188	21188-7002	1	Solenoid ●
11061A	11061-7009	1	Gasket-Chamber ●	39076	39076-7001	1	Limiter ●
11061B	11061-7010	1	Gasket-Screw ●	49121	49121-7004	1	Nozzle-Main ●
11061C	11061-7018	1	Gasket-Cleaner, Air ●	59076	59076-7001	1	Manifold-Intake ●
11061D	11061-7019	2	Gasket ●	92009	92009-2083	2	Screw ●
13107	13107-7018	1	Shaft ●	92009A	92009-2349	1	Screw ●
15003	15003-7100	1	Carburetor ASM ●	92063	92063-7037	1	Jet-Main (No. 105) ●
16014	16014-7007	1	Screw-Air, Pilot ●	92063A	92063-7046	1	Jet-Main (No. 100) ●
16020	16020-7003	1	Chamber-Float ●	92063B	92063-7062	1	Jet-Main No. 110 ●
16025	16025-7006	1	Valve-Throttle ●	92081	92081-2234	1	Spring ●
16030	16030-7003	1	Valve-Float ●	92093	92093-2100	1	Seal ●
16031	16031-7002	1	Float ●	92093A	92093-7003	1	Seal ●
16041	16041-7016	1	Shaft-Choke, Carburetor ●	92145	92145-7015	1	Spring ●
16041A	16041-7018	1	Shaft-Throttle, Carburetor ●	130	130B0635	4	Bolt-Flanged (6X35) ●
16073	16073-7007	1	Insulator ●	172	172G0690	2	Bolt-Stud (6X90) ●
16186	16186-7004	1	Choke Valve ASM ●	214	214B0510	1	Screw-Pan (5X10) ●

 
● Obtain parts from www.kawpowerepc.com

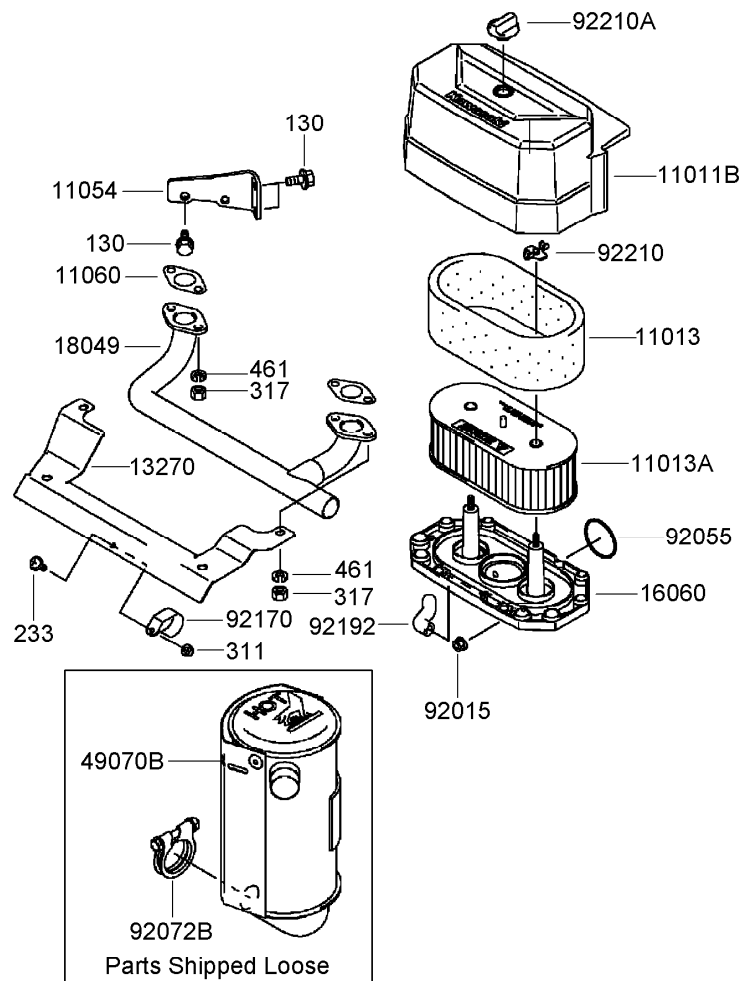

Air Filter and Muffler Assembly Kawasaki FH580V-DS28


Ref.	Part Number	Qty.	Description
11011B	11011-7046	1	Case-Filter, Air ●
11013	11013-7025	1	Element-Filter, Air ●
11013A	11013-7031	1	Element-Filter, Air ●
11054	11054-7002-9H	1	Bracket ●
11060	11060-7021	2	Gasket-Muffler ●
13270	13270-7008	1	Plate ●
16060	16060-7016	1	Pipe-Intake ●
18049	18049-7001	1	Pipe-Exhaust ●
49070B	49070-7021	1	Muffler ●
92015	92015-1193	2	Nut ●
92055	92055-7015	1	O-Ring ●
92072B	92072-7012	1	Band ●
92170	92170-7002	1	Clamp ●
92192	92192-7010	1	Tube ●
92210	92210-7004	2	Nut (M6) ●
92210A	92210-7019	1	Nut ●
130	130B0816	3	Bolt-Flanged (8X16) ●
233	233B0416	1	Screw (4X16) ●
311	311B0400	1	Nut-Hex (4Mm) ●
317	317R0800	4	Nut-Hex, Small (8Mm) ●
461	461F0800	4	Washer-Spring (8Mm) ●

 ● Obtain parts from www.kawpowerepc.com

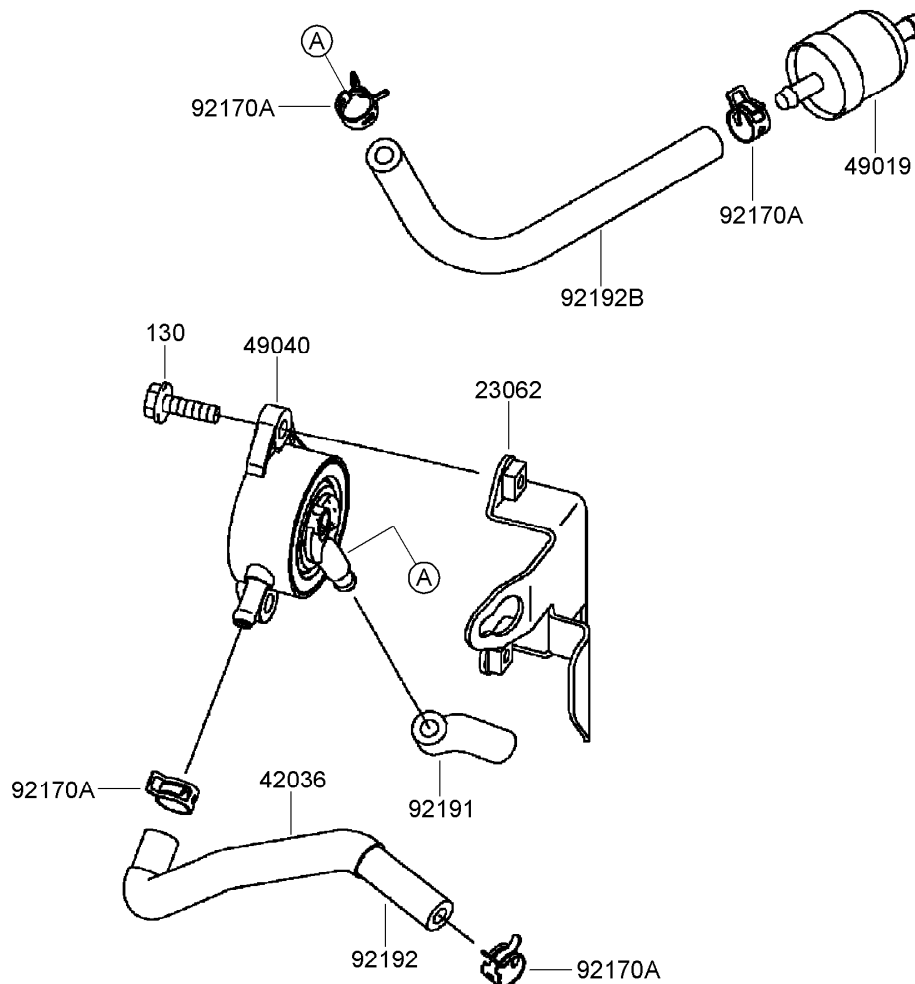

Fuel Tank and Valve Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
23062	23062-7004-9H	1	Bracket ●
42036	42036-7012	1	Sleeve ●
49019	49019-7001	1	Filter-Fuel ●
49040	49040-7001	1	Pump-Fuel ●
92170A	92170-2088	4	Clamp ●
92191	92191-7002	1	Tube ●
92192	92192-7035	1	Tube (6.35X12.7X170) ●
92192B	92192-7037	1	Tube (6.35X12.7X160) ●
130	130B0620	2	Bolt-Flanged (6X20) ●

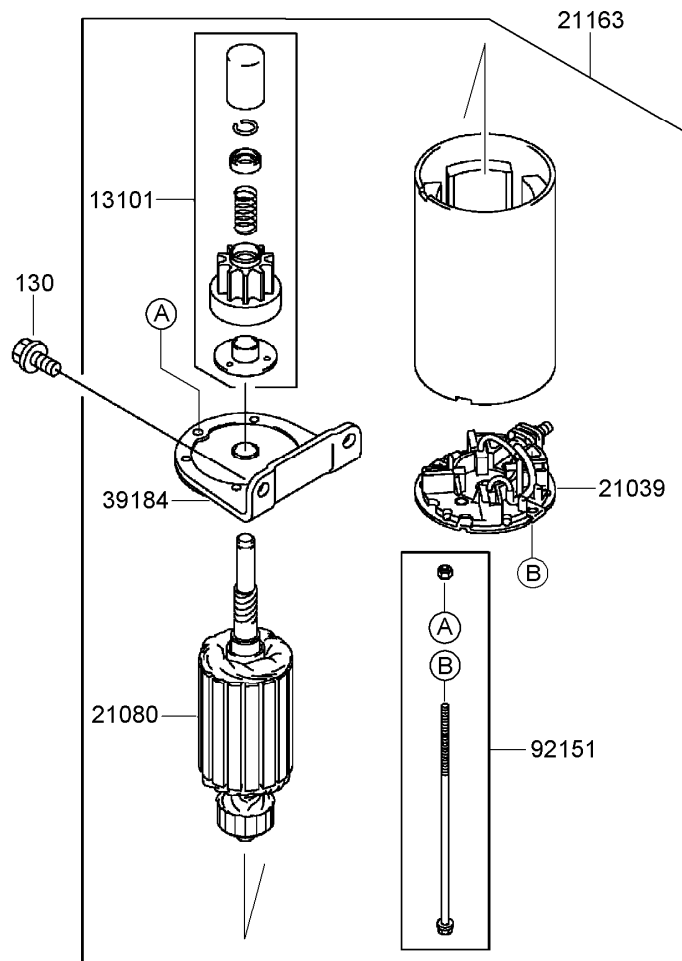 


Starter Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
13101	13101-7003	1	Gear ASM ●
21039	21039-7004	1	Brush ●
21080	21080-7001	1	Armature ●
21163	21163-7010	1	Starter-Electric ●
39184	39184-7004	1	Bracket ASM ●
92151	92151-7013	1	Bolt ●
130	130B0816	2	Bolt-Flanged (8X16) ●

● Obtain parts from www.kawpowerepc.com

 56033A

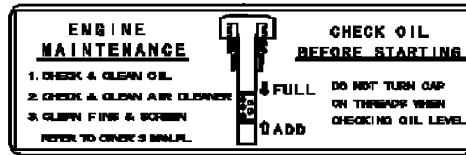

56070



56080



Label Assembly Kawasaki FH580V-DS28

Ref.	Part Number	Qty.	Description
56033A	56033-7003	1	Label-Manual •
56070	56070-7001	1	Label-Warning •
56080	56080-7022	1	Label-Brand •

Attachments and Accessories

For 30498 Commercial Walk-Behind Mower Floating Deck T-Bar Hydro with 48in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Low Flow, 16.5in.....	107-3193-03
Blade-Mid Flow, 16.5in	107-3194-03
Blade-Atomic, 16.5in	107-3195-03
Blade-Recycling, 16.5in.....	107-3196-03
Bagging Enhancement Kit	108-4091
Blade-Hi Flow, 16.5in (6 Pack).....	110-0414
Blade-Lo Flow, 16.5in (6 Pack)	110-0415
Blade-Recycler, 16.5in (6 Pack).....	110-0416
Blade-Atomic, 16.5in (6 Pack)	110-0417
Blade-Mid Flow, 16.5in (6 Pack)	110-0418
48in Recycler Kit.....	110-2060
Weight-Cast.....	112-7059-01
Weight Kit	112-9971
Trim Side Anti-Scalp Roller Kit.....	115-1015
Discharge Side Anti-Scalp Roller Kit.....	115-1016
Soft Bag (3 Bushel).....	30104
Tru Trak Sulky.....	30110

Notes:

Notes:



Count on it.