



## Platinum Series Lawn Mower

Model No. 10797 - 270000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| Description                                           | Page     | Description                                 | Page     |
|-------------------------------------------------------|----------|---------------------------------------------|----------|
| Front End and Tunnel Assembly                         | ..... 3  | Camshaft Pulley Assembly Honda GCV160A NBL1 | ..... 15 |
| Rear Axle and Transmission Assembly                   | ..... 4  | Recoil Starter Assembly Honda GCV160A NBL1  | ..... 16 |
| Upper Handle Assembly                                 | ..... 5  | Fan Cover Assembly Honda GCV160A NBL1       | ..... 17 |
| Lower Handle Assembly                                 | ..... 6  | Carburetor Assembly Honda GCV160A NBL1      | ..... 18 |
| Blade and Engine Assembly                             | ..... 7  | Air Cleaner Assembly Honda GCV160A NBL1     | ..... 19 |
| Blade Control System Assembly                         | ..... 8  | Muffler Assembly Honda GCV160A NBL1         | ..... 20 |
| Blade Control Upper Handle Assembly                   | ..... 9  | Flywheel Assembly Honda GCV160A NBL1        | ..... 21 |
| Rear Bag Assembly                                     | ..... 10 | Control Assembly Honda GCV160A NBL1         | ..... 22 |
| Cylinder Barrel Assembly Honda GCV160A NBL1           | ..... 11 | Top Cover Assembly Honda GCV160A NBL1       | ..... 23 |
| Oil Pan Assembly Honda GCV160A NBL1                   | ..... 12 | Label Assembly Honda GCV160A NBL1           | ..... 24 |
| Crankshaft Assembly Honda GCV160A NBL1                | ..... 13 | Attachments and Accessories List            | ..... 25 |
| Piston and Connecting Rod Assembly Honda GCV160A NBL1 | ..... 14 |                                             |          |

 
## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HS. .... hex socket head                   | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |


## Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Honda dealer

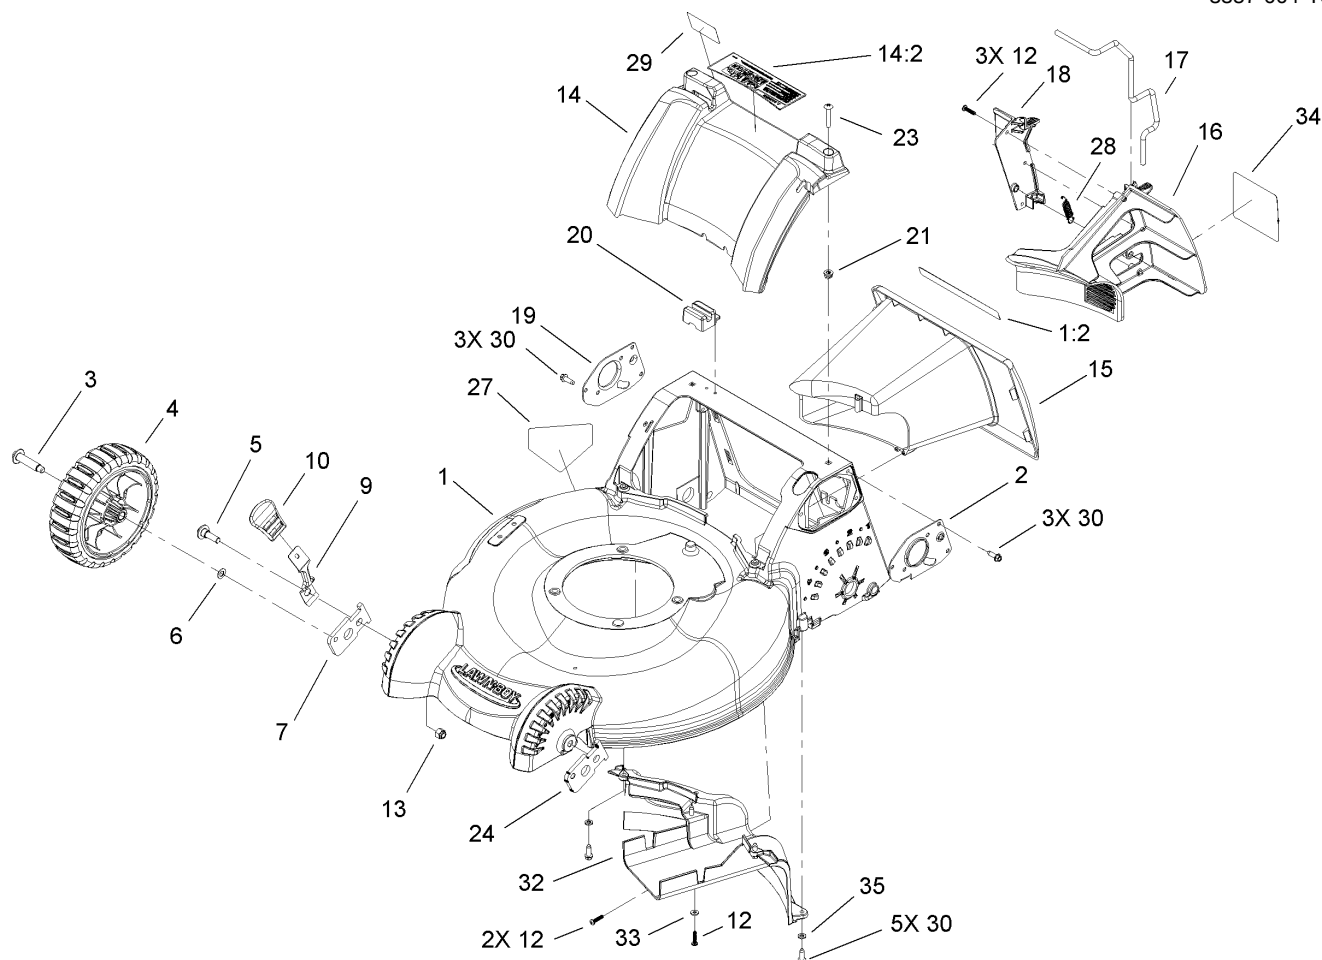

## Front End and Tunnel Assembly

 
| Ref  | Part No.    | Qty. | Description       | Ref | Part No. | Qty. | Description          |
|------|-------------|------|-------------------|-----|----------|------|----------------------|
| 1    | 110-9419    | 1    | Housing ASM       | 28  | 110-9458 | 1    | Spring-Extension     |
| 2    | 110-9415-03 | 1    | Mount-Handle, LH  | 29  | 107-1938 | 1    | Decal-Bag Attachment |
| 3    | 614650      | 2    | Bolt-Shoulder     | 30  | 49-2040  | 11   | Screw-HWHTF          |
| 4    | 107-3898    | 2    | 8 Inch Wheel ASM  | 31  | 110-9468 | 1    | Mulch Plug ASM       |
| 5    | 614672      | 2    | Bolt-Shoulder     | 32  | 110-9423 | 1    | Baffle-Rear          |
| 6    | 40-1940     | 2    | Washer            | 33  | 3256-14  | 1    | Washer-Flat          |
| 7    | 110-9421    | 1    | Arm-Pivot, RH     | 34  | 110-9457 | 1    | Decal-Mulch Plug     |
| 9    | 110-9434    | 2    | Arm-Spring, Front | 35  | 3256-22  | 2    | Washer-Flat          |
| 10   | 110-0549    | 2    | Knob-HOC          |     |          |      |                      |
| 1:2  | 107-1941    | 1    | Decal-Safety, Bag |     |          |      |                      |
| 12   | 108-7476    | 6    | Screw-Plastite    |     |          |      |                      |
| 13   | 3296-39     | 2    | Nut-Lock, NI      |     |          |      |                      |
| 14   | 108-9349    | 1    | Cover-Rear        |     |          |      |                      |
| 14:2 | 107-3888    | 1    | Decal-Safety      |     |          |      |                      |
| 15   | 110-9455    | 1    | Tunnel            |     |          |      |                      |
| 16   | 110-9446    | 1    | Plug-Mulch, LH    |     |          |      |                      |
| 17   | 110-9448    | 1    | Latch-Mulch Plug  |     |          |      |                      |
| 18   | 110-9447    | 1    | Plug-Mulch, RH    |     |          |      |                      |
| 19   | 110-9416-03 | 1    | Mount-Handle, RH  |     |          |      |                      |
| 20   | 110-1788    | 1    | Module-Switch     |     |          |      |                      |
| 21   | 94-1610     | 2    | Nut-Clip          |     |          |      |                      |
| 23   | 108-0965    | 2    | Screw-PTH         |     |          |      |                      |
| 24   | 110-9420    | 1    | Arm-Pivot, LH     |     |          |      |                      |
| 27   | 94-8072     | 1    | Decal-Danger      |     |          |      |                      |

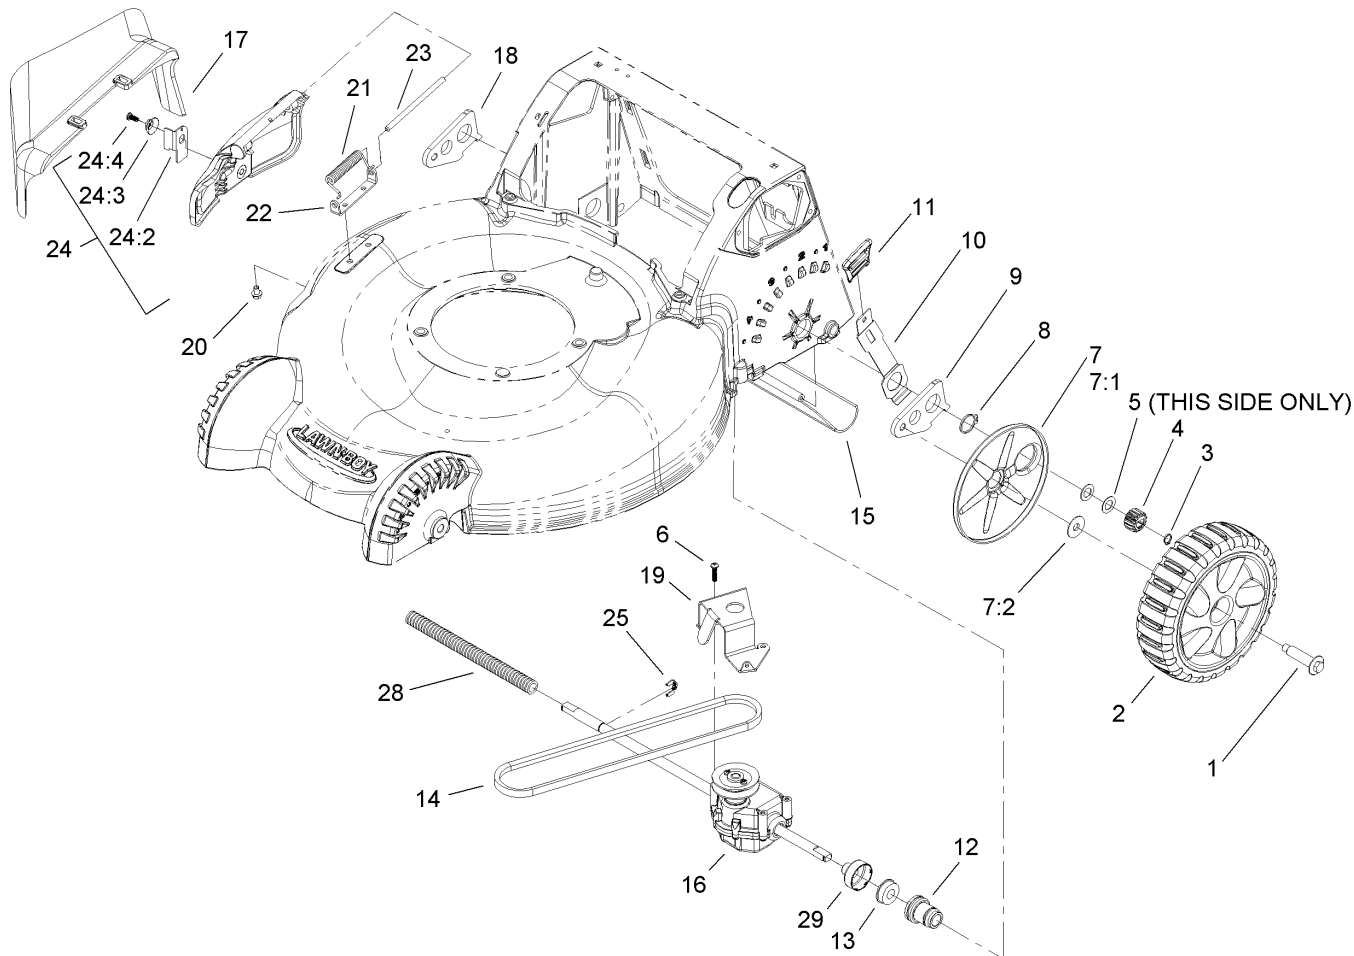

## Rear Axle and Transmission Assembly


| Ref | Part No.    | Qty. | Description           |
|-----|-------------|------|-----------------------|
| 1   | 614650      | 2    | Bolt-Shoulder         |
| 2   | 107-3906    | 2    | Rear Wheel ASM        |
| 3   | 32151-61    | 2    | Ring-Retaining        |
| 4   | 110-9417    | 2    | Pinion                |
| 5   | 36-4780     | 2    | Washer-Plain          |
| 6   | 108-7476    | 3    | Screw-Plastite        |
| 7   | 110-1793    | 2    | Wheel Cover ASM       |
| 7:1 |             | 1    | Cover-Wheel           |
| 7:2 | 614426      | 1    | Washer-Stepped        |
| 8   | 32151-36    | 2    | Ring-Retaining        |
| 9   | 108-9344    | 1    | Arm-Rear Pivot, LH    |
| 10  | 110-9445    | 2    | Arm-Spring, Rear      |
| 11  | 110-0549    | 2    | Knob-HOC              |
| 12  | 110-9422    | 2    | Retainer-Bearing      |
| 13  | 104-8699    | 2    | Bearing-Ball          |
| 14  | 110-9429    | 1    | V-Belt                |
| 15  | 112-8768    | 1    | Shield-Trailing       |
| 16  | 110-9414    | 1    | Transmission ASM      |
| 17  | 105-3028    | 1    | Chute-Discharge, Side |
| 18  | 108-9343    | 1    | Arm-Rear Pivot, RH    |
| 19  | 110-9418-03 | 1    | Bracket-Transmission  |
| 20  | 99-8445     | 2    | Screw-HWH             |
| 21  | 99-5293     | 1    | Spring-Torsion        |
| 22  | 112-6416    | 1    | Bracket-Cover         |
 
| Ref  | Part No. | Qty. | Description        |
|------|----------|------|--------------------|
| 23   | 99-5291  | 1    | Rod-Cover          |
| 24   | 106-8376 | 1    | Discharge Door ASM |
| 24:2 | 107-0795 | 1    | Latch-Door         |
| 24:3 | 107-7456 | 1    | Cap-Door           |
| 24:4 | 107-7461 | 1    | Screw-Plastite     |
| 25   | 65-2720  | 1    | Ring-Clip, Locking |
| 28   | 24-7922  | 1    | Cover-Shaft, Drive |
| 29   | 114-2755 | 2    | Cap-Bearing        |

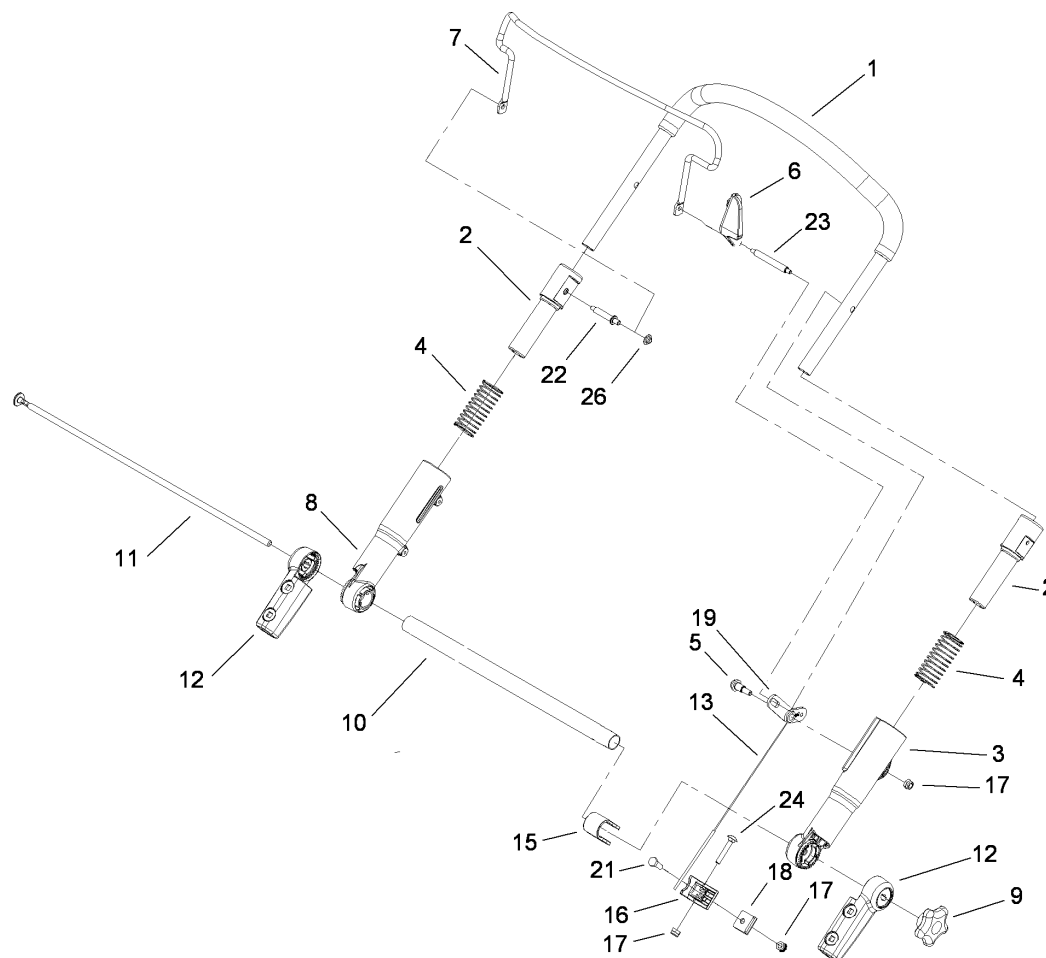


## Upper Handle Assembly
 
| Ref | Part No.    | Qty. | Description          |  |  |  |  |
|-----|-------------|------|----------------------|--|--|--|--|
| 1   | 108-0974    | 1    | Upper Handle ASM     |  |  |  |  |
| 2   | 112-8754    | 2    | Sleeve-Inner         |  |  |  |  |
| 3   | 112-1544    | 1    | Sleeve-Outer, LH     |  |  |  |  |
| 4   | 107-3869    | 2    | Spring-Compression   |  |  |  |  |
| 5   | 104-0858    | 1    | Bolt-Shoulder        |  |  |  |  |
| 6   | 112-8764    | 1    | Stop-Pivot           |  |  |  |  |
| 7   | 107-3874-03 | 1    | Bail-Brake           |  |  |  |  |
| 8   | 112-1545    | 1    | Sleeve-Outer, RH     |  |  |  |  |
| 9   | 107-3937    | 1    | Knob                 |  |  |  |  |
| 10  | 107-3867-03 | 1    | Tube-Cross           |  |  |  |  |
| 11  | 107-3871    | 1    | Rod-Threaded         |  |  |  |  |
| 12  | 107-3865    | 2    | Mount-Handle, Lower  |  |  |  |  |
| 13  | 110-9465    | 1    | Cable-Traction       |  |  |  |  |
| 15  | 108-1045    | 1    | Support-Cable        |  |  |  |  |
| 16  | 108-1046    | 1    | Support-Guide, Cable |  |  |  |  |
| 17  | 3296-73     | 3    | Nut-Lock, NI         |  |  |  |  |
| 18  | 108-7454    | 1    | Clamp-Cable          |  |  |  |  |
| 19  | 107-3893    | 1    | Lever-Traction       |  |  |  |  |
| 21  | 321-4       | 1    | Screw-HH             |  |  |  |  |
| 22  | 108-0959    | 1    | Pin-Handle           |  |  |  |  |
| 23  | 108-1008    | 1    | Pin-Bail, LH         |  |  |  |  |
| 24  | 108-0988    | 1    | Screw-CARR           |  |  |  |  |
| 26  | 108-9378    | 1    | Retainer-Push On     |  |  |  |  |

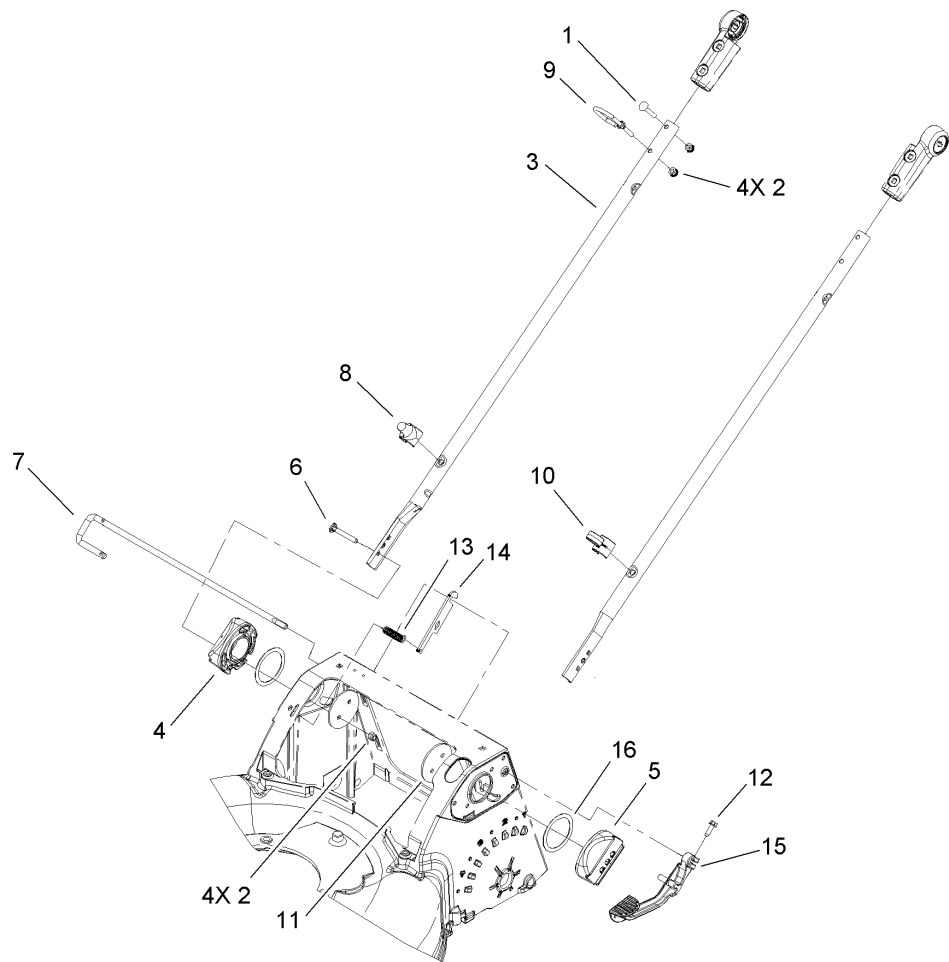


Lower Handle Assembly

| Ref | Part No.    | Qty. | Description         |  |  |  |  |
|-----|-------------|------|---------------------|--|--|--|--|
| 1   | 108-0988    | 3    | Screw-CARR          |  |  |  |  |
| 2   | 3296-73     | 8    | Nut-Lock, NI        |  |  |  |  |
| 3   | 107-3887-03 | 2    | Tube-Lower          |  |  |  |  |
| 4   | 108-9339-03 | 1    | Mount-Handle, RH    |  |  |  |  |
| 5   | 108-9340-03 | 1    | Mount-Handle, LH    |  |  |  |  |
| 6   | 95-4453     | 4    | Screw               |  |  |  |  |
| 7   | 112-8755    | 1    | Handle-Rod, Release |  |  |  |  |
| 8   | 108-0994    | 1    | Guide-Rope, Lower   |  |  |  |  |
| 9   | 107-3908    | 1    | Guide-Rope, Upper   |  |  |  |  |
| 10  | 106-6805    | 1    | Guide-Cable         |  |  |  |  |
| 11  | 107-3944-03 | 2    | Plate               |  |  |  |  |
| 12  | 49-2040     | 1    | Screw-HWHTF         |  |  |  |  |
| 13  | 112-1542    | 1    | Spring-Extension    |  |  |  |  |
| 14  | 112-1539    | 1    | Plate-Release Rod   |  |  |  |  |
| 15  | 110-1823-03 | 1    | Lever-Release       |  |  |  |  |
| 16  | 107-3947    | 2    | Washer-Nylon        |  |  |  |  |

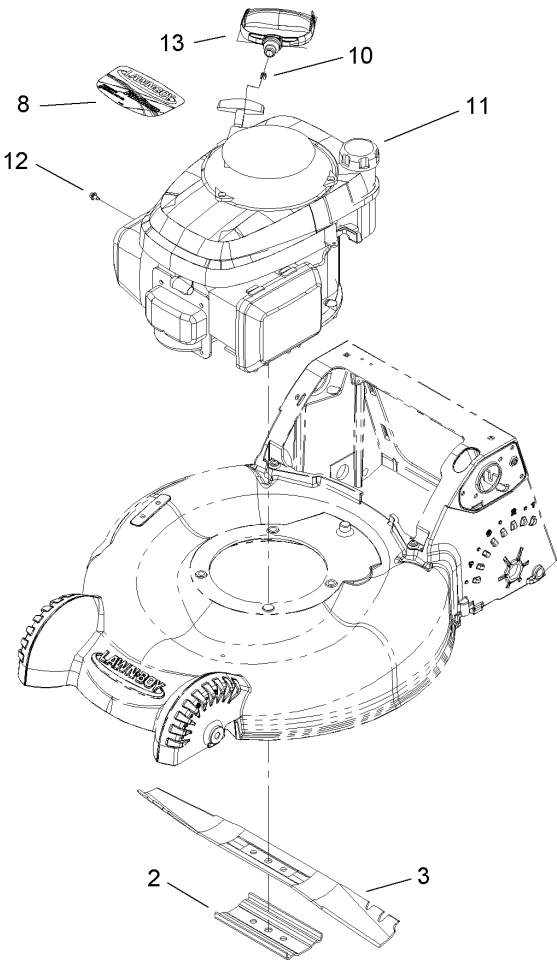 

# Blade and Engine Assembly

 
| Ref | Part No.    | Qty. | Description                |  |  |  |  |
|-----|-------------|------|----------------------------|--|--|--|--|
| 2   | 108-3766-03 | 1    | Support-Blade              |  |  |  |  |
| 3   | 108-0954-03 | 1    | Blade-21 Inch              |  |  |  |  |
| 8   | 110-9487    | 1    | Decal-Engine               |  |  |  |  |
| 10  | 92-1701     | 1    | Stop-Rope                  |  |  |  |  |
| 11  |             | 1    | Engine-Honda, Gcv160A Nbl1 |  |  |  |  |
| 12  | 98-1394     | 1    | Screw-HWH                  |  |  |  |  |
| 13  | 110-1778    | 1    | Handle-Recoil              |  |  |  |  |

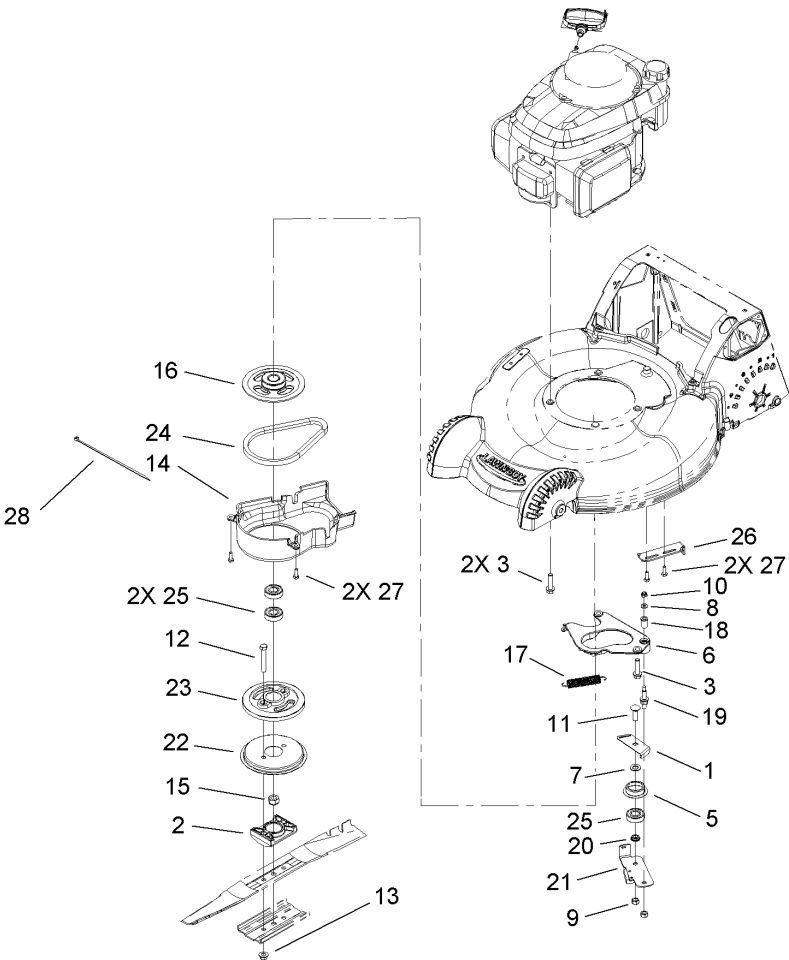

Blade Control System Assembly


| Ref | Part No.  | Qty. | Description           |
|-----|-----------|------|-----------------------|
| 1   | 107-7471  | 1    | Plate-Guide           |
| 2   | 107-7487  | 1    | Support-Blade         |
| 3   | 32144-102 | 3    | Screw-HWH             |
| 5   | 108-3790  | 1    | Retainer-Belt         |
| 6   | 107-0761  | 1    | Plate-Anchor          |
| 7   | 605256    | 1    | Washer                |
| 8   | 3256-16   | 1    | Washer-Flat           |
| 9   | 603773    | 2    | Nut                   |
| 10  | 3296-73   | 1    | Nut-Lock, NI          |
| 11  | 3231-25   | 1    | Screw-CARR            |
| 12  | 3211-42   | 2    | Screw-HH              |
| 13  | 54-9190   | 1    | Nut-Lock              |
| 14  | 107-7488  | 1    | Cover                 |
| 15  | 108-9342  | 1    | Nut-Hex               |
| 16  | 110-7456  | 1    | Pulley                |
| 17  | 108-3792  | 1    | Spring-Tension, Brake |
| 18  | 107-0797  | 1    | Bushing               |
| 19  | 107-0759  | 1    | Bolt-Shoulder         |
| 20  | 107-0758  | 1    | Spacer-Bearing        |
| 21  | 107-7477  | 1    | Brake Arm ASM         |
| 22  | 108-3787  | 1    | Disc                  |
| 23  | 107-0754  | 1    | Drum                  |
| 24  | 110-1790  | 1    | Belt-BBC              |
| 25  | 100-1048  | 3    | Bearing-Ball          |

| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 26  | 110-9425-03 | 1    | Bracket-Cable |
| 27  | 49-2040     | 4    | Screw-HWHTF   |
| 28  | 614249      | 1    | Strap-Tie     |

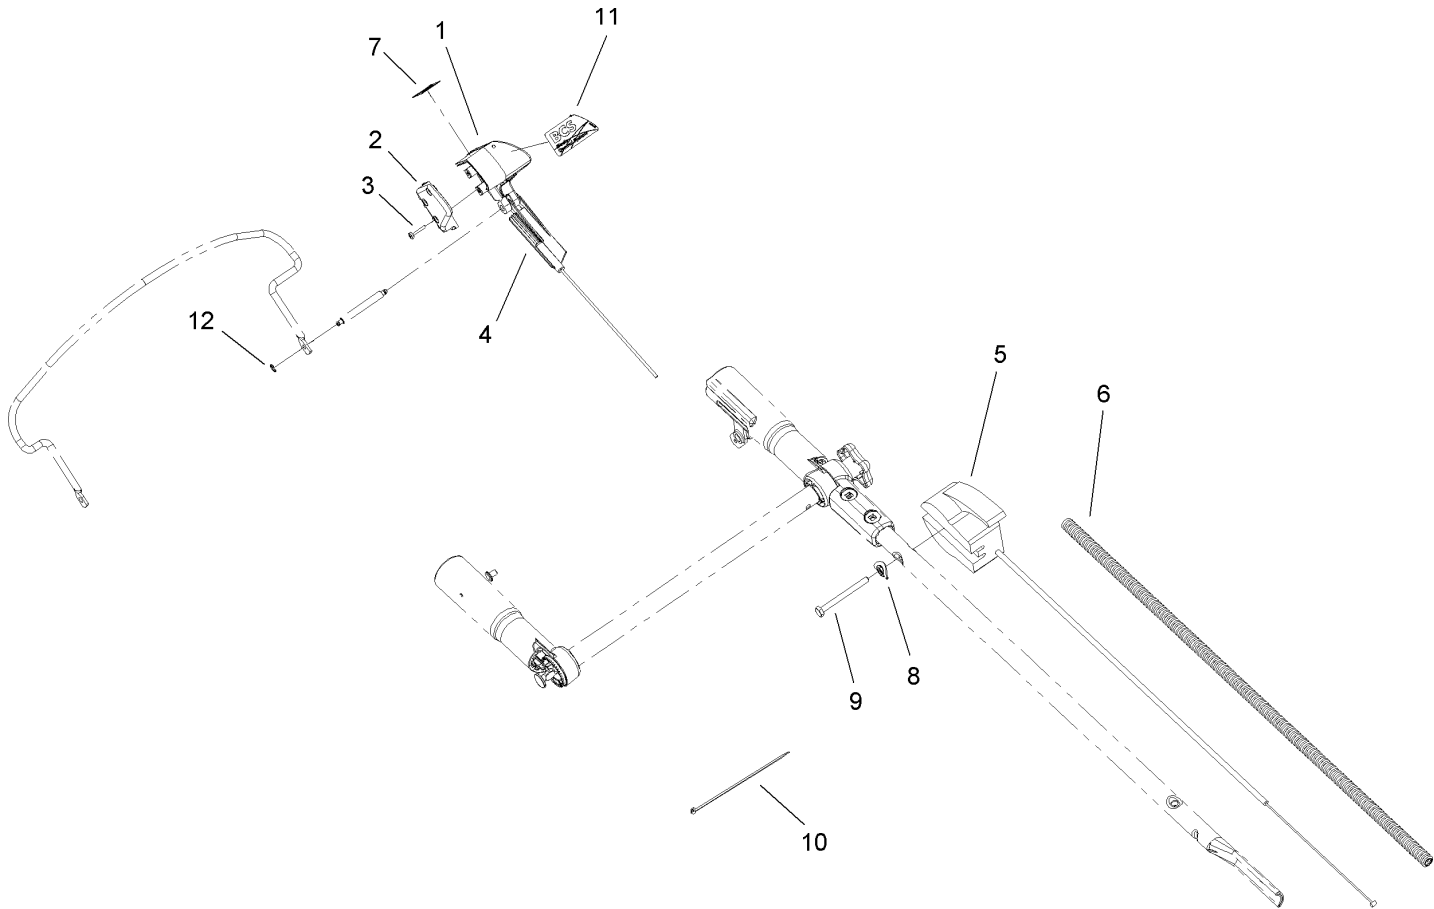 


Blade Control Upper Handle Assembly

| Ref | Part No.  | Qty. | Description          |  |  |  |  |
|-----|-----------|------|----------------------|--|--|--|--|
| 1   | 108-9305  | 1    | Safety Switch ASM    |  |  |  |  |
| 2   | 108-7532  | 1    | Cover-Switch         |  |  |  |  |
| 3   | 32144-111 | 3    | Screw-PPH            |  |  |  |  |
| 4   | 112-1536  | 1    | Cable-Bcs            |  |  |  |  |
| 5   | 108-9338  | 1    | Cable-Throttle       |  |  |  |  |
| 6   | 110-1761  | 1    | Conduit              |  |  |  |  |
| 7   | 108-9393  | 1    | Decal-Blade          |  |  |  |  |
| 8   | 107-3844  | 1    | Washer               |  |  |  |  |
| 9   | 321-57    | 1    | Screw-HH             |  |  |  |  |
| 10  | 614249    | 4    | Strap-Tie            |  |  |  |  |
| 11  | 108-9394  | 1    | Decal-Control, Blade |  |  |  |  |
| 12  | 110-1758  | 1    | Ring-Retaining       |  |  |  |  |

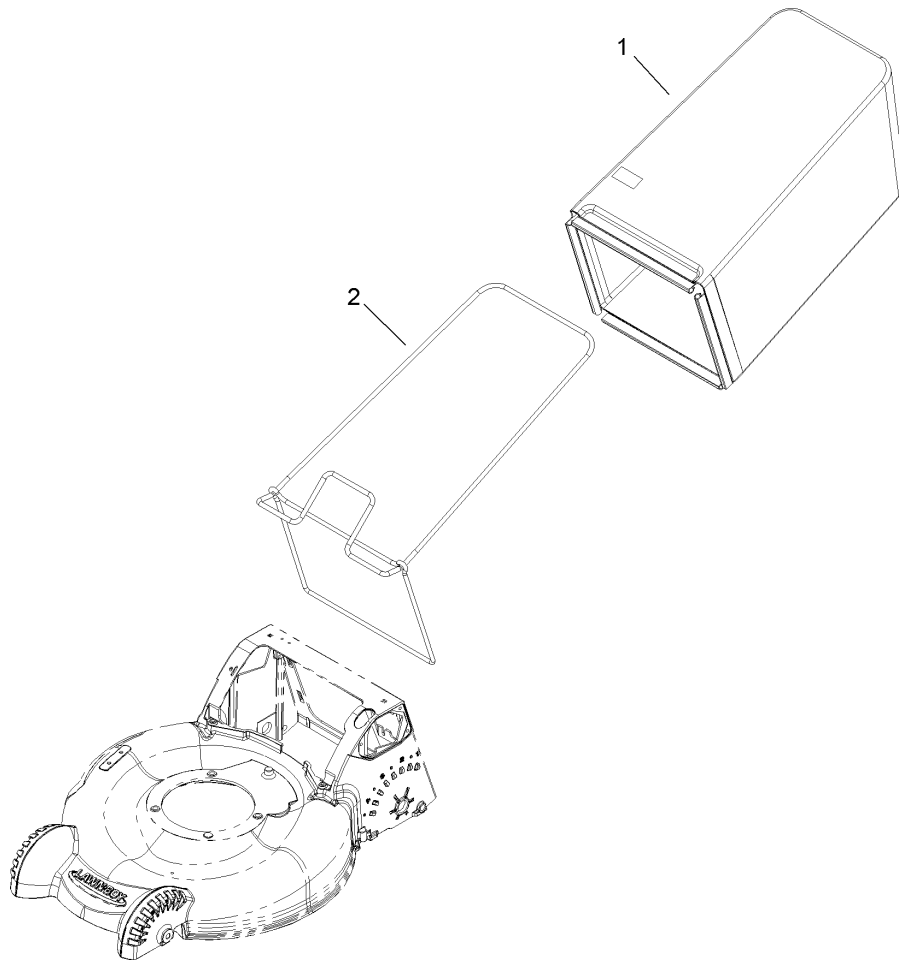 

## Rear Bag Assembly

 
| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 1   | 110-9483    | 1    | Grass Bag ASM |
| 2   | 112-8750-03 | 1    | Frame-Bag     |

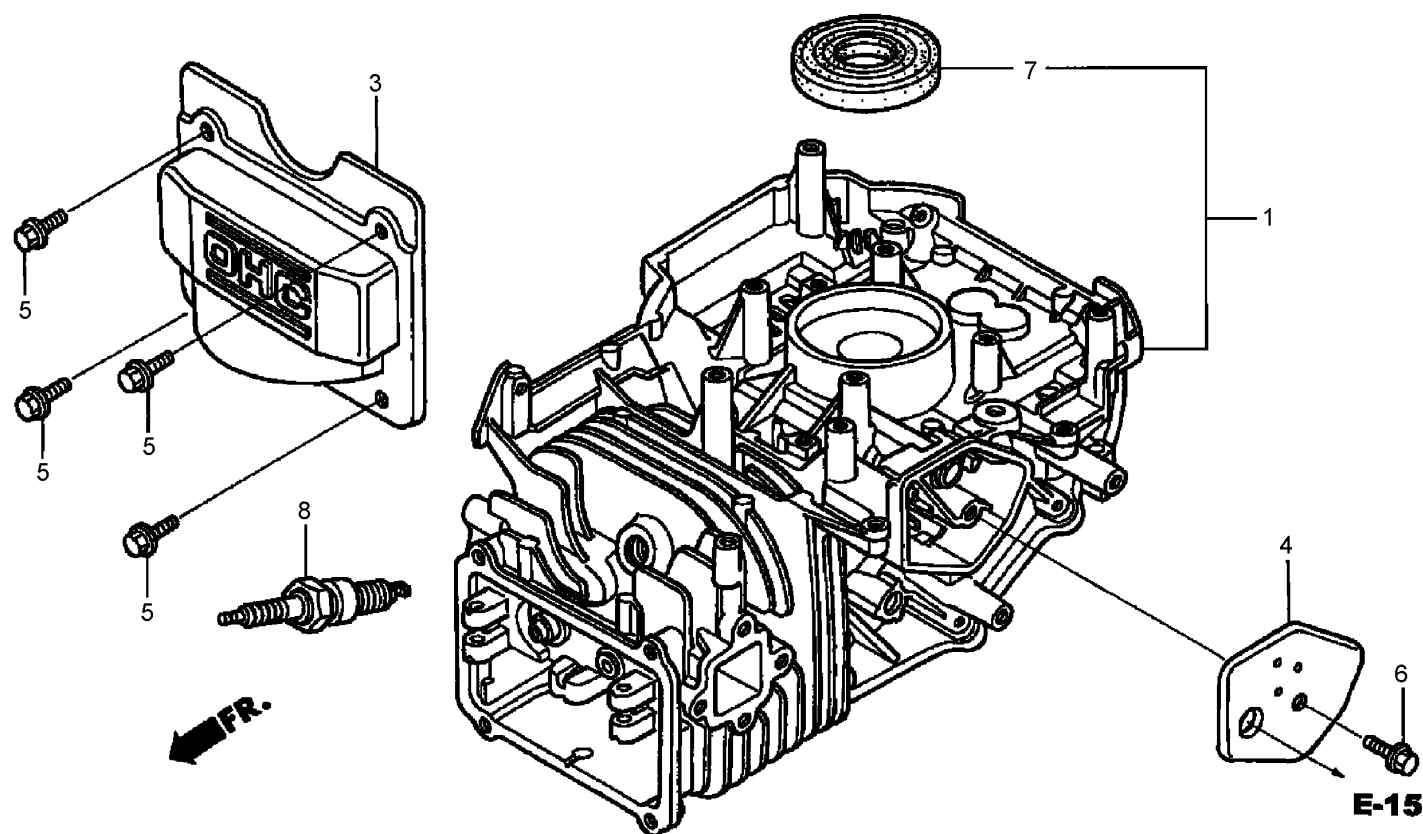

# Cylinder Barrel Assembly

## Honda GCV160A NBL1
 
| Ref | Part No.      | Qty. | Description                         |  |  |  |  |
|-----|---------------|------|-------------------------------------|--|--|--|--|
| ❸1  | 12000-ZL8-415 | 1    | Cylinder ASM (010)                  |  |  |  |  |
| ❸3  | 12311-ZL8-000 | 1    | Cover-Head                          |  |  |  |  |
| ❸4  | 12355-ZL8-000 | 1    | Cover-Breather (Breather Valve ASM) |  |  |  |  |
| ❸5  | 90013-883-000 | 4    | Bolt-Flange (6X12) (C T200)         |  |  |  |  |
| ❸6  | 90014-952-000 | 1    | Bolt-Flange (6X14) (C T200)         |  |  |  |  |
| ❸7  | 91201-ZL8-003 | 1    | Seal (25.4X62X6)                    |  |  |  |  |
| ❸8  | 98079-56846   | 1    | Spark Plug (B P R 6E S) (N G K)     |  |  |  |  |

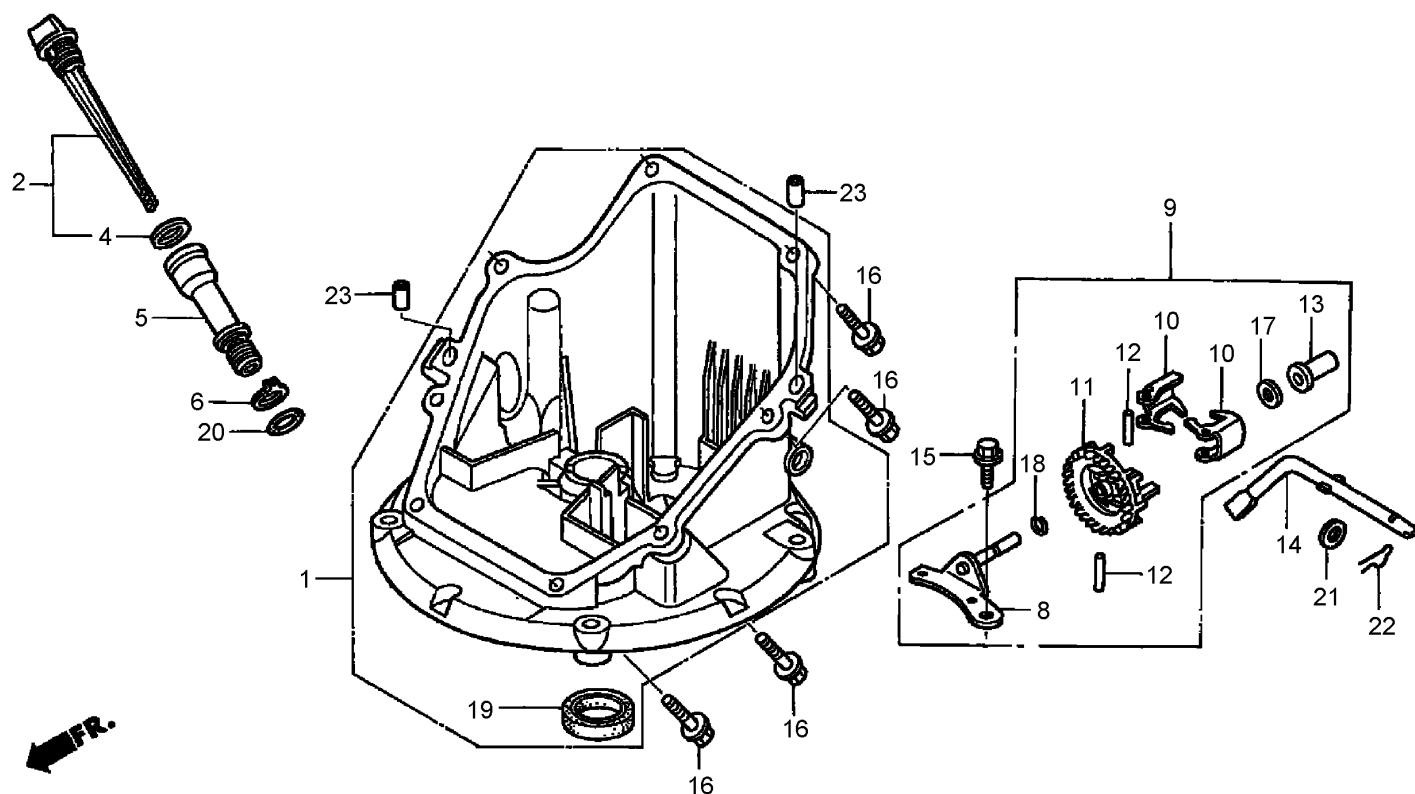


# Oil Pan Assembly

## Honda GCV160A NBL1

| Ref | Part No.      | Qty. | Description                 |
|-----|---------------|------|-----------------------------|
| ③1  | 11300-ZM0-405 | 1    | Oil Pan ASM (000)           |
| ③2  | 15650-ZM0-801 | 1    | Oil Level Gauge ASM         |
| ③4  | 15625-ZE6-000 | 1    | Gasket-Cap, Oil Filler      |
| ③5  | 15631-ZM0-000 | 1    | Extension-Filler, Oil       |
| ③6  | 15639-ZM0-000 | 1    | Washer-Lock, Extension      |
| ③8  | 16508-ZM0-010 | 1    | Shaft-Holder, Governor      |
| ③9  | 16510-ZM0-010 | 1    | Governor ASM                |
| ③10 | 16511-ZL8-000 | 2    | Weight-Governor             |
| ③11 | 16512-ZM0-000 | 1    | Holder-Weight, Governor     |
| ③12 | 16513-ZE1-000 | 2    | Pin-Weight, Governor        |
| ③13 | 16531-ZE1-000 | 1    | Slider-Governor             |
| ③14 | 16541-ZM0-000 | 1    | Shaft-Arm, Governor         |
| ③15 | 90014-952-000 | 1    | Bolt-Flange (6X14) (C T200) |

 
| Ref | Part No.      | Qty. | Description                  |
|-----|---------------|------|------------------------------|
| ③16 | 90121-952-000 | 8    | Bolt-Flange (6X25) (C T 200) |
| ③17 | 90451-ZE1-000 | 1    | Washer-Thrust (6Mm)          |
| ③18 | 90602-ZE1-000 | 1    | Clip-Holder, Governor        |
| ③19 | 91202-ZL8-003 | 1    | Seal-Oil (28X41.25X6)        |
| ③20 | 91303-KF0-003 | 1    | O-Ring (14.8X2.4) (Arai)     |
| ③20 | 91356-MA6-005 | 1    | O-Ring (14.8X24) (N O K)     |
| ③21 | 94101-06800   | 1    | Washer-Plain (6Mm)           |
| ③22 | 94251-08000   | 1    | Pin-Lock (8Mm)               |
| ③23 | 94301-08200   | 2    | Pin-Dowel (8X20)             |

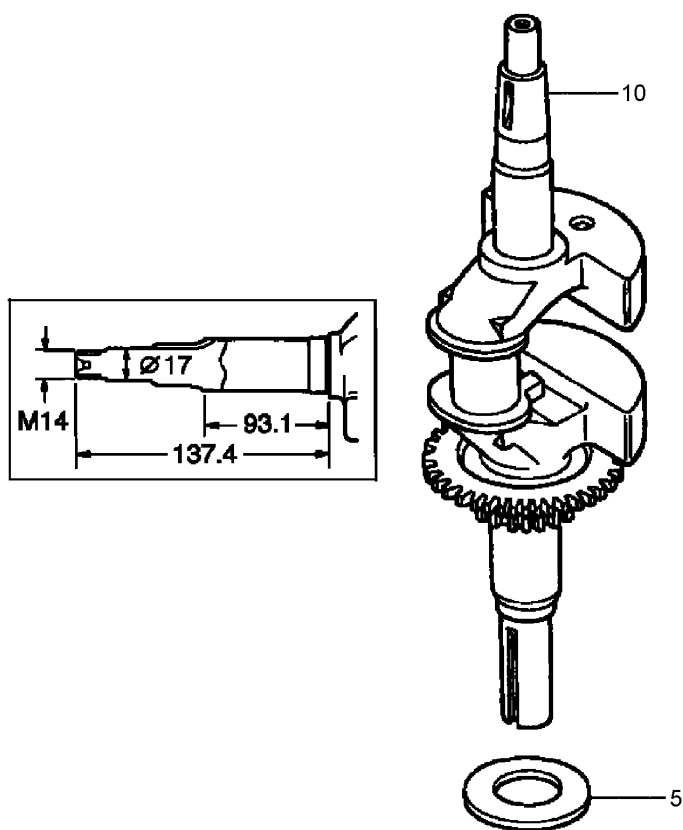

# Crankshaft Assembly


## Honda GCV160A NBL1
 
| Ref | Part No.      | Qty. | Description   |
|-----|---------------|------|---------------|
| ⑤5  | 90402-ZL8-000 | 1    | Washer-Thrust |
| ⑤10 | 13310-Z0L-S20 | 1    | Crankshaft    |

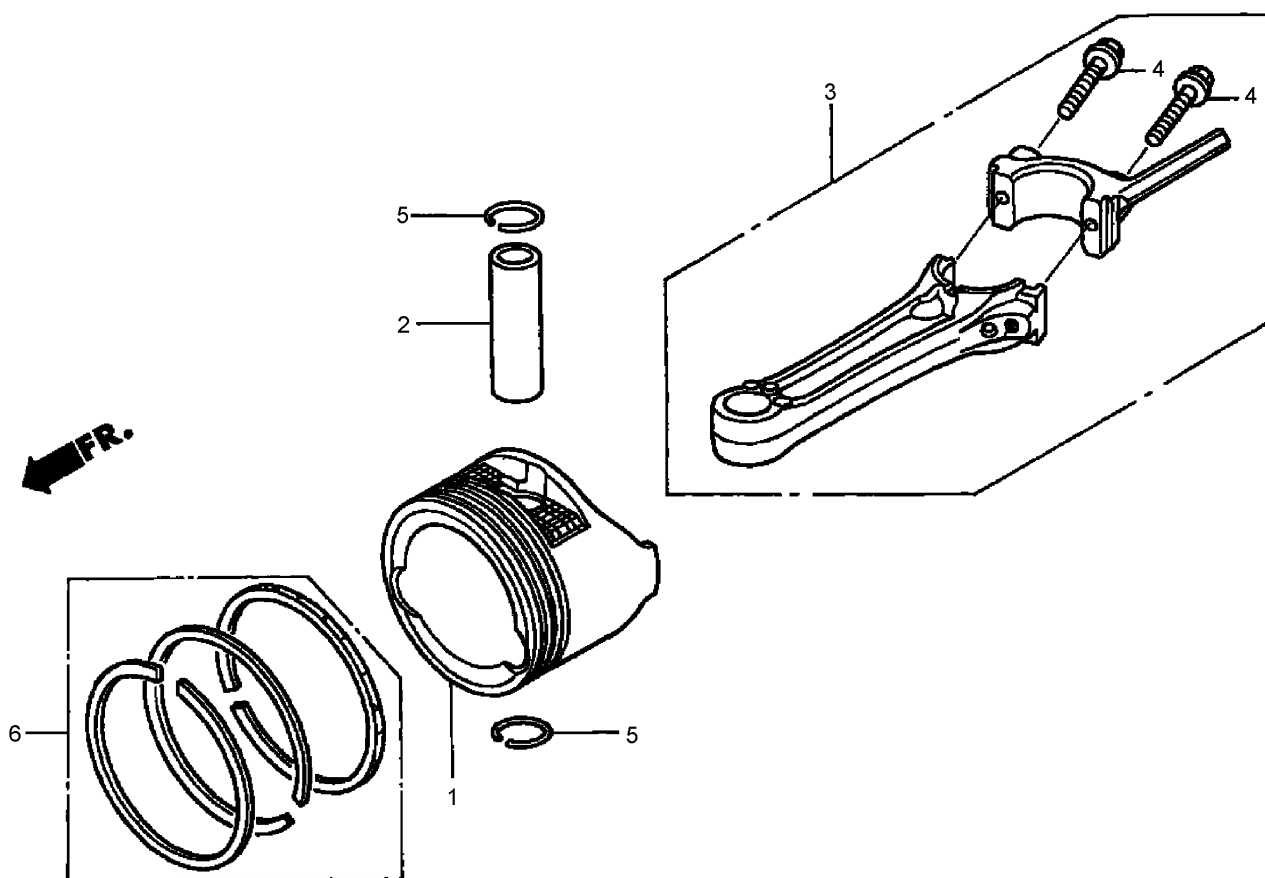

## Piston and Connecting Rod Assembly Honda GCV160A NBL1

 
| Ref | Part No.      | Qty. | Description               |  |  |  |  |
|-----|---------------|------|---------------------------|--|--|--|--|
| ③1  | 13101-ZL8-000 | 1    | Piston                    |  |  |  |  |
| ③2  | 13111-ZE0-000 | 1    | Pin-Piston                |  |  |  |  |
| ③3  | 13200-ZL8-000 | 1    | Connecting Rod ASM        |  |  |  |  |
| ③4  | 90001-ZE1-000 | 2    | Bolt-Rod, Connecting      |  |  |  |  |
| ③5  | 90551-ZE0-000 | 2    | Clip-Pin, Piston (13Mm)   |  |  |  |  |
| ③6  | 13010-ZL8-003 | 1    | Ring Set-Piston (Riken)   |  |  |  |  |
| ③6  | 13010-ZL8-024 | 1    | Ring Set-Piston (Teikoku) |  |  |  |  |

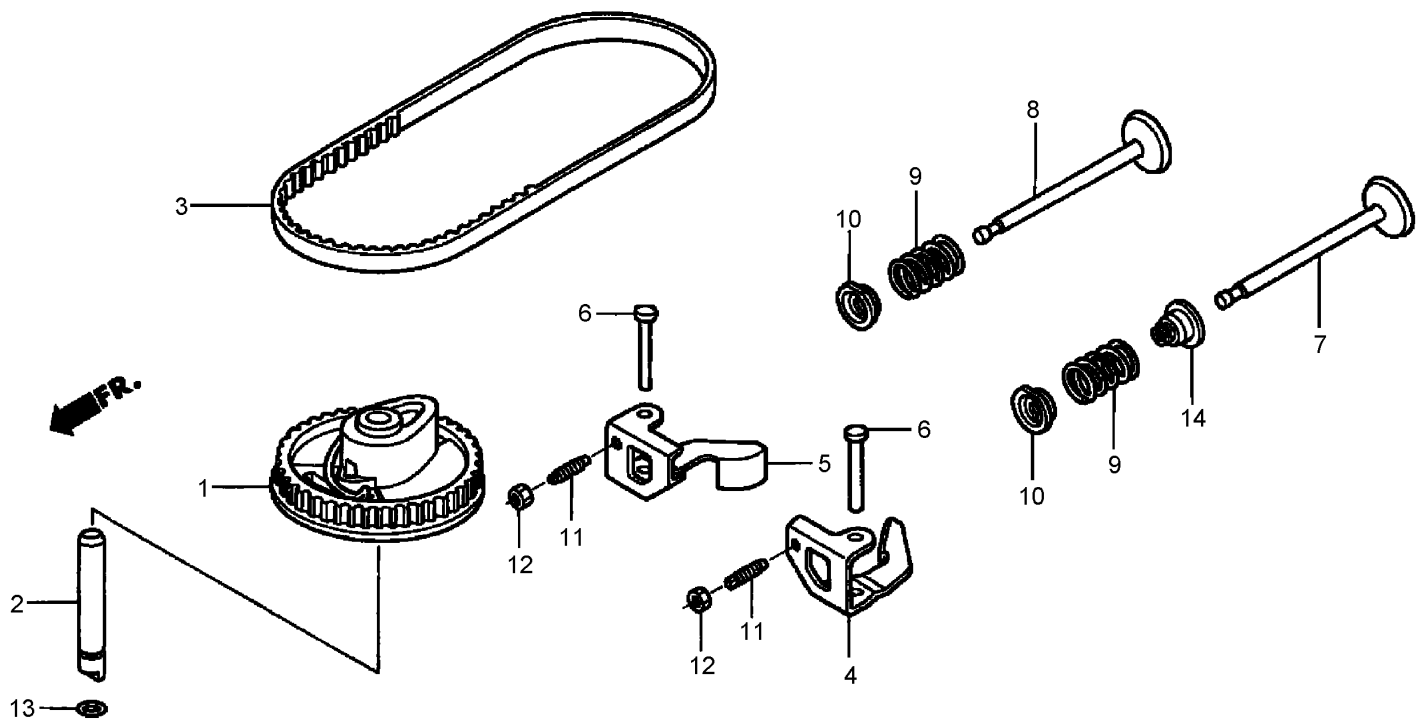

**Camshaft Pulley Assembly**  
**Honda GCV160A NBL1**


| Ref | Part No.      | Qty. | Description                |
|-----|---------------|------|----------------------------|
| ❶1  | 14320-ZL8-010 | 1    | Pulley-Camshaft            |
| ❶2  | 14324-ZL8-000 | 1    | Shaft-Pulley, Cam          |
| ❶3  | 14400-Z0J-014 | 1    | Belt-Timing (84H U7 G-200) |
| ❶4  | 14431-Z0J-000 | 1    | Arm-Rocker, Intake Valve   |
| ❶5  | 14441-Z0J-000 | 1    | Arm-Rocker, Exhaust Valve  |
| ❶6  | 14461-ZL8-000 | 2    | Shaft-Arm, Rocker          |
| ❶7  | 14711-Z0J-000 | 1    | Valve-Intake (Rocknel)     |
| ❶8  | 14721-ZL8-000 | 1    | Valve-Exhaust              |
| ❶9  | 14751-ZL8-000 | 2    | Spring-Valve               |
| ❶10 | 14771-Z0J-000 | 2    | Retainer-Spring, Valve     |
| ❶11 | 90012-333-000 | 2    | Screw-Adjusting, Tappet    |
| ❶12 | 90206-001-000 | 2    | Nut-Adjusting, Tappet      |
| ❶13 | 91301-ZM0-V31 | 1    | O-Ring (6.8X19) (Arai)     |

| Ref | Part No.      | Qty. | Description      |
|-----|---------------|------|------------------|
| ❶14 | 12209-ZM0-003 | 1    | Seal-Stem, Valve |

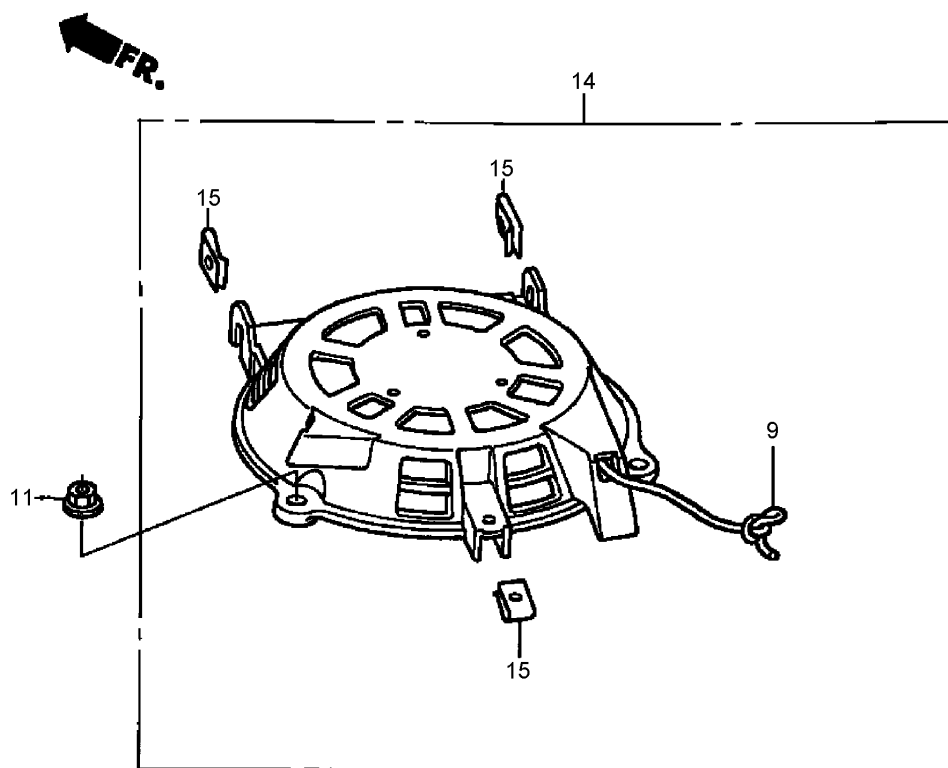 


## Recoil Starter Assembly Honda GCV160A NBL1
 
| Ref | Part No.      | Qty. | Description          |  |  |  |  |
|-----|---------------|------|----------------------|--|--|--|--|
| ③9  | 28462-Z0L-V71 | 1    | Rope-Starter, Recoil |  |  |  |  |
| ③11 | 90201-ZM0-000 | 3    | Nut-Flange (6Mm)     |  |  |  |  |
| ③14 | 28400-Z0L-V72 | 1    | Recoil Starter ASM   |  |  |  |  |
| ③15 | 66871-KY2-700 | 3    | Nut-Cowl             |  |  |  |  |

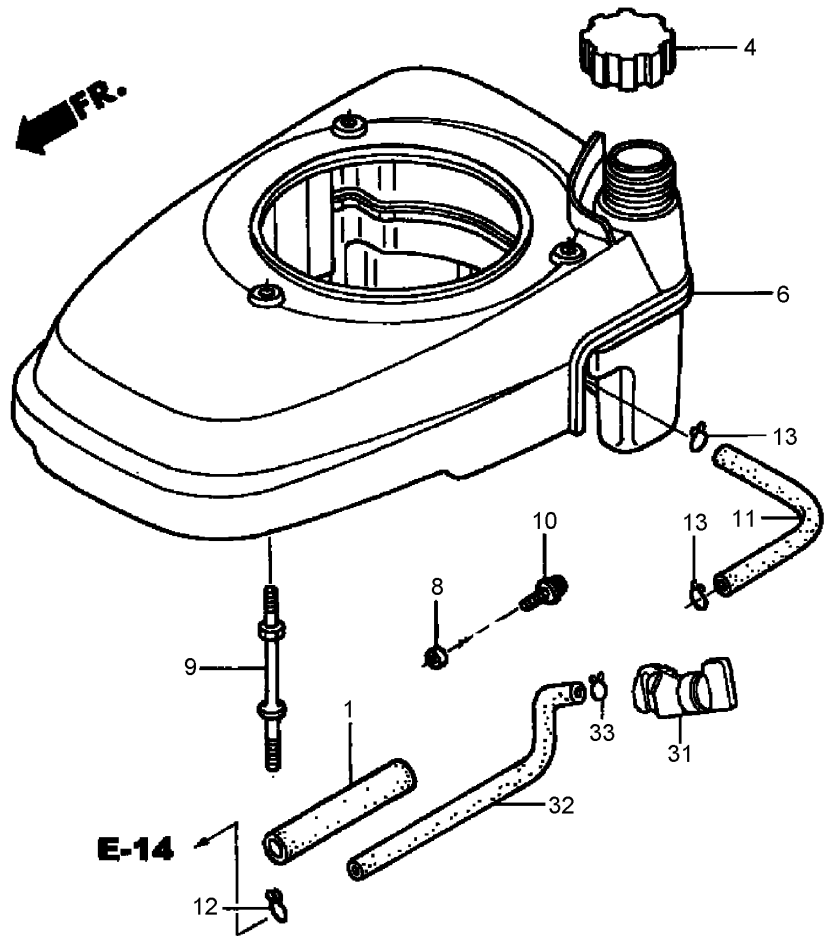

**Fan Cover Assembly**  
**Honda GCV160A NBL1**


| Ref | Part No.        | Qty. | Description                    |  |  |  |  |
|-----|-----------------|------|--------------------------------|--|--|--|--|
| ❶1  | 16854-ZH8-000   | 1    | Supporter-Rubber (107 Mm)      |  |  |  |  |
| ❸4  | 17620-ZL8-013   | 1    | Fuel Tank Cap ASM              |  |  |  |  |
| ❸6  | 19610-Z0L-000ZA | 1    | Cover-Fan                      |  |  |  |  |
| ❸8  | 33609-GK4-620   | 1    | Collar-Turn Signal, Front      |  |  |  |  |
| ❸9  | 90043-ZL8-000   | 3    | Bolt-Stud (H T 42.5Mm)         |  |  |  |  |
| ❸10 | 93891-05010-08  | 1    | Screw-Washer (5X10)            |  |  |  |  |
| ❸11 | 95001-55008-60M | 1    | Fuel-Hose (5.5X8000) (5.5X100) |  |  |  |  |
| ❸12 | 95002-02080     | 1    | Clip-Tube (B8)                 |  |  |  |  |
| ❸13 | 95002-02100     | 2    | Clip-Tube (B10)                |  |  |  |  |
| ❸31 | 16950-ZM0-003   | 1    | Petcock ASM                    |  |  |  |  |
| ❸32 | 17702-ZM0-800   | 1    | Tube-Fuel                      |  |  |  |  |
| ❸33 | 95002-02080     | 1    | Clip-Tube (B8)                 |  |  |  |  |

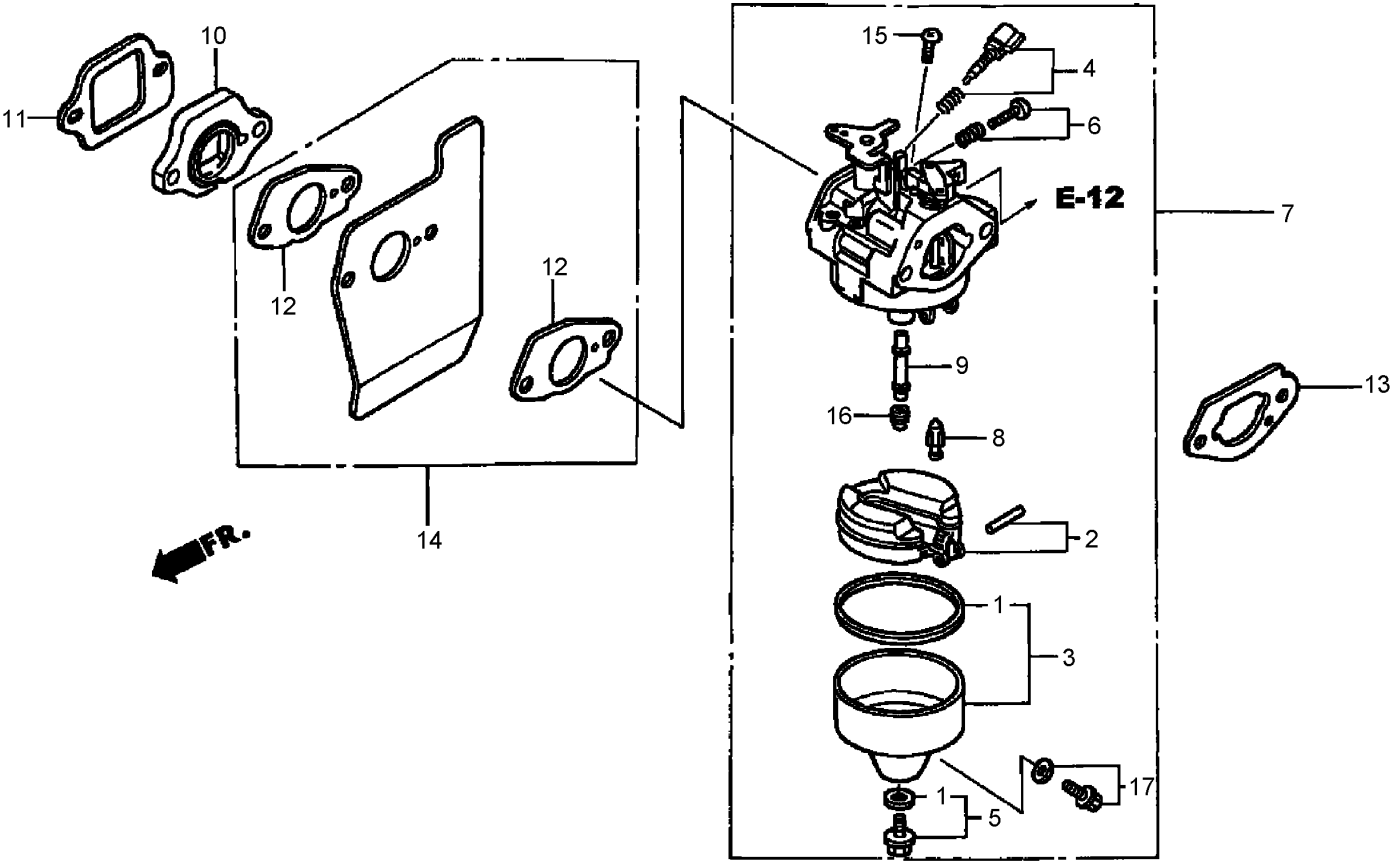 

**Carburetor Assembly**  
**Honda GCV160A NBL1**

| Ref | Part No.      | Qty. | Description               |
|-----|---------------|------|---------------------------|
| ❶1  | 16010-883-015 | 1    | Gasket Set                |
| ❶2  | 16013-ZL1-003 | 1    | Float Set                 |
| ❶3  | 16015-887-782 | 1    | Float Chamber Set         |
| ❶4  | 16016-ZG0-W00 | 1    | Screw Set                 |
| ❶5  | 16028-ZE0-005 | 1    | Screw Set                 |
| ❶6  | 16029-ZG0-901 | 1    | Screw Set (Throttle Stop) |
| ❶7  | 16100-ZM0-804 | 1    | Carburetor ASM (Bb62B E)  |
| ❶8  | 16155-ZM0-013 | 1    | Valve-Float               |
| ❶9  | 16166-ZM0-003 | 1    | Nozzle-Main               |
| ❶10 | 16211-ZL8-000 | 1    | Insulator-Carburetor      |
| ❶11 | 16212-ZL8-000 | 1    | Gasket-Insulator          |
| ❶12 | 16221-883-800 | 2    | Gasket-Carburetor         |
| ❶13 | 16228-ZL8-000 | 1    | Gasket-Carburetor         |


| Ref | Part No.       | Qty. | Description      |
|-----|----------------|------|------------------|
| ❶14 | 19650-ZM0-000  | 1    | Guide-Air        |
| ❶15 | 93500-05006-0H | 1    | Screw-Pan (5X6)  |
| ❶16 | 99101-124-0600 | 1    | Jet-Main (#60)   |
| ❶16 | 99101-124-0620 | 1    | Jet-Main (No.62) |
| ❶16 | 99101-124-0650 | 1    | Jet-Main (No.65) |
| ❶17 | 16024-ZE1-811  |      | Drain Screw Set  |

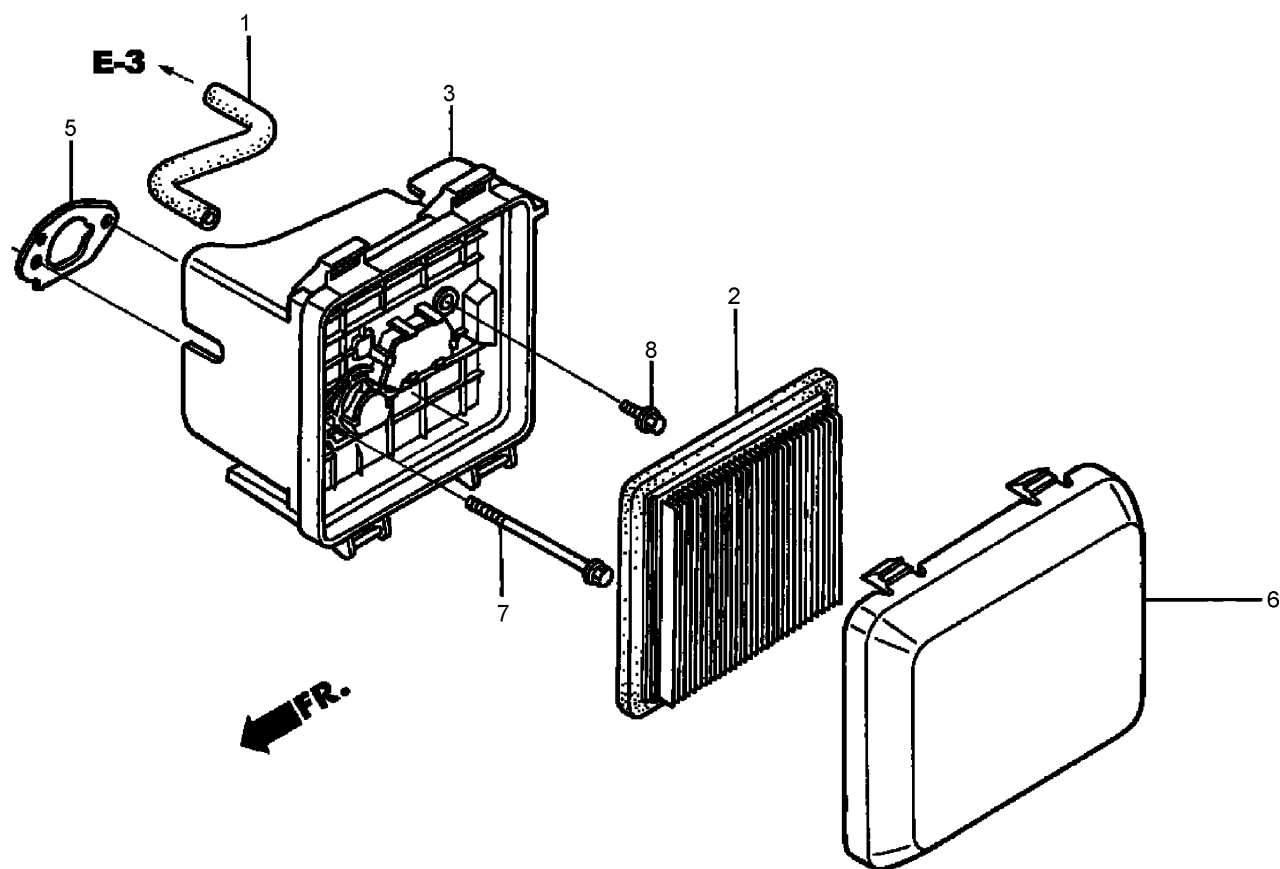 

# Air Cleaner Assembly

## Honda GCV160A NBL1

 
| Ref | Part No.       | Qty. | Description                 |  |  |  |  |
|-----|----------------|------|-----------------------------|--|--|--|--|
| ③1  | 15721-ZM0-000  | 1    | Tube-Breather               |  |  |  |  |
| ③2  | 17211-ZL8-013  | 1    | Element-Cleaner, Air        |  |  |  |  |
| ③3  | 17220-ZM0-000  | 1    | Air Cleaner Case ASM        |  |  |  |  |
| ③5  | 17228-ZM0-000  | 1    | Gasket-Cleaner, Air         |  |  |  |  |
| ③6  | 17231-Z0L-030  | 1    | Cover-Cleaner, Air          |  |  |  |  |
| ③7  | 90003-ZM0-000  | 2    | Bolt-Flange (6X86) (C T200) |  |  |  |  |
| ③8  | 95701-06014-08 | 1    | Bolt-Flange (6X14)          |  |  |  |  |

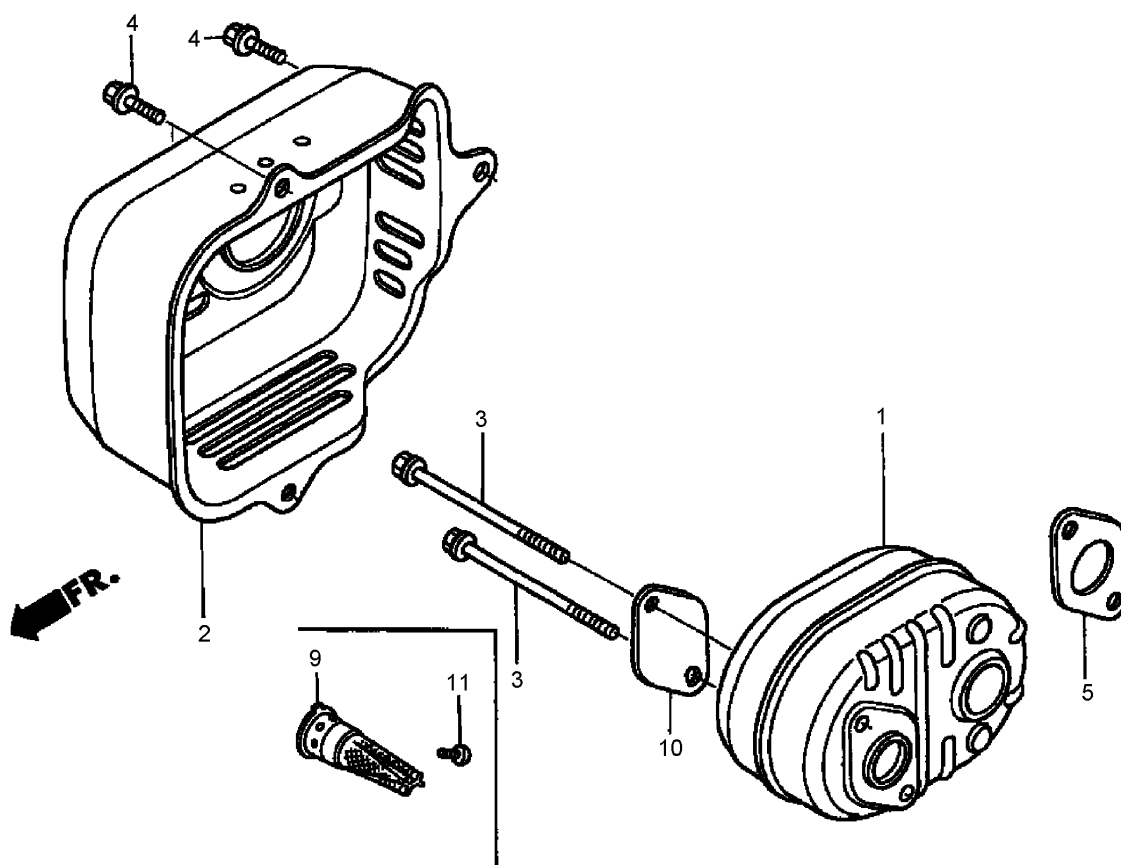

# Muffler Assembly

## Honda GCV160A NBL1

 
| Ref | Part No.      | Qty. | Description                 |  |  |  |  |
|-----|---------------|------|-----------------------------|--|--|--|--|
| ③1  | 18310-ZM0-000 | 1    | Muffler                     |  |  |  |  |
| ③2  | 18321-Z0L-J00 | 1    | Protector-Muffler           |  |  |  |  |
| ③3  | 90004-ZL8-000 | 2    | Bolt-Flange (6X79) (C T200) |  |  |  |  |
| ③4  | 90013-883-000 | 3    | Bolt-Flange (6X12) (C T200) |  |  |  |  |
| ③5  | 18381-ZL8-305 |      | Gasket-Muffler              |  |  |  |  |
| ③9  | 18350-ZL8-000 |      | Arrester-Spark              |  |  |  |  |
| ③10 | 18356-ZL8-000 |      | Plate-Number, Arrester      |  |  |  |  |
| ③11 | 90055-ZE1-000 |      | Screw-Tapping (4X6)         |  |  |  |  |

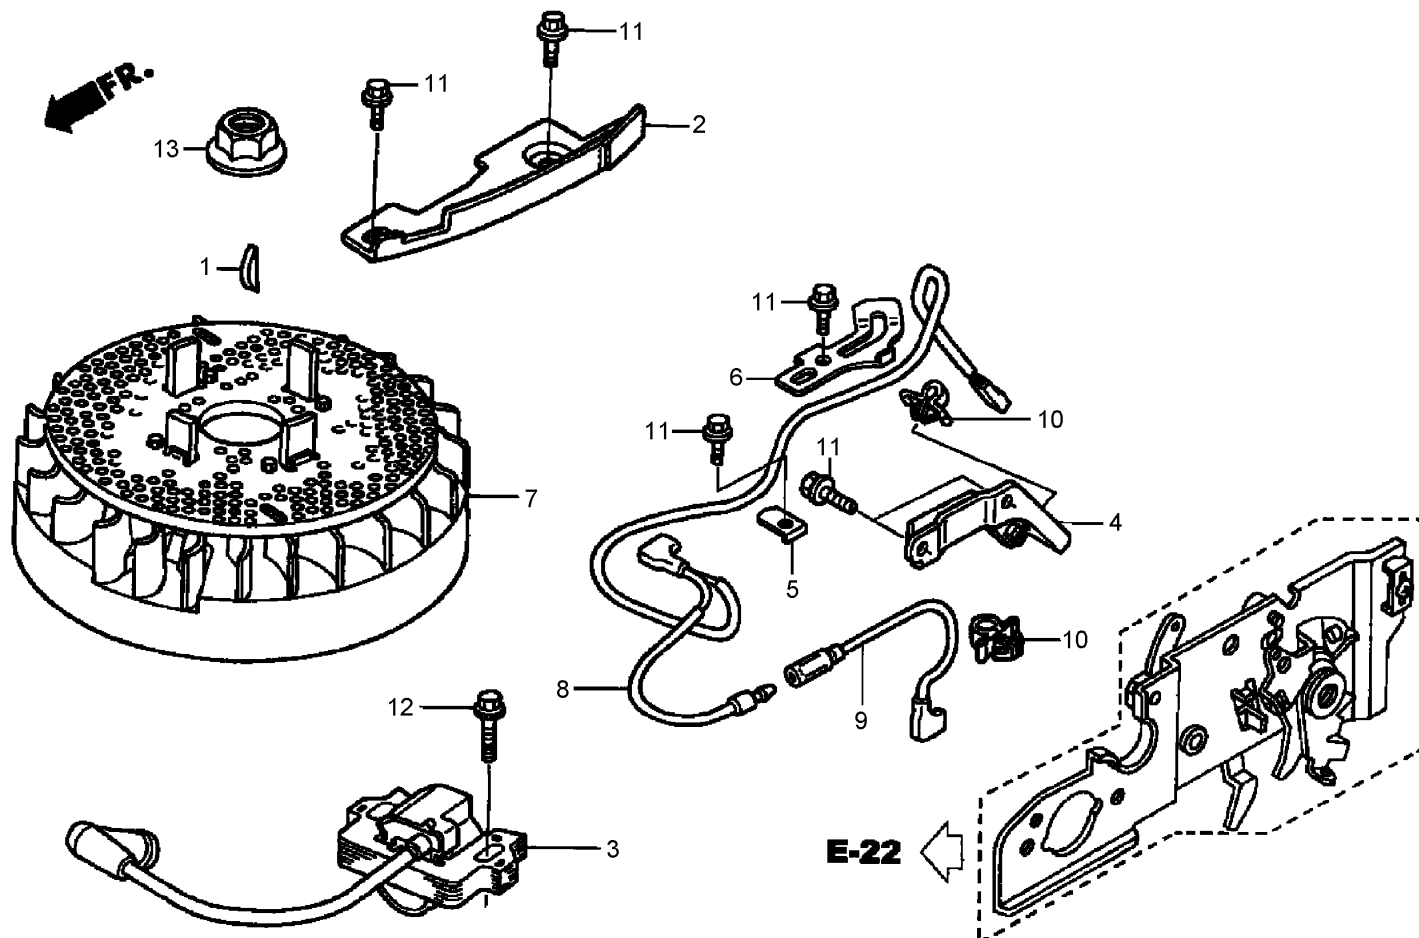

## Flywheel Assembly Honda GCV160A NBL1


| Ref | Part No.      | Qty. | Description                                             |
|-----|---------------|------|---------------------------------------------------------|
| ❶1  | 13331-357-000 | 1    | Key-Woodruff, Special (25X18)                           |
| ❷2  | 19612-ZM0-J20 | 1    | Plate-Side                                              |
| ❸3  | 30500-Z0J-003 | 1    | Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon) |
| ❹4  | 30547-Z0L-S00 | 1    | Clamp-Wire, Stop Switch                                 |
| ❺5  | 30548-ZL8-000 | 1    | Clamp-Wire, Stop Switch                                 |
| ❻6  | 30549-ZL8-000 | 1    | Clamp-Wire                                              |
| ❼7  | 31105-Z0J-010 | 1    | Flywheel ASM                                            |
| ❽8  | 32195-Z0L-S20 | 1    | Wire-Switch, Stop                                       |
| ❾9  | 32196-Z0L-S20 | 1    | Wire-Switch, Stop                                       |
| ❿10 | 51125-Z0L-003 | 2    | Holder-Wire (Fastex)                                    |
| ❿10 | 90681-959-003 | 2    | Clip A-Cable (Nifco)                                    |
| ❿11 | 90013-883-000 | 6    | Bolt-Flange (6X12) (C T200)                             |
| ❿12 | 90022-888-010 | 1    | Bolt-Flange (6X20) (C T200)                             |
 
| Ref | Part No.      | Qty. | Description         |
|-----|---------------|------|---------------------|
| ❿13 | 90201-878-003 | 1    | Nut-Special (14 Mm) |

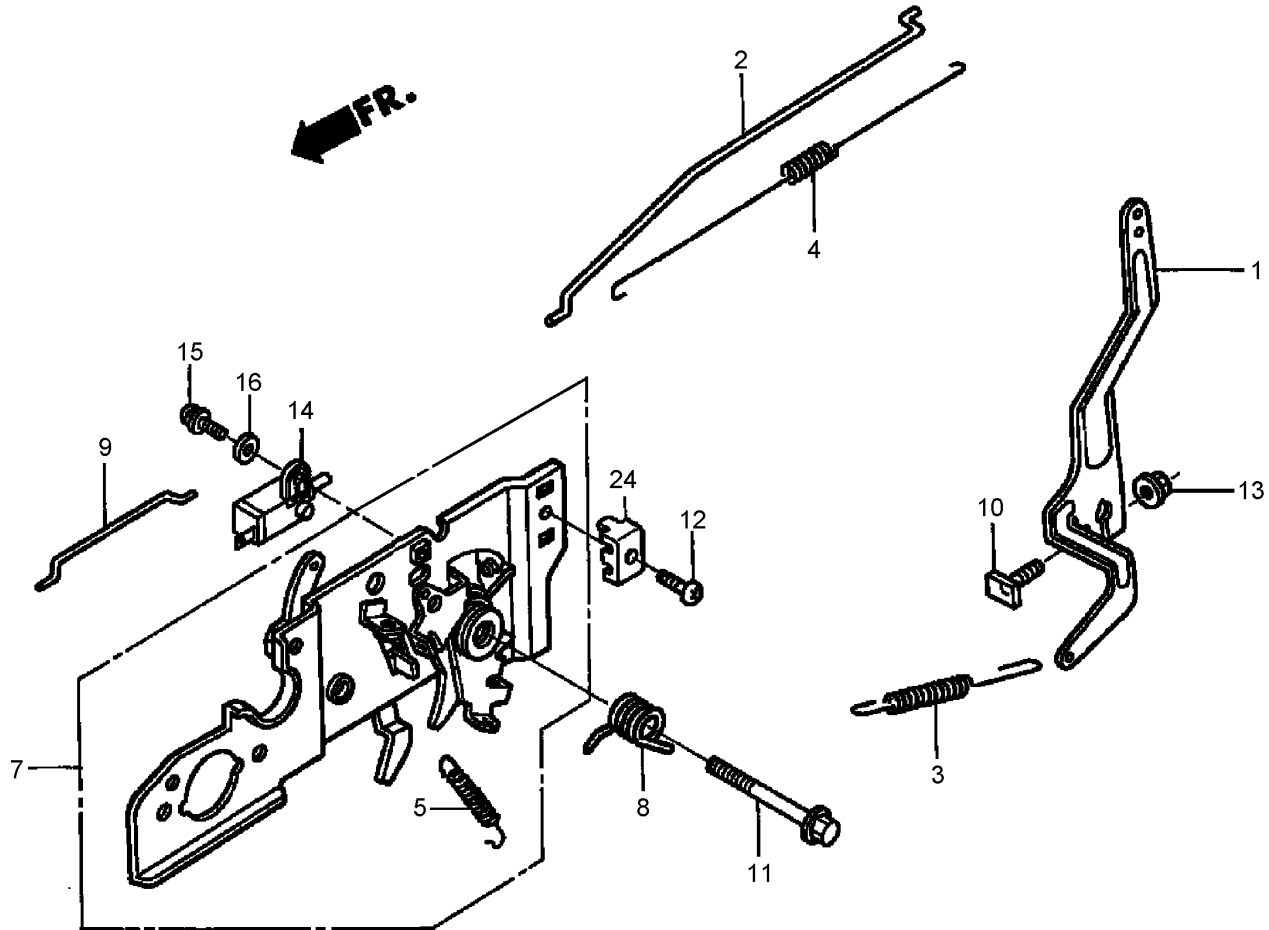


**Control Assembly**  
**Honda GCV160A NBL1**

| Ref | Part No.       | Qty. | Description                  | Ref | Part No.      | Qty. | Description        |
|-----|----------------|------|------------------------------|-----|---------------|------|--------------------|
| ❶1  | 16551-ZM0-010  | 1    | Arm-Governor                 | ❶16 | 94103-04000   | 1    | Washer-Plain (4Mm) |
| ❶2  | 16555-ZM0-000  | 1    | Rod-Governor                 | ❶24 | 16617-VG3-000 | 1    | Holder-Cable       |
| ❶3  | 16561-Z0L-000  | 1    | Spring-Governor              |     |               |      |                    |
| ❶4  | 16562-ZM0-000  | 1    | Spring-Return, Throttle      |     |               |      |                    |
| ❶5  | 16576-ZE7-300  | 1    | Spring-Lever                 |     |               |      |                    |
| ❶7  | 16580-ZM0-J22  | 1    | Base-Control                 |     |               |      |                    |
| ❶8  | 16593-ZM0-000  | 1    | Spring-Return, Control Lever |     |               |      |                    |
| ❶9  | 16674-ZM0-000  | 1    | Rod-Choke                    |     |               |      |                    |
| ❶10 | 90015-ZE5-010  | 1    | Bolt-Arm, Governor           |     |               |      |                    |
| ❶11 | 90016-ZM0-000  | 1    | Bolt-Flange (6X45) (Ct200)   |     |               |      |                    |
| ❶12 | 93500-05016-0A | 1    | Screw-Pan (5X16)             |     |               |      |                    |
| ❶13 | 94050-06000    | 1    | Nut-Flange (6 Mm)            |     |               |      |                    |
| ❶14 | 35120-ZL8-003  | 1    | Engine Stop Switch ASM       |     |               |      |                    |
| ❶15 | 93892-04012-00 | 1    | Screw-Washer (4X12)          |     |               |      |                    |

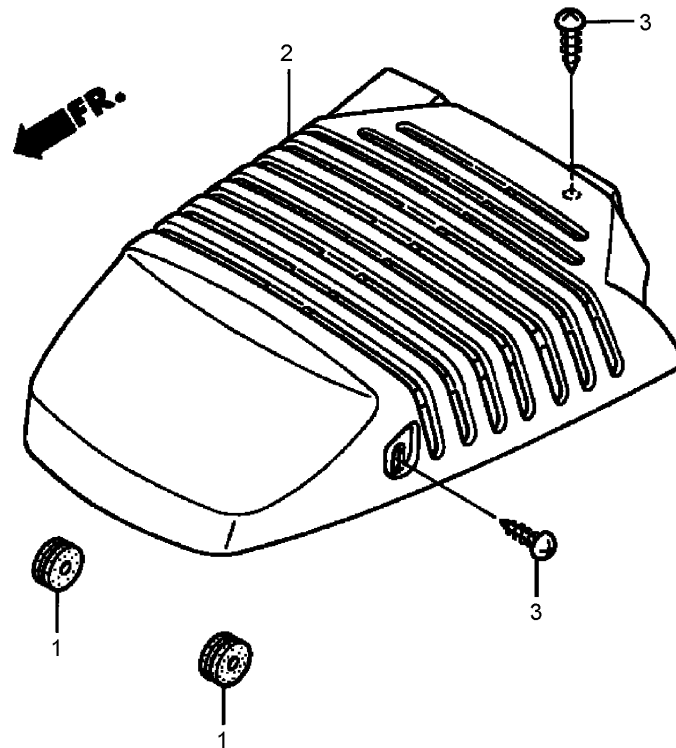 

# Top Cover Assembly Honda GCV160A NBL1

 [illegible]

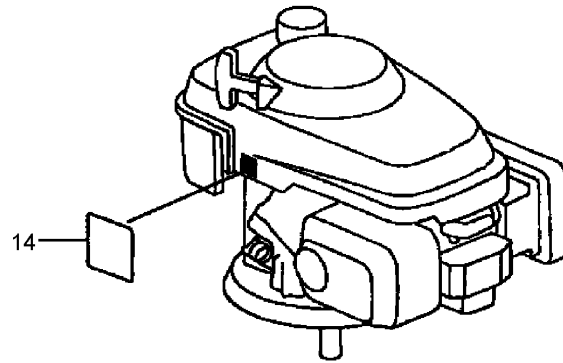

# Label Assembly

## Honda GCV160A NBL1

| Ref | Part No.      | Qty. | Description       |
|-----|---------------|------|-------------------|
| ③14 | 87594-VG3-010 | 1    | Mark-Caution, Oil |

# Attachments and Accessories

For 10797 - Insight Platinum Lawn Mower

| Product Name             | Model/Part |
|--------------------------|------------|
| Lawn Boy Paint .....     | 110-8800   |
| Replacement Bag .....    | 89815      |
| Rear Bag Kit .....       | 89913      |
| 21 Inch Blade .....      | 89914      |
| Cruise Control Kit ..... | 89919      |
| Air Filter .....         | 89928      |
| Spark Plug .....         | 89947      |

## NOTES

## NOTES

