



Z597-D Z Master[®]

With 72in TURBO FORCE[®] Side Discharge Mower

Model No. 74269 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Hood Assembly	 23
Caster and Z Stand Assembly	 5	Deck Connection Assembly	 24
Engine Frame, Console and Floor Pan Assembly	 6	Deck Assembly	 25
Seat and Roll-Over-Protection-System Assembly	 7	Deck Decal Assembly No. 107-7677	 27
Suspension Seat Assembly No. 106-9988	 8	Spindle Assembly No. 106-3217	 28
Roll-Over-Protection-System Assembly No. 106-7437	 9	Lever Assembly No. 106-3242	 29
Wheel and Brake Assembly	 10	Rubber Deflector Assembly No. 106-3249	 30
Motion Control Assembly	 11	Electrical Component Assembly	 31
Engine Mount Assembly	 12	Cylinder Assembly	 33
Wheel Pump Drive Assembly	 13	Crankshaft Assembly	 34
Deck Belt Drive Assembly	 14	Cylinder Head Assembly	 35
Cooling Pump Drive Assembly	 15	Injection Pump Assembly	 36
Hydraulic Assembly	 16	Camshaft Assembly	 37
Tank and Fuel Line Assembly	 18	Oil Pan Assembly	 38
Front and Rear Engine Cover Assembly	 20	Gear Cover Assembly	 39
Cooling System Assembly	 22	Gear Housing Assembly	 40
		Water Pump Assembly	 41
		Manifold Assembly	 42
		Starter Motor and Alternator Assembly	 43
		Gasket Assembly	 44

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

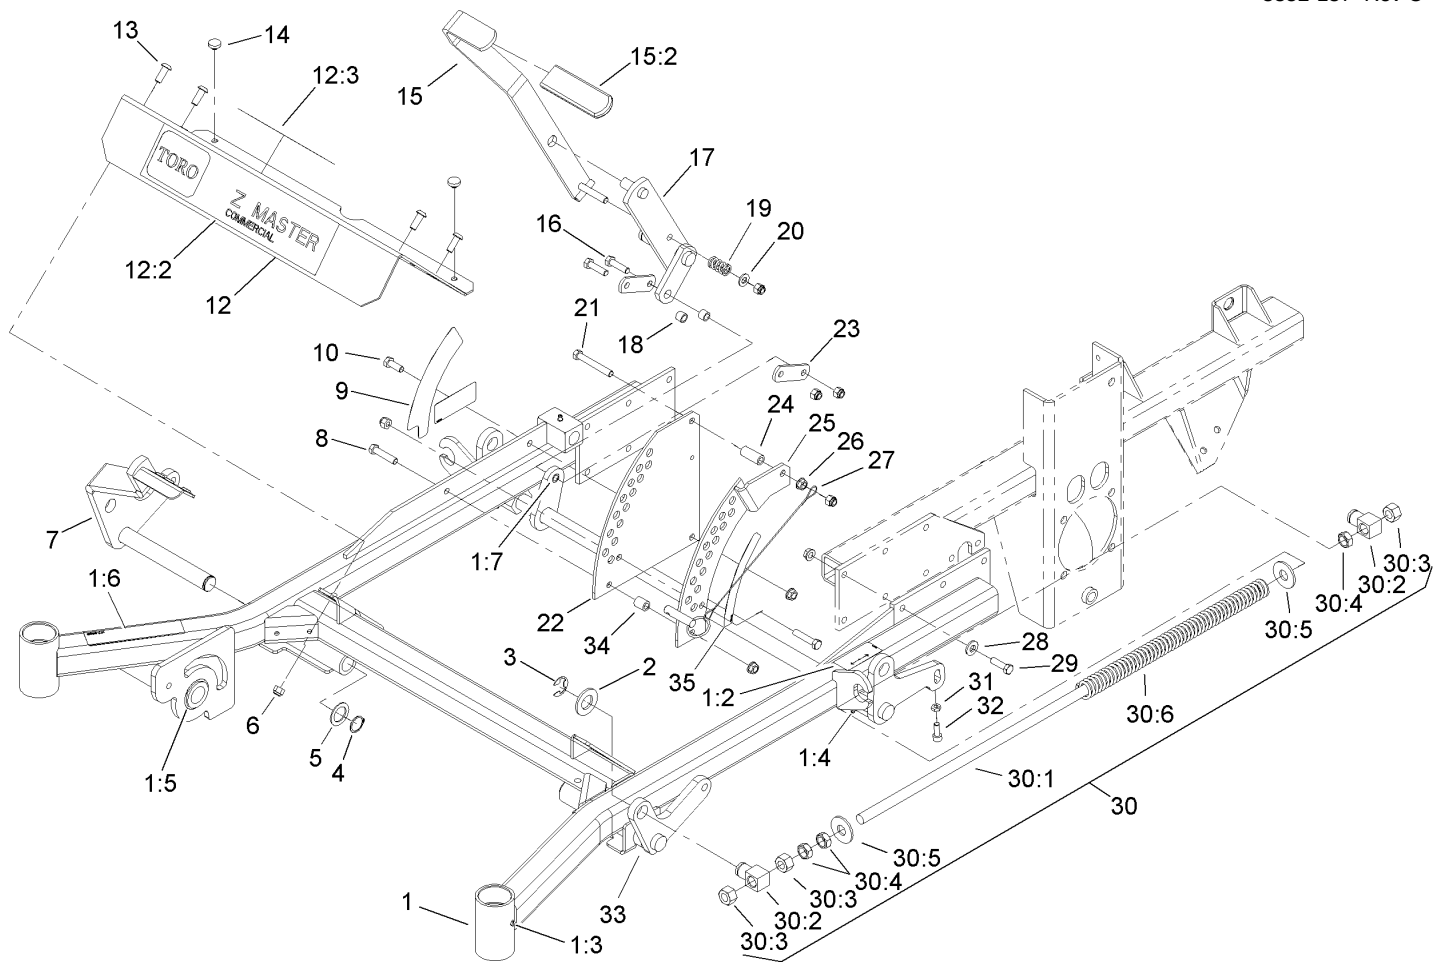

Front Frame Assembly


Ref	Part No.	Qty.	Description
1	106-8998	1	Frame ASM
1:2	107-1857	1	Decal-Brake, Parking
1:3	1-811010	2	Plug
1:4	302-19	5	Fitting-Grease
1:5	94-1291	2	Bushing
1:6	104-7759	1	Decal-Warning
1:7	103-1918	1	Bushing
2	3256-29	4	Washer-Flat
3	32151-103	5	Ring-Retaining, EXT
4	32151-29	2	Ring-Retaining
5	1-523157	2	Washer-Spacer
6	3296-39	9	Nut-Lock, NI
7	106-8983-01	1	RH Deck Lift ASM
8	323-9	2	Screw-HH
9	107-1860	1	Decal-Height, Deck
10	323-6	1	Screw-HH
12	106-9981	1	Footrest
12:2	106-7451	1	Decal
12:3	107-2112	1	Decal-Warning
13	3274-94	4	Screw-HSBH
14	1-513658	2	Bumper
15	103-2084	1	Lift Lever/Grip ASM
15:2	1-633295	1	Grip-Lever, Lift
16	323-29	2	Screw-HH

Ref	Part No.	Qty.	Description
17	103-2064-03	1	Arm-Lift, Deck
18	103-1918	2	Bushing
19	1-633325	1	Spring-Compression
20	3256-24	1	Washer-Flat
21	323-13	1	Screw-HH
22	1-633889-01	1	Plate-Lift, Deck
23	1-633068	2	Arm-Lift, Deck
24	1-633082	1	Bushing-Lever, Lift
25	1-632899-01	1	Plate-Lift, Deck
26	3290-357	15	Nut-HHF, Whiz
27	106-9951	1	Hitch Pin ASM
28	98-5975	12	Washer-Belleville
29	323-7	12	Screw-HH
30		2	Front Frame Spring ASM
30:1	1-633096	1	Rod-Lift, Deck
30:2	1-633441	2	Swivel-Deck Mount, Rear
30:3	3217-11	3	Nut-Hex
30:4	3218-6	3	Nut-Jam
30:5	3256-7	2	Washer-Flat
30:6	1-643015	1	Spring-Support, Deck
31	3218-2	2	Nut-Jam
32	3274-18	2	Screw-HSH
33	106-8984-01	1	LH Deck Lift ASM
34	1-633080	1	Bushing-Lever, Lift

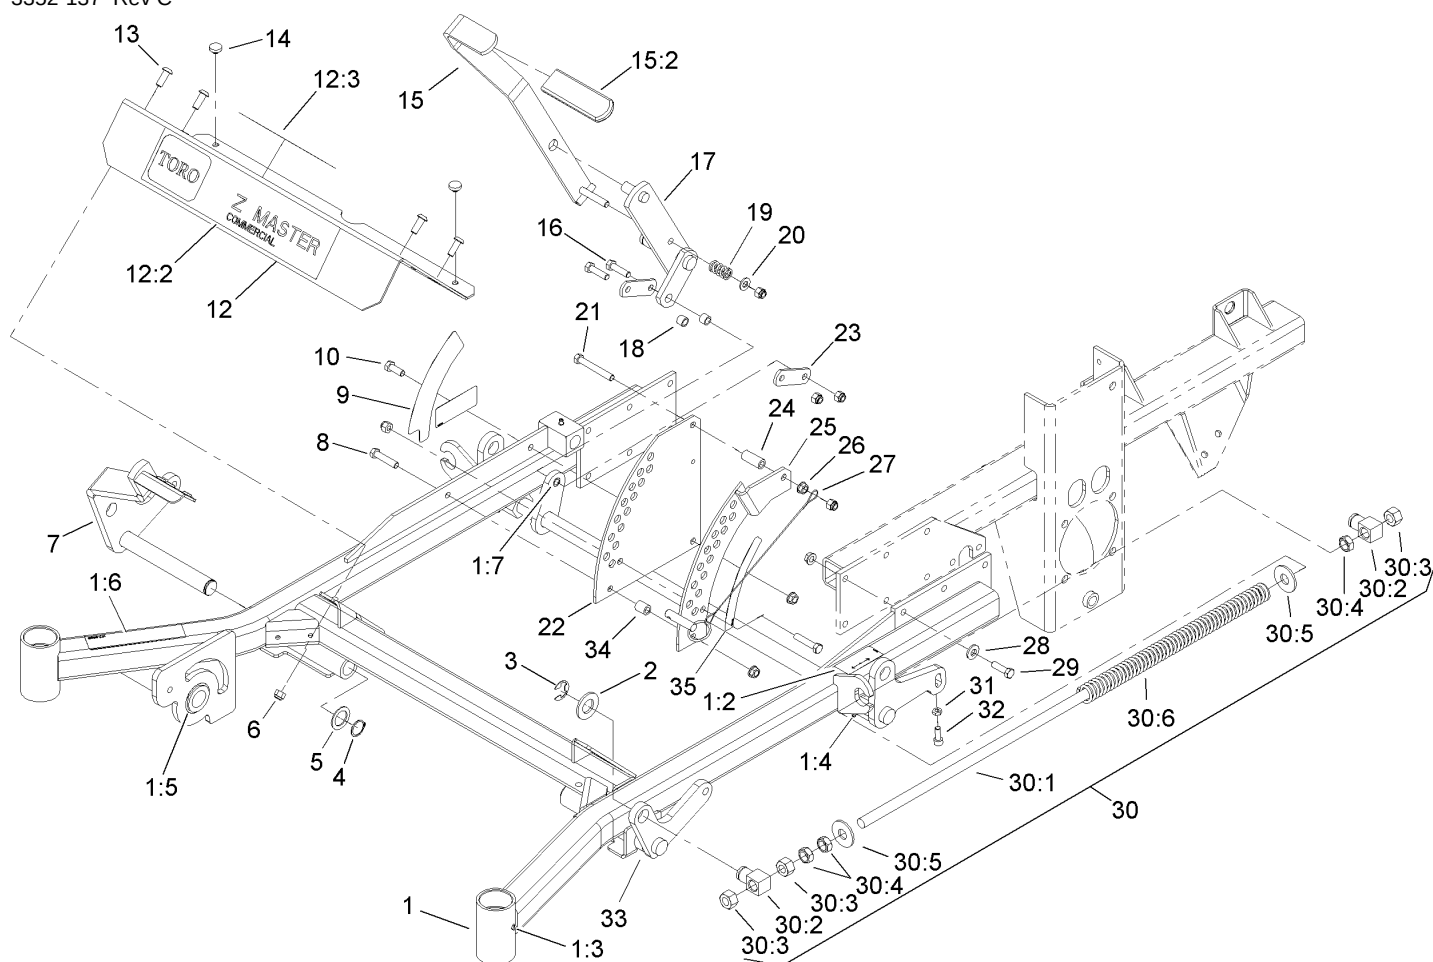

Front Frame Assembly (continued)


Ref	Part No.	Qty.	Description
35	107-1861	1	Decal-Height, Deck

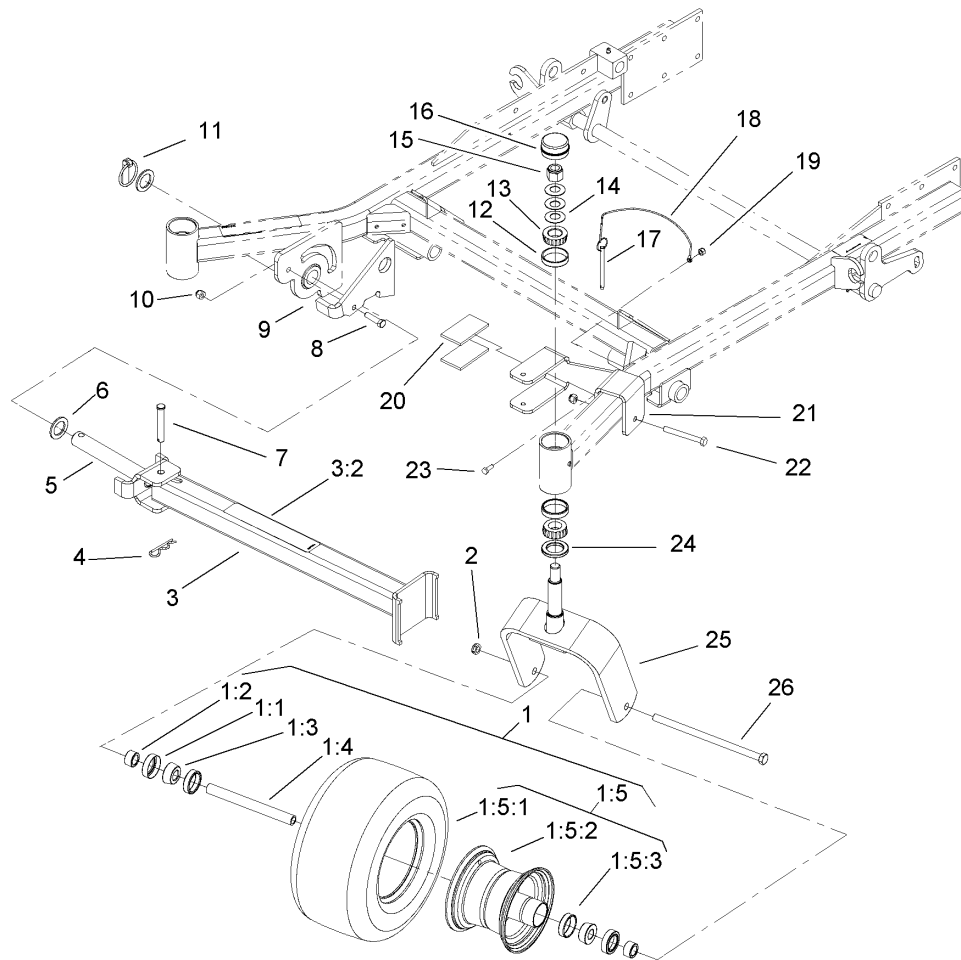

Caster and Z Stand Assembly

Ref	Part No.	Qty.	Description
1	1-644251	2	Caster Wheel ASM
1:1	1-633580	2	Seal-Bearing
1:2	1-633581	2	Spacer-Bearing
1:3	1-633585	2	Bearing-Cone, Taper
1:4	1-633959	1	Spacer-Caster, Front
1:5		1	Wheel And Tire ASM
1:5:1	1-523009	1	Tire
1:5:2	1-633987	1	Wheel
1:5:3	1-633584	2	Bearing-Cup
2	3296-45	2	Nut-Lock, NI
3	107-1874	1	Leg ASM
3:2	106-7464	1	Decal-Z Stand
4	3290-355	1	Pin-Hair
5	100-9692-01	1	Pivot Pin ASM
6	3-6781	2	Washer-Thrust
7	283-55	1	Pin-Clevis
8	323-8	1	Screw-HH
9	100-9686-01	1	Bracket-Latch
10	3296-39	2	Nut-Lock, NI
11	283-71	1	Pin-Lynch
12	254-72	4	Bearing-Cup, Tapered
13	254-94	4	Bearing-Cone, Tapered
14	1-633508	6	Washer-Bellville
15	3296-51	2	Nut-Lock, NI

Ref	Part No.	Qty.	Description
16	1-543513	2	Cap-Grease
17	105-1647	1	Pin-Hitch, Cotterless
18	100-9385	1	Lanyard-Nylon
19	3296-42	1	Nut-Lock, NI
20	100-6547	2	Cushion-Rubber
21	100-6542-01	1	Bracket-Cradle
22	323-20	1	Screw-HH
23	321-4	1	Screw-HH
24	1-543511	2	Seal-Grease
25	103-1474-01	2	Fork-Caster
26	325-39	2	Screw-HH

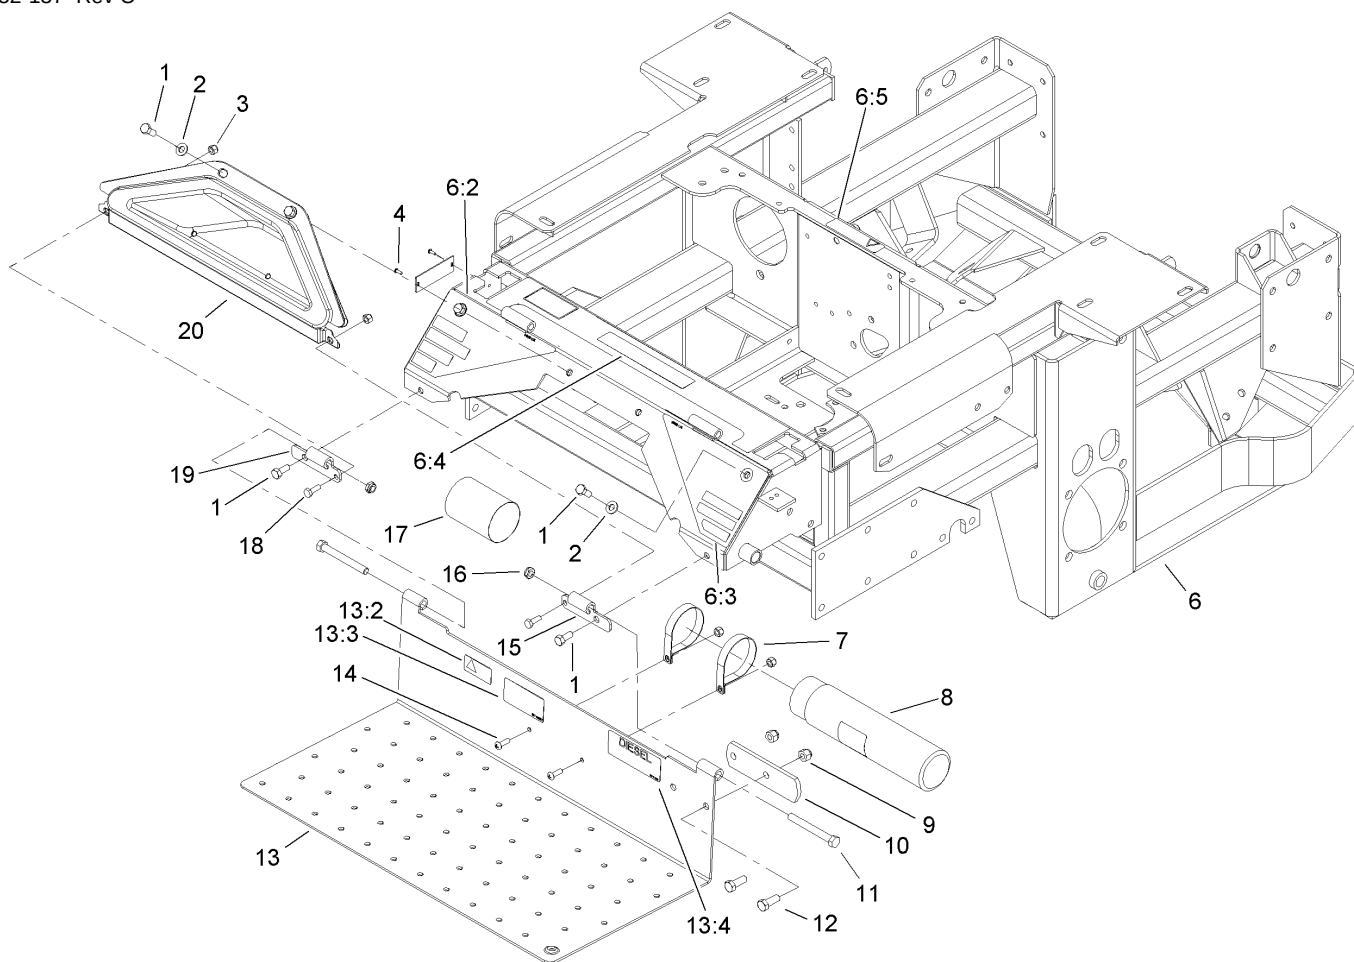


Engine Frame, Console and Floor Pan Assembly

Ref	Part No.	Qty.	Description
1	322-43	6	Screw-HH
2	3256-70	4	Washer-Flat
3	3296-42	4	Nut-Lock, NI
4	923786	2	Rivet
6	107-7699	1	Main Frame ASM
6:2	106-9989	1	Decal-Warning
6:3	106-7492	1	Decal-Danger
6:4	107-9866	1	Decal-Console, Top
6:5	98-5954	2	Decal-Cover, Missing
7	107-1865	2	R-Clamp
8	104-7050	1	Housing-Manual
9	3296-39	2	Nut-Lock, NI
10	1-633964-03	1	Stop-Brake, Park
11	323-20	2	Screw-HH
12	323-6	2	Screw-HH
13	107-7697	1	Floor Pan ASM
13:2	98-4387	1	Decal-Protection, Ear
13:3	107-1864	1	Decal-Location, Manual
13:4	107-7666	1	Decal-Diesel
14	3258-166	2	Screw-PRH
15	106-7488-03	1	Hinge-Floorpan, LH
16	3296-59	2	Nut-Lock, NI
17	104-7048	1	Cap-Housing
18	321-4	2	Screw-HH


Ref	Part No.	Qty.	Description
19	106-7489-03	1	Hinge-Floorpan, RH
20	106-7498	1	Pocket

7

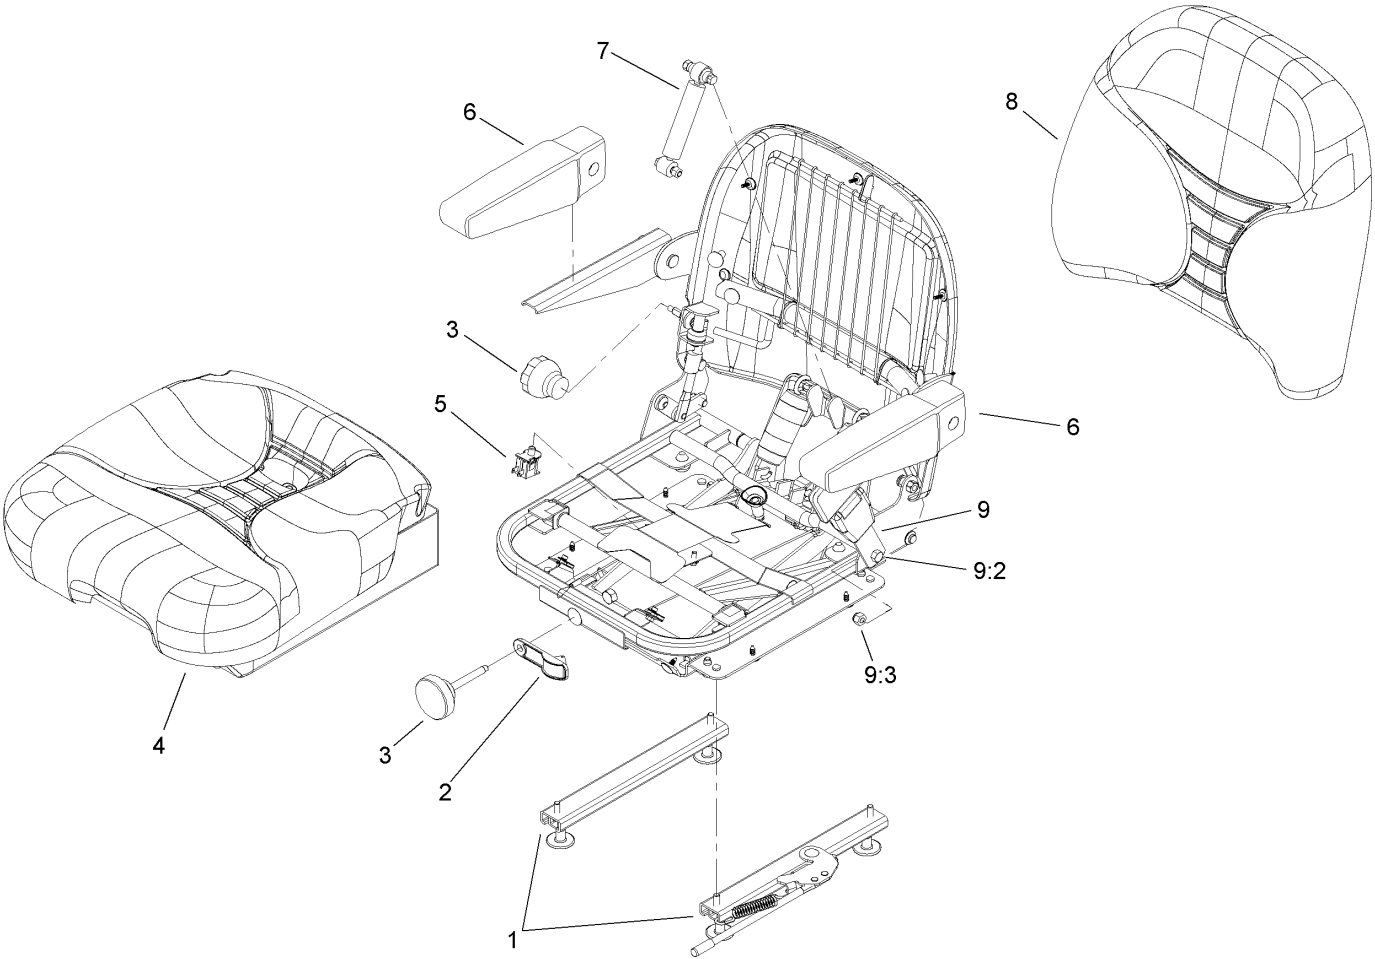


Suspension Seat Assembly No. 106-9988

Ref	Part No.	Qty.	Description				
1	107-1880	1	Seat Track Kit				
2	107-1885	1	Weight Indicator Kit				
3	107-1881	1	Knob Kit				
4	107-1883	1	Bottom Cushion Kit				
5	107-1886	1	Switch Kit				
6	107-1887	1	Armrest Kit				
7	107-1884	1	Shock Absorber Kit				
8	107-1882	1	Back Cushion Kit				
9	103-4469	1	Seatbelt Kit				
9:2	3212-4	2	Screw-HH				
9:3	3296-38	2	Nut-Lock, NI				

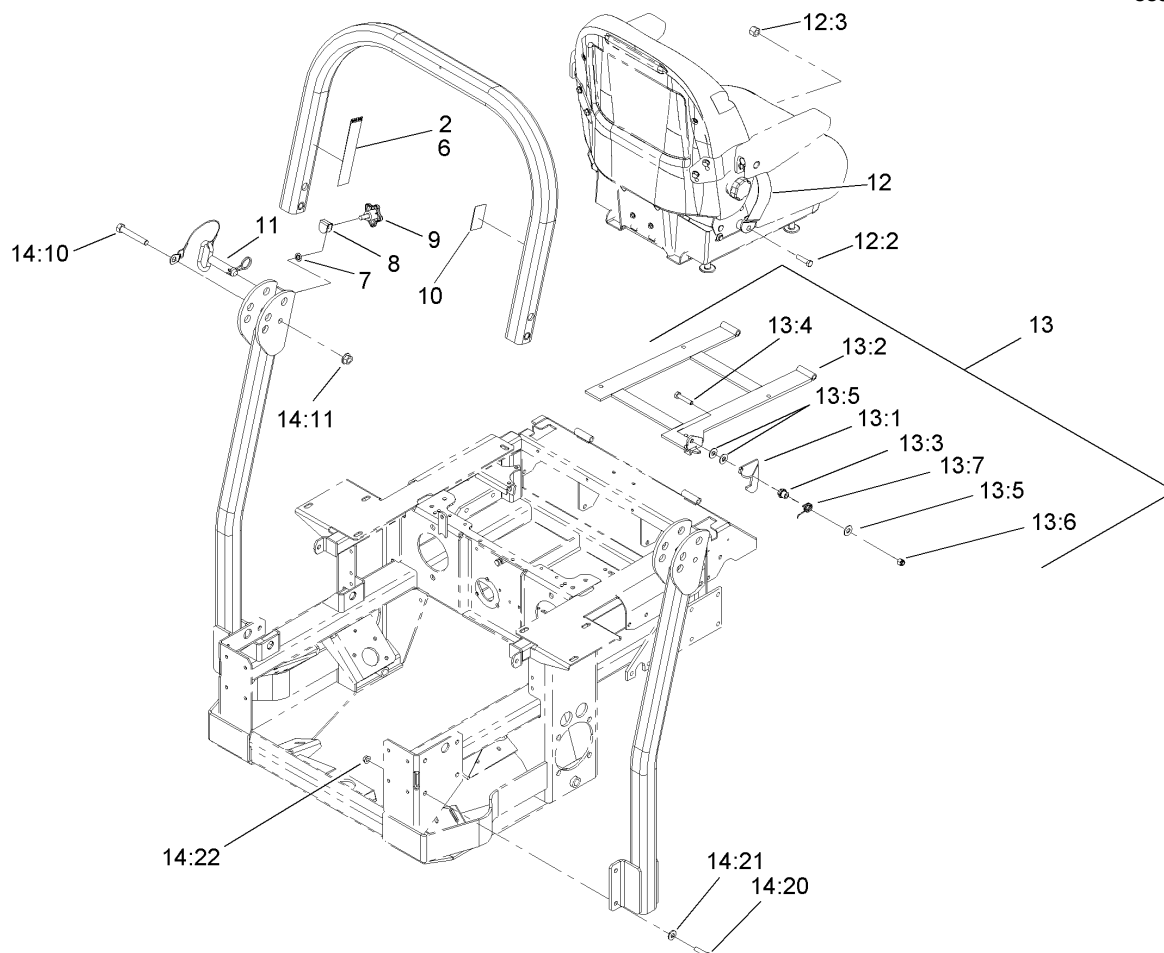


Roll-Over-Protection-System Assembly No. 106-7437

Ref	Part No.	Qty.	Description				
2	107-2102	1	Decal-Warning, Folding ROPS				
6	107-3069	1	Decal-Warning, Folding ROPS (Ce)				
7	107-3154	2	Nut-Push				
8	107-3124	2	Clip				
9	106-0887	2	Knob				
10	107-2101	1	Decal-ROPS				
11	103-4553	2	ROPS Fold Pin ASM				
12	103-4469	1	Seatbelt Kit				
12:2	3212-4	2	Screw-HH				
12:3	3296-38	2	Nut-Lock, NI				
13	103-5600	1	Seat Frame ASM				
13:1	103-5520	1	Catch-Latch, Single				
13:3	107-0075	1	Bushing-Latch, Seat				
13:4	323-10	1	Screw-HH				
13:5	3256-4	3	Washer-Flat				
13:6	3296-39	1	Nut-Lock, NI				
13:7	103-5519	1	Spring-Torsion, Latch				
14		1	Bag-Bolt				
14:10	325-13	2	Screw-HH				
14:11	32128-23	2	Nut-HF				
14:20	323-8	8	Screw-HH				
14:21	98-5975	8	Washer-Belleville				
14:22	3290-357	8	Nut-HHF, Whiz				

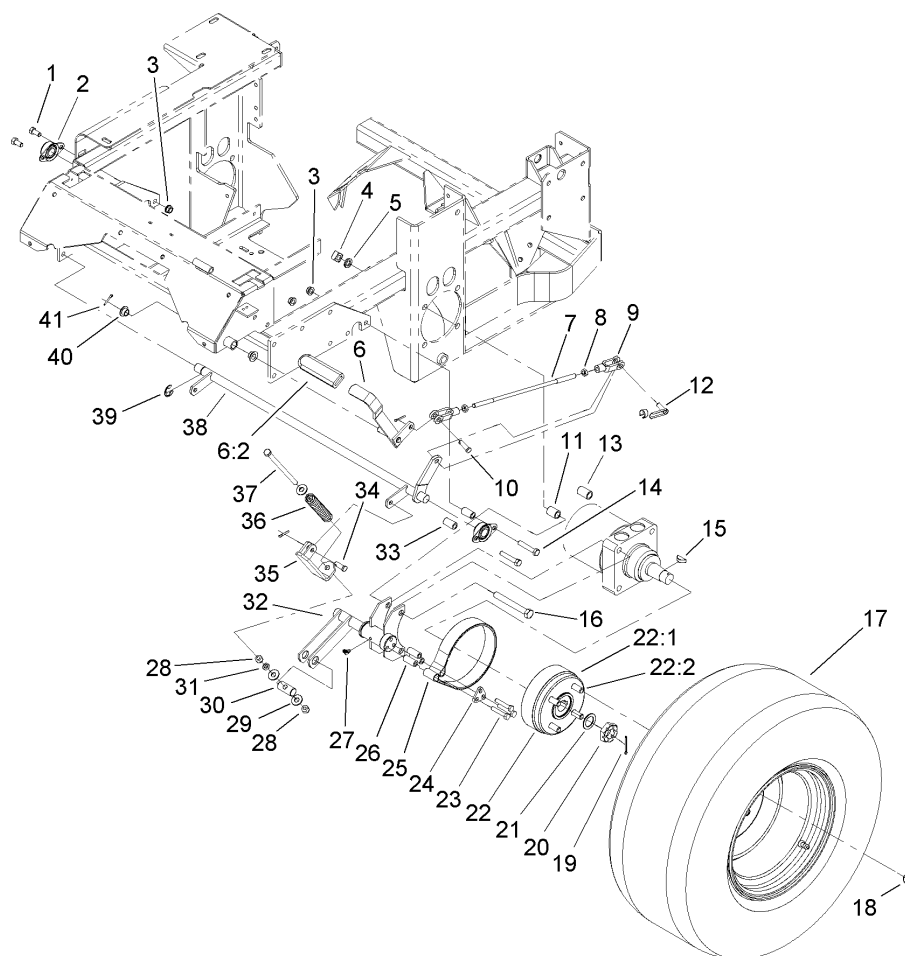


Wheel and Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	323-4	2	Screw-HH	22:2	1-633926	4	Stud-Wheel
2	1-633102	2	Bearing-Flange, Side	23	322-9	6	Screw-HH
3	3290-357	4	Nut-HHF, Whiz	24	103-0374	2	Retainer-Band, Brake
4	103-0131	8	Nut-Square	25	103-0355	2	Band-Brake
5	3253-7	8	Washer-Lock	26	103-0384	6	Spacer
6	103-0197	1	Brake Lever And Grip ASM	27	1481	2	Fitting-Grease
6:2	1-633268	1	Grip-Lever, Brake	28	3296-39	4	Nut-Lock, NI
7	103-1708	1	Rod-Brake	29	3256-4	6	Washer-Flat
8	3219-3	2	Nut-Hex	30	1-633144	2	Pin-Trunion
9	1-633131	2	Yoke-Linkage, Brake	31	3218-3	2	Nut-Jam
10	1-808285	1	Pin-Clevis	32	103-0844-03	2	Brake-Narrow
11	1-633060	4	Spacer-Wheel, Short	33	103-0051	2	Spacer-Retainer, Brake
12	103-2399	1	Pin-Spring, Clevis	34	1-808284	2	Pin-Clevis
13	1-633062	4	Spacer-Wheel, Long	35	103-1117-03	2	Linkage-Brake, Lower
14	323-10	2	Screw-HH	36	1-633454	2	Spring-Brake
15	3257-42	2	Key-Woodruff	37	323-58	2	Bolt-TAP, HH
16	325-20	8	Screw-HH	38	103-5243-03	1	Shaft-Brake
17	103-4962	2	Wheel And Tire ASM	39	32151-48	1	E-Ring
18	242-50	8	Nut-Lug	40	1-513140	2	Bearing-Control
19	1-806800	2	Pin-Cotter	41	3272-10	4	Pin-Cotter
20	1-809036	2	Nut-HH				
21	1-523157	2	Washer-Spacer				
22	103-0590	2	Hub And Wheel ASM				
22:1	103-0589	1	Wheel Hub ASM				

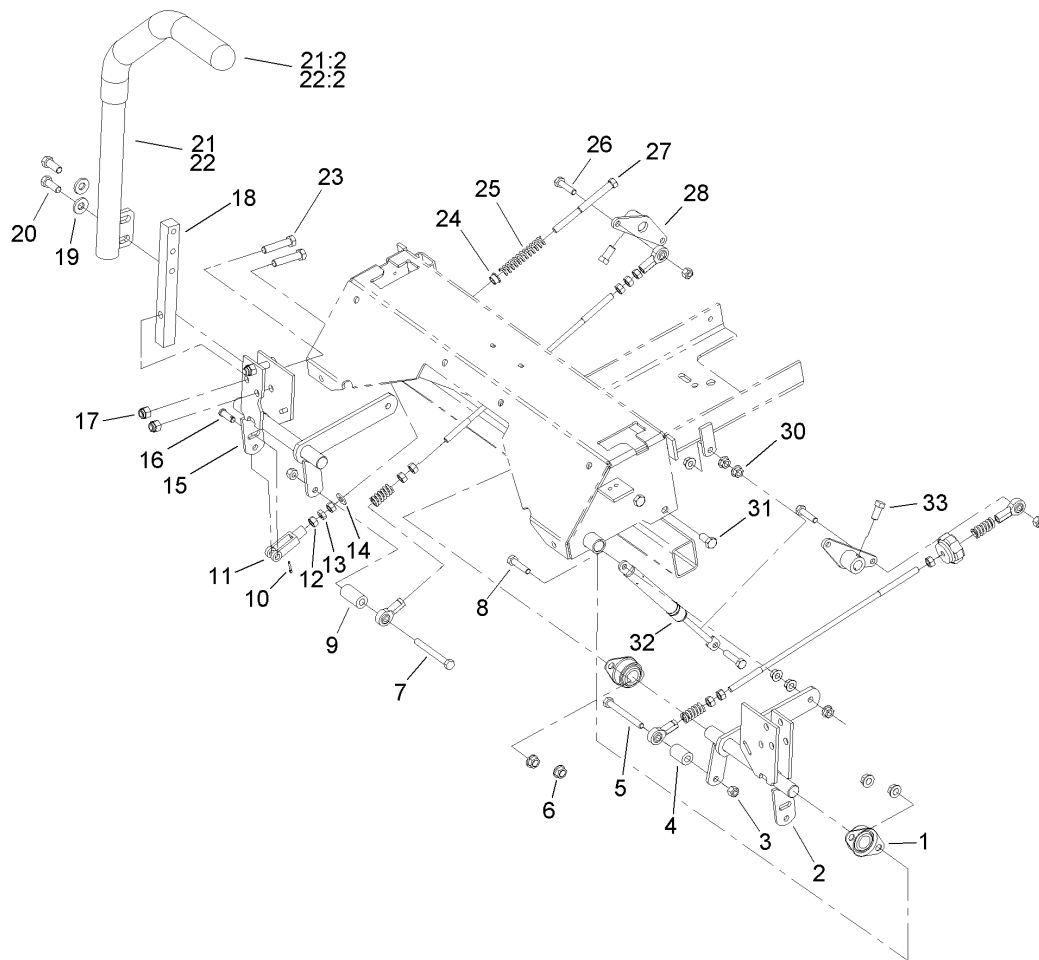

Motion Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-633102	4	Bearing-Flange, Side	23	323-9	6	Screw-HH
2	103-4787	1	Control-Motion, LH	24	1-603735	2	Bushing-Flanged
3	3296-29	4	Nut-Lock, NI	25	1-603807	2	Spring-Return, Neutral
4	103-1361	1	Spacer-Hydro Control, LH	26	322-6	4	Screw-HH
5	322-12	1	Screw-HH	27	1-603737	2	Bolt-Return, Neutral
6	3290-357	8	Nut-HHF, Whiz	28	103-0194-03	2	Arm-Control, Hydro
7	322-14	1	Screw-HH	30	32128-20	12	Nut-HF
8	1-403180	4	Screw-HH	31	323-4	8	Screw-HH
9	103-5192	1	Spacer-Control, HYD	32	103-4079	2	Damper-Control, Motion
10	3272-5	2	Pin-Cotter	33	1-803022	2	Screw-Set
11	1-303105	2	Yoke-Adjustable				
12	3219-2	4	Nut-Hex				
13	3220-2	2	Nut-Jam				
14	3256-2	2	Washer-Flat				
15	103-4788	1	Control-Motion, RH				
16	1-808280	2	Pin-Clevis				
17	3296-39	6	Nut-Lock, NI				
18	103-0407	2	Arm-Shaft, Control				
19	98-5975	4	Washer-Belleville				
20	323-6	4	Screw-HH				
21	106-9983	1	RH Lever ASM				
21:2	106-9987	1	Grip-Control, Motion				
22	106-9982	1	LH Lever ASM				
22:2	106-9987	1	Grip-Control, Motion				

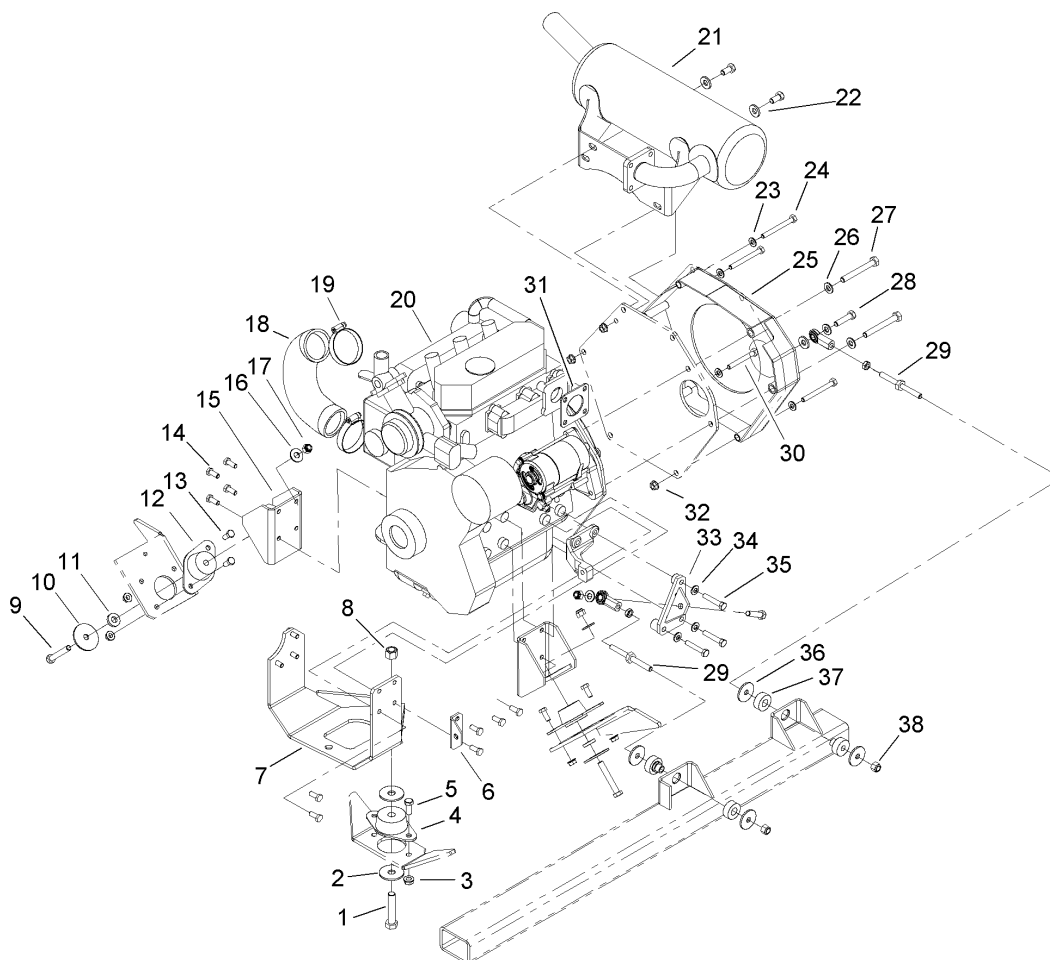

Engine Mount Assembly

Ref	Part No.	Qty.	Description
1	325-10	1	Screw-HH
2	86-1990	2	Washer
3	3290-357	2	Nut-HHF, Whiz
4	103-1022	1	Isolator-Rear
5	323-5	2	Screw-HH
6	103-3908	1	Bracket-Ground
7	103-0870-03	1	Rear Engine Mount ASM
8	3296-23	1	Nut-Lock, NI
9	323-12	2	Screw-HH
10	83-1040	2	Washer-Flat
11	66-6480	2	Washer
12	103-2613	2	Isolator-Side
13	322-3	4	Screw-HH
14	33114-020	15	Screw-HH
15	103-0839-03	2	LH And RH Engine Mount ASM
16	3256-4	8	Washer-Flat
17	3296-39	3	Nut-Lock, NI
18	103-0921	1	Hose
19	2412-42	2	Clamp-Hose
20	103-0888	1	Engine-Daihatsu
21	103-2592	1	Muffler Kit
22	98-5975	3	Washer-Belleville
23	3256-23	4	Washer-Flat
24	322-14	3	Screw-HH


Ref	Part No.	Qty.	Description
25	103-3573-03	1	Cover-Flywheel
26	3256-24	4	Washer-Flat
27	56-2150	2	Screw-HH
28	323-8	2	Screw-HH
29	103-3745	2	Ball Joint Link ASM
30	322-12	1	Screw-HH
31	103-1385	1	Gasket-Muffler
32	32128-20	10	Nut-HF
33	103-3556-03	1	Bracket-Engine, Front
34	1-303334	3	Washer-Spring
35	33114-045	3	Screw-HH
36	93-6099	4	Washer
37	103-3568	2	Isolator-Link
38	3296-6	2	Nut-Lock

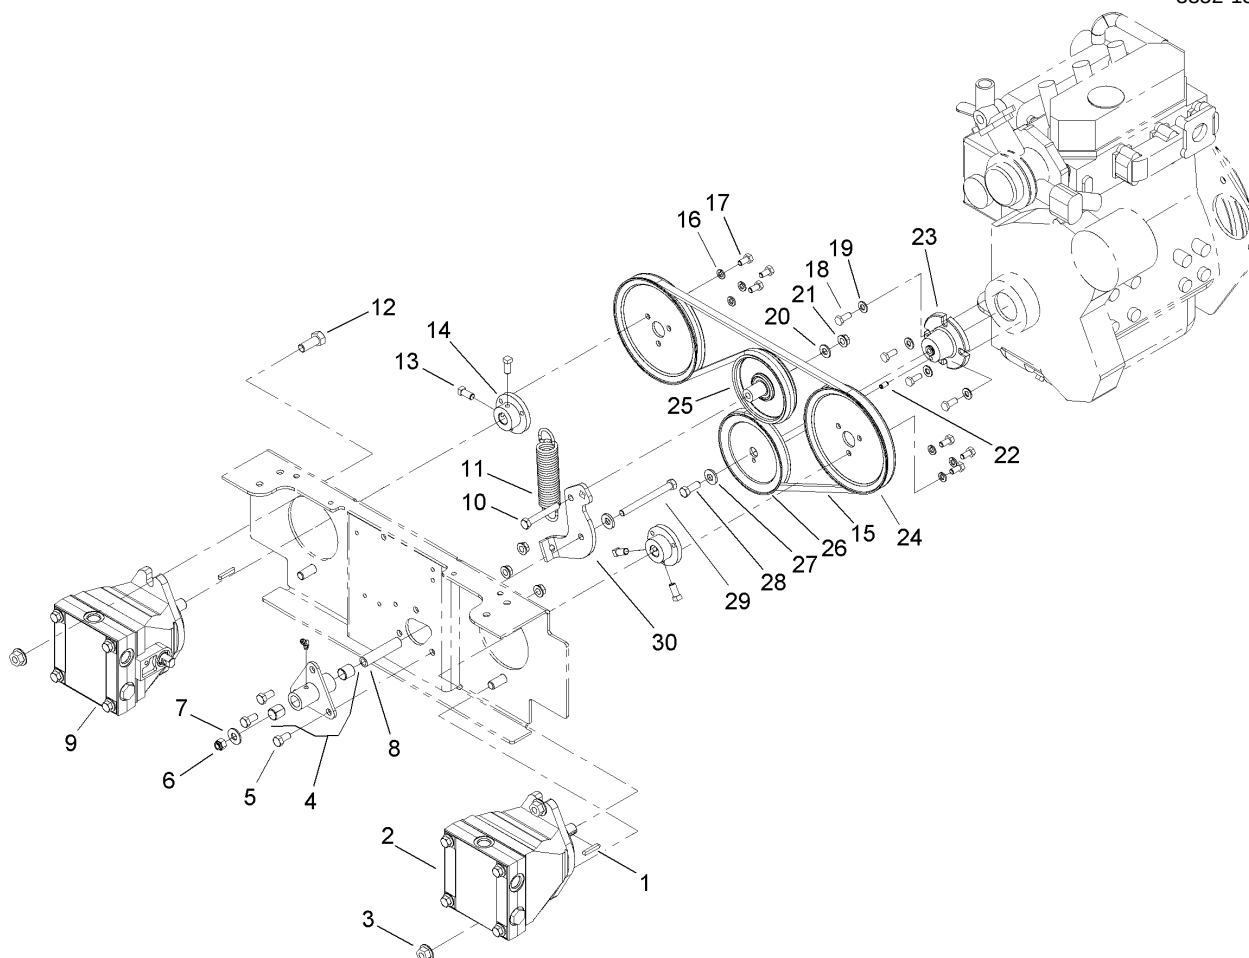

Wheel Pump Drive Assembly

Ref	Part No.	Qty.	Description
1	103-2739	2	Key
2	103-2978	1	Pump-Hydro, LH
3	32128-49	4	Nut-HHF
4	103-4467	1	Pump Idler ASM
5	323-4	3	Screw-HH
6	3296-39	1	Nut-Lock, NI
7	3256-4	1	Washer-Flat
8	103-0919	1	Bushing-Tightener, Pivot
9	103-2979	1	Pump-Hydro, RH
10	323-12	1	Screw-HH
11	103-1767	1	Spring-Extension
12	325-5	4	Screw-HH
13	1-803050	4	Screw-Set
14	103-1471	2	Hub-Pump
15	107-7724	1	Belt-V
16	1-805005	6	Washer-Lock
17	322-2	6	Screw-HH
18	33114-020	4	Screw-HH
19	3256-23	4	Washer-Flat
20	3256-24	1	Washer-Flat
21	3290-357	4	Nut-HHF, Whiz
22	103-1459	1	Pin-Roll
23	103-1421	1	Hub-Drive, Pump
24	103-1472	2	Sheave-Pump


Ref	Part No.	Qty.	Description
25	103-4464	1	Idler-Pump
26	103-5164	1	Sheave-Engine
27	98-5975	2	Washer-Belleville
28	323-6	1	Screw-HH
29	323-16	1	Screw-HH
30	103-4463-03	1	Arm-Tightener, Pump

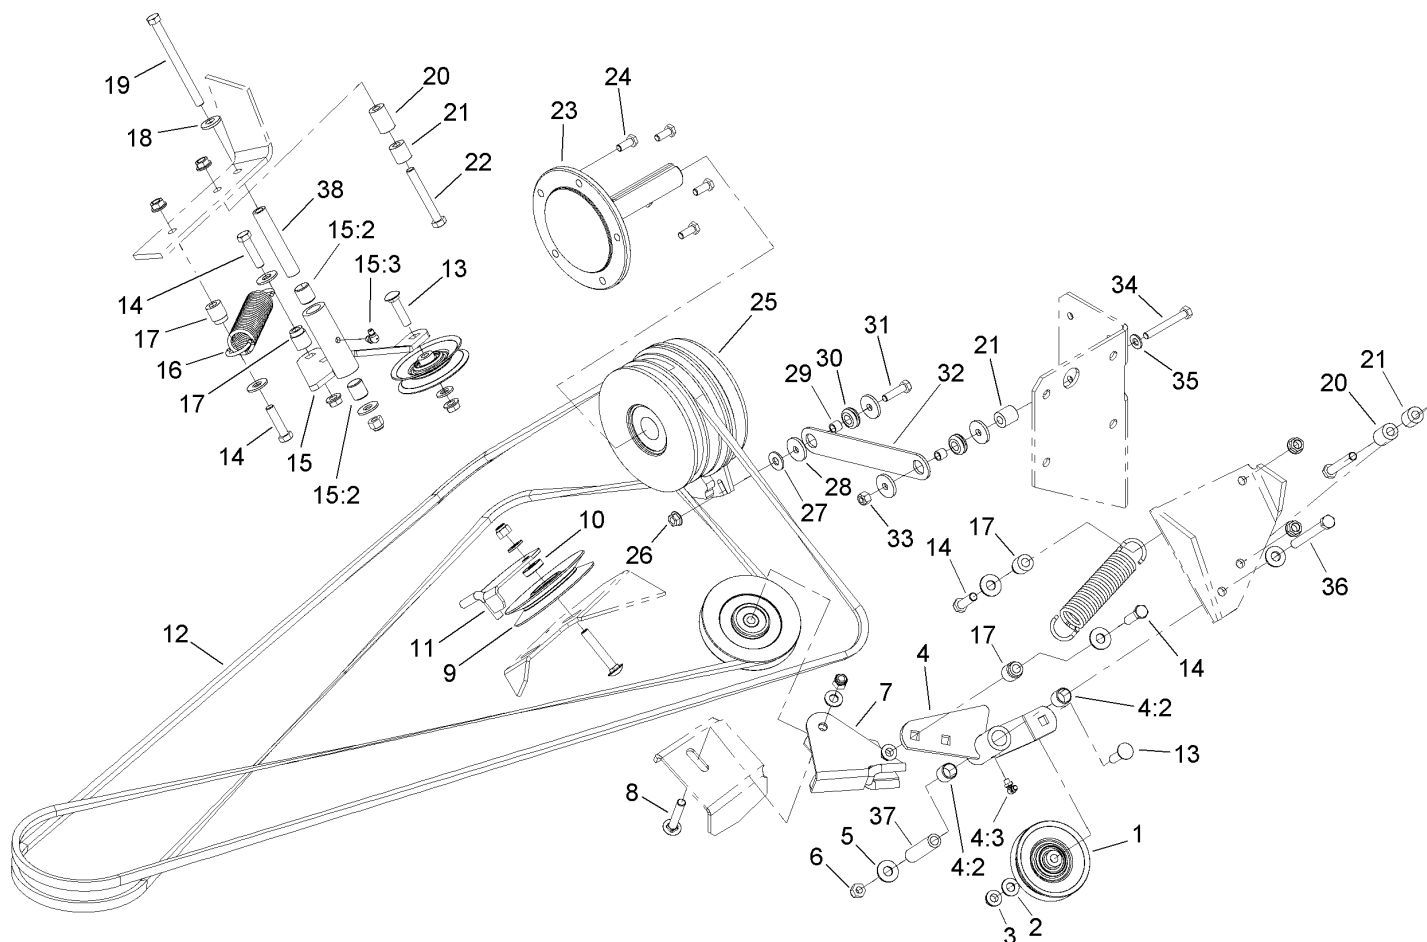

Deck Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	103-0983	2	Sheave
2	3256-24	4	Washer-Flat
3	3290-357	7	Nut-HHF, Whiz
4	107-9851	1	LH Idler ASM
4:2	1-513034	2	Sleeve-Bearing
4:3	302-40	1	Fitting-Grease
5	3256-4	6	Washer-Flat
6	3296-39	4	Nut-Lock, NI
7	103-4011-03	1	Guard-Belt Sheave, LH
8	3231-40	2	Bolt-CARR
9	103-0984	2	Sheave
10	103-3186	1	Spacer-Bracket, Guide
11	103-4039-03	1	Guard-Belt Sheave, RH
12	107-7738	2	Belt-V
13	3231-4	2	Screw-CARR
14	323-9	4	Screw-HH
15	107-9861	1	RH Idler ASM
15:2	1-513034	2	Sleeve-Bearing
15:3	302-40	1	Fitting-Grease
16	103-1767	2	Spring-Extension
17	103-1503	4	Spacer-Tightener, Belt
18	98-5975	2	Washer-Belleville
19	323-23	1	Screw-HH
20	103-1361	2	Spacer-Hydro Control, LH


Ref	Part No.	Qty.	Description
21	103-0193	3	Spacer-Strap, Clutch
22	323-13	2	Screw-HH
23	103-0286	1	Shaft-Stub
24	33114-020	5	Screw-HH
25	103-0083	1	Clutch ASM
26	32128-20	1	Nut-HF
27	3256-3	1	Washer-Flat
28	1-613235	4	Washer
29	1-633545	2	Spacer
30	1-633630	2	Grommet-Brake
31	322-6	1	Screw-HH
32	103-0192-03	1	Strap-Clutch / Brake
33	3296-29	1	Nut-Lock, NI
34	322-12	1	Screw-HH
35	3256-23	1	Washer-Flat
36	323-16	1	Screw-HH
37	103-0919	1	Bushing-Tightener, Pivot
38	103-0040	1	Bushing-Tightener, Pivot

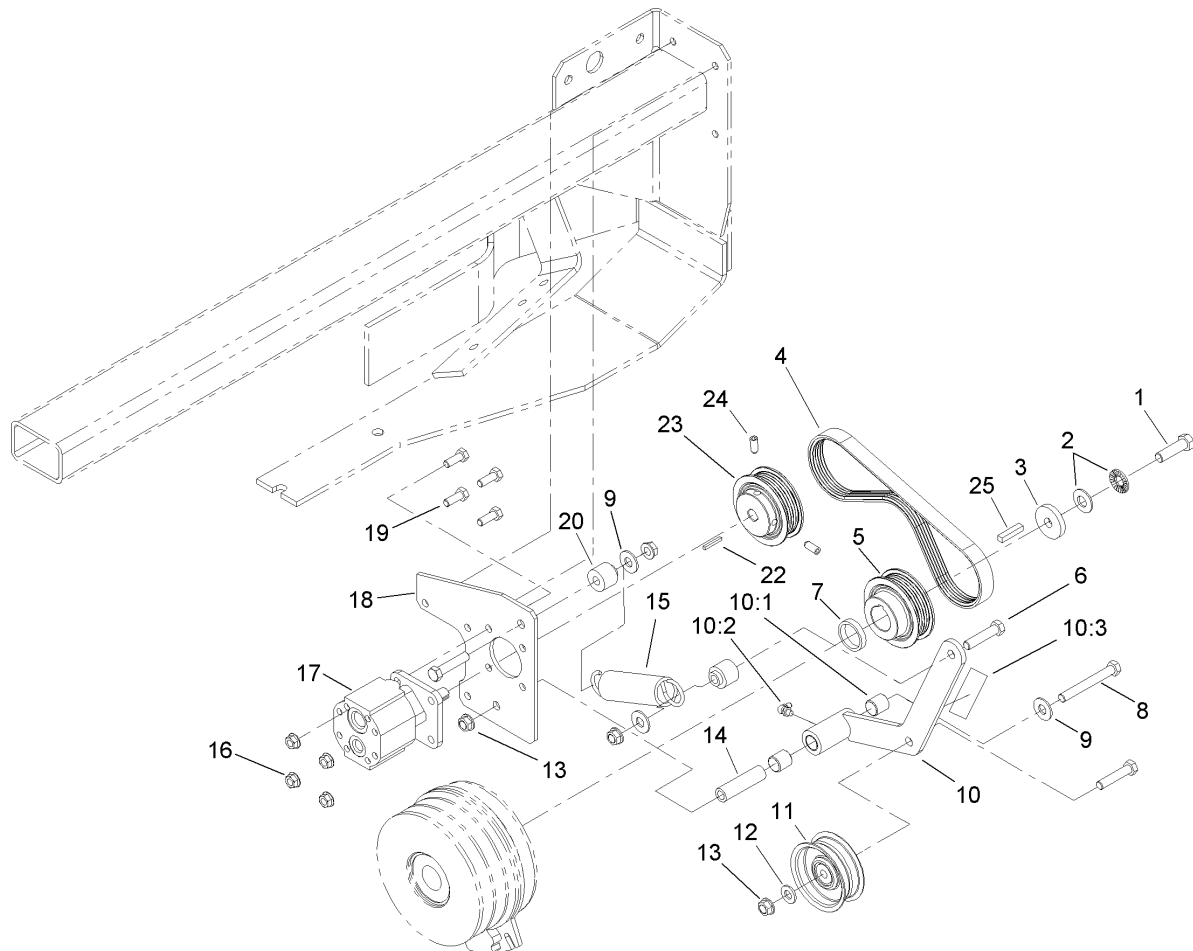

Cooling Pump Drive Assembly

Ref	Part No.	Qty.	Description
1	3212-6	1	Screw-HH
2	1-603610	2	Washer-Spring
3	1-543610	1	Washer-Clutch
4	107-7739	1	Belt-Poly V
5	103-1339	1	Sheave-5 Rib
6	323-9	3	Screw-HH
7	103-1422	1	Spacer-Pump Drive, Fan
8	323-14	1	Screw-HH
9	3256-4	3	Washer-Flat
10	107-9877	1	Wheel Pump Tension ASM
10:1	1-513034	2	Sleeve-Bearing
10:2	302-40	1	Fitting-Grease
10:3	98-1977	1	Decal-Warning
11	1-633167	1	Sheave-Idler
12	3256-24	1	Washer-Flat
13	3290-357	4	Nut-HHF, Whiz
14	1-603384	1	Bushing-Pivot, Idler
15	1-603414	1	Spring-Extension
16	32128-20	4	Nut-HF
17	103-7431	1	Pump-Fan, Cooling
18	103-1299-03	1	Plate-Mating, Fan Pump
19	322-4	4	Screw-HH
20	103-1575	2	Spacer-Spring, Fan Pump
22	32150-1	1	Key-Square


Ref	Part No.	Qty.	Description
23	103-1338	1	Sheave-5 Rib
24	3246-6	2	Screw-Set, HSH
25	13-2840	1	Key-Square

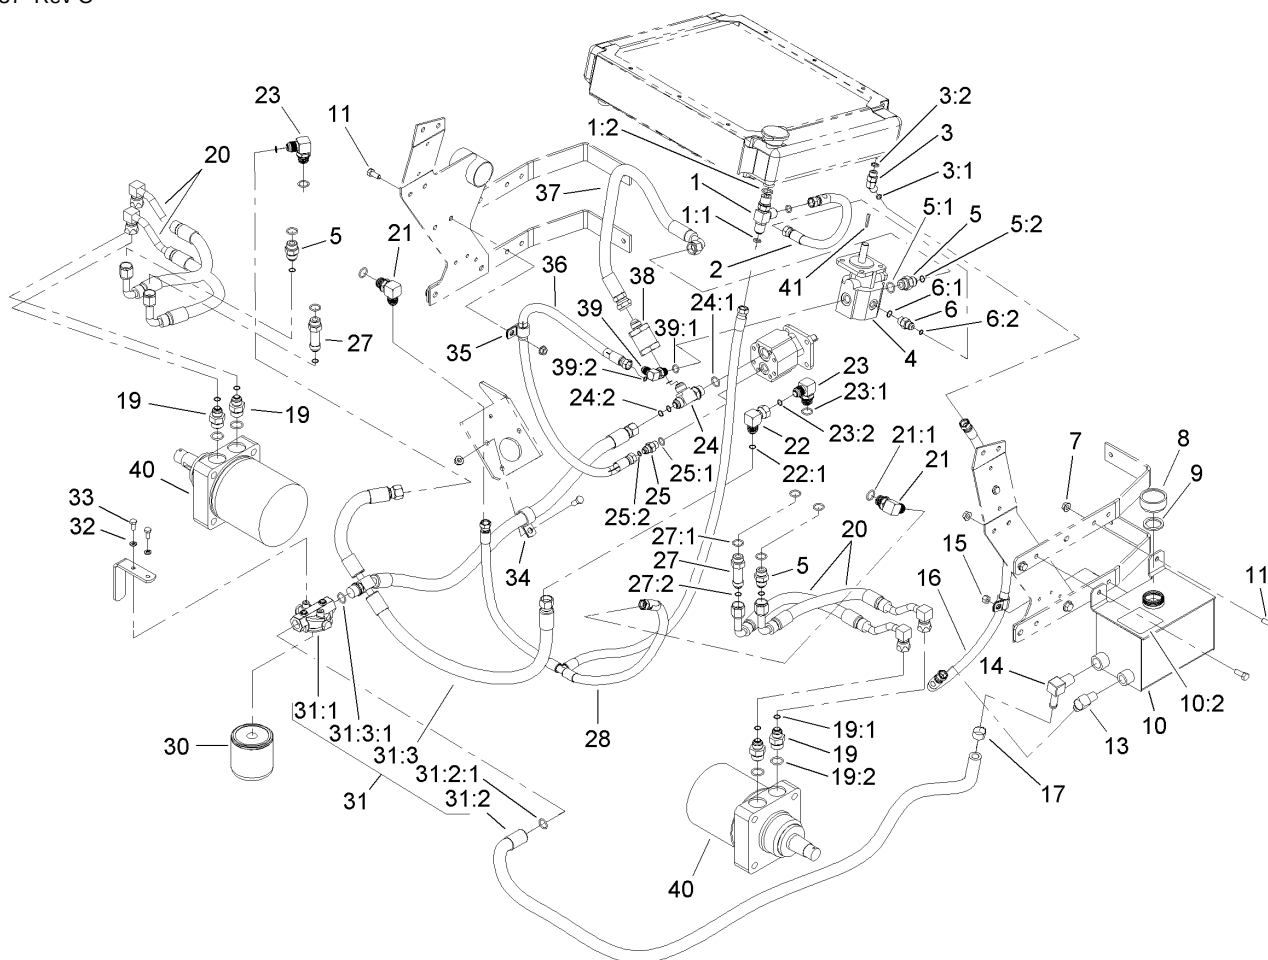

Hydraulic Assembly

Ref	Part No.	Qty.	Description
1	108-5998	1	Fitting-HYD, Straight Tee
1:1	237-21	2	O-Ring
1:2	237-42	1	O-Ring
2	103-2173	1	Fan Case Drain Hose ASM
3	108-5999	1	Fitting-HYD, 45 Elbow
3:1	237-21	1	O-Ring
3:2	237-42	1	O-Ring
4	103-7430	1	Motor-Fan, Cooling
5	1-603990	3	Fitting-Straight
5:1	1-603920	1	O-Ring
5:2	1-603992	1	O-Ring
6	103-2157	1	Fitting-Straight
6:1	1-603923	1	O-Ring
6:2	103-1020	1	O-Ring
7	32128-20	6	Nut-HF
8	1-513167	1	Cap
9	1-523103	1	Gasket-Cap, Tank
10	107-7659	1	HYD Tank ASM
10:2	1-523552	1	Decal-Tank, HYD
11	322-4	6	Screw-HH
13	103-1012	1	Fitting-Elbow, 90 DEG
14	103-2152	1	Fitting-90 DEG
15	3296-29	1	Nut-Lock, NI
16	103-2174	1	Tank Return Hose ASM


Ref	Part No.	Qty.	Description
17	103-2104	1	Clamp-Hose
19	1-603991	4	Fitting-Straight
19:1	237-80	1	O-Ring
19:2	1-603992	1	O-Ring
20	103-4679	4	HYD Hose ASM
21	103-1014	2	Fitting-Elbow, 90 DEG
21:1	1-603920	1	O-Ring
22	103-2315	1	Fitting-90 DEG
22:1	1-603992	1	O-Ring
23	103-2153	2	Fitting-90 DEG
23:1	1-603920	1	O-Ring
23:2	1-603992	1	O-Ring
24	103-2159	1	Fitting-Tee
24:1	1-603920	1	O-Ring
24:2	1-603992	2	O-Ring
25	103-2156	1	Fitting-Straight
25:1	1-603921	1	O-Ring
25:2	103-1020	1	O-Ring
27	103-1940	2	Adapter-HYD, Straight
27:1	237-79	1	O-Ring
27:2	1-603992	1	O-Ring
28	103-2172	1	Case Drain Hose ASM
30	23-9740	1	Filter-Oil
31		1	Charge Hose ASM

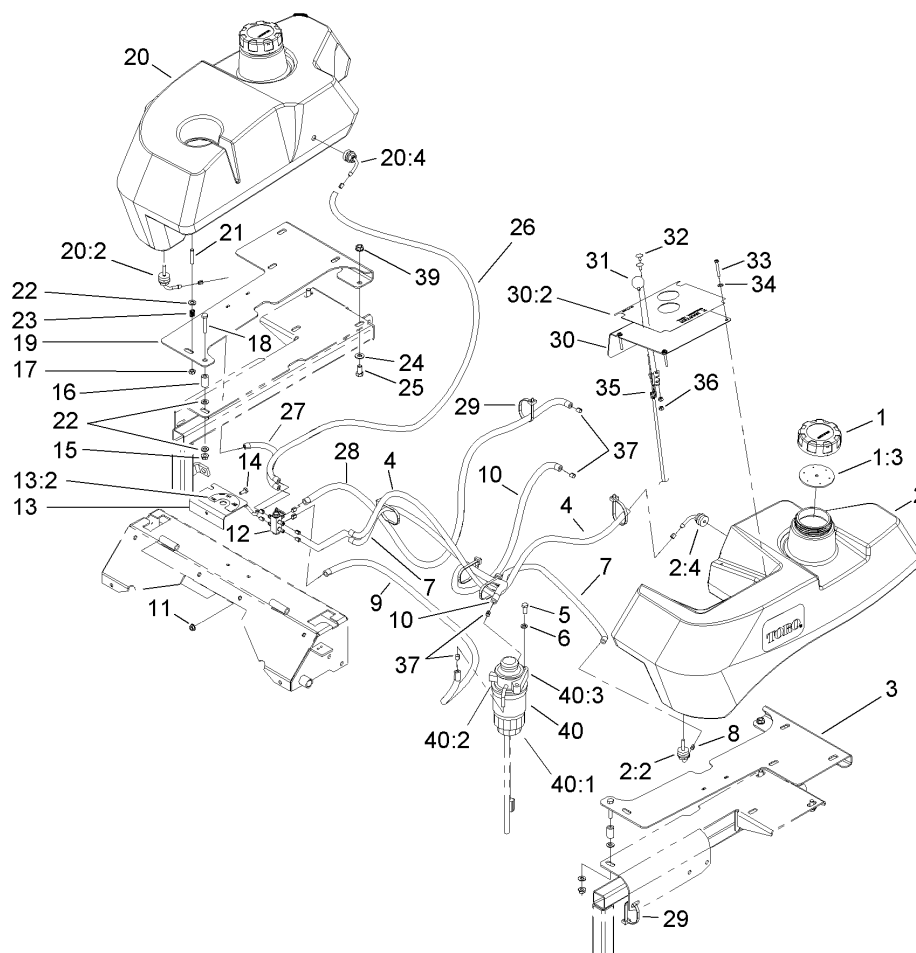

Tank and Fuel Line Assembly


Ref	Part No.	Qty.	Description
1	107-9884	2	Cap-Diesel Fuel, Yellow
1:3	104-7420	1	Gasket-Vented
2	106-9978	1	LH Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
2:4	103-2615	1	Fitting-Fuel, Bulkhead
3	107-7672-03	1	Bracket-Fuel Tank, LH
4	107-7686	1	Hose-Fuel
5	33114-020	2	Screw-HH
6	1-805005	2	Washer-Lock
7	107-7742	1	Hose-Fuel
8	1-643293	8	Clamp-Hose, Fuel
9	107-7687	1	Hose-Fuel
10	103-1693	1	Hose-Fuel
11	32128-23	1	Nut-HF
12	1-643234	1	Valve-Fuel, Dual Flow
13	107-9878	1	Bracket-Valve, Fuel
13:2	107-2114	1	Decal-Valve, Fuel
14	321-3	1	Screw-HH
15	3296-47	2	Nut-Lock, NI
16	94-7564	2	Spacer
17	3296-47	6	Nut-Lock, NI
18	322-9	2	Screw-HH
19	107-7671-03	1	Bracket-Fuel Tank, RH
20	106-9977	1	RH Fuel Tank ASM

Ref	Part No.	Qty.	Description
20:2	103-2605	1	Fitting-Fuel, Bulkhead
20:4	103-2615	1	Fitting-Fuel, Bulkhead
21	1-633023	6	Stud
22	3256-23	10	Washer-Flat
23	1-633349	6	Spring-Tank, Fuel
24	3256-24	4	Washer-Flat
25	323-4	4	Screw-HH
26	99-3185	1	Hose-Fuel
27	107-7684	1	Hose-Fuel
28	107-7741	1	Hose-Fuel
29	1-303335	6	Tie-Plastic
30	107-7703	1	Panel-Control
30:2	107-7701	1	Decal-Panel, Control
31	1-513592	1	Knob-Ball
32	1-807513	2	Bolt-CARR
33	1-803071	4	Screw
34	1-303435	4	Washer-Spring
35	103-1450	1	Cable-Throttle
36	3296-2	2	Nut-Lock
37	1-643277	6	Clamp-Hose, Fuel
39	3290-357	4	Nut-HHF, Whiz
40	100-3191	1	Separator-Fuel
40:1	100-3192	1	Element-Filter, Fuel
40:2	100-6409	1	Sensor-Filter, Fuel

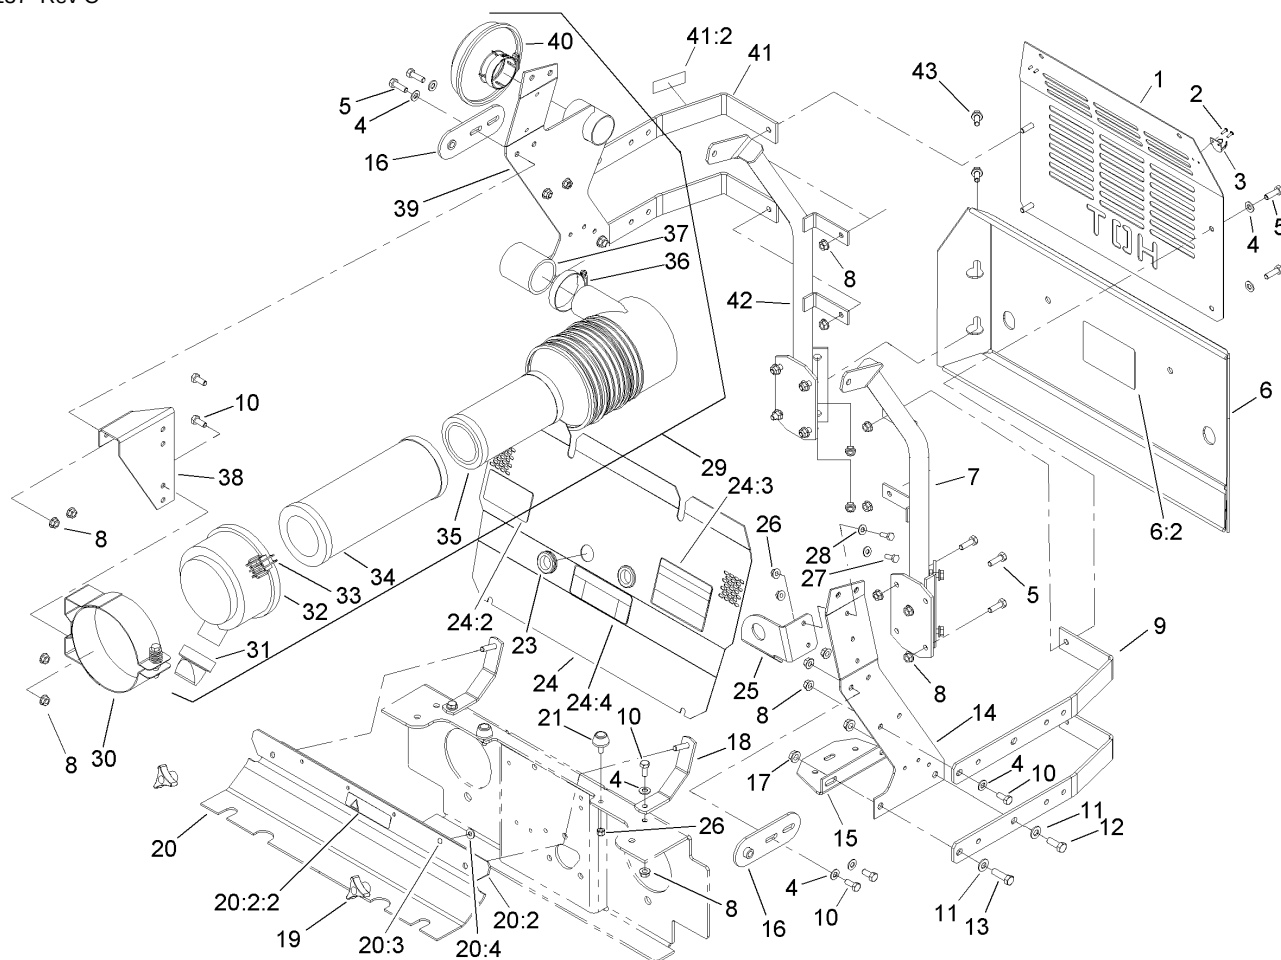

Front and Rear Engine Cover Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	103-4855-03	1	Guard-Muffler	20:4	3256-14	4	Washer-Flat
2	923786	4	Rivet	21	1-523420	2	Bumper
3	1-643189	2	Keeper-Latch, Rubber	23	100-3815	2	Grommet-Rubber
4	3256-23	13	Washer-Flat	24	107-7707	1	Engine Access Panel ASM
5	322-5	14	Screw-HH	24:2	107-7705	1	Decal-Belt Routing, Pump
6	107-9865	1	Rear Bumper ASM	24:3	103-3276	1	Decal-Buzzer, Warning
6:2	107-9864	1	Decal-Belt Routing, Deck Drive	24:4	103-5881	1	Decal-Devices, Rotating
7	103-5157-03	1	Frame-Upper, LH Rear	25	103-4982-03	1	Bracket-Buzzer
8	32128-20	23	Nut-HF	26	32128-33	2	Nut-HF
9	103-4906-03	3	Bar-Mount Frame, Radiator	27	321-4	2	Screw-HH
10	322-3	9	Screw-HH	28	3256-22	2	Washer-Flat
11	3256-24	4	Washer-Flat	29	103-5178	1	Filter-Air
12	323-6	2	Screw-HH	30	103-1058	1	Bracket-Filter, Air
13	323-7	2	Screw-HH	31	87-9400	1	Valve-Vacuator
14	103-5169-03	1	Mount-Side, LH	32	103-1060	1	Cover-Filter, Air
15	103-2603-03	1	Bracket-Bottle	33	1-643283	2	Latch-Cleaner, Air
16	1-632986-03	2	Shackle-Hinge	34	103-1327	1	Filter-Air
17	3290-357	4	Nut-HHF, Whiz	35	103-1326	1	Filter-Air, Safety
18	103-5163-03	2	Mount-Belt Shield, Engine	36	2412-42	1	Clamp-Hose
19	1-323385	2	Knob-3 Prong	37	103-5198	1	Hose-Intake
20	107-7709	1	Engine Belt Shield ASM	38	103-0953-03	1	Mount-Cleaner, Air
20:2	107-7713	1	Strip-Shield, Belt	39	103-5123-03	1	RH Radiator And Ac Support ASM
20:2:2	98-5954	1	Decal-Cover, Missing	40	100-2436	1	Hood
20:3	1-803035	4	Rivet-Pop	41	107-7715	1	Bar-Radiator

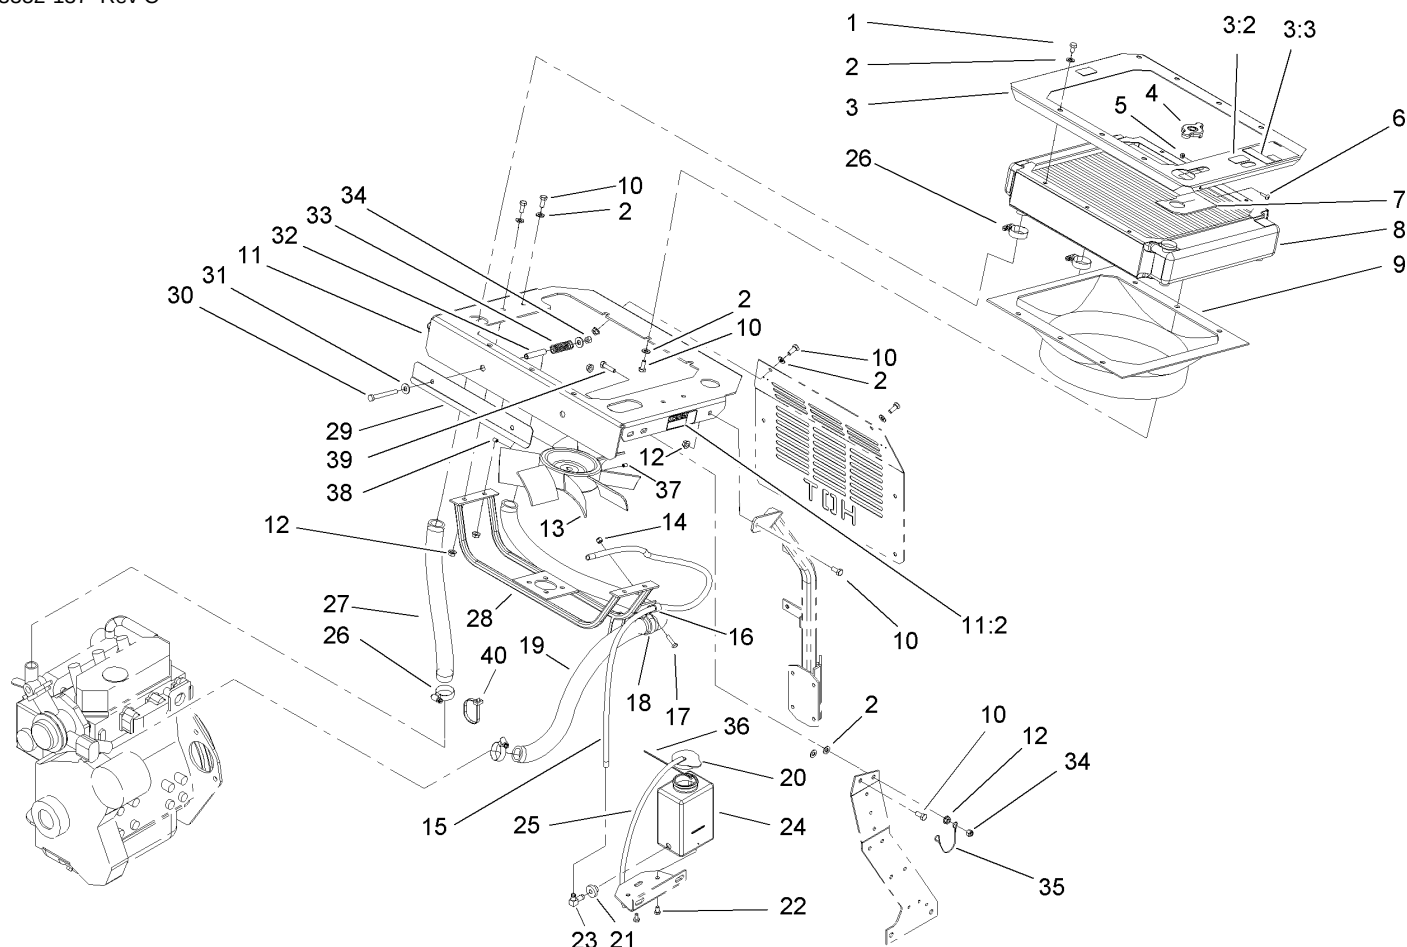

Cooling System Assembly


Ref	Part No.	Qty.	Description
1	322-1	6	Screw-HH
2	3256-23	22	Washer-Flat
3	107-7658	1	Plate-Trim, Radiator
3:2	65-2690	2	Decal-Surface, Hot
3:3	104-2449	1	Decal-Coolant
4	1-643161	1	Cap-Radiator
5	3296-2	1	Nut-Lock
6	1-803075	1	Screw-Head, Truss
7	103-1352	1	Shield-Fill Neck, Radiator
8	107-9889	1	Radiator
9	103-0898	1	Shroud-Cooling, Engine
10	322-3	16	Screw-HH
11	107-7717	1	Fan Mounting Plate ASM
11:2	1-643253	2	Decal-Fan, Radiator
12	32128-20	10	Nut-HF
13	103-0892	1	Fan
14	3296-42	1	Nut-Lock, NI
15	103-1445	1	Hose
16	1-513762	1	Clip-Loom
17	321-6	1	Screw-HH
18	103-0113	1	Clip-Loom
19	103-0922	1	Hose-Inlet, Engine
20	1-643164	1	Cap-Tank, Overflow
21	1-513645	1	Bushing-Valve, Fuel

Ref	Part No.	Qty.	Description
22	321-2	2	Screw-HH
23	1-643259	1	Fitting-Elbow
24	1-643163	1	Tank-Overflow
25	1-643131	1	Hose
26	1-633989	4	Clamp-Hose
27	103-2505	1	Hose-Outlet, Engine
28	103-0086-03	1	Mount-Motor, Fan
29	103-4986	1	Bracket-Deflector, Air
30	322-14	2	Screw-HH
31	3256-3	4	Washer-Flat
32	103-5223	2	Spacer
33	1-513296	2	Spring-Indicator, Reverse
34	3296-29	4	Nut-Lock, NI
35	107-9853	2	Lanyard
36	1-303287	3	Tie-Plastic
37	3245-44	1	Screw-Set
38	909848	1	Screw-Set
39	322-6	2	Screw-HH
40	1-303335	2	Tie-Plastic

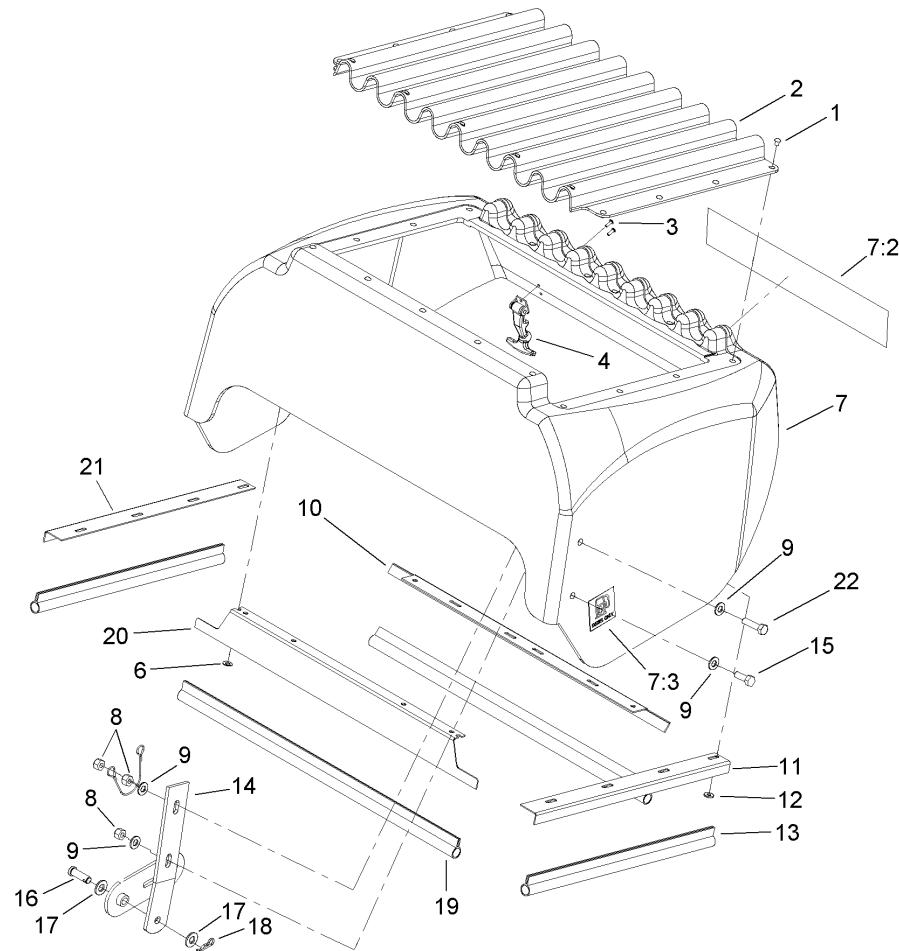


Hood Assembly

Ref	Part No.	Qty.	Description				
1	1-803072	17	Rivet				
2	1-633864-03	1	Screen-Radiator				
3	923786	4	Rivet				
4	1-643188	2	Latch-Rubber				
6	1-303435	5	Washer-Spring				
7	107-7679	1	Hood ASM				
7:2	107-7674	1	Decal				
7:3	103-1636	2	Decal-Fuel				
8	3296-29	6	Nut-Lock, NI				
9	3256-23	8	Washer-Flat				
10	1-643108-03	1	Angle-Radiator, Bottom				
11	1-643105-03	1	Angle-Radiator, LH				
12	3256-14	21	Washer-Flat				
13	1-643186	2	Seal-Trim				
14	1-633885-03	2	Plate-Hinge, Hood				
15	322-4	2	Screw-HH				
16	1-808285	2	Pin-Clevis				
17	3256-24	4	Washer-Flat				
18	1-806003	2	Pin-Hair				
19	1-643187	2	Seal-Trim				
20	1-643107-03	1	Angle-Radiator, Top				
21	1-643106-03	1	Angle-Radiator, RH				
22	322-6	2	Screw-HH				

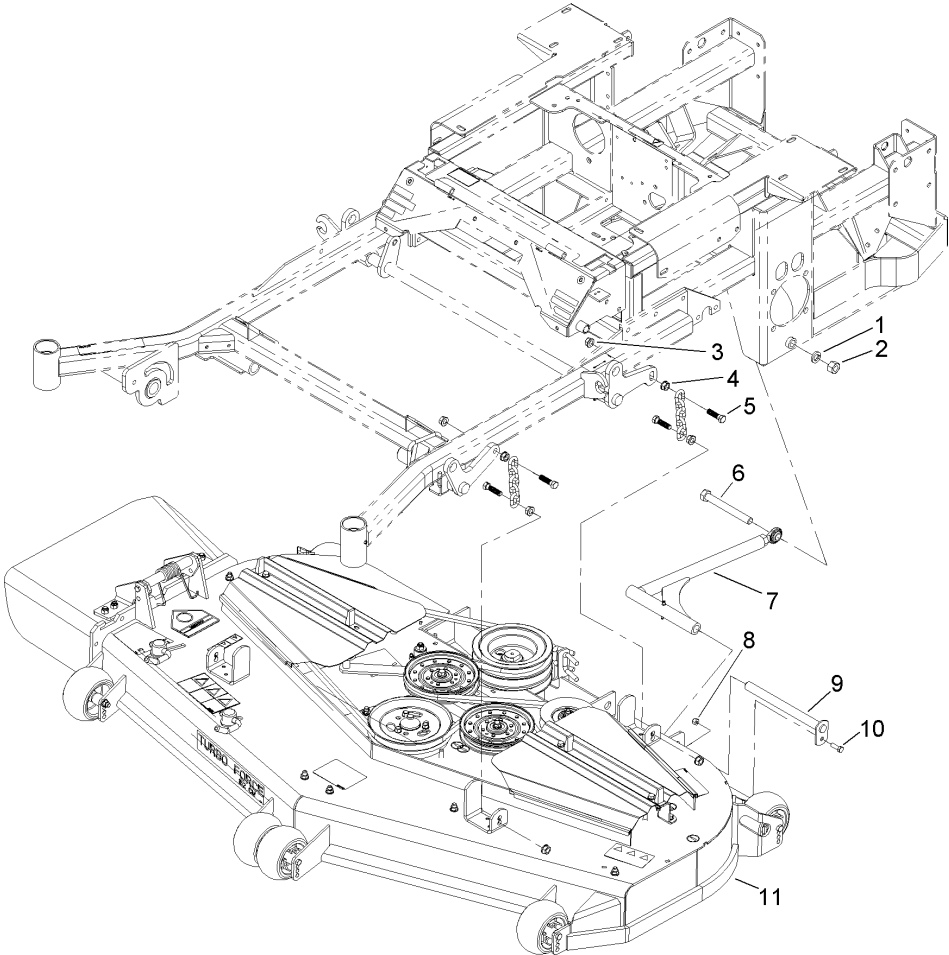

Deck Connection Assembly


Ref	Part No.	Qty.	Description				
1	3253-8	2	Washer-Lock				
2	3217-11	2	Nut-Hex				
3	32128-37	16	Nut-HF				
4	1-633447	4	Chain-Lift, Deck				
5	1-800811	8	Screw-Cap, HH				
6	327-28	2	Screw-HH				
7	103-1356	2	Strut ASM				
8	3296-29	2	Nut-Lock, NI				
9	1-632199-01	2	Pin-Strut				
10	322-3	2	Screw-HH				
11		1	Deck ASM				

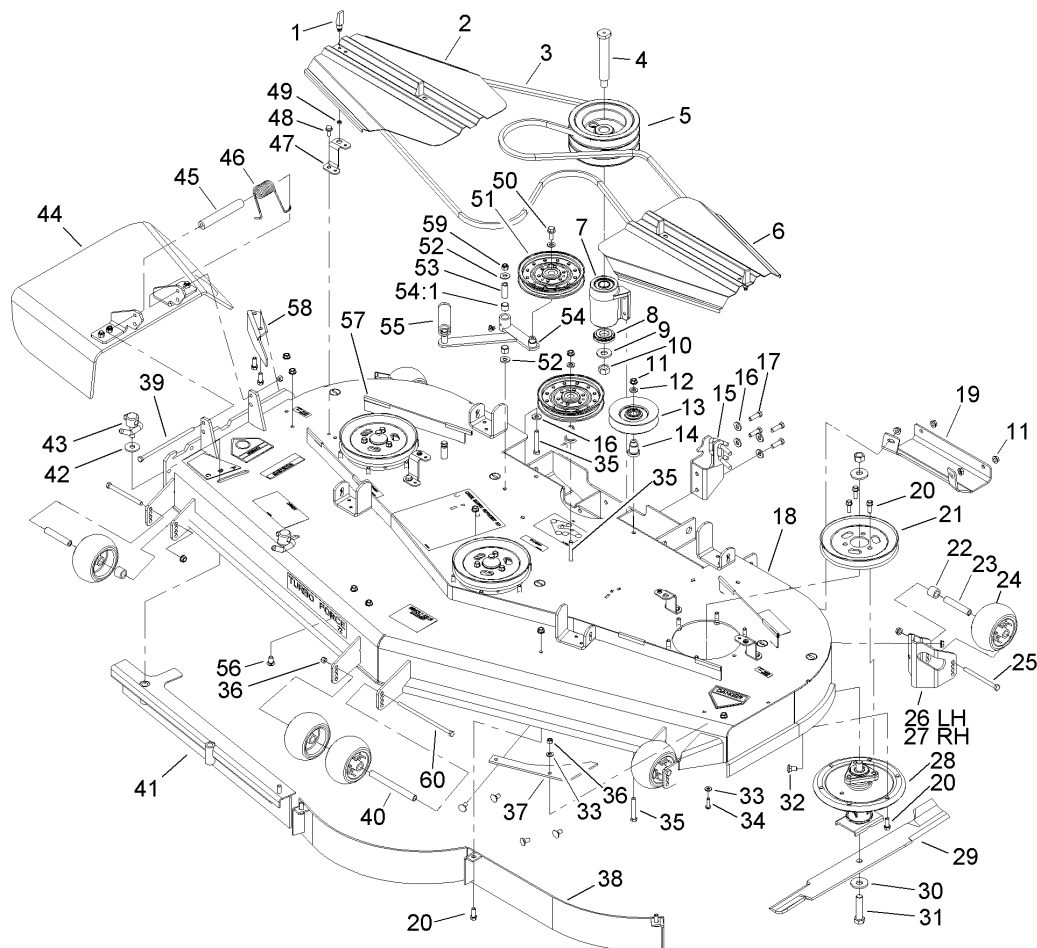

Deck Assembly


Ref	Part No.	Qty.	Description
1	74-5950	4	Latch-Swell
2	106-3275-01	1	Cover-Belt
3	107-7723	1	Belt-V
4	1-643393	1	Jackshaft
5	103-5381	1	Sheave-Jackshaft
6	105-8786-01	1	Cover-Belt
7	103-2544	1	Jackshaft ASM
8	103-2535	1	Spacer-Guard, Bottom
9	1-513208	1	Washer-Spring
10	3219-6	1	Nut-Hex
11	3290-357	36	Nut-HHF, Whiz
12	3256-24	3	Washer-Flat
13	1-603805	1	Pulley-Idler
14	106-3214	2	Mount-Pulley
15	103-3445-01	1	Guard-Jackshaft
16	98-5975	5	Washer-Belleville
17	323-7	4	Screw-HH
18	107-7677	1	Deck ASM
19	106-3279-01	1	Plate-Skid
20	92-1624	33	Screw
21	107-7678	3	Pulley
22	98-7913	4	Tube-Spacer
23	98-7912	4	Tube-Spanner
24	1-603299	6	Roller-Scalp, Anti

Ref	Part No.	Qty.	Description
25	323-23	4	Screw-HH
26	106-7354-01	1	Mount-Wheel, LH
27	106-7355-01	1	Plate-Roller, RH
28	106-3217	3	Spindle ASM
29	105-7784-03	3	Blade-Hi Flow, 24.5 Inch
30	103-0865	3	Washer-Blade Bolt, Heavy
31	103-0862	3	Screw-Cap
32	3231-1	10	Screw-CARR
33	1-303334	4	Washer-Spring
34	3274-104	2	Screw-HSBH
35	323-12	3	Screw-HH
36	3296-29	4	Nut-Lock, NI
37	107-3138	1	Plate-Turbo
38	105-7730-01	1	Baffle ASM
39	322-50	1	Screw-HH
40	98-5967	1	Spacer-Wheel
41	105-7669-01	1	Baffle ASM
42	105-7697	2	Washer-Plastic
43	106-3242	2	Lever ASM
44	106-3249	1	Rubber Deflector ASM
45	105-4622	1	Spacer
46	104-8554	1	Spring-Torsion
47	105-8787-01	4	Bracket-Cover
48	32144-70	4	Screw-HWHTF

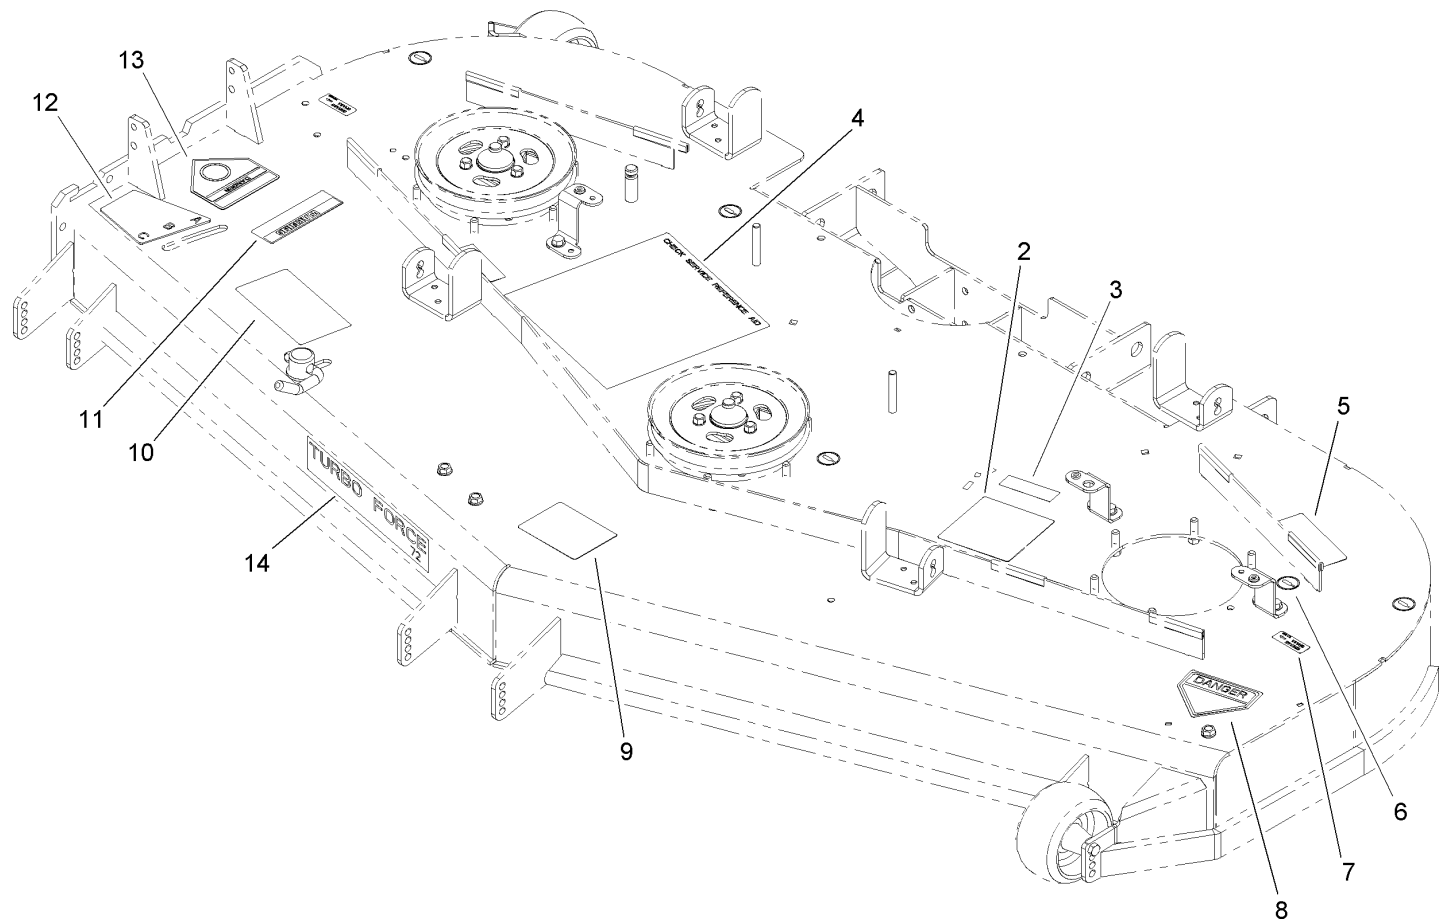


Deck Decal Assembly No. 107-7677

Ref	Part No.	Qty.	Description				
2	107-7673	1	Decal-Routing, Belt				
3	98-5954	3	Decal-Cover, Missing				
4	107-9863	1	Decal-Check, Service				
5	68-8340	1	Decal-Torque				
6	58-6520	6	Decal-Grease				
7	107-1613	2	Decal-Grease				
8	43-8480	1	Decal-Danger				
9	105-7798	1	Decal-Scalp, Anti				
10	66-1340	1	Decal-Danger				
11	104-8569	1	Decal-Warning				
12	107-1622	1	Decal-Adjustment, Baffle				
13	54-9220	1	Decal-Danger				
14	107-1620	1	Decal				

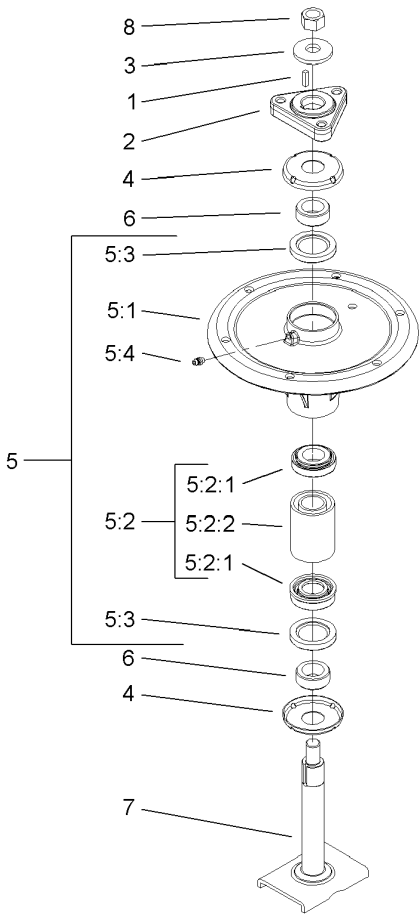


Spindle Assembly No. 106-3217

Ref	Part No.	Qty.	Description				
1	10-8040	1	Key-Square				
2	106-3277	1	Hub-Pulley				
3	103-0865	1	Washer-Blade Bolt, Heavy				
4	106-3204	2	Shield-Bearing				
5		1	Spindle Bearing ASM				
5:1	106-3211	1	Housing-Spindle				
5:2	106-3207	1	Bearing ASM				
5:2:1	27-0960	1	Bearing ASM				
5:2:2	106-3206	1	Spacer (Matched Set)				
5:3	253-133	2	Seal-Oil				
5:4	302-5	1	Fitting-Grease				
6	106-3218	2	Spacer-Seal				
7	106-3233	1	Spindle Shaft ASM				
8	3219-6	1	Nut-Hex				

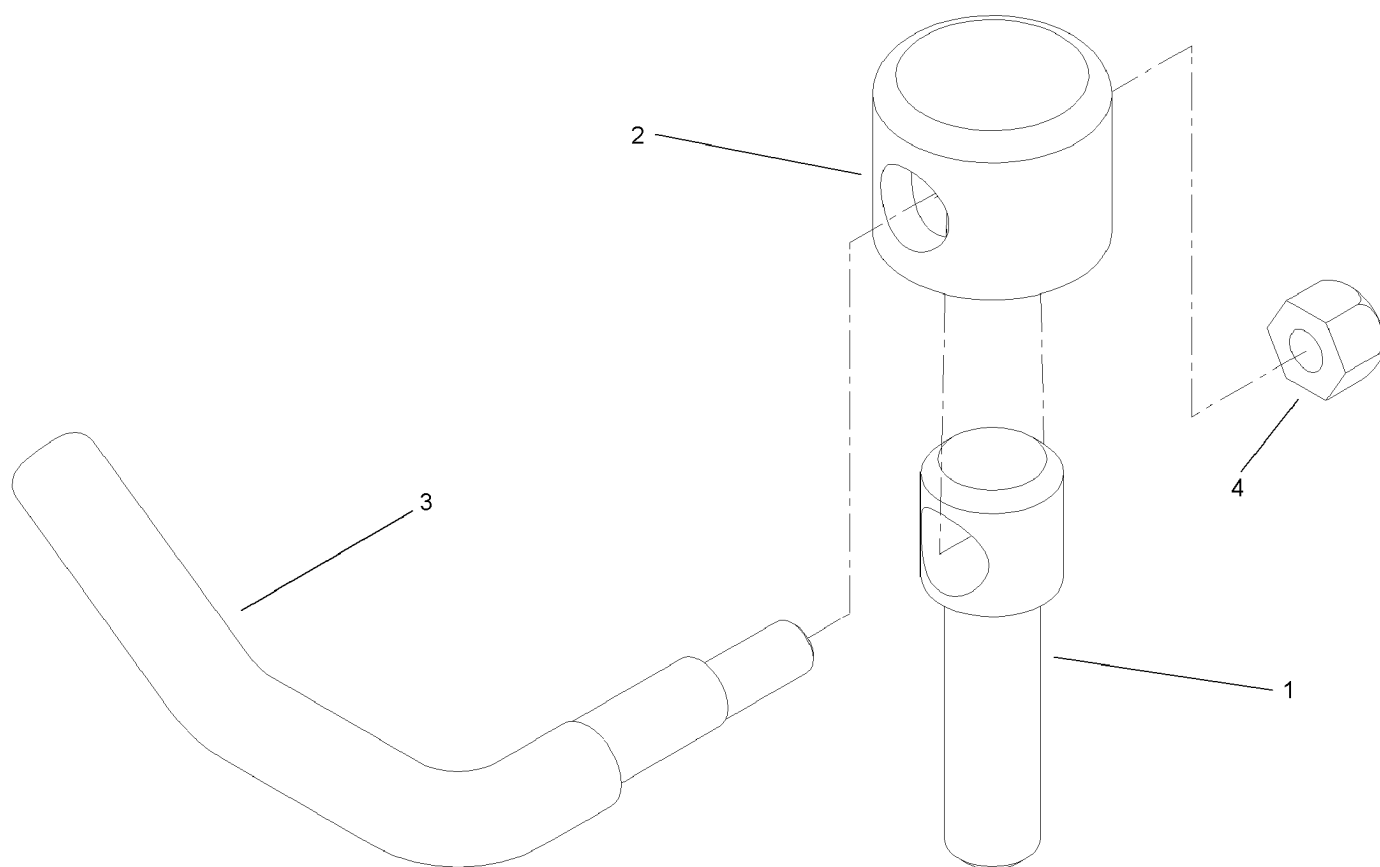


Lever Assembly No. 106-3242

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	106-3240	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

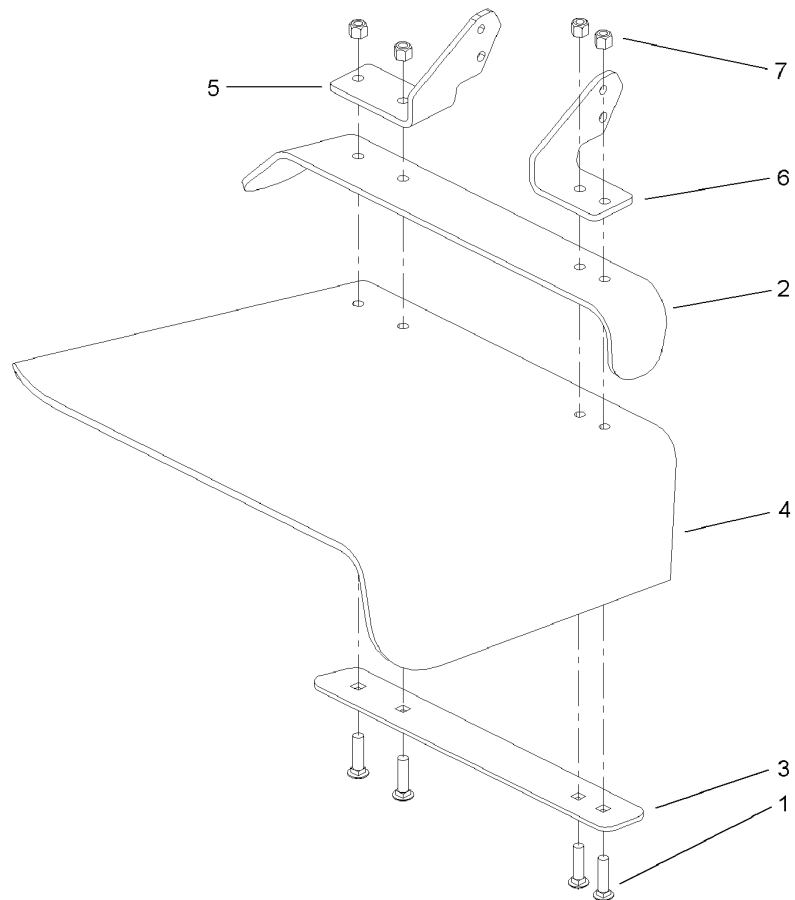

Rubber Deflector Assembly No. 106-3249


Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	107-1617	1	Deflector-Rubber				
5	106-3252-01	1	Plate-Hinge, Rear				
6	106-3253-01	1	Plate-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

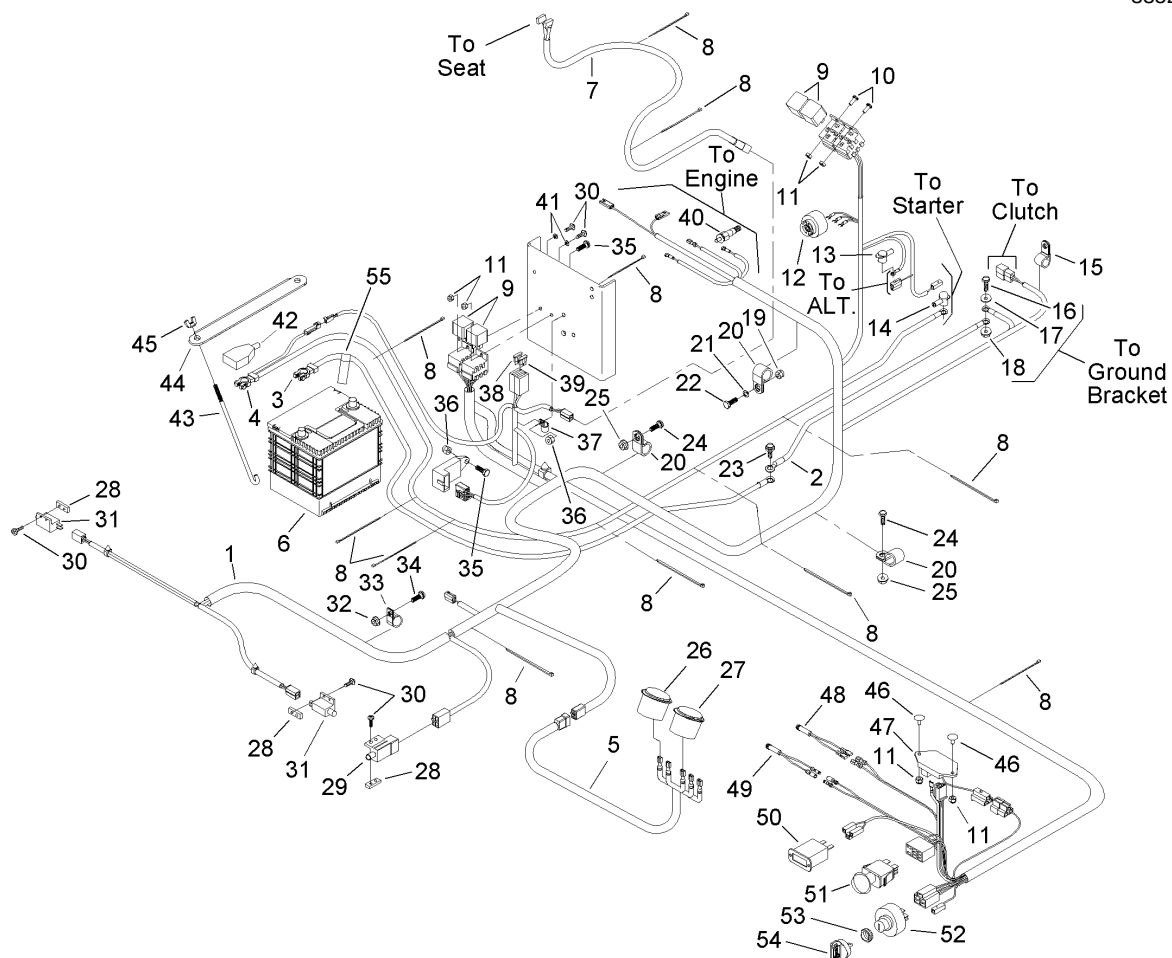

Electrical Component Assembly


Ref	Part No.	Qty.	Description
1	103-4340	1	Harness-Wire
2	103-1349	1	Cable-Engine Negative
3	103-1159	1	Cable-Battery Negative
4	103-1160	1	Cable-Starter
5	103-4339	1	Harness-Gauge
6	106-5187	1	Battery
7	103-1227	1	Harness-Wiring, Seat
8	1-303335	11	Tie-Plastic
9	1-643275	4	Relay
10	1-803071	2	Screw
11	3296-2	8	Nut-Lock
12	103-0205	1	Alarm-Tone, Dual
13	1-643178	1	Cap-Insulator, Red
14	103-1420	1	Insulator-Starter
15	1-603727	1	Clip-Loom
16	323-6	1	Screw-HH
17	3256-24	1	Washer-Flat
18	3290-357	1	Nut-HHF, Whiz
19	33023-00	1	Nut-Lock
20	1-633396	3	Clip-Loom
21	3256-22	1	Washer-Flat
22	33113-020	1	Screw-HH
23	32144-70	1	Screw-HWHTF
24	322-3	2	Screw-HH

Ref	Part No.	Qty.	Description
25	32128-20	2	Nut-HF
26	1-643037	1	Gauge-Voltmeter
27	1-643021	1	Gauge-Temperature
28	1-633181	3	Plate-Tapped
29	1-633111	1	Switch
30	3290-500	8	Screw-PPH
31	1-513051	2	Switch-Open, Normally
32	32128-33	1	Nut-HF
33	1-323229	1	Clip-Loom
34	321-2	1	Screw-HH
35	321-4	3	Screw-HH
36	3296-42	2	Nut-Lock, NI
37	1-513762	1	Clip-Loom
38	1-816001	1	Fuse-Blade Type, 20 Amp
39	103-1368	1	Fuse-40 Amp
40	103-0949	1	Sender-Temperature
41	3256-14	2	Washer-Flat
42	103-1340	1	Insulator-Terminal, Battery
43	103-1312	2	Bolt-Holddown
44	103-1311-03	1	Holddown-Battery
45	1-543792	2	Wingnut
46	1-807513	2	Bolt-CARR
47	103-5218	1	Module-Delay, Seat
48	1-643267	1	Indicator-Led, Red

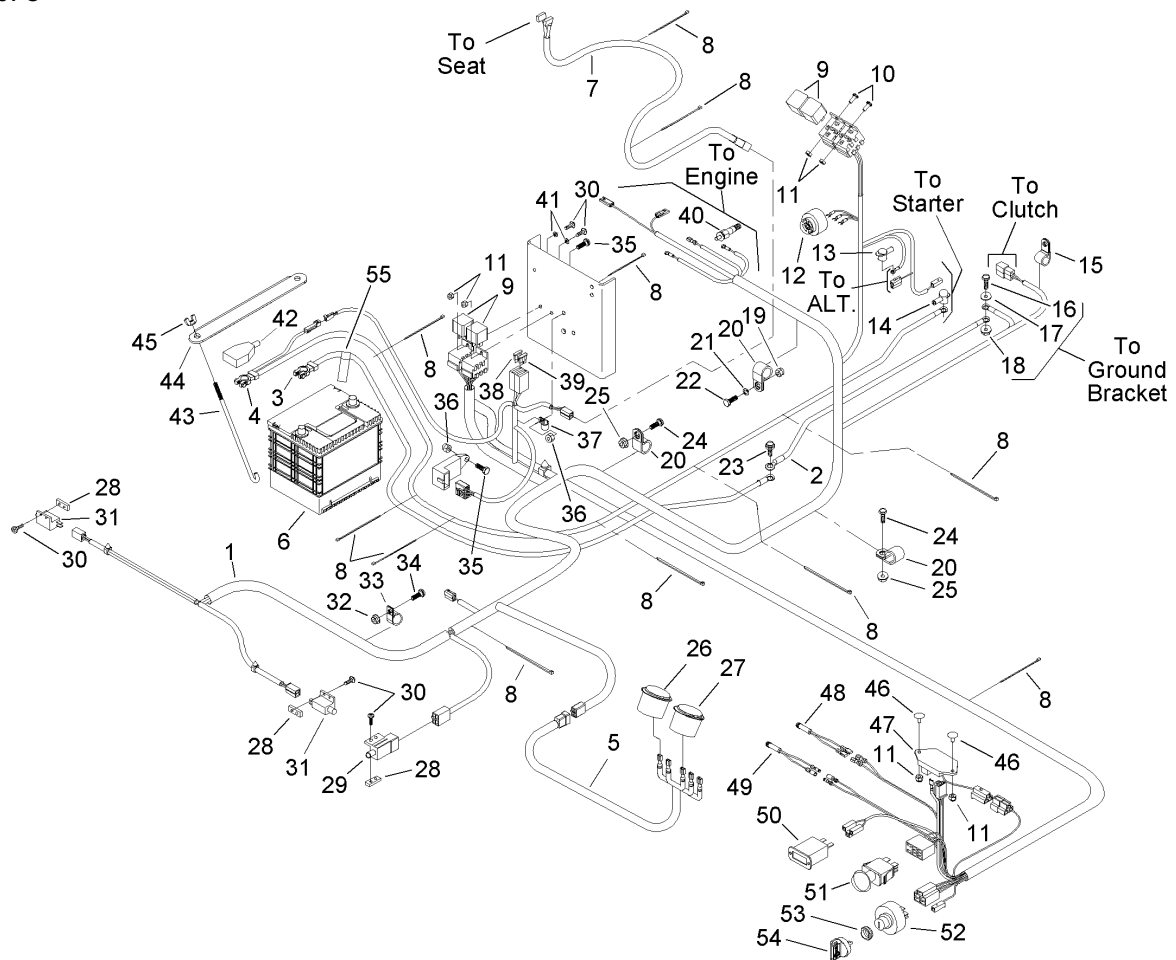

Electrical Component Assembly (continued)


Ref	Part No.	Qty.	Description				
49	103-1320	1	Indicator-Led, Amber				
50	1-513374	1	Meter-Hour				
51	103-5221	1	Switch-PTO				
52	103-0206	1	Switch-Starting, Key				
53	103-0498	1	Nut-Switch, Ignition				
54	63-8360	2	Key-Ignition				
55	107-9309	1	Decal-Instructions, Charging				

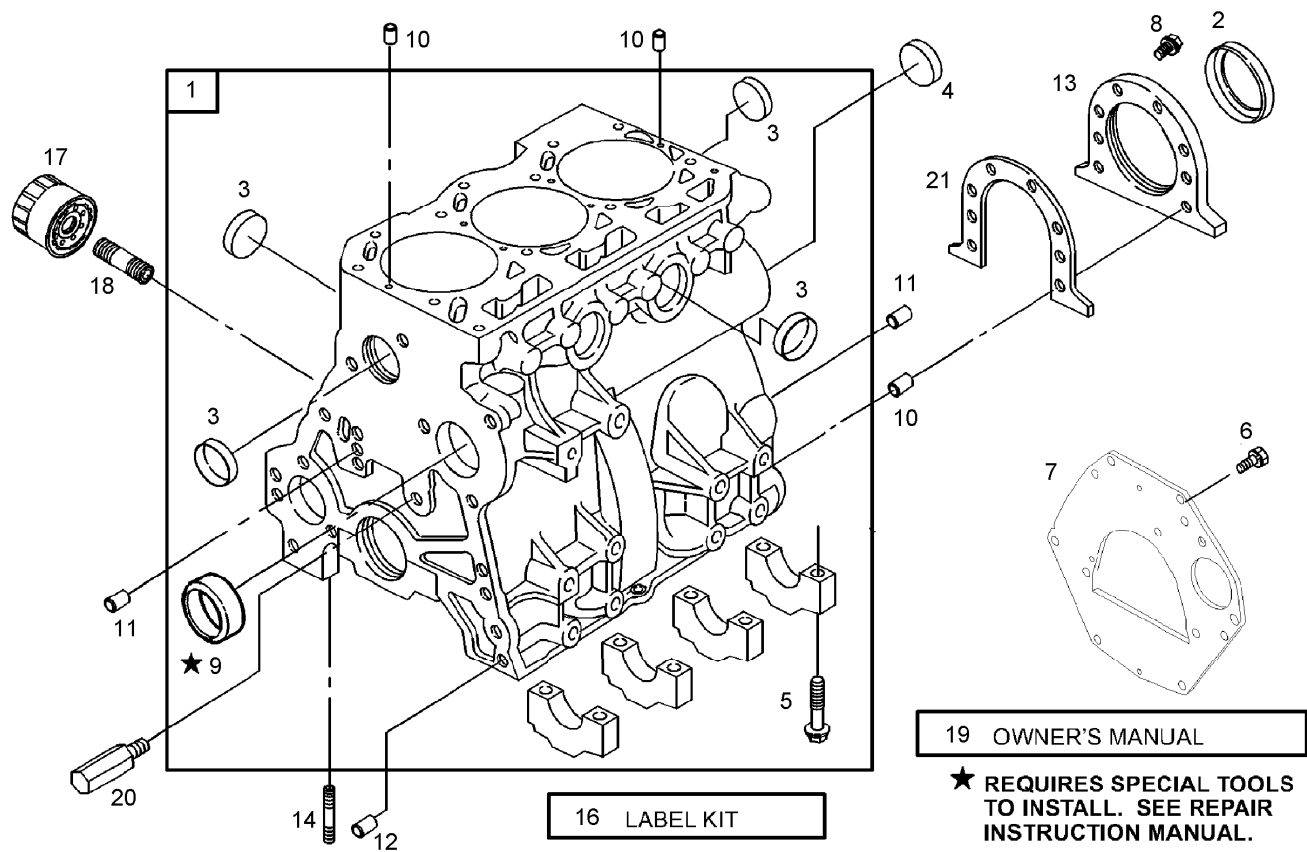

Assemblies include all parts shown in frames.

Cylinder Assembly


Ref	Part No.	Qty.	Description				
1	107-9891	1	Cylinder ASM				
2	99-9003	1	Seal-Oil				
3	99-9008	1	Plug-Welch				
4	107-9892	1	Plug-Welch (Cam)				
5	99-9006	1	Screw-Hex				
6	99-9005	1	Screw-Hex				
7	107-9893	1	Plate-End, Rear				
8	99-9004	1	Screw-Hex				
9	99-9002	1	Bushing				
10	99-9012	1	Pin-Locating				
11	99-9013	1	Pin-Locating				
12	99-9014	1	Pin-Locating				
13	99-9022	1	Retainer-Seal				
14	99-9007	1	Stud-Metric				
16	107-9894	1	Kit-Label				
17	99-9017	1	Filter-Oil				
18	105-9337	1	Adapter-Filter, Oil				
19	103-1384	1	Manual-Engine				
20	99-9020	1	Nozzle-Oil				
21	99-9021	1	Gasket-Retainer				

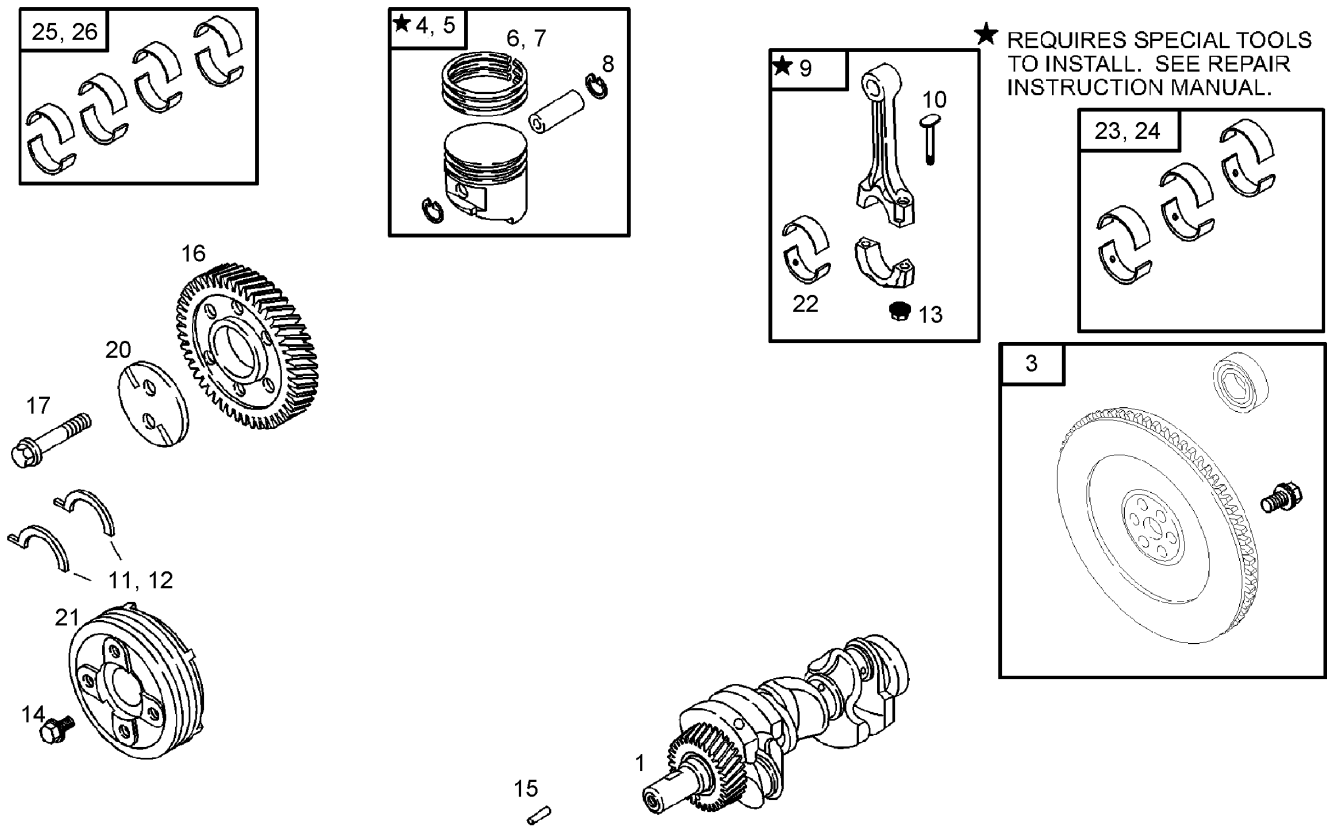

Assemblies include all parts shown in frames.


Crankshaft Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-9339	1	Crankshaft	26	99-9046	1	Set-Bearing, Main (.010 Undersized)
3	99-9024	1	Flywheel				
4	107-9895	1	Piston ASM				
5	107-9896	1	Piston ASM (Oversize)				
6	105-9340	1	Ring Set				
7	99-9269	1	Ring Set (.010 In Oversized)				
8	99-9607	1	Lock-Pin, Piston				
9	99-9608	1	Rod-Connecting				
10	99-9030	1	Screw-Rod, Connecting				
11	99-9035	1	Washer-Thrust				
12	99-9036	1	Washer-Thrust (.005 In Oversized)				
13	99-9034	1	Nut-Hex				
14	107-9897	1	Screw-Hex				
15	99-9037	1	Pin-Locating				
16	99-9609	1	Gear-Drive				
17	99-9032	1	Screw-Hex				
20	99-9040	1	Plate-Gear, Idler				
21	99-9041	1	Pulley-Crankshaft				
22	99-9042	1	Bearing-Rod				
23	99-9043	1	Set-Bearing, Rod				
24	99-9044	1	Set-Bearing, Rod (.010 Undersized)				
25	99-9045	1	Set-Bearing, Main (Set Of 8)				

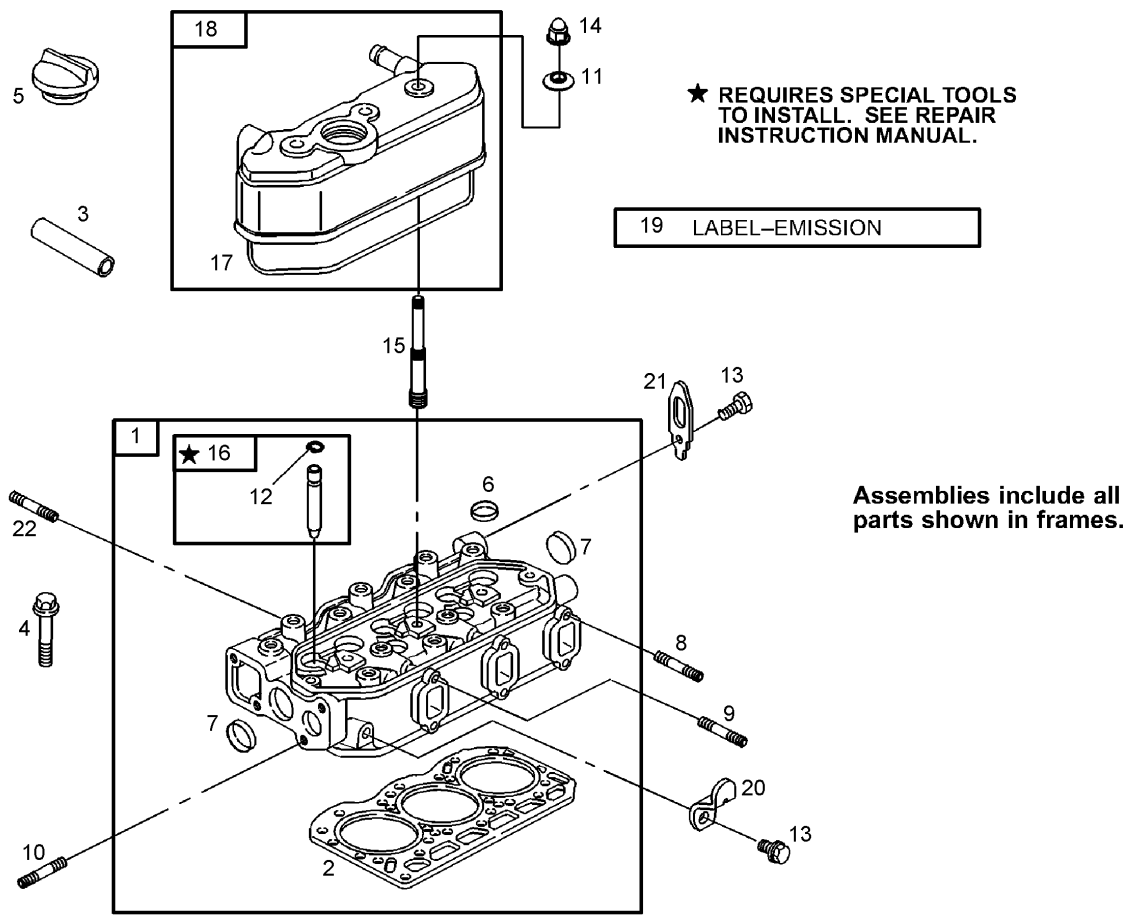


Cylinder Head Assembly

Ref	Part No.	Qty.	Description				
1	105-9341	1	Head-Cylinder				
2	107-9898	1	Gasket-Head, Cylinder				
3	105-9342	1	Tube-Breather				
4	99-9614	1	Screw-Metric				
5	99-9052	1	Cap-Fill, Oil				
6	99-9060	1	Plug-Welch				
7	99-9008	1	Plug-Welch				
8	99-9058	1	Stud-Metric				
9	99-9059	1	Stud-Metric				
10	99-9057	1	Stud-Metric				
11	99-9063	1	Washer-Seal				
12	99-9067	1	Retainer				
13	99-9054	1	Screw-Hex				
14	99-9061	1	Nut-Hex, Metric				
15	99-9101	1	Stud-Arm, Rocker				
16	99-9070	1	Bushing-Guide				
17	99-9073	1	Gasket-Cover, Rocker				
18	100-6402	1	Cover-Rocker				
19	107-9899	1	Emmision Label Kit				
20	99-9076	1	Bracket-Lifting				
21	99-9077	1	Bracket-Lifting				
22	99-9055	1	Stud-Metric				

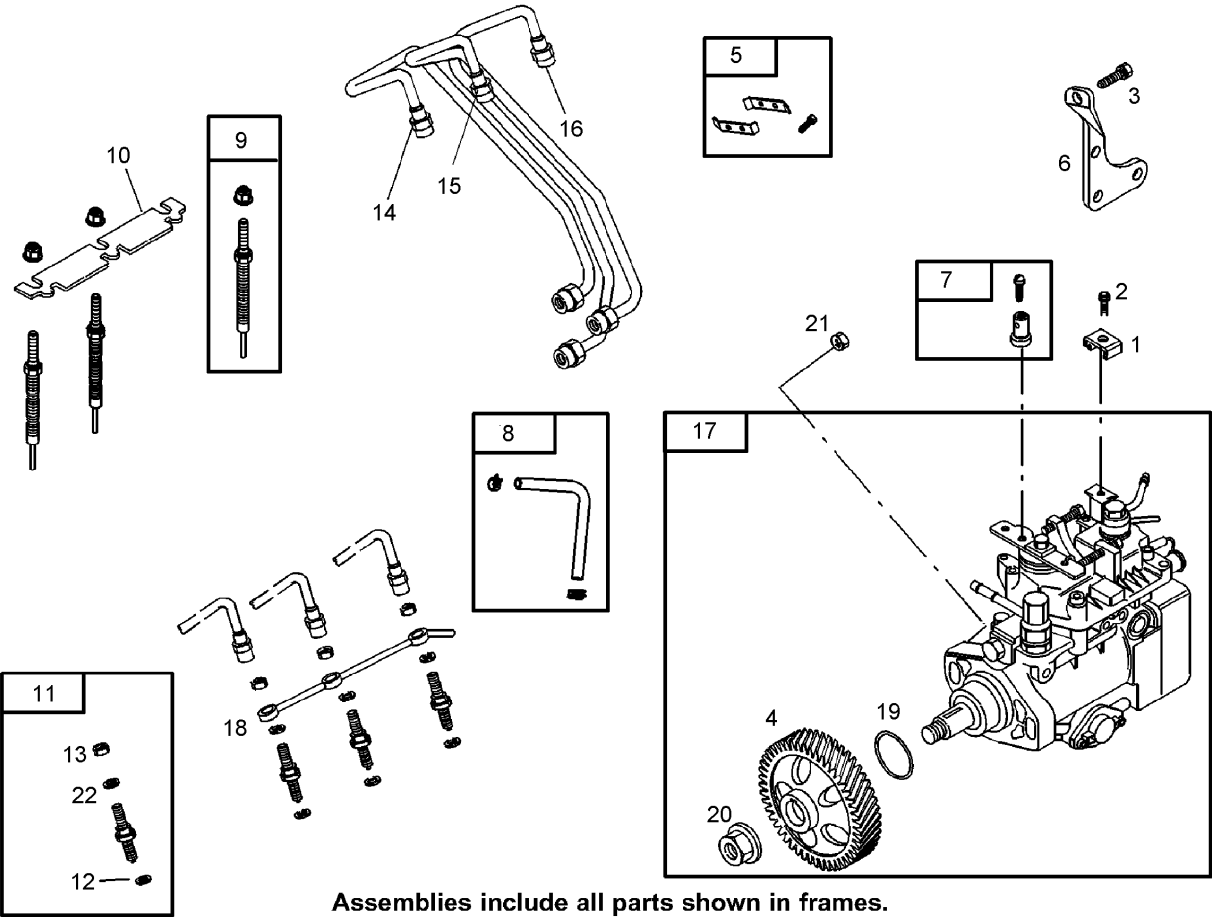

Injection Pump Assembly

Ref	Part No.	Qty.	Description				
1	99-9622	1	Clamp-Casing				
2	99-9056	1	Screw-Hex				
3	99-9616	1	Screw-Hex				
4	99-9689	1	Gear-Drive				
5	99-9625	1	Clamp				
6	99-9626	1	Bracket-Support				
7	99-9628	1	Clamp-Swivel				
8	99-9629	1	Hose / Clamp ASM				
9	99-9630	1	Plug-Glow				
10	99-9631	1	Strap-Plug, Glow				
11	99-9632	1	Nozzle-Injector				
12	99-9633	1	Seat-Injector				
13	105-9345	1	Nut				
14	99-9690	1	Pipe-Injector, No. 1				
15	99-9634	1	Pipe-Injector, No. 2				
16	99-9635	1	Pipe-Injector, No. 3				
17	105-9334	1	Pump-Injection				
18	99-9637	1	Pipe-Return, Fuel				
19	99-9618	1	O-Ring				
20	99-9620	1	Nut-Hex, Metric				
21	99-9619	1	Nut-Hex, Metric				
22	105-9343	1	Seat-Injector				

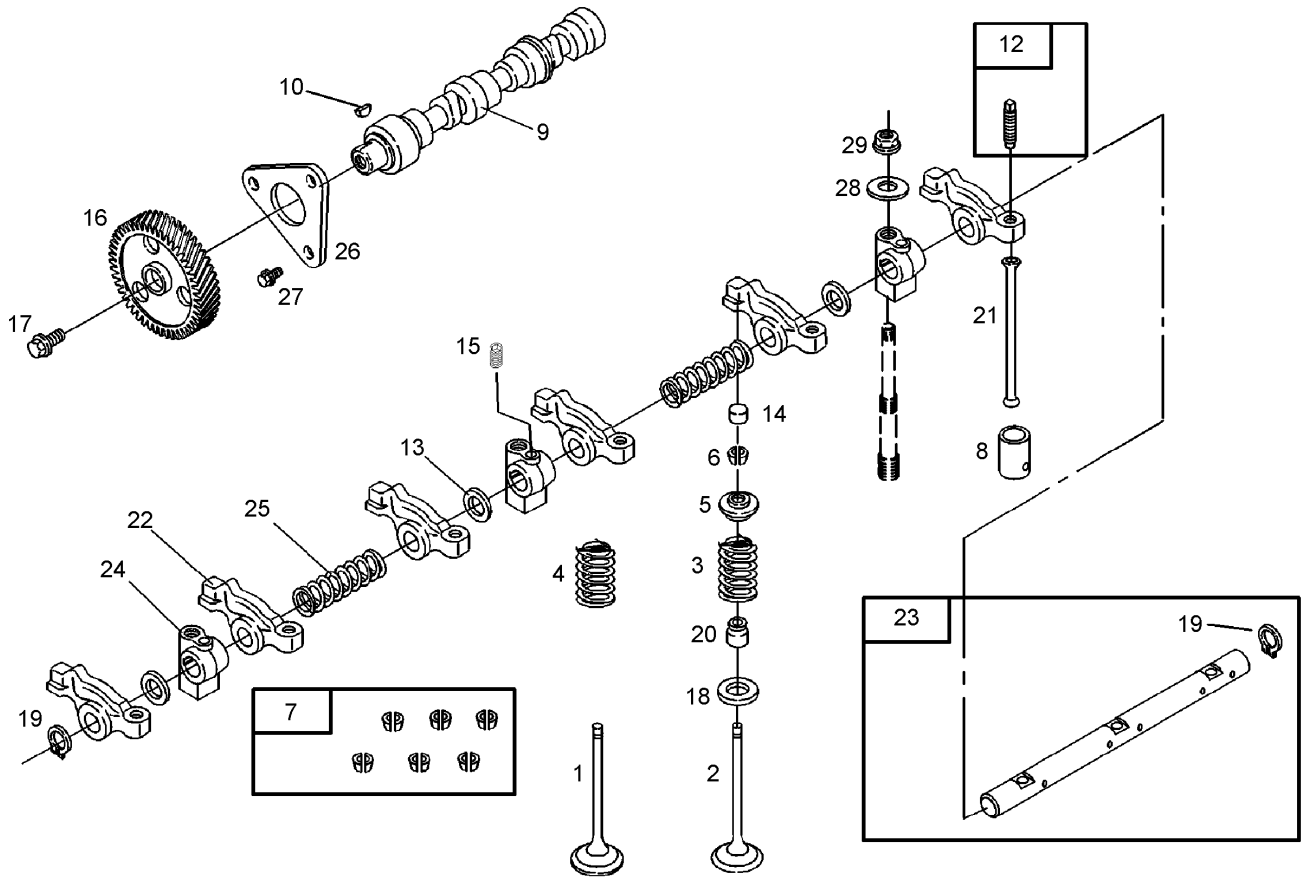


Assemblies include all parts shown in frames.

Camshaft Assembly

Ref	Part No.	Qty.	Description
1	99-9638	1	Valve-Exhaust
2	99-9639	1	Valve-Intake
3	99-9640	1	Spring-Valve
4	99-9640	1	Spring-Valve
5	99-9084	1	Retainer-Valve
6	99-9086	1	Keeper-Valve (Set)
7	99-9087	1	Keeper-Valve (Set Of 6)
8	99-9088	1	Tappet-Valve
9	99-9097	1	Shaft-Cam
10	99-9675	1	Key-Timing
12	99-9092	1	Adjuster-Arm, Rocker
13	99-9093	1	Washer-Spacer
14	99-9094	1	Cap-Valve
15	99-9090	1	Screw-Metric
16	99-9641	1	Gear-Cam
17	99-9085	1	Screw-Metric
18	99-9096	1	Seat-Spring, Valve
19	99-9099	1	Retainer
20	99-9643	1	Seal-Valve
21	99-9103	1	Rod-Push
22	99-9104	1	Arm-Rocker
23	99-9106	1	Shaft-Arm, Rocker
24	99-9107	1	Support-Arm, Rocker
25	99-9108	1	Spring-Shaft, Rocker


Ref	Part No.	Qty.	Description
26	99-9109	1	Retainer-Camshaft
27	99-9083	1	Screw-Hex
28	99-9079	1	Washer-Flat
29	99-9091	1	Nut-Hex, Metric

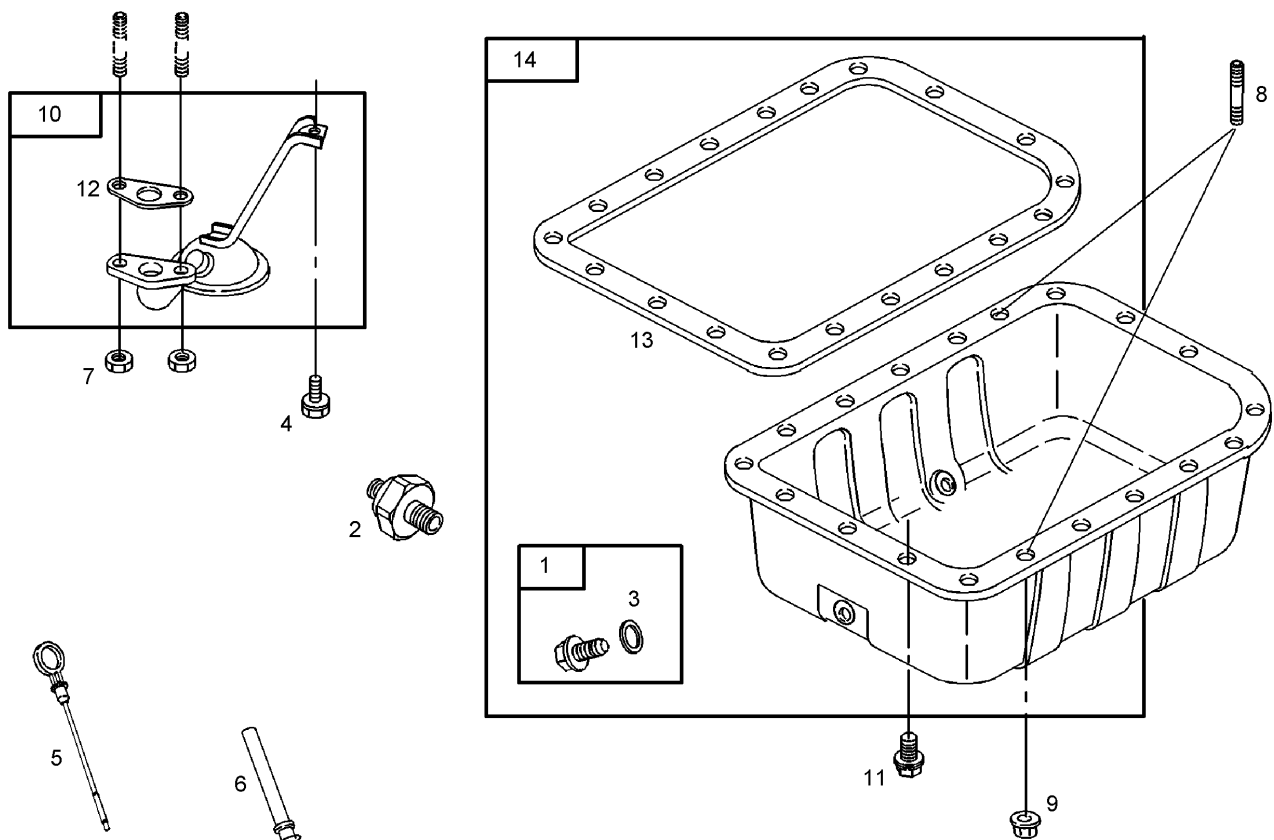

Assemblies include all parts shown in frames.

Oil Pan Assembly


Ref	Part No.	Qty.	Description				
1	99-9247	1	Plug-Drain, Oil				
2	107-9908	1	Switch-Pressure, Oil				
3	99-9249	1	Washer-Seal				
4	99-9111	1	Screw-Hex				
5	99-9272	1	*obs* Dipstick				
6	99-9118	1	Tube-Dipstick				
7	99-9114	1	Nut-Hex, Metric				
8	99-9112	1	Stud-Metric				
9	99-9113	1	Nut-Hex, Metric				
10	99-9116	1	Screen-Pump, Oil				
11	99-9111	1	Screw-Hex				
12	99-9120	1	Gasket-Strainer, Oil				
13	99-9121	1	Gasket-Pan, Oil				
14	99-9241	1	Pan-Oil				

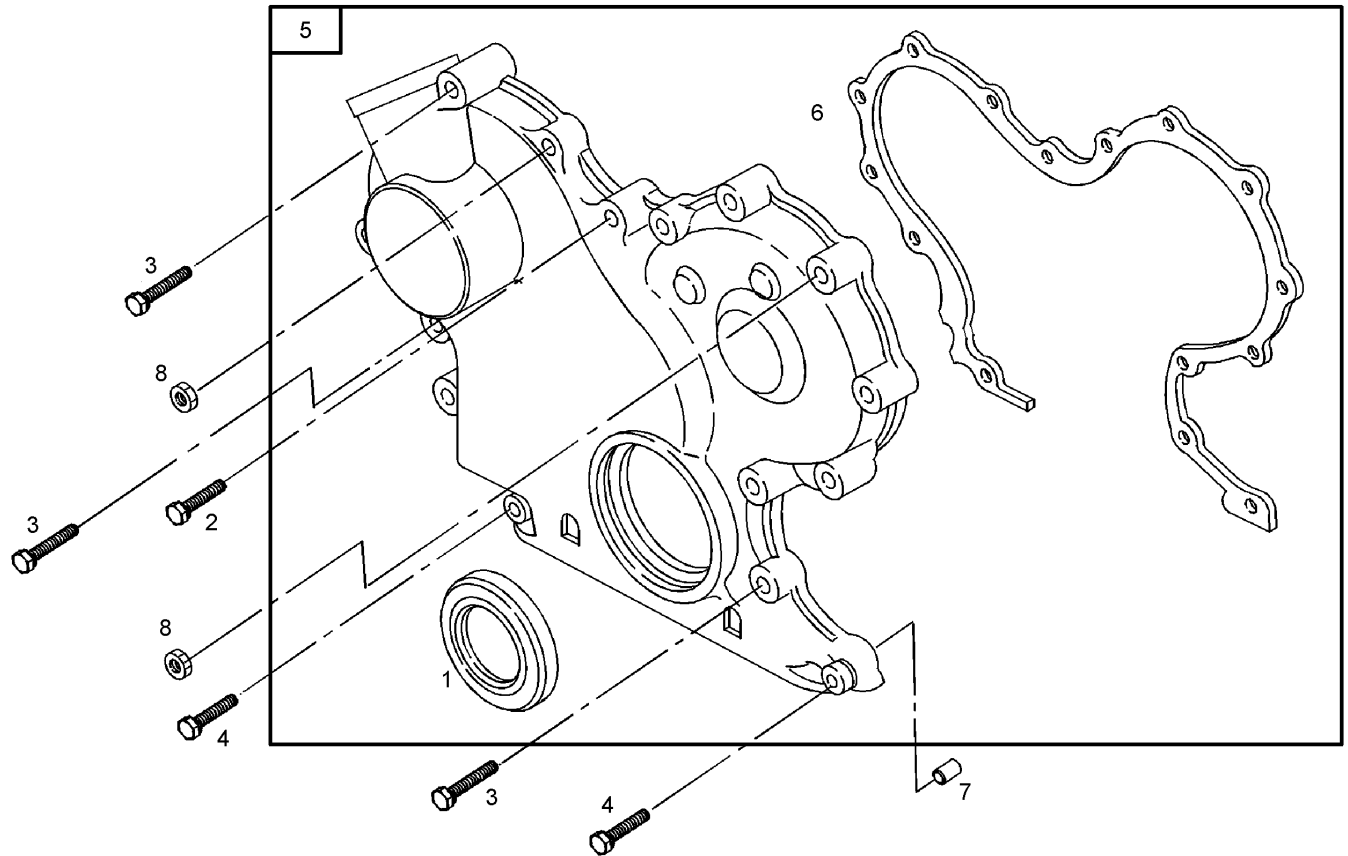

Assemblies include all parts shown in frames.


Gear Cover Assembly

Ref	Part No.	Qty.	Description				
1	107-9900	1	Seal-Oil				
2	99-9651	1	Screw-Hex				
3	99-9128	1	Screw-Hex				
4	99-9129	1	Screw-Hex				
5	99-9652	1	Gear Cover ASM				
6	99-9653	1	Gasket-Cover, Gear				
7	99-9014	1	Pin-Locating				
8	99-9114	1	Nut-Hex, Metric				

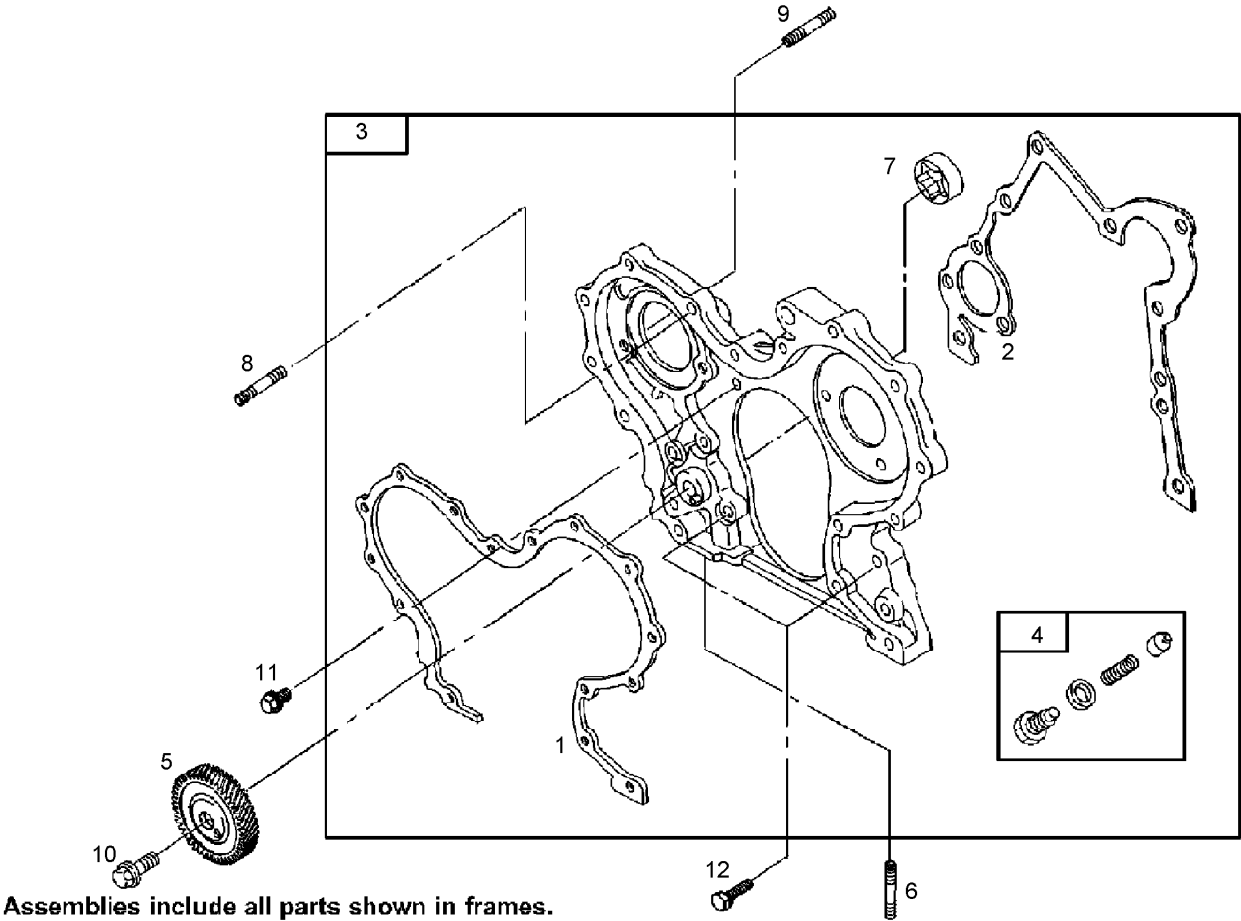


Gear Housing Assembly

Ref	Part No.	Qty.	Description				
1	99-9653	1	Gasket-Cover, Gear				
2	99-9136	1	Gasket-Cover, Gear				
3	99-9655	1	Housing-Gear				
4	99-9142	1	Valve-Relief, Oil				
5	99-9656	1	Gear-Drive				
6	99-9007	1	Stud-Metric				
7		1	Gerotor				
8	99-9137	1	Stud-Metric				
9	99-9654	1	Stud-Metric				
10	99-9135	1	Screw-Hex				
11	99-9134	1	Screw-Hex				
12	99-9133	1	Screw-Hex				

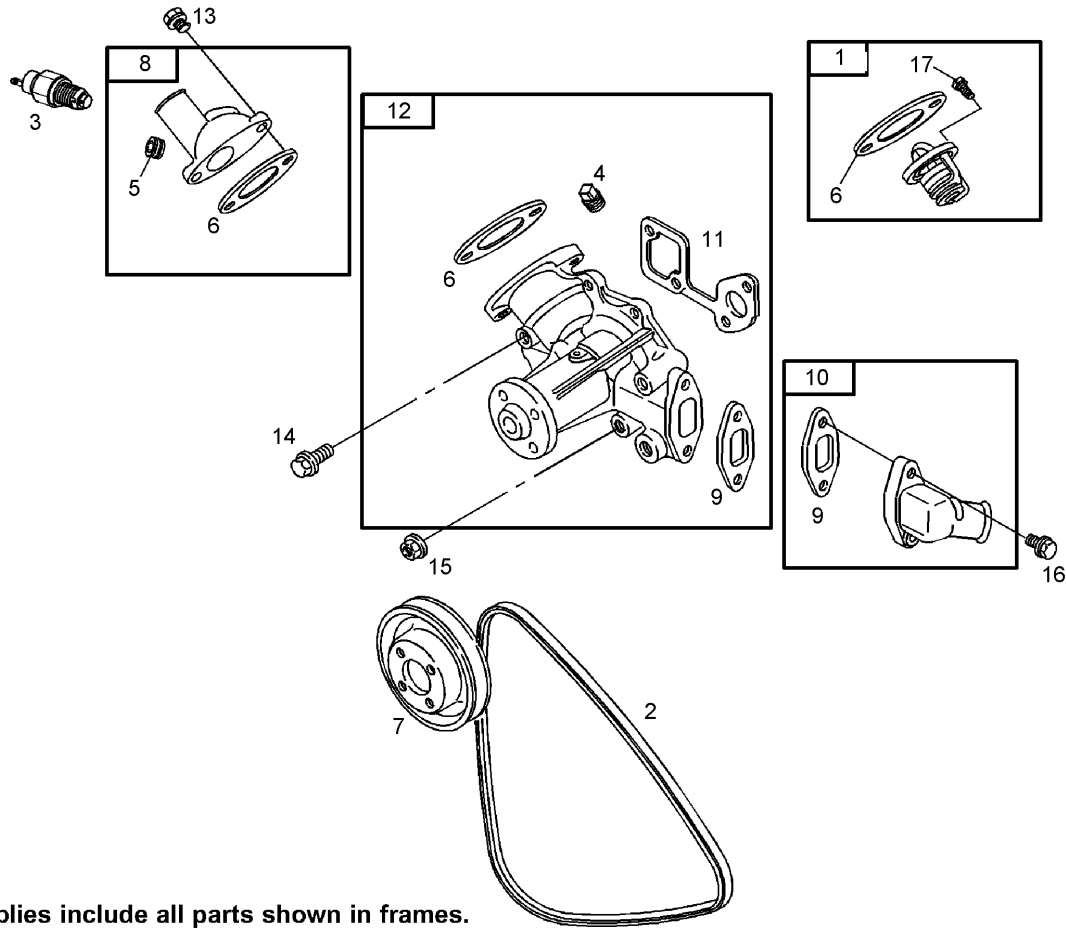

Water Pump Assembly


Ref	Part No.	Qty.	Description				
1	99-9155	1	Thermostat				
2	99-9156	1	Belt-V				
3	107-9902	1	Switch-Temperature, Water				
4	99-9159	1	Plug				
5	99-9158	1	Plug				
6	99-9163	1	Gasket-Outlet				
7	99-9164	1	Pulley-Pump				
8	99-9165	1	Housing-Outlet				
9	99-9166	1	Gasket-Housing, Inlet				
10	99-9167	1	Housing-Inlet				
11	99-9168	1	Gasket-Pump, Water				
12	99-9659	1	Pump-Water				
13	99-9004	1	Screw-Hex				
14	99-9151	1	Screw-Hex				
15	99-9153	1	Nut-Hex, Metric				
16	99-9004	1	Screw-Hex				
17	99-9152	1	Screw-Metric				

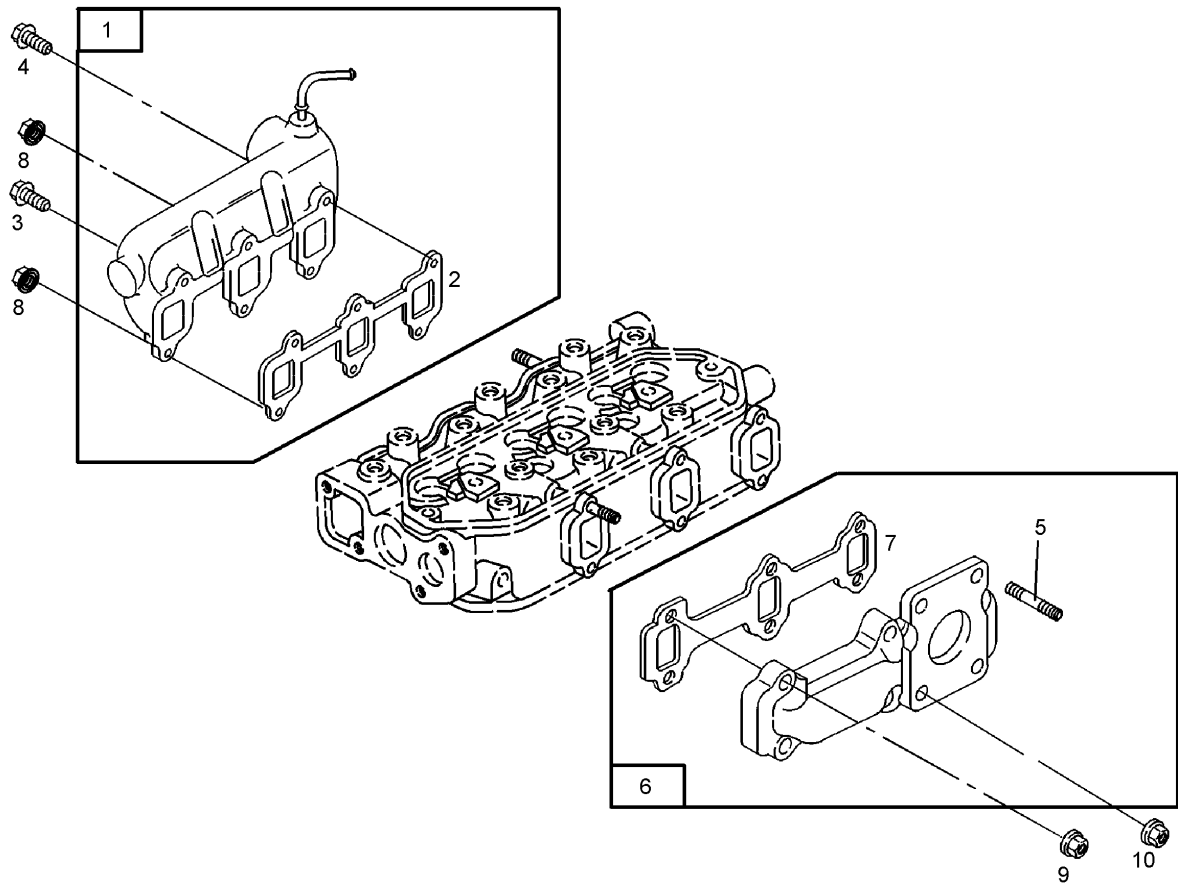

Assemblies include all parts shown in frames.

Manifold Assembly



Ref	Part No.	Qty.	Description				
1	99-9661	1	Manifold-Intake				
2	99-9662	1	Gasket-Intake				
3	99-9004	1	Screw-Hex				
4	99-9660	1	Screw-Hex				
5	99-9221	1	Stud-Standard				
6	99-9177	1	Manifold-Exhaust				
7	106-1855	1	Gasket-Exhaust				
8	99-9114	1	Nut-Hex, Metric				
9	99-9175	1	Nut-Hex, Metric				
10	99-9176	1	Nut-Hex				

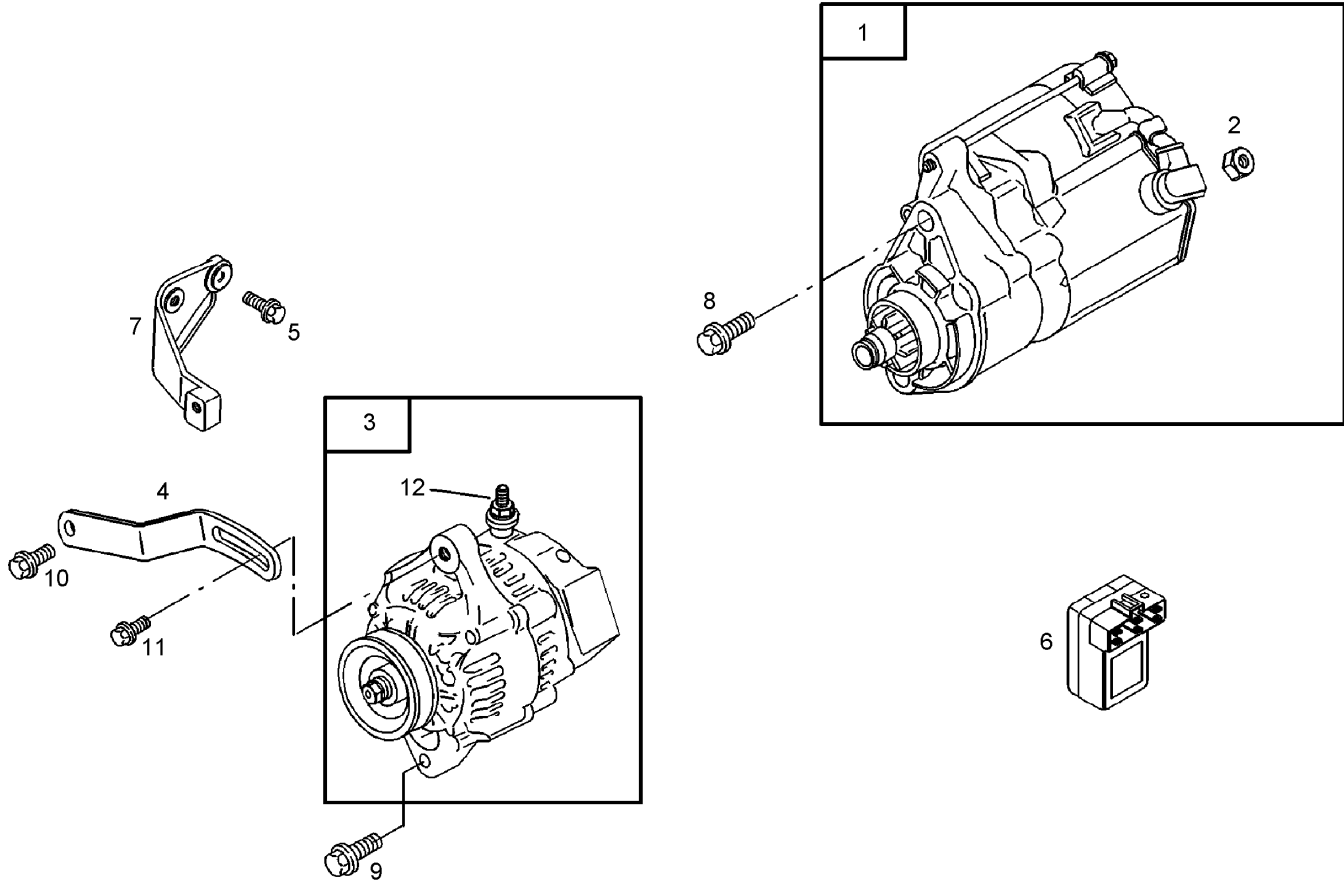

Assemblies include all parts shown in frames.

Starter Motor and Alternator Assembly

Ref	Part No.	Qty.	Description				
1	99-9207	1	Motor-Starter				
2	99-9206	1	Nut-Hex, Metric				
3	99-9209	1	Alternator				
4	106-1952	1	Strap-Adjusting				
5	99-9203	1	Screw-Hex				
6	99-9666	1	Module				
7	99-9211	1	Bracket-Support				
8	99-9201	1	Screw-Hex				
9	99-9205	1	Screw-Hex, Metric				
10	99-9202	1	Screw-Hex				
11	107-9903	1	Screw-Hex, Metric				
12	99-9114	1	Nut-Hex, Metric				

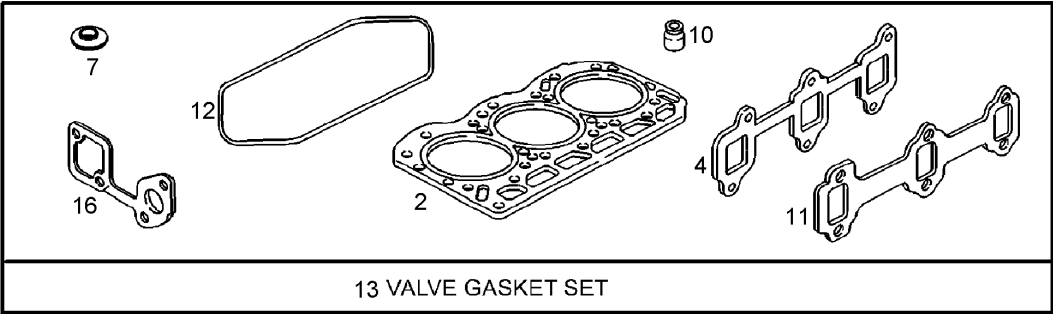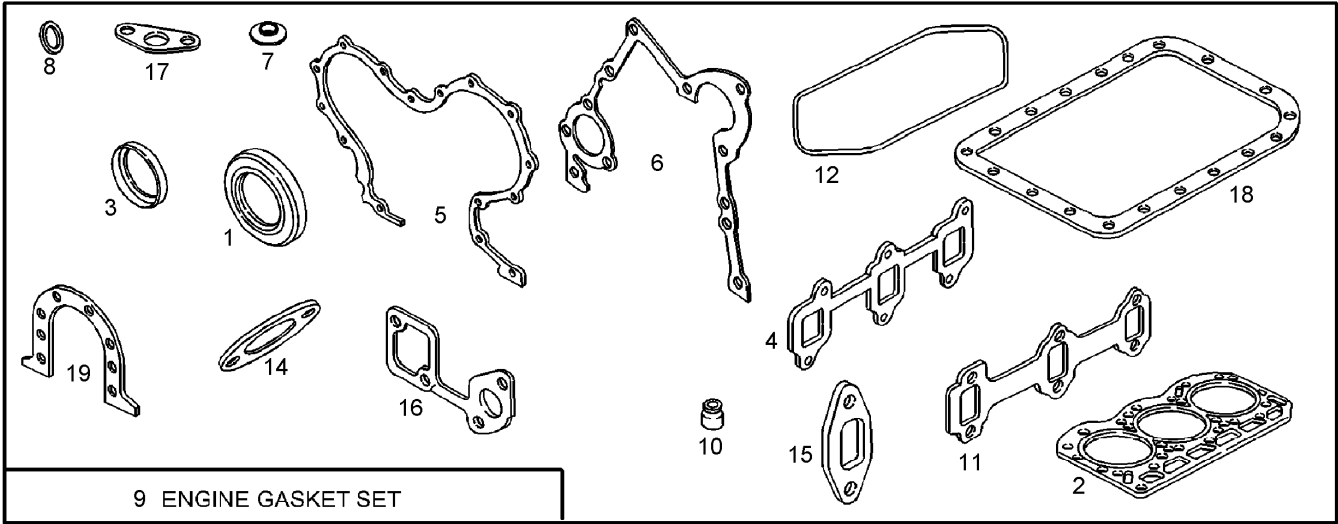

Assemblies include all parts shown in frames.

Gasket Assembly

Ref	Part No.	Qty.	Description				
1	99-9003	1	Seal-Oil				
2	107-9898	1	Gasket-Head, Cylinder				
3	107-9900	1	Seal-Oil				
4	99-9662	1	Gasket-Intake				
5	99-9653	1	Gasket-Cover, Gear				
6	99-9136	1	Gasket-Cover, Gear				
7	99-9063	1	Washer-Seal				
8	99-9249	1	Washer-Seal				
9	107-9906	1	Gasket Set				
10	99-9643	1	Seal-Valve				
11	106-1855	1	Gasket-Exhaust				
12	99-9073	1	Gasket-Cover, Rocker				
13	107-9907	1	Valve Overhaul Kit				
14	99-9163	1	Gasket-Outlet				
15	99-9166	1	Gasket-Housing, Inlet				
16	99-9168	1	Gasket-Pump, Water				
17	99-9120	1	Gasket-Strainer, Oil				
18	99-9121	1	Gasket-Pan, Oil				
19	99-9021	1	Gasket-Retainer				

NOTES

NOTES

NOTES

