



Groundsmaster® 3500-D

Model No. 30821 - 210000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame And Platform Assembly	 4	Scissor Assembly	 39
Front Wheel And Brake Assembly	 5	Reel Motor Assembly	 40
Hydraulic Wheel Motor Assembly No. 75-9990	 6	Battery Assembly	 41
Hydraulic Motor Assembly No. 95-8693	 7	Parking Brake Assembly	 42
Brake Assembly No. 71-1500	 8	Crankcase Assembly	 43
Steering Column Assembly	 9	Oil Pan Assembly	 44
Steering Control Assembly No. 104-0474	 10	Cylinder Head Assembly	 45
Rear Fork And Tire Assembly	 11	Grease and Oil Filter Assembly	 46
Hydraulic Cylinder Assembly No. 94-8141	 12	Filter, Oil Cooler, and Pipe Assembly	 47
Hydraulic Motor Assembly No. 95-8694	 13	Head Cover Assembly	 48
Control Panel Assembly	 14	Dipstick Assembly	 49
Front Platform Assembly	 15	Main Bearing Case Assembly	 50
Traction Pedal Assembly	 16	Camshaft Assembly	 51
Control Valve Installation Assembly	 17	Piston and Crankshaft Assembly	 52
Control Valve Assembly No. 95-8581	 18	Flywheel Assembly	 53
Rear Liftarm Assembly	 19	Fuel Camshaft Assembly	 54
Hydraulic Cylinder Assembly No. 95-8978	 21	Engine Stop Lever Assembly	 55
Neutral Arm Assembly	 22	Stop Solenoid and Fuel Pump Assembly	 56
Engine Assembly	 23	Injection Pump Installation Assembly	 57
Air Cleaner And Muffler Assembly	 24	Injection Pump Assembly No. 98-9643	 58
Radiator Assembly	 25	Governor Assembly	 59
Hood-Screen Assembly	 26	Speed Control Plate Assembly	 60
Fuel System Assembly	 27	Nozzle Holder and Glow Plug Assembly	 61
Water/fuel Filter Assembly No. 98-9305	 29	Nozzle Holder Assembly No. 98-9468	 62
Manifold Block Installation Assembly	 30	Alternator and Pulley Assembly	 63
Manifold Block Assembly No. 100-4826	 31	Alternator Assembly No. 98-9474	 64
Hydraulic Tank Assembly	 32	Starter Mount Assembly	 65
Hydrostat Assembly	 33	Starter Assembly No. 98-9705	 66
Piston Pump Assembly No. 104-0428	 35	Water Flange and Thermostat Assembly	 67
Hydraulic Pump Assembly No. 100-1646	 36	Water Pump Assembly	 68
Carrier Assembly	 37	Valve and Rocker Arm Assembly	 69
		Exhaust Manifold and Gasket Assembly	 70
		Turbo Charge Assembly	 71

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

 
Footnotes

- ❶

Not serviced
- ❷

Not serviced separately
- ❸


* Not Illustrated

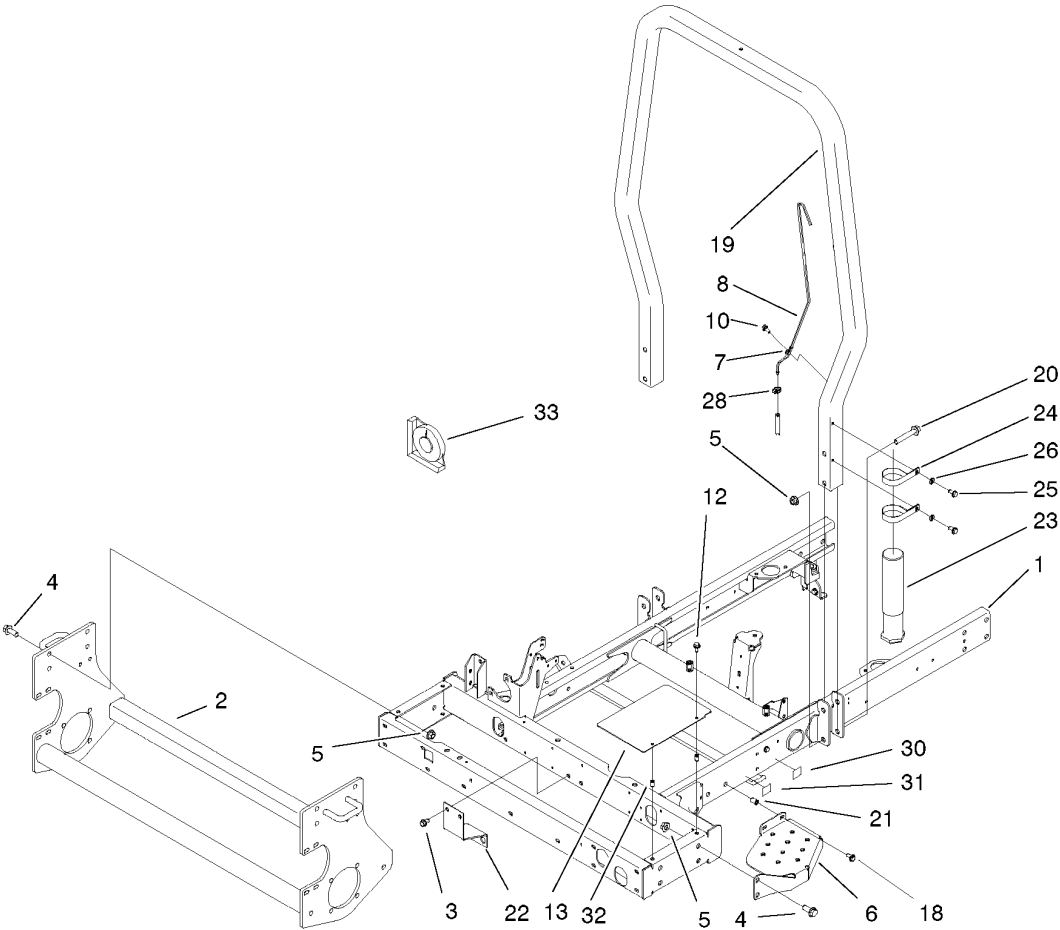

Frame And Platform Assembly

Ref	Part No.	Qty.	Description
1	99-3610-03	1	Frame
2	95-8568-03	1	Frame-Lower
3	3274-80	2	Screw-HH
4	3234-38	8	Screw-Hfh
5	32128-49	12	Nut-HHF
6	99-3375-03	1	Step
7	2412-72	3	Clip-Closed, Insulated
8	95-8615	1	Tube-Breather
10	32144-10	8	Screw-HWH
12	3234-4	2	Screw-HHF
13	104-0468-01	1	Cover-Frame
18	3234-5	2	Screw-HHF
19	99-3350-03	1	Tube-ROPS
20	3234-40	4	Screw-Hfh
21	32148-8	2	Insert-Threaded
22	95-8598-03	1	Bracket-Bulkhead, Scissor
23	74-0720	1	Tube-Manual
24	2412-133	2	R-Clamp
25	32144-70	2	Screw-HH
26	3256-23	2	Washer-Flat
28	2412-108	1	Clamp-Worm
30	63-9920	1	Decal-Level, Noise
31	85-6930	1	Decal-Noise Rating
32	32148-6	2	Nut-Insert


Ref	Part No.	Qty.	Description
33	99-3503	1	Indicator-Angle

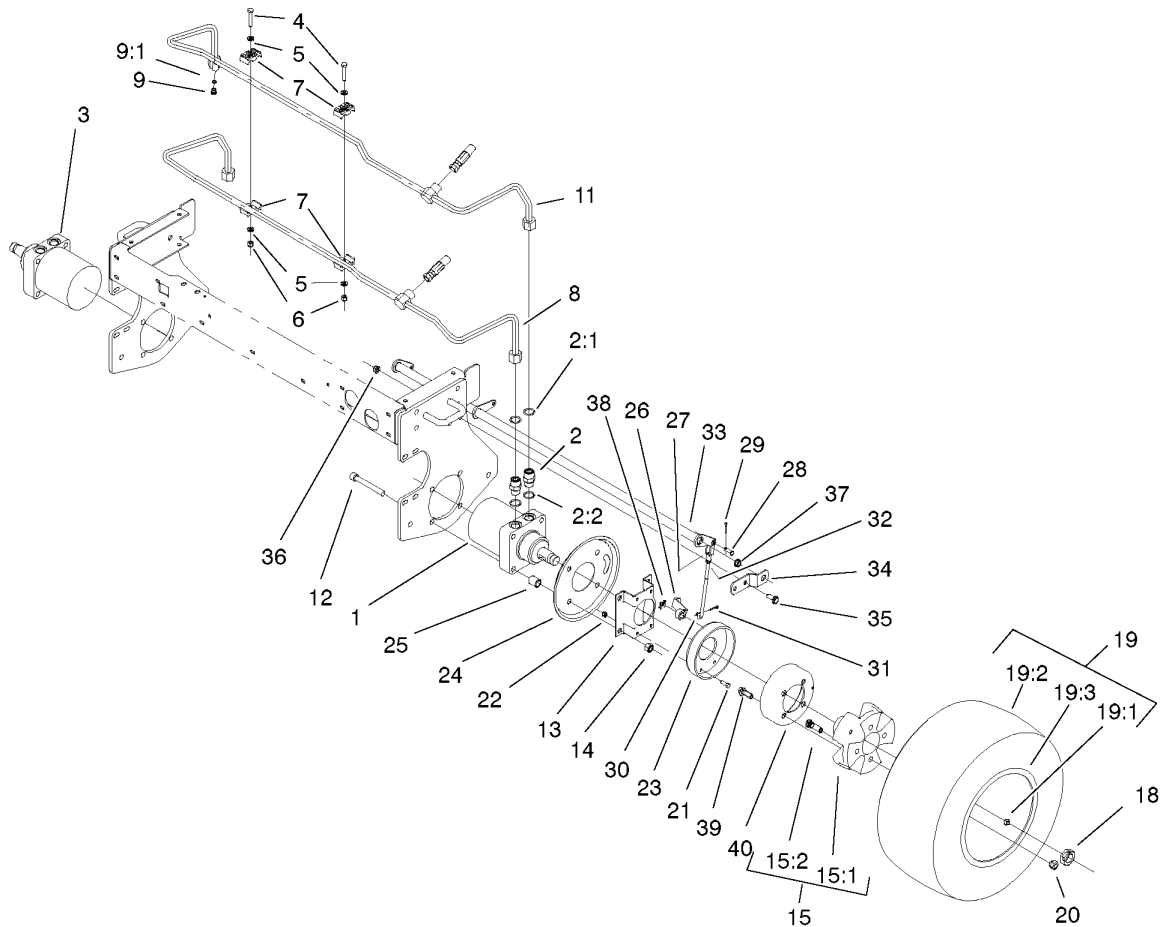 

Front Wheel And Brake Assembly


Ref	Part No.	Qty.	Description
1	75-9990	1	Hydraulic Motor ASM
2	340-7	4	Adapter
2:1	237-65	1	O-Ring
2:2	237-80	1	O-Ring
3	95-8693	1	Hydraulic Motor ASM
4	322-9	2	Screw-HH
5	3256-23	4	Washer-Flat
6	3296-29	2	Nut-Lock
7	56-7971	4	Clamp-Tube
8	95-8783	1	Tube ASM
9	353-990	1	Plug
9:1	237-78	1	O-Ring
11	95-8784	1	Tube ASM
12	3274-99	8	Screw-HSH
13	84-2000-03	2	Bracket-Brake
14	3296-23	8	Nut-Lock, NI
15		2	Wheel Hub / Stud ASM
15:1	104-0462-03	1	Hub-Wheel
15:2	10-6830	4	Stud-Type, Drive
18	26-3790	2	Nut-Lock
19		2	Tire & Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	104-0451	1	Tire
19:3	104-0452	1	Rim-Wheel

Ref	Part No.	Qty.	Description
20	242-50	8	Nut-Lug
21	321-5	8	Screw-HH
22	3296-42	8	Nut-Lock, NI
23	71-1500	2	Brake ASM
24	104-0485-03	2	Shield-Wheel
25	92-1715	8	Spacer
26	93-6850	2	Lever-Brake
27	282-2	2	Yoke
28	283-1	2	Pin-Yoke
29	3272-10	2	Pin-Cotter
30	104-4627	2	Rod-Adjusting
31	3272-6	2	Pin-Cotter
32	3220-2	2	Nut
33	104-4625-03	1	Brake Pivot Shaft ASM
34	95-8683	2	Bracket-Pivot, Brake
35	3234-11	4	Screw-HHF
36	32128-43	4	Nut-Flange
37	256-156	2	Bushing-Flange
38	70-9850	2	Clip-Retaining
39	3274-105	8	Screw-HSBH
40	104-4809	2	Drum-Brake

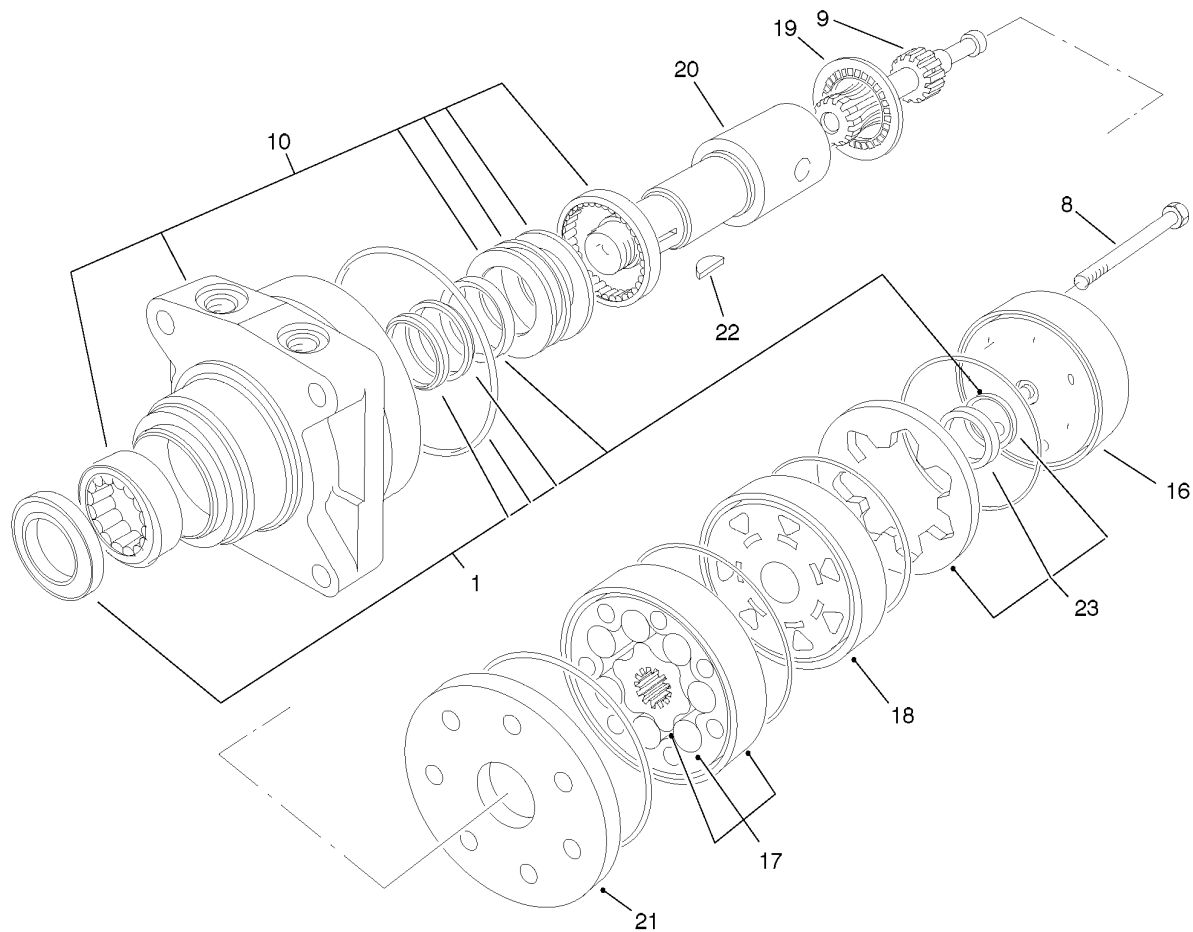 


Hydraulic Wheel Motor Assembly No. 75-9990

Ref	Part No.	Qty.	Description				
1	76-0800	1	Kit-Seal				
8	76-1010	7	Screw				
9	76-0960	1	Link-Drive				
10	76-0810	1	Wheel Motor Housing ASM				
16	76-0940	1	End Cover ASM				
17	76-0970	1	Set-Rotor				
18	76-0840	1	Manifold				
19	76-0850	1	Bearing-Thrust				
20	76-0860	1	Shaft-Coupling				
21	76-0870	1	Plate-Wear				
22	3257-42	1	Key-Woodruff				
23	76-0880	1	Commutator ASM				

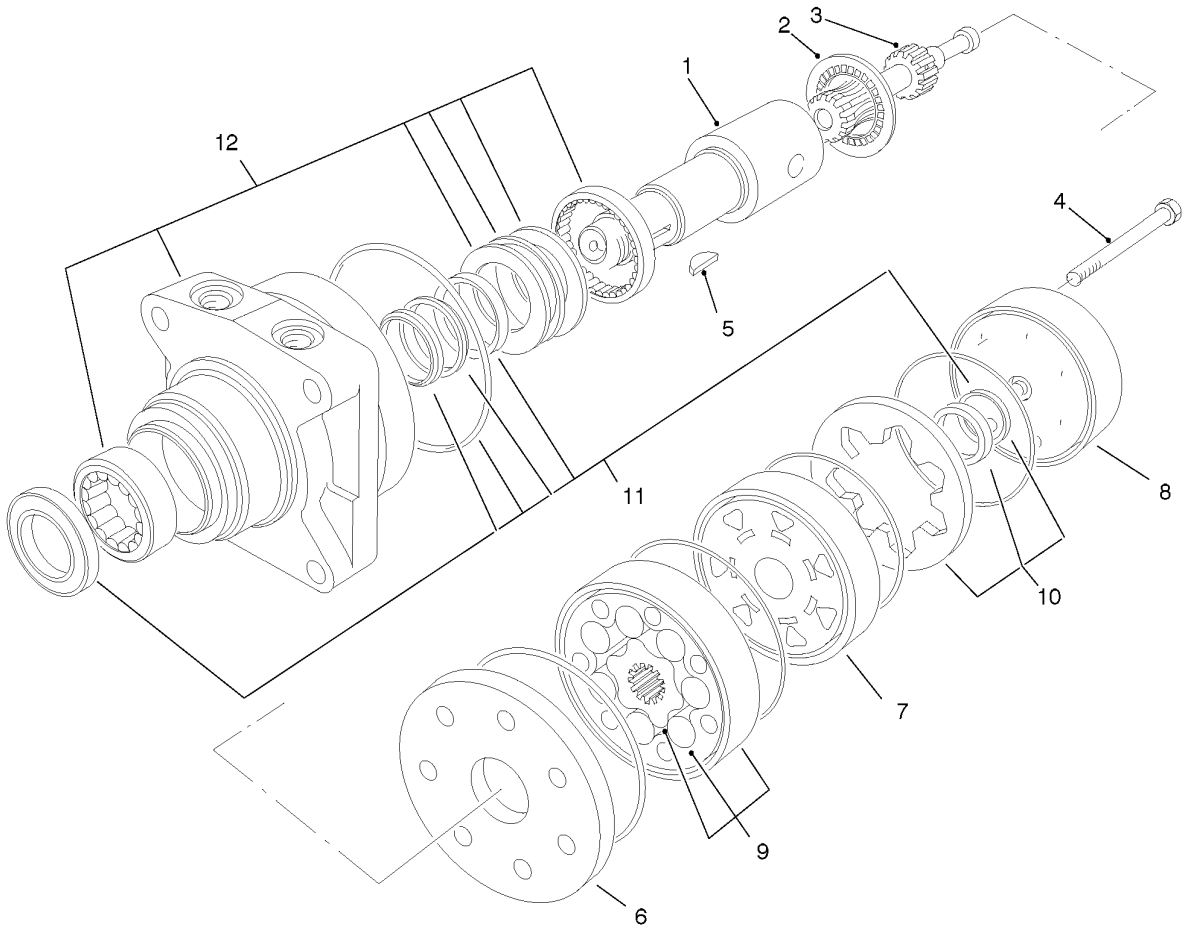 


Hydraulic Motor Assembly No. 95-8693

Ref	Part No.	Qty.	Description				
1	76-0860	1	Shaft-Coupling				
2	76-0850	1	Bearing-Thrust				
3	76-0960	1	Link-Drive				
4	76-1010	7	Screw				
5	3257-42	1	Key-Woodruff				
6	76-0870	1	Plate-Wear				
7	99-3535	1	Manifold				
8	76-0940	1	End Cover ASM				
9	76-0970	1	Set-Rotor				
10	76-0880	1	Commutator ASM				
11	76-0800	1	Kit-Seal				
12	76-0810	1	Wheel Motor Housing ASM				

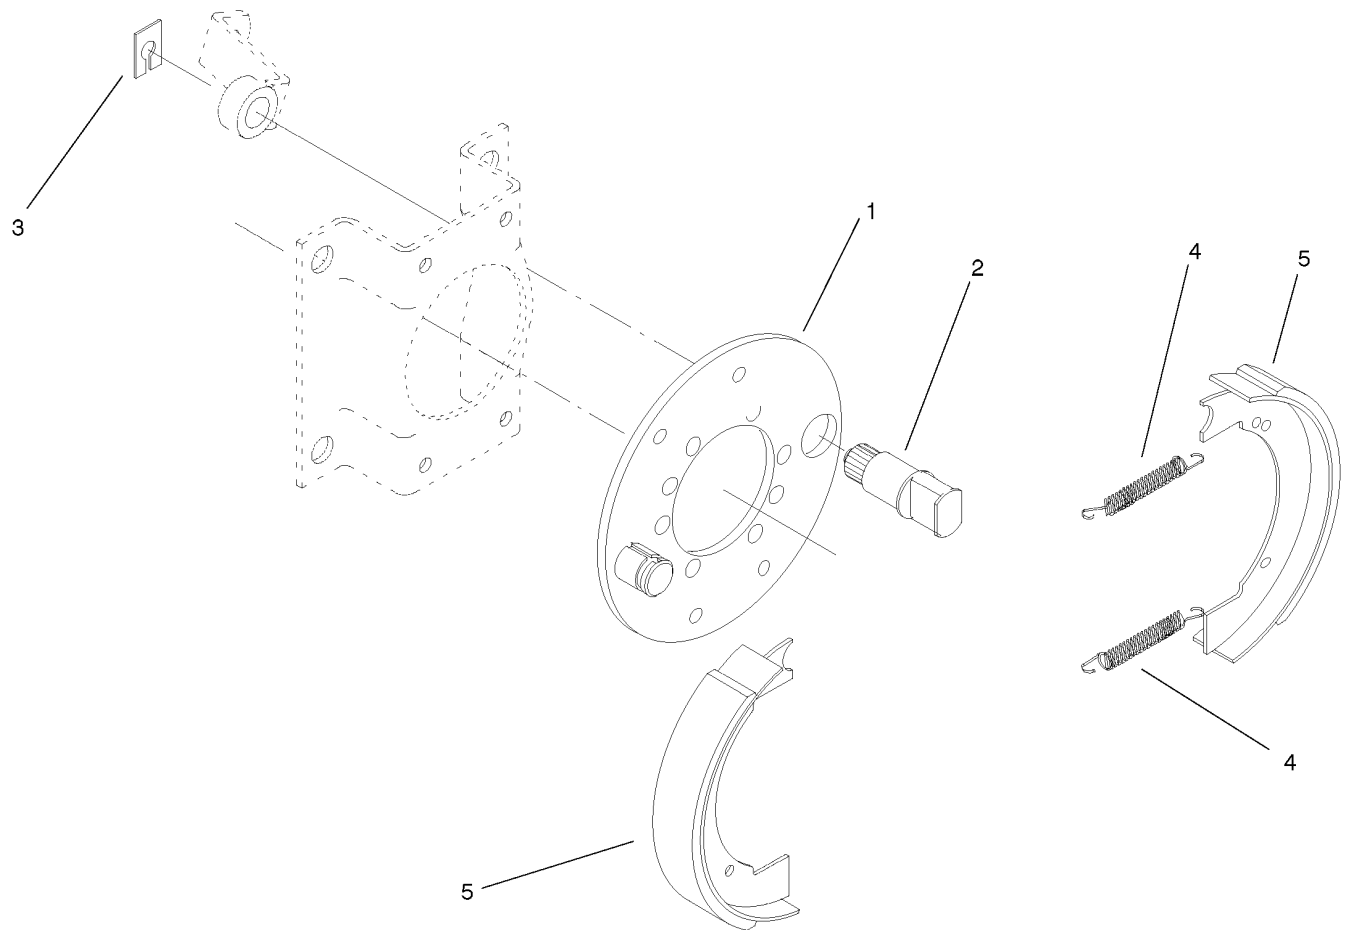 


Brake Assembly No. 71-1500

Ref	Part No.	Qty.	Description
1	70-9870	1	Plate-Backing
2	70-9860	1	Cam-Brake
3	70-9850	1	Clip-Retaining
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

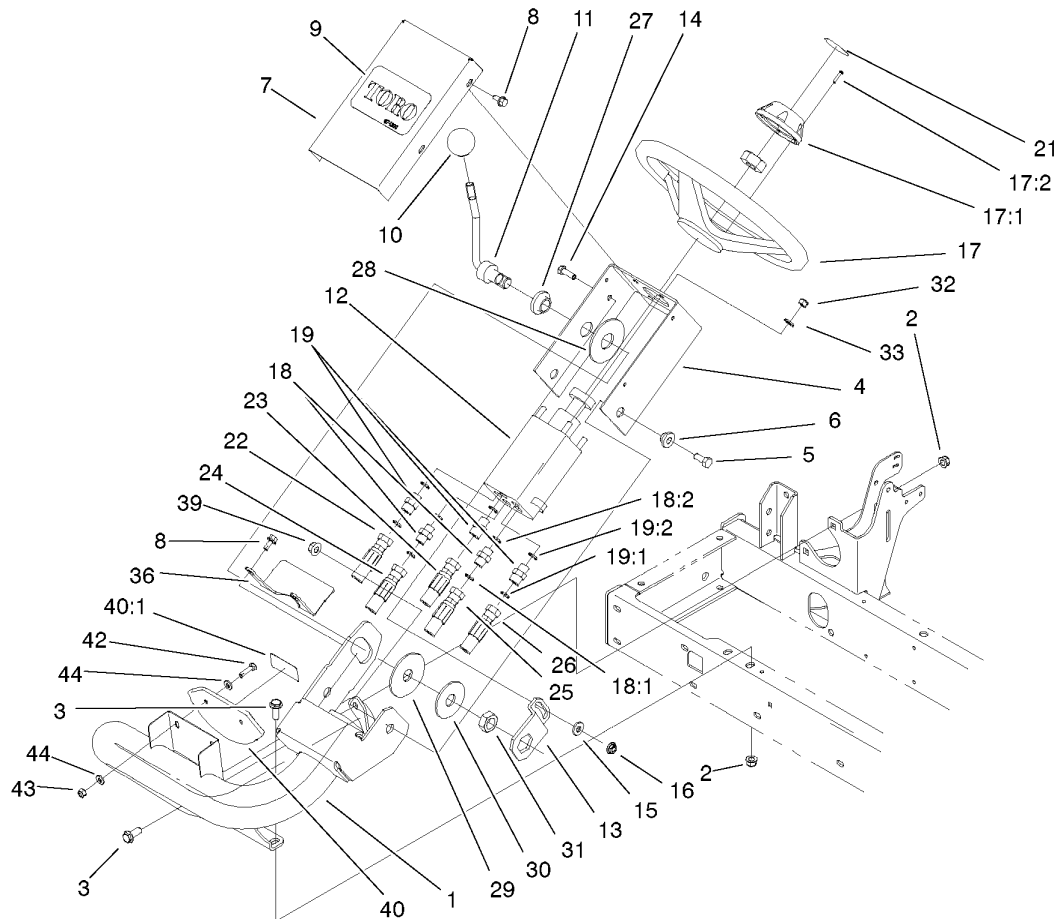 


Steering Column Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-4896-01	1	Arm-Steering	19:2	237-42	1	O-Ring
2	32128-43	4	Nut-Flange	21	68-5370	1	Decal-Toro
3	3234-11	4	Screw-HHF	22	95-8842	1	Hose ASM
4	95-8793-01	1	Bracket-Valve, Steering	23	95-8843	1	Hose ASM
5	323-5	2	Screw-HH	24	100-4892	1	Hose ASM
6	93-5988	2	Hub-Pivot	25	100-4893	1	Hose ASM
7	95-8794-01	1	Cover-Valve, Steering	26	95-8846	1	Hose ASM
8	32144-10	5	Screw-HWH	27	99-3502	1	Boss
9	67-1300	1	Decal-Toro	28	31-0390	1	Disc-Friction
10	233-48	1	Knob	29	82-9010	1	Disc-Friction
11	95-8798-03	1	Lever-Steering	30	80-2930	1	Washer-Flat
12	104-0474	1	Control-Steering	31	3218-7	1	Nut-Jam
13	80-2880	1	Bracket-Tilt	32	3296-4	4	Nut-Lock, NI
14	322-5	1	Screw-HH	33	3256-23	4	Washer-Flat
15	3256-3	1	Washer-Flat	36	99-3405-01	1	Shield-Steering
16	32128-44	1	Nut	39	32128-21	2	Nut-HF
17	68-5130	1	Wheel-Steering	40	100-4929	1	Slope Indicator ASM
17:1	68-5140	1	Cap-Wheel, Steering	40:1	100-4837	1	Decal-Danger
17:2	32144-21	1	Screw	40:1	100-4933	1	Decal-Danger
18	340-1	2	Adapter	42	321-7	2	Screw-HH
18:1	237-35	1	O-Ring	43	3296-42	2	Nut-Lock, NI
18:2	237-42	1	O-Ring	44	3256-22	4	Washer-Flat
19	340-2	3	Adapter				
19:1	237-22	1	O-Ring				

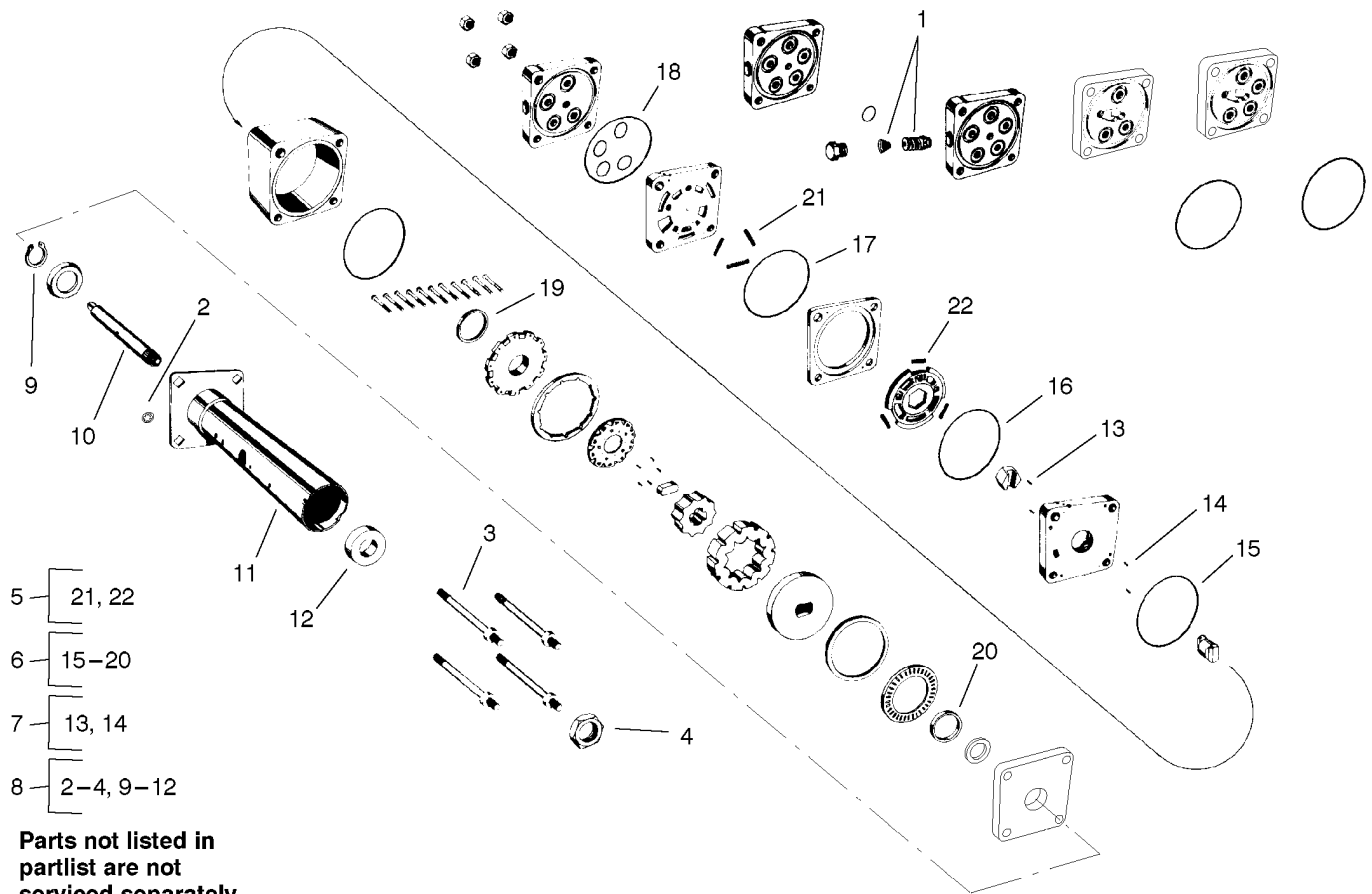 

Steering Control Assembly No. 104-0474


Ref	Part No.	Qty.	Description				
1	99-3523	1	Cartridge-Valve, Relief				
2	92-7316	4	Nut-On, Push				
3	99-3524	4	Bolt-Special				
4	47-6990	1	Nut				
5	66-9970	1	Kit-Spring				
6	66-9980	1	Kit-Seal				
7	66-9990	1	Kit-Roller, Needle				
8	104-0475	1	Column ASM				

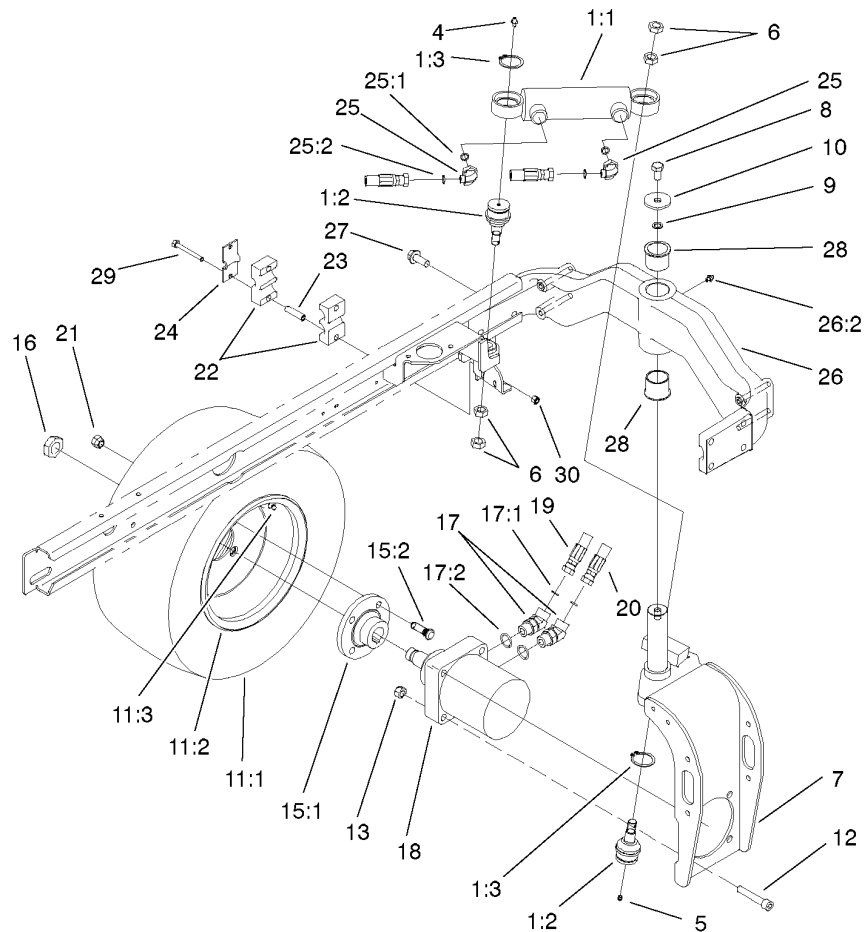 

Rear Fork And Tire Assembly


Ref	Part No.	Qty.	Description
❶ 1		1	Steering Cylinder/Balljoint ASM
1:1	94-8141	1	Hydraulic Cylinder ASM
1:2	92-5838	2	Joint-Ball
1:3	32151-104	2	Ring-Retaining, External
4	302-5	1	Fitting-Grease
5	302-59	1	Plug-Threaded
6	3220-6	4	Nut-Jam
7	95-8905-01	1	Fork-Rear
8	325-3	1	Screw-HH
9	3255-2	1	Washer-Lock/EXT
10	75-7730	1	Washer-Thrust
❶ 11		1	Tire & Wheel ASM
11:1	95-8656	1	Tire
11:2	95-8657	1	Rim-Wheel
11:3	232-27	1	Stem-Valve
12	3274-93	4	Screw-HSH
13	3296-23	4	Nut-Lock, NI
❶ 15		1	Wheel Hub / Stud ASM
15:1	10-6870-03	1	Hub-Wheel
15:2	10-6830	4	Stud-Type, Drive
16	26-3790	1	Nut-Lock
17	340-14	2	Fitting-HYD., 45 DEG
17:1	237-65	1	O-Ring
17:2	237-80	1	O-Ring

Ref	Part No.	Qty.	Description
18	95-8694	1	Hydraulic Motor ASM
19	100-4878	1	Hose ASM
20	100-4877	1	Hose ASM
21	242-50	4	Nut-Lug
22	82-8170	2	Clamp
23	93-7960	2	Spacer
24	93-7961	1	Clamp-Drain, Case
25	340-132	2	Fitting-HYD, 90
25:1	237-78	1	O-Ring
25:2	237-21	1	O-Ring
26	18-3979-03	1	Rear Casting ASM
26:2	302-5	1	Fitting-Grease
27	3234-38	8	Screw-HHF
28	95-8805	2	Bushing
29	322-13	2	Screw-HH
30	3296-29	2	Nut-Lock

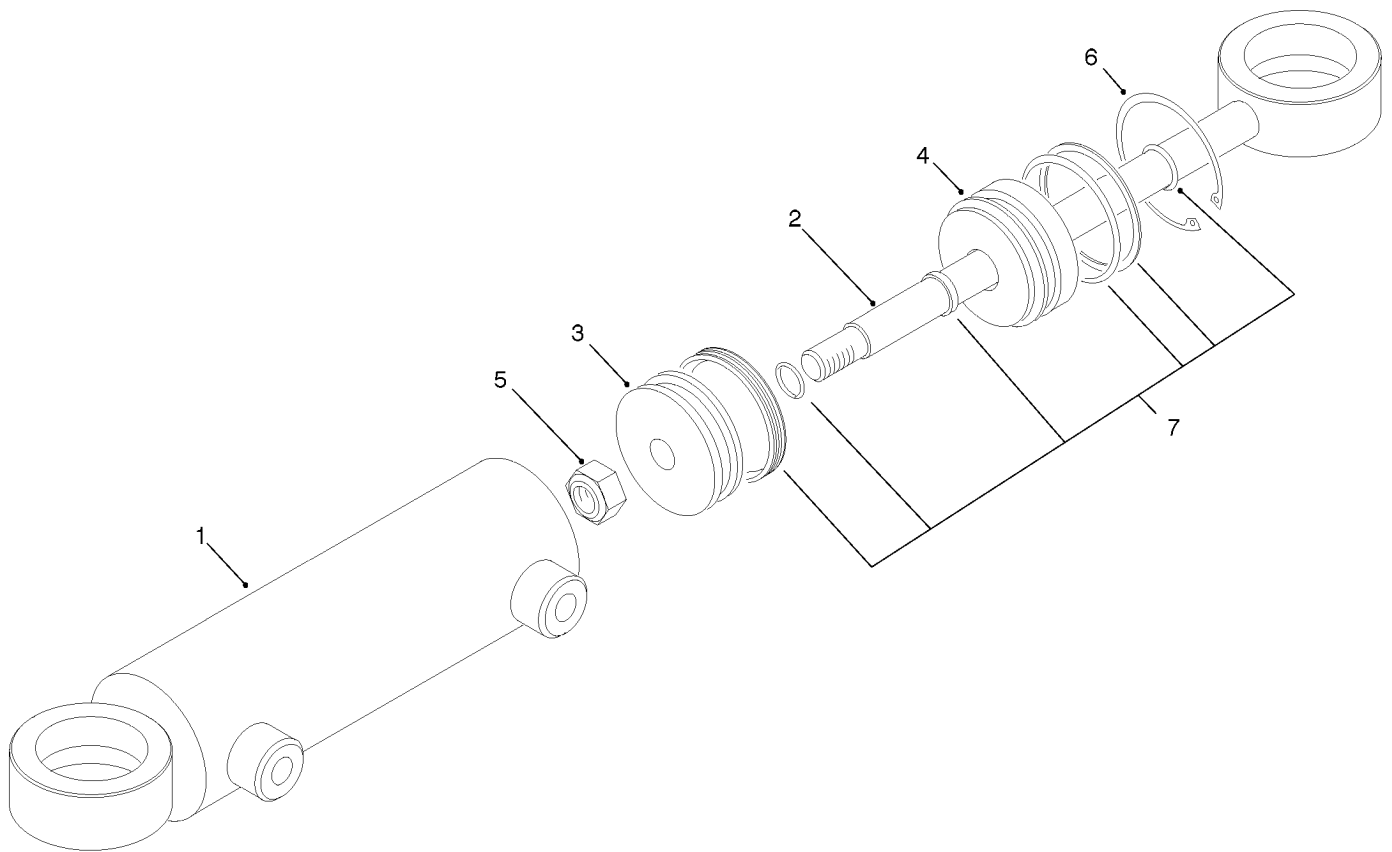 


Hydraulic Cylinder Assembly No. 94-8141

Ref	Part No.	Qty.	Description				
1	94-9955	1	Barrel ASM				
2	94-9956	1	Piston Rod ASM				
3	94-9957	1	Piston				
4	94-9958	1	Gland-Cylinder				
5	32152-10	1	Locknut-Deform, Top				
6	32120-8	1	Ring-Snap				
7	86-5390	1	Kit-Seal Repair, 2" Cylinder				

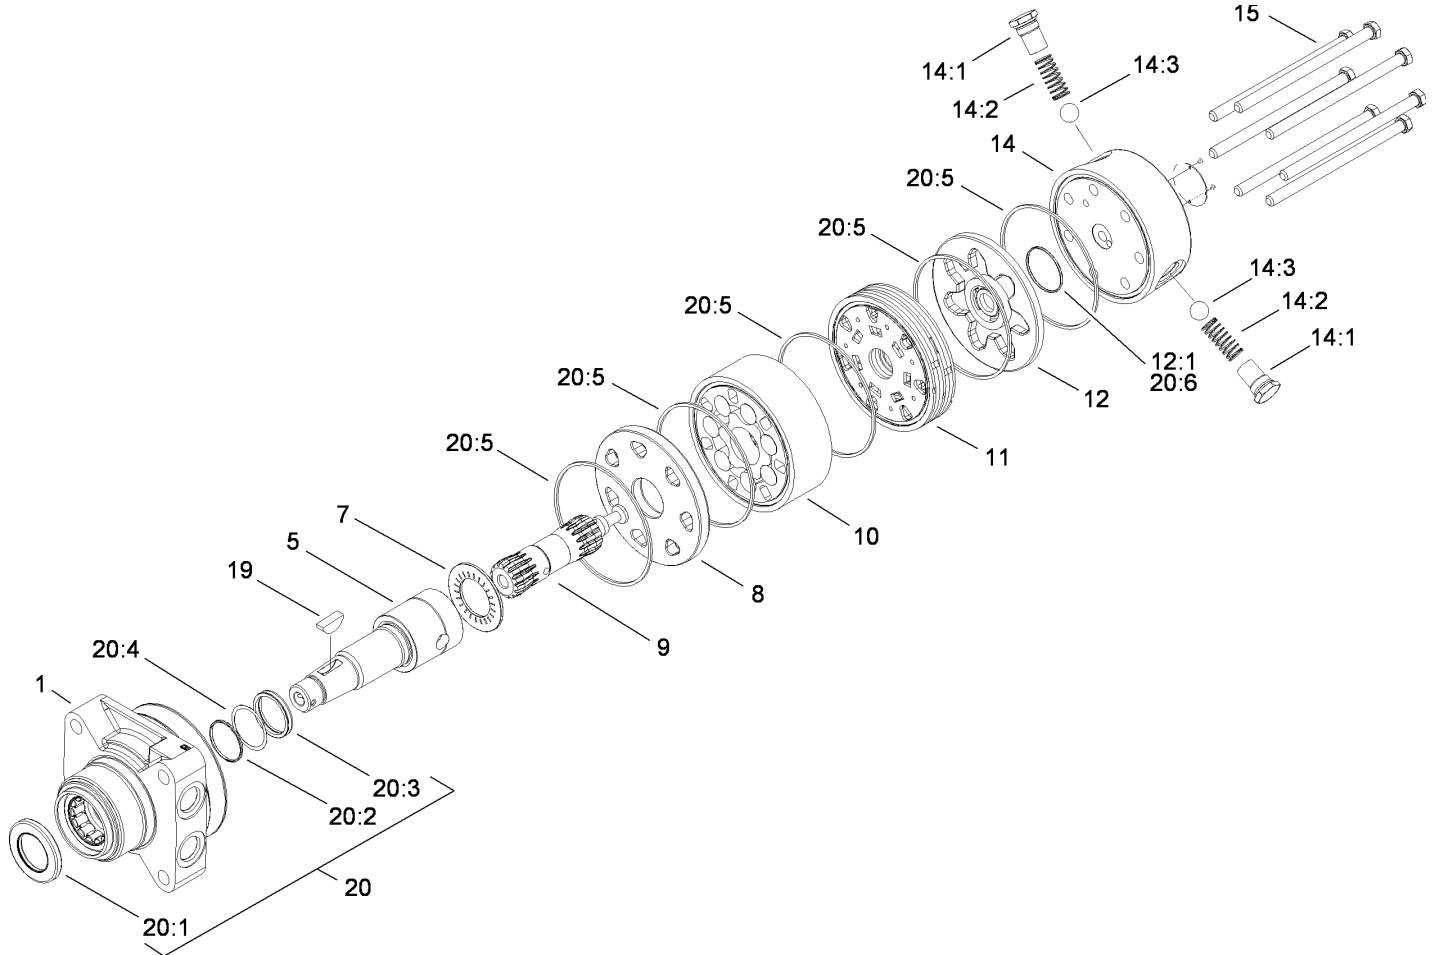 


Hydraulic Motor Assembly No. 95-8694

Ref	Part No.	Qty.	Description				
1	76-0810	1	Housing ASM				
5	99-3090	1	Shaft-Coupling				
7	76-0850	1	Bearing-Thrust				
8	76-0870	1	Plate-Wear				
9	99-3537	1	Link-Drive				
10	99-3539	1	Set-Rotor				
11	99-3535	1	Manifold				
12	76-0880	1	Commutator ASM				
②12:1		1	Seal-Commutator				
14	99-3538	1	End Cover ASM				
②14:1		1	Spring Cap And O-Ring ASM				
14:2	99-3541	1	Spring				
14:3	99-3540	1	Ball				
15	99-3536	7	Screw-HH				
19	3257-42	1	Key-Woodruff				
20	94-8178	1	Seal Kit				
②20:1		1	Seal-Dirt And Water				
②20:2		1	Backup-Ring				
②20:3		1	Seal-Shaft				
②20:4		1	Washer-Back Up				
②20:5		5	Seal-Square, Ring (Inner)				
②20:6		1	Seal-Commutator				

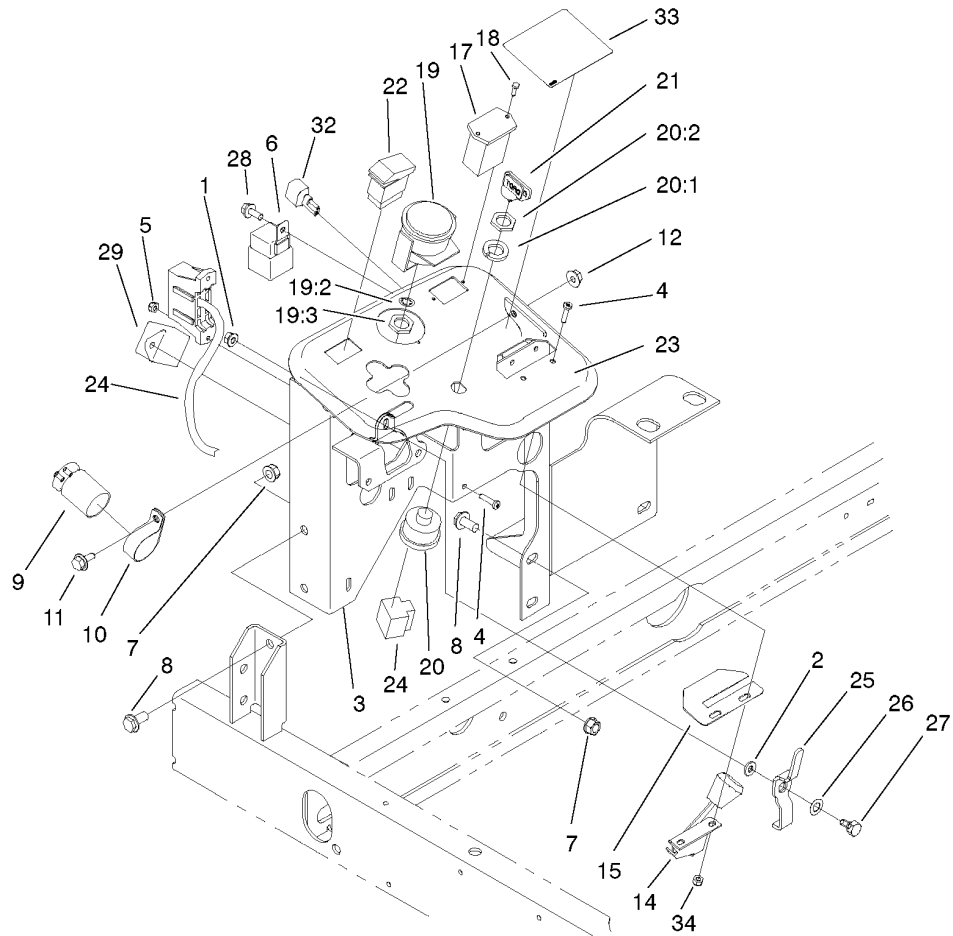 

Control Panel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32128-32	1	Nut-HHF	22	95-8999	1	Switch
2	3256-22	1	Washer-Flat	23	100-4834	1	Decal-Console
3	95-8712-03	1	Panel-Control	24	100-4823	1	Harness-Wire
4	3250-27	4	Screw-PPH	25	99-3401-03	1	Lever-Valve, Lock
5	3296-2	2	Nut-Lock	26	3290-477	1	Washer-Curved
6	70-1480	4	Relay	27	63-3410	1	Screw-Shoulder
7	32128-43	5	Nut-Flange	28	32144-10	5	Screw-HWH
8	3234-1	5	Screw-HHF	29	99-3463	1	Controller-Glow
9	37-2690	1	Capacitor	32	100-4918	4	Diode
10	2412-74	1	Clamp	33	99-3558	1	Decal-Console, Ce
11	3234-4	1	Screw-HHF	34	3290-148	2	Nut-Hex, W/Washer
12	32128-33	1	Nut-HF				
14	95-8855	1	Control-Throttle				
15	104-0421	1	Plate-Stop, Throttle				
17	75-6820	1	Hourmeter				
18	32144-18	2	Screw-HH				
19	93-7053	1	Cluster-Lamp, Warning				
19:1	219-17	4	Bulb				
19:2	3254-1	1	Washer-Lock/Int				
19:3	3217-26	1	Nut-Hex				
20	88-9830	1	Switch-Ignition				
20:1	3254-5	1	Washer-Lock, Internal				
20:2	218-461	1	Nut-HH				
21	63-8360	2	Key-Ignition				

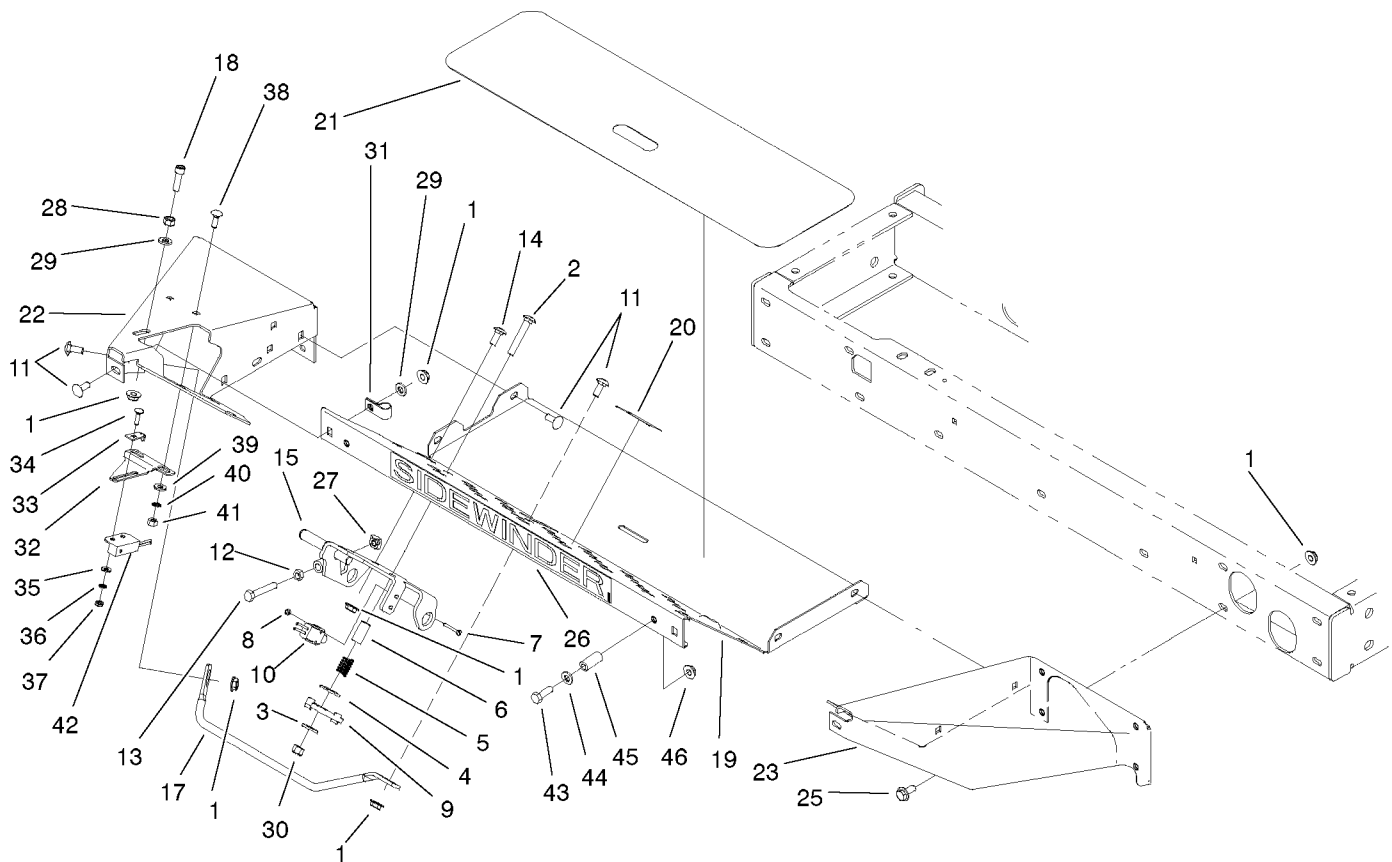 

Front Platform Assembly

Ref	Part No.	Qty.	Description
1	32128-44	22	Nut
2	3230-6	1	Screw-CARR
3	3256-3	1	Washer-Flat
4	3256-40	1	Washer-Flat
5	65-9940	1	Spring
6	95-8866	1	Tube-Arm, Rocker
7	32105-9	2	Screw
8	3296-9	2	Nut-Lock NI
9	99-3593	1	Arm-Rocker
10	95-8900	1	Switch
11	3230-1	9	Screw-CARR
12	3218-2	1	Nut-Jam
13	322-41	1	Screw-HH
14	3230-23	2	Screw-CARR
15	95-8869-03	1	Bracket-Pedal, Traction
17	95-8893	1	Bar-Deflector
18	3274-22	1	Screw-HSH
19	95-8610-01	1	Plate-Floor
20	99-3444	1	Decal-Mow/Transport
21	99-3478	1	Tread-Foot
22	100-4884-01	1	Support-Floor, RH
23	95-8612-01	1	Bracket-Floor Plate, LH
25	3234-5	10	Screw-HHF
26	99-3388	1	Decal-Sidewinder


Ref	Part No.	Qty.	Description
27	99-3565	1	Nut-Square
28	3217-6	1	Nut-Hex
29	3256-23	2	Washer-Flat
30	3296-29	1	Nut-Lock
31	2412-103	1	Clamp
32	100-4871	1	Bracket-Switch, Neutral
33	100-4872	1	Plate-Switch, Neutral
34	3229-20	1	Screw-CARR
35	3256-14	1	Washer-Flat
36	3255-17	1	Washer-Lock/EXT
37	3296-2	1	Nut-Lock
38	3229-1	2	Screw-CARR
39	3256-22	2	Washer-Flat
40	3255-7	2	Washer-Lock/EXT
41	3217-5	2	Nut-Hex
42	100-1270	1	Switch-Proximity
43	323-9	2	Screw-HH
44	3256-4	2	Washer-Flat
45	104-4613	2	Tube-Latch
46	32128-43	2	Nut-Flange

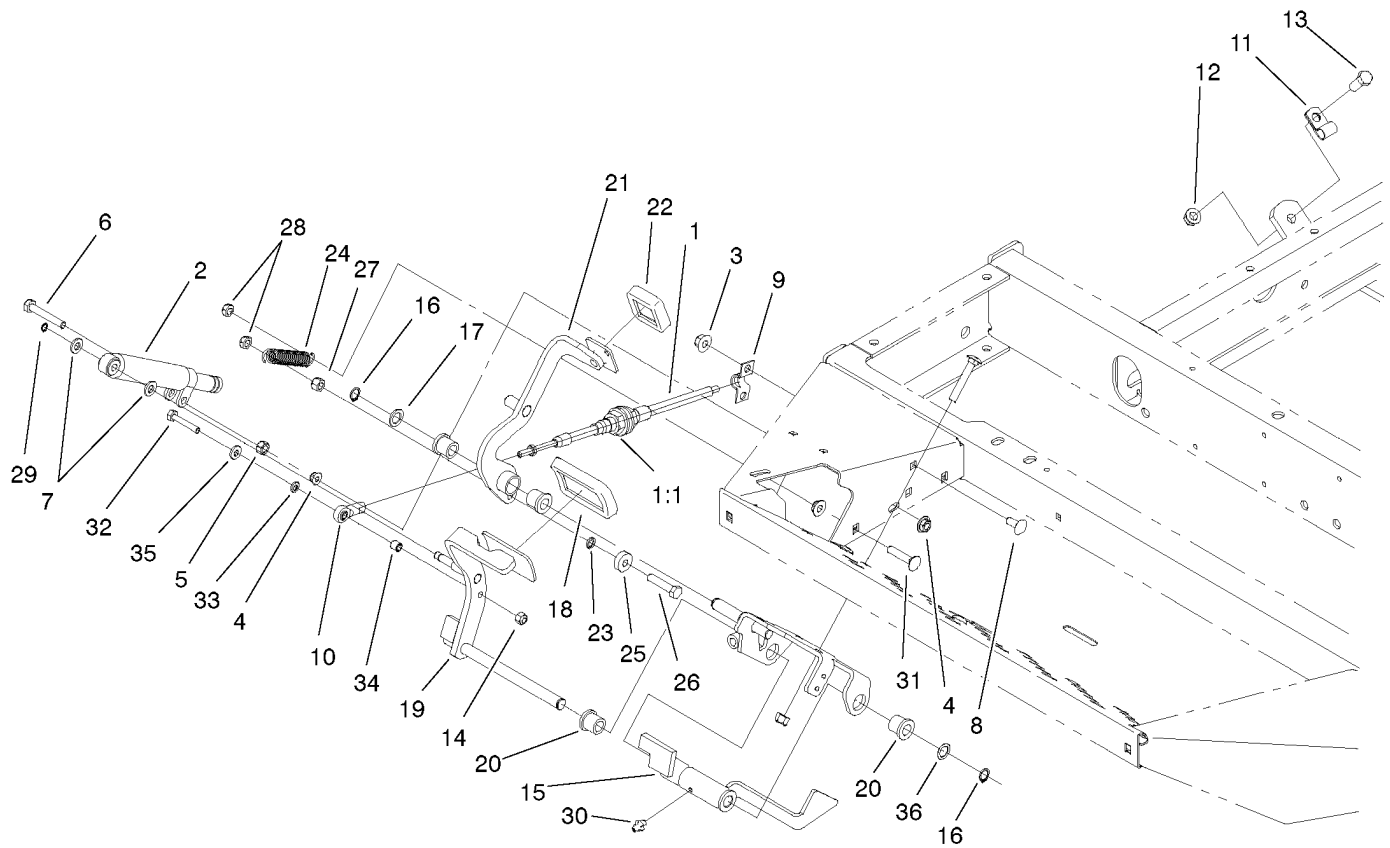 

Traction Pedal Assembly

Ref	Part No.	Qty.	Description
1	100-4815	1	Cable-Control, Traction
1:1	3220-1	2	Nut-Jam
2	76-8870	1	Damper ASM-Lever
3	32128-20	2	Nut-HF
4	32128-44	3	Nut
5	3217-6	1	Nut-Hex
6	322-10	1	Screw-HH
7	3256-23	2	Washer-Flat
8	3230-23	2	Screw-CARR
9	93-2092	1	Clamp-Cable
10	2411-41	1	Joint-Ball, Superior
11	2412-10	1	R-Clamp
12	32128-43	1	Nut-Flange
13	323-6	1	Screw-HH
14	3296-42	1	Nut-Lock, NI
15	95-8861	1	Slide
16	32151-84	2	Ring-Shaft, EXT
17	41-8440	1	Washer
18	74-9100	1	Pad-Pedal, Forward
19	100-4875-03	1	Traction Pedal ASM
20	256-243	2	Bearing-Flange
21	99-3379	1	Pedal-Reverse
22	74-9110	1	Pad-Pedal, Reverse
23	75-5470	1	Spacer-Bearing


Ref	Part No.	Qty.	Description
24	99-3476	1	Spring-Extension
25	251-259	1	Bearing
26	322-7	1	Screw-HH
27	3296-29	1	Nut-Lock
28	3296-47	2	Nut-Lock, NI
29	32151-3	1	Ring-Grip, Ex
30	302-5	1	Fitting-Grease
31	3230-27	1	Screw-CARR
32	321-9	1	Screw-HH
33	33093-00	1	Washer-Flat
34	99-3545	1	Spacer
35	3256-22	1	Washer-Flat
36	73-0040	4	Washer-Thrust

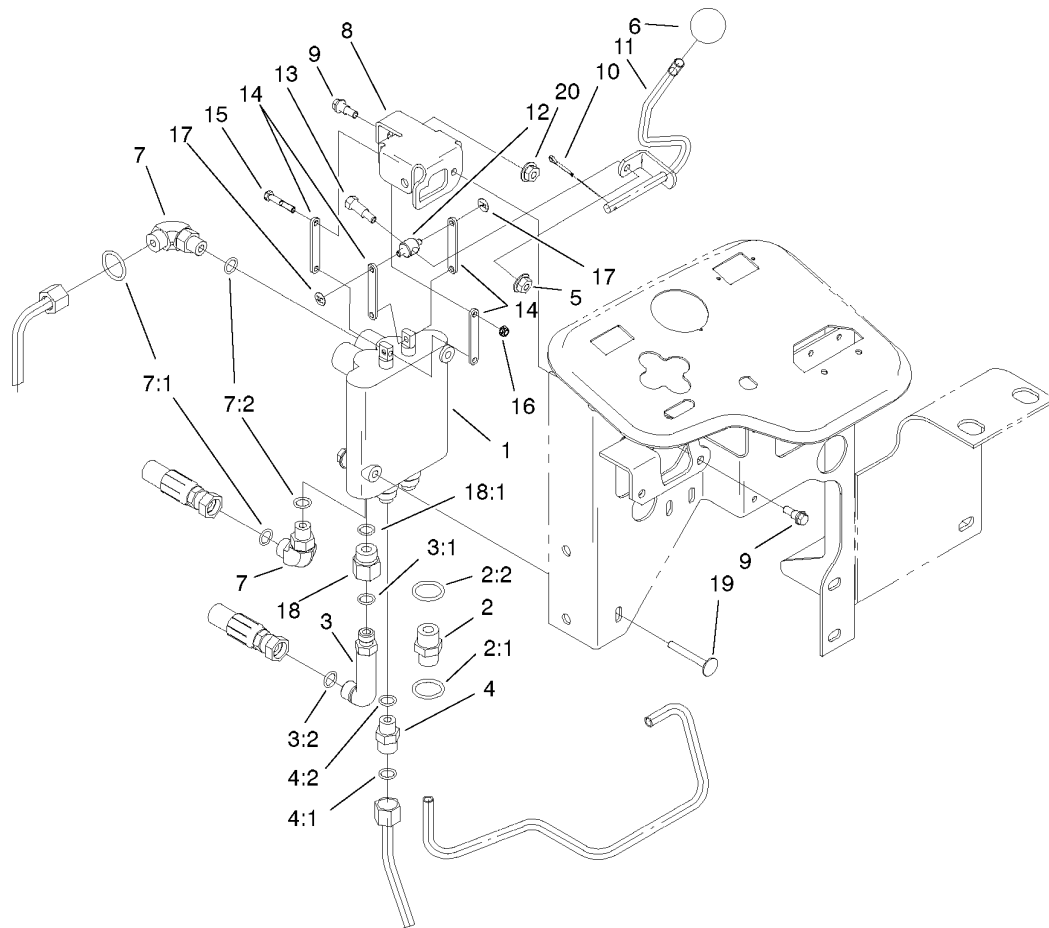 

Control Valve Installation Assembly

Ref	Part No.	Qty.	Description
1	95-8581	1	Valve-2 Spool
2	340-3	1	Adapter
2:1	237-22	1	O-Ring
2:2	237-79	1	O-Ring
3	69-4320	1	Fitting-90 DEG
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	340-2	1	Adapter
4:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring
5	32128-33	3	Nut-HF
6	233-42	1	Knob
7	340-77	2	Fitting-90 DEG
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
8	95-8633	1	Bracket-Valve, Actuator
9	42-3560	2	Bolt-Shoulder
10	3272-6	1	Pin-Cotter
11	95-8635	1	Lever-Valve
12	95-8638	1	Trunnion-Valve, Actuator
13	92-8916	1	Bolt-Shoulder
14	95-8634	4	Link
15	87-5150	3	Bolt
16	87-5140	3	Nut-Lock


Ref	Part No.	Qty.	Description
17	93-3988	2	Pushnut-Tinnerman
18	353-397	1	Reducer-Adapter
18:1	237-79	1	O-Ring
19	3230-33	2	Screw-CARR
20	32128-32	2	Nut-HHF

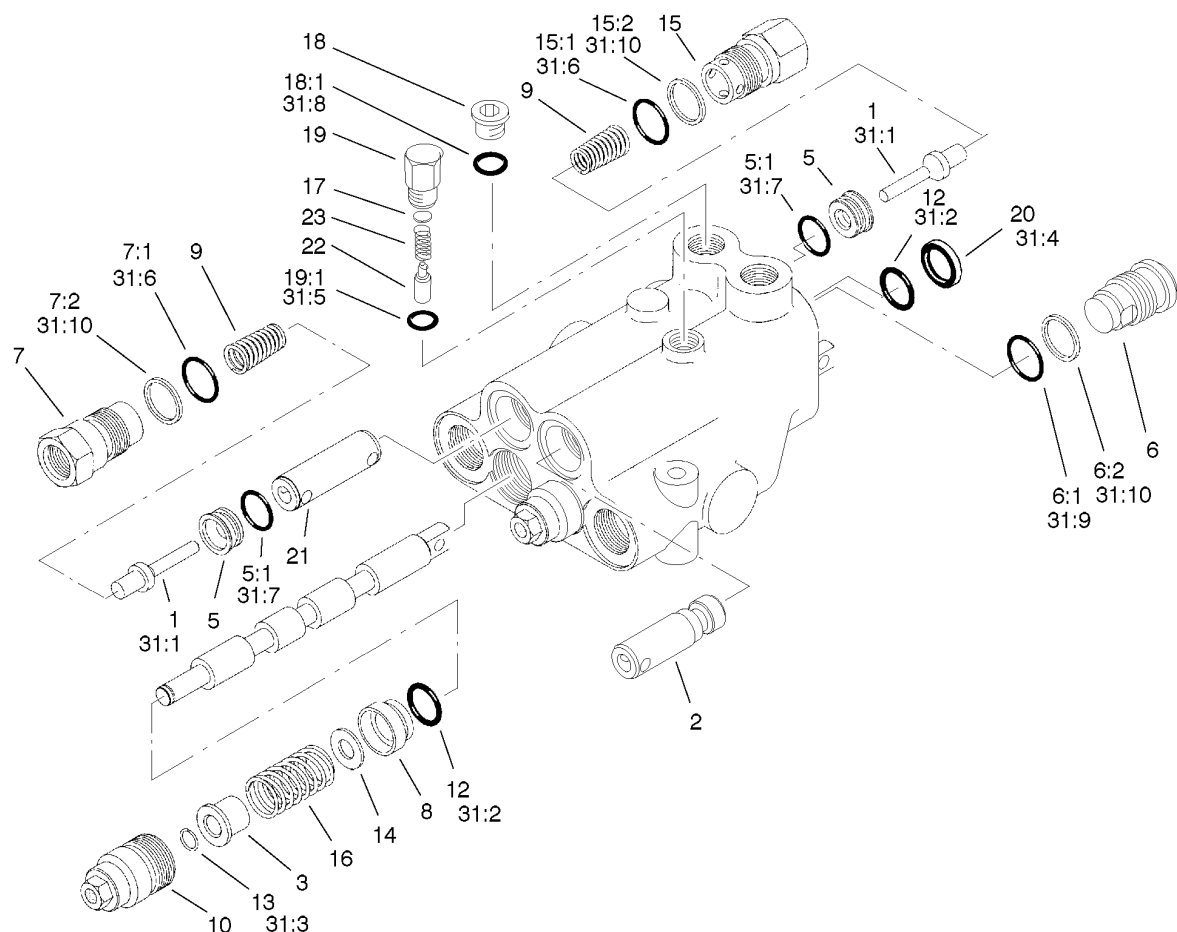 

Control Valve Assembly No. 95-8581

Ref	Part No.	Qty.	Description
1	58-6290	3	Poppet
2	69-1840	1	Plunger
3	58-6310	2	Spacer
5	58-6330	3	Seat
5:1	58-6340	1	O-Ring
6	58-6350	1	Plug
6:1	60-5720	1	Ring
6:2	58-6370	1	Washer
7	99-3527	2	Plug ASM
7:1	60-5720	1	Ring
7:2	59-7730	1	Washer-Backup
8	58-6400	2	Bushing
9	69-1810	3	Spring
10	58-6420	2	Cap
12	58-6450	4	O-Ring
13	58-6460	2	Ring
14	65-2770	2	Washer
15	99-3526	1	Plug ASM
15:1	60-5720	1	Ring
15:2	59-7730	1	Washer-Backup
16	99-3531	2	Spring
17	60-6450	1	Disc
18	353-989	1	Plug-Hex, Hollow
18:1	237-42	1	O-Ring


Ref	Part No.	Qty.	Description
19	58-6780	1	Plug
19:1	58-6790	1	O-Ring
20	58-6320	2	Wiper
21	99-3528	1	Plunger
22	58-6770	1	Plunger
23	58-6760	1	Spring
31	99-3530	1	Kit-Seal
31:1	58-6290	3	Poppet
31:2	58-6450	4	O-Ring
31:3	58-6460	2	Ring
31:4	58-6320	2	Wiper
31:5	58-6790	1	O-Ring
31:6	60-5720	2	Ring
31:7	58-6340	2	O-Ring
31:8	237-42	1	O-Ring
31:9	60-5720	2	Ring
31:10	59-7730	2	Washer-Backup

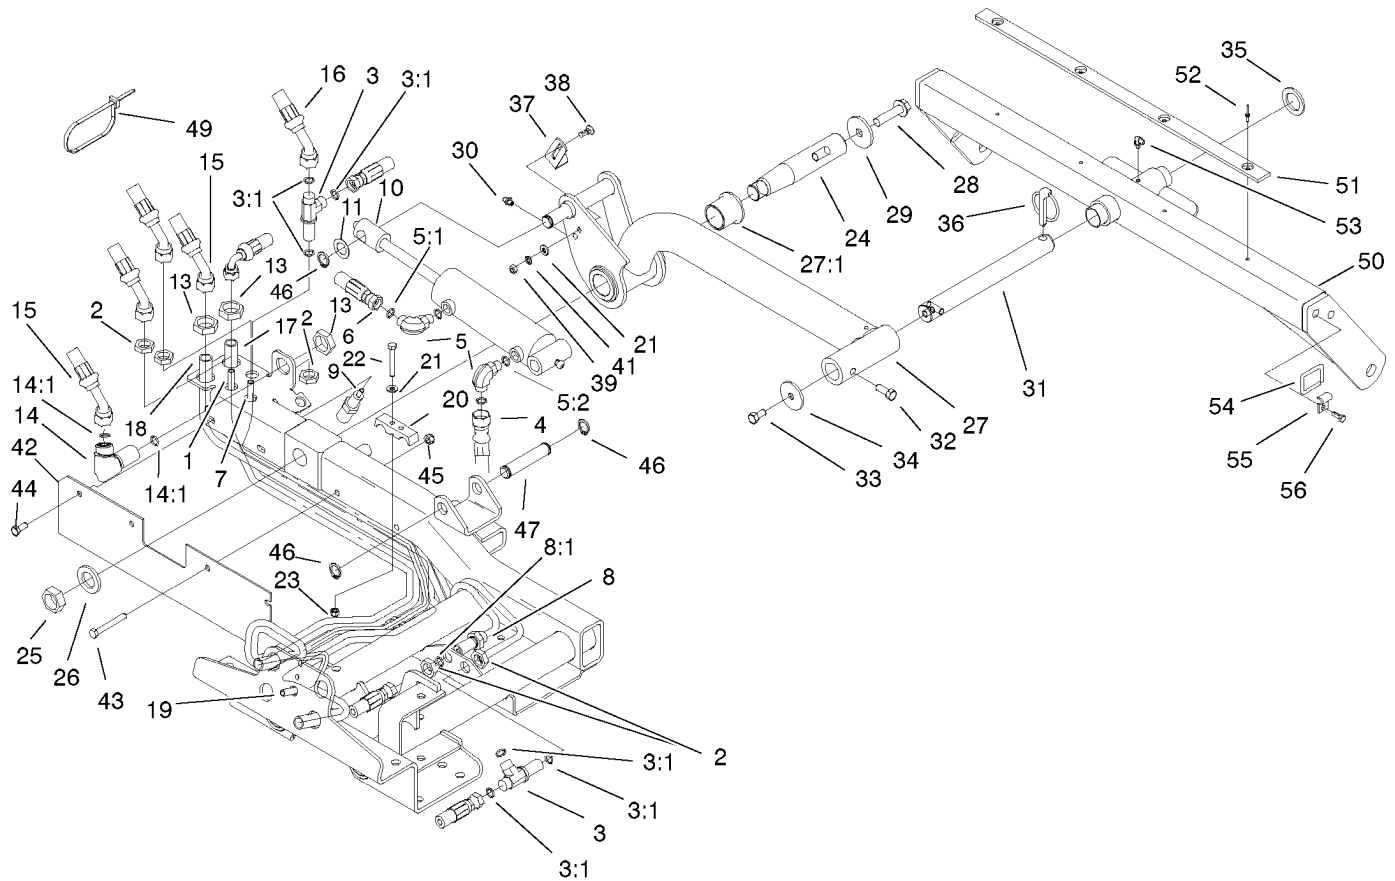 

Rear Liftarm Assembly


Ref	Part No.	Qty.	Description
1	104-0402	1	Tube ASM
2	340-70	5	Locknut-Bulkhead
3	340-68	2	Fitting-Tee, Bulkhead
3:1	237-22	6	O-Ring
4	104-0407	1	Hose ASM
5	340-77	2	Fitting-90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	100-4891	1	Hose ASM
7	104-0403	1	Tube ASM
8	340-71	1	Fitting-Straight, Bulkhead
8:1	237-22	2	O-Ring
9	93-6762	1	Switch-Ball
10	95-8978	1	Cylinder-Hydraulic
11	3-6498	1	Washer-Thrust
13	340-74	3	Locknut-Bulkhead
14	340-72	1	Elbow-Bulkhead Union, 90 DEG
14:1	237-65	2	O-Ring
15	100-4879	2	Hose ASM
16	95-8825	1	Hose ASM
17	104-0401	1	Tube ASM
18	104-0400	1	Tube-ASM
19	104-0404	1	Tube ASM
20	99-3641	2	Clamp-Tube

Ref	Part No.	Qty.	Description
21	3256-22	6	Washer-Flat
22	321-11	2	Screw-HH
23	3296-42	2	Nut-Lock, NI
24	95-8990	1	Shaft-Pivot, Rear
25	3220-9	1	Nut-Jam
26	86-1480	1	Washer
27	100-4938	1	Rear Lift Arm ASM
27:1	69-6470	2	Bushing-Castor
28	3234-27	1	Screw-Flange
29	75-7730	1	Washer-Thrust
30	302-5	1	Fitting-Grease
31	100-4944	1	Shaft-C.U., Pivot
32	323-6	1	Screw-HH
33	323-4	1	Screw-HH
34	63-7400	1	Washer-Rebound
35	3-6781	1	Washer-Thrust
36	283-71	1	Pin-Lynch
37	95-8613	1	Bracket-Switch
38	3229-1	2	Screw-CARR
39	3217-5	2	Nut-Hex
41	3253-3	2	Washer-Lock
42	104-0453-03	1	Guard
43	322-12	2	Screw-HH
44	322-3	2	Screw-HH

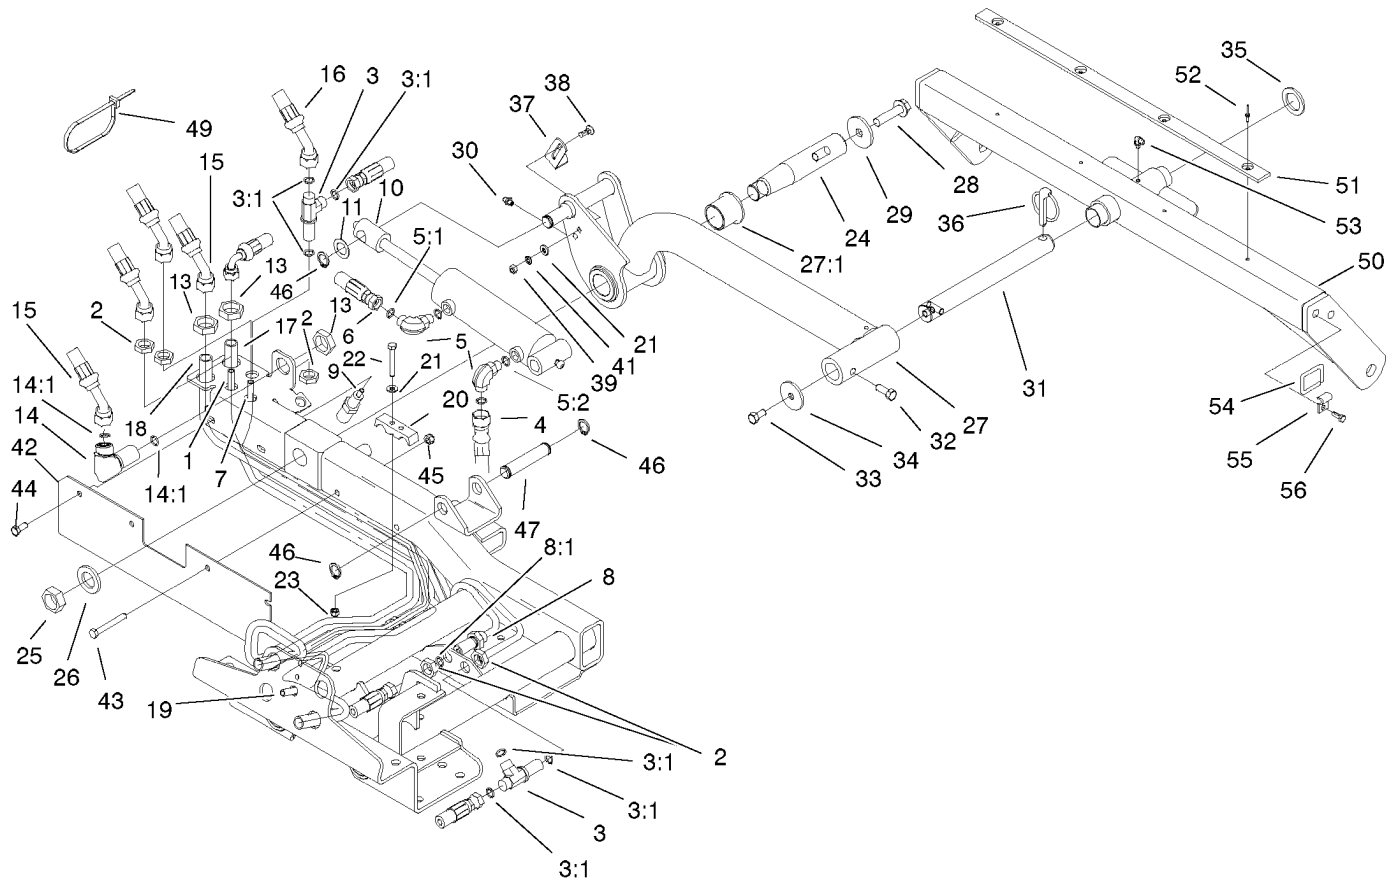 

Rear Liftarm Assembly (continued)


Ref	Part No.	Qty.	Description				
45	32128-20	4	Nut-HF				
46	32120-93	3	Ring-Retaining				
47	95-8575	1	Pin				
49	3334-945	1	Tie-Cable				
50	104-4229	1	Rear Carrier Frame ASM				
51	95-8936	1	Strip-Wear				
52	3269-18	4	Rivet-Pop, Steel				
53	302-60	1	Fitting-Lube				
54	104-4240	1	Link-Rear				
55	3-6657	1	Clip-Skid				
56	32144-14	1	Screw-HWH				

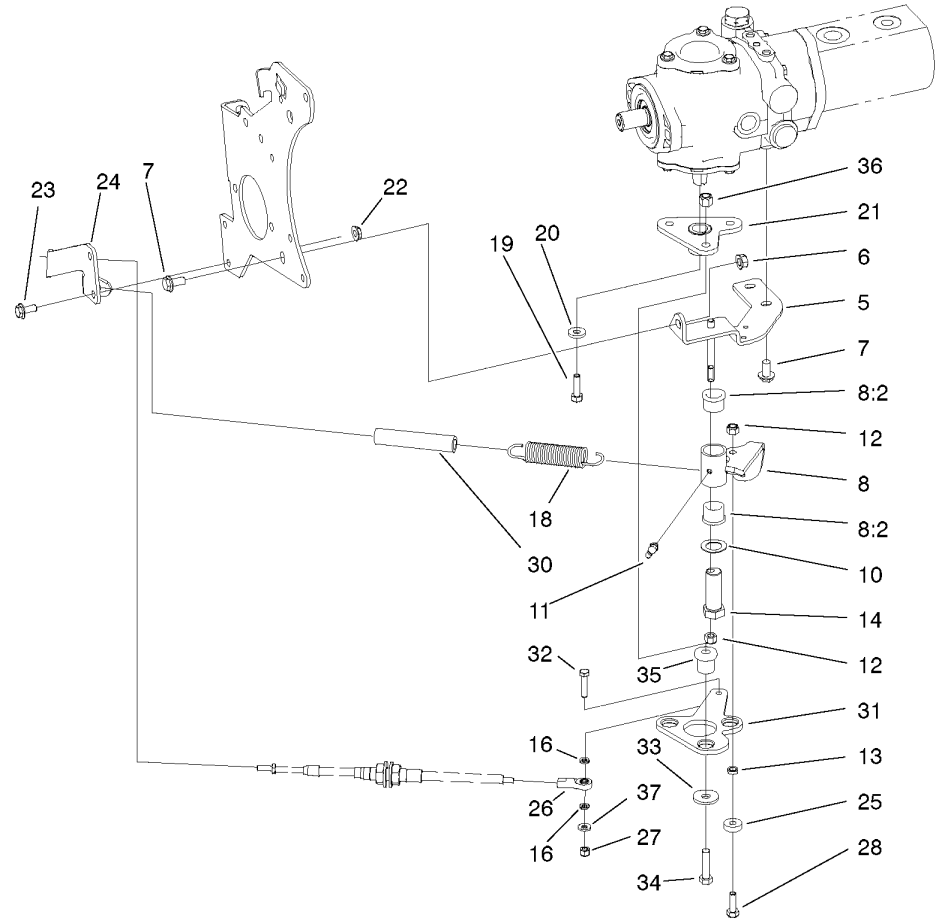 

Neutral Arm Assembly

Ref	Part No.	Qty.	Description
5	95-8960-03	1	Bracket-Neutral
6	32128-43	1	Nut-Flange
7	3234-1	3	Screw-HHF
8	104-0422	1	Neutral Arm ASM
8:2	256-113	2	Bushing-Flange
10	3-6498	1	Washer-Thrust
11	302-60	1	Fitting-Lube
12	3296-29	2	Nut-Lock
13	100-4817	1	Spacer-Bearing
14	76-8640	1	Stud-Traction
16	33093-00	2	Washer-Flat
18	94-1369	1	Spring-Extension
19	3210-6	1	Screw-HH
20	88-7200	1	Washer-Flat
21	99-3598-03	1	Hub ASM
22	32128-44	2	Nut
23	3234-5	2	Screw-HHF
24	104-0464-03	1	Bracket-Support, Cable
25	251-259	1	Bearing
26	2411-41	1	Joint-Ball, Superior
27	3296-42	1	Nut-Lock, NI
28	3274-104	1	Screw-HSBH
30	99-3556	1	Hose
31	99-3594-03	1	Lever-Pump


Ref	Part No.	Qty.	Description
32	321-8	1	Screw-HH
33	2844	3	Washer
34	95-3857	3	Screw-Head, Button
35	63-9750	3	Mount
36	3296-39	3	Nut-Lock, NI
37	3256-22	1	Washer-Flat

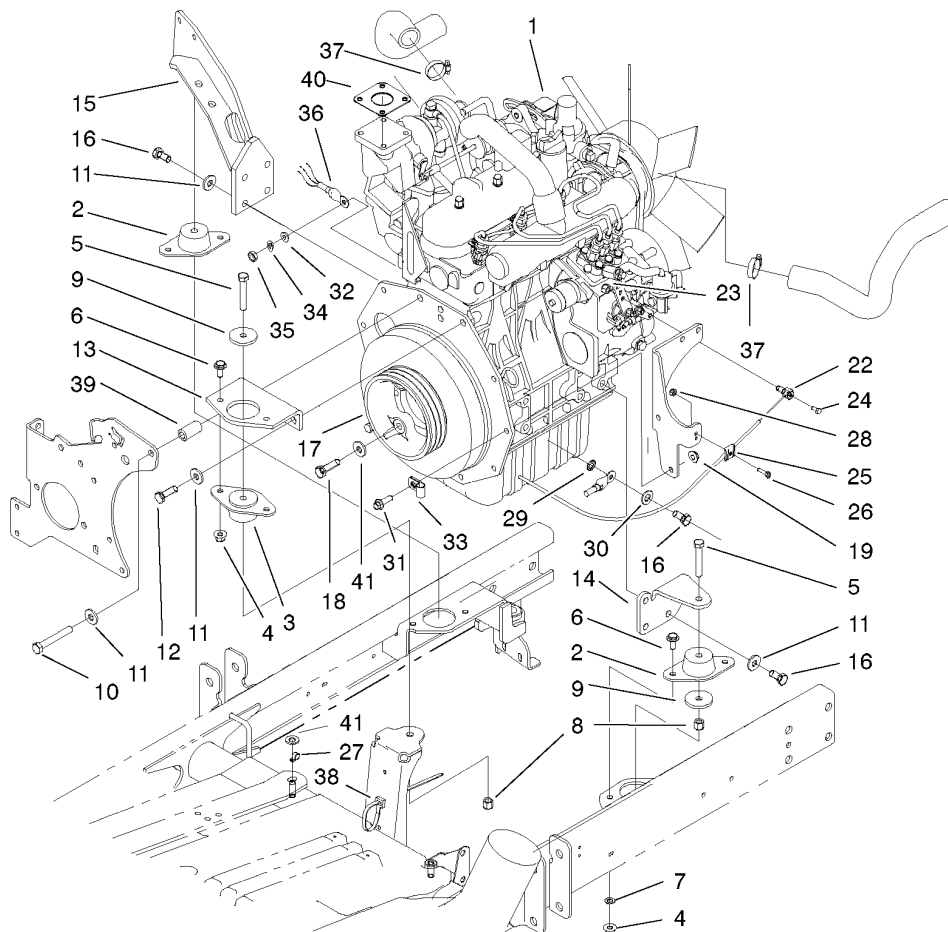 

Engine Assembly


Ref	Part No.	Qty.	Description
1	100-4901	1	Engine-Kubota, D1105-T-Eb-Toro-2-S1
2	83-1030	2	Mount-Engine
3	93-5265	1	Mount-Engine
4	32128-20	6	Nut-HF
5	323-11	3	Screw-HH
6	3234-5	6	Screw-HHF
7	3255-8	1	Washer-Lock/EXT
8	3296-39	3	Nut-Lock, NI
9	80-8560	3	Washer-Hardened
10	42-9370	1	Bolt/Washer
11	80-6990	9	Washer-Hardened
12	95-8812	1	Screw-Hhc
13	99-3618-03	1	Mount-Engine, Front
14	95-8937-03	1	Mount-Engine, LH
15	100-4838-03	1	Mount-Engine
16	63-7790	8	Screw-Cap
17	99-3626-03	1	Pulley-3V, Engine
18	56-2140	3	Bolt
19	32128-44	2	Nut
22	98-9311	1	Swivel-Throttle
23	3296-20	1	Nut-Lock NI
24	25-8640	1	Screw-HH
25	81-1690	1	Clamp-Cable

Ref	Part No.	Qty.	Description
26	32105-13	1	Screw-SHH
27	2412-112	1	Clamp
28	3296-2	1	Nut-Lock
29	3255-9	1	Washer-Lock/EXT
30	3256-25	1	Washer-Flat
31	3234-17	2	Screw-HHF
32	3256-78	1	Washer-Flat
33	2412-10	1	R-Clamp
34	43-5930	1	Washer-Spring
35	48-7890	1	Nut
36	99-3441	1	Harness-Wire, Fusible Link
37	2412-34	2	Clamp-Hose
38	3290-378	1	Tie-Cable
39	95-8736	1	Spacer
40	98-9611	1	Gasket
41	3256-24	4	Washer-Flat

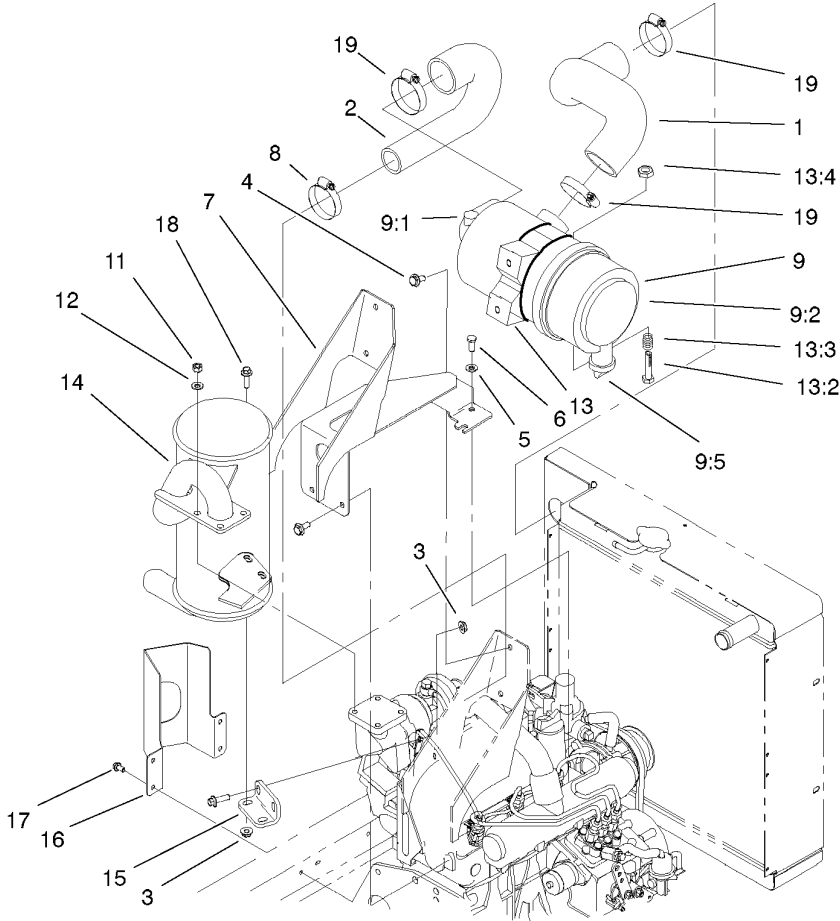 


Air Cleaner And Muffler Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-0420	1	Hose-Air Intake, Upper	19	2412-130	3	Hose Clamp
2	99-3643	1	Hose-Air Intake, Lower				
3	32128-44	6	Nut				
4	3234-5	3	Screw-HHF				
5	3256-23	4	Washer-Flat				
6	33114-016	4	Screw-HH				
7	99-3648-03	1	Mount-Filter, Air				
8	2412-92	1	Clamp-Hose				
9	100-4824	1	Air Cleaner ASM				
9:1	285-17	1	Plug-Pipe				
9:2	104-0497	1	Cover ASM				
9:5	104-0498	1	Valve-Vacuator				
9:6	98-9763	1	Element ASM				
11	33014-00	4	Nut-Hex				
12	42-9850	4	Washer-Lock, Spring				
13	100-4825	1	Band-Mouning, Air Cleaner				
13:2	94-3653	1	Bolt				
13:3	94-3654	1	Spring				
13:4	48-9510	1	Nut				
14	100-4810	1	Muffler				
15	95-8943-03	1	Bracket-Muffler				
16	99-3425-03	1	Guard-Exhaust				
17	32144-4	4	Screw-HH				
18	3234-17	3	Screw-HHF				

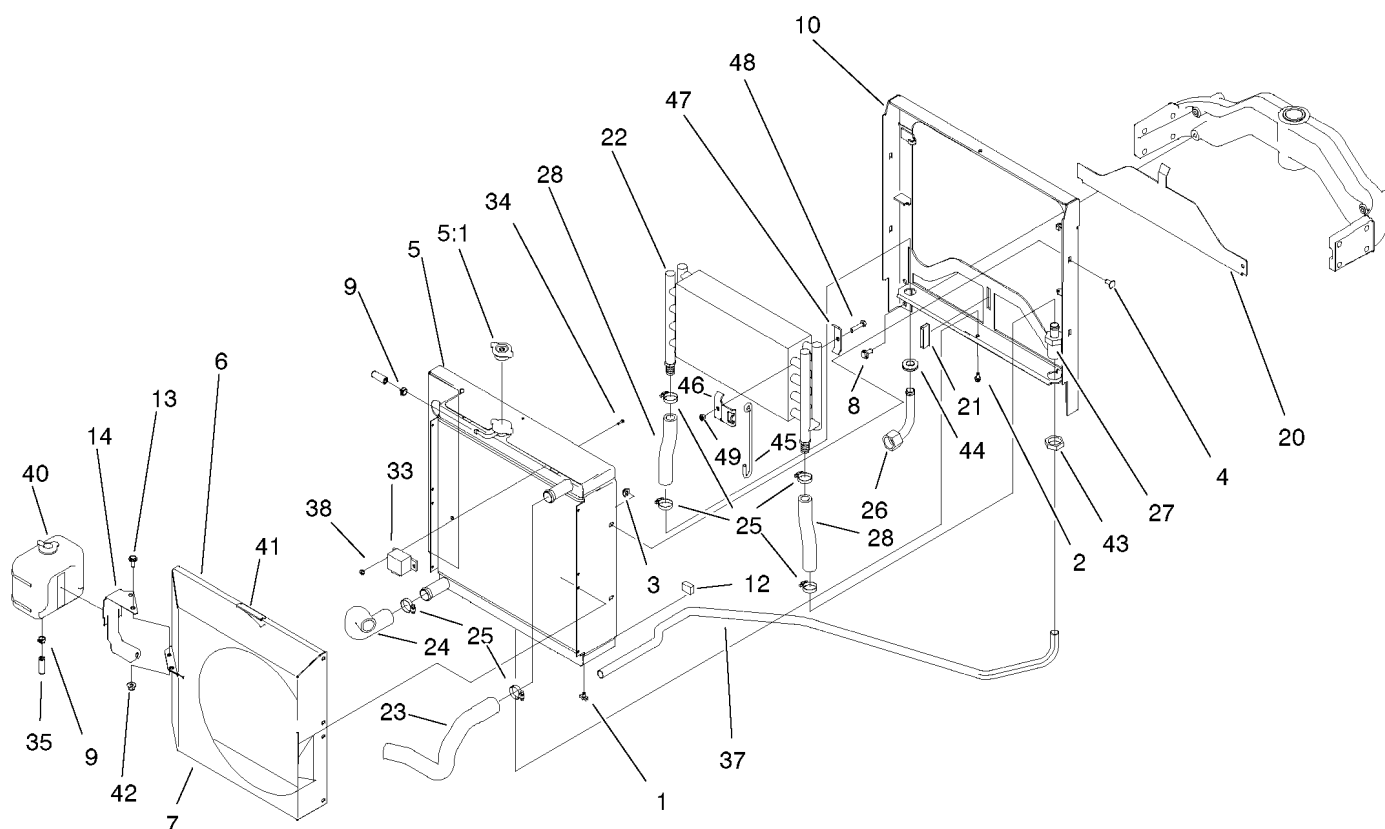 


Radiator Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	304-46	1	Draincock	34	32105-13	2	Screw-SHH
2	32104-116	12	Screw	35	63-7623	1	Hose-Fuel
3	32128-44	4	Nut	37	100-4924	1	Tube ASM
4	3230-1	4	Screw-CARR	38	32128-17	2	Nut-Lock, Flange
5	99-3637	1	Radiator	40	98-9323	1	Bottle-Overflow, Water
5:1	93-5957	1	Cap-Radiator	41	93-6681	1	Decal-Warning, Fan
6	100-4885-03	1	Shroud-Fan, Top	42	32128-20	2	Nut-HF
7	100-4898-03	1	Shroud-Fan, Bottom	43	340-126	1	Nut-Bulkhead
8	3234-1	4	Screw-HHF	44	100-4866	1	Grommet
9	92-2379	2	Clamp-Hose	45	100-4858	2	Form-Wire
10	100-4802-03	1	Frame-Radiator	46	100-4859	2	Bracket-Cooler, Keeper
12	95-8962	2	Seal-Foam, Radiator	47	100-4860	2	Bracket-Clamp
13	3234-5	2	Screw-HHF	48	322-17	2	Screw-HH
14	100-4899-03	1	Bracket-Reservoir	49	3296-47	2	Nut-Lock, NI
20	95-8702-03	1	Shield-Radiator, Lower				
21	99-3497	1	Magnet				
22	100-4869	1	Cooler-Oil				
23	104-0454	1	Hose-Radiator, Upper				
24	100-4809	1	Hose-Radiator, Lower				
25	2412-34	6	Clamp-Hose				
26	99-3644	1	Filter Head Tube ASM				
27	100-4925	1	Fitting-Bulkhead				
28	99-3646	2	Hose-Cooler, Oil				
33	66-8800	1	Relay				

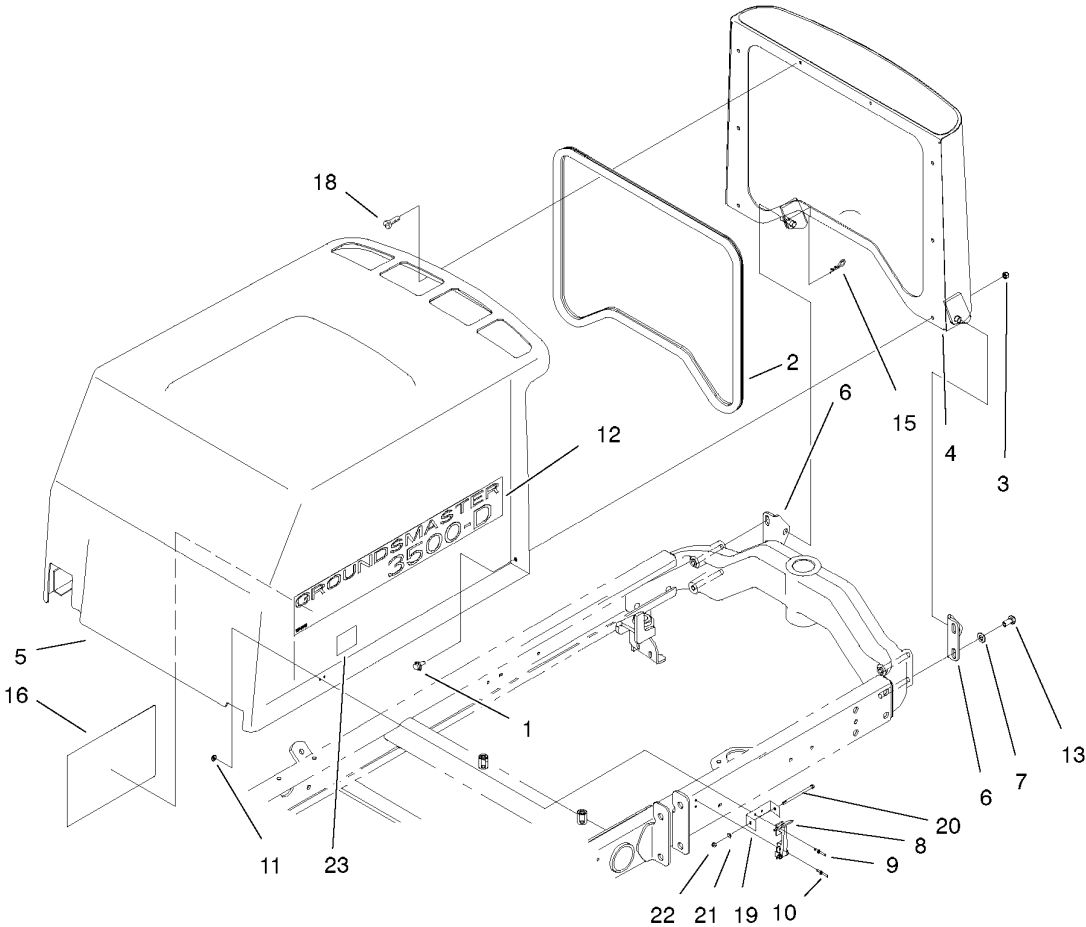 

Hood-Screen Assembly


Ref	Part No.	Qty.	Description				
1	3234-4	6	Screw-HHF				
2	100-4932	1	Trim-Seal				
3	3296-42	6	Nut-Lock, NI				
4	100-4847-03	1	Screen-Hood				
5	100-4855	1	Hood				
6	95-8728	2	Bracket-Pivot, Hood				
7	3256-24	4	Washer-Flat				
8	59-9740	2	Flex Draw Latch ASM				
9	98-7310	4	Rivet				
10	3290-55	4	Rivet-Pop				
11	3269-10	4	Washer-Back				
12	104-0446	2	Decal				
13	323-4	4	Screw-HH				
15	3290-467	1	Pin-Hair				
16	104-0483	1	Decal-Instructions, Service				
18	3269-21	2	Rivet-Pop				
19	99-3568	1	Bracket-Lock,Ce				
20	321-9	1	Screw-HH				
21	3256-22	1	Washer-Flat				
22	3296-42	1	Nut-Lock, NI				
23	100-6574	1	Decal-Warning				

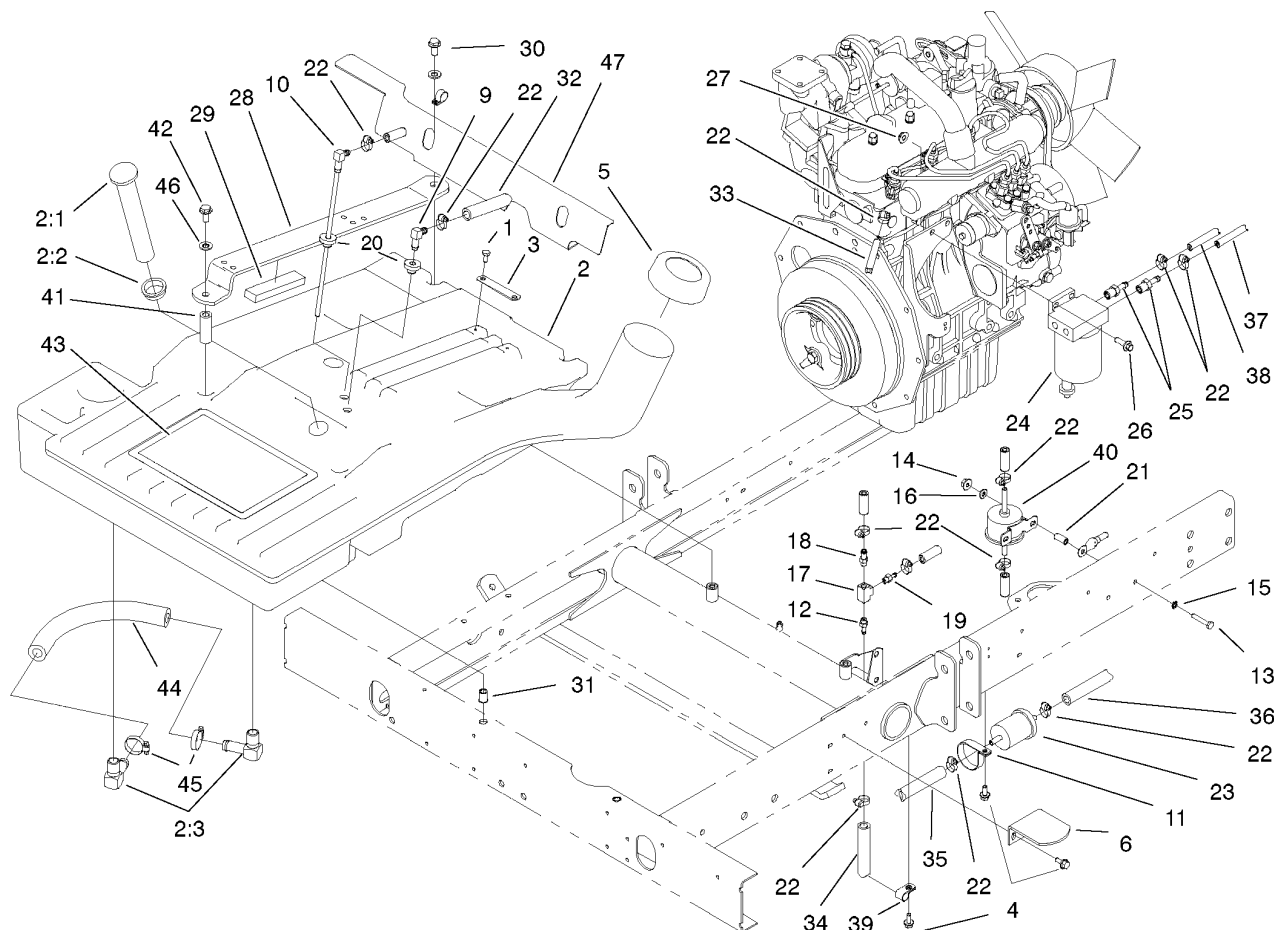 

Fuel System Assembly


Ref	Part No.	Qty.	Description
1	321-2	2	Screw-HH
2	104-0408	1	Tank-Fuel
2:1	95-8971	1	Guage-Fuel
2:2	95-8972	1	Grommet
2:3	353-377	2	Stem-Hose
3	95-8881	1	Strap-Line, Fuel
4	32144-10	4	Screw-HWH
5	95-4193	1	Diesel Gas Cap ASM
6	95-8968-03	1	Support-Tank, Fuel
9	46-6550	1	Fitting-HYD, 90
10	66-8121	1	Standpipe
11	2412-148	1	Clamp-R
12	304-73	1	Connector-Hose
13	321-9	2	Screw-HH
14	32128-33	2	Nut-HF
15	3255-7	1	Washer-Lock/EXT
16	3256-22	2	Washer-Flat
17	354-20	1	Fitting-Tee
18	354-21	1	Fitting-Barb
19	354-22	1	Fitting-Barb
20	46-6560	2	Bushing
21	87-4710	2	Spacer-Brake, Parking
22	2412-108	13	Clamp-Worm
23	98-7612	1	Filter-Fuel

Ref	Part No.	Qty.	Description
24	98-9305	1	Filter-Water/Fuel
25	353-783	2	Fitting-Pump
26	3234-17	2	Screw-HHF
27	32128-44	2	Nut
28	104-0467-03	2	Strap-Support, Seat
29	95-8896	2	Foam
30	3234-1	2	Screw-HHF
31	32148-9	2	Nut-Insert
32	71-3380	1	Hose-Fuel
33	99-3498	1	Return-Line, Fuel
34	99-3185	1	Line-Fuel
35	71-3383	1	Hose-Fuel
36	19-3250	1	Hose-Line, Fuel
37	63-9640	1	Hose
38	27-2120	1	Hose-Line, Gas
39	2412-73	1	Clamp-R
40	99-3464	1	Pump-Fuel
41	104-0466	2	Spacer-Tube
42	323-14	2	Screw-HH
43	99-3560	1	Decal-Danger, Ce
43	104-0484	1	Decal
44	104-0465	1	Hose
45	2412-129	2	Clamp-Hose
46	3256-24	2	Washer-Flat

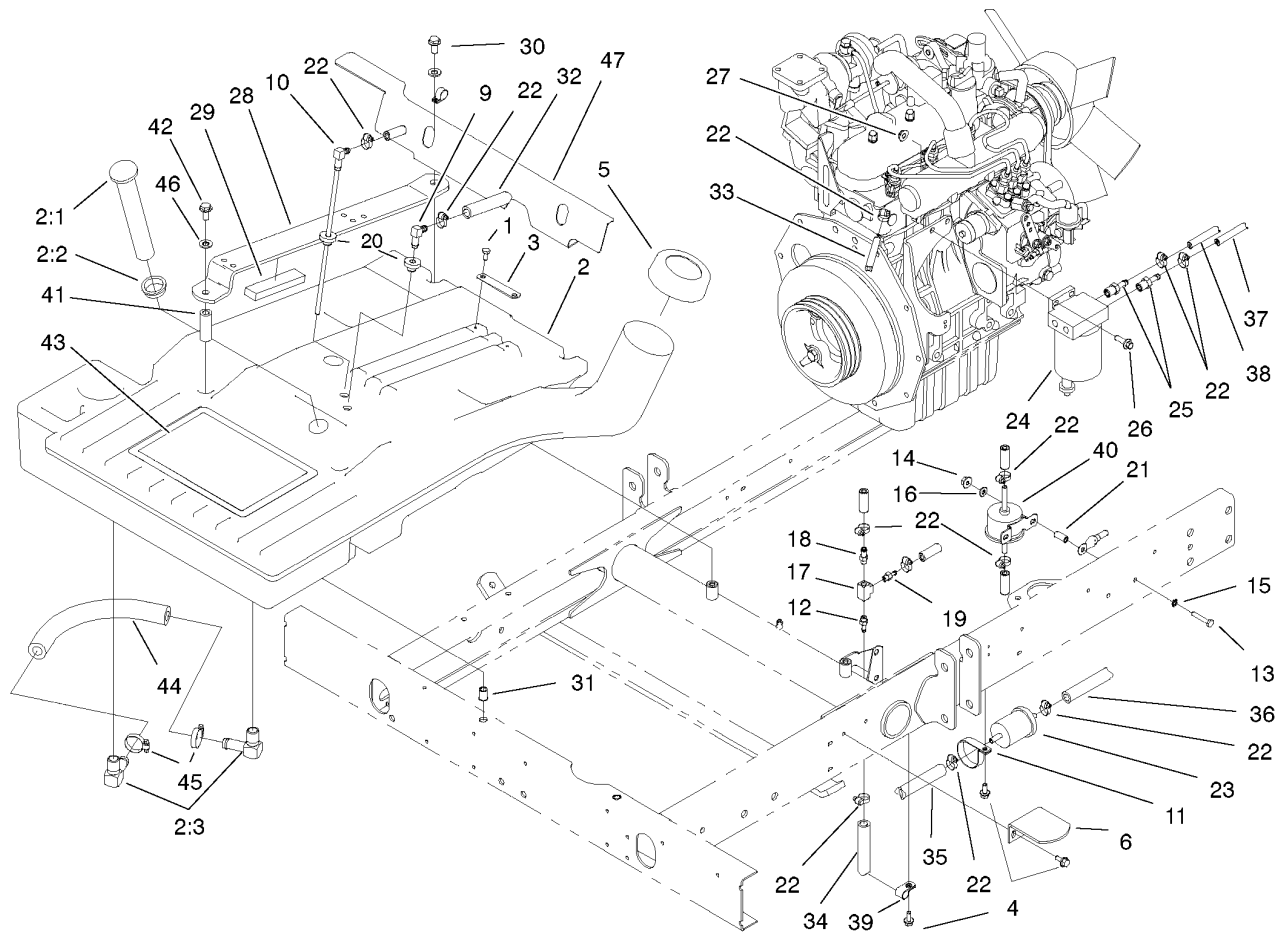 


Fuel System Assembly (continued)

Ref	Part No.	Qty.	Description
47	104-4833-03	1	Shield-Heat

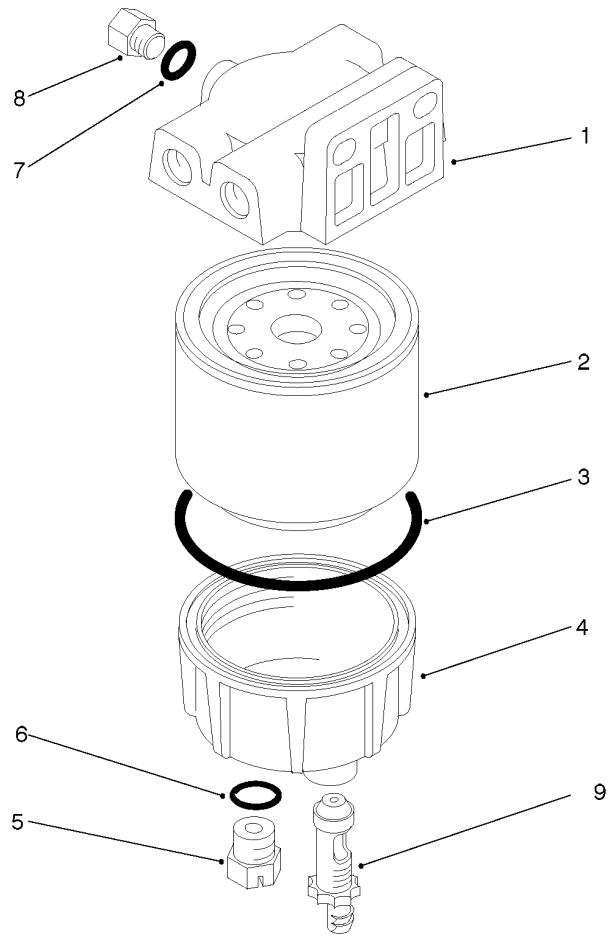 

Water/fuel Filter Assembly No. 98-9305

Ref	Part No.	Qty.	Description				
1	98-9772	1	Head-Filter				
2	98-9764	1	Element-On, Spin				
3	98-9774	1	O-Ring-Base, Filter				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Filter, Head				
9	98-9777	1	Drain Valve ASM				

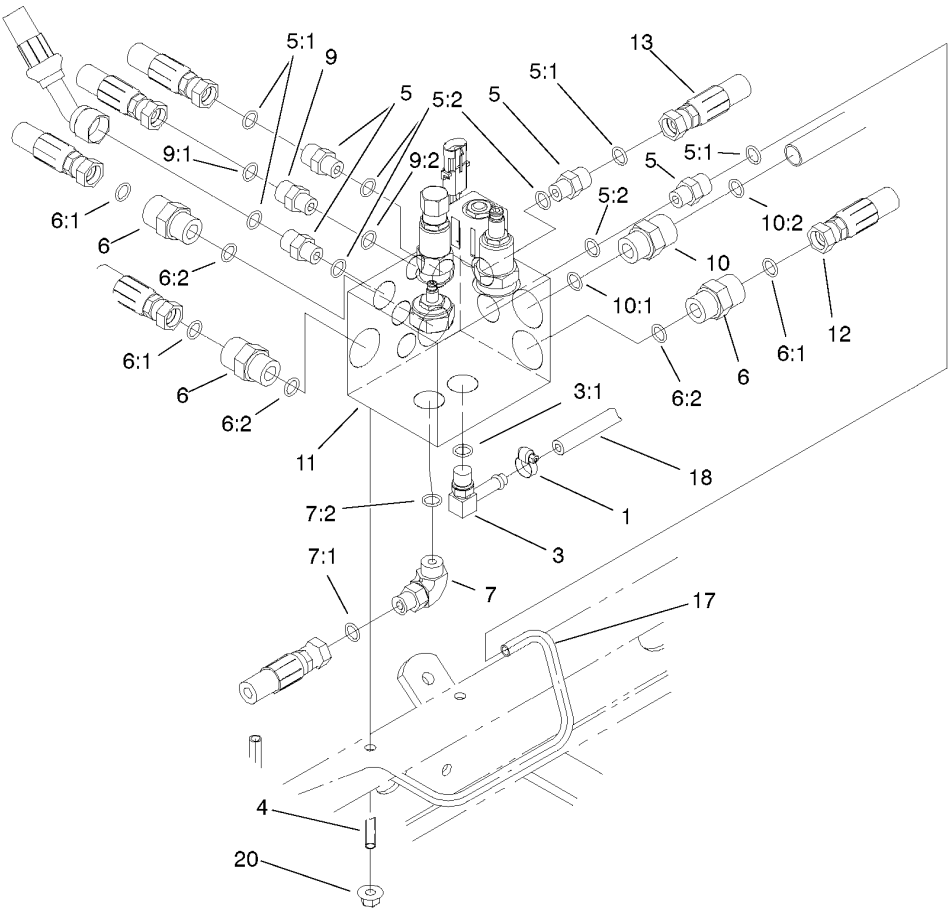 


Manifold Block Installation Assembly

Ref	Part No.	Qty.	Description
1	2412-36	1	Clamp-Hose
3	100-4887	1	Fitting-Barb
3:1	237-42	1	O-Ring
4	104-0430	2	Stud
5	340-2	4	Adapter
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	340-7	3	Adapter
6:1	237-65	1	O-Ring
6:2	237-80	1	O-Ring
7	340-77	1	Fitting-90 DEG
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
9	340-88	1	Adapter
9:1	237-22	1	O-Ring
9:2	237-78	1	O-Ring
10	340-66	1	Fitting-Hydraulic
10:1	237-80	1	O-Ring
10:2	237-58	1	O-Ring
11	100-4826	1	Manifold Block ASM
12	104-0488	1	Hose ASM
13	100-4889	1	Hose ASM
17	100-4827	1	Tube ASM
18	80-7342	1	Hose ASM


Ref	Part No.	Qty.	Description
20	32128-20	2	Nut-HF

 31

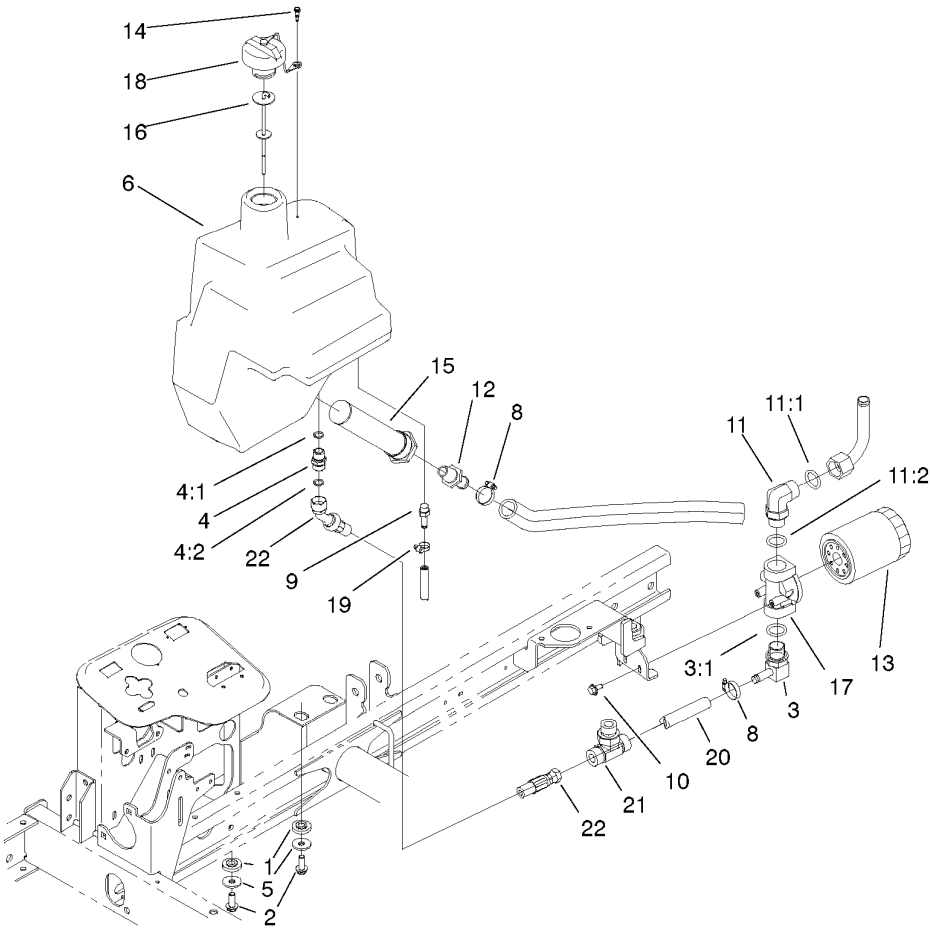

Hydraulic Tank Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	240-11	4	Grommet-Mount, Tank	21	100-4836	1	Fitting-Tee
2	3234-11	4	Screw-HHF	22	104-0487	1	Hose ASM
3	353-987	1	Fitting-HYD. Barb, 90 DEG				
3:1	237-81	1	O-Ring				
4	100-4890	1	Fitting-Check				
4:1	237-79	1	O-Ring				
4:2	237-30	1	O-Ring				
5	63-8410	4	Washer				
6	100-4814	1	Tank-Hydraulic				
8	2412-34	2	Clamp-Hose				
9	353-979	1	Fitting-Barb, Straight				
10	3234-13	2	Screw-HHF				
11	340-142	1	Elbow-90 DEG				
11:1	237-58	1	O-Ring				
11:2	237-81	1	O-Ring				
12	100-4835	1	Fitting-Barb				
13	54-0110	1	Filter-Oil, Transmission				
14	57-5420	1	Screw-Shoulder				
15	75-0550	1	Suction-Strainer				
16	75-3710	1	Dipstick				
17	92-5821	1	Filter Head ASM				
18	93-7160	1	Cap-Oil, Hydraulic				
19	2412-36	1	Clamp-Hose				
20	104-0486	1	Hose ASM				

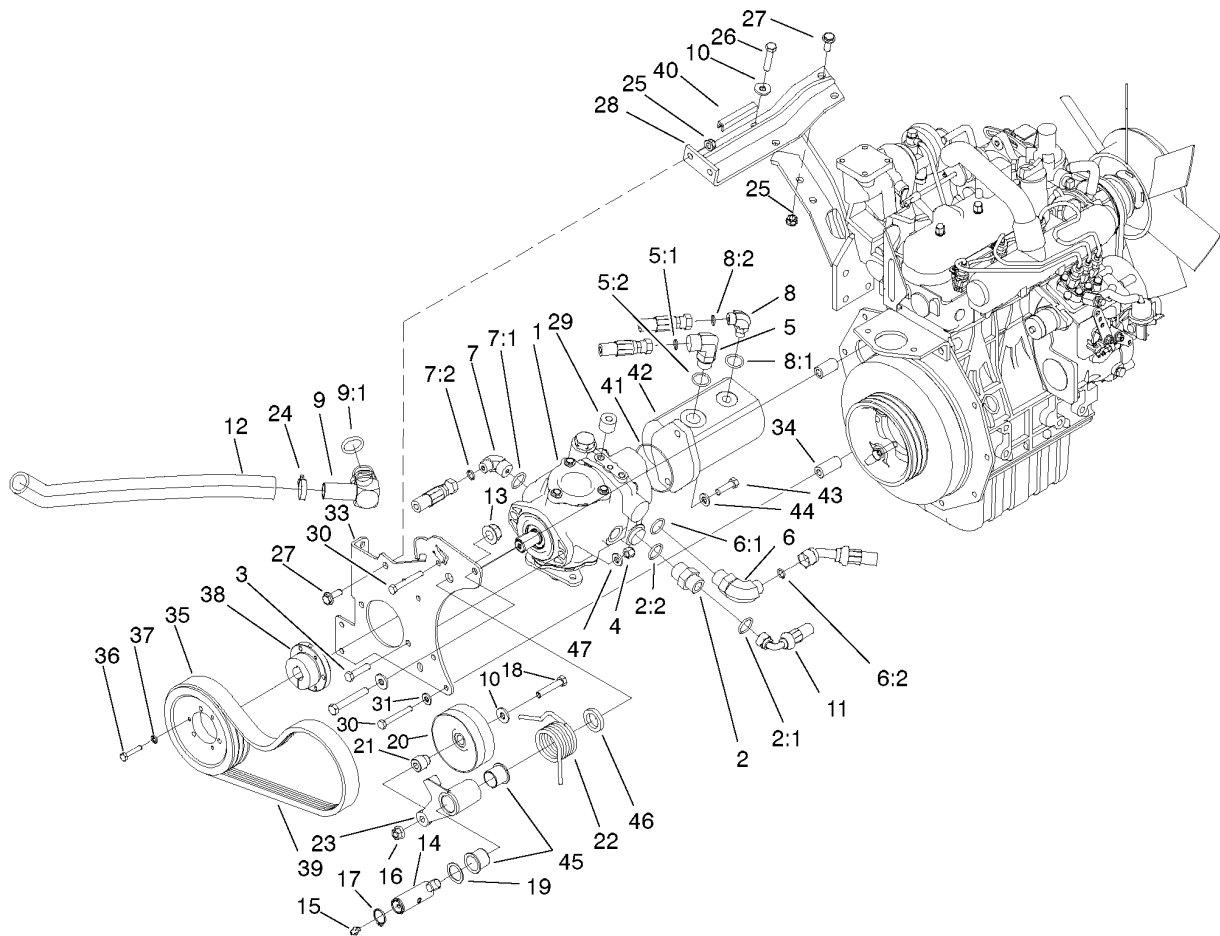 

Hydrostat Assembly


Ref	Part No.	Qty.	Description
1	104-0428	1	Pump-Piston
2	340-8	1	Adapter
2:1	237-65	1	O-Ring
2:2	237-81	1	O-Ring
3	323-8	2	Screw-HH
4	3296-39	2	Nut-Lock, NI
5	340-17	1	Adapter
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	340-139	1	Fitting-HYD,
6:1	237-81	1	O-Ring
6:2	237-65	1	O-Ring
7	340-18	1	Fitting-HYD, 90 DEG
7:1	237-79	1	O-Ring
7:2	237-22	1	O-Ring
8	340-77	1	Fitting-90 DEG
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	353-987	1	Fitting-HYD. Barb, 90 DEG
9:1	237-81	1	O-Ring
10	80-6990	3	Washer-Hardened
11	95-8834	1	Hose ASM
12	104-0489	1	Hose
13	32128-54	1	Nut-Flange

Ref	Part No.	Qty.	Description
14	99-3624	1	Shaft-Pivot, Idler
15	302-5	1	Fitting-Grease
16	32128-21	1	Nut-HF
17	32151-36	1	Ring-Retaining
18	323-10	1	Screw-HH
19	74-1810	1	Washer
20	99-3621	1	Pulley-Idler
21	99-3622	1	Spacer-Idler
22	100-4844	1	Spring-Torsion
23	99-3623-03	1	Arm-Idler
24	2412-34	1	Clamp-Hose
25	32128-43	4	Nut-Flange
26	323-19	2	Screw-HH
27	3234-11	4	Screw-HHF
28	99-3436-03	1	Support-Pump
29	99-3440	2	Spacer
30	33114-060	4	Screw-HH
31	87-8640	3	Washer-Flat
33	95-8933-03	1	Plate-Mount, Pump
34	95-8941	4	Spacer-Mount, Pump
35	99-3620	1	Pulley-3V, Pump
36	321-13	3	Screw-HH
37	3253-3	3	Washer-Lock
38	100-4813	1	Bushing-Lock, Taper

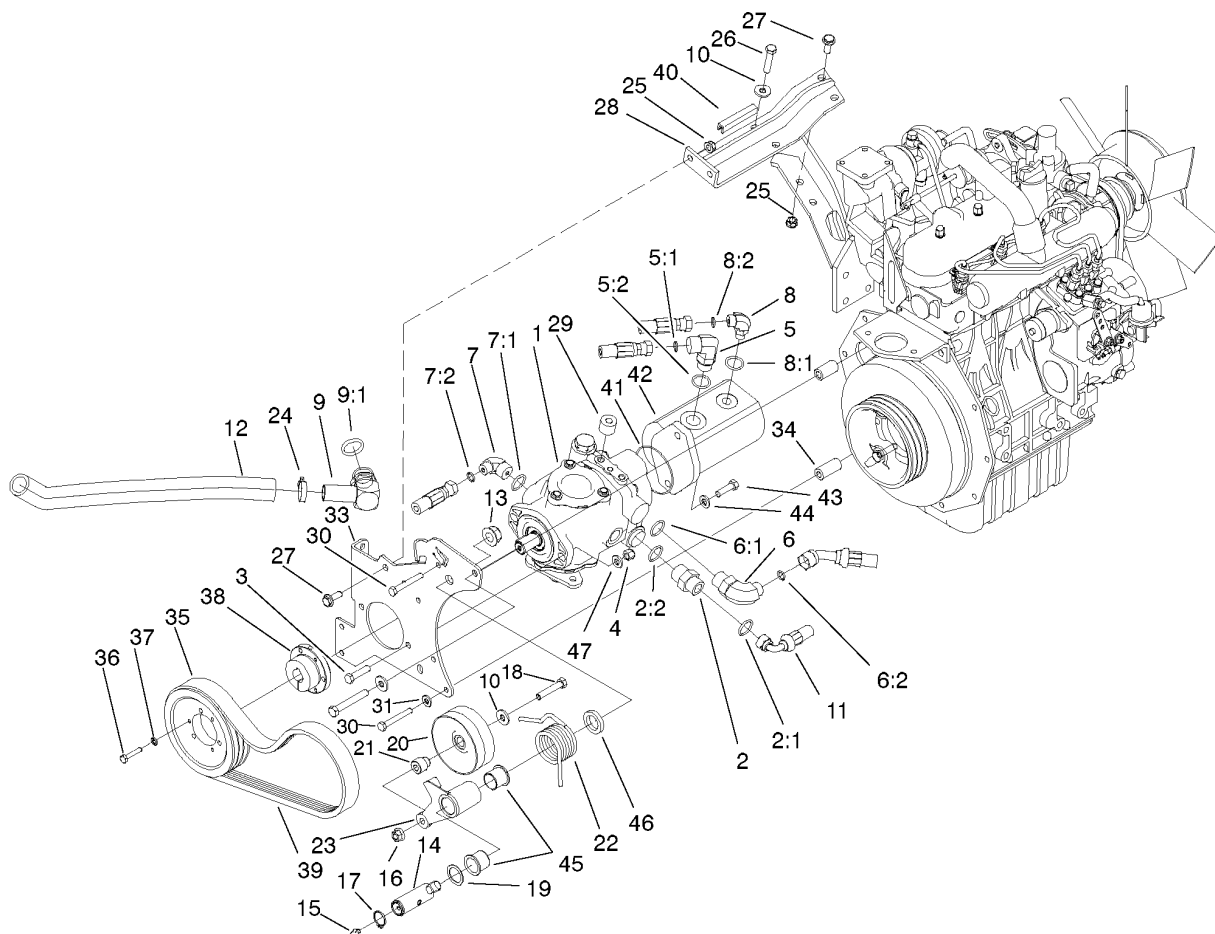 

Hydrostat Assembly (continued)


Ref	Part No.	Qty.	Description
39	99-3619	1	Belt-3V
40	70-2041	1	Trim
41	353-949	1	O-Ring
42	100-1646	1	Hydraulic Pump ASM
43	323-7	2	Screw-HH
44	3256-24	2	Washer-Flat
45	99-3631	2	Bushing-Flange
46	99-3625	1	Spacer-Arm, Idler
47	100-4852	2	Washer-Hardened

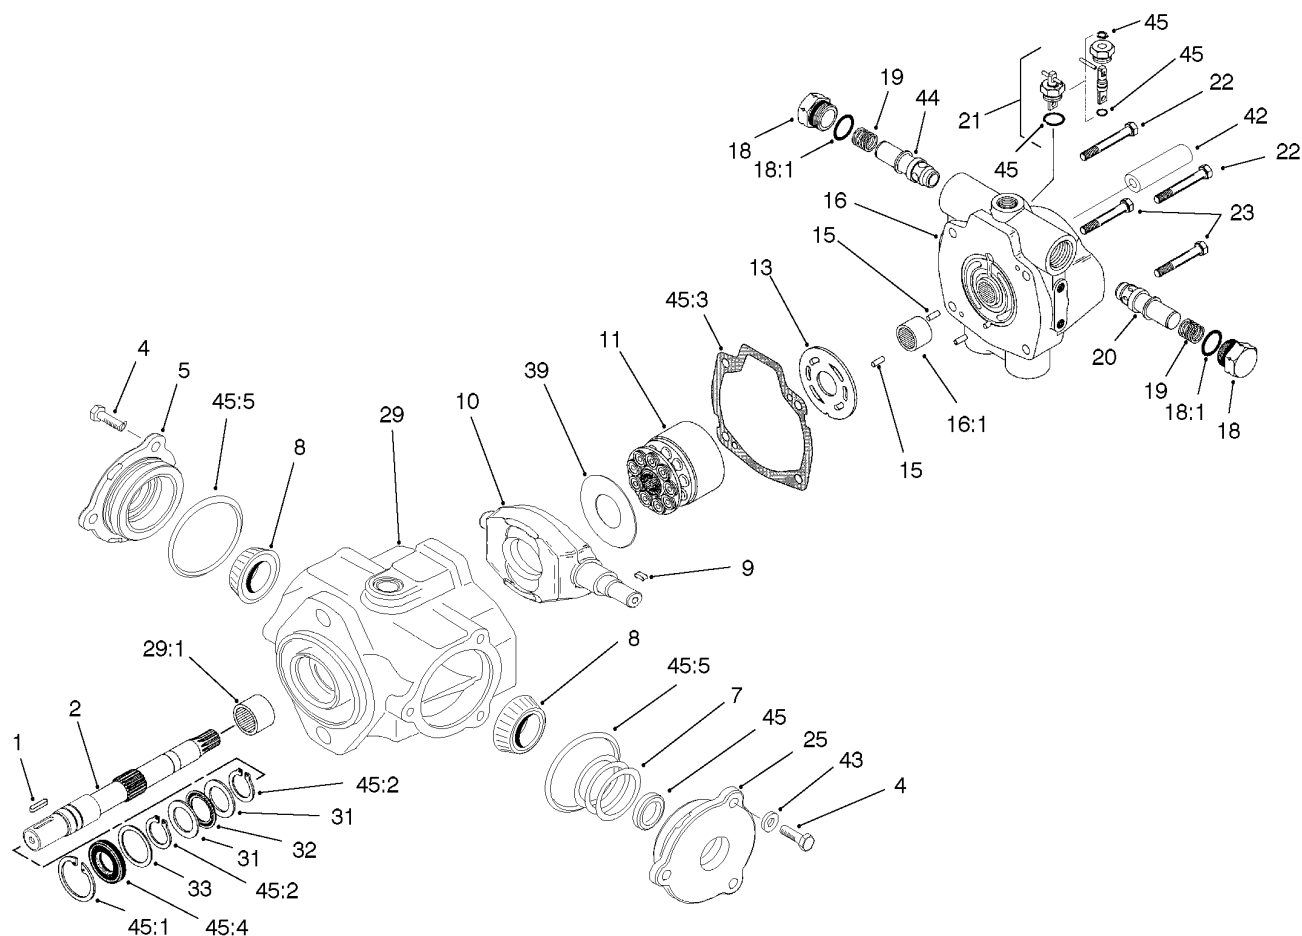 

Piston Pump Assembly No. 104-0428


Ref	Part No.	Qty.	Description
1	94-3645	1	Key
2	94-6359	1	Shaft-Drive
4	98-4640	6	Screw-Cap
5	98-4633	1	Cover Plate ASM
7	100-3182	1	Kit-Shim
8	98-4639	2	Bearing-Cone
9	94-3646	1	Key
10	99-3520	1	Plate-Cam
11	76-6070	1	Rotating Kit ASM
13	104-0429	1	Plate-Cam
15	76-6150	2	Pin-Dowel
16	100-3177	1	Back Plate ASM
16:1	94-6368	1	Bearing
18	70-1240	2	Plug ASM
18:1	60-5980	1	O-Ring
19	76-6200	2	Spring
20	94-3644	1	Seat
21	100-3181	1	Dump Valve ASM
22	76-6170	2	Capscrew
23	76-6160	2	Capscrew
25	98-4645	1	Cover Plate ASM
29	100-3176	1	Housing ASM
29:1	94-6363	1	Bearing
31	252-71	2	Bearing-Thrust

Ref	Part No.	Qty.	Description
32	252-66	1	Bearing-Thrust
33	33-3720	1	Washer
39	98-4635	1	Insert-Plate, Cam
42	74-9040	1	Coupler
43	95-6055	6	Washer
44	99-3521	1	Relief Valve ASM
45	98-4636	1	Kit-Repair, Seal
45:1	32151-13	1	Ring-Snap, Internal
45:2	32151-29	1	Ring-Snap, External
45:3	33-4930	1	Gasket-Housing
45:4	42-2720	1	Seal-External
45:5	100-3179	1	O-Ring

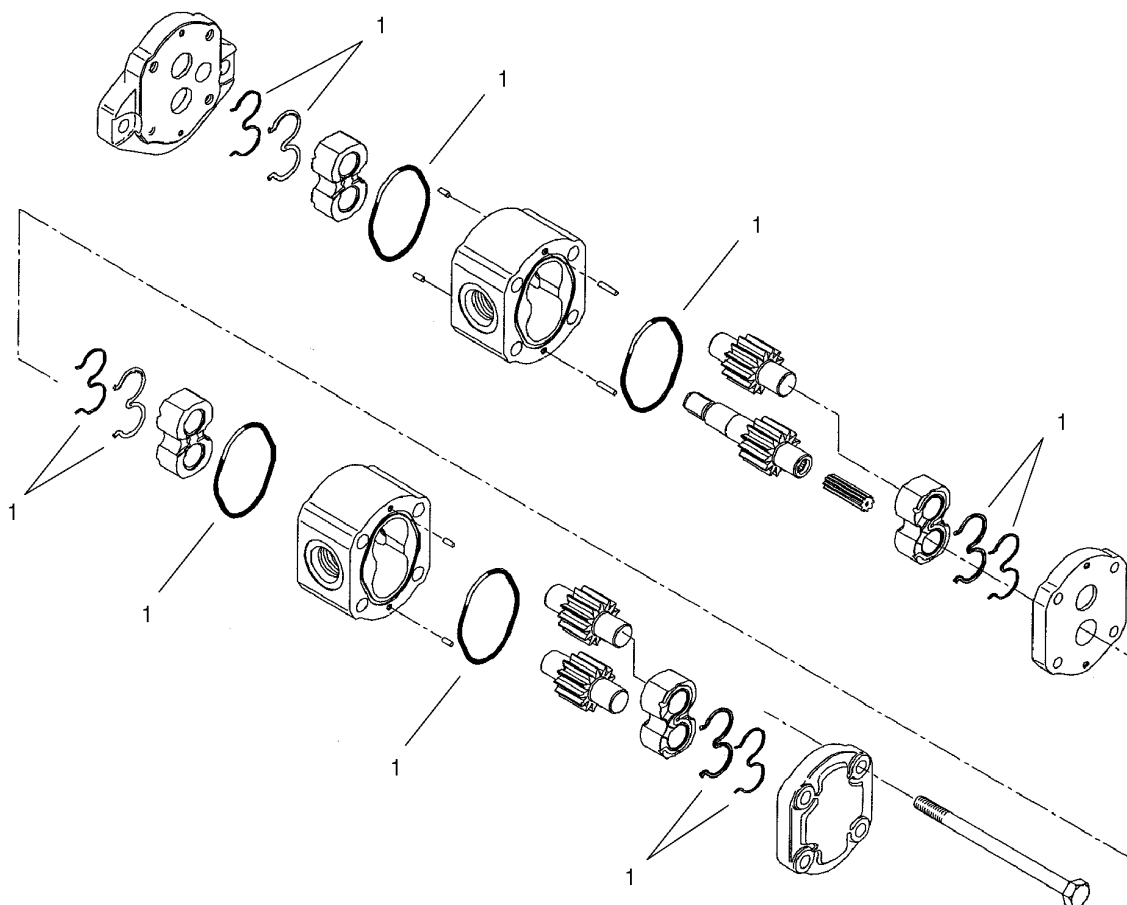 

Hydraulic Pump Assembly No. 100-1646


Ref	Part No.	Qty.	Description
1	104-4226	1	Kit-Seal

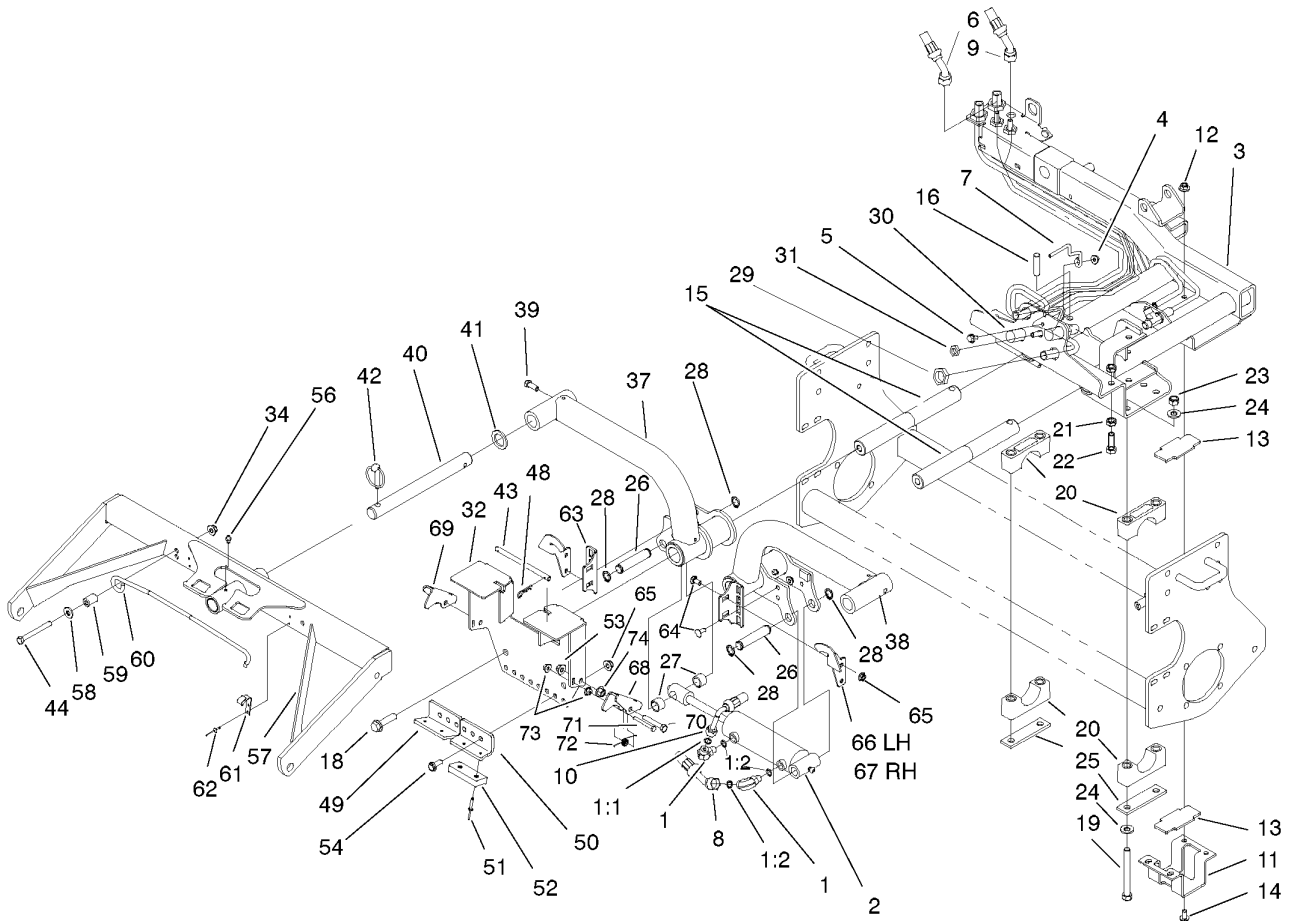 

Carrier Assembly


Ref	Part No.	Qty.	Description
1	340-77	2	Fitting-90 DEG
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
2	95-8978	1	Cylinder-Hydraulic
3	100-4939-03	1	Sidewinder Carrier ASM
4	32128-33	1	Nut-HF
5	3234-4	1	Screw-HHF
6	95-8822	1	Hose ASM
7	99-3433	1	Wire-Center
8	104-0405	1	Hose ASM
9	95-8821	1	Hose ASM
10	104-0406	1	Hose ASM
11	104-0416-03	1	Bracket-Slide
12	32128-43	4	Nut-Flange
13	104-0417	2	Slide-Plastic
14	3234-1	4	Screw-HHF
15	95-8531	2	Shaft-Pivot, Liftarm
16	32121-122	2	Pin-Roll
18	3234-27	2	Screw-Flange
19	325-38	8	Screw-HH
20	95-8609	8	Cap-Bearing
21	3218-5	4	Nut-Jam
22	325-6	2	Screw-HH
23	3296-23	8	Nut-Lock, NI

Ref	Part No.	Qty.	Description
24	87-7270	16	Washer-Thrust
25	99-3373	4	Bar-Support, Slide
26	95-8575	2	Pin
27	75-9590	2	Spacer-Cylinder
28	32120-93	4	Ring-Retaining
29	340-74	4	Locknut-Bulkhead
30	99-3640	1	Tube ASM
31	340-78	1	Locknut-Bulkhead
32	104-4820-03	1	Bracket-Carrier Stop
34	32128-43	2	Nut-Flange
37	104-0481	1	RH Liftarm ASM
38	104-0482	1	LH Liftarm ASM
39	323-6	2	Screw-HH
40	95-8979	2	Shaft
41	3-6781	2	Washer-Thrust
42	283-71	2	Pin-Lynch
43	104-0472	1	Rod
44	323-15	2	Screw-HH
48	3290-467	2	Pin-Hair
49	104-4639-03	1	Stop-Deck, LH
50	104-4640-03	1	Stop-Deck, RH
51	3269-11	4	Rivet
52	86-5350	2	Bumper-Rubber
53	32128-43	4	Nut-Flange

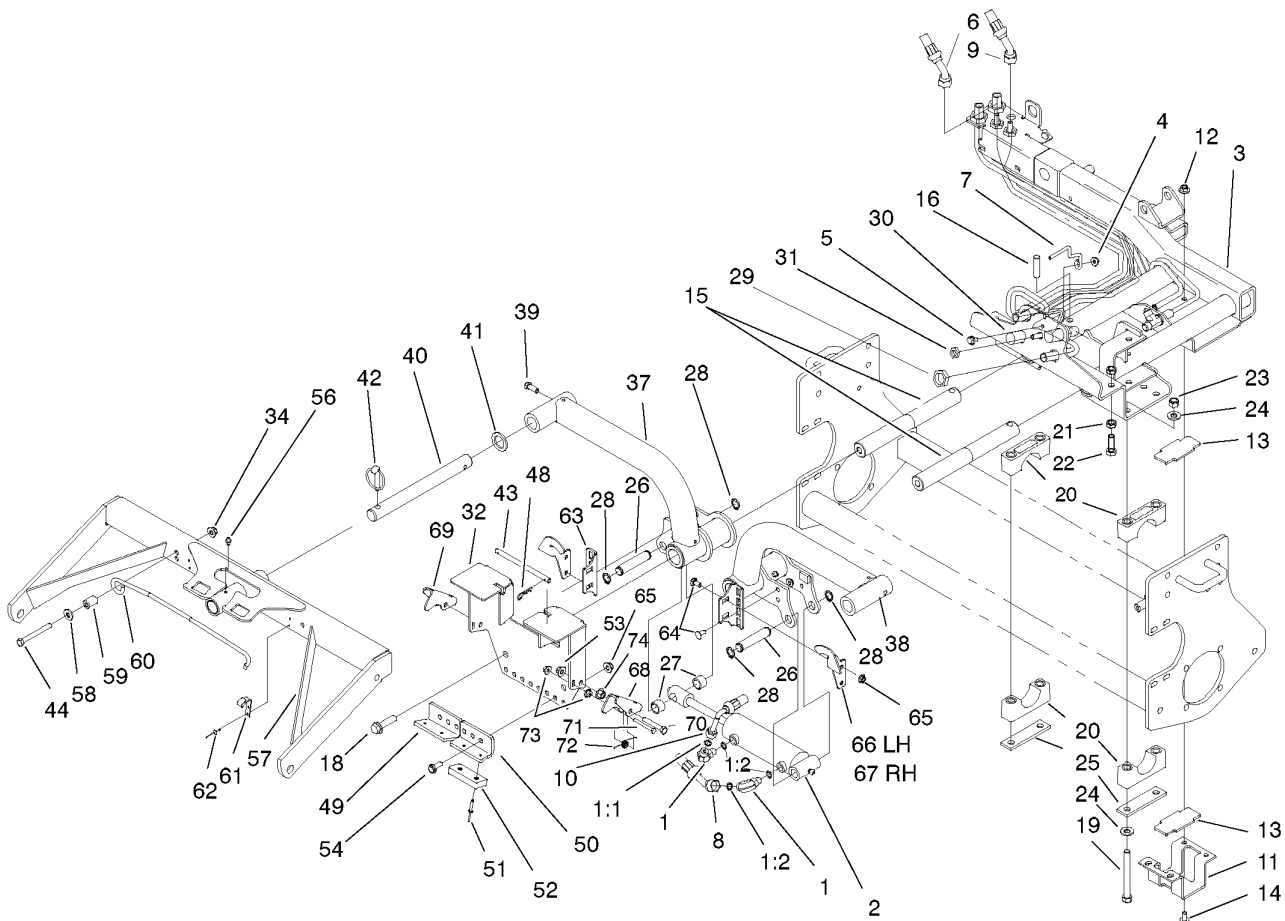 

Carrier Assembly (continued)


Ref	Part No.	Qty.	Description
54	3234-11	4	Screw-HHF
56	302-5	2	Fitting-Grease
57	104-4230	2	Front Carrier Frame
58	3256-4	2	Washer-Flat
59	104-4613	2	Tube-Latch
60	104-4612	2	Rod-Latch
61	104-4237	4	Clip-Rod
62	3290-271	4	Rivet-Pop
63	104-4828-03	2	Bracket-Actuator
64	3230-23	8	Screw-CARR
65	32128-44	8	Nut
66	104-4826-03	1	Actuator, RH
67	104-4827-03	1	Actuator, LH
68	104-4819-03	1	Bracket-Pivot, LH
69	104-4825-03	1	Bracket-Pivot, RH
70	323-11	2	Screw-HH
71	321-18	2	Screw-HH
72	104-4821	2	Spring-Torsion
73	32128-33	4	Nut-HF
74	32128-43	4	Nut

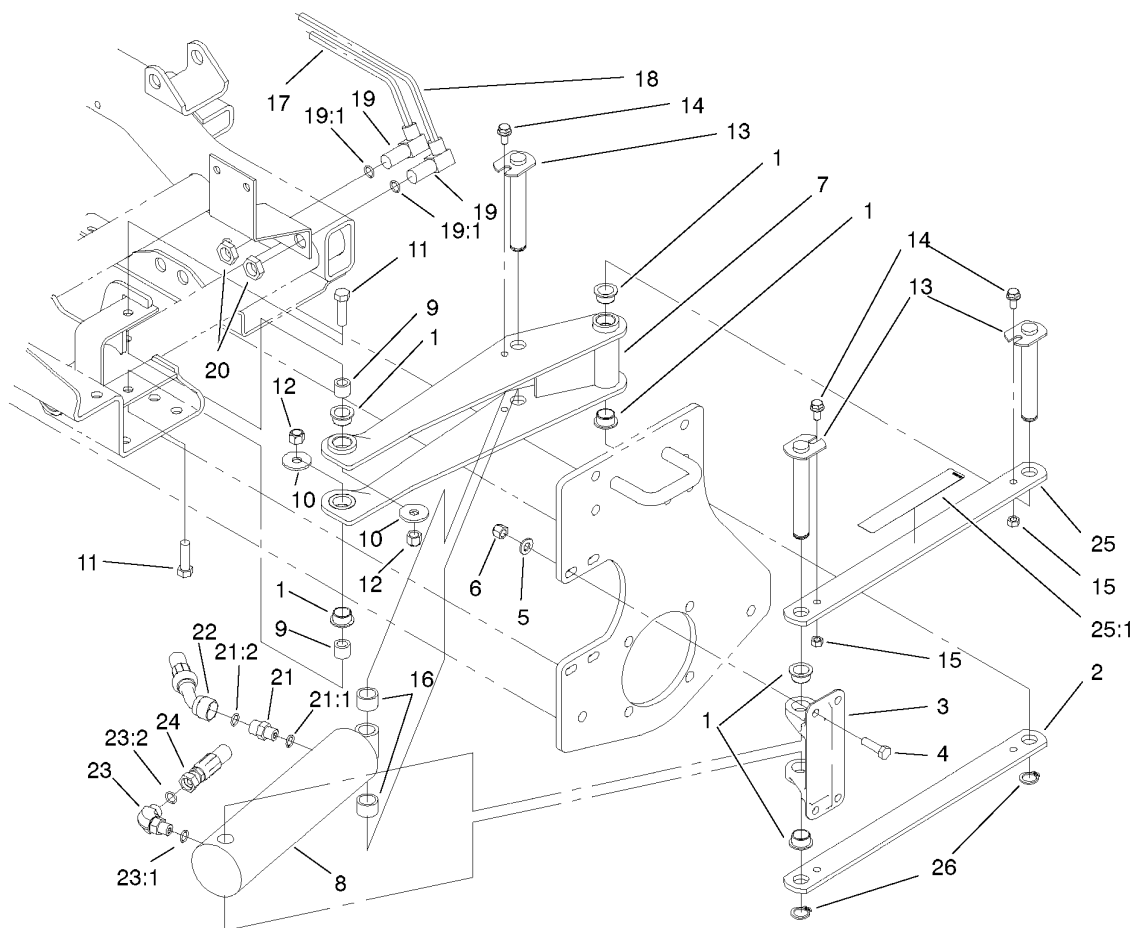 

Scissor Assembly


Ref	Part No.	Qty.	Description
1	95-8526	6	Bushing-Plastic
2	95-8527-03	1	Link-Scissor
3	95-8883	1	Mount-Scissor
4	323-7	4	Screw-HH
5	3256-24	4	Washer-Flat
6	3296-39	4	Nut-Lock, NI
7	95-8521-03	1	Frame-Scissor
8	95-8512	1	Cylinder-Hydraulic
9	95-8603	2	Spacer
10	87-5330	2	Washer
11	324-6	2	Screw-HH
12	3296-48	2	Nut-Lock NI
13	95-8529	3	Pin
14	3234-14	3	Screw-HHF
15	32152-1	3	Nut-Lock, NI
16	46-6350	2	Spacer
17	95-8790	1	Tube ASM
18	95-8791	1	Tube ASM
19	340-154	2	Union-Bulkhead
19:1	237-22	2	O-Ring
20	340-70	2	Locknut-Bulkhead
21	85-9720	1	Fitting-Orificed
21:1	237-78	1	O-Ring
21:2	237-21	1	O-Ring

Ref	Part No.	Qty.	Description
22	95-8838	1	Hose ASM
23	340-132	1	Fitting-HYD, 90
23:1	237-78	1	O-Ring
23:2	237-21	1	O-Ring
24	95-8839	1	Hose ASM
25	99-3505	1	Link ASM-Scissors
25:1	94-3353	1	Decal-Point, Pinch
26	32120-93	2	Ring-Retaining

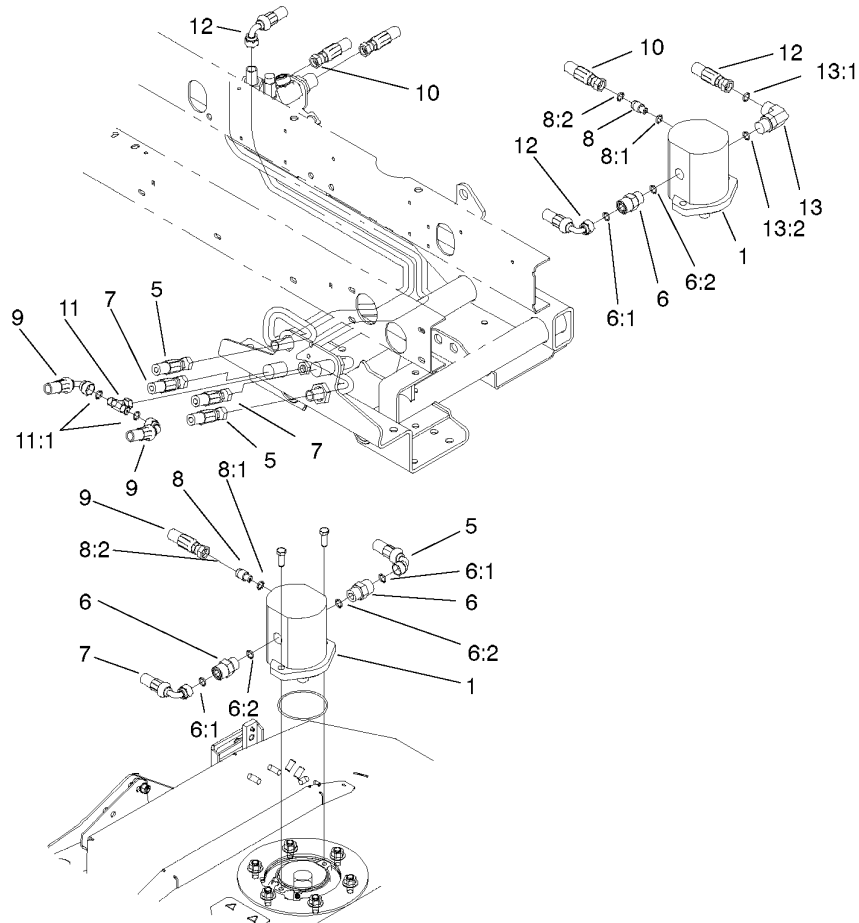 


Reel Motor Assembly

Ref	Part No.	Qty.	Description				
1	99-6104	3	Motor-Hydraulic				
③*1:2	99-6105	1	Kit-Seal				
③*1:3	98-5185	1	Bit-Flange/Valve, Back				
③*1:4	98-5191	1	Kit-Valve, Relief				
5	100-4882	2	Hose ASM				
6	340-7	5	Adapter				
6:1	237-65	1	O-Ring				
6:2	237-80	1	O-Ring				
7	100-4883	2	Hose ASM				
8	340-92	3	Fitting				
8:1	237-78	1	O-Ring				
8:2	237-21	1	O-Ring				
9	104-1080	2	Hose ASM				
10	100-4876	1	Hose ASM				
11	99-3477	1	Fitting-Tee				
11:1	237-42	2	O-Ring				
12	100-4880	2	Hose ASM				
13	340-17	1	Adapter				
13:1	237-65	1	O-Ring				
13:2	237-80	1	O-Ring				

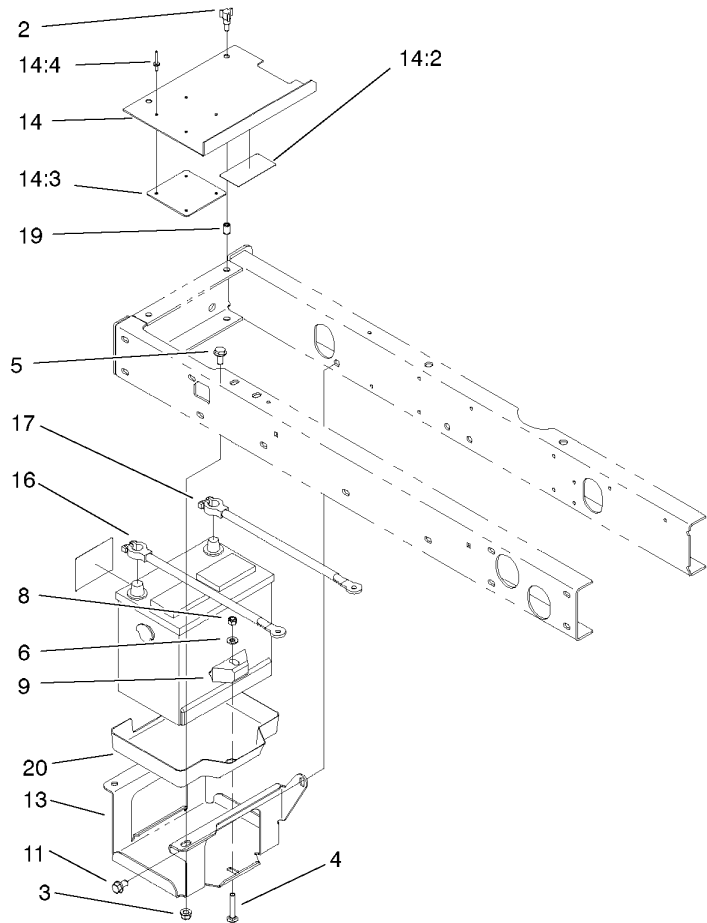 

Battery Assembly


Ref	Part No.	Qty.	Description				
2	233-70	2	Knob-3 Star				
3	32128-43	3	Nut-Flange				
4	3230-6	1	Screw-CARR				
5	3234-1	3	Screw-HHF				
6	3256-23	1	Washer-Flat				
8	3296-29	1	Nut-Lock				
9	66-2490	1	Retainer-Battery				
11	32144-15	1	Screw				
13	95-8796-03	1	Support-Battery				
14	99-3602	1	Cover-Battery				
14:2	93-7276	1	Decal-Danger				
14:3	87-7620	1	Shield-Terminal, Battery				
14:4	3269-27	4	Rivet-Snap				
16	95-8853	1	Cable-Battery, Positive				
17	95-8854	1	Cable-Battery, Negative				
19	32148-6	2	Nut-Insert				
20	99-3513	1	Tray-Battery				

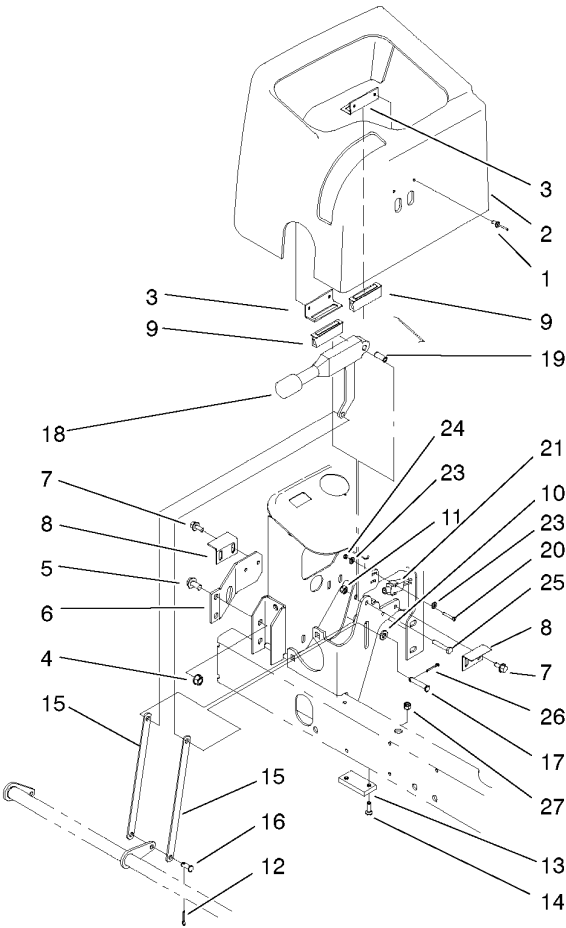 

Parking Brake Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3269-5	4	Rivet	26	3272-6	1	Pin-Cotter
2	95-8707	1	Cover-Dash	27	32128-32	2	Nut-HHF
3	95-8763	2	Bracket-Hold Down, Cover				
4	32128-43	2	Nut-Flange				
5	3234-1	2	Screw-HHF				
6	95-8764-03	1	Support-Magnet				
7	32144-10	4	Screw-HWH				
8	95-8765	2	Bracket-Strike, Magnet				
9	58-4250	2	Catch-Magnetic				
10	3256-23	1	Washer-Flat				
11	3296-42	1	Nut-Lock, NI				
12	3272-10	1	Pin-Cotter				
13	95-8684	1	Pad-Bumper				
14	3289-4	2	Screw-FH				
15	104-4628-03	2	Link-Brake, Parking				
16	283-62	1	Pin-Clevis				
17	94-3829	1	Pin-Clevis				
18	104-4817	1	Lever-Brake				
19	87-4710	1	Spacer-Brake, Parking				
20	32105-9	2	Screw				
21	95-8900	1	Switch				
23	3256-21	4	Washer-Flat				
24	3296-9	2	Nut-Lock NI				
25	321-9	1	Screw-HH				

 43

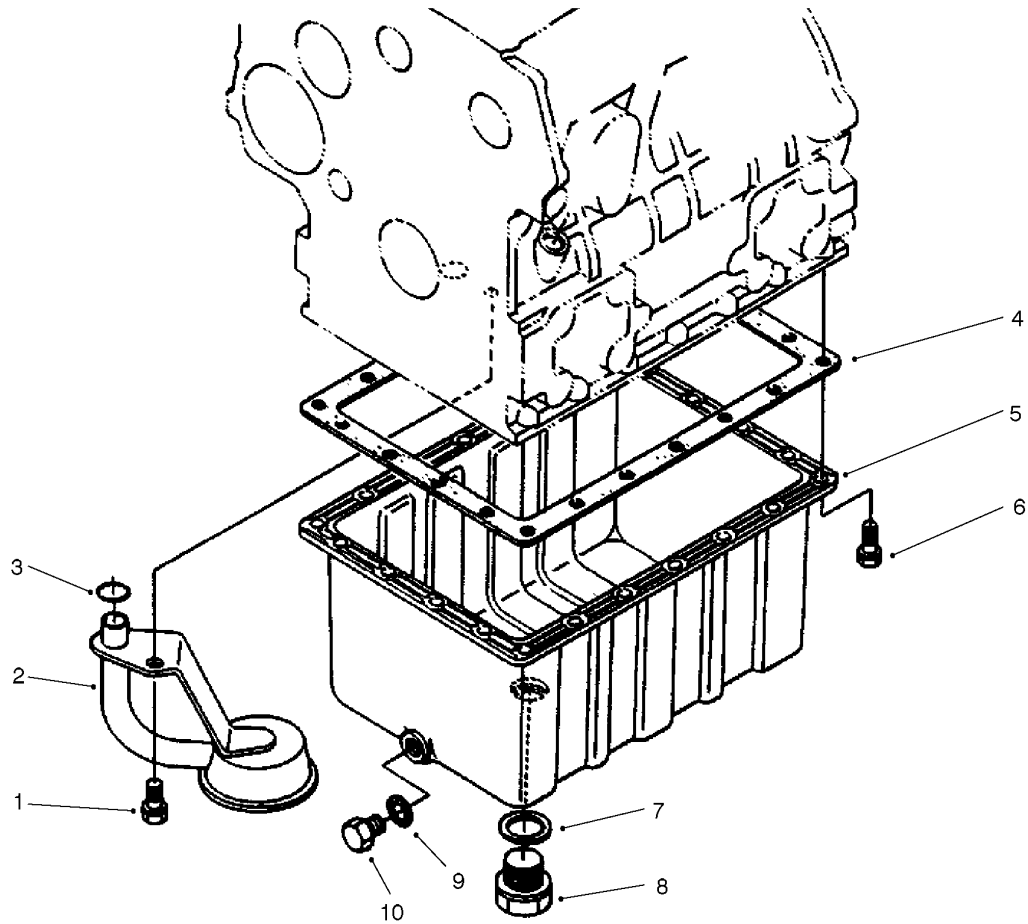


Oil Pan Assembly

Ref	Part No.	Qty.	Description				
1	98-9358	1	Bolt				
2	98-9538	1	Filter-Oil				
3	98-7527	1	O-Ring				
4	98-9646	1	Gasket-Pan, Oil				
5	98-9685	1	Drain-Oil				
6	98-9350	22	Bolt				
7	98-9399	1	Gasket				
8	98-7523	1	Plug-Drain				
9	98-7524	1	Gasket				
10	98-9386	1	Plug				

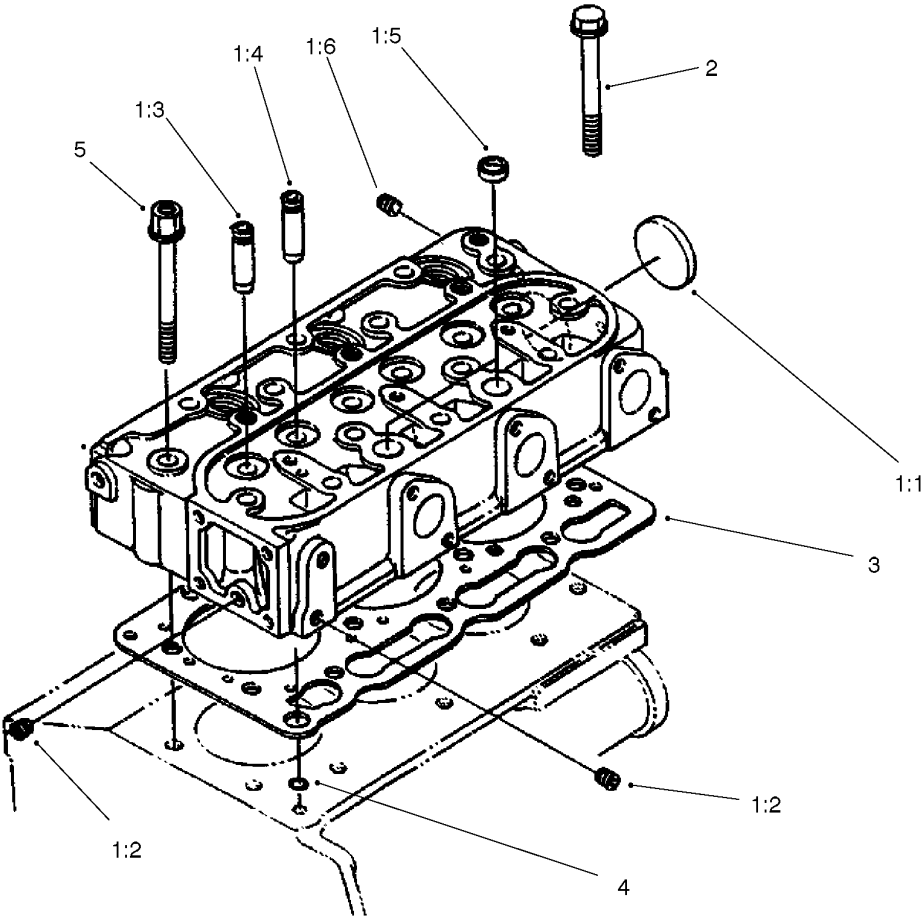 

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
1	99-8344	1	Cylinder Head ASM				
1:1	98-9395	1	Cap-Sealing				
1:2	98-7540	2	Cap-Sealing				
1:3	98-9499	3	Guide-Valve, Inlet				
1:4	98-9500	3	Guide-Valve, Exhaust				
1:5	98-9389	2	Cap-Sealing				
1:6	98-9444	1	Plug				
2	98-9479	12	Bolt-Head, Cylinder				
3	98-9613	1	Gasket-Head,Cylinder				
4	98-7509	1	O-Ring				
5	98-9647	2	Bolt-Head, Cylinder				

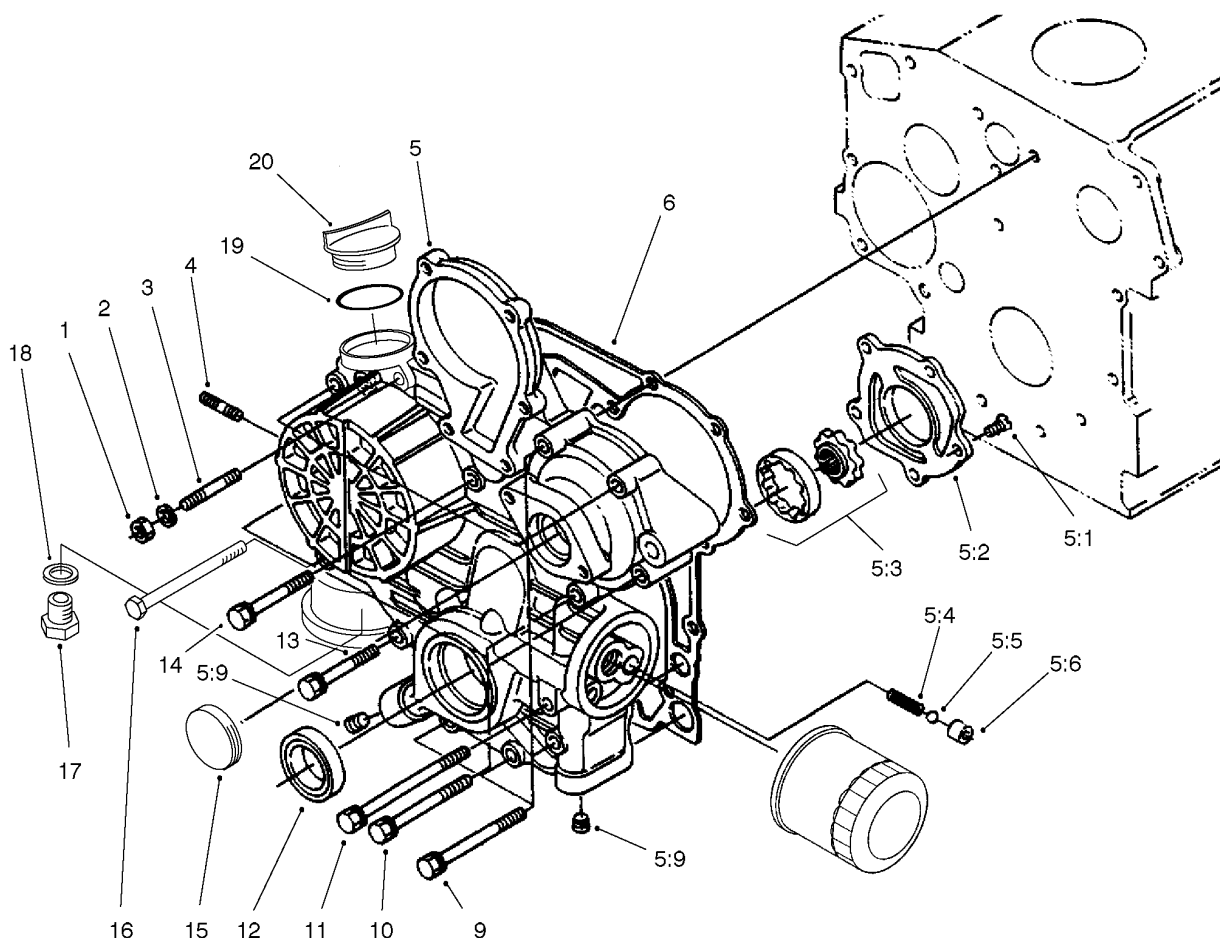 

Grease and Oil Filter Assembly


Ref	Part No.	Qty.	Description
1	98-7572	1	Nut
2	98-9367	1	Washer-Spring
3	98-9363	1	Stud
4	98-9362	2	Stud
5	99-3462	1	Gear Case ASM
5:1	98-9592	5	Screw
5:2	98-9541	1	Cover-Pump, Oil
5:3	98-9540	1	Oil Pump Rotor ASM
5:4	98-9544	1	Spring
5:5	98-9380	1	Ball
5:6	98-9543	1	Seat-Valve
5:9	98-9598	2	Plug
6	98-9633	1	Gasket-Case, Gear
7	98-9372	2	O-Ring
8	98-7547	2	O-Ring
9	98-9356	2	Bolt
10	98-9355	6	Bolt
11	99-3510	2	Bolt
12	98-9482	1	Seal-Oil
13	98-9437	1	Bolt
14	98-7496	3	Bolt
15	99-3515	1	Plug-Gearcase
16	99-3511	1	Bolt
17	99-3450	2	Plug

Ref	Part No.	Qty.	Description
18	99-3451	1	Plug-Packing
19	98-7430	1	O-Ring
20	98-9449	1	Plug-Filler, Oil

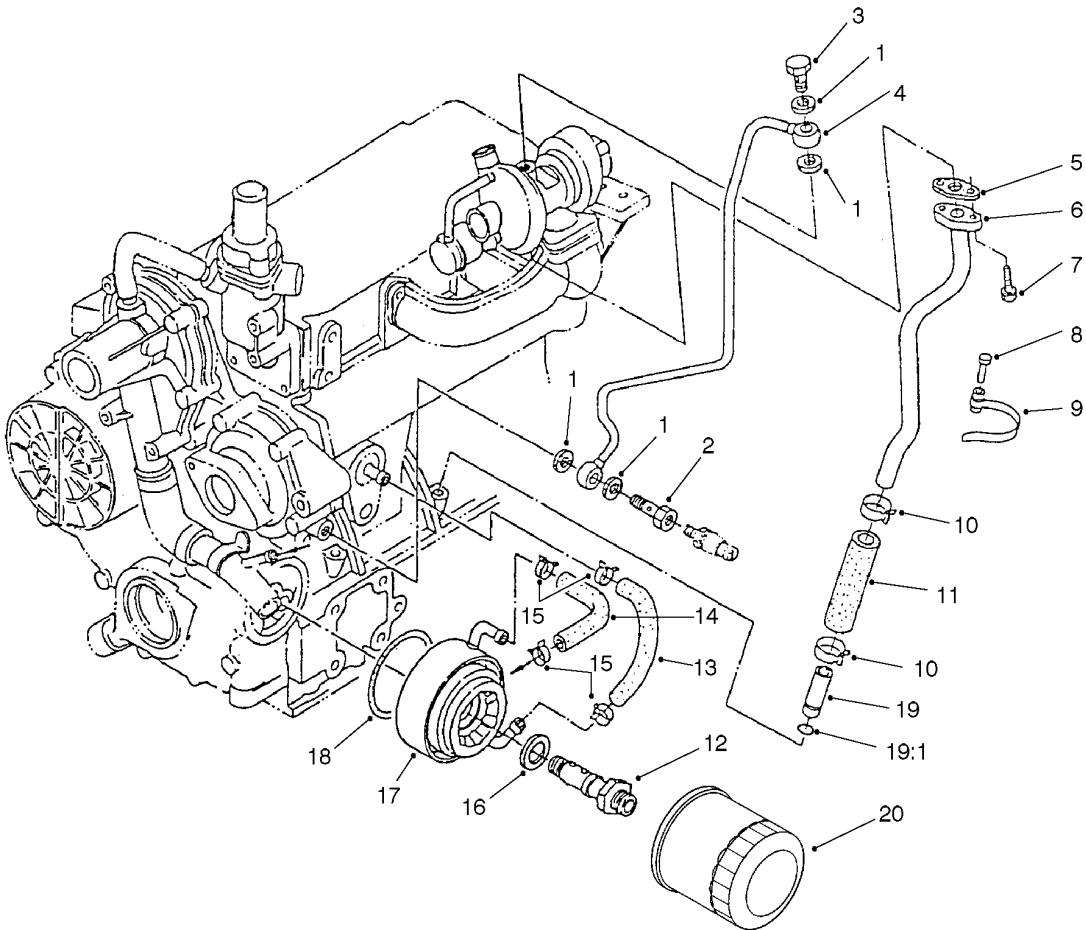 


Filter, Oil Cooler, and Pipe Assembly

Ref	Part No.	Qty.	Description				
1	99-8346	4	Gasket				
2	98-9417	1	Bolt-Joint, Eye				
3	98-9418	1	Bolt-Joint, Eye				
4	98-9419	1	Oil Pipe ASM				
5	98-9435	1	Gasket-Oil Return,Turbo				
6	98-9461	1	Pipe Line ASM				
7	98-7568	2	Bolt				
8	98-9591	1	Pin-Band				
9	98-9601	1	Clamp-Pipe				
10	98-9714	2	Clamp-Hose				
11	98-9721	1	Pipe-Oil				
12	98-9723	1	Holder ASM				
13	98-9724	1	Pipe-Cooler, Oil				
14	98-9578	1	Pipe-Return, Water				
15	98-9579	4	Band-Pipe				
16	98-9727	1	Collar				
17	98-9728	1	Oil Cooler ASM				
18	98-9729	1	O-Ring				
19	99-8383	1	Oil Pipe ASM				
19:1	98-9722	1	O-Ring				
20	99-8384	1	Filter-Oil				

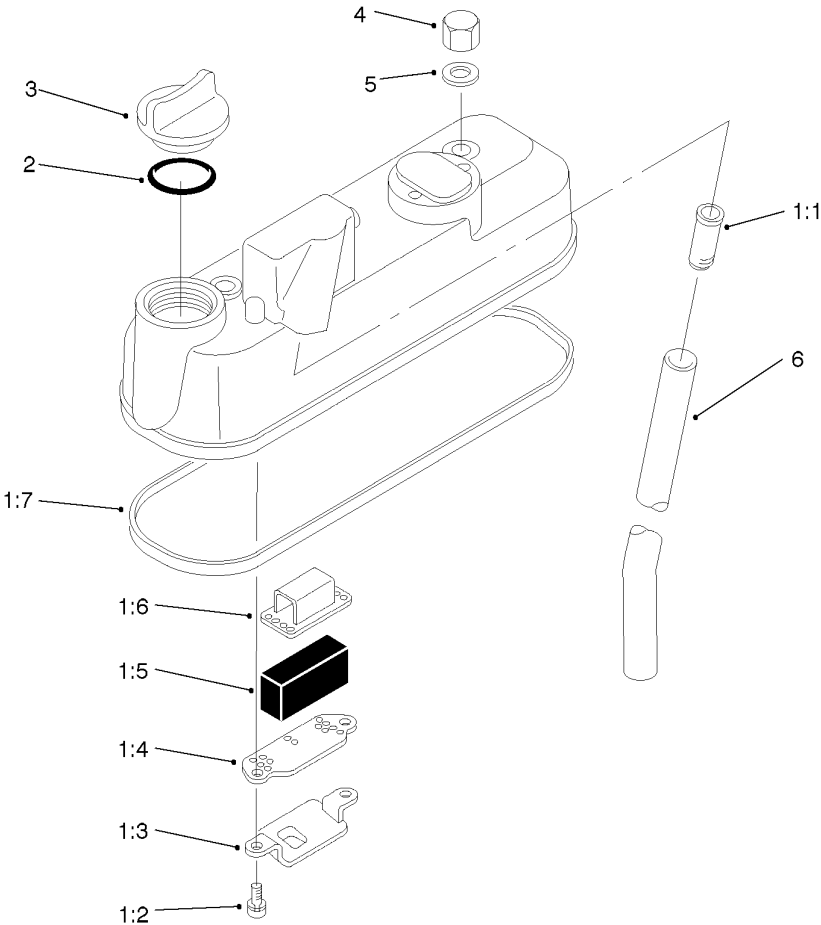 


Head Cover Assembly

Ref	Part No.	Qty.	Description				
1	98-9614	1	Cylinder Head Coverasm				
1:1	98-9492	1	Joint-Pipe, Breather				
1:2	98-9364	2	Screw W/Washer				
1:3	98-9490	1	Shield-Oil, Breather				
1:4	98-9488	1	Plate-Element,Breather				
1:5	98-9493	1	Element-Breather				
1:6	98-9489	1	Plate-Element,Breather				
1:7	98-9615	1	Gasket-Cover, Head				
2	98-7430	1	O-Ring				
3	98-9449	1	Plug-Filler, Oil				
4	98-9455	3	Nut-Cap				
5	98-9454	3	Gasket				
6	98-9491	1	Pipe-Breather				

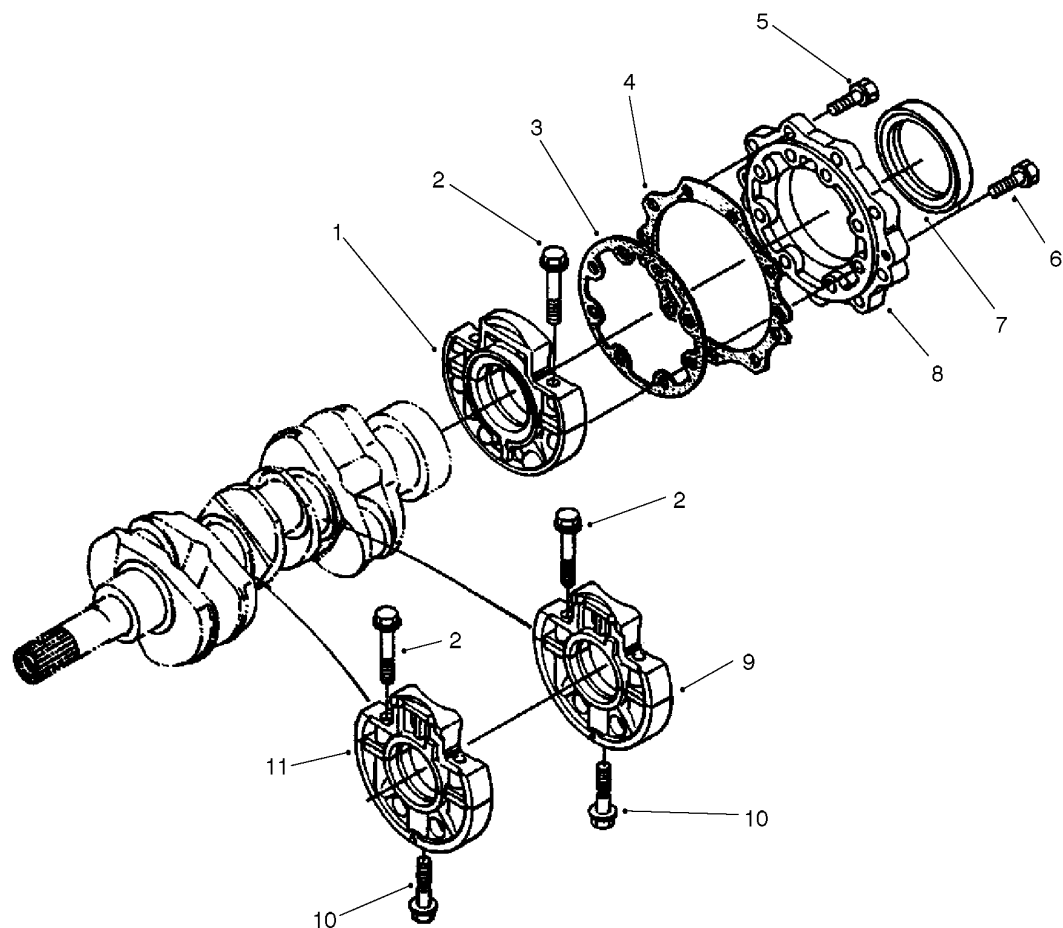 


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description
1	98-9480	1	Main Bearing Caseasm
2	98-9484	6	Bolt-Case, Bearing
3	98-9634	1	Gasket-Case, Bearing
4	98-9635	1	Gasket-Cover,Bearing Case
5	98-7568	9	Bolt
6	98-9352	8	Bolt
7	98-9483	1	Seal-Oil
8	98-9487	1	Cover-Case, Bearing
9	99-8360	1	Case-Bearing, Main
10	98-9485	2	Bolt-Case, Bearing
11	99-8361	1	Case-Bearing, Main

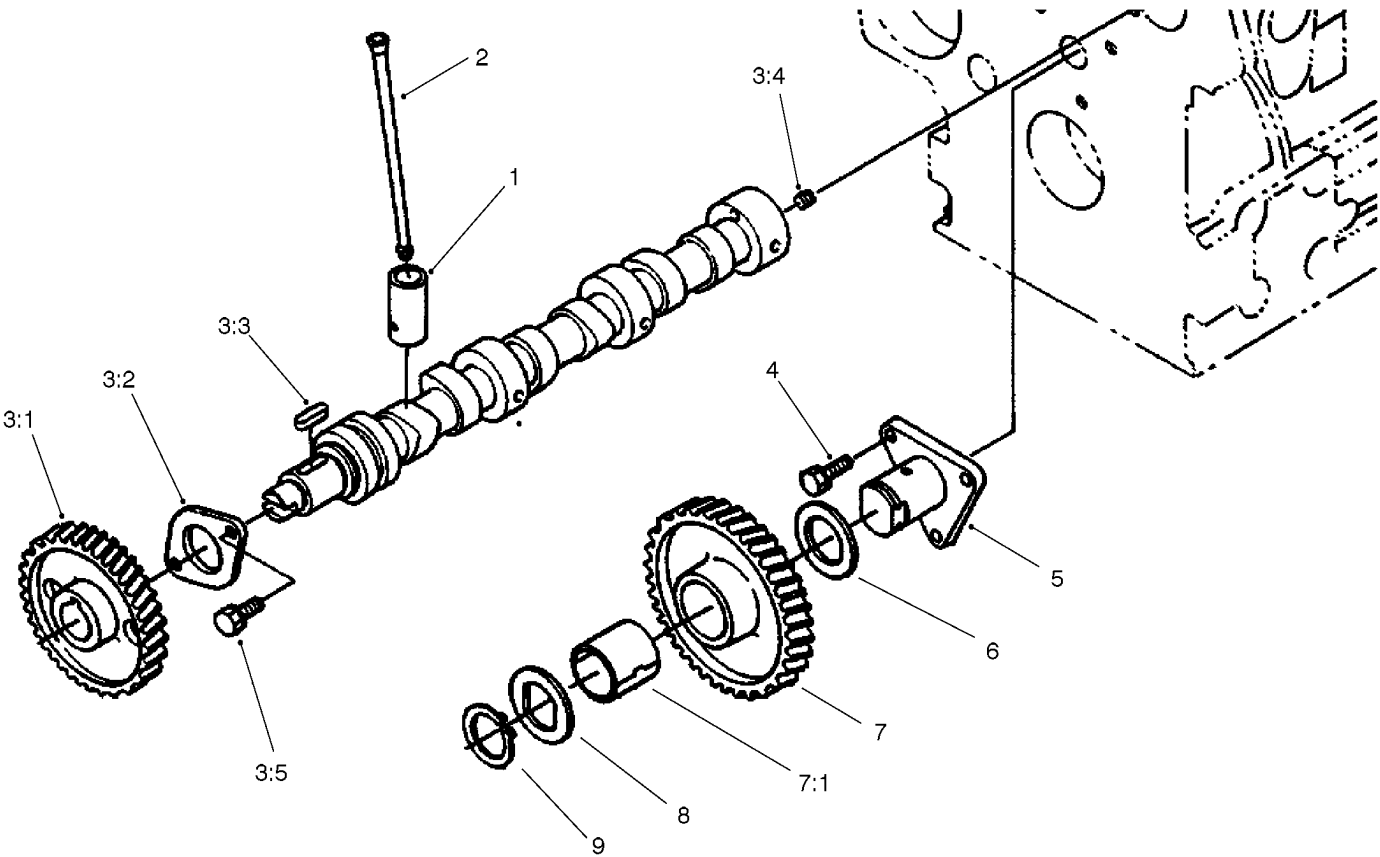 

Camshaft Assembly

Ref	Part No.	Qty.	Description				
1	98-9616	6	Tappet				
2	98-9509	6	Rod-Push				
3	99-8362	1	Camshaft ASM				
3:1	98-9512	1	Gear-Cam				
3:2	98-9510	1	Stopper-Camshaft				
3:3	98-9378	1	Key-Feather				
3:4	98-7449	1	Screw-Set				
3:5	98-9351	2	Bolt				
4	98-7692	3	Bolt				
5	98-9533	1	Shaft-Gear, Idle				
6	98-9535	1	Collar-Gear, Idle				
7	98-9649	1	Idle Gear ASM				
7:1	98-9650	1	Bushing-Gear, Idle				
8	98-9536	1	Collar-Gear, Idle				
9	98-9534	1	Clip-Circular, Idlegear				

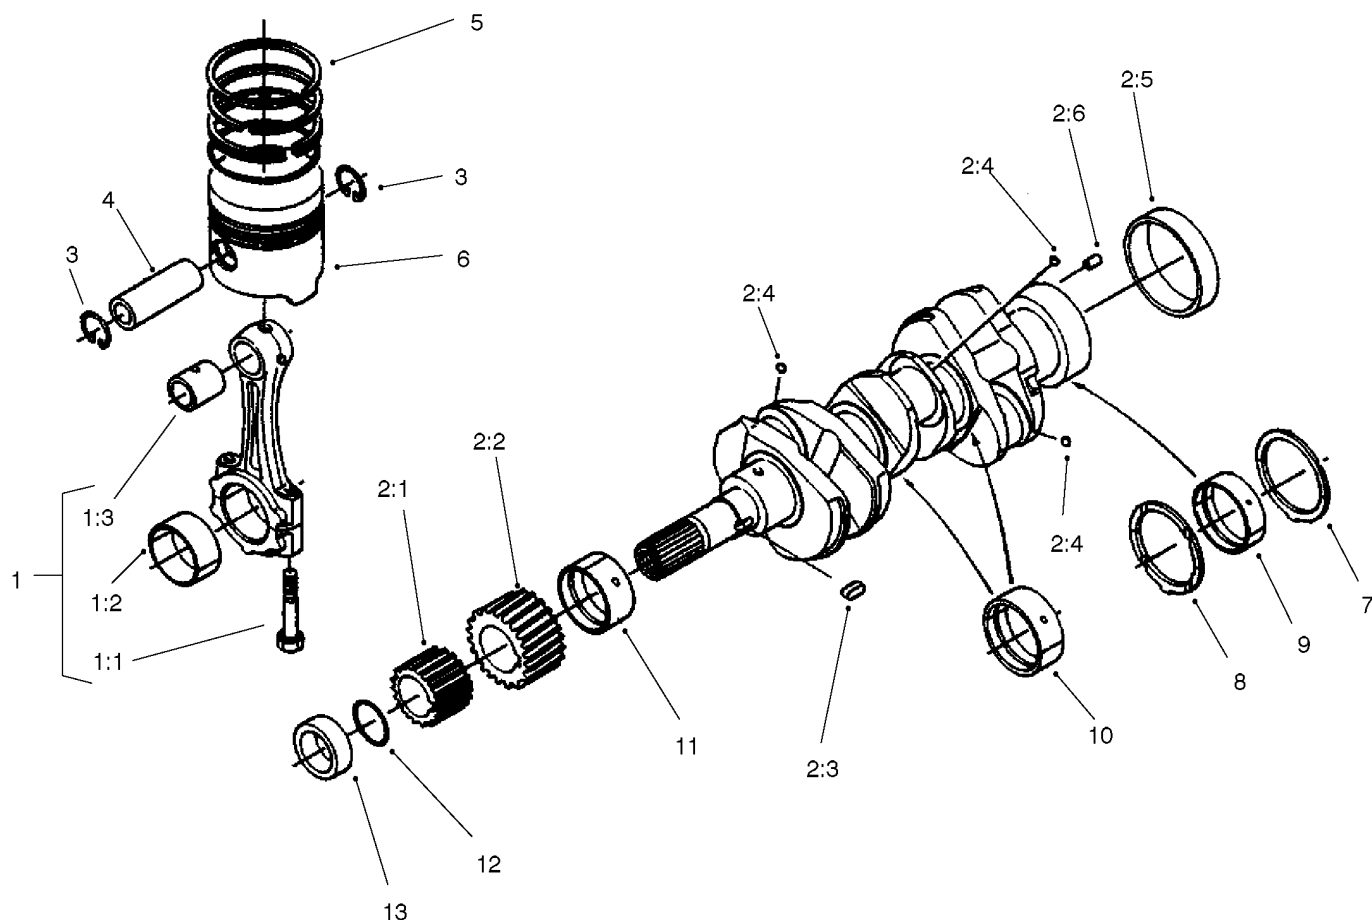 


Piston and Crankshaft Assembly

Ref	Part No.	Qty.	Description
1	98-9552	3	Connecting Rod ASM
1:1	98-9517	6	Bolt-Rod, Connecting
1:2	98-9519	3	Bearing-Rod(-0.2Mm)
1:2	98-9520	3	Bearing-Rod(-0.4Mm)
1:2	98-9553	3	Bearing-Rod (STD)
1:3	98-9515	3	Bushing-Pin, Piston
2	98-9642	1	Crankshaft ASM
2:1	98-9542	1	Gear-Drive, Oil Pump
2:2	98-9532	1	Gear-Crankshaft
2:3	98-9666	1	Key
2:4	98-7473	3	Ball
2:5	98-9522	1	Sleeve-Crankshaft
2:6	98-9375	1	Pin-Straight
3	98-9514	6	Clip-Circular, Pistonpin
4	98-9513	3	Pin-Piston
5	98-9551	3	Piston Ring ASM(STD)
5	98-9619	3	Piston Ring ASM(+0.5Mm)
6	98-9470	3	Piston (+0.5Mm)
6	98-9550	3	Piston-STD
7	98-9413	2	Bearing-Thrust (STD)
7	98-9414	2	Bearing-Thrust(+0.2Mm)
7	98-9415	2	Bearing-Thrust(+0.4Mm)
8	98-9688	2	Bearing-Thrust (STD)
8	98-9689	2	Bearing-Thrust(+0.2Mm)


Ref	Part No.	Qty.	Description
8	98-9690	2	Bearing-Thrust(+0.4Mm)
9	98-9526	1	Bearing-Main(-0.2Mm)
9	98-9527	1	Bearing-Main(-0.4Mm)
9	98-9556	1	Bearing-Main (STD)
10	98-9530	2	Bearing-Main(-0.2Mm)
10	98-9531	2	Bearing-Main(-0.4Mm)
10	98-9555	2	Bearing-Main (STD)
11	98-9528	1	Bearing-Main(-0.2Mm)
11	98-9529	1	Bearing-Main(-0.4Mm)
11	98-9554	1	Bearing-Main (STD)
12	98-9373	1	O-Ring
13	98-9521	1	Collar-Crankshaft

 53

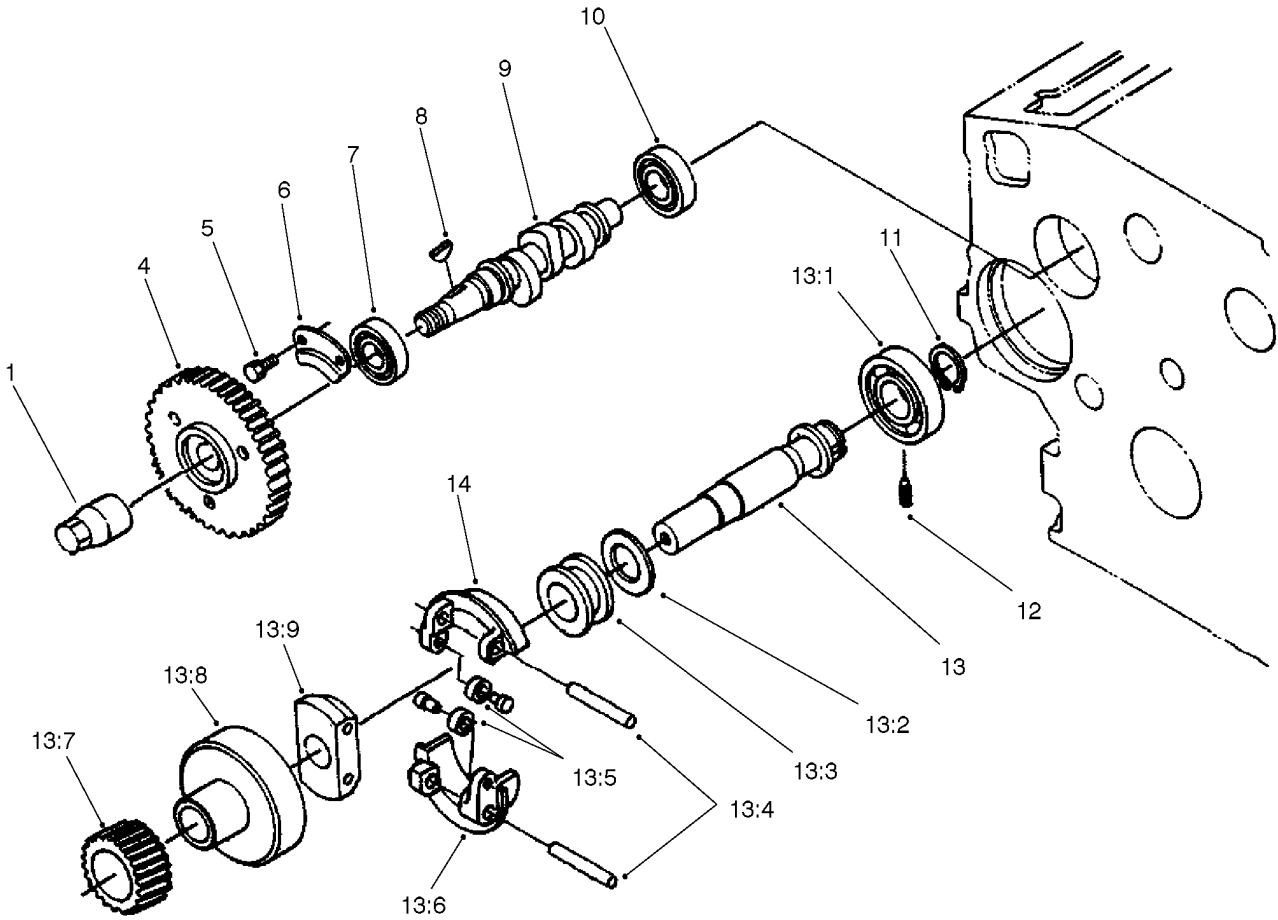

Fuel Camshaft Assembly


Ref	Part No.	Qty.	Description				
1	98-9590	1	Nut-Cap				
4	98-9669	1	Gear-Pump, Injection				
5	98-9350	2	Bolt				
6	98-9511	1	Stopper-Fuel,Camshaft				
7	98-9383	1	Bearing-Ball				
8	98-9595	1	Key-Woodruff				
9	98-9459	1	Camshaft-Fuel				
10	98-9382	1	Bearing-Ball				
11	98-9657	1	Clip-Circular,Governor Shaft				
12	98-9565	1	Screw-Set				
13	98-9644	1	Governor Shaft ASM				
13:1	98-9381	1	Bearing-Ball				
13:2	98-9564	1	Washer-Thrust				
13:3	98-9563	1	Sleeve-Governor				
13:4	98-9560	2	Shaft-Weight,Governor				
13:5	98-9692	2	Roller				
13:6	98-9559	2	Governor Weight ASM				
13:7	98-9673	1	Gear-Governor				
13:8	98-9562	1	Holder-Gear,Governor				
13:9	98-9561	1	Holder-Weight,Governor				
14	98-9559	2	Governor Weight ASM				

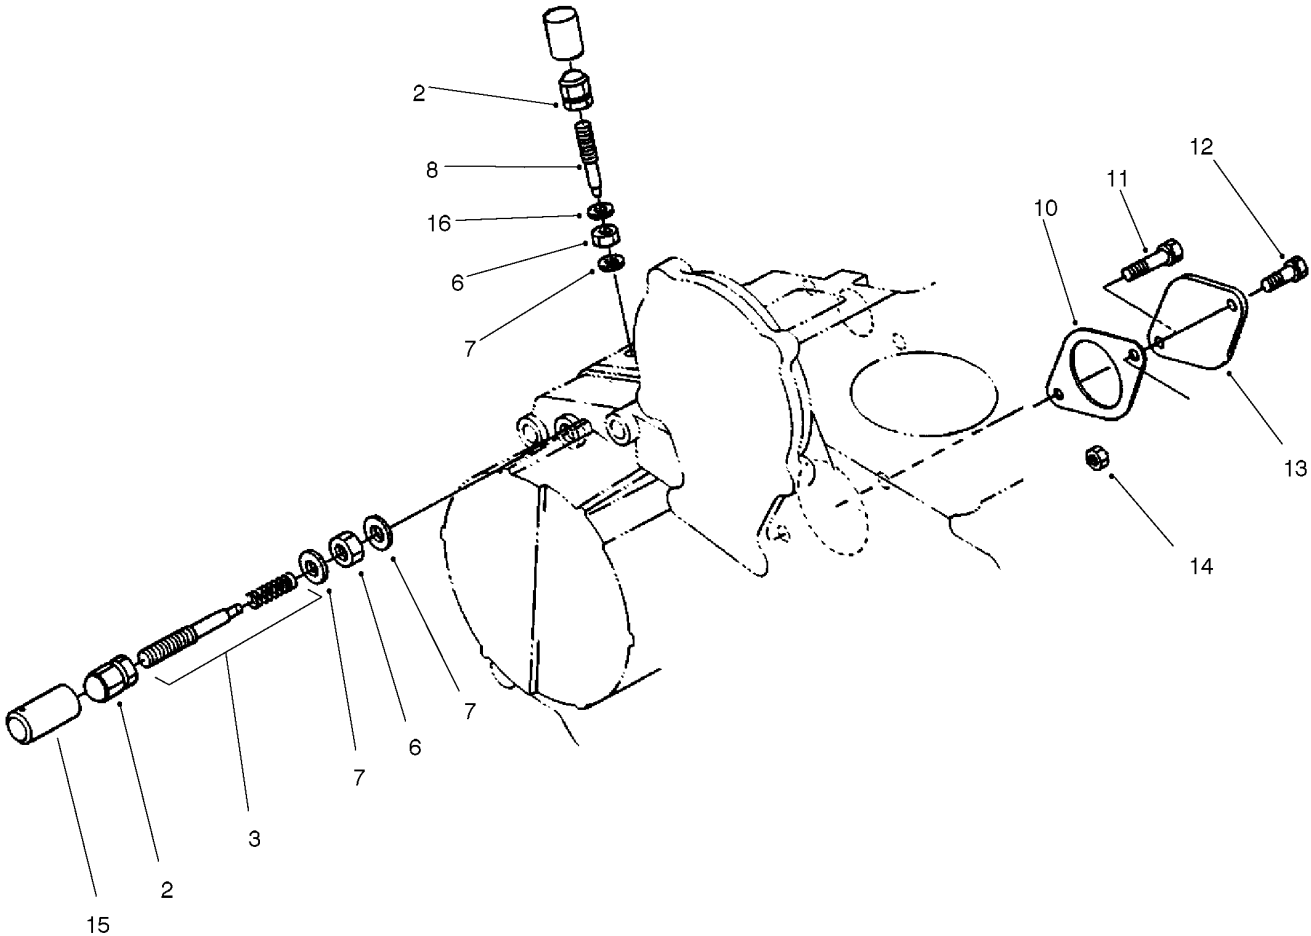 

Engine Stop Lever Assembly


Ref	Part No.	Qty.	Description				
2	98-9441	2	Nut-Cap				
3	104-4802	1	Adjusting Bolt ASM				
4	99-8389	1	Gasket				
6	98-9439	2	Nut				
7	98-7654	1	Gasket				
8	98-9557	1	Bolt-Adjusting				
10	98-9674	1	Packing				
11	98-7645	1	Bolt				
12	98-9359	1	Bolt				
13	98-9640	1	Cover-Pump				
14	98-7534	1	Nut				
15	98-9558	1	Cap				
16	99-8388	1	Gasket				

 56

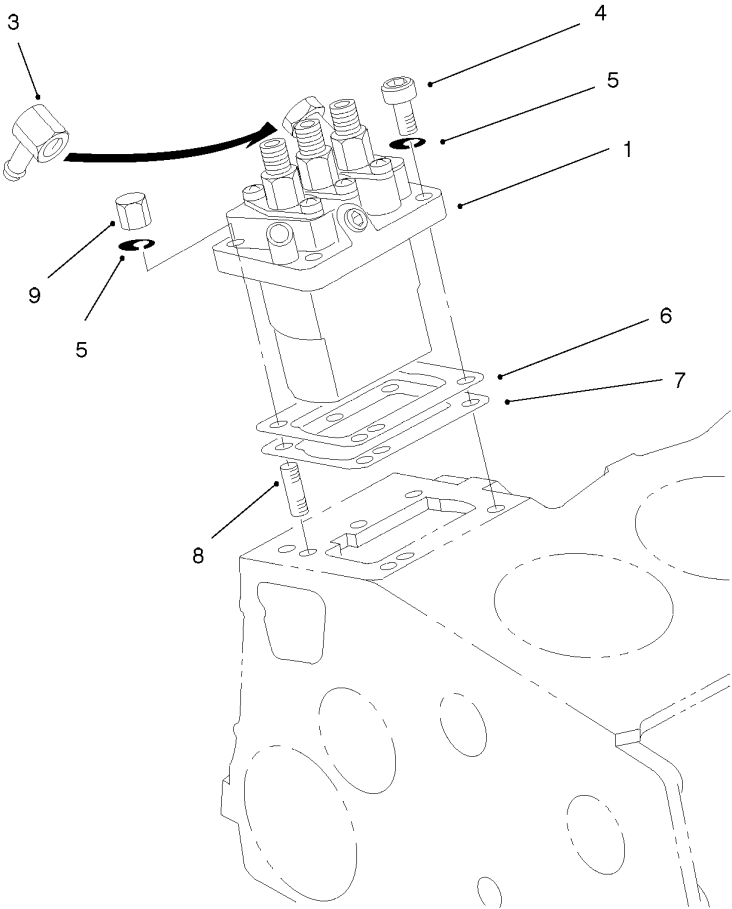

Injection Pump Installation Assembly


Ref	Part No.	Qty.	Description				
1	98-9643	1	Injection Pump ASM				
3	98-9596	1	Joint-Eye				
4	98-9361	2	Bolt-HSH				
5	98-9367	4	Washer-Spring				
6	98-9456	1	Shim-Injection (0.20Mm)				
6	98-9457	1	Shim-Injection(0.25Mm)				
7	98-9458	1	Shim-Injection(0.30Mm)				
8	98-9438	2	Stud				
9	98-9440	2	Nut-Cap				

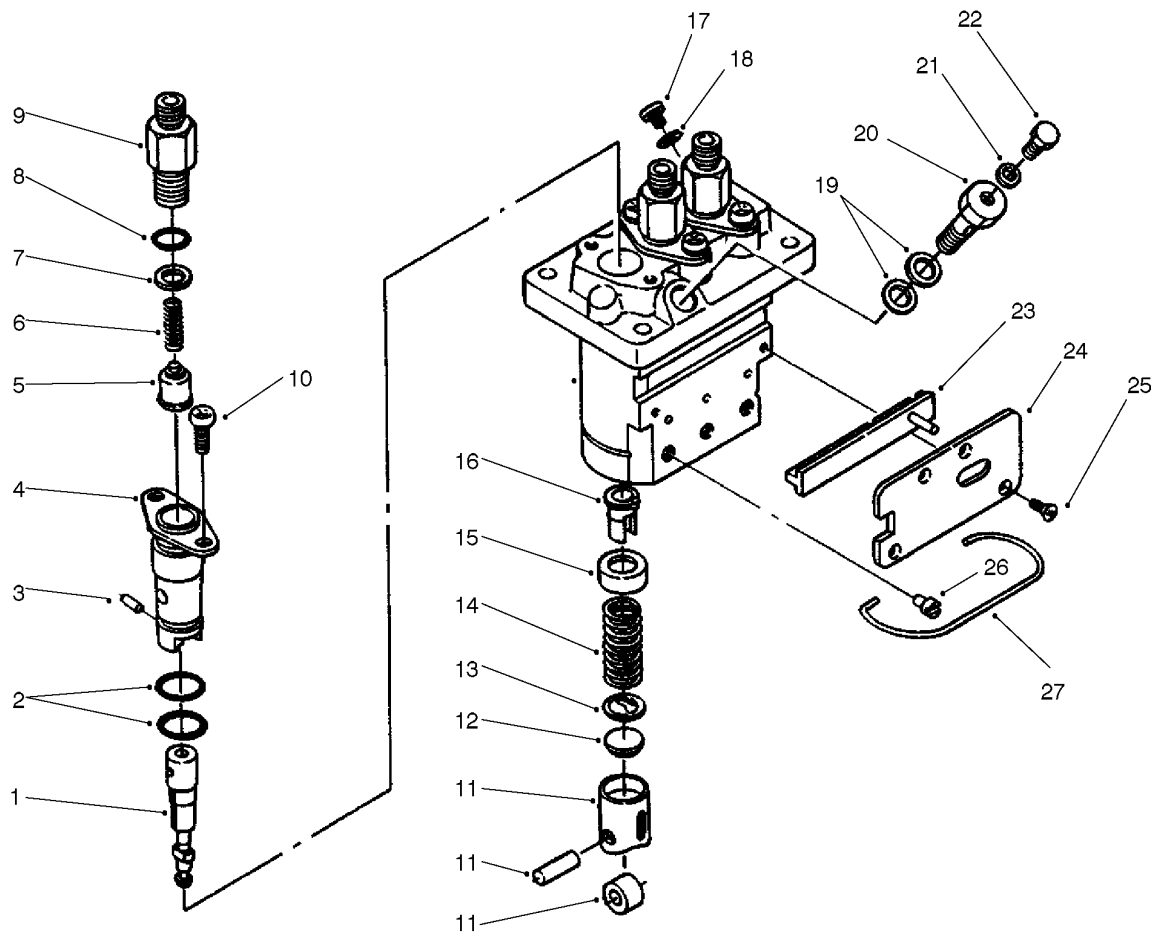 

Injection Pump Assembly No. 98-9643


Ref	Part No.	Qty.	Description
1	98-9462	3	Element-Pump
2	98-9423	6	O-Ring
3	98-9443	3	Pin-Joint
4	98-9434	3	Flange-Sleeve
5	98-9421	3	Valve-Delivery
6	98-9424	3	Spring-Valve, Delivery
7	98-9425	3	Gasket-Valve, Delivery
8	98-9447	3	O-Ring
9	98-9652	3	Holder-Valve, Delivery
10	98-9452	6	Screw
11	98-9422	3	Tappet ASM
12	98-9433	3	Shim
13	98-9429	3	Seat-Spring, Lower
14	98-9428	3	Spring-Plunger
15	98-9427	3	Seat-Spring, Upper
16	98-9432	3	Sleeve-Control
17	98-9466	1	Plug
18	98-9451	1	Gasket
19	98-9445	1	Gasket
20	98-9464	1	Bolt-Joint
21	98-9446	1	Gasket
22	98-9430	1	Screw
23	98-9463	1	Control-Rack
24	98-9465	1	Plate

Ref	Part No.	Qty.	Description
25	98-9442	4	Screw
26	98-9426	3	Pin-Guide, Tappet
27	98-9450	1	Pin-Clamp

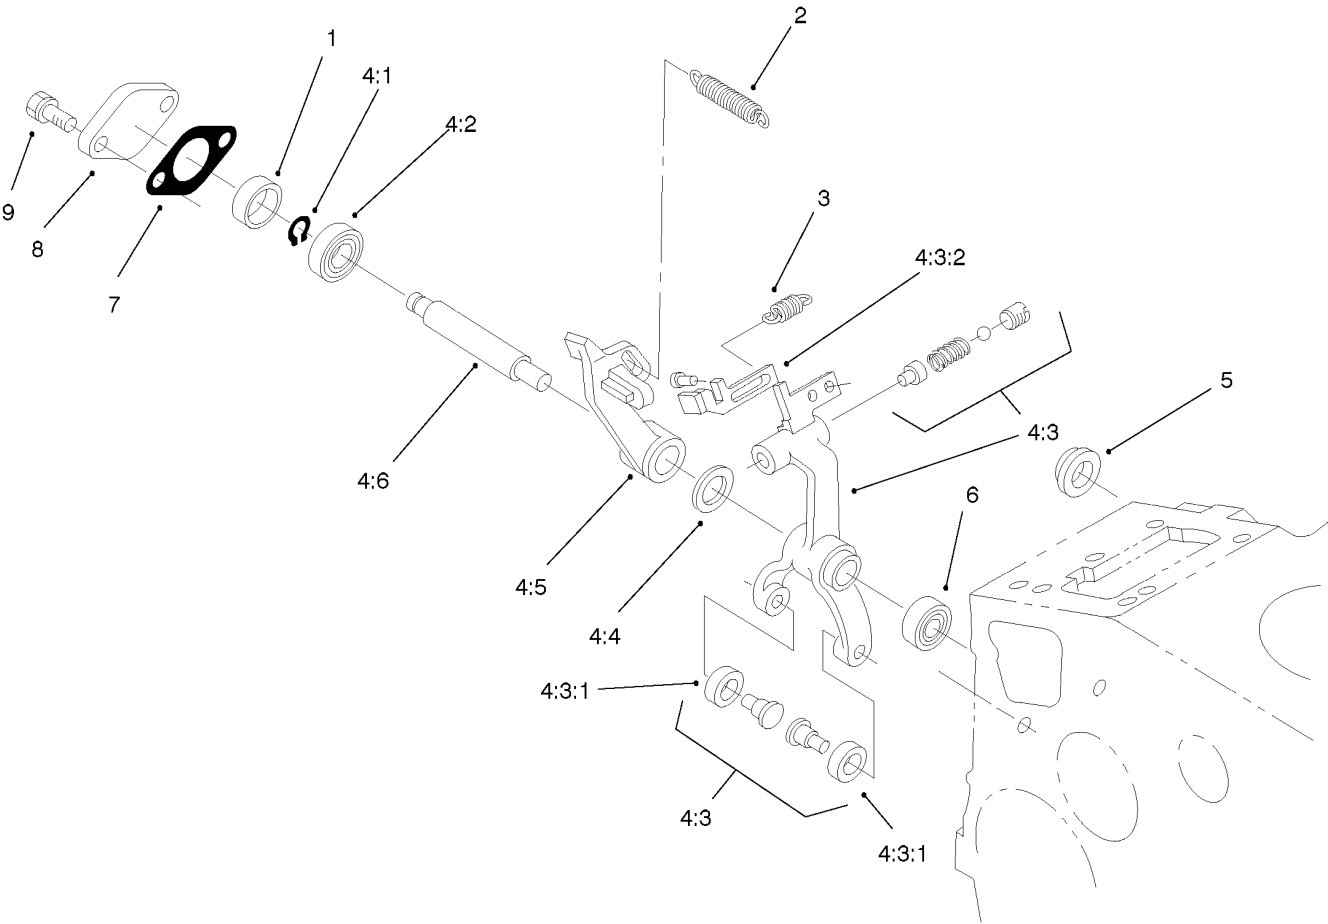 


Governor Assembly

Ref	Part No.	Qty.	Description				
1	98-9567	1	Collar				
2	98-9681	1	Spring-Governor				
3	98-9645	1	Spring-Start				
4	98-9680	1	Fork Lever ASM				
4:1	98-9369	1	Clip-Circular, External				
4:2	98-9570	1	Bearing-Miniaturize				
4:3	99-8380	1	Fork Lever ASM				
4:3:1	98-9692	2	Roller				
4:3:2	98-9660	1	Lever-Thrust				
4:4	98-9593	1	Washer-Plain				
4:5	98-9659	1	Lever-Fork				
4:6	98-9566	1	Shaft-Lever, Fork				
5	98-9568	1	Collar				
6	98-9571	1	Bearing-Miniaturize				
7	98-9682	1	Gasket				
8	98-9569	1	Cover-Shaft, Forklever				
9	98-9351	2	Bolt				

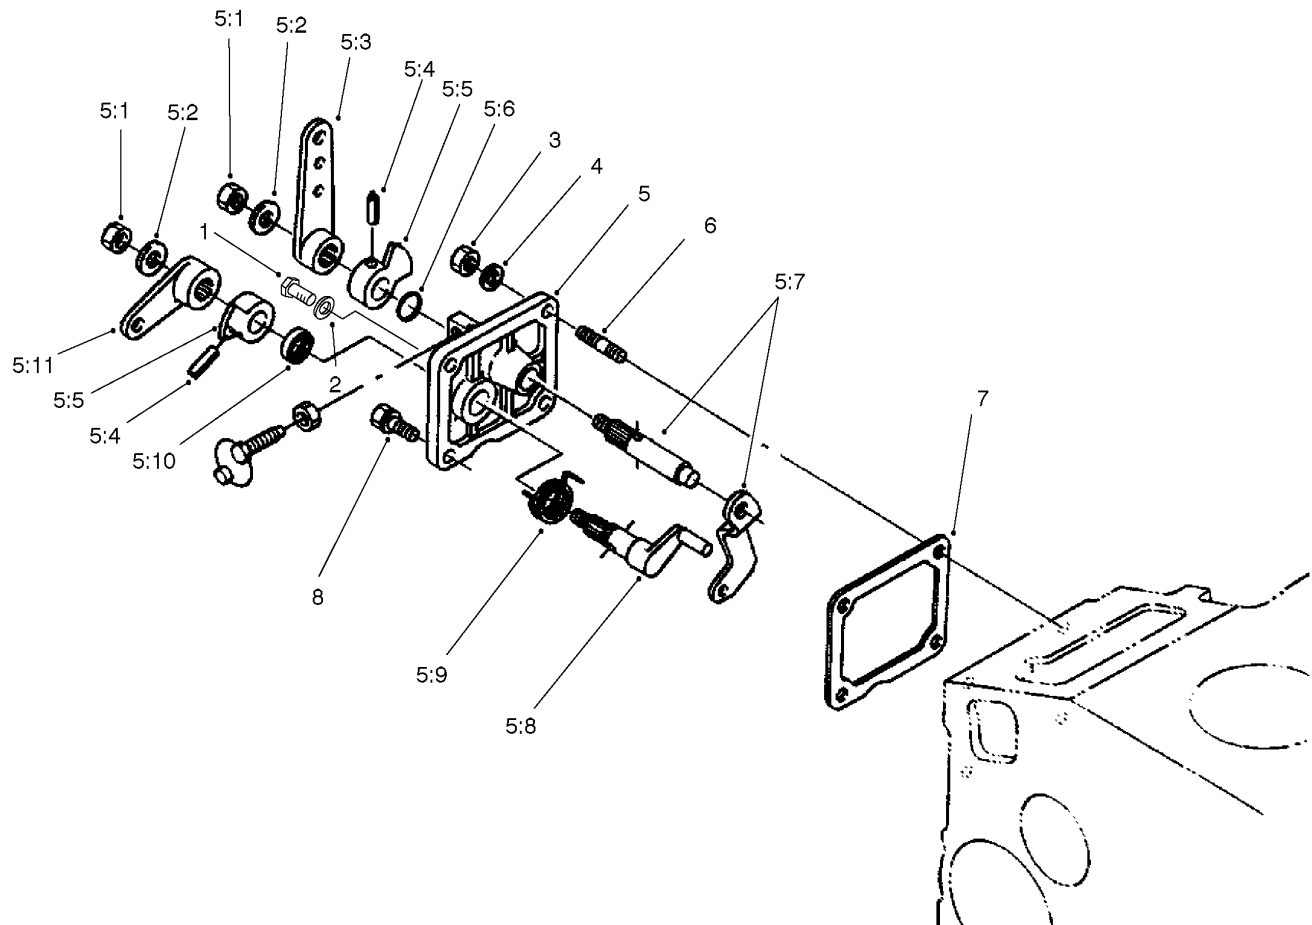 


Speed Control Plate Assembly

Ref	Part No.	Qty.	Description				
1	99-8348	1	Bolt				
2	98-7654	1	Gasket				
3	98-7572	2	Nut				
4	98-9367	2	Washer-Spring				
5	98-9661	1	Control Plate ASM				
5:1	98-9589	2	Nut				
5:2	98-9594	2	Washer-Plain				
5:3	98-9662	1	Lever-Control, Speed				
5:4	98-7602	2	Pin-Spring				
5:5	98-9572	2	Lever-Control, Speed				
5:6	98-9371	1	O-Ring				
5:7	98-9658	1	Governor Lever ASM				
5:8	98-9664	1	Shaft-Lever, Stop				
5:9	98-9472	1	Spring-Return				
5:10	98-7601	1	Seal-Oil				
5:11	98-9663	1	Lever-Stop, Engine				
6	98-9362	2	Stud				
7	98-9637	1	Gasket				
8	98-7692	1	Bolt				

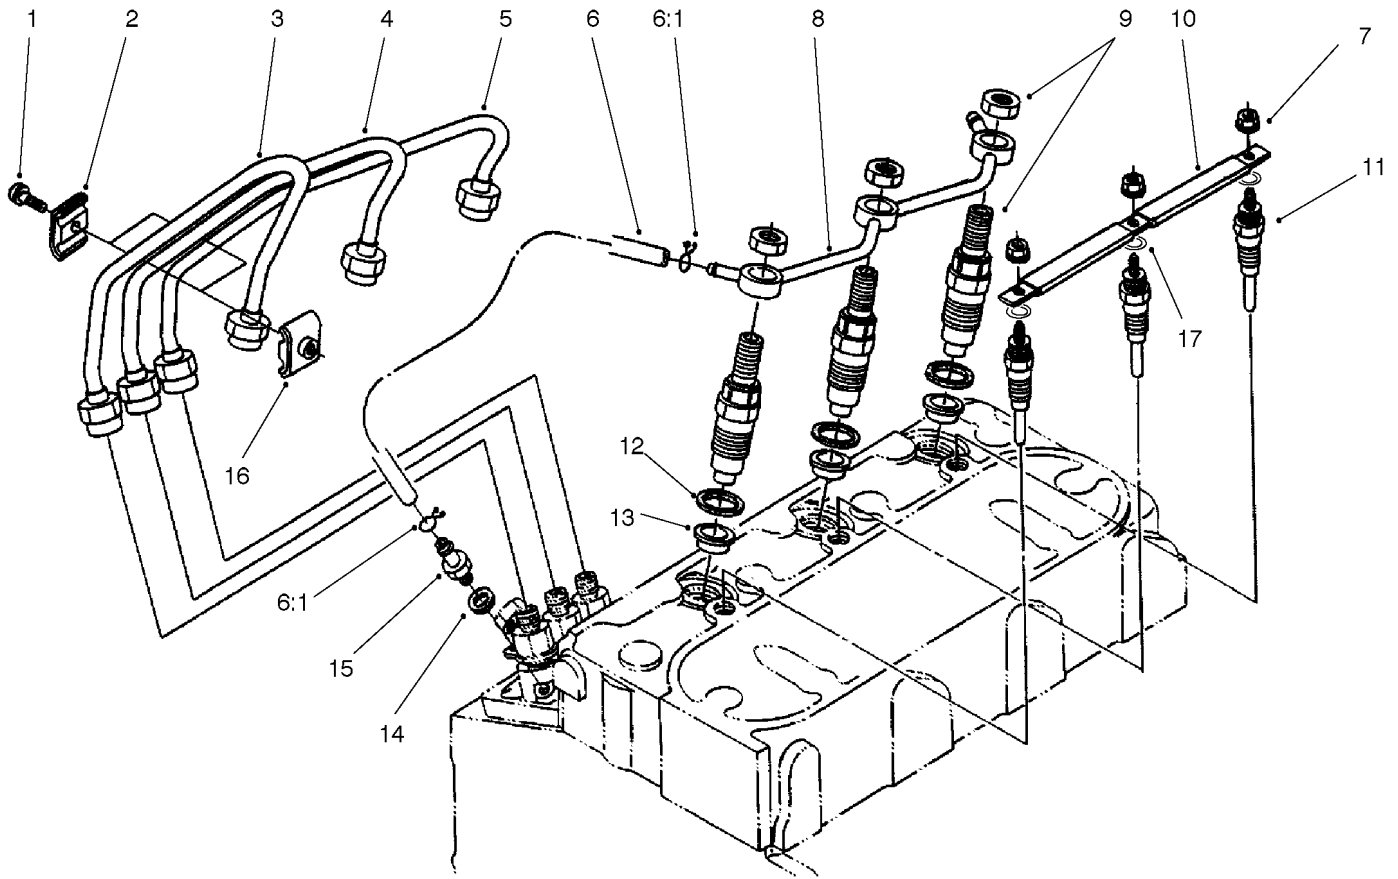 


Nozzle Holder and Glow Plug Assembly

Ref	Part No.	Qty.	Description
1	98-7684	2	Screw W/Washer
2	98-7683	2	Clamp-Pipe
3	98-9622	1	Pipe Injection
4	98-9654	1	Pipe-Injection
5	98-9655	1	Pipe-Injection
6	98-9624	1	Overflow Pipe ASM
6:1	98-7671	2	Clip-Pipe
7	99-8377	3	Nut-Flange
8	98-9621	1	Overflow Pipe ASM
9	98-9468	3	Nozzle Holder ASM
10	98-9631	1	Cord-Plug, Glow
11	98-9623	3	Plug-Glow
12	98-7676	3	Gasket
13	98-7677	3	Seal
14	98-7654	1	Gasket
15	98-9431	1	Screw-Bleeder
16	98-7682	2	Clamp-Pipe
17	99-8378	3	Washer-Plain

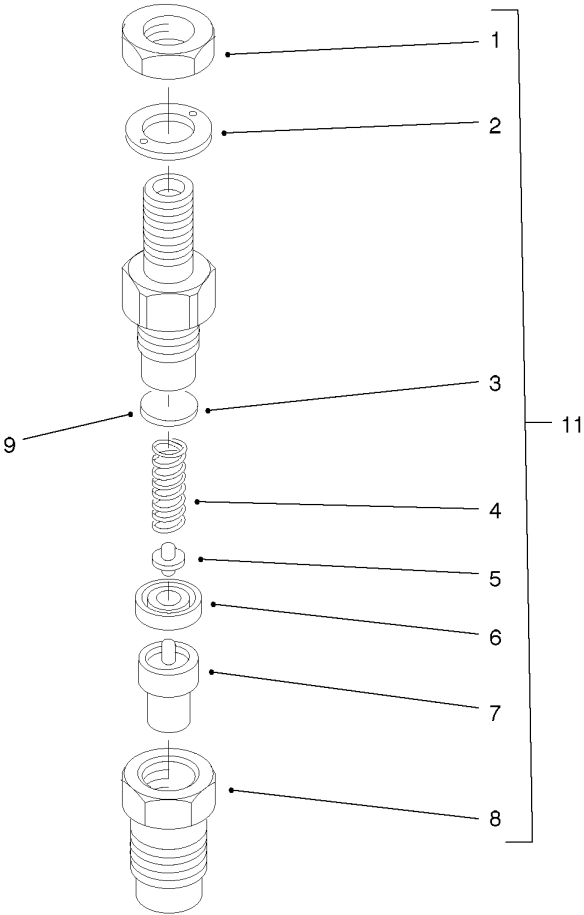 

Nozzle Holder Assembly No. 98-9468


Ref	Part No.	Qty.	Description				
1	99-8301	3	Nut				
2	99-8307	3	Washer-Plain				
3	99-8302	3	Washer-Adjusting				
4	99-8303	3	Spring-Nozzle				
5	99-8305	3	Rod-Push				
6	99-8304	3	Spacer-Distance				
7	99-8308	3	Piece-Nozzle				
8	99-8306	3	Nut-Nozzle				
9	99-8313	3	Washer-Adjust (0.40Mm)				
9	99-8314	3	Washer-Adjust (0.50Mm)				
9	99-8315	3	Washer-Adjust (0.52Mm)				
9	99-8316	3	Washer-Adjust (0.54Mm)				
9	99-8317	3	Washer-Adjust (0.56Mm)				
9	99-8312	3	Washer-Adjust (0.30Mm)				
9	99-8319	3	Washer-Adjust (0.80Mm)				
9	99-8318	3	Washer-Adjust (0.58Mm)				
9	99-8309	3	Adjusting Washer ASM				
9	99-8310	3	Washer-Adjust (0.10Mm)				
9	99-8311	3	Washer-Adjust (0.20Mm)				

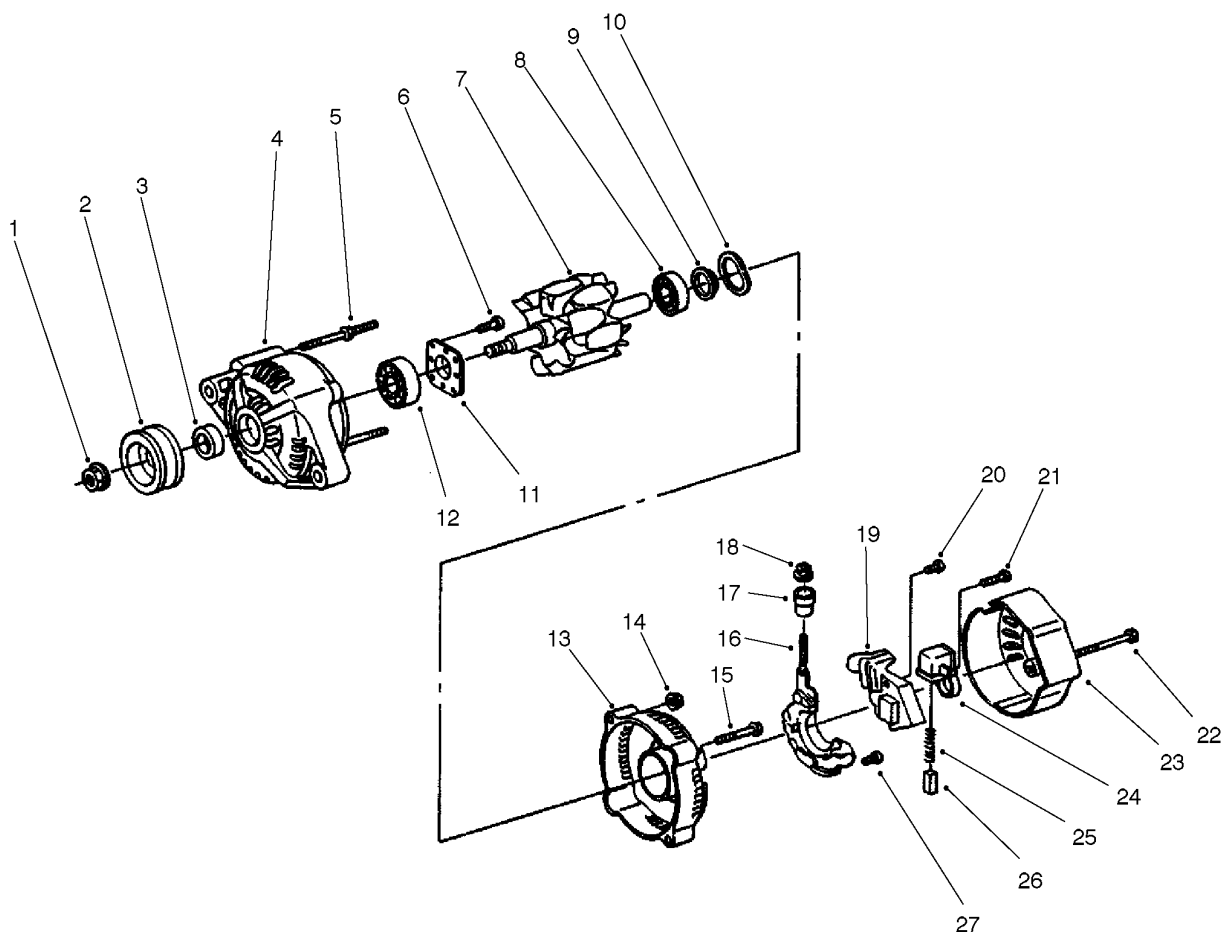 

Alternator Assembly No. 98-9474


Ref	Part No.	Qty.	Description
1	98-7708	1	Nut
2	98-9453	1	Pulley-Dynamo
3	98-7709	1	Collar
4	98-7714	1	Frame-End, Drive
5	98-7717	2	Bolt-Through
6	98-7716	4	Screw-Head, Round
7	98-7710	1	Rotor
8	98-7712	1	Bearing-Ball
9	98-7711	1	Cover-Bearing
10	98-7713	1	Washer-Thrust
11	98-7715	1	Plate-Retainer
12	98-7718	1	Bearing-Ball
13	98-7719	1	Frame-End
14	98-7730	2	Nut
15	98-7731	2	Bolt
16	98-7721	1	Rectifier ASM
17	98-7722	1	Bushing-Insulation
18	98-7732	1	Nut
19	98-7733	1	Regulator ASM
20	98-7726	2	Screw-Head, Round
21	98-7728	1	Screw-Head, Round
22	98-7729	3	Bolt
23	98-7720	1	Cover-End
24	98-7723	1	Holder-Brush

Ref	Part No.	Qty.	Description
25	98-7725	2	Spring-Brush
26	98-7724	2	Brush
27	98-7727	6	Screw-Head, Round

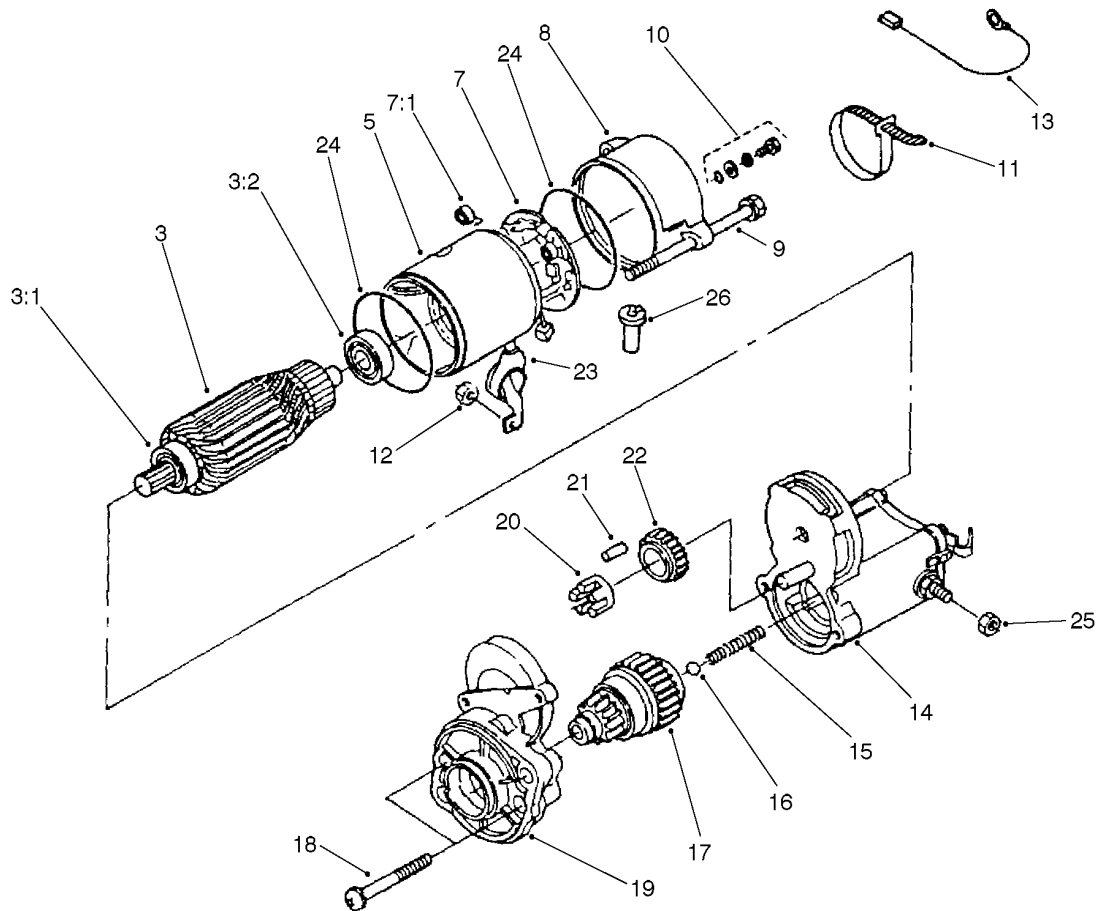 


Starter Assembly No. 98-9705

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
3	98-7742	1	Armature ASM	26	98-7759	1	Pipe-Drain
3:1	98-7743	1	Bearing				
3:2	98-7744	1	Bearing				
5	98-7741	1	Yoke ASM				
7	98-7749	1	Brush Holder ASM				
7:1	98-7750	4	Spring-Brush				
8	99-8370	1	Frame-End				
9	98-9549	2	Bolt				
10	98-7758	2	Bolt ASM				
11	98-9712	1	Band-Cover				
12	99-8371	1	Nut-Hex				
13	98-9711	1	Cord-Solenoid, Stop				
14	99-8372	1	Magnetic Switch ASM				
15	98-7754	1	Spring				
16	98-7755	1	Ball				
17	99-8373	1	Clutch-Running, Over				
18	98-7756	2	Bolt				
19	99-8374	1	Frame-End, Drive				
20	98-7752	1	Retainer				
21	98-7753	5	Roller				
22	98-7751	1	Gear				
23	99-8375	1	Cover				
24	98-7757	2	O-Ring				
25	99-8376	1	Nut-Hex				

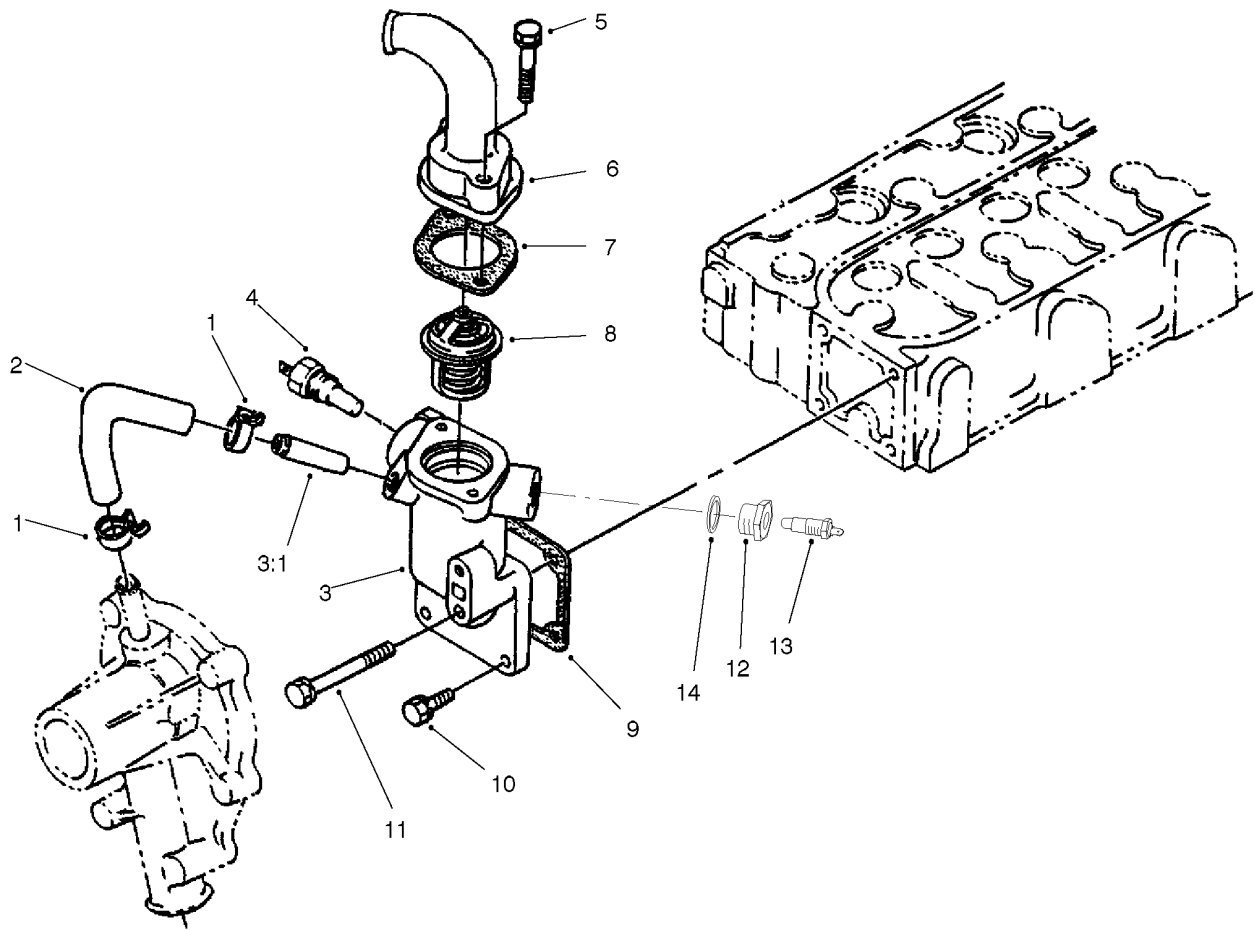 

Water Flange and Thermostat Assembly


Ref	Part No.	Qty.	Description				
1	98-9579	2	Band-Pipe				
2	98-9578	1	Pipe-Return, Water				
3	98-9713	1	Water Flange ASM				
3:1	98-9580	1	Pipe-Return, Water				
4	98-9719	1	Thermoswitch				
5	98-7777	2	Bolt				
6	104-4804	1	Outlet-Water				
7	98-7776	1	Gasket				
8	98-7778	1	Thermostat ASM				
9	98-9638	1	Gasket-Flange, Water				
10	98-7692	3	Bolt				
11	98-9356	1	Bolt				
12	99-3581	1	Adapter				
13	99-3582	1	Thermoswitch				
14	99-3583	1	Packing				

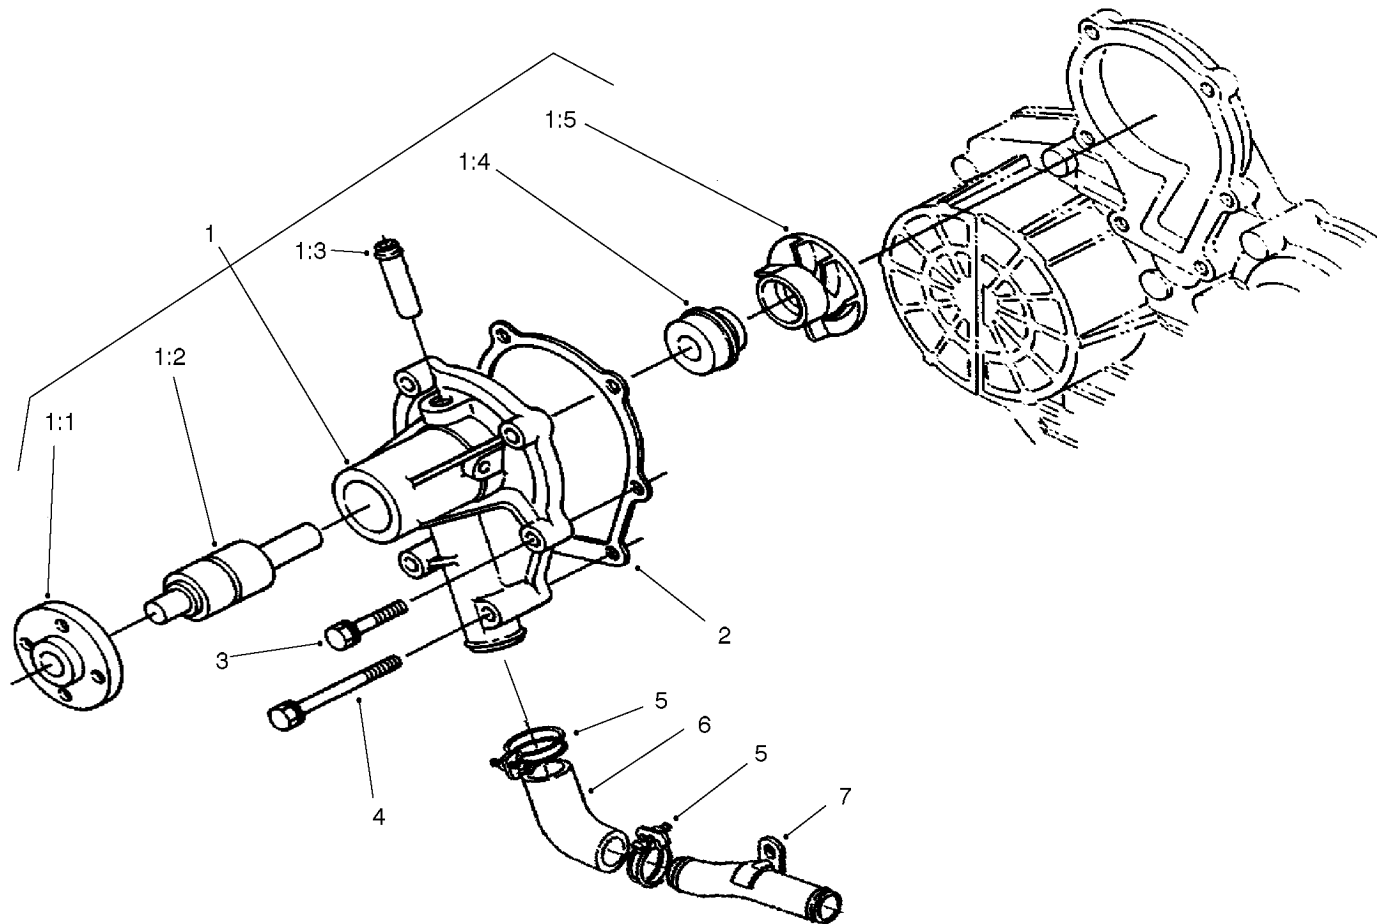 

Water Pump Assembly


Ref	Part No.	Qty.	Description				
1	99-3455	1	Water Pump ASM				
1:1	99-3516	1	Flange-Pump, Water				
1:2	99-3517	1	Bearing-Pump, Water				
1:3	98-9577	1	Pipe-Return, Water				
1:4	99-3518	1	Water Pump Seal ASM				
1:5	99-3519	1	Impeller-Pump, Water				
2	99-3454	1	Gasket-Pump, Water				
3	33103-030	1	Screw-HHF				
4	98-9357	4	Bolt				
5	98-9717	2	Clamp				
6	98-9574	1	Pipe-Water				
7	99-8379	1	Pipe-Water				



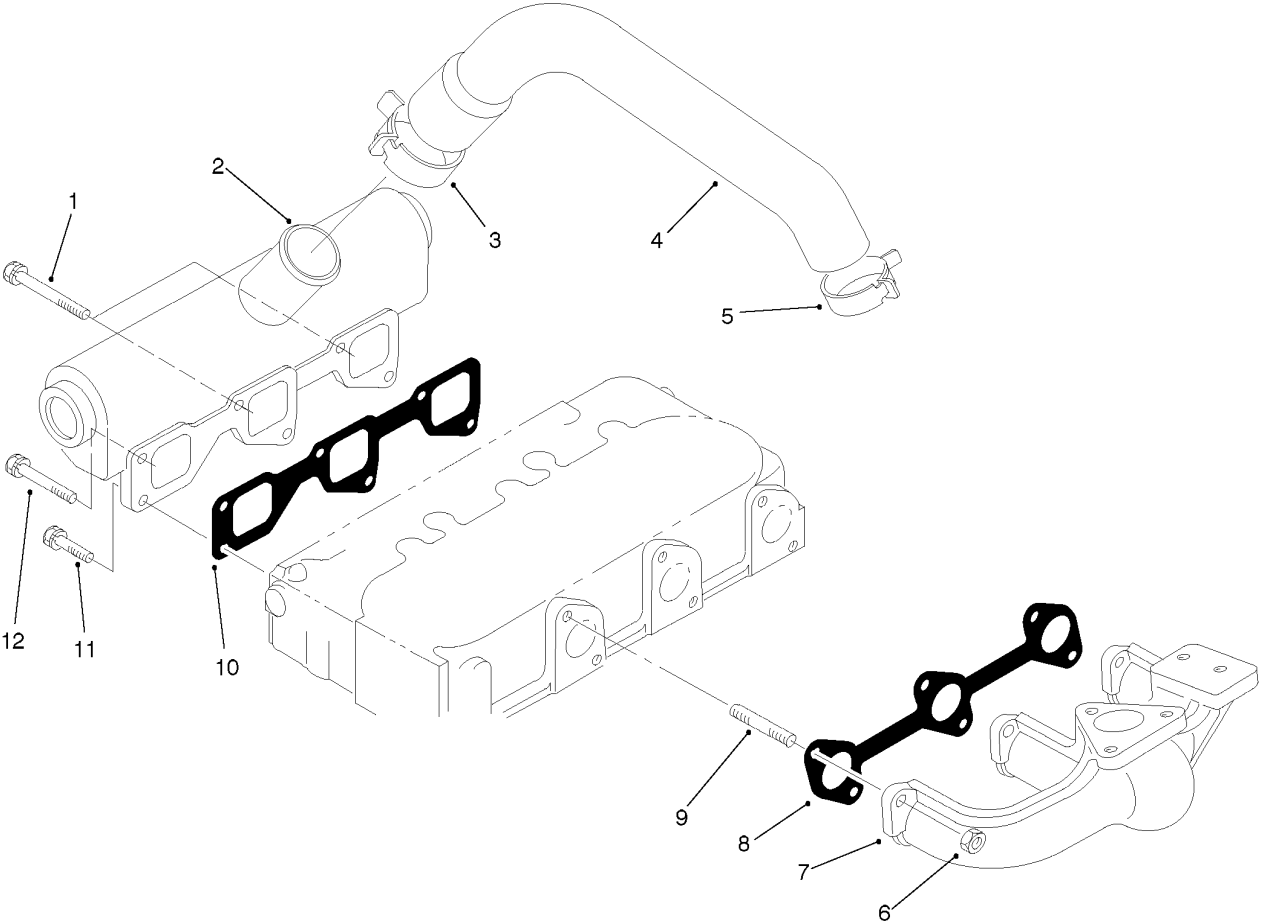 

Exhaust Manifold and Gasket Assembly

Ref	Part No.	Qty.	Description				
1	99-8320	2	Bolt				
2	99-8321	1	Manifold-Inlet				
3	99-8322	1	Band-Pipe				
4	99-8323	1	Hose-Inlet				
5	99-8324	1	Band-Pipe				
6	98-9665	6	Nut				
7	99-8326	1	Manifold-Exhaust				
8	99-8327	1	Gasket-Manifold,Exhaust				
9	98-9588	6	Stud				
10	99-8329	1	Gasket-Manifold,Intake				
11	98-7568	3	Bolt				
12	98-7496	1	Bolt				

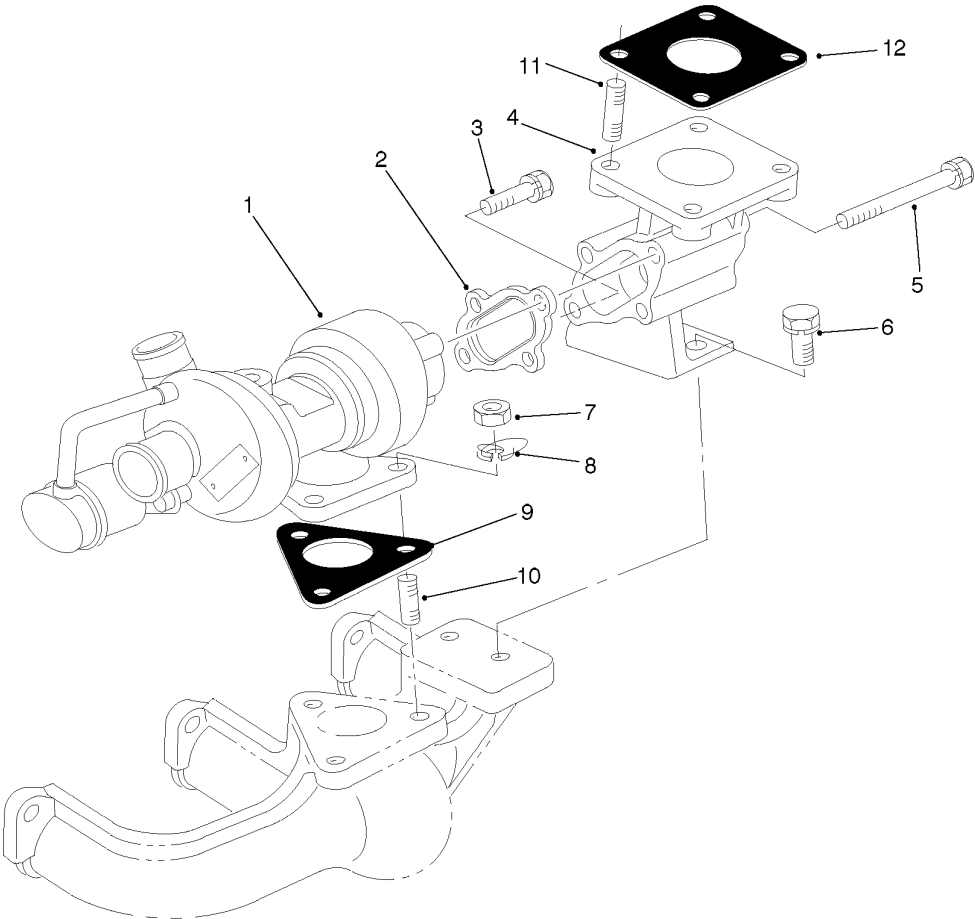 

Turbo Charge Assembly

Ref	Part No.	Qty.	Description				
1	99-8332	1	Turbo Charger ASM				
2	99-8333	1	Gasket				
3	99-8334	1	Bolt				
4	99-8335	1	Flange-Muffler				
5	99-8336	3	Bolt				
6	98-7610	2	Bolt				
7	98-7534	3	Nut				
8	99-8339	3	Washer-Spring				
9	99-8340	1	Gasket				
10	99-8341	3	Stud				
11	99-8342	4	Stud				
12	99-8343	1	Gasket-Muffler				

