



Groundsmaster® 3500-D

Model No. 30821 - 220000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Platform Assembly	 4	Scissor Assembly	 38
Front Wheel and Brake Assembly	 5	Deck Motor Assembly	 39
Hydraulic Wheel Motor Assembly No. 75-9990	 6	Battery Assembly	 40
Hydraulic Motor Assembly No. 95-8693	 7	Parking Brake Assembly	 41
Brake Assembly No. 104-7705	 8	Crankcase Assembly	 42
Steering Column Assembly	 9	Oil Pan Assembly	 43
Steering Control Assembly No. 104-0474	 10	Cylinder Head Assembly	 44
Rear Fork and Tire Assembly	 11	Grease and Oil Filter Assembly	 45
Hydraulic Cylinder Assembly No. 94-8141	 12	Filter, Oil Cooler, and Pipe Assembly	 46
Hydraulic Motor Assembly No. 95-8694	 13	Head Cover Assembly	 47
Control Panel Assembly	 14	Dipstick Assembly	 48
Front Platform Assembly	 15	Main Bearing Case Assembly	 49
Traction Pedal Assembly	 16	Camshaft Assembly	 50
Control Valve Installation Assembly	 17	Piston and Crankshaft Assembly	 51
Control Valve Assembly No. 95-8581	 18	Flywheel Assembly	 52
Rear Liftarm Assembly	 19	Fuel Camshaft Assembly	 53
Hydraulic Cylinder Assembly No. 95-8978	 21	Engine Stop Lever Assembly	 54
Neutral Arm Assembly	 22	Stop Solenoid and Fuel Pump Assembly	 55
Engine Assembly	 23	Injection Pump Installation Assembly	 56
Air Cleaner and Muffler Assembly	 24	Injection Pump Assembly No. 98-9643	 57
Radiator Assembly	 25	Governor Assembly	 58
Hood and Screen Assembly	 26	Speed Control Plate Assembly	 59
Fuel System Assembly	 27	Nozzle Holder and Glow Plug Assembly	 60
Water / Fuel Filter Assembly No. 98-9305	 28	Nozzle Holder Assembly No. 98-9468	 61
Manifold Block Installation Assembly	 29	Alternator and Pulley Assembly	 62
Manifold Block Assembly No. 104-4876	 30	Alternator Assembly No. 98-9474	 63
Hydraulic Tank Assembly	 31	Starter Mount Assembly	 64
Hydrostat Assembly	 32	Starter Assembly No. 98-9705	 65
Piston Pump Assembly No. 104-4832	 34	Water Flange and Thermostat Assembly	 66
Hydraulic Pump Assembly No. 100-1646	 35	Water Pump Assembly	 67
Carrier Assembly	 36	Valve and Rocker Arm Assembly	 68
		Exhaust Manifold and Gasket Assembly	 69
		Turbo Charge Assembly	 70

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

Footnotes


- ❶** Not serviced separately
- ❷** * Not Illustrated

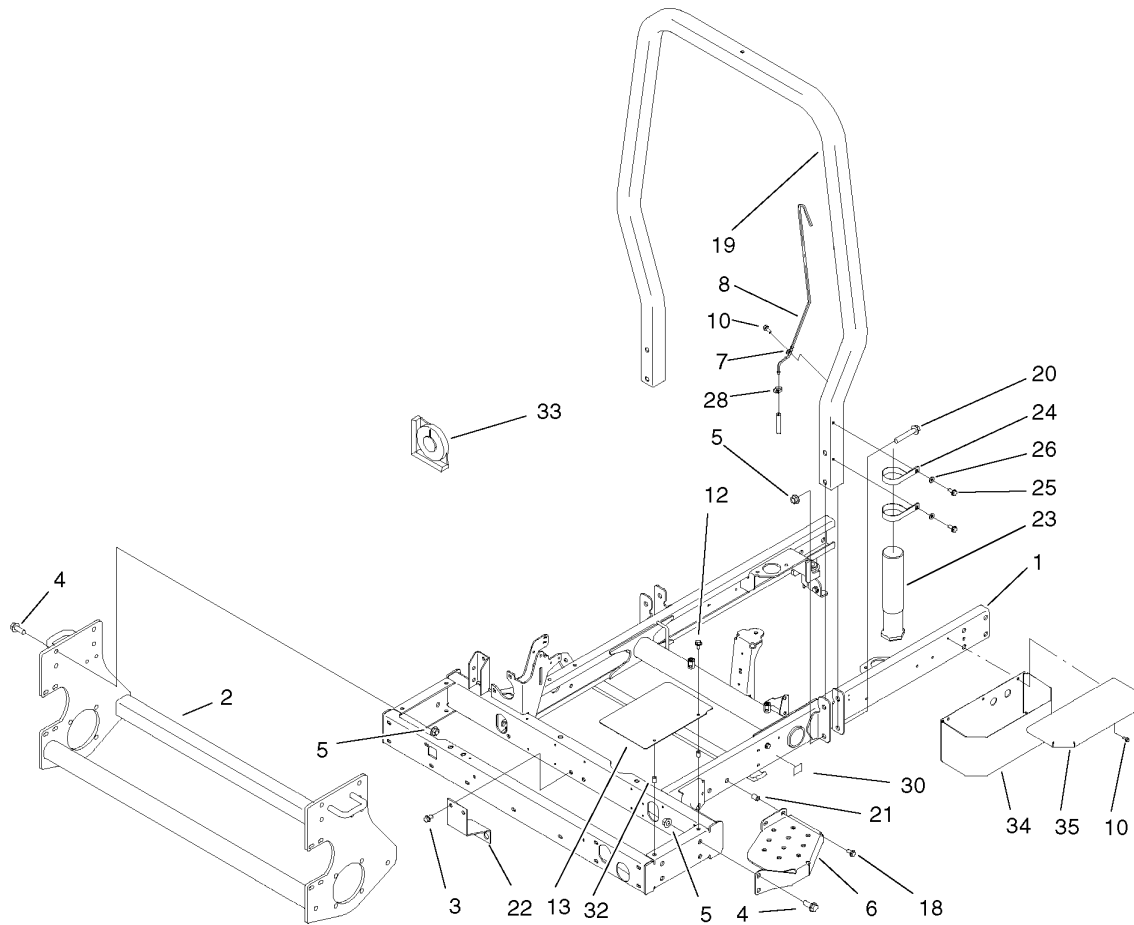

Frame and Platform Assembly

Ref	Part No.	Qty.	Description
1	99-3610-03	1	Frame
2	95-8568-03	1	Frame-Lower
3	3274-80	2	Screw-HH
4	3234-38	8	Screw-HHF
5	32128-49	12	Nut-HHF
6	99-3375-03	1	Step
7	2412-72	3	Clip-Closed, Insulated
8	95-8615	1	Tube-Breather
10	32144-10	11	Screw-HWH
12	3234-4	2	Screw-HHF
13	104-0468-01	1	Cover-Frame
18	3234-5	2	Screw
19	99-3350-03	1	Tube-ROPS
20	3234-40	4	Screw-Hfh
21	32148-8	2	Insert-Threaded
22	95-8598-03	1	Bracket-Bulkhead, Scissor
23	74-0720	1	Tube-Manual
24	2412-133	2	R-Clamp
25	32144-70	2	Screw-HH
26	3256-23	2	Washer-Flat
28	2412-108	1	Clamp-Worm
30	105-4674	1	Decal-Noise, Intl
32	32148-6	2	Nut-Insert
33	99-3503	1	Indicator-Angle


Ref	Part No.	Qty.	Description
34	104-4634-03	1	Toolbox ASM
35	104-4633-03	1	Toolbox Cover ASM

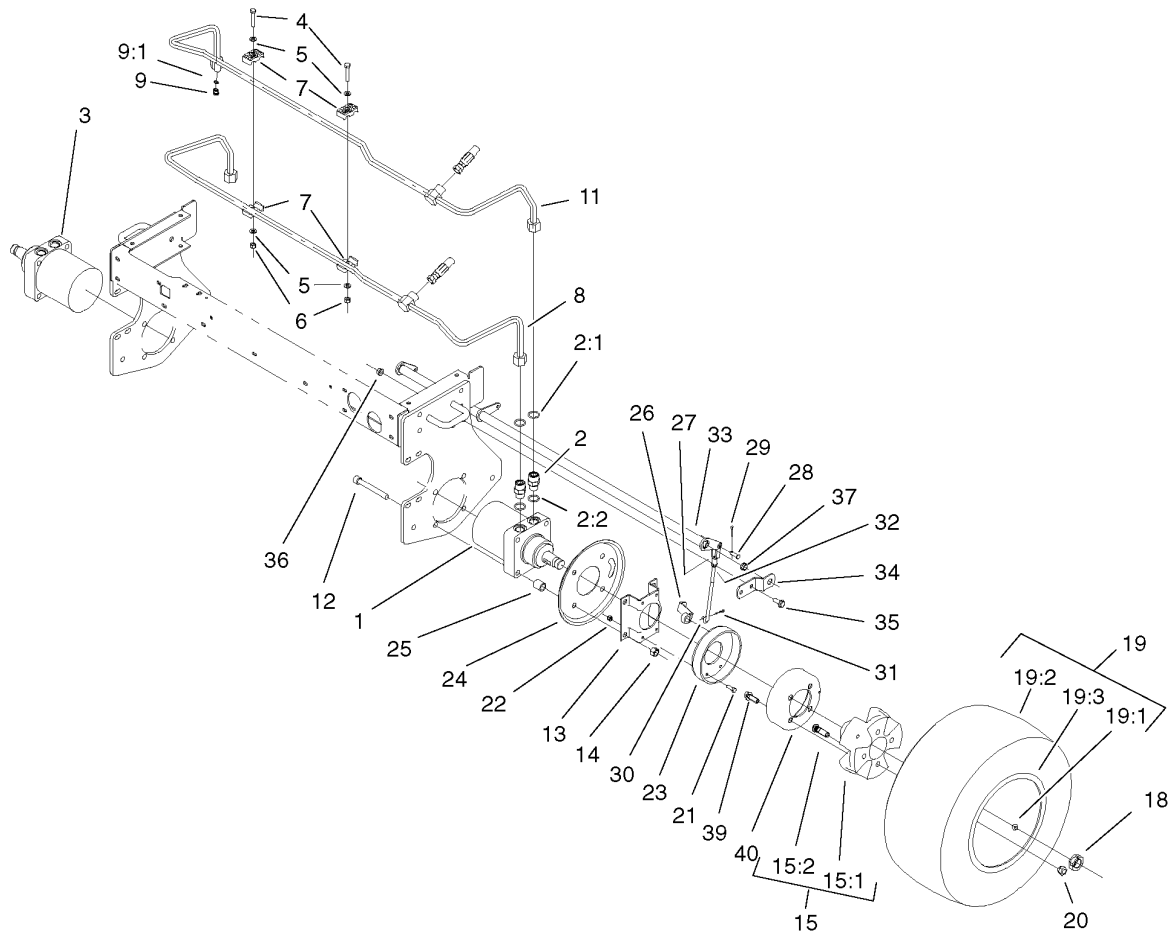 

Front Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
1	75-9990	1	HYD Motor ASM
2	340-7	4	Adapter
2:1	237-65	1	O-Ring
2:2	237-80	1	O-Ring
3	95-8693	1	HYD Motor ASM
4	322-9	2	Screw-HH
5	3256-23	4	Washer-Flat
6	3296-29	2	Nut-Lock, NI
7	56-7971	4	Clamp-Tube
8	95-8783	1	Tube ASM
9	353-990	1	Plug
9:1	237-78	1	O-Ring
11	95-8784	1	Tube ASM
12	3274-99	8	Screw-HSH
13	84-2000-03	2	Bracket-Brake
14	3296-23	8	Nut-Lock, NI
15		2	Wheel Hub / Stud ASM
15:1	104-0462-03	1	Hub-Wheel
15:2	10-6830	4	Stud-Type, Drive
18	26-3790	2	Nut-Lock
19		2	Tire & Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	104-0451	1	Tire
19:3	104-0452	1	Rim-Wheel


Ref	Part No.	Qty.	Description
20	242-50	8	Nut-Lug
21	321-5	8	Screw-HH
22	3296-42	8	Nut-Lock, NI
23	104-7705	2	Brake ASM
24	104-0485-03	2	Shield-Wheel
25	92-1715	8	Spacer
26	93-6850	2	Lever-Brake
27	282-2	2	Yoke
28	283-1	2	Pin-Yoke
29	3272-10	2	Pin-Cotter
30	104-4627	2	Rod-Adjusting
31	3272-6	2	Pin-Cotter
32	3220-2	2	Nut
33	104-4625-03	1	Brake Pivot Shaft ASM
34	95-8683	2	Bracket-Pivot, Brake
35	3234-11	4	Screw-HHF
36	32128-43	4	Nut-Flange
37	256-156	2	Bushing-Flange
39	3274-105	8	Screw-HSBH
40	104-4809	2	Drum-Brake

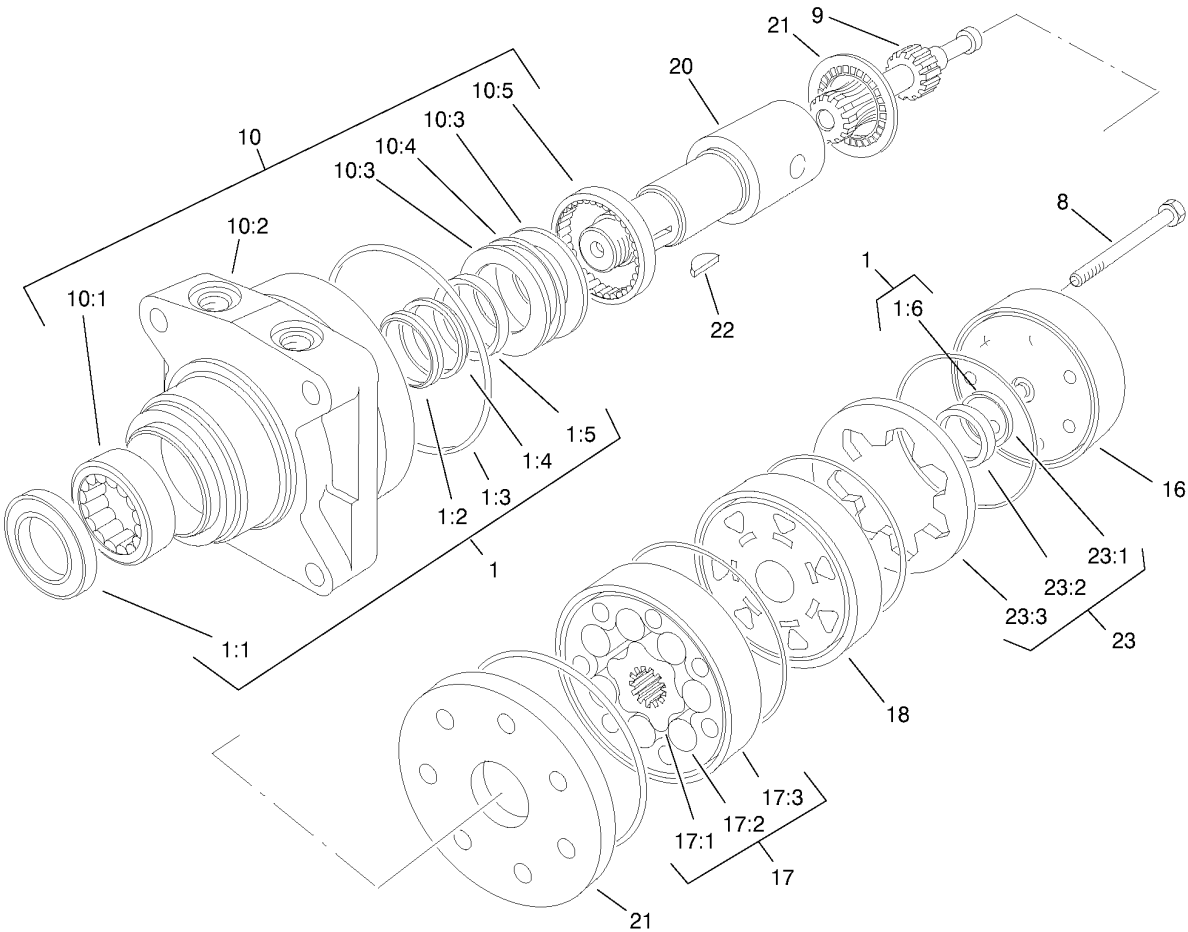 

Hydraulic Wheel Motor Assembly No. 75-9990

Ref	Part No.	Qty.	Description
1	76-0800	1	Kit-Seal
1:1		1	Seal-Dirt & Water
1:2		1	Washer-Back-Up
1:3		5	Ring-Seal
1:4		1	Washer-Back-Up
1:5		1	Seal-Inner
1:6		1	Commutator
2		5	Seal Rings
3		1	Ring-Commutator,Bonded
4		1	Seal-Inner
5		1	Washer-Backup
6		1	Washer-Backup
7		1	Seal-Dirt & Water
8	76-1010	7	Screw
9	76-0960	1	Link-Drive
10	76-0810	1	Housing ASM
10:1		1	Bearing
10:2		1	Housing
10:3		2	Washer-Thrust
10:4		1	Bearing-Thrust
10:5		1	Bearing
11		1	Housing
12		1	Bearing
13		1	Thrust Bearing


Ref	Part No.	Qty.	Description
14		1	Bearing
15		2	Thrust Washer
16	76-0940	1	End Cover ASM
17	76-0970	1	Set-Rotor
17:1		1	Rotor
17:2		7	Vane
17:3		1	Stator
18	76-0840	1	Manifold
19	76-0850	1	Bearing-Thrust
20	76-0860	1	Shaft-Coupling
21	76-0870	1	Plate-Wear
22	3257-42	1	Key-Woodruff
23	76-0880	1	Commutator ASM
23:1		1	Seal-Commutator
23:2		1	Commutator
23:3		1	Ring-Commutator

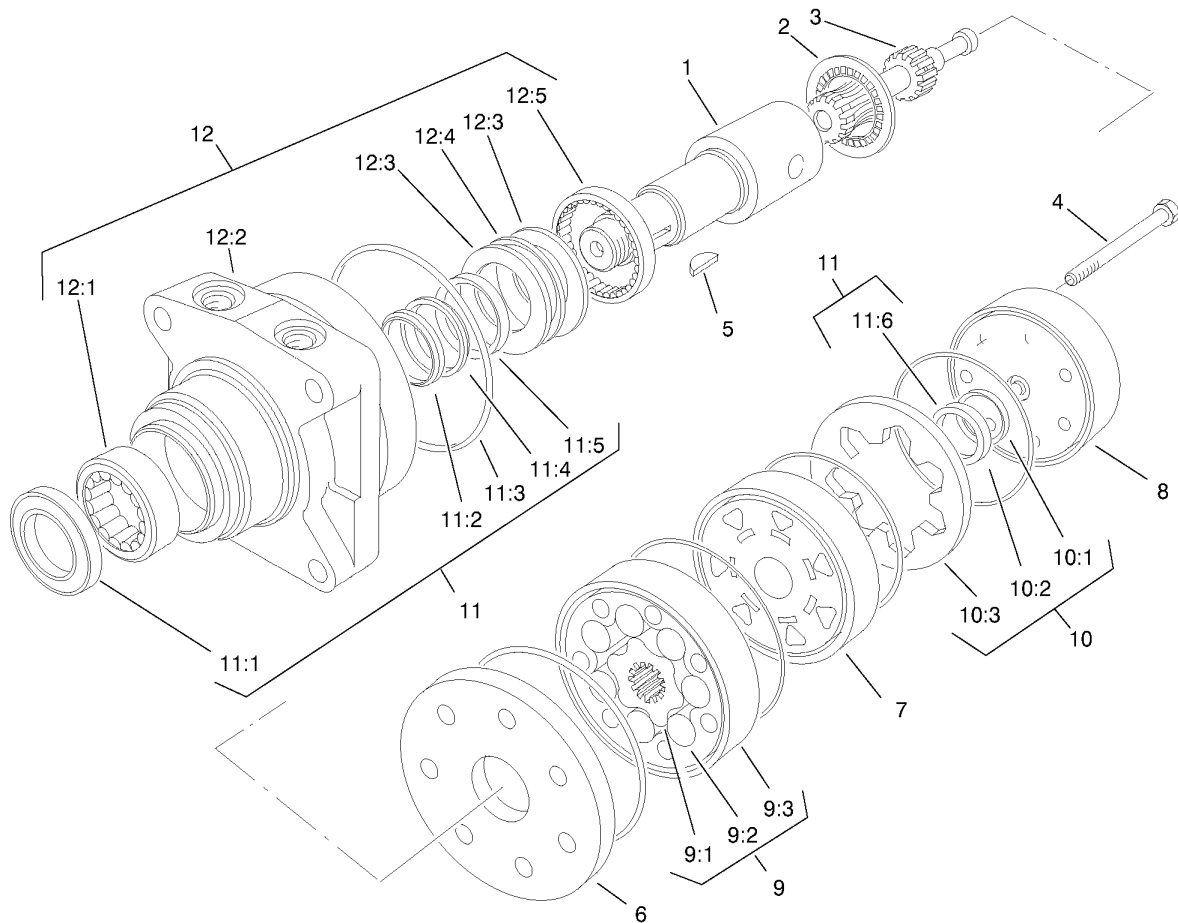 

Hydraulic Motor Assembly No. 95-8693


Ref	Part No.	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	76-0960	1	Link-Drive
4	76-1010	7	Screw
5	3257-42	1	Key-Woodruff
6	76-0870	1	Plate-Wear
7	99-3535	1	Manifold
8	76-0940	1	End Cover ASM
9	76-0970	1	Set-Rotor
●9:1		1	Rotor
●9:2		7	Vane
●9:3		1	Stator
10	76-0880	1	Commutator ASM
●10:1		1	Seal-Commutator
●10:2		1	Commutator
●10:3		1	Ring-Commutator
11	76-0800	1	Kit-Seal
●11:1		1	Seal-Dirt & Water
●11:2		1	Washer-Back-Up
●11:3		5	Ring-Seal
●11:4		1	Washer-Back-Up
●11:5		1	Seal-Inner
●11:6		1	Commutator
12	76-0810	1	Housing ASM

Ref	Part No.	Qty.	Description
●12:1		1	Bearing
●12:2		1	Housing
●12:3		2	Washer-Thrust
●12:4		1	Bearing-Thrust
●12:5		1	Bearing

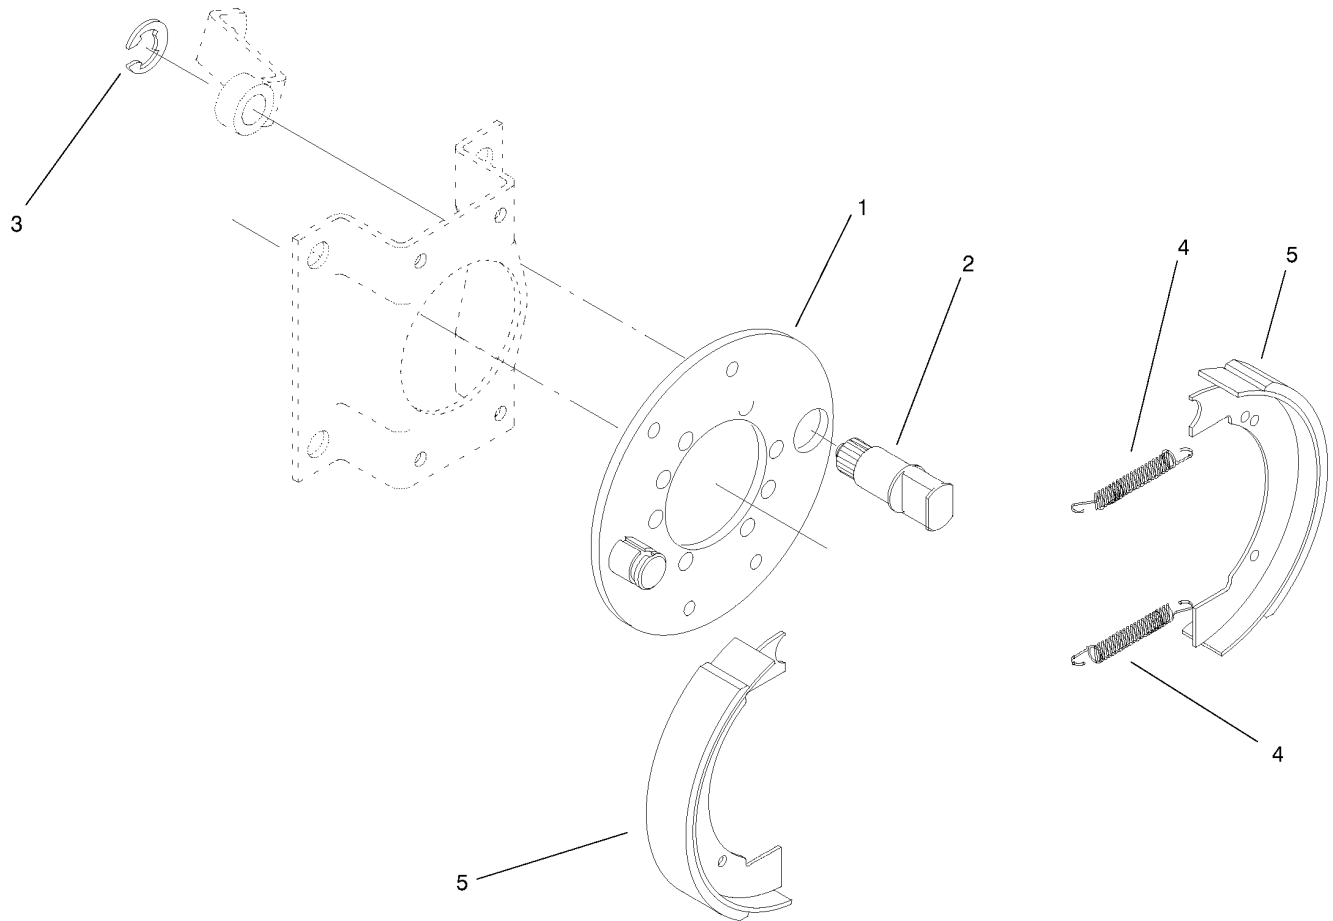 


Brake Assembly No. 104-7705

Ref	Part No.	Qty.	Description
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E-Ring, Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

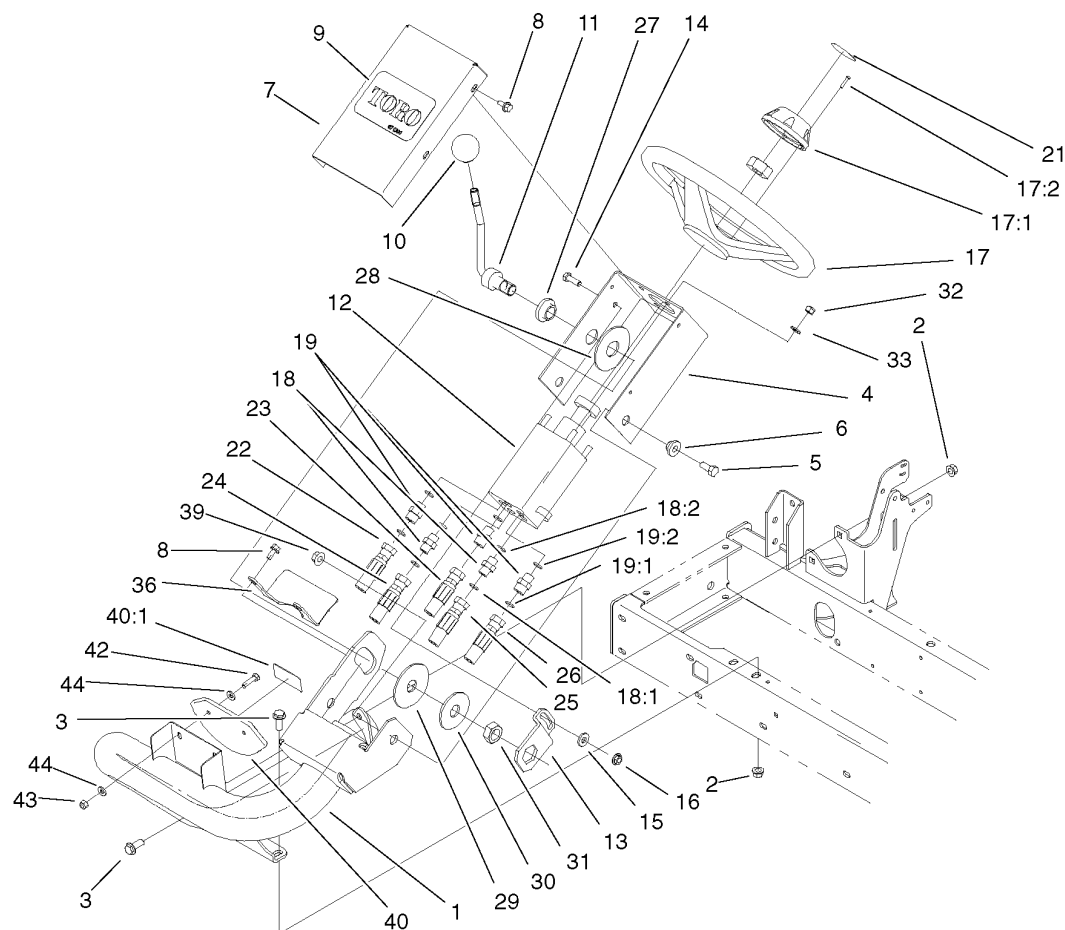 


Steering Column Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-4896-01	1	Arm-Steering	19:2	237-42	1	O-Ring
2	32128-43	4	Nut-Flange	21	68-5370	1	Decal-Toro
3	3234-11	4	Screw-HHF	22	95-8842	1	Hose ASM
4	95-8793-01	1	Bracket-Valve, Steering	23	95-8843	1	Hose ASM
5	323-5	2	Screw-HH	24	100-4892	1	Hose ASM
6	93-5988	2	Hub-Pivot	25	100-4893	1	Hose ASM
7	95-8794-01	1	Cover-Valve, Steering	26	95-8846	1	Hose ASM
8	32144-10	5	Screw-HWH	27	99-3502	1	Boss
9	67-1300	1	Decal-Toro	28	31-0390	1	Disc-Friction
10	233-48	1	Knob	29	82-9010	1	Disc-Friction
11	95-8798-03	1	Lever-Steering	30	80-2930	1	Washer-Flat
12	104-0474	1	Control-Steering	31	3218-7	1	Nut-Jam
13	80-2880	1	Bracket-Tilt	32	3296-4	4	Nut-Lock, NI
14	322-5	1	Screw-HH	33	3256-23	4	Washer-Flat
15	3256-3	1	Washer-Flat	36	99-3405-01	1	Shield-Steering
16	32128-44	1	Nut	39	32128-21	2	Nut-HF
17	68-5130	1	Wheel-Steering	40	100-4929	1	Slope Indicator ASM
17:1	68-5140	1	Cap-Wheel, Steering	40:1	100-4837	1	Decal-Danger
17:2	32144-21	1	Screw	40:1	100-4933	1	Decal-Danger
18	340-1	2	Adapter	42	321-7	2	Screw-HH
18:1	237-35	1	O-Ring	43	3296-42	2	Nut-Lock, NI
18:2	237-42	1	O-Ring	44	3256-22	4	Washer-Flat
19	340-2	3	Fitting-HYD, Straight				
19:1	237-22	1	O-Ring				

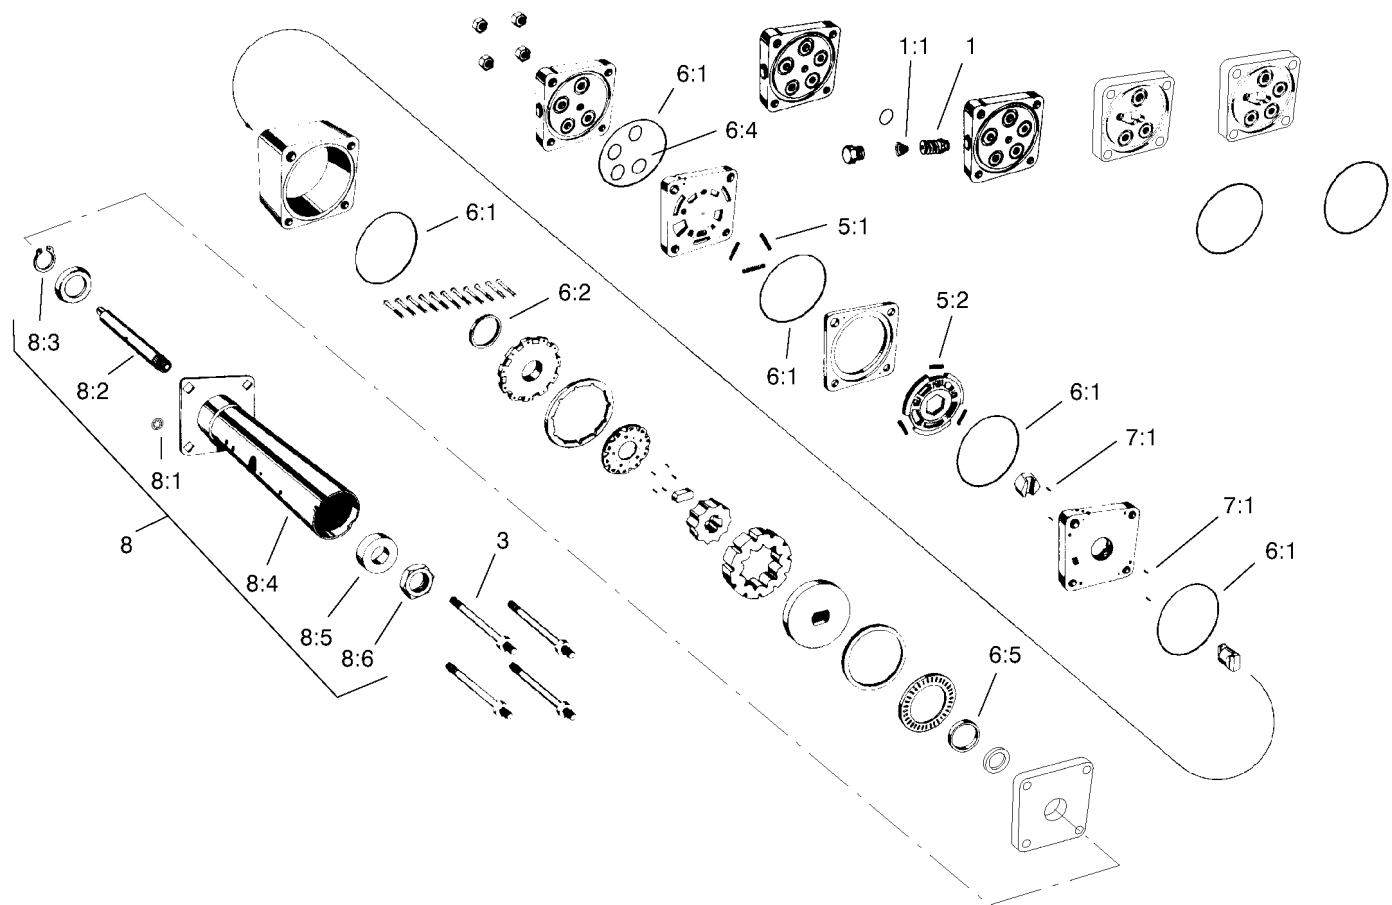 


Steering Control Assembly No. 104-0474

Ref	Part No.	Qty.	Description				
1	99-3523	1	Cartridge-Valve, Relief				
1:1		1	Spring-Coil				
3	99-3524	4	Bolt-Special				
5	66-9970	1	Kit-Spring				
5:1		3	Spring				
5:2		3	Spring				
6	66-9980	1	Kit-Seal				
6:1		5	Ring-Seal				
6:2		1	Seal-Commutator				
6:5		1	Seal-Face				
7	66-9990	1	Kit-Roller, Needle				
7:1		9	Pin-Alignment				
8	104-0475	1	Column ASM				
8:1	92-7316	4	Nut-Push On				
8:2		1	Shaft-Input				
8:3		1	Ring-Retaining				
8:4		1	Upper Cover & Jacket				
8:5		1	Bushing				
8:6	47-6990	1	Nut				

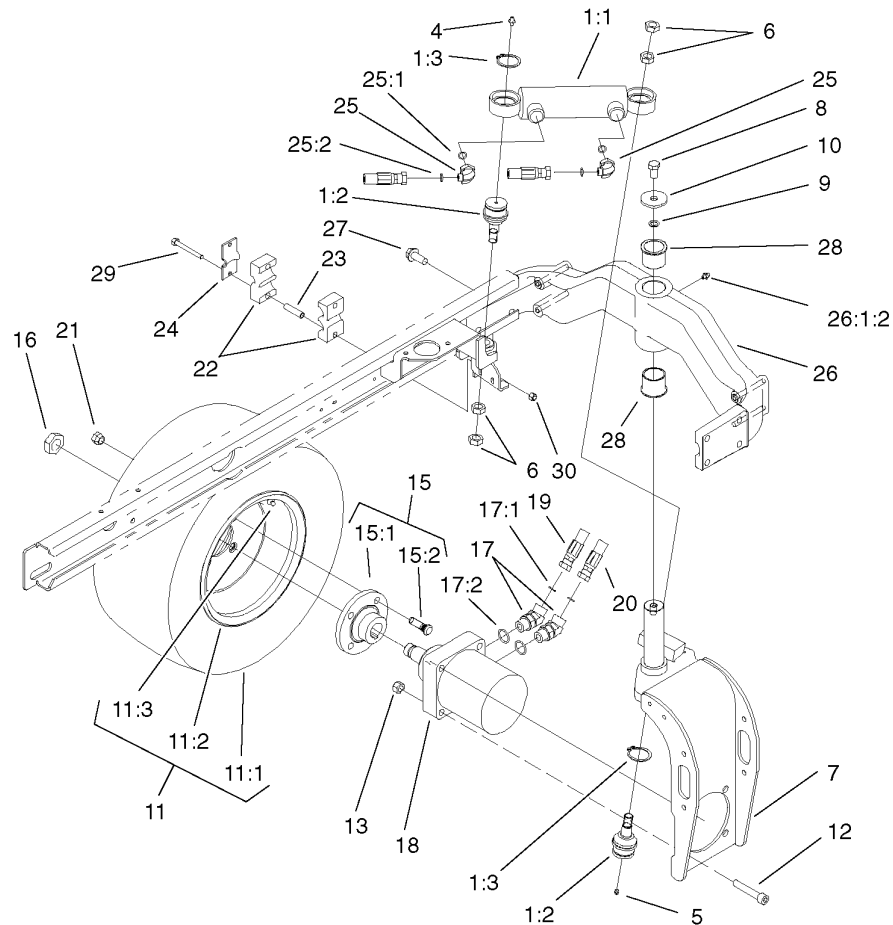 


Rear Fork and Tire Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶ 1		1	Steering Cylinder/Balljoint ASM	18	95-8694	1	HYD Motor ASM
1:1	94-8141	1	HYD Cylinder ASM	19	105-1213	1	Hose ASM
1:2	92-5838	2	Joint-Ball	20	105-1212	1	Hose ASM
1:3	32151-104	2	Ring-Retaining, EXT	21	242-50	4	Nut-Lug
4	302-5	1	Fitting-Grease	22	82-8170	2	Clamp
5	302-59	1	Plug-Threaded	23	93-7960	2	Spacer
6	3220-6	4	Nut-Jam	24	93-7961	1	Clamp-Drain, Case
7	95-8905-01	1	Fork-Rear	25	340-132	2	Fitting-HYD, 90°
8	325-3	1	Screw-HH	25:1	237-78	1	O-Ring
9	3255-2	1	Washer-Lock/EXT	25:2	237-21	1	O-Ring
10	75-7730	1	Washer-Thrust	26	18-3979-03	1	Rear Casting ASM
❶ 11		1	Tire & Wheel ASM	❶ 26:1		1	Rear Casting ASM
11:1	95-8656	1	Tire	26:1:2	302-5	1	Fitting-Grease
11:2	95-8657	1	Rim-Wheel	27	3234-38	8	Screw-HHF
11:3	232-27	1	Stem-Valve	28	95-8805	2	Bushing
12	3274-93	4	Screw-HSH	29	322-13	2	Screw-HH
13	3296-23	4	Nut-Lock, NI	30	3296-29	2	Nut-Lock, NI
❶ 15		1	Wheel Hub / Stud ASM				
15:1	10-6870-03	1	Hub-Wheel				
15:2	10-6830	4	Stud-Type, Drive				
16	26-3790	1	Nut-Lock				
17	340-14	2	Fitting-HYD, 45°				
17:1	237-65	1	O-Ring				
17:2	237-80	1	O-Ring				

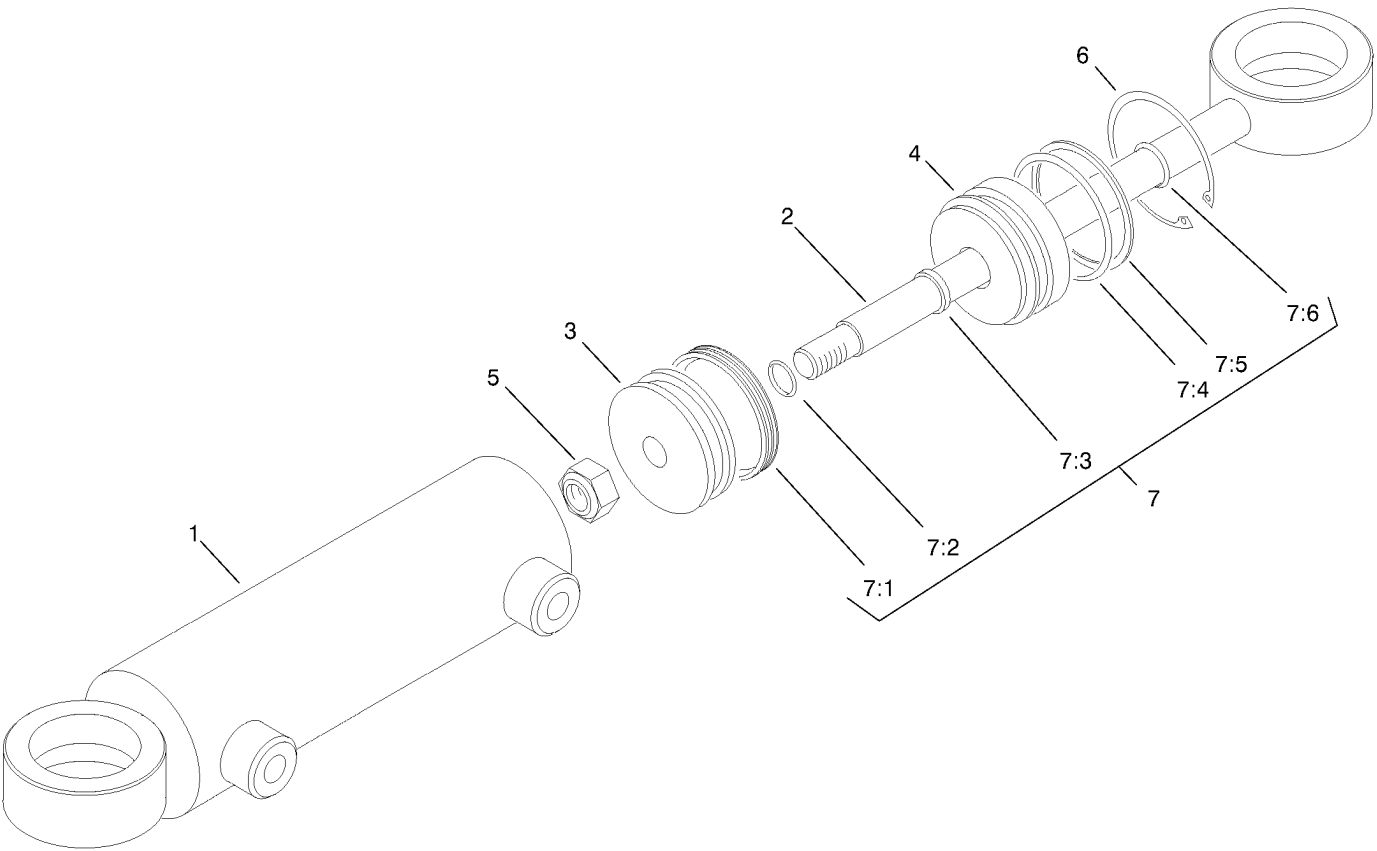 


Hydraulic Cylinder Assembly No. 94-8141

Ref	Part No.	Qty.	Description				
1	94-9955	1	Barrel ASM				
2	94-9956	1	Piston Rod ASM				
3	94-9957	1	Piston				
4	94-9958	1	Gland-Cylinder				
5	32152-10	1	Locknut				
6	32120-8	1	Ring-Snap				
7	86-5390	1	Kit-Repair, Seal				
●7:1		1	Uniring				
●7:2		1	O-Ring				
●7:3		1	Seal-Rod				
●7:4		1	O-Ring				
●7:5		1	Ring-Backup				
●7:6		1	O-Ring				

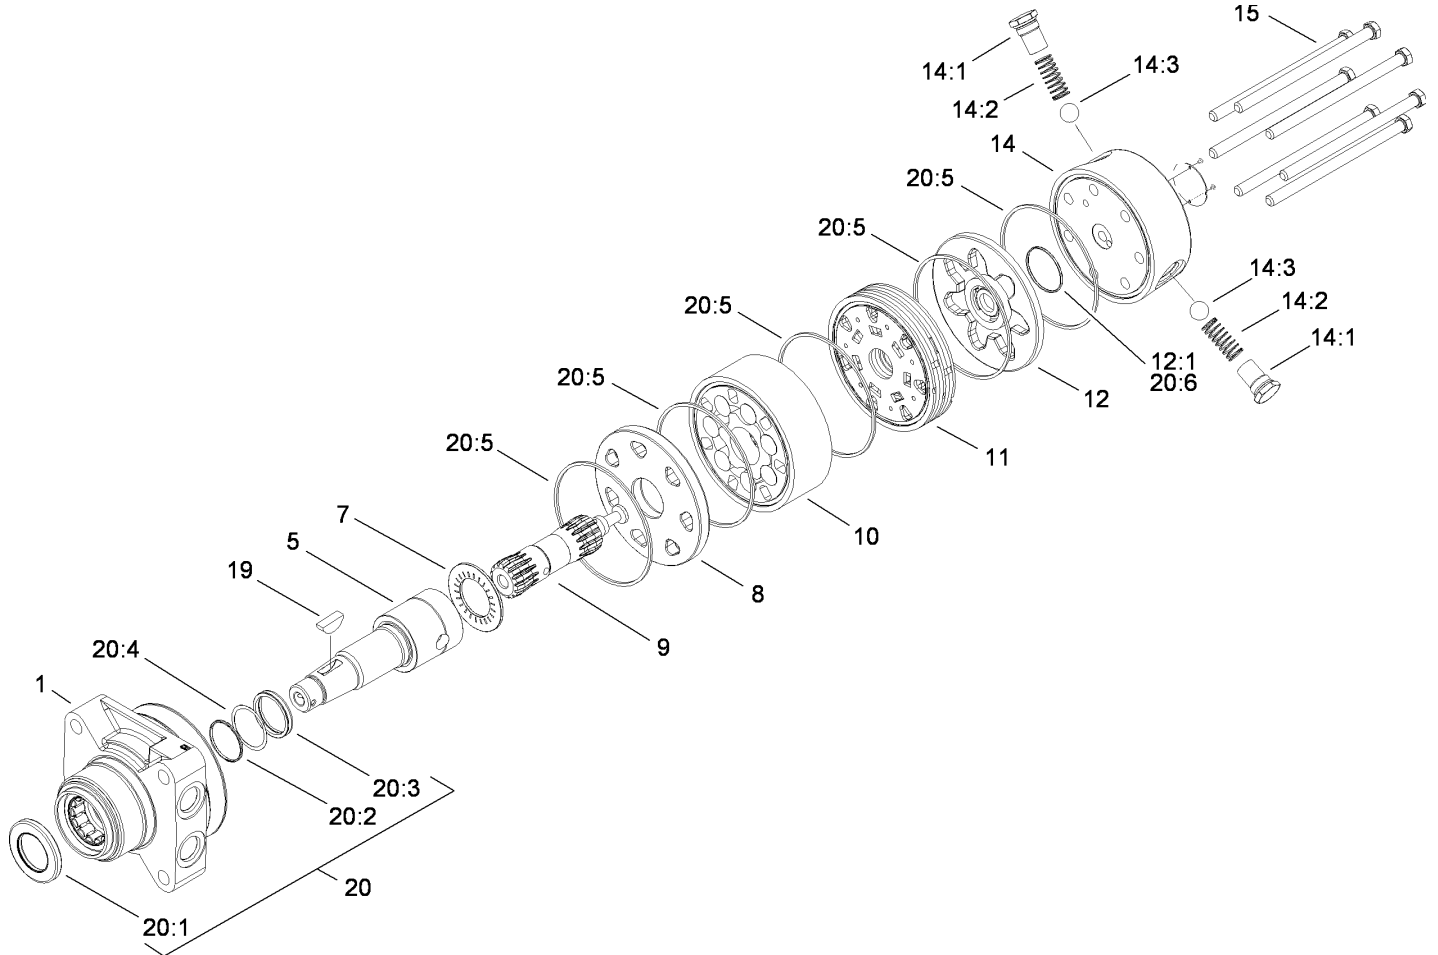 


Hydraulic Motor Assembly No. 95-8694

Ref	Part No.	Qty.	Description
1	76-0810	1	Housing ASM
5	99-3090	1	Shaft-Coupling
7	76-0850	1	Bearing-Thrust
8	76-0870	1	Plate-Wear
9	99-3537	1	Link-Drive
10	99-3539	1	Set-Rotor
11	99-3535	1	Manifold
12	76-0880	1	Commutator ASM
❶12:1		1	Seal-Commutator
14	99-3538	1	End Cover ASM
❶14:1		1	Spring Cap And O-Ring ASM
14:2	99-3541	1	Spring
14:3	99-3540	1	Ball
15	99-3536	7	Screw-HH
19	3257-42	1	Key-Woodruff
20	94-8178	1	Seal Kit
❶20:1		1	Seal-Dirt And Water
❶20:2		1	Backup-Ring
❶20:3		1	Seal-Shaft
❶20:4		1	Washer-Back Up
❶20:5		5	Seal-Square, Ring (Inner)
❶20:6		1	Seal-Commutator

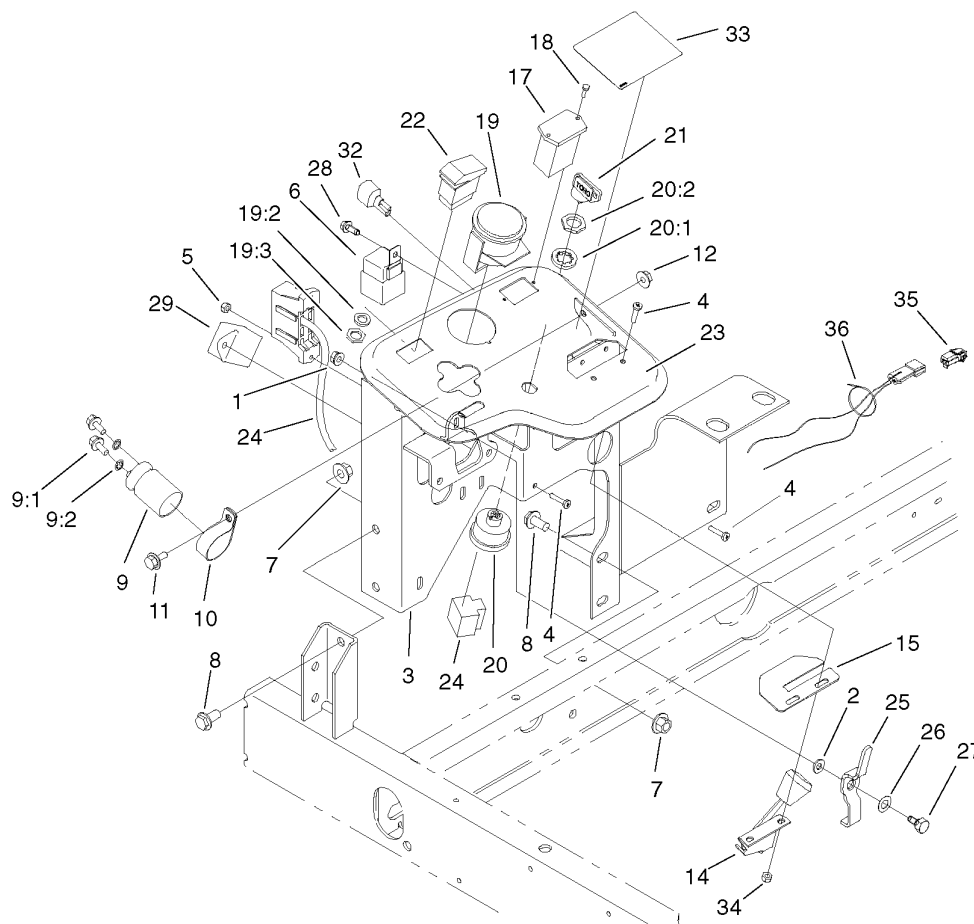 

Control Panel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32128-32	1	Nut-HHF	20:2	218-461	1	Nut-HH
2	3256-22	1	Washer-Flat	21	63-8360	2	Key-Ignition
3	95-8712-03	1	Panel-Control	22	95-8999	1	Switch
4	3250-27	4	Screw-PPH	23	100-4834	1	Decal-Console
5	3296-2	2	Nut-Lock	24	100-4823	1	Harness-Wire
6	70-1480	4	Relay	25	99-3401-03	1	Lever-Valve, Lock
7	32128-43	5	Nut-Flange	26	3290-477	1	Washer-Curved
8	3234-1	5	Screw-HHF	27	63-3410	1	Screw-Shoulder
9	37-2690	1	Capacitor	28	32144-10	5	Screw-HWH
9:1	3252-18	2	Screw	29	99-3463	1	Controller-Glow
9:2	3254-1	2	Washer-Lock, Internal	32	100-4918	4	Diode
10	2412-74	1	R-Clamp	33	99-3558	1	Decal-Console, Ce
11	3234-4	1	Screw-HHF	34	3290-148	2	Nut-Hex (W/Washer)
12	32128-33	1	Nut-HF	35	104-4875	1	Harness-Wire, Jumper
14	95-8855	1	Control-Throttle	36	3290-378	1	Tie-Cable
15	104-0421	1	Plate-Stop, Throttle				
17	75-6820	1	Hourmeter				
18	32144-18	2	Screw-HH				
19	93-7053	1	Cluster-Lamp, Warning				
●*19:1	219-17	4	Bulb				
19:2	3254-1	1	Washer-Lock, Internal				
19:3	3217-26	1	Nut-Hex				
20	88-9830	1	Key Switch ASM				
20:1	3254-5	1	Washer-Lock, Internal				

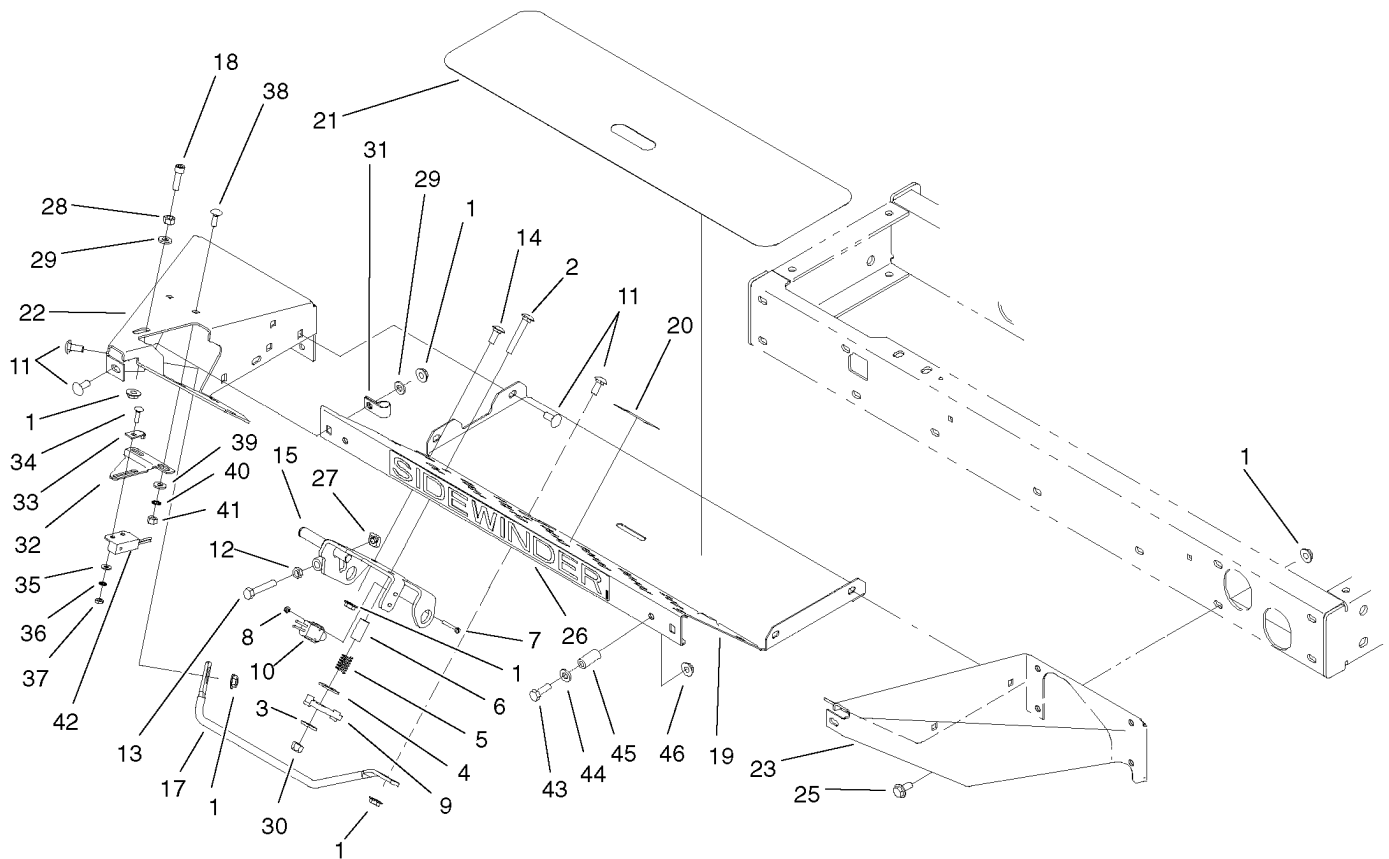 

Front Platform Assembly


Ref	Part No.	Qty.	Description
1	32128-44	22	Nut
2	3230-6	1	Screw-CARR
3	3256-3	1	Washer-Flat
4	3256-40	1	Washer-Flat
5	65-9940	1	Spring
6	95-8866	1	Tube-Arm, Rocker
7	32105-9	2	Screw
8	3296-9	2	Nut-Lock NI
9	99-3593	1	Arm-Rocker
10	95-8900	1	Switch
11	3230-1	9	Screw-CARR
12	3218-2	1	Nut-Jam
13	322-41	1	Screw-HH
14	3230-23	2	Screw-CARR
15	95-8869-03	1	Bracket-Pedal, Traction
17	95-8893	1	Bar-Deflector
18	3274-22	1	Screw-HSH
19	95-8610-01	1	Plate-Floor
20	99-3444	1	Decal-Mow/Transport
21	99-3478	1	Tread-Foot
22	100-4884-01	1	Support-Floor, RH
23	95-8612-01	1	Bracket-Floor Plate, LH
25	3234-5	10	Screw
26	99-3388	1	Decal-Sidewinder

Ref	Part No.	Qty.	Description
27	99-3565	1	Nut-Square
28	3217-6	1	Nut-Hex
29	3256-23	2	Washer-Flat
30	3296-29	1	Nut-Lock, NI
31	2412-103	1	Clamp
32	100-4871	1	Bracket-Switch, Neutral
33	100-4872	1	Plate-Switch, Neutral
34	3229-20	1	Screw-CARR
35	3256-14	1	Washer-Flat
36	3255-17	1	Washer-Lock/EXT
37	3296-2	1	Nut-Lock
38	3229-1	2	Screw-CARR
39	3256-22	2	Washer-Flat
40	3255-7	2	Washer-Lock/EXT
41	3217-5	2	Nut-Hex
42	100-1270	1	Switch-Proximity
43	323-9	2	Screw-HH
44	3256-4	2	Washer-Flat
45	104-4613	2	Tube-Latch
46	32128-43	2	Nut-Flange

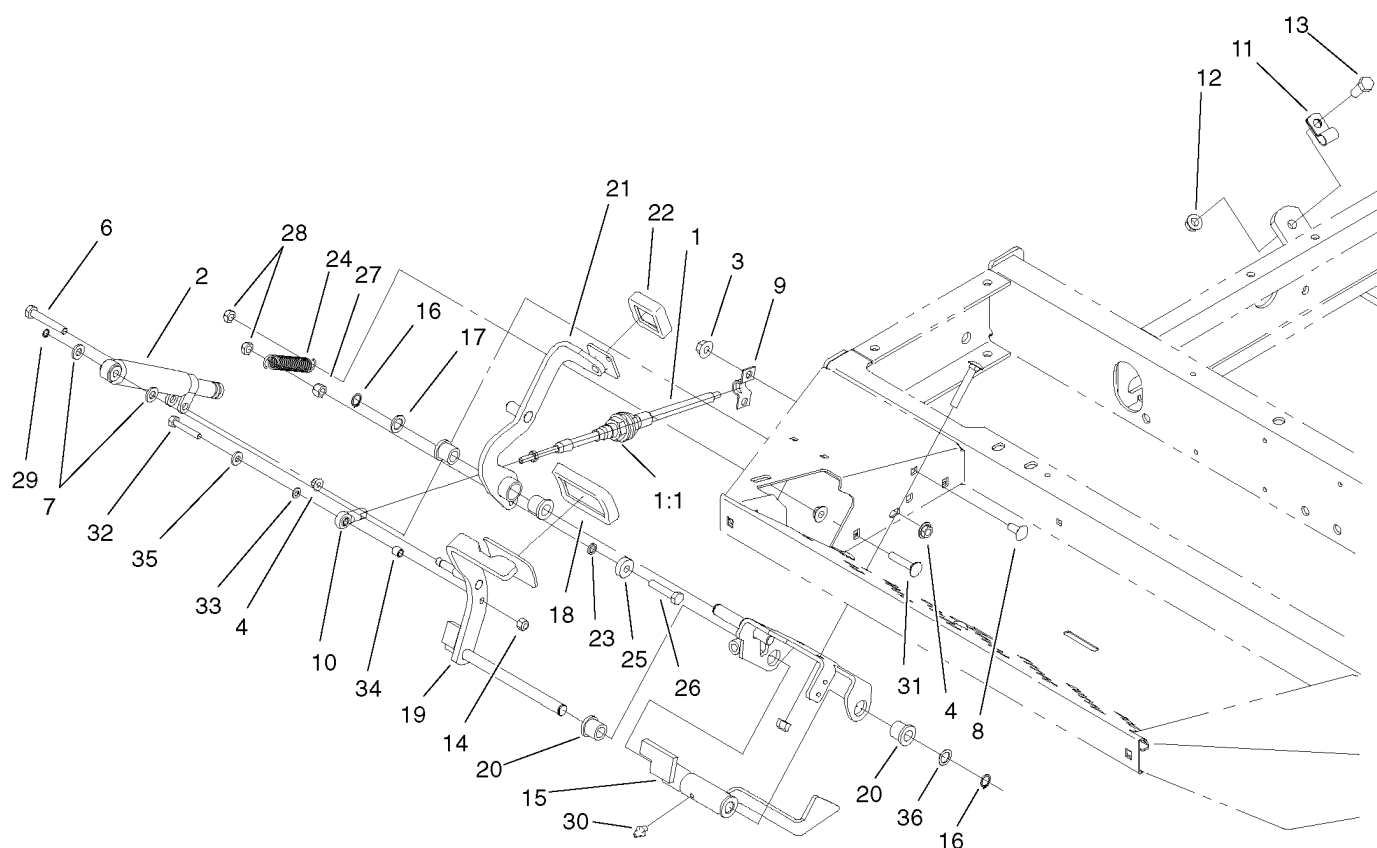 


Traction Pedal Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-4815	1	Cable-Control, Traction	25	251-259	1	Bearing
1:1	3220-1	2	Nut-Jam	26	322-7	1	Screw-HH
2	76-8870	1	Lever Damper ASM	27	3296-29	1	Nut-Lock, NI
3	32128-20	2	Nut-HF	28	3296-47	2	Nut-Lock, NI
4	32128-44	3	Nut	29	32151-3	1	Ring-Grip, Ex
6	322-10	1	Screw-HH	30	302-5	1	Fitting-Grease
7	3256-23	2	Washer-Flat	31	3230-27	1	Screw-CARR
8	3230-23	2	Screw-CARR	32	321-9	1	Screw-HH
9	93-2092	1	Clamp-Cable	33	33093-00	1	Washer-Flat
10	2411-41	1	Joint-Ball, Superior	34	99-3545	1	Spacer
11	2412-10	1	R-Clamp	35	3256-22	1	Washer-Flat
12	32128-43	1	Nut-Flange	36	73-0040	4	Washer-Thrust
13	323-6	1	Screw-HH				
14	3296-42	1	Nut-Lock, NI				
15	95-8861	1	Slide				
16	32151-84	2	Ring-Shaft, EXT				
17	41-8440	1	Washer				
18	74-9100	1	Pad-Pedal, Forward				
19	104-4852-03	1	Traction Pedal ASM				
20	256-243	2	Bearing-Flange				
21	99-3379	1	Pedal-Reverse				
22	74-9110	1	Pad-Pedal, Reverse				
23	75-5470	1	Spacer-Bearing				
24	99-3476	1	Spring-Extension				

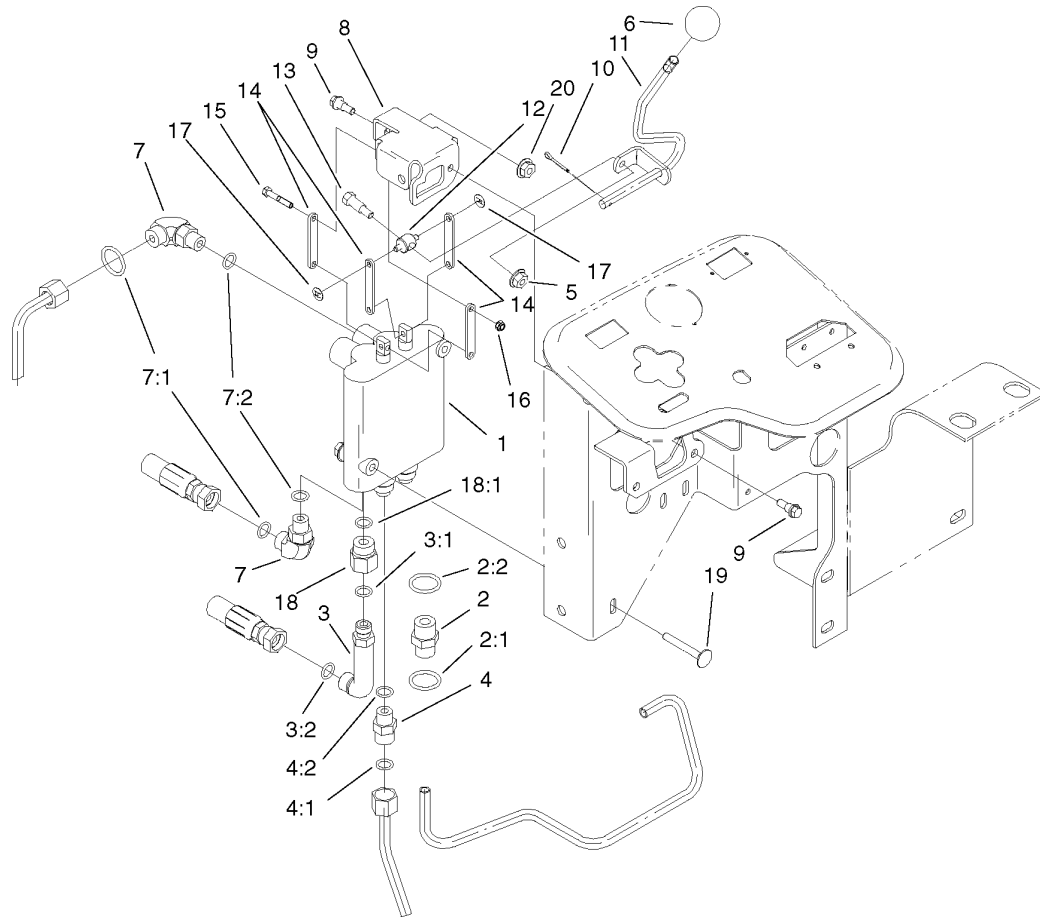 

Control Valve Installation Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	95-8581	1	Valve-2 Spool	17	93-3988	2	Pushnut-Tinnerman
2	340-3	1	Adapter	18	353-397	1	Reducer-Adapter
2:1	237-22	1	O-Ring	18:1	237-79	1	O-Ring
2:2	237-79	1	O-Ring	19	3230-33	2	Screw-CARR
3	69-4320	1	Fitting-90	20	32128-32	2	Nut-HHF
3:1	237-22	1	O-Ring				
3:2	237-42	1	O-Ring				
4	340-2	1	Fitting-HYD, Straight				
4:1	237-22	1	O-Ring				
4:2	237-42	1	O-Ring				
5	32128-33	3	Nut-HF				
6	233-42	1	Knob				
7	340-77	2	Fitting-HYD, 90°				
7:1	237-22	1	O-Ring				
7:2	237-42	1	O-Ring				
8	95-8633	1	Bracket-Valve, Actuator				
9	42-3560	2	Bolt-Shoulder				
10	3272-6	1	Pin-Cotter				
11	95-8635	1	Lever-Valve				
12	95-8638	1	Trunnion-Valve, Actuator				
13	92-8916	1	Bolt-Shoulder				
14	95-8634	4	Link				
15	87-5150	3	Bolt				
16	87-5140	3	Nut-Lock				

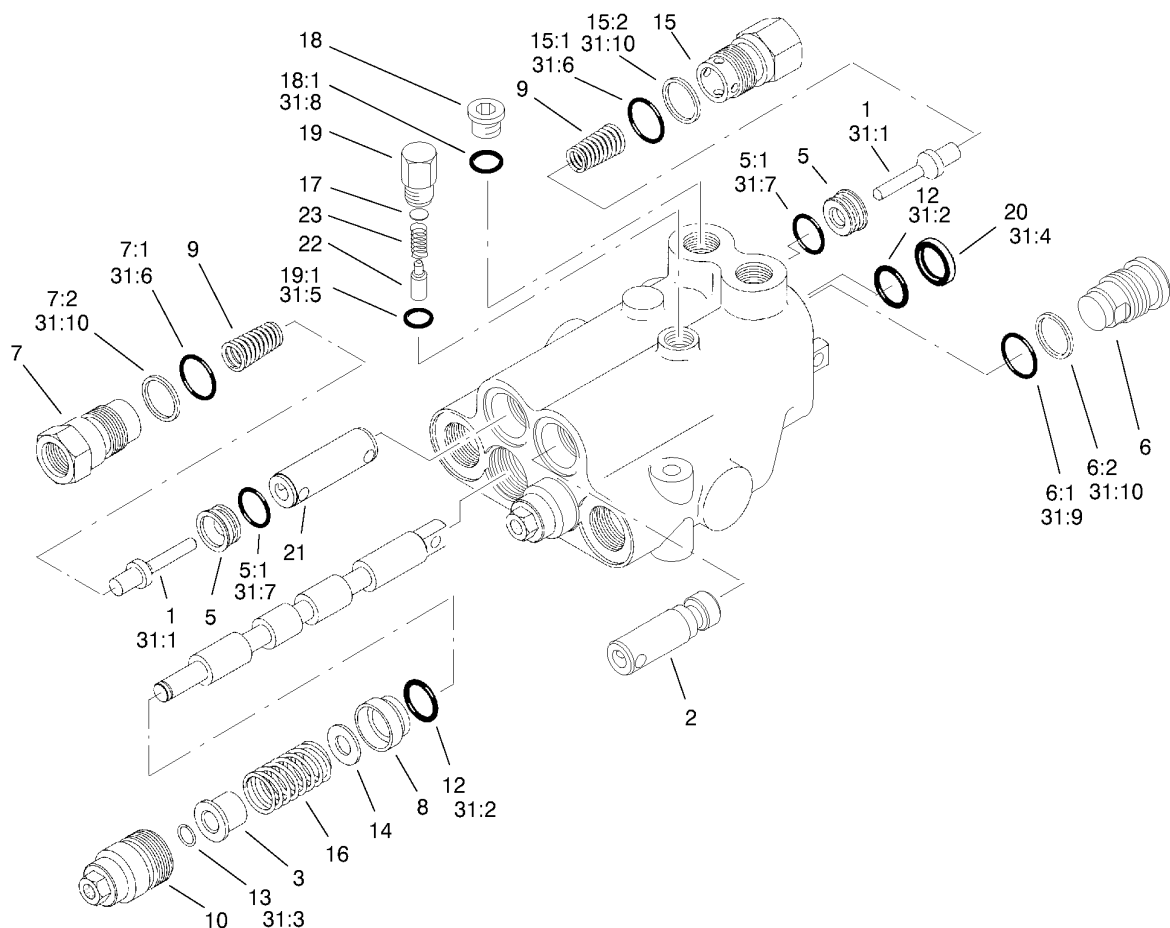 

Control Valve Assembly No. 95-8581

Ref	Part No.	Qty.	Description
1	58-6290	3	Poppet
2	69-1840	1	Plunger
3	58-6310	2	Spacer
5	58-6330	3	Seat
5:1	58-6340	1	O-Ring
6	58-6350	1	Plug
6:1	60-5720	1	O-Ring
6:2	58-6370	1	Washer
7	99-3527	2	Plug ASM
7:1	60-5720	1	O-Ring
7:2	59-7730	1	Washer-Backup
8	58-6400	2	Bushing
9	69-1810	3	Spring
10	58-6420	2	Cap
12	58-6450	4	O-Ring
13	58-6460	2	Ring
14	65-2770	2	Washer
15	99-3526	1	Plug ASM
15:1	60-5720	1	O-Ring
15:2	59-7730	1	Washer-Backup
16	99-3531	2	Spring
17	60-6450	1	Disc
18	353-989	1	Plug-Hex, Hollow
18:1	237-42	1	O-Ring


Ref	Part No.	Qty.	Description
19	58-6780	1	Plug
19:1	58-6790	1	O-Ring
20	58-6320	2	Wiper
21	99-3528	1	Plunger
22	58-6770	1	Plunger
23	58-6760	1	Spring
31	99-3530	1	Kit-Seal
31:1	58-6290	3	Poppet
31:2	58-6450	4	O-Ring
31:3	58-6460	2	Ring
31:4	58-6320	2	Wiper
31:5	58-6790	1	O-Ring
31:6	60-5720	2	O-Ring
31:7	58-6340	2	O-Ring
31:8	237-42	1	O-Ring
31:9	60-5720	2	O-Ring
31:10	59-7730	2	Washer-Backup

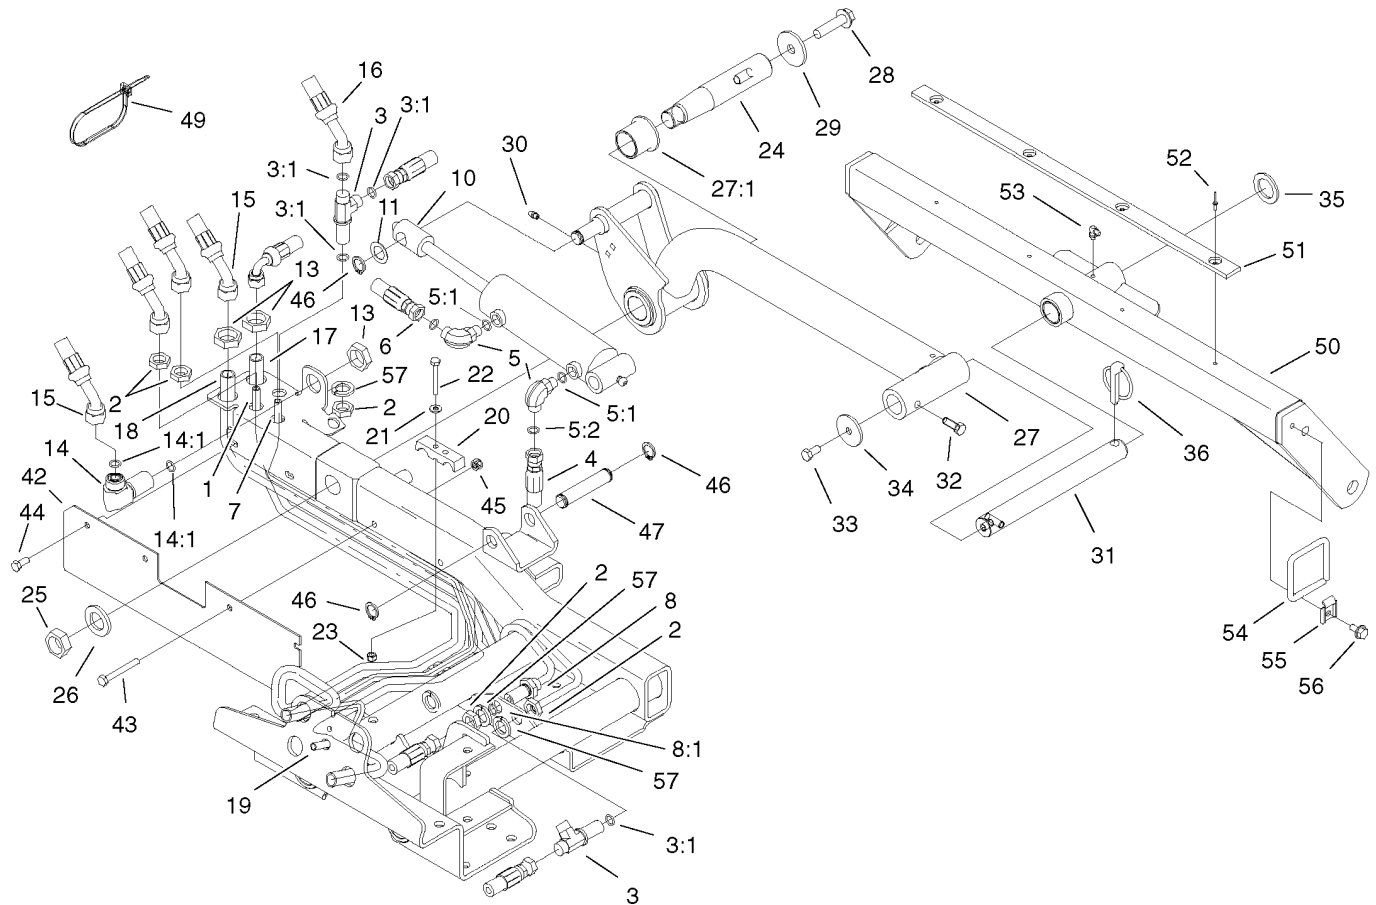 

Rear Liftarm Assembly


Ref	Part No.	Qty.	Description
1	104-0402	1	Tube ASM
2	340-70	5	Locknut-Bulkhead
3	340-68	2	Fitting-Tee, Bulkhead
3:1	237-22	3	O-Ring
4	104-0407	1	Hose ASM
5	340-77	2	Fitting-HYD, 90°
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	100-4891	1	Hose ASM
7	104-0403	1	Tube ASM
8	340-71	1	Fitting-Straight, Bulkhead
8:1	237-22	2	O-Ring
10	95-8978	1	Cylinder-HYD
11	3-6498	1	Washer-Thrust
13	340-74	3	Locknut-Bulkhead
14	340-72	1	Union-Elbow Bulkhead, 90°
14:1	237-65	2	O-Ring
15	100-4879	2	Hose ASM
16	95-8825	1	Hose ASM
17	104-0401	1	Tube ASM
18	104-0400	1	Tube-ASM
19	104-0404	1	Tube ASM
20	99-3641	2	Clamp-Tube
21	3256-22	4	Washer-Flat

Ref	Part No.	Qty.	Description
22	321-11	2	Screw-HH
23	3296-42	2	Nut-Lock, NI
24	95-8990	1	Shaft-Pivot, Rear
25	3220-9	1	Nut-Jam
26	86-1480	1	Washer
27	100-4938	1	Rear Lift Arm ASM
27:1	69-6470	2	Bushing-Castor
28	3234-27	1	Screw-Flange
29	75-7730	1	Washer-Thrust
30	302-5	1	Fitting-Grease
31	100-4944	1	Shaft-Pivot, Cutting Unit
32	323-6	1	Screw-HH
33	323-4	1	Screw-HH
34	63-7400	1	Washer-Rebound
35	3-6781	1	Washer-Thrust
36	283-71	1	Pin-Lynch
42	104-0453-03	1	Guard
43	322-12	2	Screw-HH
44	322-3	2	Screw-HH
45	32128-20	4	Nut-HF
46	32120-93	3	Ring-Retaining
47	95-8575	1	Pin
49	3334-945	1	Tie-Cable
50	104-4229	1	Rear Carrier Frame ASM

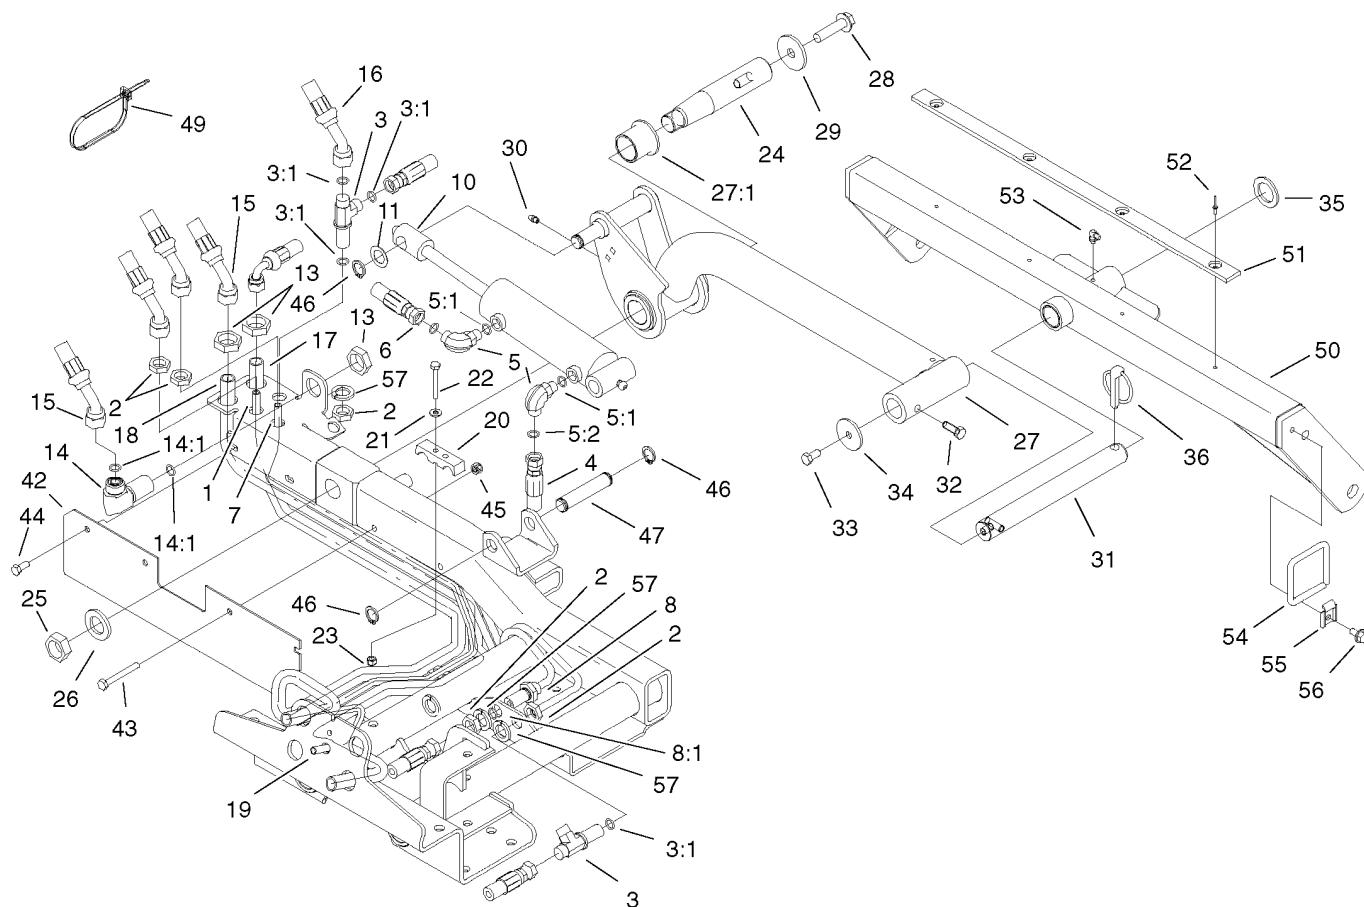 

Rear Liftarm Assembly (continued)


Ref	Part No.	Qty.	Description				
51	95-8936	1	Strip-Wear				
52	3269-18	4	Rivet-Pop, Steel				
53	302-60	1	Fitting-Lube				
54	104-4240	1	Link-Rear				
55	3-6657	1	Clip-Skid				
56	32144-14	1	Screw-HWH				
57	3254-7	3	Washer-Lock/Int				

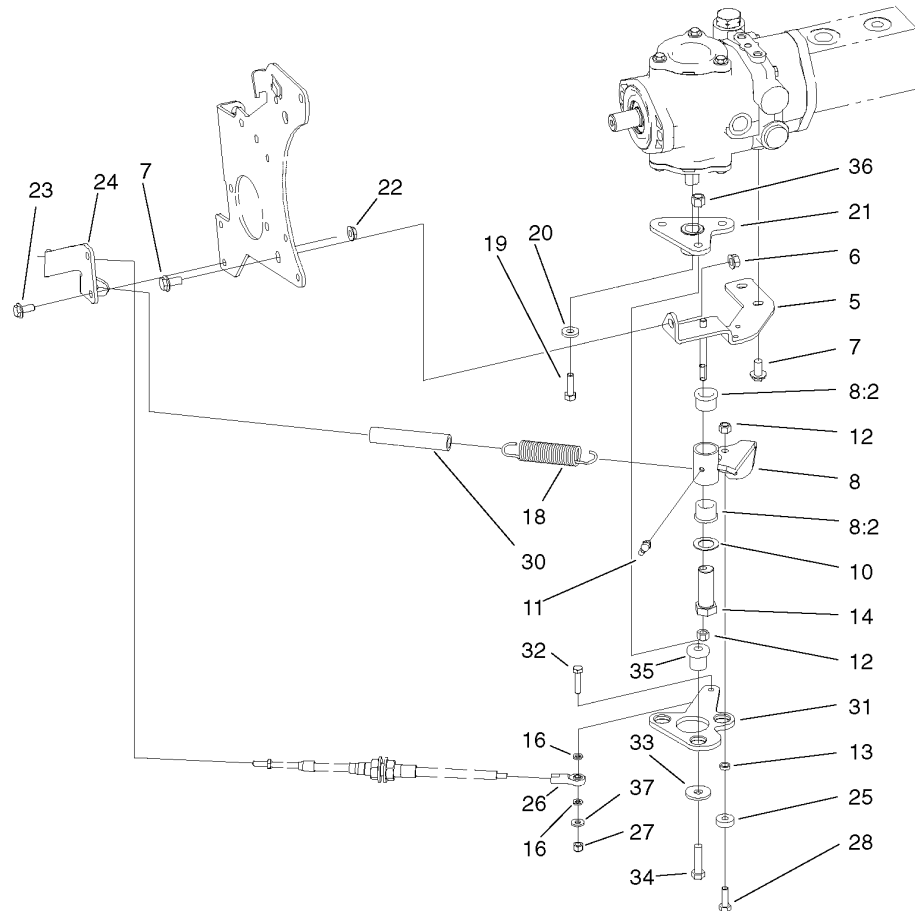 

Neutral Arm Assembly


Ref	Part No.	Qty.	Description
5	95-8960-03	1	Bracket-Neutral
6	32128-43	1	Nut-Flange
7	3234-1	3	Screw-HHF
8	104-0422	1	Neutral Arm ASM
8:2	256-113	2	Bushing-Flange
10	3-6498	1	Washer-Thrust
11	302-60	1	Fitting-Lube
12	3296-29	2	Nut-Lock, NI
13	100-4817	1	Spacer-Bearing
14	76-8640	1	Stud-Traction
16	33093-00	2	Washer-Flat
18	94-1369	1	Spring-Extension
19	3210-6	1	Screw-HH
20	88-7200	1	Washer-Flat
21	99-3598-03	1	Hub ASM
22	32128-44	2	Nut
23	3234-5	2	Screw
24	104-0464-03	1	Bracket-Support, Cable
25	251-259	1	Bearing
26	2411-41	1	Joint-Ball, Superior
27	3296-42	1	Nut-Lock, NI
28	3274-104	1	Screw-HSBH
30	99-3556	1	Hose
31	99-3594-03	1	Lever-Pump

Ref	Part No.	Qty.	Description
32	321-8	1	Screw-HH
33	2844	3	Washer
34	95-3857	3	Screw-Head, Button
35	63-9750	3	Mount
36	3296-39	3	Nut-Lock, NI
37	3256-22	1	Washer-Flat

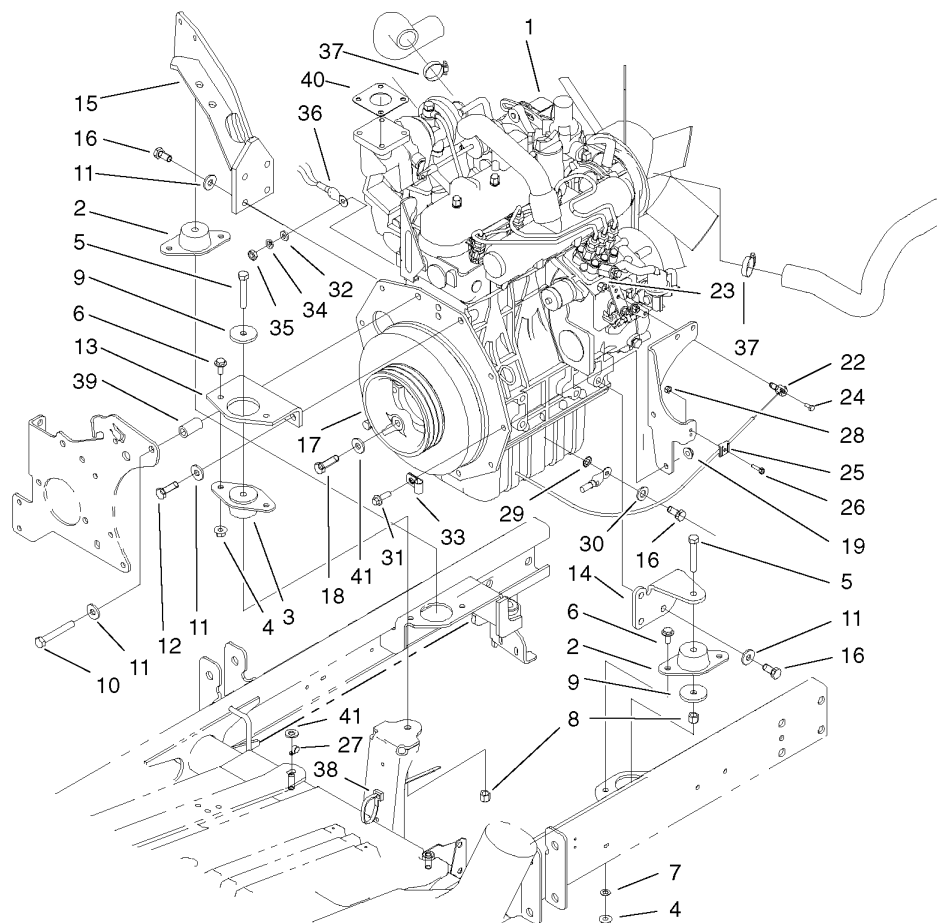 


Engine Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-4901	1	Engine-Kubota, D1105-T-Eb-Toro-2-S1	26	32105-13	1	Screw-SHH
2	83-1030	2	Mount-Engine	27	2412-112	1	Clamp
3	93-5265	1	Mount-Engine	28	3296-2	1	Nut-Lock
4	32128-20	6	Nut-HF	29	3255-9	1	Washer-Lock/EXT
5	323-11	3	Screw-HH	30	3256-25	1	Washer-Flat
6	3234-5	6	Screw	31	3234-17	2	Screw-HHF
7	3255-8	1	Washer-Lock/EXT	32	3256-78	1	Washer-Flat
8	3296-39	3	Nut-Lock, NI	33	2412-10	1	R-Clamp
9	80-8560	3	Washer-Hardened	34	43-5930	1	Washer-Spring
10	42-9370	1	Bolt/Washer	35	48-7890	1	Nut
11	80-6990	9	Washer-Hardened	36	99-3441	1	Harness-Wire, Fusible Link
12	95-8812	1	Screw-HH	37	2412-34	2	Clamp-Hose
13	99-3618-03	1	Mount-Engine, Front	38	3290-378	14	Tie-Cable
14	95-8937-03	1	Mount-Engine, LH	39	95-8736	1	Spacer
15	100-4838-03	1	Mount-Engine	40	98-9611	1	Gasket
16	63-7790	8	Screw-Cap	41	3256-24	4	Washer-Flat
17	99-3626-03	1	Pulley-3V, Engine				
18	56-2140	3	Bolt				
19	32128-44	2	Nut				
22	98-9311	1	Swivel-Throttle				
23	3296-20	1	Nut-Lock, NI				
24	25-8640	1	Screw-HH				
25	81-1690	1	Clamp-Cable				

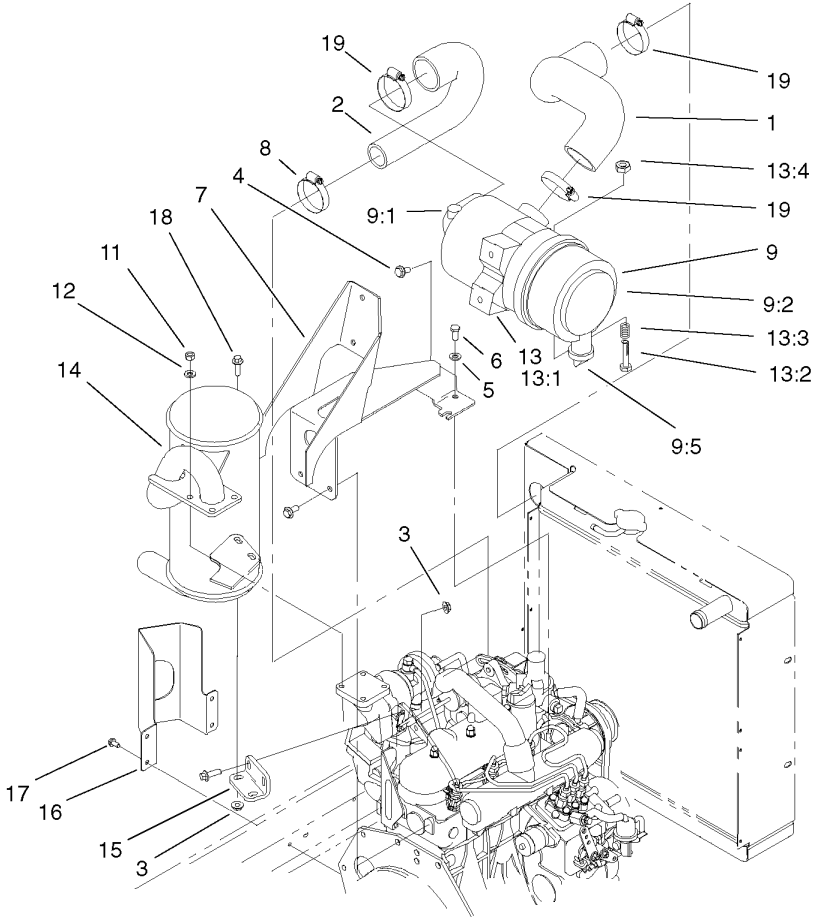 

Air Cleaner and Muffler Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-0420	1	Hose-Air Intake, Upper	18	3234-17	3	Screw-HHF
2	99-3643	1	Hose-Air Intake, Lower	19	2412-130	3	Clamp-Hose
3	32128-44	6	Nut				
4	3234-5	3	Screw				
5	3256-23	4	Washer-Flat				
6	33114-016	4	Screw-HH				
7	99-3648-03	1	Mount-Filter, Air				
8	2412-92	1	Clamp-Hose				
9	100-4824	1	Air Cleaner ASM				
9:1	285-17	1	Plug-Pipe				
9:2	104-0497	1	Cover ASM				
9:5	104-0498	1	Valve-Vacuator				
9:6	98-9763	1	Element ASM				
11	33014-00	4	Nut-Hex				
12	42-9850	4	Washer-Lock, Spring				
13	100-4825	1	Band-Mouning, Air Cleaner				
13:1		1	Clamp ASM				
13:2	94-3653	1	Bolt				
13:3	94-3654	1	Spring				
13:4	48-9510	1	Nut				
14	100-4810	1	Muffler				
15	95-8943-03	1	Bracket-Muffler				
16	99-3425-03	1	Guard-Exhaust				
17	32144-4	4	Screw-HWH				

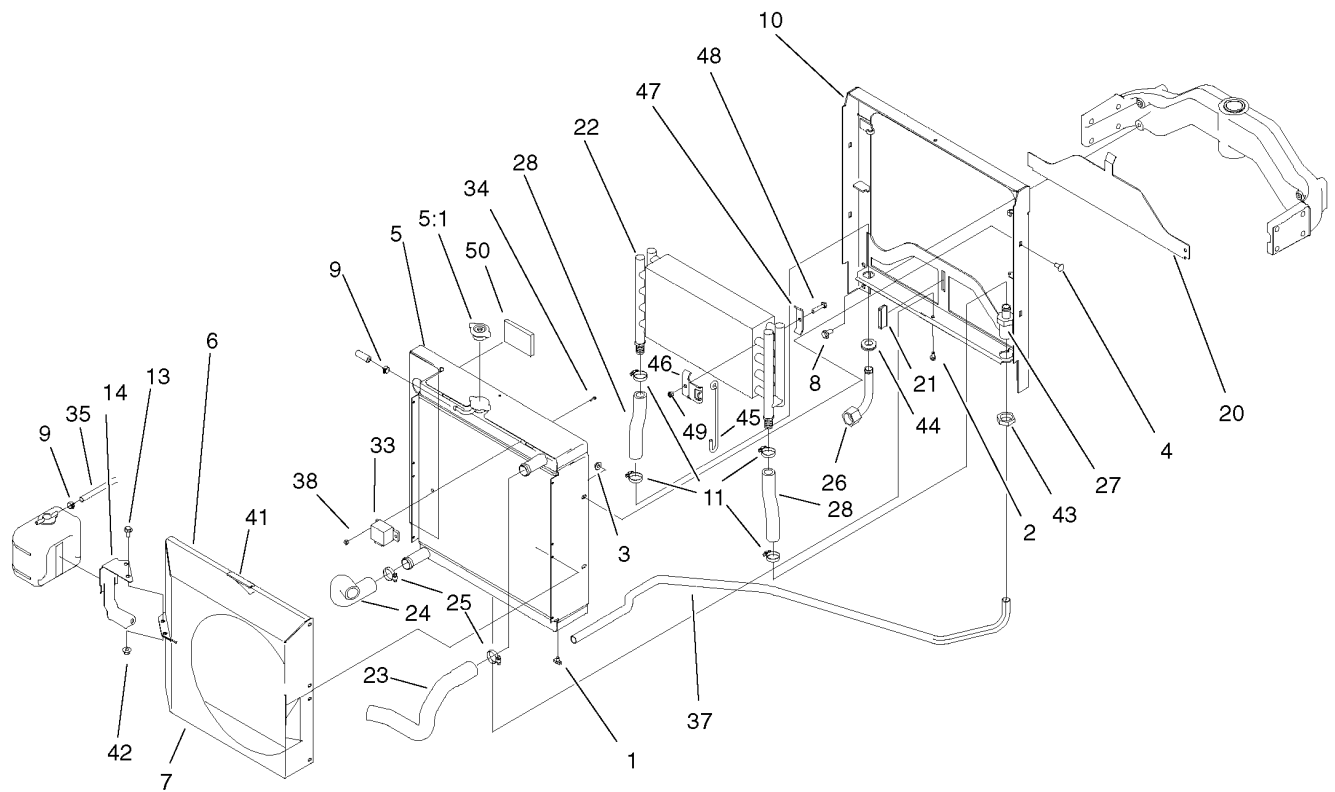 


**Water Overflow Bottle
is furnished with engine**

Radiator Assembly


Ref	Part No.	Qty.	Description
1	304-46	1	Draincock
2	32104-116	11	Screw
3	32128-44	4	Nut
4	3230-1	4	Screw-CARR
5	99-3637	1	Radiator
5:1	93-5957	1	Cap-Radiator
6	100-4885-03	1	Shroud-Fan, Top
7	100-4898-03	1	Shroud-Fan, Bottom
8	3234-1	4	Screw-HHF
9	92-2379	2	Clamp-Hose
10	104-4855-03	1	Frame ASM-Radiator
11	2412-129	4	Clamp-Hose
13	3234-5	2	Screw
14	100-4899-03	1	Bracket-Reservoir
20	95-8702-03	1	Shield-Radiator, Lower
21	99-3497	1	Magnet
22	100-4869	1	Cooler-Oil
23	104-0454	1	Hose-Radiator, Upper
24	100-4809	1	Hose-Radiator, Lower
25	2412-34	2	Clamp-Hose
26	99-3644	1	Filter Head Tube ASM
27	100-4925	1	Fitting-Bulkhead
28	99-3646	2	Hose-Cooler, Oil
33	66-8800	1	Relay

Ref	Part No.	Qty.	Description
34	32105-13	2	Screw-SHH
35	63-9640	1	Hose
37	100-4924	1	Tube ASM
38	32128-17	2	Nut-Lock, Flange
41	93-6681	1	Decal-Warning, Fan
42	32128-20	2	Nut-HF
43	340-126	1	Nut-Bulkhead
44	100-4866	1	Grommet
45	100-4858	2	Form-Wire
46	100-4859	2	Bracket-Cooler, Keeper
47	100-4860	2	Bracket-Clamp
48	322-17	2	Screw-HH
49	3296-47	2	Nut-Lock, NI
50	104-9459	4	Seal-Foam

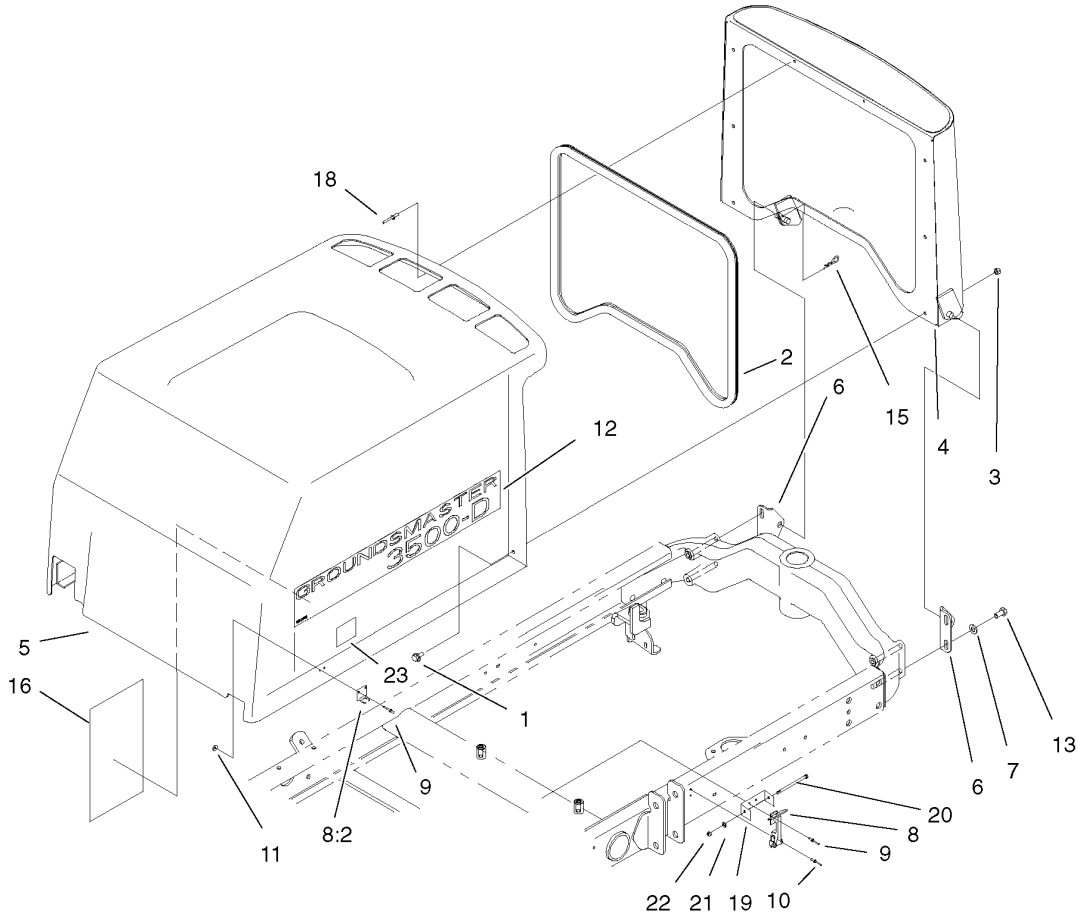 

Hood and Screen Assembly


Ref	Part No.	Qty.	Description				
1	3234-4	6	Screw-HHF				
2	100-4932	1	Trim-Seal				
3	3296-42	6	Nut-Lock, NI				
4	104-4853-03	1	Screen ASM-Hood				
5	100-4855	1	Hood				
6	95-8728	2	Bracket-Pivot, Hood				
7	3256-24	4	Washer-Flat				
8	59-9740	2	Flex Draw Latch ASM				
8:2	249-40	1	Keeper				
9	98-7310	4	Rivet				
10	3290-55	4	Rivet-Pop				
11	3269-10	4	Washer-Back				
12	104-0446	2	Decal				
13	323-4	4	Screw-HH				
15	3290-467	1	Pin-Hair				
16	104-4864	1	Decal-Service Instructions				
18	3269-21	2	Rivet-Pop				
19	99-3568	1	Bracket-Lock,Ce				
20	321-9	1	Screw-HH				
21	3256-22	1	Washer-Flat				
22	3296-42	1	Nut-Lock, NI				
23	100-6574	1	Decal-Warning				

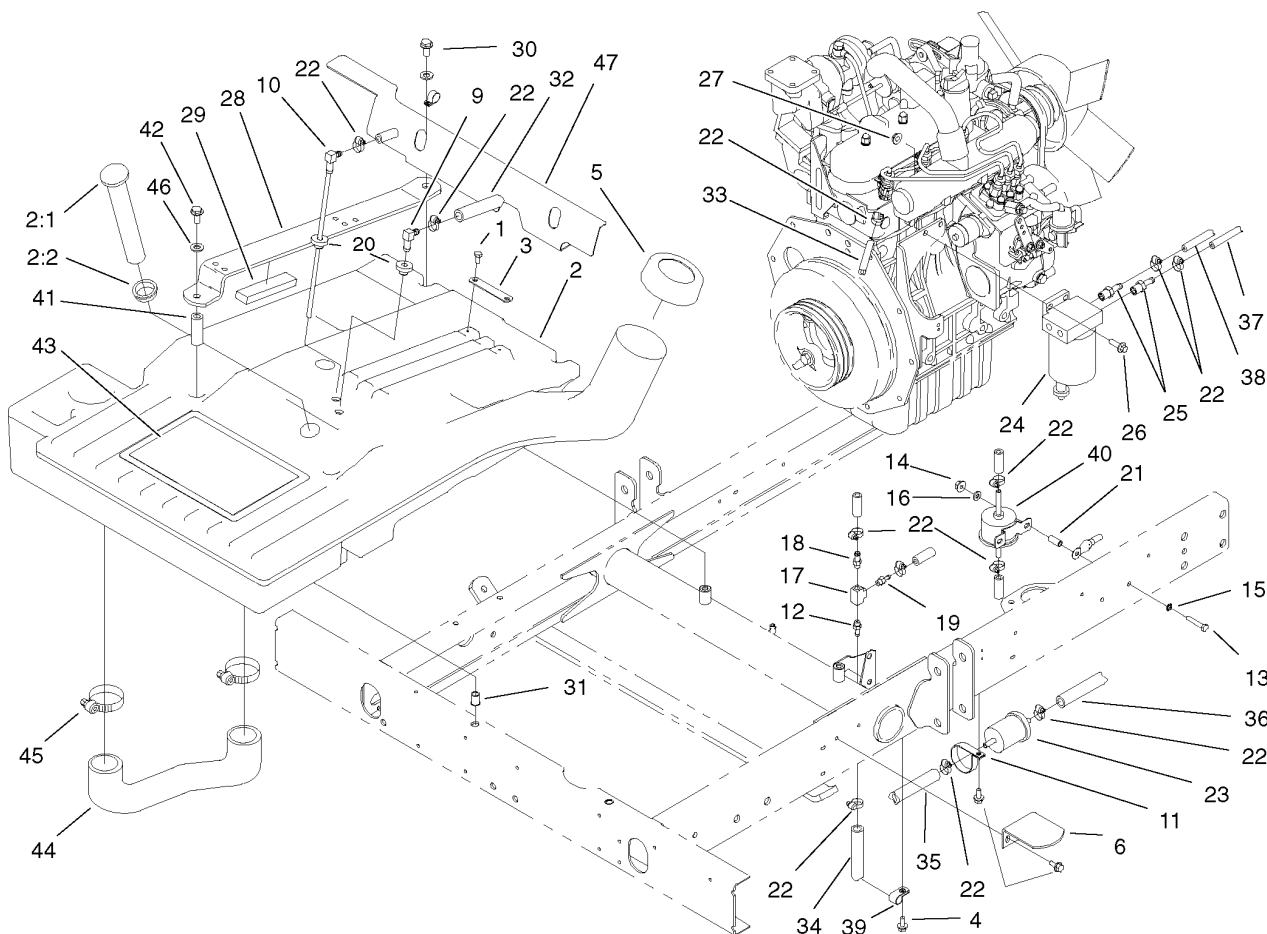 

Fuel System Assembly


Ref	Part No.	Qty.	Description
1	321-2	2	Screw-HH
2	105-7865	1	Tank-Fuel
2:1	95-8971	1	Guage-Fuel
2:2	95-8972	1	Grommet
3	95-8881	1	Strap-Line, Fuel
4	32144-10	4	Screw-HWH
5	95-4193	1	Diesel Gas Cap ASM
6	95-8968-03	1	Support-Tank, Fuel
9	46-6550	1	Fitting-HYD, 90Ø
10	66-8121	1	Standpipe
11	2412-148	1	Clamp-R
12	304-73	1	Connector-Hose
13	321-9	2	Screw-HH
14	32128-33	2	Nut-HF
15	3255-7	1	Washer-Lock/EXT
16	3256-22	2	Washer-Flat
17	354-20	1	Fitting-Tee
18	354-21	1	Fitting-Barb
19	354-22	1	Fitting-Barb
20	46-6560	2	Bushing
21	87-4710	2	Spacer-Brake, Parking
22	2412-108	13	Clamp-Worm
23	98-7612	1	Filter-Fuel
24	98-9305	1	Filter-Water/Fuel

Ref	Part No.	Qty.	Description
25	353-783	2	Fitting-Pump
26	3234-17	2	Screw-HHF
27	32128-44	2	Nut
28	104-0467-03	2	Strap-Support, Seat
29	95-8896	2	Foam
30	3234-11	2	Screw-HHF
31	32148-9	2	Insert-Nut
32	71-3380	1	Hose-Fuel
33	99-3498	1	Return-Line, Fuel
34	99-3185	1	Line-Fuel
35	71-3383	1	Hose-Fuel
36	19-3250	1	Hose-Line, Fuel
37	63-9640	1	Hose
38	104-4857	1	Hose-Fuel
39	2412-73	1	Clamp-R
40	99-3464	1	Pump-Fuel
41	104-0466	2	Spacer-Tube
42	323-14	2	Screw-HH
43	104-0484	1	Decal
43	99-3560	1	Decal-Danger, Ce
44	105-4094	1	Hose-Formed
45	2412-129	2	Clamp-Hose
46	3256-24	2	Washer-Flat
47	104-4833-03	1	Shield-Heat

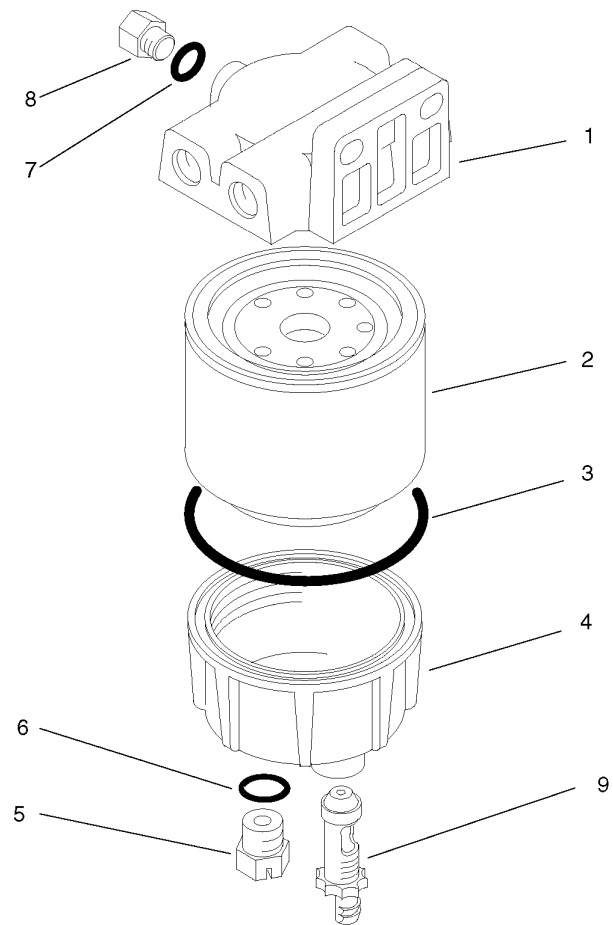 

Water / Fuel Filter Assembly No. 98-9305


Ref	Part No.	Qty.	Description				
1	98-9772	1	Head-Filter				
2	98-9764	1	Element-On, Spin				
3	98-9774	1	O-Ring-Base, Filter				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Head, Filter				
9	98-9777	1	Drain Valve ASM				

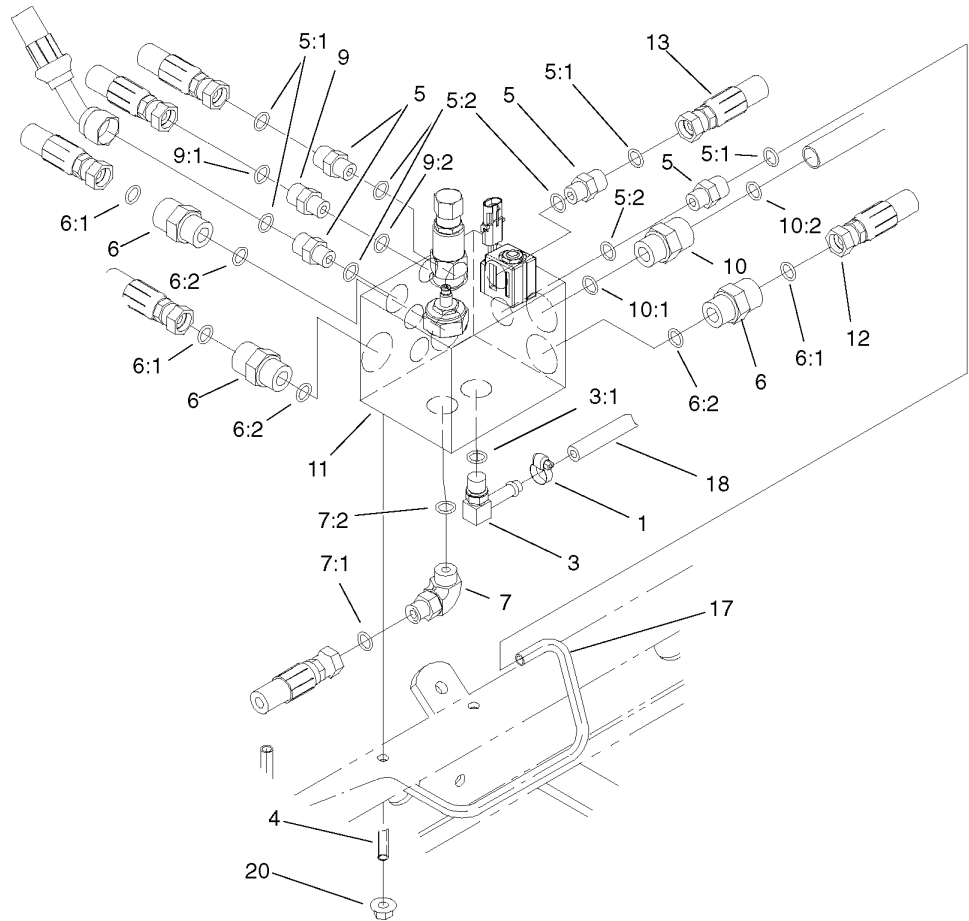 

Manifold Block Installation Assembly


Ref	Part No.	Qty.	Description
1	2412-36	1	Clamp-Hose
3	100-4887	1	Fitting-Barb
3:1	237-42	1	O-Ring
4	104-0430	2	Stud
5	340-2	4	Fitting-HYD, Straight
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	340-7	3	Adapter
6:1	237-65	1	O-Ring
6:2	237-80	1	O-Ring
7	340-77	1	Fitting-HYD, 90Ø
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
9	340-88	1	Adapter
9:1	237-22	1	O-Ring
9:2	237-78	1	O-Ring
10	340-66	1	Fitting-HYD
10:1	237-80	1	O-Ring
10:2	237-58	1	O-Ring
11	104-4876	1	Manifold ASM
12	104-0488	1	Hose ASM
13	100-4889	1	Hose ASM
17	100-4827	1	Tube ASM
18	80-7342	1	Hose ASM

Ref	Part No.	Qty.	Description
20	32128-20	2	Nut-HF

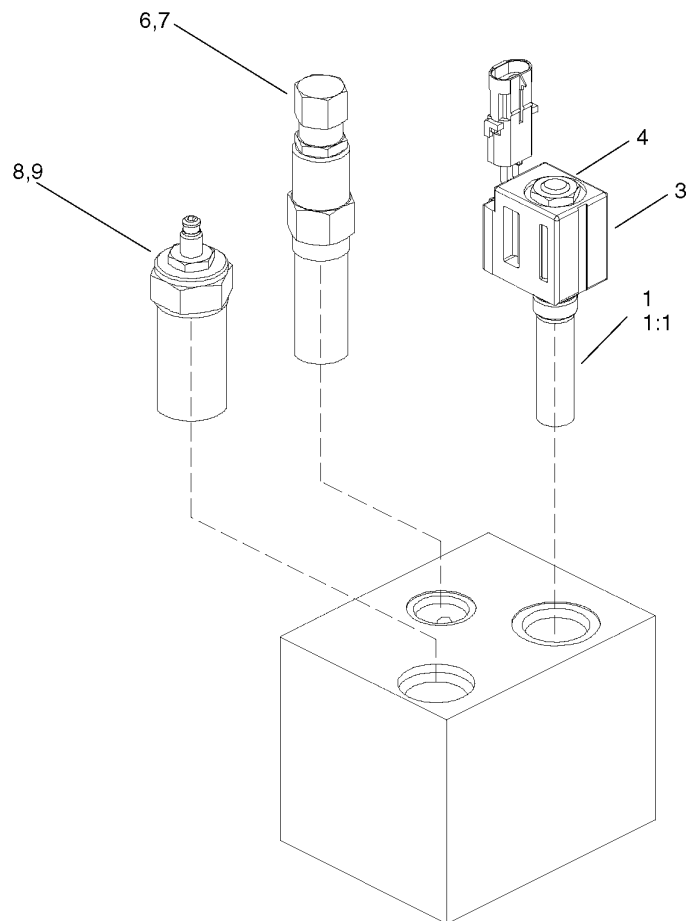 

Manifold Block Assembly No. 104-4876


Ref	Part No.	Qty.	Description				
1	104-4877	1	Cartridge ASM				
1:1	104-4879	1	Seal Kit				
3	104-4878	1	Solenoid				
4	104-4882	1	Nut-Solenoid				
6	104-4267	1	Cartridge-Logic				
7	104-4268	1	Kit-Seal				
8	104-4269	1	Valve-Braking				
9	104-4270	1	Kit-Seal				

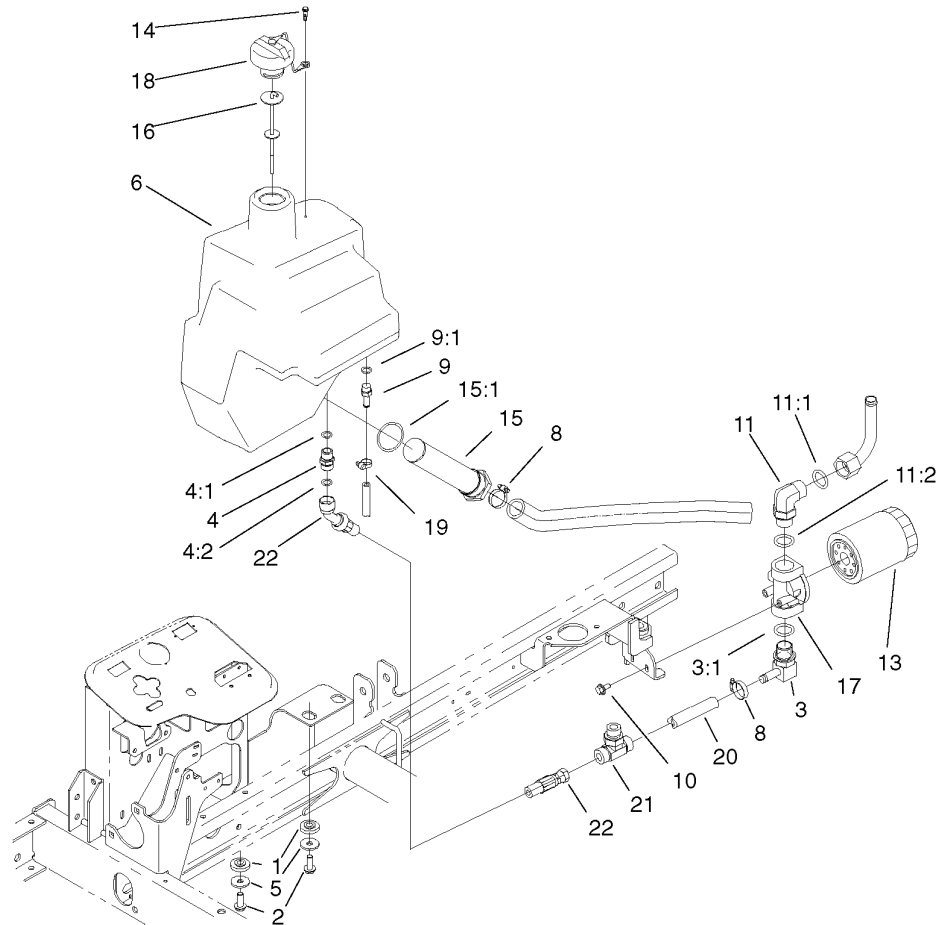 

Hydraulic Tank Assembly

Ref	Part No.	Qty.	Description
1	240-11	4	Grommet-Mount, Tank
2	3234-11	4	Screw-HHF
3	353-987	1	Fitting-HYD, 90Ø
3:1	237-81	1	O-Ring
4	100-4890	1	Fitting-Check
4:1	237-79	1	O-Ring
4:2	237-30	1	O-Ring
5	63-8410	4	Washer
6	104-4840	1	Tank-HYD
8	2412-34	2	Clamp-Hose
9	353-979	1	Fitting-Barb, Straight
9:1	237-42	1	O-Ring
10	3234-13	2	Screw-HHF
11	340-142	1	Elbow-90Ø
11:1	237-58	1	O-Ring
11:2	237-81	1	O-Ring
13	86-3010	1	Filter-Oil, Transmission
14	57-5420	1	Screw-Shoulder
15	104-7546	1	Strainer-Tank
15:1	340-136	1	O-Ring
16	75-3710	1	Dipstick
17	92-5821	1	Filter Head ASM
18	93-7160	1	Cap-Oil, HYD
19	2412-36	1	Clamp-Hose

Ref	Part No.	Qty.	Description
20	104-0486	1	Hose ASM
21	104-4836	1	Fitting-Tee
22	104-0487	1	Hose ASM

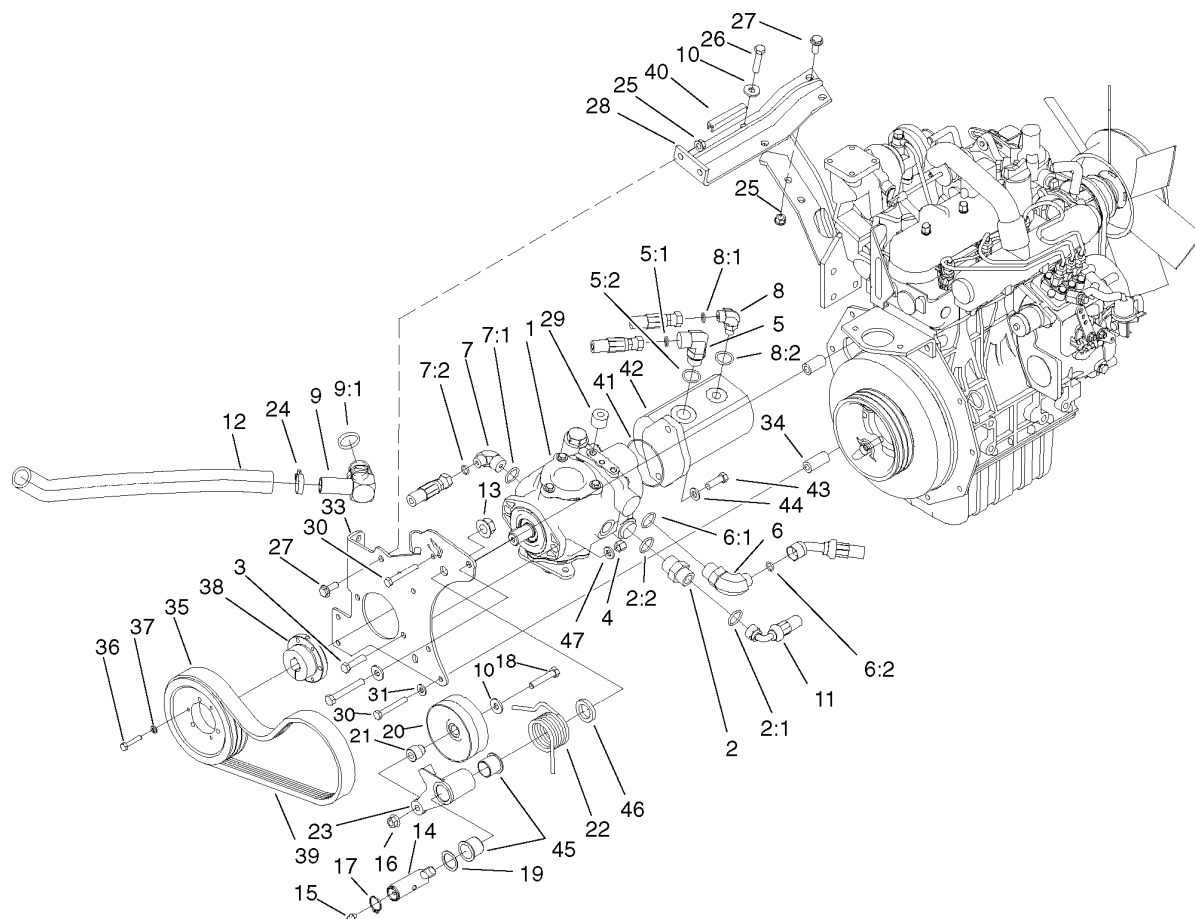 


Hydrostat Assembly

Ref	Part No.	Qty.	Description
1	104-4832	1	Pump-Piston
2	340-8	1	Adapter
2:1	237-65	1	O-Ring
2:2	237-81	1	O-Ring
3	323-8	2	Screw-HH
4	3296-39	2	Nut-Lock, NI
5	340-17	1	Adapter
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	340-139	1	Fitting-HYD, 90Ø
6:1	237-81	1	O-Ring
6:2	237-65	1	O-Ring
7	340-18	1	Fitting-HYD, 90Ø
7:1	237-79	1	O-Ring
7:2	237-22	1	O-Ring
8	340-77	1	Fitting-HYD, 90Ø
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-3502	1	Fitting-Elbow
9:1	237-81	1	O-Ring
10	80-6990	3	Washer-Hardened
11	105-1214	1	Hose ASM
12	104-5486	1	Hose
13	32128-54	1	Nut-Flange

Ref	Part No.	Qty.	Description
14	99-3624	1	Shaft-Pivot, Idler
15	302-5	1	Fitting-Grease
16	32128-21	1	Nut-HF
17	32151-36	1	Ring-Retaining
18	323-10	1	Screw-HH
19	74-1810	1	Washer
20	99-3621	1	Pulley-Idler
21	99-3622	1	Spacer-Idler
22	100-4844	1	Spring-Torsion
23	99-3623-03	1	Arm-Idler
24	2412-34	1	Clamp-Hose
25	32128-43	4	Nut-Flange
26	323-19	2	Screw-HH
27	3234-11	4	Screw-HHF
28	99-3436-03	1	Support-Pump
29	99-3440	2	Spacer
30	33114-060	4	Screw-HH
31	87-8640	3	Washer-Flat
33	95-8933-03	1	Plate-Mount, Pump
34	95-8941	4	Spacer-Mount, Pump
35	99-3620	1	Pulley-3V, Pump
36	321-13	3	Screw-HH
37	3253-3	3	Washer-Lock
38	100-4813	1	Bushing-Lock, Taper

 
33

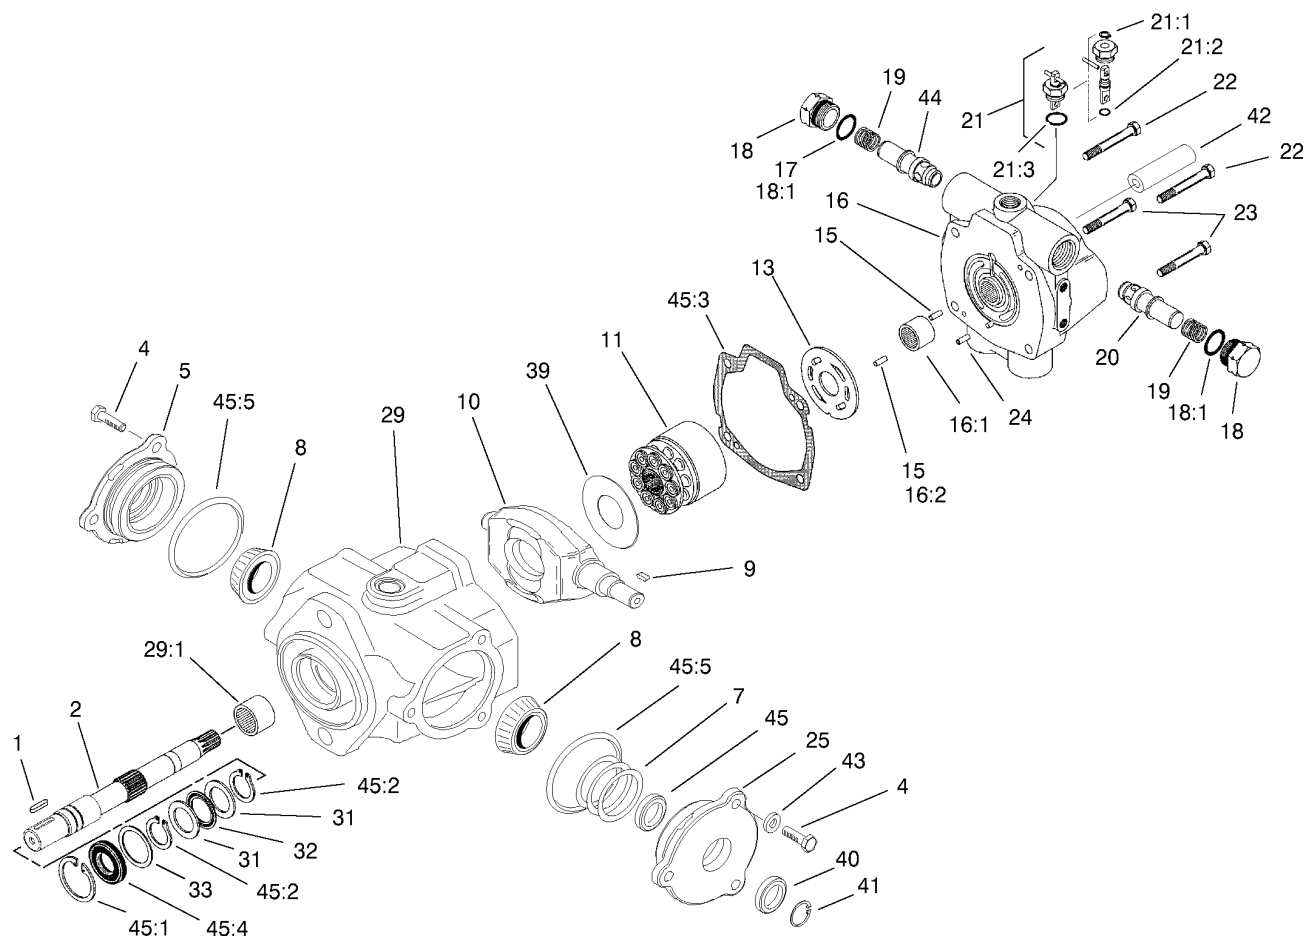

Piston Pump Assembly No. 104-4832

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	94-3645	1	Key	23	76-6160	2	Capscrew
2	94-6359	1	Shaft-Drive	●24		1	Pin-Roll
4	98-4640	6	Screw-Cap	25	98-4645	1	Cover Plate ASM
5	98-4633	1	Cover Plate ASM	29	100-3176	1	Housing ASM
7	100-3182	1	Kit-Shim	29:1	94-6363	1	Bearing
8	98-4639	2	Bearing-Cone	31	252-71	2	Washer Thrust 1.010Id 1.552 Od .09Wd
9	94-3646	1	Key	32	252-66	1	Bearing-Thrust
10	99-3520	1	Plate-Cam	33	33-3720	1	Washer
11	76-6070	1	Kit-Rotating	39	98-4635	1	Insert-Plate, Cam
13	104-0429	1	Plate-Cam	●40		1	Seal-Shaft
15	76-6150	2	Pin-Dowel	●41		1	Ring-Retaining
16	100-3177	1	Back Plate ASM	42	74-9040	1	Coupler
16:1	94-6368	1	Bearing	43	95-6055	6	Washer
●16:2		1	Pin-Roll	44	104-4837	1	Relief Valve ASM
●17		4	O-Ring	45	104-4868	1	Seal Repair Kit
18	70-1240	2	Plug ASM	45:1	32151-13	1	Ring-Retaining
18:1	60-5980	1	O-Ring	45:2	32151-29	1	Ring-Retaining
19	76-6200	2	Spring	45:3	33-4930	1	Gasket-Housing
20	94-3644	1	Seat	45:4	104-4861	1	Seal-Shaft
21	100-3181	1	Dump Valve ASM	45:5	100-3179	1	O-Ring
●21:1		1	Ring-Retaining				
●21:2		1	O-Ring				
●21:3		1	O-Ring				
22	76-6170	2	Capscrew				

 35

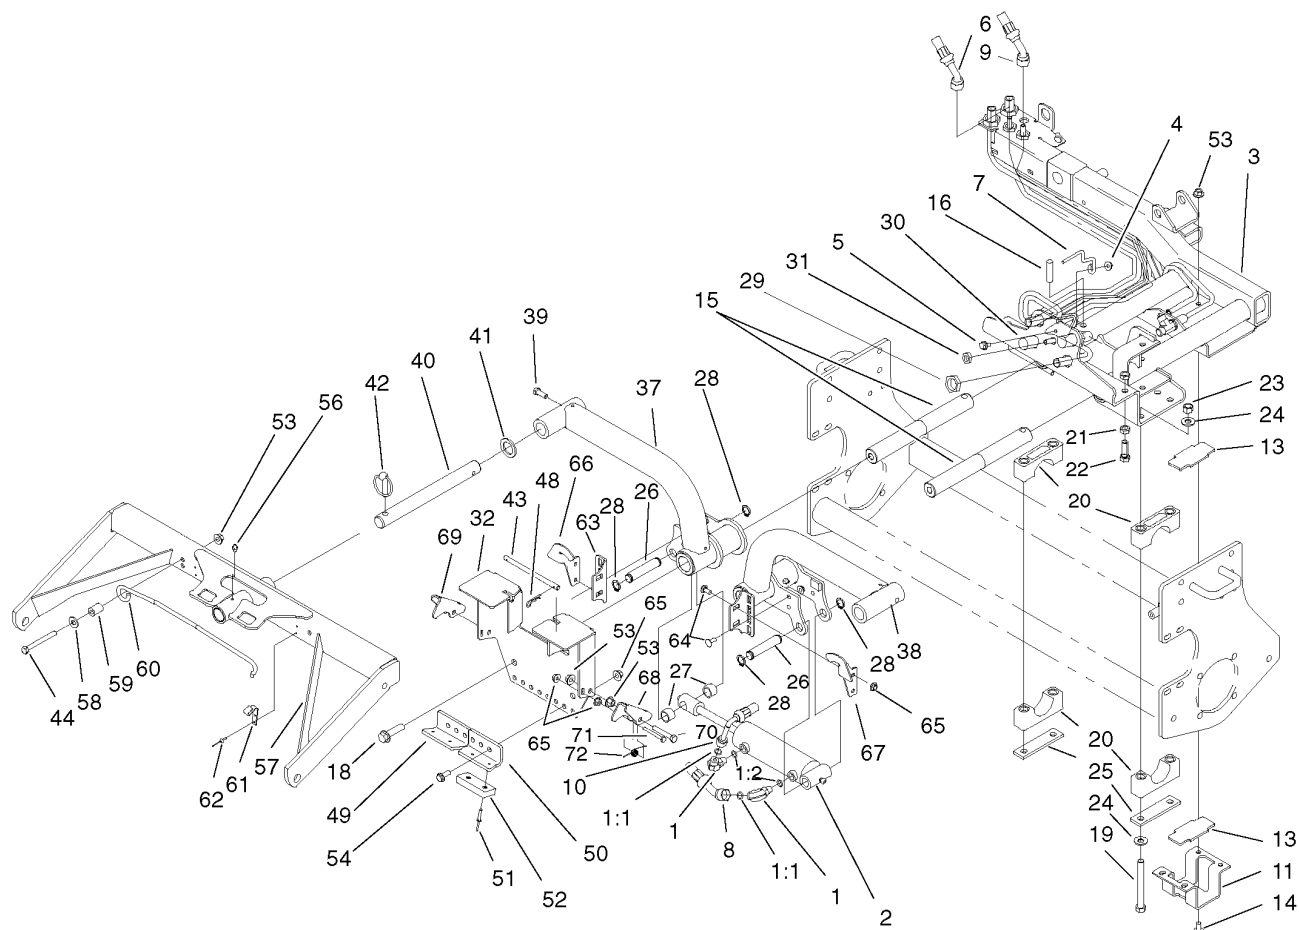


Carrier Assembly

Ref	Part No.	Qty.	Description
1	340-77	2	Fitting-HYD, 90°
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
2	95-8978	1	Cylinder-HYD
3	100-4939-03	1	Sidewinder Carrier ASM
4	32128-33	1	Nut-HF
5	3234-4	1	Screw-HHF
6	95-8822	1	Hose ASM
7	99-3433	1	Wire-Center
8	104-0405	1	Hose ASM
9	95-8821	1	Hose ASM
10	104-0406	1	Hose ASM
11	104-0416-03	1	Bracket-Slide
13	104-0417	2	Slide-Plastic
14	3234-1	4	Screw-HHF
15	95-8531	2	Shaft-Pivot, Liftarm
16	32121-122	2	Pin-Roll
18	3234-27	2	Screw-Flange
19	325-38	8	Screw-HH
20	95-8609	8	Cap-Bearing
21	3218-5	4	Nut-Jam
22	325-6	2	Screw-HH
23	3296-23	8	Nut-Lock, NI
24	87-7270	16	Washer-Thrust

Ref	Part No.	Qty.	Description
25	99-3373	4	Bar-Support, Slide
26	95-8575	2	Pin
27	75-9590	2	Spacer-Cylinder
28	32120-93	4	Ring-Retaining
29	340-74	4	Locknut-Bulkhead
30	99-3640	1	Tube ASM
31	340-78	1	Locknut-Bulkhead
32	104-4820-03	1	Bracket-Stop, Carrier
37	104-0481	1	RH Liftarm ASM
38	104-0482	1	LH Liftarm ASM
39	323-6	2	Screw-HH
40	95-8979	2	Shaft
41	3-6781	2	Washer-Thrust
42	283-71	2	Pin-Lynch
43	104-0472	1	Rod
44	323-15	2	Screw-HH
48	3290-467	2	Pin-Hair
49	104-4639-03	1	Stop-Deck, LH
50	104-4640-03	1	Stop-Deck, RH
51	3269-11	4	Rivet
52	86-5350	2	Bumper-Rubber
53	32128-43	14	Nut-Flange
54	3234-11	4	Screw-HHF
56	302-5	2	Fitting-Grease

 
37

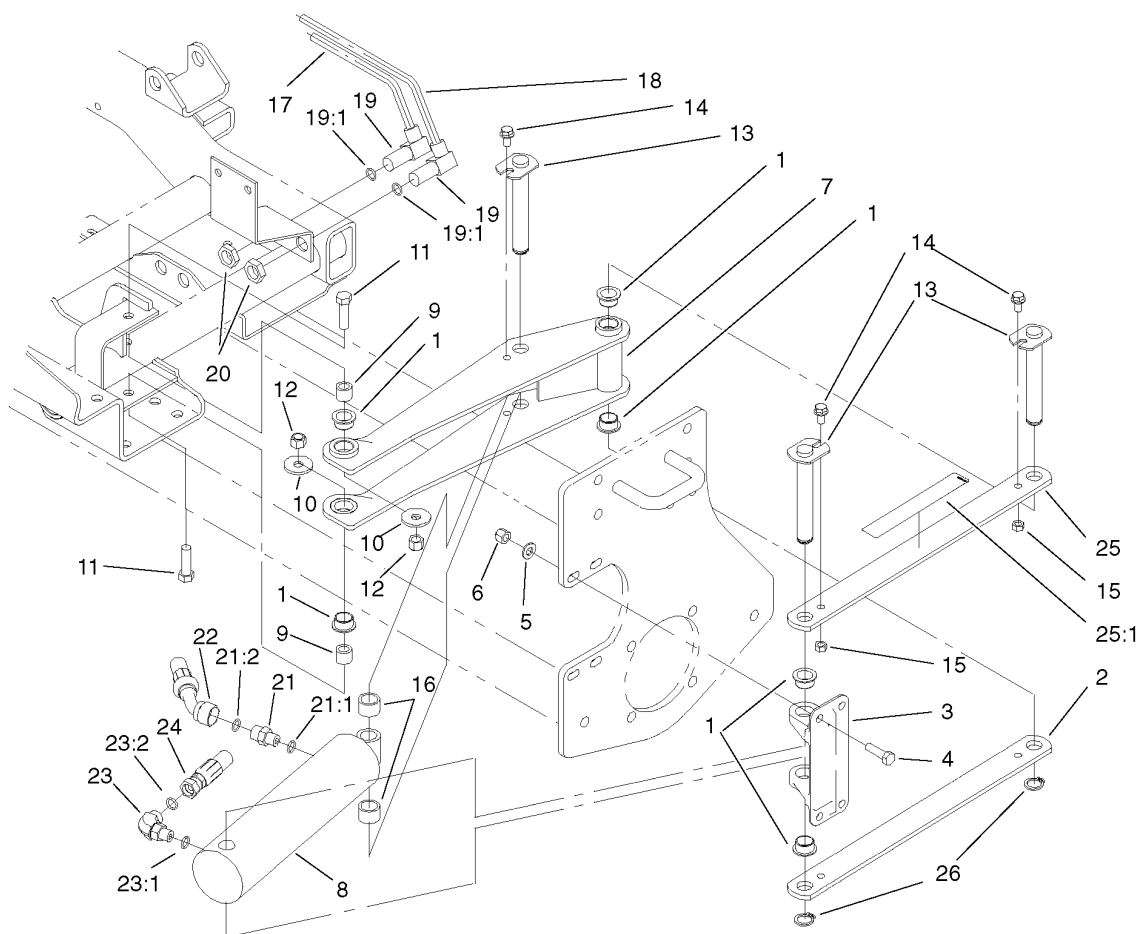

Scissor Assembly


Ref	Part No.	Qty.	Description
1	95-8526	6	Bushing-Plastic
2	95-8527-03	1	Link-Scissor
3	95-8883	1	Mount-Scissor
4	323-7	4	Screw-HH
5	3256-24	4	Washer-Flat
6	3296-39	4	Nut-Lock, NI
7	95-8521-03	1	Frame-Scissor
8	95-8512	1	Cylinder-HYD
9	95-8603	2	Spacer
10	87-5330	2	Washer
11	324-6	2	Screw-HH
12	3296-48	2	Nut-Lock NI
13	95-8529	3	Pin
14	3234-14	3	Screw-HHF
15	32152-1	3	Nut-Lock, NI
16	46-6350	2	Spacer
17	95-8790	1	Tube ASM
18	95-8791	1	Tube ASM
19	340-154	2	Union-Bulkhead
19:1	237-22	2	O-Ring
20	340-70	2	Locknut-Bulkhead
21	85-9720	1	Fitting-Orificed
21:1	237-78	1	O-Ring
21:2	237-21	1	O-Ring

Ref	Part No.	Qty.	Description
22	95-8838	1	Hose ASM
23	340-132	1	Fitting-HYD, 90°
23:1	237-78	1	O-Ring
23:2	237-21	1	O-Ring
24	95-8839	1	Hose ASM
25	99-3505	1	Scissors Link ASM
25:1	94-3353	1	Decal-Point, Pinch
26	32120-93	2	Ring-Retaining

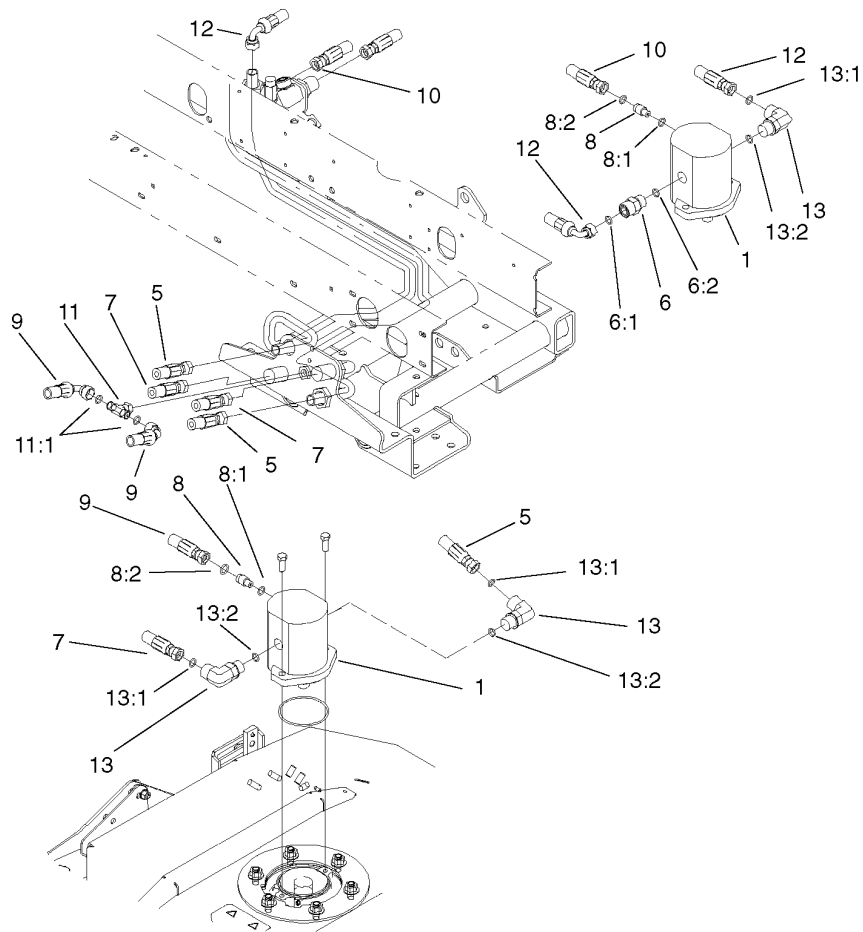 


Deck Motor Assembly

Ref	Part No.	Qty.	Description				
1	99-6104	3	Motor-HYD				
2*1:2	99-6105	1	Kit-Seal				
2*1:3	98-5185	1	Bit-Flange/Valve, Back				
2*1:4	98-5191	1	Kit-Valve, Relief				
5	105-1216	2	Hose ASM				
6	340-7	1	Adapter				
6:1	237-65	1	O-Ring				
6:2	237-80	1	O-Ring				
7	105-1215	2	Hose ASM				
8	340-92	3	Fitting-Straight, HYD				
8:1	237-78	1	O-Ring				
8:2	237-21	1	O-Ring				
9	104-1080	2	Hose ASM				
10	100-4876	1	Hose ASM				
11	99-3477	1	Fitting-Tee				
11:1	237-42	2	O-Ring				
12	100-4880	2	Hose ASM				
13	340-17	5	Adapter				
13:1	237-65	1	O-Ring				
13:2	237-80	1	O-Ring				

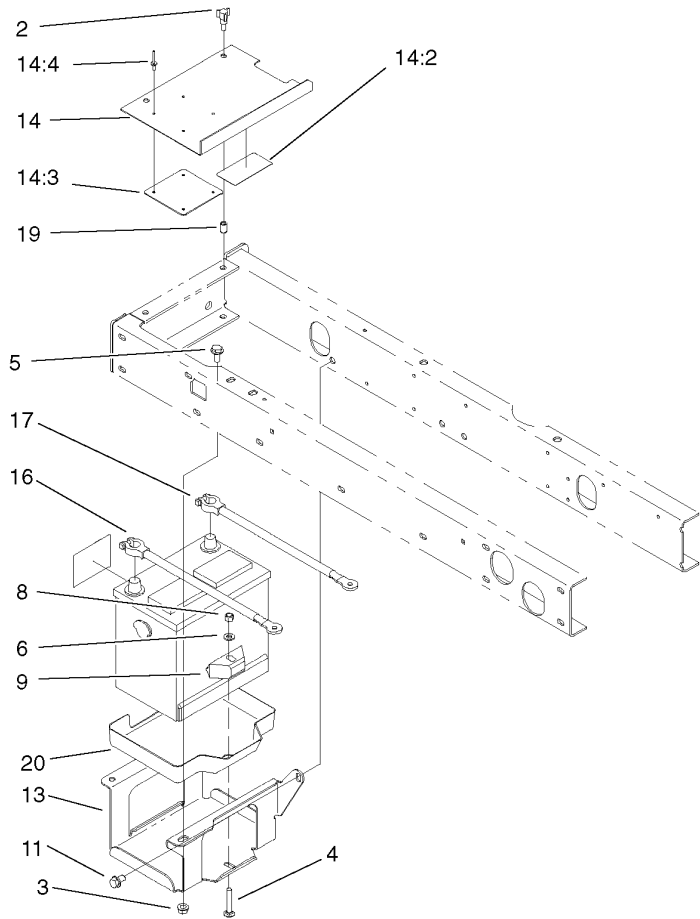 


Battery Assembly

Ref	Part No.	Qty.	Description				
2	233-70	2	Knob-3 Star				
3	32128-43	3	Nut-Flange				
4	3230-6	1	Screw-CARR				
5	3234-1	3	Screw-HHF				
6	3256-23	1	Washer-Flat				
8	3296-29	1	Nut-Lock, NI				
9	66-2490	1	Retainer-Battery				
11	32144-15	1	Screw				
13	95-8796-03	1	Support-Battery				
14	99-3602	1	Cover-Battery				
14:2	93-7276	1	Decal-Danger				
14:3	87-7620	1	Shield-Terminal, Battery				
14:4	3269-27	4	Rivet-Snap				
16	95-8853	1	Cable-Battery, Positive				
17	95-8854	1	Cable-Battery, Negative				
19	32148-6	2	Nut-Insert				
20	99-3513	1	Tray-Battery				

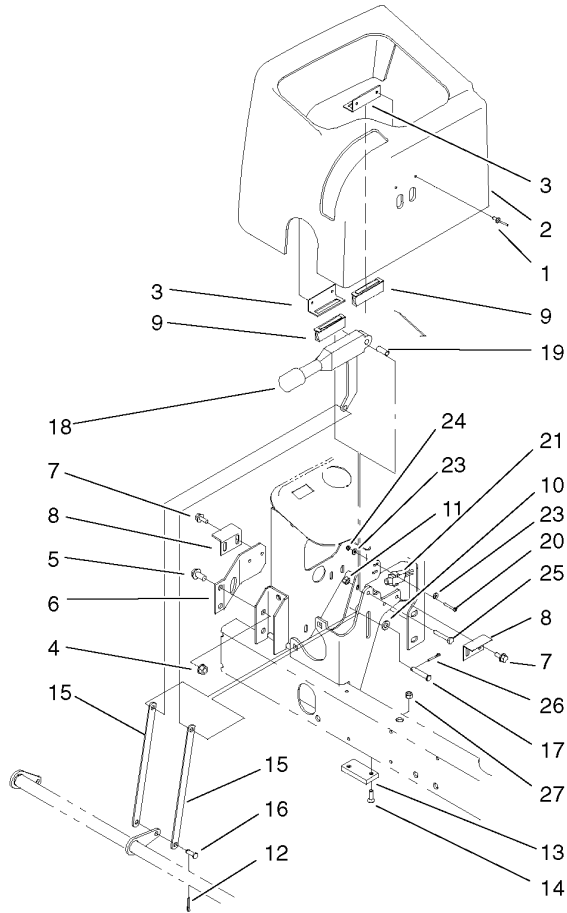 


Parking Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3269-5	4	Rivet	26	3272-6	1	Pin-Cotter
2	95-8707	1	Cover-Dash	27	32128-32	2	Nut-HHF
3	95-8763	2	Bracket-Hold Down, Cover				
4	32128-43	2	Nut-Flange				
5	3234-1	2	Screw-HHF				
6	95-8764-03	1	Support-Magnet				
7	32144-10	4	Screw-HWH				
8	95-8765	2	Bracket-Strike, Magnet				
9	58-4250	2	Catch-Magnetic				
10	3256-23	1	Washer-Flat				
11	3296-42	1	Nut-Lock, NI				
12	3272-10	1	Pin-Cotter				
13	95-8684	1	Pad-Bumper				
14	3289-4	2	Screw-FH				
15	104-4628-03	2	Link-Brake, Parking				
16	283-62	1	Pin-Clevis				
17	94-3829	1	Pin-Clevis				
18	104-4817	1	Lever-Brake				
19	87-4710	1	Spacer-Brake, Parking				
20	32105-9	2	Screw				
21	95-8900	1	Switch				
23	3256-21	4	Washer-Flat				
24	3296-9	2	Nut-Lock NI				
25	321-10	1	Screw-HH				

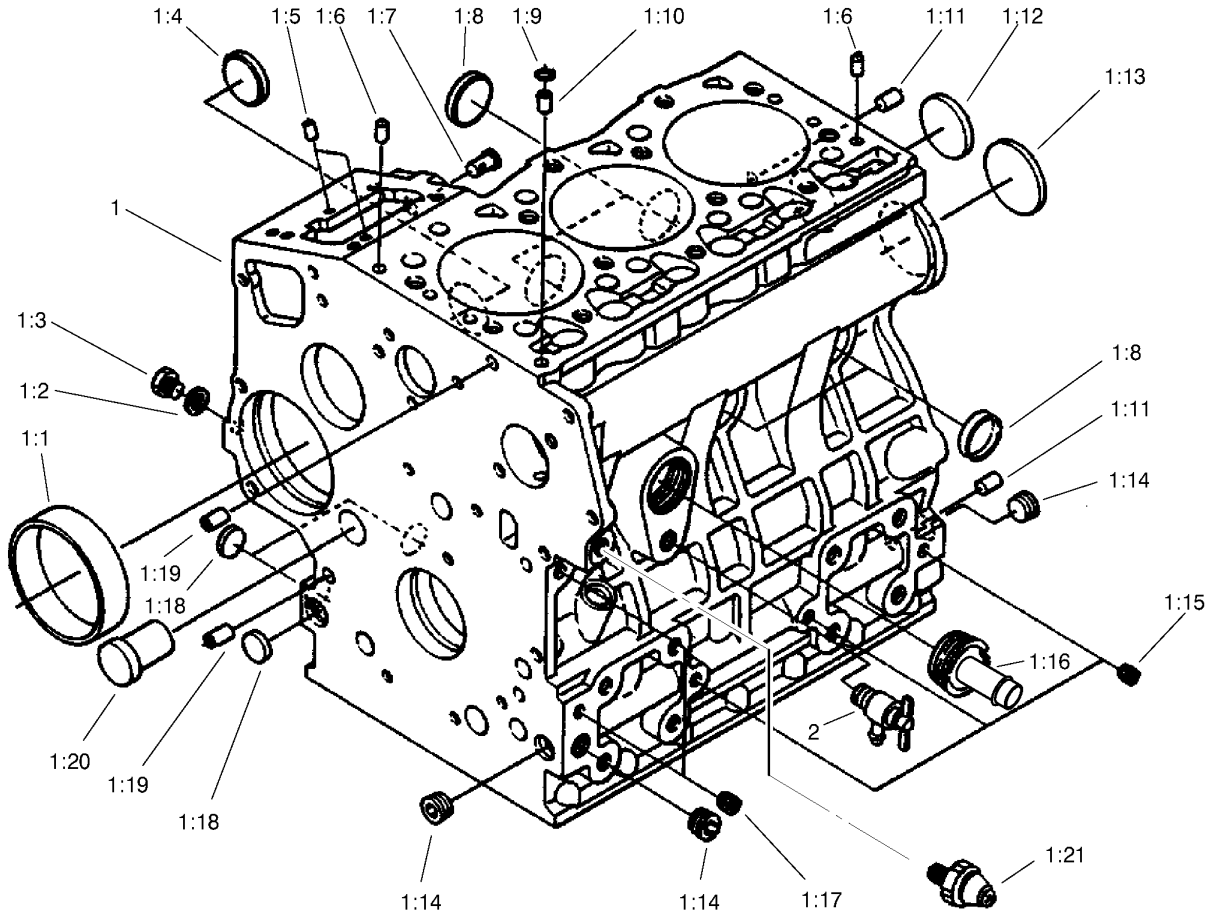 


Crankcase Assembly

Ref	Part No.	Qty.	Description				
1	99-8300	1	Crankcase ASM				
1:1	98-9656	1	Bushing-Governor, Gear				
1:2	98-7428	1	Gasket				
1:3	98-7507	1	Plug				
1:4	98-9599	1	Plug				
1:5	98-9375	2	Pin-Straight				
1:6	98-9376	2	Pin-Straight				
1:7	98-9630	1	Pin-Spring, Start				
1:8	98-9398	4	Cap-Sealing				
1:9	98-7509	1	O-Ring				
1:10	98-9539	1	Pin-Pipe				
1:11	98-9377	2	Pin-Straight				
1:12	98-7539	1	Cap-Sealing				
1:13	98-9668	1	Plug				
1:14	98-9597	3	Plug				
1:15	98-7540	3	Cap-Sealing				
1:16	99-8347	1	Joint-Pipe, Drain				
1:17	98-7487	2	Plug				
1:18	98-9379	3	Plug				
1:19	98-9387	2	Pin-Pipe				
1:20	98-9675	1	Plug				
1:21	98-9416	1	Switch-Oil				
2	98-9436	1	Drain Cock ASM				

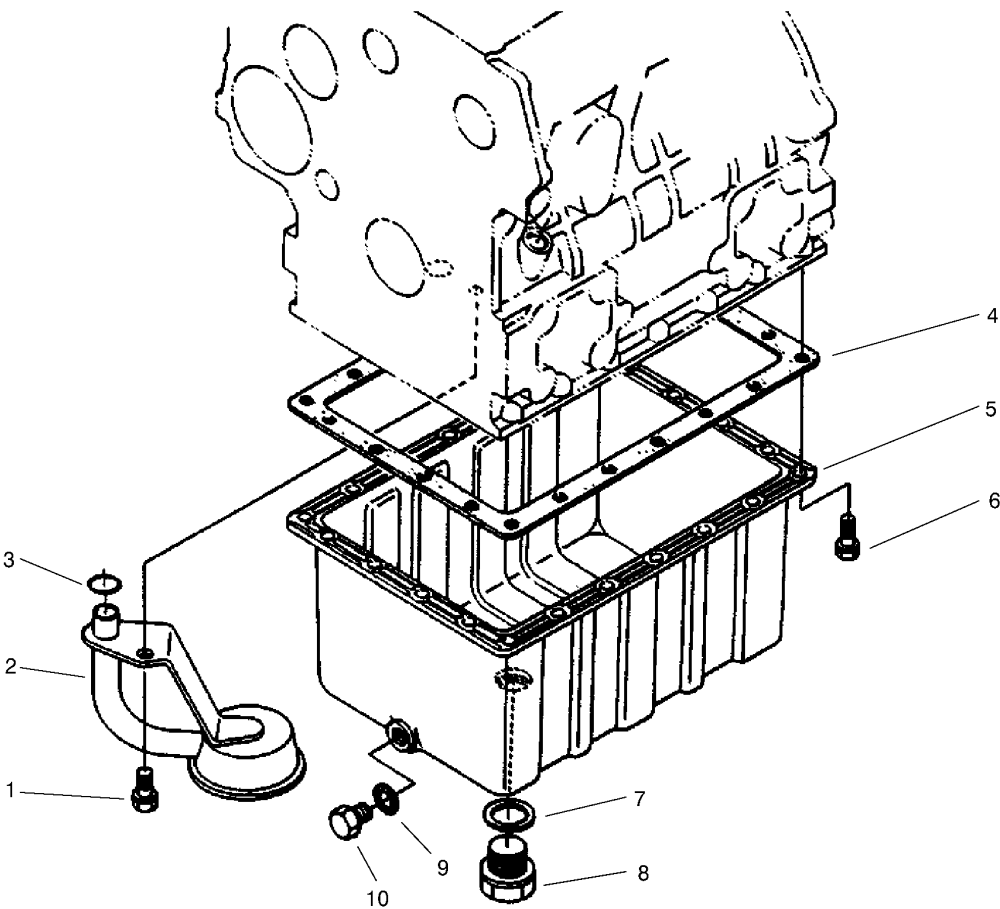 


Oil Pan Assembly

Ref	Part No.	Qty.	Description				
1	98-9358	1	Bolt				
2	98-9538	1	Filter-Oil				
3	98-7527	1	O-Ring				
4	98-9646	1	Gasket-Pan, Oil				
5	98-9685	1	Drain-Oil				
6	98-9350	22	Bolt				
7	98-9399	1	Gasket				
8	98-7523	1	Plug-Drain				
9	98-7524	1	Gasket				
10	98-9386	1	Plug				

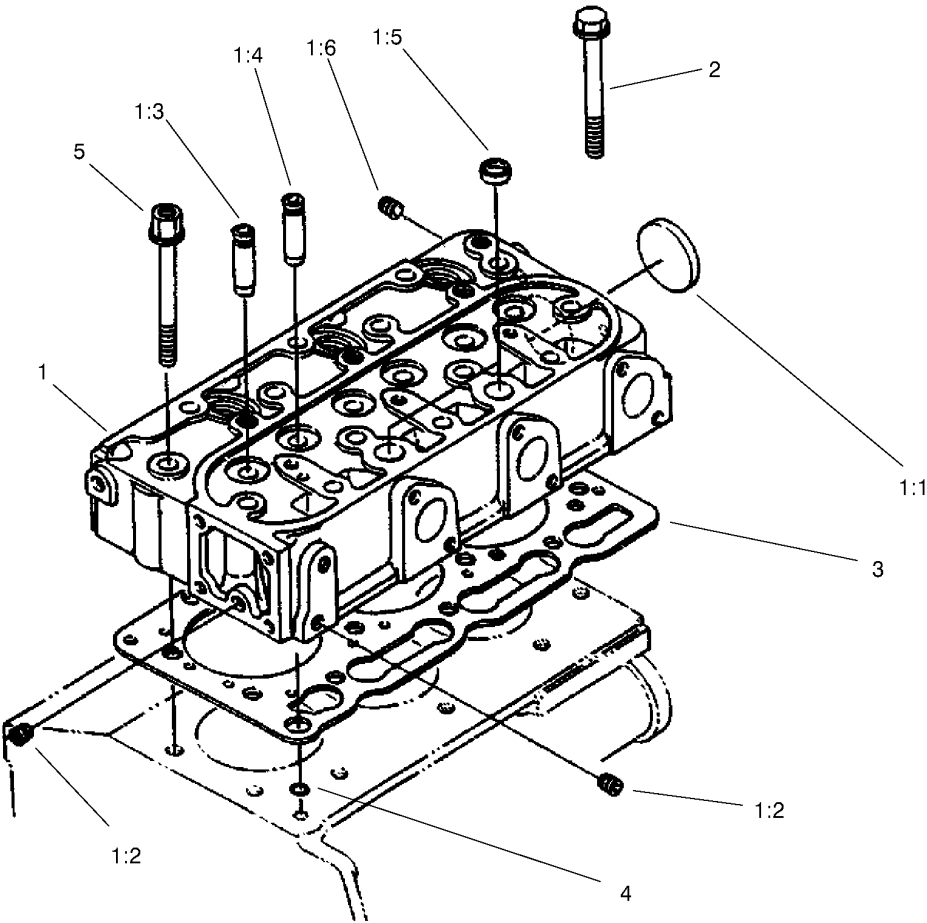 

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
1	99-8344	1	Cylinder Head ASM				
1:1	98-9395	1	Cap-Sealing				
1:2	98-7540	2	Cap-Sealing				
1:3	98-9499	3	Guide-Valve, Inlet				
1:4	98-9500	3	Guide-Valve, Exhaust				
1:5	98-9389	2	Cap-Sealing				
1:6	98-9444	1	Plug				
2	98-9479	12	Bolt-Head, Cylinder				
3	98-9613	1	Gasket-Head, Cylinder				
4	98-7509	1	O-Ring				
5	98-9647	2	Bolt-Head, Cylinder				

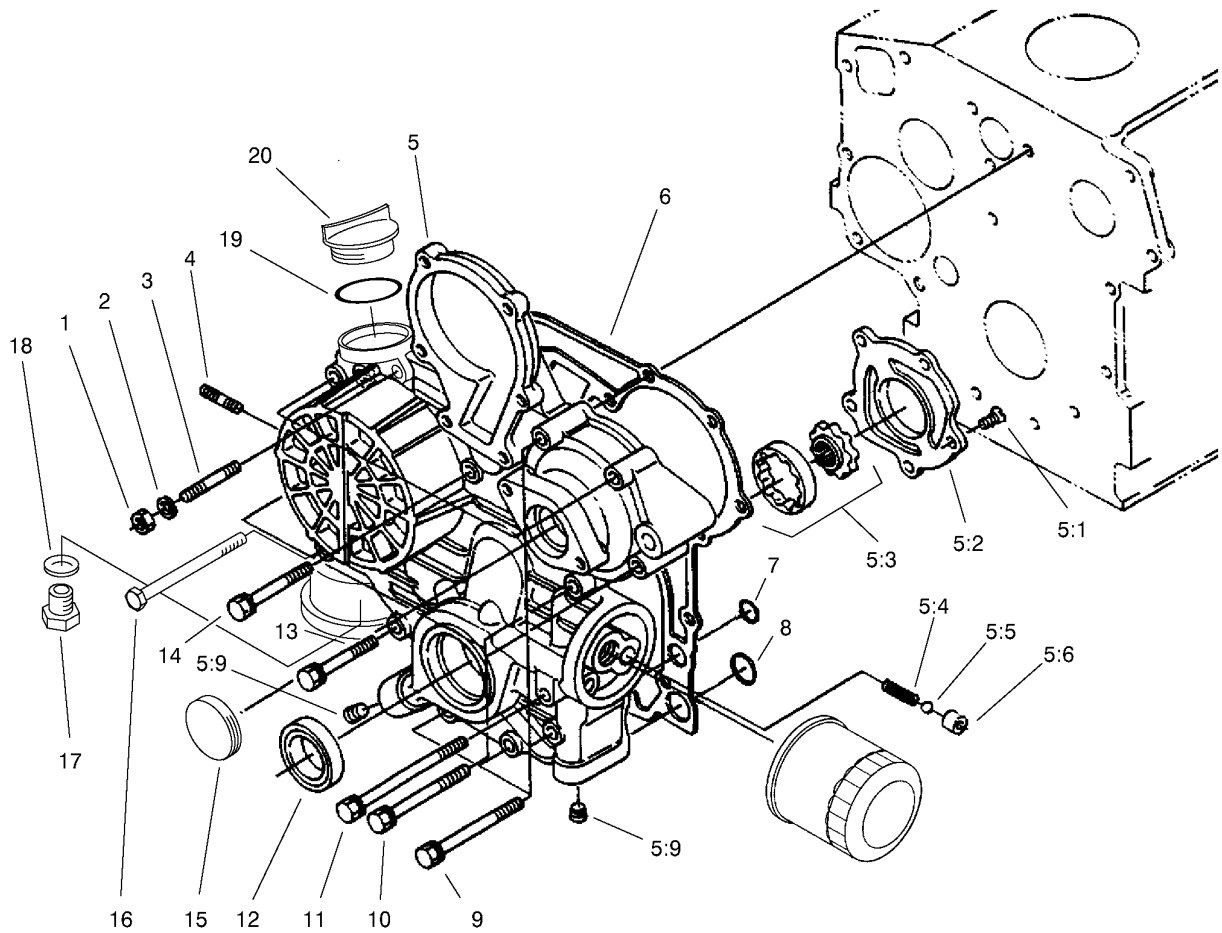 

Grease and Oil Filter Assembly


Ref	Part No.	Qty.	Description
1	98-7572	1	Nut
2	98-9367	1	Washer-Spring
3	98-9363	1	Stud
4	98-9362	2	Stud
5	99-3462	1	Gear Case ASM
5:1	98-9592	5	Screw
5:2	98-9541	1	Cover-Pump, Oil
5:3	98-9540	1	Oil Pump Rotor ASM
5:4	98-9544	1	Spring
5:5	98-9380	1	Ball
5:6	98-9543	1	Seat-Valve
5:9	98-9598	2	Plug
6	98-9633	1	Gasket-Case, Gear
7	98-9372	2	O-Ring
8	98-7547	2	O-Ring
9	98-9356	2	Bolt
10	98-9355	6	Bolt
11	99-3510	2	Bolt
12	98-9482	1	Seal-Oil
13	98-9437	1	Bolt
14	98-7496	3	Bolt
15	99-3515	1	Plug-Gearcase
16	99-3511	1	Bolt
17	99-3450	2	Plug

Ref	Part No.	Qty.	Description
18	99-3451	1	Plug-Packing
19	98-7430	1	O-Ring
20	98-9449	1	Plug-Filler, Oil

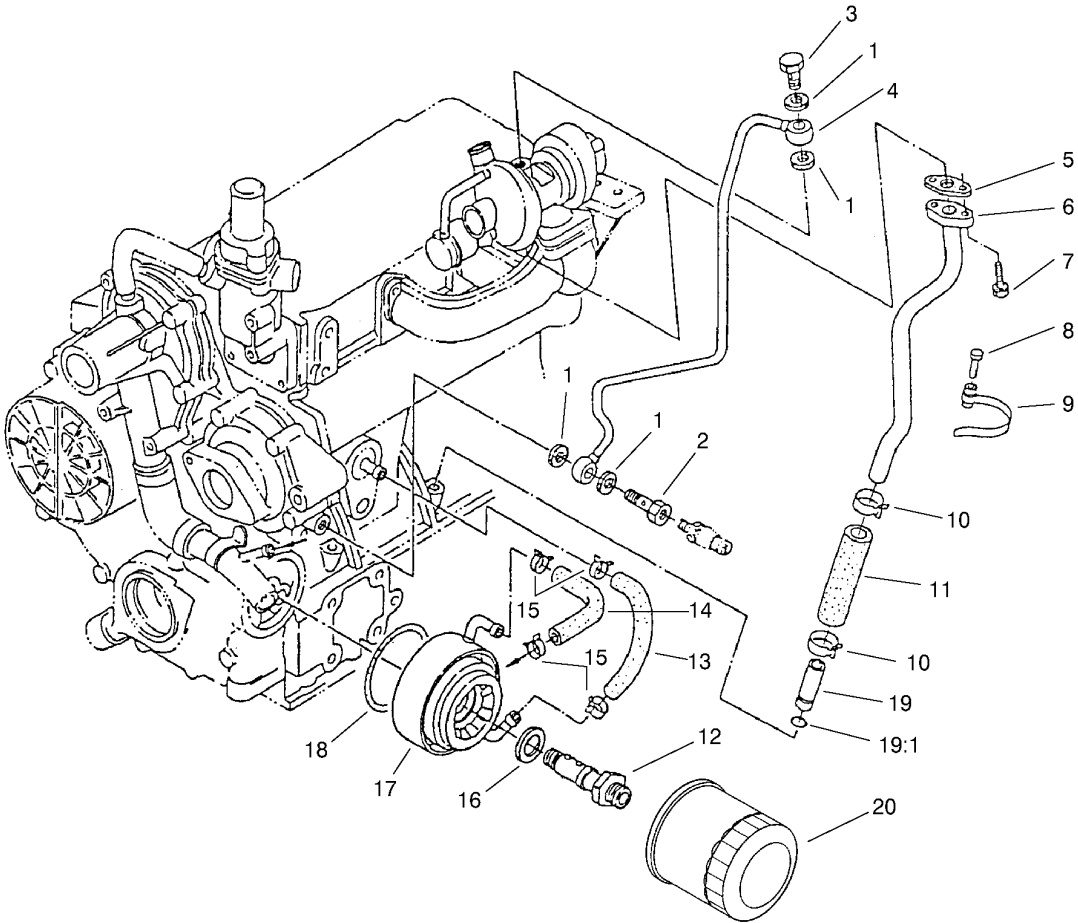 


Filter, Oil Cooler, and Pipe Assembly

Ref	Part No.	Qty.	Description				
1	99-8346	4	Gasket				
2	98-9417	1	Bolt-Joint, Eye				
3	98-9418	1	Bolt-Joint, Eye				
4	98-9419	1	Oil Pipe ASM				
5	98-9435	1	Gasket-Oil Return, Turbo				
6	98-9461	1	Pipe Line ASM				
7	98-7568	2	Bolt				
8	98-9591	1	Pin-Band				
9	98-9601	1	Clamp-Pipe				
10	98-9714	2	Clamp-Hose				
11	98-9721	1	Pipe-Oil				
12	98-9723	1	Holder ASM				
13	98-9724	1	Pipe-Cooler, Oil				
14	98-9578	1	Pipe-Return, Water				
15	98-9579	4	Band-Pipe				
16	98-9727	1	Collar				
17	98-9728	1	Oil Cooler ASM				
18	98-9729	1	O-Ring				
19	99-8383	1	Oil Pipe ASM				
19:1	98-9722	1	O-Ring				
20	99-8384	1	Filter-Oil				

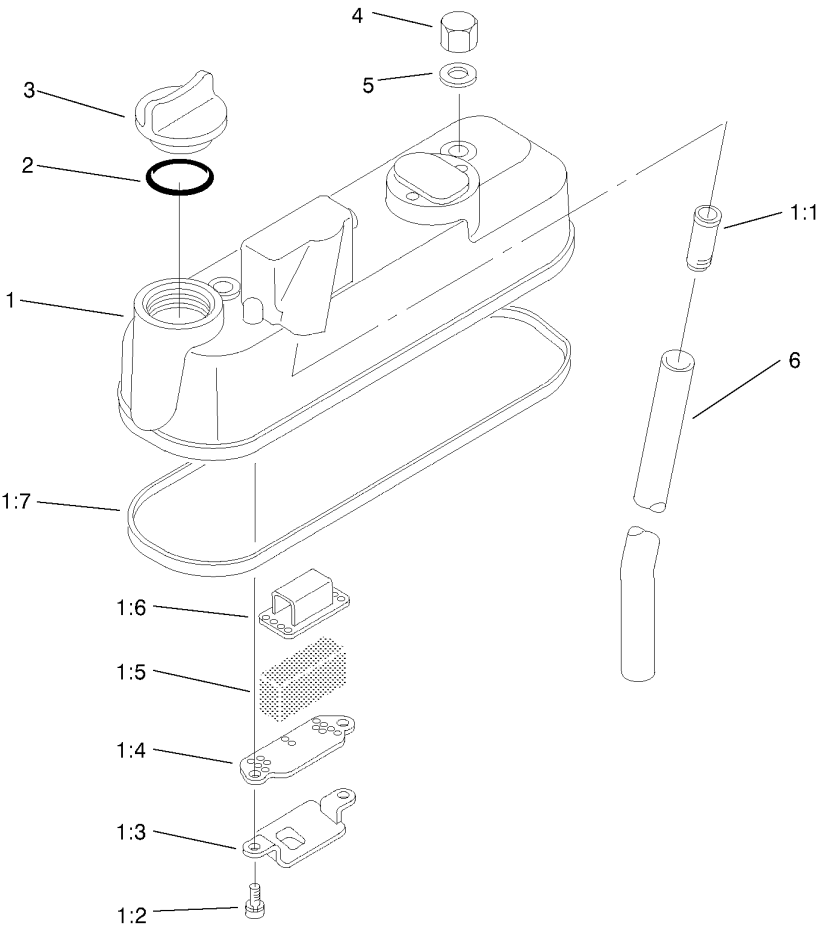 


Head Cover Assembly

Ref	Part No.	Qty.	Description				
1	98-9614	1	Cylinder Head Cover ASM				
1:1	98-9492	1	Joint-Pipe, Breather				
1:2	98-9364	2	Screw-W/Washer				
1:3	98-9490	1	Shield-Oil, Breather				
1:4	98-9488	1	Plate-Element, Breather				
1:5	98-9493	1	Element-Breather				
1:6	98-9489	1	Plate-Element, Breather				
1:7	98-9615	1	Gasket-Cover, Head				
2	98-7430	1	O-Ring				
3	98-9449	1	Plug-Filler, Oil				
4	98-9455	3	Nut-Cap				
5	98-9454	3	Gasket				
6	98-9491	1	Pipe-Breather				

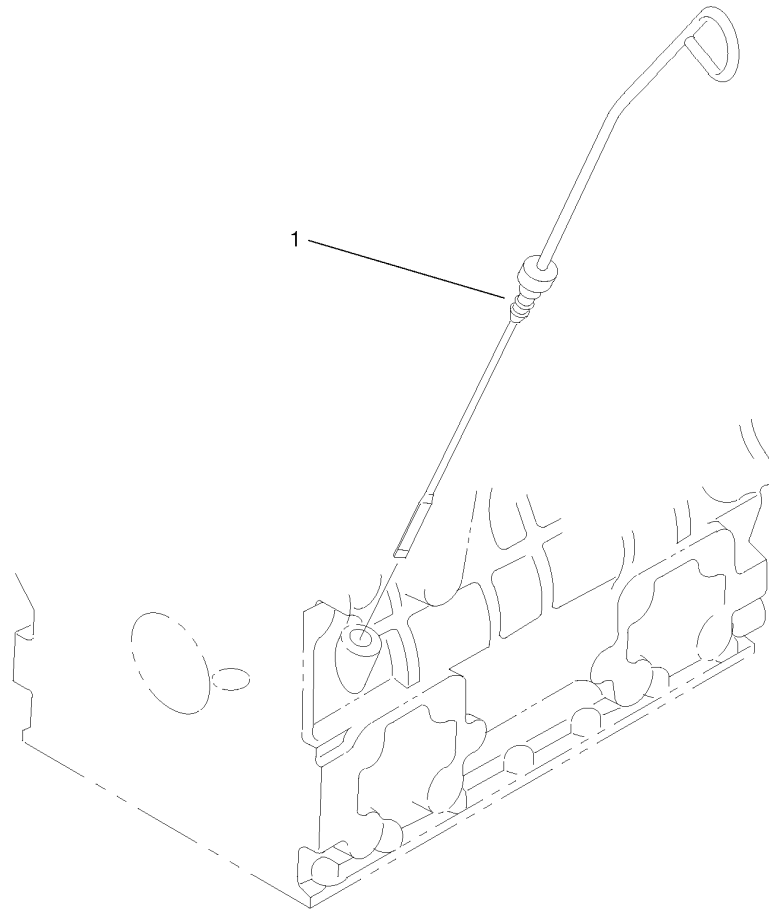 


Dipstick Assembly

Ref	Part No.	Qty.	Description
1	104-4801	1	Dipstick

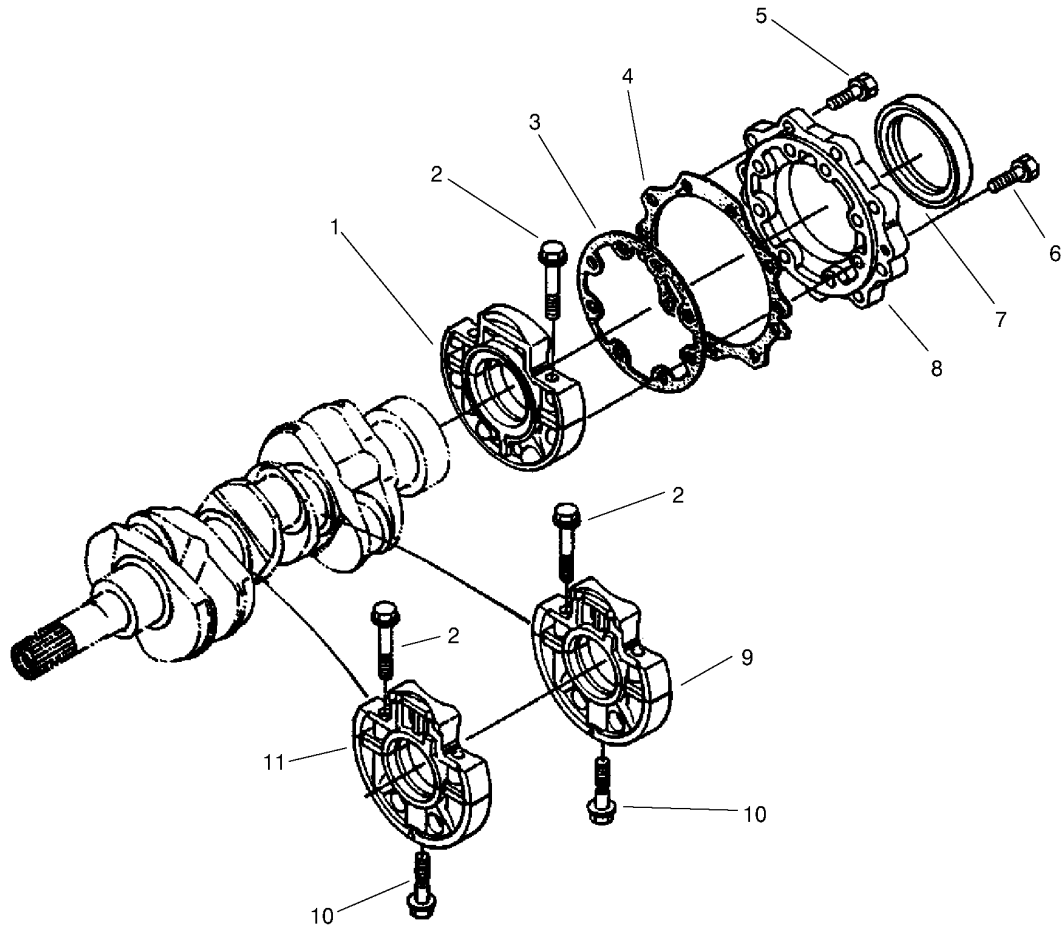 


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description				
1	98-9480	1	Main Bearing Case ASM				
2	98-9484	6	Bolt-Case, Bearing				
3	98-9634	1	Gasket-Case, Bearing				
4	98-9635	1	Gasket-Cover, Bearing Case				
5	98-7568	9	Bolt				
6	98-9352	8	Bolt				
7	98-9483	1	Seal-Oil				
8	98-9487	1	Cover-Case, Bearing				
9	99-8360	1	Case-Bearing, Main				
10	98-9485	2	Bolt-Case, Bearing				
11	99-8361	1	Case-Bearing, Main				

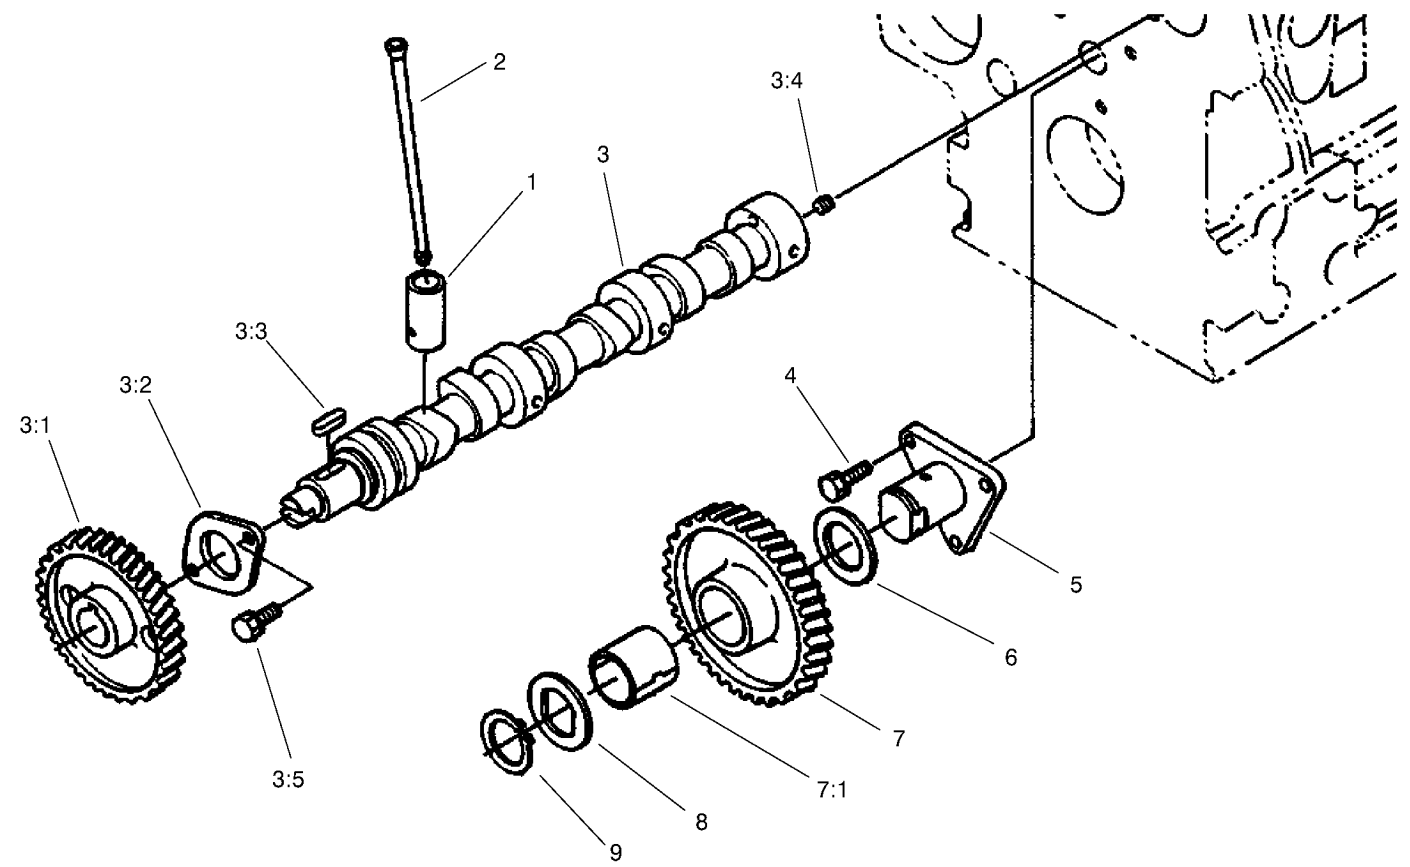 

Camshaft Assembly


Ref	Part No.	Qty.	Description				
1	98-9616	6	Tappet				
2	98-9509	6	Rod-Push				
3	99-8362	1	Camshaft ASM				
3:1	98-9512	1	Gear-Cam				
3:2	98-9510	1	Stopper-Camshaft				
3:3	98-9378	1	Key-Feather				
3:4	98-7449	1	Screw-Set				
3:5	98-9351	2	Bolt				
4	98-7692	3	Bolt				
5	98-9533	1	Shaft-Gear, Idle				
6	98-9535	1	Collar-Gear, Idle				
7	98-9649	1	Idle Gear ASM				
7:1	98-9650	1	Bushing-Gear, Idle				
8	98-9536	1	Collar-Gear, Idle				
9	98-9534	1	Clip-Circular, Idle Gear				

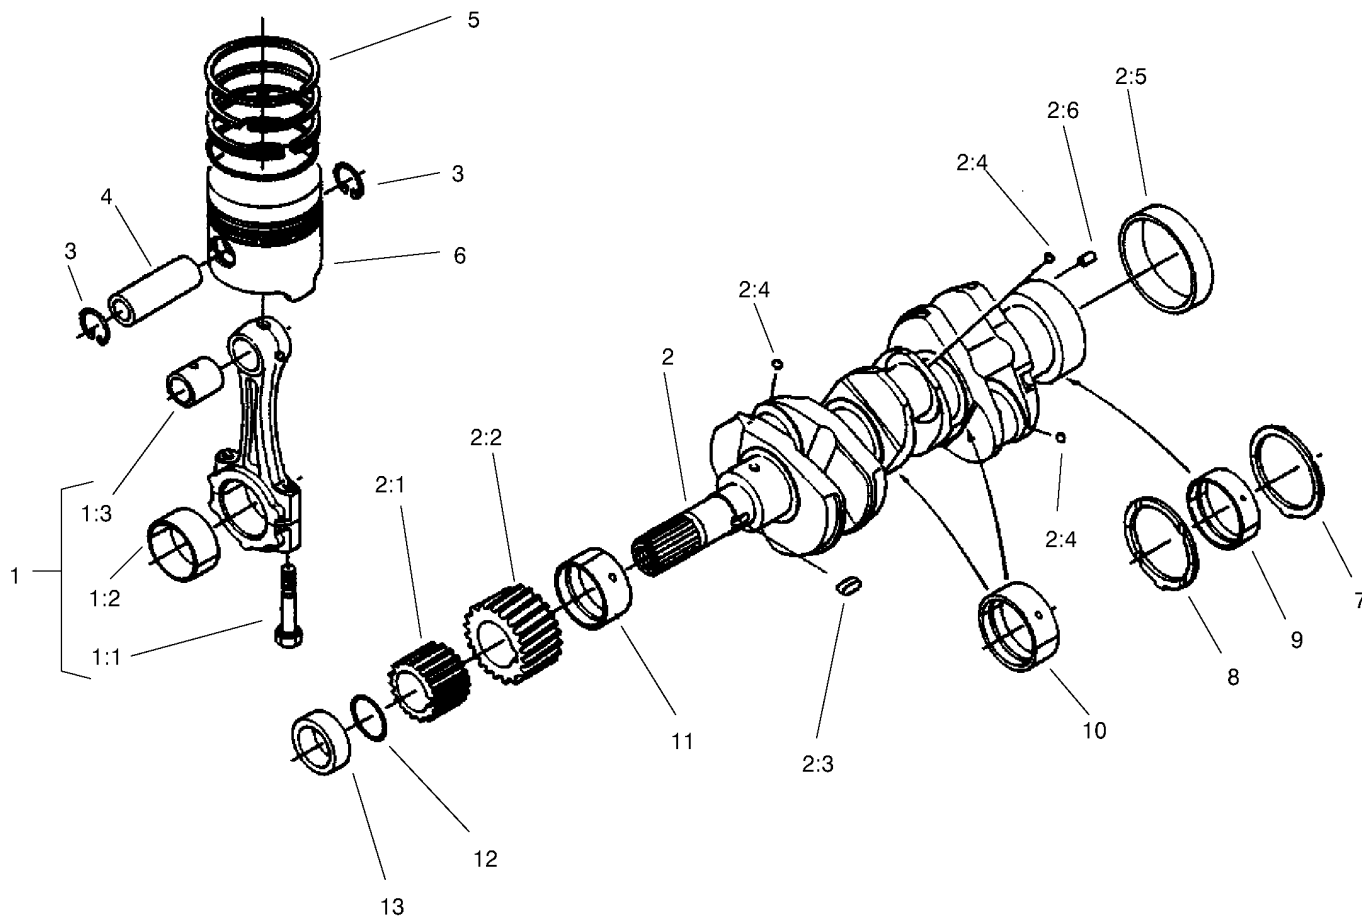 

Piston and Crankshaft Assembly


Ref	Part No.	Qty.	Description
1	98-9552	3	Connecting Rod ASM
1:1	98-9517	6	Bolt-Rod, Connecting
1:2	98-9519	3	Bearing-Rod (0.2Mm)
1:2	98-9520	3	Bearing-Rod (0.4Mm)
1:2	98-9553	3	Bearing-Rod (STD)
1:3	98-9515	3	Bushing-Pin, Piston
2	98-9642	1	Crankshaft ASM
2:1	98-9542	1	Gear-Drive, Oil Pump
2:2	98-9532	1	Gear-Crankshaft
2:3	98-9666	1	Key
2:4	98-7473	3	Ball
2:5	98-9522	1	Sleeve-Crankshaft
2:6	98-9375	1	Pin-Straight
3	98-9514	6	Clip-Circular, Piston Pin
4	98-9513	3	Pin-Piston
5	98-9619	3	Piston Ring ASM (0.5Mm)
5	98-9551	3	Piston Ring ASM (STD)
6	98-9550	3	Piston (STD)
6	98-9470	3	Piston (0.5Mm)
7	98-9413	2	Bearing-Thrust (STD)
7	98-9414	2	Bearing-Thrust (0.2Mm)
7	98-9415	2	Bearing-Thrust (0.4Mm)
8	98-9688	2	Bearing-Thrust (STD)
8	98-9689	2	Bearing-Thrust (0.2Mm)

Ref	Part No.	Qty.	Description
8	98-9690	2	Bearing-Thrust (0.4Mm)
9	98-9526	1	Bearing-Main (0.2Mm)
9	98-9527	1	Bearing-Main (0.4Mm)
9	98-9556	1	Bearing-Main (STD)
10	98-9530	2	Bearing-Main (0.2Mm)
10	98-9531	2	Bearing-Main (0.4Mm)
10	98-9555	2	Bearing-Main (STD)
11	98-9528	1	Bearing-Main (0.2Mm)
11	98-9529	1	Bearing-Main (0.4Mm)
11	98-9554	1	Bearing-Main (STD)
12	98-9373	1	O-Ring
13	98-9521	1	Collar-Crankshaft

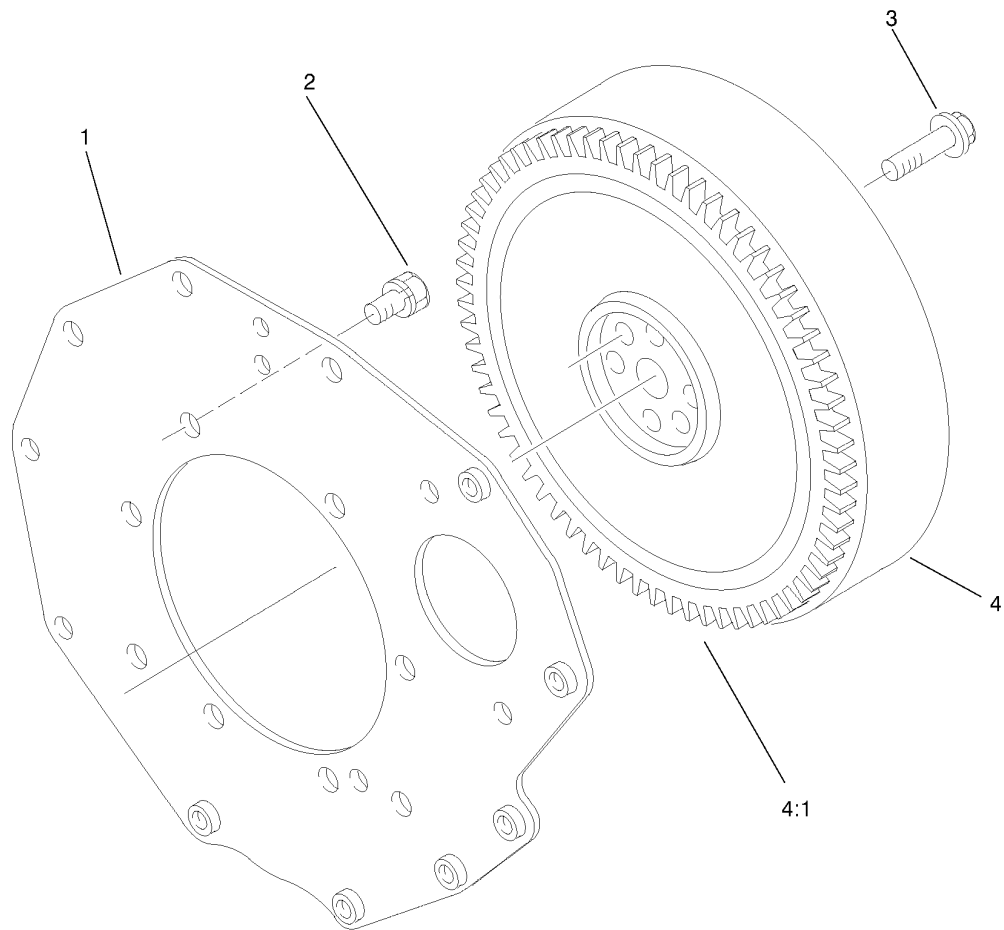 


Flywheel Assembly

Ref	Part No.	Qty.	Description				
1	98-9486	1	Plate-End, Rear				
2	98-9392	8	Bolt				
3	98-9537	6	Bolt-Flywheel				
4	98-9691	1	Flywheel ASM				
4:1	98-9394	1	Gear-Ring				

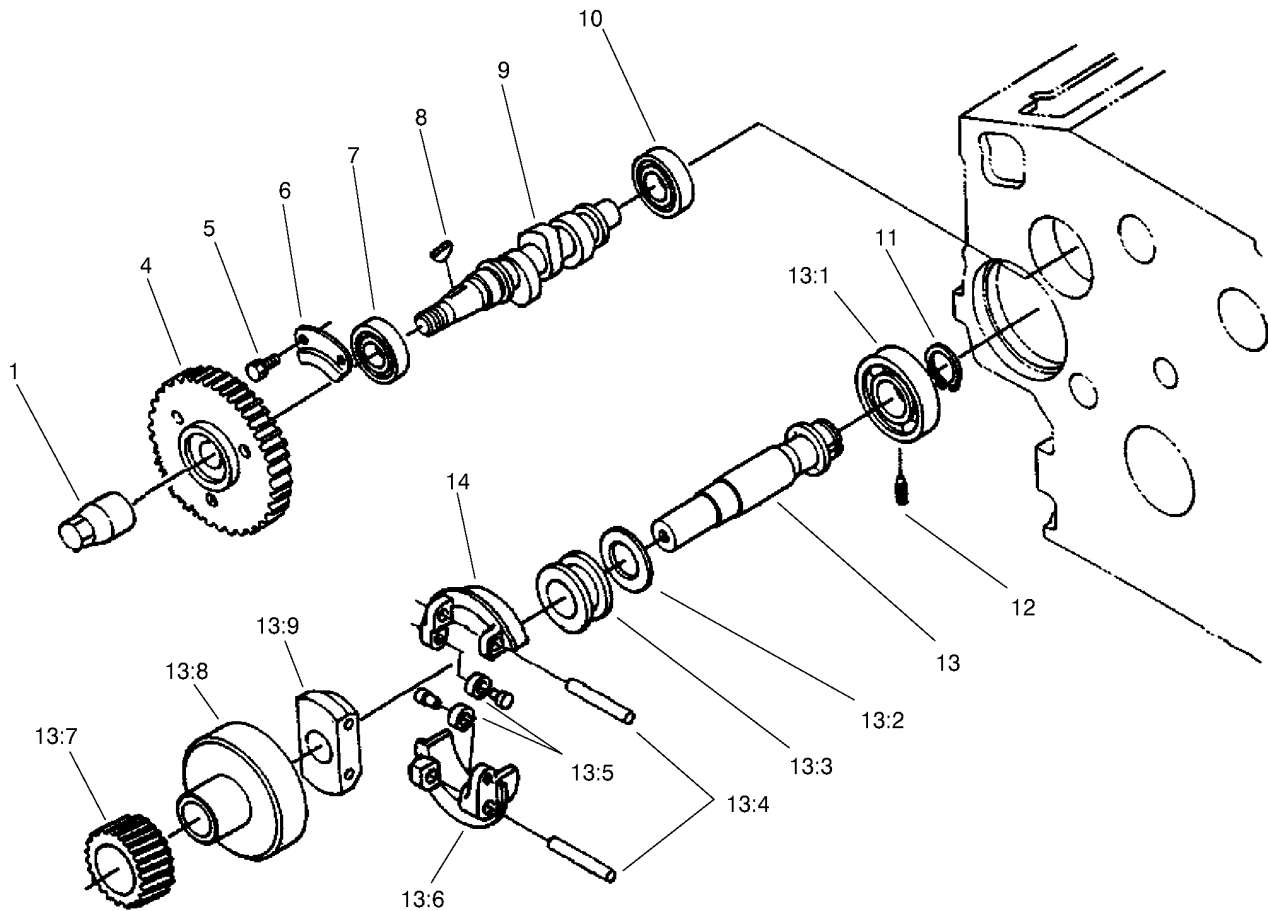 


Fuel Camshaft Assembly

Ref	Part No.	Qty.	Description				
1	98-9590	1	Nut-Cap				
4	98-9669	1	Gear-Pump, Injection				
5	98-9350	2	Bolt				
6	98-9511	1	Stopper-Fuel, Camshaft				
7	98-9383	1	Bearing-Ball				
8	98-9595	1	Key-Woodruff				
9	98-9459	1	Camshaft-Fuel				
10	98-9382	1	Bearing-Ball				
11	98-9657	1	Clip-Circular, Governor Shaft				
12	98-9565	1	Screw-Set				
13	98-9644	1	Governor Shaft ASM				
13:1	98-9381	1	Bearing-Ball				
13:2	98-9564	1	Washer-Thrust				
13:3	98-9563	1	Sleeve-Governor				
13:4	98-9560	2	Shaft-Weight, Governor				
13:5	98-9692	2	Roller				
13:6	98-9559	2	Governor Weight ASM				
13:7	98-9673	1	Gear-Governor				
13:8	98-9562	1	Holder-Gear, Governor				
13:9	98-9561	1	Holder-Weight, Governor				
14	98-9559	2	Governor Weight ASM				

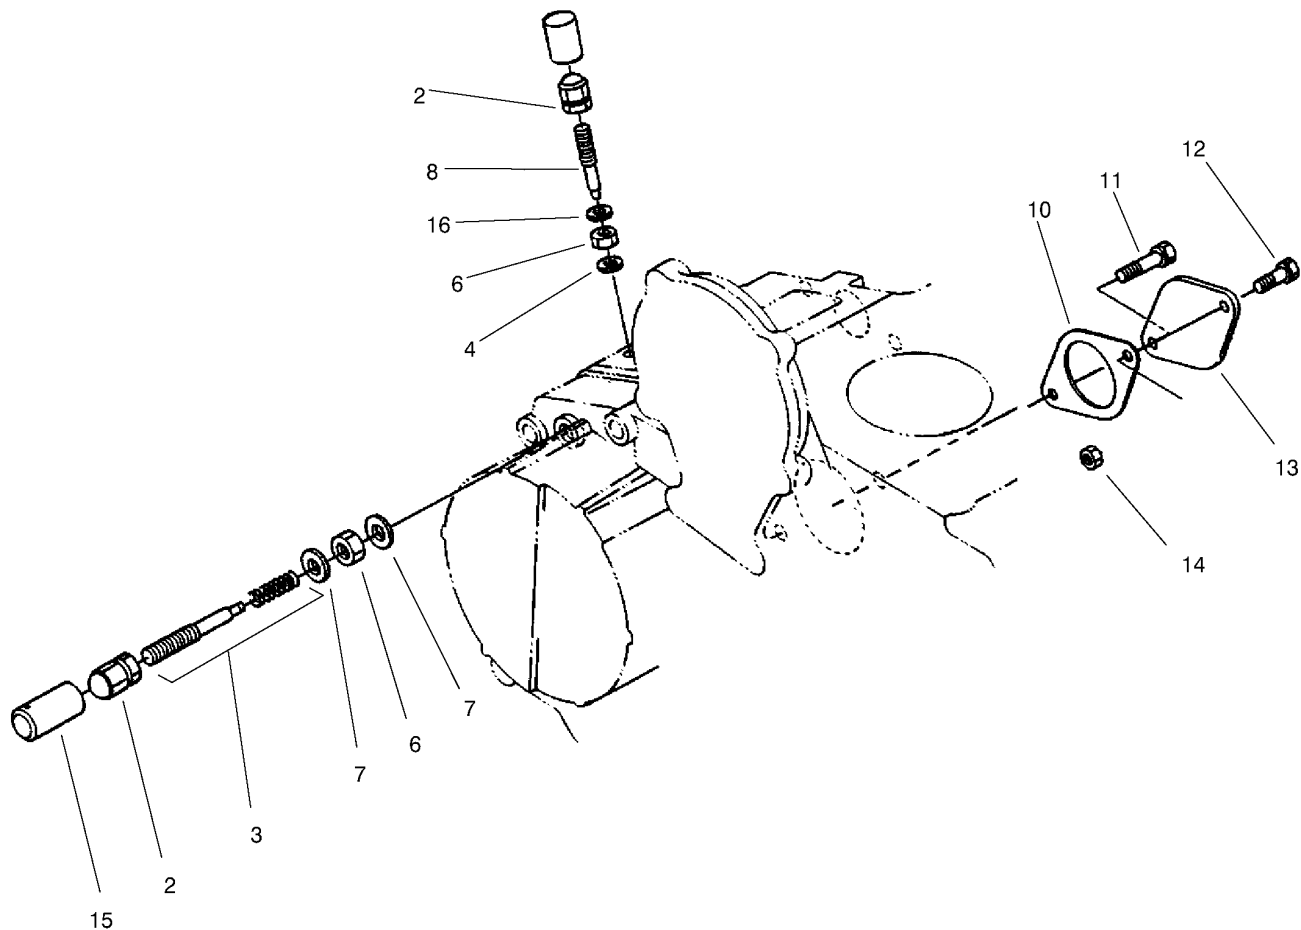 


Engine Stop Lever Assembly

Ref	Part No.	Qty.	Description				
2	98-9441	2	Nut-Cap				
3	104-4802	1	Adjusting Bolt ASM				
4	99-8389	1	Gasket				
6	98-9439	2	Nut				
7	98-7654	1	Gasket				
8	98-9557	1	Bolt-Adjusting				
10	98-9674	1	Packing				
11	98-7645	1	Bolt				
12	98-9359	1	Bolt				
13	98-9640	1	Cover-Pump				
14	98-7534	1	Nut				
15	98-9558	1	Cap				
16	99-8388	1	Gasket				

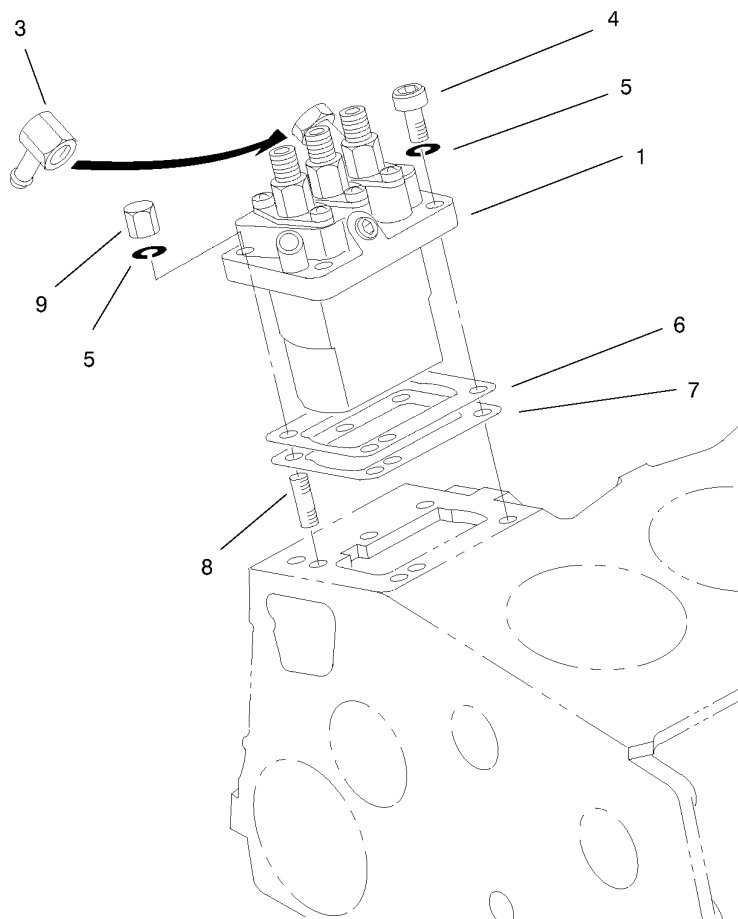 

Injection Pump Installation Assembly


Ref	Part No.	Qty.	Description
1	98-9643	1	Injection Pump ASM
3	98-9596	1	Joint-Eye
4	98-9361	2	Bolt-HSH
5	98-9367	4	Washer-Spring
6	98-9457	1	Shim-Injection (0.25Mm)
6	98-9456	1	Shim-Injection (0.20Mm)
7	98-9458	1	Shim-Injection (0.30Mm)
8	98-9438	2	Stud
9	98-9440	2	Nut-Cap

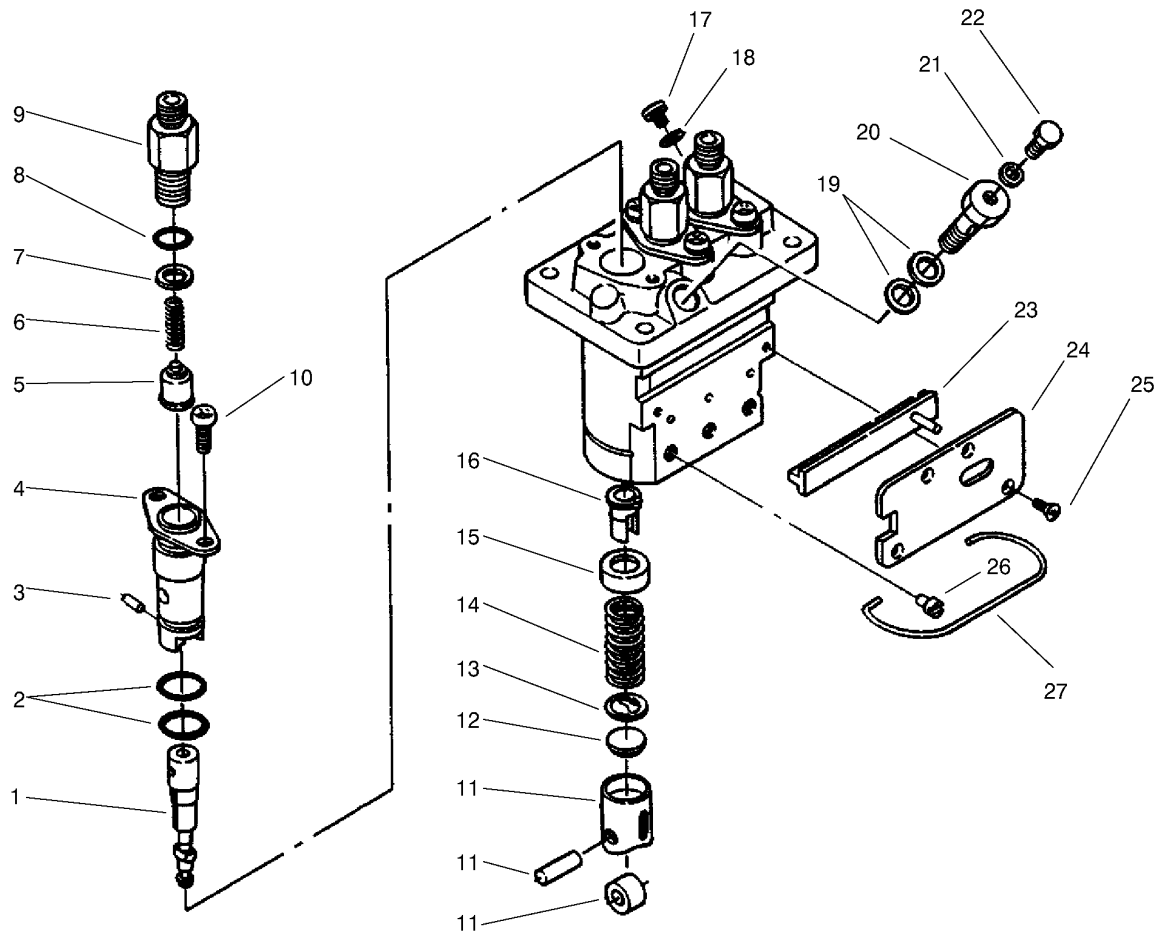 

Injection Pump Assembly No. 98-9643


Ref	Part No.	Qty.	Description
1	98-9462	3	Element-Pump
2	98-9423	6	O-Ring
3	98-9443	3	Pin-Joint
4	98-9434	3	Flange-Sleeve
5	98-9421	3	Valve-Delivery
6	98-9424	3	Spring-Valve, Delivery
7	98-9425	3	Gasket-Valve, Delivery
8	98-9447	3	O-Ring
9	98-9652	3	Holder-Valve, Delivery
10	98-9452	6	Screw
11	98-9422	3	Tappet ASM
12	98-9433	3	Shim
13	98-9429	3	Seat-Spring, Lower
14	98-9428	3	Spring-Plunger
15	98-9427	3	Seat-Spring, Upper
16	98-9432	3	Sleeve-Control
17	98-9466	1	Plug
18	98-9451	1	Gasket
19	98-9445	1	Gasket
20	98-9464	1	Bolt-Joint
21	98-9446	1	Gasket
22	98-9430	1	Screw
23	98-9463	1	Control-Rack
24	98-9465	1	Plate

Ref	Part No.	Qty.	Description
25	98-9442	4	Screw
26	98-9426	3	Pin-Guide, Tappet
27	98-9450	1	Pin-Clamp

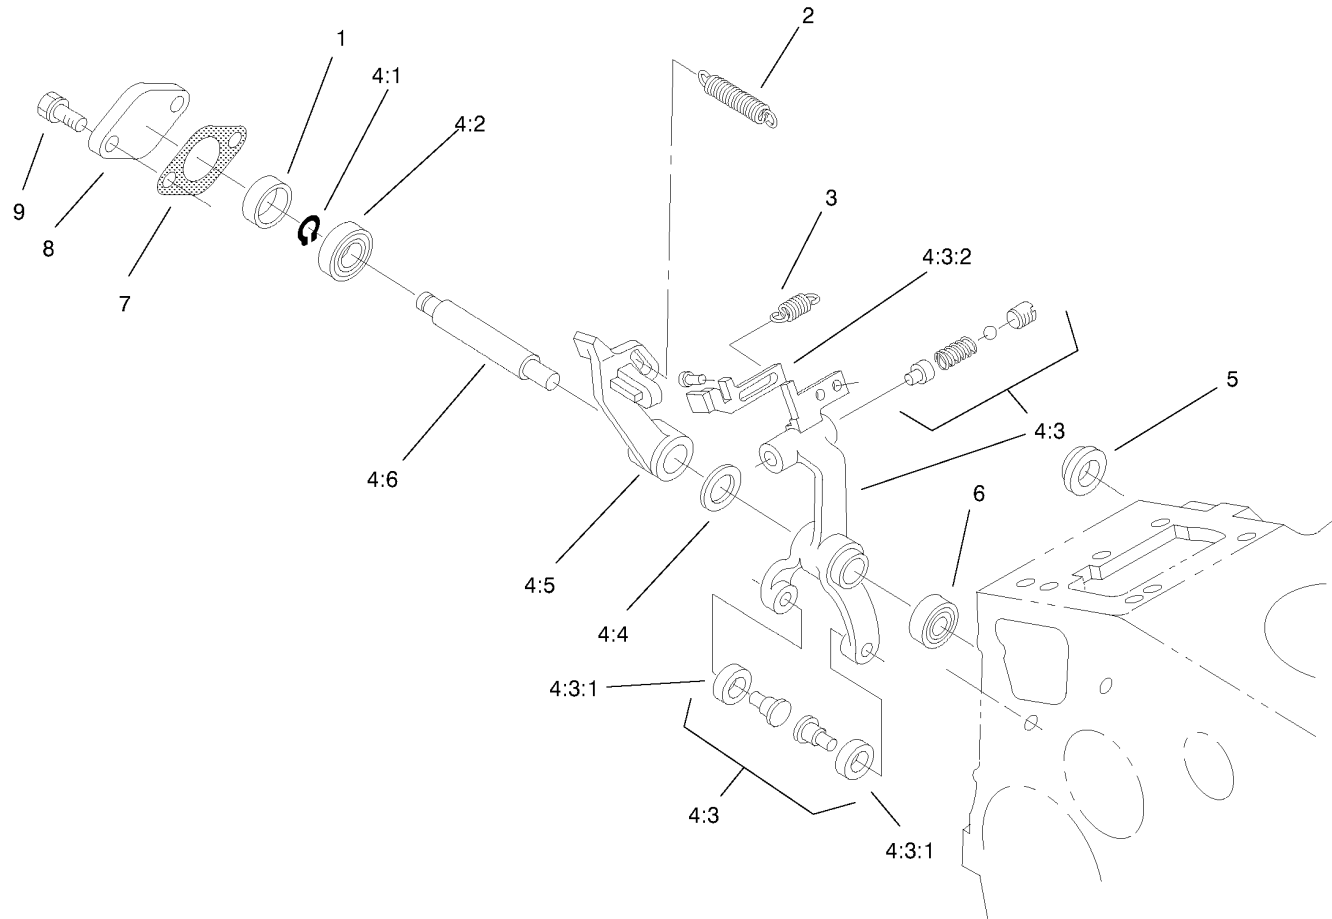 


Governor Assembly

Ref	Part No.	Qty.	Description				
1	98-9567	1	Collar				
2	98-9681	1	Spring-Governor				
3	98-9645	1	Spring-Start				
4	98-9680	1	Fork Lever ASM				
4:1	98-9369	1	Clip-Circular, External				
4:2	98-9570	1	Bearing-Miniaturize				
4:3	99-8380	1	Fork Lever ASM				
4:3:1	98-9692	2	Roller				
4:3:2	98-9660	1	Lever-Thrust				
4:4	98-9593	1	Washer-Plain				
4:5	98-9659	1	Lever-Fork				
4:6	98-9566	1	Shaft-Lever, Fork				
5	98-9568	1	Collar				
6	98-9571	1	Bearing-Miniaturize				
7	98-9682	1	Gasket				
8	98-9569	1	Cover-Shaft, Fork Lever				
9	98-9351	2	Bolt				

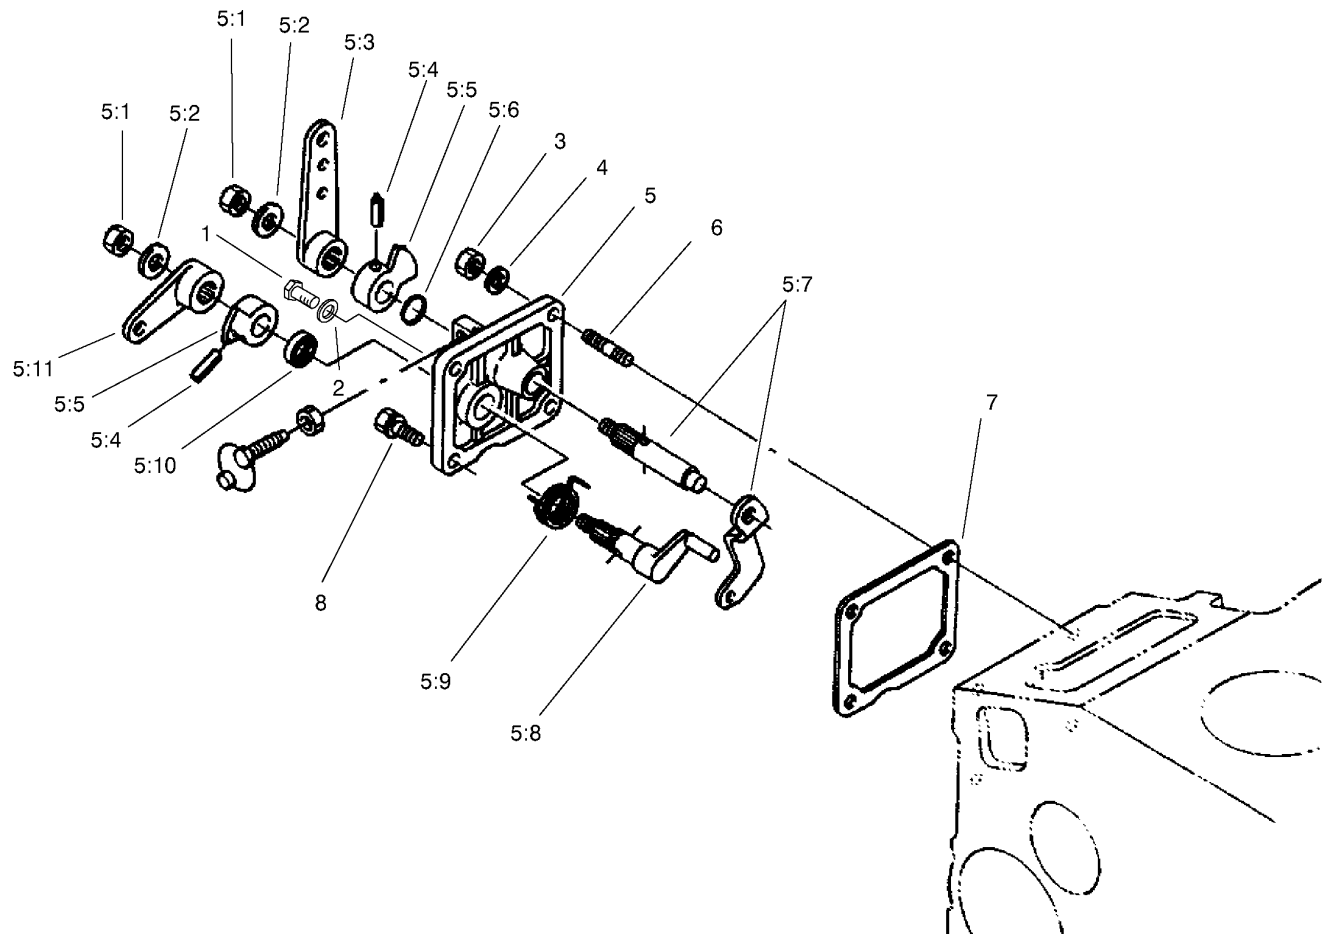 


Speed Control Plate Assembly

Ref	Part No.	Qty.	Description				
1	99-8348	1	Bolt				
2	98-7654	1	Gasket				
3	98-7572	2	Nut				
4	98-9367	2	Washer-Spring				
5	98-9661	1	Control Plate ASM				
5:1	98-9589	2	Nut				
5:2	98-9594	2	Washer-Plain				
5:3	98-9662	1	Lever-Control, Speed				
5:4	98-7602	2	Pin-Spring				
5:5	98-9572	2	Lever-Control, Speed				
5:6	98-9371	1	O-Ring				
5:7	98-9658	1	Governor Lever ASM				
5:8	98-9664	1	Shaft-Lever, Stop				
5:9	98-9472	1	Spring-Return				
5:10	98-7601	1	Seal-Oil				
5:11	98-9663	1	Lever-Stop, Engine				
6	98-9362	2	Stud				
7	98-9637	1	Gasket				
8	98-7692	1	Bolt				

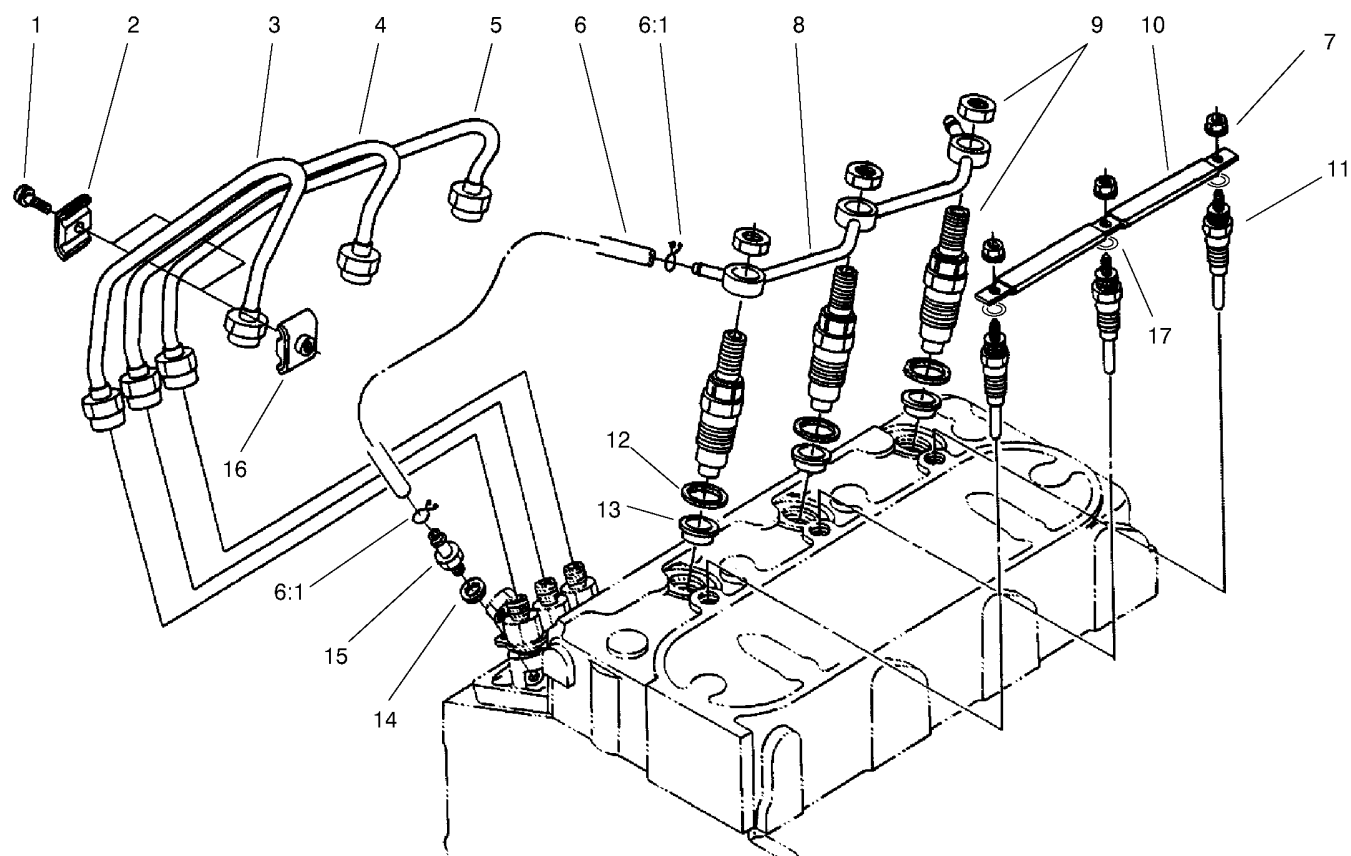 


Nozzle Holder and Glow Plug Assembly

Ref	Part No.	Qty.	Description				
1	98-7684	2	Screw-W/Washer				
2	98-7683	2	Clamp-Pipe				
3	98-9622	1	Pipe-Injection				
4	98-9654	1	Pipe-Injection				
5	98-9655	1	Pipe-Injection				
6	98-9624	1	Overflow Pipe ASM				
6:1	98-7671	2	Clip-Pipe				
7	99-8377	3	Nut-Flange				
8	98-9621	1	Overflow Pipe ASM				
9	98-9468	3	Nozzle Holder ASM				
10	98-9631	1	Cord-Plug, Glow				
11	98-9623	3	Plug-Glow				
12	98-7676	3	Gasket				
13	98-7677	3	Seal				
14	98-7654	1	Gasket				
15	98-9431	1	Screw-Bleeder				
16	98-7682	2	Clamp-Pipe				
17	99-8378	3	Washer-Plain				

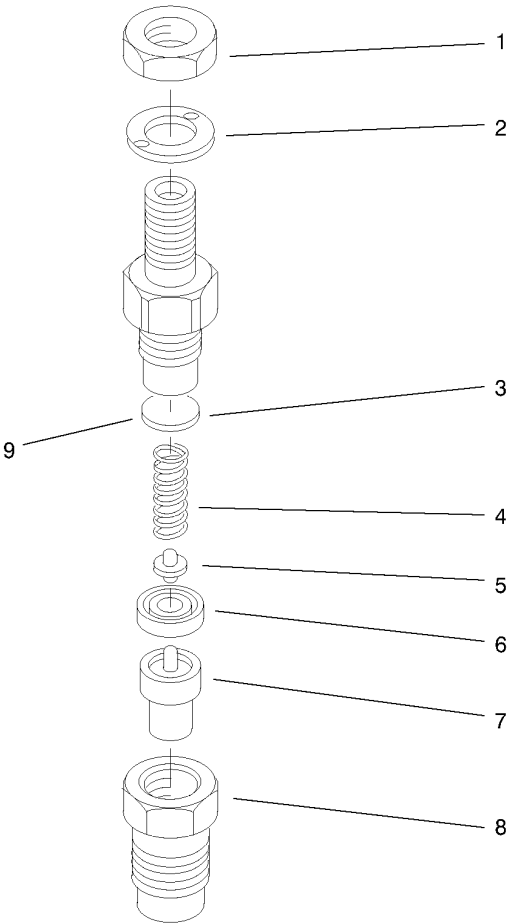 


Nozzle Holder Assembly No. 98-9468

Ref	Part No.	Qty.	Description				
1	99-8301	3	Nut				
2	99-8307	3	Washer-Plain				
3	99-8302	3	Washer-Adjusting				
4	99-8303	3	Spring-Nozzle				
5	99-8305	3	Rod-Push				
6	99-8304	3	Spacer-Distance				
7	99-8308	3	Piece-Nozzle				
8	99-8306	3	Nut-Nozzle				
9	99-8317	3	Washer-Adjust (0.56Mm)				
9	99-8318	3	Washer-Adjust (0.58Mm)				
9	99-8319	3	Washer-Adjust (0.80Mm)				
9	99-8310	3	Washer-Adjust (0.10Mm)				
9	99-8309	3	Adjusting Washer ASM				
9	99-8316	3	Washer-Adjust (0.54Mm)				
9	99-8315	3	Washer-Adjust (0.52Mm)				
9	99-8314	3	Washer-Adjust (0.50Mm)				
9	99-8313	3	Washer-Adjust (0.40Mm)				
9	99-8312	3	Washer-Adjust (0.30Mm)				
9	99-8311	3	Washer-Adjust (0.20Mm)				

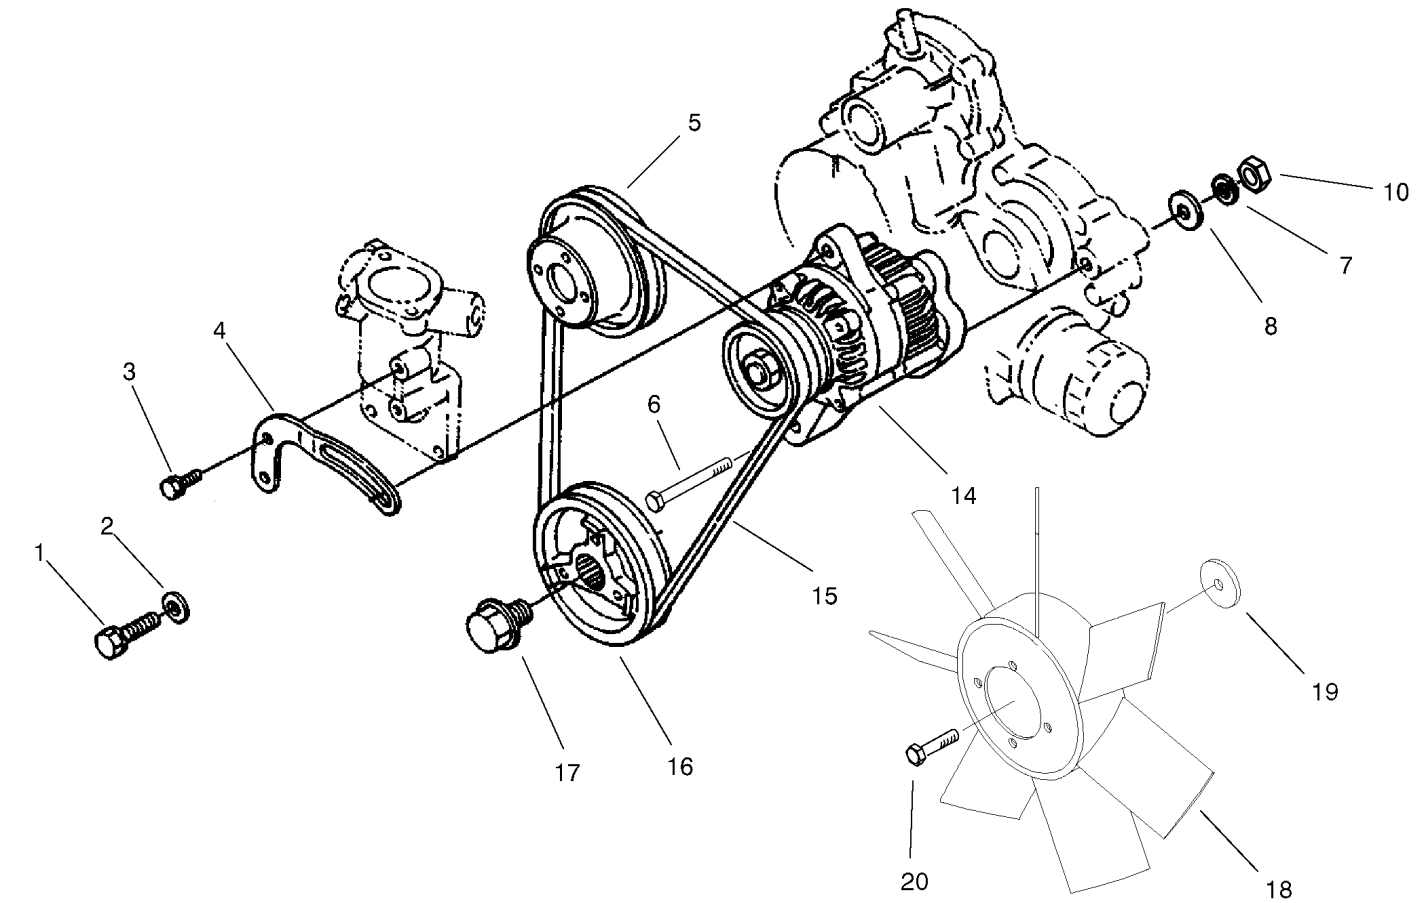 

Alternator and Pulley Assembly


Ref	Part No.	Qty.	Description				
1	98-7697	1	Bolt				
2	98-7698	1	Washer-Plain				
3	98-7692	1	Bolt				
4	98-9573	1	Stay-Dynamo				
5	98-9584	1	Pulley-Fan				
6	98-9360	1	Bolt				
7	98-9368	1	Washer-Spring				
8	98-9366	1	Washer-Plain				
10	98-7737	1	Nut				
14	98-9474	1	Alternator ASM				
15	98-9676	1	V-Belt				
16	99-3456	1	Pulley-Drive, Fan				
17	98-9585	1	Bolt				
18	104-4246	1	Fan-Engine				
19	104-4247	1	Spacer-Fan				
20	33103-020	4	Screw-HHF				

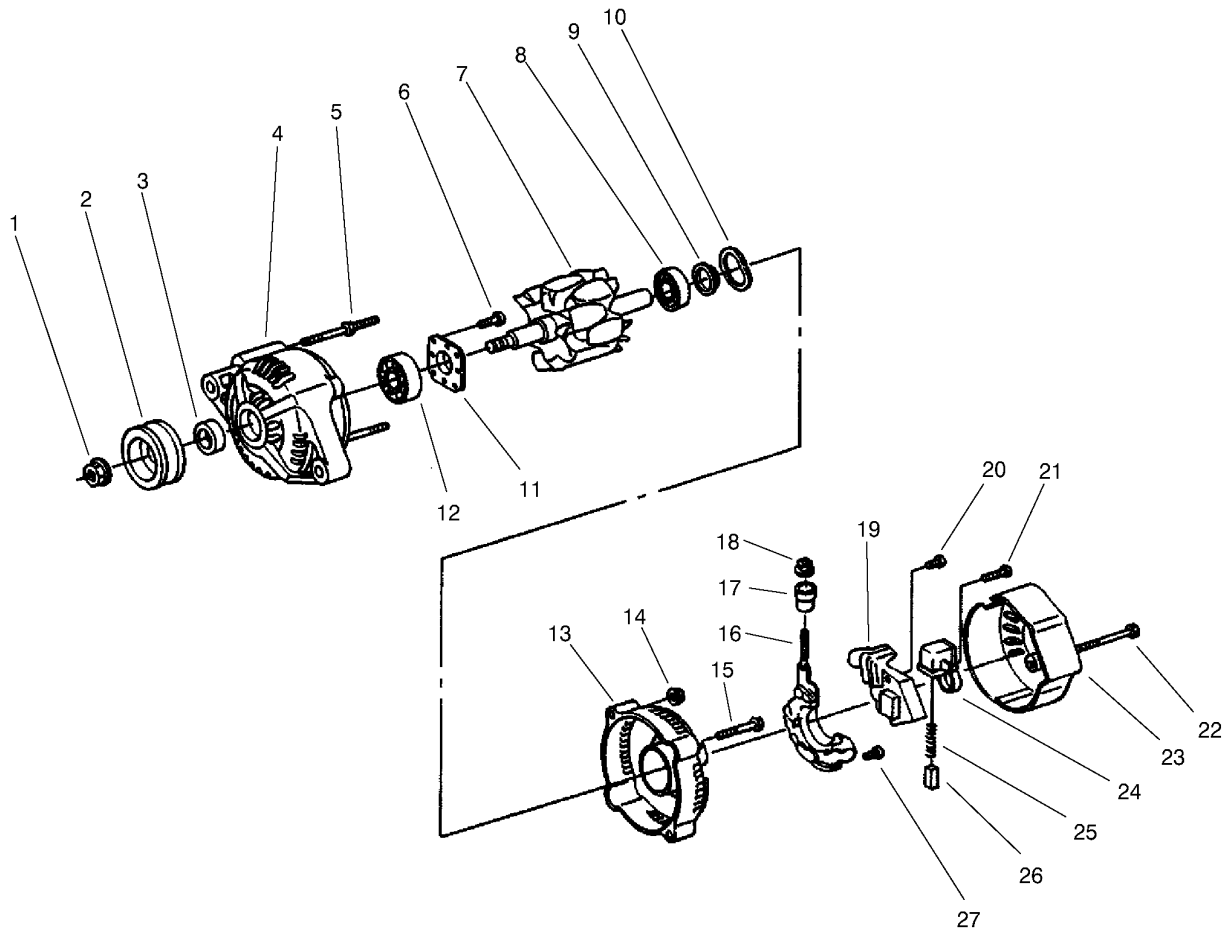 

Alternator Assembly No. 98-9474


Ref	Part No.	Qty.	Description
1	98-7708	1	Nut
2	98-9453	1	Pulley-Dynamo
3	98-7709	1	Collar
4	98-7714	1	Frame-End, Drive
5	98-7717	2	Bolt-Through
6	98-7716	4	Screw-Head, Round
7	98-7710	1	Rotor
8	98-7712	1	Bearing-Ball
9	98-7711	1	Cover-Bearing
10	98-7713	1	Washer-Thrust
11	98-7715	1	Plate-Retainer
12	98-7718	1	Bearing-Ball
13	98-7719	1	Frame-End
14	98-7730	2	Nut
15	98-7731	2	Bolt
16	98-7721	1	Rectifier ASM
17	98-7722	1	Bushing-Insulation
18	98-7732	1	Nut
19	98-7733	1	Regulator ASM
20	98-7726	2	Screw-Head, Round
21	98-7728	1	Screw-Head, Round
22	98-7729	3	Bolt
23	98-7720	1	Cover-End
24	98-7723	1	Holder-Brush

Ref	Part No.	Qty.	Description
25	98-7725	2	Spring-Brush
26	98-7724	2	Brush
27	98-7727	6	Screw-Head, Round

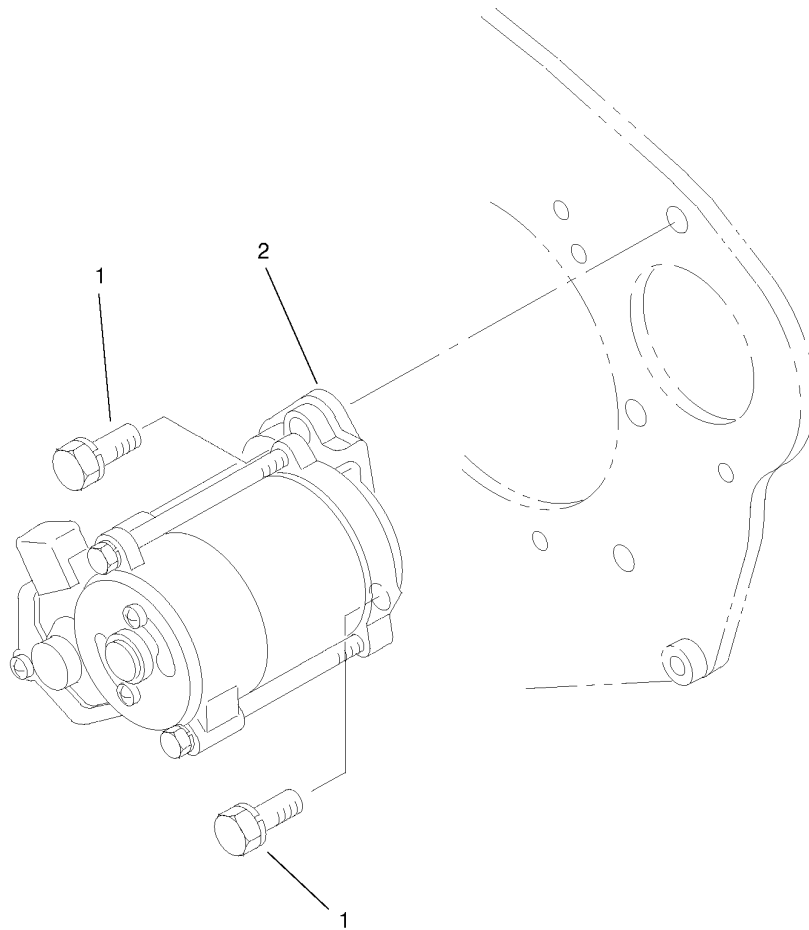 

Starter Mount Assembly


Ref	Part No.	Qty.	Description
1	98-7697	2	Bolt
2	98-9705	1	Starter ASM

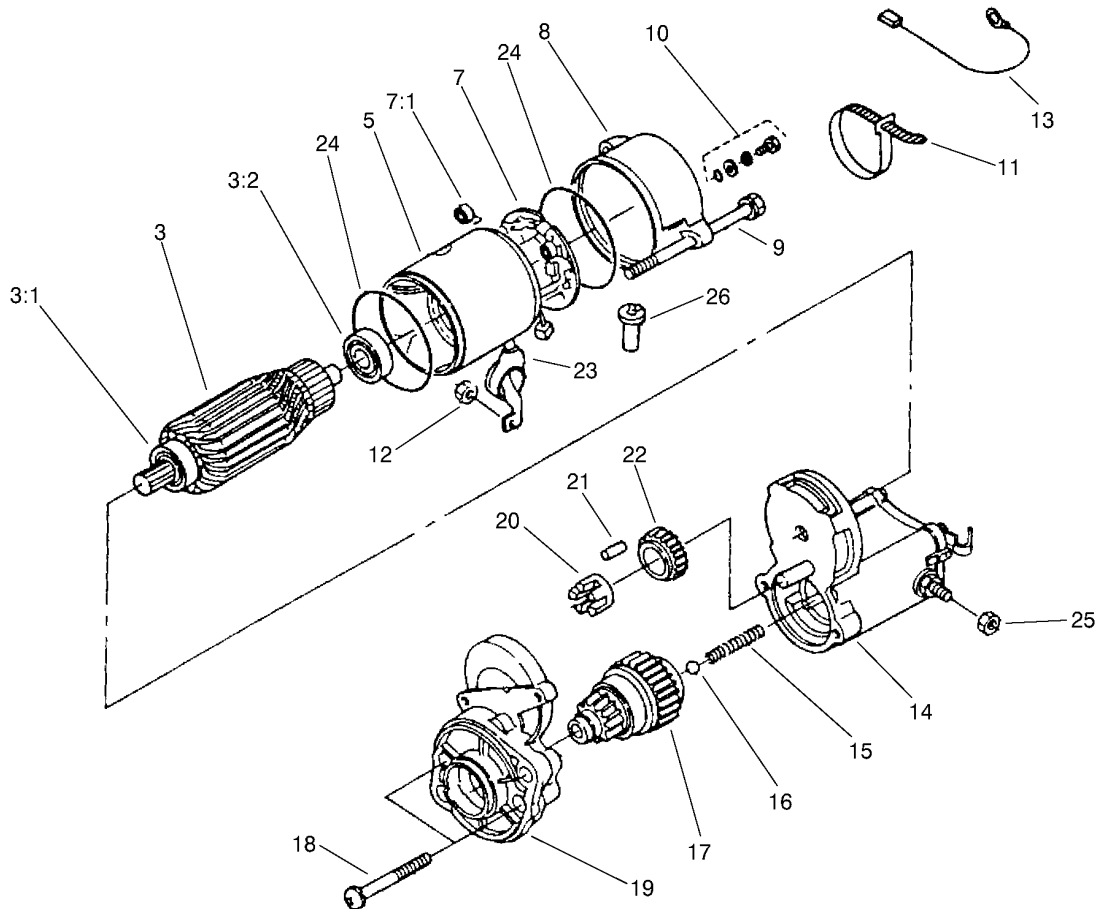 

Starter Assembly No. 98-9705


Ref	Part No.	Qty.	Description
3	98-7742	1	Armature ASM
3:1	98-7743	1	Bearing
3:2	98-7744	1	Bearing
5	98-7741	1	Yoke ASM
7	98-7749	1	Brush Holder ASM
7:1	98-7750	4	Spring-Brush
8	99-8370	1	Frame-End
9	98-9549	2	Bolt
10	98-7758	2	Bolt ASM
11	98-9712	1	Band-Cover
12	99-8371	1	Nut-Hex
13	98-9711	1	Cord-Solenoid, Stop
14	99-8372	1	Magnetic Switch ASM
15	98-7754	1	Spring
16	98-7755	1	Ball
17	99-8373	1	Clutch-Running, Over
18	98-7756	2	Bolt
19	99-8374	1	Frame-End, Drive
20	98-7752	1	Retainer
21	98-7753	5	Roller
22	98-7751	1	Gear
23	99-8375	1	Cover
24	98-7757	2	O-Ring
25	99-8376	1	Nut-Hex

Ref	Part No.	Qty.	Description
26	98-7759	1	Pipe-Drain

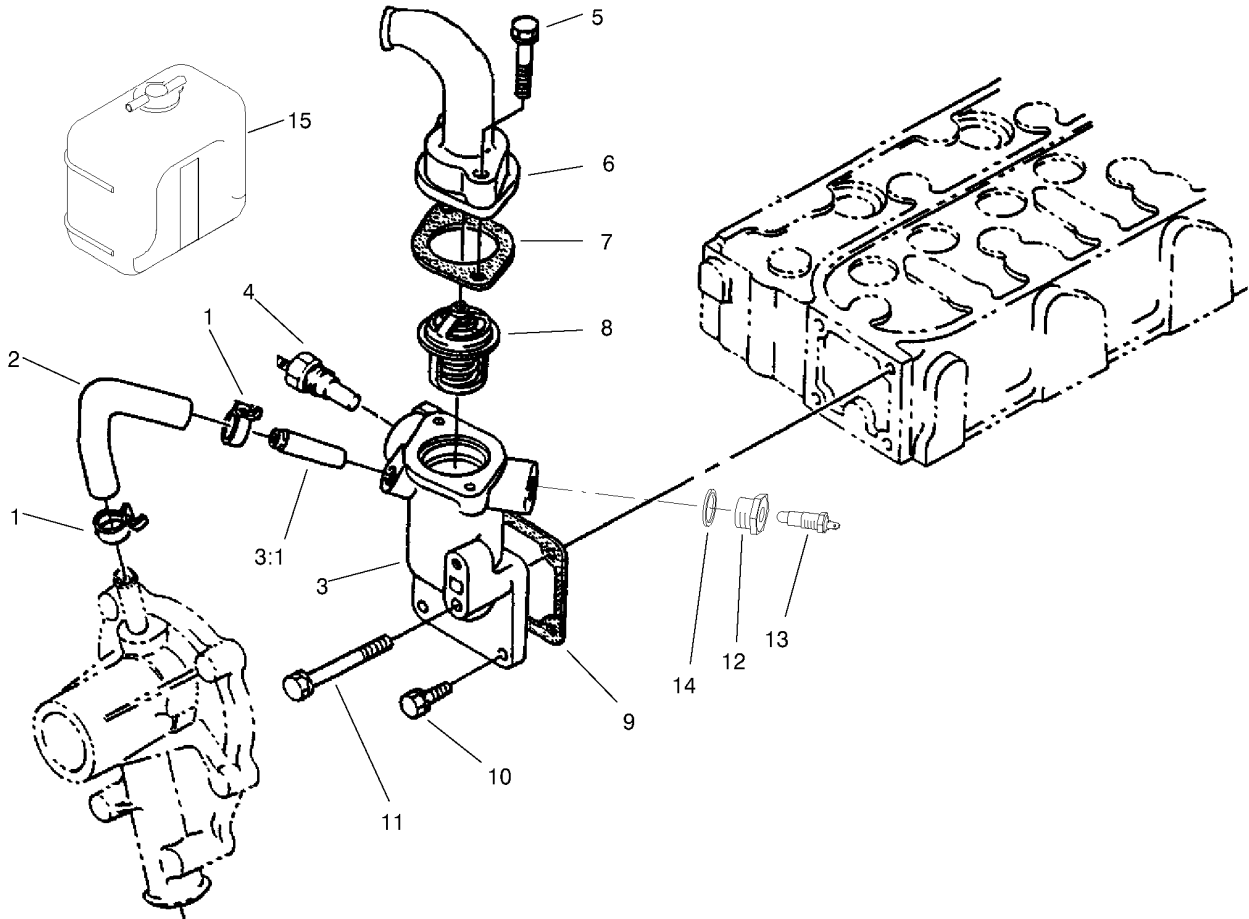 


Water Flange and Thermostat Assembly

Ref	Part No.	Qty.	Description				
1	98-9579	2	Band-Pipe				
2	98-9578	1	Pipe-Return, Water				
3	98-9713	1	Water Flange ASM				
3:1	98-9580	1	Pipe-Return, Water				
4	98-9719	1	Thermoswitch				
5	98-7777	2	Bolt				
6	104-4804	1	Outlet-Water				
7	98-7776	1	Gasket				
8	98-7778	1	Thermostat ASM				
9	98-9638	1	Gasket-Flange, Water				
10	98-7692	3	Bolt				
11	98-9356	1	Bolt				
12	99-3581	1	Adapter				
13	99-3582	1	Thermoswitch				
14	99-3583	1	Packing				
15	104-9318	1	Bottle-Overflow, Water				

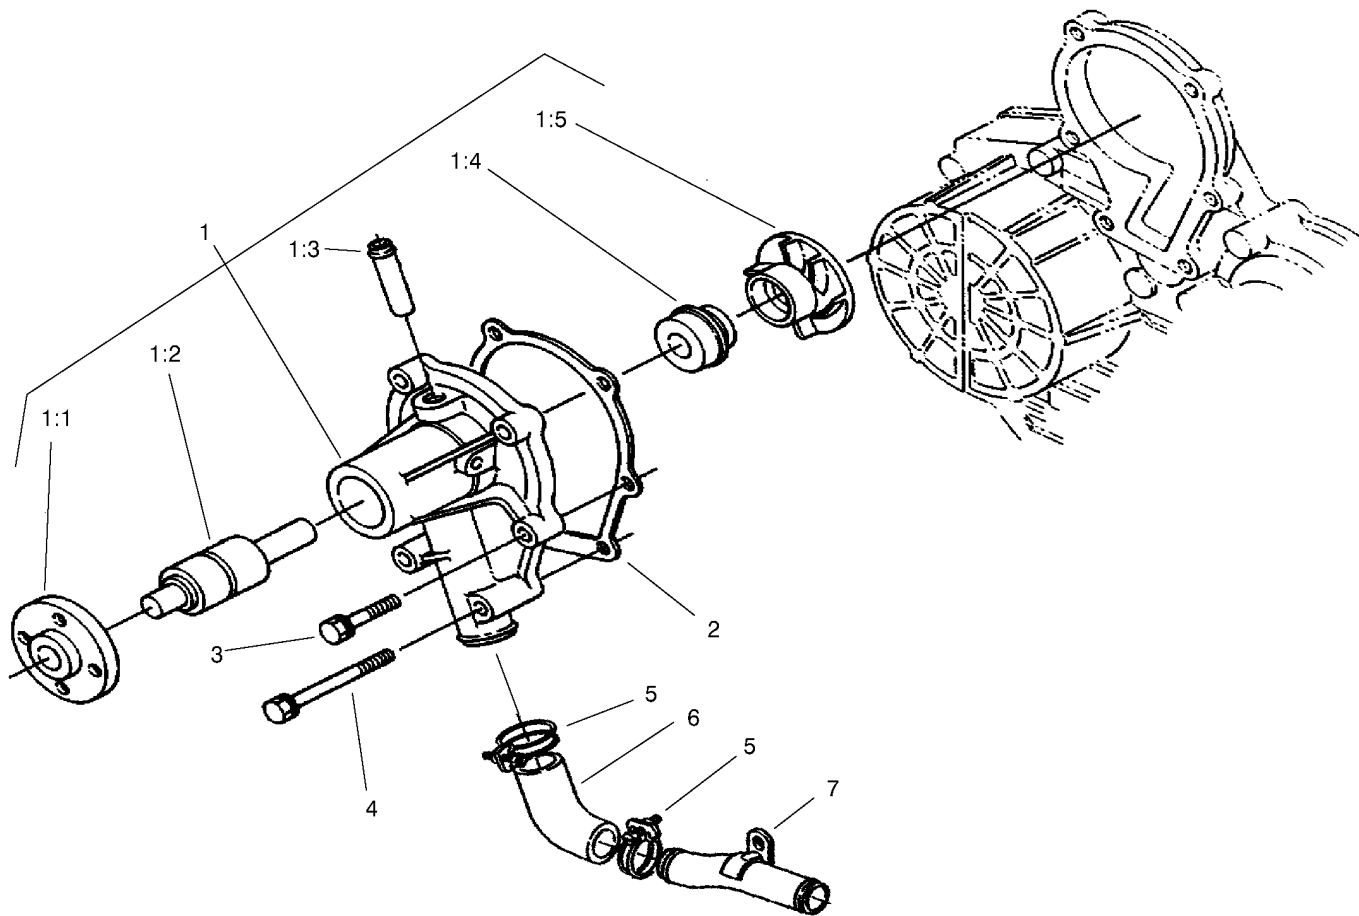 


Water Pump Assembly

Ref	Part No.	Qty.	Description				
1	99-3455	1	Water Pump ASM				
1:1	99-3516	1	Flange-Pump, Water				
1:2	99-3517	1	Bearing-Pump, Water				
1:3	98-9577	1	Pipe-Return, Water				
1:4	99-3518	1	Water Pump Seal ASM				
1:5	99-3519	1	Impeller-Pump, Water				
2	99-3454	1	Gasket-Pump, Water				
3	33103-030	1	Screw-HHF				
4	98-9357	4	Bolt				
5	98-9717	2	Clamp				
6	98-9574	1	Pipe-Water				
7	99-8379	1	Pipe-Water				

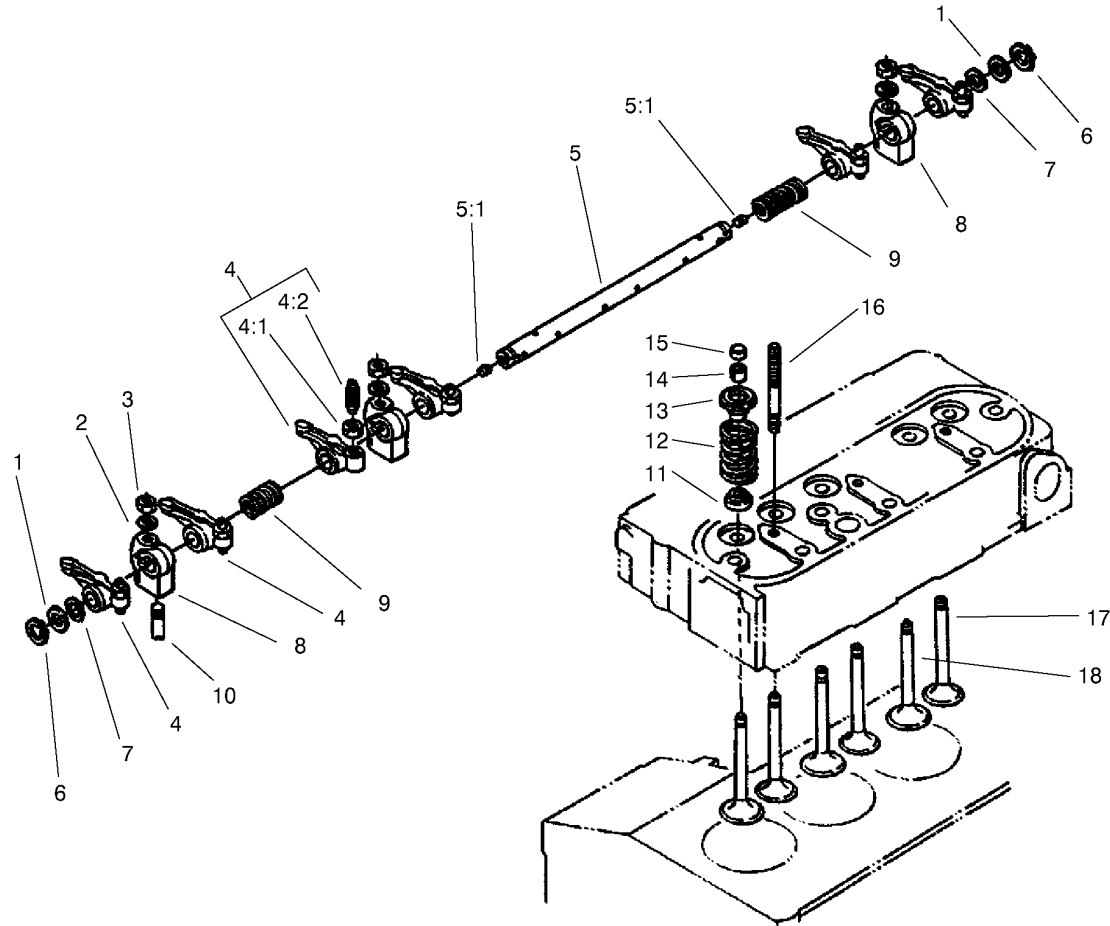 


Valve and Rocker Arm Assembly

Ref	Part No.	Qty.	Description				
1	98-9508	2	Washer-Shaft, R-Arm				
2	98-9385	3	Washer-Flat				
3	98-9393	3	Nut				
4	98-9501	6	Rocker Arm ASM				
4:1	98-9503	6	Nut				
4:2	98-9502	6	Screw-Adjusting				
5	98-9612	1	R-Arm Shaft ASM				
5:1	98-9365	2	Screw-Set				
6	98-9370	2	Clip-Circular, External				
7	98-9507	2	Washer-Shaft, R-Arm				
8	98-9505	3	Bracket-Arm, Rocker				
9	98-9504	2	Spring-Arm, Rocker				
10	98-9391	1	Screw-Set, Rocker Arm				
11	98-9496	6	Seal-Stem, Valve				
12	98-9626	6	Spring-Valve				
13	98-9498	6	Retainer-Valve				
14	98-9390	6	Collet-Set, Valve Spring				
15	98-9497	6	Cap-Valve				
16	98-9506	3	Stud				
17	98-9625	3	Valve-Exhaust				
18	98-9494	3	Valve-Inlet				

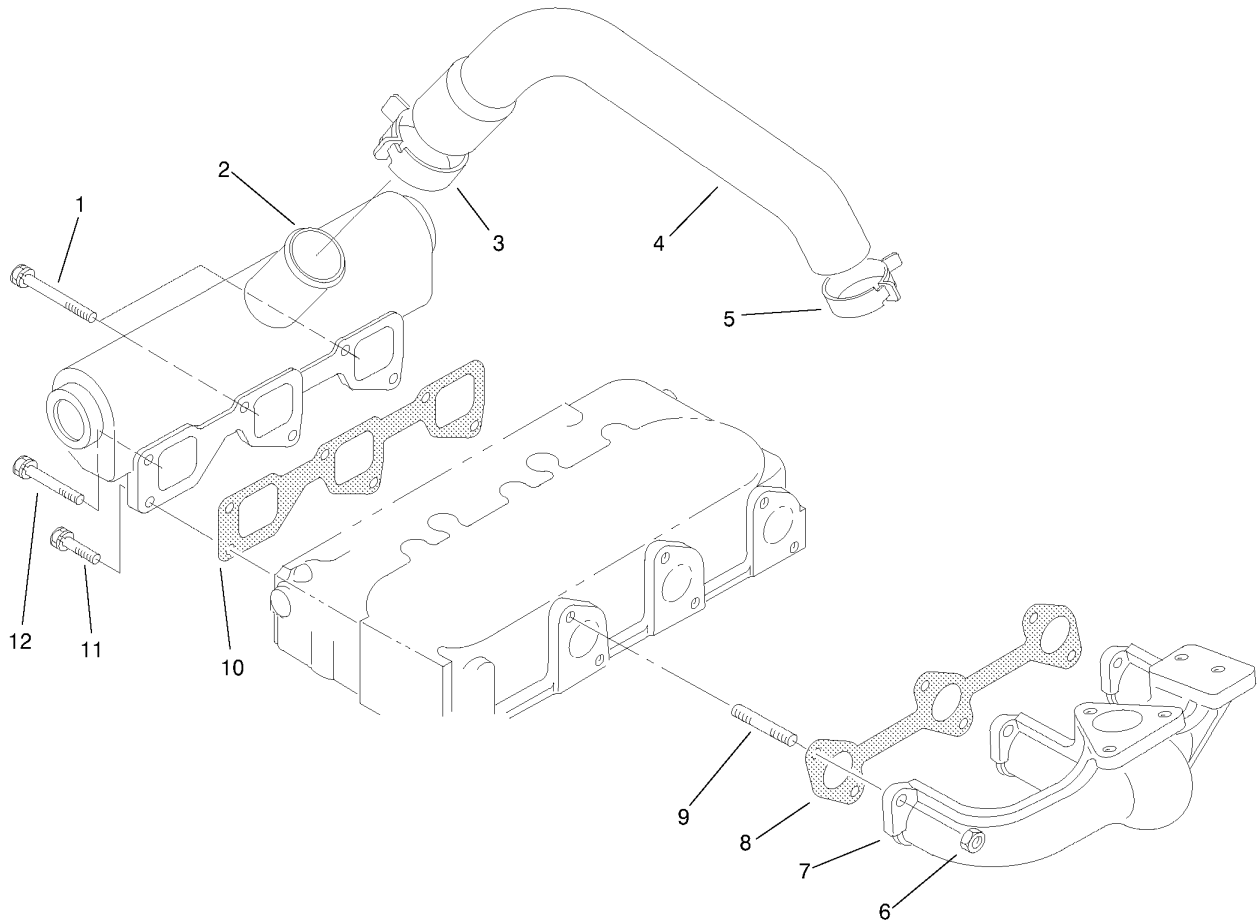 

Exhaust Manifold and Gasket Assembly

Ref	Part No.	Qty.	Description				
1	99-8320	2	Bolt				
2	99-8321	1	Manifold-Inlet				
3	99-8322	1	Band-Pipe				
4	99-8323	1	Hose-Inlet				
5	99-8324	1	Band-Pipe				
6	98-9665	6	Nut				
7	99-8326	1	Manifold-Exhaust				
8	99-8327	1	Gasket-Manifold, Exhaust				
9	98-9588	6	Stud				
10	99-8329	1	Gasket-Manifold, Intake				
11	98-7568	3	Bolt				
12	98-7496	1	Bolt				

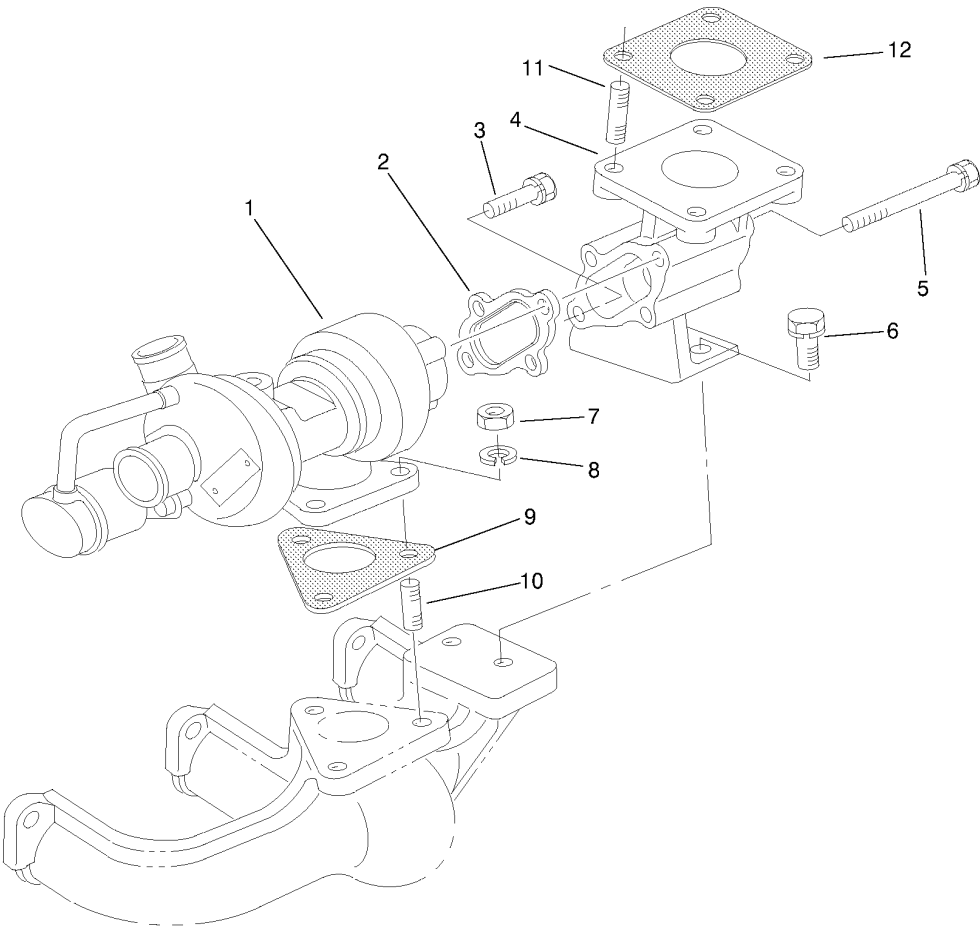 

Turbo Charge Assembly

Ref	Part No.	Qty.	Description				
1	99-8332	1	Turbo Charger ASM				
2	99-8333	1	Gasket				
3	99-8334	1	Bolt				
4	99-8335	1	Flange-Muffler				
5	99-8336	3	Bolt				
6	98-7610	2	Bolt				
7	98-7534	3	Nut				
8	99-8339	3	Washer-Spring				
9	99-8340	1	Gasket				
10	99-8341	3	Stud				
11	99-8342	4	Stud				
12	99-8343	1	Gasket-Muffler				

NOTES

