 


TORO®

MODEL NO. 03420-30001 & UP

PARTS CATALOG

REELMASTER® 216-D 2wd TRACTION UNIT

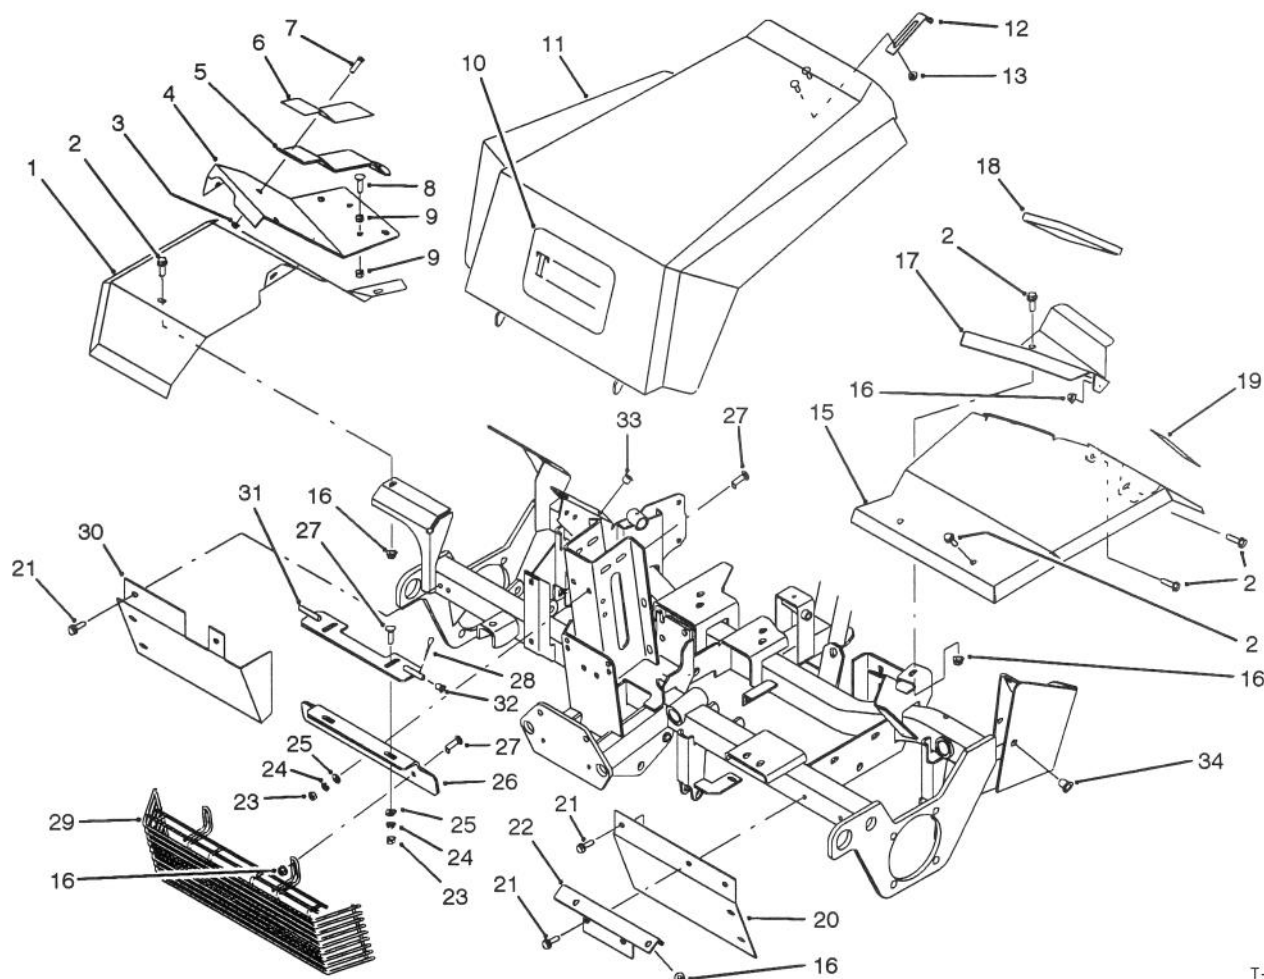


T-1347

HOOD & GRILLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9720	Fender - R.H.	1	18	83-9840	Pad - Footrest L.H.	1
2	3234-5	Screw - Hex. Washer Hd.	14	†19	84-1650	Decal - Brake	1
3	32128-33	Nut - Flange Lock	2	20	83-9800	Shield - Grass Front L.H.	1
4	83-9740	Footrest - R.H.	1	21	32104-82	Screw - Hex. Washer Hd.	5
5	76-2200	Footrest - Traction	1	22	83-8510	Bracket - Fender L.H.	1
6	76-2260	Pad - Footrest Traction	1	23	3217-6	Nut - Hex.	4
7	3229-1	Screw - Carriage	2	24	3253-4	Washer - Lock	4
8	3230-27	Screw - Carriage	1	25	3256-23	Washer - Flat	4
9	32128-20	Nut - Hex.	2	26	85-4870	Support - Hinge	1
10	62-7400	Decal - TORO	1	27	3230-23	Screw - Carriage	6
11	14-5759	Hood	1	28	3290-467	Pin - Cotter Hair	2
12	83-9970	Latch - Hood	1	29	83-8850	Grille - Front	1
13	32128-14	Nut - Flange Lock	2	30	83-8860	Shield - Grass Front R.H.	1
15	83-9700	Fender - L.H.	1	31	85-4890	Hinge - Hood	1
16	32128-44	Nut - Flange Lock	13	32	256-320	Bushing	2
17	83-9710	Footrest - L.H.	1	33	32148-7	Insert - Threaded	3

†For different language versions of this part, see International Decal Cross Reference.

 TPS

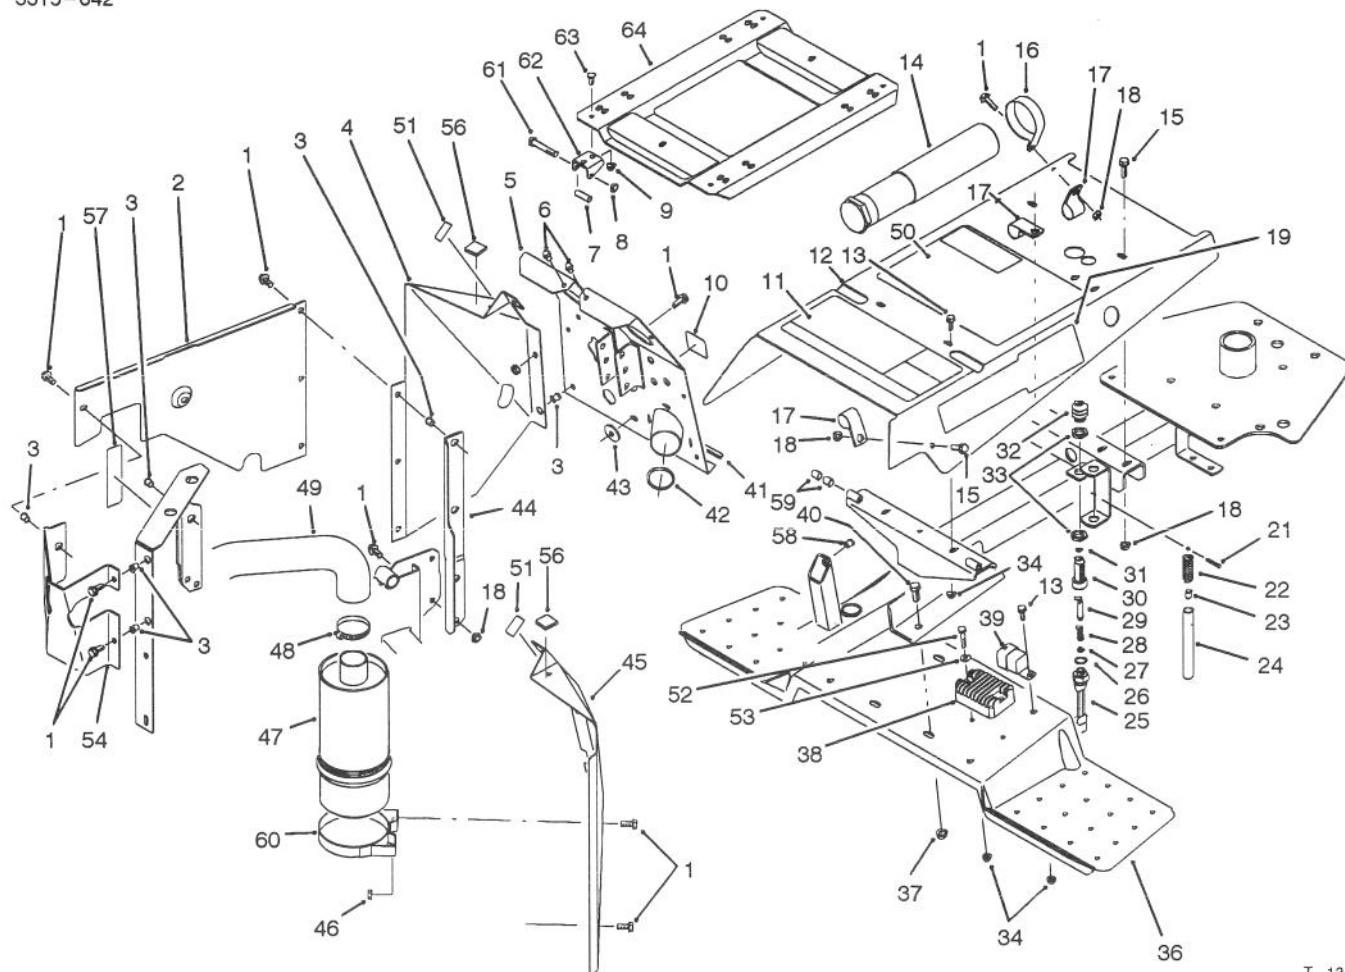

T-1348


SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-5	Screw - Hex. Flange Hd.	21
2	83-8230	Panel - Right Front	1
3	32148-7	Insert - Threaded	5
4	83-8120	Panel - Right Rear	1
5	83-8190	Panel - Control	1
6	237-37	Bumper - Rubber	2
7	85-5340	Tube - Seat Pivot	2
8	3296-42	Nut - Lock	2
9	32128-33	Nut - Flange Lock	2
†10	83-9150	Decal - Starting Fluid	1
†11	83-9550	Decal - Warning	1
12	83-8880	Panel - Skirt	1
13	3234-4	Screw - Hex. Flange Hd.	3
14	74-0720	Tube - Manual	1
15	3234-36	Screw - Hex. Flange Hd.	3
16	2412-133	Clamp - R	2
17	2412-39	Clamp - R	3
18	32128-44	Nut - Flange Lock	12
19	83-8890	Decal - Reelmaster 216-D	2
21	32121-6	Pin - Roll	1
22	37-9590	Spring - Compression	1
23	28-6180	Pin	1
24	27-9870	Pin - Seat	1
25	72-4320	Switch - Seat	1
26	237-30	Seal - O-Ring	1
27	43-8610	Guide - Spring	1

Ref. No.	Part No.	Description	No. Used
28	43-8600	Spring - Compression	1
29	43-8860	Plunger - Switch	1
30	43-8620	Guide - Pin	1
31	237-7	Seal - O-Ring	1
32	43-8870	Boot - Switch	1
33	218-461	Nut - Hex.	2
34	32128-33	Nut - Flange Lock	5
36	83-9730	Step - Foot	1
37	32128-43	Nut - Flange Lock	4
†38	185516060	Regulator - Voltage	1
39	63-7590	Relay	1
40	3234-11	Screw - Hex. Flange Hd.	4
41	76-6471	Trim - Control Panel Bottom	1
42	237-71	Seal - O-Ring	1
43	62-7170	Spacer	1
44	83-9170	Right Channel Assembly (Incl. Ref. #3)	1
45	83-8110	Panel - Left	1
46	32128-20	Nut - Flange Lock	4
47	85-4910	Air Cleaner Assembly	1
48	2412-92	Clamp - Hose	1
49	83-8550	Hose - Air Cleaner	1
†50	83-8900	Decal - Service Information	1
51	85-5180	Trim	2
52	321-8	Screw - Cap Hex. Hd.	2
53	3256-22	Washer - Flat	2

†Obtain from your Local Perkins Dealer

 ‡For different language versions of this part, see International Decal Cross Reference.

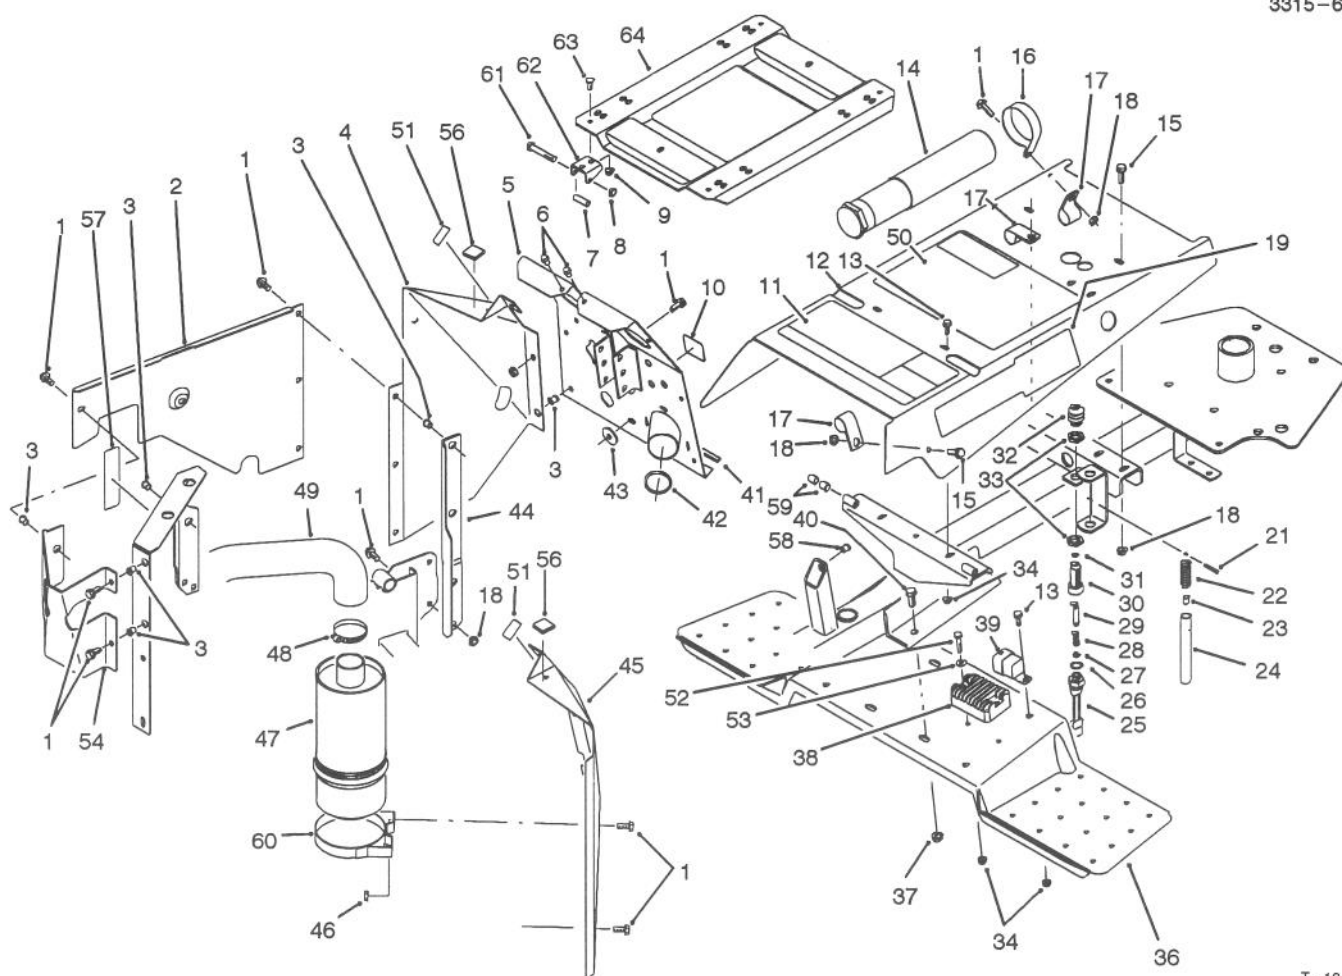


T-1348

SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	85-5010	Bracket - Right Front	1	61	321-11	Screw - Cap Hex. Hd.	2
56	85-5140	Foam - Hood	2	62	85-5230	Bracket - Seat Pivot	2
57	67-5360	Decal - Danger	1	63	3229-22	Bolt - Carriage	2
58	32148-8	Insert - Threaded	1	64	85-5330	Plate - Seat Mounting	1
59	256-321	Bushing - Sleeve	4	*	43-9071	Seat Switch Assembly (Incl. Ref. #25-33)	1
60	33-1350	Clamp Assembly	2				

 *Not Illustrated

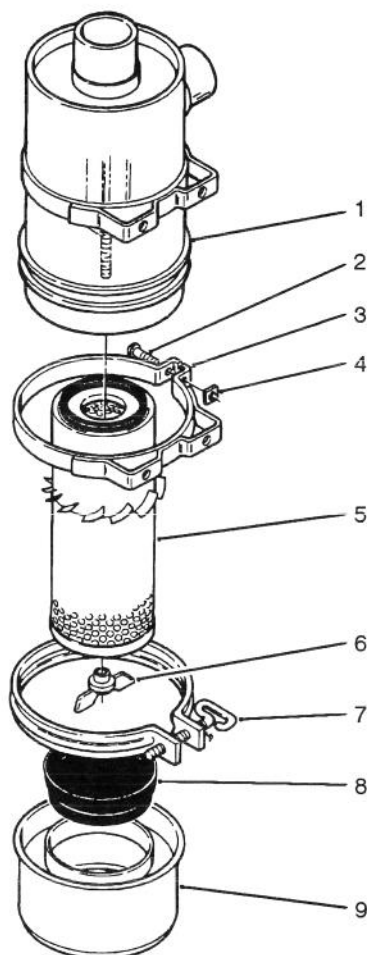


T-1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Body	1	6	33-1330	Nut Assembly	1
2	3258-19	Screw - Round Hd.	2	7	33-1340	Clamp Assembly	1
3	33-1350	Band Assembly (Incl. Ref. #2 & 4)	2	8	33-1310	Baffle	1
4	32107-11	Nut - Square	2	9	33-1320	Cup	1
5	33-1300	Element Assembly	1	*	85-4910	Air Cleaner (Complete) (Incl. Ref. #1 & 5-9)	1

 *Not Illustrated

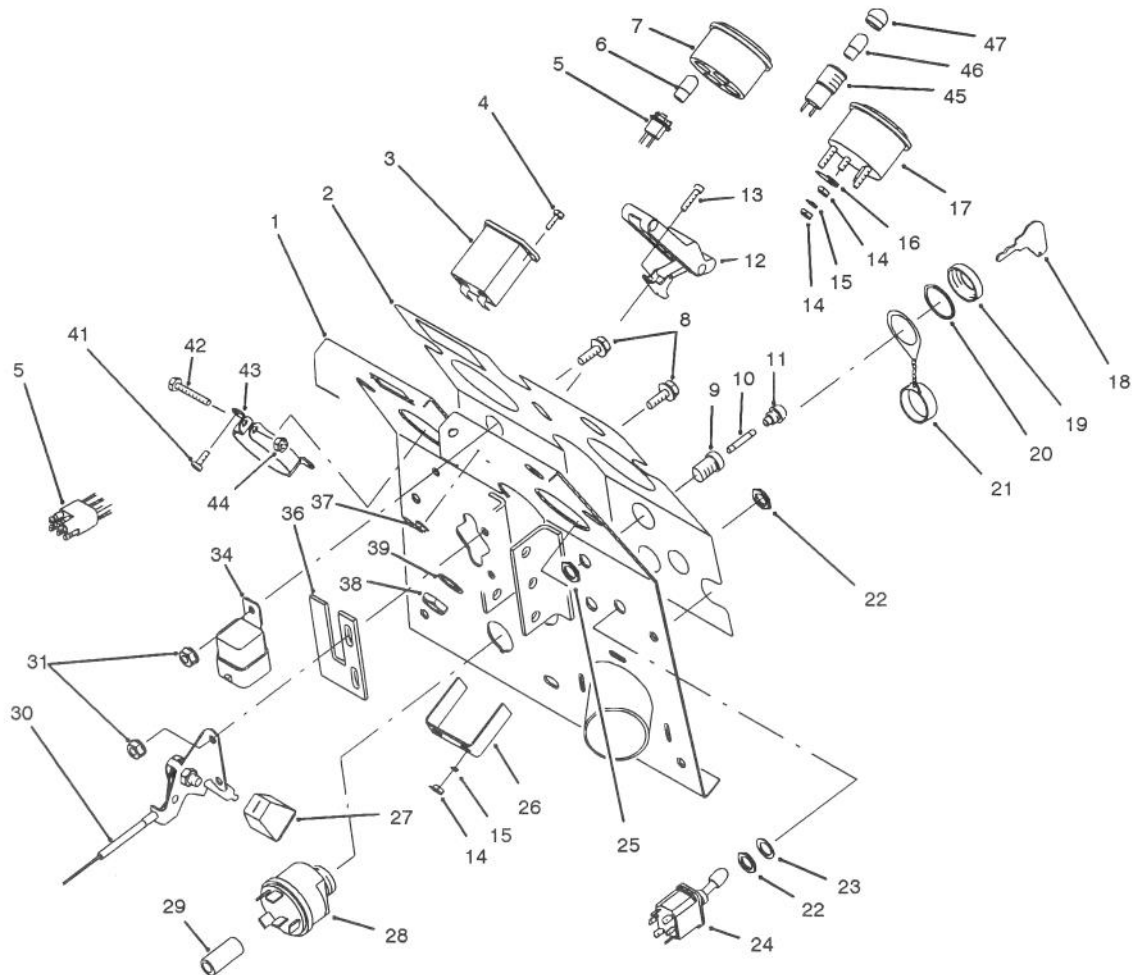

T-1350

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-8190	Panel - Instrument	1
2	83-8180	Decal - Instrument Panel	1
3	75-6820	Hourmeter	1
4	32144-18	Screw - Hex. Hd.	2
5	75-4710	Harness - Warning Light	1
6	219-17	Bulb - Light	4
7	66-2960	Cluster - Warning	1
8	3234-4	Screw - Hex. Washer Hd.	3
9	218-489	Fuse Holder Assembly (Incl. Ref. #11 & 25)	2
10	218-469	Fuse - 15 Amp.	2
11		Cap - Fuse Holder	2
12	80-6980	Latch - Hood	1
13	3274-90	Screw - Hex. Socket Hd.	2
14	3219-14	Nut - Hex.	6
15	3253-2	Washer - Lock	5
16	3256-14	Washer - Flat	2
17	63-7430	Temperature Gauge Assy. (Incl. Ref. #14-16 & 26)	1
†18	385210060	Key - Ignition	2
†19		Nut - Retaining	1
†20	390190030	Seal - Switch	1
†21	385800010	Cover - Switch	1
22	218-500	Nut - Hex.	2
23	3254-20	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
24	85-4980	Switch Assembly (Incl. Ref. #22-23)	1
25		Nut - Hex.	2
26		Clamp - Gauge	1
27		Knob - Throttle	1
†28	385201160	Ignition Switch Assembly (Incl. Ref. #18 & 19)	1
29	80-7345	Hose	
30	83-8280	Throttle Assembly (Incl. Ref. #27)	1
31	32128-33	Nut - Flange Lock	3
34	63-7590	Relay	1
36	85-5000	Plate - Throttle	1
37	32149-9	Nut - Flange Lock	2
38		Nut - Hex.	1
39		Washer - Flat	1
41	32144-39	Screw - Pan Hd.	2
42	32105-1	Screw - Hex. Hd.	1
43	69-4780	Clamp - Light Cluster	1
44	3296-2	Nut - Lock	1
45	44-2212	Light Assembly (Incl. Ref. #38-39 & 46-47)	1
46	219-18	Bulb - Light	1
47	218-562	Lens - Light	1


†Obtain from your local Perkins Dealer.



ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	83-8920	Harness - Wire	1

Ref. No.	Part No.	Description	No. Used

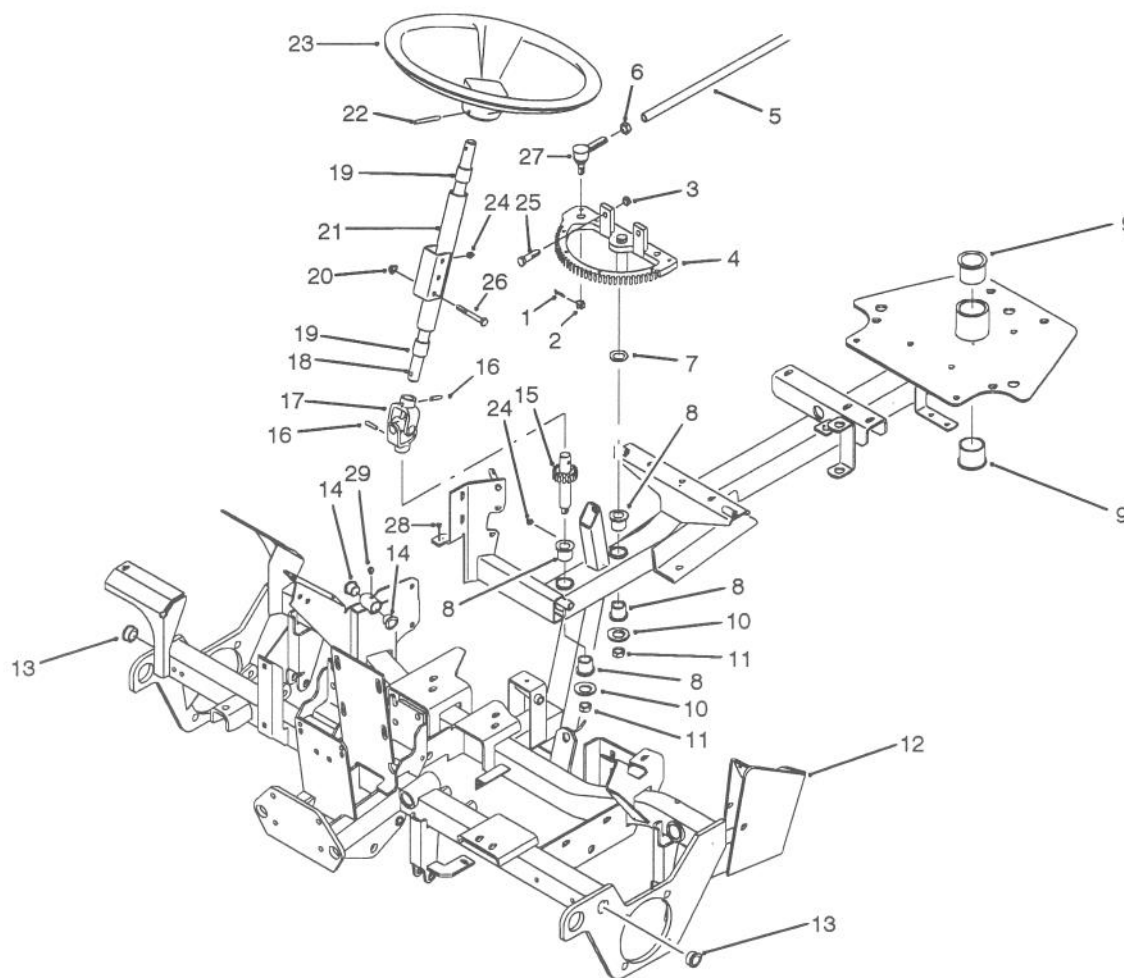 


T-1351

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	1
2	32136-4	Nut - Castle	1
3	3218-3	Nut - Jam	2
4	61-2040	Rack - Steering	1
5	61-2070	Rod - Steering	1
6	3220-5	Nut - Jam	1
7	3-6498	Washer - Thrust	A/R
8	256-117	Bushing - Flange	4
9	256-245	Bushing - Flange	2
10	3256-26	Washer - Flat	2
11	3296-28	Nut - Lock	2
12	92-2373	Frame Assembly (Incl. Ref. #8, 9, 13, 14 & 29)	1
13	256-247	Bushing - Flange	2
14	256-287	Bushing - Flange	2
15	61-2010	Pinion - Steering	1

Ref. No.	Part No.	Description	No. Used
16	32121-15	Pin - Roll	2
17	61-3360	Joint - Universal	1
18	61-2080	Shaft - Steering	1
19	256-27	Bushing - Sleeve	2
20	3296-29	Nut - Flange Lock	1
21	61-2090	Steering Column Assembly (Incl. Ref. #19)	1
22	32121-10	Pin - Roll	1
23	76-1420	Wheel - Steering	1
24	302-5	Fitting - Grease	3
25	32141-84	Screw - Cap Hex. Hd.	2
26	322-12	Screw - Cap Hex. Hd.	1
27	21-0140	Rod End Assembly (Incl. Ref. #2)	1
28	32148-14	Insert - Threaded	1
29	302-5	Fitting - Grease	1

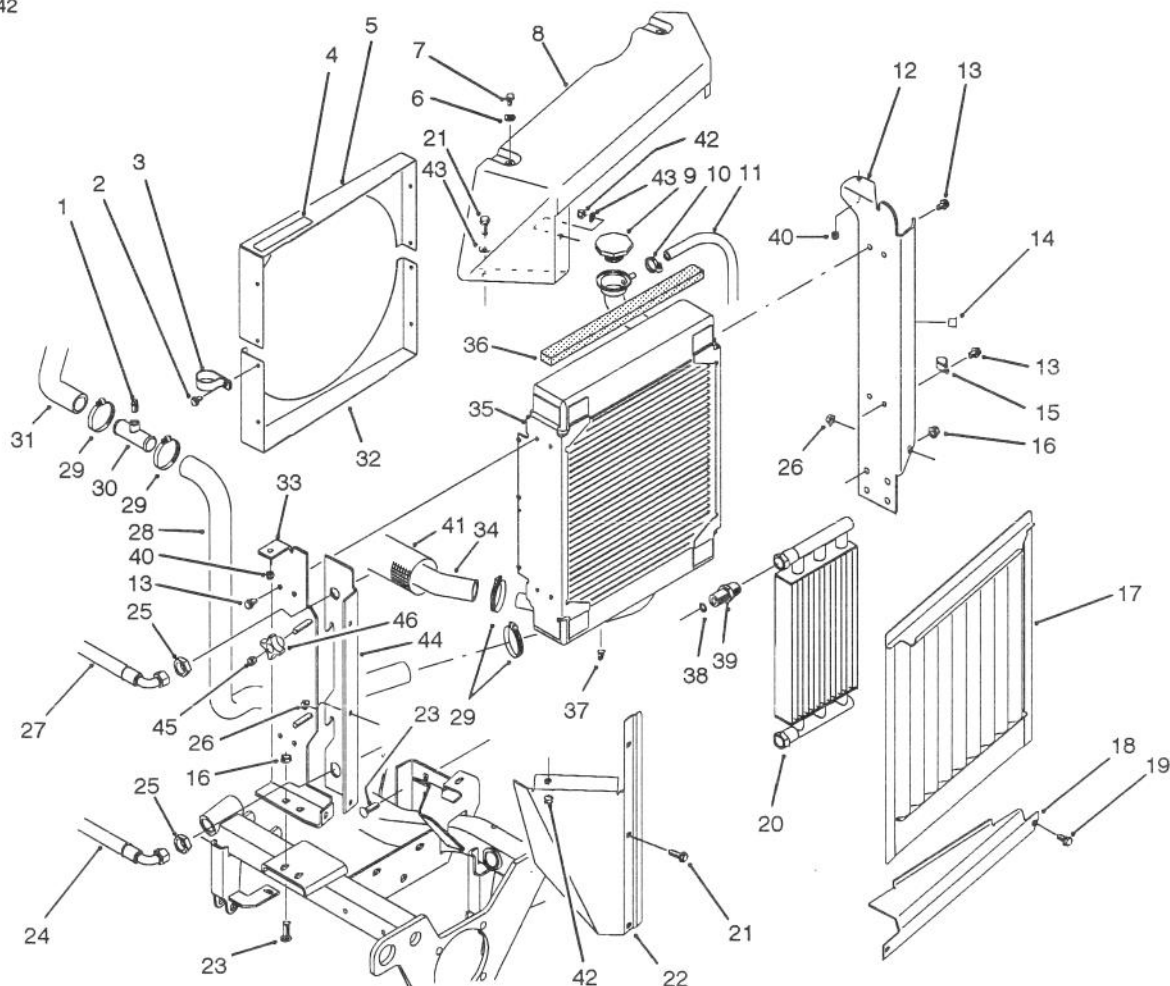 


T-1352

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	281-7	Plug - Pipe	1	25	340-127	Nut - Bulkhead	2
2	32104-116	Screw - Hex. Washer Hd.	8	26	32128-44	Nut - Flange Lock	4
3	2412-74	Clamp - R	1	27	92-1177	Hose - Hydraulic	1
‡4	77-3100	Decal - Warning	1	28	83-9060	Hose - Radiator	1
5	14-8539	Top Shroud Assembly (Incl. Ref. #4)	1	29	2412-34	Clamp - Hose	5
6	3256-22	Washer - Flat	2	30	83-9080	Connector - Bleed	1
7	3234-4	Screw - Cap Hex. Hd.	2	31	83-9070	Hose - Radiator	1
8	83-8040	Cover - Left	1	32	92-2367	Shroud - Fan Bottom	1
9	66-3240	Cap - Radiator	1	33	88-6720	Bracket - Radiator Front	1
10	2412-108	Clamp - Hose	1	34	83-9050	Hose - Radiator	1
11	71-3382	Hose - Overflow	1	35	83-7550	Radiator Assembly (Incl. Ref. #37)	1
12	83-7980	Bracket - Radiator Rear	1	36	83-9030	Foam - Top	1
13	3234-28	Screw - Hex. Washer Hd.	8	37	281-1	Plug - Pipe	2
14	32148-8	Insert - Threaded	3	38	237-30	Seal - O-Ring	2
15	2412-41	Clamp - R	1	39	83-7970	Fitting - Hydraulic Bulkhead (Incl. Ref. #38)	2
16	32128-43	Nut - Flange Lock	6	40	3296-42	Nut - Lock	2
17	83-8150	Screen - Radiator	1	41	85-5170	Sleeve	1
18	83-8070	Bracket - Radiator Bottom	1	42	3296-29	Nut - Lock	2
19	3234-5	Screw - Hex. Washer Hd.	2	43	3256-23	Washer - Flat	2
20	24-0760	Cooler - Oil	1	44	88-6730	Bracket - Screen Front	1
21	3234-17	Screw - Hex. Washer Hd.	4	45	32153-1	Nut - Lock	2
22	83-8210	Panel - Front Left	1	46	92-2368	Knob - Clamp	2
23	3231-22	Bolt - Carriage	6				
24	92-1583	Hose - Hydraulic	1				

 
‡For different language versions of this part, see International Decal Cross Reference.

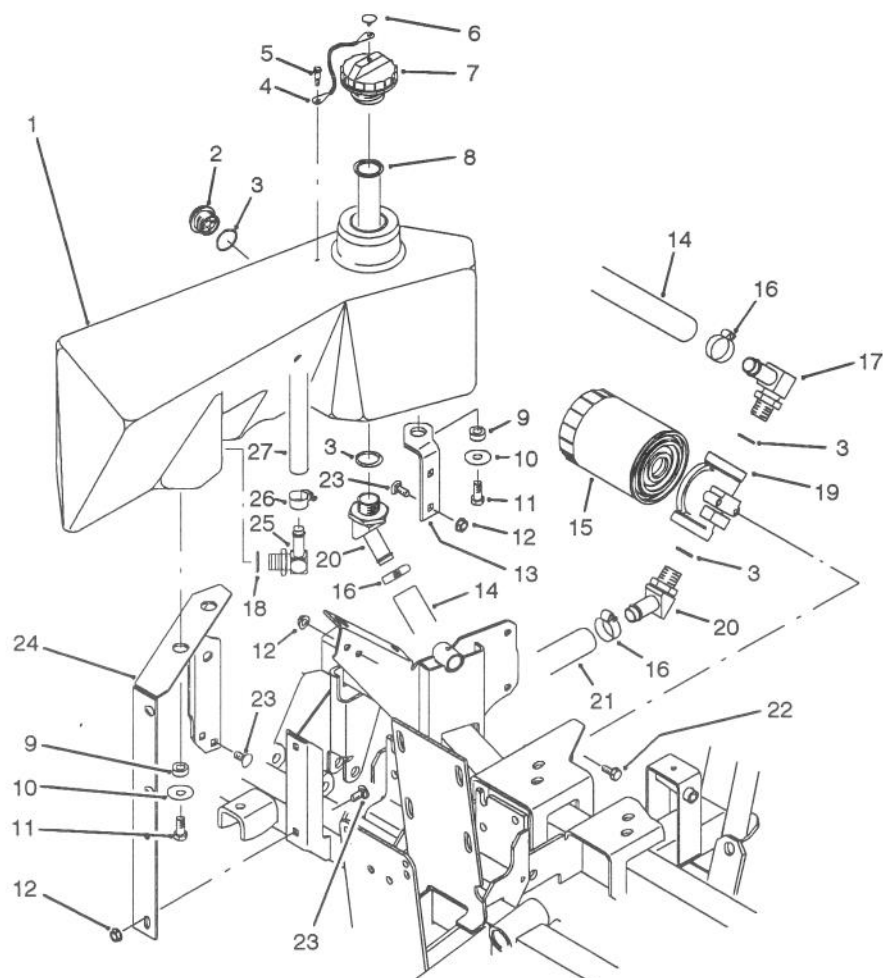

T-1353

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-7720	Reservoir - Hydraulic	1	15	54-0110	Element - Oil Filter	1
2	69-1170	Glass - Sight (Incl. Ref. #3)	1	16	3212-34	Clamp - Hose	3
3	237-81	Seal - O-Ring	4	17	353-987	Fitting - Hydraulic 90° (Incl. Ref. #3)	1
4	75-0540	Teather - Cap	1	18	237-79	Seal - O-Ring	1
5	57-5420	Screw - Shoulder	1	19	68-8990	Head - Oil Filter	1
6	2410-73	Retainer - Teather	1	20	354-127	Fitting - Hydraulic 45° (Incl. Ref. #3)	2
7	70-8640	Cap - Hydraulic Reservoir (Incl Ref. #4 & 6)	1	21	83-9650	Hose - Hydraulic	1
8	61-2790	Screen - Filler	1	22	3234-4	Screw - Hex. Washer Hd.	2
9	240-11	Grommet	3	23	3230-23	Screw - Carriage	6
10	63-8410	Washer - Flat	3	24	83-7780	Bracket - Support	1
11	323-5	Screw - Cap Hex. Hd.	3	25	354-120	Fitting - Hydraulic 90° (Incl. Ref. #18)	1
12	32128-44	Nut - Hex. Flange Hd.	6	26	2412-36	Clamp - Hose	1
13	83-9920	Bracket - Reservoir	1	27	92-1178	Hose - Hydraulic	1
14	83-9651	Hose - Hydraulic	1				

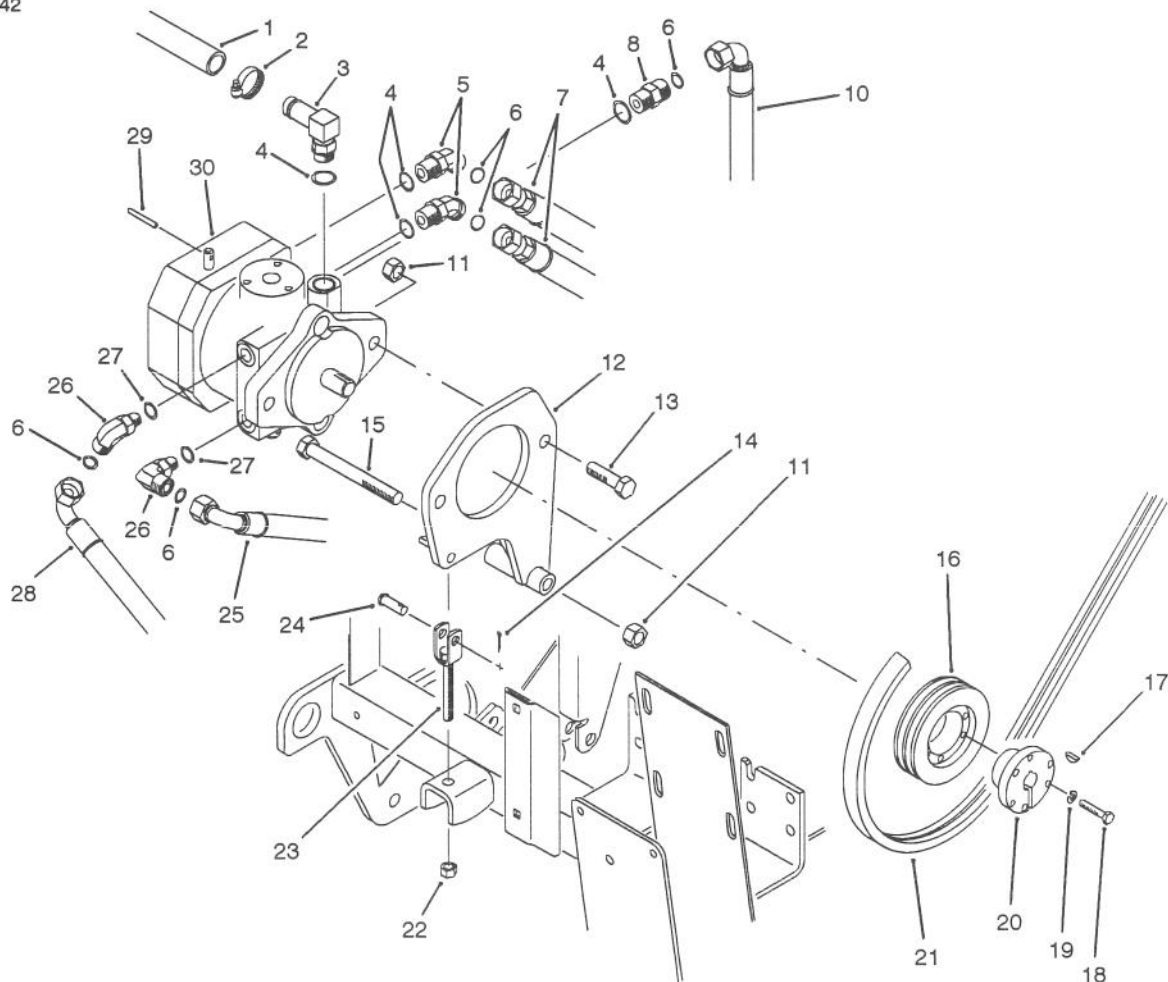 


T-1354

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9650	Hose - Hydraulic	1
2	2412-34	Clamp - Hose	1
3	354-128	Fitting - Hydraulic 90° (Incl. Ref. #4)	1
4	237-79	Seal - O-Ring	4
5	340-101	Fitting - Hydraulic 45° (Incl. Ref. #4 & 6)	2
6	237-30	Seal - O-Ring	5
7	83-9600	Hose - Hydraulic	2
8	340-4	Fitting - Hydraulic Straight (Incl. Ref. #4 & 6)	1
10	92-1178	Hose - Hydraulic	1
11	3296-23	Nut - Lock	3
12	83-8320	Mount - Pump	1
13	325-7	Screw - Cap Hex. Hd.	2
14	3272-6	Pin - Cotter	1
15	325-18	Screw - Cap Hex. Hd.	1
16	85-4960	Pulley	1

Ref. No.	Part No.	Description	No. Used
17	3257-32	Key - Woodruff	1
18	321-13	Screw - Cap Hex. Hd.	3
19	3253-3	Washer - Lock	3
20	59-2150	Taper Lock Bushing Assy. (Incl. Ref. #18 & 19)	1
21	83-8540	Belt - Pump Drive	1
22	3296-6	Nut - Lock	1
23	83-9660	Clevis	1
24	283-2	Pin - Clevis	1
25	83-9640	Hose - Hydraulic	1
26	340-99	Fitting - Hydraulic 90° (Incl. Ref. #6 & 27)	2
27	237-42	Seal - O-Ring	2
28	92-1583	Hose - Hydraulic	1
29	32121-34	Pin - Dowel	1
30	85-4920	Hydraulic Pump Assembly (Incl. Ref. #17)	1

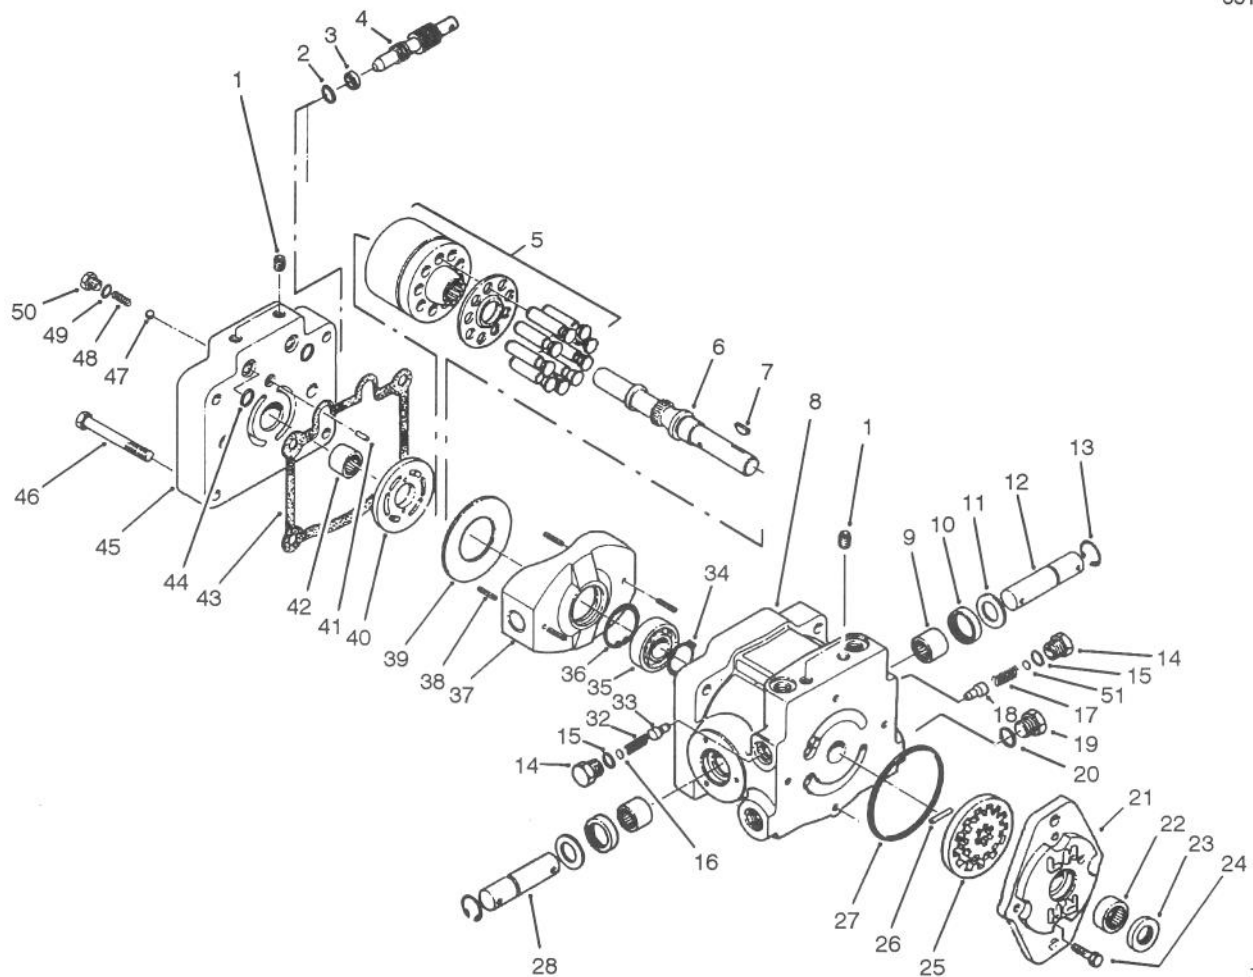 


T-0245

HYDRAULIC PUMP ASSEMBLY NO. 85-4920

Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	6
2	237-22	O-Ring	1
3	25-2630	Ring	1
4	25-2620	Valve - By-Pass	1
5	48-1800	Cylinder Block Kit	1
6	67-8020	Shaft - Pump	1
7	3257-32	Key - Woodruff	1
8	85-4920	Hydraulic Pump Assembly (Complete)	1
9	252-82	Bearing - Needle	2
10	25-3210	Seal - Lip	2
11	25-2510	Washer	2
12	25-2580	Shaft - Trunion	1
13	32151-46	Ring - Retaining	2
14	25-2460	Plug	2
15	237-86	O-Ring	2
16	25-2470	Kit - Shim Pack	2
17	25-2570	Spring - Relief Valve	1
18	25-2560	Cone - Relief Valve	1
19	67-8030	Plug Assembly (Incl. Ref. #20)	1
20	67-8040	O-Ring	1
21	25-2690	Housing - Charge Pump	1
22	67-8050	Bearing - Needle	1
23	67-8060	Seal - Lip	1
24	322-4	Screw - Cap Hex. Hd.	4

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
25	25-2680	Gerotor Assembly	1
26	25-2530	Pin - Straight	1
27	237-95	O-Ring	1
28	49-8480	Shaft - Trunion	1
32	25-2480	Spring - Charge Relief	1
33	28-3420	Cone - Charge Relief	1
34	32120-15	Ring - Retaining	1
35	251-8	Bearing - Ball	1
36	32120-11	Ring - Retaining	1
37	25-2450	Swash/Plate	1
38	32121-91	Pin - Coiled Spring	3
39	25-2380	Plate - Thrust	1
40	25-2390	Plate - Valve	1
41	25-2430	Pin - Straight	1
42	67-8080	Bearing - Needle	1
43	25-2400	Gasket	1
44	62-4290	O-Ring	2
45	67-8090	Cap - Pump End	1
46	323-11	Screw - Cap Hex. Hd.	4
47	25-2490	Ball - Check Valve	2
48	25-2640	Spring - Check Valve	2
50	25-2650	Plug - Check Valve	2
*	25-3180	Kit - Check Valve (Incl. Ref. #47-50)	1
*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

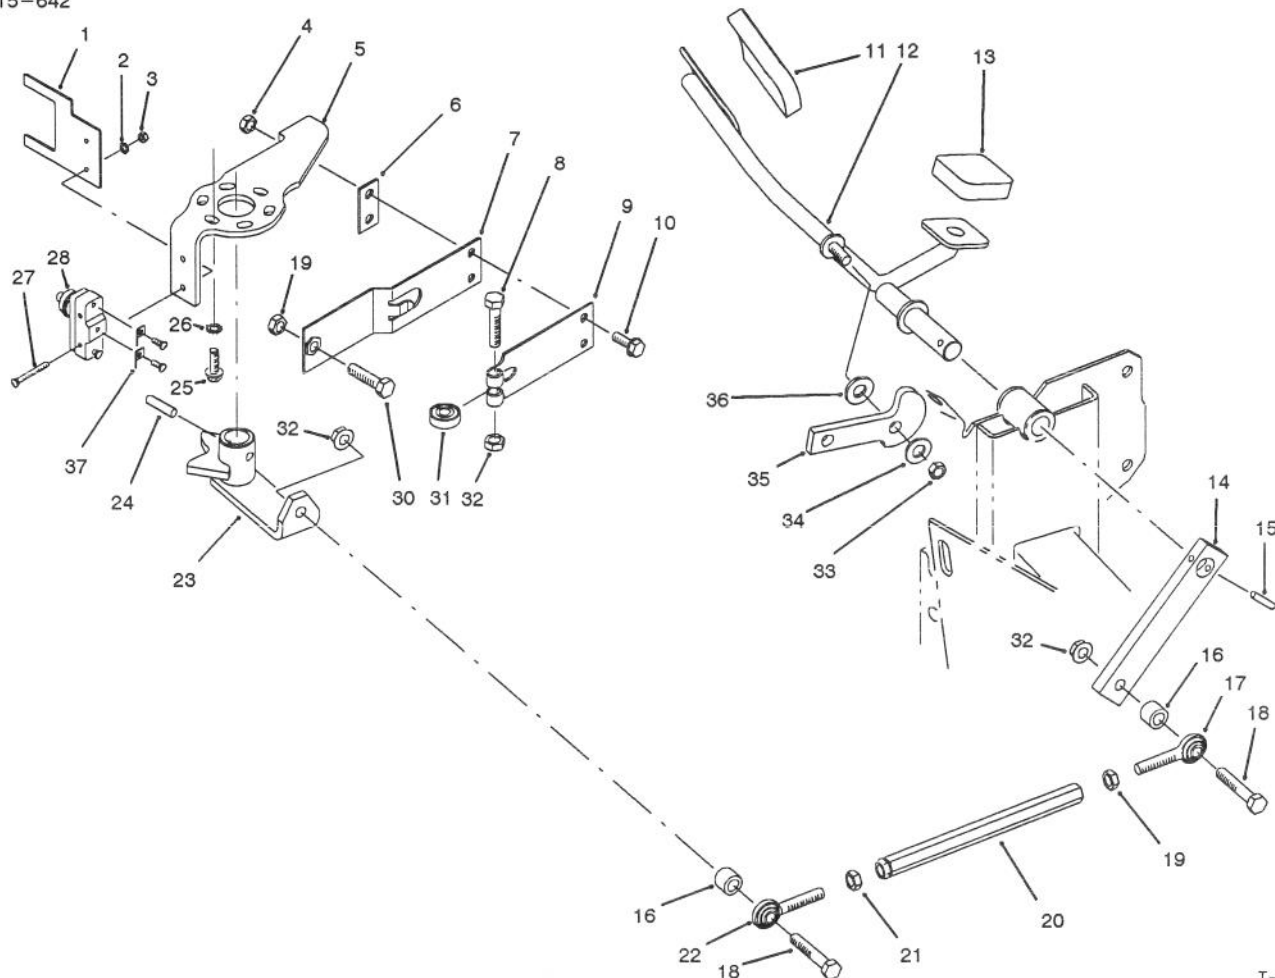 


T-1355

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8810	Stop - Spring	1
2	3254-9	Washer - ITLW	2
3	3217-16	Nut - Lock	2
4	3296-16	Nut - Lock	2
5	29-6120	Plate - Pump	1
6	51-3150	Shim - Spring	1
7	29-6170	Spring - Extended Leaf	1
8	322-17	Screw - Cap Hex. Hd.	1
9	29-6150	Spring - Leaf	1
10	321-6	Screw - Cap Hex. Hd.	2
11	74-9100	Pad - Forward	1
12	83-8270	Pedal - Traction	1
13	74-9110	Pad - Reverse	1
14	61-2610	Arm - Traction	1
15	32121-6	Pin - Roll	1
16	61-2370	Spacer	2
17	2411-52	End - Rod	1
18	322-9	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
19	3220-2	Nut - Jam	2
20	83-8760	Rod - Control	1
21	3220-20	Nut - Jam	1
22	2411-53	End - Rod	1
23	83-8770	Lever - Pump	1
24	32121-24	Pin - Roll	1
25	11-9760	Screw - Hex. Flange Hd.	3
26	3255-7	Washer - ETLW	3
27	3249-11	Screw - Round Hd.	2
28	29-6163	Switch	1
30	3210-7	Screw - Cap Hex. Hd.	1
31	251-259	Bearing - Ball	1
32	3296-29	Nut - Lock	3
33	3296-59	Nut - Lock	1
34	3256-24	Washer - Flat	1
35	74-6110	Cam - Stop	1
36	66-2920	Spacer	1
37	218-596	Tab	2

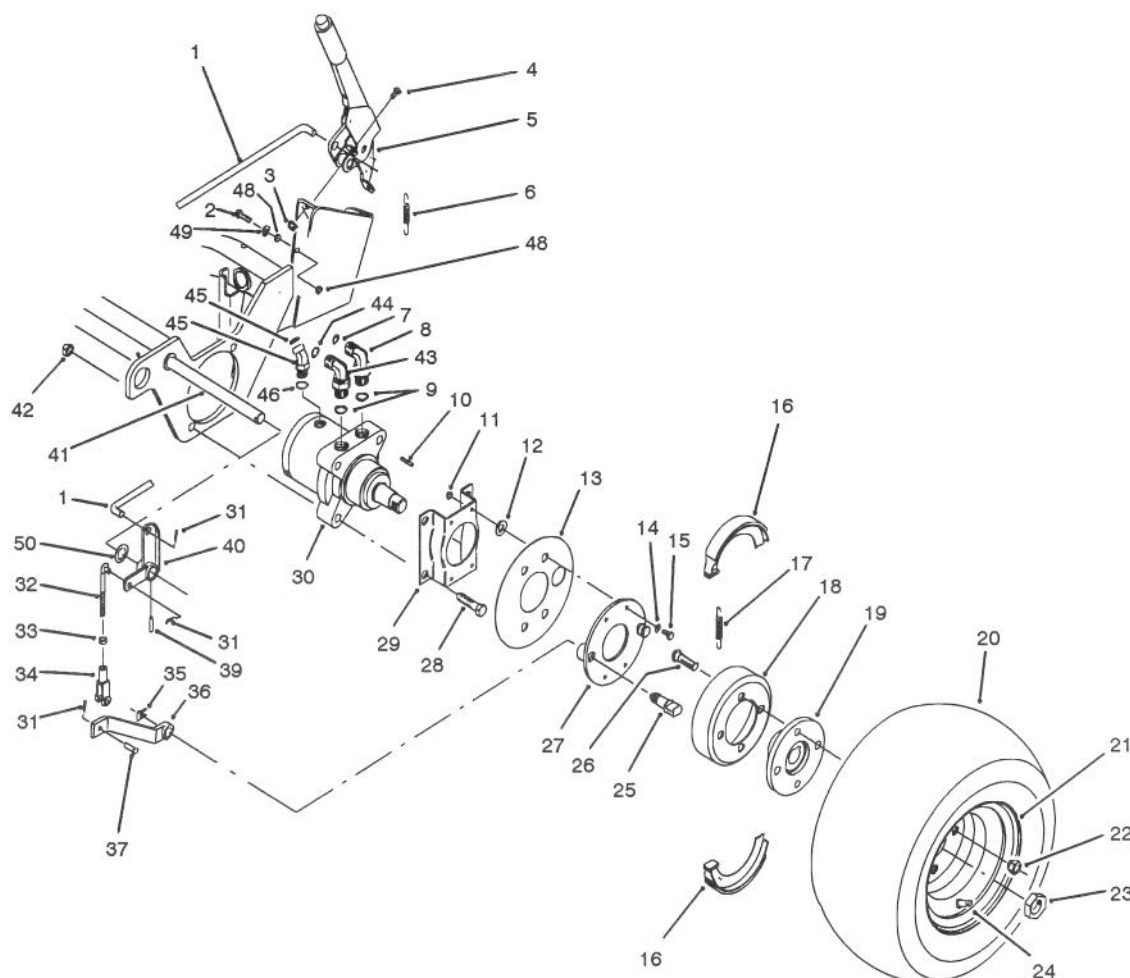 


T-1356

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1	23	26-3790	Nut - Lock	2
2	322-17	Screw - Cap Hex. Hd.	1	24	232-27	Valve - Stem	2
3	32128-44	Nut - Lock	2	25	70-9860	Pin - Pivot Brake	2
4	3234-5	Screw - Hex. Washer Hd.	2	26	85-6540	Stud - Drive	8
5	61-3990	Parking Brake Assembly	1	27	70-9870	Plate - Brake	2
6	5-7290	Spring - Extension	1	28	325-11	Screw - Cap Hex. Hd.	8
7	237-30	Seal - O-Ring	2	29	84-2000	Bracket - Brake	2
8	340-105	Fitting - Hydraulic 90° (Incl. Ref. 7 & 9)	2	30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
9	237-80	Seal - O-Ring	4	31	3272-6	Pin - Cotter	5
10	3257-15	Key - Square	2	32	84-1990	Rod - Adjusting	2
11	3296-42	Nut - Lock	8	33	3220-2	Nut - Jam	2
12	3256-16	Washer - Flat	8	34	282-2	Clevis	2
13	83-9340	Shield - Grass	2	35	70-9850	Clip - Retaining	2
14	3253-3	Washer - Lock	8	36	83-9250	Lever - Brake	2
15	321-5	Screw - Cap Hex. Hd.	8	37	283-1	Pin - Clevis	2
16	70-9840	Shoe - Brake	4	39	32121-6	Pin - Roll	2
17	70-9880	Spring - Extension	4	40	83-9270	Pivot - Brake L.H.	1
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2	*	83-9310	Pivot - Brake R.H.	1
19	10-6870	Hub - Wheel	2	41	83-9330	Shaft - Brake	1
20	231-127	Tire	2	42	3296-23	Nut - Lock	8
21	217-60	Rim	2	43	340-17	Fitting - Hydraulic 90° (Incl. Ref. #9 & 44)	2
22	242-50	Nut - Lug	8	44	237-65	Seal - O-Ring	2

 *Not Illustrated

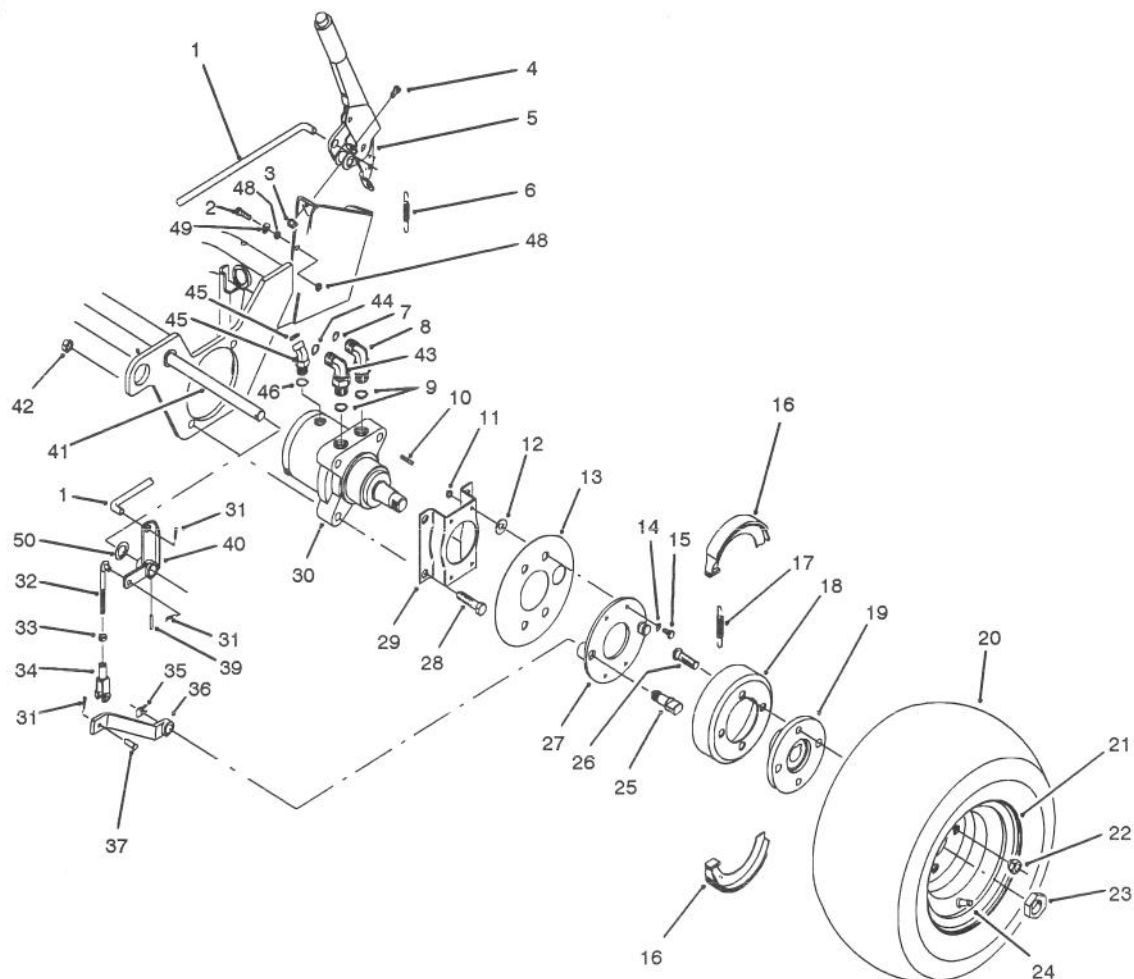


T-1356

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting - Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting - Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1
46	237-78	Seal - O-Ring	2

Ref. No.	Part No.	Description	No. Used
47	237-21	Seal - O-Ring	3
48	32128-20	Nut - Lock	2
49	3256-23	Washer	1
50	3-6498	Washer	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

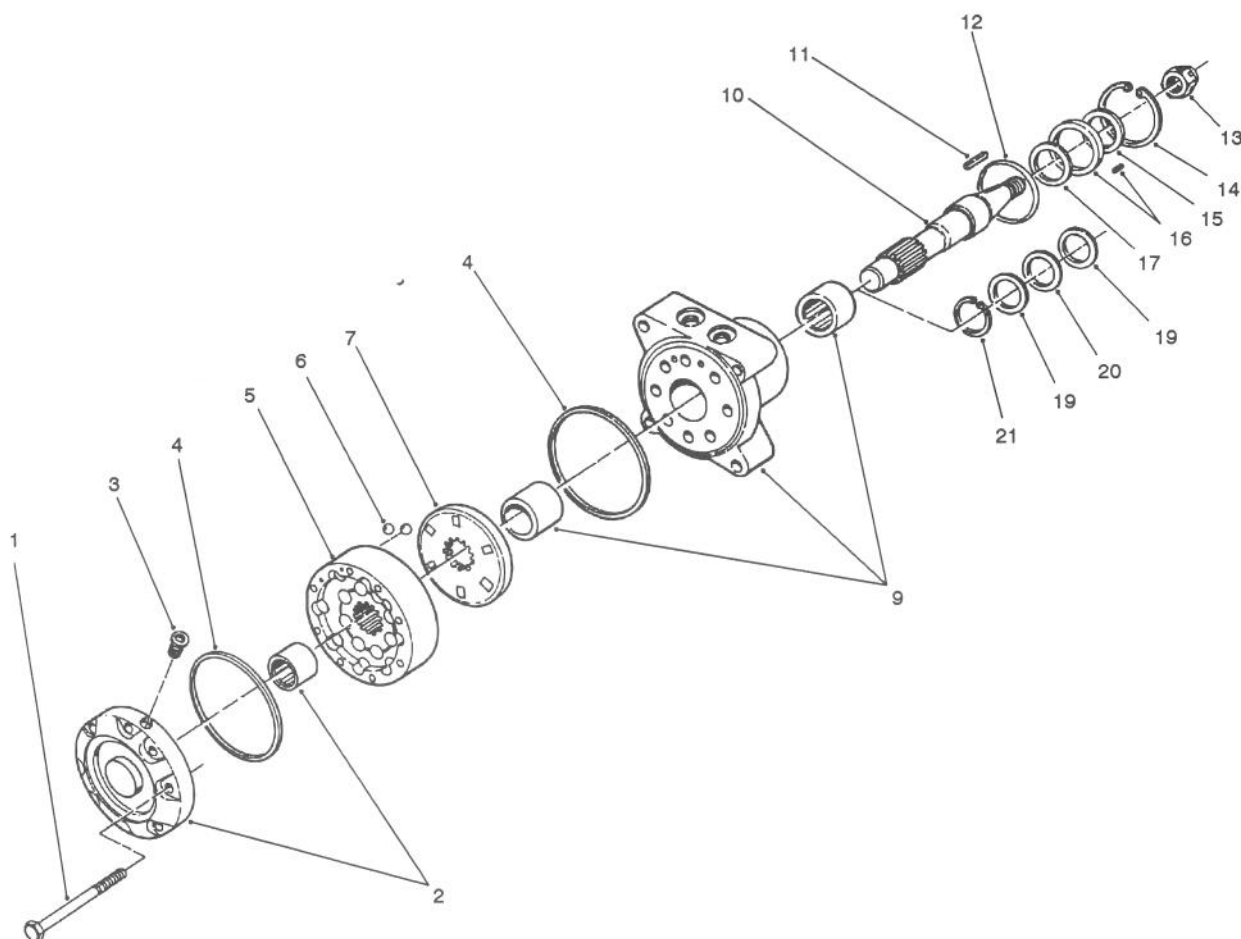

T-0274


HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8
2	65-4680	Cover & Bearing Assembly	1
3	65-4560	Plug - Hex (Hollow)	1
4	65-4570	Seal - Square Ring	2
5	66-6110	IGR Assembly	1
6	65-4550	Valve - Check Ball	2
7	70-8150	Plate - Valve	1
9	65-4670	Body & Bearing Assembly	1
10	65-4660	Shaft	1
11	65-4640	Key - Square	1
12	65-4620	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
14	65-4500	Seal - Snap Ring	1
†15		Seal - Dust	1
†16		Retainer/Pin	1
†17		Seal - Lip	1
*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
19	65-4600	Washer - Thrust	2
20	65-4610	Bearing - Thrust	1
21	65-4590	Ring - Snap	1
*	76-2360	Body Seal Kit (Incl. Ref. #4, 12 & 15-17)	1

*Not Illustrated

 †Not available from Toro as a replacement part.

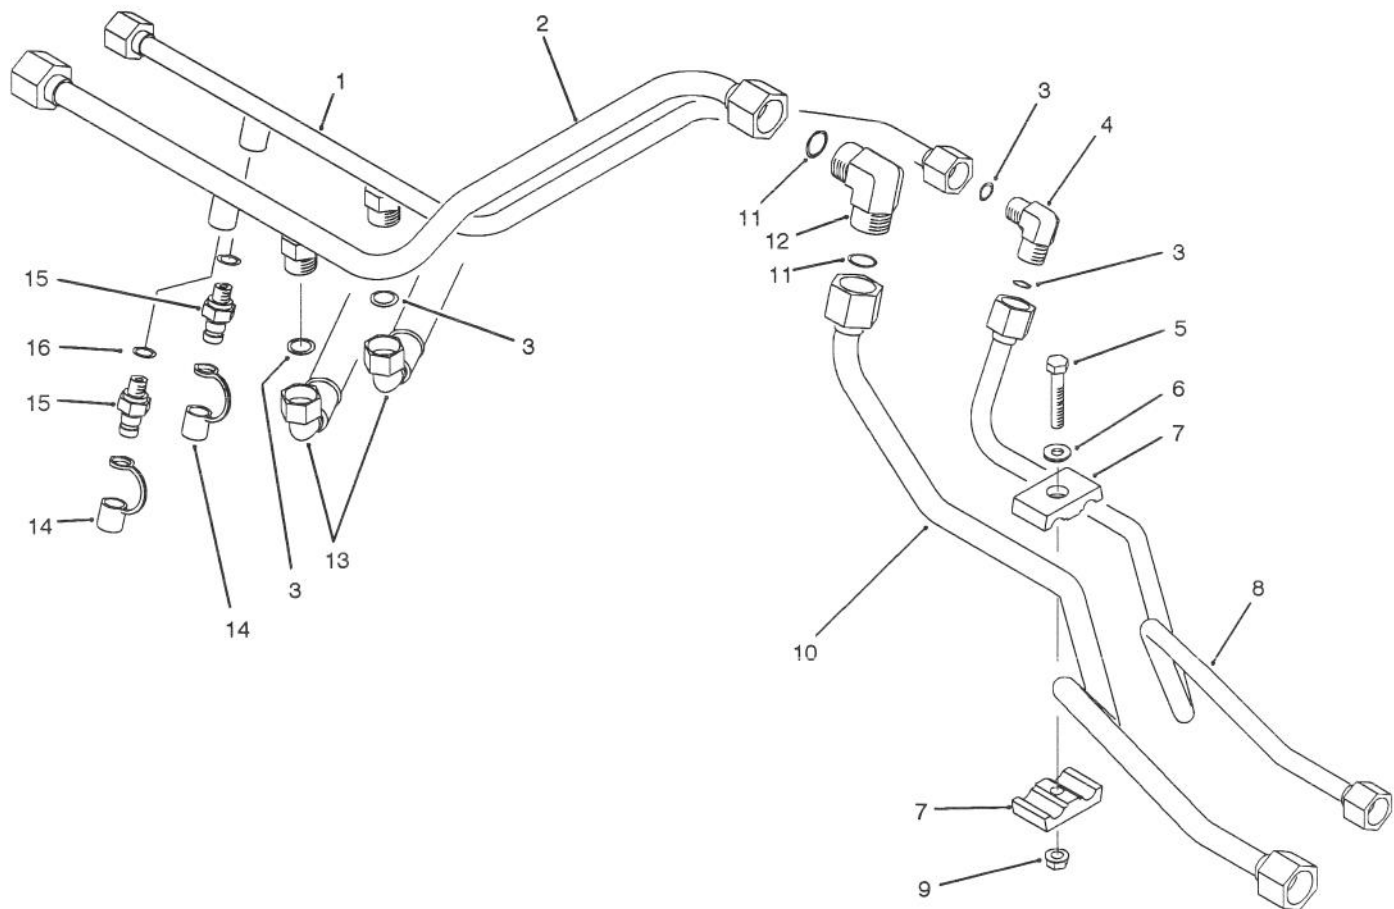


T-1357


DRIVE MOTOR PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9470	Hydraulic Tube Assembly (Incl. Ref. #3)	1
2	83-9440	Hydraulic Tube Assembly (Incl. Ref. #3)	1
3	237-30	Seal - O-Ring	4
4	340-163	Fitting - Hydraulic 90° (Incl. Ref. #3)	1
5	322-9	Screw - Cap Hex. Hd.	1
6	3256-3	Washer - Flat	1
7	56-7977	Clamp - Hydraulic Tube	2
8	83-9480	Tube - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
9	3296-29	Nut - Lock	1
10	83-9450	Tube - Hydraulic	1
11	237-65	Seal - O-Ring	2
12	340-162	Fitting - Hydraulic 90° (Incl. Ref. #11)	1
13	83-9600	Hose - Hydraulic	2
14	354-79	Cap - Test Port	2
15	354-77	Hydraulic Test Port Fitting (Incl. Ref. #16)	2
16	237-78	Seal - O-Ring	2

  HYDRAULIC SCHEMATIC

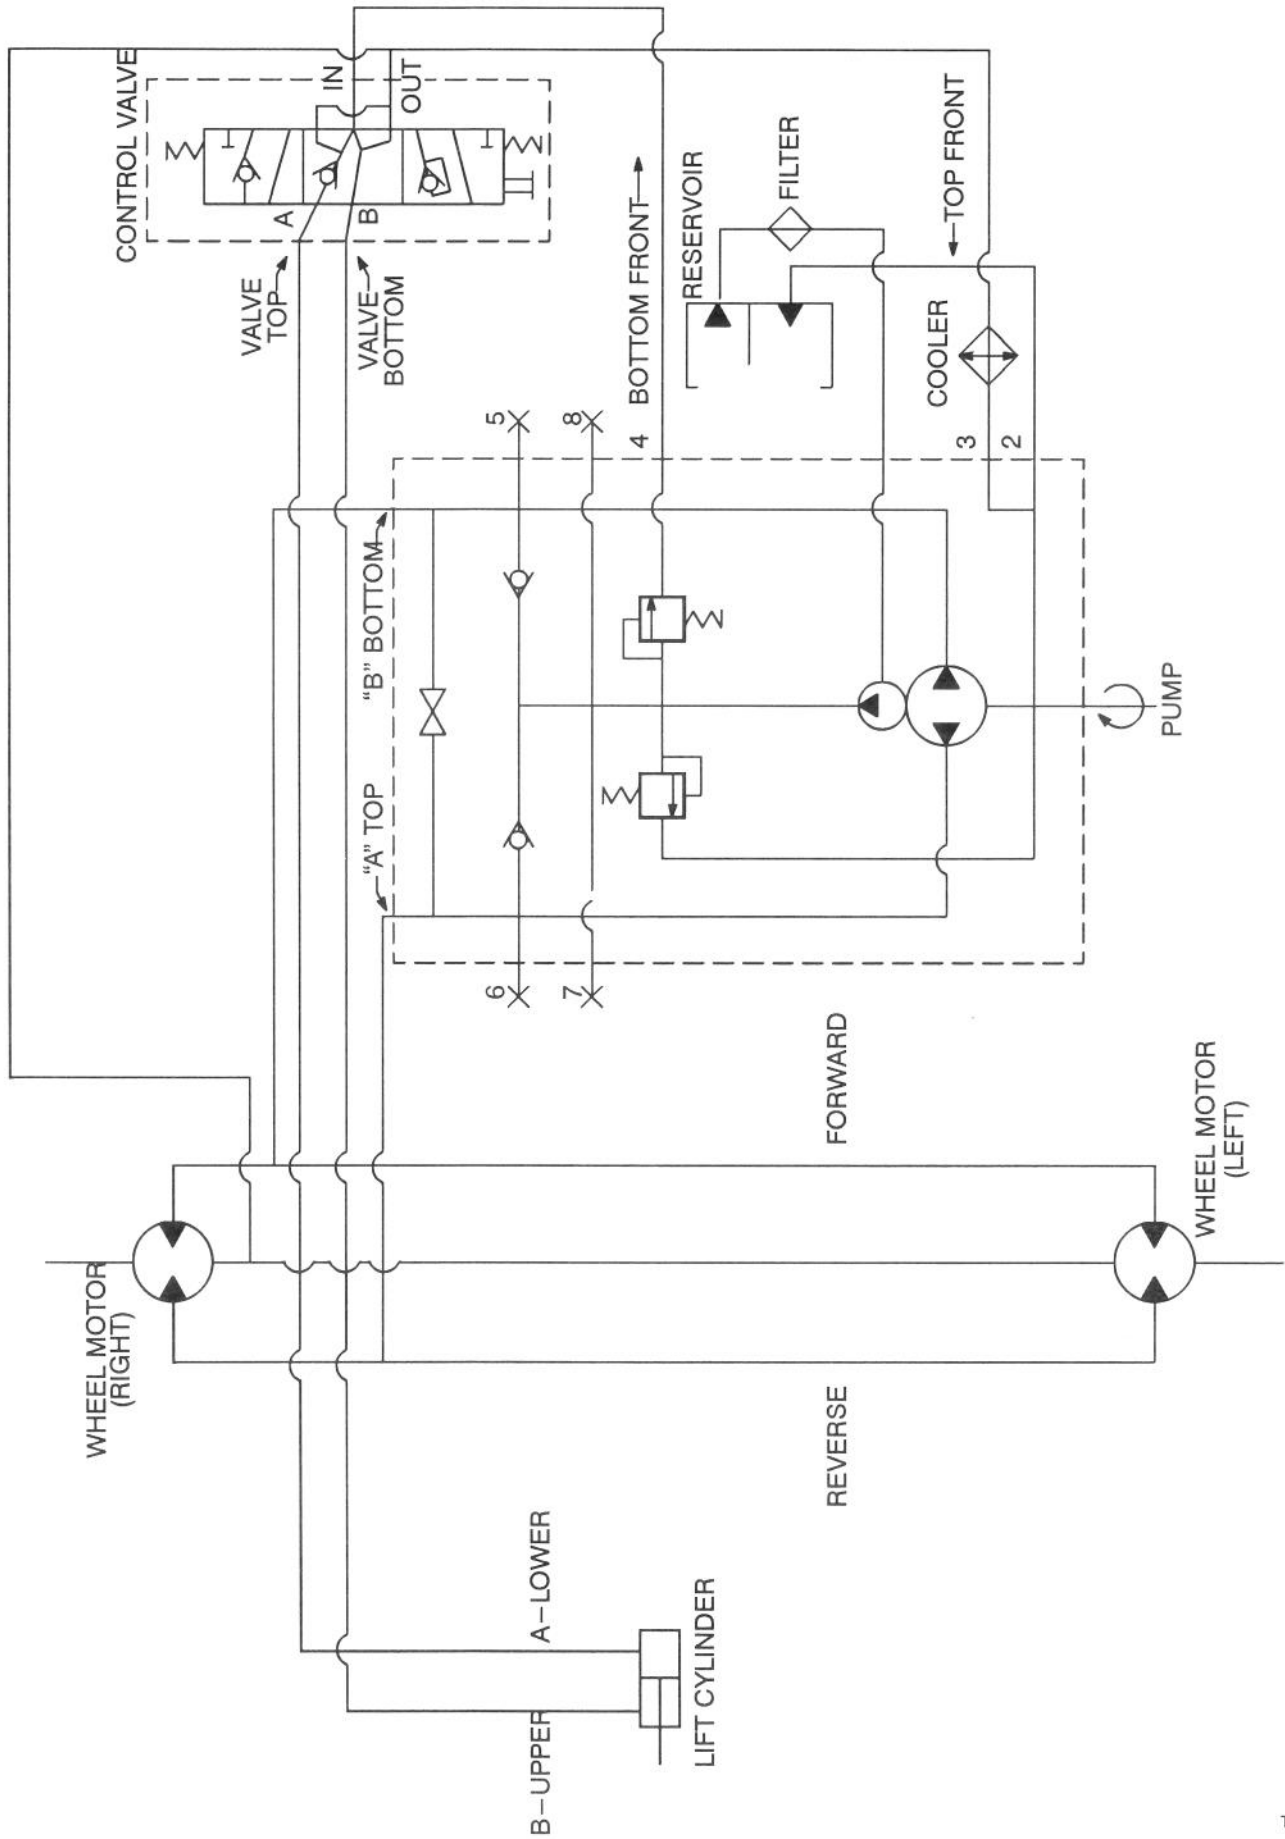

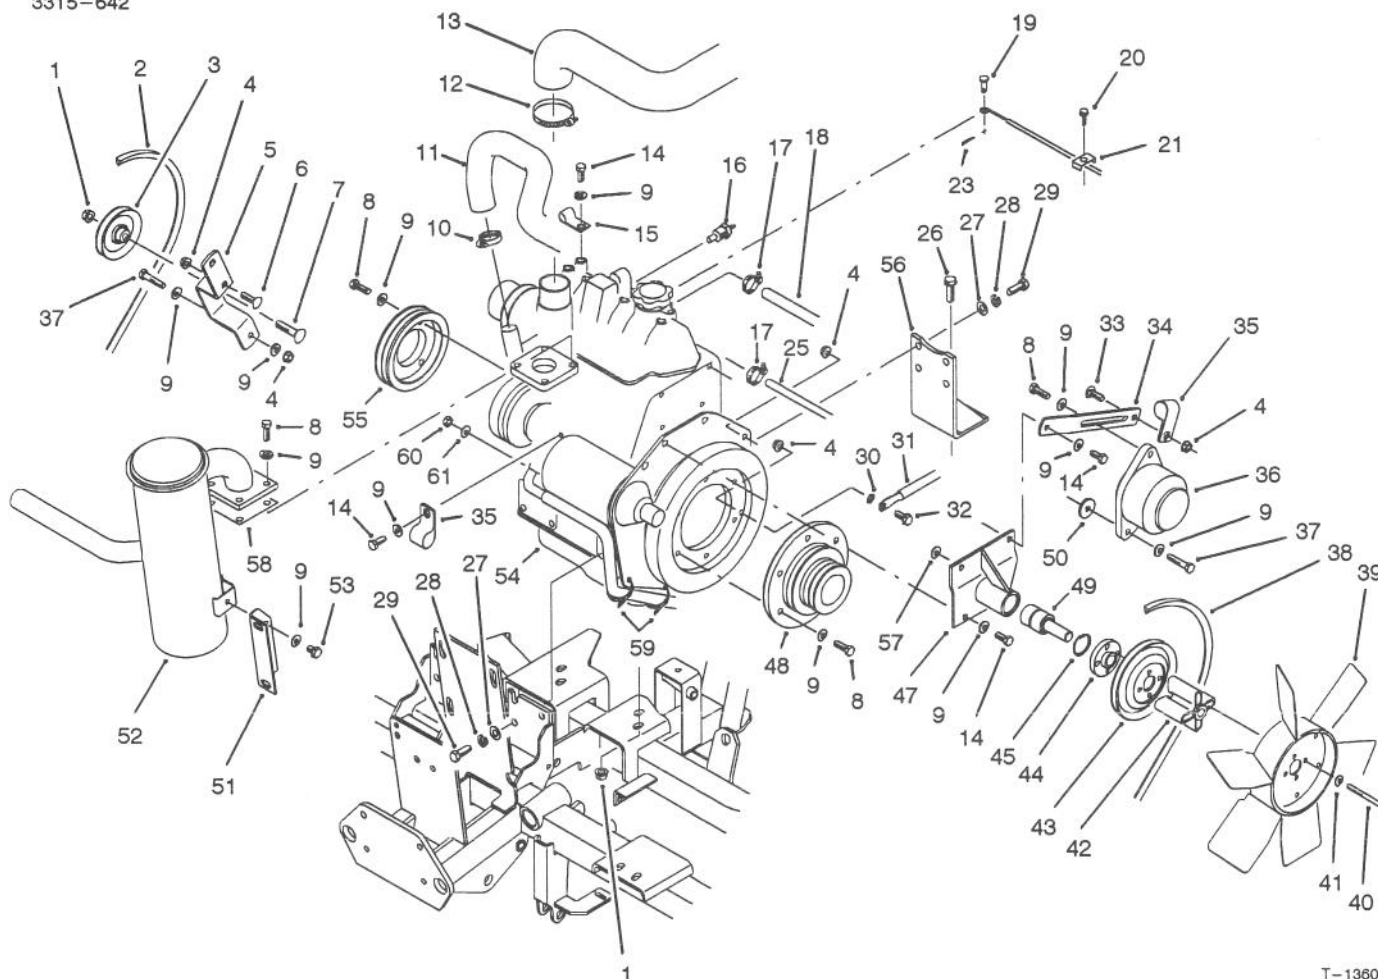


T-1360

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut - Flange Lock	5	29	48-7780	Screw - Cap Hex. Hd.	16
2	37-9090	Belt - V	1	30	3255-8	Washer - Lock E.T.L.W.	1
3	63-8140	Pulley - Idler	1	31	83-9210	Cable - Ground	1
4	32128-44	Nut - Flange Lock	5	32	3234-5	Screw - Hex. Washer Hd.	1
5	83-7690	Bracket - Idler	1	33	3230-1	Screw - Carriage	1
6	3230-22	Screw - Carriage	1	34	83-7700	Bracket - Alternator	1
7	3231-26	Screw - Carriage	1	35	2412-39	Clamp - R	2
8	48-9460	Screw - Cap Hex. Hd.	14	†36	185046210	Alternator	1
9	3256-23	Washer - Flat	23	37	322-7	Screw - Cap Hex. Hd.	2
10	2412-34	Clamp - Hose	1	38	83-9020	Belt - V	1
11	83-9070	Hose - Coolant	1	†39	145306380	Fan	1
12	2412-92	Clamp - Hose	1	40	321-14	Screw - Cap Hex. Hd.	4
13	83-8550	Hose - Air Intake	1	41	48-8010	Washer - Flat	4
14	48-7700	Screw - Cap Hex. Hd.	6	42	83-7620	Spacer - Fan	1
15	2412-93	Clamp - R	1	43	83-7630	Pulley - Fan	1
16	82-3110	Sensor - Temp	1	44	83-7610	Hub - Fan	1
17	2412-108	Clamp - Hose	2	45	32120-10	Ring - Retaining	1
18	63-7620	Hose - Fuel	1	47	83-9880	Bracket - Fan Spindle	1
19	283-62	Pin - Clevis	1	48	83-8410	Pulley - Engine	1
20	3290-432	Screw - Hex. Hd.	1	49	36-7290	Spindle - Fan	1
21	81-1690	Clamp - Throttle Cable	1	50	62-9510	Washer - Flat	1
23	3272-9	Pin - Cotter	1	51	83-8220	Bracket - Muffler	1
25	75-4703	Hose - Fuel	1	52	83-8500	Muffler	1
26	3234-24	Screw - Hex. Flange Hd.	4	53	3234-28	Screw - Hex. Washer Hd.	1
27	3256-24	Washer - Flat	16	54	83-7540	Engine Assembly	1
28	48-9590	Washer - Lock	16	55	83-7590	Pulley - Engine	1

 
†Obtain from your local Perkins Dealer.

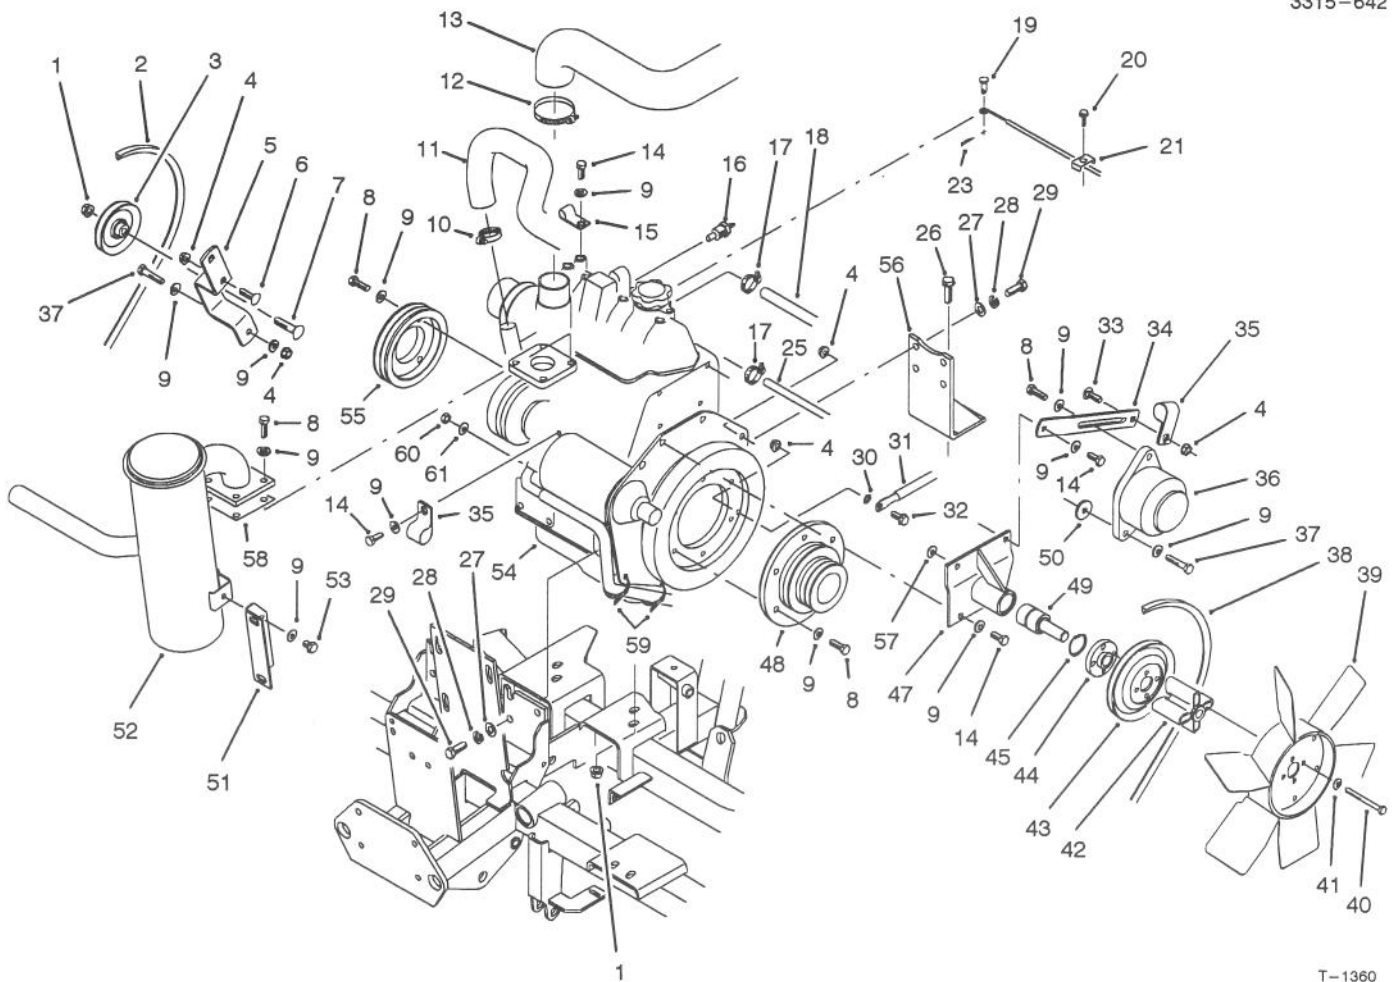

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
56	83-8470	Bracket - Engine Mount	2
57	65-8270	Washer	1
58	83-9910	Gasket - Muffler	1


Ref. No.	Part No.	Description	No. Used
59	3290-379	Tie - Cable	2
60	57-6390	Nut	1
61	42-9850	Washer	1

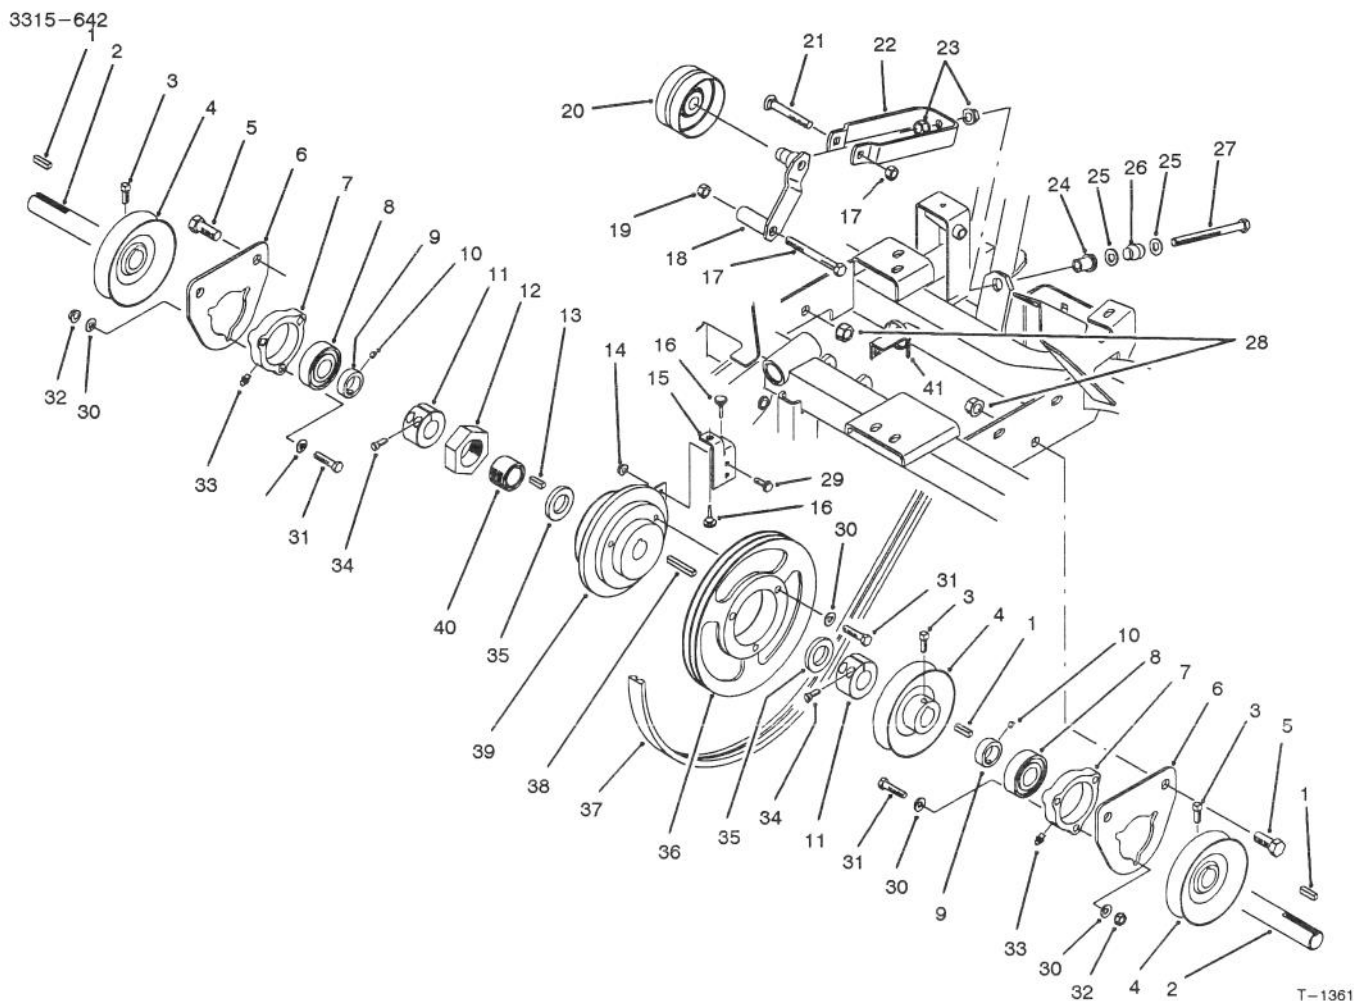 

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-7280	Key - Square	3
2	83-7820	Shaft - Drive	1
3	3242-4	Screw - Square Hd. Set	6
4	61-0140	Pulley - Reel	3
5	3234-32	Screw - Cap Hex. Hd.	4
6	61-2350	Support - Bearing	2
7	76-2460	Bearing Assembly (Incl. Ref. #7-10 & 33)	2
8	251-337	Bearing - Ball	2
9	251-77	Collar - Locking	2
10	3245-35	Screw - Set	4
11	83-7790	Collar	2
12	3218-17	Nut - Jam	1
13	10-7070	Key - Square	1
14	32128-33	Nut - Flange Lock	2
15	83-7830	Retainer - Clutch	1
16	240-13	Bumper	2
17	3296-39	Nut - Lock	2
18	83-8620	Bracket - Idler	1
19	323-15	Screw - Cap Hex. Hd.	1
20	83-8400	Pulley - Idler	1

Ref. No.	Part No.	Description	No. Used
21	3231-31	Bolt - Carriage	1
22	83-8630	Yoke - Belt Tension	1
23	32128-43	Nut - Flange Lock	2
24	83-9810	Bushing - Flange	1
25	3256-24	Washer - Flat	2
26	83-9690	Spring - Compression	1
27	83-9680	Screw - Cap Hex. Hd.	1
28	3296-23	Nut - Flange Lock	4
29	3234-4	Screw - Hex. Flange Hd.	2
30	3256-23	Washer - Flat	15
31	322-17	Screw - Cap Hex. Hd.	9
32	3296-29	Nut - Flange Lock	6
33	302-5	Fitting - Grease	2
34	3273-18	Screw - Hex. Socket Hd.	4
35	83-7810	Spacer	2
36	83-8420	Pulley - Clutch	1
37	83-8490	Belt - Drive	1
38	83-8080	Key - Square	1
39	83-9140	Clutch Assembly	1
40	83-7800	Sleeve	1
41	3290-379	Tie - Cable	1

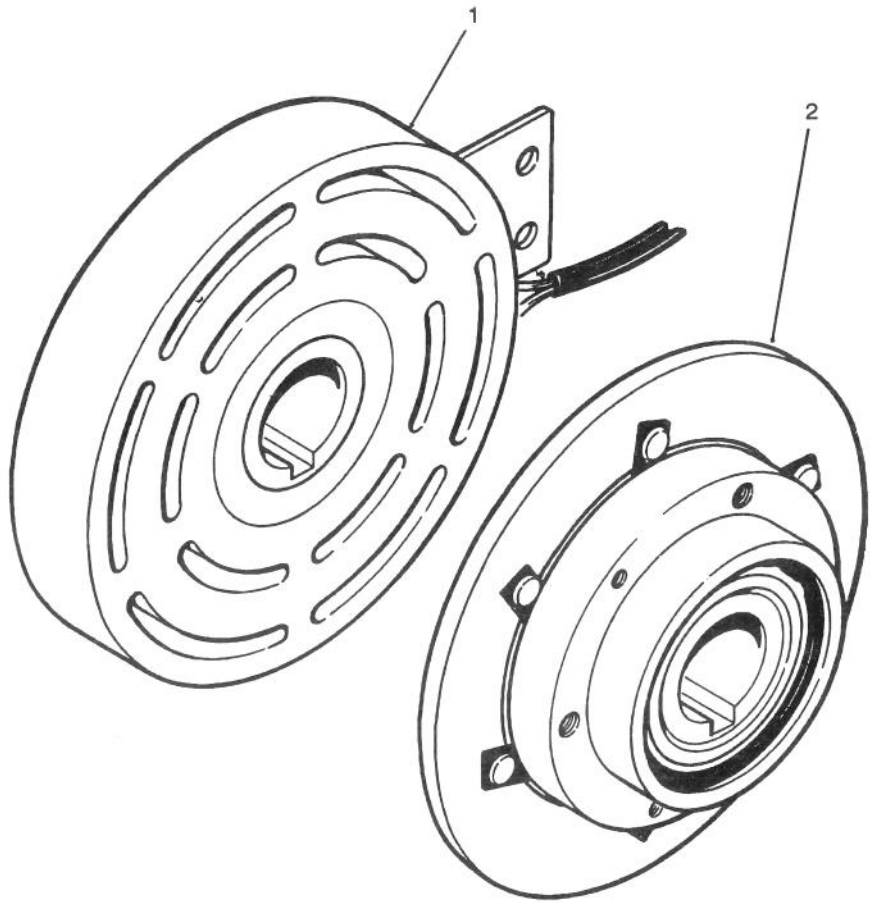 


T-1362

ELECTRIC CLUTCH ASSEMBLY NO. 83-9140

Ref. No.	Part No.	Description	No. Used
1	84-7770	Field & Rotor Assembly	1

Ref. No.	Part No.	Description	No. Used
2	84-7780	Armature Assembly	1

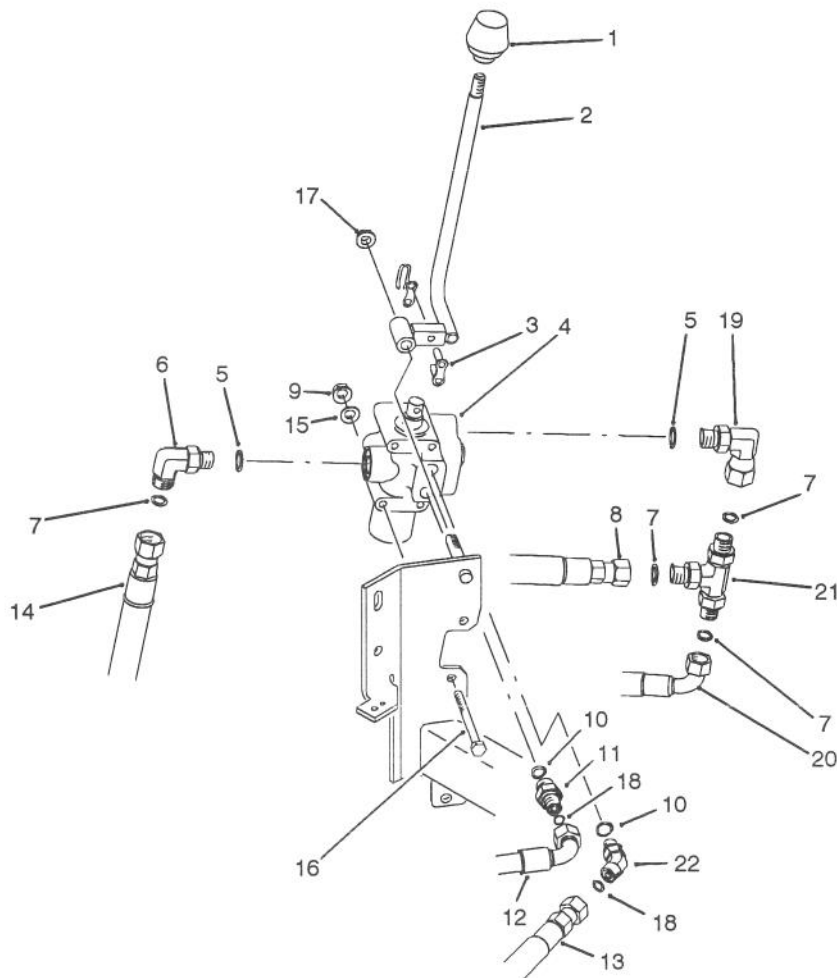 


T-1376

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	85-5160	Lever - Lift Valve	1
3	2710-16	Connecting Link Assembly	1
4	43-1950	Lift Valve Assembly	1
5	237-42	Seal - O-Ring	1
6	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	Seal - O-Ring	4
8	92-1177	Hose - Hydraulic	1
9	3296-16	Nut - Flange Lock	2
10	237-78	Seal - O-Ring	2
11	340-92	Fitting - Hydraulic Straight (Incl. Ref. #10 & 18)	1
12	83-9610	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
13	85-5310	Hose - Hydraulic	1
14	83-9640	Hose - Hydraulic	1
15	3256-22	Washer - Flat	2
16	321-23	Screw - Cap Hex. Hd.	2
17	3296-39	Nut - Flange Lock	1
18	237-21	Seal - O-Ring	2
19	340-110	Fitting - Hydraulic 90° (Incl. Ref. #5)	1
20	85-4990	Hose - Hydraulic	1
21	340-20	Fitting - Hydraulic Tee (Incl. Ref. #7)	1
22	340-103	Fitting - Hydraulic 90° (Incl. Ref. #10 & 18)	1

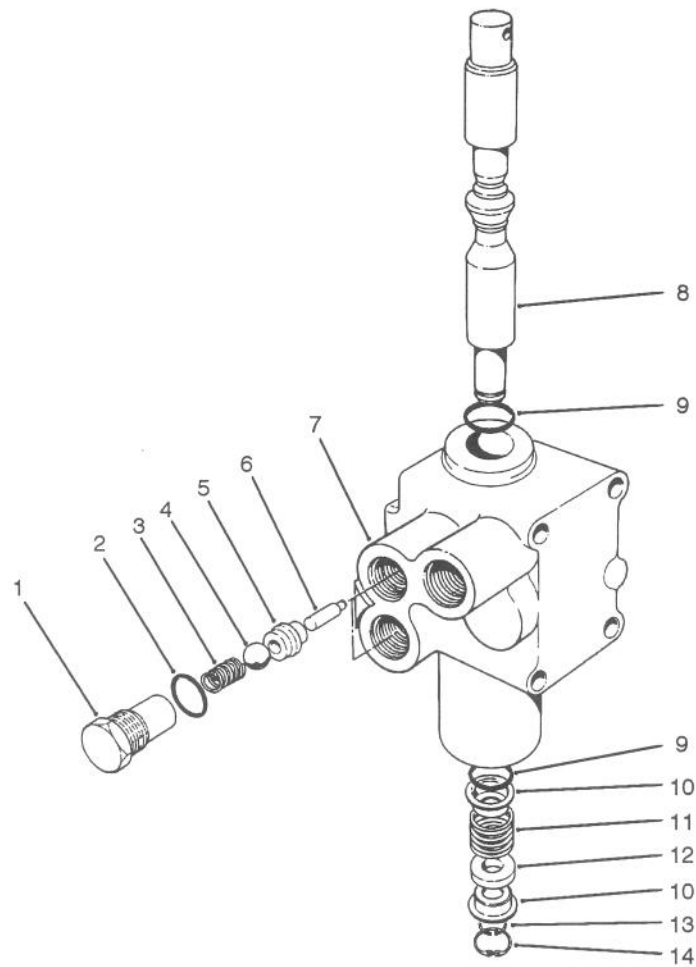 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	Seal - O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	Seal - O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring - Spool	1
14	22-8490	Snap Ring	1

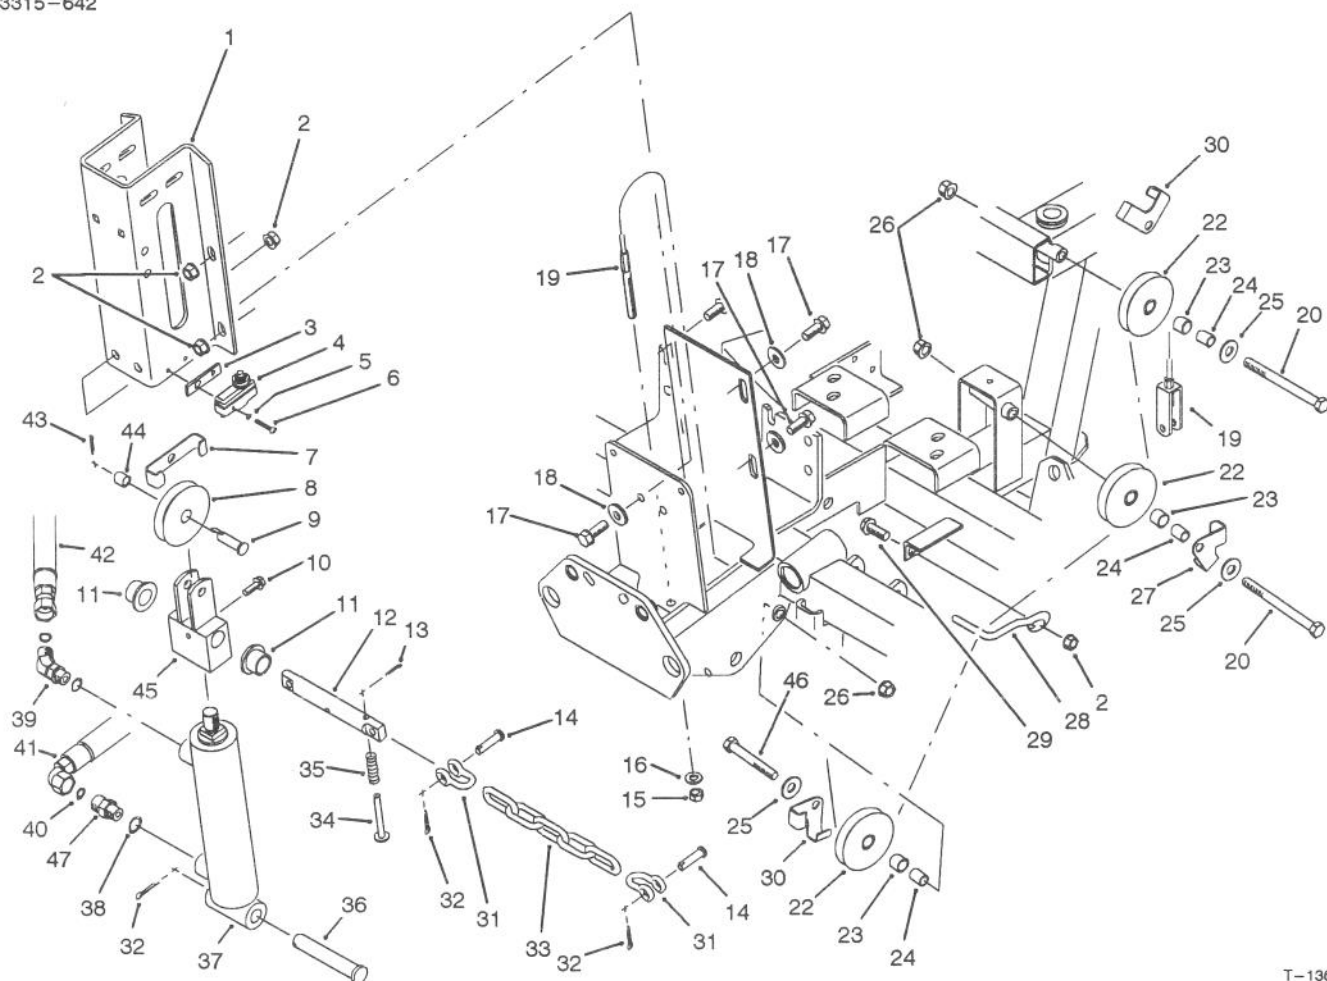 


T-1364

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9760	Bracket - Cylinder Support	1
2	32128-43	Nut - Flange Lock	7
3	61-2990	Spacer - Switch	1
4	29-6163	Switch - Lift	1
5	3254-9	Washer - Lock Internal	2
6	3250-35	Screw - Pan Hd.	2
7	5-2655	Keeper - Cable	1
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283-42	Pin - Clevis	1
10	3234-4	Screw - Hex. Washer Hd.	1
11	84-8440	Bushing - Flange	2
12	72-4190	Pin - Cylinder Guide	1
13	3272-4	Pin - Cotter	1
14	283-6	Pin - Clevis	4
15	3296-4	Nut - Lock	1
16	3256-23	Washer - Flat	1
17	3234-25	Screw - Hex. Washer Hd.	5
18	80-6990	Washer	4
19	83-8590	Cable - Lift	1
20	323-17	Screw - Cap Hex. Hd.	2
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256-1	Bushing - Sleeve	3
24	61-3230	Spacer	3

Ref. No.	Part No.	Description	No. Used
25	3256-24	Washer - Flat	3
26	3296-39	Nut - Flange Lock	3
27	83-9130	Keeper - Cable	1
28	63-1400	Guide - Cable	1
29	3234-11	Screw - Hex. Washer Hd.	1
30	5-2656	Keeper - Cable	2
31	282-4	Clevis	4
32	3272-11	Pin - Cotter	5
33	61-3830	Chain - Lift	2
34	71-1380	Pin - Spring	1
35	71-1370	Spring - Compression	1
36	283-78	Pin - Clevis	1
37	76-0020	Hydraulic Cylinder Assembly	1
38	237-42	Seal - O-Ring	2
39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	1
40	237-22	Seal - O-Ring	2
41	85-5310	Hose - Hydraulic	1
42	83-9620	Hose - Hydraulic	1
43	3272-6	Pin - Cotter	1
45	61-2430	Hub - Lift	1
44	256-2	Bushing - Sleeve	1
46	323-13	Screw - Cap Hex. Hd.	1
47	340-2	Fitting - Hydraulic Straight (Incl. Ref. #38 & 40)	1

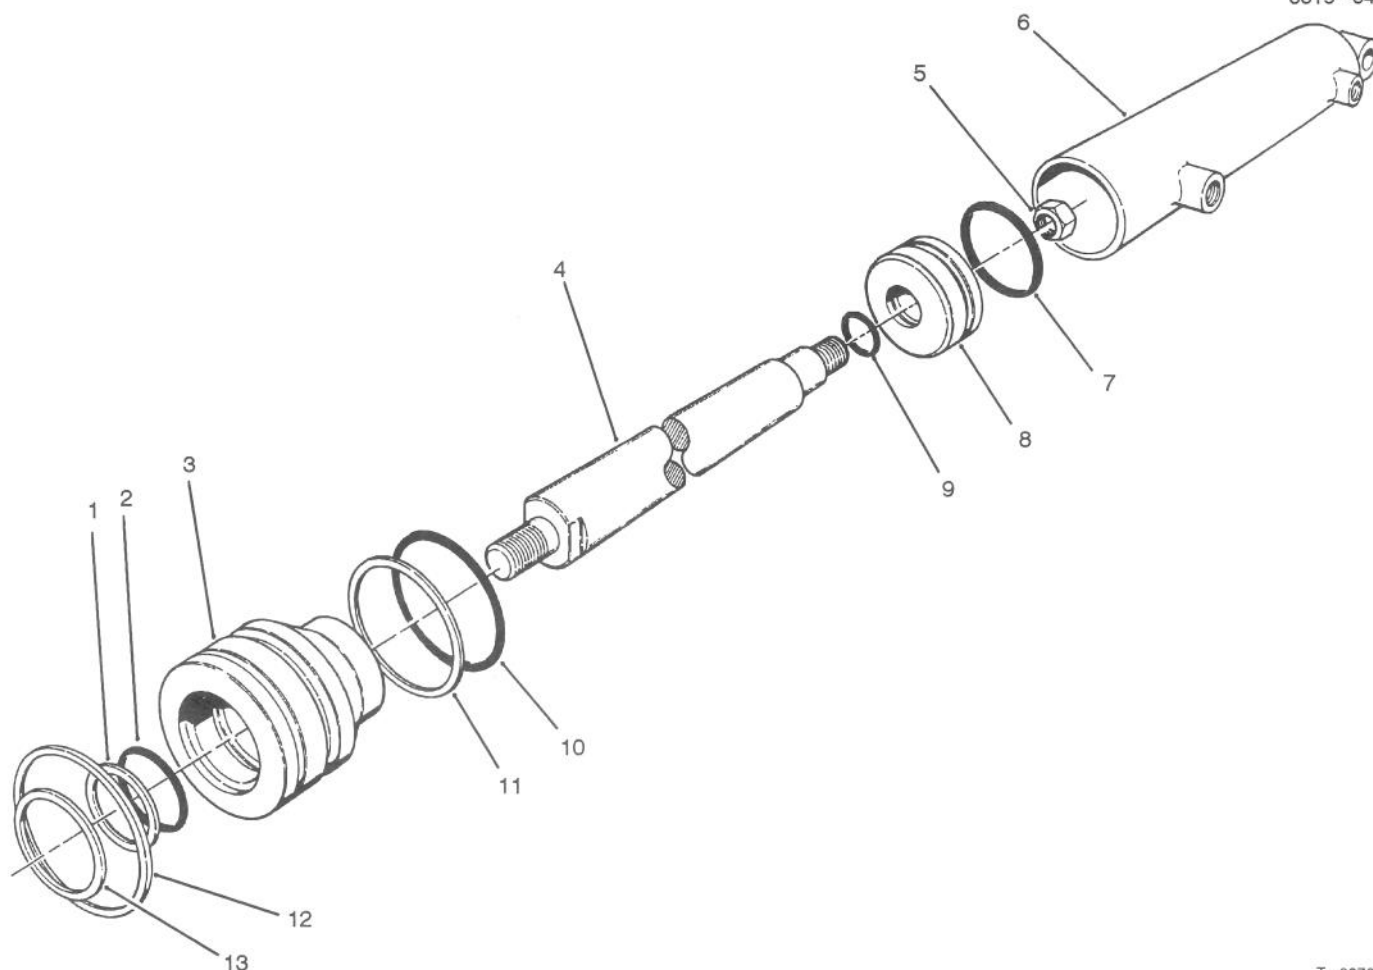 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used
1		Washer - Backup	1
2		Seal - O-Ring	1
3	76-0090	Head	1
4	76-2320	Shaft	1
5	76-2330	Nut - Lock	1
6		Barrel	1
7		Uniring	1
8	76-0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Seal - O-Ring	1
10		Seal - O-Ring	1
11		Washer - Backup	1
12	76-0050	Ring - Retaining	1
13		Seal - Dust	1
*	76-0030	Repair Kit (Incl. Ref. #1-2, 7, 9-11 & 13)	1

 *Not Illustrated

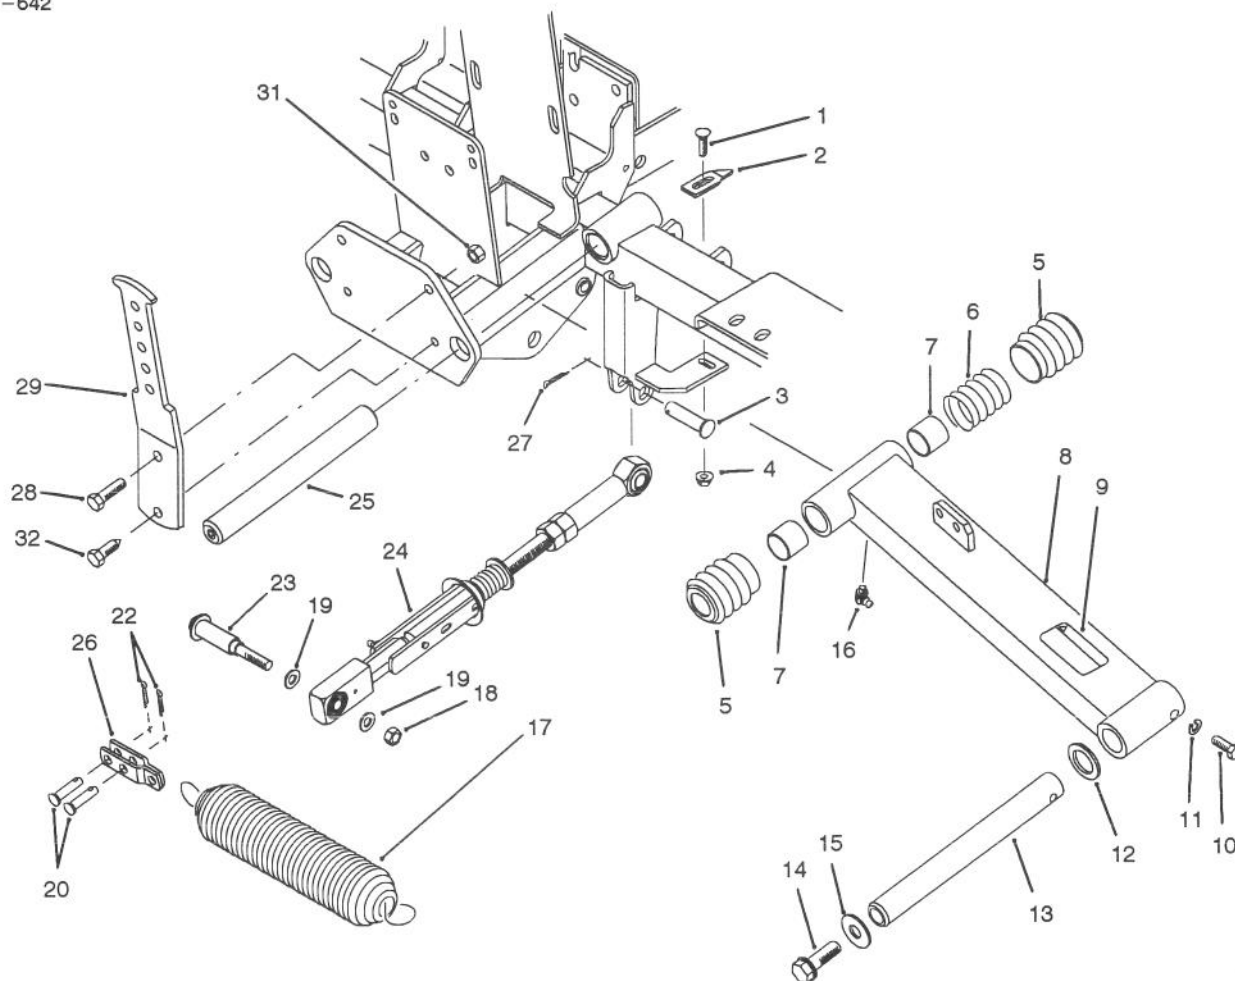

T-1365A


FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229-1	Bolt - Carriage	2
2	76-2430	Scraper - Pulley	2
3	283-40	Pin - Clevis	2
4	32128-33	Nut - Flange Lock	2
5	61-7250	Boot	4
6	61-3270	Spring - Compression	2
7	3-0348	Bushing - Sleeve	4
8	92-2404	Lift Arm Assembly L.H. (Incl. Ref. #7 & 16)	1
*	92-2405	Lift Arm Assembly R.H. (Incl. Ref. #7 & 16)	1
†9	55-4300	Decal - Warning	2
10	322-4	Screw - Cap Hex. Hd.	2
11	3253-4	Washer - Lock	2
12	256-115	Washer - Thrust	2
13	92-1815	Rod - Pivot	2
14	3234-32	Screw - Hex. Flange Hd.	2

Ref. No.	Part No.	Description	No. Used
15	3256-6	Washer - Flat	2
16	302-60	Fitting - Grease	2
17	5-0743	Spring - Extension	2
18	3296-59	Nut - Lock	2
19	3256-45	Washer - Flat	4
20	283-75	Pin - Clevis	4
22	3272-10	Pin - Cotter	4
23	76-0370	Bolt - Shoulder	2
24	83-7900	Belt Tensioner Assembly	2
25	92-1812	Shaft - Lift Pivot	2
26	92-1822	Shackle	2
27	3272-13	Pin - Cotter	2
28	323-7	Screw - Cap Hex. Hd.	2
29	92-1818	Arm - Tension	2
31	3296-39	Nut - Lock	2
32	32104-6	Screw - Cap Hex. Hd.	2

*Not Illustrated

 †For different language versions of this part, see International Decal Cross Reference.

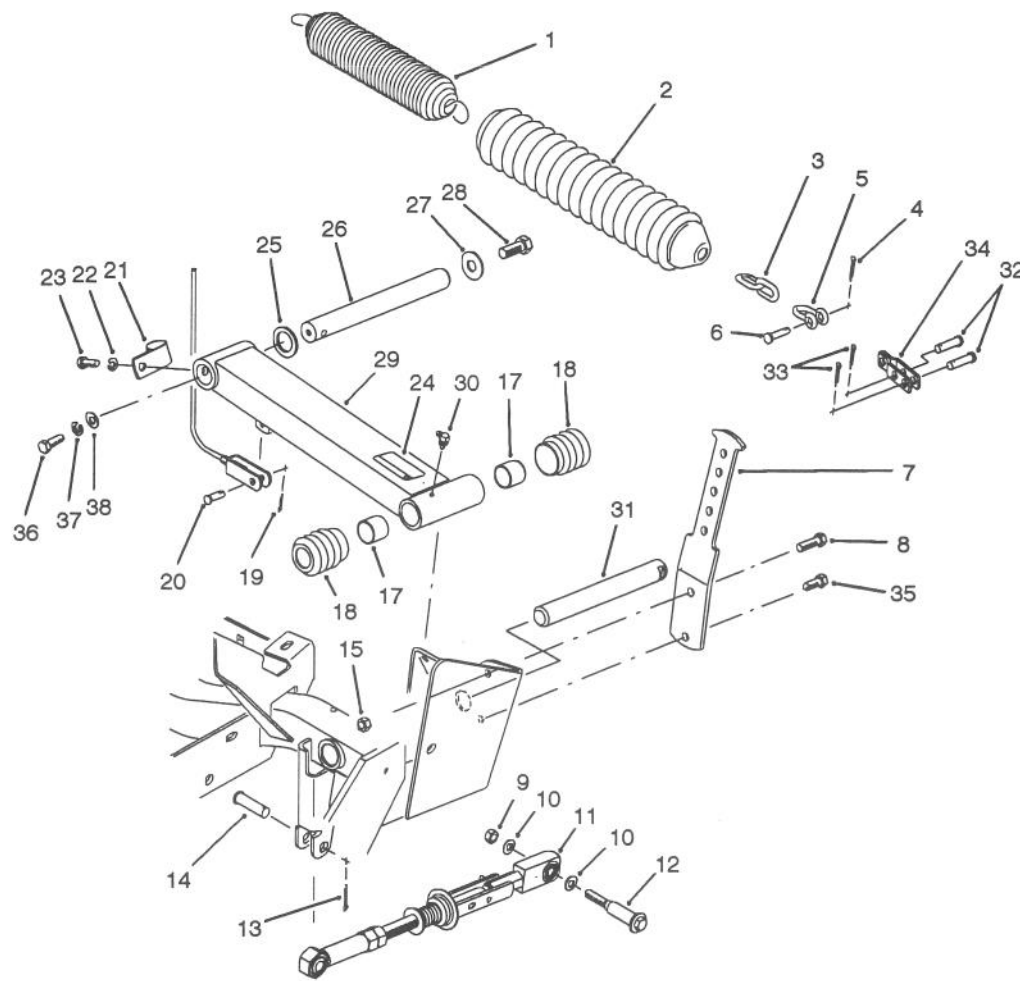


T-1366A

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Extension	1
2	62-7240	Cover - Spring	1
3	62-7300	Chain	1
4	3272-11	Pin - Cotter	1
5	282-4	Clevis	1
6	283-6	Pin - Clevis	1
7	92-1818	Arm - Tension	1
8	323-7	Screw - Cap Hex. Hd.	1
9	3296-59	Nut - Lock	2
10	3256-45	Washer - Flat	4
11	83-7900	Belt Tensioner Assembly	2
12	76-0370	Bolt - Shoulder	2
13	3272-13	Pin - Cotter	2
14	283-40	Pin - Clevis	2
15	3296-39	Nut - Lock	1
17	3-0348	Bushing - Sleeve	2
18	62-7250	Boot	2
19	3272-6	Pin - Cotter	1
20	283-1	Pin - Clevis	1

Ref. No.	Part No.	Description	No. Used
21	18-2970	Clamp - R	1
22	3253-4	Washer - Lock	1
23	322-4	Screw - Cap Hex. Hd.	1
‡24	55-4300	Decal - Warning	1
25	256-115	Washer - Thrust	1
26	92-1815	Rod - Pivot	1
27	3256-6	Washer - Flat	1
28	3234-32	Screw - Cap Hex. Hd.	1
29	61-2890	Lift Arm Assembly (Incl. Ref. #17 & 30)	1
30	302-60	Fitting - Grease	1
31	92-1812	Shaft - Lift Pivot	1
32	283-75	Pin - Clevis	2
33	3272-10	Pin - Cotter	2
34	92-1822	Shackle	1
35	32104-6	Screw - Cap Hex. Hd.	1
36	322-26	Screw - Cap Hex. Hd.	1
37	3253-4	Washer - Lock	1
38	3256-57	Washer - Flat	1

 ‡For different language versions of this part, see International Decal Cross Reference.

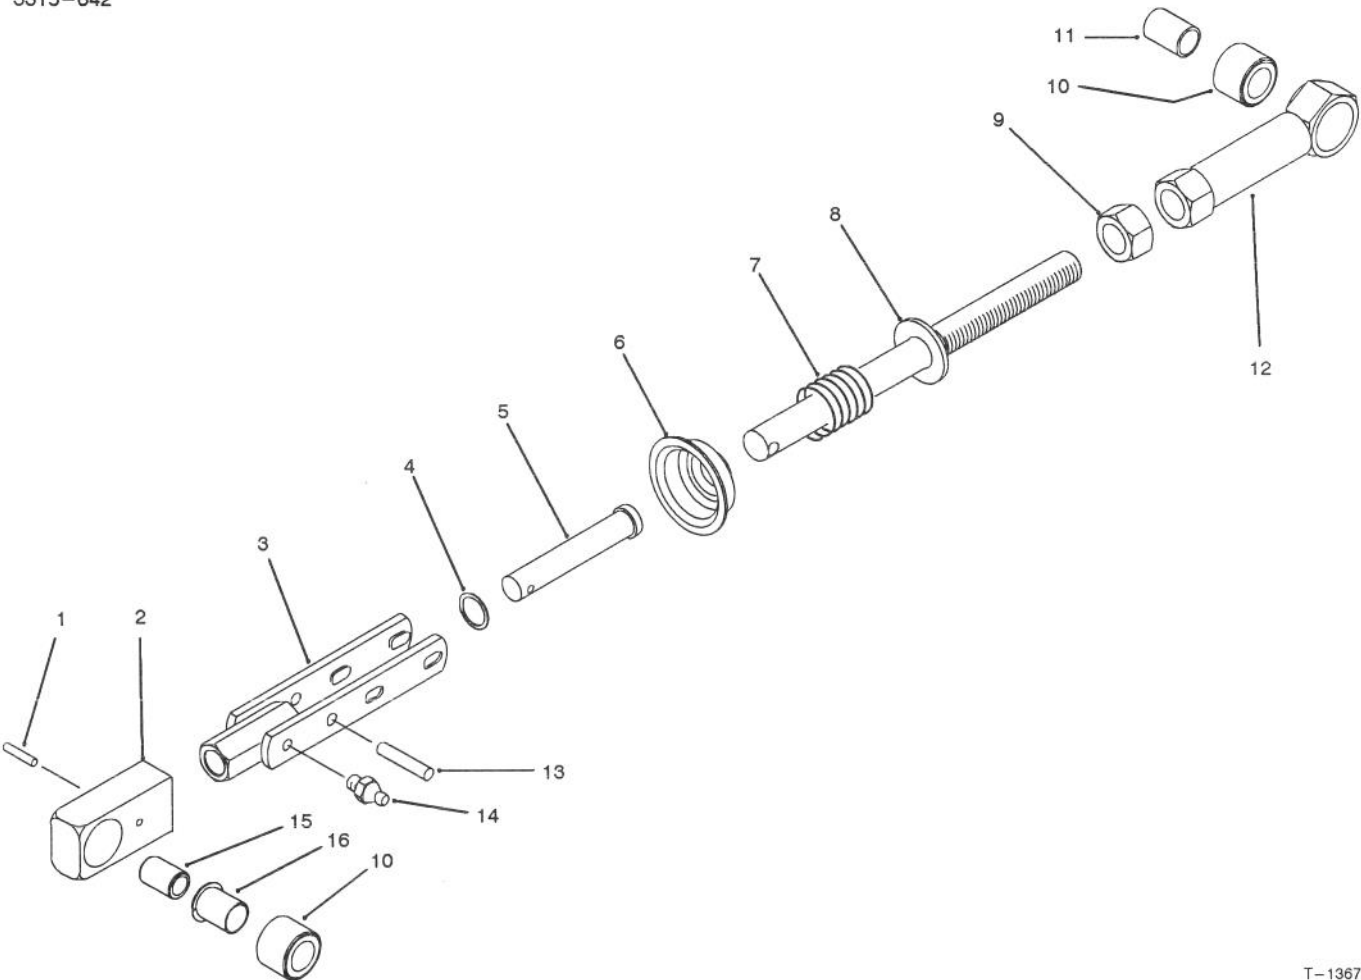


T-1367

BELT TENSIONER ASSEMBLY NO. 83-7900

Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1
2	76-0350	Housing - Bushing	1
3	83-7930	Yoke	1
4	3256-54	Washer - Flat	1
5	283-55	Pin - Clevis	1
6	76-0360	Cup - Retainer	1
7	76-0410	Spring - Compression	1
8	83-7910	Rod	1


Ref. No.	Part No.	Description	No. Used
9	3218-6	Nut - Jam	1
10	56-9510	Bushing Assembly	2
11	256-173	Bushing - Sleeve	1
12	76-0300	Housing - Bushing	1
13	32121-9	Pin - Roll	1
14	302-5	Fitting - Grease	1
15	76-0390	Spacer	1
16	56-9520	Bushing - Nyliner	1

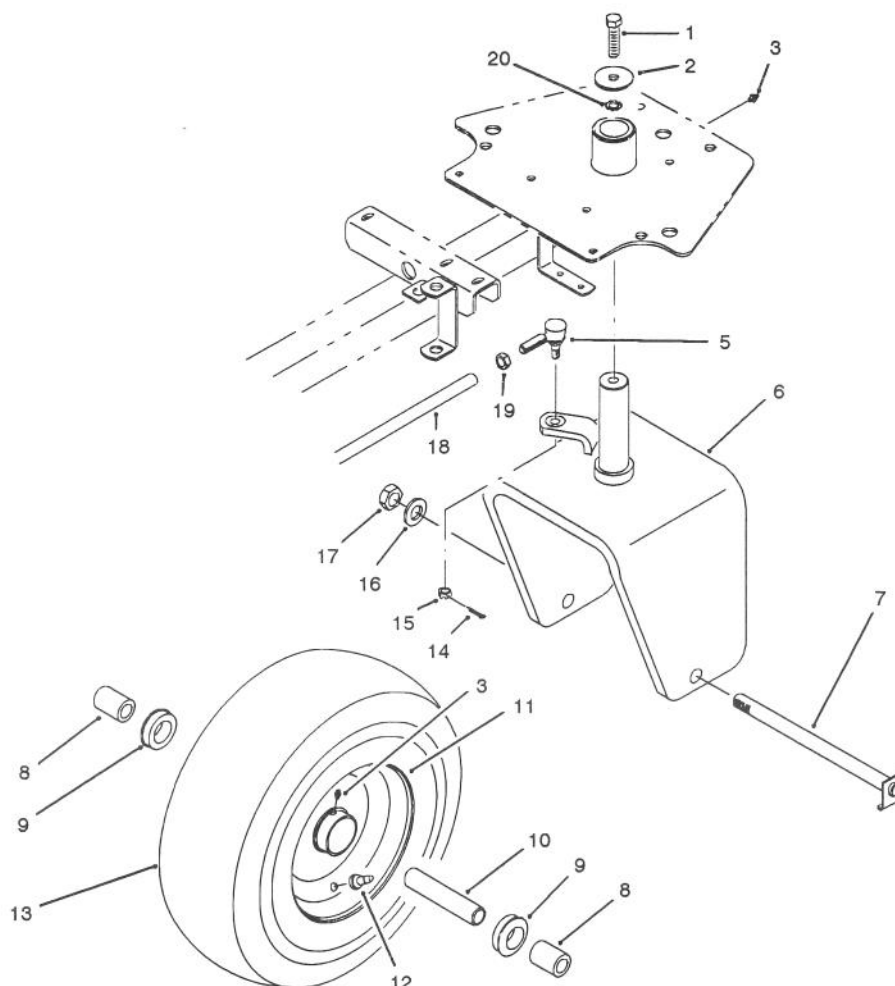 

T-1368

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	325-6	Screw - Cap Hex. Hd.	1	11	241-129	Rim	1
2	75-7730	Spacer	1	12	232-47	Valve - Stem	1
3	302-5	Fitting - Grease	2	13	231-122	Tire	1
5	20-0140	Rod End Assembly (Incl. Ref. #15)	1	14	3272-6	Pin - Cotter	1
6	83-7340	Fork - Caster	1	15	32136-4	Nut - Castle	1
7	61-1960	Axle - Wheel	1	16	3256-28	Washer - Flat	1
8	68-4210	Spacer - Wheel	2	17	3296-51	Nut - Lock	1
9	251-321	Bearing - Wheel	2	18	61-2070	Rod - Steering	1
10	241-130	Spacer - Bearing	1	19	3220-12	Nut - Jam	1
				20	3255-2	Washer - Lock	1

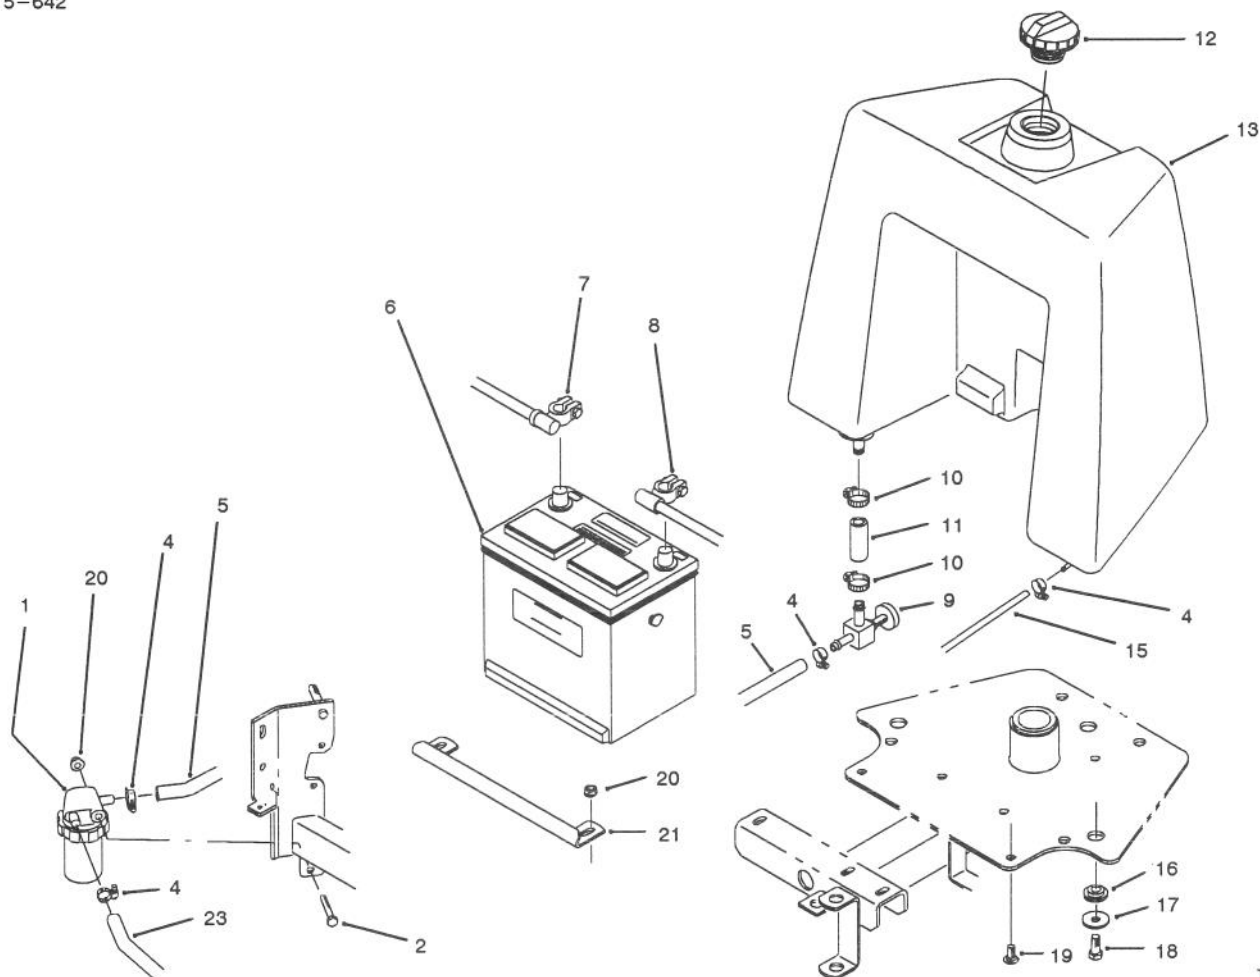 

T-1370

FUEL SYSTEM ASSEMBLY


Ref. No.	Part No.	Description	No. Used
†1	130366040	Filter - Fuel	1
2	321-12	Screw - Cap Hex. Hd.	1
4	2412-108	Clamp - Hose	4
5	63-7620	Hose - Fuel	1
6	83-9000	Battery	1
7	83-9220	Cable - Battery Pos.	1
8	83-9210	Cable - Battery Neg.	1
9	56-2520	Valve - Fuel Shut-Off	1
10	2412-36	Clamp - Hose	2
11	56-2230	Hose - Fuel	1

Ref. No.	Part No.	Description	No. Used
12	70-8621	Cap - Fuel Tank	1
13	83-8720	Tank - Fuel	1
15	75-4703	Hose - Fuel	1
16	240-11	Grommet	3
17	63-8410	Washer - Flat	3
18	323-5	Screw - Cap Hex. Hd.	3
19	3230-1	Screw - Carriage	2
20	32128-44	Nut - Flange Lock	3
21	83-9240	Hold-Down - Battery	1
23	23-2140	Hose - Fuel	1

†Obtain from your local Perkins Dealer.

SPECIAL TOOLS

 
MOTOR SEAL INSTALLATION TOOL NO. *TOR192660

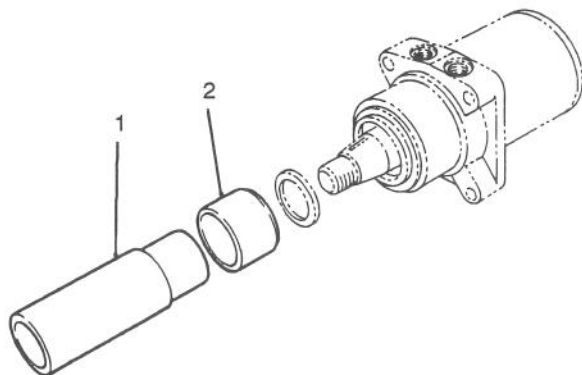

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver – Seal	1
2		Holder – Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

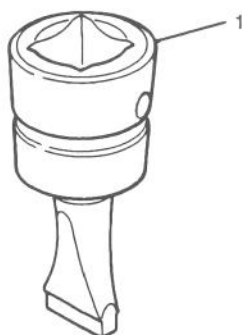

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *TOR634310

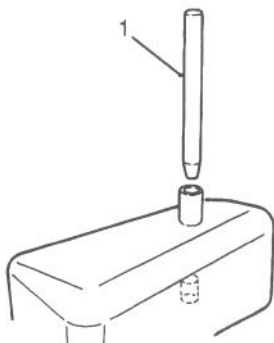

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug – Reservoir	1

 BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

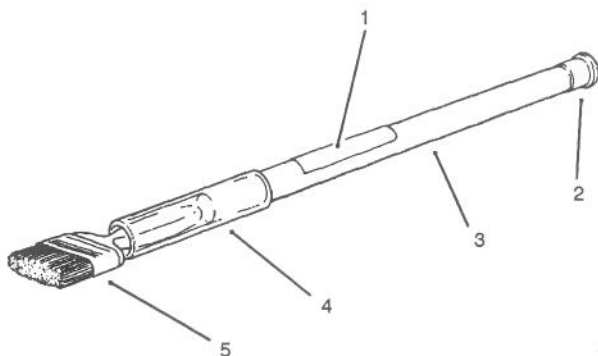


T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

SPECIAL TOOLS

 
GAUGE BAR ASSEMBLY NO. *TOR138199

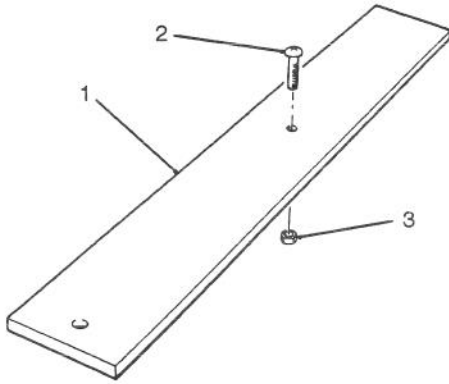

T-1151

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar - Height-Of-Cut	1
2	32122-2	Screw - Round Hd.	1
3	3219-14	Nut - Hex.	1

 *Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

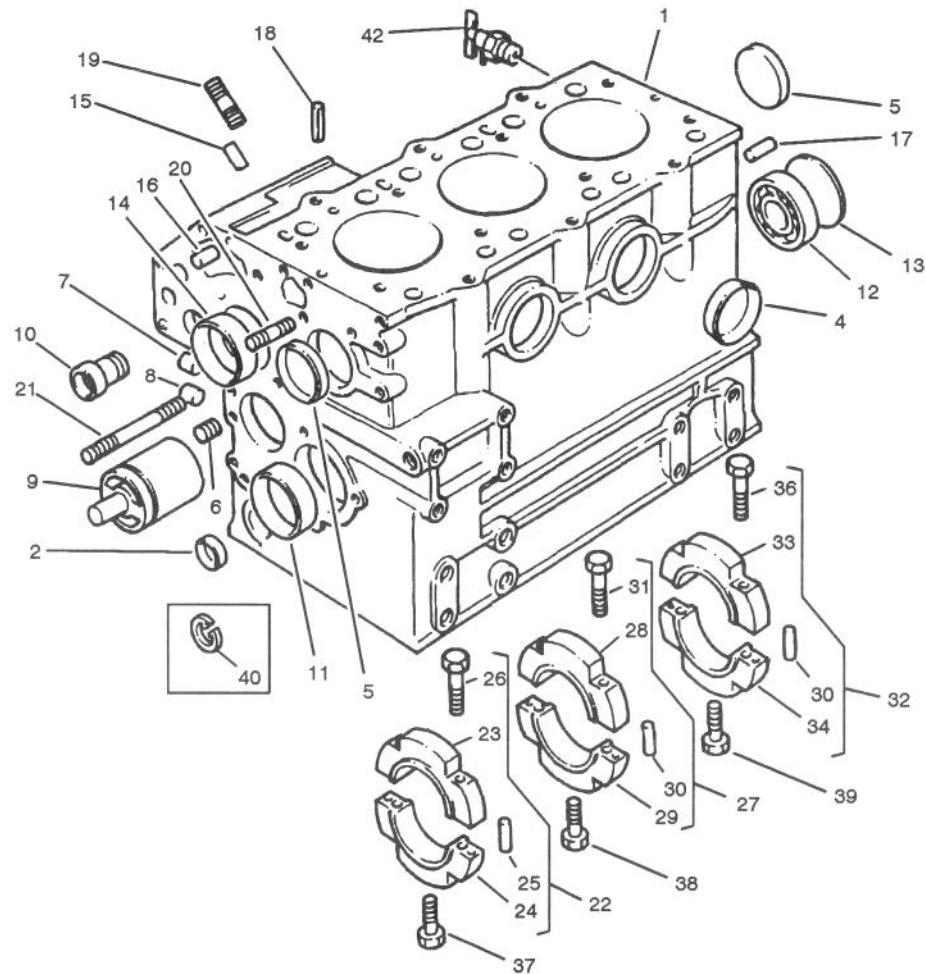


T-1377

CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110186030	Kit - Cylinder Block	1	23		Cap	1
2	064200015	Plug	1	24		Cap	1
4	064200040	Plug	2	25	030500612	Dowel	2
5	064200040	Plug	2	26	010810840	Screw	2
6	198466050	Plug	3	27	110156230	Holder	
7	198466010	Plug	4			Incl. Ref. #28 & 29)	1
8	198466070	Plug	2	28		Cap	1
9	165296160	Shaft	1	29		Cap	1
10	198517090	Bush	1	30	030500612	Dowel	2
11	198517300	Bush	1	31	010810840	Screw	2
*	198517304	Bush -.25mm	1	32	110156240	Holder	
*	198517307	Bush -.50mm	1			Incl. Ref. #33 & 34)	1
12	040106203	Bearing - Ball	1	33		Cap	1
13	064100045	Plug	1	34		Cap	1
14	042303015	Bush	1	36	010810840	Screw	2
15	030500512	Dowel	2	37	011310850	Screw	1
16	030500512	Dowel	2	38	011310850	Screw	1
17	030500820	Dowel	2	39	010700845	Screw	2
18	030309005	Pin	2	40	036509005	Circlip	1
19	012100620	Stud	2	41	064200018	Plug	2
20	012100635	Stud	1	42	198736052	Cock	1
21	012100660	Stud	1	*	110006330	Short Block Assembly	1
22	110156220	Holder		*	195906610	Kit - Gasket	1
		Incl. Ref. #23 & 24)	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

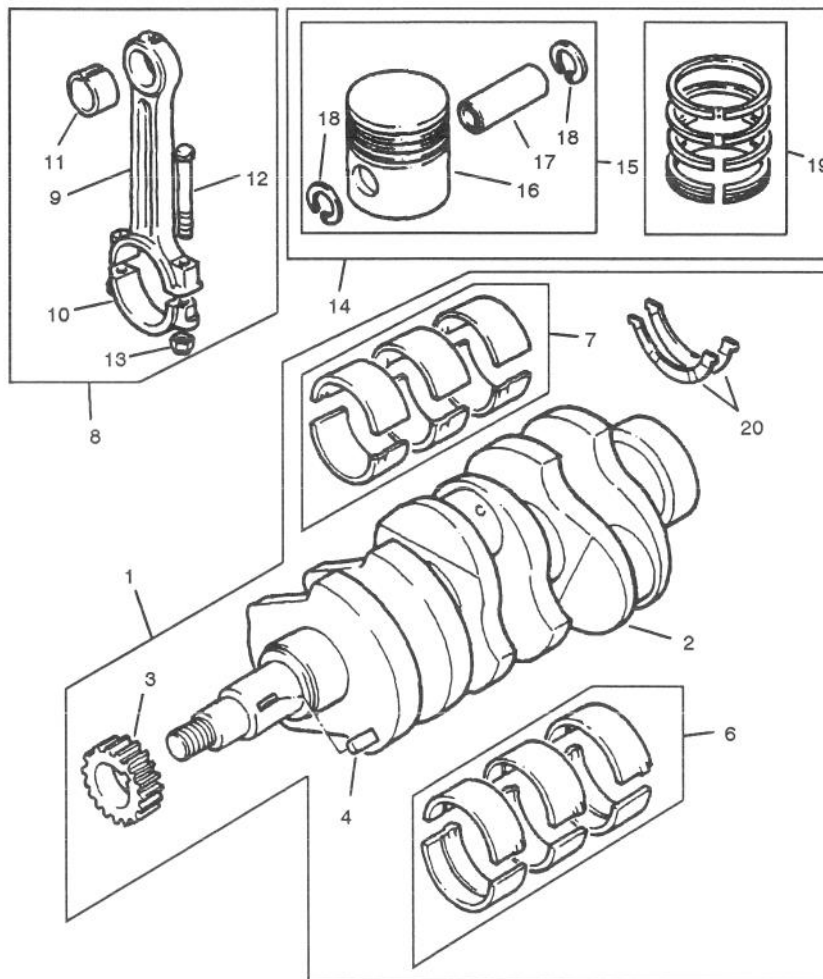

T-1378


CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115236020	Kit – Crankshaft Incl. Ref. #2)	1
2		Crankshaft	1
3	115276210	Gear	1
4	030509020	Key	1
6	198586030	Kit – Bearing Std.	1
*	198586034	Kit – Bearing –0.25mm	1
*	198586037	Kit – Bearing –0.50mm	1
7	198586060	Kit – Bearing Std.	1
*	198586064	Kit – Bearing –0.25mm	1
*	198586067	Kit – Bearing –0.50mm	1
8	115026240	Connecting Rod Assembly Incl. Ref. # 9 & 10)	3
9		Rod	1
10		Cap	1
11	198517325	Bush	1
12	115176130	Screw	2

Ref. No.	Part No.	Description	No. Used
13	020109103	Nut	2
14	115016670	Kit – Piston Std.	3
*	115016674	Kit – Piston +0.5mm	1
*	115016677	Kit – Piston +1.0mm	1
15	115016770	Kit – Piston Std. Incl. Ref. #16)	1
*	115016774	Kit – Piston +0.5mm Incl. Ref. #16)	1
*	115016777	Kit – Piston +1.0mm Incl. Ref. #16)	1
16		Piston	1
17	115326260	Pin	1
18	03500019	Circlip	2
19	115107260	Kit – Piston Ring	1
*	115107263	Kit – Piston Ring +0.5mm	1
*	115107265	Kit – Piston Ring +1.0mm	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

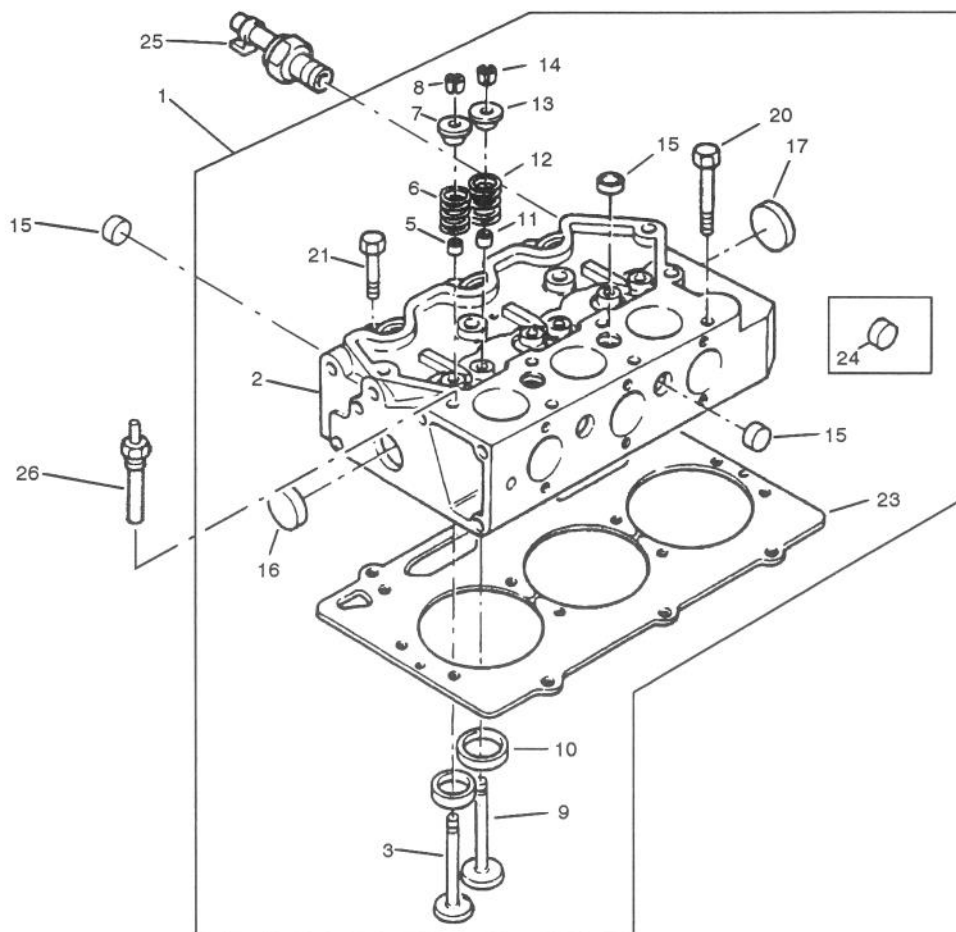


T-1379

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111016911	Kit - Cylinder Head	1	14	120226080	Cotter	6
2	111086030	Kit - Cylinder Head	1	15	198466070	Plug	4
3	120166280	Valve Inlet	3	16	064200022	Plug	3
5	120406080	Seal	3	17	064200022	Plug	3
6	198217070	Spring	3	20	111136340	Screw	11
7	120186100	Cap	3	21	111136350	Screw	3
8	120226080	Cotter	6	23	111147100	Gasket +1.2mm	1
9	120176290	Valve Exhaust	3	*	111147110	Gasket +1.3mm	1
10	110136290	Insert	3	24	064200018	Plug	2
11	120406080	Seal	3	25	185246060	Switch - Oil Pressure	1
12	198217070	Spring	3	26	385720101	Sender - Temperature	1
13	120186100	Cap	3				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

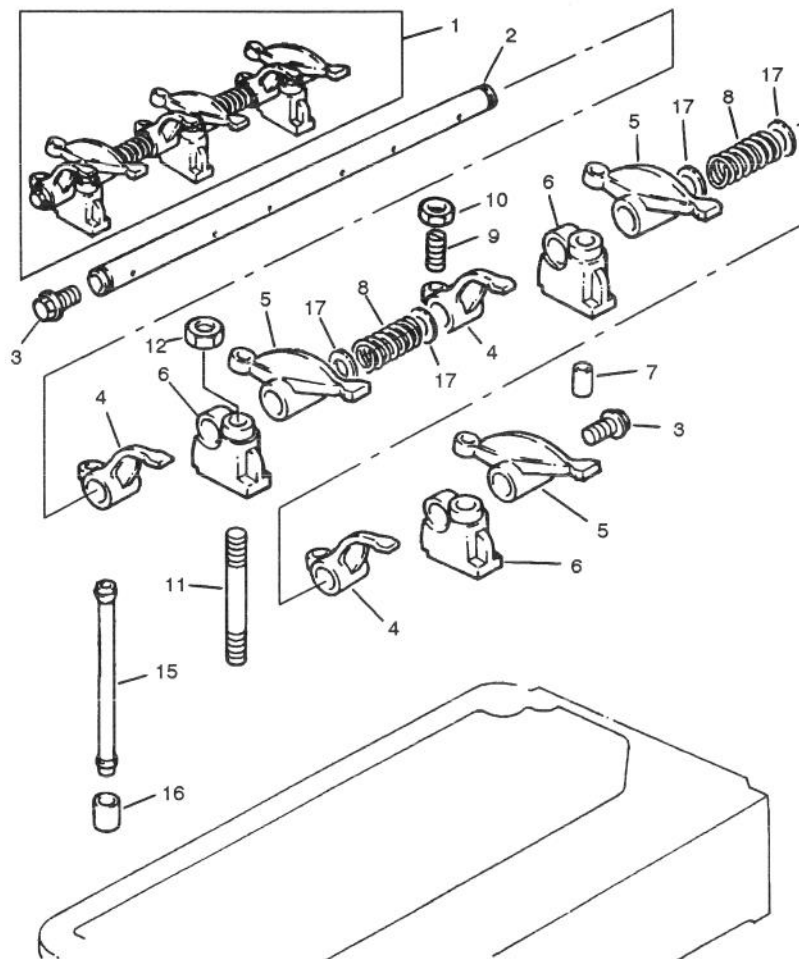


T-1380

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120336020	Rocker Shaft Assembly	1
2	120316190	Shaft	1
3	064609006	Plug	2
4	120356120	Lever	3
5	120356110	Lever	3
6	120346170	Bracket	3
7	030300325	Pin	1
8	198217080	Spring	2

Ref. No.	Part No.	Description	No. Used
9	199486220	Adjusting Screw	6
10	020109076	Nut	6
11	012109177	Stud	3
12	023100008	Nut	3
15	120456240	Rod	6
16	120116100	Tappet	6
17	199280280	Washer	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

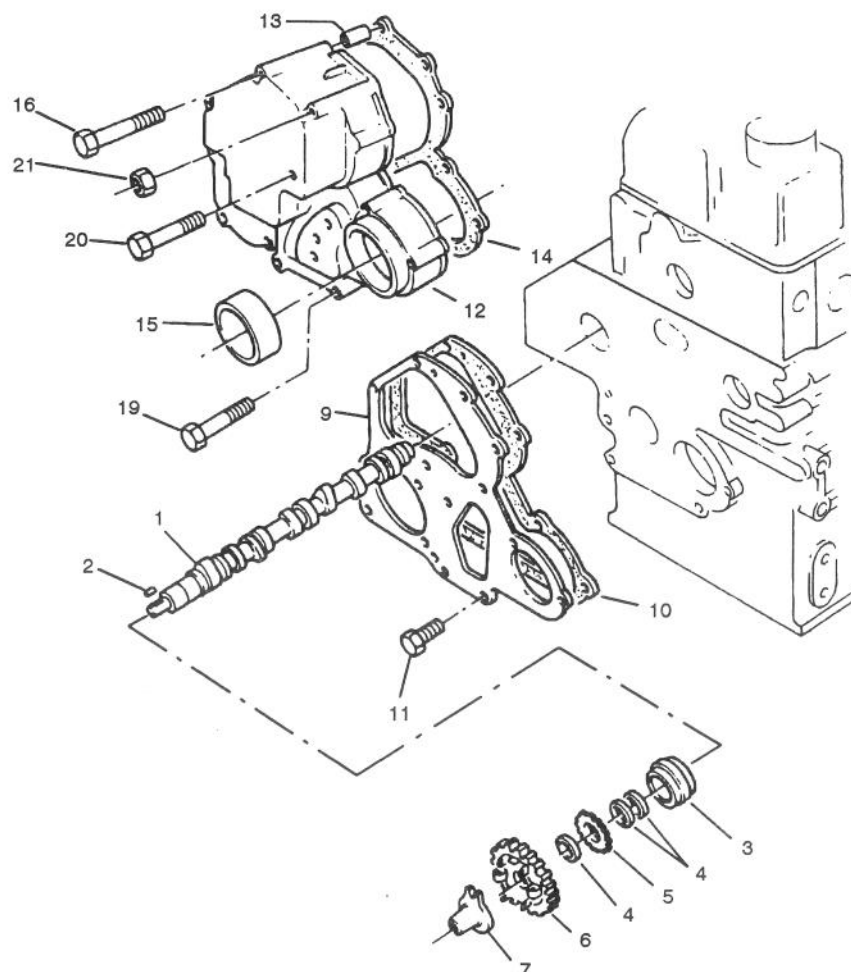


T-1381

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120026120	Camshaft	1
2	034100508	Key	1
3	040109059	Bearing	1
4	199216230	Spacer	3
5	120736081	Gear	1
6	120016030	Gear	1
7	125256120	Tappet	1
9	165166260	Plate	1
10	165996400	Joint	1

Ref. No.	Part No.	Description	No. Used
11	011300612	Bolt	3
12	165106130	Cover	1
13	030300414	Pin	1
14	165996410	Joint	1
15	198636090	Seal	1
16	011300680	Screw	2
19	011300640	Screw	4
20	011300660	Screw	2
21	023100006	Nut	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

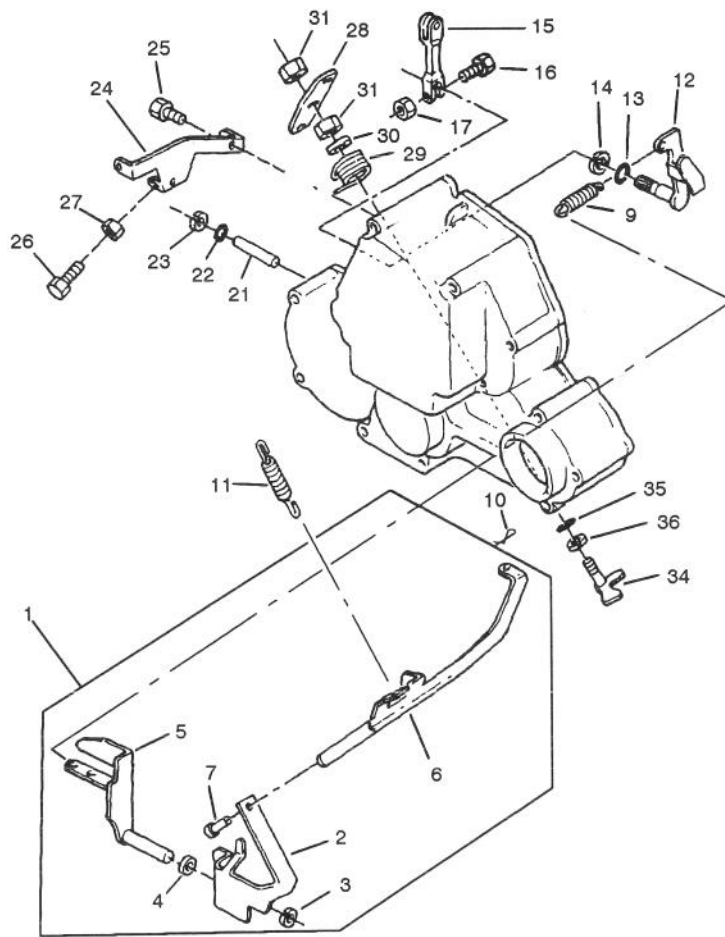


T-1382

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	125046140	Lever (Incl. Ref. #2, 6 & 7)	1
2		Lever	1
3	036800008	Circlip	1
4	026200010	Washer	1
5	125406071	Lever	1
6		Link	1
7		Pin	1
9	198217220	Spring	1
10	031100004	Pin	1
11	198217420	Spring	1
12	125156170	Arm	1
13	052100070	O Ring	1
14	036800008	Circlip	1
15	125416020	Lever	1
16	010110630	Screw	1

Ref. No.	Part No.	Description	No. Used
17	023100006	Nut	1
21	125116130	Shaft	1
22	052100030	Seal - O-Ring	1
23	036800005	Circlip	1
24	125976120	Stay	1
25	011300618	Screw	2
26	010109264	Screw	2
27	023100006	Nut	2
28	125176080	Lever	1
29	198216760	Spring	1
30	026200008	Washer	1
31	020300008	Nut	2
34	125156180	Arm	1
35	052100050	O Ring	1
36	036800006	Circlip	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

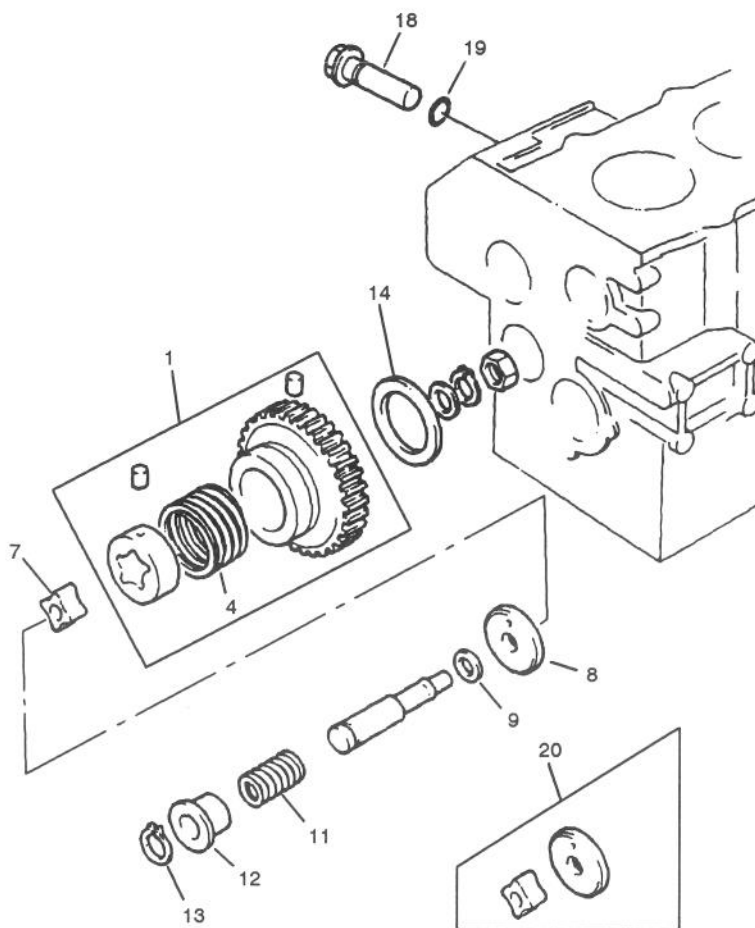


T-1383

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	165026110	Gear	1	11	198216720	Spring	1
4	198216821	Spring	1	12	199236540	Collar	1
7	140166130	Rotor	1	13	036800010	Circlip	1
8	140116140	Cover	1	14	199266180	Washer	1
9	199286150	Shim +0.10mm	1	18	140036120	Valve	1
*	199286160	Shim +0.15mm	1	19	052100150	Seal - O-Ring	1
*	199286170	Shim +0.20mm	1	20	140186010	Repair Kit	1
*	199286180	Shim +0.50mm	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

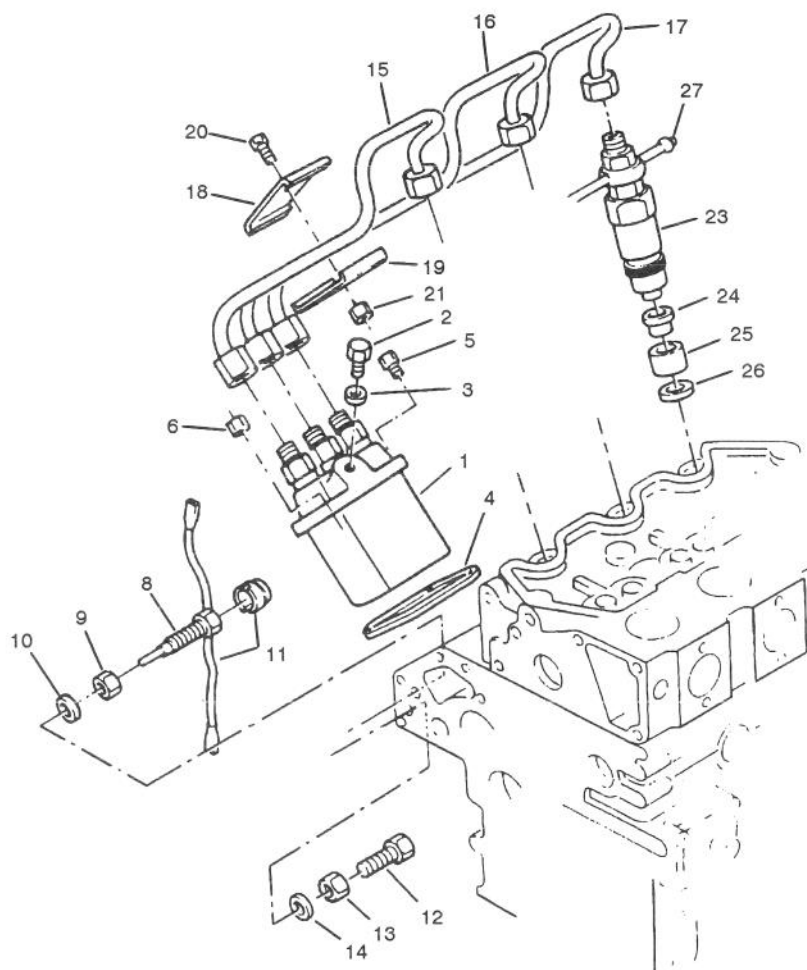

T-1384


FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pump	1
2	131236201	Screw	1
3	025100006	Washer	1
4	131437310	Shim +0.2mm	1
*	131437320	Shim +0.3mm	1
*	131437330	Shim +0.4mm	1
*	131437340	Shim +0.5mm	1
*	131437340	Shim +1.0mm	1
5	011300620	Screw	2
6	023100006	Nut	2
8	131046160	Screw	1
9	023109002	Nut	1
10	025100010	Washer	1
11	198236030	Wire	1
12	010109270	Screw	1

Ref. No.	Part No.	Description	No. Used
13	023109002	Nut	1
14	025100010	Washer	1
15	131507010	Injection Pipe No. 1 Cyl.	1
16	131507020	Injection Pipe No. 2 Cyl.	1
17	131507030	Injection Pipe No. 3 Cyl.	1
18	199106020	Damper	2
19	199106020	Damper	2
20	010100625	Screw	2
21	023100006	Nut	2
23	131406340	Atomiser	3
24	131426200	Gasket	3
25	111316280	Insert	3
26	198996090	Seal	3
27	131606260	Pipe	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

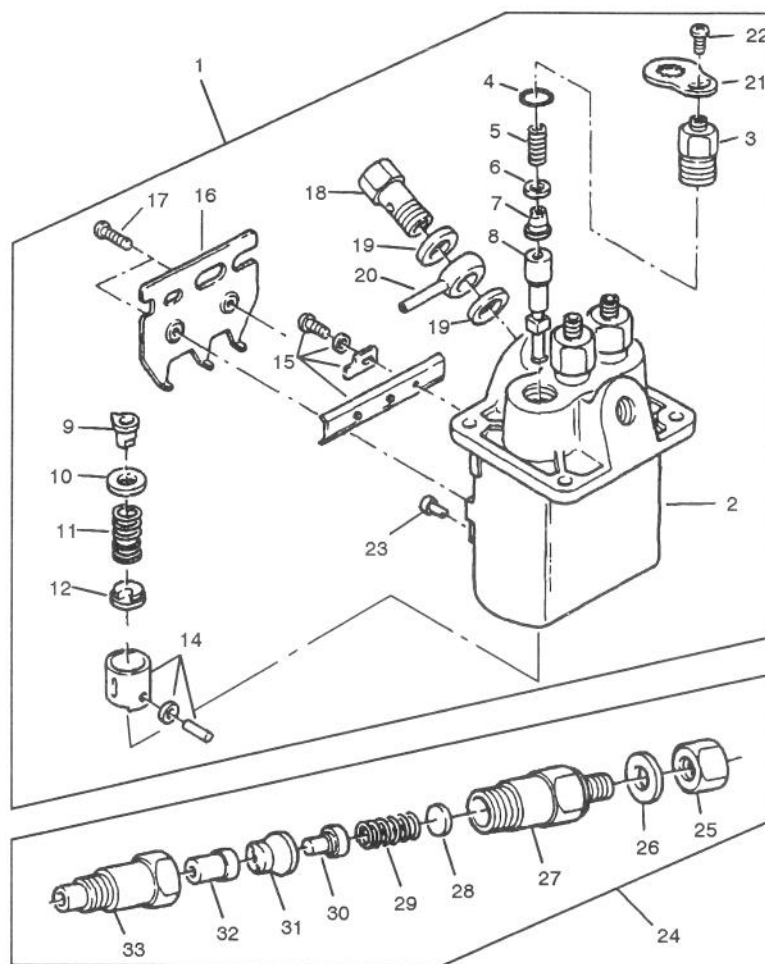

T-1385


INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pipe	1
2	131296665	Housing	1
3	131196120	Holder	3
4	131226170	Seal - O-Ring	3
5	131176430	Spring	3
6	131186050	Gasket	3
7	131156160	Valve	3
8	131116410	Element	3
9	131296951	Sleeve	3
10	131296620	Seat	3
11	131176440	Spring	3
12	131296621	Seat	3
*	131296622	Plate +1.85mm	1
*	131296623	Plate +1.90mm	1
*	131296625	Plate +2.00mm	1
*	131296626	Plate +2.05mm	1
*	131296627	Plate +2.10mm	1
*	131296628	Plate +2.15mm	1
*	131296629	Plate +2.20mm	1
*	131296630	Plate +2.25mm	1
*	131296631	Plate +2.30mm	1
*	131296632	Plate +2.35mm	1
*	131296633	Plate +2.40mm	1
*	131296634	Plate +2.45mm	1
*	131296635	Plate +2.50mm	1
14	131256120	Tappet	3

Ref. No.	Part No.	Description	No. Used
15	131296636	Rack	1
16	131296650	Bracket	1
17	131136320	Screw	2
18	131236190	Bolt	1
19	131246180	Washer	2
20	131246130	Nipple	1
21	131296662	Plate	3
22	131136330	Screw	3
23	131296651	Pin	3
24	131406340	Atomiser	3
25	131446069	Nut	1
26	131426210	Washer	1
27	131446065	Body	1
28	131437250	Shim +0.90mm	1
*	131437251	Shim +0.925mm	1
*	131437252	Shim +0.95mm	1
*	131437253	Shim +0.975mm	1
*	131437354	Shim +1.00mm	1
*	131437255	Shim +1.025mm	1
*	131437256	Shim +1.05mm	1
*	131437257	Shim +1.075mm	1
*	131437258	Shim +1.10mm	1
*	131437259	Shim +1.125mm	1
*	131437260	Shim +1.15mm	1
*	131437261	Shim +1.175mm	1
*	131437262	Shim +1.20mm	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

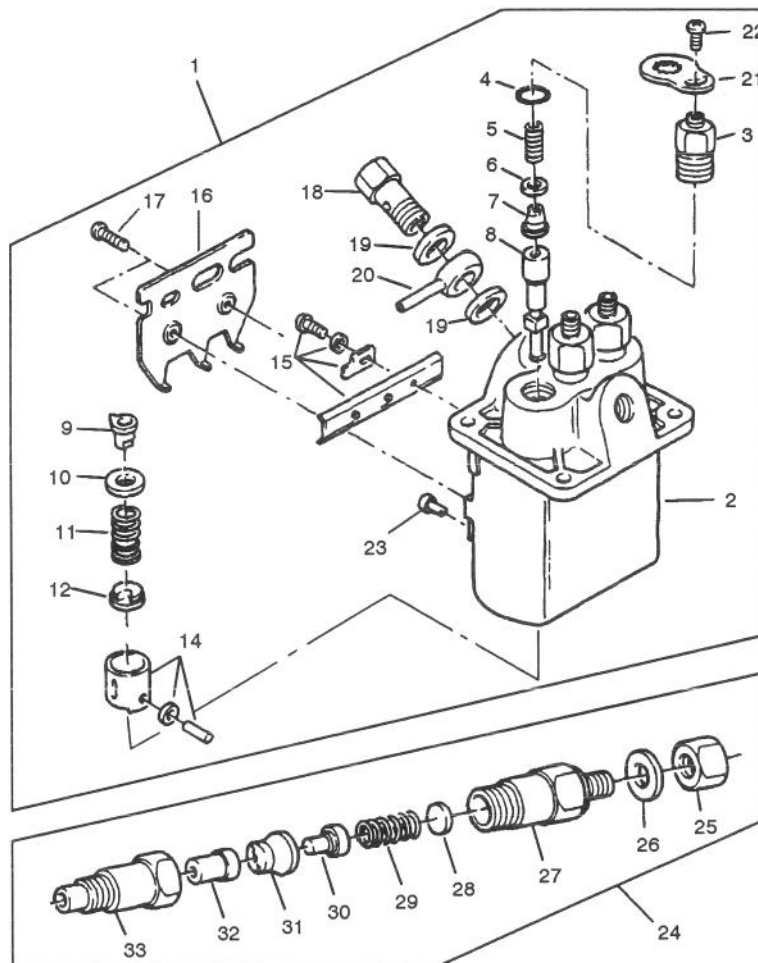


T-1385

INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	131437263	Shim +1.225mm	1	29	131446066	Spring	1
*	131437264	Shim +1.250mm	1	30	131446070	Pin	1
*	131437265	Shim +1.275mm	1	31	131446068	Spacer	1
*	131437266	Shim +1.30mm	1	32	131416150	Nozzle	1
*	131437267	Shim +1.325mm	1	33	131446067	Nut	1
*	131437268	Shim +1.35mm	1				
*	131437269	Shim +1.375mm	1				
*	131437270	Shim +1.40mm	1				
*	131437271	Shim +1.425mm	1				
*	131437272	Shim +1.45mm	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

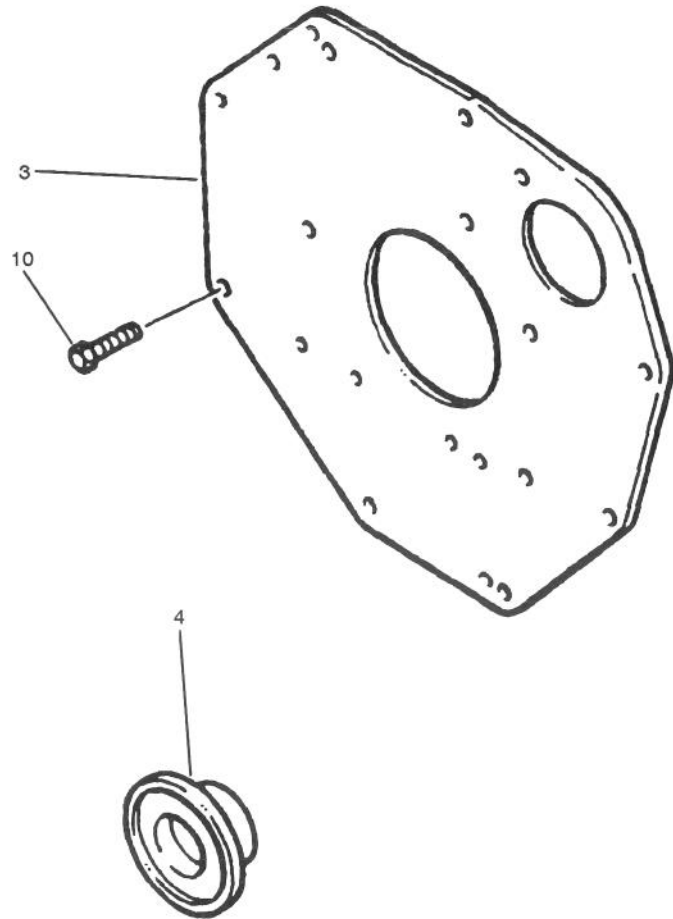


T-1386

FLYWHEEL HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	110366700	Plate	1
4	198636080	Seal	1

Ref. No.	Part No.	Description	No. Used
10	011310816	Screw	10

 NOTE: Obtain replacement parts from your local Perkins Dealer.

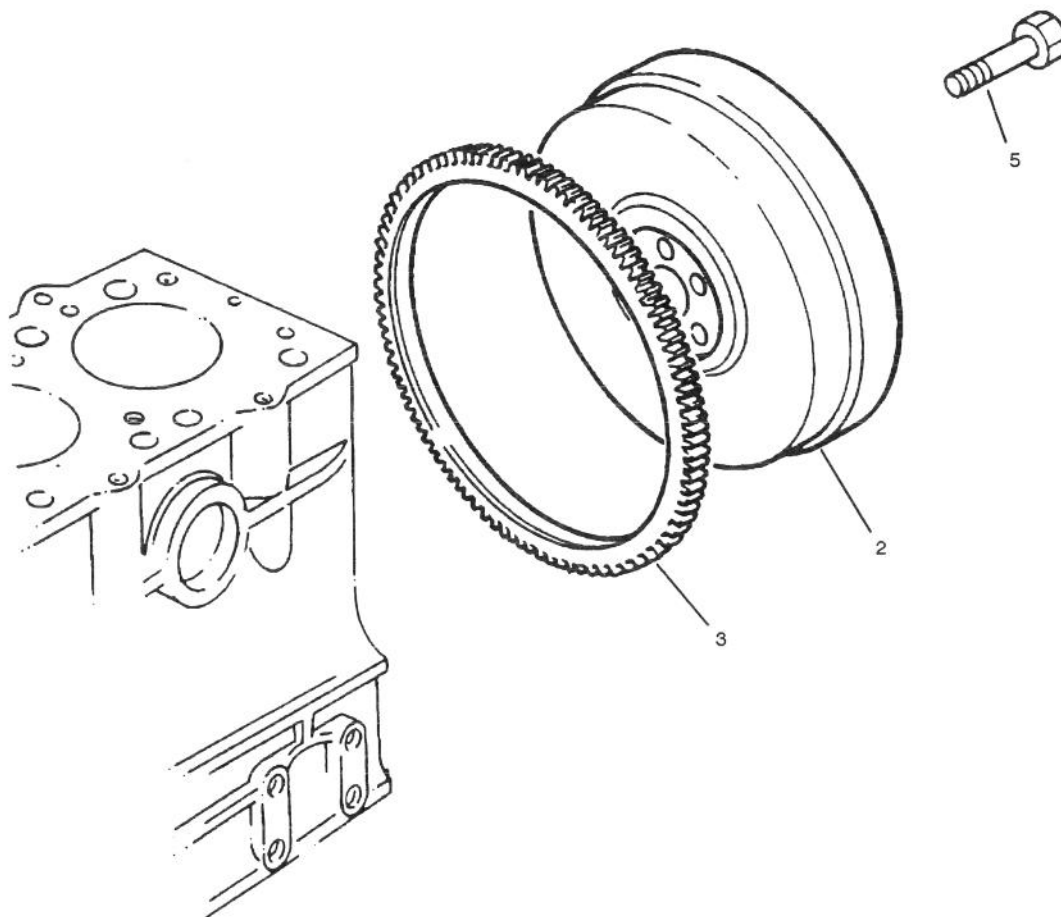


T-1387

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	115356921	Flywheel	1
3	115376150	Gear – Ring	1

Ref. No.	Part No.	Description	No. Used
5	010109330	Screw	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

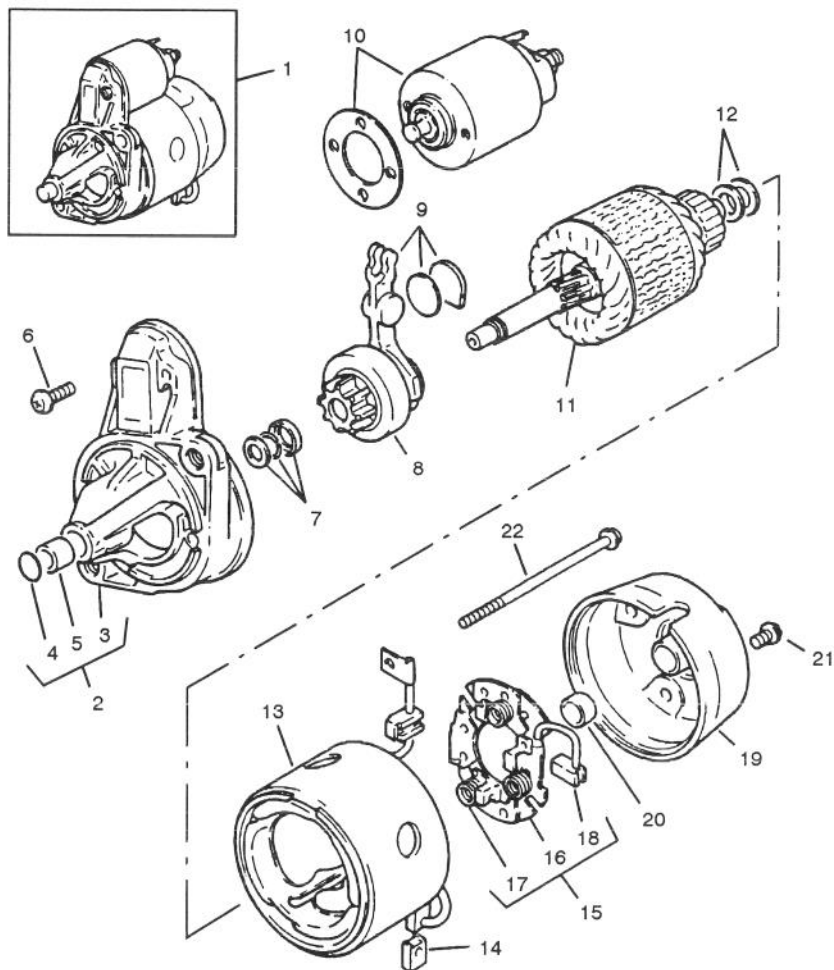


T-1389

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1
2	185846471	Cover (Incl. Ref. #3 & 4)	1
3		Cover	1
4		Ring	1
5	185846472	Bush	2
6	185846468	Screw	2
7	185846473	Washer	1
8	185866240	Pinion	1
9	185846469	Lever	1
10	185816220	Switch	1
11	185846474	Armature	1

Ref. No.	Part No.	Description	No. Used
12	185846475	Washer	1
13	185846476	Yoke	1
14	185416400	Brush	1
15	185416390	Holder (Incl. Ref. #16)	1
16		Holder	1
17	185886010	Spring	1
18	185416410	Brush	1
19	185846477	Cover	1
20	185846478	Bush	1
21	185846468	Screw	3
22	185846470	Screw	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

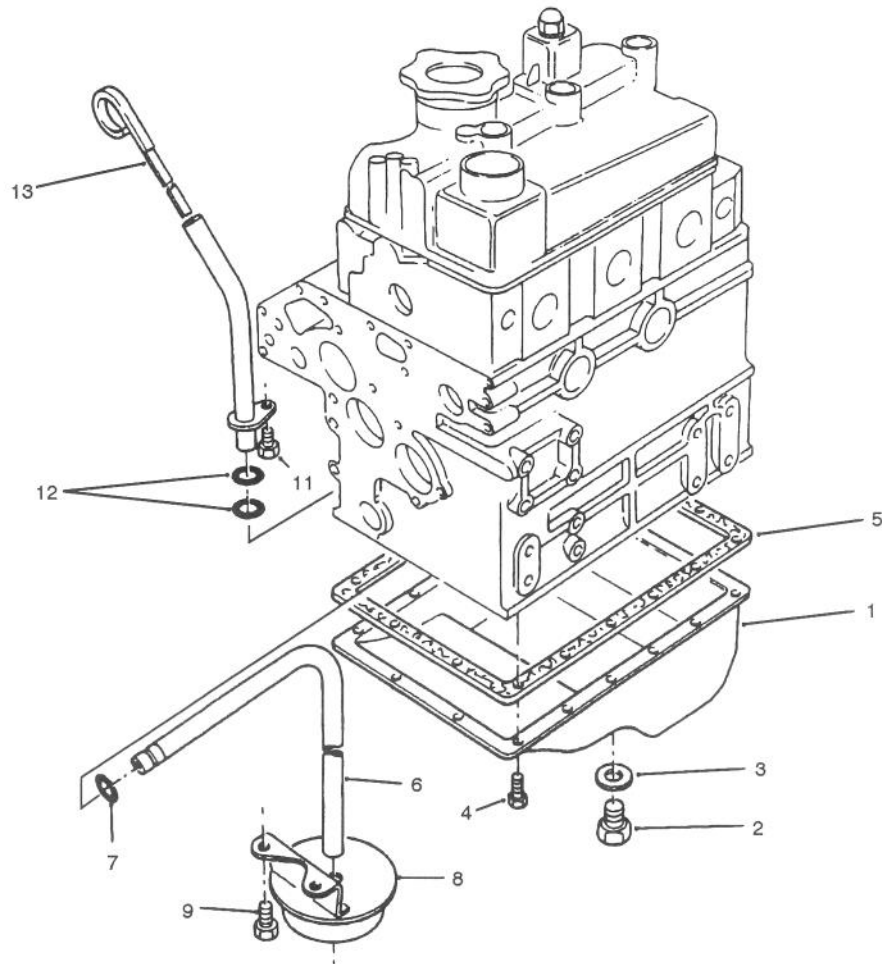


T-1390

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1
2	010401212	Plug	2
3	025100012	Washer	2
4	010109235	Screw	18
5	110996590	Gasket	1
6	140986590	Pipe	1
7	052109076	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
8	140406310	Strainer	1
9	011300612	Bolt	2
11	011300612	Bolt	1
*	011300812	Screw	1
12	052100100	Seal - O-Ring	2
13	198416371	Dipstick	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.
 *Not Illustrated

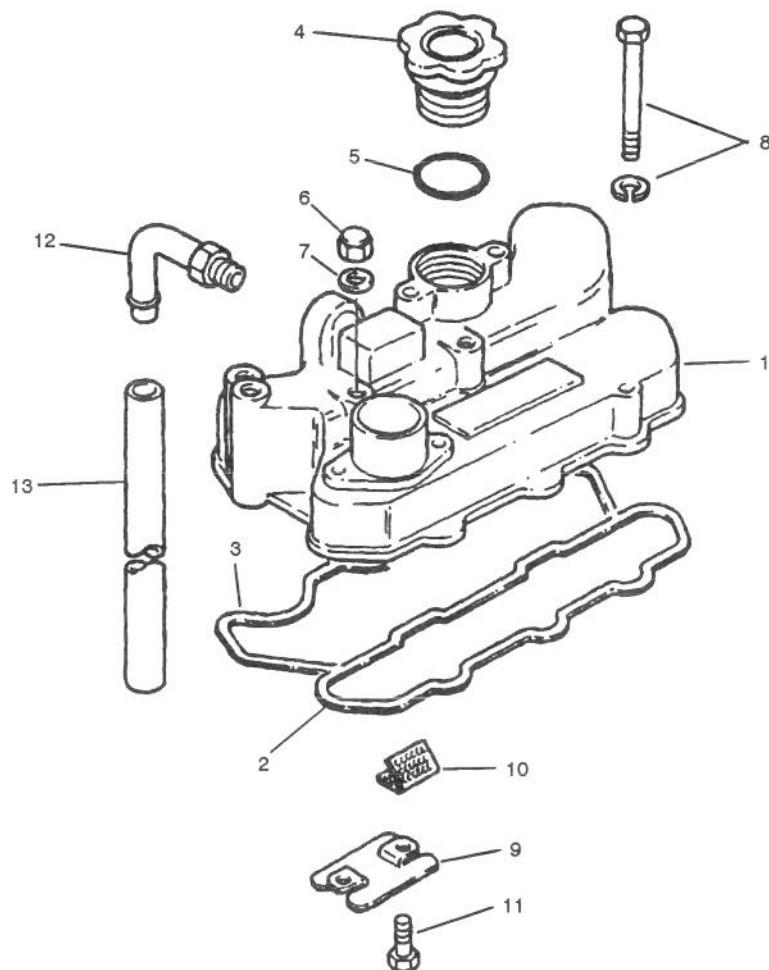


T-1391

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111216630	Cover	1	7	198996060	Washer	3
*	111026371	Cover	1	8	011300650	Screw	2
2	111996330	Gasket	1	9	110666110	Plate	1
3	111996060	Gasket	1	10	110666120	Gauze	1
4	198436010	Cap	1	11	011300612	Bolt	2
5	052100400	Seal	1	12	110986500	Pipe	1
6	024500008	Nut	3	13	068122560	Hose	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

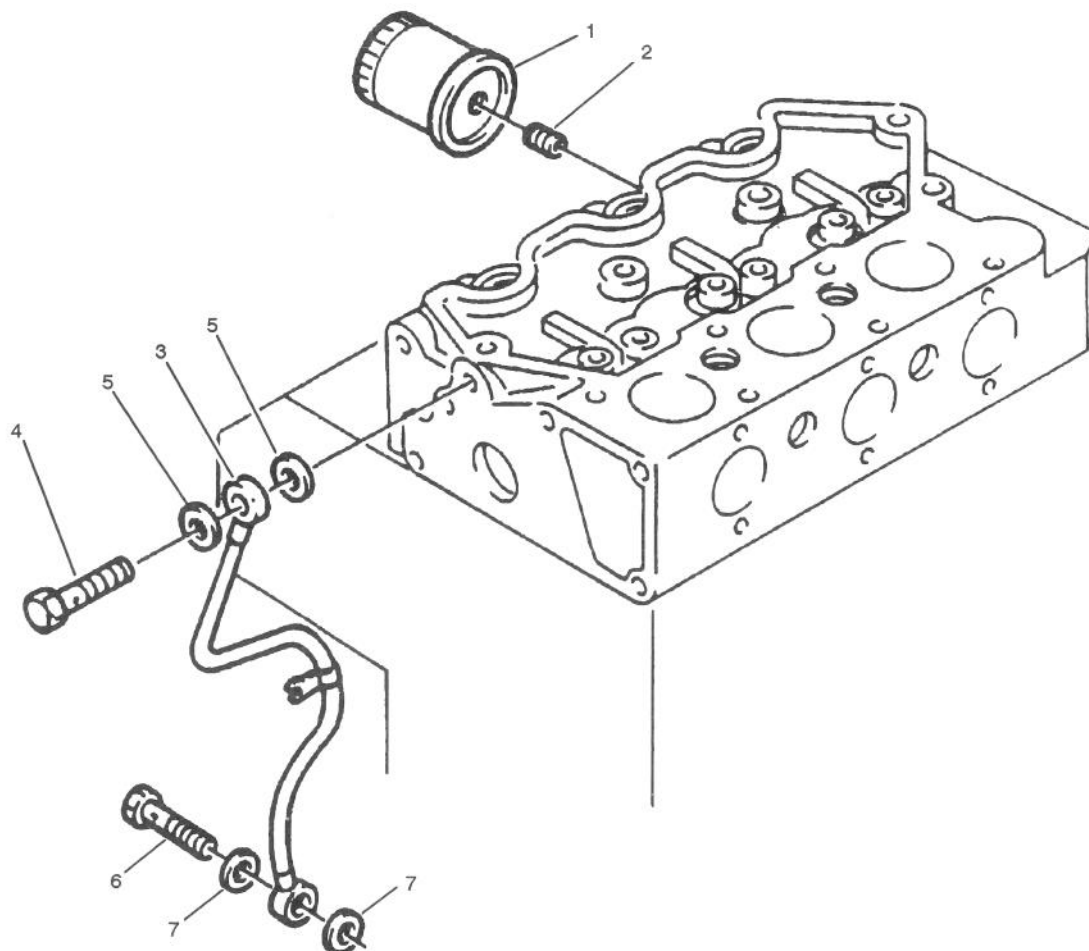


T-1392

OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	140516190	Filter – Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	1

Ref. No.	Part No.	Description	No. Used
5	198996060	Washer	2
6	198486780	Bolt	1
7	198996060	Washer	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

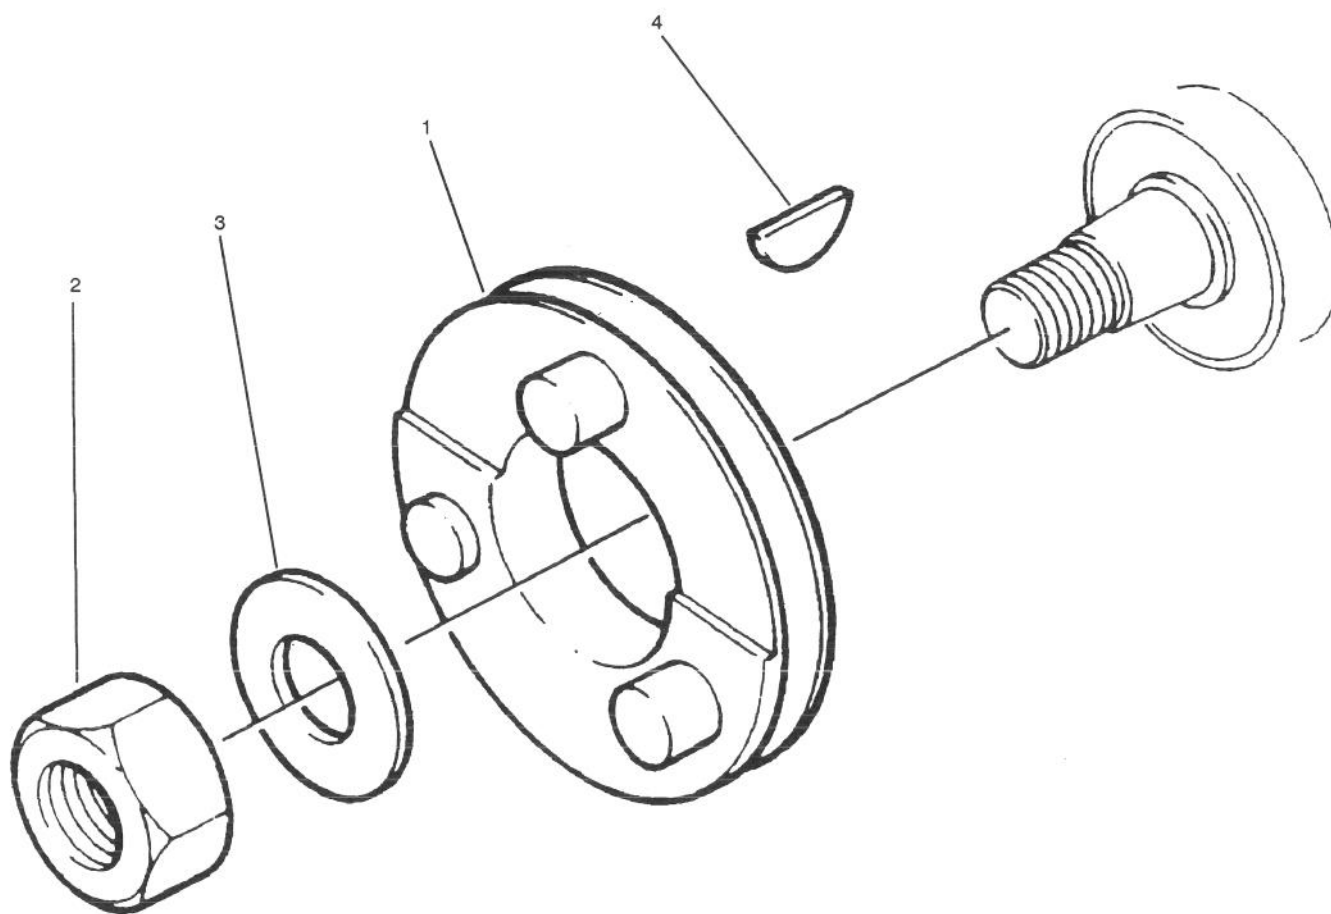


T-1393

FRONT DRIVE PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115397550	Pulley	1
2	020800018	Nut	1

Ref. No.	Part No.	Description	No. Used
3	026200018	Washer	1
4	134100508	Key	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

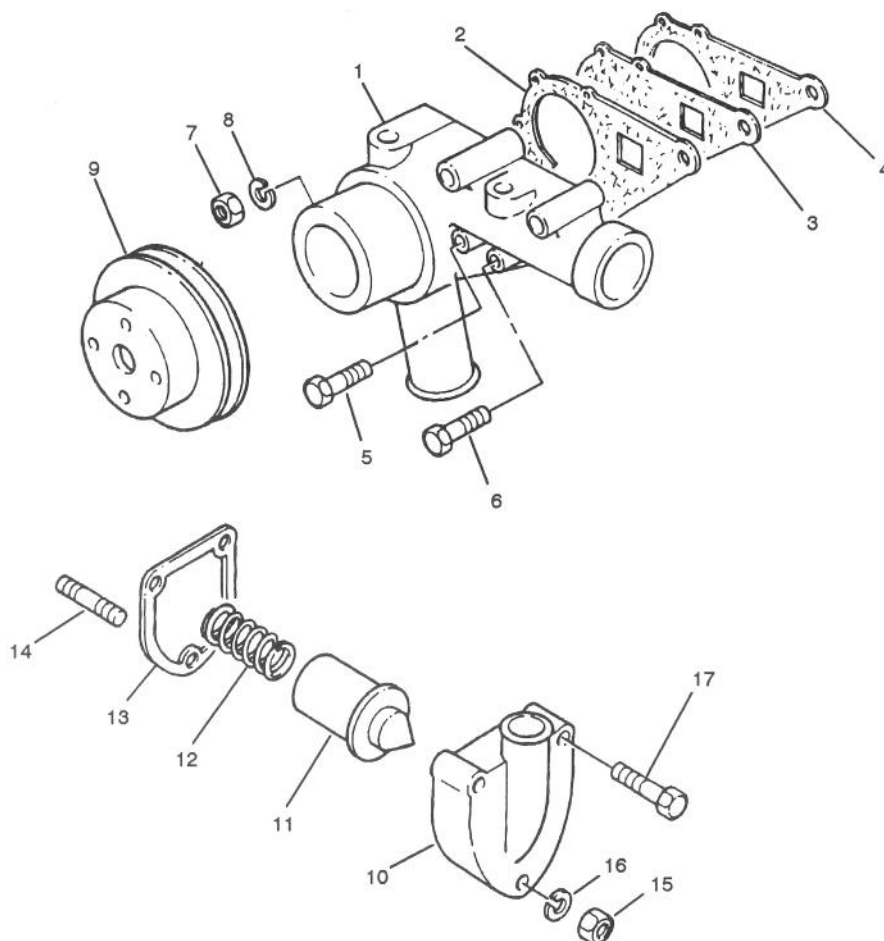


T-1394

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	145016840	Pump — Water	1
2	145996430	Gasket	1
3	145146270	Backplate	1
4	145996420	Gasket	1
5	011300635	Screw	3
6	011300650	Screw	4
7	023100006	Nut	1
8	027100006	Washer	1
9	145336490	Pulley	1

Ref. No.	Part No.	Description	No. Used
10	145216160	Housing	1
11	145206061	Thermostat	1
12	198217090	Spring	1
13	145996440	Gasket	1
14	012100650	Stud	1
15	023100006	Nut	1
16	027100006	Washer	1
17	011300650	Screw	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

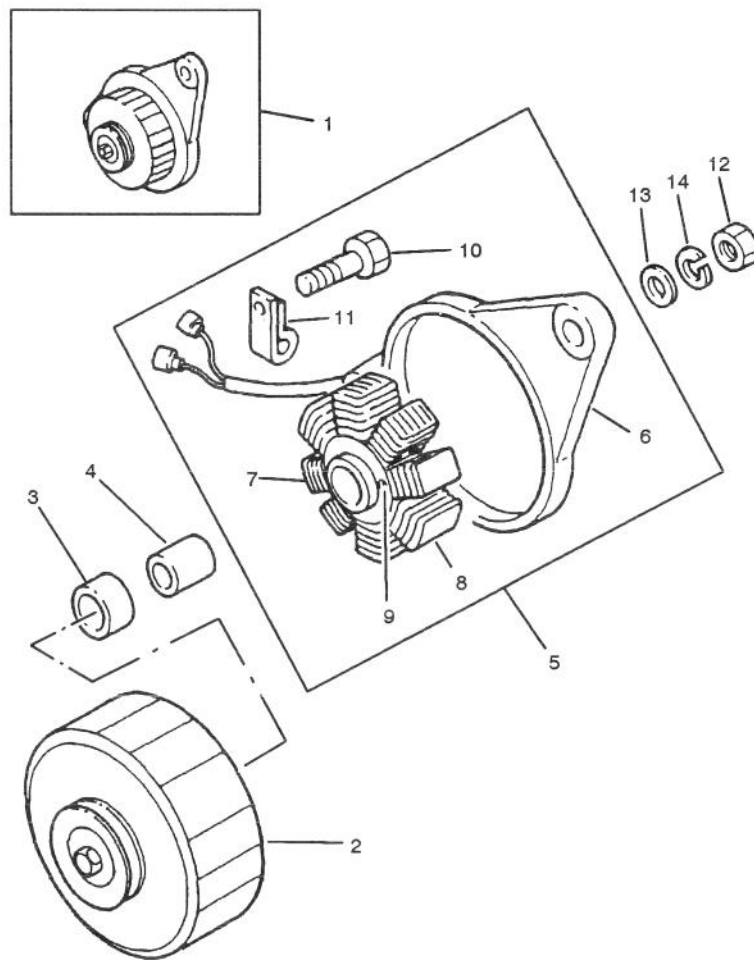


T-1397

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1	8	185426218	Stator	1
2	185446219	Pulley	1	9	015140425	Screw	2
3	040126201	Bearing	1	10	015140408	Screw	1
4	199236510	Collar	1	11	185446220	Clip	1
5	185446217	Plate	1	12	020210010	Nut	1
6	185716200	Plate	1	13	026100010	Washer	1
7	040126201	Bearing	1	14	027100010	Washer	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

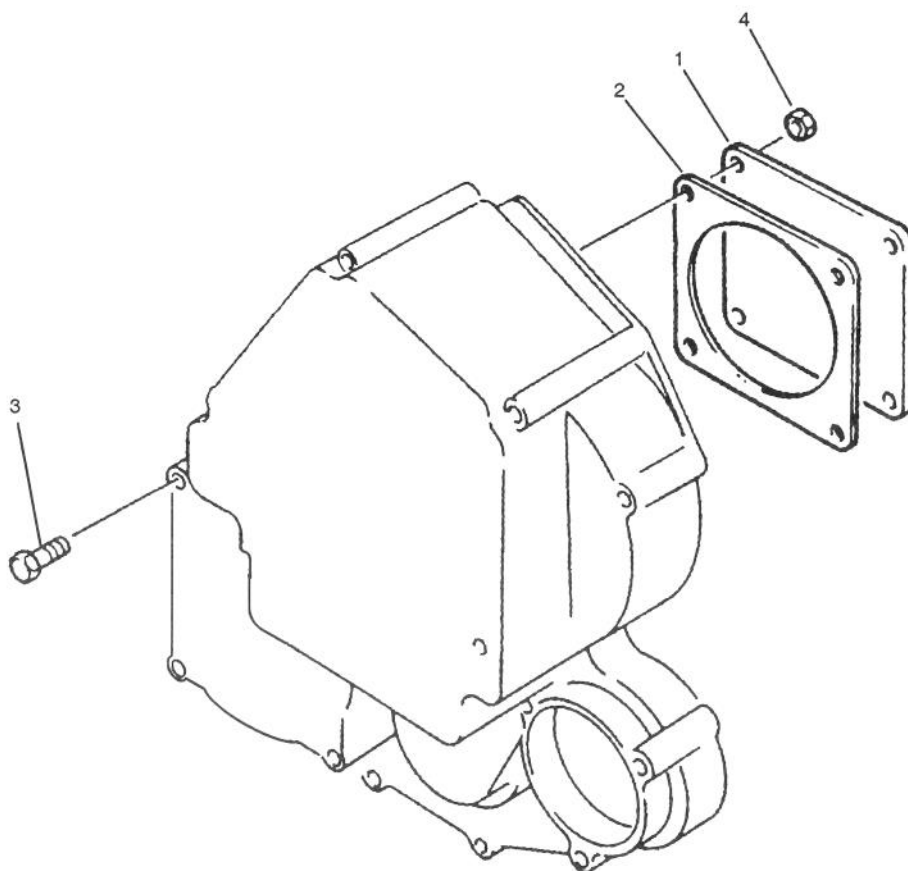


T-1398

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010110850	Screw	4
4	023100008	Nut	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

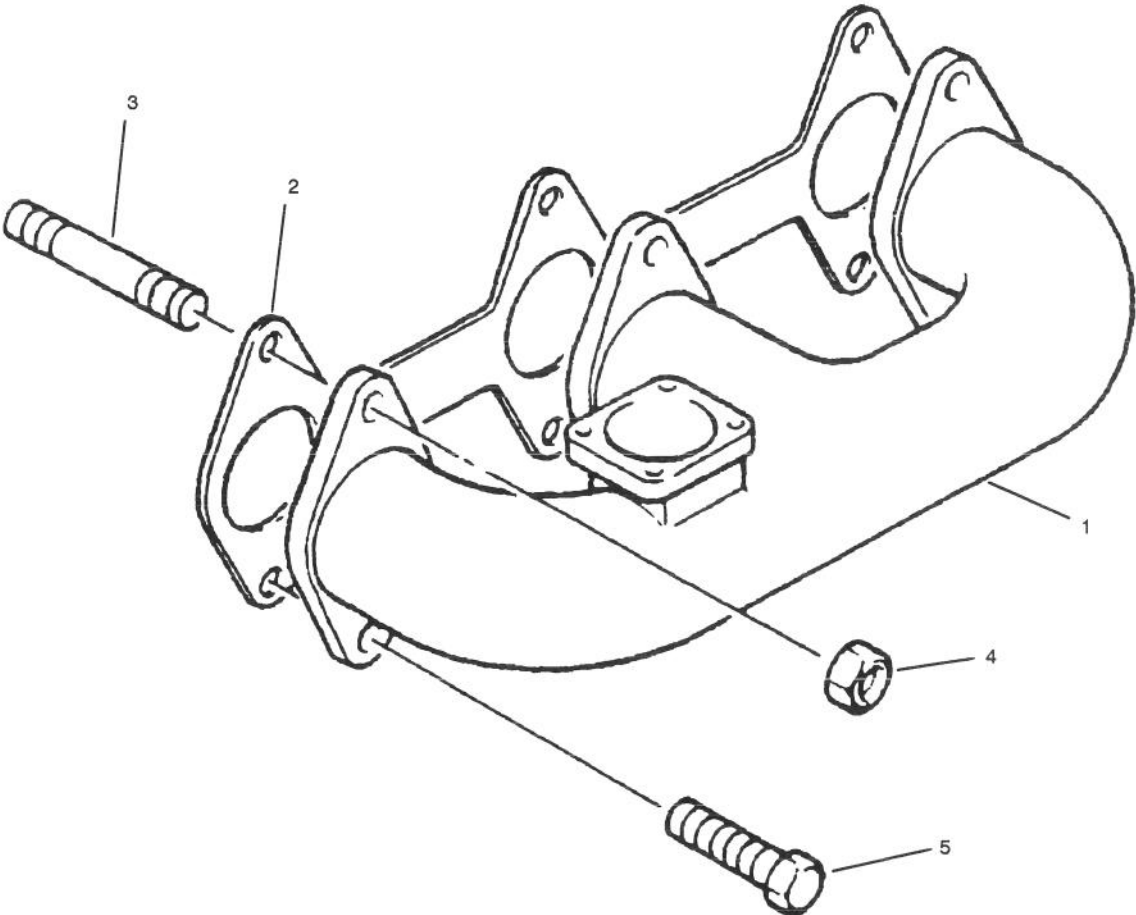


T-1399

EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	135616630	Manifold – Exhaust	1
2	135996520	Gasket	1
3	012110625	Stud	3

Ref. No.	Part No.	Description	No. Used
4	023100006	Nut	3
5	011310625	Screw	3

 NOTE: Obtain replacement parts from your local Perkins Dealer.

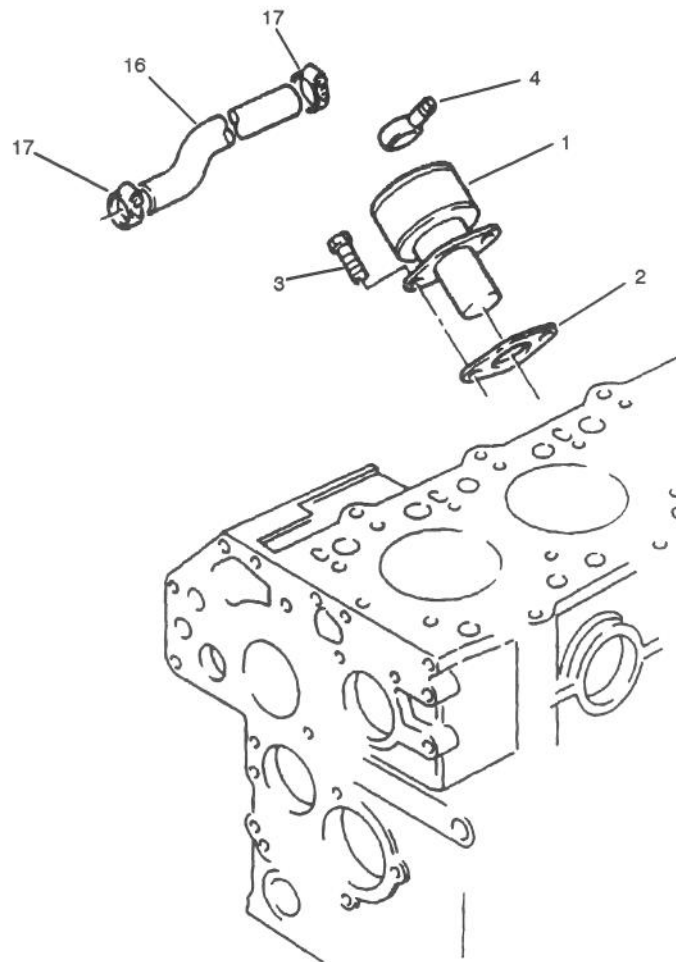


T-1400

LOW PRESSURE FUEL SYSYEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130506140	Pump – Lift	1
2	130996070	Gasket	1
3	011140616	Screw	2

Ref. No.	Part No.	Description	No. Used
4	198486840	Connection	2
16	068209084	Hose	1
17	067100015	Clip	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

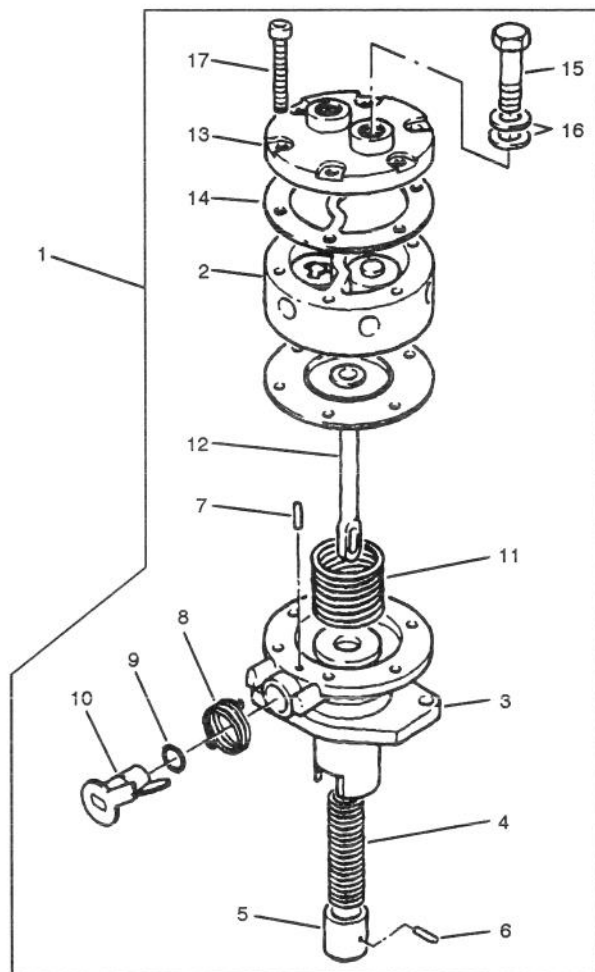


T-1401

LIFT PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Lift Pump Assembly (Incl. Ref. #2)	1	9	131226180	Seal – O–Ring	1
2		Body	1	10	130516086	Lever	1
3	130516080	Body	1	11	130516087	Spring	1
4	130516081	Spring	1	12	130516084	Diaphragm	1
5	130516082	Plunger	1	13	130516090	Cap	1
6	130516085	Pin	1	14	130516089	Gasket	1
7	130516088	Pin	1	15	130516092	Bolt	2
8	130516083	Spring	1	16	130516069	Washer	4
				17	130516091	Screw	6

 NOTE: Obtain replacement parts from your local Perkins Dealer.

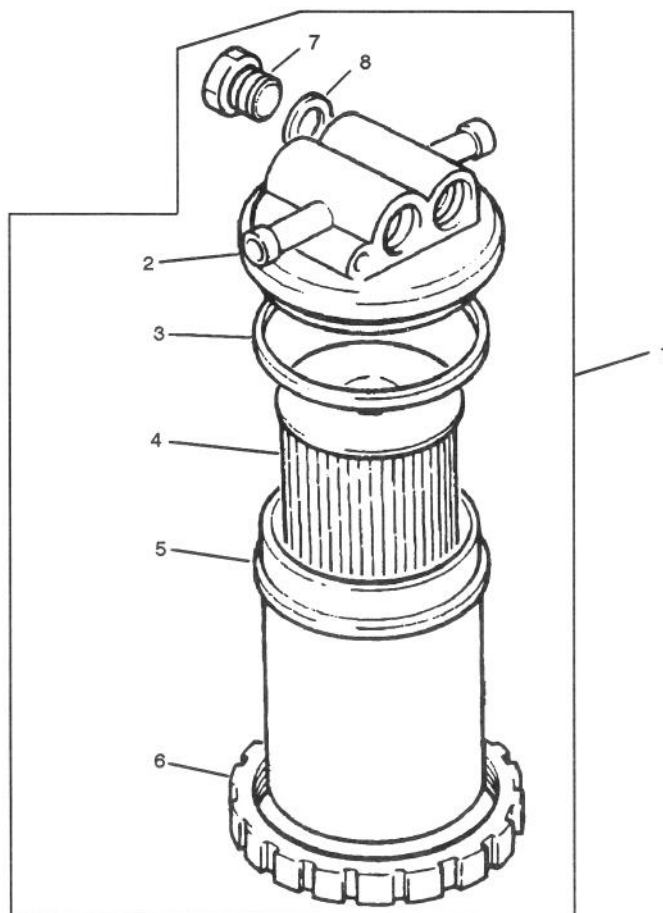


T-1402

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130306041	Fuel Filter Assembly (Incl. Ref. #2)	1	5	130336031	Container	1
2		Head	1	6	130446090	Seal - O-Ring	1
3	052100440	Seal - O-Ring	1	7	130446080	Plug	2
4	130366040	Element	1	8	130326120	Washer	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

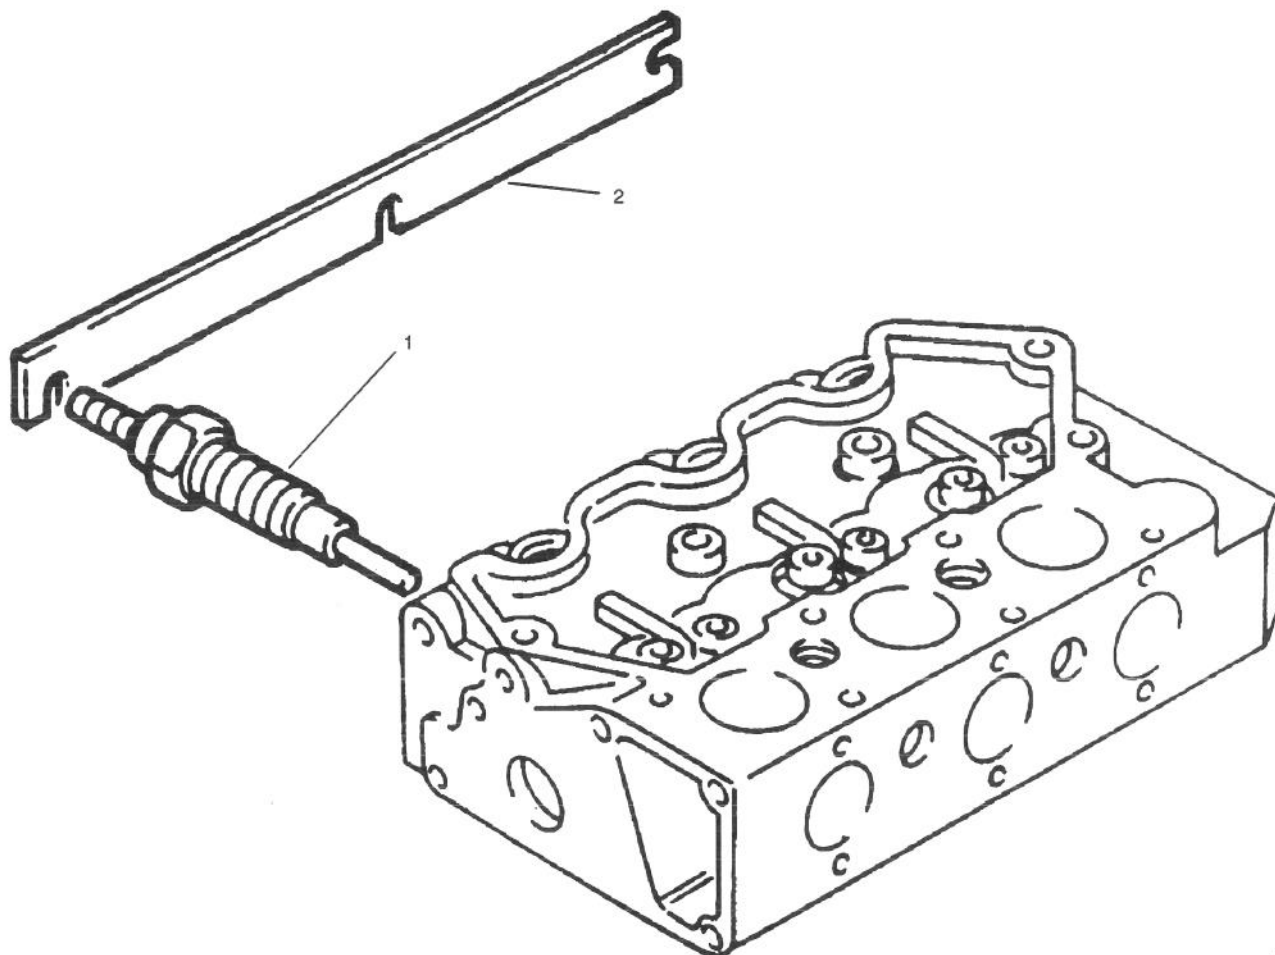


T-1403

COLD START SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185366060	Heater	3

Ref. No.	Part No.	Description	No. Used
2	185376170	Bar	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

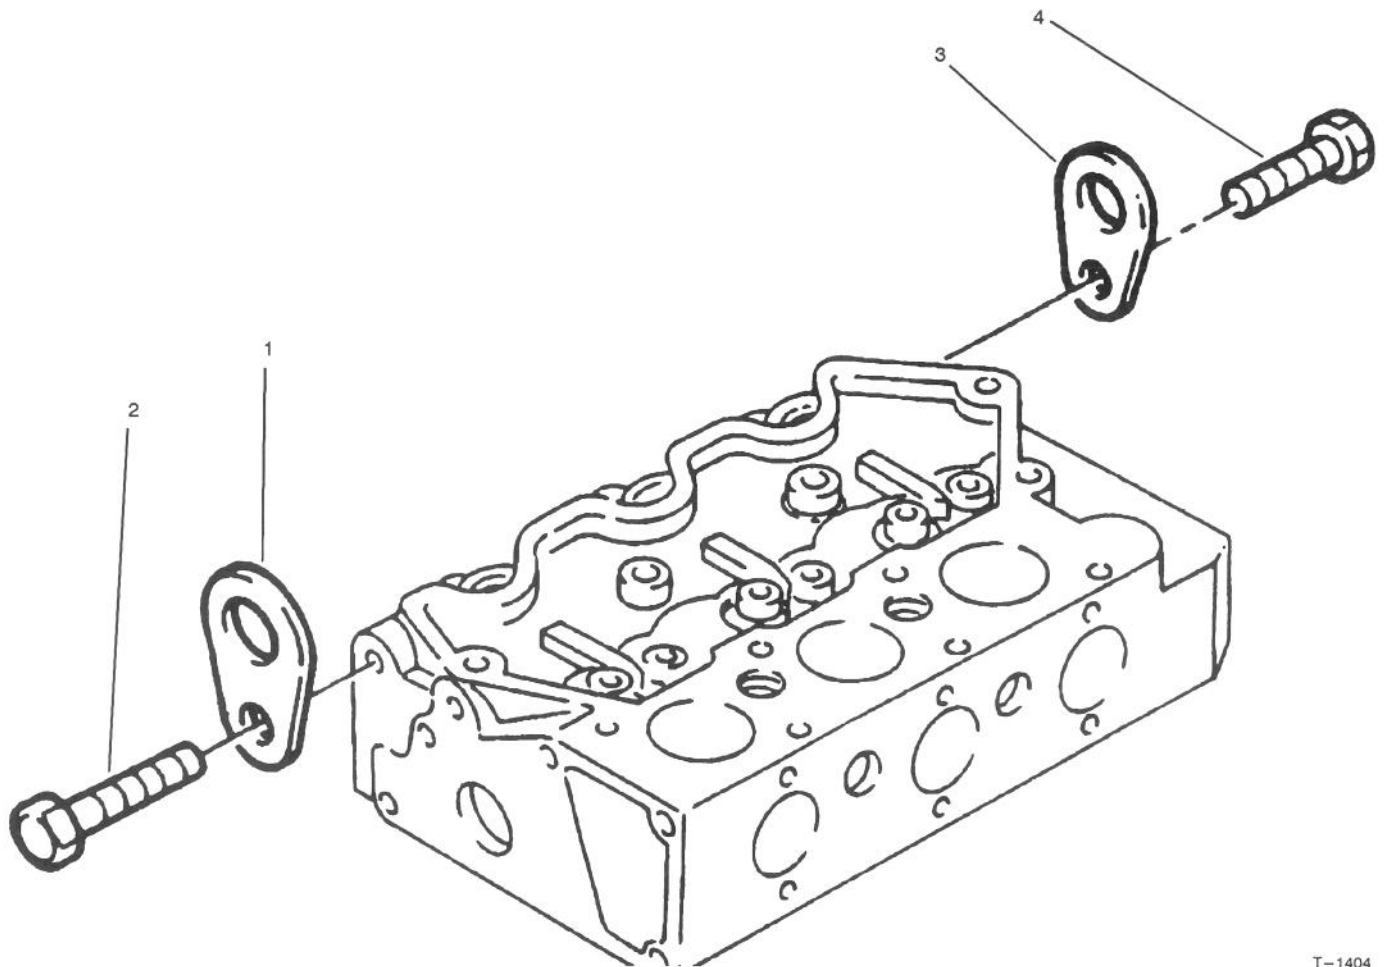


T-1404

ENGINE LIFTING TAB ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	1
2	011310816	Screw	1

Ref. No.	Part No.	Description	No. Used
3	195816200	Plate	1
4	011310816	Screw	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

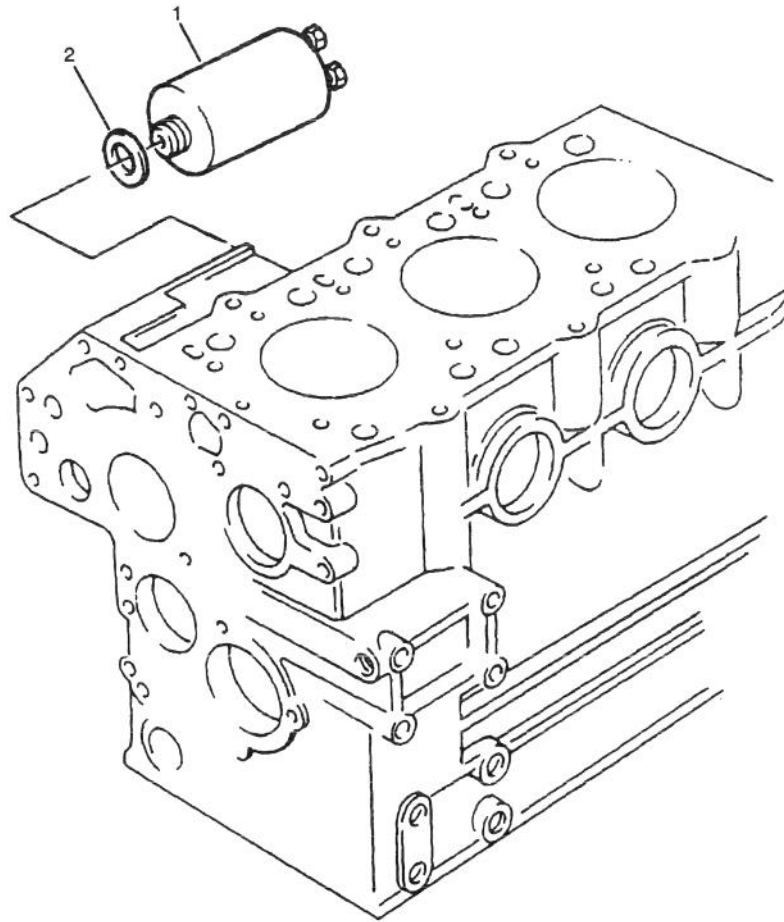


T-1405

THROTTLE STOP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185206082	Solenoid	1

Ref. No.	Part No.	Description	No. Used
2	025100016	Washer	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

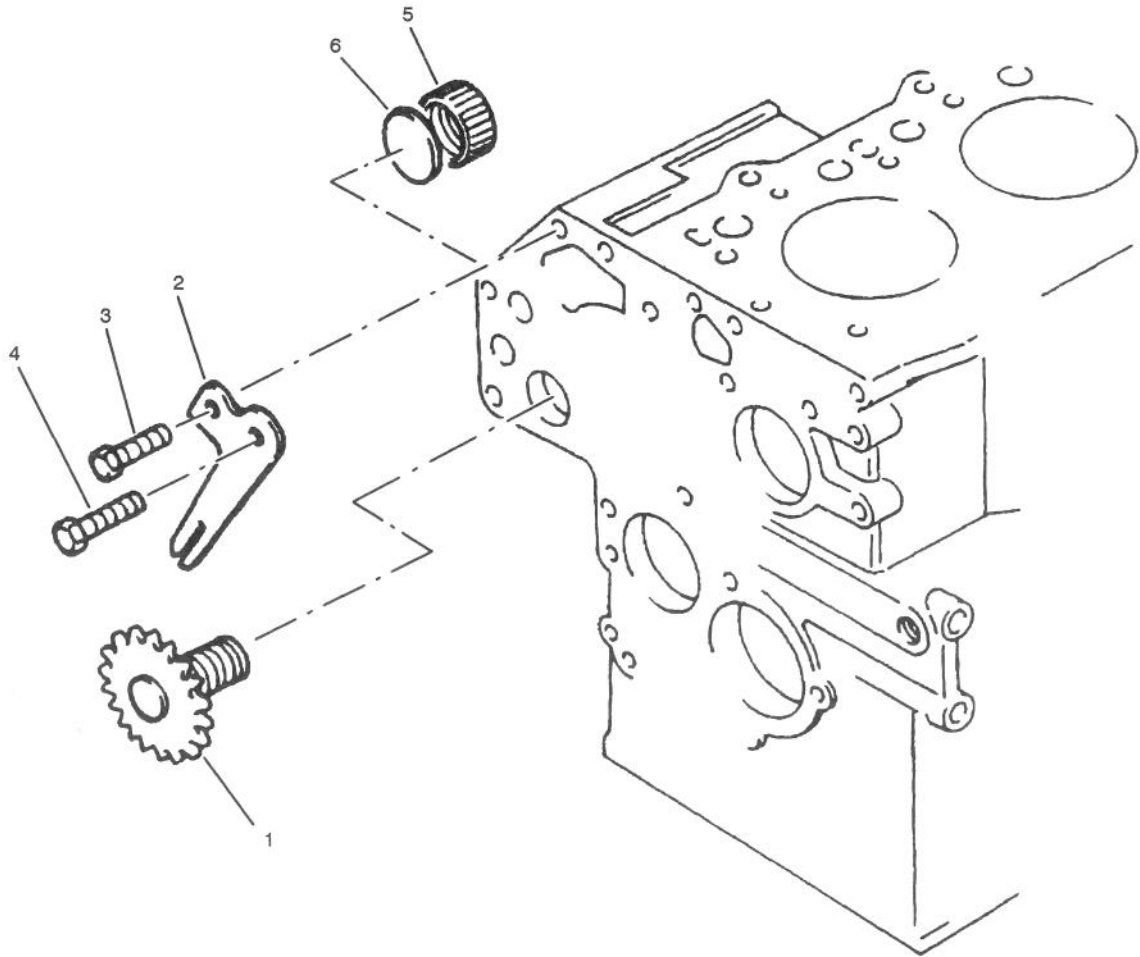


T-1406

RECORDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120076070	Shaft	1
2	199566651	Plate	1
3	011310612	Screw	1

Ref. No.	Part No.	Description	No. Used
4	010700610	Screw	1
5	199376230	Cap	1
6	120996060	Seal	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

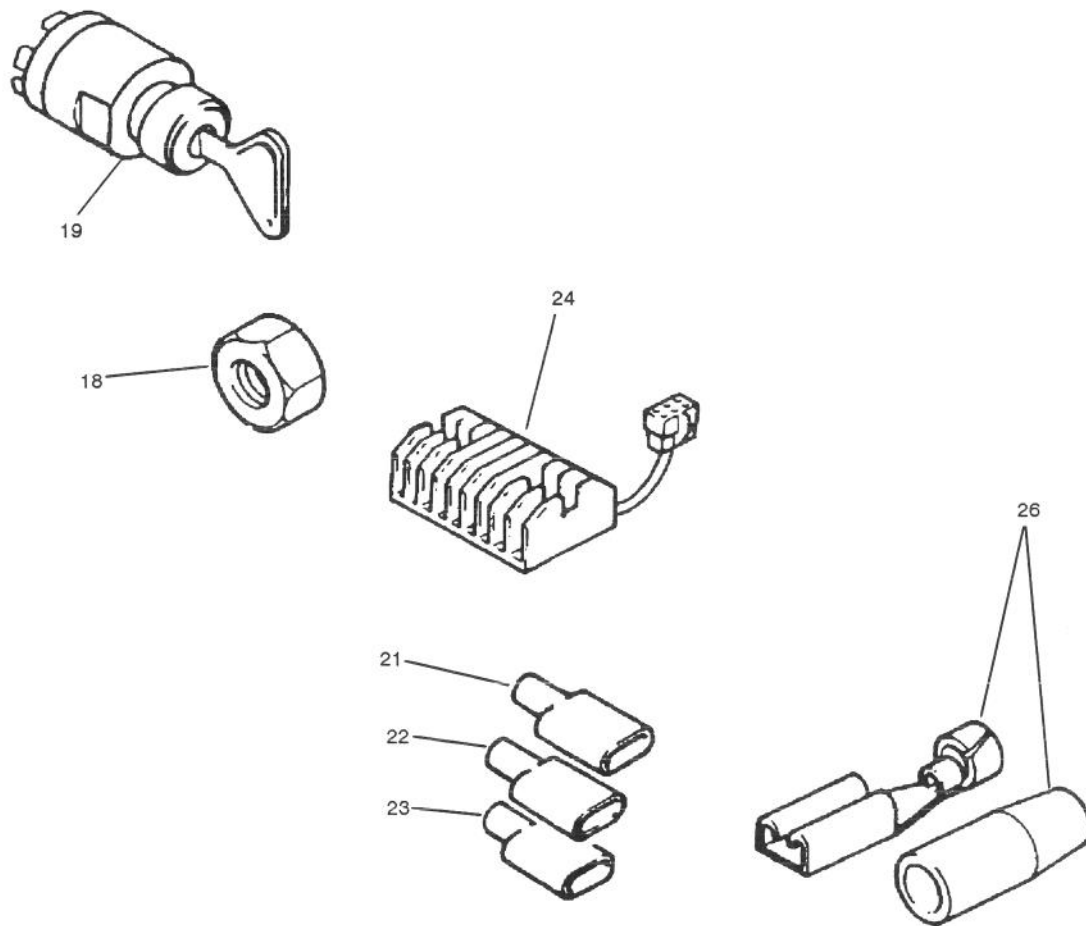

T-1407

ELECTRICAL COMPONENT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
18	020100008	Nut	1
19	385201160	Switch	1
21	385620010	Connection	1
22	385620280	Connection	2

Ref. No.	Part No.	Description	No. Used
23	385620270	Connection	1
24	185516060	Regulator	1
26	385620200	Connection	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 85-5110

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Control	Skirt Panel	80-4220	84-6960
Decal Service	Skirt Panel	83-8900	84-7180
Panel Starting Fluid	Control Panel	83-9150	84-6660
Decal Parking Brake	Left Fender	84-1650	84-6860
Decal Warning	Fan Top Shroud	77-3100	84-6760
Decal Warning	Skirt Panel	83-9550	84-7080
Decal Warning	Hydraulic Tank Support	67-5360	84-7280
Decal Warning	Cutting Unit Top Shields	62-5070	84-6560
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2940

ITALIAN DECAL KIT NO. 85-5120

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal Control	Skirt Panel	80-4220	84-6950
Decal Service	Skirt Panel	83-8900	84-7170
Panel Starting Fluid	Control Panel	83-9150	84-6650
Decal Parking Brake	Left Fender	84-1650	84-6850
Decal Warning	Fan Top Shroud	77-3100	84-6750
Decal Warning	Skirt Panel	83-9550	84-7070
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6550
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2910

SWEDISH DECAL KIT NO. 85-5060

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal Control	Skirt Panel	80-4220	84-6990
Decal Service	Skirt Panel	83-8900	84-7210
Panel Starting Fluid	Control Panel	83-9150	84-6690
Decal Parking Brake	Left Fender	84-1650	84-6890
Decal Warning	Fan Top Shroud	77-3100	84-6790
Decal Warning	Skirt Panel	83-9550	84-7110
Decal Warning	Hydraulic Tank Support	67-5360	84-7310
Decal Warning	Cutting Unit Top Shields	62-5070	84-6590
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2870

GERMAN DECAL KIT NO. 85-5050

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Control	Skirt Panel	80-4220	84-6940
Decal Service	Skirt Panel	83-8900	84-7160
Panel Starting Fluid	Control Panel	83-9150	84-6640
Decal Parking Brake	Left Fender	84-1650	84-6840
Decal Warning	Fan Top Shroud	77-3100	84-6740
Decal Warning	Skirt Panel	83-9550	84-7060
Decal Warning	Hydraulic Tank Support	67-5360	84-7260
Decal Warning	Cutting Unit Top Shields	62-5070	84-6540
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

SPANISH DECAL KIT NO. 85-5070

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Control	Skirt Panel	80-4220	84-6980
Decal Service	Skirt Panel	83-8900	84-7200
Panel Starting Fluid	Control Panel	83-9150	84-6680
Decal Parking Brake	Left Fender	84-1650	84-6880
Decal Warning	Fan Top Shroud	77-3100	84-6780
Decal Warning	Skirt Panel	83-9550	84-7100
Decal Warning	Hydraulic Tank Support	67-5360	84-7300
Decal Warning	Cutting Unit Top Shields	62-5070	84-6580
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

FRENCH DECAL KIT NO. 85-5040

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Control	Skirt Panel	80-4220	84-6930
Decal Service	Skirt Panel	83-8900	84-7150
Panel Starting Fluid	Control Panel	83-9150	84-6630
Decal Parking Brake	Left Fender	84-1650	84-6830
Decal Warning	Fan Top Shroud	77-3100	84-6730
Decal Warning	Skirt Panel	83-9550	84-7050
Decal Warning	Hydraulic Tank Support	67-5360	84-7250
Decal Warning	Cutting Unit Top Shields	62-5070	84-6530
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2800

DANISH DECAL KIT NO. 85-5130

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal Control	Skirt Panel	80-4220	84-6900
Decal Service	Skirt Panel	83-8900	84-7120
Panel Starting Fluid	Control Panel	83-9150	84-6600
Decal Parking Brake	Left Fender	84-1650	84-6800
Decal Warning	Fan Top Shroud	77-3100	84-6700
Decal Warning	Skirt Panel	83-9550	84-7020
Decal Warning	Hydraulic Tank Support	67-5360	84-7220
Decal Warning	Cutting Unit Top Shields	62-5070	84-6500
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2930

DUTCH DECAL KIT NO. 85-5080

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal Control	Skirt Panel	80-4220	84-6910
Decal Service	Skirt Panel	83-8900	84-7130
Panel Starting Fluid	Control Panel	83-9150	84-6610
Decal Parking Brake	Left Fender	84-1650	84-8610
Decal Warning	Fan Top Shroud	77-3100	84-6710
Decal Warning	Skirt Panel	83-9550	84-7030
Decal Warning	Hydraulic Tank Support	67-5360	84-7230
Decal Warning	Cutting Unit Top Shields	62-5070	84-6510
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2920

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

FINNISH DECAL KIT NO. 85-5090

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FINISH
Decal Control	Skirt Panel	80-4220	84-6920
Decal Service	Skirt Panel	83-8900	84-7140
Panel Starting Fluid	Control Panel	83-9150	84-6620
Decal Parking Brake	Left Fender	84-1650	84-6820
Decal Warning	Fan Top Shroud	77-3100	84-6720
Decal Warning	Skirt Panel	83-9550	84-7040
Decal Warning	Hydraulic Tank Support	67-5360	84-7240
Decal Warning	Cutting Unit Top Shields	62-5070	84-6520
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7010

NORWEGIAN DECAL KIT NO. 85-5100

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	NORWEGIAN
Decal Control	Skirt Panel	80-4220	84-6970
Decal Service	Skirt Panel	83-8900	84-7190
Panel Starting Fluid	Control Panel	83-9150	84-6670
Decal Parking Brake	Left Fender	84-1650	84-6870
Decal Warning	Fan Top Shroud	77-3100	84-6770
Decal Warning	Skirt Panel	83-9550	84-7090
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6570
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7000

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0348	Bushing - Sleeve	26 7 4	29-6163	Switch	12 28 1
3-0348	Bushing - Sleeve	27 17 2	29-6163	Switch - Lift	24 4 1
3-6498	Washer	14 50 2	29-6170	Spring - Extended Leaf	12 7 1
3-6498	Washer - Thrust	7 7 A/R	29-9080	Handle	31 3 1
5-0743	Spring - Extension	27 1 1	29-9090	Hose - Handle	31 4 1
5-0743	Spring - Extension	26 17 2	33-1300	Element Assembly	4 5 1
5-2653	Cable Pulley Assembly	24 8 1	33-1310	Baffle	4 8 1
5-2655	Keeper - Cable	24 7 1	33-1320	Cup	4 9 1
5-2656	Keeper - Cable	24 30 2	33-1330	Nut Assembly	4 6 1
5-7280	Key - Square	20 1 3	33-1340	Clamp Assembly	4 7 1
5-7290	Spring - Extension	13 6 1	33-1350	Band Assembly	4 3 2
10-6821	Brake Drum Assembly	13 18 2	33-1350	Clamp Assembly	3 60 2
10-6870	Hub - Wheel	13 19 2	36-4310	Brush	31 5 1
10-7070	Key - Square	20 13 1	36-7290	Spindle - Fan	18 49 1
11-9760	Screw - Hex. Flange Hd.	12 25 3	37-9090	Belt - V	18 2 1
12-9140	Decal	31 1 1	37-9590	Spring - Compression	2 22 1
14-5759	Hood	1 11 1	42-9850	Washer	19 61 1
14-8539	Top Shroud Assembly	8 5 1	43-1950	Lift Valve Assembly	22 4 1
18-2970	Clamp - R	27 21 1	43-8600	Spring - Compression	2 28 1
20-0140	Rod End Assembly	29 5 1	43-8610	Guide - Spring	2 27 1
21-0140	Rod End Assembly	7 27 1	43-8620	Guide - Pin	2 30 1
22-8330	Plug	23 1 2	43-8860	Plunger - Switch	2 29 1
22-8340	Spring	23 3 2	43-8870	Boot - Switch	2 32 1
22-8350	Ball	23 4 2	43-9071	Seat Switch Assembly	3 * 1
22-8360	Pin - Cam	23 6 2	44-2212	Light Assembly	5 45 1
22-8370	Seat - Check Valve	23 5 2	46-8810	Stop - Spring	12 1 1
22-8380	Retainer - Spring	23 10 2	48-1800	Cylinder Block Kit	11 5 1
22-8410	Spring	23 11 1	48-7700	Screw - Cap Hex. Hd.	18 14 6
22-8420	Spool	23 8 1	48-7780	Screw - Cap Hex. Hd.	18 29 16
22-8480	Snap Ring - Spool	23 13 1	48-8010	Washer - Flat	18 41 4
22-8490	Snap Ring	23 14 1	48-9460	Screw - Cap Hex. Hd.	18 8 14
22-8500	Seal - O-Ring	23 9 2	48-9590	Washer - Lock	18 28 16
23-2140	Hose - Fuel	30 23 1	49-8480	Shaft - Trunion	11 28 1
23-3030	Spacer	23 12 1	49-8520	Kit - Implement Relief	11 * 1
24-0760	Cooler - Oil	8 20 1	51-3150	Shim - Spring	12 6 1
25-2380	Plate - Thrust	11 39 1	54-0110	Element - Oil Filter	9 15 1
25-2390	Plate - Valve	11 40 1	55-4300	Decal - Warning	26 9 2
25-2400	Gasket	11 43 1	55-4300	Decal - Warning	27 24 1
25-2430	Pin - Straight	11 41 1	56-2230	Hose - Fuel	30 11 1
25-2450	Swash/Plate	11 37 1	56-2520	Valve - Fuel Shut-Off	30 9 1
25-2460	Plug	11 14 2	56-7977	Clamp - Hydraulic Tube	16 7 2
25-2470	Kit - Shim Pack	11 16 2	56-9510	Bushing Assembly	28 10 2
25-2480	Spring - Charge Relief	11 32 1	56-9520	Bushing - Nylon	28 16 1
25-2490	Ball - Check Valve	11 47 2	57-5420	Screw - Shoulder	9 5 1
25-2510	Washer	11 11 2	57-6390	Nut	19 60 1
25-2530	Pin - Straight	11 26 1	59-2150	Taper Lock Bushing Assy.	10 20 1
25-2560	Cone - Relief Valve	11 18 1	61-0140	Pulley - Reel	20 4 3
25-2570	Spring - Relief Valve	11 17 1	61-1960	Axle - Wheel	29 7 1
25-2580	Shaft - Trunion	11 12 1	61-2010	Pinion - Steering	7 15 1
25-2620	Valve - By-Pass	11 4 1	61-2040	Rack - Steering	7 4 1
25-2630	Ring	11 3 1	61-2070	Rod - Steering	7 5 1
25-2640	Spring - Check Valve	11 48 2	61-2070	Rod - Steering	29 18 1
25-2650	Plug - Check Valve	11 50 2	61-2080	Shaft - Steering	7 18 1
25-2680	Gerotor Assembly	11 25 1	61-2090	Steering Column Assembly	7 21 1
25-2690	Housing - Charge Pump	11 21 1	61-2350	Support - Bearing	20 6 2
25-3180	Kit - Check Valve	11 * 1	61-2370	Spacer	12 16 2
25-3210	Seal - Lip	11 10 2	61-2430	Hub - Lift	24 45 1
26-3790	Nut - Lock	13 23 2	61-2610	Arm - Traction	12 14 1
27-9870	Pin - Seat	2 24 1	61-2790	Screen - Filler	9 8 1
28-3420	Cone - Charge Relief	11 33 1	61-2890	Lift Arm Assembly	27 29 1
28-6180	Pin	2 23 1	61-2990	Spacer - Switch	24 3 1
29-6120	Plate - Pump	12 5 1	61-3210	Cable Pulley Assembly	24 22 3
29-6150	Spring - Leaf	12 9 1	61-3230	Spacer	24 24 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-642

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
61-3270	Spring - Compression	26 6 2	71-1500	Brake Assembly	14 * 2
61-3360	Joint - Universal	7 17 1	71-3382	Hose - Overflow	8 11 1
61-3830	Chain - Lift	24 33 2	72-4190	Pin - Cylinder Guide	24 12 1
61-3990	Parking Brake Assembly	13 5 1	72-4320	Switch - Seat	2 25 1
61-7250	Boot	26 5 4	74-0720	Tube - Manual	2 14 1
62-4290	O-Ring	11 44 2	74-6110	Cam - Stop	12 35 1
62-7170	Spacer	2 43 1	74-9100	Pad - Forward	12 11 1
62-7240	Cover - Spring	27 2 1	74-9110	Pad - Reverse	12 13 1
62-7250	Boot	27 18 2	75-0540	Teather - Cap	9 4 1
62-7300	Chain	27 3 1	75-4703	Hose - Fuel	30 15 1
62-7400	Decal - TORO	1 10 1	75-4703	Hose - Fuel	18 25 1
62-9510	Washer - Flat	18 50 1	75-4710	Harness - Warning Light	5 5 1
63-1400	Guide - Cable	24 28 1	75-6820	Hourmeter	5 3 1
63-7430	Temperature Gauge Assy.	5 17 1	75-7730	Spacer	29 2 1
63-7590	Relay	5 34 1	76-0020	Hydraulic Cylinder Assembly	24 37 1
63-7590	Relay	2 39 1	76-0030	Repair Kit	25 * 1.
63-7620	Hose - Fuel	30 5 1	76-0040	Piston	25 8 1
63-7620	Hose - Fuel	18 18 1	76-0050	Ring - Retaining	25 12 1
63-8140	Pulley - Idler	18 3 1	76-0090	Head	25 3 1
63-8410	Washer - Flat	9 10 3	76-0300	Housing - Bushing	28 12 1
63-8410	Washer - Flat	30 17 3	76-0350	Housing - Bushing	28 2 1
65-4500	Seal - Snap Ring	15 14 1	76-0360	Cup - Retainer	28 6 1
65-4550	Valve - Check Ball	15 6 2	76-0370	Bolt - Shoulder	27 12 2
65-4560	Plug - Hex (Hollow)	15 3 1	76-0370	Bolt - Shoulder	26 23 2
65-4570	Seal - Square Ring	15 4 2	76-0390	Spacer	28 15 1
65-4580	Screw - Cap Hex Hd.	15 1 8	76-0410	Spring - Compression	28 7 1
65-4590	Ring - Snap	15 21 1	76-1420	Wheel - Steering	7 23 1
65-4600	Washer - Thrust	15 19 2	76-2200	Footrest - Traction	1 5 1
65-4610	Bearing - Thrust	15 20 1	76-2260	Pad - Footrest Traction	1 6 1
65-4620	Seal - O-Ring	15 12 1	76-2320	Shaft	25 4 1
65-4640	Key - Square	15 11 1	76-2330	Nut - Lock	25 5 1
65-4660	Shaft	15 10 1	76-2350	Seal/Retainer Assembly	15 * 1
65-4670	Body & Bearing Assembly	15 9 1	76-2360	Body Seal Kit	15 * 1
65-4680	Cover & Bearing Assembly	15 2 1	76-2430	Scraper - Pulley	26 2 2
65-8270	Waher	19 57 1	76-2460	Bearing Assembly	20 7 2
65-8320	Bar - Height-Of-Cut	32 1 1	76-6471	Trim - Control Panel Bottom	2 41 1
66-2920	Spacer	12 36 1	77-3100	Decal - Warning	8 4 1
66-2960	Cluster - Warning	5 7 1	80-6980	Latch - Hood	5 12 1
66-3240	Cap - Radiator	8 9 1	80-6990	Washer	24 18 4
66-5291	Hydraulic Motor Assembly	13 30 2	80-7345	Hose	5 29
66-6110	IGR Assembly	15 5 1	81-1690	Clamp - Throttle Cable	18 21 1
67-5360	Decal - Danger	3 57 1	82-3110	Sensor - Temp	18 16 1
67-8020	Shaft - Pump	11 6 1	83-7340	Fork - Caster	29 6 1
67-8030	Plug Assembly	11 19 1	83-7540	Engine Assembly	18 54 1
67-8040	O-Ring	11 20 1	83-7550	Radiator Assembly	8 35 1
67-8050	Bearing - Needle	11 22 1	83-7590	Pulley - Engine	18 55 1
67-8060	Seal - Lip	11 23 1	83-7610	Hub - Fan	18 44 1
67-8080	Bearing - Needle	11 42 1	83-7620	Spacer - Fan	18 42 1
67-8090	Cap - Pump End	11 45 1	83-7630	Pulley - Fan	18 43 1
68-4210	Spacer - Wheel	29 8 2	83-7690	Bracket - Idler	18 5 1
68-8990	Head - Oil Filter	9 19 1	83-7700	Bracket - Alternator	18 34 1
69-1170	Glass - Sight	9 2 1	83-7720	Reservoir - Hydraulic	9 1 1
69-4780	Clamp - Light Cluster	5 43 1	83-7780	Bracket - Support	9 24 1
70-8150	Plate - Valve	15 7 1	83-7790	Collar	20 11 2
70-8621	Cap - Fuel Tank	30 12 1	83-7800	Sleeve	20 40 1
70-8640	Cap - Hydraulic Reservoir	9 7 1	83-7810	Spacer	20 35 2
70-9840	Shoe - Brake	13 16 4	83-7820	Shaft - Drive	20 2 1
70-9850	Clip - Retaining	13 35 2	83-7830	Retainer - Clutch	20 15 1
70-9860	Pin - Pivot Brake	13 25 2	83-7900	Belt Tensioner Assembly	27 11 2
70-9870	Plate - Brake	13 27 2	83-7900	Belt Tensioner Assembly	26 24 2
70-9880	Spring - Extension	13 17 4	83-7910	Rod	28 8 1
71-1370	Spring - Compression	24 35 1	83-7930	Yoke	28 3 1
71-1380	Pin - Spring	24 34 1	83-7970	Fitting - Hydraulic Bulkhead	8 39 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-7980	Bracket - Radiator Rear	8 12 1	83-9480	Tube - Hydraulic	16 8 1
83-8040	Cover - Left	8 8 1	83-9550	Decal - Warning	2 11 1
83-8070	Bracket - Radiator Bottom	8 18 1	83-9600	Hose - Hydraulic	10 7 2
83-8080	Key - Square	20 38 1	83-9600	Hose - Hydraulic	16 13 2
83-8110	Panel - Left	2 45 1	83-9610	Hose - Hydraulic	22 12 1
83-8120	Panel - Right Rear	2 4 1	83-9620	Hose - Hydraulic	24 42 1
83-8150	Screen - Radiator	8 17 1	83-9640	Hose - Hydraulic	22 14 1
83-8180	Decal - Instrument Panel	5 2 1	83-9640	Hose - Hydraulic	10 25 1
83-8190	Panel - Control	2 5 1	83-9650	Hose - Hydraulic	10 1 1
83-8190	Panel - Instrument	5 1 1	83-9650	Hose - Hydraulic	9 21 1
83-8210	Panel - Front Left	8 22 1	83-9651	Hose - Hydraulic	9 14 1
83-8220	Bracket - Muffler	18 51 1	83-9660	Clevis	10 23 1
83-8230	Panel - Right Front	2 2 1	83-9680	Screw - Cap Hex. Hd.	20 27 1
83-8270	Pedal - Traction	12 12 1	83-9690	Spring - Compression	20 26 1
83-8280	Throttle Assembly	5 30 1	83-9700	Fender - L.H.	1 15 1
83-8320	Mount - Pump	10 12 1	83-9710	Footrest - L.H.	1 17 1
83-8400	Pulley - Idler	20 20 1	83-9720	Fender - R.H.	1 1 1
83-8410	Pulley - Engine	18 48 1	83-9730	Step - Foot	2 36 1
83-8420	Pulley - Clutch	20 36 1	83-9740	Footrest - R.H.	1 4 1
83-8470	Bracket - Engine Mount	19 56 2	83-9760	Bracket - Cylinder Support	24 1 1
83-8490	Belt - Drive	20 37 1	83-9800	Shield - Grass Front L.H.	1 20 1
83-8500	Muffler	18 52 1	83-9810	Bushing - Flange	20 24 1
83-8510	Bracket - Fender L.H.	1 22 1	83-9840	Pad - Footrest L.H.	1 18 1
83-8540	Belt - Pump Drive	10 21 1	83-9880	Bracket - Fan Spindle	18 47 1
83-8550	Hose - Air Cleaner	2 49 1	83-9910	Gasket - Muffler	19 58 1
83-8550	Hose - Air Intake	18 13 1	83-9920	Bracket - Reservoir	9 13 1
83-8590	Cable - Lift	24 19 1	83-9970	Latch - Hood	1 12 1
83-8620	Bracket - Idler	20 18 1	84-1650	Decal - Brake	1 19 1
83-8630	Yoke - Belt Tension	20 22 1	84-1990	Rod - Adjusting	13 32 2
83-8720	Tank - Fuel	30 13 1	84-2000	Bracket - Brake	13 29 2
83-8760	Rod - Control	12 20 1	84-7770	Field & Rotor Assembly	21 1 1
83-8770	Lever - Pump	12 23 1	84-7780	Armature Assembly	21 2 1
83-8850	Grille - Front	1 29 1	84-8440	Bushing - Flange	24 11 2
83-8860	Shield - Grass Front R.H.	1 30 1	85-4870	Support - Hinge	1 26 1
83-8880	Panel - Skirt	2 12 1	85-4890	Hinge - Hood	1 31 1
83-8890	Decal - Reelmaster 216-D	2 19 2	85-4910	Air Cleaner (Complete)	4 * 1
83-8900	Decal - Service Information	2 50 1	85-4910	Air Cleaner Assembly	2 47 1
83-8920	Harness - Wire	6 1 1	85-4920	Hydraulic Pump Assembly	11 8 1
83-9000	Battery	30 6 1	85-4920	Hydraulic Pump Assembly	10 30 1
83-9020	Belt - V	18 38 1	85-4960	Pulley	10 16 1
83-9030	Foam - Top	8 36 1	85-4980	Switch Assembly	5 24 1
83-9050	Hose - Radiator	8 34 1	85-4990	Hose - Hydraulic	22 20 1
83-9060	Hose - Radiator	8 28 1	85-5000	Plate - Throttle	5 36 1
83-9070	Hose - Coolant	18 11 1	85-5010	Bracket - Right Front	3 54 1
83-9070	Hose - Radiator	8 31 1	85-5140	Foam - Hood	3 56 2
83-9080	Connector - Bleed	8 30 1	85-5160	Lever - Lift Valve	22 2 1
83-9130	Keeper - Cable	24 27 1	85-5170	Sleeve	8 41 1
83-9140	Clutch Assembly	20 39 1	85-5180	Trim	2 51 2
83-9150	Decal - Starting Fluid	2 10 1	85-5230	Bracket - Seat Pivot	3 62 2
83-9170	Right Channel Assembly	2 44 1	85-5310	Hose - Hydraulic	22 13 1
83-9210	Cable - Battery Neg.	30 8 1	85-5310	Hose - Hydraulic	24 41 1
83-9210	Cable - Ground	18 31 1	85-5330	Plate - Seat Mounting	3 64 1
83-9220	Cable - Battery Pos.	30 7 1	85-5340	Tube - Seat Pivot	2 7 2
83-9240	Hold-Down - Battery	30 21 1	85-6540	Stud - Drive	13 26 8
83-9250	Lever - Brake	13 36 2	88-6720	Bracket - Radiator Front	8 33 1
83-9270	Pivot - Brake L.H.	13 40 1	88-6730	Bracket - Screen Front	8 44 1
83-9310	Pivot - Brake R.H.	13 * 1	92-1177	Hose - Hydraulic	22 8 1
83-9330	Shaft - Brake	13 41 1	92-1177	Hose - Hydraulic	8 27 1
83-9340	Shield - Grass	13 13 2	92-1178	Hose - Hydraulic	10 10 1
83-9350	Rod - Parking Brake	13 1 1	92-1178	Hose - Hydraulic	9 27 1
83-9440	Hydraulic Tube Assembly	16 2 1	92-1583	Hose - Hydraulic	8 24 1
83-9450	Tube - Hydraulic	16 10 1	92-1583	Hose - Hydraulic	10 28 1
83-9470	Hydraulic Tube Assembly	16 1 1	92-1812	Shaft - Lift Pivot	26 25 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-642

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-1812	Shaft - Lift Pivot	27 31 1	2411-53	End - Rod	12 22 1
92-1815	Rod - Pivot	26 13 2	2412-34	Clamp - Hose	10 2 1
92-1815	Rod - Pivot	27 26 1	2412-34	Clamp - Hose	18 10 1
92-1818	Arm - Tension	27 7 1	2412-34	Clamp - Hose	8 29 5
92-1818	Arm - Tension	26 29 2	2412-36	Clamp - Hose	30 10 2
92-1822	Shackle	26 26 2	2412-36	Clamp - Hose	9 26 1
92-1822	Shackle	27 34 1	2412-39	Clamp - R	2 17 3
92-2367	Shroud - Fan Bottom	8 32 1	2412-39	Clamp - R	18 35 2
92-2368	Knob - Clamp	8 46 2	2412-41	Clamp - R	8 15 1
92-2373	Frame Assembly	7 12 1	2412-74	Clamp - R	8 3 1
92-2404	Lift Arm Assembly, L.H.	26 8 1	2412-92	Clamp - Hose	18 12 1
92-2405	Lift Arm Assembly, R.H.	26 * 1	2412-92	Clamp - Hose	2 48 1
217-60	Rim	13 21 2	2412-93	Clamp - R	18 15 1
218-461	Nut - Hex.	2 33 2	2412-108	Clamp - Hose	30 4 4
218-469	Fuse - 15 Amp.	5 10 2	2412-108	Clamp - Hose	8 10 1
218-489	Fuse Holder Assembly	5 9 2	2412-108	Clamp - Hose	18 17 2
218-500	Nut - Hex.	5 22 2	2412-133	Clamp - R	2 16 2
218-562	Lens - Light	5 47 1	251-8	Bearing - Ball	11 35 1
218-596	Tab	12 37 2	251-77	Collar - Locking	20 9 2
219-17	Bulb - Light	5 6 4	251-259	Bearing - Ball	12 31 1
219-18	Bulb - Light	5 46 1	251-321	Bearing - Wheel	29 9 2
231-122	Tire	29 13 1	251-337	Bearing - Ball	20 8 2
231-127	Tire	13 20 2	252-82	Bearing - Needle	11 9 2
232-27	Valve - Stem	13 24 2	256-1	Bushing - Sleeve	24 23 3
232-47	Valve - Stem	29 12 1	256-2	Bushing - Sleeve	24 44 1
233-37	Knob	22 1 1	256-27	Bushing - Sleeve	7 19 2
237-7	Seal - O-Ring	2 31 1	256-115	Washer - Thrust	26 12 2
237-21	Seal - O-Ring	22 18 2	256-115	Washer - Thrust	27 25 1
237-21	Seal - O-Ring	14 47 3	256-117	Bushing - Flange	7 8 4
237-22	O-Ring	11 2 1	256-173	Bushing - Sleeve	28 11 1
237-22	Seal - O-Ring	22 7 4	256-245	Bushing - Flange	7 9 2
237-22	Seal - O-Ring	24 40 2	256-247	Bushing - Flange	7 13 2
237-30	Seal - O-Ring	16 3 4	256-287	Bushing - Flange	7 14 2
237-30	Seal - O-Ring	10 6 5	256-320	Bushing	1 32 2
237-30	Seal - O-Ring	13 7 2	256-321	Bushing - Sleeve	3 59 4
237-30	Seal - O-Ring	2 26 1	2710-16	Connecting Link Assembly	22 3 1
237-30	Seal - O-Ring	8 38 2	281-1	Plug - Pipe	8 37 2
237-37	Bumper - Rubber	2 6 2	281-7	Plug - Pipe	8 1 1
237-42	Seal - O-Ring	23 2 2	282-2	Clevis	13 34 2
237-42	Seal - O-Ring	22 5 1	282-4	Clevis	27 5 1
237-42	Seal - O-Ring	10 27 2	282-4	Clevis	24 31 4
237-42	Seal - O-Ring	24 38 2	283-1	Pin - Clevis	27 20 1
237-65	Seal - O-Ring	16 11 2	283-1	Pin - Clevis	13 37 2
237-65	Seal - O-Ring	13 44 2	283-2	Pin - Clevis	10 24 1
237-71	Seal - O-Ring	2 42 1	283-6	Pin - Clevis	27 6 1
237-78	Seal - O-Ring	22 10 2	283-6	Pin - Clevis	24 14 4
237-78	Seal - O-Ring	16 16 2	283-40	Pin - Clevis	26 3 2
237-78	Seal - O-Ring	14 46 2	283-40	Pin - Clevis	27 14 2
237-79	Seal - O-Ring	10 4 4	283-42	Pin - Clevis	24 9 1
237-79	Seal - O-Ring	9 18 1	283-55	Pin - Clevis	28 5 1
237-80	Seal - O-Ring	13 9 4	283-62	Pin - Clevis	18 19 1
237-81	Seal - O-Ring	9 3 4	283-75	Pin - Clevis	26 20 4
237-86	O-Ring	11 15 2	283-75	Pin - Clevis	27 32 2
237-95	O-Ring	11 27 1	283-78	Pin - Clevis	24 36 1
240-11	Grommet	9 9 3	285-17	Plug - Pipe	11 1 6
240-11	Grommet	30 16 3	302-5	Fitting - Grease	29 3 2
240-13	Bumper	20 16 2	302-5	Fitting - Grease	28 14 1
241-129	Rim	29 11 1	302-5	Fitting - Grease	7 24 3
241-130	Spacer - Bearing	29 10 1	302-5	Fitting - Grease	7 29 1
242-50	Nut - Lug	13 22 8	302-5	Fitting - Grease	20 33 2
2410-18	Plug	31 2 1	302-60	Fitting - Grease	26 16 2
2410-73	Retainer - Teather	9 6 1	302-60	Fitting - Grease	27 30 1
2411-52	End - Rod	12 17 1	321-5	Screw - Cap Hex. Hd.	13 15 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-6	Screw - Cap Hex. Hd.	12 10 2	3234-5	Screw - Hex. Washer Hd.	1 2 14
321-8	Screw - Cap Hex. Hd.	2 52 2	3234-5	Screw - Hex. Washer Hd.	13 4 2
321-11	Screw - Cap Hex. Hd.	3 61 2	3234-5	Screw - Hex. Washer Hd.	8 19 2
321-12	Screw - Cap Hex. Hd.	30 2 1	3234-5	Screw - Hex. Washer Hd.	18 32 1
321-13	Screw - Cap Hex. Hd.	10 18 3	3234-11	Screw - Hex. Flange Hd.	2 40 4
321-14	Screw - Cap Hex. Hd.	18 40 4	3234-11	Screw - Hex. Washer Hd.	24 29 1
321-23	Screw - Cap Hex. Hd.	22 16 2	3234-17	Screw - Hex. Washer Hd.	8 21 4
322-4	Screw - Cap Hex. Hd.	26 10 2	3234-24	Screw - Hex. Flange Hd.	18 26 4
322-4	Screw - Cap Hex. Hd.	27 23 1	3234-25	Screw - Hex. Washer Hd.	24 17 5
322-4	Screw - Cap Hex. Hd.	11 24 4	3234-28	Screw - Hex. Washer Hd.	8 13 8
322-7	Screw - Cap Hex. Hd.	18 37 2	3234-28	Screw - Hex. Washer Hd.	18 53 1
322-9	Screw - Cap Hex. Hd.	16 5 1	3234-32	Screw - Cap Hex. Hd.	20 5 4
322-9	Screw - Cap Hex. Hd.	12 18 2	3234-32	Screw - Cap Hex. Hd.	27 28 1
322-12	Screw - Cap Hex. Hd.	7 26 1	3234-32	Screw - Hex. Flange Hd.	26 14 2
322-17	Screw - Cap Hex. Hd.	13 2 1	3234-36	Screw - Hex. Flange Hd.	2 15 3
322-17	Screw - Cap Hex. Hd.	12 8 1	3242-4	Screw - Square Hd. Set	20 3 6
322-17	Screw - Cap Hex. Hd.	20 31 9	3245-35	Screw - Set	20 10 4
322-26	Screw - Cap Hex. Hd.	27 36 1	3249-11	Screw - Round Hd.	12 27 2
323-5	Screw - Cap Hex. Hd.	9 11 3	3250-35	Screw - Pan Hd.	24 6 2
323-5	Screw - Cap Hex. Hd.	30 18 3	3253-2	Washer - Lock	5 15 5
323-7	Screw - Cap Hex. Hd.	27 8 1	3253-3	Washer - Lock	13 14 8
323-7	Screw - Cap Hex. Hd.	26 28 2	3253-3	Washer - Lock	10 19 3
323-11	Screw - Cap Hex. Hd.	11 46 4	3253-4	Washer - Lock	26 11 2
323-13	Screw - Cap Hex. Hd.	24 46 1	3253-4	Washer - Lock	27 22 1
323-15	Screw - Cap Hex. Hd.	20 19 1	3253-4	Washer - Lock	1 24 4
323-17	Screw - Cap Hex. Hd.	24 20 2	3253-4	Washer - Lock	27 37 1
325-6	Screw - Cap Hex. Hd.	29 1 1	3254-9	Washer - ITLW	12 2 2
325-7	Screw - Cap Hex. Hd.	10 13 2	3254-9	Washer - Lock Internal	24 5 2
325-11	Screw - Cap Hex. Hd.	13 28 8	3254-20	Washer - Lock	5 23 1
325-18	Screw - Cap Hex. Hd.	10 15 1	3255-2	Washer - Lock	29 20 1
3210-7	Screw - Cap Hex. Hd.	12 30 1	3255-7	Washer - ETLW	12 26 3
3212-34	Clamp - Hose	9 16 3	3255-8	Washer - Lock E.T.L.W.	18 30 1
3217-6	Nut - Hex.	1 23 4	3256-3	Washer - Flat	16 6 1
3217-16	Nut - Lock	12 3 2	3256-6	Washer - Flat	26 15 2
3218-3	Nut - Jam	7 3 2	3256-6	Washer - Flat	27 27 1
3218-6	Nut - Jam	28 9 1	3256-14	Washer - Flat	5 16 2
3218-17	Nut - Jam	20 12 1	3256-16	Washer - Flat	13 12 8
3219-14	Nut - Hex.	32 3 1	3256-22	Washer - Flat	8 6 2
3219-14	Nut - Hex.	5 14 6	3256-22	Washer - Flat	22 15 2
3220-2	Nut - Jam	12 19 2	3256-22	Washer - Flat	2 53 2
3220-2	Nut - Jam	13 33 2	3256-23	Washer	14 49 1
3220-5	Nut - Jam	7 6 1	3256-23	Washer - Flat	18 9 23
3220-12	Nut - Jam	29 19 1	3256-23	Washer - Flat	24 16 1
3220-20	Nut - Jam	12 21 1	3256-23	Washer - Flat	1 25 4
3229-1	Bolt - Carriage	26 1 2	3256-23	Washer - Flat	20 30 15
3229-1	Screw - Carriage	1 7 2	3256-23	Washer - Flat	8 43 2
3229-22	Bolt - Carriage	3 63 2	3256-24	Washer - Flat	20 25 2
3230-1	Screw - Carriage	30 19 2	3256-24	Washer - Flat	24 25 3
3230-1	Screw - Carriage	18 33 1	3256-24	Washer - Flat	18 27 16
3230-22	Screw - Carriage	18 6 1	3256-24	Washer - Flat	12 34 1
3230-23	Screw - Carriage	9 23 6	3256-26	Washer - Flat	7 10 2
3230-23	Screw - Carriage	1 27 6	3256-28	Washer - Flat	29 16 1
3230-27	Screw - Carriage	1 8 1	3256-45	Washer - Flat	27 10 4
3231-22	Bolt - Carriage	8 23 6	3256-45	Washer - Flat	26 19 4
3231-26	Screw - Carriage	18 7 1	3256-54	Washer - Flat	28 4 1
3231-31	Bolt - Carriage	20 21 1	3256-57	Washer - Flat	27 38 1
3234-4	Screw - Cap Hex. Hd.	8 7 2	3257-15	Key - Square	13 10 2
3234-4	Screw - Hex. Flange Hd.	2 13 3	3257-32	Key - Woodruff	11 7 1
3234-4	Screw - Hex. Flange Hd.	20 29 2	3257-32	Key - Woodruff	10 17 1
3234-4	Screw - Hex. Washer Hd.	5 8 3	3258-19	Screw - Round Hd.	4 2 2
3234-4	Screw - Hex. Washer Hd.	24 10 1	3272-4	Pin - Cotter	24 13 1
3234-4	Screw - Hex. Washer Hd.	9 22 2	3272-6	Pin - Cotter	7 1 1
3234-5	Screw - Hex. Flange Hd.	2 1 21	3272-6	Pin - Cotter	10 14 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-642

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3272-6	Pin - Cotter	29 14 1	32121-91	Pin - Coiled Spring	11 38 3
3272-6	Pin - Cotter	27 19 1	32122-2	Screw - Round Hd.	32 2 1
3272-6	Pin - Cotter	13 31 5	32128-14	Nut - Flange Lock	1 13 2
3272-6	Pin - Cotter	24 43 1	32128-20	Nut - Flange Lock	2 46 4
3272-9	Pin - Cotter	18 23 1	32128-20	Nut - Hex.	1 9 2
3272-10	Pin - Cotter	26 22 4	32128-20	Nut - Lock	14 48 2
3272-10	Pin - Cotter	27 33 2	32128-33	Nut - Flange Lock	1 3 2
3272-11	Pin - Cotter	27 4 1	32128-33	Nut - Flange Lock	26 4 2
3272-11	Pin - Cotter	24 32 5	32128-33	Nut - Flange Lock	2 9 2
3272-13	Pin - Cotter	27 13 2	32128-33	Nut - Flange Lock	20 14 2
3272-13	Pin - Cotter	26 27 2	32128-33	Nut - Flange Lock	5 31 3
3273-18	Screw - Hex. Socket Hd.	20 34 4	32128-33	Nut - Flange Lock	2 34 5
3274-90	Screw - Hex. Socket Hd.	5 13 2	32128-43	Nut - Flange Lock	18 1 5
3290-379	Tie - Cable	20 41 1	32128-43	Nut - Flange Lock	24 2 7
3290-379	Tie - Cable	19 59 2	32128-43	Nut - Flange Lock	8 16 6
3290-432	Screw - Hex. Hd.	18 20 1	32128-43	Nut - Flange Lock	20 23 2
3290-467	Pin - Cotter Hair	1 28 2	32128-43	Nut - Flange Lock	2 37 4
3296-2	Nut - Lock	5 44 1	32128-44	Nut - Flange Lock	18 4 5
3296-4	Nut - Lock	24 15 1	32128-44	Nut - Flange Lock	1 16 13
3296-6	Nut - Lock	10 22 1	32128-44	Nut - Flange Lock	2 18 12
3296-16	Nut - Flange Lock	22 9 2	32128-44	Nut - Flange Lock	30 20 3
3296-16	Nut - Lock	12 4 2	32128-44	Nut - Flange Lock	8 26 4
3296-23	Nut - Flange Lock	20 28 4	32128-44	Nut - Hex. Flange Hd.	9 12 6
3296-23	Nut - Lock	10 11 3	32128-44	Nut - Lock	13 3 2
3296-23	Nut - Lock	13 42 8	32136-4	Nut - Castle	7 2 1
3296-28	Nut - Lock	7 11 2	32136-4	Nut - Castle	29 15 1
3296-29	Nut - Flange Lock	7 20 1	32141-84	Screw - Cap Hex. Hd.	7 25 2
3296-29	Nut - Flange Lock	20 32 6	32144-18	Screw - Hex. Hd.	5 4 2
3296-29	Nut - Lock	16 9 1	32144-39	Screw - Pan Hd.	5 41 2
3296-29	Nut - Lock	12 32 3	32148-7	Insert - Threaded	2 3 5
3296-29	Nut - Lock	8 42 2	32148-7	Insert - Threaded	1 33 3
3296-39	Nut - Flange Lock	22 17 1	32148-8	Insert - Threaded	8 14 3
3296-39	Nut - Flange Lock	24 26 3	32148-8	Insert - Threaded	3 58 1
3296-39	Nut - Lock	27 15 1	32148-14	Insert - Threaded	7 28 1
3296-39	Nut - Lock	20 17 2	32149-9	Nut - Flange Lock	5 37 2
3296-39	Nut - Lock	26 31 2	32151-46	Ring - Retaining	11 13 2
3296-42	Nut - Lock	2 8 2	32153-1	Nut - Lock	8 45 2
3296-42	Nut - Lock	13 11 8	340-2	Fitting - Hydraulic Straight	24 47 1
3296-42	Nut - Lock	8 40 2	340-4	Fitting - Hydraulic Straight	10 8 1
3296-51	Nut - Lock	29 17 1	340-17	Fitting - Hydraulic 90°	13 43 2
3296-59	Nut - Lock	27 9 2	340-20	Fitting - Hydraulic Tee	22 21 1
3296-59	Nut - Lock	26 18 2	340-77	Fitting - Hydraulic 90°	22 6 1
3296-59	Nut - Lock	12 33 1	340-87	Fitting - Hydraulic 45°	24 39 1
32104-6	Screw - Cap Hex. Hd.	26 32 2	340-92	Fitting - Hydraulic Straight	22 11 1
32104-6	Screw - Cap Hex. Hd.	27 35 1	340-99	Fitting - Hydraulic 90°	10 26 2
32104-82	Screw - Hex. Washer Hd.	1 21 5	340-101	Fitting - Hydraulic 45°	10 5 2
32104-116	Screw - Hex. Washer Hd.	8 2 8	340-103	Fitting - Hydraulic 45°	14 45 1
32105-1	Screw - Hex. Hd.	5 42 1	340-103	Fitting - Hydraulic 90°	22 22 1
32107-11	Nut - Square	4 4 2	340-105	Fitting - Hydraulic 90°	13 8 2
32120-10	Ring - Retaining	18 45 1	340-110	Fitting - Hydraulic 90°	22 19 1
32120-11	Ring - Retaining	11 36 1	340-127	Nut - Bulkhead	8 25 2
32120-15	Ring - Retaining	11 34 1	340-140	Fitting - Hydraulic Tee	14 * 1
32121-6	Pin - Roll	12 15 1	340-162	Fitting - Hydraulic 90°	16 12 1
32121-6	Pin - Roll	2 21 1	340-163	Fitting - Hydraulic 90°	16 4 1
32121-6	Pin - Roll	13 39 2	353-987	Fitting - Hydraulic 90°	9 17 1
32121-9	Pin - Roll	28 13 1	354-77	Hydraulic Test Port Fitting	16 15 2
32121-10	Pin - Roll	7 22 1	354-79	Cap - Test Port	16 14 2
32121-15	Pin - Roll	7 16 2	354-120	Fitting - Hydraulic 90°	9 25 1
32121-23	Pin - Roll	28 1 1	354-127	Fitting - Hydraulic 45°	9 20 2
32121-24	Pin - Roll	12 24 1	354-128	Fitting - Hydraulic 90°	10 3 1
32121-34	Pin - Dowel	10 29 1			

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216-D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216-D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216-D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood & Grille Assembly	1	Cylinder Head Assembly	35
Skirt Assembly	2-3	Rocker Arm Assembly	36
Air Cleaner Assembly	4	Camshaft Assembly	37
Instrument Panel Assembly	5	Timing Cover Assembly	38
Electrical Schematic	6	Oil Pump Assembly	39
Frame Assembly	7	Fuel Injection System Assembly	40
Radiator Assembly	8	Injection Pump Assembly	41-42
Hydraulic Reservoir & Filter Assembly	9	Flywheel Housing Assembly	43
Hydraulic Pump Installation Assembly	10	Flywheel Assembly	44
Hydraulic Pump Assembly No. 85-4920	11	Starter Installation Assembly	45
Traction Control Assembly	12	Starter Assembly	46
Front Wheel Assembly	13-14	Oil Sump Assembly	47
Hydraulic Drive Motor No. 66-5291	15	Valve Cover Assembly	48
Drive Motor Plumbing Assembly	16	Oil Filter Assembly	49
Hydraulic Schematic	17	Front Drive Pulley Assembly	50
Engine Installation Assembly	18-19	Water Pump Assembly	51
Reel Drive Assembly	20	Alternator Assembly	52
Electric Clutch Assembly No. 83-9140	21	Timing Cover Plate Assembly	53
Cutting Unit Lift Valve Installation Assembly	22	Exhaust Manifold Assembly	54
Control Valve No. 43-1950	23	Low Pressure Fuel System Assembly	55
Cutting Unit Lift Assembly	24	Lift Pump Assembly	56
Hydraulic Cylinder No. 76-0020	25	Fuel Filter Assembly	57
Front Cutting Unit Lift Arm Assembly	26	Cold Start System Assembly	58
Rear Cutting Unit Lift Arm Assembly	27	Engine Lifting Tab Assembly	59
Belt Tensioner Assembly No. 83-7900	28	Throttle Stop Assembly	60
Rear Wheel Assembly	29	Recorder Assembly	61
Fuel System Assembly	30	Electrical Component Assembly	62
Special Tools	31-32	International Decal Cross Reference	63-65
Cylinder Block Assembly	33	TORO Part Number Index	66-71
Crankshaft Assembly	34		