 




MODEL NO. 03425-30001 & UP

PARTS CATALOG

REELMASTER® 216-D 3wd TRACTION UNIT

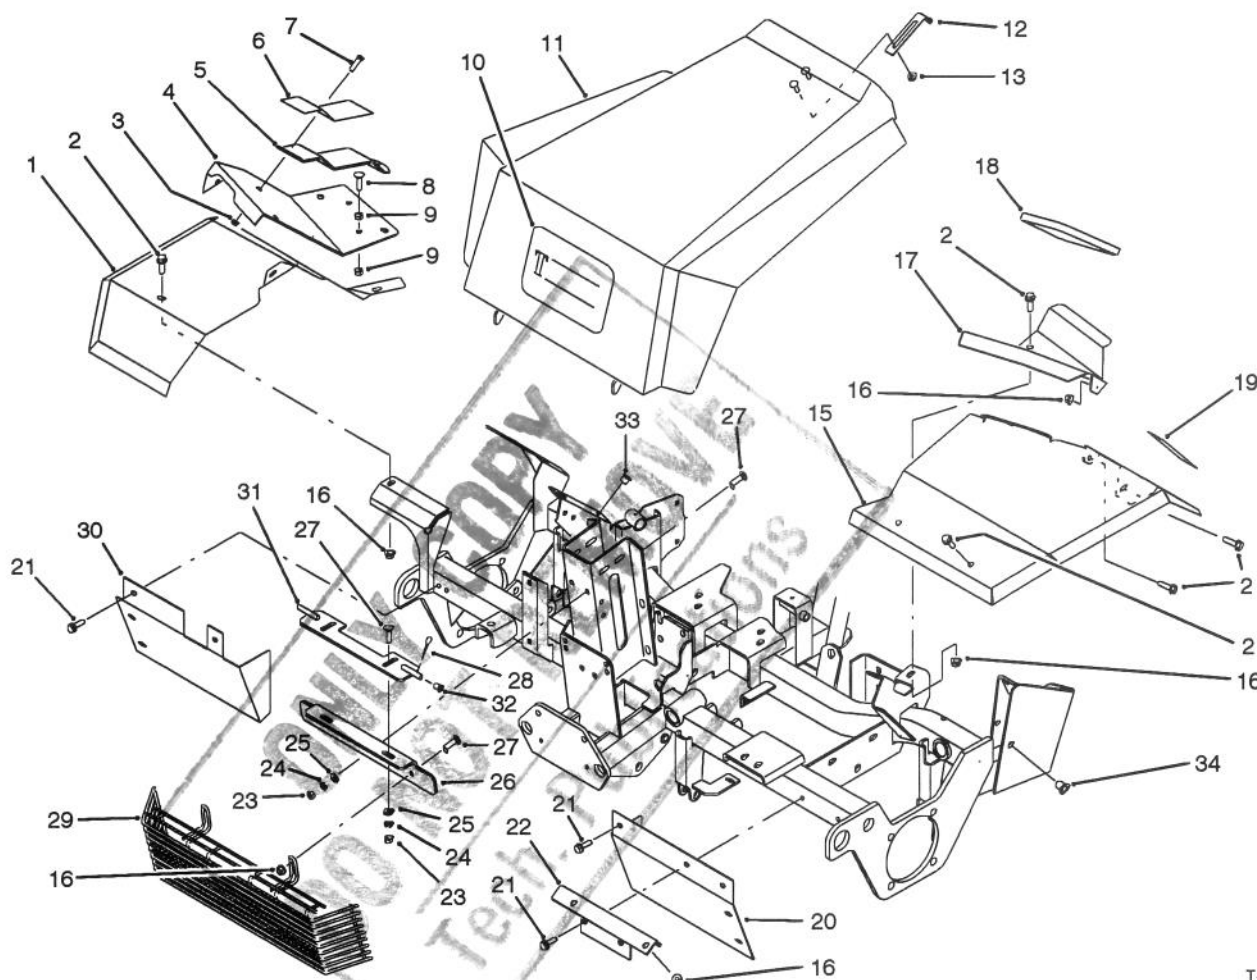


T-1347

HOOD & GRILLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9720	Fender - R.H.	1	19	84-1650	Decal - Brake	1
2	3234-5	Screw - Hex. Washer Hd.	14	20	83-9800	Shield - Grass Front L.H.	1
3	32128-33	Nut - Flange Lock	2	21	32104-82	Screw - Hex. Washer Hd.	5
4	83-9740	Footrest - R.H.	1	22	83-8510	Bracket - Fender L.H.	1
5	76-2200	Footrest - Traction	1	23	3217-6	Nut - Hex.	4
6	76-2260	Pad - Footrest Traction	1	24	3253-4	Washer - Lock	4
7	3229-1	Screw - Carriage	2	25	3256-23	Washer - Flat	4
8	3230-27	Screw - Carriage	1	26	85-4870	Support - Hinge	1
9	32128-20	Nut - Hex.	2	27	3230-23	Screw - Carriage	6
10	62-7400	Decal - TORO	1	28	3290-467	Pin - Cotter Hair	2
11	14-5759	Hood	1	29	83-8850	Grille - Front	1
12	83-9970	Latch - Hood	1	30	83-8860	Shield - Grass Front R.H.	1
13	32128-14	Nut - Flange Lock	2	31	85-4890	Hinge - Hood	1
15	83-9700	Fender - L.H.	1	32	256-320	Bushing	2
16	32128-44	Nut - Flange Lock	13	33	32148-7	Insert - Threaded	3
17	83-9710	Footrest - L.H.	1	34	32138-8	Insert - Threaded	1
18	83-9840	Pad - Footrest L.H.	1				

†For different language versions of this part, see International Decal Cross Reference.

 TPS

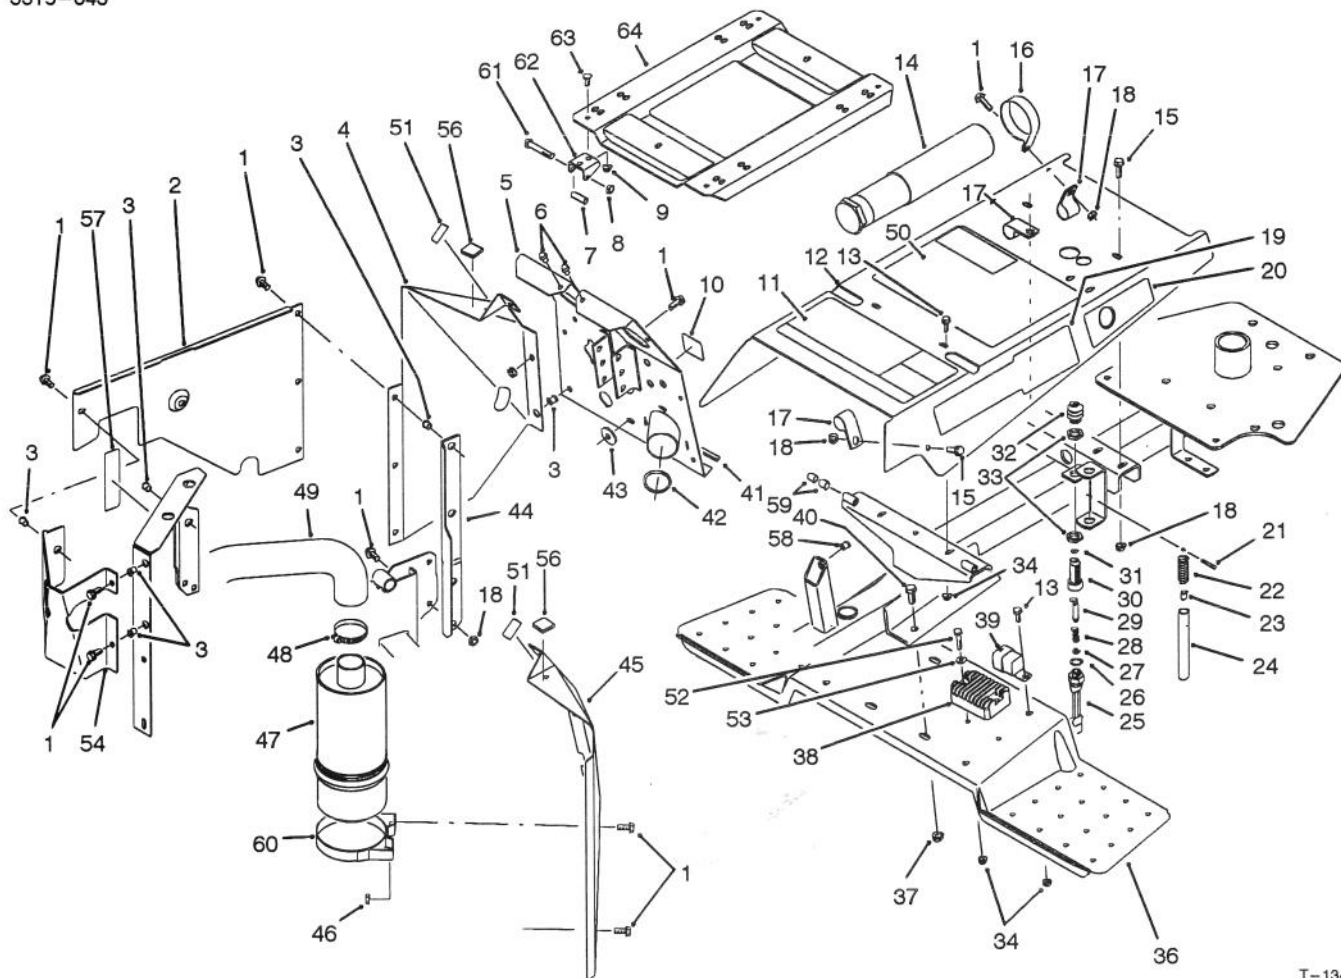


T-1348

SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-5	Screw - Hex. Flange Hd.	24	27	43-8610	Guide - Spring	1
2	83-8230	Panel - Right Front	1	28	43-8600	Spring - Compression	1
3	32148-7	Insert - Threaded	8	29	43-8860	Plunger - Switch	1
4	83-8120	Panel - Right Rear	1	30	43-8620	Guide - Pin	1
5	83-8190	Panel - Control	1	31	237-7	Seal - O-Ring	1
6	237-37	Bumper - Rubber	2	32	43-8870	Boot - Switch	1
7	85-5340	Tube - Seat Pivot	2	33	218-461	Nut - Hex.	2
8	3296-42	Nut - Lock	2	34	32128-33	Nut - Flange Lock	5
9	32128-33	Nut - Flange Lock	2	36	83-9730	Step - Foot	1
†10	83-9150	Decal - Starting Fluid	1	37	32128-43	Nut - Flange Lock	4
†11	83-9550	Decal - Warning	1	†38	185516060	Regulator - Voltage	1
12	83-8880	Panel - Skirt	1	39	63-7590	Relay	1
13	3234-4	Screw - Hex. Flange Hd.	3	40	3234-11	Screw - Hex. Flange Hd.	4
14	74-0720	Tube - Manual	1	41	76-6471	Trim - Control Panel Bottom	1
15	3234-36	Screw - Hex. Flange Hd.	3	42	237-71	Seal - O-Ring	1
16	2412-133	Clamp - R	2	43	62-7170	Spacer	1
17	2412-39	Clamp - R	3	44	83-9170	Right Channel Assembly (Incl. Ref. #3)	1
18	32128-44	Nut - Flange Lock	10	45	83-8110	Panel - Left	1
19	83-8890	Decal - Reelmaster 216-D	2	46	32128-20	Nut - Flange Lock	4
†20	80-4220	Decal - Control	1	47	85-4910	Air Cleaner Assembly	1
21	32121-6	Pin - Roll	1	48	2412-92	Clamp - Hose	1
22	37-9590	Spring - Compression	1	49	83-8550	Hose - Air Cleaner	1
23	28-6180	Pin	1	†50	83-8900	Decal - Service Information	1
24	27-9870	Pin - Seat	1	51	85-5180	Trim	2
25	72-4320	Switch - Seat	1	52	321-8	Screw - Cap Hex. Hd.	2
26	237-30	Seal - O-Ring	1				

†Obtain from your Local Perkins Dealer.

 ‡For different language versions of this part, see International Decal Cross Reference.

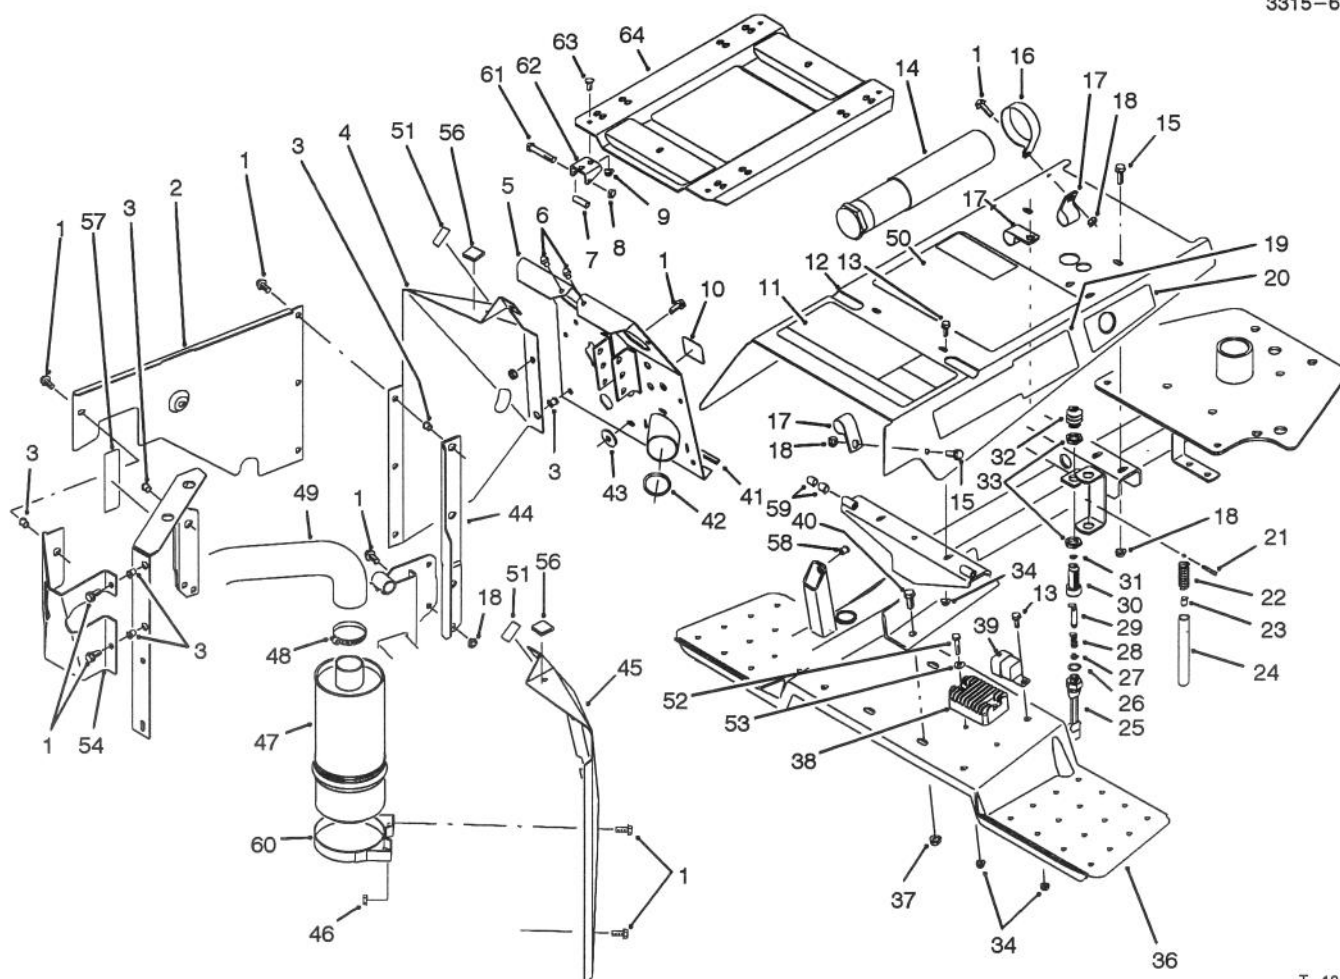


T-1348

SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
53	3256-22	Washer - Flat	2
54	85-5010	Bracket - Right Front	1
56	85-5140	Foam - Hood	2
57	67-5360	Decal - Danger	1
58	32148-8	Insert - Threaded	1
59	256-321	Bushing - Sleeve	4
60	33-1350	Clamp Assembly	2

Ref. No.	Part No.	Description	No. Used
61	321-11	Screw - Cap Hex. Hd.	2
62	85-5230	Bracket - Seat Pivot	2
63	3229-22	Bolt - Carriage	2
64	85-5330	Plate - Seat Mounting	1
*	43-9071	Seat Switch Assembly (Incl. Ref. #25-33)	1

 *Not Illustrated

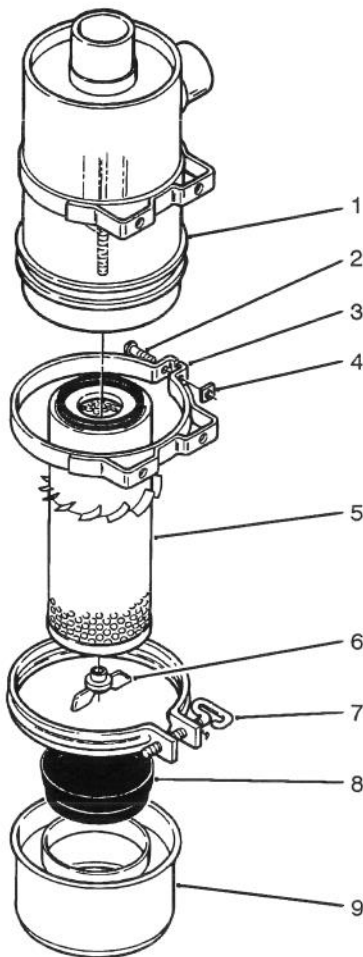


T-1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Body	1	6	33-1330	Nut Assembly	1
2	3258-19	Screw - Round Hd.	2	7	33-1340	Clamp Assembly	1
3	33-1350	Band Assembly (Incl. Ref. #2 & 4)	2	8	33-1310	Baffle	1
4	32107-11	Nut - Square	2	9	33-1320	Cup	1
5	33-1300	Element Assembly	1	*	85-4910	Air Cleaner (Complete) (Incl. Ref. #1 & 5-9)	1

 *Not Illustrated

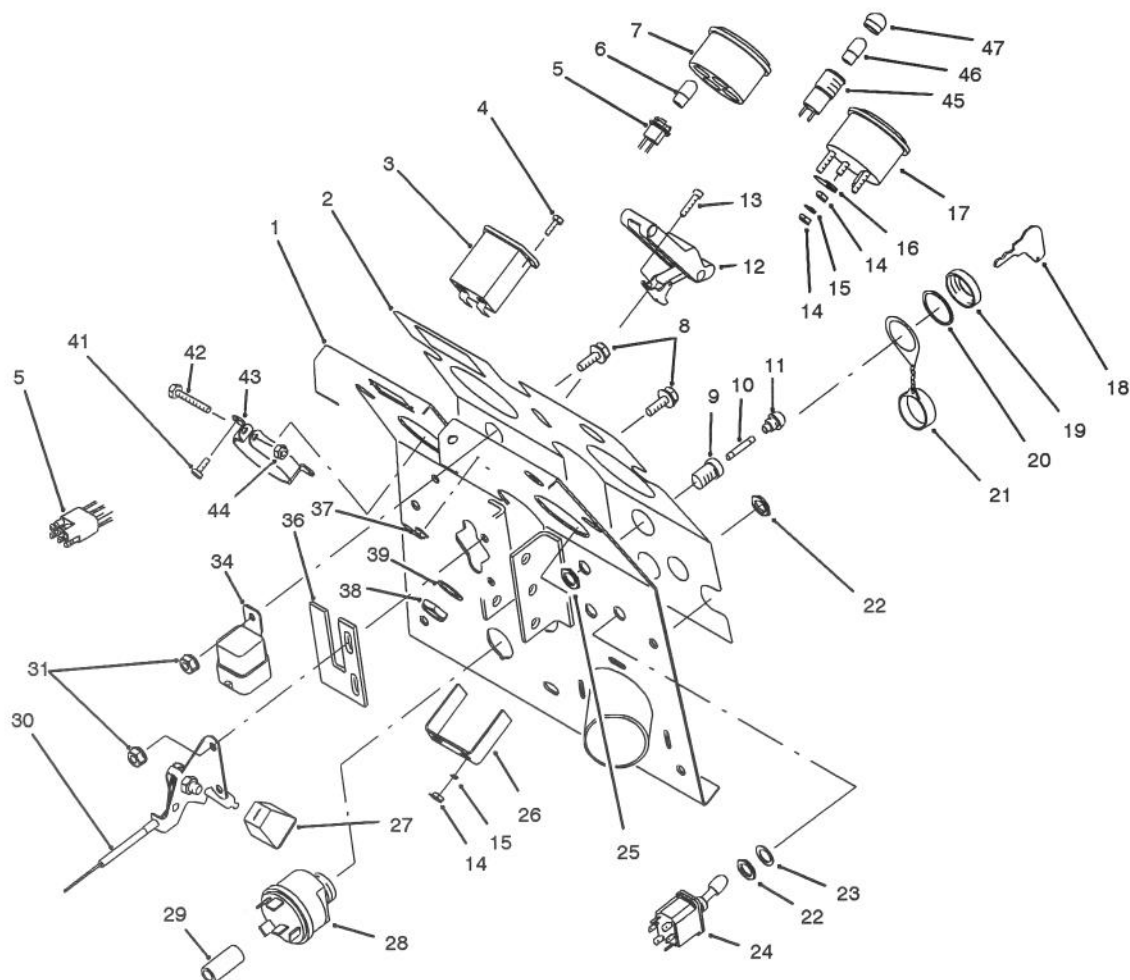


T-1350

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-8190	Panel - Instrument	1	24	85-4980	Switch Assembly	
2	83-8180	Decal - Instrument Panel	1			(Incl. Ref. #22-23)	1
3	75-6820	Hourmeter	1	25		Nut - Hex.	2
4	32144-18	Screw - Hex. Hd.	2	26		Clamp - Gauge	1
5	75-4710	Harness - Warning Light	1	27		Knob - Throttle	1
6	219-17	Bulb - Light	4	†28	385201160	Ignition Switch Assembly	
7	66-2960	Cluster - Warning	1			(Incl. Ref. #18 & 19)	1
8	3234-4	Screw - Hex. Washer Hd.	3	29	80-7345	Hose	
9	218-489	Fuse Holder Assembly		30	83-8280	Throttle Assembly	
		(Incl. Ref. #11 & 25)	2			(Incl. Ref. #27)	1
10	218-469	Fuse - 15 Amp.	2	31	32128-33	Nut - Flange Lock	3
11		Cap - Fuse Holder	2	34	63-7590	Relay	1
12	80-6980	Latch - Hood	1	36	85-5000	Plate - Throttle	1
13	3274-90	Screw - Hex. Socket Hd.	2	37	32149-9	Nut - Flange Lock	2
14	3219-14	Nut - Hex.	6	38		Nut - Hex.	1
15	3253-2	Washer - Lock	5	39		Washer - Flat	1
16	3256-14	Washer - Flat	2	41	32144-39	Screw - Pan Hd.	2
17	63-7430	Temperature Gauge Assy.		42	32105-1	Screw - Hex. Hd.	1
		(Incl. Ref. #14-16 & 26)	1	43	69-4780	Clamp - Light Cluster	1
†18	385210060	Key - Ignition	2	44	3296-2	Nut - Lock	1
†19		Nut - Retaining	1	45	44-2212	Light Assembly	
†20	390190030	Seal - Switch	1			(Incl. Ref. #38-39 & 46-47)	1
†21	385800010	Cover - Switch	1	46	219-18	Bulb - Light	1
22	218-500	Nut - Hex.	2	47	218-562	Lens - Light	1
23	3254-20	Washer - Lock	1				

 
†Obtain from your local Perkins Dealer.

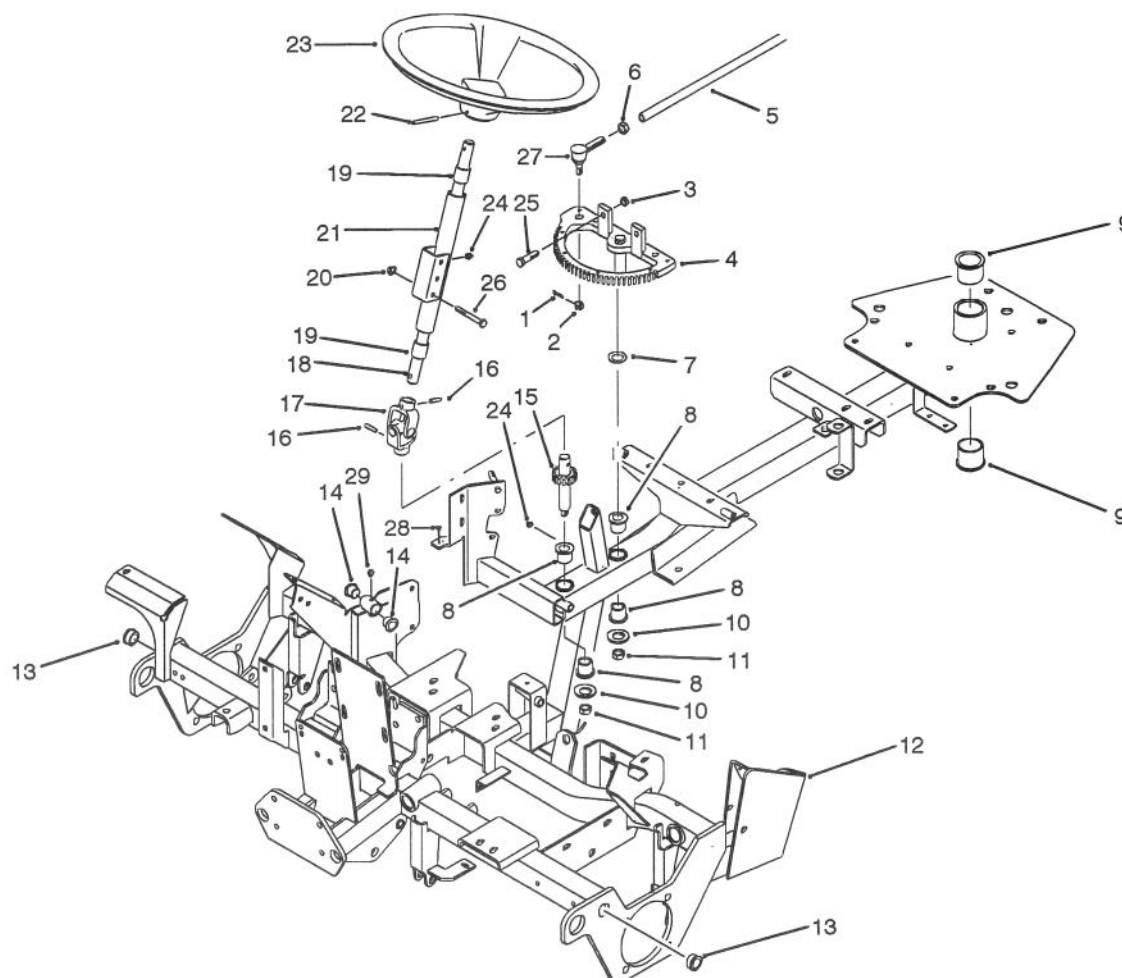

T-1351

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	1	16	32121-15	Pin - Roll	2
2	32136-4	Nut - Castle	1	17	61-3360	Joint - Universal	1
3	3218-3	Nut - Jam	2	18	61-2080	Shaft - Steering	1
4	61-2040	Rack - Steering	1	19	256-27	Bushing - Sleeve	2
5	61-2070	Rod - Steering	1	20	3296-29	Nut - Flange Lock	1
6	3220-5	Nut - Jam	1	21	61-2090	Steering Column Assembly (Incl. Ref. #19)	1
7	3-6498	Washer - Thrust	A/R	22	32121-10	Pin - Roll	1
8	256-117	Bushing - Flange	4	23	76-1420	Wheel - Steering	1
9	256-245	Bushing - Flange	2	24	302-5	Fitting - Grease	3
10	3256-26	Washer - Flat	2	25	32141-84	Screw - Cap Hex. Hd.	2
11	3296-28	Nut - Lock	2	26	322-12	Screw - Cap Hex. Hd.	1
12	92-2373	Frame Assembly (Incl. Ref. #8, 9, 13, 14 & 29)	1	27	21-0140	Rod End Assembly (Incl. Ref. #2)	1
13	256-247	Bushing - Flange	2	28	32148-14	Insert - Threaded	1
14	256-287	Bushing - Flange	2	29	302-5	Fitting - Grease	1
15	61-2010	Pinion - Steering	1				

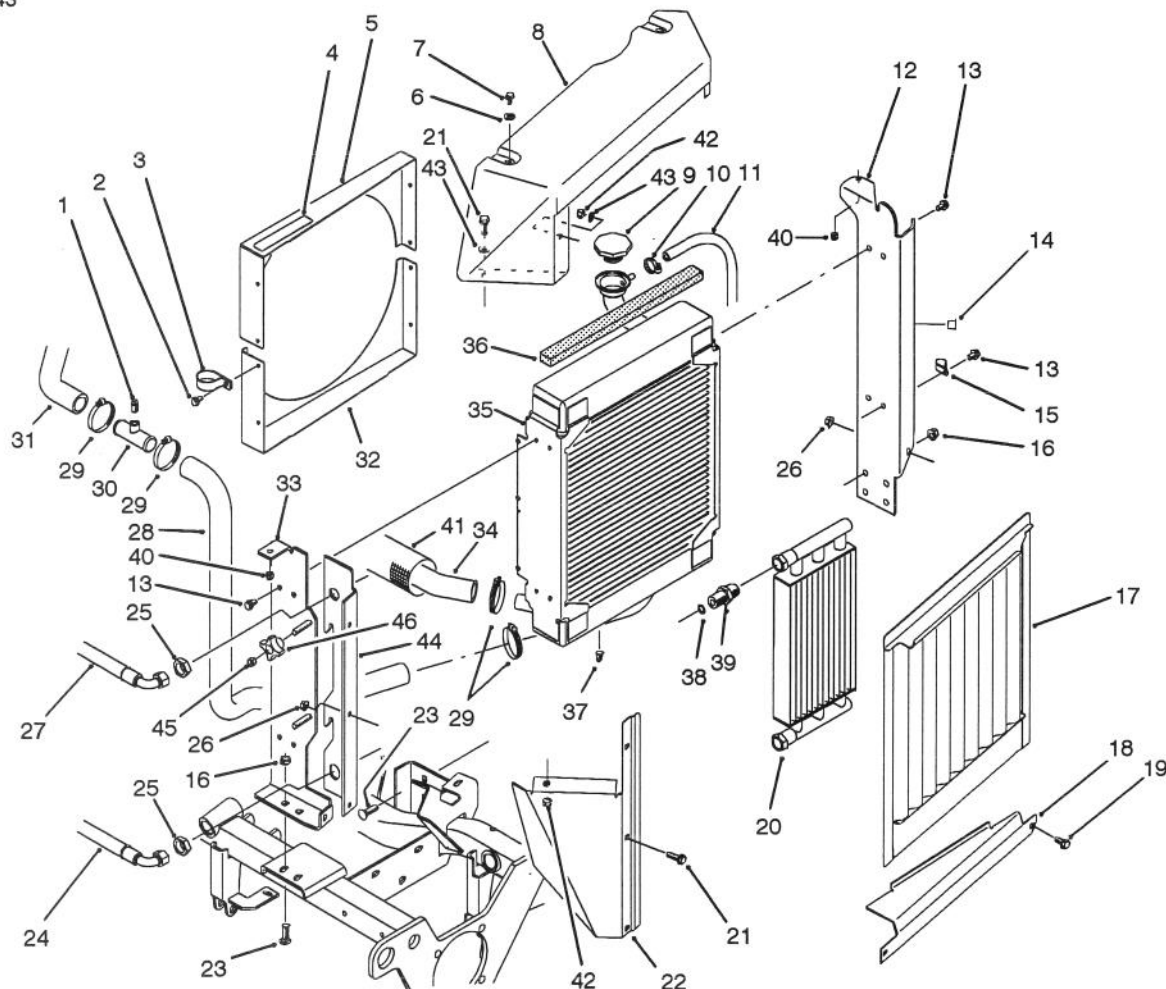 


T-1352

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281-7	Plug - Pipe	1
2	32104-116	Screw - Hex. Washer Hd.	8
3	2412-74	Clamp - R	1
‡4	77-3100	Decal - Warning	1
5	14-8539	Top Shroud Assembly (Incl. Ref. #4)	1
6	3256-22	Washer - Flat	2
7	3234-4	Screw - Cap Hex. Hd.	2
8	83-8040	Cover - Left	1
9	66-3240	Cap - Radiator	1
10	2412-108	Clamp - Hose	1
11	71-3382	Hose - Overflow	1
12	83-7980	Bracket - Radiator Rear	1
13	3234-28	Screw - Hex. Washer Hd.	8
14	32148-8	Insert - Threaded	3
15	2412-41	Clamp - R	1
16	32128-43	Nut - Flange Lock	6
17	83-8150	Screen - Radiator	1
18	83-8070	Bracket - Radiator Bottom	1
19	3234-5	Screw - Hex. Washer Hd.	2
20	24-0760	Cooler - Oil	1
21	3234-17	Screw - Hex. Washer Hd.	4
22	83-8210	Panel - Front Left	1
23	3231-22	Bolt - Carriage	6
24	92-1583	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
25	340-127	Nut - Bulkhead	2
26	32128-44	Nut - Flange Lock	4
27	92-1177	Hose - Hydraulic	1
28	83-9060	Hose - Radiator	1
29	2412-34	Clamp - Hose	5
30	83-9080	Connector - Bleed	1
31	83-9070	Hose - Radiator	1
32	92-2367	Shroud - Fan Bottom	1
33	88-6720	Bracket - Radiator Front	1
34	83-9050	Hose - Radiator	1
35	83-7550	Radiator Assembly (Incl. Ref. #37)	1
36	83-9030	Foam - Top	1
37	281-1	Plug - Pipe	2
38	237-30	Seal - O-Ring	2
39	83-7970	Fitting - Hydraulic Bulkhead (Incl. Ref. #38)	2
40	3296-42	Nut - Lock	2
41	85-5170	Sleeve	1
42	3296-29	Nut - Lock	2
43	3256-23	Washer - Flat	2
44	88-6730	Bracket - Screen Front	1
45	32153-1	Nut - Lock	2
46	92-2368	Knob - Clamp	2

 
‡For different language versions of this part, see International Decal Cross Reference.

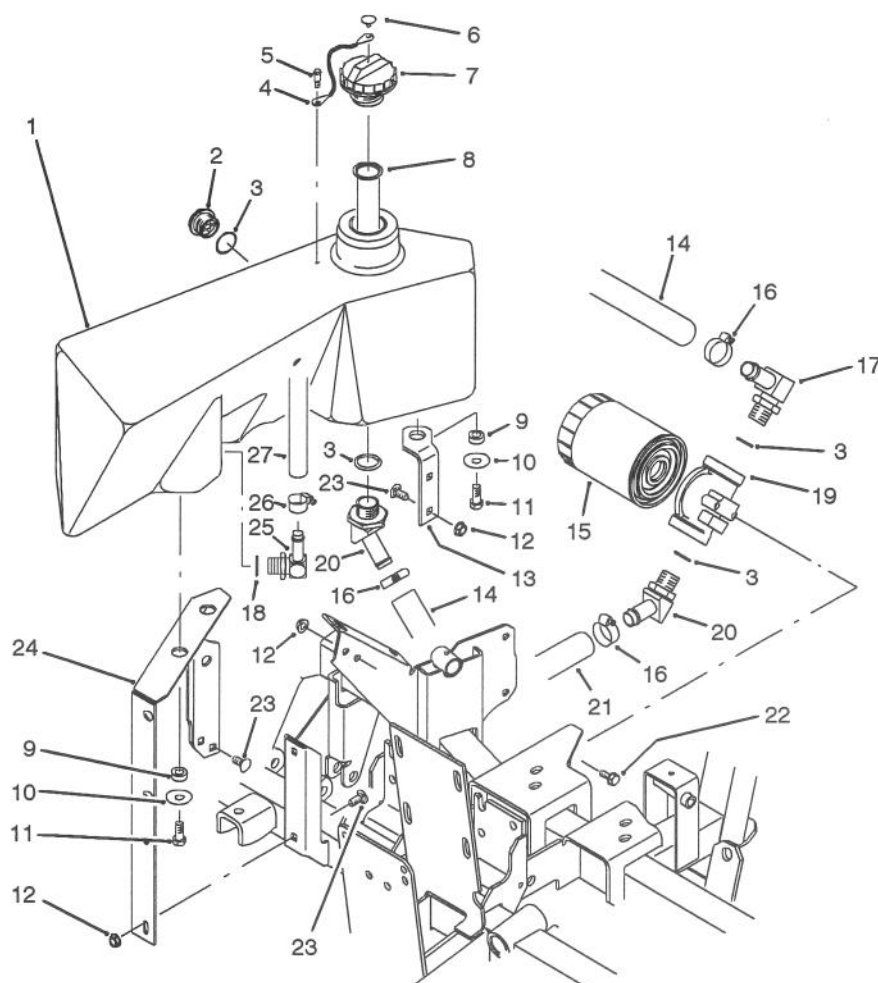

T-1353

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-7720	Reservoir - Hydraulic	1	15	54-0110	Element - Oil Filter	1
2	69-1170	Glass - Sight (Incl. Ref. #3)	1	16	3212-34	Clamp - Hose	3
3	237-81	Seal - O-Ring	4	17	353-987	Fitting - Hydraulic 90° (Incl. Ref. #3)	1
4	75-0540	Teather - Cap	1	18	237-79	Seal - O-Ring	1
5	57-5420	Screw - Shoulder	1	19	68-8990	Head - Oil Filter	1
6	2410-73	Retainer - Teather	1	20	354-127	Fitting - Hydraulic 45° (Incl. Ref. #3)	2
7	70-8640	Cap - Hydraulic Reservoir (Incl Ref. #4 & 6)	1	21	83-9650	Hose - Hydraulic	1
8	61-2790	Screen - Filler	1	22	3234-4	Screw - Hex. Washer Hd.	2
9	240-11	Grommet	3	23	3230-23	Screw - Carriage	6
10	63-8410	Washer - Flat	3	24	83-7780	Bracket - Support	1
11	323-5	Screw - Cap Hex. Hd.	3	25	354-120	Fitting - Hydraulic 90° (Incl. Ref. #18)	1
12	32128-44	Nut - Hex. Flange Hd.	6	26	2412-36	Clamp - Hose	1
13	83-9920	Bracket - Reservoir	1	27	92-1178	Hose - Hydraulic	1
14	83-9651	Hose - Hydraulic	1				

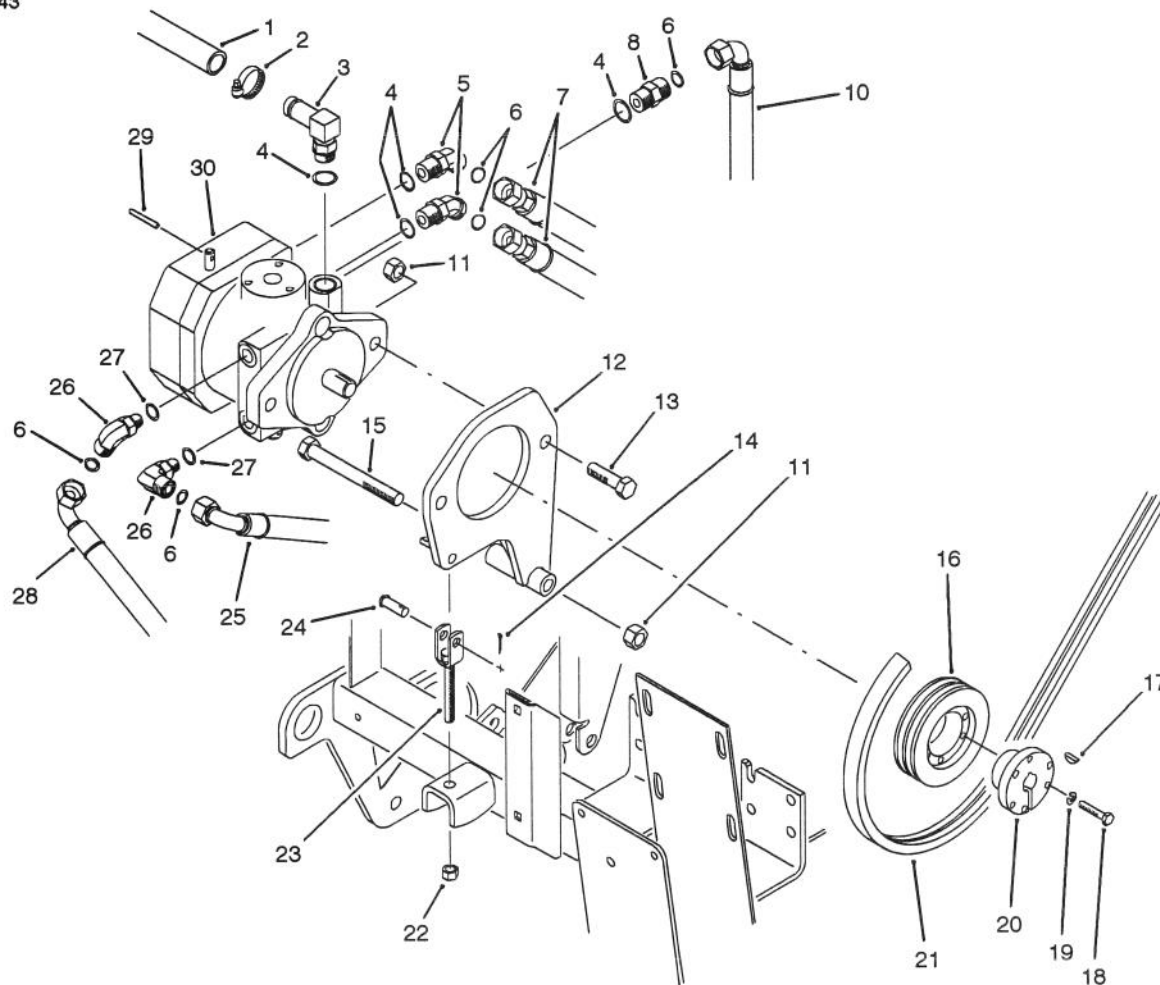 


T-1354

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9650	Hose - Hydraulic	1
2	2412-34	Clamp - Hose	1
3	354-128	Fitting - Hydraulic 90° (Incl. Ref. #4)	1
4	237-79	Seal - O-Ring	4
5	340-101	Fitting - Hydraulic 45° (Incl. Ref. #4 & 6)	2
6	237-30	Seal - O-Ring	5
7	83-9600	Hose - Hydraulic	2
8	340-4	Fitting - Hydraulic Straight (Incl. Ref. #4 & 6)	1
10	92-1178	Hose - Hydraulic	1
11	3296-23	Nut - Lock	3
12	83-8320	Mount - Pump	1
13	325-7	Screw - Cap Hex. Hd.	2
14	3272-6	Pin - Cotter	1
15	325-18	Screw - Cap Hex. Hd.	1
16	85-4960	Pulley	1

Ref. No.	Part No.	Description	No. Used
17	3257-32	Key - Woodruff	1
18	321-13	Screw - Cap Hex. Hd.	3
19	3253-3	Washer - Lock	3
20	59-2150	Taper Lock Bushing Assy. (Incl. Ref. #18 & 19)	1
21	83-8540	Belt - Pump Drive	1
22	3296-6	Nut - Lock	1
23	83-9660	Clevis	1
24	283-2	Pin - Clevis	1
25	83-9640	Hose - Hydraulic	1
26	340-99	Fitting - Hydraulic 90° (Incl. Ref. #6 & 27)	2
27	237-42	Seal - O-Ring	2
28	92-1583	Hose - Hydraulic	1
29	32121-34	Pin - Dowel	1
30	85-4920	Hydraulic Pump Assembly (Incl. Ref. #17)	1

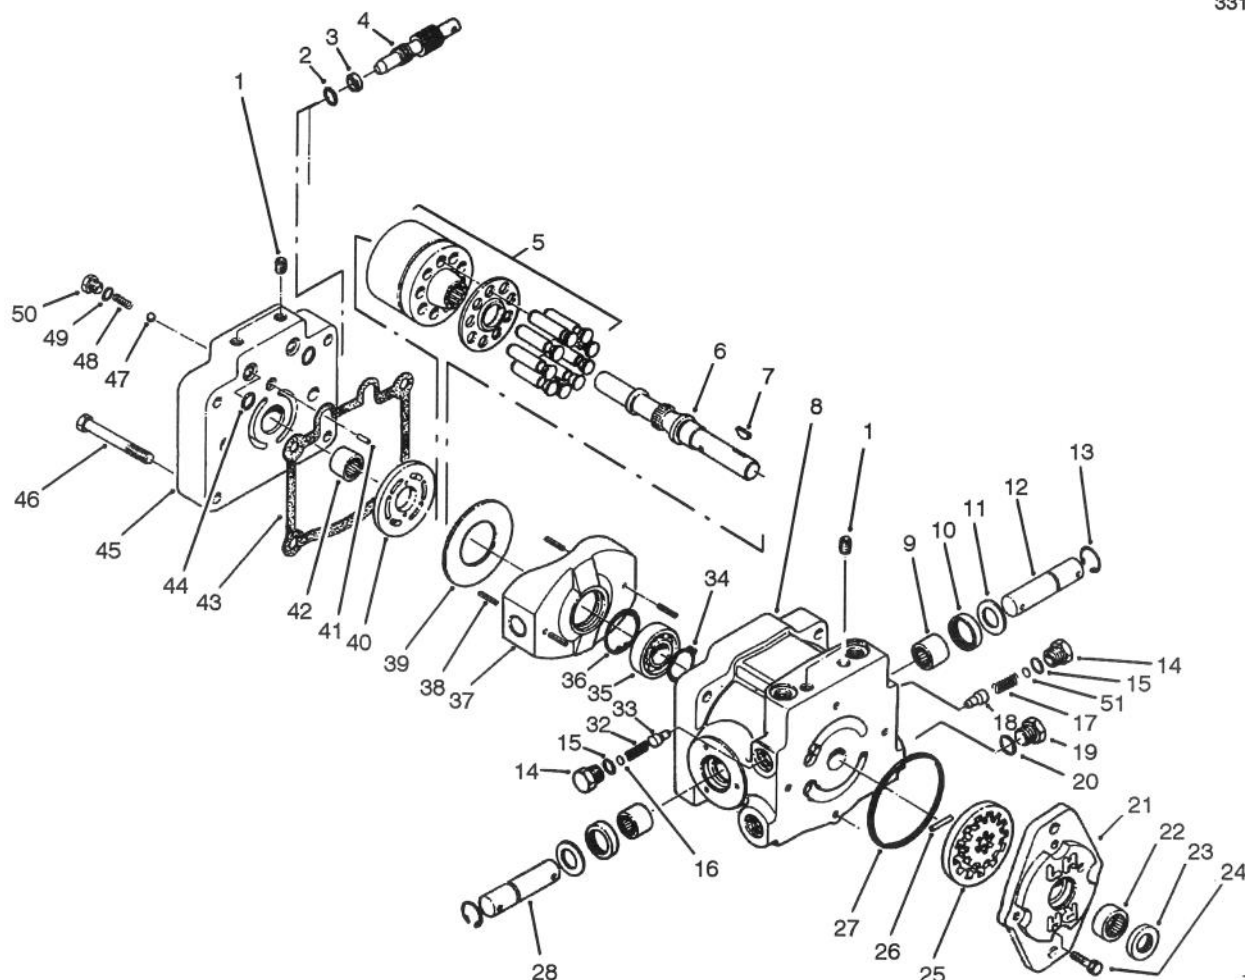 


T-0245

HYDRAULIC PUMP ASSEMBLY NO. 85-4920

Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	6
2	237-22	O-Ring	1
3	25-2630	Ring	1
4	25-2620	Valve - By-Pass	1
5	48-1800	Cylinder Block Kit	1
6	67-8020	Shaft - Pump	1
7	3257-32	Key - Woodruff	1
8	61-0080	Hydraulic Pump Assembly (Complete)	1
9	252-82	Bearing - Needle	2
10	25-3210	Seal - Lip	2
11	25-2510	Washer	2
12	25-2580	Shaft - Trunion	1
13	32151-46	Ring - Retaining	2
14	25-2460	Plug	2
15	237-86	O-Ring	2
16	25-2470	Kit - Shim Pack	2
17	25-2570	Spring - Relief Valve	1
18	25-2560	Cone - Relief Valve	1
19	67-8030	Plug Assembly (Incl. Ref. #20)	1
20	67-8040	O-Ring	1
21	25-2690	Housing - Charge Pump	1
22	67-8050	Bearing - Needle	1
23	67-8060	Seal - Lip	1
24	322-4	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
25	25-2680	Gerotor Assembly	1
26	25-2530	Pin - Straight	1
27	237-95	O-Ring	1
28	49-8480	Shaft - Trunion	1
32	25-2480	Spring - Charge Relief	1
33	28-3420	Cone - Charge Relief	1
34	32120-15	Ring - Retaining	1
35	251-8	Bearing - Ball	1
36	32120-11	Ring - Retaining	1
37	25-2450	Swash/Plate	1
38	32121-91	Pin - Coiled Spring	3
39	25-2380	Plate - Thrust	1
40	25-2390	Plate - Valve	1
41	25-2430	Pin - Straight	1
42	67-8080	Bearing - Needle	1
43	25-2400	Gasket	1
44	62-4290	O-Ring	2
45	67-8090	Cap - Pump End	1
46	323-11	Screw - Cap Hex. Hd.	4
47	25-2490	Ball - Check Valve	2
48	25-2640	Spring - Check Valve	2
50	25-2650	Plug - Check Valve	2
*	25-3180	Kit - Check Valve (Incl. Ref. #47-50)	1
*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

 *Not Illustrated

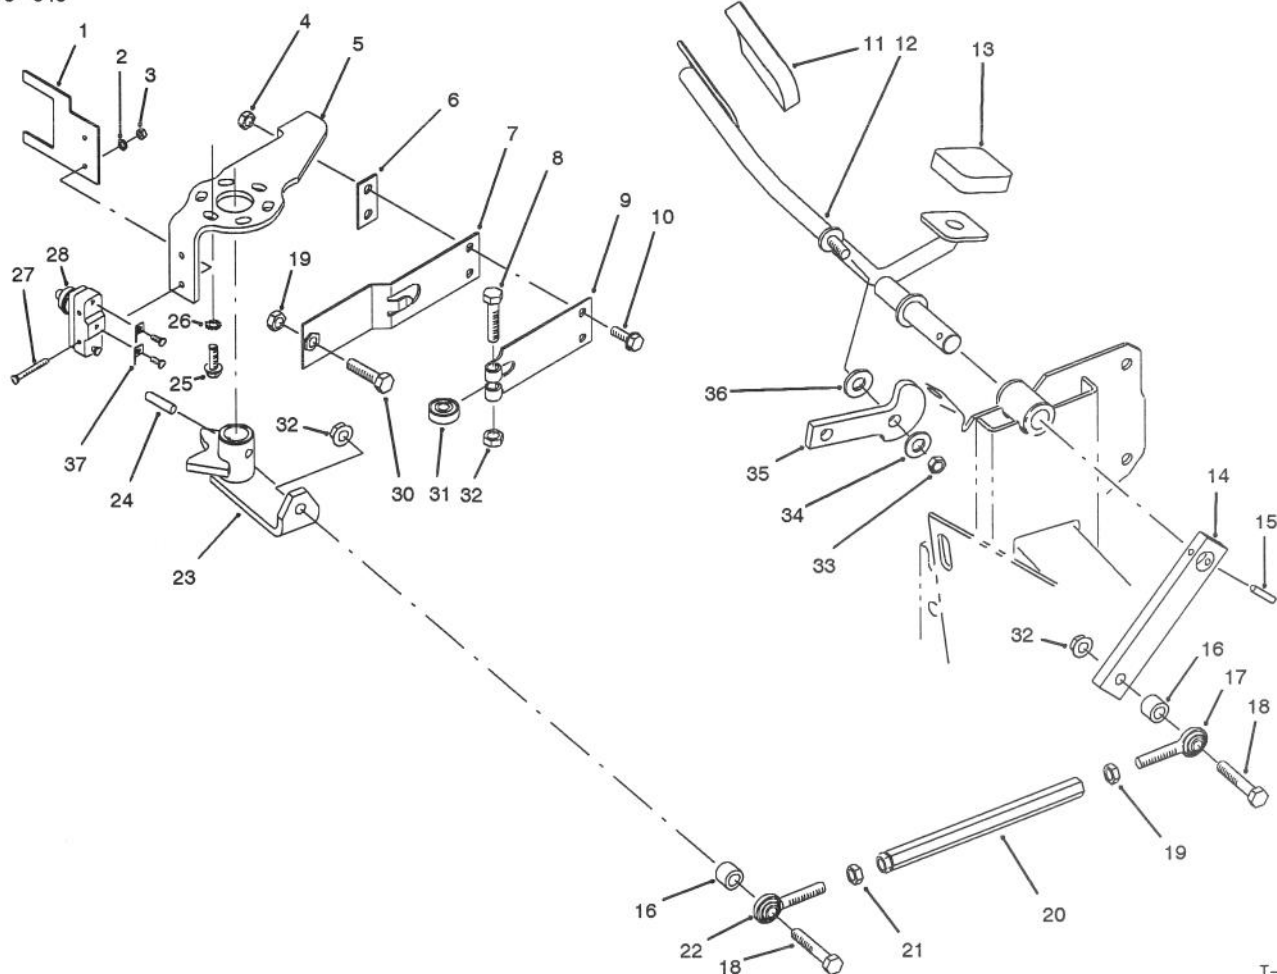


T-1355

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8810	Stop - Spring	1
2	3254-9	Washer - ITLW	2
3	3217-16	Nut - Lock	2
4	3296-16	Nut - Lock	2
5	29-6120	Plate - Pump	1
6	51-3150	Shim - Spring	1
7	29-6170	Spring - Extended Leaf	1
8	322-17	Screw - Cap Hex. Hd.	1
9	29-6150	Spring - Leaf	1
10	321-6	Screw - Hex. Flange Hd.	2
11	74-9100	Pad - Forward	1
12	83-8270	Pedal - Traction	1
13	74-9110	Pad - Reverse	1
14	61-2610	Arm - Traction	1
15	32121-6	Pin - Roll	1
16	61-2370	Spacer	2
17	2411-52	End - Rod	1
18	322-9	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
19	3220-2	Nut - Jam	2
20	83-8760	Rod - Control	1
21	3220-20	Nut - Jam	1
22	2411-53	End - Rod	1
23	83-8770	Lever - Pump	1
24	32121-24	Pin - Roll	1
25	11-9760	Screw - Hex. Flange Hd.	3
26	3255-7	Washer - ETLW	3
27	3249-11	Screw - Round Hd.	2
28	29-6163	Switch	1
30	3210-7	Screw - Cap Hex. Hd.	1
31	251-259	Bearing - Ball	1
32	3296-29	Nut - Lock	3
33	3296-59	Nut - Lock	1
34	3256-24	Washer - Flat	1
35	74-6110	Cam - Stop	1
36	66-2920	Spacer	1
37	218-596	Tab	2

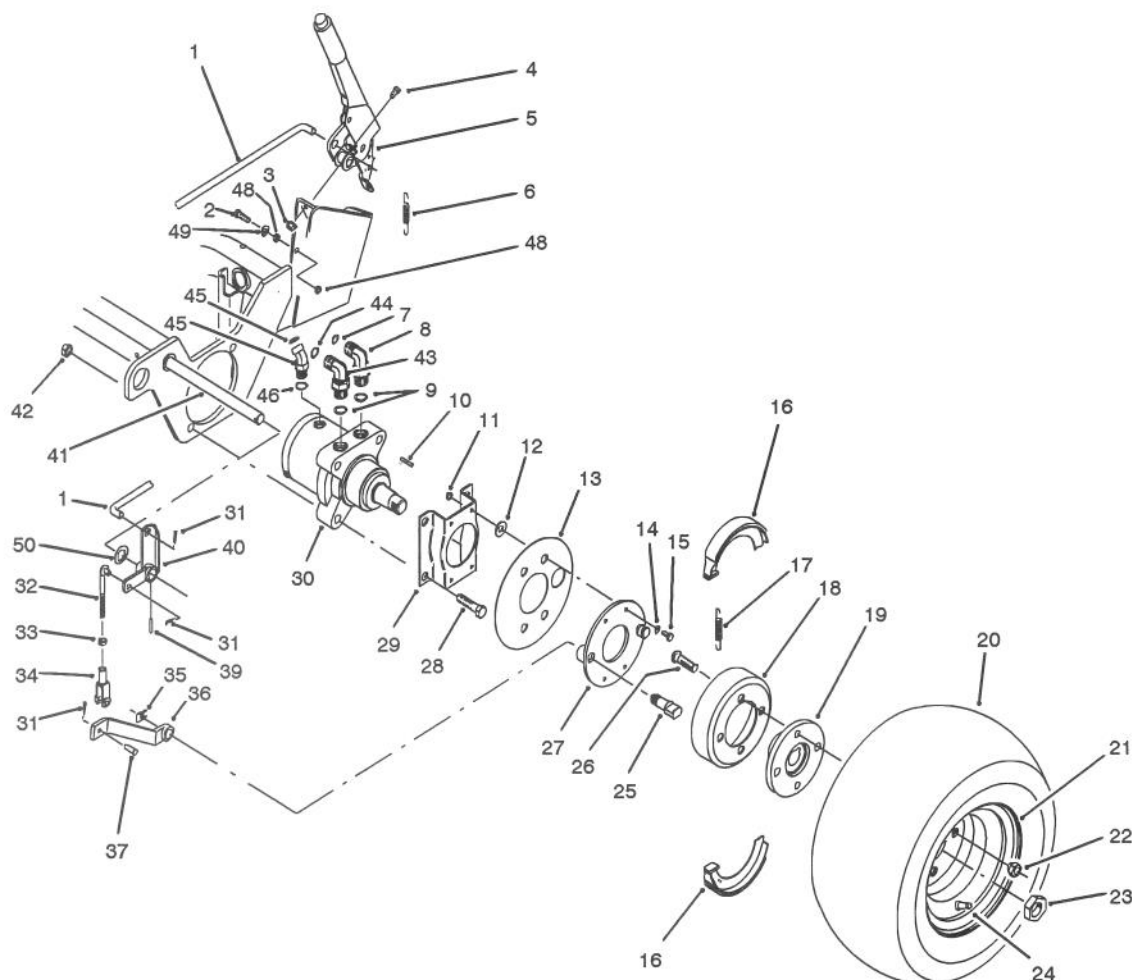 


T-1356

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1	23	26-3790	Nut - Lock	2
2	322-17	Screw - Cap Hex. Hd.	1	24	232-27	Valve - Stem	2
3	32128-44	Nut - Lock	2	25	70-9860	Pin - Pivot Brake	2
4	3234-5	Screw - Hex. Washer Hd.	2	26	85-6540	Stud - Drive	8
5	61-3990	Parking Brake Assembly	1	27	70-9870	Plate - Brake	2
6	5-7290	Spring - Extension	1	28	325-11	Screw - Cap Hex. Hd.	8
7	237-30	Seal - O-Ring	2	29	84-2000	Bracket - Brake	2
8	340-105	Fitting - Hydraulic 90° (Incl. Ref. 7 & 9)	2	30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
9	237-80	Seal - O-Ring	4	31	3272-6	Pin - Cotter	5
10	3257-15	Key - Square	2	32	84-1990	Rod - Adjusting	2
11	3296-42	Nut - Lock	8	33	3220-2	Nut - Jam	2
12	3256-16	Washer - Flat	8	34	282-2	Clevis	2
13	83-9340	Shield - Grass	2	35	70-9850	Clip - Retaining	2
14	3253-3	Washer - Lock	8	36	83-9250	Lever - Brake	2
15	321-5	Screw - Cap Hex. Hd.	8	37	283-1	Pin - Clevis	2
16	70-9840	Shoe - Brake	4	39	32121-6	Pin - Roll	2
17	70-9880	Spring - Extension	4	40	83-9270	Pivot - Brake L.H.	1
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2	*	83-9310	Pivot - Brake R.H.	1
19	10-6870	Hub - Wheel	2	41	83-9330	Shaft - Brake	1
20	231-127	Tire	2	42	3296-23	Nut - Lock	8
21	217-60	Rim	2	43	340-17	Fitting - Hydraulic 90° (Incl. Ref. #9 & 44)	2
22	242-50	Nut - Lug	8	44	237-65	Seal - O-Ring	2

 *Not Illustrated

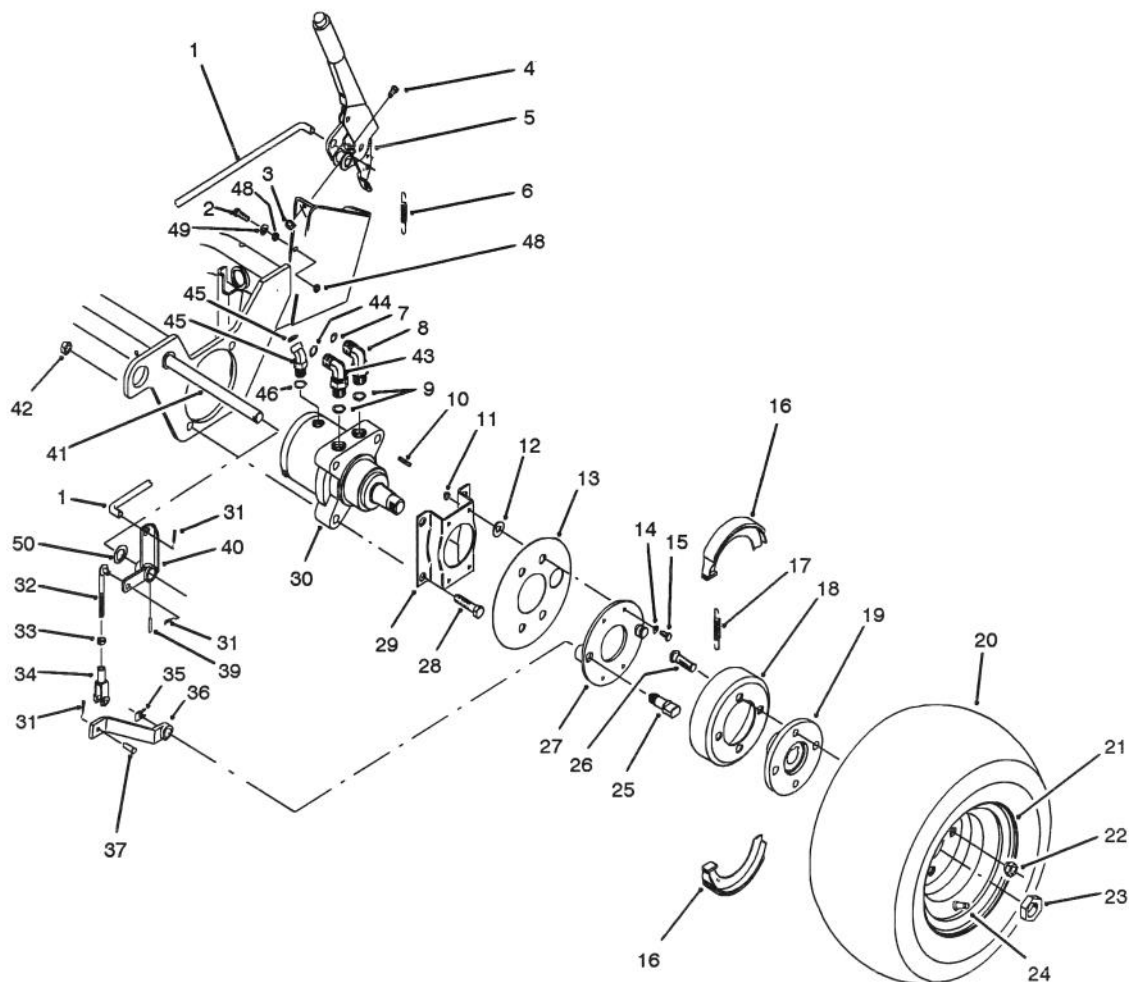


T-1356

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting - Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting - Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1
46	237-78	Seal - O-Ring	2

Ref. No.	Part No.	Description	No. Used
47	237-21	Seal - O-Ring	3
48	32128-20	Nut - Lock	2
49	3256-23	Washer	1
50	3-6498	Washer	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

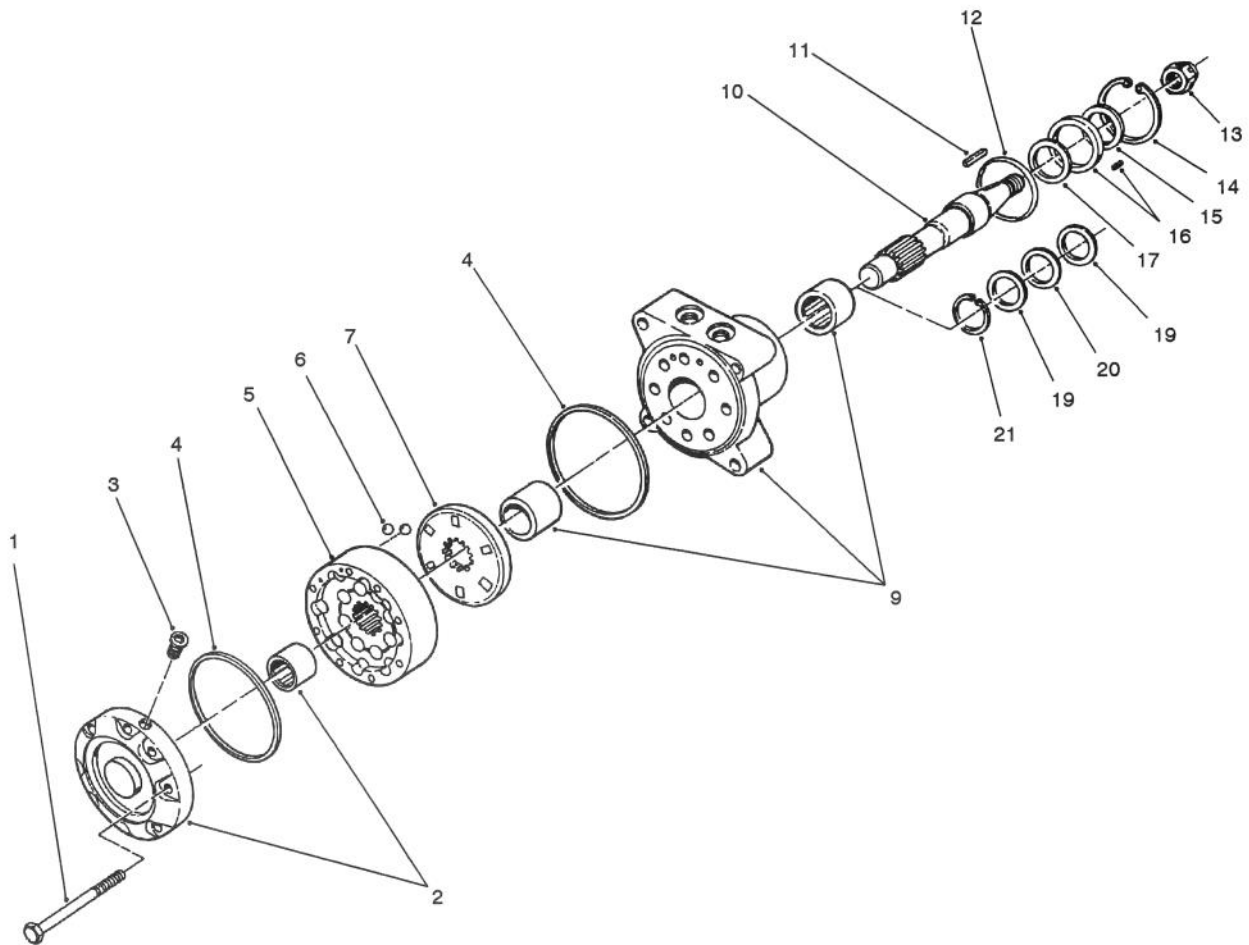

T-0274


HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8
2	65-4680	Cover & Bearing Assembly	1
3	65-4560	Plug - Hex (Hollow)	1
4	65-4570	Seal - Square Ring	2
5	66-6110	IGR Assembly	1
6	65-4550	Valve - Check Ball	2
7	70-8150	Plate - Valve	1
9	65-4670	Body & Bearing Assembly	1
10	92-1157	Shaft	1
11	3257-15	Key - Square	1
12	65-4620	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
14	65-4500	Seal - Snap Ring	1
†15		Seal - Dust	1
†16		Retainer/Pin	1
†17		Seal - Lip	1
*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
19	65-4600	Washer - Thrust	2
20	65-4610	Bearing - Thrust	1
21	65-4590	Ring - Snap	1
*	76-2360	Body Seal Kit (Incl. Ref. #4, 12 & 15-17)	1

*Not Illustrated

 
†Not available from Toro as a replacement part.

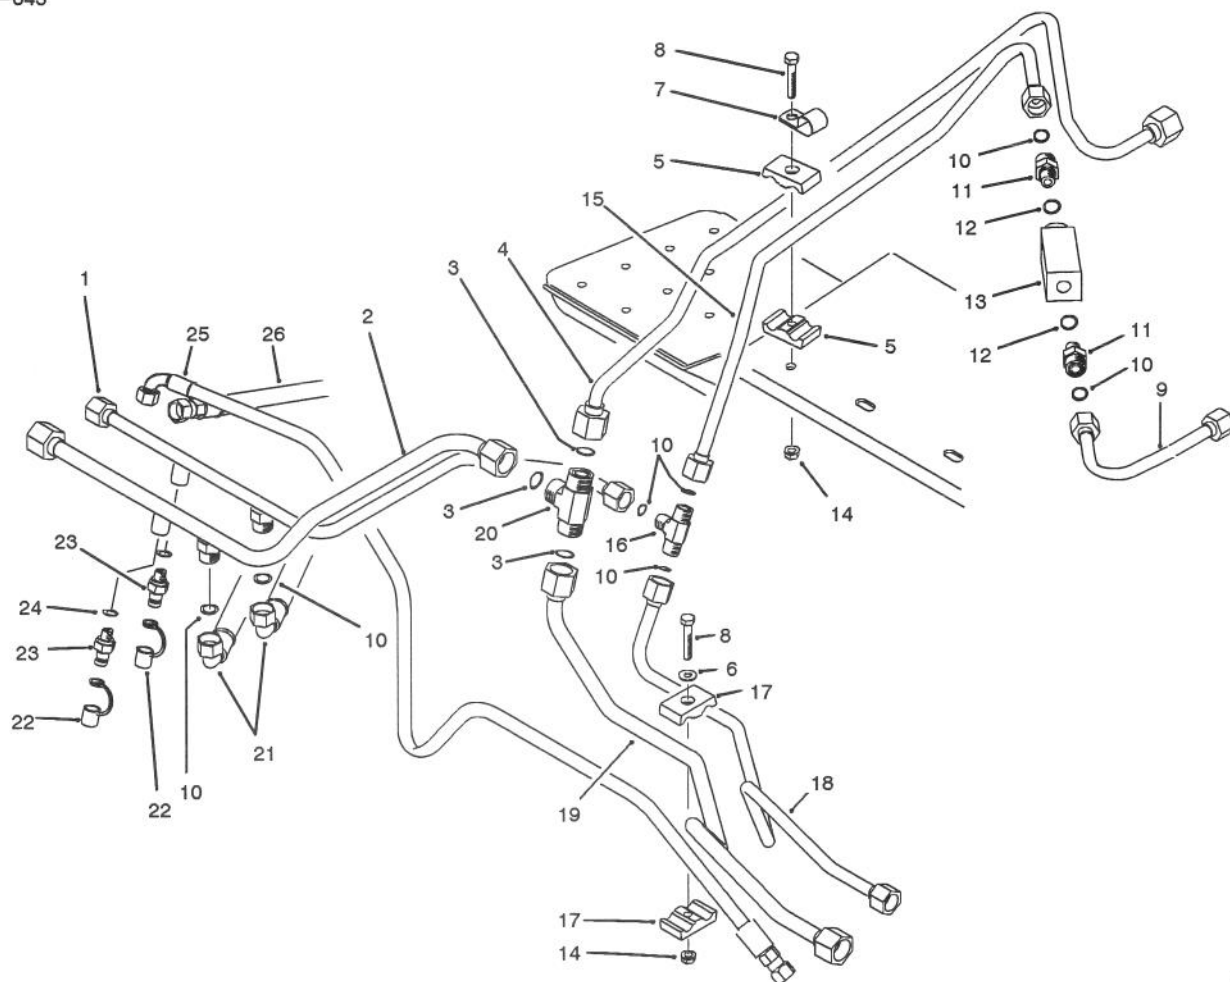

T-1358

DRIVE MOTOR PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9470	Hydraulic Tube Assembly (Incl. Ref. #10)	1	14	3296-29	Nut - Lock	2
2	83-9440	Hydraulic Tube Assembly (Incl. Ref. #10)	1	15	83-9490	Tube - Hydraulic	1
3	237-65	Seal - O-Ring	3	16	340-102	Fitting - Hydraulic Tee (Incl. Ref. #10)	1
4	83-9460	Tube - Hydraulic	1	17	56-7977	Clamp - Hydraulic Tube	2
5	56-7976	Clamp - Hydraulic Tube	2	18	83-9480	Tube - Hydraulic	1
6	3256-3	Washer - Flat	1	19	83-9450	Tube - Hydraulic	1
7	2412-39	Clamp - R	1	20	340-19	Fitting - Hydraulic Tee (Incl. Ref. #3)	1
8	322-10	Screw - Cap Hex. Hd.	2	21	83-9600	Hose - Hydraulic	2
9	83-9500	Tube - Hydraulic	1	22	354-79	Cap - Test Port	2
10	237-30	Seal - O-Ring	7	23	354-77	Hydraulic Test Port Fitting (Incl. Ref. #24)	2
11	340-5	Fitting - Hydraulic Straight (Incl. Ref. #10 & 12)	2	24	237-78	Seal - O-Ring	2
12	237-42	Seal - O-Ring	2	25	85-5300	Hose - Hydraulic	1
13	71-2960	Valve - Flow Control	1	26	85-4990	Hose - Hydraulic	1

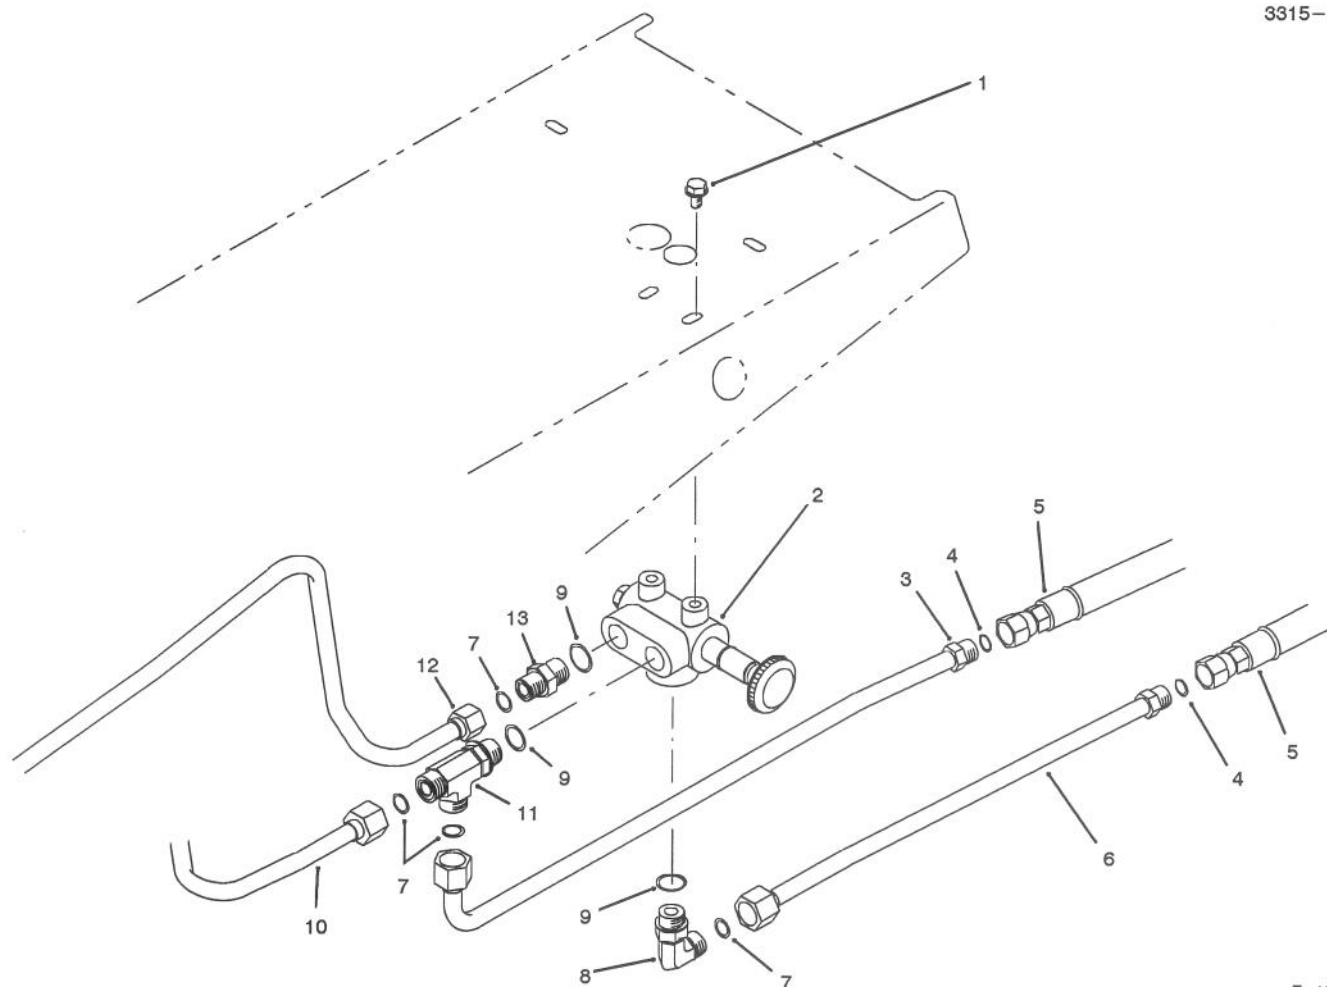 


T-1359

REAR WHEEL DRIVE VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-28	Screw - Hex. Flange Hd.	2
2	71-2830	2 Position Valve Assembly	1
3	71-0710	Hydraulic Tube Assembly (Incl. Ref. #4)	1
4	237-22	Seal - O-Ring	2
5	80-4090	Hose - Hydraulic	2
6	71-0840	Hydraulic Tube Assembly (Incl. Ref. #4)	1
7	237-30	Seal - O-Ring	4

Ref. No.	Part No.	Description	No. Used
8	340-98	Fitting - Hydraulic 90° (Incl. Ref. #7 & 9)	1
9	237-79	Seal - O-Ring	3
10	83-9500	Tube - Hydraulic	1
11	340-109	Fitting - Hydraulic Tee (Incl. Ref. #7 & 9)	1
12	83-9460	Tube - Hydraulic	1
13	340-4	Fitting - Hydraulic Straight (Incl. Ref. #7 & 9)	1

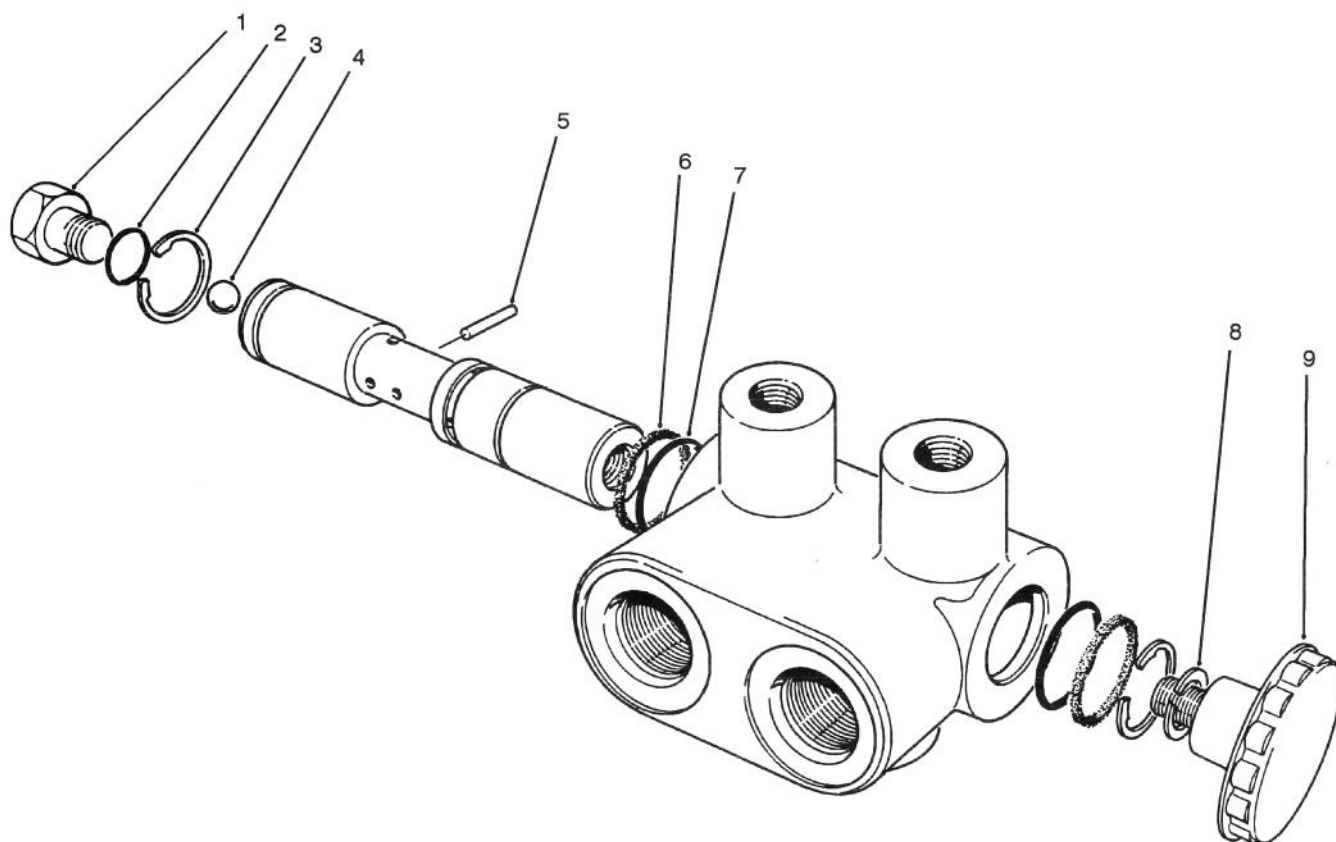 

T-0672

2 POSITION VALVE ASSEMBLY NO. 71-2830


Ref. No.	Part No.	Description	No. Used
1	353-512	Plug - Hydraulic	1
2	237-22	Seal - O-Ring	1
3	32151-78	Ring - Retaining	2
4	354-23	Ball - Check	1
5	32121-38	Pin - Roll	1
†6		Washer - Backup	2


Ref. No.	Part No.	Description	No. Used
7	237-54	Seal - O-Ring	2
8	3253-5	Washer - Lock	1
9	233-46	Knob	1
*	71-1220	Seal Repair Kit (Incl. Ref. #2, 3, 6 & 7)	1

*Not Illustrated

†Available only in Seal Repair Kit No. 71-1220.

  HYDRAULIC SCHEMATIC

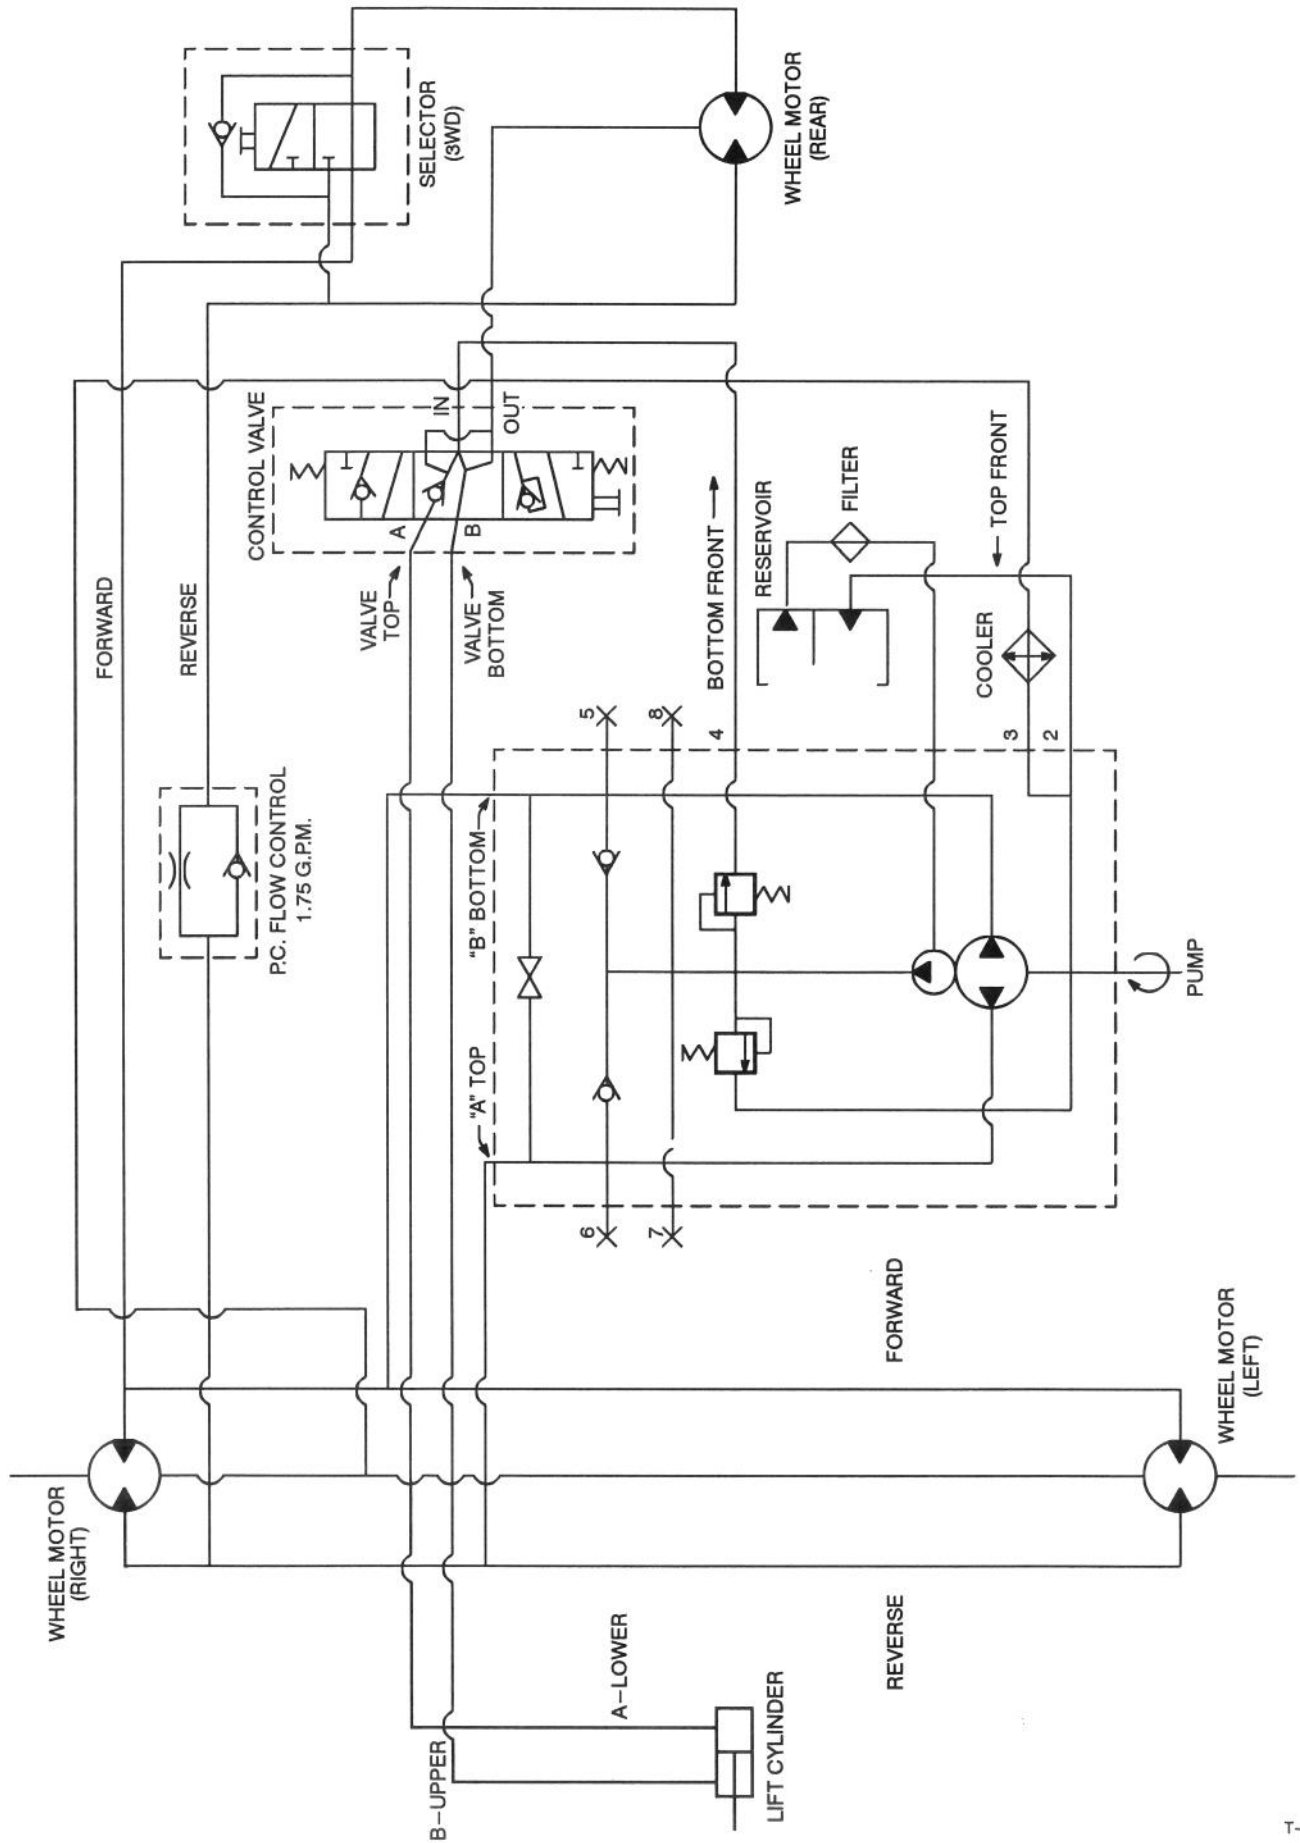

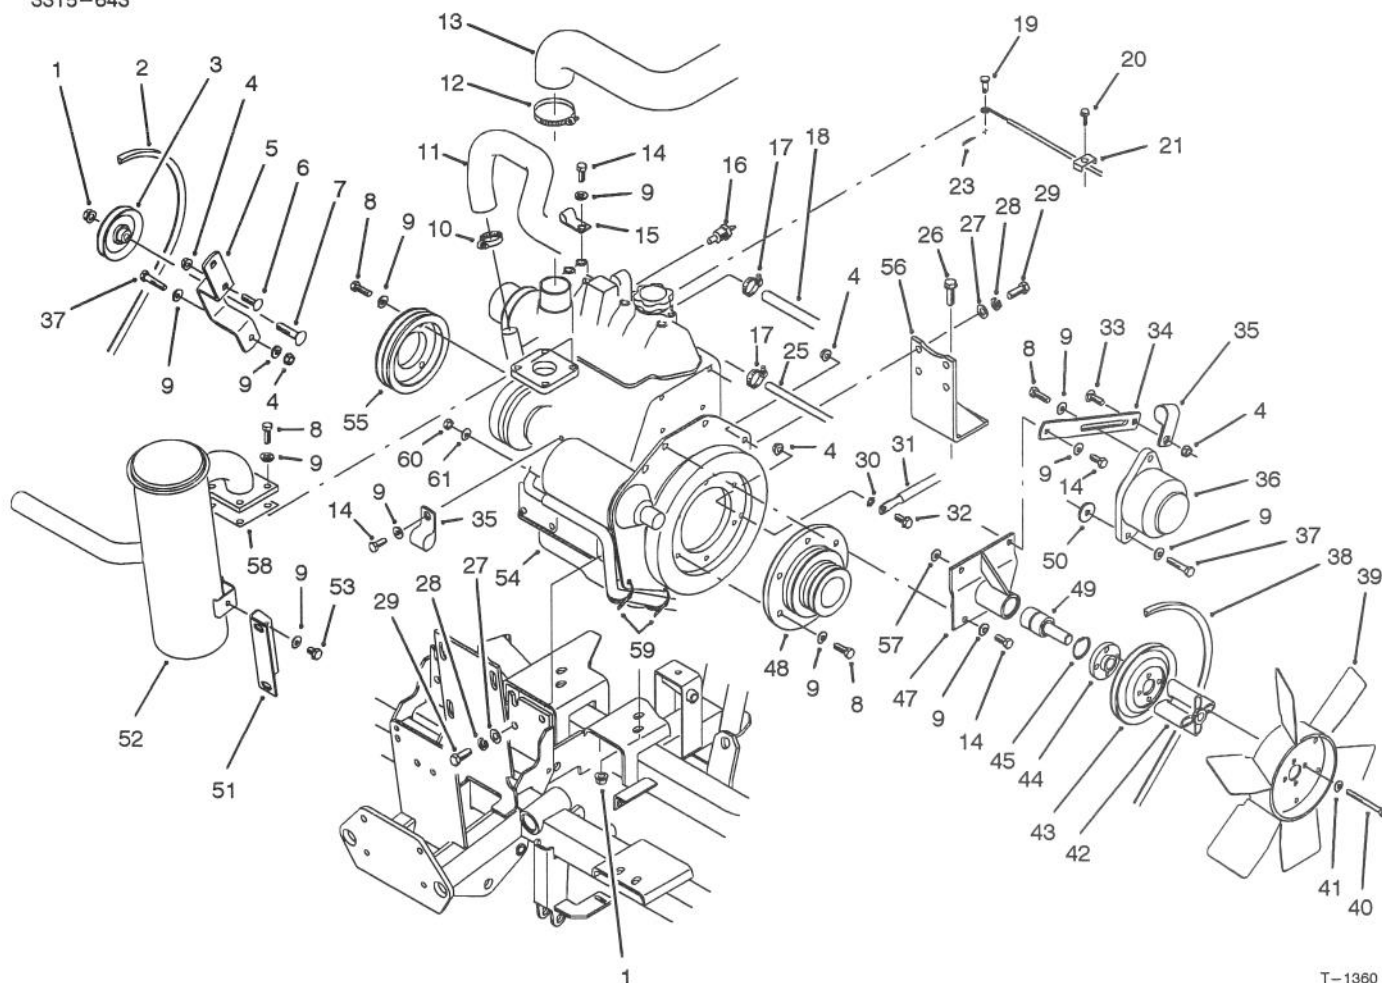


T-1360

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut - Flange Lock	5
2	37-9090	Belt - V	1
3	63-8140	Pulley - Idler	1
4	32128-44	Nut - Flange Lock	5
5	83-7690	Bracket - Idler	1
6	3230-22	Screw - Carriage	1
7	3231-26	Screw - Carriage	1
8	48-9460	Screw - Cap Hex. Hd.	14
9	3256-23	Washer - Flat	23
10	2412-34	Clamp - Hose	1
11	83-9070	Hose - Coolant	1
12	2412-92	Clamp - Hose	1
13	83-8550	Hose - Air Intake	1
14	48-7700	Screw - Cap Hex. Hd.	6
15	2412-93	Clamp - R	1
16	82-3110	Sensor - Temp	1
17	2412-108	Clamp - Hose	2
18	63-7620	Hose - Fuel	1
19	283-62	Pin - Clevis	1
20	3290-432	Screw - Hex. Hd.	1
21	81-1690	Clamp - Throttle Cable	1
23	3272-9	Pin - Cotter	1
25	75-4703	Hose - Fuel	1
26	3234-24	Screw - Hex. Flange Hd.	4
27	3256-24	Washer - Flat	16
28	48-9590	Washer - Lock	16

Ref. No.	Part No.	Description	No. Used
29	48-7780	Screw - Cap Hex. Hd.	16
30	3255-8	Washer - Lock E.T.L.W.	1
31	83-9210	Cable - Ground	1
32	3234-5	Screw - Hex. Washer Hd.	1
33	3230-1	Screw - Carriage	1
34	83-7700	Bracket - Alternator	1
35	2412-39	Clamp - R	2
†36	185046210	Alternator	1
37	322-7	Screw - Cap Hex. Hd.	2
38	83-9020	Belt - V	1
†39	145306380	Fan	1
40	321-14	Screw - Cap Hex. Hd.	4
41	48-8010	Washer - Flat	4
42	83-7620	Spacer - Fan	1
43	83-7630	Pulley - Fan	1
44	83-7610	Hub - Fan	1
45	32120-10	Ring - Retaining	1
47	83-9880	Bracket - Fan Spindle	1
48	83-8410	Pulley - Engine	1
49	36-7290	Spindle - Fan	1
50	62-9510	Washer - Flat	1
51	83-8220	Bracket - Muffler	1
52	83-8500	Muffler	1
53	3234-28	Screw - Hex. Washer Hd.	1
54	83-7540	Engine Assembly	1
55	83-7590	Pulley - Engine	1

 †Obtain from your local Perkins Dealer.

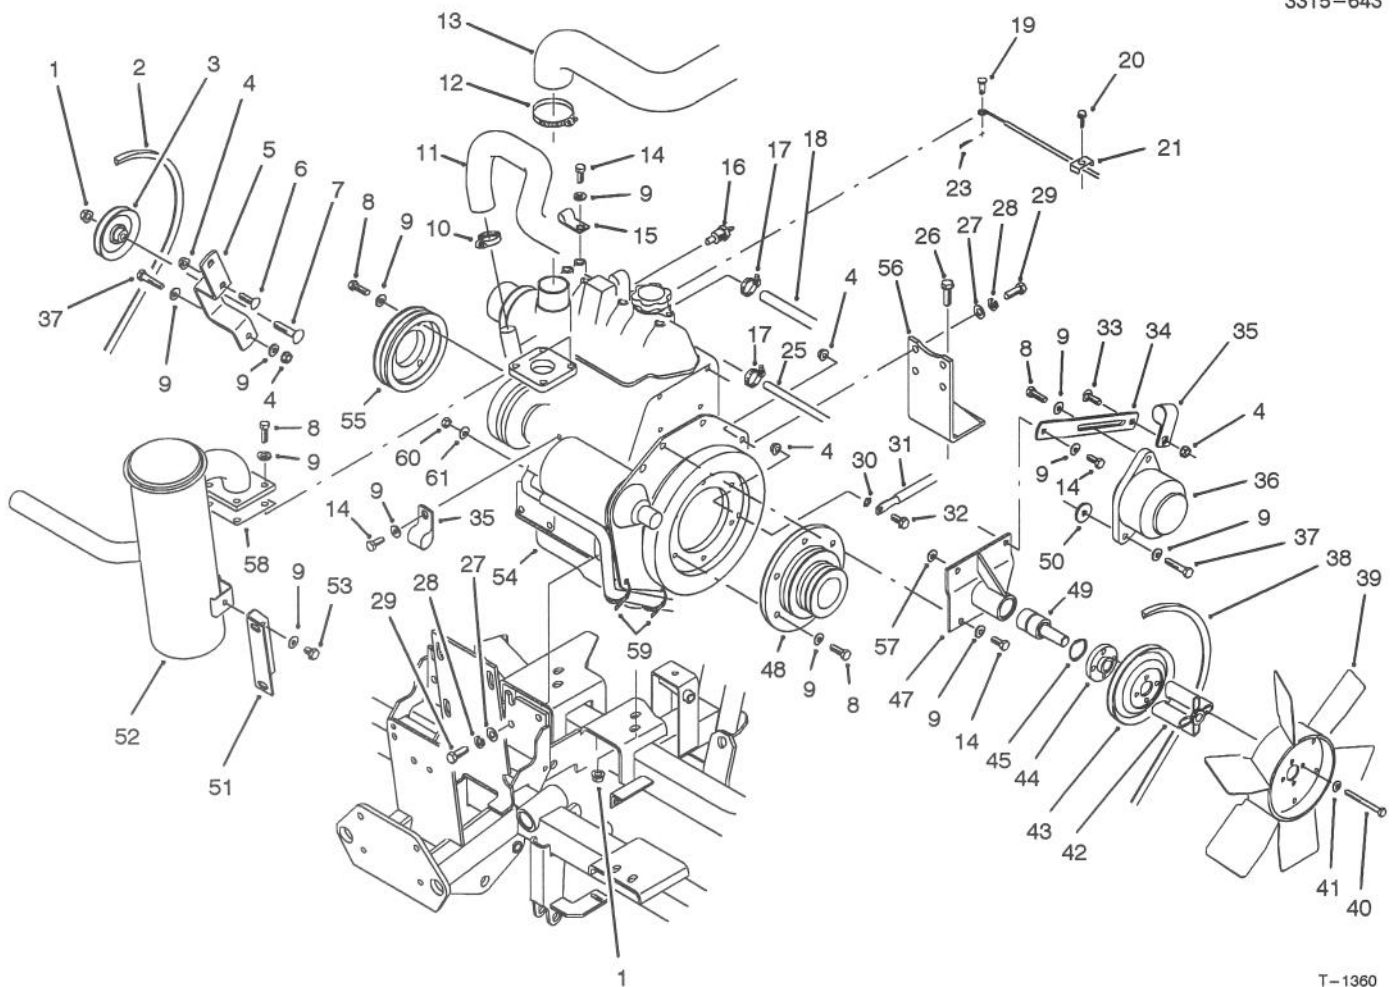


T-1360

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
56	83-8470	Bracket – Engine Mount	2
57	65-8270	Washer	1
58	83-9910	Gasket – Muffler	1

Ref. No.	Part No.	Description	No. Used
59	3290-379	Tie – Cable	2
60	57-6390	Nut	1
61	42-9850	Washer	1

 3315-643

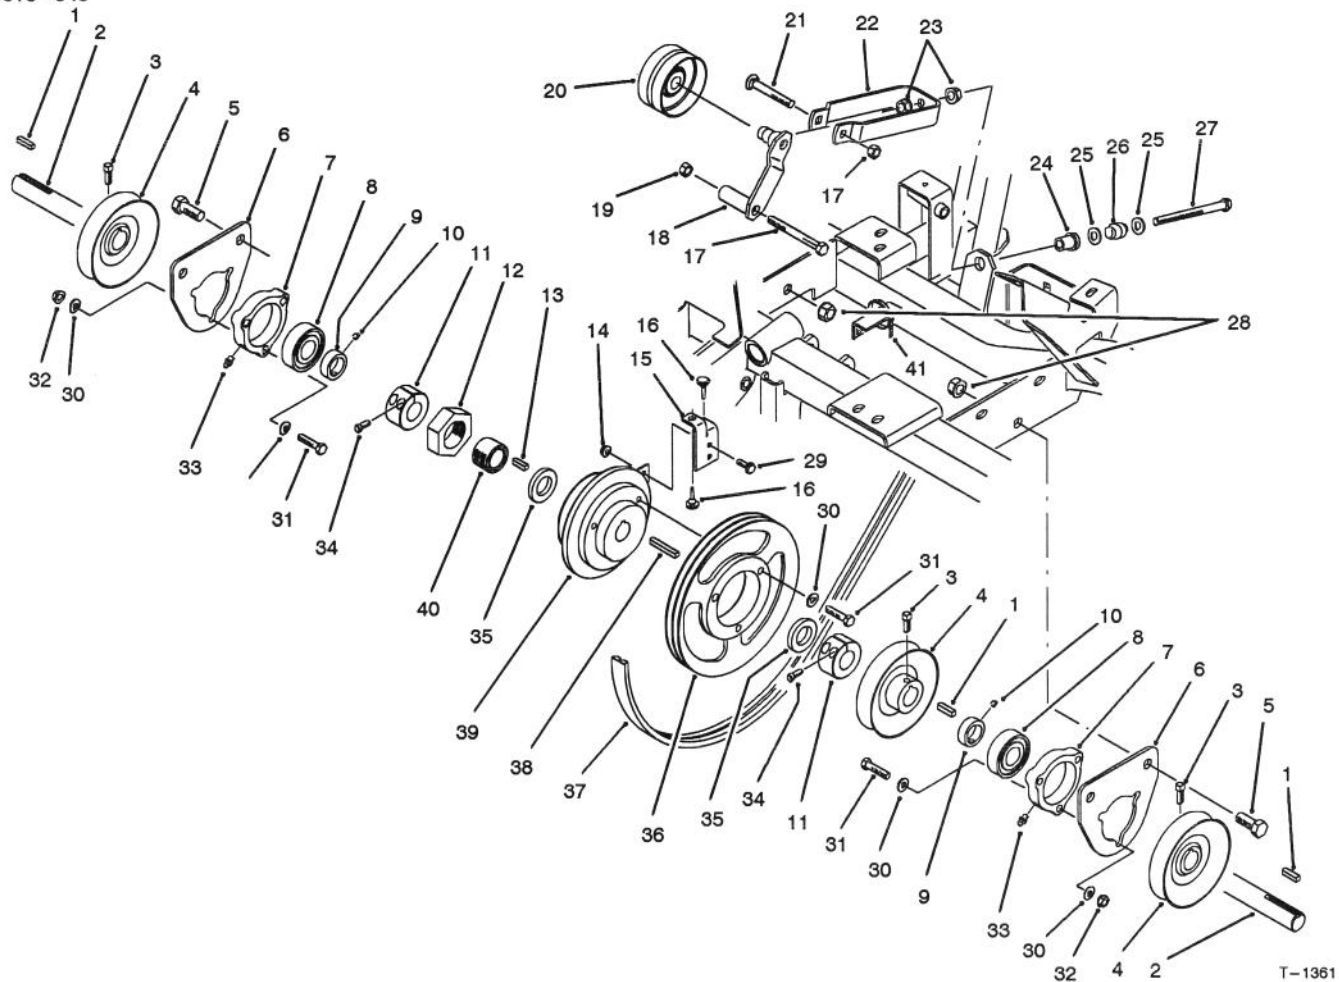


T-1361

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-7280	Key - Square	3
2	83-7820	Shaft - Drive	1
3	3242-4	Screw - Square Hd. Set	6
4	61-0140	Pulley - Reel	3
5	3234-32	Screw - Cap Hex. Hd.	4
6	61-2350	Support - Bearing	2
7	76-2460	Bearing Assembly (Incl. Ref. #7-10 & 33)	2
8	251-337	Bearing - Ball	2
9	251-77	Collar - Locking	2
10	3245-35	Screw - Set	4
11	83-7790	Collar	2
12	3218-17	Nut - Jam	1
13	10-7070	Key - Square	1
14	32128-33	Nut - Flange Lock	2
15	83-7830	Retainer - Clutch	1
16	240-13	Bumper	2
17	3296-39	Nut - Lock	2
18	83-8620	Bracket - Idler	1
19	323-15	Screw - Cap Hex. Hd.	1
20	83-8400	Pulley - Idler	1

Ref. No.	Part No.	Description	No. Used
21	3231-31	Bolt - Carriage	1
22	83-8630	Yoke - Belt Tension	1
23	32128-43	Nut - Flange Lock	2
24	83-9810	Bushing - Flange	1
25	3256-24	Washer - Flat	2
26	83-9690	Spring - Compression	1
27	83-9680	Screw - Cap Hex. Hd.	1
28	3296-23	Nut - Flange Lock	4
29	3234-4	Screw - Hex. Flange Hd.	2
30	3256-23	Washer - Flat	15
31	322-17	Screw - Cap Hex. Hd.	9
32	3296-29	Nut - Flange Lock	6
33	302-5	Fitting - Grease	2
34	3273-18	Screw - Hex. Socket Hd.	4
35	83-7810	Spacer	2
36	83-8420	Pulley - Clutch	1
37	83-8490	Belt - Drive	1
38	83-8080	Key - Square	1
39	83-9140	Clutch Assembly	1
40	83-7800	Sleeve	1
41	3290-379	Tie - Cable	1

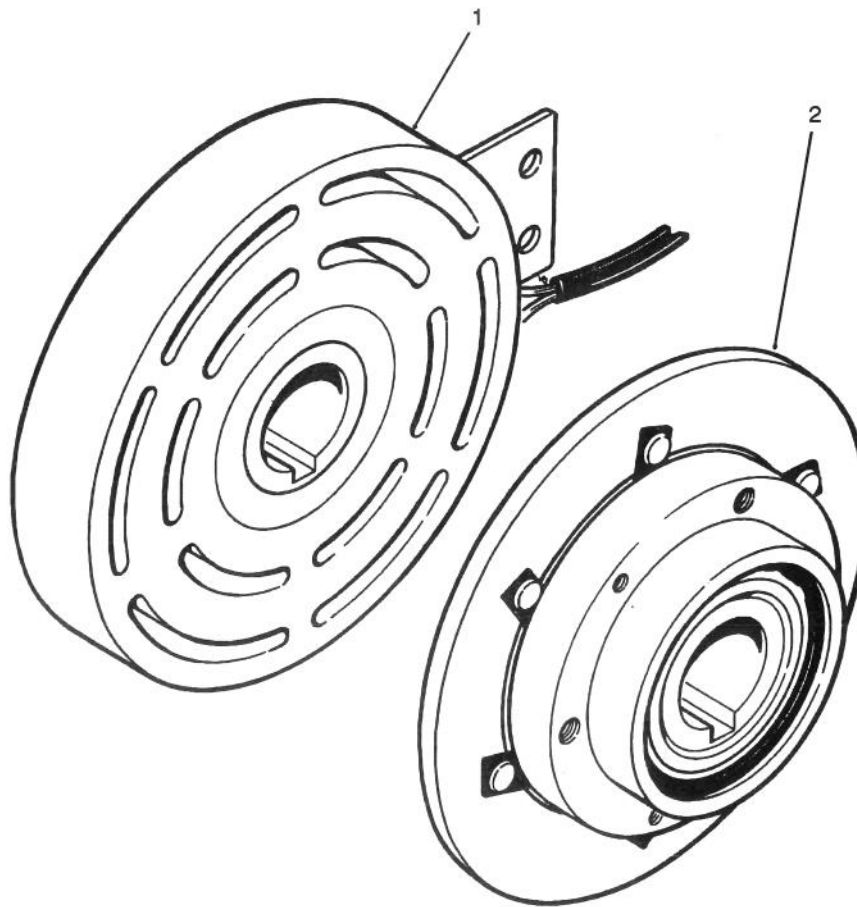 


T-1362

ELECTRIC CLUTCH ASSEMBLY NO. 83-9140

Ref. No.	Part No.	Description	No. Used
1	84-7770	Field & Rotor Assembly	1

Ref. No.	Part No.	Description	No. Used
2	84-7780	Armature Assembly	1

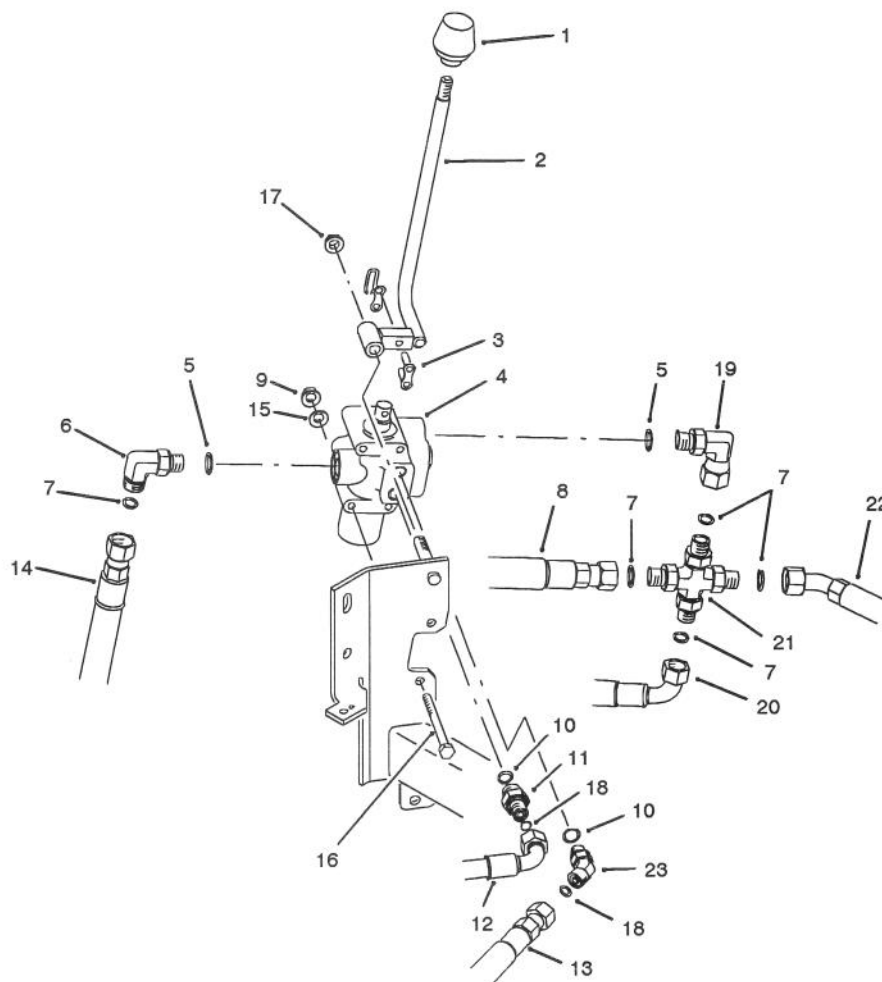 


T-1363

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	85-5160	Lever - Lift Valve	1
3	2710-16	Connecting Link Assembly	1
4	43-1950	Lift Valve Assembly	1
5	237-42	Seal - O-Ring	1
6	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	Seal - O-Ring	5
8	92-1177	Hose - Hydraulic	1
9	3296-16	Nut - Flange Lock	2
10	237-78	Seal - O-Ring	2
11	340-92	Fitting - Hydraulic Straight (Incl. Ref. #10 & 18)	1
12	83-9620	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
13	85-5810	Hose - Hydraulic	1
14	83-9640	Hose - Hydraulic	1
15	3256-22	Washer - Flat	2
16	321-23	Screw - Cap Hex. Hd.	2
17	3296-39	Nut - Flange Lock	1
18	237-21	Seal - O-Ring	2
19	340-110	Fitting - Hydraulic 90° (Incl. Ref. #5)	1
20	85-4990	Hose - Hydraulic	1
21	340-23	Fitting - Hydraulic Cross (Incl. Ref. #7)	1
22	85-5190	Hose - Hydraulic	1
23	340-103	Fitting - Hydraulic 45° (Incl. Ref. #10 & 18)	1

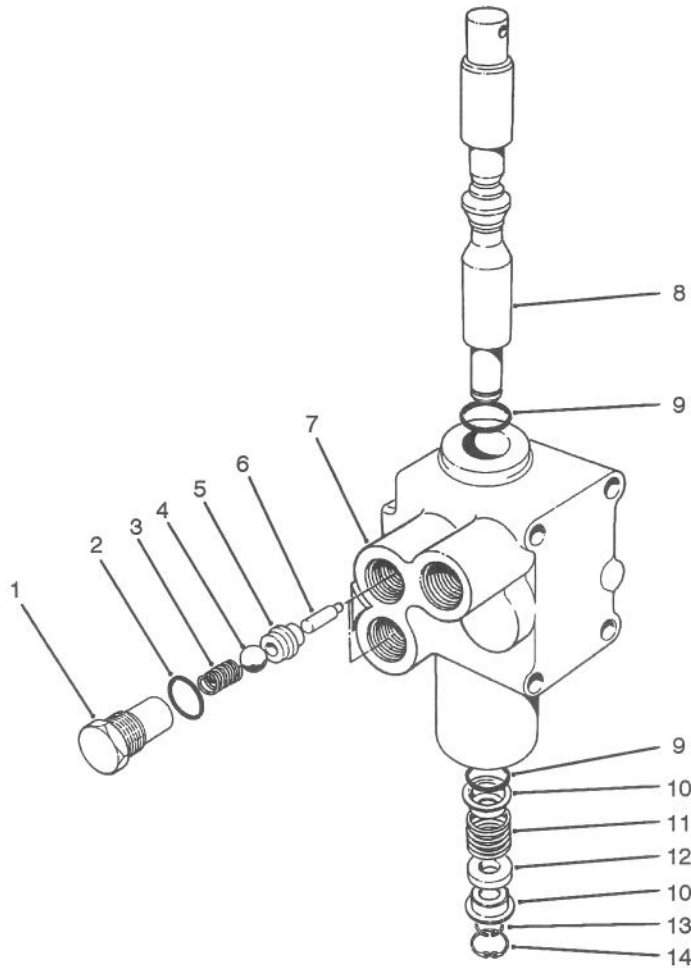 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	Seal - O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	Seal - O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring - Spool	1
14	22-8490	Snap Ring	1

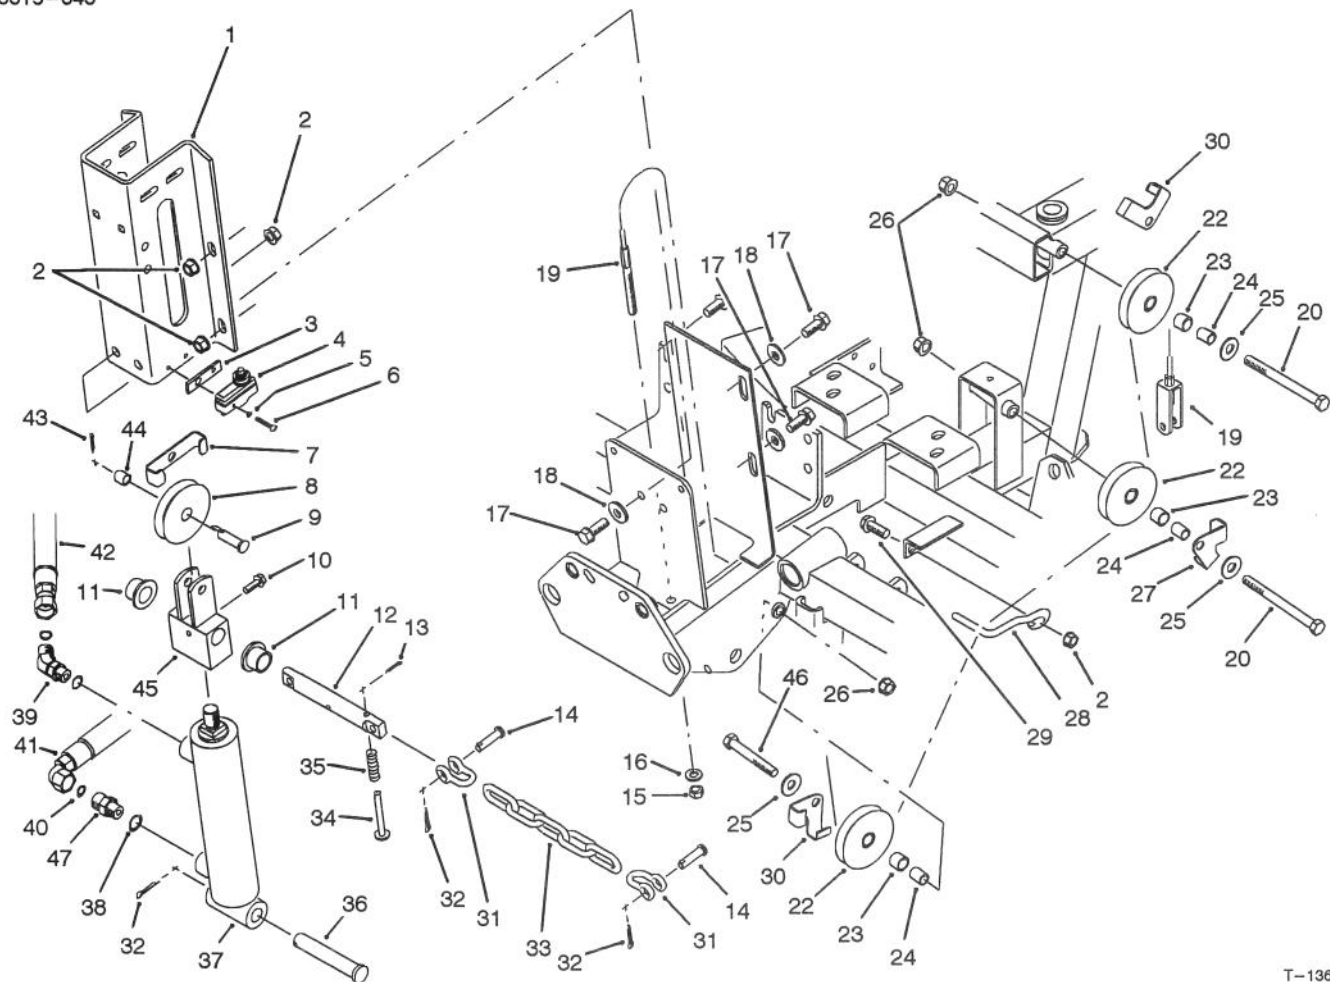 


T-1364

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9760	Bracket - Cylinder Support	1
2	32128-43	Nut - Flange Lock	7
3	61-2990	Spacer - Switch	1
4	29-6163	Switch - Lift	1
5	3254-9	Washer - Lock Internal	2
6	3250-35	Screw - Pan Hd.	2
7	5-2655	Keeper - Cable	1
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283-42	Pin - Clevis	1
10	3234-4	Screw - Hex. Washer Hd.	1
11	84-8440	Bushing - Flange	2
12	72-4190	Pin - Cylinder Guide	1
13	3272-4	Pin - Cotter	1
14	283-6	Pin - Clevis	4
15	3296-4	Nut - Lock	1
16	3256-23	Washer - Flat	1
17	3234-25	Screw - Hex. Washer Hd.	5
18	80-6990	Washer	4
19	83-8590	Cable - Lift	1
20	323-17	Screw - Cap Hex. Hd.	2
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256-1	Bushing - Sleeve	3
24	61-3230	Spacer	3

Ref. No.	Part No.	Description	No. Used
25	3256-24	Washer - Flat	3
26	3296-39	Nut - Flange Lock	3
27	83-9130	Keeper - Cable	1
28	63-1400	Guide - Cable	1
29	3234-11	Screw - Hex. Washer Hd.	1
30	5-2656	Keeper - Cable	2
31	282-4	Clevis	4
32	3272-11	Pin - Cotter	5
33	61-3830	Chain - Lift	2
34	71-1380	Pin - Spring	1
35	71-1370	Spring - Compression	1
36	283-78	Pin - Clevis	1
37	76-0020	Hydraulic Cylinder Assembly	1
38	237-42	Seal - O-Ring	2
39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	1
40	237-22	Seal - O-Ring	2
41	85-5310	Hose - Hydraulic	1
42	83-9620	Hose - Hydraulic	1
43	3272-6	Pin - Cotter	1
45	61-2430	Hub - Lift	1
44	256-2	Bushing - Sleeve	1
46	323-13	Screw - Cap Hex. Hd.	1
47	340-2	Fitting - Hydraulic Straight (Incl. Ref. #38 & 40)	1

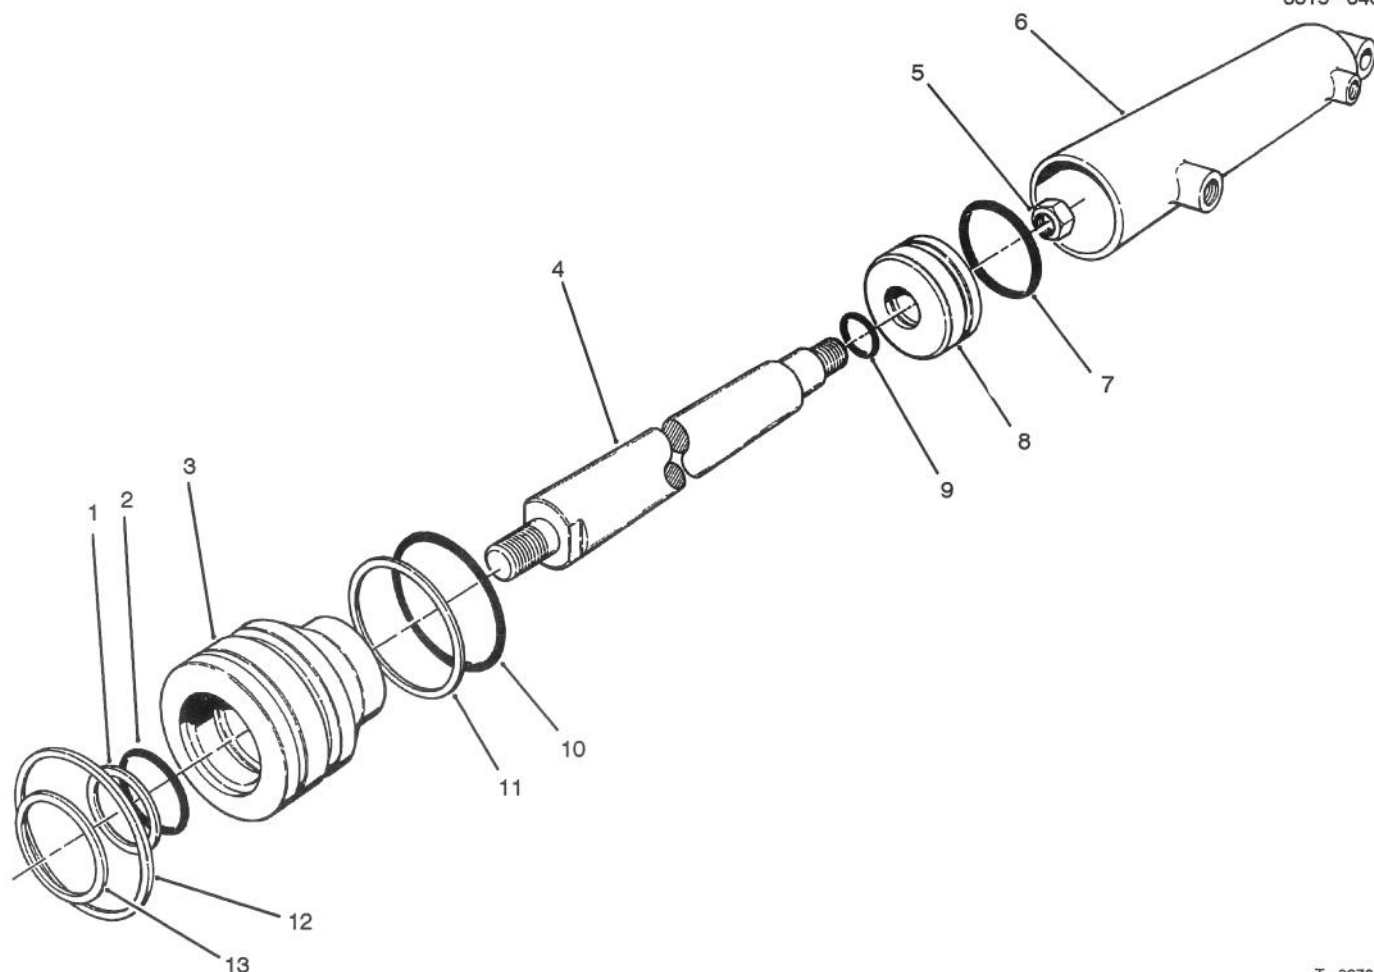 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used
1		Washer - Backup	1
2		Seal - O-Ring	1
3	76-0090	Head	1
4	76-2320	Shaft	1
5	76-2330	Nut - Lock	1
6		Barrel	1
7		Uniring	1
8	76-0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Seal - O-Ring	1
10		Seal - O-Ring	1
11		Washer - Backup	1
12	76-0050	Ring - Retaining	1
13		Seal - Dust	1
*	76-0030	Repair Kit (Incl. Ref. #1-2, 7, 9-11 & 13)	1

 *Not Illustrated

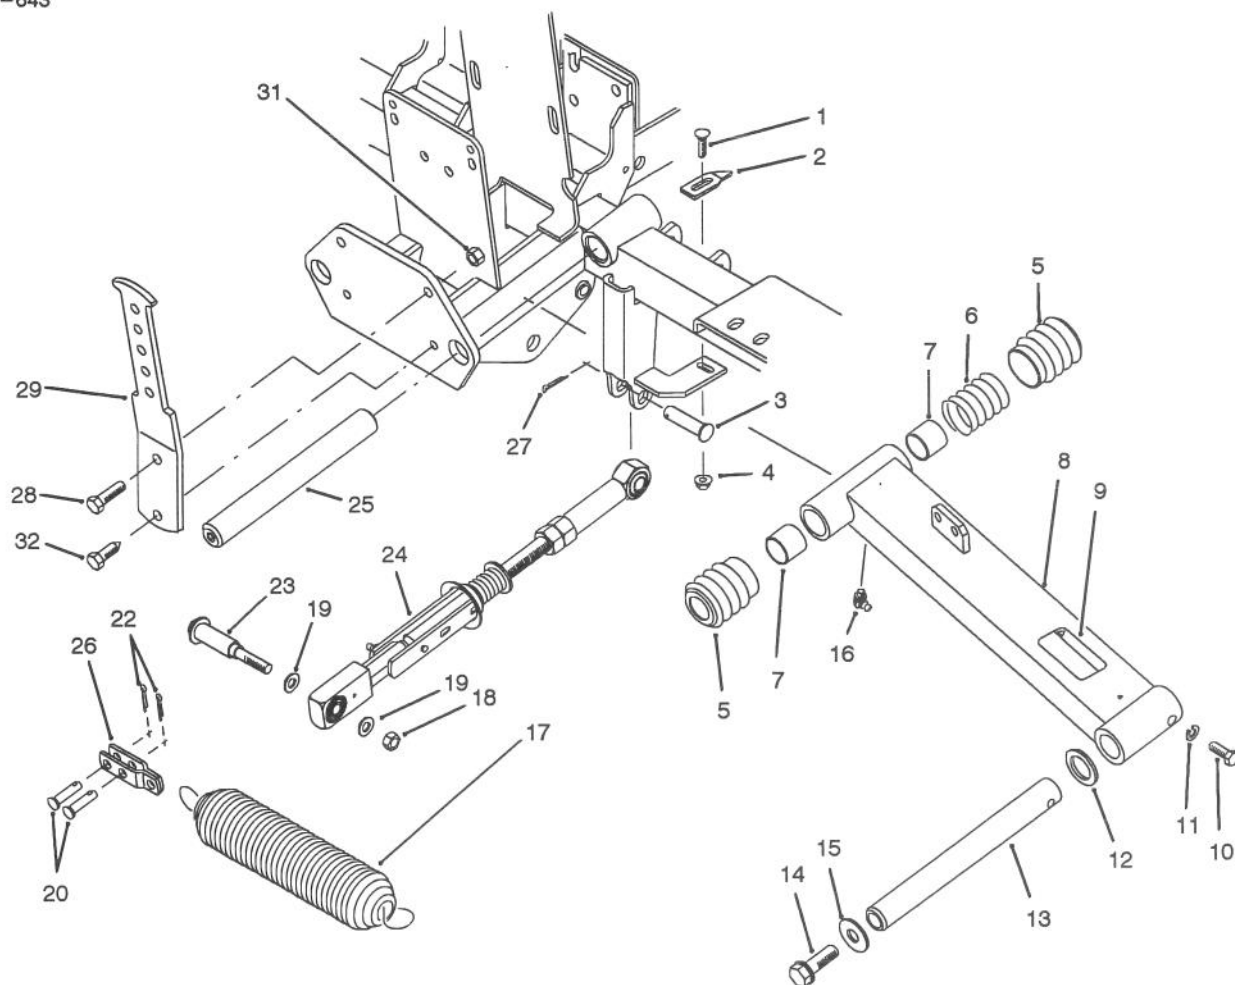

T-1365A


FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229-1	Bolt - Carriage	2
2	76-2430	Scraper - Pulley	2
3	283-40	Pin - Clevis	2
4	32128-33	Nut - Flange Lock	2
5	61-7250	Boot	4
6	61-3270	Spring - Compression	2
7	3-0348	Bushing - Sleeve	4
8	92-2404	Lift Arm Assembly L.H. (Incl. Ref. #7 & 16)	1
*	92-2405	Lift Arm Assembly R.H. (Incl. Ref. #7 & 16)	1
†9	55-4300	Decal - Warning	2
10	322-4	Screw - Cap Hex. Hd.	2
11	3253-4	Washer - Lock	2
12	256-115	Washer - Thrust	2
13	92-1815	Rod - Pivot	2
14	3234-32	Screw - Hex. Flange Hd.	2

Ref. No.	Part No.	Description	No. Used
15	3256-6	Washer - Flat	2
16	302-60	Fitting - Grease	2
17	5-0743	Spring - Extension	2
18	3296-59	Nut - Lock	2
19	3256-45	Washer - Flat	4
20	283-75	Pin - Clevis	4
22	3272-10	Pin - Cotter	4
23	76-0370	Bolt - Shoulder	2
24	83-7900	Belt Tensioner Assembly	2
25	92-1812	Shaft - Lift Pivot	2
26	92-1822	Shackle	2
27	3272-13	Pin - Cotter	2
28	323-7	Screw - Cap Hex. Hd.	2
29	92-1818	Arm - Tension	2
31	3296-39	Nut - Lock	2
32	32104-6	Screw - Cap Hex. Hd.	2

*Not Illustrated

 †For different language versions of this part, see International Decal Cross Reference.

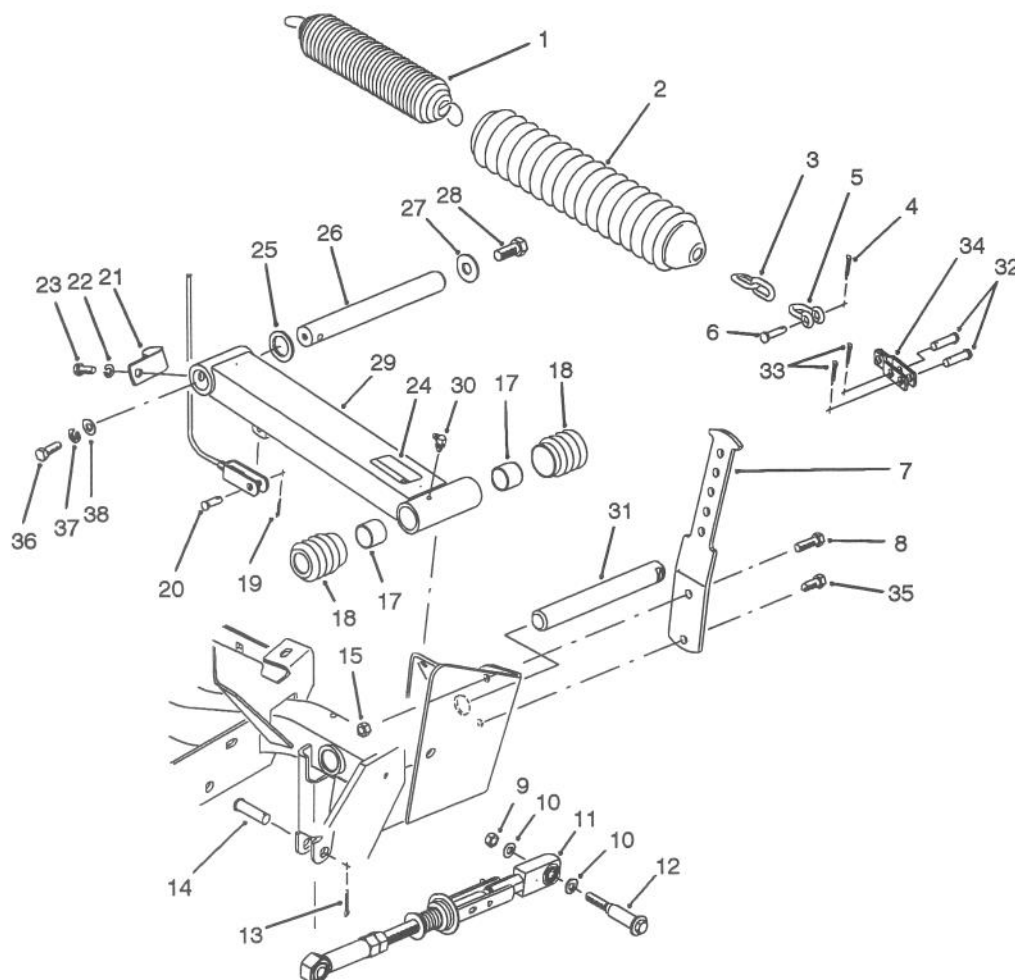


T-1366A

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Extension	1	21	18-2970	Clamp - R	1
2	62-7240	Cover - Spring	1	22	3253-4	Washer - Lock	1
3	62-7300	Chain	1	23	322-4	Screw - Cap Hex. Hd.	1
4	3272-11	Pin - Cotter	1	‡24	55-4300	Decal - Warning	1
5	282-4	Clevis	1	25	256-115	Washer - Thrust	1
6	283-6	Pin - Clevis	1	26	92-1815	Rod - Pivot	1
7	92-1818	Arm - Tension	1	27	3256-6	Washer - Flat	1
8	323-7	Screw - Cap Hex. Hd.	1	28	3234-32	Screw - Cap Hex. Hd.	1
9	3296-59	Nut - Lock	2	29	61-2890	Lift Arm Assembly (Incl. Ref. #17 & 30)	1
10	3256-45	Washer - Flat	4	30	302-60	Fitting - Grease	1
11	83-7900	Belt Tensioner Assembly	2	31	92-1812	Shaft - Lift Pivot	1
12	76-0370	Bolt - Shoulder	2	32	283-75	Pin - Clevis	2
13	3272-13	Pin - Cotter	2	33	3272-10	Pin - Cotter	2
14	283-40	Pin - Clevis	2	34	92-1822	Shackle	1
15	3296-39	Nut - Lock	1	35	32104-6	Screw - Cap Hex. Hd.	1
17	3-0348	Bushing - Sleeve	2	36	322-26	Screw - Cap Hex. Hd.	1
18	62-7250	Boot	2	37	3253-4	Washer - Lock	1
19	3272-6	Pin - Cotter	1	38	3256-57	Washer - Flat	1
20	283-1	Pin - Clevis	1				

 ‡For different language versions of this part, see International Decal Cross Reference.

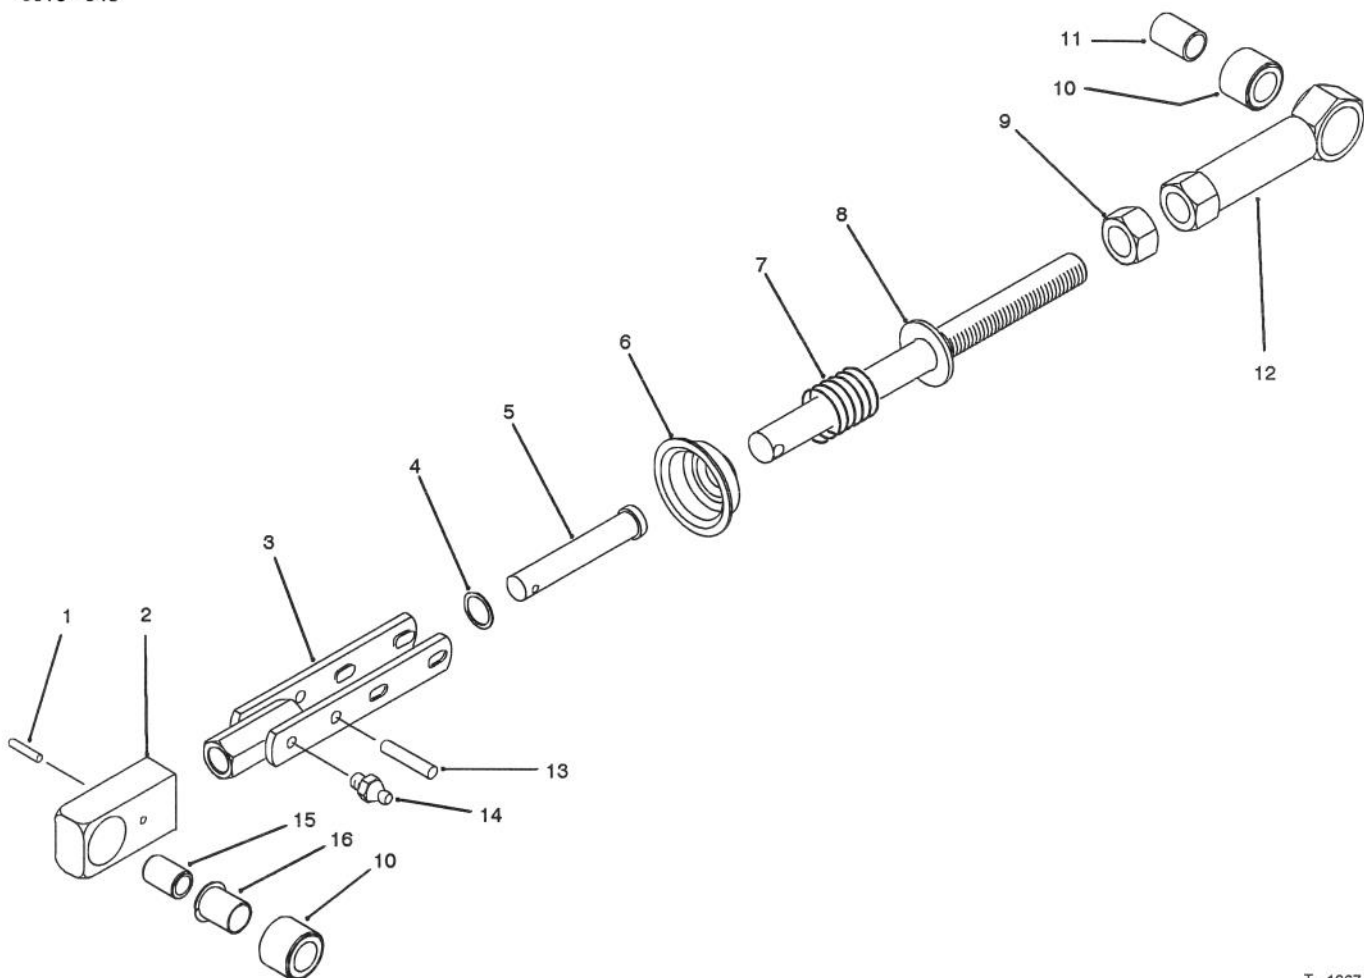


T-1367

BELT TENSIONER ASSEMBLY NO. 83-7900

Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1
2	76-0350	Housing - Bushing	1
3	83-7930	Yoke	1
4	3256-54	Washer - Flat	1
5	283-55	Pin - Clevis	1
6	76-0360	Cup - Retainer	1
7	76-0410	Spring - Compression	1
8	83-7910	Rod	1

Ref. No.	Part No.	Description	No. Used
9	3218-6	Nut - Jam	1
10	56-9510	Bushing Assembly	2
11	256-173	Bushing - Sleeve	1
12	76-0300	Housing - Bushing	1
13	32121-9	Pin - Roll	1
14	302-5	Fitting - Grease	1
15	76-0390	Spacer	1
16	56-9520	Bushing - Nyliner	1

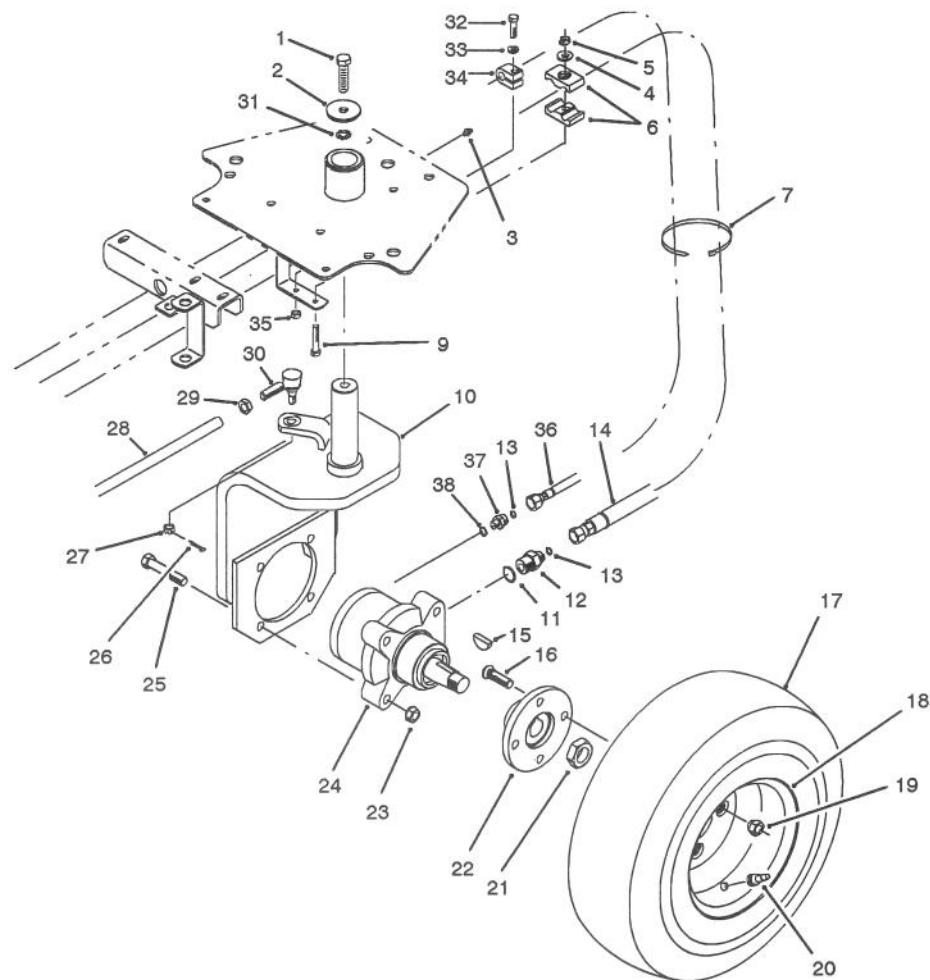 


T-1369

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-6	Screw - Cap Hex. Hd.	1
2	75-7730	Spacer	1
3	302-5	Fitting - Grease	1
4	3256-3	Washer - Flat	1
5	3296-29	Nut - Flange Lock	1
6	56-7976	Clamp - Hose	2
7	3290-379	Tie - Cable	1
9	322-9	Screw - Cap Hex. Hd.	1
10	83-7270	Fork - Caster	1
11	237-80	Seal - O-Ring	2
12	340-141	Fitting - Hydraulic Straight (Incl. Ref. #11 & 13)	2
13	237-22	Seal - O-Ring	3
14	80-4090	Hose - Hydraulic	2
15	3257-15	Key - Woodruff	1
16	10-6830	Stud - Drive	4
17	231-127	Tire	1
18	242-76	Rim	1
19	242-50	Nut - Lug	4
20	232-47	Valve - Stem	1
21	26-3790	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
22	10-6870	Hub - Wheel	1
23	3296-23	Nut - Flange Lock	4
24	66-5291	Hydraulic Motor Assembly (Incl. Ref. #15)	1
25	325-11	Screw - Cap Hex. Hd.	4
26	3272-6	Pin - Cotter	1
27	32136-4	Nut - Castle	1
28	61-2070	Rod - Steering	1
29	3220-12	Nut - Jam	1
30	21-0140	Rod End Assembly (Incl. Ref. #27)	1
31	3255-2	Washer - Lock	1
32	321-9	Screw - Cap Hex. Hd.	1
33	3256-22	Washer - Flat	1
34	85-5200	Clamp	1
35	3296-42	Nut - Lock	1
36	85-5190	Hose - Hydraulic	1
37	340-88	Fitting - Hydraulic Straight (Incl. Ref. #13 & 38)	1
38	237-78	Seal - O-Ring	1

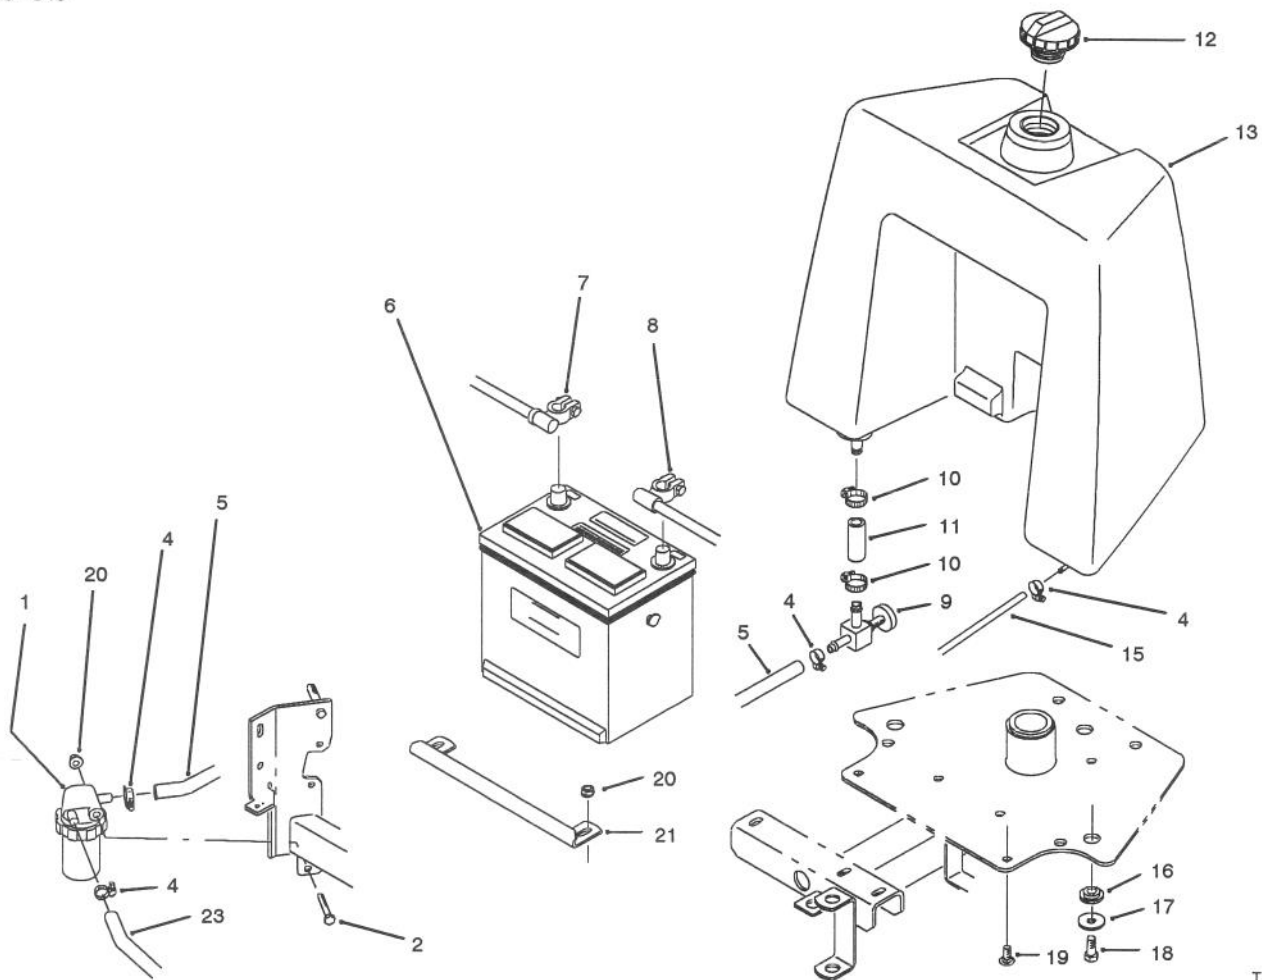 

T-1370


FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	130366040	Fitter - Fuel	1	12	70-8621	Cap - Fuel Tank	1
2	321-12	Screw - Cap Hex. Hd.	1	13	83-8720	Tank - Fuel	1
4	2412-108	Clamp - Hose	4	15	75-4703	Hose - Fuel	1
5	63-7620	Hose - Fuel	1	16	240-11	Grommet	3
6	83-9000	Battery	1	17	63-8410	Washer - Flat	3
7	83-9220	Cable - Battery Pos.	1	18	323-5	Screw - Cap Hex. Hd.	3
8	83-9210	Cable - Battery Neg.	1	19	3230-1	Screw - Carriage	2
9	56-2520	Valve - Fuel Shut-Off	1	20	32128-44	Nut - Flange Lock	3
10	2412-36	Clamp - Hose	2	21	83-9240	Hold-Down - Battery	1
11	56-2230	Hose - Fuel	1	23	23-2140	Hose - Fuel	1

†Obtain from your local Perkins Dealer.

SPECIAL TOOLS

 
MOTOR SEAL INSTALLATION TOOL NO. *TOR192660

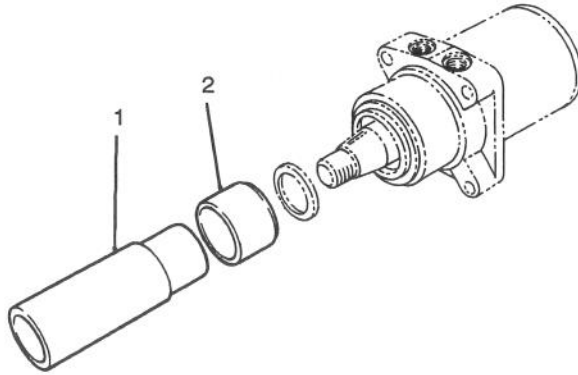

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver – Seal	1
2		Holder – Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

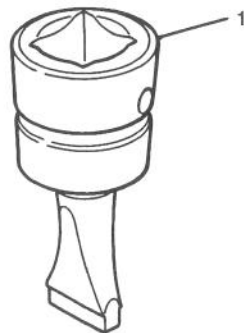

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *TOR634310

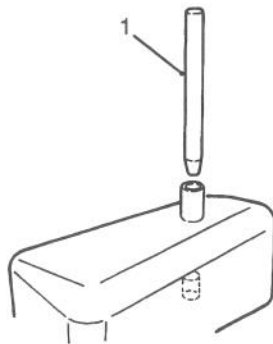

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug – Reservoir	1

 BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

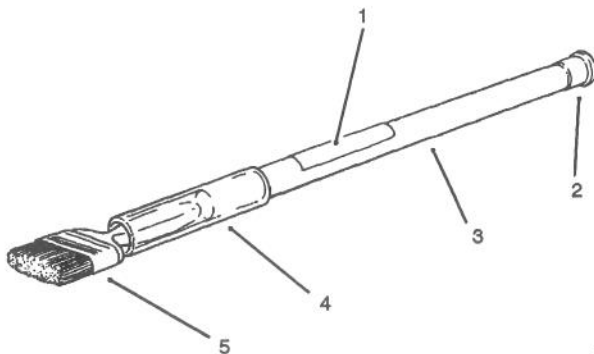


T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.


SPECIAL TOOLS

 GAUGE BAR ASSEMBLY NO. *TOR138199

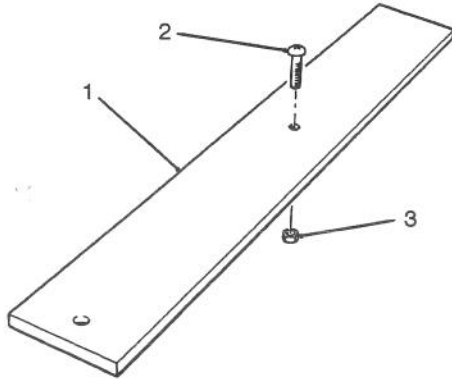

T-1151

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar - Height-Of-Cut	1
2	32122-2	Screw - Round Hd.	1
3	3219-14	Nut - Hex.	1

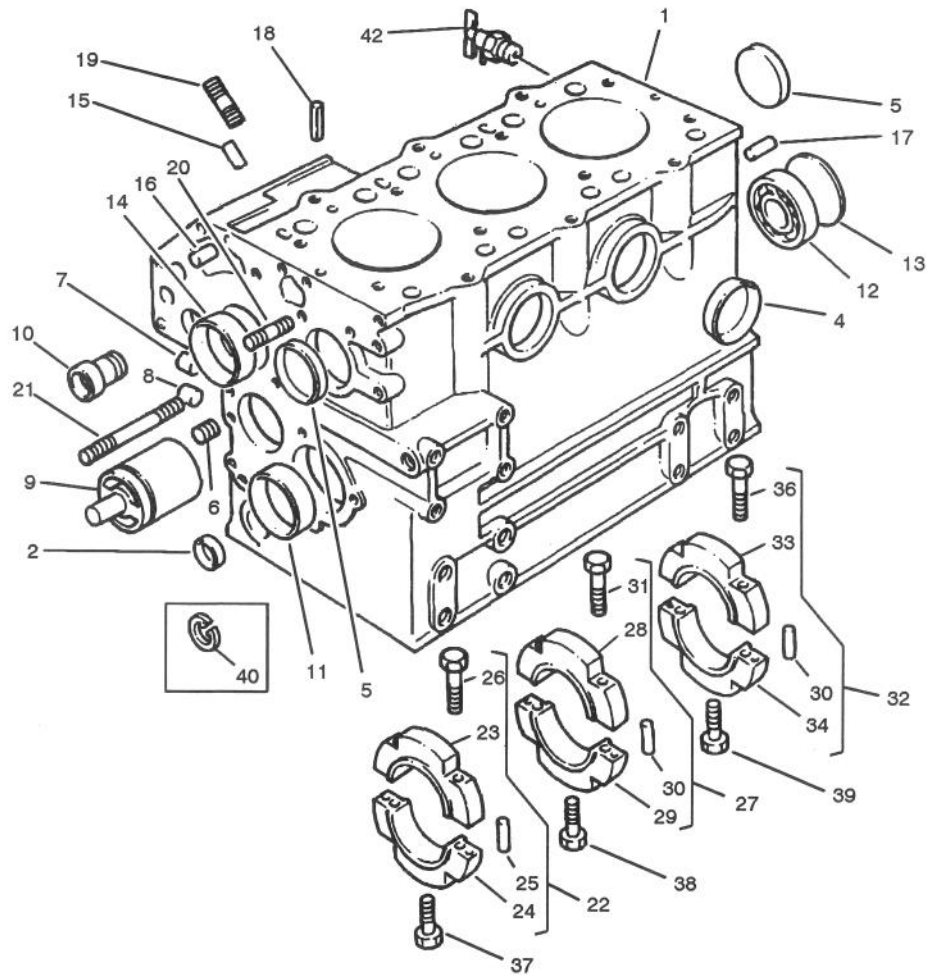 


T-1377

CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110186030	Kit - Cylinder Block	1	23		Cap	1
2	064200015	Plug	1	24		Cap	1
4	064200040	Plug	2	25	030500612	Dowel	2
5	064200040	Plug	2	26	010810840	Screw	2
6	198466050	Plug	3	27	110156230	Holder	
7	198466010	Plug	4			Incl. Ref. #28 & 29)	1
8	198466070	Plug	2	28		Cap	1
9	165296160	Shaft	1	29		Cap	1
10	198517090	Bush	1	30	030500612	Dowel	2
11	198517300	Bush	1	31	010810840	Screw	2
*	198517304	Bush -.25mm	1	32	110156240	Holder	
*	198517307	Bush -.50mm	1			Incl. Ref. #33 & 34)	1
12	040106203	Bearing - Ball	1	33		Cap	1
13	064100045	Plug	1	34		Cap	1
14	042303015	Bush	1	36	010810840	Screw	2
15	030500512	Dowel	2	37	011310850	Screw	1
16	030500512	Dowel	2	38	011310850	Screw	1
17	030500820	Dowel	2	39	010700845	Screw	2
18	030309005	Pin	2	40	036509005	Circlip	1
19	012100620	Stud	2	41	064200018	Plug	2
20	012100635	Stud	1	42	198736052	Cock	1
21	012100660	Stud	1	*	110006330	Short Block Assembly	1
22	110156220	Holder		*	195906610	Kit - Gasket	1
		Incl. Ref. #23 & 24)	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

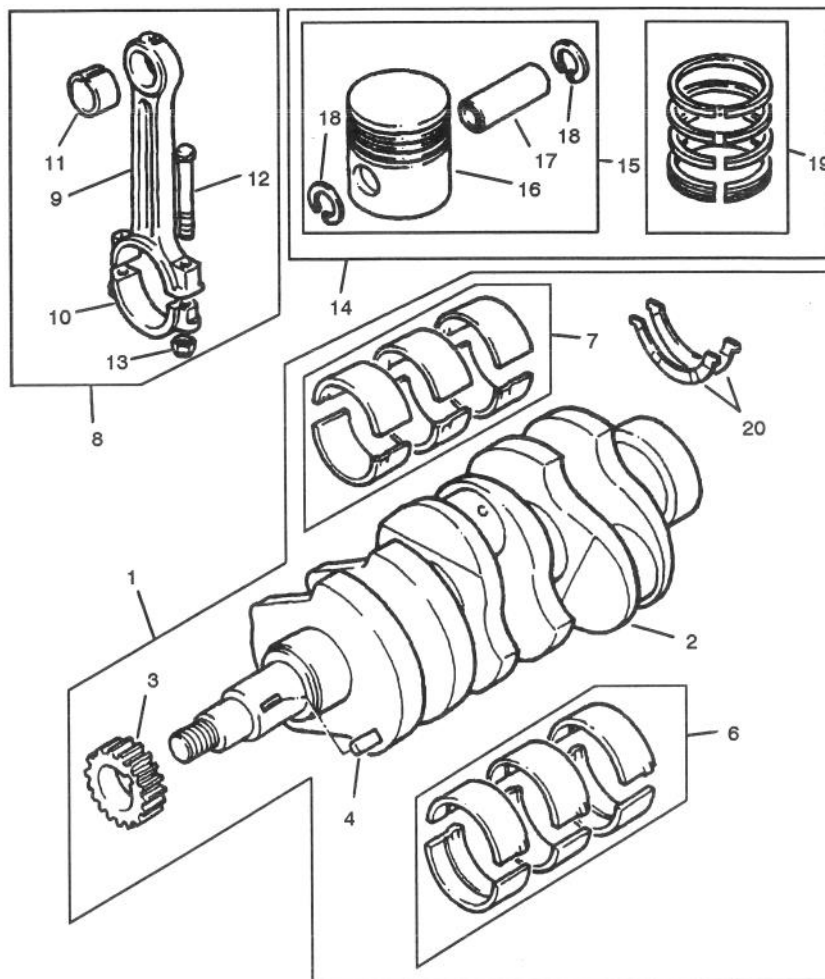


T-1378

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	115236020	Kit - Crankshaft Incl. Ref. #2)	1	13	020109103	Nut	2
2		Crankshaft	1	14	115016670	Kit - Piston Std.	3
3	115276210	Gear	1	*	115016674	Kit - Piston +0.5mm	1
4	030509020	Key	1	*	115016677	Kit - Piston +1.0mm	1
6	198586030	Kit - Bearing Std.	1	15	115016770	Kit - Piston Std. Incl. Ref. #16)	1
*	198586034	Kit - Bearing -0.25mm	1	*	115016774	Kit - Piston +0.5mm Incl. Ref. #16)	1
*	198586037	Kit - Bearing -0.50mm	1	*	115016777	Kit - Piston +1.0mm Incl. Ref. #16)	1
7	198586060	Kit - Bearing Std.	1	16		Piston	1
*	198586064	Kit - Bearing -0.25mm	1	17	115326260	Pin	1
*	198586067	Kit - Bearing -0.50mm	1	18	03500019	Circlip	2
8	115026240	Connecting Rod Assembly Incl. Ref. # 9 & 10)	3	19	115107260	Kit - Piston Ring	1
9		Rod	1	*	115107263	Kit - Piston Ring +0.5mm	1
10		Cap	1	*	115107265	Kit - Piston Ring +1.0mm	1
11	198517325	Bush	1				
12	115176130	Screw	2				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

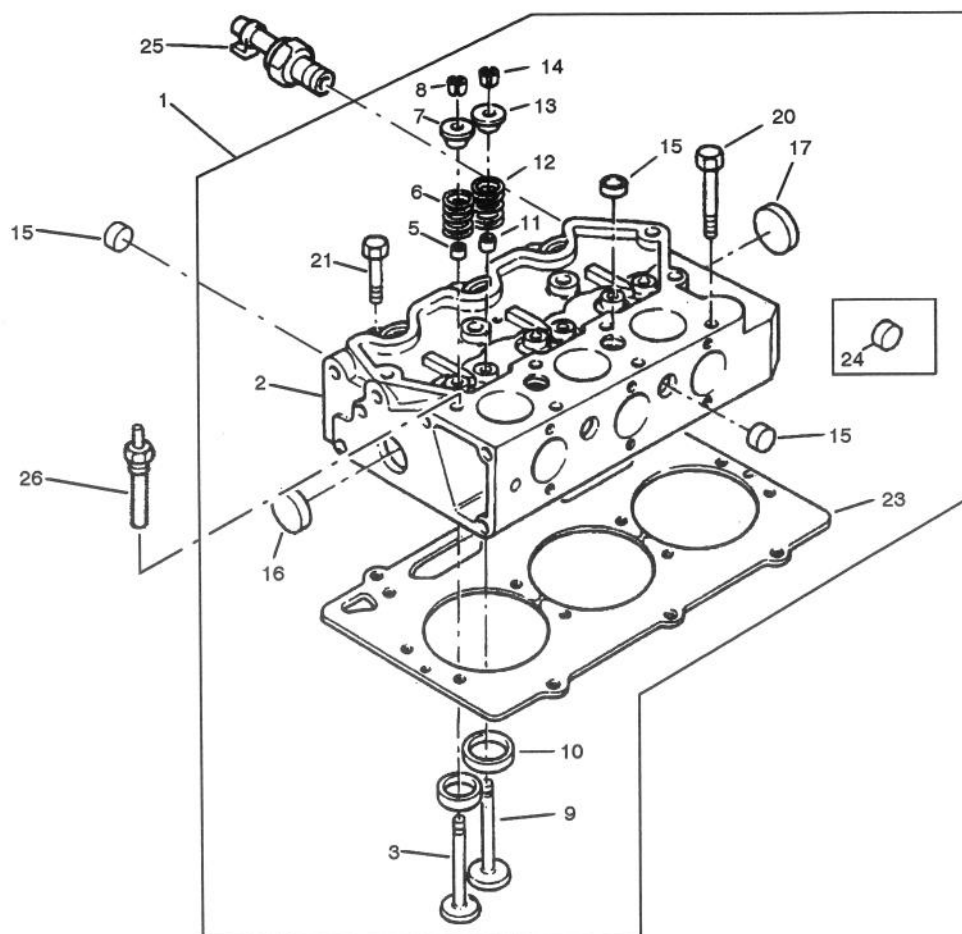


T-1379

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111016911	Kit - Cylinder Head	1	14	120226080	Cotter	6
2	111086030	Kit - Cylinder Head	1	15	198466070	Plug	4
3	120166280	Valve Inlet	3	16	064200022	Plug	3
5	120406080	Seal	3	17	064200022	Plug	3
6	198217070	Spring	3	20	111136340	Screw	11
7	120186100	Cap	3	21	111136350	Screw	3
8	120226080	Cotter	6	23	111147100	Gasket + 1.2mm	1
9	120176290	Valve Exhaust	3	*	111147110	Gasket + 1.3mm	1
10	110136290	Insert	3	24	064200018	Plug	2
11	120406080	Seal	3	25	185246060	Switch - Oil Pressure	1
12	198217070	Spring	3	26	385720101	Sender - Temperature	1
13	120186100	Cap	3				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

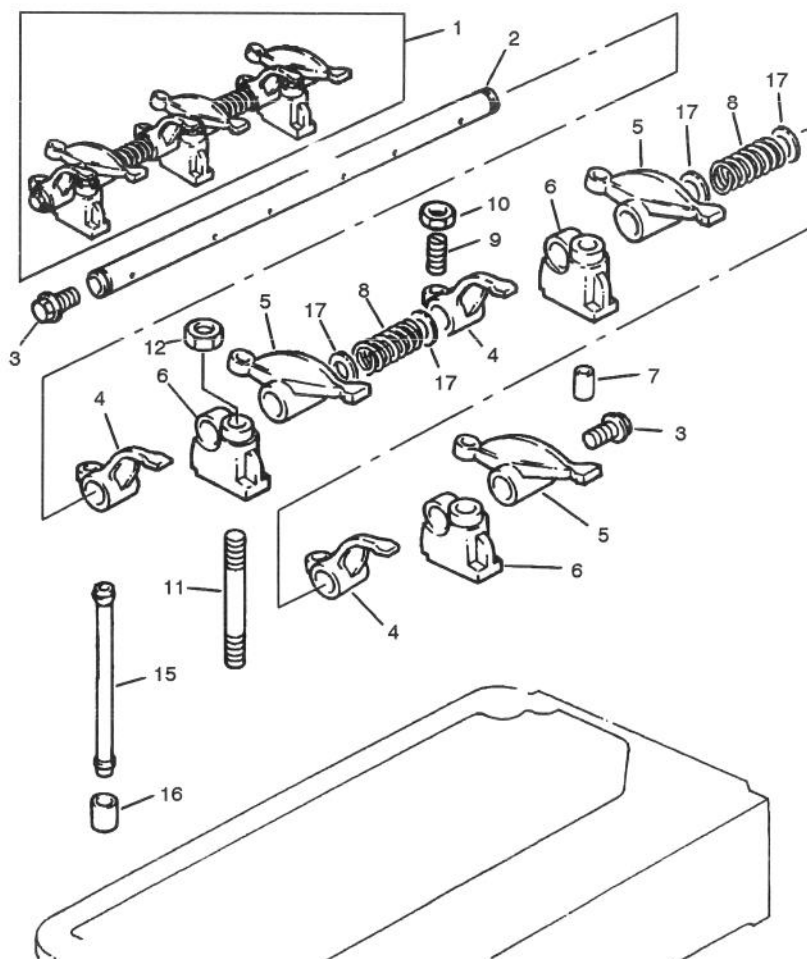


T-1380

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	120336020	Rocker Shaft Assembly	1	9	199486220	Adjusting Screw	6
2	120316190	Shaft	1	10	020109076	Nut	6
3	064609006	Plug	2	11	012109177	Stud	3
4	120356120	Lever	3	12	023100008	Nut	3
5	120356110	Lever	3	15	120456240	Rod	6
6	120346170	Bracket	3	16	120116100	Tappet	6
7	030300325	Pin	1	17	199280280	Washer	4
8	198217080	Spring	2				

 NOTE: Obtain replacement parts from your local Perkins Dealer.

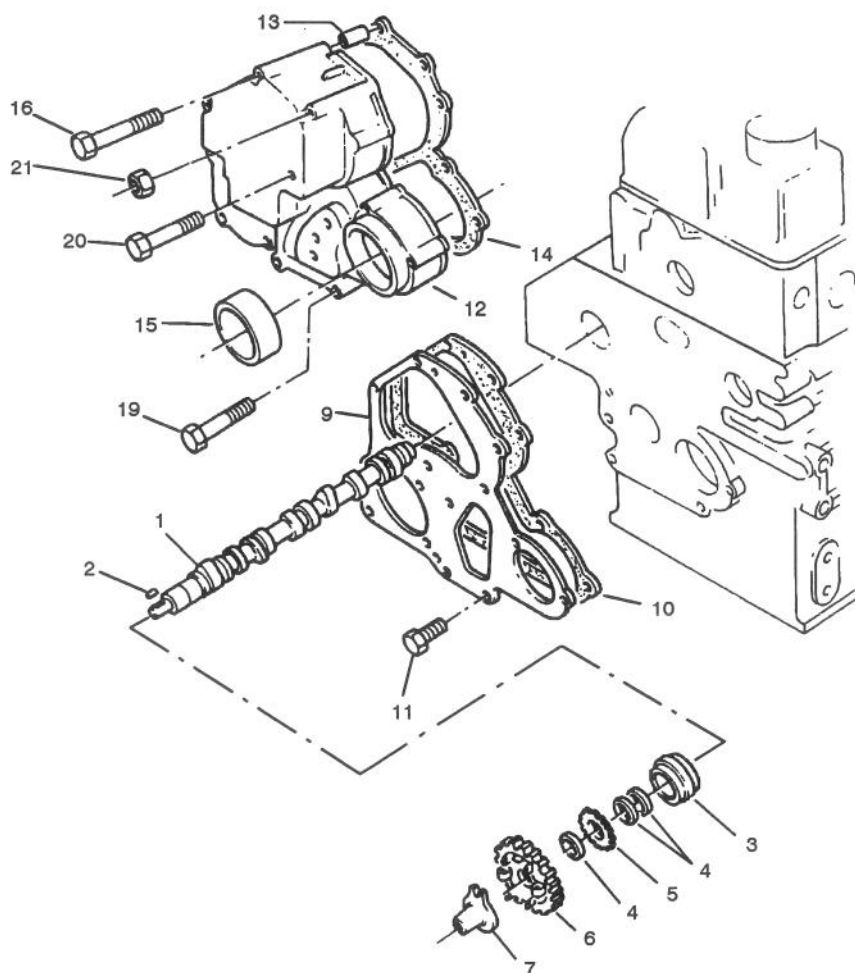


T-1381

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	120026120	Camshaft	1	11	011300612	Bolt	3
2	034100508	Key	1	12	165106130	Cover	1
3	040109059	Bearing	1	13	030300414	Pin	1
4	199216230	Spacer	3	14	165996410	Joint	1
5	120736081	Gear	1	15	198636090	Seal	1
6	120016030	Gear	1	16	011300680	Screw	2
7	125256120	Tappet	1	19	011300640	Screw	4
9	165166260	Plate	1	20	011300660	Screw	2
10	165996400	Joint	1	21	023100006	Nut	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

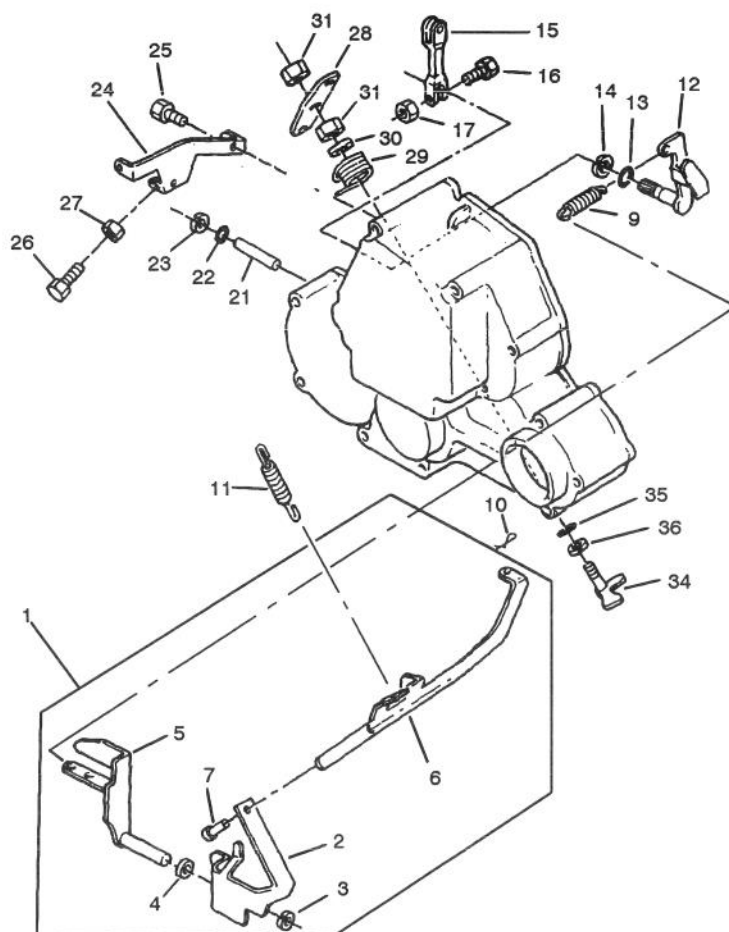


T-1382

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	125046140	Lever (Incl. Ref. #2, 6 & 7)	1
2		Lever	1
3	036800008	Circlip	1
4	026200010	Washer	1
5	125406071	Lever	1
6		Link	1
7		Pin	1
9	198217220	Spring	1
10	031100004	Pin	1
11	198217420	Spring	1
12	125156170	Arm	1
13	052100070	O Ring	1
14	036800008	Circlip	1
15	125416020	Lever	1
16	010110630	Screw	1

Ref. No.	Part No.	Description	No. Used
17	023100006	Nut	1
21	125116130	Shaft	1
22	052100030	Seal - O-Ring	1
23	036800005	Circlip	1
24	125976120	Stay	1
25	011300618	Screw	2
26	010109264	Screw	2
27	023100006	Nut	2
28	125176080	Lever	1
29	198216760	Spring	1
30	026200008	Washer	1
31	020300008	Nut	2
34	125156180	Arm	1
35	052100050	O Ring	1
36	036800006	Circlip	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

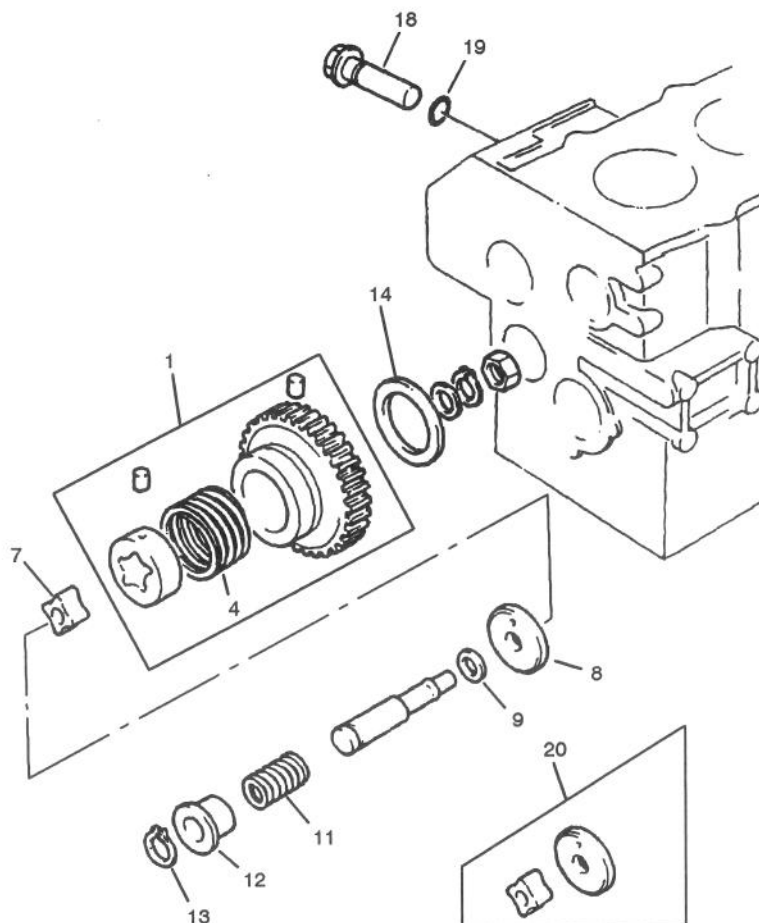


T-1383

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	165026110	Gear	1	11	198216720	Spring	1
4	198216821	Spring	1	12	199236540	Collar	1
7	140166130	Rotor	1	13	036800010	Circlip	1
8	140116140	Cover	1	14	199266180	Washer	1
9	199286150	Shim +0.10mm	1	18	140036120	Valve	1
*	199286160	Shim +0.15mm	1	19	052100150	Seal - O-Ring	1
*	199286170	Shim +0.20mm	1	20	140186010	Repair Kit	1
*	199286180	Shim +0.50mm	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

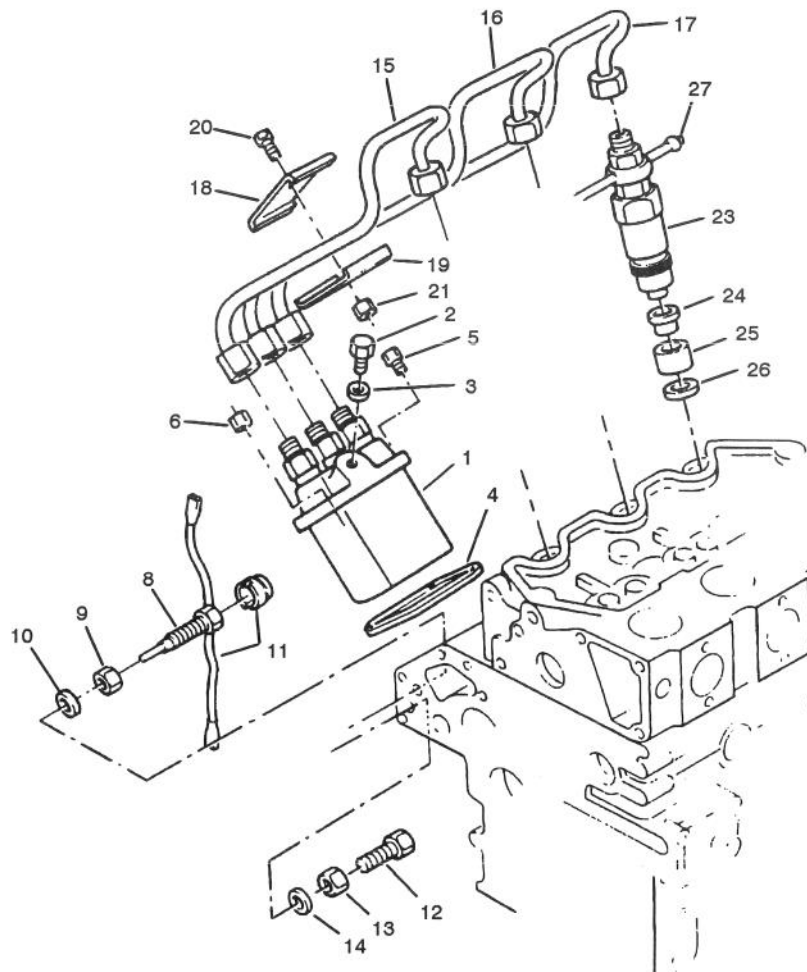

T-1384


FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pump	1
2	131236201	Screw	1
3	025100006	Washer	1
4	131437310	Shim +0.2mm	1
*	131437320	Shim +0.3mm	1
*	131437330	Shim +0.4mm	1
*	131437340	Shim +0.5mm	1
*	131437340	Shim +1.0mm	1
5	011300620	Screw	2
6	023100006	Nut	2
8	131046160	Screw	1
9	023109002	Nut	1
10	025100010	Washer	1
11	198236030	Wire	1
12	010109270	Screw	1

Ref. No.	Part No.	Description	No. Used
13	023109002	Nut	1
14	025100010	Washer	1
15	131507010	Injection Pipe No. 1 Cyl.	1
16	131507020	Injection Pipe No. 2 Cyl.	1
17	131507030	Injection Pipe No. 3 Cyl.	1
18	199106020	Damper	2
19	199106020	Damper	2
20	010100625	Screw	2
21	023100006	Nut	2
23	131406340	Atomiser	3
24	131426200	Gasket	3
25	111316280	Insert	3
26	198996090	Seal	3
27	131606260	Pipe	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

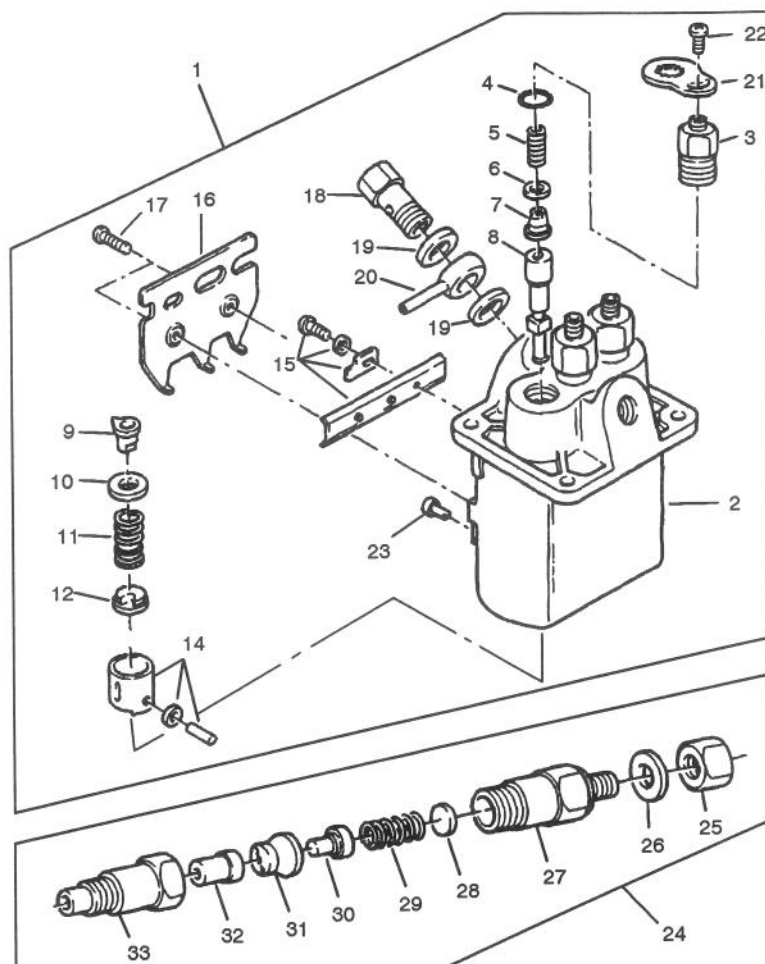


T-1385

INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pipe	1	15	131296636	Rack	1
2	131296665	Housing	1	16	131296650	Bracket	1
3	131196120	Holder	3	17	131136320	Screw	2
4	131226170	Seal - O-Ring	3	18	131236190	Bolt	1
5	131176430	Spring	3	19	131246180	Washer	2
6	131186050	Gasket	3	20	131246130	Nipple	1
7	131156160	Valve	3	21	131296662	Plate	3
8	131116410	Element	3	22	131136330	Screw	3
9	131296951	Sleeve	3	23	131296651	Pin	3
10	131296620	Seat	3	24	131406340	Atomiser	3
11	131176440	Spring	3	25	131446069	Nut	1
12	131296621	Seat	3	26	131426210	Washer	1
*	131296622	Plate +1.85mm	1	27	131446065	Body	1
*	131296623	Plate +1.90mm	1	28	131437250	Shim +0.90mm	1
*	131296625	Plate +2.00mm	1	*	131437251	Shim +0.925mm	1
*	131296626	Plate +2.05mm	1	*	131437252	Shim +0.95mm	1
*	131296627	Plate +2.10mm	1	*	131437253	Shim +0.975mm	1
*	131296628	Plate +2.15mm	1	*	131437354	Shim +1.00mm	1
*	131296629	Plate +2.20mm	1	*	131437255	Shim +1.025mm	1
*	131296630	Plate +2.25mm	1	*	131437256	Shim +1.05mm	1
*	131296631	Plate +2.30mm	1	*	131437257	Shim +1.075mm	1
*	131296632	Plate +2.35mm	1	*	131437258	Shim +1.10mm	1
*	131296633	Plate +2.40mm	1	*	131437259	Shim +1.125mm	1
*	131296634	Plate +2.45mm	1	*	131437260	Shim +1.15mm	1
*	131296635	Plate +2.50mm	1	*	131437261	Shim +1.175mm	1
14	131256120	Tappet	3	*	131437262	Shim +1.20mm	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

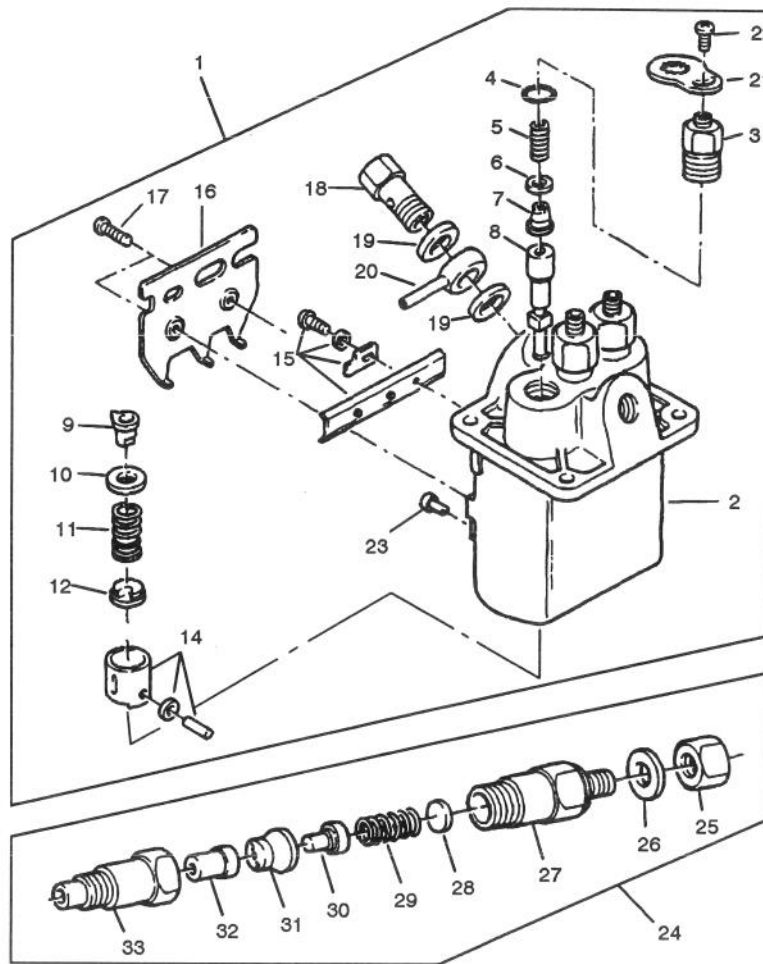


T-1385

INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	131437263	Shim +1.225mm	1	29	131446066	Spring	1
*	131437264	Shim +1.250mm	1	30	131446070	Pin	1
*	131437265	Shim +1.275mm	1	31	131446068	Spacer	1
*	131437266	Shim +1.30mm	1	32	131416150	Nozzle	1
*	131437267	Shim +1.325mm	1	33	131446067	Nut	1
*	131437268	Shim +1.35mm	1				
*	131437269	Shim +1.375mm	1				
*	131437270	Shim +1.40mm	1				
*	131437271	Shim +1.425mm	1				
*	131437272	Shim +1.45mm	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

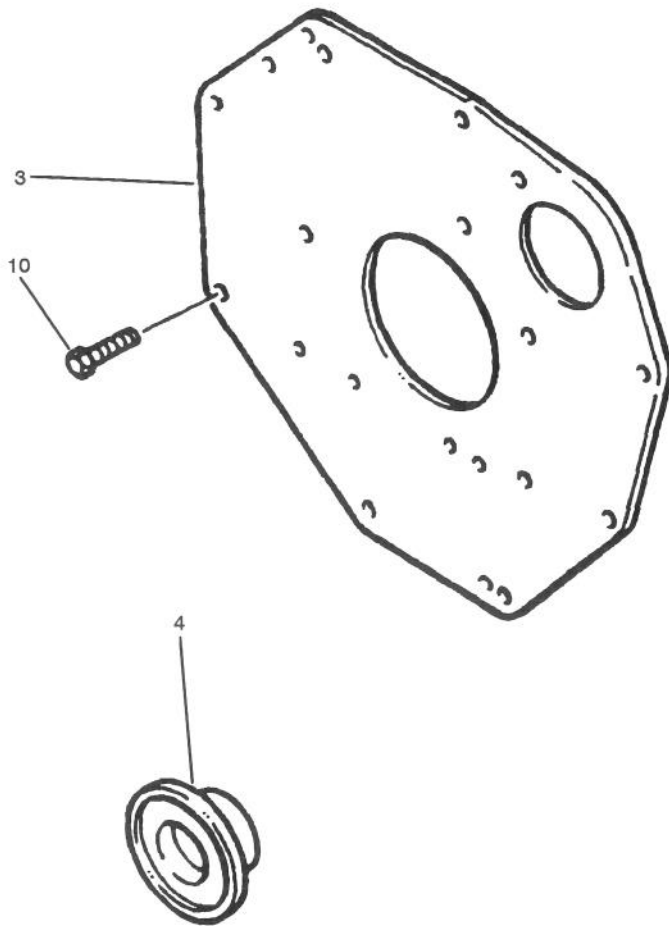


T-1386

FLYWHEEL HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	110366700	Plate	1
4	198636080	Seal	1

Ref. No.	Part No.	Description	No. Used
10	011310816	Screw	10

 NOTE: Obtain replacement parts from your local Perkins Dealer.

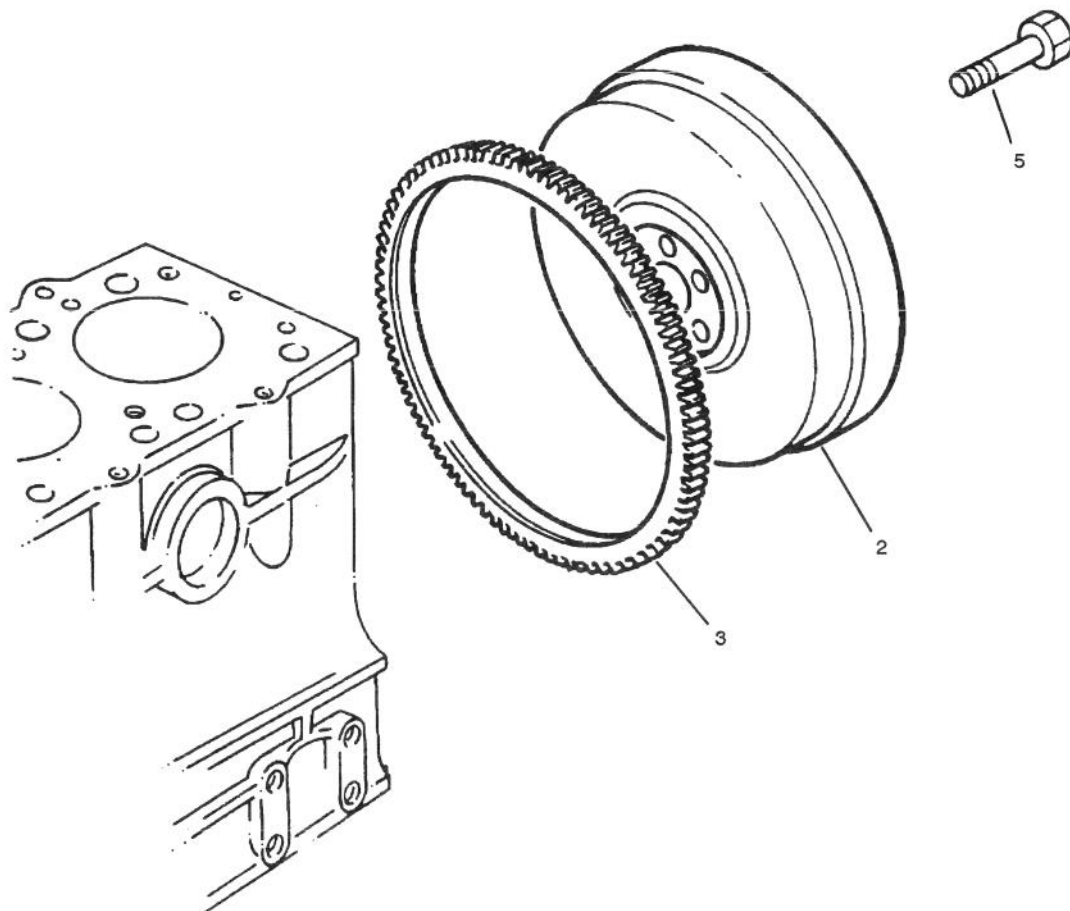


T-1387

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	115356921	Flywheel	1
3	115376150	Gear – Ring	1

Ref. No.	Part No.	Description	No. Used
5	010109330	Screw	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

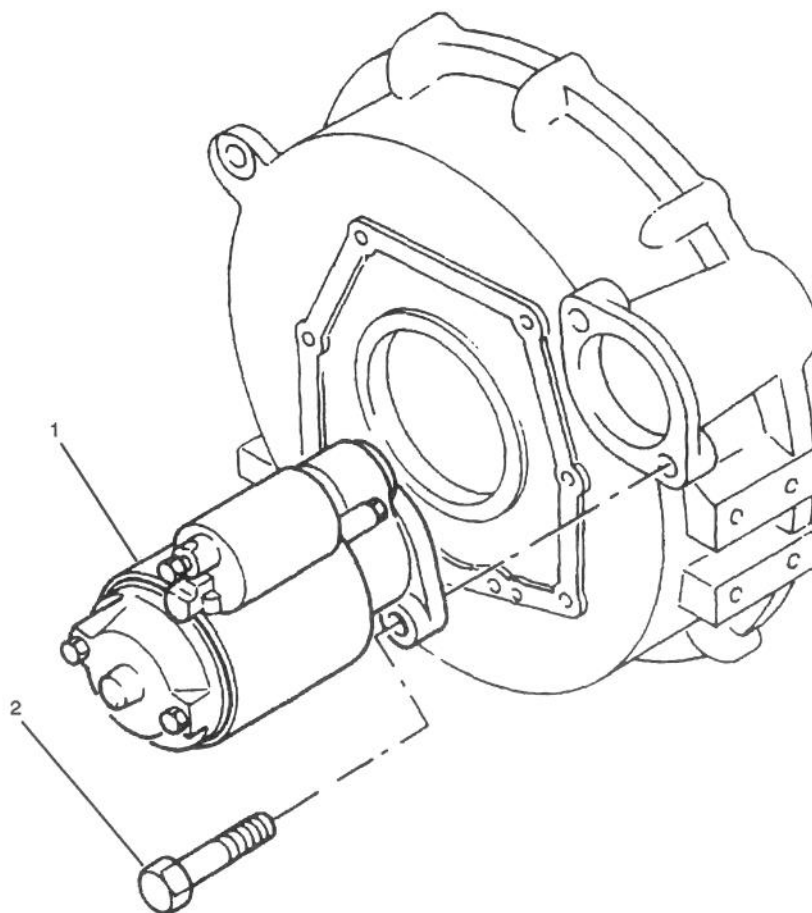


T-1388

STARTER INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1

Ref. No.	Part No.	Description	No. Used
2	011601020	Screw	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

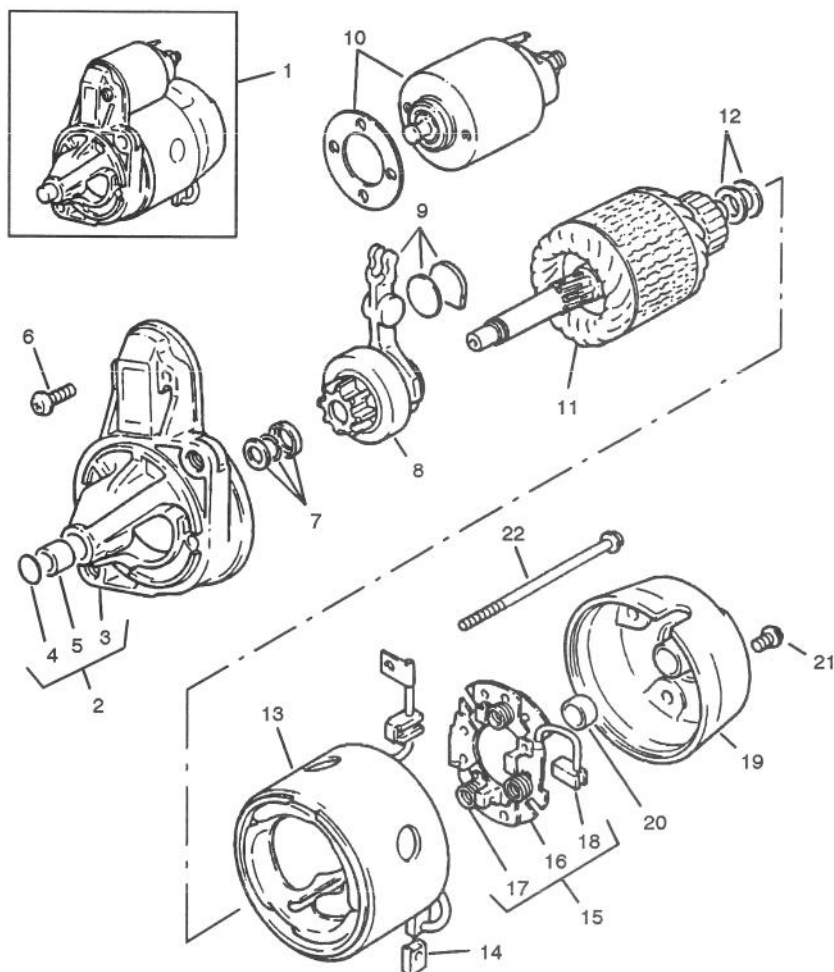


T-1389

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1	12	185846475	Washer	1
2	185846471	Cover (Incl. Ref. #3 & 4)	1	13	185846476	Yoke	1
3		Cover	1	14	185416400	Brush	1
4		Ring	1	15	185416390	Holder (Incl. Ref. #16)	1
5	185846472	Bush	2	16		Holder	1
6	185846468	Screw	2	17	185886010	Spring	1
7	185846473	Washer	1	18	185416410	Brush	1
8	185866240	Pinion	1	19	185846477	Cover	1
9	185846469	Lever	1	20	185846478	Bush	1
10	185816220	Switch	1	21	185846468	Screw	3
11	185846474	Armature	1	22	185846470	Screw	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

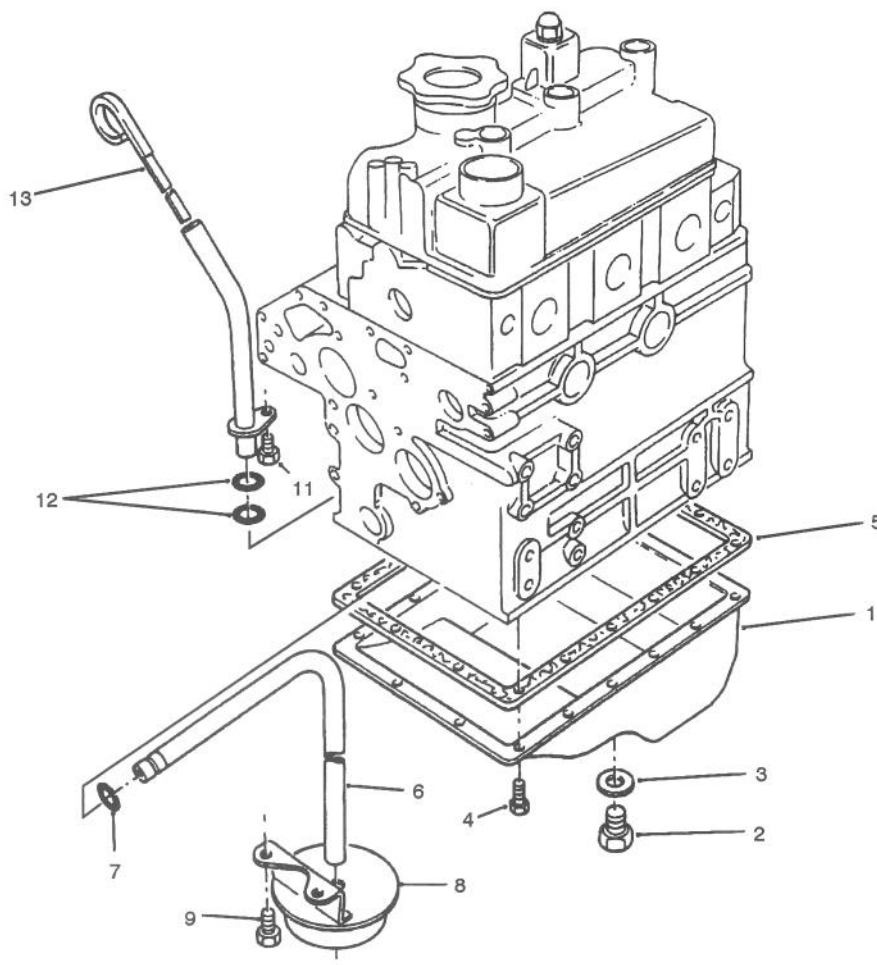


T-1390

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1	8	140406310	Strainer	1
2	010401212	Plug	2	9	011300612	Bolt	2
3	025100012	Washer	2	11	011300612	Bolt	1
4	010109235	Screw	18	*	011300812	Screw	1
5	110996590	Gasket	1	12	052100100	Seal - O-Ring	2
6	140986590	Pipe	1	13	198416371	Dipstick	1
7	052109076	Seal - O-Ring	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

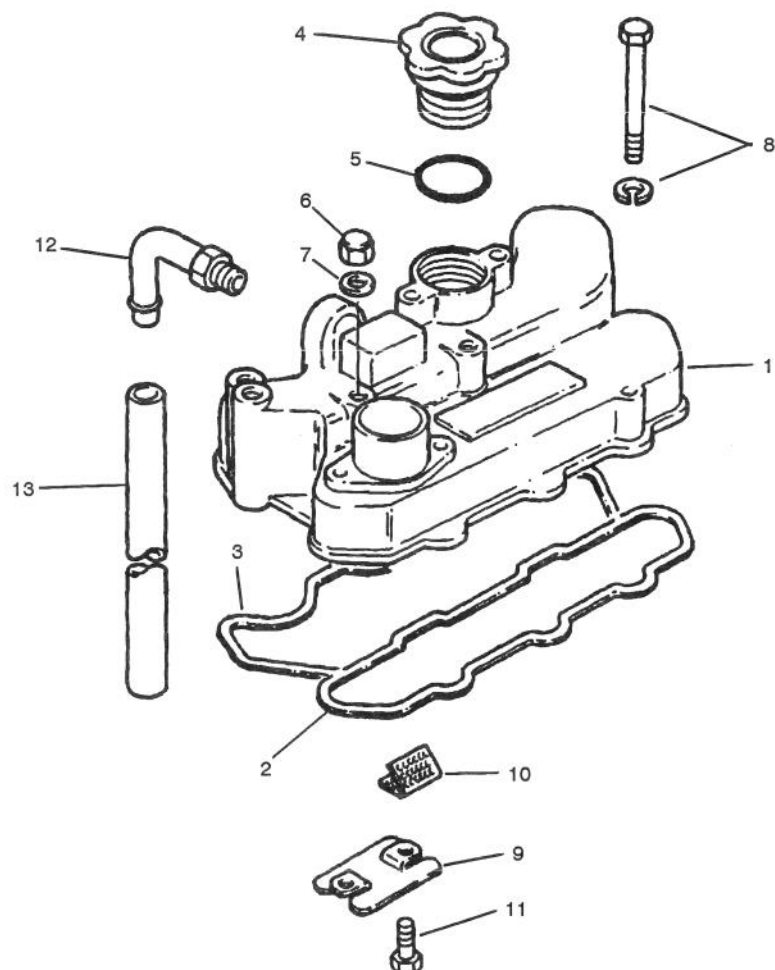


T-1391

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111216630	Cover	1	7	198996060	Washer	3
*	111026371	Cover	1	8	011300650	Screw	2
2	111996330	Gasket	1	9	110666110	Plate	1
3	111996060	Gasket	1	10	110666120	Gauze	1
4	198436010	Cap	1	11	011300612	Bolt	2
5	052100400	Seal	1	12	110986500	Pipe	1
6	024500008	Nut	3	13	068122560	Hose	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

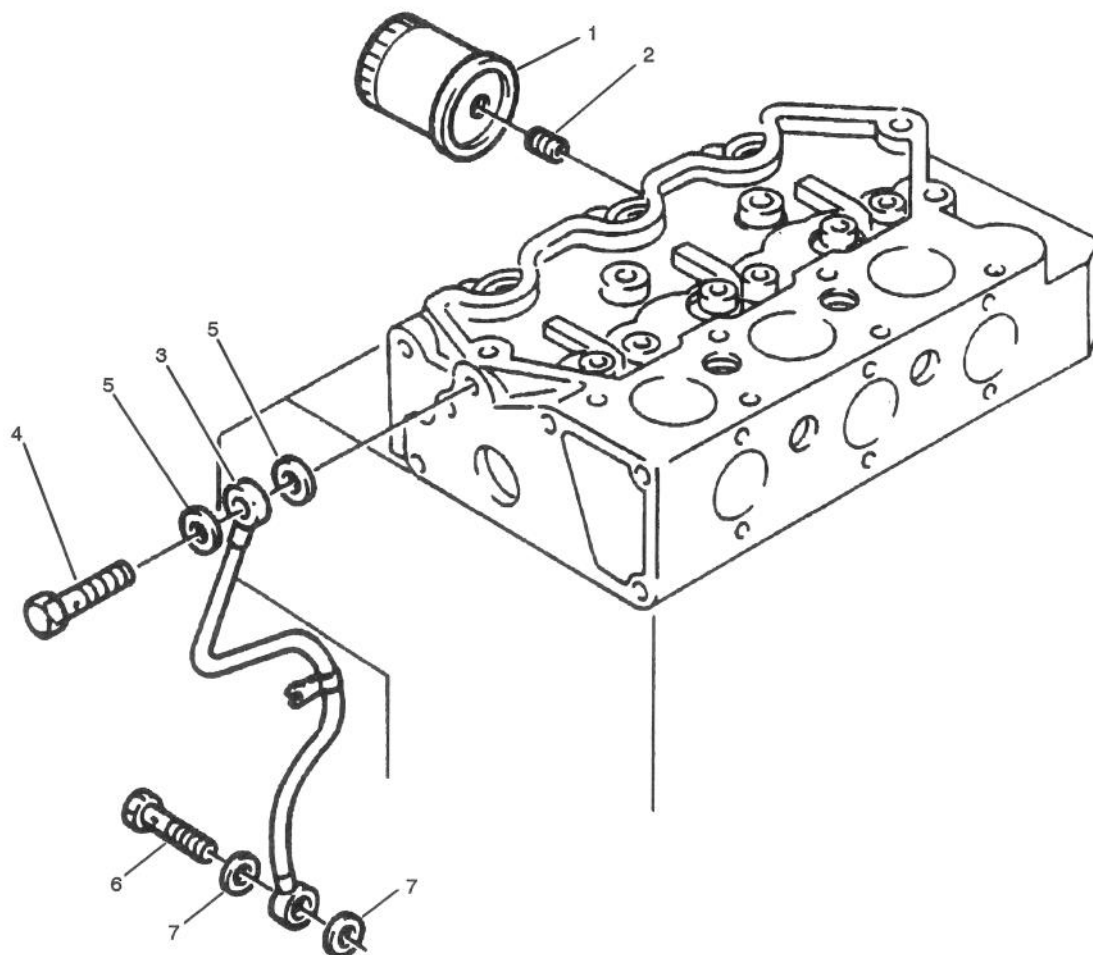


T-1392

OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	140516190	Filter – Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	1

Ref. No.	Part No.	Description	No. Used
5	198996060	Washer	2
6	198486780	Bolt	1
7	198996060	Washer	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

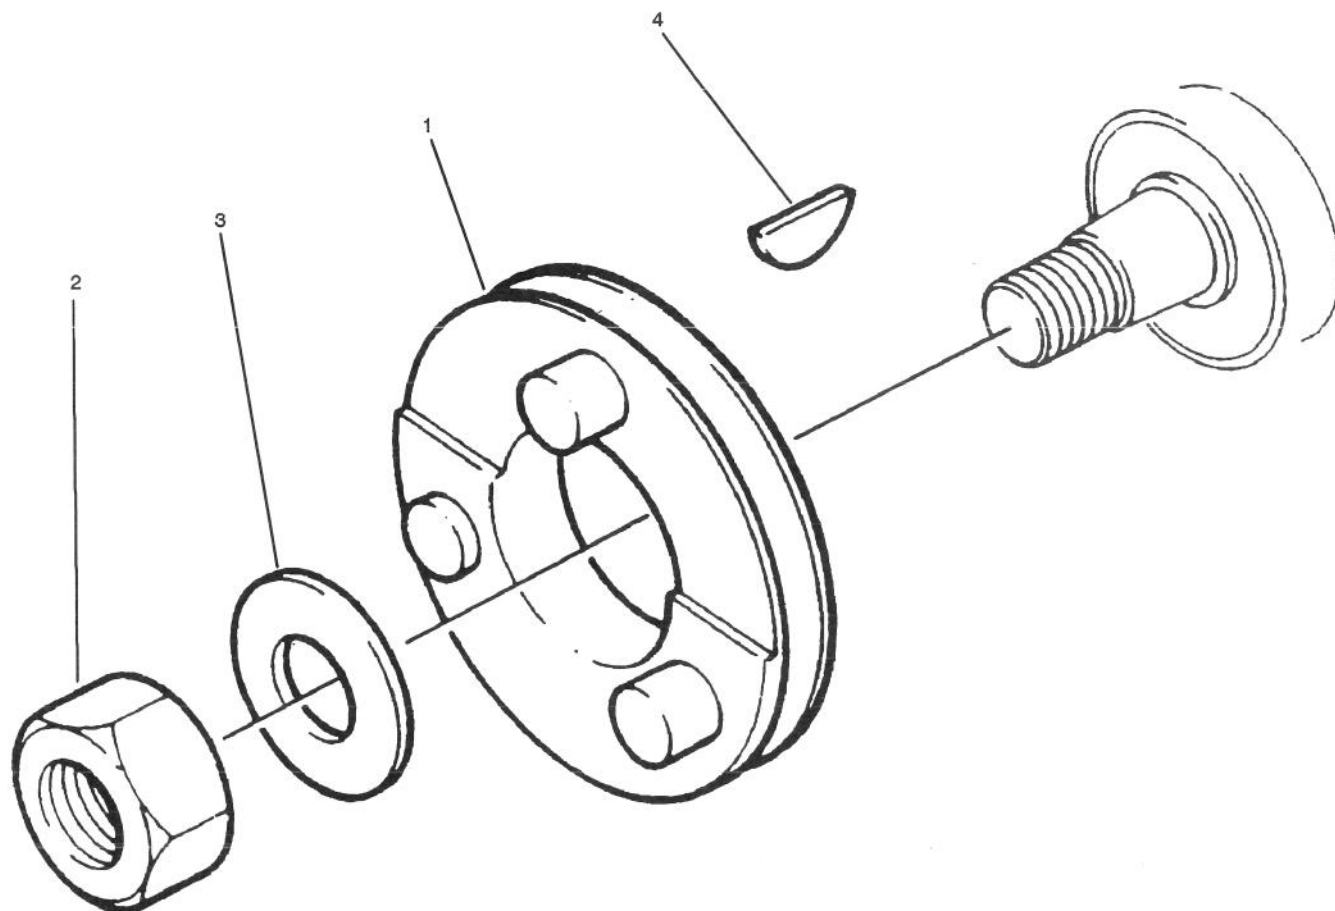


T-1393

FRONT DRIVE PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115397550	Pulley	1
2	020800018	Nut	1

Ref. No.	Part No.	Description	No. Used
3	026200018	Washer	1
4	134100508	Key	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

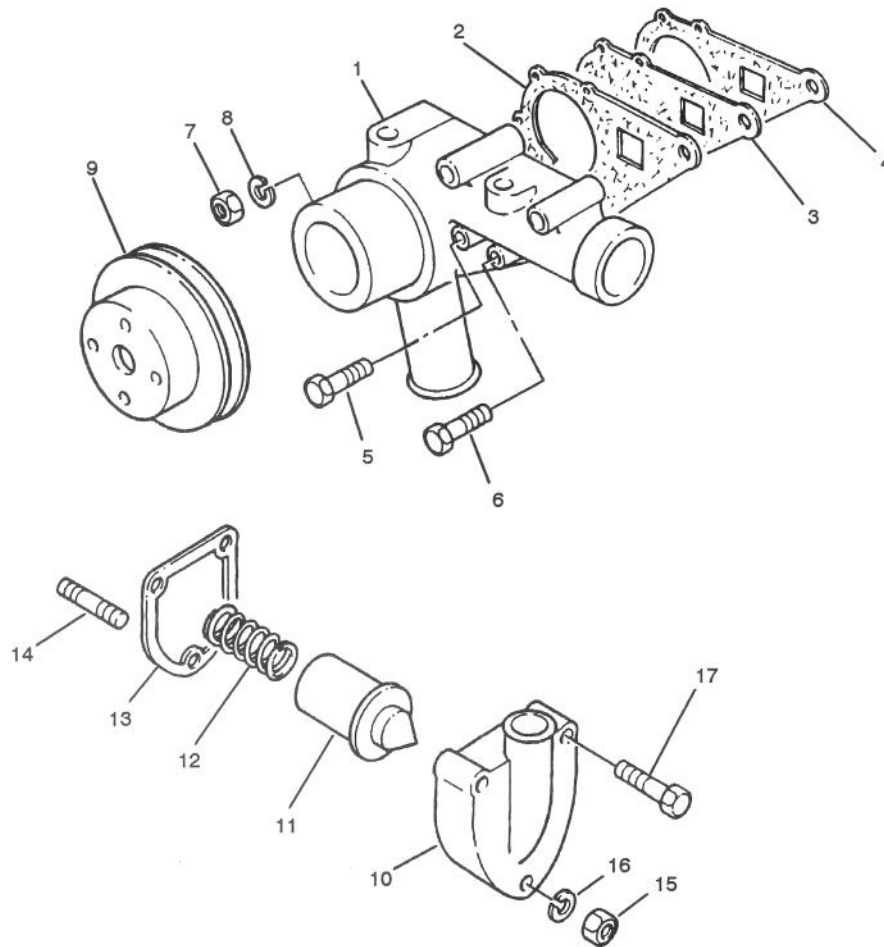


T-1394

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	145016840	Pump – Water	1	10	145216160	Housing	1
2	145996430	Gasket	1	11	145206061	Thermostat	1
3	145146270	Backplate	1	12	198217090	Spring	1
4	145996420	Gasket	1	13	145996440	Gasket	1
5	011300635	Screw	3	14	012100650	Stud	1
6	011300650	Screw	4	15	023100006	Nut	1
7	023100006	Nut	1	16	027100006	Washer	1
8	027100006	Washer	1	17	011300650	Screw	2
9	145336490	Pulley	1				

 NOTE: Obtain replacement parts from your local Perkins Dealer.

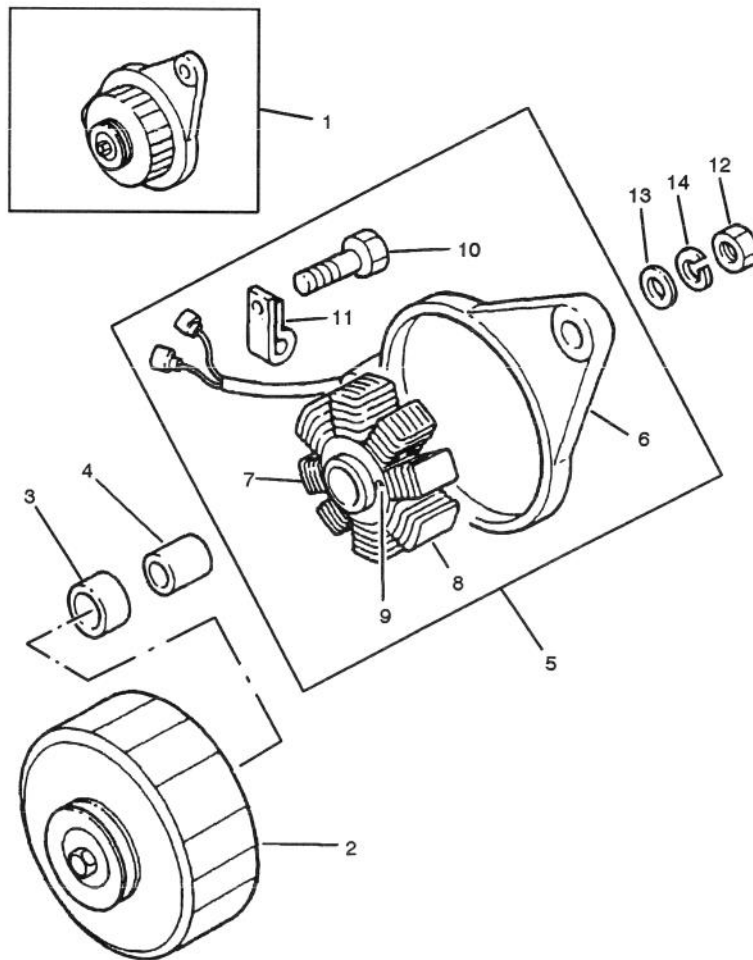


T-1397

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1	8	185426218	Stator	1
2	185446219	Pulley	1	9	015140425	Screw	2
3	040126201	Bearing	1	10	015140408	Screw	1
4	199236510	Collar	1	11	185446220	Clip	1
5	185446217	Plate	1	12	020210010	Nut	1
6	185716200	Plate	1	13	026100010	Washer	1
7	040126201	Bearing	1	14	027100010	Washer	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

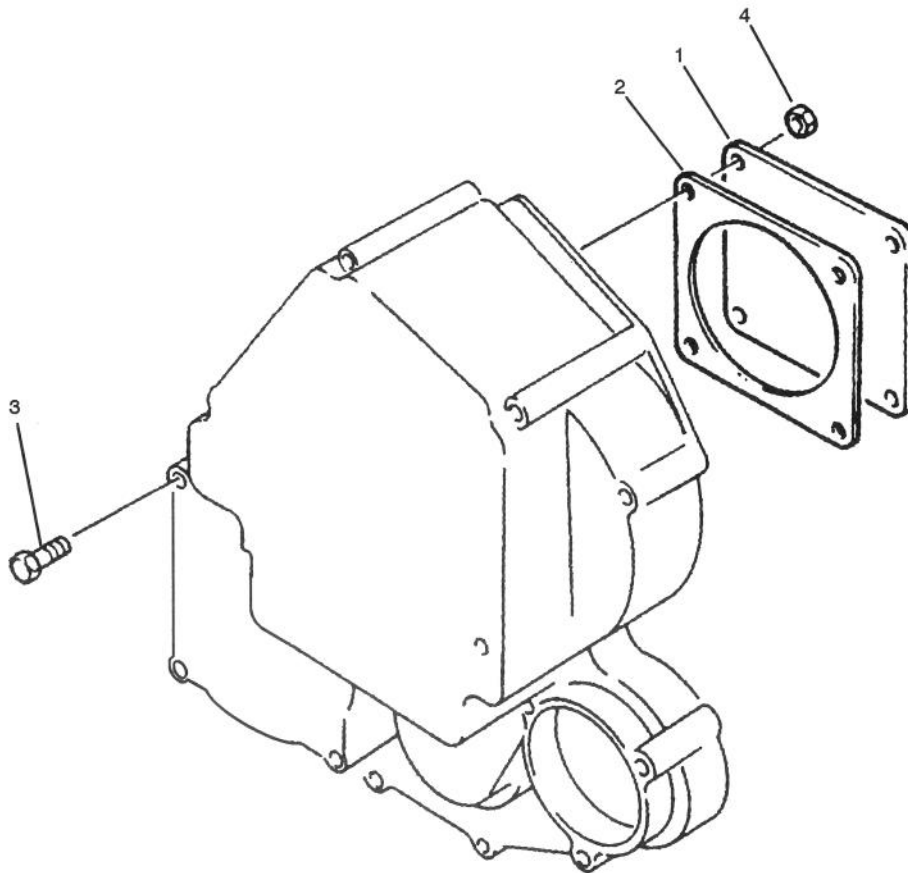


T-1398

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010110850	Screw	4
4	023100008	Nut	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

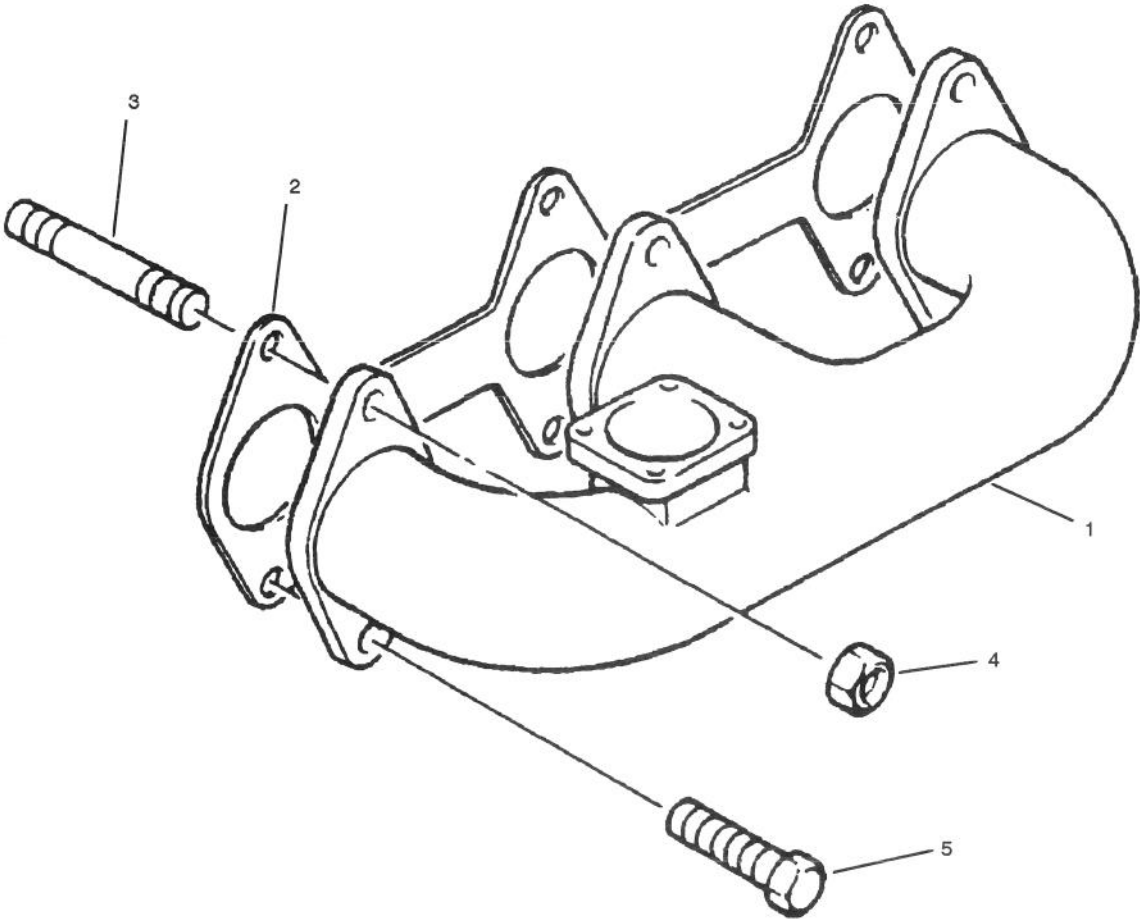


T-1399

EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	135616630	Manifold – Exhaust	1
2	135996520	Gasket	1
3	012110625	Stud	3

Ref. No.	Part No.	Description	No. Used
4	023100006	Nut	3
5	011310625	Screw	3

 NOTE: Obtain replacement parts from your local Perkins Dealer.

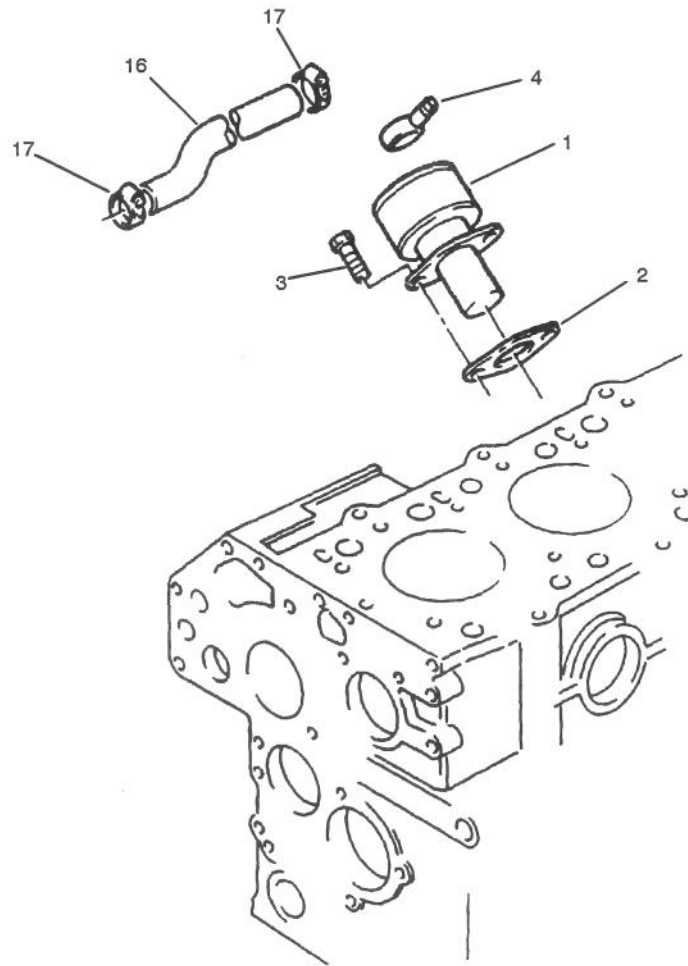


T-1400

LOW PRESSURE FUEL SYSEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Pump – Lift	1	4	198486840	Connection	2
2	130996070	Gasket	1	16	068209084	Hose	1
3	011140616	Screw	2	17	067100015	Clip	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

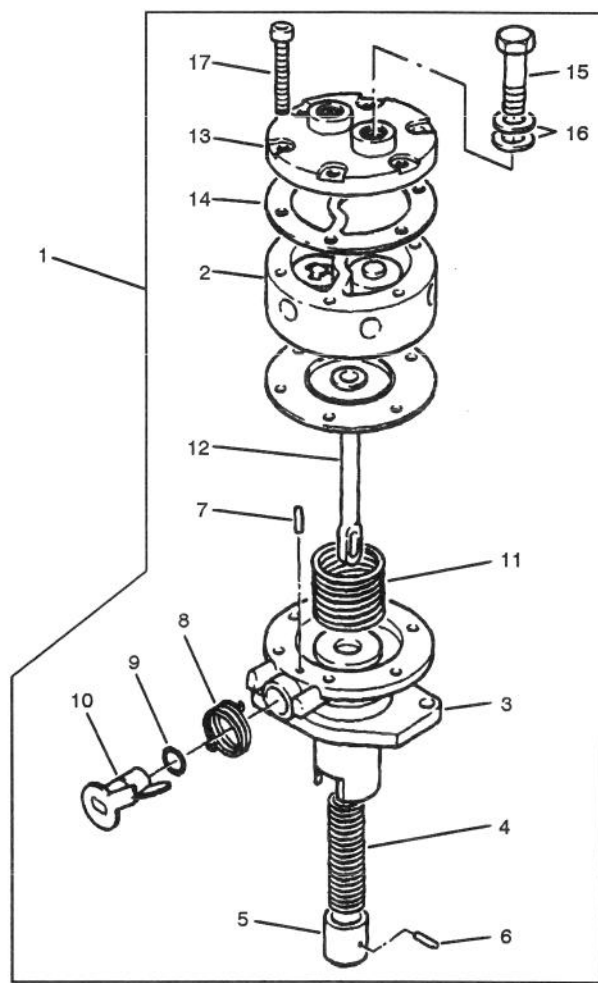


T-1401

LIFT PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Lift Pump Assembly (Incl. Ref. #2)	1	9	131226180	Seal - O-Ring	1
2		Body	1	10	130516086	Lever	1
3	130516080	Body	1	11	130516087	Spring	1
4	130516081	Spring	1	12	130516084	Diaphragm	1
5	130516082	Plunger	1	13	130516090	Cap	1
6	130516085	Pin	1	14	130516089	Gasket	1
7	130516088	Pin	1	15	130516092	Bolt	2
8	130516083	Spring	1	16	130516069	Washer	4
				17	130516091	Screw	6

 NOTE: Obtain replacement parts from your local Perkins Dealer.

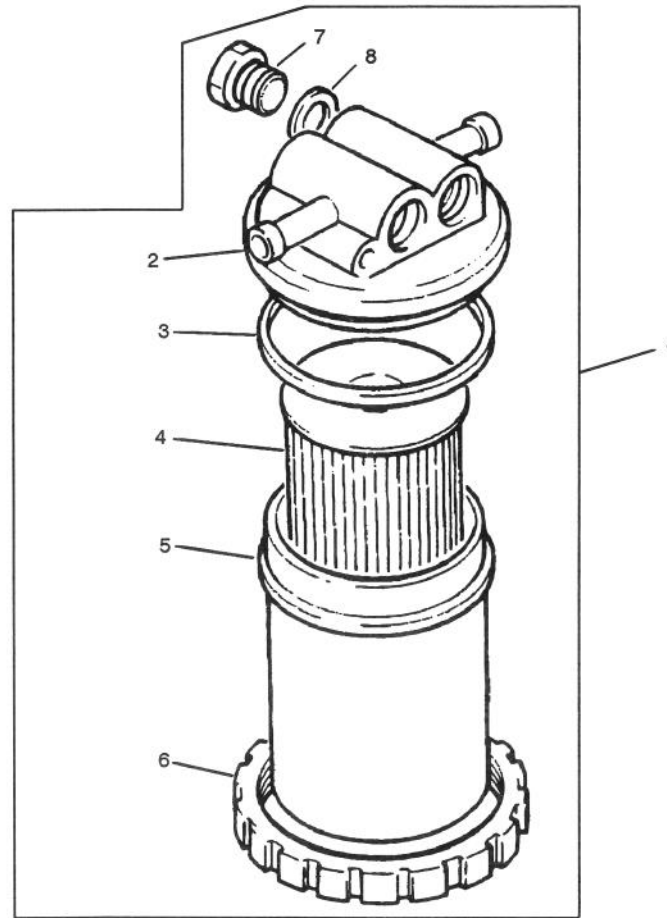


T-1402

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130306041	Fuel Filter Assembly (Incl. Ref. #2)	1	5	130336031	Container	1
2		Head	1	6	130446090	Seal - O-Ring	1
3	052100440	Seal - O-Ring	1	7	130446080	Plug	2
4	130366040	Element	1	8	130326120	Washer	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

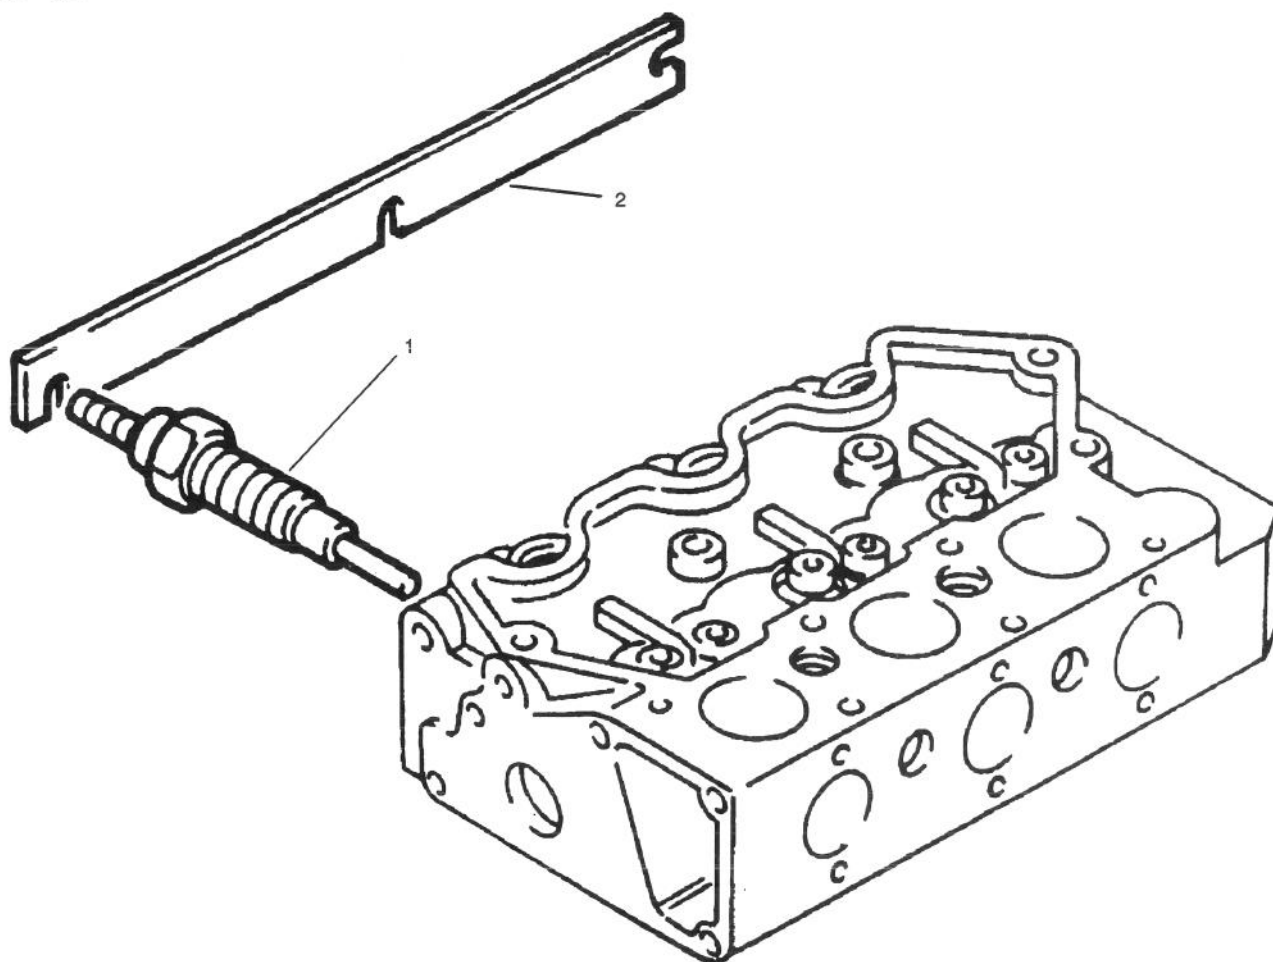


T-1403

COLD START SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185366060	Heater	3

Ref. No.	Part No.	Description	No. Used
2	185376170	Bar	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

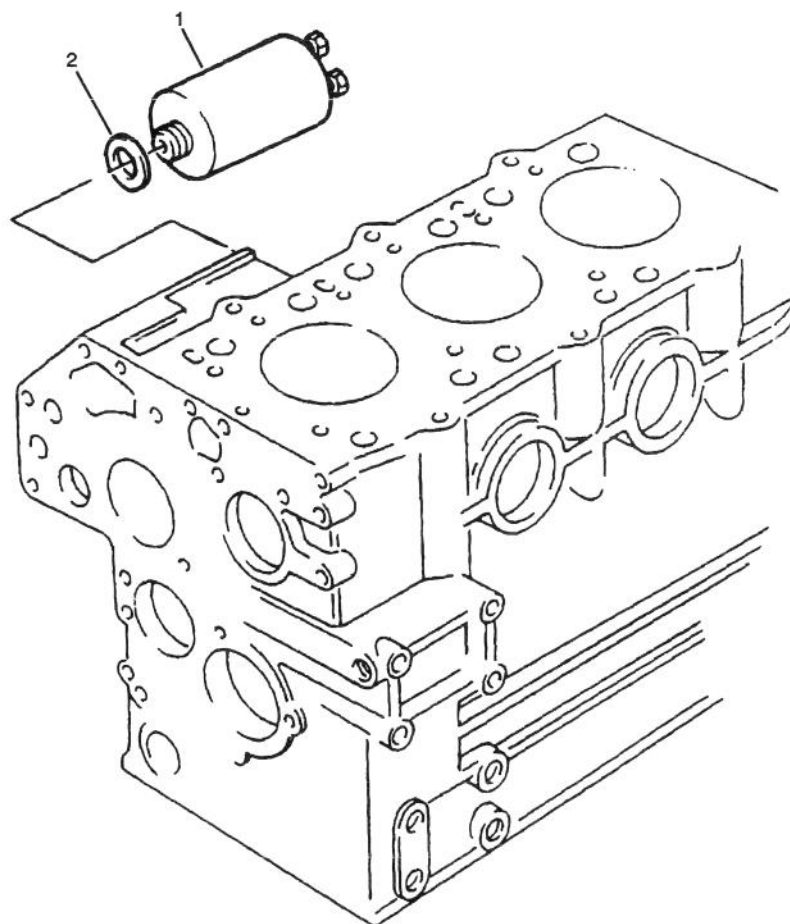


T-1405

THROTTLE STOP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185206082	Solenoid	1

Ref. No.	Part No.	Description	No. Used
2	025100016	Washer	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

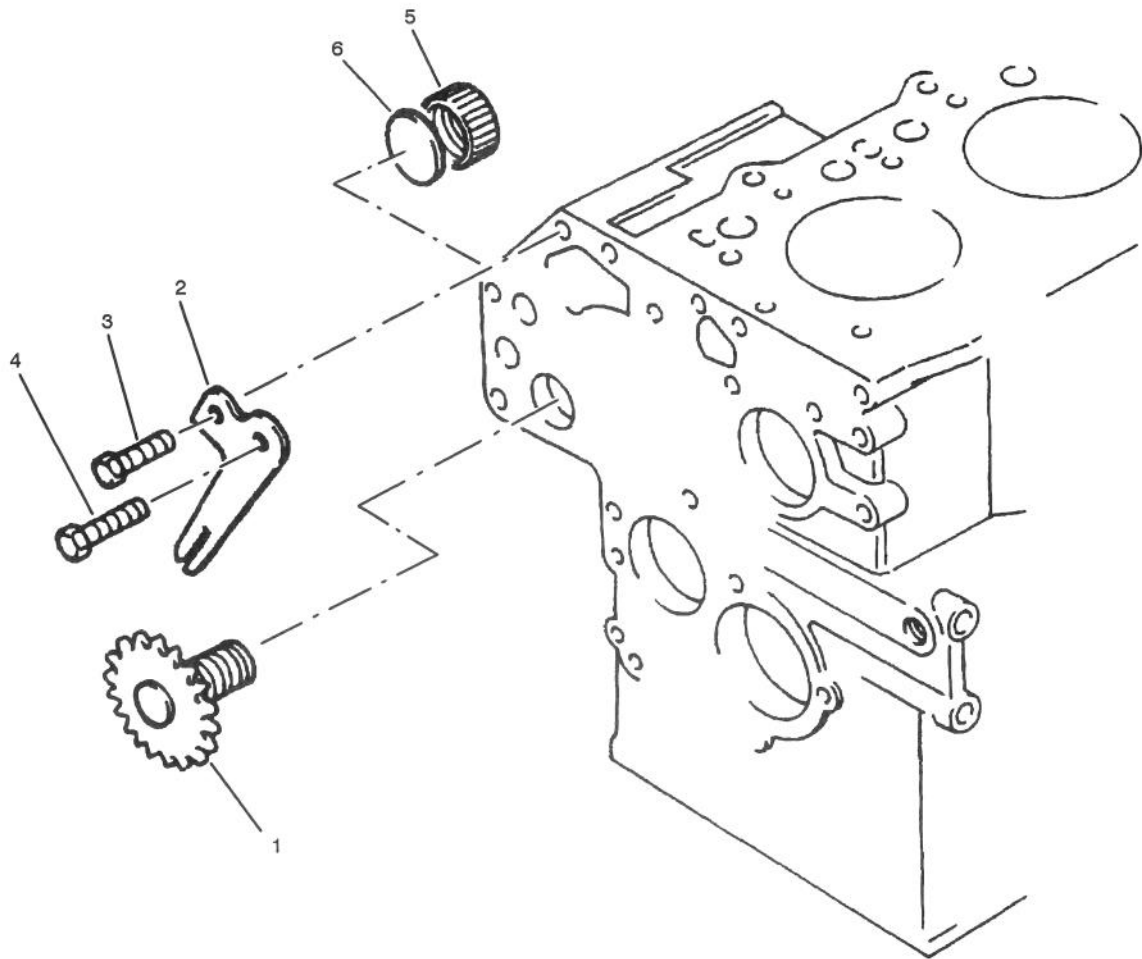


T-1406

RECORDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120076070	Shaft	1
2	199566651	Plate	1
3	011310612	Screw	1

Ref. No.	Part No.	Description	No. Used
4	010700610	Screw	1
5	199376230	Cap	1
6	120996060	Seal	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

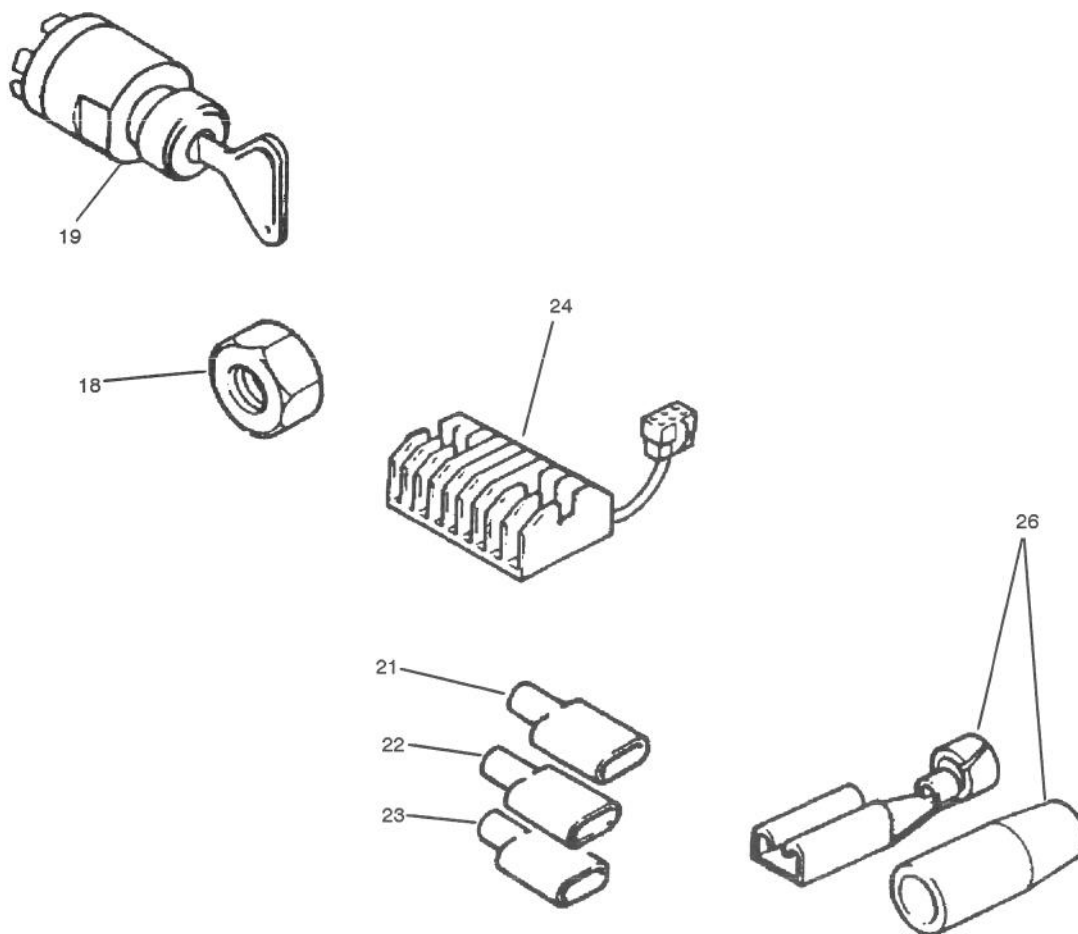

T-1407

ELECTRICAL COMPONENT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
18	020100008	Nut	1
19	385201160	Switch	1
21	385620010	Connection	1
22	385620280	Connection	2

Ref. No.	Part No.	Description	No. Used
23	385620270	Connection	1
24	185516060	Regulator	1
26	385620200	Connection	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 85-5110

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Control	Skirt Panel	80-4220	84-6960
Decal Service	Skirt Panel	83-8900	84-7180
Panel Starting Fluid	Control Panel	83-9150	84-6660
Decal Parking Brake	Left Fender	84-1650	84-6860
Decal Warning	Fan Top Shroud	77-3100	84-6760
Decal Warning	Skirt Panel	83-9550	84-7080
Decal Warning	Hydraulic Tank Support	67-5360	84-7280
Decal Warning	Cutting Unit Top Shields	62-5070	84-6560
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2940

ITALIAN DECAL KIT NO. 85-5120

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal Control	Skirt Panel	80-4220	84-6950
Decal Service	Skirt Panel	83-8900	84-7170
Panel Starting Fluid	Control Panel	83-9150	84-6650
Decal Parking Brake	Left Fender	84-1650	84-6850
Decal Warning	Fan Top Shroud	77-3100	84-6750
Decal Warning	Skirt Panel	83-9550	84-7070
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6550
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2910

SWEDISH DECAL KIT NO. 85-5060

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal Control	Skirt Panel	80-4220	84-6990
Decal Service	Skirt Panel	83-8900	84-7210
Panel Starting Fluid	Control Panel	83-9150	84-6690
Decal Parking Brake	Left Fender	84-1650	84-6890
Decal Warning	Fan Top Shroud	77-3100	84-6790
Decal Warning	Skirt Panel	83-9550	84-7110
Decal Warning	Hydraulic Tank Support	67-5360	84-7310
Decal Warning	Cutting Unit Top Shields	62-5070	84-6590
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2870

GERMAN DECAL KIT NO. 85-5050

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Control	Skirt Panel	80-4220	84-6940
Decal Service	Skirt Panel	83-8900	84-7160
Panel Starting Fluid	Control Panel	83-9150	84-6640
Decal Parking Brake	Left Fender	84-1650	84-6840
Decal Warning	Fan Top Shroud	77-3100	84-6740
Decal Warning	Skirt Panel	83-9550	84-7060
Decal Warning	Hydraulic Tank Support	67-5360	84-7260
Decal Warning	Cutting Unit Top Shields	62-5070	84-6540
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

SPANISH DECAL KIT NO. 85-5070

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Control	Skirt Panel	80-4220	84-6980
Decal Service	Skirt Panel	83-8900	84-7200
Panel Starting Fluid	Control Panel	83-9150	84-6680
Decal Parking Brake	Left Fender	84-1650	84-6880
Decal Warning	Fan Top Shroud	77-3100	84-6780
Decal Warning	Skirt Panel	83-9550	84-7100
Decal Warning	Hydraulic Tank Support	67-5360	84-7300
Decal Warning	Cutting Unit Top Shields	62-5070	84-6580
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

FRENCH DECAL KIT NO. 85-5040

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Control	Skirt Panel	80-4220	84-6930
Decal Service	Skirt Panel	83-8900	84-7150
Panel Starting Fluid	Control Panel	83-9150	84-6630
Decal Parking Brake	Left Fender	84-1650	84-6830
Decal Warning	Fan Top Shroud	77-3100	84-6730
Decal Warning	Skirt Panel	83-9550	84-7050
Decal Warning	Hydraulic Tank Support	67-5360	84-7250
Decal Warning	Cutting Unit Top Shields	62-5070	84-6530
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2800

DANISH DECAL KIT NO. 85-5130

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal Control	Skirt Panel	80-4220	84-6900
Decal Service	Skirt Panel	83-8900	84-7120
Panel Starting Fluid	Control Panel	83-9150	84-6600
Decal Parking Brake	Left Fender	84-1650	84-6800
Decal Warning	Fan Top Shroud	77-3100	84-6700
Decal Warning	Skirt Panel	83-9550	84-7020
Decal Warning	Hydraulic Tank Support	67-5360	84-7220
Decal Warning	Cutting Unit Top Shields	62-5070	84-6500
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2930

DUTCH DECAL KIT NO. 85-5080

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal Control	Skirt Panel	80-4220	84-6910
Decal Service	Skirt Panel	83-8900	84-7130
Panel Starting Fluid	Control Panel	83-9150	84-6610
Decal Parking Brake	Left Fender	84-1650	84-8610
Decal Warning	Fan Top Shroud	77-3100	84-6710
Decal Warning	Skirt Panel	83-9550	84-7030
Decal Warning	Hydraulic Tank Support	67-5360	84-7230
Decal Warning	Cutting Unit Top Shields	62-5070	84-6510
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2920

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

FINNISH DECAL KIT NO. 85-5090

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FINISH
Decal Control	Skirt Panel	80-4220	84-6920
Decal Service	Skirt Panel	83-8900	84-7140
Panel Starting Fluid	Control Panel	83-9150	84-6620
Decal Parking Brake	Left Fender	84-1650	84-6820
Decal Warning	Fan Top Shroud	77-3100	84-6720
Decal Warning	Skirt Panel	83-9550	84-7040
Decal Warning	Hydraulic Tank Support	67-5360	84-7240
Decal Warning	Cutting Unit Top Shields	62-5070	84-6520
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7010

NORWEGIAN DECAL KIT NO. 85-5100

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	NORWEGIAN
Decal Control	Skirt Panel	80-4220	84-6970
Decal Service	Skirt Panel	83-8900	84-7190
Panel Starting Fluid	Control Panel	83-9150	84-6670
Decal Parking Brake	Left Fender	84-1650	84-6870
Decal Warning	Fan Top Shroud	77-3100	84-6770
Decal Warning	Skirt Panel	83-9550	84-7090
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6570
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7000

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0348	Bushing - Sleeve	28 7 4	29-6170	Spring - Extended Leaf	12 7 1
3-0348	Bushing - Sleeve	29 17 2	29-9080	Handle	33 3 1
3-6498	Washer	14 50 2	29-9090	Hose - Handle	33 4 1
3-6498	Washer - Thrust	7 7 A/R	33-1300	Element Assembly	4 5 1
5-0743	Spring - Extension	29 1 1	33-1310	Baffle	4 8 1
5-0743	Spring - Extension	28 17 2	33-1320	Cup	4 9 1
5-2653	Cable Pulley Assembly	26 8 1	33-1330	Nut Assembly	4 6 1
5-2655	Keeper - Cable	26 7 1	33-1340	Clamp Assembly	4 7 1
5-2656	Keeper - Cable	26 30 2	33-1350	Band Assembly	4 3 2
5-7280	Key - Square	22 1 3	33-1350	Clamp Assembly	3 60 2
5-7290	Spring - Extension	13 6 1	36-4310	Brush	33 5 1
10-6821	Brake Drum Assembly	13 18 2	36-7290	Spindle - Fan	20 49 1
10-6830	Stud - Drive	31 16 4	37-9090	Belt - V	20 2 1
10-6870	Hub - Wheel	13 19 2	37-9590	Spring - Compression	2 22 1
10-6870	Hub - Wheel	31 22 1	42-9850	Washer	21 61 1
10-7070	Key - Square	22 13 1	43-1950	Lift Valve Assembly	24 4 1
11-9760	Screw - Hex. Flange Hd.	12 25 3	43-8600	Spring - Compression	2 28 1
12-9140	Decal	33 1 1	43-8610	Guide - Spring	2 27 1
14-5759	Hood	1 11 1	43-8620	Guide - Pin	2 30 1
14-8539	Top Shroud Assembly	8 5 1	43-8860	Plunger - Switch	2 29 1
18-2970	Clamp - R	29 21 1	43-8870	Boot - Switch	2 32 1
21-0140	Rod End Assembly	7 27 1	43-9071	Seat Switch Assembly	3 * 1
21-0140	Rod End Assembly	31 30 1	44-2212	Light Assembly	5 45 1
22-8330	Plug	25 1 2	46-8810	Stop - Spring	12 1 1
22-8340	Spring	25 3 2	48-1800	Cylinder Block Kit	11 5 1
22-8350	Ball	25 4 2	48-7700	Screw - Cap Hex. Hd.	20 14 6
22-8360	Pin - Cam	25 6 2	48-7780	Screw - Cap Hex. Hd.	20 29 16
22-8370	Seat - Check Valve	25 5 2	48-8010	Washer - Flat	20 41 4
22-8380	Retainer - Spring	25 10 2	48-9460	Screw - Cap Hex. Hd.	20 8 14
22-8410	Spring	25 11 1	48-9590	Washer - Lock	20 28 16
22-8420	Spool	25 8 1	49-8480	Shaft - Trunion	11 28 1
22-8480	Snap Ring - Spool	25 13 1	49-8520	Kit - Implement Relief	11 * 1
22-8490	Snap Ring	25 14 1	51-3150	Shim - Spring	12 6 1
22-8500	Seal - O-Ring	25 9 2	54-0110	Element - Oil Filter	9 15 1
23-2140	Hose - Fuel	32 23 1	55-4300	Decal - Warning	28 9 2
23-3030	Spacer	25 12 1	55-4300	Decal - Warning	29 24 1
24-0760	Cooler - Oil	8 20 1	56-2230	Hose - Fuel	32 11 1
25-2380	Plate - Thrust	11 39 1	56-2520	Valve - Fuel Shut-Off	32 9 1
25-2390	Plate - Valve	11 40 1	56-7976	Clamp - Hose	31 6 2
25-2400	Gasket	11 43 1	56-7976	Clamp - Hydraulic Tube	16 5 2
25-2430	Pin - Straight	11 41 1	56-7977	Clamp - Hydraulic Tube	16 17 2
25-2450	Swash/Plate	11 37 1	56-9510	Bushing Assembly	30 10 2
25-2460	Plug	11 14 2	56-9520	Bushing - Nylon	30 16 1
25-2470	Kit - Shim Pack	11 16 2	57-5420	Screw - Shoulder	9 5 1
25-2480	Spring - Charge Relief	11 32 1	57-6390	Nut	21 60 1
25-2490	Ball - Check Valve	11 47 2	59-2150	Taper Lock Bushing Assy.	10 20 1
25-2510	Washer	11 11 2	61-0080	Hydraulic Pump Assembly	11 8 1
25-2530	Pin - Straight	11 26 1	61-0140	Pulley - Reel	22 4 3
25-2560	Cone - Relief Valve	11 18 1	61-2010	Pinion - Steering	7 15 1
25-2570	Spring - Relief Valve	11 17 1	61-2040	Rack - Steering	7 4 1
25-2580	Shaft - Trunion	11 12 1	61-2070	Rod - Steering	7 5 1
25-2620	Valve - By-Pass	11 4 1	61-2070	Rod - Steering	31 28 1
25-2630	Ring	11 3 1	61-2080	Shaft - Steering	7 18 1
25-2640	Spring - Check Valve	11 48 2	61-2090	Steering Column Assembly	7 21 1
25-2650	Plug - Check Valve	11 50 2	61-2350	Support - Bearing	22 6 2
25-2680	Gerotor Assembly	11 25 1	61-2370	Spacer	12 16 2
25-2690	Housing - Charge Pump	11 21 1	61-2430	Hub - Lift	26 45 1
25-3180	Kit - Check Valve	11 * 1	61-2610	Arm - Traction	12 14 1
25-3210	Seal - Lip	11 10 2	61-2790	Screen - Filler	9 8 1
26-3790	Nut - Lock	31 21 1	61-2890	Lift Arm Assembly	29 29 1
26-3790	Nut - Lock	13 23 2	61-2990	Spacer - Switch	26 3 1
27-9870	Pin - Seat	2 24 1	61-3210	Cable Pulley Assembly	26 22 3
28-3420	Cone - Charge Relief	11 33 1	61-3230	Spacer	26 24 3
28-6180	Pin	2 23 1	61-3270	Spring - Compression	28 6 2
29-6120	Plate - Pump	12 5 1	61-3360	Joint - Universal	7 17 1
29-6150	Spring - Leaf	12 9 1	61-3830	Chain - Lift	26 33 2
29-6163	Switch	12 28 1	61-3990	Parking Brake Assembly	13 5 1
29-6163	Switch - Lift	26 4 1	61-7250	Boot	28 5 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-643

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
62-4290	O-Ring	11 44 2	74-9110	Pad - Reverse	12 13 1
62-7170	Spacer	2 43 1	75-0540	Teather - Cap	9 4 1
62-7240	Cover - Spring	29 2 1	75-4703	Hose - Fuel	32 15 1
62-7250	Boot	29 18 2	75-4703	Hose - Fuel	20 25 1
62-7300	Chain	29 3 1	75-4710	Harness - Warning Light	5 5 1
62-7400	Decal - TORO	1 10 1	75-6820	Hourmeter	5 3 1
62-9510	Washer - Flat	20 50 1	75-7730	Spacer	31 2 1
63-1400	Guide - Cable	26 28 1	76-0020	Hydraulic Cylinder Assembly	26 37 1
63-7430	Temperature Gauge Assy.	5 17 1	76-0030	Repair Kit	27 * 1
63-7590	Relay	5 34 1	76-0040	Piston	27 8 1
63-7590	Relay	2 39 1	76-0050	Ring - Retaining	27 12 1
63-7620	Hose - Fuel	32 5 1	76-0090	Head	27 3 1
63-7620	Hose - Fuel	20 18 1	76-0300	Housing - Bushing	30 12 1
63-8140	Pulley - Idler	20 3 1	76-0350	Housing - Bushing	30 2 1
63-8410	Washer - Flat	9 10 3	76-0360	Cup - Retainer	30 6 1
63-8410	Washer - Flat	32 17 3	76-0370	Bolt - Shoulder	29 12 2
65-4500	Seal - Snap Ring	15 14 1	76-0370	Bolt - Shoulder	28 23 2
65-4550	Valve - Check Ball	15 6 2	76-0390	Spacer	30 15 1
65-4560	Plug - Hex (Hollow)	15 3 1	76-0410	Spring - Compression	30 7 1
65-4570	Seal - Square Ring	15 4 2	76-1420	Wheel - Steering	7 23 1
65-4580	Screw - Cap Hex Hd.	15 1 8	76-2200	Footrest - Traction	1 5 1
65-4590	Ring - Snap	15 21 1	76-2260	Pad - Footrest Traction	1 6 1
65-4600	Washer - Thrust	15 19 2	76-2320	Shaft	27 4 1
65-4610	Bearing - Thrust	15 20 1	76-2330	Nut - Lock	27 5 1
65-4620	Seal - O-Ring	15 12 1	76-2350	Seal/Retainer Assembly	15 * 1
65-4670	Body & Bearing Assembly	15 9 1	76-2360	Body Seal Kit	15 * 1
65-4680	Cover & Bearing Assembly	15 2 1	76-2430	Scraper - Pulley	28 2 2
65-8270	Waher	21 57 1	76-2460	Bearing Assembly	22 7 2
65-8320	Bar - Height-Of-Cut	34 1 1	76-6471	Trim - Control Panel Bottom	2 41 1
66-2920	Spacer	12 36 1	77-3100	Decal - Warning	8 4 1
66-2960	Cluster - Warning	5 7 1	80-4090	Hose - Hydraulic	17 5 2
66-3240	Cap - Radiator	8 9 1	80-4090	Hose - Hydraulic	31 14 2
66-5291	Hydraulic Motor Assembly	31 24 1	80-4220	Decal - Control	2 20 1
66-5291	Hydraulic Motor Assembly	13 30 2	80-6980	Latch - Hood	5 12 1
66-6110	IGR Assembly	15 5 1	80-6990	Washer	26 18 4
67-5360	Decal - Danger	3 57 1	80-7345	Hose	5 29
67-8020	Shaft - Pump	11 6 1	81-1690	Clamp - Throttle Cable	20 21 1
67-8030	Plug Assembly	11 19 1	82-3110	Sensor - Temp	20 16 1
67-8040	O-Ring	11 20 1	83-7270	Fork - Caster	31 10 1
67-8050	Bearing - Needle	11 22 1	83-7540	Engine Assembly	20 54 1
67-8060	Seal - Lip	11 23 1	83-7550	Radiator Assembly	8 35 1
67-8080	Bearing - Needle	11 42 1	83-7590	Pulley - Engine	20 55 1
67-8090	Cap - Pump End	11 45 1	83-7610	Hub - Fan	20 44 1
68-8990	Head - Oil Filter	9 19 1	83-7620	Spacer - Fan	20 42 1
69-1170	Glass - Sight	9 2 1	83-7630	Pulley - Fan	20 43 1
69-4780	Clamp - Light Cluster	5 43 1	83-7690	Bracket - Idler	20 5 1
70-8150	Plate - Valve	15 7 1	83-7700	Bracket - Alternator	20 34 1
70-8621	Cap - Fuel Tank	32 12 1	83-7720	Reservoir - Hydraulic	9 1 1
70-8640	Cap - Hydraulic Reservoir	9 7 1	83-7780	Bracket - Support	9 24 1
70-9840	Shoe - Brake	13 16 4	83-7790	Collar	22 11 2
70-9850	Clip - Retaining	13 35 2	83-7800	Sleeve	22 40 1
70-9860	Pin - Pivot Brake	13 25 2	83-7810	Spacer	22 35 2
70-9870	Plate - Brake	13 27 2	83-7820	Shaft - Drive	22 2 1
70-9880	Spring - Extension	13 17 4	83-7830	Retainer - Clutch	22 15 1
71-0710	Hydraulic Tube Assembly	17 3 1	83-7900	Belt Tensioner Assembly	29 11 2
71-0840	Hydraulic Tube Assembly	17 6 1	83-7900	Belt Tensioner Assembly	28 24 2
71-1220	Seal Repair Kit	18 * 1	83-7910	Rod	30 8 1
71-1370	Spring - Compression	26 35 1	83-7930	Yoke	30 3 1
71-1380	Pin - Spring	26 34 1	83-7970	Fitting - Hydraulic Bulkhead	8 39 2
71-1500	Brake Assembly	14 * 2	83-7980	Bracket - Radiator Rear	8 12 1
71-2830	2 Position Valve Assembly	17 2 1	83-8040	Cover - Left	8 8 1
71-2960	Valve - Flow Control	16 13 1	83-8070	Bracket - Radiator Bottom	8 18 1
71-3382	Hose - Overflow	8 11 1	83-8080	Key - Square	22 38 1
72-4190	Pin - Cylinder Guide	26 12 1	83-8110	Panel - Left	2 45 1
72-4320	Switch - Seat	2 25 1	83-8120	Panel - Right Rear	2 4 1
74-0720	Tube - Manual	2 14 1	83-8150	Screen - Radiator	8 17 1
74-6110	Cam - Stop	12 35 1	83-8180	Decal - Instrument Panel	5 2 1
74-9100	Pad - Forward	12 11 1	83-8190	Panel - Control	2 5 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-8190	Panel - Instrument	5 1 1	83-9650	Hose - Hydraulic	9 21 1
83-8210	Panel - Front Left	8 22 1	83-9651	Hose - Hydraulic	9 14 1
83-8220	Bracket - Muffler	20 51 1	83-9660	Clevis	10 23 1
83-8230	Panel - Right Front	2 2 1	83-9680	Screw - Cap Hex. Hd.	22 27 1
83-8270	Pedal - Traction	12 12 1	83-9690	Spring - Compression	22 26 1
83-8280	Throttle Assembly	5 30 1	83-9700	Fender - L.H.	1 15 1
83-8320	Mount - Pump	10 12 1	83-9710	Footrest - L.H.	1 17 1
83-8400	Pulley - Idler	22 20 1	83-9720	Fender - R.H.	1 1 1
83-8410	Pulley - Engine	20 48 1	83-9730	Step - Foot	2 36 1
83-8420	Pulley - Clutch	22 36 1	83-9740	Footrest - R.H.	1 4 1
83-8470	Bracket - Engine Mount	21 56 2	83-9760	Bracket - Cylinder Support	26 1 1
83-8490	Belt - Drive	22 37 1	83-9800	Shield - Grass Front L.H.	1 20 1
83-8500	Muffler	20 52 1	83-9810	Bushing - Flange	22 24 1
83-8510	Bracket - Fender L.H.	1 22 1	83-9840	Pad - Footrest L.H.	1 18 1
83-8540	Belt - Pump Drive	10 21 1	83-9880	Bracket - Fan Spindle	20 47 1
83-8550	Hose - Air Cleaner	2 49 1	83-9910	Gasket - Muffler	21 58 1
83-8550	Hose - Air Intake	20 13 1	83-9920	Bracket - Reservoir	9 13 1
83-8590	Cable - Lift	26 19 1	83-9970	Latch - Hood	1 12 1
83-8620	Bracket - Idler	22 18 1	84-1650	Decal - Brake	1 19 1
83-8630	Yoke - Belt Tension	22 22 1	84-1990	Rod - Adjusting	13 32 2
83-8720	Tank - Fuel	32 13 1	84-2000	Bracket - Brake	13 29 2
83-8760	Rod - Control	12 20 1	84-7770	Field & Rotor Assembly	23 1 1
83-8770	Lever - Pump	12 23 1	84-7780	Armature Assembly	23 2 1
83-8850	Grille - Front	1 29 1	84-8440	Bushing - Flange	26 11 2
83-8860	Shield - Grass Front R.H.	1 30 1	85-4870	Support - Hinge	1 26 1
83-8880	Panel - Skirt	2 12 1	85-4890	Hinge - Hood	1 31 1
83-8890	Decal - Reelmaster 216-D	2 19 2	85-4910	Air Cleaner (Complete)	4 * 1
83-8900	Decal - Service Information	2 50 1	85-4910	Air Cleaner Assembly	2 47 1
83-8920	Harness - Wire	6 1 1	85-4920	Hydraulic Pump Assembly	10 30 1
83-9000	Battery	32 6 1	85-4960	Pulley	10 16 1
83-9020	Belt - V	20 38 1	85-4980	Switch Assembly	5 24 1
83-9030	Foam - Top	8 36 1	85-4990	Hose - Hydraulic	24 20 1
83-9050	Hose - Radiator	8 34 1	85-4990	Hose - Hydraulic	16 26 1
83-9060	Hose - Radiator	8 28 1	85-5000	Plate - Throttle	5 36 1
83-9070	Hose - Coolant	20 11 1	85-5010	Bracket - Right Front	3 54 1
83-9070	Hose - Radiator	8 31 1	85-5140	Foam - Hood	3 56 2
83-9080	Connector - Bleed	8 30 1	85-5160	Lever - Lift Valve	24 2 1
83-9130	Keeper - Cable	26 27 1	85-5170	Sleeve	8 41 1
83-9140	Clutch Assembly	22 39 1	85-5180	Trim	2 51 2
83-9150	Decal - Starting Fluid	2 10 1	85-5190	Hose - Hydraulic	24 22 1
83-9170	Right Channel Assembly	2 44 1	85-5190	Hose - Hydraulic	31 36 1
83-9210	Cable - Battery Neg.	32 8 1	85-5200	Clamp	31 34 1
83-9210	Cable - Ground	20 31 1	85-5230	Bracket - Seat Pivot	3 62 2
83-9220	Cable - Battery Pos.	32 7 1	85-5300	Hose - Hydraulic	16 25 1
83-9240	Hold-Down - Battery	32 21 1	85-5310	Hose - Hydraulic	26 41 1
83-9250	Lever - Brake	13 36 2	85-5330	Plate - Seat Mounting	3 64 1
83-9270	Pivot - Brake L.H.	13 40 1	85-5340	Tube - Seat Pivot	2 7 2
83-9310	Pivot - Brake R.H.	13 * 1	85-5810	Hose - Hydraulic	24 13 1
83-9330	Shaft - Brake	13 41 1	85-6540	Stud - Drive	13 26 8
83-9340	Shield - Grass	13 13 2	88-6720	Bracket - Radiator Front	8 33 1
83-9350	Rod - Parking Brake	13 1 1	88-6730	Bracket - Screen Front	8 44 1
83-9440	Hydraulic Tube Assembly	16 2 1	92-1157	Shaft	15 10 1
83-9450	Tube - Hydraulic	16 19 1	92-1177	Hose - Hydraulic	24 8 1
83-9460	Tube - Hydraulic	16 4 1	92-1177	Hose - Hydraulic	8 27 1
83-9460	Tube - Hydraulic	17 12 1	92-1178	Hose - Hydraulic	10 10 1
83-9470	Hydraulic Tube Assembly	16 1 1	92-1178	Hose - Hydraulic	9 27 1
83-9480	Tube - Hydraulic	16 18 1	92-1583	Hose - Hydraulic	8 24 1
83-9490	Tube - Hydraulic	16 15 1	92-1583	Hose - Hydraulic	10 28 1
83-9500	Tube - Hydraulic	16 9 1	92-1812	Shaft - Lift Pivot	28 25 2
83-9500	Tube - Hydraulic	17 10 1	92-1812	Shaft - Lift Pivot	29 31 1
83-9550	Decal - Warning	2 11 1	92-1815	Rod - Pivot	28 13 2
83-9600	Hose - Hydraulic	10 7 2	92-1815	Rod - Pivot	29 26 1
83-9600	Hose - Hydraulic	16 21 2	92-1818	Arm - Tension	29 7 1
83-9620	Hose - Hydraulic	24 12 1	92-1818	Arm - Tension	28 29 2
83-9620	Hose - Hydraulic	26 42 1	92-1822	Shackle	28 26 2
83-9640	Hose - Hydraulic	24 14 1	92-1822	Shackle	29 34 1
83-9640	Hose - Hydraulic	10 25 1	92-2367	Shroud - Fan Bottom	8 32 1
83-9650	Hose - Hydraulic	10 1 1	92-2368	Knob - Clamp	8 46 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-643

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-2373	Frame Assembly	7	12	1	2412-36	Clamp - Hose	32	10	2
92-2402	Lift Arm Assembly, L.H.	28	8	1	2412-36	Clamp - Hose	9	26	1
92-2405	Lift Arm Assembly, R.H.	28	*	1	2412-39	Clamp - R	16	7	1
217-60	Rim	13	21	2	2412-39	Clamp - R	2	17	3
218-461	Nut - Hex.	2	33	2	2412-39	Clamp - R	20	35	2
218-469	Fuse - 15 Amp.	5	10	2	2412-41	Clamp - R	8	15	1
218-489	Fuse Holder Assembly	5	9	2	2412-74	Clamp - R	8	3	1
218-500	Nut - Hex.	5	22	2	2412-92	Clamp - Hose	20	12	1
218-562	Lens - Light	5	47	1	2412-92	Clamp - Hose	2	48	1
218-596	Tab	12	37	2	2412-93	Clamp - R	20	15	1
219-17	Bulb - Light	5	6	4	2412-108	Clamp - Hose	32	4	4
219-18	Bulb - Light	5	46	1	2412-108	Clamp - Hose	8	10	1
231-127	Tire	31	17	1	2412-108	Clamp - Hose	20	17	2
231-127	Tire	13	20	2	2412-133	Clamp - R	2	16	2
232-27	Valve - Stem	13	24	2	251-8	Bearing - Ball	11	35	1
232-47	Valve - Stem	31	20	1	251-77	Collar - Locking	22	9	2
233-37	Knob	24	1	1	251-259	Bearing - Ball	12	31	1
233-46	Knob	18	9	1	251-337	Bearing - Ball	22	8	2
237-7	Seal - O-Ring	2	31	1	252-82	Bearing - Needle	11	9	2
237-21	Seal - O-Ring	24	18	2	256-1	Bushing - Sleeve	26	23	3
237-21	Seal - O-Ring	14	47	3	256-2	Bushing - Sleeve	26	44	1
237-22	O-Ring	11	2	1	256-27	Bushing - Sleeve	7	19	2
237-22	Seal - O-Ring	18	2	1	256-115	Washer - Thrust	28	12	2
237-22	Seal - O-Ring	17	4	2	256-115	Washer - Thrust	29	25	1
237-22	Seal - O-Ring	24	7	5	256-117	Bushing - Flange	7	8	4
237-22	Seal - O-Ring	31	13	3	256-173	Bushing - Sleeve	30	11	1
237-22	Seal - O-Ring	26	40	2	256-245	Bushing - Flange	7	9	2
237-30	Seal - O-Ring	10	6	5	256-247	Bushing - Flange	7	13	2
237-30	Seal - O-Ring	13	7	2	256-287	Bushing - Flange	7	14	2
237-30	Seal - O-Ring	17	7	4	256-320	Bushing	1	32	2
237-30	Seal - O-Ring	16	10	7	256-321	Bushing - Sleeve	3	59	4
237-30	Seal - O-Ring	2	26	1	2710-16	Connecting Link Assembly	24	3	1
237-30	Seal - O-Ring	8	38	2	281-1	Plug - Pipe	8	37	2
237-37	Bumper - Rubber	2	6	2	281-7	Plug - Pipe	8	1	1
237-42	Seal - O-Ring	25	2	2	282-2	Clevis	13	34	2
237-42	Seal - O-Ring	24	5	1	282-4	Clevis	29	5	1
237-42	Seal - O-Ring	16	12	2	282-4	Clevis	26	31	4
237-42	Seal - O-Ring	10	27	2	283-1	Pin - Clevis	29	20	1
237-42	Seal - O-Ring	26	38	2	283-1	Pin - Clevis	13	37	2
237-54	Seal - O-Ring	18	7	2	283-2	Pin - Clevis	10	24	1
237-65	Seal - O-Ring	16	3	3	283-6	Pin - Clevis	29	6	1
237-65	Seal - O-Ring	13	44	2	283-6	Pin - Clevis	26	14	4
237-71	Seal - O-Ring	2	42	1	283-40	Pin - Clevis	28	3	2
237-78	Seal - O-Ring	31	38	1	283-40	Pin - Clevis	29	14	2
237-78	Seal - O-Ring	24	10	2	283-42	Pin - Clevis	26	9	1
237-78	Seal - O-Ring	16	24	2	283-55	Pin - Clevis	30	5	1
237-78	Seal - O-Ring	14	46	2	283-62	Pin - Clevis	20	19	1
237-79	Seal - O-Ring	10	4	4	283-75	Pin - Clevis	28	20	4
237-79	Seal - O-Ring	17	9	3	283-75	Pin - Clevis	29	32	2
237-79	Seal - O-Ring	9	18	1	283-78	Pin - Clevis	26	36	1
237-80	Seal - O-Ring	13	9	4	285-17	Plug - Pipe	11	1	6
237-80	Seal - O-Ring	31	11	2	302-5	Fitting - Grease	31	3	1
237-81	Seal - O-Ring	9	3	4	302-5	Fitting - Grease	30	14	1
237-86	O-Ring	11	15	2	302-5	Fitting - Grease	7	24	3
237-95	O-Ring	11	27	1	302-5	Fitting - Grease	7	29	1
240-11	Grommet	9	9	3	302-5	Fitting - Grease	22	33	2
240-11	Grommet	32	16	3	302-60	Fitting - Grease	28	16	2
240-13	Bumper	22	16	2	302-60	Fitting - Grease	29	30	1
242-50	Nut - Lug	31	19	4	321-5	Screw - Cap Hex. Hd.	13	15	8
242-50	Nut - Lug	13	22	8	321-6	Screw - Hex. Flange Hd.	12	10	2
242-76	Rim	31	18	1	321-8	Screw - Cap Hex. Hd.	2	52	2
2410-18	Plug	33	2	1	321-9	Screw - Cap Hex. Hd.	31	32	1
2410-73	Retainer - Teather	9	6	1	321-11	Screw - Cap Hex. Hd.	3	61	2
2411-52	End - Rod	12	17	1	321-12	Screw - Cap Hex. Hd.	32	2	1
2411-53	End - Rod	12	22	1	321-13	Screw - Cap Hex. Hd.	10	18	3
2412-34	Clamp - Hose	10	2	1	321-14	Screw - Cap Hex. Hd.	20	40	4
2412-34	Clamp - Hose	20	10	1	321-23	Screw - Cap Hex. Hd.	24	16	2
2412-34	Clamp - Hose	8	29	5	322-4	Screw - Cap Hex. Hd.	28	10	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-4	Screw - Cap Hex. Hd.	29 23 1	3234-28	Screw - Hex. Washer Hd.	20 53 1
322-4	Screw - Cap Hex. Hd.	11 24 4	3234-32	Screw - Cap Hex. Hd.	22 5 4
322-7	Screw - Cap Hex. Hd.	20 37 2	3234-32	Screw - Cap Hex. Hd.	29 28 1
322-9	Screw - Cap Hex. Hd.	31 9 1	3234-32	Screw - Hex. Flange Hd.	28 14 2
322-9	Screw - Cap Hex. Hd.	12 18 2	3234-36	Screw - Hex. Flange Hd.	2 15 3
322-10	Screw - Cap Hex. Hd.	16 8 2	3242-4	Screw - Square Hd. Set	22 3 6
322-12	Screw - Cap Hex. Hd.	7 26 1	3245-35	Screw - Set	22 10 4
322-17	Screw - Cap Hex. Hd.	13 2 1	3249-11	Screw - Round Hd.	12 27 2
322-17	Screw - Cap Hex. Hd.	12 8 1	3250-35	Screw - Pan Hd.	26 6 2
322-17	Screw - Cap Hex. Hd.	22 31 9	3253-2	Washer - Lock	5 15 5
322-26	Screw - Cap Hex. Hd.	29 36 1	3253-3	Washer - Lock	13 14 8
323-5	Screw - Cap Hex. Hd.	9 11 3	3253-3	Washer - Lock	10 19 3
323-5	Screw - Cap Hex. Hd.	32 18 3	3253-4	Washer - Lock	28 11 2
323-7	Screw - Cap Hex. Hd.	29 8 1	3253-4	Washer - Lock	29 22 1
323-7	Screw - Cap Hex. Hd.	28 28 2	3253-4	Washer - Lock	1 24 4
323-11	Screw - Cap Hex. Hd.	11 46 4	3253-4	Washer - Lock	29 37 1
323-13	Screw - Cap Hex. Hd.	26 46 1	3253-5	Washer - Lock	18 8 1
323-15	Screw - Cap Hex. Hd.	22 19 1	3254-9	Washer - ITLW	12 2 2
323-17	Screw - Cap Hex. Hd.	26 20 2	3254-9	Washer - Lock Internal	26 5 2
325-6	Screw - Cap Hex. Hd.	31 1 1	3254-20	Washer - Lock	5 23 1
325-7	Screw - Cap Hex. Hd.	10 13 2	3255-2	Washer - Lock	31 31 1
325-11	Screw - Cap Hex. Hd.	31 25 4	3255-7	Washer - ETLW	12 26 3
325-11	Screw - Cap Hex. Hd.	13 28 8	3255-8	Washer - Lock E.T.L.W.	20 30 1
325-18	Screw - Cap Hex. Hd.	10 15 1	3256-3	Washer - Flat	31 4 1
3210-7	Screw - Cap Hex. Hd.	12 30 1	3256-3	Washer - Flat	16 6 1
3212-34	Clamp - Hose	9 16 3	3256-6	Washer - Flat	28 15 2
3217-6	Nut - Hex.	1 23 4	3256-6	Washer - Flat	29 27 1
3217-16	Nut - Lock	12 3 2	3256-14	Washer - Flat	5 16 2
3218-3	Nut - Jam	7 3 2	3256-16	Washer - Flat	13 12 8
3218-6	Nut - Jam	30 9 1	3256-22	Washer - Flat	8 6 2
3218-17	Nut - Jam	22 12 1	3256-22	Washer - Flat	24 15 2
3219-14	Nut - Hex.	34 3 1	3256-22	Washer - Flat	31 33 1
3219-14	Nut - Hex.	5 14 6	3256-22	Washer - Flat	3 53 2
3220-2	Nut - Jam	12 19 2	3256-23	Washer	14 49 1
3220-2	Nut - Jam	13 33 2	3256-23	Washer - Flat	20 9 23
3220-5	Nut - Jam	7 6 1	3256-23	Washer - Flat	26 16 1
3220-12	Nut - Jam	31 29 1	3256-23	Washer - Flat	1 25 4
3220-20	Nut - Jam	12 21 1	3256-23	Washer - Flat	22 30 15
3229-1	Bolt - Carriage	28 1 2	3256-23	Washer - Flat	8 43 2
3229-1	Screw - Carriage	1 7 2	3256-24	Washer - Flat	22 25 2
3229-22	Bolt - Carriage	3 63 2	3256-24	Washer - Flat	26 25 3
3230-1	Screw - Carriage	32 19 2	3256-24	Washer - Flat	20 27 1
3230-1	Screw - Carriage	20 33 1	3256-24	Washer - Flat	12 34 1
3230-22	Screw - Carriage	20 6 1	3256-26	Washer - Flat	7 10 2
3230-23	Screw - Carriage	9 23 6	3256-45	Washer - Flat	29 10 4
3230-23	Screw - Carriage	1 27 6	3256-45	Washer - Flat	28 19 4
3230-27	Screw - Carriage	1 8 1	3256-54	Washer - Flat	30 4 1
3231-22	Bolt - Carriage	8 23 6	3256-57	Washer - Flat	29 38 1
3231-26	Screw - Carriage	20 7 1	3257-15	Key - Square	13 10 2
3231-31	Bolt - Carriage	22 21 1	3257-15	Key - Square	15 11 1
3234-4	Screw - Cap Hex. Hd.	8 7 2	3257-15	Key - Woodruff	31 15 1
3234-4	Screw - Hex. Flange Hd.	2 13 3	3257-32	Key - Woodruff	11 7 1
3234-4	Screw - Hex. Flange Hd.	22 29 2	3257-32	Key - Woodruff	10 17 1
3234-4	Screw - Hex. Washer Hd.	5 8 3	3258-19	Screw - Round Hd.	4 2 2
3234-4	Screw - Hex. Washer Hd.	26 10 1	3272-4	Pin - Cotter	26 13 1
3234-4	Screw - Hex. Washer Hd.	9 22 2	3272-6	Pin - Cotter	7 1 1
3234-5	Screw - Hex. Flange Hd.	2 1 24	3272-6	Pin - Cotter	10 14 1
3234-5	Screw - Hex. Washer Hd.	1 2 14	3272-6	Pin - Cotter	29 19 1
3234-5	Screw - Hex. Washer Hd.	13 4 2	3272-6	Pin - Cotter	31 26 1
3234-5	Screw - Hex. Washer Hd.	8 19 2	3272-6	Pin - Cotter	13 31 5
3234-5	Screw - Hex. Washer Hd.	20 32 1	3272-6	Pin - Cotter	26 43 1
3234-11	Screw - Hex. Flange Hd.	2 40 4	3272-9	Pin - Cotter	20 23 1
3234-11	Screw - Hex. Washer Hd.	26 29 1	3272-10	Pin - Cotter	28 22 4
3234-17	Screw - Hex. Washer Hd.	8 21 4	3272-10	Pin - Cotter	29 33 2
3234-24	Screw - Hex. Flange Hd.	20 26 4	3272-11	Pin - Cotter	29 4 1
3234-25	Screw - Hex. Washer Hd.	26 17 5	3272-11	Pin - Cotter	26 32 5
3234-28	Screw - Hex. Flange Hd.	17 1 2	3272-13	Pin - Cotter	29 13 2
3234-28	Screw - Hex. Washer Hd.	8 13 8	3272-13	Pin - Cotter	28 27 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-643

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3273-18	Screw - Hex. Socket Hd.	22 34 4	32128-33	Nut - Flange Lock	2 9 2
3274-90	Screw - Hex. Socket Hd.	5 13 2	32128-33	Nut - Flange Lock	22 14 2
3290-379	Tie - Cable	31 7 1	32128-33	Nut - Flange Lock	5 31 3
3290-379	Tie - Cable	22 41 1	32128-33	Nut - Flange Lock	2 34 5
3290-379	Tie - Cable	21 59 2	32128-43	Nut - Flange Lock	20 1 5
3290-432	Screw - Hex. Hd.	20 20 1	32128-43	Nut - Flange Lock	26 2 7
3290-467	Pin - Cotter Hair	1 28 2	32128-43	Nut - Flange Lock	8 16 6
3296-2	Nut - Lock	5 44 1	32128-43	Nut - Flange Lock	22 23 2
3296-4	Nut - Lock	26 15 1	32128-43	Nut - Flange Lock	2 37 4
3296-6	Nut - Lock	10 22 1	32128-44	Nut - Flange Lock	20 4 5
3296-16	Nut - Flange Lock	24 9 2	32128-44	Nut - Flange Lock	1 16 13
3296-16	Nut - Lock	12 4 2	32128-44	Nut - Flange Lock	2 18 10
3296-23	Nut - Flange Lock	31 23 4	32128-44	Nut - Flange Lock	32 20 3
3296-23	Nut - Flange Lock	22 28 4	32128-44	Nut - Flange Lock	8 26 4
3296-23	Nut - Lock	10 11 3	32128-44	Nut - Hex. Flange Hd.	9 12 6
3296-23	Nut - Lock	13 42 8	32128-44	Nut - Lock	13 3 2
3296-28	Nut - Lock	7 11 2	32136-4	Nut - Castle	7 2 1
3296-29	Nut - Flange Lock	31 5 1	32136-4	Nut - Castle	31 27 1
3296-29	Nut - Flange Lock	7 20 1	32138-8	Insert - Threaded	1 34 1
3296-29	Nut - Flange Lock	22 32 6	32141-84	Screw - Cap Hex. Hd.	7 25 2
3296-29	Nut - Lock	16 14 2	32144-18	Screw - Hex. Hd.	5 4 2
3296-29	Nut - Lock	12 32 3	32144-39	Screw - Pan Hd.	5 41 2
3296-29	Nut - Lock	8 42 2	32148-7	Insert - Threaded	2 3 8
3296-39	Nut - Flange Lock	24 17 1	32148-7	Insert - Threaded	1 33 3
3296-39	Nut - Flange Lock	26 26 3	32148-8	Insert - Threaded	8 14 3
3296-39	Nut - Lock	29 15 1	32148-8	Insert - Threaded	3 58 1
3296-39	Nut - Lock	22 17 2	32148-14	Insert - Threaded	7 28 1
3296-39	Nut - Lock	28 31 2	32149-9	Nut - Flange Lock	5 37 2
3296-42	Nut - Lock	2 8 2	32151-46	Ring - Retaining	11 13 2
3296-42	Nut - Lock	13 11 8	32151-78	Ring - Retaining	18 3 2
3296-42	Nut - Lock	31 35 1	32153-1	Nut - Lock	8 45 2
3296-42	Nut - Lock	8 40 2	340-2	Fitting - Hydraulic Straight	26 47 1
3296-59	Nut - Lock	29 9 2	340-4	Fitting - Hydraulic Straight	10 8 1
3296-59	Nut - Lock	28 18 2	340-4	Fitting - Hydraulic Straight	17 13 1
3296-59	Nut - Lock	12 33 1	340-5	Fitting - Hydraulic Straight	16 11 2
32104-6	Screw - Cap Hex. Hd.	28 32 2	340-17	Fitting - Hydraulic 90°	13 43 2
32104-6	Screw - Cap Hex. Hd.	29 35 1	340-19	Fitting - Hydraulic Tee	16 20 1
32104-82	Screw - Hex. Washer Hd.	1 21 5	340-23	Fitting - Hydraulic Cross	24 21 1
32104-116	Screw - Hex. Washer Hd.	8 2 8	340-77	Fitting - Hydraulic 90°	24 6 1
32105-1	Screw - Hex. Hd.	5 42 1	340-87	Fitting - Hydraulic 45°	26 39 1
32107-11	Nut - Square	4 4 2	340-88	Fitting - Hydraulic Straight	31 37 1
32120-10	Ring - Retaining	20 45 1	340-92	Fitting - Hydraulic Straight	24 11 1
32120-11	Ring - Retaining	11 36 1	340-98	Fitting - Hydraulic 90°	17 8 1
32120-15	Ring - Retaining	11 34 1	340-99	Fitting - Hydraulic 90°	10 26 2
32121-6	Pin - Roll	12 15 1	340-101	Fitting - Hydraulic 45°	10 5 2
32121-6	Pin - Roll	2 21 1	340-102	Fitting - Hydraulic Tee	16 16 1
32121-6	Pin - Roll	13 39 2	340-103	Fitting - Hydraulic 45°	24 23 1
32121-9	Pin - Roll	30 13 1	340-103	Fitting - Hydraulic 45°	14 45 1
32121-10	Pin - Roll	7 22 1	340-105	Fitting - Hydraulic 90°	13 8 2
32121-15	Pin - Roll	7 16 2	340-109	Fitting - Hydraulic Tee	17 11 1
32121-23	Pin - Roll	30 1 1	340-110	Fitting - Hydraulic 90°	24 19 1
32121-24	Pin - Roll	12 24 1	340-127	Nut - Bulkhead	8 25 2
32121-34	Pin - Dowel	10 29 1	340-140	Fitting - Hydraulic Tee	14 * 1
32121-38	Pin - Roll	18 5 1	340-141	Fitting - Hydraulic Straight	31 12 2
32121-91	Pin - Coiled Spring	11 38 3	353-512	Plug - Hydraulic	18 1 1
32122-2	Screw - Round Hd.	34 2 1	353-987	Fitting - Hydraulic 90°	9 17 1
32128-14	Nut - Flange Lock	1 13 2	354-23	Ball - Check	18 4 1
32128-20	Nut - Flange Lock	2 46 4	354-77	Hydraulic Test Port Fitting	16 23 2
32128-20	Nut - Hex.	1 9 2	354-79	Cap - Test Port	16 22 2
32128-20	Nut - Lock	14 48 2	354-120	Fitting - Hydraulic 90°	9 25 1
32128-33	Nut - Flange Lock	1 3 2	354-127	Fitting - Hydraulic 45°	9 20 2
32128-33	Nut - Flange Lock	28 4 2	354-128	Fitting - Hydraulic 90°	10 3 1

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216-D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216-D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216-D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood & Grille	1	Crankshaft Assembly	36
Skirt Assembly	2-3	Cylinder Head Assembly	37
Air Cleaner Assembly	4	Rocker Arm Assembly	38
Instrument Panel Assembly	5	Camshaft Assembly	39
Electrical Schematic	6	Timing Cover Assembly	40
Frame Assembly	7	Oil Pump Assembly	41
Radiator Assembly	8	Fuel Injection System Assembly	42
Hydraulic Reservoir & Filter Assembly	9	Injection Pump Assembly	43-44
Hydraulic Pump Installation Assembly	10	Flywheel Housing Assembly	45
Hydraulic Pump Assembly No. 85-4920	11	Flywheel Assembly	46
Traction Control Assembly	12	Starter Installation Assembly	47
Front Wheel Assembly	13-14	Starter Assembly	48
Hydraulic Drive Motor No. 66-5291	15	Oil Sump Assembly	49
Drive Motor Plumbing Assembly	16	Valve Cover Assembly	50
Rear Wheel Drive Valve Assembly	17	Oil Filter Assembly	51
2 Position Valve Assembly No. 71-2830	18	Front Drive Pulley Assembly	52
Hydraulic Schematic	19	Water Pump Assembly	53
Engine Installation Assembly	20-21	Alternator Assembly	54
Reel Drive Assembly	22	Timing Cover Plate Assembly	55
Electric Clutch Assembly No. 83-9140	23	Exhaust Manifold Assembly	56
Cutting Unit Lift Valve Installation Assembly	24	Low Pressure Fuel System Assembly	57
Control Valve No. 43-1950	25	Lift Pump Assembly	58
Cutting Unit Lift Assembly	26	Fuel Filter Assembly	59
Hydraulic Cylinder No. 76-0020	27	Cold Start System Assembly	60
Front Cutting Unit Lift Arm Assembly	28	Engine Lifting Tab Assembly	61
Rear Cutting Unit Lift Arm Assembly	29	Throttle Stop Assembly	62
Belt Tensioner Assembly No. 83-7900	30	Recorder Assembly	63
Rear Wheel Assembly	31	Electrical Component Assembly	64
Fuel System Assembly	32	International Decal Cross Reference	65-67
Special Tools	33-34	TORO Part Number Index	68-73
Cylinder Block Assembly	35		

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.
AL-925050