




MODEL NO. 30761-390001 & UP

PARTS CATALOG

44" SNOWTHROWER For Proline 118

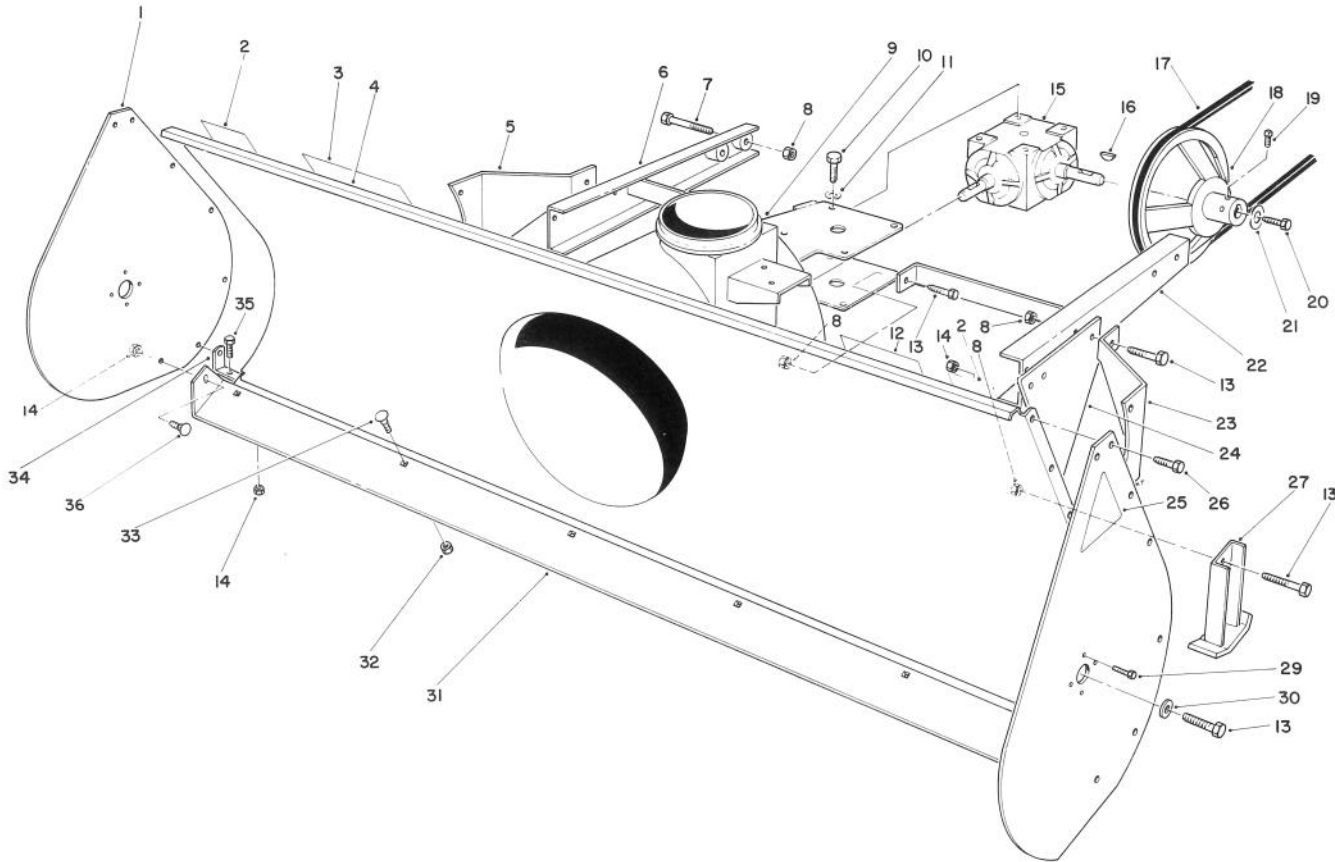


T-0103

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	57-3510	Plate - Side	2
2	53-7670	Decal - Auger Danger	2
3	61-8510	Decal - Warning	1
4	57-3390	Housing - Auger	1
5	57-3570	Plate - Extension RH	1
6	57-3710	Bar - Extension	1
7	323-12	Screw - Hex. Hd.	4
8	3296-39	Nut - Lock	20
9	25-5170	Ring - Chute	1
10	323-4	Screw - Hex. Hd.	8
11	3254-6	Washer - Lock	8
12	61-8490	Decal - Rear Weight	1

Ref. No.	Part No.	Description	No. Used
13	323-6	Screw - Hex. Hd.	10
14	3296-29	Nut - Lock	22
15	61-8650	Gear Box	1
16	3257-5	Key - Woodruff	2
17	57-3650	Belt	1
18	57-3640	Pulley - Drive	1
19	3242-4	Screw - Set	2
20	30-1070	Screw - Hex. Hd.	1
21	3256-57	Washer	1
22	57-3520	Bar - Extension	1
23	57-3560	Plate - Extension LH	1
24	57-3550	Plate - Skid Mount	2

TPS

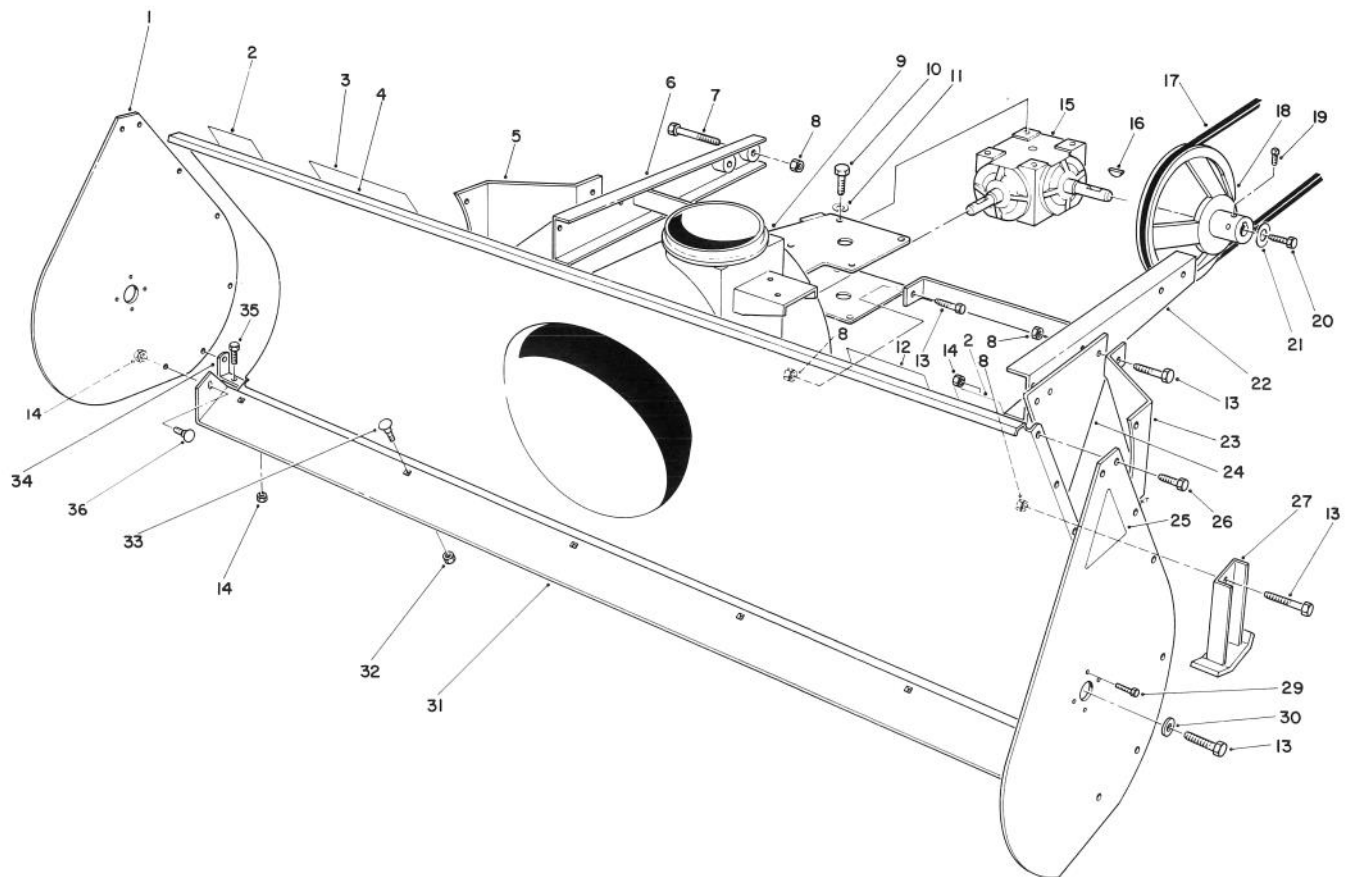


T-0103

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
25	17-6500	Decal - Auger Sideplate	2
26	322-5	Screw - Hex. Hd.	18
27	57-3580	Skid	2
29	321-3	Screw - Hex. Hd.	8
30	3-0750	Washer - Flat	2
31	79-6670	Blade - Scraper	1


Ref. No.	Part No.	Description	No. Used
32	3296-16	Nut - Lock	6
33	3229-25	Bolt - Carriage	6
34	57-9890	Bracket - Blade Support	2
35	322-3	Screw - Hex. Hd.	2
36	3230-18	Bolt - Carriage	2

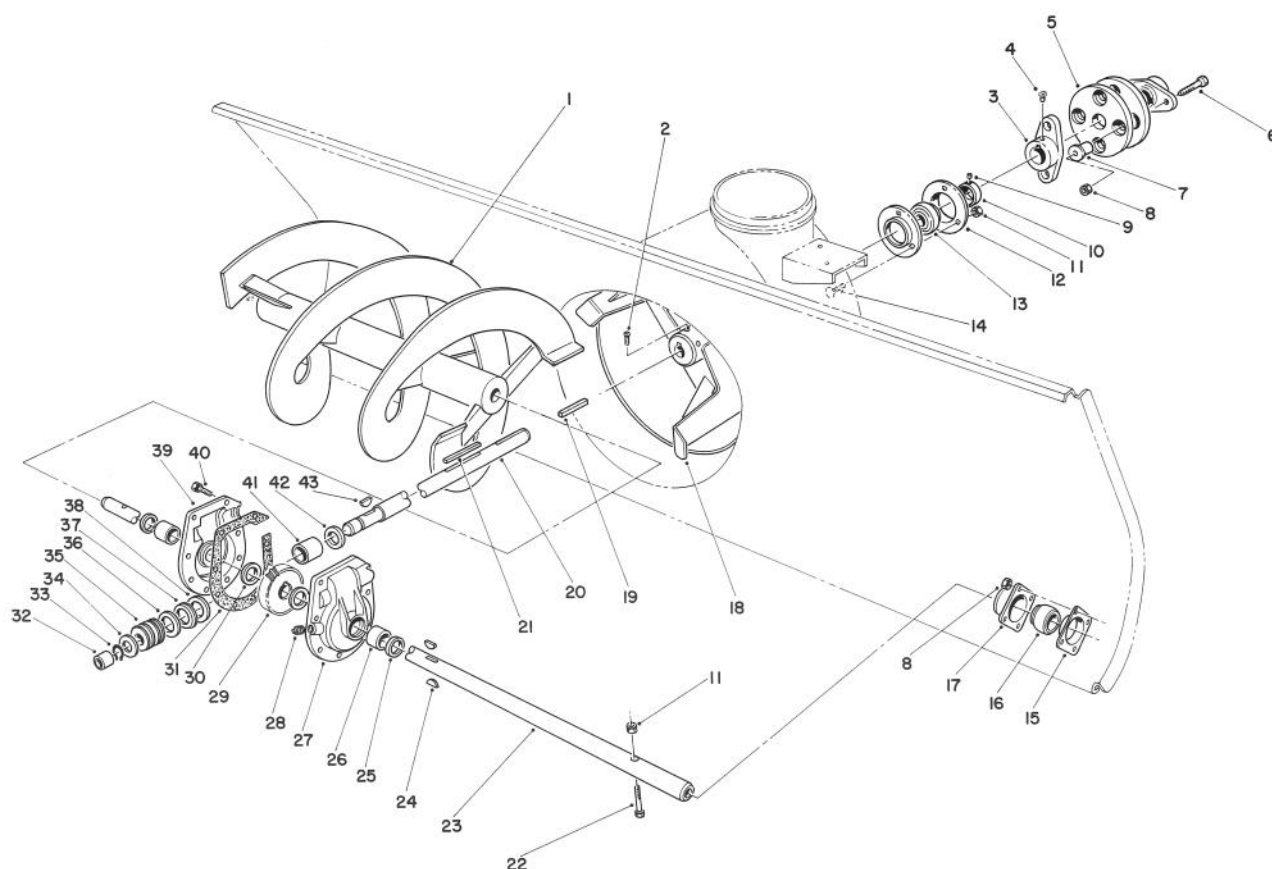

T-0104

AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	57-3300	Auger RH	1	24	3257-33	Key - Woodruff	2
*	57-3370	Auger LH	1	25	7-0045	Seal - Oil	2
2	3242-4	Screw - Set	2	26	256-237	Bushing	2
3	61-4000	Hub	2	27	37-8860	Gear Case & Bushing Assy. (Incl. Ref. #25 & 26)	1
4	3241-5	Screw - Set	4	28	281-1	Plug - Pipe	1
5	44-2230	Coupling - Rubber	2	29	5-7180	Gear - Worm	1
6	321-9	Screw - Hex. Hd.	4	30	252-71	Bearing - Thrust	2
7	27-6601	Spacer - Coupling	4	31	51-0460	Gasket	1
8	3296-16	Nut - Lock	12	32	256-32	Bushing	1
9	3245-32	Screw - Set	2	33	32120-72	Ring - Retaining	1
10	251-231	Collar - Locking	1	34	3-8664	Washer - Thrust	1
11	3296-29	Nut - Lock	5	35	5-7170	Worm	1
12	251-229	Bearing - Flange	2	36	252-77	Washer - Thrust	1
13	251-224	Bearing - Impeller	1	37	252-76	Bearing - Thrust	1
14	3230-1	Bolt - Carriage	3	38	252-78	Washer - Thrust	1
15	20-1000	Bearing - Flange Rear	2	39	37-8850	Gear Case & Bushing Assy. (Incl. Ref. #25 & 26)	1
16	20-0980	Bearing	2	40	32144-41	Screw - Thread Forming	8
17	20-0990	Bearing - Flange Front	2	41	20-3210	Bushing	1
18	19-8890	Impeller	1	42	237-87	Seal	1
19	21-5070	Key - Square	1	43	3257-23	Key - Woodruff	1
20	57-3490	Shaft - Impeller	1	*	57-3480	Gear Box Assembly	1
21	6-8590	Key - Impeller	1				
22	322-14	Screw - Hex. Hd.	2				
23	57-3500	Shaft - Auger	1				

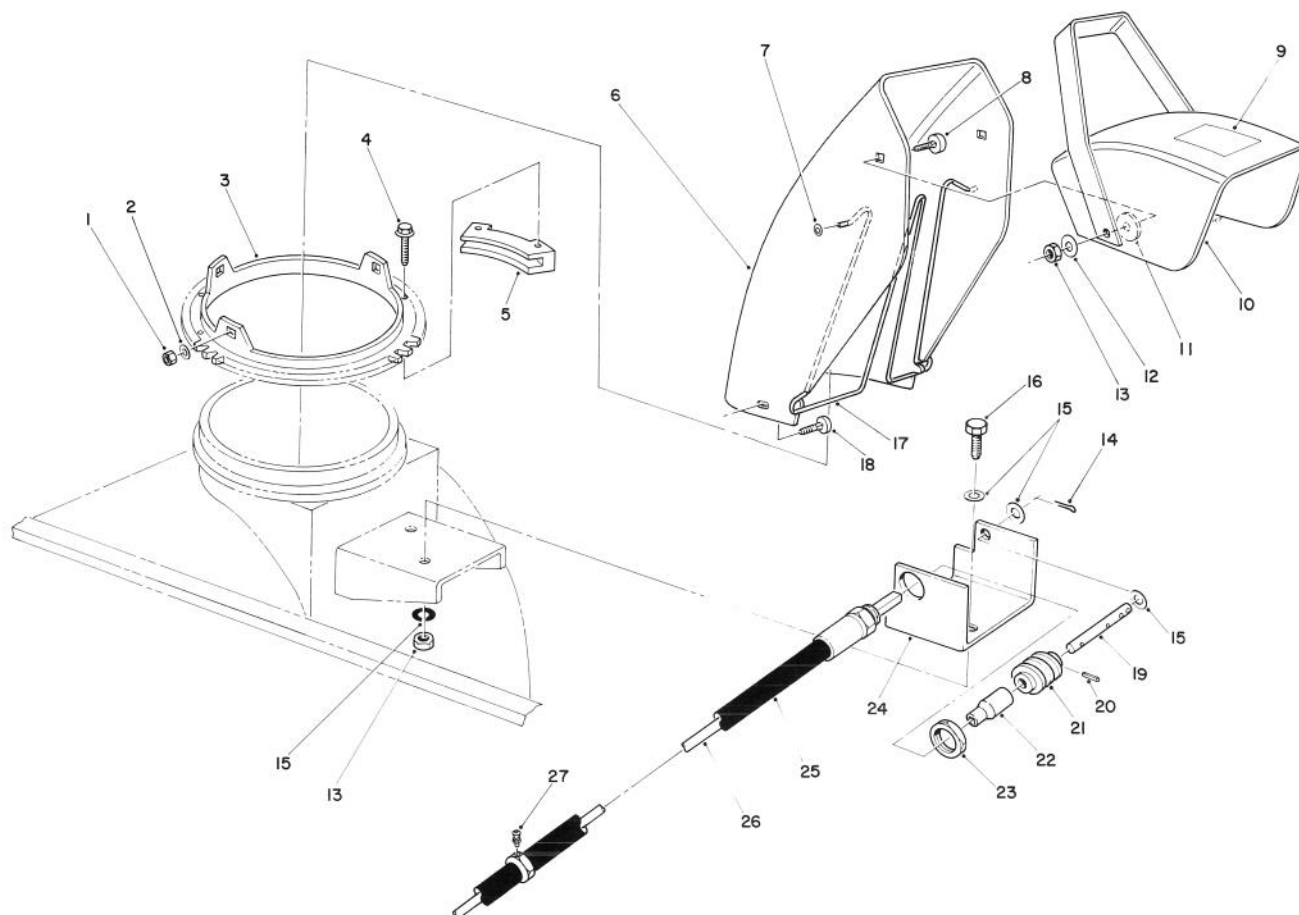


T-0105

CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	3
2	3256-23	Washer	3
3	25-5290	Ring - Chute Swivel	1
4	27-0220	Screw - Special	6
5	25-5450	Retainer - Chute	3
6	56-2600	Chute - Upper	1
7	3290-326	Nut - Push	2
8	3231-27	Bolt - Carriage	2
9	55-9650	Decal - Discharge Danger	1
10	11-7120	Deflector	1
11	20-4320	Washer - Rubber	2
12	3290-340	Washer - Belleville	2
13	3296-39	Nut - Lock	4
14	3272-10	Pin - Cotter	2

Ref. No.	Part No.	Description	No. Used
15	3256-24	Washer - Flat	6
16	323-6	Screw -	2
17	54-9770	Wire - Chute	1
18	3230-18	Bolt - Carriage	3
19	61-4950	Shaft - Worm Gear	1
20	32121-50	Pin - Roll	2
21	8-8600	Gear - Worm	1
22	61-4940	Coupler	1
23	353-955	Nut - Lock	1
24	61-4930	Bracket - Worm Gear	1
25	61-4870	Hose - Assembly	1
26	61-8520	Shaft - Flexible	1
27	302-52	Fitting - Grease	1

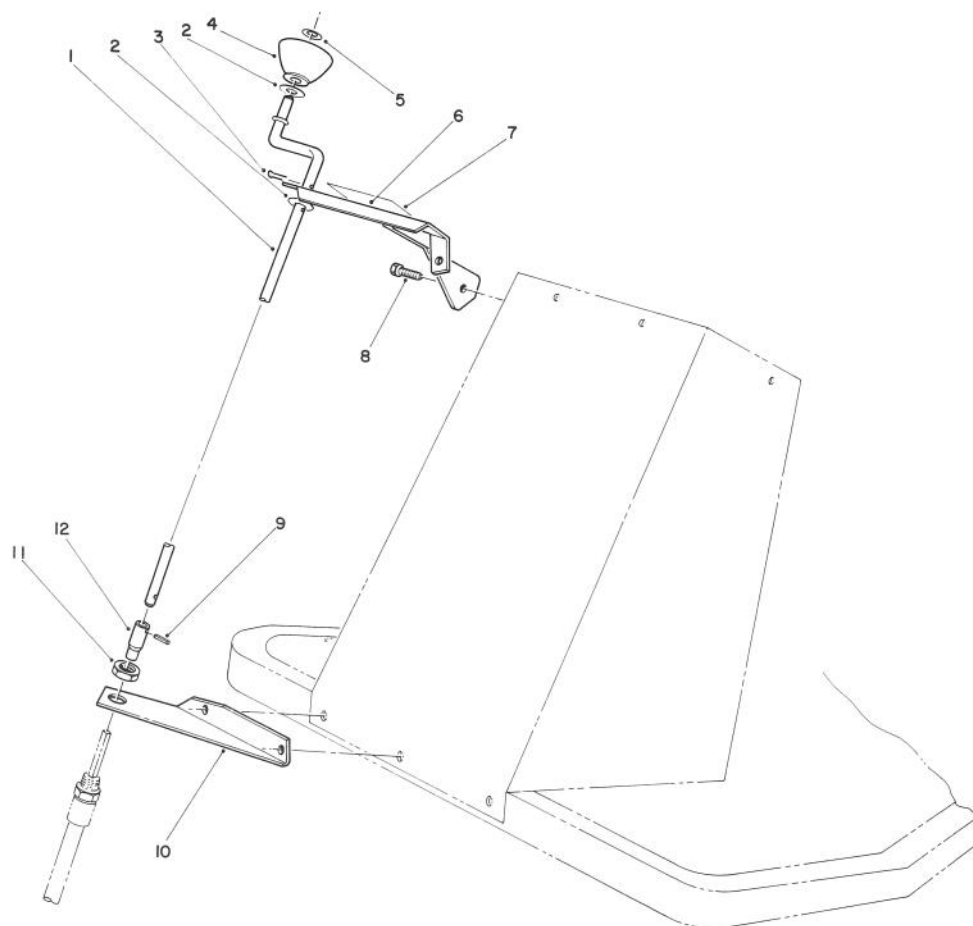


T-0106

CHUTE CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-4900	Rod - Chute Control	1
2	3256-24	Washer - Flat	3
3	3272-10	Pin - Cotter	2
4	61-4890	Knob	1
5	3290-320	Cap - Push	1
6	61-4920	Bracket - Top	1


Ref. No.	Part No.	Description	No. Used
7	61-8500	Decal - Chute Rotation	1
8	321-4	Screw - Hex. Hd.	2
9	32121-50	Pin - Roll	1
10	61-4910	Bracket - Bottom	1
11	353-955	Nut - Lock	1
12	61-4940	Coupler	1

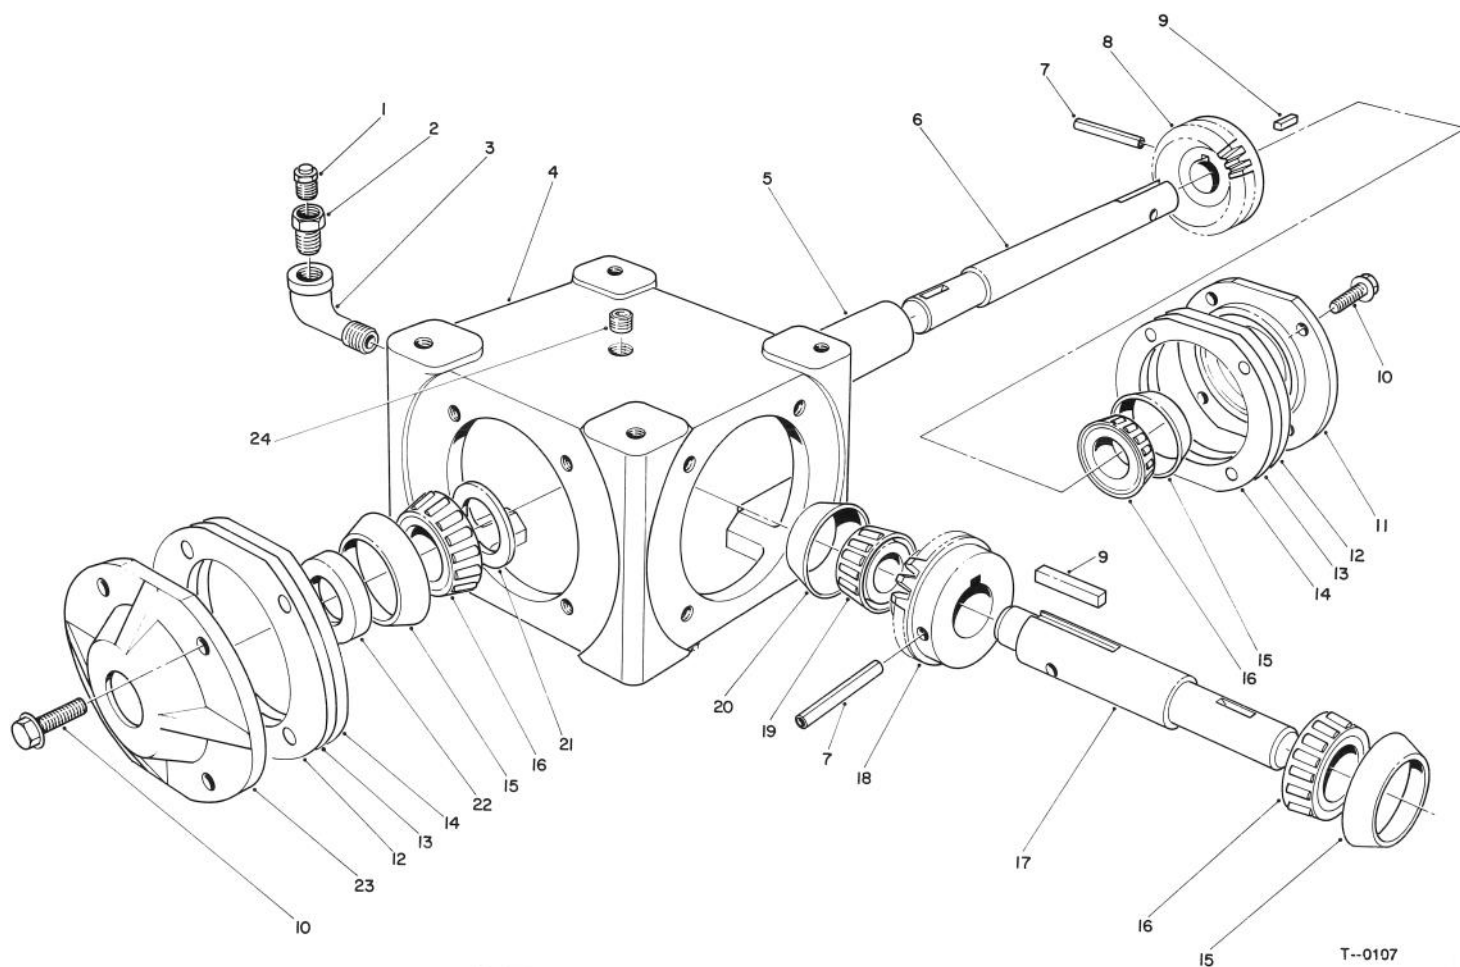

GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-3520	Valve - Pressure Relief	1
2	62-3550	Bushing - Reducer	1
3	62-3540	Elbow - Street	1
4	62-3300	Housing	1
5	62-3480	Spacer	1
6	62-3460	Shaft	1
7	62-3510	Pin - Roll	2
8	62-3500	Gear	1
9	62-3380	Key	2
10	62-3310	Screw - Hex. Hd.	12
11	62-3320	Cap	1
12	62-3420	Gasket - .015"	A/R

Ref. No.	Part No.	Description	No. Used
13	62-3430	Gasket - .005"	A/R
14	62-3440	Gasket - .003"	A/R
15	62-3340	Cup - Bearing	3
16	62-3330	Cone - Bearing	3
17	62-3390	Shaft	1
18	62-3350	Gear	1
19	62-3370	Cone - Bearing	1
20	62-3360	Cup - Bearing	1
21	62-3470	Washer	1
22	62-3400	Seal	2
23	62-3410	Cap	2
24	62-3490	Plug - Pipe	1

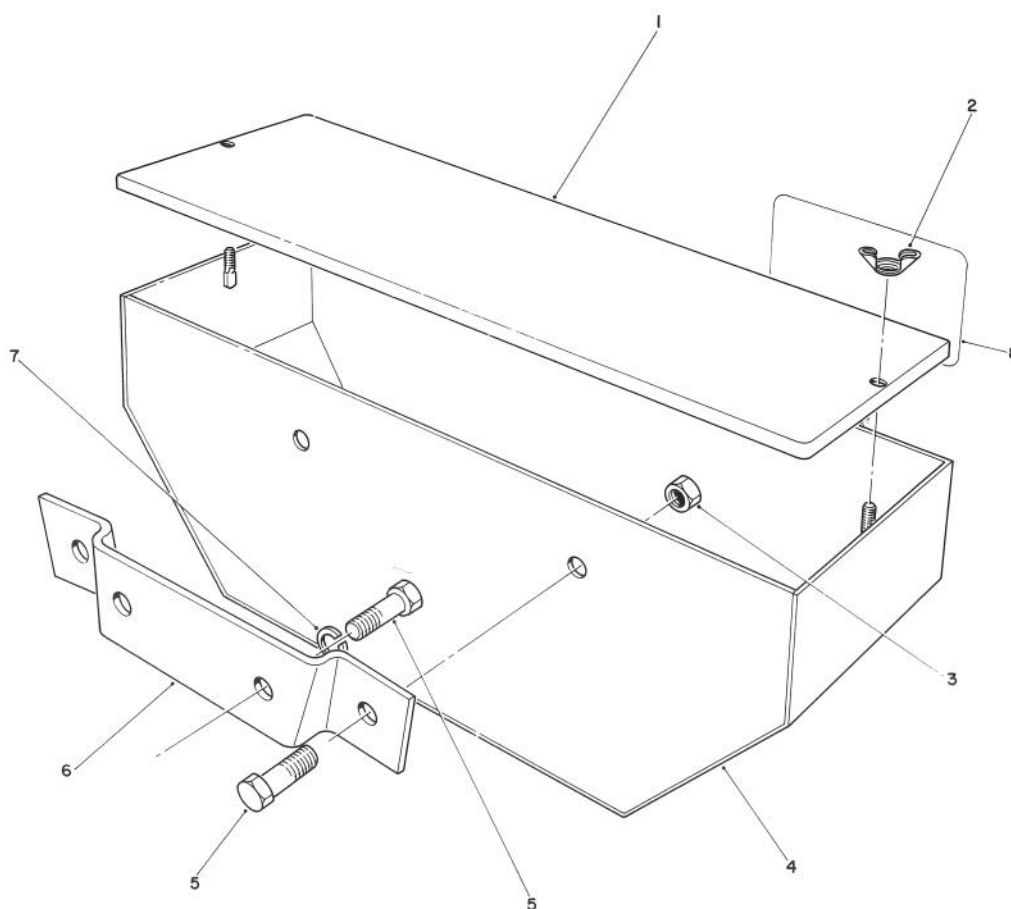


T-0108

WEIGHT BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-4130	Cover - Weight Box	1
2	32103-2	Nut - Wing	2
3	3296-25	Nut - Lock	2
4	61-4090	Box - Weight	1
5	325-5	Screw - Hex. Hd.	4
6	61-4140	Bracket - Mount	1

Ref. No.	Part No.	Description	No. Used
7	3253-7	Washer - Lock	2
8	43-5110	Decal	1
*	40-0590	Reflector	2
*	56-6630	Tire Chain Kit (Optional)	1
*	2410-67	Plug	2

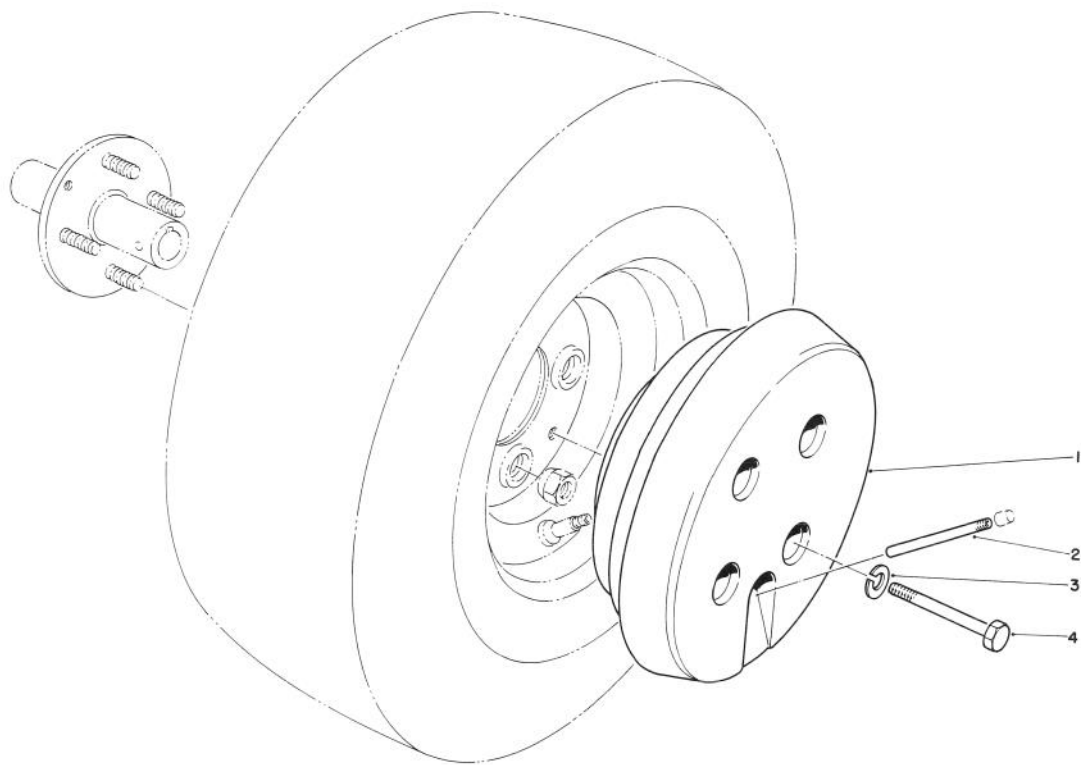


T-0109

WHEEL WEIGHT

Ref. No.	Part No.	Description	No. Used
1	56-5310	Weight - Wheel	2
2	232-45	Extension - Valve	2

Ref. No.	Part No.	Description	No. Used
3	3253-4	Washer - Lock	4
4	322-19	Screw - Hex. Hd.	4

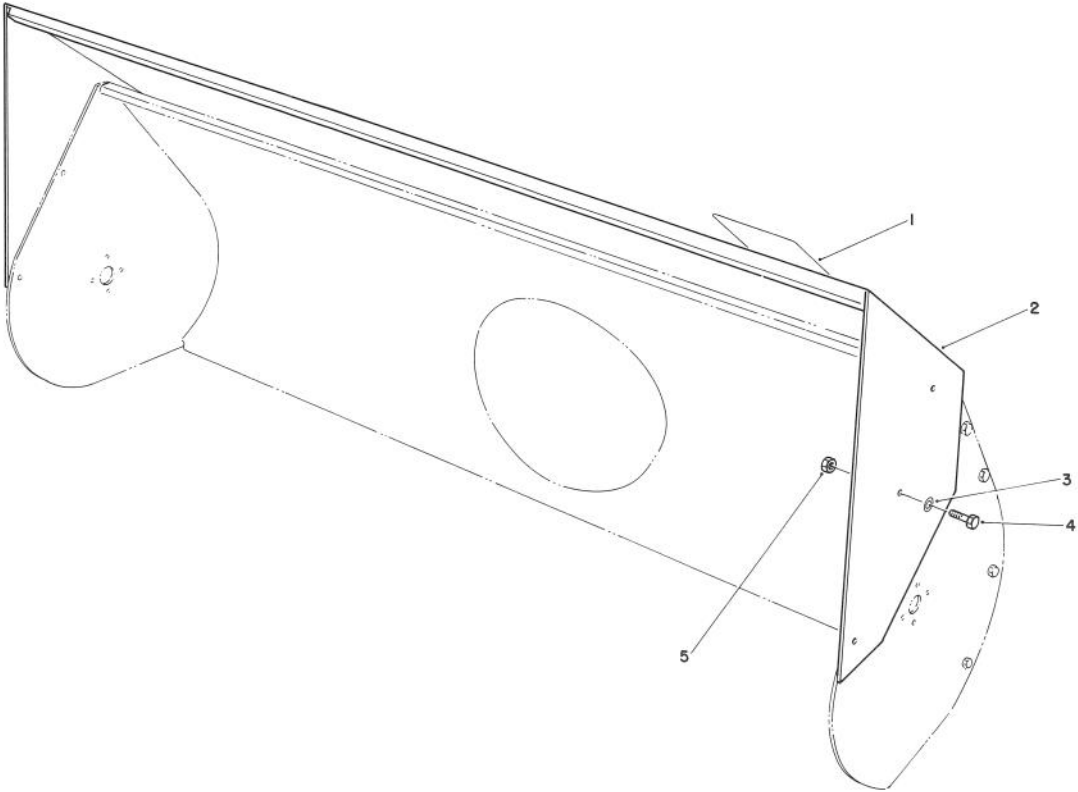

T-0110

AUGER EXTENSION

Ref. No.	Part No.	Description	No. Used
1	42-1770	Decal	1
2		Extension - Auger	1
3	3256-2	Washer	4

Ref. No.	Part No.	Description	No. Used
4	322-4	Screw - Hex. Hd.	4
5	3296-29	Nut - Lock	4
*	62-5780	Kit - Auger Extension	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0750	Washer - Flat	2 30 2	61-4910	Bracket - Bottom	5 10 1
3-8664	Washer - Thrust	3 34 1	61-4920	Bracket - Top	5 6 1
5-7170	Worm	3 35 1	61-4930	Bracket - Worm Gear	4 24 1
5-7180	Gear - Worm	3 29 1	61-4940	Coupler	5 12 1
6-8590	Key - Impeller	3 21 1	61-4940	Coupler	4 22 1
7-0045	Seal - Oil	3 25 2	61-4950	Shaft - Worm Gear	4 19 1
8-8600	Gear - Worm	4 21 1	61-8490	Decal - Rear Weight	1 12 1
11-7120	Deflector	4 10 1	61-8500	Decal - Chute Rotation	5 7 1
17-6500	Decal - Auger Sideplate	2 25 2	61-8510	Decal - Warning	1 3 1
19-8890	Impeller	3 18 1	61-8520	Shaft - Flexible	4 26 1
20-0980	Bearing	3 16 2	61-8650	Gear Box	1 15 1
20-0990	Bearing - Flange Front	3 17 2	62-3300	Housing	6 4 1
20-1000	Bearing - Flange Rear	3 15 2	62-3310	Screw - Hex. Hd.	6 10 12
20-3210	Bushing	3 41 1	62-3320	Cap	6 11 1
20-4320	Washer - Rubber	4 11 2	62-3330	Cone - Bearing	6 16 3
21-5070	Key - Square	3 19 1	62-3340	Cup - Bearing	6 15 3
25-5170	Ring - Chute	1 9 1	62-3350	Gear	6 18 1
25-5290	Ring - Chute Swivel	4 3 1	62-3360	Cup - Bearing	6 20 1
25-5450	Retainer - Chute	4 5 3	62-3370	Cone - Bearing	6 19 1
27-0220	Screw - Special	4 4 6	62-3380	Key	6 9 2
27-6601	Spacer - Coupling	3 7 4	62-3390	Shaft	6 17 1
30-1070	Screw - Hex. Hd.	1 20 1	62-3400	Seal	6 22 2
37-8850	Gear Case & Bushing Assy.	3 39 1	62-3410	Cap	6 23 2
37-8860	Gear Case & Bushing Assy.	3 27 1	62-3420	Gasket - .015	6 12A/R
40-0590	Reflector	7 * 2	62-3430	Gasket - .005	6 13A/R
42-1770	Decal	9 1 1	62-3440	Gasket - .003	6 14A/R
43-5110	Decal	7 8 1	62-3460	Shaft	6 6 1
44-2230	Coupling - Rubber	3 5 2	62-3470	Washer	6 21 1
51-0460	Gasket	3 31 1	62-3480	Spacer	6 5 1
53-7670	Decal - Auger Danger	1 2 2	62-3490	Plug - Pipe	6 24 1
54-9770	Wire - Chute	4 17 1	62-3500	Gear	6 8 1
55-9650	Decal - Discharge Danger	4 9 1	62-3510	Pin - Roll	6 7 2
56-2600	Chute - Upper	4 6 1	62-3520	Valve - Pressure Relief	6 1 1
56-5310	Weight - Wheel	8 1 2	62-3540	Elbow - Street	6 3 1
56-6630	Tire Chain Kit	7 * 1	62-3550	Bushing - Reducer	6 2 1
57-3300	Auger RH	3 1 1	62-5780	Kit - Auger Extension	9 * 1
57-3370	Auger LH	3 * 1	79-6670	Blade - Scraper	2 31 1
57-3390	Housing - Auger	1 4 1	232-45	Extension - Valve	8 2 2
57-3480	Gear Box Assembly	3 * 1	237-87	Seal	3 42 1
57-3490	Shaft - Impeller	3 20 1	2410-67	Plug	7 * 2
57-3500	Shaft - Auger	3 23 1	251-224	Bearing - Impeller	3 13 1
57-3510	Plate - Side	1 1 2	251-229	Bearing - Flange	3 12 2
57-3520	Bar - Extension	1 22 1	251-231	Collar - Locking	3 10 1
57-3550	Plate - Skid Mount	1 24 2	252-71	Bearing - Thrust	3 30 2
57-3560	Plate - Extension LH	1 23 1	252-76	Bearing - Thrust	3 37 1
57-3570	Plate - Extension RH	1 5 1	252-77	Washer - Thrust	3 36 1
57-3580	Skid	2 27 2	252-78	Washer - Thrust	3 38 1
57-3640	Pulley - Drive	1 18 1	256-32	Bushing	3 32 1
57-3650	Belt	1 17 1	256-237	Bushing	3 26 2
57-3710	Bar - Extension	1 6 1	281-1	Plug - Pipe	3 28 1
57-9890	Bracket - Blade Support	2 34 2	302-52	Fitting - Grease	4 27 1
61-4000	Hub	3 3 2	321-3	Screw - Hex. Hd.	2 29 8
61-4090	Box - Weight	7 4 1	321-4	Screw - Hex. Hd.	5 8 2
61-4130	Cover - Weight Box	7 1 1	321-9	Screw - Hex. Hd.	3 6 4
61-4140	Bracket - Mount	7 6 1	322-3	Screw - Hex. Hd.	2 35 2
61-4870	Hose - Assembly	4 25 1	322-4	Screw - Hex. Hd.	9 4 4
61-4890	Knob	5 4 1	322-5	Screw - Hex. Hd.	2 26 18
61-4900	Rod - Chute Control	5 1 1	322-14	Screw - Hex. Hd.	3 22 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-648

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-19	Screw - Hex. Hd.	8 4 4	3257-23	Key - Woodruff	3 43 1
323-4	Screw - Hex. Hd.	1 10 8	3257-33	Key - Woodruff	3 24 2
323-6	Screw -	4 16 2	3272-10	Pin - Cotter	5 3 2
323-6	Screw - Hex. Hd.	1 13 10	3272-10	Pin - Cotter	4 14 2
323-12	Screw - Hex. Hd.	1 7 4	3290-320	Cap - Push	5 5 1
325-5	Screw - Hex. Hd.	7 5 4	3290-326	Nut - Push	4 7 2
3229-25	Bolt - Carriage	2 33 6	3290-340	Washer - Belleville	4 12 2
3230-1	Bolt - Carriage	3 14 3	3296-16	Nut - Lock	3 8 12
3230-18	Bolt - Carriage	4 18 3	3296-16	Nut - Lock	2 32 6
3230-18	Bolt - Carriage	2 36 2	3296-25	Nut - Lock	7 3 2
3231-27	Bolt - Carriage	4 8 2	3296-29	Nut - Lock	4 1 3
3241-5	Screw - Set	3 4 4	3296-29	Nut - Lock	9 5 4
3242-4	Screw - Set	3 2 2	3296-29	Nut - Lock	3 11 5
3242-4	Screw - Set	1 19 2	3296-29	Nut - Lock	1 14 22
3245-32	Screw - Set	3 9 2	3296-39	Nut - Lock	1 8 20
3253-4	Washer - Lock	8 3 4	3296-39	Nut - Lock	4 13 4
3253-7	Washer - Lock	7 7 2	32103-2	Nut - Wing	7 2 2
3254-6	Washer - Lock	1 11 8	32120-72	Ring - Retaining	3 33 1
3256-2	Washer	9 3 4	32121-50	Pin - Roll	5 9 1
3256-23	Washer	4 2 3	32121-50	Pin - Roll	4 20 2
3256-24	Washer - Flat	5 2 3	32144-41	Screw - Thread Forming	3 40 8
3256-24	Washer - Flat	4 15 6	353-955	Nut - Lock	5 11 1
3256-57	Washer	1 21 1	353-955	Nut - Lock	4 23 1
3257-5	Key - Woodruff	1 16 2			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.