



LX460 Lawn Tractor

Model No. 13AX60RH744 - 1A056B50000 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front and Rear Wheel Assembly	 3	Crankcase Assembly Kohler SV600-0018	 21
Deck Lift Arm Assembly	 4	Oil Pan and Lubrication Assembly Kohler SV600-0018	 22
Steering Shaft and Front Axle Assembly	 5	Head, Valve and Breather Assembly Kohler SV600-0018	 23
Frame and Battery Assembly	 6	Ignition and Electrical Assembly Kohler SV600-0018	 24
Seat and Fender Assembly	 7	Blower Housing Assembly Kohler SV600-0018	 25
Fuel Tank and Hood Assembly	 8	Starting System Assembly Kohler SV600-0018	 26
Muffler Assembly	 9	Fuel System Assembly Kohler SV600-0018	 27
Transmission, Belt and Pulley Assembly	 10	Engine Control Assembly Kohler SV600-0018	 28
Single Speed Transmission Assembly No. 112-0368	 12	Air Intake and Filtration Assembly Kohler SV600-0018	 29
Brake and Traction Pedal Assembly	 14	Exhaust Stud and Decal Assembly Kohler SV600-0018	 30
PTO Engage Assembly	 15	Attachments and Accessories List	 31
Deck Assembly	 16		
Single Pulley Spindle Assembly No. 112-0311	 18		
Double Pulley Spindle Assembly No. 112-0383	 19		
Crankshaft Assembly Kohler SV600-0018	 20		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|--------------------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Kohler dealer | ❹ Obtain from your local Toro dealer |

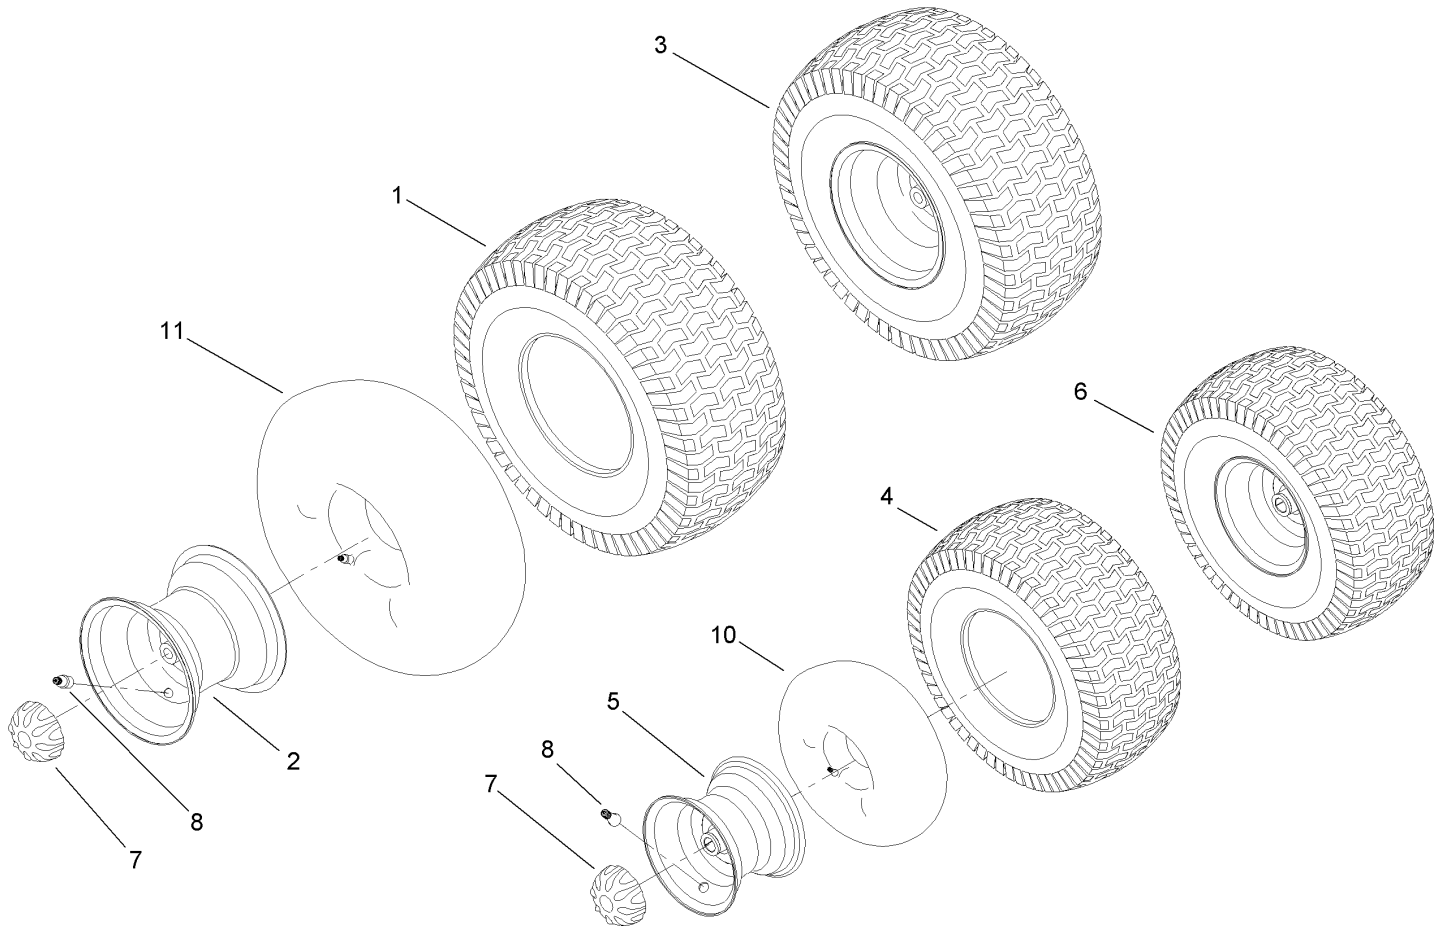


Front and Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1	112-0713	1	Tire-Multi Trac				
2	112-0448	1	Rim-Wheel, Rear				
3	112-0496	1	Rear Wheel ASM				
4	112-0576	1	Tire-Front				
5	112-0468	1	Rim-Wheel, Front				
6	112-0491	1	Front Wheel ASM				
7	112-0352	1	Cap-Hub				
8	112-0503	1	Valve-Air, Tubeless				
10	232-39	1	Tube-Inner				
11	93-3893	1	Tube-Inner				

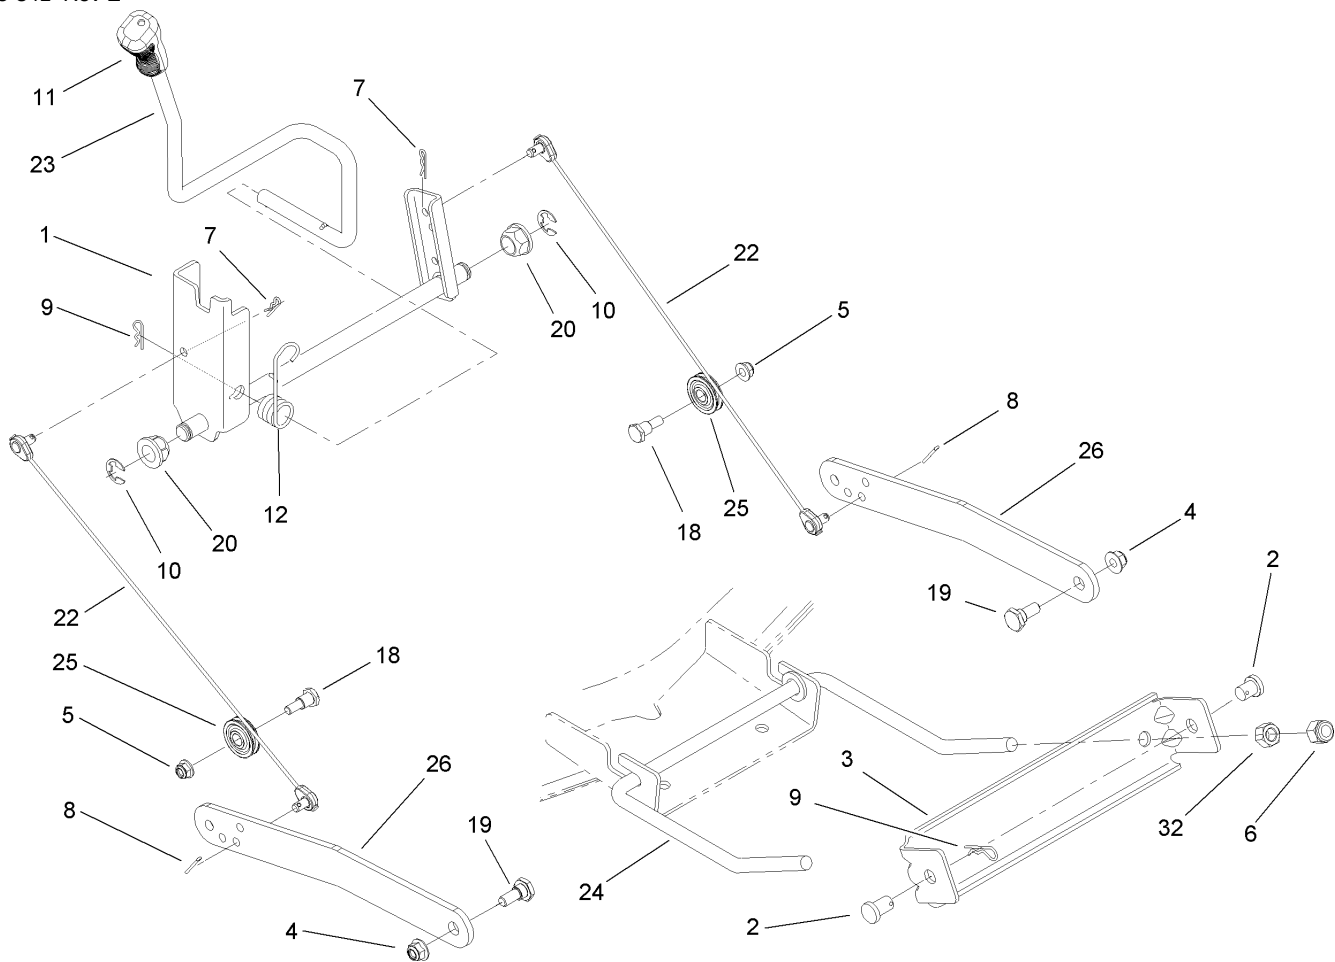

Deck Lift Arm Assembly


Ref	Part No.	Qty.	Description				
1	112-0686	1	Lift Shaft ASM				
2	112-0376	1	Pin-Bracket, Lift				
3	112-0707	1	Bracket-Stabilizer				
4	112-0668	1	Nut-Lock, Flange				
5	112-0650	1	Nut-Lock, Flange				
6	112-0476	1	Nut-Lock, Hex (Nylon)				
7	112-0459	1	Pin-Cotter				
8	112-0568	1	Pin-Cotter				
9	112-0394	1	Pin-Hair				
10	112-0586	1	Ring-E				
11	112-0585	1	Grip-Handle				
12	112-0477	1	Spring-Torsion				
18	112-0443	1	Bolt-Shoulder				
19	112-0565	1	Bolt-Shoulder				
20	112-0347	1	Bearing-Flange				
22	112-0374	1	Cable-Lift				
23	112-0674	1	Handle-Lift				
24	112-0456	1	Rod-Front, Adjust				
25	112-0502	1	Pulley-Roller				
26	112-0724	1	Link-Lift				
32	112-0458	1	Nut-Hex				

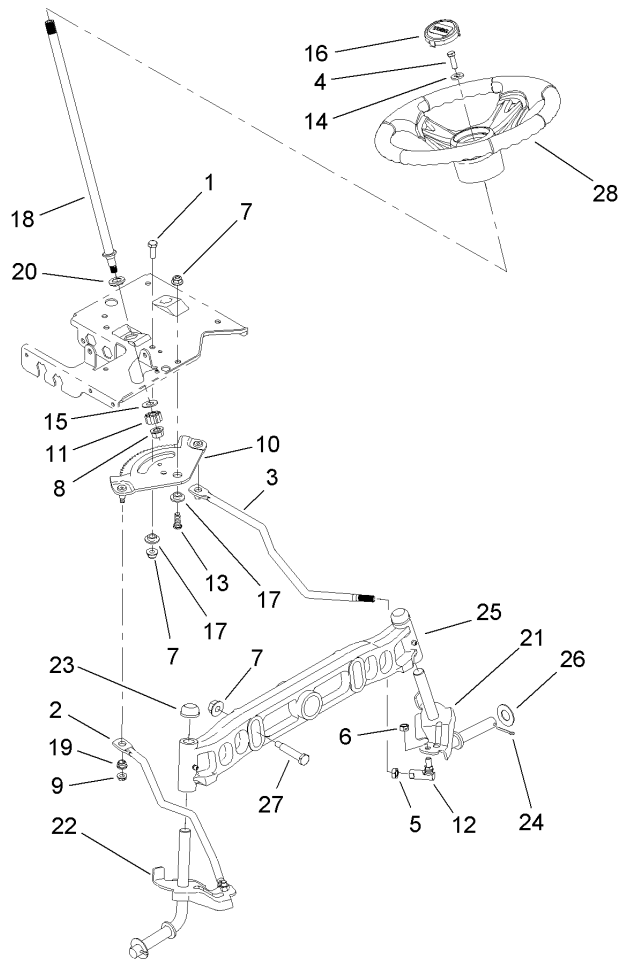

Steering Shaft and Front Axle Assembly


Ref	Part No.	Qty.	Description
1	112-0492	1	Screw-HH
2	112-0355	1	Link-Drag, RH
3	112-0346	1	Link-Drag, LH
4	112-0473	1	Screw-HH
5	112-0493	1	Nut-Jam
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0631	1	Screw-HH
14	112-0924	1	Washer-Flat
15	112-0925	1	Washer-Flat
16	112-3734	1	Cap-Wheel, Steering
17	112-0881	1	Spacer-Shoulder
18	112-5804	1	Shaft-Steering
19	112-0929	1	Bushing
20	112-0930	1	Bearing-Flange, Hex
21	112-0687	1	LH Axle ASM
22	112-0405	1	RH Axle ASM
23	112-0323	1	Cap
24	112-0519	1	Pin-Cotter

Ref	Part No.	Qty.	Description
25	112-0416	1	Axle-Pivot, Front
26	112-0396	1	Washer-Flat
27	112-0486	1	Bolt-Shoulder
28	112-0438	1	Wheel-Steering, Softgrip

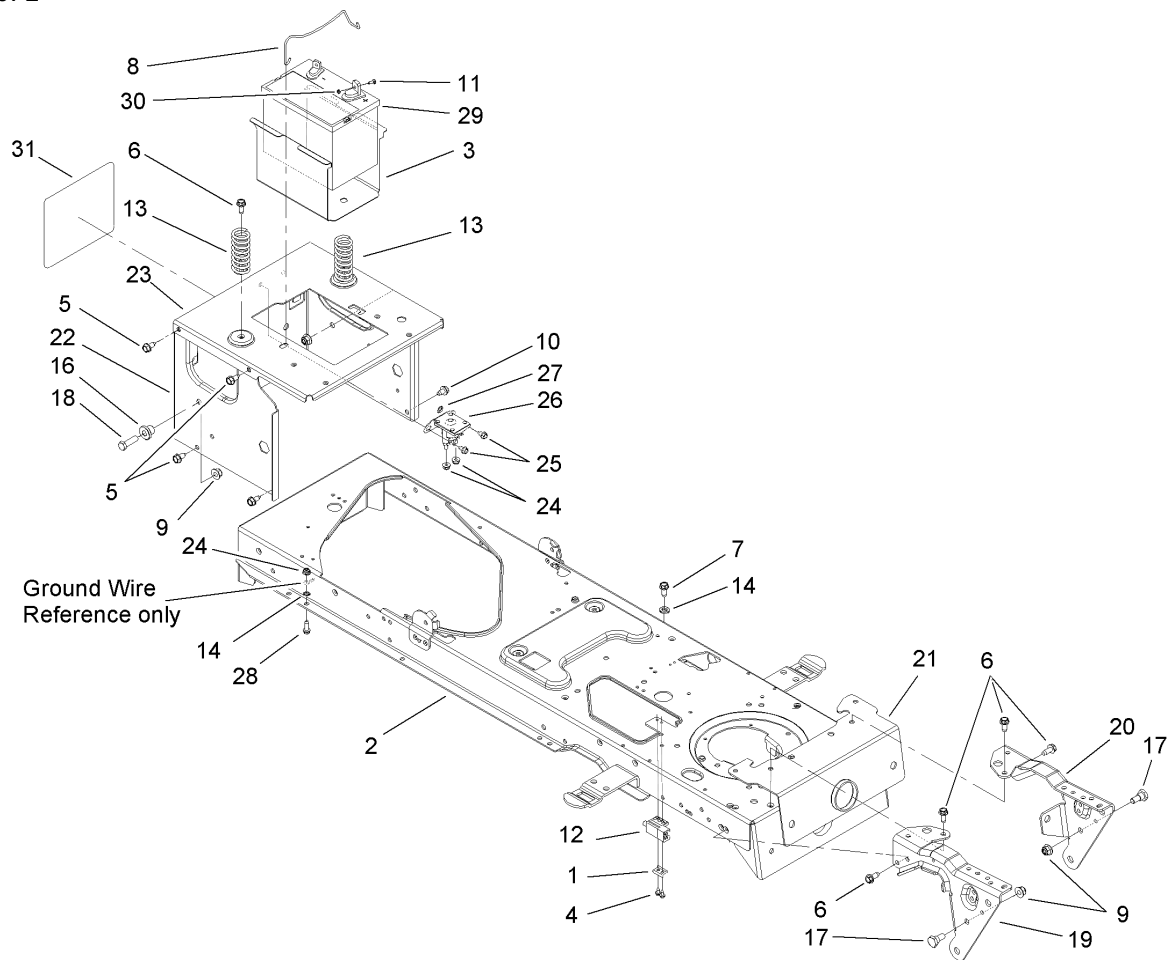


Frame and Battery Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch	26	112-0309	1	Solenoid-12V
2	112-0705	1	Lower Frame ASM	27	112-0703	1	Washer-Lock, External
3	112-0570	1	Tray-Battery	28	112-0587	1	Screw-HH, TAP
4	112-0651	1	Screw-HH, TAP	29	112-0425	1	Battery-245, Cca (Dry Flat Top)
5	112-0472	1	Screw-HH, TAP	30	112-5805	1	Nut-Sems
6	112-0395	1	Screw-HWH	31	112-1284	1	Decal-Toro
7	112-0659	1	Screw-HWH				
8	112-0581	1	Rod-Holddown, Battery				
9	112-0668	1	Nut-Lock, Flange				
10	112-0676	1	Screw-TAP				
11	112-0479	1	Bolt-CARR				
12	112-0455	1	Switch-Interlock				
13	112-0501	1	Spring-Compression				
14	112-0703	1	Washer-Lock, External				
16	112-0661	1	Spacer-Shoulder				
17	112-0565	1	Bolt-Shoulder				
18	112-0557	1	Screw-HH				
19	112-0620	1	Bracket-Pivot, Support				
20	112-0610	1	Bracket-Pivot, Support				
21	112-0640	1	Bracket-Pivot, Bar				
22	112-0728	1	Frame-Upper				
23	112-0647	1	Bracket-Frame, Seat				
24	112-0636	1	Nut-Lock, Flange				
25	112-0524	1	Screw-HWHTF				

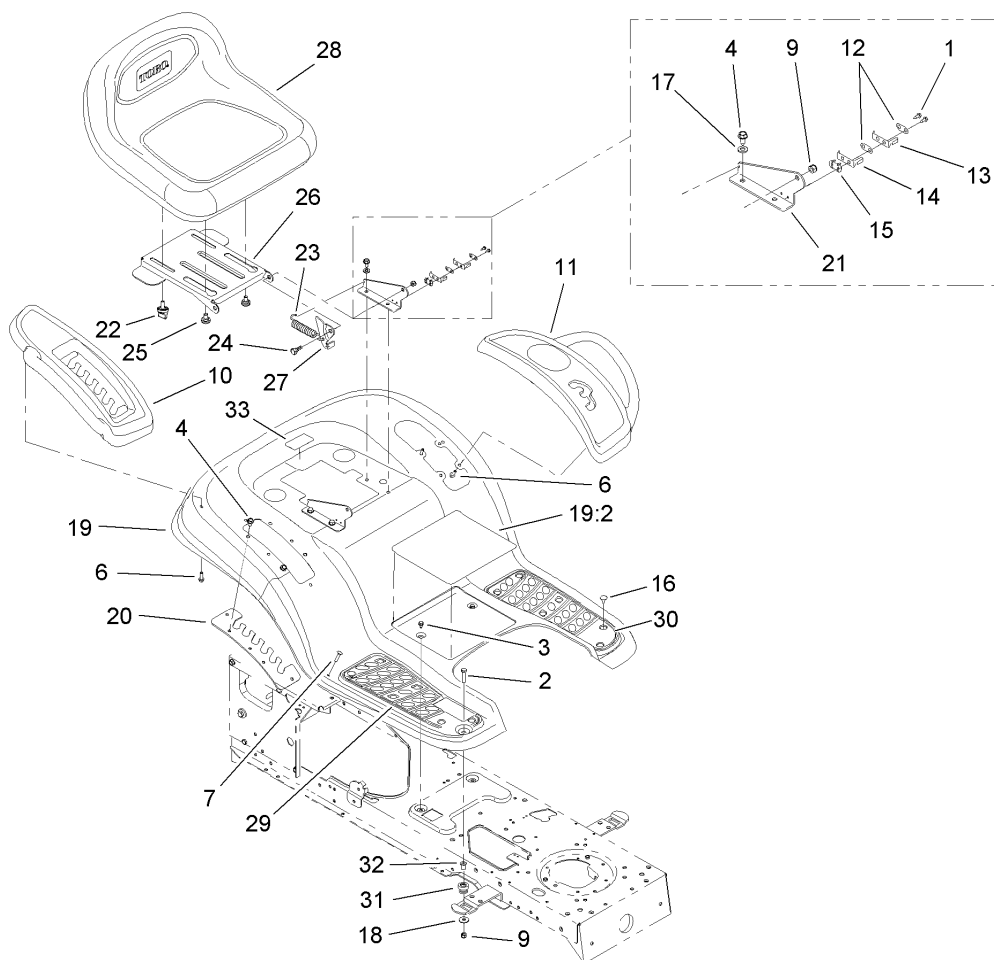


Seat and Fender Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0626	1	Screw-HWHTF	26	112-0593	1	Bracket-Seat
2	112-0373	1	Screw-HH	27	112-0646	1	Bracket-Lift, LH
3	112-0524	1	Screw-HWHTF	28	112-0363	1	Seat-Back, Medium
4	112-0556	1	Screw-HWH	29	112-0540	1	Pad-Foot, RH
6	112-0509	1	Screw-HH, TAP	30	112-0545	1	Pad-Foot, LH
7	112-0907	1	Screw-CARR	31	112-3732	1	Grommet
9	112-0650	1	Nut-Lock, Flange	32	112-3733	1	Spacer
10	112-0471	1	Cover-Fender, RH	33	112-1260	1	Decal-Service (Toro Hotline)
11	112-0470	1	Cover-Fender, LH				
12	112-0635	1	Plate-Insulator				
13	112-0529	1	Switch-Spring				
14	112-0532	1	Switch-Spring, Inner				
15	112-0637	1	Plate-Boss, Insulator				
16	112-0549	1	Clip-Ratchet, Fastener				
17	112-0517	1	Washer-Lock, External				
18	112-0582	1	Washer-Flat				
19	112-5855	1	Fender And Decal ASM				
19:2	112-1262	1	Decal-Danger				
20	112-0629	1	Bracket-Adjusting, Lift				
21	112-0905	1	Bracket-Mount, Seat				
22	112-0409	1	Knob				
23	112-0616	1	Spring-Extension				
24	112-0575	1	Bolt-Shoulder				
25	112-0554	1	Bolt-Shoulder				

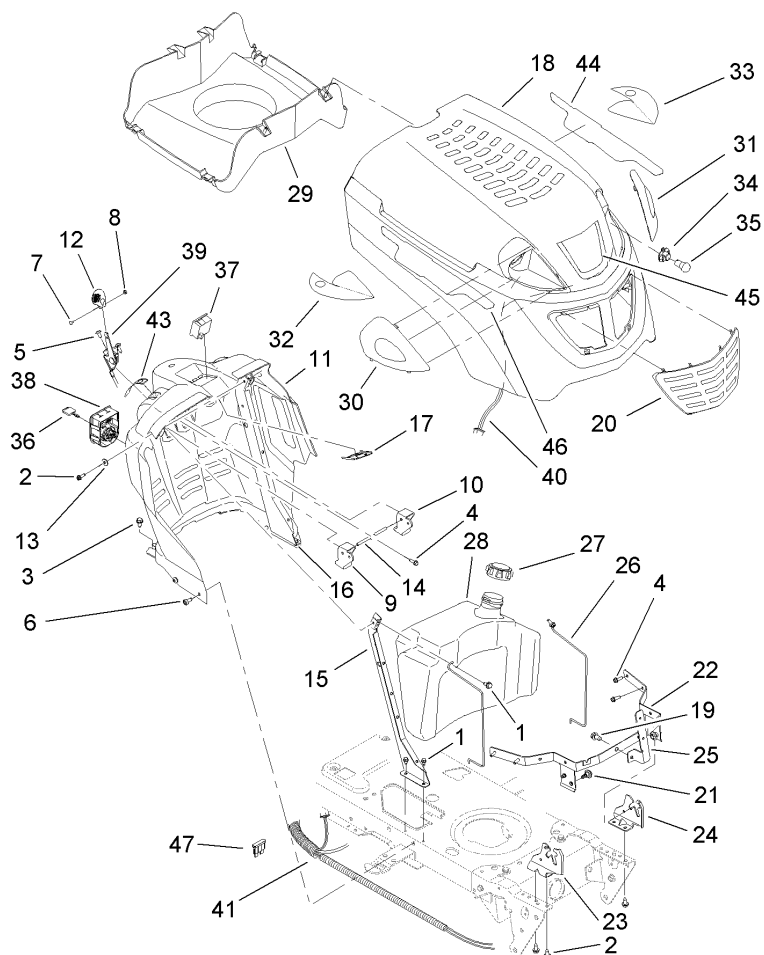

Fuel Tank and Hood Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0524	1	Screw-HWHTF	25	112-3736	1	Bracket-Support, Hood
2	112-0587	1	Screw-HH, TAP	26	112-0678	1	Rod-Support
3	112-0472	1	Screw-HH, TAP	27	112-0321	1	Cap-Fuel
4	112-0509	1	Screw-HH, TAP	28	112-0414	1	Tank-Fuel, 3 Gallon
5	112-0550	1	Screw-TAP	29	112-5802	1	Plenum-Hood
6	112-0563	1	Screw-TAP	30	112-0447	1	Lens-RH
7	112-0478	1	Screw-PTH	31	112-0446	1	Lens-LH
8	112-0515	1	Nut-Hex	32	112-5810	1	Reflector-RH
9	112-0526	1	Lever-Cruise	33	112-5811	1	Reflector-LH
10	112-0580	1	Lever-Brake	34	112-0408	1	Socket-Headlight
11	112-0518	1	Dash	35	112-0402	1	Lamp-12V, Miniature
12	112-0474	1	Knob-Control	36	112-0312	1	Key-Ignition
13	112-0485	1	Washer-Spring	37	112-0336	1	Meter-Indicator, Systems
14	112-0604	1	Rod-Lever, Bent	38	112-0865	1	Module-Switch, Ignition
15	112-0583	1	Support-Dash, RH	39	112-0489	1	Cable-Throttle And Choke
16	112-0591	1	Support-Dash, LH	40	112-0480	1	Harness-Headlight
17	112-5809	1	Bracket-PTO	41	112-0595	1	Harness-Wiring
18	112-0444	1	Hood	43	112-1271	1	Decal-Throttle, Dash
19	112-0906	1	Screw-HWHTF	44	112-1280	1	Decal-Hood, Left Side
20	112-0381	1	Grill	45	112-1285	1	Decal-Hood, Toro
21	112-0597	1	Bolt-Shoulder	46	112-1281	1	Decal-Hood, Right Side
22	112-0555	1	Bracket-Pivot	47	112-5943	1	Fuse-20 Amp
23	112-0727	1	Bracket-Pivot, Hood (RH)				
24	112-0726	1	Bracket-Pivot, Hood (LH)				

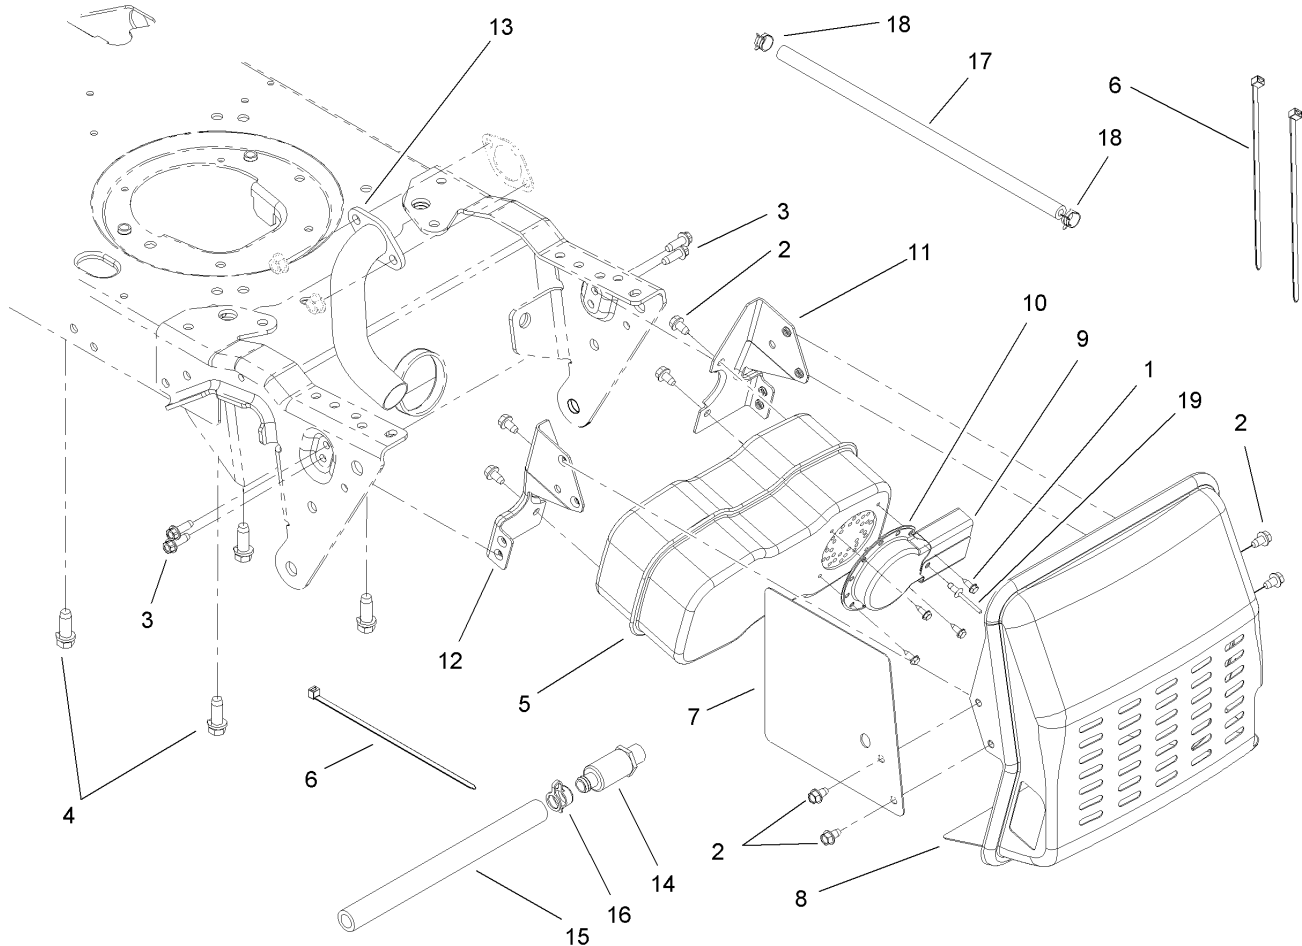

Muffler Assembly

Ref	Part No.	Qty.	Description				
1	112-0626	1	Screw-HWHTF				
2	112-0524	1	Screw-HWHTF				
3	112-0587	1	Screw-HH, TAP				
4	112-0663	1	Screw-TAP				
5	112-5826	1	Muffler-Inlet, Single				
6	112-0527	1	Tie-Cable				
7	112-5827	1	Shield-Heat				
8	112-0457	1	Muffler Shield ASM				
9	112-0730	1	Deflector-Muffler, Long				
10	112-0453	1	Deflector-Muffler				
11	112-0467	1	Bracket-Muffler, LH				
12	112-0466	1	Bracket-Muffler, RH				
13	112-0430	1	Pipe-Exhaust				
14	112-0388	1	Drain-Oil				
15	112-0553	1	Hose-Drain				
16	112-0397	1	Cap-Drain, Oil				
17	112-0720	1	Hose-Fuel				
18	112-0573	1	Clamp-Hose				
19	112-3741	1	Rivet-Pop				

Transmission, Belt and Pulley Assembly

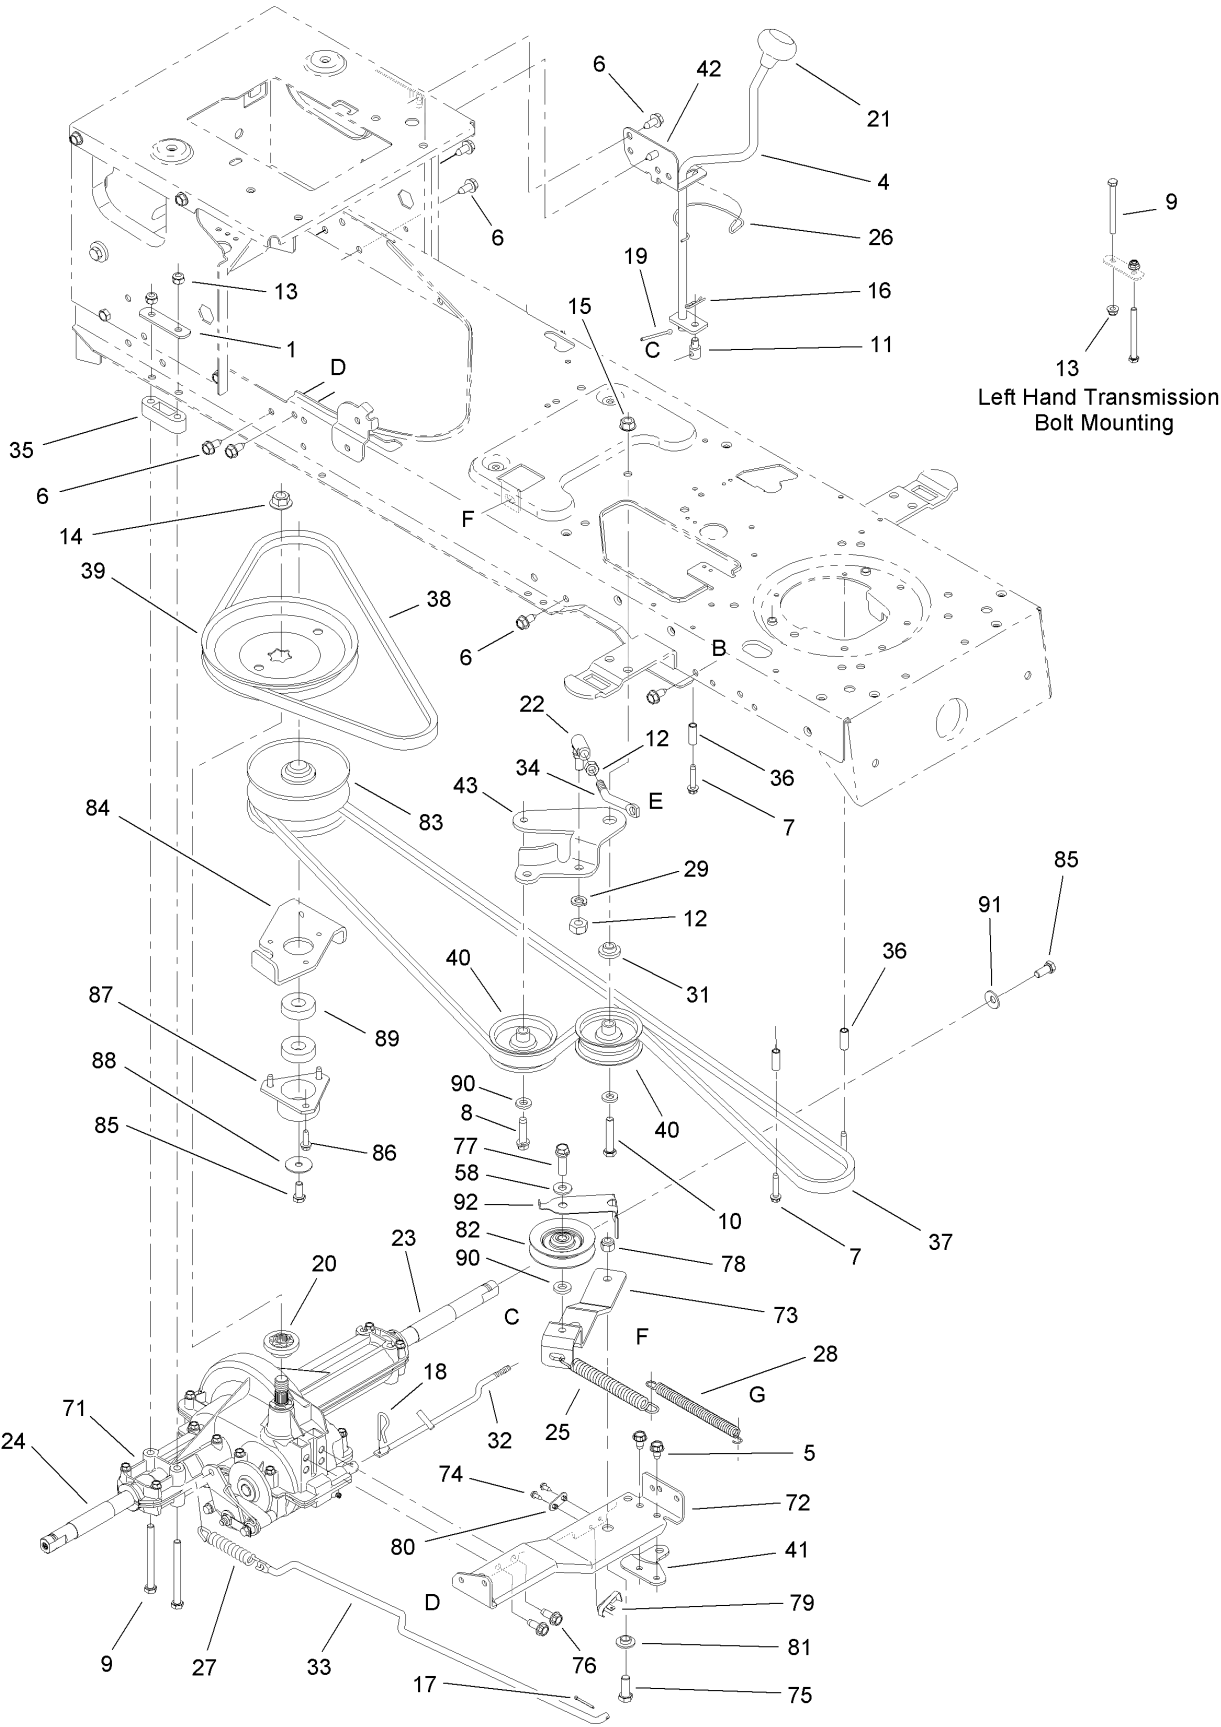


Transmission, Belt and Pulley Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
4	112-0627	1	Shift Lever ASM
5	112-0676	1	Screw-TAP
6	112-0472	1	Screw-HH, TAP
7	112-0603	1	Screw-HH
8	112-0469	1	Screw-HH, TAP
9	112-0667	1	Screw-HH
10	112-0421	1	Screw-HH
11	112-0592	1	Ferrule-Adj
12	112-0343	1	Nut-Hex
13	112-0650	1	Nut-Lock, Flange
14	112-0451	1	Nut-Flange
15	112-0385	1	Nut-Lock, Flange
16	112-0459	1	Pin-Cotter
17	112-0568	1	Pin-Cotter
18	112-0639	1	Pin-Hair
19	112-0412	1	Pin-Cotter
20	112-0450	1	Hub-Pulley
21	112-0514	1	Knob-Shift
22	112-0306	1	Ball Joint ASM
23	112-0670	1	Sleeve
24	112-0683	1	Sleeve
25	112-5991	1	Spring-Extension
26	112-0357	1	Clip-Spring, Shifter
27	112-0350	1	Spring-Extension
28	112-0348	1	Spring-Extension
29	112-0415	1	Washer-Lock
31	112-0345	1	Spacer-Shoulder
32	112-0632	1	Rod-Shift
33	112-0655	1	Rod-Brake
34	112-0538	1	Rod-Adjustment, Idler
35	112-0673	1	Spacer-Transaxle
36	112-0644	1	Spacer
37	112-0301	1	Belt-Drive, Variable Speed
38	112-0305	1	Belt-Drive, Transmission
39	112-0379	1	Pulley-V (W/Hub)
40	112-3687	1	Pulley-Idler, Flat
41	112-5813	1	Bracket-Shift
42	112-0638	1	Bracket-Shift
43	112-0525	1	Bracket-Idler, Center Double
58	112-0541	1	Washer-Flat
71	112-0368	1	Single Speed Transmission ASM
72	112-0552	1	Bracket-Torque
73	112-0434	1	Bracket-Idler
74	112-0626	1	Screw-HWHTF
75	112-0492	1	Screw-HH
76	112-0556	1	Screw-HWH
77	112-0469	1	Screw-HH, TAP
78	112-0417	1	Nut-Lock, Hex
79	112-0602	1	Switch-Spring, Short
80	112-0625	1	Plate-Insulator
81	112-0360	1	Spacer-Shoulder


Ref	Part No.	Qty.	Description
82	112-0892	1	Pulley-Idler, V-Type
83	112-0364	1	Variable Speed Pulley ASM
84	112-0596	1	Bracket-Pulley
85	112-0551	1	Screw-HH
86	112-0587	1	Screw-HH, TAP
87	112-0520	1	Cup-Bearing
88	112-0500	1	Washer-Flat
89	112-0423	1	Bearing-Ball
90	112-0544	1	Washer-Flat
91	112-0435	1	Washer-Bell
92	112-5883	1	Guide-Belt, Traction

Single Speed Transmission Assembly No. 112-0368

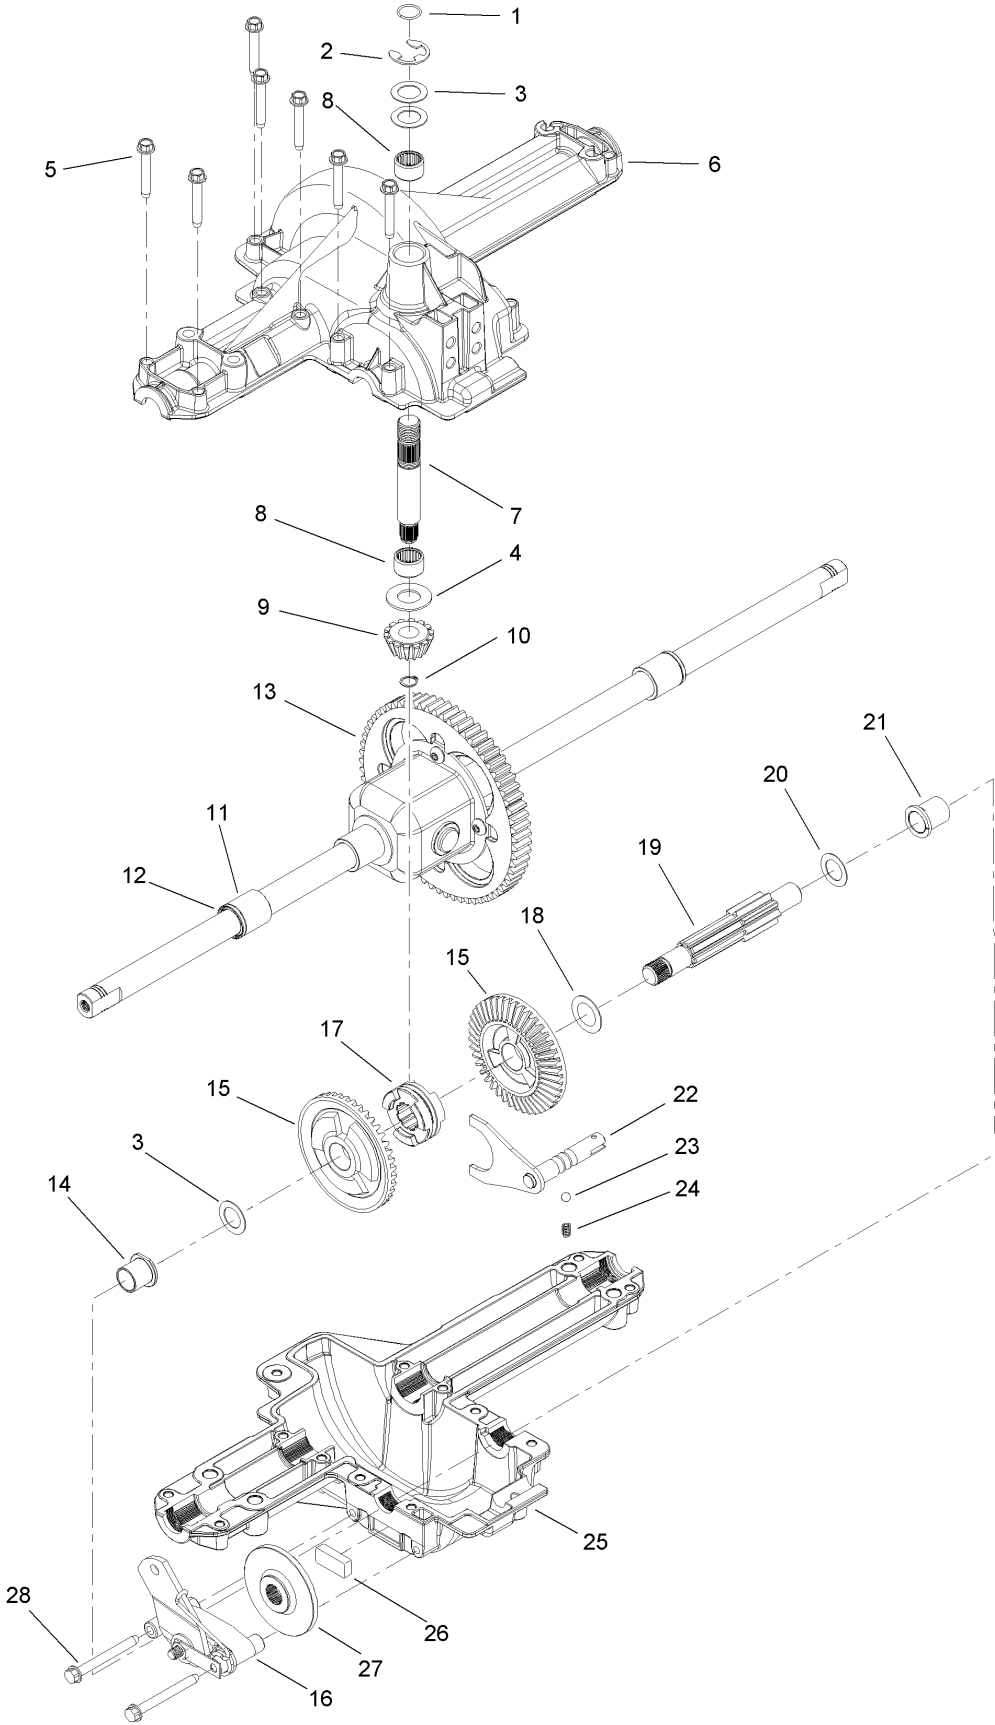

Single Speed Transmission Assembly No. 112-0368


Ref	Part No.	Qty.	Description				
1	112-0819	1	Ring-Wire				
2	112-0756	1	Ring-E				
3	112-0745	1	Washer-Flat				
3	112-0748	1	Washer-Flat				
3	112-0750	1	Washer-Flat				
4	112-0769	1	Washer-Thrust				
5	112-0839	1	Screw-TAP				
6	112-0833	1	Housing-Upper				
7	112-0826	1	Shaft-Input				
8	112-0808	1	Bearing-Needle				
9	112-0807	1	Pinion-Input, 14T				
10	112-0809	1	Ring-Snap				
11	112-5944	1	Sleeve-Bearing				
12	112-0800	1	Seal				
13	112-0823	1	Differential ASM				
14	112-0794	1	Bearing-Flange				
15	112-0796	1	Gear-Bevel, 42T				
16	112-0832	1	Brake ASM				
17	112-0840	1	Collar-Clutch				
18	112-5945	1	Washer-Flat				
19	112-0841	1	Shaft-Drive				
20	112-0755	1	Washer-Thrust				
21	112-0795	1	Bearing-Flange				
22	112-0806	1	Shift Fork ASM				
23	112-0799	1	Ball-Detent				
24	112-0801	1	Spring-Detent				
25	112-0834	1	Housing-Lower				
26	112-0741	1	Puck-Brake				
27	112-0817	1	Disc-Brake				
28	112-0698	1	Screw-HWH				

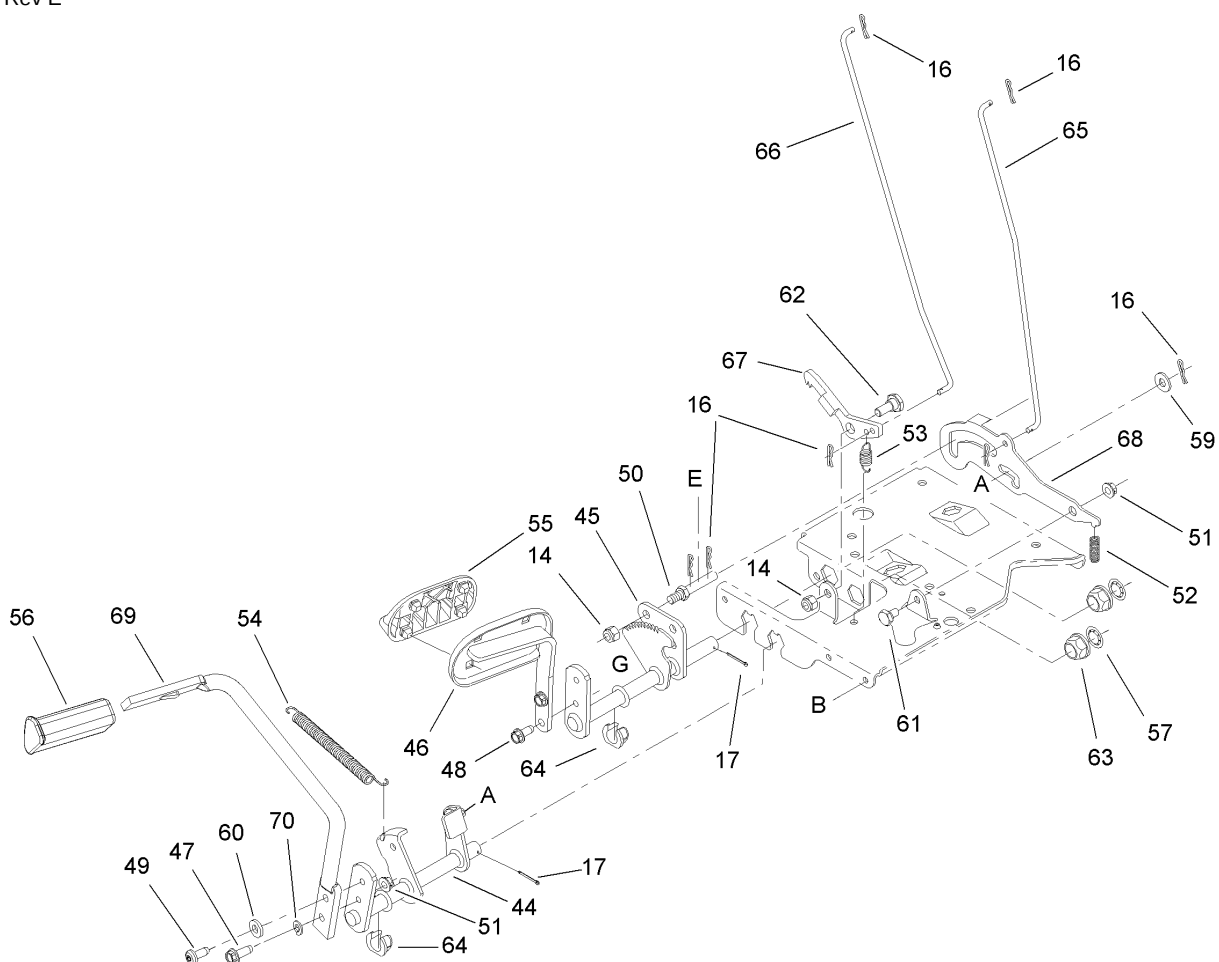

Brake and Traction Pedal Assembly

Ref	Part No.	Qty.	Description
14	112-0668	1	Nut-Lock, Flange
16	112-0459	1	Pin-Cotter
17	112-0568	1	Pin-Cotter
44	112-0648	1	Brake Control ASM
45	112-0539	1	Speed Control ASM
46	112-0680	1	Pedal ASM
47	112-0404	1	Screw-HWHTF
48	112-0395	1	Screw-HWH
49	112-0563	1	Screw-TAP
50	112-0599	1	Pin
51	112-0511	1	Nut-Lock, Flange
52	112-0506	1	Spring
53	112-0510	1	Spring-Extension
54	112-0348	1	Spring-Extension
55	112-0543	1	Pad-Pedal
56	112-0530	1	Pad-Brake
57	112-0339	1	Washer-Flat
59	112-0572	1	Washer-Flat
60	112-0579	1	Washer-Flat
61	112-5817	1	Bolt-Shoulder
62	112-0442	1	Bolt-Shoulder
63	112-0347	1	Bearing-Flange
64	112-0387	1	Bearing-Flange, Hex (Split)
65	112-0675	1	Rod-Brake, Lock Control

Ref	Part No.	Qty.	Description
66	112-0662	1	Rod-Control, Cruise
67	112-0696	1	Latch-Cruise
68	112-5816	1	Bracket-Lock Out
69	112-3738	1	Pedal-Brake
70	112-0366	1	Washer-Lock

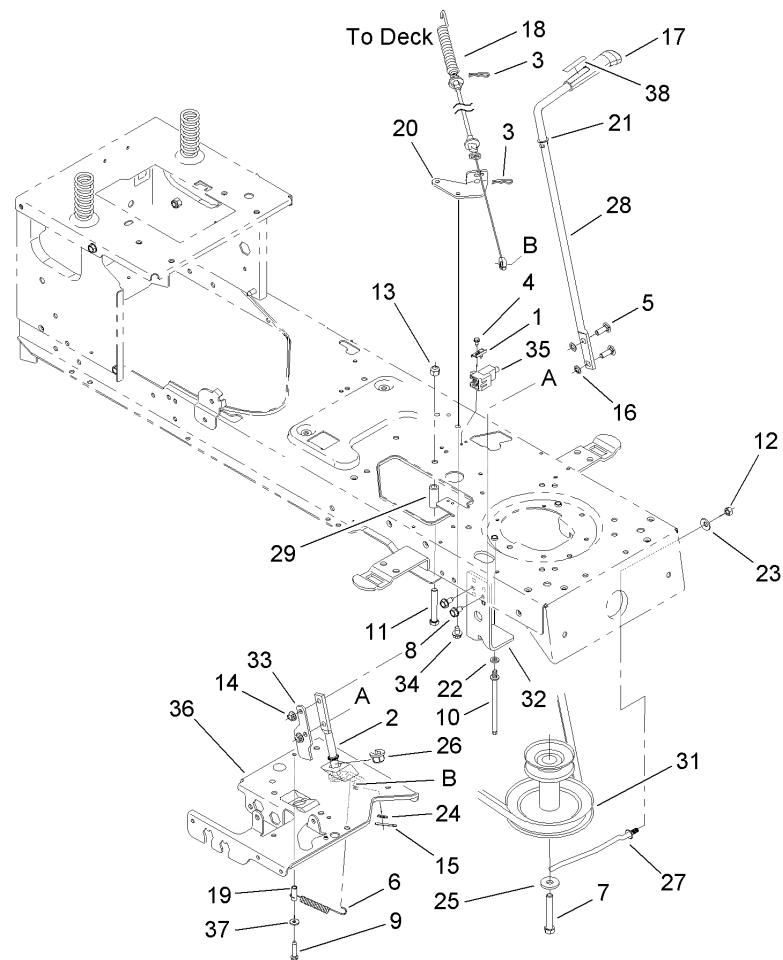


PTO Engage Assembly

Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-0658	1	Lever-Engage, PTO
3	112-0398	1	Pin-Click
4	112-0651	1	Screw-HH, TAP
5	112-0598	1	Bolt-CARR
6	112-0567	1	Spring-Extension
7	112-5819	1	Screw-HH
8	112-0472	1	Screw-HH, TAP
9	112-0843	1	Screw-HWH
10	112-0318	1	Pin-Guard, Belt
11	112-0700	1	Screw-HH
12	112-0650	1	Nut-Lock, Flange
13	112-0668	1	Nut-Lock, Flange
14	112-0511	1	Nut-Lock, Flange
15	112-0412	1	Pin-Cotter
16	112-0645	1	Nut-Push
17	112-0449	1	Knob-PTO
18	112-0504	1	Cable-Engage, Deck
19	112-0644	1	Spacer
20	112-0649	1	Bracket-Cable
21	112-0498	1	Washer-Flat
22	112-0366	1	Washer-Lock
23	112-0435	1	Washer-Bell
24	112-0601	1	Washer-Flat


Ref	Part No.	Qty.	Description
25	112-0380	1	Washer-Flat
26	112-0384	1	Bearing-Flange, Hex (Split)
27	112-5820	1	Rod-Keeper, Belt
28	112-0393	1	Handle-Engage, Deck
29	112-0433	1	Spacer
31	112-0333	1	Pulley-Engine
32	112-0689	1	Bracket-Deck, Up Stop
33	112-0516	1	Bracket-Stop
34	112-0676	1	Screw-TAP
35	112-0455	1	Switch-Interlock
36	112-0681	1	Bracket-Support, Steering
37	112-3695	1	Washer-Flat
38	112-1274	1	Decal-PTO, Manual

Deck Assembly

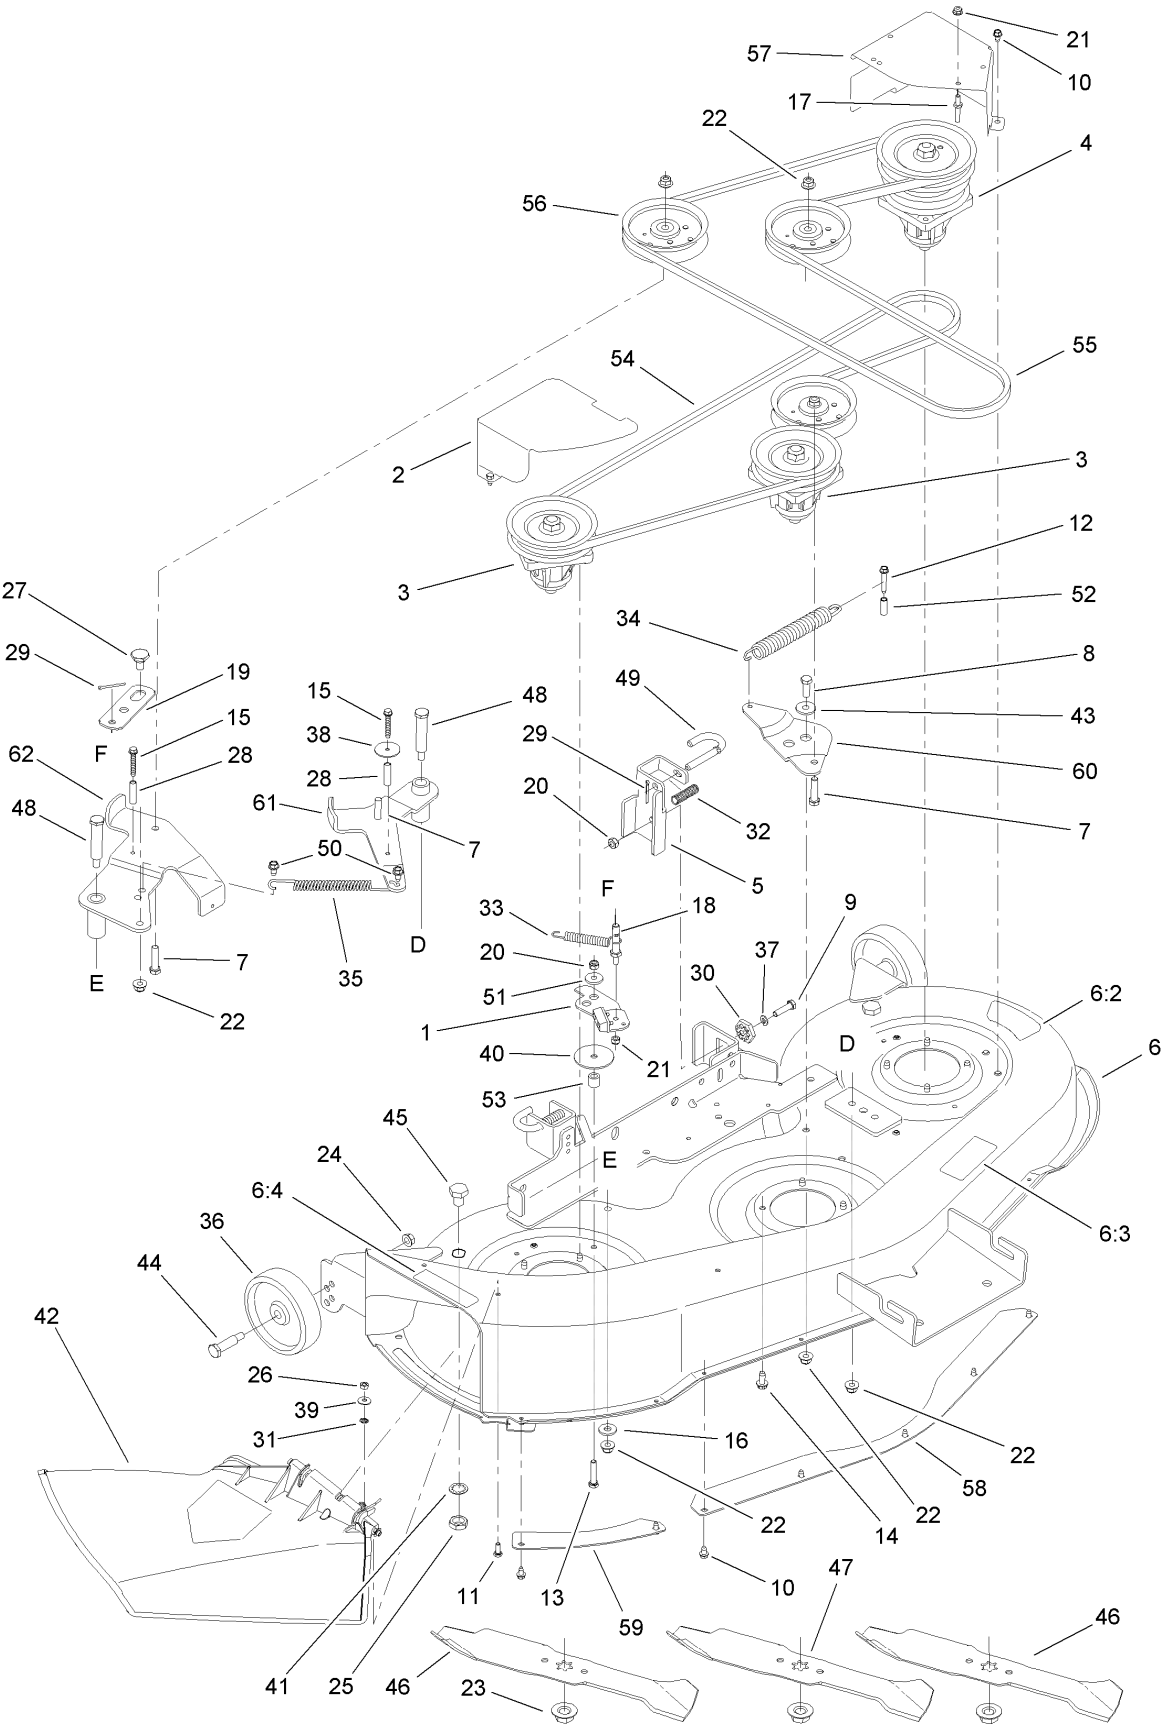


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0326	1	Deck Brake Bracket ASM	50	112-0597	1	Bolt-Shoulder
2	112-0401	1	Cover-Belt, RH	51	112-0410	1	Spacer-Shoulder
3	112-0311	1	Spindle ASM	52	112-0644	1	Spacer
4	112-0383	1	Double Pulley Spindle ASM	53	112-0633	1	Spacer
5	112-0413	1	LH Hanger Bracket ASM	54	112-0317	1	Belt
6	112-5856	1	Deck And Decal ASM	55	112-5834	1	Belt-V
6:2	112-1267	1	Decal-Danger	56	112-0314	1	Pulley-Idler
6:3	112-1269	1	Decal-Routing, Belt	57	112-0431	1	Cover-Belt, LH
6:4	112-1265	1	Decal-Danger	58	112-0464	1	Skirt-Center, Deck
7	112-0578	1	Screw-HH	59	112-0400	1	Skirt-RH, Deck
8	112-0492	1	Screw-HH	60	112-0666	1	Bracket-Idler
9	112-0373	1	Screw-HH	61	112-0495	1	LH Idler Bracket ASM
10	112-0524	1	Screw-HWHTF	62	112-0494	1	RH Idler Bracket ASM
11	112-0499	1	Screw-HH				
12	112-0843	1	Screw-HWH				
13	112-0594	1	Screw-HH				
14	112-0395	1	Screw-HWH				
15	112-5828	1	Screw-HH				
16	112-5829	1	Washer-Flat				
17	112-0429	1	Pin-Guard, Belt				
18	112-0722	1	Pin				
19	112-5830	1	Bracket-Brake				
20	112-0650	1	Nut-Lock, Flange				
21	112-0636	1	Nut-Lock, Flange				
22	112-0668	1	Nut-Lock, Flange				
23	112-0330	1	Nut-Flange, Hex				
24	112-0385	1	Nut-Lock, Flange				
25	112-0351	1	Nut-Hex				
26	112-0522	1	Nut-Hex				
27	112-0328	1	Bolt-Shoulder				
28	112-5831	1	Spacer				
29	112-0412	1	Pin-Cotter				
30	112-0327	1	Gear-Adjustment, Deck				
31	112-0623	1	Retainer-Bolt				
32	112-0406	1	Spring-Compression				
33	112-0320	1	Spring-Extension				
34	112-0324	1	Spring-Extension				
35	112-0432	1	Spring-Extension				
36	112-0337	1	Wheel-Deck, Rear				
37	112-0366	1	Washer-Lock				
38	112-5832	1	Washer-Flat				
39	112-0485	1	Washer-Spring				
40	112-0560	1	Washer-Flat				
41	112-0643	1	Washer-Lock				
42	112-0353	1	Discharge Chute ASM				
43	112-0508	1	Spacer-Shoulder				
44	112-0334	1	Bolt-Shoulder				
45	112-0577	1	Plug				
46	112-0304	1	Blade-16.28 Inch				
47	112-0302	1	Blade-14.88 Inch				
48	112-5833	1	Bolt-Shoulder				
49	112-0436	1	Pin-Handle, Deck Release				

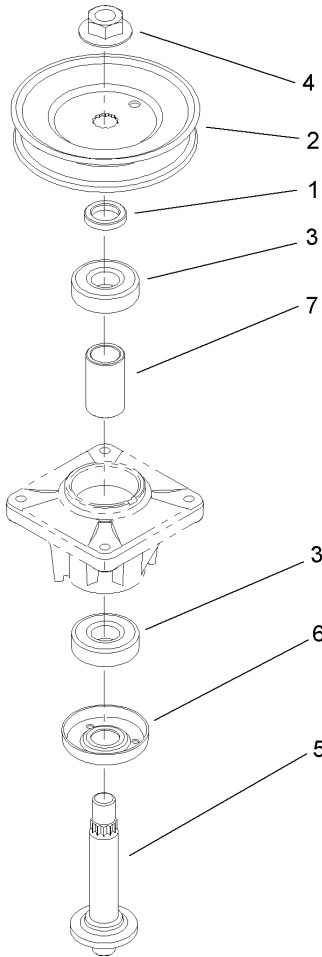


Single Pulley Spindle Assembly No. 112-0311

Ref	Part No.	Qty.	Description				
1	112-0600	1	Spacer				
2	112-0358	1	Pulley-Deck				
3	112-0377	1	Bearing-Ball				
4	112-0330	1	Nut-Flange, Hex				
5	112-5922	1	Shaft-Spindle				
6	112-5923	1	Bearing-Shoulder				
7	112-0654	1	Spacer				

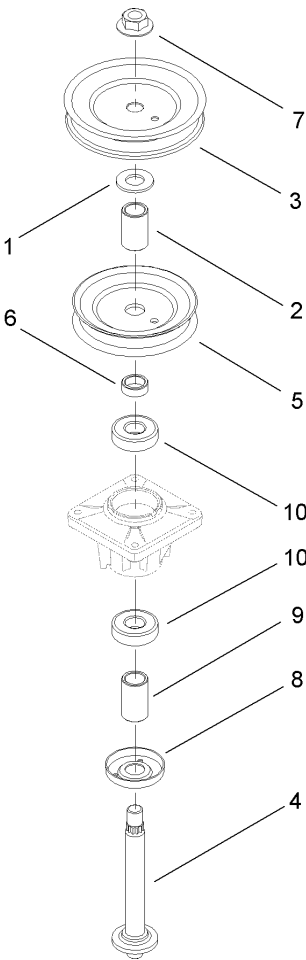


Double Pulley Spindle Assembly No. 112-0383

Ref	Part No.	Qty.	Description				
1	112-0921	1	Washer-Flat				
2	112-5927	1	Spacer				
3	112-0382	1	Pulley-Deck				
4	112-5928	1	Shaft-Spindle				
5	112-0359	1	Pulley-Deck				
6	112-5929	1	Spacer				
7	112-0330	1	Nut-Flange, Hex				
8	112-5923	1	Bearing-Shoulder				
9	112-0654	1	Spacer				
10	112-0377	1	Bearing-Ball				

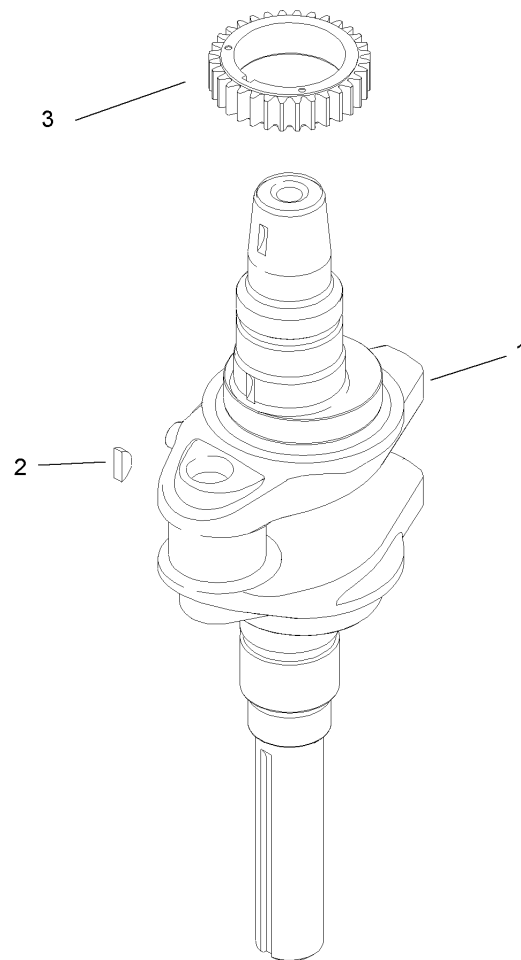

Crankshaft Assembly Kohler SV600-0018

Ref	Part No.	Qty.	Description
③1	20 014 20-S	1	Crankshaft (Includes 2)
③2	X-42-15-S	1	Key (.19 X .62)
③3	20 043 12-S	1	Gear-Crankshaft

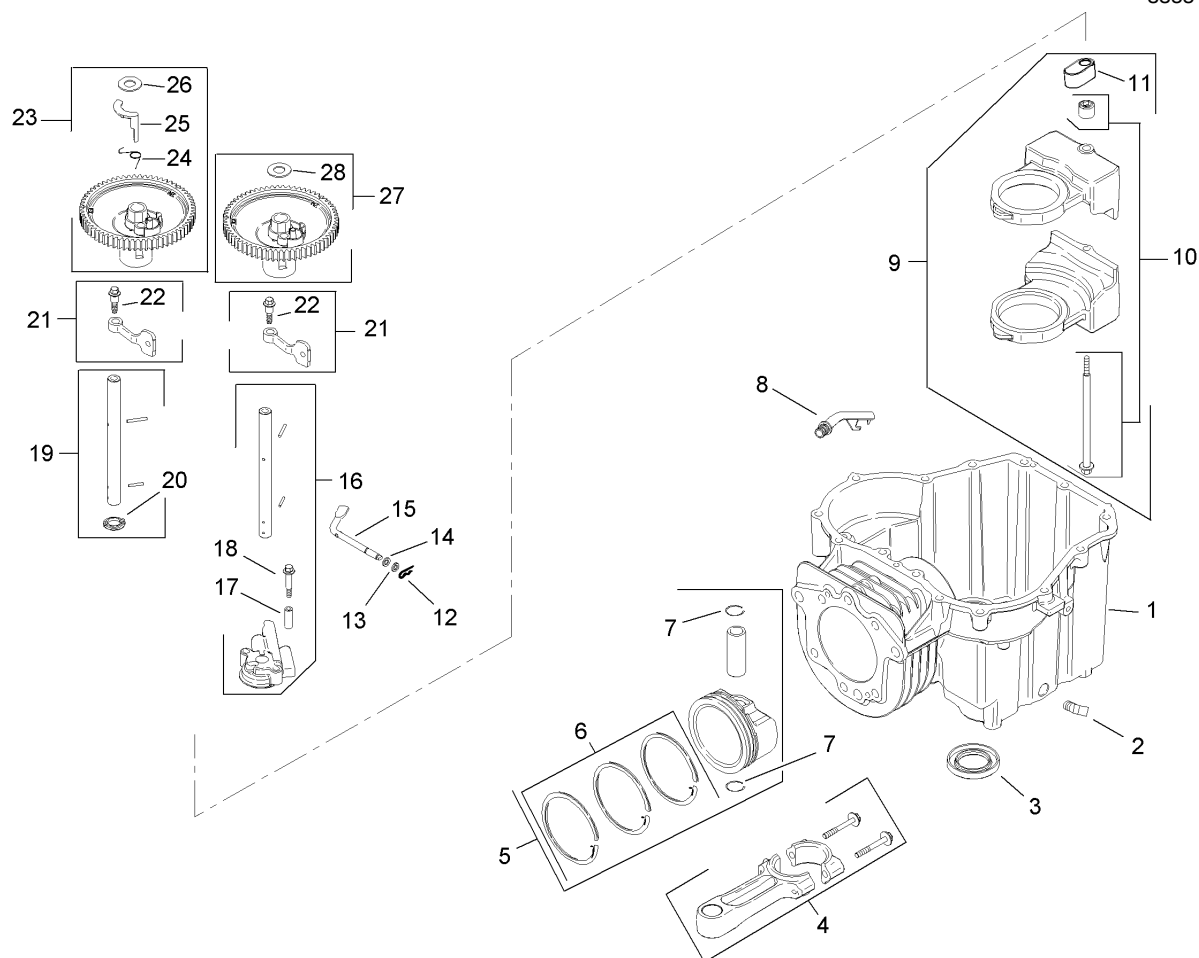


Crankcase Assembly

Kohler SV600-0018


Ref	Part No.	Qty.	Description
201		1	Crankcase (Use: Short Block 20522 01)
202	25 139 57-S	1	Plug-Solid, Square Head (.38)
203	20 032 01-S	1	Seal-Oil
204	20 067 04-S	1	Connecting Rod ASM
205	20 874 01-S	1	Piston W/Ring Set (94 Mm) (Includes 6-7)
206	20 108 01-S	1	Ring Set (94 Mm)
207	20 018 04-S	2	Retainer-Pin, Piston
208	20 123 02-S	1	Tube-Back, Drain
209	20 755 04-S	1	Balance Weight Kit (Includes 10-11)
210	20 086 16-S	1	Screw And Guide Pin Kit
211	20 423 02-S	1	Shoe-Guide
212	12 154 05-S	1	Clip-Pin, Hitch
213	M-631015-S	1	Washer-Flat (6Mm)
214	X-25-102-S	1	Washer-Flat (1/4)
215	20 144 02-S	1	Shaft-Cross, Governor
216	20 393 02-S	1	Oil Pump ASM (Includes 17-18)
217	20 112 02-S	2	Spacer-Screw, Oil Pump
218	20 086 13-S	2	Screw-Pump, Oil
219	20 144 06-S	1	Shaft-Cam, Center - Exhaust (Includes 20)
220	20 468 01-S	1	Washer-Thrust
221	20 090 01-S	2	Cam Lever ASM (Includes 22)

Ref	Part No.	Qty.	Description
③22	20 086 06-S	1	Bolt-Shoulder (M6X1X26)
③23	20 010 04-S	1	Cam Gear ASM - Intake (Includes 24-26)
③24	20 089 06-S	1	Spring-A C R
③25	20 044 16-S	1	Weight-A C R
③26	20 468 03-S	1	Washer-Thrust, A C R
③27	20 010 04-S	1	Cam Gear ASM - Intake (Includes 28)
③28	20 468 03-S	1	Washer-Thrust, A C R

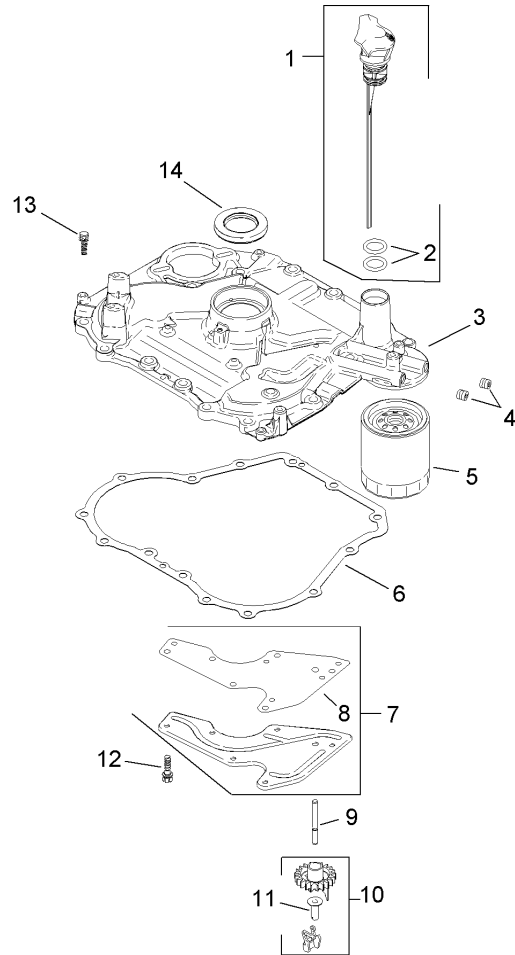


Oil Pan and Lubrication Assembly
Kohler SV600-0018

Ref	Part No.	Qty.	Description				
❸1	20 040 03-S	1	Dipstick Kit (Includes 2)				
❸2	20 153 01-S	1	O Ring-Dipstick				
❸3	20 009 03-S	1	Closure Plate ASM (Includes 4, 10-11)				
❸4	25 139 60-S	2	Plug-Hex, Countersunk (.125)				
❹5	98020	1	Filter-Oil				
❸6	20 041 01-S	1	Gasket-Plate, Closure				
❸7	20 096 02-S	1	Oil Passage Cover Kit (Includes 8)				
❸8	20 041 02-S	1	Gasket-Passage, Oil				
❸9	20 144 03-S	1	Shaft-Gear, Governor				
❸10	20 310 03-S	1	Gear And Weight ASM (Includes 11)				
❸11	12 380 01-S	1	Pin-Regulating, Governor				
❸12	M-545013-S	6	Screw-Flange, Hex (M5X0.8X13)				
❸13	M-851030-S	14	Screw-Flange, Hex (M8X1.25X30)				
❸14	20 032 01-S	1	Seal-Oil				

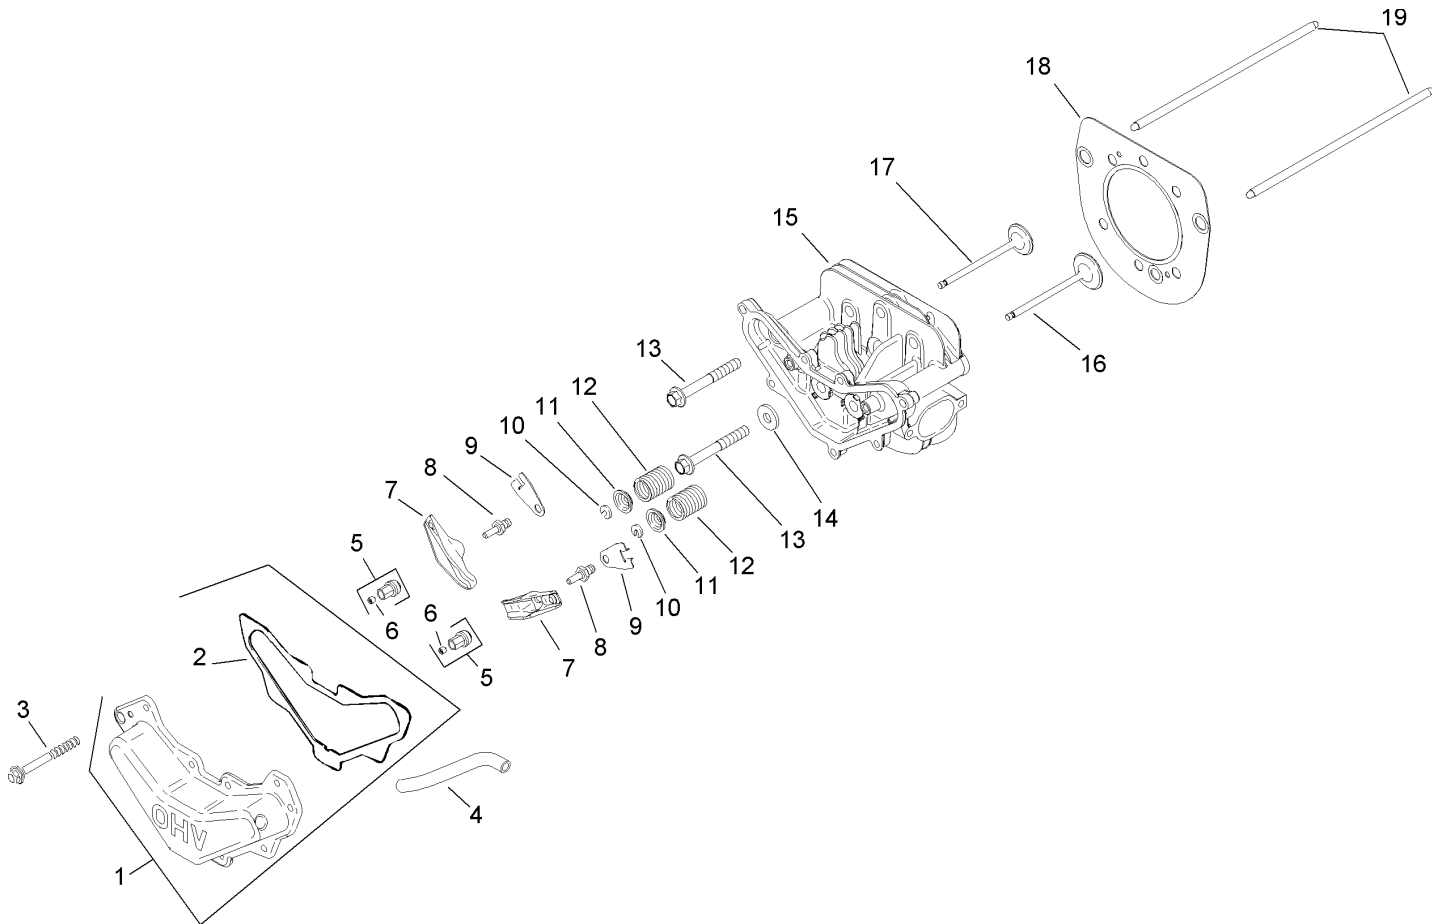


Head, Valve and Breather Assembly
Kohler SV600-0018

Ref	Part No.	Qty.	Description				
❶1	20 096 07-S	1	Valve Cover Kit (Includes 2)				
❷2	20 041 13-S	1	Gasket-Cover, Valve				
❸3	M-645020-S	7	Screw-Flange, Hex (M6X1.0X20)				
❹4	20 326 01-S	1	Hose-Breather				
❺5	20 599 02-S	2	Pivot-Arm, Rocker (Includes 6)				
❻6	20 086 04-S	2	Screw-Set				
❼7	20 186 01-S	2	Arm-Rocker				
❽8	20 086 03-S	2	Stud-Rocker				
❾9	20 146 03-S	2	Plate-Guide, Push Rod				
❿10	20 062 01-S	2	Lock-Retainer				
⓫11	20 173 01-S	2	Cap-Spring, Valve				
⓬12	20 089 03-S	2	Spring-Valve				
⓭13	20 086 02-S	6	Screw-Flange, Hex (M10X1.5X37)				
⓮14	12 468 05-S	1	Washer-Flat (1/2)				
⓯15	20 318 01-S	1	Head-Cylinder				
⓰16	20 016 01-S	1	Valve-Exhaust				
⓱17	20 017 01-S	1	Valve-Intake				
⓲18	20 841 01-S	1	Cylinder Head Gasket Kit (Includes 2, 13-14)				
⓳19	20 411 04-S	2	Rod-Push				

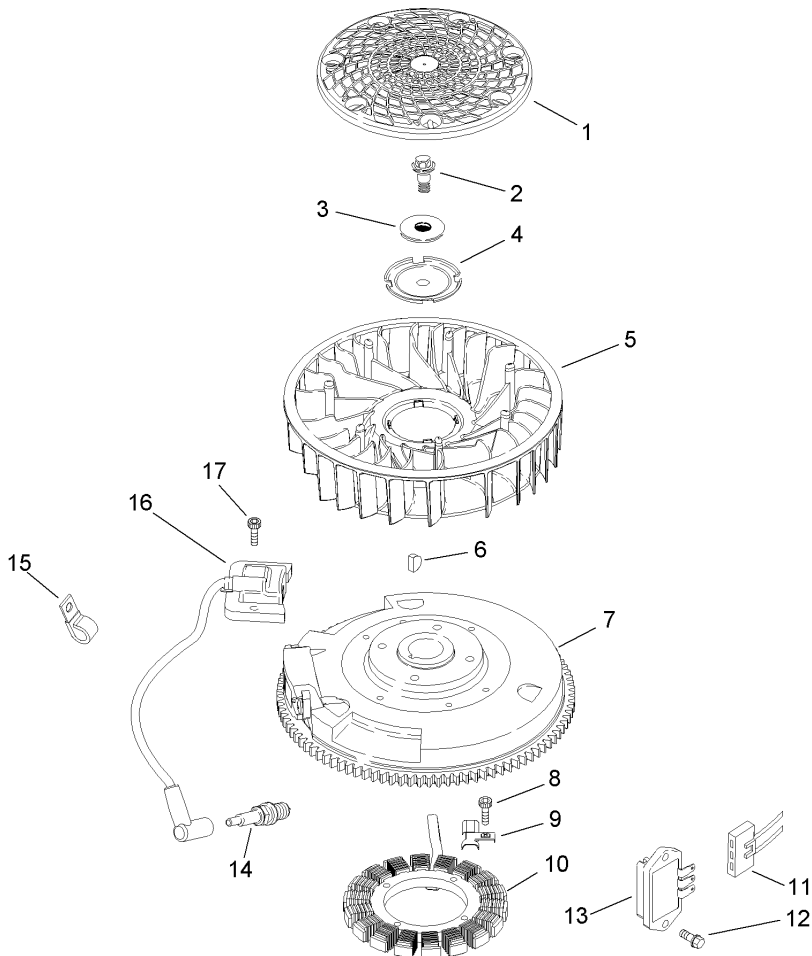


Ignition and Electrical Assembly
Kohler SV600-0018

Ref	Part No.	Qty.	Description				
❶1	20 162 02-S	1	Screen-Grass				
❷2	12 086 14-S	1	Screw-Hex, Flange (M10X1.5X45)				
❸3	12 468 03-S	1	Washer-Flat (.38)				
❹4	20 146 02-S	1	Plate-Fan Mounting				
❺5	20 157 01-S	1	Fan				
❻6	X-42-15-S	1	Key (.19 X .62)				
❼7	20 025 05-S	1	Flywheel				
❸8	20 086 17-S	2	Screw-Socket, Hex (M5X0.8X25)				
❹9	20 154 03-S	1	Clip-Wire				
❺10	237878-S	1	Stator Kit (15 Amp)				
❻11	236602-S	1	Connector (3 Contact)				
❸12	M-545020-S	2	Screw-HHFTF (M5X0.8X20)				
❹13	41 403 09-S	1	Rectifier-Regulator				
❹14	77-7330	1	Plug-Spark				
❹15	231285-S	2	Clip-Cable				
❹16	20 584 01-S	1	Module-Ignition				
❹17	M-561025-S	2	Screw-Socket, Hex (M5X0.8X25)				
❶❹18	20 176 01-S	1	Harness-Wiring (Six Pin)				

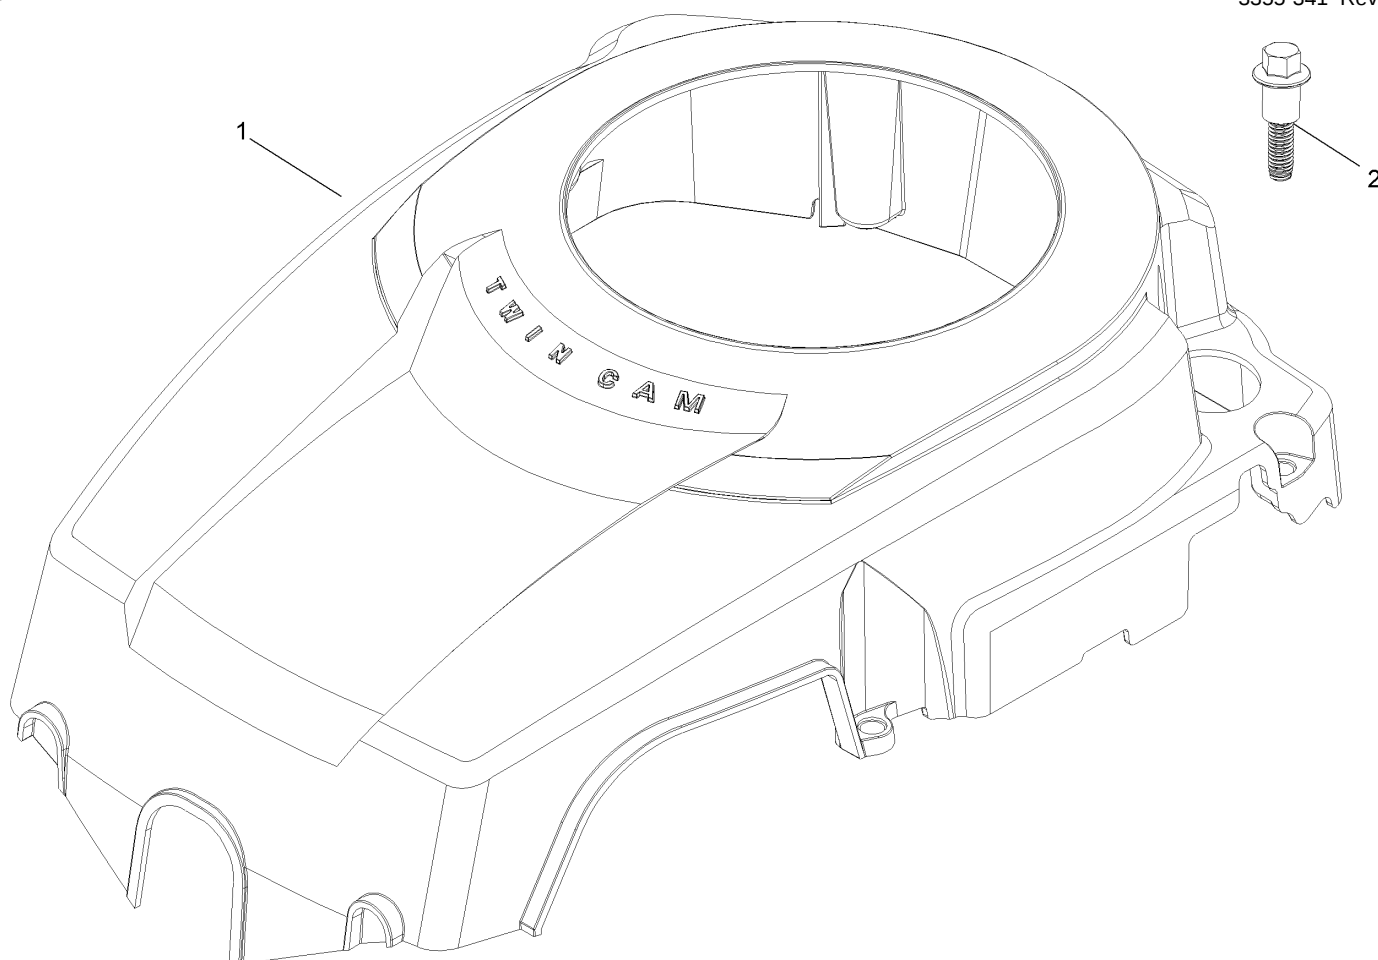

Blower Housing Assembly Kohler SV600-0018


Ref	Part No.	Qty.	Description
③1	20 027 06-S	1	Housing-Blower
③2	20 086 06-S	4	Bolt-Shoulder (M6X1X26)

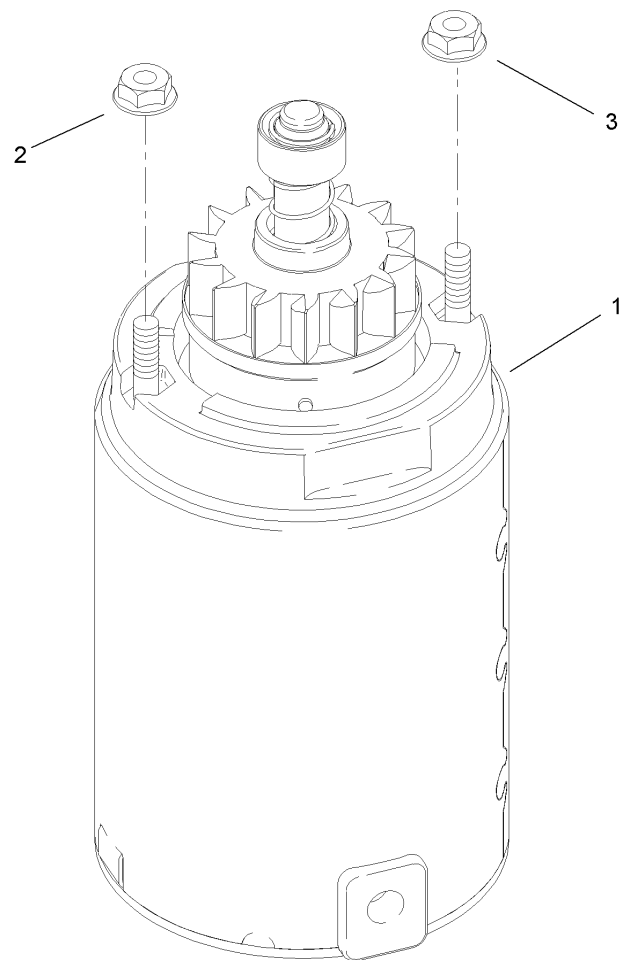

Starting System Assembly


Kohler SV600-0018

Ref	Part No.	Qty.	Description
③1	20 098 01-S	1	Starter ASM (Inertia Drive)
③2	25 100 31-S	2	Nut-Flange, Hex Serrated (10-24)
③3	12 100 07-S	1	Nut-Flange, Hex (1/4-20)

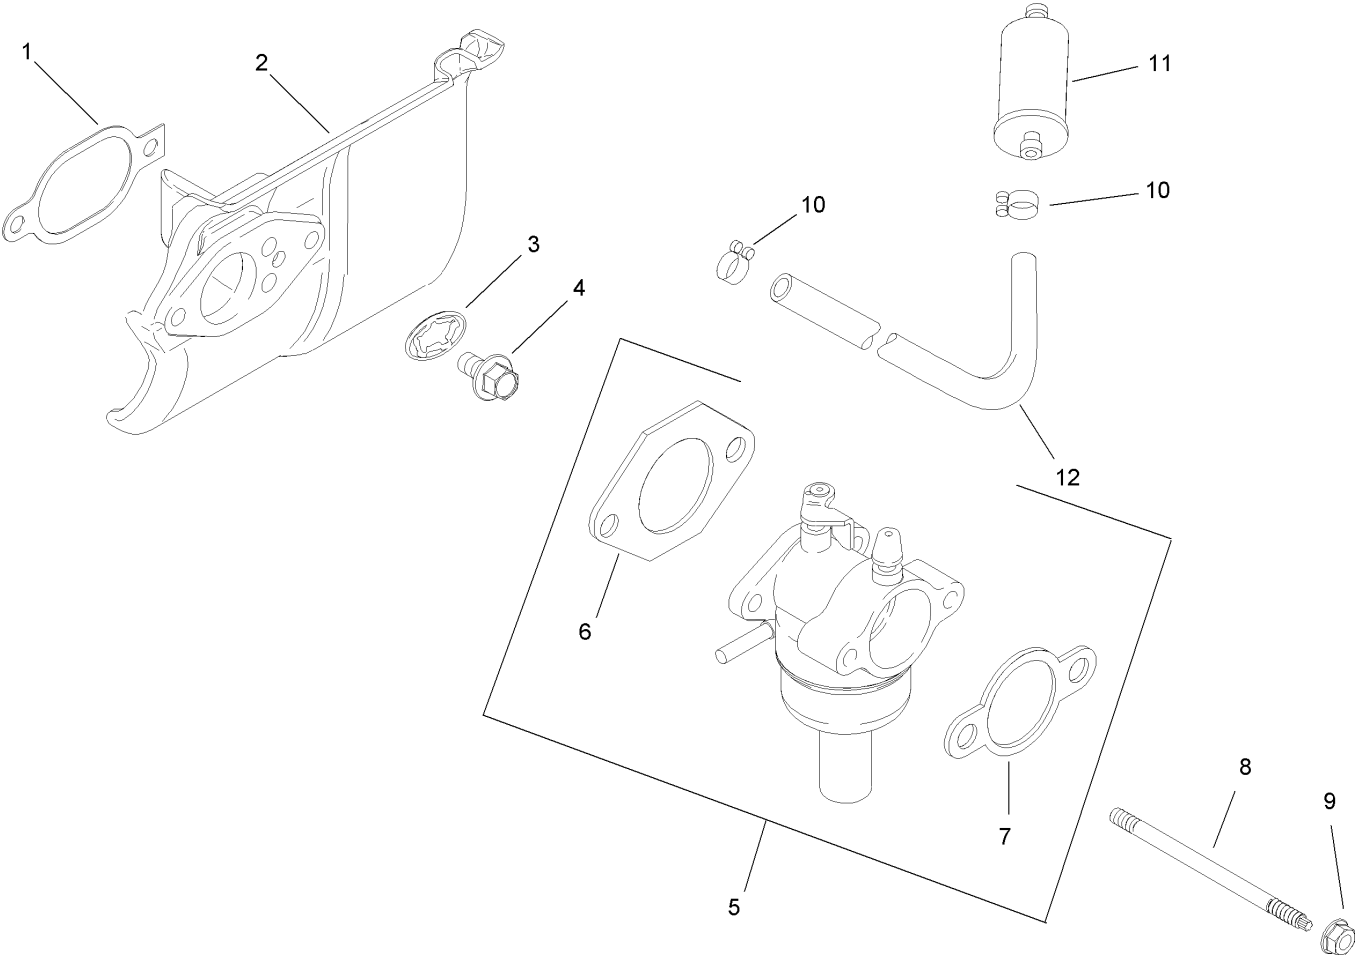

Fuel System Assembly
Kohler SV600-0018


Ref	Part No.	Qty.	Description				
1	20 041 07-S	1	Gasket-Deflector, Heat				
2	20 265 01-S	1	Deflector-Heat				
3	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)				
4	M-651020-S	1	Screw-Flange, Hex (M6X1.0X20)				
5	20 853 14-S	1	Carburetor ASM W/Gaskets (Includes 6-7)				
6	12 041 02-S	1	Gasket-Base, Air Cleaner				
7	12 041 01-S	1	Gasket-Carburetor				
8	20 072 05-S	1	Stud-Mounting, Carburetor (M6X1.0X100)				
9	M-641060-S	2	Nut-Hex, Flange (M6X1.0)				
10	25 237 14-S	2	Clamp-Hose				
11	98021	1	Filter-Fuel				
12	25 353 14-S	1	Line-Fuel, 7 Inch				
13	12 757 02-S	1	Float Repair Kit				
14	12 757 03-S	1	Carburetor Repair Kit				
15	12 757 33-S	1	Solenoid Repair Kit				
16	12 757 37-S	1	Bowl Replacement Repair Kit				
17	20 755 06-S	1	High Altitude Kit (5, 000 Ft)				
18	20 755 07-S	1	High Altitude Kit (10, 000 Ft)				
19	12 454 03-S	1	Tie-Wire				

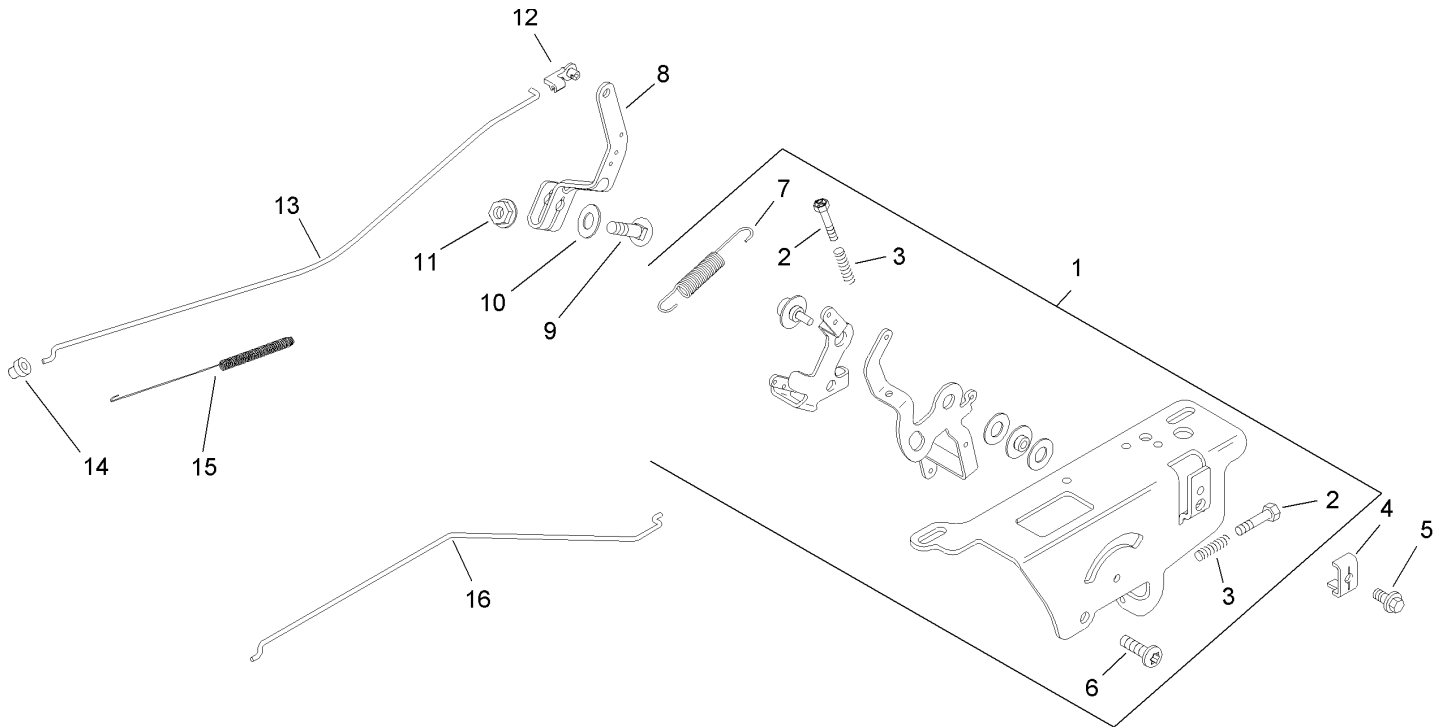

Engine Control Assembly


Kohler SV600-0018

Ref	Part No.	Qty.	Description				
❸1	20 536 05-S	1	Speed Control ASM (Includes 2-3, 6-7)				
❸2	20 086 10-S	2	Screw-Thread Forming (M4X0.7X25)				
❸3	12 089 11-S	2	Spring-Control, Speed				
❸4	12 237 01-S	1	Clamp-Cable				
❸5	M-545016-S	1	Screw-HHFTF (M5X0.8X16)				
❸6	M-664020-S	2	Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20)				
❸7	20 089 11-S	1	Spring-Governor				
❸8	20 090 02-S	1	Lever-Governor				
❸9	52 211 04-S	1	Bolt-Square Neck, Round Head (1/4-20X1)				
❸10	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)				
❸11	12 100 07-S	1	Nut-Flange, Hex (1/4-20)				
❸12	25 158 11-S	1	Bushing-Linkage, Throttle				
❸13	20 079 04-S	1	Linkage-Throttle				
❸14	25 158 08-S	1	Bushing-Retaining, Linkage				
❸15	20 089 10-S	1	Spring-Linkage				
❸16	20 079 05-S	1	Linkage-Choke (Single Wire)				

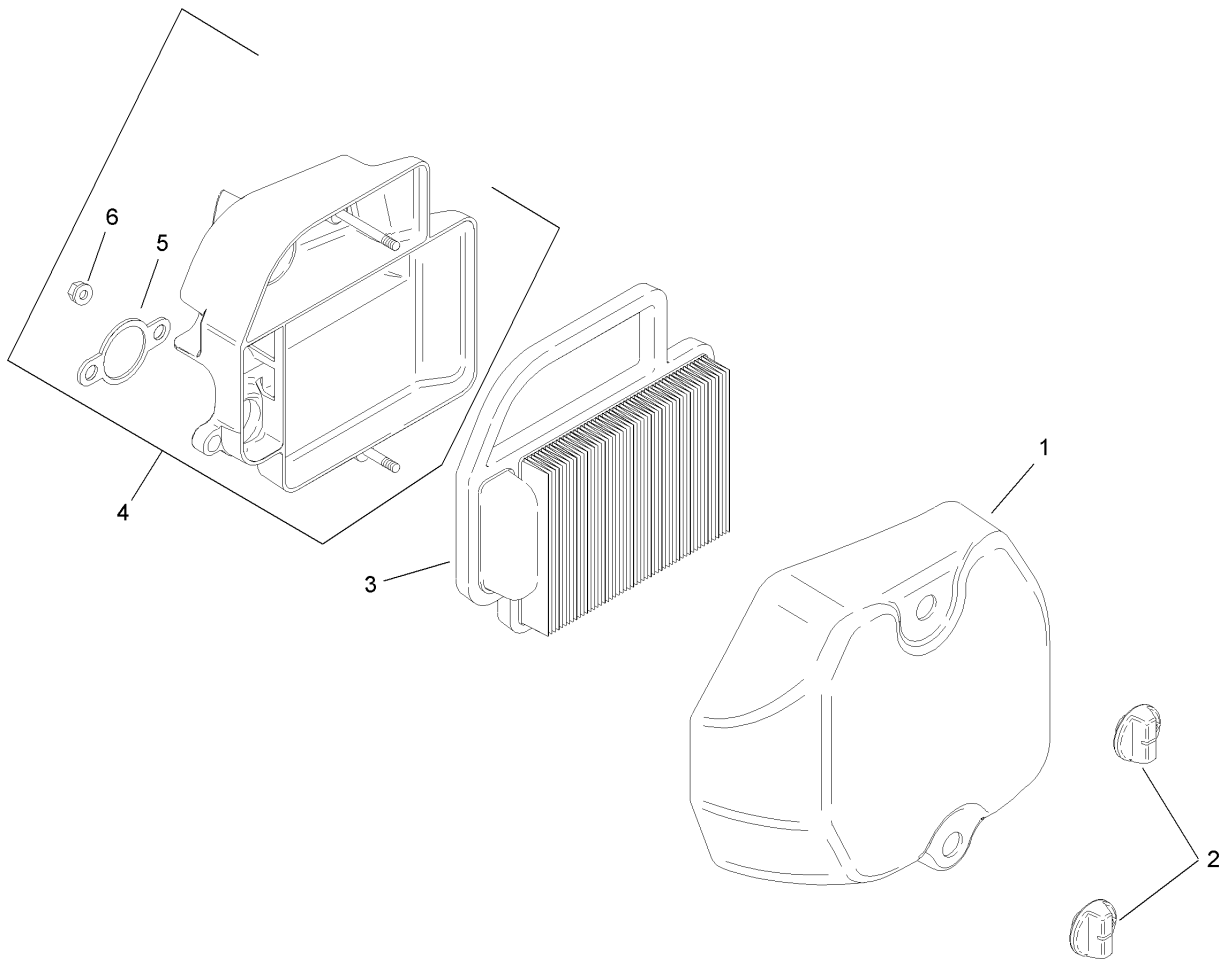

Air Intake and Filtration Assembly Kohler SV600-0018

Ref	Part No.	Qty.	Description				
❸1	20 096 04-S	1	Cover-Cleaner, Air				
❸2	25 341 04-S	2	Knob-Cover				
❹3	98018	1	Element-Air Cleaner				
❸4	20 094 01-S	1	Air Cleaner Base Kit (Includes 5-6)				
❸5	12 041 02-S	1	Gasket-Base, Air Cleaner				
❸6	M-641060-S	1	Nut-Hex, Flange (M6X1.0)				

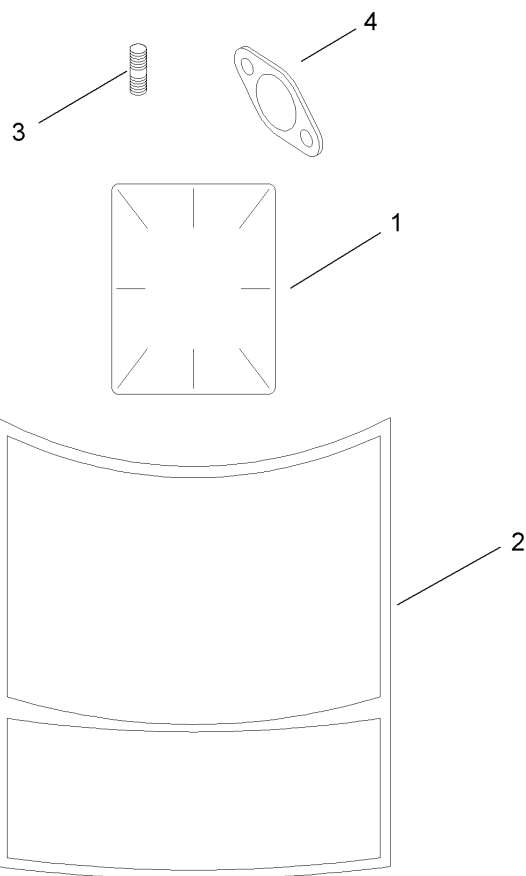

Artwork is representative.

Actual labels may differ depending on model and specification number.

Exhaust Stud and Decal Assembly Kohler SV600-0018

Ref	Part No.	Qty.	Description
❸1	25 113 39-S	1	Decal-Laminate, Clear
❸2	20 113 14-S	1	Decal-20 Hp
❸3	25 072 04-S	2	Stud (M8X1.25X33)
❸4	20 041 12-S	1	Gasket-Exhaust

Attachments and Accessories

For 13AX60RH744 - LX460 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
42 Inch Two-Stage Snowthrower	190-032-101
46 Inch Twin Bagger	190-182-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Spark Plug	77-7330
46 Inch Mulch Kit	77215
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Filter-Air	98018
Filter-Oil	98020
Filter-Fuel	98021
Blade Kit (3 Blades, 46 Inch Decks)	98023

