



LX420 Lawn Tractor

Model No. 13AX60RG544 - 1L215B10000 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front and Rear Wheel Assembly 3	Oil Pan and Lubrication Assembly Kohler SV540-0019 21
Deck Lift Arm Assembly 4	Head, Valve and Breather Assembly Kohler SV540-0019 22
Steering Shaft and Front Axle Assembly 5	Ignition and Electrical Assembly Kohler SV540-0019 23
Frame and Battery Assembly 6	Blower Housing Assembly Kohler SV540-0019 24
Seat and Fender Assembly 7	Starter Assembly Kohler SV540-0019 25
Fuel Tank and Hood Assembly 8	Fuel System Assembly Kohler SV540-0019 26
PTO Engage Assembly 9	Engine Control Assembly Kohler SV540-0019 27
Transmission, Belt and Pulley Assembly 10	Air Intake and Filtration Assembly Kohler SV540-0019 28
Single Speed Transmission Assembly No. 112-0368 12	Exhaust and Gasket Assembly Kohler SV540-0019 29
Deck Assembly 14	Attachments and Accessories List 30
Spindle Assembly No. 112-0460 16		
Brake and Traction Pedal Assembly 17		
Muffler Assembly 18		
Crankshaft Assembly Kohler SV540-0019 19		
Crankcase Assembly Kohler SV540-0019 20		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|--|
| <p>❶ Not illustrated</p> <p>❸ Obtain from your local Kohler dealer</p> | <p>❷ Not serviced separately</p> <p>❹ Obtain from your local Toro dealer</p> |
|--|--|

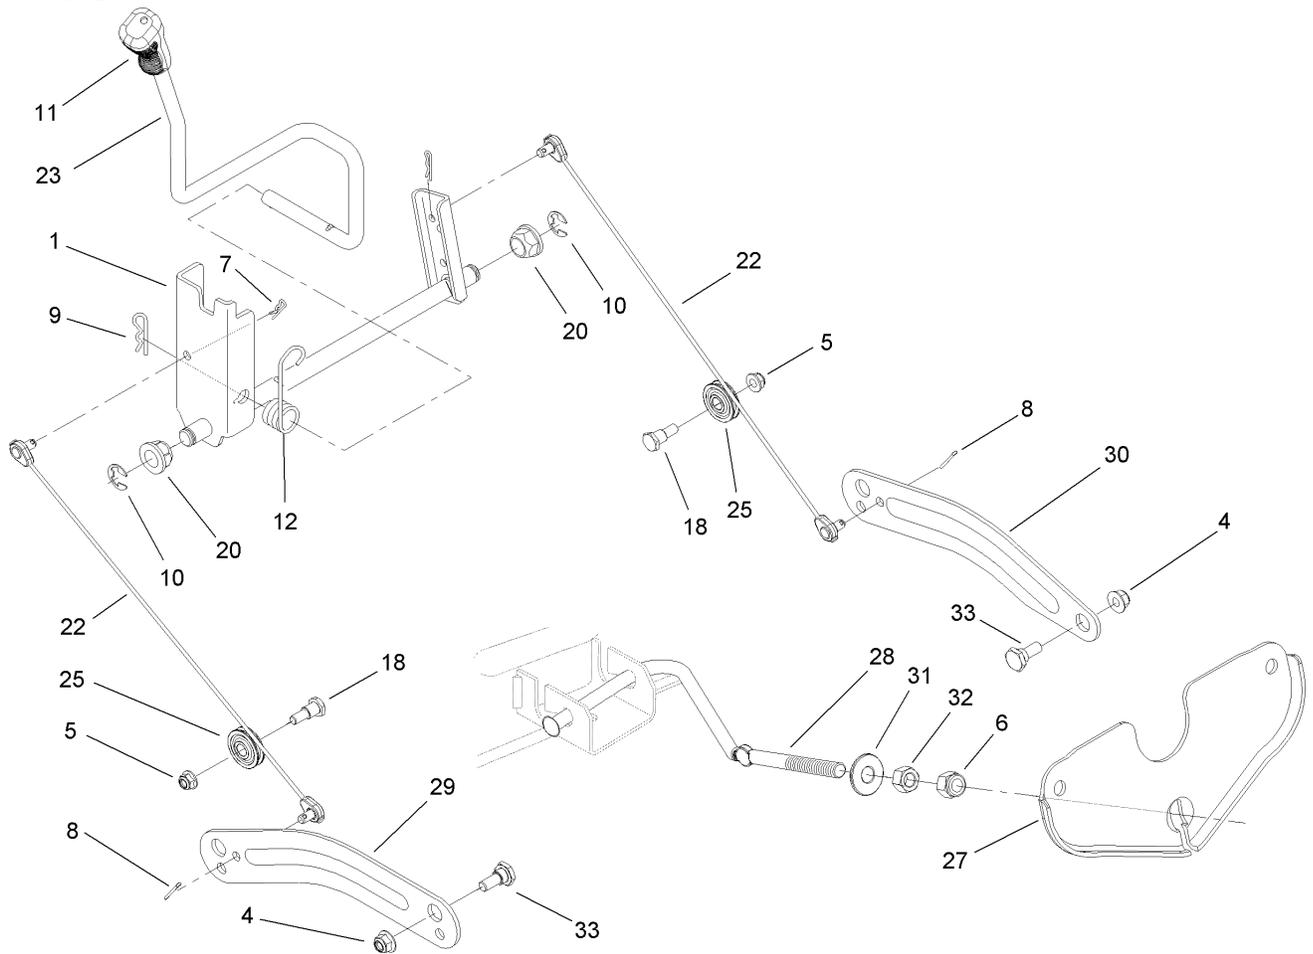

Deck Lift Arm Assembly

Ref	Part No.	Qty.	Description
1	112-0686	1	Lift Shaft ASM
4	112-0668	1	Nut-Lock, Flange
5	112-0650	1	Nut-Lock, Flange
6	112-0476	1	Nut-Lock, Hex (Nylon)
7	112-0459	1	Pin-Cotter
8	112-0568	1	Pin-Cotter
9	112-0394	1	Pin-Hair
10	112-0586	1	Ring-E
11	112-0585	1	Grip-Handle
12	112-0477	1	Spring-Torsion
18	112-0443	1	Bolt-Shoulder
20	112-0347	1	Bearing-Flange
22	112-0374	1	Cable-Lift
23	112-0674	1	Handle-Lift
25	112-0502	1	Pulley-Roller
27	112-0704	1	Bracket-Hanger, Deck
28	112-0607	1	Rod-Deck, Front Adjustment
29	112-0690	1	Arm-Lift, Deck (RH)
30	112-0719	1	Arm-Lift, Deck (LH)
31	112-0641	1	Cup-Pivot, Lift
32	112-0458	1	Nut-Hex
33	112-0669	1	Bolt-Shoulder


--	--	--	--

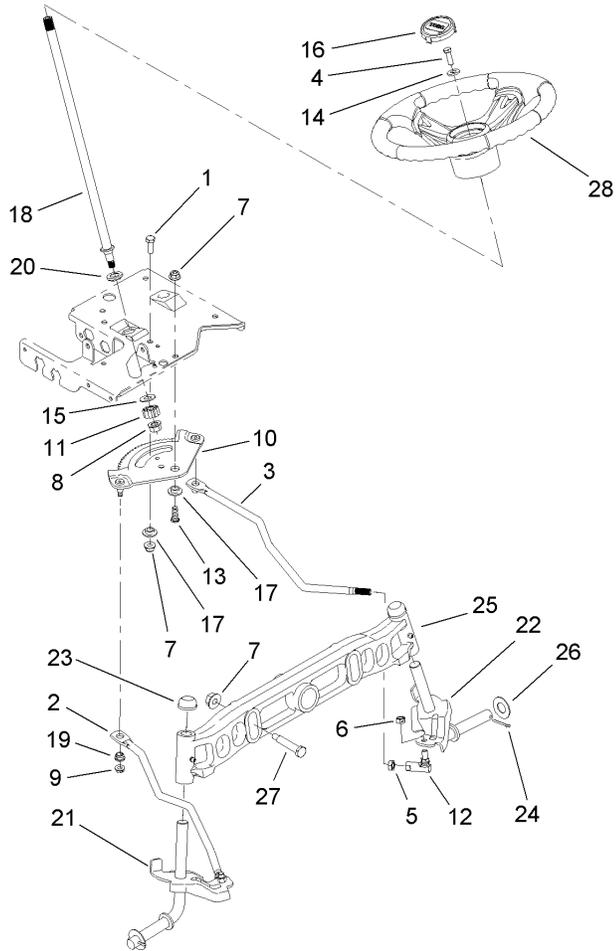

Steering Shaft and Front Axle Assembly

Ref	Part No.	Qty.	Description
1	112-0492	1	Screw-HH
2	112-0355	1	Link-Drag, RH
3	112-0346	1	Link-Drag, LH
4	112-0473	1	Screw-HH
5	112-0493	1	Nut-Jam
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0631	1	Screw-HH
14	112-0924	1	Washer-Flat
15	112-0925	1	Washer-Flat
16	112-3734	1	Cap-Wheel, Steering
17	112-0881	1	Spacer-Shoulder
18	112-5804	1	Shaft-Steering
19	112-0929	1	Bushing
20	112-0930	1	Bearing-Flange, Hex
21	112-0547	1	RH Axle ASM
22	112-0562	1	LH Axle ASM
23	112-0323	1	Cap
24	112-0519	1	Pin-Cotter


Ref	Part No.	Qty.	Description
25	112-0416	1	Axle-Pivot, Front
26	112-0396	1	Washer-Flat
27	112-0486	1	Bolt-Shoulder
28	112-0438	1	Wheel-Steering, Softgrip

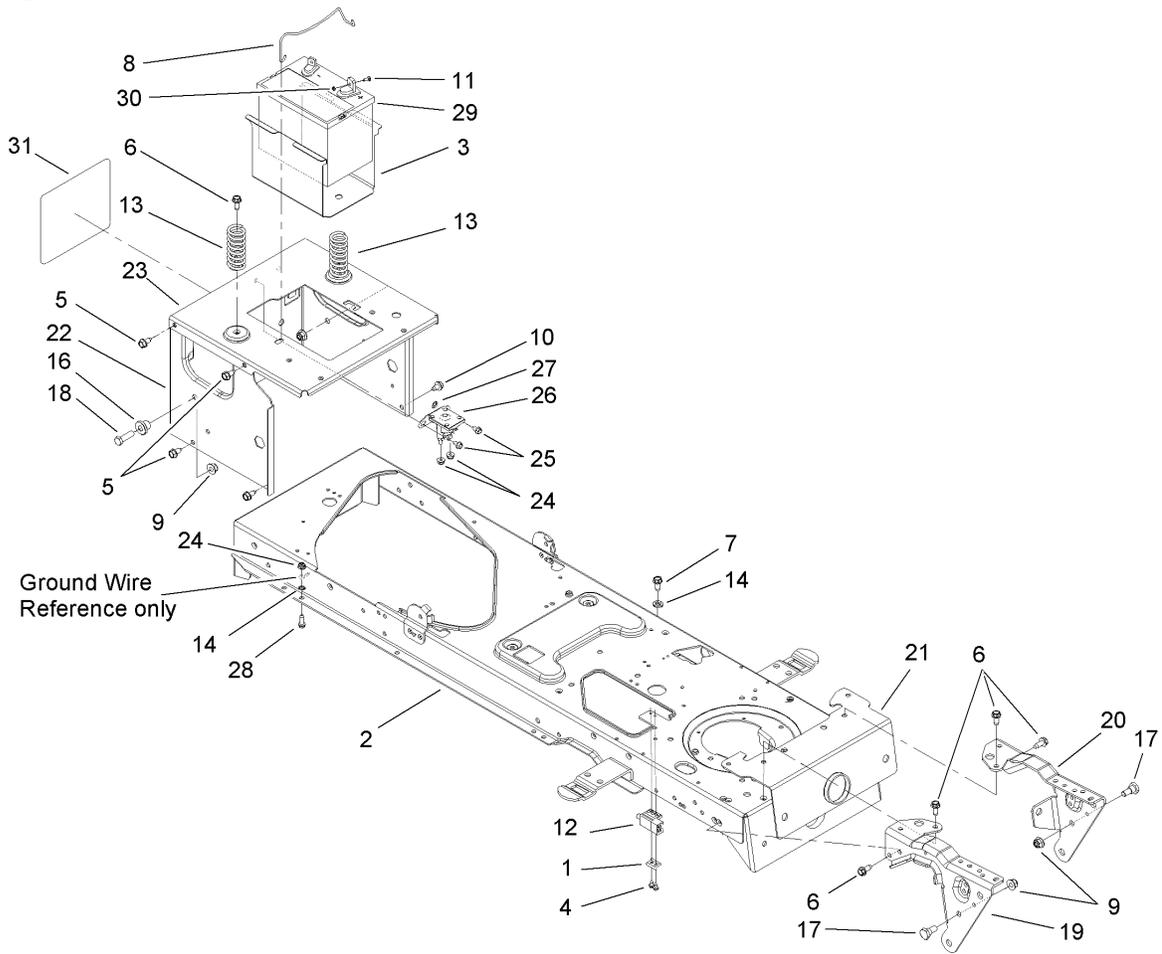

Frame and Battery Assembly


Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-0705	1	Lower Frame ASM
3	112-0570	1	Tray-Battery
4	112-0651	1	Screw-HH, TAP
5	112-0472	1	Screw-HH, TAP
6	112-0395	1	Screw-HWH
7	112-0659	1	Screw-HWH
8	112-0581	1	Rod-Holddown, Battery
9	112-0668	1	Nut-Lock, Flange
10	112-0676	1	Screw-TAP
11	112-0479	1	Bolt-CARR
12	112-0455	1	Switch-Interlock
13	112-0501	1	Spring-Compression
14	112-0703	1	Washer-Lock, External
16	112-0661	1	Spacer-Shoulder
17	112-0565	1	Bolt-Shoulder
18	112-0557	1	Screw-HH
19	112-0620	1	Bracket-Pivot, Support
20	112-0610	1	Bracket-Pivot, Support
21	112-0640	1	Bracket-Pivot, Bar
22	112-0728	1	Frame-Upper
23	112-0647	1	Bracket-Frame, Seat
24	112-0636	1	Nut-Lock, Flange
25	112-0524	1	Screw-HWHTF

Ref	Part No.	Qty.	Description
26	112-0309	1	Solenoid-12V
27	112-0703	1	Washer-Lock, External
28	112-0587	1	Screw-HH, TAP
29	112-0425	1	Battery-245, Cca (Dry Flat Top)
30	112-5805	1	Nut-Sems
31	112-1284	1	Decal-Toro

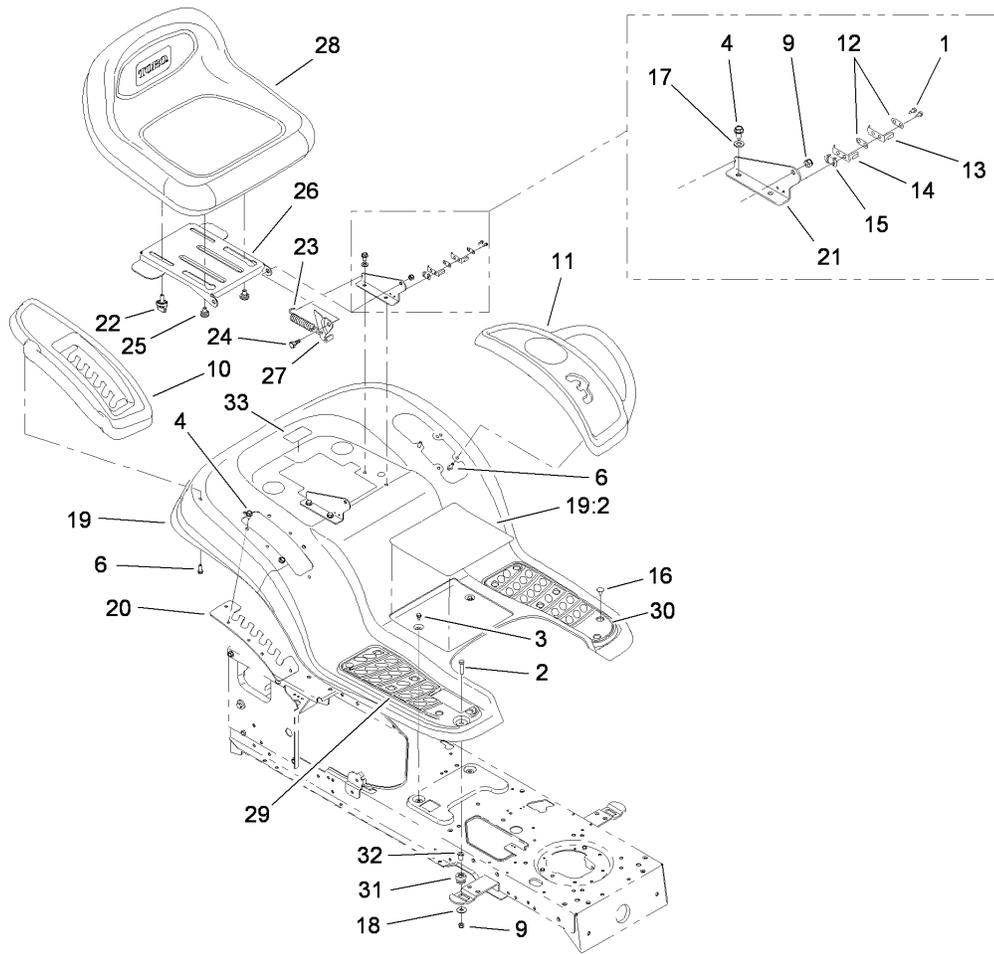

Seat and Fender Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0626	1	Screw-HWHTF	27	112-0646	1	Bracket-Lift, LH
2	112-0373	1	Screw-HH	28	112-0363	1	Seat-Back, Medium
3	112-0524	1	Screw-HWHTF	29	112-0540	1	Pad-Foot, RH
4	112-0556	1	Screw-HWH	30	112-0545	1	Pad-Foot, LH
6	112-0509	1	Screw-HH, TAP	31	112-3732	1	Grommet
9	112-0650	1	Nut-Lock, Flange	32	112-3733	1	Spacer
10	112-0471	1	Cover-Fender, RH	33	112-3701	1	Decal-Toro Hotline
11	112-0470	1	Cover-Fender, LH				
12	112-0635	1	Plate-Insulator				
13	112-0529	1	Switch-Spring				
14	112-0532	1	Switch-Spring, Inner				
15	112-0637	1	Plate-Boss, Insulator				
16	112-0549	1	Clip-Ratchet, Fastener				
17	112-0517	1	Washer-Lock, External				
18	112-0582	1	Washer-Flat				
19	112-5863	1	Fender And Decal ASM				
19:2	112-3706	1	Decal-Slope				
20	112-0629	1	Bracket-Adjusting, Lift				
21	112-0905	1	Bracket-Mount, Seat				
22	112-0409	1	Knob				
23	112-0616	1	Spring-Extension				
24	112-0575	1	Bolt-Shoulder				
25	112-0554	1	Bolt-Shoulder				
26	112-0593	1	Bracket-Seat				

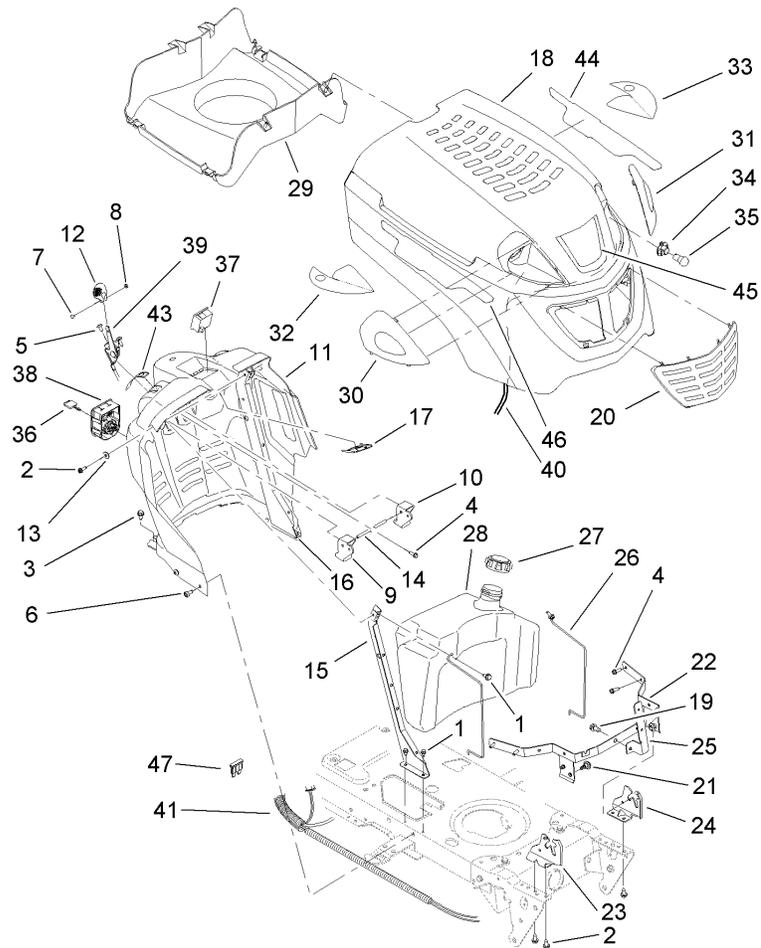

Fuel Tank and Hood Assembly

Ref	Part No.	Qty.	Description
1	112-0524	1	Screw-HWHTF
2	112-0587	1	Screw-HH, TAP
3	112-0472	1	Screw-HH, TAP
4	112-0509	1	Screw-HH, TAP
5	112-0550	1	Screw-TAP
6	112-0563	1	Screw-TAP
7	112-0478	1	Screw-PTH
8	112-0515	1	Nut-Hex
9	112-0526	1	Lever-Cruise
10	112-0580	1	Lever-Brake
11	112-0518	1	Dash
12	112-0474	1	Knob-Control
13	112-0485	1	Washer-Spring
14	112-0604	1	Rod-Lever, Bent
15	112-0583	1	Support-Dash, RH
16	112-0591	1	Support-Dash, LH
17	112-5809	1	Bracket-PTO
18	112-0444	1	Hood
19	112-0906	1	Screw-HWHTF
20	112-0381	1	Grill
21	112-0597	1	Bolt-Shoulder
22	112-0555	1	Bracket-Pivot
23	112-0727	1	Bracket-Pivot, Hood (RH)
24	112-0726	1	Bracket-Pivot, Hood (LH)

Ref	Part No.	Qty.	Description
25	112-3736	1	Bracket-Support, Hood
26	112-0678	1	Rod-Support
27	112-0321	1	Cap-Fuel
28	112-0414	1	Tank-Fuel, 3 Gallon
29	112-5802	1	Plenum-Hood
30	112-0447	1	Lens-RH
31	112-0446	1	Lens-LH
32	112-5810	1	Reflector-RH
33	112-5811	1	Reflector-LH
34	112-0408	1	Socket-Headlight
35	112-0402	1	Lamp-12V, Miniature
36	112-0312	1	Key-Ignition
37	112-0336	1	Meter-Indicator, Systems
38	112-0865	1	Module-Switch, Ignition
39	112-0489	1	Cable-Throttle And Choke
40	112-0480	1	Harness-Headlight
41	112-0595	1	Harness-Wiring
43	112-1271	1	Decal-Throttle, Dash
44	112-1288	1	Decal-Hood, Left Side
45	112-1285	1	Decal-Hood, Toro
46	112-1289	1	Decal-Hood, Right Side
47	112-5943	1	Fuse-20 Amp

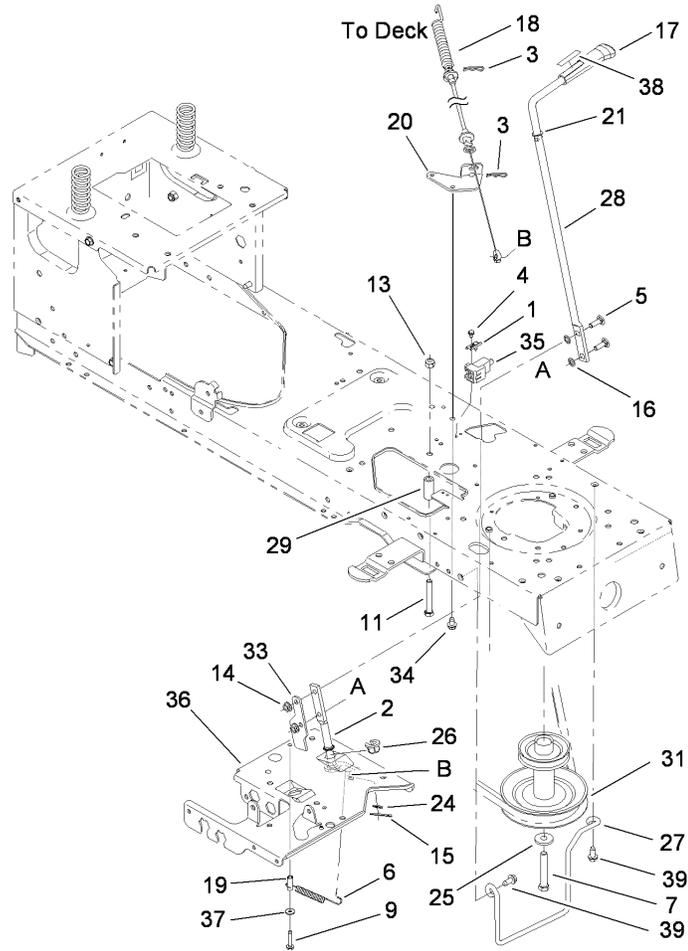

PTO Engange Assembly

Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-0658	1	Lever-Engage, PTO
3	112-0398	1	Pin-Click
4	112-0651	1	Screw-HH, TAP
5	112-0598	1	Bolt-CARR
6	112-0567	1	Spring-Extension
7	112-0844	1	Screw-HH
9	112-0843	1	Screw-HWH
11	112-0700	1	Screw-HH
13	112-0668	1	Nut-Lock, Flange
14	112-0511	1	Nut-Lock, Flange
15	112-0412	1	Pin-Cotter
16	112-0645	1	Nut-Push
17	112-0449	1	Knob-PTO
18	112-0504	1	Cable-Engage, Deck
19	112-0644	1	Spacer
20	112-0649	1	Bracket-Cable
21	112-0498	1	Washer-Flat
24	112-0601	1	Washer-Flat
25	112-0380	1	Washer-Flat
26	112-0384	1	Bearing-Flange, Hex (Split)
27	112-0609	1	Rod-Keeper, Belt
28	112-0393	1	Handle-Engage, Deck
29	112-0433	1	Spacer


Ref	Part No.	Qty.	Description
31	112-0329	1	Pulley-Engine
33	112-0516	1	Bracket-Stop
34	112-0676	1	Screw-TAP
35	112-0455	1	Switch-Interlock
36	112-0681	1	Bracket-Support, Steering
37	112-3695	1	Washer-Flat
38	112-3704	1	Decal-Handle, PTO
39	112-0395	1	Screw-HWH

Transmission, Belt and Pulley Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
4	112-0627	1	Shift Lever ASM
5	112-0676	1	Screw-TAP
6	112-0472	1	Screw-HH, TAP
7	112-0603	1	Screw-HH
8	112-0469	1	Screw-HH, TAP
9	112-0667	1	Screw-HH
10	112-0421	1	Screw-HH
11	112-0592	1	Ferrule-Adj
12	112-0343	1	Nut-Hex
13	112-0650	1	Nut-Lock, Flange
14	112-0451	1	Nut-Flange
15	112-0385	1	Nut-Lock, Flange
16	112-0459	1	Pin-Cotter
17	112-0568	1	Pin-Cotter
18	112-0639	1	Pin-Hair
19	112-0412	1	Pin-Cotter
20	112-0450	1	Hub-Pulley
21	112-0514	1	Knob-Shift
22	112-0306	1	Ball Joint ASM
23	112-0670	1	Sleeve
24	112-0683	1	Sleeve
25	112-5991	1	Spring-Extension
26	112-0357	1	Clip-Spring, Shifter
27	112-0350	1	Spring-Extension
28	112-0348	1	Spring-Extension
29	112-0415	1	Washer-Lock
31	112-0345	1	Spacer-Shoulder
32	112-0632	1	Rod-Shift
33	112-0655	1	Rod-Brake
34	112-0538	1	Rod-Adjustment, Idler
35	112-0673	1	Spacer-Transaxle
36	112-0644	1	Spacer
37	112-0301	1	Belt-Drive, Variable Speed
38	112-0305	1	Belt-Drive, Transmission
39	112-0379	1	Pulley-V (W/Hub)
40	112-3687	1	Pulley-Idler, Flat
41	112-5813	1	Bracket-Shift
42	112-0638	1	Bracket-Shift
43	112-0525	1	Bracket-Idler, Center Double
58	112-0541	1	Washer-Flat
71	112-0368	1	Single Speed Transmission ASM
72	112-0552	1	Bracket-Torque
73	112-0434	1	Bracket-Idler
74	112-0626	1	Screw-HWHTF
75	112-0492	1	Screw-HH
76	112-0556	1	Screw-HWH
77	112-0469	1	Screw-HH, TAP
78	112-0417	1	Nut-Lock, Hex
79	112-0602	1	Switch-Spring, Short
80	112-0625	1	Plate-Insulator
81	112-0360	1	Spacer-Shoulder

Ref	Part No.	Qty.	Description
82	112-0892	1	Pulley-Idler, V-Type
83	112-0364	1	Variable Speed Pulley ASM
84	112-0596	1	Bracket-Pulley
85	112-0551	1	Screw-HH
86	112-0587	1	Screw-HH, TAP
87	112-0520	1	Cup-Bearing
88	112-0500	1	Washer-Flat
89	112-0423	1	Bearing-Ball
90	112-0544	1	Washer-Flat
91	112-0435	1	Washer-Bell
92	112-5883	1	Guide-Belt, Traction


Single Speed Transmission Assembly No. 112-0368

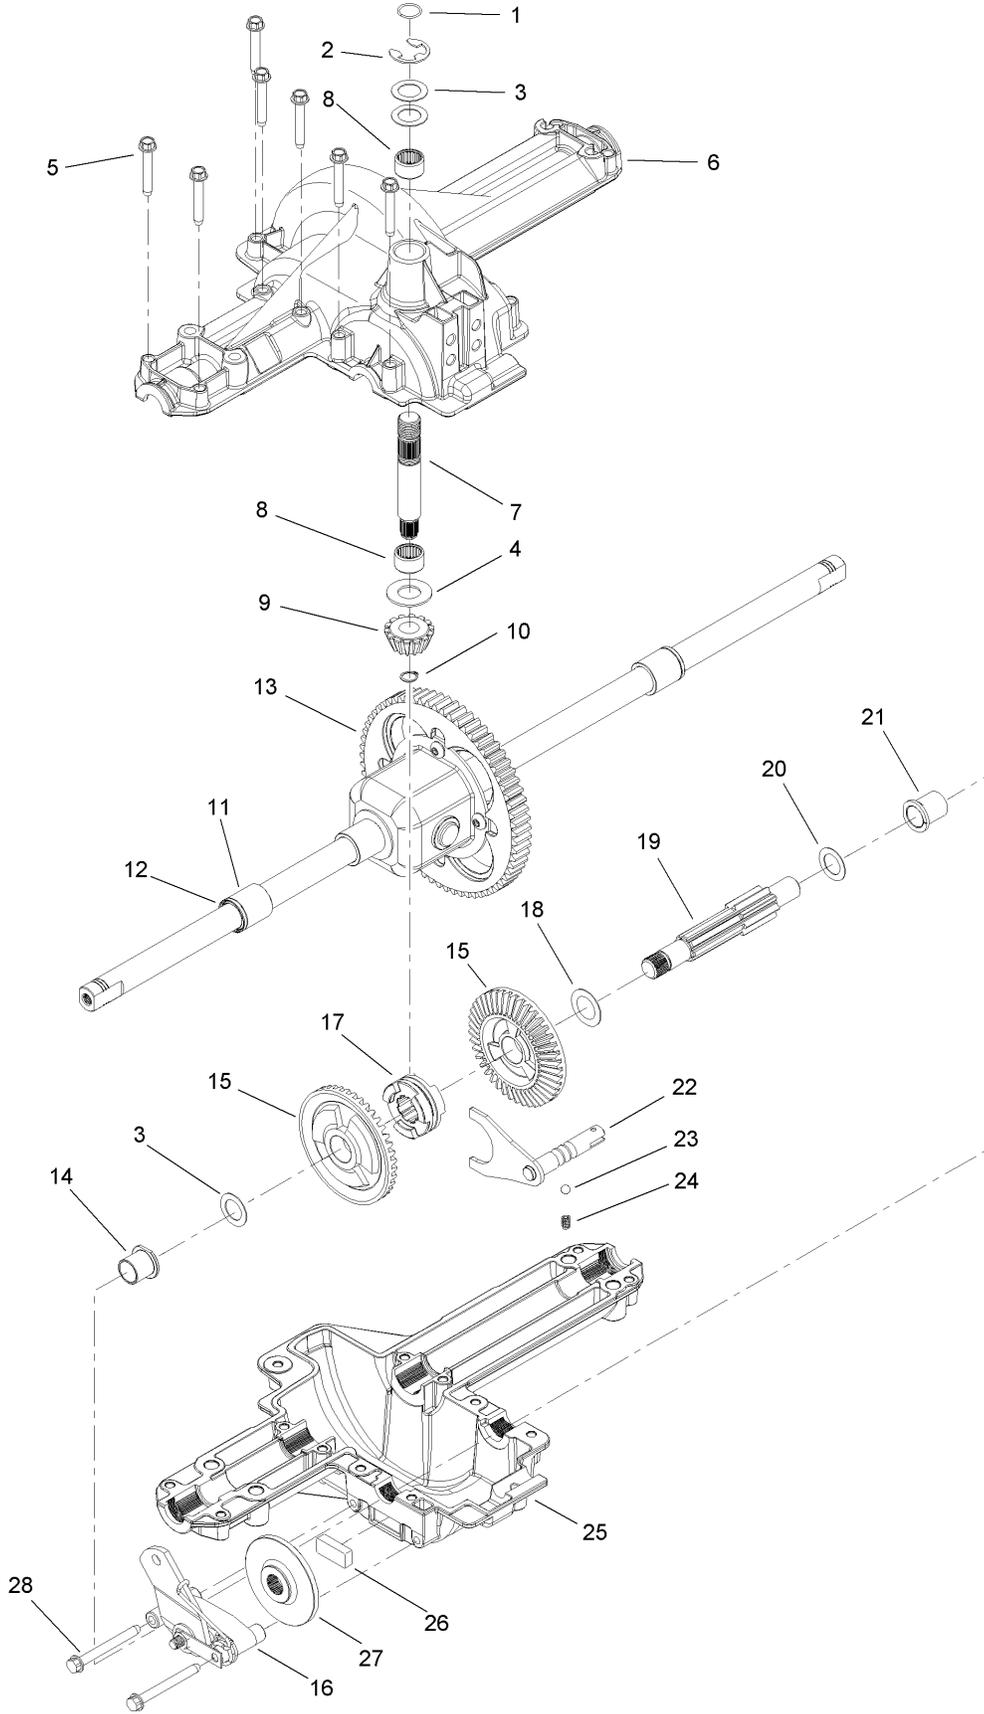

Single Speed Transmission Assembly No. 112-0368

Ref	Part No.	Qty.	Description				
1	112-0819	1	Ring-Wire				
2	112-0756	1	Ring-E				
3	112-0745	1	Washer-Flat				
3	112-0748	1	Washer-Flat				
3	112-0750	1	Washer-Flat				
4	112-0769	1	Washer-Thrust				
5	112-0839	1	Screw-TAP				
6	112-0833	1	Housing-Upper				
7	112-0826	1	Shaft-Input				
8	112-0808	1	Bearing-Needle				
9	112-0807	1	Pinion-Input, 14T				
10	112-0809	1	Ring-Snap				
11	112-5944	1	Sleeve-Bearing				
12	112-0800	1	Seal				
13	112-0823	1	Differential ASM				
14	112-0794	1	Bearing-Flange				
15	112-0796	1	Gear-Bevel, 42T				
16	112-0832	1	Brake ASM				
17	112-0840	1	Collar-Clutch				
18	112-5945	1	Washer-Flat				
19	112-0841	1	Shaft-Drive				
20	112-0755	1	Washer-Thrust				
21	112-0795	1	Bearing-Flange				
22	112-0806	1	Shift Fork ASM				
23	112-0799	1	Ball-Detent				
24	112-0801	1	Spring-Detent				
25	112-0834	1	Housing-Lower				
26	112-0741	1	Puck-Brake				
27	112-0817	1	Disc-Brake				
28	112-0698	1	Screw-HWH				


Deck Assembly

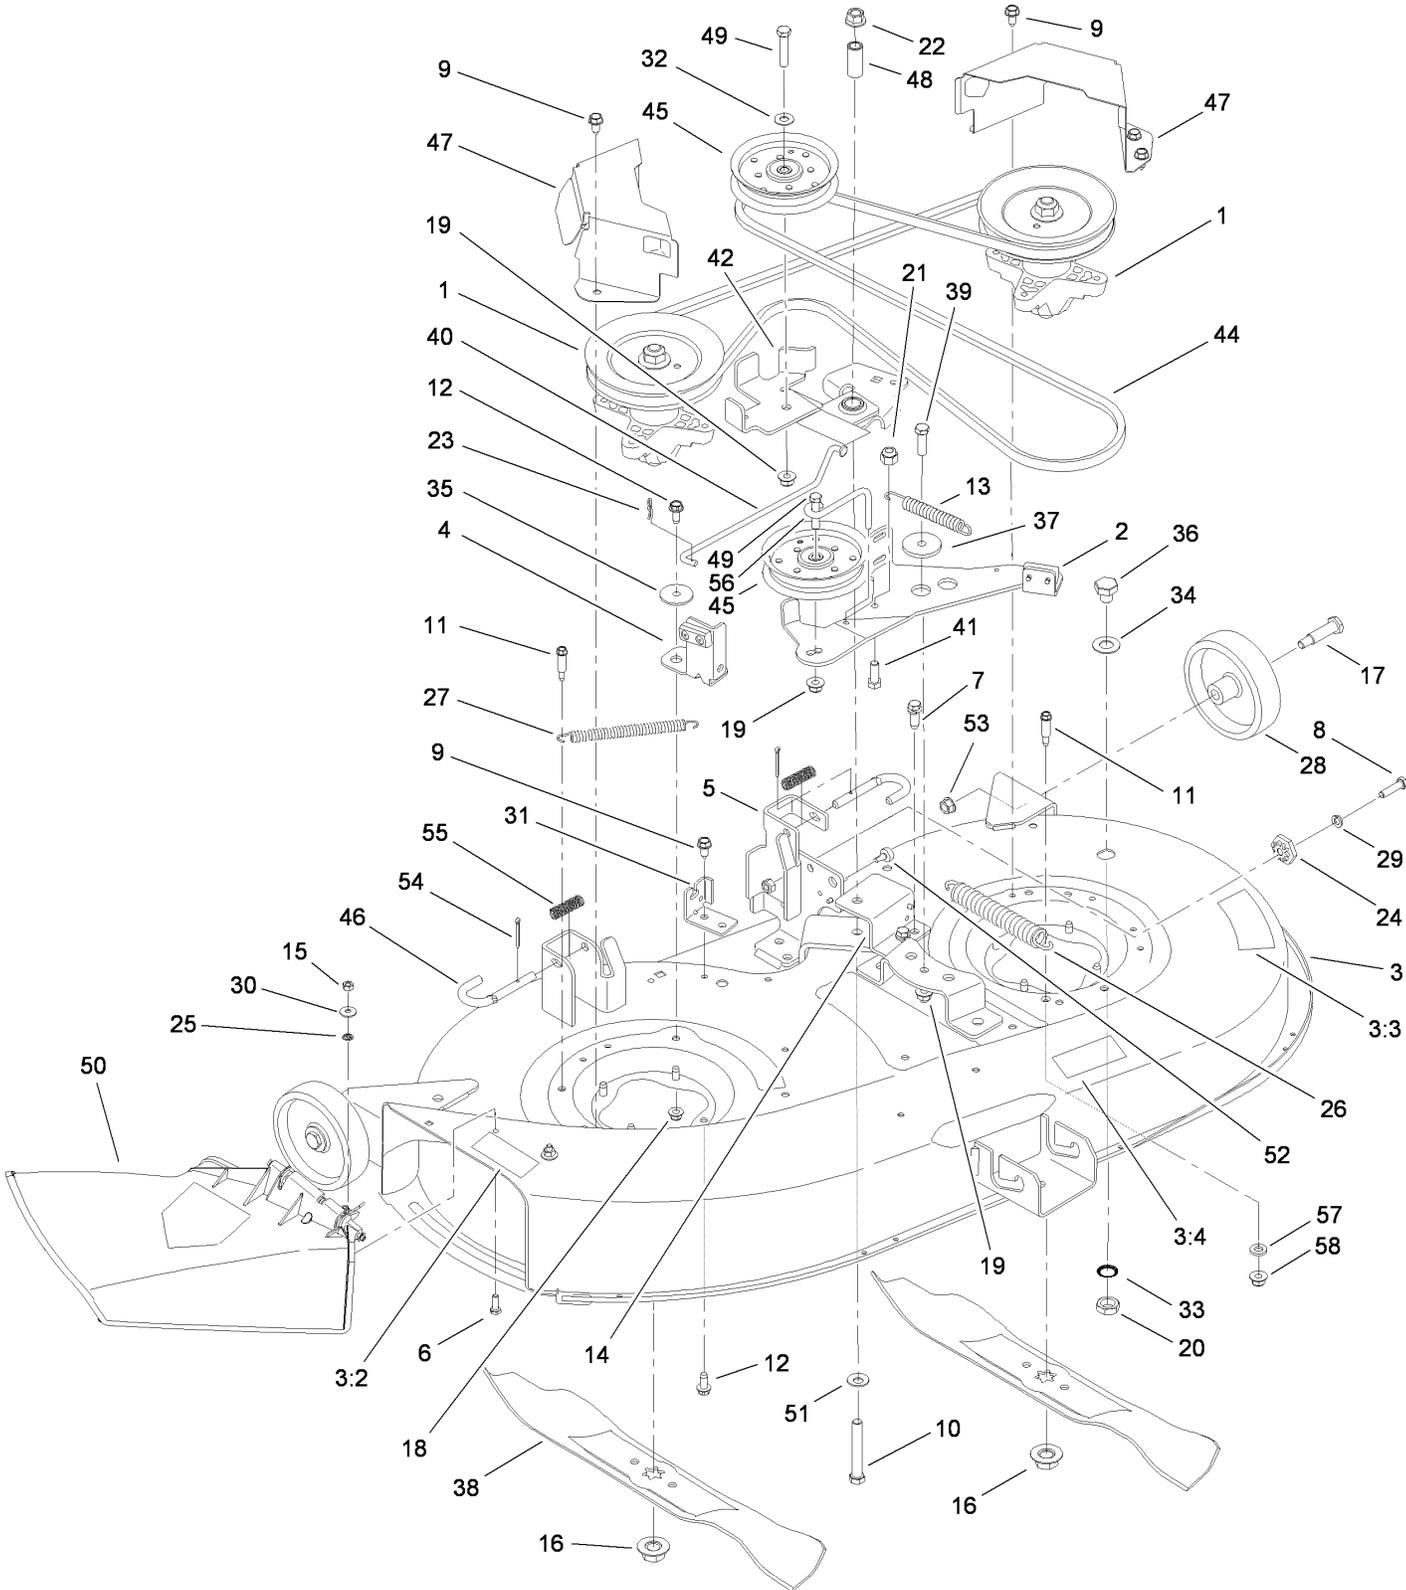

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-0460	1	Spindle ASM
2	112-0606	1	Deck Brake ASM
3	112-5857	1	Deck And Decal ASM
3:2	112-1267	1	Decal-Danger
3:3	112-1265	1	Decal-Danger
3:4	112-1270	1	Decal-Routing, Belt
4	112-3742	1	Brake ASM
5	112-0413	1	LH Hanger Bracket ASM
6	112-0499	1	Screw-HH
7	112-0663	1	Screw-TAP
8	112-0373	1	Screw-HH
9	112-0472	1	Screw-HH, TAP
10	112-3745	1	Screw-HH
11	112-5918	1	Bolt-Shoulder
12	112-0395	1	Screw-HWH
13	112-3746	1	Spring-Extension
14	112-5801	1	Bracket-Support, Pivot
15	112-0522	1	Nut-Hex
16	112-0330	1	Nut-Flange, Hex
17	112-0334	1	Bolt-Shoulder
18	112-0650	1	Nut-Lock, Flange
19	112-0668	1	Nut-Lock, Flange
20	112-0351	1	Nut-Hex
21	112-5821	1	Nut-Lock, Hex
22	112-0859	1	Nut-Lock, Flange
23	112-0459	1	Pin-Cotter
24	112-0327	1	Gear-Adjustment, Deck
25	112-0623	1	Retainer-Bolt
26	112-0349	1	Spring
27	112-0528	1	Spring-Extension
28	112-0337	1	Wheel-Deck, Rear
29	112-0366	1	Washer-Lock
30	112-0485	1	Washer-Spring
31	112-0718	1	Bracket-Cable, Deck
32	112-0572	1	Washer-Flat
33	112-0922	1	Washer-Lock
34	112-0339	1	Washer-Flat
35	112-3747	1	Spacer-Shoulder
36	112-0577	1	Plug
37	112-0584	1	Spacer-Shoulder
38	112-0315	1	Blade-21.23 Inch
39	112-0557	1	Screw-HH
40	112-3748	1	Rod-Brake
41	112-0855	1	Screw-HH
42	112-3743	1	Idler ASM
44	112-5800	1	Belt-V Type
45	112-0314	1	Pulley-Idler
46	112-0436	1	Pin-Handle, Deck Release
47	112-0630	1	Cover-Belt
48	112-3749	1	Spacer
49	112-0513	1	Screw-HH
50	112-0353	1	Discharge Chute ASM

Ref	Part No.	Qty.	Description
51	112-0481	1	Washer-Bell
52	112-1016	1	Bumper
53	112-0385	1	Nut-Lock, Flange
54	112-0412	1	Pin-Cotter
55	112-0406	1	Spring-Compression
56	112-5879	1	Rod-Keeper, Belt
57	112-5919	1	Washer-Flat
58	112-0636	1	Nut-Lock, Flange

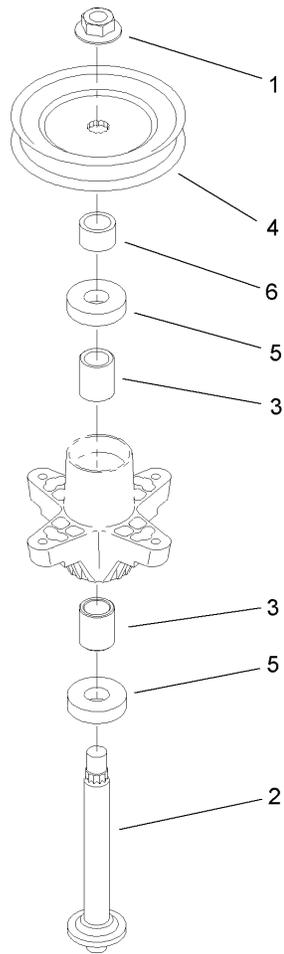

Spindle Assembly No. 112-0460


Ref	Part No.	Qty.	Description
1	112-0668	1	Nut-Lock, Flange
2	112-0884	1	Shaft-Spindle, Blade (Star)
3	112-0389	1	Spacer
4	112-0613	1	Pulley-Deck
5	112-0377	1	Bearing-Ball
6	112-5924	1	Spacer

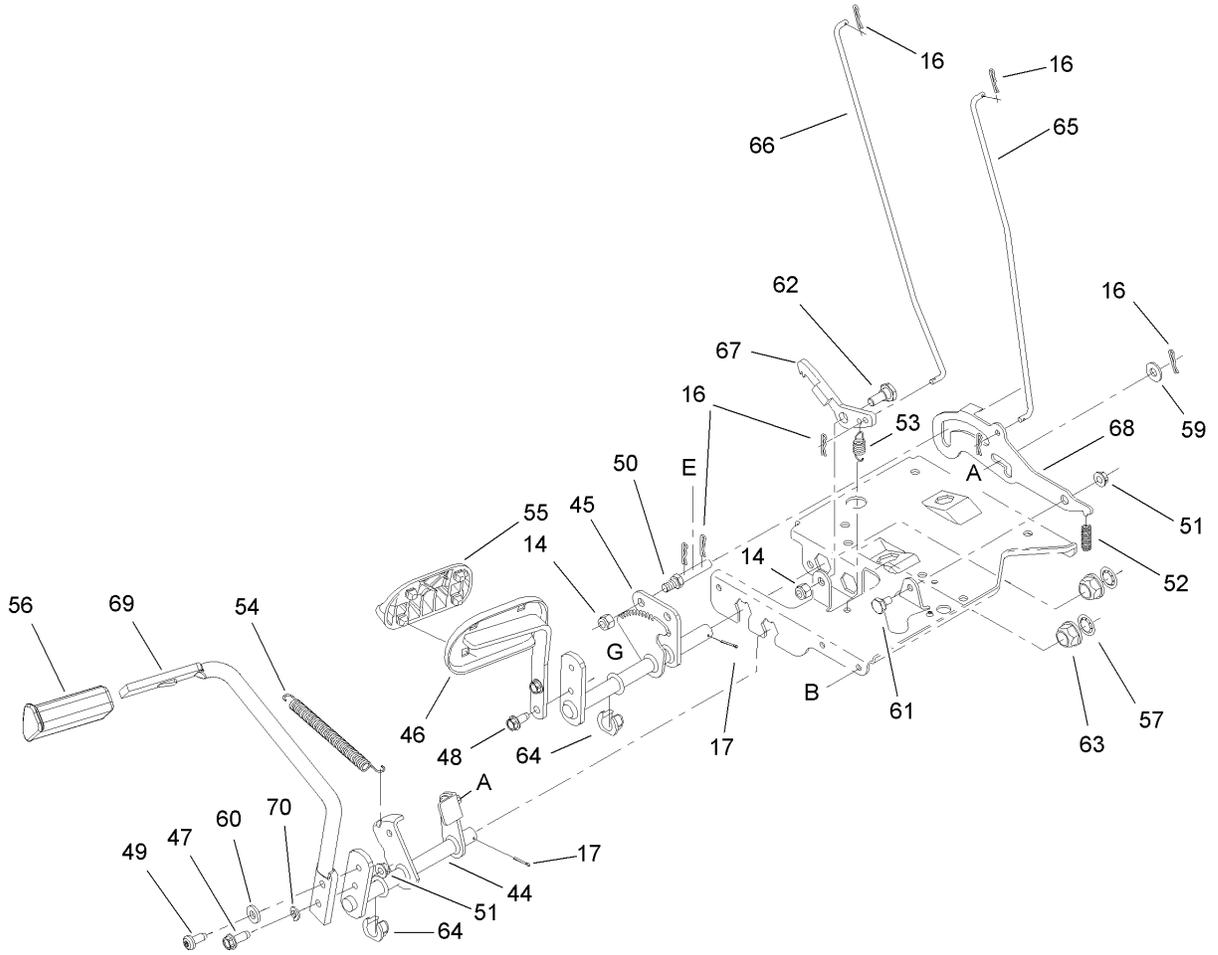

Brake and Traction Pedal Assembly


Ref	Part No.	Qty.	Description
14	112-0668	1	Nut-Lock, Flange
16	112-0459	1	Pin-Cotter
17	112-0568	1	Pin-Cotter
44	112-0648	1	Brake Control ASM
45	112-0539	1	Speed Control ASM
46	112-0680	1	Pedal ASM
47	112-0404	1	Screw-HWHTF
48	112-0395	1	Screw-HWH
49	112-0563	1	Screw-TAP
50	112-0599	1	Pin
51	112-0511	1	Nut-Lock, Flange
52	112-0506	1	Spring
53	112-0510	1	Spring-Extension
54	112-0348	1	Spring-Extension
55	112-0543	1	Pad-Pedal
56	112-0530	1	Pad-Brake
57	112-0339	1	Washer-Flat
59	112-0572	1	Washer-Flat
60	112-0579	1	Washer-Flat
61	112-5817	1	Bolt-Shoulder
62	112-0442	1	Bolt-Shoulder
63	112-0347	1	Bearing-Flange
64	112-0387	1	Bearing-Flange, Hex (Split)
65	112-0675	1	Rod-Brake, Lock Control

Ref	Part No.	Qty.	Description
66	112-0662	1	Rod-Control, Cruise
67	112-0696	1	Latch-Cruise
68	112-5816	1	Bracket-Lock Out
69	112-3738	1	Pedal-Brake
70	112-0366	1	Washer-Lock

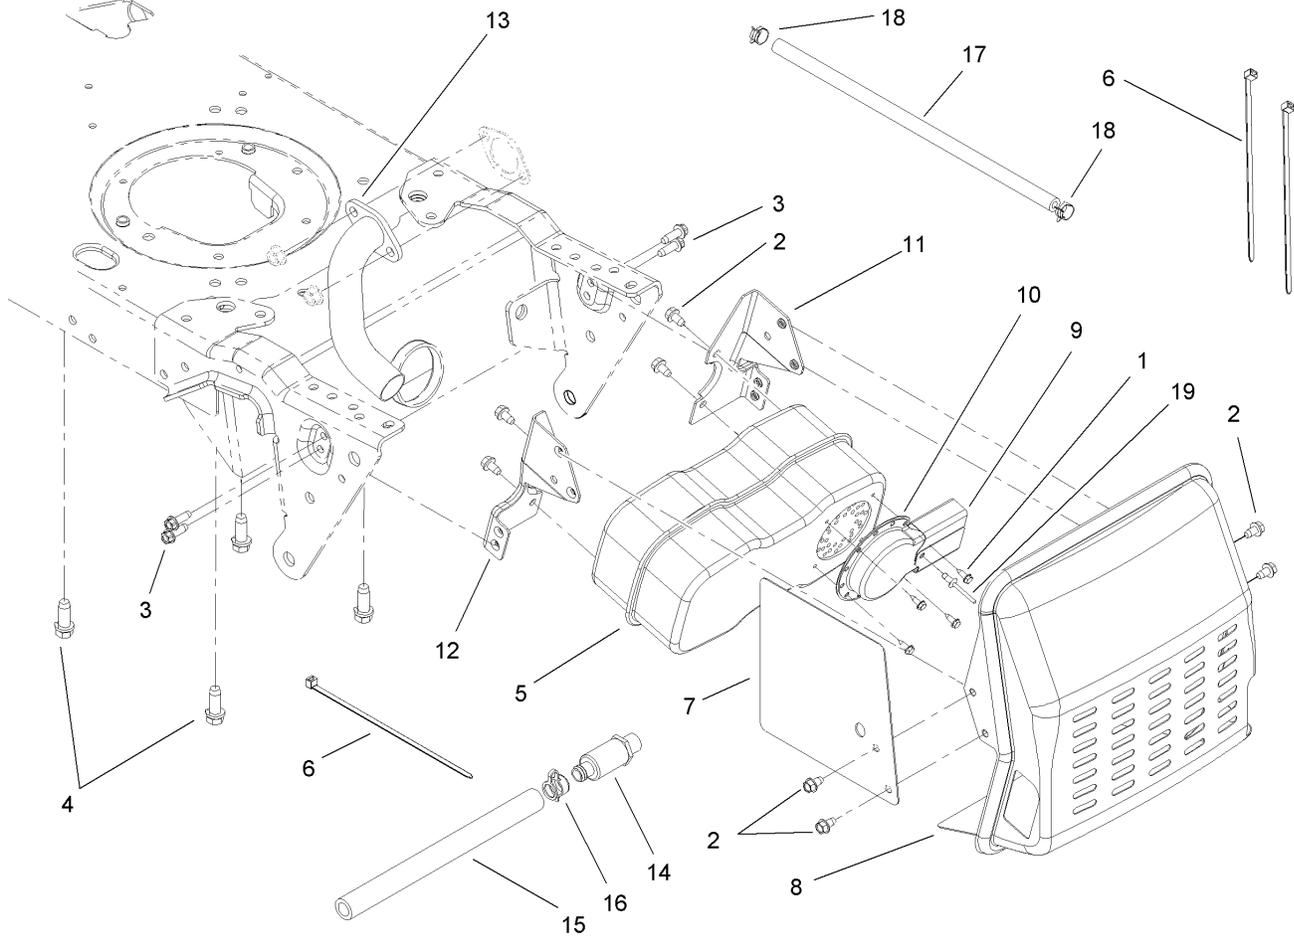

Muffler Assembly


Ref	Part No.	Qty.	Description
1	112-0626	1	Screw-HWHTF
2	112-0524	1	Screw-HWHTF
3	112-0587	1	Screw-HH, TAP
4	112-0663	1	Screw-TAP
5	112-0361	1	Muffler-Inlet, Single
6	112-0527	1	Tie-Cable
7	112-5827	1	Shield-Heat
8	112-0457	1	Muffler Shield ASM
9	112-0730	1	Deflector-Muffler, Long
10	112-0453	1	Deflector-Muffler
11	112-0467	1	Bracket-Muffler, LH
12	112-0466	1	Bracket-Muffler, RH
13	112-0430	1	Pipe-Exhaust
14	112-0388	1	Drain-Oil
15	112-0553	1	Hose-Drain
16	112-0397	1	Cap-Drain, Oil
17	112-0720	1	Hose-Fuel
18	112-0573	1	Clamp-Hose
19	112-3741	1	Rivet-Pop

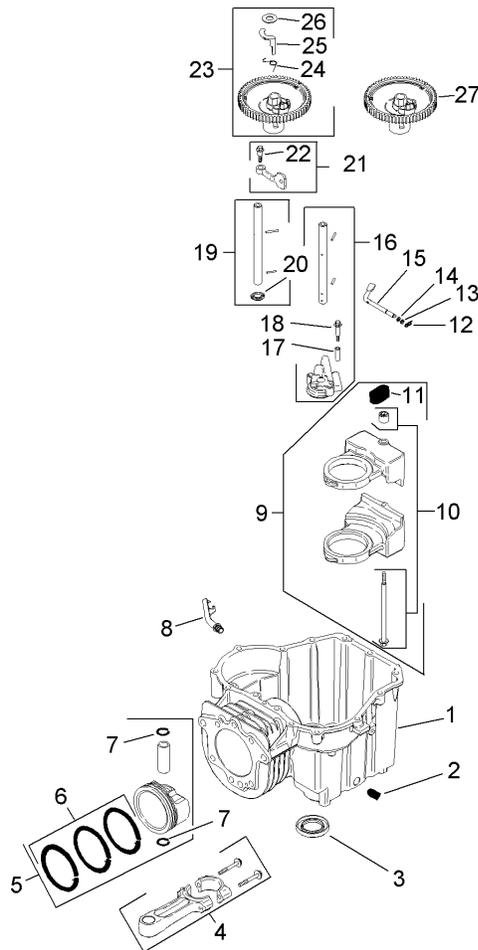

Crankcase Assembly Kohler SV540-0019


Ref	Part No.	Qty.	Description
2 1		1	Crankcase (Use: Short Block 20 522 02)
2	25 139 57-S	1	Plug-Solid, Square Head (.38)
3	20 032 01-S	1	Seal-Oil
4	20 067 04-S	1	Connecting Rod ASM
5	20 874 05-S	1	Piston W/Ring Set (Includes 6-7)
6	20 108 02-S	1	Ring Set (89 Mm)
7	20 018 04-S	2	Retainer-Pin, Piston
8	20 123 02-S	1	Tube-Back, Drain
9	20 755 04-S	1	Balance Weight Kit (Includes 10-11)
10	20 086 16-S	1	Screw And Guide Pin Kit
11	20 423 02-S	1	Shoe-Guide
12	12 154 05-S	1	Clip-Pin, Hitch
13	M-631015-S	1	Washer-Flat (6Mm)
14	X-25-102-S	1	Washer-Flat (1/4)
15	20 144 02-S	1	Shaft-Cross, Governor
16	20 393 02-S	1	Oil Pump ASM (Includes 17-18)
17	20 112 02-S	2	Spacer-Screw, Oil Pump
18	20 086 13-S	2	Screw-Pump, Oil
19	20 144 06-S	1	Shaft-Cam, Center - Exhaust (Includes 20)
20	20 468 01-S	1	Washer-Thrust
21	20 090 01-S	2	Cam Lever ASM (Includes 22)
22	20 086 06-S	1	Bolt-Shoulder (M6X1X26)

Ref	Part No.	Qty.	Description
23	20 010 04-S	1	Cam Gear ASM - Intake (Includes 24-26)
24	20 089 06-S	1	Spring-A C R
25	20 044 16-S	1	Weight-A C R
26	20 468 03-S	2	Washer-Thrust, A C R
27	20 010 04-S	1	Cam Gear ASM

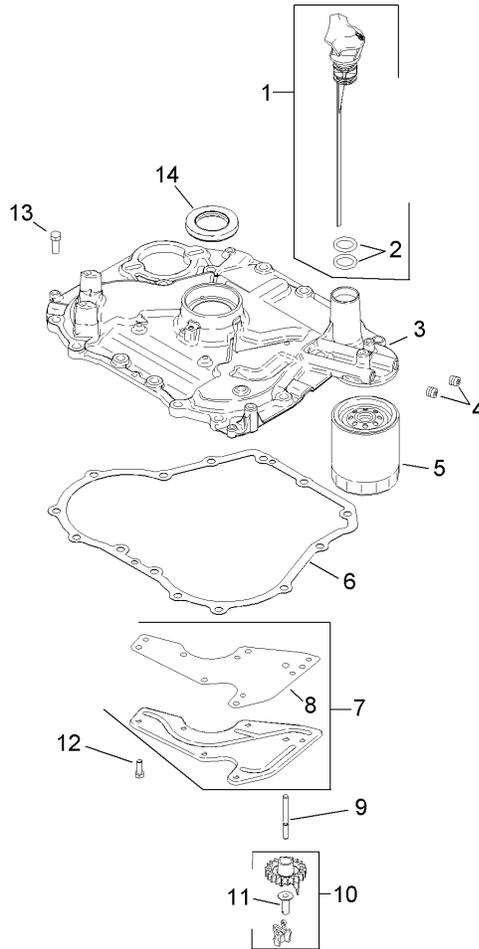


Oil Pan and Lubrication Assembly Kohler SV540-0019

Ref	Part No.	Qty.	Description				
❶	20 040 03-S	1	Dipstick Kit (Includes 2)				
❷	20 153 01-S	1	O Ring-Dipstick				
❸	20 009 03-S	1	Closure Plate ASM (Includes 4-11)				
❹	25 139 60-S	2	Plug-Hex, Countersunk (.125)				
❺	98020	1	Filter-Oil				
❻	20 041 01-S	1	Gasket-Plate, Closure				
❼	20 096 02-S	1	Oil Passage Cover Kit (Includes 8)				
❽	20 041 02-S	1	Gasket-Passage, Oil				
❾	20 144 03-S	1	Shaft-Gear, Governor				
❿	20 310 03-S	1	Gear And Weight ASM (Includes 11)				
⓫	12 380 01-S	1	Pin-Regulating, Governor				
⓬	M-545013-S	6	Screw-Flange, Hex (M5X0.8X13)				
⓭	M-851030-S	14	Screw-Flange, Hex (M8X1.25X30)				
⓮	20 032 01-S	1	Seal-Oil				

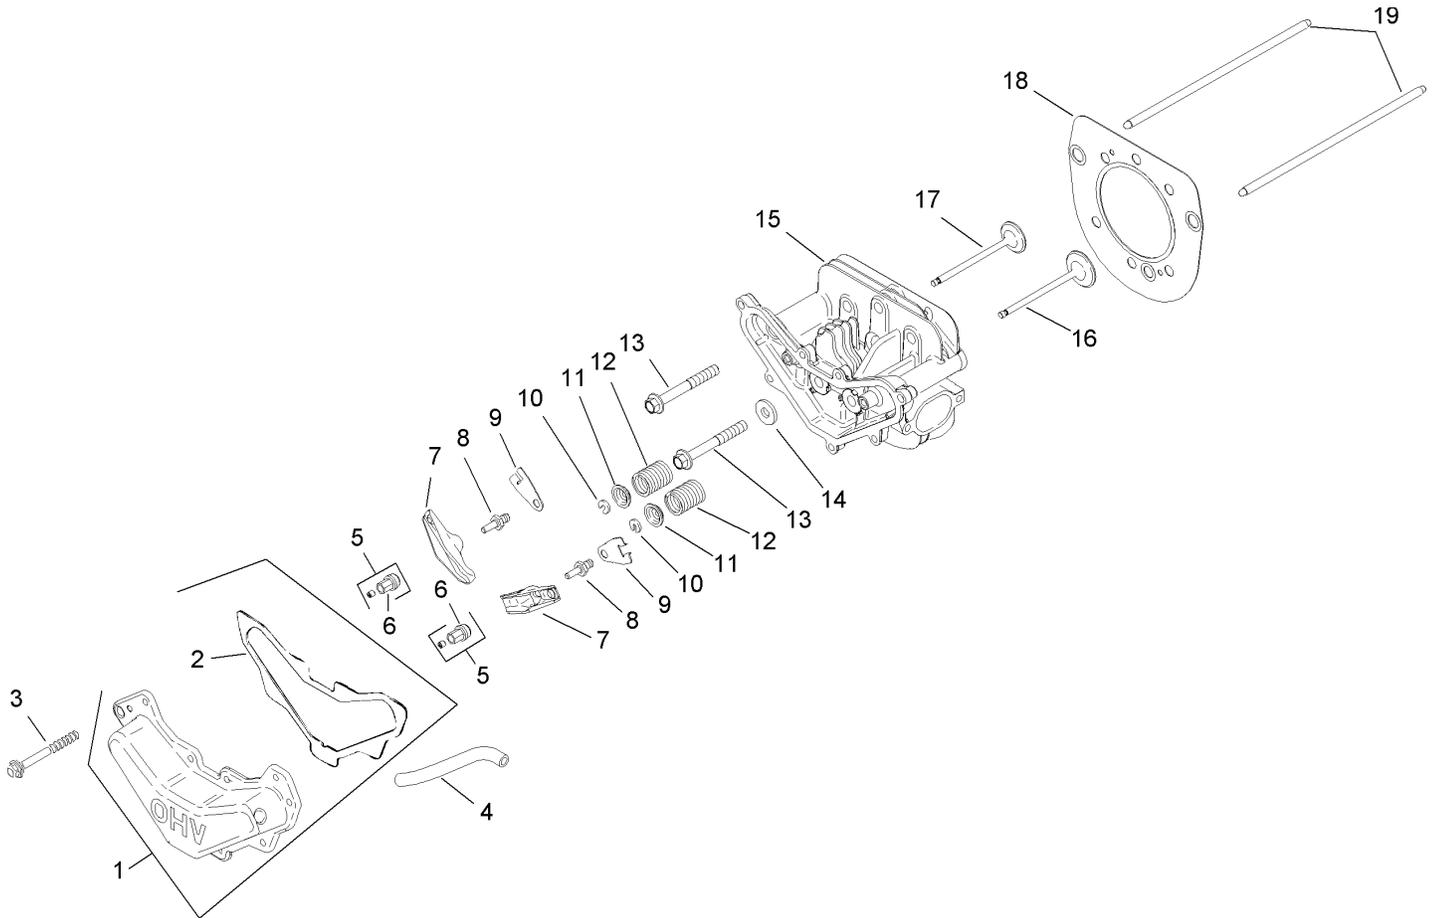

Head, Valve and Breather Assembly Kohler SV540-0019


Ref	Part No.	Qty.	Description
❶	20 096 07-S	1	Valve Cover Kit (Includes 2)
❷	20 041 04-S	1	Gasket-Cover, Valve
❸	M-645020-S	7	Screw-Flange, Hex (M6X1.0X20)
❹	20 326 01-S	1	Hose-Breather
❺	20 086 04-S	2	Screw-Set
❻	20 599 01-S	2	Pivot-Arm, Rocker
❼	20 186 01-S	2	Arm-Rocker
❽	20 086 03-S	2	Stud-Rocker
❾	20 146 03-S	2	Plate-Guide, Push Rod
❿	20 062 01-S	2	Lock-Retainer
⓫	20 173 01-S	2	Cap-Spring, Valve
⓬	20 089 03-S	2	Spring-Valve
⓭	20 086 02-S	6	Screw-Flange, Hex (M10X1.5X37)
⓮	12 468 05-S	1	Washer-Flat (1/2)
⓯	20 318 01-S	1	Head-Cylinder
⓰	20 016 01-S	1	Valve-Exhaust
⓱	20 017 01-S	1	Valve-Intake
⓲	20 841 02-S	1	Cylinder Head Gasket Kit (Includes 13-14, And Part Nos. 12 041 01-S, 12 041 02-S And 20 041 07-S)
⓳	20 411 04-S	2	Rod-Push

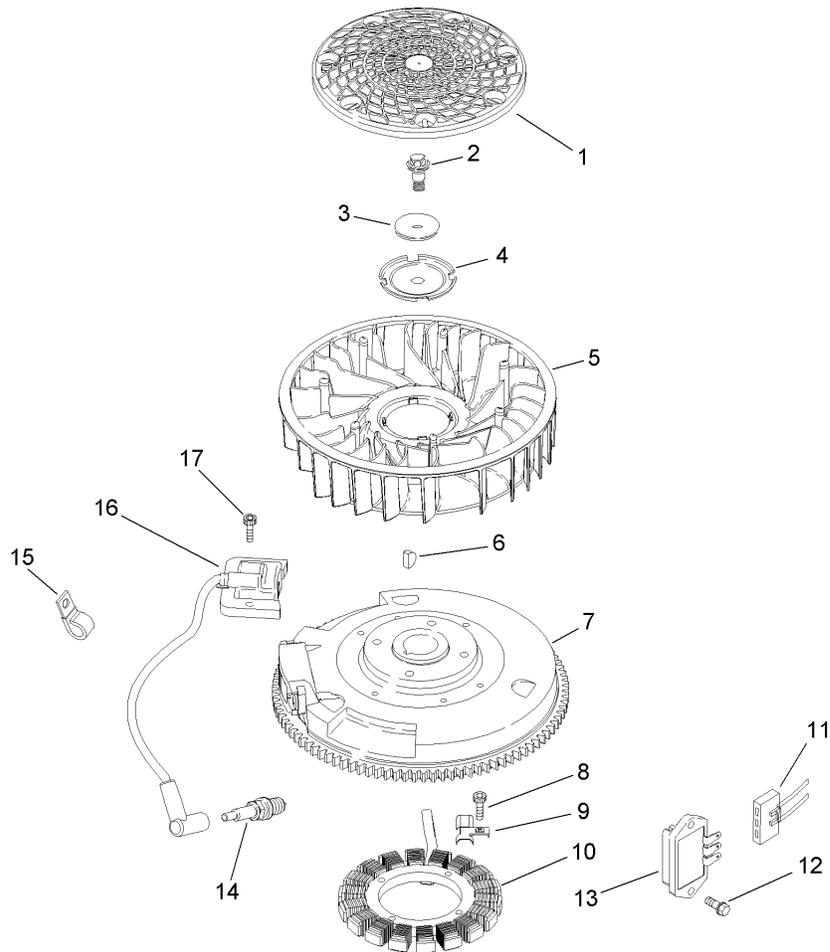

Ignition and Electrical Assembly Kohler SV540-0019


Ref	Part No.	Qty.	Description
1	20 162 02-S	1	Screen-Grass
2	12 086 14-S	1	Screw-Hex, Flange (M10X1.5X45)
3	12 468 03-S	1	Washer-Flat (.38)
4	20 146 02-S	1	Plate-Fan Mounting
5	20 157 01-S	1	Fan
6	X-42-15-S	1	Key (.19 X .62)
7	20 025 05-S	1	Flywheel
8	20 086 17-S	2	Screw-Socket, Hex (M5X0.8X25)
9	20 154 03-S	1	Clip-Wire
10	237878-S	1	Stator Kit (15 Amp)
11	236602-S	1	Connector (3 Contact)
12	M-545020-S	2	Screw-HHFTF (M5X0.8X20)
13	41 403 09-S	1	Rectifier-Regulator
14	77-7330	1	Plug-Spark
15	231285-S	2	Clip-Cable
16	20 584 01-S	1	Module-Ignition
17	M-561025-S	2	Screw-Socket, Hex (M5X0.8X25)
18	20 176 01-S	1	Harness-Wiring (Six Pin)

--	--	--	--

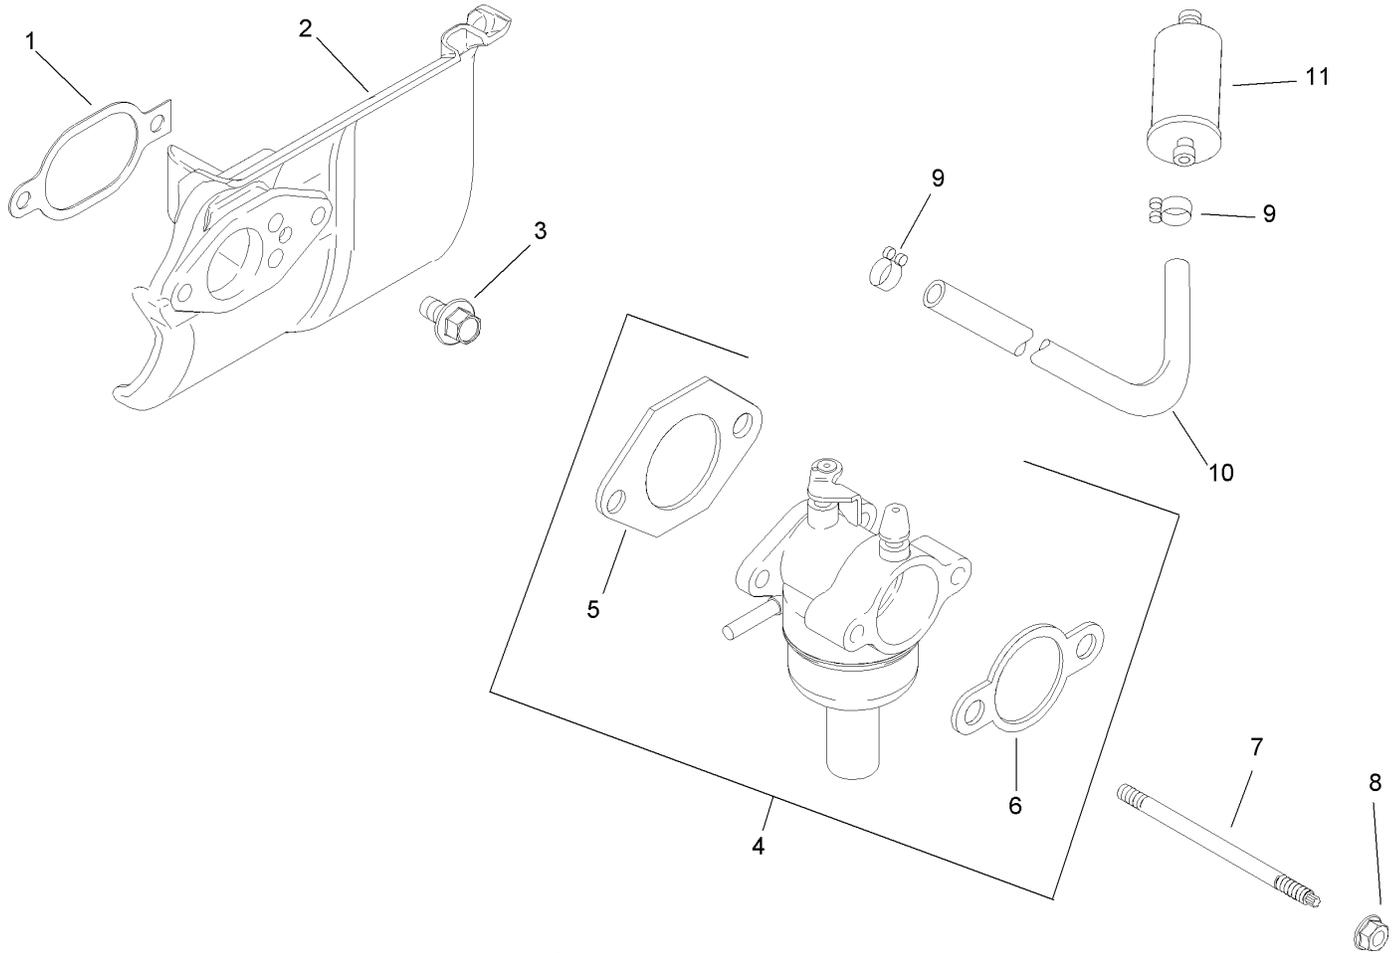


Fuel System Assembly Kohler SV540-0019

Ref	Part No.	Qty.	Description
1	20 041 07-S	1	Gasket-Deflector, Heat
2	20 265 01-S	1	Deflector-Heat
3	M-651020-S	1	Screw-Flange, Hex (M6X1.0X20)
4	20 853 16-S	1	Carburetor ASM W/Gaskets (Includes 5-6)
5	12 041 01-S	1	Gasket-Carburetor
6	12 041 02-S	1	Gasket-Base, Air Cleaner
7	20 072 05-S	1	Stud-Mounting, Carburetor (M6X1.0X100)
8	M-641060-S	2	Nut-Hex, Flange (M6X1.0)
9	25 237 14-S	2	Clamp-Hose
10	20 353 01-S	1	Line-Fuel, 7 Inch (Filter To Carb)
11	98021	1	Filter-Fuel
12	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)
13	12 755 110-S	1	Choke Shaft Kit
14	12 757 02-S	1	Float Repair Kit
15	12 757 03-S	1	Carburetor Repair Kit
16	12 757 33-S	1	Solenoid Repair Kit
17	12 757 37-S	1	Bowl Replacement Kit (W/Gaskets)
18	12 454 03-S	1	Tie-Wire

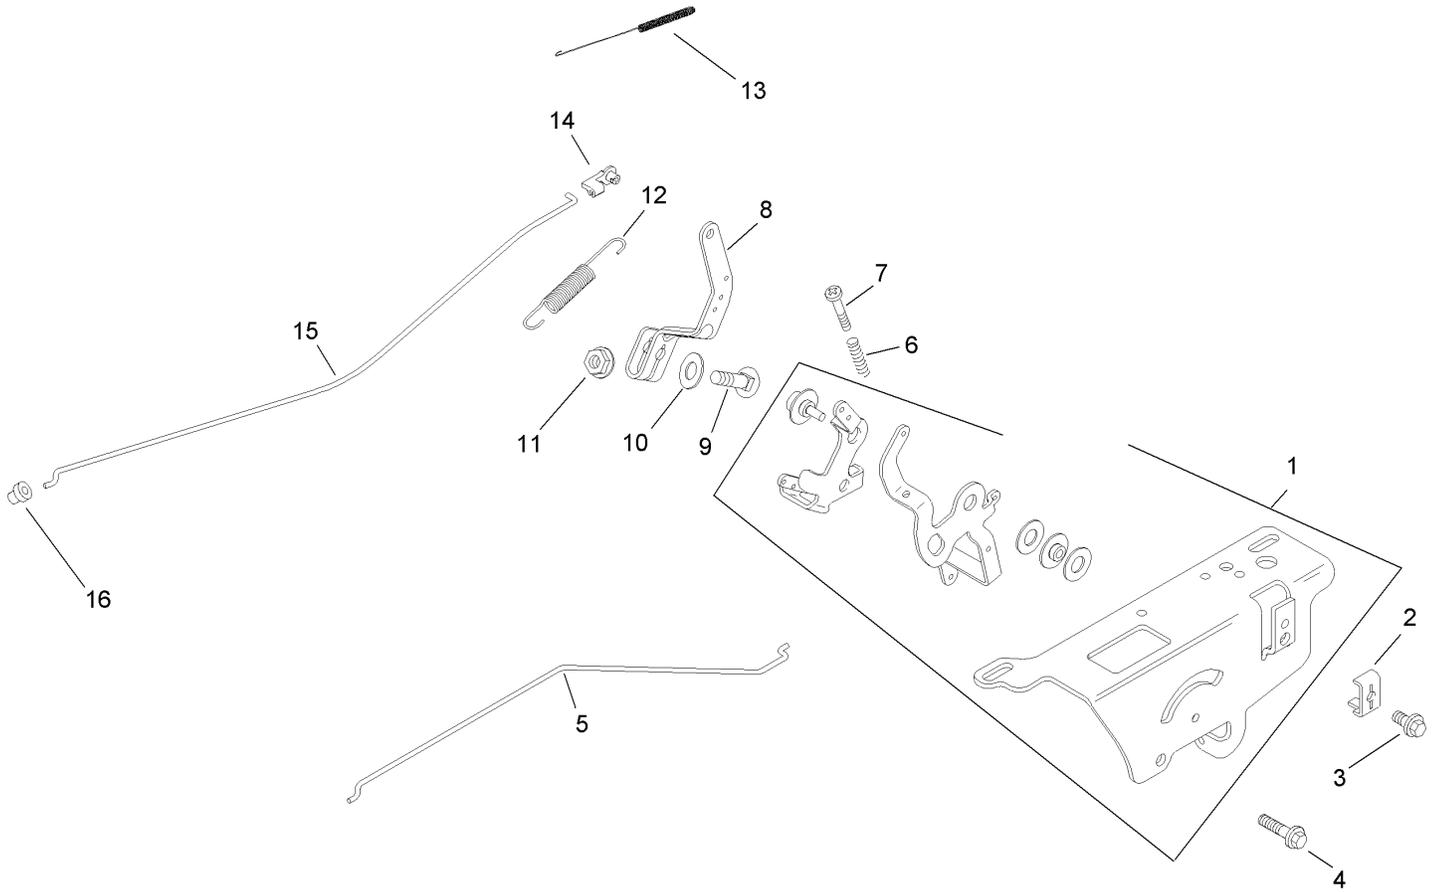

Engine Control Assembly Kohler SV540-0019



Ref	Part No.	Qty.	Description
❶	20 536 05-S	1	Speed Control ASM
❷	12 237 01-S	1	Clamp-Cable
❸	M-545016-S	2	Screw-HHFTF (M5X0.8X16)
❹	M-664020-S	2	Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20)
❺	20 079 05-S	1	Linkage-Choke (Single Wire)
❻	12 089 11-S	1	Spring-Control, Speed
❼	20 086 10-S	1	Screw-Thread Forming (M4X0.7X25)
❽	20 090 02-S	1	Lever-Governor
❾	52 211 04-S	1	Bolt-Square Neck, Round Head (1/4-20X1)
❿	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)
⓫	12 100 07-S	1	Nut-Flange, Hex (1/4-20)
⓬	20 089 11-S	1	Spring-Governor
⓭	20 089 10-S	1	Spring-Linkage
⓮	25 158 11-S	1	Bushing-Linkage, Throttle
⓯	20 079 04-S	1	Linkage-Throttle
⓰	25 158 08-S	1	Bushing-Retaining, Linkage

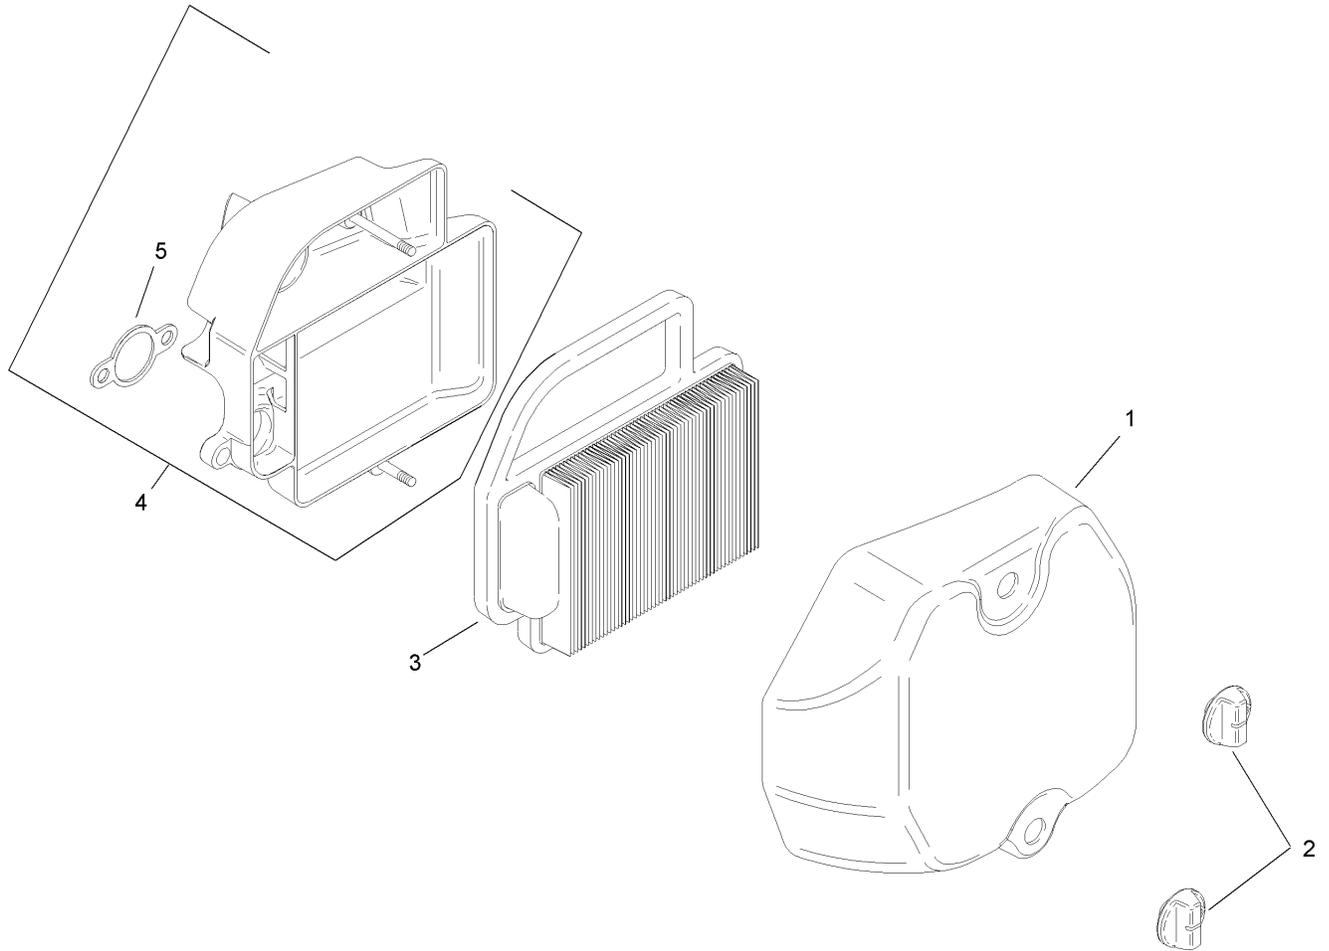

Air Intake and Filtration Assembly Kohler SV540-0019

Ref	Part No.	Qty.	Description
❶	20 096 04-S	1	Cover-Cleaner, Air
❷	25 341 04-S	2	Knob-Cover
❸	98018	1	Element-Air Cleaner
❹	20 094 01-S	1	Air Cleaner Base Kit (Includes 5)
❺	12 041 02-S	1	Gasket-Base, Air Cleaner

Ref	Part No.	Qty.	Description

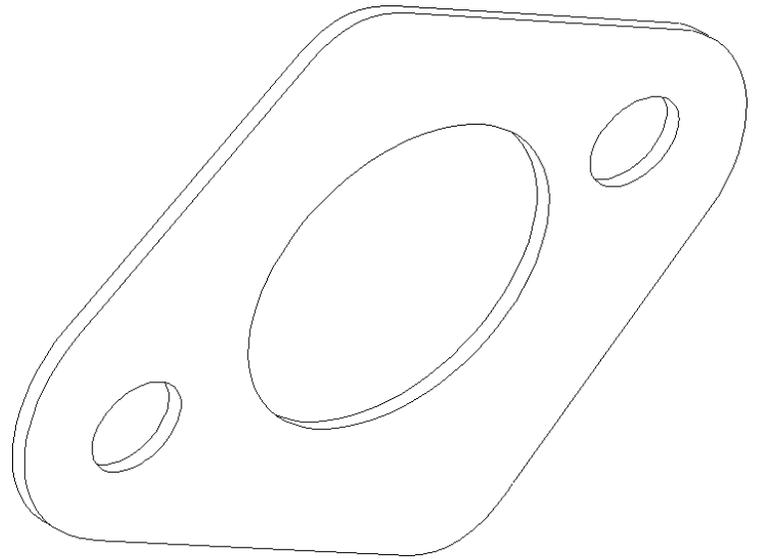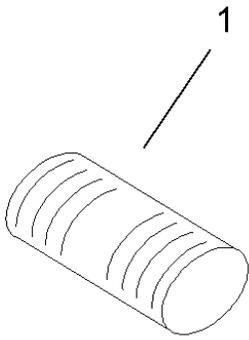

**Exhaust and Gasket Assembly
Kohler SV540-0019**

Ref	Part No.	Qty.	Description
1	25 072 04-S	2	Stud (M8X1.25X33)
2	20 041 12-S	1	Gasket-Exhaust
3	20 755 05-S	1	Gasket Set

Ref	Part No.	Qty.	Description

Attachments and Accessories

For 13AX60RG544 - LX420 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Spark Plug	77-7330
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Filter-Air	98018
Filter-Oil	98020
Filter-Fuel	98021
Blade Kit (2 Blades, 42 Inch Decks)	98022

NOTES

