



LX425 Lawn Tractor

Model No. 13BX60RG544 - 1A087H10172 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front and Rear Wheel Assembly	 3	Oil Pan and Lubrication Assembly Kohler SV720-0011	 22
Deck Lift Arm Assembly	 4	Head, Valve and Breather Assembly Kohler SV720-0011	 23
Steering Shaft and Front Axle Assembly	 5	Ignition and Electrical Assembly Kohler SV720-0011	 24
Frame and Battery Assembly	 6	Blower Housing and Baffle Assembly Kohler SV720-0011	 25
Seat and Frame Assembly	 7	Starting System Assembly Kohler SV720-0011	 26
Fuel Tank and Hood Assembly	 8	Fuel System Assembly Kohler SV720-0011	 27
Transmission, Belt and Pulley Assembly	 10	Engine Control Assembly Kohler SV720-0011	 28
Single Speed Transmission Assembly No. 112-0368	 12	Air Intake and Filtration Assembly Kohler SV720-0011	 29
Brake and Traction Pedal Assembly	 14	Exhaust Stud, Gasket and Decal Assembly Kohler SV720-0011	 30
PTO Engage Assembly	 15	Attachments and Accessories List	 31
Deck Assembly	 16		
Spindle Assembly No. 112-0460	 18		
Muffler Assembly	 19		
Crankshaft Assembly Kohler SV720-0011	 20		
Crankcase Assembly Kohler SV720-0011	 21		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|--------------------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Kohler dealer | ❹ Obtain from your local Toro dealer |
| ❺ For Service with Keihin Carburetors | ❻ For Service of Nikki Carburetors |

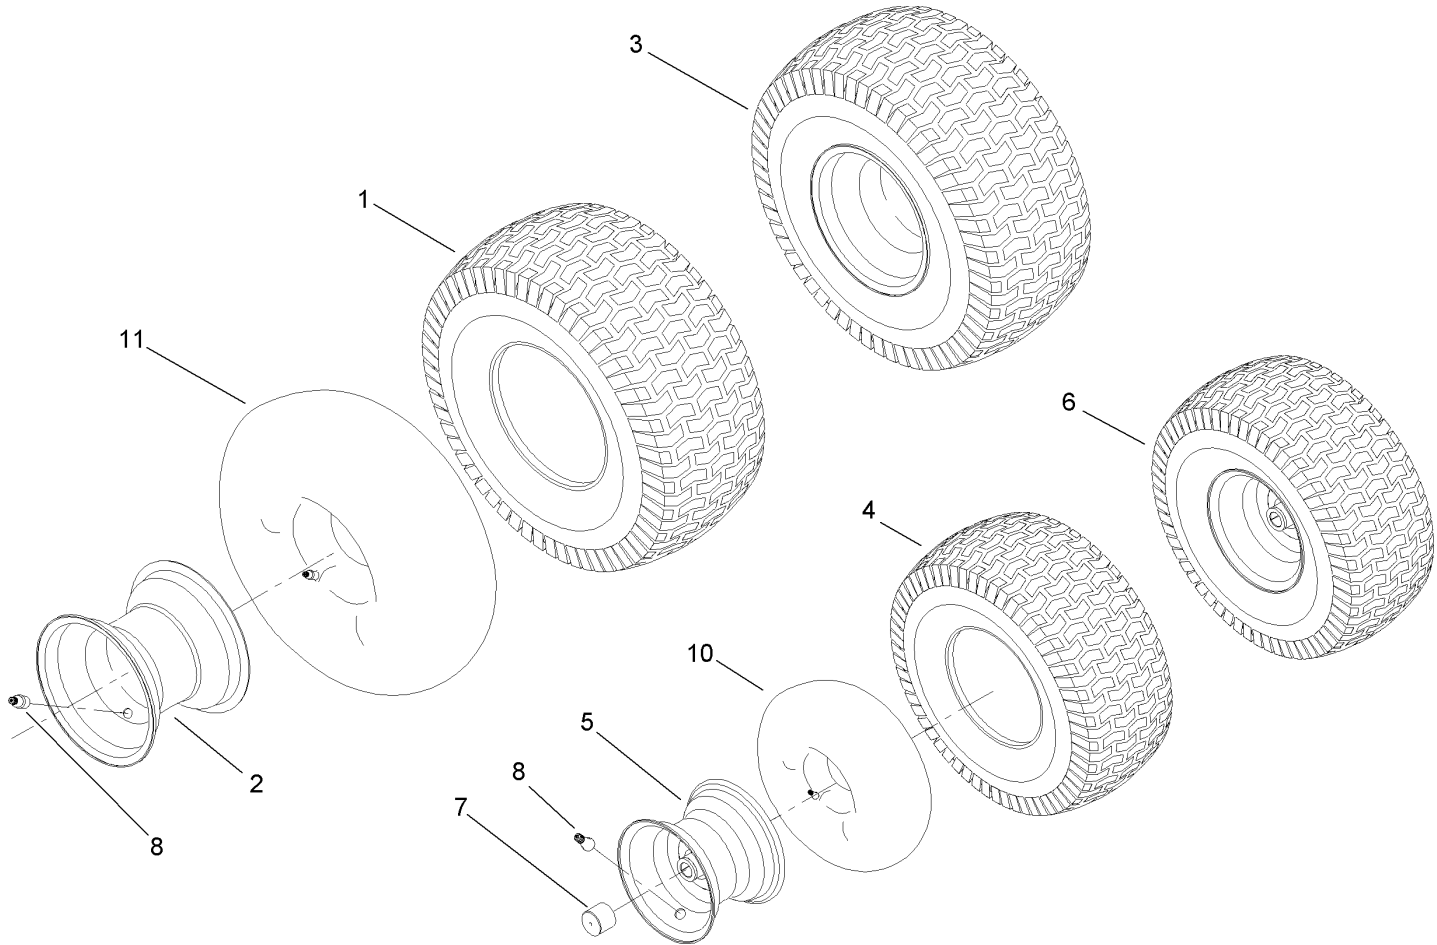


Front and Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1	112-0713	1	Tire-Multi Trac				
2	112-0448	1	Rim-Wheel, Rear				
3	112-0496	1	Rear Wheel ASM				
4	112-0576	1	Tire-Front				
5	112-0468	1	Rim-Wheel, Front				
6	112-0491	1	Front Wheel ASM				
7	112-5968	1	Cap-Hub				
8	112-0503	1	Valve-Air, Tubeless				
10	232-39	1	Tube-Inner				
11	93-3893	1	Tube-Inner				

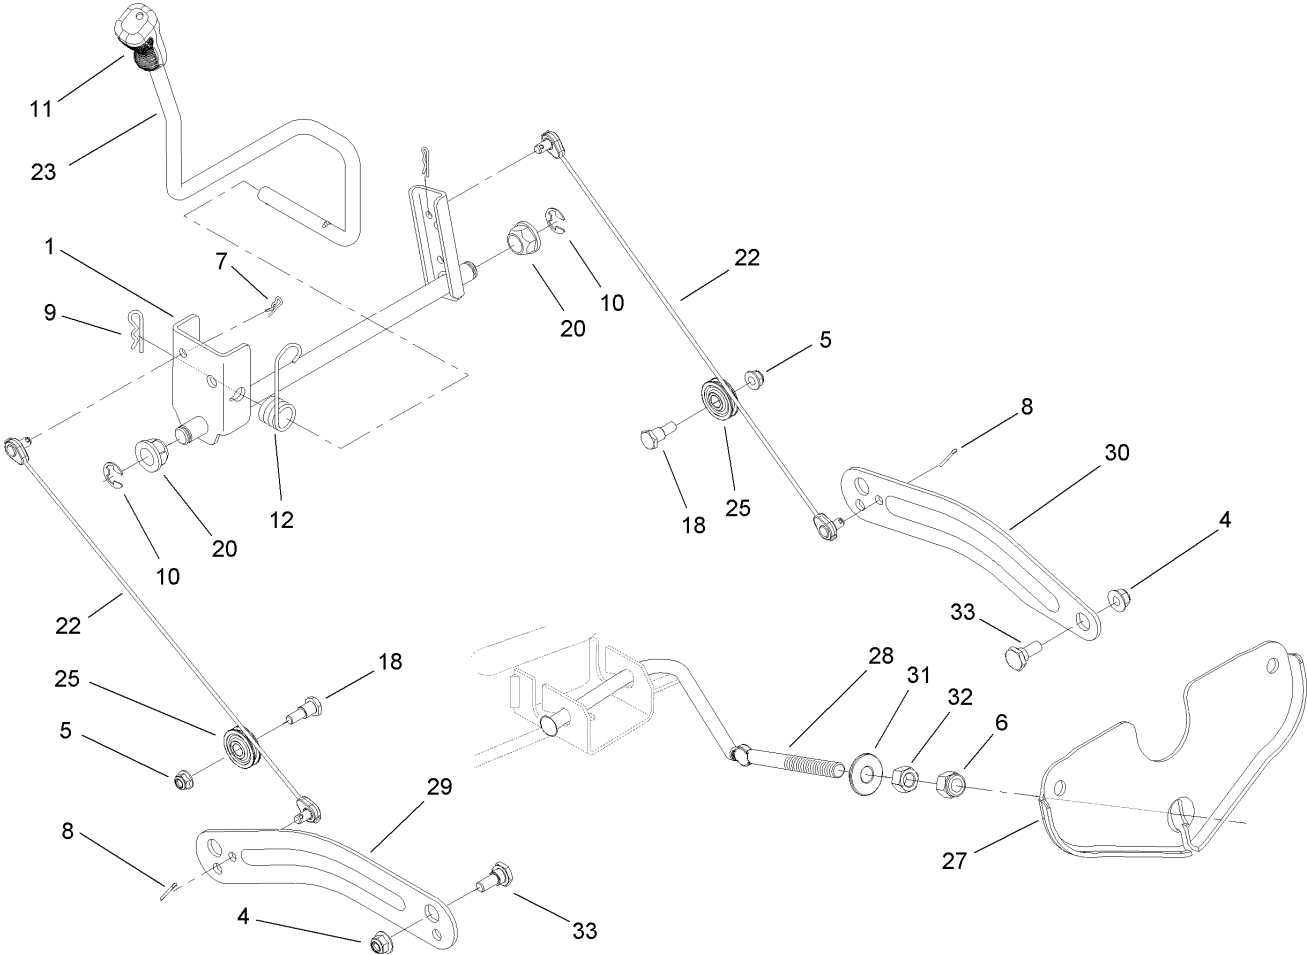 

Deck Lift Arm Assembly


Ref	Part No.	Qty.	Description				
1	112-5969	1	Lift Shaft ASM				
4	112-0668	1	Nut-Lock, Flange				
5	112-0650	1	Nut-Lock, Flange				
6	112-0476	1	Nut-Lock, Hex (Nylon)				
7	112-0459	1	Pin-Cotter				
8	112-0568	1	Pin-Cotter				
9	112-0394	1	Pin-Hair				
10	112-0586	1	Ring-E				
11	112-0585	1	Grip-Handle				
12	112-0477	1	Spring-Torsion				
18	112-0443	1	Bolt-Shoulder				
20	112-0347	1	Bearing-Flange				
22	112-0374	1	Cable-Lift				
23	112-5970	1	Handle-Lift				
25	112-0502	1	Pulley-Roller				
27	112-0704	1	Bracket-Hanger, Deck				
28	112-0607	1	Rod-Deck, Front Adjustment				
29	112-0690	1	Arm-Lift, Deck (RH)				
30	112-0719	1	Arm-Lift, Deck (LH)				
31	112-0641	1	Cup-Pivot, Lift				
32	112-0458	1	Nut-Hex				
33	112-0669	1	Bolt-Shoulder				

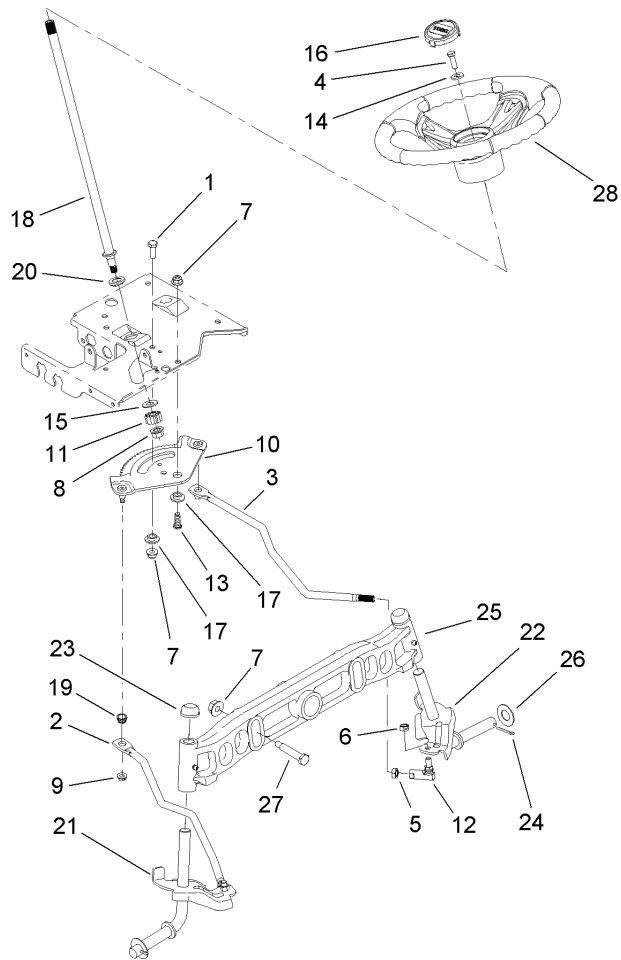 

Steering Shaft and Front Axle Assembly


Ref	Part No.	Qty.	Description
1	112-0492	1	Screw-HH
2	112-0355	1	Link-Drag, RH
3	112-0346	1	Link-Drag, LH
4	112-0473	1	Screw-HH
5	112-0493	1	Nut-Jam
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0631	1	Screw-HH
14	112-0924	1	Washer-Flat
15	112-0925	1	Washer-Flat
16	112-3734	1	Cap-Wheel, Steering
17	112-0881	1	Spacer-Shoulder
18	112-5804	1	Shaft-Steering
19	112-0929	1	Bushing
20	112-0930	1	Bearing-Flange, Hex
21	112-0547	1	RH Axle ASM
22	112-0562	1	LH Axle ASM
23	112-0323	1	Cap
24	112-0519	1	Pin-Cotter

Ref	Part No.	Qty.	Description
25	112-5971	1	Axle-Pivot, Front
26	112-5972	1	Washer-Flat
27	112-0486	1	Bolt-Shoulder
28	112-5973	1	Wheel-Steering, Softgrip

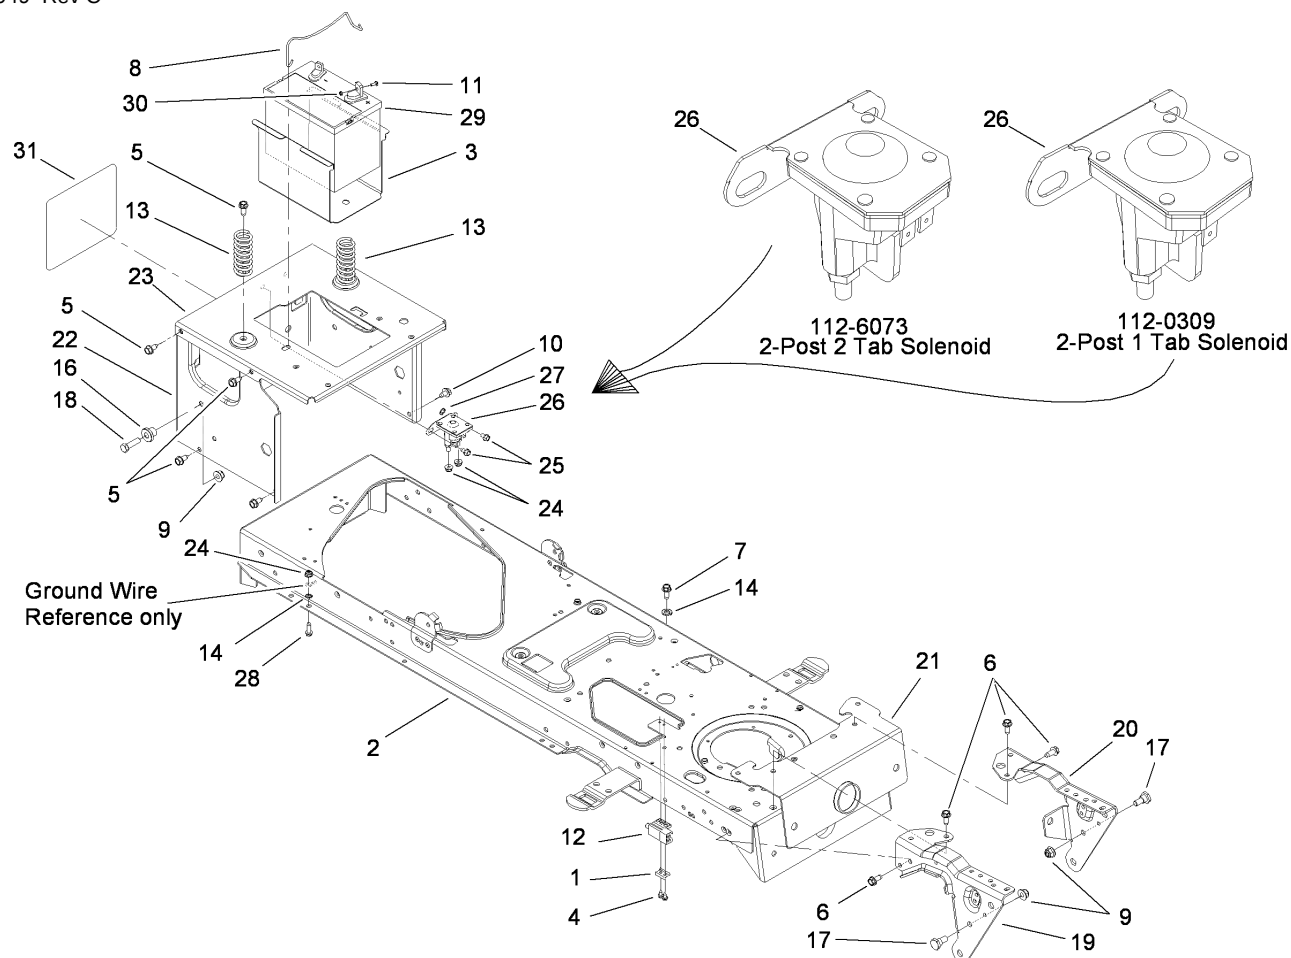 


Frame and Battery Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch	26	112-0309	1	Solenoid-12V, 2 Post 1 Tab
2	112-5974	1	Lower Frame ASM	26	112-6073	1	Solenoid-12V, 2 Post 2 Tab
3	112-0570	1	Tray-Battery	27	112-0703	1	Washer-Lock, External
4	112-0651	1	Screw-HH, TAP	28	112-0587	1	Screw-HH, TAP
5	112-5975	1	Screw-HH, TAP	29	112-0425	1	Battery-245, Cca (Dry Flat Top)
6	112-0395	1	Screw-HWH	30	112-5978	1	Nut-Sems
7	112-0659	1	Screw-HWH	31	112-1284	1	Decal-Toro
8	112-0581	1	Rod-Holddown, Battery				
9	112-0668	1	Nut-Lock, Flange				
10	112-0676	1	Screw-TAP				
11	112-1070	1	Bolt-Carriage				
12	112-0455	1	Switch-Interlock				
13	112-0501	1	Spring-Compression				
14	112-0703	1	Washer-Lock, External				
16	112-0661	1	Spacer-Shoulder				
17	112-0565	1	Bolt-Shoulder				
18	112-0557	1	Screw-HH				
19	112-0620	1	Bracket-Pivot, Support				
20	112-0610	1	Bracket-Pivot, Support				
21	112-5977	1	Bracket-Pivot, Bar				
22	112-0728	1	Frame-Upper				
23	112-0647	1	Bracket-Frame, Seat				
24	112-0636	1	Nut-Lock, Flange				
25	112-0524	1	Screw-HWHTF				

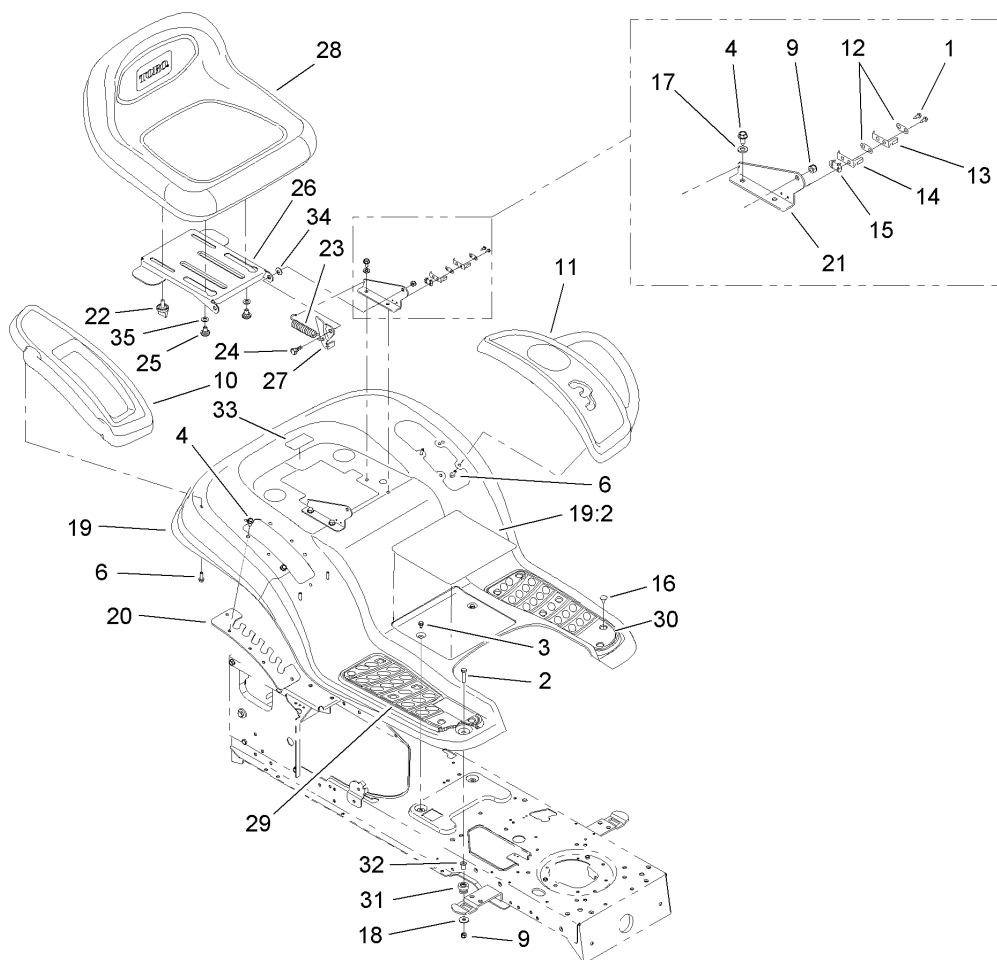 

Seat and Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0626	1	Screw-HWHTF	27	112-0646	1	Bracket-Lift, LH
2	112-0373	1	Screw-HH	28	112-0363	1	Seat-Back, Medium
3	112-0524	1	Screw-HWHTF	29	112-0540	1	Pad-Foot, RH
4	112-0556	1	Screw-HWH	30	112-0545	1	Pad-Foot, LH
6	112-0509	1	Screw-HH, TAP	31	112-3732	1	Grommet
9	112-0650	1	Nut-Lock, Flange	32	112-3733	1	Spacer
10	112-0471	1	Cover-Fender, RH	33	112-1260	1	Decal-Service (Toro Hotline)
11	112-0470	1	Cover-Fender, LH	34	112-5979	1	Washer-Bell
12	112-0635	1	Plate-Insulator	35	112-5980	1	Washer-Flat
13	112-0529	1	Switch-Spring				
14	112-0532	1	Switch-Spring, Inner				
15	112-0637	1	Plate-Boss, Insulator				
16	112-0549	1	Clip-Ratchet, Fastener				
17	112-0517	1	Washer-Lock, External				
18	112-0582	1	Washer-Flat				
19	112-5863	1	Fender And Decal ASM				
19:2	112-3706	1	Decal-Slope				
20	112-0629	1	Bracket-Adjusting, Lift				
21	112-0905	1	Bracket-Mount, Seat				
22	112-0409	1	Knob				
23	112-0616	1	Spring-Extension				
24	112-0575	1	Bolt-Shoulder				
25	112-0554	1	Bolt-Shoulder				
26	112-0593	1	Bracket-Seat				

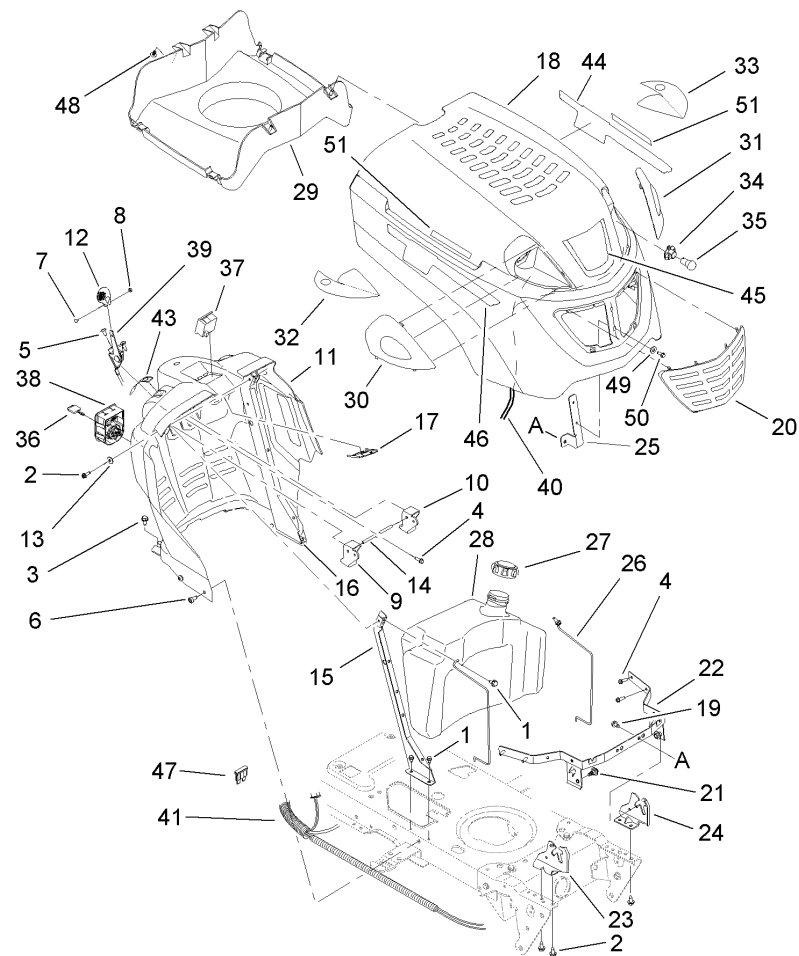 

Fuel Tank and Hood Assembly

Ref	Part No.	Qty.	Description
1	112-0524	1	Screw-HWHTF
2	112-0587	1	Screw-HH, TAP
3	112-5981	1	Screw-HH, TAP
4	112-0509	1	Screw-HH, TAP
5	112-0550	1	Screw-TAP
6	112-0563	1	Screw-TAP
7	112-0478	1	Screw-PTH
8	112-0515	1	Nut-Hex
9	112-0526	1	Lever-Cruise
10	112-0580	1	Lever-Brake
11	112-5982	1	Dash
12	112-0474	1	Knob-Control
13	112-0485	1	Washer-Spring
14	112-0604	1	Rod-Lever, Bent
15	112-5983	1	Support-Dash, RH
16	112-5984	1	Support-Dash, LH
17	112-5809	1	Bracket-PTO
18	112-0444	1	Hood
19	112-0906	1	Screw-HWHTF
20	112-0381	1	Grill
21	112-0597	1	Bolt-Shoulder
22	112-5985	1	Bracket-Pivot
23	112-0727	1	Bracket-Pivot, Hood (RH)
24	112-0726	1	Bracket-Pivot, Hood (LH)


Ref	Part No.	Qty.	Description
25	112-5986	1	Bracket-Support, Hood
26	112-0678	1	Rod-Support
27	112-0321	1	Cap-Fuel
28	112-5987	1	Fuel-Tank, 3 Gallon
29	112-5802	1	Plenum-Hood
30	112-0447	1	Lens-RH
31	112-0446	1	Lens-LH
32	112-5810	1	Reflector-RH
33	112-5811	1	Reflector-LH
34	112-0408	1	Socket-Headlight
35	112-0402	1	Lamp-12V, Miniature
36	112-0312	1	Key-Ignition
37	112-0336	1	Meter-Indicator, Systems
38	112-0865	1	Module-Switch, Ignition
39	112-0489	1	Cable-Throttle And Choke
40	112-0480	1	Harness-Headlight
41	112-0595	1	Harness-Wire, 2 Post 1 Tab (Solenoid)
41	112-6074	1	Harness-Wire, 2 Post 2 Tab (Solenoid)
43	112-3702	1	Decal-Throttle
44	112-5952	1	Decal-Hood, Left Side
45	112-3716	1	Decal-Hood
46	112-5953	1	Decal-Hood, Right Side

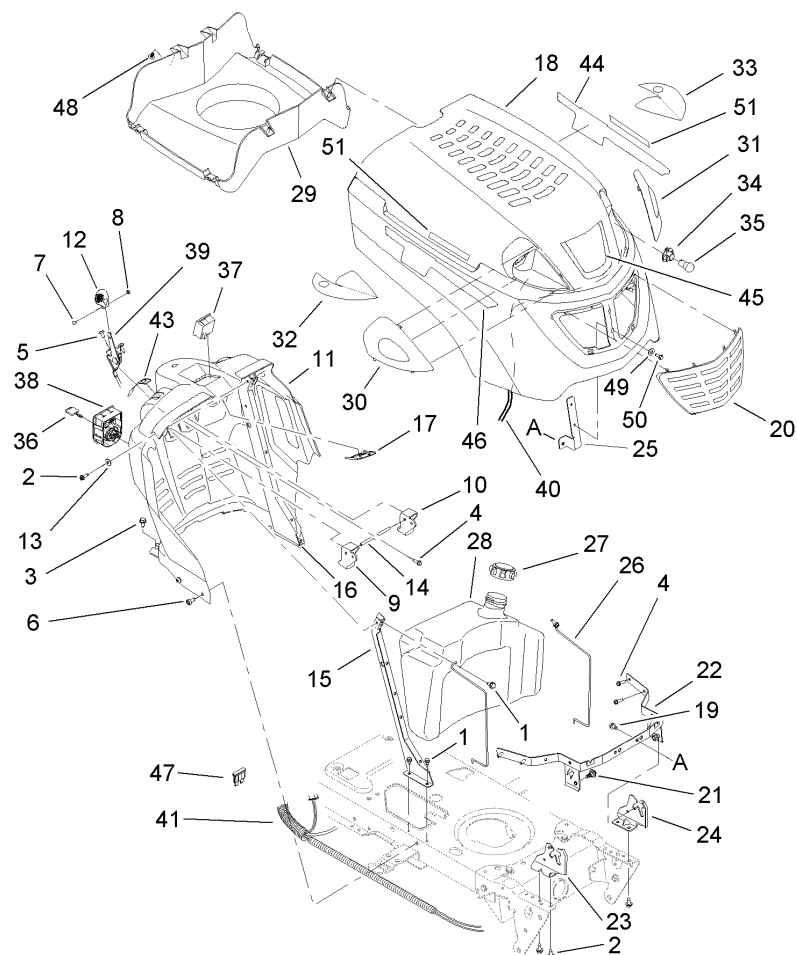 

Fuel Tank and Hood Assembly (continued)

Ref	Part No.	Qty.	Description
47	112-5943	1	Fuse-20 Amp
48	112-5988	1	Clip-Ratchet
49	112-5989	1	Washer-Flat
50	112-0587	1	Screw-HH, TAP
51	112-5954	1	Decal-Panel, Side

 Transmission, Belt and Pulley Assembly

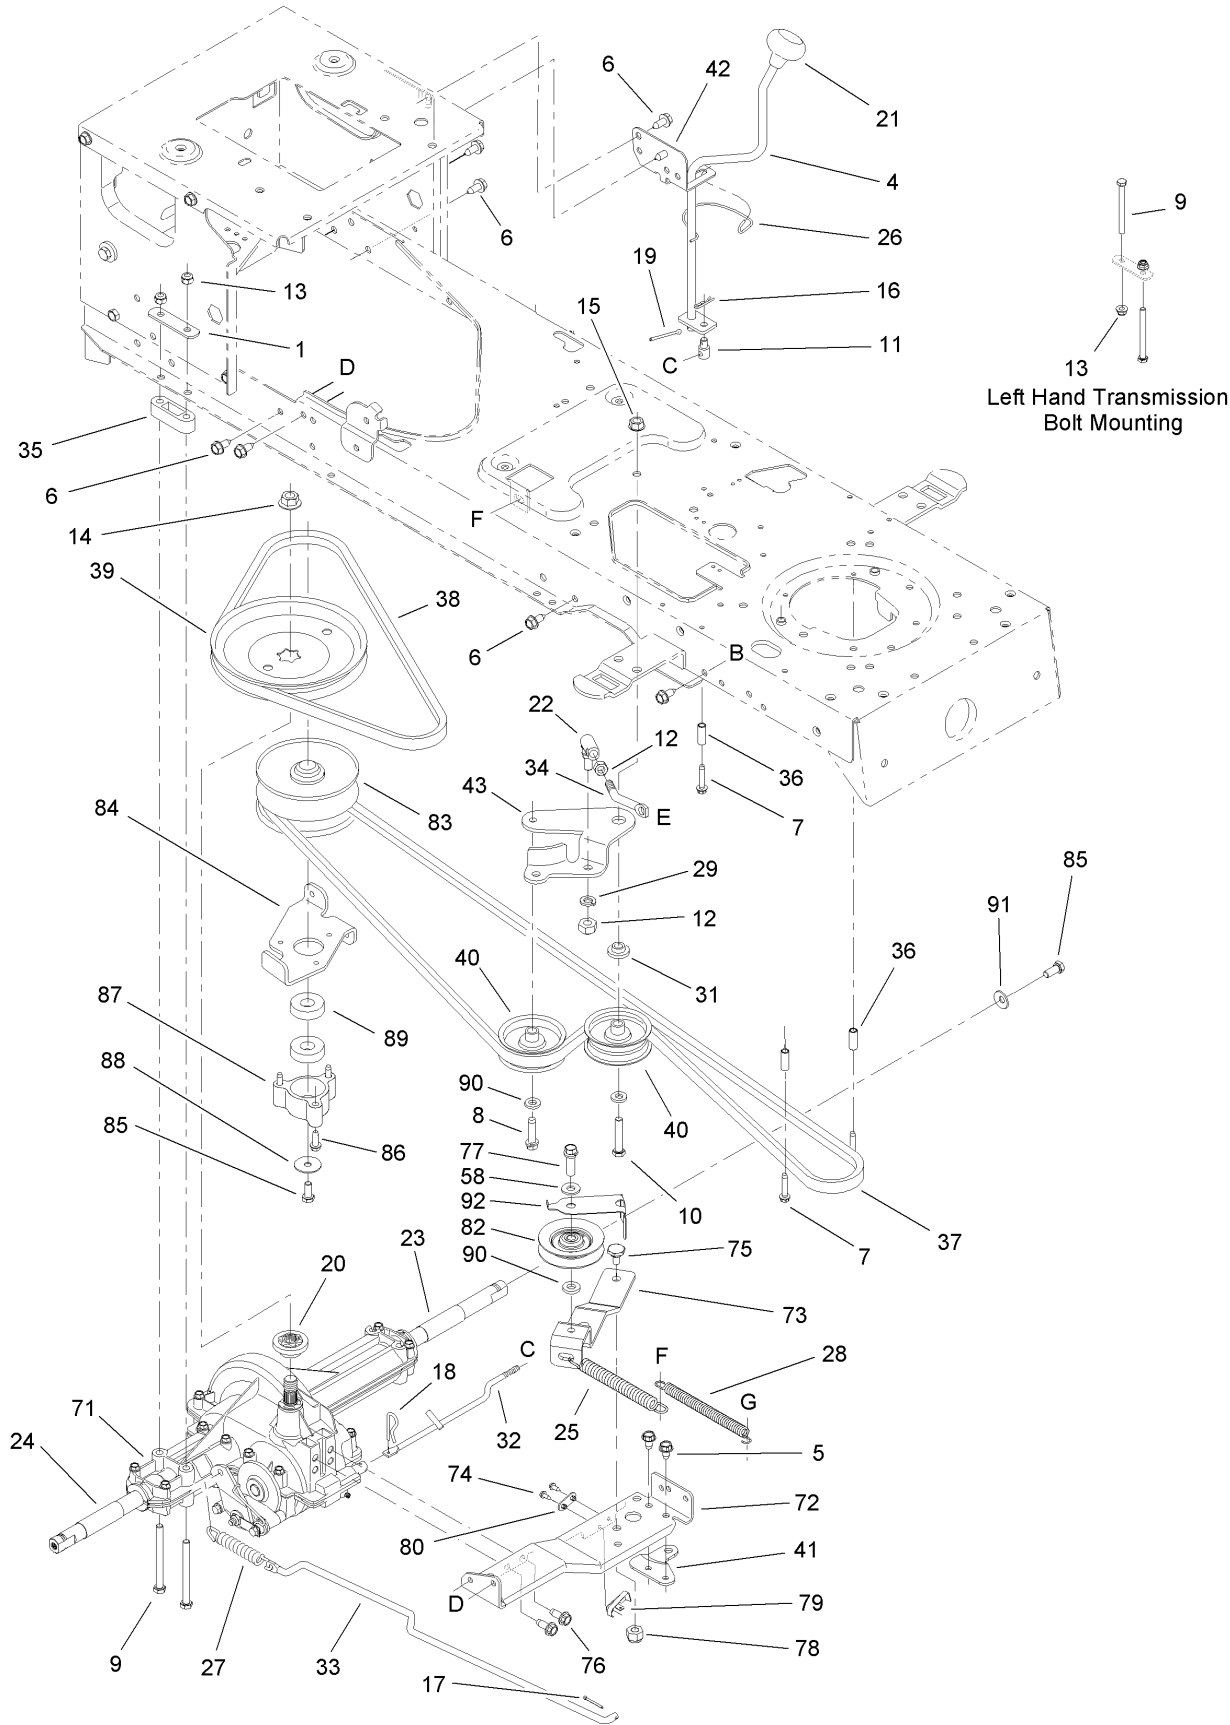

Transmission, Belt and Pulley Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
4	112-0627	1	Shift Lever ASM
5	112-0676	1	Screw-TAP
6	112-5975	1	Screw-HH, TAP
7	112-0603	1	Screw-HH
8	112-0469	1	Screw-HH, TAP
9	112-0667	1	Screw-HH
10	112-0421	1	Screw-HH
11	112-0592	1	Ferrule-Adj
12	112-0343	1	Nut-Hex
13	112-0650	1	Nut-Lock, Flange
14	112-0451	1	Nut-Flange
15	112-0385	1	Nut-Lock, Flange
16	112-0459	1	Pin-Cotter
17	112-0568	1	Pin-Cotter
18	112-0639	1	Pin-Hair
19	112-0412	1	Pin-Cotter
20	112-0450	1	Hub-Pulley
21	112-0514	1	Knob-Shift
22	112-0306	1	Ball Joint ASM
23	112-0670	1	Sleeve
24	112-0683	1	Sleeve
25	112-5991	1	Spring-Extension
26	112-0357	1	Clip-Spring, Shifter
27	112-0350	1	Spring-Extension
28	112-0348	1	Spring-Extension
29	112-0415	1	Washer-Lock
31	112-0345	1	Spacer-Shoulder
32	112-5992	1	Rod-Shift
33	112-0655	1	Rod-Brake
34	112-0538	1	Rod-Adjustment, Idler
35	112-0673	1	Spacer-Transaxle
36	112-0644	1	Spacer
37	112-0301	1	Belt-Drive, Variable Speed
38	112-0305	1	Belt-Drive, Transmission
39	112-0379	1	Pulley-V (W/Hub)
40	112-3687	1	Pulley-Idler, Flat
41	112-5813	1	Bracket-Shift
42	112-0638	1	Bracket-Shift
43	112-0525	1	Bracket-Idler, Center Double
58	112-0541	1	Washer-Flat
71	112-0368	1	Single Speed Transmission ASM
72	112-0552	1	Bracket-Torque
73	112-0434	1	Bracket-Idler
74	112-0626	1	Screw-HWHTF
75	112-5993	1	Screw-HH
76	112-0556	1	Screw-HWH
77	112-0469	1	Screw-HH, TAP
78	112-5994	1	Nut-Lock, Hex
79	112-0602	1	Switch-Spring, Short
80	112-0625	1	Plate-Insulator
82	112-0892	1	Pulley-Idler, V-Type


Ref	Part No.	Qty.	Description
83	112-0364	1	Variable Speed Pulley ASM
84	112-5995	1	Bracket-Pulley
85	112-0551	1	Screw-HH
86	112-0587	1	Screw-HH, TAP
87	112-5996	1	Cup-Bearing
88	112-0500	1	Washer-Flat
89	112-0423	1	Bearing-Ball
90	112-0544	1	Washer-Flat
91	112-0435	1	Washer-Bell
92	112-5883	1	Guide-Belt, Traction

Single Speed Transmission Assembly No. 112-0368



Single Speed Transmission Assembly No. 112-0368


Ref	Part No.	Qty.	Description				
1	112-0819	1	Ring-Wire				
2	112-0756	1	Ring-E				
3	112-0745	1	Washer-Flat				
3	112-0748	1	Washer-Flat				
3	112-0750	1	Washer-Flat				
4	112-0769	1	Washer-Thrust				
5	112-0839	1	Screw-TAP				
6	112-0833	1	Housing-Upper				
7	112-0826	1	Shaft-Input				
8	112-0808	1	Bearing-Needle				
9	112-0807	1	Pinion-Input, 14T				
10	112-0809	1	Ring-Snap				
11	112-5944	1	Sleeve-Bearing				
12	112-0800	1	Seal				
13	112-0823	1	Differential ASM				
14	112-0794	1	Bearing-Flange				
15	112-0796	1	Gear-Bevel, 42T				
16	112-0832	1	Brake ASM				
17	112-0840	1	Collar-Clutch				
18	112-5945	1	Washer-Flat				
19	112-0841	1	Shaft-Drive				
20	112-0755	1	Washer-Thrust				
21	112-0795	1	Bearing-Flange				
22	112-0806	1	Shift Fork ASM				
23	112-0799	1	Ball-Detent				
24	112-0801	1	Spring-Detent				
25	112-0834	1	Housing-Lower				
26	112-0741	1	Puck-Brake				
27	112-0817	1	Disc-Brake				
28	112-0698	1	Screw-HWH				

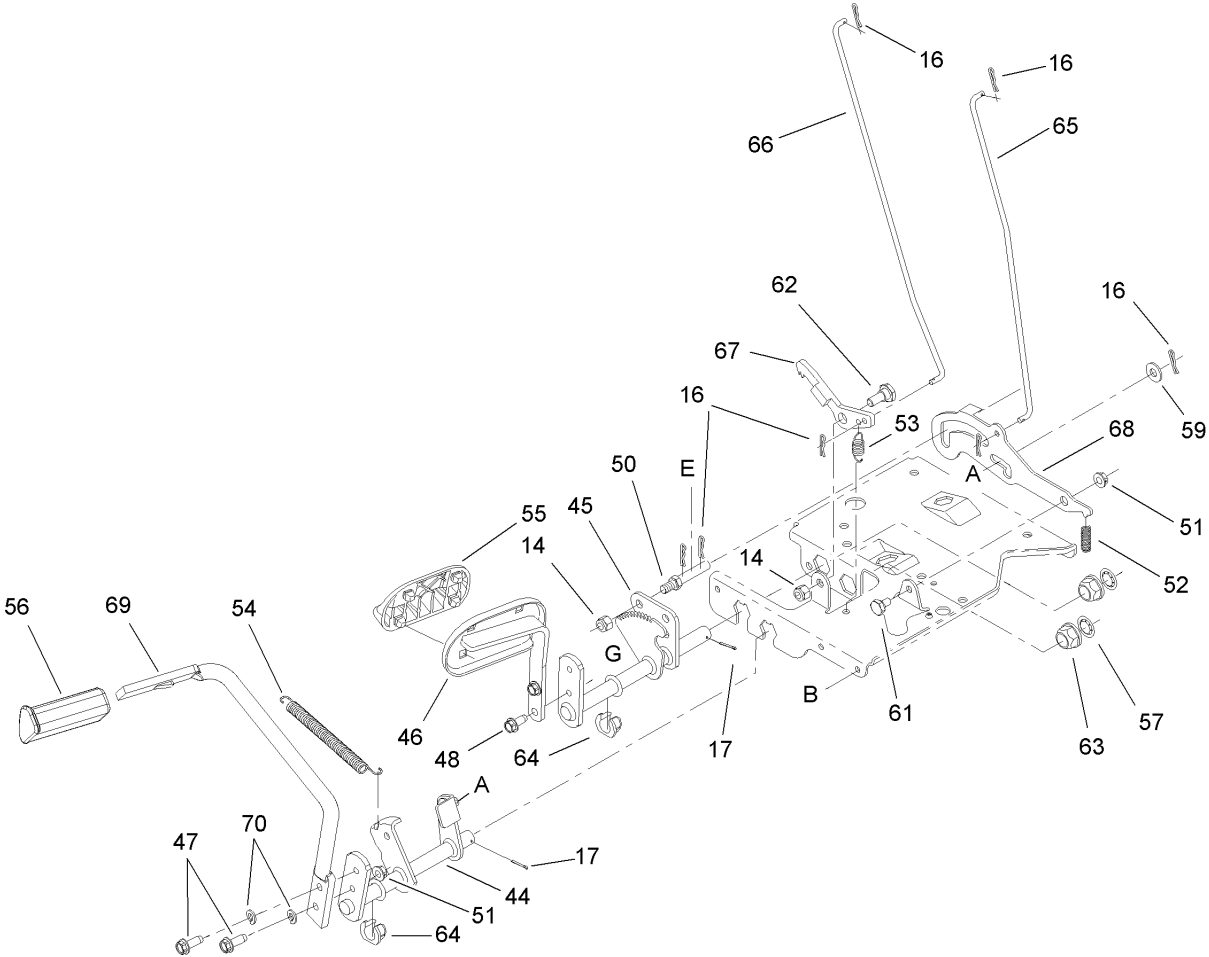 

Brake and Traction Pedal Assembly

Ref	Part No.	Qty.	Description
14	112-0668	1	Nut-Lock, Flange
16	112-5997	1	Pin-Cotter
17	112-0568	1	Pin-Cotter
44	112-0648	1	Brake Control ASM
45	112-5998	1	Speed Control ASM
46	112-0680	1	Pedal ASM
47	112-5999	1	Screw-HWHTF
48	112-0395	1	Screw-HWH
50	112-0599	1	Pin
51	112-6000	1	Nut-Lock, Flange
52	112-0506	1	Spring
53	112-0510	1	Spring-Extension
54	112-0348	1	Spring-Extension
55	112-0543	1	Pad-Pedal
56	112-6001	1	Pad-Brake
57	112-0339	1	Washer-Flat
59	112-6002	1	Washer-Flat
61	112-5817	1	Bolt-Shoulder
62	112-0442	1	Bolt-Shoulder
63	112-0347	1	Bearing-Flange
64	112-0387	1	Bearing-Flange, Hex (Split)
65	112-6003	1	Rod-Brake, Lock Control
66	112-0662	1	Rod-Control, Cruise
67	112-6004	1	Latch-Cruise

Ref	Part No.	Qty.	Description
68	112-5816	1	Bracket-Lock Out
69	112-6005	1	Pedal-Brake
70	112-6006	1	Washer-Lock

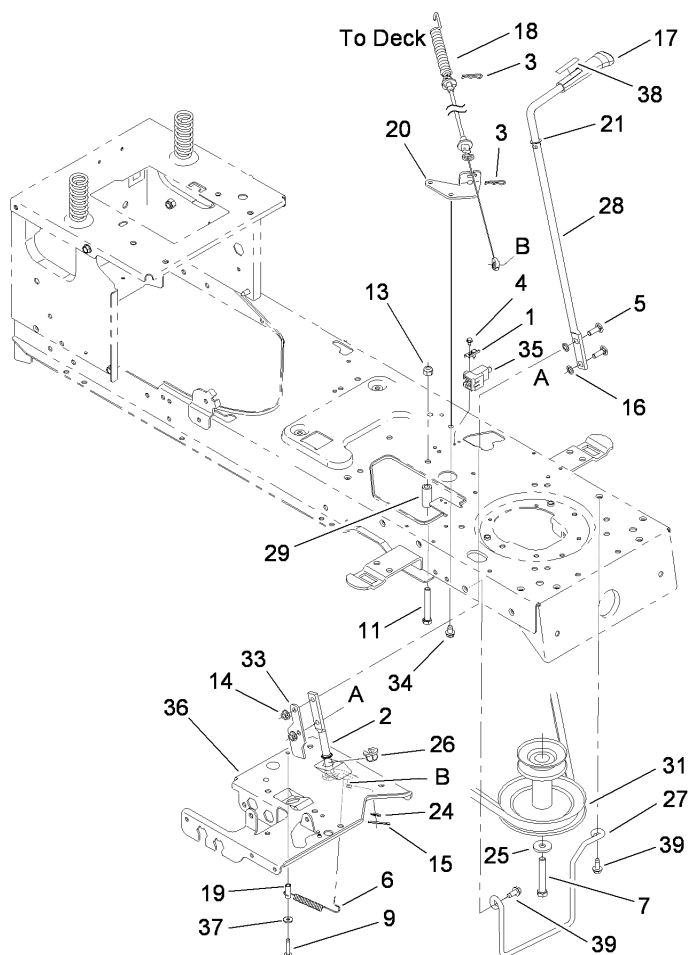 


PTO Engage Assembly

Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-6007	1	Lever-Engage, PTO
3	112-0398	1	Pin-Click
4	112-0651	1	Screw-HH, TAP
5	112-0598	1	Bolt-CARR
6	112-0567	1	Spring-Extension
7	112-6008	1	Screw-HH
9	112-0843	1	Screw-HWH
11	112-6009	1	Screw-HH
13	112-0668	1	Nut-Lock, Flange
14	112-0511	1	Nut-Lock, Flange
15	112-6010	1	Pin-Cotter
16	112-0645	1	Nut-Push
17	112-6011	1	Knob-PTO
18	112-0504	1	Cable-Engage, Deck
19	112-0644	1	Spacer
20	112-0649	1	Bracket-Cable
21	112-0498	1	Washer-Flat
24	112-0601	1	Washer-Flat
25	112-0380	1	Washer-Flat
26	112-0384	1	Bearing-Flange, Hex (Split)
27	112-0609	1	Rod-Keeper, Belt
28	112-0393	1	Handle-Engage, Deck
29	112-0433	1	Spacer

Ref	Part No.	Qty.	Description
31	112-0329	1	Pulley-Engine
33	112-0516	1	Bracket-Stop
34	112-0676	1	Screw-TAP
35	112-0455	1	Switch-Interlock
36	112-0681	1	Bracket-Support, Steering
37	112-3695	1	Washer-Flat
38	112-3704	1	Decal-Handle, PTO
39	112-0395	1	Screw-HWH

 
Deck Assembly

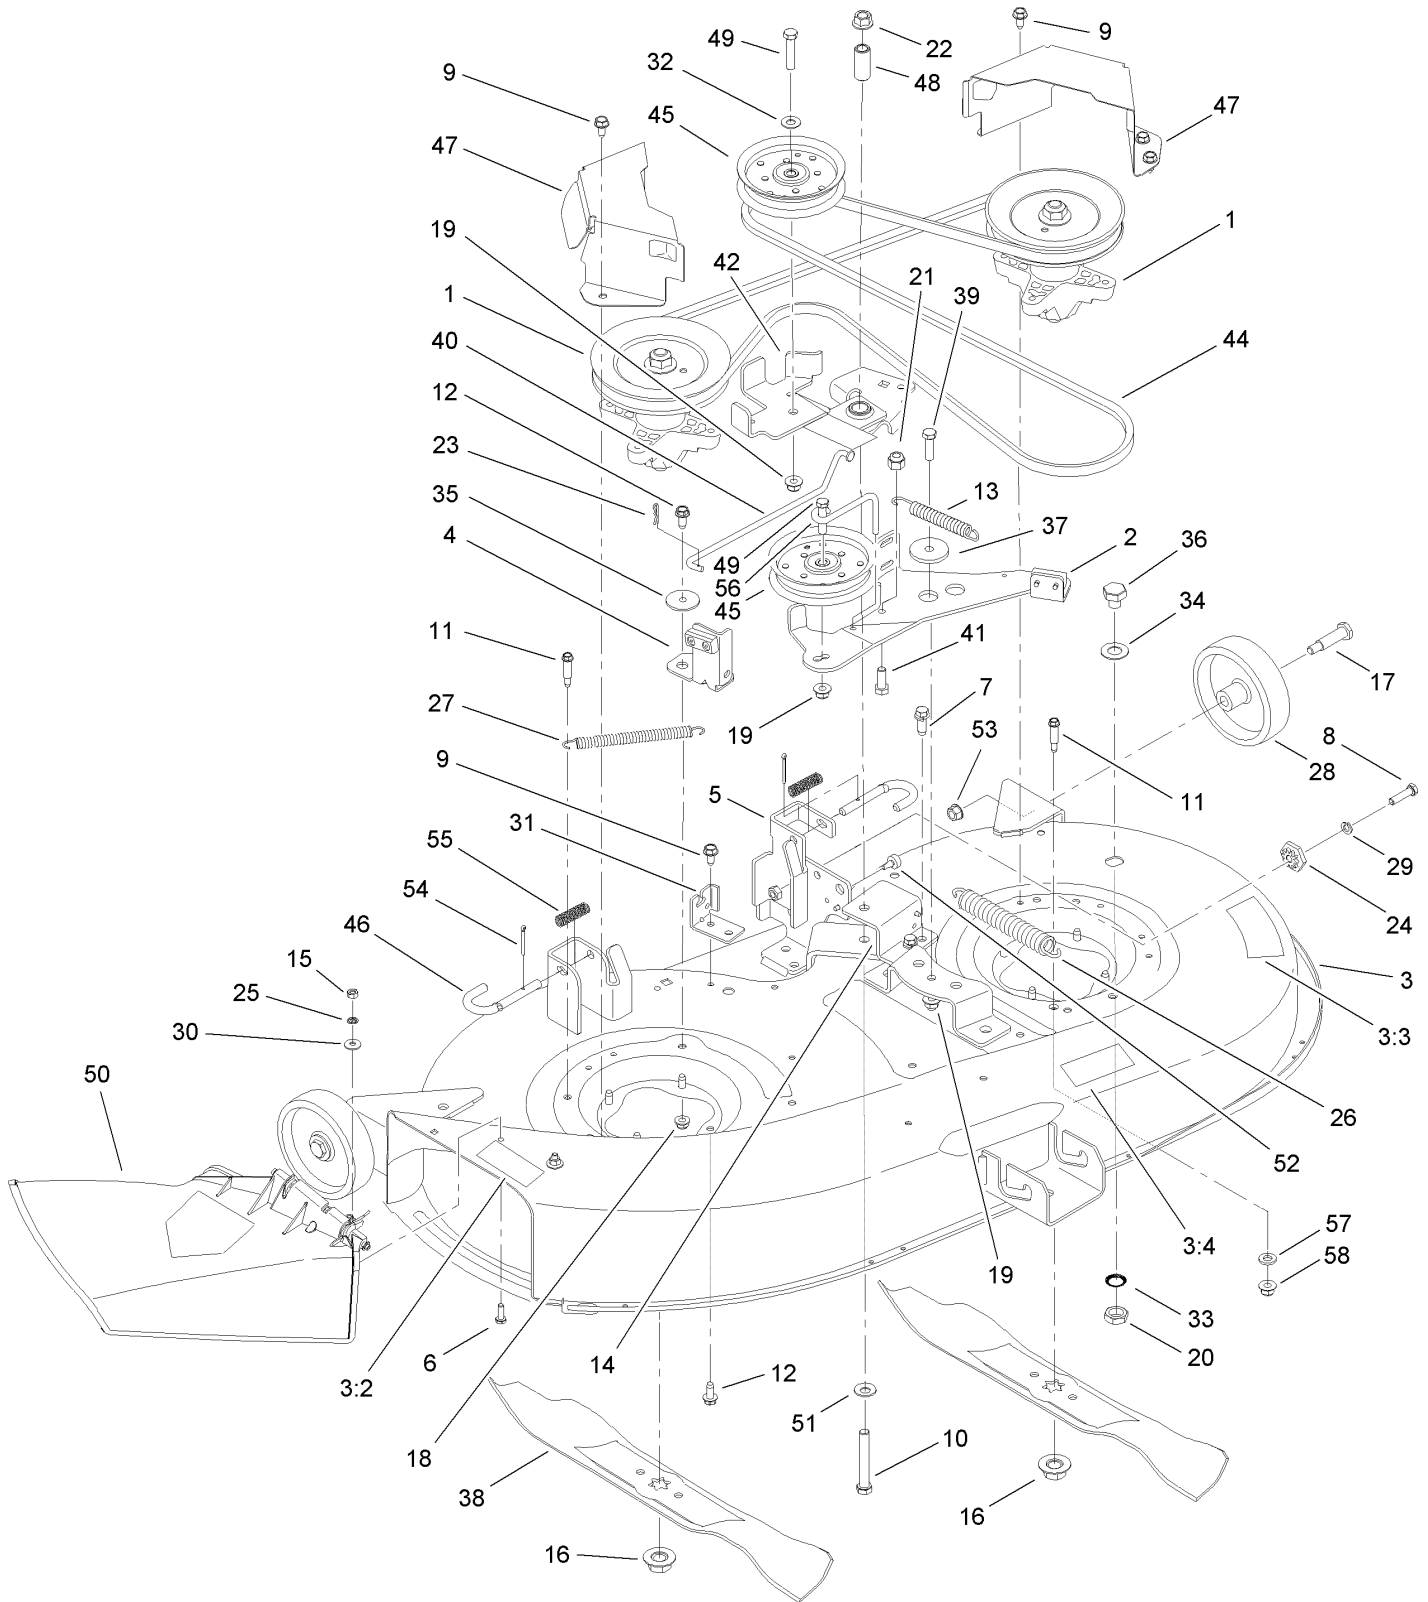

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-0460	1	Spindle ASM
2	112-0606	1	Deck Brake ASM
3	112-5857	1	Deck And Decal ASM
3:2	112-1267	1	Decal-Danger
3:3	112-1265	1	Decal-Danger
3:4	112-1270	1	Decal-Routing, Belt
4	112-3742	1	Brake ASM
5	112-0413	1	LH Hanger Bracket ASM
6	112-0499	1	Screw-HH
7	112-0663	1	Screw-TAP
8	112-0373	1	Screw-HH
9	112-0472	1	Screw-HH, TAP
10	112-3745	1	Screw-HH
11	112-0843	1	Screw-HWH
12	112-0395	1	Screw-HWH
13	112-3746	1	Spring-Extension
14	112-5801	1	Bracket-Support, Pivot
15	112-0522	1	Nut-Hex
16	112-0330	1	Nut-Flange, Hex
17	112-0334	1	Bolt-Shoulder
18	112-0650	1	Nut-Lock, Flange
19	112-0668	1	Nut-Lock, Flange
20	112-0351	1	Nut-Hex
21	112-5821	1	Nut-Lock, Hex
22	112-0859	1	Nut-Lock, Flange
23	112-0459	1	Pin-Cotter
24	112-0327	1	Gear-Adjustment, Deck
25	112-0623	1	Retainer-Bolt
26	112-0349	1	Spring
27	112-0528	1	Spring-Extension
28	112-0337	1	Wheel-Deck, Rear
29	112-0366	1	Washer-Lock
30	112-0485	1	Washer-Spring
31	112-0718	1	Bracket-Cable, Deck
32	112-0572	1	Washer-Flat
33	112-0922	1	Washer-Lock
34	112-0879	1	Nozzle-Water, Deck
35	112-3747	1	Spacer-Shoulder
36	112-0916	1	Adapter-Nozzle, Water
37	112-0584	1	Spacer-Shoulder
38	112-0315	1	Blade-21.23 Inch
39	112-0557	1	Screw-HH
40	112-3748	1	Rod-Brake
41	112-0855	1	Screw-HH
42	112-3743	1	Idler ASM
44	112-5800	1	Belt-V Type
45	112-0314	1	Pulley-Idler
46	112-0436	1	Pin-Handle, Deck Release
47	112-0630	1	Cover-Belt
48	112-3749	1	Spacer
49	112-0513	1	Screw-HH
50	112-0353	1	Discharge Chute ASM

Ref	Part No.	Qty.	Description
51	112-0481	1	Washer-Bell
52	112-1016	1	Bumper
53	112-0385	1	Nut-Lock, Flange
54	112-0412	1	Pin-Cotter
55	112-0406	1	Spring-Compression
56	112-5879	1	Rod-Keeper, Belt
57	112-5919	1	Washer-Flat
58	112-0636	1	Nut-Lock, Flange

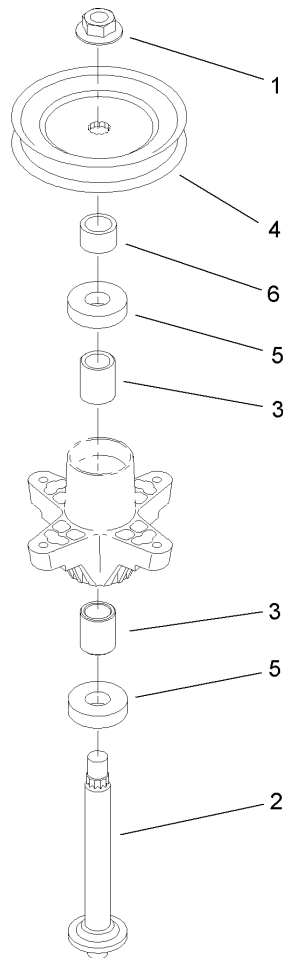 


Spindle Assembly No. 112-0460

Ref	Part No.	Qty.	Description				
1	112-0330	1	Nut-Flange, Hex				
2	112-0884	1	Shaft-Spindle, Blade (Star)				
3	112-0389	1	Spacer				
4	112-0613	1	Pulley-Deck				
5	112-0377	1	Bearing-Ball				
6	112-5924	1	Spacer				

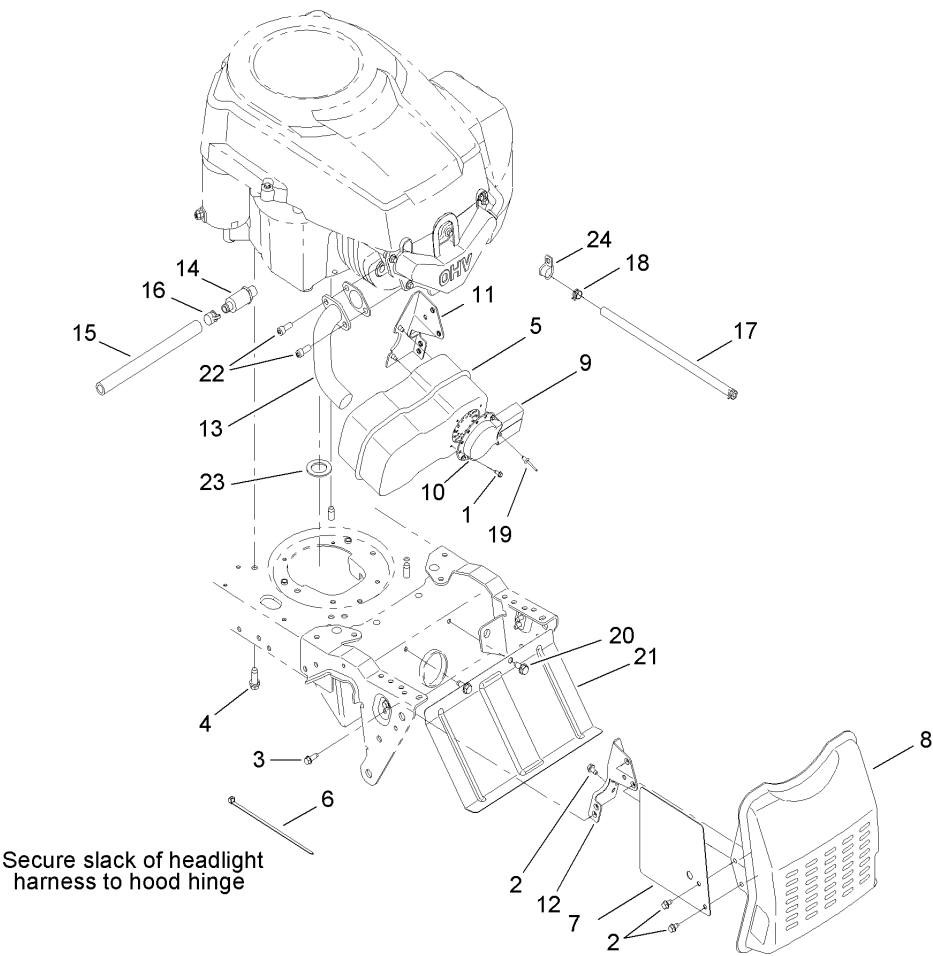 


Muffler Assembly

Ref	Part No.	Qty.	Description				
1	112-0626	1	Screw-HWHTF				
2	112-0524	1	Screw-HWHTF				
3	112-0587	1	Screw-HH, TAP				
4	112-0663	1	Screw-TAP				
5	112-0361	1	Muffler-Inlet, Single				
6	112-0527	1	Tie-Cable				
7	112-5827	1	Shield-Heat				
8	112-6013	1	Muffler Heat Shield ASM				
9	112-0730	1	Deflector-Muffler, Long				
10	112-0453	1	Deflector-Muffler				
11	112-0467	1	Bracket-Muffler, LH				
12	112-0466	1	Bracket-Muffler, RH				
13	112-0430	1	Pipe-Exhaust				
14	112-0388	1	Drain-Oil				
15	112-0553	1	Hose-Drain				
16	112-0397	1	Cap-Drain, Oil				
17	112-0720	1	Hose-Fuel				
18	112-0573	1	Clamp-Hose				
19	112-3741	1	Rivet-Pop				
20	112-0395	1	Screw-HWH				
21	112-6014	1	Shield-Heat, Tractor				
22	112-6012	1	Screw Socket Head				
23	112-0420	1	Washer-Flat				
24	112-0463	1	Clamp				

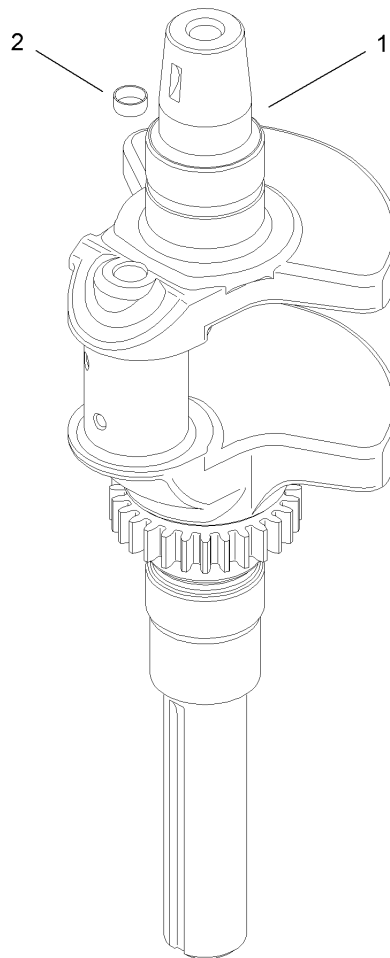


Crankshaft Assembly Kohler SV720-0011

Ref	Part No.	Qty.	Description
❸1	32 014 04S	1	Crankshaft (Includes 2)
❸2	52 139 09S	1	Plug-Cup

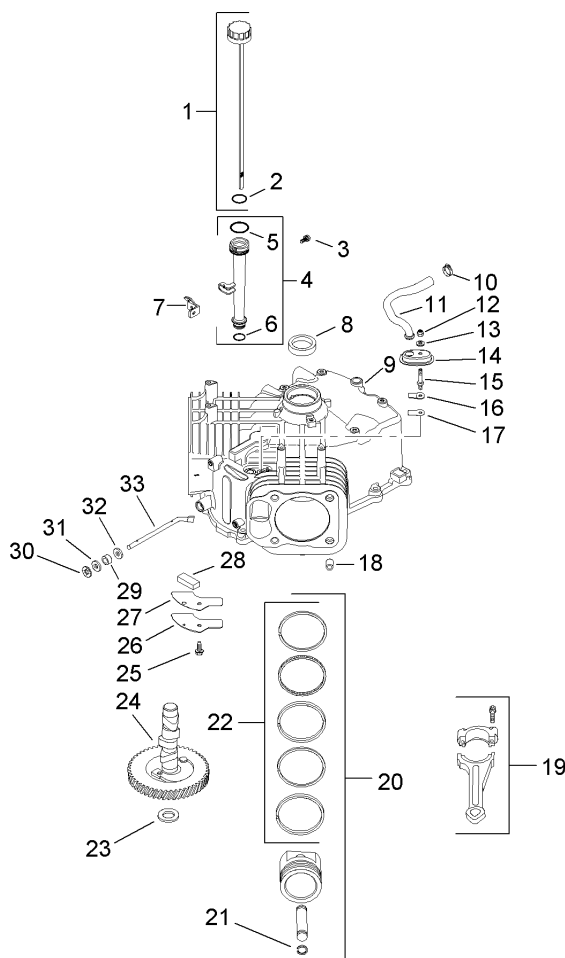

Crankcase Assembly Kohler SV720-0011


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	32 038 01S	1	Dipstick Kit (Includes 2)	❶23	12 422 10S	1	Shim-Camshaft (Yellow)
❶2	12 153 03S	1	O-Ring	❶23	12 422 09S	1	Shim-Camshaft (Red)
❶3	M545016S	1	Screw-Hex Flange, Thread Forming (M5X0.8X16)	❶23	12 422 13S	1	Shim-Camshaft (Black)
❶4	12 123 04S	1	Tube-Oil Fill (Includes 5-6)	❶23	12 422 07S	1	Shim-Camshaft (White)
❶5	12 153 02S	1	O Ring-Upper Oil Fill Tube	❶23	12 422 08S	1	Shim-Camshaft (Blue)
❶6	12 153 01S	1	O Ring-Lower Oil Fill Tube	❶23	12 422 11S	1	Shim-Camshaft (Green)
❶7	24 126 19S	1	Bracket-Oil Fill Tube	❶23	12 422 12S	1	Shim-Camshaft (Gray)
❶8	24 032 01S	1	Seal-Oil	❶24	32 012 01S	1	Camshaft Kit
❶❹9		1	Crankcase (Use: Short Block 32 522 03)	❶25	M645016S	1	Screw-Hex Flange, Thread Forming (M6X1.0X16)
❶10	25 237 14S	1	Clamp-Hose	❶26	32 096 04S	1	Cover-Breather
❶11	32 326 04S	1	Hose-Breather	❶27	32 041 01S	1	Gasket-Breather Cover
❶12	M547050S	1	Nut-Lock, Hex (M5X0.8)	❶28	32 050 01S	1	Filter-Breather
❶13	32 468 01S	1	Washer-Sealing	❶29	28 032 09S	1	Seal-Governor Cross Shaft
❶14	32 081 02S	1	Housing-Breather	❶30	24 018 09S	1	Ring-Retainer
❶15	32 072 02S	1	Stud-Breather Cover	❶31	M931010S	1	Washer-Flat (8 Mm)
❶16	24 018 04S	1	Retainer-Breather Reed	❶32	24 468 15S	1	Washer-Flat (1/4)
❶17	24 402 05S	1	Reed-Breather	❶33	24 144 38S	1	Shaft-Governor Cross
❶18	24 380 16S	6	Pin-Locating				
❶19	24 067 13S	2	Rod-Connecting (Standard)				
❶20	32 874 06S	2	Piston W/Ring Set (Standard) (Includes 21-22)				
❶21	24 018 01S	4	Retainer-Piston Pin				
❶22	24 108 11S	2	Ring Set (Standard)				

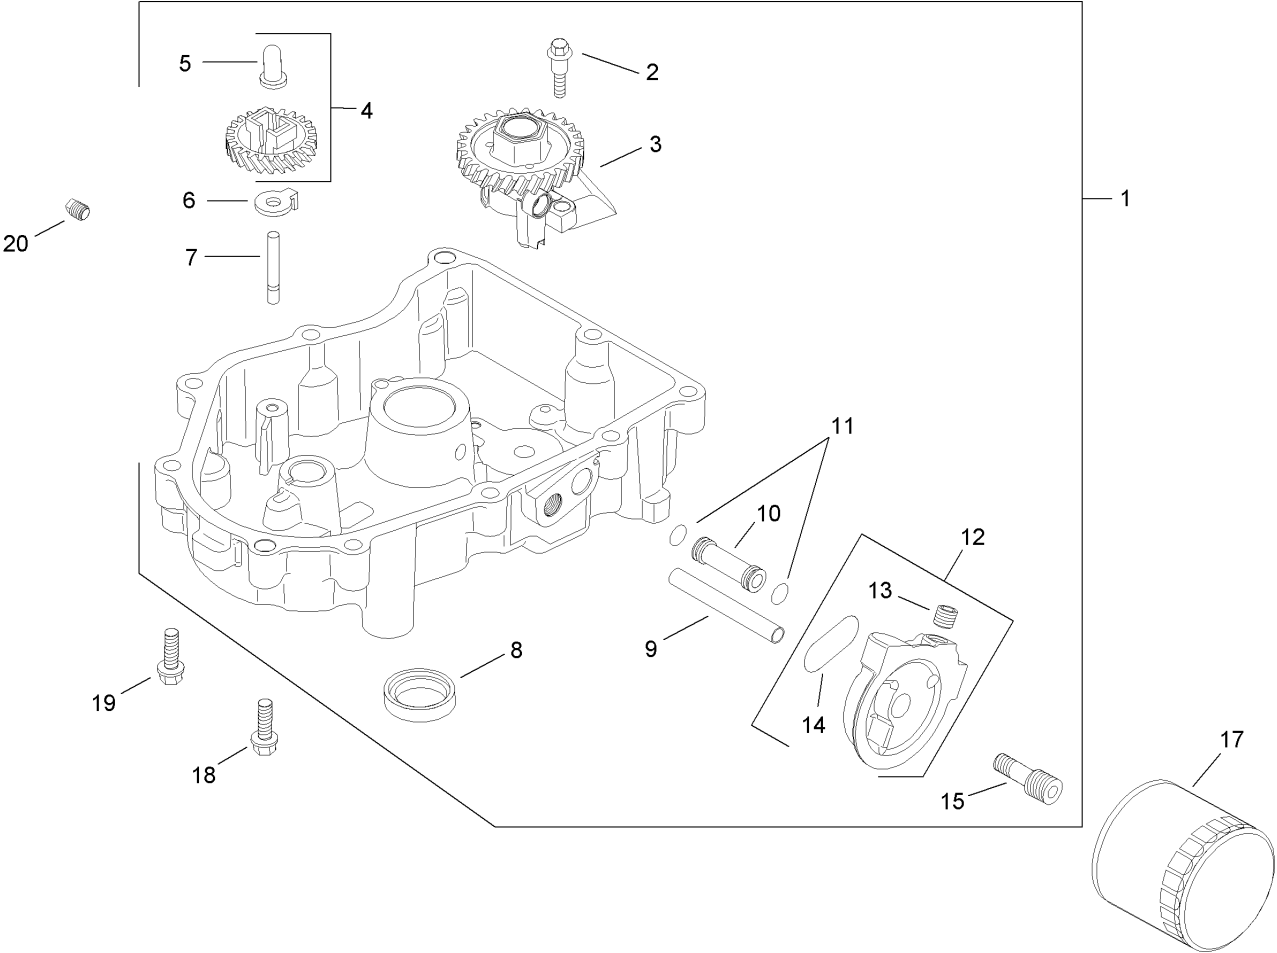

Oil Pan and Lubrication Assembly

Kohler SV720-0011


Ref	Part No.	Qty.	Description				
❶1	32 199 02S	1	Oil Pan ASM (Includes 2-15)				
❷2	32 086 01S	2	Screw-Hex Flange, Thread Forming (Shoulder)				
❸3	32 393 08S	1	Oil Pump ASM				
❹4	24 043 12S	1	Governor Gear Kit W/Pin (Includes 5)				
❺5	12 380 01S	1	Pin-Governor Regulating				
❻6	24 448 02S	1	Tab-Locking				
❼7	12 144 02S	1	Shaft-Governor Gear				
❽8	52 032 08S	1	Seal-Oil (PTO End)				
❾9	32 123 01S	1	Tube (Oil Feed Filter To Oil Pan)				
❿10	32 123 03S	1	Tube (Oil Feed Oil Pan To Filter)				
⓫11	24 153 01S	2	O Ring				
⓬12	32 029 07S	1	Adapter-Oil Filter (Includes 13-14)				
⓭13	25 139 60S	1	Plug-Hex, Countersunk (1/8)				
⓮14	32 153 02S	1	O Ring-Oil Filter Adapter				
⓯15	32 136 03S	1	Nipple-Oil Filter				
⓰17	98020	1	Filter-Oil				
⓱18	24 086 17S	1	Screw-Hex Flange (M8X1.25X45)				
⓲19	24 086 16S	9	Screw-Hex Flange (M8X1.25X45)				
⓳20	25 139 57S	1	Plug-Square Head, Solid (3/8)				

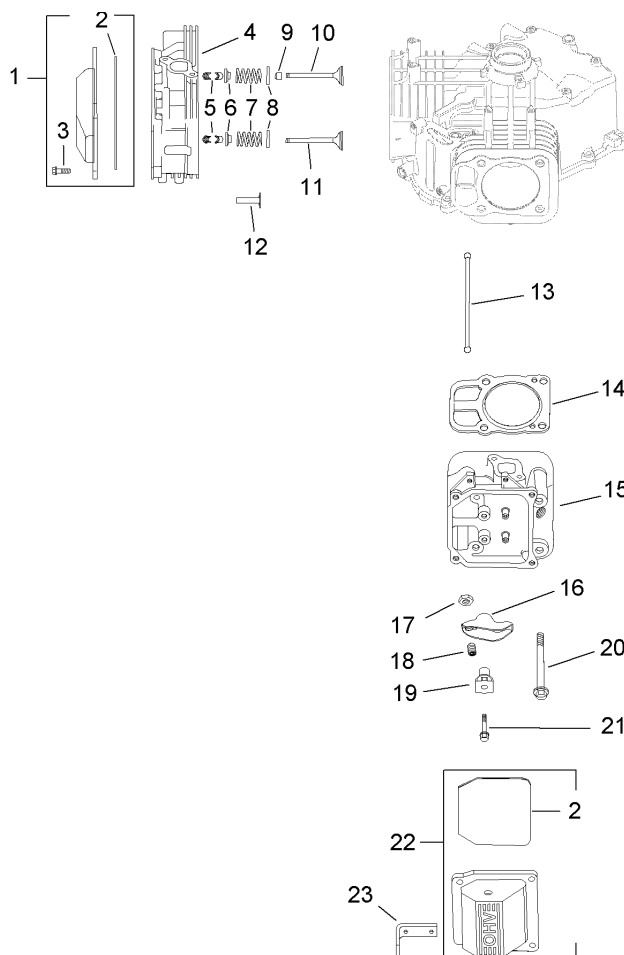 

Head, Valve and Breather Assembly Kohler SV720-0011


Ref	Part No.	Qty.	Description
❶1	24 755 141S	1	Plain Valve Cover Kit [qty. 4] (Includes 2-3)
❶2	24 153 28S	1	O Ring
❶3	M651030S	8	Screw-Hex Flange (M6X1.0X30)
❶4	32 318 01S	1	No. 1 Cylinder Head ASM
❶5	12 755 03S	8	Retainer Kit
❶6	12 173 01S	4	Cap-Valve Spring
❶7	24 089 02S	4	Spring-Valve
❶8	235011S	4	Retainer-Spring
❶9	66 032 05S	2	Seal-Valve Stem
❶10	24 017 01S	2	Valve-Intake (Standard)
❶10	24 017 02S	2	Valve-Intake (.25)
❶11	24 016 01S	2	Valve-Exhaust (Standard)
❶11	24 016 02S	2	Valve-Exhaust (.25)
❶12	32 019 01S	4	Tappet
❶13	32 411 02S	4	Rod-Push
❶14	24 841 03S	2	Cylinder Head Gasket Kit (Includes head Mounting Hardware And 24 041 49S, 24 153 27S)
❶15	32 318 02S	1	No. 2 Cylinder Head ASM
❶16	32 186 02S	4	Arm-Rocker
❶17	32 100 04S	4	Nut-Hex (M10X0.75)
❶18	32 086 03S	4	Screw-Set
❶19	32 599 01S	4	Pivot-Rocker Arm

Ref	Part No.	Qty.	Description
❶20	12 086 16S	8	Screw-Hex Flange (M10X1.5X90)
❶21	32 086 04S	4	Screw-Hex Flange (M6X1.0X45)
❶22	32 096 06S	1	Valve Cover Breather Kit (Includes 2)
❶23	24 445 01S	1	Strap-Lifting
❶❶24	24 041 49S	1	Gasket-Exhaust Manifold
❶❶25	24 153 27S	1	O Ring-Intake Port

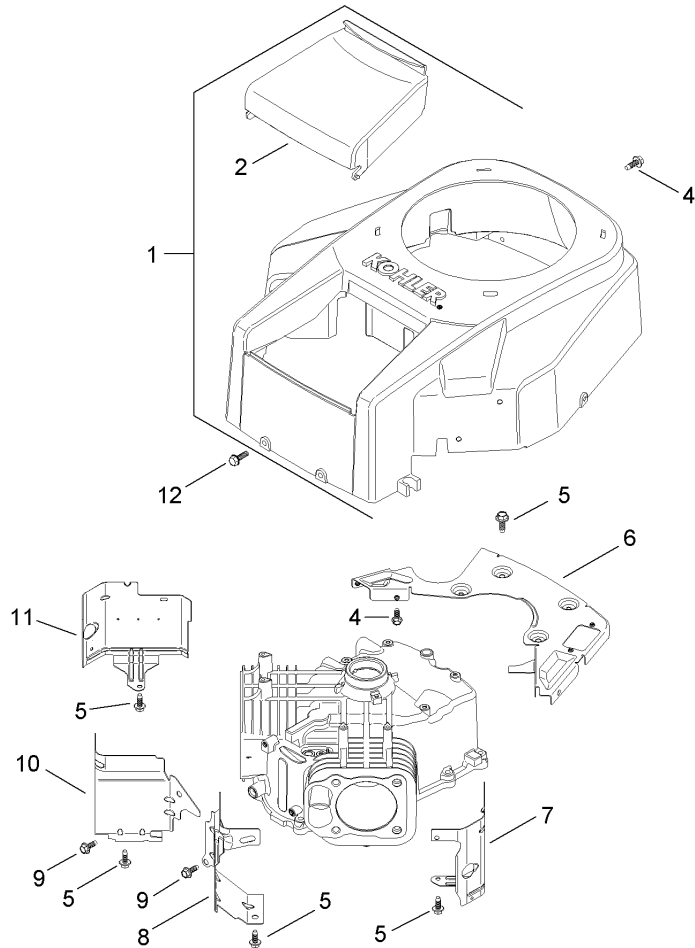 

Blower Housing and Baffle Assembly
Kohler SV720-0011


Ref	Part No.	Qty.	Description				
❶1	32 027 03S	1	Housing-Blower (Includes 2 And 41 037 10S)				
❷2	32 096 08S	1	Cover-Air Cleaner				
❹4	M545016S	6	Screw-Hex Flange, Thread Forming (M5X0.8X16)				
❺5	M645016S	8	Screw-Hex Flange, Thread Forming (M6X1.0X16)				
❻6	32 146 05S	1	Plate-Backing W/Rectifier-Regulator Opening				
❼7	32 063 05S	1	Baffle-Cylinder Barrel, No. 2 Side				
❸8	32 063 02S	1	Baffle-Valley, No. 2 Side				
❹9	M545010S	2	Screw-Hex Flange, Thread Forming (M5X0.8X10)				
❺10	32 063 03S	1	Baffle-Valley, No. 1 Side				
❺11	32 063 06S	1	Baffle-Cylinder Barrel, No. 1 Side				
❺12	24 086 12S	2	Screw-Hex Cap (M6X1.7X18)				
❶❺13	41 037 10S	1	Nameplate-Service				

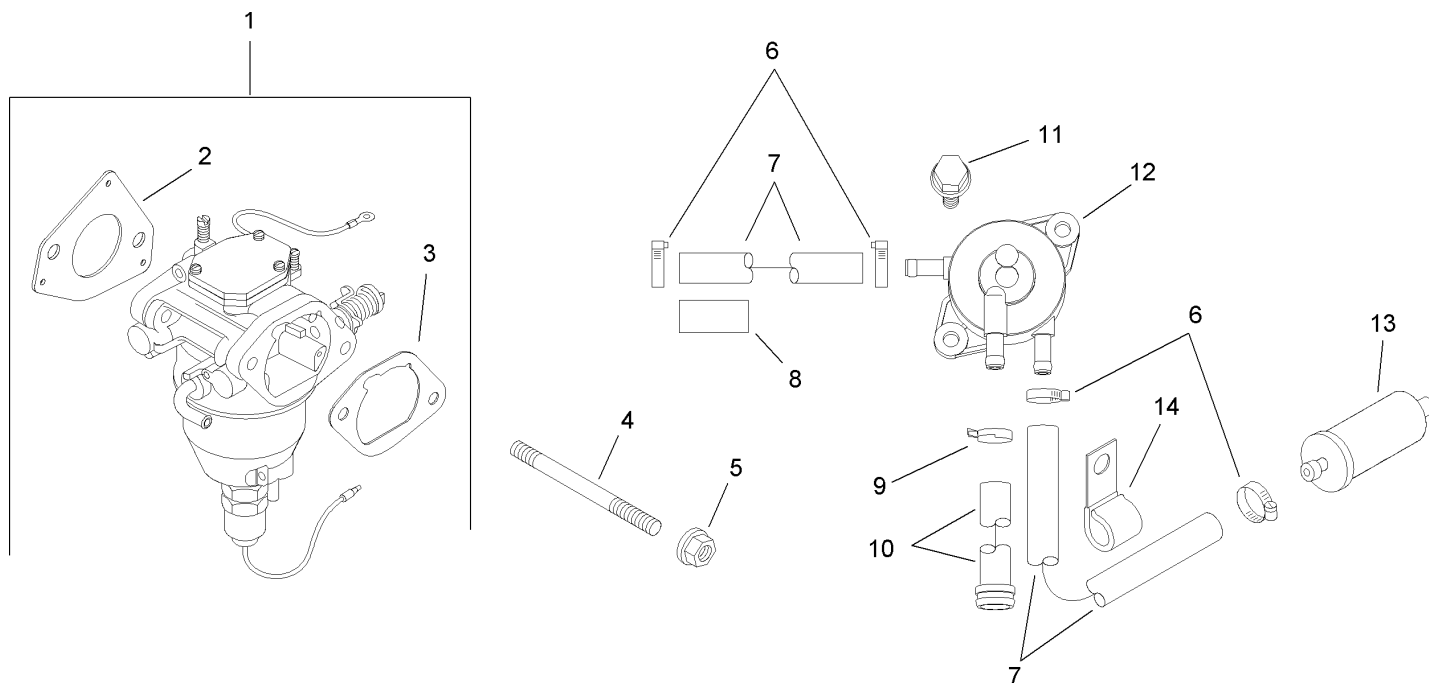 

Fuel System Assembly Kohler SV720-0011

Ref	Part No.	Qty.	Description
❶1	32 853 03S	1	Carburetor Kit W/Gaskets (Includes 2-3)
❷2	24 041 52S	1	Gasket-Carburetor
❸3	24 041 14S	1	Gasket-Air Cleaner Base
❹4	M629105S	2	Stud-Carburetor
❺5	M641060S	2	Nut-Hex Flange (M6X1.0)
❻6	25 237 14S	4	Clamp-Hose
❼7	25 111 34S	2	Line-Fuel (24 Inch, Cut to needed length)
❸8	25 431 10S	1	Sleeve-Antiabrasion
❹9	25 237 01S	1	Clamp-Hose
❶10	32 326 02S	1	Hose-Fuel Pump
❶11	24 086 12S	2	Screw-Hex Cap (M6X1.7X18)
❶12	24 393 16S	1	Pump-Pulse Fuel
❹13	98021	1	Filter-Fuel
❶14	47 154 01S	1	Clip-Cable
❶❶15	24 757 36S	1	Service Choke Repair Kit
❶❶16	24 757 38S	1	Service Gasket Repair Kit
❶❶17	24 757 44S	1	Float Kit W/Gaskets
❶❶18	24 757 45S	1	Solenoid Valve Kit W/Gaskets
❶❶19	24 757 46S	1	Overhaul Kit W/Gaskets
❶❶20	24 757 18S	1	Overhaul Kit W/Gaskets (Includes float kit)
❶❶21	24 757 19S	1	Service Choke Repair Kit
❶❶22	24 757 20S	1	Service Gasket Repair Kit


Ref	Part No.	Qty.	Description
❶❶23	24 757 22S	1	Solenoid Valve Kit W/Gaskets

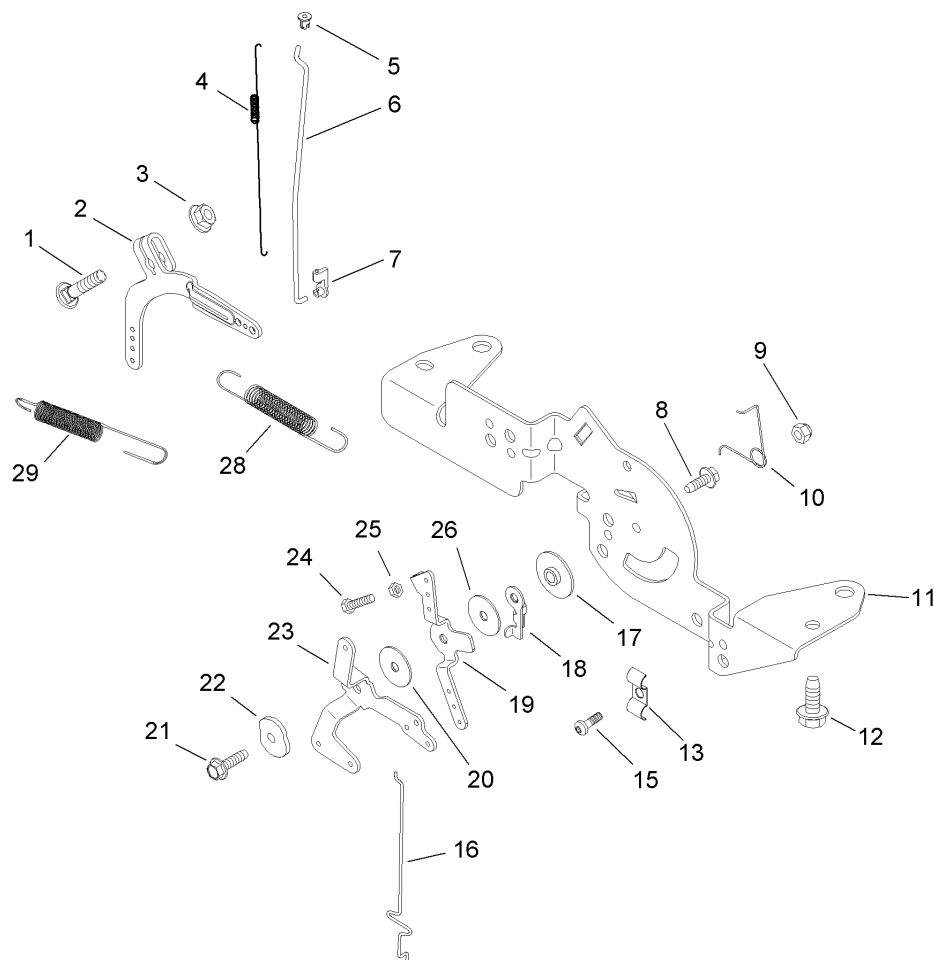

Engine Control Assembly Kohler SV720-0011


Ref	Part No.	Qty.	Description
❶	24 211 03S	1	Bolt-Round Head Square Neck
❷	24 090 33S	1	Lever-Governor
❸	M641060S	1	Nut-Hex Flange (M6X1.0)
❹	24 089 01S	1	Spring-Linkage
❺	25 158 08S	1	Bushing-Linkage Retaining
❻	24 079 04S	1	Linkage-Throttle
❼	25 158 11S	1	Bushing-Throttle Linkage
❽	M545016S	1	Screw-Hex Flange, Thread Forming (M5X0.8X16)
❾	M547050S	1	Nut-Lock, Hex (M5X0.8)
❿	24 089 03S	1	Spring-Choke Return
⓫	24 126 161S	1	Bracket-Control
⓬	M645016S	4	Screw-Hex Flange, Thread Forming (M6X1.0X16)
⓭	47 237 02S	1	Clamp-Dual Conduit
⓮	24 086 43S	1	Screw-Thread Forming
⓯	24 079 22 S	1	Linkage-Choke
⓰	24 112 27S	1	Spacer-Control ASM
⓱	24 090 47S	1	Lever-Throttle Actuator
⓲	24 090 13S	1	Lever-Throttle Control
⓳	24 468 01S	1	Washer-Flat (5.5 Mm)
⓴	M545020S	1	Screw-Hex Flange, Thread Forming (M5X0.8X20)
⓵	41 468 03S	1	Washer-Spring (1/4)
⓶	24 090 05S	1	Lever-Choke

Ref	Part No.	Qty.	Description
⓸	M403025S	1	Screw-Hex Head Cap (M4X0.7X25)
⓹	M446030S	1	Nut-Hex (M4X0.7)
⓺	24 468 20S	1	Washer-Flat
⓸	24 089 55S	1	Spring-Governor
⓻	24 089 25S	1	Spring-Governor

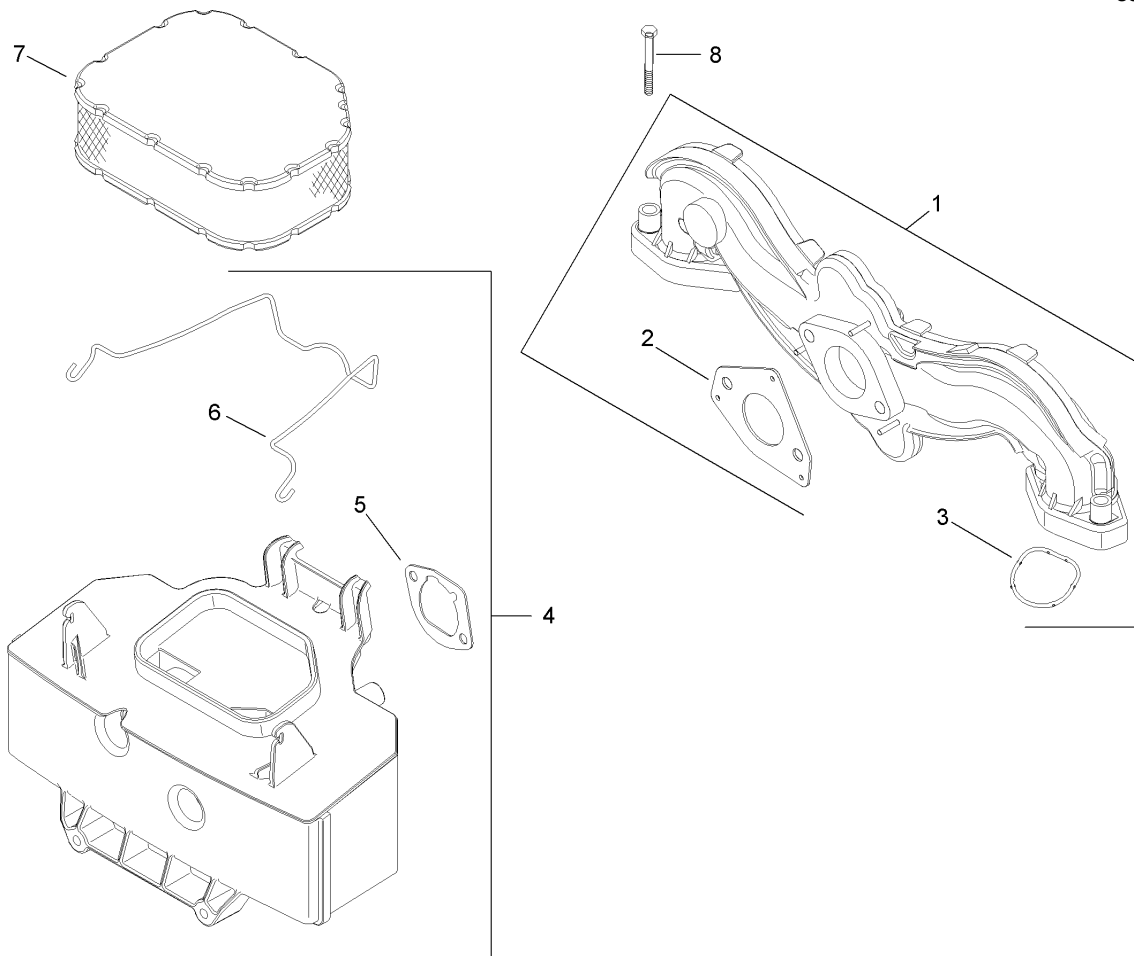

Air Intake and Filtration Assembly Kohler SV720-0011

Ref	Part No.	Qty.	Description
③1	24 164 51S	1	Manifold-Intake (Includes 2-3)
③2	24 041 52S	1	Gasket-Carburetor
③3	24 153 27S	2	O Ring-Intake Port
③4	32 094 03S	1	Base-Air Cleaner (Includes 5-6)
③5	24 041 14S	1	Gasket-Air Cleaner Base
③6	32 344 02S	1	Latch-Air Cleaner Element
④7	98019	1	Element-Air Cleaner
③8	M651040S	4	Screw-Hex Flange (M6X1.0X40)

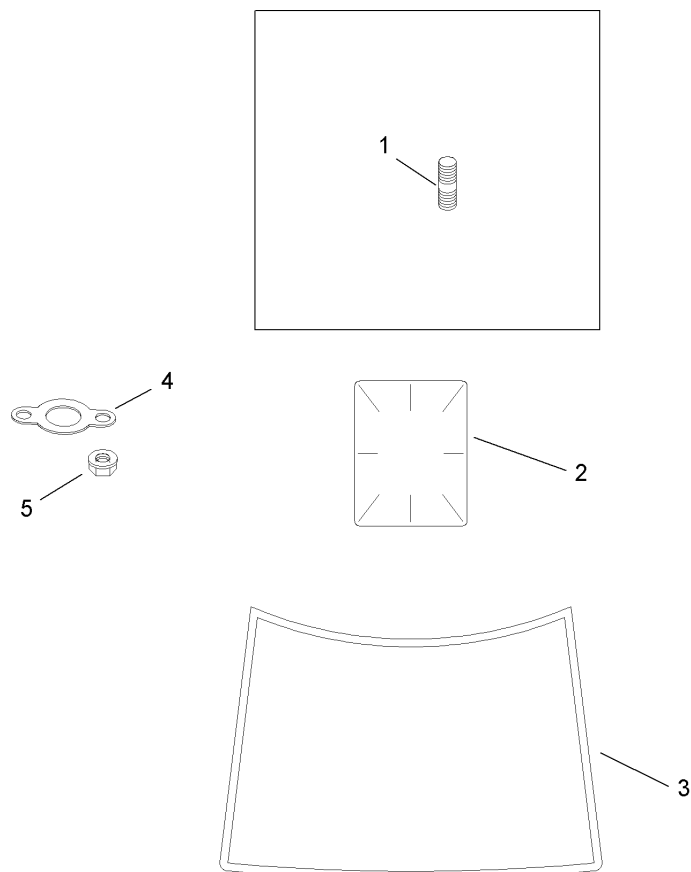

Artwork is representative.

Actual labels may differ depending on model and specification number.

Exhaust Stud, Gasket and Decal Assembly Kohler SV720-0011

Ref	Part No.	Qty.	Description				
③1	25 072 04S	4	Stud (M8X1.25X33)				
③2	25 113 39S	1	Decal-Clear Laminate				
③3	32 113 12S	1	Decal-22 Hp				
③4	24 041 49S	1	Gasket-Exhaust Manifold				
③5	M841080S	4	Nut-Hex Flange (M8X1.25)				
①③6	32 522 03	1	Short Block				
①③7	32 755 01S	1	Overhaul Kit				

Attachments and Accessories

For 13BX60RG544 - LX425 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Spark Plug	77-7330
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Filter-Air	98018
Filter-Oil	98020
Filter-Fuel	98021
Blade Kit (2 Blades, 42 Inch Decks)	98022

