


TORO®

MODEL NO. 03600-30001 & UP
MODEL NO. 03601-30001 & UP

PARTS CATALOG

REELMASTER® 335D TRACTION UNIT

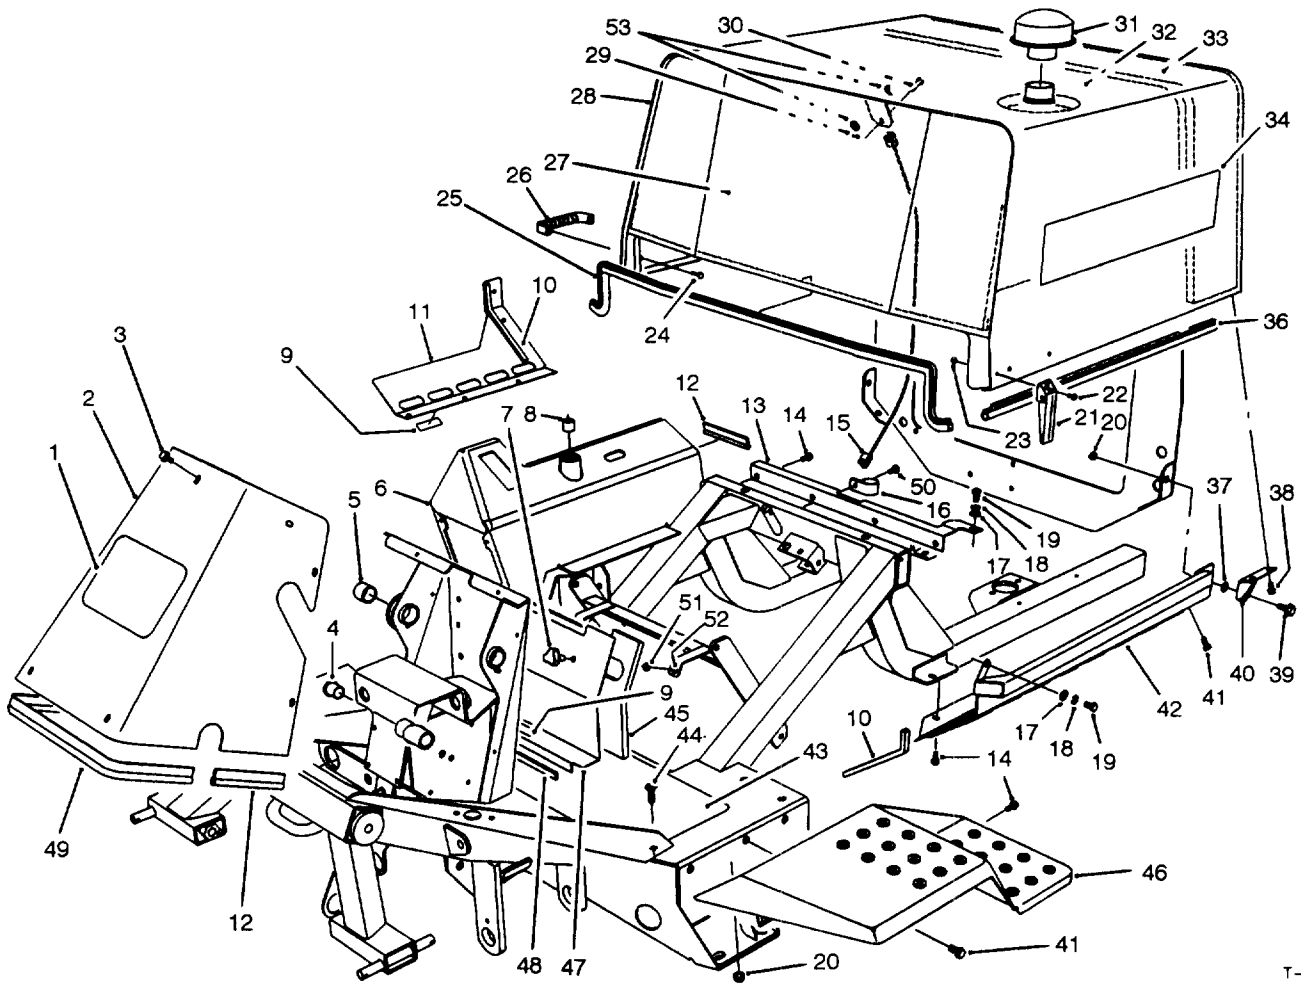


T-1082

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-7400	Decal - TORO	1
2	76-9700	Cover - Tower	1
3	46-6810	Screw - Hex. Washer Hd.	9
4	256-10	Bushing - Flange	2
5	256-237	Bushing - Sleeve	1
6	82-4920	Frame Assembly (Incl. Ref # 4, 5, 8 & 52)	1
7	77-3620	Retainer - Cover	2
8	256-32	Bushing - Sleeve	2
9	70-2560	Decal - Oil (Model No. 03600)	1
		(Model No. 03601)	2
10	68-7573	Seal - Shroud L.H.	2
11	76-8290	Shroud - Lower R.H.	1
12	76-6360	Strip - Seal	2
13	76-8430	Support - Hood Front	1

Ref. No.	Part No.	Description	No. Used
14	32144-11	Screw - Hex. Washer Hd.	10
15	66-2871	Cable - Hood	1
16	2412-104	Clamp - R	1
17	3256-24	Washer - Flat	2
18	3253-21	Washer - Lock	2
19	323-34	Screw - Cap Hex. Hd.	2
20	3290-357	Nut - Flange Lock	4
21	69-3020	Latch - Draw	1
22	3290-359	Screw - Round Hd.	2
23	3296-2	Nut - Lock	2
24	46-8091	Screw - Hex. Washer Hd.	4
25	76-6470	Strip - Seal Hood Front	1
26	65-5100	Handle - Hood	2
27	88-1500	Foam - Firewall	1
28	76-9800	Hood	1
29	3272-10	Pin - Cotter	1

*Not Illustrated

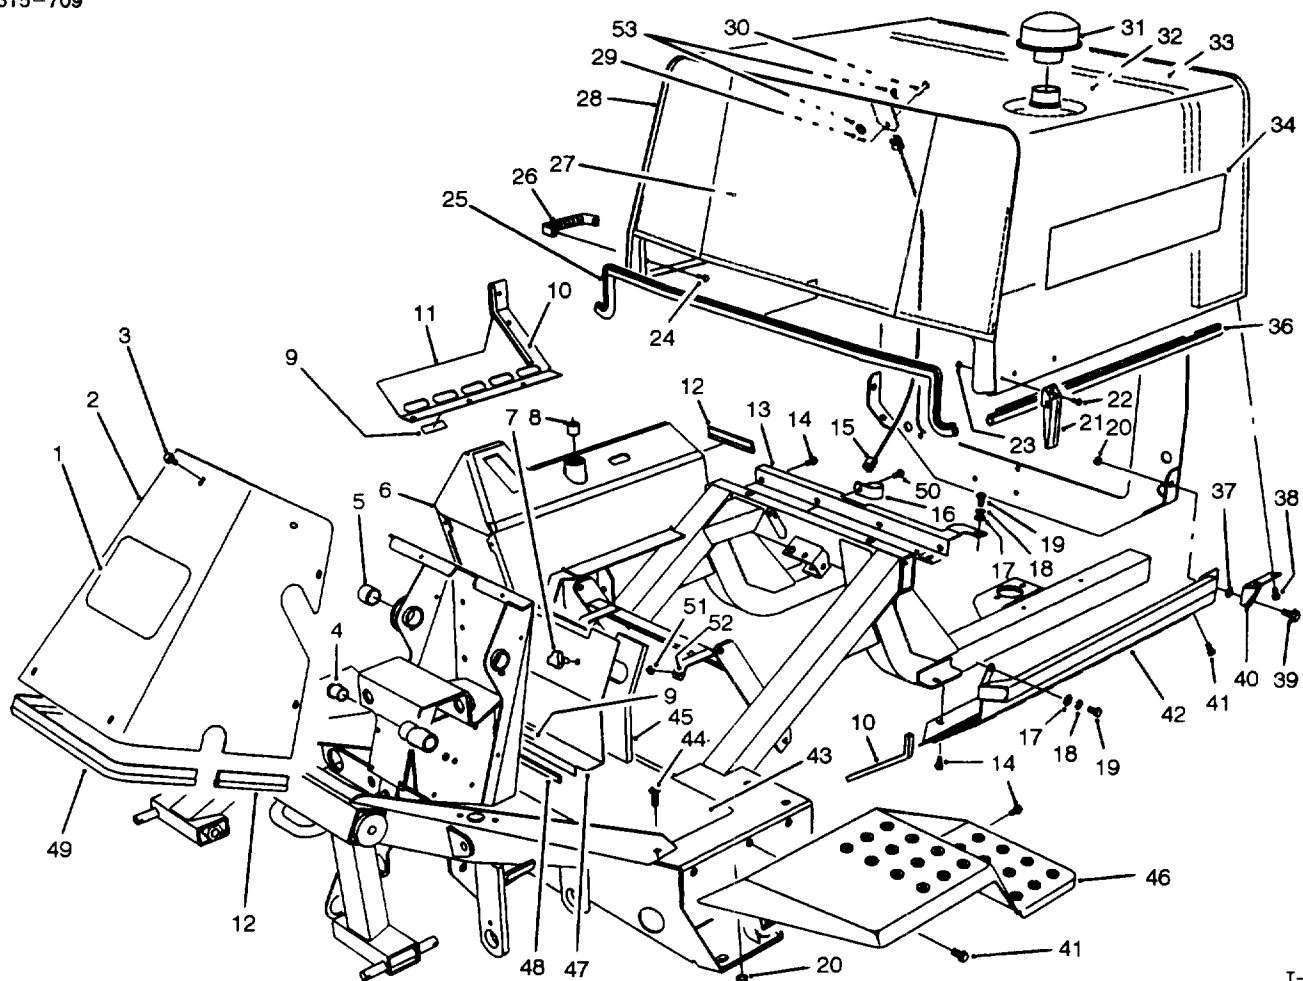


T-1082

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
30	283-58	Pin - Clevis	1
31	27-7180	Cap - Air Cleaner Inlet	1
32	76-6430	Foam - Hood Middle	1
33	76-6440	Foam - Hood Rear	1
34	76-8190	Decal - Reelmaster® 335D	2
36	76-6460	Strip - Seal Hood L.H.	1
*	76-6450	Strip - Seal Hood R.H.	1
37	3256-3	Washer - Flat	2
38	3234-14	Screw - Hex. Washer Hd.	4
39	67-0870	Screw - Shoulder	2
40	76-9160	Bracket - Hood Pivot L.H.	1
*	76-9170	Bracket - Hood Pivot R.H.	1
41	3234-12	Screw - Hex. Washer Hd.	9

Ref. No.	Part No.	Description	No. Used
42	82-3600	Shroud - Lower L.H.	1
43	74-4090	Tread - Foot	1
44	3231-22	Bolt - Carriage	2
45	88-1310	Foam - Access Panel	1
46	76-9300	Fender L. H.	1
*	76-9340	Fender R.H.	1
47	82-3770	Panel - Access	1
48	76-6380	Strip - Seal Access Panel	1
49	76-6361	Strip - Seal Tower	1
50	32104-82	Screw - Hex. Flange Hd.	1
51	32151-72	Retainer - Push-In	2
52	32148-10	Insert - Threaded	10
53	62-1230	Washer	2

*Not Illustrated

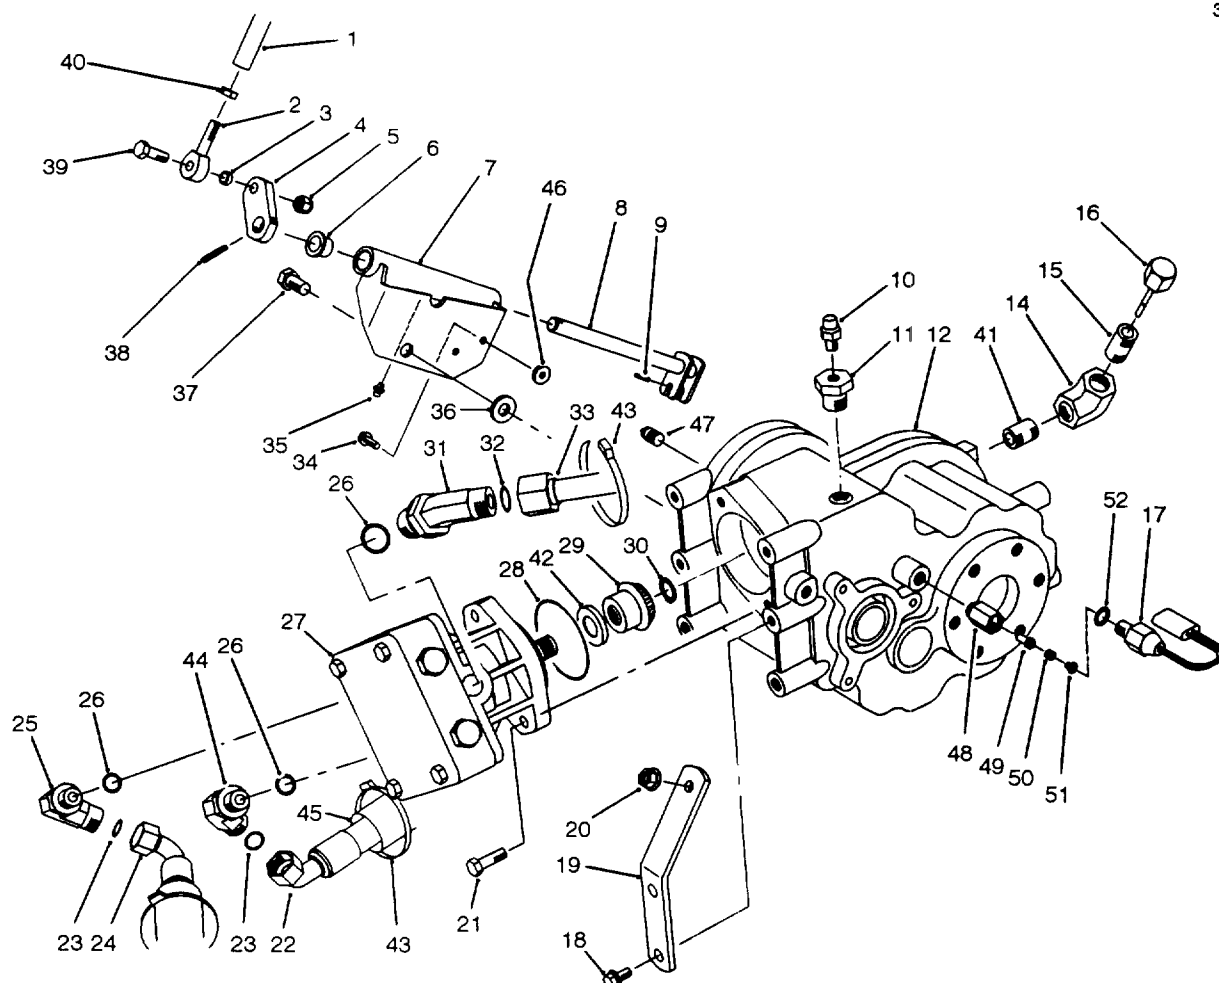


T-1077

FRONT TRANSAXLE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-8850	Rod - Shift Linkage	1
2	2411-36	Eye - Rod	1
3	76-9100	Spacer - Rod Eye	1
4	84-0190	Link - Shift Linkage	1
5	3296-59	Nut - Lock	1
6	3-1506	Bushing - Flange	2
7	74-5710	Shift Linkage Bracket Assy. (Incl. Ref. #6 & 35)	1
8	74-5730	Shaft - Shift Linkage	1
9	32121-24	Pin - Roll	1
10	302-14	Breather	1
11	2812-11	Fitting - Reducing Bushing	1
12	88-1260	Front Transaxle Assembly (Incl. Ref. #29 & 47)	1
14	2813-14	Fitting - Pipe Elbow 90°	1
15	289-44	Nipple - Pipe	1
16	27-3710	Dipstick	1
17	72-4320	Switch - Neutral	1
18	3234-12	Screw - Hex. Flange Hd.	2
19	76-8260	Bracket - Transaxle Support	1
20	3290-357	Nut - Flange Lock	1
21	323-7	Screw - Cap Hex. Hd.	2
22	86-2760	Hose - Hydraulic (Model No. 03600 Only)	1
*	86-2720	Hose - Hydraulic (Model No. 03601 Only)	1

Ref. No.	Part No.	Description	No. Used
23	237-65	Seal - O-Ring	2
24	86-2750	Hose - Hydraulic (L.H. Traction)	1
25	340-153	Fitting - Hydraulic 90° (Incl. Ref. #23 & 26)	1
26	237-79	Seal - O-Ring	3
27	92-2556	Hydraulic Motor Assembly	1
28	237-167	Seal - O-Ring	1
29		Gear - Spiral Bevel	1
30	32151-62	Ring - Retaining	1
31	340-101	Fitting - Hydraulic 45° (Incl. Ref. #26 & 32)	1
32	237-30	Seal - O-Ring	1
33	74-6220	Tube - Hydraulic	1
34	3234-4	Screw - Hex. Flange Hd.	2
35	302-5	Fitting - Grease	1
36	65-6390	Washer - Thrust	1
37	325-2	Screw - Cap Hex. Hd.	1
38	32121-6	Pin - Roll	1
39	323-8	Screw - Cap Hex. Hd.	1
40	3220-3	Nut - Jam	1
41	289-50	Nipple - Pipe	1
42	82-5380	Shim - Pinion .045"	A/R
*	82-5390	Shim - Pinion .038"	A/R
*	82-5400	Shim - Pinion .052"	A/R
43	3290-378	Tie - Cable	3


*Not Illustrated

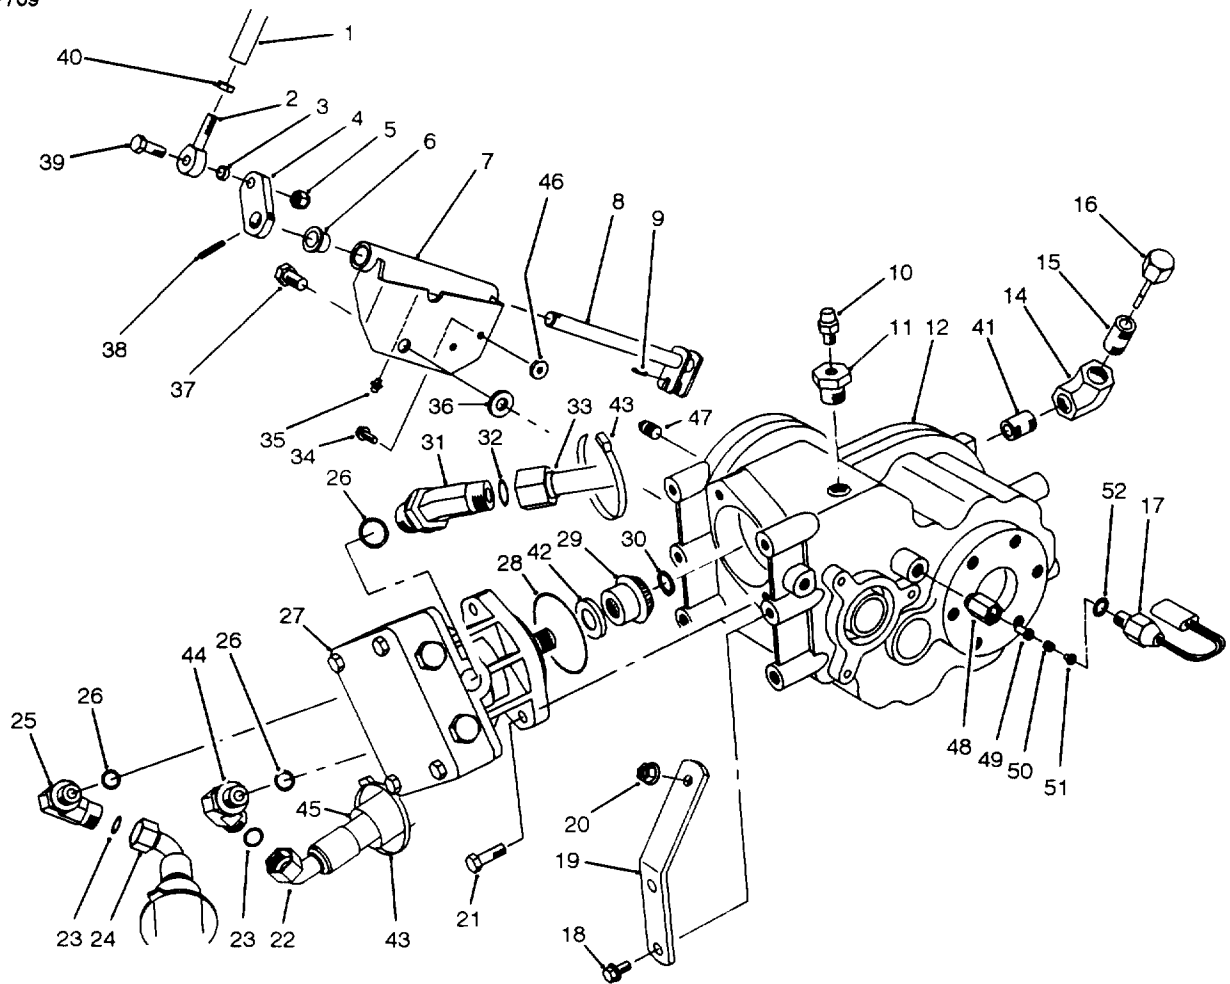

T-1077

FRONT TRANSAXLE INSTALLATION ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
44	340-55	Fitting - Hydraulic 45° (Incl. Ref. #23 & 26)	1	48	92-1364	Guide - Switch	1
45	56-7982	Sleeve - Protective	2	49	92-1365	Plunger - Switch	1
46	73-3580	Washer	2	50	92-1366	Spring - Compression	1
47	76-6040	Plug - Pipe	1	51	43-8610	Guide - Spring & Ball	1
				52	237-30	Seal - O-Ring	1

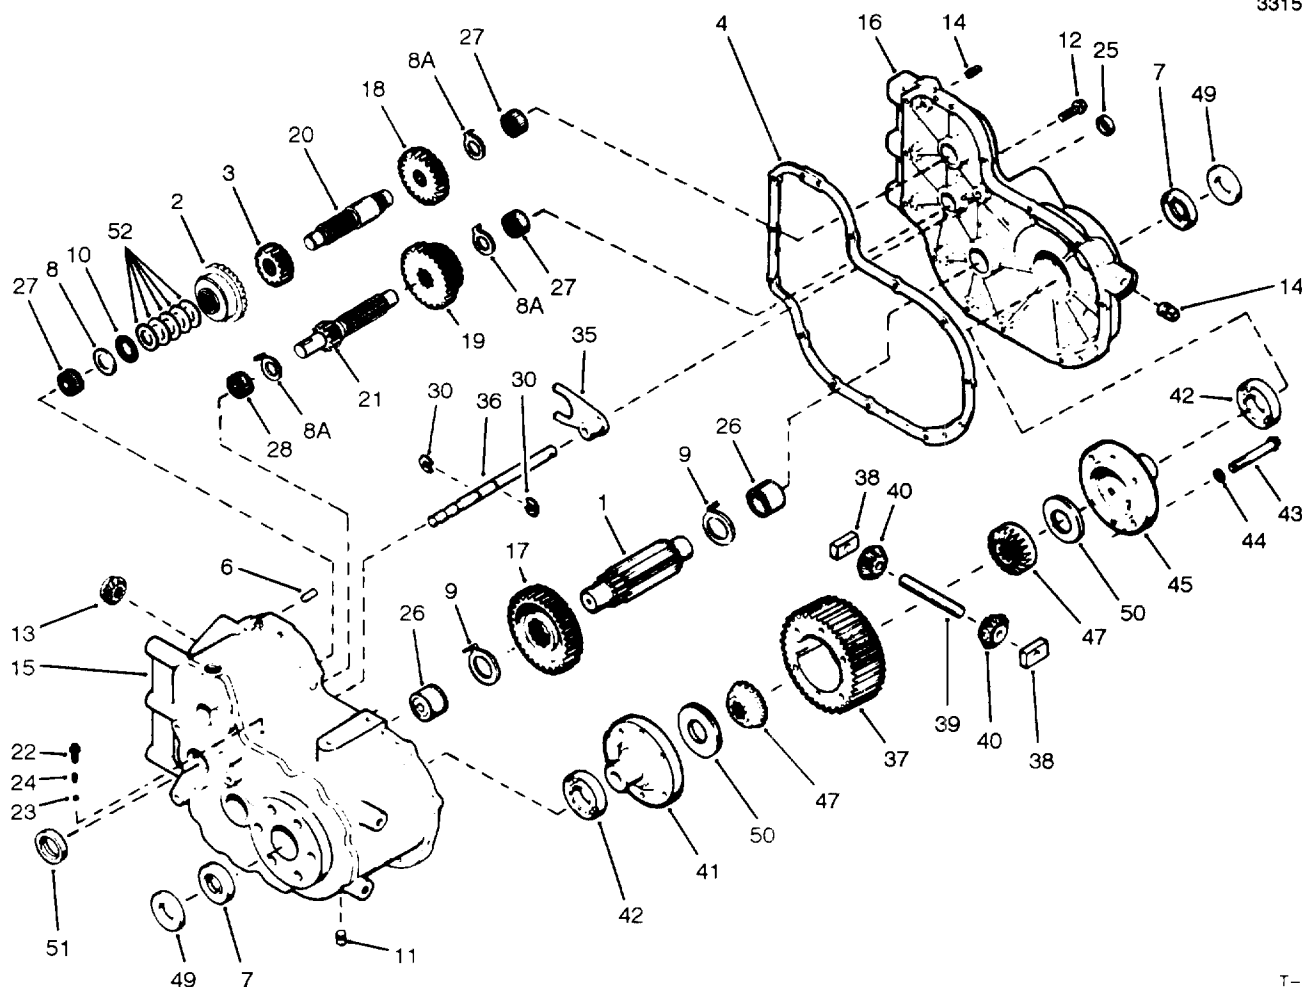


T-1008

TRANSAXLE ASSEMBLY NO. 88-1260

Ref. No.	Part No.	Description	No. Used
1	76-5610	Pinion - Output	1
2		Gear - Spiral Bevel	1
3	76-5630	Gear - Spur	1
4	76-5640	Gasket	1
6	76-5660	Pin - Dowel	2
7	76-5670	Seal - Oil	2
8	76-5680	Washer - Thrust	1
8A	76-5650	Washer - Thrust	3
9	76-5690	Washer - Thrust	2
10	76-5700	Bearing - Thrust	1
11	76-5710	Plug - Magnetic - Drain	1
12	76-5720	Screw - Hex Hd.	13
13		Pinion - Spiral Bevel	1
14	76-6040	Plug - Pipe	2
15	92-0639	Case Assembly (Incl. Ref. #26-28)	1
16	76-5760	Cover Assembly (Incl. Ref. #26-27)	1
17	92-0642	Gear - Output	1
18	76-5780	Gear - Spur	1
19	92-0644	Gear - Cluster	1
20	92-0641	Shaft - Counter	1
21	92-0645	Shaft & Gear - Shifter	1
22	76-5820	Screw - Hex Flanged Hd.	1
23	76-5830	Ball - Steel	1
24	76-5840	Spring - Shifter Fork	1
25	76-5850	Seal - Oil	1

Ref. No.	Part No.	Description	No. Used
26	76-5860	Bearing - Needle	2
27	76-5870	Bearing - Needle	3
28	92-0640	Bearing - Needle	1
30	76-5890	Ring - Retaining	2
35	76-5900	Fork - Shift	1
36	92-0647	Rod - Shift (High-Low)	1
37	92-0643	Gear - Ring	1
38	76-5930	Block - Drive	2
39	76-5940	Pin - Drive	1
40	76-5950	Pinion - Bevel	2
41	76-5960	Carrier (Incl. Ref. #50)	1
42	92-0646	Bearing - Ball	2
43	76-5980	Screw - Hex Flanged Hd.	6
44	3253-21	Washer - Lock	6
45	76-5990	Carrier - Differential	1
47	76-6000	Gear - Bevel	2
49	76-6010	Spacer	2
50	76-6020	Washer - Thrust	2
51	76-6030	Seal - Oil	1
52	76-5680	Shim - Orange .126/.123	A/R
*	76-5740	Shim - Lt. Grn. .123/.120	A/R
*	84-0090	Shim - Lt. Blue .120/.117	A/R
*	84-0130	Shim - Pink .129/.126	A/R
*	84-0140	Shim - Black .132/.129	A/R
*	84-0080	Spiral Gear Set (Matched) (Incl. Ref. #2 & 13)	1


*Not Illustrated

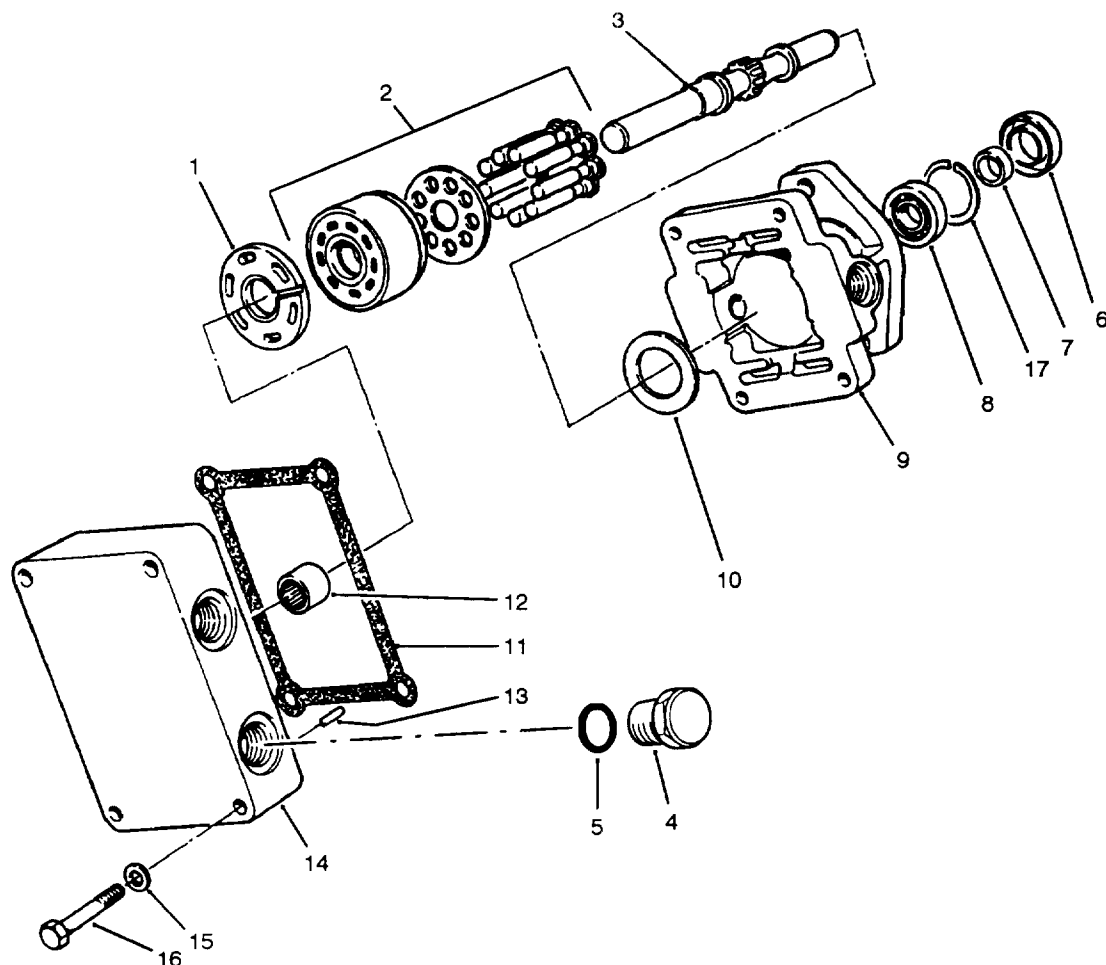

T-1493

HYDRAULIC MOTOR NO. 92-2556

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-3380	Plate - Valve	1	10	25-2380	Plate - Thrust	1
2	48-1800	Cylinder Block Kit	1	11	67-9100	Gasket	1
3	92-0636	Shaft Assembly (Incl. Ref. #7 & 8)	1	12	77-3640	Bearing	1
4	92-2571	Plug	2	13	25-2430	Pin - Straight	1
5	237-65	Seal - O-Ring	2	14	92-2572	End Cap Assembly (Incl. Ref. #12)	1
6	74-9480	Seal - Lip	1	15	74-9510	Washer - Flat	1
7		Sleeve	1	16	74-9500	Screw - Cap Hex. Hd.	4
8		Bearing - Roller	1	17	82-4970	Ring - Retaining	1
9	82-4990	Housing - Fixed	1				

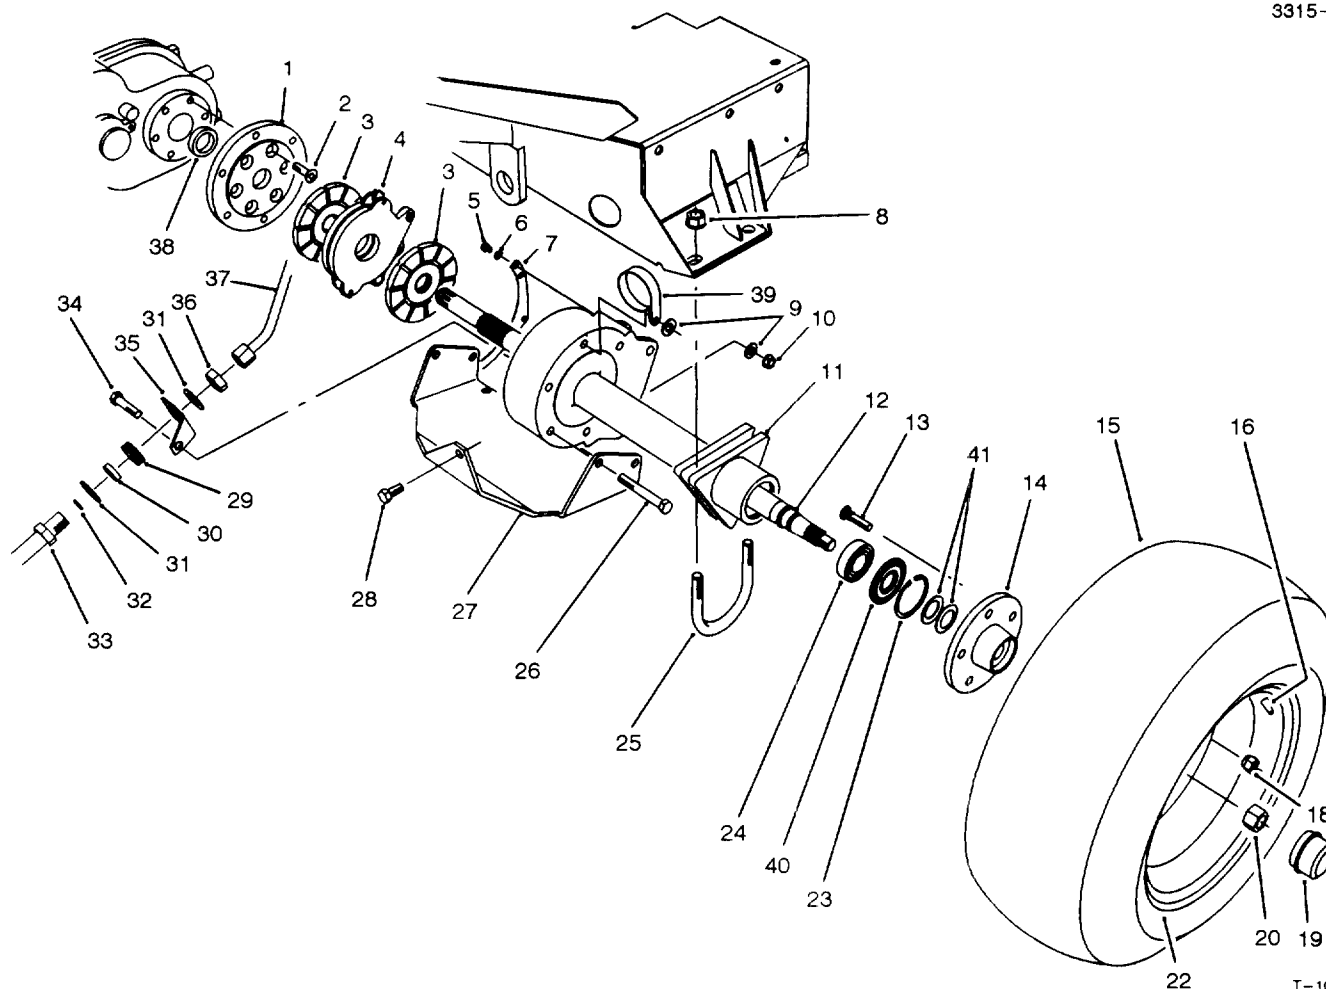


T-1076

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4240	Plate - Adaptor	2
2	3274-87	Screw - Flat Hd. Socket	12
3	74-3640	Disc - Brake	4
4	74-3630	Actuator - Brake	2
5	322-1	Screw - Cap Hex. Hd.	6
6	3253-4	Washer - Lock	6
7	76-8300	Cover - Axle Housing	2
8	32128-50	Nut - Flange Lock	4
9	3256-26	Washer - Flat	3
10	32128-23	Nut - Flange Lock	4
11	88-1560	Housing - Axle	2
12	88-1570	Shaft - Axle	2
13	242-34	Stud Drive	10
14	74-5440	Hub - Wheel	2
15	69-9880	Tire	2
16	232-27	Stem - Valve	2
18	23-7270	Nut - Lug	10
19	241-119	Cap - Hub	2
20	3296-67	Nut - Axle	2
22	217-123	Rim	2
23	32151-88	Ring - Retaining	2
24	88-1590	Bearing - Ball	2
25	76-8120	Bolt - U	2
26	325-15	Screw - Cap Hex. Hd.	10

Ref. No.	Part No.	Description	No. Used
27	86-5430	Plate - Skid	1
28	325-4	Screw - Cap Hex. Hd.	1
29	240-3	Grommet	2
30	69-9000	Spacer	2
31	69-9010	Washer	4
32	237-65	Seal - O-Ring	2
33	74-6350	Tube - Hydraulic L.H. (Incl. Ref. #32)	1
*	74-6340	Tube - Hydraulic R.H. (Incl. Ref. #32)	1
34	325-5	Screw - Cap Hex. Hd.	2
35	74-6420	Bracket - Bulkhead L.H.	1
*	74-6430	Bracket - Bulkhead R.H.	1
36	340-74	Nut - Bulkhead	2
37	82-5330	Tube - Hydraulic (L.H. Reel)	1
*	82-5210	Hose - Hydraulic (R.H. Reel)	1
38	76-6010	Spacer - Transaxle (Supplied with transaxle)	2
39	2412-102	Clamp - R	1
40	88-1580	Seal - Ring	2
41	88-1600	Washer - Belleville	4

*Not Illustrated

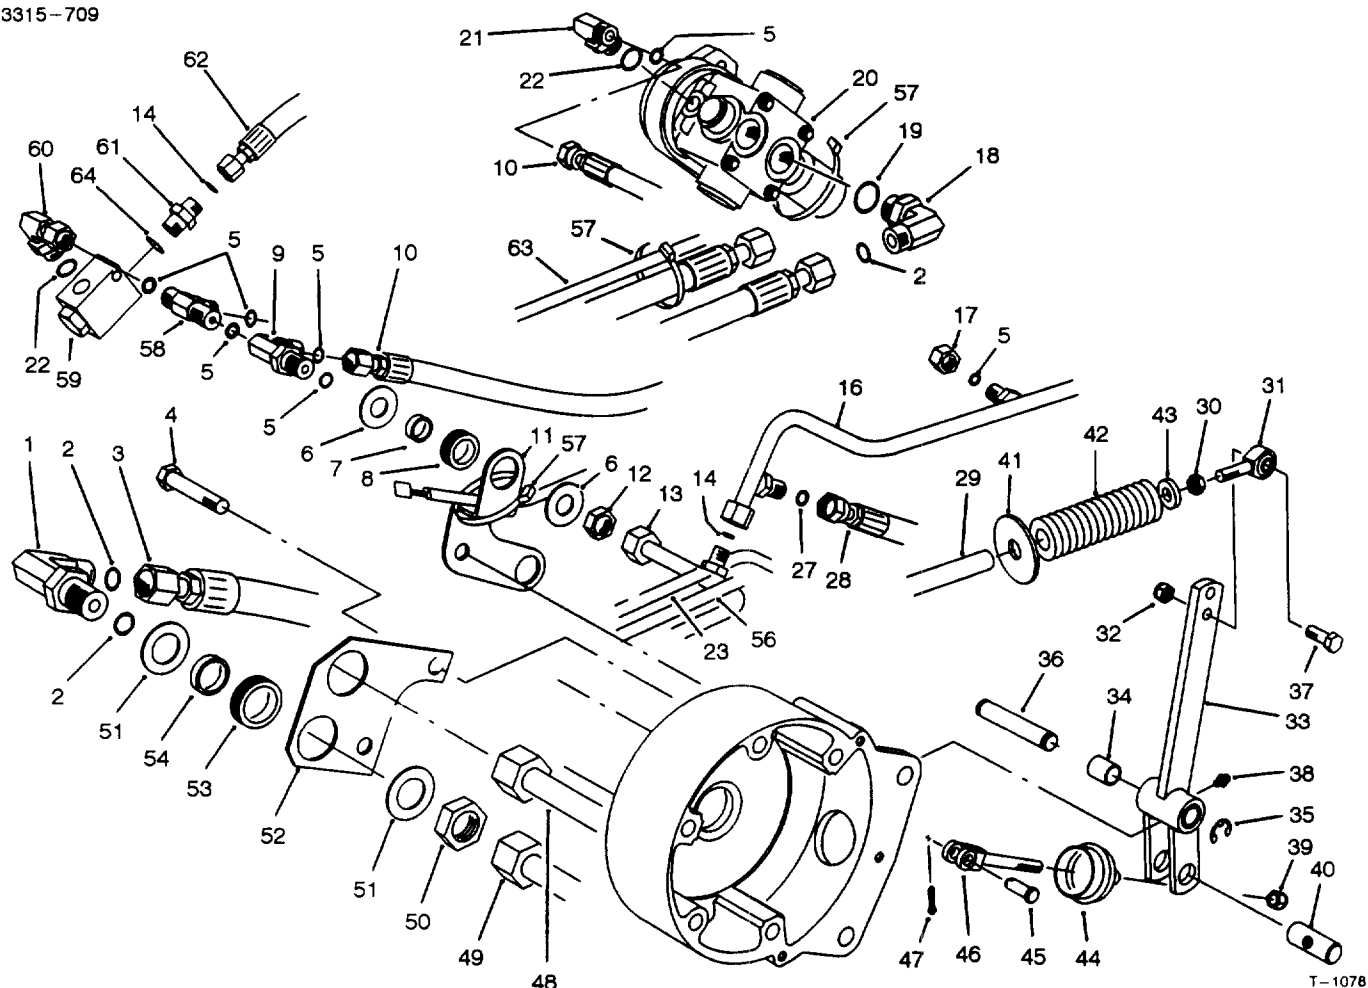


T-1078

BRAKE LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	340-72	Fitting - Hydraulic 90° (Incl. Ref. #2)	2
2	237-65	Seal - O-Ring	6
3	76-9400	Hose - Hydraulic	2
4	325-15	Screw - Cap Hex. Hd.	10
5	237-22	Seal - O-Ring	7
6	69-8940	Washer	2
7	69-8970	Spacer	1
8	240-4	Grommet	1
9	340-154	Fitting - Hydraulic 90° (Incl. Ref. #5) (Model No. 03600 Only)	1
10	76-6880	Hose - Hydraulic	1
11	74-6440	Bracket - Bulkhead	1
12	340-70	Nut - Bulkhead	1
13	74-6360	Tube - Hydraulic (Incl. Ref. #14)	1
14	237-30	Seal - O-Ring	2
16	74-6370	Tube - Hydraulic (Incl. Ref. #5 & 27)	1
17	340-117	Fitting - Hydraulic Cap	1
18	340-139	Fitting - Hydraulic 90° (Incl. Ref. #2 & 19)	2
19	237-81	Seal - O-Ring	2
20	74-3390	Motor - Hydraulic	1


Ref. No.	Part No.	Description	No. Used
21	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 22)	1
22	237-42	Seal - O-Ring	2
23	74-6250	Tube - Hydraulic	1
27	237-21	Seal - O-Ring	1
28	76-9410	Hose - Hydraulic	1
29	76-9690	Rod - Brake Linkage	2
30	3220-3	Nut - Jam	2
31	2411-36	Eye - Rod	2
32	3296-59	Nut - Lock	2
33	84-0970	Brake Linkage Arm Assy. (Incl. Ref. #34 & 38)	2
34	256-49	Bushing - Sleeve	2
35	32120-19	Ring - Retaining	4
36	84-0990	Pin - Linkage Arm	2
37	323-7	Screw - Cap Hex. Hd.	2
38	302-5	Fitting - Grease	2
39	3296-39	Nut - Lock	2
40	76-8270	Rod - Clevis Adjusting	2
41	86-5840	Plate - Spring	2
42	86-5830	Spring - Compression	2
43	66-6480	Washer	2
44	76-4180	Boot	2
45	283-2	Pin - Clevis	2
46	76-6610	Clevis - Brake	2

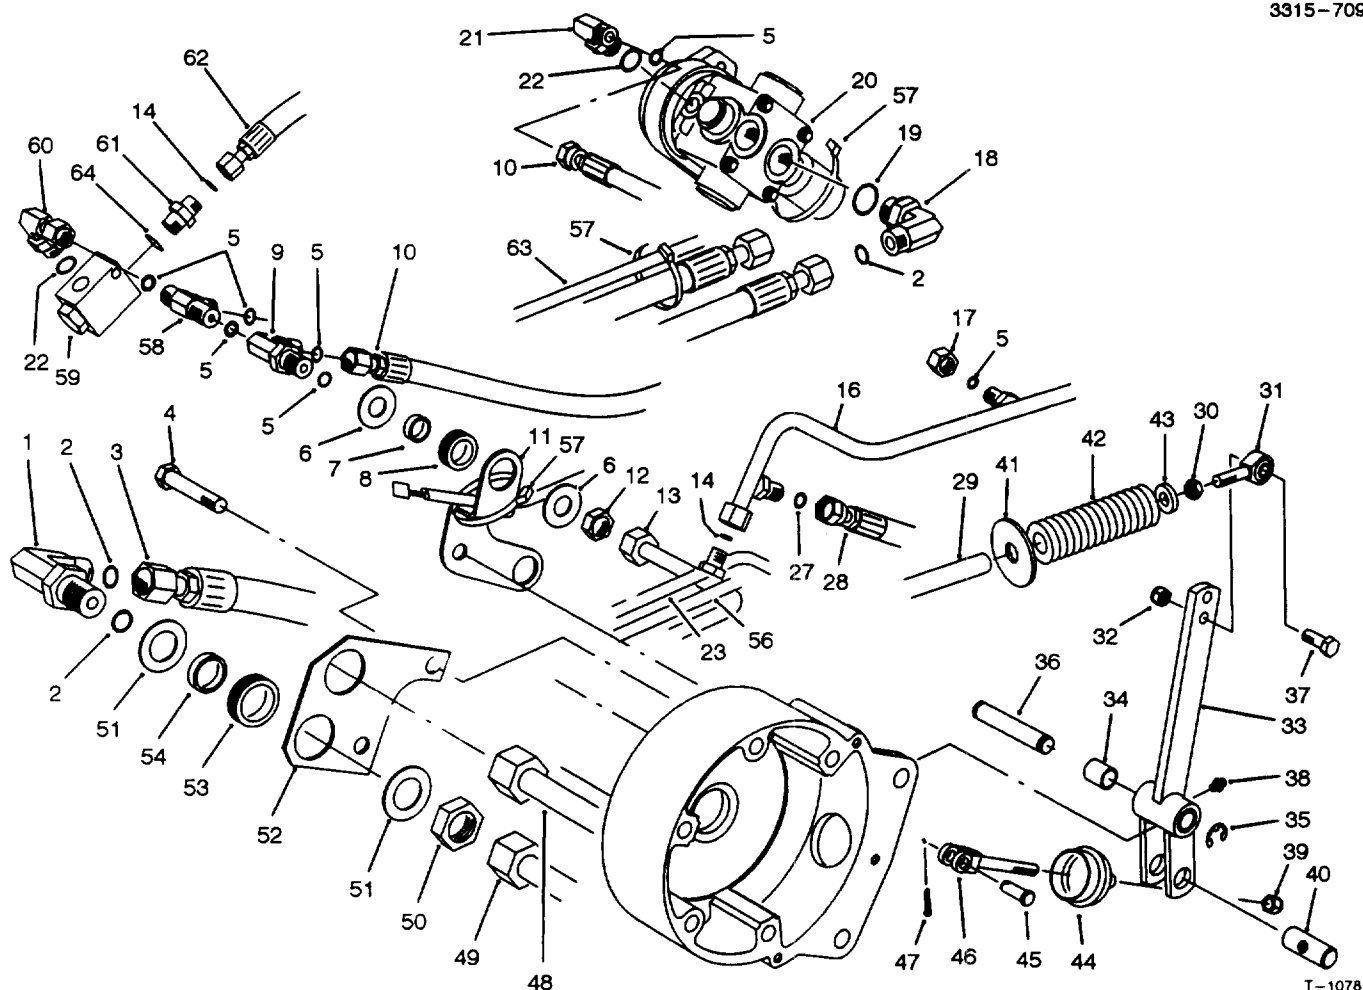

BRAKE LINKAGE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	3272-6	Pin - Cotter	2
48	74-6210	Tube - Hydraulic	1
49	74-6340	Tube - Hydraulic	1
50	340-74	Nut - Bulkhead	2
51	69-9010	Washer	4
52	76-9710	Bracket - Bulkhead	1
53	240-3	Grommet	2
54	69-9000	Spacer	2
56	74-6240	Tube - Hydraulic	1
57	3290-378	Tie - Cable	3
58	340-68	Fitting - Hydraulic Tee (Incl. Ref. #5) (Model No. 03601 Only)	1


Ref. No.	Part No.	Description	No. Used
59	84-0650	Valve - Velocity Fuse (Model No. 03601 Only)	1
60	340-110	Fitting - Hydraulic 90° El. (Incl. Ref. #22) (Model No. 03601 Only)	1
61	340-2	Fitting - Hydraulic Straight (Incl. Ref. #14 & 64) (Model No. 03601 Only)	1
62	77-4080	Hose - Hydraulic (Model No. 03601 Only)	1
63	76-8970	Harness - Wire #1	1
64	237-79	Seal - O-Ring (Model No. 03601 Only)	1

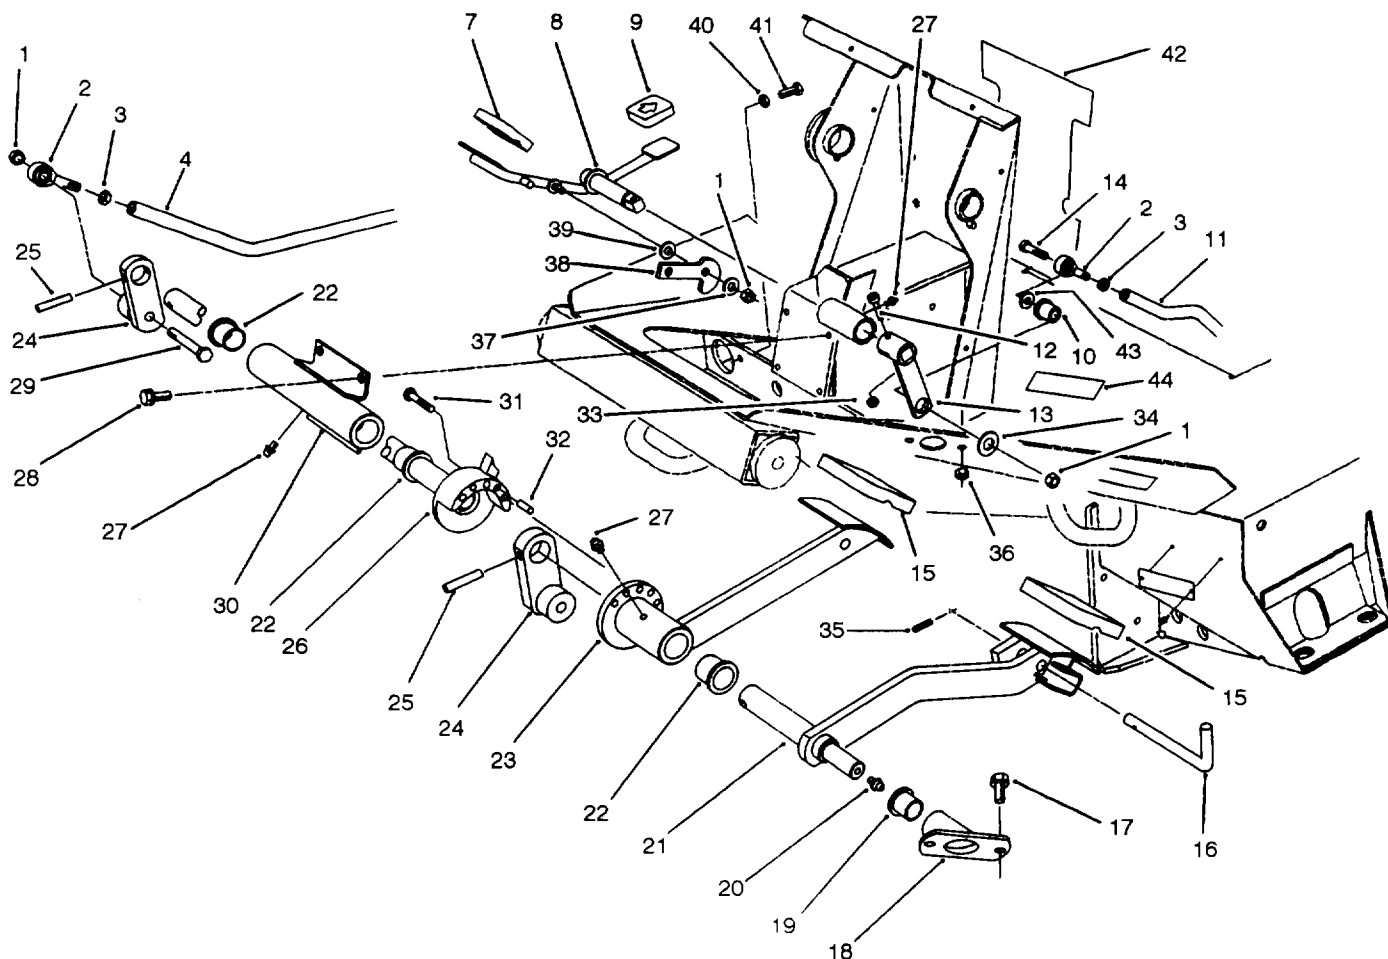

T-1508

TRACTION & BRAKE PEDALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-59	Nut - Lock	4	24	92-1379	Arm - Brake Linkage	2
2	2411-36	Eye - Rod	3	25	32121-25	Pin - Roll	2
3	3220-3	Nut - Jam	3	26	76-9720	Shaft - Brake	1
4	76-9690	Rod - Brake Linkage	2	27	302-5	Fitting - Grease	3
7	74-9100	Pad - Forward Pedal	1	28	32144-11	Screw - Hex. Flange Hd.	4
8	82-5190	Shaft - Traction Pedal	1	29	323-12	Screw - Cap Hex. Hd.	2
9	74-9110	Pad - Reverse Pedal	1	30	76-9030	Bearing Housing Assembly (Incl. Ref. #22 & 27)	1
10	63-9751	Mount - Linkage Rod	4	31	321-9	Screw - Cap Hex. Hd.	3
11	82-5290	Rod - Traction Linkage	1	32	32121-11	Pin - Roll	2
12	3274-19	Screw - Cap Socket Hd.	1	33	3296-42	Nut - Lock	1
13	92-1367	Arm - Traction Linkage	1	34	63-8410	Washer	1
14	323-9	Screw - Cap Hex. Hd.	1	35	32121-50	Pin - Roll	1
15	82-4960	Pad - Brake	2	36	32128-20	Nut - Lock	2
16	63-7880	Latch - Brake	1	37	3256-24	Washer - Flat	1
17	3234-14	Screw - Hex. Flange Hd.	2	38	74-6110	Stop - Pedal	1
18	76-9680	Bearing Housing Assembly (Incl. Ref. #19)	1	39	66-2920	Washer - Nylon	1
19	256-90	Bushing - Flange	1	40	3218-2	Nut - Jam	2
20	302-2	Fitting - Grease	1	41	322-4	Screw - Cap Hex. Hd.	2
21	76-8890	Pedal - Brake L.H.	1	42	76-8810	Decal - Safety	1
22	256-10	Bushing - Flange	4	43	3256-3	Washer - Flat	1
23	76-8930	Brake Pedal Assembly R.H. (Incl. Ref. #22 & 27)	1	44	92-1370	Decal - Warning	1

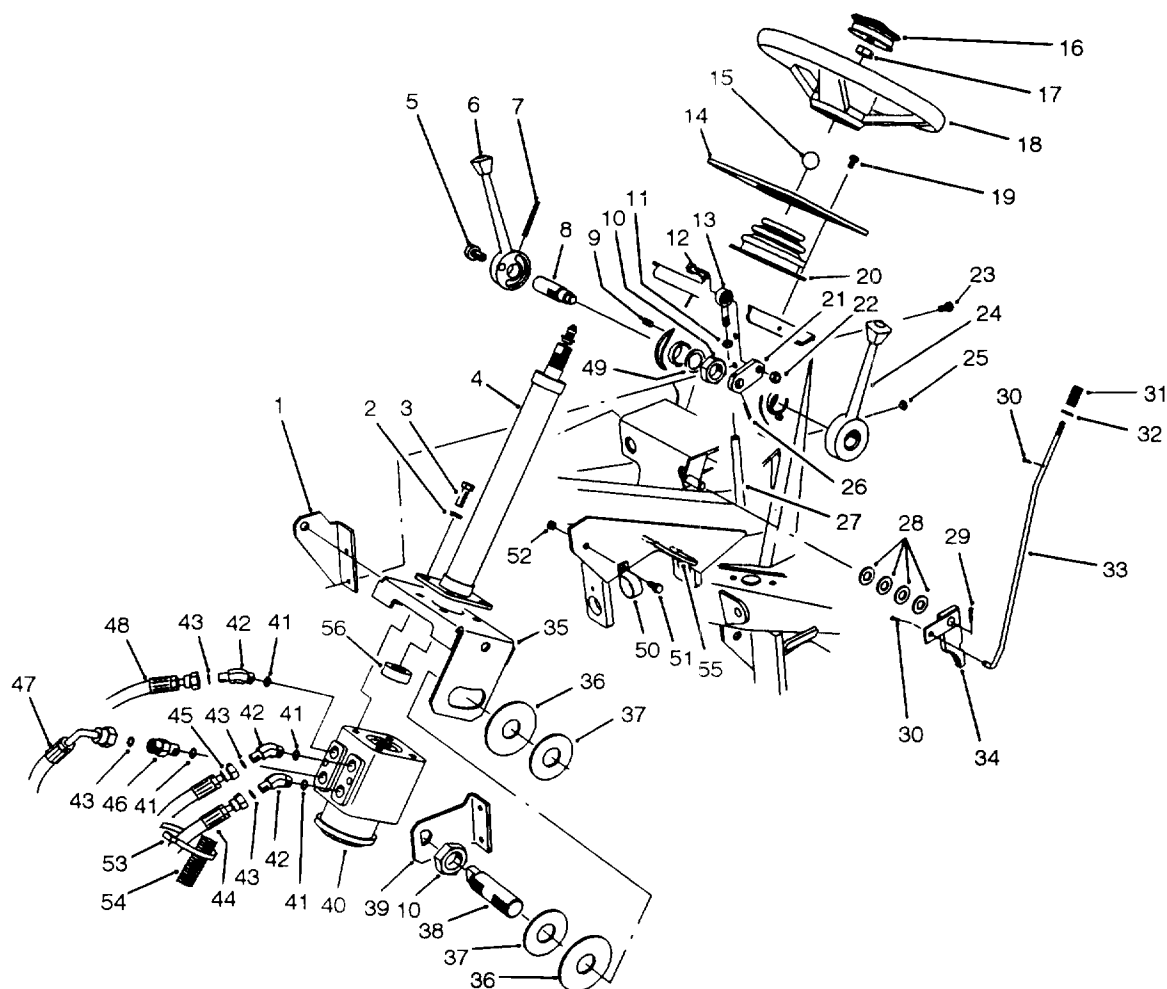


T-1087

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-8160	Support - Steering Gear	1
2	3253-21	Washer - Lock	4
3	323-6	Screw - Cap Hex. Hd.	4
4	74-3670	Steering Column Assembly	1
5	82-4950	Retractable Spring Plunger	1
6	74-5770	Lever - Shift	1
7	32121-10	Pin - Roll	1
8	74-5790	Shaft - Shift Linkage	1
9	32121-123	Pin - Roll	2
10	3296-49	Nut - Lock	2
11	3220-3	Nut - Jam	1
12	3296-59	Nut - Lock	1
13	2411-36	Eye - Rod	1
14	76-8720	Panel - Steering Tower	1
15	233-17	Knob - Parking Brake	1
16	72-0130	Horn Button Assembly	1
17	47-6990	Nut - Lock	1
18	68-8080	Wheel - Steering	1
19	32144-4	Screw - Hex. Flange Hd.	4
20	76-9450	Boot - Steering Column	1
21	77-4260	Arm - Shift Linkage	1
22	323-8	Screw - Cap Hex. Hd.	1
23	32144-11	Screw - Hex. Washer Hd.	4
24	69-1560	Lever - Tilt Steering	1
25	2410-64	Plug - Dome	2
26	32121-6	Pin - Roll	1


Ref. No.	Part No.	Description	No. Used
27	76-8850	Rod - Shift Linkage	1
28	3256-26	Washer - Flat	4
29	3272-10	Pin - Cotter	1
30	3272-5	Pin - Cotter	2
31	3-3251	Spring - Compression	1
32	3256-22	Washer - Flat	1
33	76-9050	Rod - Parking Brake	1
34	63-7900	Latch - Parking Brake	1
35	76-8140	Bracket - Steering Gear	1
36	31-0390	Washer - Friction	2
37	20-9500	Washer - Flat	2
38	76-8340	Shaft - Tilt Steering	1
39	76-8150	Support - Steering Shaft	1
40	74-3660	Power Steering Valve Assy.	1
41	237-79	Seal - O-Ring	4
42	340-138	Fitting - Hydraulic 45° (Incl. Ref. #40 & 42)	3
43	237-22	Seal - O-Ring	4
44	76-9570	Hose - Hydraulic	1
45	76-9560	Hose - Hydraulic	1
46	59-6430	Valve - Check (Incl. Ref. #40 & 42)	1
47	86-5570	Hose - Hydraulic	1
48	76-9530	Hose - Hydraulic	1
49	10-8110	Washer	1
50	2412-74	Clamp - R	1

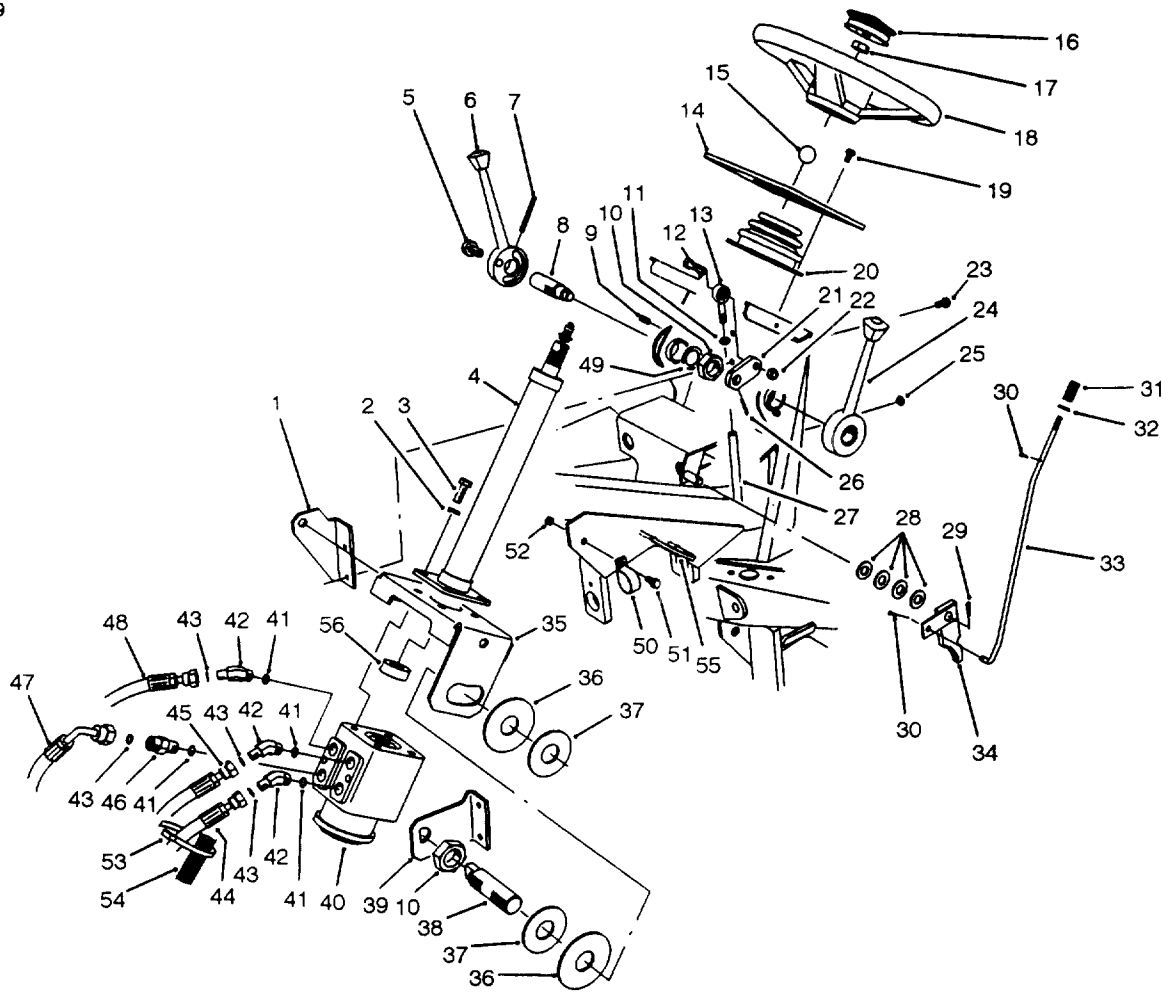

T-1087

STEERING TOWER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
51	3234-17	Screw - Cap Hex. Hd.	1	54	76-8960	Harness - Wire Reel	1
52	32128-20	Nut - Lock	1	55	3333-975	Tie - Cable	1
53	3290-378	Tie - Cable	1	56	21-9260	Cover - Dust	1

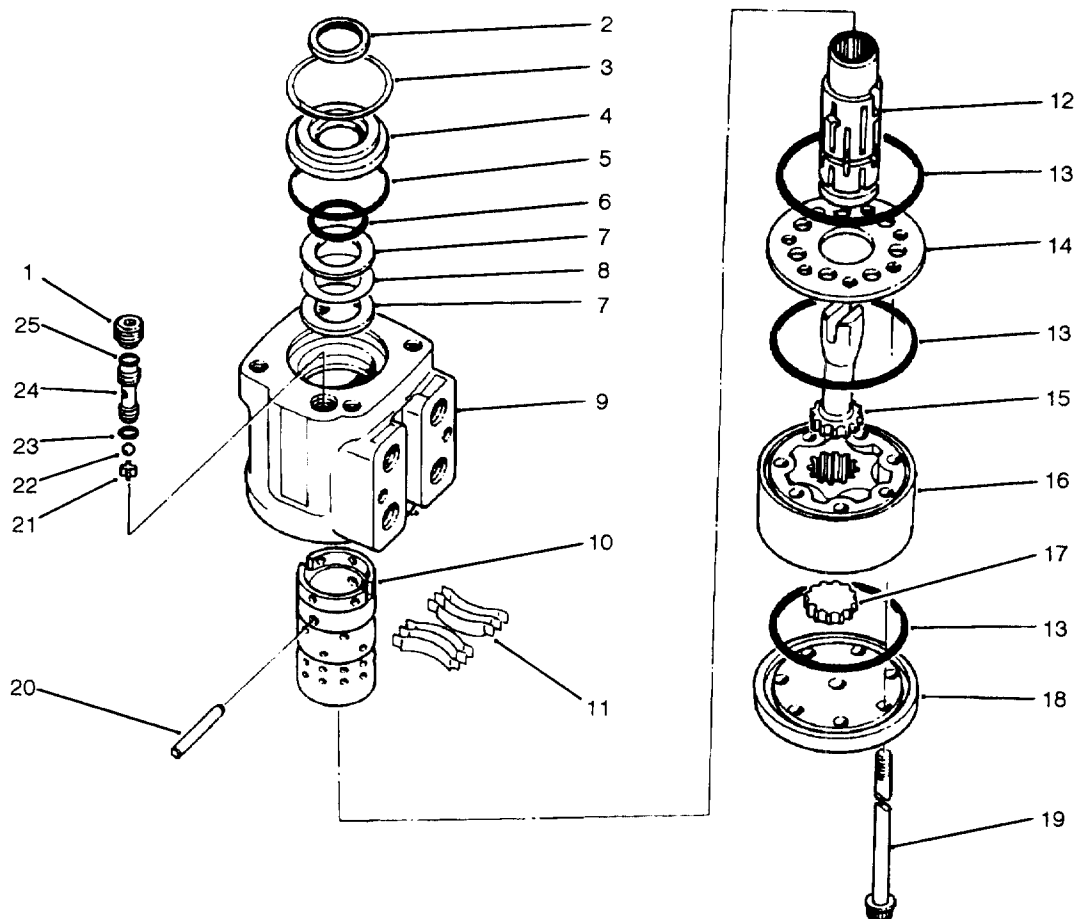

T-1007


POWER STEERING VALVE No. 74-3660

Ref. No.	Part No.	Description	No. Used
1	52-9260	Screw-Set	1
†2		Seal-Dust	1
3	52-9230	Ring-Retaining	1
4	52-9240	Bushing-Seal, Gland	1
†5		Seal	1
†6		Seal-Ring, Quad	1
7	59-6730	Race-Bearing	2
8	59-6740	Bearing-Needle, Thrust	1
†9		Housing	1
†10		Sleeve-Control	1
†11	59-6820	Centering Spring Kit	1
†12		Spool-Control	1
†13		Seal	3
14	59-6850	Plate-Spacer	1
15	59-6860	Drive	1
16	76-6300	Gerotor	1

Ref. No.	Part No.	Description	No. Used
17	76-6320	Spacer	1
18	59-6890	Cap-End	1
19	76-6310	Screw-Cap	7
20	59-6830	Kit-Centering Pin	1
21	52-9290	Retainer-Check Ball	1
22	52-9280	Ball-Check	1
†23		Seal	1
24	52-9270	Seat-Ball, Check	1
†25		Seal	1
*	52-9250	Needle Bearing Kit (Incl. Ref. #7-8)	1
*	76-6330	Control Parts Assembly (Incl. Ref. #9-12 & 20)	1
*	49-0170	Seal Kit (Incl. Ref. #2, 5-6, 13, 23 & 25)	1

*Not Illustrated

†Not Serviceable Separately

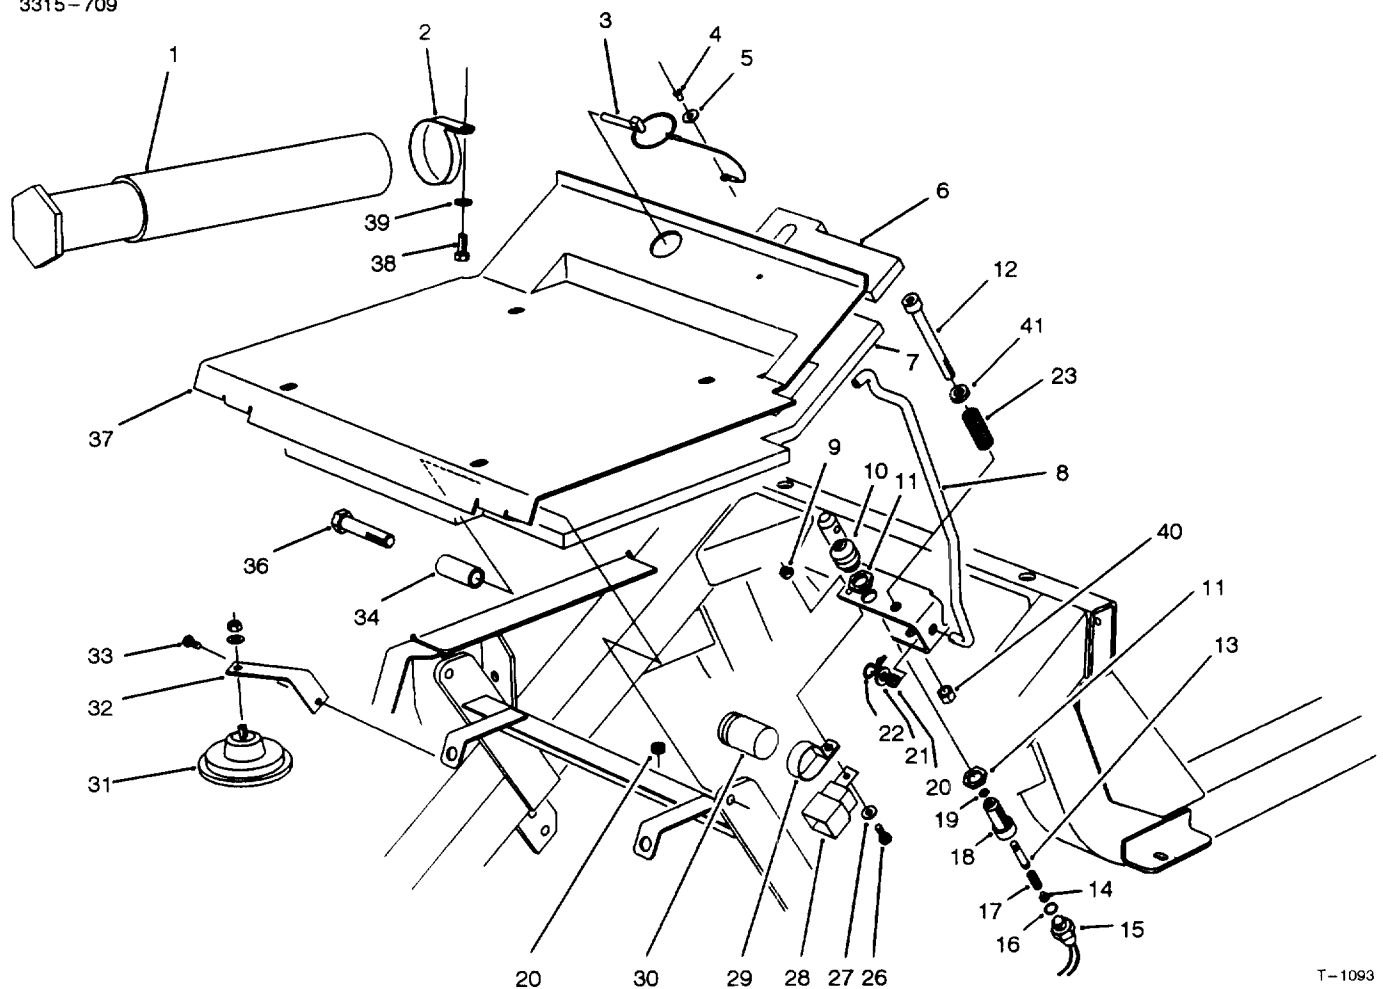


T-1093

SEAT PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube - Manual	1	22	3290-307	Pin - Hair	1
2	2412-133	Clamp - R	2	23	88-1420	Spring - Compression	1
3	77-3780	Pin - Lynch	1	26	321-4	Screw - Cap Hex. Hd.	1
4	3290-282	Rivet - Pop	1	27	3256-22	Washer - Flat	1
5	3256-49	Washer - Flat	1	28	63-7590	Relay - SPDT	1
6	76-9930	Foam - Seat Plate Rear	1	29	2412-74	Clamp - R	1
7	82-4900	Foam - Seat Front	1	30	37-2690	Capacitor	1
8	76-9440	Rod - Seat Prop	1	31	48-4590	Horn	1
9	32128-33	Nut - Lock	1	32	74-8910	Bracket - Horn	1
10	43-8870	Boot - Switch	1	33	32144-4	Screw - Hex. Hd.	1
11	218-461	Nut - Hex	2	34	76-9480	Sleeve - Seat Pivot	2
12	92-2569	Screw - Hex. Socket Hd.	1	36	325-9	Screw - Cap Hex. Hd	2
13	43-8860	Rod - Switch	1	37	76-9460	Plate - Seat	1
14	43-8610	Cap - Switch Spring	1	38	322-2	Screw - Cap Hex. Hd.	2
15	72-4320	Switch - Ball	1	39	3256-23	Washer - Flat	2
16	237-30	Seal - O-Ring	1	40	3296-39	Nut - Lock	1
17	43-8600	Spring - Switch	1	41	80-7730	Spacer	1
18	43-8620	Body - Switch	1	*	43-9071	Seat Switch Assembly (Incl. Ref. #10, 11 & 13-19)	1
19	237-7	Seal - O-Ring	1				
20	237-136	Grommet	2				
21	3256-3	Washer	1				

*Not Illustrated

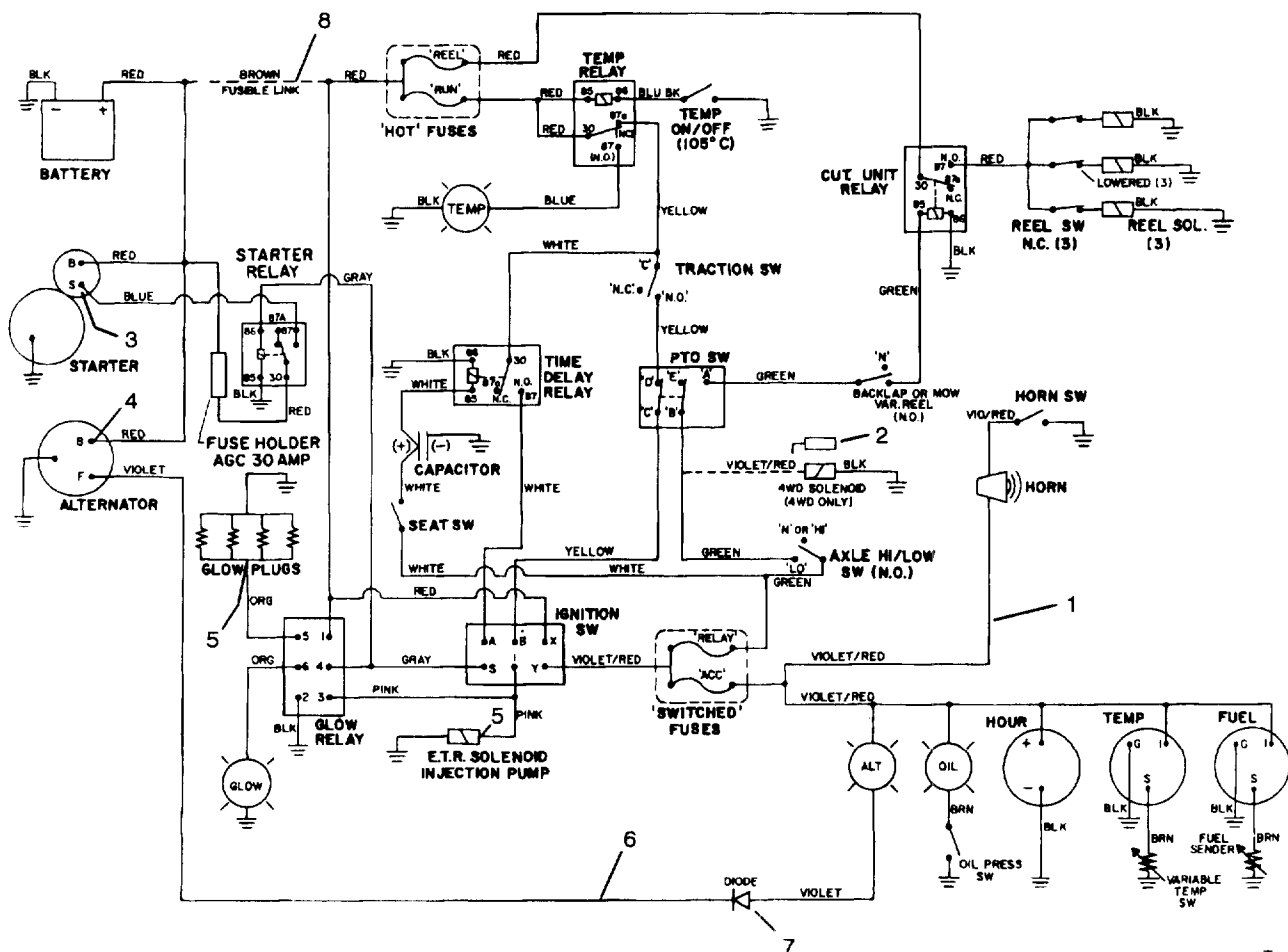


T-1130

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	76-8960	Harness - Wire Reel	1
2	76-4880	Plug - Electrical (Model No. 03600 Only)	1
3	48-7930	Nut - Hex.	1
4	48-7890	Nut - Hex.	1

Ref. No.	Part No.	Description	No. Used
5	48-7880	Nut - Hex.	2
6	86-5820	Harness - Wire Main (Incl. Ref. #7)	1
7	86-7470	Diode	1
8	67-7120	Link - Fusible	1

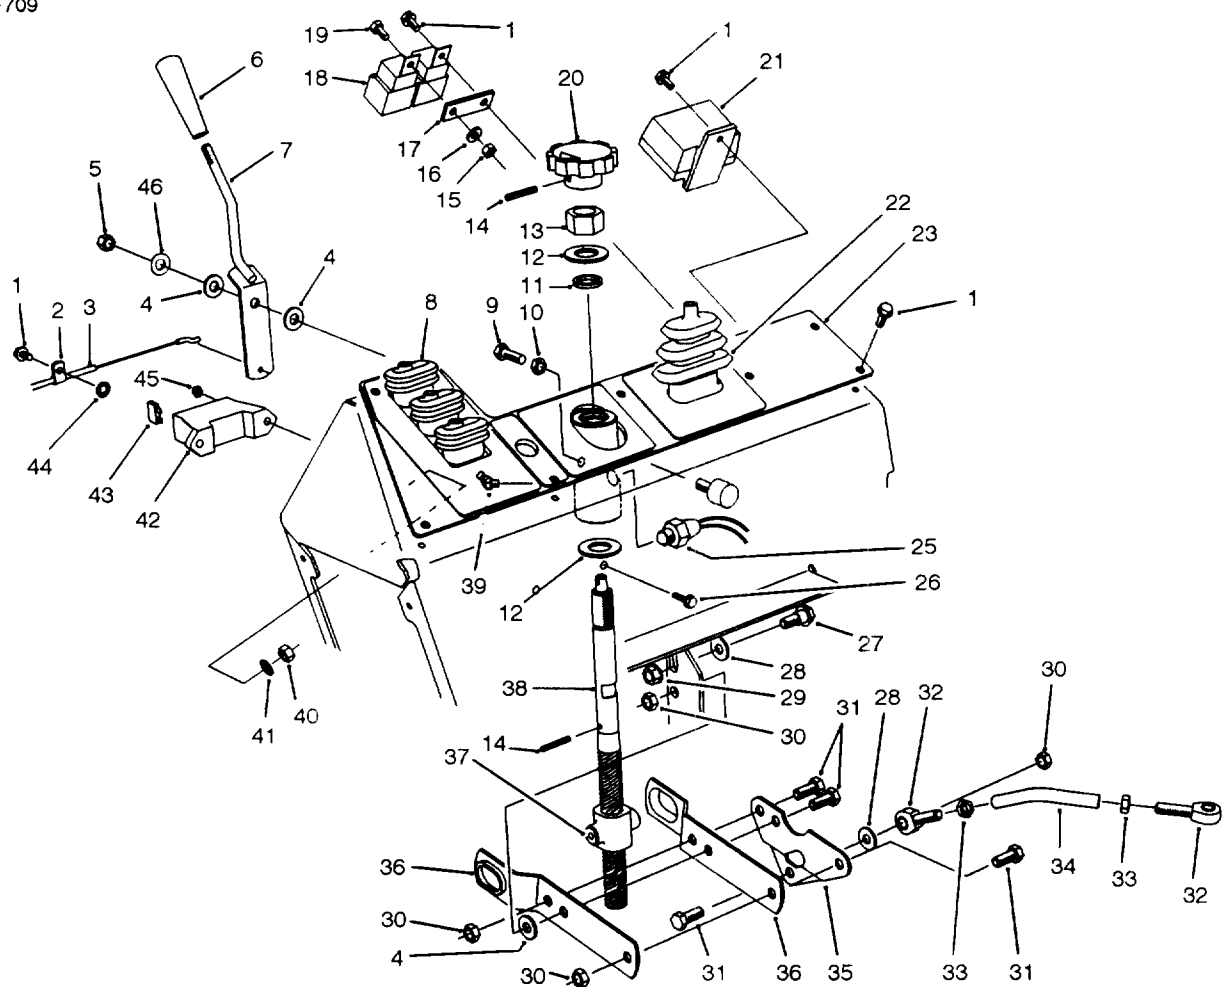


T-1089

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex. Washer Hd.	11
2	2412-32	Clamp - R	1
3	74-5480	Cable - Throttle	1
4	66-2920	Washer - Friction	3
5	3296-41	Nut - Lock	1
6	233-39	Knob - Throttle	1
7	76-4300	Lever - Throttle	1
8	76-8450	Boot - Lift Lever	1
9	322-5	Screw - Cap Hex. Hd.	1
10	3218-2	Nut - Jam	1
11	253-84	Seal - Oil	1
12	3256-28	Washer - Flat	2
13	3296-51	Nut - Lock	1
14	32121-6	Pin - Roll	2
15	3296-42	Nut - Lock	1
16	3256-78	Washer - Flat	1
17	77-3970	Support - Relay	1
18	63-7590	Relay - SPDT	2
19	321-2	Screw - Cap Hex. Hd.	1
20	59-7130	Knob - Reel Speed	1
21	76-5260	Relay - Glow Plug	1
22	76-8440	Boot - Throttle	1
23	76-8710	Panel - Console	1
25	72-4320	Switch - Ball	1

Ref. No.	Part No.	Description	No. Used
26	3290-126	Screw - Hex. Washer Hd.	2
27	67-0870	Bolt - Shoulder	1
28	3256-3	Washer - Flat	2
29	3290-357	Nut - Flange Lock	1
30	3296-59	Nut - Lock	4
31	323-6	Screw - Cap Hex. Hd.	4
32	2411-36	Eye - Rod	2
33	3220-3	Nut - Jam	2
34	82-5160	Rod - Reel Lever	1
35	82-5250	Plate - Adapter	1
36	76-9090	Arm - Reel Speed	2
37	37-0500	Follower - Reel Speed	1
38	76-4100	Shaft - Reel Speed	1
39	302-11	Fitting - Grease	1
40	3296-47	Nut - Lock	1
41	3255-8	Washer - Lock E.T.L.W.	1
42	67-7160	Block - Fuse	1
43	218-573	Fuse - 5A	2
*	218-581	Fuse - 15A	1
*	218-593	Fuse - 30A	1
44	3255-7	Washer - E.T.L.W.	1
45	3296-12	Nut - Lock	2
46	3256-24	Washer - Flat	1

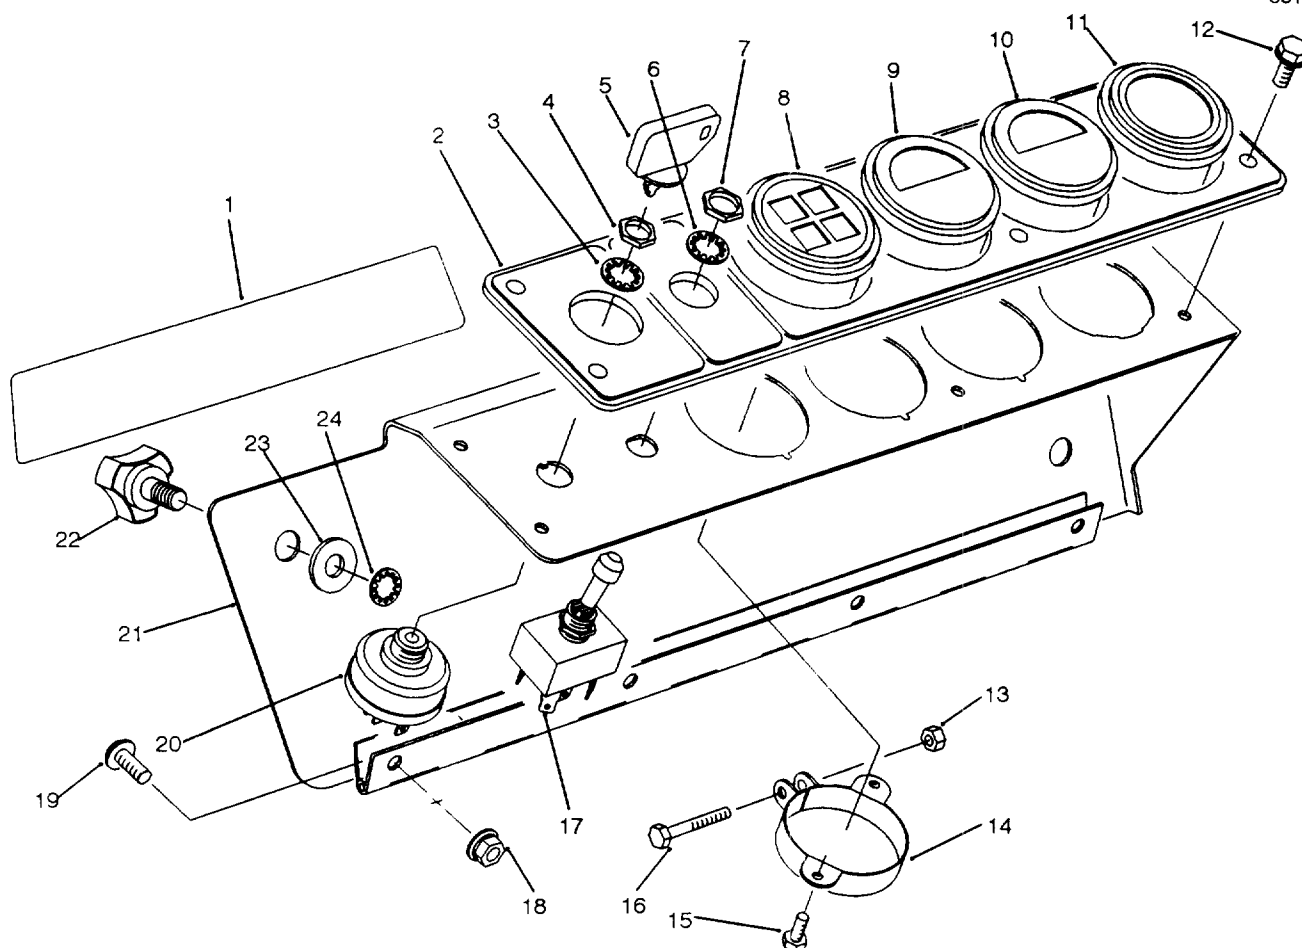


T-1517

GAGE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-9780	Decal - 4 Matic (Model 03601 Only)	1	12	32144-4	Screw - Hex. Washer Hd.	6
2	76-8700	Panel - Gauge	1	13	3296-2	Nut Lock	1
3	218-447	Washer - Lock	1	14	69-4780	Clamp - Gauge	1
4	218-446	Nut - Hex.	1	15	32144-19	Screw - Hex. Hd.	2
5	62-7770	Key - Ignition	1	16	32105-12	Screw - Hex. Hd.	1
6	3254-20	Washer - Lock I.T.L.W.	1	17	85-4980	Switch - Toggle	1
7	218-500	Nut - Hex.	1	18	32128-33	Nut - Flange Lock	4
8	66-2960	Cluster - Warning Light	1	19	3274-68	Screw - Socket Button Hd.	4
*	76-8950	Harness - Wire (Lamp)	1	20	27-2360	Switch - Ignition	1
*	219-17	Bulb - Warning Light	4	21	82-3750	Cover - Console	1
9	76-9060	Gauge - Temperature	1	22	77-3620	Retainer - Cover	2
10	66-2940	Gauge - Fuel	1	23	3256-3	Washer	2
11	66-2950	Meter - Hour	1	24	32151-72	Retainer - Push-On	2


*Not Illustrated

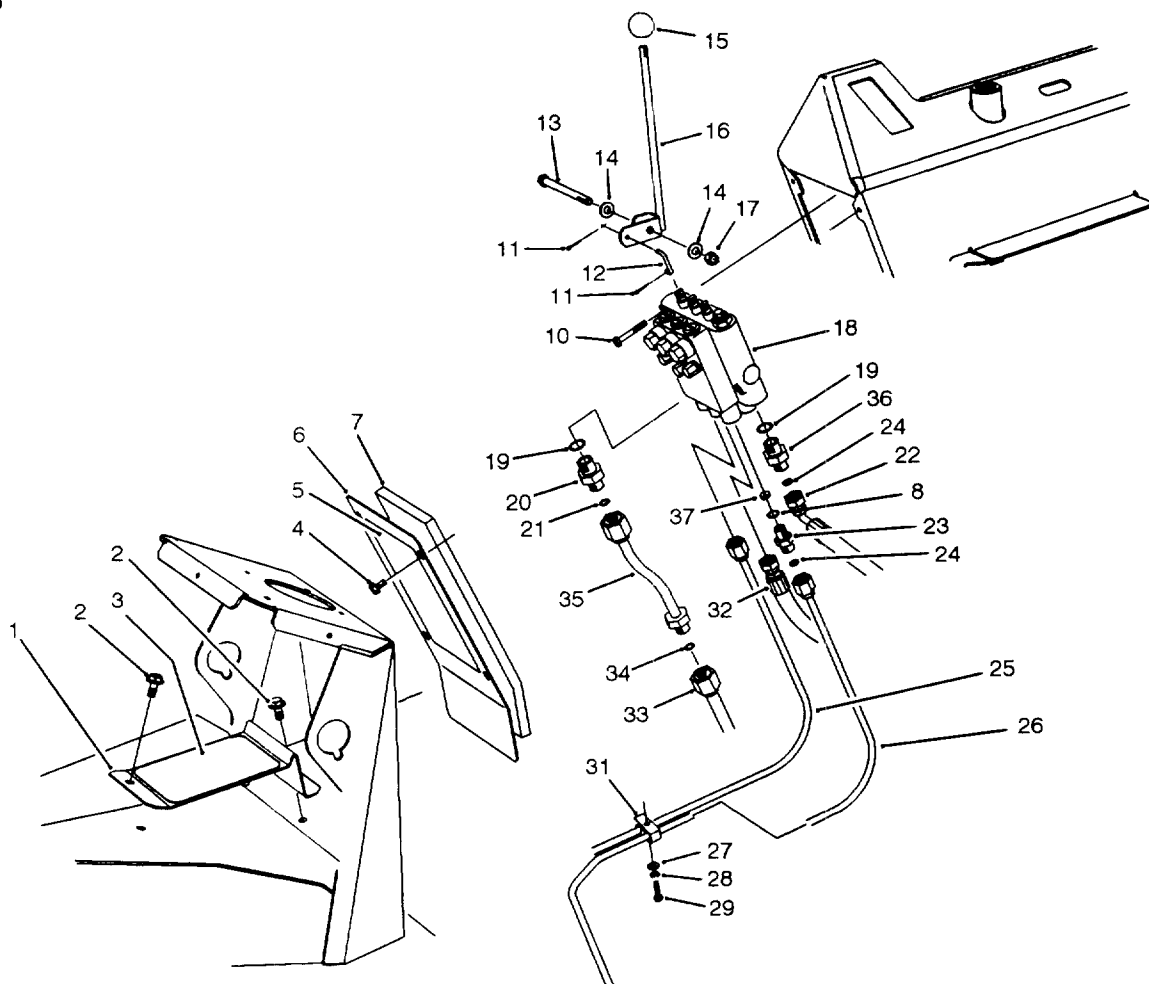

T-1135

LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-5300	Support - Heel	1	18	92-1398	Lift Valve Assembly	1
2	32144-11	Screw	2	19	237-79	Seal - O-Ring	2
3	76-7040	Pad - Foot	1	20	340-4	Fitting - Hydraulic Straight (Incl. Ref. #19 & 21)	1
4	46-6810	Screw - Hex. Washer Hd.	4	21	237-30	Seal - O-Ring	1
5	82-4870	Decal - Service (Model No. 03600)	1	22	84-0850	Hose - Hydraulic	1
*	82-4880	Decal - Service (Model No. 03601)	1	23	340-2	Fitting - Hydraulic Straight (Incl. Ref. #8 & 24)	3
6	76-7090	Cover - Console	1	24	237-22	Seal - O-Ring	4
7	76-6270	Foam - Cover	1	25	74-6310	Tube - Hydraulic	1
8	237-42	Seal - O-Ring	5	26	74-6300	Tube - Hydraulic	1
9	353-508	Fitting - Hydraulic Plug (Incl. Ref. #8)	2	27	3256-22	Washer - Flat	1
10	321-10	Screw - Cap Hex. Hd.	2	28	3253-3	Washer - Lock	1
11	3272-1	Pin - Cotter	6	29	321-8	Screw - Cap Hex. Hd.	1
12	69-9140	Link - Lift Lever	3	31	58-3880	Clamp - Tube	1
13	323-17	Screw - Cap Hex. Hd.	1	32	76-9900	Hose - Hydraulic	1
14	3256-24	Washer - Flat	2	33	74-6380	Tube - Hydraulic	1
15	233-42	Knob	3	34	237-65	Seal - O-Ring	1
16	74-6060	Lever - Lift Control R.H.	1	35	82-3680	Counterbalance Tube Assy.	1
*	74-6050	Lever - Lift Control Mid.	1	36	340-3	Fitting - Hydraulic Straight (Incl. Ref. #19 & 24)	1
*	69-7010	Lever - Lift Control L.H.	1	37	84-6400	Orifice	3
17	3296-39	Nut - Lock	1				

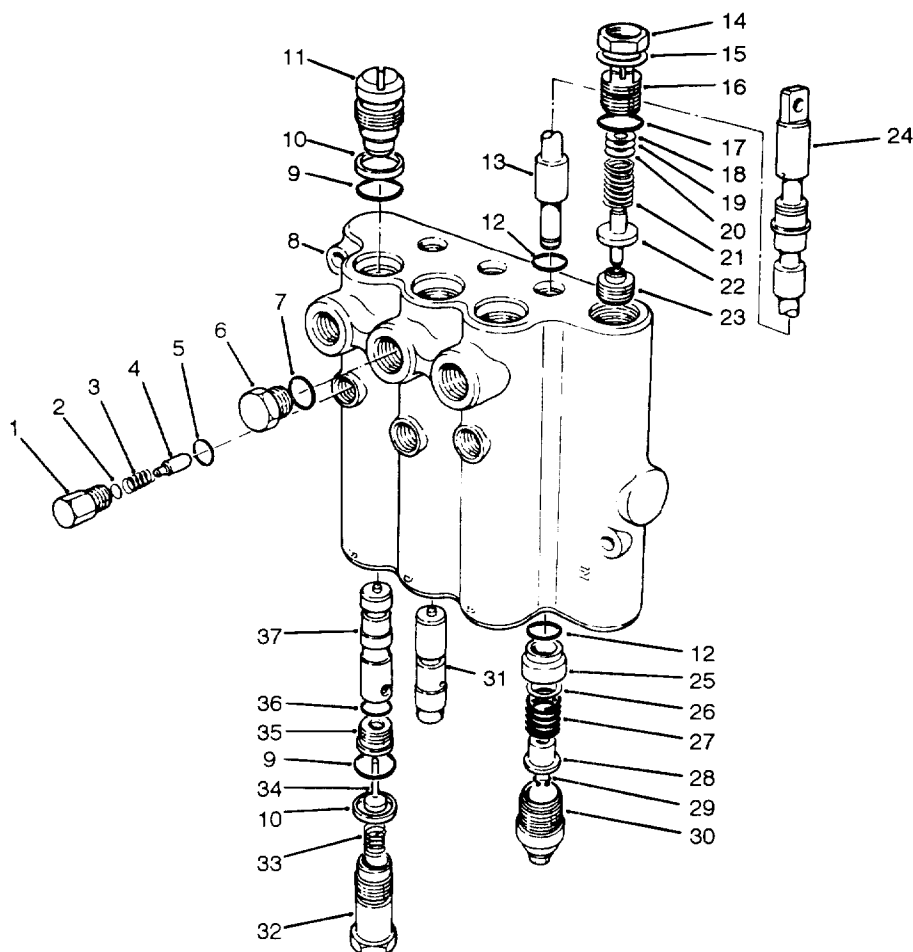


T-0379

LIFT VALVE ASSEMBLY NO. 92-1398

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	58-6780	Plug Assembly (Incl. Ref. #5)	3	20	58-6490	Washer	A/R
2	60-6450	Disc	A/R	21	92-2567	Spring	1
3	58-6760	Spring	3	22	92-2568	Poppet	1
4	58-6770	Plunger - Detent	3	†23		Seat	1
5	58-6790	Seal - O-Ring	3	24	58-6320	Wiper - Seal	3
6	353-508	Plug Assembly (Incl. Ref. #7)	3	25	58-6400	Bushing	3
7	58-6720	Seal - O-Ring	3	26	58-6700	Washer	3
†8		Body	1	27	58-6730	Spring	3
9	60-5720	Seal - O-Ring	6	28	58-6310	Spacer	3
10	58-6370	Washer - Back-Up	6	29	58-6460	Ring - Retaining	3
11	58-6350	Plug Assembly (Incl. Ref. #9-10)	3	30	58-6420	Cap Assembly	3
12	58-6450	Seal - O-Ring	6	31	84-6430	Plunger	1
†13		Spool	3	32	69-1800	Plug Assembly (Incl. Ref. #9-10)	3
†14		Nut - Lock	1	33	69-1810	Spring	3
†15		Washer	1	34	58-6290	Poppet Assembly	3
16	69-1830	Plug Assembly (Incl. Ref. #14, 15 & 17)	1	35	58-6330	Seat Assy. (Incl. Ref. #36)	3
17	58-6750	Seal - O-Ring	1	36	58-6340	Seal - O-Ring	3
18	58-6470	Washer	A/R	37	84-6420	Plunger	2
19	58-6480	Washer	A/R	*	60-3780	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 12, 17, 24, 29, 34, & 36)	1

*Not Illustrated


†Not Serviceable Separately

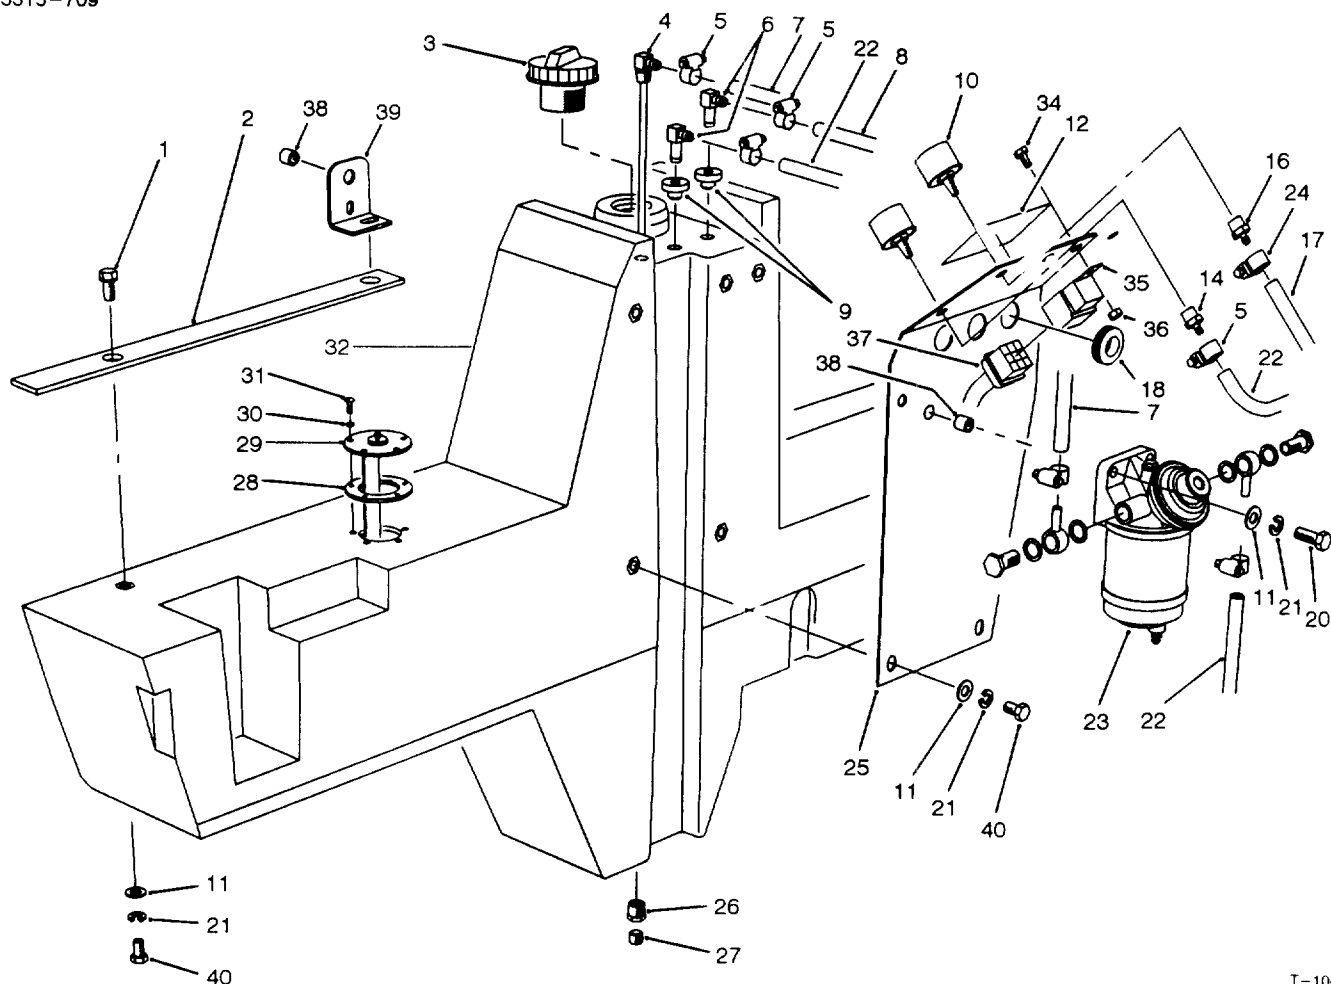

T-1088

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-12	Screw - Hex. Washer Hd.	2	23	76-5200	Fuel Filter Assembly	1
2	76-9790	Foam - Fuel Tank	1	24	2412-36	.Clamp - Hose	1
3	70-8621	Cap - Fuel	1	25	14-0859	Fuel Tank Plate Assembly (Incl. Ref. #38)	1
4	76-6600	Pipe - Stand	1	26	2812-1	Fitting - Reducing Bushing	1
5	2412-108	Clamp - Hose	6	27	285-22	Plug - Pipe	1
6	46-6550	Fitting - Fuel 90°	2	28	62-7650	Gasket - Sending Unit	1
7	63-7626	Hose - Fuel	1	29	74-5860	Sending Unit - Fuel	1
8	63-7627	Hose - Fuel	1	30	3253-15	Washer - Lock	5
9	46-6560	Bushing - Rubber	2	31	32122-24	Screw - Round Hd.	5
10	68-6150	Breather	2	32	74-5580	Tank - Fuel	1
11	3256-24	Washer - Flat	9	34	321-2	Screw - Cap Hex. Hd.	1
12	76-8780	Decal - Fuel	1	35	70-1480	Relay - Starter	1
14	354-95	Fitting - Barb	1	36	3296-42	Nut - Lock	1
16	354-94	Fitting - Barb	1	37	77-4200	Harness - Wire Relay	1
17	74-9122	Hose - Vent	1	38	32148-10	Insert - Threaded	3
18	240-6	Grommet	3	39	82-3660	Bracket - Cover	1
20	323-7	Screw - Cap Hex. Hd.	2	40	323-4	Screw - Cap Hex. Hd.	7
21	3253-21	Washer - Lock	9				
22	63-7622	Hose - Fuel	2				

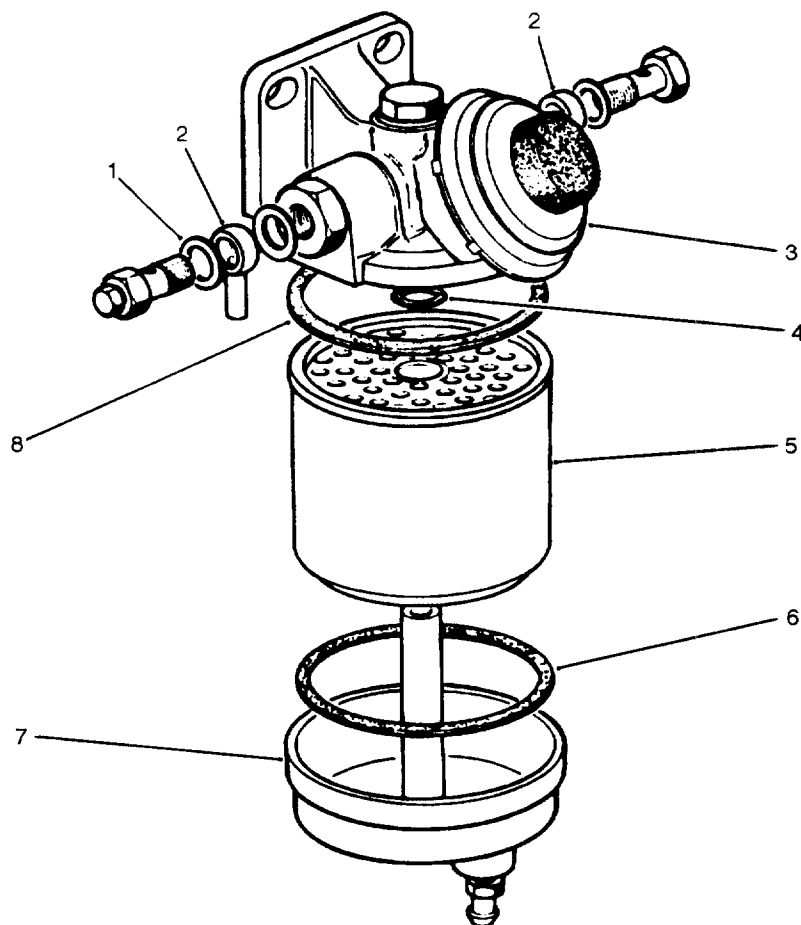


T-0966


FUEL FILTER ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer - Copper	4	5	76-5220	Element - Filter (Incl. Ref. #4, 6 & 8)	1
2	76-5190	Fitting - Adjustable	2	6		Seal - Gasket	1
3	76-5200	Fuel Filter Assembly (Incl. Ref. #7)	1	7		Cap - Fuel Filter	1
4		Seal - O-Ring	1	8		Seal - Gasket	1

HYDRAULIC SCHEMATIC (Model No. 03600)

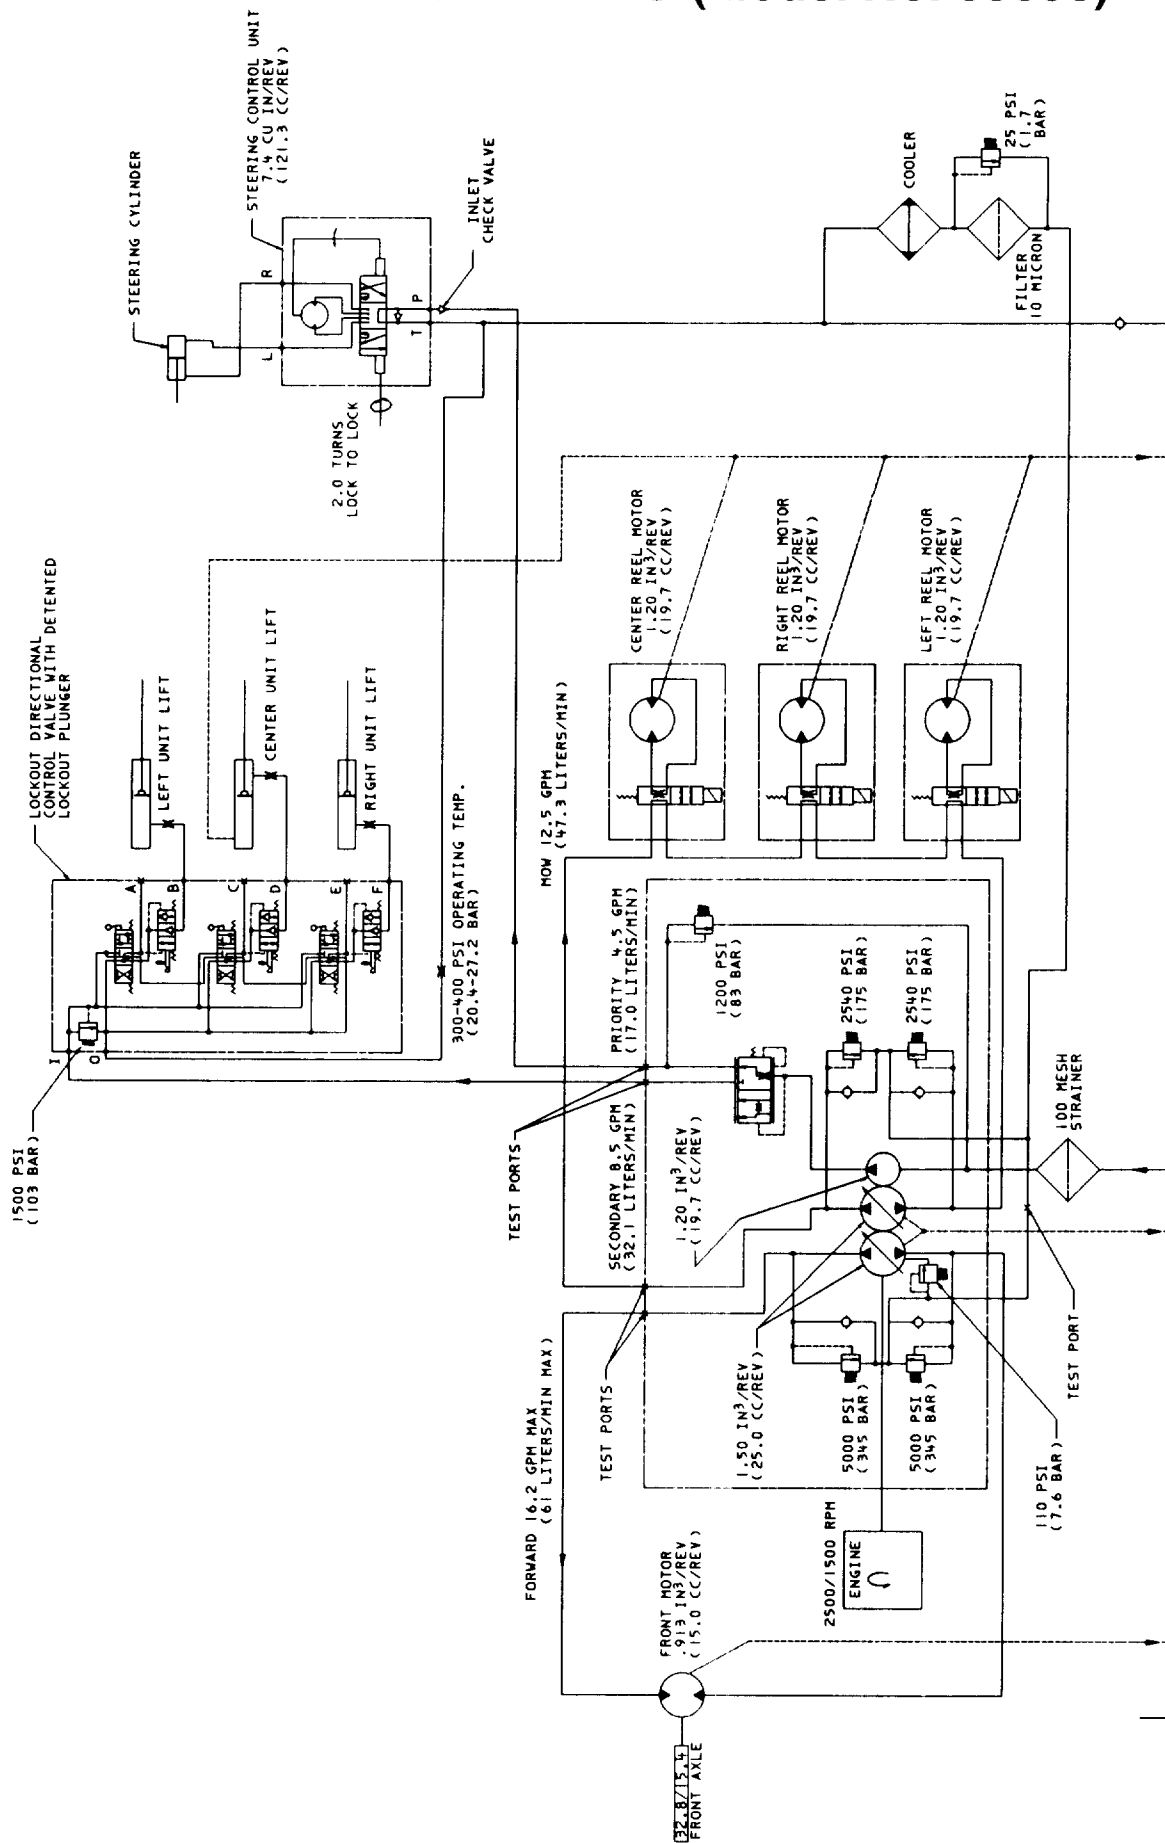

HYDRAULIC SCHEMATIC (Model No. 03601)

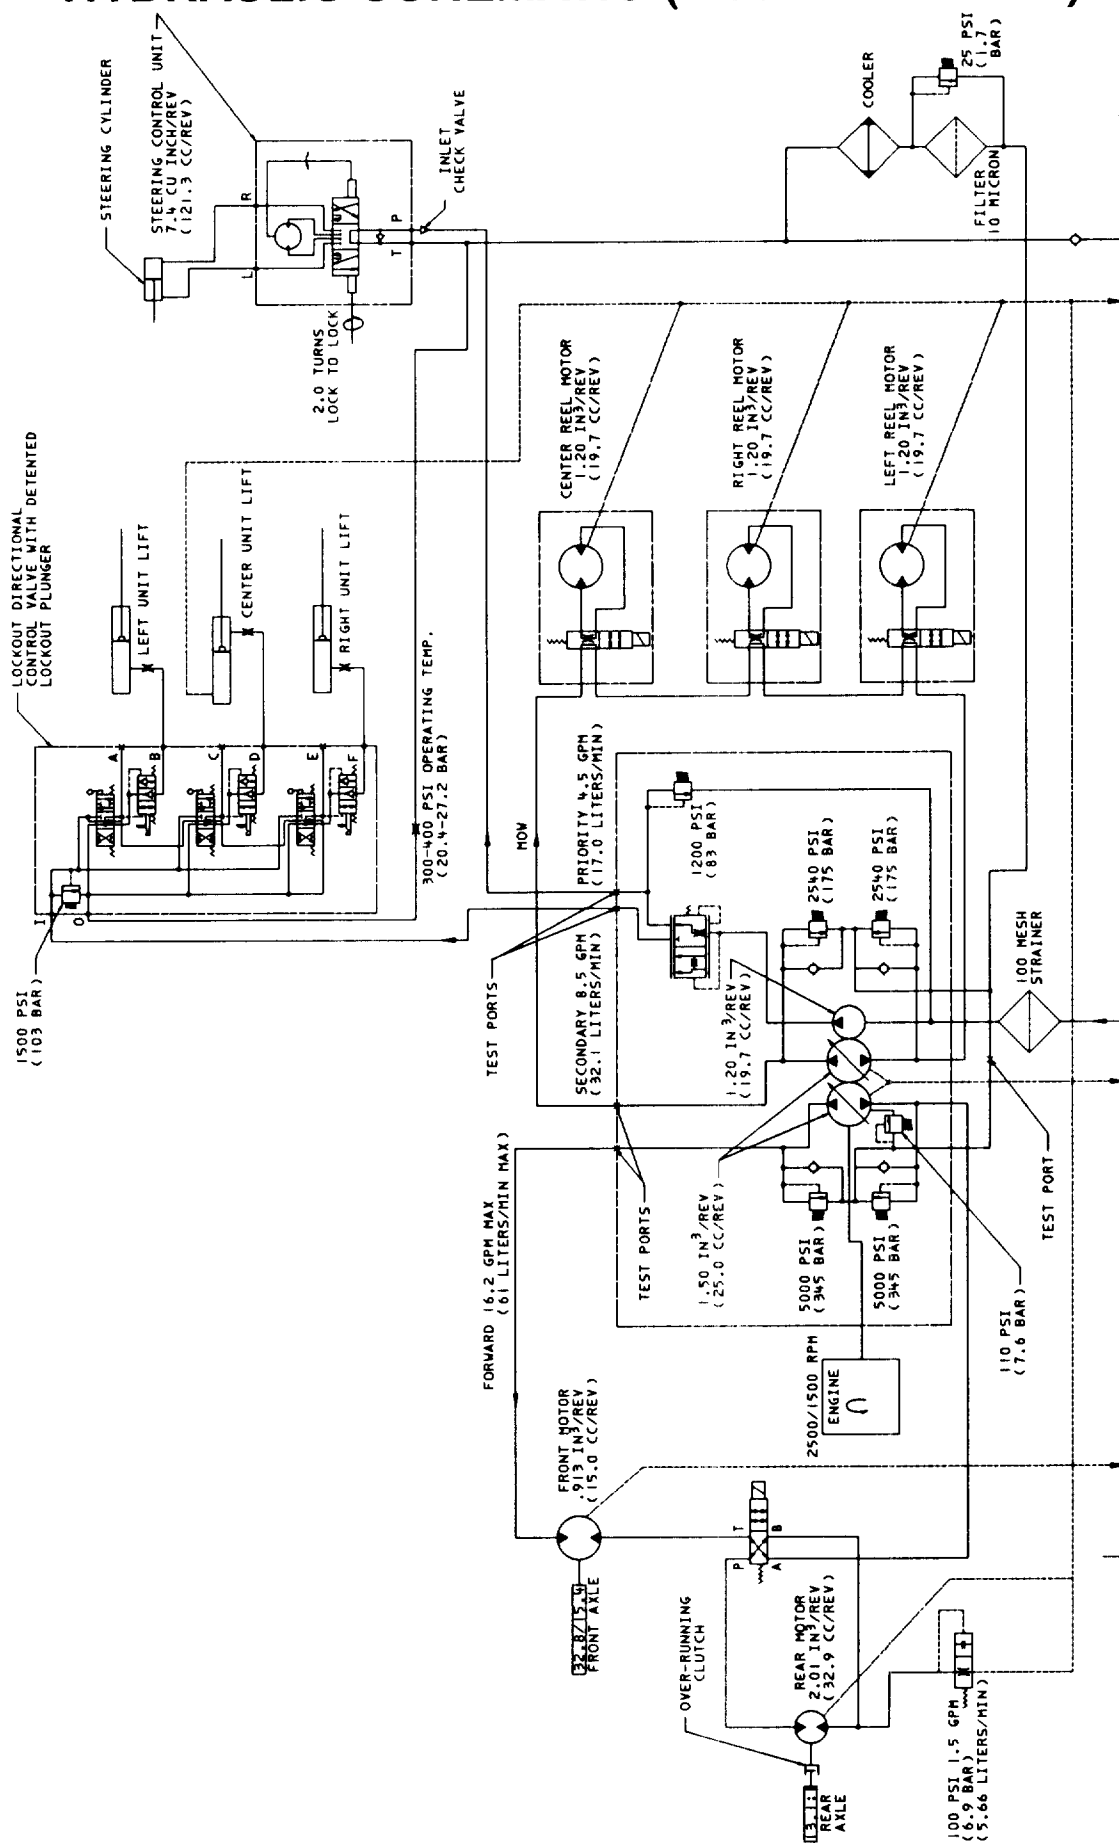

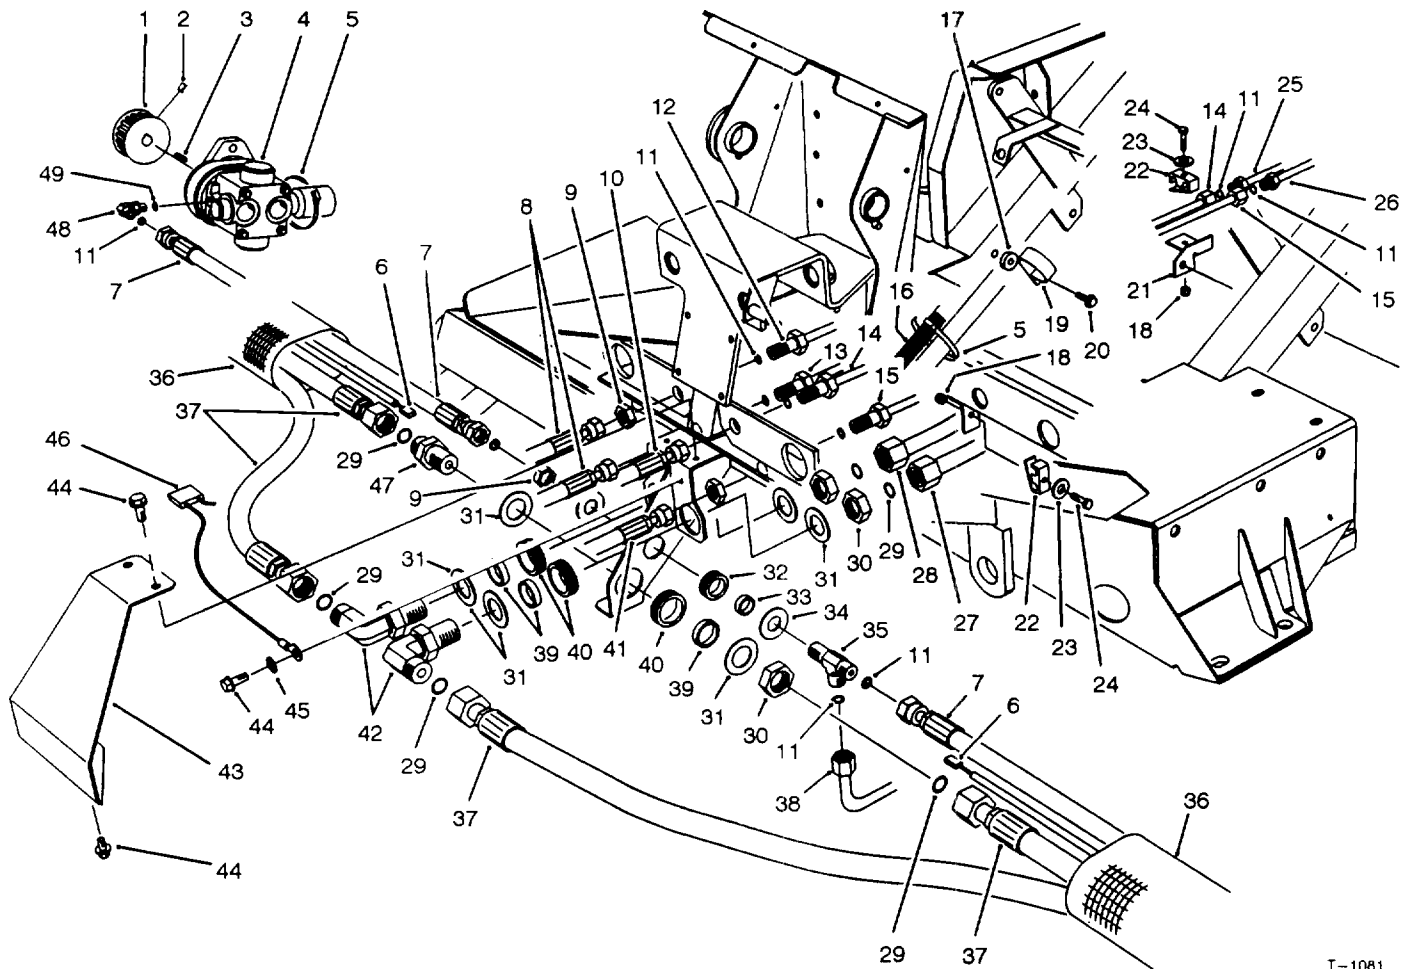


T-1081

FRONT HYDRAULIC ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-7150	Pulley - Reel Drive	2
2	3246-17	Screw - Set	4
3	47-2380	Key - Square	2
4	74-3390	Motor - Reel	2
5	3290-378	Tie - Cable	3
6	76-8980	Harness - Wire (Reel)	2
7	76-8210	Hose - Hydraulic	2
8	76-8220	Hose - Hydraulic	2
9	340-70	Nut - Bulkhead	5
10	76-9570	Hose - Hydraulic	1
11	237-22	Seal - O-Ring	11
12	74-6300	Tube - Hydraulic (Incl. Ref. #11)	1
13	74-6310	Tube - Hydraulic (Incl. Ref. #11)	1
14	74-6250	Tube - Hydraulic (Incl. Ref. #11)	1
15	74-6240	Tube - Hydraulic (Incl. Ref. #11)	1
16	76-8860	Harness - Wire (Main)	1
17	77-4060	Spacer	2
18	3296-42	Nut - Lock	2
19	2412-126	Clamp - R	2
20	32144-26	Screw - Hex. Washer Hd.	2
21	74-6470	Bracket - Clamp	1
22	58-3880	Clamp - Hose	2

Ref. No.	Part No.	Description	No. Used
23	3256-22	Washer	2
24	321-8	Screw - Cap Hex. Hd.	2
25	74-6270	Tube - Hydraulic (Incl. Ref. #11)	1
26	74-6260	Tube - Hydraulic (Incl. Ref. #11)	1
27	74-6350	Tube - Hydraulic	1
28	74-6210	Tube - Hydraulic	1
29	237-65	Seal - O-Ring	6
30	340-74	Nut - Bulkhead	3
31	69-9010	Washer	6
32	240-4	Grommet	1
33	69-8970	Spacer	1
34	69-8940	Washer	2
35	340-120	Fitting - Hydraulic Tee (Incl. Ref. #11)	1
36	59-7260	Sleeve - Protective	2
37	76-8170	Hose - Hydraulic	4
38	74-6360	Tube - Hydraulic	1
39	69-9000	Spacer	3
40	240-3	Grommet	3
41	76-9560	Hose - Hydraulic	1
42	340-72	Fitting - Hydraulic 90° (Incl. Ref. #29)	2
43	74-4970	Guard - Bulkhead	1
44	46-6810	Screw - Hex. Washer Hd.	4

*Not Illustrated

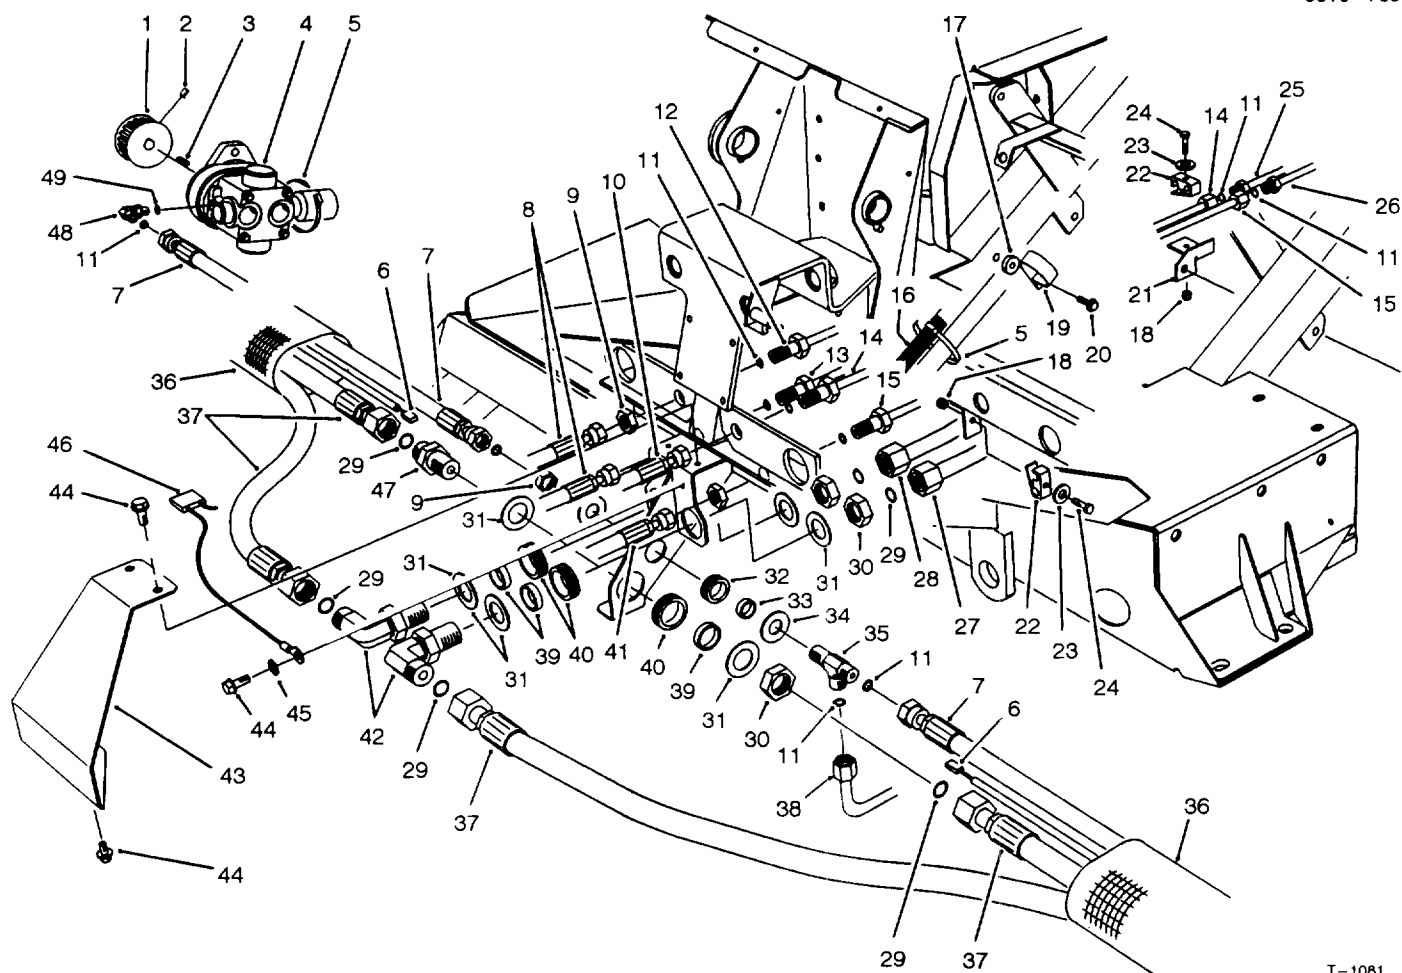


T-1081

FRONT HYDRAULIC ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	3255-8	Washer - E.T.L.W.	1
46	76-8960	Harness - Wire Reel	1
47	340-76	Fitting - Hydraulic Straight (Incl. Ref. #29)	1

Ref. No.	Part No.	Description	No. Used
48	340-77	Fitting - Hydraulic 90° (Incl. Ref. #11 & 49)	2
49	237-42	Seal - O-Ring	2

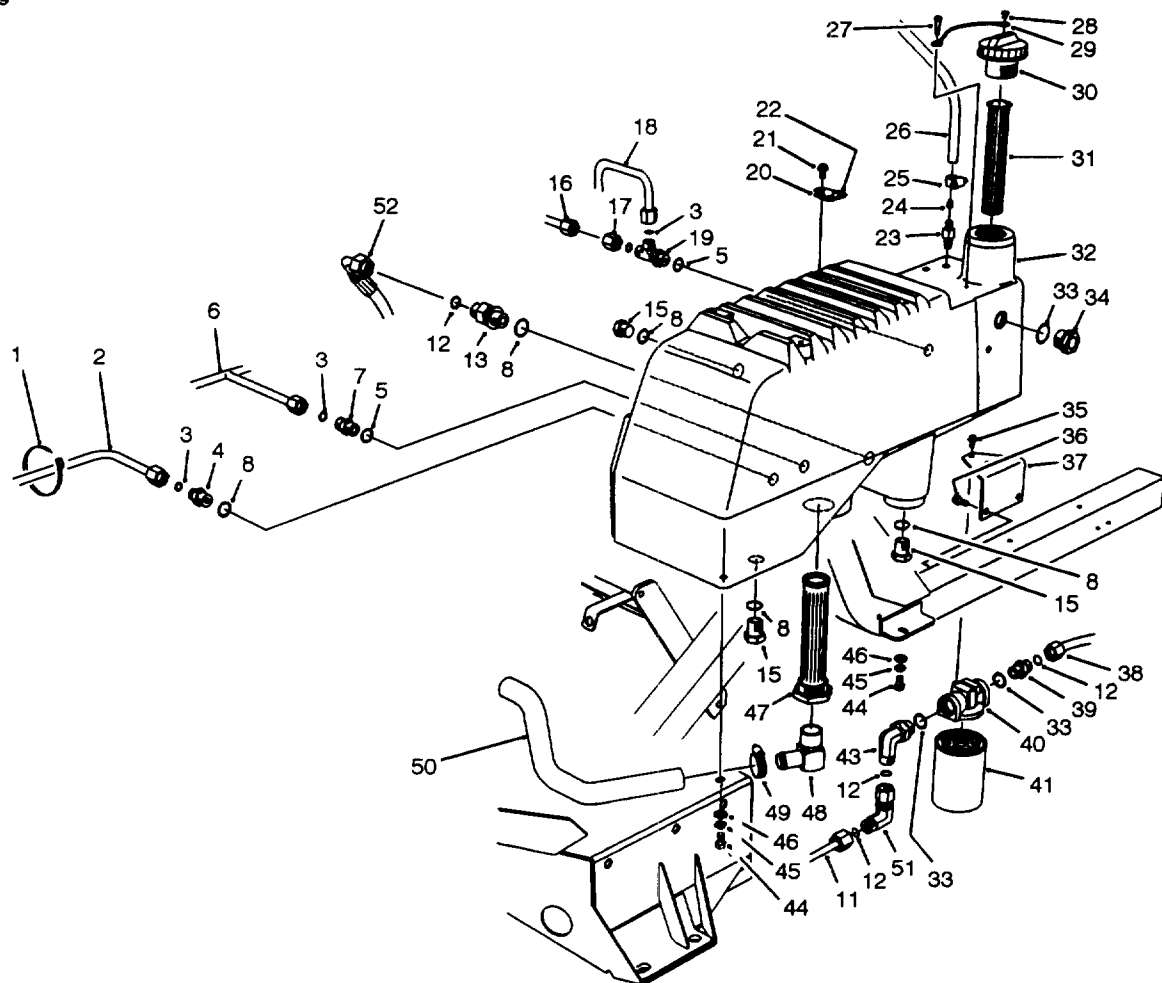


T-1092

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-378	Tie - Cable	1	24	74-4080	Orifice - Breather	1
2	74-6220	Tube - Hydraulic	1	25	2412-36	Clamp - Hose	1
3	237-30	Seal - O-Ring	4	26	74-9122	Hose - Return	1
4	340-6	Fitting - Hydraulic Straight (Incl. Ref. #3 & 8)	1	27	57-5420	Screw - Shoulder	1
5	237-79	Seal - O-Ring	2	28	2410-73	Pin - Tether	1
6	74-6380	Tube - Hydraulic	1	29	75-0540	Tether - Reservoir Cap	1
7	75-9550	Valve - Check (Incl. Ref. #3 & 5)	1	30	70-8640	Cap - Hydraulic Reservoir	1
8	237-80	Seal - O-Ring	5	31	61-2790	Screen - Fill	1
11	84-0900	Hose - Hydraulic	1	32	82-3700	Reservoir - Hydraulic	1
12	237-65	Seal - O-Ring	4	33	237-81	Seal - O-Ring	3
13	340-7	Fitting - Hydraulic Straight (Incl. Ref. #8 & 12)	1	34	69-1170	Gauge - Sight (Incl. Ref. #23)	1
15	353-551	Plug (Incl. Ref. #8)	3	35	3234-13	Screw - Hex. Washer Hd.	2
16	74-6230	Tube - Hydraulic (Model No. 03601 Only)	1	36	32144-11	Screw - Hex. Washer Hd.	2
17	340-152	Cap - Hydraulic (Model No. 03600 Only)	1	37	74-4230	Bracket - Oil Filter	1
18	74-6370	Tube - Hydraulic	1	38	74-6400	Tube - Hydraulic	1
19	340-109	Fitting - Hydraulic Tee (Incl. Ref. #3 & 5)	1	39	340-8	Fitting - Hydraulic Straight (Incl. Ref. #12 & 23)	1
20	76-9950	Bracket - Ring	4	40	86-3000	Head - Hydraulic Filter	1
21	32144-4	Screw - Hex. Washer Hd.	2	41	86-3010	Element - Hydraulic Filter	1
22	249-49	Ring - D	4	43	340-139	Fitting - Hydraulic 90° (Incl. Ref. #12 & 23)	1
23	354-103	Fitting - Straight	1	44	323-4	Screw - Cap Hex. Hd.	3
				45	3253-21	Washer - Lock	3
				46	3256-24	Washer - Flat	3
				47	75-0550	Strainer - Tank	1

*Not Illustrated

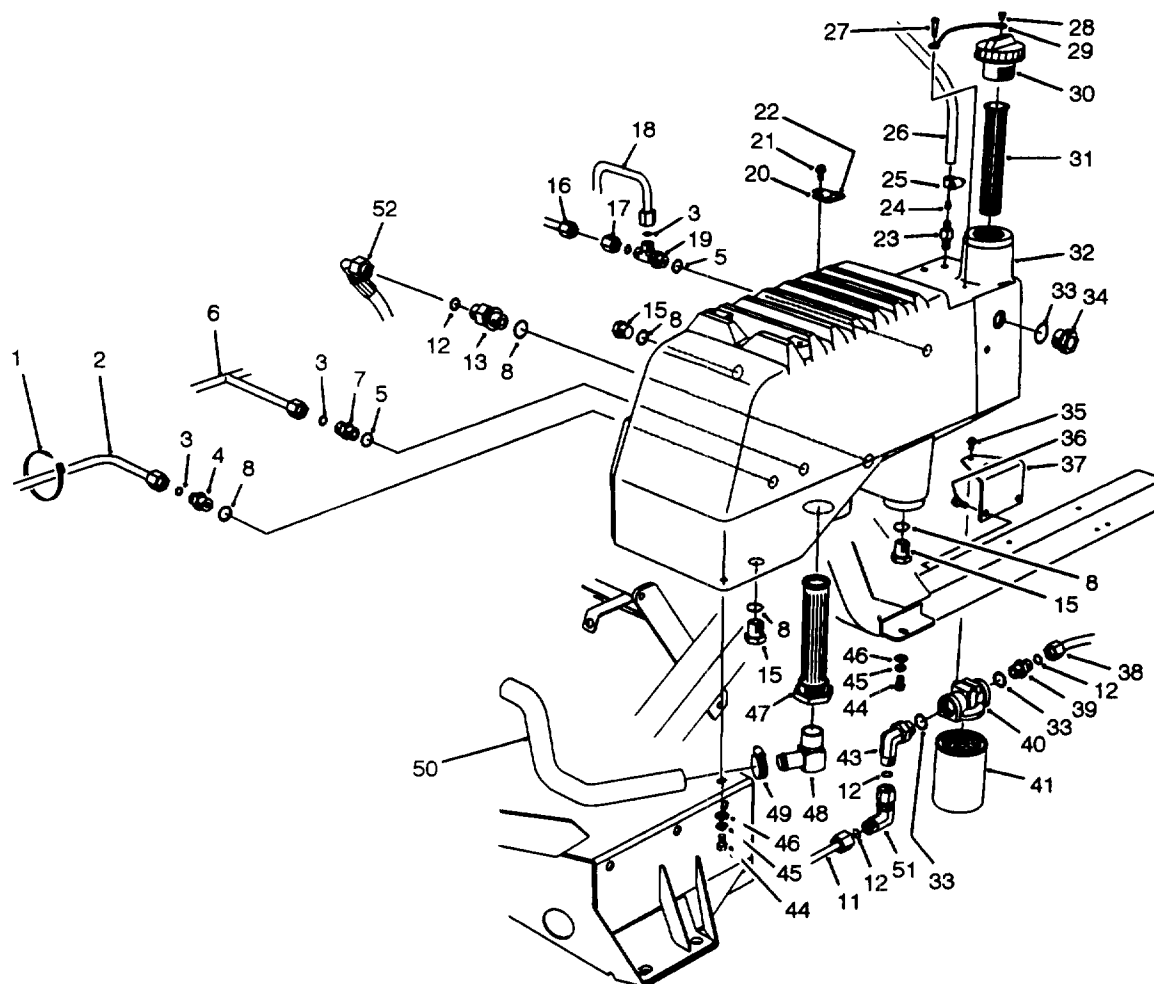


T-1092

HYDRAULIC RESERVOIR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	354-87	Fitting - Hydraulic 90°	1
49	2412-34	Clamp - Hose	1
50	82-5110	Hose - Suction	1

Ref. No.	Part No.	Description	No. Used
51	340-160	Fitting - Hydraulic 90° (Incl. Ref. #12)	1
52	92-1378	Hose - Hydraulic	1

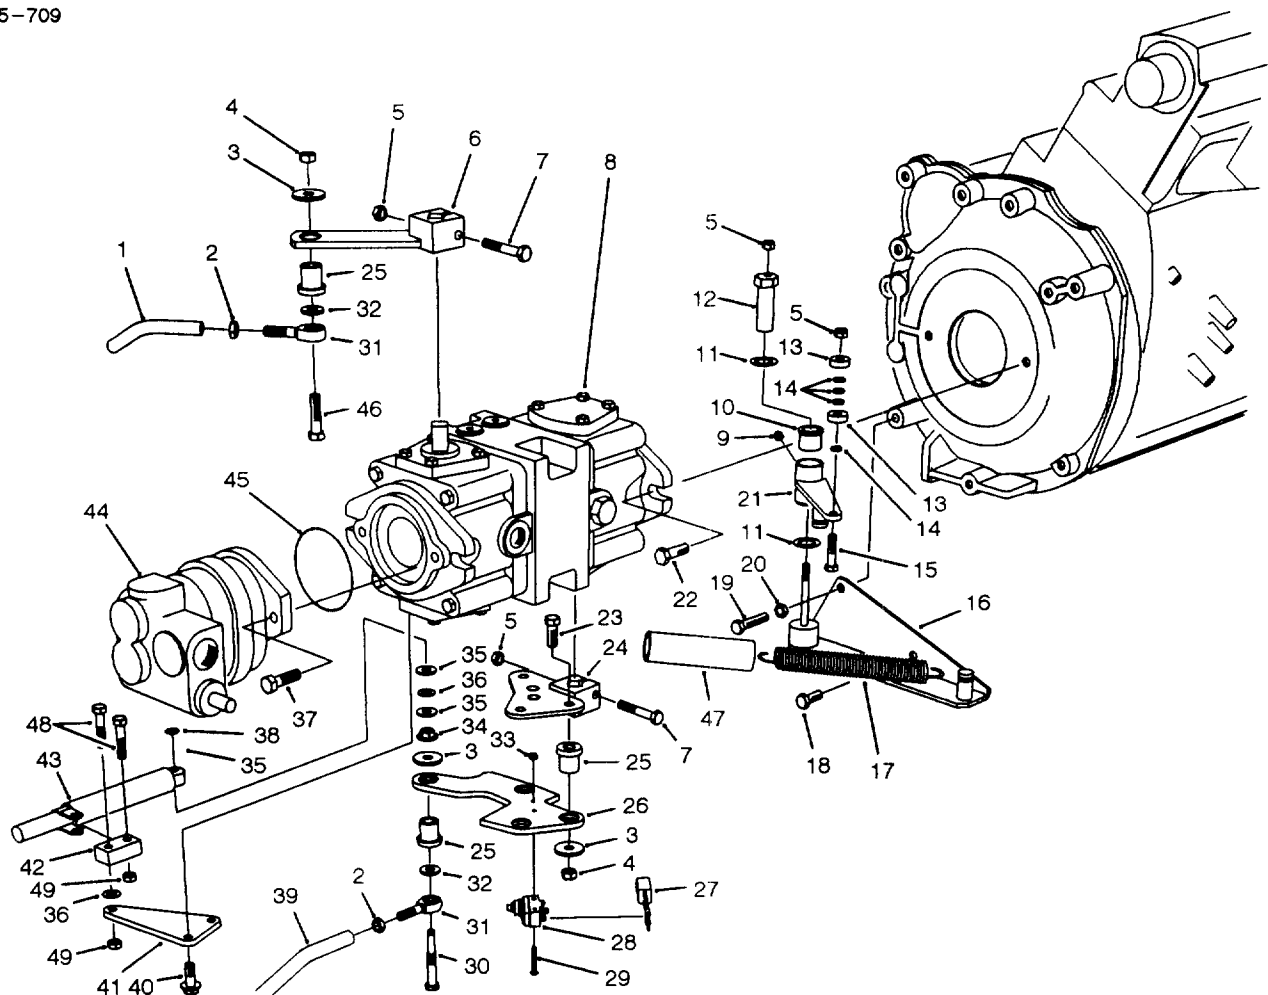


T-1085

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5160	Rod - Reel Lever	1
2	3220-3	Nut - Jam	2
3	63-8410	Washer	5
4	3296-59	Nut - Lock	4
5	3296-29	Nut - Lock	4
6	82-5130	Lever - Reel	1
7	322-10	Screw - Cap Hex. Hd.	2
8	82-5100	Tandem Pump Assembly	1
9	302-5	Fitting - Grease	1
10	256-113	Bushing - Flange	2
11	3-6498	Washer	2
12	76-8640	Stud - Traction	1
13	251-259	Bearing - Ball	2
14	75-5470	Washer	4
15	322-7	Screw - Cap Hex. Hd.	1
16	82-5270	Bracket - Spring	1
17	76-9430	Spring - Extension	1
18	323-6	Screw - Cap Hex. Hd.	1
19	57-3210	Screw - Hex. Hd.	1
20	3217-7	Nut - Hex.	1
21	92-2581	Arm - Neutral Switch	1
22	82-5050	Screw - Cap Hex. Hd.	2
23	323-29	Screw - Cap Hex. Hd.	3
24	82-5180	Control - Pump	1
25	63-9751	Mount - Rubber	5

Ref. No.	Part No.	Description	No. Used
26	82-5170	Plate - Pump Control	1
27	72-3790	Wire - Neutral Switch	1
28	29-6163	Switch - Micro	1
29	3249-11	Screw - Round Hd.	2
30	82-5280	Shaft - Pivot	1
31	2411-36	Eye - Rod	2
32	3256-3	Washer - Flat	2
33	3296-9	Nut - Lock	2
34	3290-357	Nut - Flange Lock	1
35	3256-71	Washer - Flat	3
36	3290-477	Washer - Curved	2
37	323-7	Screw - Cap Hex. Hd.	2
38	32151-73	Ring - Clip	1
39	82-5290	Rod - Traction Control	1
40	32144-26	Screw - Hex. Flange Hd.	2
41	82-5240	Plate - Pivot	1
42	76-9760	Damper - Pivot	1
43	76-8870	Lever Damper Assembly	1
44	74-3420	Gear Pump Assembly	1
45	237-161	Seal - O-Ring	1
46	323-8	Screw - Cap Hex. Hd.	1
47	84-1480	Hose - Damper	1
48	322-6	Screw - Cap Hex. Hd.	2
49	3296-47	Nut - Lock	2

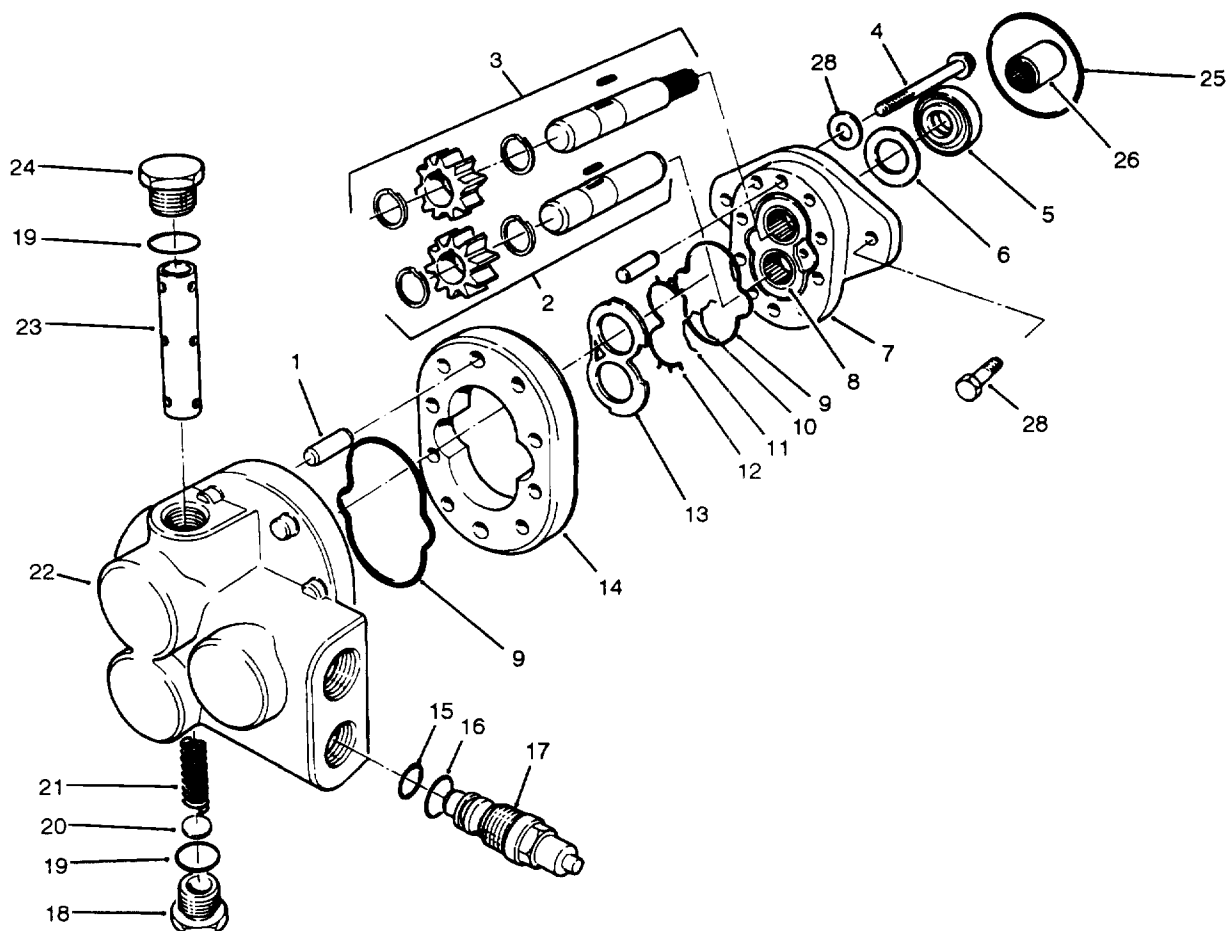

T-0995


GEAR PUMP ASSEMBLY NO. 74-3420

Ref. No.	Part No.	Description	No. Used
†1		Pin-Dowel	4
2	74-8960	Idle Gear Assembly	1
3	74-8970	Drive Gear Assembly	1
4	42-3120	Capscrew	8
5	49-2640	Seal-Shaft	1
6	60-5890	Washer	1
7	49-2660	Frontplate Assembly (Incl. Ref. #8)	1
†8		Bearing - Needle	2
9	56-6710	Seal - O-Ring	2
10	49-2680	Seal - O-Ring (Molded)	1
11	49-2700	Seal-Bearing	1
12	49-2690	Gasket-Backup	1
13	49-2670	Plate-Wear	1
14	74-8950	Body Assembly (Incl. Ref. #1)	1
†15		Seal - O-Ring	1
†16		Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
17	74-9000	Relief Valve Assy. (Incl. Ref. #15 & 16)	1
18	60-5710	Plug Assembly (Incl. Ref. #19)	1
†19		O-Ring	2
20	60-5730	Disc	1
21	60-5820	Spring	1
†22	74-8980	Backplate Assembly	1
†23	74-8990	Spool Assembly	1
24	60-5860	Plug Assembly (Incl. Ref. #19)	1
25	237-161	O - Ring	1
26	74-9040	Coupling	1
28	323-7	Screw-Cap, Hex. Hd.	2
29	74-8920	Washer - Copper	4
*	74-9020	Backplate Repair Kit	1
*	74-9010	Kit - Seal	1
*	74-3420	Gear Pump Assembly (Incl. Ref. #1-24 & 27-28)	1

*Not Illustrated


†Not Serviced Separately

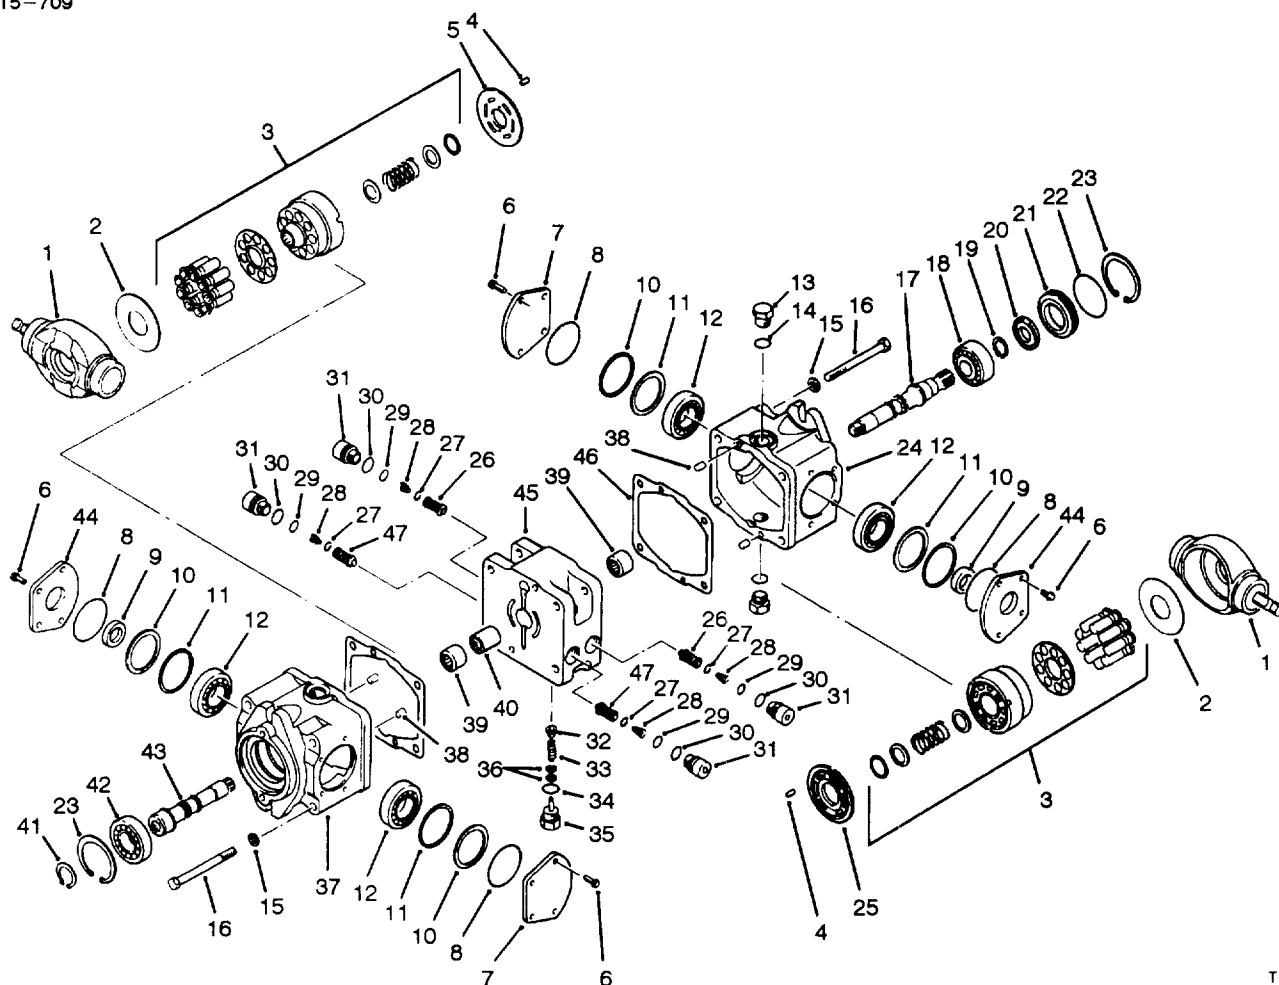

T-1314

TANDEM PUMP ASSEMBLY NO. 82-5100

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	84-0250	Swash Plate - Variable	2	24	84-0240	Housing - Pump	1
2	75-0400	Plate - Thrust	2	25	84-0280	Plate - Valve R.H.	1
3	75-0470	Cylinder Block Kit	2	26	84-0540	Valve - Screw 345 BAR	2
4	75-0510	Pin	2	27	84-0550	Ring - Retaining	4
5	84-0290	Plate - Valve L.H.	1	28	75-0140	Spring - Conical	4
6	84-0460	Screw	16	29	75-0240	Seal - O-Ring	4
7	84-0440	Cover - Trunnion	2	30	84-0560	Seal - O-Ring	4
8	84-0430	Seal - O-Ring	4	31	84-0520	Plug - Special	4
9	84-0470	Seal - Lip	2	32	84-0480	Poppet - Charge Relief	1
10	84-0270	Spacer - Trunnion	4	33	84-0490	Spring - Compression	1
11	84-0570	Shim - Trunnion Kit	4	34	28-3570	Seal - O-Ring	1
12	84-0260	Bearing - Roller	4	35	84-0500	Charge Relief Plug Assy.	1
13	353-551	Plug Assembly (Incl. Ref. #14)	3	36	84-0580	Shim - Charge Relief Kit	1
14	237-80	Seal - O-Ring	3	37	84-0340	Housing - Pump	1
15	84-0360	Washer	8	38	75-0480	Pin	4
16	84-0330	Screw - Cap Hex. Hd.	8	39	75-0500	Bearing - Needle	2
17	84-0300	Shaft - Pump	1	40	84-0230	Coupling	1
18	84-0310	Bearing - Ball	1	41	84-0390	Ring - Retaining	1
19	84-0320	Ring - Retaining	1	42	84-0370	Bearing - Ball	1
20	84-0400	Seal - Lip	1	43	84-0350	Shaft - Pump	1
21	84-0410	Carrier - Seal	1	44	84-0450	Cover - Trunnion	2
22	28-3520	Seal - O-Ring	1	45	84-0220	Body - Center	1
23	84-0380	Ring - Retaining Internal	2	46	84-0210	Gasket - End Cap	2
				47	84-0530	Valve - Screw 175 BAR	2

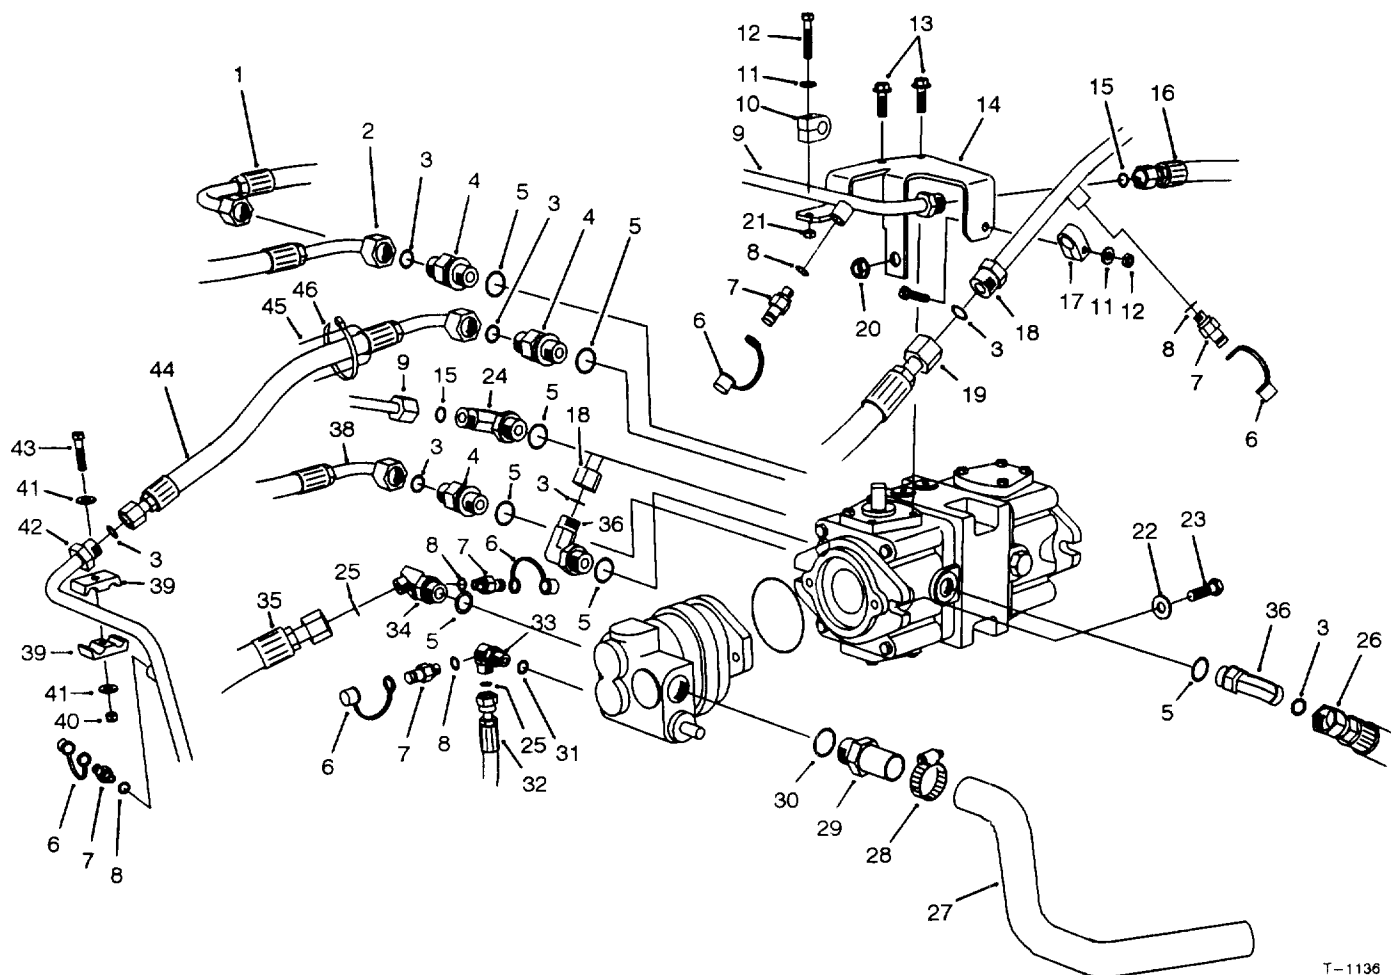


T-1136

HYDRAULIC PUMP FITTINGS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	86-2740	Hose - Hydraulic (Model No. 30601 Only)	1
2	86-2760	Hose - Hydraulic (Model No. 30600 Only)	1
3	237-65	Seal - O-Ring	7
4	340-7	Fitting - Hydraulic Straight (Incl. Ref. #3 & 5)	3
5	237-80	Seal - O-Ring	6
6	354-79	Cap - Fitting (Yellow)	5
7	354-77	Fitting - Test Port (Incl. Ref. #8)	5
8	237-78	Seal - O-Ring	5
9	82-5320	Hydraulic Tube Assembly (Incl. Ref. #15)	1
10	82-5360	Clamp - Tube	1
11	3256-22	Washer	2
12	321-9	Screw - Cap Hex. Hd.	2
13	32144-26	Screw - Hex. Flange Hd.	2
14	82-5340	Bracket - Pump	1
15	237-30	Seal - O-Ring	2
16	84-0900	Hose - Hydraulic	1
17	82-5361	Clamp - Tube	1
18	82-5310	Hydraulic Tube Assembly (Incl. Ref. #3)	1

Ref. No.	Part No.	Description	No. Used
19	86-2750	Hose - Hydraulic	1
20	32128-37	Nut - Flange Lock	1
21	3296-42	Nut - Lock	2
22	3256-4	Washer	1
23	324-6	Screw - Cap Hex. Hd.	1
25	237-22	Seal - O-Ring	2
26	92-1378	Hose - Hydraulic	1
27	82-5110	Hose - Suction	1
28	2412-34	Clamp - Hose	1
29	354-78	Fitting - Hydraulic Hose (Incl. Ref. #30)	1
30	237-146	Seal - O-Ring	1
31	237-79	Seal - O-Ring	1
32	86-5570	Hose - Hydraulic	1
33	74-5890	Fitting - Hydraulic 90° (Incl. Ref. #25 & 31)	1
34	84-0840	Fitting - Hydraulic 45° (Incl. Ref. #5 & 25)	1
35	84-0850	Hose - Hydraulic	1
36	340-17	Fitting - Hydraulic 90° (Incl. Ref. #3 & 5)	2
38	82-5210	Hose - Hydraulic	1
39	56-7977	Clamp - Tube	2
40	3296-29	Nut - Lock	1

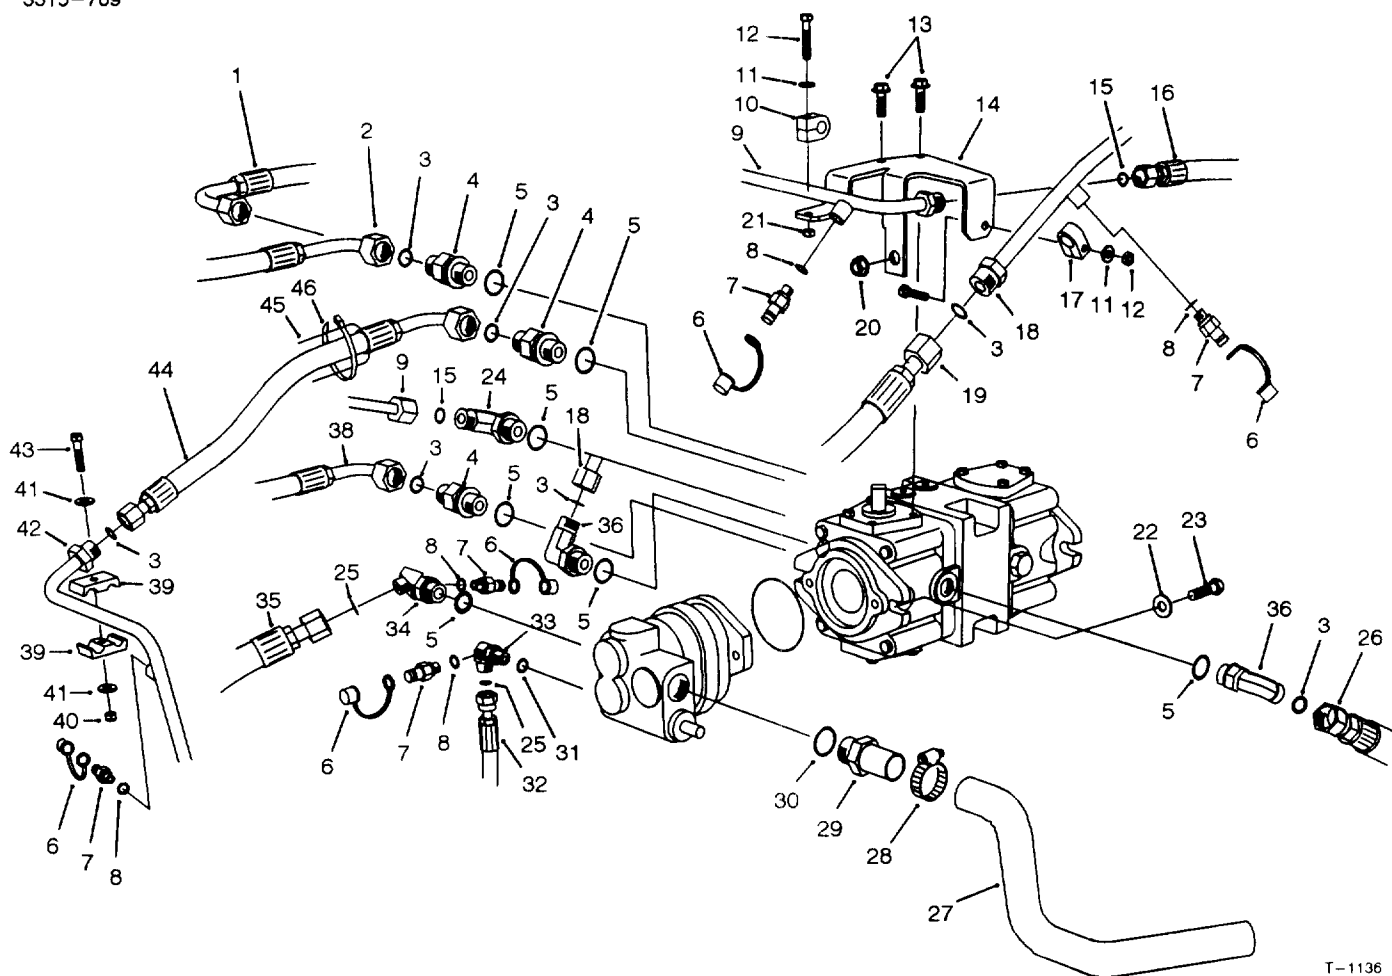


T-1136

HYDRAULIC PUMP FITTINGS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
41	3256-3	Washer - Flat	2
42	82-5330	Hydraulic Tube Assembly (Incl. Ref. #3)	1
43	322-7	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
44	82-5350	Hose - Hydraulic	1
45	56-7982	Sleeve - Protective	1
46	3290-378	Tie - Cable	1

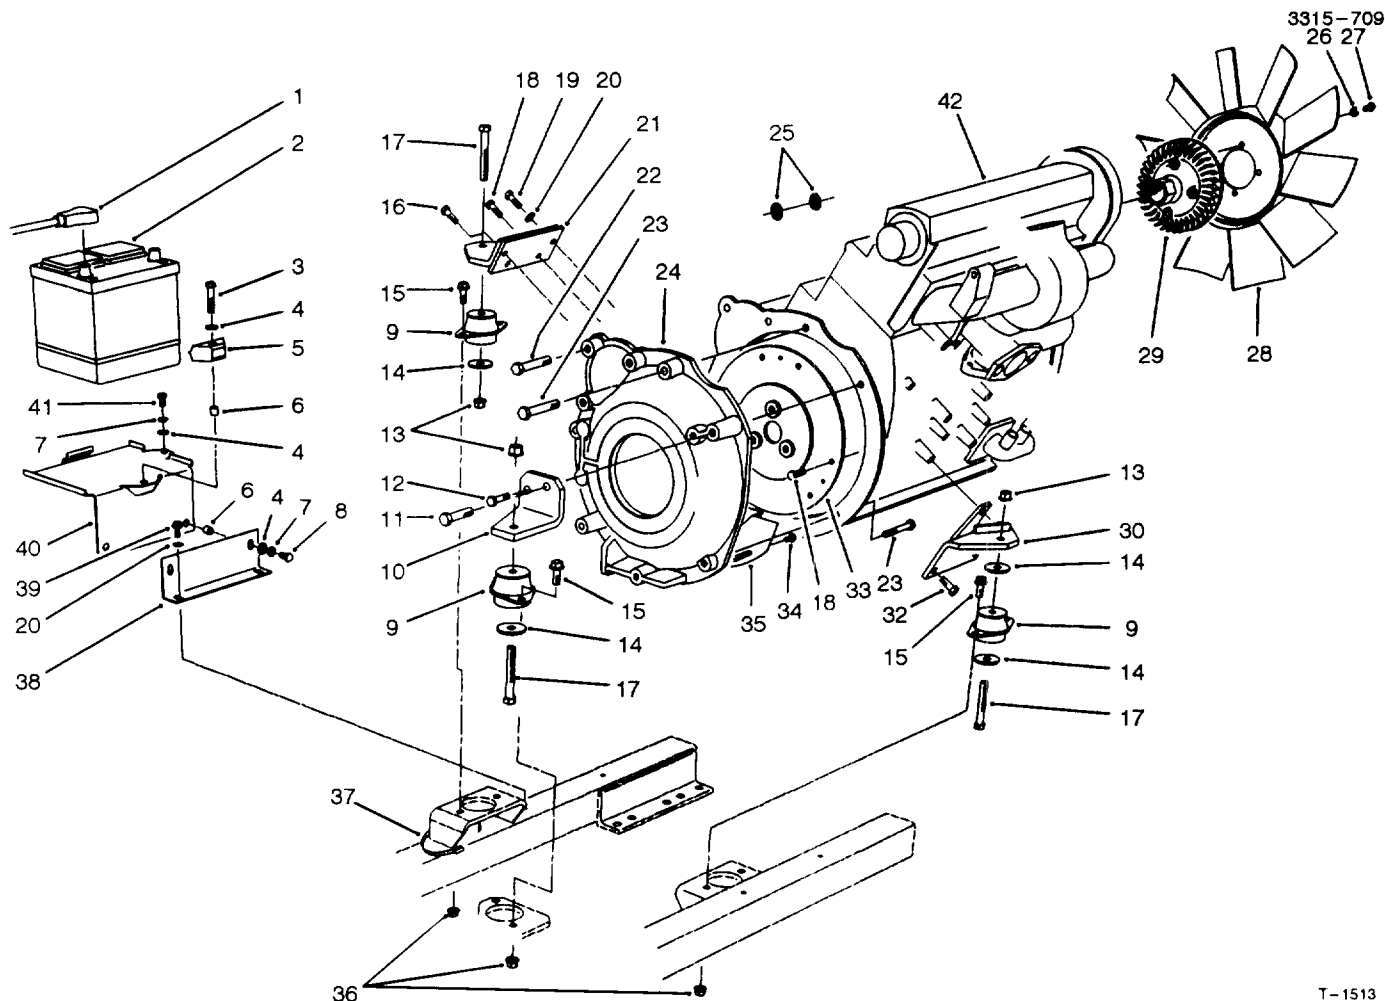

T-1513


ENGINE & BATTERY INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-9080	Cable - Battery Pos.	1
*	74-9090	Cable - Battery Neg.	1
†2		Battery - Type 26 SMF-5	1
3	323-9	Screw - Cap Hex. Hd.	1
4	3256-24	Washer - Flat	4
5	66-2490	Clamp - Battery	1
6	32148-9	Insert - Threaded	3
7	3253-21	Washer - Lock	3
8	323-33	Screw - Cap Hex. Hd.	2
9	53-9681	Mount - Rubber, Engine	3
10	74-5470	Mount - Engine	1
11	48-7840	Screw - Cap Hex. Hd.	1
12	48-9470	Screw - Cap Hex. Hd.	1
13	32128-37	Nut - Lock, Flange Hd.	3
14	53-9480	Washer - Rebound	4
15	3234-11	Screw	8
16	48-9460	Screw - Cap Hex. Hd.	1
17	324-12	Screw - Cap Hex. Hd.	3
18	48-7700	Screw - Cap Hex. Hd.	8
19	48-7730	Screw - Cap Hex. Hd.	1
20	3255-8	Washer - Lock, Ext. Tooth	2
21	76-4120	Mount W.A. - Engine	1

Ref. No.	Part No.	Description	No. Used
22	48-7810	Screw - Cap Hex. Hd.	3
23	48-7570	Screw - Cap Hex. Hd.	3
24	82-5120	Adapter - Pump to Engine	1
25	86-2990	Mount - Throttle Cable	2
26	3253-4	Washer - Lock	4
27	322-3	Screw - Cap Hex. Hd.	8
28	74-3650	Fan	1
29	74-5520	Clutch - Fan	1
30	76-4220	Mount W.A. - Engine	1
32	48-7780	Screw - Cap Hex. Hd.	3
33	74-5670	Coupling - Spring Center	1
34	48-7610	Screw - Cap Hex. Hd.	3
35	77-3600	Shield - Adapter	1
36	3290-357	Nut - Lock	6
37	3290-378	Tie - Cable	1
38	76-4310	Support - Base, Battery	1
39	32144-11	Screw - Hex. Washer Hd.	2
40	14-0949	Battery Base Assembly (Incl. Ref. #6)	1
41	323-34	Screw - Cap Hex. Hd.	1
42	74-5511	Engine Assembly	1

*Not Illustrated

†Obtain Locally

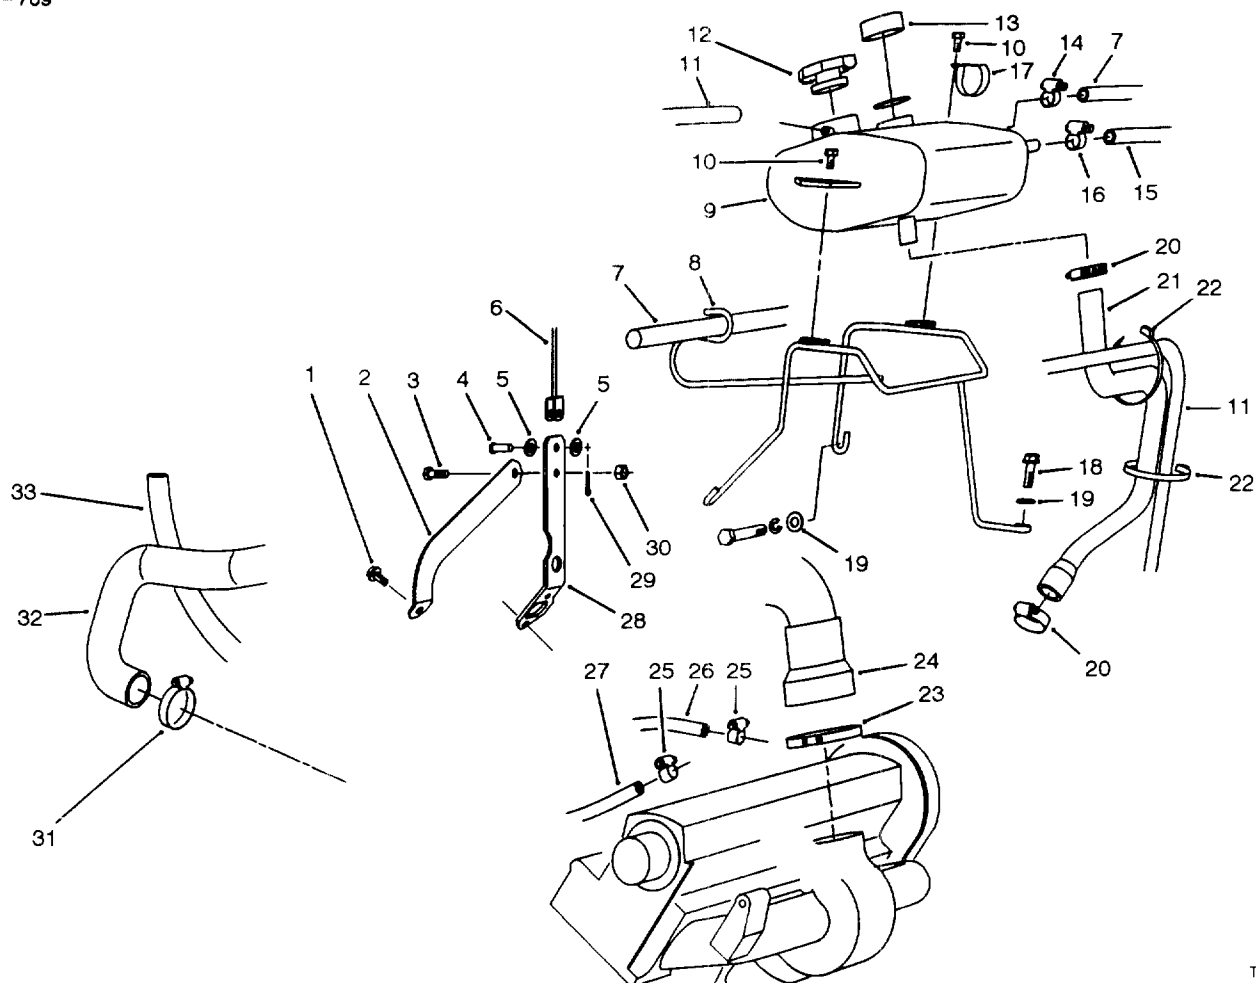


T-1545

ENGINE PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3900	Screw - Hex. Flange Hd.	1
2	74-4050	Bracket - Support, Hood	1
3	3234-5	Screw - Hex. Flange Hd.	1
4	283-58	Pin - Clevis	1
5	62-1230	Washer	2
6	66-2871	Cable - Hood	1
7	74-6040	Hose - Return	1
8	74-4010	Wireform W.A.	1
9	77-3550	Box - Degassing	1
10	46-6811	Screw - Hex. Washer Hd.	2
11	55-4130	Hose - Fuel	1
12	66-3240	Cap - Expansion	1
13	77-3560	Cap	1
14	2412-119	Clamp	3
15	74-9120	Hose - Radiator, Overflow	1
16	2412-36	Clamp - Hose	1
17	2412-96	Clamp	1

Ref. No.	Part No.	Description	No. Used
18	3234-17	Screw - Hex. Flange Hd.	1
19	3256-3	Washer - Flat	1
20	2412-129	Clamp - Hose	2
21	74-6010	Hose - Overflow	1
22	3290-378	Tie - Cable	2
23	2412-125	Clamp - Hose	1
24	74-6030	Hose - Air Cleaner	1
25	2412-108	Clamp	2
26	63-7627	Hose - Fuel	1
27	63-7622	Hose - Fuel	1
28	77-3890	Bracket - Cable, Hood	1
29	3272-10	Pin - Cotter	1
30	32128-20	Nut - Lock	1
31	2412-3	Clamp	2
32	74-5930	Hose - Radiator, Upper	1
33	74-9122	Hose - Vent	1

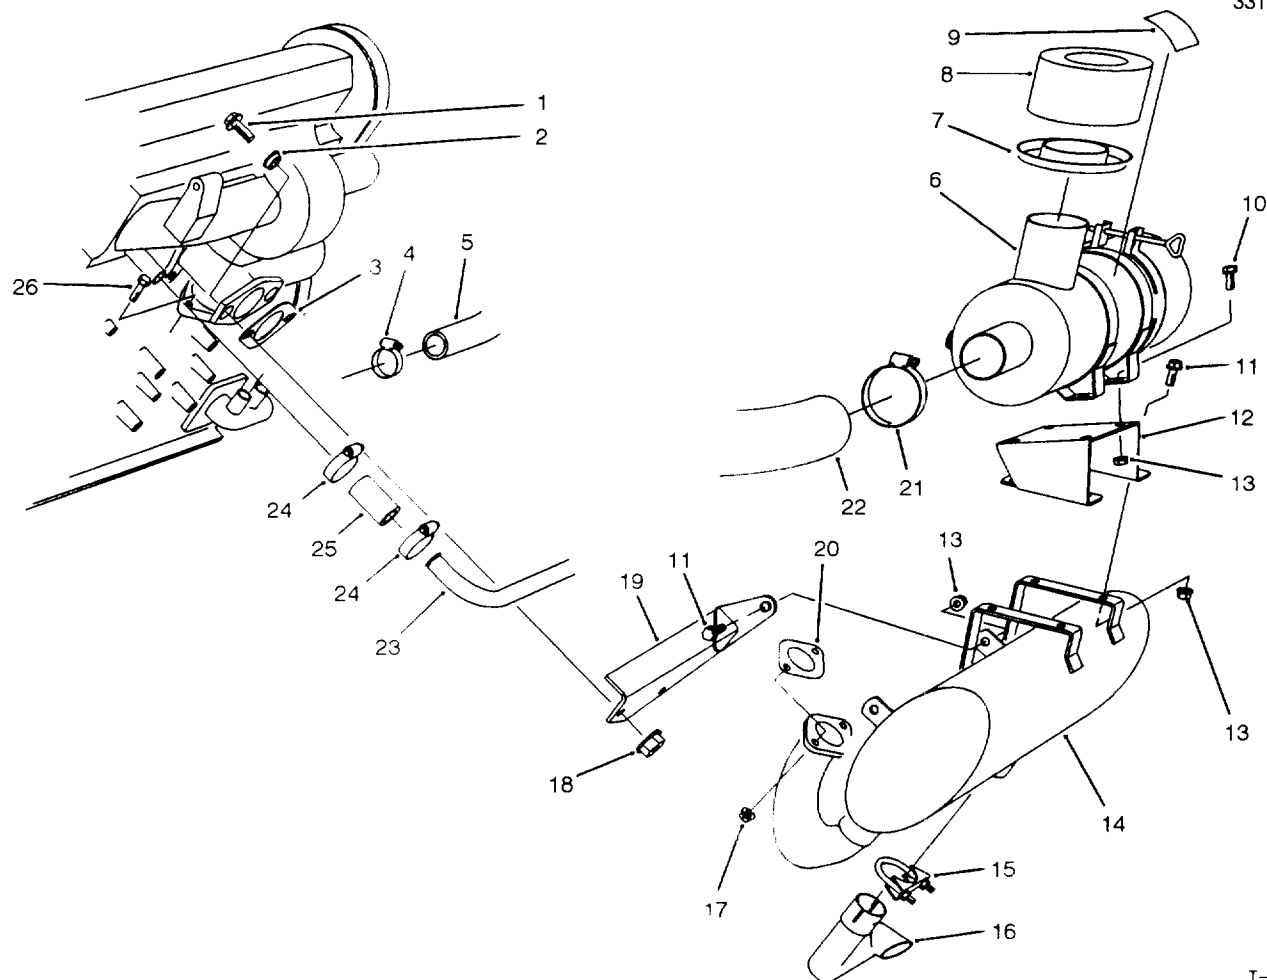


T-1578

MUFFLER & AIR CLEANER INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3243-11	Screw - Hex. Flange Hd.	2
2	76-4230	Guide - Exhaust, Manifold	2
3	74-5590	Gasket - Exhaust, Manifold	1
4	2412-3	Clamp - Hose	2
5	74-6020	Hose - Radiator, Lower	1
6	74-6000	Assembly - Air Cleaner	1
7	76-9980	Holder - Foam	1
8	76-9990	Seal - Air Intake	1
9	76-8770	Decal - Caution	1
10	322-3	Screw - Cap Hex. Hd.	4
11	3234-15	Screw - Hex. Flange Hd.	5
12	77-3880	Bracket - Air Cleaner	1
13	32128-20	Nut - Flange	9

Ref. No.	Part No.	Description	No. Used
14	74-5980	Muffler	1
*	77-3990	Arrester - Spark (Optional)	1
15	2112-9	Clamp - Muffler	1
16	74-6090	Pipe - Exhaust	1
17	32128-13	Nut - Lock	2
18	32128-19	Nut - Flange	2
19	92-2565	Bracket - Muffler	1
20	77-3700	Gasket - Muffler, Exhaust	1
21	2412-130	Clamp - Hose	1
22	74-6030	Hose - Air Cleaner	1
23	74-4900	Tube - Water, Return	1
24	2412-129	Clamp - Hose	2
25	74-6490	Hose - Water Line	2
26	322-16	Screw - Cap Hex. Hd.	2

*Not Illustrated

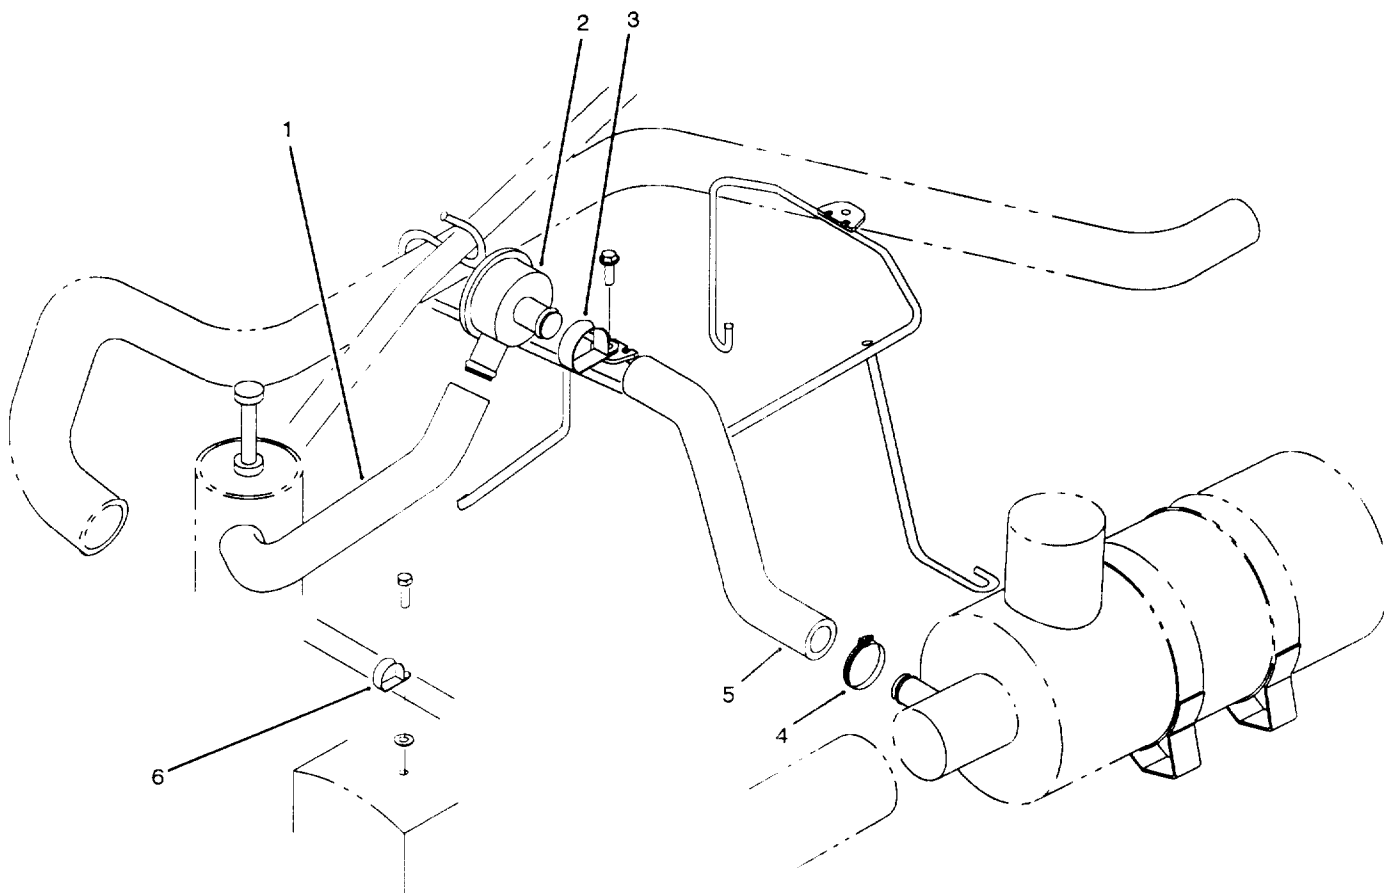


T-1579

PCV VALVE PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2589	Hose - PCV	1
2	74-5760	Valve - PCV	1
3	2412-104	Clamp - R	1

Ref. No.	Part No.	Description	No. Used
4	2412-129	Clamp - Hose	4
5	92-2588	Hose - PCV	1
6	2412-134	Clamp - R	1

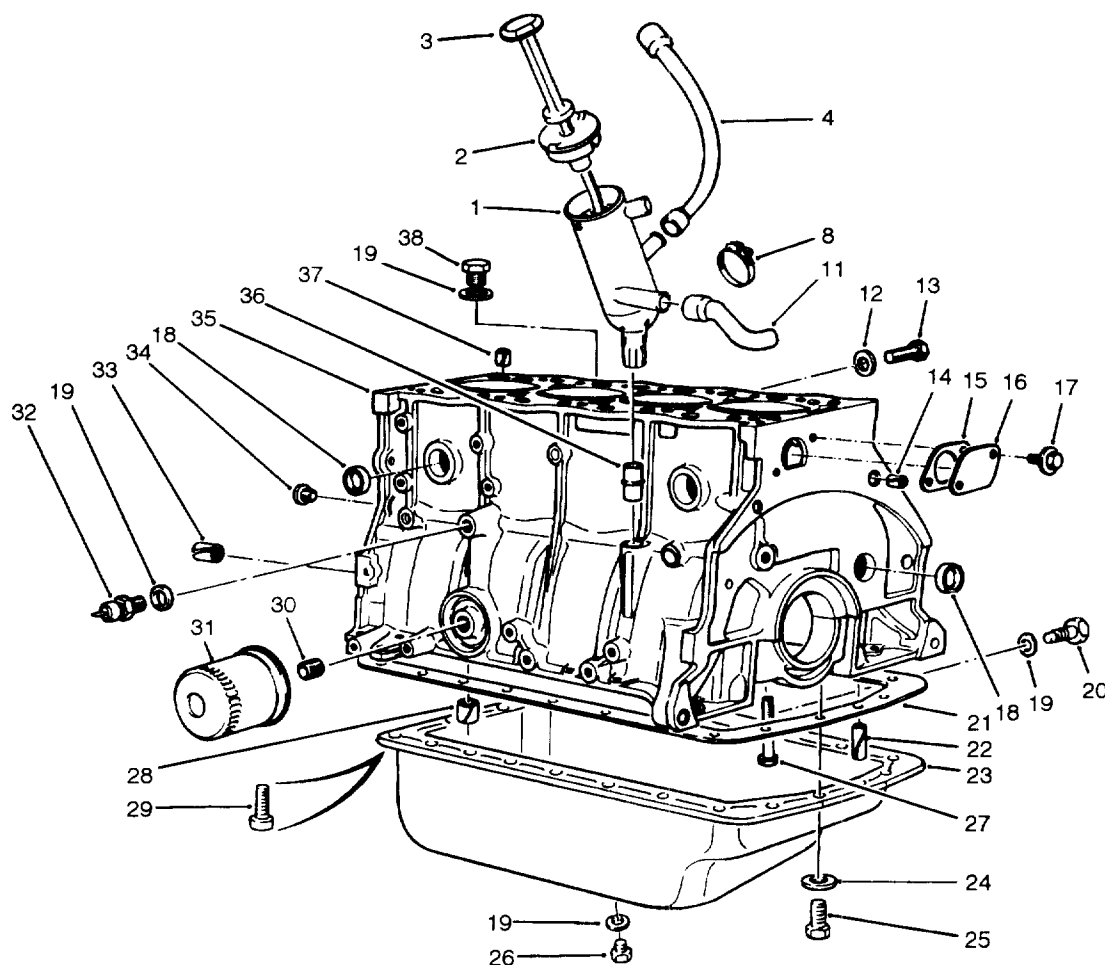


T-0962

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-8050	Oil Decanter Assembly	1
2	74-7690	Cap - Filler	1
3	74-7700	Dipstick - Oil	1
4	74-7710	Hose - Breather	1
8	2412-129	Clamp - Hose	4
11	74-7770	Hose - Crankcase	1
12	74-7780	Gasket	1
13	74-7790	Screw	1
14	74-7800	Pin - Spring	2
15	74-7810	Gasket - Plate	1
16	74-7820	Plate	1
17	74-7830	Screw - Washer Hd.	2
18	74-7840	Plug	8
19	74-7850	Gasket	4
20	77-3790	Plug	1
21	74-7870	Gasket - Oil Pan	1
22	74-7880	Pin - Groove	2
23	74-7890	Pan - Oil	1

Ref. No.	Part No.	Description	No. Used
24	74-7900	Washer - Stop	23
25	74-7910	Screw - Cap Hex. Hd.	20
26	77-3790	Plug - Drain	1
27	74-7930	Screw - Bearing Cap	10
28	74-7940	Bushing - Spring	1
29	74-7950	Screw - Plate	6
30	74-7960	Stud - Filter	1
31	74-7970	Filter - Oil	1
32	74-7980	Switch - Pressure	1
33	74-7990	Pin - Spring	4
34	74-8000	Plug	2
35	74-8010	Tube	1
36	74-8020	Longblock Assembly (Incl. Pistons)	1
37	74-8030	Pin - Spring	1
38	74-8040	Plug	1
*	74-8060	Gasket Set (Without Head Gasket)	1

*Not Illustrated

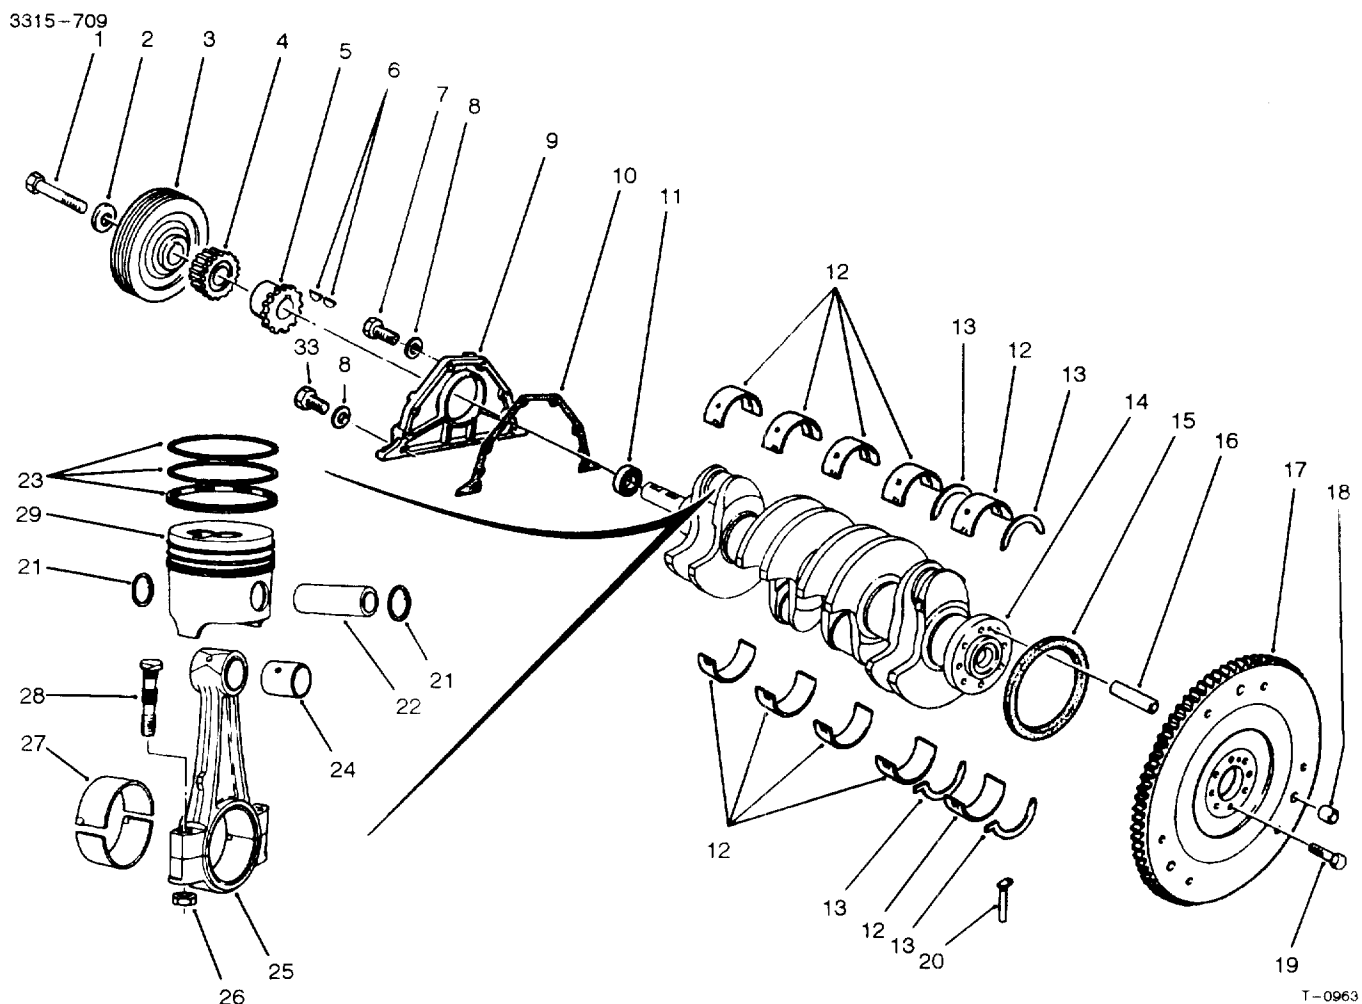


T-0963

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-8070	Screw - Cap Hex. Hd.	1
2	74-8080	Washer	1
3	74-8090	Pulley	1
4	74-8100	Gear - Pinion	1
5	74-8110	Sprocket - Oil Pump	1
6	74-8120	Key - Woodruff	2
7	74-8130	Screw - Cap Hex. Hd.	4
8	74-7560	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket - Cover	1
11	74-8160	Seal - Shaft	1
12	74-8170	Bearing Set (Std.)	5
*	74-8180	Bearing Set (.30mm OS)	5
13	74-8190	Thrust Bearing Set (Std.)	2
*	74-8200	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	74-8220	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	74-8240	Seal	1
16	74-8250	Pin	1
17	74-8260	Flywheel	1
18	74-8270	Pin	3

Ref. No.	Part No.	Description	No. Used
19	74-8280	Screw - Cap Hex. Hd.	8
20	74-8290	Seal - #1 Bearing Cap	2
21	74-8300	Clip - Piston Pin	8
22	74-8310	Pin - Piston	4
23	74-8320	Piston Ring Set (Stage #1)	4
*	74-8330	Piston Ring Set (Stage #2)	4
*	74-8340	Piston Ring Set (Stage #3)	4
24	74-8350	Bushing - Sleeve	4
25	74-8360	Rod - Connecting	4
26	74-8370	Nut - Hex.	8
27	74-8380	Bearing - Connecting Rod (Std.)	4
*	74-8390	Bearing - Connecting Rod (49.7mm ID)	4
28	74-8400	Bolt - Connecting Rod	4
29	74-8420	Piston Set - Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
29	74-8430	Piston Set - Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set - Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	74-8570	Screw - Cap Hex. Hd.	2

*Not Illustrated

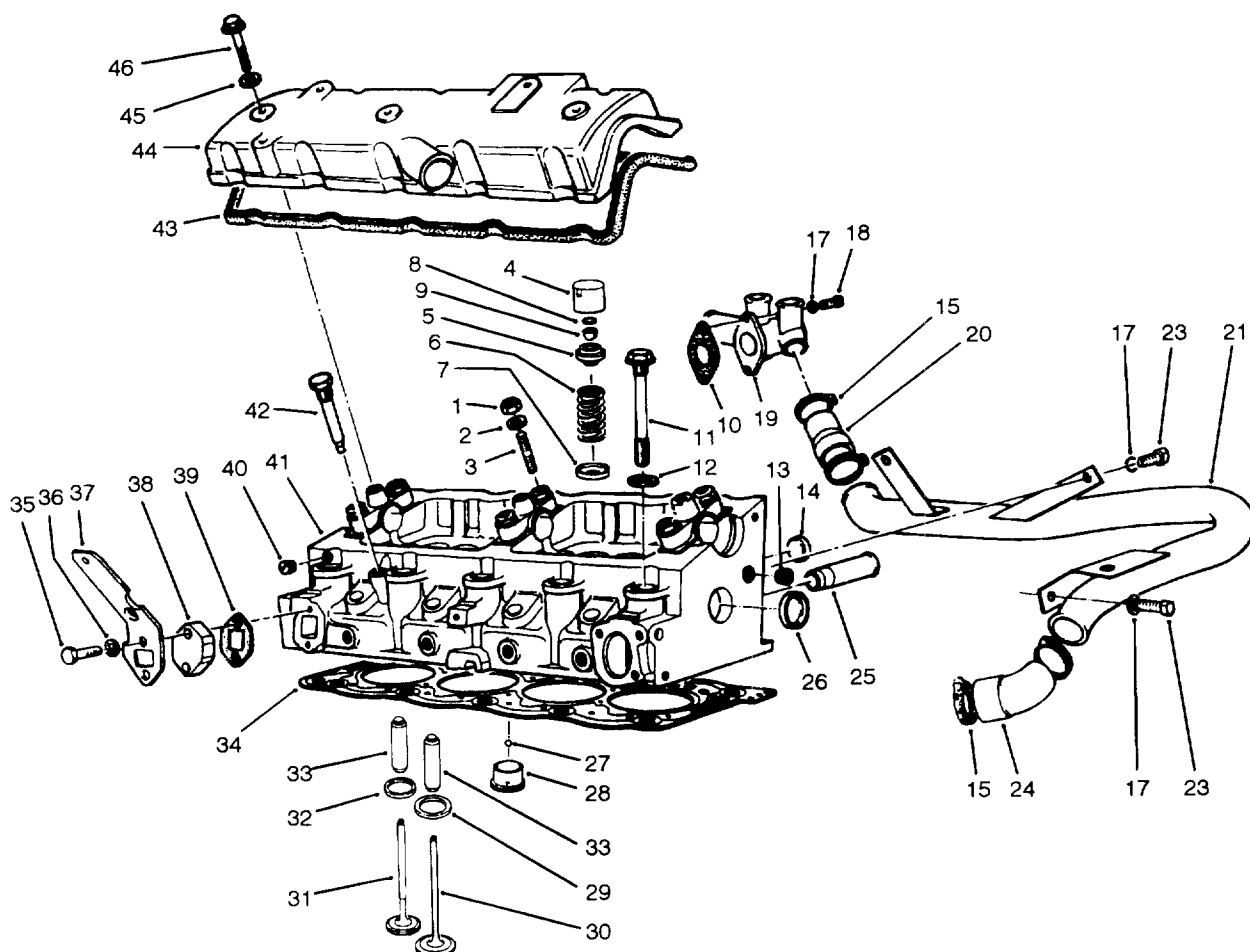


T-0965

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut - Lock	6
2	74-6520	Washer - Flat	6
3	74-6530	Stud	6
4	74-6540	Tappet - Valve	8
5	74-6550	Cup - Upper Valve Spring	8
6	74-6560	Spring - Valve	8
7	74-6570	Cup - Lower Valve Spring	8
8	74-6580	Insert - Valve (1.650mm)	8
*	74-6600	Insert - Valve (1.800mm)	8
*	74-6610	Insert - Valve (1.900mm)	8
*	74-6620	Insert - Valve (1.975mm)	8
*	74-6630	Insert - Valve (2.050mm)	8
*	74-6640	Insert - Valve (2.125mm)	8
*	74-6650	Insert - Valve (2.225mm)	8
*	74-6660	Insert - Valve (2.250mm)	8
*	74-6670	Insert - Valve (2.275mm)	8
*	74-6680	Insert - Valve (2.300mm)	8
*	74-6690	Insert - Valve (2.325mm)	8
*	74-6700	Insert - Valve (2.350mm)	8
*	74-6710	Insert - Valve (2.375mm)	8
*	74-6720	Insert - Valve (2.400mm)	8
*	74-6730	Insert - Valve (2.425mm)	8
*	74-6740	Insert - Valve (2.450mm)	8
*	74-6750	Insert - Valve (2.475mm)	8
*	74-6760	Insert - Valve (2.500mm)	8
*8	74-6770	Insert - Valve (2.525mm)	8

Ref. No.	Part No.	Description	No. Used
*	74-6780	Insert - Valve (2.550mm)	8
*	74-6790	Insert - Valve (2.575mm)	8
*	74-6800	Insert - Valve (2.600mm)	8
*	74-6810	Insert - Valve (2.625mm)	8
*	74-6820	Insert - Valve (2.650mm)	8
*	74-6830	Insert - Valve (2.675mm)	8
*	74-6840	Insert - Valve (2.700mm)	8
*	74-6850	Insert - Valve (2.725mm)	8
*	74-6860	Insert - Valve (2.750mm)	8
*	74-6870	Insert - Valve (2.775mm)	8
*	74-6880	Insert - Valve (2.800mm)	8
*	74-6890	Insert - Valve (2.825mm)	8
*	74-6900	Insert - Valve (2.850mm)	8
*	74-6910	Insert - Valve (2.875mm)	8
*	74-6920	Insert - Valve (2.900mm)	8
*	74-6930	Insert - Valve (2.925mm)	8
*	74-6940	Insert - Valve (2.950mm)	8
*	74-6950	Insert - Valve (2.975mm)	8
*	74-6960	Insert - Valve (3.000mm)	8
*	74-6970	Insert - Valve (3.025mm)	8
*	74-6980	Insert - Valve (3.050mm)	8
*	74-6990	Insert - Valve (3.075mm)	8
*	74-7000	Insert - Valve (3.100mm)	8
*	74-7010	Insert - Valve (3.125mm)	8
*	74-7020	Insert - Valve (3.150mm)	8
*	74-7030	Insert - Valve (3.175mm)	8

*Not Illustrated

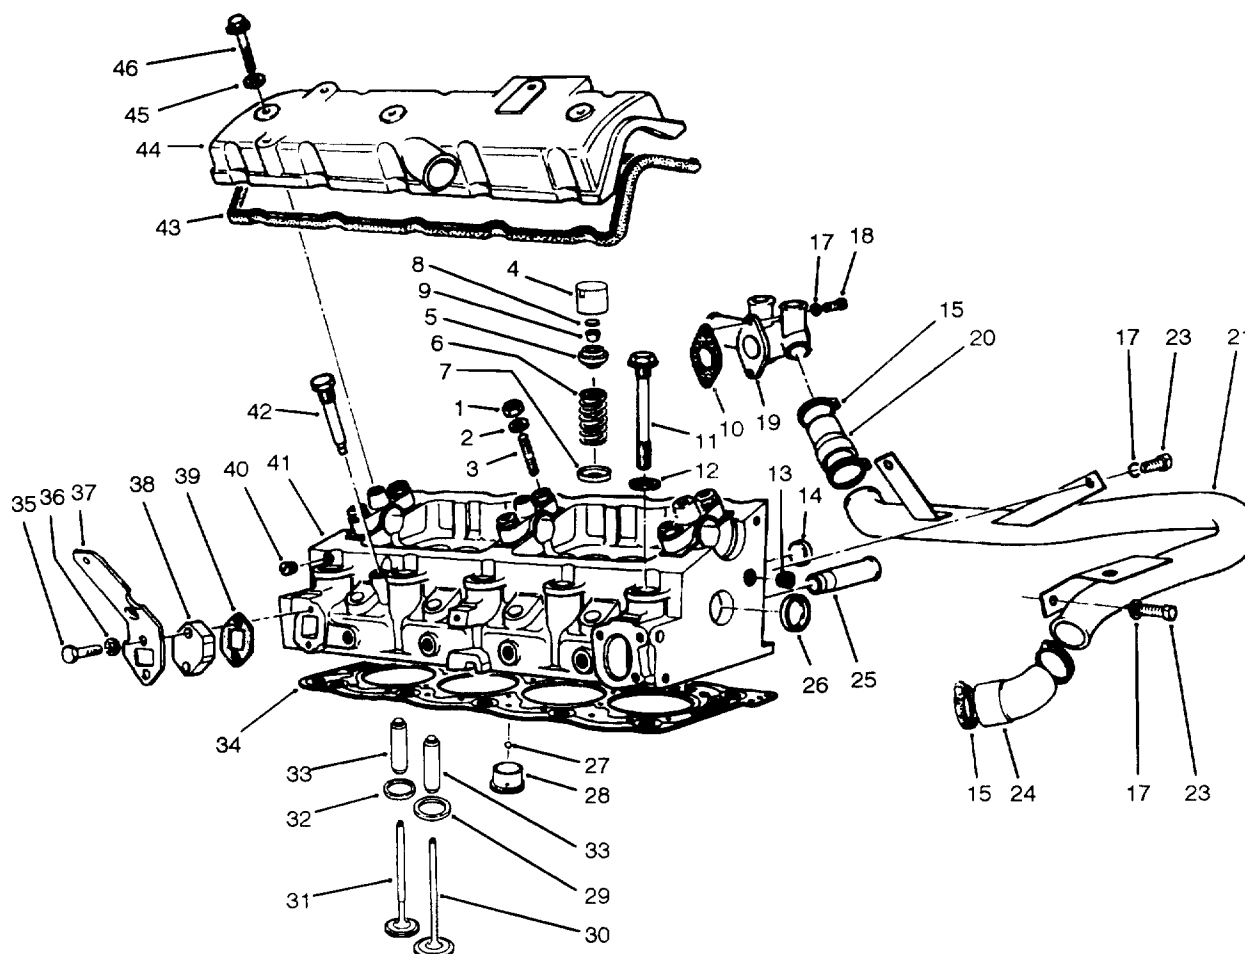


T-0965

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*8	74-7040	Insert - Valve (3.200mm)	8	15	2412-119	Clamp - Hose	4
*	74-7050	Insert - Valve (3.225mm)	8	17	68-9420	Washer - Lock	5
*	74-7060	Insert - Valve (3.250mm)	8	18	48-9460	Screw - Cap Hex. Hd.	2
*	74-7070	Insert - Valve (3.275mm)	8	19	74-7340	Fitting - Coolant	1
*	74-7080	Insert - Valve (3.300mm)	8	20	74-7350	Hose	1
*	74-7090	Insert - Valve (3.325mm)	8	21	74-7360	Tube - Collector	1
*	74-7100	Insert - Valve (3.350mm)	8	23	48-7700	Screw - Cap Hex. Hd.	3
*	74-7110	Insert - Valve (3.375mm)	8	24	74-7390	Hose - Elbow	1
*	74-7120	Insert - Valve (3.400mm)	8	25	74-7400	Tube	1
*	74-7130	Insert - Valve (3.425mm)	8	26	74-7410	Plug	2
*	74-7140	Insert - Valve (3.450mm)	8	27	74-7420	Ball	4
*	74-7150	Insert - Valve (3.475mm)	8	28	74-7430	Chamber - Turbulence (32.45mm)	4
*	74-7160	Insert - Valve (3.500mm)	8	*	74-7440	Chamber - Turbulence (32.65mm)	4
*	74-7170	Insert - Valve (3.550mm)	8	29	74-7450	Seat - Intake Valve (39.3mm)	4
*	74-7180	Insert - Valve (3.625mm)	8	*	74-7460	Seat - Intake Valve (39.5mm)	4
*	74-7190	Insert - Valve (3.700mm)	8	30	74-7480	Valve - Intake	4
*	74-7200	Insert - Valve (3.775mm)	8	31	74-7470	Valve - Exhaust	4
*	74-7210	Insert - Valve (3.850mm)	8	32	74-7490	Seat - Exhaust Valve (34.3mm)	4
8	74-7220	Insert - Valve (3.925mm)	8	*	74-7500	Seat - Exhaust Valve (34.5mm)	4
*	74-7230	Insert - Valve (4.000mm)	8				
9	74-7240	Collar - Split	16				
10	74-7250	Gasket - Fitting	1				
11	74-7260	Bolt - Head	10				
12	74-7270	Washer - Flat	10				
13	74-7280	Plug	2				
14	74-7840	Plug	2				

*Not illustrated

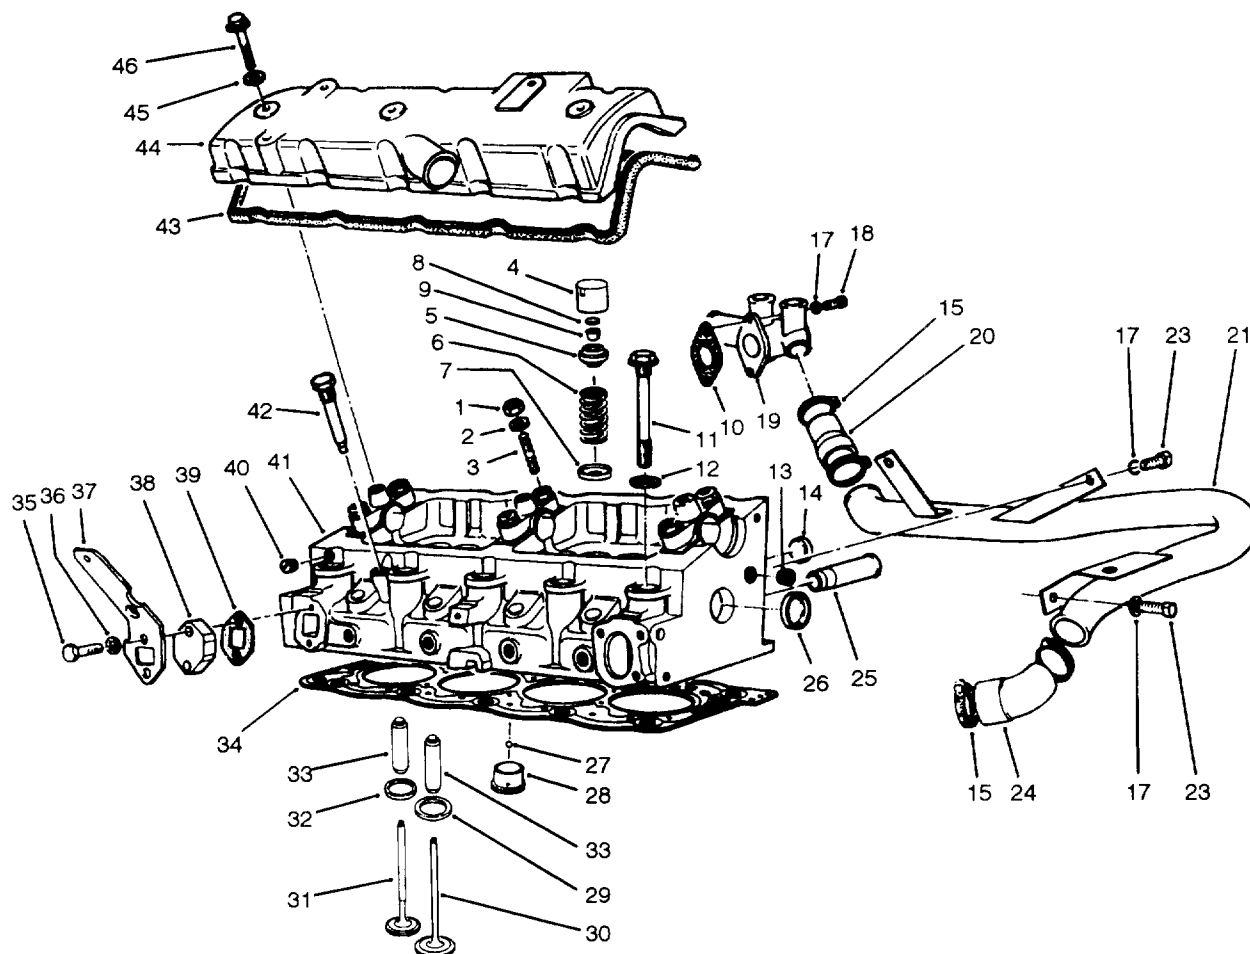


T-0965

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
33	74-7510	Guide - Valve (14.29mm)	8
*	74-7520	Guide - Valve (14.59mm)	8
34	74-7530	Gasket - Head (1.61mm)	1
*	74-7540	Gasket - Head (1.73mm)	1
35	74-7550	Screw - Cap Hex. Hd.	2
36	74-7560	Washer - Lock	2
37	77-3890	Bracket - Hood Cable	1
38	74-7580	Plate	1
39	74-7590	Gasket	1
40	74-7600	Plug	4

Ref. No.	Part No.	Description	No. Used
41	74-7610	Cylinder Head Assembly (Incl. Ref. #32 & 33)	1
42	74-7620	Plug	1
43	74-7630	Gasket - Valve Cover	1
44	74-7640	Cover - Valve	1
45	74-7650	Washer - Flat	3
46	48-7640	Bolt - Valve Cover	3
*	74-7670	Head Bolt & Washer Set (Incl. Ref. #11 & 12)	1


*Not Illustrated

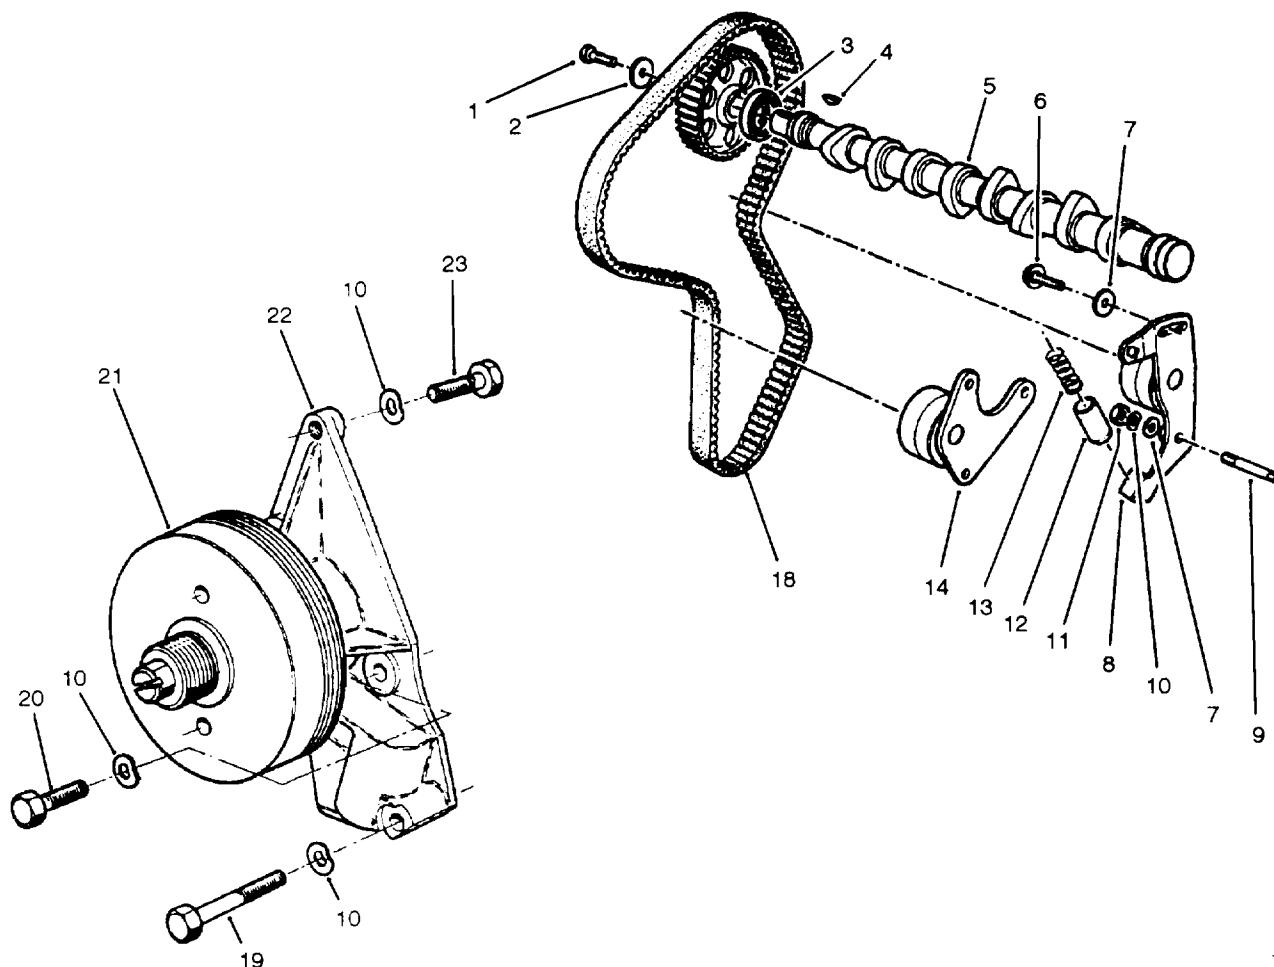

T-1106

CAMSHAFT & FAN SUPPORT ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2	11	46-0330	Nut - Lock	1
2	77-3450	Washer	2	12	77-3520	Cup	1
3	77-3420	Gasket	2	13	77-3510	Spring	1
4	77-3410	Key	1	14	77-3500	Roller Assembly	1
5	77-3400	Camshaft	1	18	74-8830	Belt	1
6	77-3460	Screw	1	19	60-6700	Screw - Cap Hex. Hd.	1
7	74-8900	Washer - Flat	2	20	77-3360	Screw	3
8	77-3540	Roller Assembly	1	21	77-3380	Pulley	1
9	74-6530	Stud	1	22	77-3390	Support	1
10	68-9420	Washer - Lock	6	23	77-3370	Screw	1

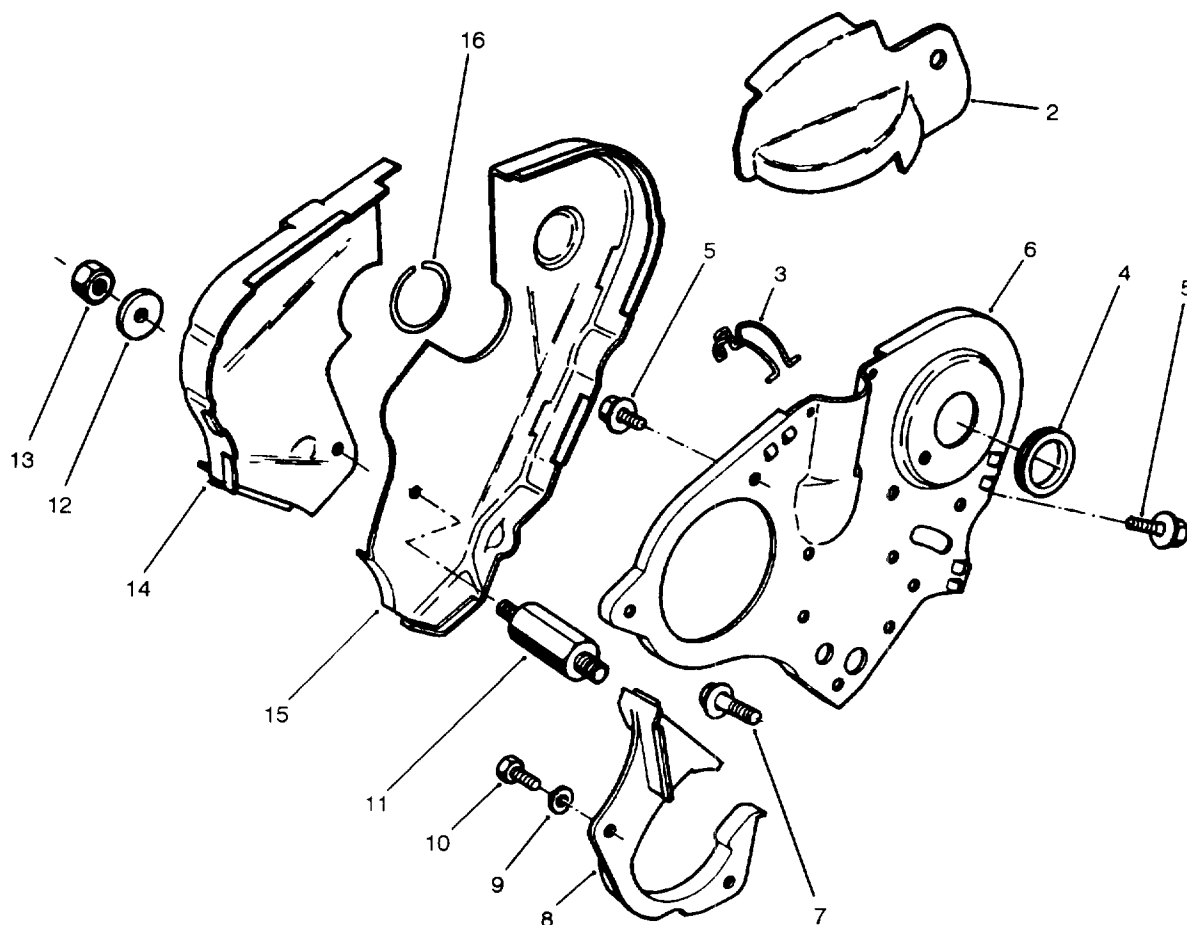

T-1115

BELT COVER ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	77-3590	Shield	1	10	74-7910	Screw - Cap Hex. Hd.	2
3	77-3830	Clip	4	11	77-3820	Support - Shield	1
4	77-3840	Grommet	1	12	77-3870	Washer - Flat	1
5	48-7700	Screw - Hex. Washer Hd.	2	13	77-3860	Nut - Lock	1
6	77-3800	Shield	1	14	77-3580	Shield	1
7	48-9460	Screw - Hex. Washer Hd.	2	15	77-3570	Shield	1
8	77-3810	Shield	1	16	77-3850	Ring - Snap	1
9	74-7560	Washer - Spring	2				

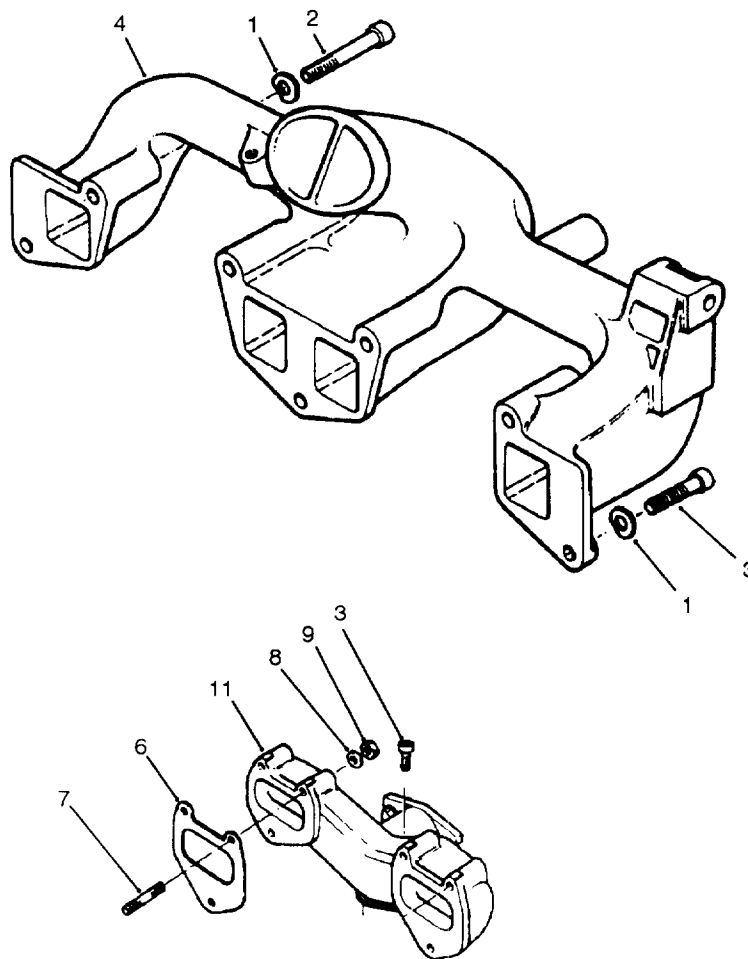

T-1107

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	68-9420	Washer - Spring	7	7	77-3300	Stud	6
2	77-3280	Screw	5	8	68-9420	Washer - Lock	6
3	77-3290	Screw	4	9	77-3320	Nut - Hex	6
4	77-3270	Manifold - Intake	1	11	77-3340	Manifold - Exhaust	1
6	77-3310	Gasket	2				

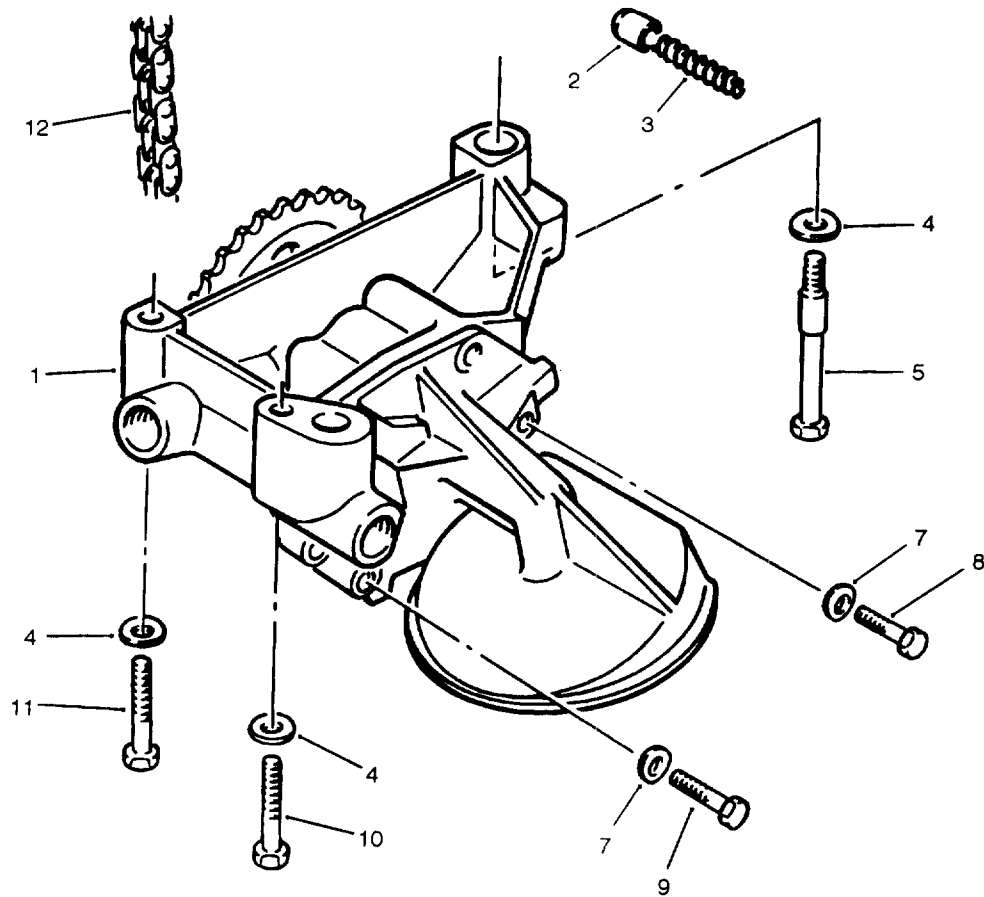


OIL PUMP ASSEMBLY

T-0964

Ref. No.	Part No.	Description	No. Used
1	76-5070	Oil Pump Assembly	1
2	76-5080	Piston	1
3	76-5090	Spring - Piston	1
4	68-9420	Washer - Spring	3
5	76-5100	Bolt - Shoulder	1
7	74-7560	Washer - Spring	5

Ref. No.	Part No.	Description	No. Used
8	74-7910	Screw - Cap Hex. Hd.	2
9	48-7640	Screw - Cap Hex. Hd.	3
10	76-5150	Screw - Cap Hex. Hd.	1
11	76-5160	Screw - Cap Hex. Hd.	1
12	76-5170	Chain - Pump Drive	1

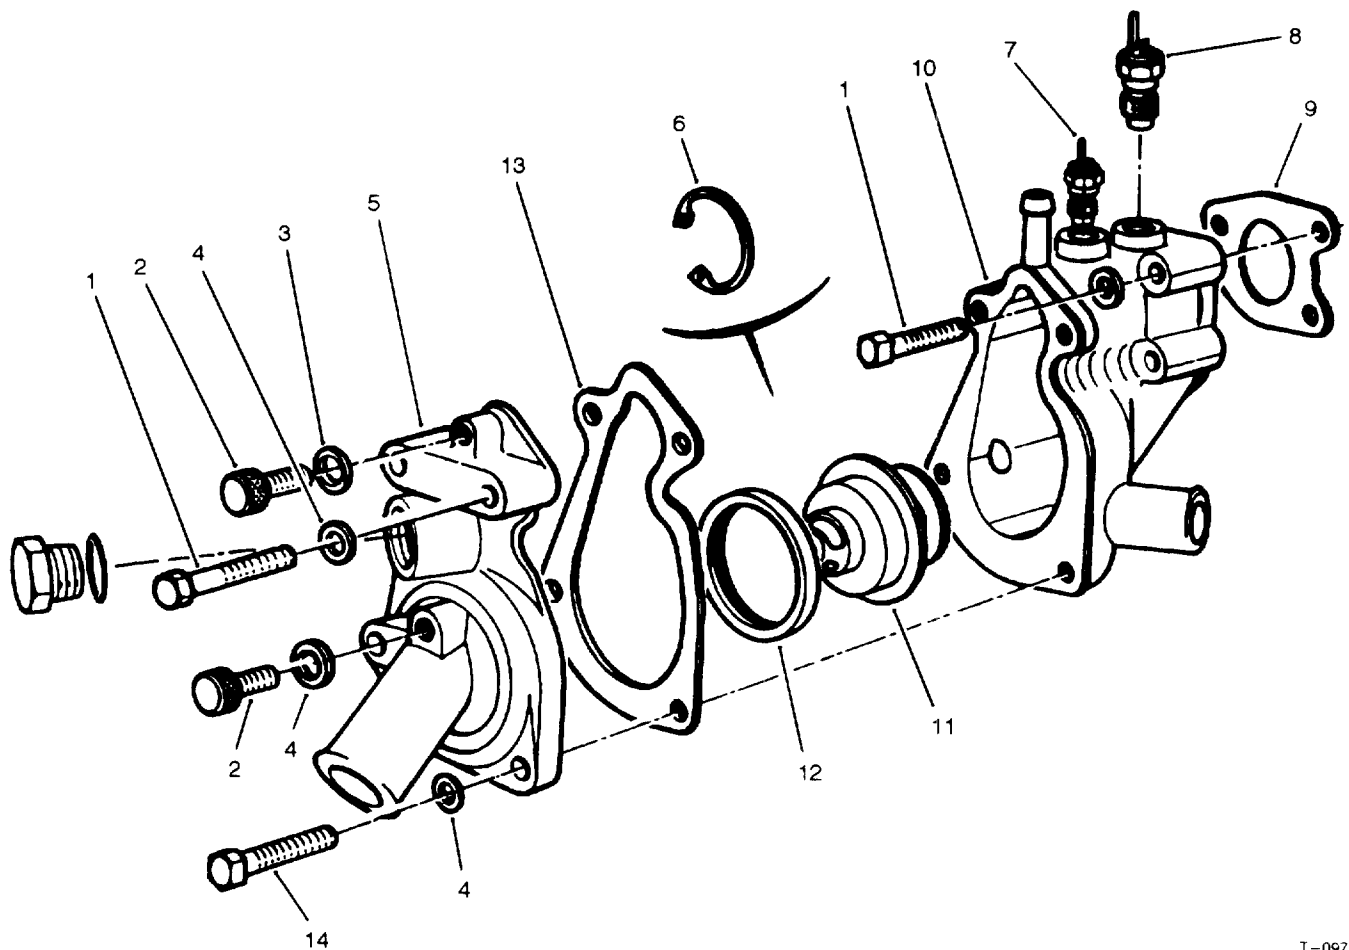


T-0974

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5330	Screw - Cap Hex. Hd.	2
2	76-5340	Plug - Drain	2
3	76-5350	Gasket - Drain Plug	2
4	74-7560	Washer - Spring	4
5	76-5360	Cover - Collector	1
6	76-5370	Ring - Retaining	1
7	76-5380	Temperature Sending Unit	1

Ref. No.	Part No.	Description	No. Used
8	76-5400	Switch - Temp. 105°C	1
9	76-5410	Gasket - Collector	1
10	76-5420	Housing - Collector	1
11	74-8860	Thermostat 83°C	1
12	76-5450	Gasket - Thermostat	1
13	76-5460	Gasket - Collector Housing	1
14	76-5440	Screw - Cap Hex. Hd.	2

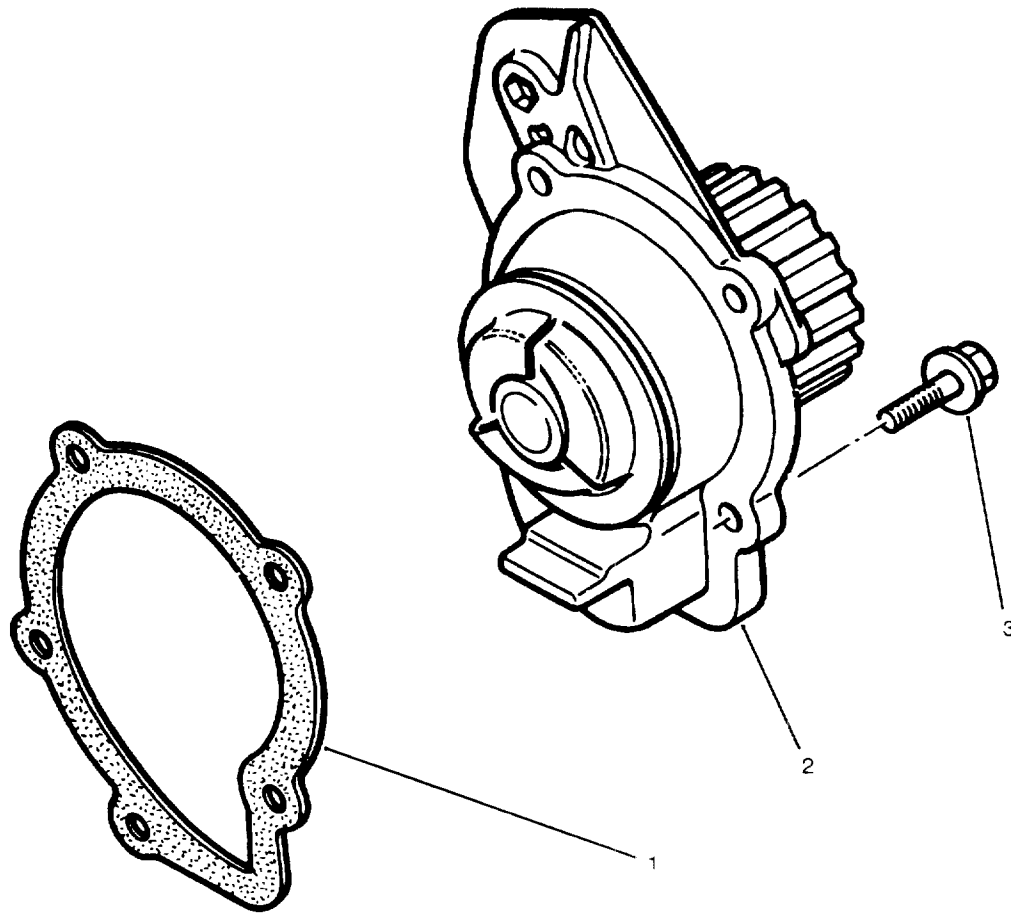


T-0970

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5480	Gasket - Water Pump	1
2	74-8840	Water Pump Assembly (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used
3	76-5500	Screw - Cap Hex. Hd.	5

3315-709

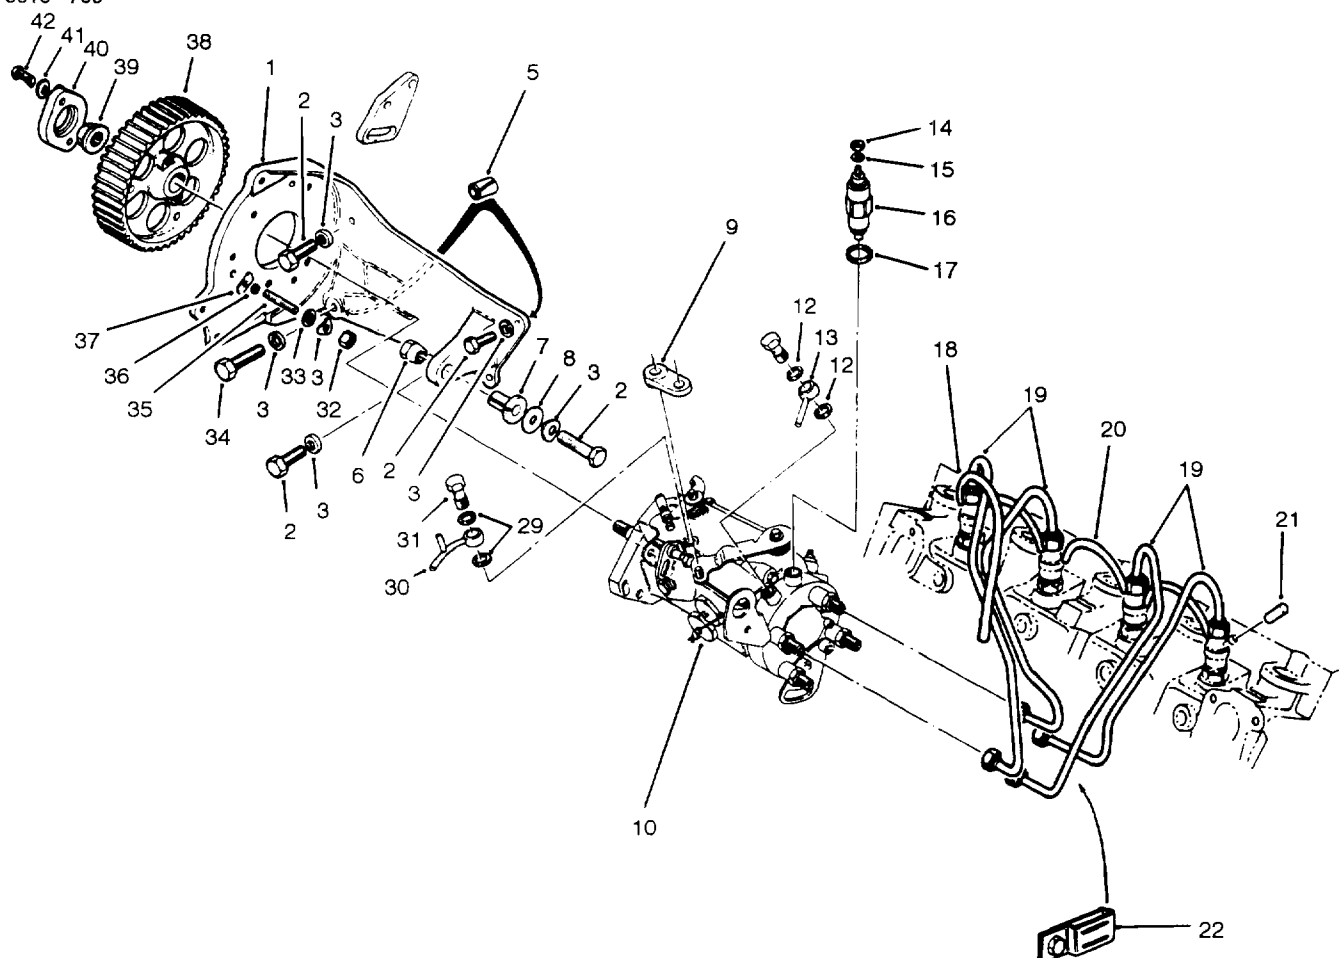


T-0969

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-8700	Bracket - Pump	1	20	74-8760	Hose - Rubber	3
*†	74-8580	Bracket - Pump	1	21	74-8770	Plug	1
2	60-6760	Screw - Cap Hex. Hd.	4	22	74-8780	Clamp - Plastic	1
3	68-9420	Washer - Spring	8	*	74-8790	Clamp - Metal	1
5	74-8610	Pin - Spring	1	29	74-8870	Gasket	2
6	74-8620	Nut - Conical	1	30		Banjo - Fuel Outlet	1
7	74-8630	Bushing - Flange	1	31	74-8880	Fuel Outlet Assembly (Incl. Ref. #30)	1
8	74-8640	Washer - Flat	1	32	46-0330	Nut	3
9	74-8650	Pacer	1	33	74-8900	Washer - Flat	1
10	74-8800	Injection Pump Assembly	1	34	60-6700	Screw - Cap Hex. Hd.	1
*†	74-8660	Injection Pump Assembly	1	35	76-4910	Stud	3
12	74-8680	Gasket	2	36	68-9420	Washer - Lock	3
13		Banjo - Fuel Inlet	1	37	76-4930	Washer	3
14	48-7880	Nut	1	38	76-4940	Pulley - Pump	1
15	74-8710	Washer	1	39	76-4950	Nut - Flange	1
16	74-8720	Stop Valve Assembly	1	40	76-4960	Flange	1
17	74-8730	Ring - Seal	1	41	74-7560	Washer - Spring	2
18	74-8740	Tube - Pump Return	1	42	74-8130	Screw - Cap Hex. Hd.	2
19	74-8750	Injection Tube Set	1				

*Not Illustrated

†Use with engine serial nos. 181194 thru 181203, 210023 thru 210054 and 281428 thru 281439.

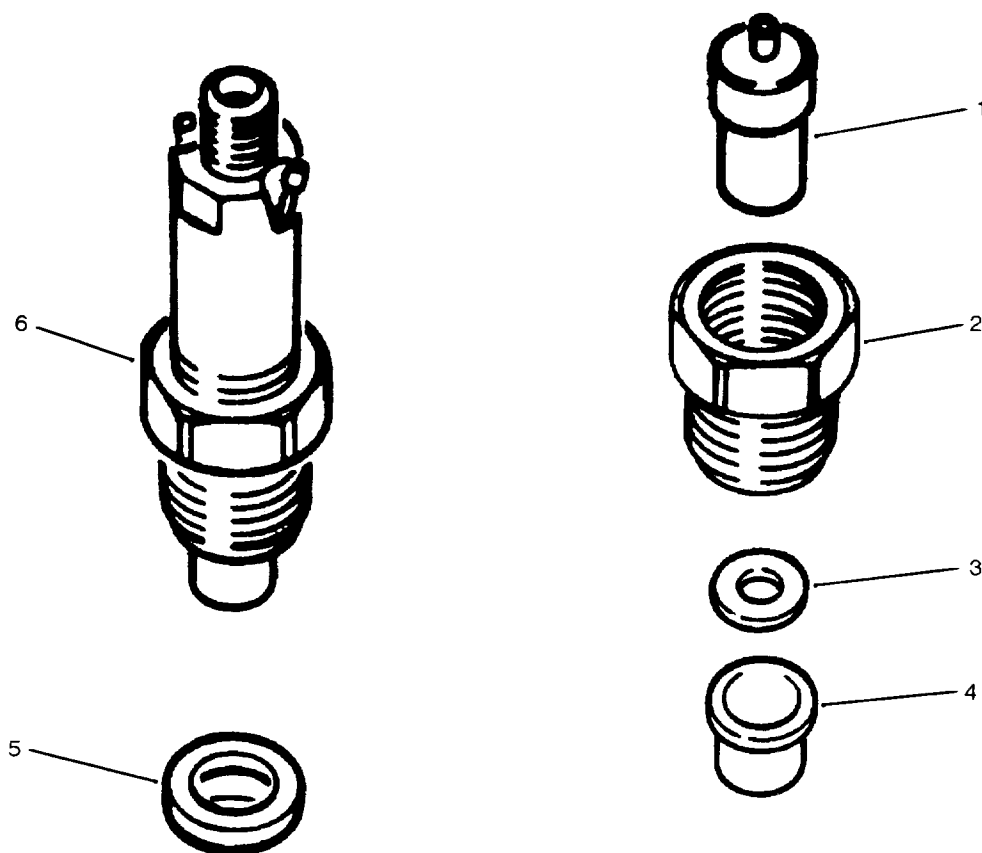


T-0971

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5510	Injector - Fuel	4
2	76-5520	Holder - Fuel Injector	4
3	76-5530	Washer	4
4	76-5540	Bushing - Injector	4

Ref. No.	Part No.	Description	No. Used
5	76-5550	Gasket - Fuel Injector	4
6	76-5560	Fuel Injector Assembly (Incl. Ref. #1-5)	4

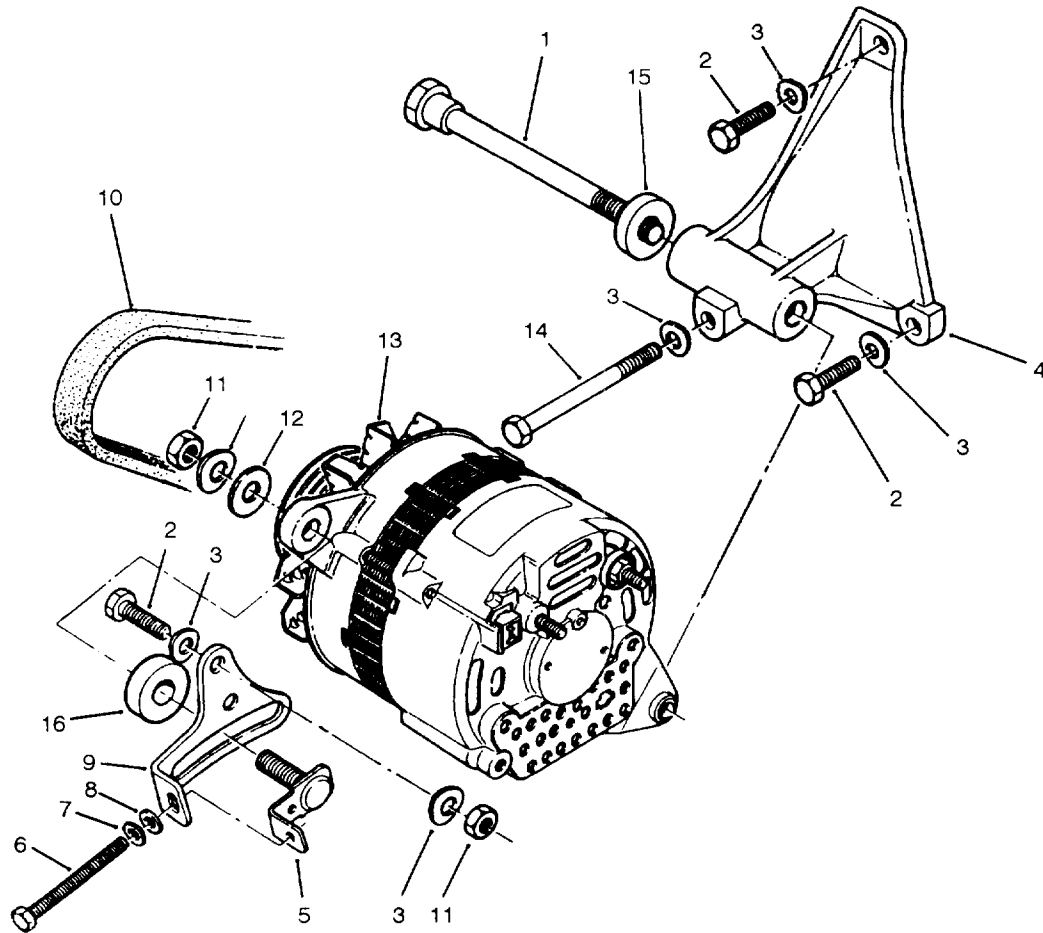


T-0967

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4970	Screw - Shoulder	1
2	48-9460	Screw - Cap Hex. Hd.	3
3	68-9420	Washer - Spring	6
4	76-4980	Bracket - Mounting	1
5	76-4990	Bolt - Slide	1
6	76-5000	Bolt - Adjusting	1
7	76-5010	Washer - Spring	1
8	76-5020	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
9	76-5030	Bracket - Slide	1
10	76-5040	Belt - V	1
11	46-0330	Nut - Hex.	2
12	74-8640	Washer - Flat	1
13	76-5050	Alternator	1
14	76-5060	Screw - Cap Hex. Hd.	1
15	77-3260	Washer	1
16	77-3250	Washer	1

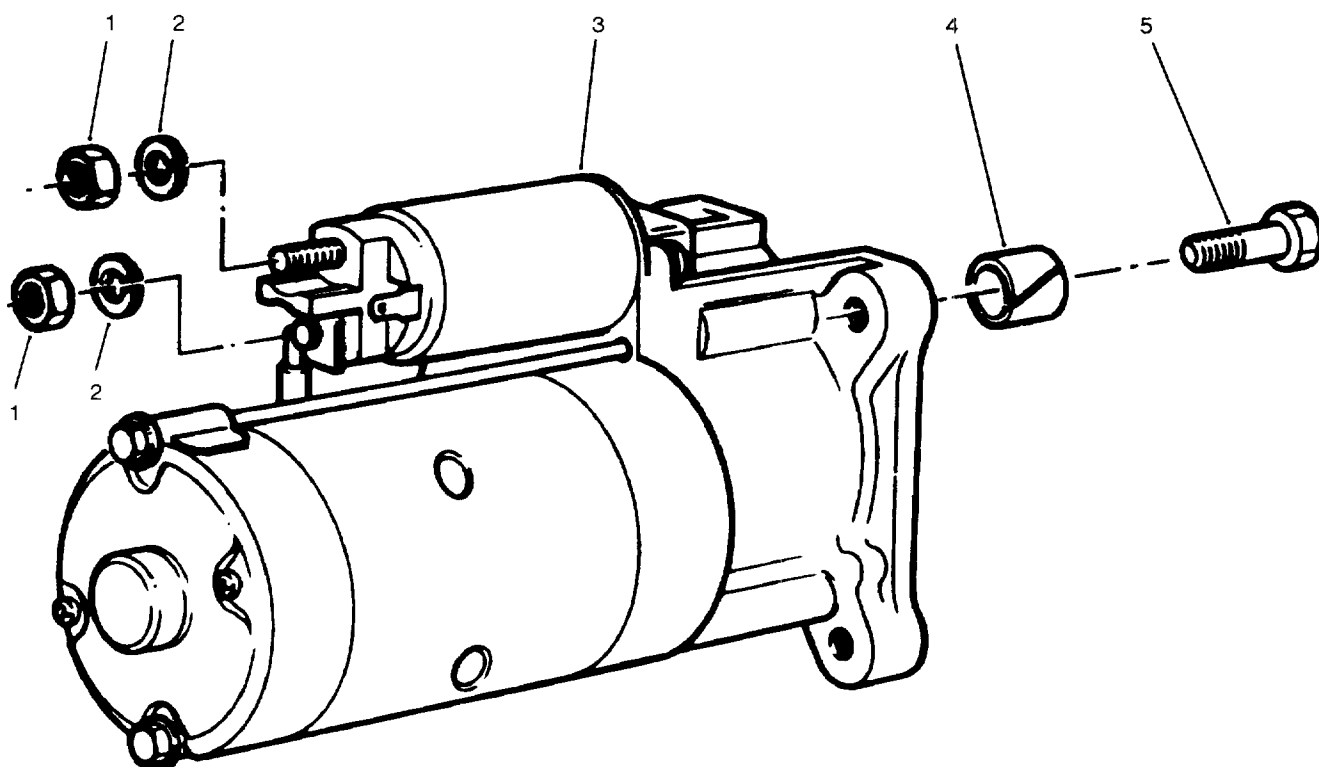


T-0968

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	76-5580	Starter	1

Ref. No.	Part No.	Description	No. Used
4	76-5590	Sleeve - Spring	1
5	48-7810	Screw-Mounting	3

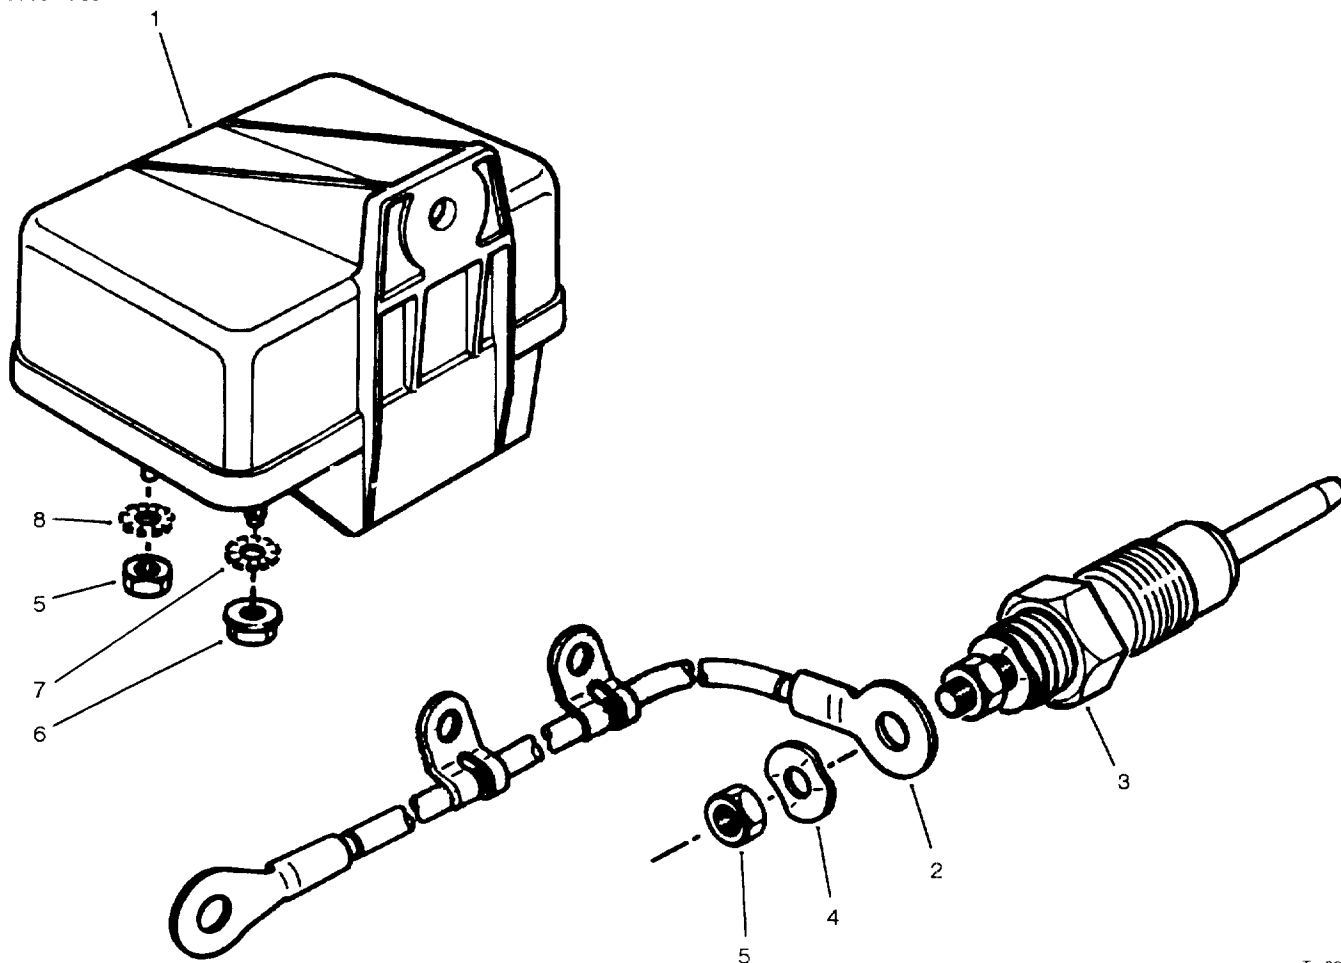


T-0972

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay - Glow Plug	1
2	76-5270	Cable - Glow Plug	4
3	76-5280	Plug - Glow	4
4	76-5290	Washer - Spring	4

Ref. No.	Part No.	Description	No. Used
5	48-7880	Nut - Hex.	5
6	65-7980	Nut - Hex. Flange	1
7	76-5310	Washer - E.T.L.W.	1
8	74-8710	Washer - E.T.L.W.	1

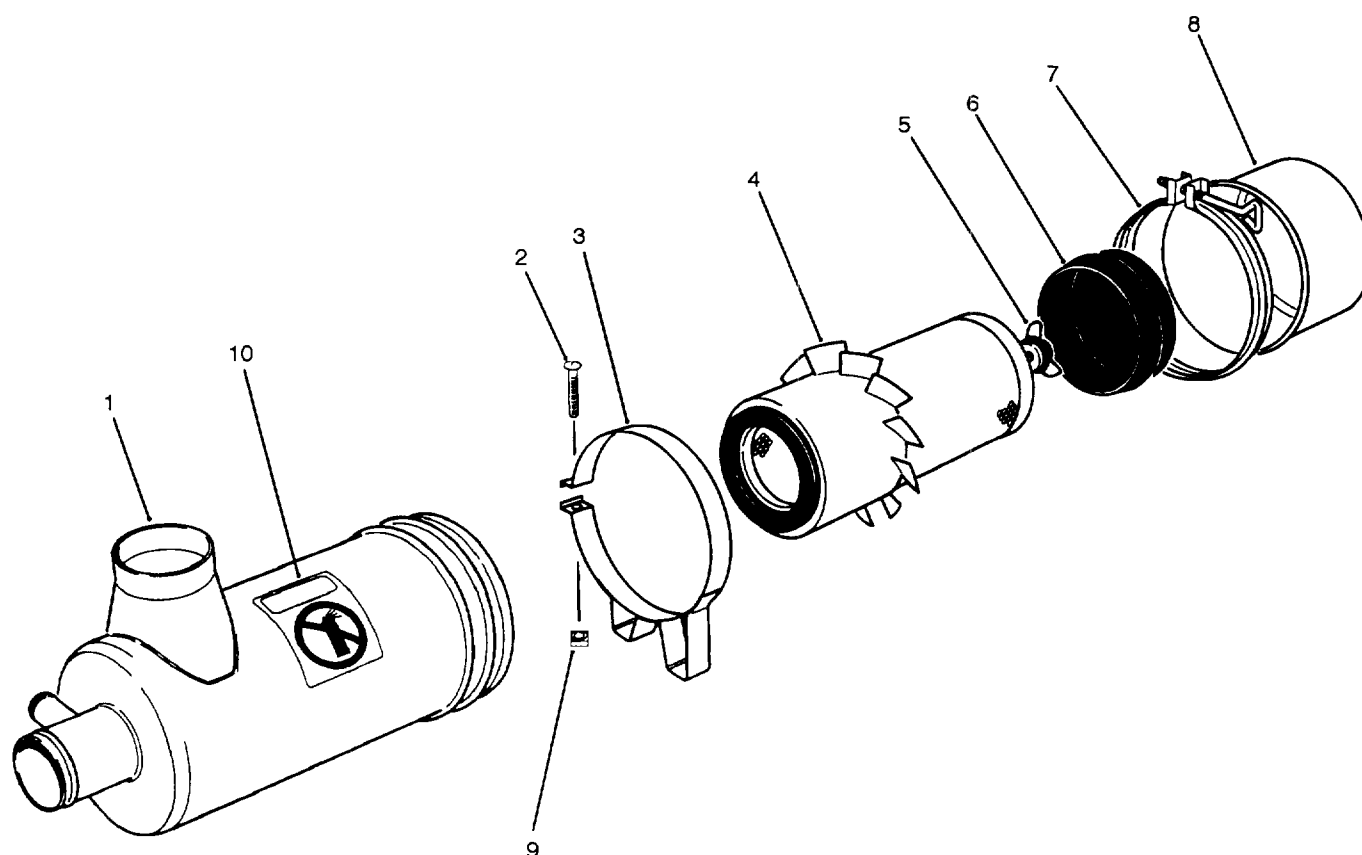


T-1113

AIR CLEANER NO. 74-6000

Ref. No.	Part No.	Description	No. Used
1	74-6000	Air Cleaner Assembly (Incl. Ref. #4-8)	1
2	3258-19	Screw - Rd. Head Machine	2
3	27-7170	Band Assembly (Incl. Ref. 2 & 9)	1
4	27-7110	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
5	27-7120	Nut & Gasket Assembly	1
6	27-7140	Skirt - Baffle	1
7	27-7130	Clamp Assembly	1
8	27-7150	Cap Assembly	1
9	32107-11	Nut	2
10	76-8770	Decal - Caution	1

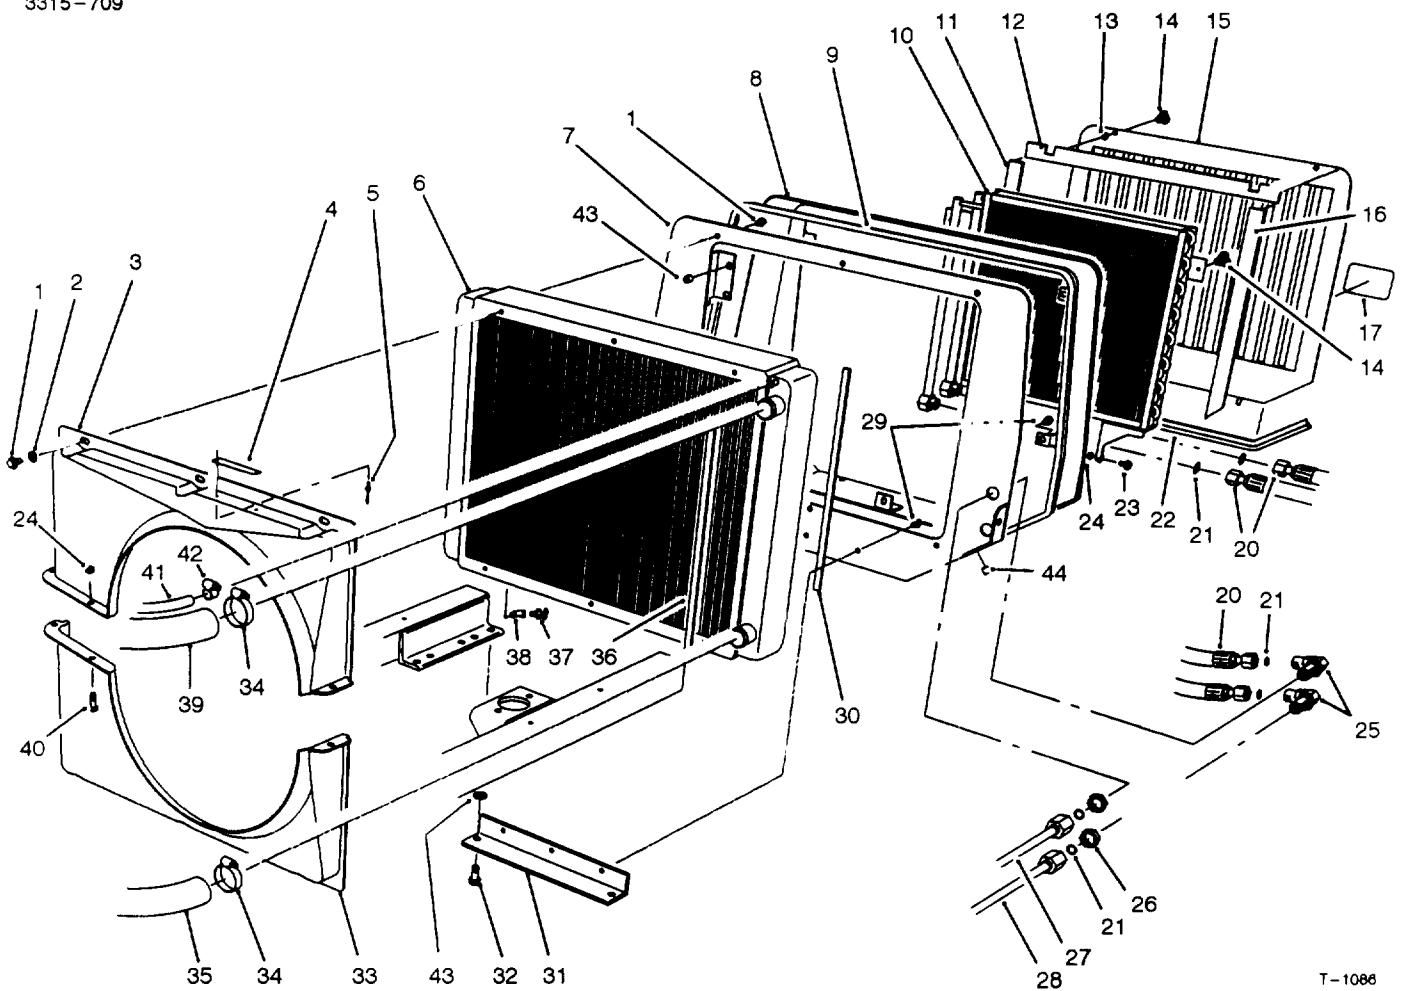


T-1086

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-30	Screw - Hex. Flange Hd.	12
2	3256-23	Washer - Flat	6
3	74-4980	Shroud - Fan Upper	1
4	76-8750	Plate - Caution	1
5	3290-271	Rivet - Pop	2
6	74-3410	Radiator	1
7	14-0939	Radiator Mount Assembly (Incl. Ref. #43 & 44)	1
8	76-6800	Chamber	1
9	76-6363	Moulding - Inner	1
10	82-3740	Oil Cooler Assembly (Incl. Ref. #21)	1
11	82-3640	Foam - Screen R.H.	1
12	82-3650	Foam - Screen Top	1
13	32151-72	Retainer - Push-On	4
14	77-3620	Retainer - Cover	4
15	82-3730	Screen - Radiator	1
16	82-3630	Foam - Screen L.H.	1
17	67-1300	Decal - TORO	1
20	76-9540	Hose - Hydraulic	2
21	237-65	Seal - O-Ring	6
22	76-6362	Moulding - Outer	1
23	37-8770	Screw - Hex. Washer Hd.	2

Ref. No.	Part No.	Description	No. Used
24	3296-47	Nut - Lock	5
25	340-72	Fitting - Hydraulic 90° (Incl. Ref. #21)	2
26	340-74	Nut - Bulkhead	2
27	74-6400	Tube - Hydraulic	1
28	74-6390	Tube - Hydraulic	1
29	3234-11	Screw - Hex. Washer Hd.	7
30	76-6381	Seal - Strip	2
31	74-5460	Angle Radiator Support	1
32	3234-27	Screw - Hex. Washer Hd.	2
33	74-4990	Shroud - Fan Lower	1
34	2412-3	Clamp - Hose	2
35	74-6020	Hose - Radiator Lower	1
36	76-6382	Seal - Strip	2
37	304-46	Fitting - Radiator Drain	1
38	2811-1	Fitting - 45° Elbow	1
39	74-5930	Hose - Radiator Upper	1
40	322-3	Screw - Cap Hex. Hd.	3
41	74-9120	Hose - Expansion Tank	1
42	2412-108	Clamp - Hose	1
43	3256-26	Washer - Flat	2
44	32148-10	Insert - Threaded	10

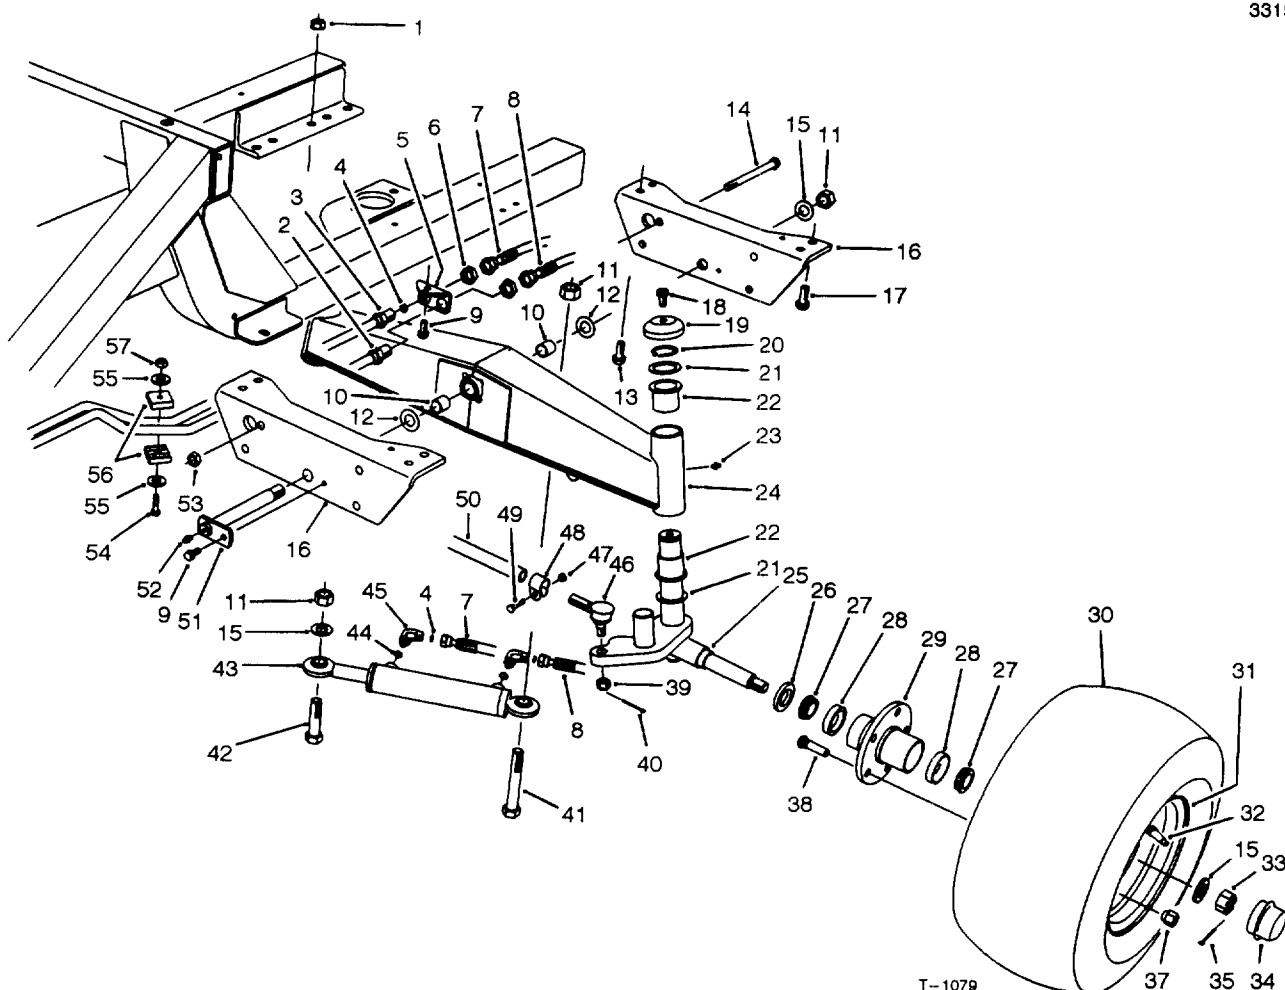


REAR AXLE ASSEMBLY (Model No. 03600)

Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut - Flange Lock	6
2	74-6260	Tube - Hydraulic L.H. (Incl. Ref. #4)	1
3	74-6270	Tube - Hydraulic R.H. (Incl. Ref. #4)	1
4	237-22	Seal - O-Ring	4
5	74-6450	Bracket - Bulkhead	1
6	340-70	Nut - Bulkhead	2
7	76-6550	Hose - Hydraulic Rod End	1
8	76-6900	Hose - Hydraulic Cap End	1
9	32144-11	Screw - Hex. Flange Hd.	2
10	76-4260	Bushing - Sleeve	2
11	3296-51	Nut - Lock	3
12	76-6570	Washer - Thrust	2
13	3234-32	Screw - Cap Hex. Hd.	6
14	325-20	Screw - Cap Hex. Hd.	2
15	3256-28	Washer - Flat	4
16	76-4170	Support - Axle	2
17	3234-27	Screw - Hex. Washer Hd.	2
18	3234-12	Screw - Cap Hex. Hd.	2
19	69-8890	Cap - Spindle	2
20	32151-10	Ring - Retaining	2
21	62-2170	Washer - Thrust	4
22	69-6470	Bushing - Flange	4
23	302-11	Fitting - Grease	2

Ref. No.	Part No.	Description	No. Used
24	74-5000	Rear Axle Assembly (Incl. Ref. #10 & 22-23)	1
25	74-5330	Spindle - L.H.	1
*	74-5350	Spindle - R.H.	1
26	253-129	Seal - Inner	2
27	254-94	Cone - Bearing	4
28	254-72	Cup - Bearing	4
29	21-2820	Hub - Wheel (Incl. Ref. #28 & 38)	2
30	74-5560	Tire	2
31	217-122	Rim	2
32	232-27	Stem - Valve	2
33	32136-5	Nut - Slotted	2
34	241-119	Cap - Hub	2
35	3272-13	Pin - Cotter	2
37	242-50	Nut - Lug	10
38	10-6830	Stud - Drive	10
39	32136-13	Nut - Slotted	2
40	3272-12	Pin - Cotter	2
41	76-8990	Bolt - Cylinder	1
42	328-25	Screw - Cap Hex. Hd.	1
43	88-1250	Hydraulic Cylinder Assy.	1
44	237-78	Seal - O-Ring	2
45	340-97	Fitting - Hydraulic 90° (Incl. Ref. #4 & 44)	2


*Not Illustrated

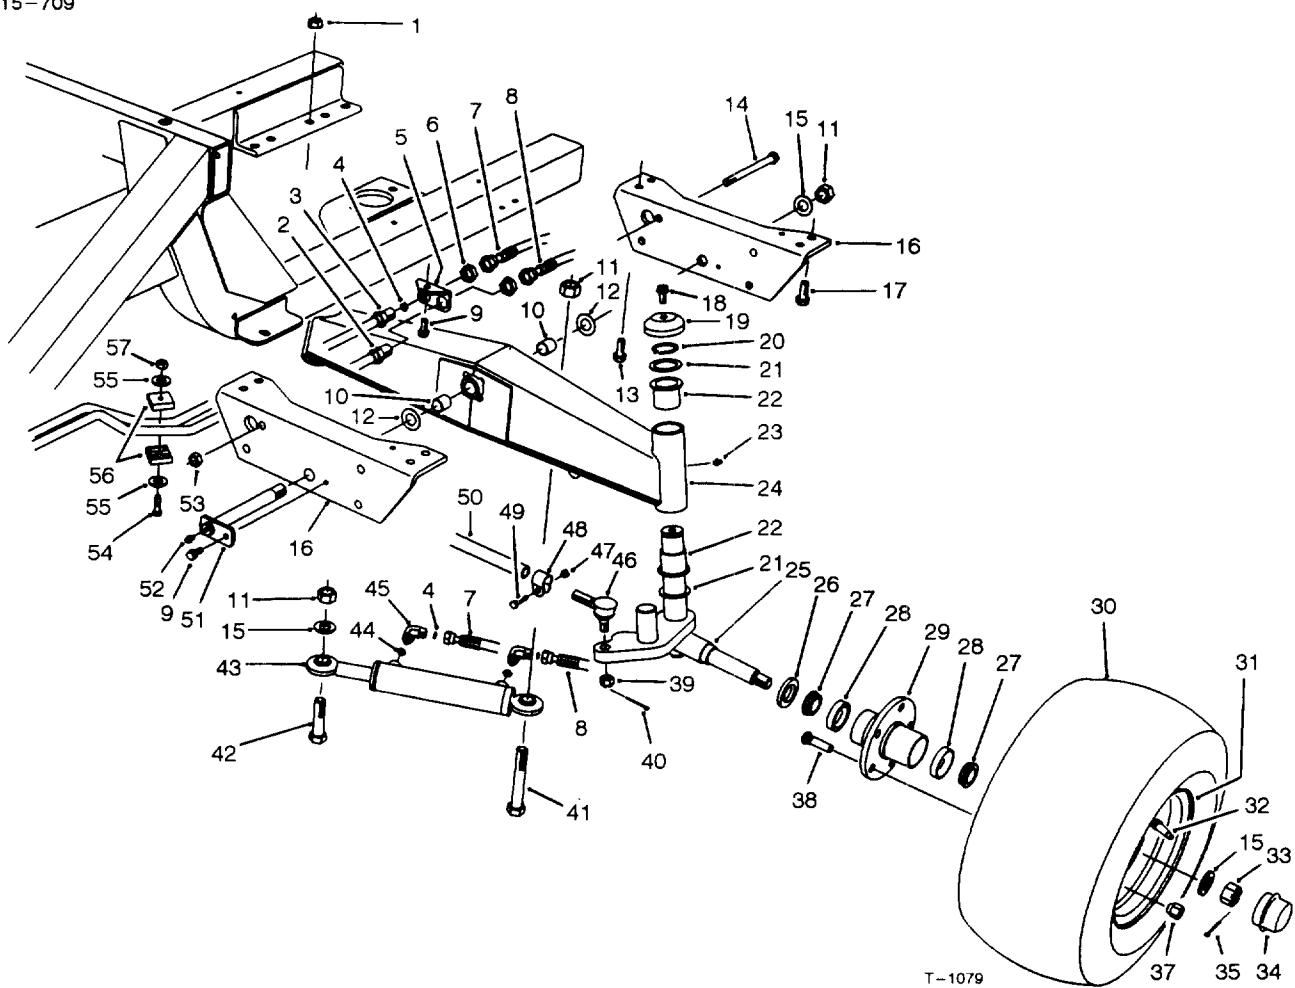

REAR AXLE ASSEMBLY (Model No. 03600) (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
46	2411-46	Joint - Ball L.H. (Incl. Ref. #39)	1	51	74-5250	Pin - Axle Pivot	1
*	2411-45	Joint - Ball R.H. (Incl. Ref. #39)	1	52	302-2	Fitting - Grease	1
47	32152-5	Nut - Lock	2	53	3296-45	Nut - Lock	2
48	2412-122	Clamp Assembly (Incl. Ref. #47 & 49)	2	54	321-8	Screw - Cap Hex. Hd.	1
49	3210-7	Screw - Cap Hex. Hd.	2	55	3256-22	Washer - Flat	2
50	2412-123	Tie Rod Assembly (Incl. Ref. #47-49)	1	56	56-7973	Clamp - Tube	2
				57	32153-4	Nut - Lock	1
				*	74-5940	Tie Rod Assembly (Incl. Ref. #39 & 46-50)	1

*Not Illustrated

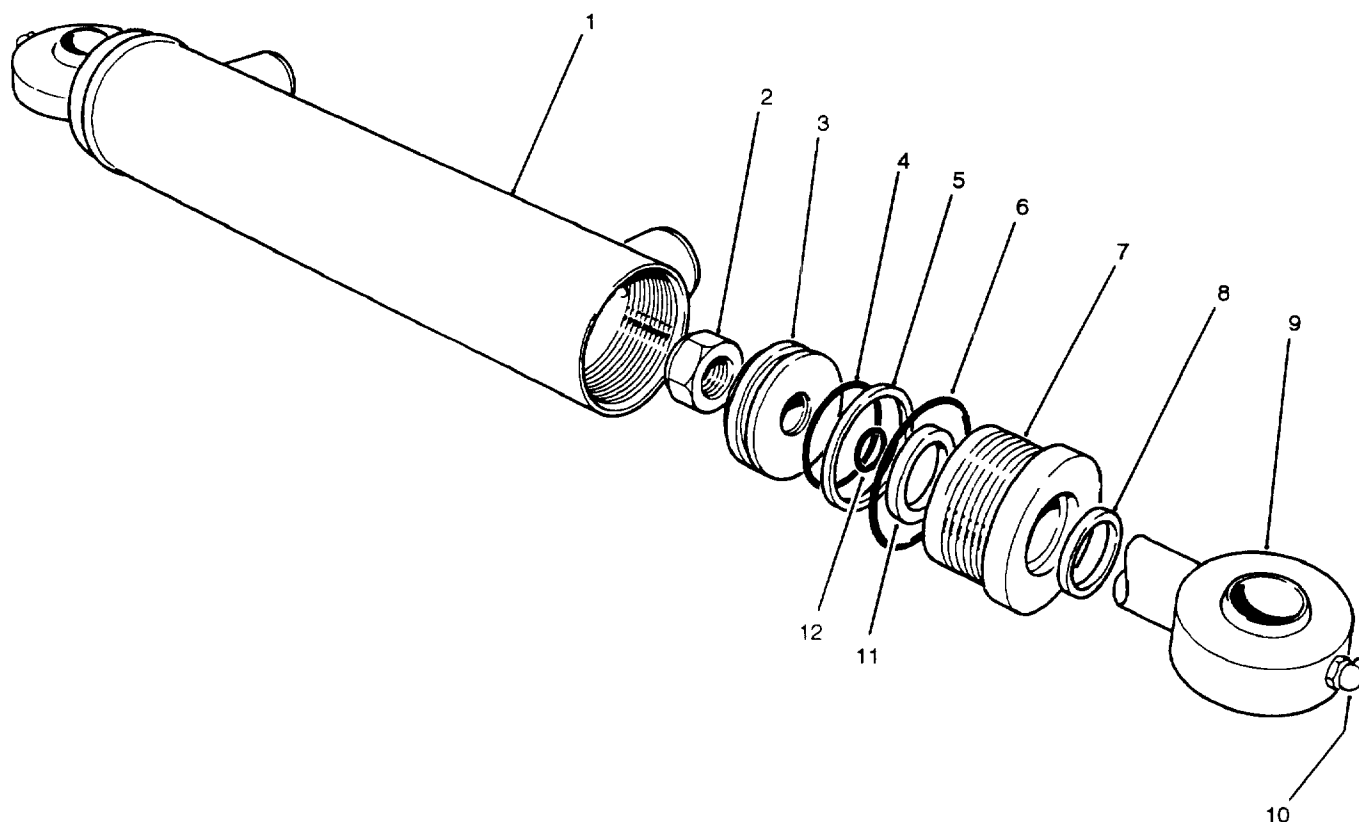


T-0994

HYDRAULIC CYLINDER NO. 88-1250 (Model No. 03600)

Ref. No.	Part No.	Description	No. Used
1	92-2573	Butt & Tube Assy. (Incl. Ref. #10)	1
2	88-3690	Nut-Lock	1
3	88-3670	Piston	1
4		O-Ring	1
5		Seal-Teflon	1
6		O-Ring	1
7	88-3680	Gland	1

Ref. No.	Part No.	Description	No. Used
8		Wiper	1
9	88-3660	Rod-Piston (Incl. Ref. #10)	1
10		Fitting-Grease	2
11		U-Cup	1
12		O-Ring	1
*	88-3720	Seal Kit (Incl. Ref. #4-6, 8, 11 & 12)	1

*Not Illustrated

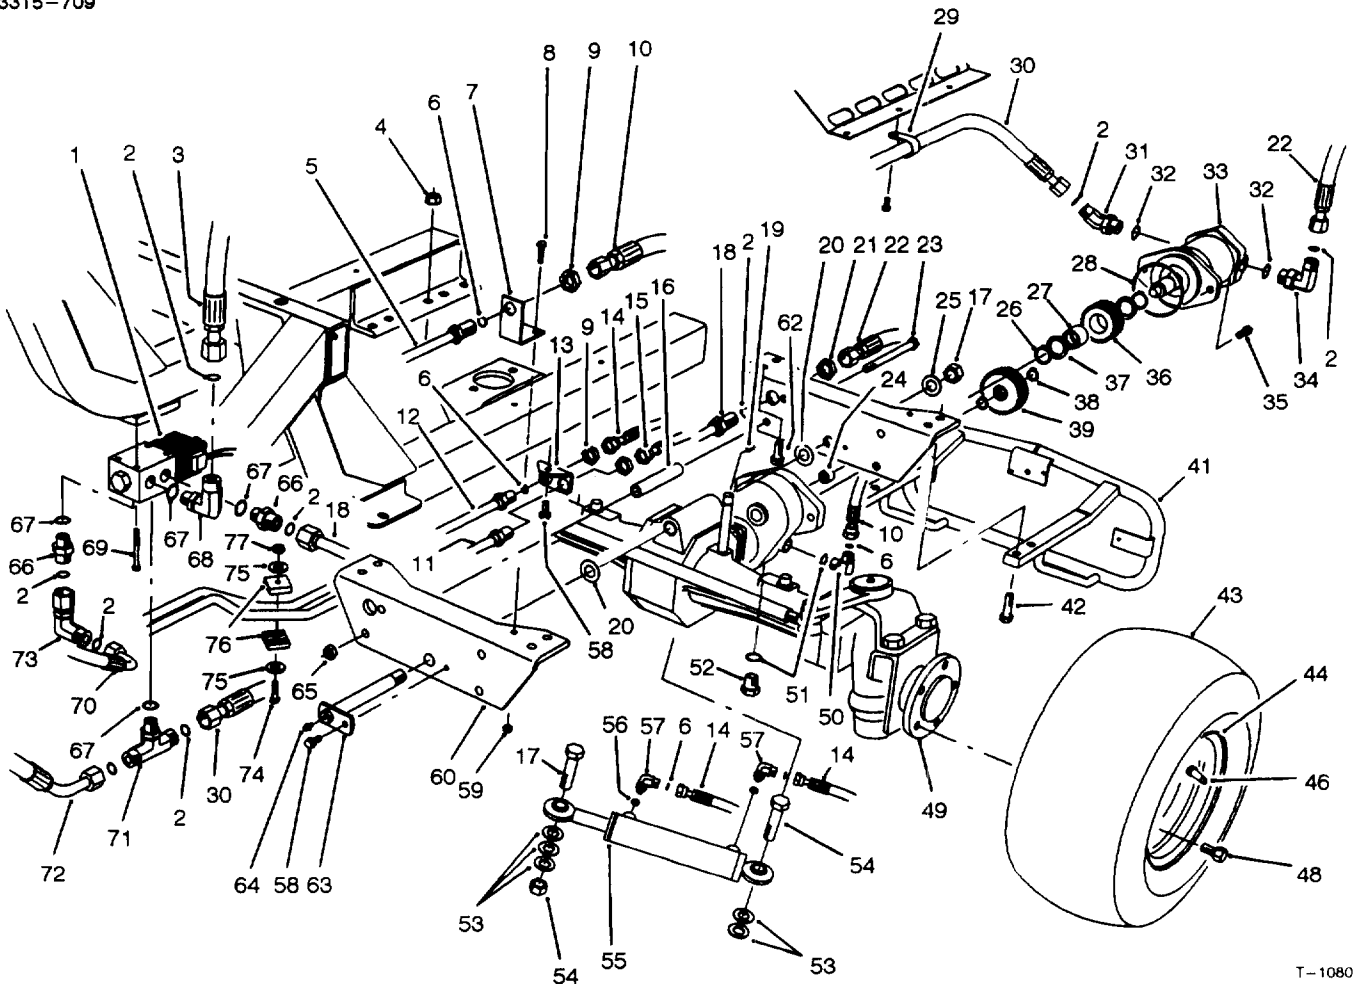


T-1080

REAR AXLE ASSEMBLY (Model No. 03601)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-9970	Valve - Solenoid	1	24	74-5700	Bearing - Needle	1
2	237-65	Seal - O-Ring	9	25	3256-28	Washer - Flat	1
3	86-2740	Hose - Hydraulic	1	26	32151-96	Ring - Retaining	2
4	32128-23	Nut - Flange Lock	8	27	71-4580	Clutch - Roller	1
5	74-6230	Tube - Hydraulic (Incl. Ref. #6)	1	28	237-166	Seal - O-Ring	1
6	237-22	Seal - O-Ring	5	29	2412-74	Clamp - R	1
7	76-9290	Bracket - Bulkhead	1	30	86-2710	Hose - Hydraulic	1
8	3234-4	Screw - Cap Hex. Hd.	1	31	340-156	Fitting - Hydraulic 45° (Incl. Ref. #2 & 32)	1
9	340-70	Nut - Bulkhead	3	32	237-81	Seal - O-Ring	2
10	76-8180	Hose - Hydraulic	1	33	76-6580	Motor - Hydraulic	1
11	74-6260	Tube - Hydraulic L.H. (Incl. Ref. #6)	1	34	340-139	Fitting - Hydraulic 90° (Incl. Ref. #2 & 32)	1
12	74-6270	Tube - Hydraulic R.H. (Incl. Ref. #6)	1	35	325-4	Screw - Cap Hex. Hd.	2
13	74-6450	Bracket - Bulkhead	1	36	76-4200	Gear - Motor	1
14	76-9590	Hose - Hydraulic	2	37	71-4590	Washer - Thrust	2
16	88-1550	Stop - Axle	2	38	32120-15	Ring - Retaining	2
17	3296-51	Nut - Lock	3	39	76-4190	Gear - Axle	1
18	86-2770	Tube - Hydraulic (Incl. Ref. #2)	1	41	76-9200	Bumper	1
19	3247-2	Screw - Set	1	42	3234-27	Screw - Cap Hex. Hd.	2
20	76-6570	Washer - Thrust	2	43	74-5560	Tire	2
21	340-74	Nut - Bulkhead	1	44	217-122	Rim	2
22	86-2730	Hose - Hydraulic	1	46	232-27	Stem - Valve	2
23	325-20	Screw - Cap Hex. Hd.	2	48	74-5500	Bolt - Wheel	10
				49	74-5620	Axle Assembly	1

*Not Illustrated

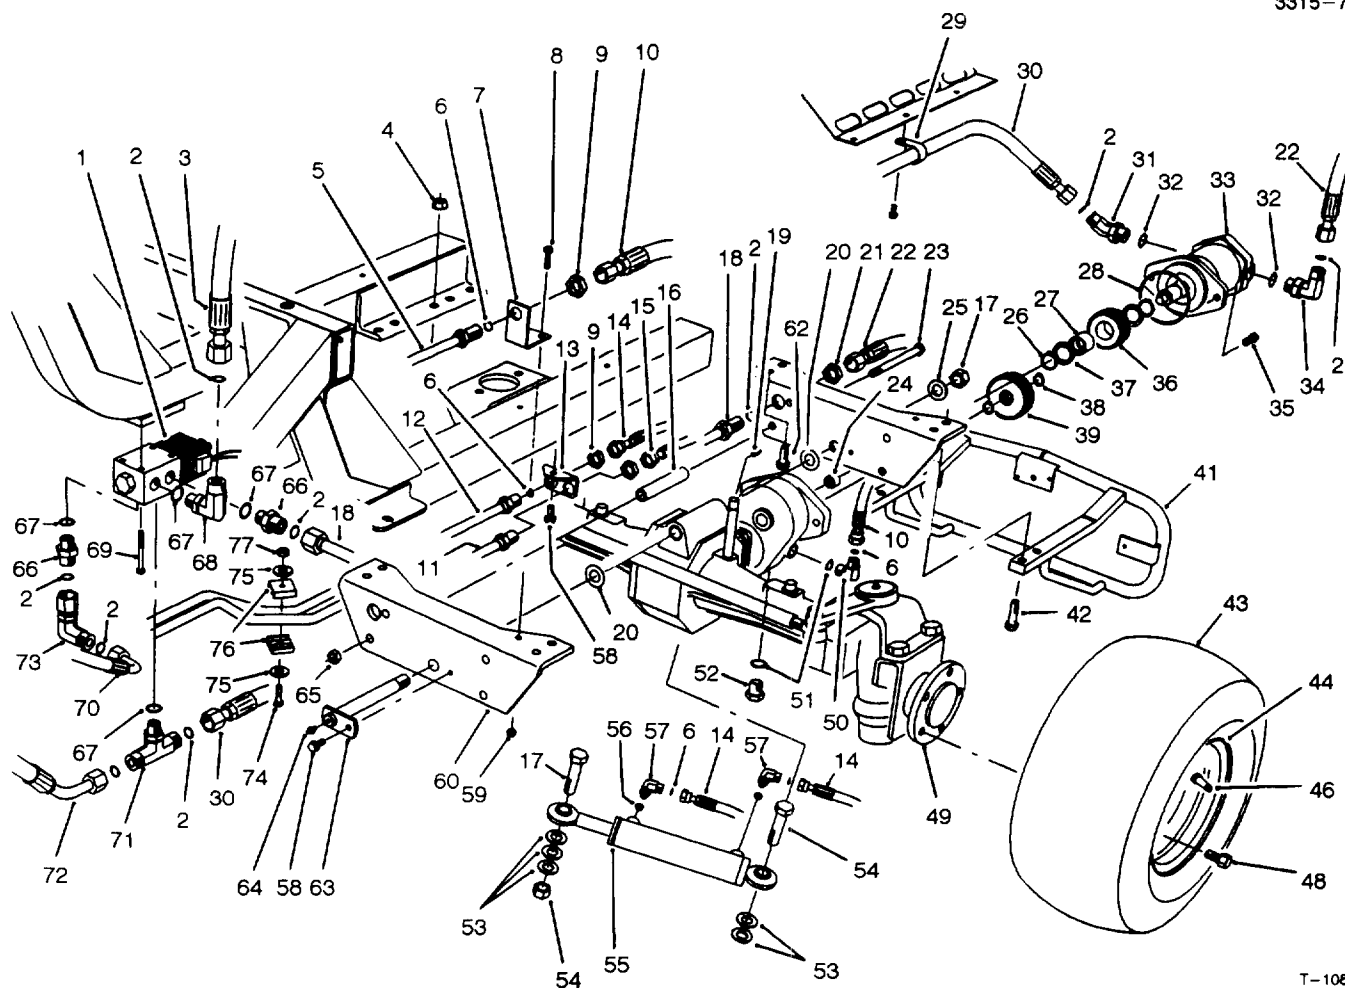


T-1080

REAR AXLE ASSEMBLY (Model No. 03601) (Cont.)

Ref. No.	Part No.	Description	No. Used
50	340-77	Fitting - Hydraulic 90° (Incl. Ref. #6 & 51)	1
51	237-42	Seal - O-Ring	2
52	353-508	Plug - Hydraulic (Incl. Ref. #51)	1
53	67-9410	Washer - Flat	5
54	328-25	Screw - Cap Hex. Hd.	2
55	74-3450	Cylinder - Hydraulic	1
56	237-78	Seal - O-Ring	2
57	340-97	Fitting - Hydraulic 90° (Incl. Ref. #6 & 56)	2
58	32144-11	Screw - Hex. Washer Hd.	2
59	32128-33	Nut - Flange Lock	1
60	76-4170	Support - Axle	2
62	3234-32	Screw - Cap Hex. Hd.	6
63	74-5250	Pin - Axle Pivot	1
64	302-2	Fitting - Grease	1

Ref. No.	Part No.	Description	No. Used
65	3296-45	Nut - Lock	2
66	340-155	Fitting - Hydraulic Straight (Incl. Ref. #2 & 67)	2
67	237-79	Seal - O-Ring	4
68	340-153	Fitting - Hydraulic 90° (Incl. Ref. #2 & 67)	1
69	321-15	Screw - Cap Hex. Hd.	2
70	86-2720	Hose - Hydraulic	1
71	340-157	Fitting - Hydraulic Tee (Incl. Ref. #2 & 67)	1
72	77-4080	Hose - Hydraulic	1
73	340-160	Fitting - Hydraulic	1
74	321-8	Screw - Cap Hex. Hd.	1
75	3256-22	Washer - Flat	2
76	56-7973	Clamp - Hose	2
77	32153-4	Nut - Lock	1

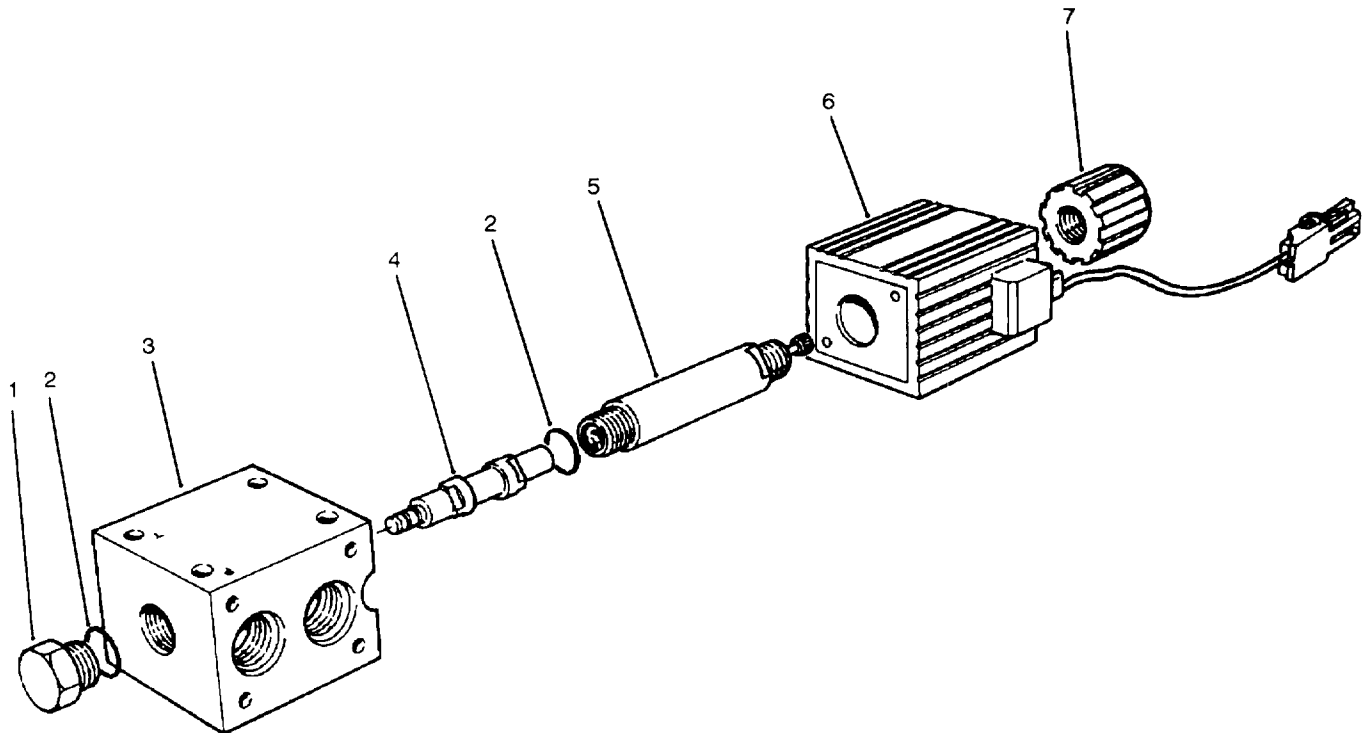


T-1126

SOLENOID VALVE ASSEMBLY NO. 76-9970 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	237-80	Adapter Assembly (Incl. Ref. #2)	1
2		O-Ring	2
3		Valve - Directional	1
4		Spool	1

Ref. No.	Part No.	Description	No. Used
5	218-591	Tube Assembly (Incl. Ref. #2)	1
6		Coil Assembly	1
7		Nut - Coil	1

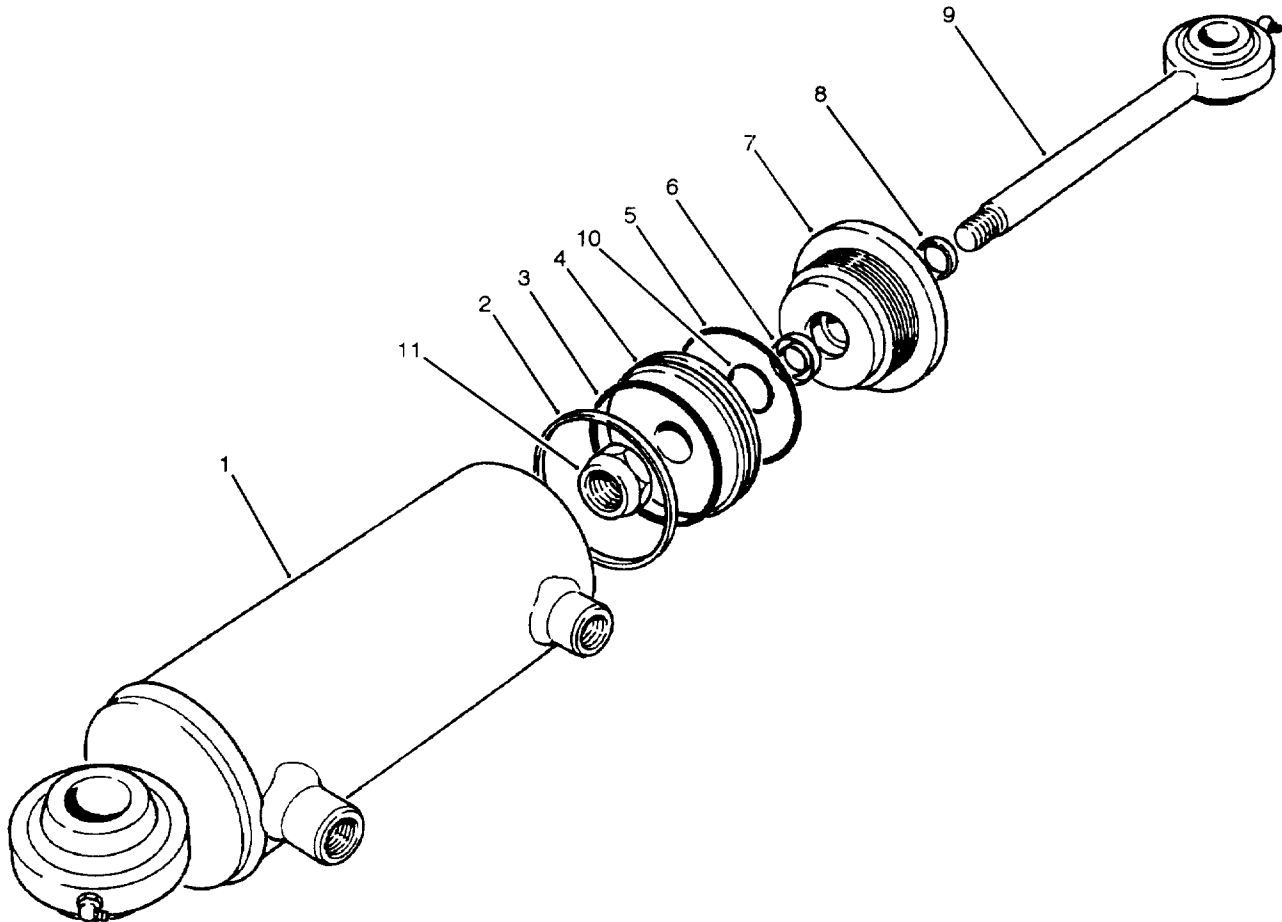


T-1037

HYDRAULIC CYLINDER NO. 74-3450 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	74-9610	Butt & Tube Assembly	1
2		Seal-Teflon	1
3		O-Ring	1
4	66-1940	Piston	1
5		O-Ring	1
6		U-Cup	1
7	74-9640	Gland	1

Ref. No.	Part No.	Description	No. Used
8		Wiper	1
9	74-9600	Piston Rod Assembly	1
10		O-Ring	1
11	66-1930	Nut-Lock	1
*	74-9710	Kit - Seal (Incl. Ref. #2, 3, 5, 6, 8, & 10)	1


*Not Illustrated

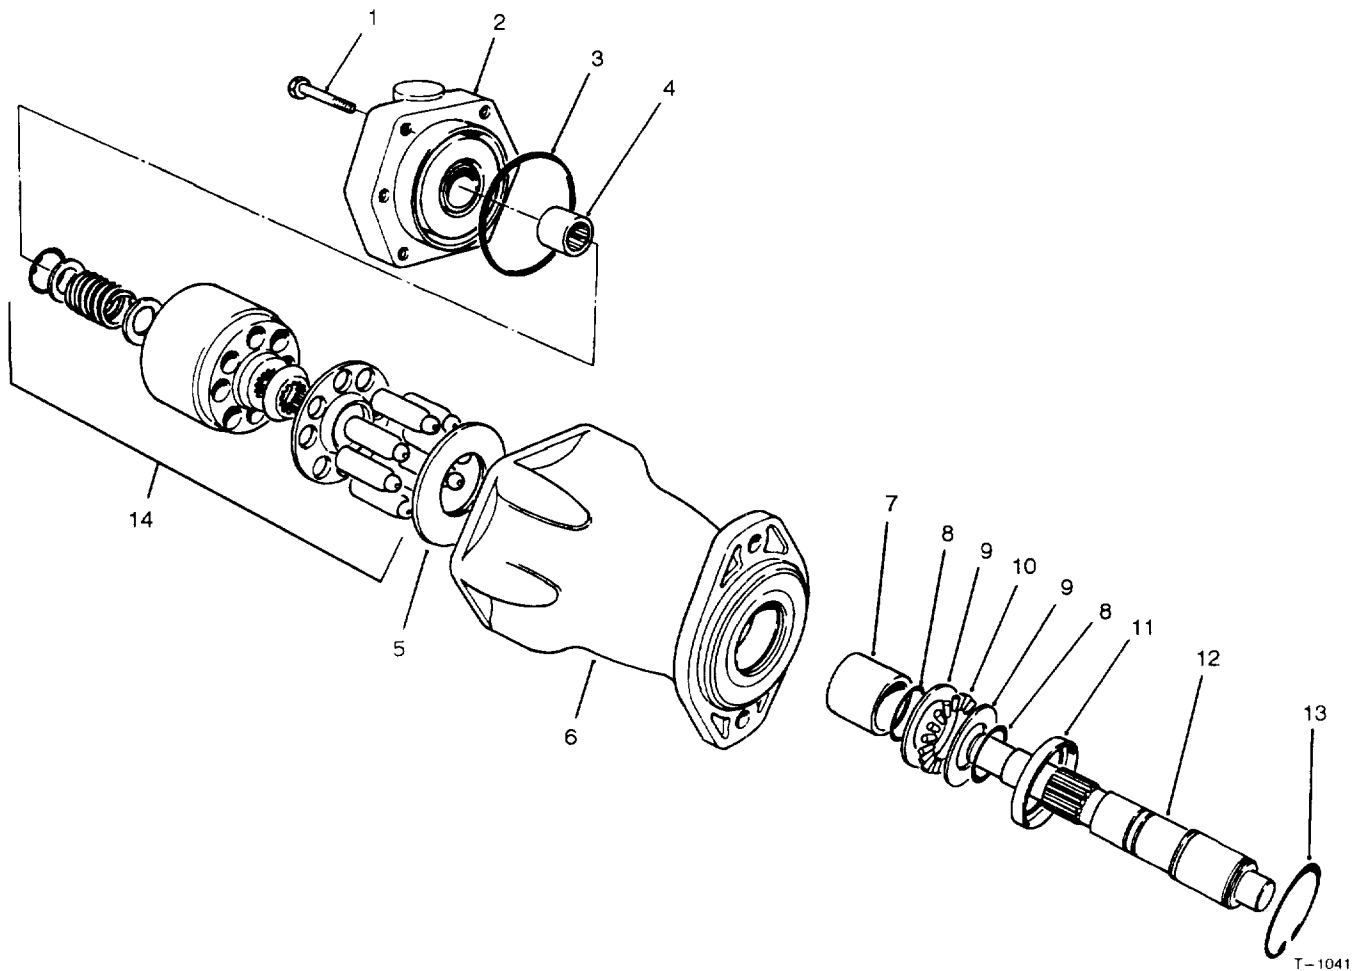

HYDRAULIC MOTOR NO. 76-6580 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-6990	Screw - Cap, Hex. Hd.	6
2	76-6920	Back Plate Assembly (Incl. Ref. #4)	1
3	76-6980	O-Ring	1
4		Bearing	1
5	76-6970	Insert - Camplate	1
6	76-6940	Housing Assembly (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
7		Bearing	1
8	76-7000	Ring - Retaining	2
9	76-6950	Race - Thrust	1
10	76-6960	Bearing - Thrust	1
11	76-7020	Spacer	1
12	76-6930	Shaft - Drive	1
13	76-7010	Ring - Retaining	1
14	76-6910	Rotating Assembly	1

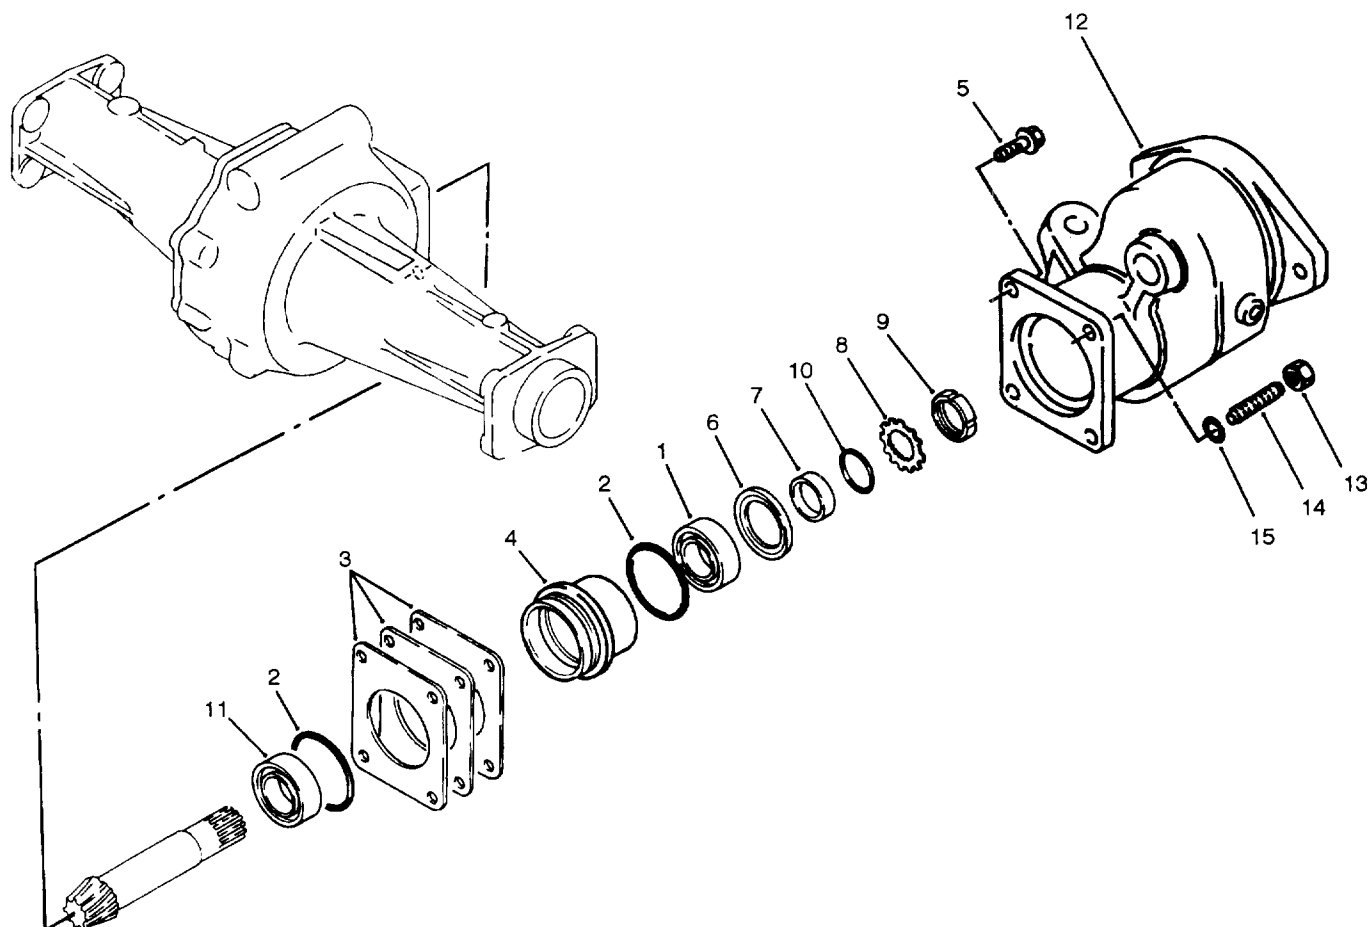


T-1109

SLEEVE ASSEMBLY AXLE NO. 74-5620 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-7370	Bearing	1
2	76-7400	O-Ring	2
3	76-7410	Shim - 0.1 mm	A/R
*	76-7420	Shim - 0.2 mm	A/R
*	76-7430	Shim - 0.4 mm	A/R
4	76-7320	Sleeve	1
5	76-7150	Bolt	3
6	76-7340	Seal - Oil	1
7	76-7350	Bushing	1
8	76-7380	Washer	1

Ref. No.	Part No.	Description	No. Used
9	76-7390	Nut - Lock	1
10	76-7360	O-Ring	1
11	76-7330	Bearing	1
12	74-5630	Adapter	1
13	76-7690	Nut	1
14	76-7450	Bolt - Stud	1
15	76-7460	Washer	1
*	77-4010	Shim Set (Incl. Ref. #3)	1

*Not Illustrated

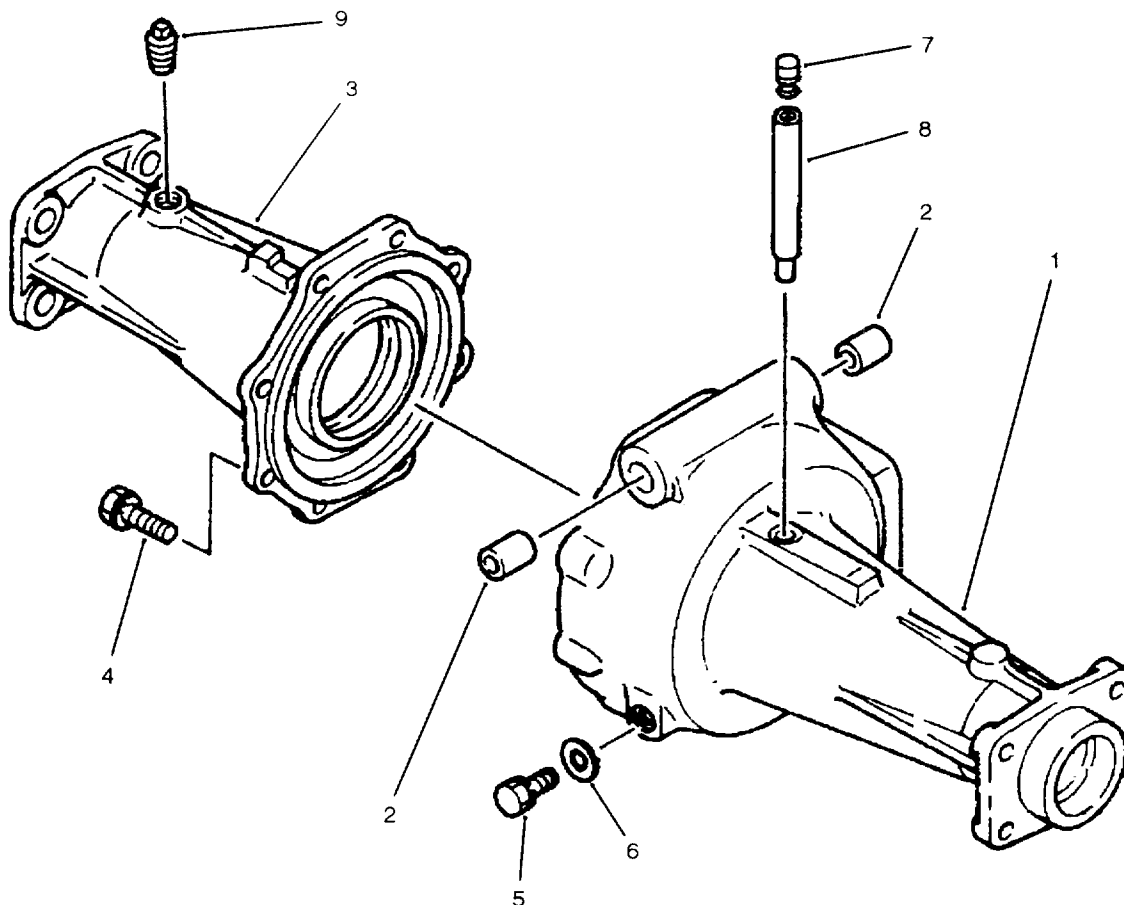


T-1112

AXLE HOUSING ASSEMBLY

AXLE NO. 74-5620 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-7100	Housing - Axle A	1
2	76-4260	Bushing	2
3	76-7130	Housing - Axle B	1
4	76-7150	Bolt	8
5	76-7110	Plug	1

Ref. No.	Part No.	Description	No. Used
6	76-7120	Seal - Washer	1
7	76-7480	Plug - Vent	1
8	76-7470	Pipe	1
9	76-7140	Plug	1

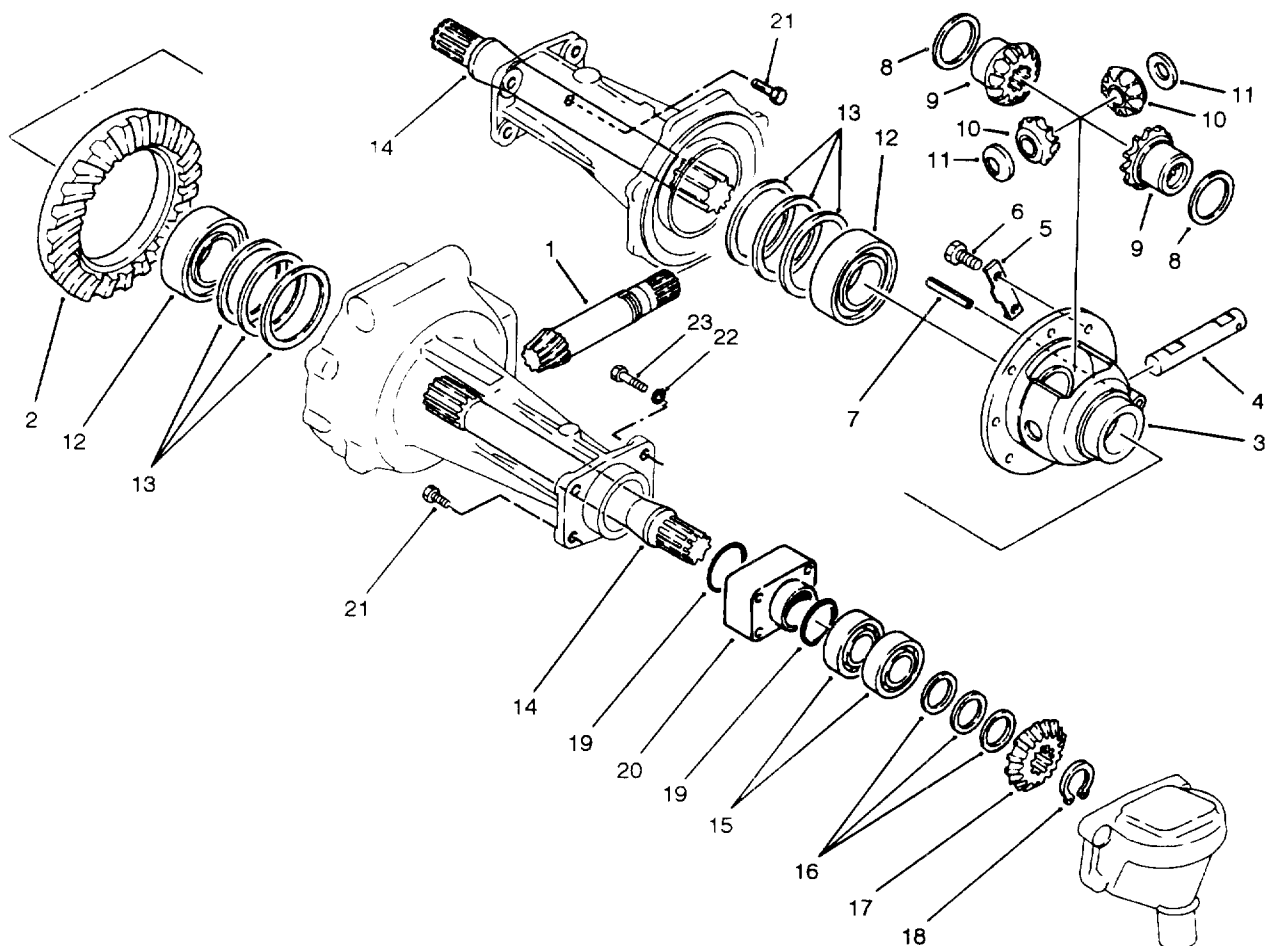


T-1111

DIFFERENTIAL & SHAFT ASSEMBLY AXLE NO. 74-5620 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft - Drive	1
2	76-7240	Ring - Gear	1
3	76-7170	Case - Differential	1
4	76-7200	Shaft - Pinion	1
5	76-7230	Washer - Lock	4
6	76-7260	Bolt	8
7	76-7270	Pin - Spring	1
8	76-7220	Washer - Thrust	2
9	76-7190	Gear - Side	2
10	76-7180	Pinion - Mate	2
11	76-7210	Washer - Thrust	2
12	76-7280	Bearing	2
13	76-7290	Shim - 0.1 mm	A/R
*	76-7300	Shim - 0.2 mm	A/R
*	76-7310	Shim - 0.3 mm	A/R
14	76-7490	Shaft - Differential	2
15	76-7500	Bearing	4

Ref. No.	Part No.	Description	No. Used
16	76-7520	Shim - 0.1 mm	A/R
*	76-7530	Shim - 0.2 mm	A/R
*	76-7540	Shim - 0.4 mm	A/R
17	76-7510	Pinion - 14T	2
18	76-7550	Ring - Retaining	2
19	76-7580	Seal - O-Ring	4
20	76-7590	Spacer	2
21	76-7600	Bolt - Reamer	2
22	76-7620	Washer - Lock	6
23	76-7610	Bolt	6
*	76-7160	Gear Case Assembly (Incl. Ref. #2-11)	1
*	77-4000	Shim Set (Incl. Ref. #13)	1
*	77-4020	Shim Set (Incl. Ref. #16)	1

*Not Illustrated

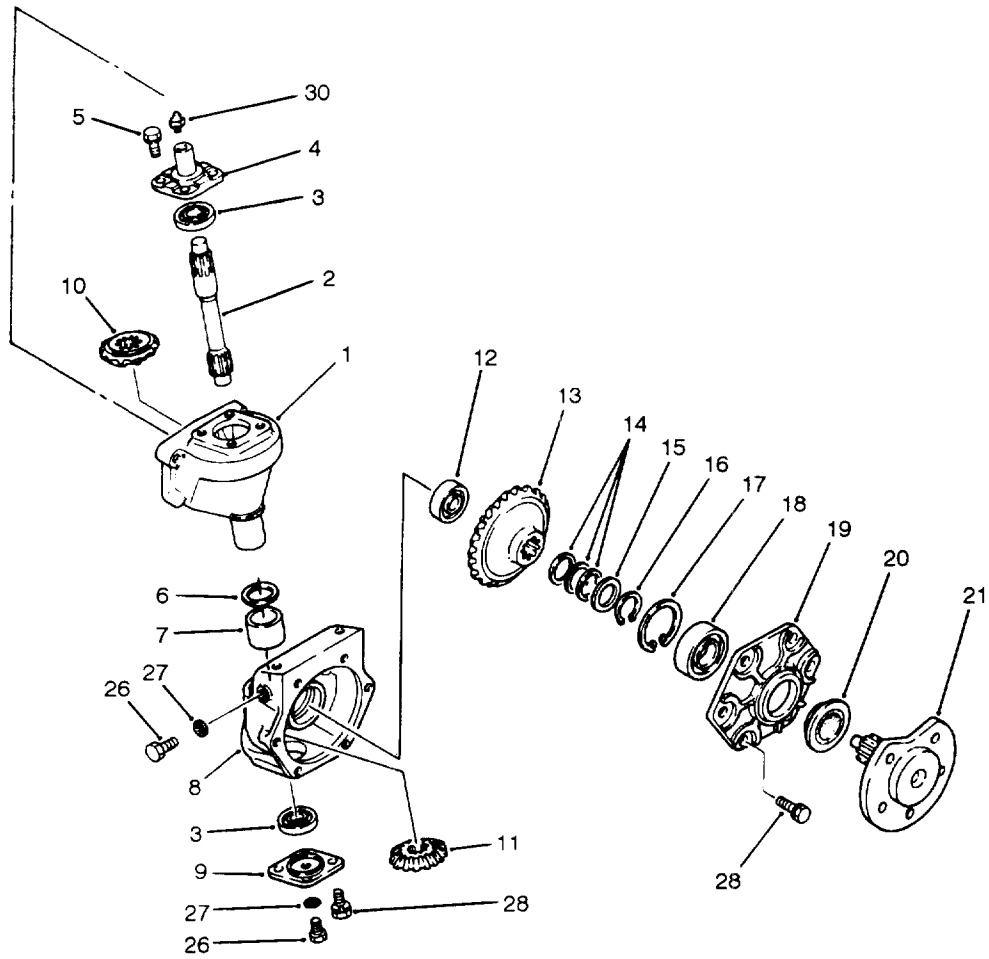


T-1110

STEERING GEAR CASE ASSEMBLY AXLE NO. 74-5620 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7560	Case - Gear	2	14	76-7890	Shim - 0.15 mm	A/R
2	76-7650	Shaft - Final Drive	2	*	76-7900	Shim - 0.2 mm	A/R
3	76-7670	Bearing	4	*	76-7910	Shim - 0.4 mm	A/R
4	76-7660	Holder - 25 mm L.H.	1	15	76-7880	Spacer	2
*	76-7630	Holder - 20 mm R.H.	1	16	76-7920	Ring - Retaining	2
5	76-7640	Bolt	8	17	76-7930	Ring - Retaining	2
6	76-7740	Seal - Oil	2	18	76-7860	Bearing	2
7	76-7730	Bushing	2	19	76-7810	Holder - Bearing	2
8	76-7680	Case - Final Drive	2	20	76-7870	Seal - Oil	2
9	76-7770	Cover	2	21	76-7830	Shaft - Wheel	2
10	76-7510	Pinion - 14T	2	26	76-7110	Plug	4
11	76-7750	Pinion - 15T	2	27	76-7120	Seal - Washer	4
12	76-7850	Bearing	2	28	76-7640	Bolt	20
13	76-7840	Gear - Bevel	2	30	76-7960	Fitting - Grease	2
				*	77-4030	Shim Set (Incl. Ref. #14)	1

*Not Illustrated

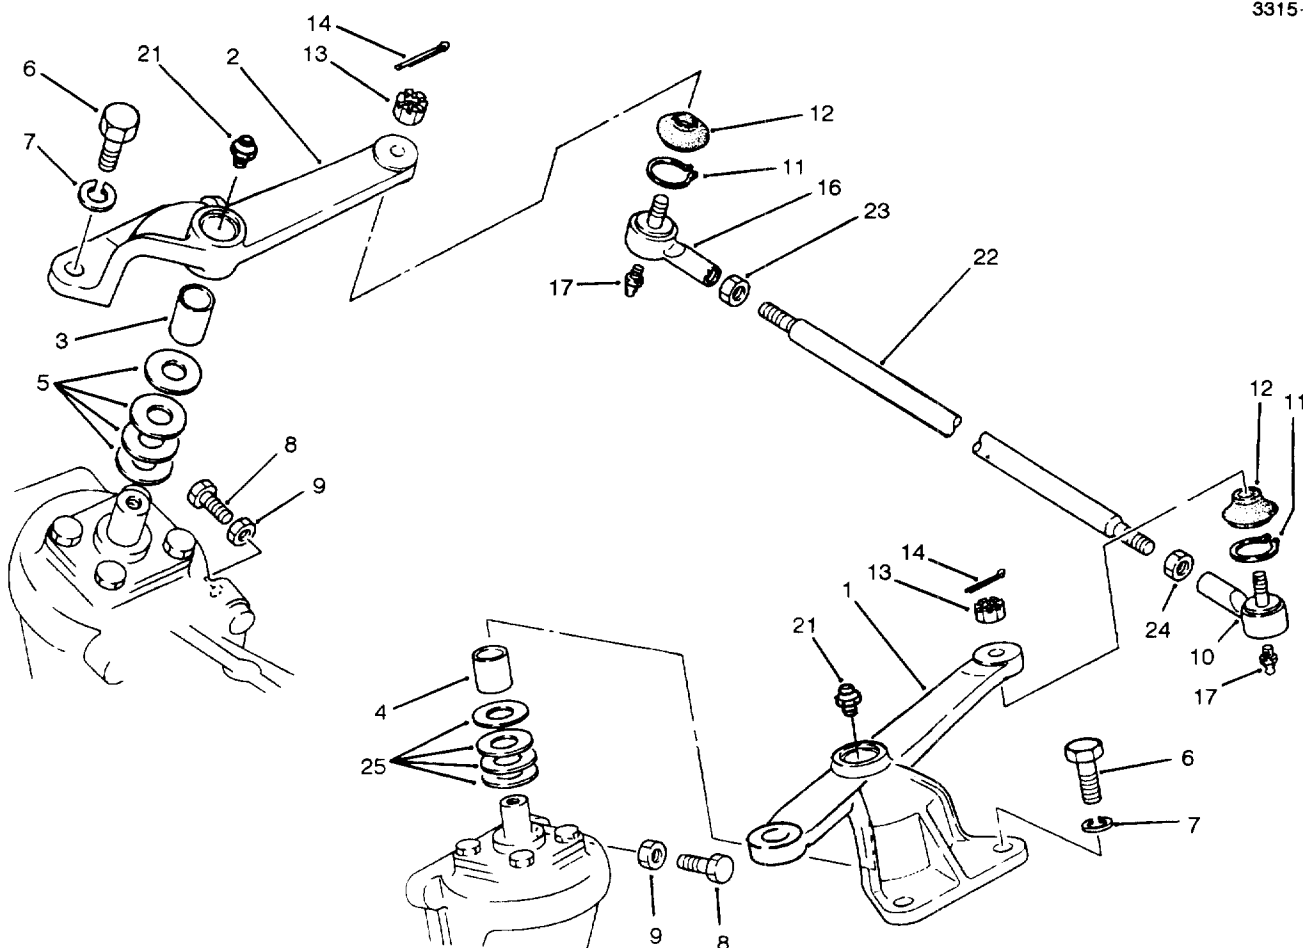


T-1108

STEERING ARM LINKAGE AXLE NO. 74-5620 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-4270	Arm - Drag Link	1
2	76-7940	Arm - Tie Rod	1
3	76-4260	Bushing	1
4	76-7950	Bushing	1
5	76-7820	Shim - 1.0 mm	A/R
*	76-7970	Shim - 1.4 mm	A/R
*	76-7980	Shim - 1.2 mm	A/R
*	76-7990	Shim - .08 mm	A/R
6	76-8000	Bolt	4
7	76-8010	Washer	2
8	76-7710	Bolt	2
9	76-7720	Nut	4
10	76-8030	Rod End - L.H.	1
11		Ring - Retaining	2
12		Cover	2
13		Nut - Slotted	2

Ref. No.	Part No.	Description	No. Used
14		Pin - Cotter	2
16	76-8050	Rod End - R.H.	1
17		Fitting - Grease	2
21	76-7960	Fitting - Grease	2
22	76-8020	Rod - Tie	1
23	76-8060	Nut - R.H.	1
24	76-8040	Nut - L.H.	1
25	76-7700	Shim - 0.8 mm	A/R
*	76-7760	Shim - 1.0 mm	A/R
*	76-7780	Shim - 1.2 mm	A/R
*	76-7790	Shim - 1.4 mm	A/R
*	77-4050	Shim Set (Incl. Ref. #5)	1
*	77-4040	Shim Set (Incl. Ref. #25)	1


*Not Illustrated

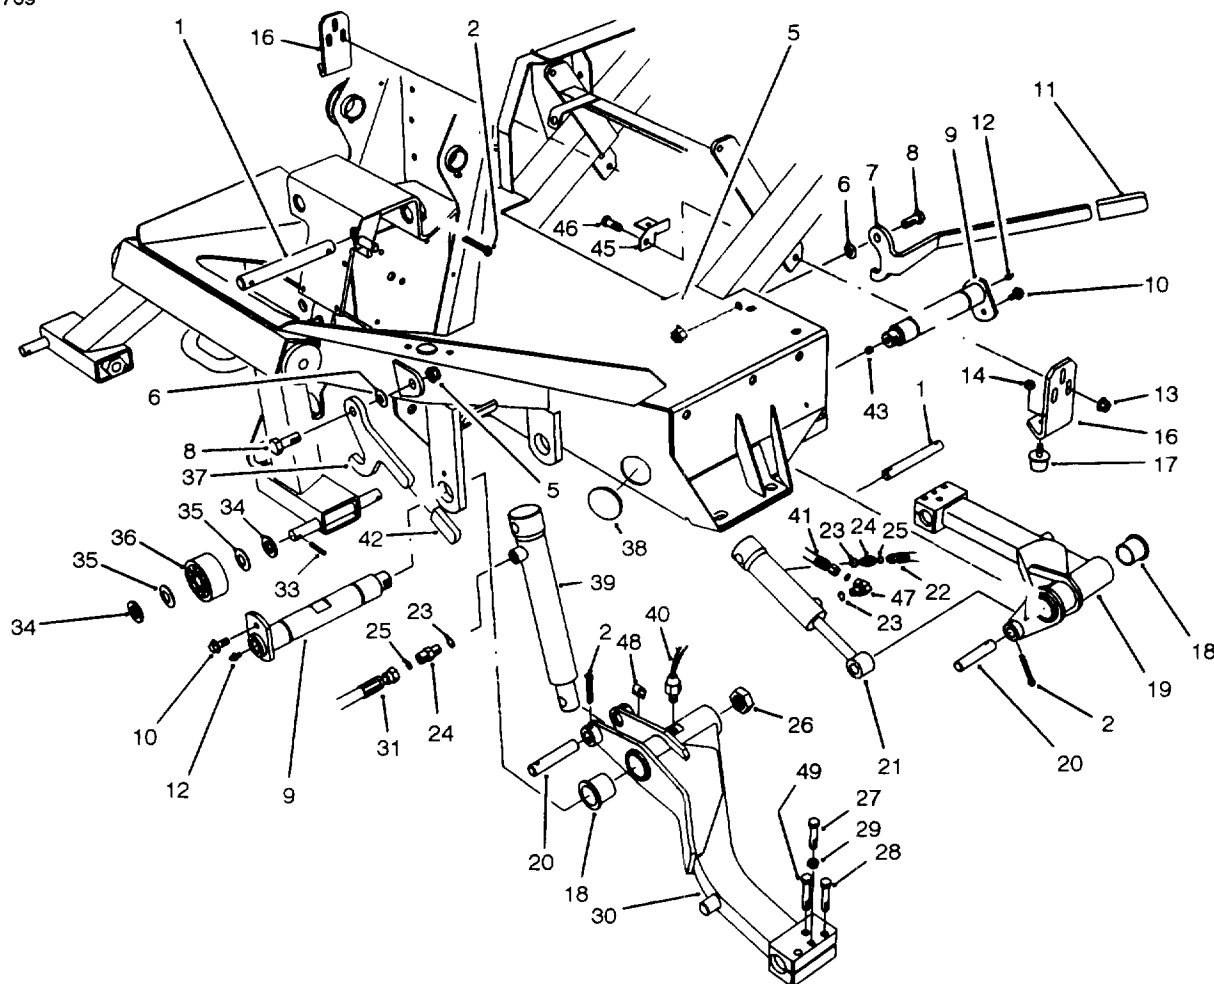

T-1083

LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-6850	Pin - Cylinder (Cap End)	3	27	323-50	Bolt - Self Tapping	3
2	3272-50	Pin - Cotter	6	28	323-10	Screw - Cap Hex. Hd.	6
5	3296-25	Nut - Lock	3	29	3218-3	Nut - Jam	3
6	3290-483	Washer - Belleville	3	30	74-5200	Lift Arm Assembly L.H. (Incl. Ref. #18)	1
7	76-9360	Latch - Lockup Center	1	*	74-5300	Lift Arm Assembly R.H. (Incl. Ref. #18)	1
8	325-5	Screw - Cap Hex. Hd.	3	31	76-8220	Hose - Hydraulic	2
9	74-5280	Pin - Lift Arm Pivot	3	33	32121-6	Pin - Roll	4
10	32144-11	Screw - Hex. Washer Hd.	3	34	51-2060	Washer - Flat	8
11	48-7080	Handle - Lift Arm (Center)	1	35	3290-317	Washer - Wave	8
12	302-2	Fitting - Grease	3	36	82-4910	Roller	4
13	3290-357	Hut - Flange Lock	4	37	76-9350	Latch - Lockup Front	2
14	32128-20	Nut - Lock	2	38	2410-69	Plug - Hole	1
16	84-0660	Bracket - Bumper	2	39	74-3460	Hydraulic Cylinder Assembly	2
17	68-3270	Bumper	2	40	92-1368	Switch - Lift	3
18	69-6470	Bushing - Flange	6	41	76-9900	Hose - Hydraulic	1
19	74-5100	Lift Arm Assembly Center (Incl. Ref. #18)	1	42	48-7081	Handle - Lift Arm (Front)	2
20	76-6860	Pin - Cylinder (Rod End)	3	43	285-17	Plug - Socket Pipe	3
21	74-3440	Hydraulic Cylinder Assembly	1	45	74-6470	Bracket - Line Clamp	1
22	76-9410	Hose - Hydraulic	1	46	323-7	Screw - Cap Hex. Hd.	4
23	237-42	Seal - O-Ring	4	47	340-77	Fitting - Hydraulic 90° (Incl. Ref. #23 & 25)	1
24	340-2	Fitting - Hydraulic Straight (Incl. Ref. #23 & 25)	3	48	249-50	Clip - Wire	3
25	237-22	Seal - O-Ring	4	49	323-11	Screw - Cap Hex. Hd.	3
26	3296-49	Nut - Hex.	3				

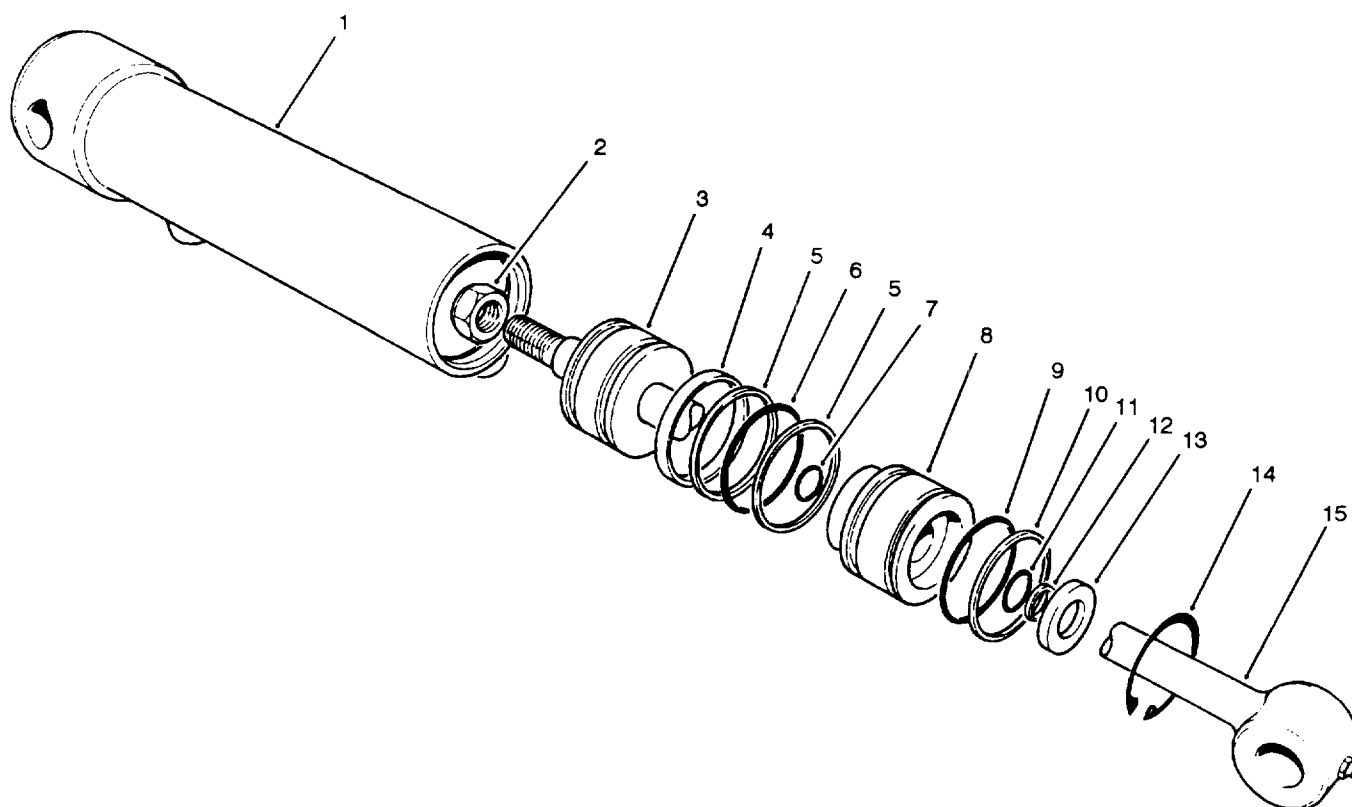


T-0993

HYDRAULIC CYLINDER NO. 74-3440

Ref. No.	Part No.	Description	No. Used
1	74-9960	Barrel Assembly	1
2	74-9940	Nut-Lock	1
3	74-9950	Piston	1
4		Ring-Wear	1
5		Back-up	2
6		O-Ring	1
7		O-Ring	1
8	74-9980	Head	1
9		O-Ring	1

Ref. No.	Part No.	Description	No. Used
10		Back-up	1
11		O-Ring	1
12		Back-up	1
13		Wiper	1
14	32120-42	Ring-Retaining	1
15	74-9970	Rod	1
*	74-9990	Seal Kit (Incl. Ref. #4-7, & 9-13)	1

*Not Illustrated

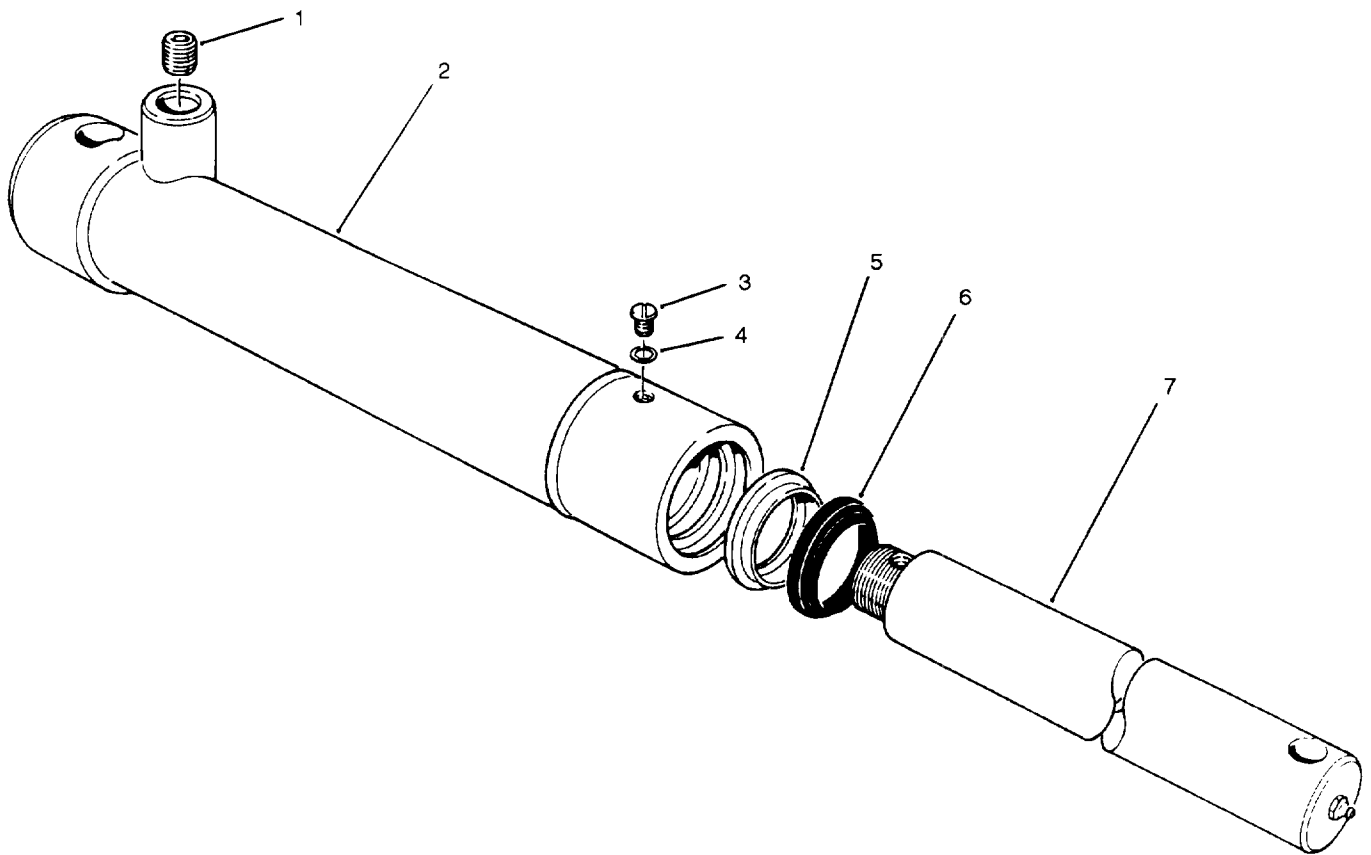


T-1038

HYDRAULIC CYLINDER NO. 74-3460

Ref. No.	Part No.	Description	No. Used
1	74-9550	Set Screw	1
2	74-9560	Barrel Assy. (Incl. Piston)	1
3	74-9580	Screw-Bleeder	1
4	77-3960	Washer - Seal	1
5		U-Cup	1

Ref. No.	Part No.	Description	No. Used
6		Wiper-Rod	1
7	74-9570	Rod	1
*	74-9590	Seal Kit (Incl. Ref. #5 & 6)	1

*Not Illustrated

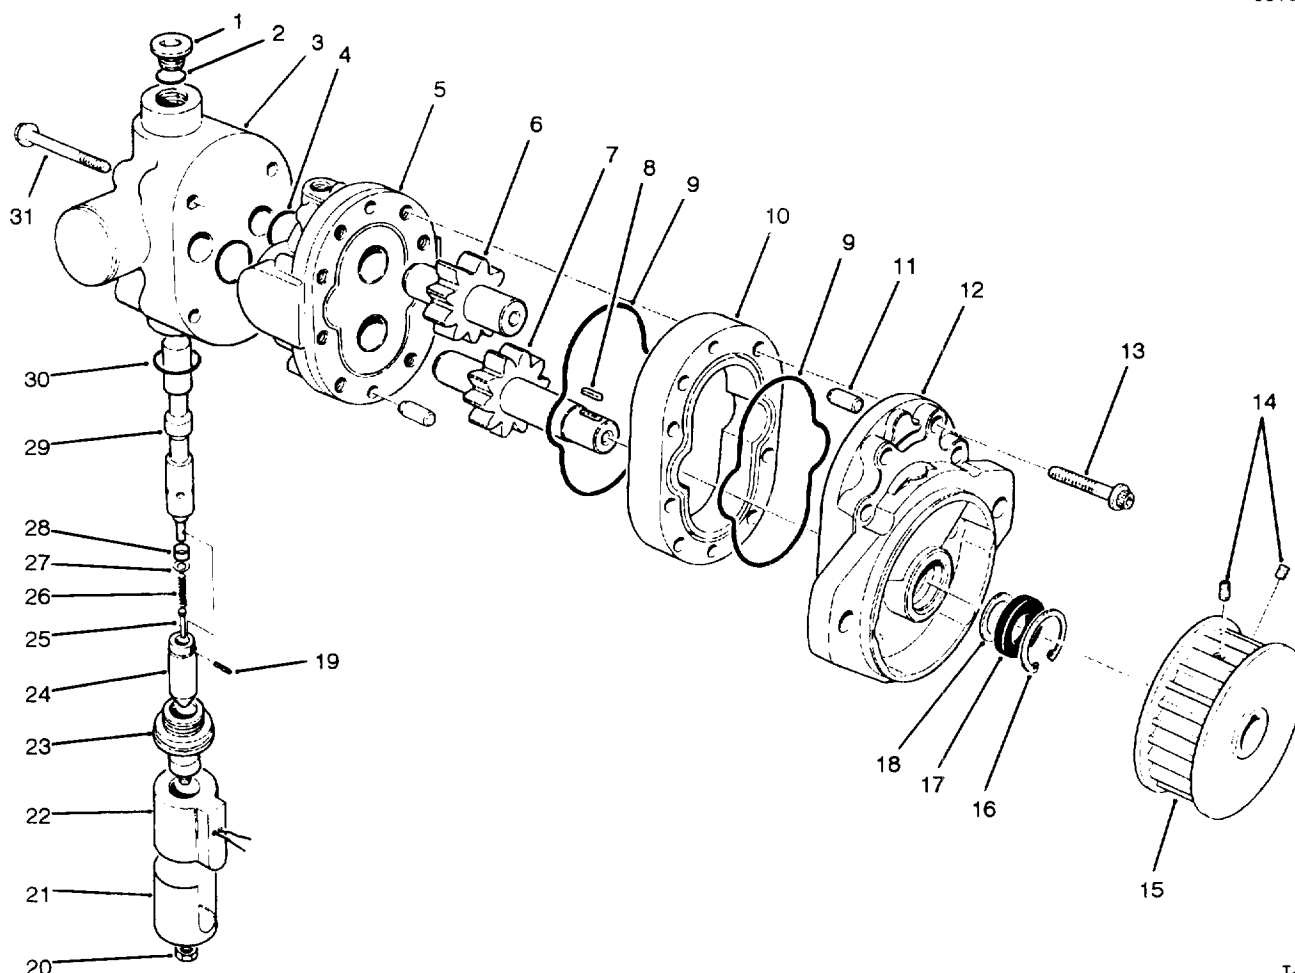

T-1075

REEL MOTOR ASSEMBLY NO. 74-3390

Ref. No.	Part No.	Description	No. Used
1	74-9280	Plug Assembly (Incl. Ref. #2)	1
2		O-Ring	1
3		Spool - Body	1
4	74-9290	O-Ring	2
5	74-9190	Backplate Assembly	1
6	74-9170	Idle Gear Assembly	1
7	74-9210	Drive Gear Assembly	1
8	47-2380	Key	1
9	56-6710	O-Ring	2
10	74-9160	Body Assembly	1
11	42-2010	Pin - Dowel	2
12	66-5730	Front Plate Assembly	1
13	74-9370	Screw - Cap Socket Hd.	8
14	3246-17	Screw - Set	2
15	47-7150	Pulley - Drive	1
16	59-8320	Ring - Retaining	1
17	66-5710	Seal - Shaft	1
18	60-5890	Washer	1

Ref. No.	Part No.	Description	No. Used
19	74-9310	Pin - Roll	1
20	74-9300	Nut	1
21	74-9270	Case - Solenoid	1
22	74-9260	Solenoid Coil Assembly	1
23	74-9220	Core - Solenoid	1
24	74-9250	Plunger - Spool Solenoid	1
25	74-9240	Plunger	1
26	74-9140	Spring	1
27	74-9330	Washer	1
28	74-9230	Spacer	1
29		Spool	1
30	74-9380	Seal - O-Ring	1
31	42-3140	Screw - Hex. Washer Hd.	4
*	74-9410	Kit - Seal (Incl. Ref. #4, 9, 16 & 17)	1
*	74-3390	Reel Motor Assembly (Incl. Ref. #1-13 & 16-31)	3
*	74-9400	By-Pass Valve Assembly (Incl. Ref. #1-3 & 19-30)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-1506	Bushing - Flange	3 6 2	48-7840	Screw - Cap Hex. Hd.	33 11 1
3-3251	Spring - Compression	11 31 1	48-7880	Nut	48 14 1
3-6498	Washer	28 11 2	48-7880	Nut - Hex.	15 5 2
10-6830	Stud - Drive	55 38 10	48-7880	Nut - Hex.	52 5 5
10-8110	Washer	11 49 1	48-7890	Nut - Hex.	15 4 1
14-0859	Fuel Tank Plate Assembly	20 25 1	48-7930	Nut - Hex.	15 3 1
14-0939	Radiator Mount Assembly	54 7 1	48-9460	Screw - Cap Hex. Hd.	50 2 3
14-0949	Battery Base Assembly	33 40 1	48-9460	Screw - Cap Hex. Hd.	33 16 1
20-9500	Washer - Flat	11 37 2	48-9460	Screw - Cap Hex. Hd.	40 18 2
21-2820	Hub - Wheel	55 29 2	48-9460	Screw - Hex. Washer Hd.	43 7 2
21-9260	Cover - Dust	12 56 1	48-9470	Screw - Cap Hex. Hd.	33 12 1
23-7270	Nut - Lug	7 18 10	49-0170	Seal Kit	13 * 1
25-2380	Plate - Thrust	6 10 1	49-2640	Seal-Shaft	29 5 1
25-2430	Pin - Straight	6 13 1	49-2660	Frontplate Assembly	29 7 1
27-2360	Switch - Ignition	17 20 1	49-2670	Plate-Wear	29 13 1
27-3710	Dipstick	3 16 1	49-2680	Seal - O-Ring (Molded)	29 10 1
27-7110	Element Assembly	53 4 1	49-2690	Gasket-Backup	29 12 1
27-7120	Nut & Gasket Assembly	53 5 1	49-2700	Seal-Bearing	29 11 1
27-7130	Clamp Assembly	53 7 1	51-2060	Washer - Flat	68 34 8
27-7140	Skirt - Baffle	53 6 1	52-9230	Ring-Retaining	13 3 1
27-7150	Cap Assembly	53 8 1	52-9240	Bushing-Seal, Gland	13 4 1
27-7170	Band Assembly	53 3 1	52-9250	Needle Bearing Kit	13 * 1
27-7180	Cap - Air Cleaner Inlet	2 31 1	52-9260	Screw-Set	13 1 1
28-3380	Plate - Valve	6 1 1	52-9270	Seat-Ball, Check	13 24 1
28-3520	Seal - O-Ring	30 22 1	52-9280	Ball-Check	13 22 1
28-3570	Seal - O-Ring	30 34 1	52-9290	Retainer-Check Ball	13 21 1
29-6163	Switch - Micro	28 28 1	53-9480	Washer - Rebound	33 14 4
31-0390	Washer - Friction	11 36 2	53-9681	Mount - Rubber, Engine	33 9 3
37-0500	Follower - Reel Speed	16 37 1	55-4130	Hose - Fuel	34 11 1
37-2690	Capacitor	14 30 1	56-6710	O-Ring	71 9 2
37-8770	Screw - Hex. Washer Hd.	54 23 2	56-6710	Seal - O-Ring	29 9 2
42-2010	Pin - Dowel	71 11 2	56-7973	Clamp - Hose	59 76 2
42-3120	Capscrew	29 4 8	56-7973	Clamp - Tube	56 56 2
42-3140	Screw - Hex. Washer Hd.	71 31 4	56-7977	Clamp - Tube	31 39 2
43-8600	Spring - Switch	14 17 1	56-7982	Sleeve - Protective	32 45 1
43-8610	Cap - Switch Spring	14 14 1	56-7982	Sleeve - Protective	4 45 2
43-8610	Guide - Spring & Ball	4 51 1	57-3210	Screw - Hex. Hd.	28 19 1
43-8620	Body - Switch	14 18 1	57-5420	Screw - Shoulder	26 27 1
43-8860	Rod - Switch	14 13 1	58-3880	Clamp - Hose	24 22 2
43-8870	Boot - Switch	14 10 1	58-3880	Clamp - Tube	18 31 1
43-9071	Seat Switch Assembly	14 * 1	58-6290	Poppet Assembly	19 34 3
46-0330	Nut	48 32 3	58-6310	Spacer	19 28 3
46-0330	Nut - Hex.	50 11 2	58-6320	Wiper - Seal	19 24 3
46-0330	Nut - Lock	39 1 6	58-6330	Seat Assy.	19 35 3
46-0330	Nut - Lock	42 11 1	58-6340	Seal - O-Ring	19 36 3
46-0330	Nut-Hex	51 1 2	58-6350	Plug Assembly	19 11 3
46-6550	Fitting - Fuel 90°	20 6 2	58-6370	Washer - Back-Up	19 10 6
46-6560	Bushing - Rubber	20 9 2	58-6400	Bushing	19 25 3
46-6810	Screw - Hex. Washer Hd.	1 3 9	58-6420	Cap Assembly	19 30 3
46-6810	Screw - Hex. Washer Hd.	18 4 4	58-6450	Seal - O-Ring	19 12 6
46-6810	Screw - Hex. Washer Hd.	24 44 4	58-6460	Ring - Retaining	19 29 3
46-6811	Screw - Hex. Washer Hd.	34 10 2	58-6470	Washer	19 18 A/R
46-8091	Screw - Hex. Washer Hd.	1 24 4	58-6480	Washer	19 19 A/R
47-2380	Key	71 8 1	58-6490	Washer	19 20 A/R
47-2380	Key - Square	24 3 2	58-6700	Washer	19 26 3
47-6990	Nut - Lock	11 17 1	58-6720	Seal - O-Ring	19 7 3
47-7150	Pulley - Drive	71 15 1	58-6730	Spring	19 27 3
47-7150	Pulley - Reel Drive	24 1 2	58-6750	Seal - O-Ring	19 17 1
48-1800	Cylinder Block Kit	6 2 1	58-6760	Spring	19 3 3
48-4590	Horn	14 31 1	58-6770	Plunger - Detent	19 4 3
48-7080	Handle - Lift Arm (Center)	68 11 1	58-6780	Plug Assembly	19 1 3
48-7081	Handle - Lift Arm (Front)	68 42 2	58-6790	Seal - O-Ring	19 5 3
48-7570	Screw - Cap Hex. Hd.	33 23 3	59-6430	Valve - Check	11 46 1
48-7610	Screw - Cap Hex. Hd.	33 34 3	59-6730	Race-Bearing	13 7 2
48-7640	Bolt - Valve Cover	41 46 3	59-6740	Bearing-Needle, Thrust	13 8 1
48-7640	Screw - Cap Hex. Hd.	45 9 3	59-6820	Centering Spring Kit	13 11 1
48-7700	Screw - Cap Hex. Hd.	33 18 8	59-6830	Kit-Centering Pin	13 20 1
48-7700	Screw - Cap Hex. Hd.	40 23 3	59-6850	Plate-Spacer	13 14 1
48-7700	Screw - Hex. Washer Hd.	43 5 2	59-6860	Drive	13 15 1
48-7730	Screw - Cap Hex. Hd.	33 19 1	59-6890	Cap-End	13 18 1
48-7780	Screw - Cap Hex. Hd.	33 32 3	59-7130	Knob - Reel Speed	16 20 1
48-7810	Screw - Cap Hex. Hd.	33 22 3	59-7260	Sleeve - Protective	24 36 2
48-7810	Screw-Mounting	51 5 3	59-8320	Ring - Retaining	71 16 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-709

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
60-3780	Seal Kit	19 * 1	69-3020	Latch - Draw	1 21 1
60-5710	Plug Assembly	29 18 1	69-4780	Clamp - Gauge	17 14 1
60-5720	Seal - O-Ring	19 9 6	69-6470	Bushing - Flange	68 18 6
60-5730	Disc	29 20 1	69-6470	Bushing - Flange	55 22 4
60-5820	Spring	29 21 1	69-7010	Lever - Lift Control L.H.	18 * 1
60-5860	Plug Assembly	29 24 1	69-8890	Cap - Spindle	55 19 2
60-5890	Washer	29 6 1	69-8940	Washer	8 6 2
60-5890	Washer	71 18 1	69-8940	Washer	24 34 2
60-6450	Disc	19 2 A/R	69-8970	Spacer	8 7 1
60-6700	Screw - Cap Hex. Hd.	42 19 1	69-8970	Spacer	24 33 1
60-6700	Screw - Cap Hex. Hd.	48 34 1	69-9000	Spacer	7 30 2
60-6760	Screw - Cap Hex. Hd.	48 2 4	69-9000	Spacer	24 39 3
61-2790	Screen - Fill	26 31 1	69-9000	Spacer	9 54 2
62-1230	Washer	34 5 2	69-9010	Washer	24 31 6
62-1230	Washer	2 53 2	69-9010	Washer	7 31 4
62-2170	Washer - Thrust	55 21 4	69-9010	Washer	9 51 4
62-7400	Decal - TORO	1 1 1	69-9140	Link - Lift Lever	18 12 3
62-7650	Gasket - Sending Unit	20 28 1	69-9880	Tire	7 15 2
62-7770	Key - Ignition	17 5 1	70-1480	Relay - Starter	20 35 1
63-7590	Relay - SPDT	16 18 2	70-2560	Decal - Oil	1 9 1
63-7590	Relay - SPDT	14 28 1	70-8621	Cap - Fuel	20 3 1
63-7622	Hose - Fuel	20 22 2	70-8640	Cap - Hydraulic Reservoir	26 30 1
63-7622	Hose - Fuel	34 27 1	71-4580	Clutch - Roller	58 27 1
63-7626	Hose - Fuel	20 7 1	71-4590	Washer - Thrust	58 37 2
63-7627	Hose - Fuel	20 8 1	72-0130	Horn Button Assembly	11 16 1
63-7627	Hose - Fuel	34 26 1	72-3790	Wire - Neutral Switch	28 27 1
63-7880	Latch - Brake	10 16 1	72-4320	Switch - Ball	14 15 1
63-7900	Latch - Parking Brake	11 34 1	72-4320	Switch - Ball	16 25 1
63-8410	Washer	28 3 5	72-4320	Switch - Neutral	3 17 1
63-8410	Washer	10 34 1	73-3580	Washer	4 46 2
63-9751	Mount - Linkage Rod	10 10 4	74-0720	Tube - Manual	14 1 1
63-9751	Mount - Rubber	28 25 5	74-3390	Motor - Hydraulic	8 20 1
65-5100	Handle - Hood	1 26 2	74-3390	Motor - Reel	24 4 2
65-6390	Washer - Thrust	3 36 1	74-3390	Reel Motor Assembly	71 * 3
65-7980	Nut - Hex. Flange	52 6 1	74-3410	Radiator	54 6 1
66-1930	Nut - Lock	61 11 1	74-3420	Gear Pump Assembly	29 * 1
66-1940	Piston	61 4 1	74-3420	Gear Pump Assembly	28 44 1
66-2490	Clamp - Battery	33 5 1	74-3440	Hydraulic Cylinder Assembly	68 21 1
66-2871	Cable - Hood	34 6 1	74-3450	Cylinder - Hydraulic	59 55 1
66-2871	Cable - Hood	1 15 1	74-3460	Hydraulic Cylinder Assembly	68 39 2
66-2920	Washer - Friction	16 4 3	74-3630	Actuator - Brake	7 4 2
66-2920	Washer - Nylon	10 39 1	74-3640	Disc - Brake	7 3 4
66-2940	Gauge - Fuel	17 10 1	74-3650	Fan	33 28 1
66-2950	Meter - Hour	17 11 1	74-3660	Power Steering Valve Assy.	11 40 1
66-2960	Cluster - Warning Light	17 8 1	74-3670	Steering Column Assembly	11 4 1
66-3240	Cap - Expansion	34 12 1	74-4010	Wireform W.A.	34 8 1
66-5710	Seal - Shaft	71 17 1	74-4050	Bracket - Support, Hood	34 2 1
66-5730	Front Plate Assembly	71 12 1	74-4080	Orifice - Breather	26 24 1
66-6480	Washer	8 43 2	74-4090	Tread - Foot	2 43 1
67-0870	Bolt - Shoulder	16 27 1	74-4230	Bracket - Oil Filter	26 37 1
67-0870	Screw - Shoulder	2 39 2	74-4900	Tube - Water, Return	35 23 1
67-1300	Decal - TORO	54 17 1	74-4970	Guard - Bulkhead	24 43 1
67-7120	Link - Fusible	15 8 1	74-4980	Shroud - Fan Upper	54 3 1
67-7160	Block - Fuse	16 42 1	74-4990	Shroud - Fan Lower	54 33 1
67-9100	Gasket	6 11 1	74-5000	Rear Axle Assembly	55 24 1
67-9410	Washer - Flat	59 53 5	74-5100	Lift Arm Assembly Center	68 19 1
68-3270	Bumper	68 17 2	74-5200	Lift Arm Assembly L.H.	68 30 1
68-6150	Breather	20 10 2	74-5250	Pin - Axle Pivot	56 51 1
68-7573	Seal - Shroud L.H.	1 10 2	74-5250	Pin - Axle Pivot	59 63 1
68-8080	Wheel - Steering	11 18 1	74-5280	Pin - Lift Arm Pivot	68 9 3
68-9420	Washer - Lock	44 8 6	74-5300	Lift Arm Assembly R.H.	68 * 1
68-9420	Washer - Lock	42 10 6	74-5330	Spindle - L.H.	55 25 1
68-9420	Washer - Lock	40 17 5	74-5350	Spindle - R.H.	55 * 1
68-9420	Washer - Lock	48 36 3	74-5440	Hub - Wheel	7 14 2
68-9420	Washer - Spring	44 1 7	74-5460	Angle Radiator Support	54 31 1
68-9420	Washer - Spring	48 3 8	74-5470	Mount - Engine	33 10 1
68-9420	Washer - Spring	50 3 6	74-5480	Cable - Throttle	16 3 1
68-9420	Washer - Spring	45 4 3	74-5500	Bolt - Wheel	58 48 10
69-1170	Gauge - Sight	26 34 1	74-5511	Engine Assembly	33 42 1
69-1560	Lever - Tilt Steering	11 24 1	74-5520	Clutch - Fan	33 29 1
69-1800	Plug Assembly	19 32 3	74-5560	Tire	55 30 2
69-1810	Spring	19 33 3	74-5560	Tire	58 43 2
69-1830	Plug Assembly	19 16 1	74-5580	Tank - Fuel	20 32 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
74-5590	Gasket - Exhaust, Manifold	35	3	1	74-6550	Cup - Upper Valve Spring	39	5	8
74-5620	Axle Assembly	58	49	1	74-6560	Spring - Valve	39	6	8
74-5630	Adapter	63	12	1	74-6570	Cup - Lower Valve Spring	39	7	8
74-5670	Coupling - Spring Center	33	33	1	74-6580	Insert - Valve (1.650mm)	39	8	8
74-5700	Bearing - Needle	58	24	1	74-6600	Insert - Valve (1.800mm)	39	*	8
74-5710	Shift Linkage Bracket Assy.	3	7	1	74-6610	Insert - Valve (1.900mm)	39	*	8
74-5730	Shaft - Shift Linkage	3	8	1	74-6620	Insert - Valve (1.975mm)	39	*	8
74-5760	Valve - PCV	36	2	1	74-6630	Insert - Valve (2.050mm)	39	*	8
74-5770	Lever - Shift	11	6	1	74-6640	Insert - Valve (2.125mm)	39	*	8
74-5790	Shaft - Shift Linkage	11	8	1	74-6650	Insert - Valve (2.225mm)	39	*	8
74-5860	Sending Unit - Fuel	20	29	1	74-6660	Insert - Valve (2.250mm)	39	*	8
74-5890	Fitting - Hydraulic 90°	31	33	1	74-6670	Insert - Valve (2.275mm)	39	*	8
74-5930	Hose - Radiator Upper	54	39	1	74-6680	Insert - Valve (2.300mm)	39	*	8
74-5930	Hose - Radiator, Upper	34	32	1	74-6690	Insert - Valve (2.325mm)	39	*	8
74-5940	Tie Rod Assembly	56	*	1	74-6700	Insert - Valve (2.350mm)	39	*	8
74-5980	Muffler	35	14	1	74-6710	Insert - Valve (2.375mm)	39	*	8
74-6000	Air Cleaner Assembly	53	1	1	74-6720	Insert - Valve (2.400mm)	39	*	8
74-6000	Assembly - Air Cleaner	35	6	1	74-6730	Insert - Valve (2.425mm)	39	*	8
74-6010	Hose - Overflow	34	21	1	74-6740	Insert - Valve (2.450mm)	39	*	8
74-6020	Hose - Radiator Lower	54	35	1	74-6750	Insert - Valve (2.475mm)	39	*	8
74-6020	Hose - Radiator, Lower	35	5	1	74-6760	Insert - Valve (2.500mm)	39	*	8
74-6030	Hose - Air Cleaner	35	22	1	74-6770	Insert - Valve (2.525mm)	39	*8	8
74-6030	Hose - Air Cleaner	34	24	1	74-6780	Insert - Valve (2.550mm)	39	*	8
74-6040	Hose - Return	34	7	1	74-6790	Insert - Valve (2.575mm)	39	*	8
74-6050	Lever - Lift Control Mid.	18	*	1	74-6800	Insert - Valve (2.600mm)	39	*	8
74-6060	Lever - Lift Control R.H.	18	16	1	74-6810	Insert - Valve (2.625mm)	39	*	8
74-6090	Pipe - Exhaust	35	16	1	74-6820	Insert - Valve (2.650mm)	39	*	8
74-6110	Stop - Pedal	10	38	1	74-6830	Insert - Valve (2.675mm)	39	*	8
74-6210	Tube - Hydraulic	24	28	1	74-6840	Insert - Valve (2.700mm)	39	*	8
74-6210	Tube - Hydraulic	9	48	1	74-6850	Insert - Valve (2.725mm)	39	*	8
74-6220	Tube - Hydraulic	26	2	1	74-6860	Insert - Valve (2.750mm)	39	*	8
74-6220	Tube - Hydraulic	3	33	1	74-6870	Insert - Valve (2.775mm)	39	*	8
74-6230	Tube - Hydraulic	58	5	1	74-6880	Insert - Valve (2.800mm)	39	*	8
74-6230	Tube - Hydraulic	26	16	1	74-6890	Insert - Valve (2.825mm)	39	*	8
74-6240	Tube - Hydraulic	24	15	1	74-6900	Insert - Valve (2.850mm)	39	*	8
74-6240	Tube - Hydraulic	9	56	1	74-6910	Insert - Valve (2.875mm)	39	*	8
74-6250	Tube - Hydraulic	24	14	1	74-6920	Insert - Valve (2.900mm)	39	*	8
74-6250	Tube - Hydraulic	8	23	1	74-6930	Insert - Valve (2.925mm)	39	*	8
74-6260	Tube - Hydraulic	24	26	1	74-6940	Insert - Valve (2.950mm)	39	*	8
74-6260	Tube - Hydraulic L.H.	55	2	1	74-6950	Insert - Valve (2.975mm)	39	*	8
74-6260	Tube - Hydraulic L.H.	58	11	1	74-6960	Insert - Valve (3.000mm)	39	*	8
74-6270	Tube - Hydraulic	24	25	1	74-6970	Insert - Valve (3.025mm)	39	*	8
74-6270	Tube - Hydraulic R.H.	55	3	1	74-6980	Insert - Valve (3.050mm)	39	*	8
74-6270	Tube - Hydraulic R.H.	58	12	1	74-6990	Insert - Valve (3.075mm)	39	*	8
74-6300	Tube - Hydraulic	24	12	1	74-7000	Insert - Valve (3.100mm)	39	*	8
74-6300	Tube - Hydraulic	18	26	1	74-7010	Insert - Valve (3.125mm)	39	*	8
74-6310	Tube - Hydraulic	24	13	1	74-7020	Insert - Valve (3.150mm)	39	*	8
74-6310	Tube - Hydraulic	18	25	1	74-7030	Insert - Valve (3.175mm)	39	*	8
74-6340	Tube - Hydraulic	9	49	1	74-7040	Insert - Valve (3.200mm)	40	*8	8
74-6340	Tube - Hydraulic R.H.	7	*	1	74-7050	Insert - Valve (3.225mm)	40	*	8
74-6350	Tube - Hydraulic	24	27	1	74-7060	Insert - Valve (3.250mm)	40	*	8
74-6350	Tube - Hydraulic L.H.	7	33	1	74-7070	Insert - Valve (3.275mm)	40	*	8
74-6360	Tube - Hydraulic	8	13	1	74-7080	Insert - Valve (3.300mm)	40	*	8
74-6360	Tube - Hydraulic	24	38	1	74-7090	Insert - Valve (3.325mm)	40	*	8
74-6370	Tube - Hydraulic	8	16	1	74-7100	Insert - Valve (3.350mm)	40	*	8
74-6370	Tube - Hydraulic	26	18	1	74-7110	Insert - Valve (3.375mm)	40	*	8
74-6380	Tube - Hydraulic	26	6	1	74-7120	Insert - Valve (3.400mm)	40	*	8
74-6380	Tube - Hydraulic	18	33	1	74-7130	Insert - Valve (3.425mm)	40	*	8
74-6390	Tube - Hydraulic	54	28	1	74-7140	Insert - Valve (3.450mm)	40	*	8
74-6400	Tube - Hydraulic	54	27	1	74-7150	Insert - Valve (3.475mm)	40	*	8
74-6400	Tube - Hydraulic	26	38	1	74-7160	Insert - Valve (3.500mm)	40	*	8
74-6420	Bracket - Bulkhead L.H.	7	35	1	74-7170	Insert - Valve (3.550mm)	40	*	8
74-6430	Bracket - Bulkhead R.H.	7	*	1	74-7180	Insert - Valve (3.625mm)	40	*	8
74-6440	Bracket - Bulkhead	8	11	1	74-7190	Insert - Valve (3.700mm)	40	*	8
74-6450	Bracket - Bulkhead	55	5	1	74-7200	Insert - Valve (3.775mm)	40	*	8
74-6450	Bracket - Bulkhead	58	13	1	74-7210	Insert - Valve (3.850mm)	40	*	8
74-6470	Bracket - Clamp	24	21	1	74-7220	Insert - Valve (3.925mm)	40	8	8
74-6470	Bracket - Line Clamp	68	45	1	74-7230	Insert - Valve (4.000mm)	40	*	8
74-6490	Hose - Water Line	35	25	2	74-7240	Collar - Split	40	9	16
74-6520	Washer - Flat	39	2	6	74-7250	Gasket - Fitting	40	10	1
74-6530	Stud	39	3	6	74-7260	Bolt - Head	40	11	10
74-6530	Stud	42	9	1	74-7270	Washer - Flat	40	12	10
74-6540	Tappet - Valve	39	4	8	74-7280	Plug	40	13	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-709

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-7340	Fitting - Coolant	40 19 1	74-8110	Sprocket - Oil Pump	38 5 1
74-7350	Hose	40 20 1	74-8120	Key - Woodruff	38 6 2
74-7360	Tube - Collector	40 21 1	74-8130	Screw - Cap Hex. Hd.	38 7 4
74-7390	Hose - Elbow	40 24 1	74-8130	Screw - Cap Hex. Hd.	48 42 2
74-7400	Tube	40 25 1	74-8140	Cover	38 9 1
74-7410	Plug	40 26 2	74-8150	Gasket - Cover	38 10 1
74-7420	Ball	40 27 4	74-8160	Seal - Shaft	38 11 1
74-7430	Chamber - Turbulence	40 28 4	74-8170	Bearing Set (Std.)	38 12 5
74-7440	Chamber - Turbulence	40 * 4	74-8180	Bearing Set (.30mm OS)	38 * 5
74-7450	Seat - Intake Valve	40 29 4	74-8190	Thrust Bearing Set (Std.)	38 13 2
74-7460	Seat - Intake Valve	40 * 4	74-8200	Thrust Bearing Set	38 * 2
74-7470	Valve - Exhaust	40 31 4	74-8210	Thrust Bearing Set	38 * 2
74-7480	Valve - Intake	40 30 4	74-8220	Thrust Bearing Set	38 * 2
74-7490	Seat - Exhaust Valve	40 32 4	74-8230	Crankshaft	38 14 1
74-7500	Seat - Exhaust Valve	40 * 4	74-8240	Seal	38 15 1
74-7510	Guide - Valve (14.29mm)	41 33 8	74-8250	Pin	38 16 1
74-7520	Guide - Valve (14.59mm)	41 * 8	74-8260	Flywheel	38 17 1
74-7530	Gasket - Head (1.61mm)	41 34 1	74-8270	Pin	38 18 3
74-7540	Gasket - Head (1.73mm)	41 * 1	74-8280	Screw - Cap Hex. Hd.	38 19 8
74-7550	Screw - Cap Hex. Hd.	41 35 2	74-8290	Seal - #1 Bearing Cap	38 20 2
74-7560	Washer	38 8 6	74-8300	Clip - Piston Pin	38 21 8
74-7560	Washer - Lock	41 36 2	74-8310	Pin - Piston	38 22 4
74-7560	Washer - Spring	46 4 4	74-8320	Piston Ring Set (Stage #1)	38 23 4
74-7560	Washer - Spring	45 7 5	74-8330	Piston Ring Set (Stage #2)	38 * 4
74-7560	Washer - Spring	43 9 2	74-8340	Piston Ring Set (Stage #3)	38 * 4
74-7560	Washer - Spring	48 41 2	74-8350	Bushing - Sleeve	38 24 4
74-7580	Plate	41 38 1	74-8360	Rod - Connecting	38 25 4
74-7590	Gasket	41 39 1	74-8370	Nut - Hex.	38 26 8
74-7600	Plug	41 40 4	74-8380	Bearing - Connecting Rod	38 27 4
74-7610	Cylinder Head Assembly	41 41 1	74-8390	Bearing - Connecting Rod	38 * 4
74-7620	Plug	41 42 1	74-8400	Bolt - Connecting Rod	38 28 4
74-7630	Gasket - Valve Cover	41 43 1	74-8420	Piston Set - Stage #1	38 29 1
74-7640	Cover - Valve	41 44 1	74-8430	Piston Set - Stage #2	38 29 1
74-7650	Washer - Flat	41 45 3	74-8440	Piston Set - Stage #3	38 * 1
74-7670	Head Bolt & Washer Set	41 * 1	74-8570	Screw - Cap Hex. Hd.	38 33 2
74-7690	Cap - Filler	37 2 1	74-8580	Bracket - Pump	48 * 1
74-7700	Dipstick - Oil	37 3 1	74-8610	Pin - Spring	48 5 1
74-7710	Hose - Breather	37 4 1	74-8620	Nut - Conical	48 6 1
74-7770	Hose - Crankcase	37 11 1	74-8630	Bushing - Flange	48 7 1
74-7780	Gasket	37 12 1	74-8640	Washer - Flat	48 8 1
74-7790	Screw	37 13 1	74-8640	Washer - Flat	50 12 1
74-7800	Pin - Spring	37 14 2	74-8650	Pacer	48 9 1
74-7810	Gasket - Plate	37 15 1	74-8660	Injection Pump Assembly	48 * 1
74-7820	Plate	37 16 1	74-8680	Gasket	48 12 2
74-7830	Screw - Washer Hd.	37 17 2	74-8700	Bracket - Pump	48 1 1
74-7840	Plug	40 14 2	74-8710	Washer	48 15 1
74-7840	Plug	37 18 8	74-8710	Washer - E.T.L.W.	52 8 1
74-7850	Gasket	37 19 4	74-8720	Stop Valve Assembly	48 16 1
74-7870	Gasket - Oil Pan	37 21 1	74-8730	Ring - Seal	48 17 1
74-7880	Pin - Groove	37 22 2	74-8740	Tube - Pump Return	48 18 1
74-7890	Pan - Oil	37 23 1	74-8750	Injection Tube Set	48 19 1
74-7900	Washer - Stop	37 24 23	74-8760	Hose - Rubber	48 20 3
74-7910	Screw - Cap Hex. Hd.	45 8 2	74-8770	Plug	48 21 1
74-7910	Screw - Cap Hex. Hd.	43 10 2	74-8780	Clamp - Plastic	48 22 1
74-7910	Screw - Cap Hex. Hd.	37 25 20	74-8790	Clamp - Metal	48 * 1
74-7930	Screw - Bearing Cap	37 27 10	74-8800	Injection Pump Assembly	48 10 1
74-7940	Bushing - Spring	37 28 1	74-8830	Belt	42 18 1
74-7950	Screw - Plate	37 29 6	74-8840	Water Pump Assembly	47 2 1
74-7960	Stud - Filter	37 30 1	74-8860	Thermostat 83°C	46 11 1
74-7970	Filter - Oil	37 31 1	74-8870	Gasket	48 29 2
74-7980	Switch - Pressure	37 32 1	74-8880	Fuel Outlet Assembly	48 31 1
74-7990	Pin - Spring	37 33 4	74-8900	Washer - Flat	42 7 2
74-8000	Plug	37 34 2	74-8900	Washer - Flat	48 33 1
74-8010	Tube	37 35 1	74-8910	Bracket - Horn	14 32 1
74-8020	Longblock Assembly	37 36 1	74-8920	Washer - Copper	29 29 4
74-8030	Pin - Spring	37 37 1	74-8950	Body Assembly	29 14 1
74-8040	Plug	37 38 1	74-8960	Idler Gear Assembly	29 2 1
74-8050	Oil Decanter Assembly	37 1 1	74-8970	Drive Gear Assembly	29 3 1
74-8060	Gasket Set	37 * 1	74-8980	Backplate Assembly	29 22 1
74-8070	Screw - Cap Hex. Hd.	38 1 1	74-8990	Spool Assembly	29 23 1
74-8080	Washer	38 2 1	74-9000	Relief Valve Assy.	29 17 1
74-8090	Pulley	38 3 1	74-9010	Kit - Seal	29 * 1
74-8100	Gear - Pinion	38 4 1	74-9020	Backplate Repair Kit	29 * 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-9040	Coupling	29 26 1	76-4300	Lever - Throttle	16 7 1
74-9080	Cable - Battery Pos.	33 1 1	76-4310	Support - Base, Battery	33 38 1
74-9090	Cable - Battery Neg.	33 * 1	76-4880	Plug - Electrical	15 2 1
74-9100	Pad - Forward Pedal	10 7 1	76-4910	Stud	48 35 3
74-9110	Pad - Reverse Pedal	10 9 1	76-4930	Washer	48 37 3
74-9120	Hose - Expansion Tank	54 41 1	76-4940	Pulley - Pump	48 38 1
74-9120	Hose - Radiator, Overflow	34 15 1	76-4950	Nut - Flange	48 39 1
74-9122	Hose - Return	26 26 1	76-4960	Flange	48 40 1
74-9122	Hose - Vent	20 17 1	76-4970	Screw - Shoulder	50 1 1
74-9122	Hose - Vent	34 33 1	76-4980	Bracket - Mounting	50 4 1
74-9140	Spring	71 26 1	76-4990	Bolt - Slide	50 5 1
74-9160	Body Assembly	71 10 1	76-5000	Bolt - Adjusting	50 6 1
74-9170	Idler Gear Assembly	71 6 1	76-5010	Washer - Spring	50 7 1
74-9190	Backplate Assembly	71 5 1	76-5020	Washer - Flat	50 8 1
74-9210	Drive Gear Assembly	71 7 1	76-5030	Bracket - Slide	50 9 1
74-9220	Core - Solenoid	71 23 1	76-5040	Belt - V	50 10 1
74-9230	Spacer	71 28 1	76-5050	Alternator	50 13 1
74-9240	Plunger	71 25 1	76-5060	Screw - Cap Hex. Hd.	50 14 1
74-9250	Plunger - Spool Solenoid	71 24 1	76-5070	Oil Pump Assembly	45 1 1
74-9260	Solenoid Coil Assembly	71 22 1	76-5080	Piston	45 2 1
74-9270	Case - Solenoid	71 21 1	76-5090	Spring - Piston	45 3 1
74-9280	Plug Assembly	71 1 1	76-5100	Bolt - Shoulder	45 5 1
74-9290	O-Ring	71 4 2	76-5150	Screw - Cap Hex. Hd.	45 10 1
74-9300	Nut	71 20 1	76-5160	Screw - Cap Hex. Hd.	45 11 1
74-9310	Pin - Roll	71 19 1	76-5170	Chain - Pump Drive	45 12 1
74-9330	Washer	71 27 1	76-5180	Washer - Copper	21 1 4
74-9370	Screw - Cap Socket Hd.	71 13 8	76-5190	Fitting - Adjustable	21 2 2
74-9380	Seal - O-Ring	71 30 1	76-5200	Fuel Filter Assembly	21 3 1
74-9400	By-Pass Valve Assembly	71 * 1	76-5200	Fuel Filter Assembly	20 23 1
74-9410	Kit - Seal	71 * 1	76-5220	Element - Filter	21 5 1
74-9480	Seal - Lip	6 6 1	76-5260	Relay - Glow Plug	52 1 1
74-9500	Screw - Cap Hex. Hd.	6 16 4	76-5260	Relay - Glow Plug	16 21 1
74-9510	Washer - Flat	6 15 1	76-5270	Cable - Glow Plug	52 2 4
74-9550	Set Screw	70 1 1	76-5280	Plug - Glow	52 3 4
74-9560	Barrel Assy.	70 2 1	76-5290	Washer - Spring	52 4 4
74-9570	Rod	70 7 1	76-5310	Washer - E.T.L.W.	52 7 1
74-9580	Screw-Bleeder	70 3 1	76-5330	Screw - Cap Hex. Hd.	46 1 2
74-9590	Seal Kit	70 * 1	76-5340	Plug - Drain	46 2 2
74-9600	Piston Rod Assembly	61 9 1	76-5350	Gasket - Drain Plug	46 3 2
74-9610	Butt & Tube Assembly	61 1 1	76-5360	Cover - Collector	46 5 1
74-9640	Gland	61 7 1	76-5370	Ring - Retaining	46 6 1
74-9710	Kit - Seal	61 * 1	76-5380	Temperature Sending Unit	46 7 1
74-9940	Nut-Lock	69 2 1	76-5400	Switch - Temp. 105°C	46 8 1
74-9950	Piston	69 3 1	76-5410	Gasket - Collector	46 9 1
74-9960	Barrel Assembly	69 1 1	76-5420	Housing - Collector	46 10 1
74-9970	Rod	69 15 1	76-5440	Screw - Cap Hex. Hd.	46 14 2
74-9980	Head	69 8 1	76-5450	Gasket - Thermostat	46 12 1
74-9990	Seal Kit	69 * 1	76-5460	Gasket - Collector Housing	46 13 1
75-0140	Spring - Conical	30 28 4	76-5480	Gasket - Water Pump	47 1 1
75-0240	Seal - O-Ring	30 29 4	76-5500	Screw - Cap Hex. Hd.	47 3 5
75-0400	Plate - Thrust	30 2 2	76-5510	Injector - Fuel	49 1 4
75-0470	Cylinder Block Kit	30 3 2	76-5520	Holder - Fuel Injector	49 2 4
75-0480	Pin	30 38 4	76-5530	Washer	49 3 4
75-0500	Bearing - Needle	30 39 2	76-5540	Bushing - Injector	49 4 4
75-0510	Pin	30 4 2	76-5550	Gasket - Fuel Injector	49 5 4
75-0540	Tether - Reservoir Cap	26 29 1	76-5560	Fuel Injector Assembly	49 6 4
75-0550	Strainer - Tank	26 47 1	76-5570	Washer-Lock	51 2 2
75-5470	Washer	28 14 4	76-5580	Starter	51 3 1
75-9550	Valve - Check	26 7 6	76-5590	Sleeve - Spring	51 4 1
76-4100	Shaft - Reel Speed	16 38 1	76-5610	Pinion - Output	5 1 1
76-4120	Mount W.A. - Engine	33 21 1	76-5630	Gear - Spur	5 3 1
76-4170	Support - Axle	55 16 2	76-5640	Gasket	5 4 1
76-4170	Support - Axle	59 60 2	76-5650	Washer - Thrust	5 8A 3
76-4180	Boot	8 44 2	76-5660	Pin-Dowel	5 6 2
76-4190	Gear - Axle	58 39 1	76-5670	Seal-Oil	5 7 2
76-4200	Gear - Motor	58 36 1	76-5680	Shim - Orange .126/.123	5 52 A/R
76-4220	Mount W.A. - Engine	33 30 1	76-5680	Washer - Thrust	5 8 1
76-4230	Guide - Exhaust, Manifold	35 2 2	76-5690	Washer - Thrust	5 9 2
76-4240	Plate - Adaptor	7 1 2	76-5700	Bearing-Thrust	5 10 1
76-4260	Bushing	64 2 2	76-5710	Plug-Magnetic - Drain	5 11 1
76-4260	Bushing	67 3 1	76-5720	Screw - Hex Hd.	5 12 13
76-4260	Bushing - Sleeve	55 10 2	76-5740	Shim - Lt. Grn. .123/.120	5 * A/R
76-4270	Arm - Drag Link	67 1 1	76-5760	Cover Assembly	5 16 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-709

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-5780	Gear - Spur	5 18 1	76-7160	Gear Case Assembly	65 * 1
76-5820	Screw - Hex Flanged Hd.	5 22 1	76-7170	Case - Differential	65 3 1
76-5830	Ball - Steel	5 23 1	76-7180	Pinion - Mate	65 10 2
76-5840	Spring - Shifter Fork	5 24 1	76-7190	Gear - Side	65 9 2
76-5850	Seal - Oil	5 25 1	76-7200	Shaft - Pinion	65 4 1
76-5860	Bearing - Needle	5 26 2	76-7210	Washer - Thrust	65 11 2
76-5870	Bearing - Needle	5 27 3	76-7220	Washer - Thrust	65 8 2
76-5890	Ring - Retaining	5 30 2	76-7230	Washer - Lock	65 5 4
76-5900	Fork - Shift	5 35 1	76-7240	Ring - Gear	65 2 1
76-5930	Block - Drive	5 38 2	76-7250	Shaft - Drive	65 1 1
76-5940	Pin - Drive	5 39 1	76-7260	Bolt	65 6 8
76-5950	Pinion - Bevel	5 40 2	76-7270	Pin - Spring	65 7 1
76-5960	Carrier	5 41 1	76-7280	Bearing	65 12 2
76-5980	Screw - Hex Flanged Hd.	5 43 6	76-7290	Shim - 0.1 mm	65 13 A/R
76-5990	Carrier - Differential	5 45 1	76-7300	Shim - 0.2 mm	65 * A/R
76-6000	Gear - Bevel	5 47 2	76-7310	Shim - 0.3 mm	65 * A/R
76-6010	Spacer	5 49 2	76-7320	Sleeve	63 4 1
76-6010	Spacer - Transaxle	7 38 2	76-7330	Bearing	63 11 1
76-6020	Washer - Thrust	5 50 2	76-7340	Seal - Oil	63 6 1
76-6030	Seal - Oil	5 51 1	76-7350	Bushing	63 7 1
76-6040	Plug - Pipe	5 14 2	76-7360	O-Ring	63 10 1
76-6040	Plug - Pipe	4 47 1	76-7370	Bearing	63 1 1
76-6270	Foam - Cover	18 7 1	76-7380	Washer	63 8 1
76-6300	Gerotor	13 16 1	76-7390	Nut - Lock	63 9 1
76-6310	Screw-Cap	13 19 7	76-7400	O-Ring	63 2 2
76-6320	Spacer	13 17 1	76-7410	Shim - 0.1 mm	63 3 A/R
76-6330	Control Parts Assembly	13 * 1	76-7420	Shim - 0.2 mm	63 * A/R
76-6360	Strip - Seal	1 12 2	76-7430	Shim - 0.4 mm	63 * A/R
76-6361	Strip - Seal Tower	2 49 1	76-7450	Bolt - Stud	63 14 1
76-6362	Moulding - Outer	54 22 1	76-7460	Washer	63 15 1
76-6363	Moulding - Inner	54 9 1	76-7470	Pipe	64 8 1
76-6380	Strip - Seal Access Panel	2 48 1	76-7480	Plug - Vent	64 7 1
76-6381	Seal - Strip	54 30 2	76-7490	Shaft - Differential	65 14 2
76-6382	Seal - Strip	54 36 2	76-7500	Bearing	65 15 4
76-6430	Foam - Hood Middle	2 32 1	76-7510	Pinion - 14T	66 10 2
76-6440	Foam - Hood Rear	2 33 1	76-7510	Pinion - 14T	65 17 2
76-6450	Strip - Seal Hood R.H.	2 * 1	76-7520	Shim - 0.1 mm	65 16 A/R
76-6460	Strip - Seal Hood L.H.	2 36 1	76-7530	Shim - 0.2 mm	65 * A/R
76-6470	Strip - Seal Hood Front	1 25 1	76-7540	Shim - 0.4 mm	65 * A/R
76-6550	Hose - Hydraulic Rod End	55 7 1	76-7550	Ring - Retaining	65 18 2
76-6570	Washer - Thrust	55 12 2	76-7560	Case - Gear	66 1 2
76-6570	Washer - Thrust	58 20 2	76-7580	Seal - O-Ring	65 19 4
76-6580	Motor - Hydraulic	58 33 1	76-7590	Spacer	65 20 2
76-6600	Pipe - Stand	20 4 1	76-7600	Bolt - Reamer	65 21 2
76-6610	Clevis - Brake	8 46 2	76-7610	Bolt	65 23 6
76-6800	Chamber	54 8 1	76-7620	Washer - Lock	65 22 6
76-6850	Pin - Cylinder (Cap End)	68 1 3	76-7630	Holder - 20 mm R.H.	66 * 1
76-6860	Pin - Cylinder (Rod End)	68 20 3	76-7640	Bolt	66 5 8
76-6880	Hose - Hydraulic	8 10 1	76-7640	Bolt	66 28 20
76-6900	Hose - Hydraulic Cap End	55 8 1	76-7650	Shaft - Final Drive	66 2 2
76-6910	Rotating Assembly	62 14 1	76-7660	Holder - 25 mm L.H.	66 4 1
76-6920	Back Plate Assembly	62 2 1	76-7670	Bearing	66 3 4
76-6930	Shaft - Drive	62 12 1	76-7680	Case - Final Drive	66 8 2
76-6940	Housing Assembly	62 6 1	76-7690	Nut	63 13 1
76-6950	Race - Thrust	62 9 1	76-7700	Shim - 0.8 mm	67 25 A/R
76-6960	Bearing - Thrust	62 10 1	76-7710	Bolt	67 8 2
76-6970	Insert - Camplate	62 5 1	76-7720	Nut	67 9 4
76-6980	O-Ring	62 3 1	76-7730	Bushing	66 7 2
76-6990	Screw - Cap, Hex. Hd.	62 1 6	76-7740	Seal - Oil	66 6 2
76-7000	Ring - Retaining	62 8 2	76-7750	Pinion - 15T	66 11 2
76-7010	Ring - Retaining	62 13 1	76-7760	Shim - 1.0 mm	67 * A/R
76-7020	Spacer	62 11 1	76-7770	Cover	66 9 2
76-7040	Pad - Foot	18 3 1	76-7780	Shim - 1.2 mm	67 * A/R
76-7090	Cover - Console	18 6 1	76-7790	Shim - 1.4 mm	67 * A/R
76-7100	Housing - Axle A	64 1 1	76-7810	Holder - Bearing	66 19 2
76-7110	Plug	64 5 1	76-7820	Shim - 1.0 mm	67 5 A/R
76-7110	Plug	66 26 4	76-7830	Shaft - Wheel	66 21 2
76-7120	Seal - Washer	64 6 1	76-7840	Gear - Bevel	66 13 2
76-7120	Seal - Washer	66 27 4	76-7850	Bearing	66 12 2
76-7130	Housing - Axle B	64 3 1	76-7860	Bearing	66 18 2
76-7140	Plug	64 9 1	76-7870	Seal - Oil	66 20 2
76-7150	Bolt	64 4 8	76-7880	Spacer	66 15 2
76-7150	Bolt	63 5 3	76-7890	Shim - 0.15 mm	66 14 A/R

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7900	Shim - 0.2 mm	66 * A/R	76-9410	Hose - Hydraulic	8 28 1
76-7910	Shim - 0.4 mm	66 * A/R	76-9430	Spring - Extension	28 17 1
76-7920	Ring - Retaining	66 16 2	76-9440	Rod - Seat Prop	14 8 1
76-7930	Ring - Retaining	66 17 2	76-9450	Boot - Steering Column	11 20 1
76-7940	Arm - Tie Rod	67 2 1	76-9460	Plate - Seat	14 37 1
76-7950	Bushing	67 4 1	76-9480	Sleeve - Seat Pivot	14 34 2
76-7960	Fitting - Grease	67 21 2	76-9530	Hose - Hydraulic	11 48 1
76-7960	Fitting - Grease	66 30 2	76-9540	Hose - Hydraulic	54 20 2
76-7970	Shim - 1.4 mm	67 * A/R	76-9560	Hose - Hydraulic	24 41 1
76-7980	Shim - 1.2 mm	67 * A/R	76-9560	Hose - Hydraulic	11 45 1
76-7990	Shim - .08 mm	67 * A/R	76-9570	Hose - Hydraulic	24 10 1
76-8000	Bolt	67 6 4	76-9570	Hose - Hydraulic	11 44 1
76-8010	Washer	67 7 2	76-9590	Hose - Hydraulic	58 14 2
76-8020	Rod - Tie	67 22 1	76-9680	Bearing Housing Assembly	10 18 1
76-8030	Rod End - L.H.	67 10 1	76-9690	Rod - Brake Linkage	10 4 2
76-8040	Nut - L.H.	67 24 1	76-9690	Rod - Brake Linkage	8 29 2
76-8050	Rod End - R.H.	67 16 1	76-9700	Cover - Tower	1 2 1
76-8060	Nut - R.H.	67 23 1	76-9710	Bracket - Bulkhead	9 52 1
76-8120	Bolt - U	7 25 2	76-9720	Shaft - Brake	10 26 1
76-8140	Bracket - Steering Gear	11 35 1	76-9760	Damper - Pivot	28 42 1
76-8150	Support - Steering Shaft	11 39 1	76-9780	Decal - 4 Matic	17 1 1
76-8160	Support - Steering Gear	11 1 1	76-9790	Foam - Fuel Tank	20 2 1
76-8170	Hose - Hydraulic	24 37 4	76-9800	Hood	1 28 1
76-8180	Hose - Hydraulic	58 10 1	76-9900	Hose - Hydraulic	18 32 1
76-8190	Decal - Reelmaster 335D	2 34 2	76-9900	Hose - Hydraulic	68 41 1
76-8210	Hose - Hydraulic	24 7 2	76-9930	Foam - Seat Plate Rear	14 6 1
76-8220	Hose - Hydraulic	24 8 2	76-9950	Bracket - Ring	26 20 4
76-8220	Hose - Hydraulic	68 31 2	76-9970	Valve - Solenoid	58 1 1
76-8260	Bracket - Transaxle Support	3 19 1	76-9980	Holder - Foam	35 7 1
76-8270	Rod - Clevis Adjusting	8 40 2	76-9990	Seal - Air Intake	35 8 1
76-8290	Shroud - Lower R.H.	1 11 1	77-3250	Washer	50 16 1
76-8300	Cover - Axle Housing	7 7 2	77-3260	Washer	50 15 1
76-8340	Shaft - Tilt Steering	11 38 1	77-3270	Manifold - Intake	44 4 1
76-8430	Support - Hood Front	1 13 1	77-3280	Screw	44 2 5
76-8440	Boot - Throttle	16 22 1	77-3290	Screw	44 3 4
76-8450	Boot - Lift Lever	16 8 1	77-3300	Stud	44 7 6
76-8640	Stud - Traction	28 12 1	77-3310	Gasket	44 6 2
76-8700	Panel - Gauge	17 2 1	77-3320	Nut - Hex	44 9 6
76-8710	Panel - Console	16 23 1	77-3340	Manifold - Exhaust	44 11 1
76-8720	Panel - Steering Tower	11 14 1	77-3360	Screw	42 20 3
76-8750	Plate - Caution	54 4 1	77-3370	Screw	42 23 1
76-8770	Decal - Caution	35 9 1	77-3380	Pulley	42 21 1
76-8770	Decal - Caution	53 10 1	77-3390	Support	42 22 1
76-8780	Decal - Fuel	20 12 1	77-3400	Camshaft	42 5 1
76-8810	Decal - Safety	10 42 1	77-3410	Key	42 4 1
76-8850	Rod - Shift Linkage	3 1 1	77-3420	Gasket	42 3 2
76-8850	Rod - Shift Linkage	11 27 1	77-3440	Screw	42 1 2
76-8860	Harness - Wire (Main)	24 16 1	77-3450	Washer	42 2 2
76-8870	Lever Damper Assembly	28 43 1	77-3460	Screw	42 6 1
76-8890	Pedal - Brake L.H.	10 21 1	77-3500	Roller Assembly	42 14 1
76-8930	Brake Pedal Assembly R.H.	10 23 1	77-3510	Spring	42 13 1
76-8950	Harness - Wire (Lamp)	17 * 1	77-3520	Cup	42 12 1
76-8960	Harness - Wire Reel	15 1 1	77-3540	Roller Assembly	42 8 1
76-8960	Harness - Wire Reel	25 46 1	77-3550	Box - Degassing	34 9 1
76-8960	Harness - Wire Reel	12 54 1	77-3560	Cap	34 13 1
76-8970	Harness - Wire #1	9 63 1	77-3570	Shield	43 15 1
76-8980	Harness - Wire (Reel)	24 6 2	77-3580	Shield	43 14 1
76-8990	Bolt - Cylinder	55 41 1	77-3590	Shield	43 2 1
76-9030	Bearing Housing Assembly	10 30 1	77-3600	Shield - Adapter	33 35 1
76-9050	Rod - Parking Brake	11 33 1	77-3620	Retainer - Cover	1 7 2
76-9060	Gauge - Temperature	17 9 1	77-3620	Retainer - Cover	54 14 4
76-9090	Arm - Reel Speed	16 36 2	77-3620	Retainer - Cover	17 22 2
76-9100	Spacer - Rod Eye	3 3 1	77-3640	Bearing	6 12 1
76-9160	Bracket - Hood Pivot L.H.	2 40 1	77-3700	Gasket - Muffler, Exhaust	35 20 1
76-9170	Bracket - Hood Pivot R.H.	2 * 1	77-3780	Pin - Lynch	14 3 1
76-9200	Bumper	58 41 1	77-3790	Plug	37 20 1
76-9290	Bracket - Bulkhead	58 7 1	77-3790	Plug - Drain	37 26 1
76-9300	Fender L. H.	2 46 1	77-3800	Shield	43 6 1
76-9340	Fender R.H.	2 * 1	77-3810	Shield	43 8 1
76-9350	Latch - Lockup Front	68 37 2	77-3820	Support - Shield	43 11 1
76-9360	Latch - Lockup Center	68 7 1	77-3830	Clip	43 3 4
76-9400	Hose - Hydraulic	8 3 2	77-3840	Grommet	43 4 1
76-9410	Hose - Hydraulic	68 22 1	77-3850	Ring - Snap	43 16 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-709

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-3860	Nut - Lock	43 13 1	84-0090	Shim - Lt. Blue .120/.117	5 * A/R
77-3870	Washer - Flat	43 12 1	84-0130	Shim - Pink .129/.126	5 * A/R
77-3880	Bracket - Air Cleaner	35 12 1	84-0140	Shim - Black .132/.129	5 * A/R
77-3890	Bracket - Cable, Hood	34 28 1	84-0190	Link - Shift Linkage	3 4 1
77-3890	Bracket - Hood Cable	41 37 1	84-0210	Gasket - End Cap	30 46 2
77-3900	Screw - Hex. Flange Hd.	34 1 1	84-0220	Body - Center	30 45 1
77-3960	Washer - Seal	70 4 1	84-0230	Coupling	30 40 1
77-3970	Support - Relay	16 17 1	84-0240	Housing - Pump	30 24 1
77-3990	Arrester - Spark	35 * 1	84-0250	Swash Plate - Variable	30 1 2
77-4000	Shim Set	65 * 1	84-0260	Bearing - Roller	30 12 4
77-4010	Shim Set	63 * 1	84-0270	Spacer - Trunnion	30 10 4
77-4020	Shim Set	65 * 1	84-0280	Plate - Valve R.H.	30 25 1
77-4030	Shim Set	66 * 1	84-0290	Plate - Valve L.H.	30 5 1
77-4040	Shim Set	67 * 1	84-0300	Shaft - Pump	30 17 1
77-4050	Shim Set	67 * 1	84-0310	Bearing - Ball	30 18 1
77-4060	Spacer	24 17 2	84-0320	Ring - Retaining	30 19 1
77-4080	Hose - Hydraulic	9 62 1	84-0330	Screw - Cap Hex. Hd.	30 16 8
77-4080	Hose - Hydraulic	59 72 1	84-0340	Housing - Pump	30 37 1
77-4200	Harness - Wire Relay	20 37 1	84-0350	Shaft - Pump	30 43 1
77-4260	Arm - Shift Linkage	11 21 1	84-0360	Washer	30 15 8
80-7730	Spacer	14 41 1	84-0370	Bearing - Ball	30 42 1
82-3600	Shroud - Lower L.H.	2 42 1	84-0380	Ring - Retaining Internal	30 23 2
82-3630	Foam - Screen L.H.	54 16 1	84-0390	Ring - Retaining	30 41 1
82-3640	Foam - Screen R.H.	54 11 1	84-0400	Seal - Lip	30 20 1
82-3650	Foam - Screen Top	54 12 1	84-0410	Carrier - Seal	30 21 1
82-3660	Bracket - Cover	20 39 1	84-0430	Seal - O-Ring	30 8 4
82-3680	Counterbalance Tube Assy.	18 35 1	84-0440	Cover - Trunnion	30 7 2
82-3700	Reservoir - Hydraulic	26 32 1	84-0450	Cover - Trunnion	30 44 2
82-3730	Screen - Radiator	54 15 1	84-0460	Screw	30 6 16
82-3740	Oil Cooler Assembly	54 10 1	84-0470	Seal - Lip	30 9 2
82-3750	Cover - Console	17 21 1	84-0480	Poppet - Charge Relief	30 32 1
82-3770	Panel - Access	2 47 1	84-0490	Spring - Compression	30 33 1
82-4870	Decal - Service	18 5 1	84-0500	Charge Relief Plug Assy.	30 35 1
82-4880	Decal - Service	18 * 1	84-0520	Plug - Special	30 31 4
82-4900	Foam - Seat Front	14 7 1	84-0530	Valve - Screw 175 BAR	30 47 2
82-4910	Roller	68 36 4	84-0540	Valve - Screw 345 BAR	30 26 2
82-4920	Frame Assembly	1 6 1	84-0550	Ring - Retaining	30 27 4
82-4950	Retractable Spring Plunger	11 5 1	84-0560	Seal - O-Ring	30 30 4
82-4960	Pad - Brake	10 15 2	84-0570	Shim - Trunnion Kit	30 11 4
82-4970	Ring - Retaining	6 17 1	84-0580	Shim - Charge Relief Kit	30 36 1
82-4990	Housing - Fixed	6 9 1	84-0650	Valve - Velocity Fuse	9 59 1
82-5050	Screw - Cap Hex. Hd.	28 22 2	84-0660	Bracket - Bumper	68 16 2
82-5100	Tandem Pump Assembly	28 8 1	84-0840	Fitting - Hydraulic 45°	31 34 1
82-5110	Hose - Suction	31 27 1	84-0850	Hose - Hydraulic	18 22 1
82-5110	Hose - Suction	27 50 1	84-0850	Hose - Hydraulic	31 35 1
82-5120	Adapter - Pump to Engine	33 24 1	84-0900	Hose - Hydraulic	26 11 1
82-5130	Lever - Reel	28 6 1	84-0900	Hose - Hydraulic	31 16 1
82-5160	Rod - Reel Lever	28 1 1	84-0970	Brake Linkage Arm Assy.	8 33 2
82-5160	Rod - Reel Lever	16 34 1	84-0990	Pin - Linkage Arm	8 36 2
82-5170	Plate - Pump Control	28 26 1	84-1480	Hose - Dampner	28 47 1
82-5180	Control - Pump	28 24 1	84-6400	Orifice	18 37 3
82-5190	Shaft - Traction Pedal	10 8 1	84-6420	Plunger	19 37 2
82-5210	Hose - Hydraulic	7 * 1	84-6430	Plunger	19 31 1
82-5210	Hose - Hydraulic	31 38 1	85-4980	Switch - Toggle	17 17 1
82-5240	Plate - Pivot	28 41 1	86-2710	Hose - Hydraulic	58 30 1
82-5250	Plate - Adapter	16 35 1	86-2720	Hose - Hydraulic	3 * 1
82-5270	Bracket - Spring	28 16 1	86-2720	Hose - Hydraulic	59 70 1
82-5280	Shaft - Pivot	28 30 1	86-2730	Hose - Hydraulic	58 22 1
82-5290	Rod - Traction Control	28 39 1	86-2740	Hose - Hydraulic	31 1 1
82-5290	Rod - Traction Linkage	10 11 1	86-2740	Hose - Hydraulic	58 3 1
82-5300	Support - Heel	18 1 1	86-2750	Hose - Hydraulic	31 19 1
82-5310	Hydraulic Tube Assembly	31 18 1	86-2750	Hose - Hydraulic	3 24 1
82-5320	Hydraulic Tube Assembly	31 9 1	86-2760	Hose - Hydraulic	31 2 1
82-5330	Hydraulic Tube Assembly	32 42 1	86-2760	Hose - Hydraulic	3 22 1
82-5330	Tube - Hydraulic	7 37 1	86-2770	Tube - Hydraulic	58 18 1
82-5340	Bracket - Pump	31 14 1	86-2990	Mount - Throttle Cable	33 25 2
82-5350	Hose - Hydraulic	32 44 1	86-3000	Head - Hydraulic Filter	26 40 1
82-5360	Clamp - Tube	31 10 1	86-3010	Element - Hydraulic Filter	26 41 1
82-5361	Clamp - Tube	31 17 1	86-5430	Plate - Skid	7 27 1
82-5380	Shim - Pinion .045	3 42 A/R	86-5570	Hose - Hydraulic	31 32 1
82-5390	Shim - Pinion .038	3 * A/R	86-5570	Hose - Hydraulic	11 47 1
82-5400	Shim - Pinion .052	3 * A/R	86-5820	Harness - Wire Main	15 6 1
84-0080	Spiral Gear Set (Matched)	5 * 1	86-5830	Spring - Compression	8 42 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
86-5840	Plate - Spring	8 41 2	237-22	Seal - O-Ring	58 6 5
86-7470	Diode	15 7 1	237-22	Seal - O-Ring	24 11 11
88-1250	Hydraulic Cylinder Assy.	55 43 1	237-22	Seal - O-Ring	18 24 4
88-1260	Front Transaxle Assembly	3 12 1	237-22	Seal - O-Ring	31 25 2
88-1310	Foam - Access Panel	2 45 1	237-22	Seal - O-Ring	68 25 4
88-1420	Spring - Compression	14 23 1	237-22	Seal - O-Ring	11 43 4
88-1500	Foam - Firewall	1 27 1	237-30	Seal - O-Ring	26 3 4
88-1550	Stop - Axle	58 16 2	237-30	Seal - O-Ring	8 14 2
88-1560	Housing - Axle	7 11 2	237-30	Seal - O-Ring	31 15 2
88-1570	Shaft - Axle	7 12 2	237-30	Seal - O-Ring	14 16 1
88-1580	Seal - Ring	7 40 2	237-30	Seal - O-Ring	18 21 1
88-1590	Bearing - Ball	7 24 2	237-30	Seal - O-Ring	3 32 1
88-1600	Washer - Belleville	7 41 4	237-30	Seal - O-Ring	4 52 1
88-3660	Rod-Piston	57 9 1	237-42	Seal - O-Ring	18 8 5
88-3670	Piston	57 3 1	237-42	Seal - O-Ring	8 22 2
88-3680	Gland	57 7 1	237-42	Seal - O-Ring	68 23 4
88-3690	Nut-Lock	57 2 1	237-42	Seal - O-Ring	25 49 2
88-3720	Seal Kit	57 * 1	237-42	Seal - O-Ring	59 51 2
92-0636	Shaft Assembly	6 3 1	237-65	Seal - O-Ring	58 2 9
92-0639	Case Assembly	5 15 1	237-65	Seal - O-Ring	8 2 6
92-0640	Bearing - Needle	5 28 1	237-65	Seal - O-Ring	31 3 7
92-0641	Shaft - Counter	5 20 1	237-65	Seal - O-Ring	6 5 2
92-0642	Gear - Output	5 17 1	237-65	Seal - O-Ring	26 12 4
92-0643	Gear - Ring	5 37 1	237-65	Seal - O-Ring	54 21 6
92-0644	Gear - Cluster	5 19 1	237-65	Seal - O-Ring	3 23 2
92-0645	Shaft & Gear - Shifter	5 21 1	237-65	Seal - O-Ring	24 29 6
92-0646	Bearing - Ball	5 42 2	237-65	Seal - O-Ring	7 32 2
92-0647	Rod - Shift (High-Low)	5 36 1	237-65	Seal - O-Ring	18 34 1
92-1364	Guide - Switch	4 48 1	237-78	Seal - O-Ring	31 8 5
92-1365	Plunger - Switch	4 49 1	237-78	Seal - O-Ring	55 44 2
92-1366	Spring - Compression	4 50 1	237-78	Seal - O-Ring	59 56 2
92-1367	Arm - Traction Linkage	10 13 1	237-79	Seal - O-Ring	26 5 2
92-1368	Switch - Lift	68 40 3	237-79	Seal - O-Ring	18 19 2
92-1370	Decal - Warning	10 44 1	237-79	Seal - O-Ring	3 26 3
92-1378	Hose - Hydraulic	31 26 1	237-79	Seal - O-Ring	31 31 1
92-1378	Hose - Hydraulic	27 52 1	237-79	Seal - O-Ring	11 41 4
92-1379	Arm - Brake Linkage	10 24 2	237-79	Seal - O-Ring	9 64 1
92-1398	Lift Valve Assembly	18 18 1	237-79	Seal - O-Ring	59 67 4
92-2556	Hydraulic Motor Assembly	3 27 1	237-80	O-Ring	60 2 2
92-2565	Bracket - Muffler	35 19 1	237-80	Seal - O-Ring	31 5 6
92-2567	Spring	19 21 1	237-80	Seal - O-Ring	26 8 5
92-2568	Poppet	19 22 1	237-80	Seal - O-Ring	30 14 3
92-2569	Screw - Hex. Socket Hd.	14 12 1	237-81	Seal - O-Ring	8 19 2
92-2571	Plug	6 4 2	237-81	Seal - O-Ring	58 32 2
92-2572	End Cap Assembly	6 14 1	237-81	Seal - O-Ring	26 33 3
92-2573	Butt & Tube Assy.	57 1 1	237-136	Grommet	14 20 2
92-2581	Arm - Neutral Switch	28 21 1	237-146	Seal - O-Ring	31 30 1
92-2588	Hose - PCV	36 5 1	237-161	O - Ring	29 25 1
92-2589	Hose - PCV	36 1 1	237-161	Seal - O-Ring	28 45 1
217-122	Rim	55 31 2	237-166	Seal - O-Ring	58 28 1
217-122	Rim	58 44 2	237-167	Seal - O-Ring	3 28 1
217-123	Rim	7 22 2	240-3	Grommet	7 29 2
218-446	Nut - Hex.	17 4 1	240-3	Grommet	24 40 3
218-447	Washer - Lock	17 3 1	240-3	Grommet	9 53 2
218-461	Nut - Hex	14 11 2	240-4	Grommet	8 8 1
218-500	Nut - Hex.	17 7 1	240-4	Grommet	24 32 1
218-573	Fuse - 5A	16 43 2	240-6	Grommet	20 18 3
218-581	Fuse - 15A	16 * 1	241-119	Cap - Hub	7 19 2
218-591	Coil Assembly	60 6 1	241-119	Cap - Hub	55 34 2
218-592	Nut - Coil	60 7 1	242-34	Stud Drive	7 13 10
218-593	Fuse - 30A	16 * 1	242-50	Nut - Lug	55 37 10
219-17	Bulb - Warning Light	17 * 4	249-49	Ring - D	26 22 4
2112-9	Clamp - Muffler	35 15 1	249-50	Clip - Wire	68 48 3
232-27	Stem - Valve	7 16 2	2410-64	Plug - Dome	11 25 2
232-27	Stem - Valve	55 32 2	2410-69	Plug - Hole	68 38 1
232-27	Stem - Valve	58 46 2	2410-73	Pin - Tether	26 28 1
233-17	Knob - Parking Brake	11 15 1	2411-36	Eye - Rod	10 2 3
233-39	Knob - Throttle	16 6 1	2411-36	Eye - Rod	3 2 1
233-42	Knob	18 15 3	2411-36	Eye - Rod	11 13 1
237-7	Seal - O-Ring	14 19 1	2411-36	Eye - Rod	28 31 2
237-21	Seal - O-Ring	8 27 1	2411-36	Eye - Rod	8 31 2
237-22	Seal - O-Ring	55 4 4	2411-36	Eye - Rod	16 32 2
237-22	Seal - O-Ring	8 5 7	2411-45	Joint - Ball R.H.	56 * 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-709

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
2411-46	Joint - Ball L.H.	56 46 1	321-8	Screw - Cap Hex. Hd.	56 54 1
2412-3	Clamp	34 31 2	321-8	Screw - Cap Hex. Hd.	59 74 1
2412-3	Clamp - Hose	35 4 2	321-9	Screw - Cap Hex. Hd.	31 12 2
2412-3	Clamp - Hose	54 34 2	321-9	Screw - Cap Hex. Hd.	10 31 3
2412-32	Clamp - R	16 2 1	321-10	Screw - Cap Hex. Hd.	18 10 2
2412-34	Clamp - Hose	31 28 1	321-15	Screw - Cap Hex. Hd.	59 69 2
2412-34	Clamp - Hose	27 49 1	322-1	Screw - Cap Hex. Hd.	7 5 6
2412-36	Clamp - Hose	20 24 1	322-2	Screw - Cap Hex. Hd.	14 38 2
2412-36	Clamp - Hose	34 16 1	322-3	Screw - Cap Hex. Hd.	33 27 8
2412-36	Clamp - Hose	26 25 1	322-3	Screw - Cap Hex. Hd.	35 10 4
2412-74	Clamp - R	14 29 1	322-3	Screw - Cap Hex. Hd.	54 40 3
2412-74	Clamp - R	58 29 1	322-4	Screw - Cap Hex. Hd.	10 41 2
2412-74	Clamp - R	11 50 1	322-5	Screw - Cap Hex. Hd.	16 9 1
2412-96	Clamp	34 17 1	322-6	Screw - Cap Hex. Hd.	28 48 2
2412-102	Clamp - R	7 39 1	322-7	Screw - Cap Hex. Hd.	28 15 1
2412-104	Clamp - R	36 3 1	322-7	Screw - Cap Hex. Hd.	32 43 1
2412-104	Clamp - R	1 16 1	322-10	Screw - Cap Hex. Hd.	28 7 2
2412-108	Clamp	34 25 2	322-16	Screw - Cap Hex. Hd.	35 26 2
2412-108	Clamp - Hose	20 5 6	323-4	Screw - Cap Hex. Hd.	20 40 7
2412-108	Clamp - Hose	54 42 1	323-4	Screw - Cap Hex. Hd.	26 44 3
2412-119	Clamp	34 14 3	323-6	Screw - Cap Hex. Hd.	11 3 4
2412-119	Clamp - Hose	40 15 4	323-6	Screw - Cap Hex. Hd.	28 18 1
2412-122	Clamp Assembly	56 48 2	323-6	Screw - Cap Hex. Hd.	16 31 4
2412-123	Tie Rod Assembly	56 50 1	323-7	Screw - Cap Hex. Hd.	20 20 2
2412-125	Clamp - Hose	34 23 1	323-7	Screw - Cap Hex. Hd.	3 21 2
2412-126	Clamp - R	24 19 2	323-7	Screw - Cap Hex. Hd.	28 37 2
2412-129	Clamp - Hose	36 4 4	323-7	Screw - Cap Hex. Hd.	8 37 2
2412-129	Clamp - Hose	37 8 4	323-7	Screw - Cap Hex. Hd.	68 46 4
2412-129	Clamp - Hose	34 20 2	323-7	Screw - Cap Hex. Hd.	29 28 2
2412-129	Clamp - Hose	35 24 2	323-8	Screw - Cap Hex. Hd.	11 22 1
2412-130	Clamp - Hose	35 21 1	323-8	Screw - Cap Hex. Hd.	3 39 1
2412-133	Clamp - R	14 2 2	323-8	Screw - Cap Hex. Hd.	28 46 1
2412-134	Clamp - R	36 6 1	323-9	Screw - Cap Hex. Hd.	33 3 1
251-259	Bearing - Ball	28 13 2	323-9	Screw - Cap Hex. Hd.	10 14 1
253-84	Seal - Oil	16 11 1	323-10	Screw - Cap Hex. Hd.	68 28 6
253-129	Seal - Inner	55 26 2	323-11	Screw - Cap Hex. Hd.	68 49 3
254-72	Cup - Bearing	55 28 4	323-12	Screw - Cap Hex. Hd.	10 29 2
254-94	Cone - Bearing	55 27 4	323-17	Screw - Cap Hex. Hd.	18 13 1
256-10	Bushing - Flange	1 4 2	323-29	Screw - Cap Hex. Hd.	28 23 3
256-10	Bushing - Flange	10 22 4	323-33	Screw - Cap Hex. Hd.	33 8 2
256-32	Bushing - Sleeve	1 8 2	323-34	Screw - Cap Hex. Hd.	1 19 2
256-49	Bushing - Sleeve	8 34 2	323-34	Screw - Cap Hex. Hd.	33 41 1
256-90	Bushing - Flange	10 19 1	323-50	Bolt - Self Tapping	68 27 3
256-113	Bushing - Flange	28 10 2	324-6	Screw - Cap Hex. Hd.	31 23 1
256-237	Bushing - Sleeve	1 5 1	324-12	Screw - Cap Hex. Hd.	33 17 3
283-2	Pin - Clevis	8 45 2	325-2	Screw - Cap Hex. Hd.	3 37 1
283-58	Pin - Clevis	34 4 1	325-4	Screw - Cap Hex. Hd.	7 28 1
283-58	Pin - Clevis	2 30 1	325-4	Screw - Cap Hex. Hd.	58 35 2
285-17	Plug - Socket Pipe	68 43 3	325-5	Screw - Cap Hex. Hd.	68 8 3
285-22	Plug - Pipe	20 27 1	325-5	Screw - Cap Hex. Hd.	7 34 2
289-44	Nipple - Pipe	3 15 1	325-9	Screw - Cap Hex. Hd.	14 36 2
289-50	Nipple - Pipe	3 41 1	325-15	Screw - Cap Hex. Hd.	8 4 10
2811-1	Fitting - 45° Elbow	54 38 1	325-15	Screw - Cap Hex. Hd.	7 26 10
2812-1	Fitting - Reducing Bushing	20 26 1	325-20	Screw - Cap Hex. Hd.	55 14 2
2812-11	Fitting - Reducing Bushing	3 11 1	325-20	Screw - Cap Hex. Hd.	58 23 2
2813-14	Fitting - Pipe Elbow 90°	3 14 1	328-25	Screw - Cap Hex. Hd.	55 42 1
302-2	Fitting - Grease	68 12 3	328-25	Screw - Cap Hex. Hd.	59 54 2
302-2	Fitting - Grease	10 20 1	3210-7	Screw - Cap Hex. Hd.	56 49 2
302-2	Fitting - Grease	56 52 1	3217-7	Nut - Hex.	28 20 1
302-2	Fitting - Grease	59 64 1	3218-2	Nut - Jam	16 10 1
302-5	Fitting - Grease	28 9 1	3218-2	Nut - Jam	10 40 2
302-5	Fitting - Grease	10 27 3	3218-3	Nut - Jam	68 29 3
302-5	Fitting - Grease	3 35 1	3220-3	Nut - Jam	28 2 2
302-5	Fitting - Grease	8 38 2	3220-3	Nut - Jam	10 3 3
302-11	Fitting - Grease	55 23 2	3220-3	Nut - Jam	11 11 1
302-11	Fitting - Grease	16 39 1	3220-3	Nut - Jam	8 30 2
302-14	Breather	3 10 1	3220-3	Nut - Jam	16 33 2
304-46	Fitting - Radiator Drain	54 37 1	3220-3	Nut - Jam	3 40 1
321-2	Screw - Cap Hex. Hd.	16 19 1	3231-22	Bolt - Carriage	2 44 2
321-2	Screw - Cap Hex. Hd.	20 34 1	3234-4	Screw - Cap Hex. Hd.	58 8 1
321-4	Screw - Cap Hex. Hd.	14 26 1	3234-4	Screw - Hex. Flange Hd.	3 34 2
321-8	Screw - Cap Hex. Hd.	24 24 2	3234-5	Screw - Hex. Flange Hd.	34 3 1
321-8	Screw - Cap Hex. Hd.	18 29 1	3234-11	Screw	33 15 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3234-11	Screw - Hex. Washer Hd.	54 29 7	3272-5	Pin - Cotter	11 30 2
3234-12	Screw - Cap Hex. Hd.	55 18 2	3272-6	Pin - Cotter	9 47 2
3234-12	Screw - Hex. Flange Hd.	3 18 2	3272-10	Pin - Cotter	1 29 1
3234-12	Screw - Hex. Washer Hd.	20 1 2	3272-10	Pin - Cotter	11 29 1
3234-12	Screw - Hex. Washer Hd.	2 41 9	3272-10	Pin - Cotter	34 29 1
3234-13	Screw - Hex. Washer Hd.	26 35 2	3272-12	Pin - Cotter	55 40 2
3234-14	Screw - Hex. Flange Hd.	10 17 2	3272-13	Pin - Cotter	55 35 2
3234-14	Screw - Hex. Washer Hd.	2 38 4	3272-50	Pin - Cotter	68 2 6
3234-15	Screw - Hex. Flange Hd.	35 11 5	3274-19	Screw - Cap Socket Hd.	10 12 1
3234-17	Screw - Cap Hex. Hd.	12 51 1	3274-68	Screw - Socket Button Hd.	17 19 4
3234-17	Screw - Hex. Flange Hd.	34 18 1	3274-87	Screw - Flat Hd. Socket	7 2 12
3234-27	Screw - Cap Hex. Hd.	58 42 2	3290-126	Screw - Hex. Washer Hd.	16 26 2
3234-27	Screw - Hex. Washer Hd.	55 17 2	3290-271	Rivet - Pop	54 5 2
3234-27	Screw - Hex. Washer Hd.	54 32 2	3290-282	Rivet - Pop	14 4 1
3234-30	Screw - Hex. Flange Hd.	54 1 12	3290-307	Pin - Hair	14 22 1
3234-32	Screw - Cap Hex. Hd.	55 13 6	3290-317	Washer - Wave	68 35 8
3234-32	Screw - Cap Hex. Hd.	59 62 6	3290-357	Nut - Flange Lock	68 13 4
3243-11	Screw - Hex. Flange Hd.	35 1 2	3290-357	Nut - Flange Lock	1 20 4
3246-17	Screw - Set	24 2 4	3290-357	Nut - Flange Lock	3 20 1
3246-17	Screw - Set	71 14 2	3290-357	Nut - Flange Lock	16 29 1
3247-2	Screw - Set	58 19 1	3290-357	Nut - Flange Lock	28 34 1
3249-11	Screw - Round Hd.	28 29 2	3290-357	Nut - Lock	33 36 6
3253-3	Washer - Lock	18 28 1	3290-359	Screw - Round Hd.	1 22 2
3253-4	Washer - Lock	7 6 6	3290-378	Tie - Cable	26 1 1
3253-4	Washer - Lock	33 26 4	3290-378	Tie - Cable	24 5 3
3253-15	Washer - Lock	20 30 5	3290-378	Tie - Cable	34 22 2
3253-21	Washer - Lock	11 2 4	3290-378	Tie - Cable	33 37 1
3253-21	Washer - Lock	33 7 3	3290-378	Tie - Cable	3 43 3
3253-21	Washer - Lock	1 18 2	3290-378	Tie - Cable	32 46 1
3253-21	Washer - Lock	20 21 9	3290-378	Tie - Cable	12 53 1
3253-21	Washer - Lock	5 44 6	3290-378	Tie - Cable	9 57 3
3253-21	Washer - Lock	26 45 3	3290-477	Washer - Curved	28 36 2
3254-20	Washer - Lock I.T.L.W.	17 6 1	3290-483	Washer - Belleville	68 6 3
3255-7	Washer - E.T.L.W.	16 44 1	3296-2	Nut - Lock	1 23 2
3255-8	Washer - E.T.L.W.	25 45 1	3296-2	Nut Lock	17 13 1
3255-8	Washer - Lock E.T.L.W.	16 41 1	3296-9	Nut - Lock	28 33 2
3255-8	Washer - Lock, Ext. Tooth	33 20 2	3296-12	Nut - Lock	16 45 2
3256-3	Washer	14 21 1	3296-25	Nut - Lock	68 5 3
3256-3	Washer	17 23 2	3296-29	Nut - Lock	28 5 4
3256-3	Washer - Flat	34 19 1	3296-29	Nut - Lock	31 40 1
3256-3	Washer - Flat	16 28 2	3296-39	Nut - Lock	18 17 1
3256-3	Washer - Flat	28 32 2	3296-39	Nut - Lock	8 39 2
3256-3	Washer - Flat	2 37 2	3296-39	Nut - Lock	14 40 1
3256-3	Washer - Flat	32 41 2	3296-41	Nut - Lock	16 5 1
3256-3	Washer - Flat	10 43 1	3296-42	Nut - Lock	16 15 1
3256-4	Washer	31 22 1	3296-42	Nut - Lock	24 18 2
3256-22	Washer	31 11 2	3296-42	Nut - Lock	31 21 2
3256-22	Washer	24 23 2	3296-42	Nut - Lock	10 33 1
3256-22	Washer - Flat	14 27 1	3296-42	Nut - Lock	20 36 1
3256-22	Washer - Flat	18 27 1	3296-45	Nut - Lock	56 53 2
3256-22	Washer - Flat	11 32 1	3296-45	Nut - Lock	59 65 2
3256-22	Washer - Flat	56 55 2	3296-47	Nut - Lock	54 24 5
3256-22	Washer - Flat	59 75 2	3296-47	Nut - Lock	16 40 1
3256-23	Washer - Flat	54 2 6	3296-47	Nut - Lock	28 49 2
3256-23	Washer - Flat	14 39 2	3296-49	Nut - Hex.	68 26 3
3256-24	Washer - Flat	33 4 4	3296-49	Nut - Lock	11 10 2
3256-24	Washer - Flat	20 11 9	3296-51	Nut - Lock	55 11 3
3256-24	Washer - Flat	18 14 2	3296-51	Nut - Lock	16 13 1
3256-24	Washer - Flat	1 17 2	3296-51	Nut - Lock	58 17 3
3256-24	Washer - Flat	10 37 1	3296-59	Nut - Lock	10 1 4
3256-24	Washer - Flat	16 46 1	3296-59	Nut - Lock	28 4 4
3256-24	Washer - Flat	26 46 3	3296-59	Nut - Lock	3 5 1
3256-26	Washer - Flat	7 9 3	3296-59	Nut - Lock	11 12 1
3256-26	Washer - Flat	11 28 4	3296-59	Nut - Lock	16 30 4
3256-26	Washer - Flat	54 43 2	3296-59	Nut - Lock	8 32 2
3256-28	Washer - Flat	16 12 2	3296-67	Nut - Axle	7 20 2
3256-28	Washer - Flat	55 15 4	32104-82	Screw - Hex. Flange Hd.	2 50 1
3256-28	Washer - Flat	58 25 1	32105-12	Screw - Hex. Hd.	17 16 1
3256-49	Washer - Flat	14 5 1	32107-11	Nut	53 9 2
3256-71	Washer - Flat	28 35 3	32120-15	Ring - Retaining	58 38 2
3256-78	Washer - Flat	16 16 1	32120-19	Ring - Retaining	8 35 4
3258-19	Screw - Rd. Head Machine	53 2 2	32120-42	Ring - Retaining	69 14 1
3272-1	Pin - Cotter	18 11 6	32121-6	Pin - Roll	16 14 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-709

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32121-6	Pin - Roll	11 26 1	340-2	Fitting - Hydraulic Straight	18 23 3
32121-6	Pin - Roll	68 33 4	340-2	Fitting - Hydraulic Straight	68 24 3
32121-6	Pin - Roll	3 38 1	340-2	Fitting - Hydraulic Straight	9 61 1
32121-10	Pin - Roll	11 7 1	340-3	Fitting - Hydraulic Straight	18 36 1
32121-11	Pin - Roll	10 32 2	340-4	Fitting - Hydraulic Straight	18 20 1
32121-24	Pin - Roll	3 9 1	340-6	Fitting - Hydraulic Straight	26 4 1
32121-25	Pin - Roll	10 25 2	340-7	Fitting - Hydraulic Straight	31 4 3
32121-50	Pin - Roll	10 35 1	340-7	Fitting - Hydraulic Straight	26 13 1
32121-123	Pin - Roll	11 9 2	340-8	Fitting - Hydraulic Straight	26 39 1
32122-24	Screw - Round Hd.	20 31 5	340-17	Fitting - Hydraulic 90°	31 36 2
32128-13	Nut - Lock	35 17 2	340-55	Fitting - Hydraulic 45°	4 44 1
32128-19	Nut - Flange	35 18 2	340-68	Fitting - Hydraulic Tee	9 58 1
32128-20	Nut - Flange	35 13 9	340-70	Nut - Bulkhead	55 6 2
32128-20	Nut - Lock	68 14 2	340-70	Nut - Bulkhead	24 9 5
32128-20	Nut - Lock	34 30 1	340-70	Nut - Bulkhead	58 9 3
32128-20	Nut - Lock	10 36 2	340-70	Nut - Bulkhead	8 12 1
32128-20	Nut - Lock	12 52 1	340-72	Fitting - Hydraulic 90°	24 42 2
32128-23	Nut - Flange Lock	55 1 6	340-72	Fitting - Hydraulic 90°	8 1 2
32128-23	Nut - Flange Lock	58 4 8	340-72	Fitting - Hydraulic 90°	54 25 2
32128-23	Nut - Flange Lock	7 10 4	340-74	Nut - Bulkhead	58 21 1
32128-33	Nut - Flange Lock	17 18 4	340-74	Nut - Bulkhead	54 26 2
32128-33	Nut - Flange Lock	59 59 1	340-74	Nut - Bulkhead	24 30 3
32128-33	Nut - Lock	14 9 1	340-74	Nut - Bulkhead	7 36 2
32128-37	Nut - Flange Lock	31 20 1	340-74	Nut - Bulkhead	9 50 2
32128-37	Nut - Lock, Flange Hd.	33 13 3	340-76	Fitting - Hydraulic Straight	25 47 1
32128-50	Nut - Flange Lock	7 8 4	340-77	Fitting - Hydraulic 90°	8 21 1
32136-5	Nut - Slotted	55 33 2	340-77	Fitting - Hydraulic 90°	68 47 1
32136-13	Nut - Slotted	55 39 2	340-77	Fitting - Hydraulic 90°	25 48 2
32144-4	Screw - Hex. Flange Hd.	11 19 4	340-77	Fitting - Hydraulic 90°	59 50 1
32144-4	Screw - Hex. Hd.	14 33 1	340-97	Fitting - Hydraulic 90°	55 45 2
32144-4	Screw - Hex. Washer Hd.	16 1 11	340-97	Fitting - Hydraulic 90°	59 57 2
32144-4	Screw - Hex. Washer Hd.	17 12 6	340-101	Fitting - Hydraulic 45°	3 31 1
32144-4	Screw - Hex. Washer Hd.	26 21 2	340-109	Fitting - Hydraulic Tee	26 19 1
32144-11	Screw	18 2 2	340-110	Fitting - Hydraulic 90° El.	9 60 1
32144-11	Screw - Hex. Flange Hd.	55 9 2	340-117	Fitting - Hydraulic Cap	8 17 1
32144-11	Screw - Hex. Flange Hd.	10 28 4	340-120	Fitting - Hydraulic Tee	24 35 1
32144-11	Screw - Hex. Washer Hd.	68 10 3	340-138	Fitting - Hydraulic 45°	11 42 3
32144-11	Screw - Hex. Washer Hd.	1 14 10	340-139	Fitting - Hydraulic 90°	8 18 2
32144-11	Screw - Hex. Washer Hd.	11 23 4	340-139	Fitting - Hydraulic 90°	58 34 1
32144-11	Screw - Hex. Washer Hd.	26 36 2	340-139	Fitting - Hydraulic 90°	26 43 1
32144-11	Screw - Hex. Washer Hd.	33 39 2	340-152	Cap - Hydraulic	26 17 1
32144-11	Screw - Hex. Washer Hd.	59 58 2	340-153	Fitting - Hydraulic 90°	3 25 1
32144-19	Screw - Hex. Hd.	17 15 2	340-153	Fitting - Hydraulic 90°	59 68 1
32144-26	Screw - Hex. Flange Hd.	31 13 2	340-154	Fitting - Hydraulic 90°	8 9 1
32144-26	Screw - Hex. Flange Hd.	28 40 2	340-155	Fitting - Hydraulic Straight	59 66 2
32144-26	Screw - Hex. Washer Hd.	24 20 2	340-156	Fitting - Hydraulic 45°	58 31 1
32148-9	Insert - Threaded	33 6 3	340-157	Fitting - Hydraulic Tee	59 71 1
32148-10	Insert - Threaded	20 38 3	340-160	Fitting - Hydraulic	59 73 1
32148-10	Insert - Threaded	54 44 10	340-160	Fitting - Hydraulic 90°	27 51 1
32148-10	Insert - Threaded	2 52 10	353-508	Fitting - Hydraulic Plug	18 9 2
32151-10	Ring - Retaining	55 20 2	353-508	Plug - Hydraulic	59 52 1
32151-62	Ring - Retaining	3 30 1	353-508	Plug Assembly	19 6 3
32151-72	Retainer - Push-In	2 51 2	353-551	Plug	26 15 3
32151-72	Retainer - Push-On	54 13 4	353-551	Plug Assembly	30 13 3
32151-72	Retainer - Push-On	17 24 2	354-77	Fitting - Test Port	31 7 5
32151-73	Ring - Clip	28 38 1	354-78	Fitting - Hydraulic Hose	31 29 1
32151-88	Ring - Retaining	7 23 2	354-79	Cap - Fitting (Yellow)	31 6 5
32151-96	Ring - Retaining	58 26 2	354-87	Fitting - Hydraulic 90°	27 48 1
32152-5	Nut - Lock	56 47 2	354-94	Fitting - Barb	20 16 1
32153-4	Nut - Lock	56 57 1	354-95	Fitting - Barb	20 14 1
32153-4	Nut - Lock	59 77 1	354-103	Fitting - Straight	26 23 1
3333-975	Tie - Cable	12 55 1			

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 335D has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the frame in the front left corner. In any correspondence concerning the Reelmaster 335D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 335D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Collector Assembly	46
Front Transaxle Installation Assembly	3-4	Water Pump Assembly	47
Transaxle No. 88-1260	5	Fuel Injection Pump Assembly	48
Hydraulic Motor No. 92-2556	6	Fuel Injector Assembly	49
Front Axle Assembly	7	Alternator Assembly	50
Brake Linkage Assembly	8-9	Starter Assembly	51
Traction & Brake Pedals Assembly	10	Glow Plug & Glow Relay	52
Steering Tower Assembly	11-12	Air Cleaner No. 74-6000	53
Power Steering Valve No. 74-3660	13	Radiator Assembly	54
Seat Plate Assembly	14	Rear Axle Assembly	
Electrical Schematic	15	(Model No. 03600)	55-56
Control Console Assembly	16	Hydraulic Cylinder No. 88-1250	
Gage Panel Assembly	17	(Model No. 03600)	57
Lift Valve Installation Assembly	18	Rear Axle Assembly	
Lift Valve No. 92-1398	19	(Model No. 03601)	58-59
Fuel Tank Assembly	20	Solenoid Valve Assembly No. 76-9970	
Fuel Filter Assembly	21	(Model No. 03601 Only)	60
Hydraulic Schematic Model No. 03600	22	Hydraulic Cylinder No. 74-3450	
Hydraulic Schematic Model No. 03601	23	(Model No. 03601)	61
Front Hydraulic Assembly	24-25	Hydraulic Motor No. 76-6580	
Hydraulic Reservoir Assembly	26-27	(Model No. 03601)	62
Hydraulic Pump Installation Assembly	28	Sleeve Assembly Axle No. 74-5620	
Gear Pump Assembly No. 74-3420	29	(Model No. 03601)	63
Tandem Pump Assembly No. 82-5100	30	Axle Housing Assembly Axle No. 74-5620	
Hydraulic Pump Fittings Assembly	31-32	(Model No. 03601)	64
Engine & Battery Installation Assembly	33	Differential & Shaft Assembly	
Engine Plumbing Assembly	34	Axle No. 74-5620 (Model No. 03601)	65
Muffler & Air Cleaner Assembly	35	Steering Gear Case Assembly	
PCV Valve Plumbing Assembly	36	Axle No. 74-5620 (Model No. 03601)	66
Crankcase Assembly	37	Steering Arm Linkage Axle No. 74-5620	
Crankshaft Assembly	38	(Model No. 03601)	67
Cylinder Head Assembly	39-41	Lift Arm Assembly	68
Camshaft & Fan Support Assembly	42	Hydraulic Cylinder No. 74-3440	69
Belt Cover Assembly	43	Hydraulic Cylinder No. 74-3460	70
Intake & Exhaust Manifold Assembly	44	Reel Motor Assembly No. 74-3390	71
Oil Pump Assembly	45	TORO Part Number Index	72-83