



206cc OHV Vacuum Blower

Model No. 62925 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Blower, Fan and Snout Assembly	 3	Carburetor Assembly Briggs and Stratton	
Blower Assembly	 4	126302-0321-B8	 13
Engine and Front Wheel Assembly	 5	Air Cleaner Assembly Briggs and Stratton	
Traction and Wheel Assembly	 6	126302-0321-B8	 14
Traction Assembly	 7	Governor Assembly Briggs and Stratton	
Handle and Vacuum Bag Assembly	 8	126302-0321-B8	 15
Cylinder Assembly Briggs and Stratton		Muffler and Fuel Tank Assembly Briggs and	
126302-0321-B8	 9	Stratton 126302-0321-B8	 16
Cylinder Head Assembly Briggs and Stratton		Blower Housing Assembly Briggs and Stratton	
126302-0321-B8	 10	126302-0321-B8	 17
Crankshaft Assembly Briggs and Stratton		Rewind Starter Assembly Briggs and Stratton	
126302-0321-B8	 11	126302-0321-B8	 18
Crankcase Assembly Briggs and Stratton		Engine Gasket Set Briggs and Stratton	
126302-0321-B8	 12	126302-0321-B8	 19
		Carburetor Overhaul Kit Briggs and Stratton	
		126302-0321-B8	 20


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | ❻ Included in Valve Gasket Set (Ref. No. 1095) |

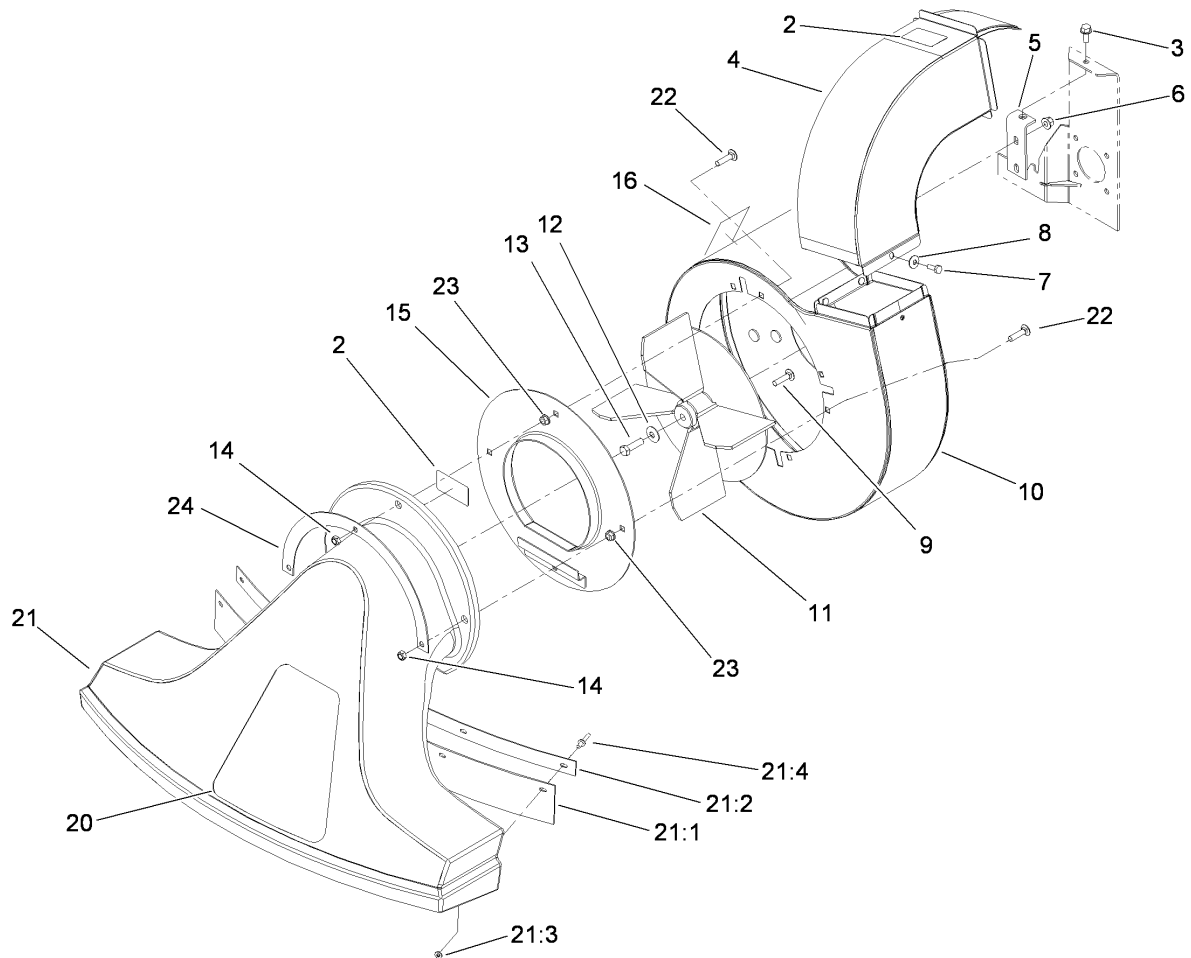


Blower, Fan and Snout Assembly

Ref	Part No.	Qty.	Description				
2	93-4139	2	Decal-Caution, Bag				
3	32144-70	1	Screw-HWHTF				
4	110-8605-01	1	Vacuum Chute ASM				
5	105-1233-03	1	Bracket-Mounting, Housing				
6	104-8300	4	Nut-Flange, NI				
7	321-2	1	Screw-HH				
8	3290-436	1	Washer-Belleville				
9	3230-19	1	Screw-CARR				
10	110-8606-01	1	Blower/Vac Housing ASM				
11	93-3677-03	1	Fan ASM				
12	3290-340	1	Washer-Belleville				
13	3211-5	1	Screw-HH				
14	3296-47	4	Nut-Lock, NI				
15	20-5450-01	1	Cover-Blower				
16	105-4062	1	Decal-Warning, Rotate				
20	107-8919	1	Decal				
21	40-7000	1	Snout ASM				
21:1	20-6830	1	Flap-Rubber				
21:2	20-6840-03	1	Clamp-Flap				
21:3	3256-51	5	Washer-Flat				
21:4	3269-22	5	Rivet-Pop				
22	3230-3	3	Screw-CARR				
23	32128-20	3	Nut-HF				
24	105-8543-03	1	Flange-Retainer				

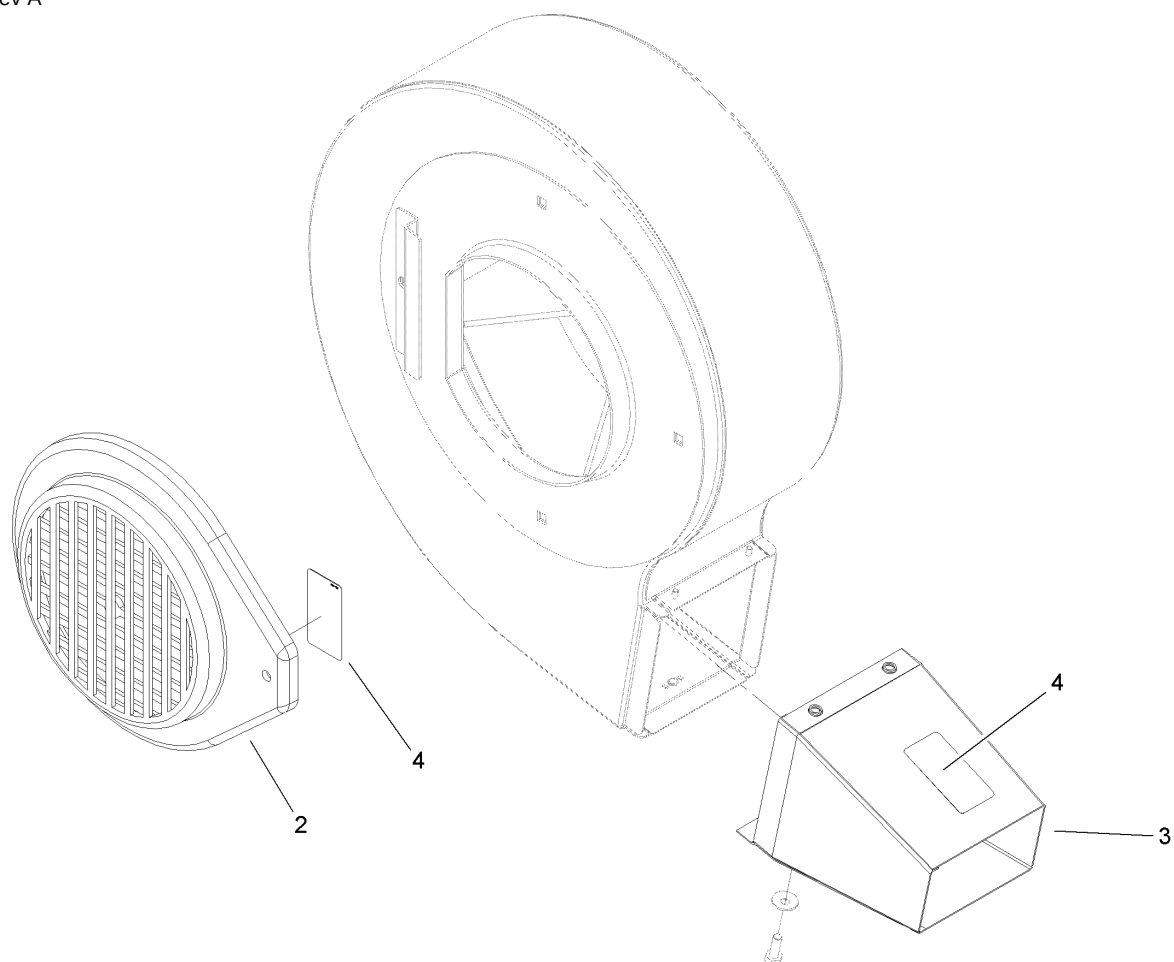

Blower Assembly


Ref	Part No.	Qty.	Description
2	20-5780	1	Intake-Blower
3	110-9080-01	1	Blower Exhaust ASM
4	93-4139	2	Decal-Caution, Bag

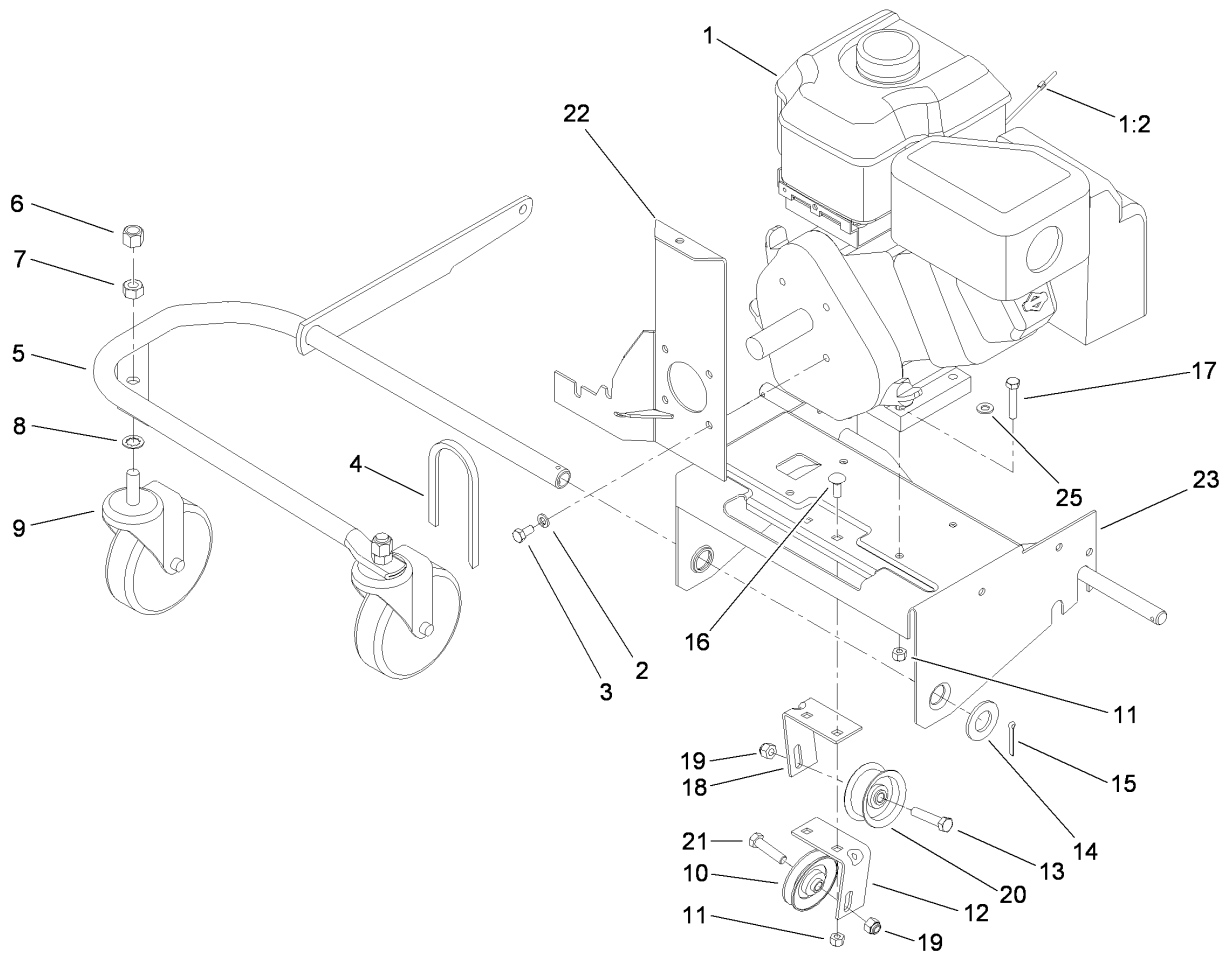

Engine and Front Wheel Assembly


Ref	Part No.	Qty.	Description
1	21	1	Engine-Briggs And Stratton, 126302-0321-B8
1:2	2210-316	1	Stop-Rope
2	3253-4	4	Washer-Lock
3	3210-2	4	Screw-HH
4	20-5990	1	Belt-V
5	93-4146-03	1	Front Wheel Support ASM
6	3296-23	2	Nut-Lock, NI
7	3217-9	2	Nut-HH
8	3254-4	2	Washer-Lock/Int
9	23-3320	2	Caster
10	12-5820	1	Pulley-Idler
11	3296-29	6	Nut-Lock, NI
12	20-8690-03	1	Bracket-Idler Mount, LH
13	323-9	1	Screw-HH
14	3256-29	1	Washer-Flat
15	3272-17	1	Pin-Cotter
16	3230-1	2	Bolt-CARR
17	322-8	4	Screw-HH
18	20-8680-03	1	Bracket-Idler Mount, RH
19	3296-39	2	Nut-Lock, NI
20	12-6700	1	Pulley-Idler
21	323-8	1	Screw-HH
22	105-1232-03	1	Stabalizer Bracket ASM

Ref	Part No.	Qty.	Description
23	20-5560-03	1	Plate-Engine
25	3256-23	1	Washer-Flat

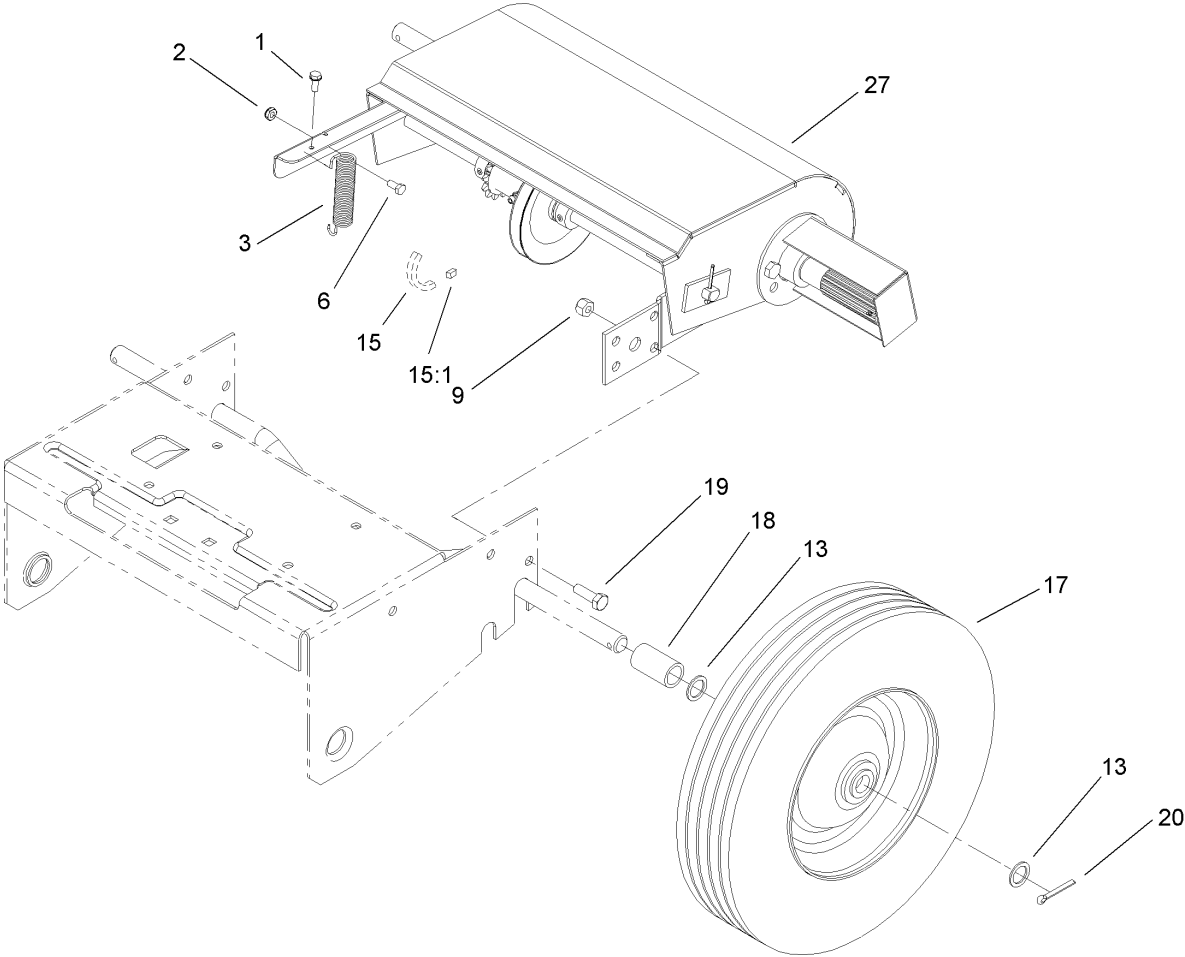


Traction and Wheel Assembly

Ref	Part No.	Qty.	Description				
1	32140-32	1	Screw-HH				
2	3296-27	1	Nut-Lock, NI				
3	23-3520	1	Spring-Traction				
6	25-8640	1	Screw-HH,				
9	3296-29	6	Nut-Lock, NI				
13	7-3590	7	Washer				
15	3-3434	1	Chain-Roller, Reel Drive				
15:1	2710-31	1	Link-Connecting, No. 35				
17	20-6100	2	Wheel				
18	20-5410	2	Spacer-Axle				
19	322-5	6	Screw-HH				
20	3272-17	2	Pin-Cotter				
27		1	Traction ASM				

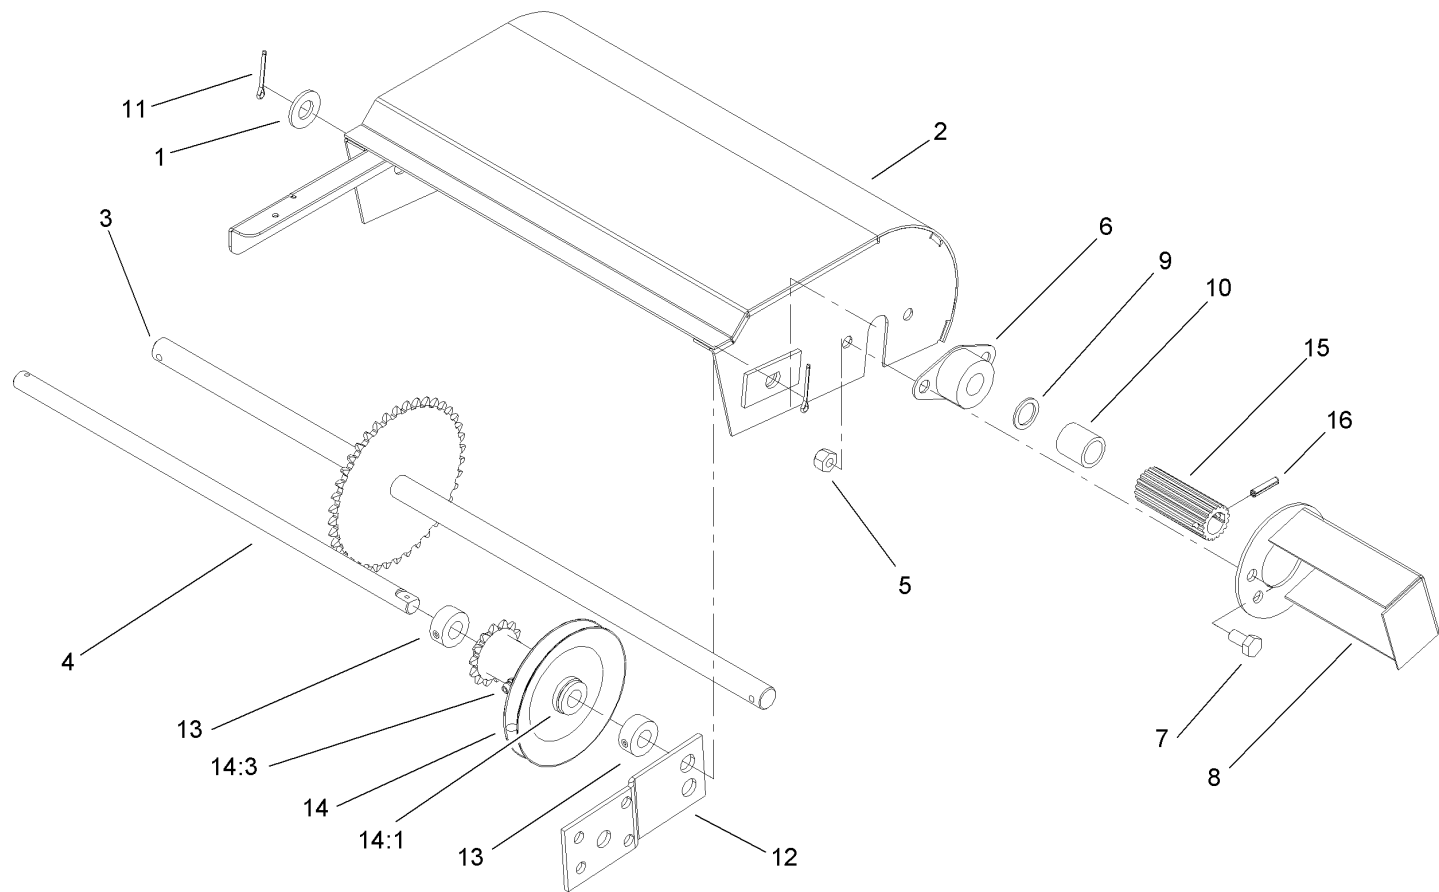

Traction Assembly


Ref	Part No.	Qty.	Description				
1	3256-26	1	Washer-Flat				
2	93-8461-03	1	Guard				
3	20-7270	1	Shaft-Wheel, Friction				
4	20-5870	1	Shaft-Idler				
5	3296-29	4	Nut-Lock, NI				
6	106-2780	2	Bearing-Flange				
7	322-2	4	Screw-HH				
8	37-9210-03	2	Guard				
9	7-3590	2	Washer				
10	20-5460	2	Spacer				
11	3272-7	2	Pin-Cotter				
12	43-6830-03	2	Bracket-Mounting				
13	20-5950	2	Collar				
14	20-6000	1	Idler ASM				
14:1	256-105	2	Bushing-Flange				
14:3	302-5	1	Fitting-Grease				
15	20-5960	2	Wheel-Friction				
16	32121-4	2	Pin-Roll, Slotted				

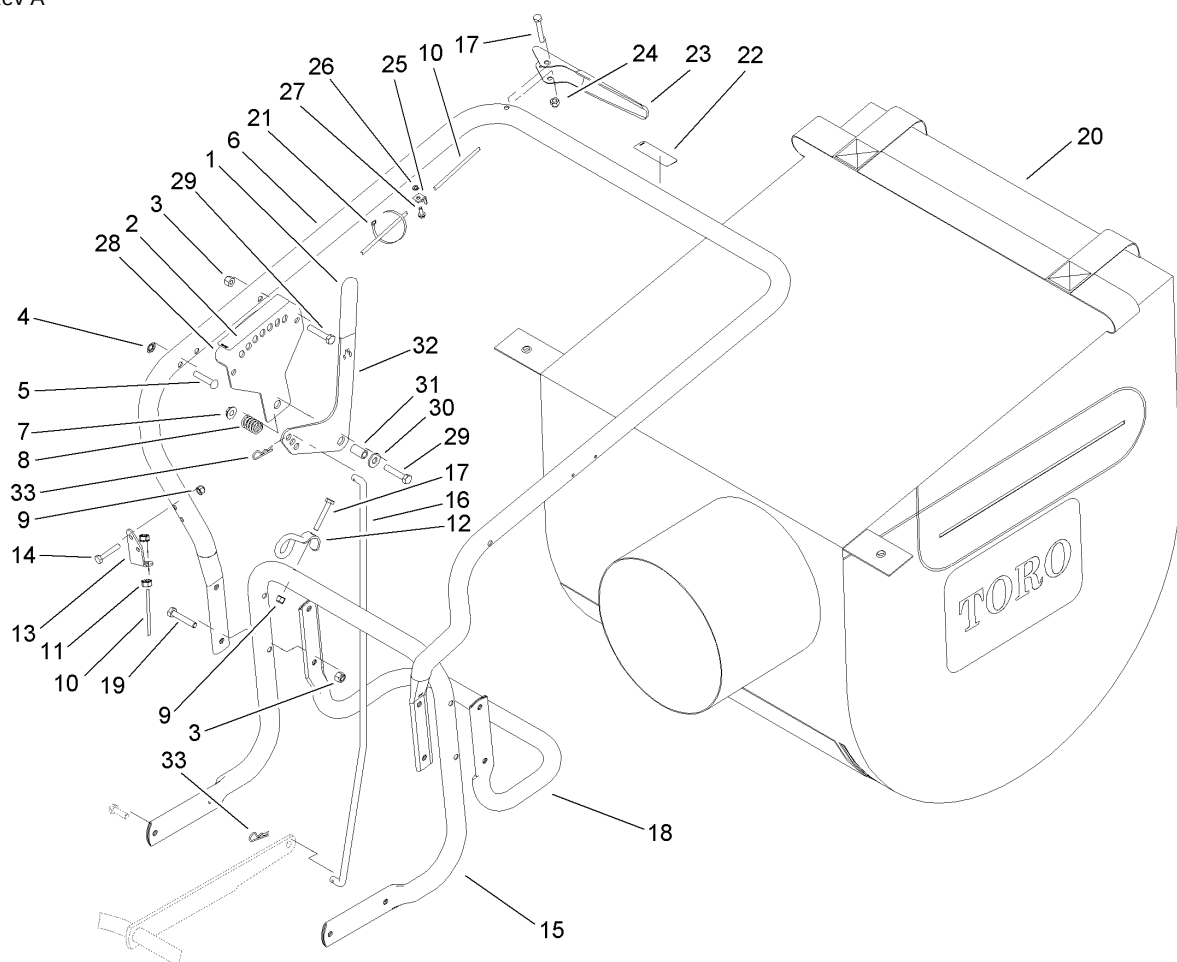


Handle and Vacuum Bag Assembly

Ref	Part No.	Qty.	Description
1	3-7877	1	Grip-Handle
2	93-4137	1	Decal-Adjustment, Height
3	3296-29	6	Nut-Lock, NI
4	3290-418	2	Nut-Push In
5	3263-9	2	Rivet
6	23-3570	1	Handle-Upper, Vacuum
7	32128-13	1	Nut-HF
8	20-6110	1	Spring-Compression
9	3296-42	3	Nut-Lock, NI
10	105-1234	1	Cable-Traction
11	32149-5	2	Nut-Keps
12	46-8082	1	Guide-Rope
13	33-2830	1	Mount-Bowden, Lower
14	321-9	2	Screw-HH
15	105-1236	1	Handle-Lower
16	105-1235	1	Rod-Adjust, Height
17	321-10	2	Screw-HH
18	66-1640-03	1	Support-Bag
19	322-9	4	Screw-HH
20	105-1245	1	Bag-Vacuum
21	3290-378	1	Tie-Cable
22	93-4141	1	Decal-Control, Traction
23	93-8464	1	Lever
24	32111-7	1	Nut-Cap

Ref	Part No.	Qty.	Description
25	20-8780	1	Retaining-Clip
26	3255-17	1	Washer-Lock, EXT
27	32144-112	1	Screw-HWH
28	20-5820-03	1	Bracket-Adjustment
29	322-8	3	Screw-HH
30	3256-3	1	Washer-Flat
31	20-5650	1	Spacer
32	23-3410-03	1	Handle-Adjust, Height
33	3290-250	2	Pin-Hair

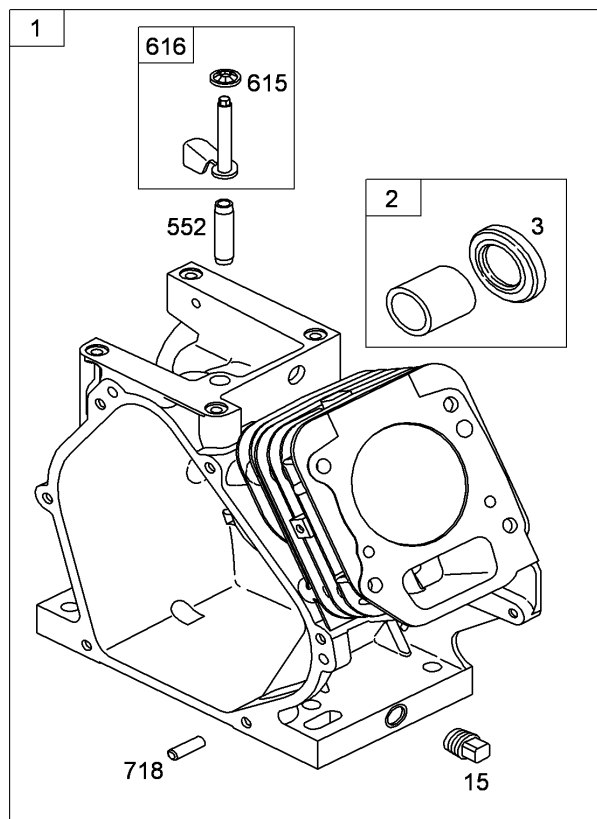

1058 Operator Manual

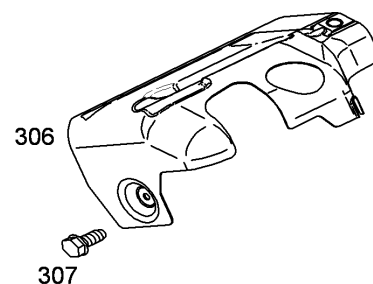


15A

Assemblies include all parts shown in frames

Cylinder Assembly






Briggs and Stratton 126302-0321-B8

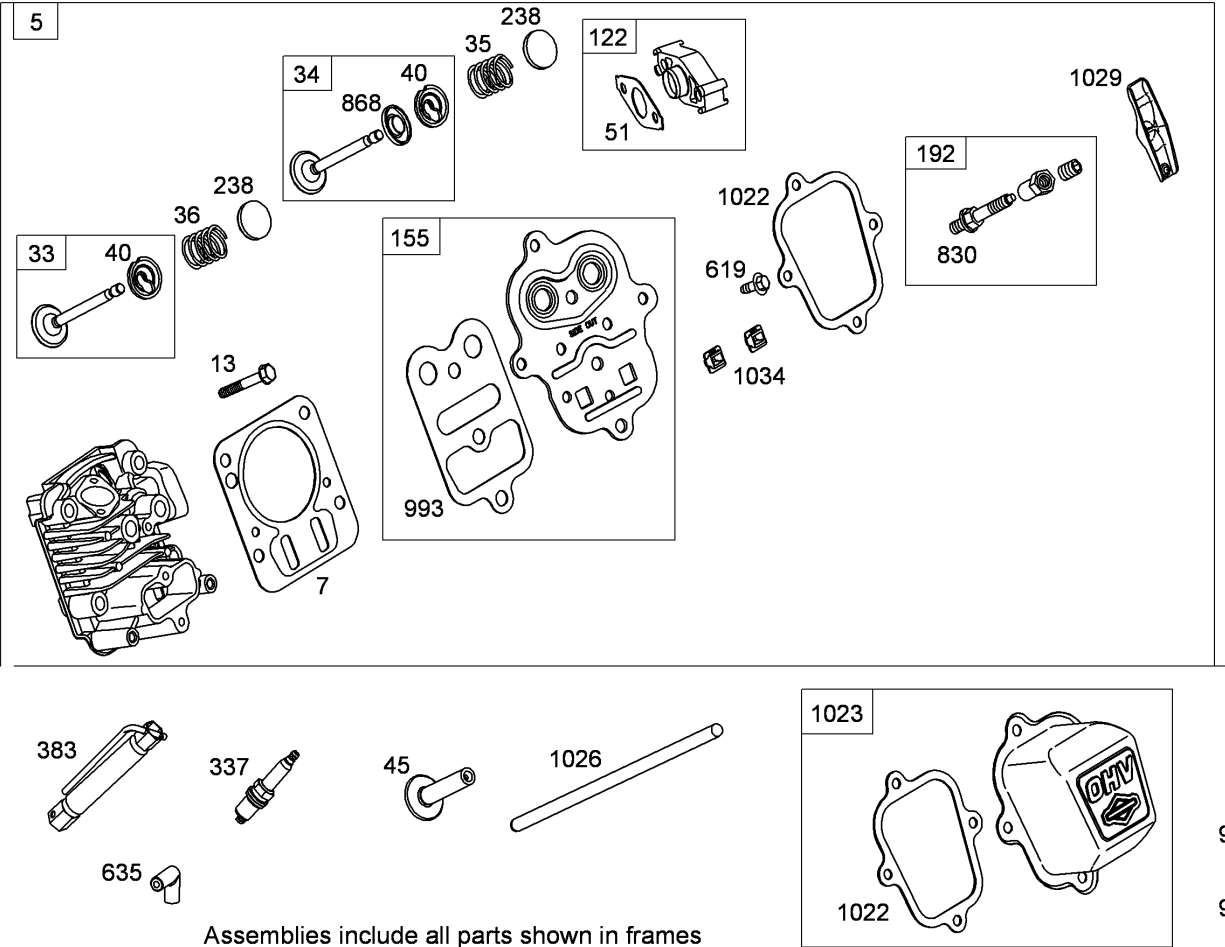


Cylinder Head Assembly
Briggs and Stratton 126302-0321-B8

Ref	Part No.	Qty.	Description
25	699486	1	Head-Cylinder
2476	698210	1	Gasket-Head, Cylinder
13	699482	1	Screw (Cylinder Head)
33	499642	1	Valve-Exhaust
34	499641	1	Valve-Intake
35	691304	1	Spring-Valve (Intake)
36	691304	1	Spring-Valve (Exhaust)
40	692194	1	Retainer-Valve
45	690977	1	Tappet-Valve
25145	692555	1	Gasket-Intake
122	795643	1	Spacer-Carburetor
155	698214	1	Plate-Head, Cylinder
192	694543	1	Adjuster-Arm, Rocker
238	691300	1	Cap-Valve
337	691043	1	Spark Plug
383	19374s	1	Wrench-Spark Plug
619	699230	1	Screw (Cylinder Head Plate)
635	692076	1	Boot-Spark Plug
830	694544	1	Stud-Arm, Rocker
868	795440	1	Seal-Valve
914	699480	1	Screw (Rocker Cover) (Bottom)
914A	692557	1	Screw (Rocker Cover) (Top)

Ref	Part No.	Qty.	Description
2914B	697551	1	Screw (Rocker Cover) (Center)
249936	694088	1	Gasket-Head Plate, Cylinder
2410226	691890	1	Gasket-Cover, Rocker
1023	499924	1	Cover-Arm, Rocker
1026	790287	1	Rod-Push
1029	691230	1	Arm-Rocker
1034	691343	1	Guide-Rod, Push

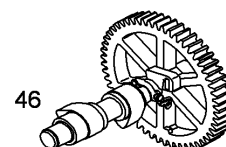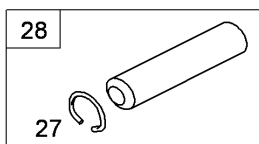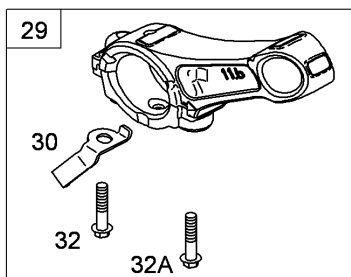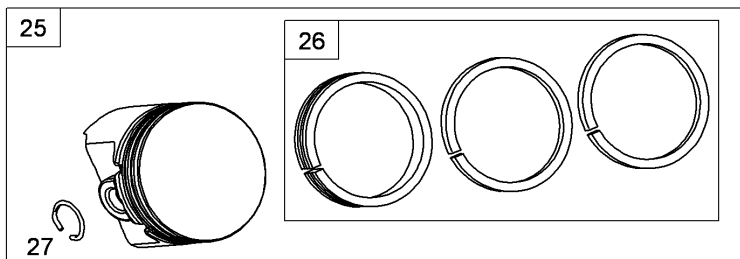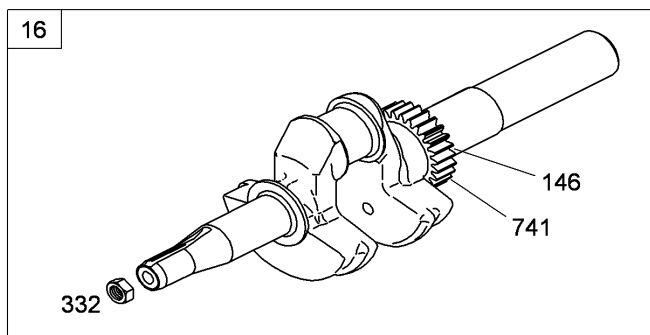

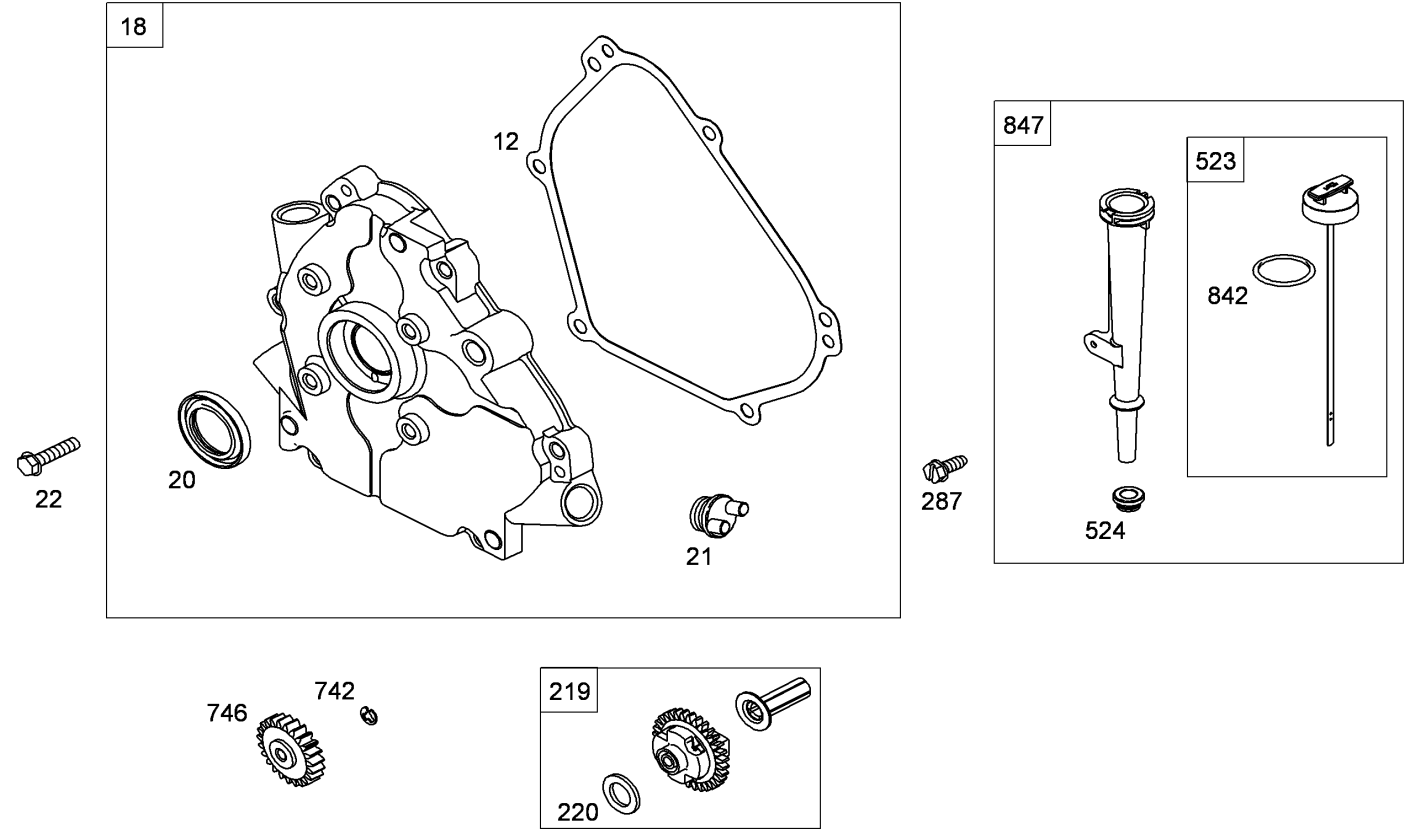


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 126302-0321-B8


Ref	Part No.	Qty.	Description				
2412	699485	1	Gasket-Cover, Crankcase				
218	699696	1	Cover-Crankcase				
2420	692550	1	Seal-Oil (PTO Side)				
221	281658S	1	Cap-Fill, Oil				
222	699478	1	Screw (Crankcase Cover)				
2219	693578	1	Gear-Governor				
2220	691724	1	Washer (Governor Gear)				
2287	699629	1	Screw (Dipstick Tube)				
2523	693618	1	Dipstick				
2524	28137s	1	Seal-Tube, Dipstick				
2742	692564	1	Retainer-E Ring				
2746	790278	1	Gear-Idler				
2842	691031	1	Seal-O Ring (Dipstick Tube)				
2847	693617	1	Dipstick And Tube ASM				

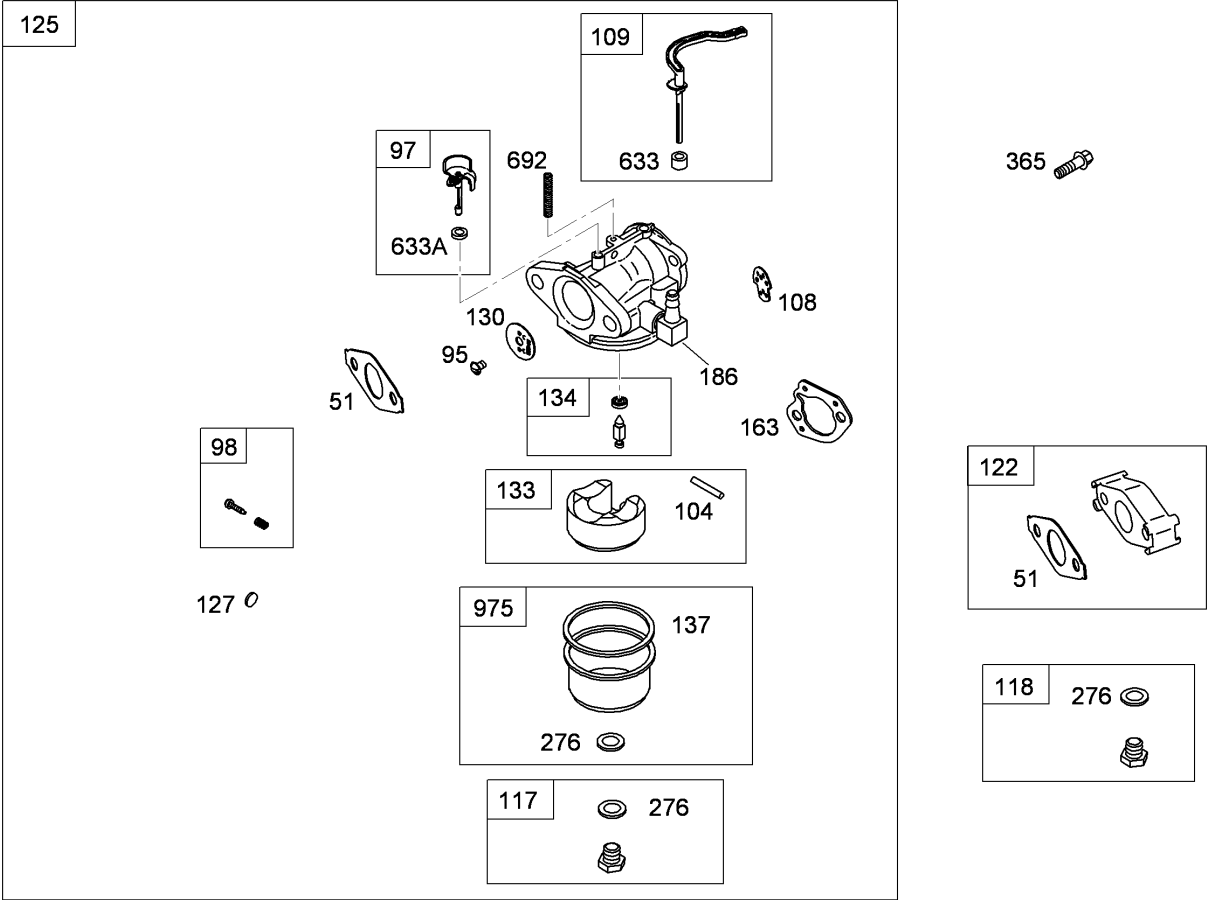

Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 126302-0321-B8


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2 5 51	692555	1	Gasket-Intake	2 5 633	693867	1	Seal-Shaft, Choke Throttle
1 5				5			
2 95	691636	1	Screw (Throttle Valve)	2 5 633A	691321	1	Seal-Shaft, Choke Throttle
2 97	690024	1	Shaft-Throttle	5			
2 98	398185	1	Idle Speed Kit	2 692	690572	1	Spring-Detent
2 5 104	691242	1	Pin-Hinge, Float	2 975	493640	1	Bowl-Float
2 108	692567	1	Valve-Choke				
2 109	693628	1	Shaft-Choke				
2 117	697355	1	Jet-Main (Standard)				
2 118	694250	1	Jet-Main (High Altitude)				
2 122	795643	1	Spacer-Carburetor				
2 125	697028	1	Carburetor				
2 5 127	691739	1	Plug-Welch				
2 130	691181	1	Valve-Throttle				
2 133	398187	1	Float-Carburetor				
2 5 134	398188	1	Needle And Seat Kit				
2 5 137	693981	1	Gasket-Bowl, Float				
5							
2 5 163	792870	1	Gasket-Cleaner, Air				
4 5							
2 186	692317	1	Connector-Hose				
2 5 276	271716	1	Washer-Sealing				
5							
2 365	699484	1	Screw (Carburetor)				

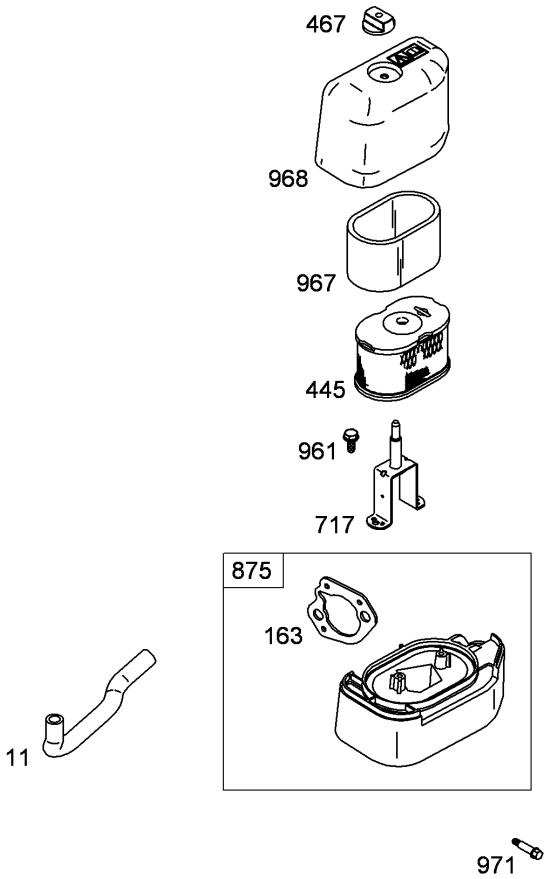

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126302-0321-B8

Ref	Part No.	Qty.	Description				
2 11	693647	1	Tube-Breather				
2 3 163	792870	1	Gasket-Cleaner, Air				
1 5							
2 445	697029	1	Filter-Cartridge, Air Cleaner				
2 467	691668	1	Knob-Cleaner, Air				
2 717	693462	1	Bracket-Cleaner, Air				
2 875	697030	1	Base-Cleaner, Air				
2 961	698304	1	Screw (Air Cleaner Bracket)				
2 967	273356S	1	Filter-Cleaner, Pre				
2 968	693460	1	Cover-Cleaner, Air				
2 971	690349	1	Screw (Air Cleaner Base)				

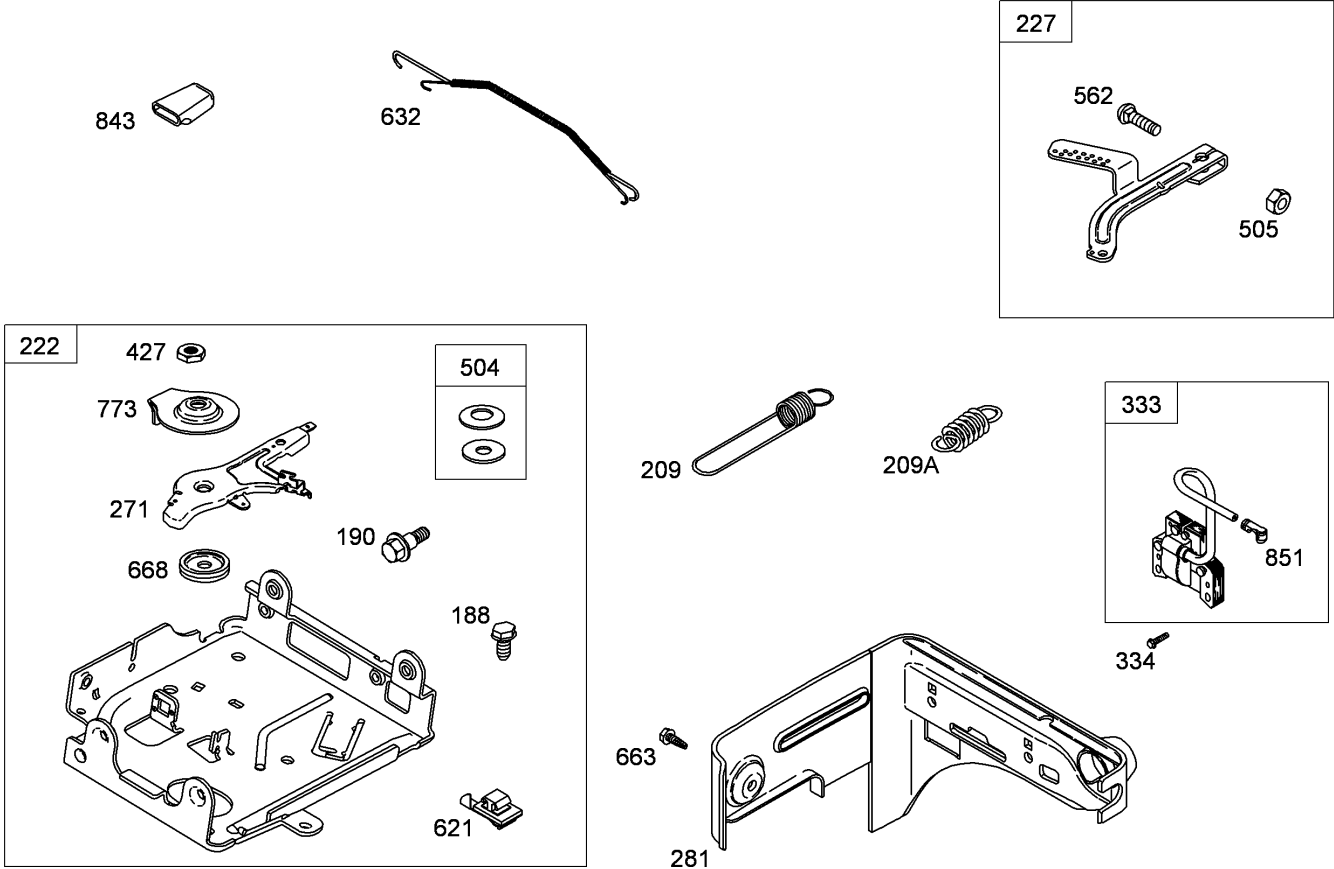


Assemblies include all parts shown in frames

Governor Assembly

Briggs and Stratton 126302-0321-B8


Ref	Part No.	Qty.	Description				
2188	699479	1	Screw (Control Bracket)				
2190	699220	1	Screw (Fuel Tank)				
2209	692571	1	Spring-Governor				
2209A	691278	1	Spring-Governor				
2222	793107	1	Bracket-Control				
2227	794367	1	Lever-Governor Control				
2271	694256	1	Lever-Control				
2281	793122	1	Panel-Control				
2333	695711	1	Armature-Magneto				
2334	699477	1	Screw (Magneto Armature)				
2427	694255	1	Nut (Control Bracket)				
2504	694254	1	Friction Washer Set				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2621	692310	1	Switch-Stop				
2632	693408	1	Link-Spring, Mechanical Governor				
2663	699206	1	Screw (Control Panel)				
2668	694257	1	Spacer				
2773	694258	1	Retainer				
2843	695588	1	Sleeve-Lever				
2851	493880s	1	Terminal-Spark Plug				

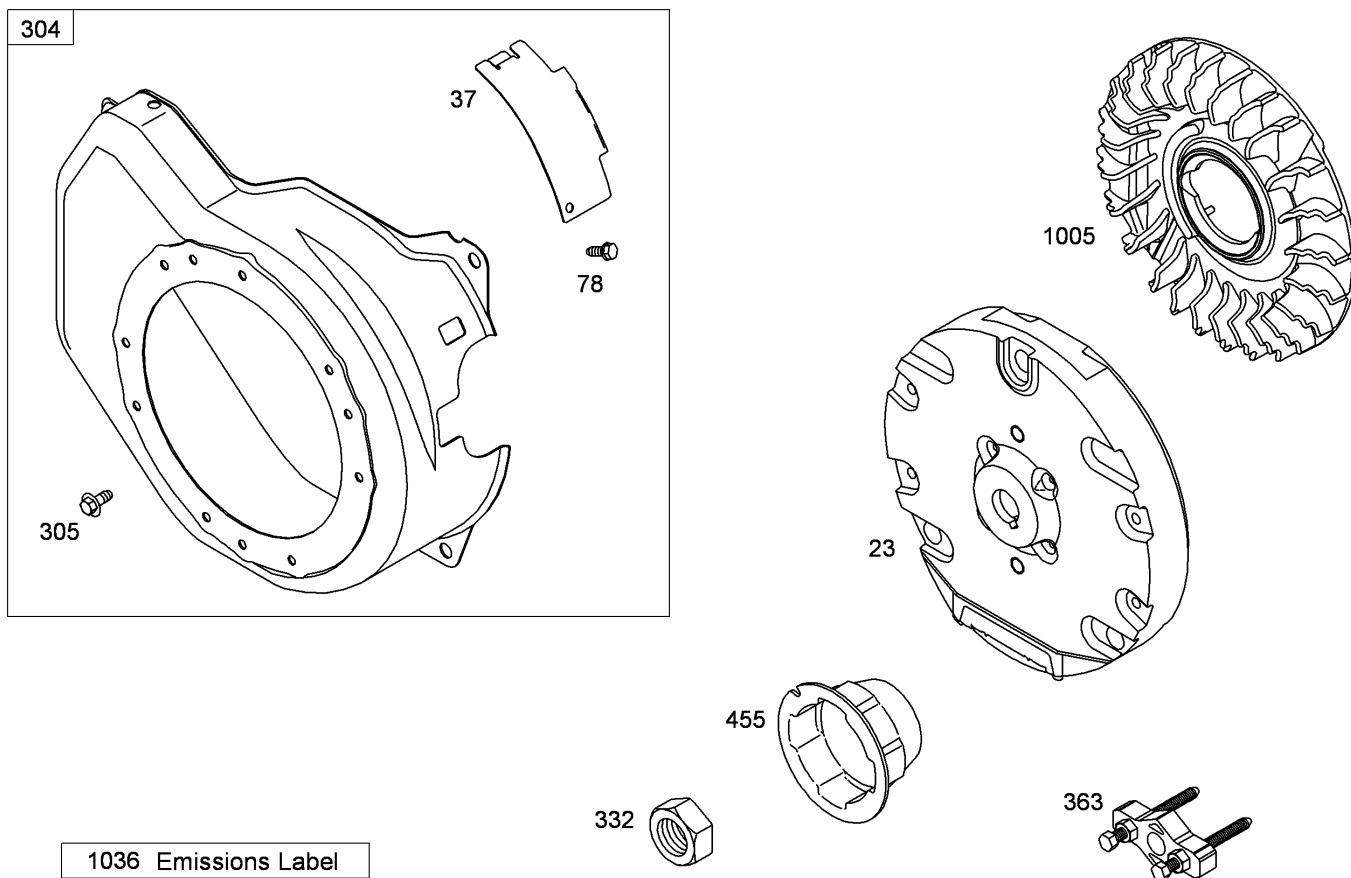

Assemblies include all parts shown in frames

Blower Housing Assembly Briggs and Stratton 126302-0321-B8

Ref	Part No.	Qty.	Description				
223	699488	1	Flywheel				
237	699661	1	Guard-Flywheel				
278	699205	1	Screw (Flywheel Guard)				
2304	699598	1	Housing-Blower				
2305	699480	1	Screw (Blower Housing)				
2332	792723	1	Nut (Flywheel)				
2363	19203	1	Puller-Flywheel				
2455	692591	1	Cup-Flywheel				
21005	794273	1	Fan-Flywheel				
21036		1	Label-Emissions				


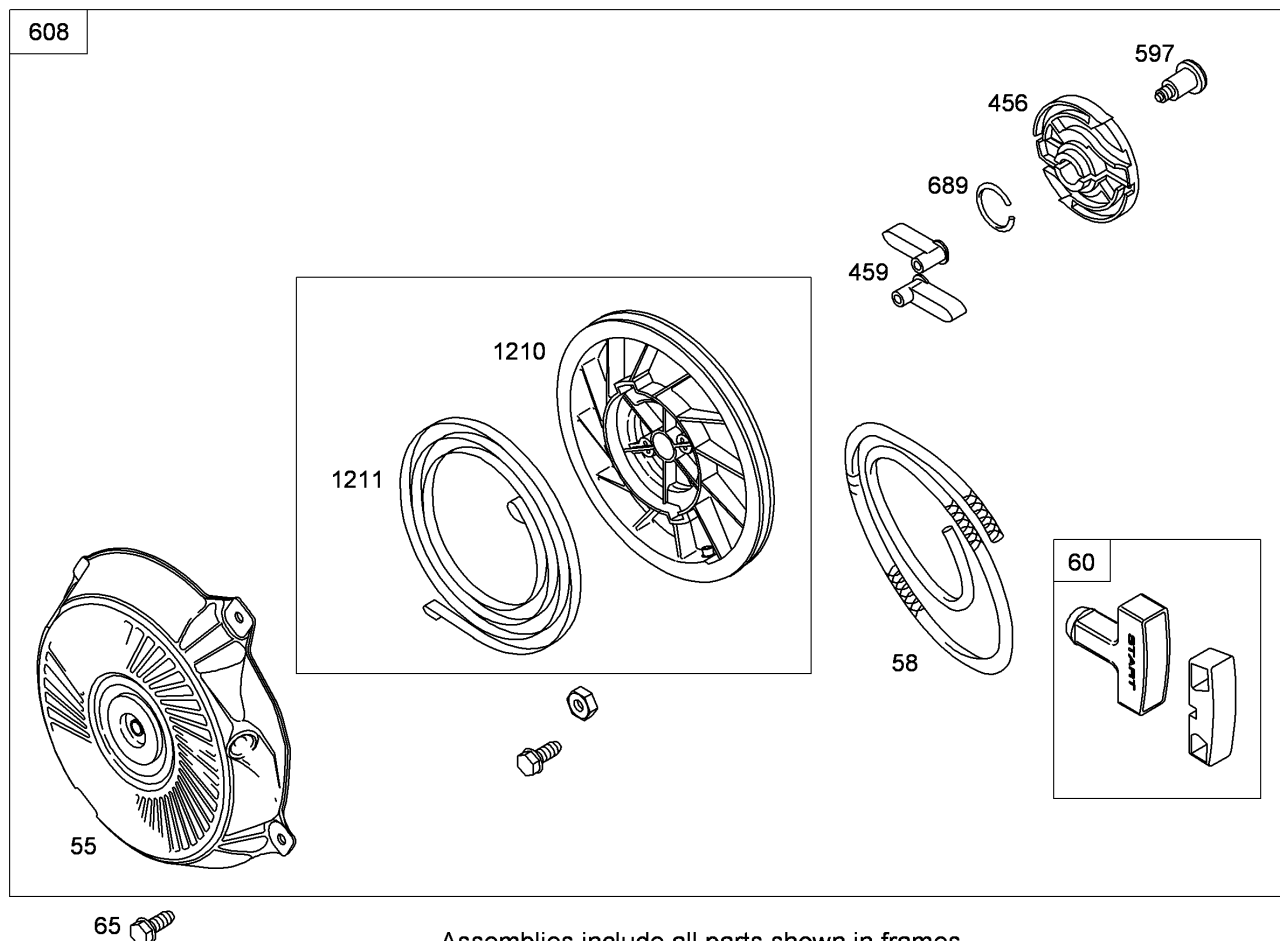


Assemblies include all parts shown in frames

Rewind Starter Assembly

Briggs and Stratton 126302-0321-B8

Ref	Part No.	Qty.	Description				
255	791848	1	Housing-Starter, Rewind				
258	66574	1	Rope-Starter (Cut To Required Length)				
260	490652	1	Grip-Starter Rope				
265	699228	1	Screw (Rewind Starter)				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	791670	1	Starter-Rewind				
2689	691855	1	Spring-Friction				
21210	791849	1	Pulley And Spring ASM (Pulley)				
21211	791849	1	Pulley And Spring ASM (Spring)				

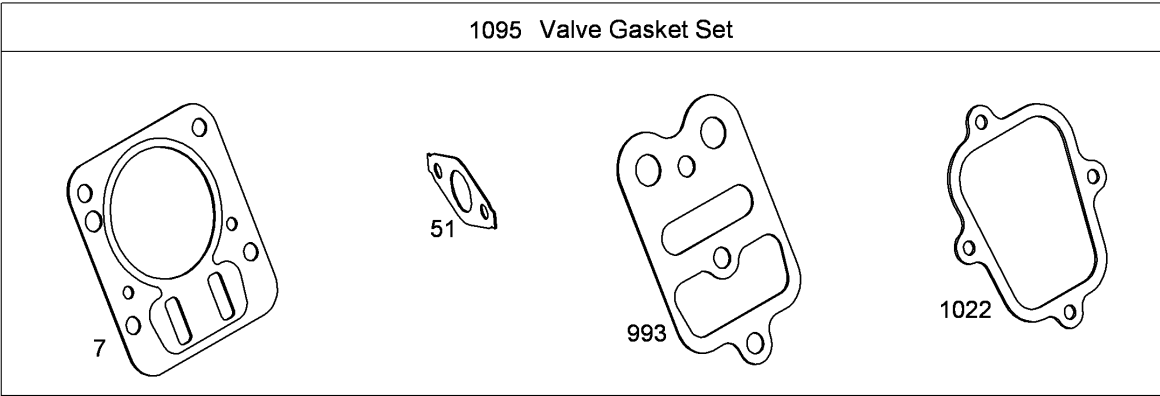
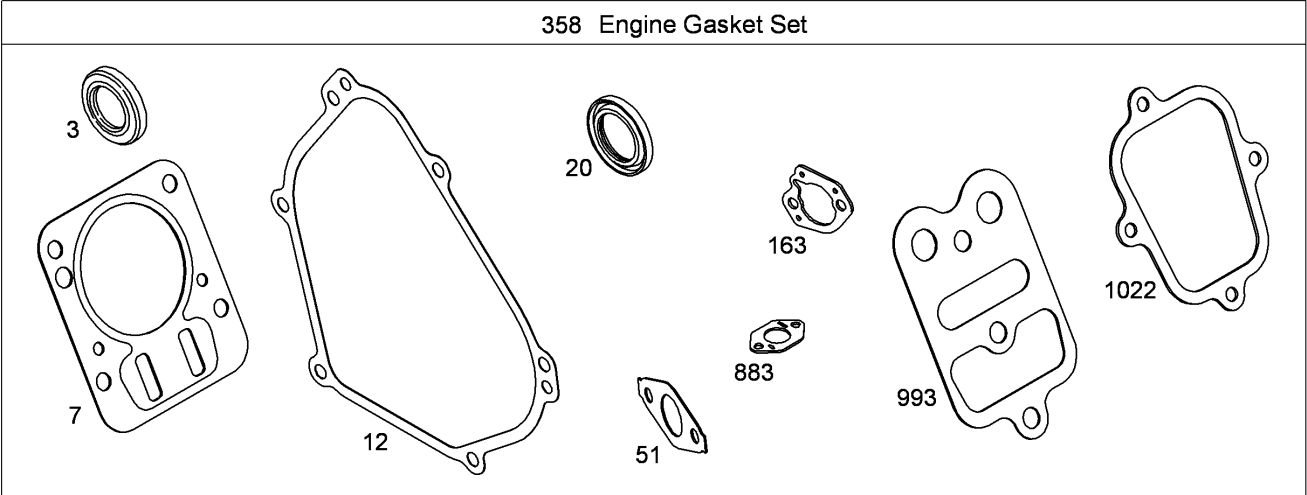


Assemblies include all parts shown in frames

Engine Gasket Set

Briggs and Stratton 126302-0321-B8

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magneto Side)				
247	698210	1	Gasket-Head, Cylinder				
6							
2412	699485	1	Gasket-Cover, Crankcase				
2420	692550	1	Seal-Oil (PTO Side)				
2351	692555	1	Gasket-Intake				
45							
23163	792870	1	Gasket-Cleaner, Air				
45							
2358	791797	1	Engine Gasket Set				
24883	691893	1	Gasket-Exhaust				
24993	694088	1	Gasket-Head Plate, Cylinder				
6							
241022	691890	1	Gasket-Cover, Rocker				
6							
21095	791798	1	Valve Gasket Set				

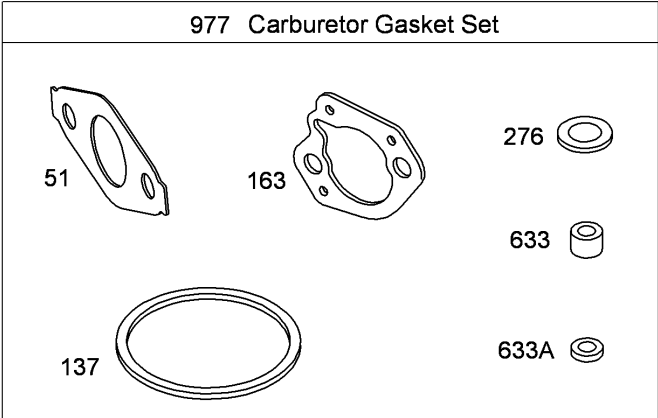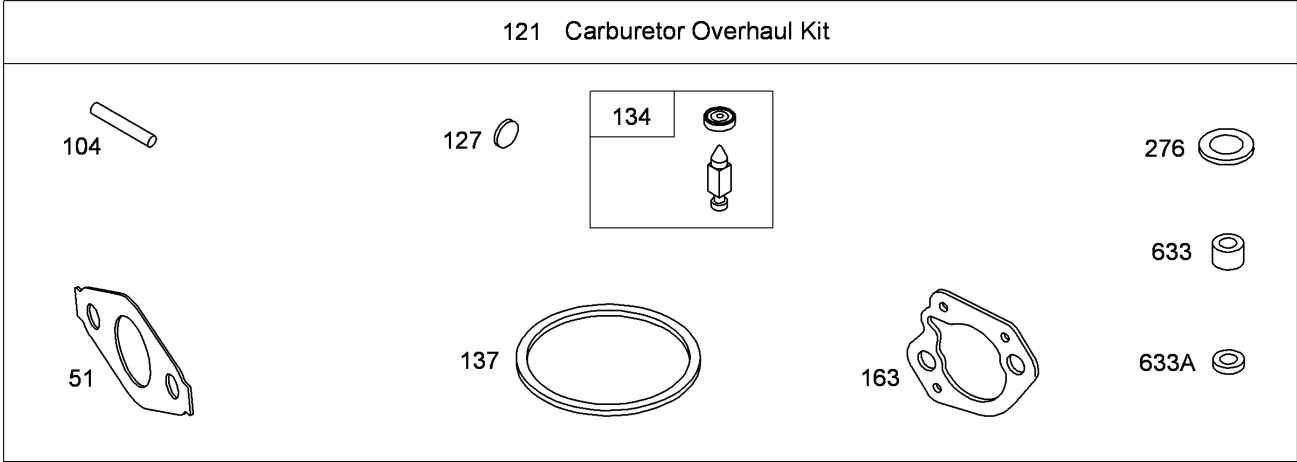

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 126302-0321-B8

Ref	Part No.	Qty.	Description				
2 51 4 5	692555	1	Gasket-Intake				
2 104 2 121	691242 792006	1 1	Pin-Hinge, Float Carburetor Overhaul Kit				
2 127	691739	1	Plug-Welch				
2 134	398188	1	Needle And Seat Kit				
2 137 5	693981	1	Gasket-Bowl, Float				
2 163 4 5	792870	1	Gasket-Cleaner, Air				
2 276 5	271716	1	Washer-Sealing				
2 633 5	693867	1	Seal-Shaft, Choke Throttle				
2 633A 5	691321	1	Seal-Shaft, Choke Throttle				
2 977	792385	1	Carburetor Gasket Set				

NOTES

NOTES

NOTES

