



Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Model No. 39682 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Lubrication Equipment Assembly Kawasaki FH430V-CS25	 20
Transmission Drive Assembly	 4	Cooling Equipment Assembly Kawasaki FH430V-CS25	 21
Drive Wheel and Brake Assembly	 6	Electric Equipment Assembly Kawasaki FH430V-CS25	 22
Handle and Control Assembly	 8	Control Equipment Assembly Kawasaki FH430V-CS25	 23
Handle Assembly No. 110-6906	 10	Carburetor Assembly Kawasaki FH430V-CS25	 24
Deck and Shield Assembly	 11	Air Filter and Muffler Assembly Kawasaki FH430V-CS25	 25
Deck Assembly No. 110-6901	 12	Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	 26
Deflector Assembly No. 107-4140	 13	Starter Assembly Kawasaki FH430V-CS25	 27
Idler Arm and Caster Wheel Assembly	 14	Label Assembly Kawasaki FH430V-CS25	 28
Spindle and Blade Assembly	 16	Attachments and Accessories List	 29
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	 17		
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	 18		
Valve and Camshaft Assembly Kawasaki FH430V-CS25	 19		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Optional Equipment | ❹ Obtain parts from Peerless Transmissions (model 700-070A) |
| ❺ Obtain from your local Kawasaki dealer | |

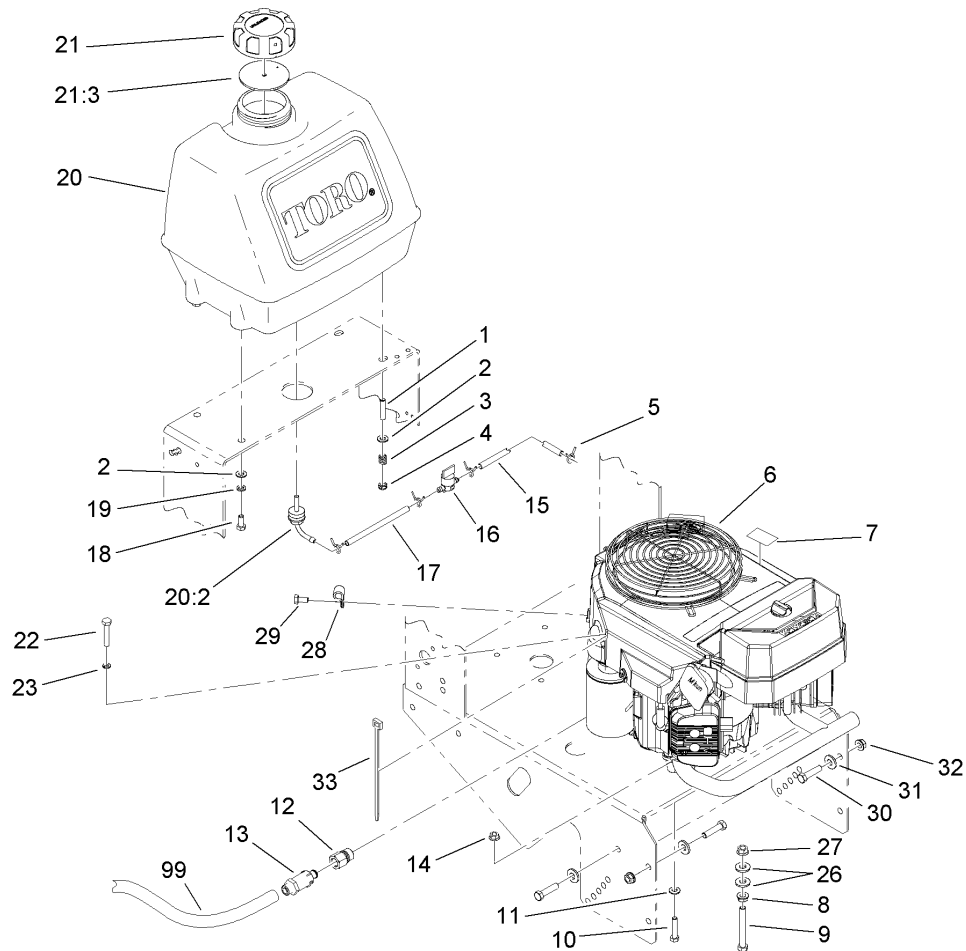

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
256		1	Engine-Kawasaki, FH430V-Cs25
7	106-0699	1	Decal-Warning
8	3290-357	1	Nut-HHF, Whiz
9	323-14	1	Screw-HH
10	322-7	4	Screw-HH
11	1-303334	4	Washer-Spring
12	103-1966	1	Adapter
13	92-6877	1	Valve-Drain, Oil
14	32128-20	4	Nut-HF
15	109-0293	1	Hose-Fuel
16	1-603770	1	Valve-Fuel
17	109-0306	1	Hose-Fuel
18	322-3	2	Screw-HH
19	1-805005	2	Washer-Lock
20	106-0730	1	Fuel Tank ASM
20:2	103-2605	1	Fitting-Fuel, Bulkhead
21	88-3980	1	Gas Cap ASM
21:3	88-4010	1	Gasket-Cap, Gas
22	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
23	1-805004	1	Washer-Lock
26	98-5975	2	Washer-Belleville
27	32128-21	1	Nut-HF
28	1-413510	1	Clip-Loom
29	33114-016	1	Screw-HH
30	323-8	8	Screw-HH
31	98-5975	8	Washer-Belleville
32	3290-357	8	Nut-HHF, Whiz
33	1-303335	1	Tie-Plastic
99	103-1964	1	Hose-Drain, Oil

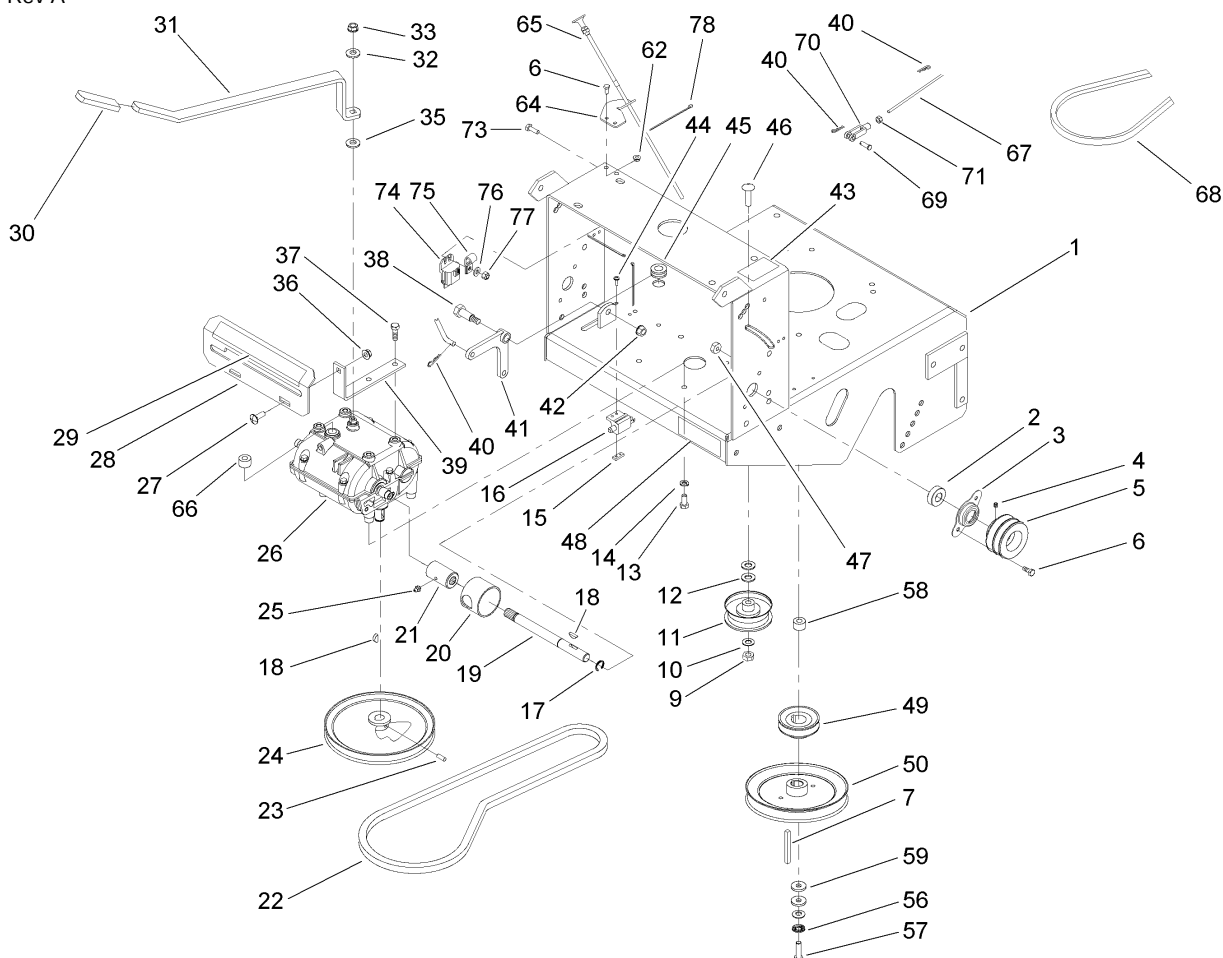

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

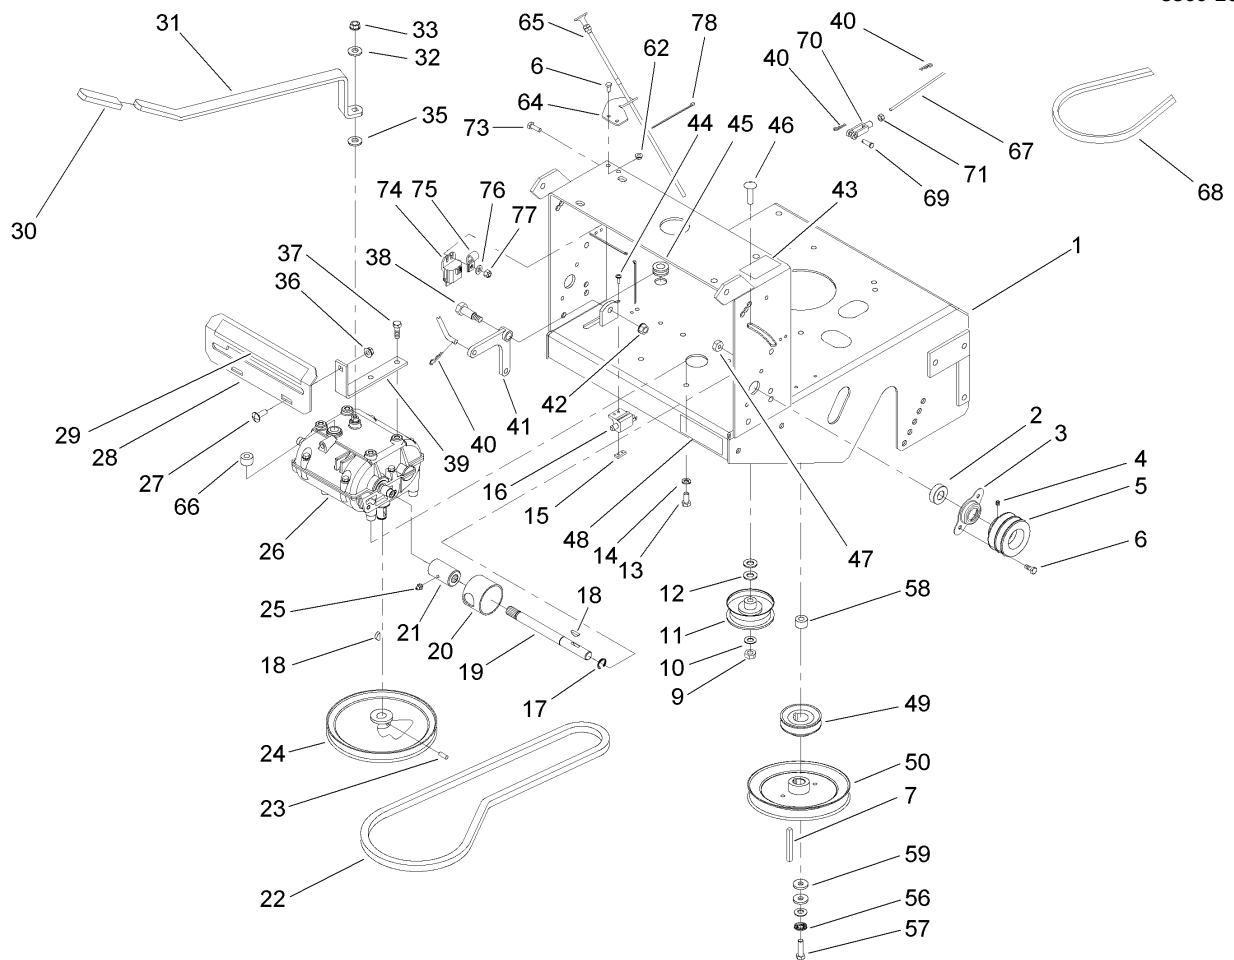

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
73	321-4	1	Screw-HH
74	1-323430	1	Module-Interlock
75	1-323229	1	Clip-Loom
76	3256-22	1	Washer-Flat
77	3296-42	1	Nut-Lock, NI
78	1-303335	3	Tie-Plastic

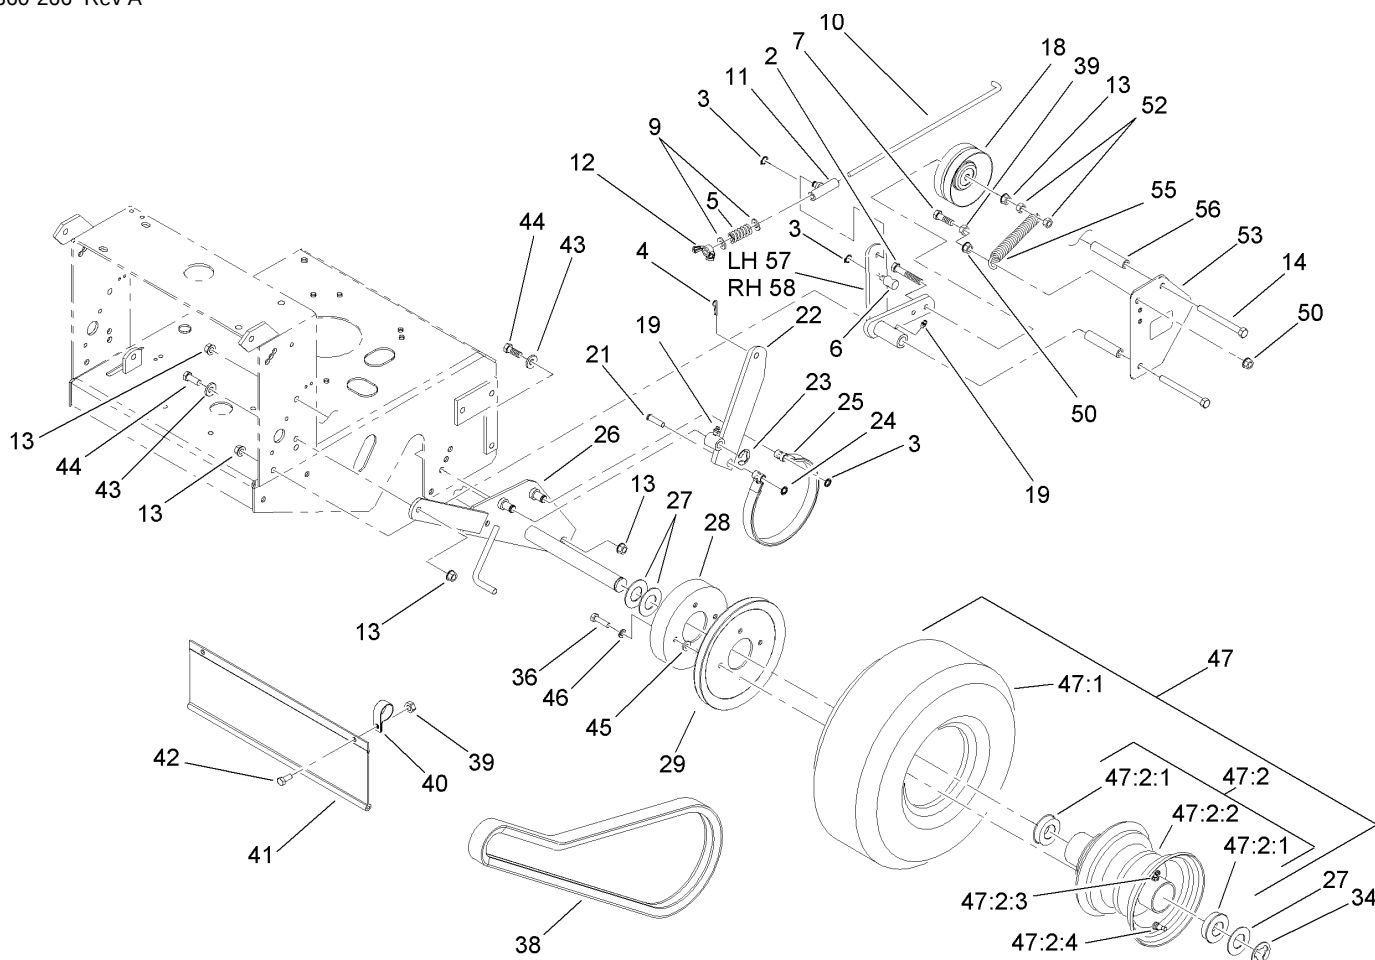

Drive Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive


Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
47	1-323346	2	Wheel And Tire ASM
47:1	1-323361	1	Tire
47:2	1-323360	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
47:2:2		1	Rim ASM
47:2:3		1	Fitting-Grease
47:2:4		1	Valve Stem And Cap
50	32128-20	4	Nut-HF
52	3296-39	4	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

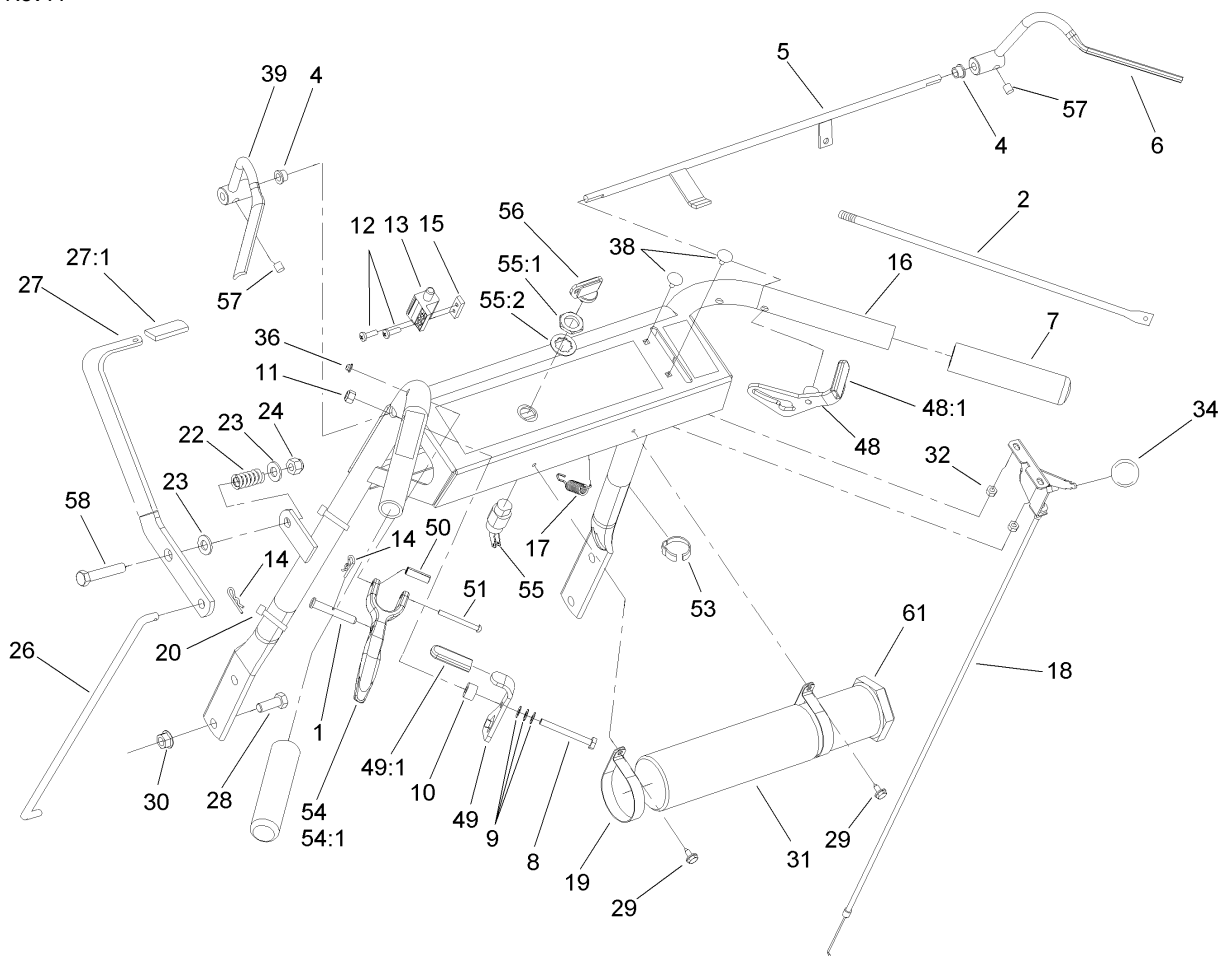

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Rod-Control, Operator Presence
6	106-5486	1	RH Operator Presence Control Lever ASM
7	104-9838	2	Grip-Foam
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	3	Pin-Hair
15	1-633181	1	Plate-Tapped
16	110-6906	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
20	1-303287	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper

Ref	Part No.	Qty.	Description
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	32128-21	4	Nut-HF
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	106-5485	1	LH Operator Presence Control Lever ASM
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Lever, Drive
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	29-5560	1	Switch-On / Off
55:1	218-461	1	Nut-HH

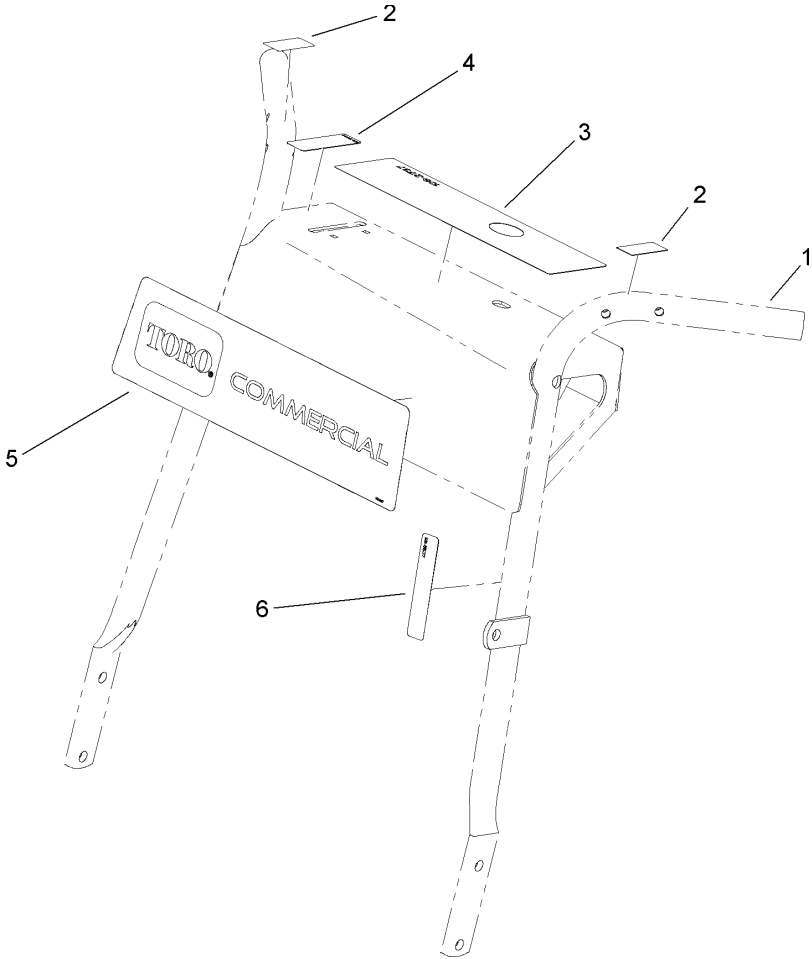


Handle Assembly No. 110-6906

Ref	Part No.	Qty.	Description				
1		1	Handle ASM				
2	105-4111	2	Decal-Lock, Neutral				
3	106-2737	1	Decal-Warning				
4	106-2733	1	Decal-Throttle				
5	110-6917	1	Decal				
6	95-5537	1	Decal-Engage, Deck				

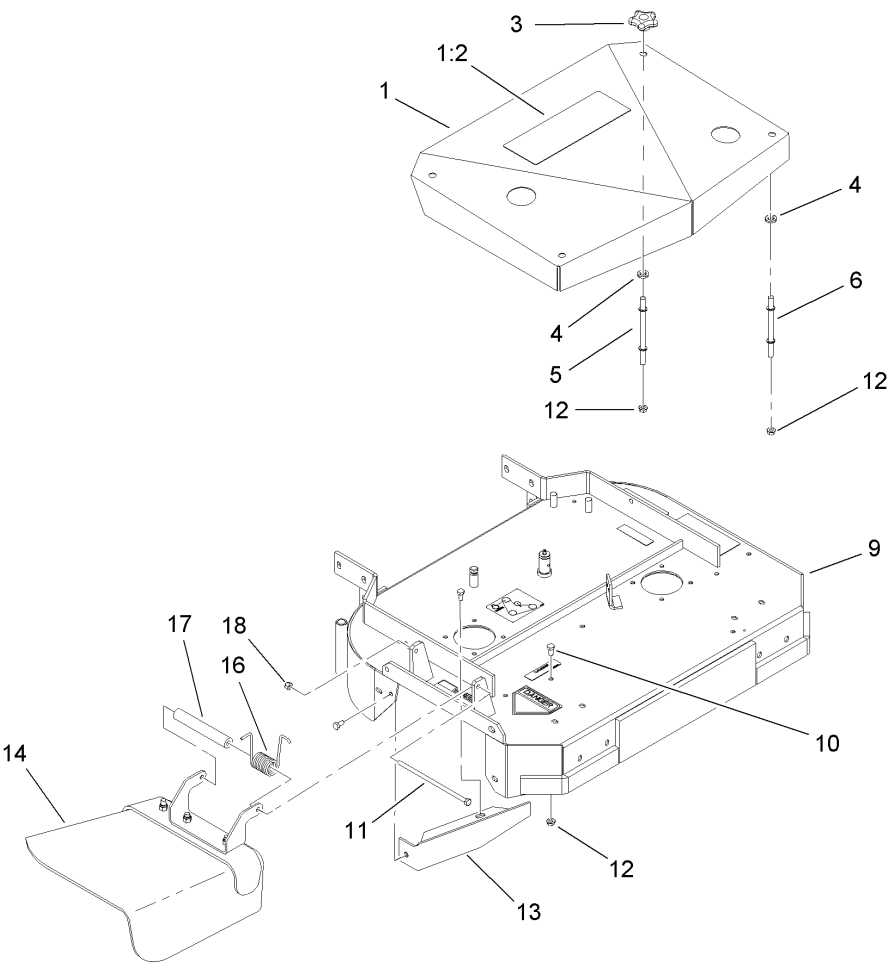


Deck and Shield Assembly

Ref	Part No.	Qty.	Description				
1	1-324407	1	Shield-Belt				
1:2	106-0710	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	110-6901	1	32 Inch Deck ASM				
10	322-2	7	Screw-HH				
11	322-50	1	Screw-HH				
12	32128-20	11	Nut-HF				
13	1-302189-01	1	Baffle-Dogleg				
14	107-4140	1	Deflector ASM				
16	104-8554	1	Spring-Torsion				
17	105-4622	1	Spacer				
18	3296-29	1	Nut-Lock, NI				

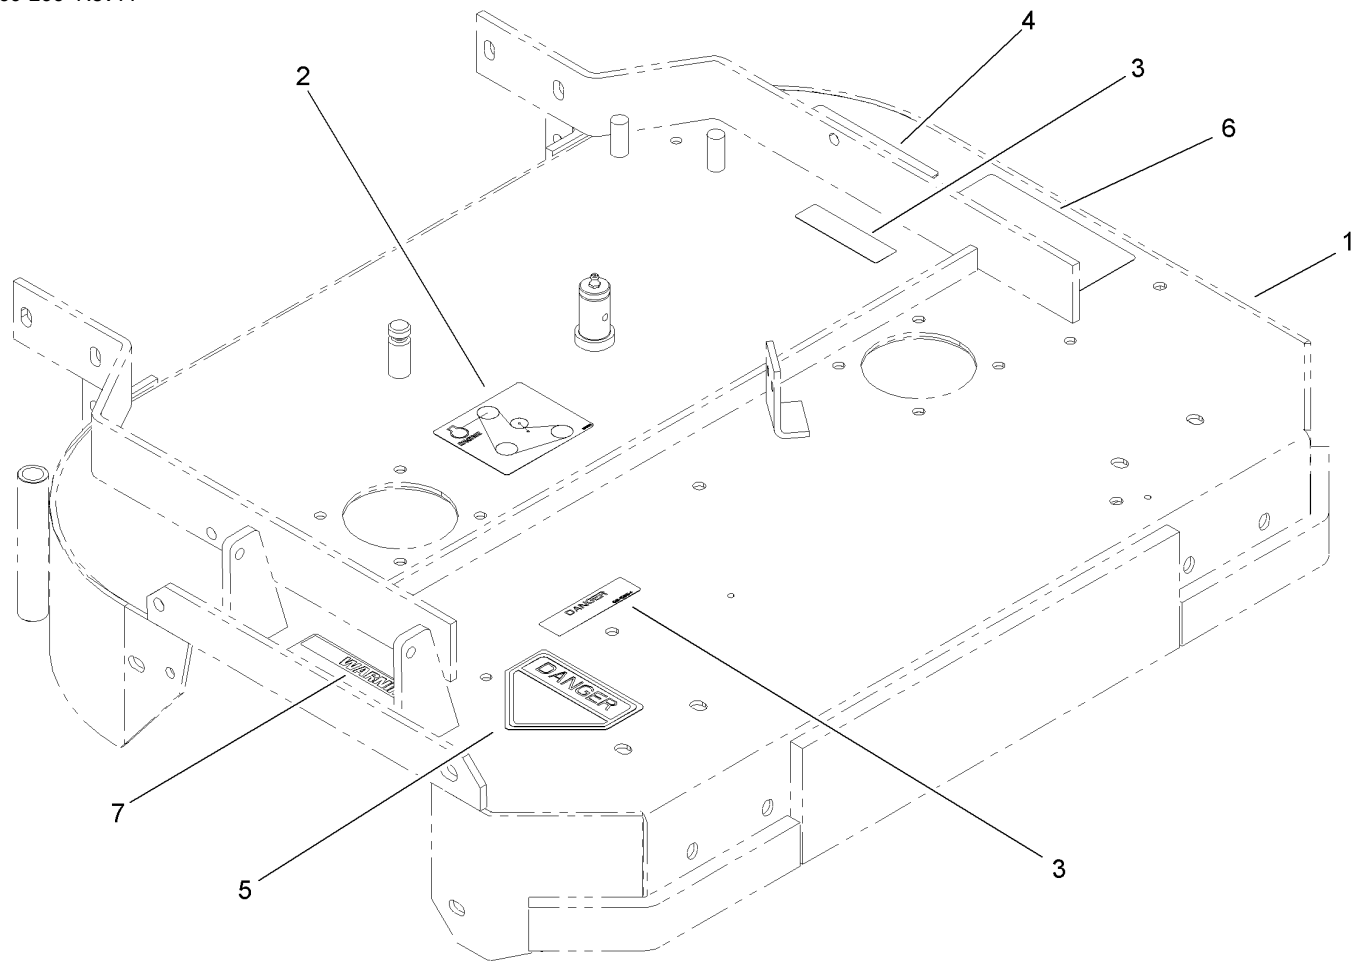


Deck Assembly No. 110-6901

Ref	Part No.	Qty.	Description				
1		1	Deck				
2	98-3296	1	Decal-Routing, Belt				
3	98-5954	2	Decal-Cover, Missing				
4	98-5130	1	Decal-Torque, Bolt				
5	43-8480	1	Decal-Danger				
6	66-1340	1	Decal-Danger				
7	104-8569	1	Decal-Warning				

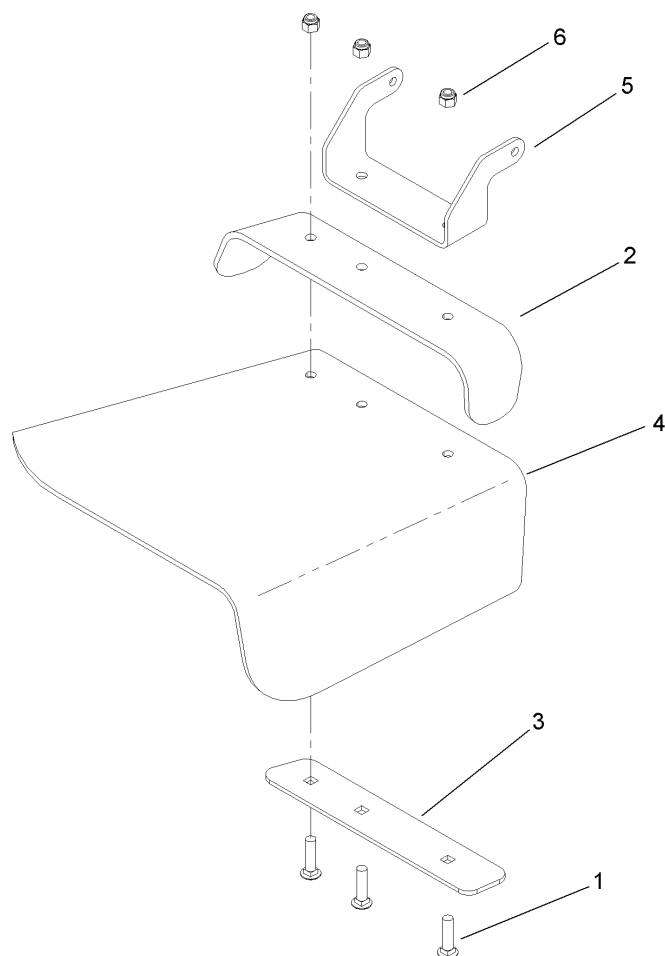

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

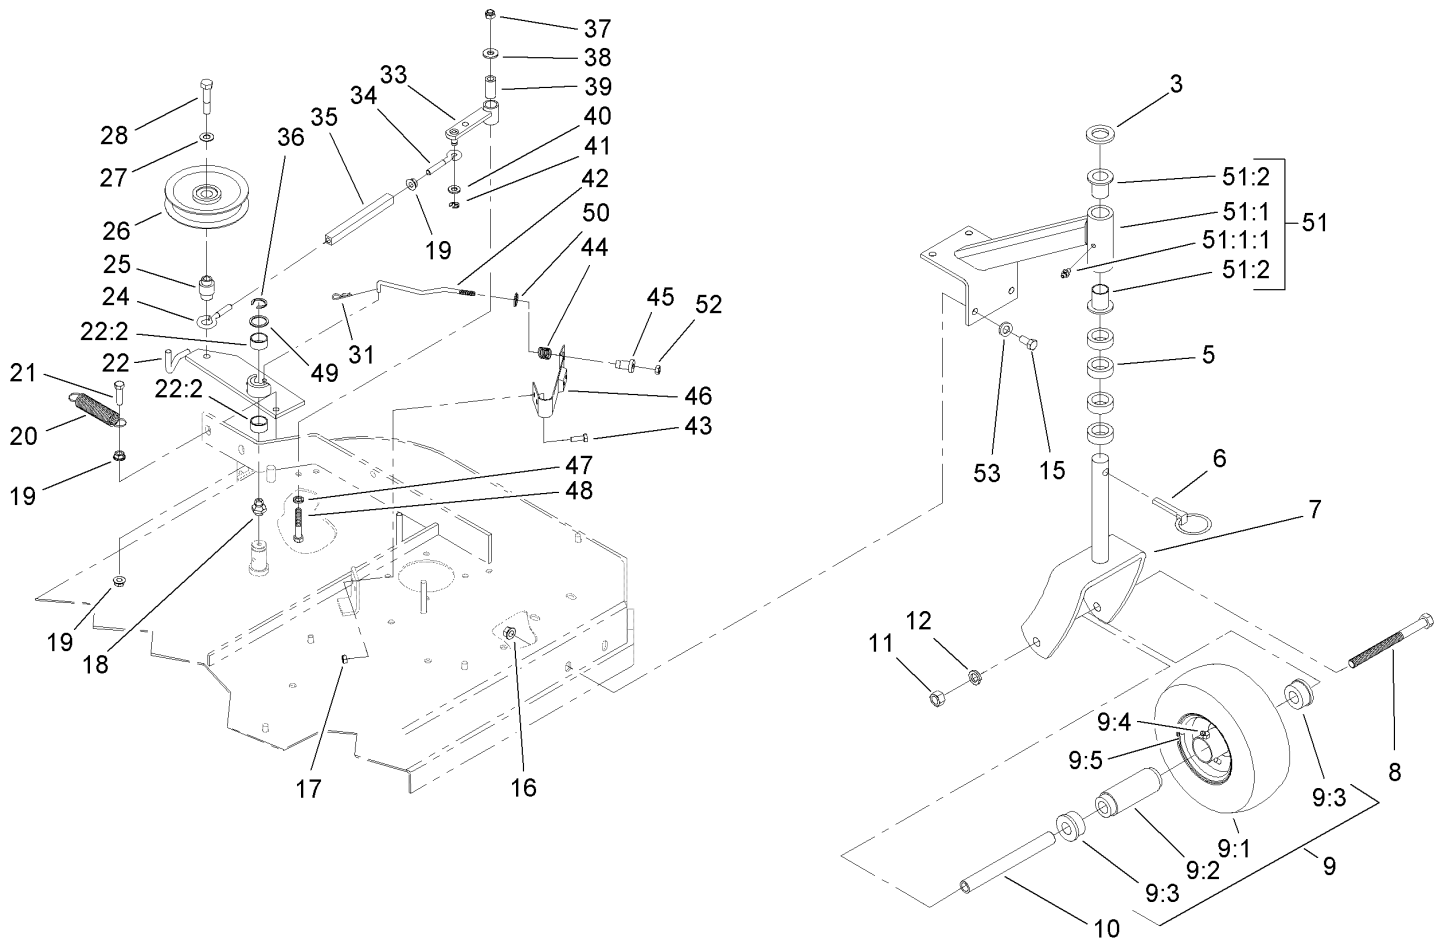

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	110-5023	2	Wheel And Tire ASM
9:1		1	Tire
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Zerk
9:5		1	Wheel
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH

Ref	Part No.	Qty.	Description
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Retaining, EXT
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM

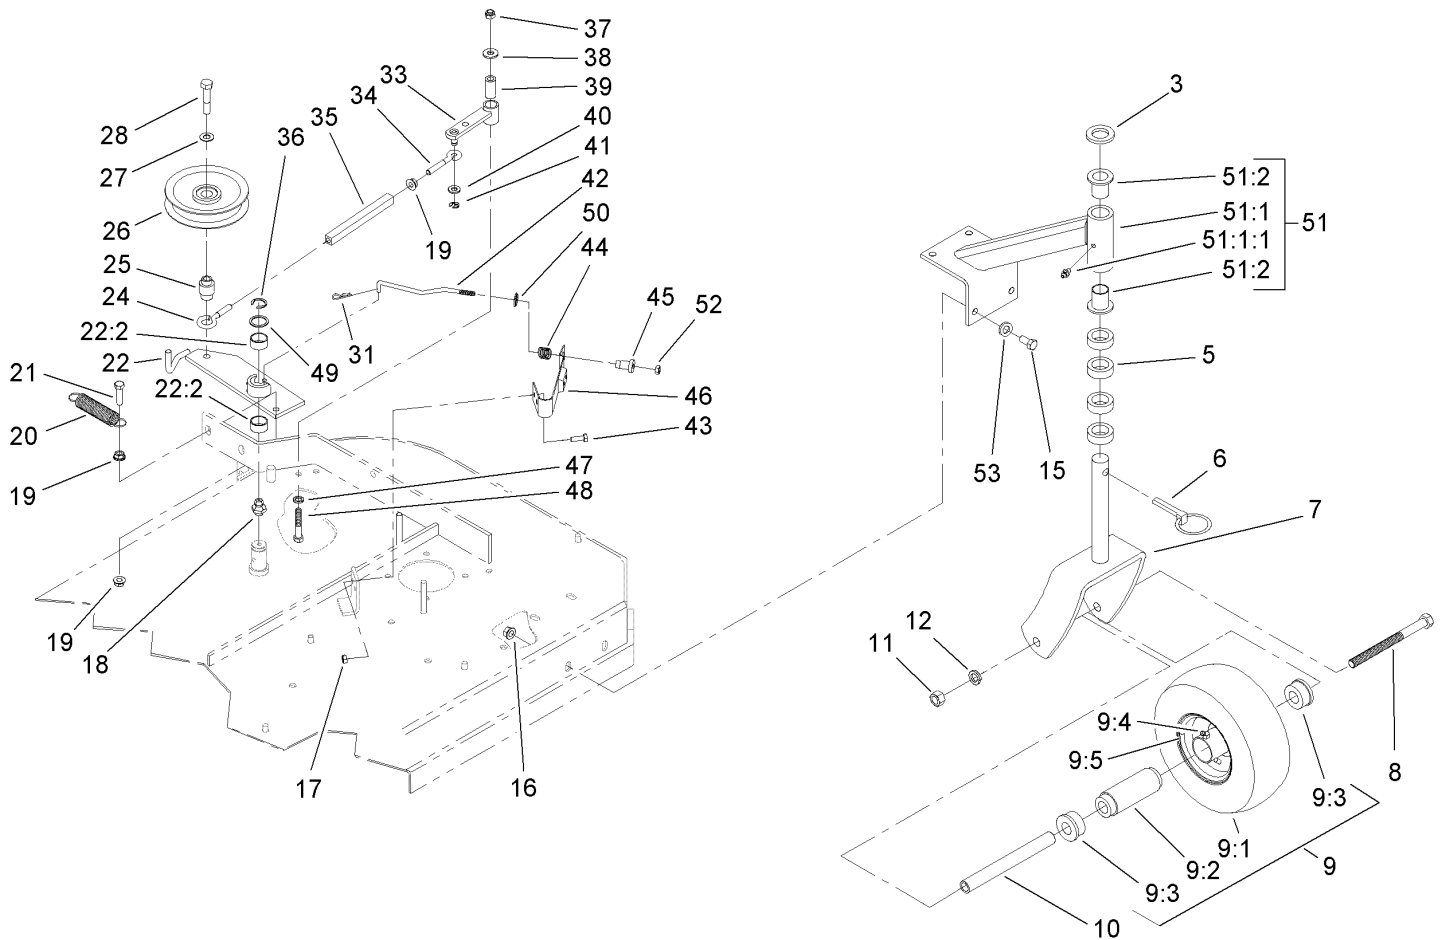


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
251:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

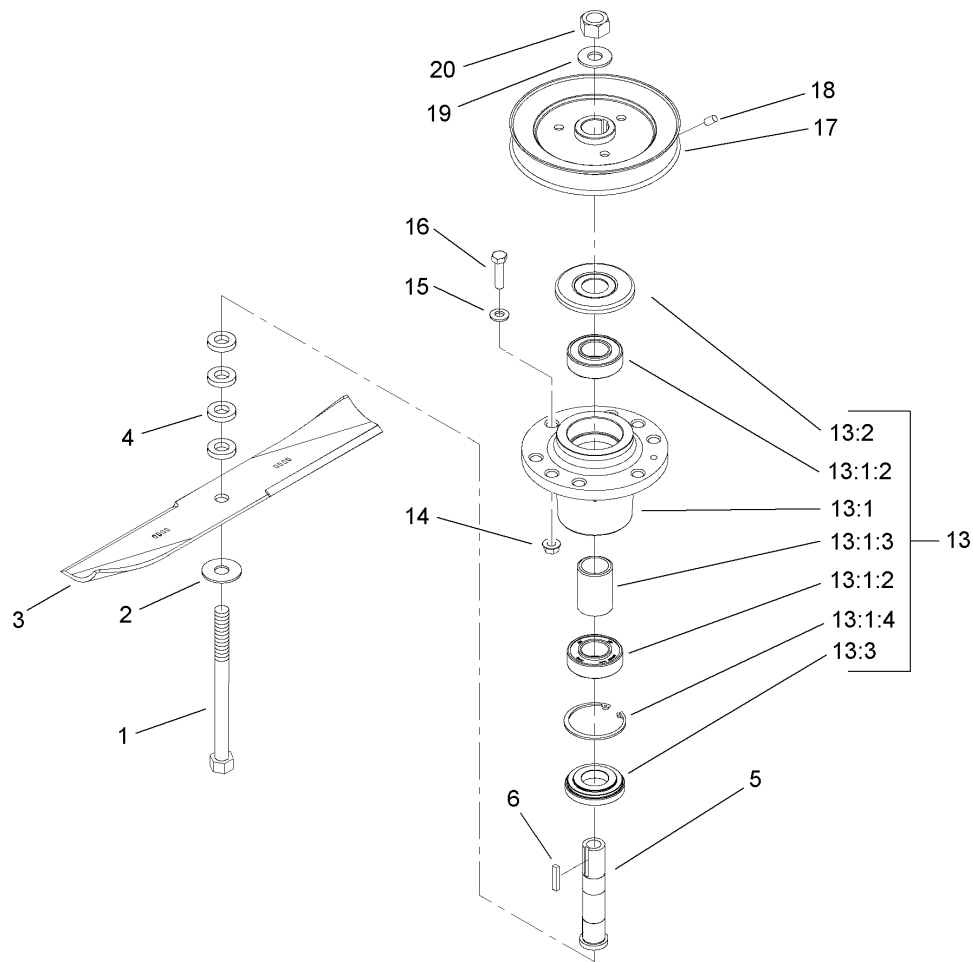


Spindle and Blade Assembly

Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
3	103-2527	2	Blade-Notched				
3	103-2507	2	Blade-Lift, Low				
4	1-323539	8	Spacer				
5	1-323529	2	Tube-Spindle, Short				
6	1-807267	2	Key				
13	107-4065	2	Cutter Housing ASM				
13:1		1	Housing-Cutter				
13:1:2	103-2477	2	Bearing-Ball				
13:1:3	103-2534	1	Spacer-Bearing				
13:1:4	32120-8	1	Ring-Snap				
13:2	103-1330	1	Guard-Bearing, Top				
13:3	103-2535	1	Spacer-Guard, Bottom				
14	32128-20	8	Nut-HF				
15	1-303334	8	Washer-Spring				
16	322-6	8	Screw-HH				
17	1-403183	2	Sheave				
18	1-803310	2	Screw-Set				
19	1-323339	2	Washer-Retainer, Sheave				
20	3219-6	2	Nut-Hex				

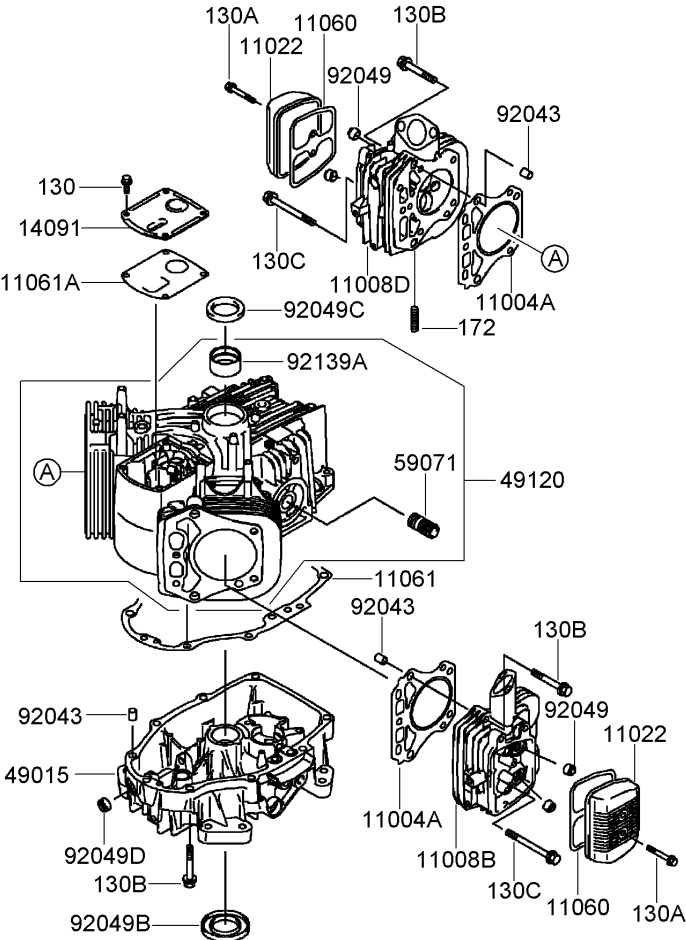


Cylinder and Crankcase Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
11004A	11004-7018	2	Gasket-Head				
11008B	11008-7021	1	Head-Cylinder, No. 2				
11008D	11008-7022	1	Head-Cylinder, No. 1				
11022	11022-7003	2	Case-Rocker				
11060	11060-7001	2	Gasket-Case, Rocker				
11061	11061-7007	1	Gasket-Cover, Crankcase				
11061A	11061-7008	1	Gasket-Breather				
14091	14091-7007	1	Cover				
49015	49015-7032	1	Cover-Crankcase				
49120	49120-7015	1	Crankcase				
59071	59071-2079	1	Joint				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
92139A	92139-7008	1	Bushing				
130	130B0612	4	Bolt-Flanged (6X12)				
130A	130B0640	4	Bolt-Flanged (6X40)				
130B	130T0850	17	Bolt-Flanged (8X50)				
130C	130T0875	2	Bolt-Flanged (8X75)				
172	172G0818	4	Bolt-Stud (8X18)				

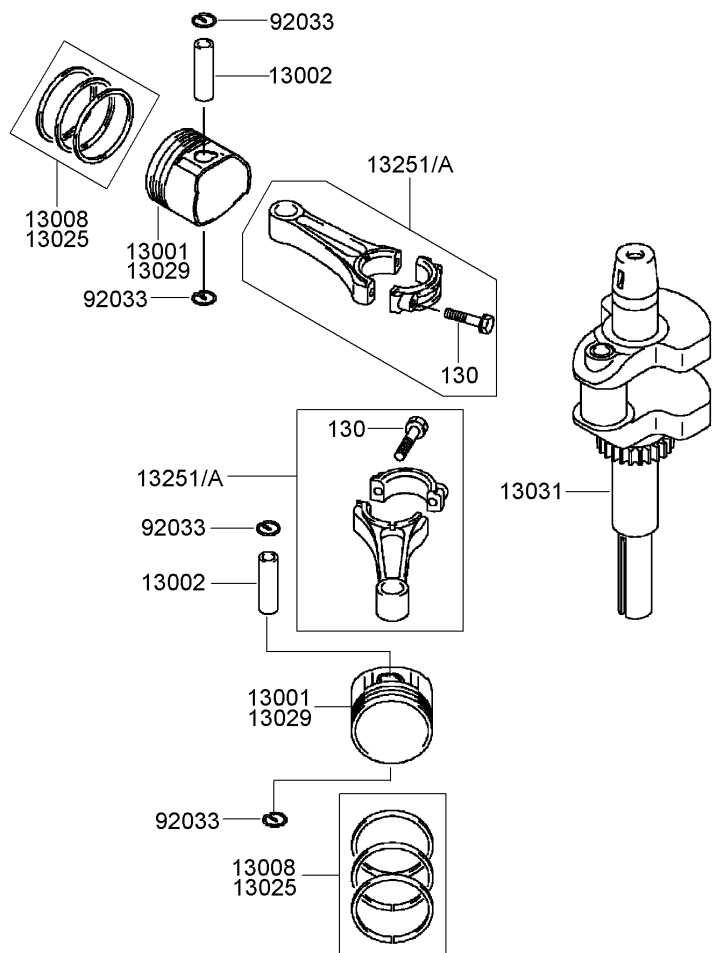


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
13001	13001-7009	2	Piston-Engine				
13002	13002-7001	2	Pin-Piston				
13008	13008-7001	2	Ring Set-Piston				
13025	13025-7003	1	Ring Set-Piston (L 0.50)				
13029	13029-7005	1	Piston-Engine (L 0.50)				
13031	13031-7033	1	Crankshaft				
13251	13251-7007	2	Connecting Rod ASM				
13251A	13251-7008	2	Connecting Rod ASM (0.50)				
92033	92033-7005	4	Ring-Snap				
130	130G0630	4	Bolt-Flanged (6X30)				

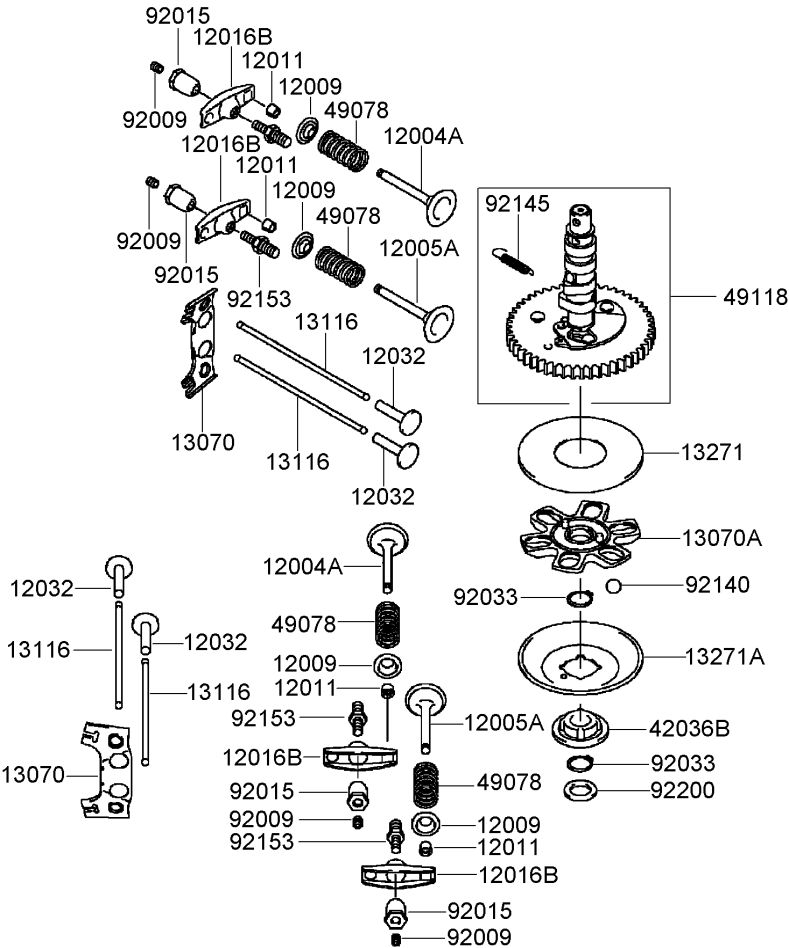


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
⑤12004A	12004-7005	2	Valve-Intake				
⑤12005A	12005-7006	2	Valve-Exhaust				
⑤12009	12009-7001	4	Retainer-Spring, Valve				
⑤12011	12011-2056	8	Collet				
⑤12016B	12016-7008	4	Arm-Rocker				
⑤12032	12032-7001	4	Tappet				
⑤13070	13070-7001	2	Guide				
⑤13070A	13070-7004	1	Guide				
⑤13116	13116-2057	4	Rod-Push				
⑤13271	13271-7007	1	Plate				
⑤13271A	13271-7021	1	Plate-Governor				
⑤42036B	42036-7010	1	Sleeve				
⑤49078	49078-7001	4	Spring-Valve, Engine				
⑤49118	49118-7009	1	Camshaft				
⑤92009	92009-2341	4	Screw				
⑤92015	92015-2253	4	Nut				
⑤92033	92033-7001	2	Ring-Snap				
⑤92140	92140-7002	6	Ball				
⑤92145	92145-7001	1	Spring				
⑤92153	92153-7019	4	Bolt				
⑤92200	92200-7001	1	Washer				

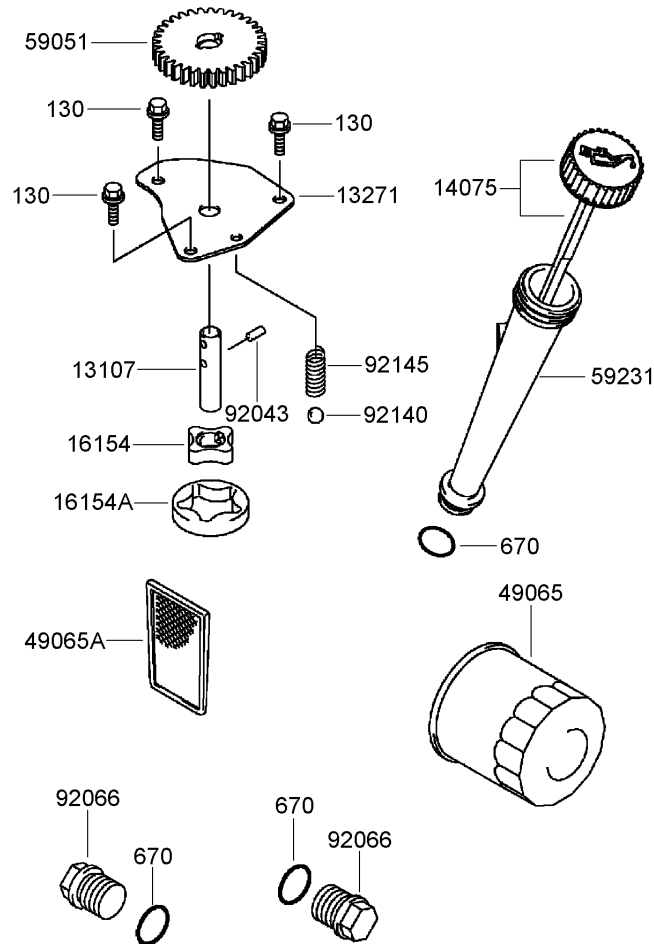


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
⑤13107	13107-7009	1	Shaft				
⑤13271	13271-7017	1	Plate				
⑤14075	14075-7009	1	Cap ASM				
⑤16154	16154-2053	1	Rotor-Pump (In)				
⑤16154A	16154-2054	1	Rotor-Pump (Out)				
⑤49065	49065-2078	1	Filter-Oil				
⑤49065A	49065-7004	1	Filter-Oil				
⑤59051	59051-7011	1	Gear-Spur				
⑤59231	59231-7003	1	Filler				
⑤92043	92043-7003	2	Pin				
⑤92066	92066-7003	2	Plug				
⑤92140	92140-7003	1	Ball				
⑤92145	92145-7002	1	Spring				
⑤130	130B0612	3	Bolt-Flanged (6X12)				
⑤670	670D2016	3	O-Ring (16Mm)				

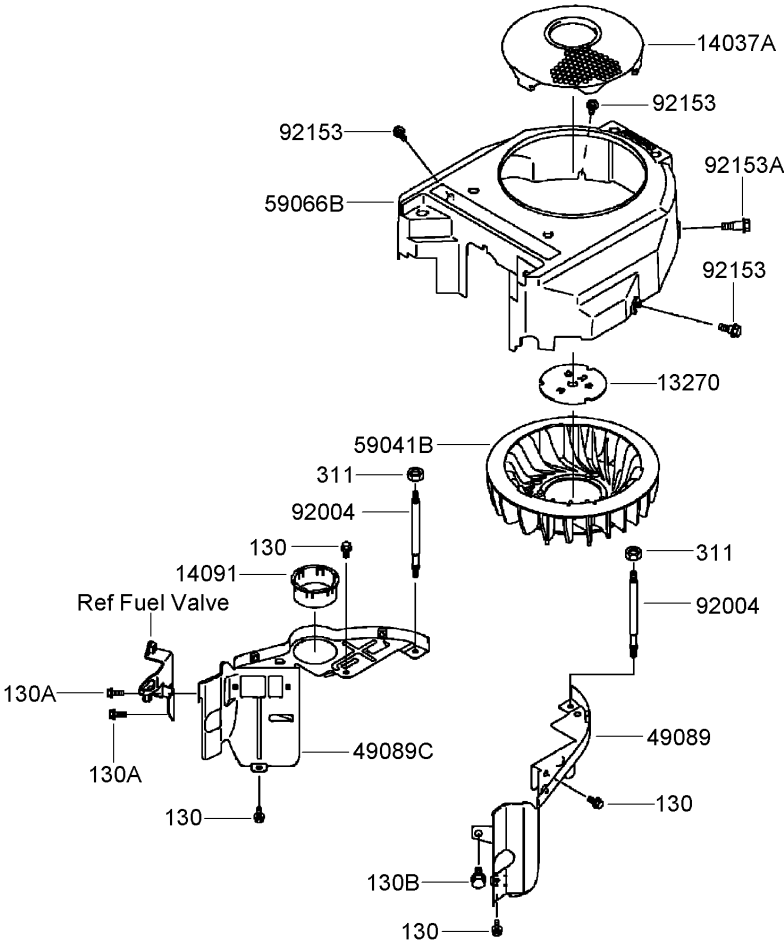

Cooling Equipment Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
13270	13270-7007	1	Plate				
14037A	14037-7025-9H	1	Screen				
14091	14091-7009	1	Cover				
49089	49089-7044	1	Shroud-Engine				
49089C	49089-7061	1	Shroud-Engine				
59041B	59041-7012	1	Fan				
59066B	59066-7036	1	Housing-Fan				
92004	92004-7007	2	Stud				
92153	92153-7007	3	Bolt				
92153A	92153-7008	1	Bolt				
130	130B0612	4	Bolt-Flanged (6X12)				
130A	130B0616	2	Bolt-Flanged (6X16)				
130B	130B0816	1	Bolt-Flanged (8X16)				
311	311F0600	2	Nut-Hex (6Mm)				

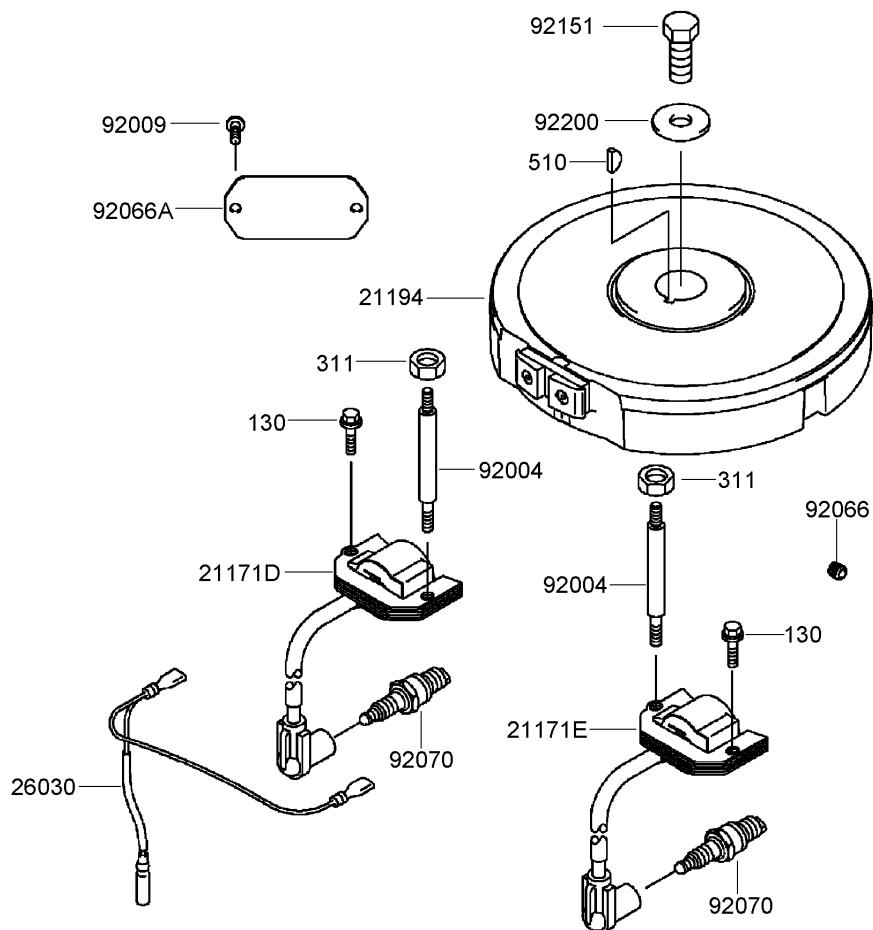

Electric Equipment Assembly


Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
921171D	21171-7026	1	Ignition Coil ASM
921171E	21171-7027	1	Ignition Coil ASM
921194	21194-7013	1	Flywheel
926030	26030-7001	1	Harness
92004	92004-7008	2	Stud
92009	92009-2308	2	Screw
92066	92066-7002	1	Plug
92066A	92066-7005	1	Plug
92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
92151	92151-2097	1	Bolt (12X30)
92200	92200-7002	1	Washer
9130	130B0620	2	Bolt-Flanged (6X20)
9311	311F0600	2	Nut-Hex (6Mm)
9510	510A5100	1	Key-Woodruff

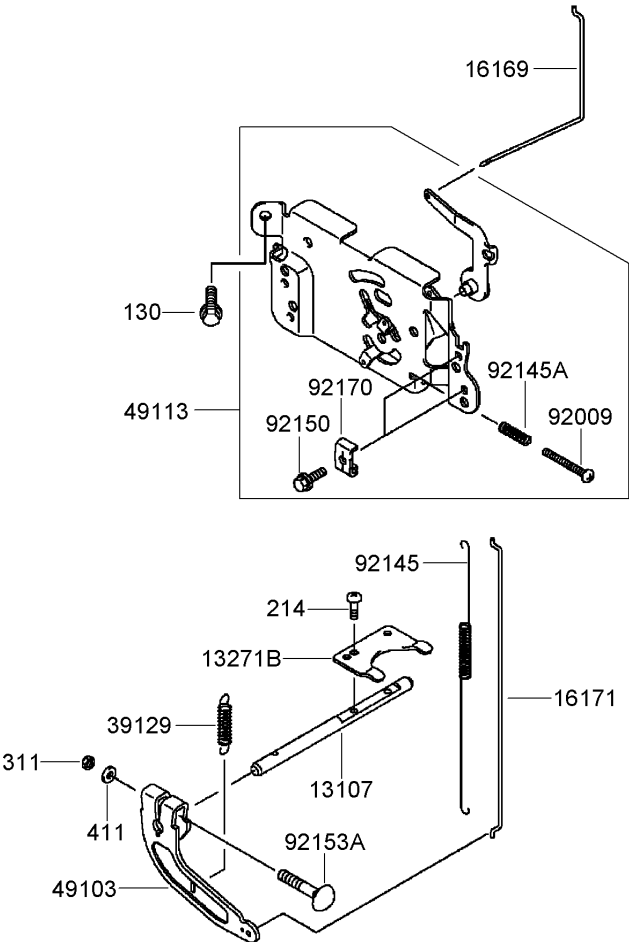

Control Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
13107	13107-7010	1	Shaft				
13271B	13271-7032	1	Plate				
16169	16169-7012	1	Link-Choke				
16171	16171-7007	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7004	1	Arm-Governor				
49113	49113-7024	1	Panel-Control				
92009	92009-7007	1	Screw (4X35)				
92145	92145-7003	1	Spring				
92145A	92145-7005	1	Spring				
92150	92150-2182	2	Bolt (5X18)				
92153A	92153-7033	1	Bolt (6X35)				
92170	92170-7001	2	Clamp				
130	130B0612	2	Bolt-Flanged (6X12)				
214	214B0408	2	Screw-Pan (4X8)				
311	311B0600	1	Nut-Hex (6Mm)				
411	411B0600	1	Washer-Plain (6Mm)				

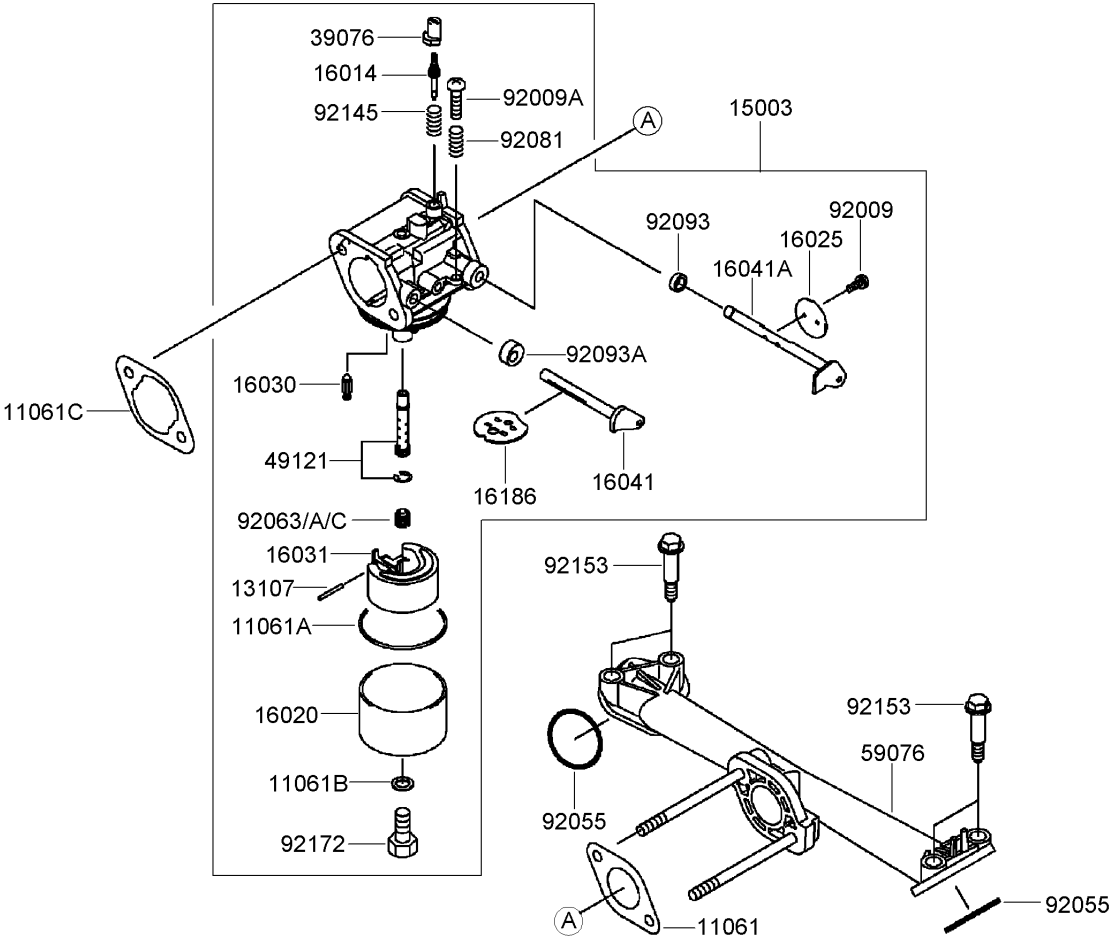


Carburetor Assembly

Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
11061	11061-7004	1	Gasket-Insulator
11061A	11061-7009	1	Gasket-Chamber
11061B	11061-7010	1	Gasket-Screw
11061C	11061-7018	1	Gasket-Cleaner, Air
13107	13107-7018	1	Shaft
15003	15003-7061	1	Carburetor ASM
16014	16014-7002	1	Screw-Pilot, Air
16020	16020-7003	1	Chamber-Float
16025	16025-7006	1	Valve-Throttle
16030	16030-7003	1	Valve-Float
16031	16031-7002	1	Float
16041	16041-7016	1	Shaft-Choke, Carburetor
16041A	16041-7018	1	Shaft-Throttle, Carburetor
16186	16186-7002	1	Choke Valve ASM
39076	39076-7001	1	Limiter
49121	49121-7001	1	Nozzle-Main
59076	59076-7005	1	Manifold-Intake
92009	92009-2083	2	Screw
92009A	92009-2349	1	Screw
92055	92055-7007	2	O-Ring (I D 31)
92063	92063-7026	1	Jet-Main, No. 88
92063A	92063-7028	1	Jet-Main, No. 85
92063C	92063-7029	1	Jet-Main, No. 82
92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
92093	92093-2100	1	Seal
92093A	92093-7003	1	Seal
92145	92145-7015	1	Spring
92153	92153-7009	4	Bolt
92172	92172-7002	1	Screw

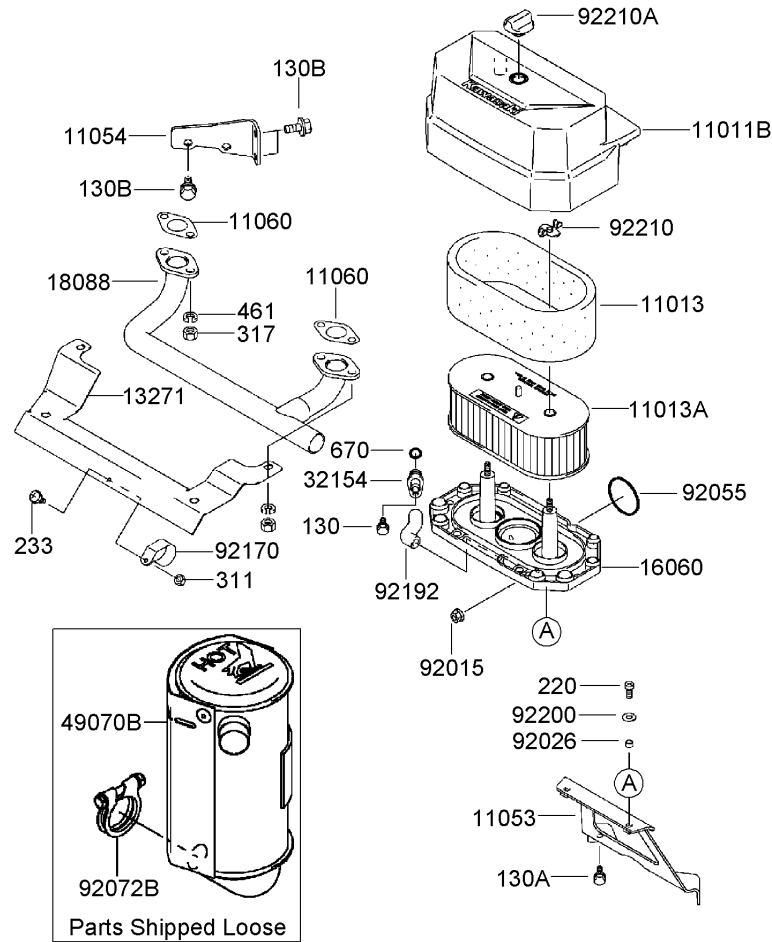

Air Filter and Muffler Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
⑤11011B	11011-7045	1	Case-Filter, Air
⑤11013	11013-7025	1	Element-Filter, Air
⑤11013A	11013-7031	1	Element-Filter, Air
⑤11053	11053-7022	1	Bracket
⑤11054	11054-7002-9H	1	Bracket
⑤11060	11060-7021	2	Gasket-Muffler
⑤13271	13271-7022	1	Plate
⑤16060	16060-7016	1	Pipe-Intake
⑤18088	18088-7001	1	Pipe-Exhaust
⑤32154	32154-7006	1	Pipe
⑤49070B	49070-7021	1	Muffler
⑤92015	92015-1193	2	Nut
⑤92026	92026-7001	2	Spacer (6.2X7.9X5)
⑤92055	92055-7015	1	O-Ring
⑤92072B	92072-7012	1	Band
⑤92170	92170-7002	1	Clamp
⑤92192	92192-7010	1	Tube
⑤92200	92200-2070	2	Washer
⑤92210	92210-7004	2	Nut
⑤92210A	92210-7019	1	Nut
⑤130	130B0610	1	Bolt-Flanged (6X10)
⑤130A	130B0612	2	Bolt-Flanged (6X12)
⑤130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
⑤220	220B0614	2	Screw-Pan, Cross (6X14)
⑤233	233B0416	1	Screw (4X16)
⑤311	311B0400	1	Nut-Hex (4Mm)
⑤317	317R0800	4	Nut-Hex, Small (8Mm)
⑤461	461F0800	4	Washer-Spring (8Mm)
⑤670	670B2010	1	O-Ring (10Mm)

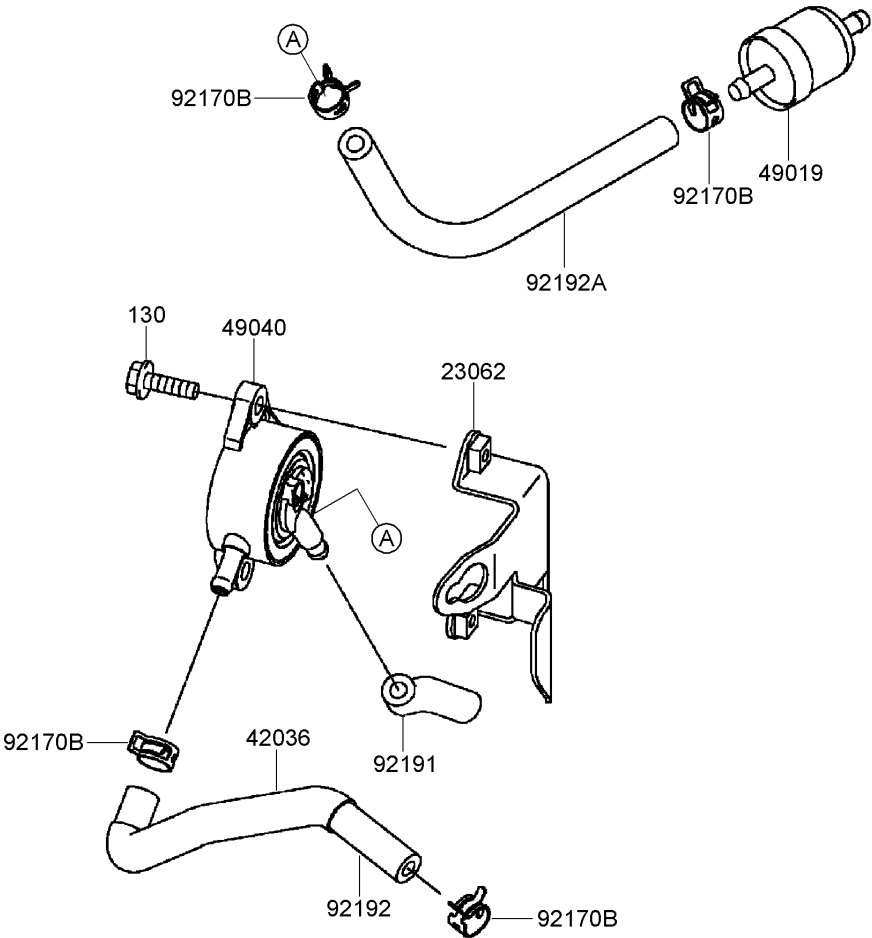

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
⑤23062	23062-7004-9H	1	Bracket				
⑤42036	42036-7012	1	Sleeve				
⑤49019	49019-7001	1	Filter-Fuel				
⑤49040	49040-7001	1	Pump-Fuel				
⑤92170B	92170-2088	4	Clamp				
⑤92191	92191-7002	1	Tube				
⑤92192	92192-7035	1	Tube (6.35X12.7X170)				
⑤92192A	92192-7037	1	Tube (6.35X12.7X160)				
⑤130	130B0620	2	Bolt-Flanged (6X20)				

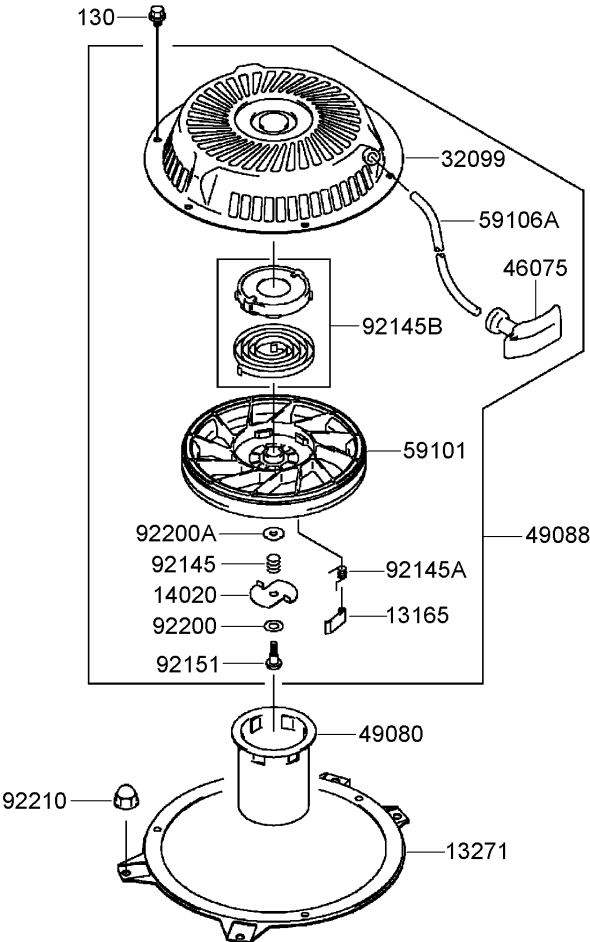

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
13165	13165-7001	2	Pawl-Starter, Recoil				
13271	13271-7003-9H	1	Plate				
14020	14020-7001	1	Retainer				
32099	32099-7002	1	Case-Starter, Recoil				
46075	46075-7001	1	Grip-Starter, Recoil				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7013	1	Starter-Recoil				
59101	59101-7001	1	Reel-Starter, Recoil				
59106A	59106-7005	1	Rope				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				
92210	92210-0003	4	Nut				
130	130B0608	3	Bolt-Flanged (6X8)				

Attachments and Accessories

For 39682 - Commercial Walk-Behind Mower, Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Product Name	Model/Part
32 Inch and 48 Inch Fixed Deck Low Lift Blades	103-2507
Blade-Notched	103-2527
Atomic Blade and Decal Assembly	104-8595
Weight Kit	107-4100
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

NOTES

