



Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Gear Drive with 48in TURBO FORCE® Cutting Unit

Model No. 39688 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Lubrication Equipment Assembly Kawasaki FH430V-CS25	 20
Transmission Drive Assembly	 4	Cooling Equipment Assembly Kawasaki FH430V-CS25	 21
Drive Wheel and Brake Assembly	 6	Electric Equipment Assembly Kawasaki FH430V-CS25	 22
Handle and Control Assembly	 8	Control Equipment Assembly Kawasaki FH430V-CS25	 23
Handle Assembly No. 110-6906	 10	Carburetor Assembly Kawasaki FH430V-CS25	 24
Deck Assembly	 11	Air Filter and Muffler Assembly Kawasaki FH430V-CS25	 25
Deck Assembly No. 110-4909	 12	Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	 26
Deflector Assembly No. 110-0758	 13	Starter Assembly Kawasaki FH430V-CS25	 27
Sheave, Spindle and Blade Assembly	 14	Label Assembly Kawasaki FH430V-CS25	 28
Idler Assembly	 15	Attachments and Accessories List	 29
Caster Assembly	 16		
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	 17		
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	 18		
Valve and Camshaft Assembly Kawasaki FH430V-CS25	 19		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from Peerless Transmissions (model 700-070A) | ❹ Obtain from your local Kawasaki dealer |

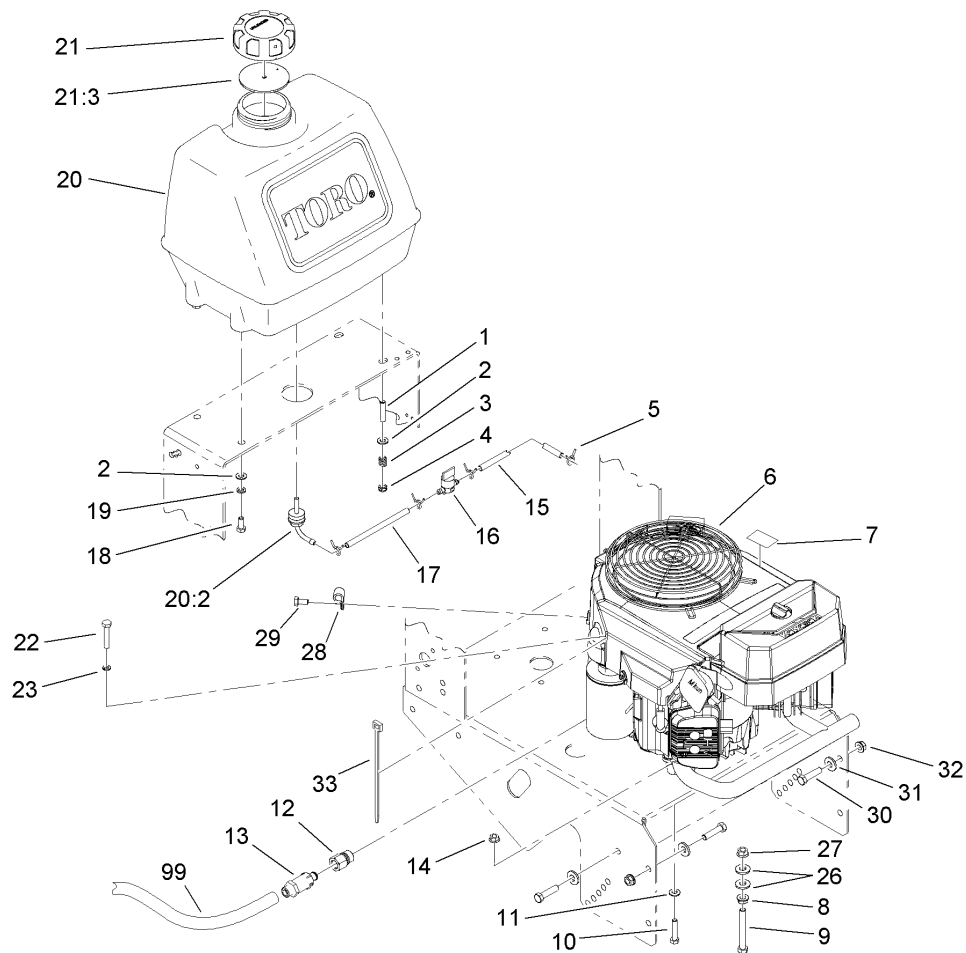

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
246		1	Engine-Kawasaki, FH430V-Cs25
7	106-0699	1	Decal-Warning
8	3290-357	1	Nut-HHF, Whiz
9	323-14	1	Screw-HH
10	322-7	4	Screw-HH
11	1-303334	4	Washer-Spring
12	103-1966	1	Adapter
13	92-6877	1	Valve-Drain, Oil
14	32128-20	4	Nut-HF
15	109-0293	1	Hose-Fuel
16	1-603770	1	Valve-Fuel
17	109-0306	1	Hose-Fuel
18	322-3	2	Screw-HH
19	1-805005	2	Washer-Lock
20	106-0730	1	Fuel Tank ASM
20:2	103-2605	1	Fitting-Fuel, Bulkhead
21	88-3980	1	Gas Cap ASM
21:3	88-4010	1	Gasket-Cap, Gas
22	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
23	1-805004	1	Washer-Lock
26	98-5975	2	Washer-Belleville
27	32128-21	1	Nut-HF
28	1-413510	1	Clip-Loom
29	33114-016	1	Screw-HH
30	323-8	8	Screw-HH
31	98-5975	8	Washer-Belleville
32	3290-357	8	Nut-HHF, Whiz
33	1-303335	1	Tie-Plastic
99	103-1964	1	Hose-Drain, Oil

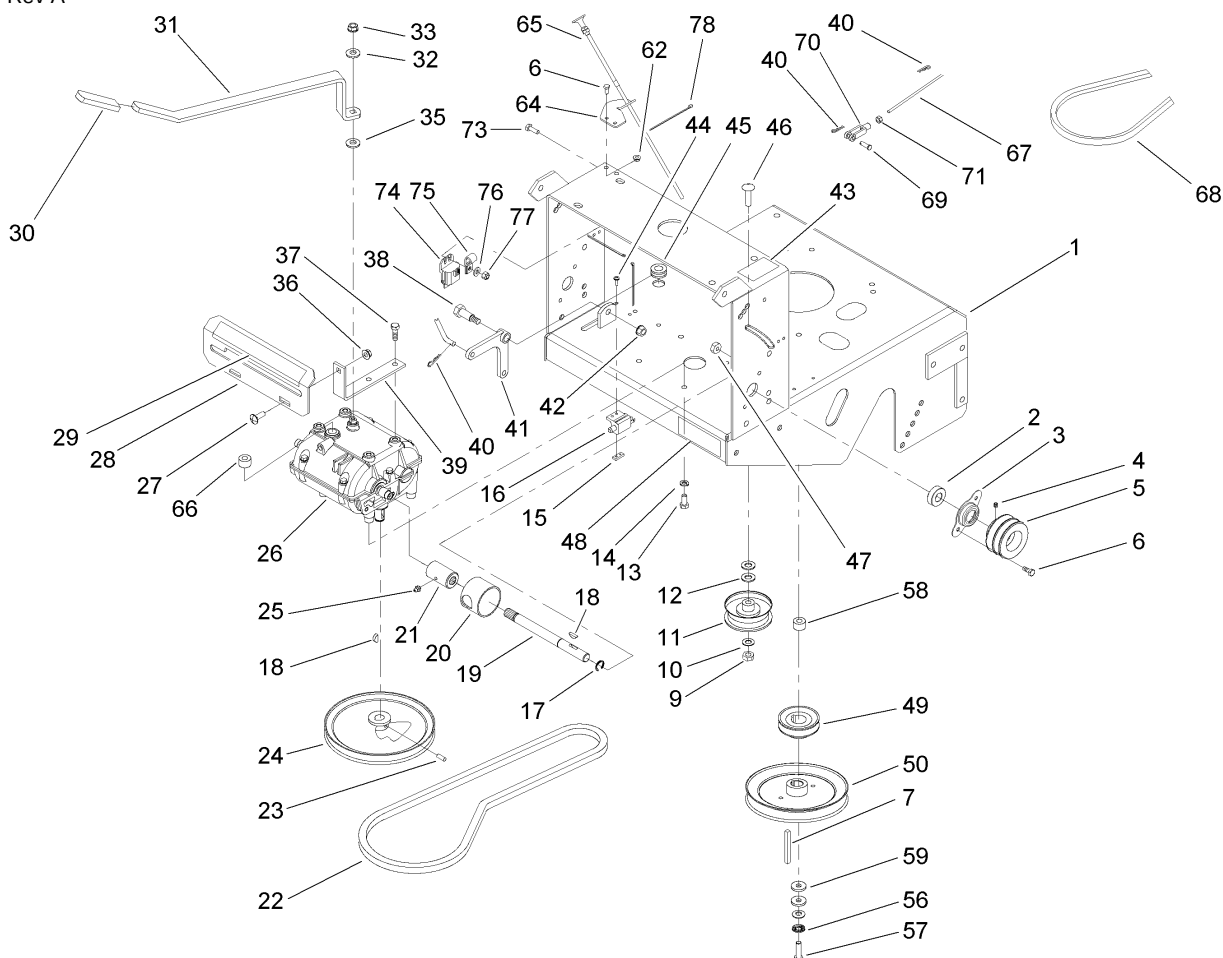

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	110-4890	1	Pulley ASM

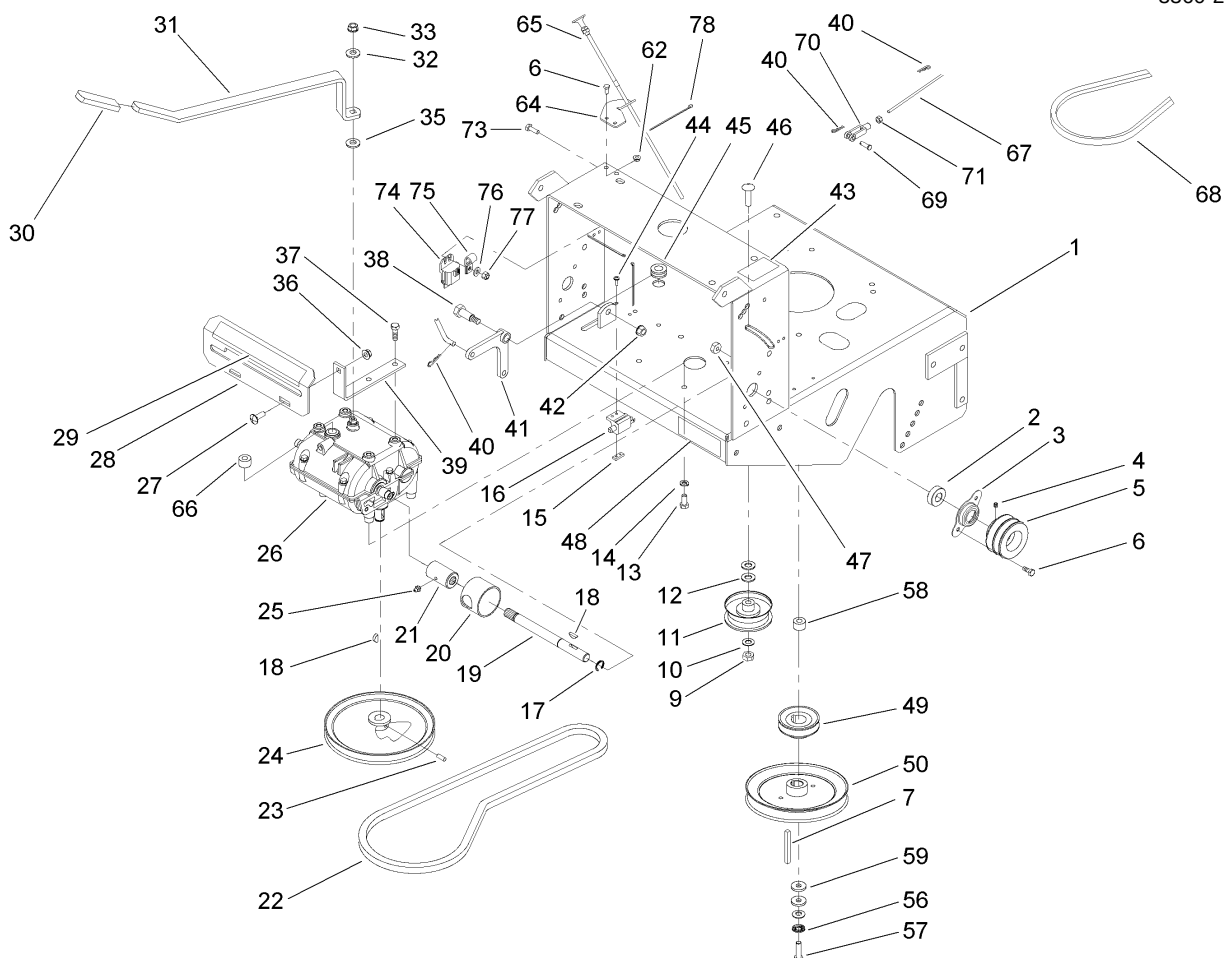

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description				
56	1-603610	2	Washer-Spring				
57	3212-6	1	Screw-HH				
58	1-633453	1	Spacer-Clutch				
59	1-373034	2	Washer				
62	32128-33	2	Nut-HF				
64	103-1797-01	1	Bracket-Cable, Choke				
65	103-1796	1	Cable-Choke				
66	1-303282	1	Switch-Start, Neutral				
67	1-323303	1	Linkage-Arm				
68	110-0543	1	Belt-V				
69	1-808280	1	Pin-Clevis				
70	1-303105	1	Yoke-Adjustable				
71	3219-2	1	Nut-Hex				
73	321-4	1	Screw-HH				
74	1-323430	1	Module-Interlock				
75	1-323229	1	Clip-Loom				
76	3256-22	1	Washer-Flat				
77	3296-42	1	Nut-Lock, NI				
78	1-303335	3	Tie-Plastic				

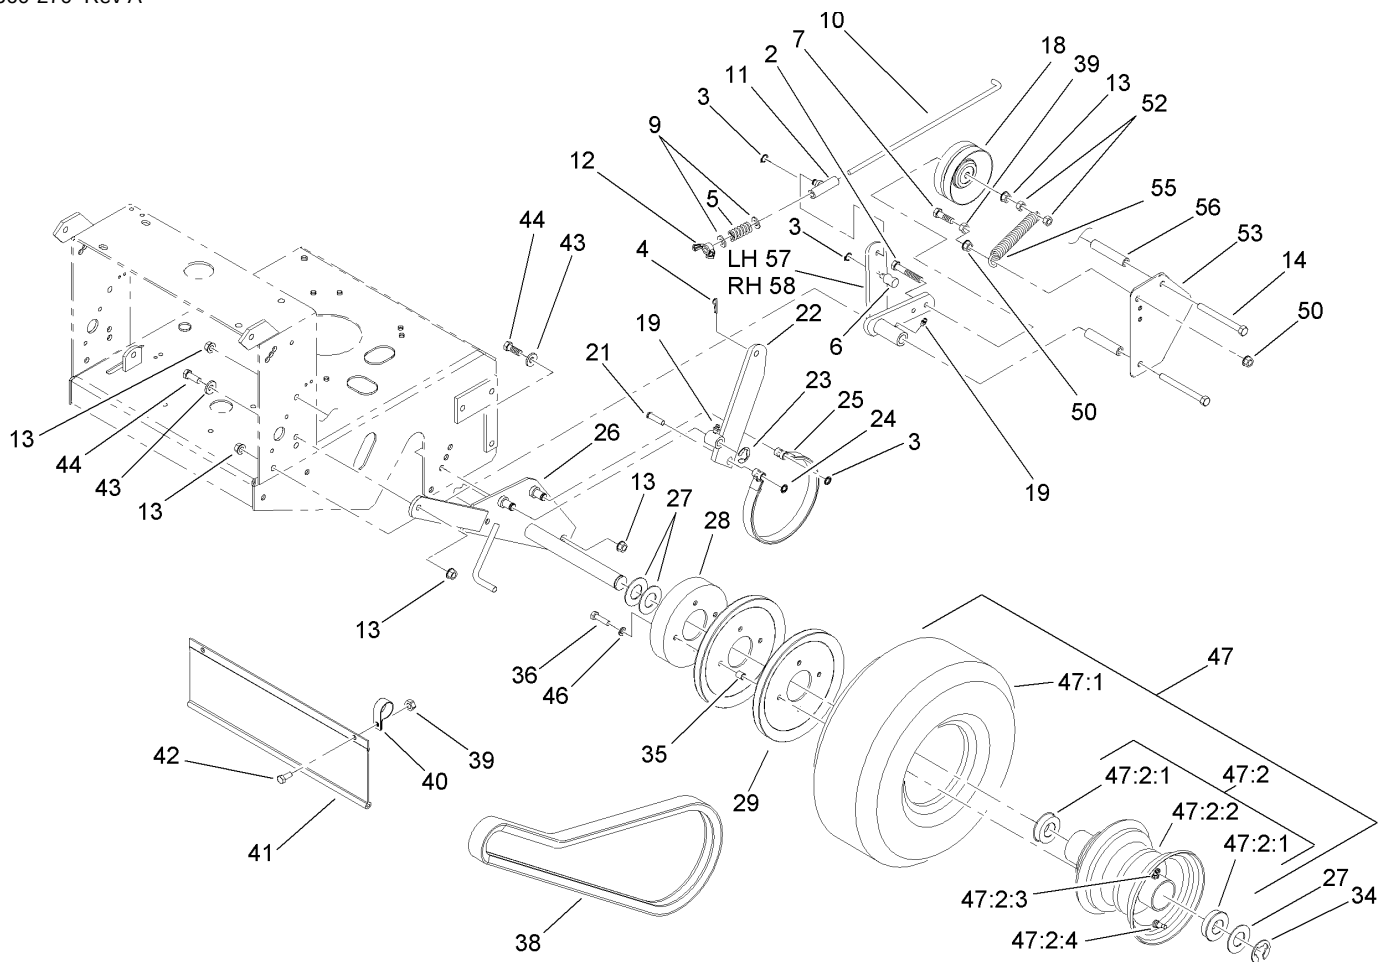

Drive Wheel and Brake Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
46	1-805005	8	Washer-Lock
47	1-323719	2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
47:2:2		1	Rim ASM
47:2:3		1	Fitting-Grease
47:2:4		1	Stem-Valve
50	32128-20	4	Nut-HF
52	3296-39	4	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

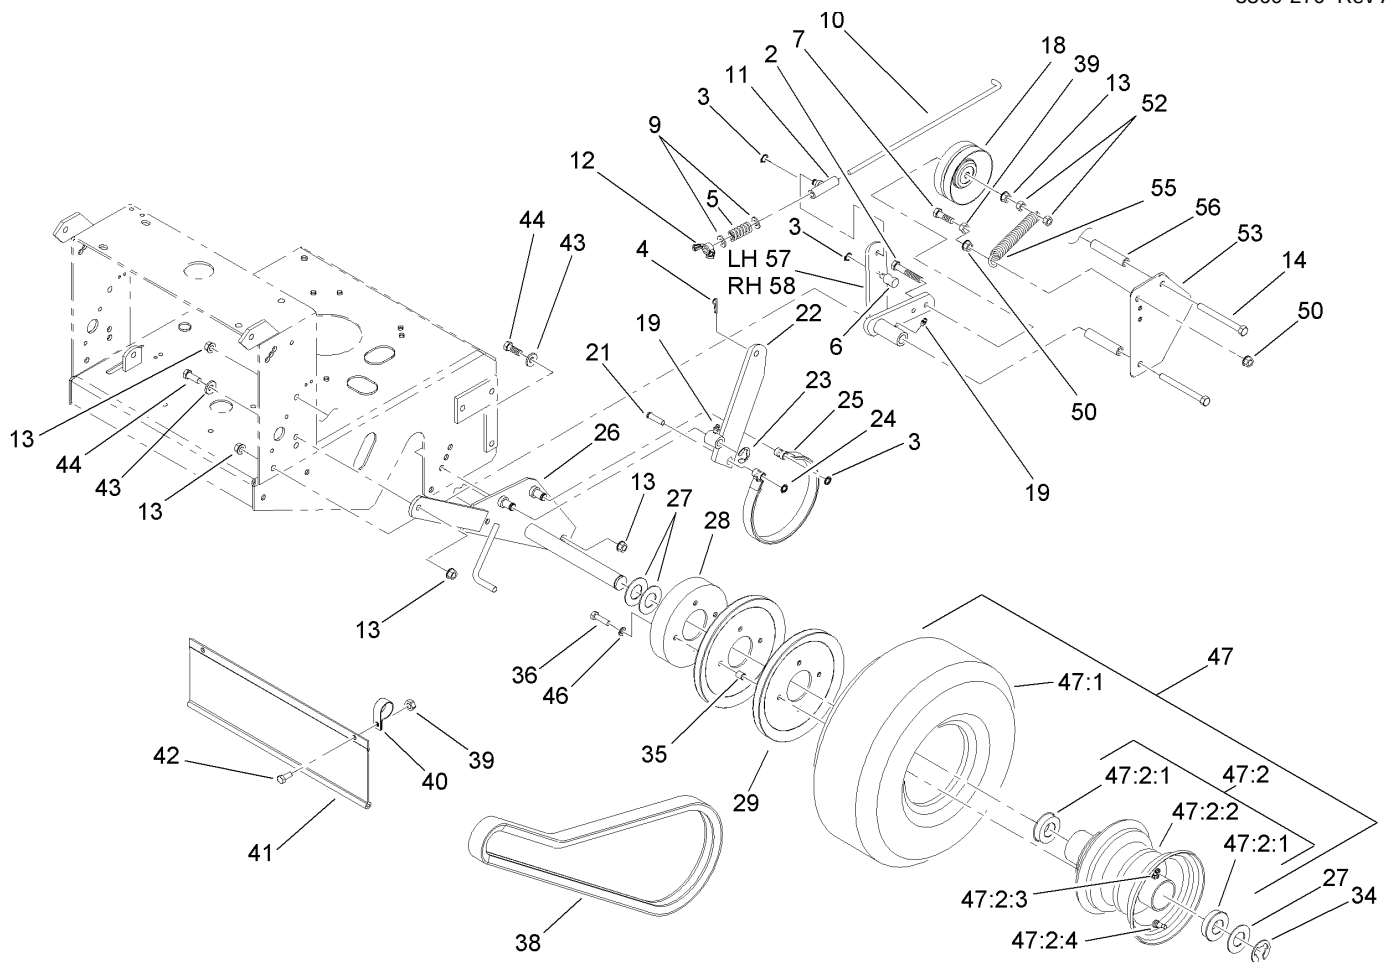

Drive Wheel and Brake Assembly (continued)

Ref	Part No.	Qty.	Description
58	103-1616-03	1	Arm-Idler, RH

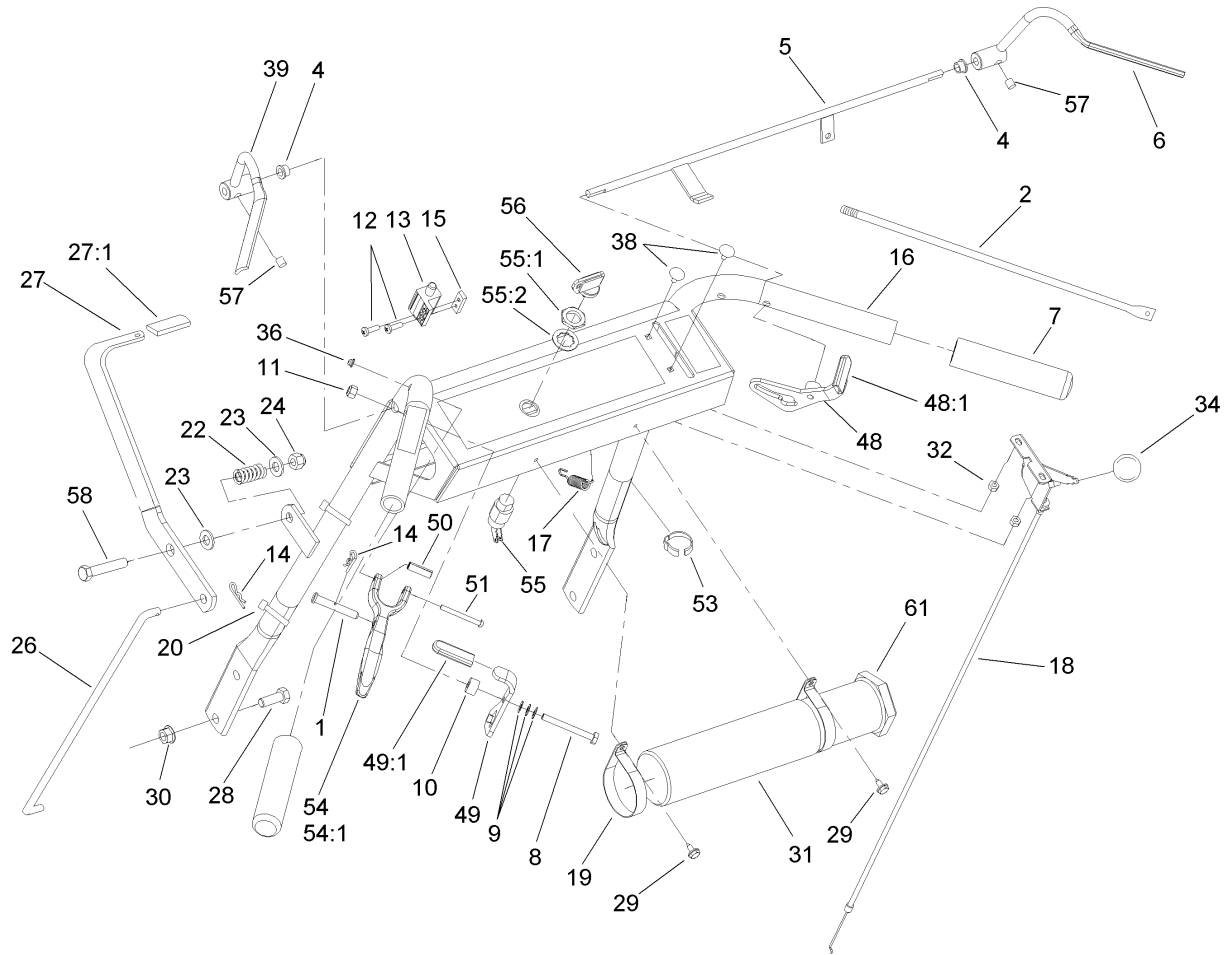


Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Rod-Control, Operator Presence
6	106-5486	1	RH Operator Presence Control Lever ASM
7	104-9838	2	Grip-Foam
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	3	Pin-Hair
15	1-633181	1	Plate-Tapped
16	110-6906	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
20	1-303287	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper

Ref	Part No.	Qty.	Description
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	32128-21	4	Nut-HF
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	106-5485	1	LH Operator Presence Control Lever ASM
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Lever, Drive
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	29-5560	1	Switch-On / Off
55:1	218-461	1	Nut-HH




Ref	Part No.	Qty.	Description
55:2	3254-5	1	Washer-Tooth
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
61	104-7048	1	Cap-Housing

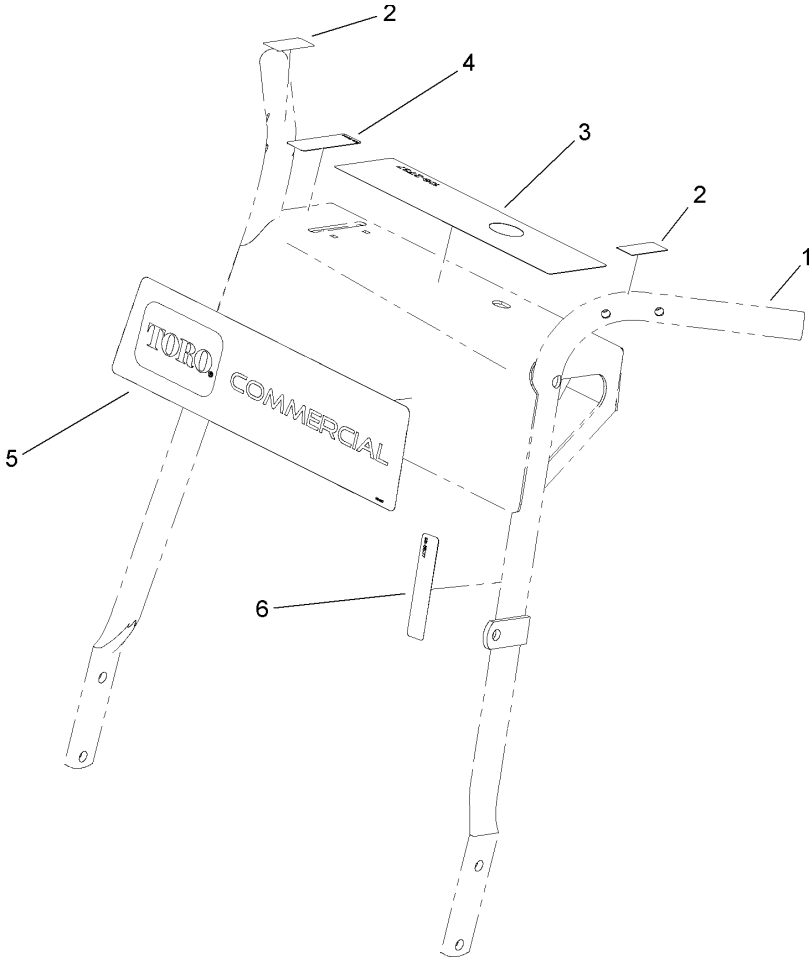


Handle Assembly No. 110-6906

Ref	Part No.	Qty.	Description				
1		1	Handle ASM				
2	105-4111	2	Decal-Lock, Neutral				
3	106-2737	1	Decal-Warning				
4	106-2733	1	Decal-Throttle				
5	110-6917	1	Decal				
6	95-5537	1	Decal-Engage, Deck				

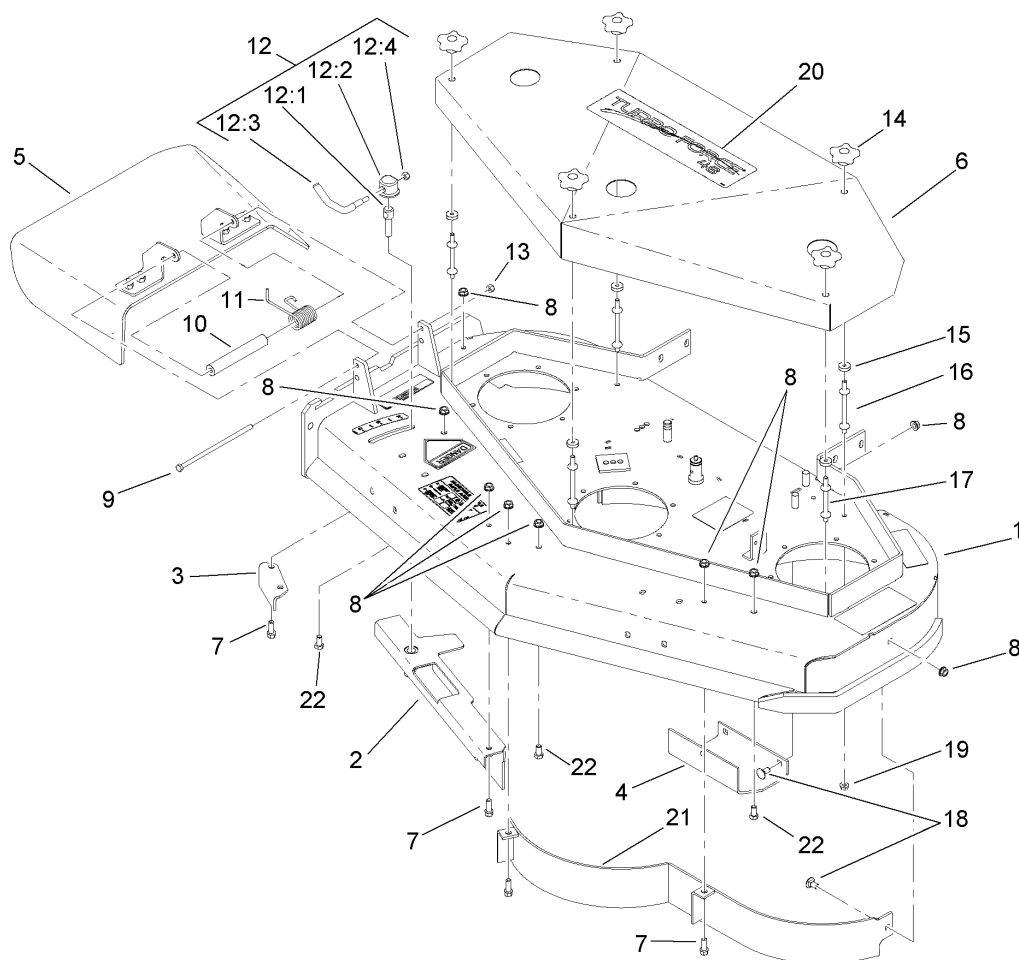


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-4909	1	Deck ASM	21	110-0735-03	1	Baffle ASM
2	110-0533-03	1	Baffle-Adjustable	22	323-4	3	Screw-HH
3	110-0744-01	1	Baffle-Discharge				
4	107-3166-01	1	Skid				
5	110-0758	1	Deflector ASM				
6	110-2119-01	1	Cover				
7	92-1624	5	Screw				
8	3290-357	12	Nut-HHF, Whiz				
9	322-50	1	Screw-HH				
10	105-4622	1	Spacer				
11	104-8554	1	Spring-Torsion				
12	107-1664	1	Lever ASM				
12:1	106-3239	1	Screw-Lock				
12:2	107-1644	1	Cap-Lock				
12:3	106-3241	1	Lever-Lock				
12:4	3296-29	1	Nut-Lock, NI				
13	3296-29	1	Nut-Lock, NI				
14	106-4161	5	Knob-Handle				
15	1-323417	5	Washer				
16	1-303536	3	Stud-Shield, Belt (Long)				
17	1-303537	2	Stud-Shield, Belt (Short)				
18	3231-1	7	Screw-CARR				
19	32128-20	5	Nut-HF				
20	110-6920	1	Decal				

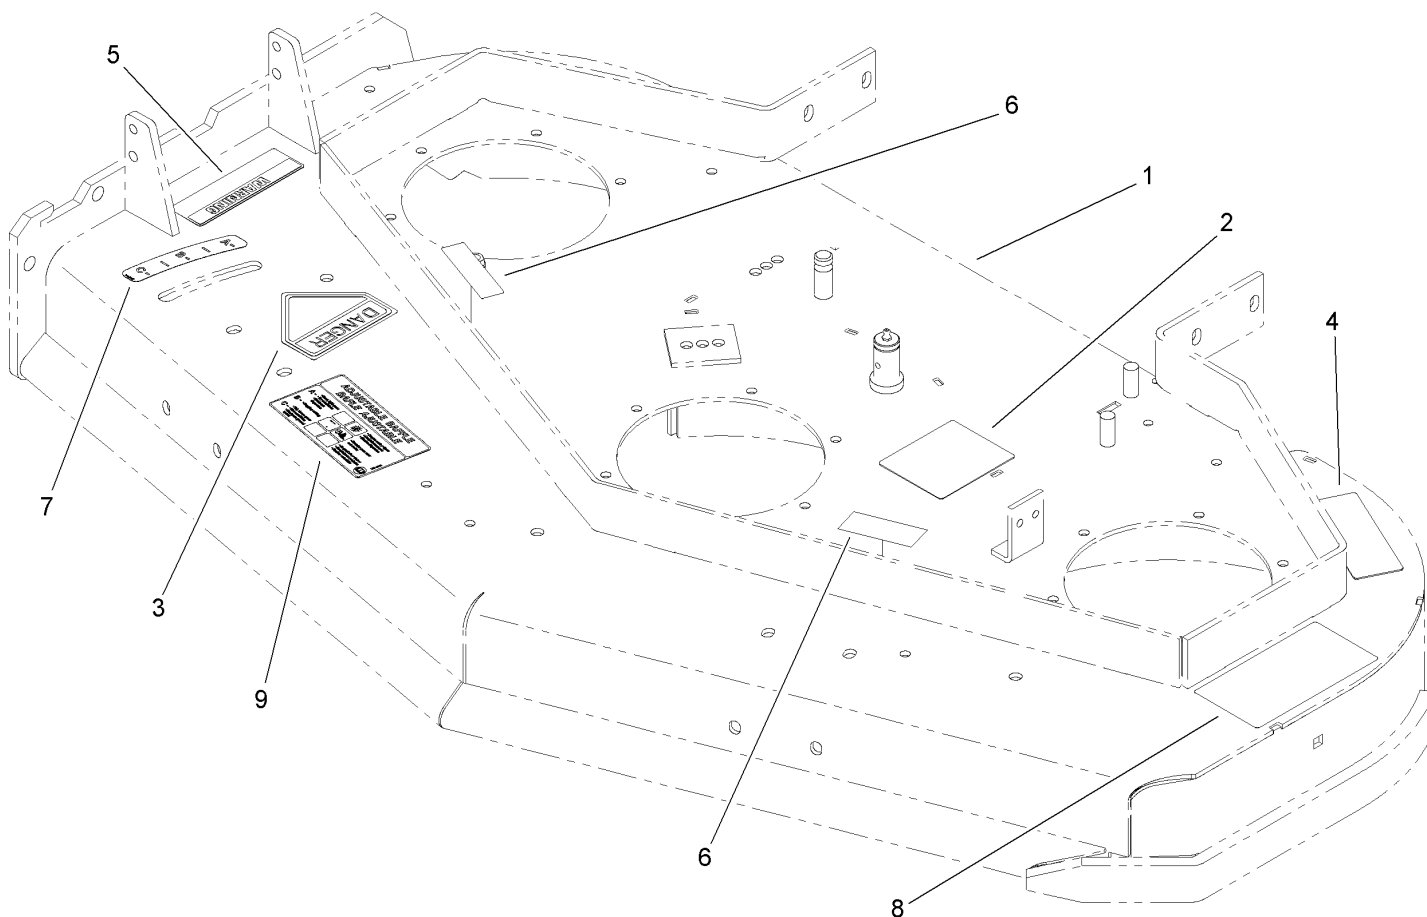


Deck Assembly No. 110-4909

Ref	Part No.	Qty.	Description
1		1	48 Inch Deck ASM
2	99-3943	1	Decal-Routing, Belt
3	43-8480	1	Decal-Danger
4	98-5130	1	Decal-Torque, Bolt
5	104-8569	1	Decal-Warning
6	98-5954	2	Decal-Cover, Missing
7	110-2067	1	Decal-Setting, Baffle
8	66-1340	1	Decal-Danger
9	110-2068	1	Decal-Adjustment, Baffle

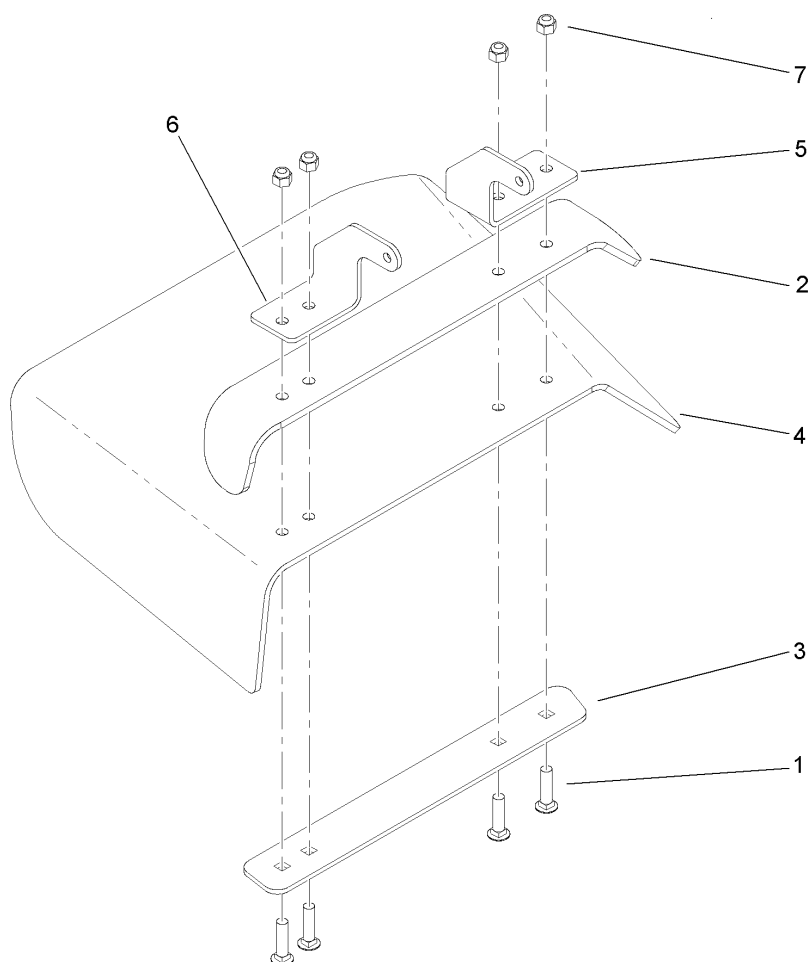

Deflector Assembly No. 110-0758


Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

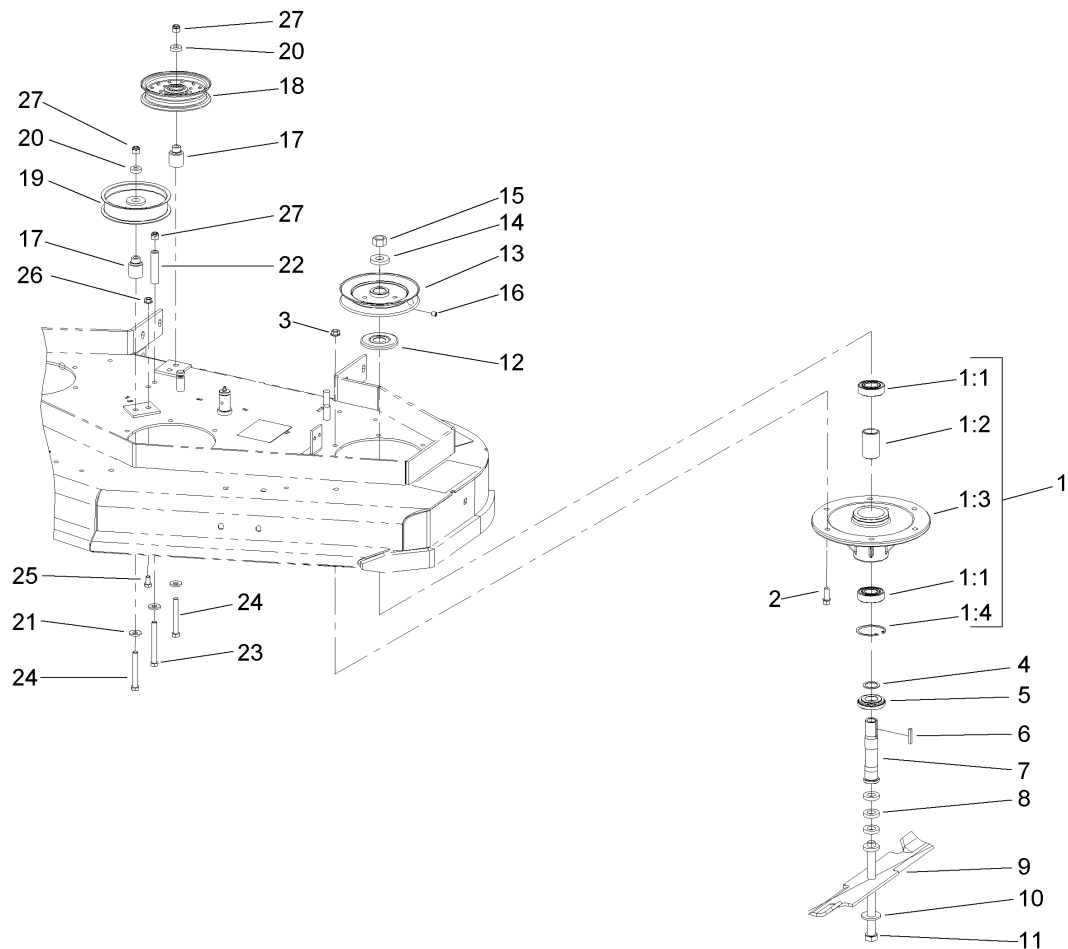

Sheave, Spindle and Blade Assembly


Ref	Part No.	Qty.	Description
1	108-6697	3	Spindle Housing ASM
1:1	110-2118	2	Bearing
1:2	110-2116	1	Spacer-Bearing
1:3	108-6694	1	Housing-Spindle
1:4	32120-8	1	Ring-Snap
2	92-1624	18	Screw
3	3290-357	18	Nut-HHF, Whiz
4	110-4888	3	Washer-Spacer
5	103-2535	3	Spacer-Guard, Bottom
6	1-807267	3	Key
7	1-323529	3	Tube-Spindle, Short
8	1-323539	12	Spacer
9	107-3192-03	3	Blade-16.5 Inch (High Flow)
10	1-513208	3	Washer-Spring
11	1-800861	3	Screw-Cap, HH
12	103-1330	3	Guard-Bearing, Top
13	1-403183	3	Sheave
14	1-323339	3	Washer-Retainer, Sheave
15	3219-6	3	Nut-Hex
16	1-803310	3	Screw-Set
17	1-403184	2	Bushing-Idler
18	1-403186	1	Idler-Pulley, Flat
19	1-613098	1	Pulley-Idler
20	5-0652	2	Spacer

Ref	Part No.	Qty.	Description
21	98-5975	3	Washer-Belleville
22	1-403188	1	Spacer
23	323-15	1	Screw-HH
24	323-14	2	Screw-HH
25	322-2	1	Screw-HH
26	32128-20	1	Nut-HF
27	3296-39	3	Nut-Lock, NI

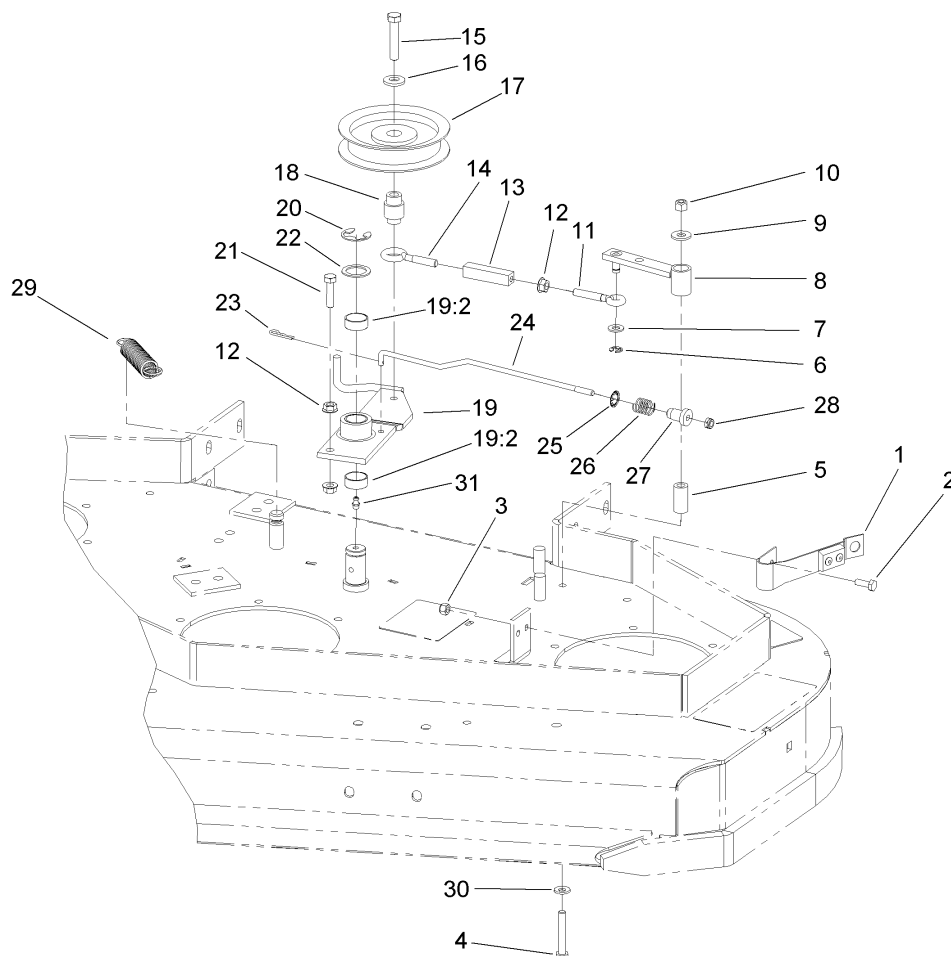


Idler Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-324372	1	Pad And Spring ASM	24	110-4932	1	Rod-Brake
2	321-4	2	Screw-HH	25	1-323748	1	Ring-Push On
3	3296-42	2	Nut-Lock, NI	26	1-323747	1	Spring-Compression
4	322-10	1	Screw-HH	27	1-323746	1	Spacer-Flanged
5	1-403179	1	Tube-Pivot	28	3296-56	1	Nut-Lock, NI
6	32120-35	1	Ring-Retaining, EXT	29	1-323071	1	Spring-Extension
7	3256-23	1	Washer-Flat	30	1-303334	1	Washer-Spring
8	1-322235	1	Arm-Assist	31	302-19	1	Fitting-Grease
9	3256-3	1	Washer-Flat				
10	3296-29	1	Nut-Lock, NI				
11	1-303238	1	Eyebolt-Thread, RH				
12	32128-20	3	Nut-HF				
13	1-303236	1	Body-Turnbuckle				
14	1-303348	1	Eyebolt-Thread, LH				
15	702809	1	Screw-Cap				
16	98-5975	1	Washer-Belleville				
17	1-603843	1	Pulley-Idler				
18	1-303434	1	Bushing-Engagement				
19	103-3600	1	Idler Arm ASM				
19:2	1-323729	2	Sleeve-Bearing				
20	32151-103	1	Ring-Retaining, EXT				
21	322-6	1	Screw-HH				
22	1-303352	1	Washer-Spindle				
23	1-806003	1	Pin-Hair				

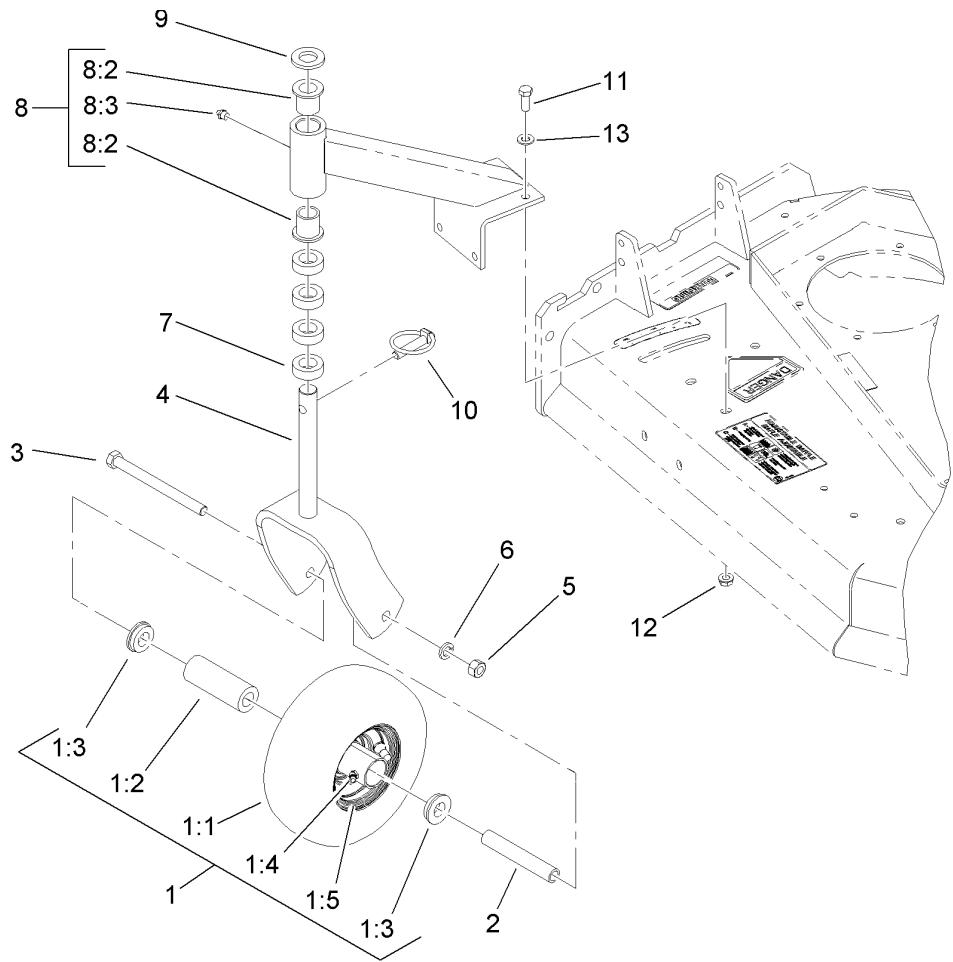


Caster Assembly

Ref	Part No.	Qty.	Description				
1	110-5023	2	Wheel And Tire ASM				
②1:1		1	Tire				
1:2	1-513809	1	Bearing				
1:3	1-513810	2	Bushing				
1:4	302-61	1	Zerk				
②1:5		1	Wheel				
2	1-513547	2	Spacer				
3	325-20	2	Screw-HH				
4	1-322145-01	2	Fork				
5	3217-9	2	Nut-HH				
6	3253-7	2	Washer-Lock				
7	1-303314	8	Spacer-Caster				
8	110-2130	2	Support ASM				
8:2	1-303514	2	Bearing-Flanged				
8:3	302-52	1	Fitting-Grease				
9	1-513338	2	Washer-Flat				
10	1-809020	2	Pin				
11	323-6	8	Screw-HH				
12	3290-357	8	Nut-HHF, Whiz				
13	3256-24	8	Washer-Flat				

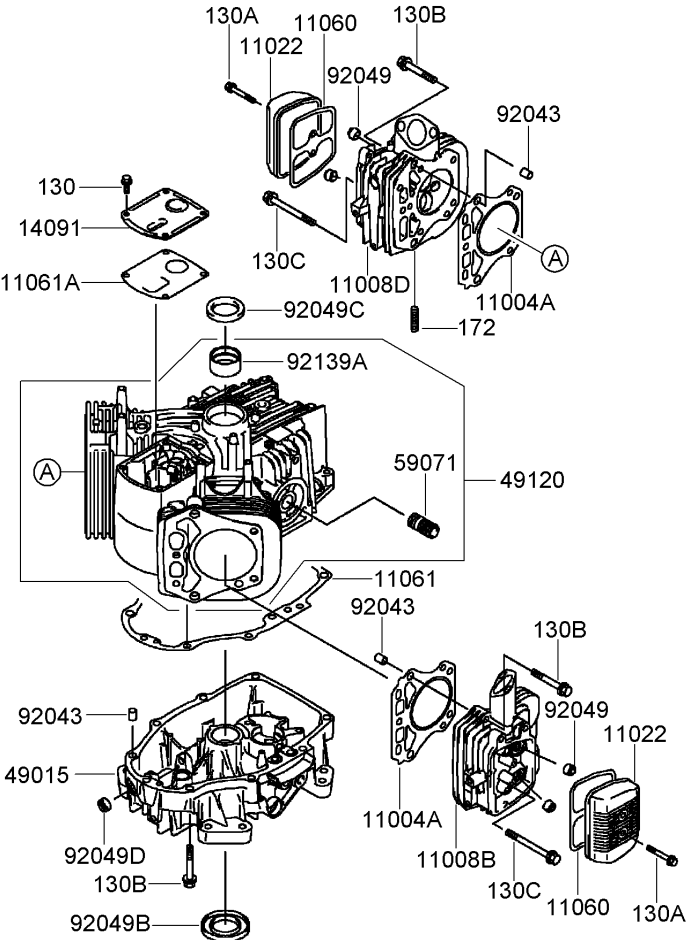


Cylinder and Crankcase Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④11004A	11004-7018	2	Gasket-Head				
④11008B	11008-7021	1	Head-Cylinder, No. 2				
④11008D	11008-7022	1	Head-Cylinder, No. 1				
④11022	11022-7003	2	Case-Rocker				
④11060	11060-7001	2	Gasket-Case, Rocker				
④11061	11061-7007	1	Gasket-Cover, Crankcase				
④11061A	11061-7008	1	Gasket-Breather				
④14091	14091-7007	1	Cover				
④49015	49015-7032	1	Cover-Crankcase				
④49120	49120-7015	1	Crankcase				
④59071	59071-2079	1	Joint				
④92043	92043-7001	6	Pin				
④92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
④92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
④92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
④92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
④92139A	92139-7008	1	Bushing				
④130	130B0612	4	Bolt-Flanged (6X12)				
④130A	130B0640	4	Bolt-Flanged (6X40)				
④130B	130T0850	17	Bolt-Flanged (8X50)				
④130C	130T0875	2	Bolt-Flanged (8X75)				
④172	172G0818	4	Bolt-Stud (8X18)				

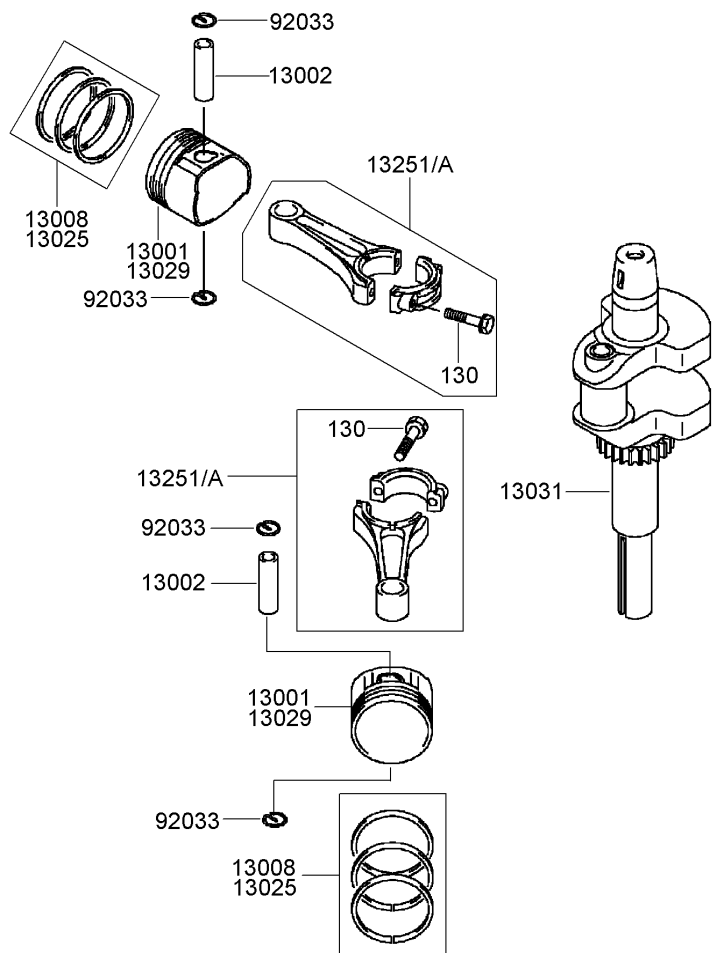


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13001	13001-7009	2	Piston-Engine				
④13002	13002-7001	2	Pin-Piston				
④13008	13008-7001	2	Ring Set-Piston				
④13025	13025-7003	1	Ring Set-Piston (L 0.50)				
④13029	13029-7005	1	Piston-Engine (L 0.50)				
④13031	13031-7033	1	Crankshaft				
④13251	13251-7007	2	Connecting Rod ASM				
④13251A	13251-7008	2	Connecting Rod ASM (0.50)				
④92033	92033-7005	4	Ring-Snap				
④130	130G0630	4	Bolt-Flanged (6X30)				

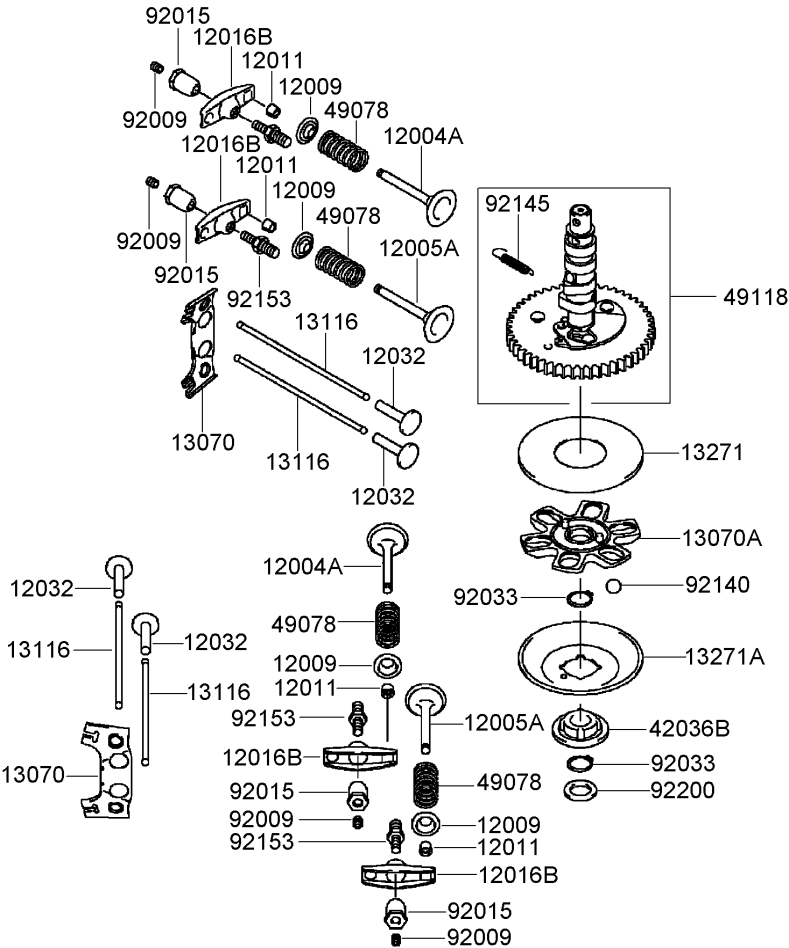


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④12004A	12004-7005	2	Valve-Intake				
④12005A	12005-7006	2	Valve-Exhaust				
④12009	12009-7001	4	Retainer-Spring, Valve				
④12011	12011-2056	8	Collet				
④12016B	12016-7008	4	Arm-Rocker				
④12032	12032-7001	4	Tappet				
④13070	13070-7001	2	Guide				
④13070A	13070-7004	1	Guide				
④13116	13116-2057	4	Rod-Push				
④13271	13271-7007	1	Plate				
④13271A	13271-7021	1	Plate-Governor				
④42036B	42036-7010	1	Sleeve				
④49078	49078-7001	4	Spring-Valve, Engine				
④49118	49118-7009	1	Camshaft				
④92009	92009-2341	4	Screw				
④92015	92015-2253	4	Nut				
④92033	92033-7001	2	Ring-Snap				
④92140	92140-7002	6	Ball				
④92145	92145-7001	1	Spring				
④92153	92153-7019	4	Bolt				
④92200	92200-7001	1	Washer				

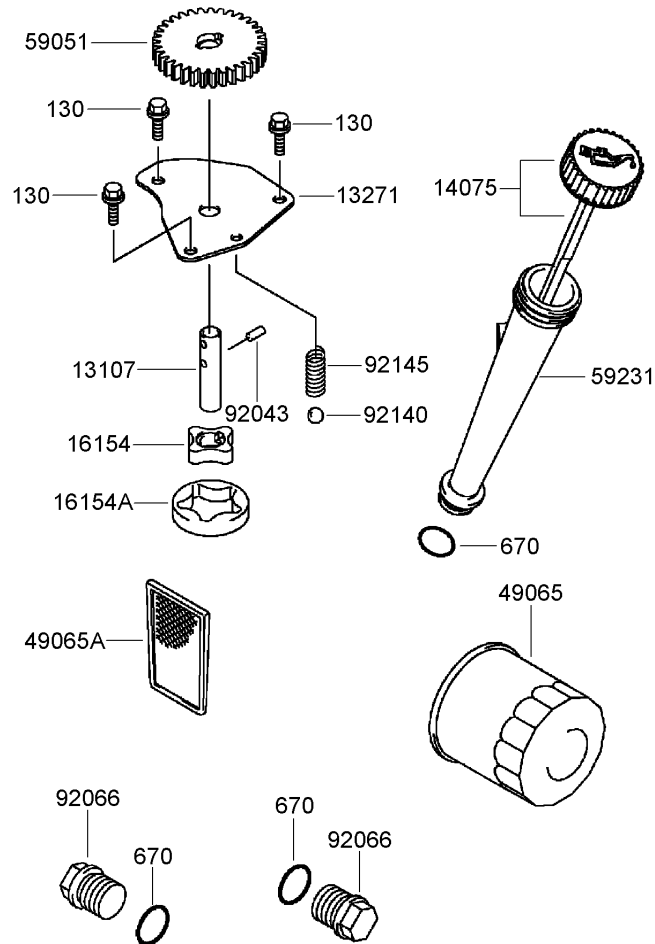


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13107	13107-7009	1	Shaft				
④13271	13271-7017	1	Plate				
④14075	14075-7009	1	Cap ASM				
④16154	16154-2053	1	Rotor-Pump (In)				
④16154A	16154-2054	1	Rotor-Pump (Out)				
④49065	49065-2078	1	Filter-Oil				
④49065A	49065-7004	1	Filter-Oil				
④59051	59051-7011	1	Gear-Spur				
④59231	59231-7003	1	Filler				
④92043	92043-7003	2	Pin				
④92066	92066-7003	2	Plug				
④92140	92140-7003	1	Ball				
④92145	92145-7002	1	Spring				
④130	130B0612	3	Bolt-Flanged (6X12)				
④670	670D2016	3	O-Ring (16Mm)				

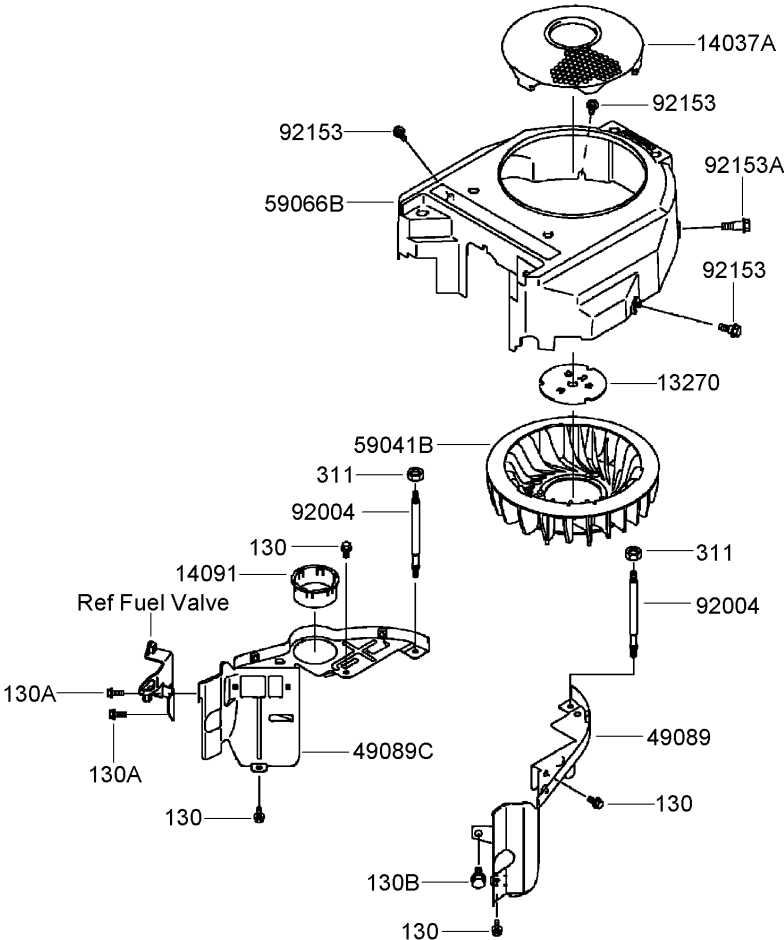

Cooling Equipment Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
❹13270	13270-7007	1	Plate				
❹14037A	14037-7025-9H	1	Screen				
❹14091	14091-7009	1	Cover				
❹49089	49089-7044	1	Shroud-Engine				
❹49089C	49089-7061	1	Shroud-Engine				
❹59041B	59041-7012	1	Fan				
❹59066B	59066-7036	1	Housing-Fan				
❹92004	92004-7007	2	Stud				
❹92153	92153-7007	3	Bolt				
❹92153A	92153-7008	1	Bolt				
❹130	130B0612	4	Bolt-Flanged (6X12)				
❹130A	130B0616	2	Bolt-Flanged (6X16)				
❹130B	130B0816	1	Bolt-Flanged (8X16)				
❹311	311F0600	2	Nut-Hex (6Mm)				

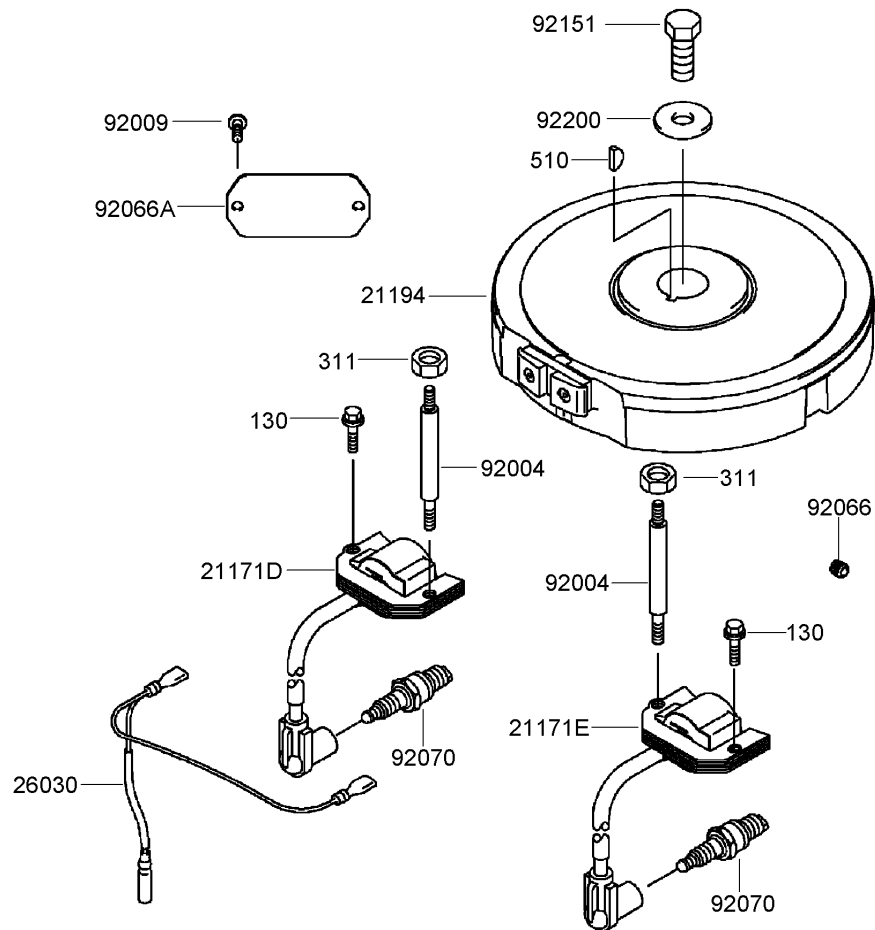

Electric Equipment Assembly

Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
④21171D	21171-7026	1	Ignition Coil ASM				
④21171E	21171-7027	1	Ignition Coil ASM				
④21194	21194-7013	1	Flywheel				
④26030	26030-7001	1	Harness				
④92004	92004-7008	2	Stud				
④92009	92009-2308	2	Screw				
④92066	92066-7002	1	Plug				
④92066A	92066-7005	1	Plug				
④92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
④92151	92151-2097	1	Bolt (12X30)				
④92200	92200-7002	1	Washer				
④130	130B0620	2	Bolt-Flanged (6X20)				
④311	311F0600	2	Nut-Hex (6Mm)				
④510	510A5100	1	Key-Woodruff				

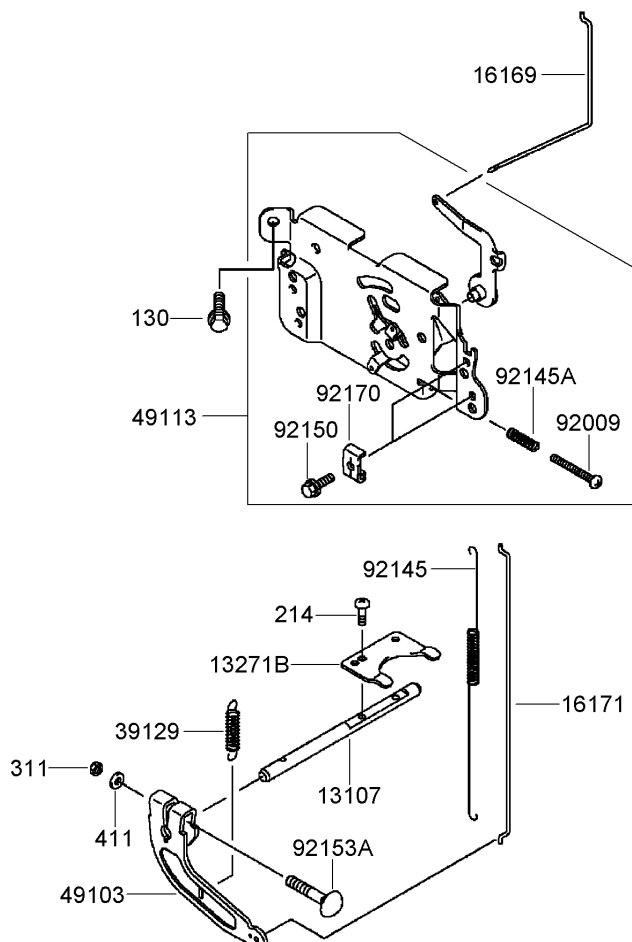

Control Equipment Assembly

Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13107	13107-7010	1	Shaft				
④13271B	13271-7032	1	Plate				
④16169	16169-7012	1	Link-Choke				
④16171	16171-7007	1	Link				
④39129	39129-7003	1	Spring-Governor				
④49103	49103-7004	1	Arm-Governor				
④49113	49113-7024	1	Panel-Control				
④92009	92009-7007	1	Screw (4X35)				
④92145	92145-7003	1	Spring				
④92145A	92145-7005	1	Spring				
④92150	92150-2182	2	Bolt (5X18)				
④92153A	92153-7033	1	Bolt (6X35)				
④92170	92170-7001	2	Clamp				
④130	130B0612	2	Bolt-Flanged (6X12)				
④214	214B0408	2	Screw-Pan (4X8)				
④311	311B0600	1	Nut-Hex (6Mm)				
④411	411B0600	1	Washer-Plain (6Mm)				

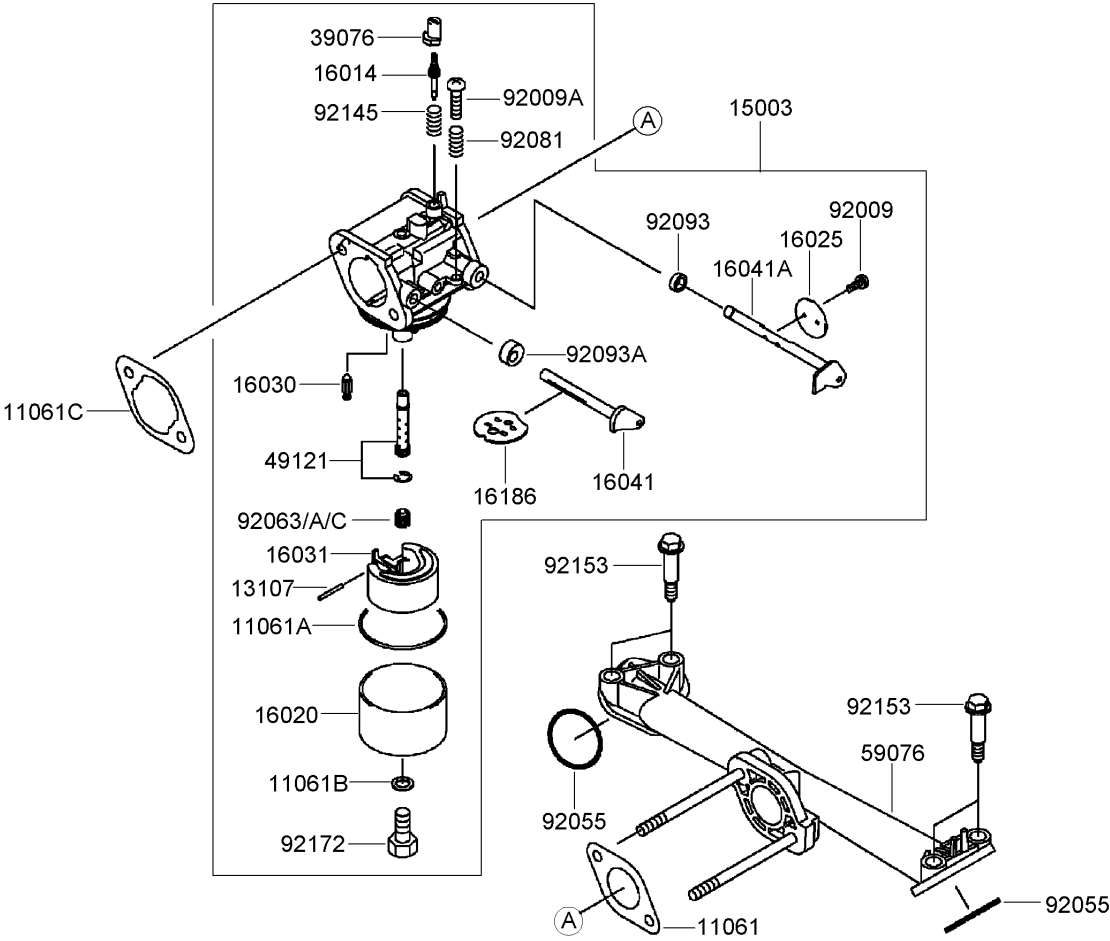


Carburetor Assembly

Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
④11061	11061-7004	1	Gasket-Insulator
④11061A	11061-7009	1	Gasket-Chamber
④11061B	11061-7010	1	Gasket-Screw
④11061C	11061-7018	1	Gasket-Cleaner, Air
④13107	13107-7018	1	Shaft
④15003	15003-7061	1	Carburetor ASM
④16014	16014-7002	1	Screw-Pilot, Air
④16020	16020-7003	1	Chamber-Float
④16025	16025-7006	1	Valve-Throttle
④16030	16030-7003	1	Valve-Float
④16031	16031-7002	1	Float
④16041	16041-7016	1	Shaft-Choke, Carburetor
④16041A	16041-7018	1	Shaft-Throttle, Carburetor
④16186	16186-7002	1	Choke Valve ASM
④39076	39076-7001	1	Limiter
④49121	49121-7001	1	Nozzle-Main
④59076	59076-7005	1	Manifold-Intake
④92009	92009-2083	2	Screw
④92009A	92009-2349	1	Screw
④92055	92055-7007	2	O-Ring (I D 31)
④92063	92063-7026	1	Jet-Main, No. 88
④92063A	92063-7028	1	Jet-Main, No. 85
④92063C	92063-7029	1	Jet-Main, No. 82
④92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
④92093	92093-2100	1	Seal
④92093A	92093-7003	1	Seal
④92145	92145-7015	1	Spring
④92153	92153-7009	4	Bolt
④92172	92172-7002	1	Screw

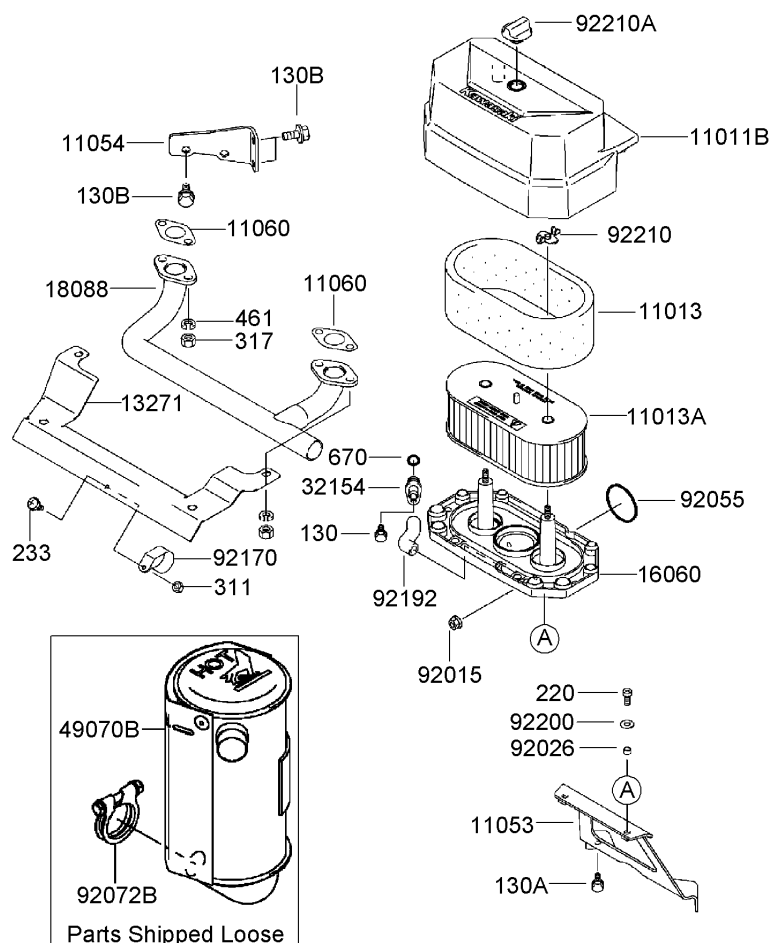

Air Filter and Muffler Assembly Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
④11011B	11011-7045	1	Case-Filter, Air
④11013	11013-7025	1	Element-Filter, Air
④11013A	11013-7031	1	Element-Filter, Air
④11053	11053-7022	1	Bracket
④11054	11054-7002-9H	1	Bracket
④11060	11060-7021	2	Gasket-Muffler
④13271	13271-7022	1	Plate
④16060	16060-7016	1	Pipe-Intake
④18088	18088-7001	1	Pipe-Exhaust
④32154	32154-7006	1	Pipe
④49070B	49070-7021	1	Muffler
④92015	92015-1193	2	Nut
④92026	92026-7001	2	Spacer (6.2X7.9X5)
④92055	92055-7015	1	O-Ring
④92072B	92072-7012	1	Band
④92170	92170-7002	1	Clamp
④92192	92192-7010	1	Tube
④92200	92200-2070	2	Washer
④92210	92210-7004	2	Nut
④92210A	92210-7019	1	Nut
④130	130B0610	1	Bolt-Flanged (6X10)
④130A	130B0612	2	Bolt-Flanged (6X12)
④130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
④220	220B0614	2	Screw-Pan, Cross (6X14)
④233	233B0416	1	Screw (4X16)
④311	311B0400	1	Nut-Hex (4Mm)
④317	317R0800	4	Nut-Hex, Small (8Mm)
④461	461F0800	4	Washer-Spring (8Mm)
④670	670B2010	1	O-Ring (10Mm)

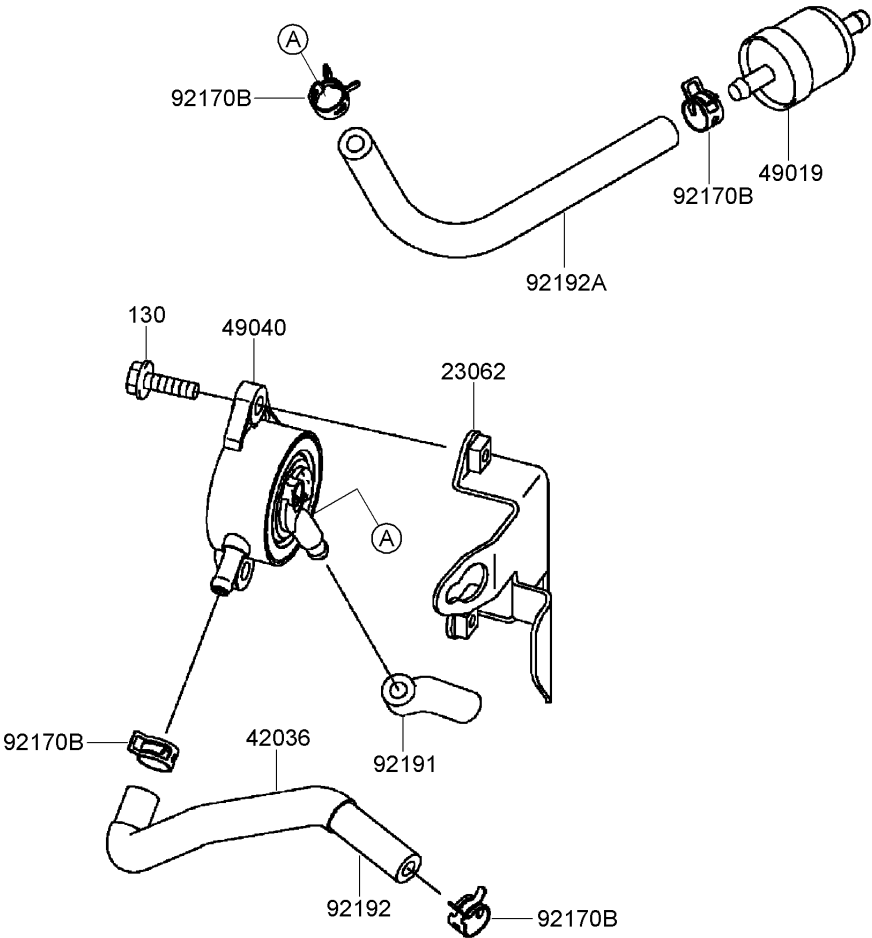

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④23062	23062-7004-9H	1	Bracket				
④42036	42036-7012	1	Sleeve				
④49019	49019-7001	1	Filter-Fuel				
④49040	49040-7001	1	Pump-Fuel				
④92170B	92170-2088	4	Clamp				
④92191	92191-7002	1	Tube				
④92192	92192-7035	1	Tube (6.35X12.7X170)				
④92192A	92192-7037	1	Tube (6.35X12.7X160)				
④130	130B0620	2	Bolt-Flanged (6X20)				

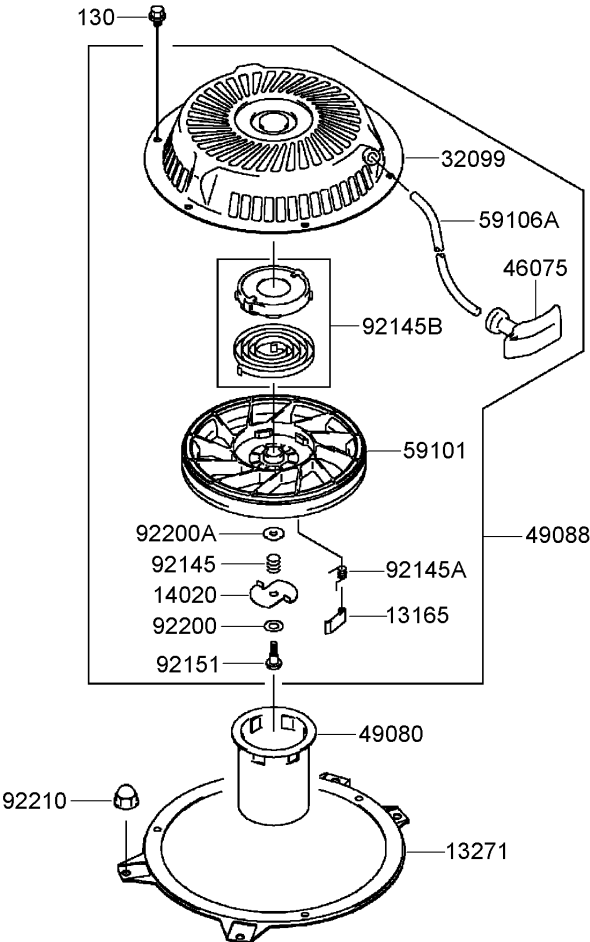

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13165	13165-7001	2	Pawl-Starter, Recoil				
④13271	13271-7003-9H	1	Plate				
④14020	14020-7001	1	Retainer				
④32099	32099-7002	1	Case-Starter, Recoil				
④46075	46075-7001	1	Grip-Starter, Recoil				
④49080	49080-7001	1	Pulley-Starting				
④49088	49088-7013	1	Starter-Recoil				
④59101	59101-7001	1	Reel-Starter, Recoil				
④59106A	59106-7005	1	Rope				
④92145	92145-7006	1	Spring				
④92145A	92145-7007	2	Spring				
④92145B	92145-7008	1	Spring				
④92151	92151-7008	1	Bolt				
④92200	92200-7004	1	Washer				
④92200A	92200-7005	1	Washer				
④92210	92210-0003	4	Nut				
④130	130B0608	3	Bolt-Flanged (6X8)				

Attachments and Accessories

For 39688 - Commercial Walk-Behind Mower, Fixed Deck, Pistol Grip, Gear Drive with 48in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Low Flow, 16.5 Inch	107-3193-03
Blade-Mid Flow, 16.5 Inch	107-3194-03
Blade-Atomic, 16.5 Inch	107-3195-03
Blade-Recycling, 16.5 Inch	107-3196-03
Bagging Enhancement Kit	108-4091
Blade-Hi Flow, 16.5 Inch (6 Pack)	110-0414
Blade-Lo Flow, 16.5 Inch (6 Pack)	110-0415
Blade-Recycler, 16.5 Inch (6 Pack)	110-0416
Blade-Atomic, 16.5 Inch (6 Pack)	110-0417
Blade-Mid Flow, 16.5 Inch (6 Pack)	110-0418
48 Inch Recycler Kit	110-2060
Weight Kit	110-2085
Soft Bag (3 Bushel)	30104
Sulky	30109

NOTES

NOTES

