



826LE Power Max Snowthrower

Model No. 38620 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Engine Assembly No. 1 Tecumseh LH318SA-156562H	 14
Auger Gearcase Assembly No. 106-4580	 4	Engine Assembly No. 2 Tecumseh LH318SA-156562H	 16
Chute Assembly	 5	Electric Starter No. 33329D Tecumseh LH318SA-156562H	 18
Chain Drive Assembly	 6	Rewind Starter No. 590749 Tecumseh LH318SA-156562H	 19
Frame Assembly	 7	Recoil Starter No. 590733 (Optional) Tecumseh LH318SA-156562H	 20
Handle Control Assembly	 9	Attachments and Accessories List	 21
Handle and Control Assembly	 10		
Chute Control Assembly	 11		
Engine Assembly	 12		
Carburetor Assembly No. 640349 Tecumseh LH318SA-156562H	 13		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|----------------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Tecumseh dealer | ❹ Included in Repair Kit 632760B |
| ❺ Included in Gasket Set 36450C | |

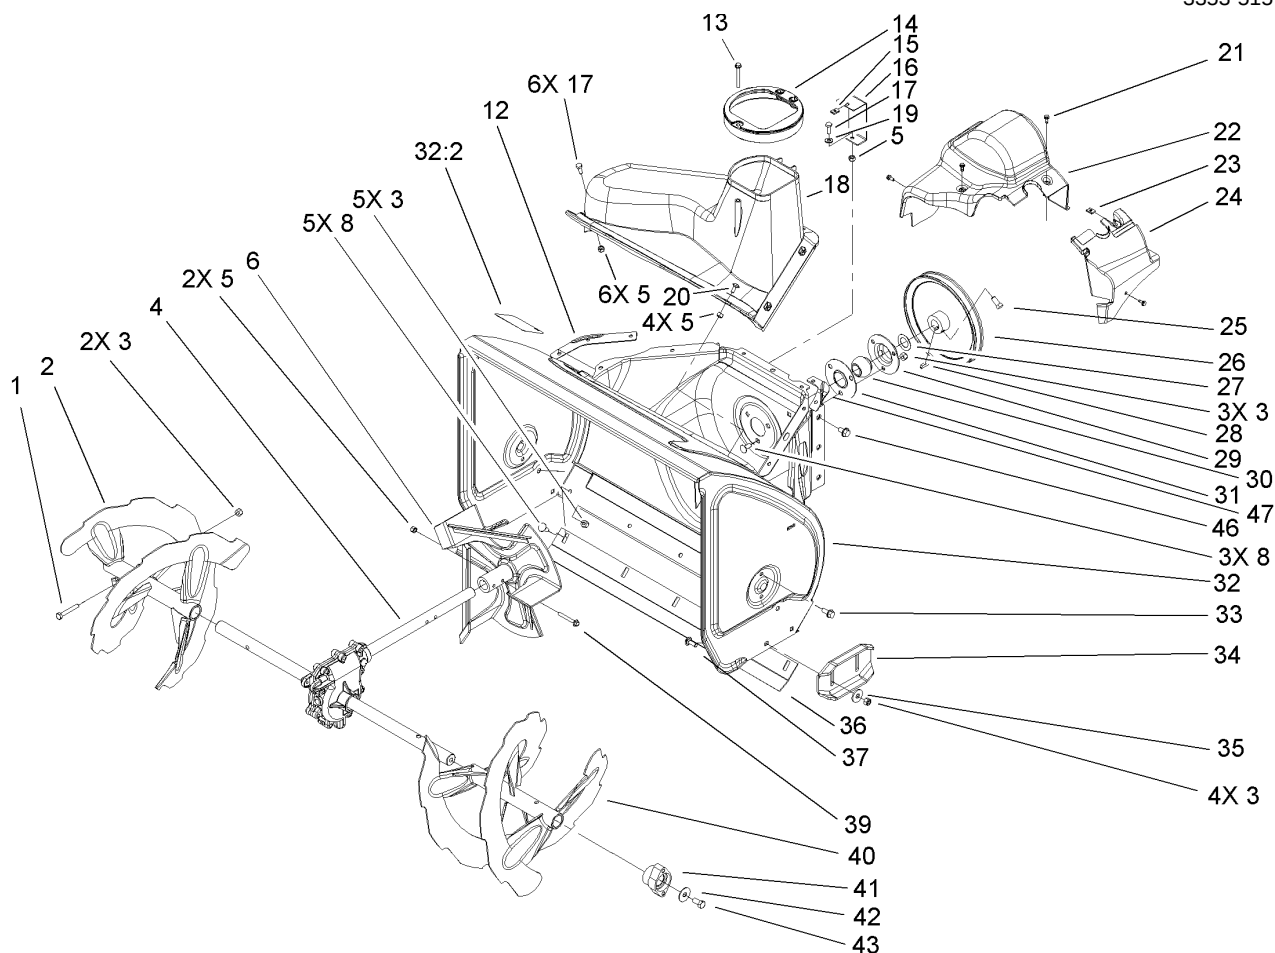

Auger and Housing Assembly


Ref	Part No.	Qty.	Description
1	322-10	2	Screw-HH
2	106-7289-03	1	RH Auger ASM
3	3296-29	14	Nut-Lock, NI
4	106-4580	1	26Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3821	1	Housing-Auger, 26 Inch
32:2	53-7670	1	Decal-Warning, Auger
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	105-9976-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7299-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal

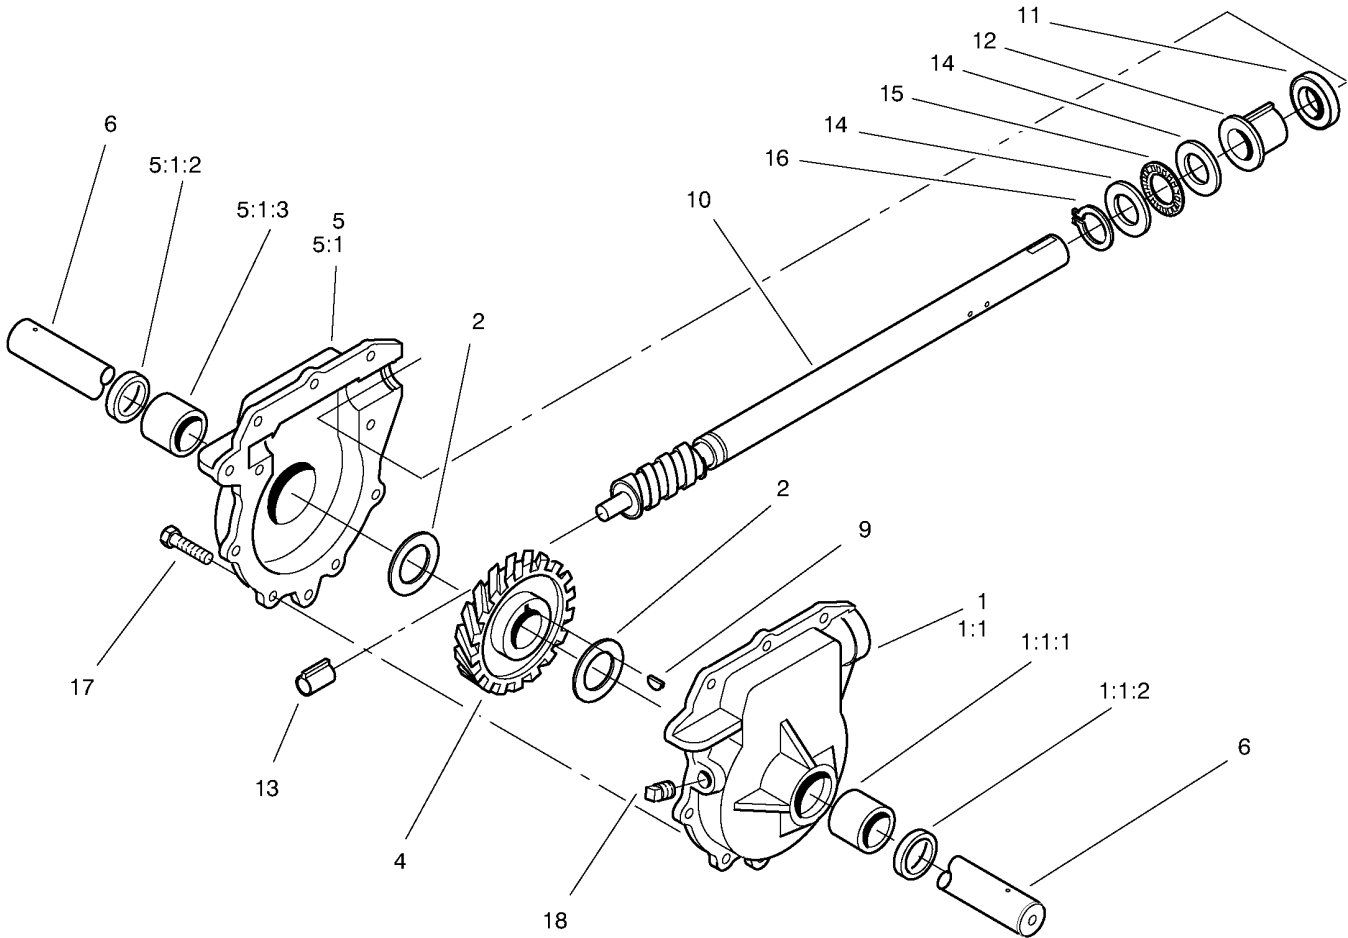 

Auger Gearcase Assembly No. 106-4580


Ref	Part No.	Qty.	Description				
1	74-1570	1	LH Auger Gearcase ASM				
2	1:1	1	Gearcase-Auger, LH				
1:1:1	256-237	1	Bushing				
1:1:2	7-0045	1	Seal-Oil				
2	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	74-1580	1	RH Auger Gearcase ASM				
5	5:1	1	Gearcase-Auger, RH				
5:1:2	7-0045	1	Seal-Oil				
5:1:3	256-237	1	Bushing				
6	106-4579	1	Shaft-Auger				
9	3257-10	1	Key-Woodruff				
10	66-7811	1	Shaft-Impeller				
11	253-149	1	Seal-Oil				
12	37-6560	1	Bushing-Input				
13	62-1150	1	Bushing-Worm				
14	252-78	2	Bearing-Thrust				
15	252-76	1	Bearing-Thrust				
16	32151-33	1	Ring-Retaining, EXT				
17	32144-110	9	Screw-HWH				
18	281-1	1	Plug-Pipe, SQH				

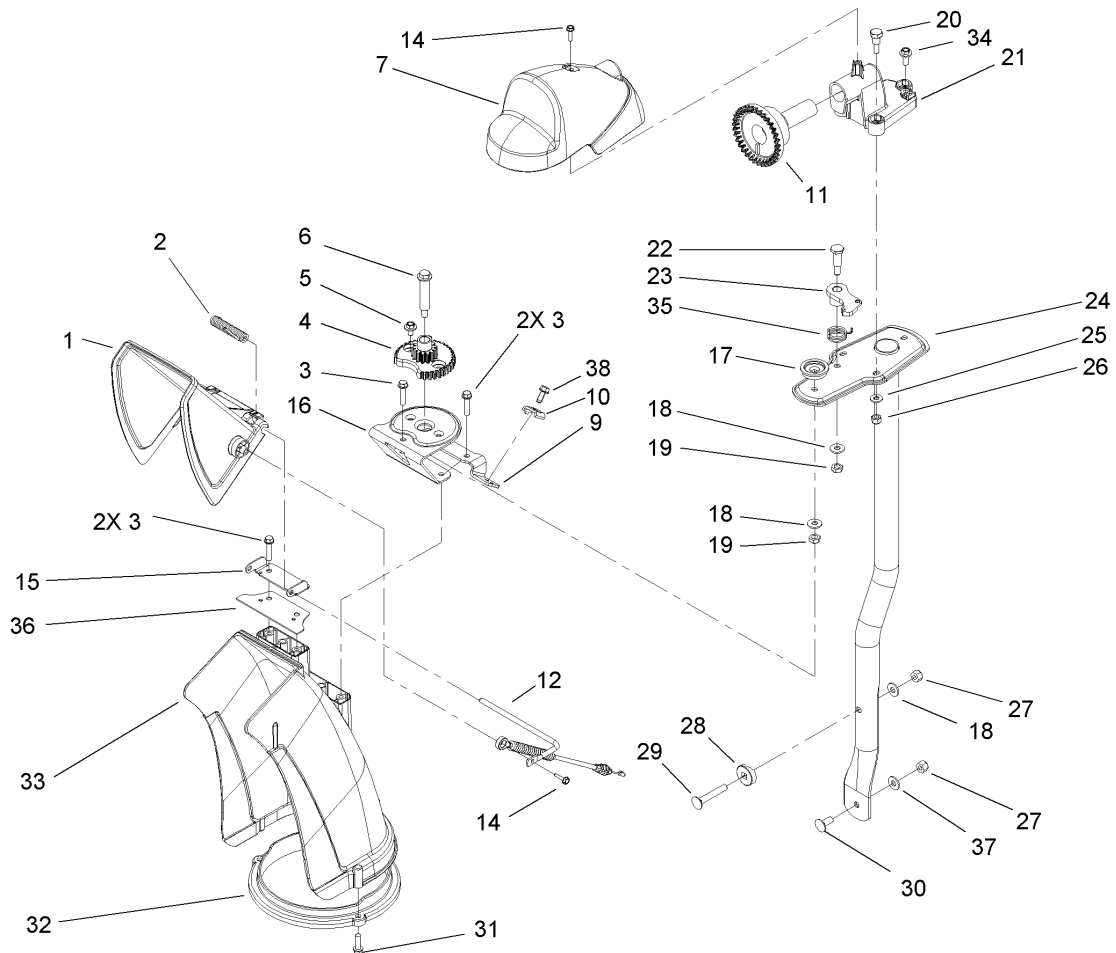 

Chute Assembly


Ref	Part No.	Qty.	Description
1	106-4587	1	Deflector-Chute
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	2	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
34	46-6811	1	Screw-HWH
35	106-4475	1	Spring-Torsion
36	107-1019	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

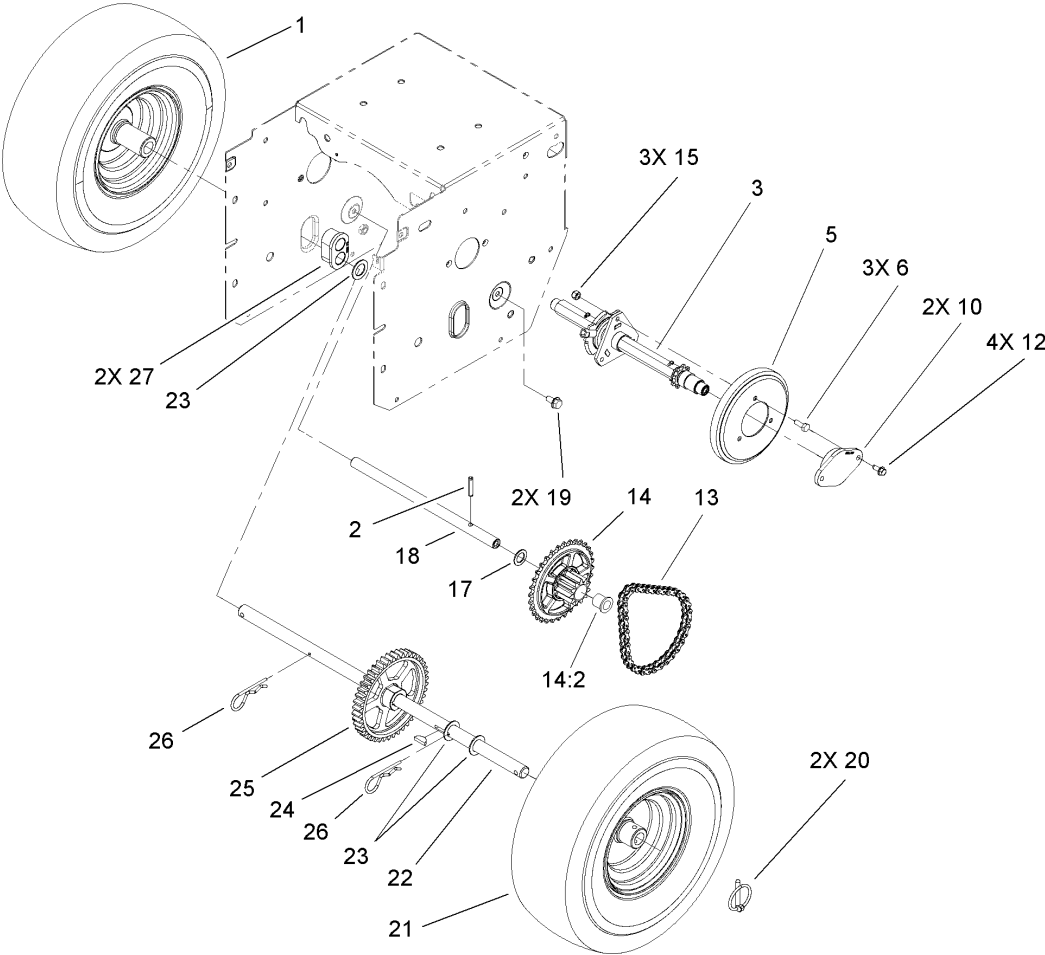 

Chain Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-3042	1	Tire	27	106-4558	2	Bearing-Axle
1	107-3043	1	Rim-Tire				
2	32121-9	1	Pin-Roll, Slotted				
23		1	Hexshaft ASM				
5	106-4480	1	Wheel-Friction				
6	321-4	3	Screw-HH				
10	108-2981	2	Retainer-Bearing				
12	32144-10	4	Screw-HWH				
13	108-0016	1	Chain-Roller				
13	2710-6	1	Link-Connecting				
14	108-0013	1	Sprocket ASM				
14:2	108-2974	2	Bushing-Flange				
15	3296-42	3	Nut-Lock, NI				
17	107-3041	1	Washer-Flat				
18	106-4592	1	Shaft-Intermediate				
19	32144-14	2	Screw-HWTF				
20	107-3039	2	Klik Pin ASM				
21	107-3042	1	Tire				
21	107-3043	1	Rim-Tire				
22	106-4449	1	Shaft-Axle				
23	3-8664	3	Washer-Thrust				
24	3257-7	1	Key-Woodruff				
25	106-4572	1	Gear-Axle, 44 Tooth				
26	3290-343	2	Pin-Hair				

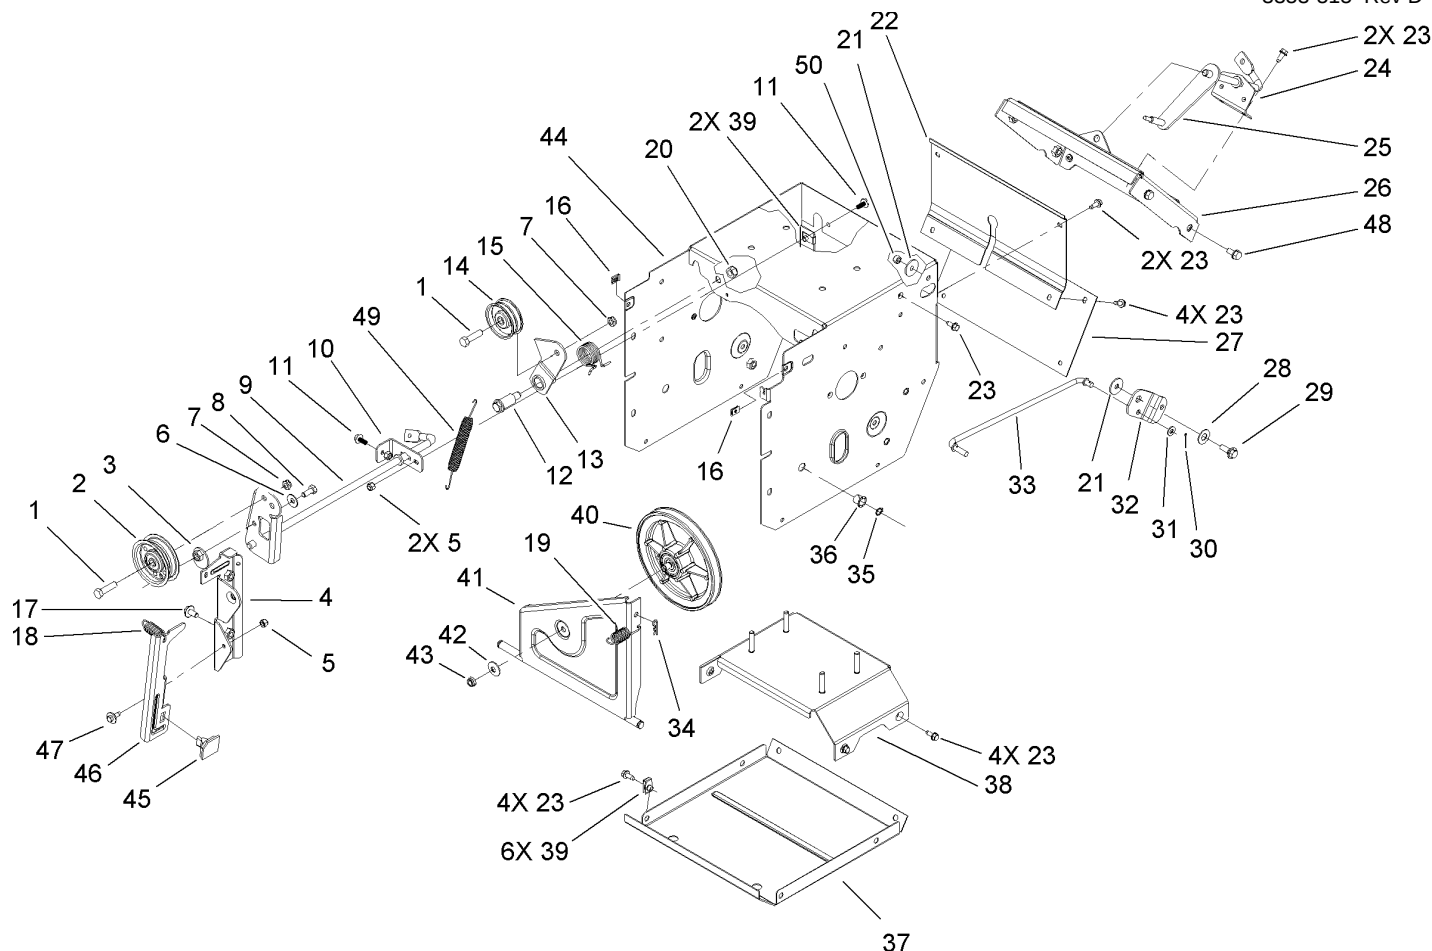 

Frame Assembly


Ref	Part No.	Qty.	Description
1	323-8	2	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	107-1022	1	Bolt-Shoulder
13	108-0011	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-0010	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HH
18	107-1045	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	106-4556-01	1	Cover-Upper
23	32144-10	17	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift

Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	106-7315	1	Brace Frame ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	108-0019-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF

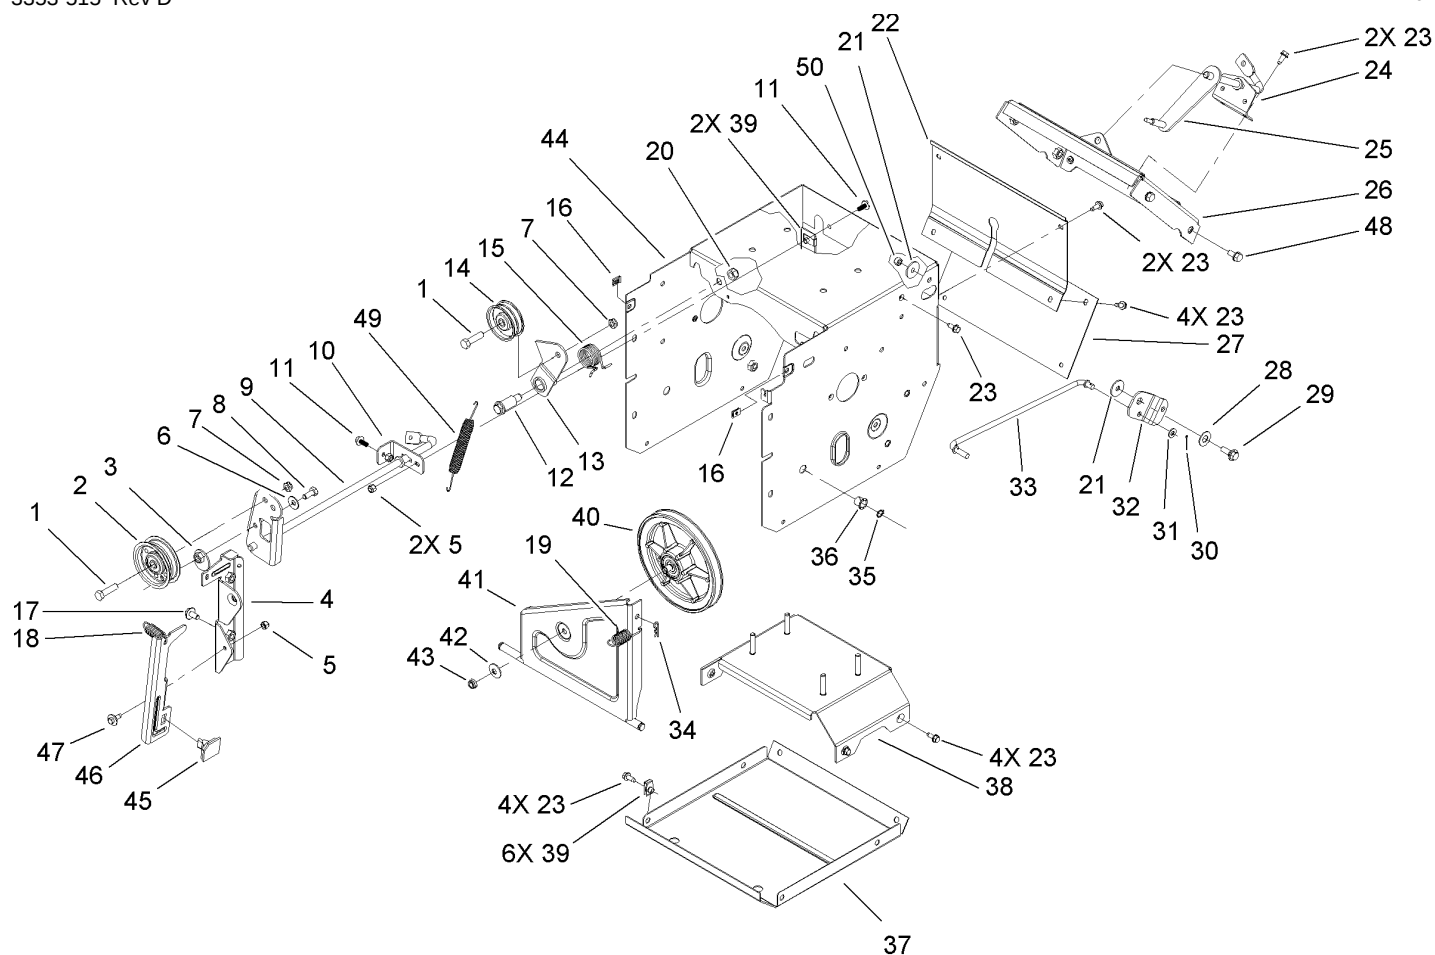 

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
49	108-2976	1	Spring-Extension
50	3296-29	1	Nut-Lock, NI

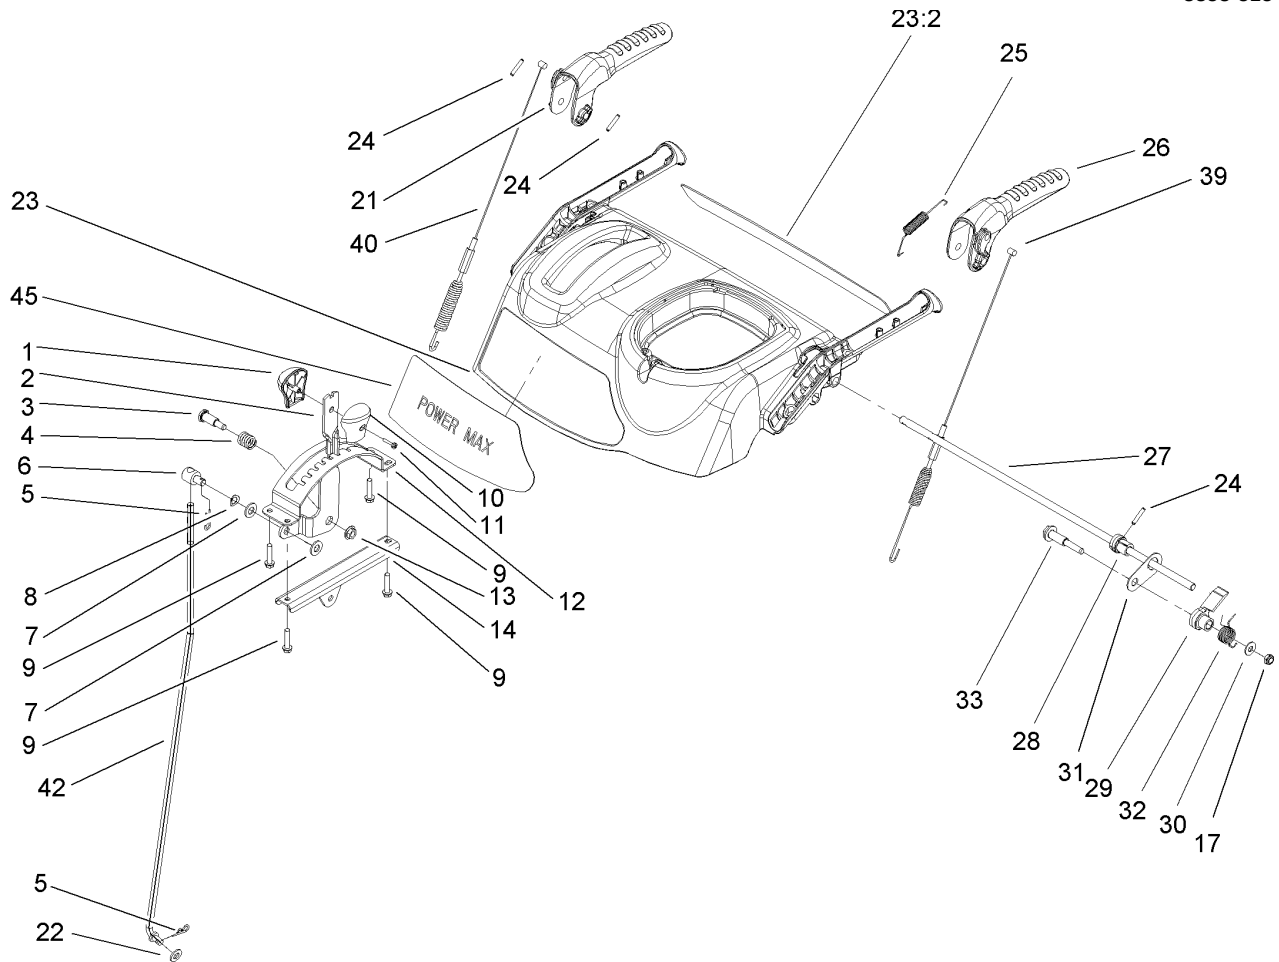 

Handle Control Assembly


Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	107-3017	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	101161	1	Trunnion
7	3256-24	2	Washer-Flat
8	612586	1	Washer-Spring
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
17	3296-72	1	Nut-Lock, NI
21	106-4413	1	Lever-Augur
22	3256-38	1	Washer-Flat
23	107-3825	1	Control Panel ASM
23:2	106-4521	1	Decal-Control Panel
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout

Ref	Part No.	Qty.	Description
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
39	106-4563	1	Cable-Traction
40	106-4599	1	Cable-Augur
42	107-1005	1	Rod-Shift
45	106-4513	1	Decal

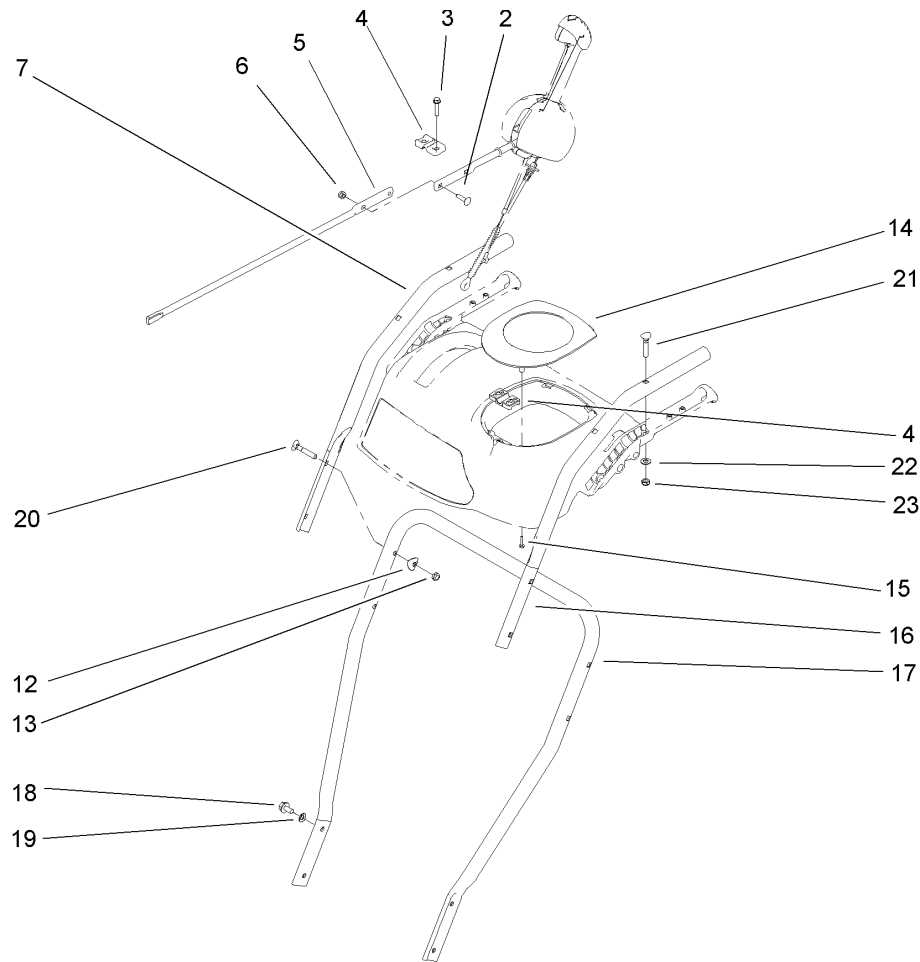 


Handle and Control Assembly

Ref	Part No.	Qty.	Description				
2	3229-30	2	Screw-CARR				
3	46-8092	2	Screw-Plastite				
4	105-9987	2	Support-Rod				
5	106-7283	1	Rod-Chute, Front				
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWHTF				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
21	107-3018	4	Screw-Handle				
22	3256-70	4	Washer-Flat				
23	3296-72	4	Nut-Lock, NI				

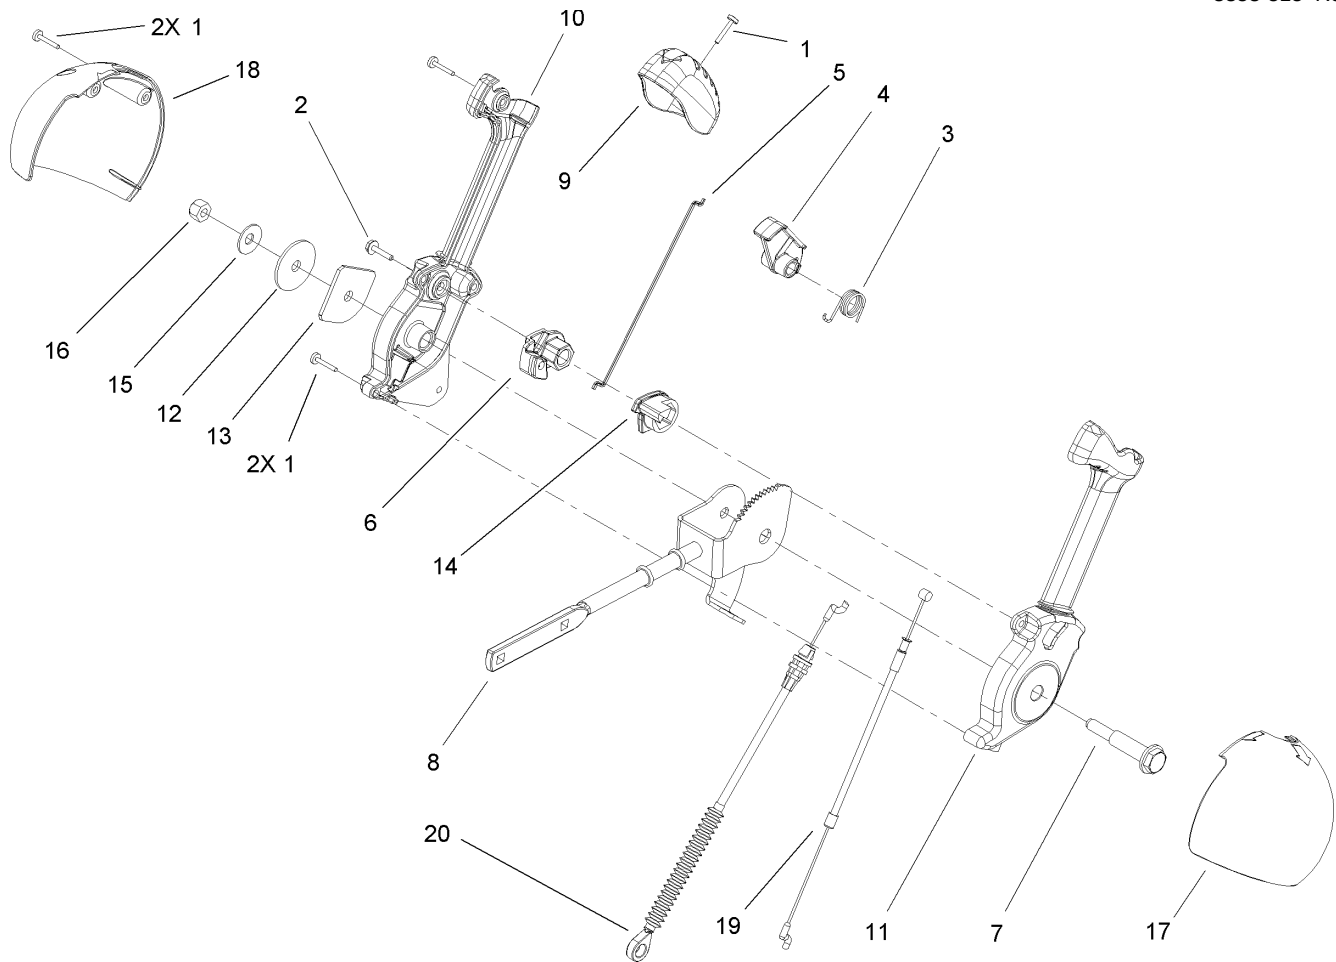 


Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	5	Screw-PPH				
2	98-1375	1	Screw-HWH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				

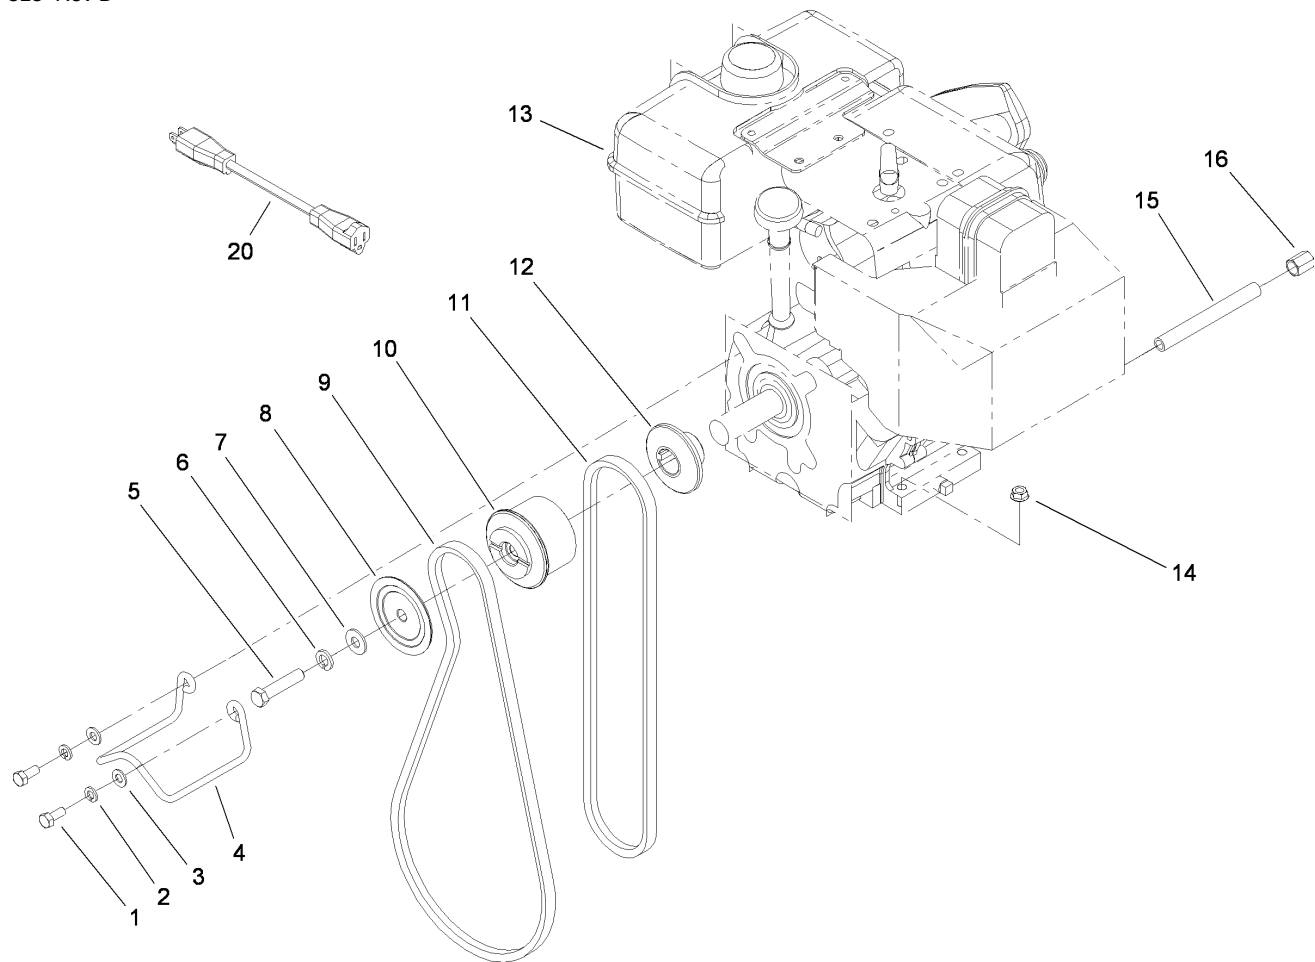 

Engine Assembly

Ref	Part No.	Qty.	Description				
1	3210-3	2	Screw-HH				
2	3253-4	2	Washer-Lock				
3	3256-23	2	Washer-Flat				
4	107-3835	1	Guide-Belt				
5	3212-8	1	Screw-HH				
6	3253-6	1	Washer-Lock				
7	3256-4	1	Washer-Flat				
8	62-0940	1	Sheave-Half, Impeller				
9	106-4498	1	Belt-V				
10	106-7333	1	Pulley-Engine, Center				
11	94-8812	1	V Belt-Traction				
12	106-7334	1	Sheave-Half, Traction				
13		1	Engine-Tecumseh, LH318Sa-156562H				
14	32128-20	4	Nut-HF				
15	289-34	1	Nipple-Pipe				
16	288-2	1	Cap-Pipe				
20	99-9300	1	Cord-Extension				

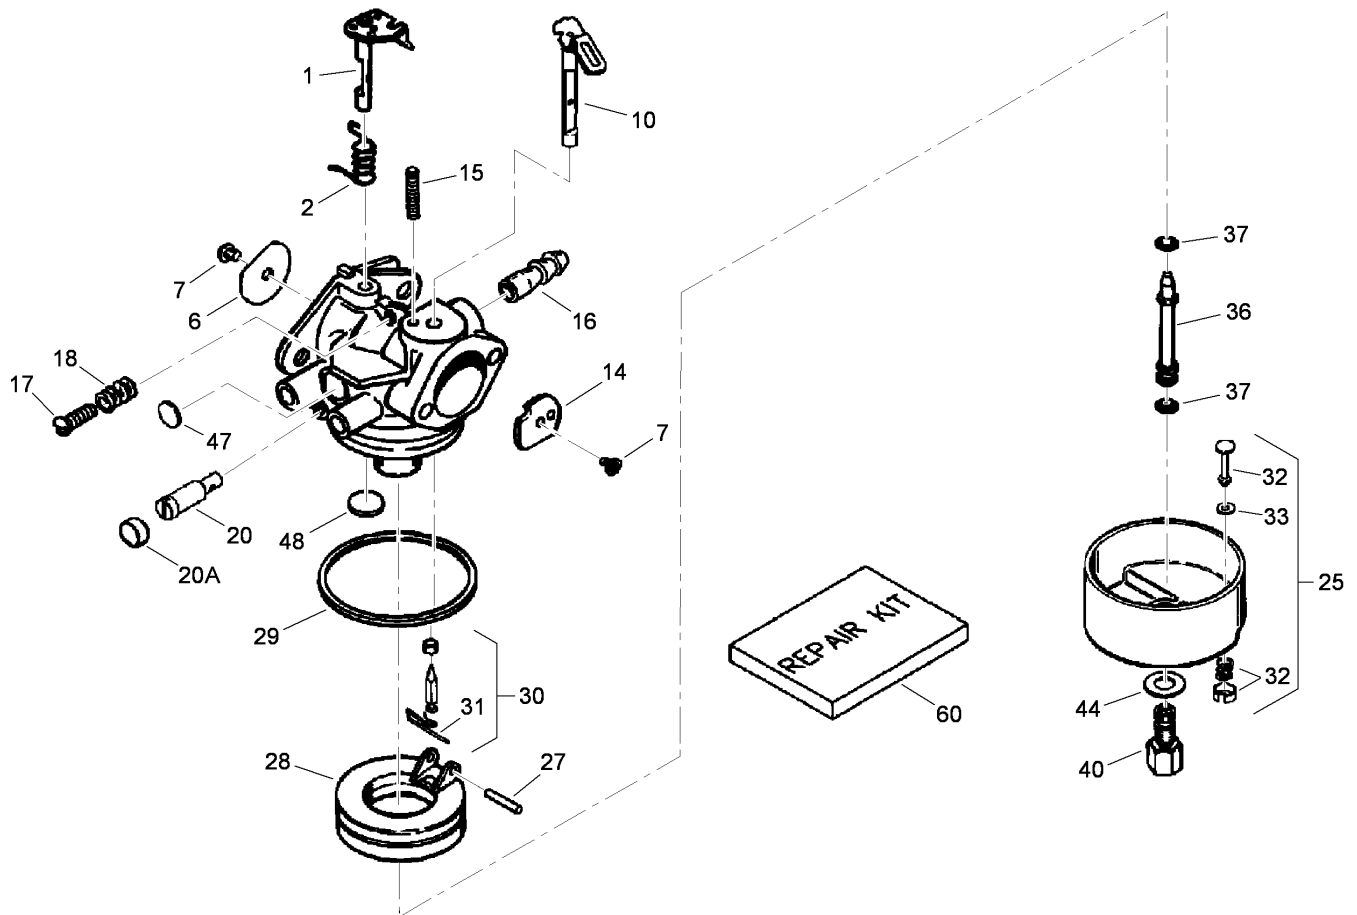 

Carburetor Assembly No. 640349


Tecumseh LH318SA-156562H

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③0	640349	1	Carburetor (Includes Part No. 33263)	③36	640113	1	Tube-Nozzle
③1	631776A	1	Throttle Shaft And Lever ASM	③④37	632547	2	O-Ring
③2	631970	1	Spring-Return, Throttle	③40	640128	1	Nut-Bowl, High Speed
③6	640109	1	Shutter-Throttle	③44	27110	1	Washer-Bowl Nut
③7	650506	2	Screw-Shutter	③④47	630748	1	Plug-Welch, Idle Mixture Well
③10	632112	1	Choke Shaft And Lever ASM	③④48	631027	1	Plug-Welch, Atmospheric Vent
③④14	632174	1	Shutter-Choke	③60	632760B	1	Carburetor Repair Kit
③15	630735	1	Spring-Positioning, Choke				
③16	632164	1	Fitting-Fuel				
③17	651025	1	Screw-Throttle Crack And Idle Speed				
③18	630766	1	Spring-Tension				
③20	640027	1	Screw-Restrictor, Idle				
③20A	640200	1	Cap-Screw, Restrictor Idle				
③25	631951	1	Float Bowl ASM (Includes 32 And 33)				
③④27	631024	1	Shaft-Float				
③28	632802	1	Float (Plastic)				
③④29	631028	1	O Ring-Bowl, Float				
③④30	631021A	1	Inlet Needle, Seat And Clip (Includes 31)				
③31	631022	1	Clip-Spring				
③32	27136A	1	Bowl Drain ASM				
③④33	27554	1	Gasket-Plunger, Drain				

Engine Assembly No. 1

Tecumseh LH318SA-156562H

 Tecumseh LH318SA-156562H

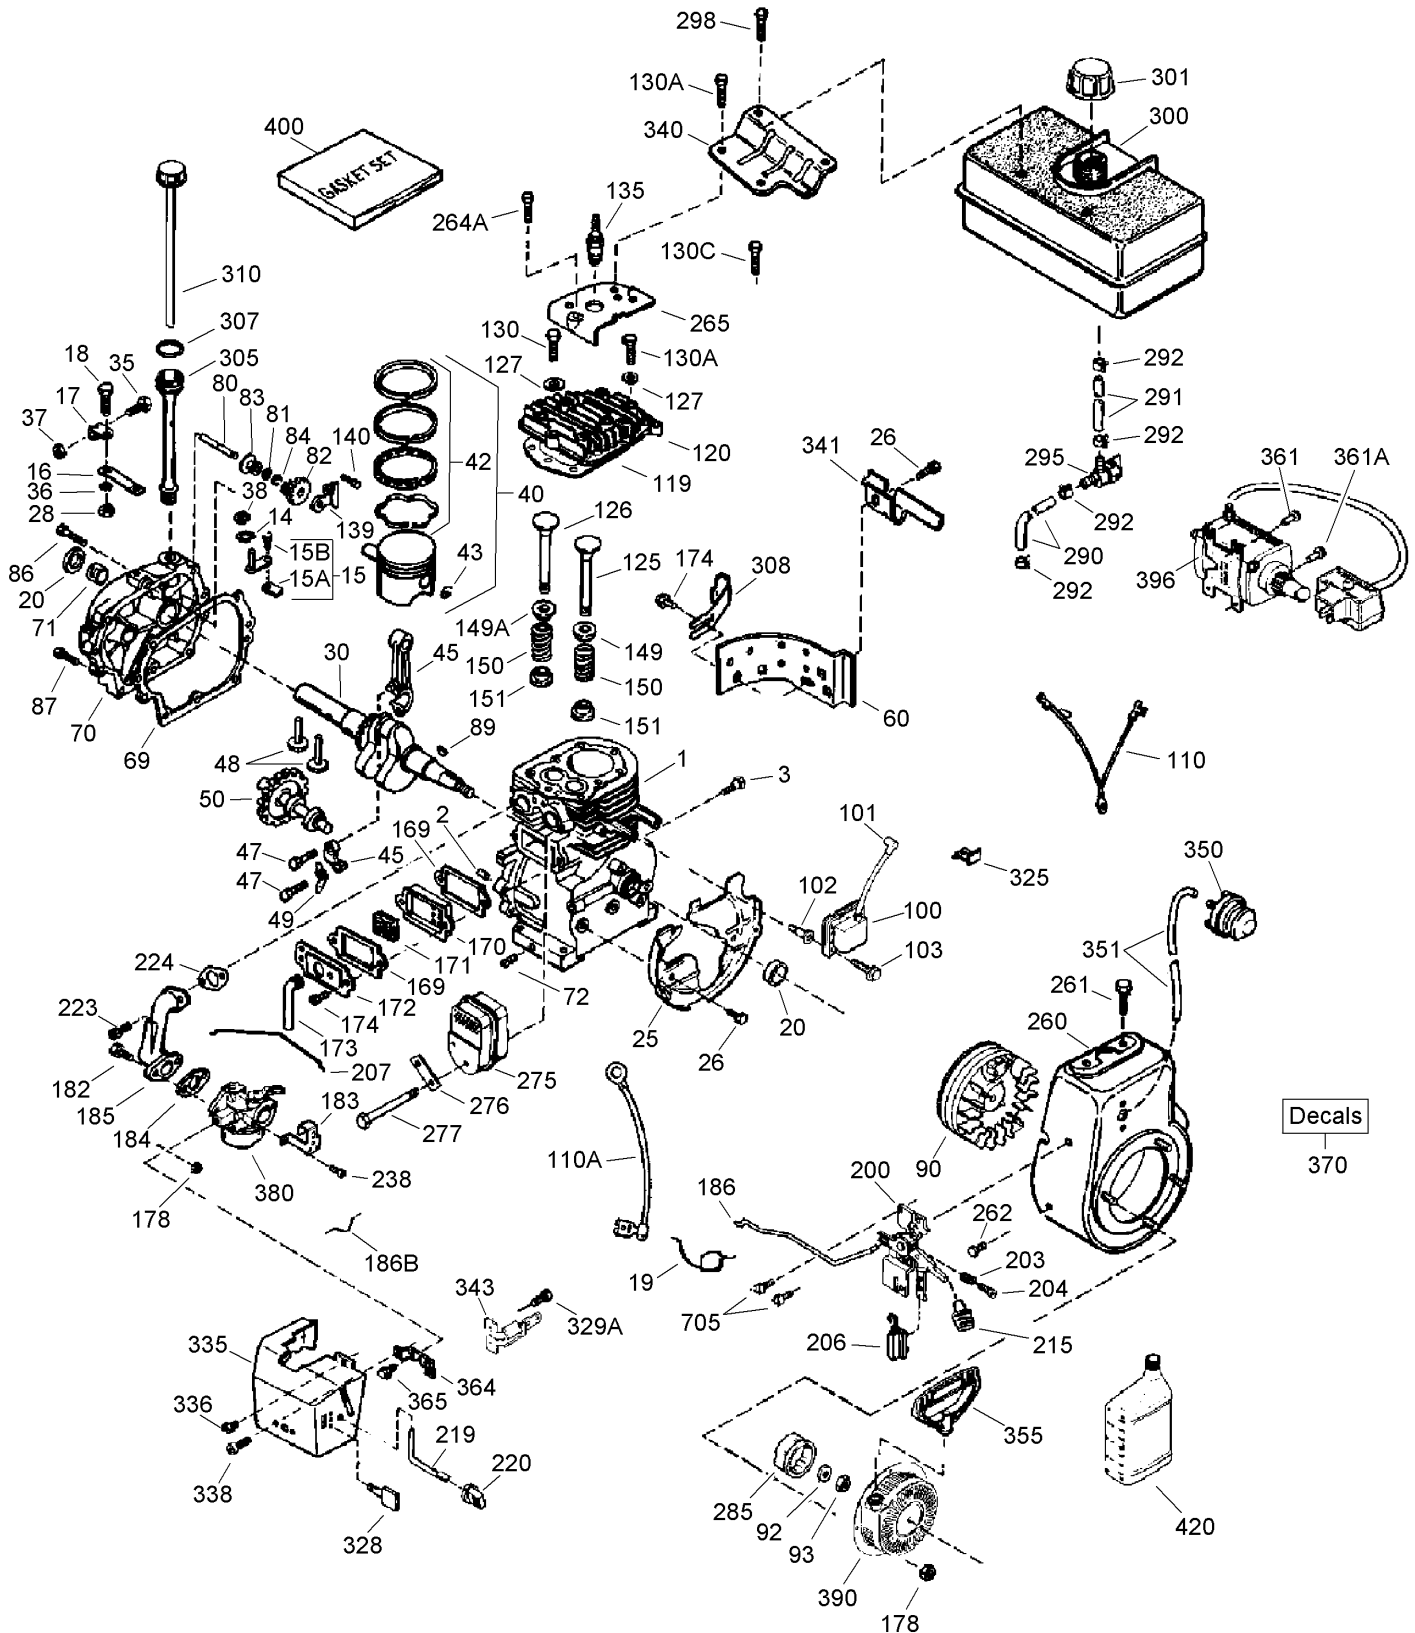


Engine Assembly No. 1

Tecumseh LH318SA-156562H

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	35385	1	Cylinder ASM (Includes 2, 20, 72, 72A) (3-1/8 Bore)	❶102	651024	2	Stud-Mounting, Solid State
❶2	27652	2	Pin-Dowel	❶103	651007	2	Screw (T-15, 10-24 X 15/16)
❶3	650820	2	Screw (1/4-20X1/2)	❶110	35187	1	Wire-Ground
❶14	28277	1	Washer-Flat	❶110A	37047	1	Wire-Ground
❶15	30699C	1	Rod-Governor (Includes 15A, 15B)	❶❶119	36448	1	Gasket-Head, Cylinder
❶15A	30700	1	Yoke-Governor	❶120	36449	1	Head-Cylinder
❶15B	650494	1	Screw (6-40X5/16)	❶125	27878A	1	Valve-Exhaust (STD.)(Includes 151)
❶16	33454A	1	Lever-Governor	❶125	27880A	1	Valve-Exhaust (1/32 Os) (Includes 151)
❶17	29916	1	Clamp-Lever, Governor	❶126	34035	1	Valve-Intake (STD) (Includes 151)
❶18	651028	1	Screw (T-15, 8-32X7/16)	❶127	650691	2	Washer-Flat
❶19	34663	1	Spring-Throttle	❶130	6021A	7	Screw (5/16-18X1-1/2)
❶20	35319	2	Seal-Oil	❶130A	650727	2	Screw (5/16-18X1-25/32)
❶25	37853	1	Baffle-Housing, Blower	❶130C	651055	2	Screw (5/16-18X39/64)
❶26	650561	3	Screw (1/4-20X19/32)	❶135	35395	1	Spark Plug-Resistor (R J19 L M) (Also Available In Packaged Part #740081)
❶28	30322	1	Nut-Lock (8-32)	❶139	33369	1	Bracket-Gear, Governor
❶30	35571A	1	Crankshaft	❶140	650836	2	Screw (10-24X1/2)
❶35	29826	1	Screw (10-32X3/4)	❶149	27882	1	Cap-Spring, Valve
❶36	29918	1	Washer-Lock (8)	❶149A	35862	1	Cap-Spring, Valve
❶37	29216	1	Nut-Lock (10-32)	❶150	27881	2	Spring-Valve
❶38	29642	1	Ring-Retaining	❶151	32581	2	Keeper-Spring, Valve
❶40	40011	1	Piston-Pin And Ring Set (STD)	❶❶169	27896A	2	Gasket-Cover, Valve
❶40	40012	1	Piston- Pin And Ring Set (.010 O S)	❶170	28423	1	Body-Breather
❶42	40013	1	Ring Set (STD)	❶171	28424	1	Element-Breather
❶42	40014	1	Ring Set (.010 O S)				
❶43	27888	2	Ring-Retaining, Piston Pin				
❶45	36897	1	Connecting Rod ASM (Includes 47, 49)				
❶47	651033	2	Bolt-Rod, Connecting				
❶48	34034	2	Lifter-Valve				
❶49	36896	1	Dipper-Oil				
❶50	35375	1	Camshaft (Mcr)				
❶60	33273A	1	Extension-Housing, Blower				
❶❶69	37342	1	Gasket-Cover, Cylinder				
❶70	37847	1	Cylinder Cover (Includes 71, 75, 80-84)				
❶71	35377	1	Bushing-Crankshaft				
❶72	27642	1	Plug-Drain, Oil (SQH 1/4-18)				
❶80	37587	1	Shaft-Governor				
❶81	651080	1	Washer				
❶82	37588	1	Governor Gear ASM (Includes 81)				
❶83	30588A	1	Spool-Governor				
❶84	29193	1	Ring-Retaining				
❶86	650833	7	Screw (1/4-20X1-3/16)				
❶87	650832	1	Screw (1/4-20X1-11/16)				
❶89	32589	1	Key-Flywheel				
❶90	611091	1	Flywheel (W/Ring Gear)				
❶92	650880	1	Washer-Belleville				
❶93	650881	1	Nut-Flywheel				
❶100	35135A	1	Ignition-Solid State (Includes 101)				
❶101	610118	1	Cover-Spark Plug				

Engine Assembly No. 2

 
Tecumseh LH318SA-156562H

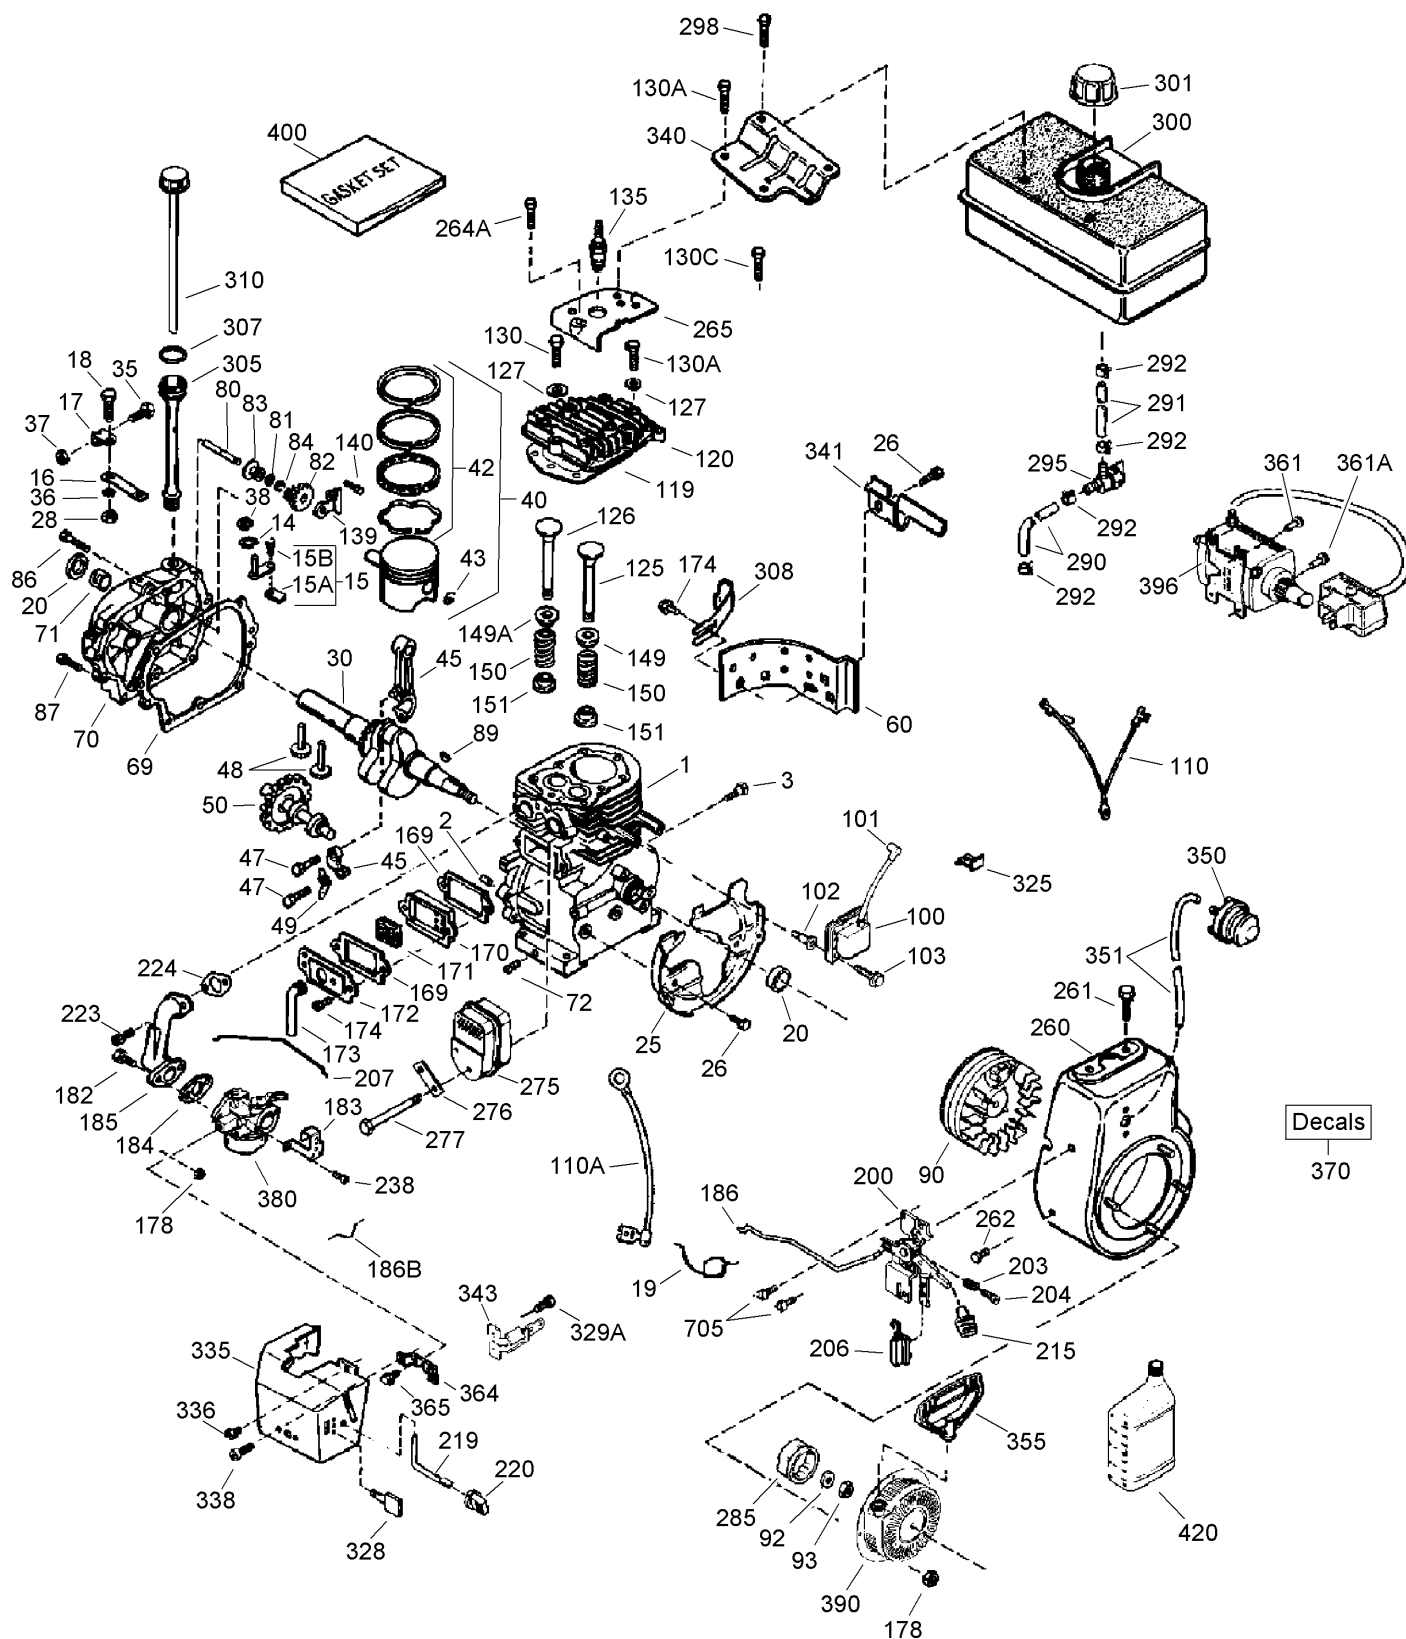

Engine Assembly No. 2


Tecumseh LH318SA-156562H

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③172	28425	1	Cover-Valve	③341	34155	1	Bracket-Tank, Fuel
③173	35350	1	Tube-Breather	③343	35079A	1	Bracket-Switch, Key (Includes 343A)
③174	650128	3	Screw (10-24X1/2)	③350	570682A	1	Primer ASM (Also Available In Packaged Part #740101)
③178	29752	6	Nut And Lock Washer (1/4-28)	③351	32180C	1	Line-Primer
③182	30088A	2	Screw (1/4-28X1)	③355	590574	1	Handle-Starter, Mitten Grip (Also Available In Packaged Part #740053B)
③183	34587A	1	Bracket-Choke	③361	650990	2	Screw (T-30, 1/4-20X15/32)
③⑤184	33263	1	Gasket-Carburetor To Intake Pipe	③361A	650819	1	Screw (6-32X2-1/2)
③185	33877	1	Pipe-Intake	③364	37659	1	Bracket-Cover, Carburetor
③186	34667	1	Link-Governor	③365	650767	2	Screw (8-32X27/64)
③186B	36652	1	Spring-Choke	③370	35077	1	Decal-Speed Control And Choke
③200	34677	1	Bracket-Control	③370	36534A	1	Instruction Decal-Caution, Read Owner Manual
③203	31342	1	Spring-Compression	③370	36501	1	Decal-Primer, International Symbol
③204	651029	1	Screw (T-10, 5-40X7/16)	③370	36695	1	Decal-Tecumseh Logo For Top Of Recoil Starter
③206	610973	2	Terminal	③370	37119	1	Decal-Warning (Bilingual)
③207	33878	1	Link-Throttle	③380	640349	1	Carburetor (Includes 184)
③215	35440	1	Knob-Control	③390	590749	1	Starter-Rewind (Note: This Engine Could Have Been Built With Starter 590733)
③219	34586	1	Rod-Choke	③396	33329D	1	Starter-Electric (110 Volt)
③220	35438	1	Knob-Control	③400	36450C	1	Gasket Set
③223	650378	2	Screw (T-30, 5/16-18X1-3/32)	③420	730226A	1	Oil-Engine, S A E 5W30
③⑤224	27915A	1	Gasket-Pipe, Intake	③705	28942	2	Screw (10-32 X 3/8)
③238	28820	2	Screw (10-32 X 1/2)	①③	730281	1	Winter Maintenance Kit (Includes 5W30 Synthetic Oil)
③260	35447A	1	Housing-Blower	①③	730295	1	Winter Maintenance Kit (Includes 0W30 Synthetic Oil)
③261	650788	2	Screw (5/16-18X3/4)				
③262	651084	2	Screw (5/16-18X9/16)				
③264A	650802	1	Screw (1/2-20X5/8)				
③265	33272D	1	Cover-Head, Cylinder (Black)				
③275	35056	1	Muffler				
③276	31588	1	Plate-Locking				
③277	651002	2	Screw (5/16-18X4-3/16)				
③285	35985C	1	Cup-Starter				
③290	29774	1	Line-Fuel (8.62)				
③291	30705	1	Line-Fuel				
③292	26460	4	Clamp-Line, Fuel				
③295	35857	1	Valve-Shut-Off, Fuel (Includes 292) (Also Available In Packaged Part #740073)				
③298	650665	2	Screw (1/4-15X7/8)				
③300	34156A	1	Tank-Fuel (Includes 292, 301)				
③301	37844	1	Cap-Fuel (Black) (1-1/2 Id) (Also Available In Packaged Part #740041B)				
③305	36877	1	Tube-Fill, Oil				
③307	35499	1	O-Ring				
③308	35539	1	Clip-Tube, Fill				
③310	37869	1	Dipstick				
③325	29443	1	Clip-Wire				
③328	35062	2	Key-Ignition (Also Available In Packaged Part #740077)				
③329A	651060	1	Screw (8-32 X 23/64)				
③335	36547	1	Cover-Carburetor (Black)				
③336	650765	1	Screw (10-32X1/2)				
③338	650821	2	Screw (10-32 X 1/2)				
③340	34154	1	Bracket-Tank, Fuel (Black)				

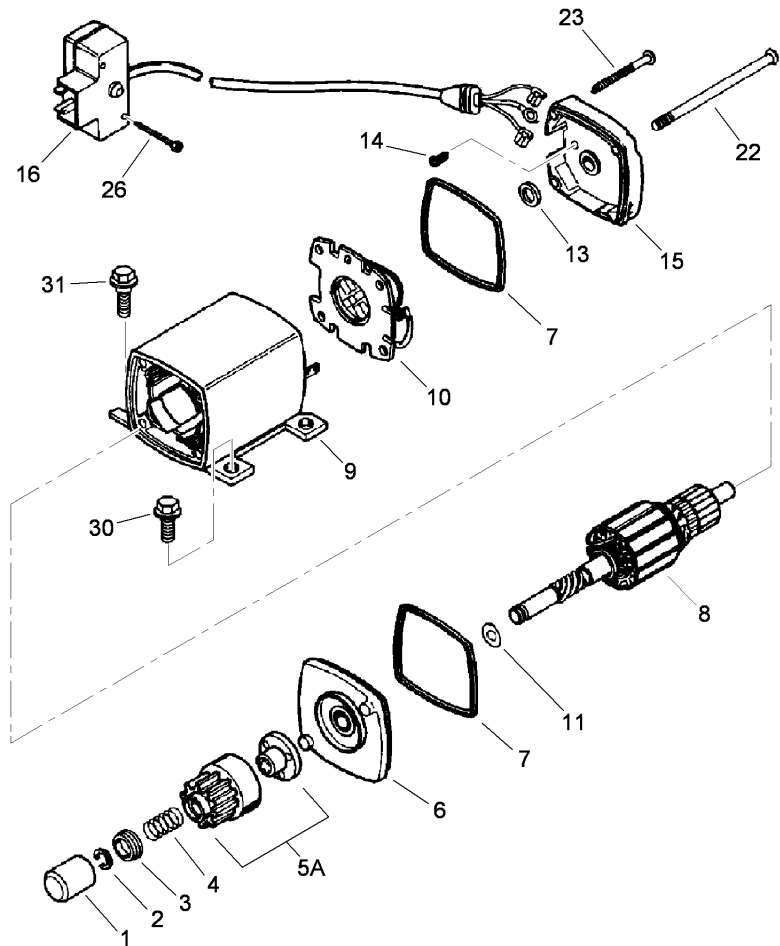 

Electric Starter No. 33329D
Tecumseh LH318SA-156562H






Ref	Part No.	Qty.	Description				
❶0	33329D	1	Starter-Electric (110 Volt)				
❶1	33451	1	Cover-Dust				
❶2	33842	1	Ring-Retainer				
❶3	33430	1	Retainer-Spring				
❶4	33431	1	Spring-Anti Drift				
❶5A	37050	1	Gear And Nut (Includes 2)				
❶6	35449	1	Drive End Cap ASM (Includes 7)				
❶7	35450	2	O-Ring				
❶8	35915	1	Armature				
❶9	35451A	1	Housing ASM				
❶10	35452A	1	Brush Card ASM				
❶11	35911	1	Washer-Thrust				
❶13	590500	1	Washer-Thrust				
❶14	33441	1	Screw-Ground				
❶15	35453	1	Commutator End Cap ASM (Includes 7)				
❶16	35454	1	Switch Box ASM				
❶22	35455	2	Bolt-Case				
❶23	35456	1	Screw-Ground				
❶26	650819	2	Screw (6-32X2-1/2)				
❶30	30063	2	Screw (T-30, 1/4-20X1/2)				
❶31	650820	2	Screw (1/4-20X1/2)				

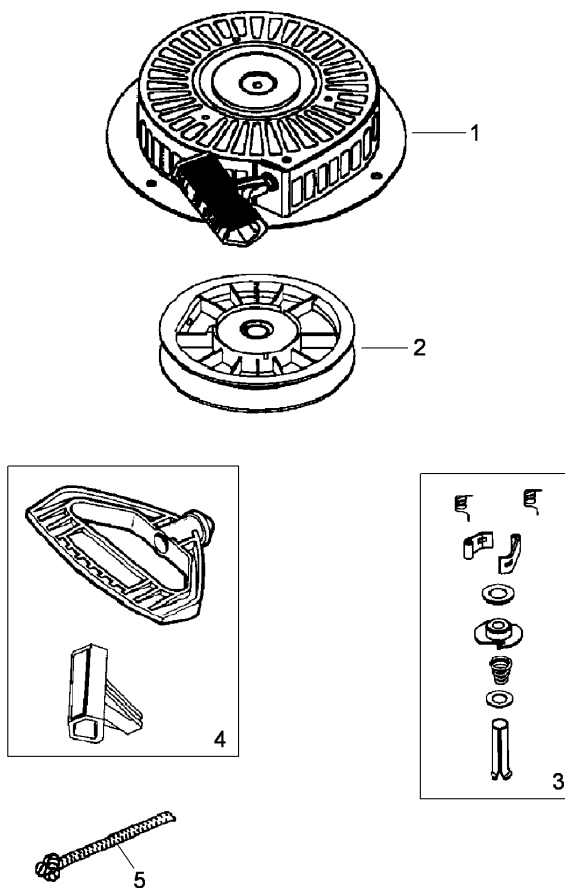 

This illustration may not depict actual equipment and is for reference purposes only

Rewind Starter No. 590749
Tecumseh LH318SA-156562H

Ref	Part No.	Qty.	Description				
❸1	590749	1	Starter-Rewind				
❸2	590682	1	Pulley And Rewind Spring ASM				
❸3	590773	1	Repair Kit				
❸4	590574	0	Handle-Starter, Mitten Grip (Also Available In Packaged Part #740053B)				
❸5	590535	1	Rope-Starter (98 Cut To Length)				

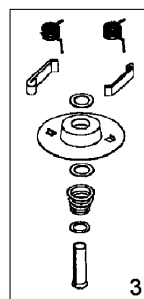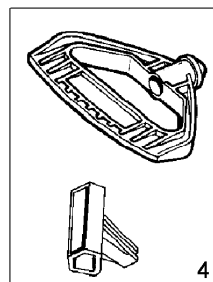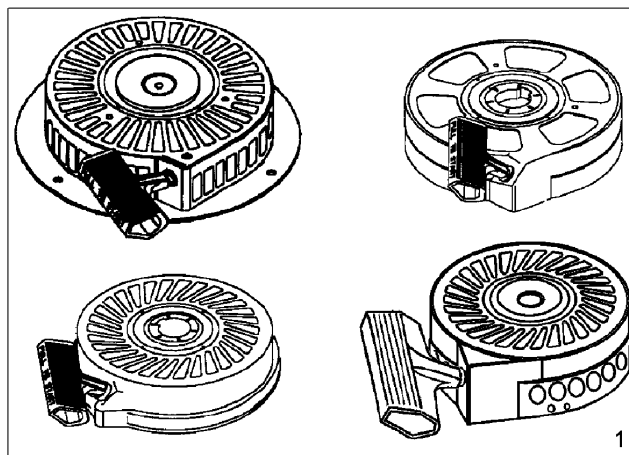     

This illustration may not depict actual equipment and is for reference purposes only

Recoil Starter No. 590733 (Optional)
Tecumseh LH318SA-156562H

Ref	Part No.	Qty.	Description				
❸1	590733	1	Starter-Rewind				
❸2	590709	1	Pulley And Rewind Spring ASM				
❸3	590774	1	Repair Kit				
❸4	590574	0	Handle-Starter, Mitten Grip (Also Available In Packaged Part #740053B)				
❸5	590535	1	Rope-Starter (98 Cut To Length)				

Attachments and Accessories

For 38620 - Power Max 826LE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
26 Inch Drift Breaker	107-3816

NOTES

NOTES

