



Power Max 1128OXE Snowthrower

Model No. 38650 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Engine Assembly No. 1 Tecumseh OH318SA-221812B	 14
28 Inch Auger Gearcase Assembly No. 108-7329	 4	Engine Assembly No. 2 Tecumseh OH318SA-221812B	 16
Chute Assembly	 5	Carburetor Assembly No. 640169 Tecumseh OH318SA-221812B	 18
Frame Assembly	 6	Rewind Starter No. 590749 Tecumseh OH318SA-221812B	 19
Handle and Control Assembly	 8	Recoil Starter Assembly No. 590733 (Optional) Tecumseh OH318SA-221812B	 20
Handle Assembly	 9	Electric Starter Assembly No. 33329D Tecumseh OH318SA-221812B	 21
Lever Chute Control Assembly	 10	Attachments and Accessories List	 22
Engine and Belt Assembly	 11		
Wheel Clutch Assembly	 12		
Wheel Clutch Sprocket Assembly	 13		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHE. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Tecumseh dealer

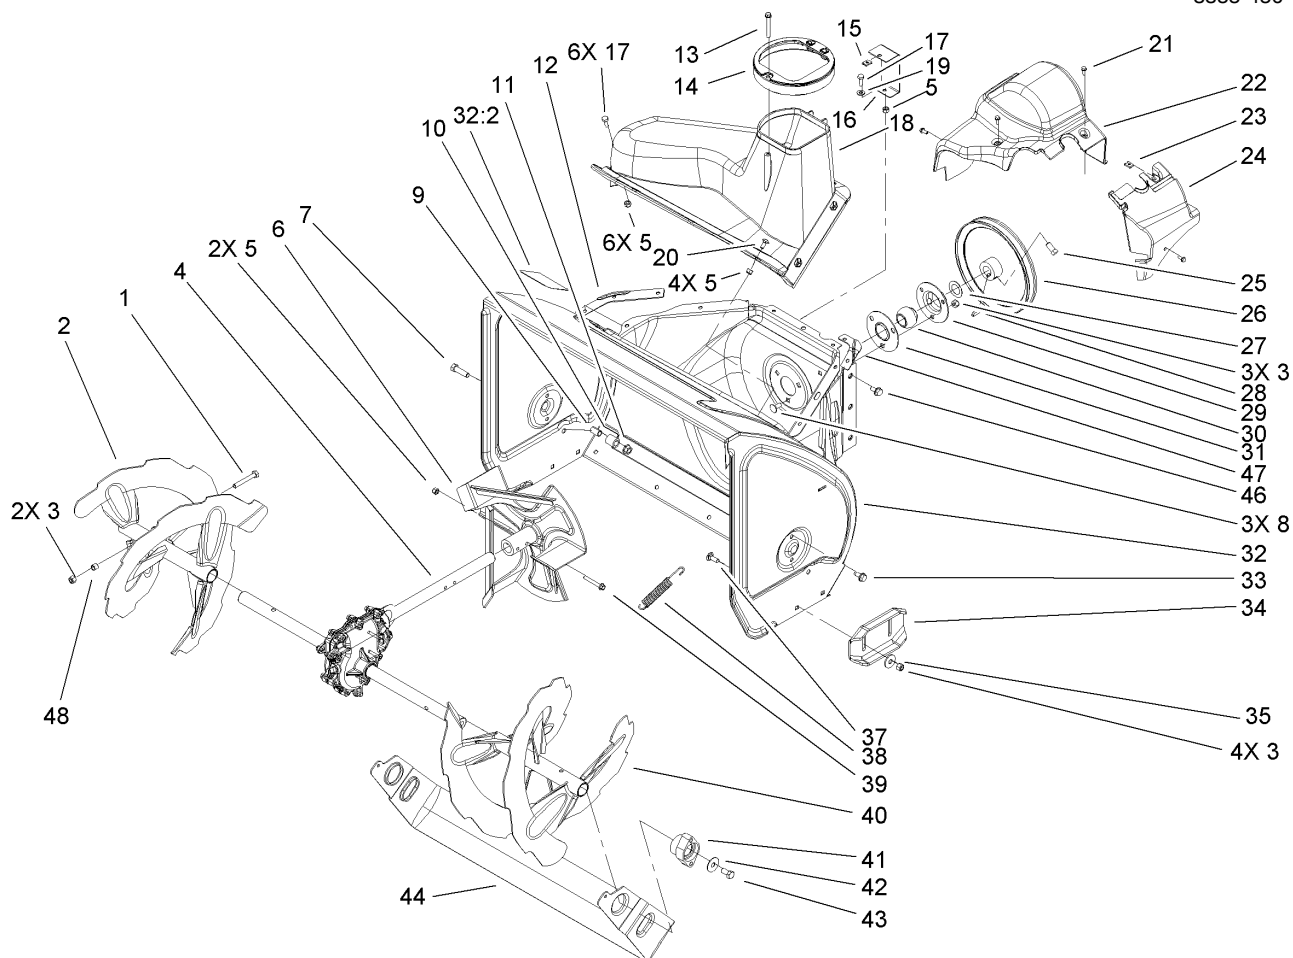

Auger and Housing Assembly

Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7291-03	1	Auger-RH
3	3296-29	9	Nut-Lock, NI
4	108-7329	1	28 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
7	323-29	2	Screw-HH
8	3230-23	3	Screw-CARR
9	106-4501	2	Spacer-Scraper, Stop
10	106-7318	2	Cushion-Scraper, Stop
11	32128-21	2	Nut-HF
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt

Ref	Part No.	Qty.	Description
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3823	1	Housing-Auger, 28 Inch
32:2	53-7670	1	Decal-Warning, Auger
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
37	3230-16	4	Screw-CARR
38	106-4502	2	Spring-Scraper
39	321-44	2	Screw-HHF
40	106-7301-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
44	106-4590-01	1	Scraper-28 Inch, Pivoting
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

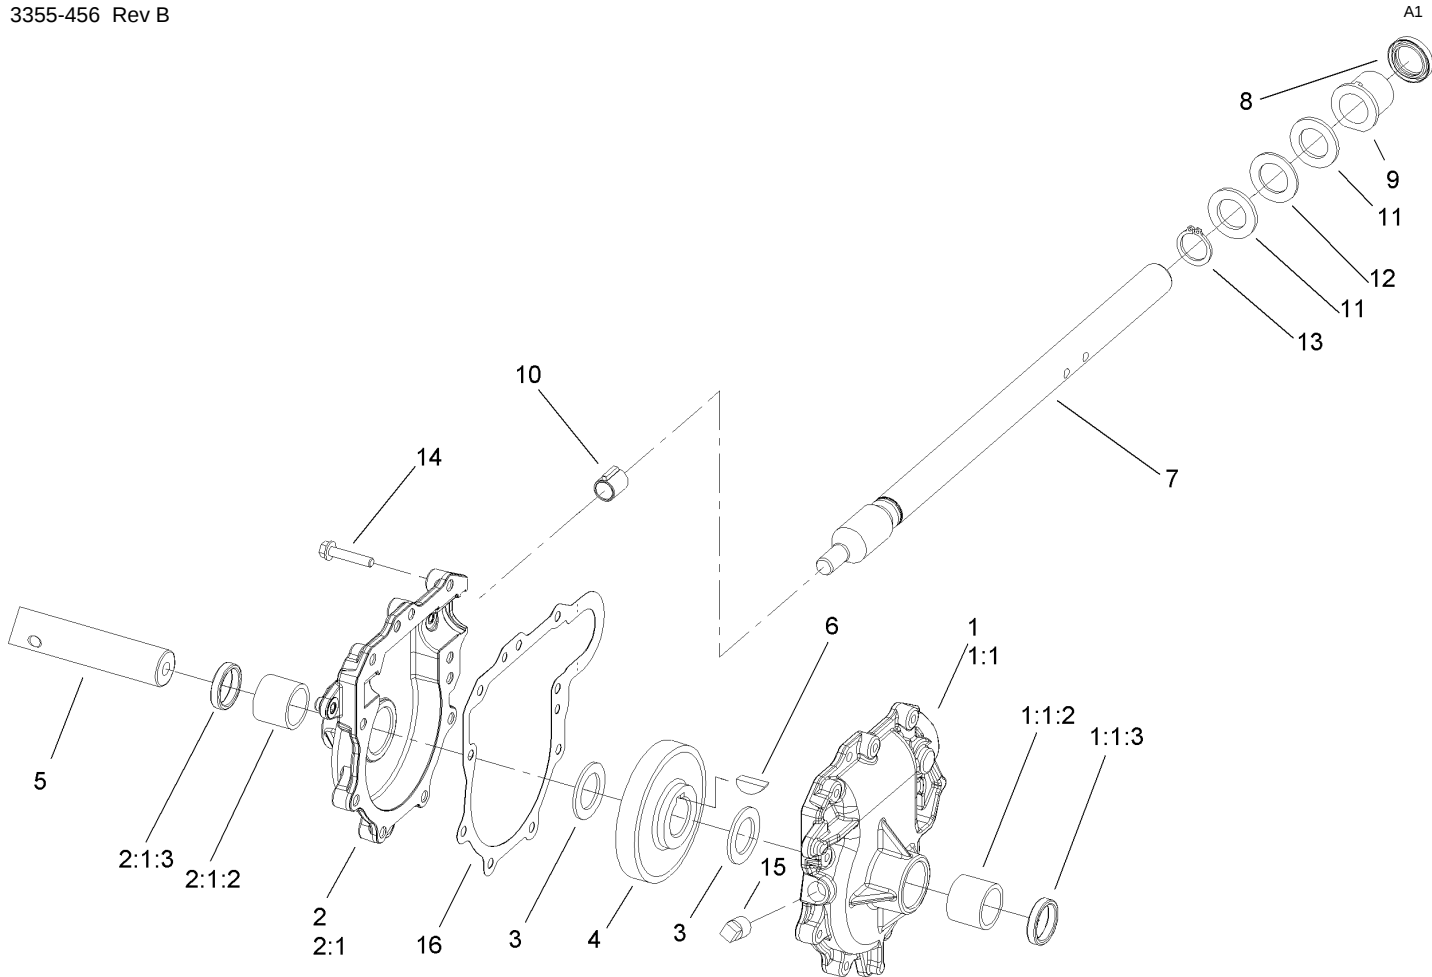

28 Inch Auger Gearcase Assembly No. 108-7329


Ref	Part No.	Qty.	Description				
1	108-7325	1	LH Auger Gearcase ASM				
2:1:1		1	Gearcase-Auger, LH				
1:1:2	112-6635	1	Bushing-Sleeve				
1:1:3	7-0045	1	Seal-Oil				
2	108-7327	1	RH Auger Gearcase ASM				
2:2:1		1	Gearcase-Auger, RH				
2:1:2	112-6635	1	Bushing-Sleeve				
2:1:3	7-0045	1	Seal-Oil				
3	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	106-4421	1	Shaft-Auger				
6	3257-10	1	Key-Woodruff				
7	66-7811	1	Shaft-Impeller				
8	253-149	1	Seal-Oil				
9	37-6560	1	Bushing-Input				
10	62-1150	1	Bushing-Worm				
11	252-78	2	Bearing-Thrust				
12	252-76	1	Bearing-Thrust				
13	32151-33	1	Ring-Retaining, EXT				
14	108-4862	9	Screw-HWHTF				
15	281-1	1	Plug-Pipe, SQH				
16	108-7330	1	Gasket-Gearcase, Auger				



Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6606	1	Deflector-Chute
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

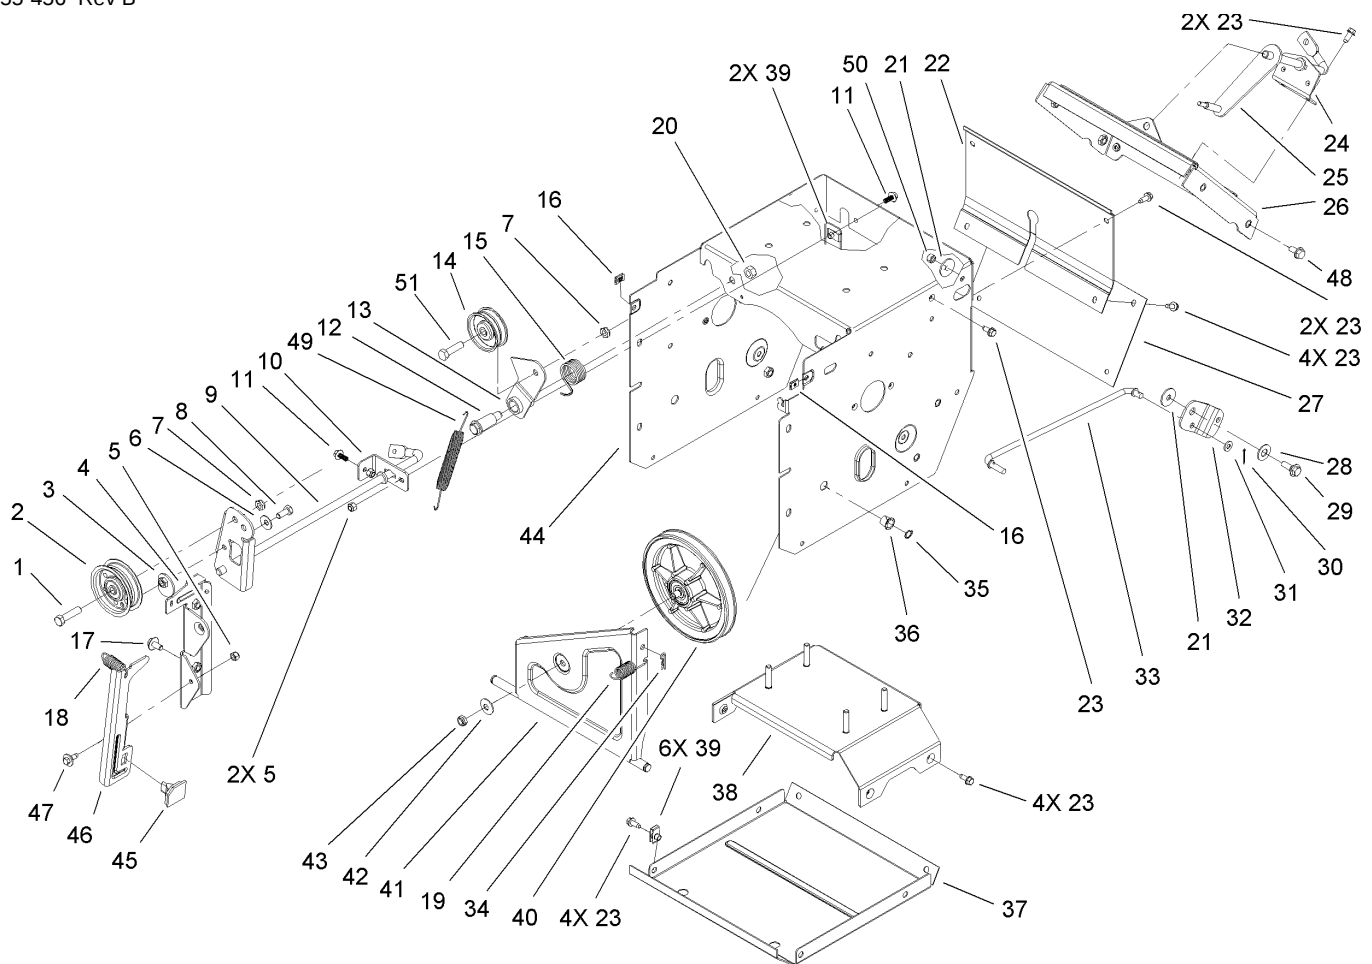


Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-3829	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	108-0022-01	1	Cover-Upper
23	32144-10	17	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift

Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	106-7315	1	Brace Frame ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	108-0019-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF




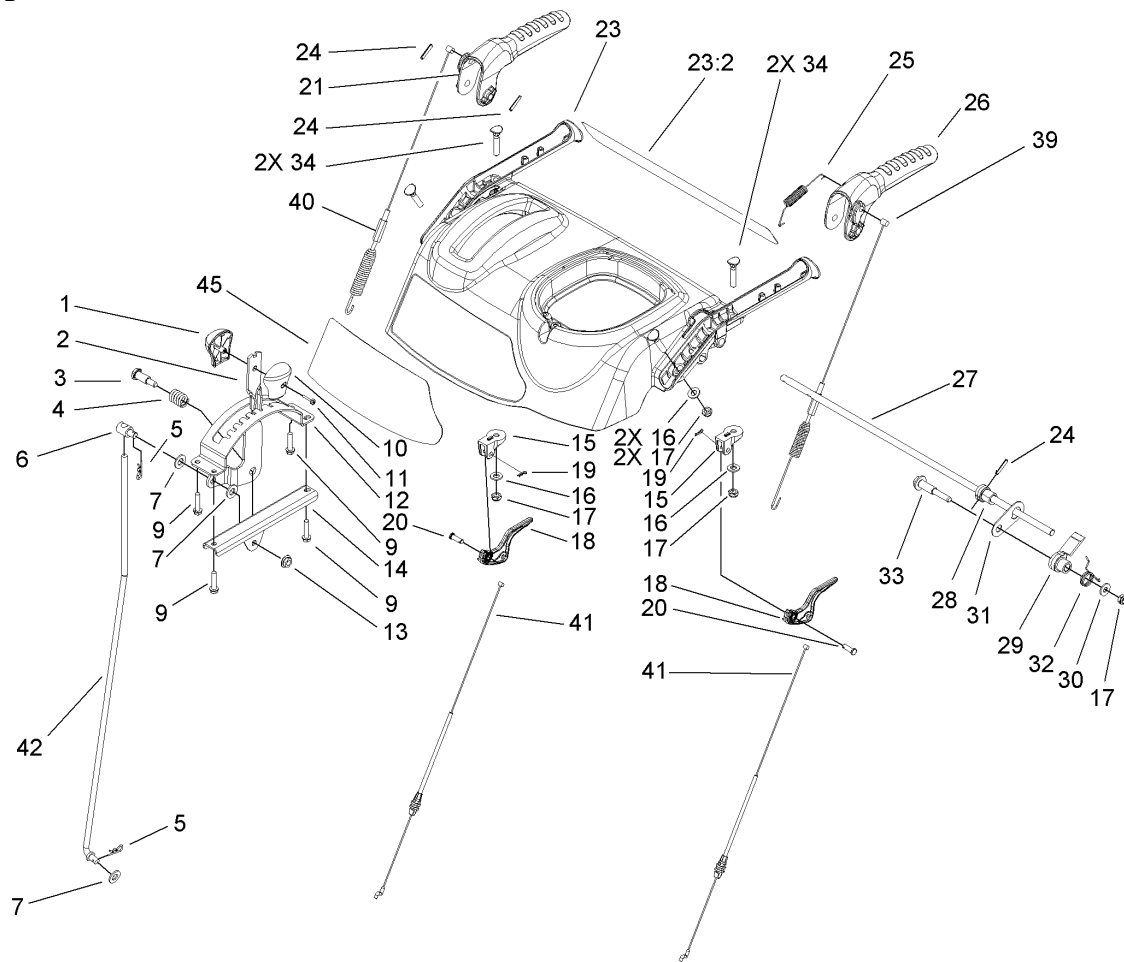

Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
15	105-9980	2	Mount-Clutch, Lever
16	3256-70	4	Washer-Flat
17	3296-72	5	Nut-Lock, NI
18	106-4505	2	Lever-Clutch
19	108-2992	2	Pin-Hair
20	1-808265	2	Pin-Clevis
21	106-4413	1	Lever-Auger
23	112-6632	1	Control Panel ASM
23:2	112-6622	1	Decal-Control Panel, Back
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension


Ref	Part No.	Qty.	Description
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
34	107-3018	4	Screw-Handle
39	106-4563	1	Cable-Traction
40	107-3830	1	Cable-Auger
41	107-8896	2	Cable-Clutch
42	107-1005	1	Rod-Shift
45	108-2962	1	Decal

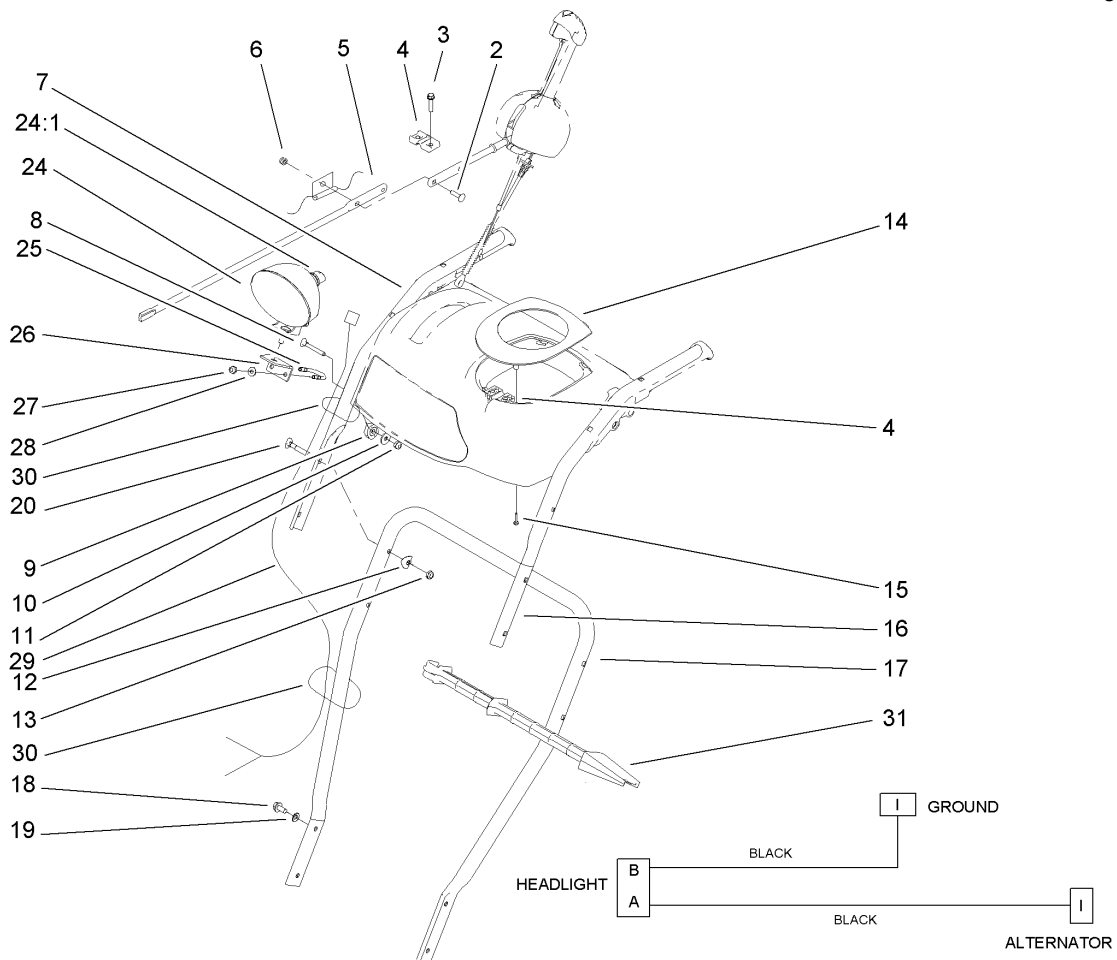

Handle Assembly


Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR
3	46-8092	2	Screw-Plastite
4	105-9987	2	Support-Rod
5	106-7283	1	Rod-Chute, Front
6	3296-73	2	Nut-Lock, NI
7	108-0038-03	1	Handle-Upper, RH
8	95-4453	2	Screw
9	106-4509	2	Clamp-Cable
10	87-6630	2	Washer-Plain
11	3296-73	2	Nut-Lock, NI
12	107-3844	4	Washer
13	3296-72	4	Nut-Lock, NI
14	106-4586	1	Cover-Panel, Control
15	94-4496	2	Screw-PPH
16	108-0037-03	1	Handle-Upper, LH
17	105-9981-03	1	Handle-Lower
18	32144-14	4	Screw-HWHTF
19	3290-475	4	Washer-Belleville
20	92-2260	4	Screw-Handle
24	106-4510	1	Headlamp ASM
24:1	108-0008	1	Lamp-12 Volt
25	107-3024	1	Clamp
26	107-1020-03	1	Bracket-Light
27	3296-73	2	Nut-Lock, NI

Ref	Part No.	Qty.	Description
28	3256-1	2	Washer-Flat
29	106-4511	1	Harness-Wire
30	614249	2	Strap-Tie
31	110-3408	1	Stick-Cleanout

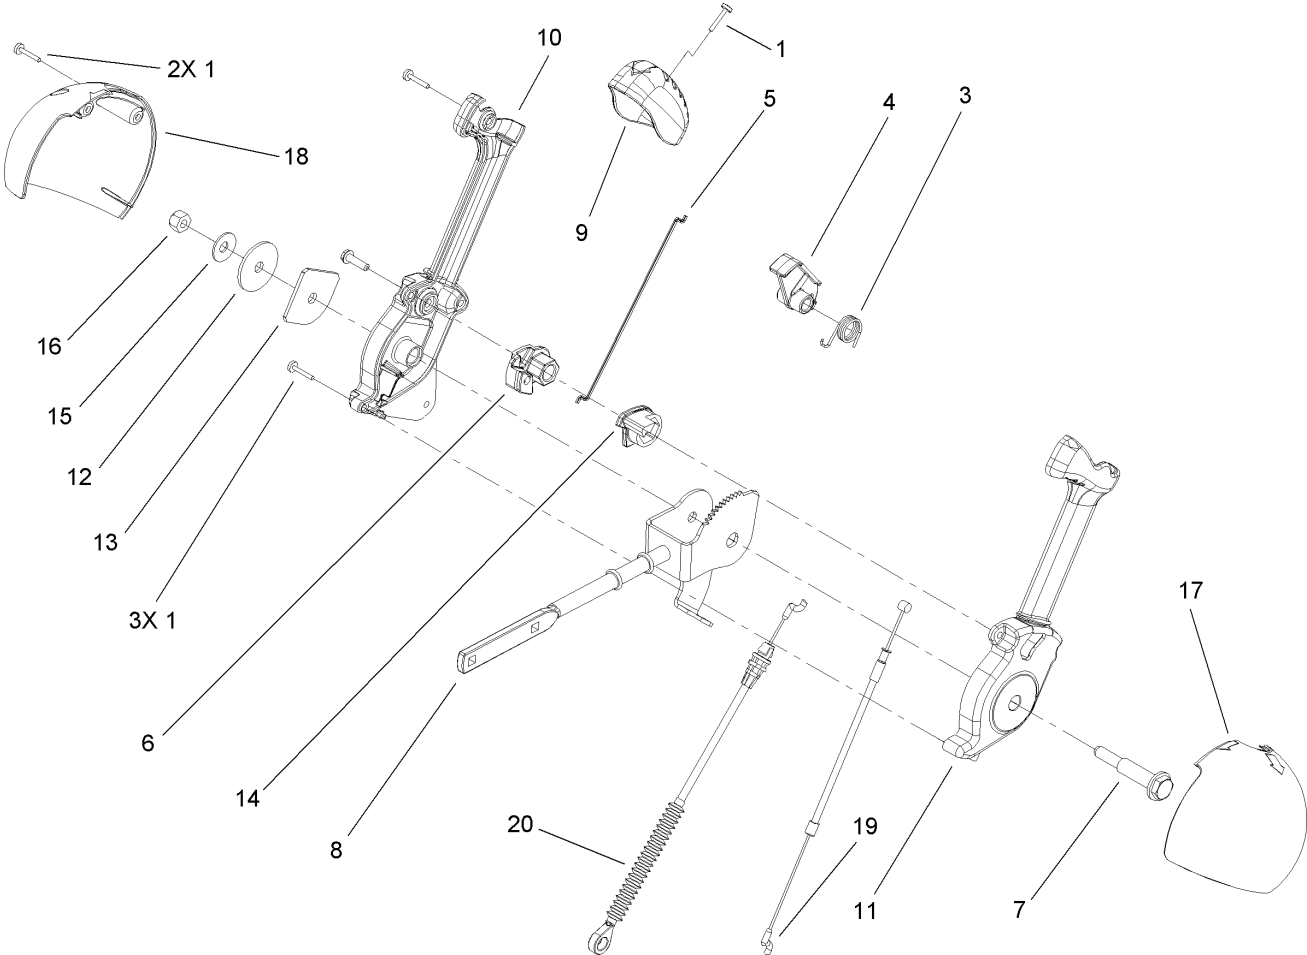

Lever Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	6	Screw-PPH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				

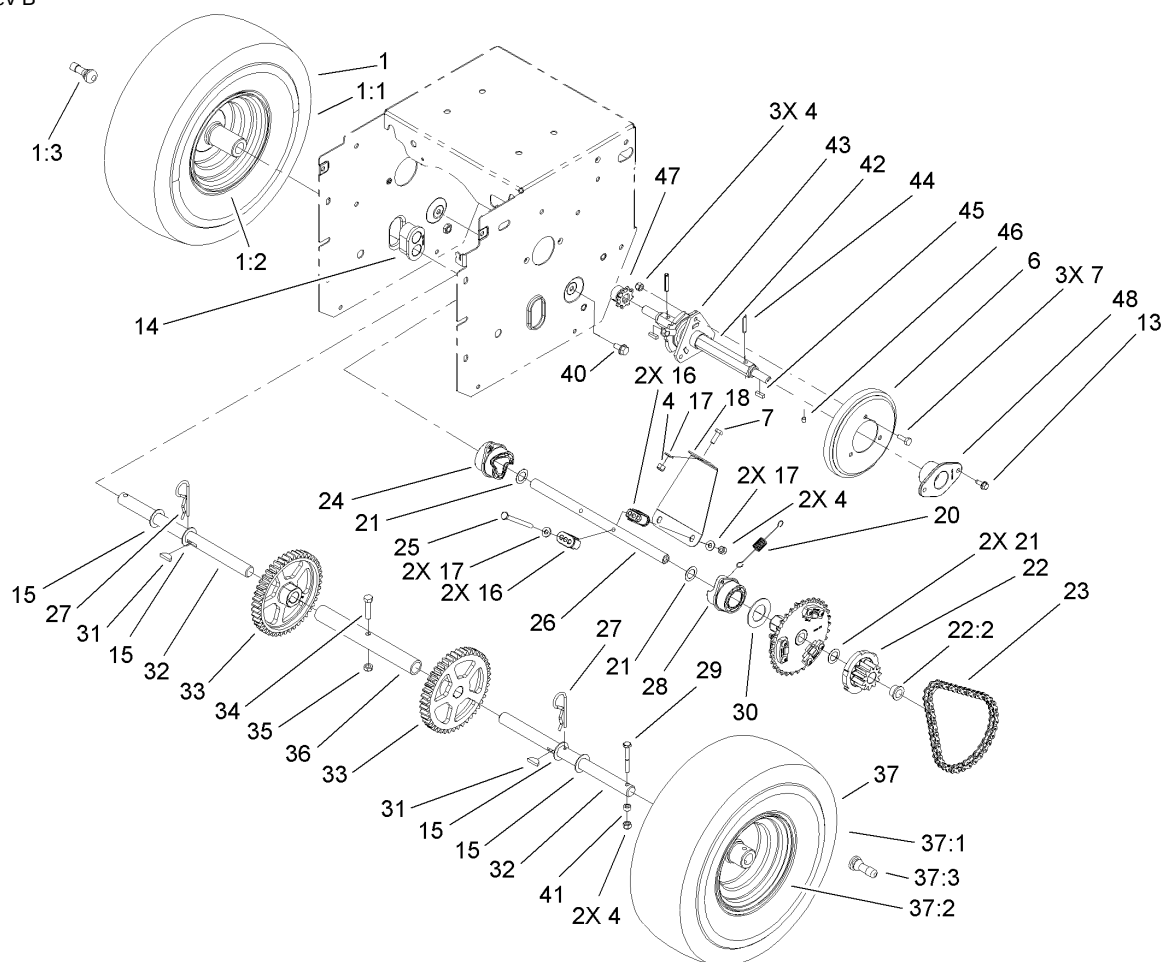


Wheel Clutch Assembly

Ref	Part No.	Qty.	Description
②1		1	RH Wheel And Tire ASM
1:1	107-3042	1	Tire
1:2	107-3043	1	Rim-Tire
1:3	232-27	1	Stem-Valve
4	3296-42	8	Nut-Lock, NI
6	106-4480	1	Wheel-Friction
7	321-4	4	Screw-HH
13	32144-10	4	Screw-HWH
14	106-4558	2	Bearing-Axle
15	3-8664	4	Washer-Thrust
16	107-8889	4	Guide-Collar
17	3256-22	5	Washer-Flat
18	107-8892-03	1	Brace-Collar, Shift
20	107-8893	2	Spring-Extension
21	108-0015	4	Washer-Flat
22	107-8894	2	11T Gear ASM
22:2	108-2973	2	Bushing-Flange
23	108-0016	2	Chain-Roller
23	2710-6	2	Link-Connecting
24	107-8888	1	Collar-Shift, RH
25	321-23	2	Screw-HH
26	107-8883	1	Shaft-Intermediate
27	3290-343	2	Pin-Hair
28	107-8887	1	Collar-Shift, LH

Ref	Part No.	Qty.	Description
29	108-2975	2	Screw-HH
30	107-8891	2	Washer-Thrust
31	3257-7	2	Key-Woodruff
32	107-8898	2	Shaft-Axle
33	106-4572	2	Gear-Axle, 44 Tooth
34	322-17	1	Screw-HH
35	3296-47	1	Nut-Lock, NI
36	106-7259	1	Tube-Axle
③37		1	LH Wheel And Tire ASM
37:1	107-3042	1	Tire
37:2	107-3043	1	Rim-Tire
37:3	232-27	1	Stem-Valve
40	32144-14	2	Screw-HWHTF
41	55-9370	2	Spacer-Blade, Rotor
42	108-7314	1	Shaft-Hex
43	106-4434	1	Trunion-Hex
44	32121-9	2	Pin-Roll, Slotted
45	94-8850	2	Key-Square
46	3245-32	4	Screw-HSH
47	106-7317	2	Sprocket-8 Tooth
48	108-7319	2	Retainer-Bearing

Engine Assembly No. 1

Tecumseh OH318SA-221812B

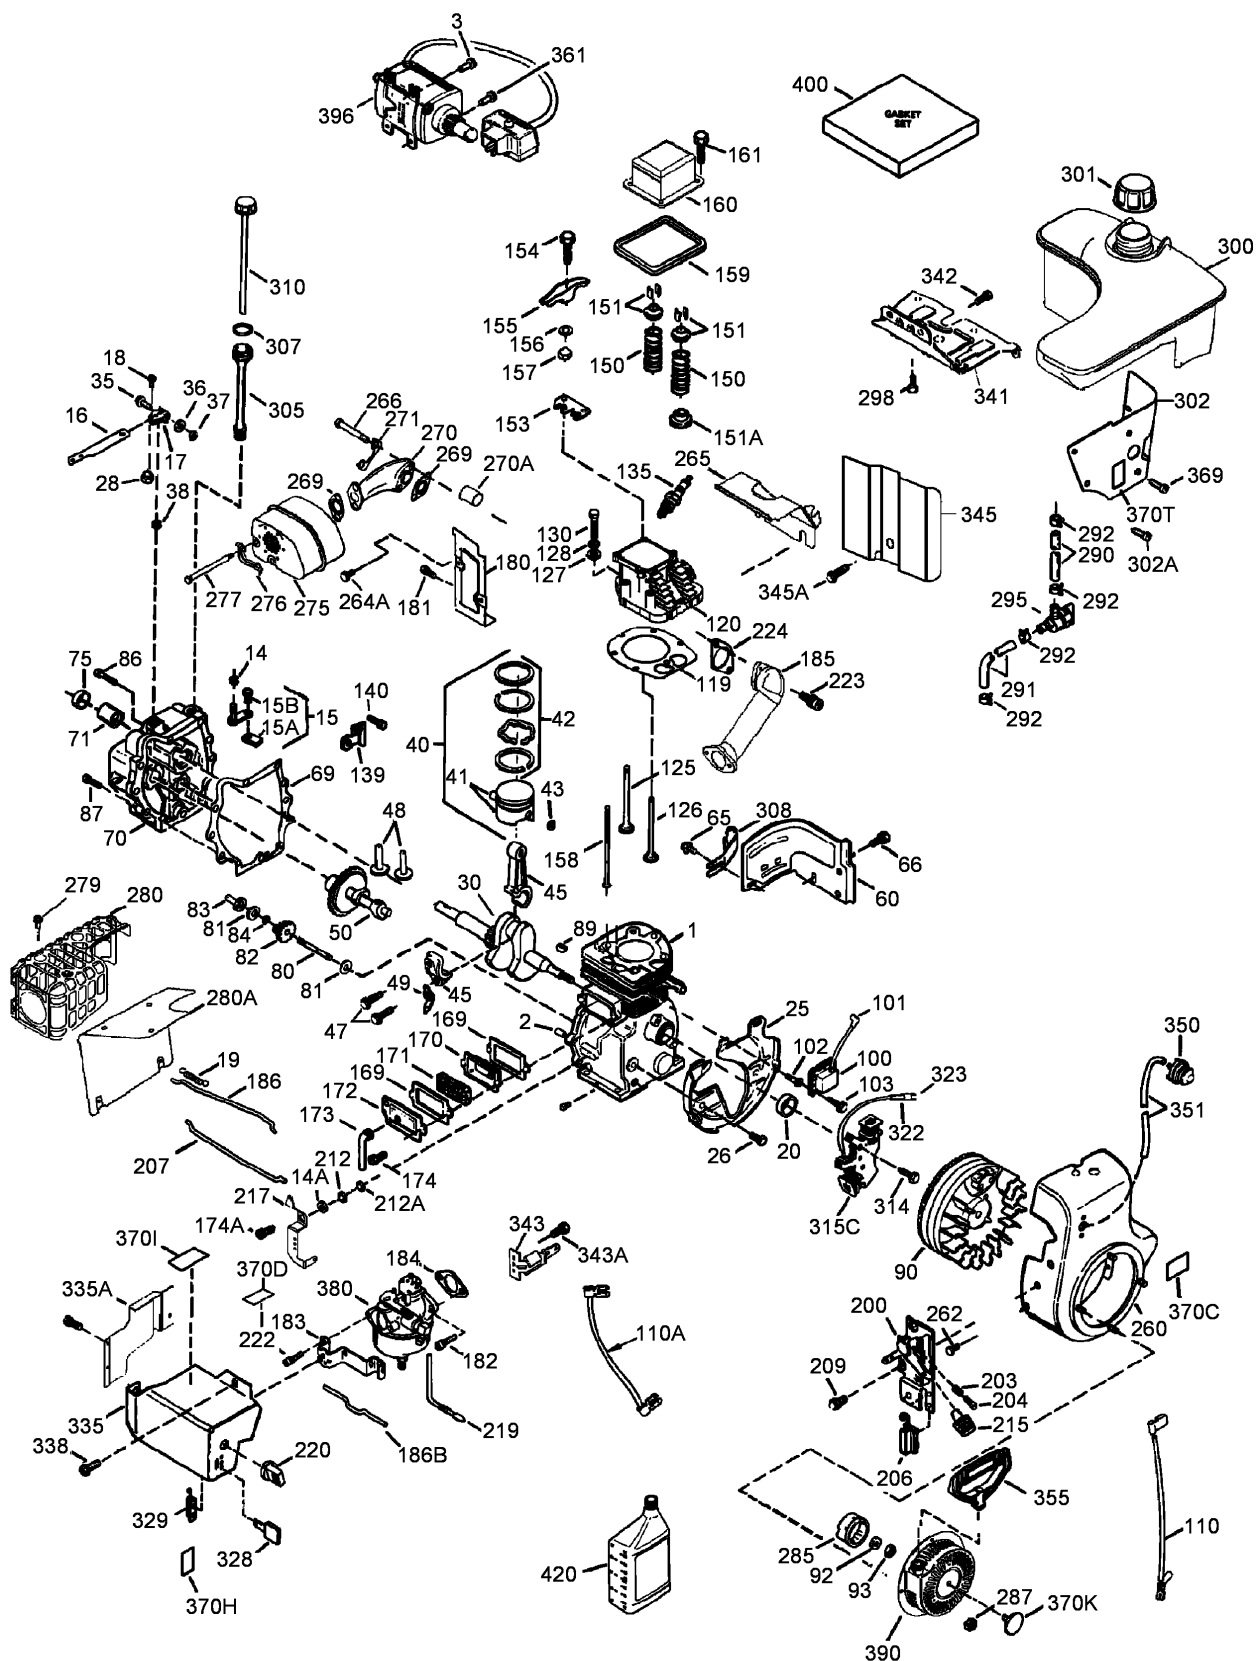


Engine Assembly No. 1

Tecumseh OH318SA-221812B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	37251	1	Cylinder (Includes 2, 20)	❶89	32589	1	Key-Flywheel
❶2	27652	2	Pin-Dowel	❶90	611093	1	Flywheel ASM
❶3	650820	2	Screw (1/4-20X1/2)	❶92	650880	1	Washer-Belleville
❶14	28277	1	Washer-Flat	❶93	650881	1	Nut-Flywheel
❶14A	651057	1	Washer	❶100	35135A	1	Ignition-State, Solid (Includes 101)
❶15	30699C	1	Rod-Governor (Includes 15A, 15B)	❶101	610118	1	Cover-Spark Plug
❶15A	30700	1	Yoke-Governor	❶102	651024	2	Stud-Mounting, Solid State
❶15B	650494	1	Screw (6-40X5/16)	❶103	651007	2	Screw (T-15, 10-24 X 15/16)
❶16	37255A	1	Lever-Governor (Includes 212A)	❶110	35187	1	Wire-Ground
❶17	29916	1	Clamp-Lever, Governor	❶110A	37047	1	Wire-Ground
❶18	651028	1	Screw (T-15, 8-32X7/16)	❶119	37256	1	Gasket-Head, Cylinder
❶19	36281	1	Spring-Extension	❶120	37516	1	Head-Cylinder (Includes 151A, 270A)
❶20	35319	1	Seal-Oil	❶125	36934	1	Valve-Exhaust (STD)
❶25	37853	1	Baffle-Housing, Blower	❶125	36936	1	Valve-Exhaust (1/32)
❶26	650561	2	Screw (1/4-20X19/32)	❶126	36935	1	Valve-Intake (STD)
❶28	30322	1	Nut-Lock (8-32)	❶127	650691	6	Washer-Flat
❶30	37272	1	Crankshaft	❶128	650690	6	Washer-Belleville
❶35	29826	1	Screw (10-32X3/4)	❶130	650697A	6	Screw (5/16-18 X 2-1/2)
❶36	29918	1	Washer-Lock (8)	❶135	34645	1	Spark Plug-Resistor (R N 4C)
❶37	29216	1	Nut-Lock (10-32)	❶139	33369	1	Bracket-Gear, Governor
❶38	29642	1	Ring-Retaining	❶140	650836	1	Screw (10-24X1/2)
❶40	40011	1	Piston-Pin And Ring Set (STD)	❶150	33507	2	Spring-Valve
❶40	40012	1	Piston- Pin And Ring Set (.010 O S)	❶151	33508	2	Keeper-Spring, Valve
❶41	40009	1	Piston And Pin ASM (STD) (Includes 43)	❶151A	35862	1	Cap-Spring, Valve
❶41	40010	1	Piston And Pin ASM (.010In Os) (Includes 43)	❶153	35949	1	Guide-Rod, Push
❶42	40013	1	Ring Set (STD)	❶154	651105	2	Stud-Arm, Rocker
❶42	40014	1	Ring Set (.010 O S)	❶155	35950	2	Arm-Rocker
❶43	27888	2	Ring-Retaining, Piston Pin	❶156	37843	2	Bearing-Arm, Rocker
❶45	36897	1	Connecting Rod ASM (Includes 47, 49)	❶157	650586	2	Nut-Jam (5/16-24)
❶47	651033	2	Bolt-Rod, Connecting	❶158	35466	2	Rod-Push
❶48	35313	2	Lifter-Valve	❶159	35952	1	Gasket-Cover, Rocker Arm
❶49	36896	1	Dipper-Oil	❶160	35953A	1	Cover-Arm, Rocker
❶50	37517	1	Camshaft (Mcr)	❶161	30063	4	Screw (T-30, 1/4-20X1/2)
❶60	35316A	1	Extension-Housing, Blower	❶169	27896A	2	Gasket-Cover, Valve
❶65	30200	1	Screw (10-24 X 9/16)	❶170	28423	1	Body-Breather
❶66	30063	1	Screw (T-30, 1/4-20X1/2)	❶171	28424	1	Element-Breather
❶69	37342	1	Gasket-Cover, Cylinder	❶172	28425	1	Cover-Valve
❶70	37847	1	Cover-Cylinder (Includes 71, 75, 80-84)	❶173	35350	1	Tube-Breather
❶71	35377	1	Bushing-Crankshaft	❶174	650128	2	Screw (10-24X1/2)
❶75	35319	1	Seal-Oil	❶174A	651056	1	Screw (10-24 X 29/32)
❶80	37587	1	Shaft-Governor	❶180	37101	1	Extension-Housing, Blower
❶81	651080	1	Washer	❶181	30200	2	Screw (10-24 X 9/16)
❶82	37588	1	Governor Gear ASM (Includes 81)	❶182	650517	2	Screw (T-30, 1/4-20 X 27-32)
❶83	30588A	1	Spool-Governor	❶183	34583A	1	Bracket-Choke
❶84	29193	1	Ring-Retaining	❶184	33263	1	Gasket-Carburetor To Intake Pipe
❶86	650833	7	Screw (1/4-20X1-3/16)				
❶87	650832	1	Screw (1/4-20X1-11/16)				

Engine Assembly No. 2


Tecumseh OH318SA-221812B

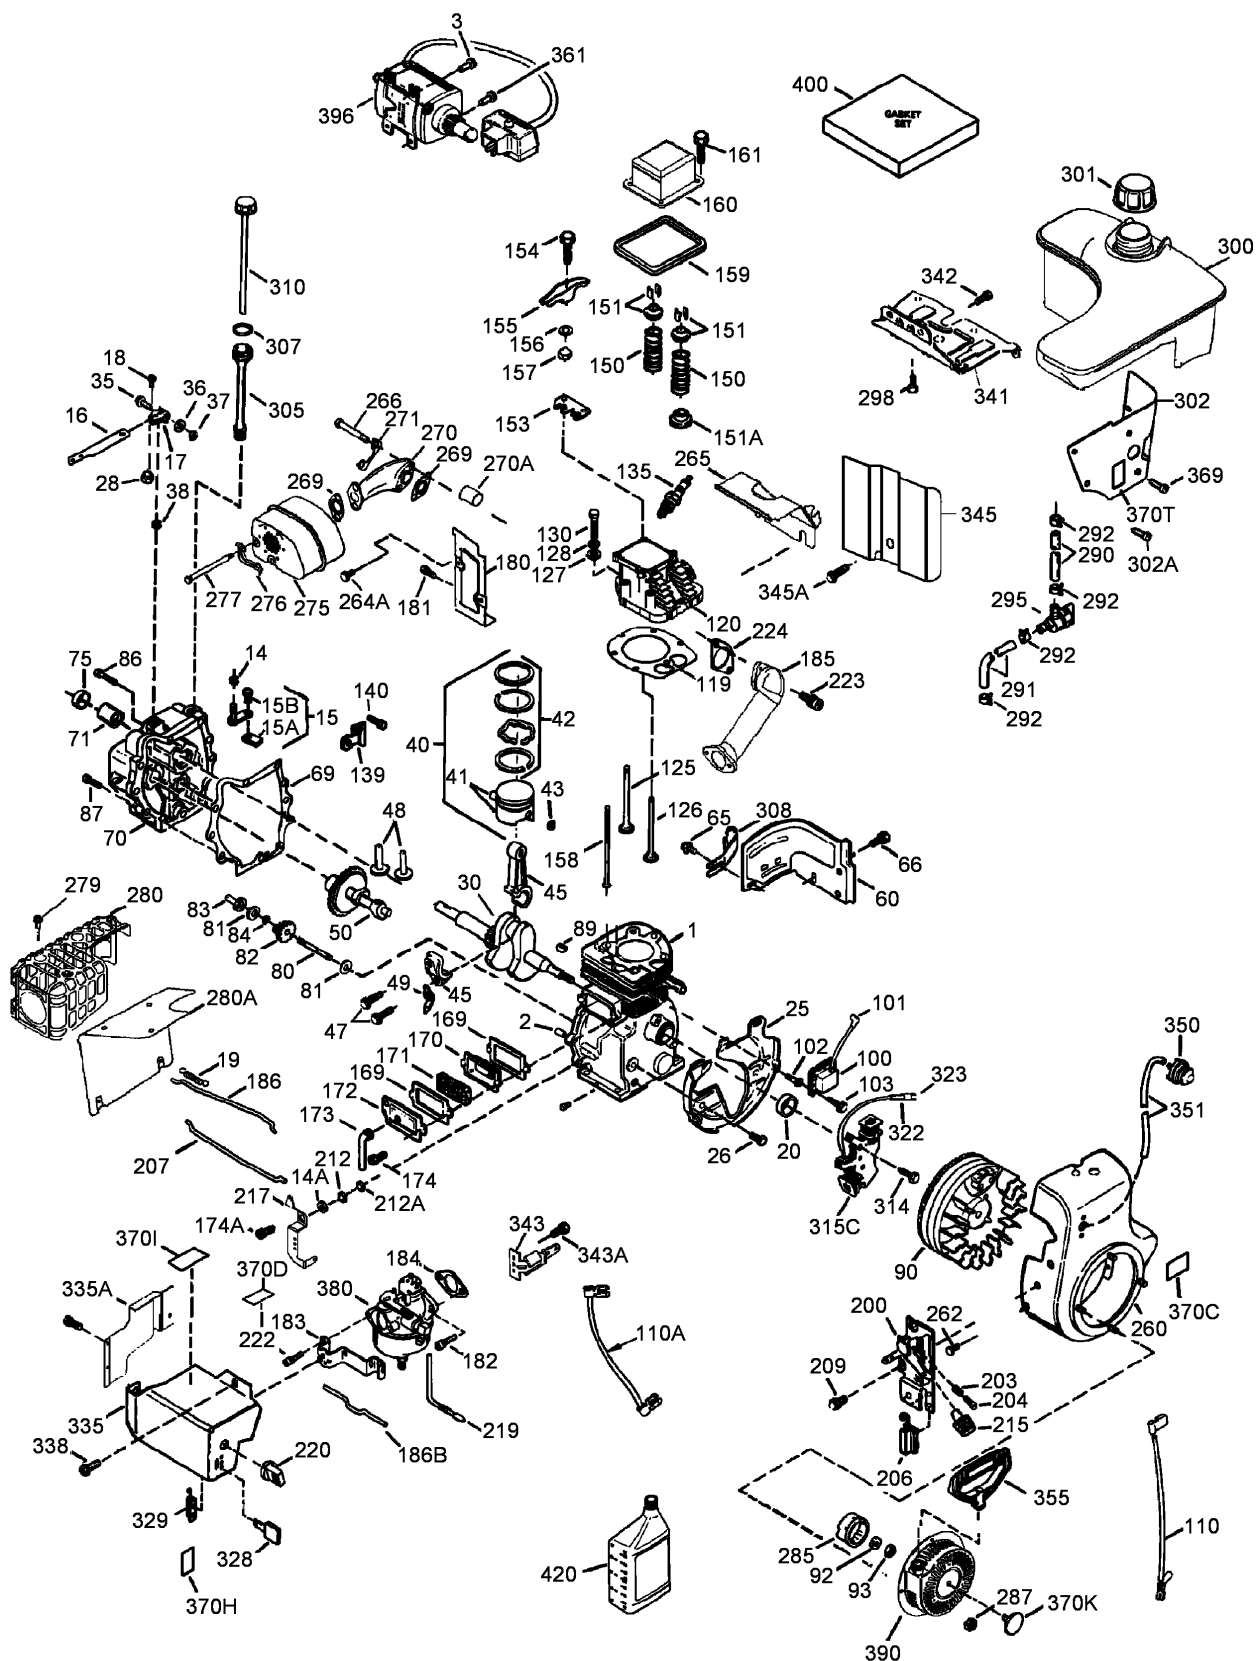

Engine Assembly No. 2

Tecumseh OH318SA-221812B


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③185	37085	1	Pipe-Intake	③322	611117	1	Body-Connector
③186	37860	1	Link-Governor	③323	611118	1	Terminal
③186B	36653	1	Spring-Choke	③328	35062	2	Key-Ignition
③200	35702	1	Bracket-Control (Includes 203, 204, 206)	③329	610973	1	Terminal
③203	31342	1	Spring-Compression	③335	37096	1	Cover-Carburetor, Front
③204	651029	1	Screw (T-10, 5-40X7/16)	③335A	37087	1	Cover-Carburetor
③206	610973	1	Terminal	③338	650821	4	Screw (10-32 X 1/2)
③207	37262	1	Link-Throttle	③341	37093	1	Bracket-Tank, Fuel
③209	650821	2	Screw (10-32 X 1/2)	③342	792028	2	Screw (5/16-18 X 7/8)
③212	30773A	1	Bushing	③343	35079A	1	Bracket-Switch, Key (Includes 343A)
③212A	36288	1	Bushing	③343A	651060	1	Screw (8-32 X 23/64)
③215	35440	1	Knob-Control	③345	37097	1	Baffle-Heat
③217	37260	1	Lever-Bellcrank	③345A	650821	1	Screw (10-32 X 1/2)
③219	35689	1	Rod-Choke	③350	570682A	1	Primer ASM
③220	35438	1	Knob-Control	③351	32180C	1	Line-Primer
③222	28820	2	Screw (10-32 X 1/2)	③355	590574	1	Handle-Starter, Mitten Grip
③223	650971	2	Screw (T-30, 5/16-18 X 7/8)	③361	650990	2	Screw (T-30, 1/4-20X15/32)
③224	33515A	1	Gasket-Pipe	③369	651032	2	Screw (12-16 X 5/8)
③260	37092A	1	Housing-Blower	③370C	36501	1	Decal-Primer, International Symbol
③262	651084	2	Screw (5/16-18X9/16)	③370D	36534	1	Decal-Instruction
③264A	650738	1	Screw (1/4-20 X 5/8)	③370H	37226	1	Decal-Choke
③265	37086	1	Cover-Head, Cylinder	③370I	37119	1	Decal-Warning (Bilingual)
③266	650876	2	Screw (5/16-18 X 1-9/32)	③370K	36695	1	Decal-Tecumseh Logo For Top Of Recoil Starter
③269	35762	2	Gasket-Manifold, Exhaust	③370T	36906	1	Decal-Starter, Electric
③270	37263	1	Manifold, Exhaust	③380	640169	1	Carburetor (Includes 184)
③270A	35829A	1	Liner-Port, Exhaust	③390	590749	1	Starter-Rewind (Note: This Engine Could Have Been Built With Starter 590733)
③271	35293	1	Plate-Locking	③396	33329D	1	Starter-Electric (110 Volt)
③275	37264	1	Muffler	③400	37257A	1	Gasket Set (Includes 69, 119, 159, 169, 184, 224, 269)
③276	35348	1	Plate-Locking	③420	730226A	1	Oil-Engine, S A E 5W30
③277	650877	2	Screw (5/16-18 X 4-1/2)	①③	911306C	1	Engine-Replacement
③279	651011	4	Screw	①③	756339C	1	Shortblock
③280	37265	1	Shield-Heat				
③280A	37879	1	Baffle-Restrictor, Air				
③285	35985C	1	Cup-Starter				
③287	29752	4	Nut And Lock Washer (1/4-28)				
③290	30962	1	Line-Fuel				
③291	29774	1	Line-Fuel (8.62)				
③292	26460	4	Clamp-Line, Fuel				
③295	35857	1	Valve-Shut Off, Fuel (Includes 292)				
③298	650665	2	Screw (1/4-15X7/8)				
③300	37099A	1	Tank-Fuel (Includes 292, 301)				
③301	37844	1	Cap-Fuel (Black) (1-1/2 I D)				
③302	37098	1	Extension-Tank, Fuel				
③302A	650821	3	Screw (10-32 X 1/2)				
③305	35574	1	Tube-Fill, Oil				
③307	35499	1	O-Ring				
③308	35539	1	Clip-Tube, Fill				
③310	35700	1	Dipstick				
③314	650873	1	Screw (1/4-20 X 3/4)				
③315C	611111	1	Coil-Alternator, 18 Watt (Includes 322, 323)				

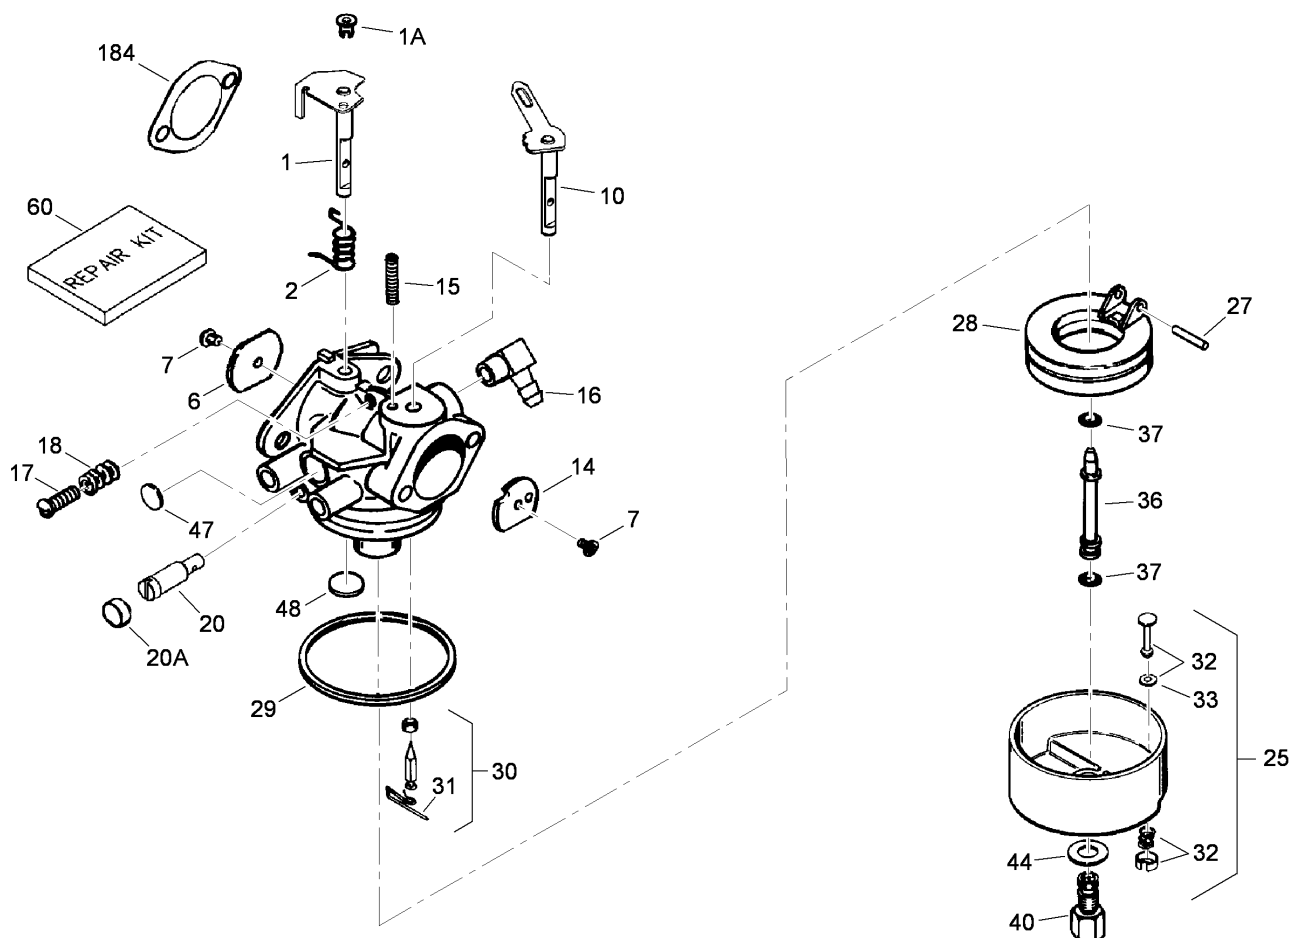

Carburetor Assembly No. 640169 Tecumseh OH318SA-221812B

Ref	Part No.	Qty.	Description
❶1	632777	1	Throttle Shaft And Lever ASM
❶1A	36288	1	Bushing
❶2	631970	1	Spring-Return, Throttle
❶6	640109	1	Shutter-Throttle
❶7	650506	2	Screw-Shutter
❶10	632778	1	Choke Shaft And Lever ASM
❶14	632189	1	Shutter-Choke
❶15	630735	1	Spring-Positioning, Choke
❶16	632527	1	Fitting-Fuel
❶17	651025	1	Screw-Throttle Crack And Idle Speed
❶18	630766	1	Spring-Tension
❶20	640027	1	Screw-Restrictor, Idle
❶20A	640053	1	Cap-Screw, Idle Restrictor
❶25	632594A	1	Float Bowl ASM (Includes 32, 33)
❶27	631024	1	Shaft-Float
❶28	632802	1	Float (Plastic)
❶29	631028	1	O Ring-Bowl, Float
❶30	631021	1	Seat And Clip-Inlet Needle (Includes 31)
❶31	631022	1	Clip-Spring
❶32	27136A	1	Bowl Drain ASM
❶33	27554	1	Gasket-Plunger, Drain
❶36	640013	1	Tube-Nozzle, Main


Ref	Part No.	Qty.	Description
❶37	632547	2	O-Ring
❶40	640170	1	Nut-Bowl, High Speed
❶44	27110A	1	Washer-Nut, Bowl
❶47	630748	1	Plug-Welch, Idle Mixture Well
❶48	631027	1	Plug-Welch, Atmospheric Vent
❶60	632760	1	Repair Kit (Includes 7, 27, 29, 30, 37, 47, 48)
❶184	33263	1	Gasket-Carburetor To Intake Pipe

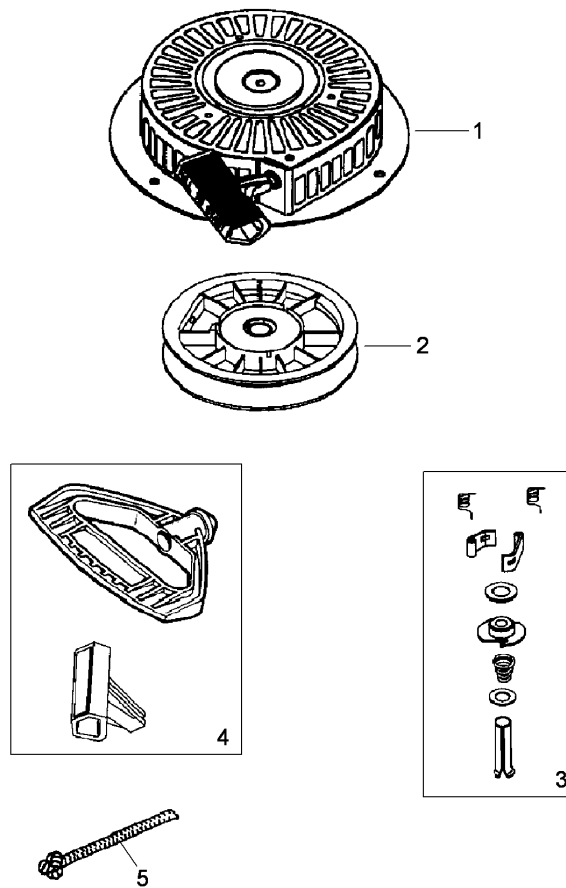

This illustration may not depict actual equipment and is for reference purposes only

Rewind Starter No. 590749
Tecumseh OH318SA-221812B


Ref	Part No.	Qty.	Description				
❸1	590749	1	Starter-Rewind				
❸2	590682	1	Pulley And Rewind Spring ASM				
❸3	590773	1	Repair Kit				
❸4	590574	0	Handle-Starter, Mitten Grip (Also Available In Packaged Part #740053B)				
❸5	590535	1	Rope-Starter (98 Cut To Length)				

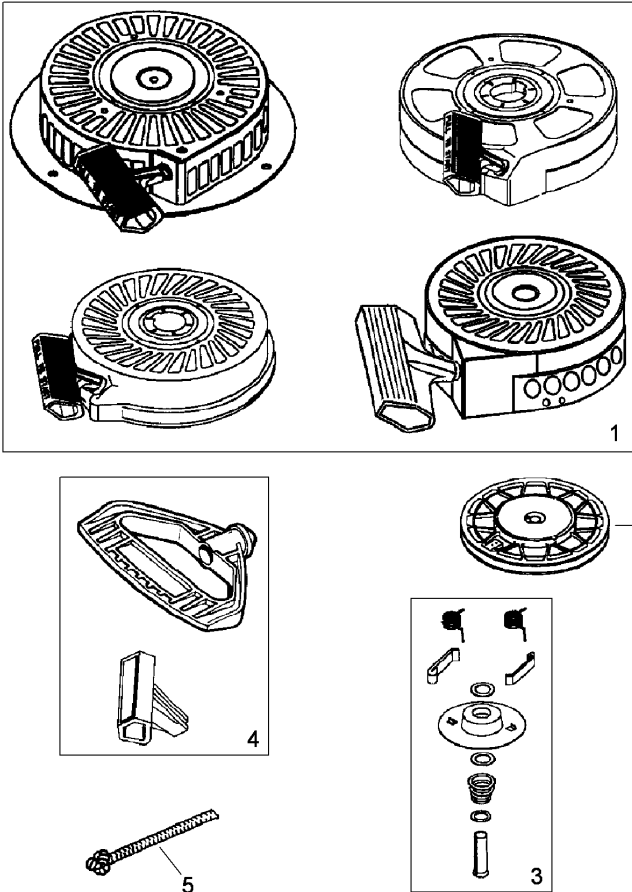

This illustration may not depict actual equipment and is for reference purposes only

Recoil Starter Assembly No. 590733 (Optional)
Tecumseh OH318SA-221812B

Ref	Part No.	Qty.	Description				
❶1	590733	1	Starter-Rewind				
❷2	590709	1	Pulley And Rewind Spring ASM				
❸3	590774	1	Repair Kit				
❹4	590574	0	Handle-Starter, Mitten Grip (Also Available In Packaged Part #740053B)				
❺5	590535	1	Rope-Starter (98 Cut To Length)				

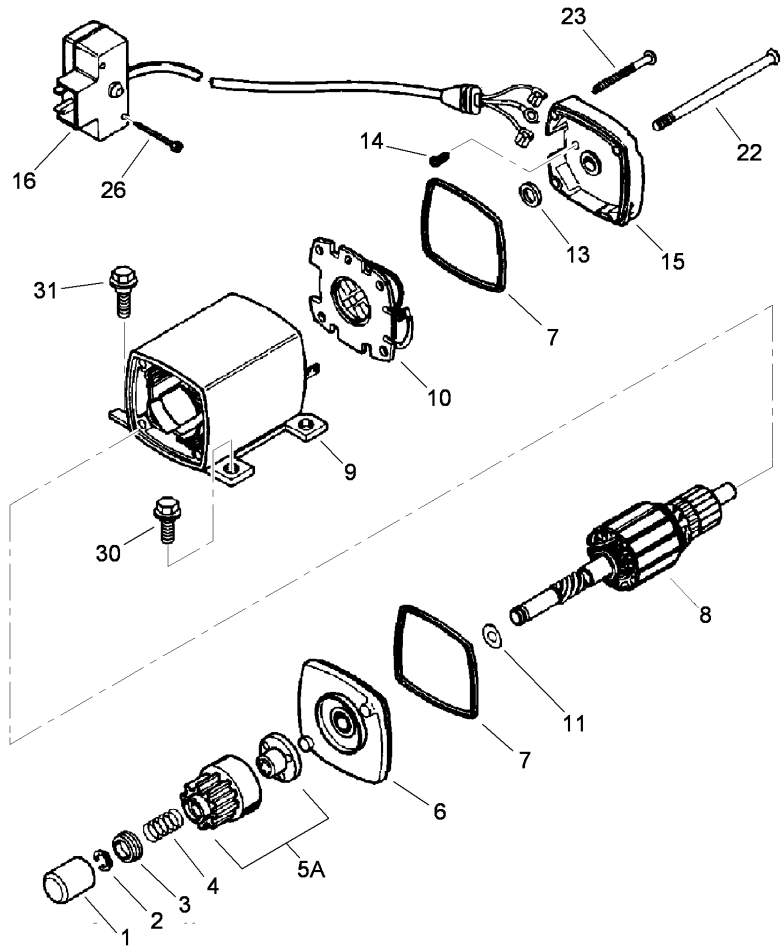

Electric Starter Assembly No. 33329D
Tecumseh OH318SA-221812B

Ref	Part No.	Qty.	Description				
❶1	33451	1	Cover-Dust				
❷2	33842	1	Ring-Retainer				
❸3	33430	1	Retainer-Spring				
❹4	33431	1	Spring-Anti Drift				
❺5A	37050	1	Gear And Nut (Includes 2)				
❻6	35449	1	Drive End Cap ASM (Includes 7)				
❼7	35450	2	O-Ring				
❽8	35915	1	Armature				
❾9	35451A	1	Housing ASM				
❿10	35452A	1	Brush Card ASM				
⓫11	35911	1	Washer-Thrust				
⓬13	590500	1	Washer-Thrust				
⓭14	33441	1	Screw-Ground				
⓮15	35453	1	Commutator End Cap ASM (Includes 7)				
⓯16	35454	1	Switch Box ASM				
⓰22	35455	2	Bolt-Case				
⓱23	35456	1	Screw-Ground				
⓴26	650819	2	Screw (6-32X2-1/2)				
⓶30	30063	2	Screw (T-30, 1/4-20X1/2)				
⓷31	650820	2	Screw (1/4-20X1/2)				

Attachments and Accessories

For 38650 - Power Max 11280XE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
28 Inch Drift Breaker	107-3817

NOTES

