



Z300 Z Master[®]

With 40in 7-Gauge Side Discharge Mower

Model No. 79409 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Connection Assembly	 3	Piston and Crankshaft Assembly Kawasaki FH580V-AS40-R	 22
Deck Assembly	 4	Valve and Camshaft Assembly Kawasaki FH580V-AS40-R	 23
Spindle Assembly No. 110-9963	 5	Lubrication Equipment Assembly Kawasaki FH580V-AS40-R	 24
Deck Decal Assembly No.114-0518	 6	Cooling Equipment Assembly Kawasaki FH580V-AS40-R	 25
Deflector Assembly No. 110-9917	 7	Electric Equipment Assembly Kawasaki FH580V-AS40-R	 26
Idler Assembly No. 112-3787	 8	Control Equipment Assembly Kawasaki FH580V-AS40-R	 27
Brake Linkage Assembly	 9	Carburetor Assembly Kawasaki FH580V-AS40-R	 28
Front Frame Assembly	 10	Air Filter and Muffler Assembly Kawasaki FH580V-AS40-R	 29
Frame Decal Assembly No. 114-0525	 11	Fuel Tank and Valve Assembly Kawasaki FH580V-AS40-R	 30
Caster and Height-of-Cut Assembly	 12	Starter Assembly Kawasaki FH580V-AS40-R	 31
Seat Assembly	 13	Label Assembly Kawasaki FH580V-AS40-R	 32
Steering Control Assembly	 14	Attachments and Accessories List	 33
Fuel Tank Assembly	 15		
Engine Mounting Assembly	 16		
Hydraulic Drive Assembly	 17		
RH Transmission Assembly No. 109-5846	 18		
LH Transmission Assembly No. 109-5847	 19		
Electrical Assembly	 20		
Cylinder and Crankcase Assembly Kawasaki FH580V-AS40-R	 21		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❸ Obtain from your local Kawasaki dealer

- ❷ Not serviced separately

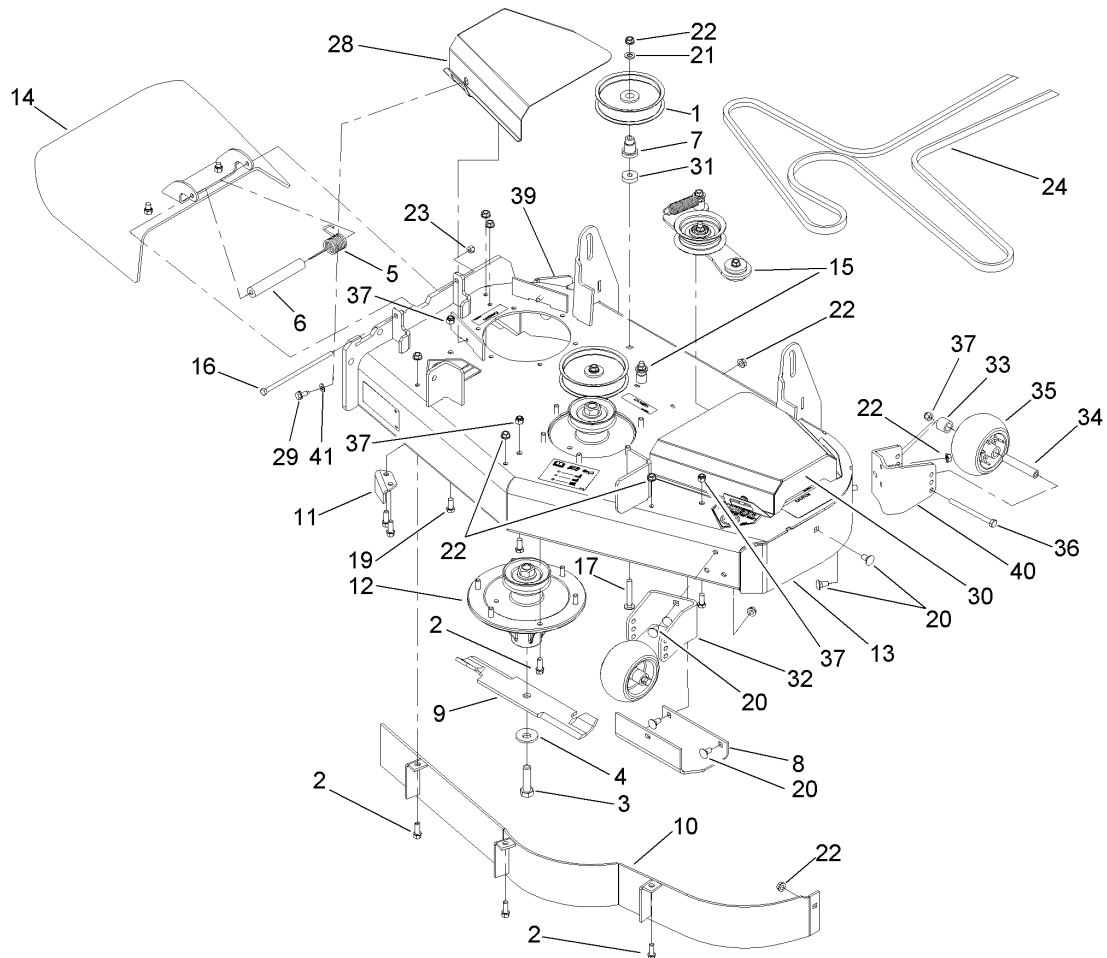

Deck Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-613098	2	Pulley-Idler	29	32144-70	4	Screw-HWHTF
2	92-1624	23	Screw	30	110-9982-01	1	Cover-LH
3	51-4060	3	Screw-Blade	31	105-7788	2	Spacer
4	103-0865	3	Washer-Blade Bolt, Heavy	32	110-9946-01	1	Plate-Support, Wheel
5	108-4052	1	Spring-Torsion	33	98-7913	3	Tube-Spacer
6	105-4622	1	Spacer	34	98-7912	3	Tube-Spanner
7	106-3214	2	Mount-Pulley	35	1-603299	3	Roller-Scalp, Anti
8	107-3166-01	1	Skid	36	323-23	3	Screw-HH
9	108-4081-03	3	Blade-14 Inch (High Sail)	37	3296-39	6	Nut-Lock, NI
10	108-7266-01	1	Baffle ASM	39	110-9991-01	1	Mount-Wheel, RH
11	108-7273-01	1	Baffle-Discharge	40	110-9992-01	1	Mount-Wheel, LH
12	110-9963	3	Spindle ASM	41	3256-23	4	Washer-Flat
13	114-0518	1	Deck Decal ASM				
14	110-9917	1	Deflector ASM				
15	112-3787	1	Idler ASM				
16	322-50	1	Screw-HH				
17	3231-31	2	Screw-CARR				
19	323-5	3	Screw-HH				
20	3231-1	13	Screw-CARR				
21	3256-24	2	Washer-Flat				
22	3290-357	26	Nut-HHF, Whiz				
23	3296-29	1	Nut-Lock, NI				
24	114-0453	1	Belt-V				
28	110-9959-01	1	Cover-RH				

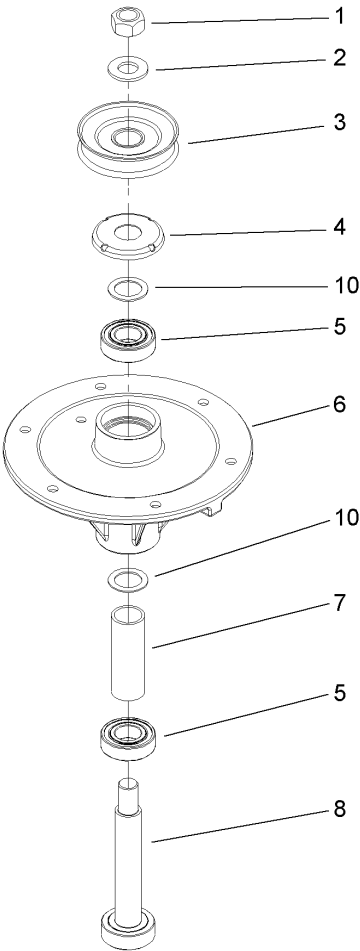

Spindle Assembly No. 110-9963


Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	110-9931	1	Pulley				
4	106-3204	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	108-6696	1	Housing-Spindle				
7	107-8502	1	Spacer-Bearing				
8	110-0726	1	Shaft-Spindle				
10	10-8110	2	Washer-Thrust				

Ref	Part No.	Qty.	Description
2	1-403005	1	Decal-Danger
3	54-9220	1	Decal-Danger
5	68-8340	1	Decal-Torque
6	98-5954	3	Decal-Cover, Missing
7	112-3792	1	Decal
8	112-3858	1	Decal-Anti Scalp

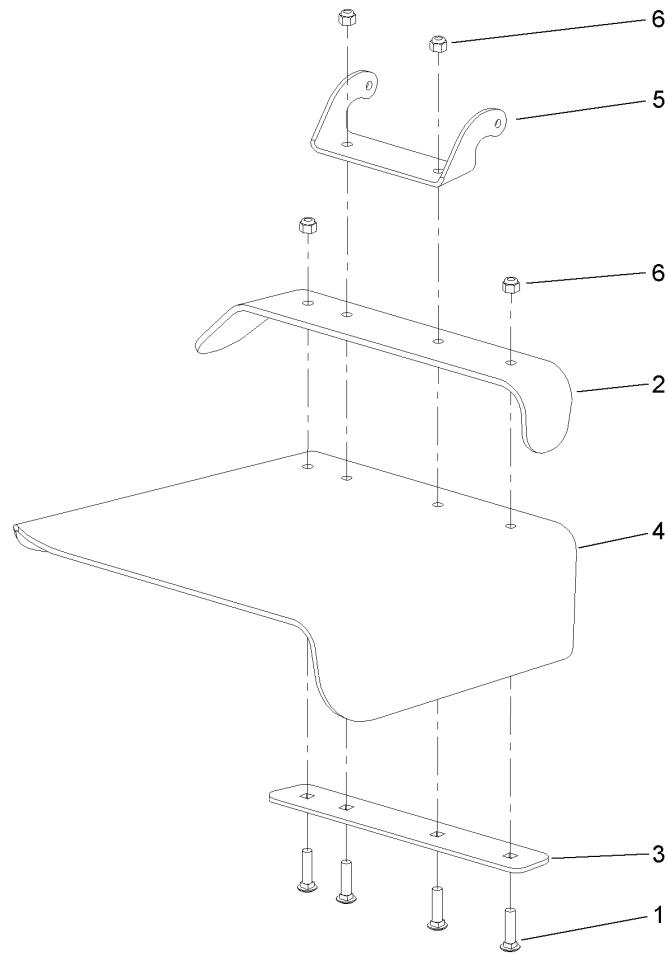


Deflector Assembly No. 110-9917

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	110-0792-01	1	Deflector				
3	110-0793-03	1	Strap-Discharge				
4	110-0791	1	Deflector-Rubber				
5	110-9923-01	1	Bracket-Mounting, Deflector				
6	3296-39	4	Nut-Lock, NI				

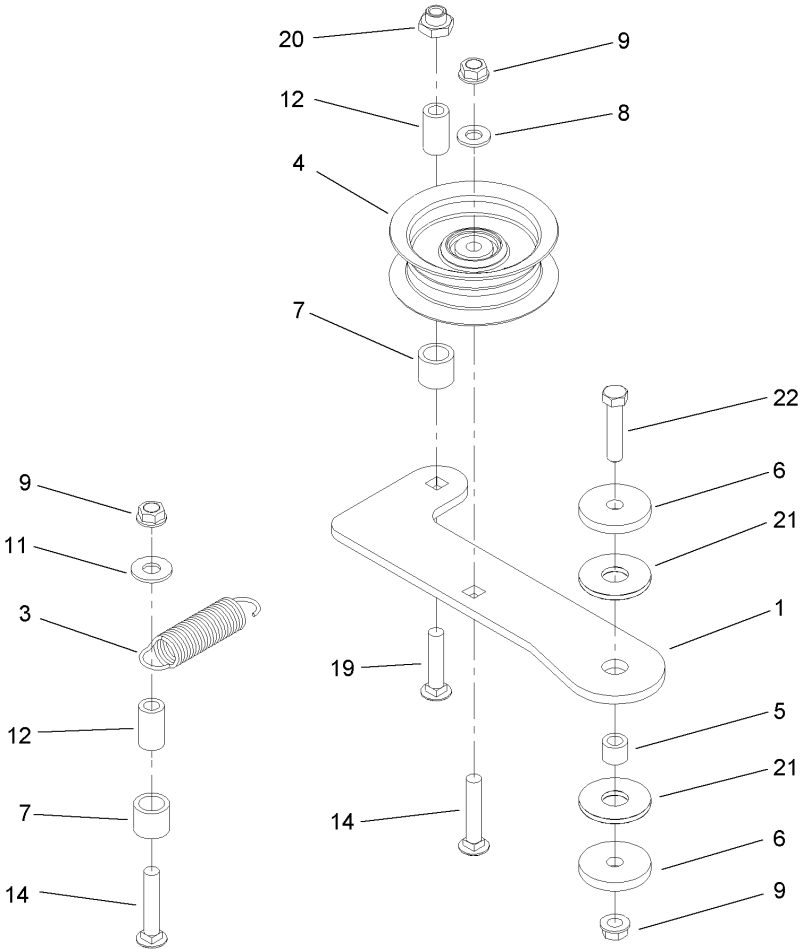


Idler Assembly No. 112-3787

Ref	Part No.	Qty.	Description				
1	110-9996	1	Arm-Idler				
3	108-4056	1	Spring-Extension				
4	106-2175	1	Pulley-Idler, Flat				
5	1-413088	1	Bushing-Lever, Lift				
6	110-9981	2	Washer-Plain				
7	108-4063	2	Spacer-Rubber				
8	3256-24	1	Washer-Flat				
9	3290-357	3	Nut-HHF, Whiz				
11	3256-4	2	Washer-Flat				
12	1-603401	3	Spacer-Fender				
14	3231-6	2	Screw-CARR				
19	3231-5	1	Screw-CARR				
20	103-9933	1	Nut-Shoulder				
21	114-0463	2	Washer-Friction, Composite				
22	323-9	1	Screw-HH				

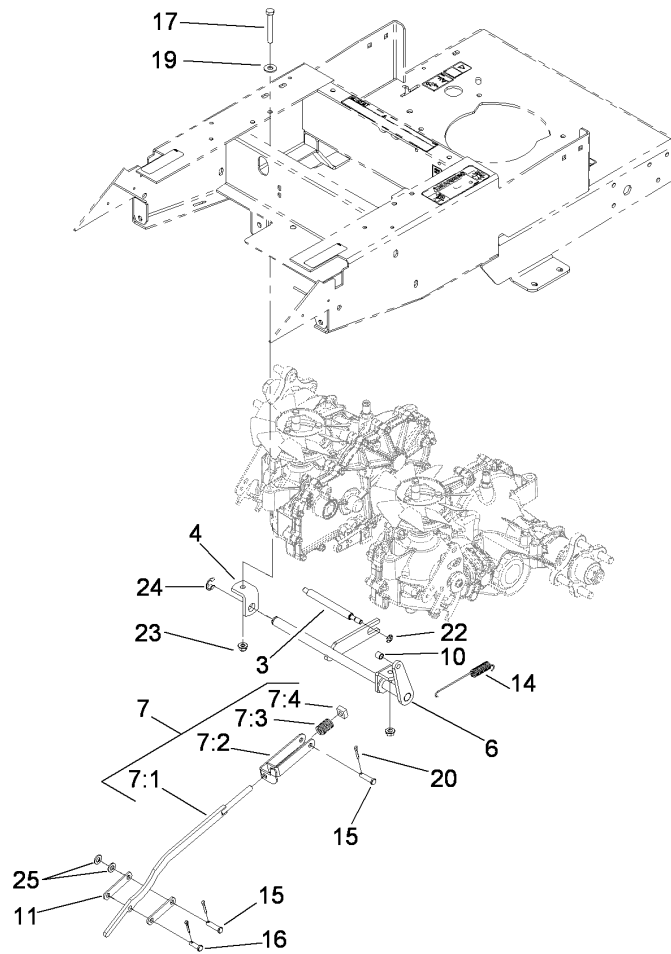


Brake Linkage Assembly

Ref	Part No.	Qty.	Description				
3	103-9408	1	Bar-Equalizer				
4	103-9409	1	Bracket-Pivot, Brake				
6	109-5376	1	Bellcrank-Brake				
7		1	Brake Link ASM				
7:1	109-5370	1	Link-Brake				
7:2	114-0548	1	Clevis-Brake				
7:3	103-9925	1	Spring-Brake				
7:4	103-9926	1	Nut-Square				
10	1-633545	1	Spacer				
11	109-0223	2	Link-Center, Over				
14	109-2861	1	Spring-Return, Brake				
15	283-6	2	Pin-Clevis				
16	283-75	1	Pin-Clevis				
17	322-12	2	Screw-HH				
19	3256-3	2	Washer-Flat				
20	3272-10	3	Pin-Cotter				
22	32120-35	1	Ring-Retaining, EXT				
23	104-8300	2	Nut-Flange, NI				
24	32120-19	1	E-Ring				
25	3256-23	2	Washer-Flat				

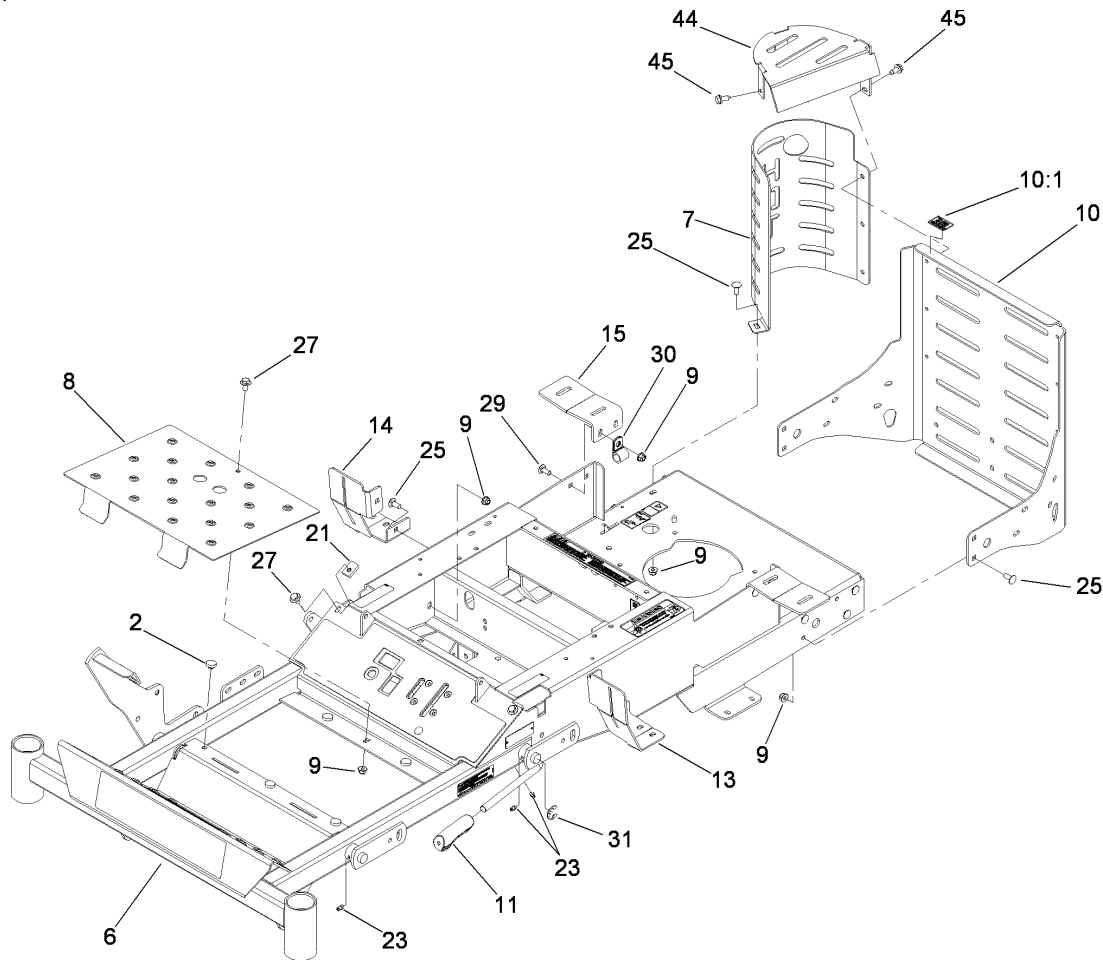


Front Frame Assembly

Ref	Part No.	Qty.	Description				
2	1-513658	5	Bumper				
6	114-0525	1	Frame ASM				
7	103-9343-03	1	Guard-Muffler				
8	103-9381-03	1	Plate, Floor				
9	104-8300	19	Nut-Flange, NI				
10	114-0543	1	Rear Guard ASM				
10:1	93-8069	1	Decal-Surface, Hot				
11	109-0375	1	Grip-Lever, Brake				
13	109-2421-03	1	Mount-Tank, Fuel (LH)				
14	109-2422-03	1	Mount-Tank, Fuel (RH)				
15	109-2429-03	2	Bracket-Fuel Tank, Rear				
21	109-2605	2	Motion Stop				
23	302-19	5	Fitting-Grease				
25	3230-23	13	Screw-CARR				
27	3234-7	3	Screw-HHF				
29	3230-16	4	Screw-CARR				
30	1-603727	2	Clip-Loom				
31	32151-48	1	E-Ring				
44	114-0481-03	1	Shield-Heat				
45	32144-70	5	Screw-HWHTF				

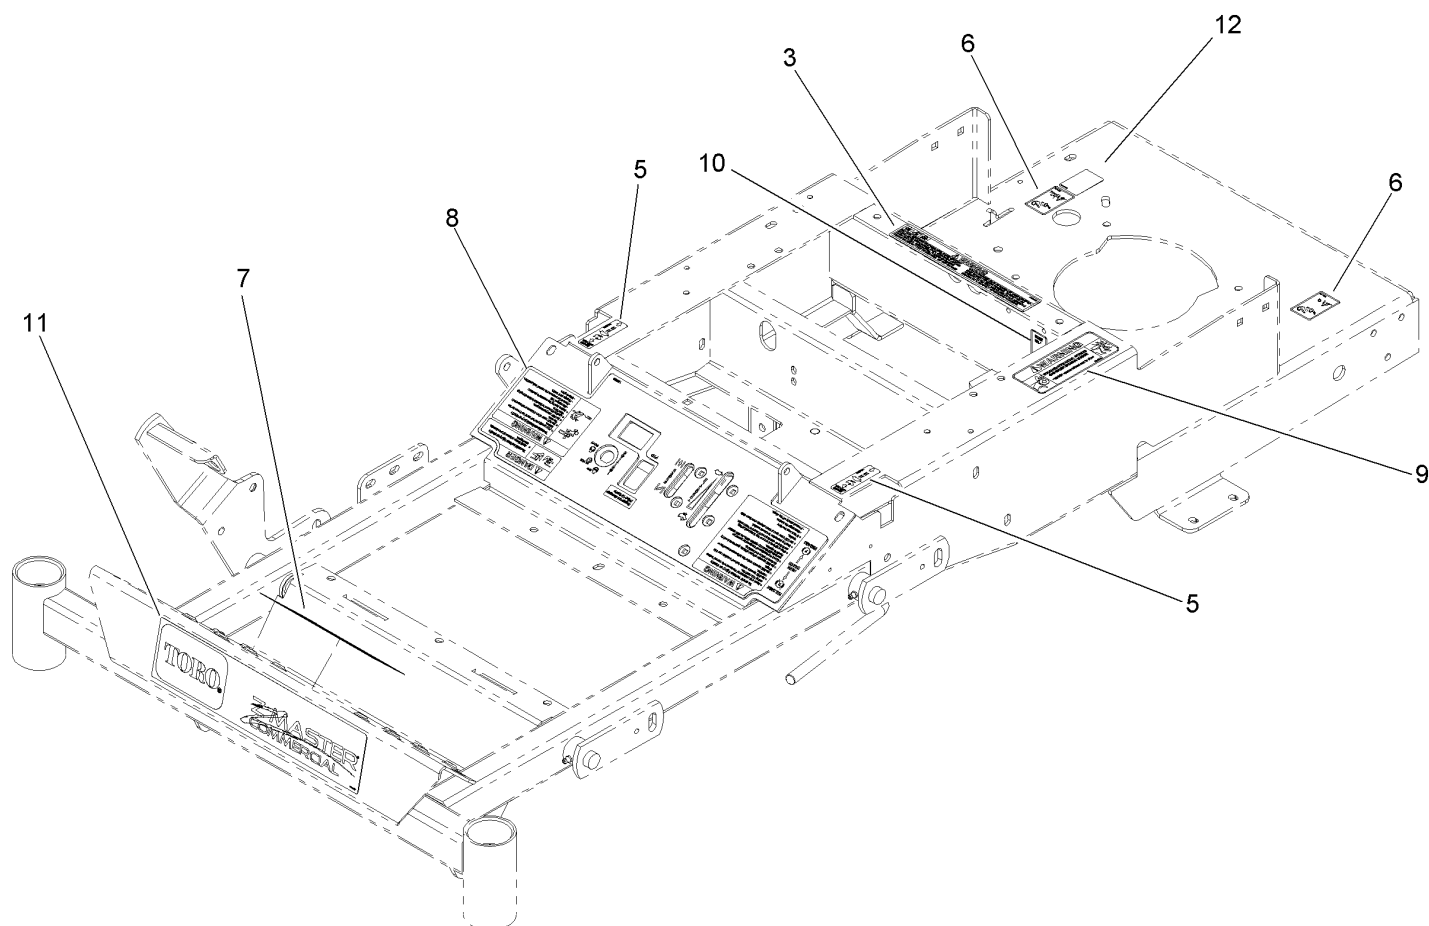

Frame Decal Assembly No. 114-0525


Ref	Part No.	Qty.	Description				
3	1-513747	1	Decal-Battery				
5	99-8936	2	Decal-Control, Motion				
6	112-3854	2	Decal-Transport, Ce				
7	109-2490	1	Decal-Slope, Danger				
8	112-3833	1	Decal-Console				
9	109-2862	1	Decal-Devices, Rotating				
10	109-2539	1	Decal-Relay				
11	112-3837	1	Decal				
12	93-8069	1	Decal-Surface, Hot				

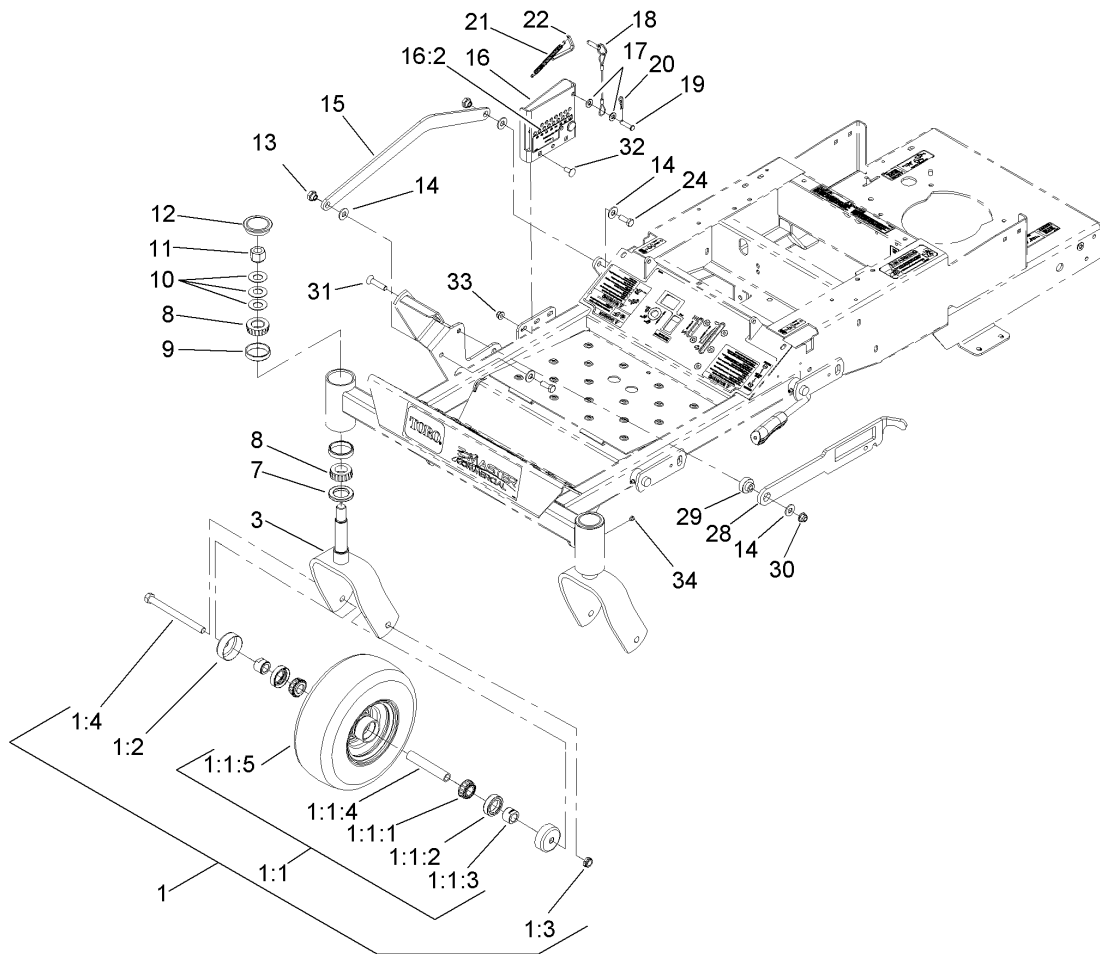

Caster and Height-of-Cut Assembly


Ref	Part No.	Qty.	Description
1	112-3810	2	Wheel And Bearing ASM
2 1:1		1	Wheel Bearing ASM
1:1:1	1-633585	2	Bearing-Cone, Taper
1:1:2	103-0063	2	Seal-Caster
1:1:3	103-3051	2	Spacer-Nut
1:1:4	103-3157	1	Axle-Caster
1:1:5	110-9965	1	Wheel And Tire ASM
1:2	103-2768	2	Guard-Seal
1:3	3296-45	1	Nut-Lock, NI
1:4	325-20	1	Screw-HH
3	103-8618-01	2	Fork-Caster
7	1-543511	2	Seal-Grease
8	1-543509	4	Bearing-Roller, Tapered
9	1-543508	4	Cup-Bearing
10	1-633508	6	Washer-Bellville
11	3296-51	2	Nut-Lock, NI
12	103-4882	2	Cap-Grease
13	103-9933	2	Nut-Shoulder
14	63-8410	5	Washer
15	103-9932	1	Link-Control, Deck
16	109-3544	1	Height Adjust ASM
16:2	109-2463	1	Decal-Height, Deck
17	1-303334	2	Washer-Spring
18	109-3323	1	Height Pin W/Lanyard ASM

Ref	Part No.	Qty.	Description
19	283-6	1	Pin-Clevis
20	1-806003	1	Pin-Hair
21	109-2416	1	Spring-Adjust, Height
22	109-2620	1	Pawl-Control, Height
24	323-6	2	Screw-HH
28	109-2410	1	Bar-Adjust, Height
29	103-9934	1	Bushing
30	104-8301	1	Nut-Flange, NI
31	3289-19	1	Screw-FH
32	3230-23	2	Screw-CARR
33	104-8300	2	Nut-Flange, NI
34	1-811010	2	Plug

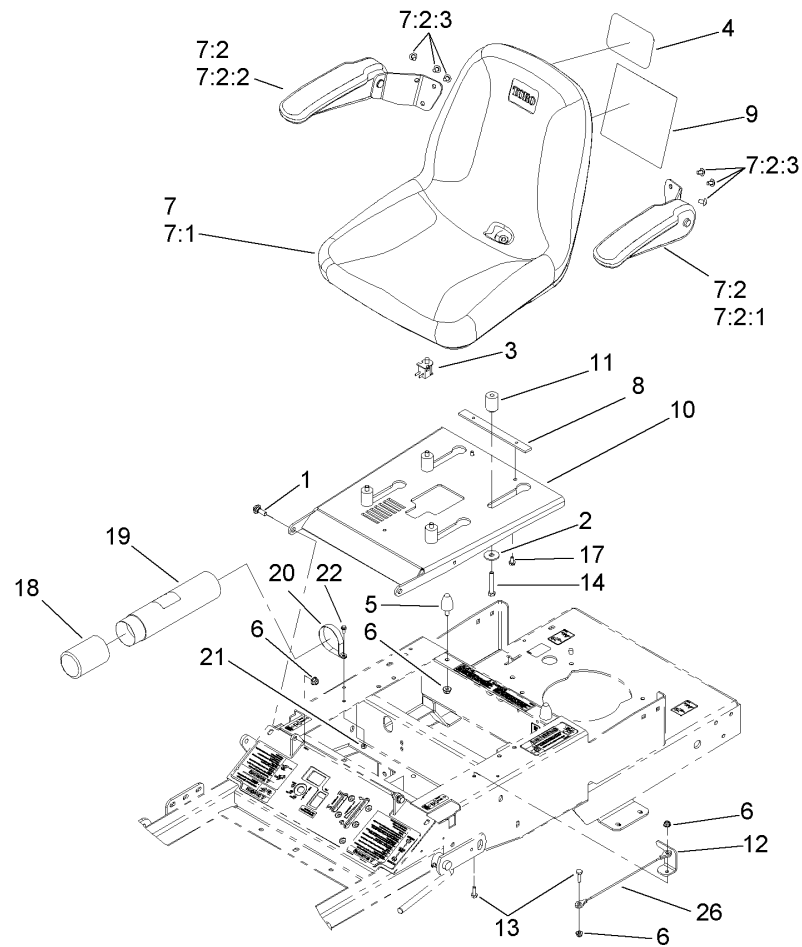

Seat Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	27-0410	2	Screw-Shoulder	22	3290-321	1	Screw-HWH
2	63-8410	4	Washer	26	109-2628	1	Cable-Stop, Seat
3	82-2190	1	Switch-Bail				
4	94-2579	1	Decal				
5	103-9376	2	Bumper-Seat				
6	104-8300	4	Nut-Flange, NI				
7	112-3845	1	Seat (With Arm Rests)				
7:1	112-3846	1	Seat				
7:2	108-6163	1	Armrest Kit				
7:2:1	110-6569	1	LH Armrest Kit				
7:2:2	110-6570	1	RH Armrest Kit				
7:2:3	108-6179	6	Screw-HSBH				
8	109-2427-03	1	Bar-Stop, Seat				
9	112-3836	1	Decal-Service				
10	109-2607-03	1	Bracket-Seat				
11	109-2608	4	Spacer				
12	114-0507	1	Bracket-Seat Holdown				
13	321-6	2	Screw-HH				
14	322-10	4	Screw-HH				
17	32144-4	2	Screw-HWH				
18	104-7048	1	Cap-Housing				
19	104-7050	1	Housing-Manual				
20	2412-120	1	R-Clamp				
21	3296-2	1	Nut-Lock				

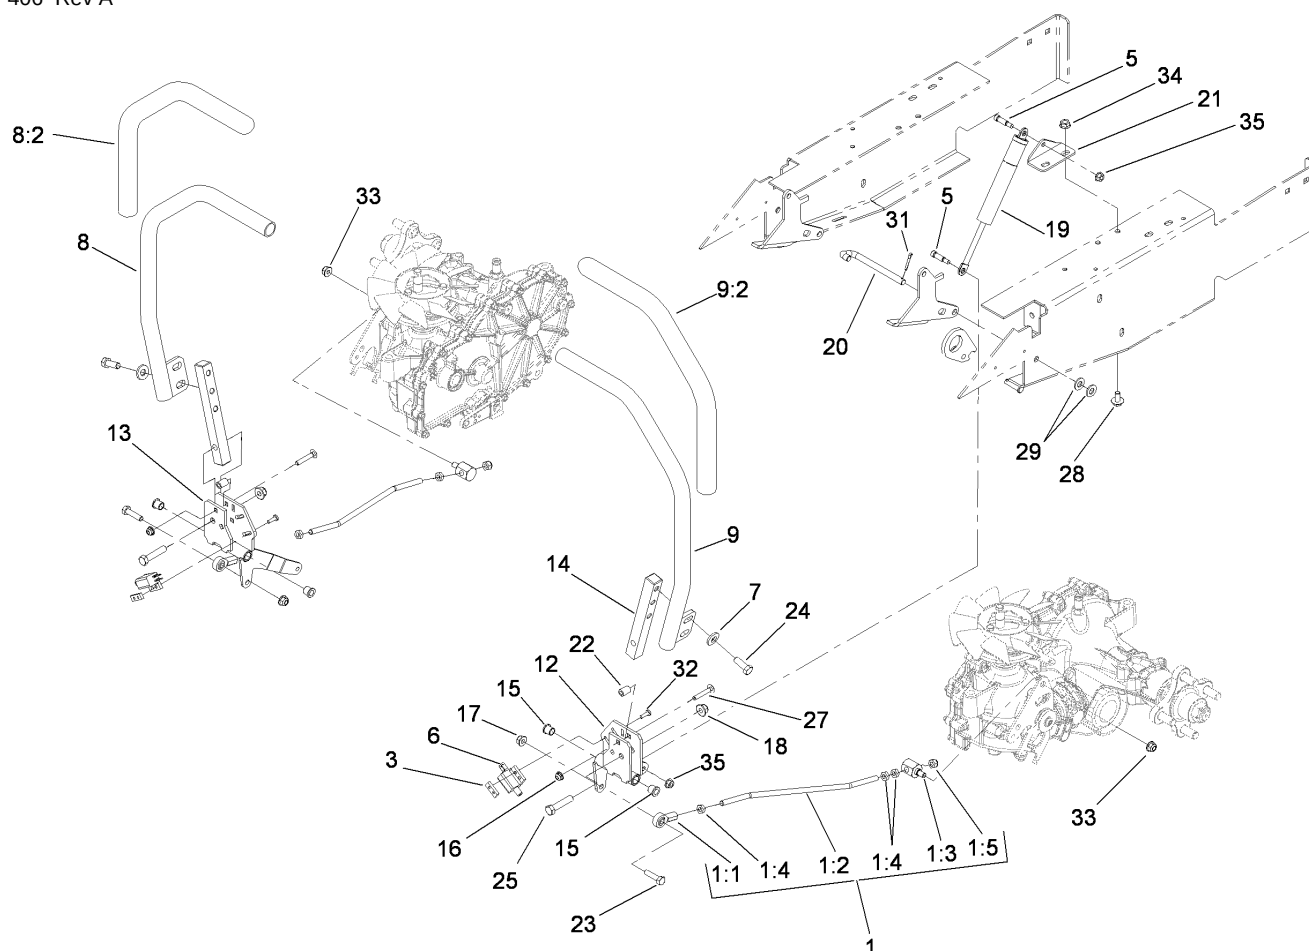

Steering Control Assembly

Ref	Part No.	Qty.	Description
21		2	Steering Rod ASM
1:1	1-543017	1	Balljoint-RH
1:2	103-9407	1	Rod-Steering, LH
1:3	103-9373	1	Trunnion
1:4	3220-2	3	Nut-Jam
1:5	3296-4	1	Nut-Lock
3	1-633181	2	Plate-Tapped
5	1-809057	4	Screw-HSH
6	65-7410	2	Switch-Pole, Single
7	98-5975	4	Washer-Belleville
8	112-3814	1	RH Control Lever ASM
8:2	108-5213	1	Grip-Foam
9	112-3815	1	LH Control Lever ASM
9:2	108-5213	1	Grip-Foam
12	103-9411	1	Control-Steering, RH
13	103-9413	1	Control-Steering, LH
14	103-9414	2	Mount-Post, Lever
15	103-9928	4	Bearing
16	104-7201	4	Nut-HF
17	104-8300	2	Nut-Flange, NI
18	104-8301	2	Nut-Flange, NI
19	109-2339	2	Damper-Control, Motion
20	109-2423	2	Shaft-Pivot, Control
21	109-2428	2	Bracket-Damper


Ref	Part No.	Qty.	Description
22	1-633545	4	Spacer
23	322-6	2	Screw-HH
24	323-6	4	Screw-HH
25	323-9	2	Screw-HH
27	3229-4	4	Screw-CARR
28	3234-7	4	Screw-HHF
29	3256-24	2	Washer-Flat
31	3272-10	2	Pin-Cotter
32	3290-500	4	Screw-PPH
33	104-8300	2	Nut-Flange, NI
34	32128-20	4	Nut-HF
35	32128-33	4	Nut-HF

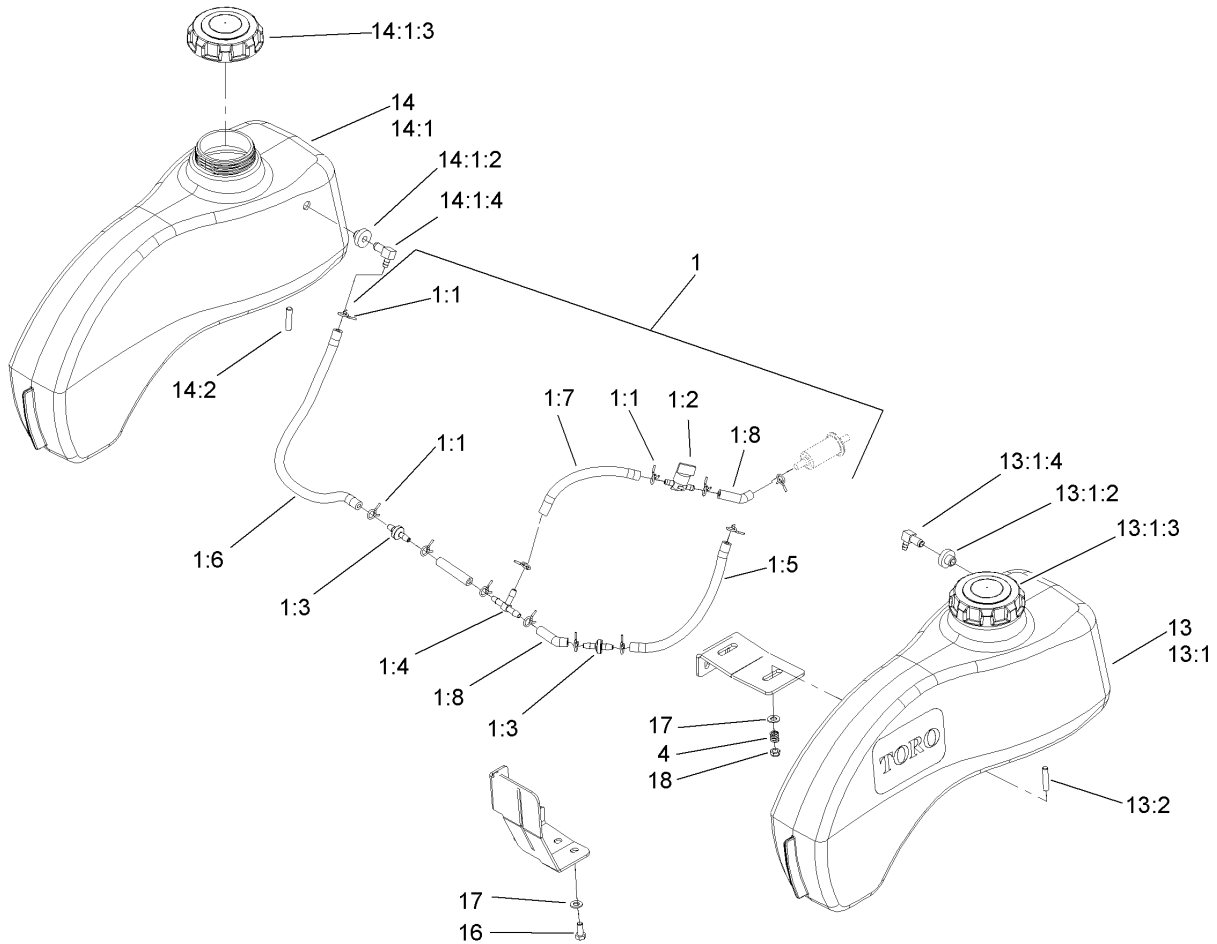

Fuel Tank Assembly


Ref	Part No.	Qty.	Description
1		1	Fuel Line ASM
1:1	1-303077	12	Clamp
1:2	1-603770	1	Valve-Fuel
1:3	99-5000	2	Valve-Check, Fuel
1:4	99-5005	1	Fitting-Tee, Barbed
1:5	107-7684	1	Hose-Fuel
1:6	108-4582	1	Hose-Fuel
1:7	109-0293	1	Hose-Fuel
1:8	109-0304	3	Hose-Fuel
4	1-633349	4	Spring-Tank, Fuel
13	112-3780	1	LH Tank ASM (W/Studs)
13:1		1	LH Tank ASM
13:1:2	104-7789	1	Bushing
13:1:3	109-0346	1	Cap-Fuel, Gas
13:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
13:2	1-633023	2	Stud
14	112-3783	1	RH Tank ASM (W/Studs)
14:1		1	RH Tank ASM
14:1:2	104-7789	1	Bushing
14:1:3	109-0346	1	Cap-Fuel, Gas
14:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
14:2	1-633023	2	Stud
16	322-3	2	Screw-HH
17	3256-23	6	Washer-Flat

Ref	Part No.	Qty.	Description
18	3296-47	4	Nut-Lock, NI

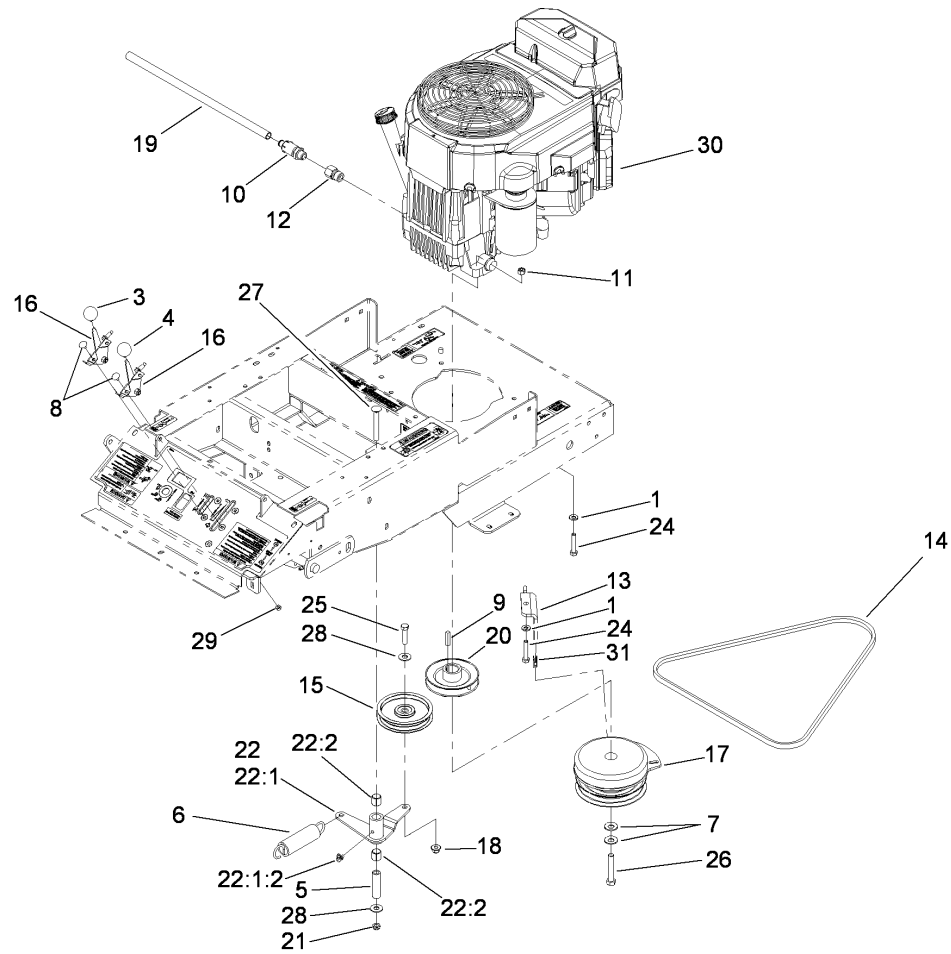

Engine Mounting Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-303334	4	Washer-Spring	24	322-9	4	Screw-HH
3	1-513592	1	Knob-Ball	25	323-8	1	Screw-HH
4	1-513593	1	Knob-Ball, Black	26	3212-10	1	Screw-HH
5	1-603384	1	Bushing-Pivot, Idler	27	3231-10	1	Screw-CARR
6	108-4056	1	Spring-Extension	28	3256-4	2	Washer-Flat
7	1-603610	2	Washer-Spring	29	3296-2	4	Nut-Lock
8	1-807513	4	Bolt-CARR	30		1	Engine-Kawasaki, FH580V-As40-R
9	13-2840	1	Key-Square	31	109-3765	1	Bumper
10	92-6877	1	Valve-Drain, Oil				
11	3296-29	4	Nut-Lock, NI				
12	103-1966	1	Adapter				
13	103-9356-03	1	Rotation-Stop, Clutch				
14	112-3799	1	Belt-V				
15	103-9401	1	Idler				
16	103-9946	2	Throttle Control ASM				
17	103-9950	1	Clutch				
18	104-8301	1	Nut-Flange, NI				
19	106-7022	1	Tube-Drain, Oil				
20	109-0393	1	Pulley-Engine				
21	3296-59	1	Nut-Lock, NI				
22	109-3119	1	Idler Hydro ASM				
22:1		1	Arm-Idler				
22:1:2	302-40	1	Fitting-Grease				
22:2	1-513034	2	Sleeve-Bearing				

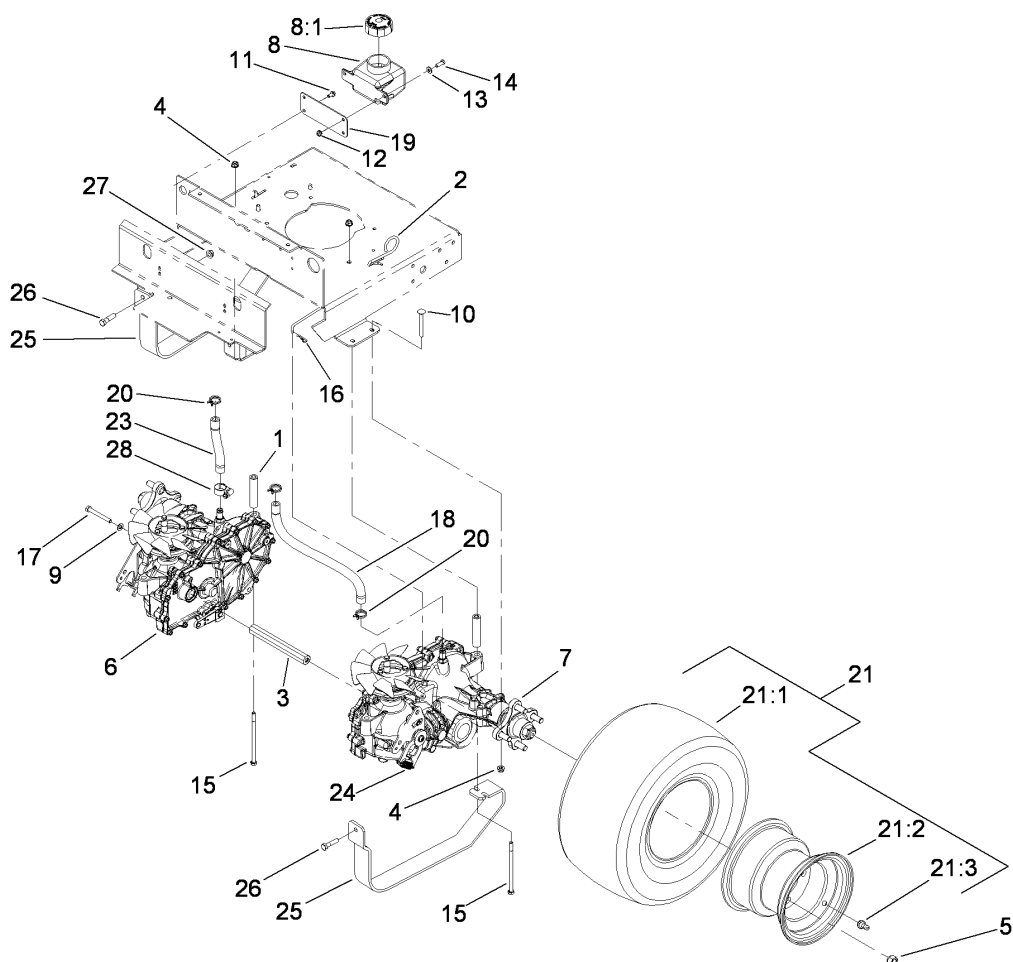

Hydraulic Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9397	2	Spacer-Hydro
2	103-9380	2	Rod-Bypass, Hydro
3	103-9398	1	Spacer-Axle
4	104-8300	6	Nut-Flange, NI
5	242-50	8	Nut-Lug
6	109-5846	1	Transmission-RH
7	109-5847	1	Transmission-LH
8	109-2250	1	Vent-Tank, Hydro
8:1	109-3320	1	Cap-Reservoir, Hydraulic
9	98-5975	2	Washer-Belleville
10	3230-9	4	Screw-CARR
11	32144-4	2	Screw-HWH
12	104-7201	2	Nut-HF
13	3256-22	2	Washer-Flat
14	321-4	2	Screw-HH
15	1-800286	2	Screw-HH
16	1-806003	2	Pin-Hair
17	323-11	2	Screw-HH
18	109-3459	1	Hose-HYD
19	103-9350-03	1	Plate-Mount, Tank
20	109-3322	4	Clamp-Hose
21	112-3795	2	Wheel And Tire
21:1	112-3798	1	Tire
21:2	217-60	1	Rim

Ref	Part No.	Qty.	Description
21:3	232-27	1	Stem-Valve
●21:99	232-37	1	Tube
23	109-3319	1	Hose-HYD
24	109-2631	2	Spring-Return, Neutral
25	114-0469-03	2	Guard-Transmission
26	323-8	2	Screw-HH
27	3290-357	2	Nut-HHF, Whiz
28	109-6801	1	Clamp-Hose

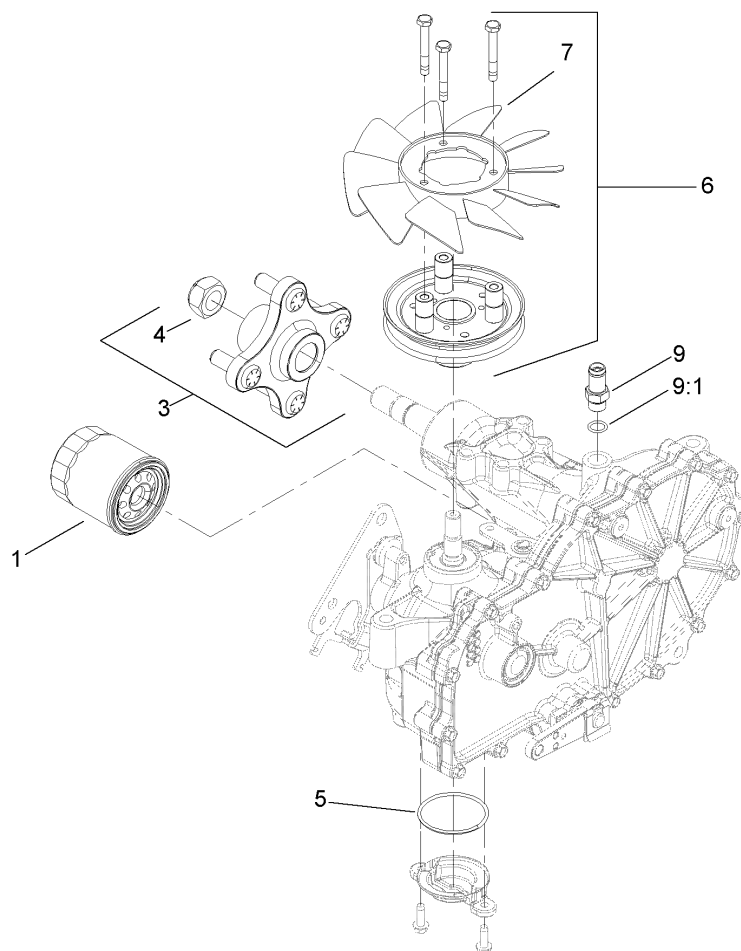


RH Transmission Assembly No. 109-5846

Ref	Part No.	Qty.	Description				
1	109-3321	1	Element-Oil Filter, HYD				
①2	109-3537	1	Complete Seal Kit				
3	109-3538	1	Hub-Kit				
4	109-3536	1	Nut-Hub				
5	109-3540	1	O-Ring-Seal				
6	109-3541	1	Fan And Pulley Kit				
7	109-3542	1	Fan				
9	109-3278	1	Adapter-Straight				
9:1	1-603921	1	O-Ring				

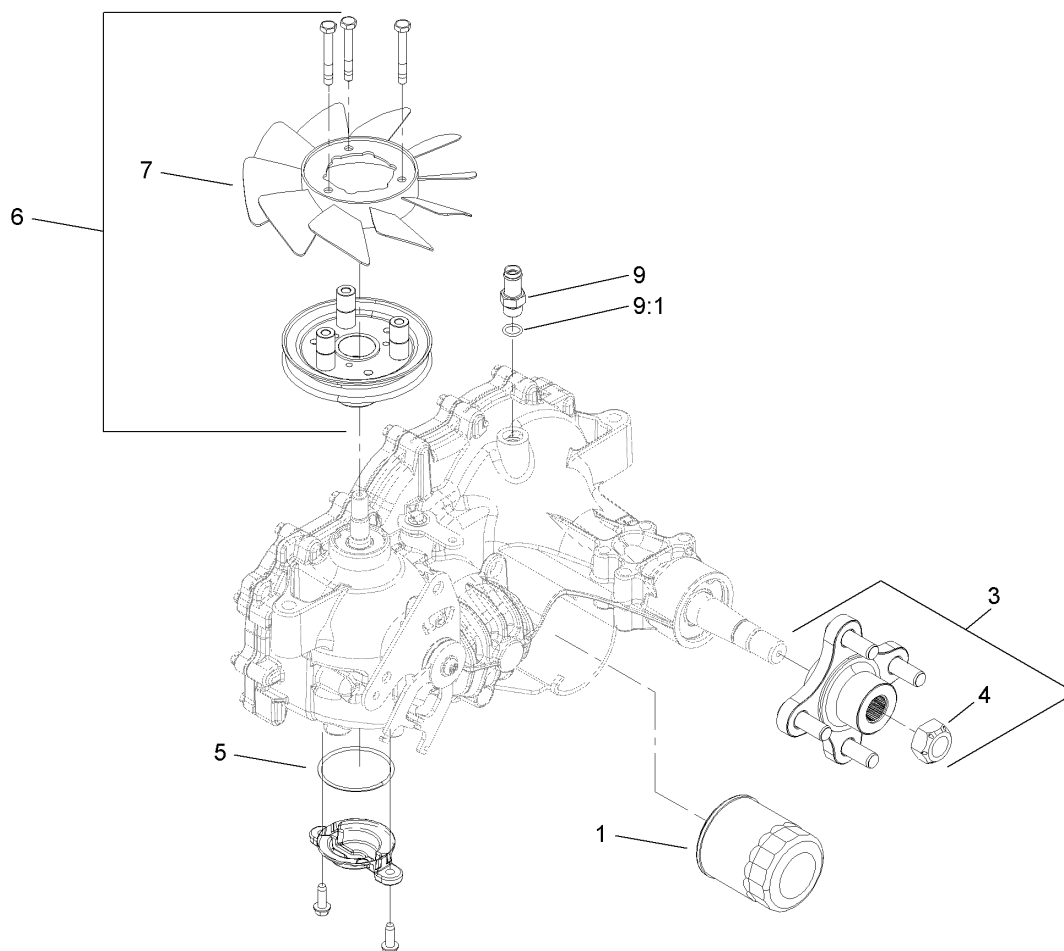

LH Transmission Assembly No. 109-5847


Ref	Part No.	Qty.	Description				
1	109-3321	1	Element-Oil Filter, HYD				
①2	109-3537	1	Complete Seal Kit				
3	109-3538	1	Hub-Kit				
4	109-3536	1	Nut-Hub				
5	109-3540	1	O-Ring-Seal				
6	109-3541	1	Fan And Pulley Kit				
7	109-3542	1	Fan				
9	109-3278	1	Adapter-Straight				
9:1	1-603921	1	O-Ring				

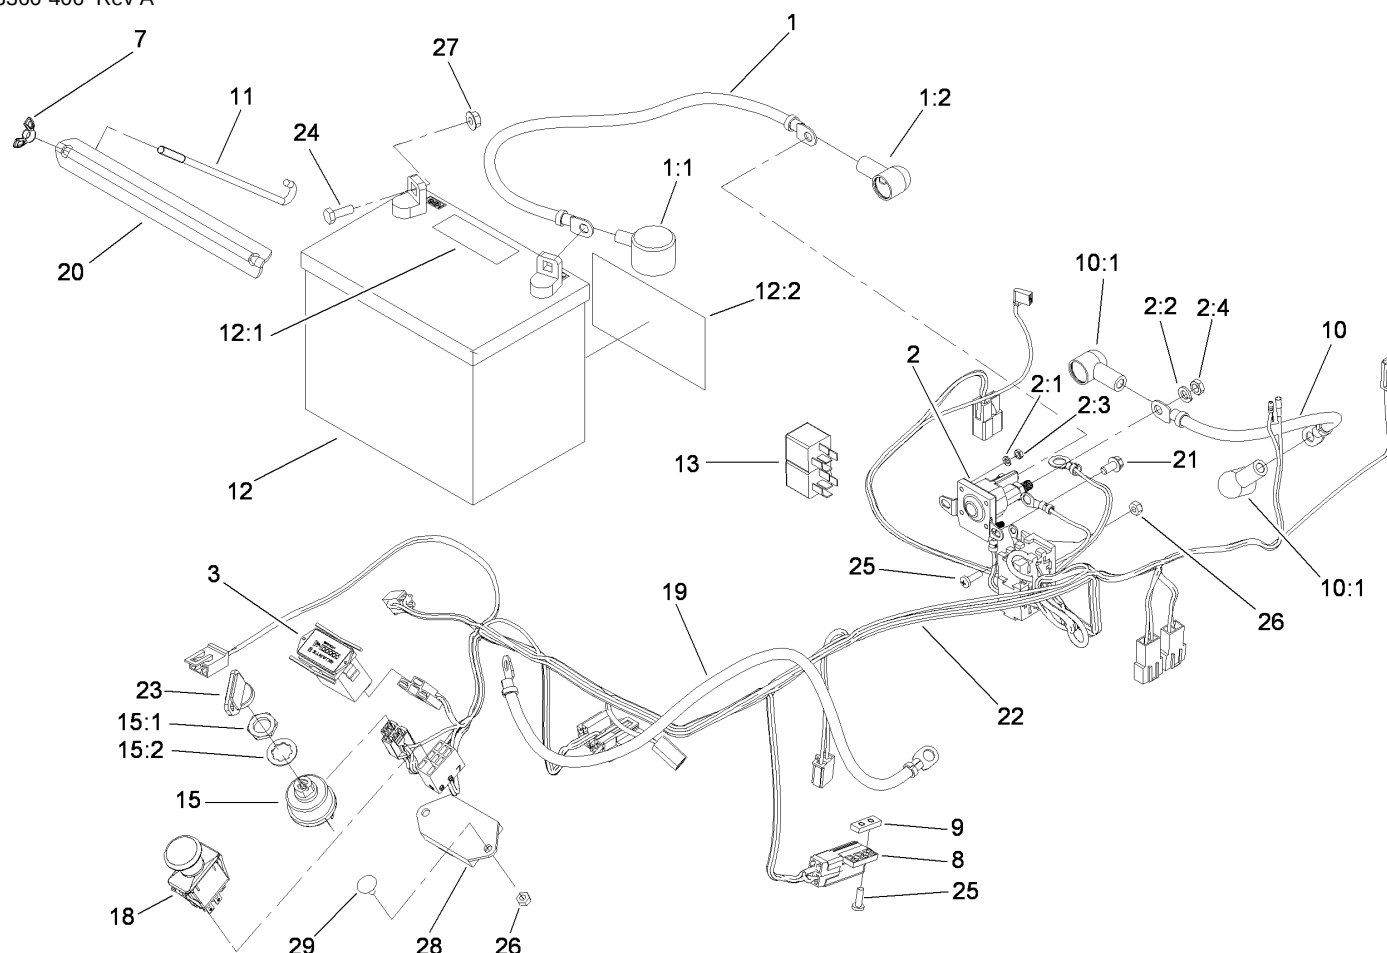

Electrical Assembly


Ref	Part No.	Qty.	Description
1	109-7653	1	Positive Battery Cable ASM
1:1	109-2407	1	Insulator-Battery
1:2	1-543393	1	Insulator-Solenoid
2	1-513075	1	Switch-Solenoid
2:1	3253-17	2	Washer-Lock
2:2	3253-4	2	Washer-Lock
2:3	3219-14	2	Nut-Hex
2:4	3220-2	2	Nut-Jam
3	1-513374	1	Meter-Hour
7	1-543792	2	Wingnut
8	1-633111	1	Switch
9	1-633181	1	Plate-Tapped
10	109-7620	1	Positive Starter Cable ASM
10:1	1-543393	2	Insulator-Solenoid
11	1-633651	2	Bolt-Holddown
12	105-1692	1	Battery
12:1	104-4163	1	Decal-Battery
12:2	104-4164	1	Decal-Battery
13	1-643275	2	Relay
15	104-2541	1	Switch ASM
15:1	218-461	1	Nut-HH
15:2	3254-5	1	Washer-Tooth
18	103-5221	1	Switch-PTO
19	103-8355	1	Cable-Battery, Negative

Ref	Part No.	Qty.	Description
20	103-9944-03	1	Angle-Battery
21	32144-4	2	Screw-HWH
22	109-4112	1	Harness-Wire
23	63-8360	1	Key-Ignition
24	321-4	2	Screw-HH
25	3290-500	6	Screw-PPH
26	3296-2	5	Nut-Lock
27	32128-33	2	Nut-HF
28	100-6186	1	Module-Delay, Seat
29	1-807513	1	Bolt-CARR

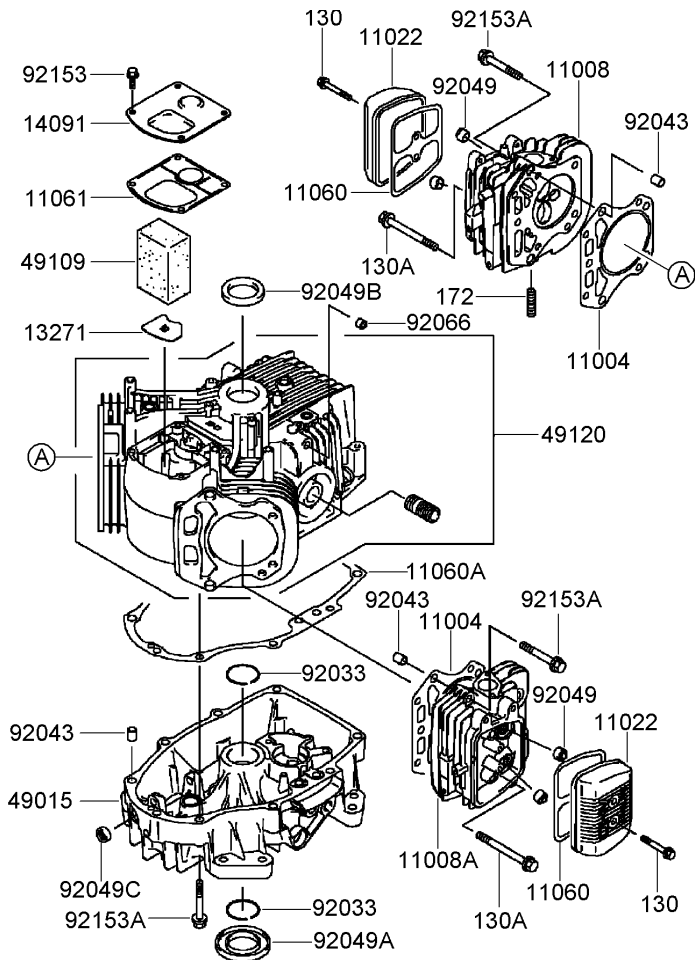


Cylinder and Crankcase Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❶11004	11004-7016	2	Gasket-Head				
❶11008	11008-6043	1	Head-Cylinder, No. 1				
❶11008A	11008-7020	1	Head-Cylinder, No. 2				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6253	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-7023	1	Crankcase				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
❶92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
❶92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
❶92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
❶92066	92066-7002	1	Plug				
❶92153	92153-7043	4	Bolt (6X12)				
❶92153A	92153-7054	17	Bolt (8X50)				
❶130	130B0640	4	Bolt-Flanged (6X40)				
❶130A	130CA0875	2	Bolt-Flanged (8X75)				
❶172	172G0818	4	Bolt-Stud (8X18)				

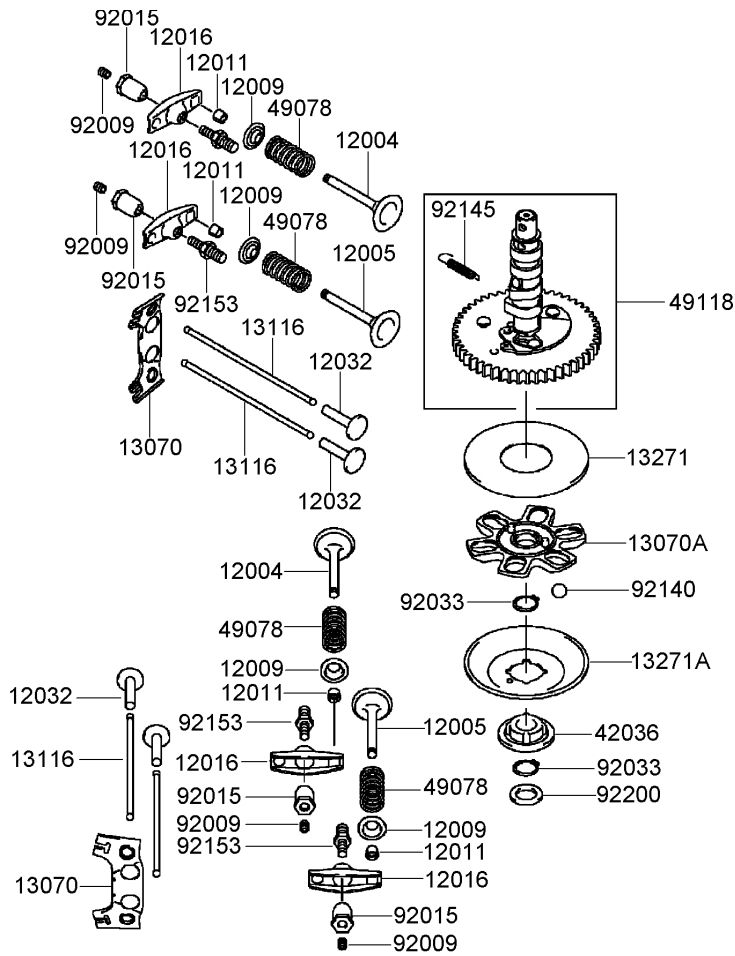


Valve and Camshaft Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❶12004	12004-7003	2	Valve-Intake				
❶12005	12005-7003	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7008	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7010	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7004	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

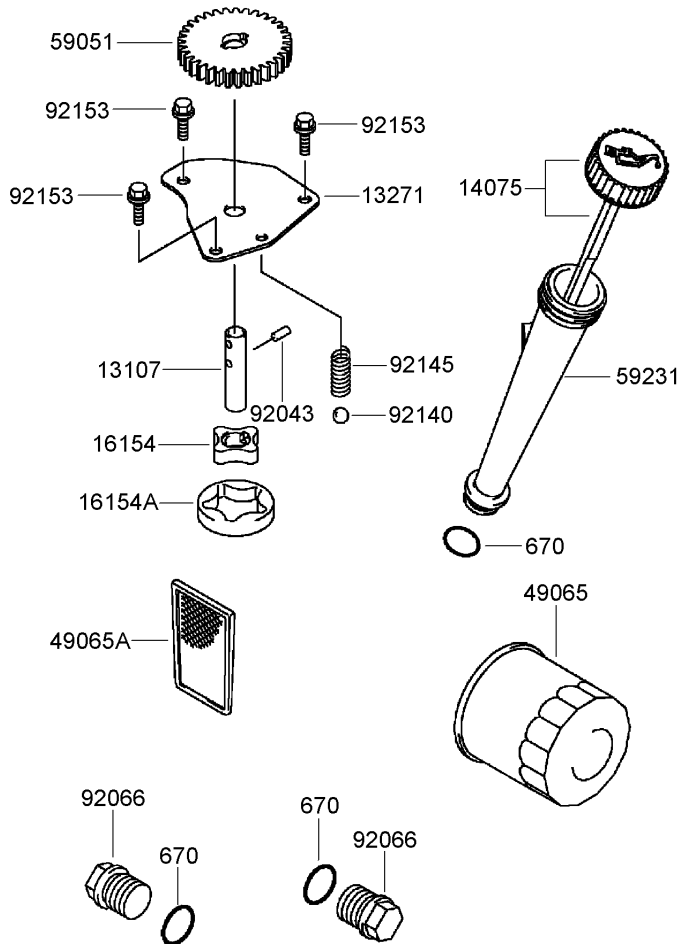


Lubrication Equipment Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
③13107	13107-7009	1	Shaft				
③13271	13271-7017	1	Plate				
③14075	14075-7009	1	Cap ASM				
③16154	16154-2053	1	Rotor-Pump (In)				
③16154A	16154-2054	1	Rotor-Pump (Out)				
③49065	49065-2078	1	Filter-Oil				
③49065A	49065-7004	1	Filter-Oil				
③59051	59051-7011	1	Gear-Spur				
③59231	59231-7005	1	Filler				
③92043	92043-7003	2	Pin				
③92066	92066-7003	2	Plug				
③92140	92140-7003	1	Ball				
③92145	92145-7002	1	Spring				
③92153	92153-7043	3	Bolt (6X12)				
③670	670D2016	3	O-Ring (16Mm)				

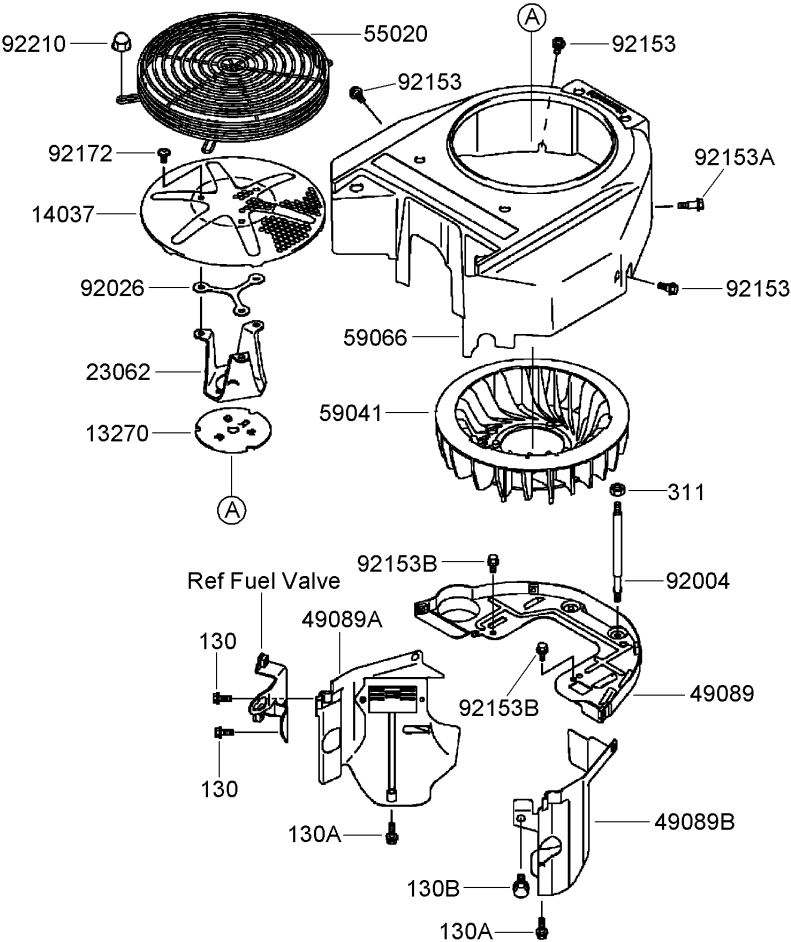


Cooling Equipment Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7020-9H	1	Screen				
❸23062	23062-7010	1	Bracket				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸55020	55020-7004	1	Guard				
❸59041	59041-7012	1	Fan				
❸59066	59066-7037	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92026	92026-7007	1	Spacer				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸92153B	92153-7043	2	Bolt (6X12)				
❸92172	92172-7029	3	Screw-Socket (6X12)				
❸92210	92210-0003	4	Nut				
❸130	130B0616	2	Bolt-Flanged (6X16)				
❸130A	130B0625	2	Bolt-Flanged (6X25)				
❸130B	130B0816	1	Bolt-Flanged (8X16)				
❸311	311B0600	2	Nut-Hex (6Mm)				

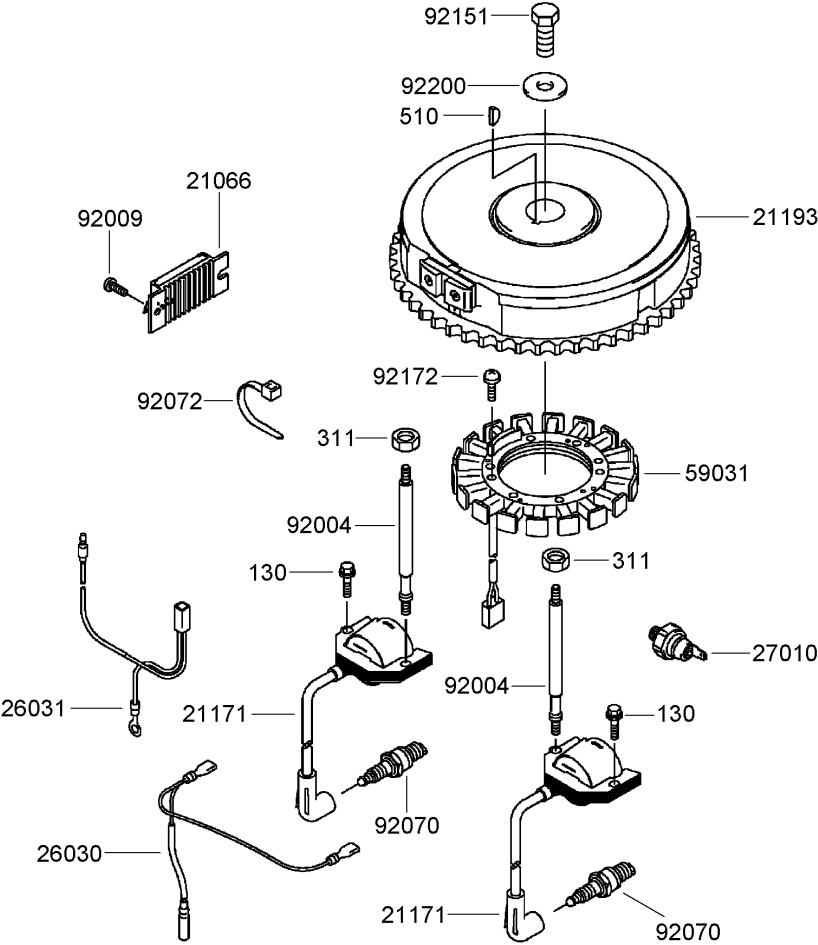


Electric Equipment Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❶21066	21066-7011	1	Regulator-Voltage				
❷21171	21171-7013	2	Ignition Coil ASM				
❸21193	21193-7007	1	Flywheel ASM				
❹26030	26030-7001	1	Harness				
❺26031	26031-7012	1	Harness				
❻27010	27010-7001	1	Switch				
❼59031	59031-7009	1	Coil-Charging				
❸92004	92004-7009	2	Stud				
❸92009	92009-2308	1	Screw				
❸92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
❸92072	92072-7003	3	Band				
❸92151	92151-2097	1	Bolt (12X30)				
❸92172	92172-7018	4	Screw (5X20)				
❸92200	92200-7002	1	Washer				
❸130	130B0620	2	Bolt-Flanged (6X20)				
❸311	311B0600	2	Nut-Hex (6Mm)				
❸510	510A5100	1	Key-Woodruff				

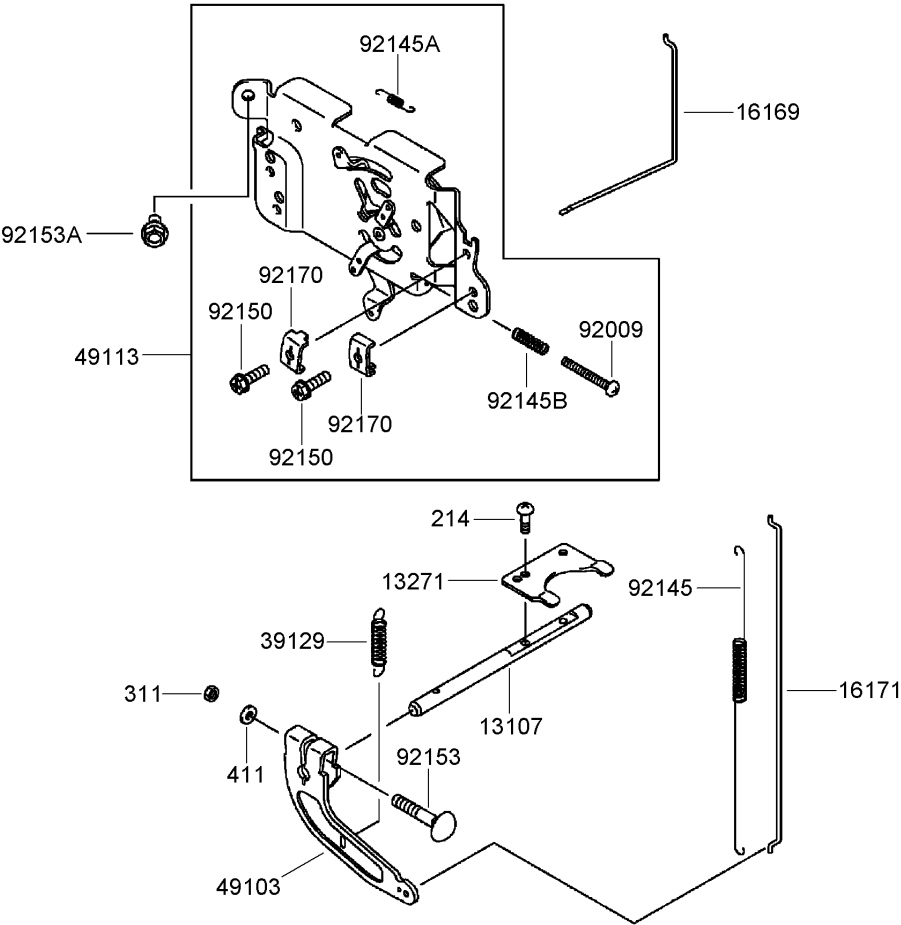

Control Equipment Assembly
Kawasaki FH580V-AS40-R


Ref	Part No.	Qty.	Description				
13107	13107-7010	1	Shaft				
13271	13271-7032	1	Plate				
16169	16169-7010	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7004	1	Arm-Governor				
49113	49113-7011	1	Panel-Control				
92009	92009-7007	1	Screw (4X35)				
92145	92145-7003	1	Spring				
92145A	92145-7004	1	Spring				
92145B	92145-7005	1	Spring				
92150	92150-2182	2	Bolt (5X18)				
92153	92153-7033	1	Bolt (6X35)				
92153A	92153-7043	2	Bolt (6X12)				
92170	92170-7001	2	Clamp				
214	214B0408	2	Screw-Pan (4X8)				
311	311B0600	1	Nut-Hex (6Mm)				
411	411B0600	1	Washer-Plain (6Mm)				

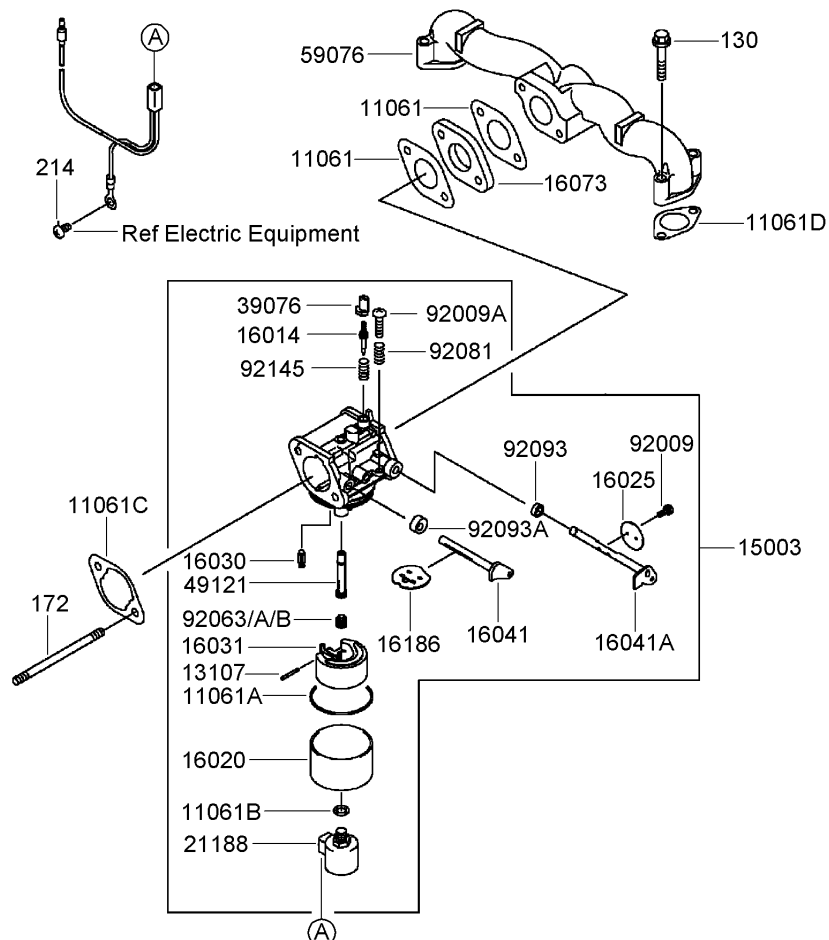

Carburetor Assembly Kawasaki FH580V-AS40-R


Ref	Part No.	Qty.	Description
①11061	11061-7004	2	Gasket-Insulator
①11061A	11061-7009	1	Gasket-Chamber
①11061B	11061-7010	1	Gasket-Screw
①11061C	11061-7018	1	Gasket-Cleaner, Air
①11061D	11061-7019	2	Gasket
①13107	13107-7018	1	Shaft
①15003	15003-7100	1	Carburetor ASM
①16014	16014-7007	1	Screw-Air, Pilot
①16020	16020-7003	1	Chamber-Float
①16025	16025-7006	1	Valve-Throttle
①16030	16030-7003	1	Valve-Float
①16031	16031-7002	1	Float
①16041	16041-7016	1	Shaft-Choke, Carburetor
①16041A	16041-7018	1	Shaft-Throttle, Carburetor
①16073	16073-7007	1	Insulator
①16186	16186-7004	1	Choke Valve ASM
①21188	21188-7002	1	Solenoid
①39076	39076-7001	1	Limiter
①49121	49121-7004	1	Nozzle-Main
①59076	59076-7001	1	Manifold-Intake
①92009	92009-2083	2	Screw
①92009A	92009-2349	1	Screw
①92063	92063-7037	1	Jet-Main (No. 105)
①92063A	92063-7046	1	Jet-Main (No. 100)

Ref	Part No.	Qty.	Description
①92063B	92063-7062	1	Jet-Main No. 110
①92081	92081-2234	1	Spring
①92093	92093-2100	1	Seal
①92093A	92093-7003	1	Seal
①92145	92145-7015	1	Spring
①130	130B0635	4	Bolt-Flanged (6X35)
①172	172G0690	2	Bolt-Stud (6X90)
①214	214B0510	1	Screw-Pan (5X10)

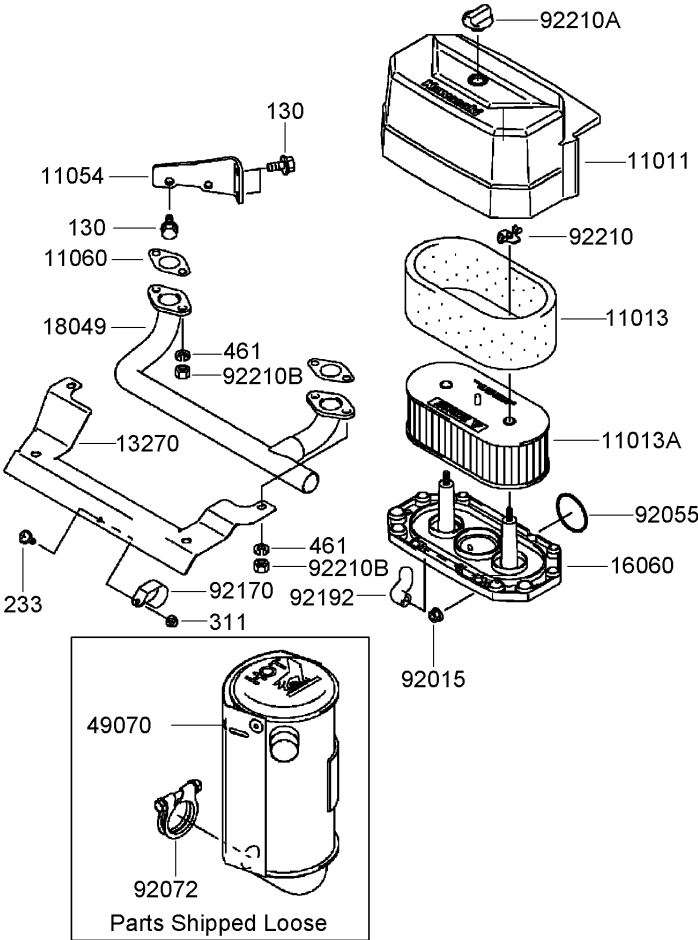


Air Filter and Muffler Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❸11011	11011-7046	1	Case-Air Filter				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11054	11054-7002-9H	1	Bracket				
❸11060	11060-7021	2	Gasket-Muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7021	1	Muffler				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7012	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸92210B	92210-7027	4	Nut (M8)				
❸130	130B0816	3	Bolt-Flanged (8X16)				
❸233	233B0416	1	Screw (4X16)				
❸311	311B0400	1	Nut-Hex (4Mm)				
❸461	461F0800	4	Washer-Spring (8Mm)				

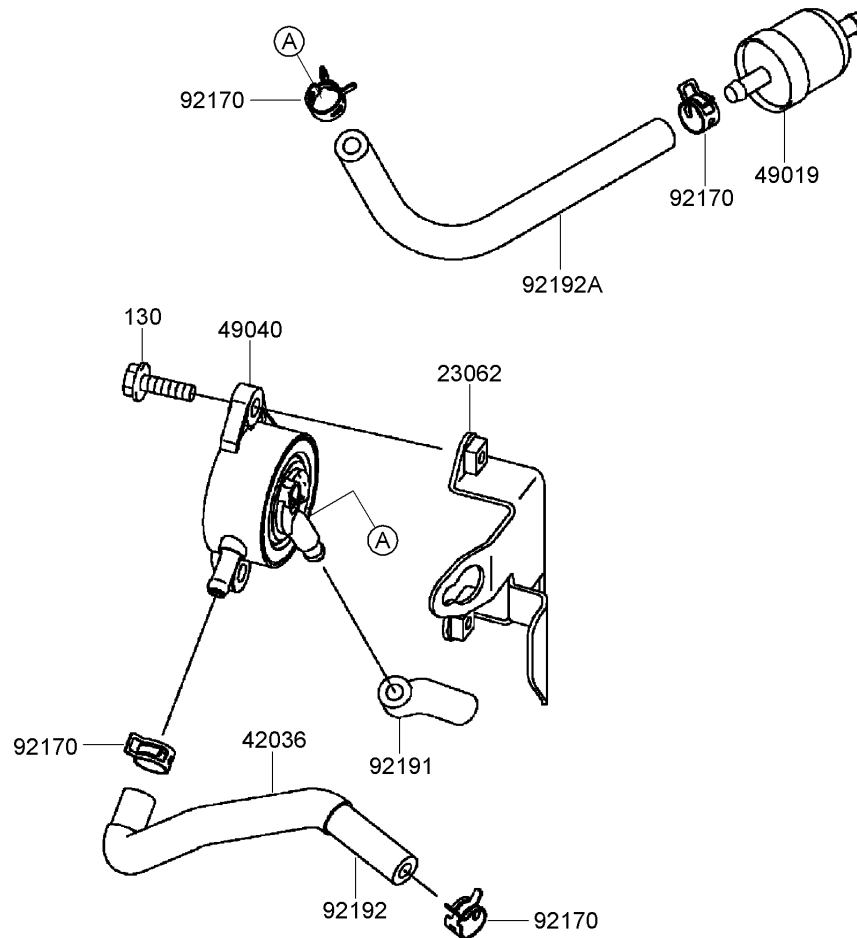

Fuel Tank and Valve Assembly Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③42036	42036-7012	1	Sleeve				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92192	92192-7035	1	Tube (6.35X12.7X170)				
③92192A	92192-7037	1	Tube (6.35X12.7X160)				
③130	130B0620	2	Bolt-Flanged (6X20)				

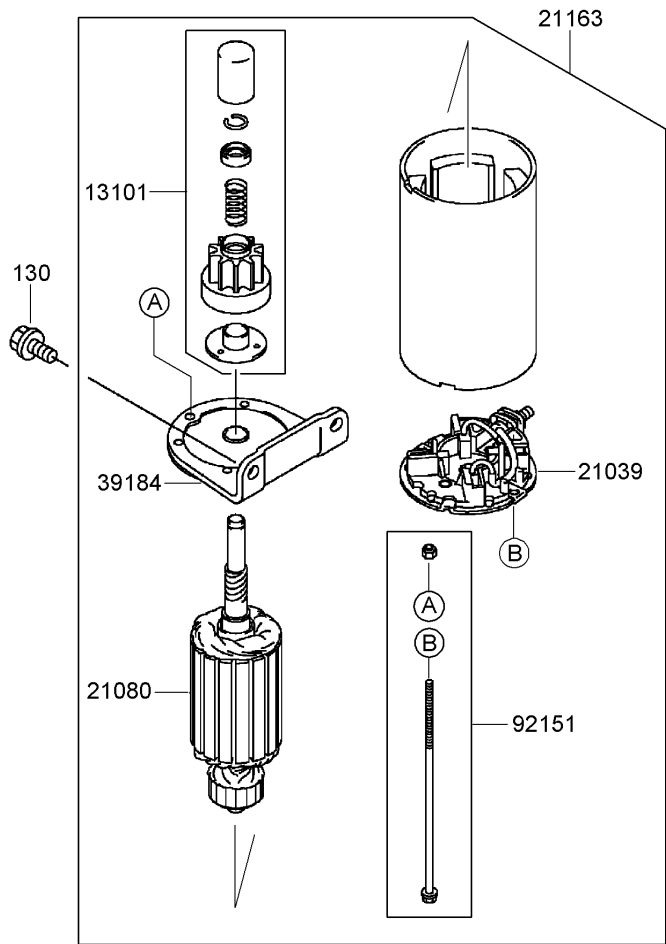

Starter Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
13101	13101-7003	1	Gear ASM				
21039	21039-7004	1	Brush				
21080	21080-7001	1	Armature				
21163	21163-7010	1	Starter-Electric				
39184	39184-7004	1	Bracket ASM				
92151	92151-7013	1	Bolt				
130	130B0816	2	Bolt-Flanged (8X16)				

Attachments and Accessories

For 79409 - Z300 Z Master, With 40in 7-Gauge Side Discharge Mower

Product Name	Model/Part
40 Inch Recycler Kit	110-2070
Blade-Recycler, 14 Inch (6-pack)	114-4961
Blade-Low Flow, 14inch (6-pack)	114-4962
Blade-Mid Flow, 14 Inch (6-pack)	114-4963
Blade-High Flow, 14 Inch (6-pack)	114-4964
Blade-Atomic, 14 Inch (6-pack)	114-4965
Chute Gate Kit	78520

NOTES

NOTES

