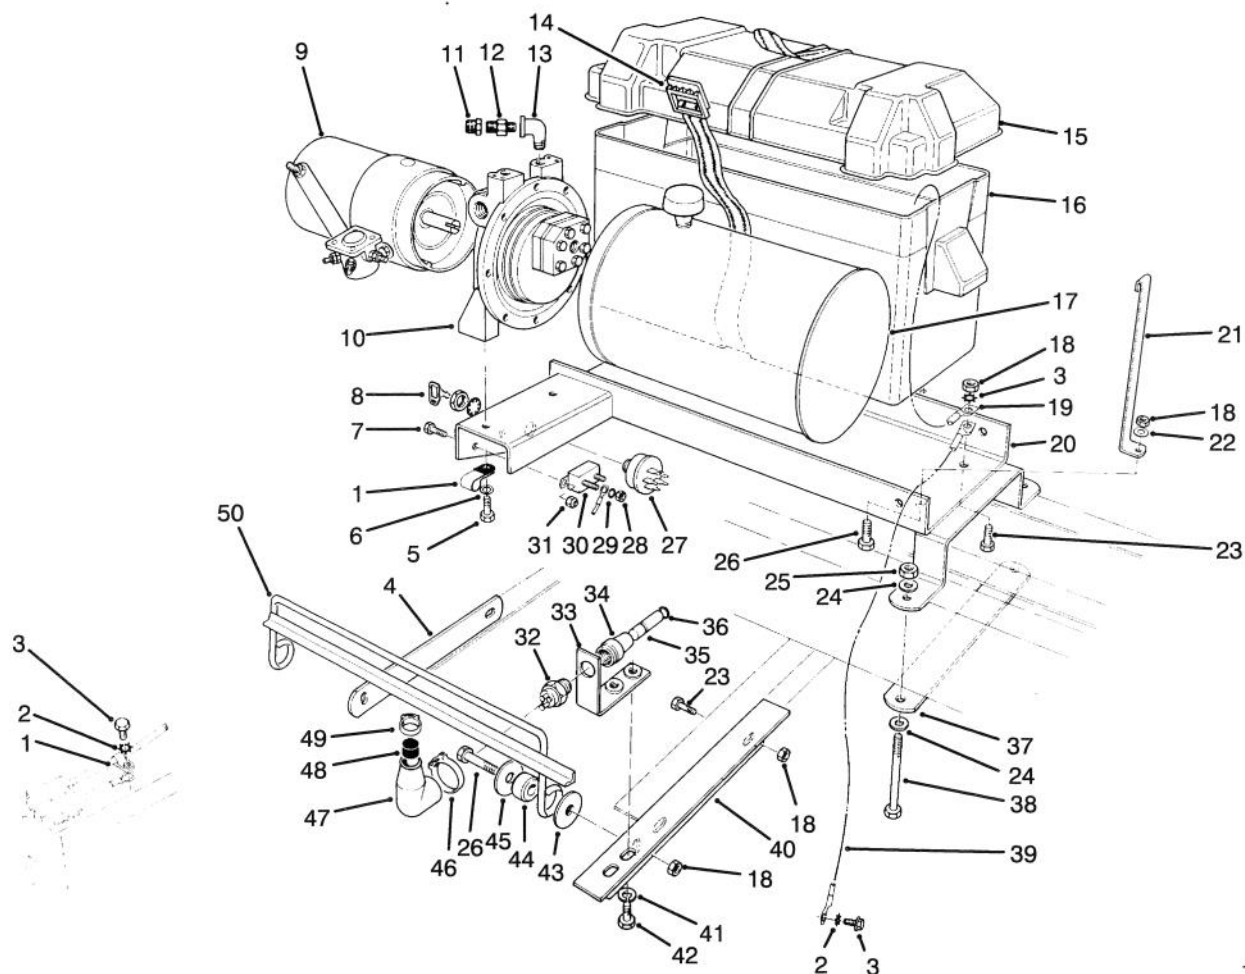


TORO®**PART NO. 52-3800****PARTS
CATALOG****ELECTRO-HYDRAULIC POWER PACK
For Reelmaster Transport Frame**


T-0209

POWER PACK SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-2970	R-Clamp	6
2	32144-41	Screw - Hex. Thd. Form.	7
3	3255-8	Washer - Lock Int. Tooth	3
4	52-4360	Strap - Switch Bail	1
5	323-6	Screw - Cap Hex. Hd.	2
6	3253-21	Washer - Lock	2
7	32105-8	Screw - Machine Hex. Hd.	3
8	62-7770	Key (Set of 2)	1
9	52-3890	Motor Assembly	1
10	52-4100	Pump & Center Plate Assy.	1
11	2812-4	Reducer - Pipe Bushing	2
12	353-880	Coupling - Pipe	2
13	2811-10	Elbow - Street	2
14	52-4290	Strap - Battery Box	1
15	52-4320	Cover - Battery Box	1
16	52-4310	Bottom - Battery Box	1

Ref. No.	Part No.	Description	No. Used
17	52-3900	Tank Assembly	1
18	32153-3	Nut - Lock	9
19	52-4410	Wire - Battery to Ground	1
20	52-3810	Support - Power Pack	1
21	52-4330	Hold Down - Battery Box	2
22	3256-23	Washer - Flat	2
23	322-3	Screw - Cap Hex. Hd.	5
24	3256-24	Washer - Flat	8
25	3296-39	Nut - Lock	4
26	322-6	Screw - Cap Hex. Hd.	4
27	12-8140	Key Switch Assembly (Incl. Ref. #8)	1
28	3219-14	Nut - Hex.	2
29	3253-2	Washer - Lock	2
30	52-3860	Circuit Breaker	1
31	3296-12	Nut - Lock	3

TPS

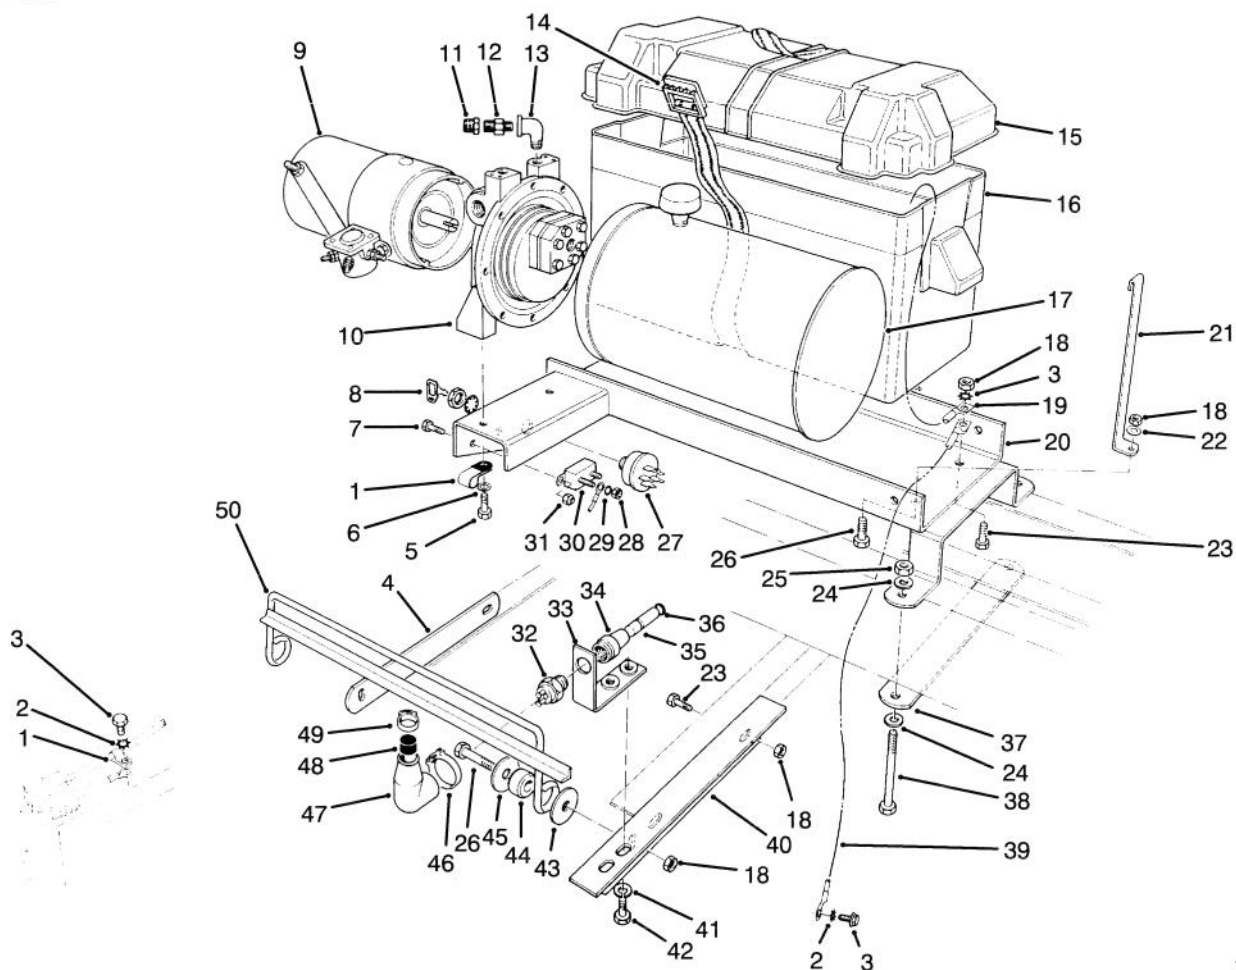


T-0209

POWER PACK SUPPORT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	38-0430	Switch - Neutral	1
33	40-7420	Bracket - Switch	1
34	353-704	Nut - Tube	1
35	38-3260	Pin - Switch	1
36	237-7	Seal - O-Ring	1
37	53-3850	Strap - Hold Down, Battery	2
38	323-21	Screw - Cap Hex. Hd.	4
39	52-4470	Wire - Power Pack Ground	1
40	52-4350	Support - Switch Bail	1
41	3253-3	Washer - Lock	2
42	321-3	Screw - Cap Hex. Hd.	2
43	3-8664	Washer - Thrust	2

Ref. No.	Part No.	Description	No. Used
44	52-4340	Pivot - Switch Bail	2
45	5-1350	Washer	2
46	2412-85	Clamp - Large	1
47	218-331	Boot	1
48	44-8520	Plug - Rubber	1
49	2412-84	Clamp - Small	1
50	52-4370	Switch - Bail	1
*	52-3790	Switch Assembly (Incl. Ref. #32-36)	1
*	52-4300	Battery Box Assembly (Incl. Ref. #14-16)	1

*Not illustrated

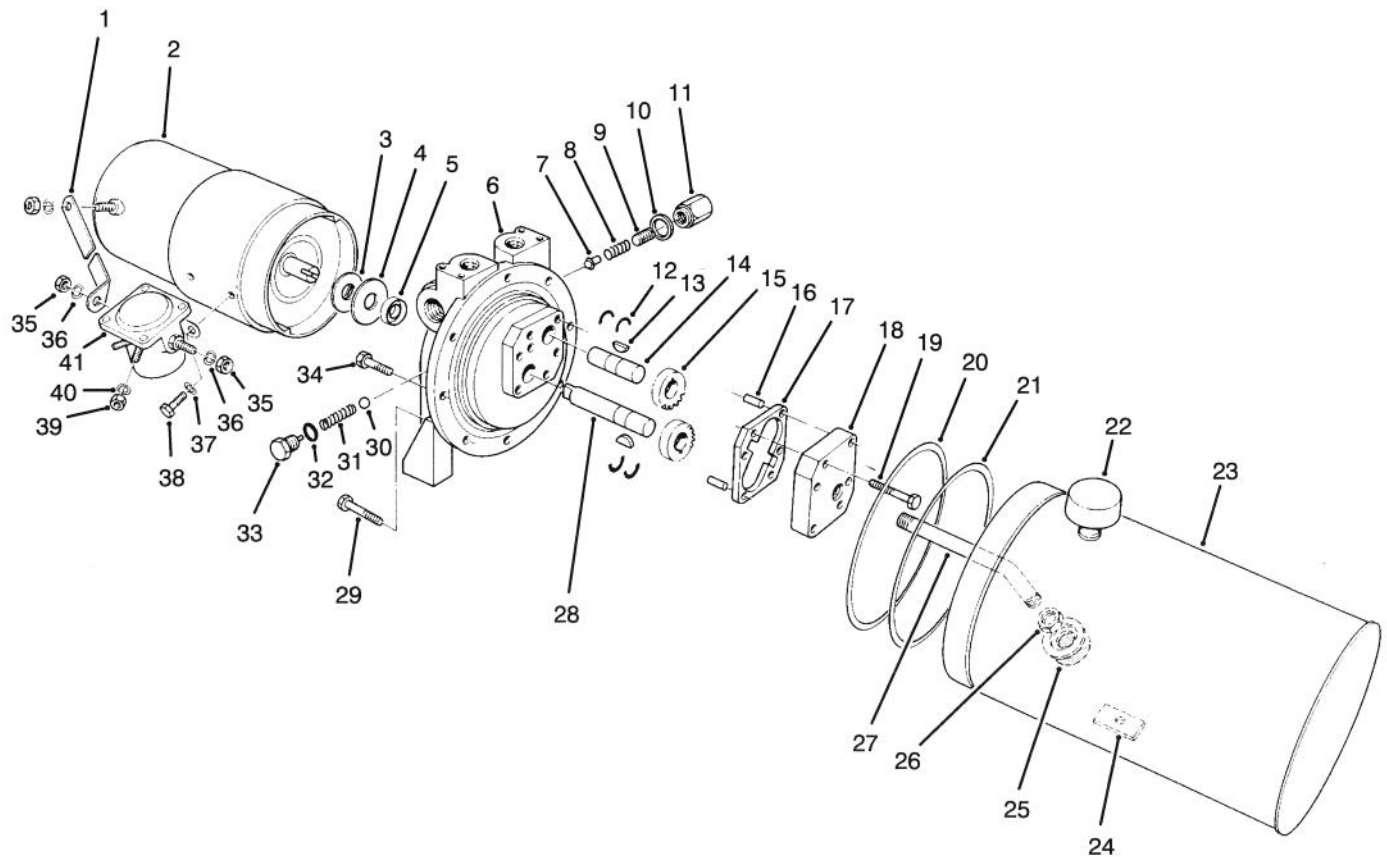


T-0208

HYDRAULIC PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52-3970	Jumper	1
2	52-3910	Motor	1
3	52-3920	Washer - Backup	1
4	52-3930	Washer - Thrust	1
5	52-4510	Seal - Shaft	1
6	52-4130	Center Plate Assembly	1
7	52-4180	Poppet	1
8	52-4190	Spring	1
9	52-4200	Screw - Adjusting	1
10	52-4210	Seal - Ring	1
11	62-4220	Cap	1
12	52-4490	Ring - Retaining	4
13	52-4500	Key - Woodruff	2
14	52-4280	Shaft - Idler	1
15	52-4480	Gear	2
16	52-4250	Dowel	2
17	52-4230	Plate - Gear	1
18	52-4240	Cover - Plate	1
19	52-4260	Screw - Cap Hex. Hd.	4
20	52-4110	Ring - Backup	1
21	52-4090	Seal - Face	1
22	52-4120	Filler - Breather	1
23	52-4020	Tank	1

Ref. No.	Part No.	Description	No. Used
24	52-4040	Magnet	1
25	52-4080	Strainer - Suction	1
26	52-4070	Nut - Lock	1
27	52-4030	Tube - Suction	1
28	52-4270	Shaft - Drive	1
29	52-4050	Screw - Cap Socket Hd.	2
30	52-4170	Ball	1
31	52-4160	Spring	1
32	52-4150	O-Ring	1
33	52-4140	Plug - Valve	1
34	52-4060	Screw - Cap Socket Hd.	6
35	52-3960	Nut - Hex.	2
36	52-3950	Washer - Lock	2
37	52-3990	Washer - Lock	2
38	52-3980	Screw - Cap Hex. Hd.	2
39	52-4000	Nut - Hex.	1
40	52-4010	Washer - Lock	1
41	52-3940	Solenoid	1
*	53-9330	Center Plate & Gear Kit (Incl. Ref. #5-6, 12-19 & 28)	1
*	53-9350	Gear & Shaft Assembly (Incl. Ref. #12-15 & 28)	1

*Not illustrated

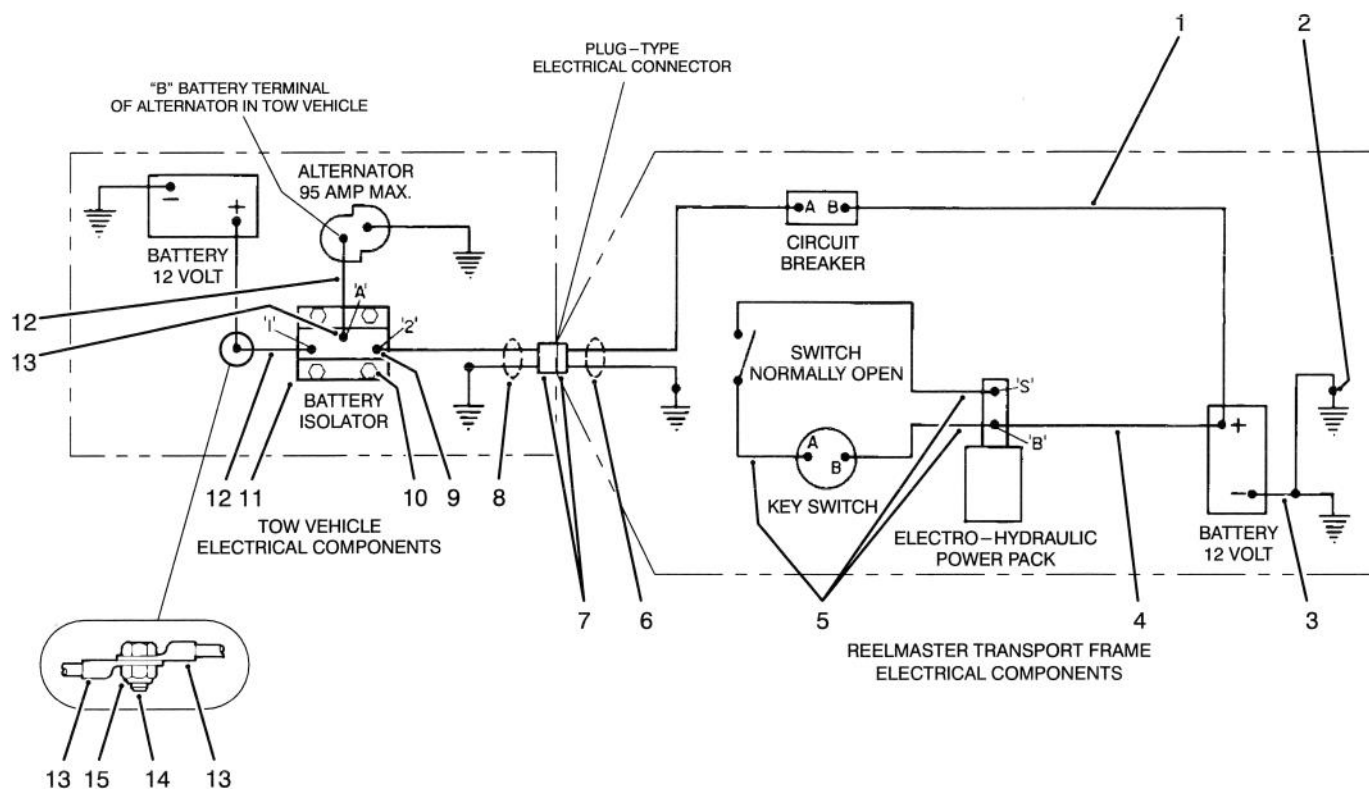

T-0208

WIRING DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	52-4430	Wire - Batt. - Breaker	1
2	52-4470	Wire - Power Pack Ground	1
3	52-4410	Wire - Battery - Ground	1
4	52-4440	Wire - Battery - Power Pack	1
5	52-4400	Wiring Harness - Power Pack	1
6	52-4460	Wire Assembly - Frame	1
7	218-545	Connector - 2 Pole	2
8	52-4420	Tow Vehicle Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
9	218-331	Boot - Battery	2
10	32144-32	Screw - Thread Forming	4
11	52-3870	Isolator - Multi Battery	1
12	52-4450	Wire Assembly	2
13	218-544	Terminal - Closed End	3
14	32105-8	Screw - Machine Hex. Hd.	1
15	3296-12	Nut - Lock	1