


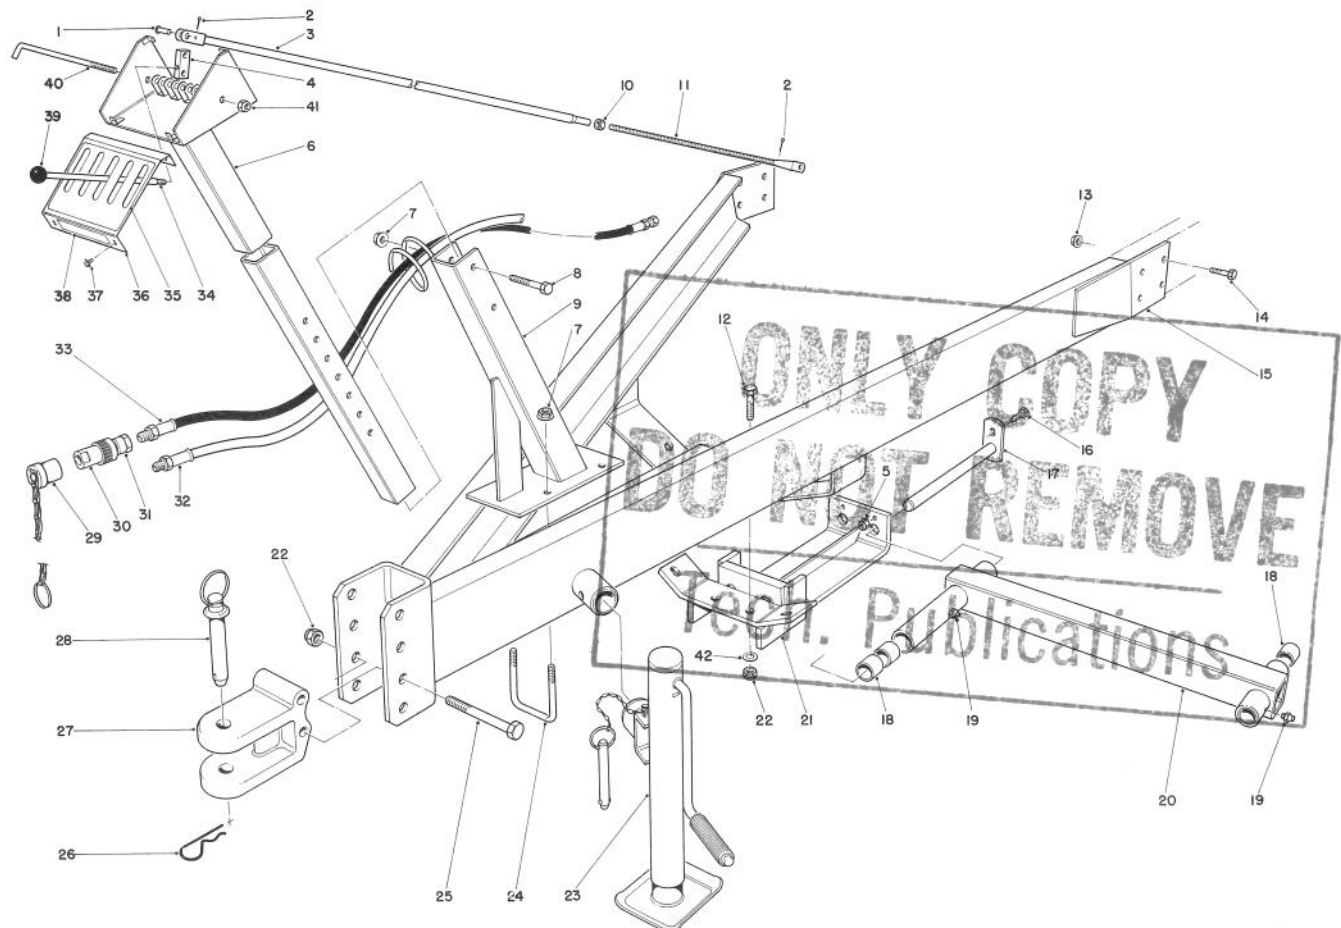

MODEL NO. 33457-30001 & UP


**PARTS
CATALOG**
REELMASTER TRANSPORT FRAME


T-0195

CONTROL TOWER & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	283-6	Pin - Clevis	5	17	26-8250	Pin - Arm, Lift	2
2	3272-31	Pin - Cotter	10	18	3-0348	Bushing	12
3	47-3880	Linkage - Control	5	19	302-5	Fitting - Grease	4
4	47-3620	Lever - Block, Pivot	5	20	47-3250	Arm - Lift #2 & 3 Cutting Units (Incl. Ref. #18)	2
5	32153-3	Nut - Lock	2	21	26-8160	Support - Arm, Lift	1
6	47-3680	Tower - Control, Upper	1	22	3296-24	Nut - Lock	6
7	3290-357	Nut - Flange	6	23	60-8900	Jack Assembly	1
8	323-13	Screw - Cap, Hex. Hd.	2	24	47-3460	U-Bolt	2
9	47-3380	Tower - Control, Lower	1	25	327-23	Screw - Cap, Hex. Hd.	2
10	3217-8	Nut - Hex	5	26	3290-343	Pin - Cotter, Hair	1
11	47-3630	Rod - Linkage, Control	5	27	47-3550	Hitch - Clevis	1
12	327-6	Screw - Cap, Hex. Hd.	4	28	13-6200	Pin - Pointed (Incl. Ref. #26)	1
13	32128-23	Nut - Flange	8	29	49-8180	Cap - Dust	2
14	325-6	Screw - Cap, Hex. Hd.	8	30	353-819	Body - Coupler, Quick Disc.	2
15	55-7380	Tongue	1				
16	322-6	Screw - Cap, Hex. Hd.	2				

TPS

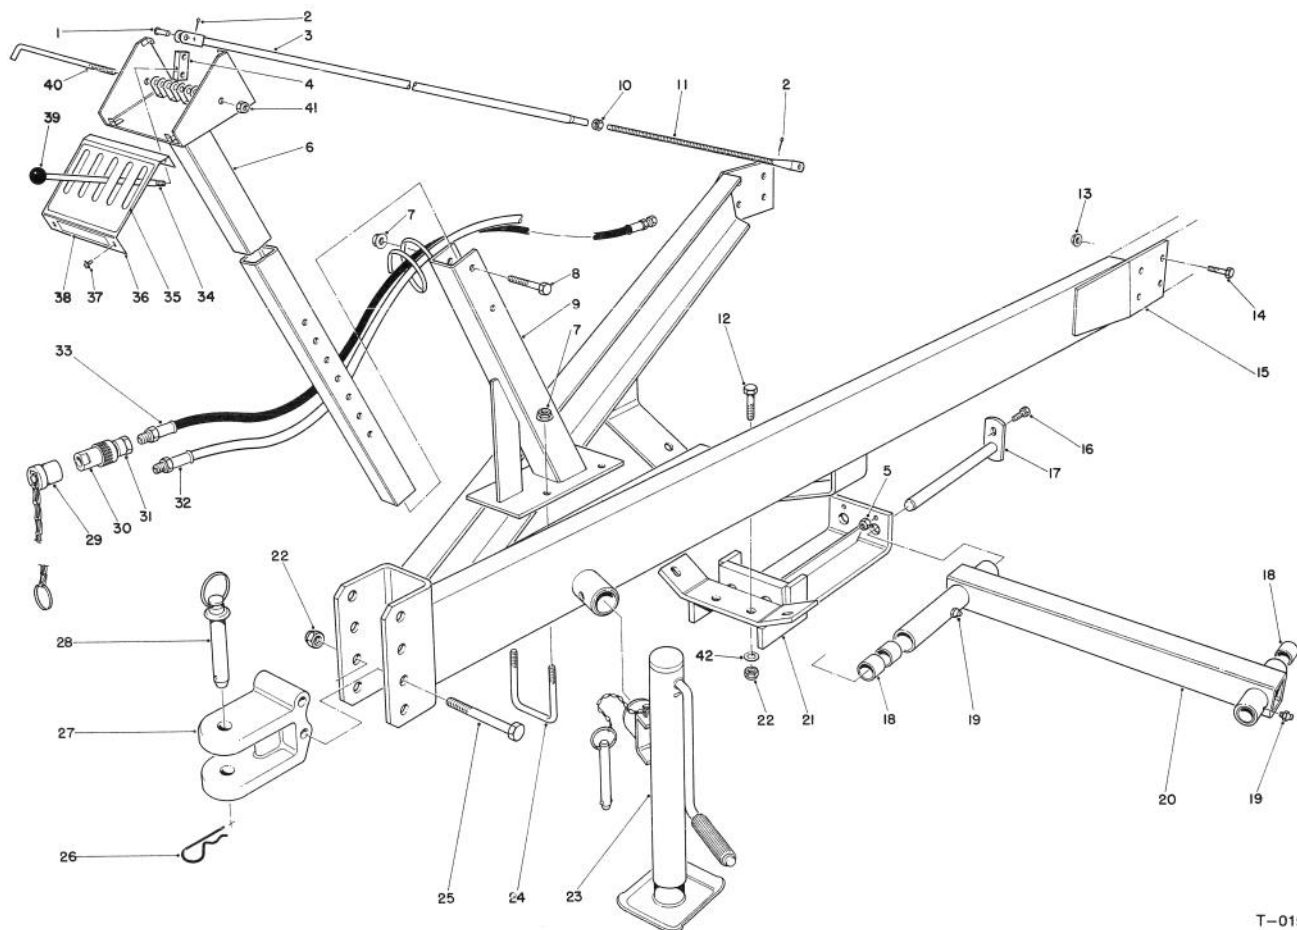


T-0195

CONTROL TOWER & LINKAGE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	353-820	Tip - Coupler, Quick Disc.	2
32	52-5990	Hose - Hydraulic (Orange)	1
33	52-5991	Hose - Hydraulic (Black)	1
34	47-3810	Lever - Valve	5
35	47-5600	Decal - Operation	1
36	47-3820	Cover - Column, Control	1


Ref. No.	Part No.	Description	No. Used
37	3234-13	Screw - Cap, Hex. Hd.	4
38	47-3770	Decal - Manual, Operator's	1
39	3-0631	Knob	5
40	47-3450	Pin - Pivot	1
41	3296-29	Nut - Lock	1
42	3256-27	Washer - Flat	4

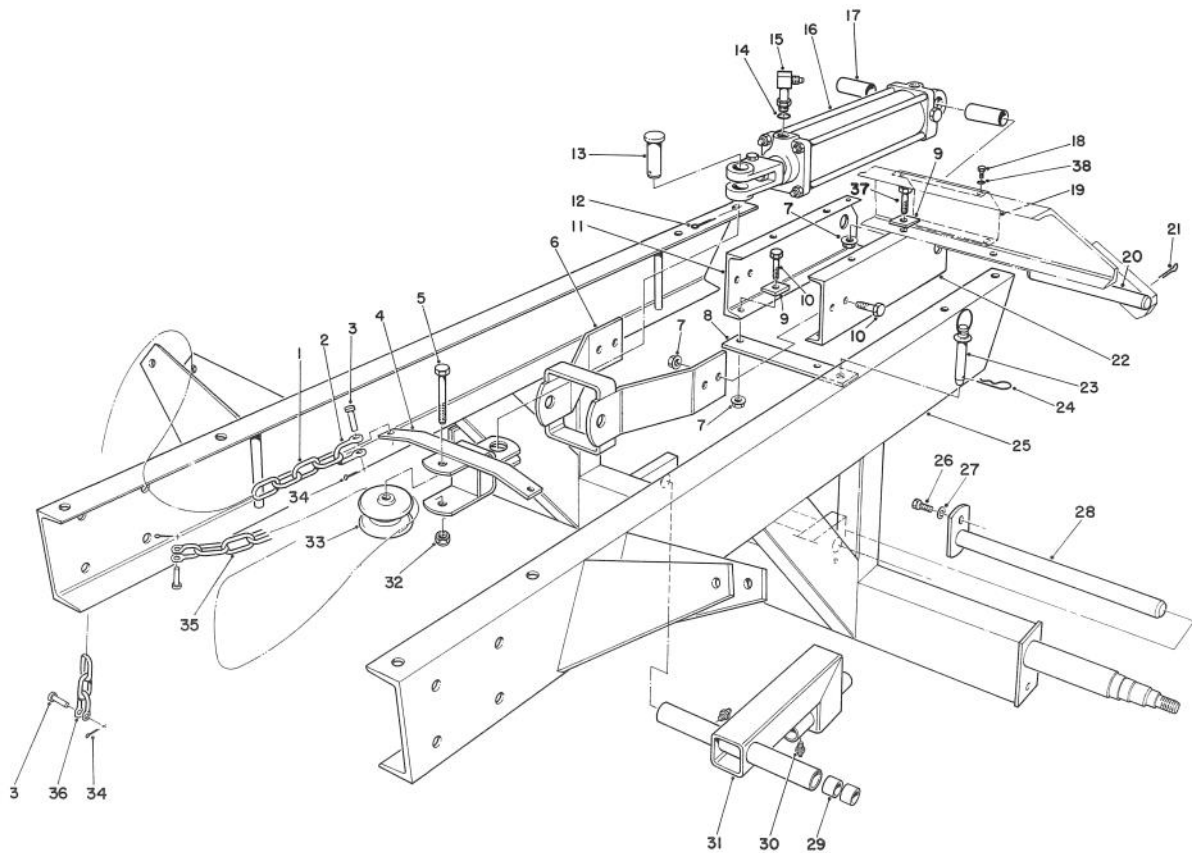

T-0196

MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-3650	Chain - Lift, No. 2 & 3 Cutting Units	2	21	3272-24	Pin - Cotter	2
2	8-0280	Shackle	2	22	47-3860	Channel - LH	1
3	283-10	Pin - Clevis	5	23	13-6200	Pin - Pointed (Incl. Ref. #24)	1
4	51-0850	Support - Pulley	1	24	3290-343	Pin - Cotter, Hair	1
5	325-17	Screw - Cap, Hex. Hd.	1	25	47-3010	Frame - Trailer	1
6	47-3930	Bracket - Lockup	1	26	322-3	Screw - Cap, Hex. Hd.	1
7	32128-23	Nut - Flange	10	27	3253-4	Washer - Lock	1
8	47-3640	Rest - Cylinder	1	28	60-9110	Bail - Pin, Lift	1
9	3290-216	Washer - Tapered	10	29	3-0348	Bushing	6
10	325-6	Screw - Cap, Hex. Hd.	6	30	302-5	Fitting - Grease	2
11	47-3870	Channel - RH	1	31	47-3230	Arm - Lift (Incl. Ref. #29)	1
12	3272-13	Pin - Cotter	1	32	32513-5	Nut - Lock	1
13	26-8590	Pin - Cylinder	1	33	3-2196	Sheave	1
14	237-79	O-Ring	2	34	3272-10	Pin - Cotter	5
15	353-537	Elbow - Male (Incl. Ref. #14)	2	35	47-3660	Chain - Lift, No. 1 Cut. Unit	1
16	47-3720	Cylinder - Hydraulic	1	36	5-2942	Shackle - Long	3
17	20-4390	Tube - Spacer	2	37	325-7	Screw - Cap, Hex. Hd.	4
18	32104-17	Screw - Hex. Hd. Self Tap.	4	38	3256-22	Washer - Flat	4
19	42-3550	Cover - Mount, Cylinder	1	*	52-3500	Kit - Spindle, Replacement	1
20	3-0144	Shaft	1				

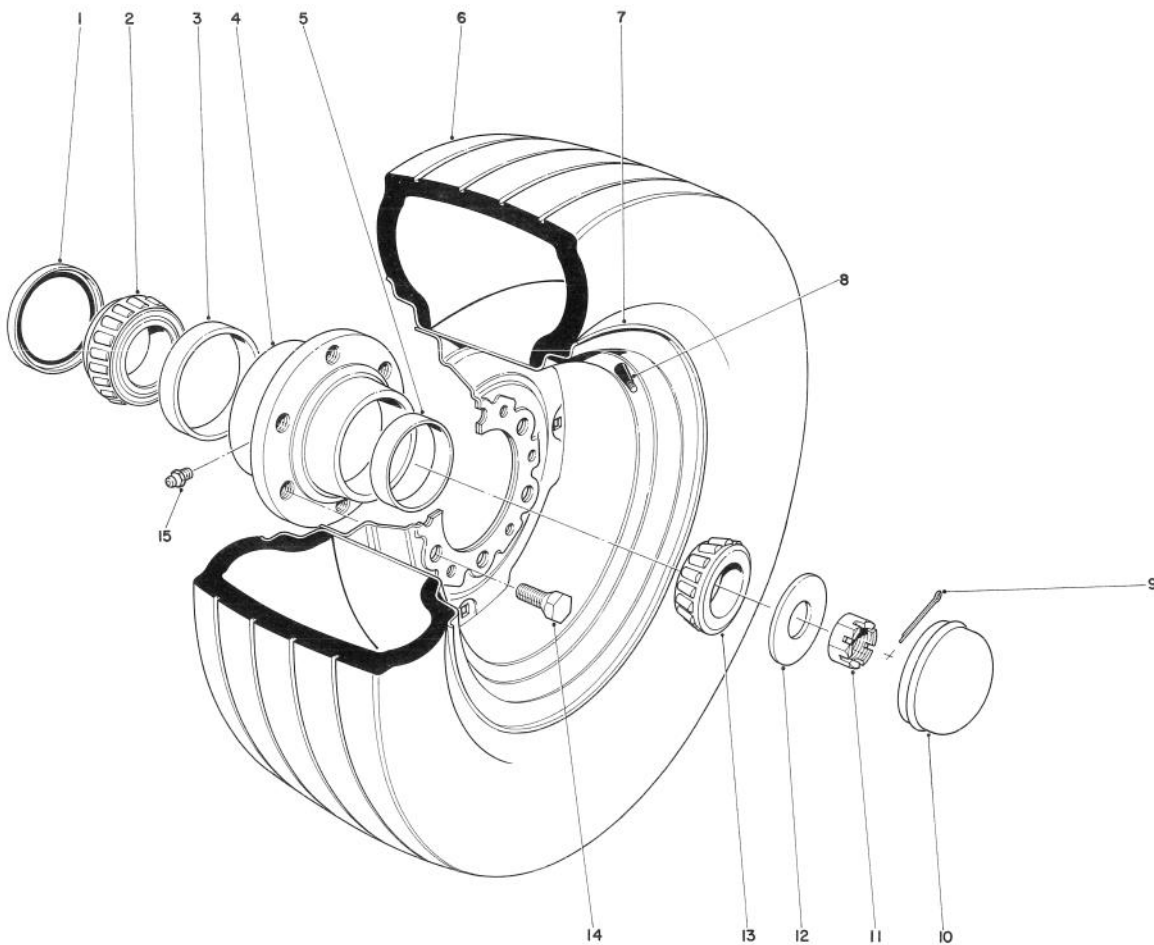


T-0197

WHEEL & TIRE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	253-144	Seal - Grease	2
2	254-103	Cone - Bearing, Inner	2
3	254-104	Cup - Bearing	2
4	77-0650	Hub	2
5	254-61	Cup - Bearing	2
6	56-7960	Tire	2
7	217-109	Wheel	2

Ref. No.	Part No.	Description	No. Used
8	232-27	Stem - Valve	2
9	3272-19	Pin - Cotter	2
10	217-111	Cap - Hub	2
11	32136-1	Nut - Slotted	2
12	47-2540	Washer	2
13	254-62	Cone - Bearing, Outer	2
14	217-103	Bolt - Wheel	12
15	302-2	Fitting - Grease	1

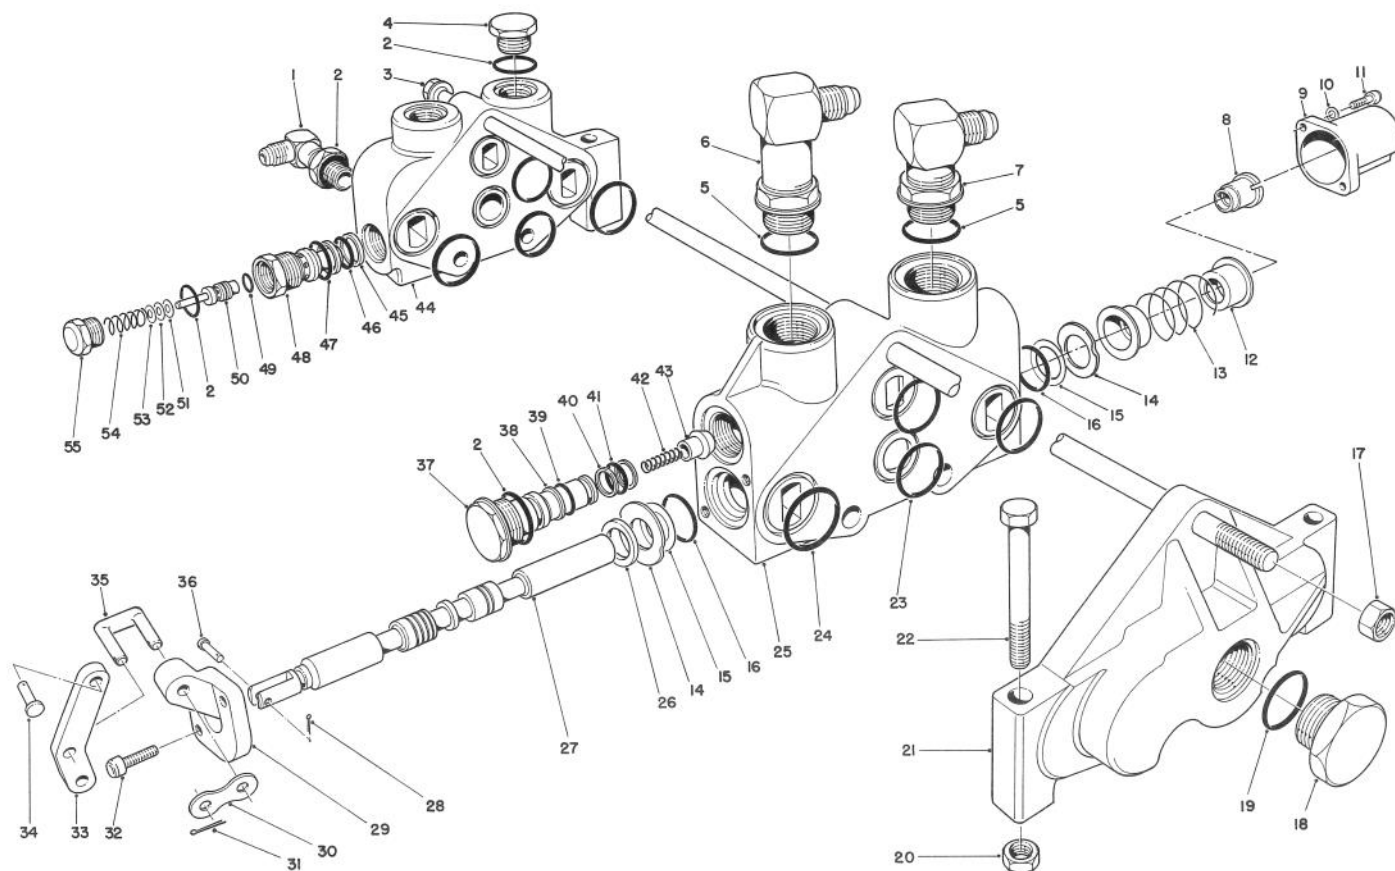


T-0198

HYDRAULIC VALVE ASSEMBLY NO. 63-8510

Ref. No.	Part No.	Description	No. Used
1	353-426	Elbow (Incl. Ref. #2)	2
2	237-80	O-Ring	8
3	44-7612	Bolt - Hex. Washer Hd.	3
4	353-721	Plug Assembly (Incl. Ref. #2)	2
5	237-79	O-Ring	10
6	38-5540	Elbow - Male (Incl. Ref. #5)	3
7	353-537	Elbow - Male (Incl. Ref. #5)	7
8	52-5860	Spool - Collar	1
9	68-4240	Bonnet	1
10	3253-3	Washer - Lock	2
11	353-976	Screw - Socket Head	2
12	353-417	Collar - Spring	2
13	44-7650	Spring - Compression	1
14	353-959	Plate - Retainer, Seal	2
15	353-958	Washer - Backup	2
16	353-570	O-Ring	2
17	3219-3	Nut - Hex	3
18	353-799	Cover Plug Assembly (Incl. Ref. #19)	1
19	353-800	O-Ring	1

Ref. No.	Part No.	Description	No. Used
20	32153-3	Nut - Lock	3
21	353-798	Plate - Cover, Right	1
22	322-13	Screw - Cap, Hex. Hd.	3
23		O-Ring	16
24		O-Ring	16
25		Housing - Valve	1
*	63-8520	Section - Valve, 1 Spool (Incl. Ref. #2, 8-16, 25-27, 29 & 37-43)	5
26	353-318	Seal - Wiper	1
27		Spool - 4 Way	1
28	353-321	Pin - Cotter	5
29	353-324	Bracket - Handle	1
30	52-5920	Link - Connecting	5
31	3272-1	Pin - Cotter	10
32	52-5900	Screw - Cap, Soc. Hd.	2
33	52-5670	Lever - Control (Incl. Ref. #34)	5
34	283-62	Pin - Clevis	5
35	353-322	Pin - Link	5
36	353-322	Pin	5
37	44-7660	Plug - Check	2
38	353-306	Washer - Backup	2
39	353-305	O-Ring	2

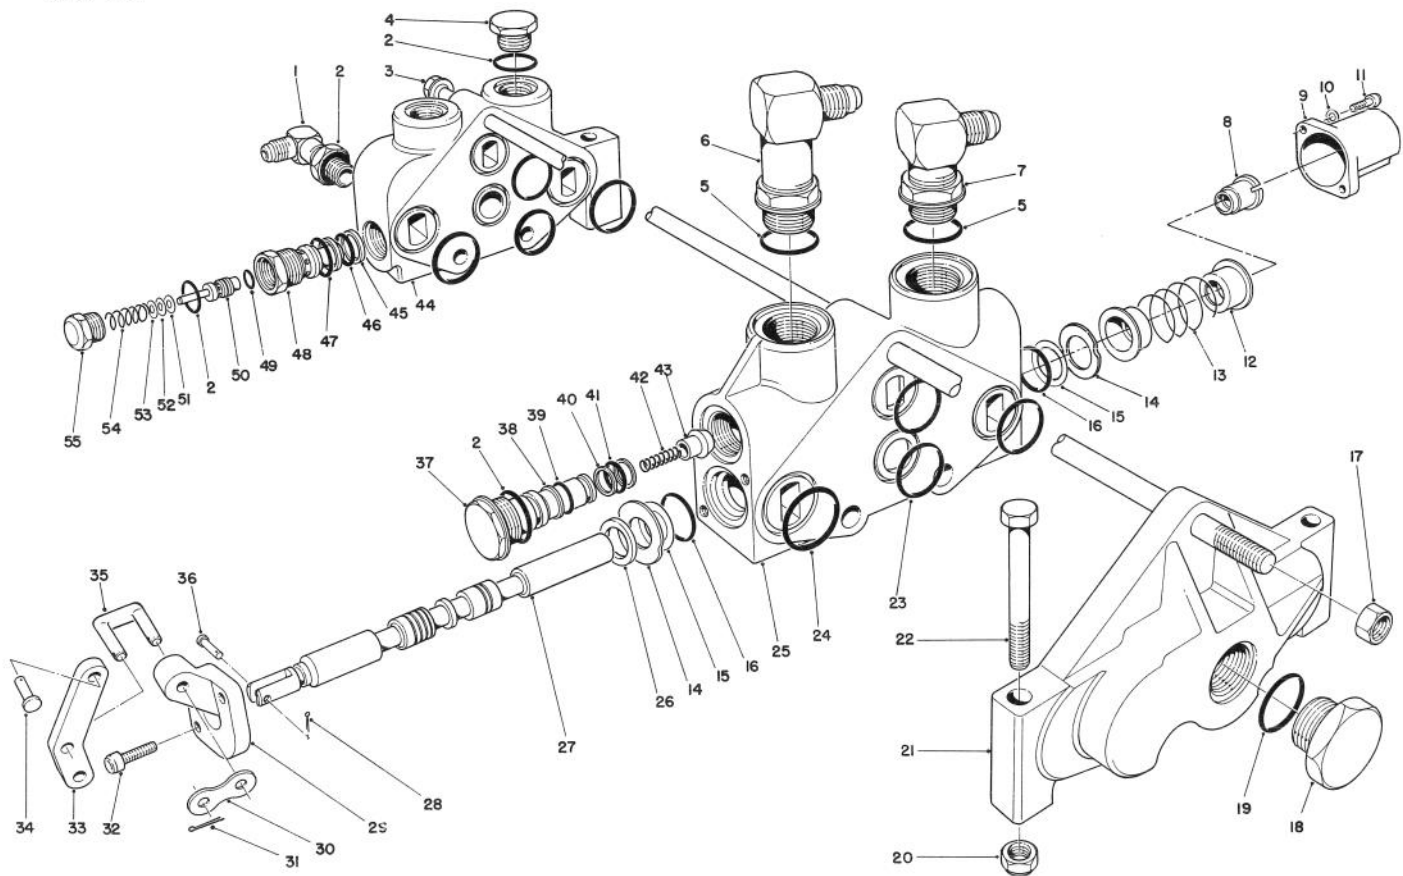

T-0198


HYDRAULIC VALVE ASSEMBLY NO. 63-8510 (Continued)

Ref. No.	Part No.	Description	No. Used
40	353-303	Seal - Backup	4
41	353-302	O-Ring	2
42	353-304	Poppet - Spring	2
43	353-301	Poppet - Lift, Check	2
44	44-7621	Plate - Cover, V20 L.E.	1
45	353-952	Seal - Backup	1
46	353-758	O-Ring	1
47	353-331	O-Ring	1
48	353-760	Body - "WH" Relief	1
49	353-392	Seal - Relief, Poppet	1
50	353-531	Poppet - Relief Assembly (Incl. Ref. #49)	1
51	353-328	Washer - Shim .040	A/R
52	353-329	Washer - Shim .020	A/R

Ref. No.	Part No.	Description	No. Used
53	353-330	Washer - Shim .010	A/R
54	46-2380	Spring - Relief	1
55	353-334	Cap - Relief	1
*	353-835	Kit - Seal, Sectional (Incl. Ref. #23 & 24)	1
*	353-481	Plug - Load Check Assy. (Incl. Ref. #2 & 37-41)	2
*	353-515	Kit - Seal, Spool (Incl. Ref. #14-16)	1
*	63-8760	Kit - Pin, Link (Incl. Ref. #30, 31, 35 & 36)	1
*	353-743	Kit - Seal (Incl. Ref. #2 & 38-41)	1

*Not Illustrated


Note: Quantities indicated are for one valve section.

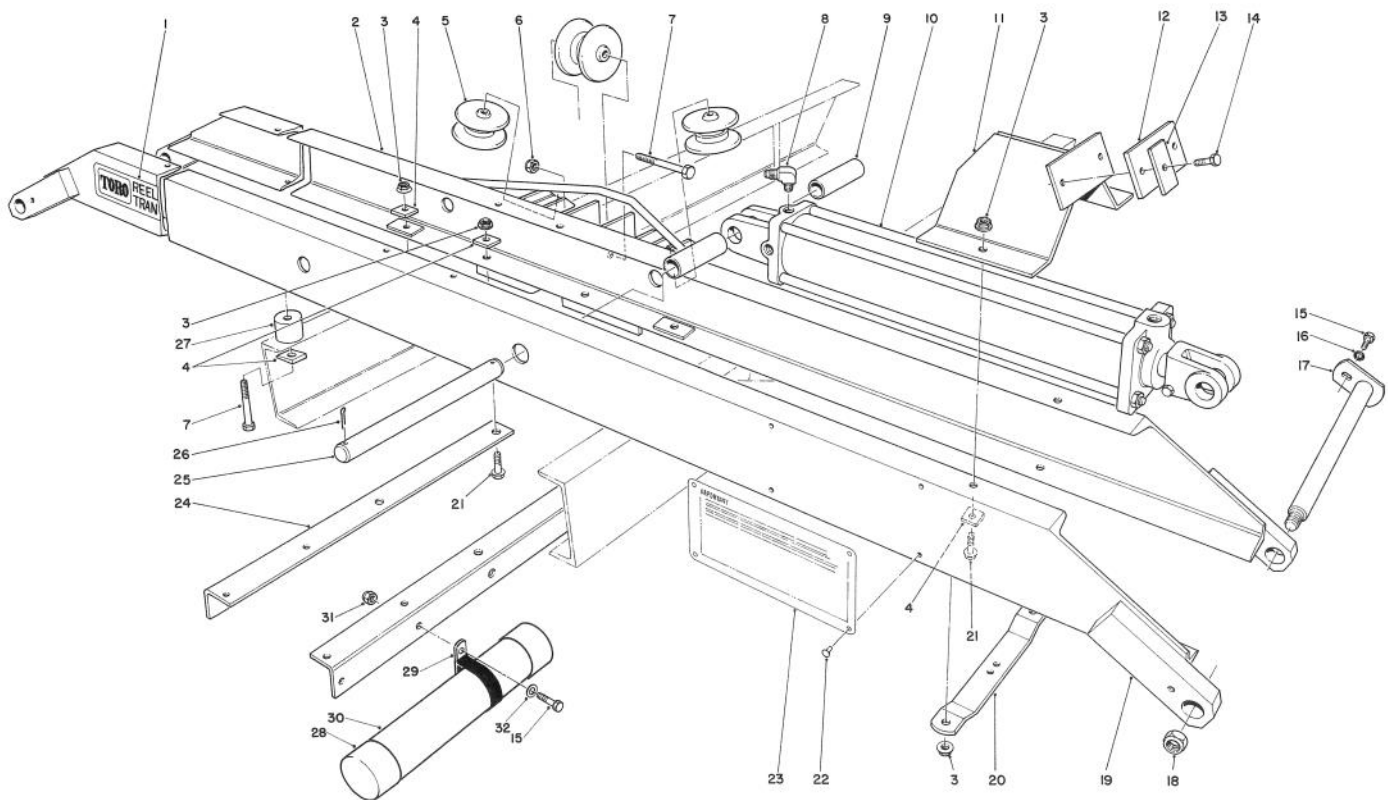

T-0199A

FRONT CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-3990	Decal - Toro	1	17	37-2760	Bail - Pin, Lift	2
2	47-3570	Channel - Cross, Rear	1	18	3296-50	Nut - Lock	2
3	32128-23	Nut - Flange	16	19	47-3560	Channel - Cross, Front	1
4	3290-216	Washer - Tapered	20	20	37-2910	Rest - Cylinder	2
5	3-2196	Sheave	3	21	325-6	Screw - Cap, Hex. Hd.	12
6	32153-5	Nut - Lock	3	22	3290-274	Rivet	4
7	325-14	Screw - Cap, Hex. Hd.	7	23	47-3900	Plate - Information	1
8	47-3840	Elbow - .094 Orifice	4	24	47-3470	Support - Valve	2
9	20-4390	Spacer - Tube	4	25	3-0144	Shaft	2
10	22-7530	Cylinder - Hydraulic, 12"	2	26	3272-24	Pin - Cotter	4
11	11-5630	Stop - Arm	2	27	49-8170	Spacer	4
12	11-4590	Pad - Bumper	2	28	65-5890	Cap - Tube, Manual	2
13	11-5270	Washer - Bumper	4	29	2412-102	R-Clamp	2
14	322-6	Screw - Cap, Hex. Hd.	4	30	65-5871	Tube - Manual	1
15	322-3	Screw - Cap, Hex. Hd.	4	31	32153-3	Nut - Lock	2
16	3253-4	Washer - Lock	2	32	3256-2	Washer - Flat	2

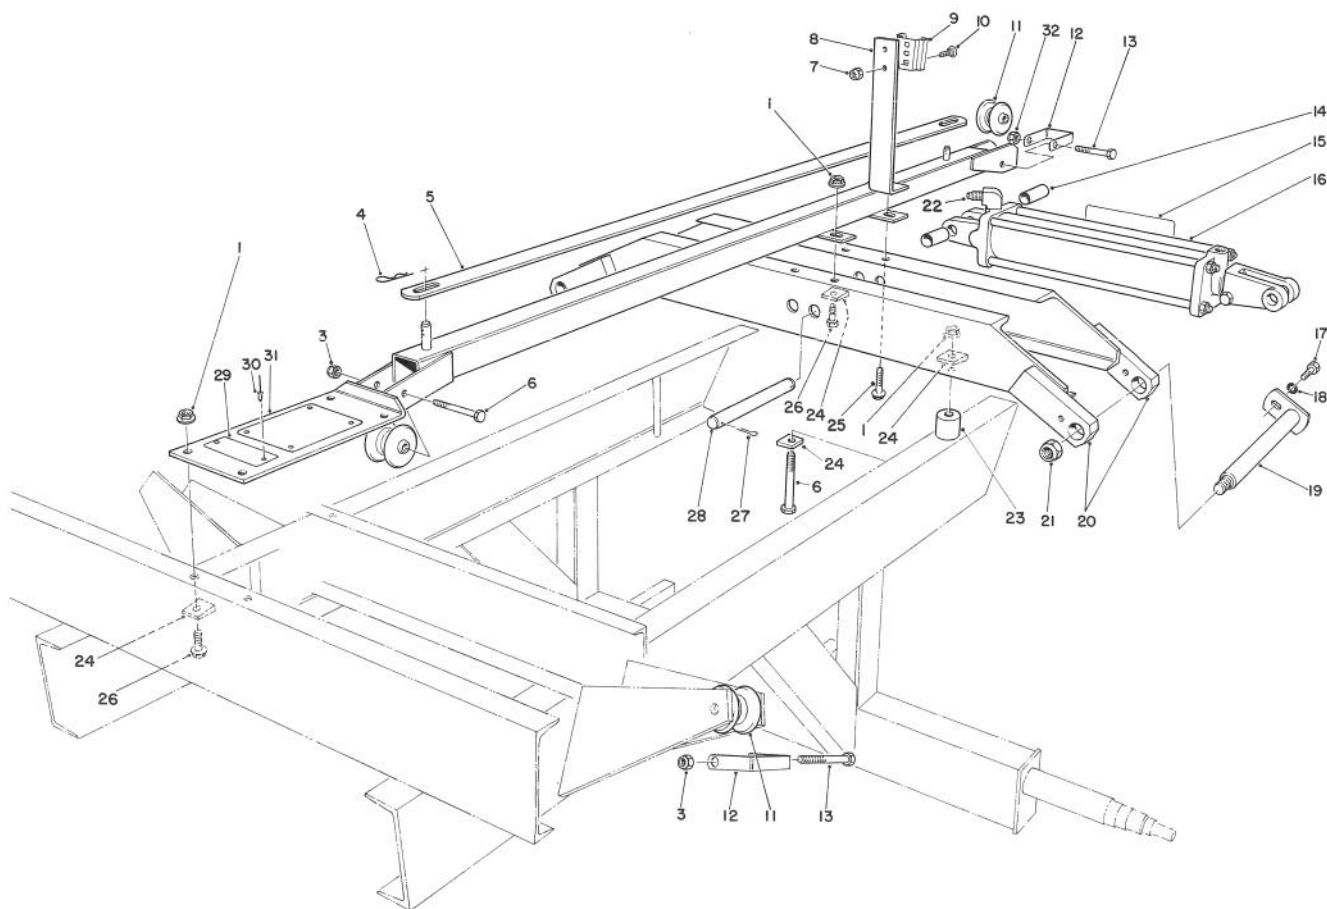


T-0200A

REAR CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut - Flange	12
3	32153-5	Nut - Lock	5
4	3290-355	Pin - Cotter, Hair	4
5	47-3800	Strap - Locking	2
6	325-14	Screw - Cap, Hex. Hd.	5
7	32128-20	Nut - Lock	2
8	47-3480	Bracket - Slow Moving Veh.	1
9	38-6200	Socket - Slow Moving Veh.	1
10	3230-20	Bolt - Carriage	2
11	3-2196	Sheave	4
12	3-0136	Keeper - Chain	3
13	325-18	Screw - Cap, Hex. Hd.	3
14	20-4390	Tube - Spacer	4
15	47-3990	Decal - Toro	1
16	22-7520	Cylinder - Hydraulic, 10"	2

Ref. No.	Part No.	Description	No. Used
17	322-3	Screw - Cap, Hex. Hd.	2
18	3253-4	Washer - Lock	2
19	37-2760	Bail - Pin, Lift	2
20	8-1280	Channel - Cross, Rear	2
21	3296-50	Nut - Lock	2
22	47-3840	Elbow - .094 Orifice	4
23	49-8170	Spacer	4
24	3290-216	Washer - Tapered	16
25	3234-22	Screw - Cap, Hex. Hd.	1
26	325-6	Screw - Cap, Hex. Hd.	7
27	3272-24	Pin - Cotter	4
28	3-0144	Shaft	2
29	65-2710	Plate - Information	1
30	3290-274	Rivet - Pop	2
31	47-3500	Brace - Channel	1

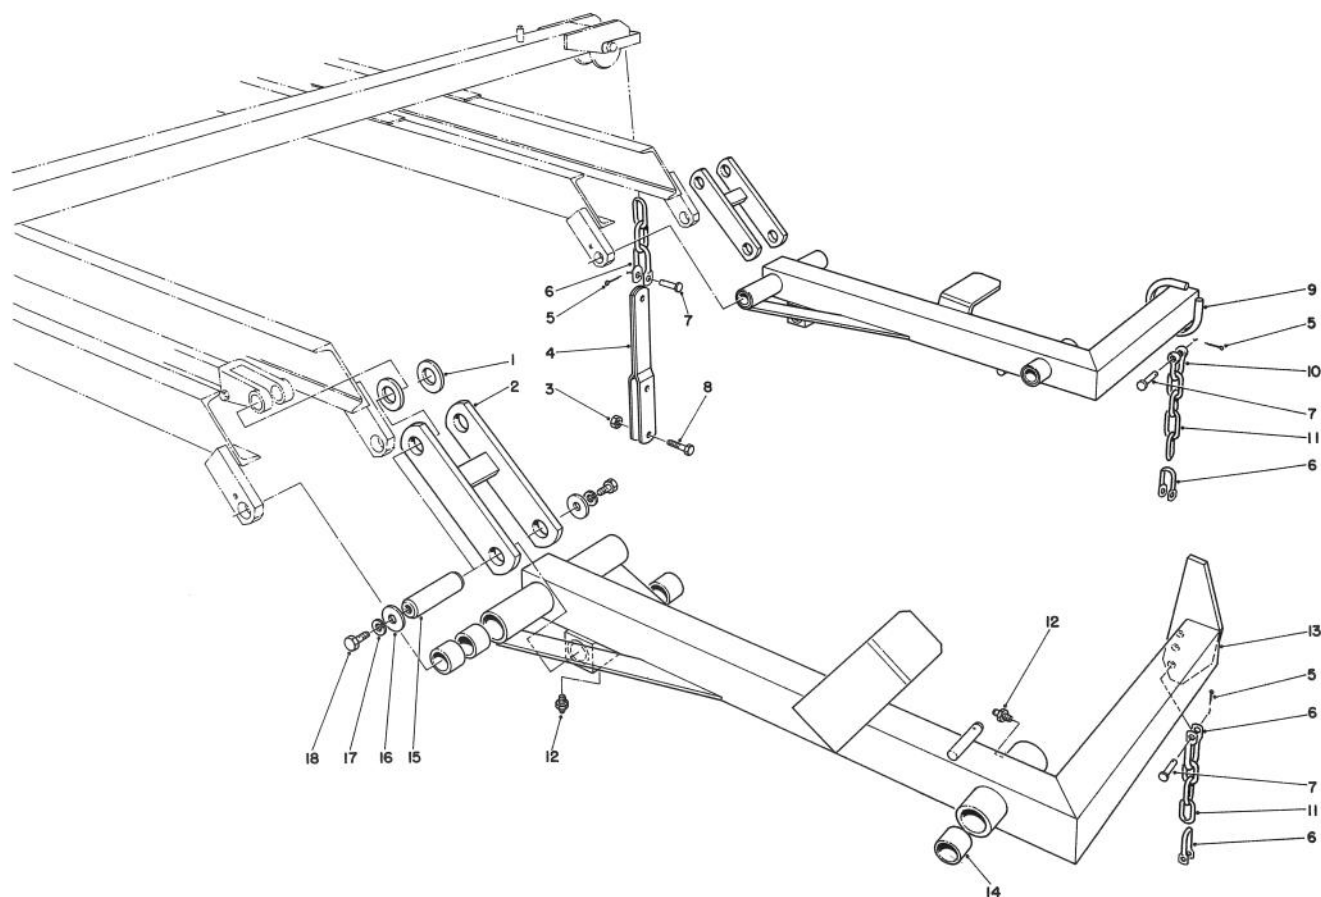


T-0201

LIFTARM ASSEMBLIES NO. 4-7

Ref. No.	Part No.	Description	No. Used
1	3256-62	Washer - Flat	8
2	23-2610	Link	4
3	32153-2	Nut - Lock	1
4	47-3430	Bracket - Lift	1
5	3272-10	Pin - Cotter	9
6	5-2942	Shackle - Long	7
7	283-10	Pin - Clevis	9
8	323-8	Screw - Cap, Hex. Hd.	1
9	47-3280	Arm - Short, No. 4 Cutting Unit (Incl. Ref. #14)	1
*	47-3270	Arm - Short, No. 5 Cutting Unit (Incl. Ref. #14)	1

Ref. No.	Part No.	Description	No. Used
10	8-0280	Shackle	2
11	3-4636	Chain - Bail, Lift	4
12	302-5	Fitting - Grease	12
13	47-3590	Arm - Long, No. 6 Cutting Unit (Incl. Ref. #14)	1
*	47-3600	Arm - Long, No. 7 Cutting Unit (Incl. Ref. #14)	1
14	3-0348	Bushing	32
15	3-0128	Shaft	8
16	5-1720	Washer	16
17	3253-5	Washer - Lock	16
18	3211-4	Screw - Cap, Hex. Hd.	16

*Not Illustrated

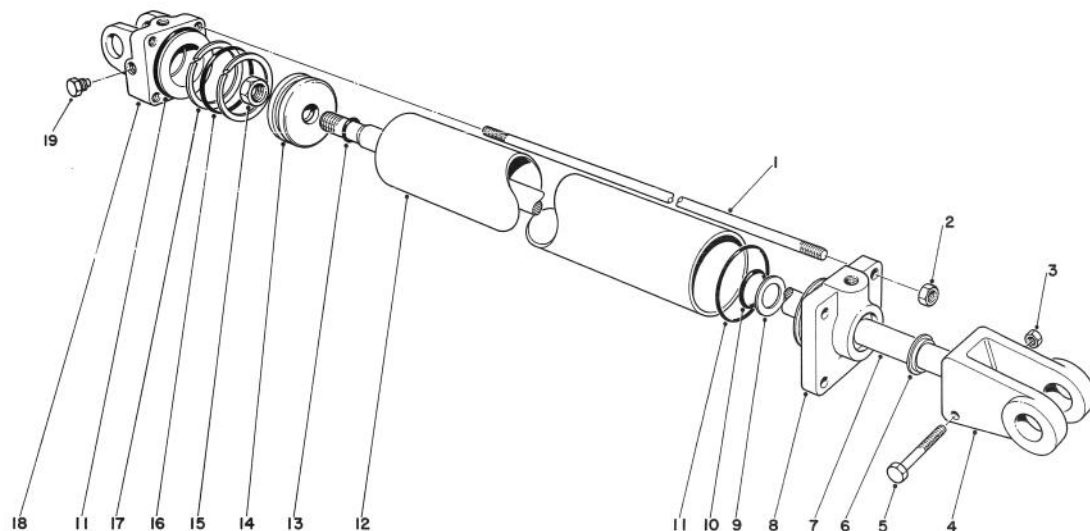

T-0202

HYDRAULIC CYLINDERS


10" (22-7520) – 12" (22-7530) – 14" (47-3720)

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10 (Incl. Ref. #2)	4
*	22-8710	Tie Rod 12" (Incl. Ref. #2)	4
*	47-2660	Tie Rod 14 (Incl. Ref. #2)	4
2	3217-9	Nut – Hex.	4
3	32146-5	Nut – Lock	1
4	22-8680	Clevis Assembly	1
5	322-11	Screw – Cap, Hex. Hd.	1
6	22-8660	Wiper – Seal, 10" & 12"	1
*	47-5630	Wiper – Seal, 14"	1
7	22-8610	Rod – Piston, 10"	1
*	22-8690	Rod – Piston, 12"	1
*	47-2690	Rod – Piston, 14"	1
8	22-8630	Head – 10" & 12"	1
*	47-2670	Head – 14"	1
9	22-8650	Washer – Backup, 10" & 12"	1
*	47-2290	Washer – Backup, 14"	1
10	22-8640	O-Ring – 10" & 12"	1
*	47-2280	U-Cup Seal, 14"	1

Ref. No.	Part No.	Description	No. Used
11	22-8550	O-Ring, 10" & 12"	2
*	47-2270	O-Ring, 14"	2
12	22-8620	Barrel – 10"	1
*	22-8700	Barrel – 12"	1
*	47-2680	Barrel – 14"	1
13	22-8600	O-Ring	1
14	22-8590	Piston	1
15	22-8560	Nut – Lock	1
16	22-8570	O-Ring	1
17	22-8580	Washer – Backup	2
18	22-8540	Butt – Cap, End 10" & 12"	1
*	47-2700	Butt – Cap, End 14"	1
*	22-8720	Kit – Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 10" & 12" Cylinders	1
*	47-3730	Kit – Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 14" Cylinder	1
19	281-2	Plug – 10" & 12" Cylinders	1
*	353-497	Plug – 14" Cylinder	1

*Not Illustrated

Note: Quantities indicated are for one cylinder.

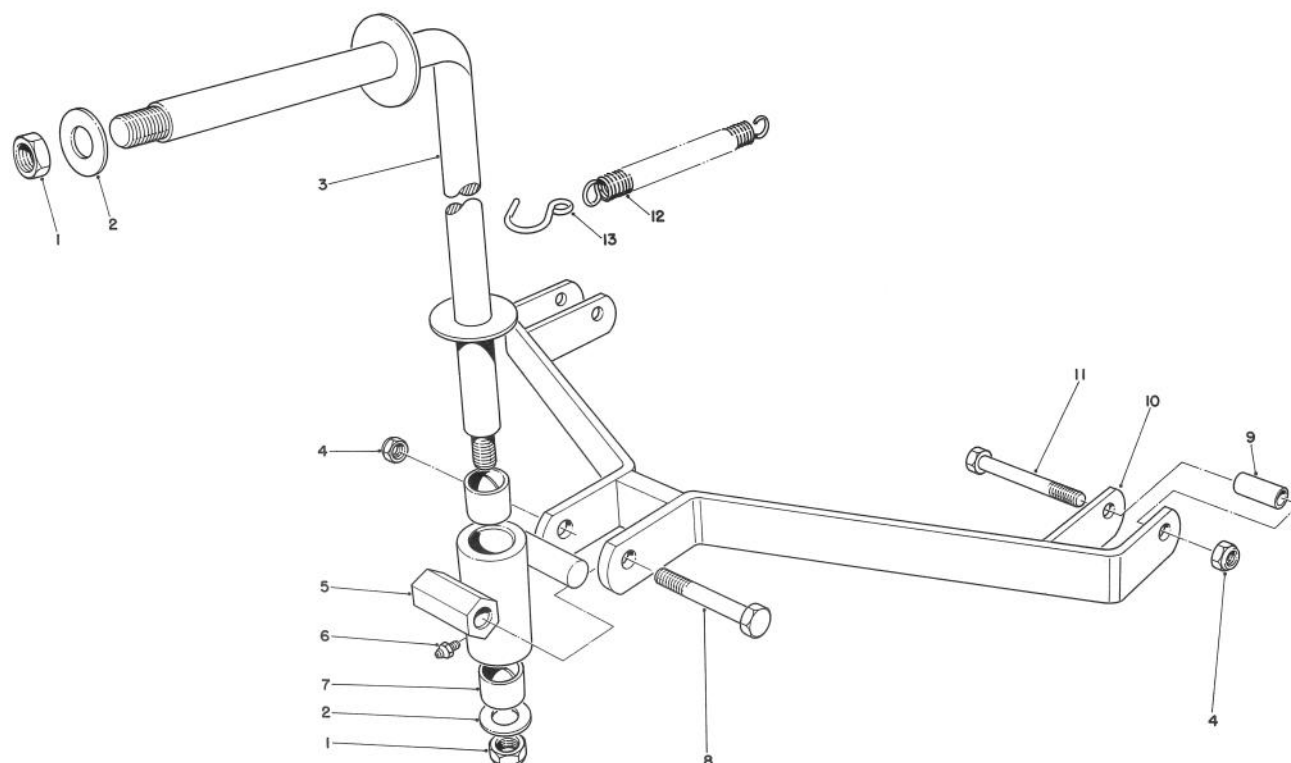


T-0203

LIFT BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-50	Nut - Lock	14	6	302-5	Fitting - Grease	7
2	3-8448	Washer - Thrust	14	7	3-0348	Bushing	14
3	26-8310	Bail - Lift, No. 1, 2 & 3 Cutting Units	3	8	325-17	Screw - Cap, Hex. Hd.	7
*	28-8720	Bail - Lift, No. 4, 5, 6 & 7 Cutting Units	4	9	5-1091	Spacer	14
4	32153-5	Nut - Lock	21	10	3-9280	Bar - Draw	7
5	1-6559	Housing Assembly (Incl. Ref. #6 & 7)	7	11	325-14	Screw - Cap, Hex. Hd.	14
				12	5-1706	Spring	7
				13	3-2198	S-Hook	7

*Not Illustrated

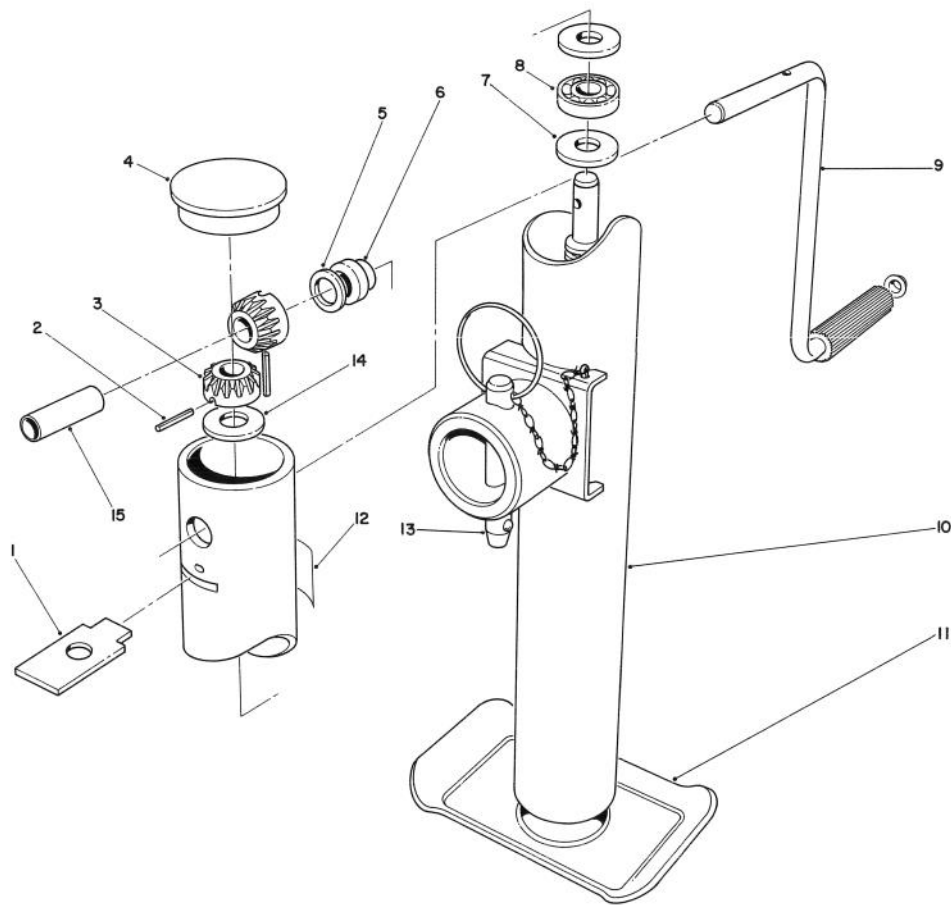


T-0204

JACK ASSEMBLY NO. 60-8900

Ref. No.	Part No.	Description	No. Used
1	60-8950	Plate - Support	1
2	32121-51	Pin - Roll	2
3		Gear - Bevel	2
4	60-8960	Cap - Tube, Jack	1
5		Washer - Thrust	1
6		Bushing	2
7		Washer	2
8		Bearing - Open Cage	1
9	60-8940	Handle Assembly	1
10	60-8930	Tube - Outer	1

Ref. No.	Part No.	Description	No. Used
11	60-8970	Tube - Screw Assy., Inner	1
12		Decal	1
13	55-7190	Pin & Chain Assembly	1
14		Washer	1
15		Spacer - Gear	1
*	60-8910	Kit - Bearing (Incl. Ref. #7 & 8)	1
*	60-8920	Kit - Gear (Incl. Ref. #2, 3, 5, 6, 14 & 15)	1

*Not Illustrated

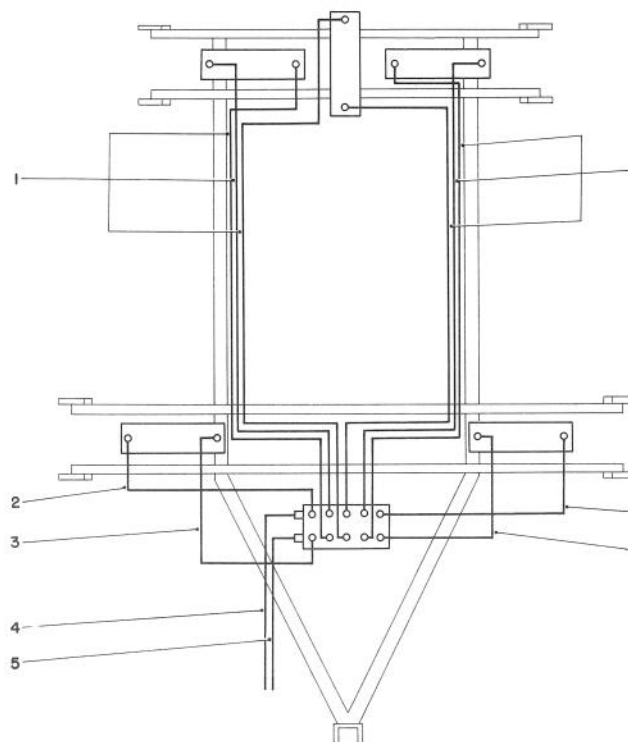


T-0205

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	47-3760	Hydraulic Hose Assembly	6
2	47-3750	Hydraulic Hose Assembly	2
3	47-3740	Hydraulic Hose Assembly	2

Ref. No.	Part No.	Description	No. Used
4	52-5990	Hose - Hydraulic (Orange)	1
5	52-5991	Hose - Hydraulic (Black)	1

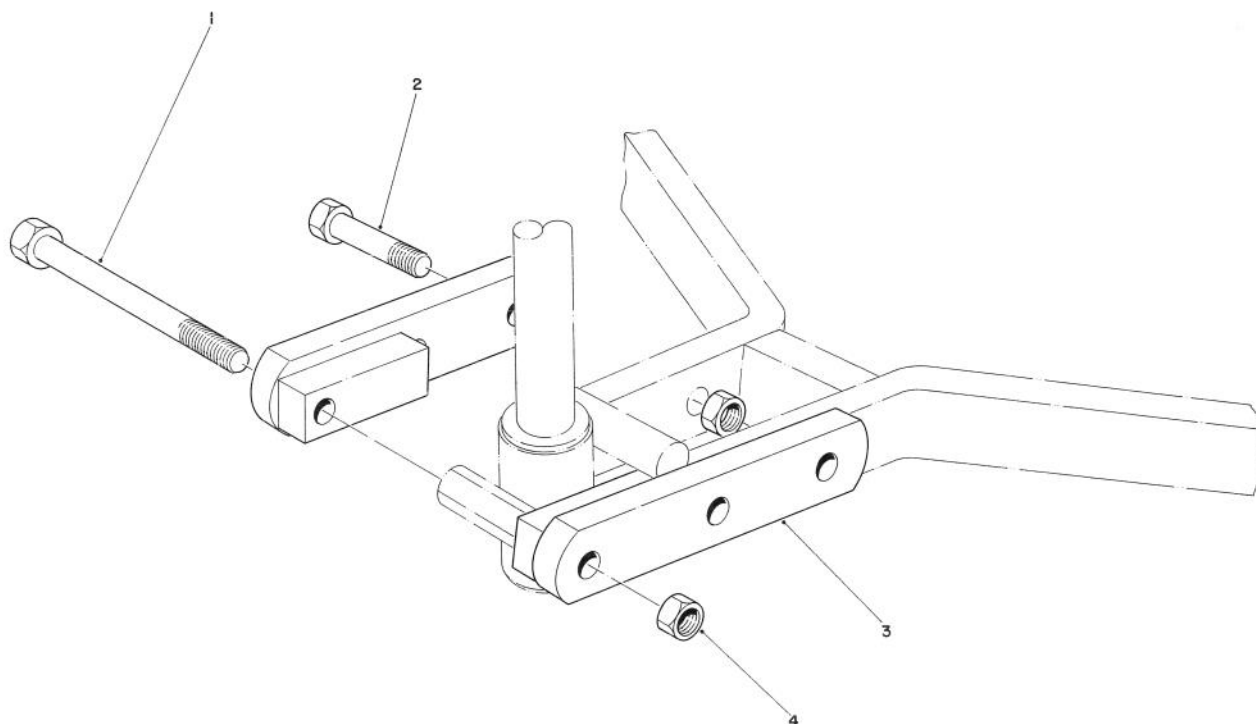

T-0207

18" WHEEL CONVERSION KIT (Optional) REELMASTER & SPARTAN MOWERS (For Lift Arms No. 6 & 7 Only)

Ref. No.	Part No.	Description	No. Used
1	325-19	Screw - Cap, Hex. Hd.	2
2	325-7	Screw - Cap, Hex. Hd.	8

Ref. No.	Part No.	Description	No. Used
3	51-3030	Extension - Drawbar	4
4	32153-5	Nut - Lock	10

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
1-6559	Housing Assembly	11 5 7	22-8690	Rod - Piston, 12	10 * 1
3-0128	Shaft	9 15 8	22-8700	Barrel - 12	10 * 1
3-0136	Keeper - Chain	8 12 3	22-8710	Tie Rod 12	10 * 4
3-0144	Shaft	3 20 1	22-8720	Kit - Seal	10 * 1
3-0144	Shaft	7 25 2	23-2610	Link	9 2 4
3-0144	Shaft	8 28 2	26-8160	Support - Arm, Lift	1 21 1
3-0348	Bushing	11 7 14	26-8250	Pin - Arm, Lift	1 17 2
3-0348	Bushing	9 14 32	26-8310	Bail - Lift, No. 1, 2 & 3	11 3 3
3-0348	Bushing	1 18 12	26-8590	Pin - Cylinder	3 13 1
3-0348	Bushing	3 29 6	28-8720	Bail - Lift, No. 4, 5, 6 & 7	11 * 4
3-0631	Knob	2 39 5	37-2760	Bail - Pin, Lift	7 17 2
3-2196	Sheave	7 5 3	37-2760	Bail - Pin, Lift	8 19 2
3-2196	Sheave	8 11 4	37-2910	Rest - Cylinder	7 20 2
3-2196	Sheave	3 33 1	38-5540	Elbow - Male	5 6 3
3-2198	S-Hook	11 13 7	38-6200	Socket - Slow Moving Veh.	8 9 1
3-4636	Chain - Bail, Lift	9 11 4	42-3550	Cover - Mount, Cylinder	3 19 1
3-8448	Washer - Thrust	11 2 14	44-7612	Bolt - Hex. Washer Hd.	5 3 3
3-9280	Bar - Draw	11 10 7	44-7621	Plate - Cover, V20 L.E.	6 44 1
5-1091	Spacer	11 9 14	44-7650	Spring - Compression	5 13 1
5-1706	Spring	11 12 7	44-7660	Plug - Check	5 37 2
5-1720	Washer	9 16 16	46-2380	Spring - Relief	6 54 1
5-2942	Shackle - Long	9 6 7	47-2270	O-Ring, 14	10 * 2
5-2942	Shackle - Long	3 36 3	47-2280	U-Cup Seal, 14	10 * 1
8-0280	Shackle	3 2 2	47-2290	Washer - Backup, 14	10 * 1
8-0280	Shackle	9 10 2	47-2540	Washer	4 12 2
8-1280	Channel - Cross, Rear	8 20 2	47-2660	Tie Rod 14	10 * 4
11-4590	Pad - Bumper	7 12 2	47-2670	Head - 14	10 * 1
11-5270	Washer - Bumper	7 13 4	47-2680	Barrel - 14	10 * 1
11-5630	Stop - Arm	7 11 2	47-2690	Rod - Piston, 14	10 * 1
13-6200	Pin - Pointed	3 23 1	47-2700	Butt - Cap, End 14	10 * 1
13-6200	Pin - Pointed	1 28 1	47-3010	Frame - Trailer	3 25 1
20-4390	Spacer - Tube	7 9 4	47-3230	Arm - Lift	3 31 1
20-4390	Tube - Spacer	8 14 4	47-3250	Arm - Lift #2 & 3 Cutting	1 20 2
20-4390	Tube - Spacer	3 17 2	47-3270	Arm - Short, No. 5 Cutting	9 * 1
22-7520	Cylinder - Hydraulic, 10	8 16 2	47-3280	Arm - Short, No. 4 Cutting	9 9 1
22-7530	Cylinder - Hydraulic, 12	7 10 2	47-3380	Tower - Control, Lower	1 9 1
22-8540	Butt - Cap, End 10 & 12	10 18 1	47-3430	Bracket - Lift	9 4 1
22-8550	O-Ring, 10 & 12	10 11 2	47-3450	Pin - Pivot	2 40 1
22-8560	Nut - Lock	10 15 1	47-3460	U-Bolt	1 24 2
22-8570	O-Ring	10 16 1	47-3470	Support - Valve	7 24 2
22-8580	Washer - Backup	10 17 2	47-3480	Bracket - Slow Moving Veh.	8 8 1
22-8590	Piston	10 14 1	47-3500	Brace - Channel	8 31 1
22-8600	O-Ring	10 13 1	47-3550	Hitch - Clevis	1 27 1
22-8610	Rod - Piston, 10	10 7 1	47-3560	Channel - Cross, Front	7 19 1
22-8620	Barrel - 10	10 12 1	47-3570	Channel - Cross, Rear	7 2 1
22-8630	Head - 10 & 12	10 8 1	47-3590	Arm - Long, No. 6 Cutting	9 13 1
22-8640	O-Ring - 10 & 12	10 10 1	47-3600	Arm - Long, No. 7 Cutting	9 * 1
22-8650	Washer - Backup, 10 & 12	10 9 1	47-3620	Lever - Block, Pivot	1 4 5
22-8660	Wiper - Seal, 10 & 12	10 6 1	47-3630	Rod - Linkage, Control	1 11 5
22-8670	Tie Rod 10	10 1 4	47-3640	Rest - Cylinder	3 8 1
22-8680	Clevis Assembly	10 4 1	47-3650	Chain - Lift, No. 2 & 3	3 1 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
47-3660	Chain - Lift, No. 1 Cut. Unit	3 35 1	65-5871	Tube - Manual	7 30 1
47-3680	Tower - Control, Upper	1 6 1	65-5890	Cap - Tube, Manual	7 28 2
47-3720	Cylinder - Hydraulic	3 16 1	68-4240	Bonnet	5 9 1
47-3730	Kit - Seal	10 * 1	77-0650	Hub	4 4 2
47-3740	Hydraulic Hose Assembly	13 3 2	217-103	Bolt - Wheel	4 14 12
47-3750	Hydraulic Hose Assembly	13 2 2	217-109	Wheel	4 7 2
47-3760	Hydraulic Hose Assembly	13 1 6	217-111	Cap - Hub	4 10 2
47-3770	Decal - Manual, Operator's	2 38 1	232-27	Stem - Valve	4 8 2
47-3800	Strap - Locking	8 5 2	237-79	O-Ring	5 5 10
47-3810	Lever - Valve	2 34 5	237-79	O-Ring	3 14 2
47-3820	Cover - Column, Control	2 36 1	237-80	O-Ring	5 2 8
47-3840	Elbow - .094 Orifice	7 8 4	2412-102	R-Clamp	7 29 2
47-3840	Elbow - .094 Orifice	8 22 4	253-144	Seal - Grease	4 1 2
47-3860	Channel - LH	3 22 1	254-61	Cup - Bearing	4 5 2
47-3870	Channel - RH	3 11 1	254-62	Cone - Bearing, Outer	4 13 2
47-3880	Linkage - Control	1 3 5	254-103	Cone - Bearing, Inner	4 2 2
47-3900	Plate - Information	7 23 1	254-104	Cup - Bearing	4 3 2
47-3930	Bracket - Lockup	3 6 1	281-2	Plug - 10 & 12 Cylinders	10 19 1
47-3990	Decal - Toro	7 1 1	283-6	Pin - Clevis	1 1 5
47-3990	Decal - Toro	8 15 1	283-10	Pin - Clevis	3 3 5
47-5600	Decal - Operation	2 35 1	283-10	Pin - Clevis	9 7 9
47-5630	Wiper - Seal, 14	10 * 1	283-62	Pin - Clevis	5 34 5
49-8170	Spacer	8 23 4	302-2	Fitting - Grease	4 15 1
49-8170	Spacer	7 27 4	302-5	Fitting - Grease	11 6 7
49-8180	Cap - Dust	1 29 2	302-5	Fitting - Grease	9 12 12
51-0850	Support - Pulley	3 4 1	302-5	Fitting - Grease	1 19 4
51-3030	Extension - Drawbar	14 3 4	302-5	Fitting - Grease	3 30 2
52-3500	Kit - Spindle, Replacement	3 * 1	322-3	Screw - Cap, Hex. Hd.	7 15 4
52-5670	Lever - Control	5 33 5	322-3	Screw - Cap, Hex. Hd.	8 17 2
52-5860	Spool - Collar	5 8 1	322-3	Screw - Cap, Hex. Hd.	3 26 1
52-5900	Screw - Cap, Soc. Hd.	5 32 2	322-6	Screw - Cap, Hex. Hd.	7 14 4
52-5920	Link - Connecting	5 30 5	322-6	Screw - Cap, Hex. Hd.	1 16 2
52-5990	Hose - Hydraulic (Orange)	13 4 1	322-11	Screw - Cap, Hex. Hd.	10 5 1
52-5990	Hose - Hydraulic (Orange)	2 32 1	322-13	Screw - Cap, Hex. Hd.	5 22 3
52-5991	Hose - Hydraulic (Black)	13 5 1	323-8	Screw - Cap, Hex. Hd.	9 8 1
52-5991	Hose - Hydraulic (Black)	2 33 1	323-13	Screw - Cap, Hex. Hd.	1 8 2
55-7190	Pin & Chain Assembly	12 13 1	325-6	Screw - Cap, Hex. Hd.	3 10 6
55-7380	Tongue	1 15 1	325-6	Screw - Cap, Hex. Hd.	1 14 8
56-7960	Tire	4 6 2	325-6	Screw - Cap, Hex. Hd.	7 21 12
60-8900	Jack Assembly	1 23 1	325-6	Screw - Cap, Hex. Hd.	8 26 7
60-8910	Kit - Bearing	12 * 1	325-7	Screw - Cap, Hex. Hd.	14 2 8
60-8920	Kit - Gear	12 * 1	325-7	Screw - Cap, Hex. Hd.	3 37 4
60-8930	Tube - Outer	12 10 1	325-14	Screw - Cap, Hex. Hd.	8 6 5
60-8940	Handle Assembly	12 9 1	325-14	Screw - Cap, Hex. Hd.	7 7 7
60-8950	Plate - Support	12 1 1	325-14	Screw - Cap, Hex. Hd.	11 11 14
60-8960	Cap - Tube, Jack	12 4 1	325-17	Screw - Cap, Hex. Hd.	3 5 1
60-8970	Tube - Screw Assy., Inner	12 11 1	325-17	Screw - Cap, Hex. Hd.	11 8 7
60-9110	Bail - Pin, Lift	3 28 1	325-18	Screw - Cap, Hex. Hd.	8 13 3
63-8520	Section - Valve, 1 Spool	5 * 5	325-19	Screw - Cap, Hex. Hd.	14 1 2
63-8760	Kit - Pin, Link	6 * 1	327-6	Screw - Cap, Hex. Hd.	1 12 4
65-2710	Plate - Information	8 29 1	327-23	Screw - Cap, Hex. Hd.	1 25 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3211-4	Screw - Cap, Hex. Hd.	9 18 16	32153-3	Nut - Lock	1 5 2
3217-8	Nut - Hex	1 10 5	32153-3	Nut - Lock	5 20 3
3217-9	Nut - Hex.	10 2 4	32153-3	Nut - Lock	7 31 2
3219-3	Nut - Hex	5 17 3	32153-5	Nut - Lock	8 3 5
3230-20	Bolt - Carriage	8 10 2	32153-5	Nut - Lock	11 4 21
3234-13	Screw - Cap, Hex. Hd.	2 37 4	32153-5	Nut - Lock	14 4 10
3234-22	Screw - Cap, Hex. Hd.	8 25 1	32153-5	Nut - Lock	7 6 3
3253-3	Washer - Lock	5 10 2	32513-5	Nut - Lock	3 32 1
3253-4	Washer - Lock	7 16 2	353-301	Poppet - Lift, Check	6 43 2
3253-4	Washer - Lock	8 18 2	353-302	O-Ring	6 41 2
3253-4	Washer - Lock	3 27 1	353-303	Seal - Backup	6 40 4
3253-5	Washer - Lock	9 17 16	353-304	Poppet - Spring	6 42 2
3256-2	Washer - Flat	7 32 2	353-305	O-Ring	5 39 2
3256-22	Washer - Flat	3 38 4	353-306	Washer - Backup	5 38 2
3256-27	Washer - Flat	2 42 4	353-318	Seal - Wiper	5 26 1
3256-62	Washer - Flat	9 1 8	353-321	Pin - Cotter	5 28 5
3272-1	Pin - Cotter	5 31 10	353-322	Pin	5 36 5
3272-10	Pin - Cotter	9 5 9	353-322	Pin - Link	5 35 5
3272-10	Pin - Cotter	3 34 5	353-324	Bracket - Handle	5 29 1
3272-13	Pin - Cotter	3 12 1	353-328	Washer - Shim .040	6 51 A/R
3272-19	Pin - Cotter	4 9 2	353-329	Washer - Shim .020	6 52 A/R
3272-24	Pin - Cotter	3 21 2	353-330	Washer - Shim .010	6 53 A/R
3272-24	Pin - Cotter	7 26 4	353-331	O-Ring	6 47 1
3272-24	Pin - Cotter	8 27 4	353-334	Cap - Relief	6 55 1
3272-31	Pin - Cotter	1 2 10	353-392	Seal - Relief, Poppet	6 49 1
3290-216	Washer - Tapered	7 4 20	353-417	Collar - Spring	5 12 2
3290-216	Washer - Tapered	3 9 10	353-426	Elbow	5 1 2
3290-216	Washer - Tapered	8 24 16	353-481	Plug - Load Check Assy.	6 * 2
3290-274	Rivet	7 22 4	353-497	Plug - 14 Cylinder	10 * 1
3290-274	Rivet - Pop	8 30 2	353-515	Kit - Seal, Spool	6 * 1
3290-343	Pin - Cotter, Hair	3 24 1	353-531	Poppet - Relief Assembly	6 50 1
3290-343	Pin - Cotter, Hair	1 26 1	353-537	Elbow - Male	5 7 7
3290-355	Pin - Cotter, Hair	8 4 4	353-537	Elbow - Male	3 15 2
3290-357	Nut - Flange	1 7 6	353-570	O-Ring	5 16 2
3296-24	Nut - Lock	1 22 6	353-721	Plug Assembly	5 4 2
3296-29	Nut - Lock	2 41 1	353-743	Kit - Seal	6 * 1
3296-50	Nut - Lock	11 1 14	353-758	O-Ring	6 46 1
3296-50	Nut - Lock	7 18 2	353-760	Body - WH Relief	6 48 1
3296-50	Nut - Lock	8 21 2	353-798	Plate - Cover, Right	5 21 1
32104-17	Screw - Hex. Hd. Self Tap.	3 18 4	353-799	Coverion Plug Assembly	5 18 1
32121-51	Pin - Roll	12 2 2	353-800	O-Ring	5 19 1
32128-20	Nut - Lock	8 7 2	353-819	Body - Coupler, Quick Disc.	1 30 2
32128-23	Nut - Flange	8 1 12	353-820	Tip - Coupler, Quick Disc.	2 31 2
32128-23	Nut - Flange	7 3 16	353-835	Kit - Seal, Sectional	6 * 1
32128-23	Nut - Flange	3 7 10	353-952	Seal - Backup	6 45 1
32128-23	Nut - Flange	1 13 8	353-958	Washer - Backup	5 15 2
32136-1	Nut - Slotted	4 11 2	353-959	Plate - Retainer, Seal	5 14 2
32146-5	Nut - Lock	10 3 1	353-976	Screw - Socket Head	5 11 2
32153-2	Nut - Lock	9 3 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster Transport Frame has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Reelmaster Transport Frame, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster Transport Frame.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Control Tower & Linkage Assembly	1-2	Hydraulic Cylinder No. 22-7530	10
Main Frame Assembly	3	Hydraulic Cylinder No. 47-3720	10
Wheel & Tire Assembly	4	Lift Bail Assembly	11
Hydraulic Valve Assembly No. 63-8510	5-6	Jack Assembly No. 60-8900	12
Front Cross Channel Assembly	7	Hydraulic Schematic	13
Rear Cross Channel Assembly	8	18" Wheel Conversion Kit For Lift Arms No. 6 & 7	
Liftarm Assemblies No. 4-7	9	Using Reelmaster & Spartan Mowers (Opt.) ...	14
Hydraulic Cylinder No. 22-7520	10	TORO Part Number Index	15-17

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.