



DH 200 Lawn Tractor

Model No. 74573 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 4	Deck Housing Assembly	 27
Front Axle Assembly	 6	Cutting Pan and Bag on Demand Assembly	 28
Steering Assembly	 7	Cutting Pan and Drive System Assembly	 29
Hood Assembly	 8	Mower Lift Assembly	 31
Engine Assembly	 9	Harness Assembly	 32
Operation - Brake and Bypass Assembly	 10	Electrical Switch No. 1 Assembly	 33
Operation - Travel Pedal Assembly	 11	Electrical Switch No. 2 Assembly	 34
Transmission Drive Assembly	 12	Electrical Switch No. 3 Assembly	 35
Control Shaft Assembly Transmission Assembly No. 114-3155	 14	Cylinder Assembly Briggs and Stratton Model 31A607-0117-E1	 36
Differential Gear Assembly Transmission Assembly No. 114-3155	 15	Cylinder Head Assembly Briggs and Stratton Model 31A607-0117-E1	 37
Final Pinion Assembly Transmission Assembly No. 114-3155	 16	Crankshaft Assembly Briggs and Stratton Model 31A607-0117-E1	 38
Axle Shaft Assembly Transmission Assembly No. 114-3155	 17	Crankcase Assembly Briggs and Stratton Model 31A607-0117-E1	 39
Brake Assembly Transmission Assembly No. 114-3155	 18	Carburetor Assembly Briggs and Stratton Model 31A607-0117-E1	 40
Fan Pulley Assembly Transmission Assembly No. 114-3155	 19	Carburetor Assembly (Nikki) Briggs and Stratton Model 31A607-0117-E1	 41
Range Shift Assembly Transmission Assembly No. 114-3155	 20	Governor Assembly Briggs and Stratton Model 31A607-0117-E1	 42
Center Case Assembly Transmission Assembly No. 114-3155	 21	Blower Housing Assembly Briggs and Stratton Model 31A607-0117-E1	 43
Pump Shaft Assembly Transmission Assembly No. 114-3155	 22	Starter Assembly Briggs and Stratton Model 31A607-0117-E1	 44
Motor Shaft Assembly Transmission Assembly No. 114-3155	 23	Gasket Set Briggs and Stratton Model 31A607-0117-E1	 45
Transaxle Case Assembly Transmission Assembly No. 114-3155	 24	Carburetor Overhaul Kit Briggs and Stratton Model 31A607-0117-E1	 46
Grass Collector Assembly No. 106-5760	 25	Carburetor Overhaul Kit (Nikki) Briggs and Stratton Model 31A607-0117-E1	 47
Tunnel Assembly	 26	Attachments and Accessories List	 48


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head


Footnotes

- | | | | |
|---|--|---|--|
| ❶ | Not serviced separately | ❷ | Obtain from your local Briggs & Stratton dealer |
| ❸ | Included in Engine Gasket Set (Ref. No. 358) | ❹ | Included in Carburetor Gasket Set (Ref. No. 977) |
| ❺ | Included in Valve Gasket Set (Ref. No. 1095) | ❻ | For Service of Nikki Carburetors |
| ❻ | Included in Carburetor Overhaul Kit (Ref. No. 121, 121A) | | |

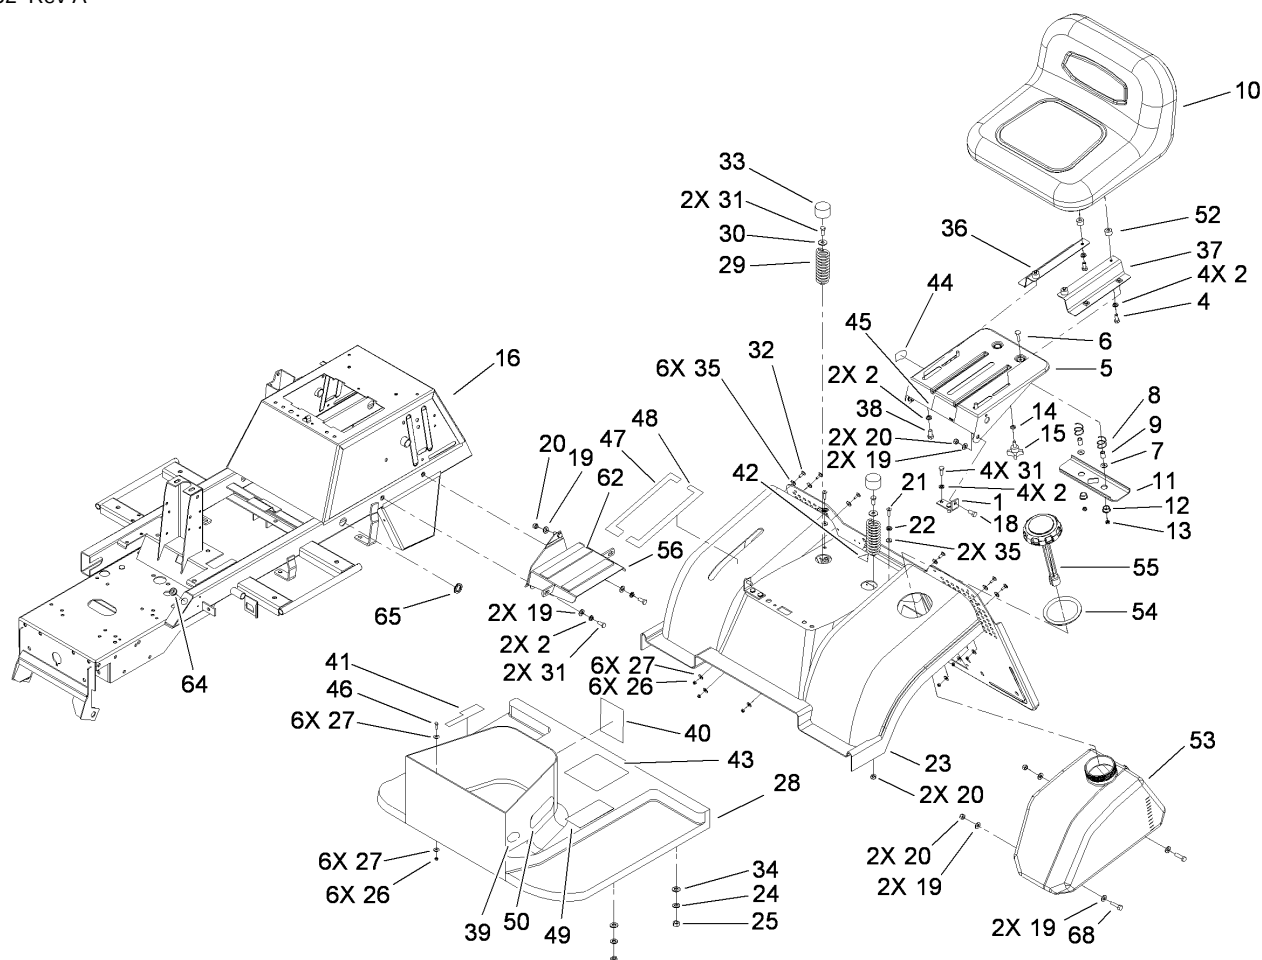

Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat	27	104-2943	18	Washer-Flat
2	42-9850	12	Washer-Lock, Spring	28	104-2944	1	Footrest ASM
4	322-3	4	Screw-HH	29	104-2945	2	Spring-Seat
5	104-2929	1	Support-Seat	30	104-2946	2	Washer-Plain
6	104-2930	2	Bolt-Carriage	31	33114-020	8	Screw-HH
7	104-2931	2	Washer-Flat	32	104-2948	6	Bolt-Carriage
8	104-2932	2	Spring-Seat	33	104-2857	2	Cap-Hub
9	104-2933	2	Spacer-Split	34	104-2951	4	Washer-Rubber
10	107-2214	1	Seat ASM	35	104-2952	8	Washer-Rubber
11	104-2934	1	Bracket	36	107-8915	1	Bracket-Seat, RH
12	104-2935	2	Bushing	37	107-8916	1	Bracket-Seat, LH
13	33023-00	2	Nut-Lock	38	104-3195	2	Screw
14	104-2936	2	Washer-Spring	39	104-3237	1	Decal-Brake, Parking
15	104-2937	2	Knob-Adj.	40	104-3238	1	Decal-Starting
16	107-8948	1	Chassis-Frame	41	104-3241	1	Decal-Operation, Hydro
18	104-2939	2	Screw-Support, Seat	42	104-3242	1	Decal-Bag To Frame
19	33094-00	9	Washer-Plain	43	104-2903	1	Decal-Instruction
20	33024-00	7	Nut-Lock	44	99-5340	1	Decal-Switch
21	104-2940	2	Screw-HSFH	45	93-7276	1	Decal-Danger
22	104-2941	2	Washer-Finish	46	60-6910	6	Screw
23	114-3247	1	Fender-Rear Body	47	104-3239	1	Decal-HOC, LH
24	33095-00	4	Washer-Flat	48	104-3240	1	Decal-HOC, RH
25	33025-00	4	Nut-Lock	49	106-8552	1	Decal-Operation
26	87-5140	12	Nut-Lock	50	107-8974	2	Decal-Tower

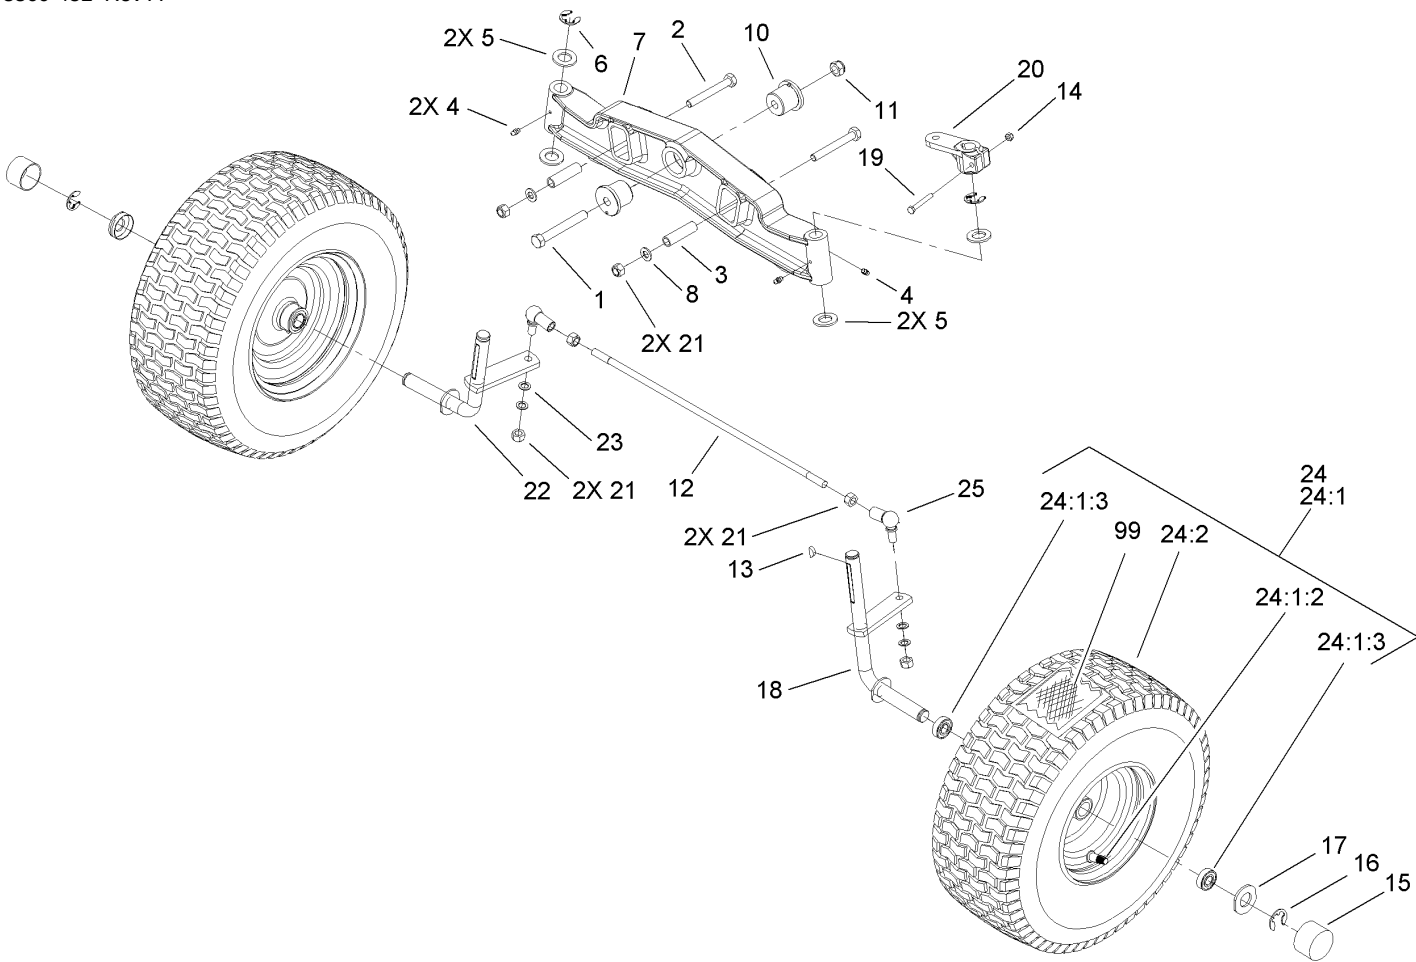

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	107-8949	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8776	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	107-8926	1	RH Spindle ASM
23	106-5757	4	Washer
24	110-9087	2	Wheel And Tire ASM
24:1	110-9088	1	Wheel ASM(15X6.0X6)

Ref	Part No.	Qty.	Description
24:1:2	106-8596	1	Valve-Tire
24:1:3	110513	2	Bearing-Wheel
24:2	99-2988	1	Tire
25	104-2876	2	Joint-Ball, Angle
99	232-39	1	Tube-Inner

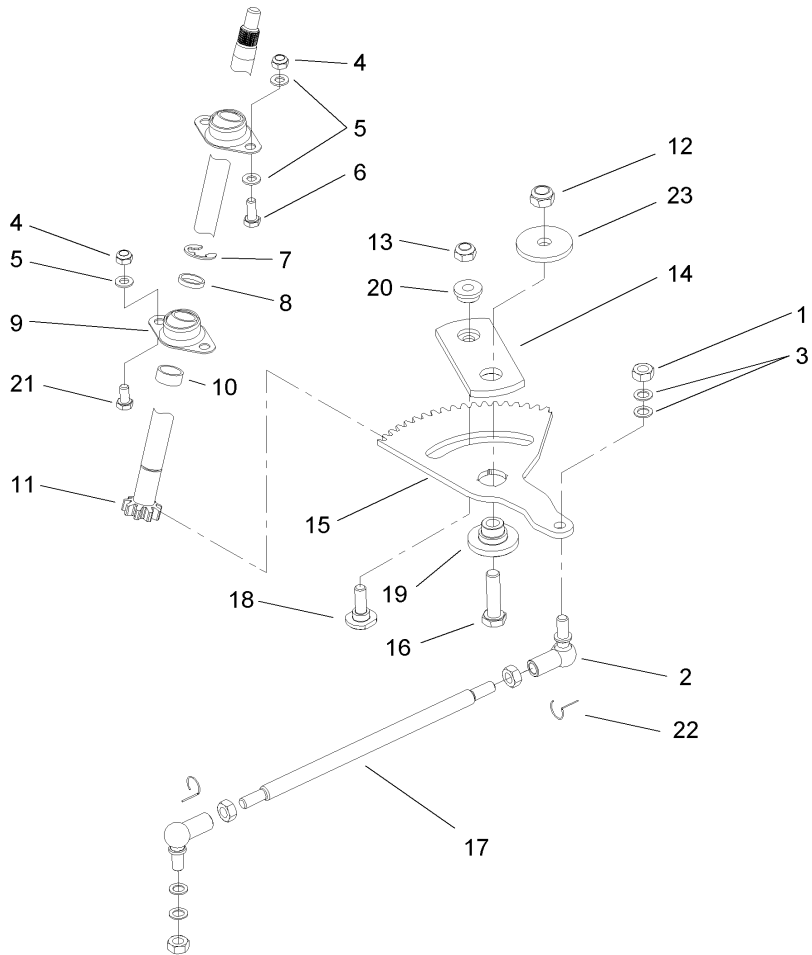

Steering Assembly


Ref	Part No.	Qty.	Description				
1	33025-00	4	Nut-Lock				
2	104-2876	2	Joint-Ball, Angle				
3	106-5757	4	Washer				
4	33024-00	4	Nut-Lock				
5	33094-00	6	Washer-Plain				
6	33114-020	2	Screw-HH				
7	104-2891	1	Clip-Spring				
8	104-2877	1	Spacer-Upper				
9	104-2878	2	Bearing-Spherical				
10	104-2879	1	Spacer-Lower				
11	106-5773	1	Shaft-Steering				
12	33026-00	1	Nut-Lock				
13	33025-00	1	Nut-Lock				
14	105-1238	1	Plate-Steering				
15	104-2883	1	Gear-Sector				
16	104-2910	1	Screw-Hex				
17	104-2886	1	Link-Drag				
18	105-1239	1	Bolt-Shoulder				
19	105-1240	1	Pivot-Steering				
20	105-1241	1	Bushing				
21	33114-016	2	Screw-HH				
22	104-2865	2	Stirrups-Locking				
23	108-8892	1	Washer				

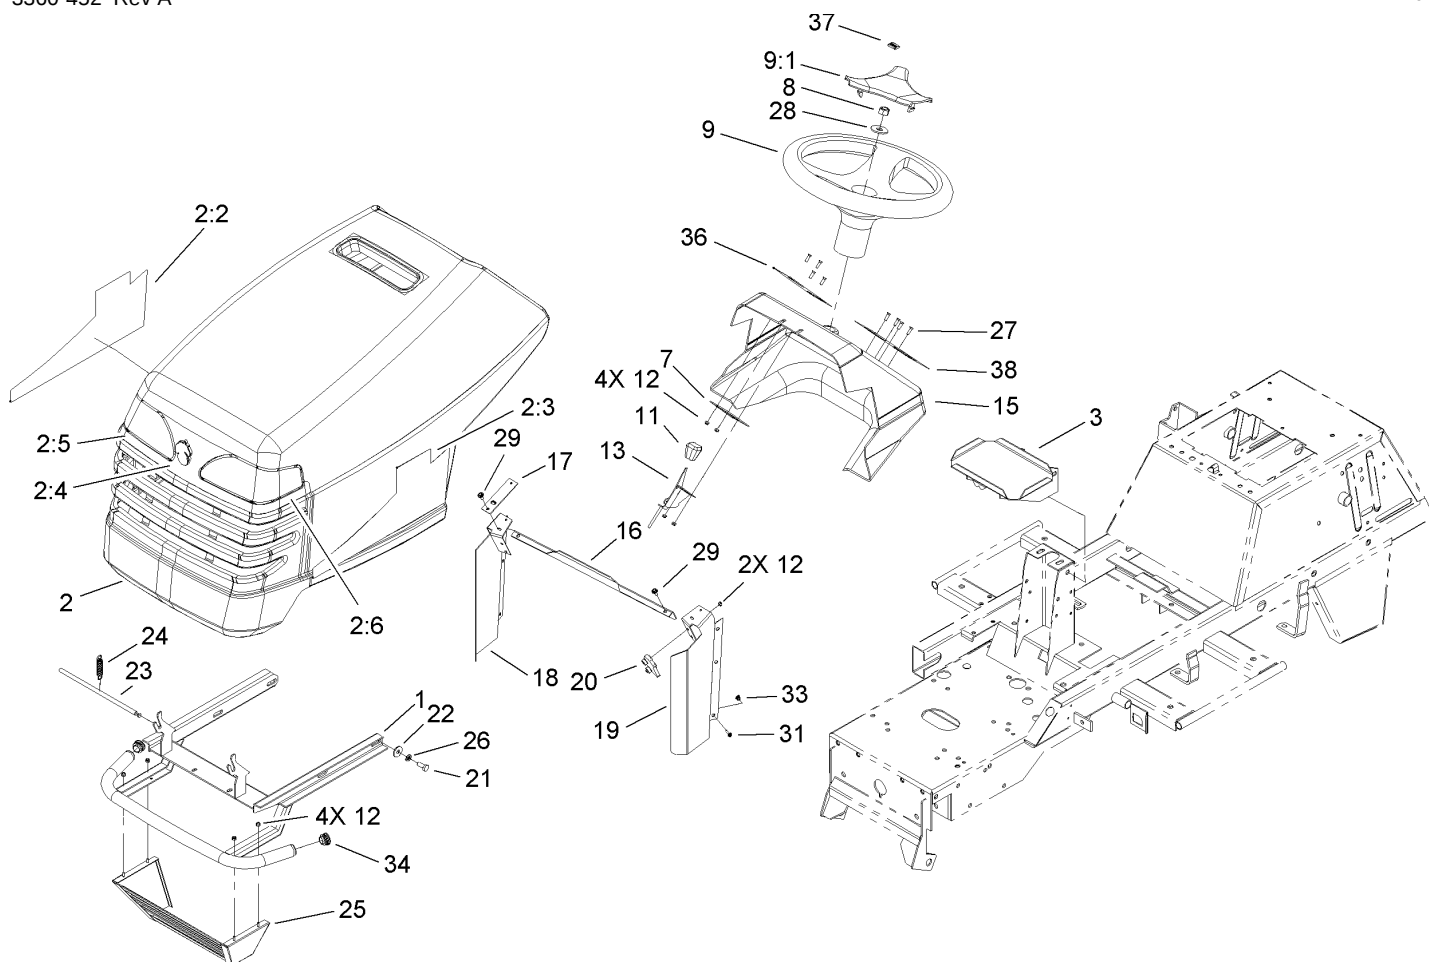

Hood Assembly

Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8986	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	1	Brace
8	33026-00	1	Nut-Lock
9	98-1471	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	1	Knob
12	87-5140	10	Nut-Lock
13	106-4166	1	Cable-Throttle And Choke
15	104-2968	1	Panel-Dash
16	114-3132	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety


Ref	Part No.	Qty.	Description
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	4	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
36	107-8920	1	Decal-Dash Throttle And Ignition
37	98-1459	1	Decal
38	104-3235	1	Decal-PTO

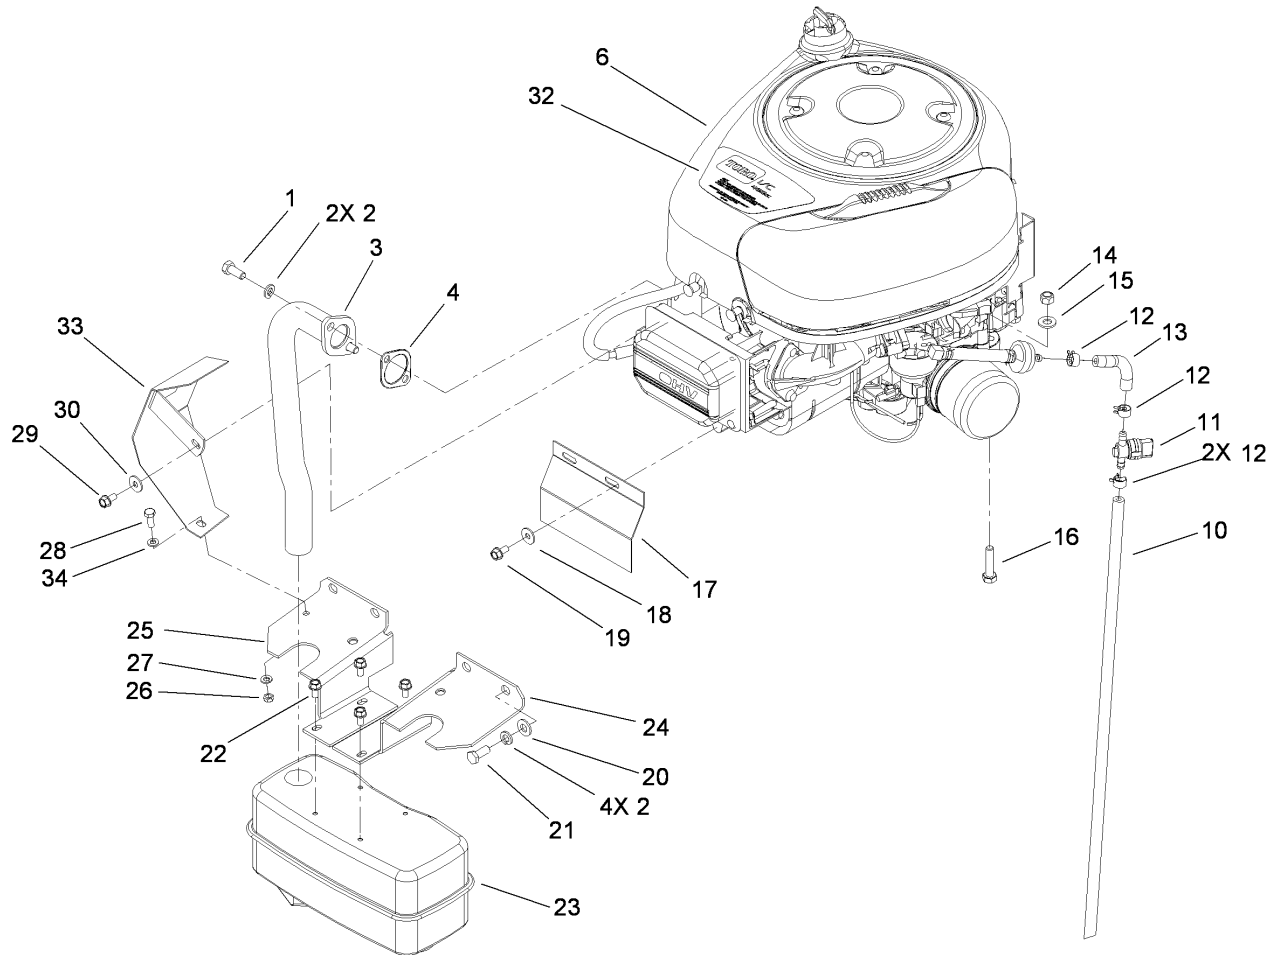

Engine Assembly


Ref	Part No.	Qty.	Description
1	322-3	2	Screw-HH
2	42-9850	6	Washer-Lock, Spring
3	104-3221	1	Tube-Exhaust
4	88-4410	1	Gasket-Muffler
1 2 6		1	Engine-B&s, 31A607-0117-E1K7030
10	110-8692	1	Line-Fuel
11	104-3224	1	Valve-Tank, Fuel
12	104-3212	4	Clamp-Line, Fuel
13	104-3213	1	Line-Fuel
14	33024-00	4	Nut-Lock
15	33094-00	4	Washer-Plain
16	33114-035	4	Screw-HH
17	104-3222	1	Cover-Front
18	104-2931	2	Washer-Flat
19	106-5763	2	Screw
20	33094-00	4	Washer-Plain
21	33114-020	4	Screw-HH
22	106-5763	4	Screw
23	104-3229	1	Muffler
24	104-3214	1	Guard-Muffler, LH
25	104-3215	1	Guard-Muffler, RH
26	33013-00	1	Nut-Hex
27	104-3186	1	Washer-Spring

Ref	Part No.	Qty.	Description
28	33113-016	1	Screw-HH
29	106-5763	1	Screw
30	104-2931	1	Washer-Flat
32	107-4924	1	Decal
33	105-1242	1	Cover-Manifold, Exhaust
34	33093-00	1	Washer-Flat

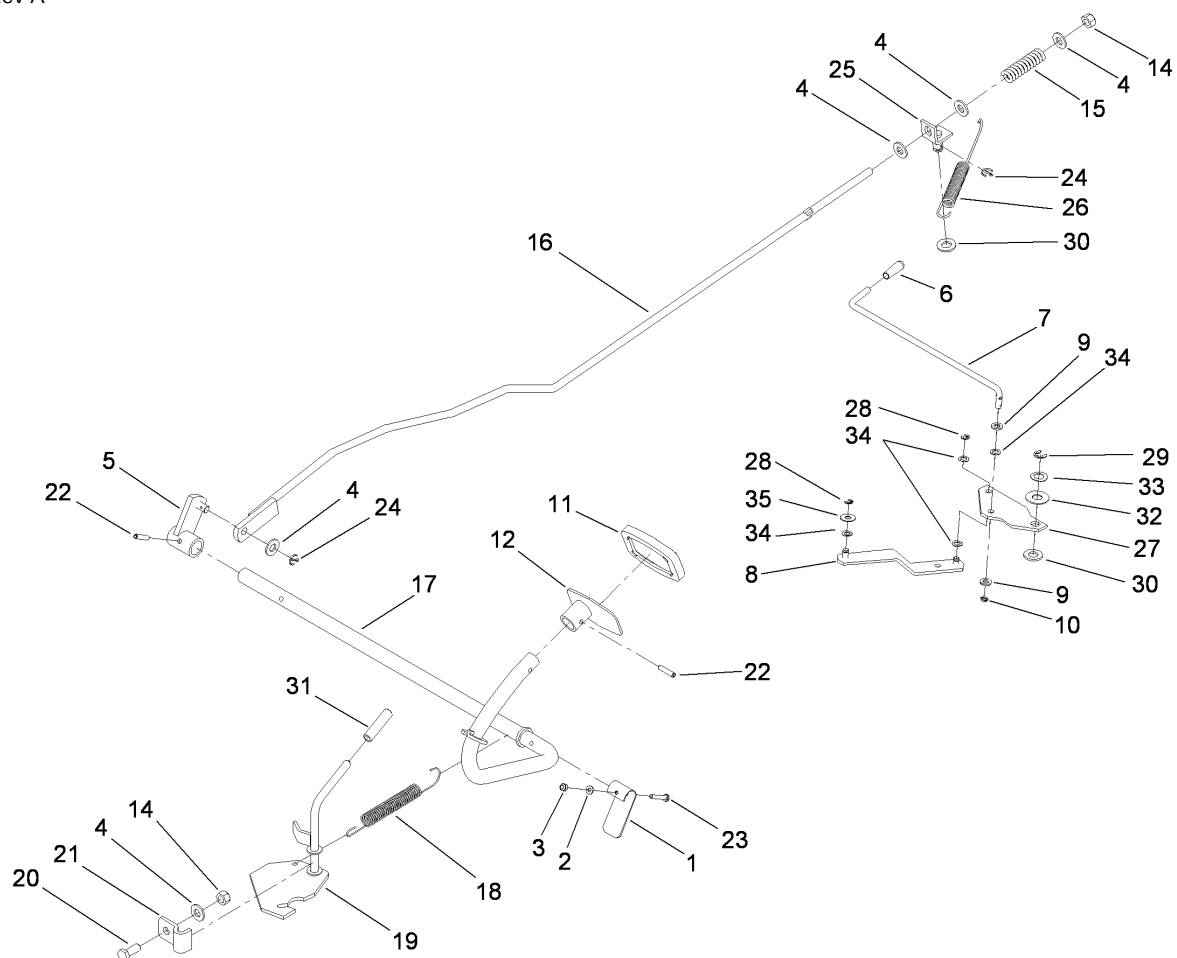


Operation - Brake and Bypass Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring	26	104-3012	1	Spring
2	104-2984	1	Washer	27	104-3323	1	Plate-Bypass
3	104-2985	1	Nut-Hex	28	104-3014	2	Stirrup
4	33094-00	5	Washer-Plain	29	104-3015	1	Stirrup
5	104-2993	1	Bracket-Rod, Brake	30	33095-00	2	Washer-Flat
6	108-8708	1	Cap-Bypass Lever, Hydro	31	104-3247	1	Cap
7	104-2995	1	Rod-Lever, Bypass	32	106-5768	1	Washer
8	107-8944	1	Lever-Bypass	33	106-5769	1	Washer
9	104-3193	2	Washer	34	106-5770	4	Washer
10	104-2997	1	Pin-Cotter	35	106-5771	1	Washer
11	104-3018	1	Pad-Pedal				
12	114-3246	1	Pedal-Brake				
14	33024-00	2	Nut-Lock				
15	104-3002	1	Spring-Brake				
16	104-3003	1	Rod-Connecting, Brake				
17	104-3004	1	Shaft-Brake				
18	104-3005	1	Spring-Brake, Hand				
19	104-3006	1	Lever-Brake, Hand				
20	33114-020	1	Screw-HH				
21	104-3007	1	Clamp-Lever, Parking Brake				
22	104-3008	2	Pin-Spring				
23	104-3009	1	Screw-Hex				
24	104-3016	2	Pin-Cotter				
25	104-3011	1	Bracket-Rod, Brake				

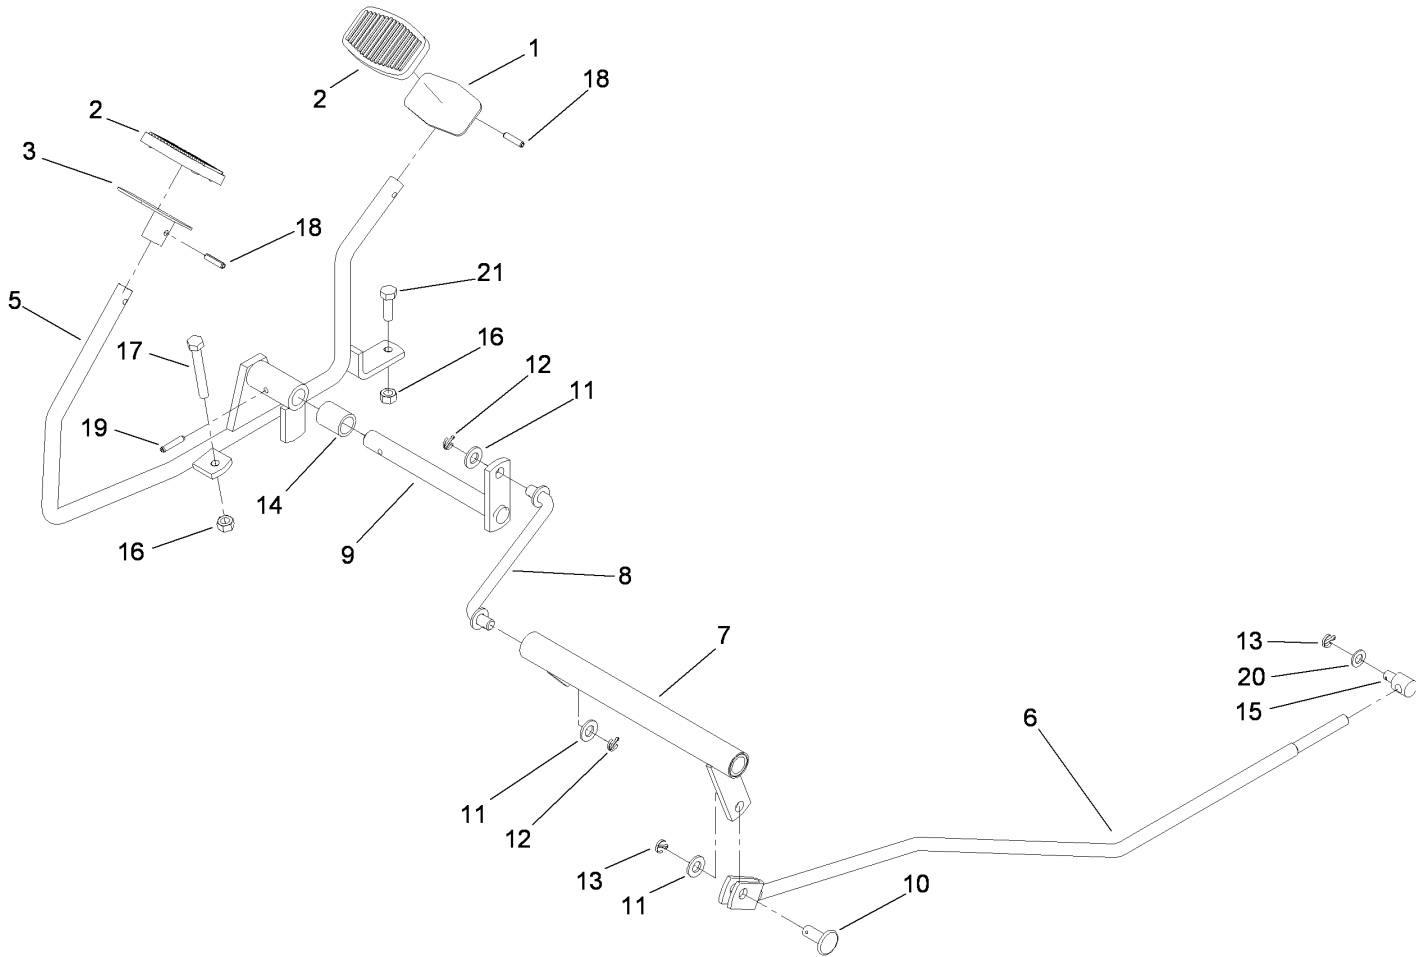

Operation - Travel Pedal Assembly


Ref	Part No.	Qty.	Description				
1	104-3017	1	Pedal-Rear, Travel				
2	104-3018	2	Pad-Pedal				
3	114-3248	1	Pedal-Travel, Forward				
5	104-3021	1	Pad-Travel				
6	104-3022	1	Rod-Tie				
7	104-3023	1	Shaft-Diagonal				
8	104-3024	1	Link-Formed				
9	104-3025	1	Shaft-Diagonal				
10	104-3026	1	Pin				
11	33095-00	3	Washer-Flat				
12	104-3016	2	Pin-Cotter				
13	104-3027	2	Pin-Cotter				
14	104-3028	1	Spacer				
15	104-3029	1	Pin				
16	33014-00	2	Nut-Hex				
17	33114-060	1	Screw-HH				
18	104-3008	2	Pin-Spring				
19	104-3030	1	Pin-Spring				
20	104-3031	1	Washer				
21	33114-025	1	Screw-HH				

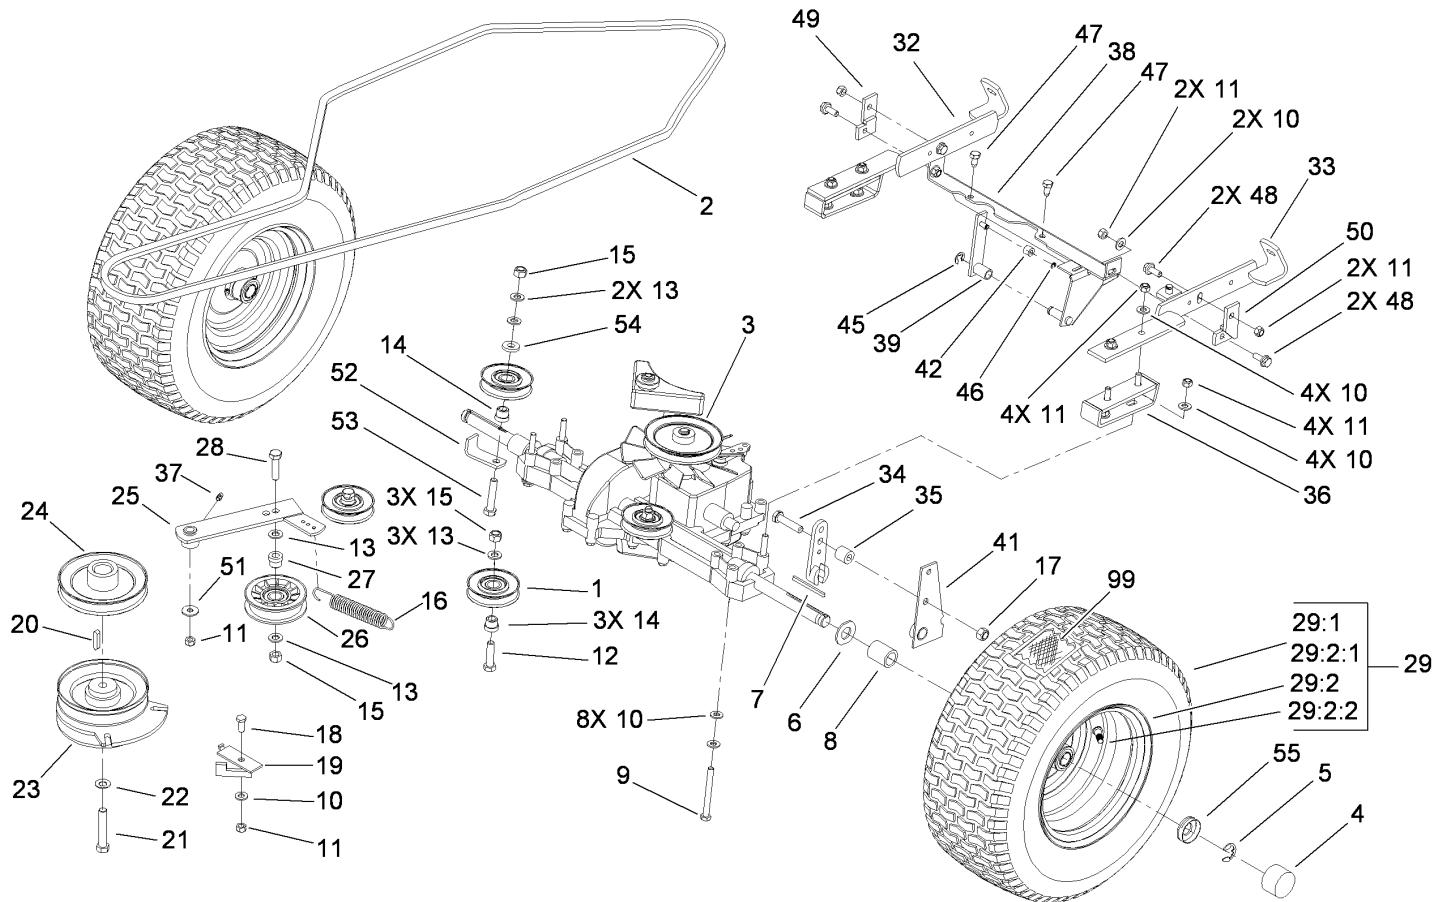

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	114-3155	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	19	Washer-Plain
11	33024-00	14	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29		2	Wheel And Tire ASM
29:1	99-2996	1	Tire
29:2	107-8928	1	Wheel ASM
29:2:1		1	Rim (18X9.5X8)
29:2:2	106-8596	1	Valve-Tire
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	107-8947	2	Bracket-Support
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
41	104-3326	1	Tenon
42	104-3329	1	Roller
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming
48	104-3065	4	Screw-Hex
49	107-8945	1	Bracket-Right

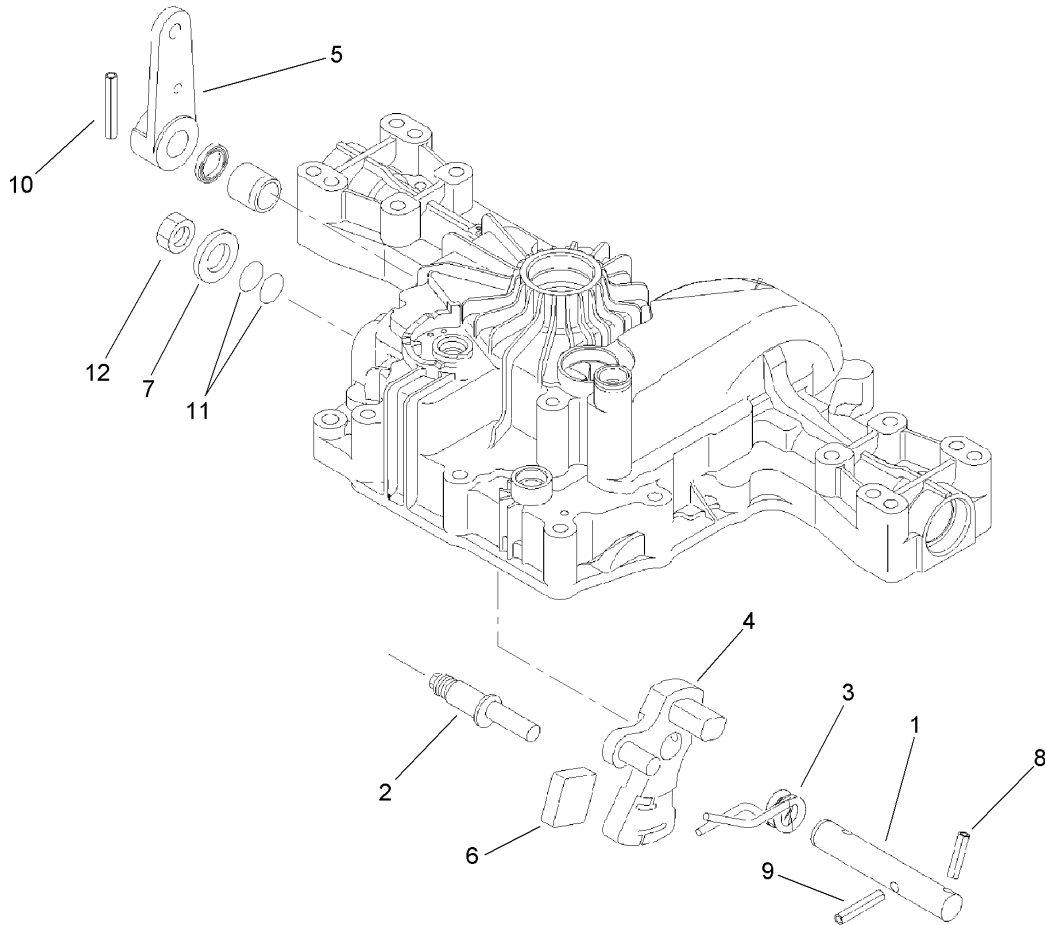

Control Shaft Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	114-3181	1	Shaft-Control				
2	104-3292	1	Fulcrum-Eccentricity				
3	114-3217	1	Spring-Torsion				
4	114-3180	1	Arm-Control				
5	104-3342	1	Arm-Transaxle				
6	104-3296	1	Plate-Jerky				
7	93-0417	1	Washer				
8	114-3182	1	Pin-Cotter				
9	104-3297	1	Pin				
10	93-0411	1	Pin-Roll				
11	104-3298	2	Packing				
12	93-0420	1	Nut				

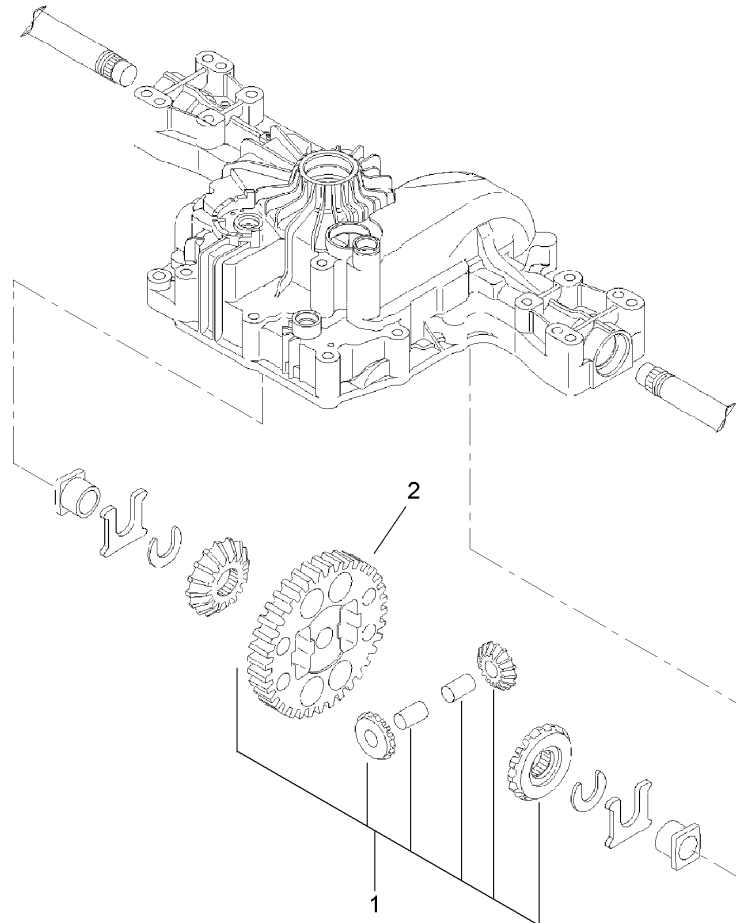

Differential Gear Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

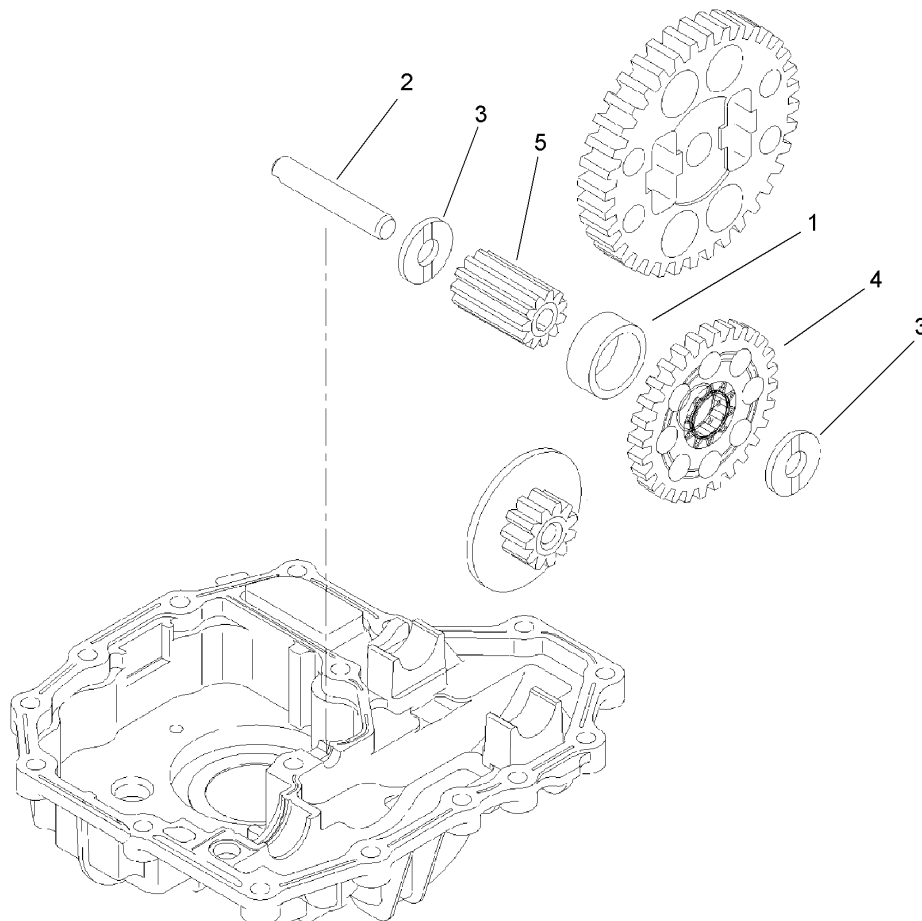

Final Pinion Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

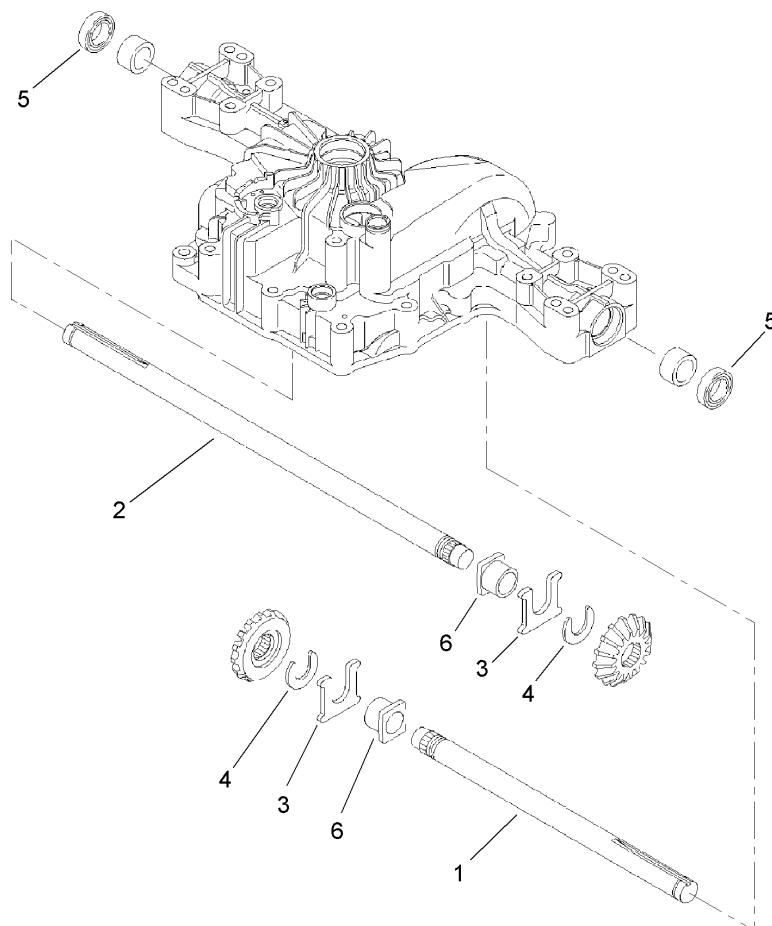

Axle Shaft Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

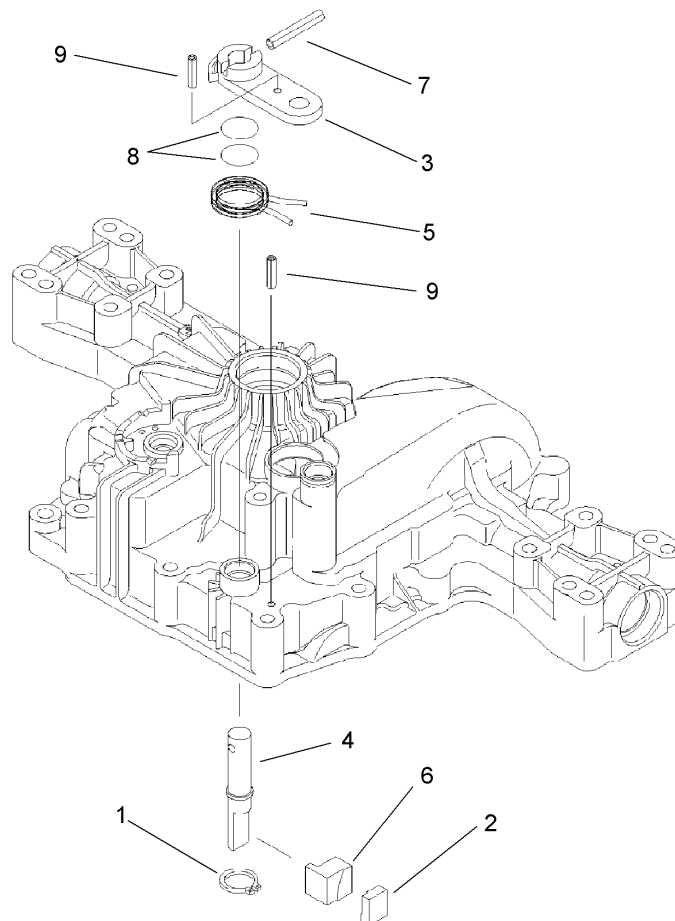

Brake Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3313	1	Ring				
2	104-3314	1	Shoe-Brake				
3	104-3315	1	Arm-Brake				
4	104-3316	1	Shaft-Brake				
5	104-3317	1	Spring-Return, Brake				
6	104-3318	1	Actuator-Brake				
7	92-0767	1	Pin				
8	93-0418	2	O-Ring				
9	104-3319	2	Pin				

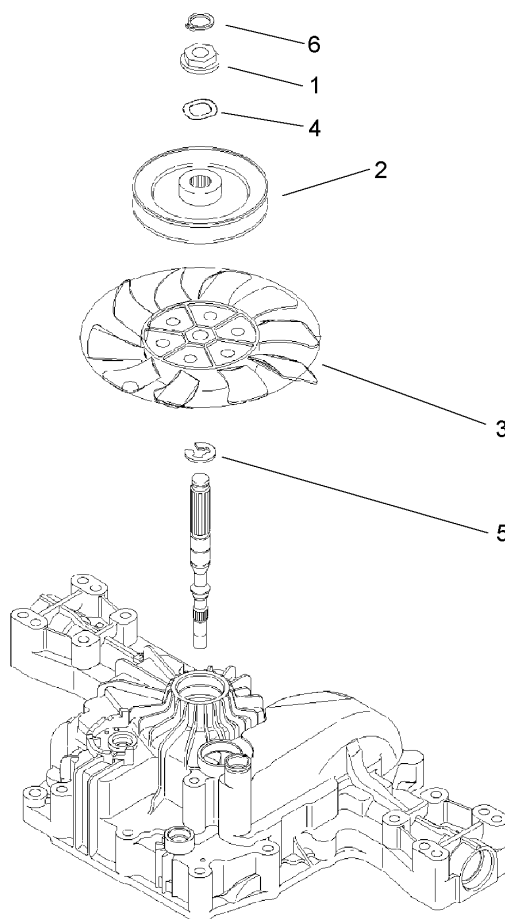

Fan Pulley Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

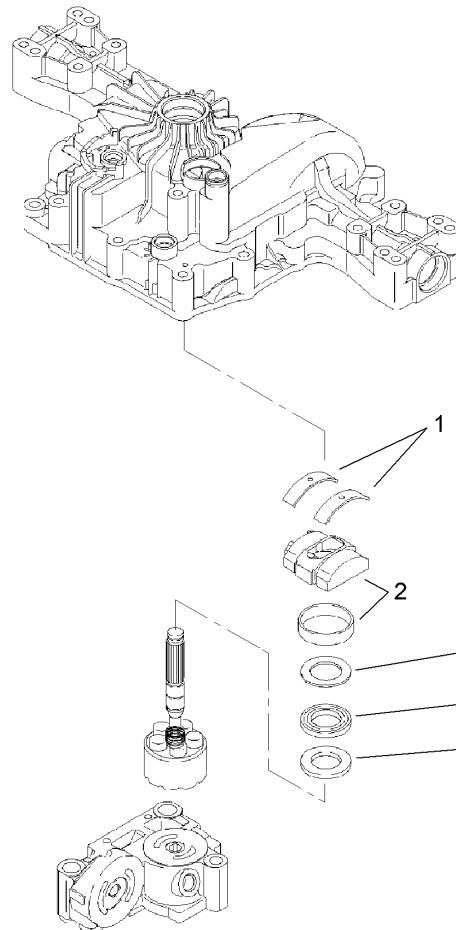

Range Shift Assembly


Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

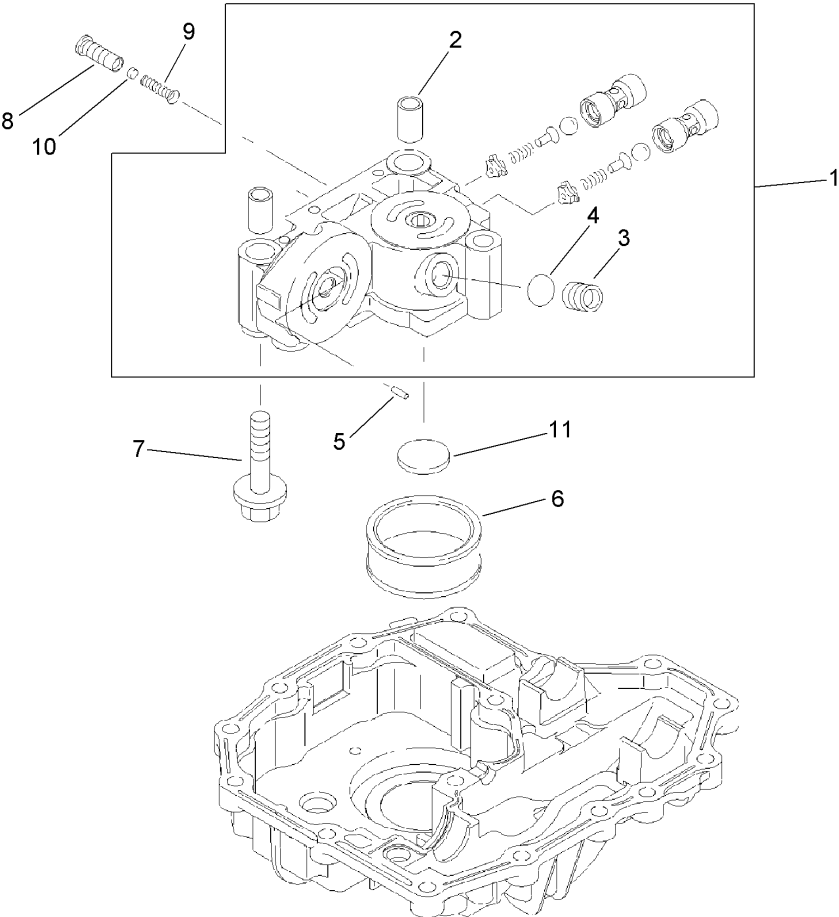


Center Case Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description				
1	104-3267	1	Case-Center				
2	104-3268	2	Pin-Knock				
3	104-3269	1	Plug				
4	93-0419	1	Packing				
5	104-3270	1	Pin				
6	104-3271	1	Filter				
7	104-3272	3	Bolt				
8	104-3273	2	Valve				
9	104-3274	2	Spring				
10	104-3275	2	Filter				
11	104-3257	1	Magnet				

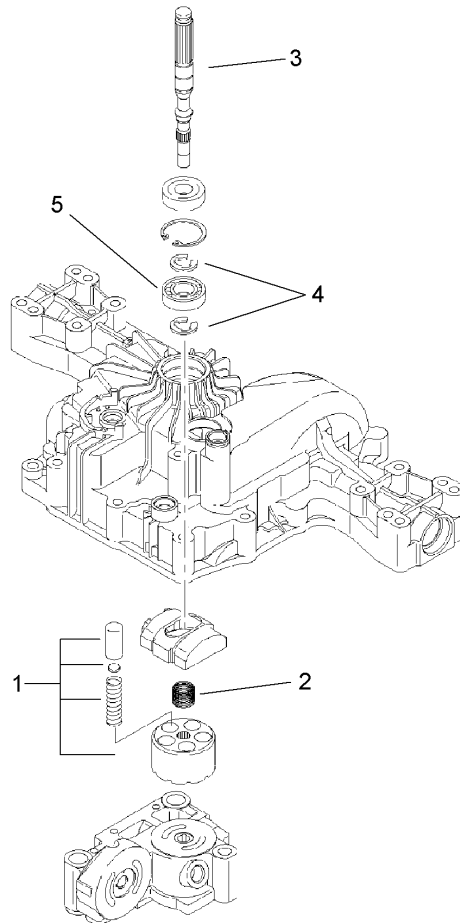


Pump Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

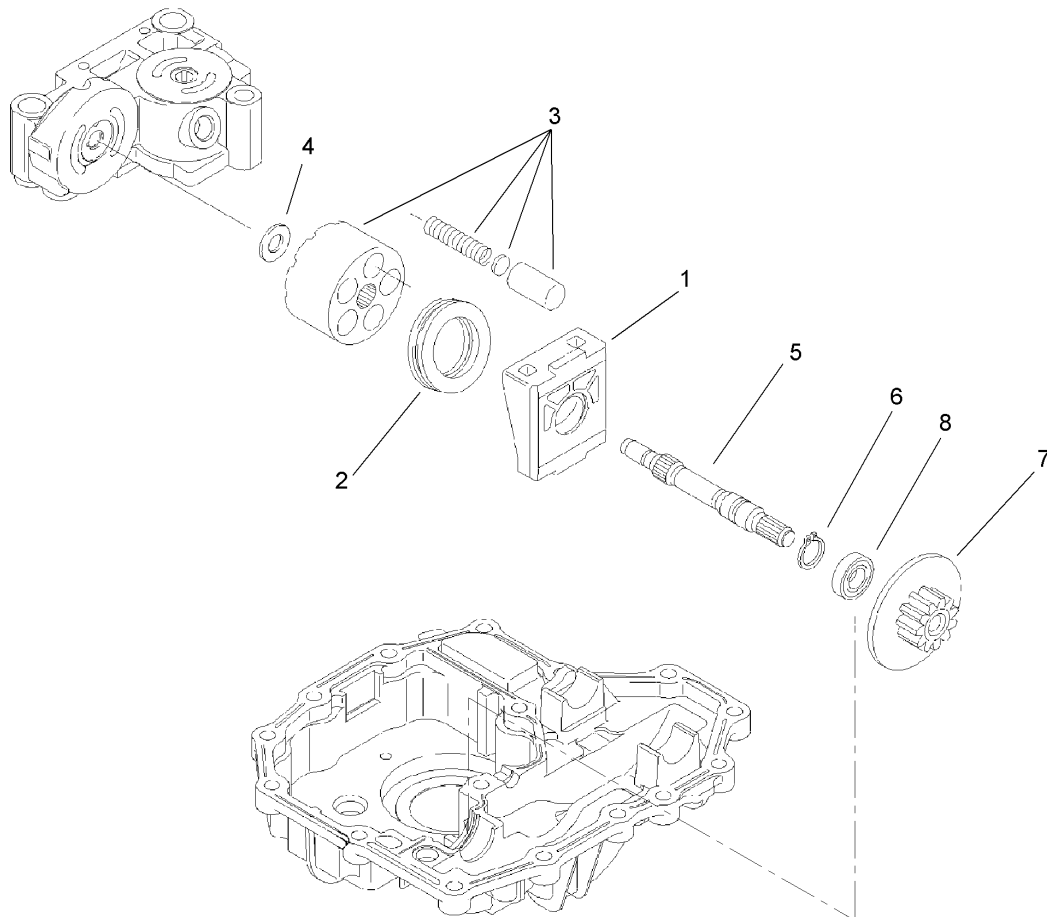


Motor Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description				
1	104-3279	1	Housing				
2	104-3280	1	Bearing				
3	104-3281	1	Block-Cylinder				
4	104-3282	1	Washer				
5	104-3283	1	Shaft-Motor				
6	93-0373	1	Ring-Snap				
7	104-3284	1	Motor-Gear				
8	104-3285	1	Bearing				

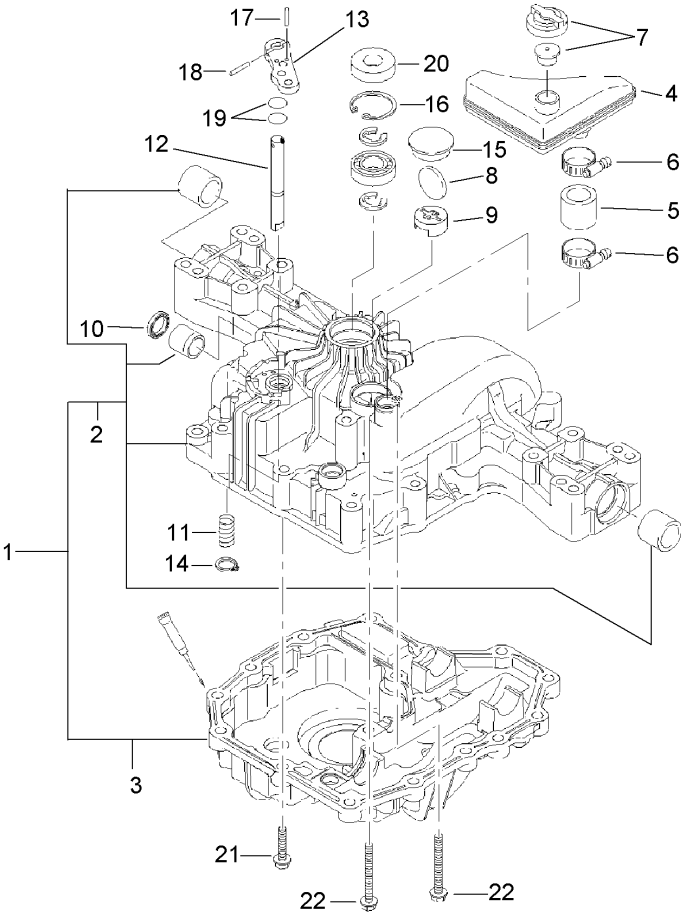

Transaxle Case Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3251	1	Transaxle Case Set				
2	104-3252	1	Housing-Upper				
3	104-3253	1	Housing-Lower				
4	104-2914	1	Tank-Reservoir, With Cap				
5	104-3254	1	Tube				
6	104-3255	2	Clamp-Miniature				
7	104-3256	1	Valve-Vent, 15				
8	104-3257	1	Magnet				
9	104-3258	1	Holder-Magnet				
10	104-3259	1	Seal-Oil				
11	93-0396	1	Spring				
12	104-3260	1	Shaft-Bypass				
13	104-3261	1	Lever-Bypass				
14	104-3262	1	Ring				
15	104-3263	1	Plug-Bore				
16	93-0360	1	Ring				
17	104-3264	1	Pin				
18	104-3265	1	Pin				
19	93-0419	2	Packing				
20	93-0361	1	Seal				
21	93-0363	14	Screw-TAP				
22	104-3266	2	Screw-TAP				

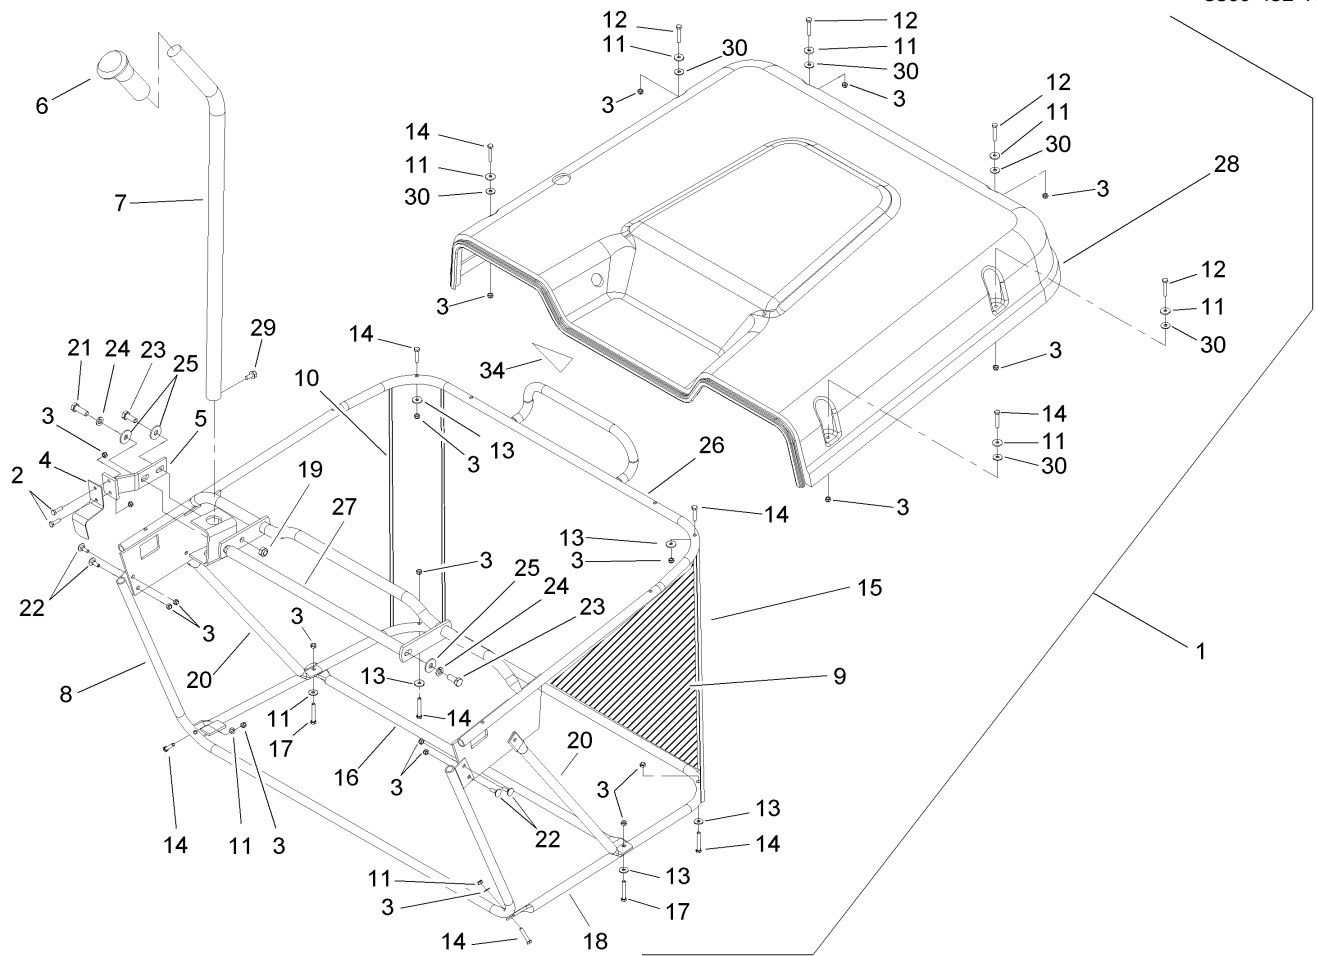

Grass Collector Assembly No. 106-5760


Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring

Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

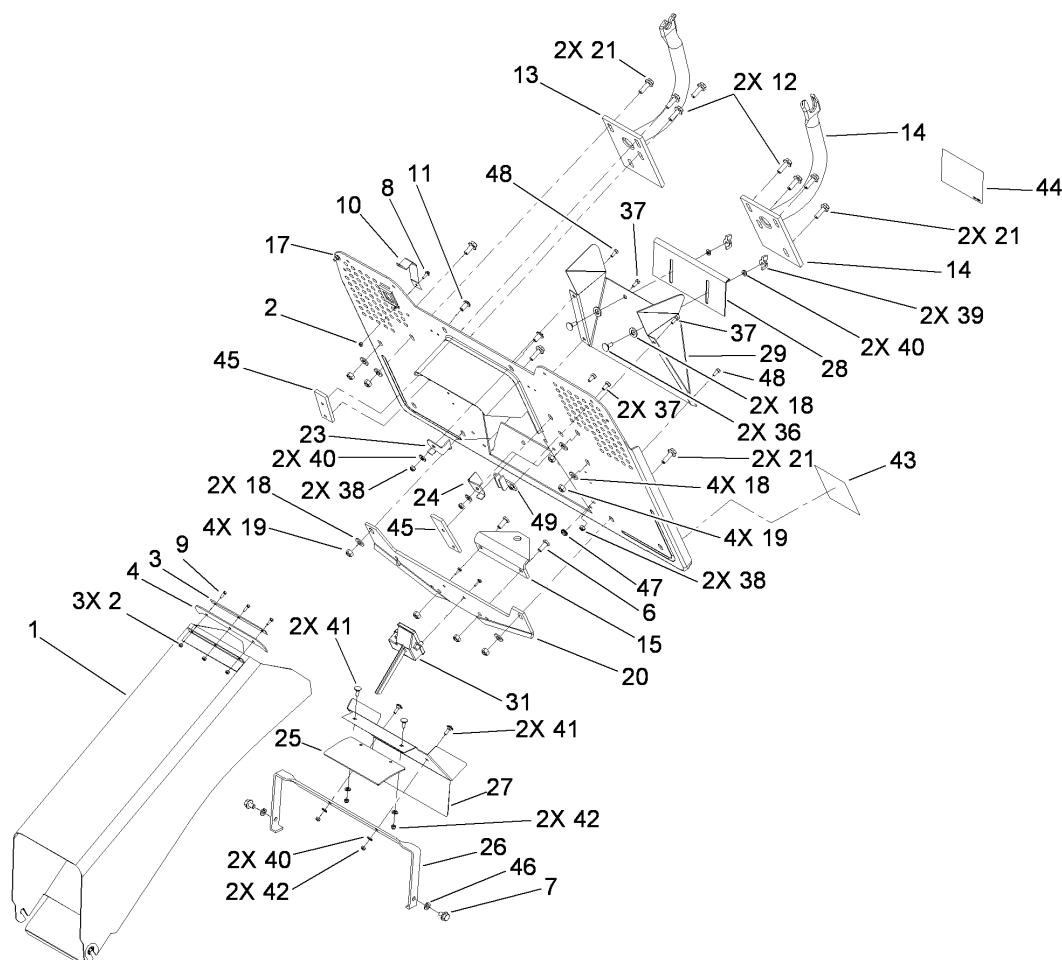


Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel	28	104-3336	1	Shield-Adjustable
2	104-2985	4	Nut-Hex	29	104-3335	1	Hopper-Receiving
3	104-3055	1	Plate-Support	31	104-3074	1	Overload Switch ASM
4	104-3056	1	Seal-Rubber	36	104-2961	2	Screw
6	33114-020	2	Screw-HH	37	33113-012	4	Screw-HH
7	68-9410	2	Screw-Flange	38	33023-00	4	Nut-Lock
8	104-2983	1	Screw	39	32103-28	2	Nut-Wing
9	104-3058	3	Screw-SFH	40	33093-00	6	Washer-Flat
10	104-3059	1	Cover-Switch	41	104-2948	4	Bolt-Carriage
11	104-3060	2	Bolt-Carriage	42	87-5140	4	Nut-Lock
12	104-3061	4	Screw	43	104-3243	1	Decal-Bypass, Hydro
13	104-3062	1	Support-Collector, Right	44	104-2853	1	Decal-Position, Bagging
14	104-3063	1	Support-Collector, Left	45	104-3347	2	Plate-Reinforcing
15	104-3064	1	Hitch-Tow	46	104-3348	2	Washer-Spring
17	104-3066	1	Collector Plate ASM	47	106-5772	1	Bushing
18	33095-00	8	Washer-Flat	48	106-8575	2	Screw-HH
19	33024-00	8	Nut-Lock	49	110-8688	1	Bracket-Fuel Tank Support
20	104-3067	1	Support-Hitch, Tow				
21	104-3068	6	Screw-Hex				
23	106-8597	1	Support-Tunnel, Left				
24	106-8598	1	Support-Tunnel, Right				
25	106-8599	1	Shield-Rubber				
26	104-3069	1	Bracket-Shield, Protective				
27	104-3070	1	Shield-Protective				

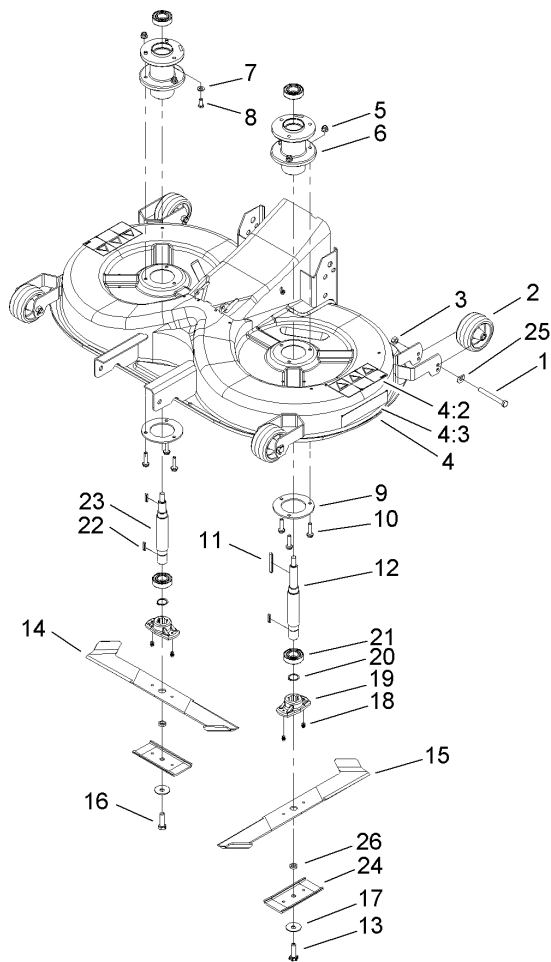

Deck Housing Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH	23	106-8566	1	Shaft-Blade, Right
2	104-3080	4	Wheel-Gauge	24	106-6533	2	Stiffener-Blade
3	33025-00	4	Nut-Lock	25	106-5767	4	Washer
4	110-9071	1	Deck ASM	26	106-6530	2	Spacer
4:2	93-7824	2	Decal-Danger				
4:3	106-8563	1	Decal-Recycler				
5	104-3082	6	Nut-Lock, HF				
6	107-8992	2	Housing-Spindle				
7	33094-00	6	Washer-Plain				
8	33114-020	6	Screw-HH				
9	104-3084	2	Support-Ring				
10	104-3085	6	Bolt-HHF				
11	104-3086	1	Key				
12	106-8565	1	Shaft-Blade, Left				
13	106-5797	1	Bolt-HH, Blade				
14	106-8557	1	Blade-RH				
15	106-8558	1	Blade-LH				
16	106-5798	1	Bolt-Blade, HH				
17	106-6532	2	Washer-Blade				
18	104-3093	4	Pin-Shear, Grooved				
19	106-4185	2	Adapter-Blade				
20	104-3095	2	Ring-Locking				
21	104-6325	4	Bearing-Ball				
22	104-3097	3	Key-Square				

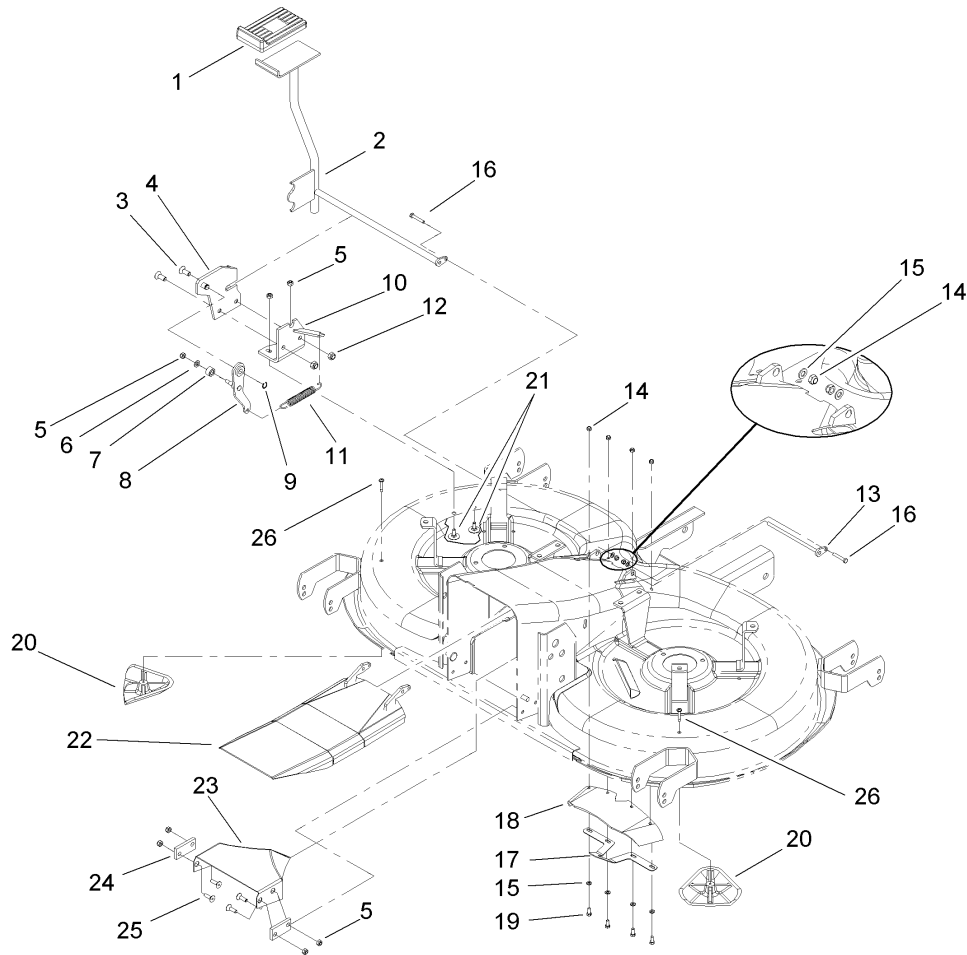

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	2	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center


Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

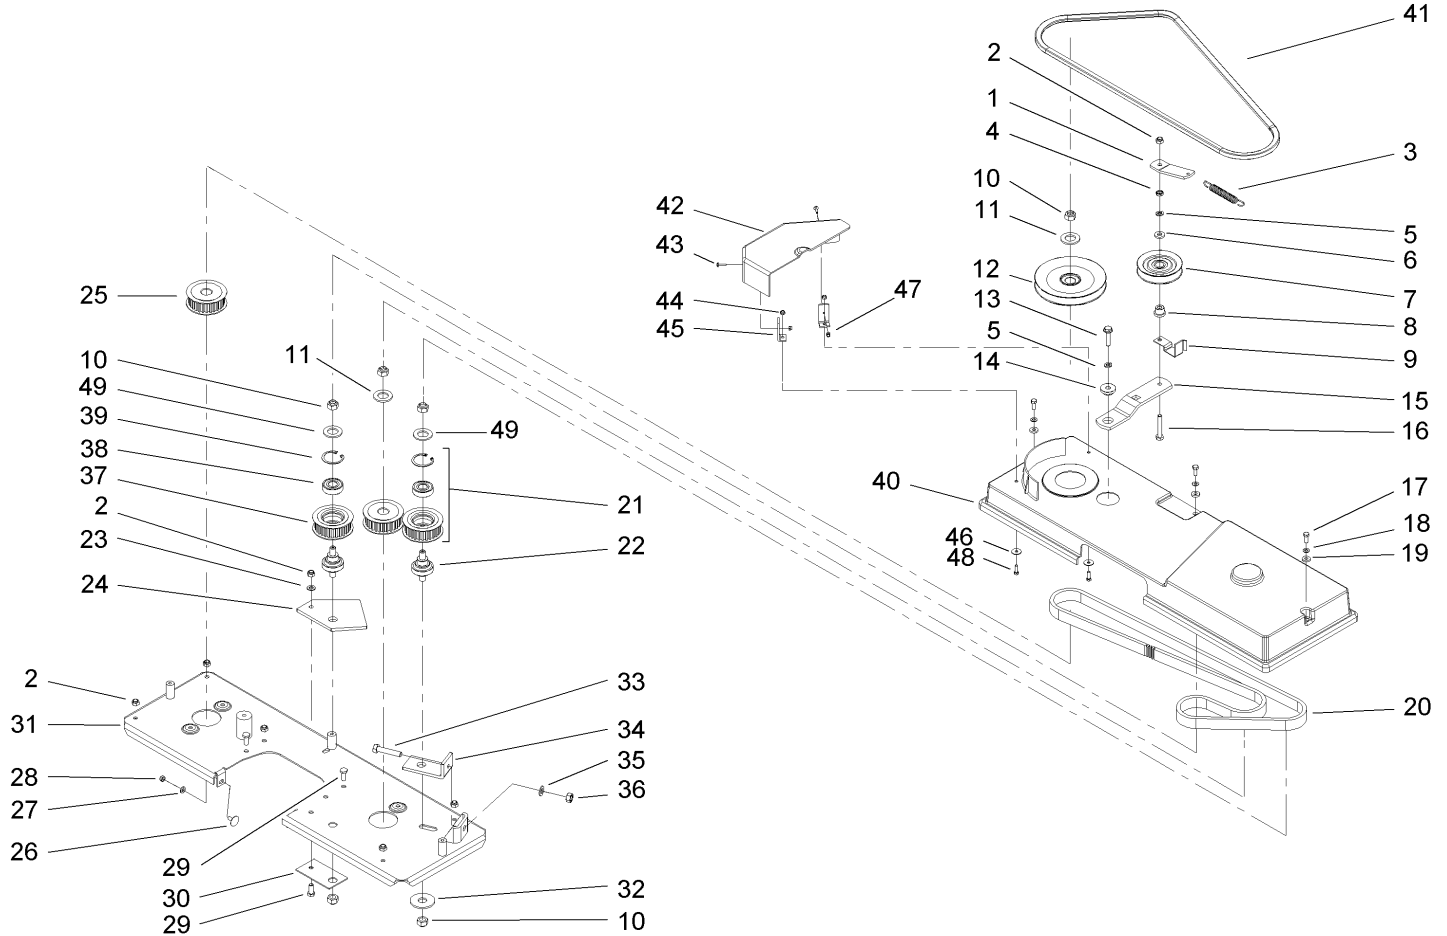

Cutting Pan and Drive System Assembly


Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley

Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	2	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3127	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

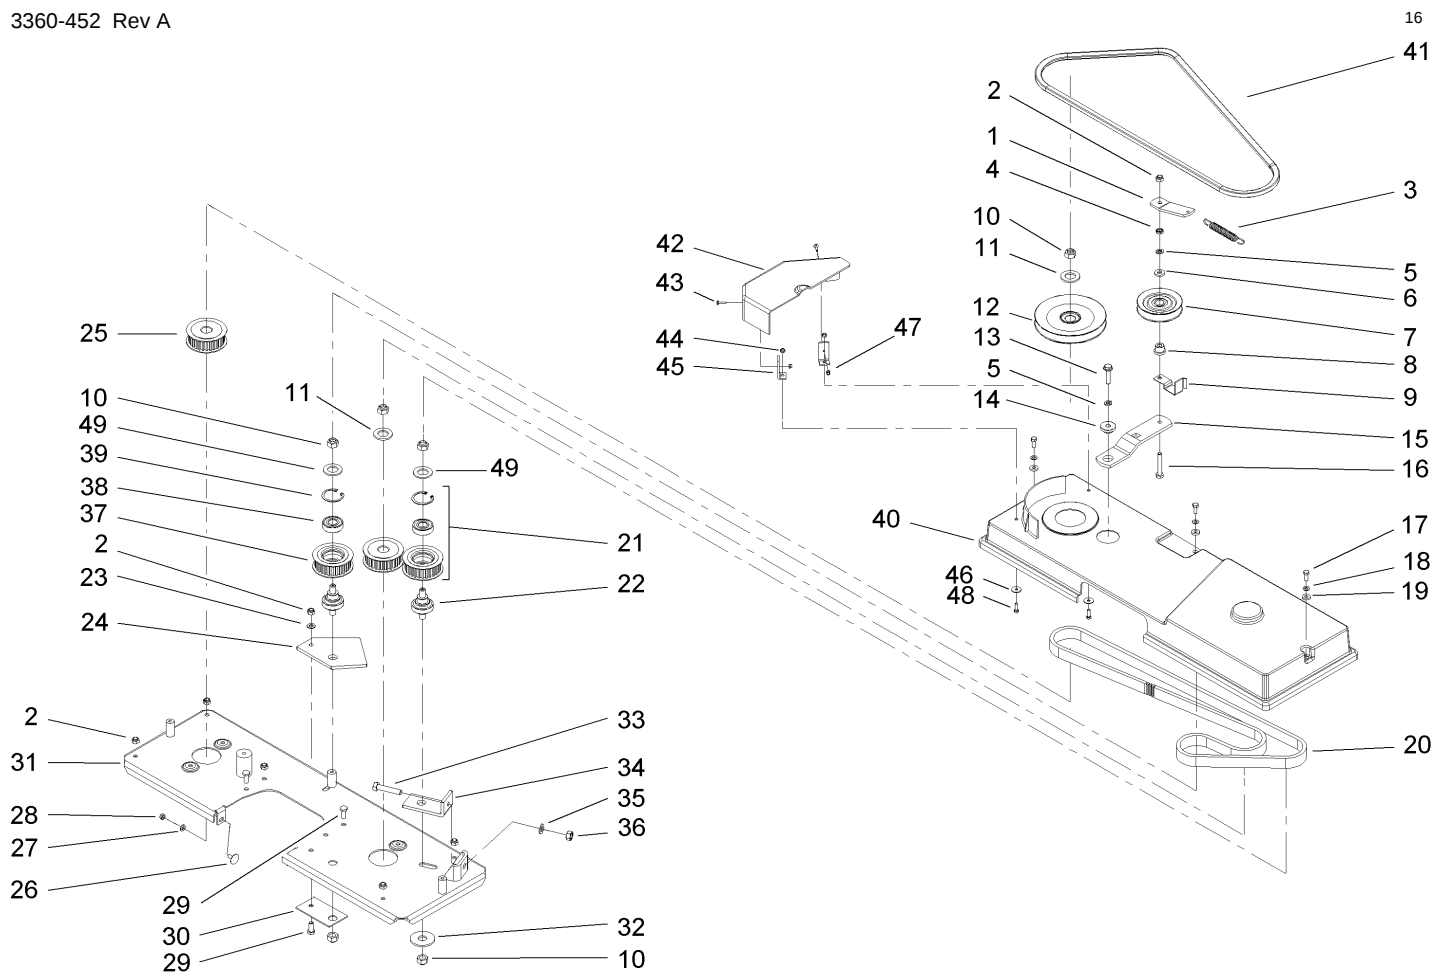

Cutting Pan and Drive System Assembly (continued)


Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat

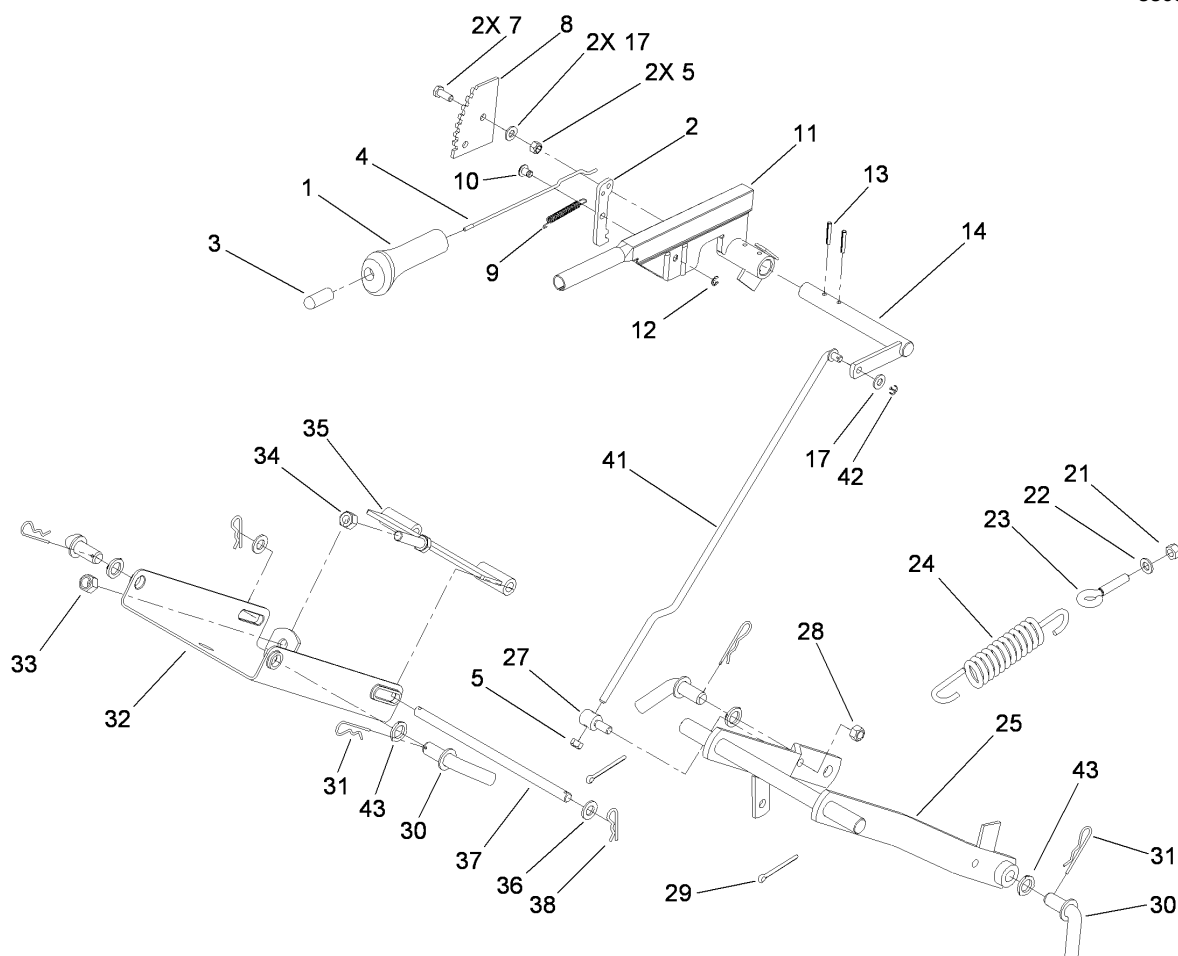

Mower Lift Assembly



Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	114-3244	1	Gear-Segment, Deck Lift
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	114-3245	1	Shaft-Deck Lift
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

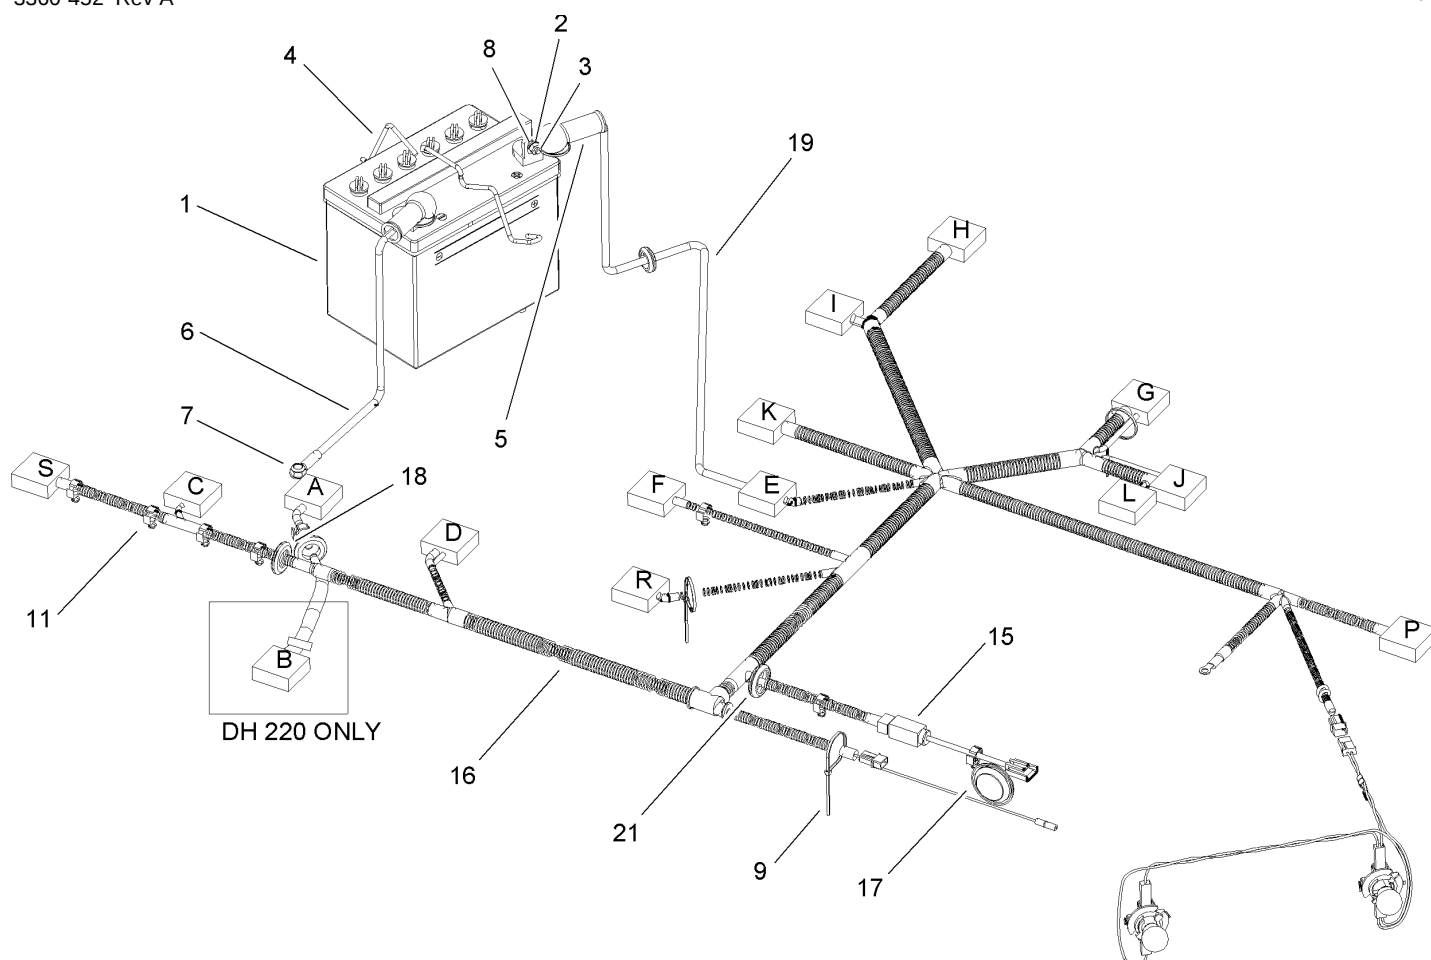


Harness Assembly

Ref	Part No.	Qty.	Description
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	114-3131	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
11	104-3157	8	Clip-Snap
15	104-3160	1	Harness-Clutch
16	108-8754	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
21	104-3168	1	Bushing

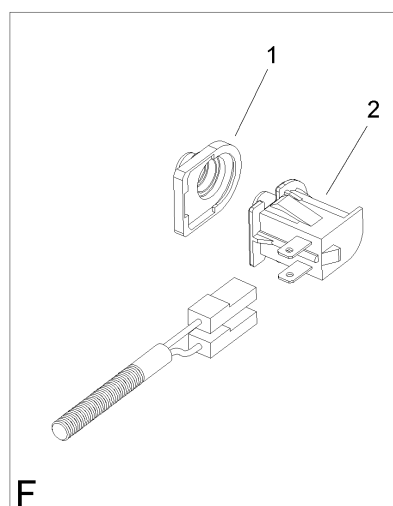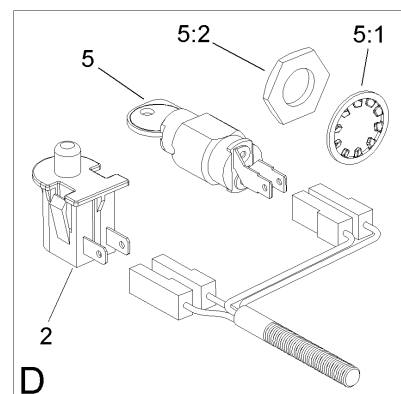


Ref	Part No.	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
4	104-3185	1	Switch-Omron
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	47-1910	1	Solenoid
13	104-3349	2	Screw

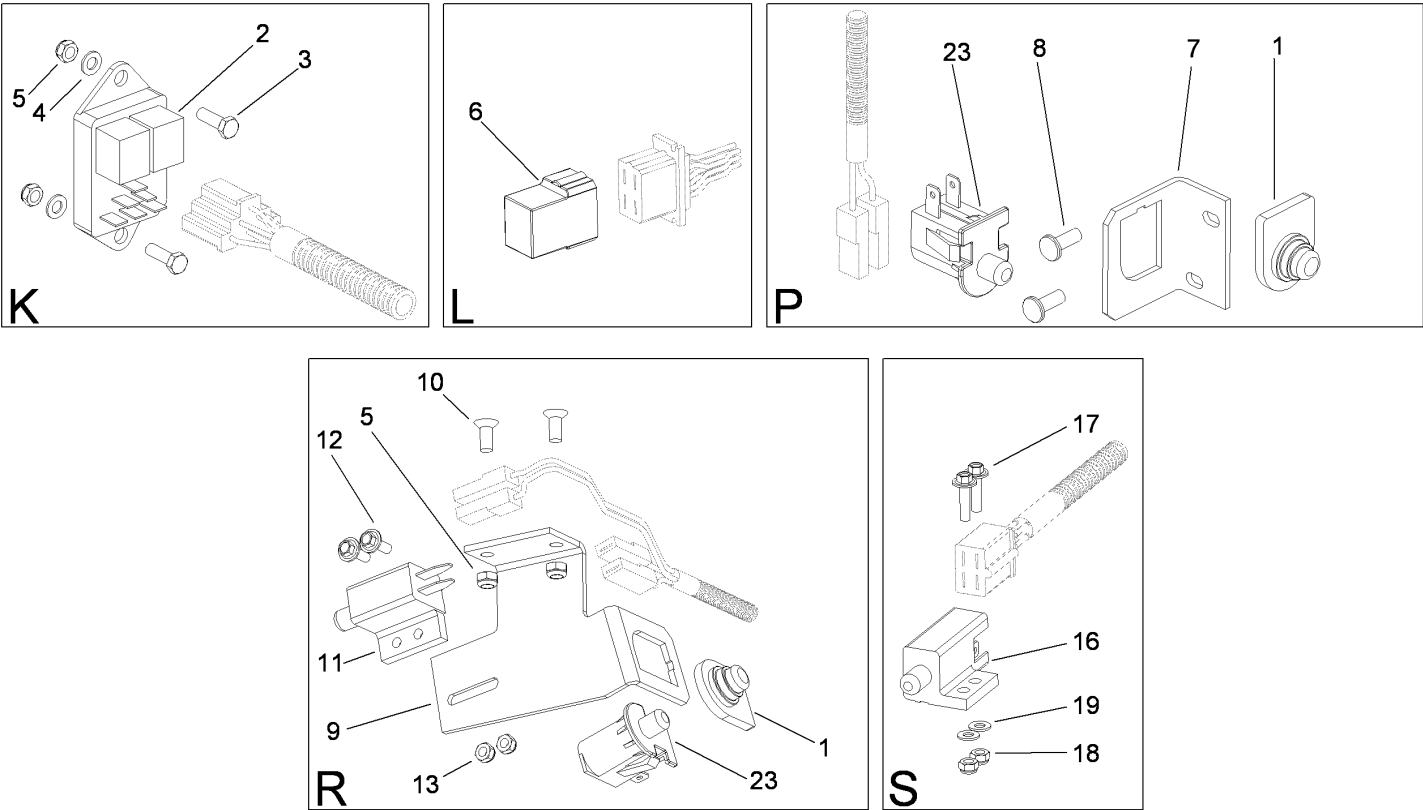

Electrical Switch No. 3 Assembly


Ref	Part No.	Qty.	Description				
1	104-3178	2	Cover-Protective				
2	99-3701	1	Module-Clutch				
3	60-6910	2	Screw				
4	52-6430	2	Washer				
5	87-5140	4	Nut-Lock				
6	104-3169	1	Circuit-Memory				
7	107-8954	1	Holder-Switch				
8	104-3190	2	Screw				
9	107-8955	1	Holder-Switch				
10	104-2980	2	Screw				
11	95-1653	1	Switch-Pole, Single				
12	104-2983	2	Screw				
13	104-2985	2	Nut-Hex				
16	104-3330	1	Switch-Delta				
17	104-3331	2	Bolt				
18	46-0430	2	Nut-Lock				
19	52-6430	2	Washer				
23	104-3180	1	Switch-Delta				

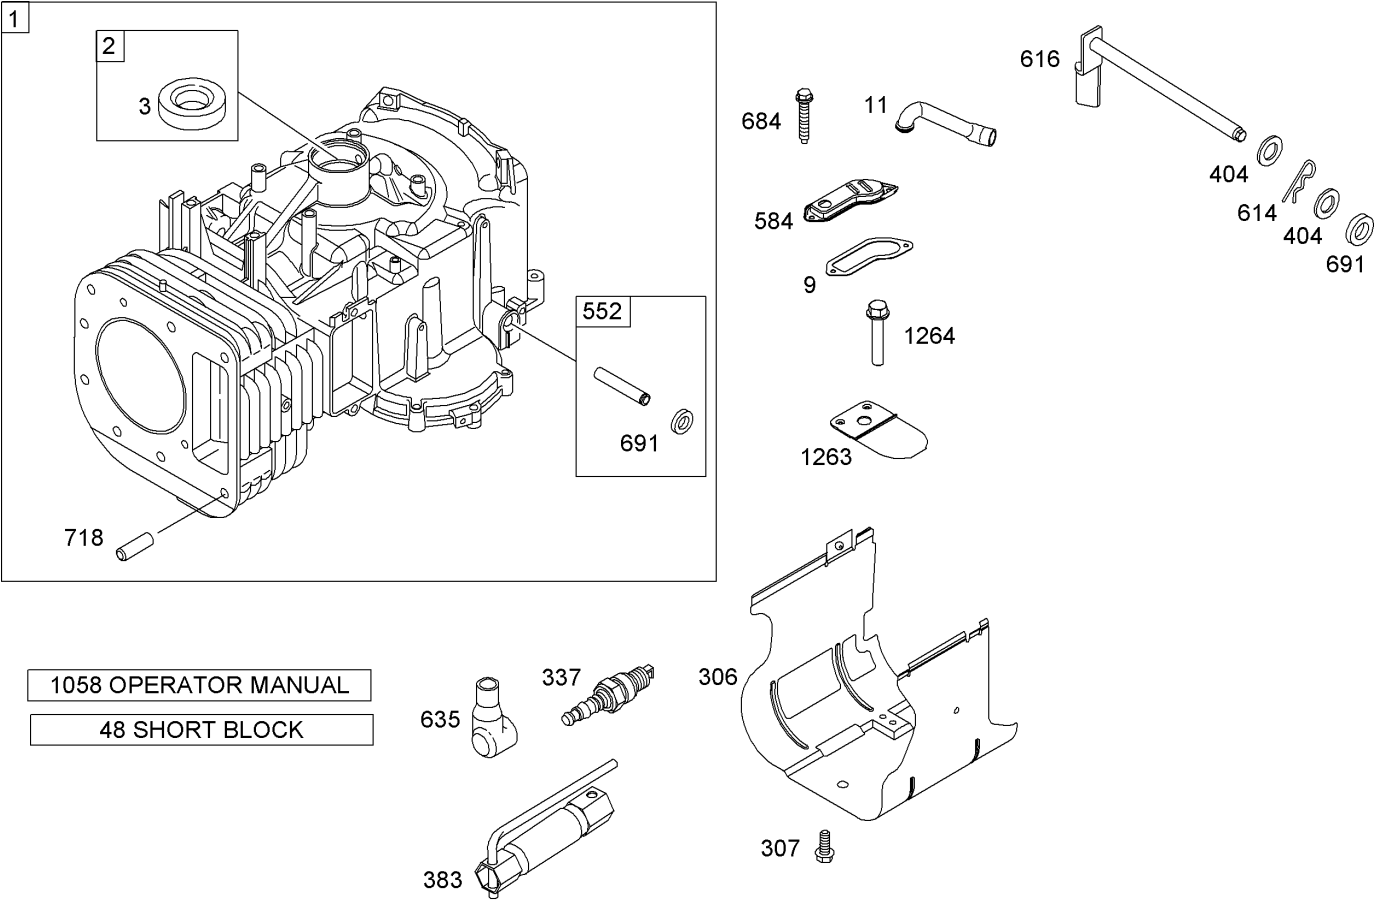

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description				
1	793987	1	Cylinder ASM				
2	399265	1	Bushing And Seal Kit				
3	391086s	1	Seal-Oil (Magneto Side)				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
48	697761	1	Short Block				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw (Cylinder Shield)				
337	691043	1	Spark Plug				
383	89838s	1	Wrench-Spark Plug				
404	691691	1	Washer (Governor Crank)				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw (Breather Passage Cover)				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1058	MS5935	1	Manual-Operator				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw (Breather Reed)				

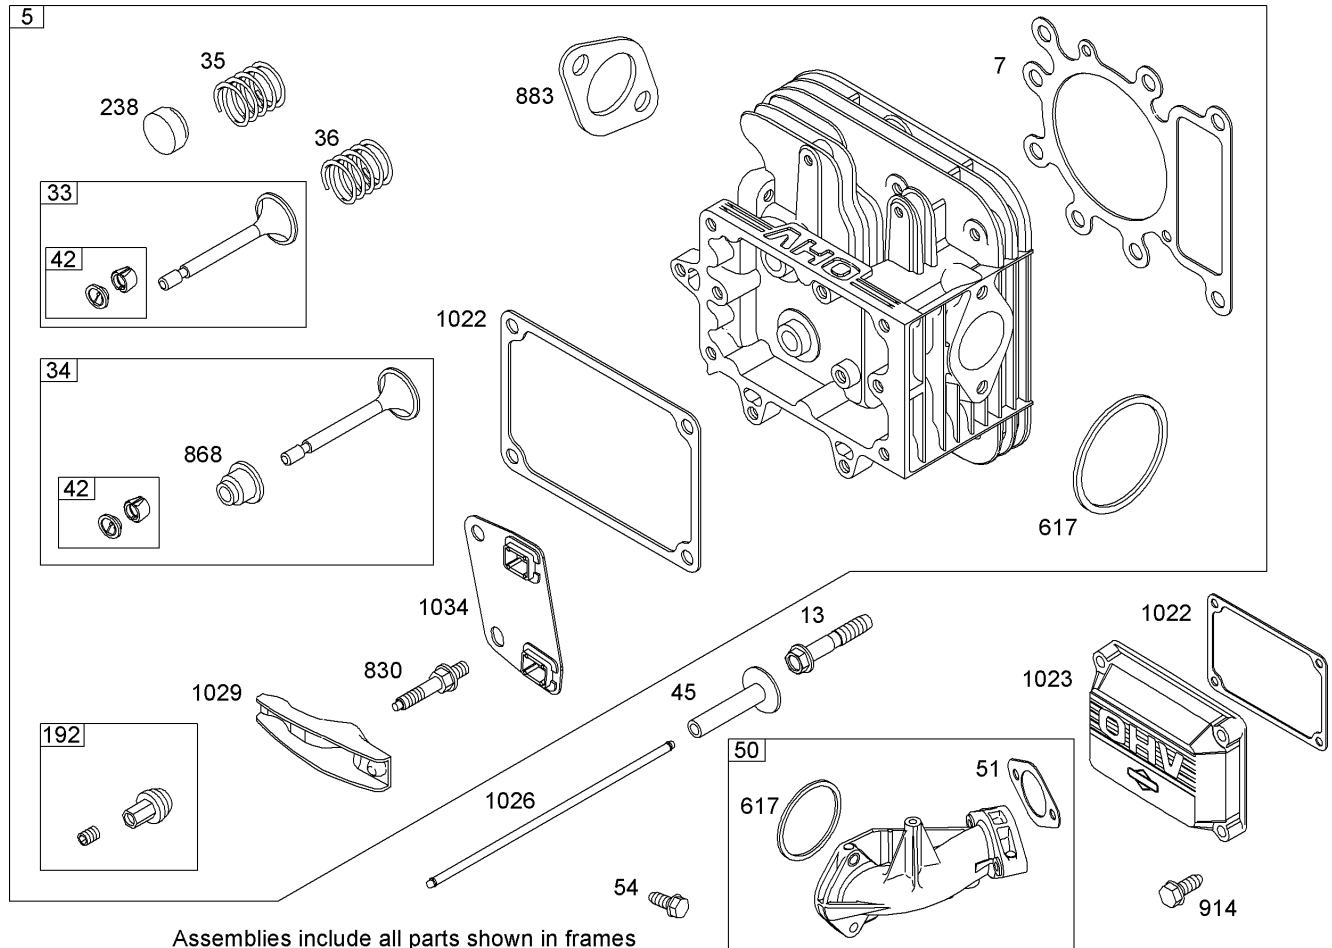


Cylinder Head Assembly

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
25	793989	1	Head-Cylinder
267	699168	1	Gasket-Head, Cylinder
213	793988	1	Screw (Cylinder Head Gasket)
233	791934	1	Valve-Exhaust
234	791935	1	Valve-Intake
235	691279	1	Spring-Valve (Intake)
236	691279	1	Spring-Valve (Exhaust)
242	499586	1	Keeper-Valve
245	690564	1	Tappet-Valve
250	690193	1	Manifold-Intake
251	692137	1	Gasket-Intake
254	691148	1	Screw (Intake Manifold)
2192	691986	1	Adjustor-Arm, Rocker
2238	691843	1	Cap-Valve
2617	692138	1	Seal-O Ring (Intake Manifold)
2830	691095	1	Stud-Arm, Rocker
2868	690968	1	Seal-Valve
2883	692236	1	Gasket-Exhaust
2914	691108	1	Screw (Rocker Cover)
21022	272475s	1	Gasket-Cover, Rocker
21023	791079	1	Cover-Rocker

Ref	Part No.	Qty.	Description
21026	692003	1	Rod-Push (Intake)
21026	692011	1	Rod-Push (Exhaust)
21029	691751	1	Arm-Rocker
21034	690822	1	Guide-Rod, Push



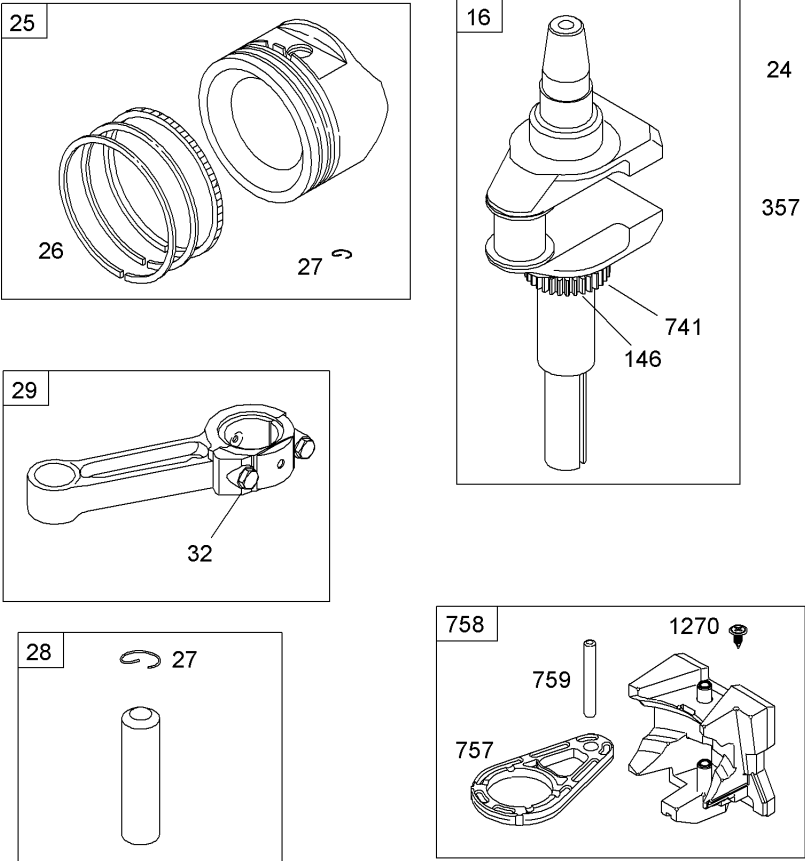


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	792507	1	Piston ASM (STD)				
25	792648	1	Piston ASM (.020 O S)				
26	792649	1	Ring Set (STD)				
26	791947	1	Ring Set (.020 O S)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (STD)				
29	791631	1	Ring Set (STD)				
32	791118	1	Screw (Connecting Rod)				
146	691639	1	Key-Timing				
357	691483	1	Key-Pulley, Drive				
741	697128	1	Gear-Timing				
757	793242	1	Link-Counterweight				
758	697134	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	793243	1	Plug-Counterweight, A V S				

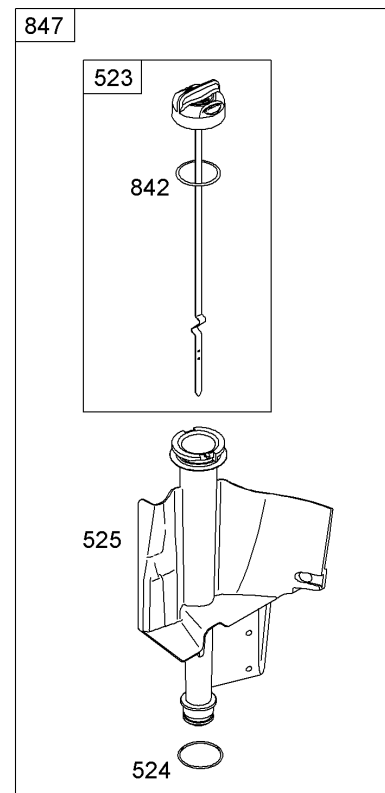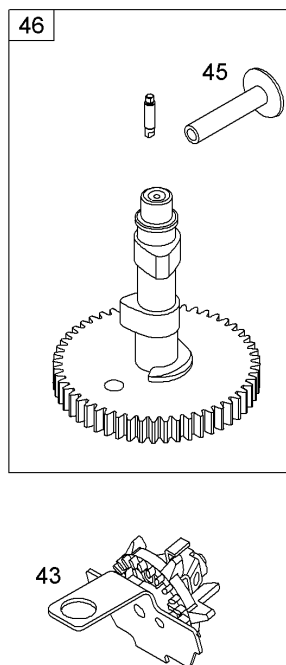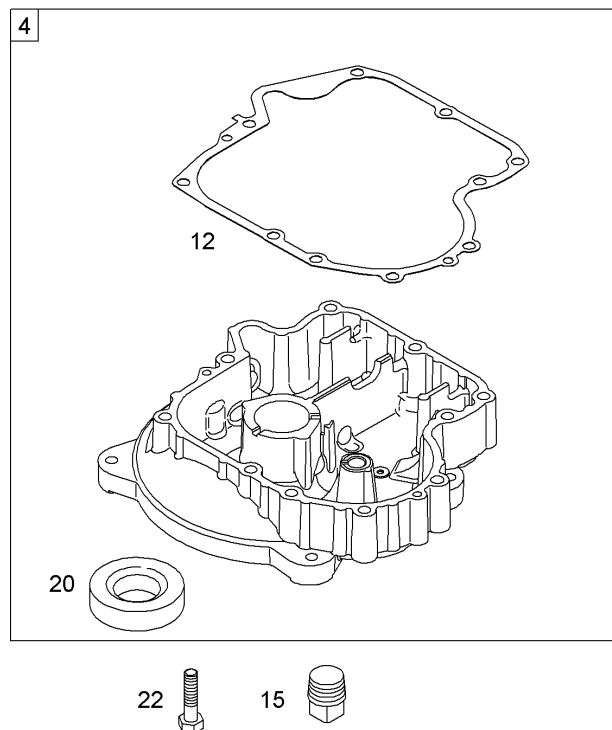


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
24	697106	1	Sump-Engine
2512	697110	1	Gasket-Crankcase
215	690946	1	Plug-Drain, Oil
2520	791892	1	Seal-Oil (P-T-O Side)
222	692125	1	Screw (Engine Sump)
243	691968	1	Slinger-Governor,Oil
245	690564	1	Tappet-Valve
246	793583	1	Camshaft
2523	699908	1	Dipstick
2524	691032	1	Seal-O Ring (Dipstick Tube)
2525	697085	1	Tube-Dipstick
25842	691031	1	Seal-O Ring (Dipstick)
2847	790443	1	Dipstick Tube ASM

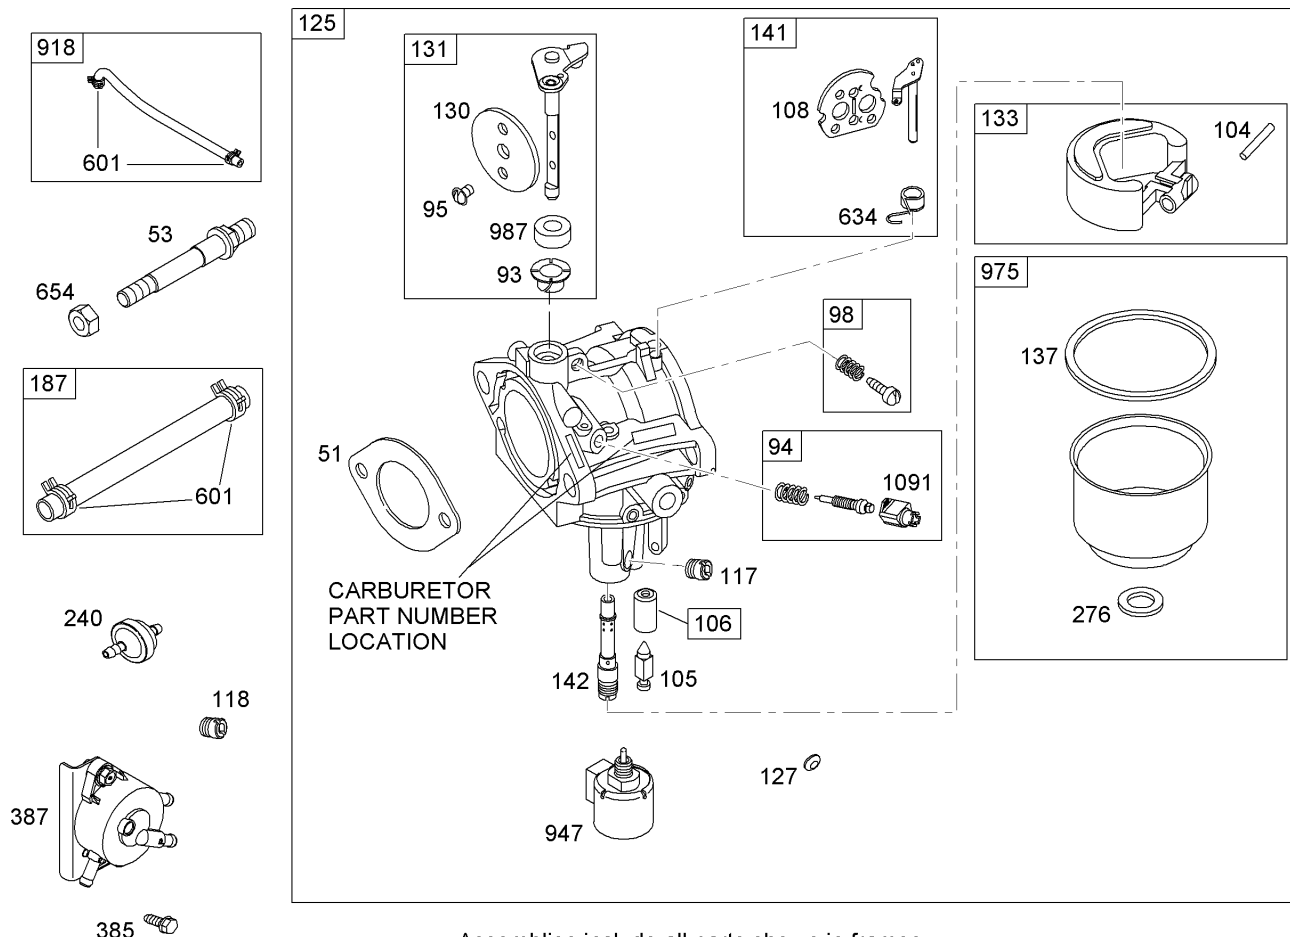


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
③④51	692137	1	Gasket-Intake
⑤⑦			
②53	690227	1	Stud (Carburetor)
②⑦93	690602	1	Bushing-Shaft, Throttle
②94	794176	1	Idle Mixture Kit
②⑦95	691636	1	Screw (Throttle Valve)
②98	495800	1	Idle Speed Kit
②⑦104	690525	1	Pin-Hinge, Carburetor Float
②⑦105	231855s	1	Valve-Float, Needle
②⑦106	691780	1	Seat-Inlet
②108	692344	1	Valve-Choke
②⑦117	694352	1	Jet-Main (STD)
②118	697228	1	Jet-Main (High Altitude)
②125	793224	1	Carburetor
②127	695005	1	Plug-Welch
②130	691750	1	Valve-Throttle
②131	494379	1	Throttle Shaft Kit
②133	494381	1	Float-Carburetor
②④137	281165s	1	Gasket-Bowl, Float
⑦			
②141	495931	1	Choke Shaft Kit
②⑦142	697140	1	Nozzle-Carburetor
②187	791805	1	Line-Fuel (Cut To Required Length)
②240	691035	1	Filter-Fuel

Ref	Part No.	Qty.	Description
②④276	692255	1	Washer-Sealing
⑦			
②385	694476	1	Screw (Fuel Pump)
②387	697090	1	Pump-Fuel (With Bracket)
②601	791850	1	Clamp-Hose
②⑦634	690802	1	Spring And Seal ASM
②654	690958	1	Nut (Carburetor)
②918	791851	1	Line-Vacuum
②947	694393	1	Solenoid-Fuel
②975	495933	1	Bowl-Float
②⑦987	691326	1	Seal-Shaft, Throttle
②1091	691333	1	Cap-Limiter

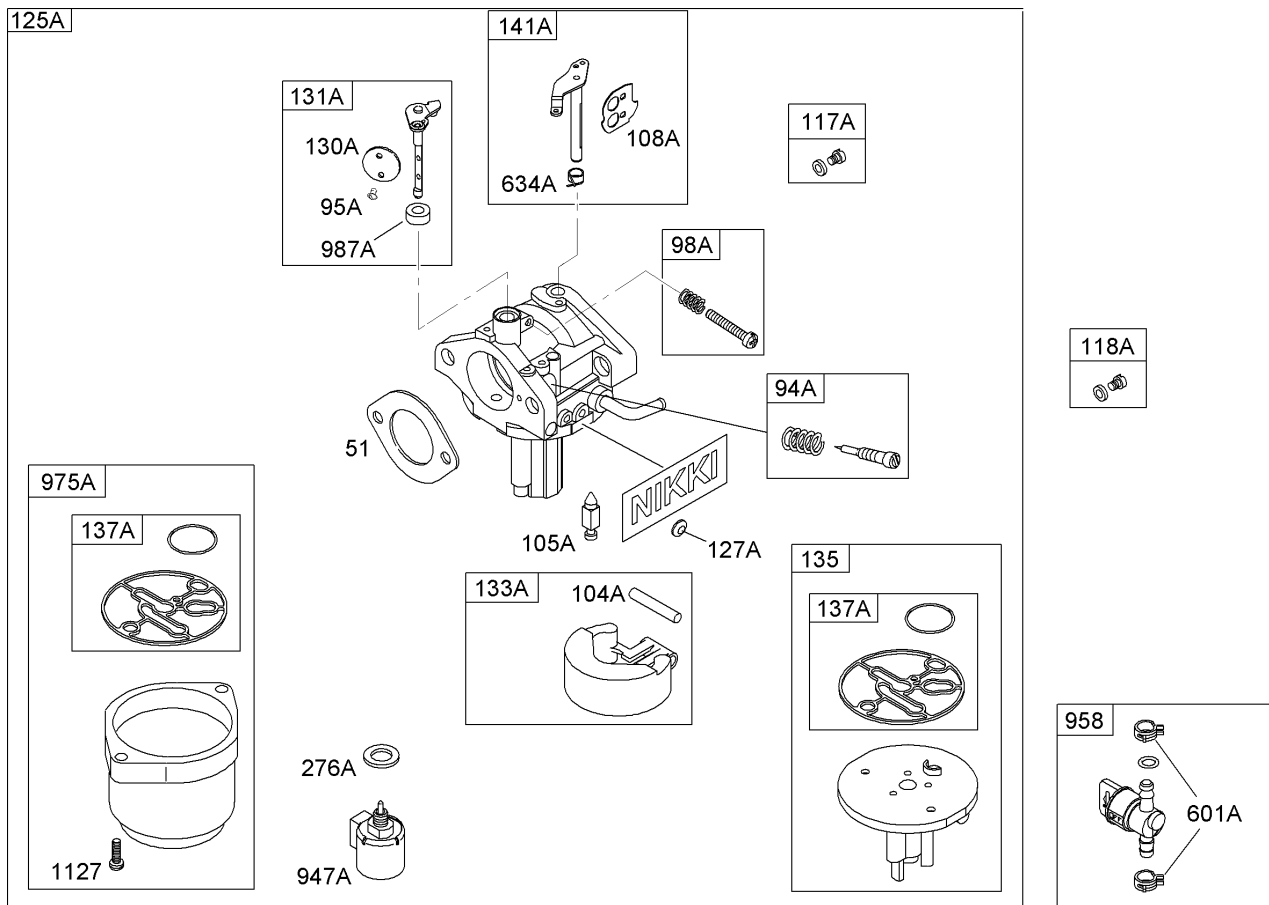


Assemblies include all parts shown in frames

Carburetor Assembly (Nikki)

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③ ④ 51	692137	1	Gasket-Intake	② 975A	699502	1	Bowl-Float
⑤ ⑦				② ⑦ 987A	698777	1	Seal-Shaft, Throttle
② 94A	695425	1	Idle Mixture Kit	② 1127	695407	1	Screw (Float Bowl)
② ⑦ 95A	690718	1	Screw (Throttle Valve)				
② 98A	695408	1	Idle Speed Kit				
② ⑦ 104A	694918	1	Pin-Hinge, Float				
② ⑦ 105A	696136	1	Valve-Float, Needle				
② 108A	695419	1	Valve-Choke				
② ⑦ 117A	699457	1	Jet-Main (STD)				
② 118A	699458	1	Jet-Main (High Altitude)				
② 125A		1	Carburetor (Nikki) (For Service See Ref 125)				
② ⑦ 127A	690727	1	Plug-Welch				
② 130A	699500	1	Valve-Throttle				
② 131A	699501	1	Throttle Shaft Kit				
② 133A	694914	1	Carburetor Float ASM				
② 135	698780	1	Gasket-Bowl, Float				
② ⑦ 137A	698781	1	Gasket-Bowl, Float				
② 141A	695420	1	Choke Shaft Kit				
② 276A	695410	1	Washer-Sealing				
② 601A	691038	1	Clamp-Hose				
② ⑦ 634A	698779	1	Spring And Seal ASM				
② 947A	699915	1	Solenoid, Fuel				
② 958	698183	1	Valve-Shut Off, Fuel				

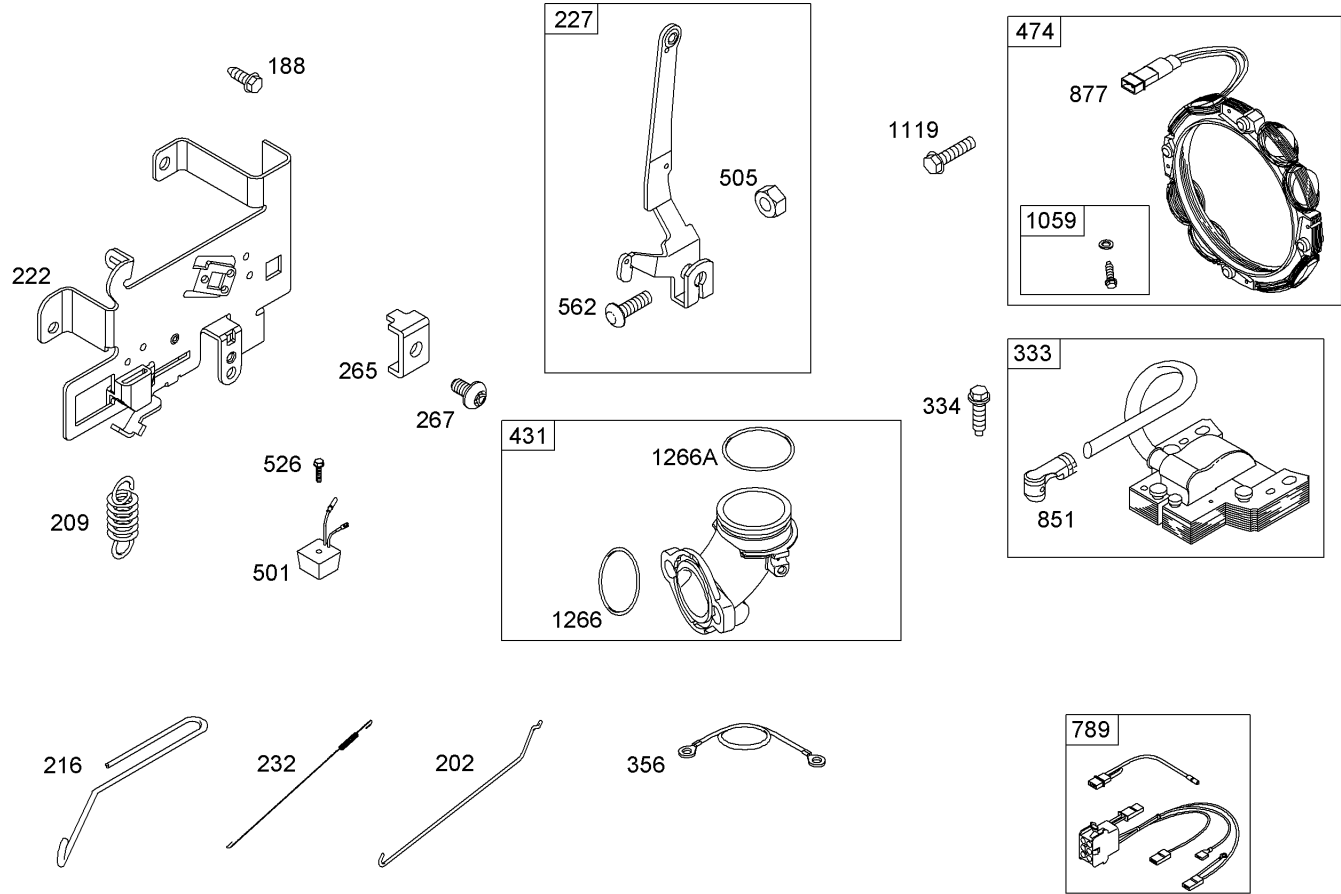


Assemblies include all parts shown in frames

Governor Assembly

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2188	691693	1	Screw (Control Bracket)	21266	691917	1	Seal-O Ring (Intake Elbow)
2202	691841	1	Link-Governor, Mechanical	21266A	697123	1	Seal-O Ring (Intake Elbow)
2209	691795	1	Spring-Governor				
2216	691840	1	Link-Choke				
2222	694042	1	Bracket-Control				
2227	691374	1	Lever-Control, Governor				
2232	691842	1	Spring-Link, Governor				
2265	691024	1	Clamp-Casing				
2267	690804	1	Screw (Casing Clamp)				
2333	492341	1	Armature-Magneto				
2334	691061	1	Screw (Magneto Armature)				
2356	697089	1	Stop-Wire				
2431	697122	1	Elbow-Intake (Magneto Armature)				
2474	696457	1	Alternator				
2501	691188	1	Regulator				
2505	691251	1	Nut (Governor Control Lever)				
2526	697088	1	Screw (Regulator)				
2562	691119	1	Bolt (Governor Control Lever)				
2789	698329	1	Harness-Wiring				
2851	493880s	1	Terminal-Spark Plug				
2877	393537	1	Connector-Wire, Tri Circuit				
21059	698516	1	Screw And Washer Kit				
21119	691183	1	Screw (Alternator)				

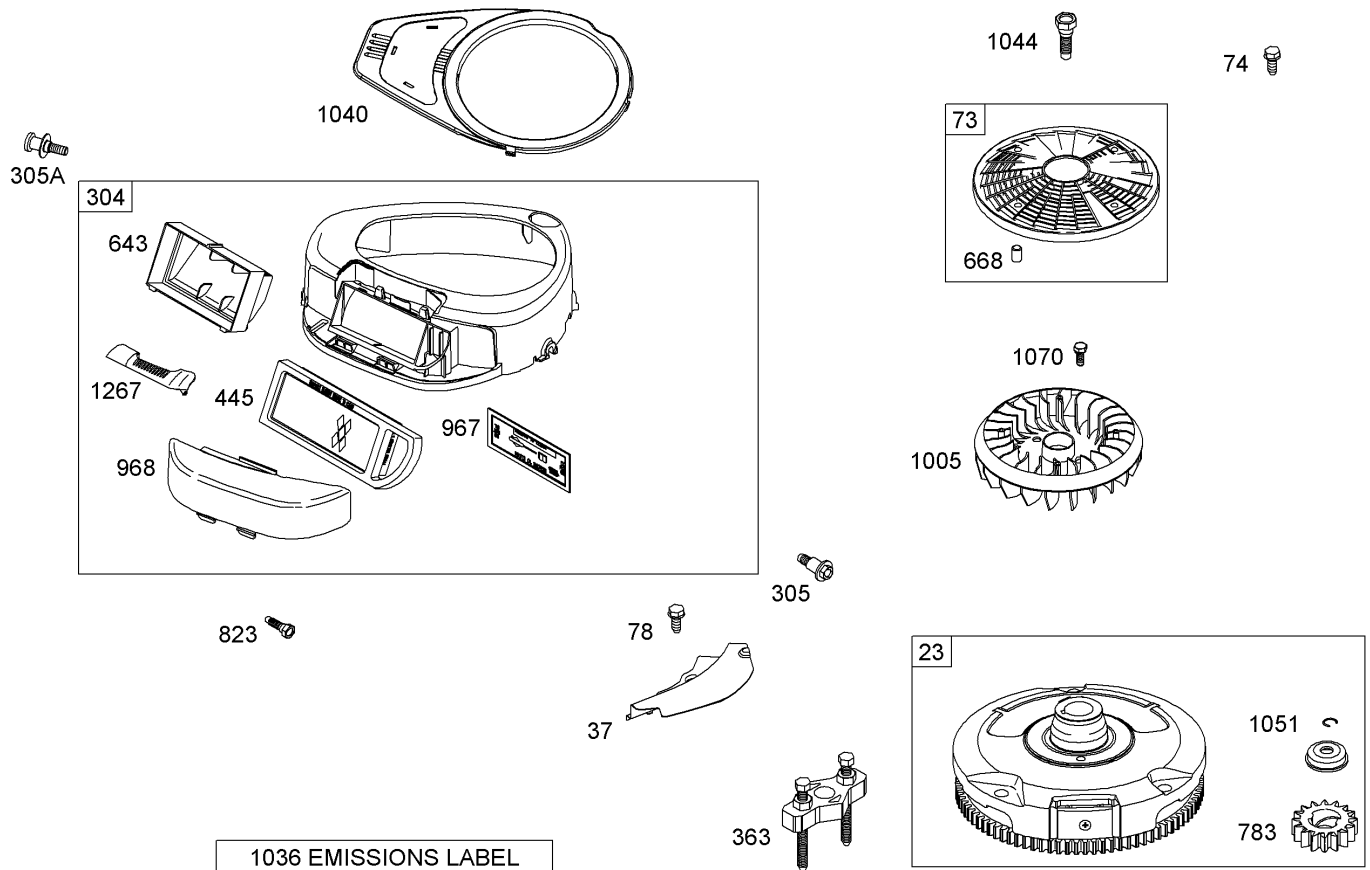


Assemblies include all parts shown in frames

Blower Housing Assembly

Briggs and Stratton Model 31A607-0117-E1



Ref	Part No.	Qty.	Description
223	790835	1	Flywheel
237	697352	1	Guard-Flywheel
273	697133	1	Screen-Rotating
274	697897	1	Screw (Rotating Screen)
278	691003	1	Screw (Flywheel Guard)
2304	698402	1	Housing-Blower
2305	697102	1	Screw (Blower Housing)
2305A	793376	1	Screw (Blower Housing)
2363	19203	1	Puller-Flywheel
2445	698083	1	Filter-Cartridge, Air Cleaner
2643	698401	1	Retainer-Filter, Air
2668	691500	1	Spacer
2783	693713	1	Gear-Pinion
2823	698941	1	Screw (Muffler Adapter)
2967	697015	1	Filter-Cleaner, Pre
2968	698403	1	Cover-Cleaner, Air
21005	699043	1	Fan-Flywheel
21036		1	Label-Emissions (Available From A Briggs And Stratton Authorized Service Dealer)
21040	698368	1	Plate-Trim
21044	698139	1	Screw (Crankshaft Extension)
21051	691265	1	Ring-Retaining
21070	690372	1	Screw (Flywheel Fan)

Ref	Part No.	Qty.	Description
21267	697419	1	Latch-Housing, Blower

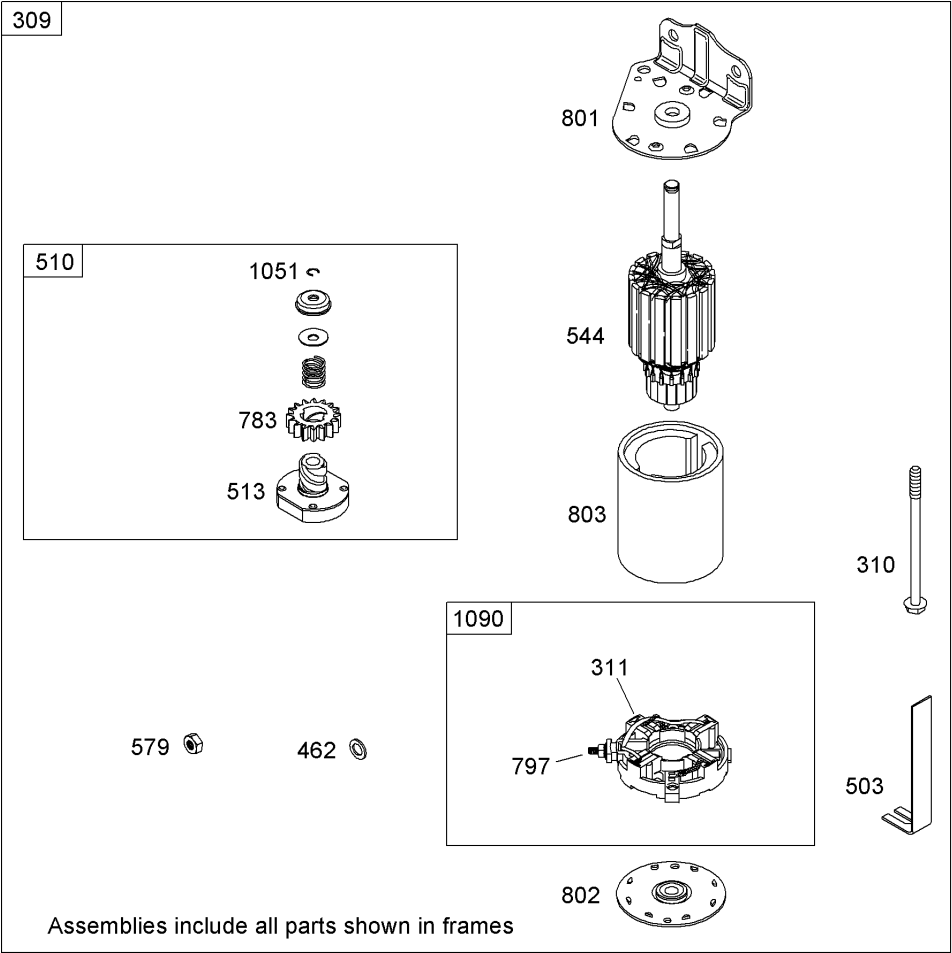

Starter Assembly
Briggs and Stratton Model 31A607-0117-E1



Ref	Part No.	Qty.	Description				
2309	693551	1	Motor-Starter				
2310	690323	1	Bolt (Starter Motor)				
2311	497608	1	Brush Set				
2462	691261	1	Washer (Brush Retainer)				
2503	691532	1	Strap-Starter				
2510	693699	1	Drive-Starter				
2513	692024	1	Clutch-Drive				
2544		1	Armature-Starter (For Service Order 693551)				
2579	691029	1	Nut (Brush Retainer)				
2697	690372	1	Screw (Drive Cap)				
2729	691224	1	Clip-Wire				
2783	693713	1	Gear-Pinion				
2797	693167	1	Nut (Brush Retainer)				
2801	691283	1	Cap-Drive				
2802	691286	1	Cap-End				
2803		1	Housing-Starter (For Service Order 693551)				
21051	691265	1	Ring-Retaining				
21090	691293	1	Retainer-Brush				

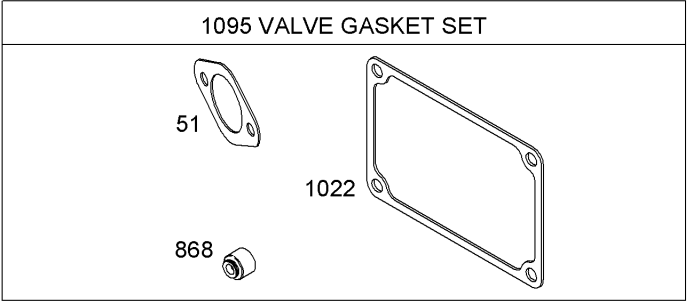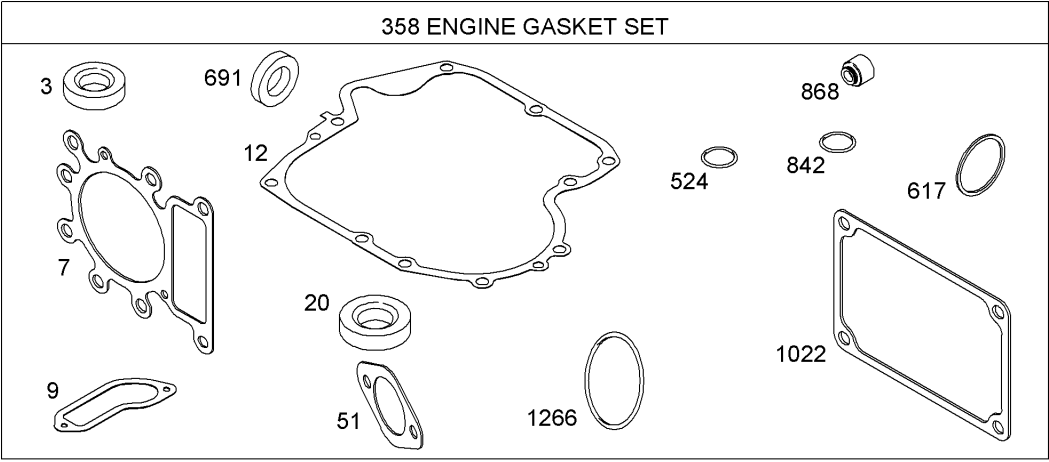

Assemblies include all parts shown in frames

Gasket Set
Briggs and Stratton Model 31A607-0117-E1


Ref	Part No.	Qty.	Description				
233	391086s	1	Seal-Oil (Magneto Side)				
237	699168	1	Gasket-Head, Cylinder				
239	697109	1	Gasket-Breather				
2312	697110	1	Gasket-Crankcase				
2320	791892	1	Seal-Oil (P T O Side)				
3451	692137	1	Gasket-Intake				
37							
2358	794150	1	Engine Gasket Set				
23524	691032	1	Seal (Dipstick Tube)				
23617	692138	1	Seal-O Ring (Intake Manifold)				
7							
23691	692407	1	Seal-Shaft, Governor				
23842	691031	1	Seal-O Ring (Dipstick Tube)				
23868	690968	1	Seal-Valve				
5							
231022	272475s	1	Gasket-Cover, Rocker				
5							
21095	691581	1	Valve Gasket Set				
231266	691917	1	Seal-O Ring (Intake Elbow)				
7							

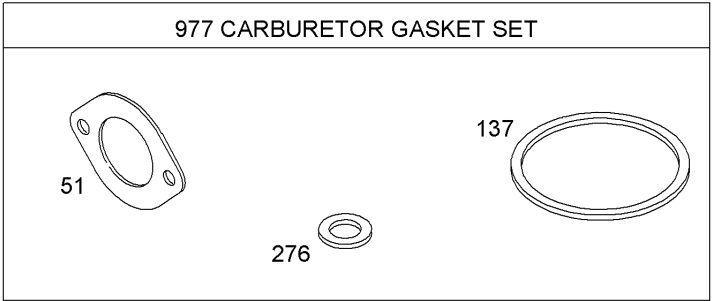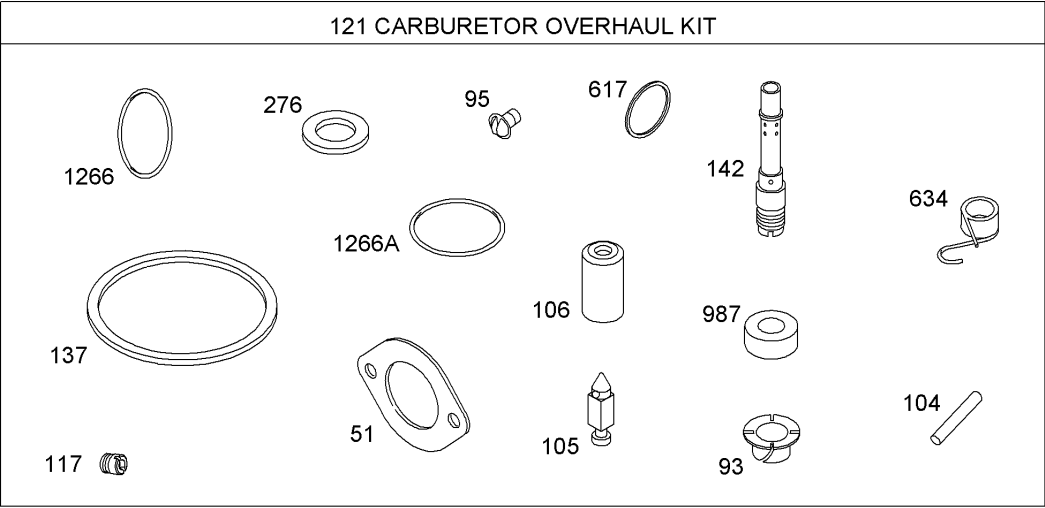

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description				
3451	692137	1	Gasket-Intake				
57							
2793	690602	1	Bushing-Shaft, Throttle				
2795	691636	1	Screw (Throttle Valve)				
2104	690525	1	Pin-Hinge, Carburetor Float				
27105	231855s	1	Valve-Float, Needle				
27106	690577	1	Seat-Inlet				
27117	694352	1	Jet-Main (STD)				
2121	697241	1	Carburetor Overhaul Kit				
24137	281165s	1	Gasket-Bowl, Float				
7							
27142	697140	1	Nozzle-Carburetor				
24276	692255	1	Washer-Sealing				
7							
23617	692138	1	Seal-O Ring (Intake Manifold)				
7							
27634	690802	1	Spring And Seal ASM				
2977	690192	1	Carburetor Gasket Set				
27987	691326	1	Seal-Shaft, Throttle				
231266	691917	1	Seal-O Ring (Intake Elbow)				
7							
271266A	697123	1	Seal-O Ring (Intake Elbow)				

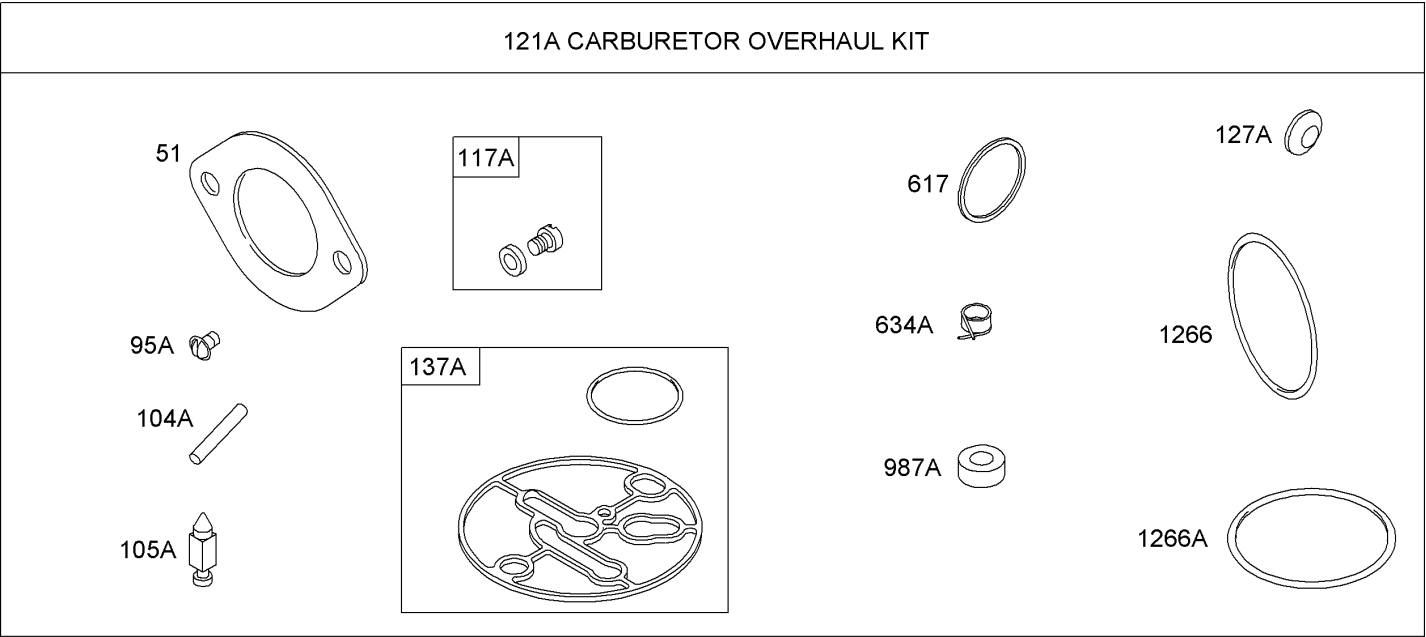

Assemblies include all parts shown in frames

Carburetor Overhaul Kit (Nikki)
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description				
3451 56	692137	1	Gasket-Intake				
2695A 7	690718	1	Screw (Throttle Valve)				
26104A 7	694914	1	Carburetor Float ASM				
26105A 7	696136	1	Valve-Float, Needle				
26117A 7	699457	1	Jet-Main (STD)				
26121A	699521	1	Carburetor Overhaul Kit				
26127A 7	690727	1	Plug-Welch				
24137A 67	698781	1	Gasket-Bowl, Float				
23617 67	692138	1	Seal-O Ring (Intake Manifold)				
26634A 7	698779	1	Spring And Seal ASM				
26987A 7	698777	1	Seal-Shaft, Throttle				
231266 67	691917	1	Seal-O Ring (Intake Elbow)				
261266A 7	697123	1	Seal-O Ring (Intake Elbow)				

Attachments and Accessories

For 74573 - DH 200 Lawn Tractor

Product Name	Model/Part
Rear Discharge Kit	79471

NOTES

NOTES

NOTES

