




MODEL NO. 71140-390001 & UP
MODEL NO. 71200-390001 & UP

PARTS
CATALOG

1032 LAWN TRACTOR
1232E LAWN TRACTOR

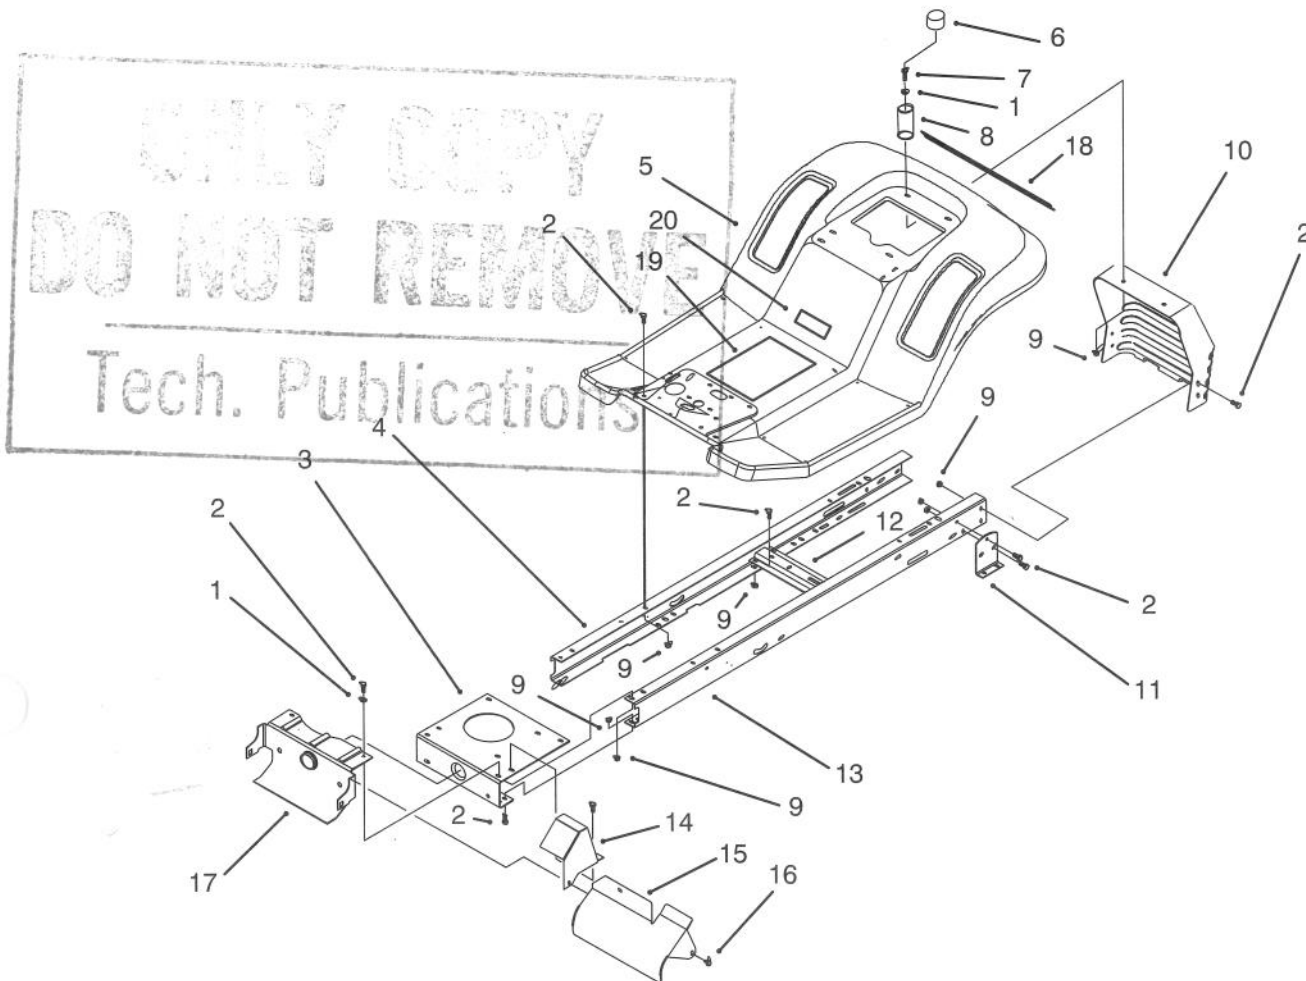

C-1307

FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	22
10	88-3940	Panel - Rear Hitch	1
11	88-5260	Bracket - Transaxle Mtg.	2
12	88-4620	Bracket - Idler Pivot	1

Ref. No.	Part No.	Description	No. Used
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	92-2488	Decal - Rear Body (Model No. 71140 Only)	1
*	92-2489	Decal - Rear Body (Model No. 71200 Only)	1
19	92-2484	Decal - Instruction	1
20	117242	Decal - Made in USA (Model No. 71140 Only)	1

*Not Illustrated

© The TORO Company -1992 Rev. 1993
All Rights Reserved

TPS

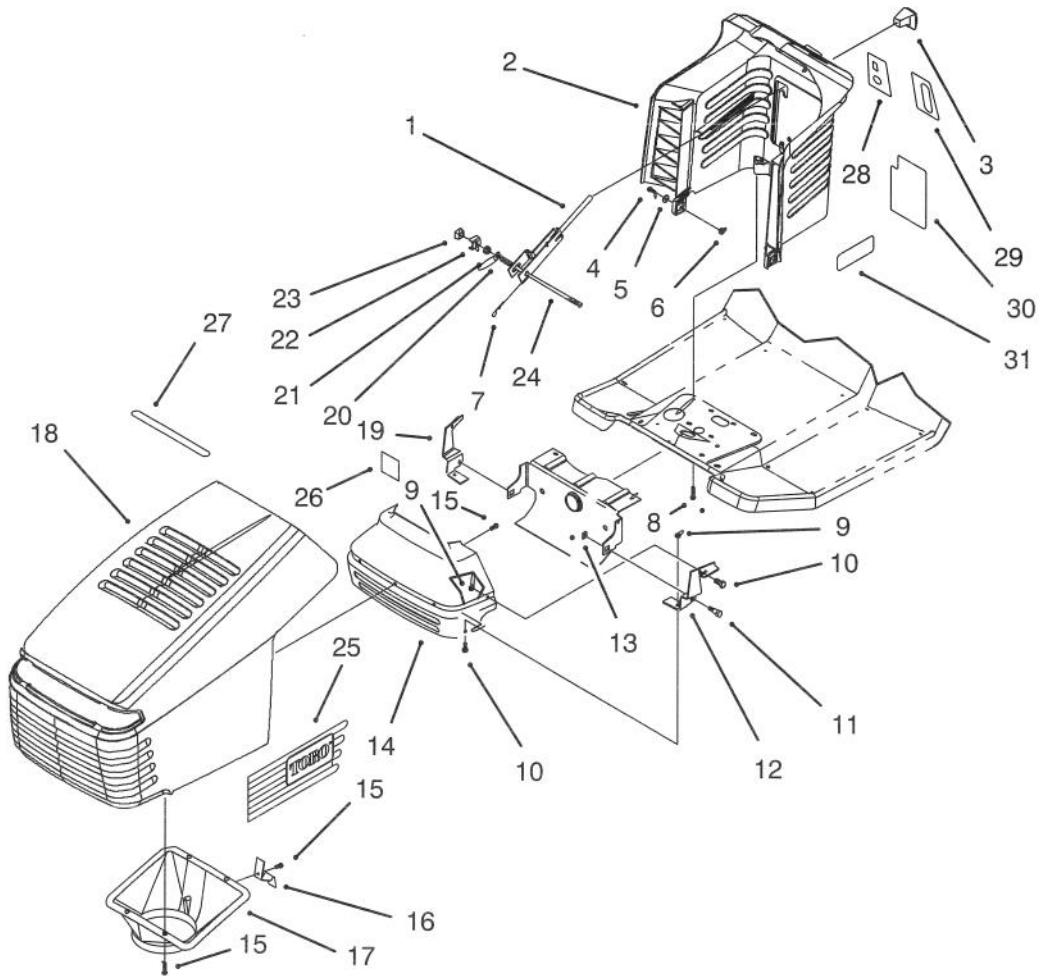


C-1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	88-3910	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8092	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-4	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1
17	88-4050	Duct - Hood Air	1
18	88-3900	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2
22	88-4160	Clamp - Pivot Rod	2

Ref. No.	Part No.	Description	No. Used
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2468	Decal - Hood L.H.	1
*	92-2467	Decal - Hood R.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-2478	Decal - Ignition (Model No. 71140)	1
*	92-5732	Decal - Ignition (Model No. 71200)	1
29	92-2461	Decal - Throttle (Model No. 71140)	1
*	92-5730	Decal - Throttle (Model No. 71200)	1
30	92-2462	Decal - Deck Engage (Model No. 71140)	1
*	92-5733	Decal - Deck Engage (Model No. 71200)	1
31	92-2473	Decal - Tower 1032XL (Model No. 71140 Only)	2
*	92-2480	Decal - Tower 1232XL (Model No. 71200 Only)	2

*Not Illustrated

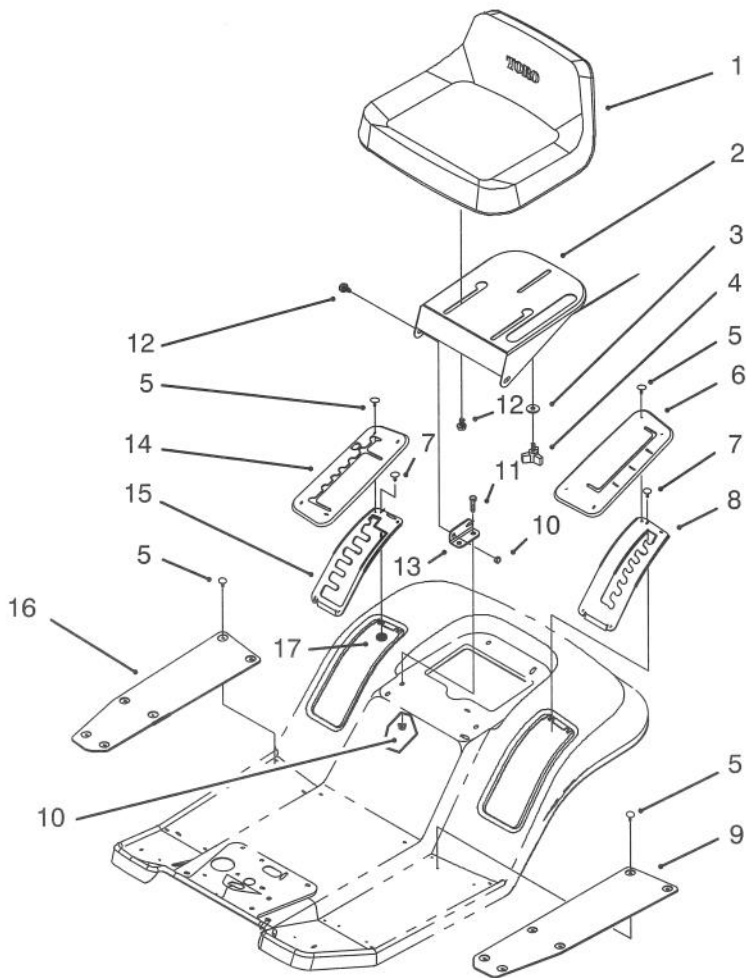


C-1303

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-4330	Seat (Model No. 71140 Only)	1	8	88-5030	Gate - H.O.C.	1
*	88-3950	Seat (Model No. 71200 Only)	1	9	88-5240	Mat - L.H. Foot	1
2	88-4910	Support - Seat	1	10	3296-29	Nut - Lock	6
3	5-4460	Washer - Fender	1	11	322-3	Screw - Hex Hd. Cap	4
4	700806	Knob - Studded	1	12	37-8770	Bolt - Shoulder	4
5	3290-479	Fastener - Panel	20	13	88-4820	Bracket - Seat Hinge	2
6	88-5170	Cover - H.O.C.	1	14	88-5160	Cover - Shift Gate	1
7	3269-5	Rivet - Pop	4	15	88-5020	Gate - Shift	1
				16	88-5220	Mat - R.H. Foot	1
				17	3269-6	Washer - Backup	4

*Not Illustrated

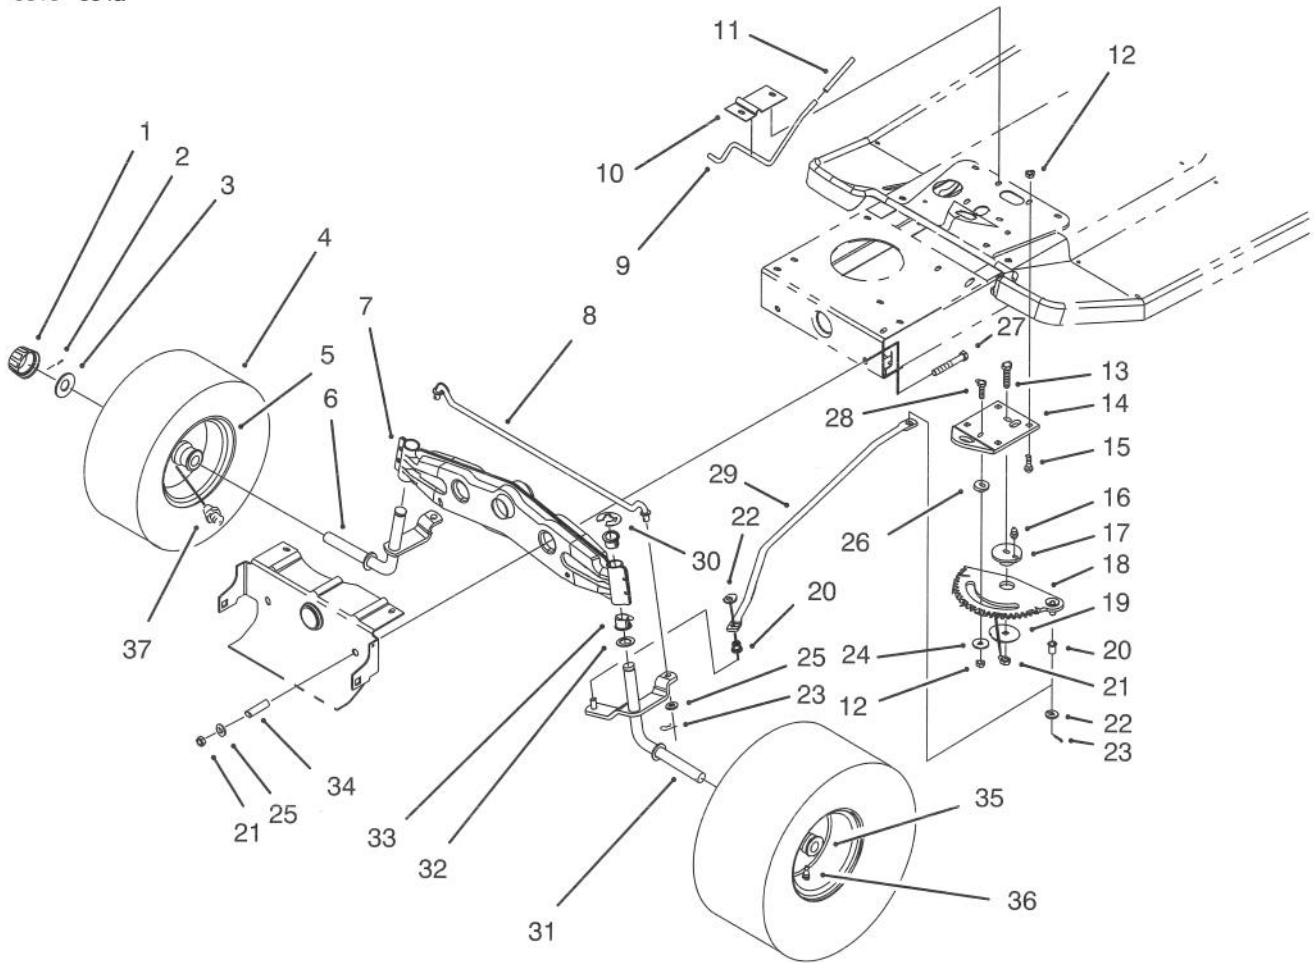


C-1302

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4060	Tire - 13"	2
5	88-4360	Rim - Front Wheel	2
6	88-4530	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Screw - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Screw - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	88-4930	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-40	Tube - Inner (Optional)	2
*	88-4270	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2


*Not Illustrated

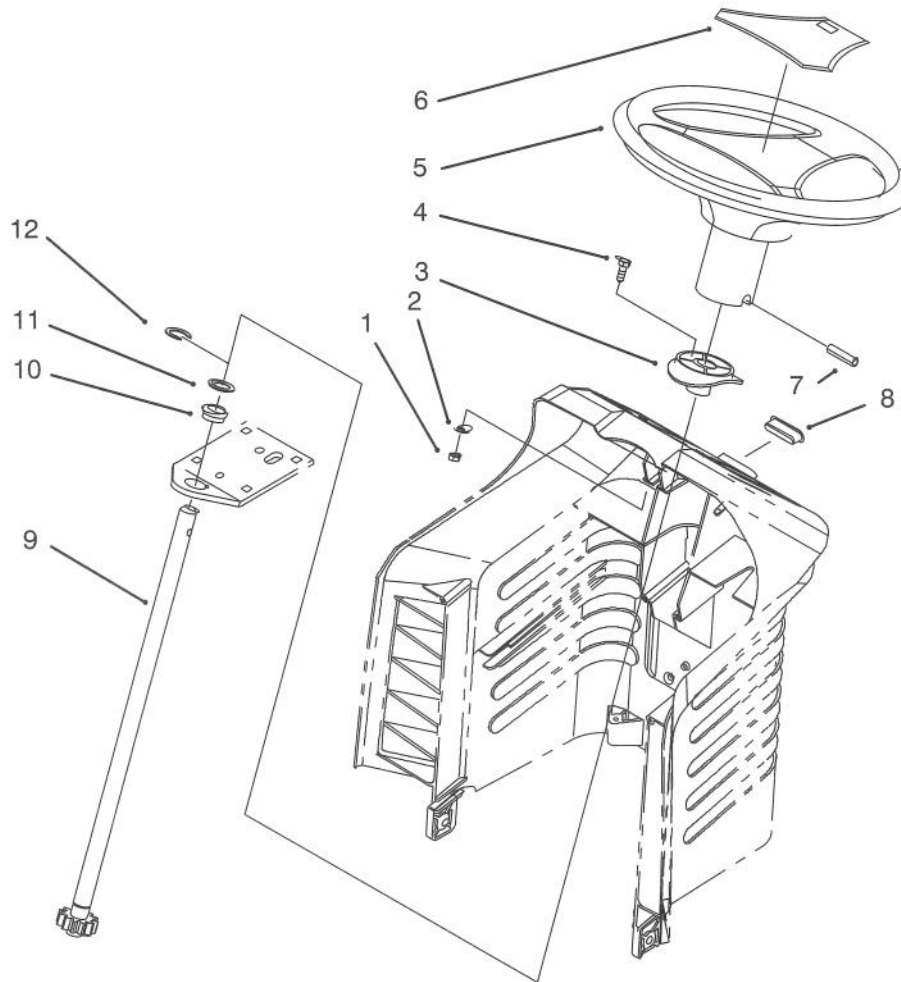

C-1341

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Lock	2	7	32121-78	Pin - Roll	1
2	3256-22	Washer - Flat	2	8	88-4150	Plug	1
3	88-4190	Bushing - Sliding	1	9	88-6380	Shaft - Steering	1
4	321-4	Screw - Hex Hd. Cap	2	10	88-5150	Bushing - Flange	1
5	88-3850	Wheel - Steering (Incl. Ref. #6)	1	11	3-6498	Washer - Thrust	1
6	88-3870	Cover - Steering Wheel	1	12	32151-48	E-Ring	1

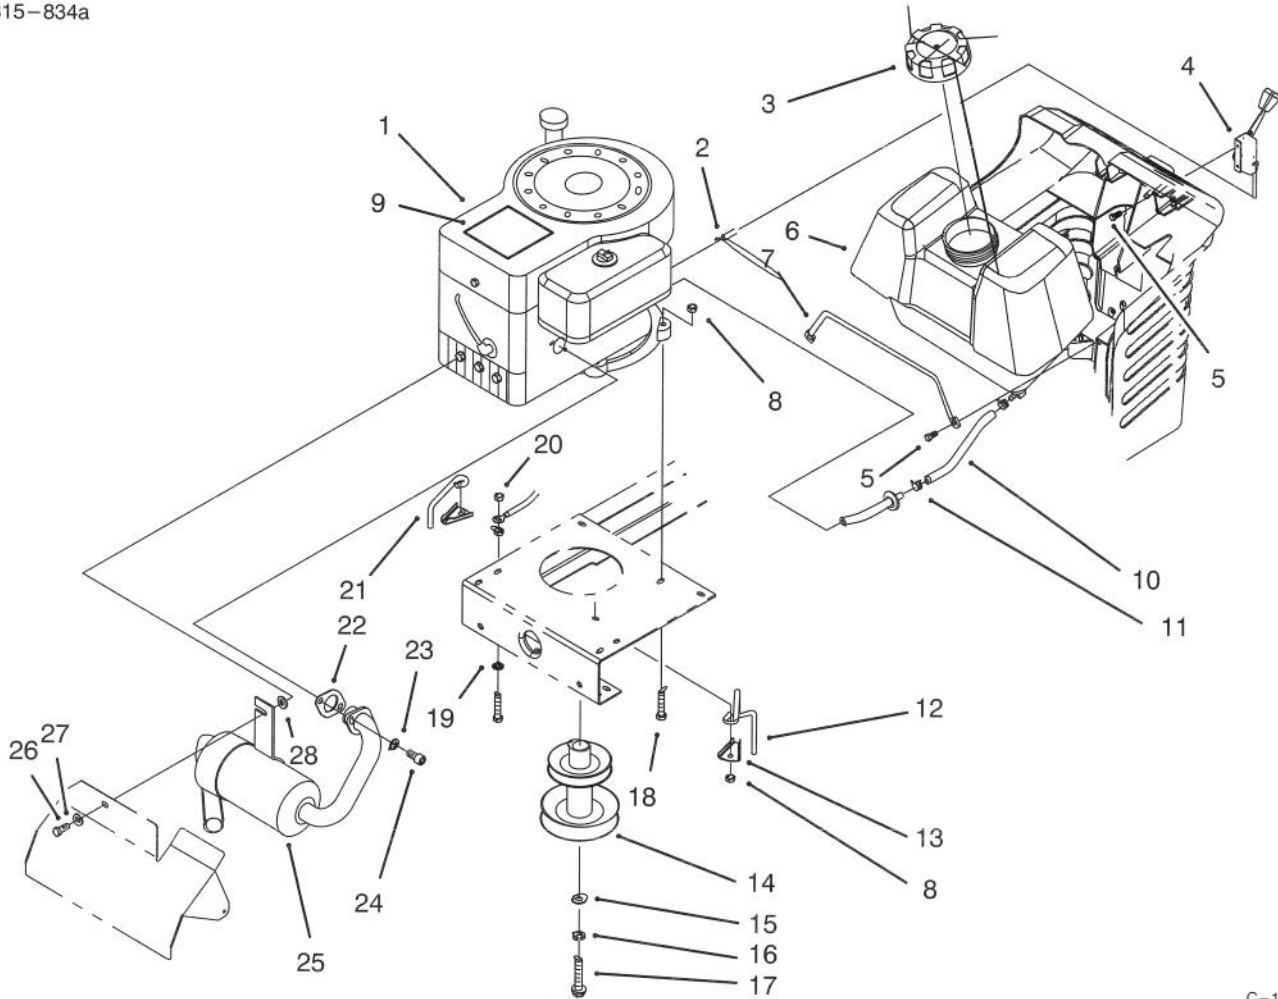


C-1311

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine - 10 H.P. (Model No. 71140 Only)	1
*		Engine - 12 H.P. (Model No. 71200 Only)	1
2	88-4350	Cable - Throttle	1
3	88-3980	Cap - Gas	1
4	88-4340	Control - Throttle	1
5	27-0220	Screw - Plastite	4
6	88-3880	Tank - Gas	1
7	88-5920	Rod - Gas Tank	1
8	3296-29	Nut - Lock	3
9	92-2482	Decal - Engine 12 H.P. (Model No. 71200 Only)	1
10	47-2963	Line - Fuel	1
11	2412-98	Clamp - Hose	2
12	88-6060	Guide - Belt L.H.	1
13	76-3820	Anchor - Belt Guide	2

Ref. No.	Part No.	Description	No. Used
14	88-5050	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	3253-22	Washer - Lock	1
17	26-0671	Bolt - Blade	1
18	322-9	Screw - Hex Hd. Cap	4
19	3255-8	Washer - Ext. Tooth Lock	1
20	32149-1	Nut - Keps	2
21	88-5490	Guide - Belt R.H.	1
22	88-4410	Gasket - Muffler	1
23	3253-4	Washer - Lock	2
24	3274-12	Screw - Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw - Hex Hd. Cap	1
27	3253-3	Washer - Lock	1
28	26-4840	Spacer (Model No. 71140 Only)	1

*Not Illustrated

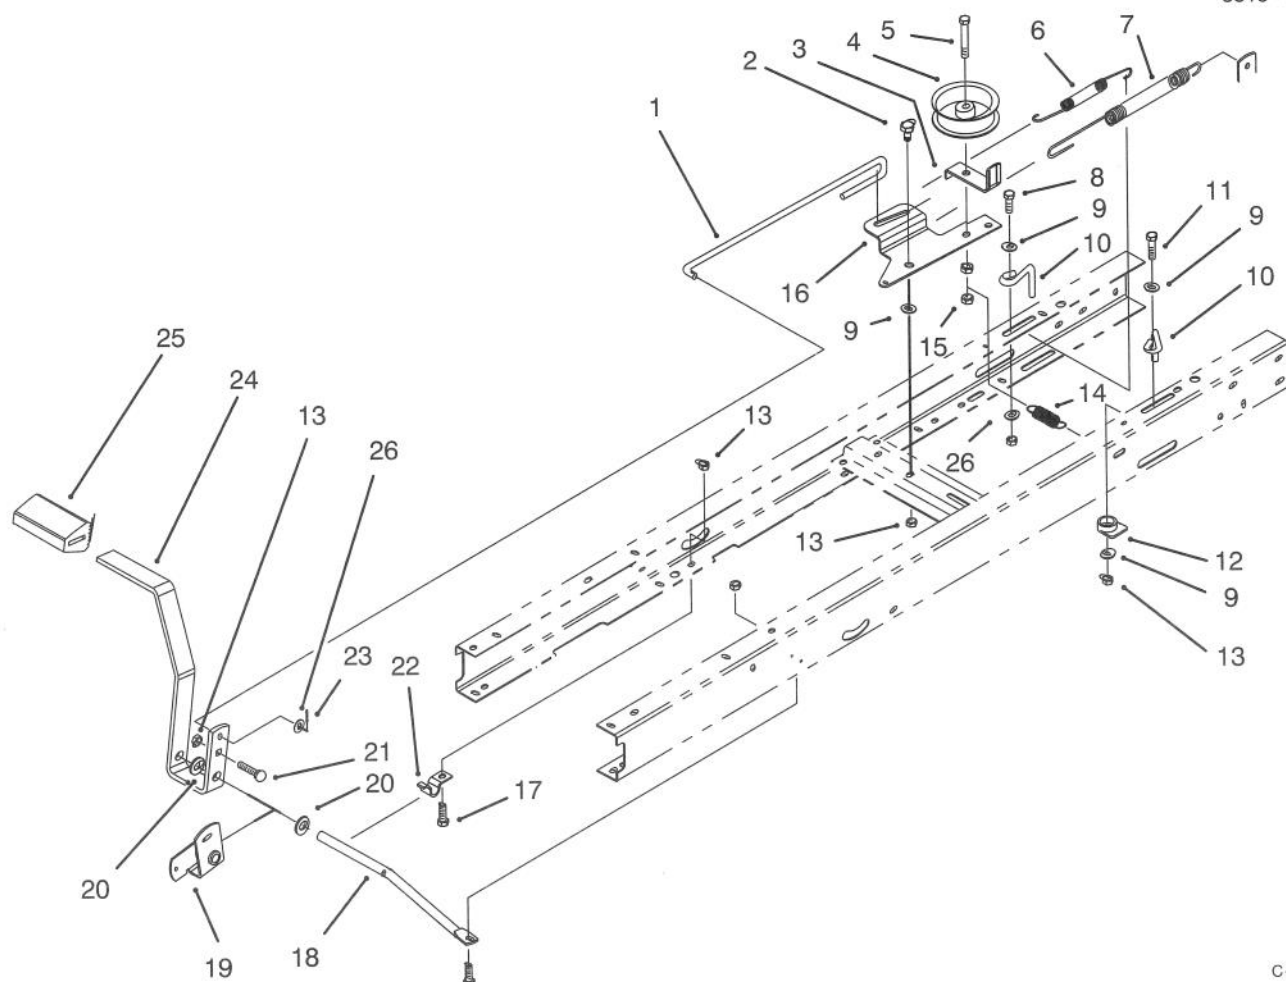


C-1312

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1
2	37-8770	Bolt - Shoulder	1
3	88-5560	Guide - Idler Belt	1
4	88-5680	Pulley - Flat Idler	1
5	323-11	Screw - Hex Hd. Cap	1
6	27-8890	Spring - Pedal Return	1
7	88-6140	Spring - Brake	1
8	322-5	Screw - Hex Hd. Cap	1
9	5-4460	Washer - Flat	4
10	88-5460	Guide - Trans. Belt	2
11	322-7	Screw - Hex Hd. Cap	1
12	84-5610	Guide - Cable	1
13	3296-29	Nut - Lock	6

Ref. No.	Part No.	Description	No. Used
14	88-6330	Spring - Extension	1
15	3296-59	Nut - Lock	2
16	88-6070	Arm - Idler	1
17	322-3	Screw - Hex Hd. Cap	2
18	88-5500	Rod - Pedal Pivot	1
19	88-4800	Bellcrank	1
20	3256-26	Washer - Flat	2
21	3230-3	Bolt - Carriage	1
22	88-4810	Clamp - Shift Pivot	1
23	3272-10	Pin - Cotter	1
24	88-5000	Pedal - Clutch/Brake	1
25	65-2920	Pad - Pedal	1
26	3256-23	Washer - Flat	2

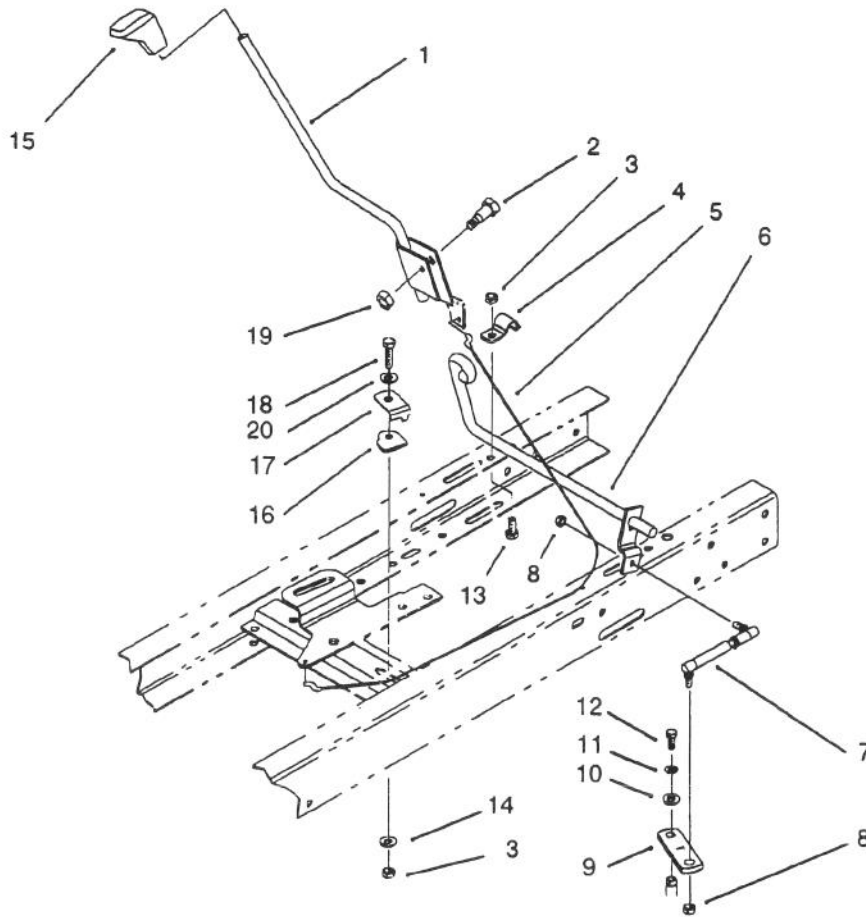


C-1524

SHIFT ASSEMBLY

(Serial No. 3900001 - 3901528) (Model No. 71140)
 (Serial No. 3900001 - 3900899) (Model No. 71200)

Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1
2	5-4015	Bolt - Shoulder	1
3	3296-29	Nut - Lock	3
4	88-4810	Clamp - Shift Pivot	2
5	55-9321	Cable - Shotgo	1
6	88-5080	Pivot - Shift	1
7	88-5530	Rod - Shift Tie	1
8	3296-3	Nut - Lock	2
9	88-5340	Lever - Trans. Shift	1
10	7-5461	Washer - Hardened	1


Ref. No.	Part No.	Description	No. Used
11	3253-3	Washer - Lock	1
12	329-23	Screw - Hex Hd. Cap	1
13	322-3	Screw - Hex Hd. Cap	2
14	3256-23	Washer - Flat	2
15	62-1292	Knob - Shift	1
16	84-5610	Guide - Cable	1
17	88-5930	Keeper - Cable	1
18	3230-3	Bolt - Carriage	1
19	3296-39	Nut - Lock	1
20	3256-25	Washer - Flat	1

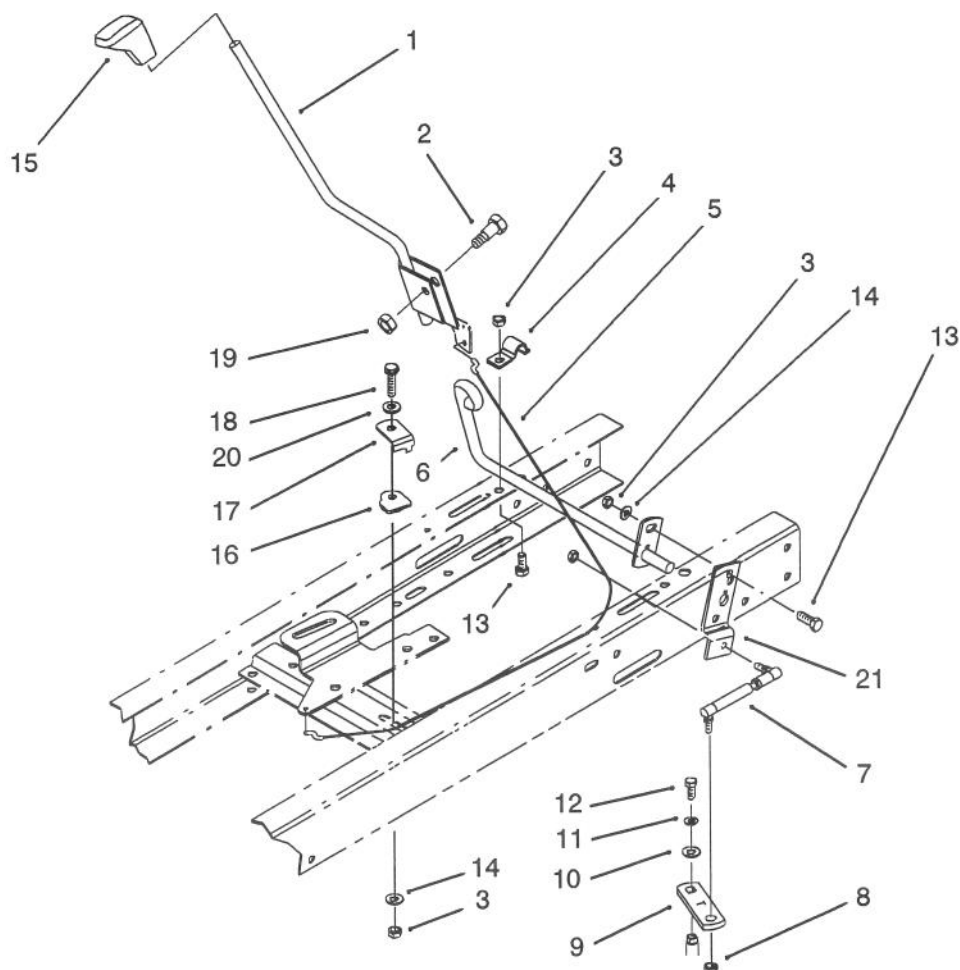

C-1317

SHIFT ASSEMBLY
(Serial No. 3901529 & Up) (Model No. 71140)
(Serial No. 3900900 & Up) (Model No. 71200)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1	12	329-23	Screw - Hex Hd. Cap	1
2	5-4015	Bolt - Shoulder	1	13	322-3	Screw - Hex Hd. Cap	3
3	3296-29	Nut - Lock	4	14	3256-23	Washer - Flat	2
4	88-4810	Clamp - Shift Pivot	2	15	62-1292	Knob - Shift	1
5	55-9321	Cable - Shotgo	1	16	84-5610	Guide - Cable	1
6	92-5796	Pivot - Shift	1	17	88-5930	Keeper - Cable	1
7	88-5530	Rod - Shift Tie	1	18	3230-3	Bolt - Carriage	1
8	3296-3	Nut - Lock	2	19	3296-39	Nut - Lock	1
9	88-5340	Lever - Trans. Shift	1	20	3256-25	Washer - Flat	1
10	7-5461	Washer - Hardened	1	21	92-5794	Lever - Shift Pivot	1
11	3253-3	Washer - Lock	1				

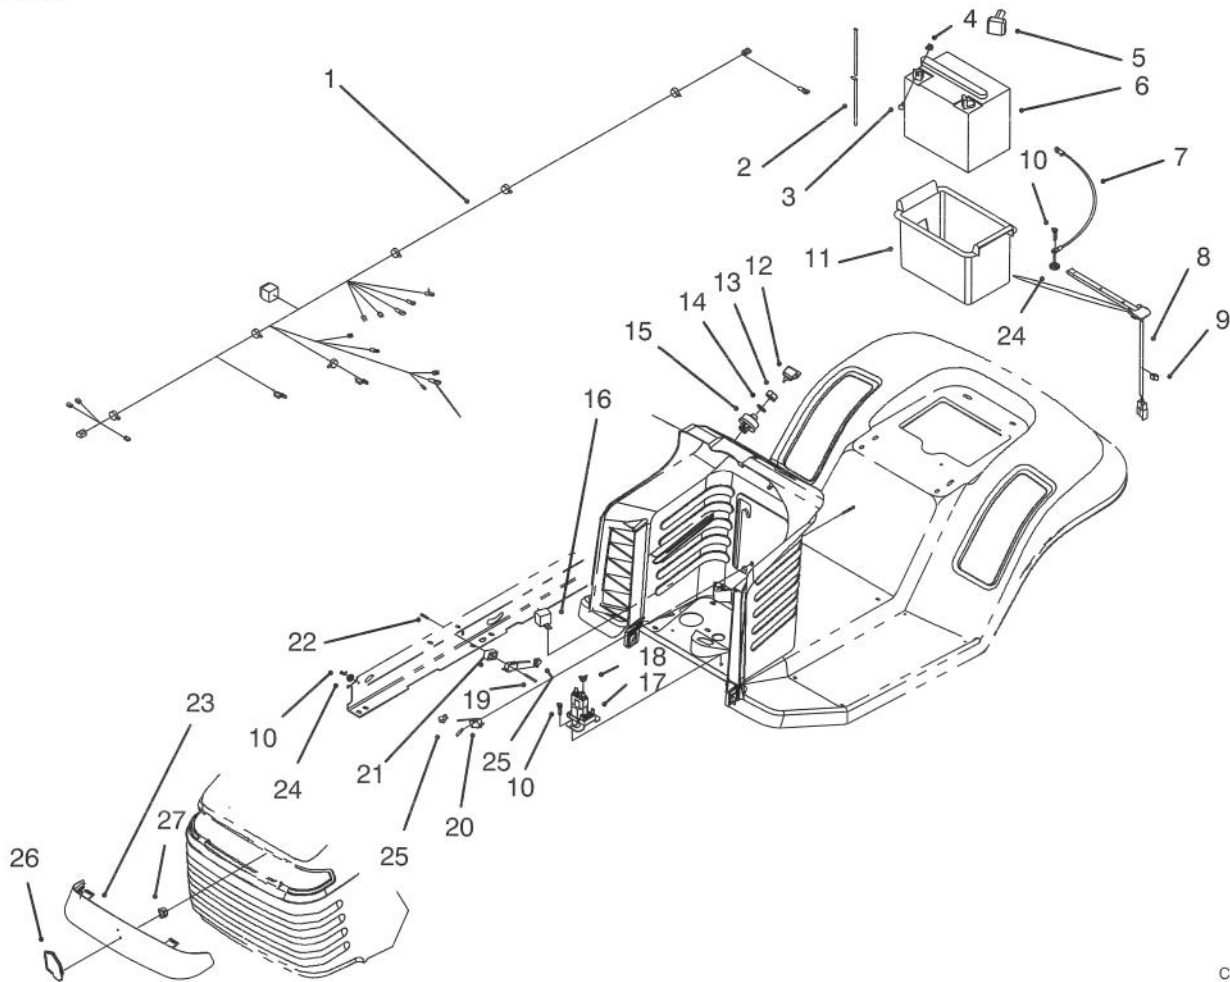


C-1306

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-4310	Harness - Wire	1
2	56-2540	Vent - Tube	1
3	321-4	Screw - Hex Hd. Cap	2
4	32103-22	Nut - Wing	2
5	28-8080	Boot - Battery Terminal	1
6	80-2600	Battery - 7 Plate	1
7	44-8110	Cable - Battery Negative	1
8	38-1420	Switch - Seat	1
9	702366	Clip - Wire Retainer	1
10	32144-4	Screw - Hex Hd. Thr'd Form.	4
11	88-4040	Box - Battery	1
12	63-8360	Key - Ignition	1
13	218-461	Nut - Hex	1

Ref. No.	Part No.	Description	No. Used
14	3254-5	Washer - Lock	1
15	88-9830	Switch - Ignition	1
16	116397	Relay	1
17	47-1910	Solenoid	1
18	32149-2	Nut - Keps	2
19	910478	Screw - Phillips Hd.	4
20	88-9931	Switch - Micro	2
21	88-4880	Spacer - Microswitch	1
22	3290-354	Speednut	2
23	88-3960	Lens - Headlights	1
24	3255-7	Washer - Ext. Tooth Lock	2
25	88-4480	Seal - Plunger	2
26	80-2240	Plate - Grille Panel	1
27	3290-299	Nut - Tinnerman	1

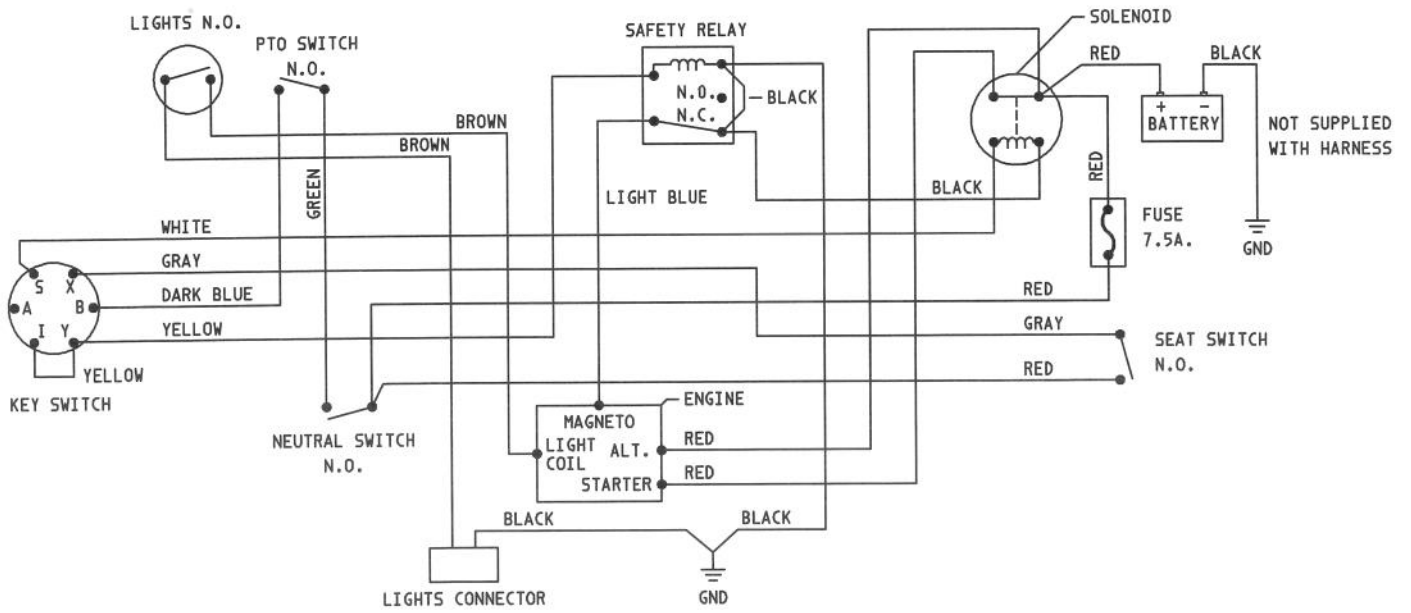


C-1301

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

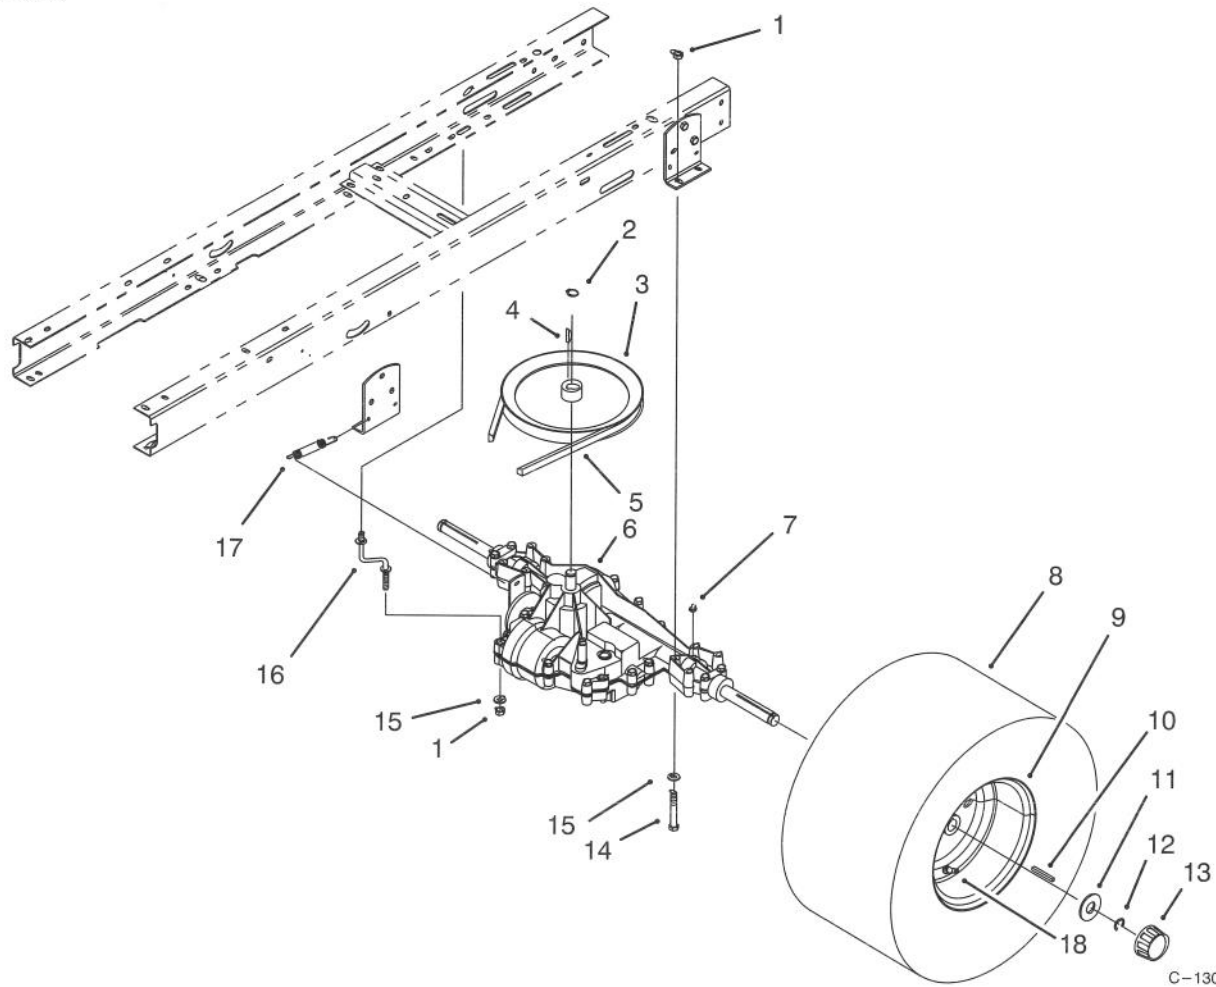


C-1305

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	8
2	32120-64	Ring - Snap	1
3	88-4840	Pulley - Transmission	1
4	3257-23	Key - Woodruff	1
5	88-6270	V-Belt - Traction	1
6	88-6450	Transaxle	1
7	302-11	Fitting - Grease	2
8	88-4080	Tire	2
9	88-4380	Rim	2
10	7-0036	Key - Square	2
11	28-2480	Washer	2

Ref. No.	Part No.	Description	No. Used
12	32151-48	E-Ring	2
13	61-9780	Cap - Hub	2
14	322-12	Screw - Hex Hd. Cap	4
15	3256-23	Washer - Flat	8
16	88-5350	Strap - Torque	2
17	26-6701	Spring - Brake Return	1
18	232-27	Valve Stem w/Cap	2
*	231-91	Tube - Inner (Optional)	2
*	88-4290	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2

*Not Illustrated

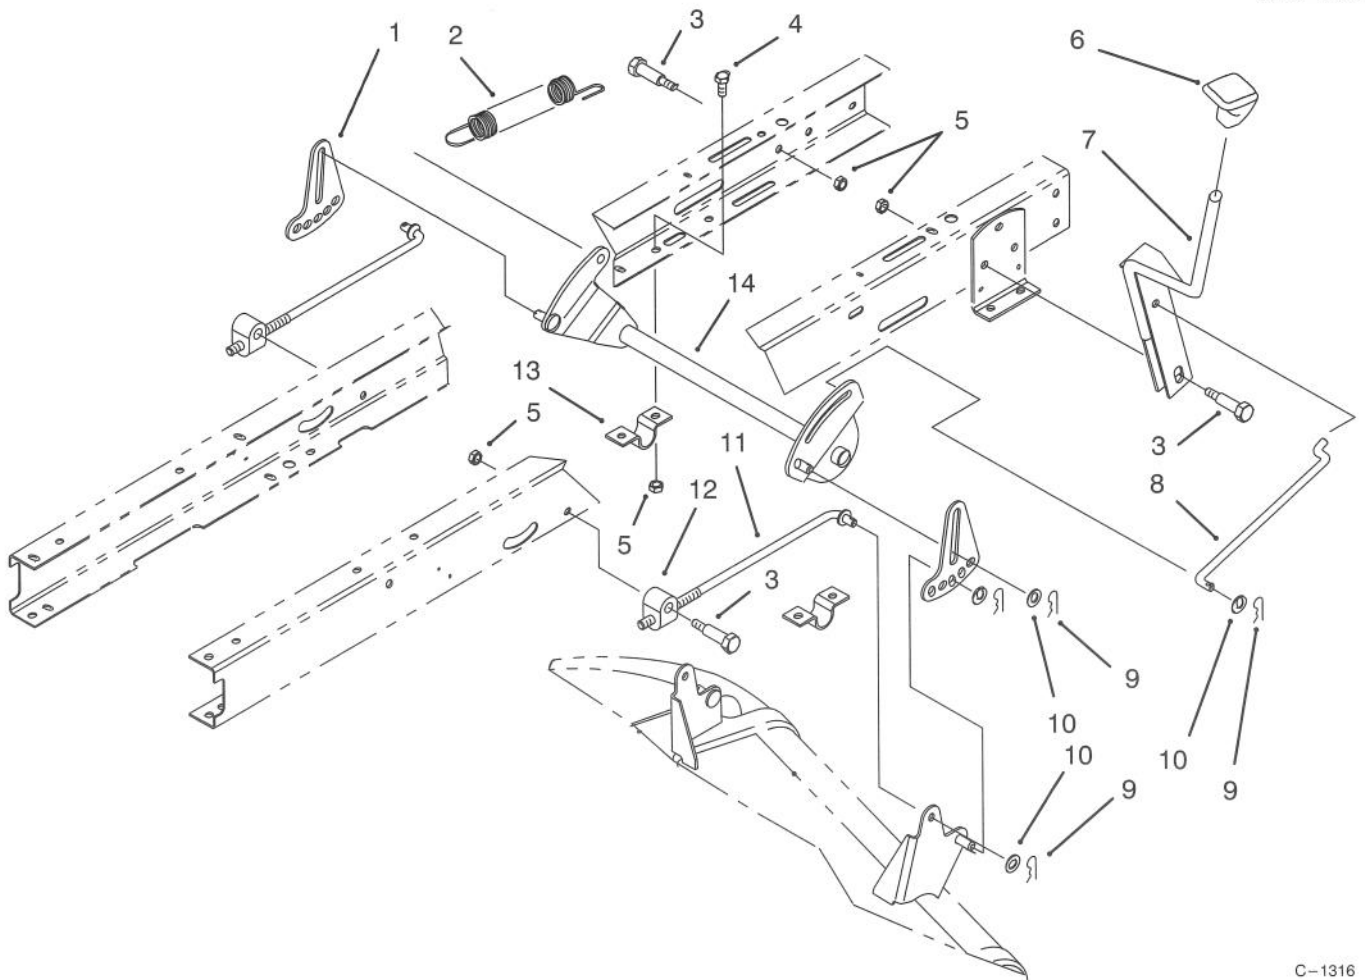


C-1316

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2
2	88-6460	Spring - Extension	1
3	7-0030	Bolt - Shoulder	4
4	322-3	Screw - Hex Hd. Cap	4
5	3296-29	Nut - Lock	8
6	62-1292	Knob - Shift	1
7	88-5310	Lever - H.O.C.	1


Ref. No.	Part No.	Description	No. Used
8	88-5900	Link - H.O.C.	1
9	3290-307	Pin - Hair Cotter	7
10	3256-24	Washer - Flat	7
11	88-5450	Rod - Hanger Rear	2
12	88-4230	Trunnion - H.O.C. Rear	2
13	88-4730	Clamp - H.O.C. Pivot	2
14	88-5110	Pivot - H.O.C.	1

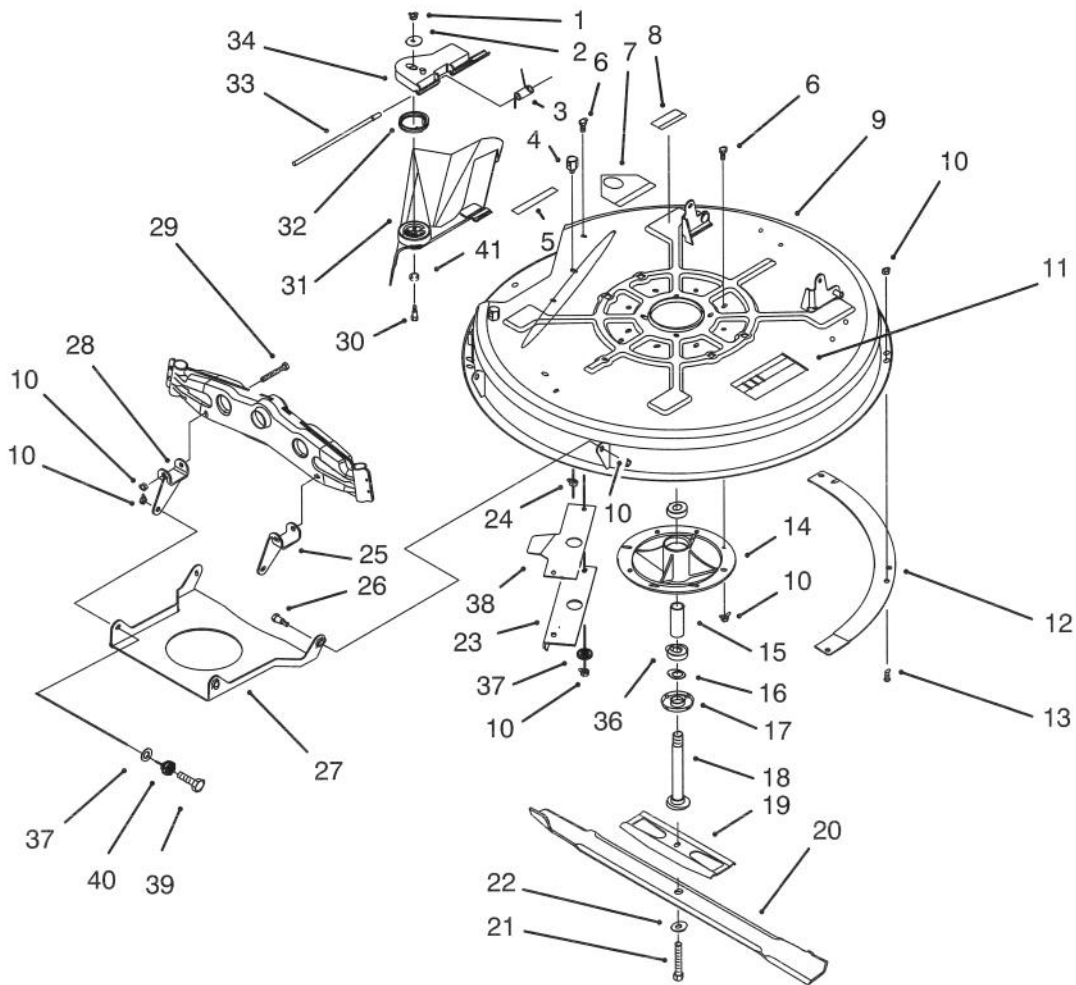

C-1313

DECK & SPINDLE ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Lock	1	19	80-4570	Stiffener - Blade	1
2	3256-58	Washer - Fender	1	20	33-4750	Blade - 32"	1
3	92-2493	Spring - Torsion	1	21	26-0671	Bolt - Blade	1
4	28-7350	Post - Rear Pivot	1	22	3290-465	Washer - Belleville	1
5	68-3650	Decal - Deflector Danger	1	23	44-5720	Baffle - Deck	1
6	322-3	Screw - Hex Hd. Cap	10	24	3296-59	Nut - Lock	1
7	54-9220	Decal - Danger	2	25	88-5650	Bracket - L.H.	1
8	55-4300	Decal - Caution	2	26	28-0540	Bolt - Shoulder	2
9	88-5790-01	Cutter Deck - 32"	1	27	88-4940	Pan - Front Suspension	1
10	3296-29	Nut - Lock (Model No. 71140)	16	28	88-5640	Bracket - R.H.	1
		(Model No. 71200)	24	29	322-12	Screw - Hex Hd. Cap	2
11	66-1340	Decal - Danger	1	30	88-5040	Bolt - Shoulder	1
12	88-9780	Ring - Wet Grass (Model No. 71200 Only)	4	31	88-4560	Deflector - Double Pivot	1
13	32122-14	Screw - Truss Hd. (Model No. 71200 Only)	8	32	88-6160	Spring - Torsion	1
14	56-7030	Housing - Spindle	1	33	88-6150	Rod - Deflector Hinge	1
15	83-7020	Spacer - Bearing	1	34	88-4540	Hinge - Deflector Danger	1
16	80-4390	Spacer - Hardened	1	36	251-297	Bearing - Spindle	2
17	80-4370	Shield - Bearing	1	37	3256-23	Washer - Flat	4
18	80-4350	Shaft - Spindle	1	38	92-2494	Ramp - Deflector	1
				39	322-6	Screw - Hex Hd. Cap	2
				40	106661	Cam	2
				41	92-5776	Spacer - Deflector	1

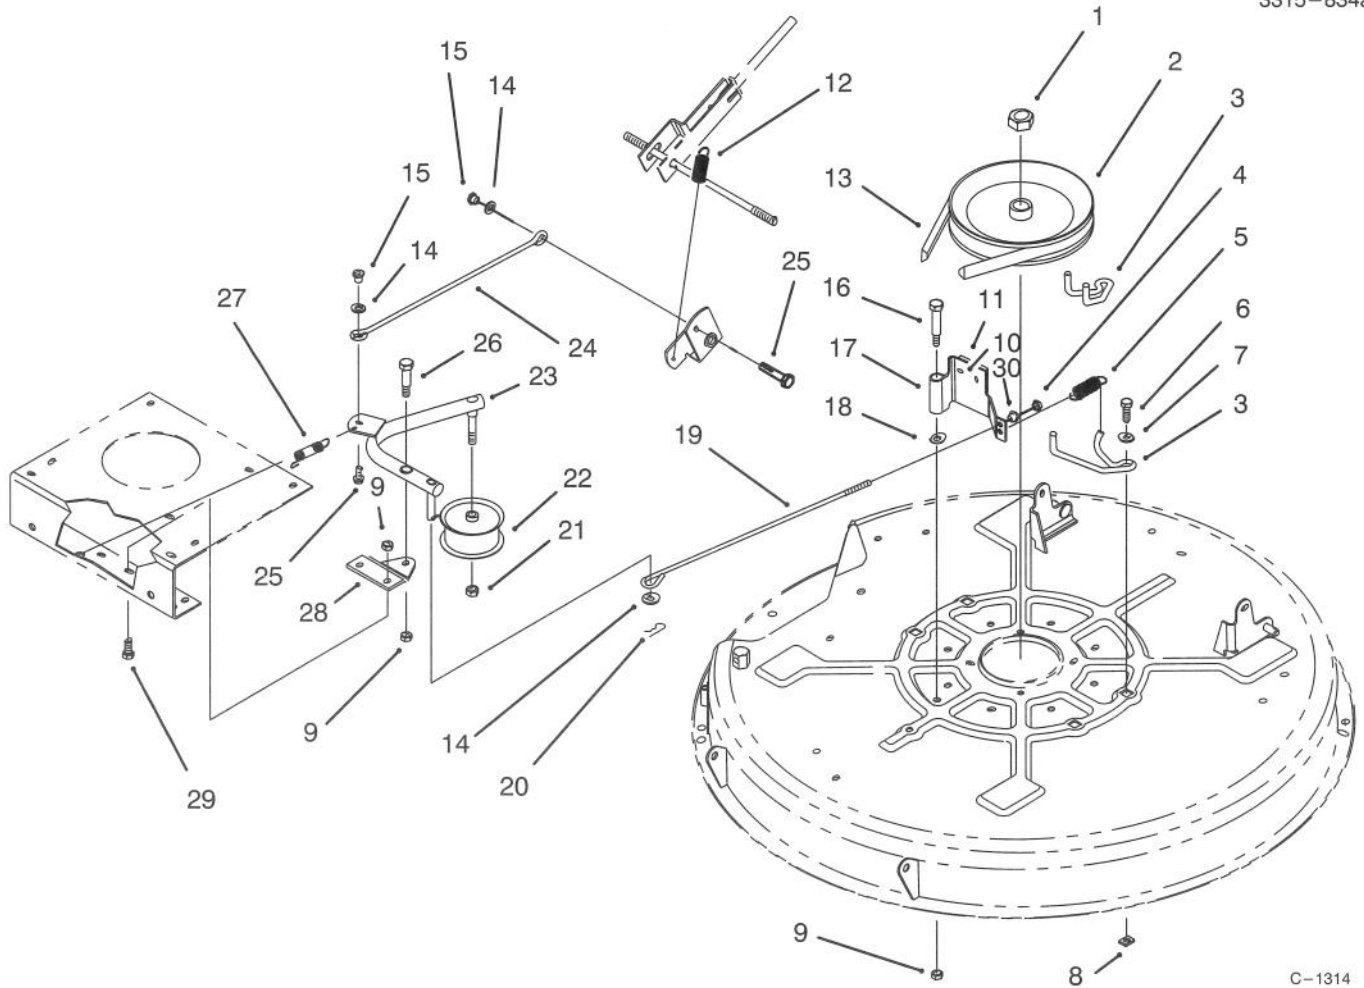


C-1314

PULLEY & BELT ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	3219-7	Nut - Lock	1
2	88-5060	Pulley - Deck	1
3	88-5760	Guide - Belt	2
4	3296-42	Nut - Lock	1
5	88-6330	Spring - Extension	1
6	322-5	Screw - Hex Hd. Cap	2
7	5-4460	Washer - Fender	2
8	3290-496	Nut - Retained	2
9	3296-29	Nut - Lock	4
10	3290-282	Rivet - Pop	2
11	56-9830	Pad - Brake	1
12	88-6420	Spring/Cable Assembly	1
13	88-6260	V-Belt	1
14	3256-24	Washer - Flat	3
15	47-4990	Post	2
16	88-4590	Bolt - Shoulder	1

Ref. No.	Part No.	Description	No. Used
17	88-6110	Deck Brake Assembly (Incl. Ref. #10 & 11)	1
18	3256-23	Washer - Flat	1
19	88-5690	Rod - Deck Brake	1
20	3290-307	Pin - Hair Cotter	1
21	3296-39	Nut - Lock	1
22	56-9870	Pulley - Idler	1
23	88-5850	Arm - Idler	1
24	88-5980	Rod - Deck Engage	1
25	3234-13	Screw - Hex Flange Hd.	2
26	7-0030	Bolt - Shoulder	1
27	26-6700	Spring - Extension	1
28	88-5370	Plate - Idler Mount	1
29	322-3	Screw - Hex Hd. Cap	2
30	67-0710	Ball - Swivel	1

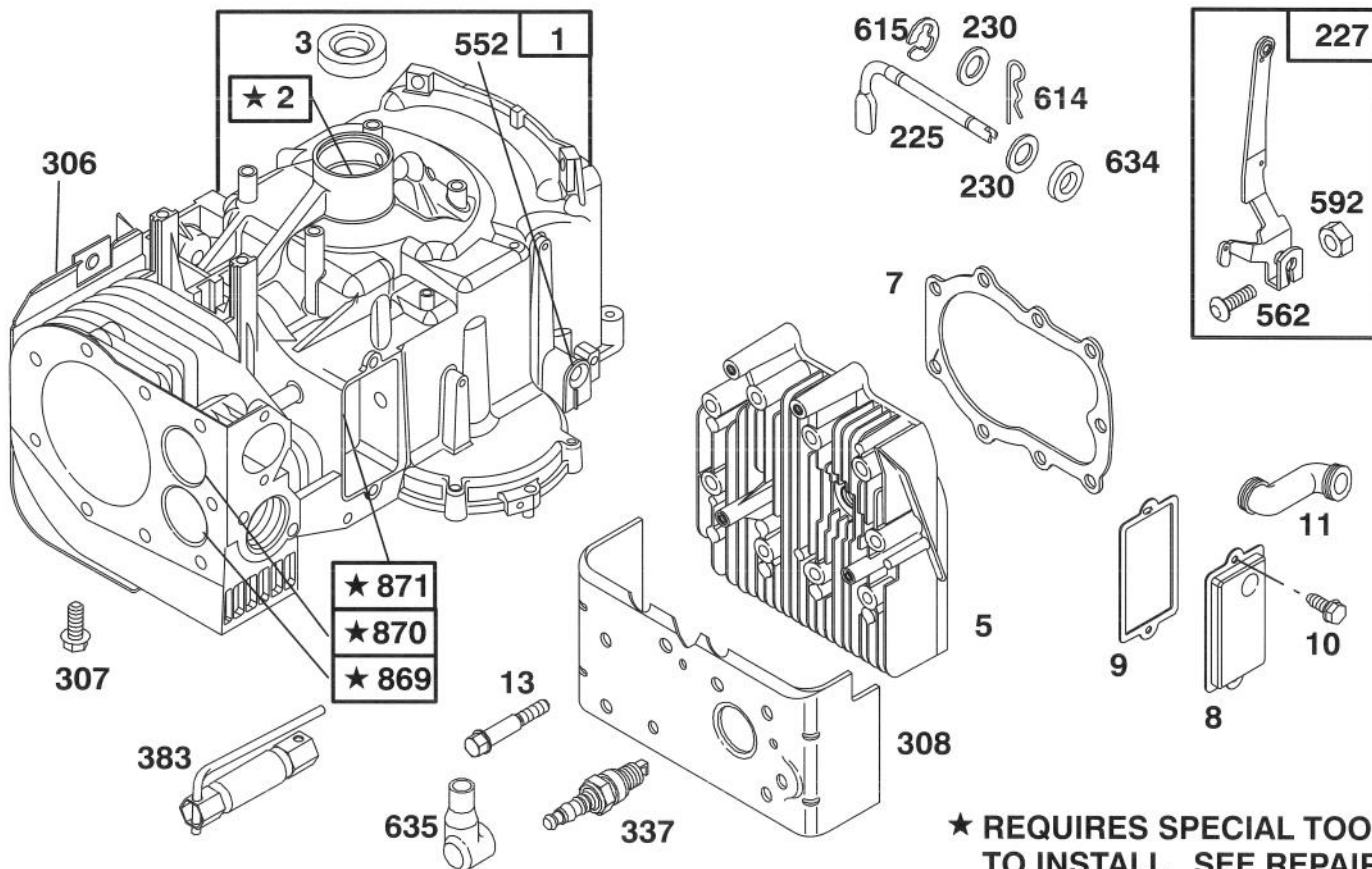

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frame. **1019 LABEL KIT**

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used
1	495728	Cylinder Assembly	1
2	399265	Bearing-Cylinder	1
★3	391086	Seal-Oil	1
5	212914	Head-Cylinder	1
★7	271866	Gasket-Cylinder Head	1
8	391406	Breather Assembly	1
★9	27803	Gasket-Valve Cover	1
10	94621	Screw-Sem	1
11	280100	Tube-Breather	1
13	93723	Screw-Cylinder Head	1
225	231058	Crank-Governor	1
227	493935	Lever Assy.-Governor	1
230	94742	Washer-Gov. Crank	1
306	224542	Shield-Cylinder	1
307	93949	Screw-Cylinder Shield Mtg.	1
308	222725	Cover-Cylinder Head	1
337	802592	Plug-Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench-Spark Plug	1
552	231597	Bushing-Gov. Crank	1
562	92613	Bolt-Governor Lever	1
592	231082	Nut-Hex.	1
614	93306	Cotter-Pin	1
615	93307	Retainer-E-Ring	1
★634	491323	Seal-Oil	1
635	66538	Elbow-Spark Plug	1
869	261463	Seat-Intake Valve (Standard)	1
870	213316	Seat-Exhaust Valve (Standard)	1
871	261961	Guide-Exhaust Valve	1
		Note: 231218 Guide-Intake Valve	1
1019	491195	Label Kit	1


★ Included in Gasket Set-Part No. 393411.

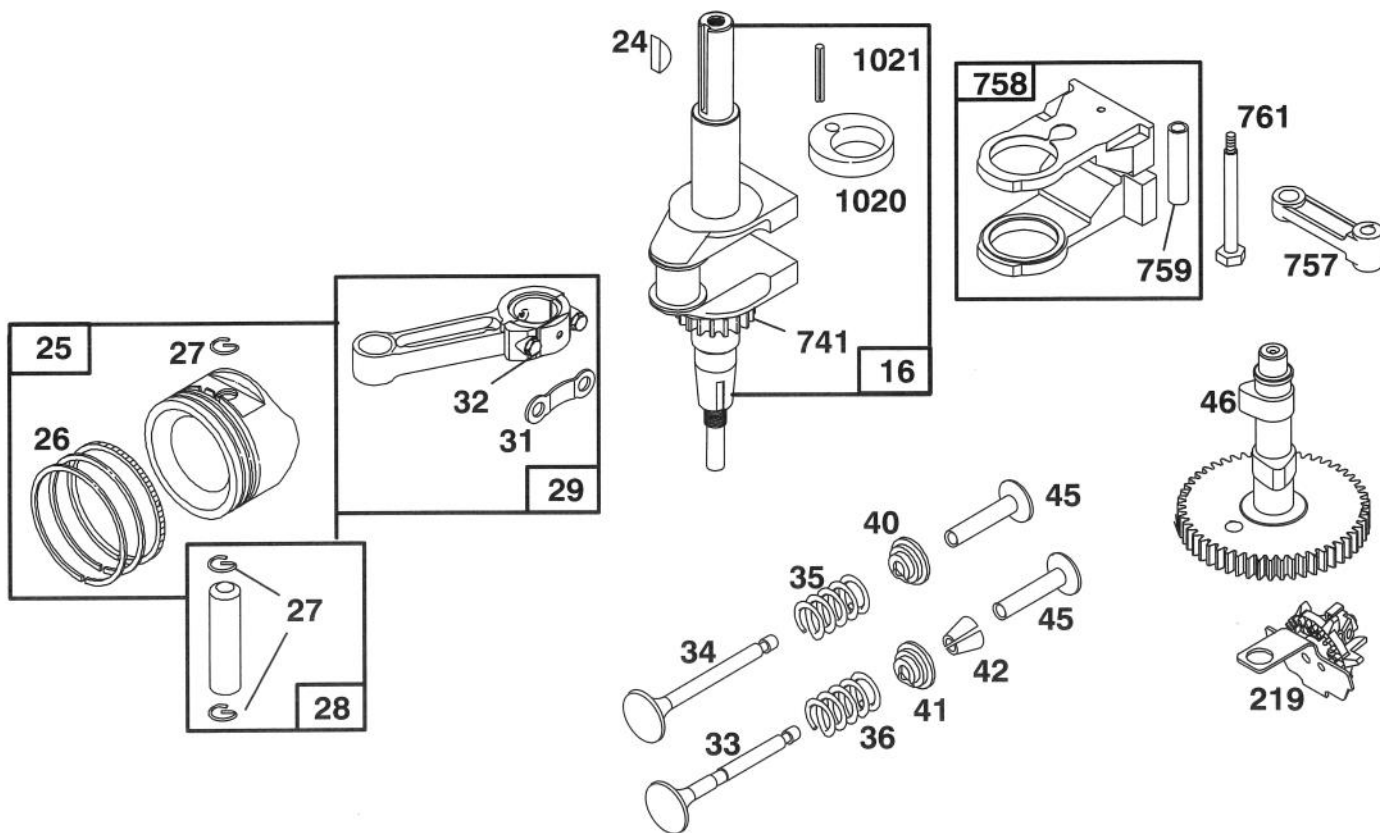

Assemblies include all parts shown in frame.

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	491647	Crankshaft Note: Order 94196 For Timing Gear Key.	1	31	222299	Lock-Screw	1
24	222698	Key-Flywheel	1	32	92909	Screw-Conn. Rod	1
25	391285	Piston Assy. (Std.)	1	33	261185	Valve-Exhaust	1
	391287	Piston Assy. (.010" O.S.)	1	34	261462	Valve-Intake	1
	391288	Piston Assy. (.020" O.S.)	1	35	65906	Spring-Intake Valve	1
	391289	Piston Assy. (.030" O.S.) Note: For Chrome Ring Set (Std.) Order 392331.	1	36	26828	Spring-Exhaust Valve	1
26	391780	Ring Set-Piston (Std.)	1	40	221596	Retainer-Intake Valve	1
	391781	Ring Set-Piston (.010" O.S.)	1	41	292260	Rotocoil-Exhaust Valve	1
	391782	Ring Set-Piston (.020" O.S.)	1	42	93630	Retainer-Exhaust Valve Rotocoil	1
	391783	Ring Set-Piston (.030" O.S.)	1	45	262248	Tappet-Valve	1
27	260924	Lock-Piston Pin	1	46	212897	Gear-Cam	1
28	299691	Pin Assy.-Piston (Standard)	1	219	490815	Slinger-Oil Assy.	1
	391286	Pin Assy.-Piston (.005" O.S.)	1	741	262135	Gear-Timing	1
29	490348	Rod Assy.-Conn. Note: For Conn. Rod With .020" Undersize Crankpin Bore-Order No. 490469.	1	757	212359	Link-Counterweight	1
				758	391373	Counterweight Assy.	1
				759	298909	Pin-Counterweight	1
				761	93875	Screw-Counterweight	1
				1020	261242	Eccentric	1
				1021	94160	Pin-Eccentric	1

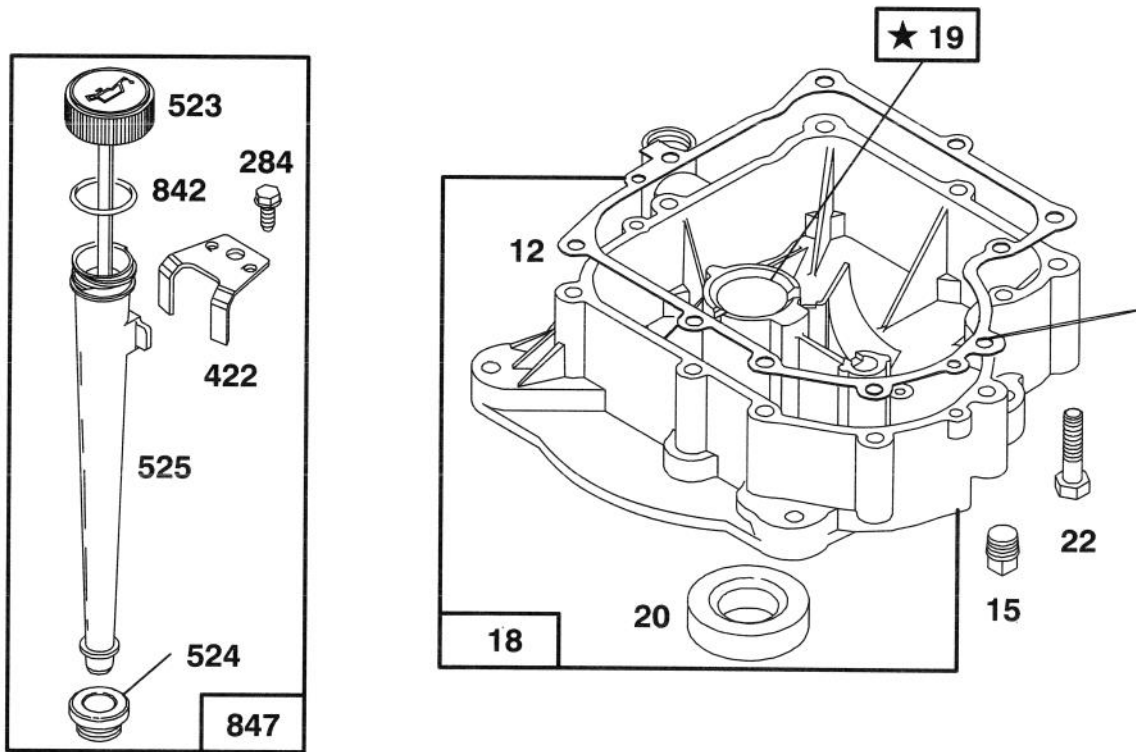

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frame.

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used
★12	271702	Gasket-Crankcase Cover (1/64" Thick)	1
★	270915	Gasket-Crankcase Cover (.005" Thick)	1
★	270916	Gasket-Crankcase Cover (.009" Thick)	1
15	94239	Plug-Oil Drain	1
18	391784	Sump-Engine	1
19	490666	Bushing-Sump	1
★20	291675	Seal-Oil	1

Ref. No.	Part No.	Description	No. Used
22	93585	Screw-Sump Mtg.	1
284	94419	Screw-Clamp Mtg.	1
422	223394	Clamp-Oil Filler Tube	1
523	391841	Cap and Dipstick-Oil Filler	1
★524	68838	Seal-Filler Tube	1
525	280134	Tube-Oil Filler	1
★842	270920	Seal-Oil Filler Cap	1
847	392067	Fill Group-Oil	1

★ Included in Gasket Set-Part No. 393411.

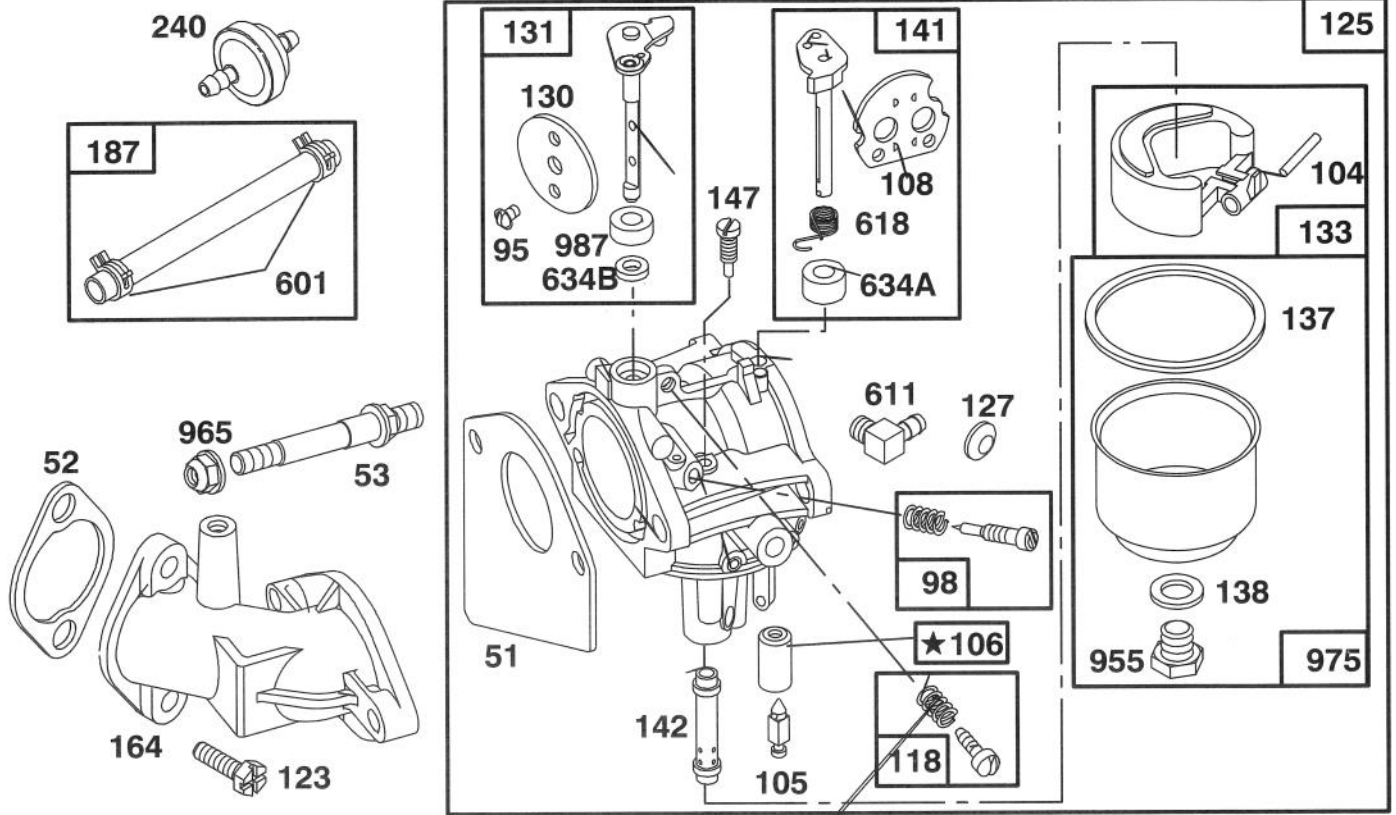

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frame.

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01


Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor Mtg.	1
53	94637	Stud-Carburetor Mtg.	1
●95	94098	Screw-Throttle	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224666	Valve-Choke	1
118	494383	Valve-Needle	1
123	94616	Screw-Carburetor Mtg.	1
125	495784	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only).	1
130	224539	Valve-Throttle	1
131	494379	Shaft and Lever-Throttle	1
133	494381	Float-Carburetor	1
◆137	281165	Gasket-Float Bowl	1
◆138	281164	Washer-Float Bowl Screw	1

Ref. No.	Part No.	Description	No. Used
141	494380	Shaft and Lever-Choke	1
●142	494878	Nozzle-Carburetor Note: 495604 High Altitude Kit Includes:	1
		281164 Washer-Bowl	1
●147	231794	Pilot-Jet	1
164	213819	Elbow-Carburetor	1
187	393815	Line-Fuel	1
240	298090	Filter-Fuel	1
601	93053	Clamp-Fuel Pipe	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring-Choke	1
●634A	281168	Seal-Choke Shaft	1
●634B	281167	Washer-Throttle Shaft	1
955	94642	Screw-Fuel Bowl	1
965	94108	Locknut	1
975	494378	Bowl Assy.-Carburetor	1
●987	281166	Seal-Throttle Shaft	1

★ Included in Gasket Set-Part No. 393411.

● Included in Carburetor Overhaul Kit-Part No. 495837.

◆ Included in Carburetor Gasket Set-Part No. 494385.

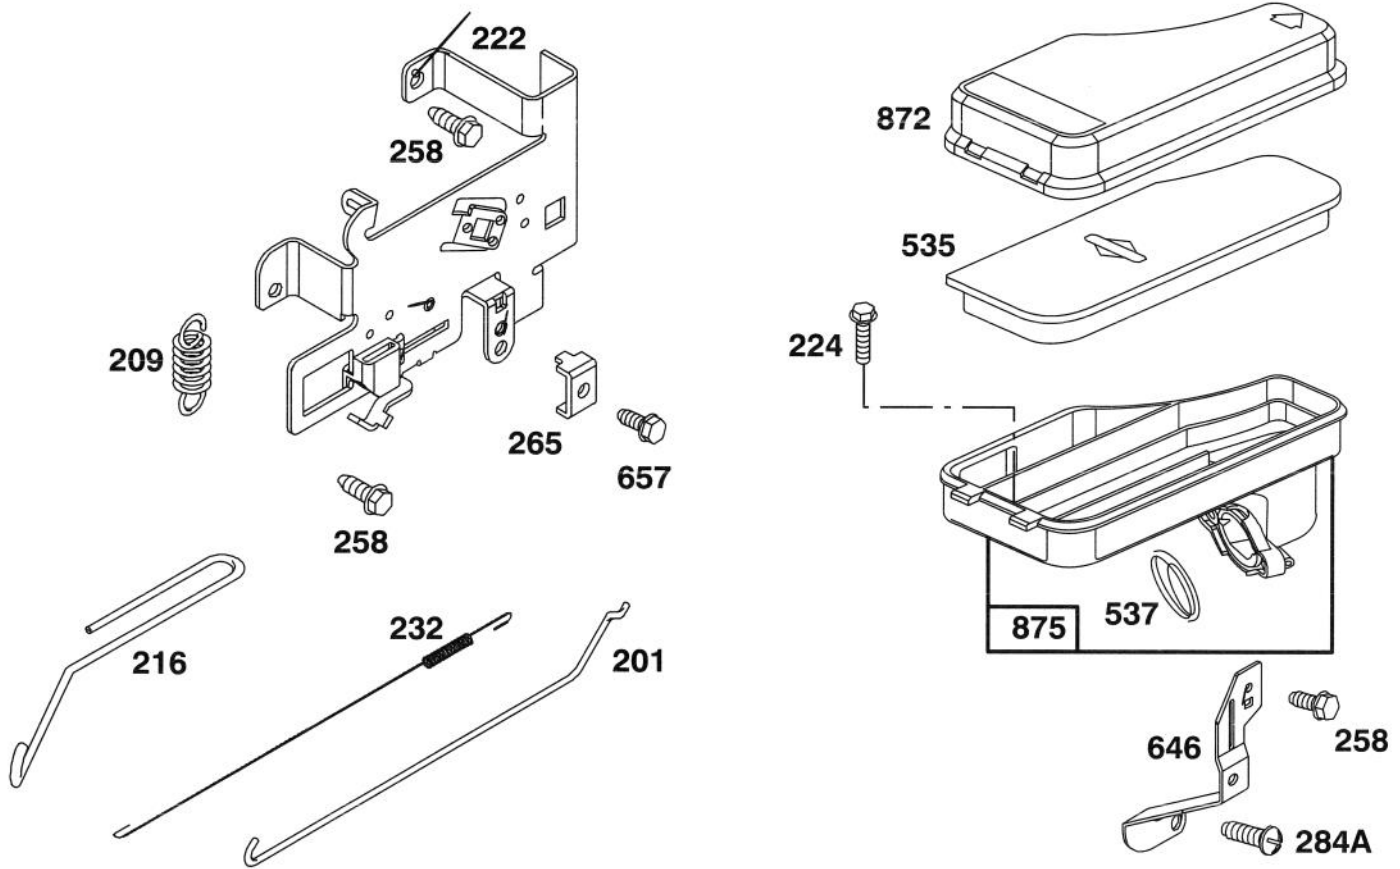


Assemblies include all parts shown in frame.

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	494887	Plate-Governor Control	1
224	94513	Screw-Hex. Hd.	1
232	262785	Spring-Governor Link	1
258	94620	Screw-Hex. Head	1
265	221535	Clamp-Casing	1

Ref. No.	Part No.	Description	No. Used
284A	94326	Screw-Pan Head	1
535	272405	Element-Air Cleaner	1
★537	281106	O-Ring	1
646	224546	Brace-Air Cleaner	1
657	93496	Screw-Sem	1
872	281108	Cover-Air Cleaner	1
875	494745	Body-Air Cleaner	1

★ Included in Gasket Set-Part No. 393411.

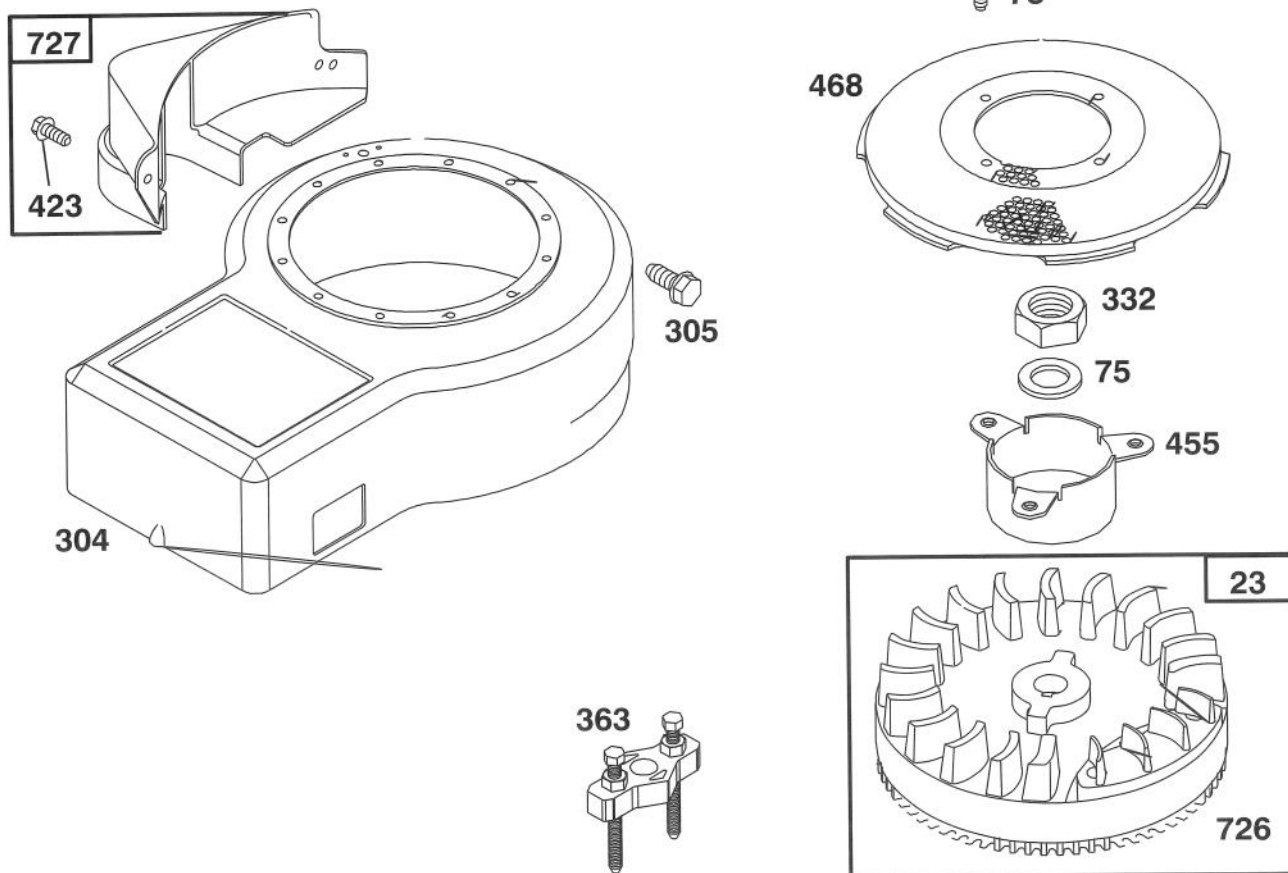


Assemblies include all parts shown in frame.

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy. - Magneto	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
304	494087	Housing - Blower	1
305	94608	Screw - Blower Housing Mounting	1
332	92284	Nut - Hex.	1
356	494328	Wire - Ground	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller - Flywheel	1
423	94625	Screw - Sem	1
455	222561	Cup - Screen Mtg.	1
468	222562	Screen - Flush Rotating	1
726	392134	Gear - Ring (Includes Mtg. Parts)	1
727	395405	Cover - Starter (Includes Mtg. Screws)	1



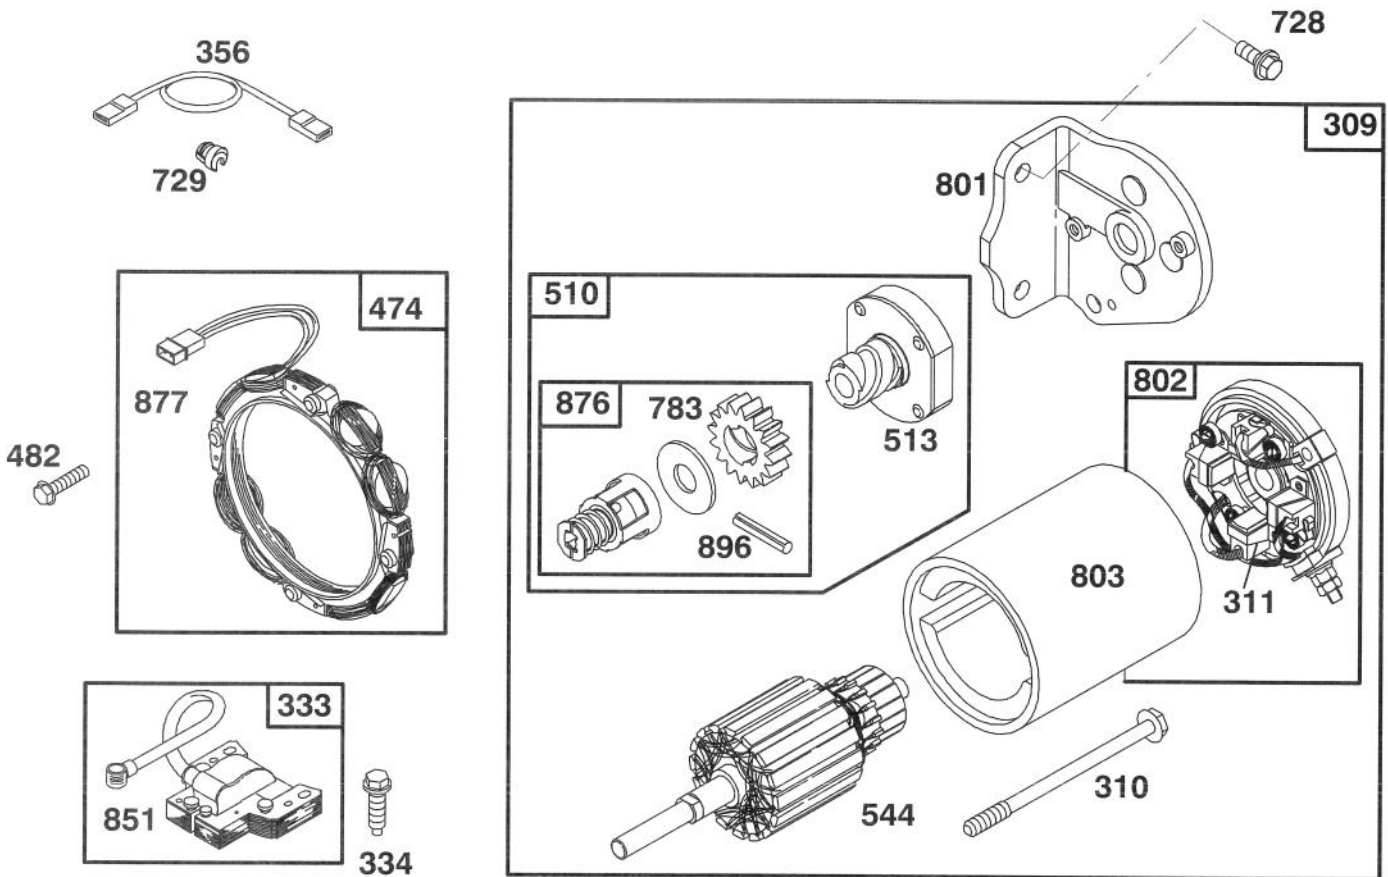


Assemblies include all parts shown in frame.

ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor-Starting (12 Volt)	1
310	94003	Bolt-Hex. Hd.	1
311	395538	Brush Assy.	1
333	398811	Armature-Magneto	1
334	93381	Screw-Armature Mounting	1
356	494328	Wire-Ground	1
474	393474	Stator-Alternator (Dual Circuit)	1
482	93621	Screw-Sem	1
510	490421	Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1

Ref. No.	Part No.	Description	No. Used
728	93535	Screw-Sem	1
729	281159	Clip-Relief	1
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy.-Commutator	1
803	398159	Housing Assy.	1
851	221798	Terminal-Ignition Cable	1
876	490467	Retainer and Pin	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1
896	94288	Pin-Roll	1

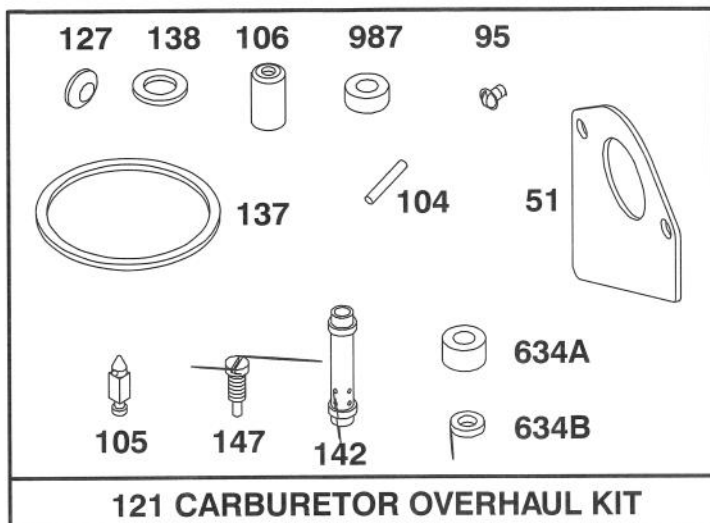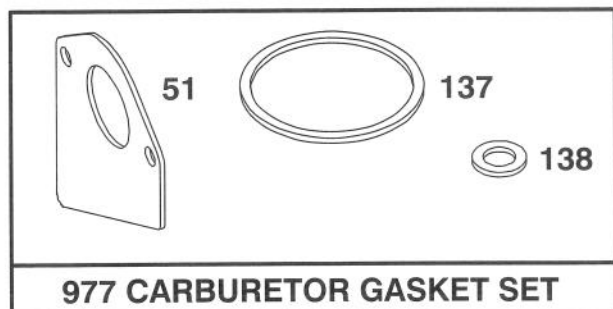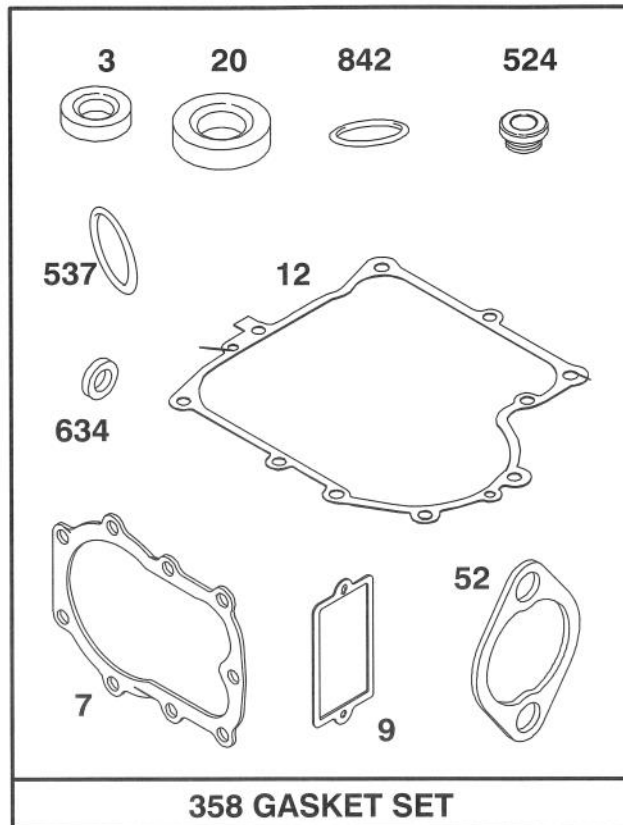**121 CARBURETOR OVERHAUL KIT****977 CARBURETOR GASKET SET****358 GASKET SET**

Assemblies include all parts shown in frame.


ENGINE BRIGGS & STRATTON MODEL 254707-0128-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal-Oil	1
★7	271866	Gasket-Cylinder Head	1
★9	27803	Gasket-Valve Cover	1
★12	271702	Gasket-Crankcase Cover (1/64" Thick)	1
★	270915	Gasket-Crankcase Cover (.005" Thick)	1
★	270916	Gasket-Crankcase Cover (.009" Thick)	1
★20	291675	Seal-Oil	1
◆◆51	272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
◆95	94098	Screw-Throttle	1
◆104	231789	Pin-Float Hinge	1
◆105	231855	Valve Assy.-Inlet Needle	1

Ref. No.	Part No.	Description	No. Used
◆106	231854	Inlet Valve Seat	1
121	495837	Carburetor Overhaul Kit	1
◆127		Plug-Welch (Sold in Kit Only).	1
◆◆137	281165	Gasket-Float Bowl	1
◆◆138	281164	Washer-Float Bowl Screw	1
◆142	494878	Nozzle-Carburetor	1
◆147	231794	Pilot-Jet	1
358	393411	Gasket Set	1
★524	68838	Seal-Filler Tube	1
★537	281106	O-Ring-Air Cleaner	1
★634	491323	Seal-Governor	1
◆634A	281168	Seal-Choke Shaft	1
◆634B	281167	Washer-Throttle Shaft	1
★842	270920	Seal-Oil Filler Cap	1
977	494385	Carburetor Gasket Set	1
◆987	281166	Seal-Throttle Shaft	1

◆ Included in Carburetor Gasket Set-Part No. 494385.
★ Included in Gasket Set-Part No. 393411.

◆ Included in Carburetor Overhaul Kit-Part No. 495837.

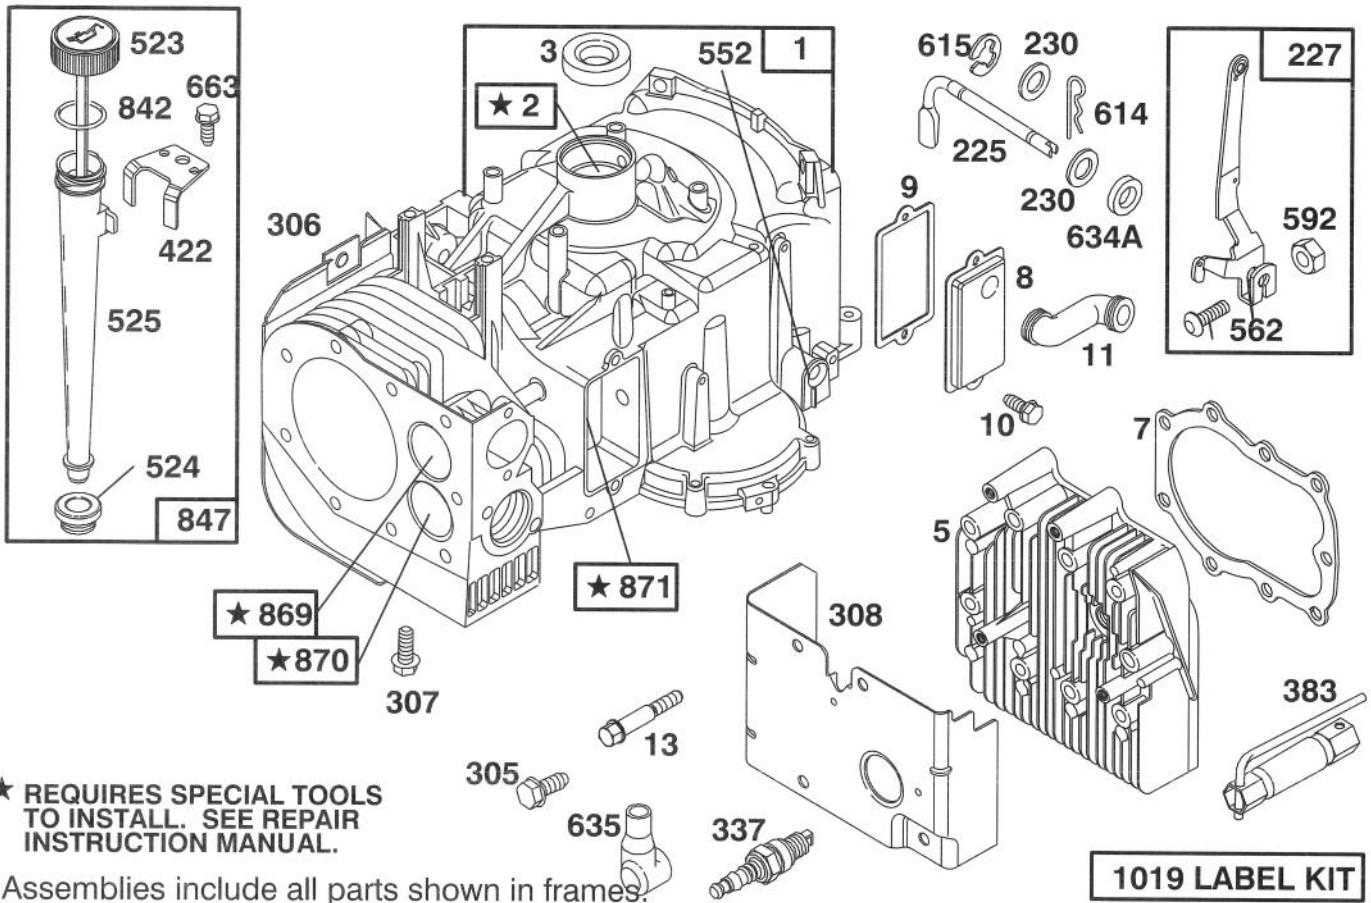


ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
1	490450	Cylinder Assembly	1
2	399265	Bearing-Cylinder	1
★3	391086	Seal-Oil	1
5	494240	Head-Cylinder	1
★7	271866	Gasket-Cylinder Head	1
8	391406	Breather Assembly	1
★9	27803	Gasket-Valve Cover	1
10	94621	Screw-Sem	1
11	280100	Tube-Breather	1
13	94622	Screw-Cylinder Head	1
225	231058	Crank-Governor	1
227	493935	Lever Assy.-Governor	1
230	94742	Washer-Gov. Crank	1
305	94619	Screw-hex. Washer Hd.	1
306	224545	Shield-Cylinder	1
307	94623	Screw-Cyl. Shield Mtg.	1
308	491490	Cover-Cylinder Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1
422	223721	Clamp-Oil Filler Tube	1

Ref. No.	Part No.	Description	No. Used
523	495230	Cap and Dipstick-Oil Filler	1
★524	68838	Seal-Filler Tube	1
525	280741	Tube-Oil Filler	1
552	231597	Bushing-Gov. Crank	1
562	92613	Bolt-Governor Lever	1
592	231082	Nut-Hex.	1
614	93306	Cotter-Hair Pin	1
615	93307	Retainer-E-Ring	1
★634A	491323	Seal-Governor	1
635	66538	Elbow-Spark Plug	1
663	94620	Screw-Hex Head	1
★842	270920	Seal-Oil Filler Cap	1
847	490474	Fill Group-Oil	1
869	261463	Seat-Intake Valve (Std.)	1
870	213316	Seat-Exhaust Valve (Std.)	1
871	261961	Guide-Exhaust Valve	1
		Note: 231218 Guide-Intake Valve	1
1019	491255	Label Kit	1

★ Included in Gasket Set-Part No. 494241.

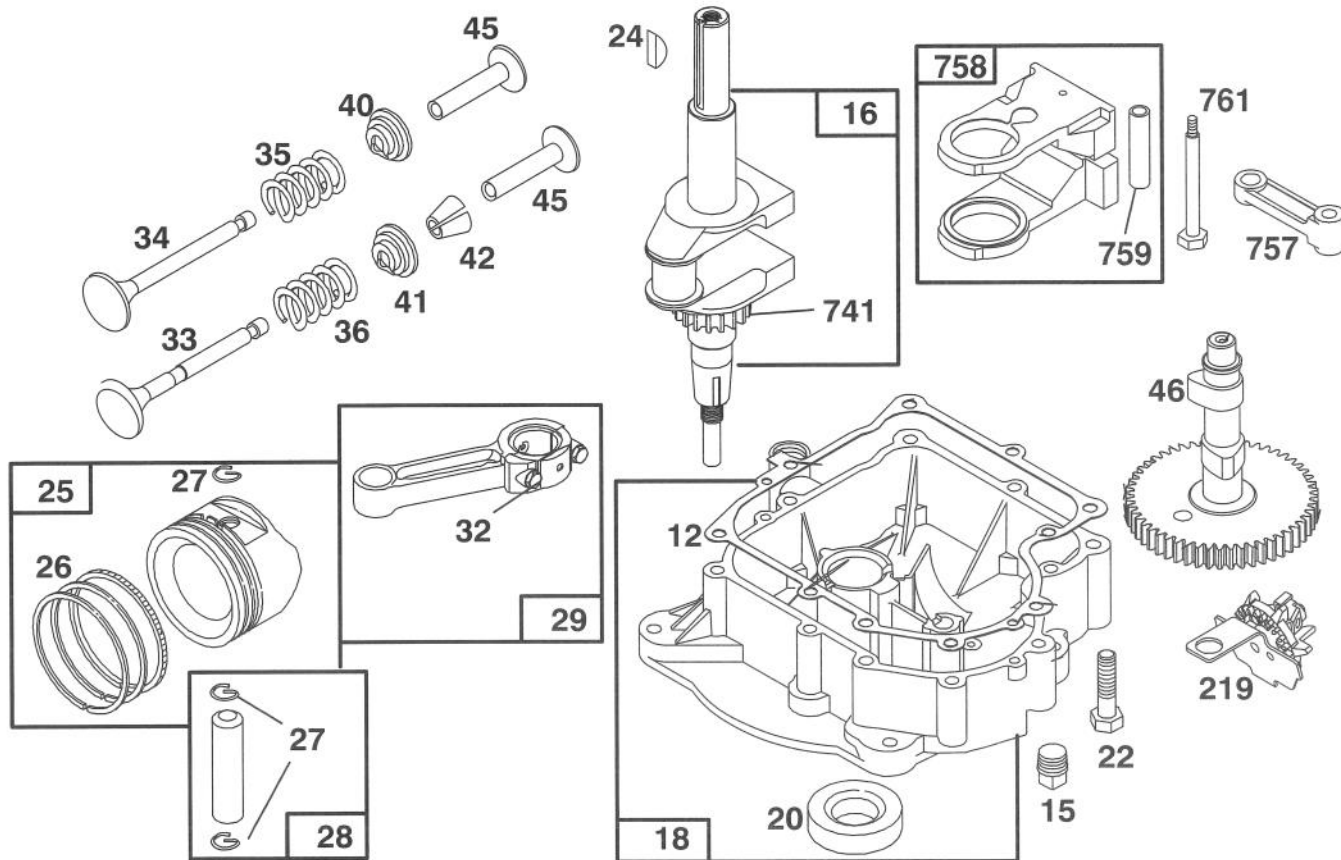


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket-Crkse. (1/64")	1	29	490348	Rod Assembly- Connecting	1
★	271997	Gasket-Crkse. (.005")	1		490469	Connecting Rod	
★	271996	Gasket-Crkse. (.009")	1			(.020" U.S. Crankpin Bore)	1
15	94239	Plug-Oil Drain	1	32	94671	Screw-Connecting Rod	1
16	495162	Crankshaft	1	33	262246	Valve-Exhaust	1
	94196	Key-Timing Gear	1	34	262247	Valve-Intake	1
18	494238	Base-Engine	1	35	65906	Spring-Intake Valve	1
★20	291675	Seal-Oil	1	36	26828	Spring-Exhaust Valve	1
22	94624	Screw-Base Mtg. Sem	1	40	221596	Retainer-Intake Valve	1
24	222698	Key-Flywheel	1	41	292260	Rotocoil-Exhaust Valve	1
25	394661	Piston Assy. (Std.)	1	42	93630	Retainer-Ex. Valve Rotocoil	1
	394662	Piston Assy. (.010" O.S.)	1	45	262248	Tappet-Valve	1
	394663	Piston Assy. (.020" O.S.)	1	46	212897	Gear-Cam	1
	394664	Piston Assy. (.030" O.S.)	1	219	490815	Oil Slinger, Gov. Gear Assy.	1
26	391780	Ring Set-Piston (Std.)	1	741	262932	Gear-Timing	1
	391781	Ring Set-Piston (.010" O.S.)	1	757	212359	Link-Counterweight	1
	391782	Ring Set-Piston (.020" O.S.)	1	758	399891	Counterweight Assy.	1
	391783	Ring Set-Piston (.030" O.S.)	1	759	298909	Pin-Counterweight	1
27	260924	Lock-Piston Pin	1	761	93875	Screw-Counterweight	1
28	299691	Pin Assy.-Piston (Standard)	1				
	391286	Pin Assy.-Piston (.005" O.S.)	1				

★ Included in Gasket Set-Part No. 494241.

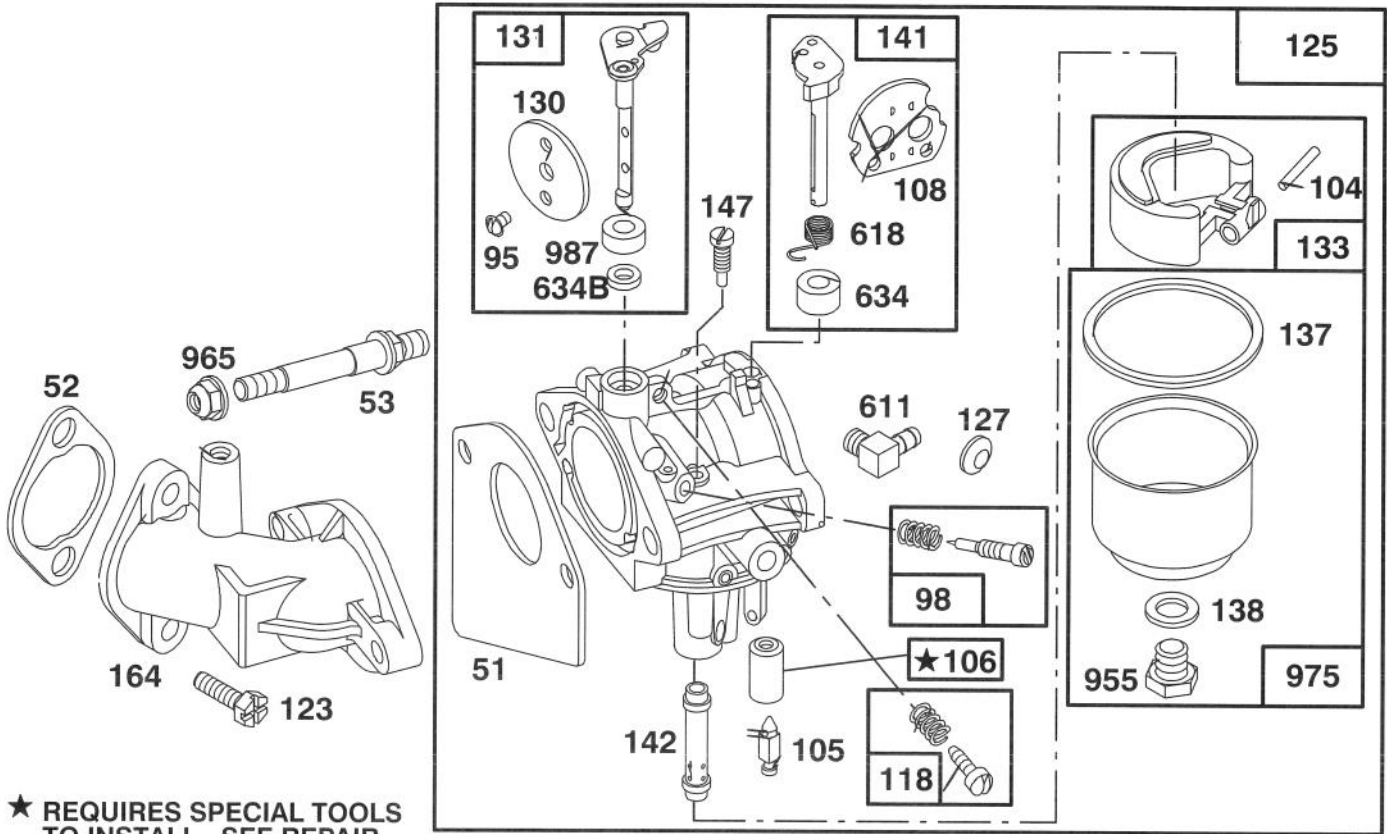

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01


Ref. No.	Part No.	Description	No. Used
◆5	1272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
53	94637	Stud-Carb. Mtg.	1
●95	94098	Screw-Throttle	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve-Choke	1
118	494383	Valve-Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw-Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only).	1
130	224539	Valve-Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever-Throttle	1
133	494381	Float-Carburetor	1
◆◆137	281165	Gasket-Float Bowl	1
◆◆138	281164	Washer-Float Bowl Screw	1
141	494380	Shaft and Lever-Choke	1
●142	494537	Nozzle-Carburetor	1
●147	231794	Pilot-Jet	1
164	213819	Carburetor-Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring-Choke Return	1
●634	281168	Seal-Choke Shaft	1
●634B	281167	Washer-Throttle Shaft	1
955	94642	Screw-Fuel Bowl	1
965	94108	Locknut-Air Cleaner Mtg.	1
975	494378	Bowl Assy.-Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal-Throttle Shaft	1

◆ Included in Carburetor Gasket Set-Part No.494385.

★ Included in Gasket Set-Part No. 494241.

● Included in Carburetor Overhaul Kit-Part No. 495799.

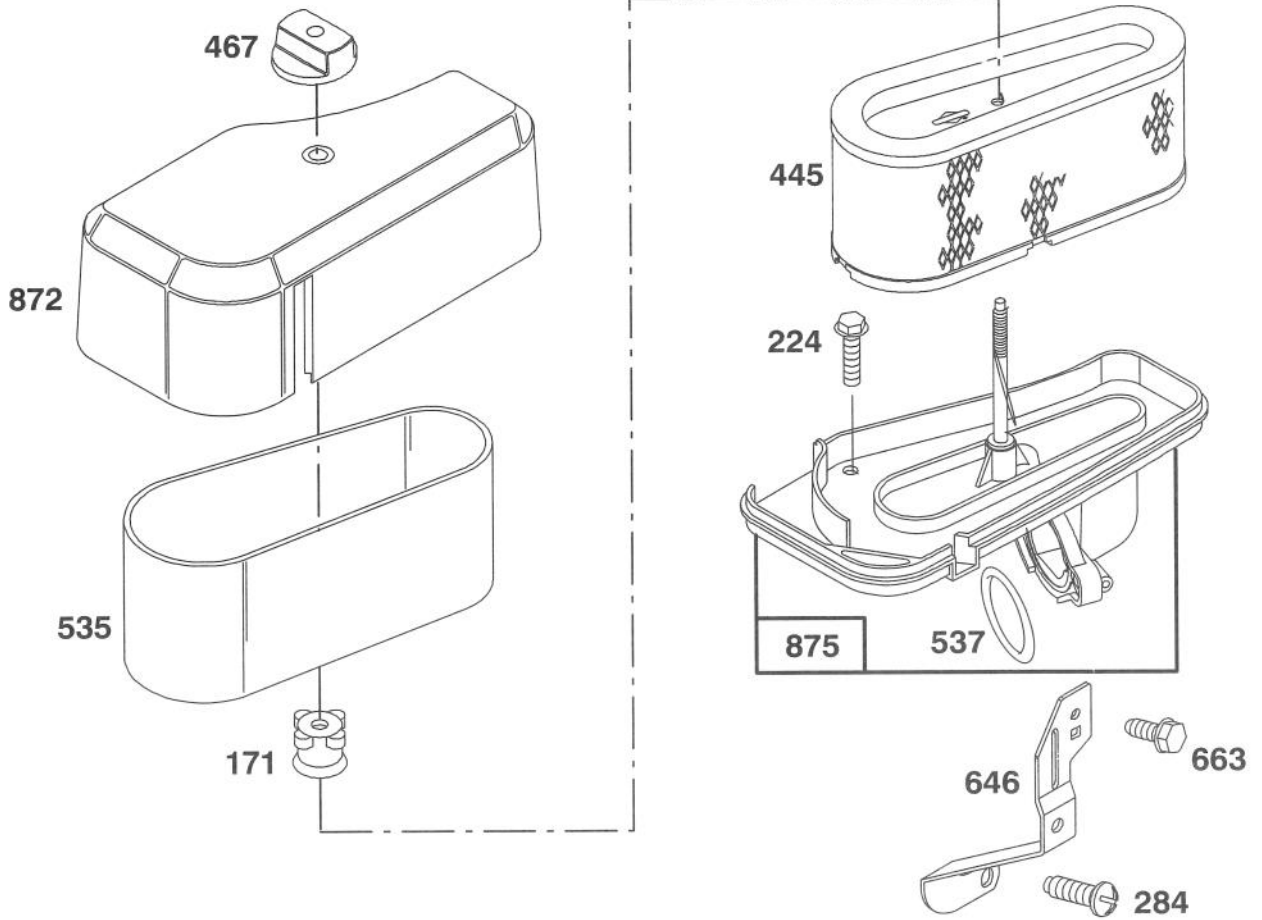


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94513	Screw—Air Cleaner Sem	1
284	94326	Screw Hex. Head	1
445	493909	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1
535	272403	Element—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
872	281104	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1

★ Included in Gasket Set—Part No. 494241.

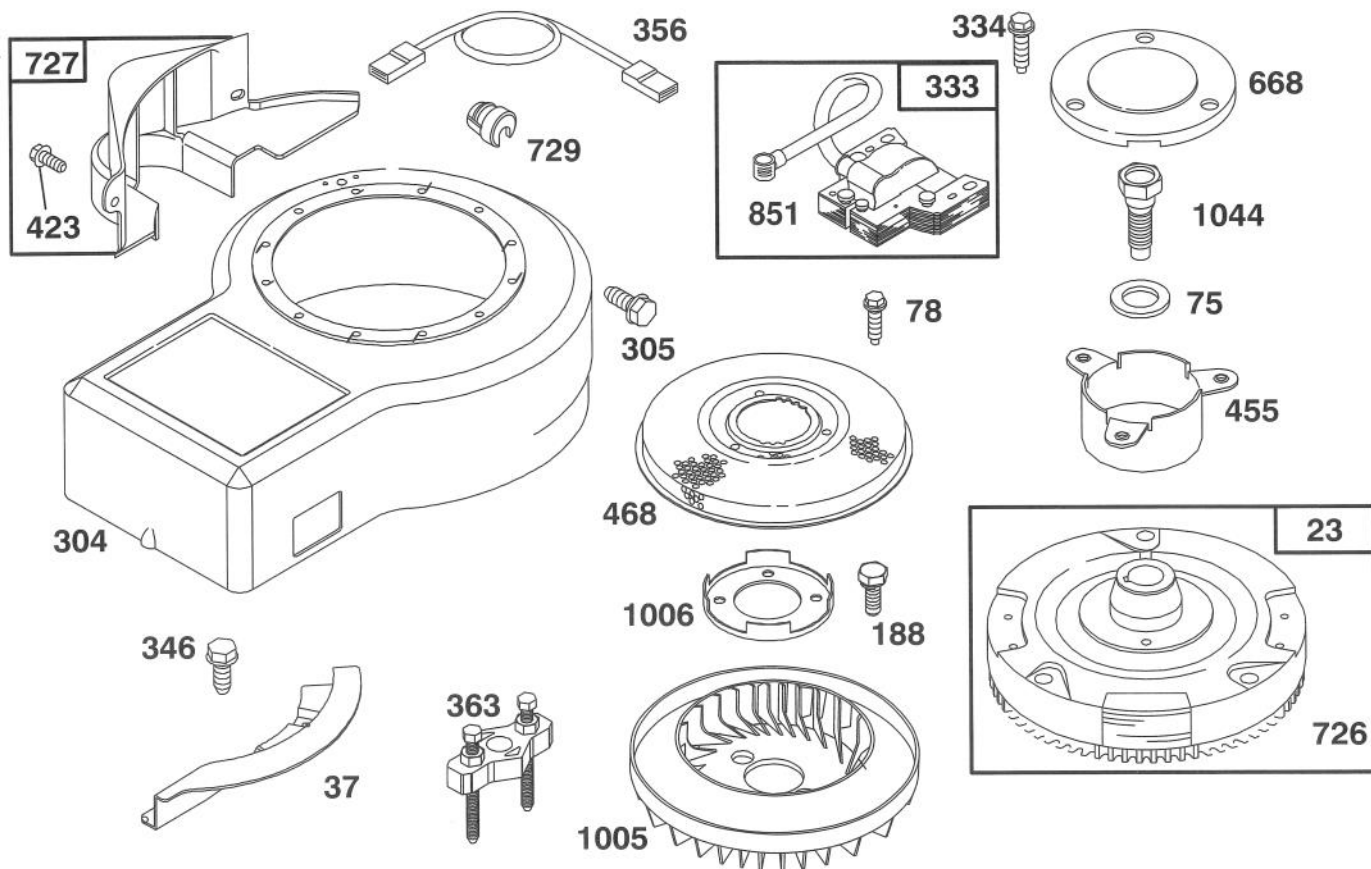

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy. - Magneto	1	423	94073	Screw - Sem	1
37	224502	Guard - Flywheel	1	455	222561	Cup - Screen Mounting	1
75	224061	Washer - Spring	1	468	222562	Screen - Flush Rotating	1
78	93805	Screw - Sem	1	668	280848	Spacer	1
188	93535	Screw - Sem (3/4" Long)	1	726	392134	Gear - Ring (Includes Mtg Hardware)	1
304	494269	Housing - Blower	1	727	490324	Cover - Starter	1
305	94619	Screw - Blower Housing Mtg.	1	729	281159	Clip - Lead Wire	1
333	492341	Armature - Magneto	1	851	221798	Terminal - Ignition Cable	1
334	93381	Screw - Armature Mtg.	1	1005	280687	Fan - Flywheel	1
346	93705	Screw - Hex. Head	1	1006	224413	Retainer - Fan	1
356	494328	Wire Assembly	1	1044	94673	Screw - Hex. Head	1
363	19203	Puller - Flywheel	1				

729A



728



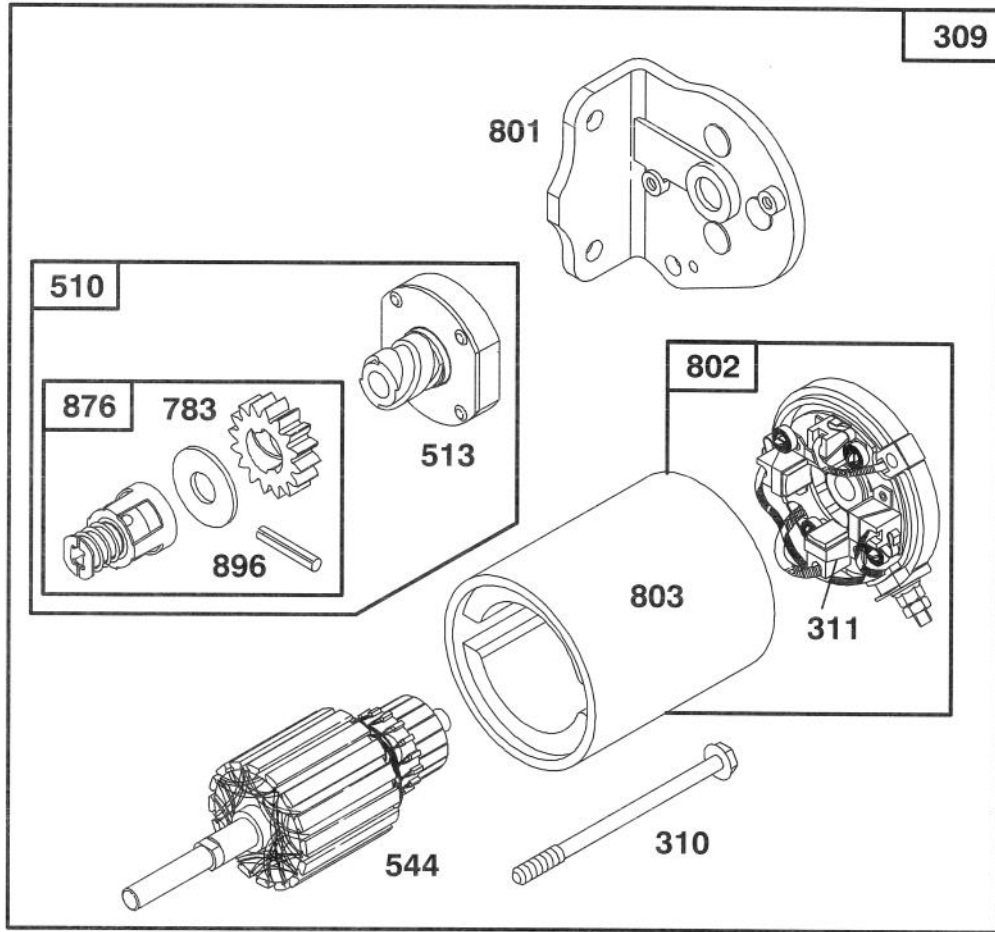


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	490421	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
729A	224723	Retainer-Wire	1
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy. Commutator	1
803	398159	Housing Assy.	1
876	490467	Retainer And Pin	1
896	94288	Pin-Roll	1

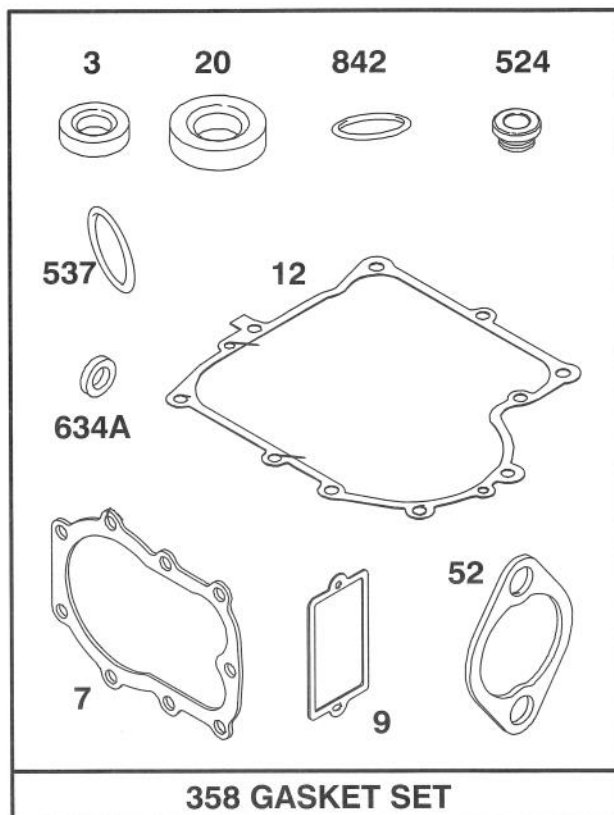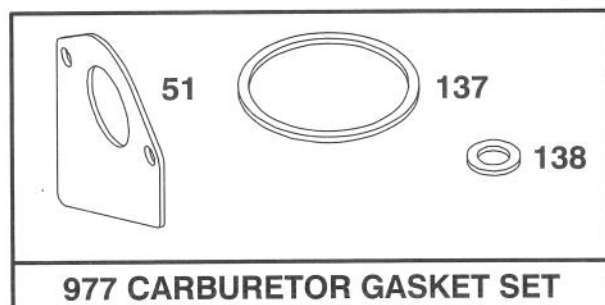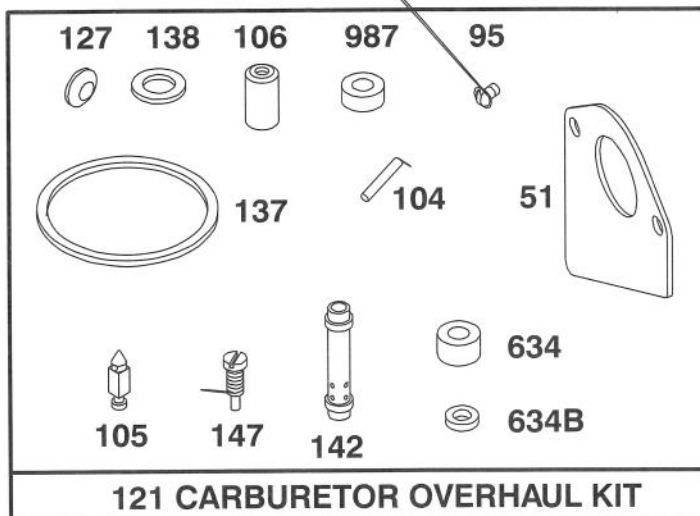

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
*3	391086	Seal-Oil	1
*7	271866	Gasket-Cylinder Head	1
*9	27803	Gasket-Valve Cover	1
*12	271916	Gasket-Crankcase Cover (1/64" Thick)	1
*	271997	Gasket-Crankcase Cover (.005" Thick)	1
*	271996	Gasket-Crankcase Cover (.009" Thick)	1
*20	291675	Seal-Oil	1
◆●51	272465	Gasket-Carburetor (Carb. to Elbow)	1
*52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
●95	94098	Screw-Throttle	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Overhaul Kit	1
●127		Plug-Welch (Sold in Kit Only).	1
◆●137	281165	Gasket-Float Bowl	1
◆●138	281164	Washer-Float Bowl Screw	1
●142	494537	Nozzle-Carburetor	1
●147	231794	Pilot-Jet	1
358	494241	Gasket Set	1
*524	68838	Seal-Filler Tube	1
*537	281106	O-Ring-Air Cleaner	1
●634	281168	Seal-Choke Shaft	1
*634A	491323	Seal-Governor	1
●634B	281167	Washer-Throttle Shaft	1
*842	270920	Seal-Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal-Throttle Shaft	1

* Included in Gasket Set-Part No. 494241.

● Included in Carburetor Overhaul Kit-Part No. 495799.

◆ Included in Carburetor Gasket Set-Part No. 494385.

PEERLESS TRANSAXLE MODEL NO. 915-020

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772128	Transaxle Cover	1	41	790045	Brake Lever	1
3	770110	Transaxle Case	1	42	792073	Screw	2
4	776300	Countershaft	1	43	792075	Locknut	1
6	778281	Spur Gear (16 Teeth)	1	44	790025	Brake Pad Holder	1
7	778122A	Spur Gear (22 Teeth)	1	46	786086	Brake Lever Bracket	1
8	792133	Shift Key	4	47	774869	Axle (16-13/16" lg.)	1
9	784352	Shift Collar	1	48	774688	Axle (11-5/8" lg.)	1
10	784370	Shift Rod & Fork	1			(Incl. Ref. #26)	1
11	778261	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	49	778125	Spur Gear (35 Teeth)	1
12	778262	Bevel Pinion (14 Teeth)	1	50	778250	Spur Gear (17 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	51	778313	Spur Gear (19 Teeth)	1
14	778068	Differential Pinion	2	52	778121A	Spur Gear (20 Teeth)	1
15	778260	Ring Gear	1	54	778263	Spur Gear (11 Teeth)	1
16	786150	Bearing Strip	1	56	778151	Spur Gear (15 Teeth)	1
17	78139	Drive Pin	1	57	778249	Spur Gear (23 Teeth)	1
18	786147	Neutral Spacer	1	58	778314	Spur Gear (21 Teeth)	1
20	792139	Ball (3/8" dia.)	1	59	778129A	Spur Gear (30 Teeth)	1
22	792142	Spring	1	61	778265	Spur Gear (34 Teeth)	1
23	788061	Seal Ring	2	65	780162	Washer	1
25	792073	Screw	17	65A	780160	Washer	2
26	792125	Retaining Ring (pkg. of 2)	4	66	776299	Input Shaft (3.522" lg.)	1
27	792035	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
28	788040	Retaining Ring	1	69	780161	Thrust Washer	1
29	780072	Washer	6	71	788069	Square Cut Ring	1
30	780108	Washer	3	71A	792145	Pushnut	1
30A	789145	Washer	1	76	780090	Washer	1
31	780001	Washer	2	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
32	792001	O-Ring	1	79	792144	Spring	1
33	788076	O-Ring	1	90	788067B	Grease (32 oz. btl. Bentonite grease)	1
34	780159	Bushing	1				
36	790071	Brake Disk	1	150	510334	Gasket Eliminator (Loctite #515)	1
37	790007	Brake Pad Plate	1				
38	790006	Brake Pad	2	161	776302	Reverse Idler Assembly	1
39	786026	Dowel Pin	2	174	780085	Needle Bearing	1
40	792076A	Washer	1				

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
	Engine - 10 H.P.	6	*	1	80-4390	Spacer - Hardened	14	16	1
	Engine - 12 H.P.	6	*	1	80-4570	Stiffener - Blade	14	19	1
106661	Cam	14	40	2	83-7020	Spacer - Bearing	14	15	1
111419	Washer - Fender	4	19	1	84-5610	Guide - Cable	7	12	1
116397	Relay	10	16	1	84-5610	Guide - Cable	8	16	1
117242	Decal - Made in USA	1	20	1	84-5610	Guide - Cable	9	16	1
700806	Knob - Studded	3	4	1	88-0890	Grip - Brake Rod	4	11	1
701178	Cap - Protector	1	6	2	88-3840-01	Body - Rear	1	5	1
702366	Clip - Wire Retainer	10	9	1	88-3850	Wheel - Steering	5	5	1
910478	Screw - Phillips Hd.	10	19	4	88-3870	Cover - Steering Wheel	5	6	1
3-6498	Washer - Thrust	5	11	1	88-3880	Tank - Gas	6	6	1
3-6498	Washer - Thrust	4	32	2	88-3900	Hood	2	18	1
5-4015	Bolt - Shoulder	8	2	1	88-3910	Tower - Steering	2	2	1
5-4015	Bolt - Shoulder	9	2	1	88-3930	Shield - Heat	2	14	1
5-4460	Washer - Fender	3	3	1	88-3940	Panel - Rear Hitch	1	10	1
5-4460	Washer - Fender	15	7	2	88-3950	Seat	3	*	1
5-4460	Washer - Fender	4	24	1	88-3960	Lens - Headlights	10	23	1
5-4460	Washer - Flat	7	9	4	88-3980	Cap - Gas	6	3	1
7-0030	Bolt - Shoulder	13	3	4	88-4040	Box - Battery	10	11	1
7-0030	Bolt - Shoulder	15	26	1	88-4050	Duct - Hood Air	2	17	1
7-0036	Key - Square	12	10	2	88-4060	Tire - 13	4	4	2
7-5461	Washer - Hardened	8	10	1	88-4080	Tire	12	8	2
7-5461	Washer - Hardened	9	10	1	88-4140	Nut - Wedge	2	23	2
26-0671	Bolt - Blade	6	17	1	88-4150	Plug	5	8	1
26-0671	Bolt - Blade	14	21	1	88-4160	Clamp - Pivot Rod	2	22	2
26-4840	Spacer	6	28	1	88-4170	Rod - Tower Pivot	2	24	1
26-6700	Spring - Extension	15	27	1	88-4190	Bushing - Sliding	5	3	1
26-6701	Spring - Brake Return	12	17	1	88-4220	Latch - Hood	2	16	1
27-0220	Screw - Plastite	6	5	4	88-4230	Trunnion - H.O.C. Rear	13	12	2
27-8890	Spring - Pedal Return	7	6	1	88-4270	Wheel & Tire Assembly	4	*	2
28-0540	Bolt - Shoulder	2	11	2	88-4290	Wheel & Tire Assembly	12	*	2
28-0540	Bolt - Shoulder	14	26	2	88-4310	Harness - Wire	10	1	1
28-2480	Washer	4	3	2	88-4330	Seat	3	1	1
28-2480	Washer	12	11	2	88-4340	Control - Throttle	6	4	1
28-7350	Post - Rear Pivot	14	4	1	88-4350	Cable - Throttle	6	2	1
28-8080	Boot - Battery Terminal	10	5	1	88-4360	Rim - Front Wheel	4	5	2
33-4750	Blade - 32	14	20	1	88-4380	Rim	12	9	2
37-8770	Bolt - Shoulder	7	2	1	88-4400	Bearing - Wheel	4	35	4
37-8770	Bolt - Shoulder	3	12	4	88-4410	Gasket - Muffler	6	22	1
38-1420	Switch - Seat	10	8	1	88-4460	Axle - Front	4	7	1
44-5720	Baffle - Deck	14	23	1	88-4480	Seal - Plunger	10	25	2
44-8110	Cable - Battery Negative	10	7	1	88-4530	Spindle - R.H.	4	6	1
46-8090	Screw - Plastite	2	15	8	88-4540	Hinge - Deflector Danger	14	34	1
46-8092	Screw - Plastite	2	8	2	88-4560	Deflector - Double Pivot	14	31	1
47-1910	Solenoid	10	17	1	88-4590	Bolt - Shoulder	15	16	1
47-2963	Line - Fuel	6	10	1	88-4620	Bracket - Idler Pivot	1	12	1
47-4990	Post	15	15	2	88-4630	Plate - Engine Mount	1	3	1
52-2891	Bushing - Steering Link	4	20	2	88-4650	Rail - R.H. Frame	1	4	1
54-9220	Decal - Danger	14	7	2	88-4660	Rail - L.H. Frame	1	13	1
55-4300	Decal - Caution	14	8	2	88-4670	Bushing - Eccentric	4	17	1
55-9321	Cable - Shotgo	8	5	1	88-4730	Clamp - H.O.C. Pivot	13	13	2
55-9321	Cable - Shotgo	9	5	1	88-4800	Bellcrank	7	19	1
56-2540	Vent - Tube	10	2	1	88-4810	Clamp - Shift Pivot	8	4	2
56-7030	Housing - Spindle	14	14	1	88-4810	Clamp - Shift Pivot	9	4	2
56-9830	Pad - Brake	15	11	1	88-4810	Clamp - Shift Pivot	7	22	1
56-9870	Pulley - Idler	15	22	1	88-4820	Bracket - Seat Hinge	3	13	2
61-9780	Cap - Hub	4	1	2	88-4830	Link - Drag	4	29	1
61-9780	Cap - Hub	12	13	2	88-4840	Pulley - Transmission	12	3	1
62-1292	Knob - Engage Lever	2	3	1	88-4880	Spacer - Microswitch	10	21	1
62-1292	Knob - Shift	13	6	1	88-4910	Support - Seat	3	2	1
62-1292	Knob - Shift	8	15	1	88-4930	Spindle - L.H.	4	31	1
62-1292	Knob - Shift	9	15	1	88-4940	Pan - Front Suspension	14	27	1
63-8360	Key - Ignition	10	12	1	88-4960	Shield - Exhaust Pipe	1	14	1
65-2920	Pad - Pedal	7	25	1	88-5000	Pedal - Clutch/Brake	7	24	1
66-1340	Decal - Danger	14	11	1	88-5010	Spacer - Steering Rack	4	26	1
67-0710	Ball - Swivel	15	30	1	88-5020	Gate - Shift	3	15	1
68-3650	Decal - Deflector Danger	14	5	1	88-5030	Gate - H.O.C.	3	8	1
76-3820	Anchor - Belt Guide	6	13	2	88-5040	Bolt - Shoulder	14	30	1
80-2240	Plate - Grille Panel	10	26	1	88-5050	Pulley - Engine	6	14	1
80-2600	Battery - 7 Plate	10	6	1	88-5060	Pulley - Deck	15	2	1
80-4350	Shaft - Spindle	14	18	1	88-5080	Pivot - Shift	8	6	1
80-4370	Shield - Bearing	14	17	1	88-5110	Pivot - H.O.C.	13	14	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-834a

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.			
		No.	Qty.			No.	Qty.		
88-5120	Support - Front Axle	1	17	1	92-2482	Decal - Engine 12 H.P.	6	9	1
88-5130	Bracket - Steering Rack	4	14	1	92-2484	Decal - Instruction	1	19	1
88-5150	Bushing - Flange	5	10	1	92-2488	Decal - Rear Body	1	18	1
88-5160	Cover - Shift Gate	3	14	1	92-2489	Decal - Rear Body	1	*	1
88-5170	Cover - H.O.C.	3	6	1	92-2493	Spring - Torsion	14	3	1
88-5190	Lever - Deck Engage	2	1	1	92-2494	Ramp - Deflector	14	38	1
88-5200	Rack - Steering	4	18	1	92-5730	Decal - Throttle	2	*	1
88-5220	Mat - R.H. Foot	3	16	1	92-5732	Decal - Ignition	2	*	1
88-5240	Mat - L.H. Foot	3	9	1	92-5733	Decal - Deck Engage	2	*	1
88-5260	Bracket - Transaxle Mount	1	11	2	92-5748	Decal - Air Duct	2	27	1
88-5270	Rod - Clutch/Brake	7	1	1	92-5776	Spacer - Deflector	14	41	1
88-5300	Lever - Shift	8	1	1	92-5782	Patch - Heat Tape	2	26	1
88-5300	Lever - Shift	9	1	1	92-5794	Lever - Shift Pivot	9	21	1
88-5310	Lever - H.O.C.	13	7	1	92-5796	Pivot - Shift	9	6	1
88-5340	Lever - Trans. Shift	8	9	1	218-461	Nut - Hex	10	13	1
88-5340	Lever - Trans. Shift	9	9	1	231-91	Tube - Inner (Optional)	12	*	2
88-5350	Strap - Torque	12	16	2	232-27	Valve Stem w/Cap	12	18	2
88-5370	Plate - Idler Mount	15	28	1	232-27	Valve Stem w/Cap	4	36	2
88-5380	Rod - Steering Tie	4	8	1	232-40	Tube - Inner (Optional)	4	*	2
88-5450	Rod - Hanger Rear	13	11	2	2412-98	Clamp - Hose	6	11	2
88-5460	Guide - Trans. Belt	7	10	2	251-297	Bearing - Spindle	14	36	2
88-5470	Spacer - Front Axle	4	34	2	302-5	Fitting - Grease	4	37	2
88-5490	Guide - Belt R.H.	6	21	1	302-11	Fitting - Grease	12	7	2
88-5500	Rod - Pedal Pivot	7	18	1	302-26	Fitting - Grease	4	16	1
88-5510	Rod - Parking Brake	4	9	1	321-4	Screw - Hex Hd. Cap	10	3	2
88-5520	Bracket - Parking Brake	4	10	1	321-4	Screw - Hex Hd. Cap	5	4	2
88-5530	Rod - Shift Tie	8	7	1	321-4	Screw - Hex Hd. Cap	2	10	4
88-5530	Rod - Shift Tie	9	7	1	321-4	Screw - Hex Hd. Cap	6	26	1
88-5560	Guide - Idler Belt	7	3	1	322-3	Screw - Hex Hd. Cap	1	2	22
88-5570	Link - Adjusting H.O.C.	13	1	2	322-3	Screw - Hex Hd. Cap	13	4	4
88-5640	Bracket - R.H.	14	28	1	322-3	Screw - Hex Hd. Cap	2	4	2
88-5650	Bracket - L.H.	14	25	1	322-3	Screw - Hex Hd. Cap	14	6	10
88-5680	Pulley - Flat Idler	7	4	1	322-3	Screw - Hex Hd. Cap	3	11	4
88-5690	Rod - Deck Brake	15	19	1	322-3	Screw - Hex Hd. Cap	8	13	2
88-5760	Guide - Belt	15	3	2	322-3	Screw - Hex Hd. Cap	9	13	3
88-5790-01	Cutter Deck - 32"	14	9	1	322-3	Screw - Hex Hd. Cap	7	17	2
88-5800	Bushing - Steering Spindle	4	33	4	322-3	Screw - Hex Hd. Cap	15	29	2
88-5850	Arm - Idler	15	23	1	322-5	Screw - Hex Hd. Cap	15	6	2
88-5900	Link - H.O.C.	13	8	1	322-5	Screw - Hex Hd. Cap	1	7	2
88-5920	Rod - Gas Tank	6	7	1	322-5	Screw - Hex Hd. Cap	7	8	1
88-5930	Keeper - Cable	8	17	1	322-6	Screw - Hex Hd. Cap	14	39	2
88-5930	Keeper - Cable	9	17	1	322-7	Screw - Hex Hd. Cap	7	11	1
88-5980	Rod - Deck Engage	15	24	1	322-9	Screw - Hex Hd. Cap	6	18	4
88-6040	Bracket - Hood Pivot R.H.	2	19	1	322-12	Screw - Hex Hd. Cap	12	14	4
88-6050	Bracket - Hood Pivot L.H.	2	12	1	322-12	Screw - Hex Hd. Cap	14	29	2
88-6060	Guide - Belt L.H.	6	12	1	323-11	Screw - Hex Hd. Cap	7	5	1
88-6070	Arm - Idler	7	16	1	323-13	Screw - Hex Hd. Cap	4	27	2
88-6110	Deck Brake Assembly	15	17	1	329-23	Screw - Hex Hd. Cap	8	12	1
88-6140	Spring - Brake	7	7	1	329-23	Screw - Hex Hd. Cap	9	12	1
88-6150	Rod - Deflector Hinge	14	33	1	3219-7	Nut - Lock	15	1	1
88-6160	Spring - Torsion	14	32	1	3230-1	Bolt - Carriage	4	15	4
88-6220	Spring - Compression	1	8	2	3230-3	Bolt - Carriage	8	18	1
88-6260	V-Belt	15	13	1	3230-3	Bolt - Carriage	9	18	1
88-6270	V-Belt - Traction	12	5	1	3230-3	Bolt - Carriage	7	21	1
88-6290	Shield - Muffler	1	15	1	3230-3	Screw - Carriage	4	28	1
88-6330	Spring - Extension	15	5	1	3231-4	Screw - Carriage	4	13	1
88-6330	Spring - Extension	7	14	1	3234-13	Screw - Hex Flange Hd.	15	25	2
88-6380	Shaft - Steering	5	9	1	3253-3	Washer - Lock	8	11	1
88-6420	Spring/Cable Assembly	15	12	1	3253-3	Washer - Lock	9	11	1
88-6450	Transaxle	12	6	1	3253-3	Washer - Lock	6	27	1
88-6460	Spring - Extension	13	2	1	3253-4	Washer - Lock	6	23	2
88-6480	Muffler	6	25	1	3253-22	Washer - Lock	6	16	1
88-9780	Ring - Wet Grass	14	12	4	3254-5	Washer - Lock	10	14	1
88-9830	Switch - Ignition	10	15	1	3255-7	Washer - Ext. Tooth Lock	10	24	2
88-9931	Switch - Micro	10	20	2	3255-8	Washer - Ext. Tooth Lock	6	19	1
92-2461	Decal - Throttle	2	29	1	3256-22	Washer - Flat	5	2	2
92-2462	Decal - Deck Engage	2	30	1	3256-23	Washer - Flat	1	1	4
92-2467	Decal - Hood R.H.	2	*	1	3256-23	Washer - Flat	2	5	2
92-2468	Decal - Hood L.H.	2	25	1	3256-23	Washer - Flat	8	14	2
92-2473	Decal - Tower 1032XL	2	31	2	3256-23	Washer - Flat	9	14	2
92-2478	Decal - Ignition	2	28	1	3256-23	Washer - Flat	12	15	8
92-2480	Decal - Tower 1232XL	2	*	2	3256-23	Washer - Flat	15	18	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
3256-23	Washer - Flat	7	26	3296-29	Nut - Lock	4	12
3256-23	Washer - Flat	14	37	3296-29	Nut - Lock	7	13
3256-24	Washer - Flat	13	10	3296-39	Nut - Lock	8	19
3256-24	Washer - Flat	15	14	3296-39	Nut - Lock	9	19
3256-24	Washer - Flat	2	20	3296-39	Nut - Lock	15	21
3256-24	Washer - Flat	4	25	3296-39	Nut - Lock	4	21
3256-25	Washer - Flat	6	15	3296-42	Nut - Lock	14	1
3256-25	Washer - Flat	8	20	3296-42	Nut - Lock	5	1
3256-25	Washer - Flat	9	20	3296-42	Nut - Lock	15	4
3256-25	Washer - Flat	4	22	3296-42	Nut - Lock	2	9
3256-26	Washer - Flat	7	20	3296-59	Nut - Lock	7	15
3256-58	Washer - Fender	14	2	3296-59	Nut - Lock	14	24
3257-23	Key - Woodruff	12	4	32103-22	Nut - Wing	10	4
3269-5	Rivet - Pop	3	7	32104-76	Screw - Thread Tapping	1	16
3269-6	Washer - Backup	3	17	32120-64	Ring - Snap	12	2
3272-10	Pin - Cotter	4	23	32121-78	Pin - Roll	5	7
3272-10	Pin - Cotter	7	23	32122-14	Screw - Truss Hd.	14	13
3272-12	Pin - Cotter	4	2	32128-43	Nut - Flange	2	21
3274-12	Screw - Hex Soc. Hd.	6	24	32144-4	Screw - Hex Hd. Thr'd	10	10
3290-282	Rivet - Pop	15	10	32149-1	Nut - Keps	6	20
3290-299	Nut - Tinnerman	10	27	32149-2	Nut - Keps	10	18
3290-307	Pin - Cotter	2	7	32151-48	E-Ring	12	12
3290-307	Pin - Hair Cotter	13	9	32151-48	E-Ring	5	12
3290-307	Pin - Hair Cotter	15	20	32151-48	E-Ring	4	30
3290-354	Speednut	10	22				
3290-465	Washer - Belleville	14	22				
3290-479	Fastener - Panel	3	5				
3290-496	Nut - Retained	15	8				
3290-496	Nut - Retained	2	13				
3296-3	Nut - Lock	8	8				
3296-3	Nut - Lock	9	8				
3296-29	Nut - Lock	12	1				
3296-29	Nut - Lock	8	3				
3296-29	Nut - Lock	9	3				
3296-29	Nut - Lock	13	5				
3296-29	Nut - Lock	2	6				
3296-29	Nut - Lock	6	8				
3296-29	Nut - Lock	1	9				
3296-29	Nut - Lock	15	9				
3296-29	Nut - Lock	14	10				
3296-29	Nut - Lock	3	10				

OPTIONAL EQUIPMENT

Easy Empty Bagger Kit	Model No. 79095
Twin Bagger	Model No. 79085
Headlight Kit	Model No. 79180
Recycler Kit	Model No. 59167
Wheel Weight Kit	Model No. 59159
42" Snowblade Kit	Model No. 79150
Wet Grass Bagging Kit	
(Model No. 71140 Only)	Part No. 38-5730
Tire Chains	Part No. 47-7220