



## LX465 Lawn Tractor

Model No. 13AX61RH744 - 1A117H10393 and up.

Model No. 13AX61RH748 - 1A117H10393 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                                 | Page     | Description                                          | Page     |
|---------------------------------------------|----------|------------------------------------------------------|----------|
| Front and Rear Wheel Assembly               | ..... 3  | Oil Pan and Lubrication Assembly Kohler SV600-0018   | ..... 21 |
| Deck Lift Arm Assembly                      | ..... 4  | Head, Valve and Breather Assembly Kohler SV600-0018  | ..... 22 |
| Steering Shaft and Front Axle Assembly      | ..... 5  | Ignition and Electrical Assembly Kohler SV600-0018   | ..... 23 |
| Frame and Battery Assembly                  | ..... 6  | Blower Housing Assembly Kohler SV600-0018            | ..... 24 |
| Seat and Fender Assembly                    | ..... 7  | Starting System Assembly Kohler SV600-0018           | ..... 25 |
| Fuel Tank and Hood Assembly                 | ..... 8  | Fuel System Assembly Kohler SV600-0018               | ..... 26 |
| Transmission, Belt and Pulley Assembly      | ..... 10 | Engine Control Assembly Kohler SV600-0018            | ..... 27 |
| Brake and Traction Pedal Assembly           | ..... 12 | Air Intake and Filtration Assembly Kohler SV600-0018 | ..... 28 |
| PTO Engage Assembly                         | ..... 13 | Exhaust Stud and Decal Assembly Kohler SV600-0018    | ..... 29 |
| Deck Assembly                               | ..... 14 |                                                      |          |
| Single Pulley Spindle Assembly No. 112-0311 | ..... 16 |                                                      |          |
| Double Pulley Spindle Assembly No. 112-0383 | ..... 17 |                                                      |          |
| Muffler Assembly                            | ..... 18 |                                                      |          |
| Crankshaft Assembly Kohler SV600-0018       | ..... 19 |                                                      |          |
| Crankcase Assembly Kohler SV600-0018        | ..... 20 |                                                      |          |

## Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HSH. .... hex socket head                  | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |

## Footnotes


- |                                        |                                      |
|----------------------------------------|--------------------------------------|
| ❶ Not illustrated                      | ❷ Not serviced separately            |
| ❸ Obtain from your local Kohler dealer | ❹ Obtain from your local Toro dealer |



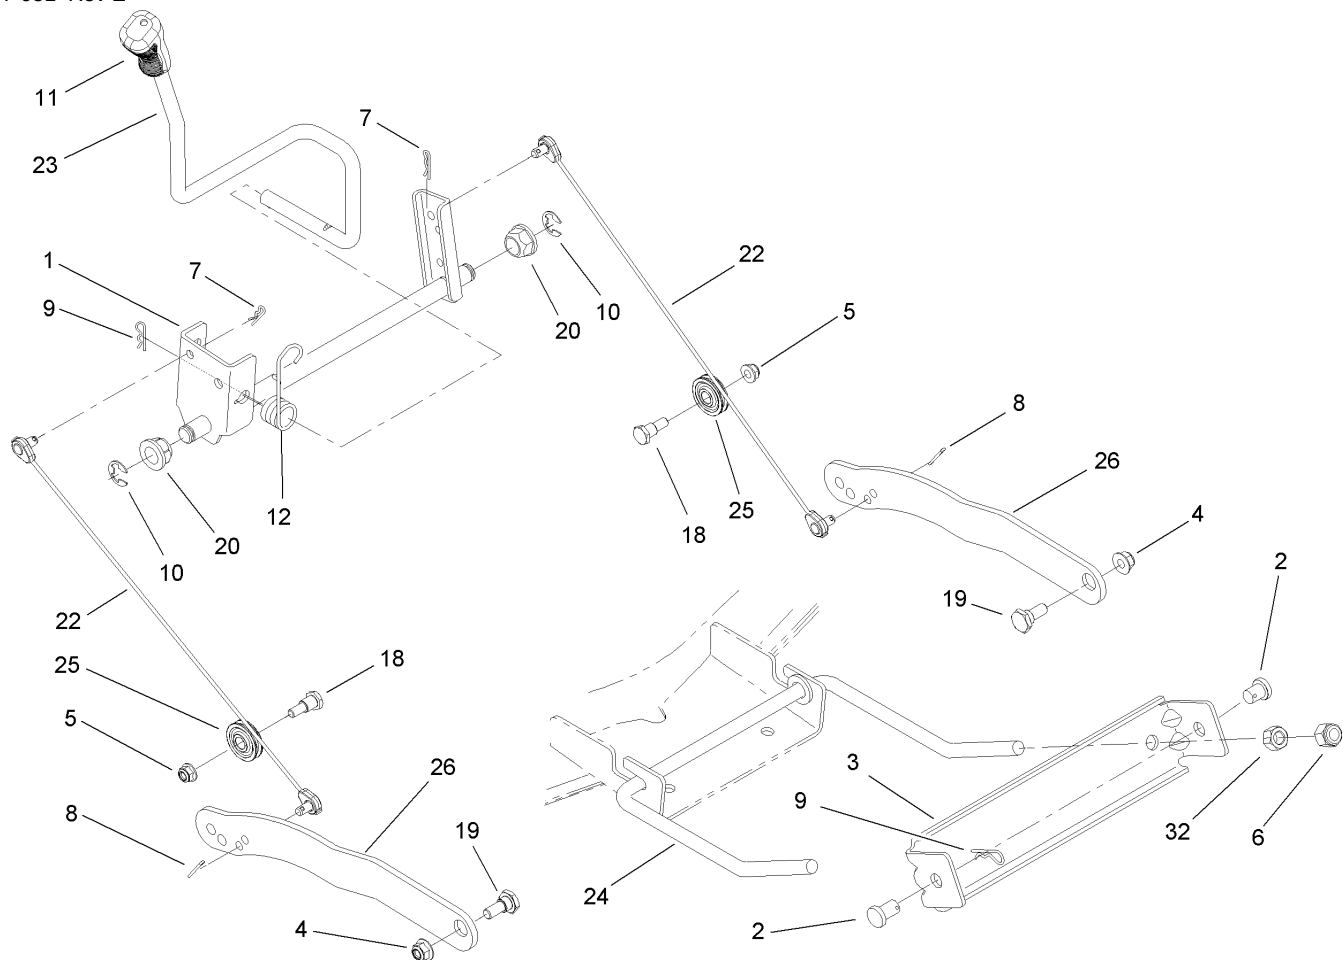

Deck Lift Arm Assembly


| Ref | Part No. | Qty. | Description           |  |  |  |  |
|-----|----------|------|-----------------------|--|--|--|--|
| 1   | 112-5969 | 1    | Lift Shaft ASM        |  |  |  |  |
| 2   | 112-0376 | 1    | Pin-Bracket, Lift     |  |  |  |  |
| 3   | 112-0707 | 1    | Bracket-Stabilizer    |  |  |  |  |
| 4   | 112-0668 | 1    | Nut-Lock, Flange      |  |  |  |  |
| 5   | 112-0650 | 1    | Nut-Lock, Flange      |  |  |  |  |
| 6   | 112-0476 | 1    | Nut-Lock, Hex (Nylon) |  |  |  |  |
| 7   | 112-0459 | 1    | Pin-Cotter            |  |  |  |  |
| 8   | 112-0568 | 1    | Pin-Cotter            |  |  |  |  |
| 9   | 112-0394 | 1    | Pin-Hair              |  |  |  |  |
| 10  | 112-0586 | 1    | Ring-E                |  |  |  |  |
| 11  | 112-0585 | 1    | Grip-Handle           |  |  |  |  |
| 12  | 112-0477 | 1    | Spring-Torsion        |  |  |  |  |
| 18  | 112-0443 | 1    | Bolt-Shoulder         |  |  |  |  |
| 19  | 112-0565 | 1    | Bolt-Shoulder         |  |  |  |  |
| 20  | 112-0347 | 1    | Bearing-Flange        |  |  |  |  |
| 22  | 112-0374 | 1    | Cable-Lift            |  |  |  |  |
| 23  | 112-5970 | 1    | Handle-Lift           |  |  |  |  |
| 24  | 112-0456 | 1    | Rod-Front, Adjust     |  |  |  |  |
| 25  | 112-0502 | 1    | Pulley-Roller         |  |  |  |  |
| 26  | 112-0724 | 1    | Link-Lift             |  |  |  |  |
| 32  | 112-0458 | 1    | Nut-Hex               |  |  |  |  |

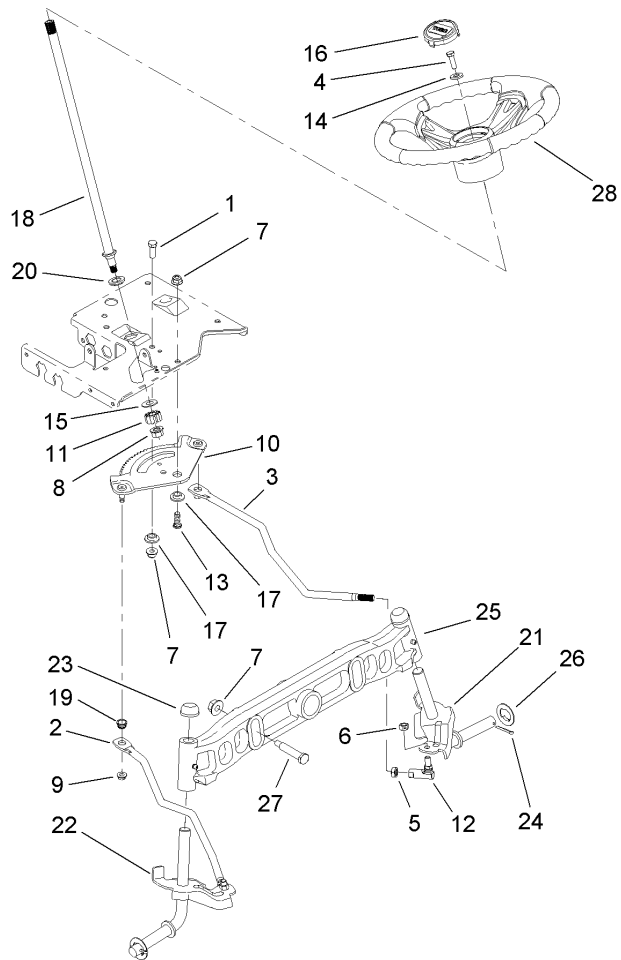 

## Steering Shaft and Front Axle Assembly

| Ref | Part No. | Qty. | Description           |
|-----|----------|------|-----------------------|
| 1   | 112-0492 | 1    | Screw-HH              |
| 2   | 112-0355 | 1    | Link-Drag, RH         |
| 3   | 112-0346 | 1    | Link-Drag, LH         |
| 4   | 112-0473 | 1    | Screw-HH              |
| 5   | 112-0493 | 1    | Nut-Jam               |
| 6   | 112-0483 | 1    | Nut-Hex, Lock         |
| 7   | 112-0668 | 1    | Nut-Lock, Flange      |
| 8   | 112-0859 | 1    | Nut-Lock, Flange      |
| 9   | 112-0511 | 1    | Nut-Lock, Flange      |
| 10  | 112-0862 | 1    | Gear-Steering         |
| 11  | 112-0863 | 1    | Gear-Pinion, Steering |
| 12  | 112-0917 | 1    | Ball Joint ASM        |
| 13  | 112-0631 | 1    | Screw-HH              |
| 14  | 112-0924 | 1    | Washer-Flat           |
| 15  | 112-0925 | 1    | Washer-Flat           |
| 16  | 112-3734 | 1    | Cap-Wheel, Steering   |
| 17  | 112-0881 | 1    | Spacer-Shoulder       |
| 18  | 112-5804 | 1    | Shaft-Steering        |
| 19  | 112-0929 | 1    | Bushing               |
| 20  | 112-0930 | 1    | Bearing-Flange, Hex   |
| 21  | 112-6015 | 1    | RH Axle ASM           |
| 22  | 112-6016 | 1    | LH Axle ASM           |
| 23  | 112-0323 | 1    | Cap                   |
| 24  | 112-0519 | 1    | Pin-Cotter            |

 
| Ref | Part No. | Qty. | Description              |
|-----|----------|------|--------------------------|
| 25  | 112-5971 | 1    | Axle-Pivot, Front        |
| 26  | 112-5972 | 1    | Washer-Flat              |
| 27  | 112-0486 | 1    | Bolt-Shoulder            |
| 28  | 112-5973 | 1    | Wheel-Steering, Softgrip |

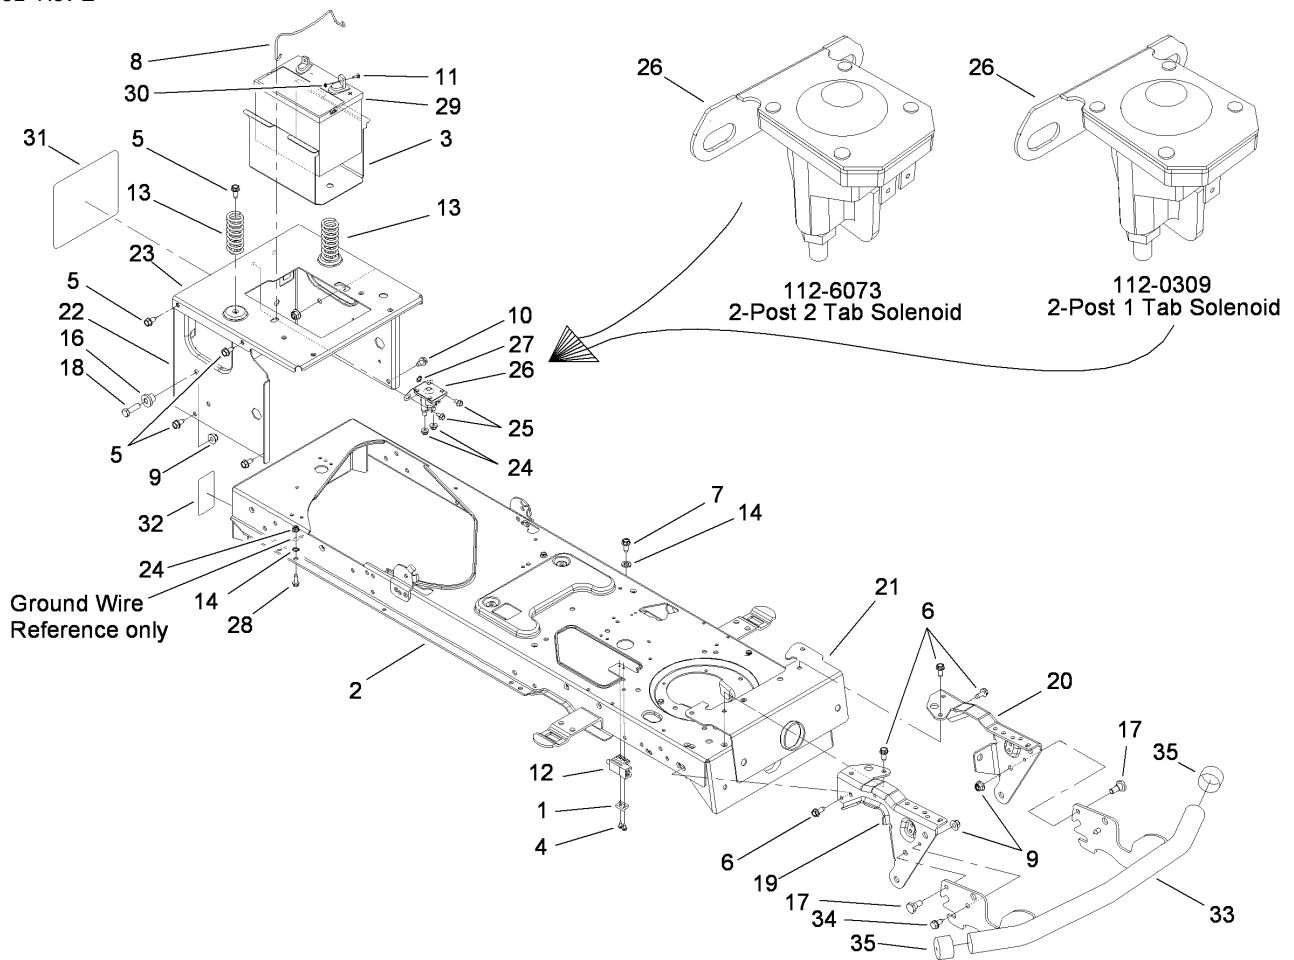

## Frame and Battery Assembly


| Ref | Part No. | Qty. | Description            |
|-----|----------|------|------------------------|
| 1   | 112-0671 | 1    | Plate-Switch           |
| 2   | 112-5974 | 1    | Lower Frame ASM        |
| 3   | 112-0570 | 1    | Tray-Battery           |
| 4   | 112-0651 | 1    | Screw-TAP              |
| 5   | 112-5975 | 1    | Screw-HH, TAP          |
| 6   | 112-0395 | 1    | Screw-HWH              |
| 7   | 112-0659 | 1    | Screw-HWH              |
| 8   | 112-0581 | 1    | Rod-Holddown, Battery  |
| 9   | 112-0668 | 1    | Nut-Lock, Flange       |
| 10  | 112-0676 | 1    | Screw-TAP              |
| 11  | 112-1070 | 1    | Bolt-Carriage          |
| 12  | 112-0455 | 1    | Switch-Interlock       |
| 13  | 112-0501 | 1    | Spring-Compression     |
| 14  | 112-0703 | 1    | Washer-Lock, External  |
| 16  | 112-0661 | 1    | Spacer-Shoulder        |
| 17  | 112-0565 | 1    | Bolt-Shoulder          |
| 18  | 112-0557 | 1    | Screw-HH               |
| 19  | 112-0620 | 1    | Bracket-Pivot, Support |
| 20  | 112-0610 | 1    | Bracket-Pivot, Support |
| 21  | 112-5977 | 1    | Bracket-Pivot, Bar     |
| 22  | 112-0728 | 1    | Frame-Upper            |
| 23  | 112-0647 | 1    | Bracket-Frame, Seat    |
| 24  | 112-0636 | 1    | Nut-Lock, Flange       |
| 25  | 112-0524 | 1    | Screw-HWHTF            |
 
| Ref | Part No. | Qty. | Description                     |
|-----|----------|------|---------------------------------|
| 26  | 112-0309 | 1    | Solenoid-12V, 2 Post 2 Tab      |
| 26  | 112-6073 | 1    | Solenoid-12V, 2 Post 1 Tab      |
| 27  | 112-0703 | 1    | Washer-Lock, External           |
| 28  | 112-0587 | 1    | Screw-TAP                       |
| 29  | 112-0425 | 1    | Battery-245, Cca (Dry Flat Top) |
| 30  | 112-5978 | 1    | Nut-Sems                        |
| 31  | 112-1284 | 1    | Decal-Toro                      |
| 32  | 112-5962 | 1    | Decal-Hydro, Toe Valve          |
| 33  | 112-0954 | 1    | Bumper ASM                      |
| 34  | 112-0472 | 1    | Screw-HH, TAP                   |
| 35  | 112-5968 | 1    | Cap-Hub                         |

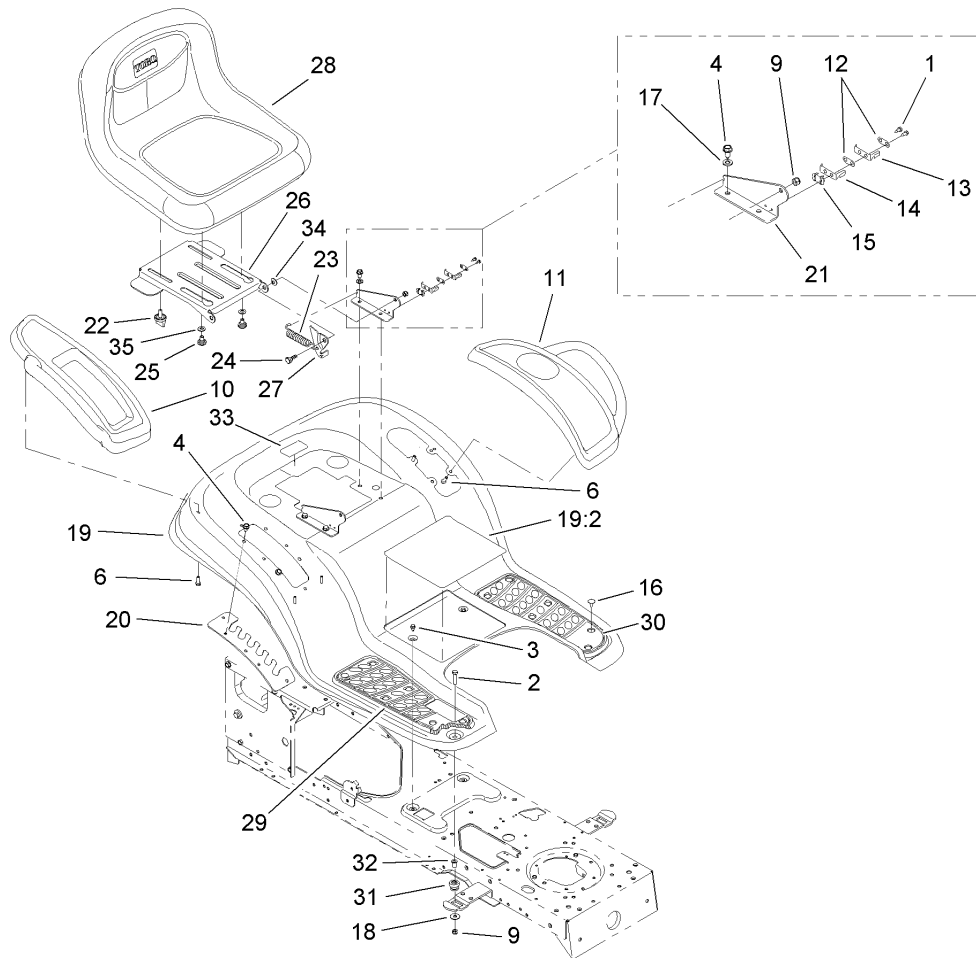


## Seat and Fender Assembly
 
| Ref  | Part No. | Qty. | Description             | Ref | Part No. | Qty. | Description                  |
|------|----------|------|-------------------------|-----|----------|------|------------------------------|
| 1    | 112-0626 | 1    | Screw-HWHTF             | 27  | 112-0646 | 1    | Bracket-Lift, LH             |
| 2    | 112-0373 | 1    | Screw-HH                | 28  | 112-6018 | 1    | Seat-Medium Back             |
| 3    | 112-0524 | 1    | Screw-HWHTF             | 29  | 112-0540 | 1    | Pad-Foot, RH                 |
| 4    | 112-0556 | 1    | Screw-HWH               | 30  | 112-0545 | 1    | Pad-Foot, LH                 |
| 6    | 112-0509 | 1    | Screw-TAP               | 31  | 112-3732 | 1    | Grommet                      |
| 9    | 112-0650 | 1    | Nut-Lock, Flange        | 32  | 112-3733 | 1    | Spacer                       |
| 10   | 112-0471 | 1    | Cover-Fender, RH        | 33  | 112-1260 | 1    | Decal-Service (Toro Hotline) |
| 11   | 112-6065 | 1    | Fender-LH               | 34  | 112-5979 | 1    | Washer-Bell                  |
| 12   | 112-0635 | 1    | Plate-Insulator         | 35  | 112-5980 | 1    | Washer-Flat                  |
| 13   | 112-0529 | 1    | Switch-Spring           |     |          |      |                              |
| 14   | 112-0532 | 1    | Switch-Spring, Inner    |     |          |      |                              |
| 15   | 112-0637 | 1    | Plate-Boss, Insulator   |     |          |      |                              |
| 16   | 112-0549 | 1    | Clip-Ratchet, Fastener  |     |          |      |                              |
| 17   | 112-0517 | 1    | Washer-Lock, External   |     |          |      |                              |
| 18   | 112-0582 | 1    | Washer-Flat             |     |          |      |                              |
| 19   | 112-5855 | 1    | Fender And Decal ASM    |     |          |      |                              |
| 19:2 | 112-1262 | 1    | Decal-Danger            |     |          |      |                              |
| 20   | 112-0629 | 1    | Bracket-Adjusting, Lift |     |          |      |                              |
| 21   | 112-0905 | 1    | Bracket-Mount, Seat     |     |          |      |                              |
| 22   | 112-0409 | 1    | Knob                    |     |          |      |                              |
| 23   | 112-0616 | 1    | Spring-Extension        |     |          |      |                              |
| 24   | 112-0575 | 1    | Bolt-Shoulder           |     |          |      |                              |
| 25   | 112-0554 | 1    | Bolt-Shoulder           |     |          |      |                              |
| 26   | 112-0593 | 1    | Bracket-Seat            |     |          |      |                              |

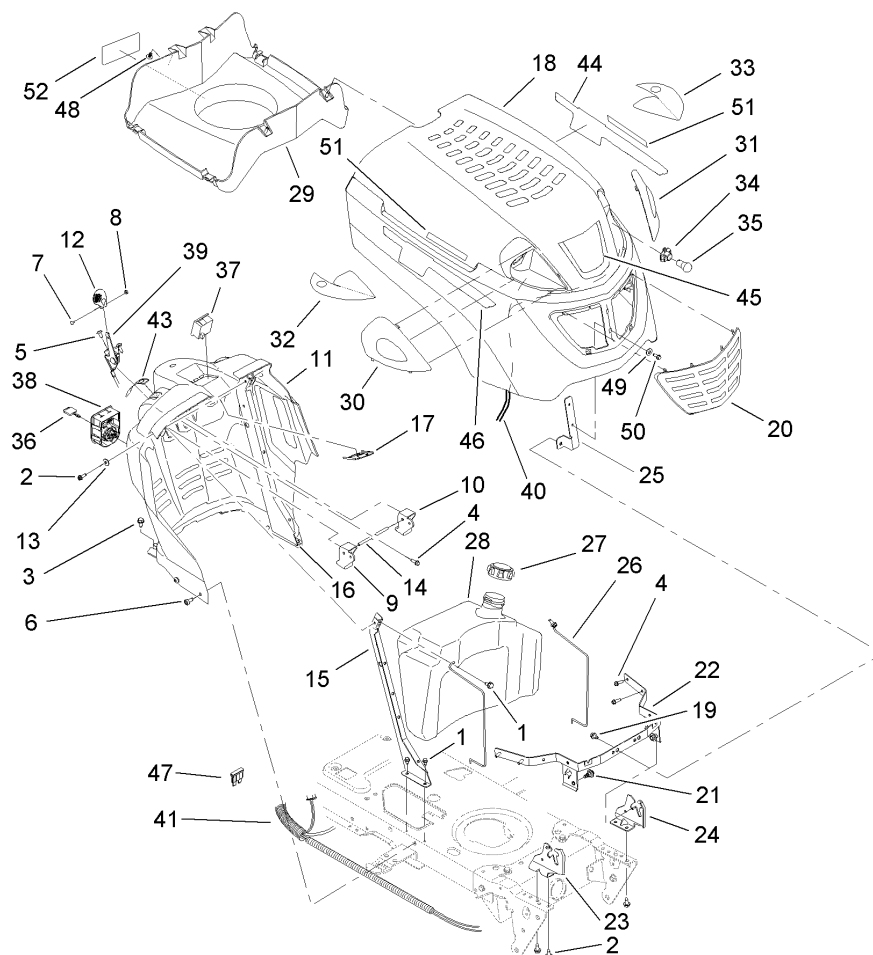

## Fuel Tank and Hood Assembly


| Ref | Part No. | Qty. | Description              | Ref | Part No. | Qty. | Description                           |
|-----|----------|------|--------------------------|-----|----------|------|---------------------------------------|
| 1   | 112-0524 | 1    | Screw-HWHTF              | 25  | 112-5986 | 1    | Bracket-Support, Hood                 |
| 2   | 112-0587 | 1    | Screw-TAP                | 26  | 112-0678 | 1    | Rod-Support                           |
| 3   | 112-5981 | 1    | Screw-HH, TAP            | 27  | 112-0321 | 1    | Cap-Fuel                              |
| 4   | 112-0509 | 1    | Screw-TAP                | 28  | 112-5987 | 1    | Fuel-Tank, 3 Gallon                   |
| 5   | 112-0550 | 1    | Screw-TAP                | 29  | 112-5802 | 1    | Plenum-Hood                           |
| 6   | 112-0563 | 1    | Screw-TAP                | 30  | 112-0447 | 1    | Lens-RH                               |
| 7   | 112-0478 | 1    | Screw-PTH                | 31  | 112-0446 | 1    | Lens-LH                               |
| 8   | 112-0515 | 1    | Nut-Hex                  | 32  | 112-5810 | 1    | Reflector-RH                          |
| 9   | 112-0526 | 1    | Lever-Cruise             | 33  | 112-5811 | 1    | Reflector-LH                          |
| 10  | 112-0580 | 1    | Lever-Brake              | 34  | 112-0408 | 1    | Socket-Headlight                      |
| 11  | 112-5982 | 1    | Dash                     | 35  | 112-0402 | 1    | Lamp-12V, Miniature                   |
| 12  | 112-0474 | 1    | Knob-Control             | 36  | 112-0312 | 1    | Key-Ignition                          |
| 13  | 112-0485 | 1    | Washer-Spring            | 37  | 112-0336 | 1    | Meter-Indicator, Systems              |
| 14  | 112-0604 | 1    | Rod-Lever, Bent          | 38  | 112-0865 | 1    | Module-Switch, Ignition               |
| 15  | 112-5983 | 1    | Support-Dash, RH         | 39  | 112-0489 | 1    | Cable-Throttle And Choke              |
| 16  | 112-5984 | 1    | Support-Dash, LH         | 40  | 112-0480 | 1    | Harness-Headlight                     |
| 17  | 112-5809 | 1    | Bracket-PTO              | 41  | 112-0595 | 1    | Harness-Wire                          |
| 18  | 112-0444 | 1    | Hood                     | 41  | 112-6074 | 1    | Harness-Wire, 2 Post 2 Tab (Solenoid) |
| 19  | 112-0906 | 1    | Screw-HWHTF              | 43  | 112-1271 | 1    | Decal-Throttle, Dash                  |
| 20  | 112-0381 | 1    | Grill                    | 44  | 112-5952 | 1    | Decal-Hood, Left Side                 |
| 21  | 112-0597 | 1    | Bolt-Shoulder            | 45  | 112-3716 | 1    | Decal-Hood                            |
| 22  | 112-5985 | 1    | Bracket-Pivot            | 46  | 112-5953 | 1    | Decal-Hood, Right Side                |
| 23  | 112-0727 | 1    | Bracket-Pivot, Hood (RH) | 47  | 112-5943 | 1    | Fuse-20 Amp                           |
| 24  | 112-0726 | 1    | Bracket-Pivot, Hood (LH) |     |          |      |                                       |

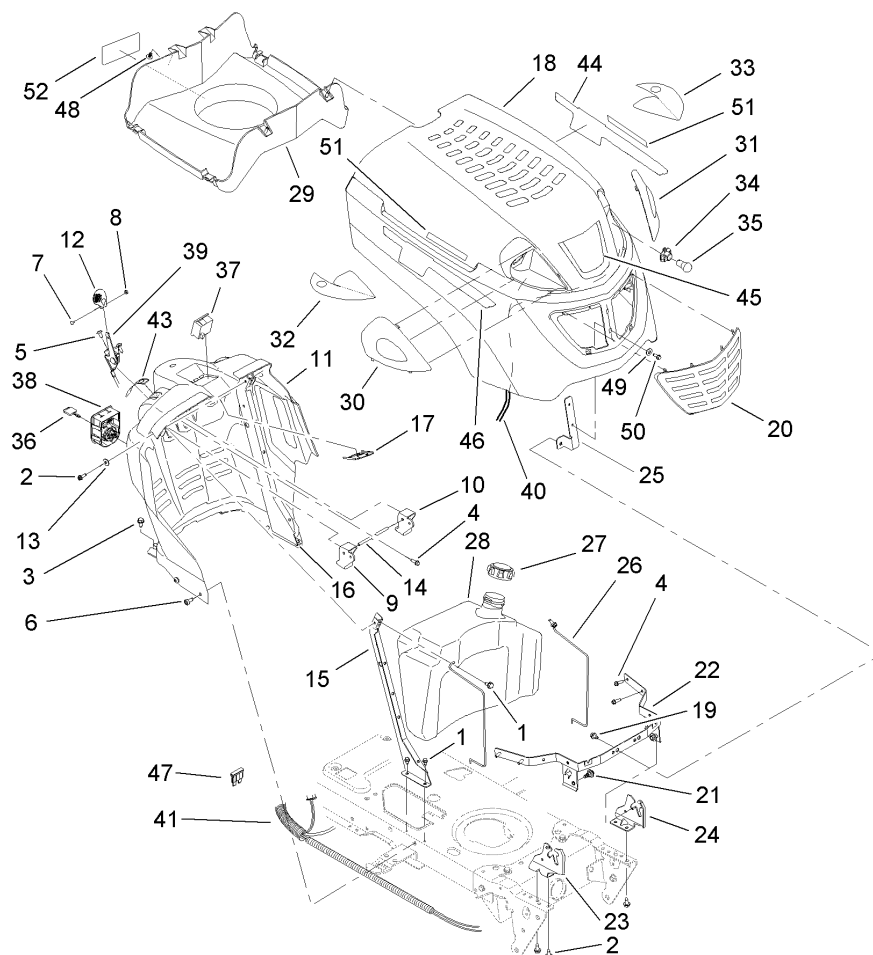

## Fuel Tank and Hood Assembly (continued)

| Ref | Part No. | Qty. | Description          |
|-----|----------|------|----------------------|
| 48  | 112-5988 | 1    | Clip-Ratchet         |
| 49  | 112-5989 | 1    | Washer-Flat          |
| 50  | 112-0587 | 1    | Screw-TAP            |
| 51  | 112-5955 | 1    | Decal-Panel, Side    |
| 52  | 112-5957 | 1    | Decal-Parts, Service |

 
# Transmission, Belt and Pulley Assembly

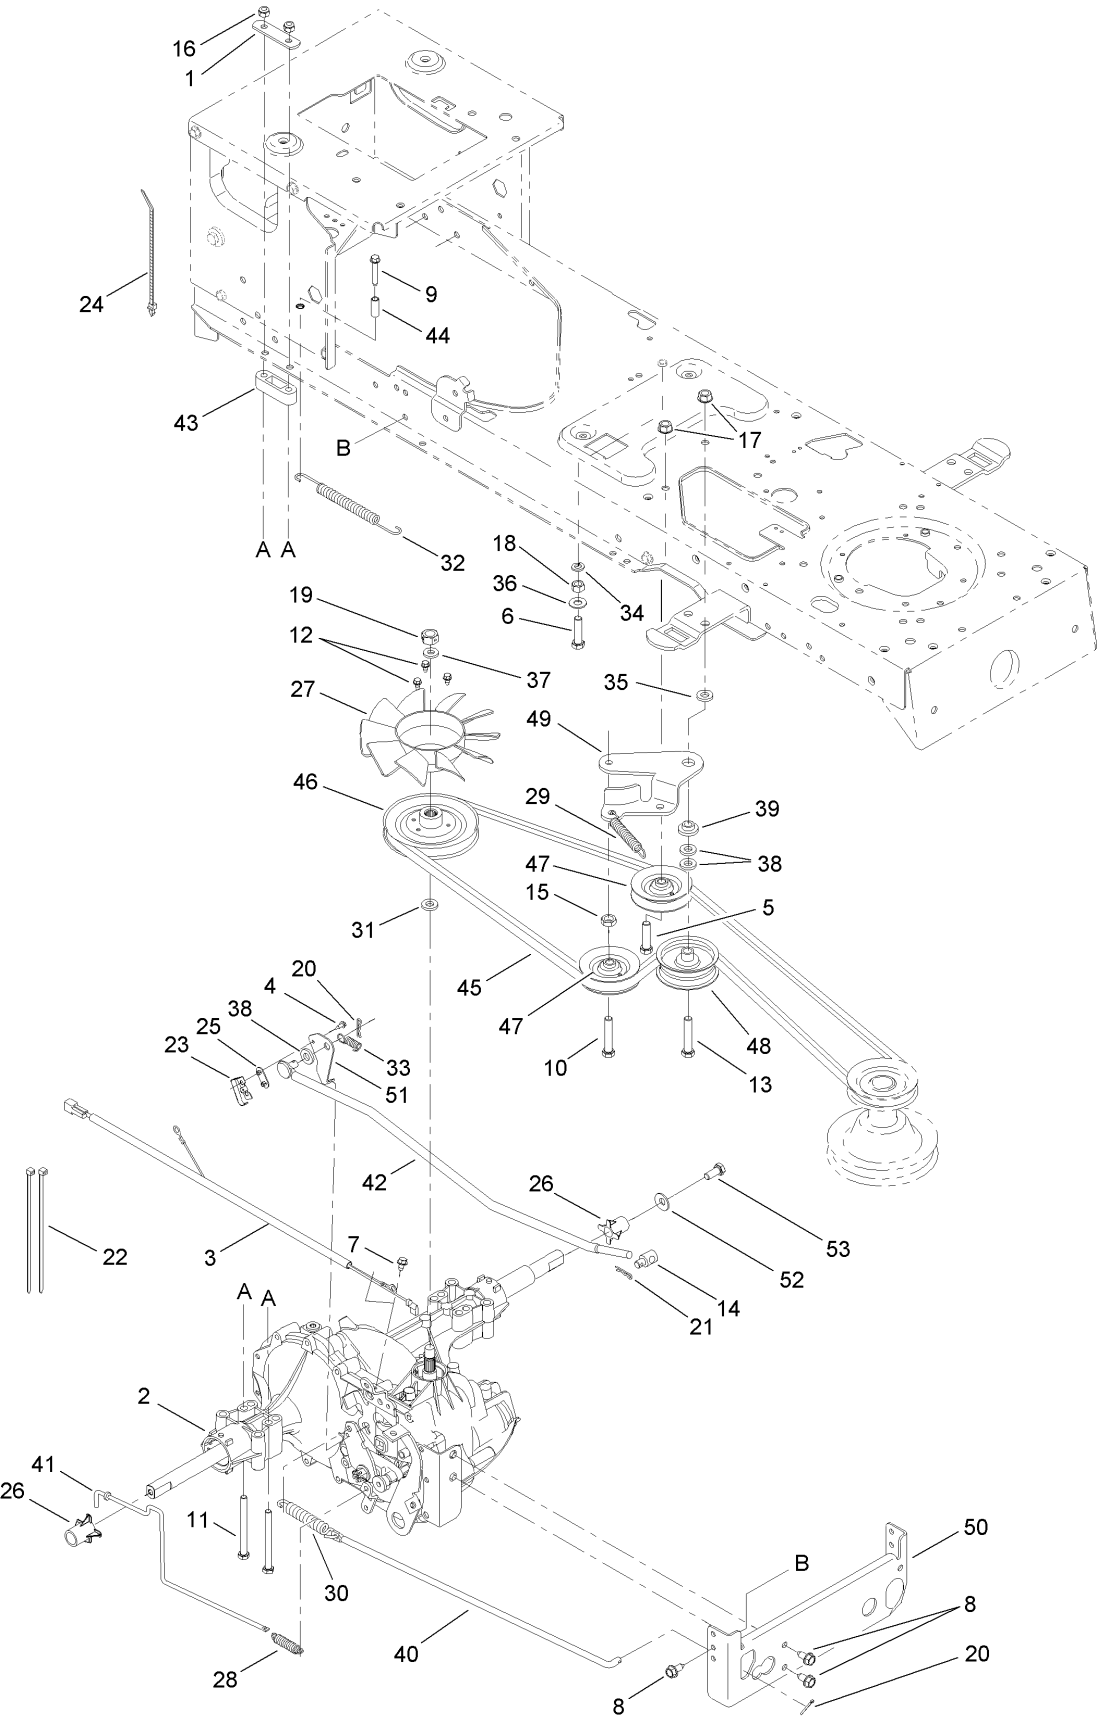

# Transmission, Belt and Pulley Assembly

| Ref | Part No. | Qty. | Description                    |
|-----|----------|------|--------------------------------|
| 1   | 112-0628 | 1    | Bracket-Mounting, Transmission |
| 2   | 112-6019 | 1    | Hydro Transmission ASM         |
| 3   | 112-6020 | 1    | Harness ASM                    |
| 4   | 112-0626 | 1    | Screw-HWHTF                    |
| 5   | 112-6021 | 1    | Screw-HHFTF                    |
| 6   | 112-0578 | 1    | Screw-HH                       |
| 7   | 112-6022 | 1    | Screw-TAP                      |
| 8   | 112-0472 | 1    | Screw-HH, TAP                  |
| 9   | 112-0843 | 1    | Screw-HWH                      |
| 10  | 112-0469 | 1    | Screw-TAP                      |
| 11  | 112-0667 | 1    | Screw-HH                       |
| 12  | 112-6023 | 1    | Screw-HH, TAP                  |
| 13  | 112-0700 | 1    | Screw-HH                       |
| 14  | 112-0908 | 1    | Ferrule                        |
| 15  | 112-0493 | 1    | Nut-Jam                        |
| 16  | 112-0650 | 1    | Nut-Lock, Flange               |
| 17  | 112-0385 | 1    | Nut-Lock, Flange               |
| 18  | 112-0910 | 1    | Nut-Hex                        |
| 19  | 112-6024 | 1    | Nut-Hex                        |
| 20  | 112-0568 | 1    | Pin-Cotter                     |
| 21  | 112-0354 | 1    | Pin-Cotter                     |
| 22  | 112-0527 | 1    | Tie-Cable                      |
| 23  | 112-0602 | 1    | Switch-Spring, Short           |
| 24  | 112-0866 | 1    | Tie-Cable, Push Mount          |
| 25  | 112-0625 | 1    | Plate-Insulator                |
| 26  | 112-6025 | 1    | Sleeve                         |
| 27  | 112-6026 | 1    | Fan-Blade, 10                  |
| 28  | 112-6027 | 1    | Spring-Extension               |
| 29  | 112-0873 | 1    | Spring-Extension               |
| 30  | 112-0350 | 1    | Spring-Extension               |
| 31  | 112-6028 | 1    | Ring-Wire                      |
| 32  | 112-6029 | 1    | Spring-Extension               |
| 33  | 112-0875 | 1    | Spring-Extension               |
| 34  | 112-0415 | 1    | Washer-Lock                    |
| 35  | 112-0920 | 1    | Washer-Flat                    |
| 36  | 112-0572 | 1    | Washer-Flat                    |
| 37  | 112-0923 | 1    | Washer-Lock                    |
| 38  | 112-0544 | 1    | Washer-Flat                    |
| 39  | 112-0345 | 1    | Spacer-Shoulder                |
| 40  | 112-6030 | 1    | Rod-Brake                      |
| 41  | 112-6031 | 1    | Rod-Hydro                      |
| 42  | 112-6032 | 1    | Rod-Control                    |
| 43  | 112-0673 | 1    | Spacer-Transaxle               |
| 44  | 112-0644 | 1    | Spacer                         |
| 45  | 112-5951 | 1    | Belt-V, Type                   |
| 46  | 112-6033 | 1    | Pulley-Input                   |
| 47  | 112-0892 | 1    | Pulley-Idler, V-Type           |
| 48  | 112-0313 | 1    | Pulley-Idler, Flat             |
| 49  | 112-0525 | 1    | Bracket-Idler, Center Double   |
| 50  | 112-6034 | 1    | Bracket-Torq, Transmission     |
| 51  | 112-6035 | 1    | Bracket-Actuator               |
| 52  | 112-0435 | 1    | Washer-Bell                    |

 
| Ref | Part No. | Qty. | Description |
|-----|----------|------|-------------|
| 53  | 112-0551 | 1    | Screw-HH    |

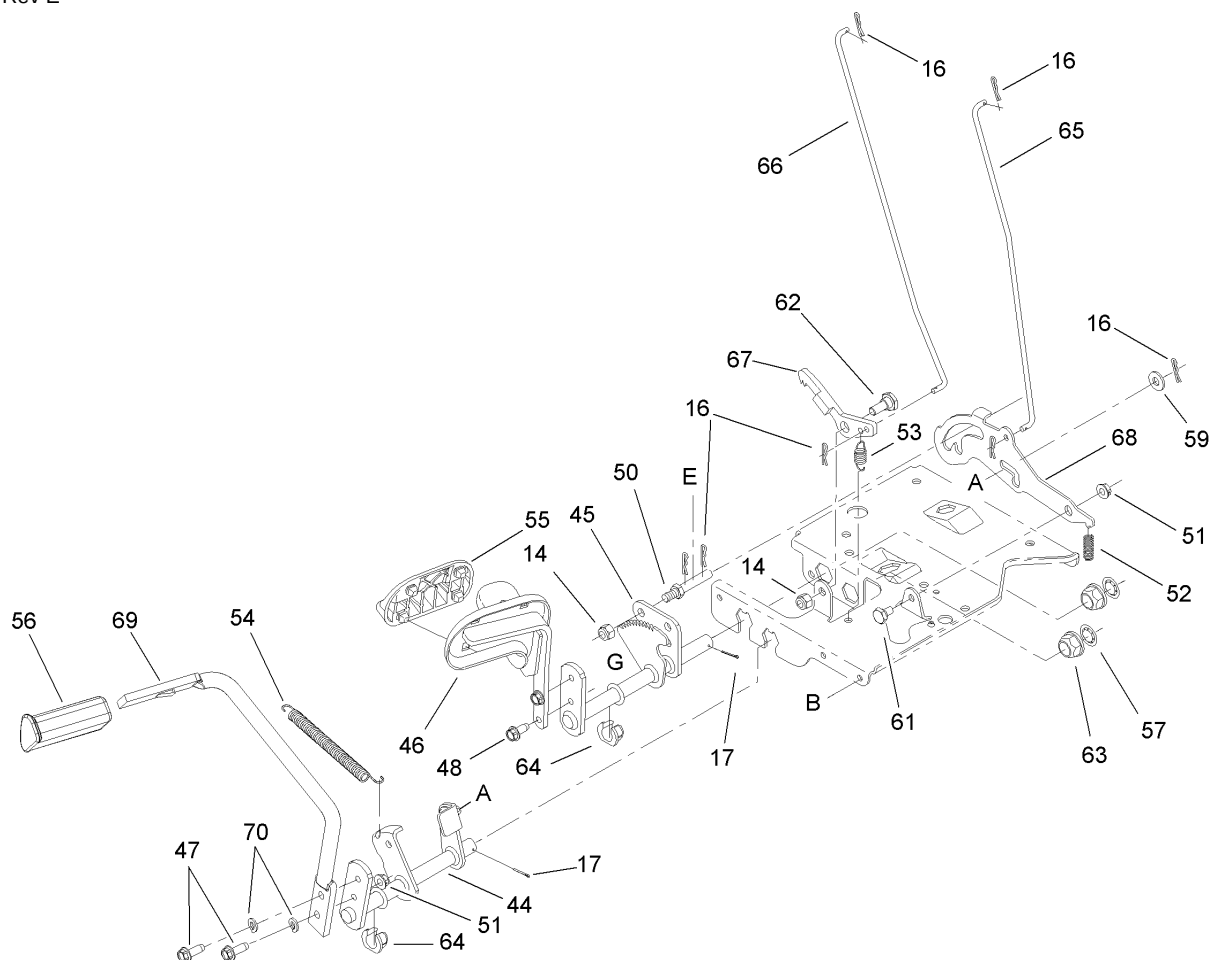

## Brake and Traction Pedal Assembly

| Ref | Part No. | Qty. | Description                 |
|-----|----------|------|-----------------------------|
| 14  | 112-0668 | 1    | Nut-Lock, Flange            |
| 16  | 112-5997 | 1    | Pin-Cotter                  |
| 17  | 112-0568 | 1    | Pin-Cotter                  |
| 44  | 112-0648 | 1    | Brake Control ASM           |
| 45  | 112-0850 | 1    | Control ASM                 |
| 46  | 112-0851 | 1    | Control Pedal ASM           |
| 47  | 112-5999 | 1    | Screw-HWHTF                 |
| 48  | 112-0395 | 1    | Screw-HWH                   |
| 50  | 112-0599 | 1    | Pin                         |
| 51  | 112-6000 | 1    | Nut-Lock, Flange            |
| 52  | 112-0506 | 1    | Spring                      |
| 53  | 112-0510 | 1    | Spring-Extension            |
| 54  | 112-0348 | 1    | Spring-Extension            |
| 55  | 112-0543 | 1    | Pad-Pedal                   |
| 56  | 112-6001 | 1    | Pad-Brake                   |
| 57  | 112-0339 | 1    | Washer-Flat                 |
| 59  | 112-6002 | 1    | Washer-Flat                 |
| 61  | 112-5817 | 1    | Bolt-Shoulder               |
| 62  | 112-0442 | 1    | Bolt-Shoulder               |
| 63  | 112-0347 | 1    | Bearing-Flange              |
| 64  | 112-0387 | 1    | Bearing-Flange, Hex (Split) |
| 65  | 112-6003 | 1    | Rod-Brake, Lock Control     |
| 66  | 112-0662 | 1    | Rod-Control, Cruise         |
| 67  | 112-6004 | 1    | Latch-Cruise                |

| Ref | Part No. | Qty. | Description     |
|-----|----------|------|-----------------|
| 68  | 112-5812 | 1    | Bracket-Lockout |
| 69  | 112-6005 | 1    | Pedal-Brake     |
| 70  | 112-6006 | 1    | Washer-Lock     |

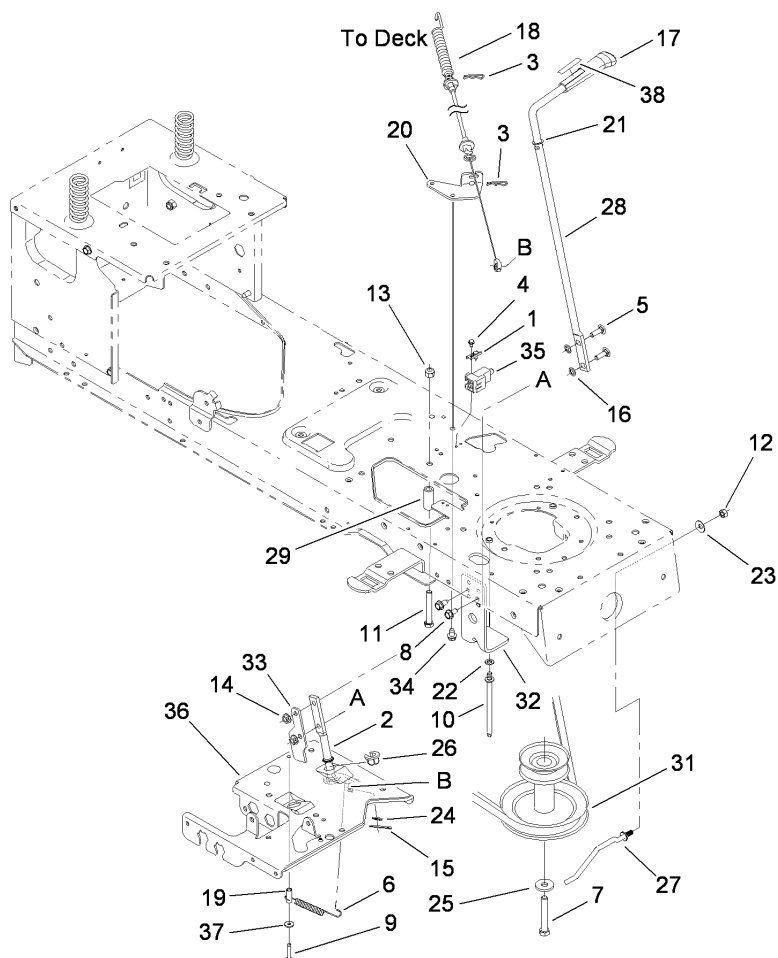


## PTO Engage Assembly

| Ref | Part No. | Qty. | Description        |
|-----|----------|------|--------------------|
| 1   | 112-0671 | 1    | Plate-Switch       |
| 2   | 112-6007 | 1    | Lever-Engage, PTO  |
| 3   | 112-0398 | 1    | Pin-Click          |
| 4   | 112-0651 | 1    | Screw-TAP          |
| 5   | 112-0598 | 1    | Bolt-CARR          |
| 6   | 112-0567 | 1    | Spring-Extension   |
| 7   | 112-6008 | 1    | Screw-HH           |
| 8   | 112-0472 | 1    | Screw-HH, TAP      |
| 9   | 112-0843 | 1    | Screw-HWH          |
| 10  | 112-0318 | 1    | Pin-Guard, Belt    |
| 11  | 112-6009 | 1    | Screw-HH           |
| 12  | 112-0650 | 1    | Nut-Lock, Flange   |
| 13  | 112-0668 | 1    | Nut-Lock, Flange   |
| 14  | 112-0511 | 1    | Nut-Lock, Flange   |
| 15  | 112-6010 | 1    | Pin-Cotter         |
| 16  | 112-0645 | 1    | Nut-Push           |
| 17  | 112-6011 | 1    | Knob-PTO           |
| 18  | 112-0504 | 1    | Cable-Engage, Deck |
| 19  | 112-0644 | 1    | Spacer             |
| 20  | 112-0649 | 1    | Bracket-Cable      |
| 21  | 112-0498 | 1    | Washer-Flat        |
| 22  | 112-0366 | 1    | Washer-Lock        |
| 23  | 112-0435 | 1    | Washer-Bell        |
| 24  | 112-0601 | 1    | Washer-Flat        |

| Ref | Part No. | Qty. | Description                 |
|-----|----------|------|-----------------------------|
| 25  | 112-0380 | 1    | Washer-Flat                 |
| 26  | 112-0384 | 1    | Bearing-Flange, Hex (Split) |
| 27  | 112-5820 | 1    | Rod-Keeper, Belt            |
| 28  | 112-0393 | 1    | Handle-Engage, Deck         |
| 29  | 112-0433 | 1    | Spacer                      |
| 31  | 112-6017 | 1    | Pulley-Engine               |
| 32  | 112-0689 | 1    | Bracket-Deck, Up Stop       |
| 33  | 112-0516 | 1    | Bracket-Stop                |
| 34  | 112-0676 | 1    | Screw-TAP                   |
| 35  | 112-0455 | 1    | Switch-Interlock            |
| 36  | 112-0681 | 1    | Bracket-Support, Steering   |
| 37  | 112-3695 | 1    | Washer-Flat                 |
| 38  | 112-1274 | 1    | Decal-PTO, Manual           |

# Deck Assembly

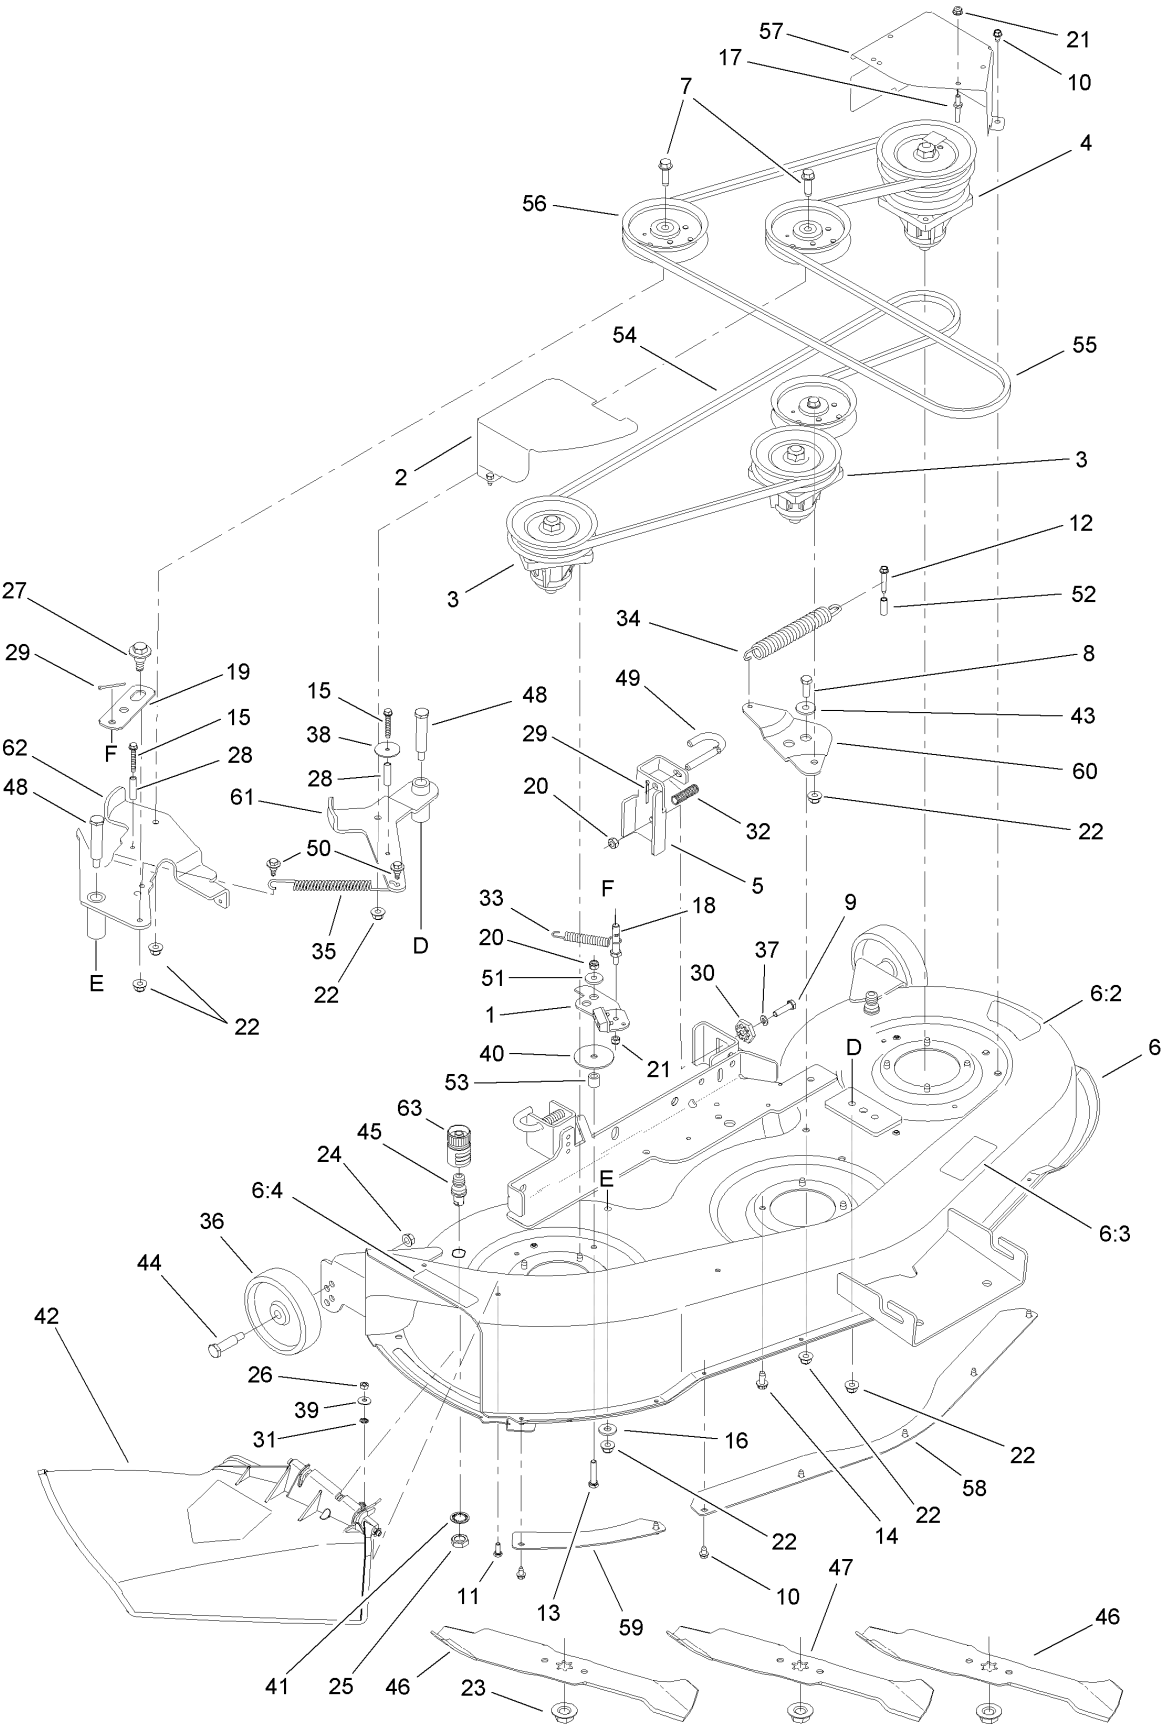


# Deck Assembly

| Ref | Part No. | Qty. | Description               |
|-----|----------|------|---------------------------|
| 1   | 112-0326 | 1    | Deck Brake Bracket ASM    |
| 2   | 112-0401 | 1    | Cover-Belt, RH            |
| 3   | 112-0311 | 1    | Spindle ASM               |
| 4   | 112-0383 | 1    | Double Pulley Spindle ASM |
| 5   | 112-0413 | 1    | LH Hanger Bracket ASM     |
| 6   | 112-5856 | 1    | Deck And Decal ASM        |
| 6:2 | 112-1267 | 1    | Decal-Danger              |
| 6:3 | 112-1269 | 1    | Decal-Routing, Belt       |
| 6:4 | 112-1265 | 1    | Decal-Danger              |
| 7   | 112-0578 | 1    | Screw-HH                  |
| 8   | 112-0492 | 1    | Screw-HH                  |
| 9   | 112-0373 | 1    | Screw-HH                  |
| 10  | 112-0524 | 1    | Screw-HWHTF               |
| 11  | 112-0499 | 1    | Screw-HH                  |
| 12  | 112-0843 | 1    | Screw-HWH                 |
| 13  | 112-0594 | 1    | Screw-HH                  |
| 14  | 112-0395 | 1    | Screw-HWH                 |
| 15  | 112-5828 | 1    | Screw-HH                  |
| 16  | 112-5829 | 1    | Washer-Flat               |
| 17  | 112-0429 | 1    | Pin-Guard, Belt           |
| 18  | 112-0722 | 1    | Pin                       |
| 19  | 112-5830 | 1    | Bracket-Brake             |
| 20  | 112-0650 | 1    | Nut-Lock, Flange          |
| 21  | 112-0636 | 1    | Nut-Lock, Flange          |
| 22  | 112-0668 | 1    | Nut-Lock, Flange          |
| 23  | 112-0330 | 1    | Nut-Flange, Hex           |
| 24  | 112-0385 | 1    | Nut-Lock, Flange          |
| 25  | 112-0351 | 1    | Nut-Hex                   |
| 26  | 112-0522 | 1    | Nut-Hex                   |
| 27  | 112-0328 | 1    | Bolt-Shoulder             |
| 28  | 112-5831 | 1    | Spacer                    |
| 29  | 112-0412 | 1    | Pin-Cotter                |
| 30  | 112-0327 | 1    | Gear-Adjustment, Deck     |
| 31  | 112-0623 | 1    | Retainer-Bolt             |
| 32  | 112-0406 | 1    | Spring-Compression        |
| 33  | 112-0320 | 1    | Spring-Extension          |
| 34  | 112-0324 | 1    | Spring-Extension          |
| 35  | 112-0432 | 1    | Spring-Extension          |
| 36  | 112-0337 | 1    | Wheel-Deck, Rear          |
| 37  | 112-0366 | 1    | Washer-Lock               |
| 38  | 112-5832 | 1    | Washer-Flat               |
| 39  | 112-0485 | 1    | Washer-Spring             |
| 40  | 112-0560 | 1    | Washer-Flat               |
| 41  | 112-0922 | 1    | Washer-Lock               |
| 42  | 112-0353 | 1    | Discharge Chute ASM       |
| 43  | 112-0508 | 1    | Spacer-Shoulder           |
| 44  | 112-0334 | 1    | Bolt-Shoulder             |
| 45  | 112-0916 | 1    | Adapter-Nozzle, Water     |
| 46  | 112-0304 | 1    | Blade-16.28 Inch          |
| 47  | 112-0302 | 1    | Blade-14.88 Inch          |
| 48  | 112-5833 | 1    | Bolt-Shoulder             |
| 49  | 112-0436 | 1    | Pin-Handle, Deck Release  |


| Ref | Part No. | Qty. | Description          |
|-----|----------|------|----------------------|
| 50  | 112-0597 | 1    | Bolt-Shoulder        |
| 51  | 112-0410 | 1    | Spacer-Shoulder      |
| 52  | 112-0644 | 1    | Spacer               |
| 53  | 112-0633 | 1    | Spacer               |
| 54  | 112-0317 | 1    | Belt                 |
| 55  | 112-5834 | 1    | Belt-V               |
| 56  | 112-0314 | 1    | Pulley-Idler         |
| 57  | 112-0431 | 1    | Cover-Belt, LH       |
| 58  | 112-0464 | 1    | Skirt-Center, Deck   |
| 59  | 112-0400 | 1    | Skirt-RH, Deck       |
| 60  | 112-0666 | 1    | Bracket-Idler        |
| 61  | 112-0495 | 1    | LH Idler Bracket ASM |
| 62  | 112-0494 | 1    | RH Idler Bracket ASM |
| 63  | 112-0879 | 1    | Nozzle-Water, Deck   |



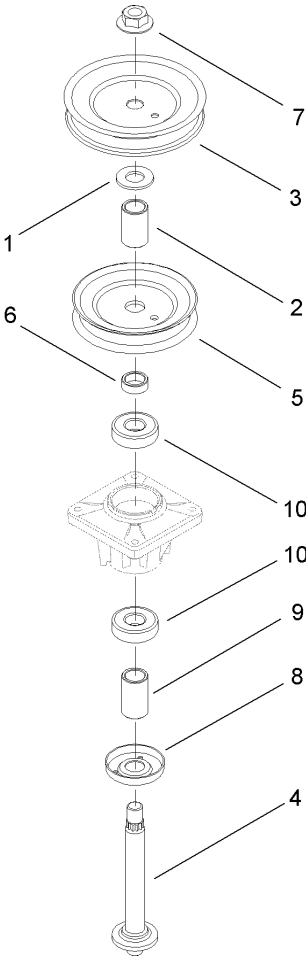


**Double Pulley Spindle Assembly No. 112-0383**

| Ref | Part No. | Qty. | Description      |  |  |  |  |
|-----|----------|------|------------------|--|--|--|--|
| 1   | 112-0921 | 1    | Washer-Flat      |  |  |  |  |
| 2   | 112-5927 | 1    | Spacer           |  |  |  |  |
| 3   | 112-0382 | 1    | Pulley-Deck      |  |  |  |  |
| 4   | 112-5928 | 1    | Shaft-Spindle    |  |  |  |  |
| 5   | 112-0359 | 1    | Pulley-Deck      |  |  |  |  |
| 6   | 112-5929 | 1    | Spacer           |  |  |  |  |
| 7   | 112-0330 | 1    | Nut-Flange, Hex  |  |  |  |  |
| 8   | 112-5923 | 1    | Bearing-Shoulder |  |  |  |  |
| 9   | 112-0654 | 1    | Spacer           |  |  |  |  |
| 10  | 112-0377 | 1    | Bearing-Ball     |  |  |  |  |

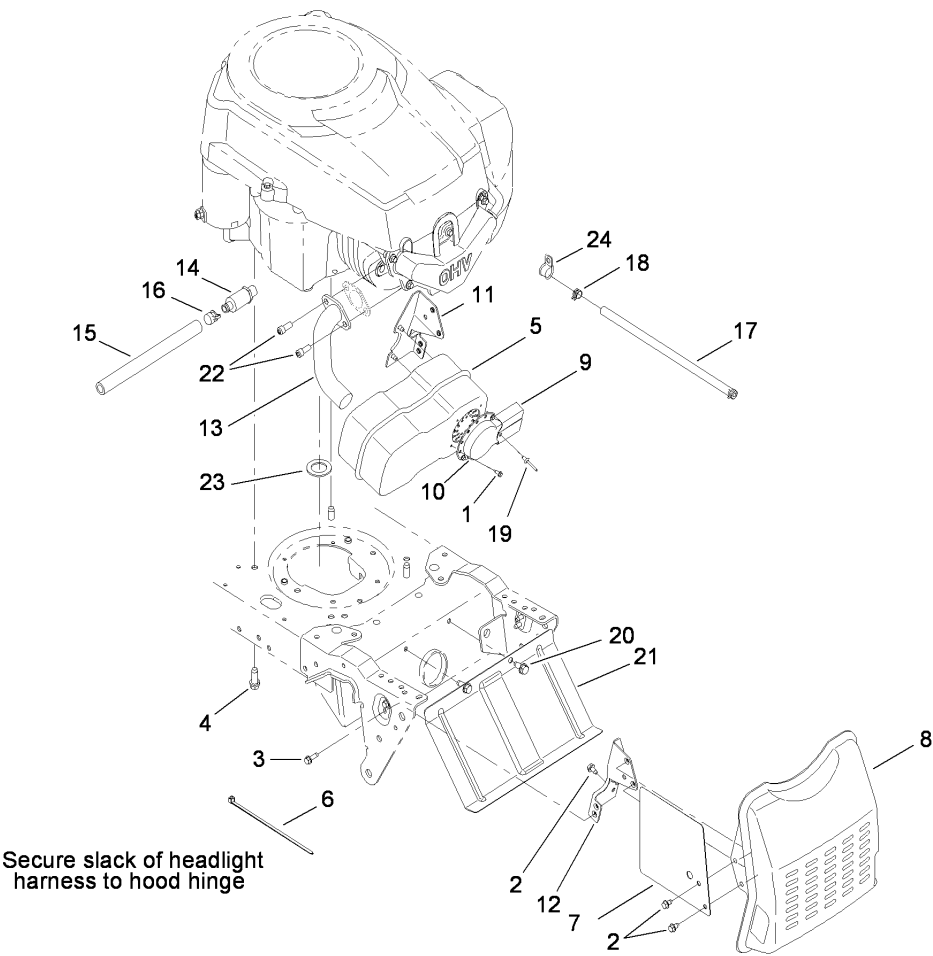

Muffler Assembly


| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 1   | 112-0626 | 1    | Screw-HWHTF             |  |  |  |  |
| 2   | 112-0524 | 1    | Screw-HWHTF             |  |  |  |  |
| 3   | 112-0587 | 1    | Screw-TAP               |  |  |  |  |
| 4   | 112-0663 | 1    | Screw-TAP               |  |  |  |  |
| 5   | 112-0361 | 1    | Muffler-Inlet, Single   |  |  |  |  |
| 6   | 112-0527 | 1    | Tie-Cable               |  |  |  |  |
| 7   | 112-5827 | 1    | Shield-Heat             |  |  |  |  |
| 8   | 112-6013 | 1    | Muffler Heat Shield ASM |  |  |  |  |
| 9   | 112-0730 | 1    | Deflector-Muffler, Long |  |  |  |  |
| 10  | 112-0453 | 1    | Deflector-Muffler       |  |  |  |  |
| 11  | 112-0467 | 1    | Bracket-Muffler, LH     |  |  |  |  |
| 12  | 112-0466 | 1    | Bracket-Muffler, RH     |  |  |  |  |
| 13  | 112-0430 | 1    | Pipe-Exhaust            |  |  |  |  |
| 14  | 112-0388 | 1    | Drain-Oil               |  |  |  |  |
| 15  | 112-0553 | 1    | Hose-Drain              |  |  |  |  |
| 16  | 112-0397 | 1    | Cap-Drain, Oil          |  |  |  |  |
| 17  | 112-0720 | 1    | Hose-Fuel               |  |  |  |  |
| 18  | 112-0573 | 1    | Clamp-Hose              |  |  |  |  |
| 19  | 112-3741 | 1    | Rivet-Pop               |  |  |  |  |
| 20  | 112-0395 | 1    | Screw-HWH               |  |  |  |  |
| 21  | 112-6014 | 1    | Shield-Heat, Tractor    |  |  |  |  |
| 22  | 112-6012 | 1    | Screw-HSH               |  |  |  |  |
| 23  | 112-0420 | 1    | Washer-Flat             |  |  |  |  |
| 24  | 112-0463 | 1    | Clamp                   |  |  |  |  |

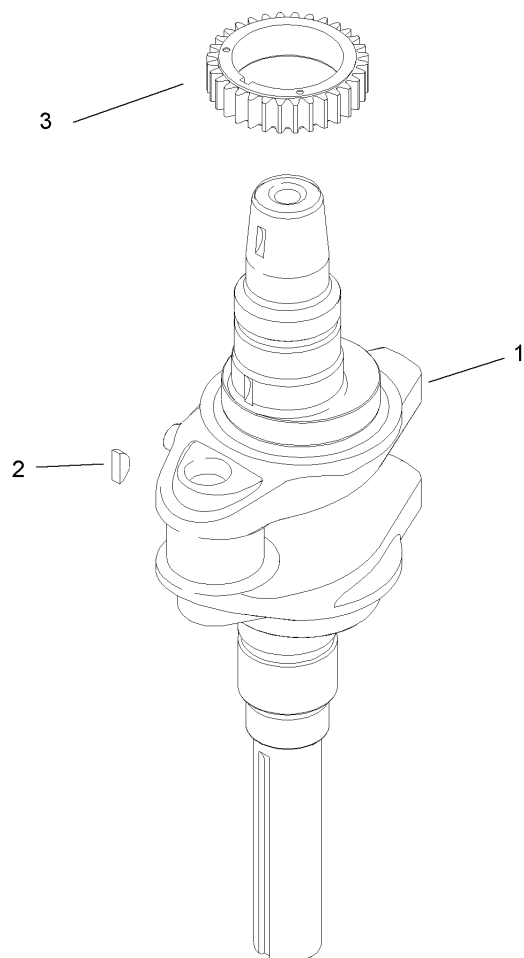

# Crankshaft Assembly

## Kohler SV600-0018

 
| Ref | Part No.    | Qty. | Description             |
|-----|-------------|------|-------------------------|
| ❶1  | 20 014 20-S | 1    | Crankshaft (Includes 2) |
| ❶2  | X-42-15-S   | 1    | Key, 3/16 X 5/8         |
| ❶3  | 20 043 12-S | 1    | Gear-Crankshaft         |

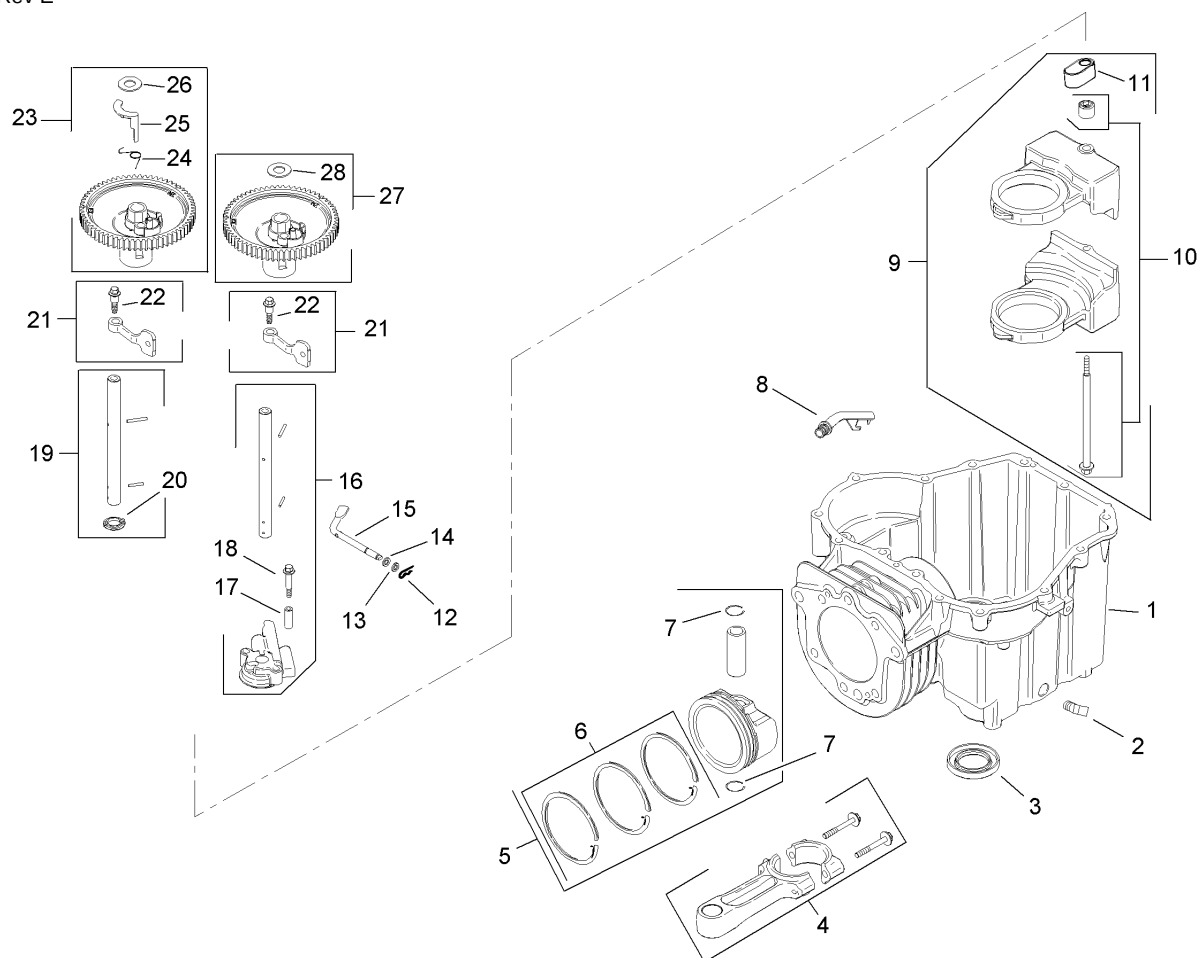

## Crankcase Assembly Kohler SV600-0018


| Ref | Part No.    | Qty. | Description                                  |
|-----|-------------|------|----------------------------------------------|
| ❶   |             | 1    | Crankcase (Use: Short Block 20 522 01)       |
| ❷   | 25 139 57-S | 1    | Plug-Pipe, Square Head, 3/8                  |
| ❸   | 20 032 01-S | 1    | Seal-Oil                                     |
| ❹   | 20 067 04-S | 1    | Connecting Rod ASM                           |
| ❺   | 20 874 01-S | 1    | Piston W/Ring Set (94 Mm)<br>(Includes 6-7)  |
| ❻   | 20 108 01-S | 1    | Ring Set (94 Mm)                             |
| ❼   | 20 018 04-S | 2    | Retainer-Pin, Piston                         |
| ❽   | 20 123 02-S | 1    | Tube-Back, Drain                             |
| ❾   | 20 755 04-S | 1    | Balance Weight Kit (Includes 10-11)          |
| ❿   | 20 086 16-S | 1    | Screw And Guide Pin Kit                      |
| ⓫   | 20 423 02-S | 1    | Shoe-Guide                                   |
| ⓬   | 12 154 05-S | 1    | Clip-Pin, Hitch                              |
| ⓭   | M-631015-S  | 1    | Washer-Flat (6Mm)                            |
| ⓮   | X-25-102-S  | 1    | Washer-Flat (1/4)                            |
| ⓯   | 20 144 02-S | 1    | Shaft-Cross, Governor                        |
| ⓰   | 20 393 02-S | 1    | Oil Pump ASM (Includes 17-18)                |
| ⓱   | 20 112 02-S | 2    | Spacer-Screw, Oil Pump                       |
| ⓲   | 20 086 13-S | 2    | Screw-Pump, Oil                              |
| ⓳   | 20 144 06-S | 1    | Shaft-Cam, Center - Exhaust<br>(Includes 20) |
| ⓴   | 20 468 01-S | 1    | Washer-Thrust                                |
| ⓵   | 20 090 01-S | 2    | Cam Lever ASM (Includes 22)                  |

| Ref | Part No.    | Qty. | Description                            |
|-----|-------------|------|----------------------------------------|
| ❷❷  | 20 086 06-S | 1    | Bolt-Shoulder (M6X1X26)                |
| ❷❸  | 20 010 04-S | 1    | Cam Gear ASM - Intake (Includes 24-26) |
| ❷❹  | 20 089 06-S | 1    | Spring-A C R                           |
| ❷❺  | 20 044 16-S | 1    | Weight-A C R                           |
| ❷❻  | 20 468 03-S | 1    | Washer-Thrust, A C R                   |
| ❷❼  | 20 010 04-S | 1    | Cam Gear ASM - Intake (Includes 28)    |
| ❷❽  | 20 468 03-S | 1    | Washer-Thrust, A C R                   |

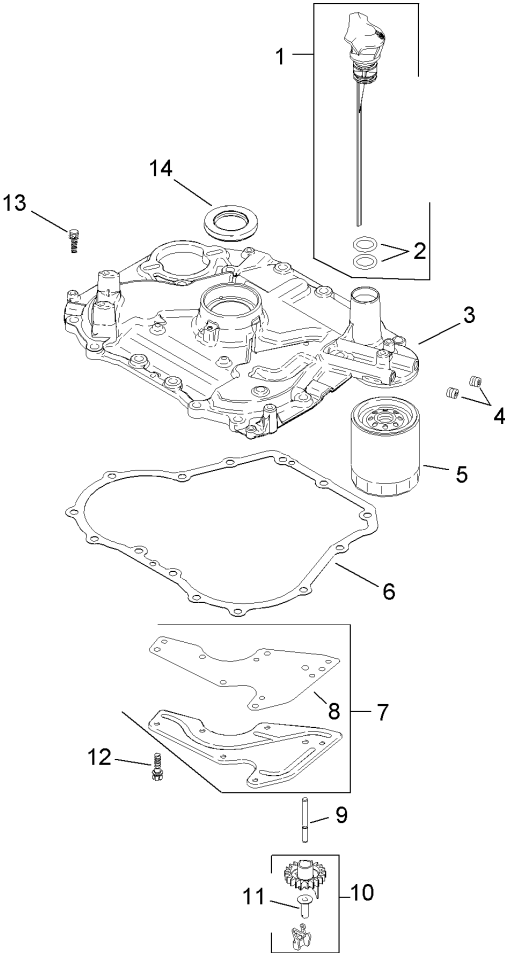


**Oil Pan and Lubrication Assembly**  
**Kohler SV600-0018**

| Ref | Part No.    | Qty. | Description                              |  |  |  |  |
|-----|-------------|------|------------------------------------------|--|--|--|--|
| ❸1  | 20 040 03-S | 1    | Dipstick Kit (Includes 2)                |  |  |  |  |
| ❸2  | 20 153 01-S | 1    | O Ring-Dipstick                          |  |  |  |  |
| ❸3  | 20 009 03-S | 1    | Closure Plate ASM (Includes 4, 10-11)    |  |  |  |  |
| ❸4  | 25 139 60-S | 2    | Plug-Countersink, 1/8                    |  |  |  |  |
| ❹5  | 98020       | 1    | Filter-Oil                               |  |  |  |  |
| ❸6  | 20 041 01-S | 1    | Gasket-Plate, Closure                    |  |  |  |  |
| ❸7  | 20 096 02-S | 1    | Oil Passage Cover Kit (Includes 8)       |  |  |  |  |
| ❸8  | 20 041 02-S | 1    | Gasket-Passage, Oil                      |  |  |  |  |
| ❸9  | 20 144 03-S | 1    | Shaft-Gear, Governor                     |  |  |  |  |
| ❸10 | 20 310 03-S | 1    | Gear And Weight ASM (Includes 11)        |  |  |  |  |
| ❸11 | 12 380 01-S | 1    | Pin-Governor, Regulating                 |  |  |  |  |
| ❸12 | M-545013-S  | 6    | Screw-Flange, Thread Forming (M5X0.8X13) |  |  |  |  |
| ❸13 | M-851030-S  | 14   | Screw-Flange, Hex (M8X1.25X30)           |  |  |  |  |
| ❸14 | 20 032 01-S | 1    | Seal-Oil                                 |  |  |  |  |

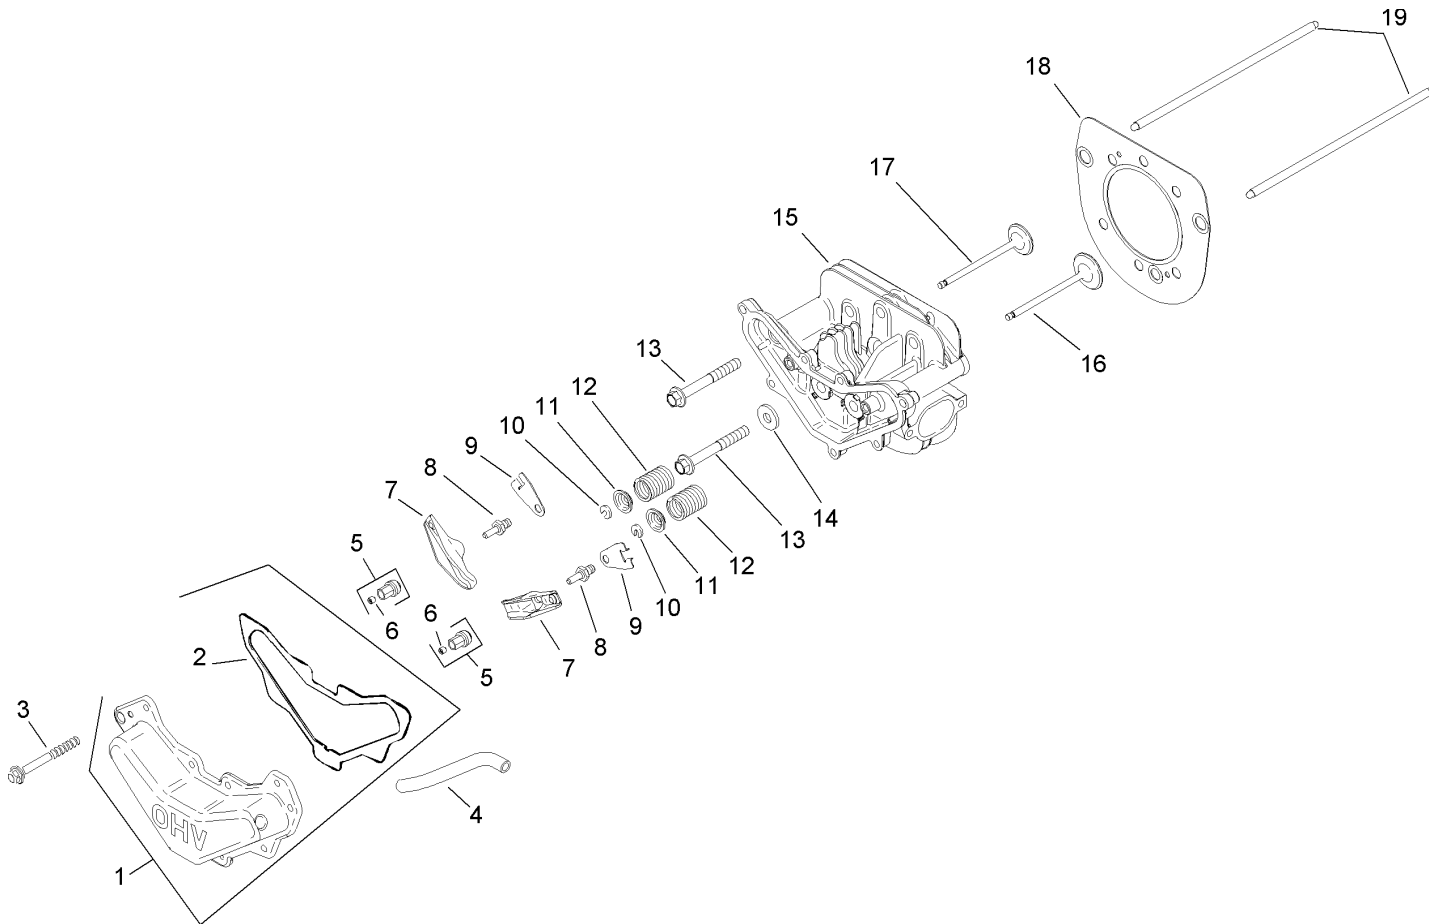


**Head, Valve and Breather Assembly**  
**Kohler SV600-0018**

| Ref | Part No.    | Qty. | Description                                  |  |  |  |  |
|-----|-------------|------|----------------------------------------------|--|--|--|--|
| ❶1  | 20 096 07-S | 1    | Valve Cover Kit (Includes 2)                 |  |  |  |  |
| ❷2  | 20 041 13-S | 1    | Gasket-Cover, Valve                          |  |  |  |  |
| ❸3  | M-645020-S  | 7    | Screw-Flange, Hex (M6X1.0X20)                |  |  |  |  |
| ❹4  | 20 326 01-S | 1    | Hose-Breather                                |  |  |  |  |
| ❺5  | 20 599 02-S | 2    | Pivot-Arm, Rocker (Includes 6)               |  |  |  |  |
| ❻6  | 20 086 04-S | 2    | Screw-Set                                    |  |  |  |  |
| ❼7  | 20 186 01-S | 2    | Arm-Rocker                                   |  |  |  |  |
| ❽8  | 20 086 03-S | 2    | Stud-Rocker                                  |  |  |  |  |
| ❾9  | 20 146 03-S | 2    | Plate-Guide, Push Rod                        |  |  |  |  |
| ❿10 | 20 062 01-S | 2    | Lock-Retainer                                |  |  |  |  |
| ⓫11 | 20 173 01-S | 2    | Cap-Spring, Valve                            |  |  |  |  |
| ⓬12 | 20 089 03-S | 2    | Spring-Valve                                 |  |  |  |  |
| ⓭13 | 20 086 02-S | 6    | Screw-Flange, Hex (M10X1.5X37)               |  |  |  |  |
| ⓮14 | 12 468 05-S | 1    | Washer-Flat (1/2)                            |  |  |  |  |
| ⓯15 | 20 318 01-S | 1    | Head-Cylinder                                |  |  |  |  |
| ⓰16 | 20 016 01-S | 1    | Valve-Exhaust                                |  |  |  |  |
| ⓱17 | 20 017 01-S | 1    | Valve-Intake                                 |  |  |  |  |
| ⓲18 | 20 841 01-S | 1    | Cylinder Head Gasket Kit (Includes 2, 13-14) |  |  |  |  |
| ⓳19 | 20 411 04-S | 2    | Rod-Push                                     |  |  |  |  |

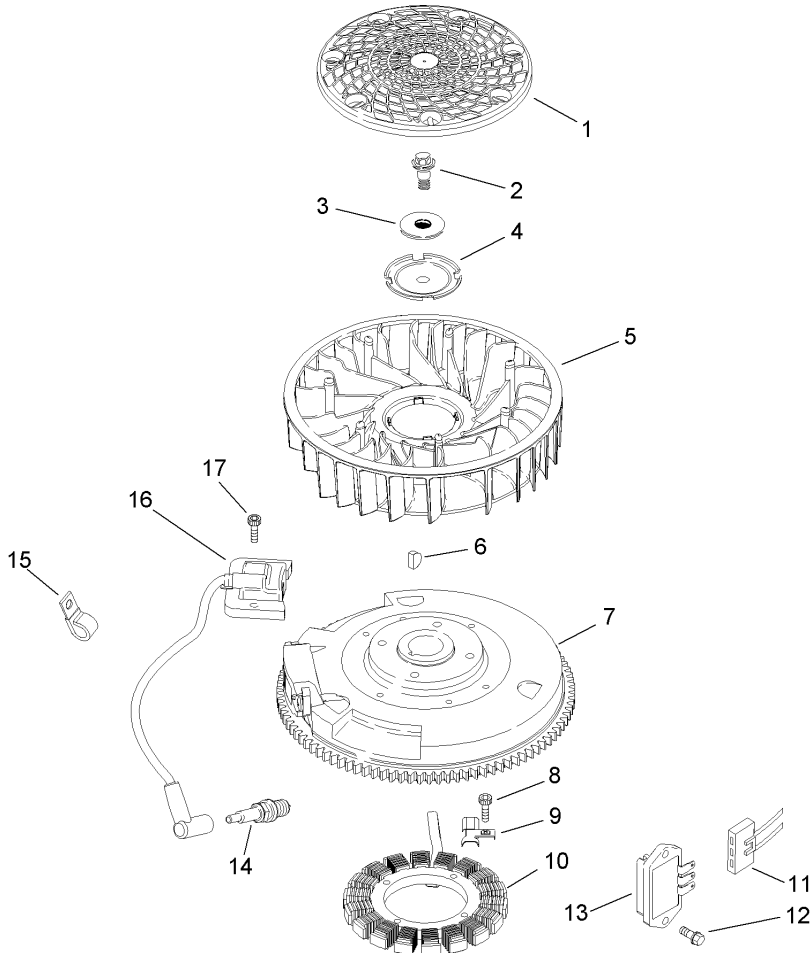 


**Ignition and Electrical Assembly**  
**Kohler SV600-0018**

| Ref  | Part No.    | Qty. | Description                     |  |  |  |  |
|------|-------------|------|---------------------------------|--|--|--|--|
| ❶1   | 20 162 02-S | 1    | Screen-Grass                    |  |  |  |  |
| ❷2   | 12 086 14-S | 1    | Screw-Flange, M10X1.5X45        |  |  |  |  |
| ❸3   | 12 468 03-S | 1    | Washer-Flat, 13/32              |  |  |  |  |
| ❹4   | 20 146 02-S | 1    | Plate-Fan Mounting              |  |  |  |  |
| ❺5   | 20 157 01-S | 1    | Fan                             |  |  |  |  |
| ❻6   | X-42-15-S   | 1    | Key, 3/16 X 5/8                 |  |  |  |  |
| ❼7   | 20 025 05-S | 1    | Flywheel                        |  |  |  |  |
| ❽8   | 20 086 17-S | 2    | Screw-Socket, Hex (M5X0.8X25)   |  |  |  |  |
| ❾9   | 20 154 03-S | 1    | Clip-Wire                       |  |  |  |  |
| ❿10  | 237878-S    | 1    | 15 Amp Stator Kit               |  |  |  |  |
| ⓫11  | 236602-S    | 1    | Connector (3 Contact)           |  |  |  |  |
| ⓬12  | M-545020-S  | 2    | Screw-Thread Forming, M5X0.8X25 |  |  |  |  |
| ⓭13  | 41 403 09-S | 1    | Rectifier-Regulator             |  |  |  |  |
| ⓮14  | 77-7330     | 1    | Plug-Spark                      |  |  |  |  |
| ⓯15  | 231285-S    | 2    | Clip-Cable                      |  |  |  |  |
| ⓰16  | 20 584 01-S | 1    | Module-Ignition                 |  |  |  |  |
| ⓱17  | M-561025-S  | 2    | Screw-Socket, Hex (M5X0.8X25)   |  |  |  |  |
| ❶❷18 | 20 176 01-S | 1    | Harness-Wiring (Six Pin)        |  |  |  |  |

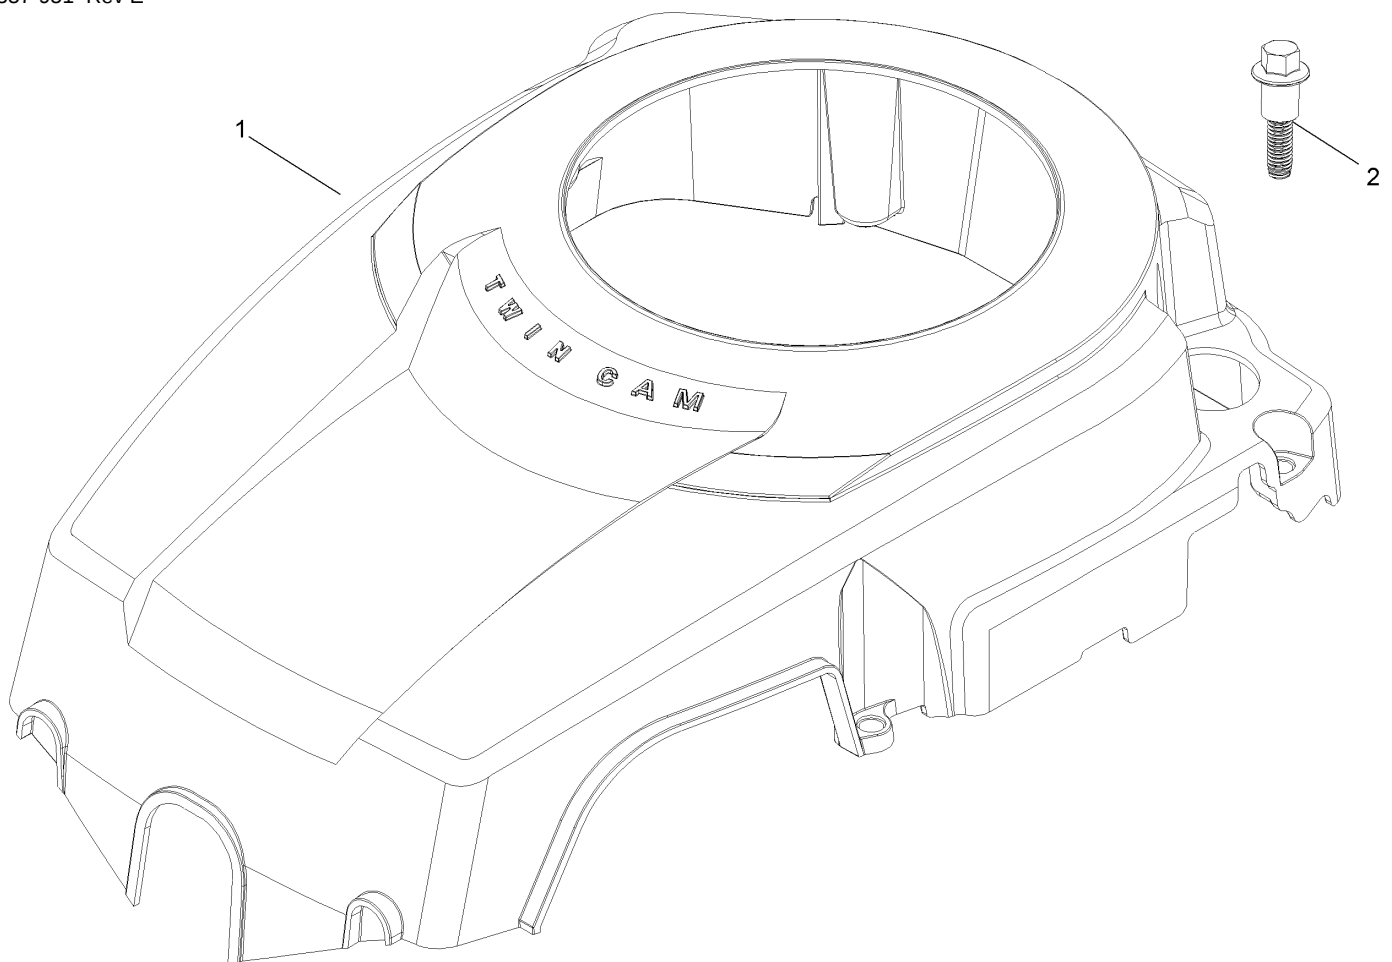


## Blower Housing Assembly Kohler SV600-0018

| Ref | Part No.    | Qty. | Description             |
|-----|-------------|------|-------------------------|
| ③1  | 20 027 06-S | 1    | Housing-Blower          |
| ③2  | 20 086 06-S | 4    | Bolt-Shoulder (M6X1X26) |

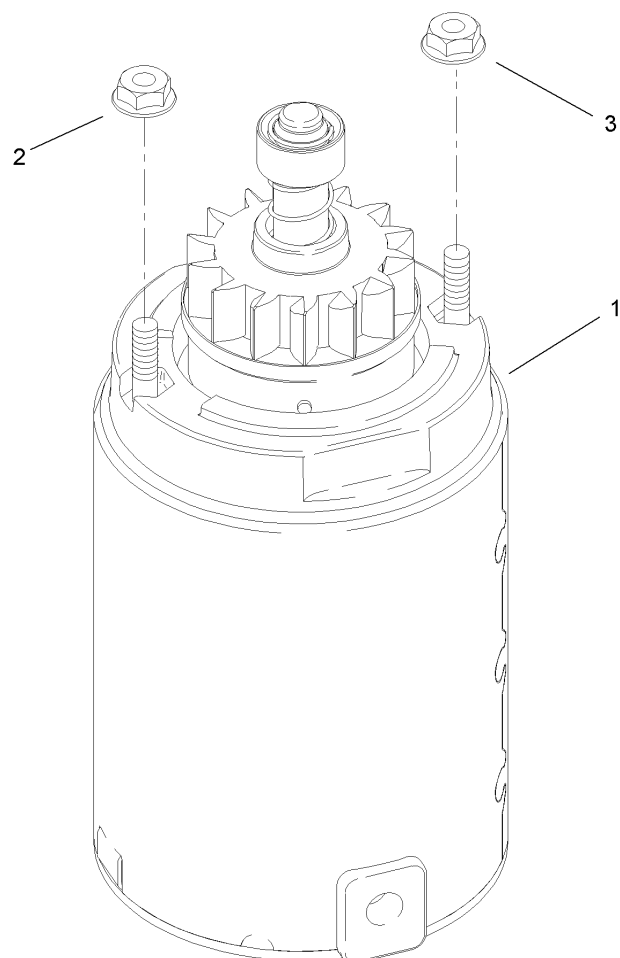

# Starting System Assembly Kohler SV600-0018

| Ref | Part No.    | Qty. | Description                      |
|-----|-------------|------|----------------------------------|
| ③1  | 20 098 01-S | 1    | Starter ASM (Inertia Drive)      |
| ③2  | 25 100 31-S | 2    | Nut-Flange, Hex Serrated (10-24) |
| ③3  | 12 100 07-S | 1    | Nut-Flange, Hex (1/4-20)         |

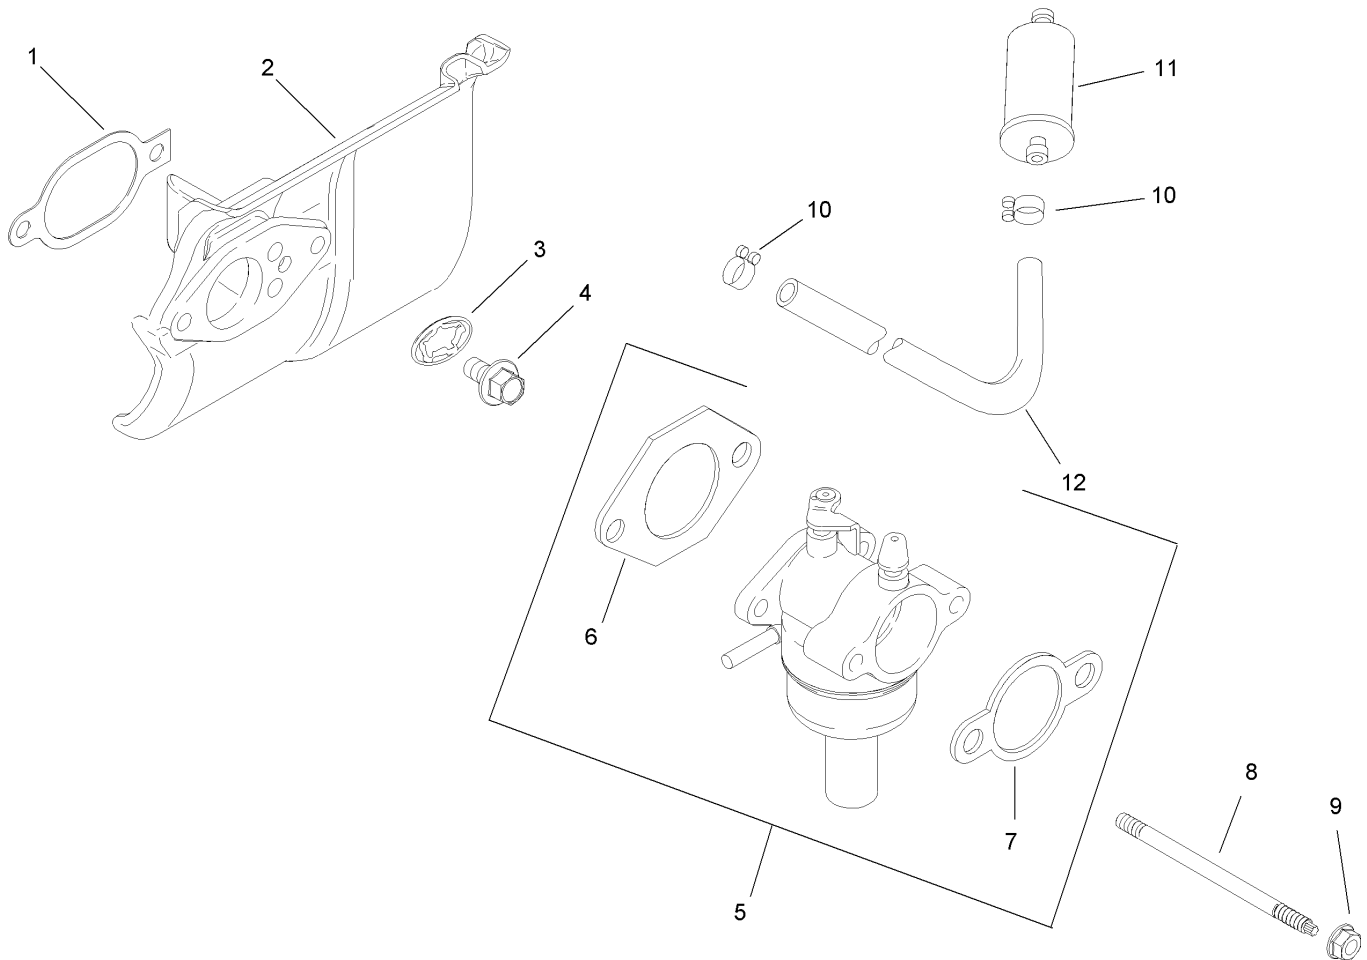


# Fuel System Assembly

## Kohler SV600-0018

| Ref  | Part No.    | Qty. | Description                                |
|------|-------------|------|--------------------------------------------|
| ③1   | 20 041 07-S | 1    | Gasket-Deflector, Heat                     |
| ③2   | 20 265 01-S | 1    | Deflector-Heat                             |
| ③3   | X-22-11-S   | 1    | Washer-Lock, Internal Tooth (1/4)          |
| ③4   | M-651020-S  | 1    | Screw-Flange, Hex (M6X1.0X20)              |
| ③5   | 20 853 14-S | 1    | Carburetor ASM W/Gaskets<br>(Includes 6-7) |
| ③6   | 12 041 02-S | 1    | Gasket-Base, Air Cleaner                   |
| ③7   | 12 041 01-S | 1    | Gasket-Carburetor                          |
| ③8   | 20 072 05-S | 1    | Stud-Mounting, Carburetor<br>(M6X1.0X100)  |
| ③9   | M-641060-S  | 2    | Nut-Flange, M6X1.0                         |
| ③10  | 25 237 14-S | 2    | Clamp-Hose                                 |
| ④11  | 98021       | 1    | Filter-Fuel                                |
| ③12  | 25 353 14-S | 1    | Line-Fuel, 7 Inch                          |
| ①③13 | 12 757 02-S | 1    | Float Repair Kit                           |
| ①③14 | 12 757 03-S | 1    | Carburetor Repair Kit                      |
| ①③15 | 12 757 33-S | 1    | Solenoid Repair Kit                        |
| ①③16 | 12 757 37-S | 1    | Bowl Replacement Repair Kit                |
| ①③17 | 20 755 06-S | 1    | High Altitude Kit (5, 000 Ft)              |
| ①③18 | 20 755 07-S | 1    | High Altitude Kit (10, 000 Ft)             |
| ①③19 | 12 454 03-S | 1    | Tie-Wire                                   |
 
|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

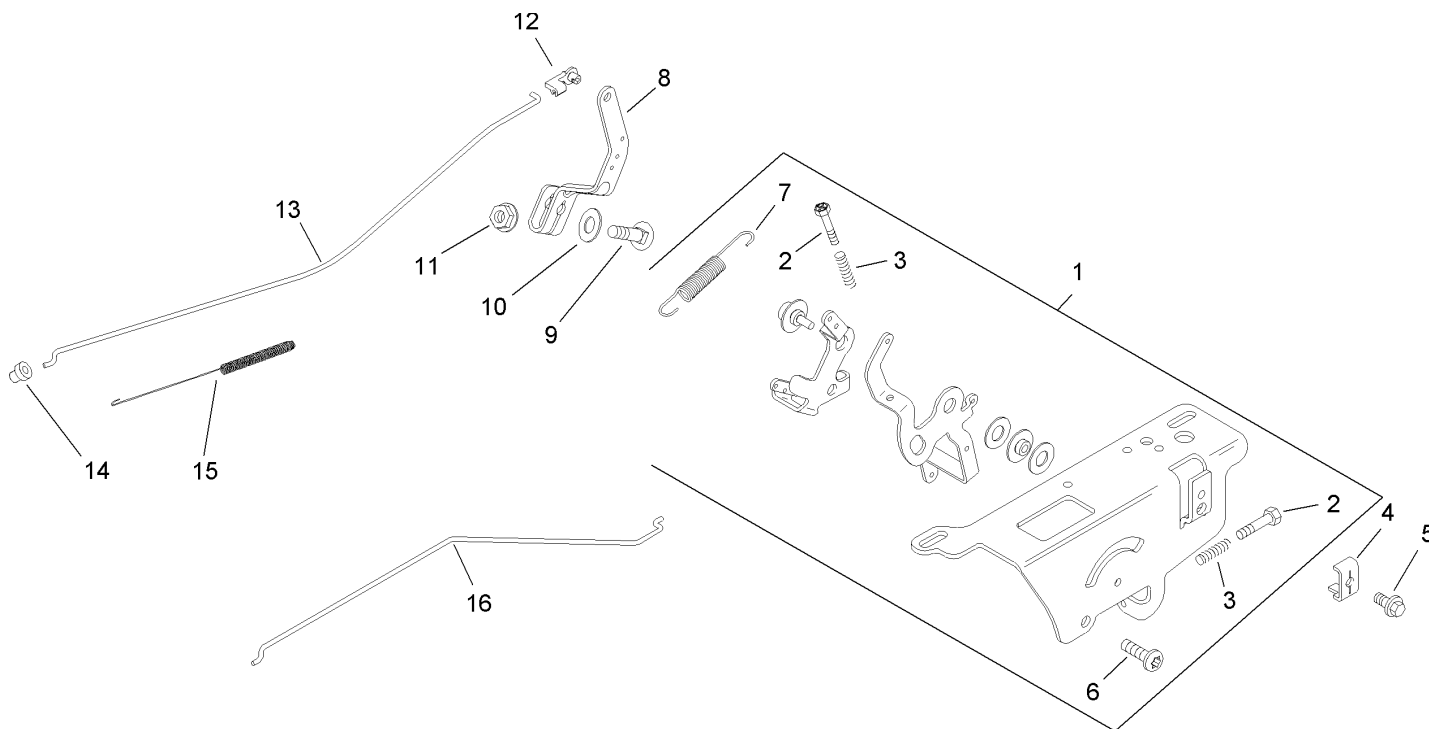


# Engine Control Assembly

## Kohler SV600-0018
 
| Ref | Part No.    | Qty. | Description                                       |  |  |  |  |
|-----|-------------|------|---------------------------------------------------|--|--|--|--|
| ❸1  | 20 536 05-S | 1    | Speed Control ASM (Includes 2-3, 6-7)             |  |  |  |  |
| ❸2  | 20 086 10-S | 2    | Screw-Thread Forming (M4X0.7X25)                  |  |  |  |  |
| ❸3  | 12 089 11-S | 2    | Spring-Control, Speed                             |  |  |  |  |
| ❸4  | 12 237 01-S | 1    | Clamp-Cable                                       |  |  |  |  |
| ❸5  | M-545016-S  | 1    | Screw-Flange, TAP (M5X0.8X16)                     |  |  |  |  |
| ❸6  | M-664020-S  | 2    | Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20) |  |  |  |  |
| ❸7  | 20 089 11-S | 1    | Spring-Governor                                   |  |  |  |  |
| ❸8  | 20 090 02-S | 1    | Lever-Governor                                    |  |  |  |  |
| ❸9  | 52 211 04-S | 1    | Bolt-Square Neck, Round Head (1/4-20X1)           |  |  |  |  |
| ❸10 | X-22-11-S   | 1    | Washer-Lock, Internal Tooth (1/4)                 |  |  |  |  |
| ❸11 | 12 100 07-S | 1    | Nut-Flange, Hex (1/4-20)                          |  |  |  |  |
| ❸12 | 25 158 11-S | 1    | Bushing-Linkage, Throttle                         |  |  |  |  |
| ❸13 | 20 079 04-S | 1    | Linkage-Throttle                                  |  |  |  |  |
| ❸14 | 25 158 08-S | 1    | Bushing-Retaining, Linkage                        |  |  |  |  |
| ❸15 | 20 089 10-S | 1    | Spring-Linkage                                    |  |  |  |  |
| ❸16 | 20 079 05-S | 1    | Linkage-Choke (Single Wire)                       |  |  |  |  |



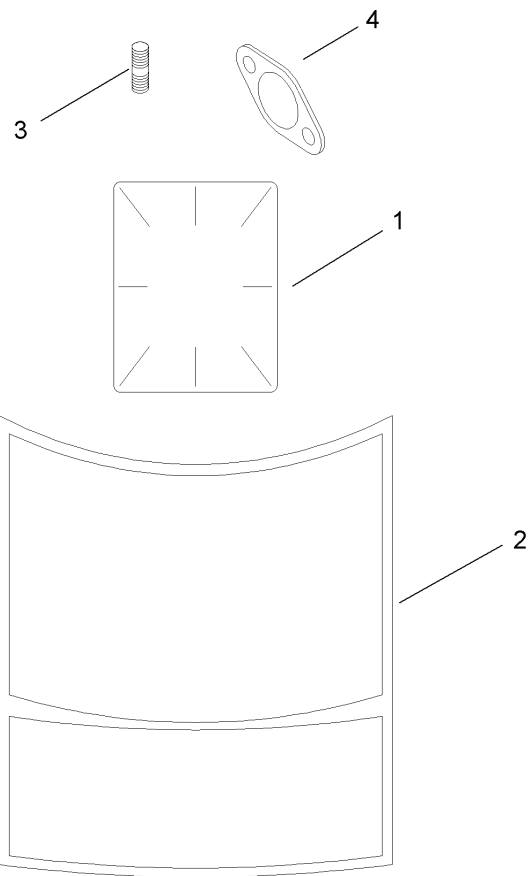

Artwork is representative.

Actual labels may differ depending on model and specification number.

## Exhaust Stud and Decal Assembly Kohler SV600-0018

| Ref | Part No.    | Qty. | Description          |
|-----|-------------|------|----------------------|
| ③1  | 25 113 39-S | 1    | Decal-Clear Laminate |
| ③2  | 20 113 14-S | 1    | Decal-20 Hp          |
| ③3  | 25 072 04-S | 2    | Stud (M8X1.25X33)    |
| ③4  | 20 041 12-S | 1    | Gasket-Exhaust       |

## NOTES

## NOTES

