



Greensmaster® 1600 Mower

Model No. 04035 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Cylinder and Crankcase Assembly	 17
Engine Mount and Frame Assembly	 4	Piston and Crankshaft Assembly	 18
Reel Drive Assembly	 5	Valve and Camshaft Assembly	 19
Reel Assembly	 7	Lubrication Equipment Assembly	 20
Drum Drive Assembly	 8	Cooling Equipment Assembly	 21
Drum and Basket Assembly	 10	Electric Equipment Assembly	 22
Differential Assembly No. 93-9041	 11	Control Equipment Assembly	 23
Inner Countershaft Assembly	 12	Carburetor Assembly	 24
Outer Crankshaft Assembly	 13	Air Filter and Muffler Assembly	 25
Engine Assembly	 14	Fuel Tank and Fuel Valve Assembly	 26
Bellcrank Assembly	 15	Starter Assembly	 27
Handle Assembly	 16	Label Set	 28
		Attachments and Accessories List	 29


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not serviced separately

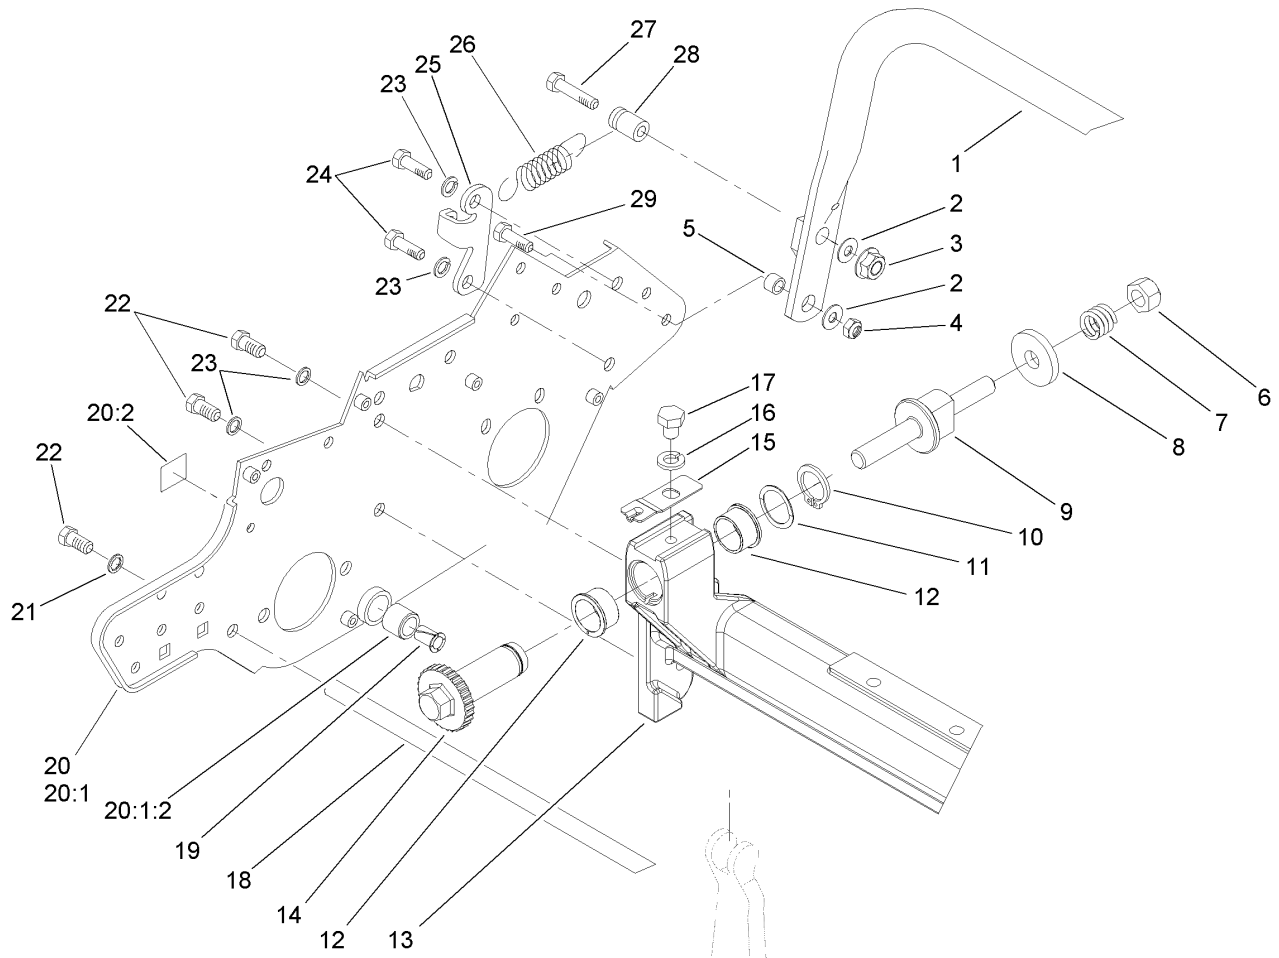

Frame Assembly

Ref	Part No.	Qty.	Description
1	93-9019-03	1	Kickstand ASM
2	3256-2	3	Washer-Flat
3	32128-25	1	Nut-HF
4	3296-29	2	Nut-Lock, NI
5	65-7910	2	Spacer
6	33025-00	2	Nut-Lock
7	99-3755	2	Spring-Compression
8	99-2098	2	Washer
9	99-2096	2	Screw-Adjuster, Bedbar
10	32120-93	2	Ring-Retaining
11	106-5335	2	Washer-Wave
12	106-5344	4	Bushing-Flange, Keyed
13	108-8649-01	1	Crossmember-Front
14	106-5363	2	Shaft-Adjuster
15	99-2097	2	Detent
16	3253-4	2	Washer-Lock
17	322-26	2	Screw-HH
18	94-5867	1	Rod-Frame
19	52-2890	2	Bushing-Nylon
20	94-9004	1	RH Side Plate ASM
20:1		1	RH Side Plate / Bushing ASM
20:1:2	63-9510	1	Bushing
20:2	93-9356	2	Decal-Warning, Belt
20:2	93-9389	2	Decal-Warning, Belt (Japan)


Ref	Part No.	Qty.	Description
21	3254-6	2	Washer-Lock, Internal
22	323-4	6	Screw-HH
23	3253-21	6	Washer-Lock
24	323-5	2	Screw-HH
25	65-7890	1	Bracket
26	65-7880	1	Spring-Extension
27	322-10	1	Screw-HH
28	65-7900	1	Retainer-Spring
29	322-5	2	Screw-HH

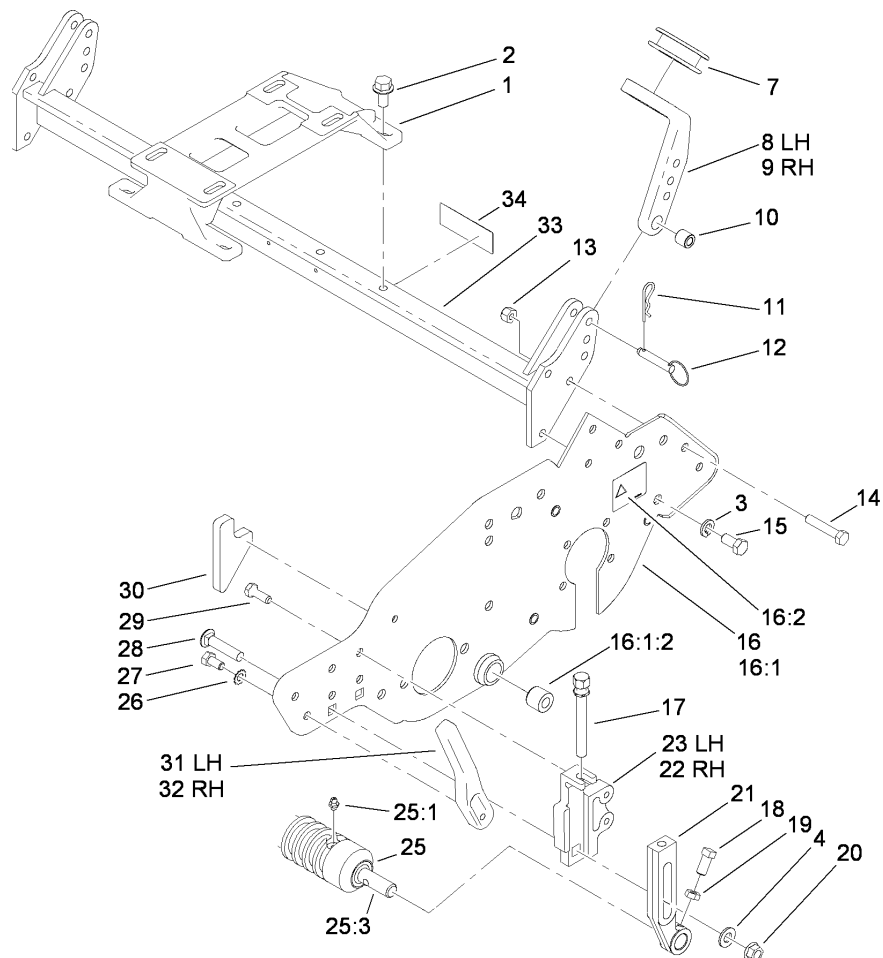

Engine Mount and Frame Assembly

Ref	Part No.	Qty.	Description
1	88-7670	1	Mount-Engine
2	3234-1	4	Screw-HHF
3	3253-21	4	Washer-Lock
4	3256-24	2	Washer-Flat
7	65-7510	2	Grommet-Handle
8	93-6038	1	Arm-Support, Handle (LH)
9	93-6037	1	Arm-Support, Handle (RH)
10	93-6024	2	Bushing-Support, Handle
11	3290-467	2	Pin-Hair
12	93-6029	2	Pin-Clevis, Ring
13	3296-29	2	Nut-Lock, NI
14	322-9	2	Screw-HH
15	323-4	2	Screw-HH
16	94-9005	1	LH Side Plate ASM
● 16:1		1	LH Side Plate/Bushing ASM
16:1:2	63-9510	1	Bushing
16:2	93-9356	1	Decal-Warning, Belt
16:2	93-9389	1	Decal-Warning, Belt (Japan)
17	93-6051	2	Screw-HOC
18	3242-4	2	Screw-Set, SQH
19	3218-2	2	Nut-Jam
20	32128-21	2	Nut-HF
21	93-6090	2	Arm-HOC
21	99-4286	2	Arm-HOC, Extended


Ref	Part No.	Qty.	Description
22	93-6048	1	Bracket-HOC, RH
23	93-6049	1	Bracket-HOC, LH
25	93-9039	1	Weihle Roller ASM
25:1	302-5	2	Fitting-Grease
25:3	52-3180	2	Bearing-Roller, Front
26	3255-8	4	Washer-Lock
27	322-2	4	Screw-HH
28	3231-5	2	Screw-CARR
29	92-8914	4	Bolt-Face, Tapered
30	93-6064	1	Seal-Catcher, Grass
31	93-9018	1	Rod-Basket, LH
32	93-9017	1	Rod-Basket, RH
33	93-9026-01	1	Frame-Rear
34	115-1093	1	Decal-Regulatory

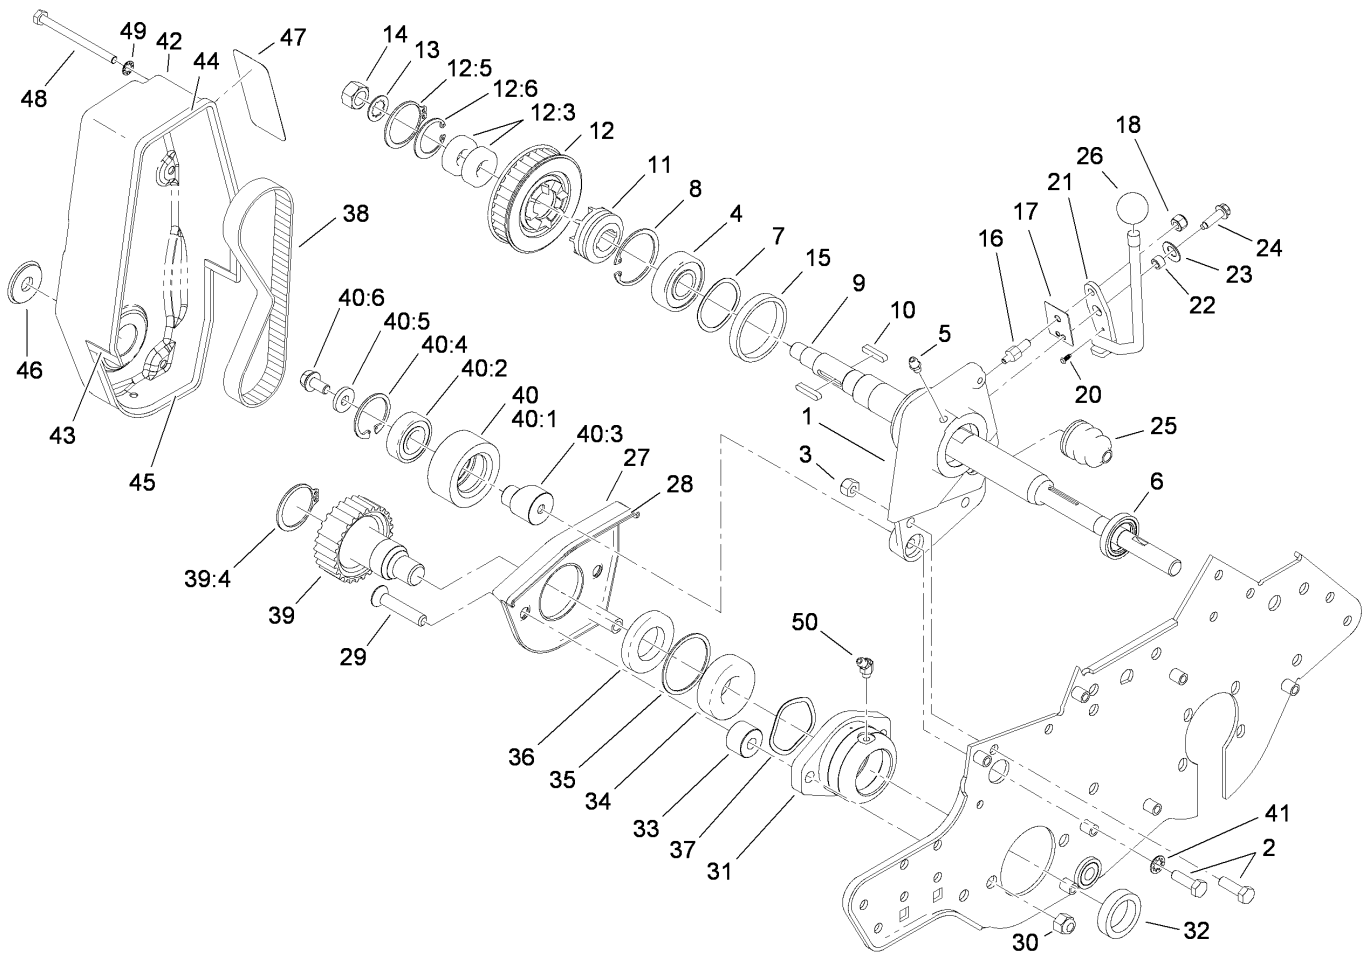

Reel Drive Assembly


Ref	Part No.	Qty.	Description
1	92-8013	1	Housing-Clutch
2	322-5	3	Screw-HH
3	3296-29	2	Nut-Lock, NI
4	251-318	1	Bearing-Ball
5	302-5	1	Fitting-Grease
6	253-118	1	Seal-Oil
7	88-7720	1	Spring-Wave
8	32151-75	1	Ring-Retaining
9	94-5872	1	Shaft-Power
10	88-7150	2	Key
11	65-6940	1	Clutch-Slider, Jaw
12	88-7830	1	Clutch And Pulley ASM
12:3	251-336	2	Bearing-Ball
12:5	32151-95	1	Ring-Retaining
12:6	32151-89	1	Ring-Retaining, Bowed
13	3254-4	1	Washer-Lock/Int
14	3219-5	1	Nut-Hex
15	65-6970	1	Seal-Felt
16	93-9014	1	Pin-Clutch, Actuator
17	65-6290	1	Spring-Detent, Clutch
18	3296-42	1	Nut-Lock, NI
20	95-5731	1	Screw-Drive
21	88-7170	1	Lever-Clutch
22	88-7860	1	Spacer

Ref	Part No.	Qty.	Description
23	3290-414	1	Washer-Belleville
24	80-0700	1	Screw
25	65-8960	1	Boot-Clutch
26	233-69	1	Knob
27	65-7190-01	1	Cover-Arm
28	65-7131	1	Seal-Cover, Strip
29	3289-23	2	Capscrew
30	3296-39	2	Nut-Lock, NI
31	65-8640	1	Housing-Bearing
32	253-96	1	Seal-Oil
33	65-8290	2	Standoff-Cover
34	251-342	1	Bearing-Ball
35	32151-92	1	Ring-Retaining
36	253-163	1	Seal
37	3290-485	1	Washer-Wave
38	65-6200	1	Belt
39	88-7840	1	Pulley And Drive ASM
39:4	32151-95	1	Ring-Retaining
40	88-7850	1	Idler Pulley ASM
40:1	88-7180	1	Pulley-Idler
40:2	38-7820	1	Bearing-Ball
40:3	88-7190	1	Spacer
40:4	32120-42	1	Ring-Retaining
40:5	88-7200	1	Washer-Flat

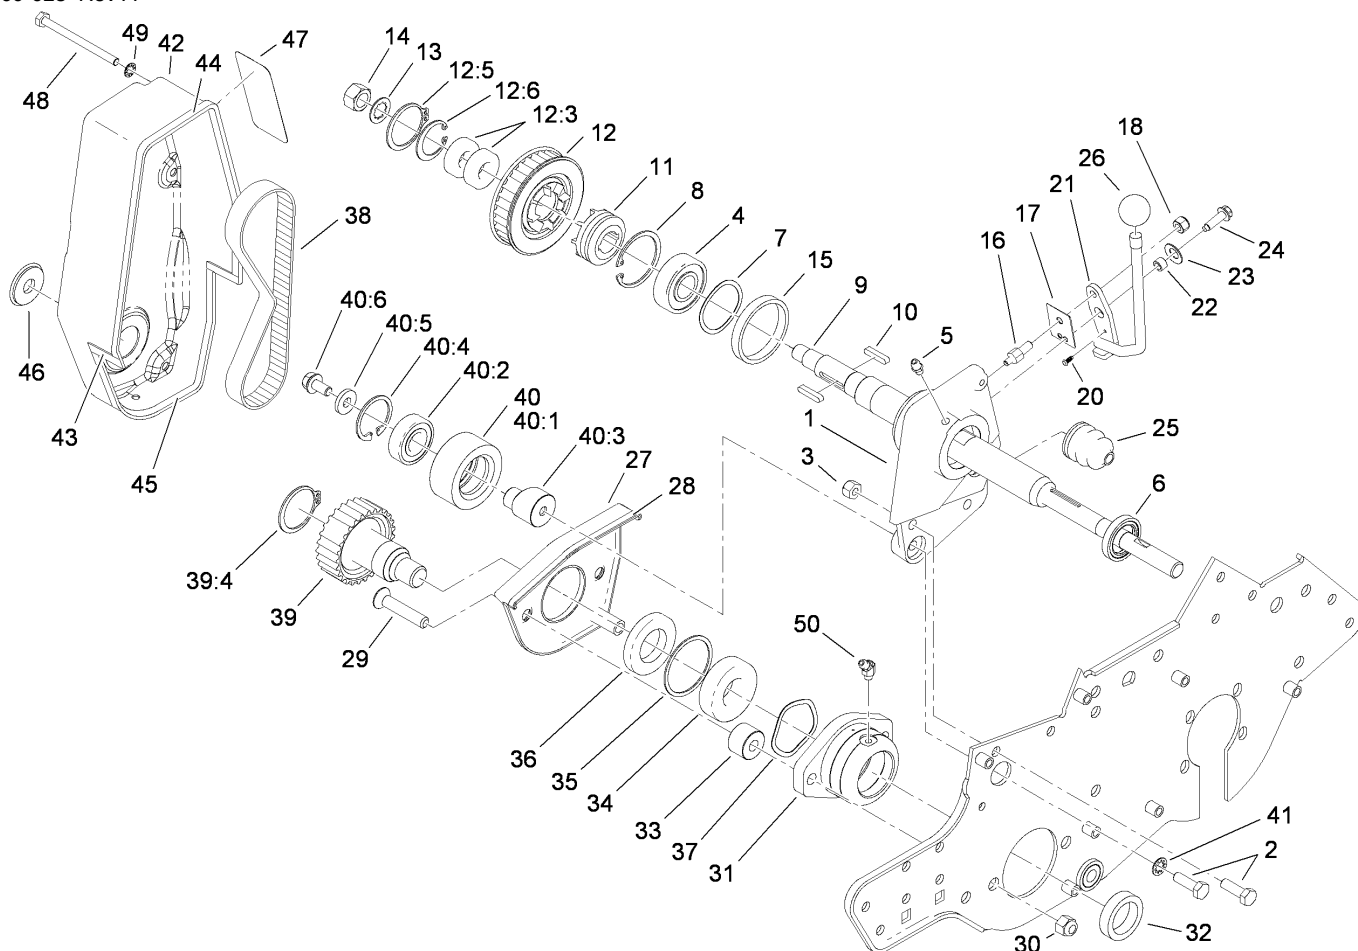


Reel Drive Assembly (continued)

Ref	Part No.	Qty.	Description
40:6	3234-14	1	Screw-HHF
41	3254-2	1	Washer-Lock, Internal
42	88-7700-01	1	Cover-Drive, Reel
43	88-7770	2	Strip-Seal, Front
44	88-7790	1	Strip-Seal, Upper
45	88-7800	1	Strip-Seal, Lower
46	237-160	1	Plug-Rubber
47	92-4817	1	Decal-Engagement, Reel (Japan)
47	93-7346	1	Decal-Engagement, Reel
48	321-20	4	Screw-HH
49	3254-8	4	Washer-Lock
50	302-11	1	Fitting-Lube, 45 DEG

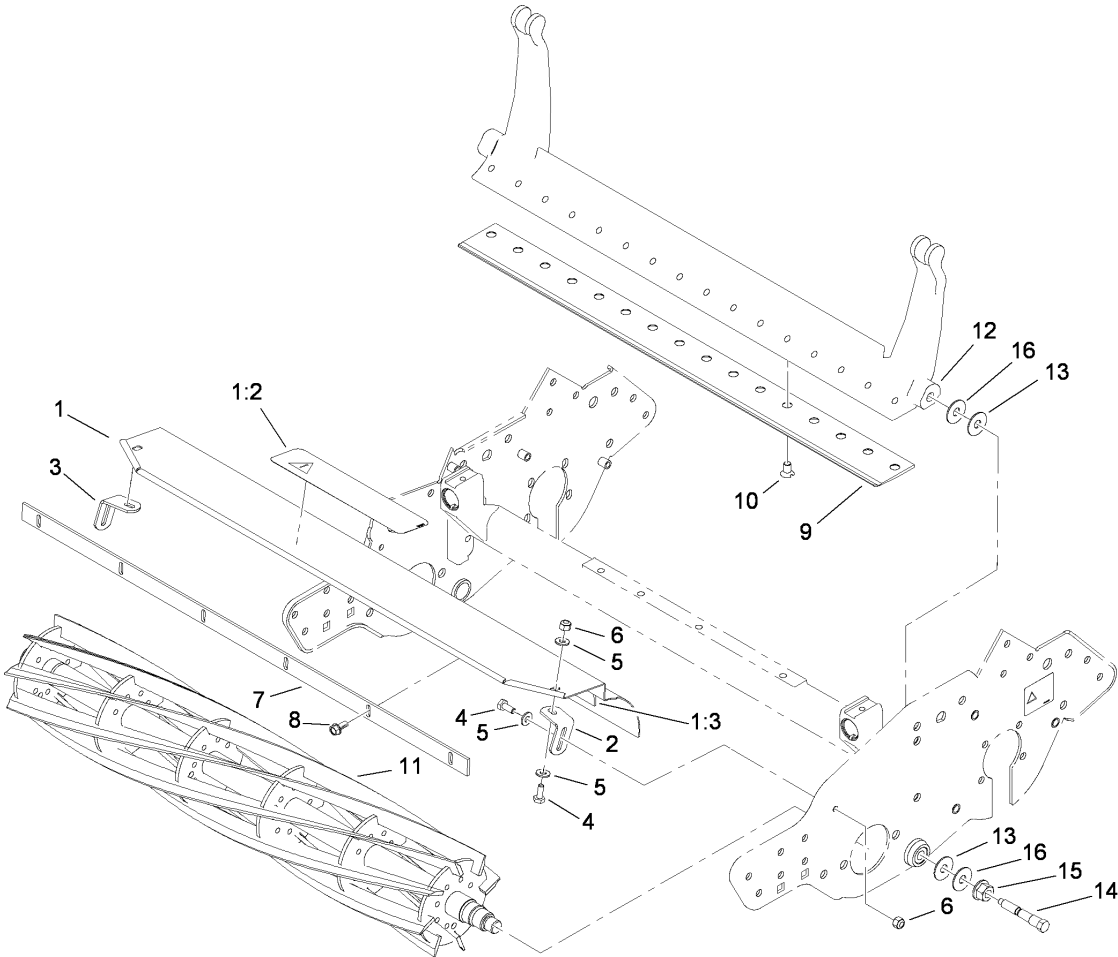

Reel Assembly


Ref	Part No.	Qty.	Description				
1	110-7370	1	Grass Shield ASM				
1:2	84-6560	1	Decal-Warning (Japan)				
1:2	93-8064	1	Decal-Danger, Ce				
1:3	95-1636	1	Strip-Seal				
2	65-6450	1	Bracket-LH				
3	65-6460	1	Bracket-RH				
4	321-3	4	Screw-HH				
5	3256-22	6	Washer-Flat				
6	3296-42	4	Nut-Lock, NI				
7	94-5879	1	Bar-Cut Off				
8	104-2065	6	Screw-HWH				
9	93-9015	1	Bedknife-Lowcut				
10	57-4910	16	Screw-Special				
11	95-0900	1	8-Blade Reel ASM				
12	112-9280-01	1	Bedbar-Standard				
13	52-2900	4	Washer-Plastic				
14	65-6270	2	Bolt-Bedbar				
15	32128-48	2	Nut-Lock, HHF				
16	52-2860	4	Washer				

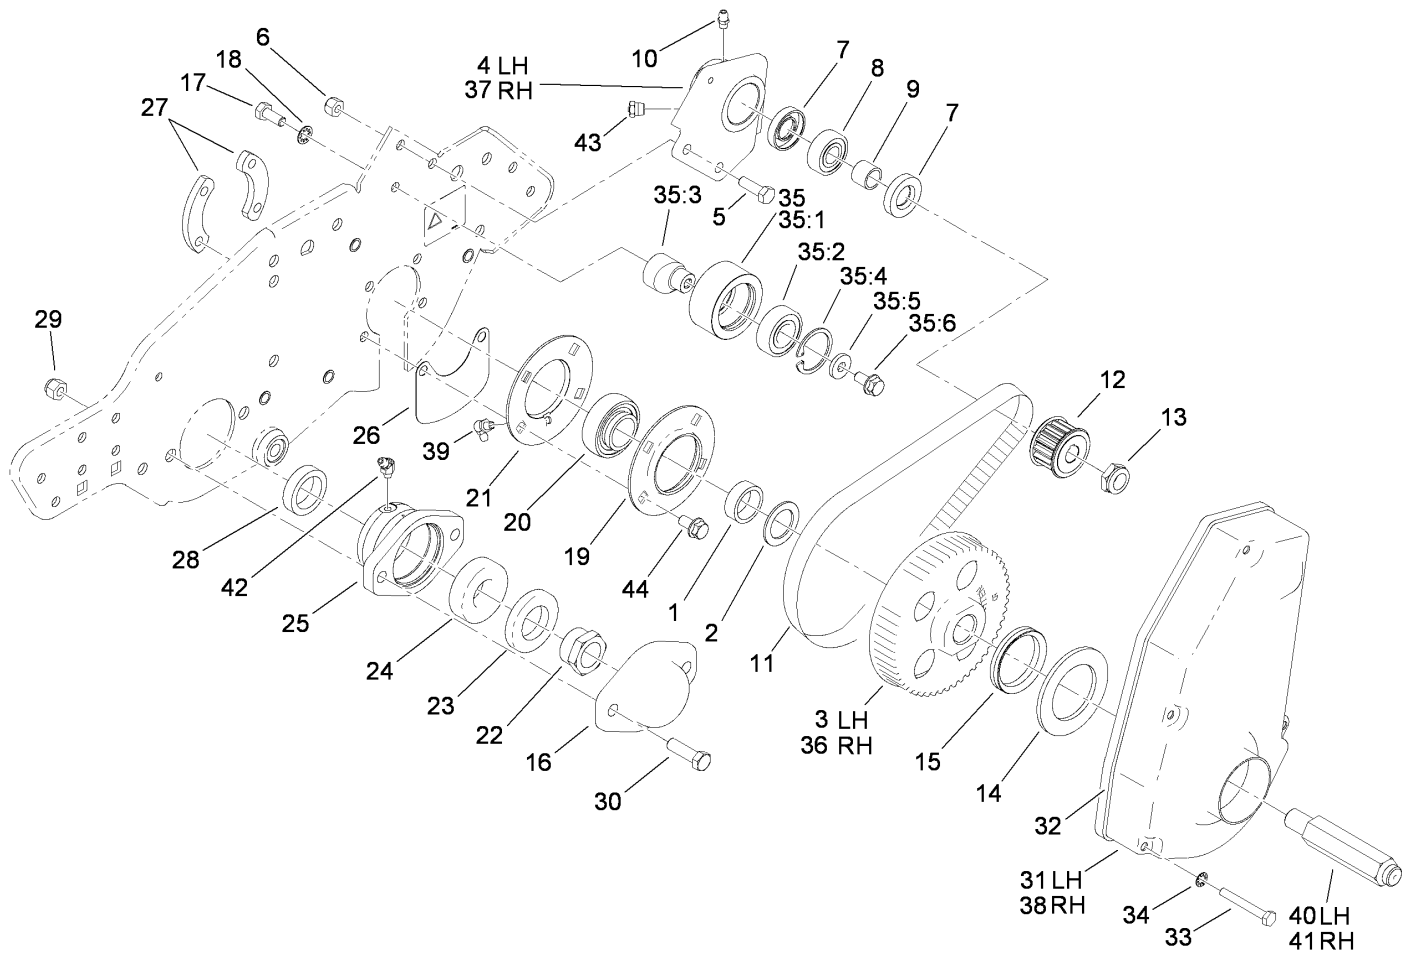

Drum Drive Assembly


Ref	Part No.	Qty.	Description
1	88-7530	2	Spacer
2	88-7540	2	Washer-Backup
3	105-5365	1	Pulley-Drum, LH
4	108-9414	1	Housing-Support, Differential (LH)
5	322-5	4	Screw-HH
6	3296-29	4	Nut-Lock, NI
7	253-160	4	Seal-Grease
8	251-338	2	Bearing-Ball
9	86-7130	2	Spacer-Pulley
10	302-5	2	Fitting-Grease
11	65-6210	2	Belt
12	65-6660	2	Pulley
13	3296-57	2	Nut-Lock, NI
14	94-9018	2	Washer-Plastic
15	253-161	2	Seal-V-Ring
16	65-6220-01	1	Cover-End, Reel
17	322-3	2	Screw-HH
18	3254-2	2	Washer-Lock, Internal
19	65-6590	2	Flangette-Bearing
20	88-7880	2	Bearing
21	95-0923	2	Flangette
22	92-7302	1	Nut-Bearing, Lock
23	253-163	1	Seal
24	251-342	1	Bearing-Ball

Ref	Part No.	Qty.	Description
25	65-8640	1	Housing-Bearing
26	65-8720	2	Closure-Plate, Side
27	65-8730	4	Clamp-Bearing
28	253-96	1	Seal-Oil
29	3296-39	2	Nut-Lock, NI
30	323-7	2	Screw-HH
31	88-7680-01	1	Cover-Belt Drum, LH
32	88-7810	2	Seal-Strip, Drum Cover
33	321-11	8	Screw-HH
34	3254-8	8	Washer-Lock
35	88-7850	2	Idler Pulley ASM
35:1	88-7180	1	Pulley-Idler
35:2	38-7820	1	Bearing-Ball
35:3	88-7190	1	Spacer
35:4	32120-42	1	Ring-Retaining
35:5	88-7200	1	Washer-Flat
35:6	3234-14	1	Screw-HHF
36	105-5364	1	Pulley-Drum, RH
37	108-9416	1	Housing-Support, Differential (RH)
38	88-7690-01	1	Cover-Drum, Belt (RH)
39	104-1843	2	Fitting-Grease, 90 DEG
40	88-7580	1	Shaft-Wheel, Transport (LH)
41	88-7590	1	Shaft-Wheel, Transport (RH)
42	302-11	1	Fitting-Lube, 45 DEG

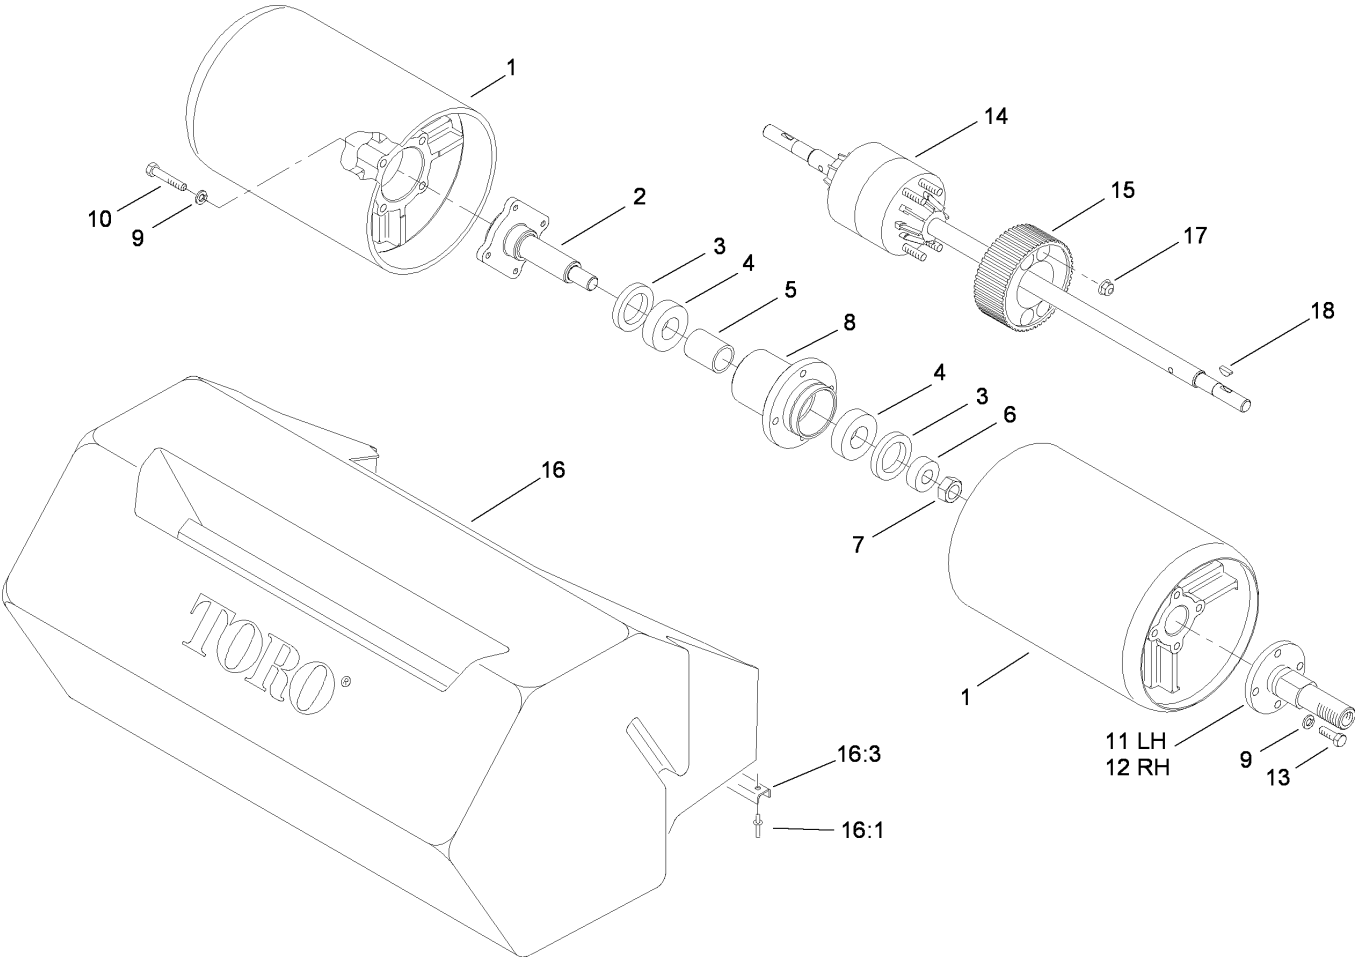


Drum and Basket Assembly

Ref	Part No.	Qty.	Description				
1	93-9042	2	Drum-Long				
2	94-5850	1	Spindle-Drum				
3	253-159	2	Seal				
4	251-82	2	Bearing-Ball				
5	65-6520	1	Spacer				
6	65-6530	1	Spacer				
7	3296-33	1	Nut-Lock, NI				
8	94-5852	1	Hub-Drum				
9	3253-4	16	Washer-Lock				
10	322-9	8	Screw-HH				
11	88-7520	1	Shaft-Extension, Drum (LH)				
12	88-7510	1	Shaft-Extension, Drum (RH)				
13	322-5	8	Screw-HH				
14	93-9041	1	Differential				
15	65-9120	1	Pulley-Housing, Differential				
16	94-5893	1	Basket ASM				
16:1	3290-409	9	Rivet				
16:3	94-5894	1	Channel-Basket				
17	104-8300	4	Nut-Flange, NI				
18	3257-30	2	Key-Woodruff				

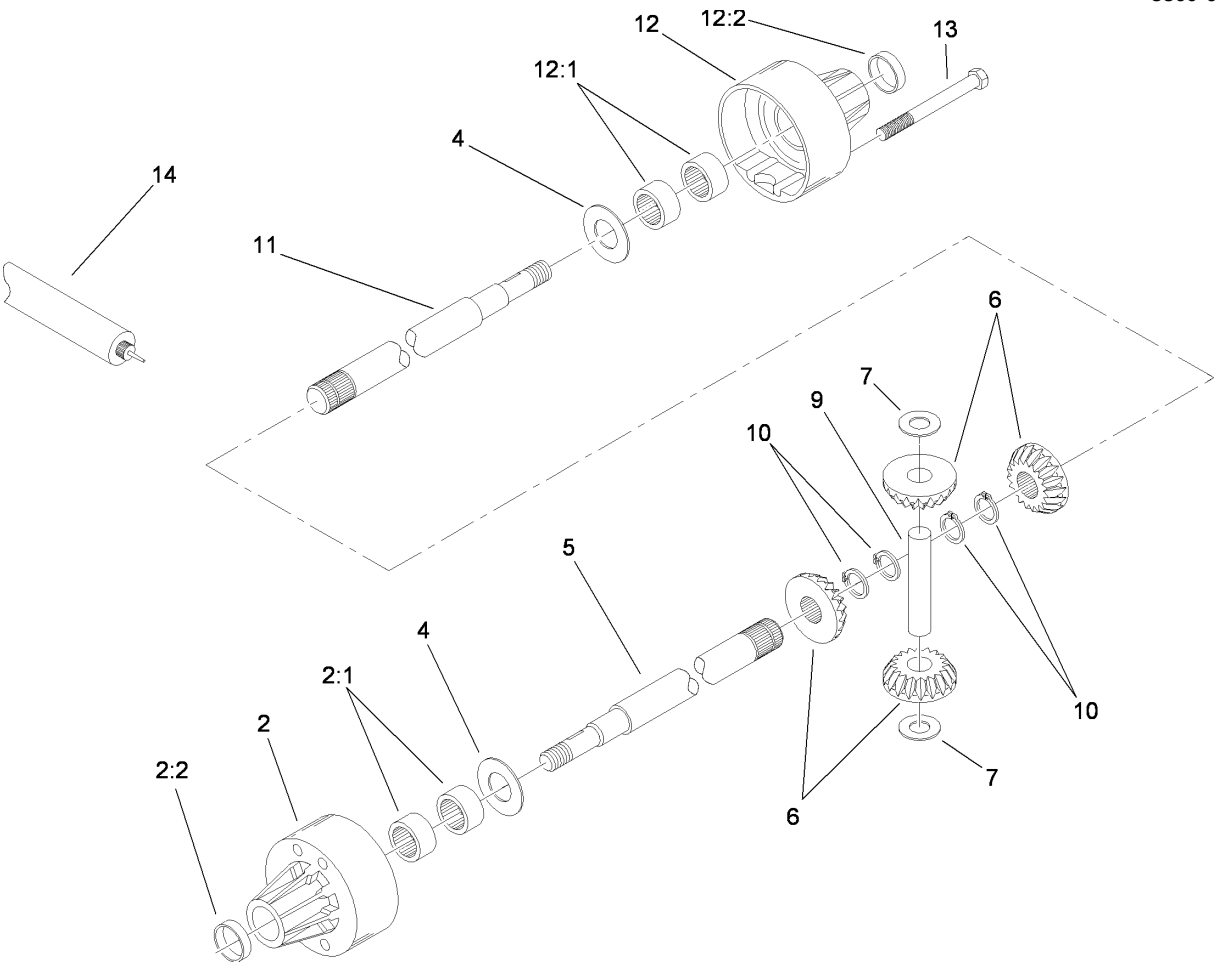


Differential Assembly No. 93-9041

Ref	Part No.	Qty.	Description				
2	95-5741	1	Carrier-Differential				
2:1	95-5738	4	Bearing-Needle				
2:2	95-5737	2	Seal-Oil				
4	95-5745	2	Washer				
5	95-5743	1	Axle-Long				
6	104-0503	1	Gear Set-Differential				
7	95-5744	2	Washer-Flat				
9	95-5747	1	Pin-Drive				
10	95-5746	4	Ring-Retaining				
11	95-5742	1	Axle-Short				
12	95-5740	1	Carrier-Differential				
12:1	95-5738	4	Bearing-Needle				
12:2	95-5737	2	Seal-Oil				
13	95-5739	4	Screw				
14	95-5734	1	Grease				

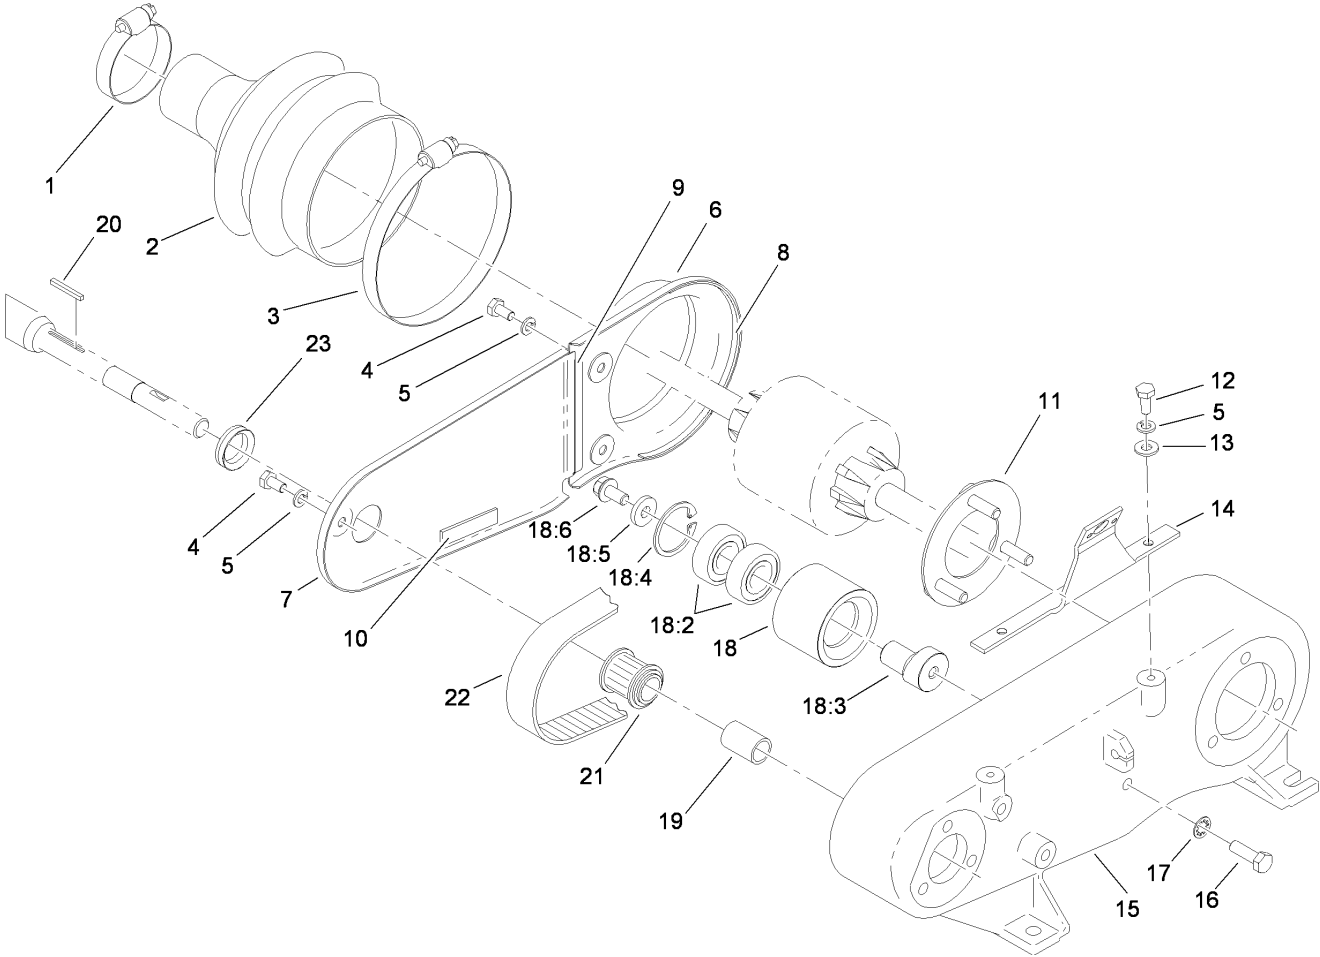

Inner Countershaft Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	2412-139	1	Clamp-Hose	20	65-6850	1	Key-Square
2	94-5866	1	Boot-Differential	21	65-8910	1	Pulley-Countershaft
3	2412-140	1	Clamp-Hose	22	65-9080	1	Belt
4	321-2	3	Screw-HH	23	88-7710	1	Seal-V-Ring
5	3253-3	5	Washer-Lock				
6	88-7250-03	1	Cover-Box, Rear				
7	88-7240-03	1	Cover-Box, Front				
8	65-6902	1	Strip-Seal, Cover				
9	65-6903	1	Strip-Seal, Cover				
10	65-6901	1	Strip-Seal, Cover				
11	65-6720	1	Plate-Screw				
12	321-3	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	93-1448	1	Bracket Cover ASM				
15	88-7230	1	Housing-Shaft, Counter				
16	322-5	1	Screw-HH				
17	3254-2	1	Washer-Lock, Internal				
18	88-7870	1	Idler Pulley ASM				
18:2	38-7820	2	Bearing-Ball				
18:3	88-7380	1	Spacer-Pulley				
18:4	32120-42	1	Ring-Retaining				
18:5	88-7200	1	Washer-Flat				
18:6	3234-14	1	Screw-HHF				
19	86-7140	1	Spacer				

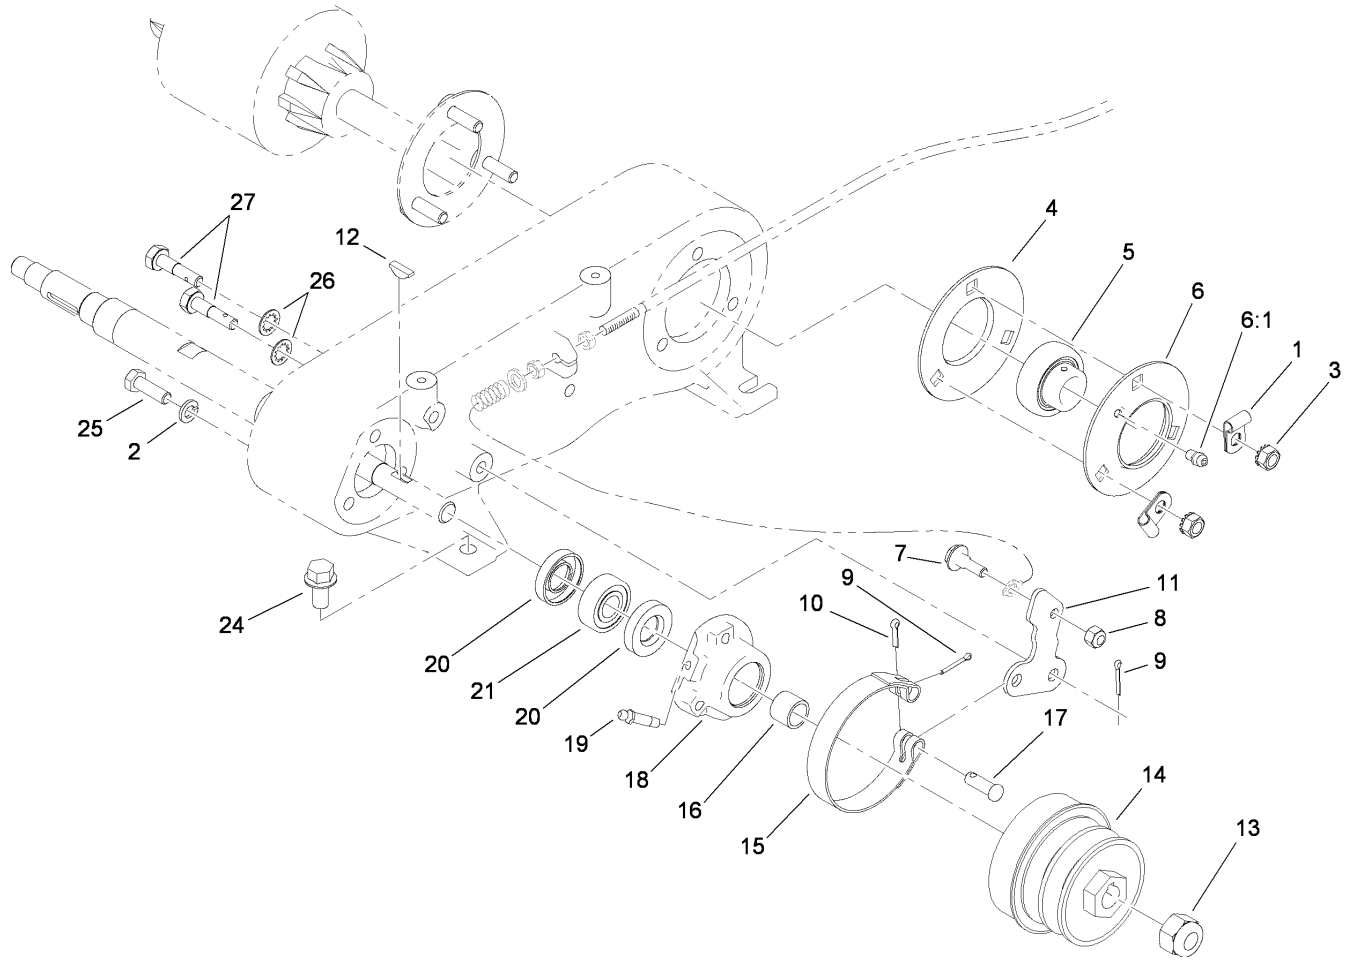

Outer Crankshaft Assembly


Ref	Part No.	Qty.	Description
1	88-7970	2	Clip
2	3253-4	3	Washer-Lock
3	32149-1	3	Nut-Keps
4	65-6710	1	Flangette-Bearing
5	108-7663	1	Bearing-Race, Extended
6	65-6700	1	Flangette-Lube
6:1	302-55	1	Fitting-Grease
7	11-9030	1	Screw-Shoulder
8	3296-42	1	Nut-Lock, NI
9	3272-6	2	Pin-Cotter
10	3272-8	1	Pin-Cotter
11	65-8610	1	Lever-Brake
12	3257-30	1	Key-Woodruff
13	3296-63	1	Nut-Lock NI
14	92-9212	1	Pulley-Shaft, Input
15	65-8700	1	Band-Brake
16	86-7130	1	Spacer-Pulley
17	283-75	1	Pin-Clevis
18	65-6760	1	Housing-Bearing
19	302-64	1	Fitting-Grease
20	253-160	2	Seal-Grease
21	251-338	1	Bearing-Ball
24	3234-1	4	Screw-HHF
25	322-5	3	Screw-HH

Ref	Part No.	Qty.	Description
26	3254-6	2	Washer-Lock, Internal
27	65-6810	2	Support-Brake

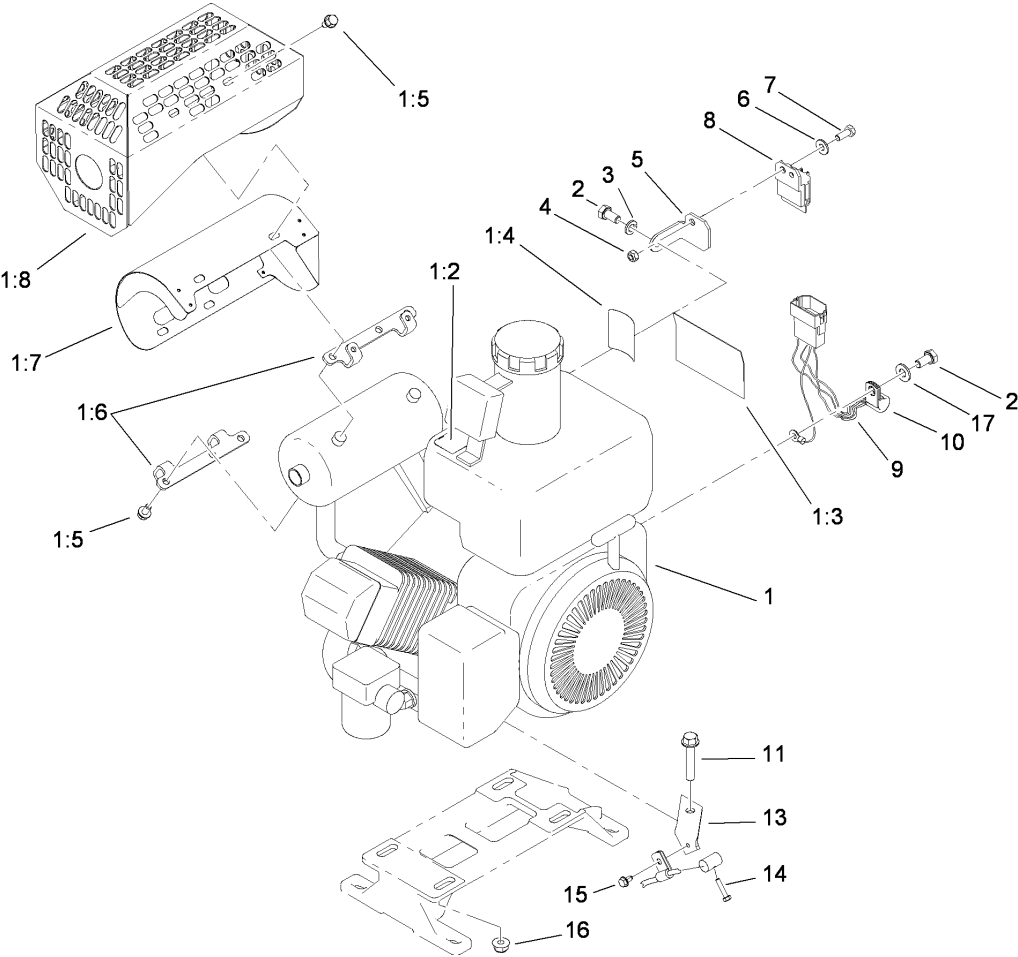

Engine Assembly


Ref	Part No.	Qty.	Description				
1	112-9402	1	Engine ASM				
1:2	115-1615	1	Decal-Surface, Hot				
1:3	115-1613	1	Decal-Danger				
1:4	93-9886	1	Decal-Fuel				
1:5	104-2628	8	Screw-HWH				
1:6	104-9771	2	Bracket-Guard, Muffler				
1:7	112-9360	1	Shield-Muffler, Inner				
1:8	112-9361-03	1	Guard-Muffler				
2	33114-016	2	Screw-HH				
3	3253-4	1	Washer-Lock				
4	33023-00	1	Nut-Lock				
5	94-5861	1	Bracket-Module				
6	3256-22	1	Washer-Flat				
7	33113-016	1	Screw-HH				
8	1-323430	1	Module-Interlock				
9	112-9410	1	Harness-Wire				
10	2412-93	1	Clamp-R				
11	94-5780	4	Screw-HWH				
13	88-7960	1	Bracket-Cable, Throttle				
14	94-9015	1	Screw-HH				
15	104-2065	1	Screw-HWH				
16	104-8300	4	Nut-Flange, NI				
17	33094-00	1	Washer-Plain				

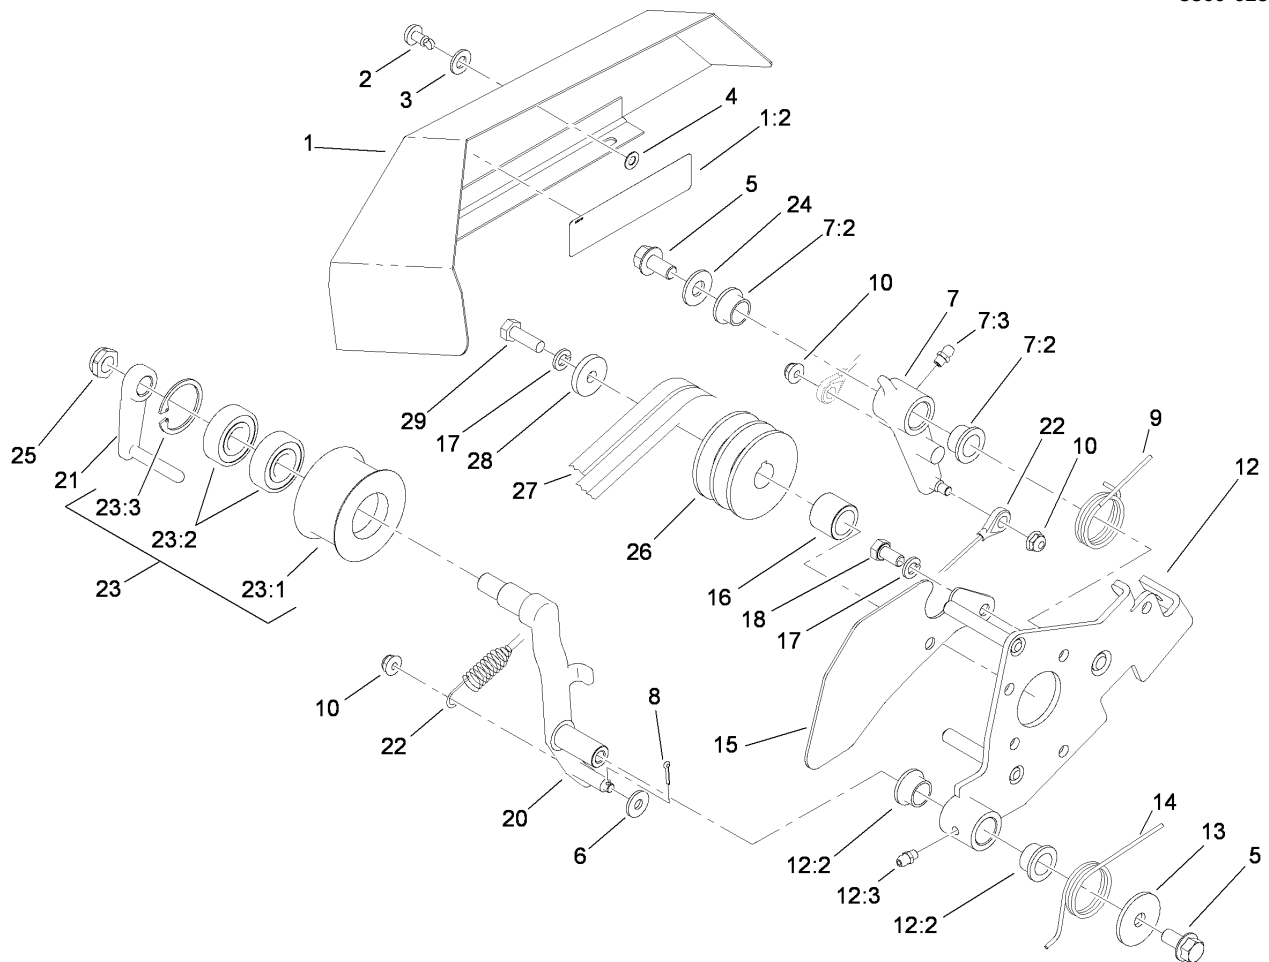

Bellcrank Assembly


Ref	Part No.	Qty.	Description
1	94-9007	1	Bellcrank Cover ASM
1:2	84-7280	1	Decal-Danger, Japan
1:2	93-7273	1	Decal-Danger
2	93-6074	1	Stud
3	3256-70	1	Washer-Flat
4	93-6073	1	Washer-Nylon
5	110-1718	2	Screw-HHF
6	3256-78	1	Washer-Flat
7	112-9388	1	Traction Lever ASM
7:2	65-8770	2	Bushing-Bellcrank
7:3	302-5	1	Fitting-Grease
8	3272-5	1	Pin-Cotter
9	93-6011	1	Spring-Torsion
10	104-7201	3	Nut-HF
12	112-9398	1	Clutch Bracket ASM
12:2	65-8770	2	Bushing-Bellcrank
12:3	302-5	1	Fitting-Grease
13	93-6099	1	Washer
14	93-6012	1	Spring-Torque, Clutch Lever
15	93-6013-03	1	Shield-Belt
16	65-8260	1	Spacer-Shaft, Engine
17	3253-4	6	Washer-Lock
18	33114-016	5	Screw-HH
20	112-9392	1	Lever-Clutch

Ref	Part No.	Qty.	Description
21	112-9390	1	Guide-Belt
22	93-9024	1	Cable Link ASM
23	112-9385	1	Idler Pulley ASM
23:1	98-7297	1	Pulley-Idler
23:2	38-7820	2	Bearing-Ball
23:3	32120-42	1	Ring-Retaining
24	3256-4	1	Washer-Flat
25	3296-45	1	Nut-Lock, NI
26	92-9216	1	Pulley-Drive, Input
27	92-9218	1	V-Belt (Matched Set)
28	65-8270	1	Washer
29	33114-025	1	Screw-HH

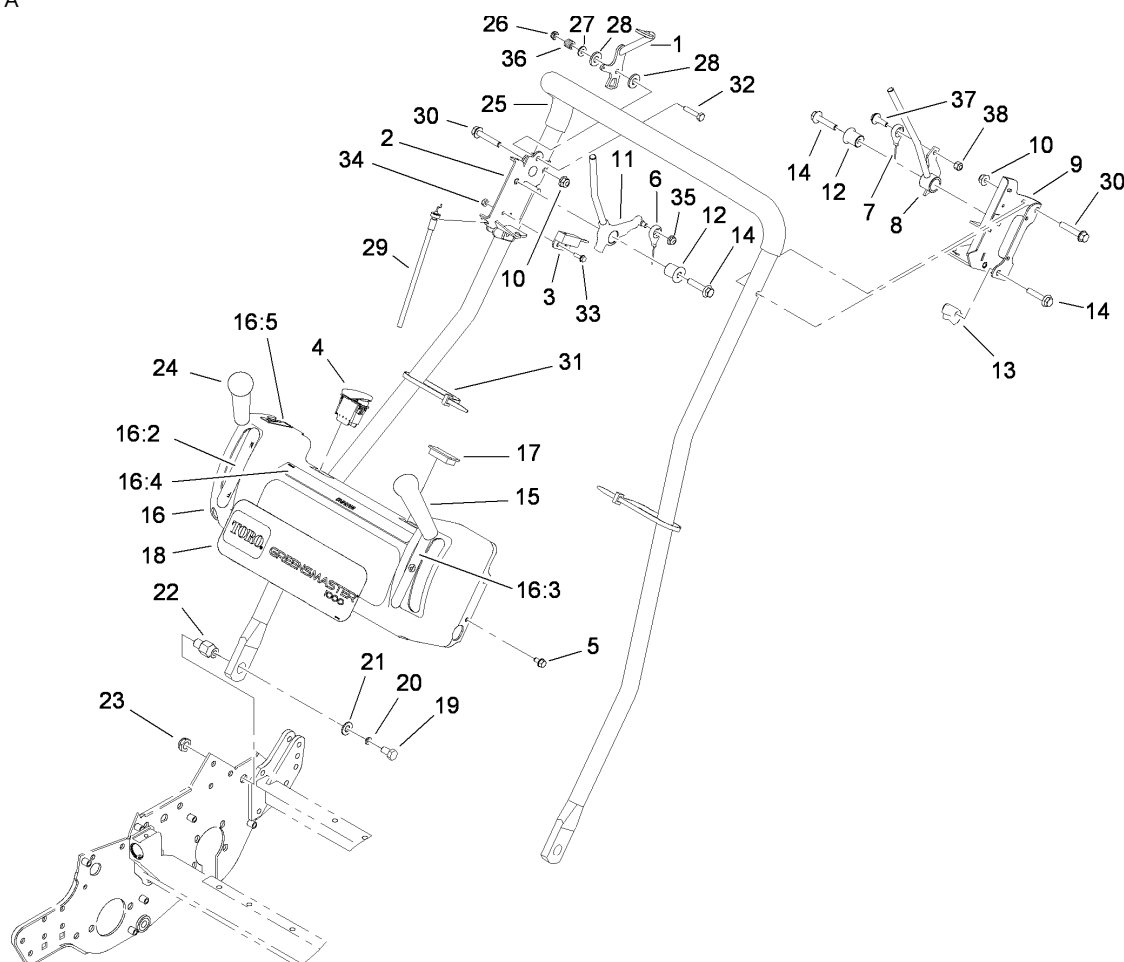


Handle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	115-1098	1	Throttle Lever ASM	21	3256-24	2	Washer-Flat
2	115-1069-03	1	Control Bracket ASM	22	110-7364	2	Pin-Handle, Pivot
3	100-1270	1	Switch-Proximity	23	3296-28	2	Nut-Lock, NI
4	112-9420	1	Switch-Engine	24	104-9760	1	Knob-Black
5	104-2628	4	Screw-HWH	25	112-9479	1	Handle
6	94-5870	1	Cable Clutch ASM	26	3296-56	1	Nut-Lock, NI
7	94-5871	1	Cable Brake ASM	27	3256-22	1	Washer-Flat
8	115-1677	1	Brake Lever ASM	28	66-2921	2	Washer-Friction
9	115-1068-03	1	Brake Bracket ASM	29	115-1747	1	Cable-Throttle
10	104-8300	2	Nut-Flange, NI	30	94-5780	2	Screw-HWH
11	112-9321	1	Lever-Traction	31	3290-378	2	Tie-Cable
12	112-9317	2	Bushing-Flanged	32	321-8	1	Screw-HH
13	110-2415	2	Clamp-Handle	33	32105-23	2	Screw
14	112-9318	4	Screw-HHF W/Lock	34	3296-2	2	Nut-Lock
15	104-9774	1	Knob-Red	35	104-7201	1	Nut-HF
16	115-1120	1	Console ASM	36	3-5787	1	Spring-Compression
16:2	115-1720	1	Decal-Lever, Traction	37	11-9030	1	Screw-Shoulder
16:3	104-2618	1	Decal-Lever, Brake	38	3296-42	1	Nut-Lock, NI
16:4	115-1614	1	Decal-Warning				
16:5	93-6085	1	Decal-Throttle				
17	99-7420	1	Plug-Hole				
18	115-1131	1	Decal-Console				
19	323-34	2	Screw-HH				
20	3253-21	2	Washer-Lock				

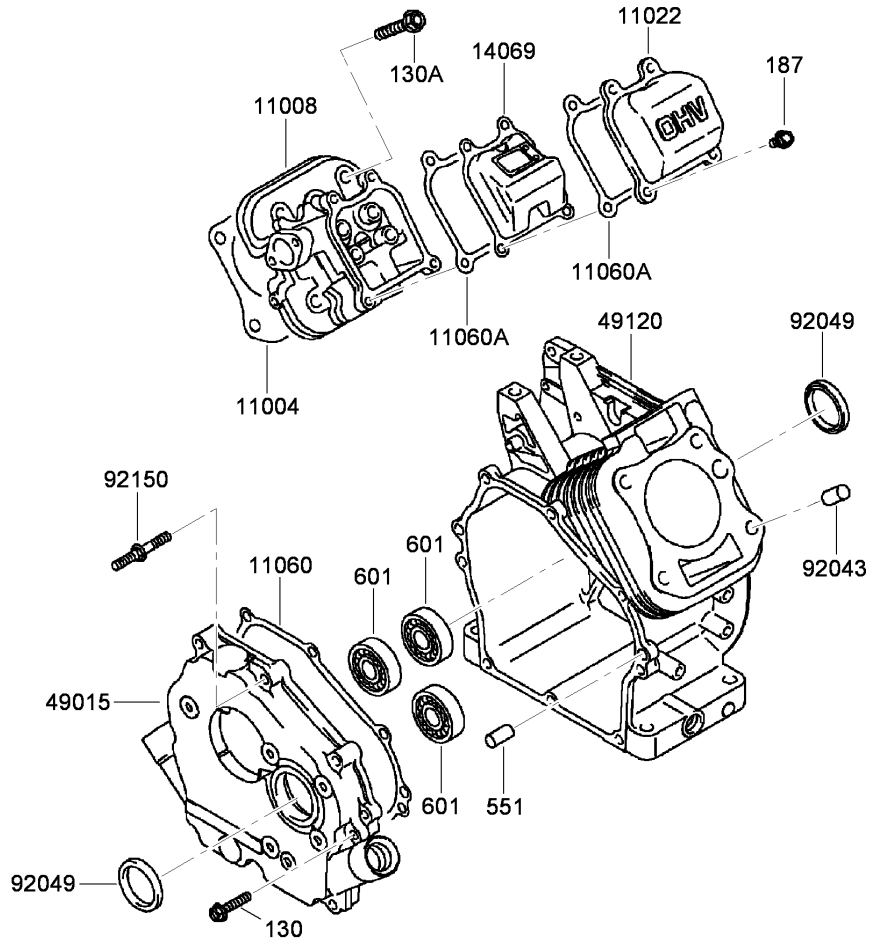


Cylinder and Crankcase Assembly

Ref	Part No.	Qty.	Description				
130	108-2522	4	Bolt-Flanged (6X30)				
130A	115-1759	4	Bolt-Flanged (8X45)				
187	115-1760	4	Bolt-Upset, Wsp (6X16)				
551	93-8516	2	Pin-Dowel (6X12)				
601	93-8517	3	Bearing-Ball				
11004	93-8504	1	Gasket-Head				
11008	115-1757	1	Head-Cylinder				
11022	93-8508	1	Case-Rocker				
11060	93-8525	1	Gasket-Cover, Crankcase				
11060A	93-8509	2	Gasket-Case, Rocker				
14069	93-8510	1	Breather				
49015	93-8520	1	Cover-Crankcase				
49120	93-8515	1	Crankcase				
92043	93-8512	2	Pin				
92049	93-8511	2	Seal-Oil				
92150	93-8524	1	Stud				

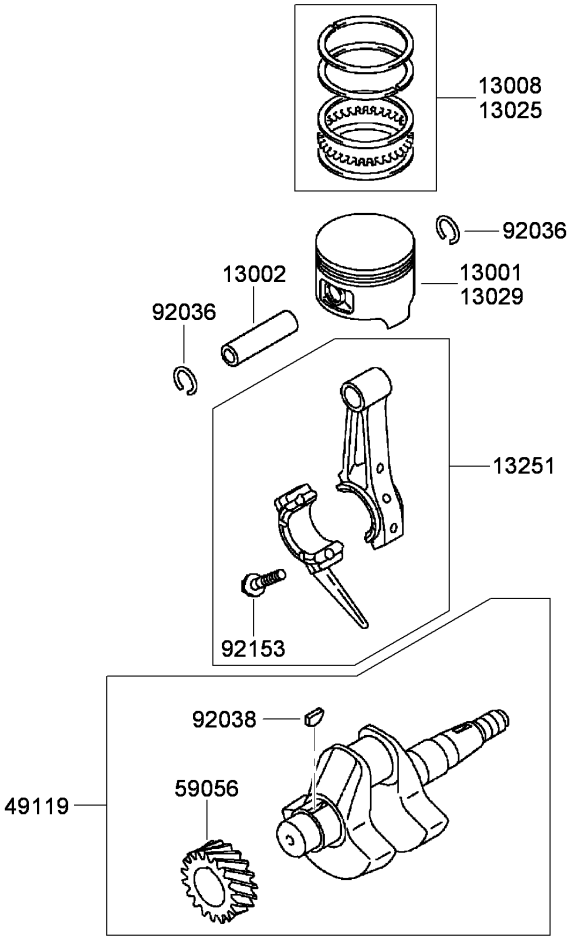


Piston and Crankshaft Assembly

Ref	Part No.	Qty.	Description				
13001	93-8502	1	Piston				
13002	93-8501	1	Pin-Piston				
13008	93-8503	1	Set-Ring, Piston				
13025	94-6837	1	Piston Ring Set (.05Mm)				
13029	94-6836	1	Piston (0.5 O S)				
13251	93-8528	1	Connecting Rod ASM				
49119	93-8518	1	Crankshaft ASM				
59056	94-9043	1	Gear-Helical				
92036	93-8500	2	Ring-Retaining				
92038	93-8698	1	Key				
92153	115-1805	2	Bolt (6X30)				

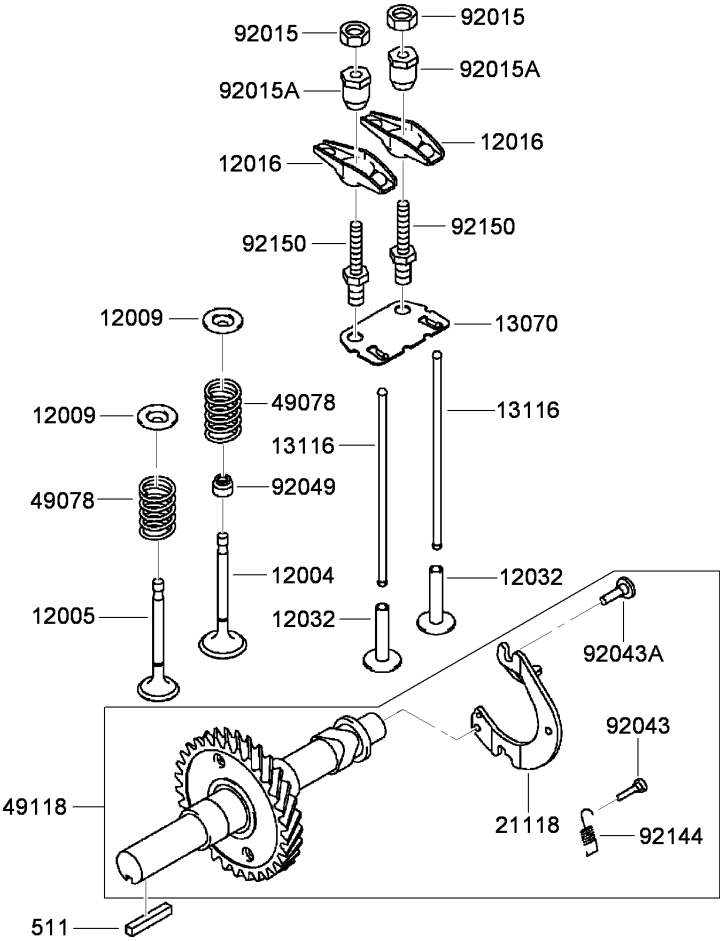


Valve and Camshaft Assembly

Ref	Part No.	Qty.	Description				
511	108-9442	1	Key				
12004	93-8532	1	Valve-Intake				
12005	93-8529	1	Valve-Exhaust				
12009	93-8531	2	Retainer-Spring, Valve				
12016	93-8535	2	Arm-Rocker				
12032	93-8539	2	Tappet				
13070	115-1758	1	Guide				
13116	93-8538	2	Rod-Push				
21118	93-8543	1	Decompressor				
49078	115-1763	2	Spring-Valve, Engine				
49118	93-8544	1	Camshaft ASM				
92015	93-8533	2	Nut				
92015A	93-8534	2	Nut				
92043	93-8542	1	Pin				
92043A	93-8540	2	Pin				
92049	115-1762	1	Seal-Oil				
92144	93-8541	1	Spring				
92150	93-8536	2	Bolt				

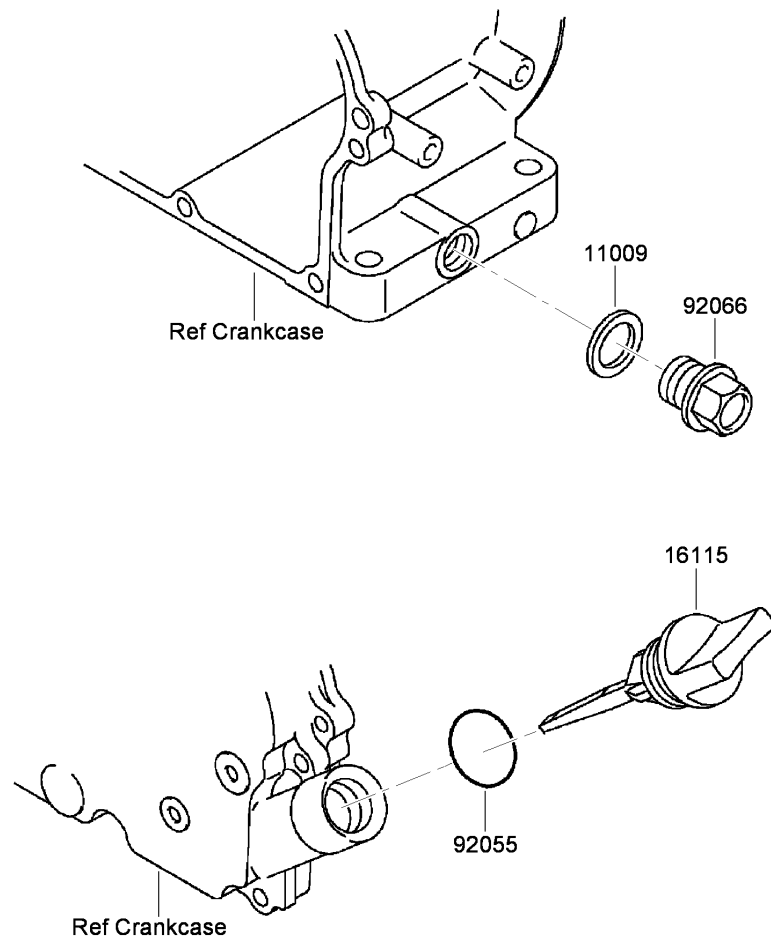


Lubrication Equipment Assembly

Ref	Part No.	Qty.	Description
11009	93-8514	2	Gasket-Plug, Drain (14.2X19X2)
16115	93-8523	2	Cap-Filler, Oil
92055	94-9041	2	O-Ring (20Mm)
92066	115-1761	2	Plug (14X12)

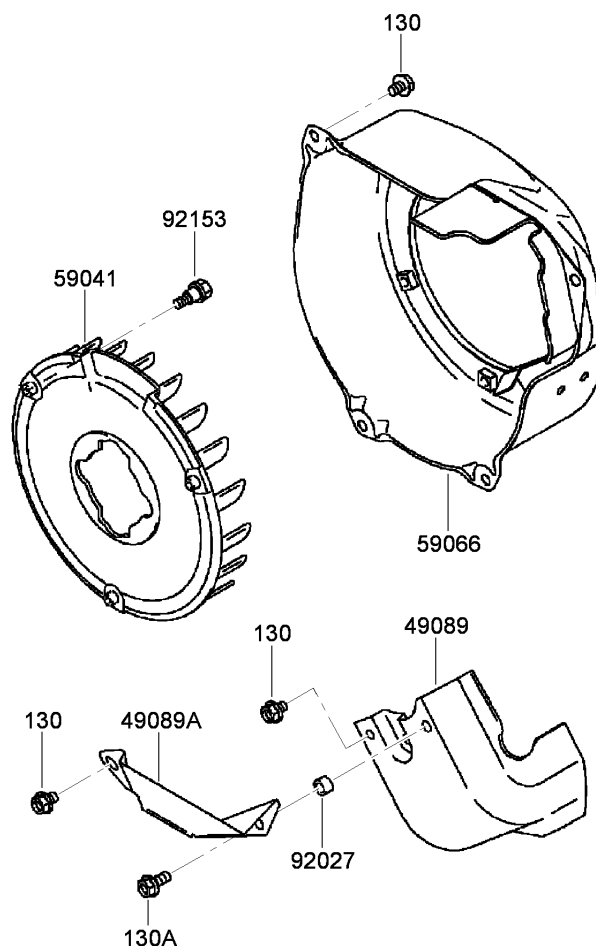


Cooling Equipment Assembly

Ref	Part No.	Qty.	Description				
130	115-1765	7	Bolt-Flanged (6X8)				
130A	115-1764	1	Bolt-Flanged (6X14)				
49089	93-8563	1	Shroud-Engine				
49089A	93-8565	1	Shroud-Engine				
59041	93-8572	1	Fan				
59066	115-1804	1	Housing-Fan				
92027	93-8564	1	Collar (6.8X10X6)				
92153	115-1766	3	Bolt				

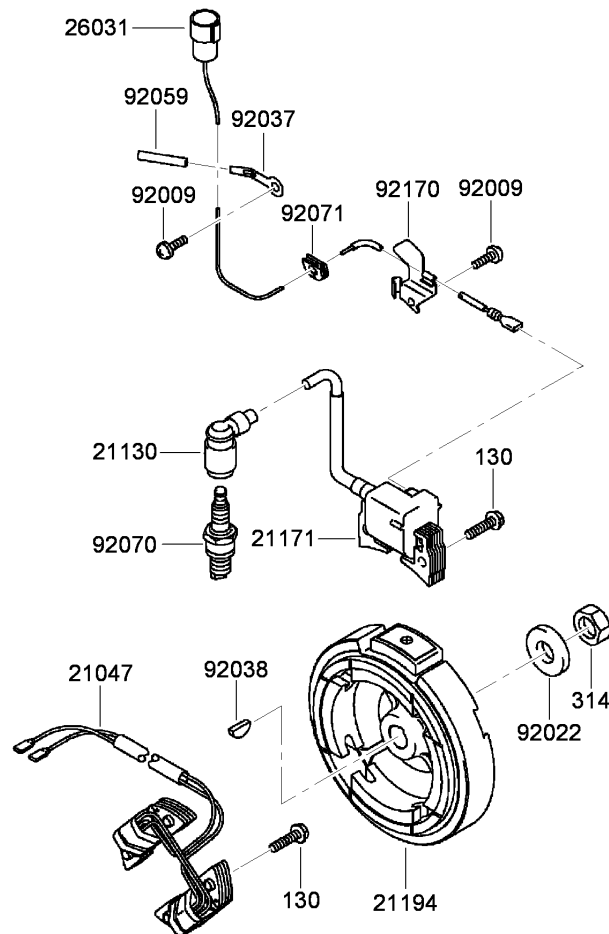

Electric Equipment Assembly


Ref	Part No.	Qty.	Description				
130	100-2610	6	Bolt-Flanged (6X25)				
314	115-1845	1	Nut-Hex, Fine (14Mm)				
21047	99-4267	1	Coil-Lighting				
21130	KW10087	1	Cap-Sparkplug				
21171	94-9031	1	Ignition Coil ASM				
21194	99-6237	1	Flywheel ASM				
26031	115-1767	1	Harness				
92009	95-9716	2	Screw				
92022	93-8569	1	Washer				
92037	115-1771	1	Clamp				
92038	93-8571	1	Key				
92059	115-1768	1	Tube (5X6X75)				
92070	108-2557	1	Sparkplug-B P R5E S (N G K) Solid				
92071	115-1772	1	Grommet				
92170	93-8583	1	Clamp				

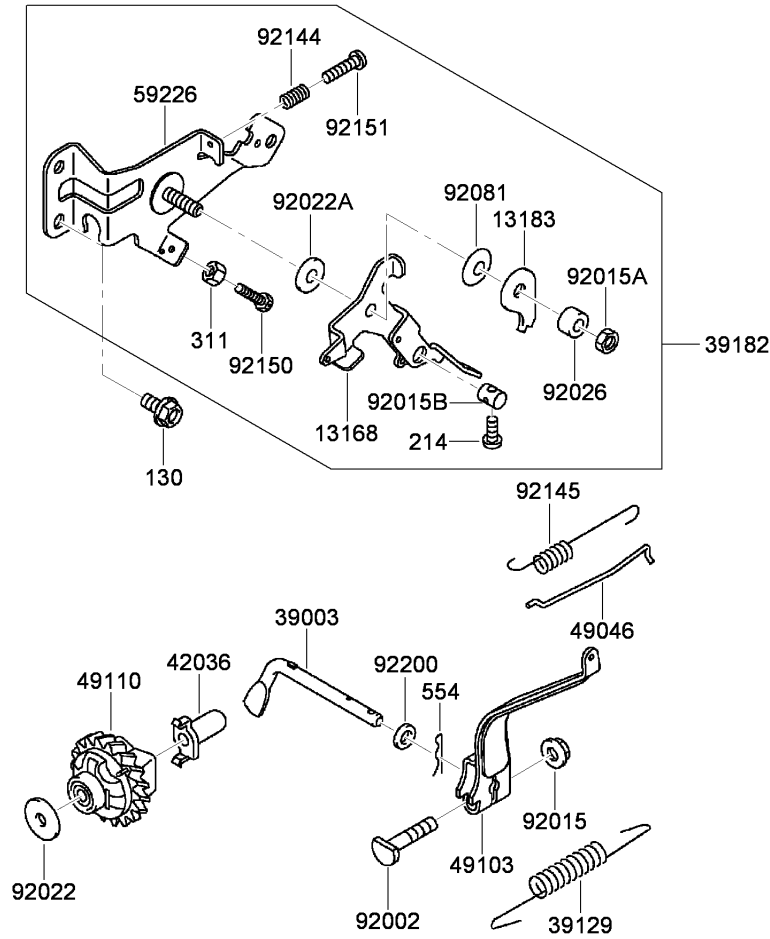

Control Equipment Assembly


Ref	Part No.	Qty.	Description
130	115-1809	2	Bolt-Flanged (6X12)
214	115-1778	1	Screw-Pan (4X14)
311	115-6495	1	Nut-Hex (4Mm)
554	115-8671	1	Pin-Snap (1.2X21.2)
13168	93-8598	1	Lever
13183	93-8592	1	Plate
39003	93-8609	1	Arm-Pivot
39129	115-1803	1	Spring-Governor
39182	115-1754	1	Control Panel ASM
42036	108-2567	1	Sleeve
49046	115-1811	1	Rod-Governor
49103	93-8603	1	Arm-Governor
49110	115-1812	1	Governor ASM
59226	115-1773	1	Panel-Control
92002	93-8606	1	Bolt (6X28)
92015	93-8631	1	Nut
92015A	93-8595	1	Nut
92015B	93-8597	1	Nut
92022	94-6842	1	Washer (6.2X20X0.5)
92022A	93-8590	1	Washer
92026	115-1776	1	Spacer
92081	115-1775	1	Spring
92144	93-8588	1	Spring
92145	115-1810	1	Spring

Ref	Part No.	Qty.	Description
92150	115-1813	1	Bolt
92151	115-1774	1	Bolt (4X22)
92200	93-8608	1	Washer (6.5X11.5X2.0)

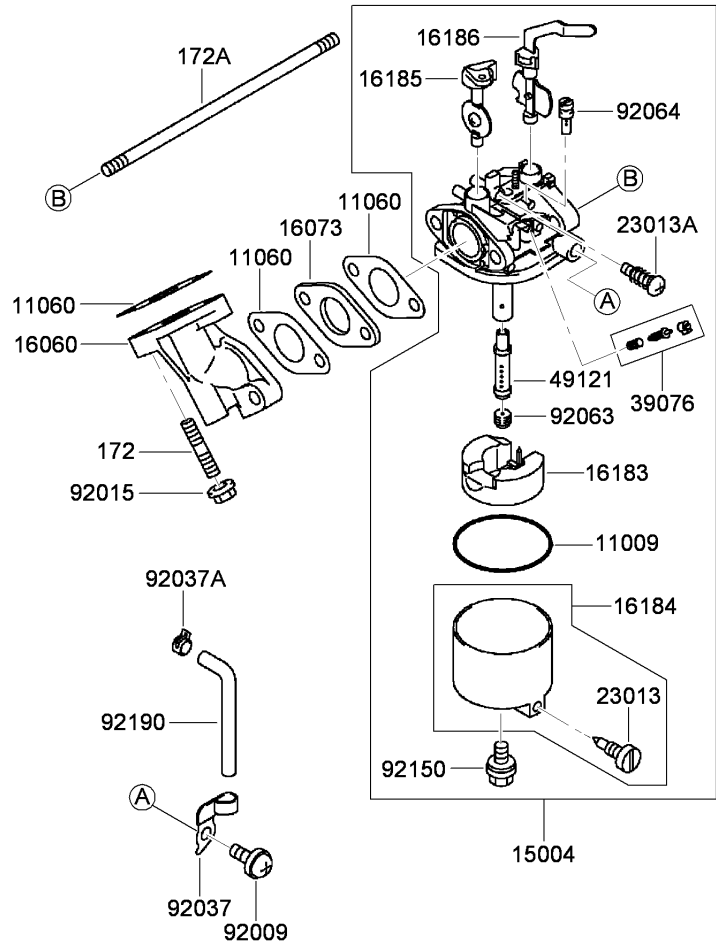


Carburetor Assembly

Ref	Part No.	Qty.	Description				
172	93-8632	2	Bolt-Stud (6X18)				
172A	115-1814	1	Bolt-Stud (6X73)				
11009	93-8624	1	Gasket				
11060	93-8613	3	Gasket				
15004	115-1869	1	Carburetor ASM				
16060	93-8633	1	Pipe-Intake				
16073	94-9048	1	Insulator				
16183	94-6844	1	Float ASM				
16184	93-8625	1	Float Chamber ASM				
16185	94-9033	1	Throttle Valve ASM				
16186	115-1870	1	Choke Valve ASM				
23013	93-8626	1	Screw ASM				
23013A	93-8619	1	Screw ASM				
39076	94-9034	1	Limiter				
49121	115-1871	1	Nozzle-Main				
92009	94-6845	1	Screw				
92015	93-8631	2	Nut				
92037	94-6846	1	Clamp				
92037A	93-8629	1	Clamp				
92063	94-9036	1	Jet-Main (No.65)				
92064	94-9037	1	Jet-Pilot (No.40)				
92150	93-8627	1	Bolt				
92190	93-8630	1	Tube				

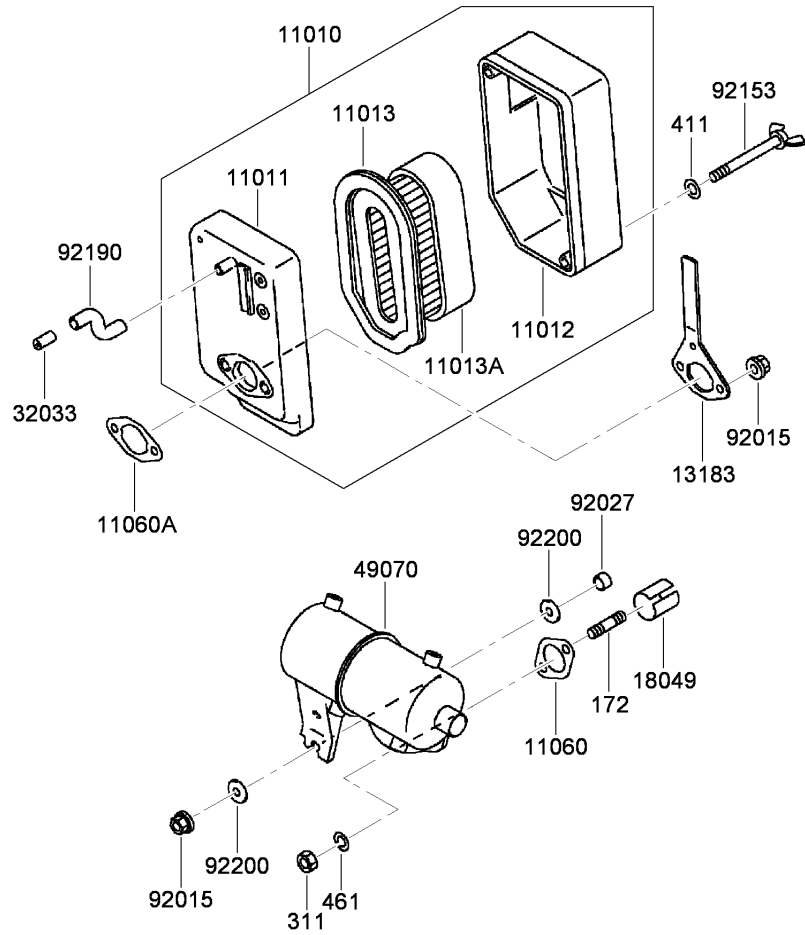

Air Filter and Muffler Assembly


Ref	Part No.	Qty.	Description				
172	115-1819	2	Bolt-Stud (6X16)				
311	93-8656	2	Nut-Hex (6Mm)				
411	115-1802	2	Washer-Plain				
461	115-1801	2	Washer-Spring				
11010	115-1872	1	Air Filter ASM				
11011	115-1873	1	Case-Filter, Air				
11012	93-8638	1	Cap-Filter, Air				
11013	93-8636	1	Element-Filter, Air				
11013A	93-8637	1	Element-Filter, Air				
11060	93-8654	1	Gasket-Muffler				
11060A	93-8657	1	Gasket-Filter, Air				
13183	93-8642	1	Plate-Filter, Air				
18049	93-8652	1	Pipe-Exhaust				
32033	93-8658	1	Pipe				
49070	115-1874	1	Muffler				
92015	93-8631	3	Nut				
92027	93-8651	1	Collar				
92153	93-8640	2	Bolt				
92190	93-8659	1	Tube				
92200	93-8650	2	Washer (.5X18X2.0)				

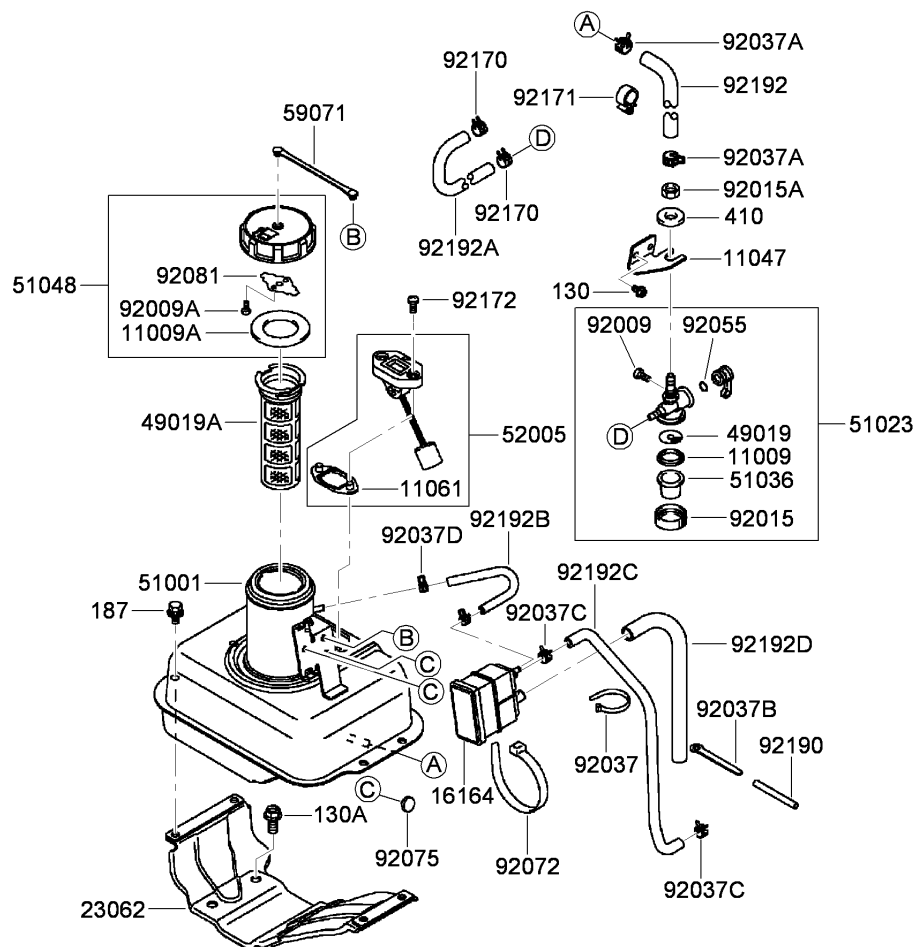

Fuel Tank and Fuel Valve Assembly


Ref	Part No.	Qty.	Description
130	115-1864	2	Bolt-Flanged (5X8)
130A	115-1867	4	Bolt-Flanged (8X18)
187	115-1760	4	Bolt-Upset, Wsp (6X16)
410	115-1885	1	Washer-Plain, Small (10Mm)
11009	93-8673	1	Gasket
11009A	93-8662	1	Gasket
11047	93-8681	1	Bracket
11061	104-2384	1	Gasket-Gauge, Fuel
16164	115-1859	1	Canister
23062	104-2383	1	Bracket-Tank
49019	94-6849	1	Filter-Tapper, Fuel
49019A	94-6826	1	Filter-Fuel
51001	115-1858	1	Fuel Tank ASM
51023	93-8669	1	Fuel Tapper ASM
51036	93-8674	1	Cup-Tapper, Fuel
51048	115-1857	1	Tank Cap ASM
52005	93-8685	1	Gauge-Fuel
59071	115-1856	1	Joint
92009	93-8670	1	Screw
92009A	93-8661	2	Screw
92015	93-8675	1	Nut
92015A	94-9042	1	Nut
92037	115-1855	1	Clamp
92037A	115-1861	2	Clamp-Clip, Hose

Ref	Part No.	Qty.	Description
92037B	115-1854	1	Clamp
92037C	93-8664	2	Clamp
92037D	93-8676	2	Clamp
92055	93-8671	1	O-Ring
92072	115-1853	1	Band
92075	115-1852	2	Damper
92081	93-8663	1	Spring
92170	115-1865	2	Clamp
92171	115-1862	1	Clamp
92172	115-1860	2	Screw (5X12)
92190	115-1851	1	Tube
92192	115-1863	1	Tube (6.2X13.2X200)
92192A	115-1866	1	Tube (4X11X160)
92192B	115-1889	1	Tube
92192C	115-1890	1	Tube
92192D	115-1891	1	Tube

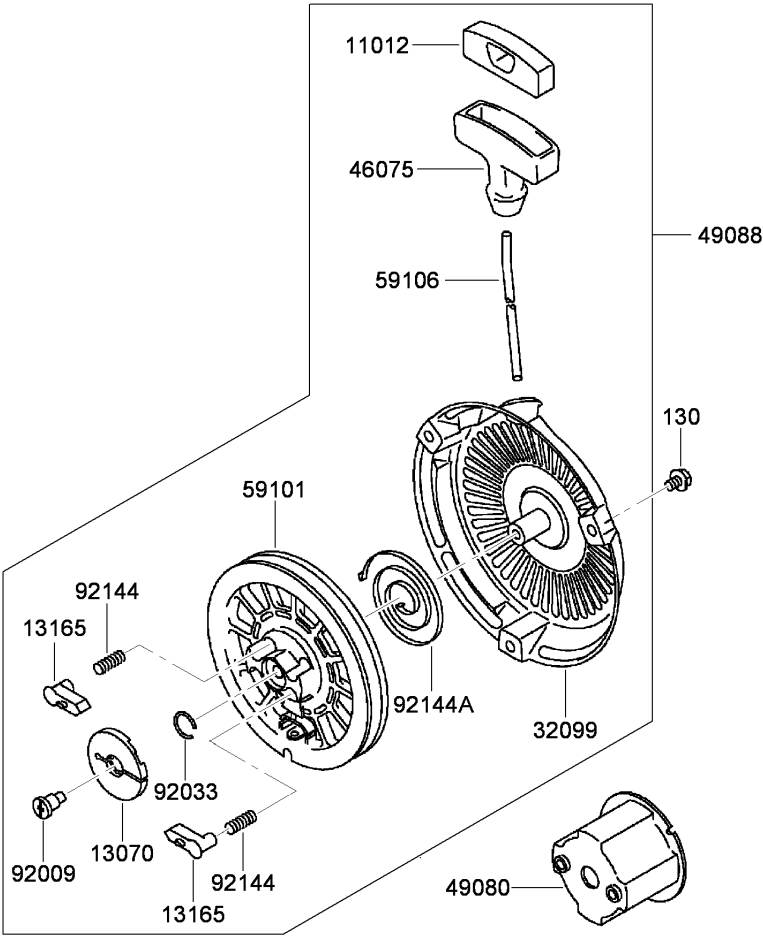

Starter Assembly

Ref	Part No.	Qty.	Description				
130	115-1765	3	Bolt-Flanged (6X8)				
11012	94-9044	1	Cap-Grip				
13070	93-8562	1	Guide-Pawl				
13165	93-8554	2	Pawl-Starter, Recoil				
32099	94-9046	1	Case-Starter, Recoil				
46075	94-9045	1	Grip-Starter, Recoil				
49080	93-8567	1	Pulley-Recoil				
49088	93-8552	1	Recoil Starter ASM				
59101	93-8556	1	Reel-Starter, Recoil				
59106	93-8560	1	Rope (4X1500)				
92009	93-8553	1	Screw				
92033	93-8561	1	Ring-Retaining				
92144	93-8555	2	Spring-Return				
92144A	93-8557	1	Spring				

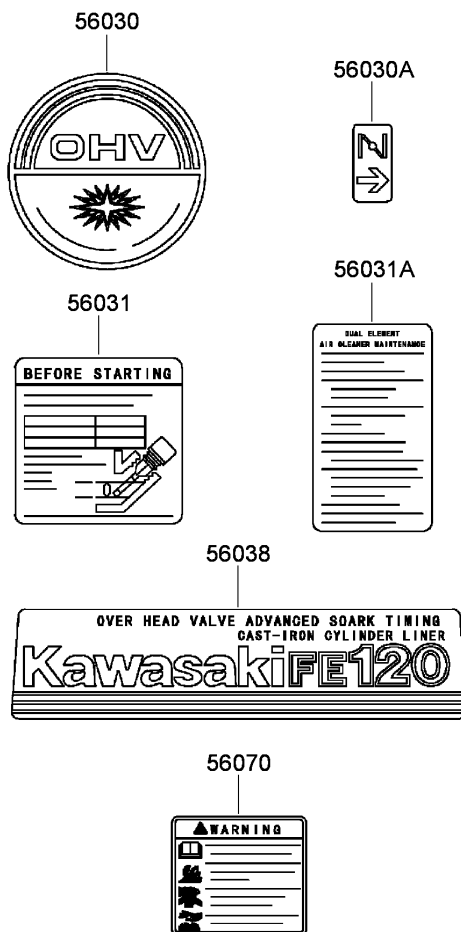

Label Set

Ref	Part No.	Qty.	Description
56030	94-9027	1	Label-Recoil
56030A	93-8687	1	Decal-Choke
56031	93-8689	1	Decal-Instructions
56031A	93-8690	1	Decal-Maintenance
56038	94-9028	1	Label-Kawasaki
56070	93-8692	1	Decal-Warning

Attachments and Accessories

For 04035 - Greensmaster 1600 Mower

Product Name	Model/Part
Light Kit	04061
Wheel Kit	04123
Groomer Reel Kit	04132
Bedknife-Highcut	104-2646
Hour Meter Kit	105-5350
Knife-Bed, Fairway	107-8181
Bedbar-Aggressive	112-9278-03
Operator Presence Kit	112-9282
Wiehle Scraper Kit	112-9290
Groomer Brush Assembly	115-1600
16-Tooth Traction Pulley Kit	115-1886
25 Inch Clip Kit	65-9000
Bedknife-Tournament Cut	94-5885
Height-of-Cut Bar ASM	94-9010
Full Roller ASM	95-0930
Jet-Main, #62 High Altitude	98-8735
Jet-Main, #60 High Altitude	98-8736
Arm-HOC, Extended	99-4286

NOTES

NOTES

