



Z17-44 TimeCutter™ Z Riding Mower

Model No. 74401 - 220000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Piston / Crankshaft Assembly Kawasaki FH500V-AS36	 20
Height-of-Cut Assembly	 4	Valve / Camshaft Assembly Kawasaki FH500V-AS36	 21
Main Frame Assembly	 5	Lubrication Equipment Assembly Kawasaki FH500V-AS36	 22
Fuel Tank Assembly	 6	Cooling Equipment Assembly Kawasaki FH500V-AS36	 23
Parking Brake Assembly	 7	Electric Equipment Assembly Kawasaki FH500V-AS36	 24
Motion Control Assembly	 8	Control Equipment Assembly Kawasaki FH500V-AS36	 25
Hydro and Belt Drive Assembly	 9	Carburetor Assembly Kawasaki FH500V-AS36	 26
Engine and Clutch Assembly	 10	Air Filter / Muffler Assembly Kawasaki FH500V-AS36	 27
Electrical Assembly	 11	Fuel Tank / Fuel Valve Assembly Kawasaki FH500V-AS36	 28
44in Deck Assembly	 12	Starter Assembly Kawasaki FH500V-AS36	 29
44in Deck Belt Drive and Lift Assembly	 13		
RH Hydro Transaxle Assembly No. 100-7360	 14		
LH Hydro Transaxle Assembly No. 100-7361	 16		
Label Assembly Kawasaki FH500V-AS36	 18		
Cylinder / Crankcase Assembly Kawasaki FH500V-AS36	 19		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain Parts From Kawasaki

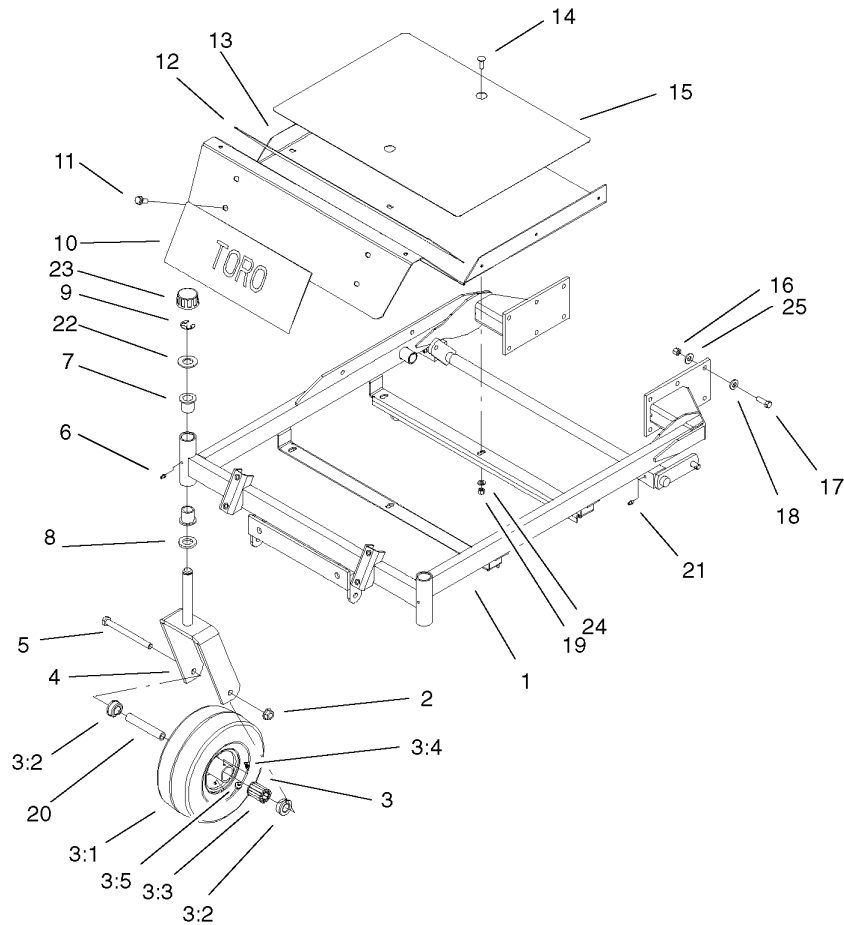

Front Frame Assembly


Ref	Part No.	Qty.	Description
1	100-7357-01	1	Carrier Frame ASM
2	32128-23	2	Nut-HF
3	100-7364	2	Caster Wheel ASM
3:1	105-1943	1	Tire
3:2	62-5580	2	Bearing-Outside
3:3	83-4740	1	Bearing
3:4	302-11	1	Fitting-Lube, 45 DEG
3:5	232-27	1	Stem-Valve
4	100-7363-01	2	Caster Fork ASM
5	325-22	2	Screw-HH
6	302-5	2	Fitting-Grease
7	1-303514	4	Bearing-Flanged
8	1-513338	2	Washer-Flat
9	32151-103	2	Ring-Retaining, EXT
10	104-8016	1	Decal
11	66-9300	4	Screw-HF
12	104-3639	1	Pad-Skid, Anti
13	100-7386-03	1	Floorpan
14	3230-28	6	Screw-CARR
15	104-3640	1	Pad-Skid, Anti
16	3296-39	12	Nut-Lock, NI
17	323-7	12	Screw-HH
18	98-5975	12	Washer-Belleville
19	3296-29	6	Nut-Lock, NI

Ref	Part No.	Qty.	Description
20	104-3667	2	Spanner-Wheel
21	302-19	2	Fitting-Grease
22	104-8076	2	Washer
23	61-9780	2	Cap-Hub
24	3256-23	6	Washer-Flat
25	1-809107	12	Washer-Hardened

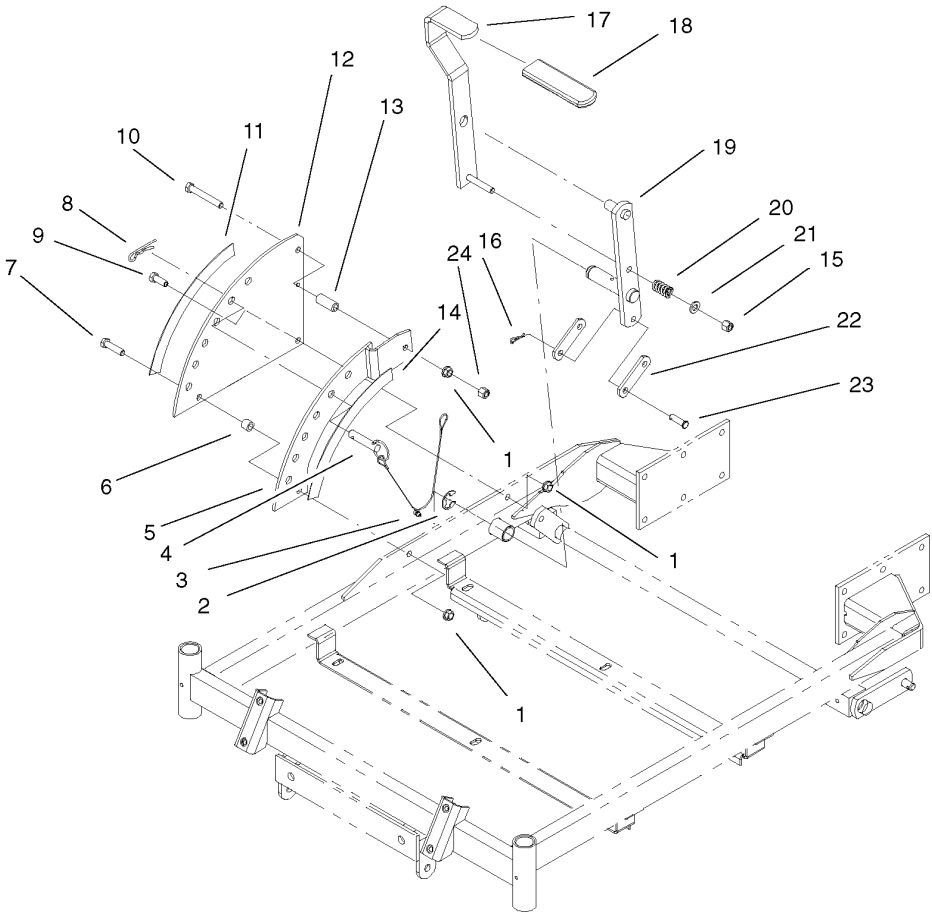

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	3290-357	3	Nut-HHF, Whiz				
2	32151-103	1	Ring-Retaining, EXT				
3	302-5	1	Fitting-Grease				
4	104-3678	1	Pin-Hitch				
5	100-7335-01	1	Plate-Lift				
6	1-413088	1	Bushing-Lever, Lift				
7	323-8	1	Screw-HH				
8	1-806005	1	Pin-Hair				
9	323-6	1	Screw-HH				
10	323-13	1	Screw-HH				
11	104-8063	1	Decal-Height, Deck				
12	100-7384-01	1	Plate-Deck Lift				
13	1-633082	1	Bushing-Lever, Lift				
14	104-8062	1	Decal-Height, Deck				
15	3296-39	1	Nut-Lock, NI				
16	1-806003	2	Pin-Hair				
17	1-652023-03	1	Lever-Lift				
18	1-633295	1	Grip-Lever, Lift				
19	1-652027-03	1	Arm-Deck, Lift				
20	1-633325	1	Spring-Compression				
21	3256-24	1	Washer-Flat				
22	1-633068	2	Arm-Lift, Deck				
23	283-2	2	Pin-Clevis				
24	32128-21	1	Nut-HF				

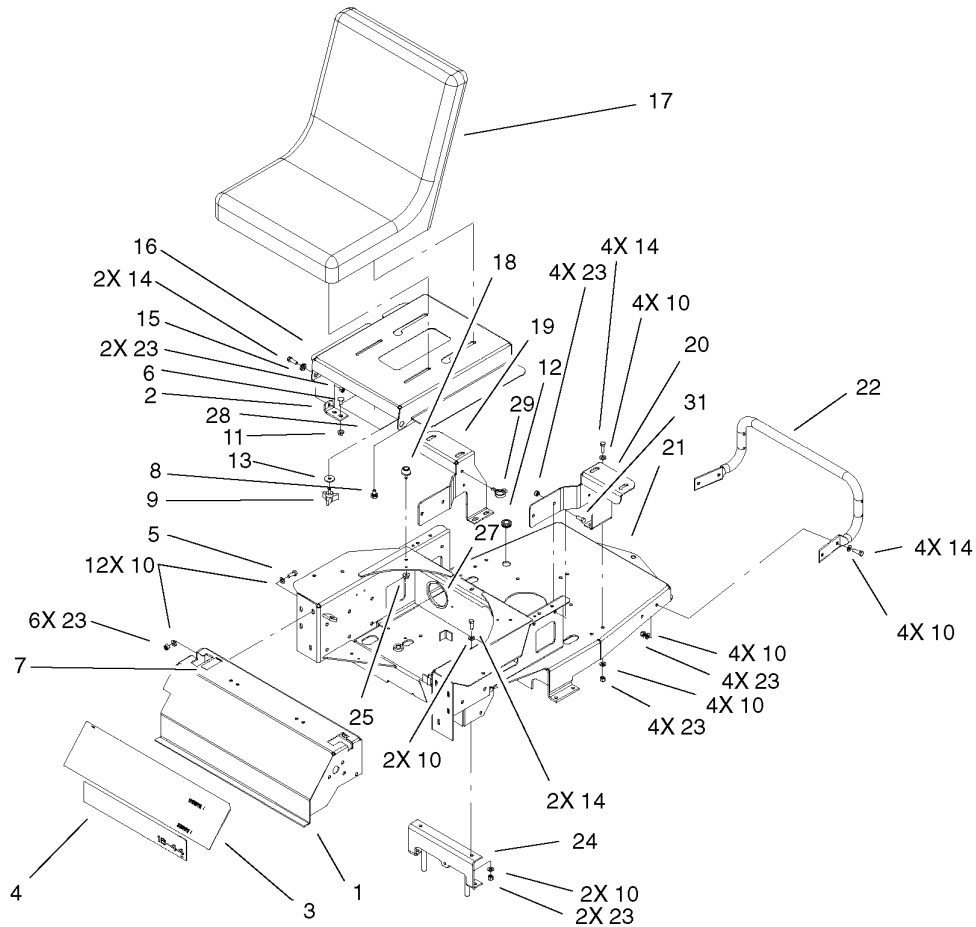

Main Frame Assembly


Ref	Part No.	Qty.	Description
1	104-8040-03	1	Console
2	104-8057-03	2	Bracket-Pivot
3	104-8064	1	Decal-Console International
4	104-8084	1	Decal
5	322-4	6	Screw-HH
6	104-8049	4	Screw-CARR
7	99-8936	2	Decal-Control, Motion
8	37-8770	2	Bolt-Shoulder
9	92-9674	2	Knob
10	3256-23	32	Washer-Flat
11	32128-25	4	Nut-HF
12	237-124	1	Grommet
13	5-4460	2	Washer-Pivot
14	322-5	12	Screw-HH
15	105503	2	Bushing
16	104-8058-03	1	Pan-Seat
17	105-6962	1	Seat
18	1-523420	2	Bumper
19	100-7376-01	1	Bracket-RH
20	100-7368-01	1	Bracket-LH
21	105-7018-01	1	Frame-Rear
22	100-7332-03	1	Rod-Support, Rear
23	3296-29	22	Nut-Lock, NI
24	105-6987-03	1	Bracket

Ref	Part No.	Qty.	Description
25	32128-33	2	Nut-HF
27	105-1854	1	Cover-Conduit
28	104-8086	1	Decal-Services International
29	105-1853	2	Clamp-Hose
31	322-3	4	Screw-HH

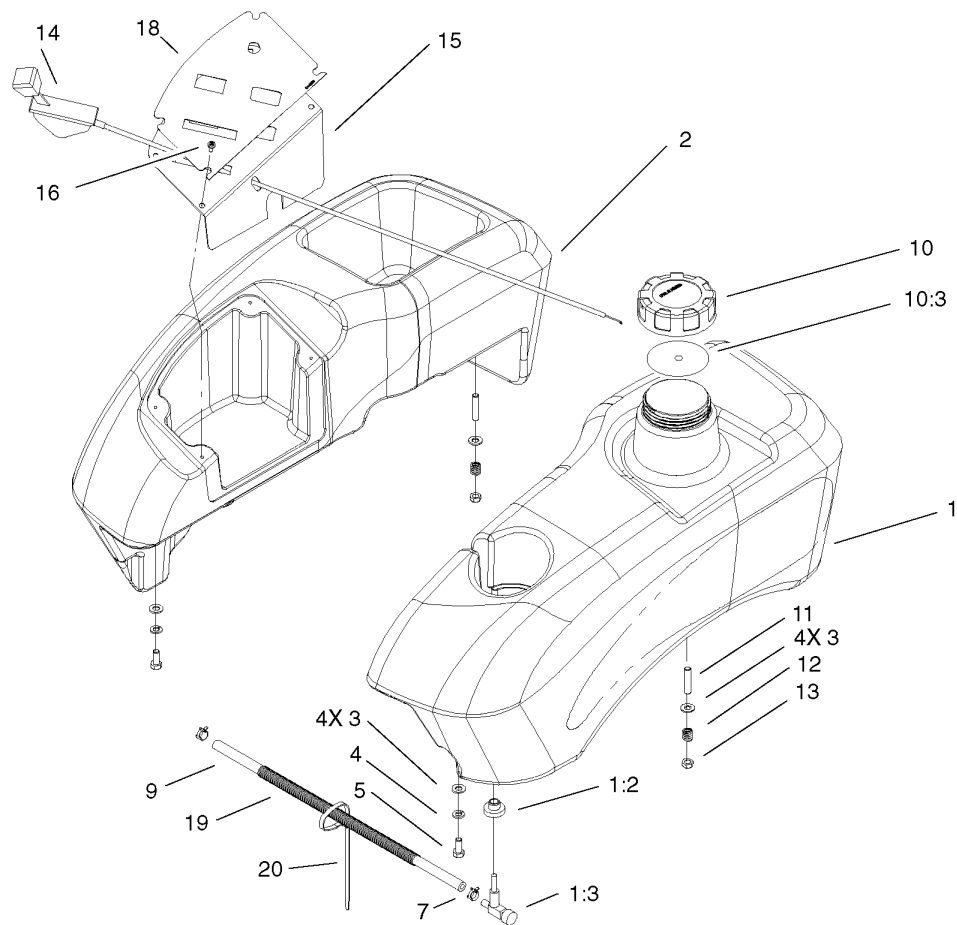

Fuel Tank Assembly


Ref	Part No.	Qty.	Description				
1	105-3403	1	Fuel Tank ASM				
1:2	46-6560	1	Bushing				
1:3	104048	1	Valve-Fuel				
2	104-3649	1	Tank-Console				
3	3256-23	8	Washer-Flat				
4	3253-4	4	Washer-Lock				
5	322-3	4	Screw-HH				
7	2412-98	2	Clamp				
9	104-8060	1	Hose-Fuel				
10	88-3980	1	Gas Cap ASM				
10:3	88-4010	1	Gasket-Cap, Gas				
11	1-633023	4	Stud				
12	1-633349	4	Spring-Tank, Fuel				
13	3296-47	4	Nut-Lock, NI				
14	104-8081	1	Cable-Throttle				
15	104-3664-03	1	Panel-Control				
16	3250-14	4	Screw-PPH				
18	104-8009	1	Decal-Panel, Control				
19	105-1854	1	Cover-Conduit				
20	614249	1	Strap-Tie				

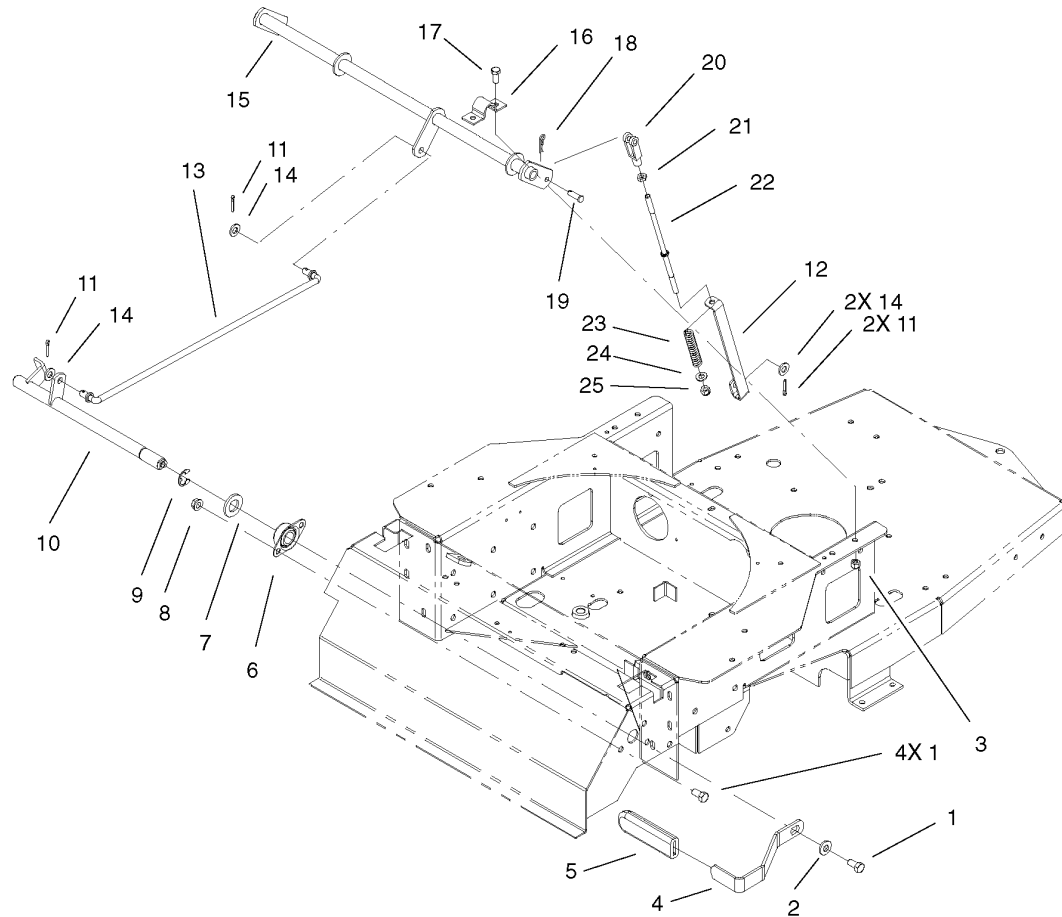

Parking Brake Assembly

Ref	Part No.	Qty.	Description
1	323-4	5	Screw-HH
2	98-5975	1	Washer-Belleville
3	3296-29	4	Nut-Lock, NI
4	100-7346-03	1	Handle-Brake, Park
5	1-633268	1	Grip-Lever, Brake
6	1-633102	2	Bearing-Flange, Side
7	1-303007	1	Washer
8	3290-357	4	Nut-HHF, Whiz
9	32151-48	1	E-Ring
10	100-7318	1	Brake Shaft ASM
11	3272-10	4	Pin-Cotter
12	104-3675	2	Bracket-Spring, Brake
13	104-8046	1	Rod-Brake, Upper
14	3256-24	4	Washer-Flat
15	104-3670-03	1	Shaft-Brake
16	88-4730	2	Clamp-Pivot, HOC
17	322-3	4	Screw-HH
18	1-806003	2	Pin-Hair
19	1-808280	2	Pin-Clevis
20	1-303105	2	Yoke-Adjustable
21	3219-2	2	Nut-Hex
22	104-3674	2	Rod-Brake, Upper
23	38-4520	2	Spring
24	3256-23	2	Washer-Flat


Ref	Part No.	Qty.	Description
25	3296-4	2	Nut-Lock

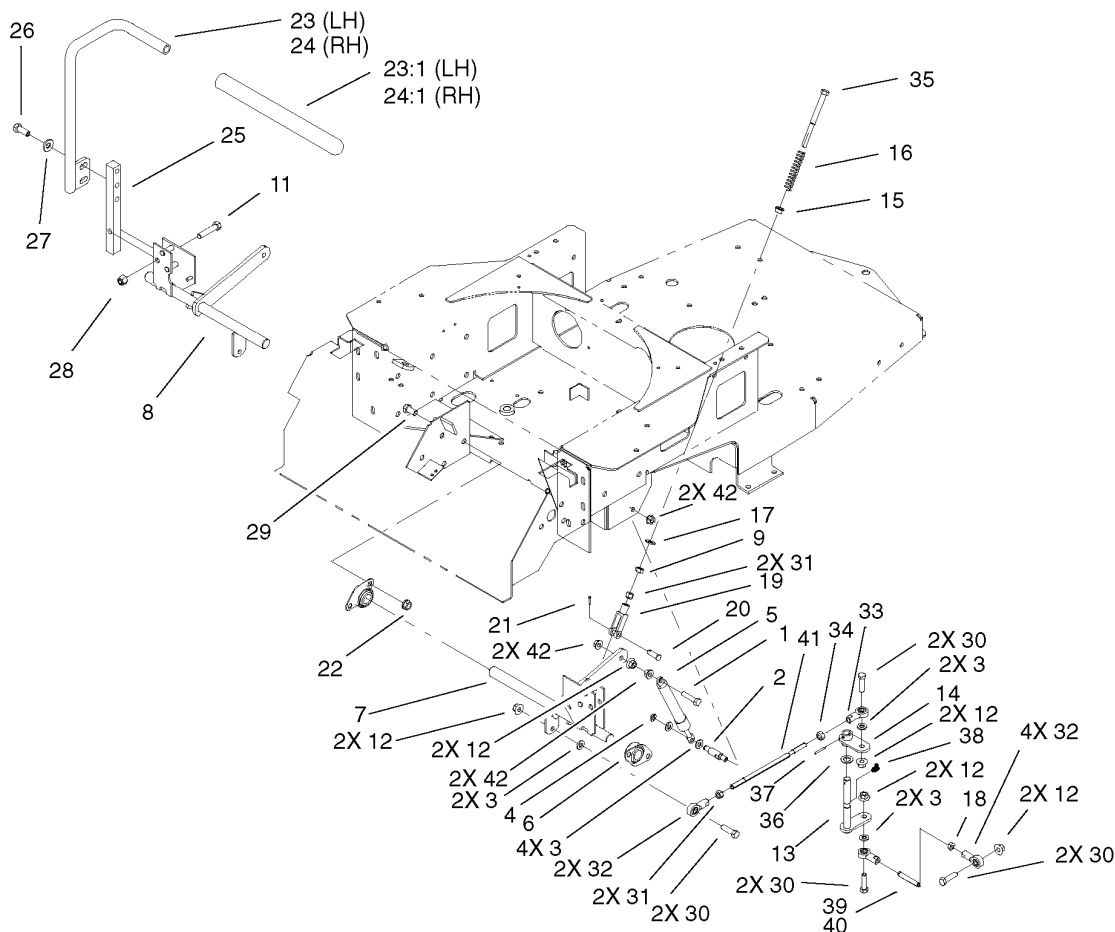

Motion Control Assembly

Ref	Part No.	Qty.	Description
1	1-403180	2	Screw-HH
2	1-653316	2	Pin-Damper
3	3256-23	10	Washer-Flat
4	32120-35	2	Ring-Retaining, EXT
5	103-2913	2	Damper-Control, Motion
6	1-633102	4	Bearing-Flange, Side
7	100-7341	1	Bracket-Motion Control, LH
8	100-7340	1	Bracket-Motion Control, RH
9	3296-4	2	Nut-Lock
11	323-9	2	Screw-HH
12	32128-20	10	Nut-HF
13	100-7311	2	Pivot ASM
14	100-7313	2	Pivot Plate ASM
15	1-603735	2	Bushing-Flanged
16	1-603807	2	Spring-Return, Neutral
17	3256-2	2	Washer-Flat
18	3220-2	2	Nut-Jam
19	1-303105	2	Yoke-Adjustable
20	1-808280	2	Pin-Clevis
21	3272-5	2	Pin-Cotter
22	3290-357	6	Nut-HHF, Whiz
23	103-0631	1	LH Lever ASM
23:1	1-633257	1	Grip-Control, Motion
24	103-0632	1	RH Lever ASM


Ref	Part No.	Qty.	Description
24:1	1-633257	1	Grip-Control, Motion
25	103-0407	2	Arm-Shaft, Control
26	323-6	4	Screw-HH
27	98-5975	4	Washer-Belleville
28	3296-39	2	Nut-Lock, NI
29	323-4	6	Screw-HH
30	322-5	8	Screw-HH
31	3219-2	4	Nut-Hex
32	1-543017	6	Balljoint-RH
33	1-633152	2	Balljoint-LH
34	1-804524	2	Nut
35	1-603737	2	Bolt-Return, Neutral
36	100-7336	2	Washer
37	933156	2	Pin-Roll
38	302-11	2	Fitting-Lube, 45 DEG
39	104-3606	1	Linkage-Lower, RH
40	104-3607	1	Linkage-Lower, LH
41	104-3605	2	Linkage-Upper
42	32128-25	6	Nut-HF

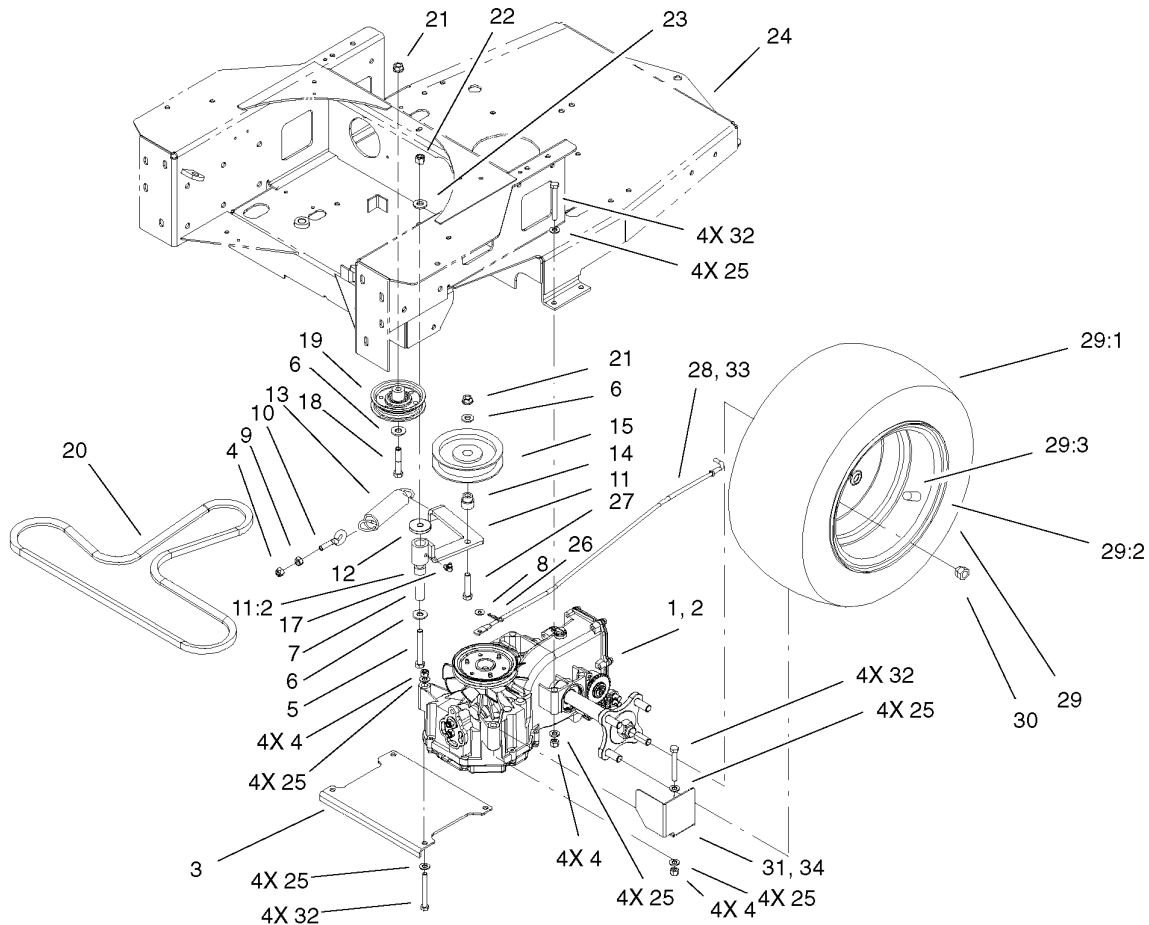

Hydro and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	100-7361	1	Hydro-LH
2	100-7360	1	Hydro-RH
3	100-7317-03	1	Plate-Hydro, Lower
4	3296-29	13	Nut-Lock, NI
5	323-13	1	Screw-HH
6	3256-4	3	Washer-Flat
7	1-603044	1	Bushing
8	3256-1	2	Washer-Flat
9	32128-20	1	Nut-HF
10	55-9420	1	Bolt-Eye
11	104-3614	1	Idler Arm ASM
11:2	1-513034	2	Sleeve-Bearing
12	104-8005	1	Spacer
13	1-603414	1	Spring-Extension
14	1-603496	1	Bushing-Idler
15	1-603843	1	Pulley-Idler
17	302-40	1	Fitting-Grease
18	323-10	1	Screw-HH
19	104-3630	1	Pulley-Idler
20	104-3622	1	Belt-V
21	32128-21	2	Nut-HF
22	3296-39	1	Nut-Lock, NI
23	98-5975	1	Washer-Belleville
24	104-8061	1	Decal

Ref	Part No.	Qty.	Description
25	3256-23	24	Washer-Flat
26	1-806003	2	Pin-Hair
27	323-9	1	Screw-HH
28	104-3669	1	Rod-LH
29		2	Wheel And Tire ASM
29:1	105-1944	1	Tire
29:2	105-1946	1	Wheel
29:3	232-27	1	Stem-Valve
30	242-50	8	Nut-Lug
31	104-8013-03	1	Guard-Fan, RH
32	322-13	12	Screw-HH
33	104-3668	1	Rod-RH
34	104-8033-03	1	Guard-Fan, LH

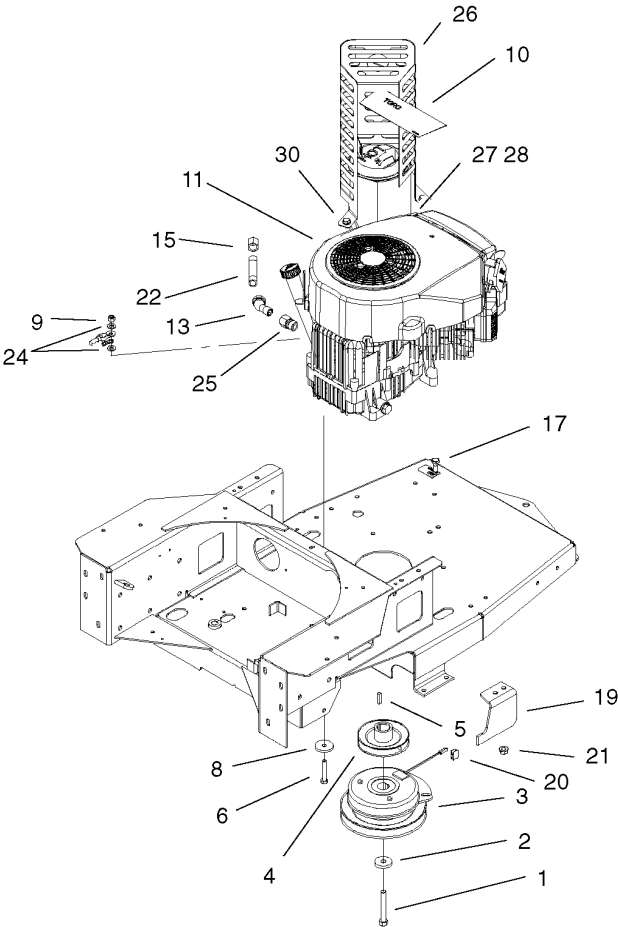

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description				
1	3212-12	1	Screw-HH				
2	112843	1	Washer				
3	104-3624	1	Clutch				
4	100-7314	1	Pump Drive Pulley ASM				
5	5-7280	1	Key				
6	322-9	4	Screw-HH				
8	62-7190	4	Spacer-Steel				
9	3296-29	6	Nut-Lock, NI				
10	105-1862	1	Decal-Engine				
11		1	Engine-Kawasaki, FH500V-As36				
13	2811-3	1	Elbow				
15	288-10	1	Cap-Pipe				
17	323-4	2	Screw-HH				
19	104-3613-03	1	Stop-Clutch				
20	98-5023	1	Bumper				
21	32128-21	2	Nut-HF				
22	105-1936	1	Pipe-Nipple				
24	3256-23	7	Washer-Flat				
25	103-1966	1	Adapter				
26	105-7013-03	1	Guard-Muffler				
27	100-6467	1	Muffler				
28	100-6468	1	Clamp-Muffler				
30	322-3	2	Screw-HH				

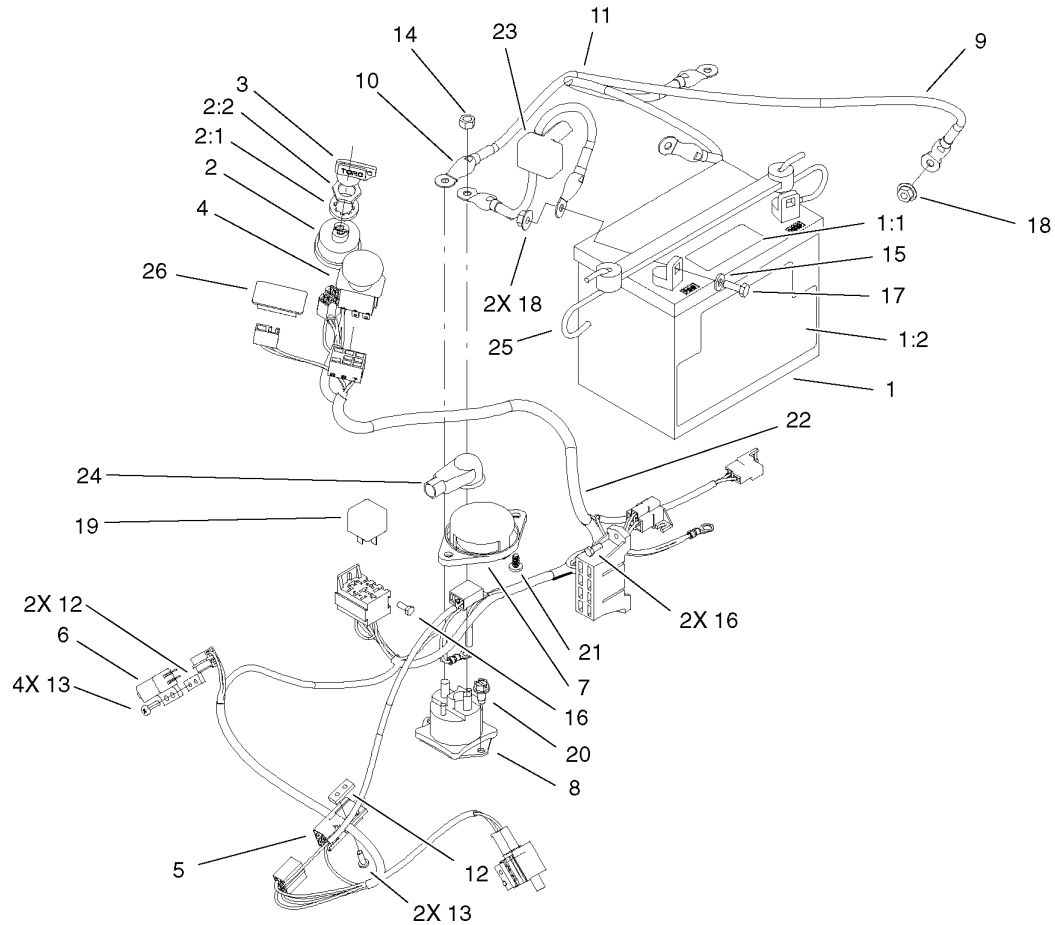

Electrical Assembly

Ref	Part No.	Qty.	Description
1	104-2491	1	Battery
1:1	104-4163	1	Decal-Battery
1:2	104-5091	1	Decal-Battery
2	88-9830	1	Key Switch ASM
2:1	3254-5	1	Washer-Tooth
2:2	218-461	1	Nut-HH
3	63-8360	1	Key-Ignition
4	95-7489	1	Switch-PTO
5	86-4690	1	Switch-Interlock
6	65-7410	2	Switch-Pole, Single
7	105-6959	1	Switch-Seat
8	28-4210	1	Solenoid
9	28-3891	1	Wire-Solenoid/Starter
10	93-1189	1	Wire ASM
11	93-0324	1	Cable
12	1-633181	3	Plate-Tapped
13	32144-8	6	Screw-PPHTF
14	32149-1	2	Nut-Keps
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	321-4	2	Screw-HH
18	32128-33	3	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF


Ref	Part No.	Qty.	Description
21	105-6968	2	Screw-Seat, Switch
22	105-1934	1	Harness-Wire Kawasaki V-Twin
●22:1	109102	1	Fuse-25 Amp
●22:2	109103	1	Fuse-30 Amp
23	28-8080	1	Boot-Terminal
24	93-3190	1	Boot-Insulator, Terminal
25	104-2466	1	Holddown-Battery
26	99-7420	1	Plug-Hole

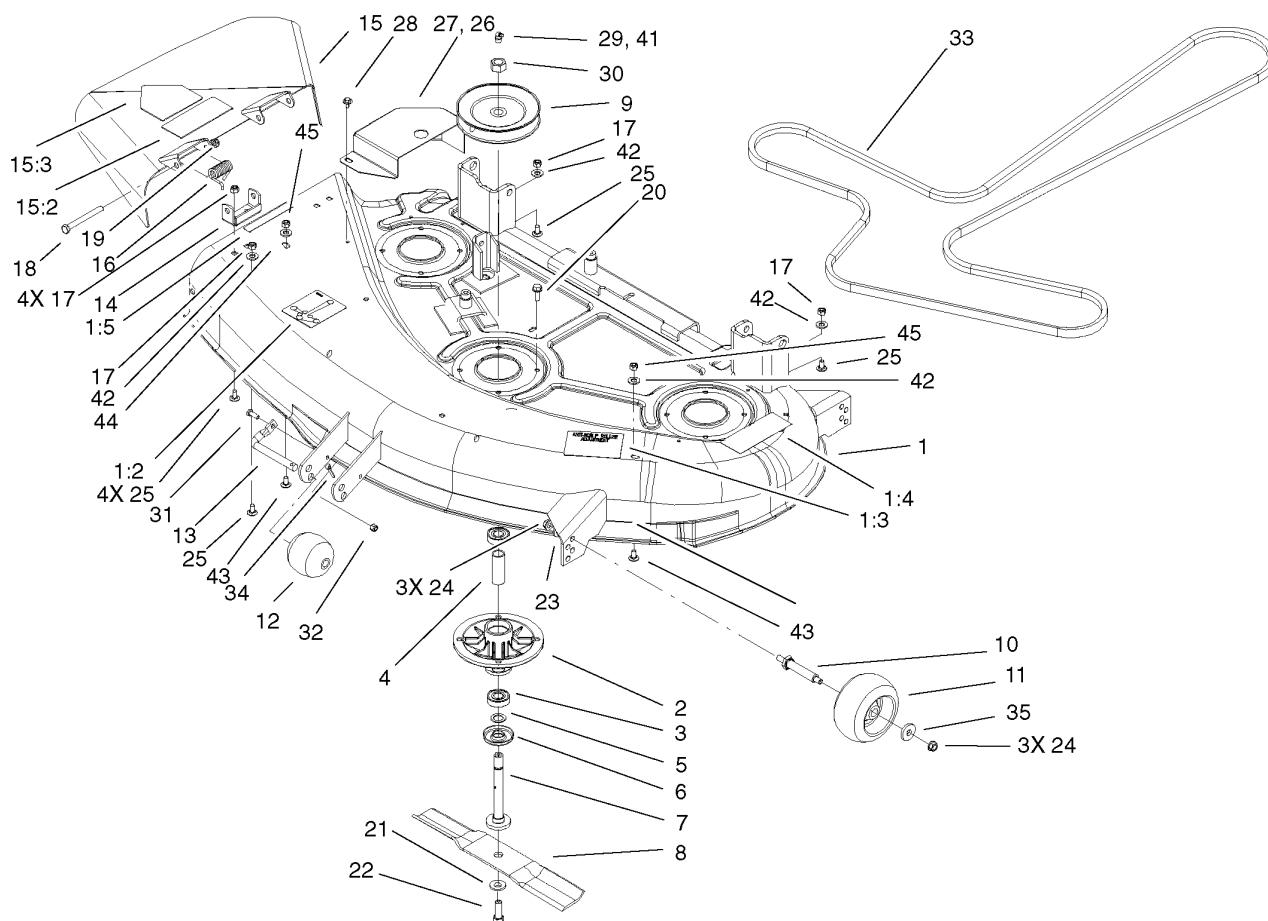

44in Deck Assembly

Ref	Part No.	Qty.	Description
1	105-6967	1	44 Inch Deck ASM
1:2	99-3943	1	Decal-Routing, Belt
1:3	99-8939	1	Decal-Anti Scalp
1:4	93-7317	1	Decal-Danger
1:5	93-7009	1	Decal-Danger
2	88-4510	3	Housing-Spindle
3	109966	6	Bearing-Ball
4	94-7959	3	Spacer - Bearing
5	80-4380	3	Spacer
6	80-4360	3	Shield-Bearing
7	94-7547	3	Shaft-Center, Spindle
8	54-0010-03	3	Blade
9	105-6973	3	Pulley ASM
10	99-2842	3	Spacer
11	68-2730	3	Wheel-Gage
12	29-4820	1	Roller
13	118960-03	1	Shaft-Roller
14	29-5590-03	2	Bracket-Pivot
15	98-5049	1	Deflector ASM
15:2	93-7317	1	Decal-Danger
15:3	93-7316	1	Decal-Danger
16	40-6230	2	Spring
17	3296-29	7	Nut-Lock, NI
18	3211-15	2	Screw-HH


Ref	Part No.	Qty.	Description
19	3296-5	2	Nut-Lock
20	32144-41	12	Screw-Taptite
21	3290-465	3	Washer-Belleville
22	26-0671	3	Screw-Blade
23	98-5975	3	Washer-Belleville
24	3290-357	6	Nut-HHF, Whiz
25	3230-18	7	Screw-CARR
26	105-6975-01	1	Cover-Belt, LH
27	105-6974-01	1	Cover-Belt, RH
28	46-8560	4	Screw-HHF
29	302-5	2	Fitting-Grease
30	3219-6	3	Nut-Hex
31	321-4	1	Screw-HH
32	3296-42	1	Nut-Lock, NI
33	105-6977	1	Belt V
34	3272-21	1	Pin-Cotter
35	1-373034	3	Washer
41	302-60	1	Fitting-Grease, 90 DEG
42	3256-24	4	Washer-Flat
43	3231-21	2	Screw-CARR
44	3256-5	1	Washer-Flat
45	3296-39	2	Nut-Lock, NI

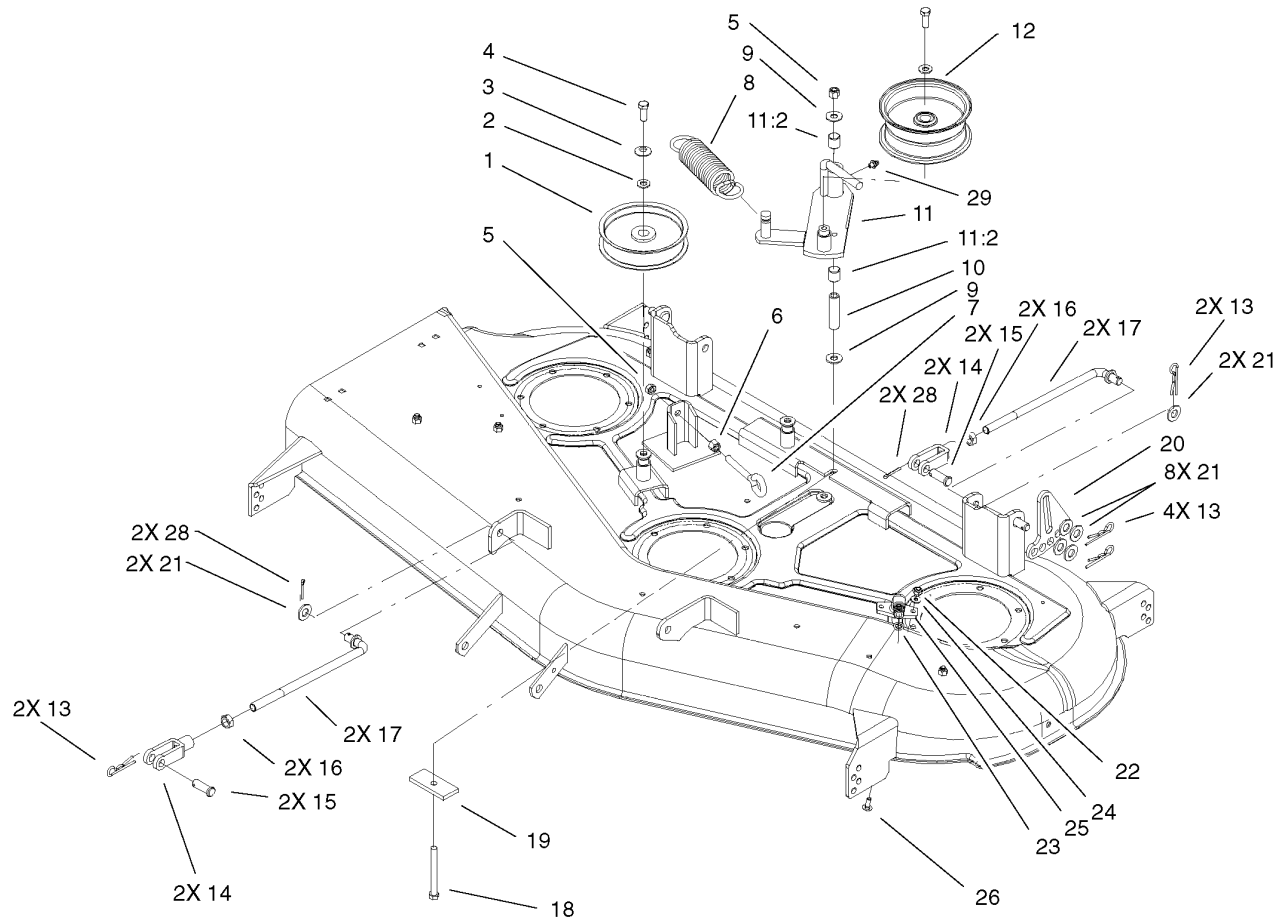

44in Deck Belt Drive and Lift Assembly

Ref	Part No.	Qty.	Description
1	1-613098	2	Pulley-Idler
2	3256-24	3	Washer-Flat
3	98-5975	3	Washer-Belleville
4	323-6	3	Screw-HH
5	3296-39	2	Nut-Lock, NI
6	3217-7	1	Nut-Hex
7	94-2547	1	Bolt-Eye
8	105-6992	1	Spring-Extension
9	1-809107	2	Washer-Hardened
10	1-603384	1	Bushing-Pivot, Idler
11	105-7010	1	Idler Arm ASM
11:2	1-513034	2	Sleeve-Bearing
12	99-8912	1	Pulley-Idler, Flat
13	1-806005	8	Pin-Hair
14	100-7338	4	Clevis
15	104-3634	4	Pin-Clevis
16	3220-5	4	Nut-Jam
17	104-8047	4	Rod-Trunion
18	1-800805	1	Screw-HH
19	104-8037-01	1	Plate-Bolt, Retainer
20	104-3699-01	2	Link-HOC, Adjusting
21	3256-26	12	Washer-Flat
22	3296-16	2	Nut-Lock, NI
23	46-6290	1	O-Ring


Ref	Part No.	Qty.	Description
24	3256-1	2	Washer-Flat
25	95-2747	1	Fitting-Washout
26	3229-1	2	Screw-CARR
28	3272-10	4	Pin-Cotter
29	302-19	1	Fitting-Grease

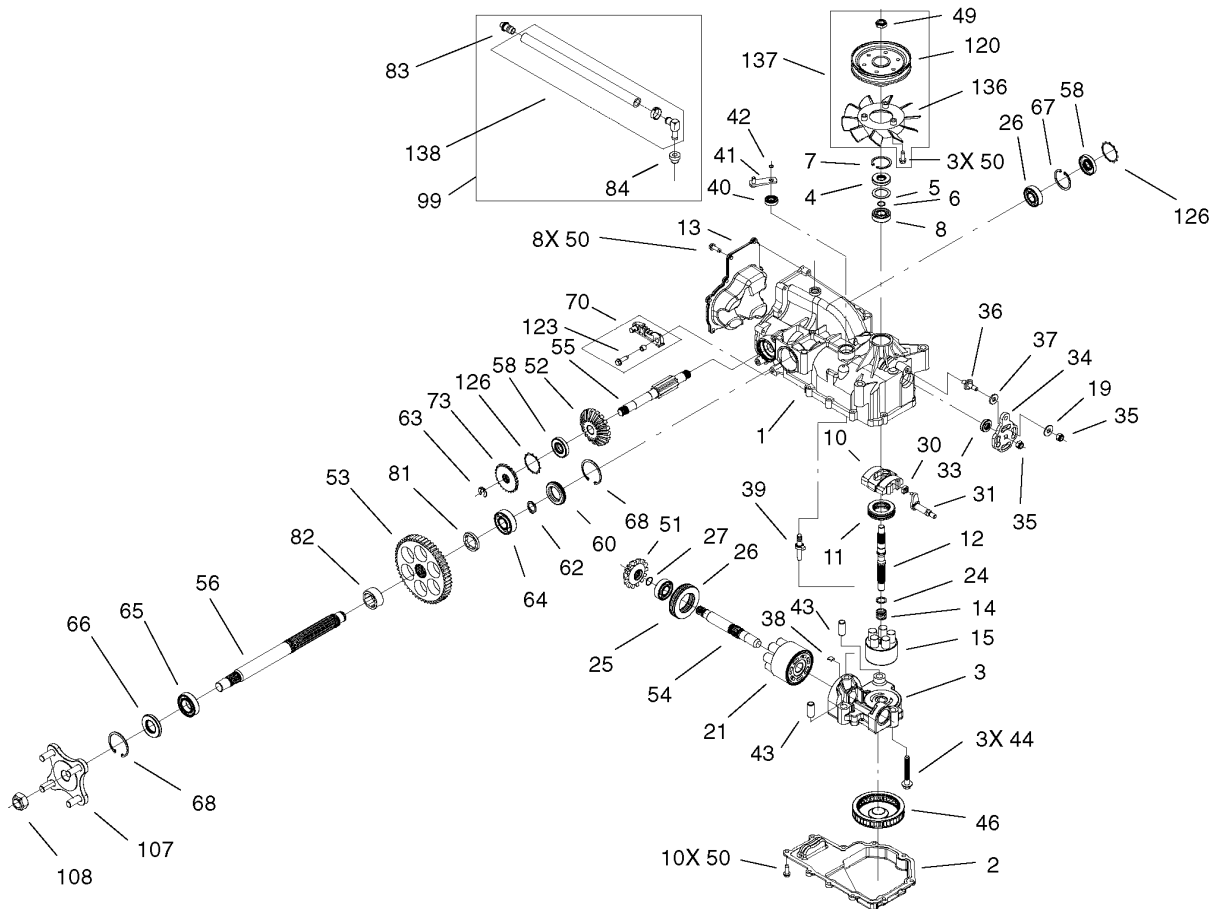

RH Hydro Transaxle Assembly No. 100-7360

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-1867	1	Main Housing Kit	35	105-1872	2	Nut
2	105-1868	1	Housing-Lower	36	104-2116	1	Stud
3	105-1869	1	Center Section Kit ASM	37	105-1873	1	Puck-Friction
4	92-6543	1	Seal-Lip	38	94-6925	1	Plate-Bypass
5	104-2104	1	Spacer	39	94-1914	1	Actuator-Bypass
6	94-1902	1	Ring-Wire, Retaining	40	92-6545	1	Seal-Lip
7	94-1903	1	Ring-Retaining	41	104-2117	1	Arm-Bypass
8	94-1904	1	Bearing-Shaft, Ball	42	936109	1	Ring-Retaining
10	94-1907	1	Swashplate-Variable	43	94-1927	2	Pin
11	94-6922	1	Bearing-Thrust	44	94-6926	3	Bolt
12	104-5067	1	Shaft-Input	46	105-1874	1	Filter
13	105-1870	1	Cover-Back	49	105-1875	1	Nut-Lock
14	94-1936	1	Spring-Block	50	104-2120	21	Screw
15	104-2106	1	Cylinder Block ASM	51	105-1876	1	Gear-Bevel, 14T
19	104-2146	1	Washer	52	105-1877	1	Gear-Bevel, 19T
21	94-1913	1	Cylinder Block ASM	53	105-1878	1	Gear-Bevel, 53T
24	94-1937	1	Washer-Thrust, Block	54	105-1879	1	Shaft-Motor
25	94-6923	1	Bearing-Thrust	55	105-1880	1	Shaft-Brake
26	104-5311	2	Bearing-Ball	56	105-1881	1	Shaft-Axle
27	104-5307	1	Ring-Retaining	58	104-5310	2	Seal-Lip
30	94-1910	1	Guide-Slot	60	105-1882	1	Plug-Side Seal
31	104-2112	1	Trunnion ASM	62	105-1883	1	Ring-Axle, Retaining
33	92-6544	1	Seal-Lip	63	105-1884	1	Ring-Retaining
34	105-1871	1	Arm-Control	64	105-1885	1	Bearing-Ball

15

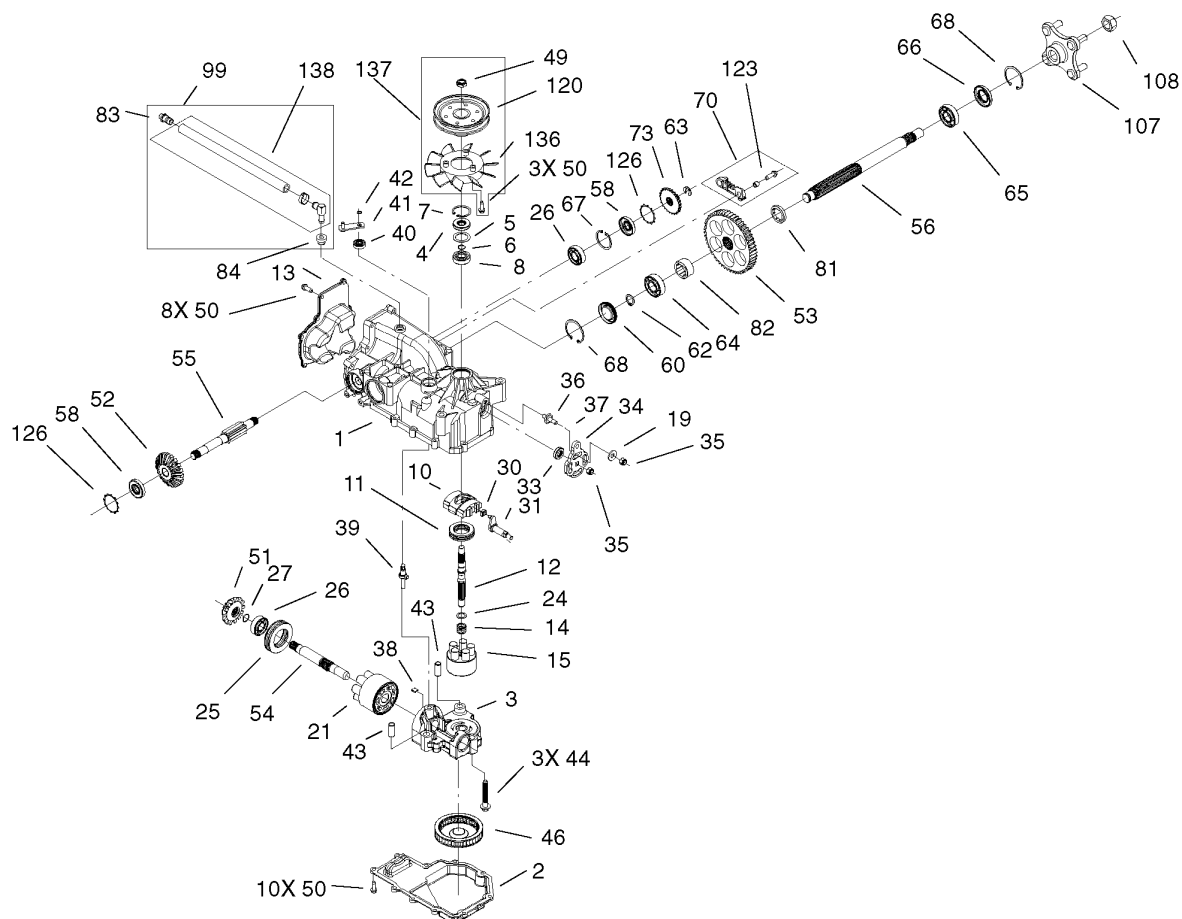

LH Hydro Transaxle Assembly No. 100-7361


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-1867	1	Main Housing Kit	35	105-1872	2	Nut
2	105-1868	1	Housing-Lower	36	104-2116	1	Stud
3	105-1869	1	Center Section Kit ASM	37	105-1873	1	Puck-Friction
4	92-6543	1	Seal-Lip	38	94-6925	1	Plate-Bypass
5	104-2104	1	Spacer	39	94-1914	1	Actuator-Bypass
6	94-1902	1	Ring-Wire, Retaining	40	92-6545	1	Seal-Lip
7	94-1903	1	Ring-Retaining	41	104-2117	1	Arm-Bypass
8	94-1904	1	Bearing-Shaft, Ball	42	936109	1	Ring-Retaining
10	94-1907	1	Swashplate-Variable	43	94-1927	2	Pin
11	94-6922	1	Bearing-Thrust	44	94-6926	3	Bolt
12	104-5067	1	Shaft-Input	46	105-1874	1	Filter
13	105-1870	1	Cover-Back	49	105-1875	1	Nut-Lock
14	94-1936	1	Spring-Block	50	104-2120	21	Screw
15	104-2106	1	Cylinder Block ASM	51	105-1876	1	Gear-Bevel, 14T
19	104-2146	1	Washer	52	105-1877	1	Gear-Bevel, 19T
21	94-1913	1	Cylinder Block ASM	53	105-1878	1	Gear-Bevel, 53T
24	94-1937	1	Washer-Thrust, Block	54	105-1879	1	Shaft-Motor
25	94-6923	1	Bearing-Thrust	55	105-1880	1	Shaft-Brake
26	104-5311	2	Bearing-Ball	56	105-1881	1	Shaft-Axle
27	104-5307	1	Ring-Retaining	58	104-5310	2	Seal-Lip
30	94-1910	1	Guide-Slot	60	105-1882	1	Plug-Side Seal
31	104-2112	1	Trunnion ASM	62	105-1883	1	Ring-Axle, Retaining
33	92-6544	1	Seal-Lip	63	105-1884	1	Ring-Retaining
34	105-1871	1	Arm-Control	64	105-1885	1	Bearing-Ball

17

56070




56033

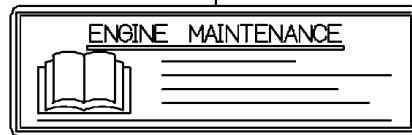

Label Assembly


Kawasaki FH500V-AS36

Ref	Part No.	Qty.	Description
56033	56033-7001	1	Label-Manual
56070	56070-7001	1	Label-Warning

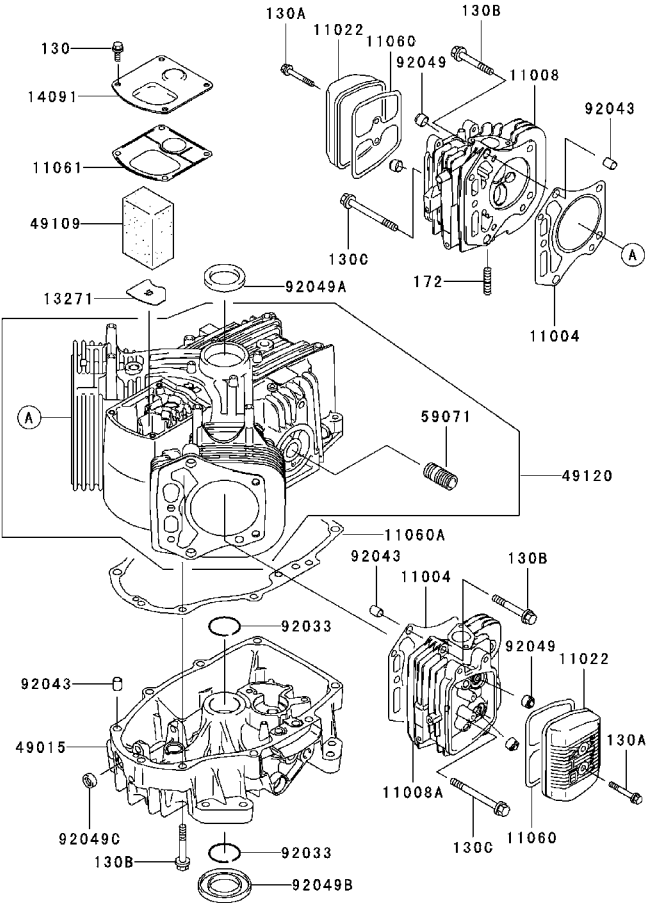


Cylinder / Crankcase Assembly
Kawasaki FH500V-AS36

Ref	Part No.	Qty.	Description				
❶11004	11004-7005	2	Gasket-Head				
❶11008	11008-6042	1	Head-Cylinder				
❶11008A	11008-7009	1	Head-Cylinder				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6226	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-6132	1	Crankcase-Comp				
❶59071	59071-2079	1	Joint				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
❶92049A	92049-7002	1	Seal-Oil				
❶92049B	92049-7004	1	Seal-Oil				
❶92049C	92049-7005	1	Seal-Oil, S O (8X14X5 H S)				
❶130	130B0612	4	Bolt-Flanged (6X12)				
❶130A	130B0640	4	Bolt-Flanged (6X40)				
❶130B	130T0850	17	Bolt-Flanged (8X50)				
❶130C	130T0875	2	Bolt-Flanged (8X75)				
❶172	172G0818	4	Bolt-Stud (8X18)				

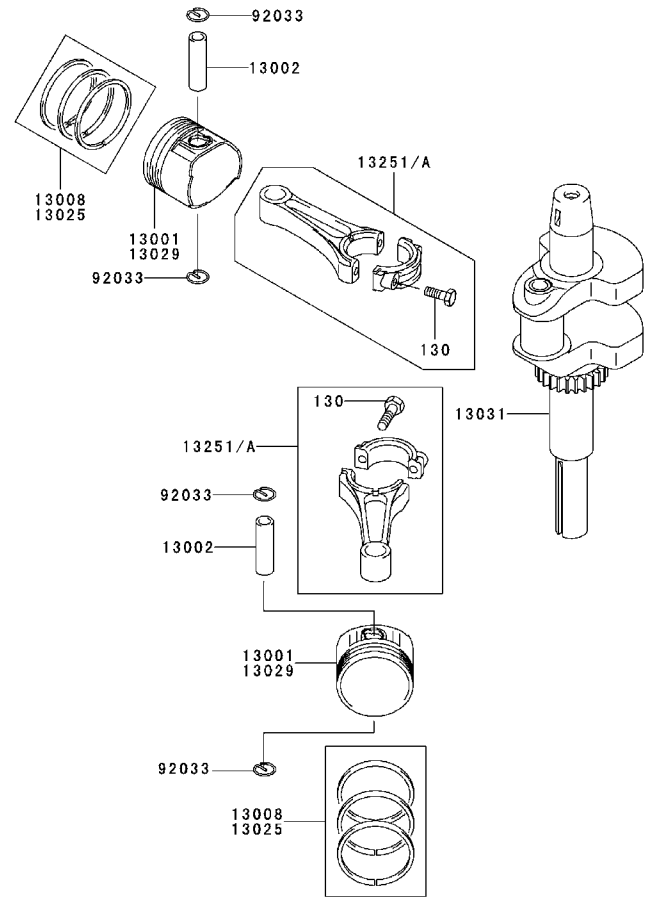

Piston / Crankshaft Assembly
Kawasaki FH500V-AS36


Ref	Part No.	Qty.	Description				
❶13001	13001-7008	2	Piston-Engine				
❶13002	13002-7001	2	Pin-Piston				
❶13008	13008-6055	2	Ring-Set-Piston				
❶13025	13025-7001	0	Ring-Set-Piston L, 0.5				
❶13029	13029-7004	0	Piston-Engine L, 0.5				
❶13031	13031-7001	1	Crankshaft-Comp				
❶13251	13251-7003	0	Rod-ASM-Connecting				
❶13251A	13251-7004	2	Rod-ASM-Connecting				
❶92033	92033-7005	4	Ring-Snap				
❶130	130G0630	4	Bolt-Flanged (6X30)				

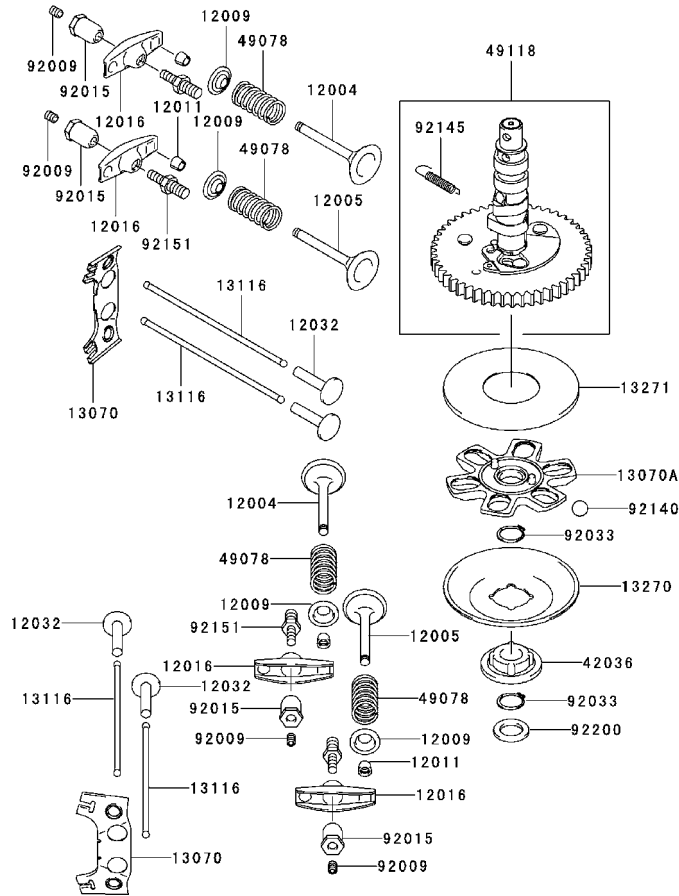

Valve / Camshaft Assembly

Kawasaki FH500V-AS36


Ref	Part No.	Qty.	Description				
12004	12004-7003	2	Valve-Intake				
12005	12005-7003	2	Valve-Exhaust				
12009	12009-7001	4	Retainer-Spring, Valve				
12011	12011-2056	8	Collet				
12016	12016-7001	4	Arm-Rocker				
12032	12032-7001	4	Tappet				
13070	13070-7001	2	Guide				
13070A	13070-7004	1	Guide				
13116	13116-2057	4	Rod-Push				
13270	13270-7002	1	Plate				
13271	13271-7007	1	Plate				
42036	42036-7001	1	Sleeve				
49078	49078-7001	4	Spring-Valve, Engine				
49118	49118-7002	1	Camshaft-Comp				
92009	92009-2341	4	Screw				
92015	92015-2253	4	Nut				
92033	92033-7001	2	Ring-Snap				
92140	92140-7002	6	Ball				
92145	92145-7001	1	Spring				
92151	92151-7019	4	Bolt				
92200	92200-7001	1	Washer				

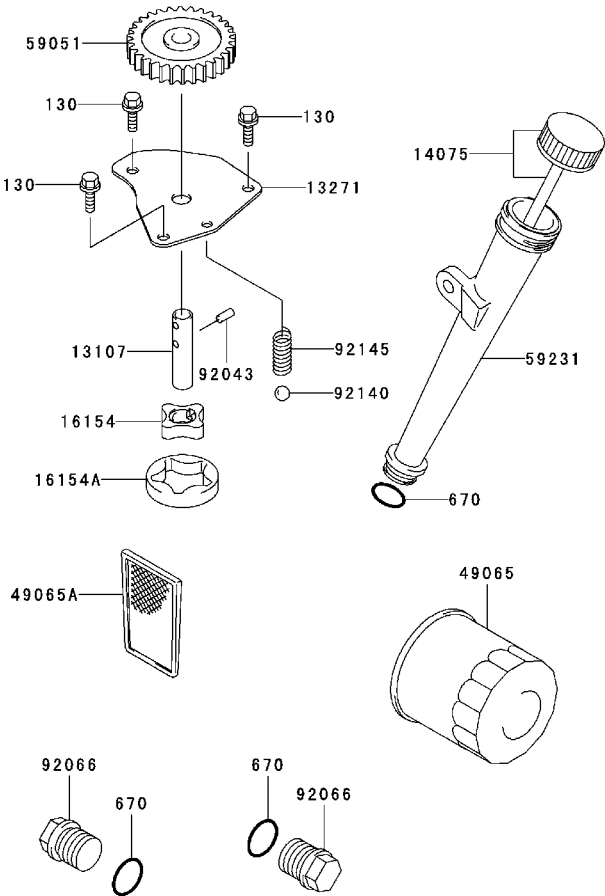

Lubrication Equipment Assembly
Kawasaki FH500V-AS36

Ref	Part No.	Qty.	Description				
⑤13107	13107-7009	1	Shaft				
⑤13271	13271-7017	1	Plate				
⑤14075	14075-7001	1	Cap ASM				
⑤16154	16154-2053	1	Rotor-Pump (In)				
⑤16154A	16154-2054	1	Rotor-Pump (Out)				
⑤49065	49065-2078	1	Filter-Oil				
⑤49065A	49065-7004	1	Filter-Oil				
⑤59051	59051-7004	1	Gear-Spur				
⑤59231	59231-7001	1	Filler				
⑤92043	92043-7003	1	Pin				
⑤92066	92066-7003	2	Plug				
⑤92140	92140-7003	1	Ball				
⑤92145	92145-7002	1	Spring				
⑤130	130B0612	3	Bolt-Flanged (6X12)				
⑤670	670D2016	3	O-Ring (16Mm)				

23

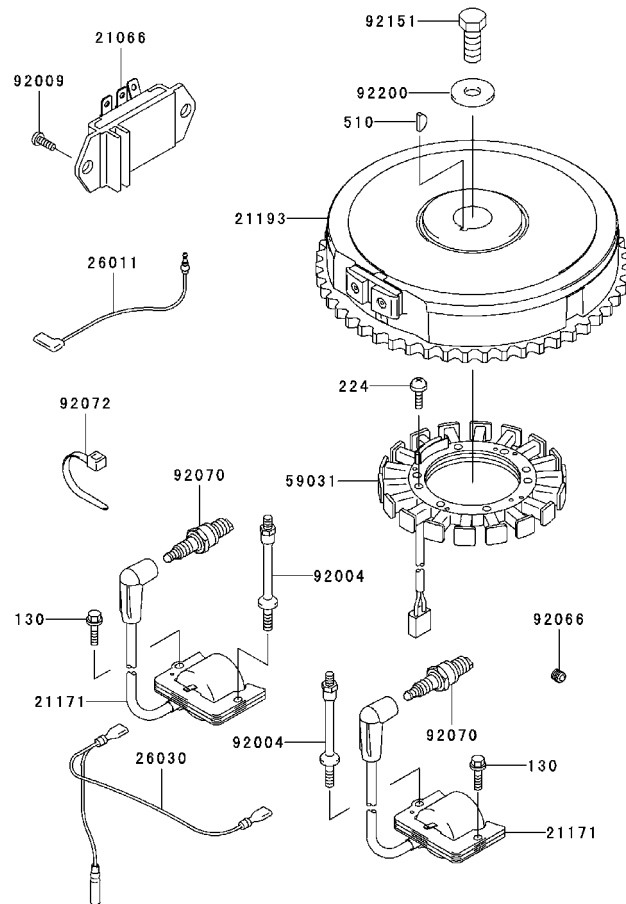


Electric Equipment Assembly

Kawasaki FH500V-AS36


Ref	Part No.	Qty.	Description				
⑨21066	21066-7001	1	Regulator-Voltage				
⑨21171	21171-7001	2	Ignition Coil ASM				
⑨21193	21193-7007	1	Flywheel ASM				
⑨26011	26011-7001	1	Wire-Lead				
⑨26030	26030-7001	1	Harness				
⑨59031	59031-7001	1	Coil-Charging				
⑨92004	92004-2147	2	Stud				
⑨92009	92009-2308	2	Screw				
⑨92066	92066-7002	1	Plug				
⑨92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
⑨92072	92072-7003	2	Band				
⑨92151	92151-2097	1	Bolt (12X30)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	2	Bolt-Flanged (6X20)				
⑨224	224B0520	4	Screw-Pan (5X20)				
⑨510	510A5100	1	Key-Woodruff				

25

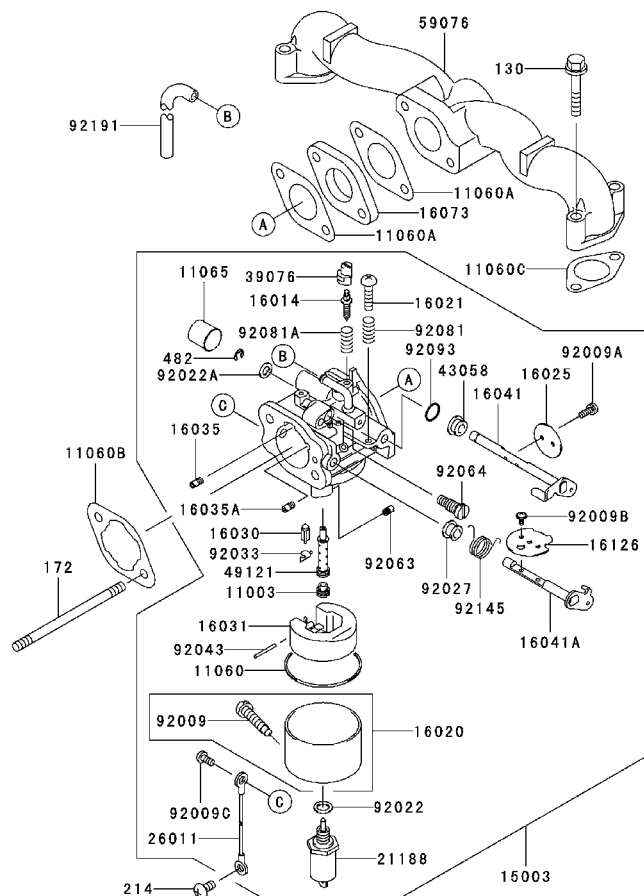

Carburetor Assembly Kawasaki FH500V-AS36


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③11003	11003-2105	1	Seat-Valve	③59076	59076-7001	1	Manifold-Intake
③11060	11060-2406	1	Gasket, Chamber	③92009	92009-2015	1	Screw
③11060A	11060-7003	2	Gasket-Insulator	③92009A	92009-2024	2	Screw
③11060B	11060-7004	1	Gasket-Air Filter	③92009B	92009-2081	2	Screw
③11060C	11060-7005	2	Gasket, Manifold	③92009C	92009-2400	1	Screw
③11065	11065-2061	1	Cap	③92022	92022-2231	1	Washer
③15003	15003-7037	1	Carburetor-ASM	③92022A	92022-2239	1	Washer
③16014	16014-2080	1	Screw-Pilot Air	③92027	92027-2025	1	Collar
③16020	16020-2141	1	Chamber-Float	③92033	92033-2067	1	Ring-Snap
③16021	16021-2060	1	Screw-Throttlestop	③92043	92043-2226	1	Pin
③16025	16025-2195	1	Valve-Throttle, #130	③92063	92063-2380	1	Jet-Main, #106.3
③16030	16030-2067	1	Valve-Float	③92064	92064-2127	1	Jet-Pilot, #42.5
③16031	16031-2066	1	Float	③92081	92081-2009	1	Spring
③16035	16035-2077	1	Jet-Air, #0.8	③92081A	92081-2256	1	Spring
③16035A	16035-2081	1	Jet-Air, #2.0	③92093	92093-2002	1	Seal
③16041	16041-2253	1	Shaft-Carburetor, Throttle	③92145	92145-2061	1	Spring
③16041A	16041-7006	1	Shaft-Carburetor	③92191	92191-7016	1	Tube
③16073	16073-7001	1	Insulator	③130	130B0635	4	Bolt-Flanged (6X35)
③16126	16126-7008	1	Valve	③172	172G0685	2	Bolt-Stud
③21188	21188-2011	1	Solenoid	③214	214B0510	1	Screw-Pan (5X10)
③26011	26011-2281	1	Wire-Lead	③482	482L4000	1	Circlip-Type-E
③39076	39076-2053	1	Limiter				
③43058	43058-3716	1	Ring				
③49121	49121-2231	1	Nozzle-Main #112B				

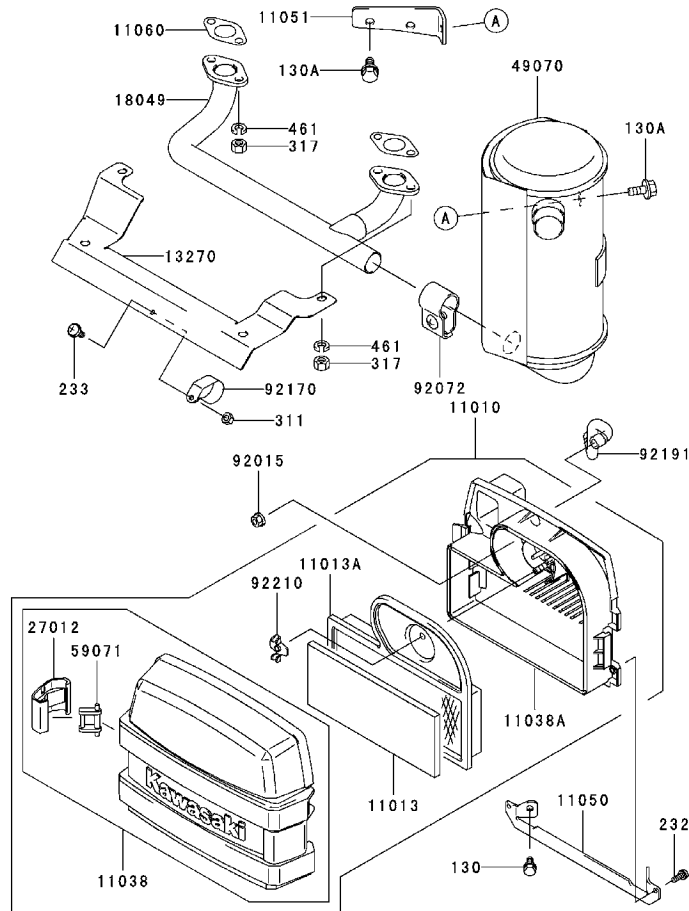

Air Filter / Muffler Assembly Kawasaki FH500V-AS36

Ref	Part No.	Qty.	Description
③11010	11010-7001	1	Air Filter ASM
③11013	11013-7001	1	Element-Filter, Air
③11013A	11013-7002	1	Element-Filter, Air
③11038	11038-7001	1	Case-ASM-Air Filter
③11038A	11038-7003	1	Case-Assy-Air Filter
③11050	11050-7006	1	Bracket
③11051	11051-7005-9H	1	Bracket
③11060	11060-7021	2	Gasket-Muffler
③13270	13270-7008	1	Plate
③18049	18049-7001	1	Pipe-Exhaust
③27012	27012-7001	2	Hook-Filter, Air
③49070	49070-7002	1	Muffler-Comp
③59071	59071-7001	2	Joint
③92072	92072-7008	1	Band
③92015	92015-1193	2	Nut
③92170	92170-7002	1	Clamp
③92191	92191-7001	1	Tube
③92210	92210-7004	1	Nut
③130	130B0612	2	Bolt-Flanged (6X12)
③130A	130B0816	2	Bolt-Flanged (8X16)
③232	232B0514	2	Screw-Pan
③233	233B0416	1	Screw (4X16)
③311	311B0400	1	Nut-Hex (4Mm)

Ref	Part No.	Qty.	Description
③317	317R0800	4	Nut-Hex, Small (8Mm)
③461	461F0800	4	Washer-Spring (8Mm)

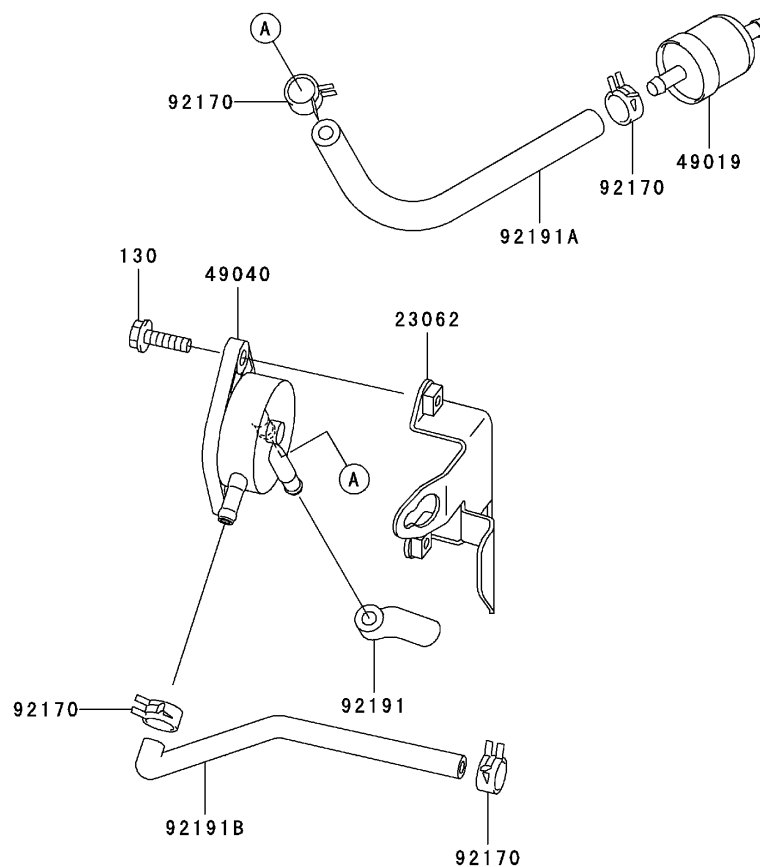

Fuel Tank / Fuel Valve Assembly Kawasaki FH500V-AS36

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35X12.7X160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged (6X20)				

29

NOTES

NOTES

