



NEW HOLLAND ..

MZ14H Riding Mower

Model No. 725057006 - T04ZA0001 and up.

Model No. 94301 - T04ZA0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Crankcase Assembly Briggs and Stratton 280h07-0166-e1	 19
Control Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 280h07-0166-e1	 20
Hydro and Belt Drive Assembly	 6	Carburetor Assembly Briggs and Stratton 280h07-0166-e1	 21
RH Hydrostat Assembly No. 107-2466	 7	Governor Assembly Briggs and Stratton 280h07-0166-e1	 22
LH Hydrostat Assembly No. 107-2465	 9	Blower Housing Assembly Briggs and Stratton 280h07-0166-e1	 23
Engine and Styling Assembly	 11	Starter Assembly Briggs and Stratton 280h07-0166-e1	 24
38in Deck Spindle and Belt Drive Assembly	 13	Gasket Assembly Briggs and Stratton Model 280h07-0166-e1	 25
38in Deck Assembly	 14	Carburetor Overhaul Kit Assembly Briggs and Stratton 280h07-0166-e1	 26
Electrical System Assembly	 15		
Cylinder Assembly Briggs and Stratton 280h07-0166-e1	 16		
Cylinder Head Assembly Briggs and Stratton 280h07-0166-e1	 17		
Crankshaft Assembly Briggs and Stratton 280h07-0166-e1	 18		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❼ Obtain from your local Briggs & Stratton dealer | |

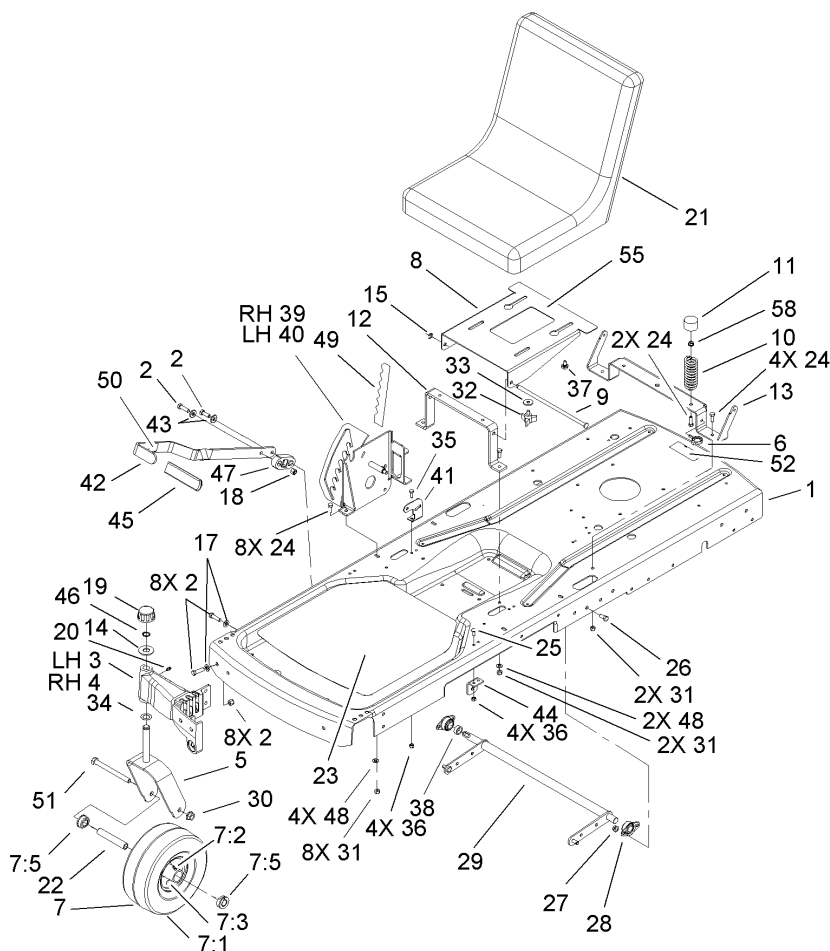

Frame Assembly


Ref	Part No.	Qty.	Description
1	107-1744-04	1	Frame
2	323-18	10	Screw-HH
3	105-6986-04	1	Castor-LH
4	105-6985-04	1	Castor-RH
5	106-2196-04	2	Castor Fork ASM
6	105-1853	1	Clamp-Hose
7	107-7342	2	Front Wheel And Tire ASM
7:1	105-1943	1	Tire
7:2	302-11	1	Fitting-Lube, 45 DEG
7:3	232-27	1	Stem-Valve
7:5	114-1640	2	Bushing-Flange
7:99	93-4244	1	Tube-Inner (W/Valve)
8	105-6953-03	1	Bracket-Seat
9	105-6955	1	Pin-Pivot
10	92-7054	2	Spring-Compression
11	701178	2	Cap-Protector
12	105-6954-03	1	Brace-Seat, Front
13	106-2210-03	1	Brace-Seat, Rear
14	28-2480	2	Washer
15	105-7004	1	E-Ring
17	3256-24	8	Washer-Flat
18	3296-39	9	Nut-Lock, NI
19	61-9780	2	Cap-Hub
20	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
21	107-7323	1	Seat
22	104-3667	2	Spanner-Wheel
23	105-3460	1	Pad-Antiskid
24	322-4	14	Screw-HH
25	3229-1	4	Screw-CARR
26	323-4	4	Screw-HH
27	3290-357	4	Nut-HHF, Whiz
28	1-633102	2	Bearing-Flange, Side
29	105-3499-03	1	Lift Arm ASM
30	32128-23	2	Nut-HF
31	3296-29	12	Nut-Lock, NI
32	92-9674	2	Knob
33	5-4460	2	Washer-Pivot
34	3-6498	2	Washer-Thrust
35	321-4	4	Screw-HH
36	3296-42	8	Nut-Lock, NI
37	37-8770	2	Bolt-Shoulder
38	106-2222	1	Spacer
39	106-2158-03	1	RH Plate ASM
40	106-2159-03	1	LH Plate ASM
41	106-2180	2	Bracket-Bellcrank
42	105-3435-03	1	Lever-Lift
43	98-5975	2	Washer-Belleville
44	105-3439	2	Bracket-Lift

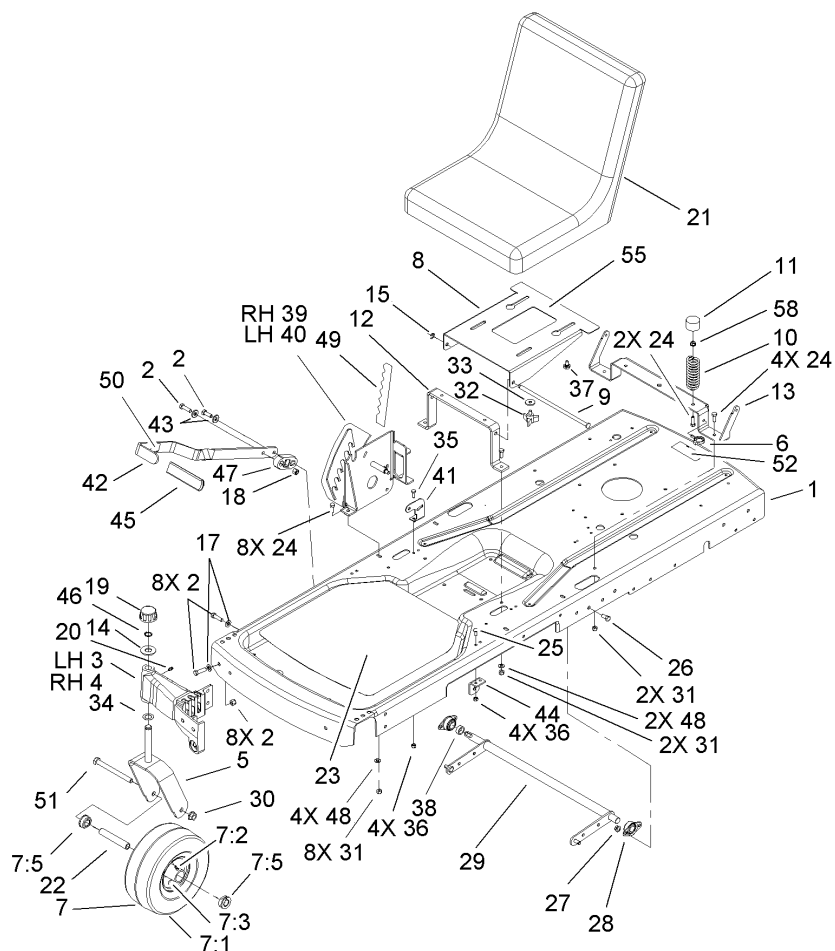


Frame Assembly (continued)

Ref	Part No.	Qty.	Description
45	105-3450	1	Grip-Lever, Lift
46	32151-103	2	Ring-Retaining, EXT
47	106-2211	1	Block-Lift
48	3256-23	6	Washer-Flat
49	106-2223	1	Decal-HOC
50	106-8743	1	Decal
51	325-22	2	Screw-HH
52	106-7026	1	Decal-Transport
55	106-8716	1	Decal-Services
58	32128-25	2	Nut-HF

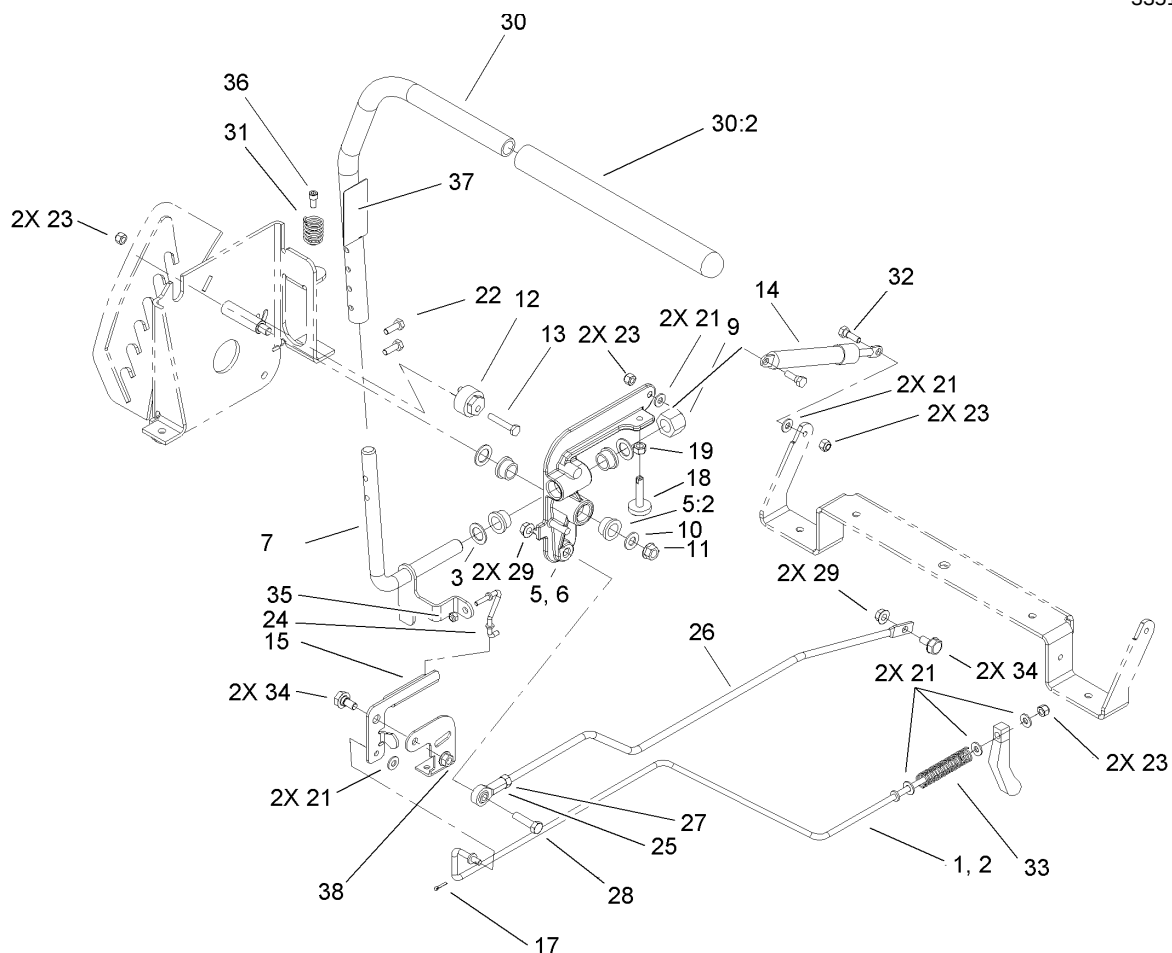

Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-7045	1	Rod-Brake, LH	26	105-7048	2	Rod-Hydro
2	105-7044	1	Rod-Brake, RH	27	3219-2	2	Nut-Hex
3	105-3481	6	Washer-Thrust	28	322-6	2	Screw-HH
5	106-8671	1	RH Actuator Arm W/Bushing ASM	29	32128-20	4	Nut-HF
5:2	105-3455	4	Bushing	30	106-2242	2	Handle ASM
6	106-8672	1	LH Actuator Arm W/Bushing ASM	30:2	1-633257	1	Grip-Control, Motion
①6:2	105-3455	4	Bushing	31	105-3469	2	Spring-Compression
7	105-3488	1	LH Pivot Shaft ASM	32	106-2214	4	Bolt-Shoulder
①8	105-3487	1	RH Pivot Shaft ASM	33	105-3465	2	Spring-Compression
9	3296-53	2	Nut-Lock, NI	34	37-8771	4	Bolt-Shoulder
10	3256-24	2	Washer-Flat	35	3296-2	2	Nut-Lock
11	3296-59	2	Nut-Lock, NI	36	3274-52	2	Screw-HSH
12	105-3485	2	Bushing-Eccentric	37	107-7382	2	Decal-Brake, Parking
13	321-9	2	Screw-HH	38	32128-25	2	Nut-HF
14	103-2913	2	Damper-Control, Motion				
15	106-2181	2	Bellcrank				
17	3272-5	2	Pin-Cotter				
18	105-3486	2	Stop-Adjustment				
19	3217-6	2	Nut-Hex				
21	3256-22	12	Washer-Flat				
22	321-4	4	Screw-HH				
23	3296-42	8	Nut-Lock, NI				
24	106-2179	2	Link-Brake				
25	1-543017	2	Balljoint-RH				

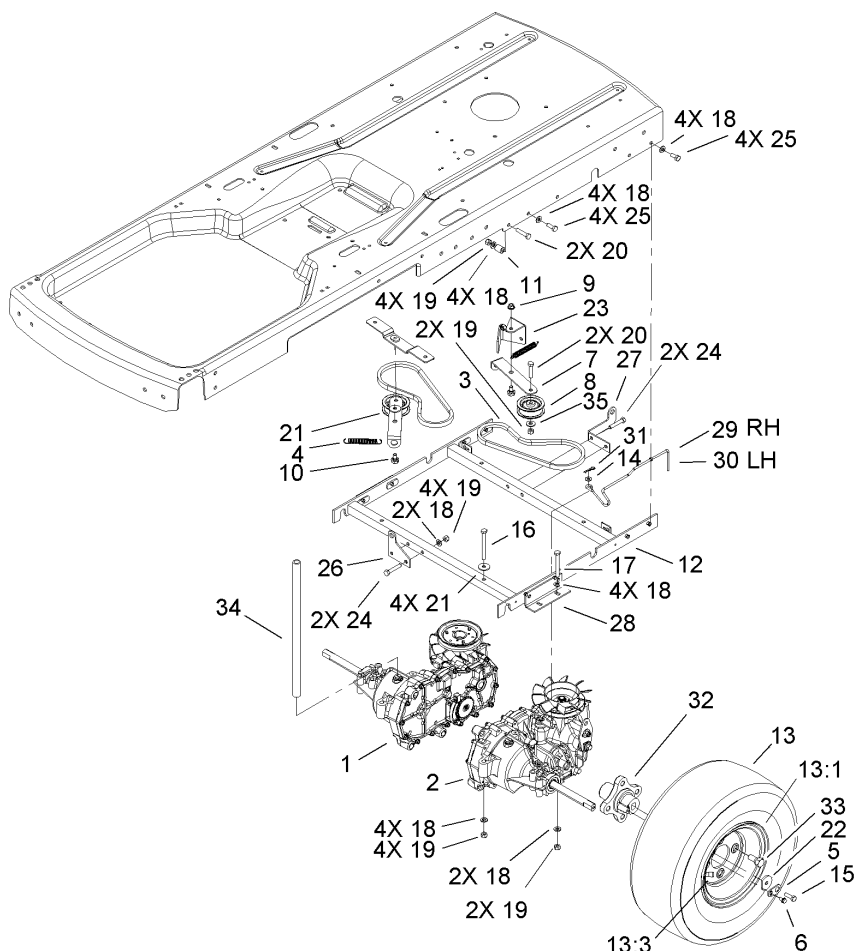

Hydro and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	107-2466	1	RH Hydrostat ASM
2	107-2465	1	LH Hydrostat ASM
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-3438	2	Tab-Locking
6	3234-13	2	Screw-HHF
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8770	2	Bolt-Shoulder
11	105-1941	2	Spacer
12	107-2462-03	1	Hydro Mount ASM
13	107-7328	2	Rear Wheel ASM
13:1	242-76	1	Rim
13:3	232-27	1	Stem-Valve
13:99	107-2491	1	Tube-Tire
14	3256-1	2	Washer-Flat
15	3210-5	2	Screw-HH
16	322-20	4	Screw-HH
17	322-13	4	Screw-HH
18	3256-23	24	Washer-Flat
19	3296-29	16	Nut-Lock, NI
20	322-7	4	Screw-HH
21	5-4460	5	Washer-Pivot

Ref	Part No.	Qty.	Description
22	106-7001	2	Washer-Wheel
23	107-1734	1	Stop-Clutch
24	322-9	4	Screw-HH
25	322-4	8	Screw-HH
26	105-7049	1	Bracket-Spring
27	105-7046	1	Bracket-Spring
28	105-7039-03	2	Support-Hydro
29	107-2463	1	Arm-Bypass, LH
30	107-2464	1	Arm-Bypass, RH
31	1-806003	2	Pin-Hair
32	106-6987-03	2	Hub-Machined
33	71-4450	8	Bolt-Lug
34	106-7002	2	Vent Hose ASM
34:1	93-3816	1	O-Ring
34:2	93-3814	1	Fitting-Hose
34:7	107-1701	1	Cap Vent ASM
35	3256-3	2	Washer-Flat

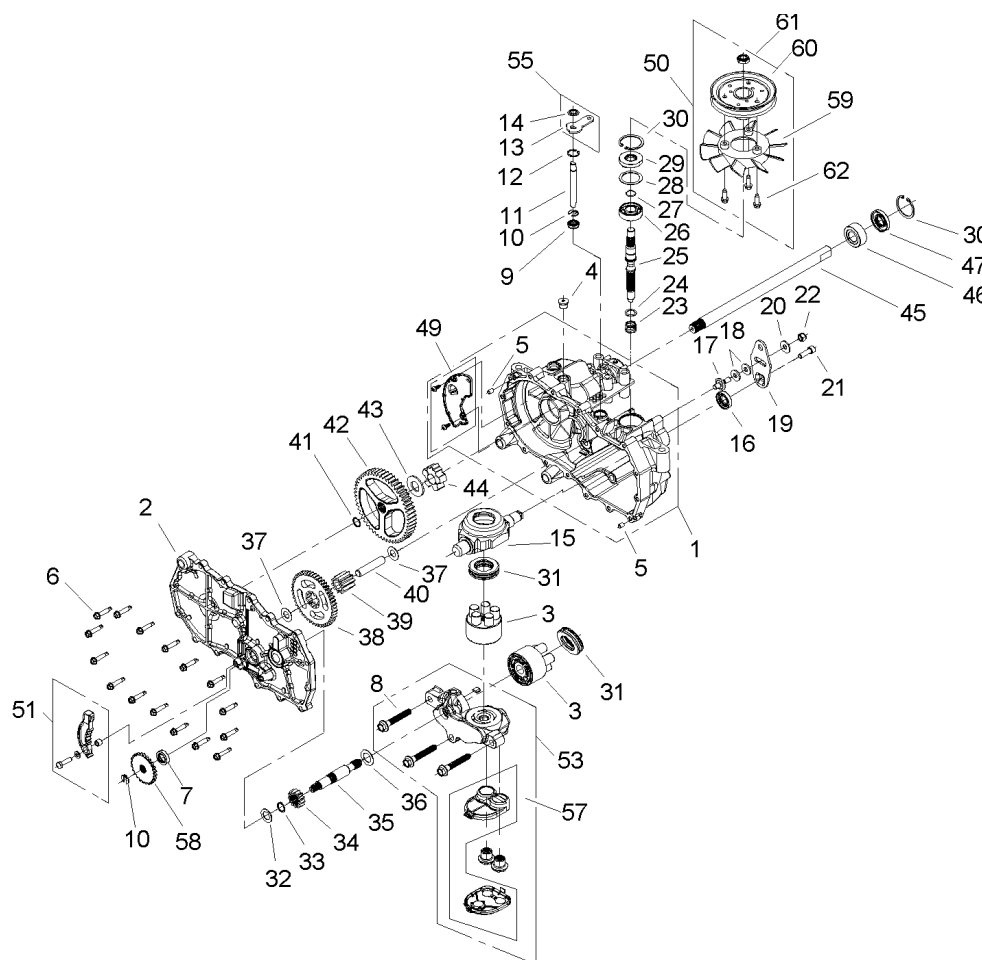


RH Hydrostat Assembly No. 107-2466

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM	24	94-1937	1	Washer-Thrust, Block
2	106-8675	1	LH Side ASM	25	104-5306	1	Shaft-Input
3	103-2666	1	Cylinder Block Kit	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

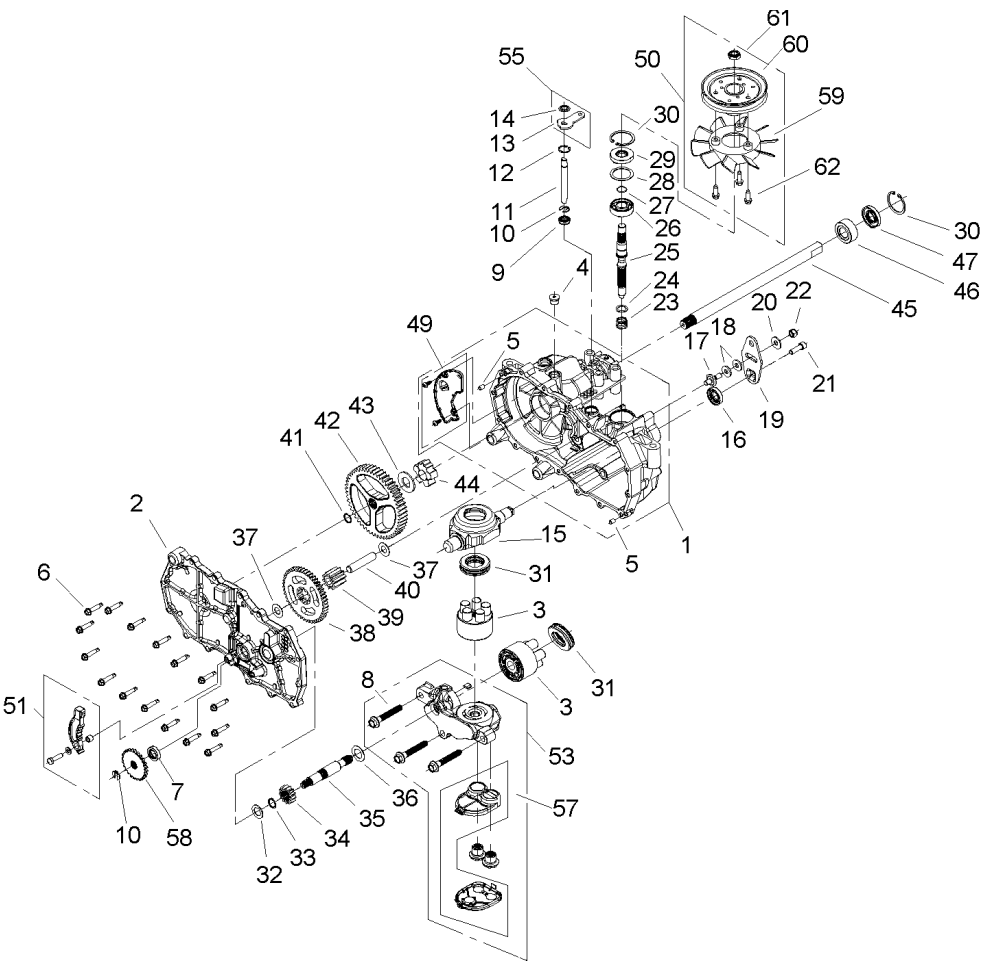


RH Hydrostat Assembly No. 107-2466 (continued)

Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8687	1	LH Expansion Plate Kit				
50	105-1928	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	106-8690	1	LH Center Section Filter Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	105-1927	1	Fan				
60	105-1896	1	Pulley				
61	105-1875	1	Nut-Lock				
62	104-2120	3	Screw				

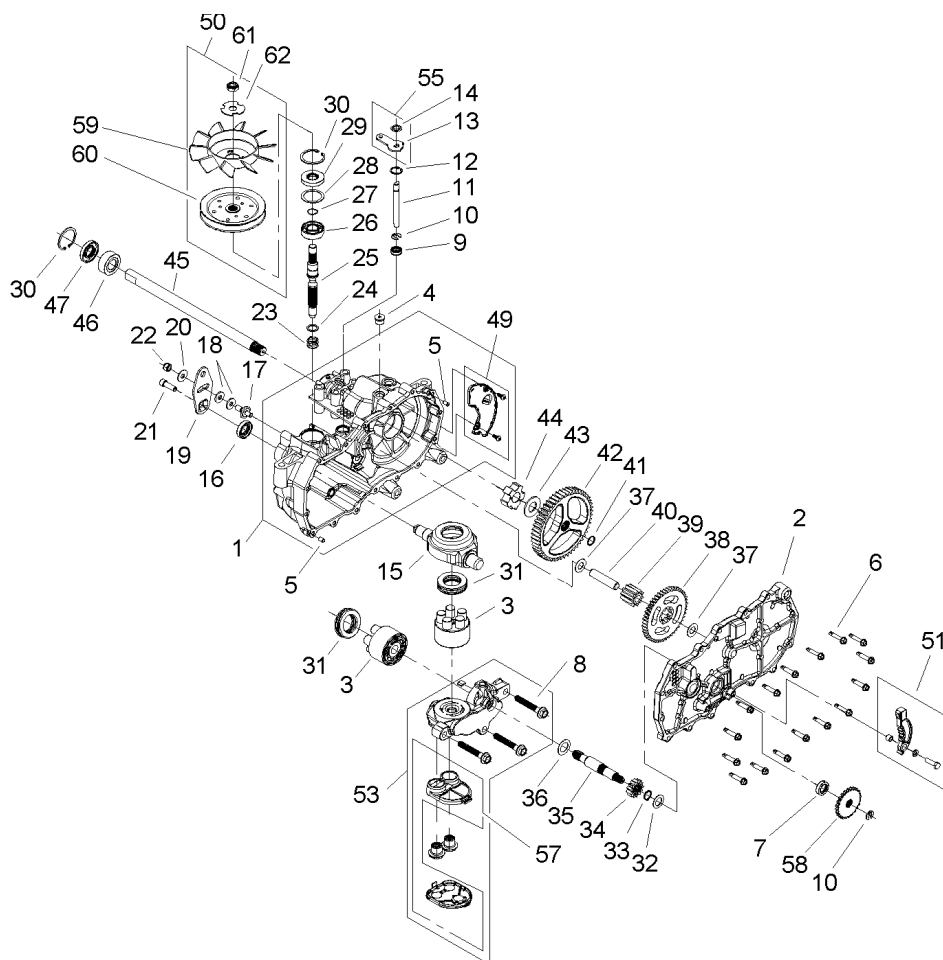


LH Hydrostat Assembly No. 107-2465

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM	24	94-1937	1	Washer-Thrust, Block
2	106-8696	1	RH Side ASM	25	104-5306	1	Shaft-Input
3	103-2666	1	Cylinder Block Kit	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinnion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

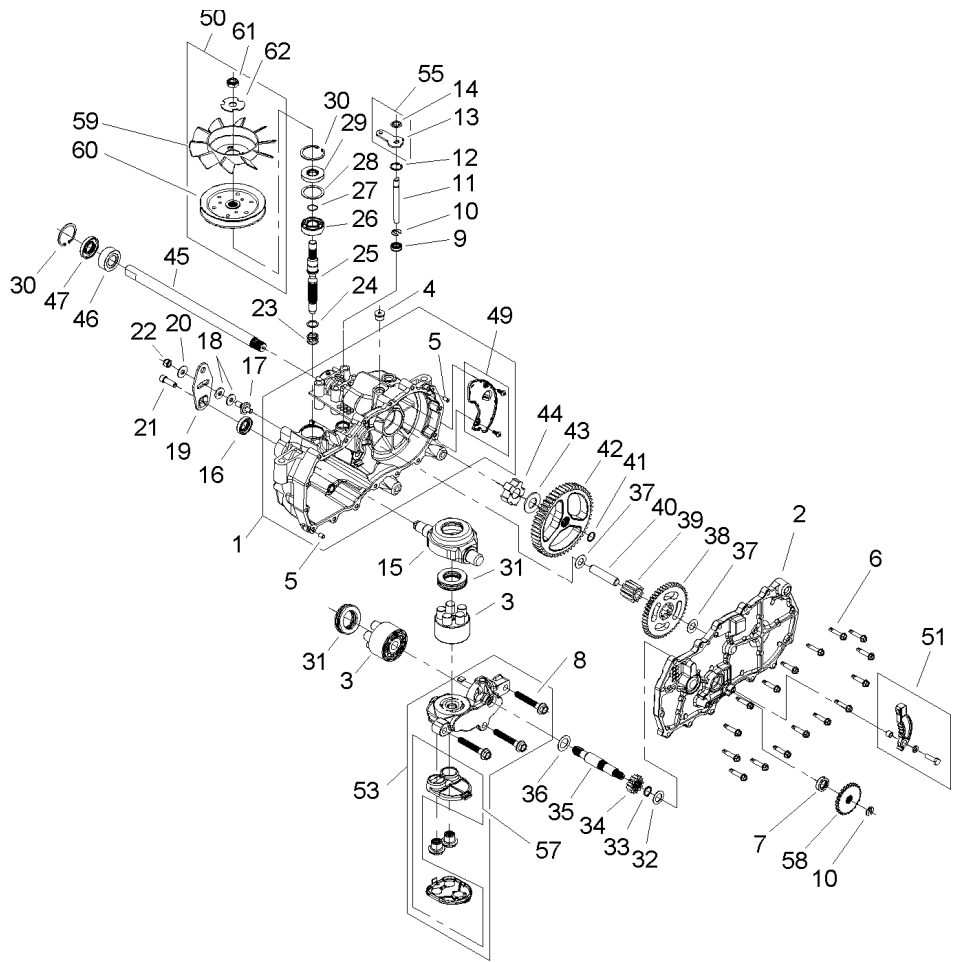

LH Hydrostat Assembly No. 107-2465 (continued)


Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8697	1	RH Expansion Plate Kit				
50	106-8698	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	106-8699	1	RH Center Section Filter Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	110-8566	1	Fan-6 Inch, 10 Blade				
60	104-1754	1	Pulley				
61	105-1875	1	Nut-Lock				
62	107-9122	3	Washer-Slotted				

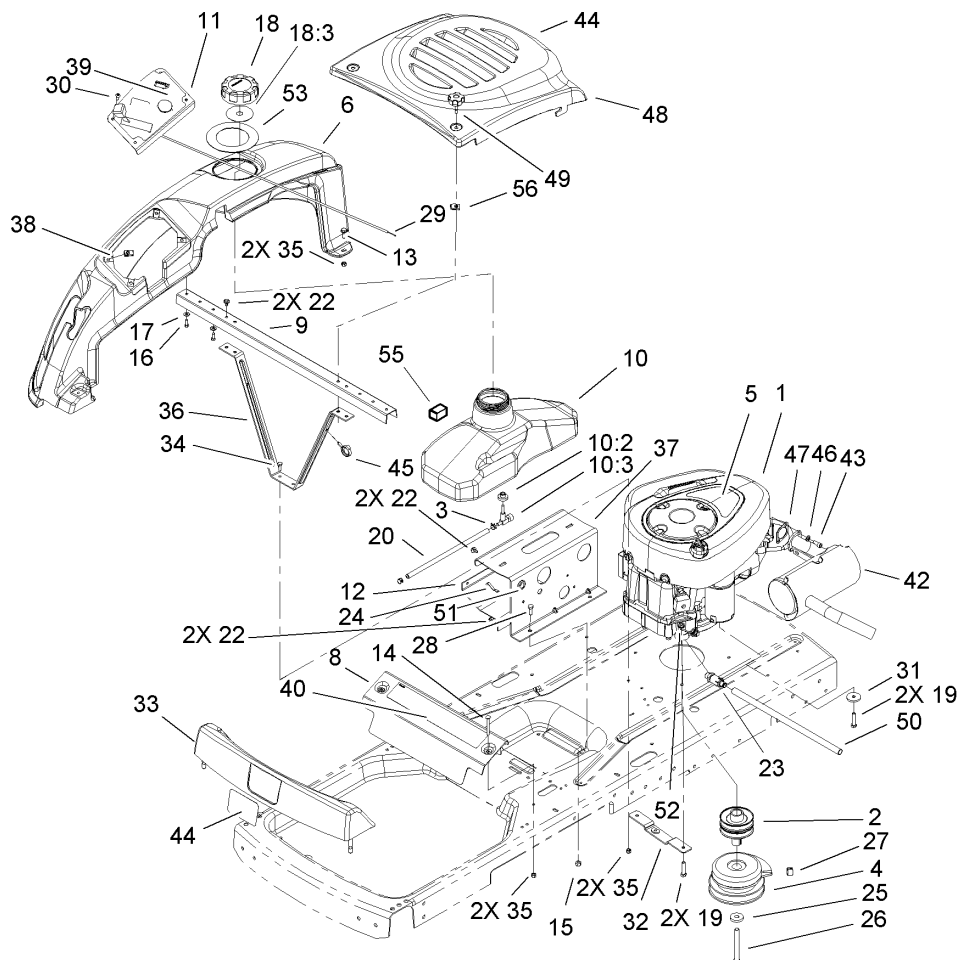

Engine and Styling Assembly


Ref	Part No.	Qty.	Description
1		1	Engine-Briggs And Stratton, 280H07-0166-E1
2	105-3472	1	Pulley-Engine
3	2412-98	2	Clamp
4	105-3462	1	Clutch-Electric
5	107-7332	1	Label-Engine
6	107-7335	1	Cover-Side, RH
7	107-7336	1	Cover-Side, LH
8	106-2164-03	1	Bracket-Support, Front
9	106-2165-03	1	Bracket-Support, Rear
10	105-3464	1	Gas Tank ASM
10:2	46-6560	1	Bushing
10:3	104048	1	Valve-Fuel
11	106-2167-03	1	Panel-Control
12	105-3453-03	1	Plate-Support
13	11-9030	2	Screw-Shoulder
14	3229-7	2	Screw-CARR
15	3296-29	2	Nut-Lock, NI
16	46-8090	4	Screw-Plastite
17	3256-22	4	Washer-Flat
18	88-3980	1	Gas Cap ASM
18:3	88-4010	1	Gasket-Cap, Gas
19	322-7	4	Screw-HH
20	106-8720	1	Hose-Fuel

Ref	Part No.	Qty.	Description
22	46-8560	7	Screw-HHF
23	92-6877	1	Valve-Drain, Oil
24	609830	2	Spring
25	112843	1	Washer
26	3212-16	1	Screw-HH
27	98-5023	1	Bumper
28	322-4	2	Screw-HH
29	107-7331	1	Cable-Throttle
30	3258-166	4	Screw-PRH
31	62-7190	2	Spacer-Steel
32	106-2156	1	Plate-Mount, Idler
33	105-6965	1	Footrest ASM
34	321-4	2	Screw-HH
35	3296-42	6	Nut-Lock, NI
36	106-6994-03	1	Brace ASM
37	107-2485-03	1	Plate-Tank
38	107069	4	Clip
39	107-7337	1	Decal-Control
40	107-7383	1	Decal-Danger
42	106-7007	1	Muffler
43	3274-10	2	Screw-HSH
44	107-7338	2	Emblem-Logo
45	105-1853	2	Clamp-Hose
46	3253-4	2	Washer-Lock

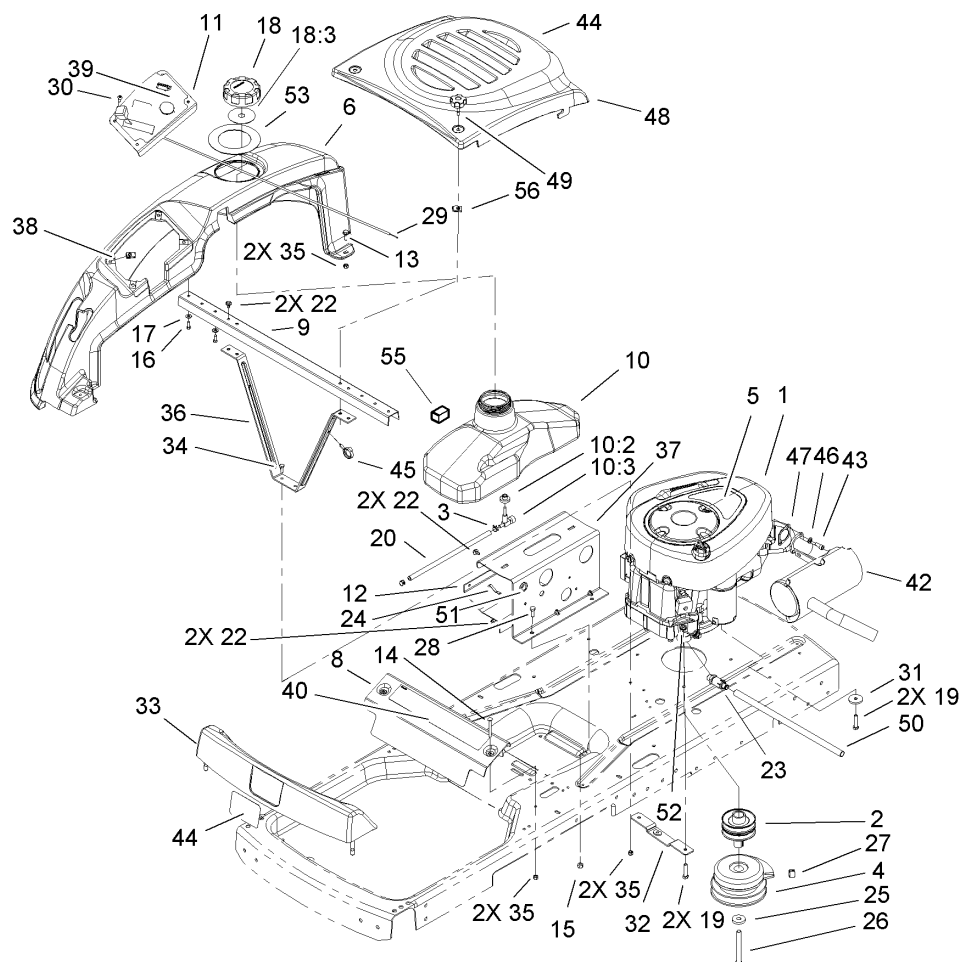


Engine and Styling Assembly (continued)

Ref	Part No.	Qty.	Description
47	88-4410	1	Gasket-Muffler
48	106-2163	1	Cover-Hood
49	106-7017	2	Knob
50	106-7022	1	Tube-Drain, Oil
51	237-124	1	Grommet
52	32128-25	4	Nut-HF
53	106-7042	1	Seal-Rubber
55	104-2488	2	Foam-Switch, Seat
56	106-8737	2	Nut-Retainer

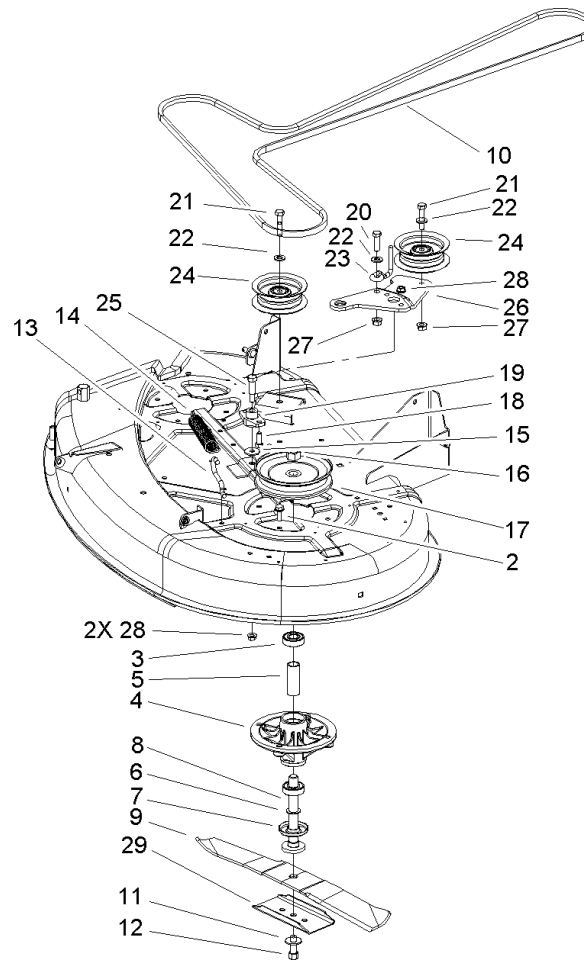

38in Deck Spindle and Belt Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	32144-41	8	Screw-Taptite	26	107-2467-03	1	Arm-Idler
3	100-1048	4	Bearing-Ball	27	32128-21	2	Nut-HF
4	88-4510	2	Housing-Spindle	28	32128-25	3	Nut-HF
5	62-3661	2	Spacer-Bearing	29	80-0510-03	2	Stiffener-Blade
6	80-4380	2	Spacer				
7	80-4360	2	Shield-Bearing				
8	80-4341	2	Shaft-Spindle				
9	88-5140-03	2	Blade				
10	106-6998	1	V-Belt				
11	3290-465	2	Washer-Belleville				
12	26-0671	2	Screw-Blade				
13	88-5970	1	Hook-Return, Spring				
14	106-2177	1	Spring-Extension				
15	5-4460	1	Washer-Pivot				
16	3219-6	2	Nut-Hex				
17	88-5330	2	Pully-Deck				
18	322-4	2	Screw-HH				
19	88-4980	1	Bushing-Arm, Idler				
20	323-7	1	Screw-HH				
21	323-9	2	Screw-HH				
22	3256-24	3	Washer-Flat				
23	107-7307	1	Guide-Idler, Belt				
24	106-2175	2	Pulley-Idler, Flat				
25	7-0030	1	Bolt-Shoulder				

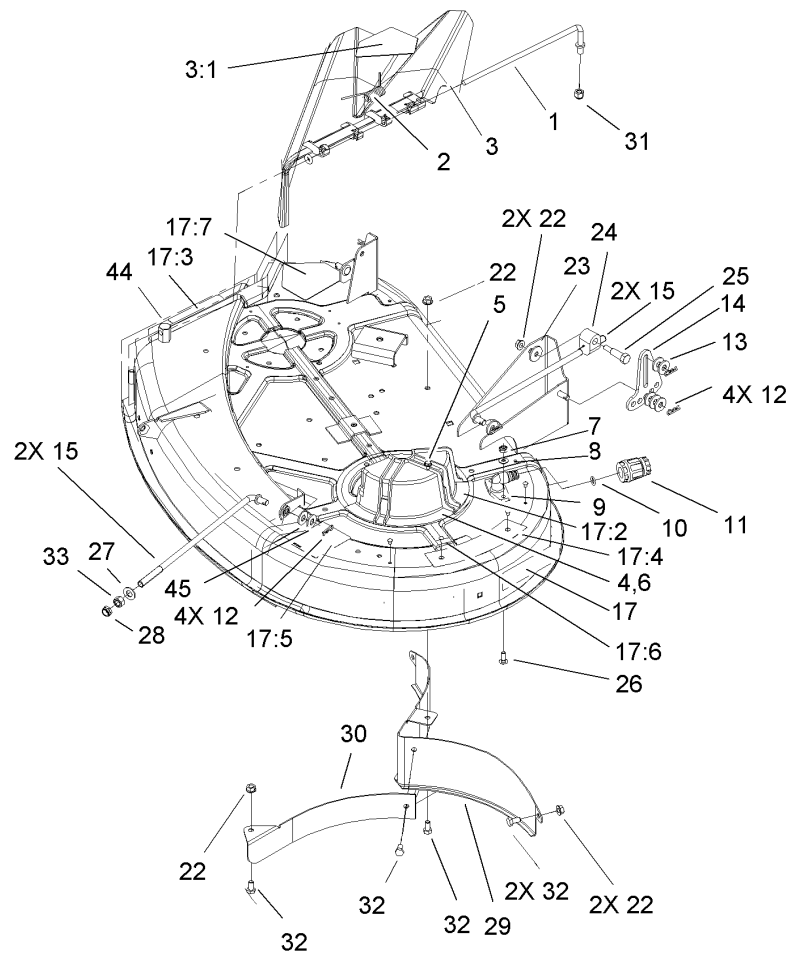

38in Deck Assembly


Ref	Part No.	Qty.	Description
1	95-1661	1	Rod-Pivot
2	57-6950	1	Spring
3	93-0317	1	Deflector ASM
3:1	93-1122	1	Decal-Danger
4	88-4030	1	Guide-Belt, LH
5	32104-76	5	Screw
6	88-4020	1	Guide-Belt, RH
7	3296-16	2	Nut-Lock, NI
8	3256-1	2	Washer-Flat
9	95-2747	1	Fitting-Washout
10	46-6290	1	O-Ring
11	95-3270	1	Connector-Hose
12	9335054	8	Pin-Hair
13	80-6990	10	Washer-Hardened
14	88-5570-03	2	Link-Adjusting, HOC
15	105-3437	4	Rod-Hanger
17	107-7339	1	38In Deck ASM
17:2	68-3660	1	Decal-Danger, Shield
17:3	68-3650	1	Decal-Danger, Deflector
17:4	79-3140	1	Decal-Danger
17:5	105-7015	1	Decal-Routing, Belt
17:6	3290-282	4	Rivet-Pop
17:7	93-1122	1	Decal-Danger
22	32128-25	9	Nut-HF

Ref	Part No.	Qty.	Description
23	5-4460	2	Washer-Pivot
24	88-4230	2	Trunnion-HOC
25	7-0030	2	Bolt-Shoulder
26	3229-1	2	Screw-CARR
27	3256-25	2	Washer-Flat
28	3296-38	2	Nut-Lock, NI
29	106-7030-03	1	Baffle-Rear
30	106-7032-03	1	Extension-Baffle
31	3296-39	1	Nut-Lock, NI
32	322-2	7	Screw-HH
33	3219-4	2	Nut-Hex
44	106-8745	1	O-Ring
45	3256-4	8	Washer-Flat

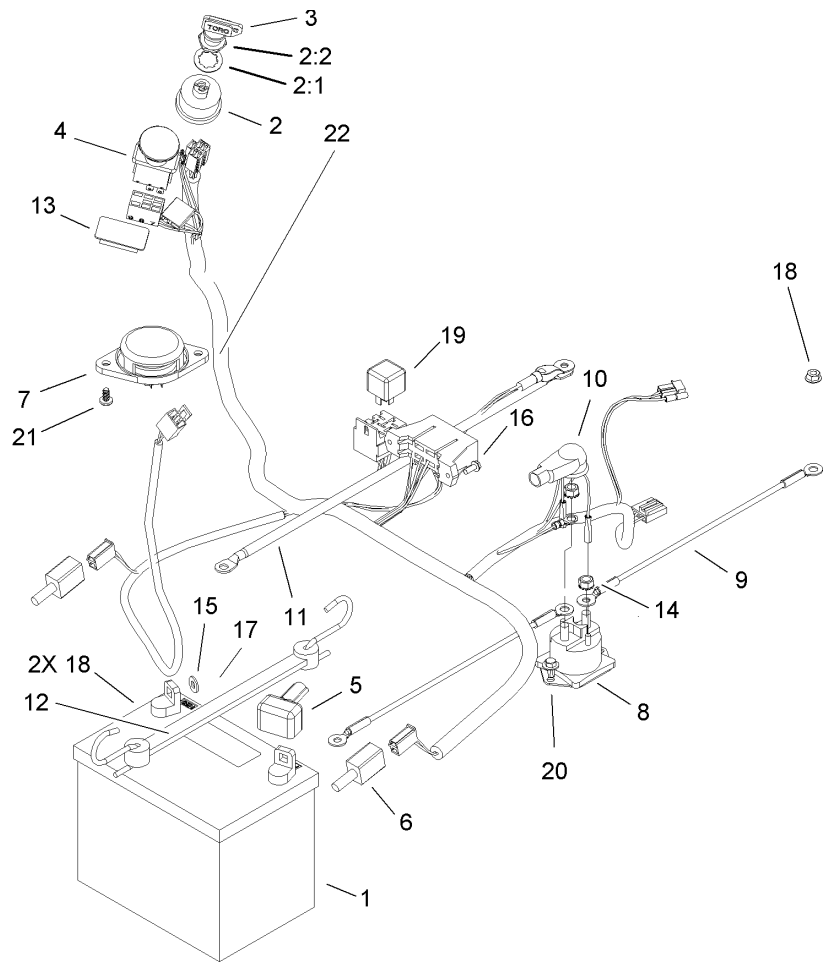

Electrical System Assembly

Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery				
2	88-9830	1	Key Switch ASM				
2:1	3254-5	1	Washer-Tooth				
2:2	218-461	1	Nut-HH				
3	63-8360	1	Key-Ignition				
4	93-9999	1	Switch-PTO				
5	28-8080	1	Boot-Terminal				
6	106-2216	2	Switch				
7	105-6959	1	Switch-Seat				
8	106-8245	1	Solenoid				
9	56-7670	2	Wire ASM				
10	93-3190	1	Boot-Insulator, Terminal				
11	95-7654	1	Cable				
12	104-2466	1	Holddown-Battery				
13	99-7420	1	Plug-Hole				
14	32149-2	2	Nut-Keps				
15	3256-22	2	Washer-Flat				
16	32144-1	3	Screw-Taptite				
17	321-4	2	Screw-HH				
18	32128-33	3	Nut-HF				
19	98-7249	1	Relay				
20	46-8560	2	Screw-HHF				
21	105-6968	2	Screw-Seat, Switch				
22	107-2500	1	Harness-Wire, 9 Amp				

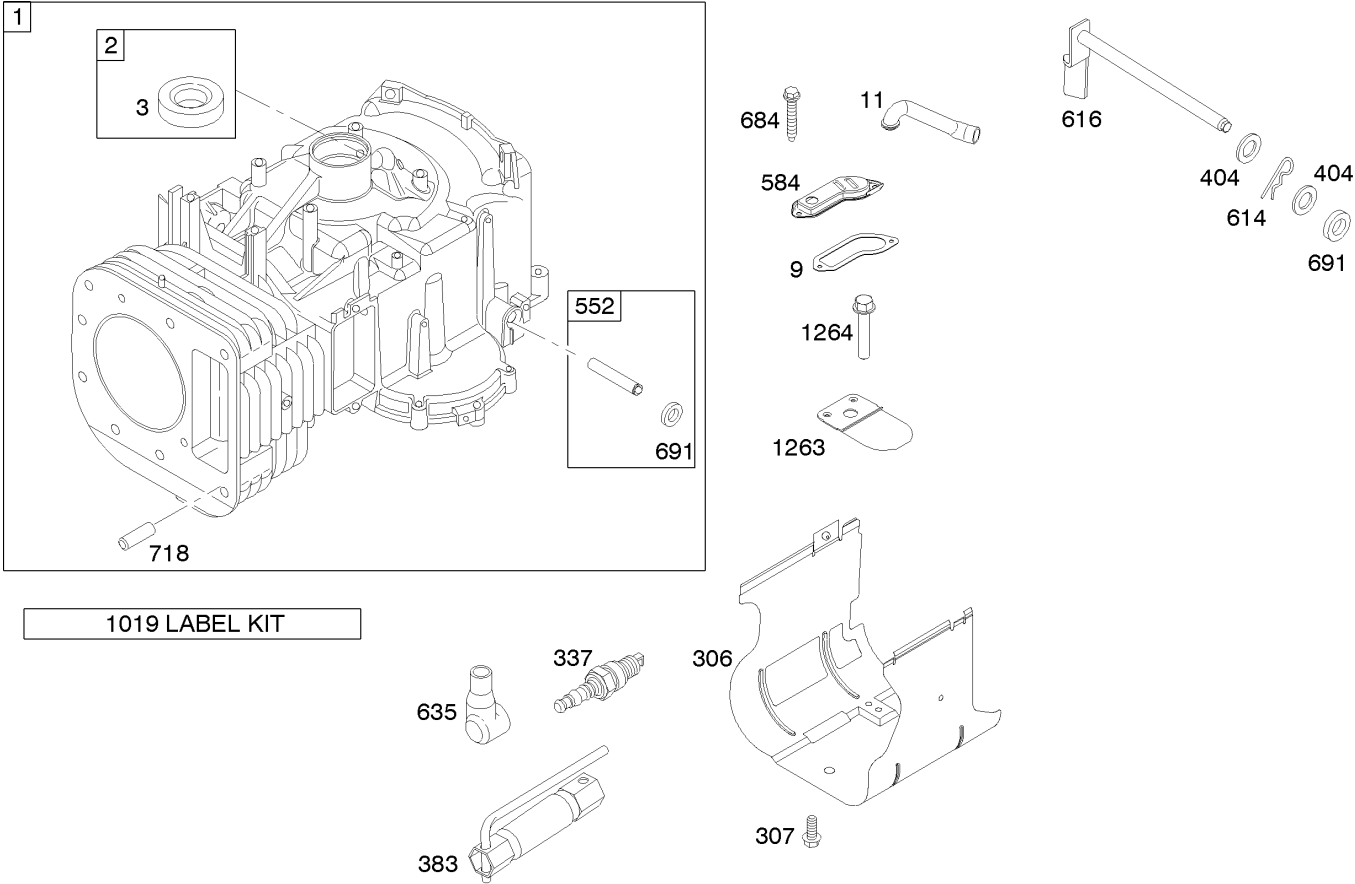


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 280h07-0166-e1


Ref	Part No.	Qty.	Description				
1	697132	1	Cylinder ASM				
2	399265	1	Bushing And Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
17	697761	1	Short Block				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw				
337	691043	1	Spark Plug				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

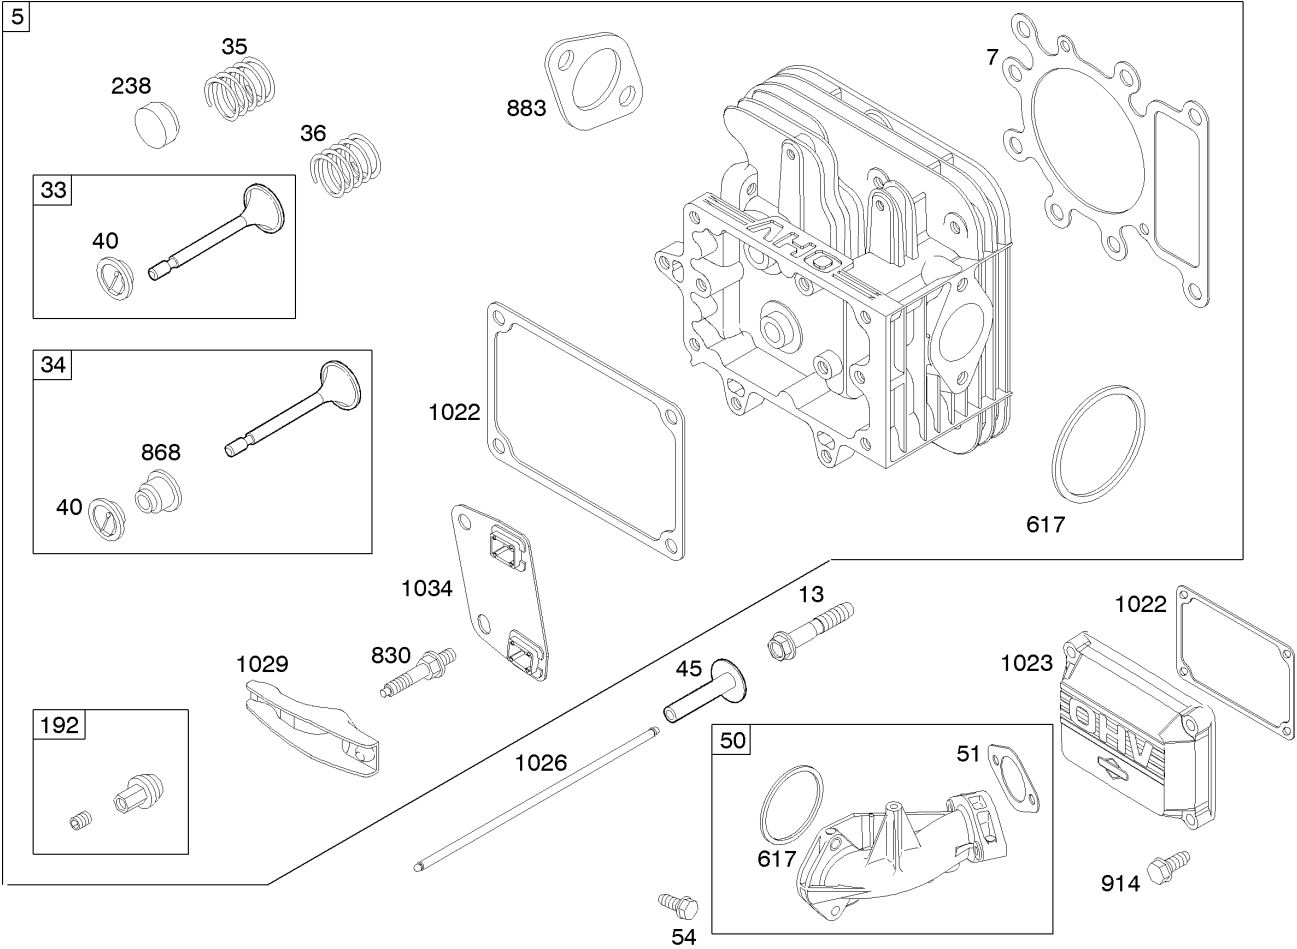

Cylinder Head Assembly
Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
75	698148	1	Head-Cylinder
377	273280	1	Gasket-Head, Cylinder
713	690360	1	Screw
733	695760	1	Valve-Exhaust
734	695761	1	Valve-Intake
735	691279	1	Spring-Valve
736	691279	1	Spring-Valve
740	691752	1	Retainer-Valve
745	690564	1	Tappet-Valve
750	690193	1	Manifold-Intake
451	692137	1	Gasket-Intake
54			
56			
754	691148	1	Screw
7192	691986	1	Adjustor-Arm, Rocker
7238	691843	1	Cap-Valve
5617	692138	1	Seal-O Ring
7			
7830	691095	1	Stud-Arm, Rocker
4868	690968	1	Seal-Valve
7			
7883	692236	1	Gasket-Exhaust
7914	690960	1	Screw
71022	272475	1	Gasket-Cover, Rocker
71023	692492	1	Cover-Rocker

Ref	Part No.	Qty.	Description
71026	692003	1	Rod-Push
7	692011	1	Rod-Push
71029	691751	1	Arm-Rocker
71034	690822	1	Guide-Rod, Push

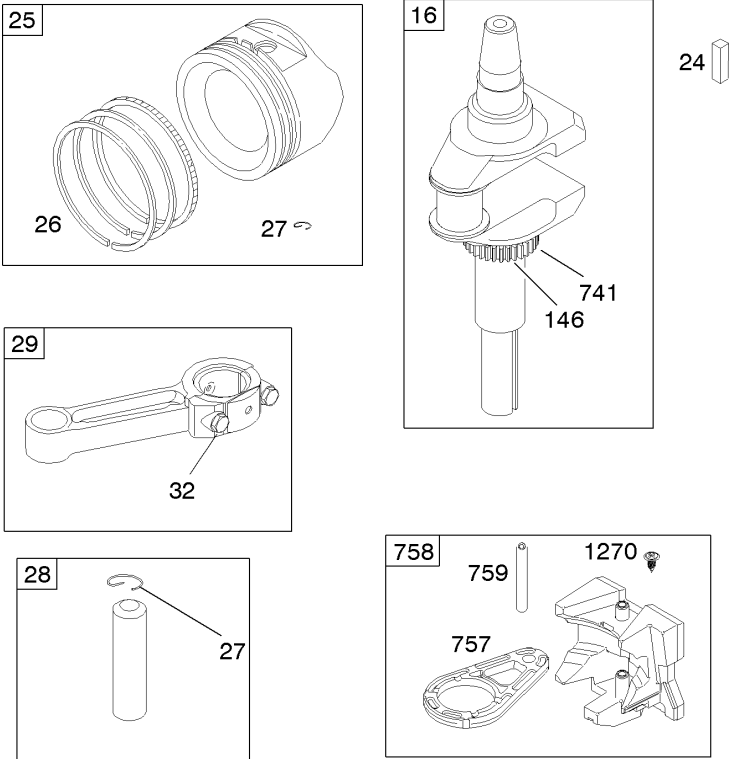


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	698371	1	Piston ASM (Standard)				
7	698393	1	Piston ASM (.010 Oversize)				
7	698394	1	Piston ASM (.020 Oversize)				
7	698395	1	Piston ASM (.030 Oversize)				
26	697375	1	Ring Set (Standard)				
7	698396	1	Ring Set (.010 Oversize)				
7	698397	1	Ring Set (.020 Oversize)				
7	698398	1	Ring Set (.030 Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (STD)				
29	697126	1	Rod-Connecting (Standard)				
7	697263	1	Rod-Connecting (.020In Undersize)				
32	692852	1	Screw				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

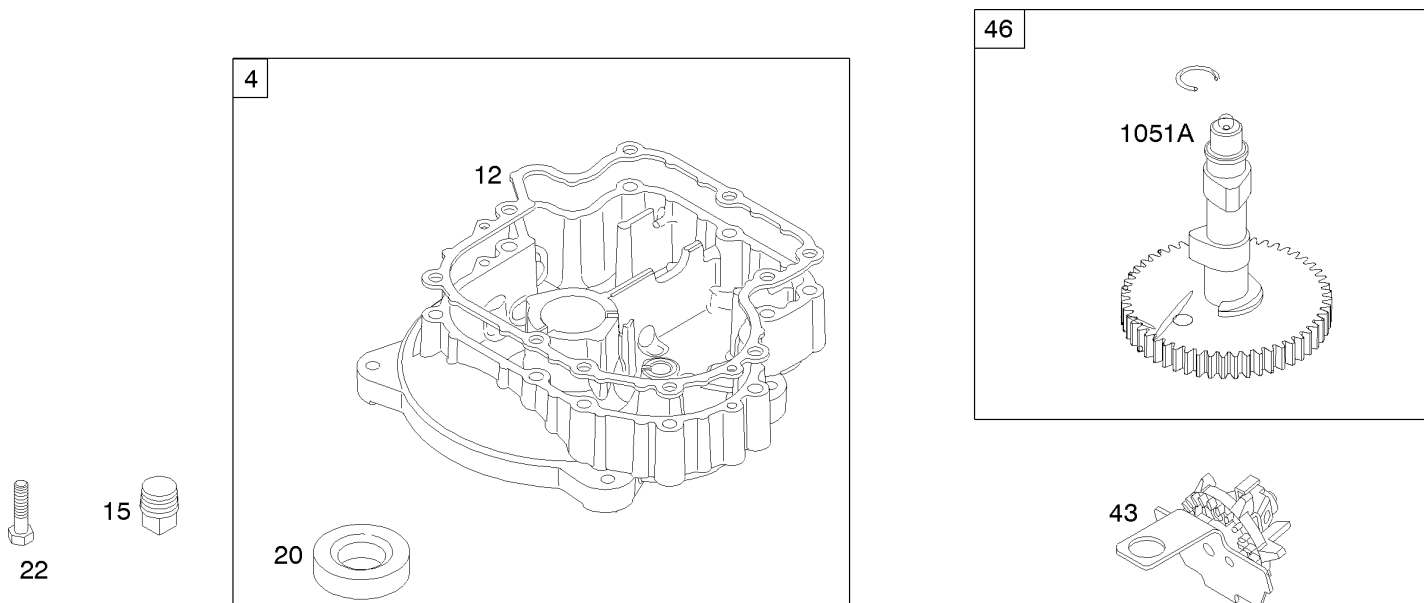


Assemblies include all parts shown in frames.

Crankcase Assembly

Briggs and Stratton 280h07-0166-e1


Ref	Part No.	Qty.	Description				
74	697106	1	Sump-Engine				
3 712	697110	1	Gasket-Crankcase				
715	690946	1	Plug-Drain, Oil				
3 720	690947	1	Seal-Oil				
722	692125	1	Screw				
743	691968	1	Slinger-Governor,Oil				
746	698577	1	Camshaft				
71051A	698802	1	Ring-Retaining				

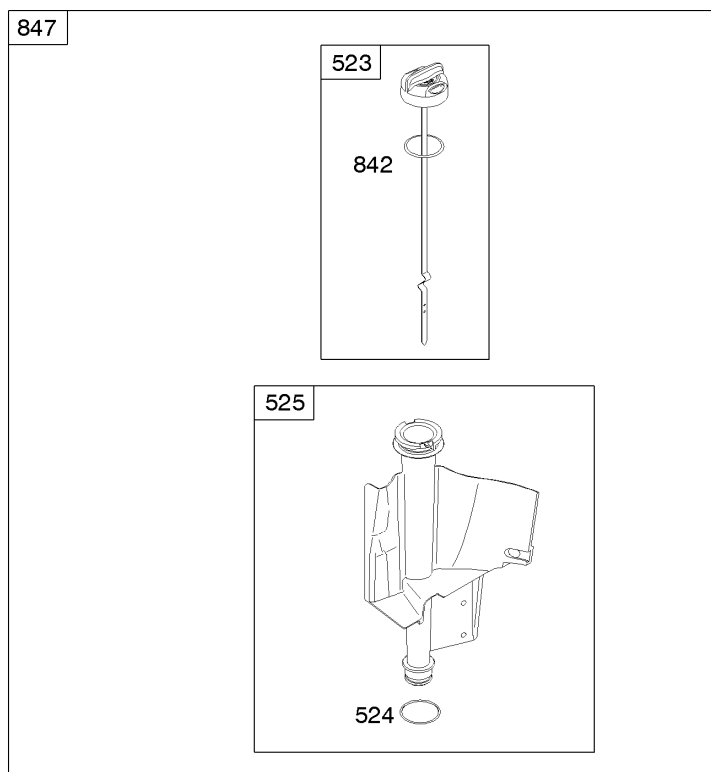

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
7523	697086	1	Dipstick
37524	691032	1	Seal-O Ring
7525	697184	1	Tube-Dipstick
37842	691031	1	Seal-O Ring
7847	697611	1	Dipstick And Tube ASM

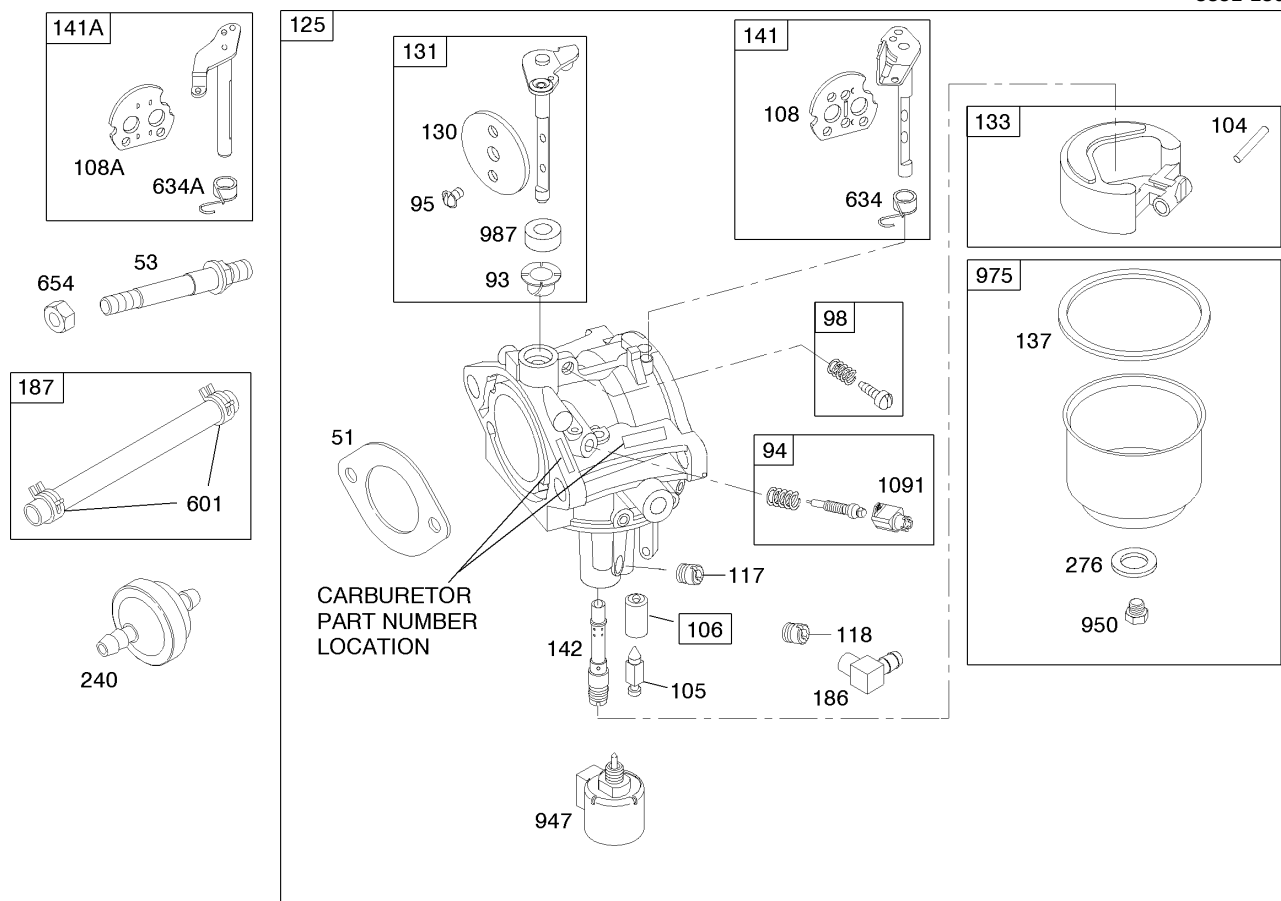


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
5 4 51	692137	1	Gasket-Intake	7 187	697098	1	Line-Fuel
5 6				7 240	394358	1	Filter-Fuel
7 53	690227	1	Stud	5 6 276	692255	1	Washer-Sealing
5 7 93	690602	1	Bushing-Shaft, Throttle	7			
7 94	498030	1	Idle Mixture Kit	7 601	95162	1	Clamp-Hose
5 7 95	691636	1	Screw	5 7 634	690801	1	Spring / Seal ASM
7 98	495800	1	Idle Speed Kit	5 7 634A	690802	1	Spring And Seal ASM
5 7 104	690525	1	Pin-Hinge, Carburetor Float	7 654	690958	1	Nut
5 7 105	231855	1	Valve-Needle, Float	7 947	694393	1	Solenoid-Fuel
5 7 106	690577	1	Seat-Inlet	7 950	691657	1	Screw
7 108	690464	1	Valve-Choke	7 975	495933	1	Bowl-Float
7 108A	692344	1	Valve-Choke	5 7 987	691326	1	Seal-Shaft, Throttle
5 7 117	694352	1	Jet-Main (STD)	7 1091	691333	1	Cap-Limiter
7 118	697228	1	Jet-Main (High Altitude)				
7 125	697190	1	Carburetor				
7 130	691750	1	Valve-Throttle				
7 131	494379	1	Throttle Shaft Kit				
7 133	494381	1	Float-Carburetor				
5 6 137	281165	1	Gasket-Bowl, Float				
7							
7 141	495097	1	Choke Shaft Kit				
7 141A	495931	1	Choke Shaft Kit				
5 7 142	697140	1	Nozzle-Carburetor				
7 186	692317	1	Connector-Hose				

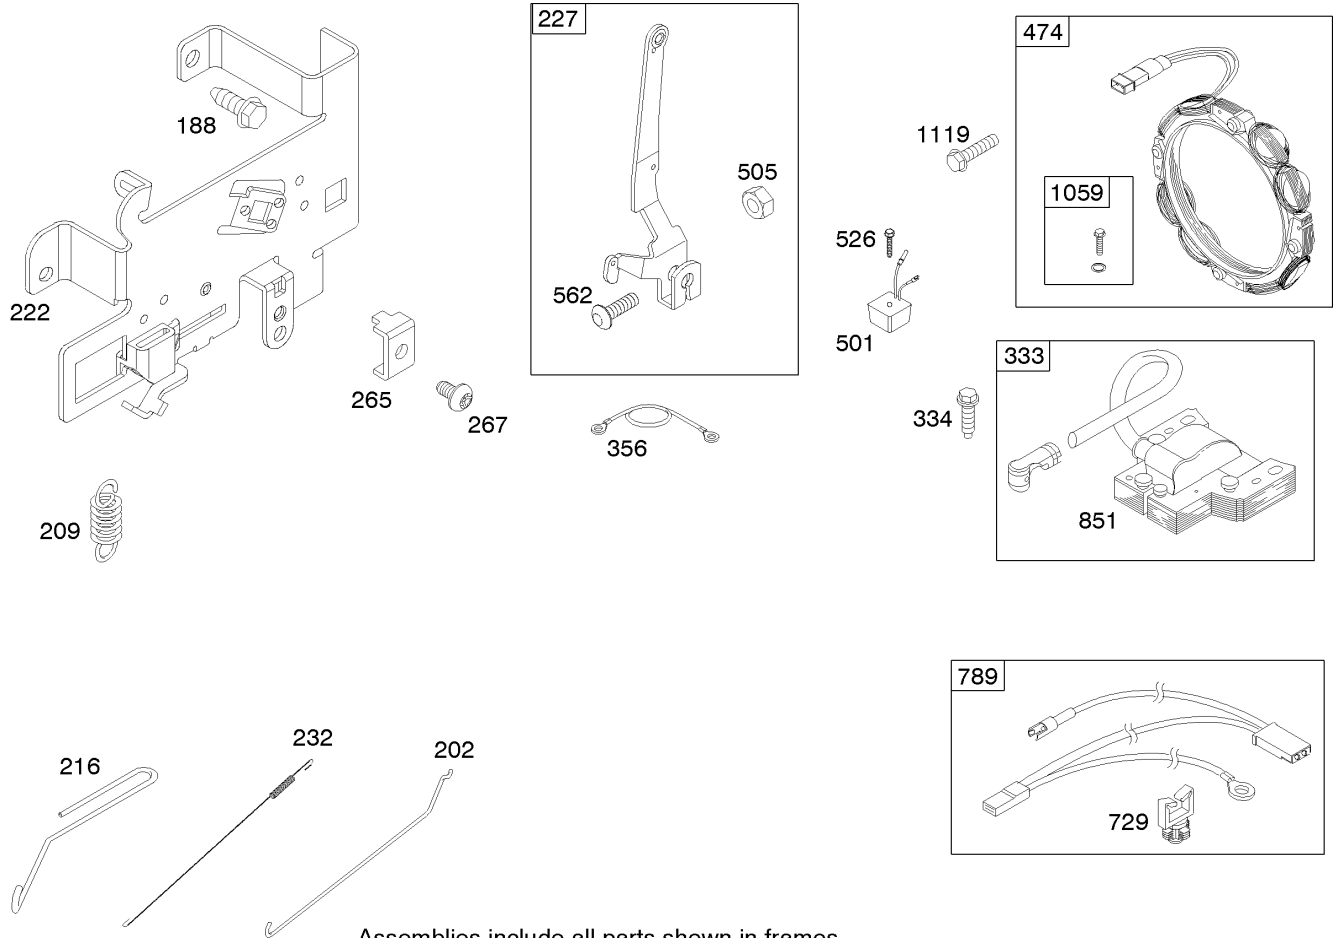


Assemblies include all parts shown in frames.

Governor Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
188	691693	1	Screw
202	691841	1	Link-Governor, Mechanical
209	692208	1	Spring-Governor
216	691840	1	Link-Choke
222	694042	1	Bracket-Control
227	691374	1	Lever-Control, Governor
232	691842	1	Spring-Link, Governor
265	691024	1	Clamp-Casing
267	695134	1	Screw
333	492341	1	Armature-Magneto
334	691061	1	Screw
356	697089	1	Stop-Wire
474	696457	1	Alternator
	696458	1	Alternator
501	691188	1	Regulator
501	691185	1	Regulator
505	691251	1	Nut
526	697088	1	Screw
	697348	1	Screw
562	691119	1	Screw
729	691335	1	Clip-Wire
789	692037	1	Wiring-Harness
851	692424	1	Terminal-Spark Plug
1059	698516	1	Screw And Washer Kit

Ref	Part No.	Qty.	Description
1119	691183	1	Screw

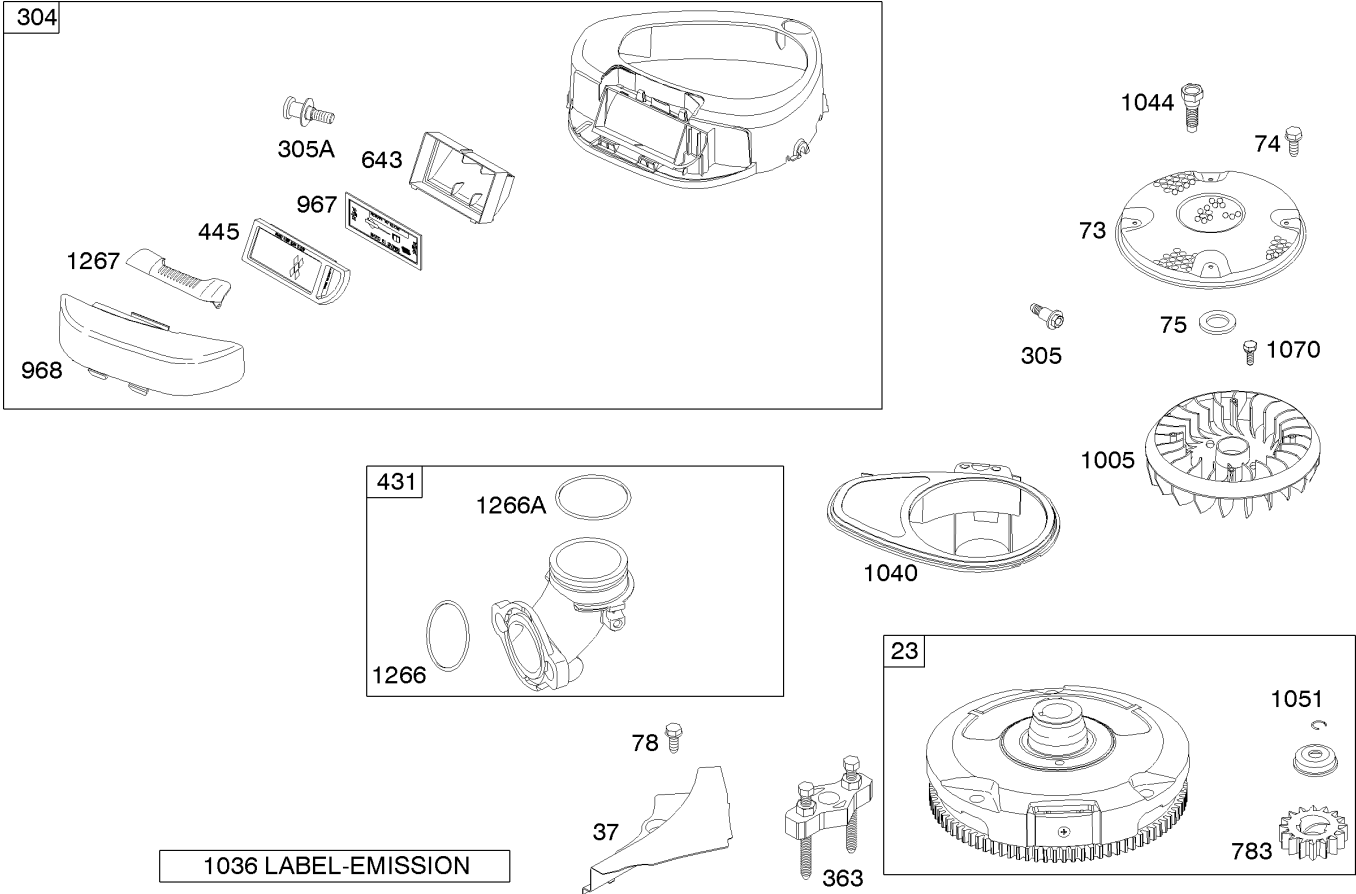


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 280h07-0166-e1



Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
723	693556	1	Flywheel	71267	697419	1	Latch-Housing, Blower
737	697352	1	Guard-Flywheel				
773	697384	1	Screen-Rotating				
774	697897	1	Screw				
775	690582	1	Washer-Flywheel				
778	691003	1	Screw				
7304	698599	1	Housing-Blower				
7305	697102	1	Screw				
7305A	697103	1	Screw				
7363	19203	1	Puller-Flywheel				
7431	697122	1	Elbow-Intake				
7445	698083	1	Filter-Cartridge, Air Cleaner				
7643	698401	1	Retainer-Filter, Air				
7783	693713	1	Gear-Pinion				
7967	697015	1	Filter-Cleaner, Pre				
7968	698403	1	Cover-Cleaner, Air				
71005	697853	1	Fan-Flywheel				
71036	695700	1	Label-Emission				
71040	698368	1	Plate-Trim				
71044	691658	1	Screw-Crankshaft Extension				
71051	691265	1	Ring-Retaining				
71070	690372	1	Screw				
871266	691917	1	Seal-O Ring				
871266A	697123	1	Seal-O Ring				

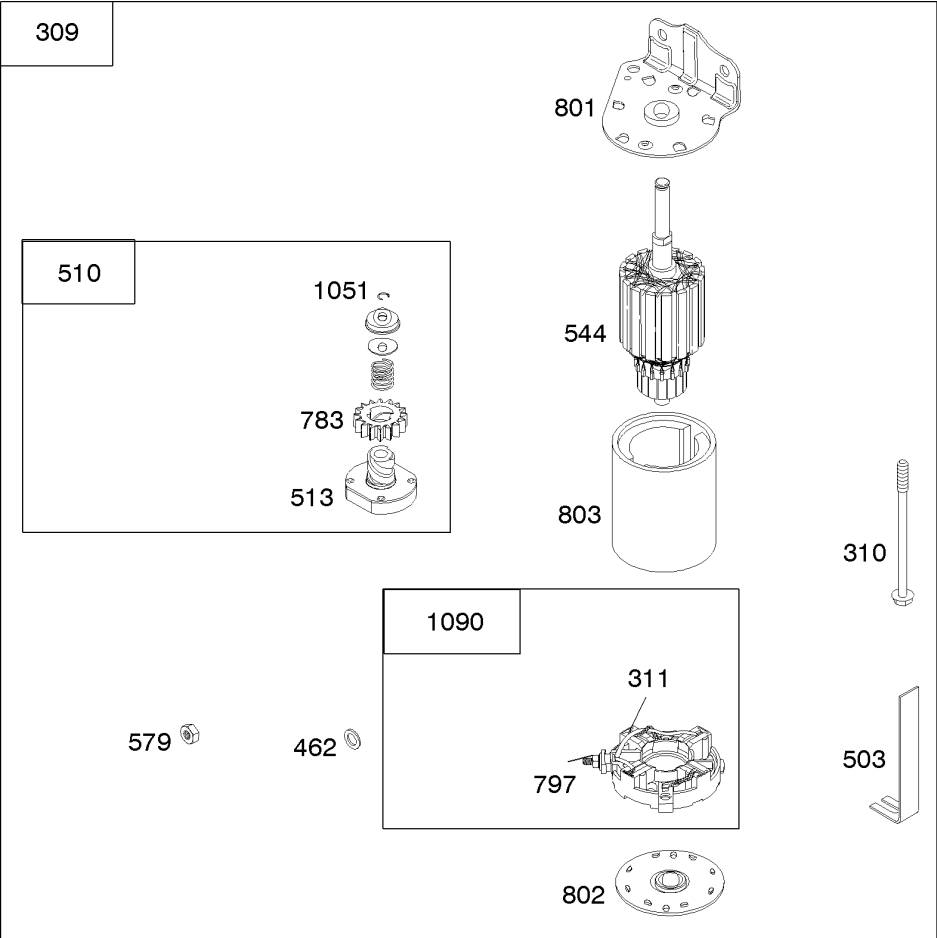

Starter Assembly

Briggs and Stratton 280h07-0166-e1



Ref	Part No.	Qty.	Description				
7309	693551	1	Motor-Starter				
7310	690323	1	Bolt				
7311	497608	1	Brush Set				
7462	691261	1	Washer				
7503	691532	1	Strap-Starter				
7510	693699	1	Drive-Starter				
7513	692024	1	Clutch-Drive				
7544	692034	1	Armature-Starter				
7579	691029	1	Nut				
7697	690372	1	Screw				
7729A	691224	1	Clip-Wire				
7729B	694123	1	Clip-Wire				
7783	693713	1	Gear-Pinion				
7797	693167	1	Nut				
7801	691283	1	Cap-Drive				
7802	691286	1	Cap-End				
7803	693757	1	Housing-Starter				
71051	691265	1	Ring-Retaining				
71090	691293	1	Retainer-Brush				

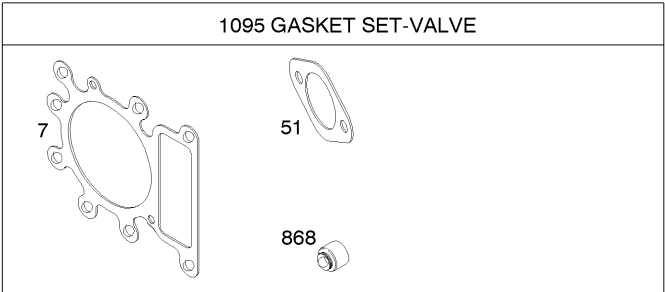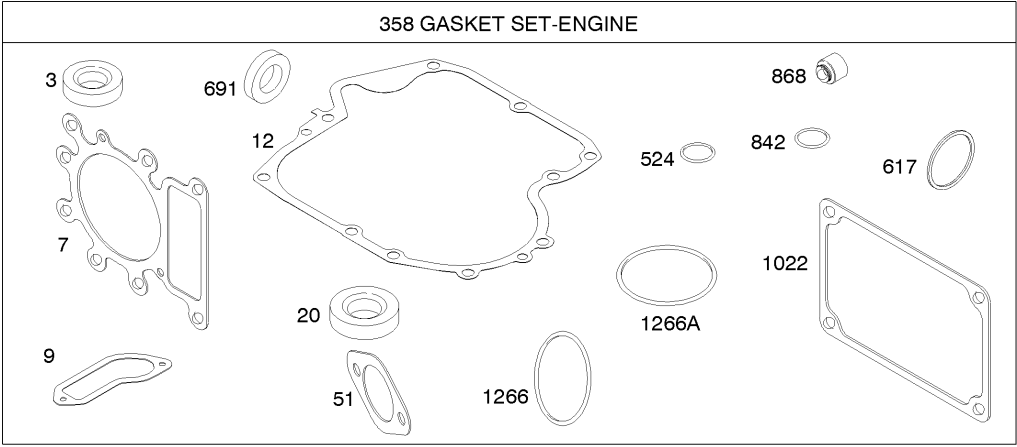

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton Model 280h07-0166-e1

Ref	Part No.	Qty.	Description				
373	391086	1	Seal-Oil				
377	273280	1	Gasket-Head, Cylinder				
379	697109	1	Gasket-Breather				
3712	697110	1	Gasket-Crankcase				
3720	690947	1	Seal-Oil				
3451	692137	1	Gasket-Intake				
36							
7358	697151	1	Engine Gasket Set				
34617	692138	1	Seal-O Ring				
37							
37524	691032	1	Seal-O Ring				
37691	692407	1	Seal-Shaft, Governor				
37842	691031	1	Seal-O Ring				
34868	690968	1	Seal-Valve				
7							
371022	272475	1	Gasket-Cover, Rocker				
71095	691581	1	Valve Gasket Set				
351266	691917	1	Seal-O Ring				
7							
351266A	697123	0	Seal-O Ring				
7							

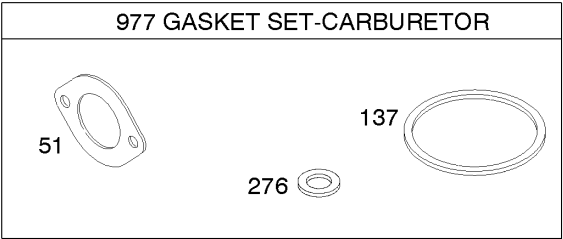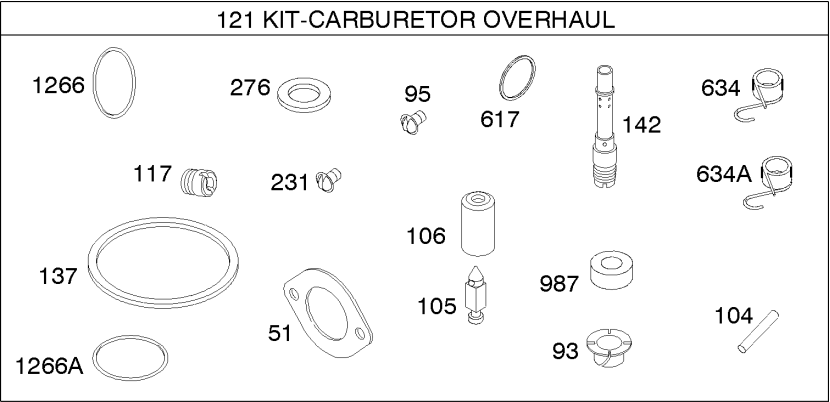

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description				
3451 56	692137	1	Gasket-Intake				
5793	690602	1	Bushing-Shaft, Throttle				
5795	691636	1	Screw				
57104	690525	1	Pin-Hinge, Carburetor Float				
57105	231855	1	Valve-Needle, Float				
57106	690577	1	Seat-Inlet				
57117	694352	1	Jet-Main (STD)				
7121	697154	1	Carburetor Overhaul Kit				
56137 7	281165	1	Gasket-Bowl, Float				
57142	697140	1	Nozzle-Carburetor				
57231	691636	1	Screw				
56276 7	692255	1	Washer-Sealing				
55617 7	692138	1	Seal-O Ring				
57634	690801	1	Spring / Seal ASM				
57634A	690802	1	Spring And Seal ASM				
7977	690192	1	Carburetor Gasket Set				
57987	691326	0	Seal-Shaft, Throttle				
551266 7	691917	0	Seal-O Ring				
551266A 7	697123	1	Seal-O Ring				

NOTES



NEW HOLLAND ..