 




MODEL NO. 20437-390001 -
490001 & UP

PARTS
CATALOG

21" RECYCLER[®]
Mower

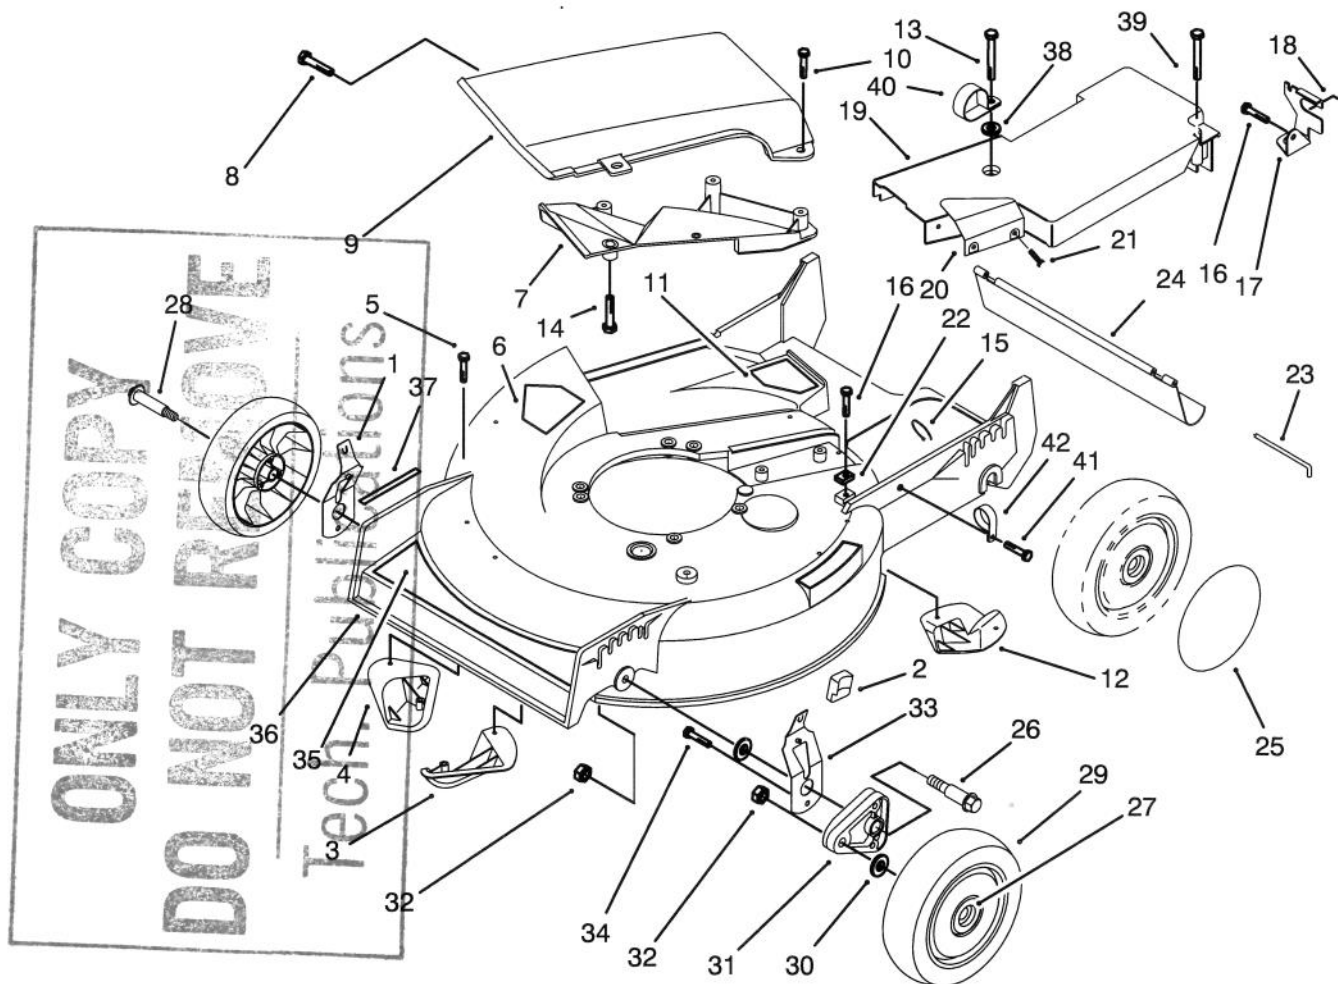


C-1392

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0561	Spring Arm Ass'y - R.H.	1
2	25-7740	Knob - Spring Arm	2
3	92-1720	Plate - Kicker Rt. Front	1
4	92-1730	Plate - Kicker Rt. Rear	1
5	32144-111	Screw - Pan Hd.	6
6	39-5770	Decal - Danger	1
7		Deflector - Recycler	1
8	46-6810	Screw - Hex Washer Hd. Thread Forming	1
9	14-4069	Cover Assembly (Incl. Ref. #7 & 14)	1
10	46-6811	Screw w/Washer	3
11	82-8450	Decal - Danger	1
12	92-1750	Plate - Kicker Left Rear	1
13	37-7262	Screw - Special	1
14		Screw	5
15	3290-378	Tie - Cable	1


Ref. No.	Part No.	Description	No. Used
16	32144-70	Screw - Hex Washer Hd. Thread Forming	2
17	82-5680	Bracket - Traction Adj.	1
18	46-7030	Retainer - Cable	1
19	52-7406	Belt Cover Assembly (Incl. Ref. #20 & 21)	1
20	77-0280	Shield - Heat	1
21	3295-35	Rivet	2
22	62-3720	Clamp - Cable	1
23	33-3208	Rod - Shield	1
24	44-0580	Shield - Rear	1
25	91-2253	Cover - Wheel	1
26	66-0560	Screw - Pivot	2
27	27-6250	Bushing	4
28	27-6232	Bolt - Wheel	2
29	14-9989	Wheel & Tire Assembly (Incl. Ref. #27)	2

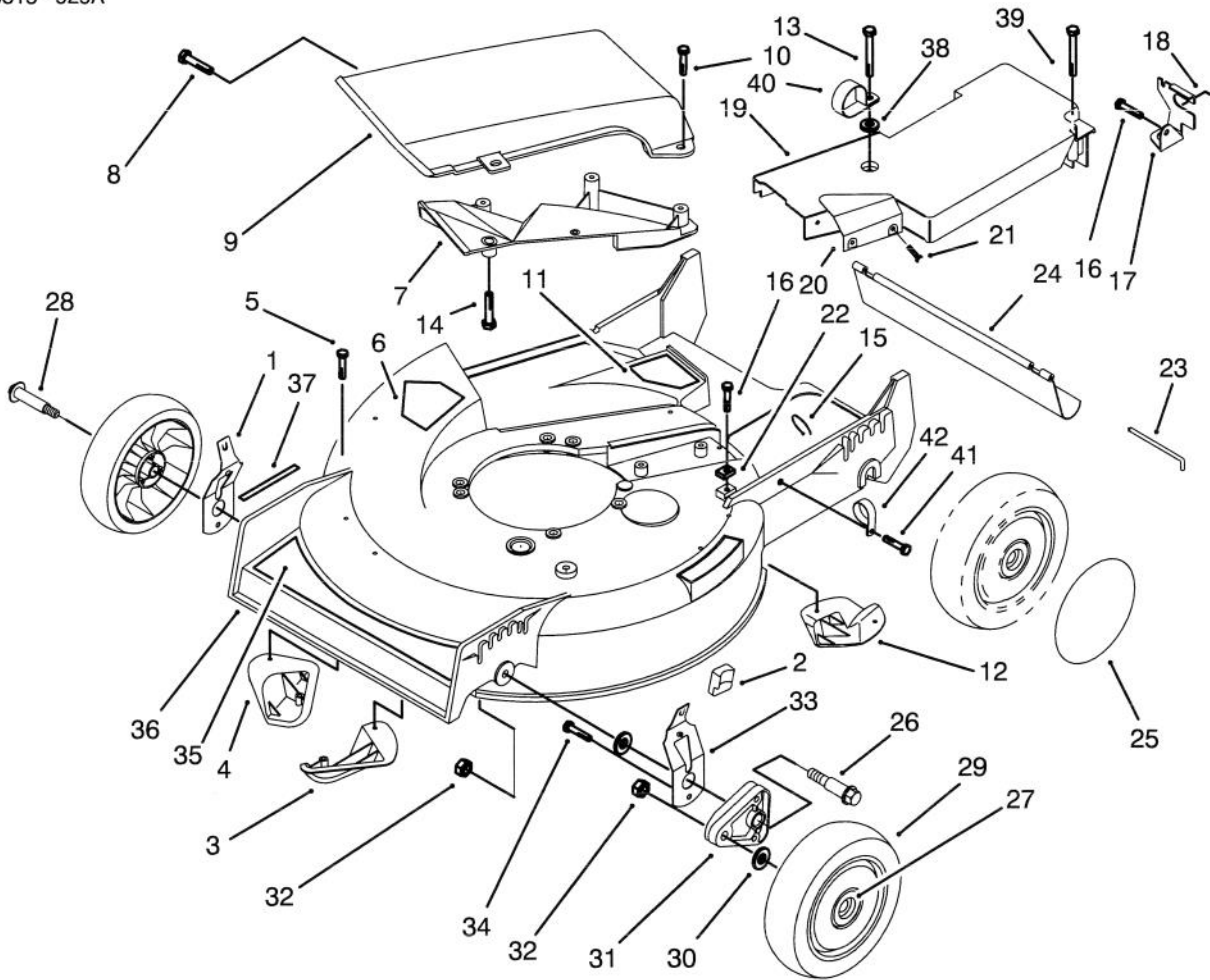 

C-1392

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
30	40-1940	Washer - Wheel	4	37	92-2279	Decal - H.O.C.	4
31	66-0580-03	Arm - Pivot	2	38	3-5792	Washer	1
32	3296-6	Nut - Lock	4	39	37-7260	Screw - Special	1
33	71-0571	Spring Arm Ass'y - L.H.	1	40	2412-87	Clamp - Cable	1
34	32144-85	Screw - Hex Hd. Cap	2	41	32144-112	Screw - Hex Washer Hd. Self Tapping	1
35	92-2281	Decal - Deck	1	42	2412-83	R-Clamp	1
36	16-1599	Housing Assembly (Incl. Ref. #3, 4, 5, 6, 11, 12, & 37 Pg.1-2) (Incl. Ref. # 6-7 Pg.3)	1				

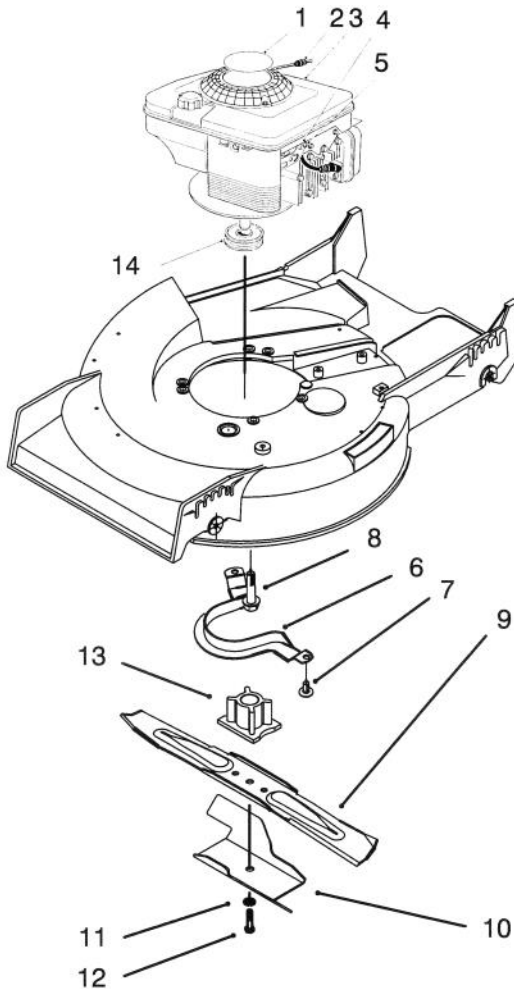 


C-1393

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2282	Decal - Engine	1
2	2210-316	Stop - Rope	1
3		Engine	1
†4	2210-249	Clamp - Casing	1
†5	86-7990	Screw - Clamp	1
6	66-0570	Guide - Belt	1
7	32144-70	Screw - Thread Forming	2

Ref. No.	Part No.	Description	No. Used
8	32144-102	Screw - Thread Forming	3
9	14-9419	Blade - 21"	1
10	92-1599	Accelerator	1
11	3253-22	Washer - Lock	1
12	26-0670	Screw - Blade	1
13	62-7540	Retainer - Blade	1
14	62-7550	Pulley - Driver	1

 †Supplied with Engine

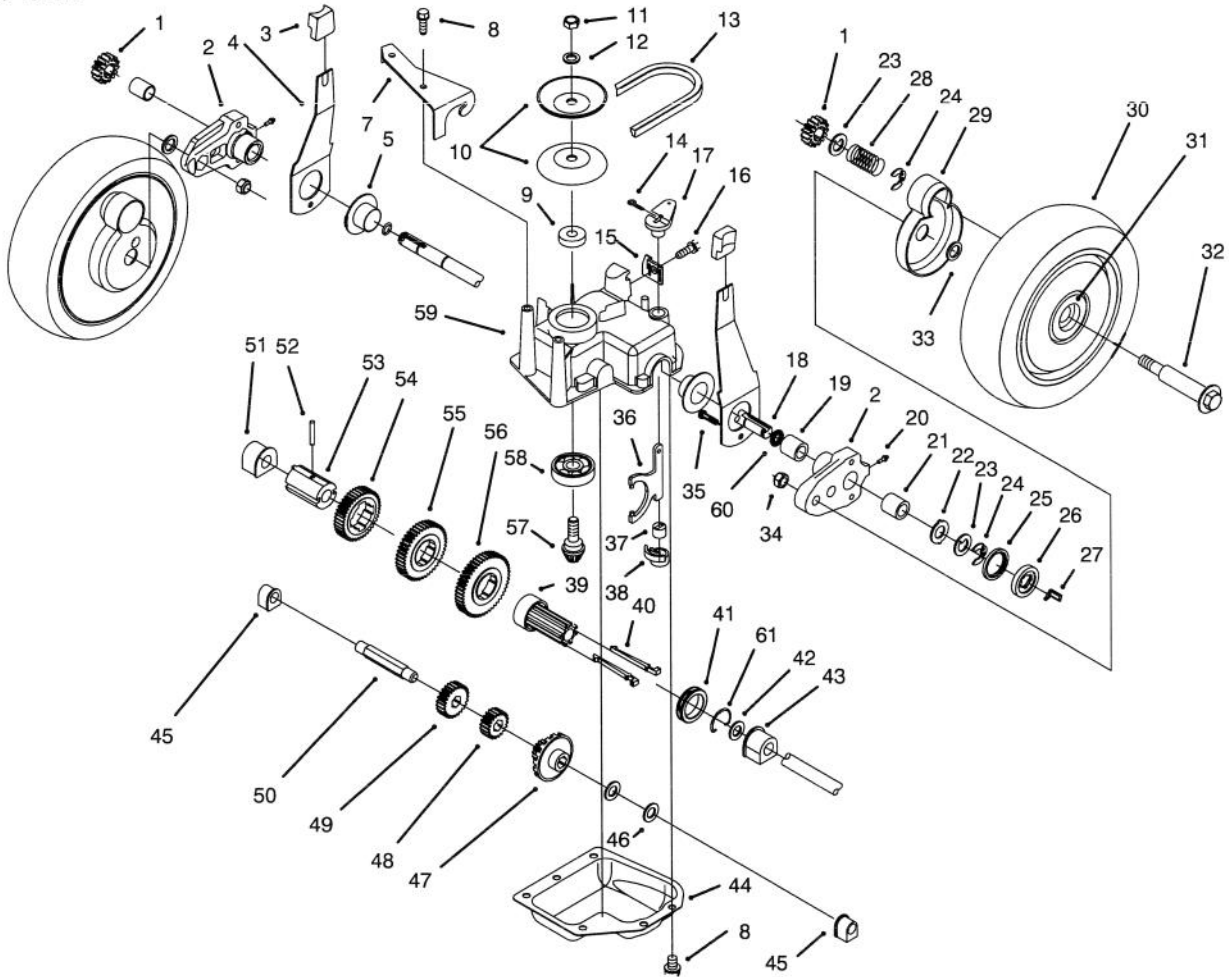


C-1333

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2
2	63-8701-03	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2
3	25-7740	Knob - Arm	2
4	63-8721	Spring Arm Assembly	2
5	42-3520	End Cap	2
7	62-4320	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Locknut	1
12	3256-24	Washer - Flat	1
13	62-3900	V-Belt	1
14	3272-10	Pin - Cotter	1
15	82-8780	Cable - Retainer	1
16	32144-70	Screw - Thread Forming	1
17	60-8821	Lever - Shift	1
18	65-4770	Shaft - Output	1
19	70-9760	Bushing	2
20	302-56	Fitting - Grease	2
21	48-2060	Needle Bearing	2
22	65-4730	Thrust Washer	2
23	65-4740	Thrust Washer	4
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2

Ref. No.	Part No.	Description	No. Used
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocker L.H.	1
*	66-6040	Key - Rocker R.H.	1
28	65-4720	Spring	2
29	74-1660	Cover - Wheel	2
30	16-0029	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
31	27-6250	Bushing - Wheel	4
32	27-6232	Wheel Bolt	2
33	74-1670	Spacer - Wheel Cover	2
34	3296-6	Locknut	2
35	32144-85	Screw	2
36	60-8870	Yoke - Shift	1
37	29-9570	Bushing - Yoke	1
38	60-8810	Retainer - Shift Fork	1
39	76-0780	Sleeve - Shift Key	1
40	76-0760	Key - Shift	2
41	76-0770	Collar - Shift	1
42	36-4780	Washer - Thrust	1
43	60-8770	Bushing - Output Shaft	1
44	60-8730	Cover - Gear Case	1
45	60-8750	Bushing - Int. Shaft	2
46	36-4791	Washer - Thrust	2
47	55-3760	Gear - Pinion 15 Tooth	1
48	55-3780	Gear - Pinion 20 Tooth	1

 *Not Illustrated

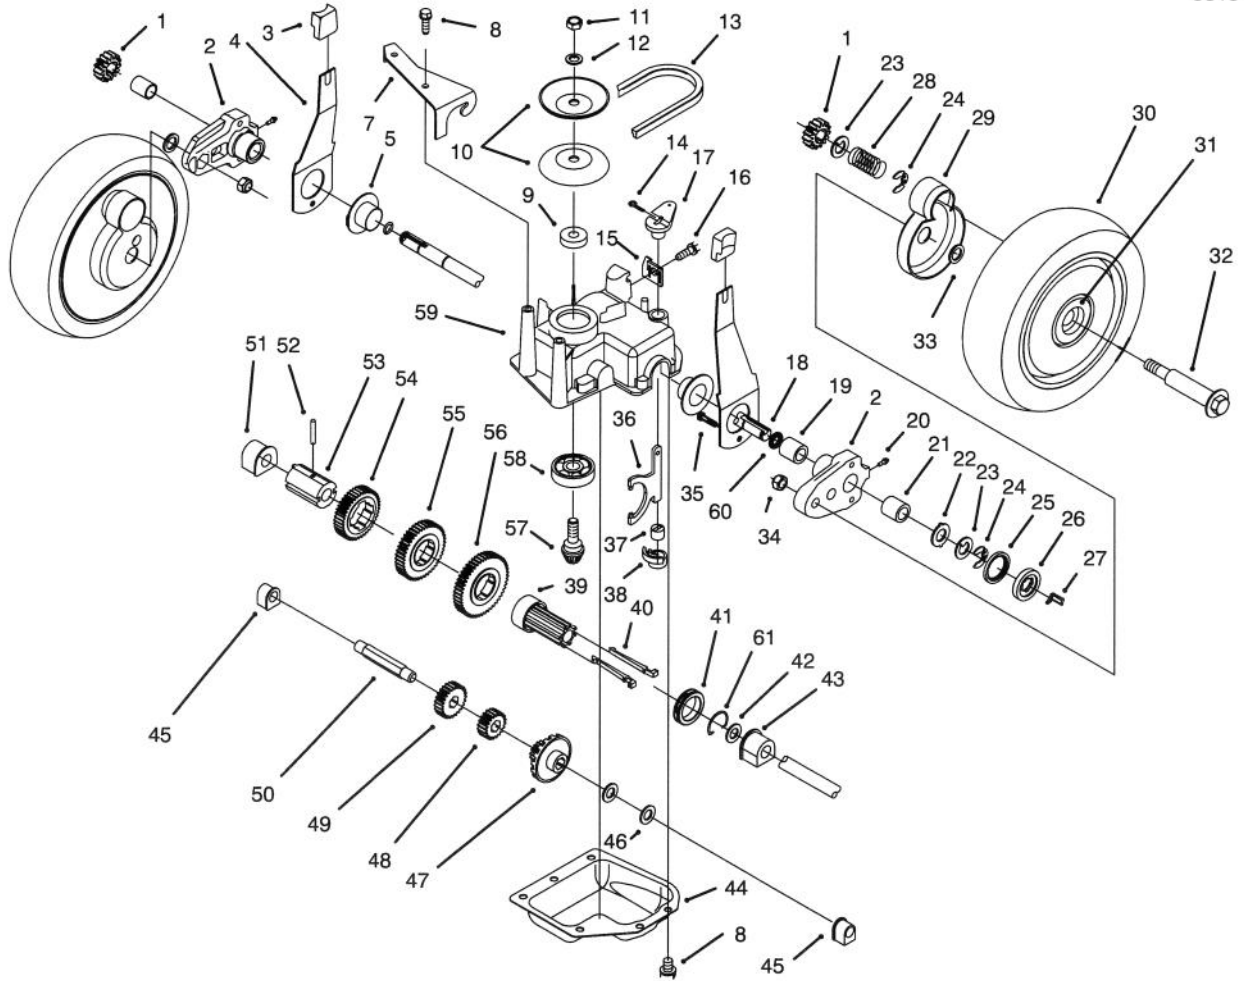


C-1333

GEAR CASE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear - Pinion	1
50	60-8800	Shaft - Intermediate	1
51	60-8850	Bushing - Output Shaft	1
52	32121-120	Pin - Coil	1
53	60-8790	Sleeve - Gear	1
54	55-3810	Gear - 39 Tooth 3rd Gear	1
55	55-3790	Gear - 44 Tooth 2nd Gear	1

Ref. No.	Part No.	Description	No. Used
56	55-3770	Gear - 49 Tooth 1st Gear	1
57	60-8890	Pinion - Bevel	1
58	38-7820	Bearing - Ball	1
59	60-8710	Gear Case - Upper	1
60	237-153	O-Ring	2
61	65-5250	Clip - Spring	1
*	62-6673	Gear Case Assembly	1

 *Not Illustrated

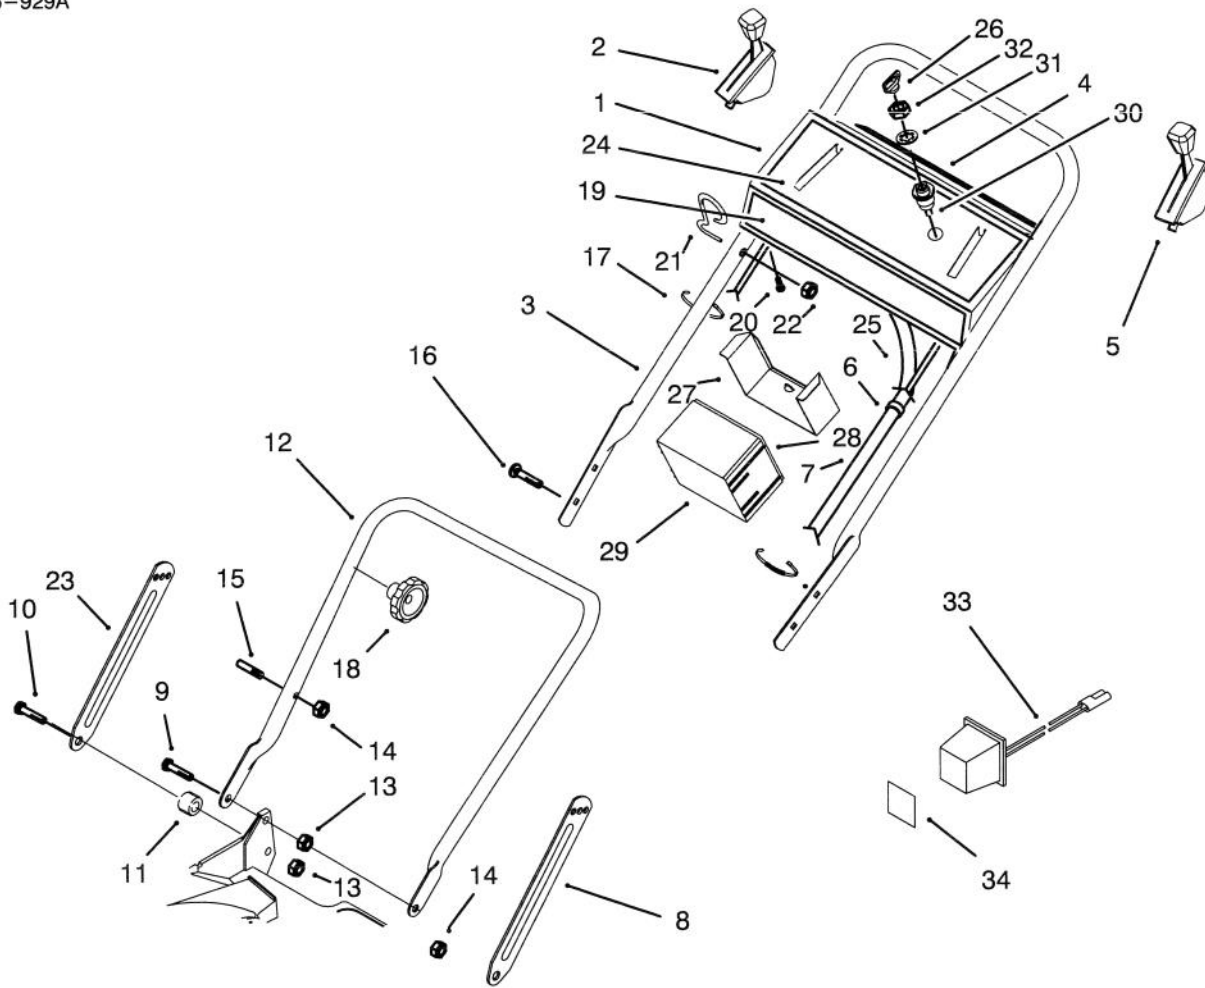


C-1394

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	16-1649	Panel - Control (Incl. Ref. #4, 19, & 24)	1	16	92-2260	Screw - Handle	2
2	76-2712	Control - Ground Speed (Bend Type #1) (Sheath Lg. 41 3/4") (Wire Lg. 2 1/2")	1	17	3290-378	Tie - Cable	4
3	92-2278	Handle - Upper	1	18	19-4050	Knob - Handle Release	2
4	63-9060	Decal - Danger	1	19	92-3146	Decal - Panel Front	1
5	74-3894	Control - Throttle (Bend Type #3) (Sheath Lg. 60") (Wire Lg. 2 1/8")	1	20	32144-115	Screw - Self Tap Slotted	5
6	2412-50	Clip Convoluted Tubing	4	21	86-9671	Guide - Rope	1
7	46-6440	Cover - Control Cables	1	22	3296-73	Nut - Lock	1
8	84-8361	Latch - Handle L.H.	1	23	84-8401	Latch - Handle R.H.	1
9	27-7211	Screw - Shoulder	2	24	92-8658	Decal - Instructions	1
10	27-7210	Screw - Shoulder	2	25	80-3671	Harness - Wire	1
11	3-3287	Spacer	2	26	63-8360	Key - Ignition	1
12	82-5531-05	Lower Handle Assembly	1	27	55-8180	Retainer - Battery	1
13	3296-72	Nut - Lock	3	28	92-8659	Decal - Charging Instructions	1
14	3296-47	Nut - Lock	3	29	55-7520	Battery Assembly	1
†15	49-2750	Pin - Handle	2	30	46-5780	Switch - Starter (Incl. Ref. #31 & 32)	1
				31	3254-5	Washer - Lock	1
				32	218-461	Nut - Hex	1
				33	92-1743	Charger - Battery	1
				34	92-1709	Decal - Caution	1

 †Service Replacement Part

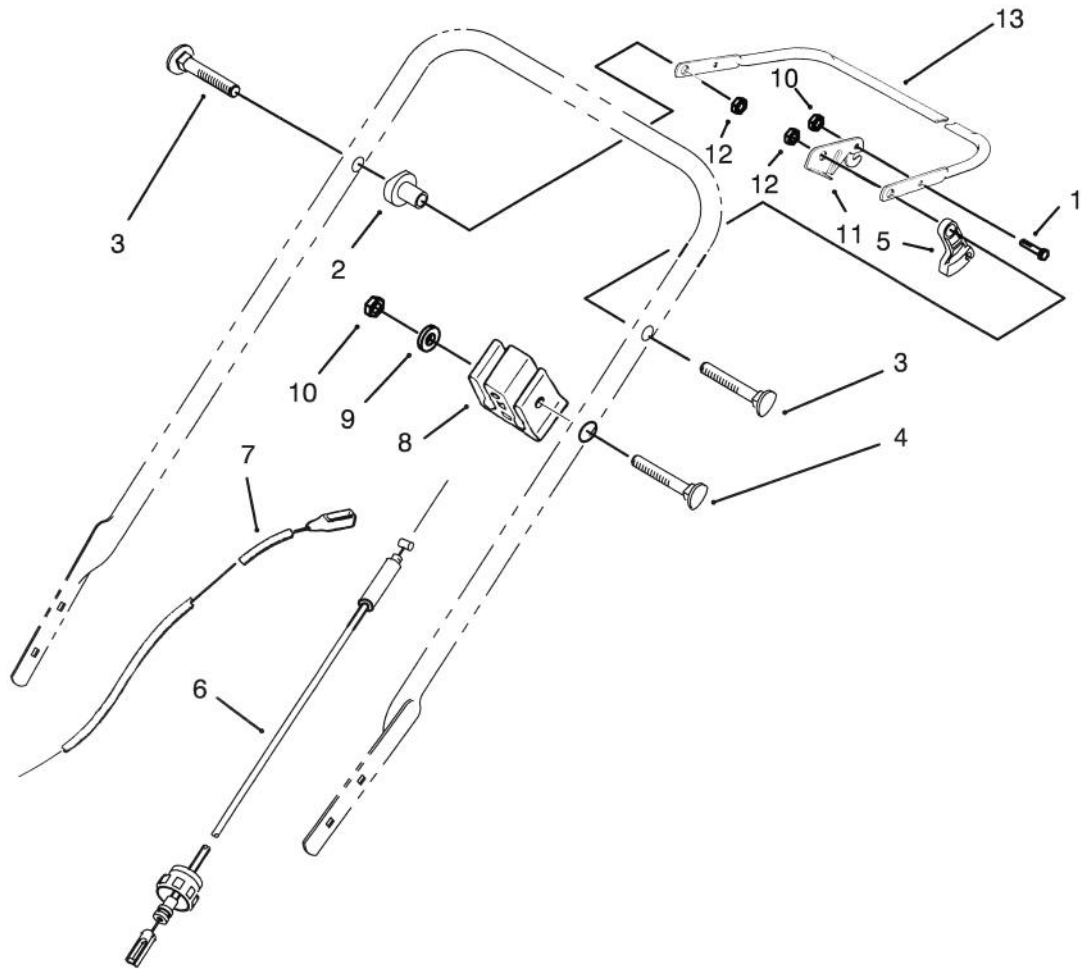


C-1395

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-39	Screw - Hex Hd. Cap	1
2	49-1630	Support - Spacer	2
3	92-2260	Screw - Handle	2
4	92-2269	Screw - Handle	1
5	46-5520	Lever - Traction	1
6	46-5481	Cable - Traction	1
7	76-4330	Cable - Brake	1

Ref. No.	Part No.	Description	No. Used
8	46-6980	Support - Cable	1
9	3256-1	Washer - Flat	1
10	3296-73	Nut - Lock	2
11	66-5351	Lever - Control	1
12	3296-74	Nut - Lock	2
13	71-3080	Bar - Control	1

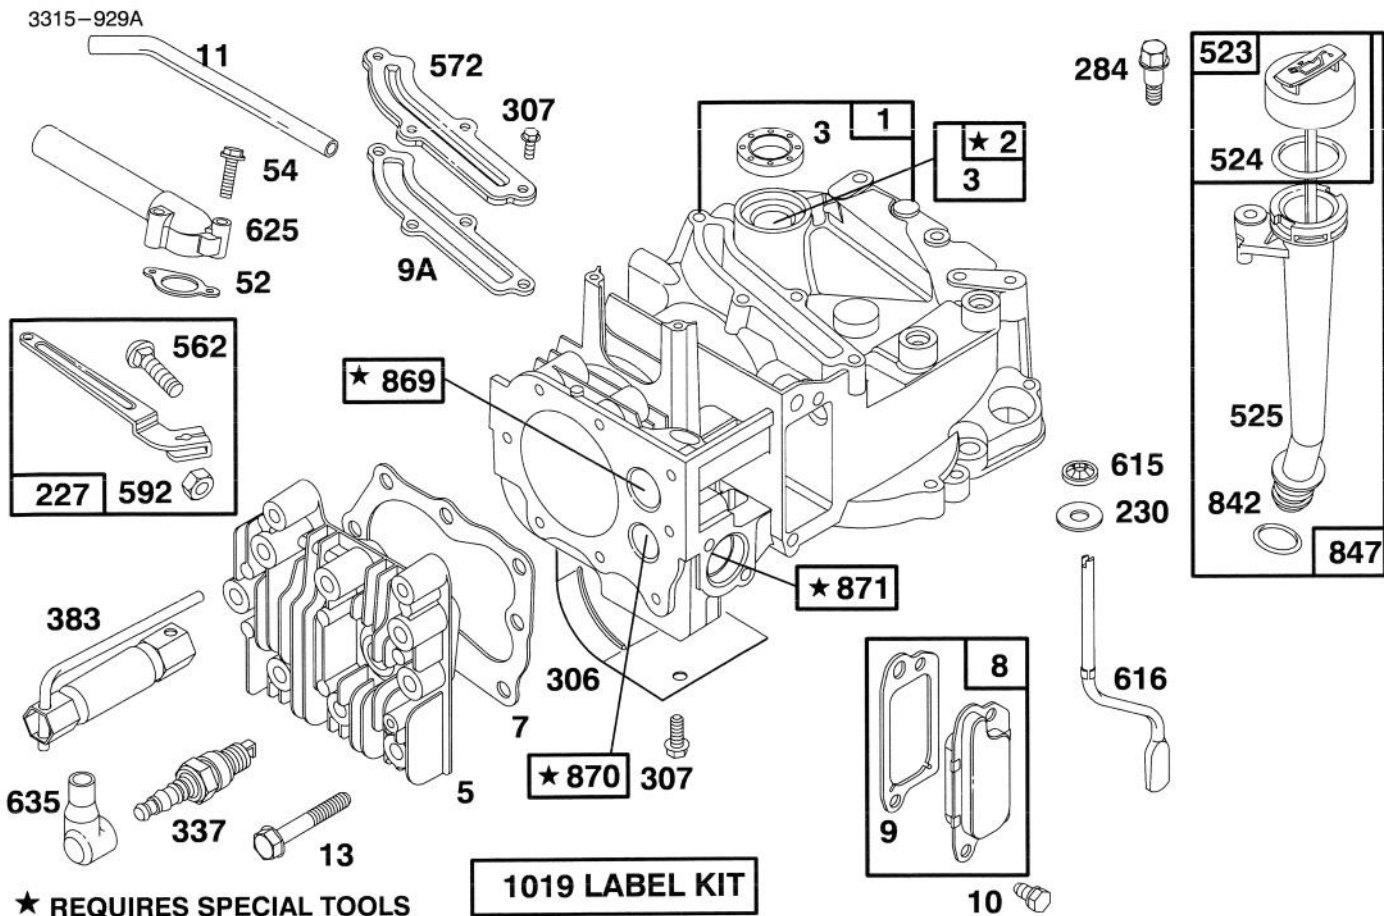 


ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing-Cylinder	1
★3	299819	Seal-Oil	1
5	213861	Head-Cylinder	1
★7	272200	Gasket-Cylinder Head	1
8	495786	Breather-Valve Chamber	1
★9	271481	Gasket-Valve Cover	1
★9A	272238	Gasket-Baffle Plate	1
10	94650	Screw-Breather Mtg.	1
11	231685	Tube-Breather	1
13	94547	Screw-Cylinder Head	1
★52	272199	Gasket-Intake Elbow	1
54	94526	Screw-Intake Elbow Mtg.	1
227	492349	Lever Assembly-Gov.	1
230	67072	Washer-Gov. Crank	1
284	94511	Screw-Hex. Head	1
306	224324	Shield-Cylinder	1
307	94515	Screw-Hex. Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick-Oil Filler	1
★524	280393	Seal-Filler Tube	1
525	495265	Tube-Oil Filler	1
562	92613	Bolt-Governor Lever	1
572	224328	Baffle-Cylinder	1
592	231082	Nut-Hex.	1
615	94474	Pushnut (Governor Crank)	1
616	262578	Crank-Governor	1
625	492717	Tube-Fuel Intake	1
635	66538	Elbow-Spark Plug	1
★842	280966	Seal-O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat-Intake Valve	1
870	213513	Seat-Exhaust Valve	1
871	262001	Guide-Exhaust Valve	1
1019	494256	Note: 63709 Guide-Intake Valve Label Kit	1

 ★ Included in Gasket Set-Part No. 493263.

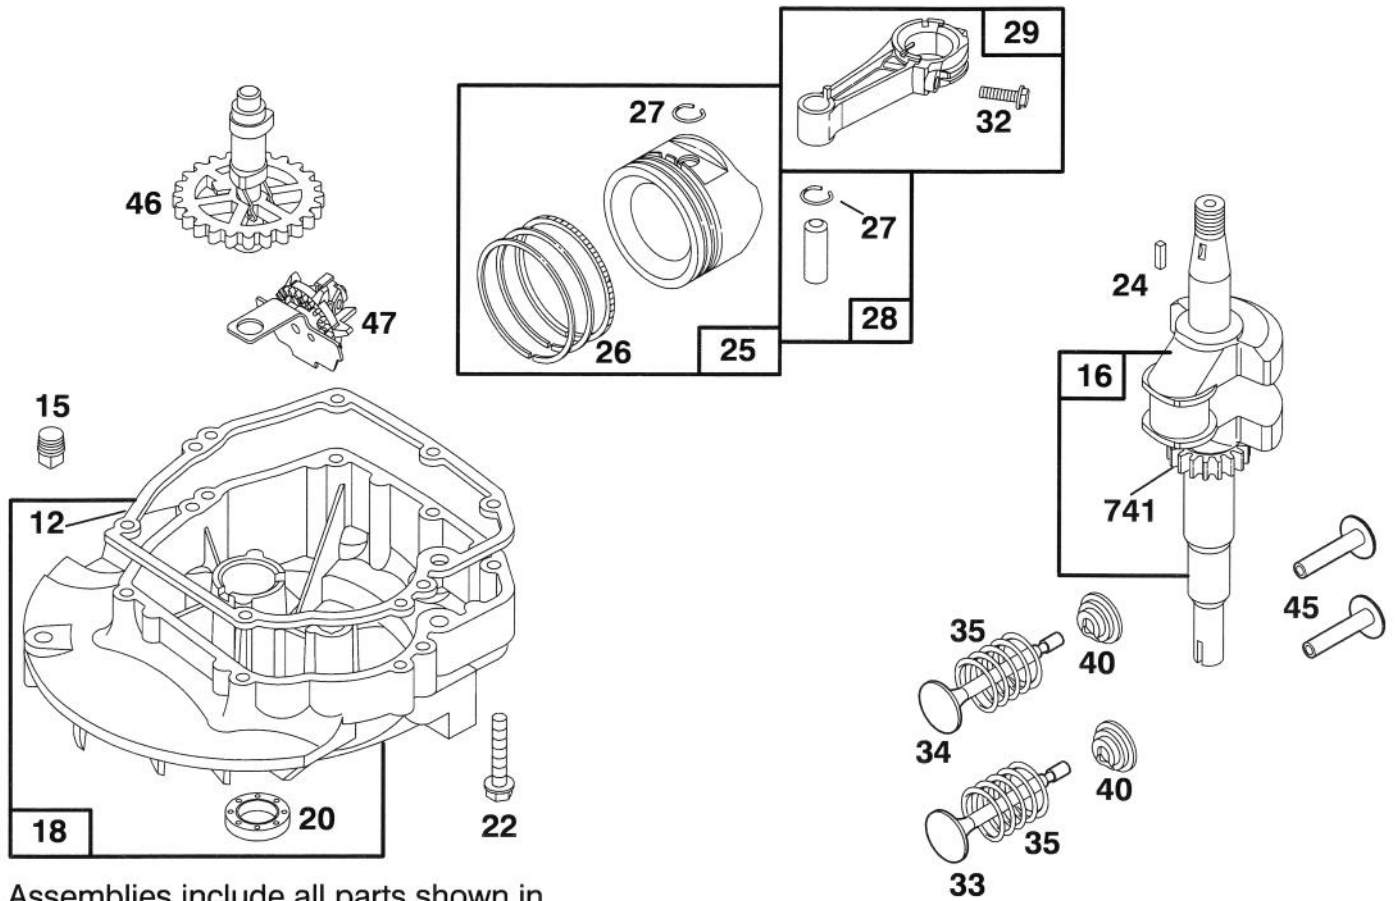


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket—Crankcase	1
15	94720	Plug—Oil Drain	1
16	494546	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump—Engine	1
★20	399781	Seal—Oil	1
22	94220	Screw—Sump Mtg. Sem Mtg.	1
		Note: 94612 Screw—Sump Mtg. (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key—Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set—Piston (Standard)	1
	493388	Ring Set—Piston (.010" O.S.)	1
	493389	Ring Set—Piston (.020" O.S.)	1
	493390	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock—Piston Pin	1
28	298909	Pin Assembly—Piston (Standard)	1
	298908	Pin Assembly—Piston (.005" O.S.)	1
29	490566	Rod Assembly— Connecting Rod	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing— Order No. 490743.	1
32	94405	Screw—Connecting Rod	1
33	262651	Valve—Exhaust	1
34	262652	Valve—Intake	1
35	262224	Spring—Valve	1
40	93312	Retainer—Valve Spring	1
45	262204	Tappet—Valve	1
46	492830	Gear—Cam	1
47	493737	Oil Slinger Gear and Bracket	1
741	262598	Gear—Timing	1

 ★ Included in Gasket Set—Part No. 493263.

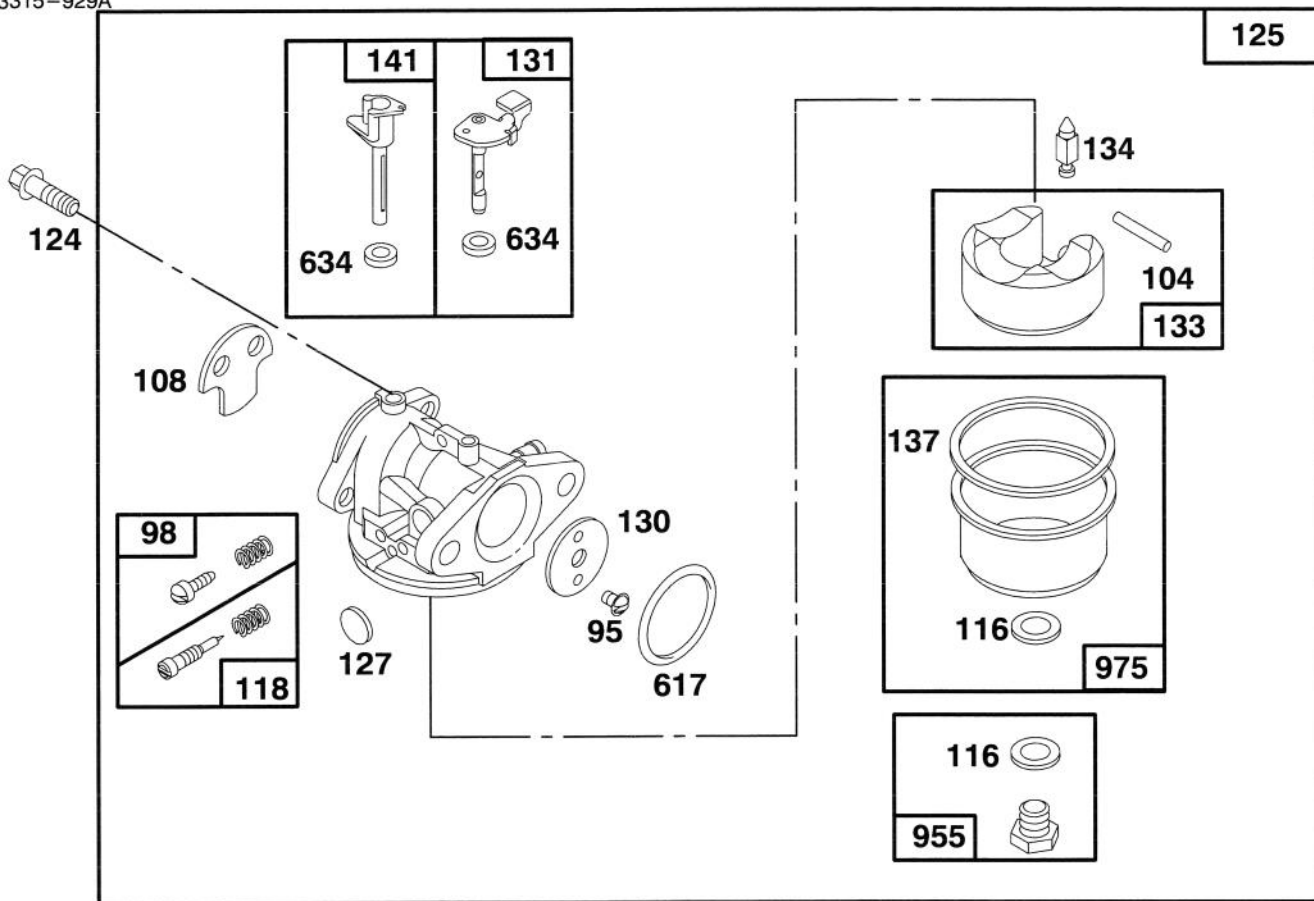

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw—Throttle Valve Mtg.	1
98	398185	Screw—Idle Adjustment	1
●104	231371	Pin—Float Hinge	1
108	223471	Valve—Choke	1
◆◆116		Gasket—Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring— Needle	1
124	94525	Screw—Carburetor Mtg.	1
125	494217	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only).	1
130	223470	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	493267	Shaft and Lever—Throttle	1
133	398187	Float Assy.—Carburetor	1
●134	398188	Valve—Inlet (Includes Seat)	1
◆◆137		Gasket—Bowl (Sold in Kit Only).	1
141	494218	Shaft—Choke	1
◆◆617	270344	Seal—Fuel Intake Tube	1
◆◆634		Washer—Shaft (Sold in Kit Only).	1
955	493869	Screw—Bowl Mtg.	1
975	493640	Bowl Assy.—Carburetor	1

● Included in Carburetor Overhaul Kit—Part No. 493762.

 ◆ Included in Carburetor Gasket Set—Part No. 490937.

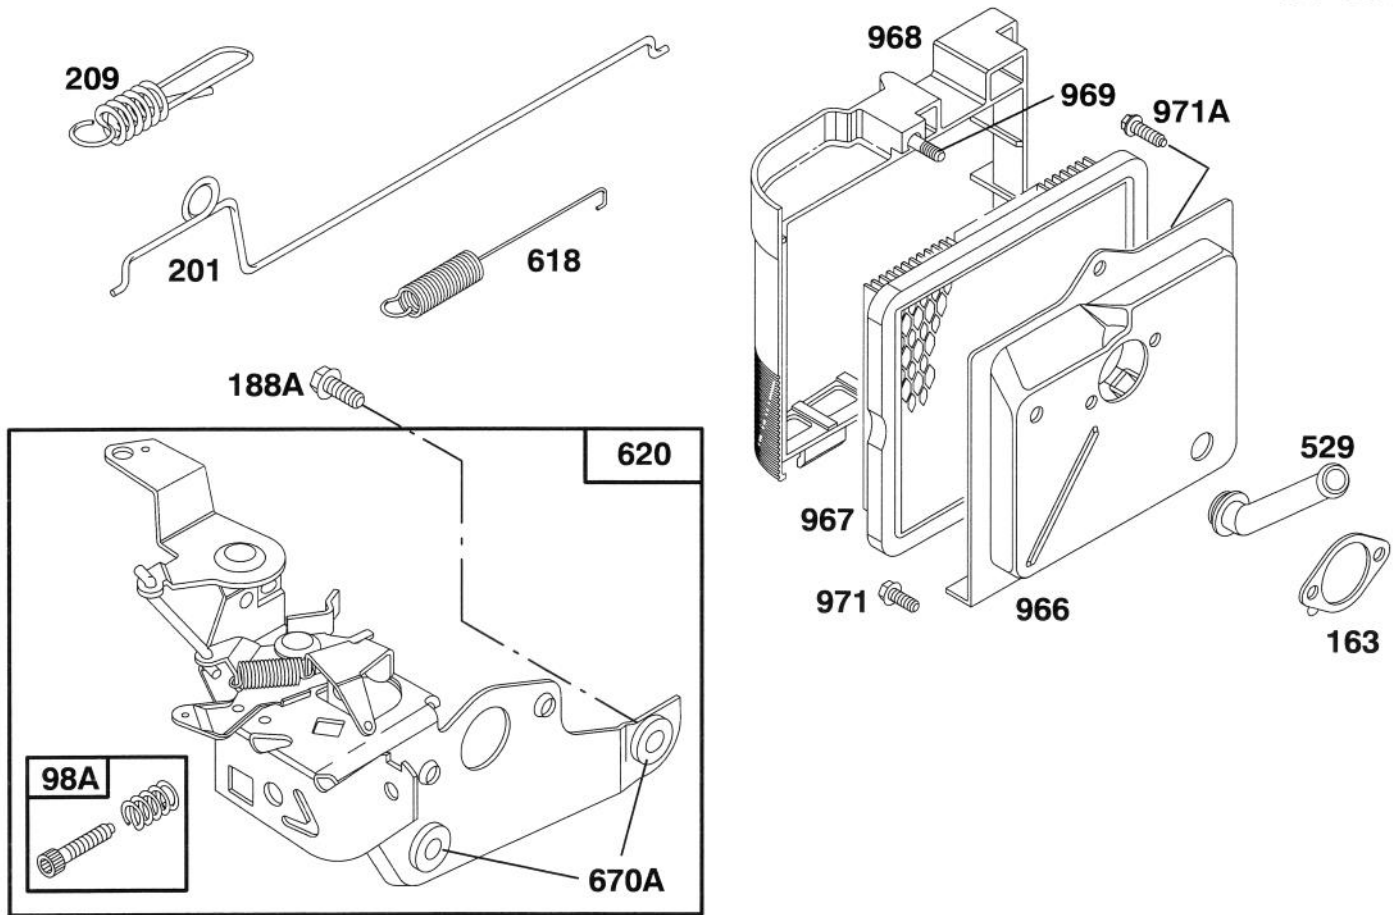


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw Assy.—Speed Adjust	1
★163	272296	Gasket—Air Cleaner	1
188A	94644	Screw—Hex. Head	1
201	262579	Link—Governor	1
209	262661	Spring—Governor	1
529	280943	Grommet—Breather	1
618	262749	Spring—Choke Return	1
620	493894	Bracket Assembly—Carburetor Control	1

Ref. No.	Part No.	Description	No. Used
670A	493823	Spacer—Carburetor Bracket	1
966	492363	Base—Air Cleaner	1
967	491588	Filter—Air	1
968	280937	Cover—Air Cleaner	1
969	94120	Screw—Cover Mtg.	1
971	94269	Screw—Air Cleaner	1
971A	94121	Screw—Base to Carb.	1

 ★ Included in Gasket Set—Part No. 493263.

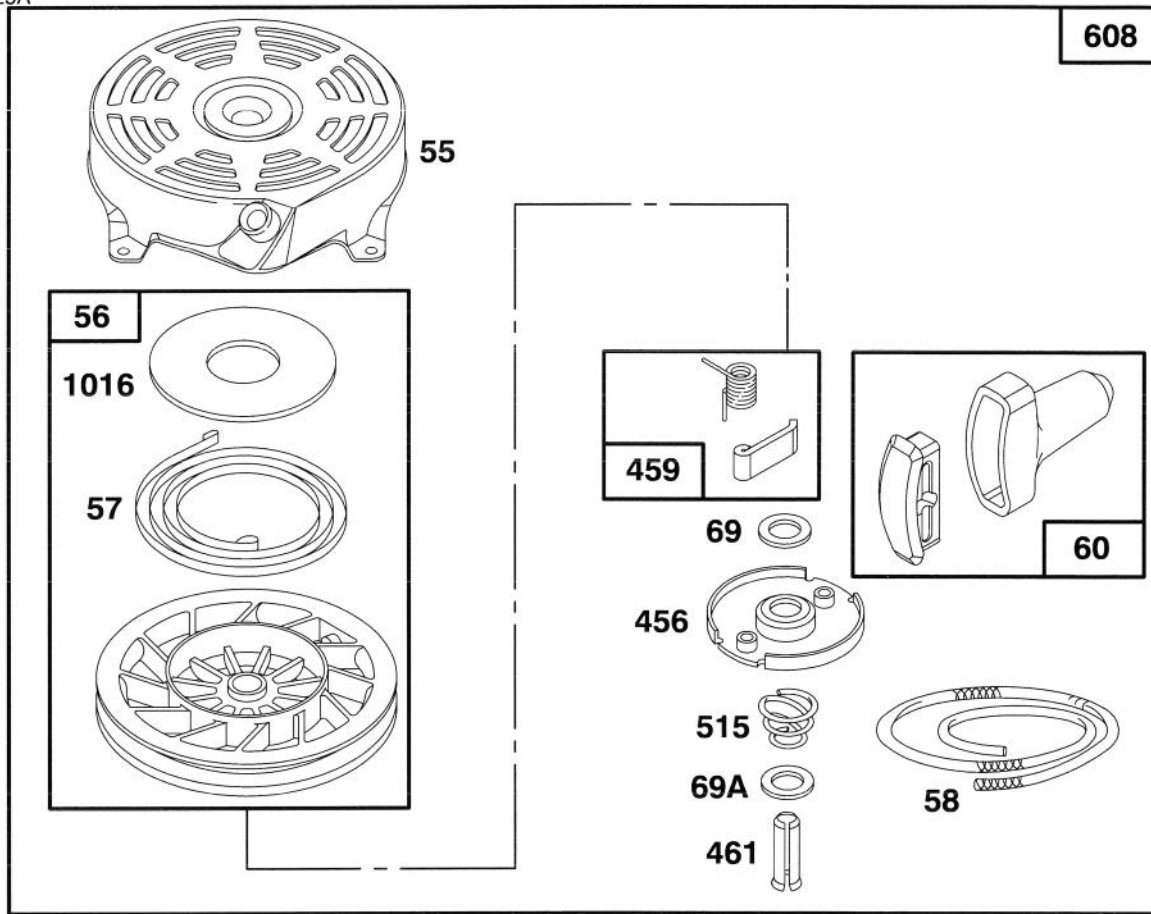


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing—Rewind Starter	1
56	492832	Pulley—Rewind Starter	1
57	262594	Spring—Rewind Starter	1
58	280399	Rope—Rewind Starter (Cut to 88-5/8")	1
60	393152	Handle—Rewind Starter	1
69	280973	Washer—Rewind Starter	1
69A	224322	Washer—Rewind Starter	1
456	224321	Retainer—Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl—Starter	1
461	262626	Pin—Starter	1
515	262625	Spring—Torsion	1
608	493295	Starter Assy.—Rewind Includes: 94128 Screw—Hex. Head 92987 Nut—Hex.	1
1016	224278	Cover—Rewind Starter	1

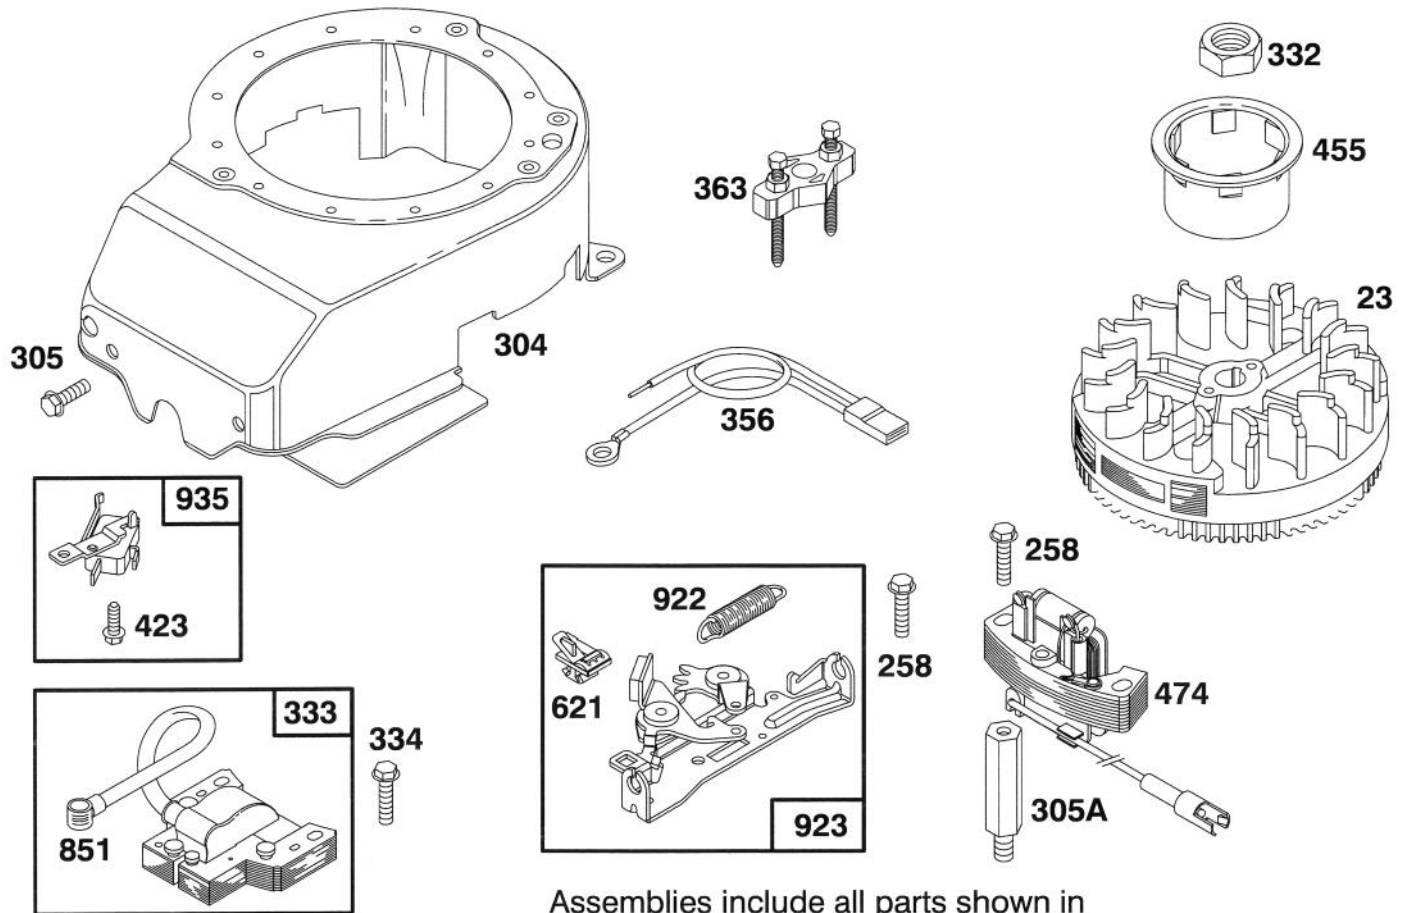 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
23	492175	Flywheel-Magneto	1
258	94512	Screw-Hex. Head	1
304	493293	Housing-Blower	1
305	94729	Screw-Hex. Head Sem	1
305A	94510	Stud-Stator Mounting	1
332	92284	Nut-Flywheel	1
333	802574	Armature-Magneto	1
334	94731	Screw-Armature Mtg.	1
356	398808	Wire-Ground	1

Ref. No.	Part No.	Description	No. Used
363	19069	Puller-Flywheel	1
423	93758	Screw-Hex. Hd.	1
455	224250	Cup-Starter	1
474	492841	Stator Assembly	1
621	396847	Switch-Stop	1
851	221798	Terminal-Ignition Cable	1
922	262640	Spring-Brake	1
923	493442	Brake Assembly	1
935	398758	Bracket and Switch Assy.	1

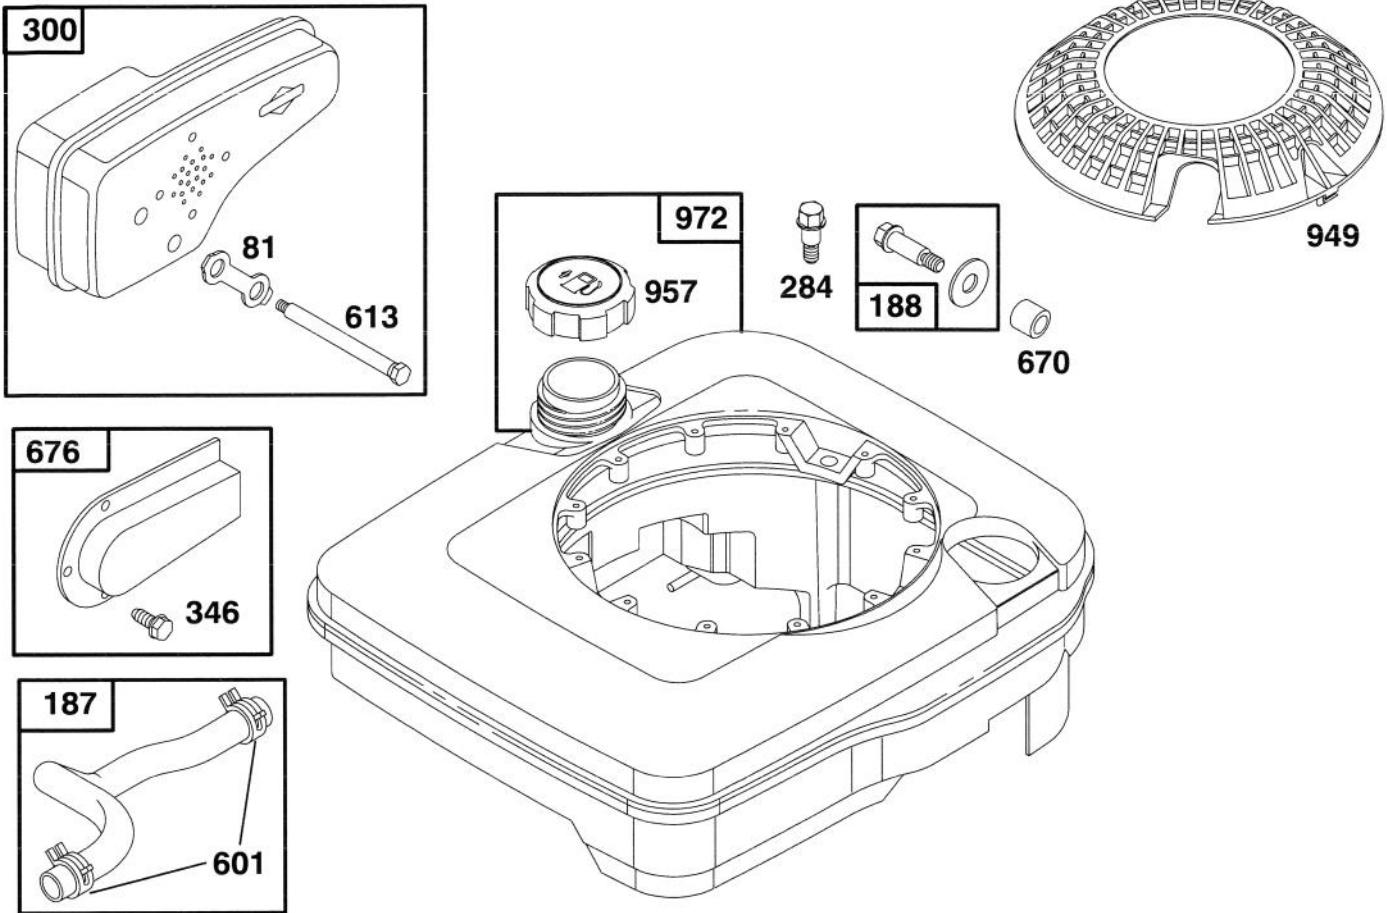 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock - Muffler Screw	1
187	492791	Hose - Fuel	1
188	398540	Screw - Tank Mounting (Includes Washer)	1
284	94511	Screw - Hex. Head	1
300	490547	Muffler - Exhaust	1
346	93705	Screw - Hex. Head	1

Ref. No.	Part No.	Description	No. Used
601	93807	Clamp - Hose	1
613	94231	Screw - Muffler Mtg.	1
670	280512	Spacer - Fuel Tank	1
676	493871	Deflector - Muffler	1
949	281136	Guard - Finger	1
957	397974	Cap Assy. - Fuel	1
972	494358	Tank Assembly - Fuel	1



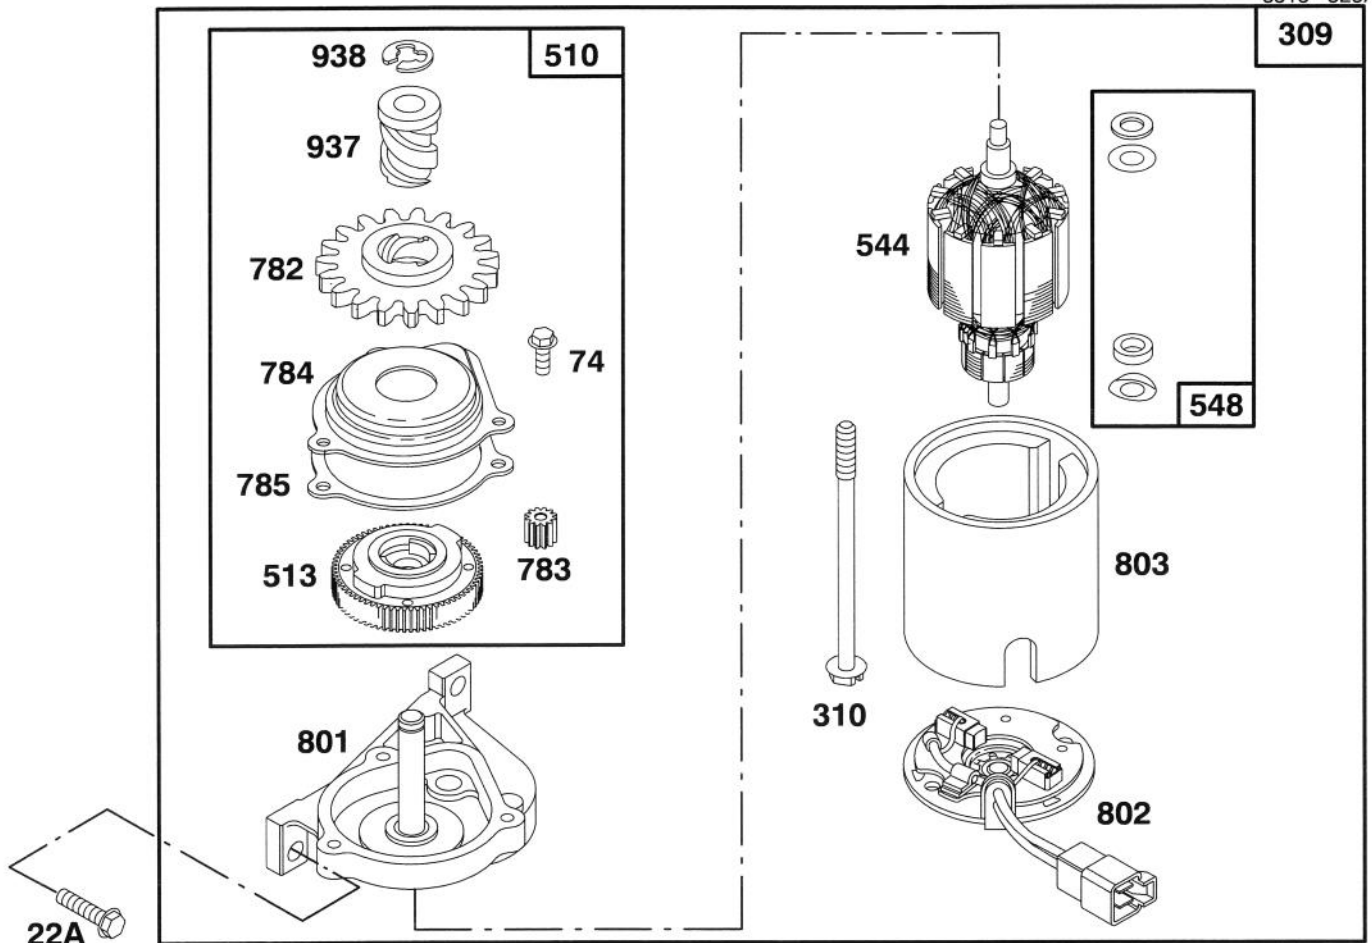 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
22A	94268	Screw - Hex. Washer Hd.	1
74	93490	Screw - Hex. Washer Hd.	1
309	494233	Motor - Starter	1
310	94553	Screw - Hex. Washer Head	1
510	494147	Drive Kit	1
513	394815	Clutch Assembly	1
544	492921	Armature Assembly	1
548	492919	Washer Set	1
782	281127	Pinion - Starter	1

Ref. No.	Part No.	Description	No. Used
783	261606	Gear Pinion	1
784	224262	Cover - Gear	1
785	272201	Gasket - Cover	1
801	492335	Bracket Assembly	1
802	492922	Head Assembly	1
803	492920	Shell and Magnet Assy.	1
937	281125	Spline - Starter	1
938	93941	Retainer - Lock	1

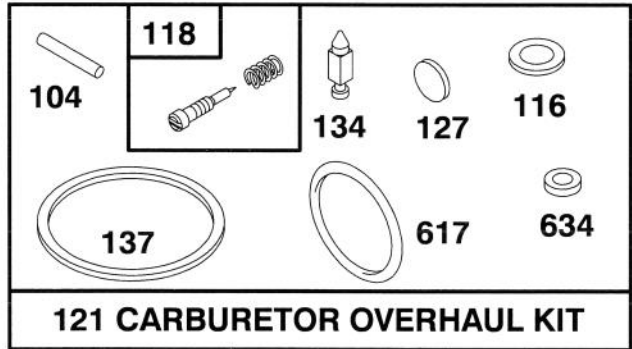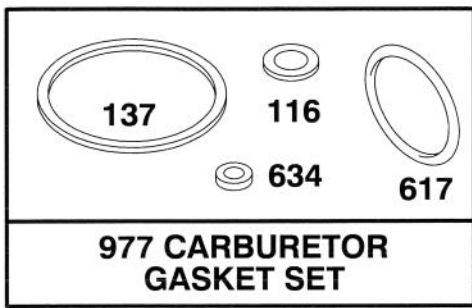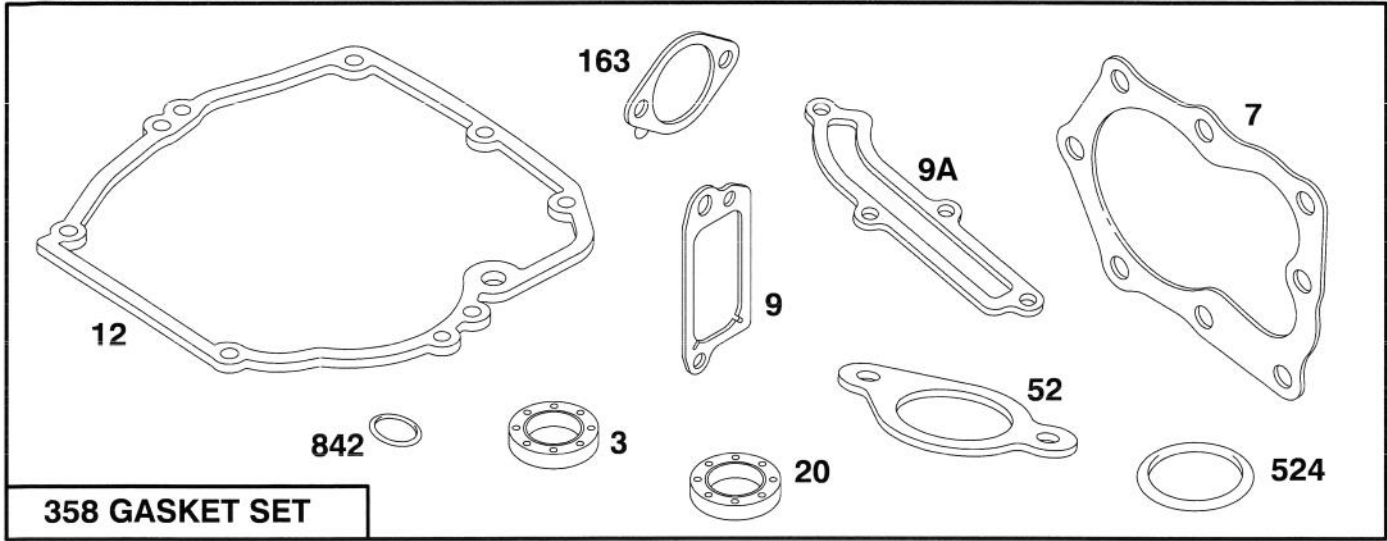   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal—Oil	1
★7	272200	Gasket—Cylinder Hd.	1
★9	271481	Gasket—Valve Cover	1
★9A	272238	Gasket—Baffle Plate	1
★12	272198	Gasket—Crankcase	1
★20	399781	Seal—Oil	1
★52	272199	Gasket—Intake Elbow	1
●104	231371	Pin—Float Hinge	1
◆◆116		Gasket—Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring—Needle	1
121	493762	Carburetor Overhaul Kit	1
●127		Plug—Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve—Inlet (Includes Seat)	1
137		Gasket—Bowl (Sold in Kit Only).	1
★163	272296	Gasket—Air Cleaner	1
358	493263	Gasket Set	1
★524	280393	Seal—Filler Tube	1
◆◆617	270344	Seal—Fuel Intake Tube Washer—Shaft (Sold in Kit Only).	1
◆◆634			1
★842	280966	Seal—O-Ring	1
977	490937	Gasket Set—Carburetor	1

● Included in Carburetor Overhaul Kit—Part No. 493762.
◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 493263.

TORO PART NUMBER INDEX (Cont.)

3315-929A

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-3287	Spacer	6	11	2	63-9060	Decal - Danger	6	4	1
3-5792	Washer	2	38	1	65-2720	Ring - Retaining	4	24	4
14-4069	Cover Assembly	1	9	1	65-4710	Ring - Friction	4	25	2
14-9419	Blade - 21	3	9	1	65-4720	Spring	4	28	2
14-9989	Wheel & Tire Assembly	1	29		65-4730	Thrust Washer	4	22	2
16-0029	Wheel - Tire & Gear Ass'y	4	30	2	65-4740	Thrust Washer	4	23	4
16-1599	Housing Assembly	2	36	1	65-4750	Pinion	4	1	2
16-1649	Panel - Control	6	1	1	65-4760	Washer - Clutch	4	26	2
19-4050	Knob - Handle Release	6	18	2	65-4770	Shaft - Output	4	18	1
25-7740	Knob - Arm	4	3	2	65-5250	Clip - Spring	5	61	1
25-7740	Knob - Spring Arm	1	2	2	66-0560	Screw - Pivot	1	26	2
26-0670	Screw - Blade	3	12	1	66-0570	Guide - Belt	3	6	1
27-6232	Bolt - Wheel	1	28	2	66-0580-03	Arm - Pivot	2	31	2
27-6232	Wheel Bolt	4	32	2	66-5351	Lever - Control	7	11	1
27-6250	Bushing	1	27	4	66-6040	Key - Rocker R.H.	4	*	1
27-6250	Bushing - Wheel	4	31	4	66-6050	Key - Rocker L.H.	4	27	1
27-7210	Screw - Shoulder	6	10	2	70-9760	Bushing	4	19	2
27-7211	Screw - Shoulder	6	9	2	71-0561	Spring Arm Ass'y - R.H.	1	1	1
29-9570	Bushing - Yoke	4	37	1	71-0571	Spring Arm Ass'y - L.H.	2	33	1
33-3208	Rod - Shield	1	23	1	71-3080	Bar - Control	7	13	1
36-4780	Washer - Thrust	4	42	1	74-1660	Cover - Wheel	4	29	2
36-4791	Washer - Thrust	4	46	2	74-1670	Spacer - Wheel Cover	4	33	2
37-7260	Screw - Special	2	39	1	74-3894	Control - Throttle	6	5	1
37-7262	Screw - Special	1	13	1	76-0760	Key - Shift	4	40	2
38-7820	Bearing - Ball	5	58	1	76-0770	Collar - Shift	4	41	1
39-5770	Decal - Danger	1	6	1	76-0780	Sleeve - Shift Key	4	39	1
40-1940	Washer - Wheel	2	30	4	76-2712	Control - Ground Speed	6	2	1
42-3520	End Cap	4	5	2	76-4330	Cable - Brake	7	7	1
44-0580	Shield - Rear	1	24	1	77-0280	Shield - Heat	1	20	1
46-5481	Cable - Traction	7	6	1	80-3671	Harness - Wire	6	25	1
46-5520	Lever - Traction	7	5	1	82-5531-05	Lower Handle Assembly	6	12	1
46-5780	Switch - Starter	6	30	1	82-5680	Bracket - Traction Adj.	1	17	1
46-6440	Cover - Control Cables	6	7	1	82-8450	Decal - Danger	1	11	1
46-6810	Screw - Hex Washer Hd.	1	8	1	82-8780	Cable - Retainer	4	15	1
46-6811	Screw w/Washer	1	10	3	84-8361	Latch - Handle L.H.	6	8	1
46-6980	Support - Cable	7	8	1	84-8401	Latch - Handle R.H.	6	23	1
46-7030	Retainer - Cable	1	18	1	86-7990	Screw - Clamp	3	5	1
48-2060	Needle Bearing	4	21	2	86-9671	Guide - Rope	6	21	1
49-1630	Support - Spacer	7	2	2	91-2253	Cover - Wheel	1	25	1
49-2040	Screw - Self Tapping	4	8	8	92-1599	Accelerator	3	10	1
49-2750	Pin - Handle	6	15	2	92-1709	Decal - Caution	6	34	1
52-7406	Belt Cover Assembly	1	19	1	92-1720	Plate - Kicker Rt. Front	1	3	1
55-3760	Gear - Pinion 15 Tooth	4	47	1	92-1730	Plate - Kicker Rt. Rear	1	4	1
55-3770	Gear - 49 Tooth 1st Gear	5	56	1	92-1743	Charger - Battery	6	33	1
55-3780	Gear - Pinion 20 Tooth	4	48	1	92-1750	Plate - Kicker Left Rear	1	12	1
55-3790	Gear - 44 Tooth 2nd Gear	5	55	1	92-2260	Screw - Handle	7	3	2
55-3800	Gear - Pinion	5	49	1	92-2260	Screw - Handle	6	16	2
55-3810	Gear - 39 Tooth 3rd Gear	5	54	1	92-2269	Screw - Handle	7	4	1
55-7520	Battery Assembly	6	29	1	92-2278	Handle - Upper	6	3	1
55-8180	Retainer - Battery	6	27	1	92-2279	Decal - H.O.C.	2	37	4
60-8710	Gear Case - Upper	5	59	1	92-2281	Decal - Deck	2	35	1
60-8730	Cover - Gear Case	4	44	1	92-2282	Decal - Engine	3	1	1
60-8750	Bushing - Int. Shaft	4	45	2	92-3146	Decal - Panel Front	6	19	1
60-8770	Bushing - Output Shaft	4	43	1	92-8658	Decal - Instructions	6	24	1
60-8790	Sleeve - Gear	5	53	1	92-8659	Decal - Charging	6	28	1
60-8800	Shaft - Intermediate	5	50	1	218-461	Nut - Hex	6	32	1
60-8810	Retainer - Shift Fork	4	38	1	2210-249	Clamp - Casing	3	4	1
60-8821	Lever - Shift	4	17	1	2210-316	Stop - Rope	3	2	1
60-8840	Pulley - Half	4	10	2	237-153	O-Ring	5	60	2
60-8850	Bushing - Output Shaft	5	51	1	2412-50	Clip Convolutud Tubing	6	6	4
60-8870	Yoke - Shift	4	36	1	2412-83	R-Clamp	2	42	1
60-8890	Pinion - Bevel	5	57	1	2412-87	Clamp - Cable	2	40	1
62-3720	Clamp - Cable	1	22	1	302-56	Fitting - Grease	4	20	2
62-3900	V-Belt	4	13	1	321-39	Screw - Hex Hd. Cap	7	1	1
62-4320	Bracket - Belt Guide	4	7	1	3253-22	Washer - Lock	3	11	1
62-6660	Spacer	4	9	1	3254-5	Washer - Lock	6	31	1
62-6673	Gear Case Assembly	5	*	1	3256-1	Washer - Flat	7	9	1
62-7540	Retainer - Blade	3	13	1	3256-24	Washer - Flat	4	12	1
62-7550	Pulley - Driver	3	14	1	3272-10	Pin - Cotter	4	14	1
63-8360	Key - Ignition	6	26	1	3290-378	Tie - Cable	1	15	1
63-8701-03	Pivot Arm Assembly	4	2	2	3290-378	Tie - Cable	6	17	4
63-8721	Spring Arm Assembly	4	4	2	3295-35	Rivet	1	21	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3296-5	Locknut	4 11 1	32144-102	Screw - Thread Forming	3 8 3
3296-6	Locknut	4 34 2	32144-111	Screw - Pan Hd.	1 5 6
3296-6	Nut - Lock	2 32 4	32144-112	Screw - Hex Washer Hd.	2 41 1
3296-47	Nut - Lock	6 14 3	32144-115	Screw - Self Tap Slotted	6 20 5
3296-72	Nut - Lock	6 13 3			
3296-73	Nut - Lock	7 10 2			
3296-73	Nut - Lock	6 22 1			
3296-74	Nut - Lock	7 12 2			
32121-120	Pin - Coil	5 52 1			
32144-70	Screw - Hex Washer Hd.	1 16 2			
32144-70	Screw - Thread Forming	3 7 2			
32144-70	Screw - Thread Forming	4 16 1			
32144-85	Screw	4 35 2			
32144-85	Screw - Hex Hd. Cap	2 34 2			

OPTIONAL EQUIPMENT

- Recycler Side Discharge Kit Model No. 59189
- Wear Plate Kit Part No. 49-4080
- Dethatcher Kit Model No. 59131
- Recycler Bagging Kit Model No. 59174

*Not Illustrated

