



NEW HOLLAND ..

MZ16H Riding Mower

Model No. 725057016 - T04ZB0001 and up.

Model No. 94330 - T04ZB0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Crankcase Assembly Briggs and Stratton 286H77-0165-E1	 19
Control Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 286H77-0165-E1	 20
Hydro and Belt Drive Assembly	 6	Carburetor Assembly Briggs and Stratton 286H77-0165-E1	 21
RH Hydrostat Assembly No. 107-2466	 7	Governor Assembly Briggs and Stratton 286H77-0165-E1	 22
LH Hydrostat Assembly No. 107-2465	 9	Blower Housing Assembly Briggs and Stratton 286H77-0165-E1	 23
Engine and Styling Assembly	 11	Starter Assembly Briggs and Stratton 286H77-0165-E1	 24
42in Deck Spindle and Belt Drive Assembly	 13	Gasket Assembly Briggs and Stratton 286H77-0165-E1	 25
42in Deck Assembly	 14	Carburetor Overhaul Kit Assembly Briggs and Stratton 286H77-0165-E1	 26
Electrical System Assembly	 15		
Cylinder Assembly Briggs and Stratton 286H77-0165-E1	 16		
Cylinder Head Assembly Briggs and Stratton 286H77-0165-E1	 17		
Crankshaft Assembly Briggs and Stratton 286H77-0165-E1	 18		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❼ Obtain from your local Briggs & Stratton dealer | |

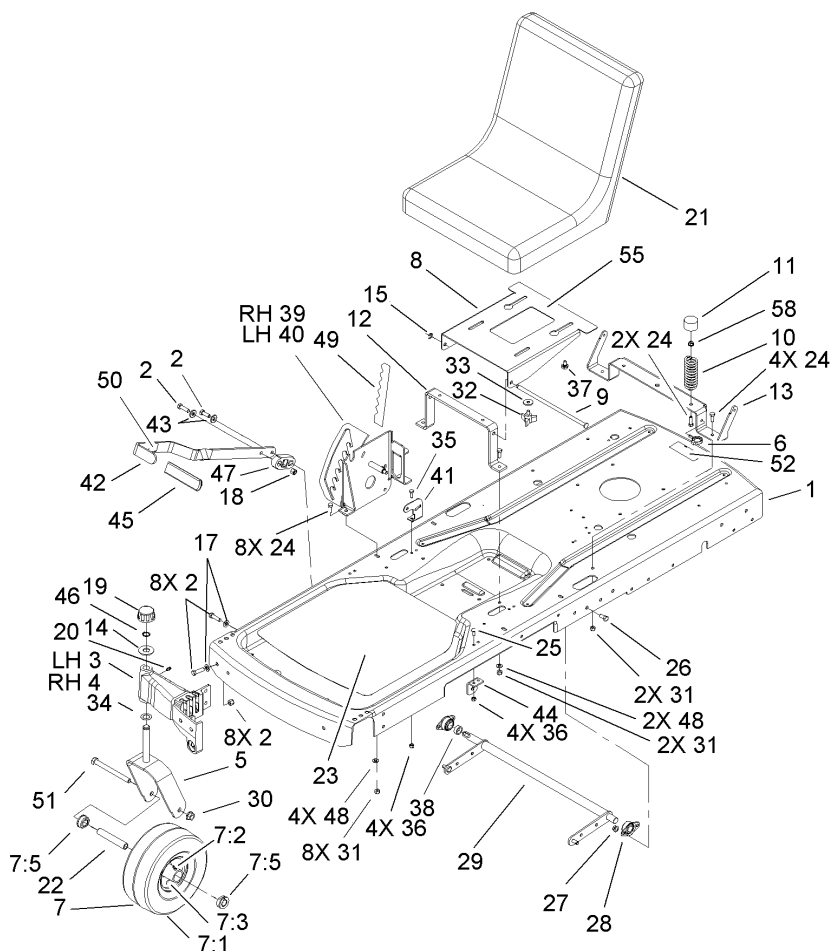

Frame Assembly


Ref	Part No.	Qty.	Description
1	107-1744-04	1	Frame
2	323-18	10	Screw-HH
3	105-6986-04	1	Castor-LH
4	105-6985-04	1	Castor-RH
5	106-2196-04	2	Castor Fork ASM
6	105-1853	1	Clamp-Hose
7	107-7342	2	Front Wheel And Tire ASM
7:1	105-1943	1	Tire
7:2	302-11	1	Fitting-Lube, 45 DEG
7:3	232-27	1	Stem-Valve
7:5	114-1640	2	Bushing-Flange
7:99	93-4244	1	Tube-Inner (W/Valve)
8	105-6953-03	1	Bracket-Seat
9	105-6955	1	Pin-Pivot
10	92-7054	2	Spring-Compression
11	701178	2	Cap-Protector
12	105-6954-03	1	Brace-Seat, Front
13	106-2210-03	1	Brace-Seat, Rear
14	28-2480	2	Washer
15	105-7004	1	E-Ring
17	3256-24	8	Washer-Flat
18	3296-39	9	Nut-Lock, NI
19	61-9780	2	Cap-Hub
20	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
21	107-7323	1	Seat
22	104-3667	2	Spanner-Wheel
23	105-3460	1	Pad-Antiskid
24	322-4	14	Screw-HH
25	3229-1	4	Screw-CARR
26	323-4	4	Screw-HH
27	3290-357	4	Nut-HHF, Whiz
28	1-633102	2	Bearing-Flange, Side
29	105-3499-03	1	Lift Arm ASM
30	32128-23	2	Nut-HF
31	3296-29	12	Nut-Lock, NI
32	92-9674	2	Knob
33	5-4460	2	Washer-Pivot
34	3-6498	2	Washer-Thrust
35	321-4	4	Screw-HH
36	3296-42	8	Nut-Lock, NI
37	37-8770	2	Bolt-Shoulder
38	106-2222	1	Spacer
39	106-2158-03	1	RH Plate ASM
40	106-2159-03	1	LH Plate ASM
41	106-2180	2	Bracket-Bellcrank
42	105-3435-03	1	Lever-Lift
43	98-5975	2	Washer-Belleville
44	105-3439	2	Bracket-Lift

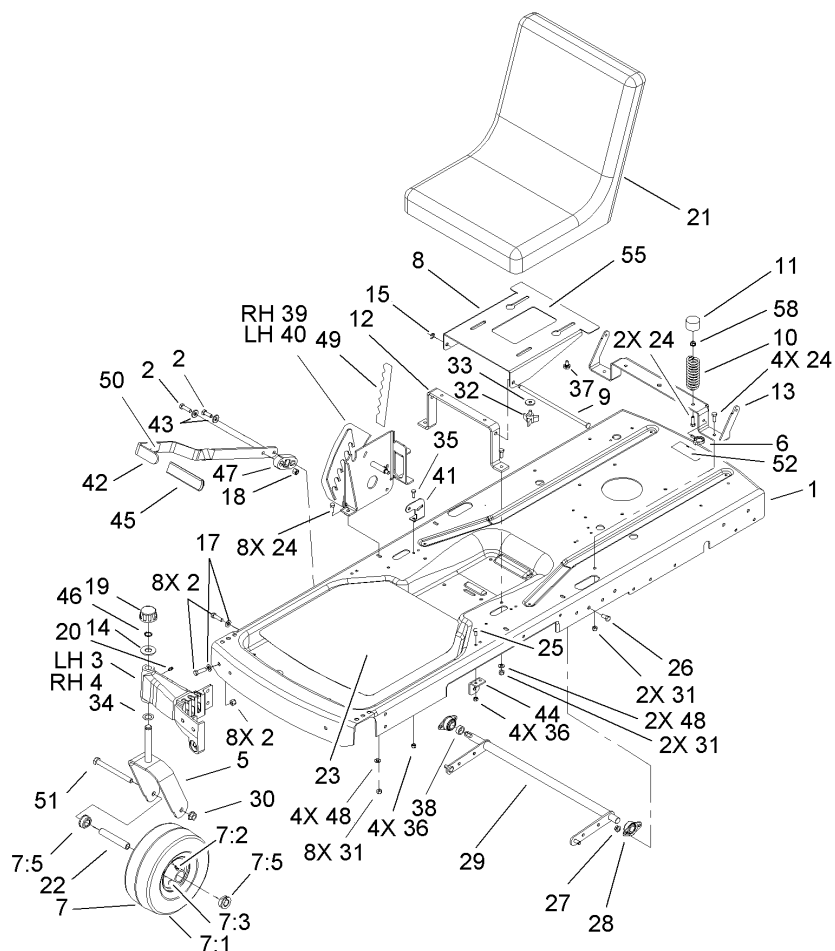

Frame Assembly (continued)


Ref	Part No.	Qty.	Description				
45	105-3450	1	Grip-Lever, Lift				
46	32151-103	2	Ring-Retaining, EXT				
47	106-2211	1	Block-Lift				
48	3256-23	6	Washer-Flat				
49	106-2223	1	Decal-HOC				
50	106-8743	1	Decal				
51	325-22	2	Screw-HH				
52	106-7026	1	Decal-Transport				
55	106-8716	1	Decal-Services				
58	32128-25	2	Nut-HF				

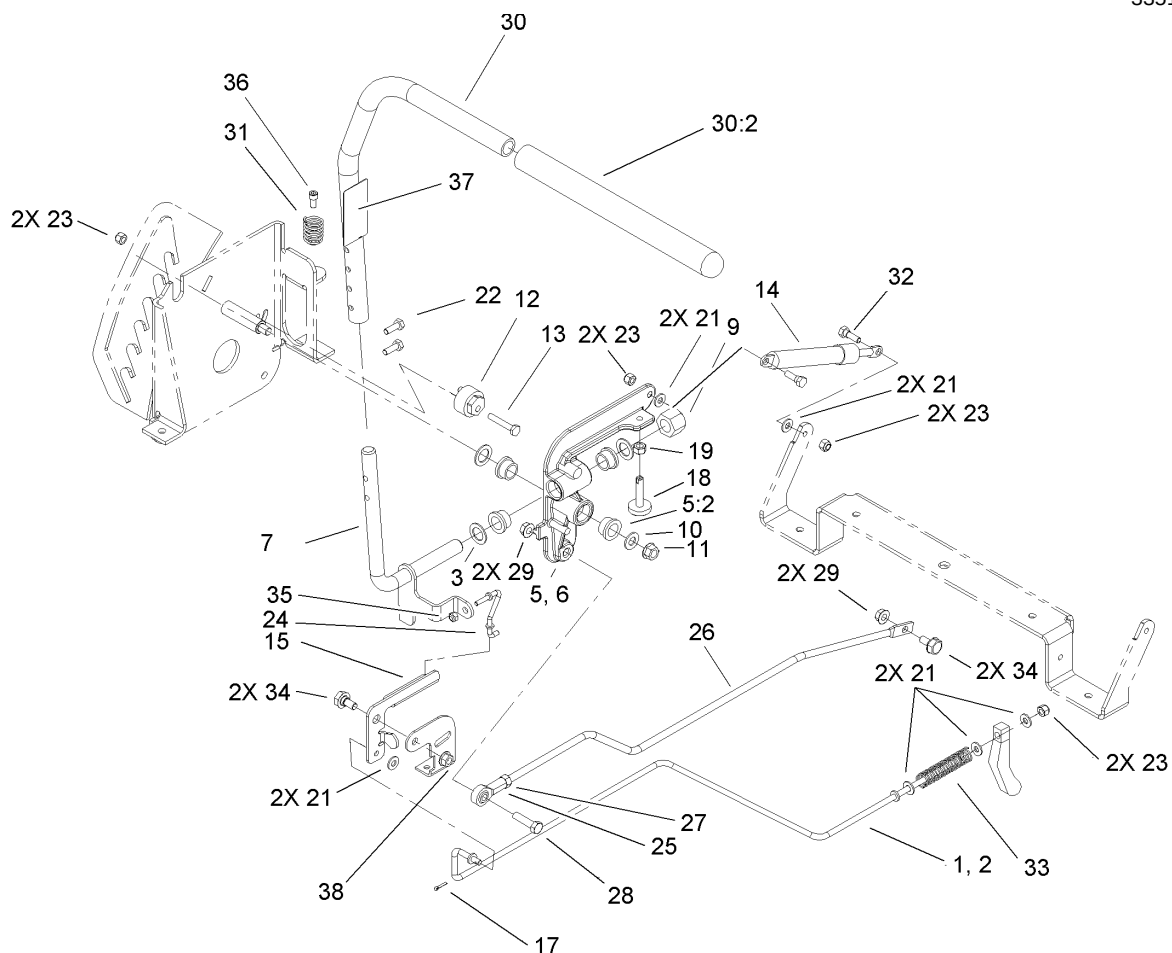

Control Assembly

Ref	Part No.	Qty.	Description
1	105-7045	1	Rod-Brake, LH
2	105-7044	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
5	106-8671	1	RH Actuator Arm W/Bushing ASM
5:2	105-3455	4	Bushing
6	106-8672	1	LH Actuator Arm W/Bushing ASM
①6:2	105-3455	4	Bushing
7	105-3488	1	LH Pivot Shaft ASM
①8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	105-3485	2	Bushing-Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
17	3272-5	2	Pin-Cotter
18	105-3486	2	Stop-Adjustment
19	3217-6	2	Nut-Hex
21	3256-22	12	Washer-Flat
22	321-4	4	Screw-HH
23	3296-42	8	Nut-Lock, NI
24	106-2179	2	Link-Brake
25	1-543017	2	Balljoint-RH


Ref	Part No.	Qty.	Description
26	105-7048	2	Rod-Hydro
27	3219-2	2	Nut-Hex
28	322-6	2	Screw-HH
29	32128-20	4	Nut-HF
30	106-2242	2	Handle ASM
30:2	1-633257	1	Grip-Control, Motion
31	105-3469	2	Spring-Compression
32	106-2214	4	Bolt-Shoulder
33	105-3465	2	Spring-Compression
34	37-8771	4	Bolt-Shoulder
35	3296-2	2	Nut-Lock
36	3274-52	2	Screw-HSH
37	107-7382	2	Decal-Brake, Parking
38	32128-25	2	Nut-HF

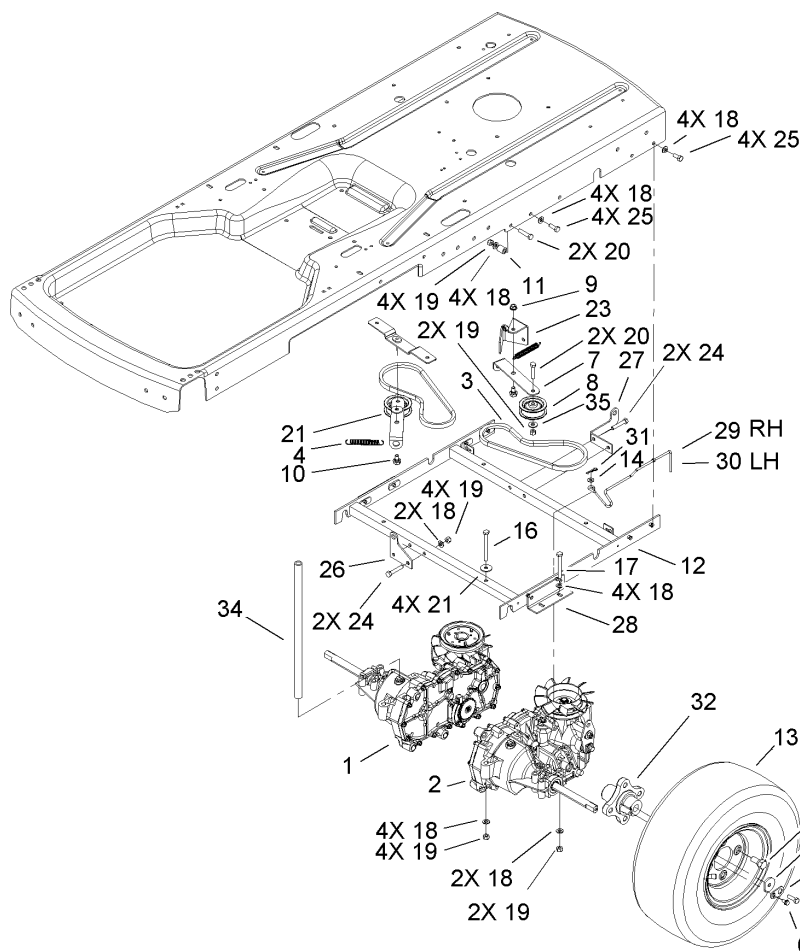

Hydro and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	107-2466	1	RH Hydrostat ASM
2	107-2465	1	LH Hydrostat ASM
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-3438	2	Tab-Locking
6	3234-13	2	Screw-HHF
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8770	2	Bolt-Shoulder
11	105-1941	2	Spacer
12	107-2462-03	1	Hydro Mount ASM
13	107-7329	2	Rear Wheel ASM
13:99	107-2491	1	Tube-Tire
14	3256-1	2	Washer-Flat
15	3210-5	2	Screw-HH
16	322-20	4	Screw-HH
17	322-13	4	Screw-HH
18	3256-23	24	Washer-Flat
19	3296-29	16	Nut-Lock, NI
20	322-7	4	Screw-HH
21	5-4460	5	Washer-Pivot
22	106-7001	2	Washer-Wheel
23	107-1734	1	Stop-Clutch

Ref	Part No.	Qty.	Description
24	322-9	4	Screw-HH
25	322-4	8	Screw-HH
26	105-7049	1	Bracket-Spring
27	105-7046	1	Bracket-Spring
28	105-7039-03	2	Support-Hydro
29	107-2463	1	Arm-Bypass, LH
30	107-2464	1	Arm-Bypass, RH
31	1-806003	2	Pin-Hair
32	106-6987-03	2	Hub-Machined
33	71-4450	8	Bolt-Lug
34	106-7002	2	Vent Hose ASM
34:1	93-3816	1	O-Ring
34:2	93-3814	1	Fitting-Hose
34:7	107-1701	1	Cap Vent ASM
35	3256-3	2	Washer-Flat

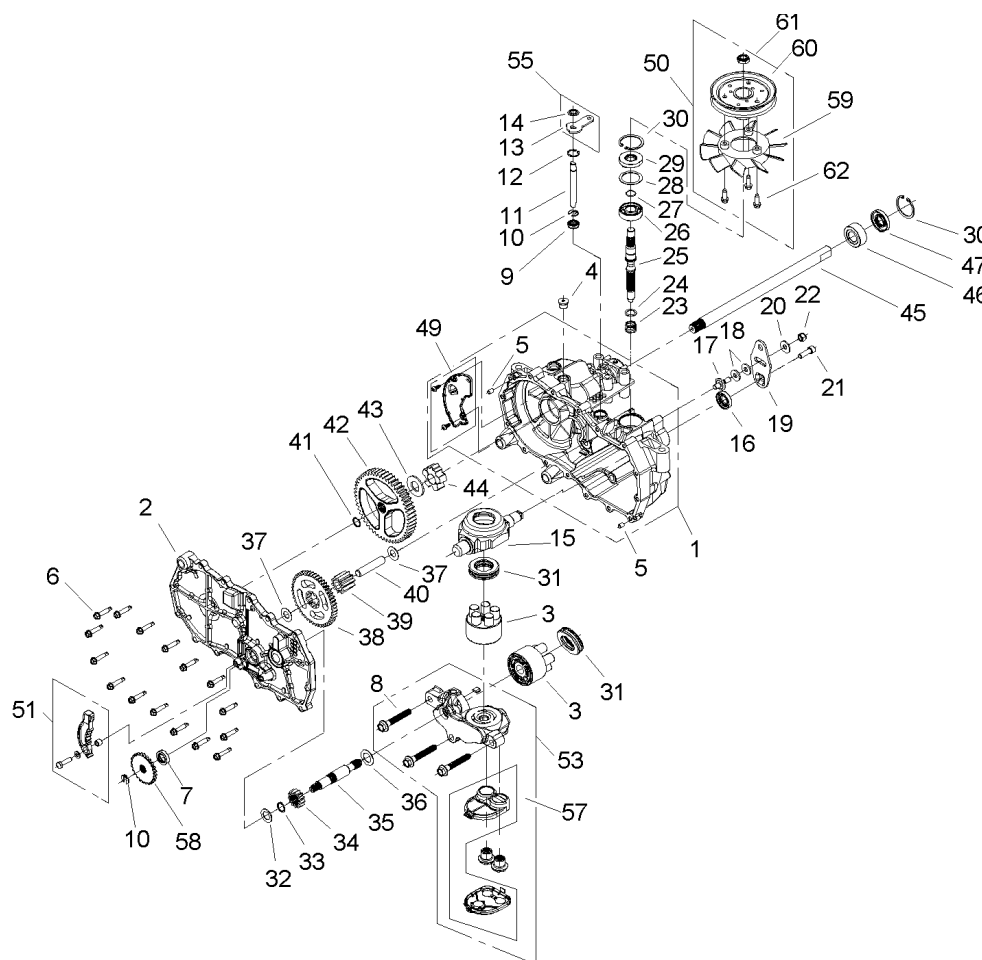


RH Hydrostat Assembly No. 107-2466

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM	24	94-1937	1	Washer-Thrust, Block
2	106-8675	1	LH Side ASM	25	104-5306	1	Shaft-Input
3	103-2666	1	Cylinder Block Kit	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

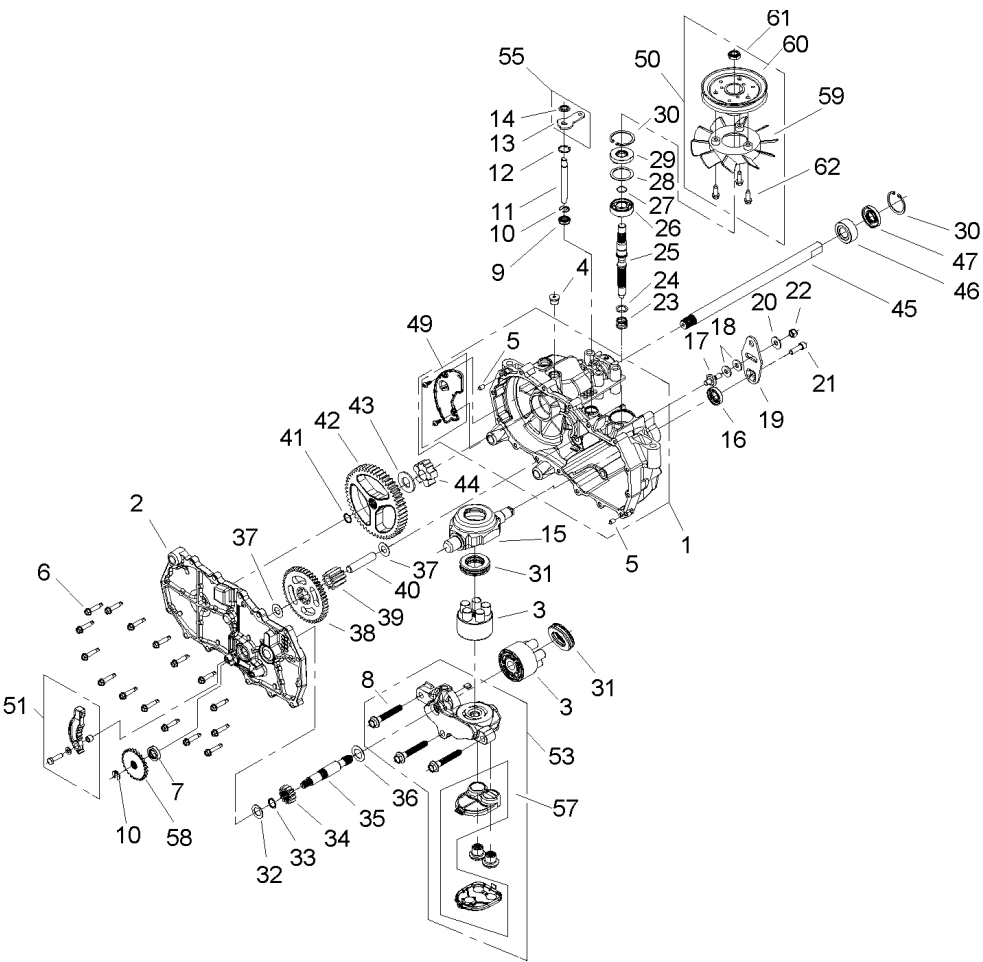

RH Hydrostat Assembly No. 107-2466 (continued)


Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8687	1	LH Expansion Plate Kit				
50	105-1928	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	106-8690	1	LH Center Section Filter Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	105-1927	1	Fan				
60	105-1896	1	Pulley				
61	105-1875	1	Nut-Lock				
62	104-2120	3	Screw				

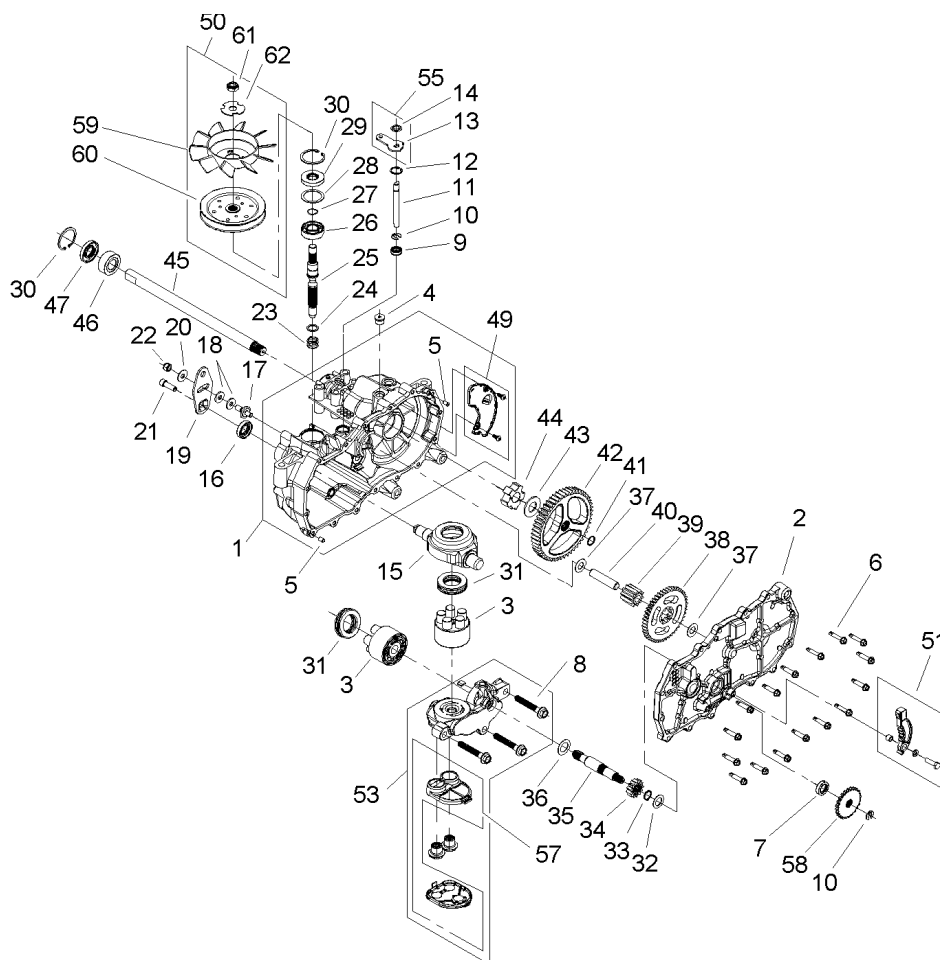

LH Hydrostat Assembly No. 107-2465


Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM
2	106-8696	1	RH Side ASM
3	103-2666	1	Cylinder Block Kit
4	104-2189	1	Plug-Thread, Straight
5	9004800-2506	2	Pin-Hydrogear
6	104-5305	16	Screw-HHF
7	104-5347	1	Seal-Oil
8	94-6926	3	Bolt
9	106-8676	1	Seal-Lip
10	106-8677	2	Ring-Retaining, EXT
11	106-8678	1	Rod-Bypass
12	106-8679	1	Ring-Retaining, Int
13	107-2490	1	Arm-Bypass
14	106-8681	1	Ring-Retaining, EXT
15	104-5304	1	Swashplate-Trunnion
16	104-5313	1	Seal-Lip
17	104-2116	1	Stud
18	105-1873	2	Puck-Friction
19	106-8747	1	Arm-Control
20	5-4460	1	Washer-Pivot
21	107-2488	1	Screw
22	105-1872	1	Nut
23	94-1936	1	Spring-Block

Ref	Part No.	Qty.	Description
24	94-1937	1	Washer-Thrust, Block
25	104-5306	1	Shaft-Input
26	104-5311	1	Bearing-Ball
27	104-5307	1	Ring-Retaining
28	104-5308	1	Spacer
29	104-5310	1	Seal-Lip
30	104-5309	2	Ring-Retaining
31	94-6922	2	Bearing-Thrust
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	104-5316	1	Gear-Pinnion, 13T
35	106-8683	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	2	Washer
38	104-5317	1	Gear
39	104-5318	1	Gear-Jackshaft, 10T
40	104-5329	1	Pin-Jackshaft
41	104-5328	1	Ring-Retaining, Spiral
42	106-8684	1	Gear-Bull, 52T
43	94-1943	1	Washer
44	104-5320	1	Bearing-Sleeve
45	106-8685	1	Axle
46	104-5321	1	Bearing-Sleeve, Outboard
47	104-5322	1	Seal-Lip

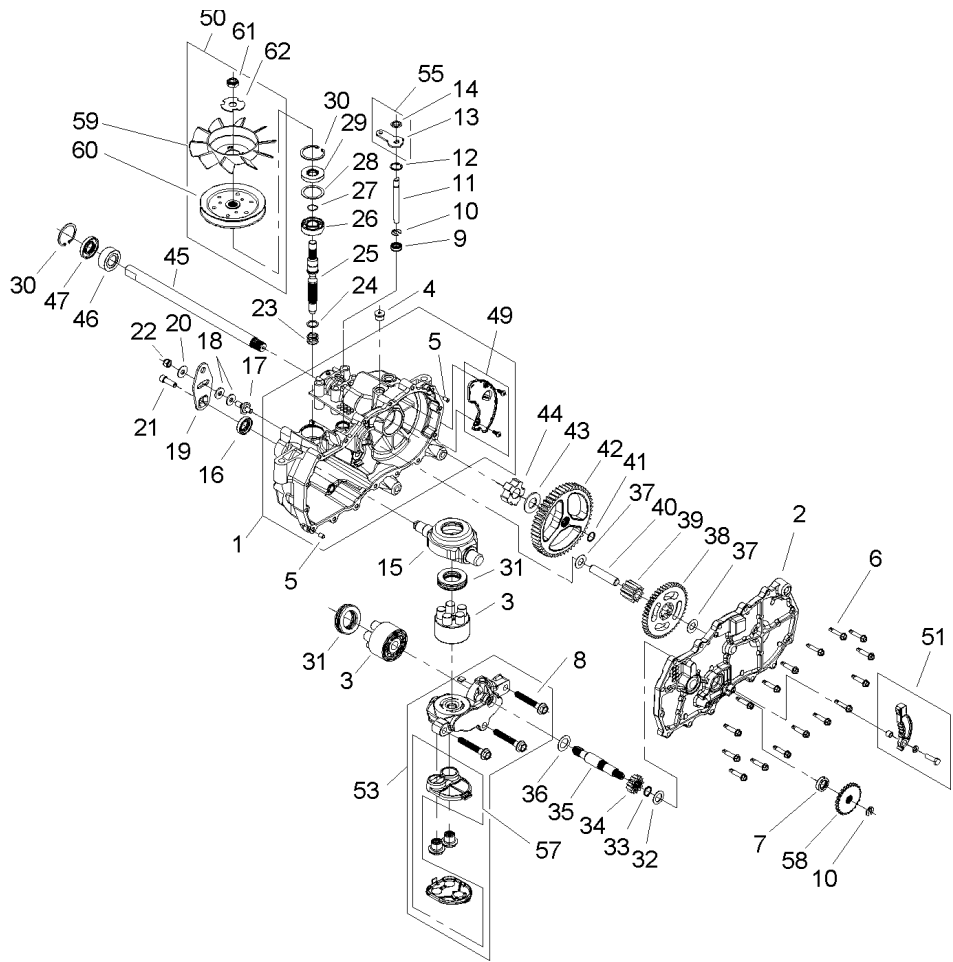

LH Hydrostat Assembly No. 107-2465 (continued)


Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8697	1	RH Expansion Plate Kit				
50	106-8698	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	106-8699	1	RH Center Section Filter Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	110-8566	1	Fan-6 Inch, 10 Blade				
60	104-1754	1	Pulley				
61	105-1875	1	Nut-Lock				
62	107-9122	3	Washer-Slotted				

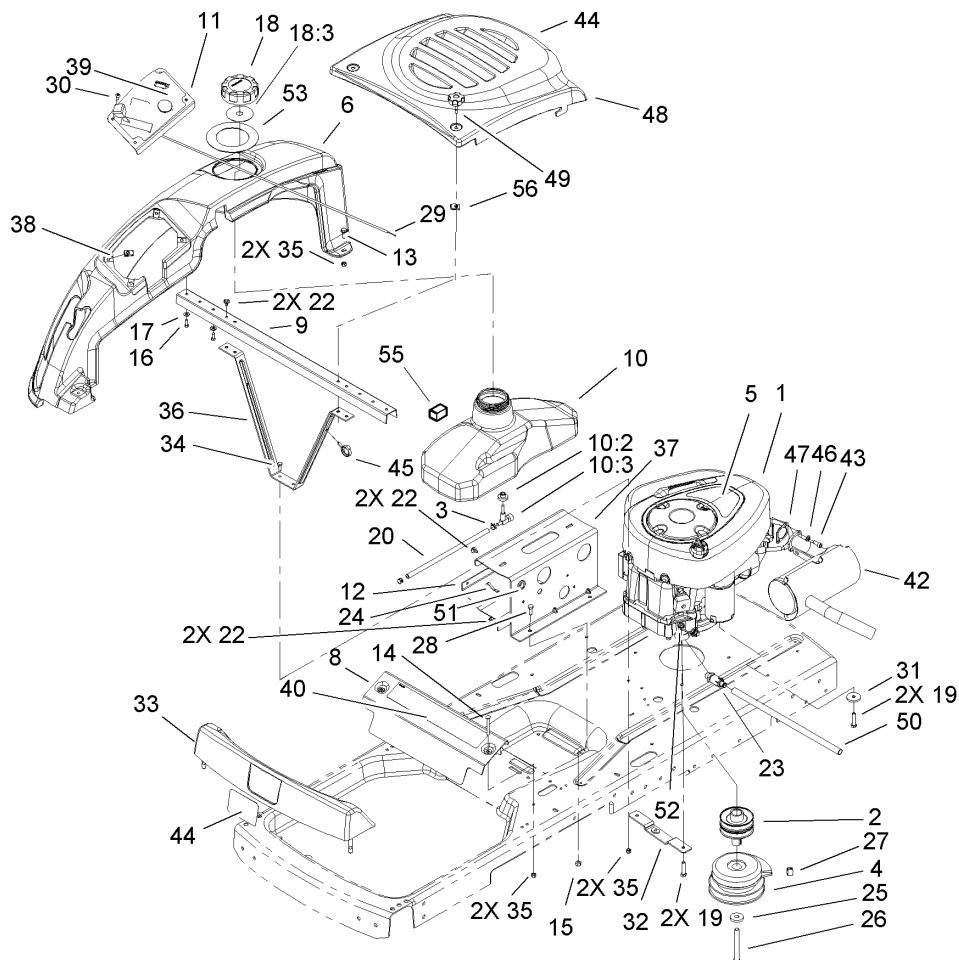

Engine and Styling Assembly


Ref	Part No.	Qty.	Description
1		1	Engine-Briggs & Stratton, 286H77-0165-E1
2	105-3472	1	Pulley-Engine
3	2412-98	2	Clamp
4	104-3334	1	Clutch-Electric
5	107-7333	1	Label-Engine
6	107-9100	1	Cover-Side, RH
7	107-9101	1	Cover-Side, LH
8	106-2164-03	1	Bracket-Support, Front
9	106-2165-03	1	Bracket-Support, Rear
10	105-3464	1	Gas Tank ASM
10:2	46-6560	1	Bushing
10:3	104048	1	Valve-Fuel
11	106-2167-03	1	Panel-Control
12	105-3453-03	1	Plate-Support
13	11-9030	2	Screw-Shoulder
14	3229-7	2	Screw-CARR
15	3296-29	2	Nut-Lock, NI
16	46-8090	4	Screw-Plastite
17	3256-22	4	Washer-Flat
18	88-3980	1	Gas Cap ASM
18:3	88-4010	1	Gasket-Cap, Gas
19	322-7	4	Screw-HH
20	106-8720	1	Hose-Fuel

Ref	Part No.	Qty.	Description
22	46-8560	7	Screw-HHF
23	92-6877	1	Valve-Drain, Oil
24	609830	2	Spring
25	112843	1	Washer
26	3212-16	1	Screw-HH
27	98-5023	1	Bumper
28	322-4	2	Screw-HH
29	107-7331	1	Cable-Throttle
30	3258-166	4	Screw-PRH
31	62-7190	2	Spacer-Steel
32	106-2156	1	Plate-Mount, Idler
33	105-6965	1	Footrest ASM
34	321-4	2	Screw-HH
35	3296-42	6	Nut-Lock, NI
36	106-6994-03	1	Brace ASM
37	107-2485-03	1	Plate-Tank
38	107069	4	Clip
39	107-7337	1	Decal-Control
40	107-7383	1	Decal-Danger
42	106-7007	1	Muffler
43	3274-10	2	Screw-HSH
44	107-7338	2	Emblem-Logo
45	105-1853	2	Clamp-Hose
46	3253-4	2	Washer-Lock

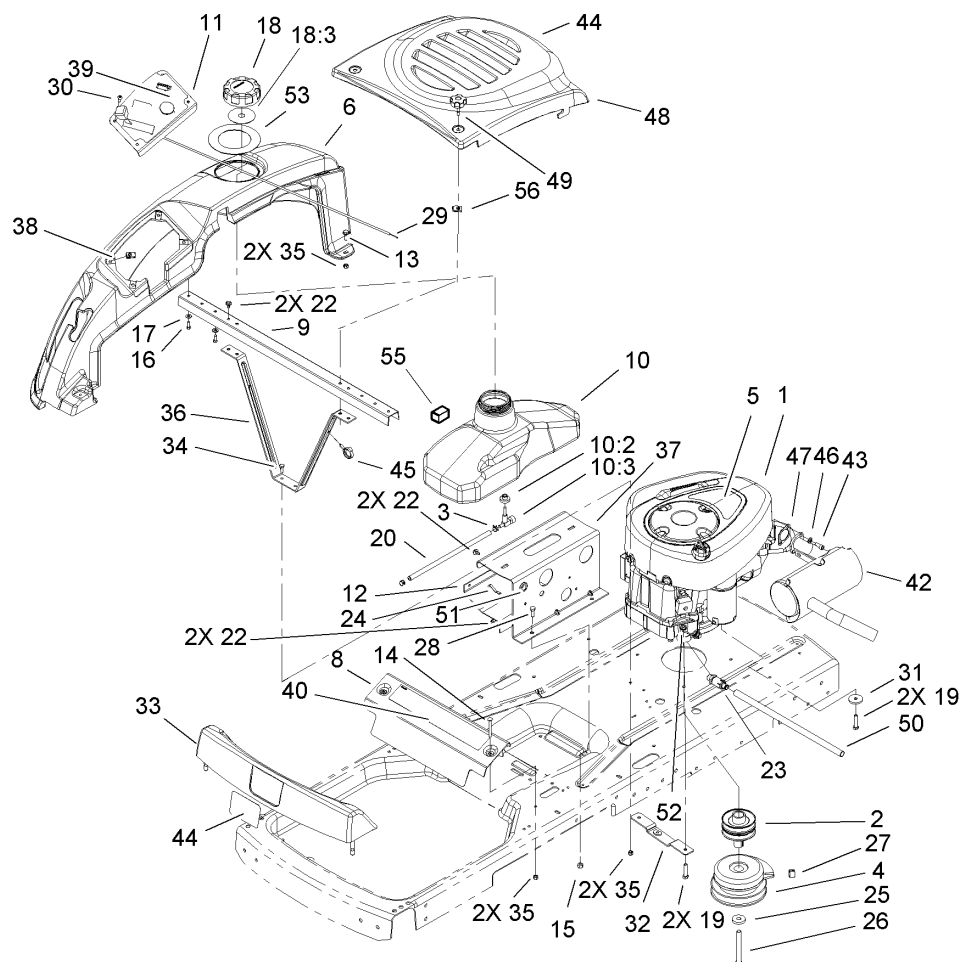


Engine and Styling Assembly (continued)

Ref	Part No.	Qty.	Description				
47	88-4410	1	Gasket-Muffler				
48	106-2163	1	Cover-Hood				
49	106-7017	2	Knob				
50	106-7022	1	Tube-Drain, Oil				
51	237-124	1	Grommet				
52	32128-25	4	Nut-HF				
53	106-7042	1	Seal-Rubber				
55	104-2488	2	Foam-Switch, Seat				
56	106-8737	2	Nut-Retainer				

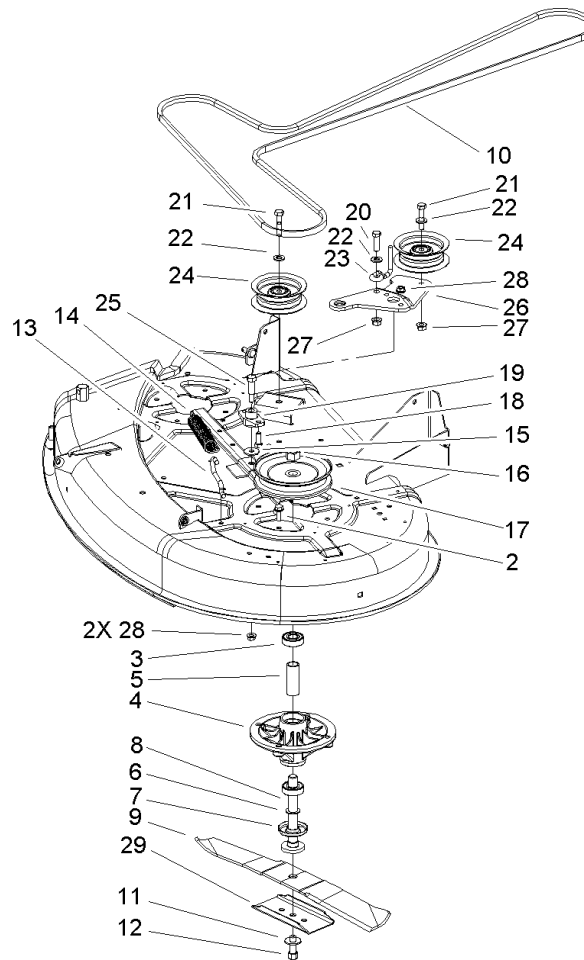


42in Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	32144-41	8	Screw-Taptite	26	107-2467-03	1	Arm-Idler
3	100-1048	4	Bearing-Ball	27	32128-21	2	Nut-HF
4	88-4510	2	Housing-Spindle	28	32128-25	3	Nut-HF
5	62-3661	2	Spacer-Bearing	29	106-2248-03	2	Stiffener-Blade
6	80-4380	2	Spacer				
7	80-4360	2	Shield-Bearing				
8	80-4341	2	Shaft-Spindle				
9	106-2247-03	2	Blade				
10	106-2173	1	Belt-V				
11	3290-465	2	Washer-Belleville				
12	26-0671	2	Screw-Blade				
13	88-5970	1	Hook-Return, Spring				
14	106-2177	1	Spring-Extension				
15	5-4460	1	Washer-Pivot				
16	3219-6	2	Nut-Hex				
17	88-5330	2	Pully-Deck				
18	322-4	2	Screw-HH				
19	88-4980	1	Bushing-Arm, Idler				
20	323-7	1	Screw-HH				
21	323-9	2	Screw-HH				
22	3256-24	3	Washer-Flat				
23	107-7307	1	Guide-Idler, Belt				
24	106-2175	2	Pulley-Idler, Flat				
25	7-0030	1	Bolt-Shoulder				

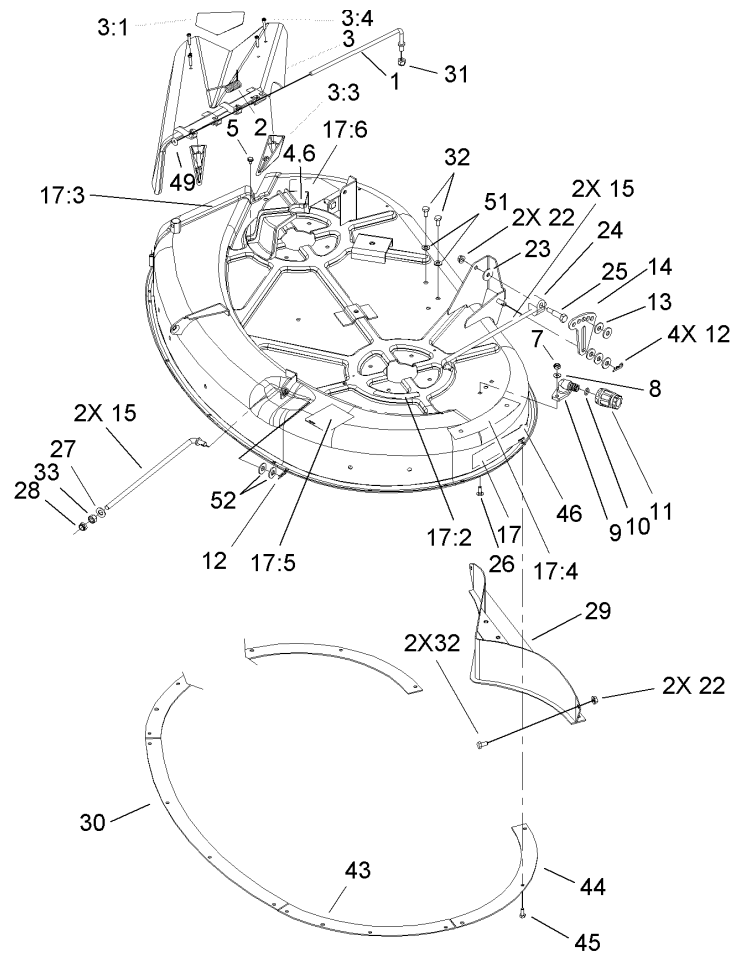


42in Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	95-1661	1	Rod-Pivot	22	32128-25	4	Nut-HF
2	57-6950	1	Spring	23	5-4460	2	Washer-Pivot
3	106-8739	1	42In Deflector ASM	24	88-4230	2	Trunnion-HOC
3:1	93-1122	1	Decal-Danger	25	7-0030	2	Bolt-Shoulder
3:3	93-7696	2	Kicker	26	3229-1	2	Screw-CARR
3:4	93-0231	4	Screw-PPH	27	3256-25	2	Washer-Flat
4	88-4030	1	Guide-Belt, LH	28	3296-38	2	Nut-Lock, NI
5	32104-76	5	Screw	29	106-6983-03	1	Rear Baffle ASM
6	88-4020	1	Guide-Belt, RH	30	106-6953-03	1	Ring-Blow Out
7	3296-16	2	Nut-Lock, NI	31	3296-39	1	Nut-Lock, NI
8	3256-1	2	Washer-Flat	32	322-2	4	Screw-HH
9	95-2747	1	Fitting-Washout	33	3219-4	2	Nut-Hex
10	46-6290	1	O-Ring	43	106-6952-03	2	Ring-Blow Out, Side
11	95-3270	1	Connector-Hose	44	106-6954-03	2	Ring-Blow Out, Side
12	9335054	8	Pin-Hair	45	321-3	19	Screw-HH
13	80-6990	10	Washer-Hardened	46	3296-42	19	Nut-Lock, NI
14	88-5570-03	2	Link-Adjusting, HOC	49	106-8745	1	O-Ring
15	105-3437	4	Rod-Hanger	51	3256-23	2	Washer-Flat
17	107-7340	1	42In Deck ASM	52	3256-4	8	Washer-Flat
17:2	68-3660	1	Decal-Danger, Shield				
17:3	68-3650	1	Decal-Danger, Deflector				
17:4	79-3140	1	Decal-Danger				
17:5	105-7015	1	Decal-Routing, Belt				
17:6	93-1122	1	Decal-Danger				

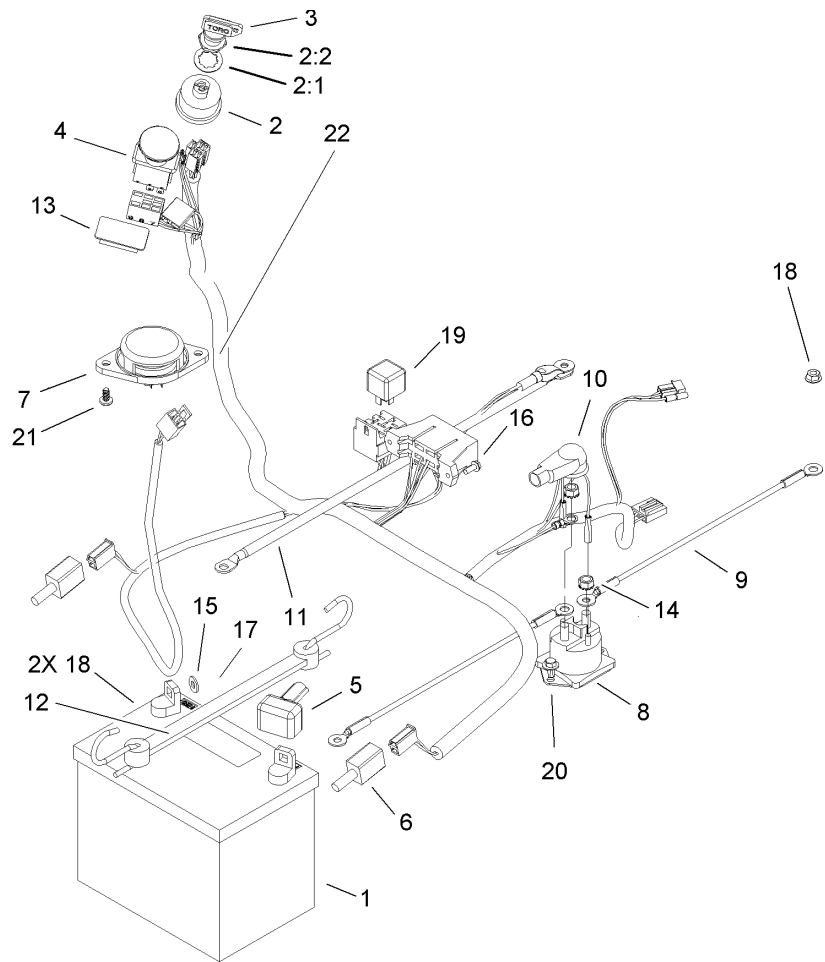

Electrical System Assembly

Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery				
2	88-9830	1	Key Switch ASM				
2:1	3254-5	1	Washer-Tooth				
2:2	218-461	1	Nut-HH				
3	63-8360	1	Key-Ignition				
4	93-9999	1	Switch-PTO				
5	28-8080	1	Boot-Terminal				
6	106-2216	2	Switch				
7	105-6959	1	Switch-Seat				
8	106-8245	1	Solenoid				
9	56-7670	2	Wire ASM				
10	93-3190	1	Boot-Insulator, Terminal				
11	95-7654	1	Cable				
12	104-2466	1	Holddown-Battery				
13	99-7420	1	Plug-Hole				
14	32149-2	2	Nut-Keps				
15	3256-22	2	Washer-Flat				
16	32144-1	3	Screw-Taptite				
17	321-4	2	Screw-HH				
18	32128-33	3	Nut-HF				
19	98-7249	1	Relay				
20	46-8560	2	Screw-HHF				
21	105-6968	2	Screw-Seat, Switch				
22	107-2500	1	Harness-Wire, 9 Amp				

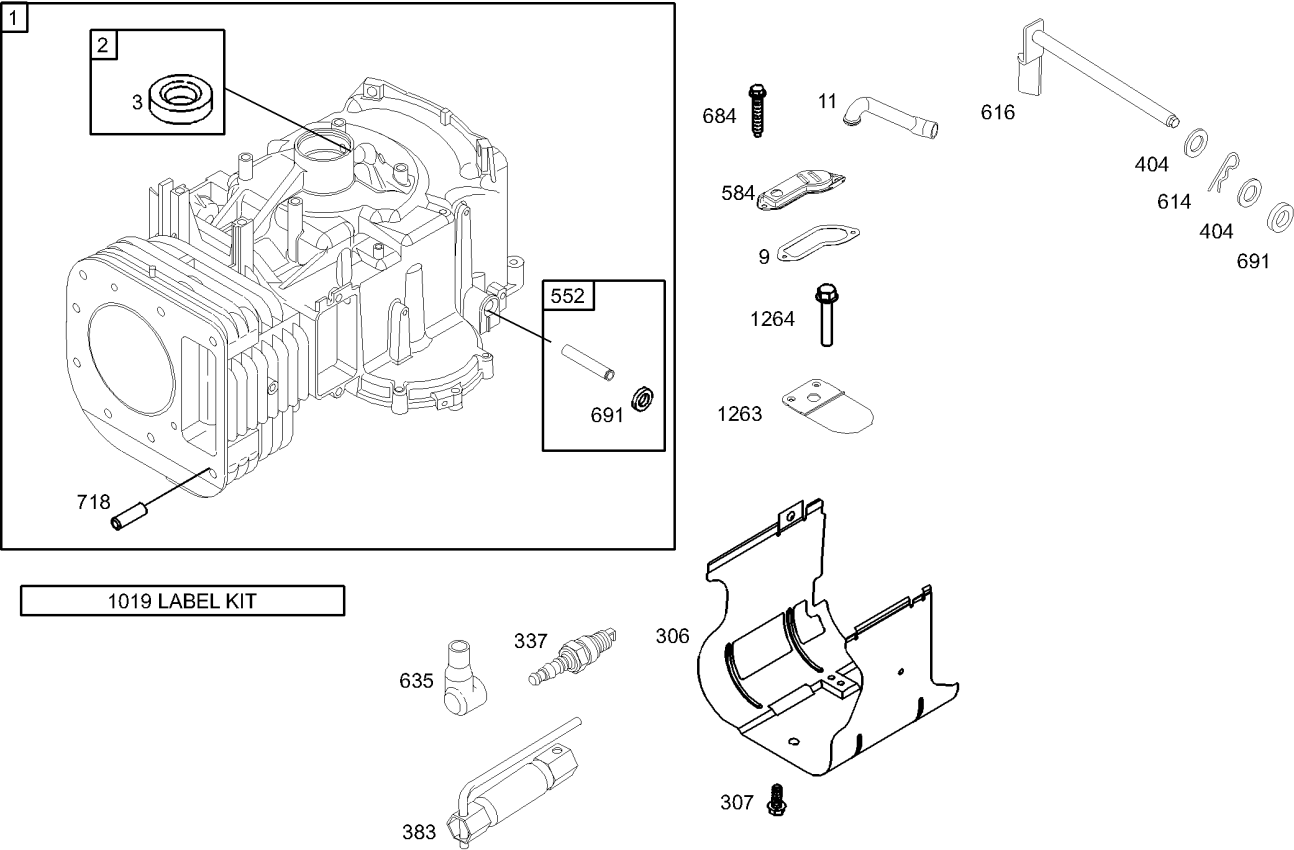


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 286H77-0165-E1


Ref	Part No.	Qty.	Description				
1	697132	1	Cylinder ASM				
2	399265	1	Bushing And Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
148	697762	1	Short Block ASM				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw				
337	691043	1	Spark Plug				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

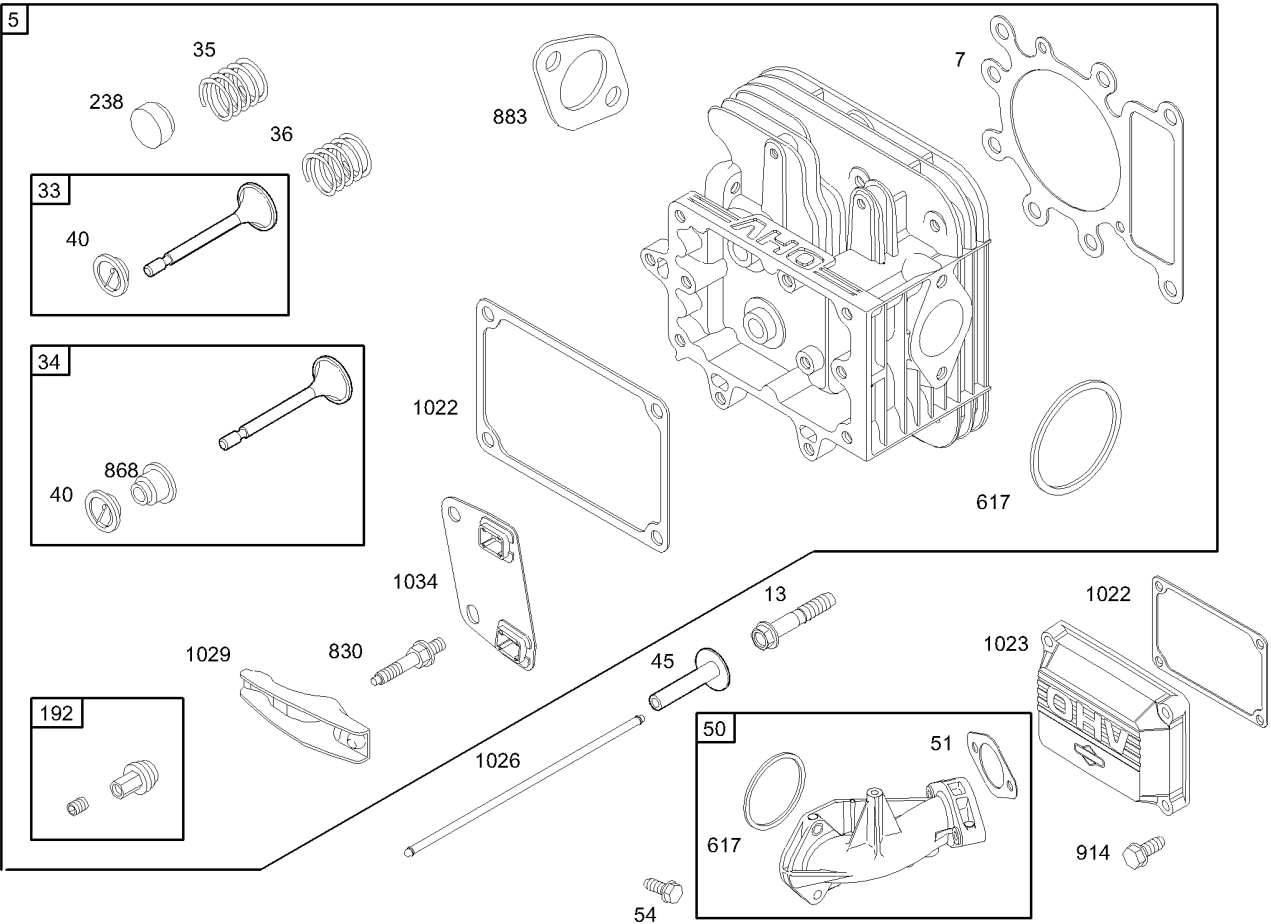

Cylinder Head Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
75	698148	1	Head-Cylinder
377	273280	1	Gasket-Head, Cylinder
713	690360	1	Screw
733	695760	1	Valve-Exhaust
734	695761	1	Valve-Intake
735	691279	1	Spring-Valve
736	691279	1	Spring-Valve
740	691752	1	Retainer-Valve
745	690564	1	Tappet-Valve
750	690193	1	Manifold-Intake
3451	692137	1	Gasket-Intake
36			
754	691148	1	Screw
7192	691986	1	Adjustor-Arm, Rocker
7238	691843	1	Cap-Valve
35617	692138	1	Seal-O Ring
7			
7830	691095	1	Stud-Arm, Rocker
34868	690968	1	Seal-Valve
7			
7883	692236	1	Gasket-Exhaust
7914	690960	1	Screw
371022	272475	1	Gasket-Cover, Rocker
71023	692492	1	Cover-Rocker

Ref	Part No.	Qty.	Description
71026	692003	1	Rod-Push
7	692011	1	Rod-Push
71029	691751	1	Arm-Rocker
71034	690822	1	Guide-Rod, Push

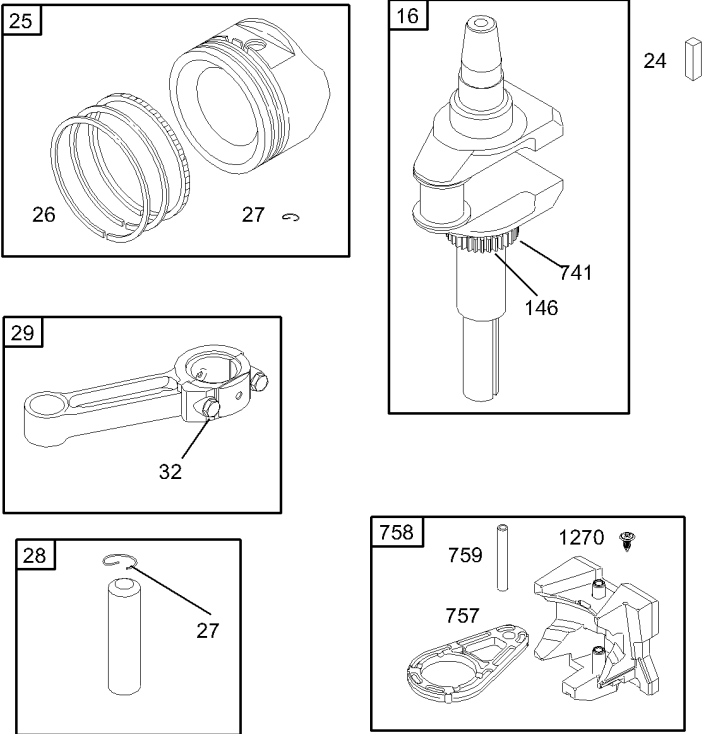


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 286H77-0165-E1


Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	697114	1	Piston ASM (Standard)				
7	697116	1	Piston Assembly (.010In Oversize)				
7	697117	1	Piston ASM (.020In Oversize)				
7	697118	1	Piston Assembly (.030In Oversize)				
26	697115	1	Ring Set (Standard)				
7	697119	1	Ring Set (.010" Oversize)				
7	697120	1	Ring Set (.020In Oversize)				
7	697121	1	Ring Set (.030" Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (STD)				
29	697126	1	Rod-Connecting (Standard)				
7	697263	1	Rod-Connecting (.020In Undersize)				
32	692852	1	Screw				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

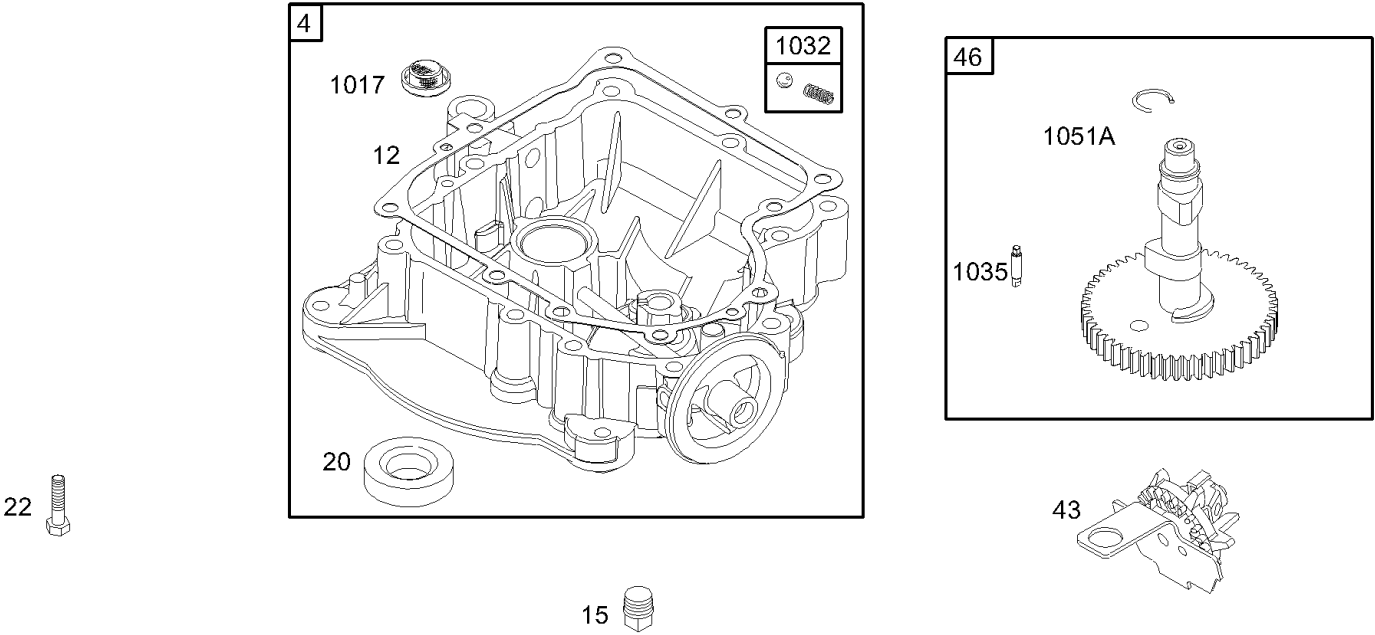

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 286H77-0165-E1


Ref	Part No.	Qty.	Description				
4	697188	1	Sump-Engine				
12	697110	1	Gasket-Crankcase				
15	690283	1	Plug-Oil				
20	690947	1	Seal-Oil				
22	692125	1	Screw				
43	691968	1	Slinger-Governor,Oil				
46	698577	1	Camshaft				
1017	690770	1	Screen-Pump, Oil				
1032	491710	1	Ball-Pump, Oil				
1035	693784	1	Shaft-Pump, Oil				
1051A	698802	1	Ring-Retaining				

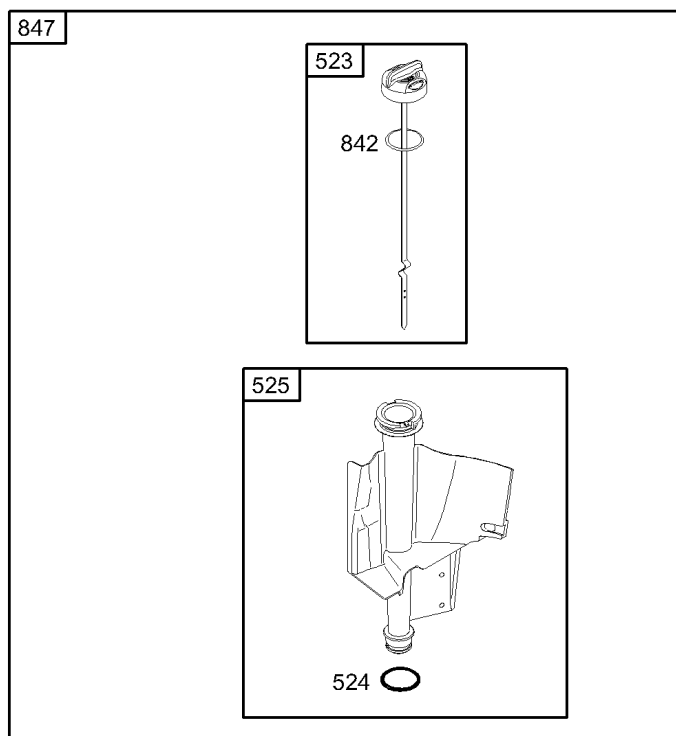

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
7523	697086	1	Dipstick
37524	691032	1	Seal-O Ring
7525	697184	1	Tube-Dipstick
37842	691031	1	Seal-O Ring
7847	697611	1	Dipstick And Tube ASM

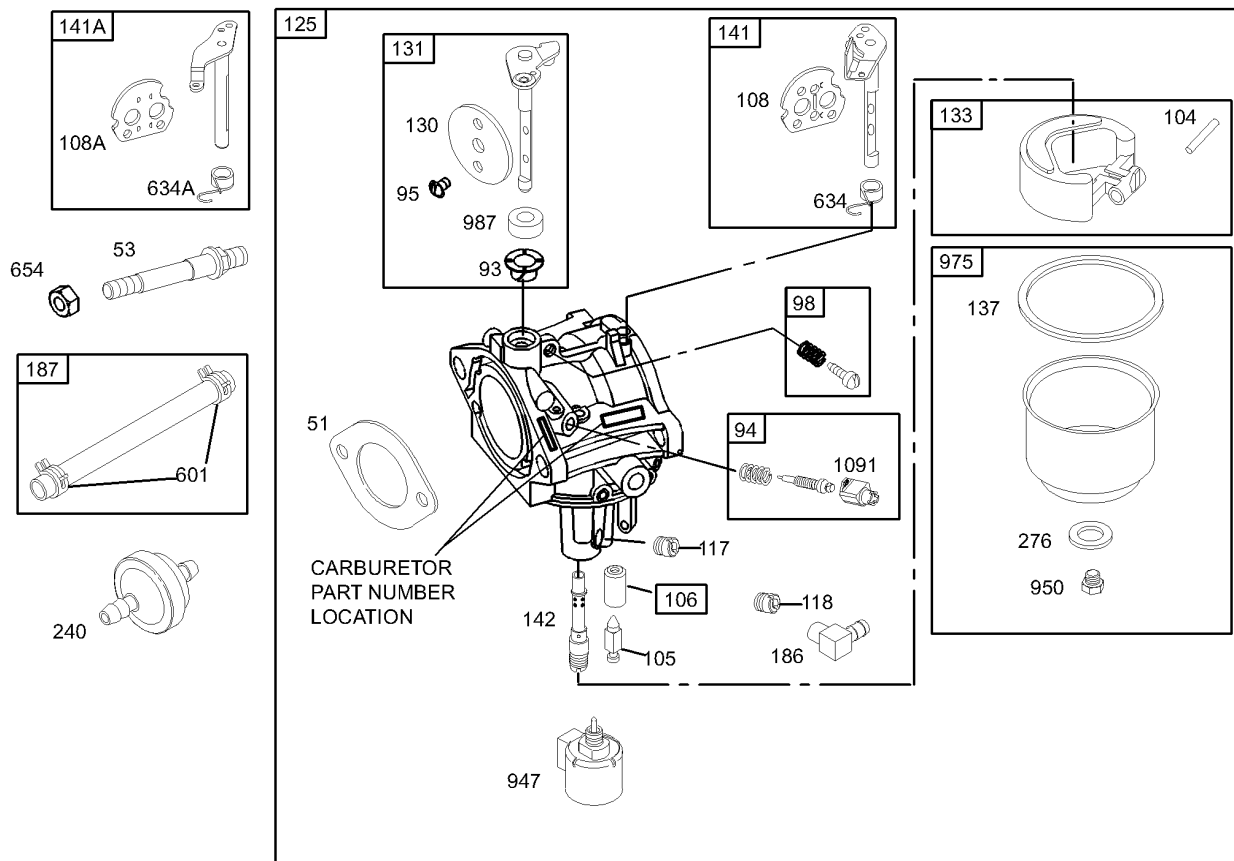


Assemblies include all parts shown in frames.

Carburetor Assembly


Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
51	692137	1	Gasket-Intake	187	697098	1	Line-Fuel
53	690227	1	Stud	240	394358	1	Filter-Fuel
93	690602	1	Bushing-Shaft, Throttle	276	692255	1	Washer-Sealing
94	498030	1	Idle Mixture Kit	601	95162	1	Clamp-Hose
95	691636	1	Screw	634	690801	1	Spring / Seal ASM
98	495800	1	Idle Speed Kit	634A	690802	1	Spring And Seal ASM
104	690525	1	Pin-Hinge, Carburetor Float	654	690958	1	Nut
105	231855	1	Valve-Needle, Float	947	694393	1	Solenoid-Fuel
106	690577	1	Seat-Inlet	950	691657	1	Screw
108	690464	1	Valve-Choke	975	495933	1	Bowl-Float
108A	692344	1	Valve-Choke	987	691326	1	Seal-Shaft, Throttle
117	694352	1	Jet-Main (STD)	1091	691333	1	Cap-Limiter
118	697228	1	Jet-Main (High Altitude)				
125	697190	1	Carburetor				
130	691750	1	Valve-Throttle				
131	494379	1	Throttle Shaft Kit				
133	494381	1	Float-Carburetor				
137	281165	1	Gasket-Bowl, Float				
141	495097	1	Choke Shaft Kit				
141A	495931	1	Choke Shaft Kit				
142	697140	1	Nozzle-Carburetor				
186	692317	1	Connector-Hose				

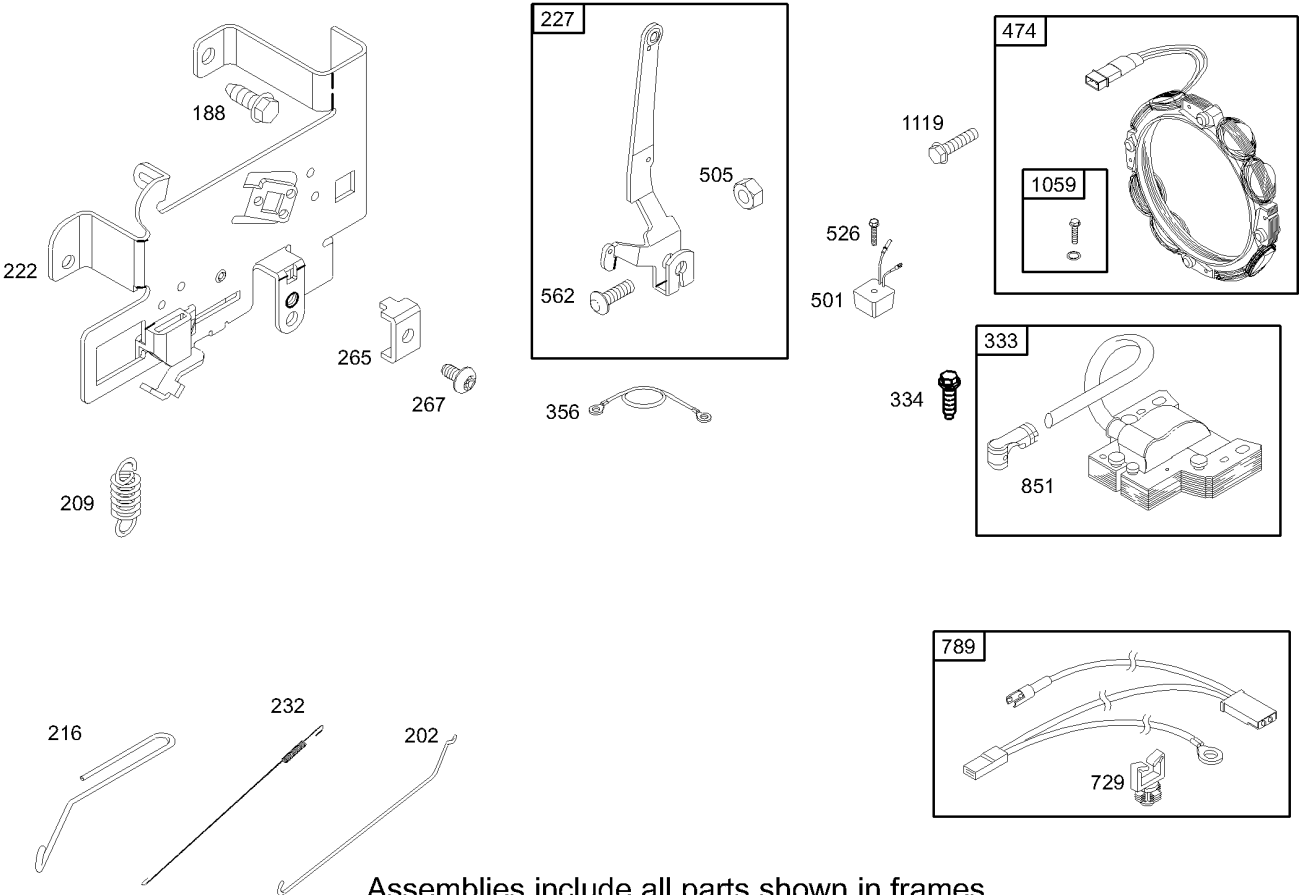

Governor Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description				
188	691693	1	Screw				
202	691841	1	Link-Governor, Mechanical				
209	692208	1	Spring-Governor				
216	691840	1	Link-Choke				
222	694042	1	Bracket-Control				
227	691374	1	Lever-Control, Governor				
232	691842	1	Spring-Link, Governor				
265	691024	1	Clamp-Casing				
267	695134	1	Screw				
333	492341	1	Armature-Magneto				
334	691061	1	Screw				
356	697089	1	Stop-Wire				
474	393329	1	Alternator-9 Amp				
474	696458	1	Alternator				
501	696385	1	Regulator-9 Amp				
501	691185	1	Regulator				
505	691251	1	Nut				
526	697348	1	Screw				
562	691119	1	Screw				
729	691335	1	Clip-Wire				
789	692037	1	Wiring-Harness				
851	692424	1	Terminal-Spark Plug				
1059	698516	1	Screw And Washer Kit				
1119	691183	1	Screw				

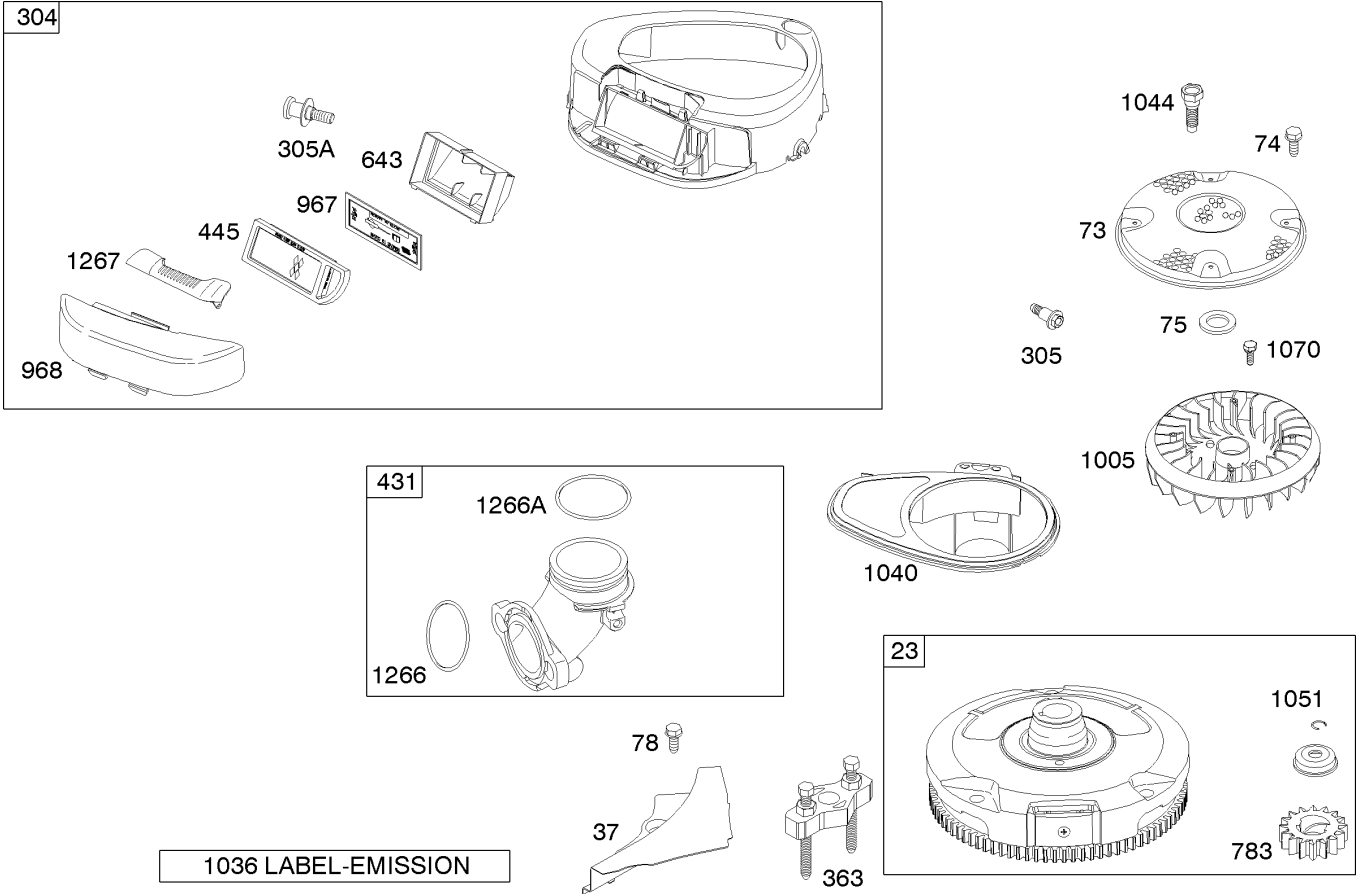


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 286H77-0165-E1



Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
723	693556	1	Flywheel	71267	697419	1	Latch-Housing, Blower
737	697352	1	Guard-Flywheel				
773	697384	1	Screen-Rotating				
774	697897	1	Screw				
775	690582	1	Washer-Flywheel				
778	691003	1	Screw				
7304	698599	1	Housing-Blower				
7305	697102	1	Screw				
7305A	697103	1	Screw				
7363	19203	1	Puller-Flywheel				
7431	697122	1	Elbow-Intake				
7445	698083	1	Filter-Cartridge, Air Cleaner				
7643	698401	1	Retainer-Filter, Air				
7783	693713	1	Gear-Pinion				
7967	697015	1	Filter-Cleaner, Pre				
7968	698403	1	Cover-Cleaner, Air				
71005	697853	1	Fan-Flywheel				
71036	695700	1	Label-Emission				
71040	698368	1	Plate-Trim				
71044	691658	1	Screw-Crankshaft Extension				
71051	691265	1	Ring-Retaining				
71070	690372	1	Screw				
71266	691917	1	Seal-O Ring				
71266A	697123	1	Seal-O Ring				

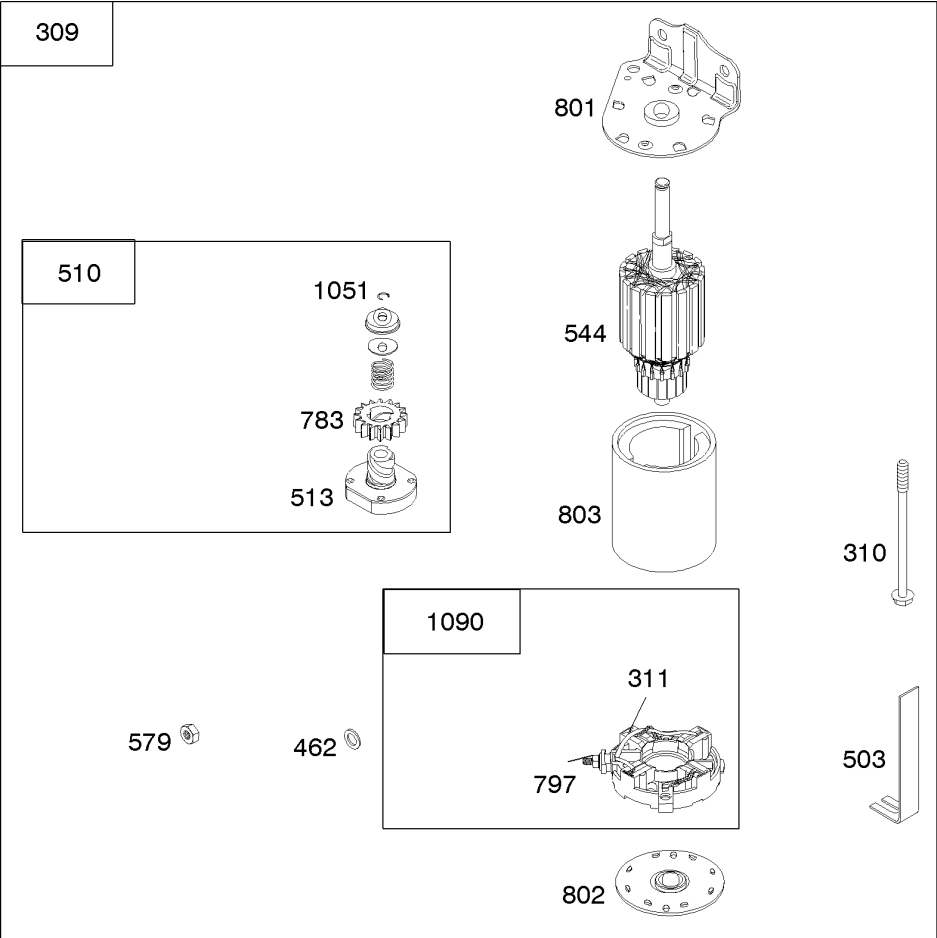

Starter Assembly

Briggs and Stratton 286H77-0165-E1



Ref	Part No.	Qty.	Description				
7309	693551	1	Motor-Starter				
7310	690323	1	Bolt				
7311	497608	1	Brush Set				
7462	691261	1	Washer				
7503	691532	1	Strap-Starter				
7510	693699	1	Drive-Starter				
7513	692024	1	Clutch-Drive				
7544	692034	1	Armature-Starter				
7579	691029	1	Nut				
7697	690372	1	Screw				
7729A	691224	1	Clip-Wire				
7729B	694123	1	Clip-Wire				
7783	693713	1	Gear-Pinion				
7797	693167	1	Nut				
7801	691283	1	Cap-Drive				
7802	691286	1	Cap-End				
7803	693757	1	Housing-Starter				
71051	691265	1	Ring-Retaining				
71090	691293	1	Retainer-Brush				

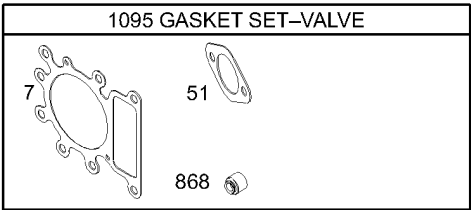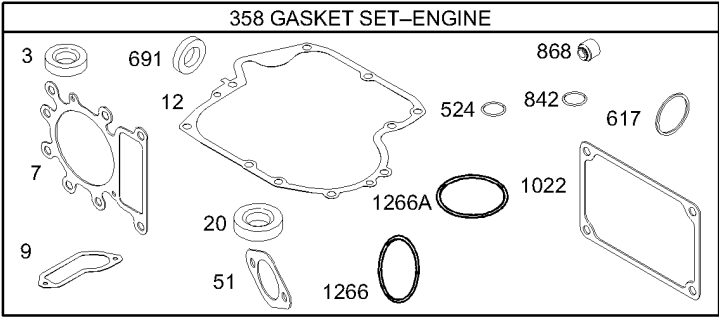

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description				
3 73	391086	1	Seal-Oil				
3 77	273280	1	Gasket-Head, Cylinder				
3 79	697109	1	Gasket-Breather				
3 712	697110	0	Gasket-Crankcase				
3 720	690947	1	Seal-Oil				
3 451	692137	1	Gasket-Intake				
3 6							
7358	697151	1	Engine Gasket Set				
3 4617	692138	1	Seal-O Ring				
3 7							
3 7524	691032	1	Seal-O Ring				
3 7691	692407	1	Seal-Shaft, Governor				
3 7842	691031	1	Seal-O Ring				
3 5868	690968	1	Seal-Valve				
7							
3 71022	272475	1	Gasket-Cover, Rocker				
71095	691581	1	Valve Gasket Set				
3 51266	691917	1	Seal-O Ring				
7							
3 51266A	697123	1	Seal-O Ring				
7							

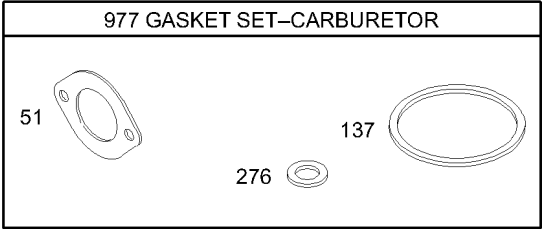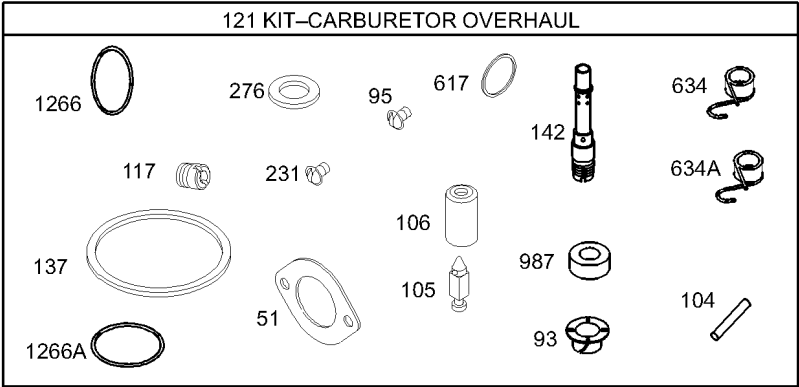

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description				
3451	692137	1	Gasket-Intake				
36							
3793	690602	1	Bushing-Shaft, Throttle				
3795	691636	1	Screw				
37104	690525	1	Pin-Hinge, Carburetor Float				
37105	231855	1	Valve-Needle, Float				
37106	690577	1	Seat-Inlet				
37117	694352	1	Jet-Main (STD)				
7121	697154	1	Carburetor Overhaul Kit				
36137	281165	1	Gasket-Bowl, Float				
7							
37142	697140	1	Nozzle-Carburetor				
37231	691636	1	Screw				
36276	692255	1	Washer-Sealing				
7							
35617	692138	1	Seal-O Ring				
7							
37634	690801	1	Spring / Seal ASM				
37634A	690802	1	Spring And Seal ASM				
7977	690192	1	Carburetor Gasket Set				
37987	6916326	1	Seal-Throttle Shaft				
351266	691917	1	Seal-O Ring				
7							
351266A	697123	1	Seal-O Ring				
7							

NOTES



NEW HOLLAND ..