



Z Master[®] G3 Riding Mower with 60in TURBO FORCE[®] Side Discharge Mower

Model No. 74965CP - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame, Caster Wheel and Z Stand Assembly	 4	Idler Assembly	 28
Roll-Over Protection System Assembly No. 116-0232	 5	Spindle Assembly No. 117-3840	 29
Caster Wheel and Fork Assembly	 6	Lever Assembly No. 107-1664	 30
Z Stand Assembly	 7	Rubber Deflector Assembly No. 108-2792	 31
Hydraulic Pump, Idler and Belt Assembly	 8	Cylinder and Crankcase Assembly Kawasaki FXT00V-AS06	 32
Pump Idler Assembly No. 116-1255	 9	Piston and Crankshaft Assembly Kawasaki FXT00V-AS06	 33
RH Hydro Assembly No. 116-1383	 10	Valve and Camshaft Assembly Kawasaki FXT00V-AS06	 34
LH Hydro Assembly No. 116-1382	 11	Lubrication Equipment Assembly Kawasaki FXT00V-AS06	 35
Rear Wheel and Park Brake Assembly	 12	Cooling Equipment Assembly Kawasaki FXT00V-AS06	 36
Brake Handle Assembly No. 116-1878	 13	Electric Equipment Assembly Kawasaki FXT00V-AS06	 37
Fuel System Assembly	 14	Control Equipment Assembly Kawasaki FXT00V-AS06	 38
Fuel Tank Assembly No. 109-9357	 15	Carburetor Assembly Kawasaki FXT00V-AS06	 39
Seat Mounting Assembly	 16	Air Filter and Muffler Assembly Kawasaki FXT00V-AS06	 40
Seat Assembly No.109-9903	 17	Fuel Tank and Fuel Valve Assembly Kawasaki FXT00V-AS06	 41
Motion Control Assembly	 18	Starter Assembly Kawasaki FXT00V-AS06	 42
Fender, Console and Control Assembly	 19	Label Set Kawasaki FXT00V-AS06	 43
LH Console Assembly No. 115-7401	 20	Attachments and Accessories List	 44
RH Console Assembly No. 115-7400	 21		
Electrical System Assembly	 22		
Deck Lift Assembly	 23		
Height-of-Cut Assembly No. 109-7438	 24		
Engine, Muffler and Clutch Assembly	 25		
Deck Assembly	 26		
Deck Decal Assembly No. 112-4180	 27		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HWHTF.	hex washer head thread forming
ASM.	assembly	HYD.	hydraulic
BBC.	blade brake clutch	LH.	left hand
CARR.	carriage	NI.	nylon insert
CCW.	counter clock wise	NPTF.	national pipe thread fine
CW.	clockwise	PFH.	phillips flat head
DEG.	degrees	PPH.	phillips pan head
ECM.	electronic control module	PPHTF.	phillips pan head thread forming
EXT.	external	PRH.	phillips round head
FH.	flat head	PTH.	phillips truss head
GA.	gauge	PTO.	power-take-off
HD.	heavy-duty	RH.	right hand
HF.	hex flange	ROPS.	roll-over protection system
HH.	hex head	SFH.	slotted fillister head
HHF.	hex head flange	SHH.	slotted hex head
HHFTF.	hex head flange thread forming	SHWH.	slotted hex washer head
HJ.	hex jam	SPH.	slotted pan head
HLH.	hex lag head	SQH.	square head
HOC.	height-of-cut	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head		

Footnotes

- ❶ Not illustrated
- ❸ Obtain parts from www.kawpowerepc.com


- ❷ Not serviced separately

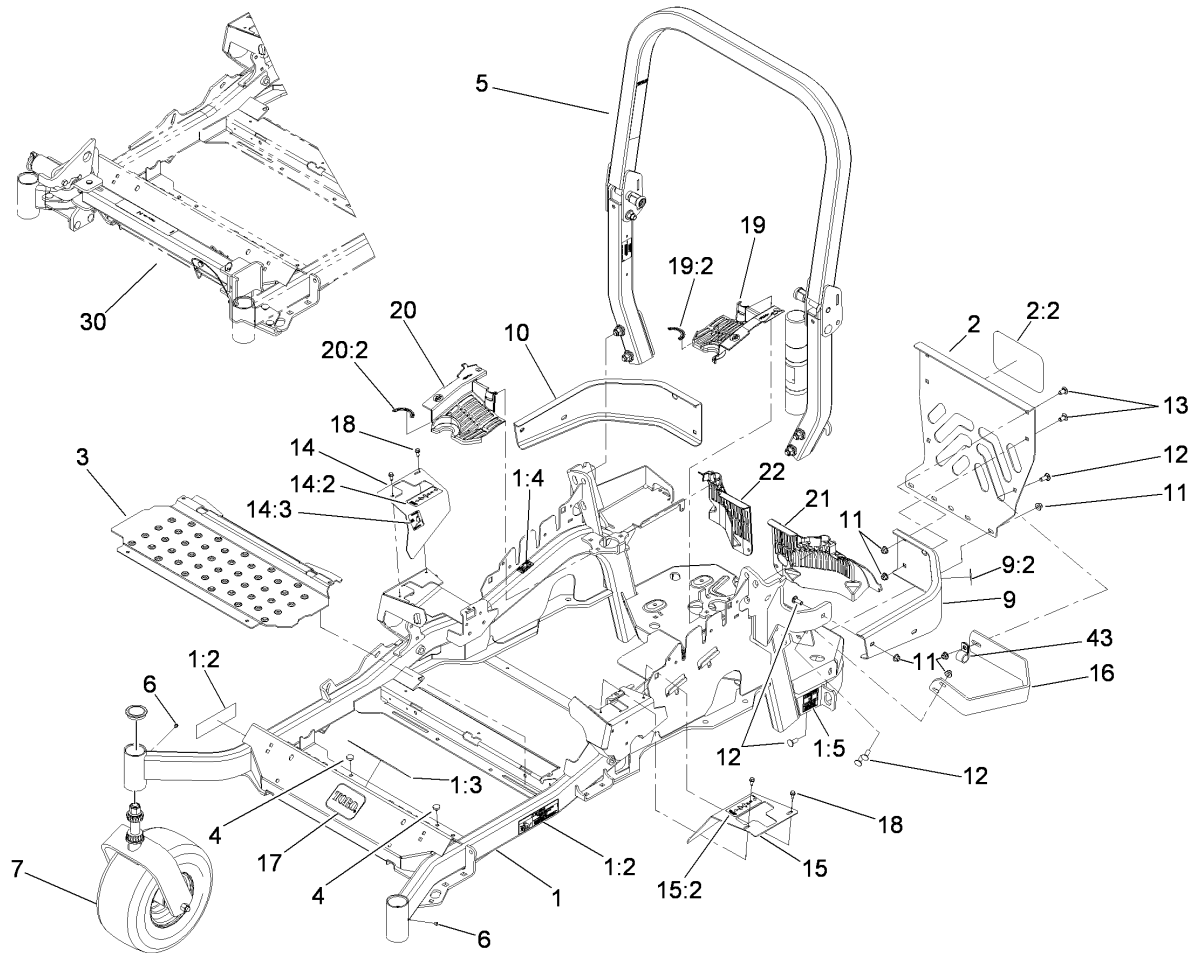

Front Frame, Caster Wheel and Z Stand Assembly


Ref	Part No.	Qty.	Description
1	109-7347	1	Main Frame ASM
1:2	109-9477	2	Decal-Warning
1:3	107-2112	1	Decal-Warning
1:4	103-2076	2	Decal-Caution
1:5	116-0205	2	Decal-Belt Drive
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	116-0024-01	1	Floorpan
4	1-513658	2	Bumper
5	116-0232	1	ROPS ASM
6	1-811010	2	Plug
7		2	Caster Wheel ASM
9	116-0180	1	LH Bumper ASM
9:2	103-2076	1	Decal-Caution
10	116-0057-03	1	Bumper-RH
11	104-8301	11	Nut-Flange, NI
12	3231-22	7	Screw-CARR
13	3231-21	4	Screw-CARR
14	116-0579	1	RH Motion Control Cover ASM
14:2	109-7232	1	Decal-Motion Control
14:3	109-7929	1	Decal-Park Brake
15	116-0580	1	LH Motion Control Cover ASM
15:2	109-7232	1	Decal-Motion Control
16	116-0043-03	1	Guard-Muffler

Ref	Part No.	Qty.	Description
17	68-3640	1	Decal
18	32144-10	4	Screw-HWH
19	116-0170	1	LH Hydro Guard ASM
19:2	116-0157	1	Decal-Hydro Oil
20	116-0171	1	RH Hydro Guard ASM
20:2	116-0157	1	Decal-Hydro Oil
21	109-9057	1	Guard-Hydro, Rear LH
22	109-9058	1	Guard-Hydro, Rear RH
30		1	Z Stand ASM
43	1-633396	1	Clip-Loom

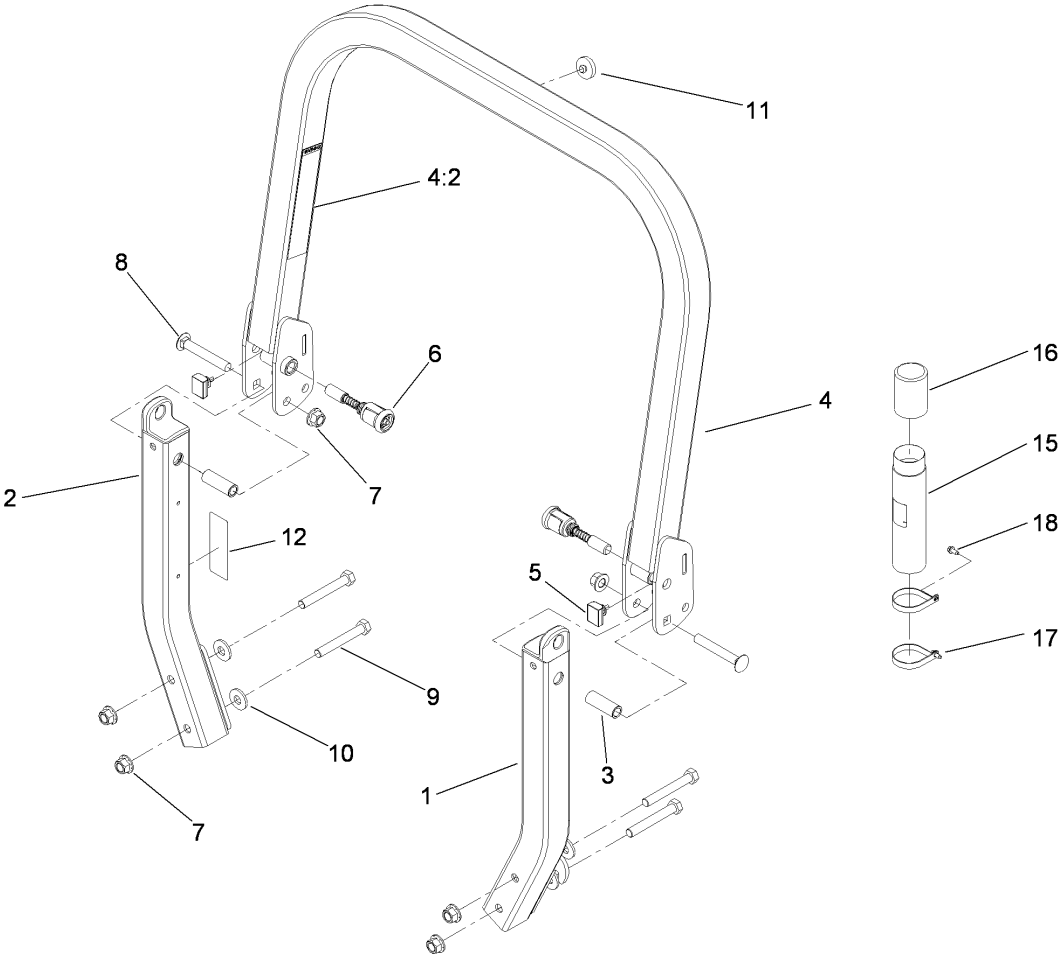


Roll-Over Protection System Assembly No. 116-0232

Ref	Part No.	Qty.	Description				
1		1	Leg-ROPS, LH				
2		1	Leg-ROPS, RH				
3	109-6653	2	Spacer				
4		1	Upper ROPS ASM				
4:2	107-3069	1	Decal-Warning, Folding ROPS				
5	109-5337	2	Bumper-ROPS				
6	116-0104	2	Spring Pin ASM				
7	99-5107	6	Nut-Lock				
8	3233-10	2	Screw-CARR				
9	325-17	4	Screw-HH				
10	109-9505	4	Washer-Spring				
11	109-9233	1	Bumper-Push-In, Rubber				
12	117-0346	1	Decal-Caution, Fuel Vent				
15	104-7050	1	Tube-Manual				
16	104-7048	1	Cap-Housing				
17	107-1865	2	R-Clamp				
18	32144-10	2	Screw-HWH				

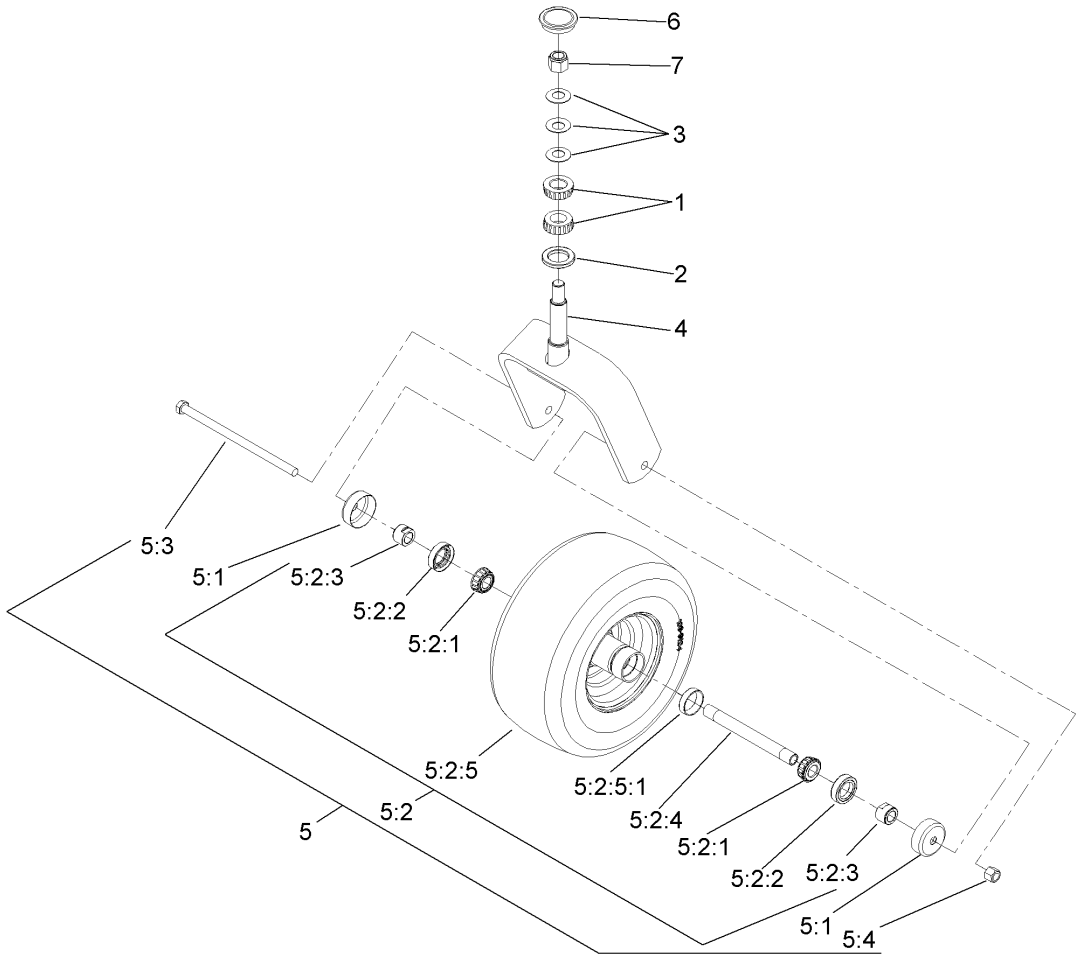


Caster Wheel and Fork Assembly

Ref	Part No.	Qty.	Description				
1	1-543509	2	Bearing-Roller, Tapered				
2	1-543511	1	Seal-Grease				
3	1-633508	3	Washer-Bellville				
4	103-1474-01	1	Caster-Fork				
5	109-9127	1	Wheel And Tire ASM				
5:1	103-2768	2	Guard-Seal				
5:2		1	Wheel And Tire ASM				
5:2:1	1-633585	2	Bearing-Cone, Taper				
5:2:2	103-0063	2	Seal-Caster				
5:2:3	103-3051	2	Spacer-Nut				
5:2:4	103-5156	1	Axle-Caster				
5:2:5	109-9124	1	Wheel And Tire ASM				
5:2:5:1	1-633584	1	Bearing-Cup				
5:3	325-39	1	Screw-HH				
5:4	3296-23	1	Nut-Lock, NI				
6	103-4882	1	Cap-Grease				
7	3296-51	1	Nut-Lock, NI				

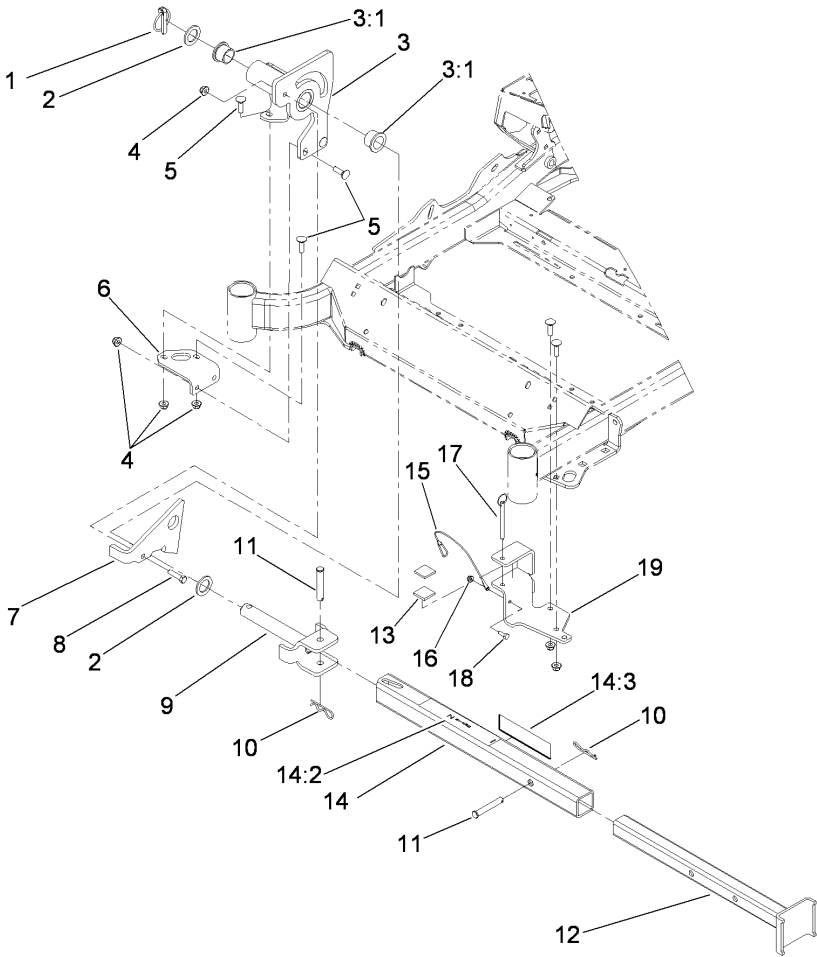


Z Stand Assembly

Ref	Part No.	Qty.	Description				
1	283-71	1	Pin-Lynch				
2	3-6781	2	Washer-Thrust				
3	115-3635	1	Z Stand Pivot ASM				
3:1	94-1291	2	Bushing				
4	104-8301	8	Nut-Flange, NI				
5	3231-25	7	Screw-CARR				
6	115-3619-01	1	Bracket-Pivot, Mount				
7	100-9686-01	1	Bracket-Latch				
8	323-8	1	Screw-HH				
9	100-9692-01	1	Pivot Pin ASM				
10	3290-355	2	Pin-Hair				
11	283-55	2	Pin-Clevis				
12	115-3631-01	1	Inner Tube ASM				
13	115-3613	2	Cushion Rubber				
14	115-3634	1	Outer Tube ASM				
14:2	106-7464	1	Decal-Z Stand				
14:3	107-3969	1	Decal-Warning				
15	100-9385	1	Lanyard-Nylon				
16	104-7201	1	Nut-HF				
17	105-1647	1	Pin-Hitch, Cotterless				
18	321-4	1	Screw-HH				
19	115-3625-01	1	Z Stand Cradle ASM				

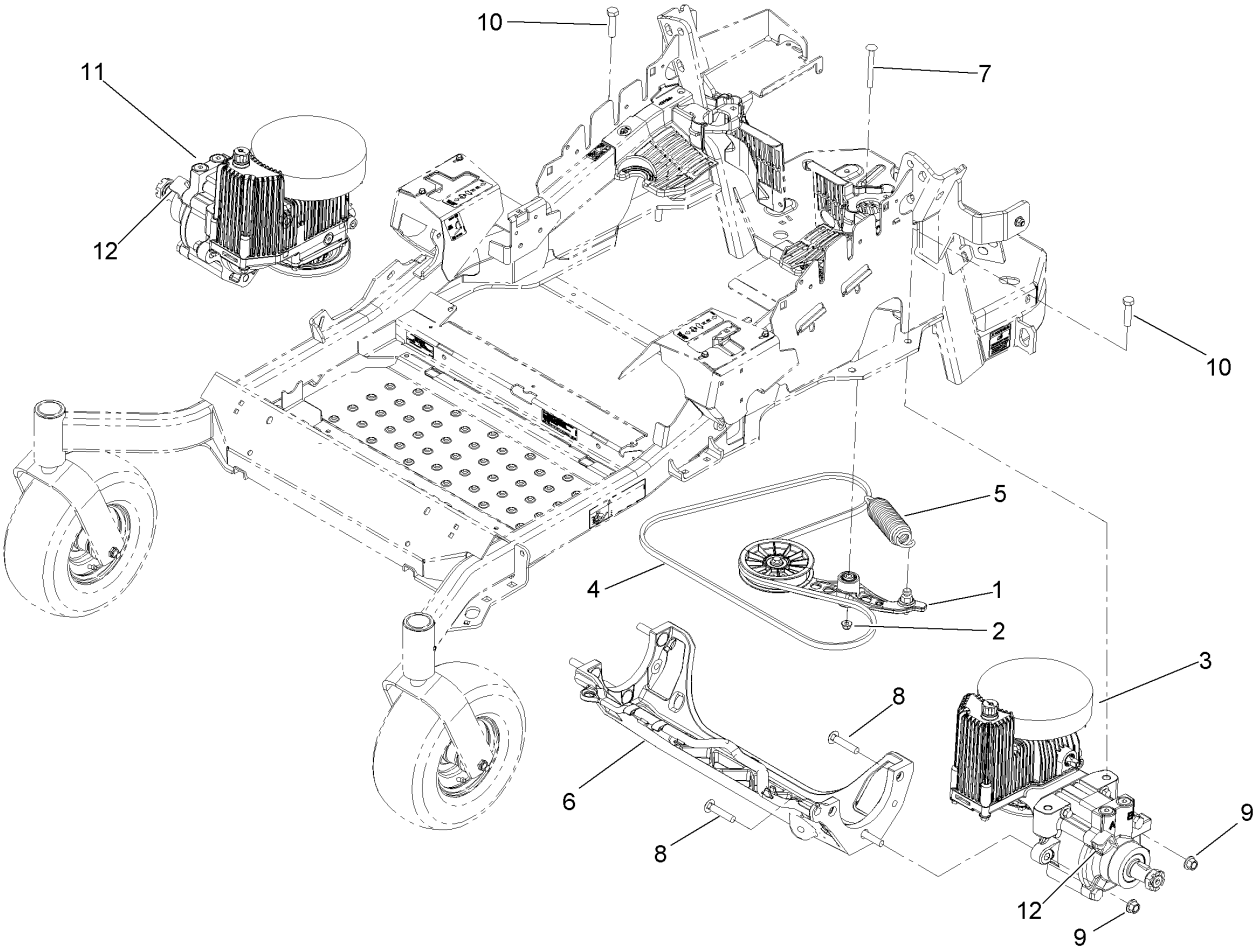


Hydraulic Pump, Idler and Belt Assembly

Ref	Part No.	Qty.	Description				
1	116-1255	1	Pump Idler ASM				
2	109-6658	1	Nut-Flange, NI (Split)				
3	116-1382	1	LH Hydro ASM (16Cc W/Shock)				
4	109-3388	1	Belt				
5	116-0133	1	Extension-Spring				
6	109-9375	1	Cradle-Hydro, Machined				
7	3231-41	1	Bolt-Carriage				
8	3233-34	6	Screw-CARR				
9	99-5107	6	Nut-Lock				
10	325-8	4	Screw-HH				
11	116-1383	1	RH Hydro ASM (16Cc W/Shock)				
12	116-1758	2	Bracket-Anchor, Cable				
●99	114-4713	1	Hypr-Oil 500 (Quart)				
●99	114-4714	1	Hypr-Oil 500 (Gallon)				
●99	114-4715	1	Hypr-Oil 500-5 (5 Gallon)				
●99	117-0390	1	Filter-Hydro				

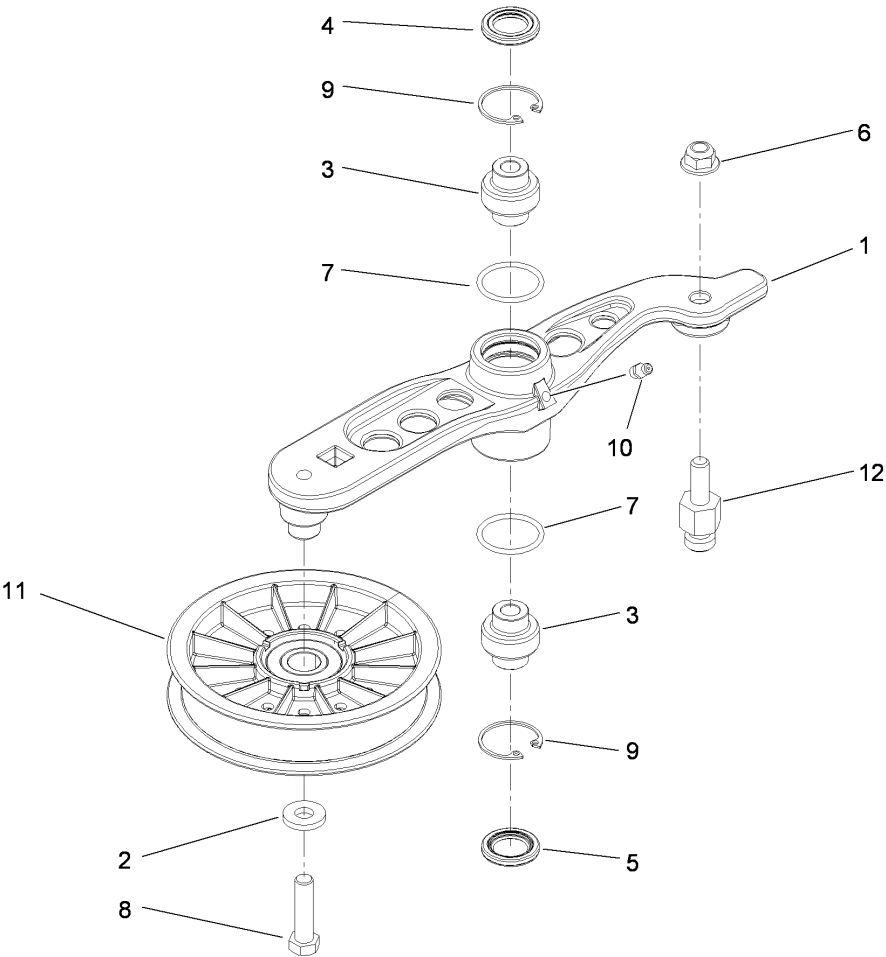


Pump Idler Assembly No. 116-1255

Ref	Part No.	Qty.	Description				
1		1	Arm-Pump, Idler				
2	43-0940	1	Spacer-Hub, Blower				
3	103-3504	2	Bearing-Spherical				
4	103-3505	1	Seal-Double Lip				
5	103-3506	1	Seal-Single Lip				
6	109-6658	1	Nut-Flange, NI (Split)				
7	106-7159	2	O-Ring				
8	323-8	1	Screw-HH				
9	32120-10	2	Ring-Snap				
10	302-19	1	Fitting-Grease				
11	109-8076	1	Pulley-Idler				
12	109-7399	1	Pin-Anchor, Spring				

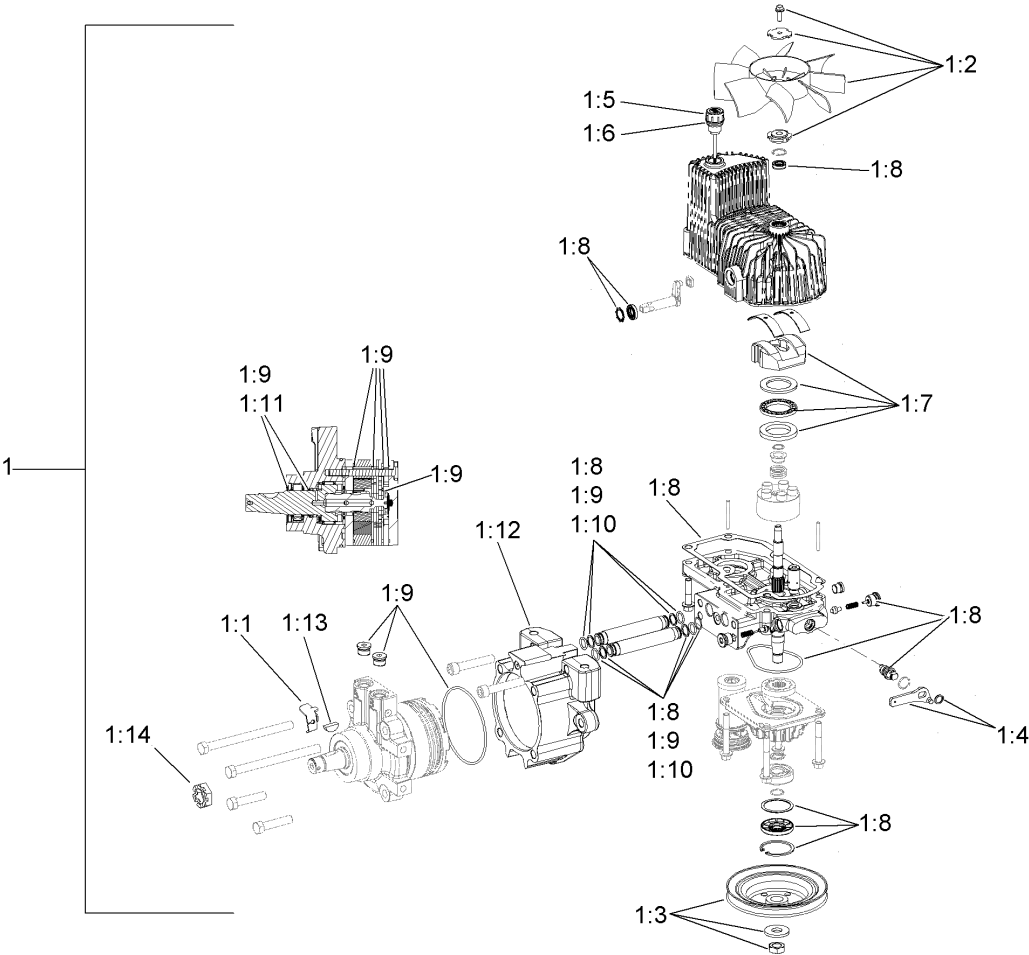


RH Hydro Assembly No. 116-1383

Ref	Part No.	Qty.	Description				
② 1		1	Hydro-LH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
① 1:99	116-1373	1	Flow Test Kit				

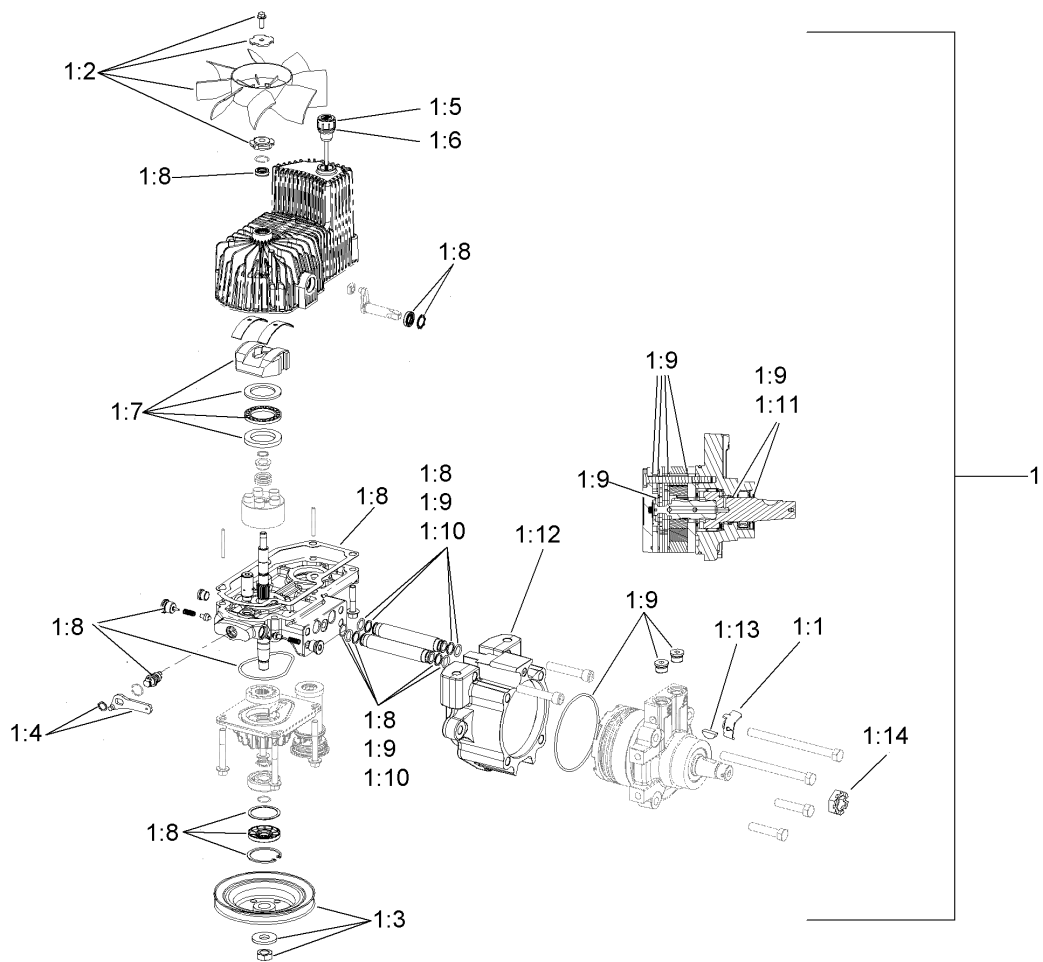


LH Hydro Assembly No. 116-1382

Ref	Part No.	Qty.	Description				
② 1		1	Hydro-RH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
① 1:99	116-1373	1	Flow Test Kit				

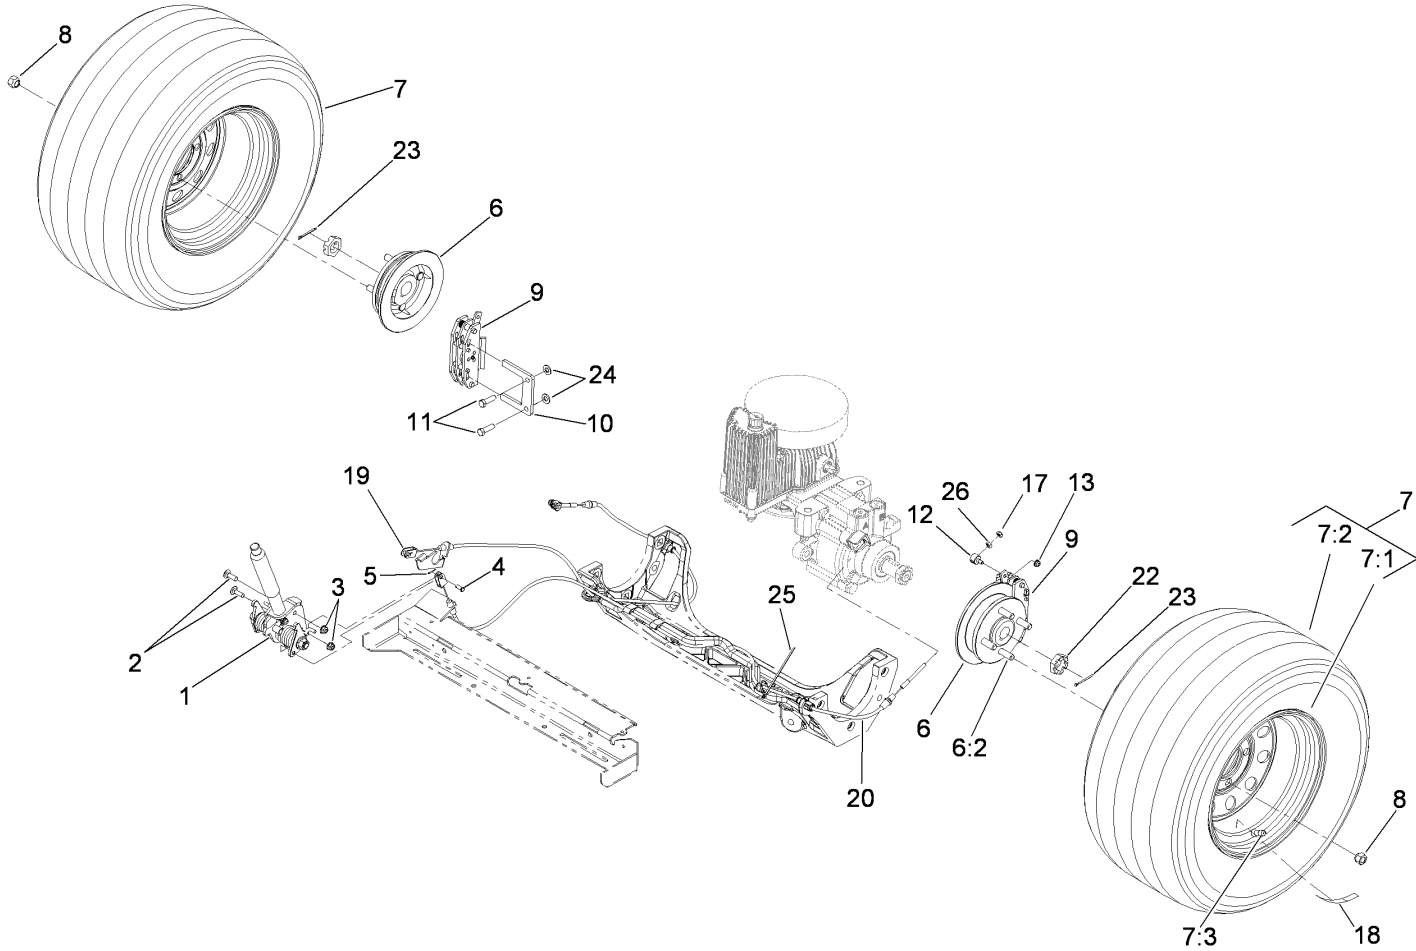


Rear Wheel and Park Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	116-1878	1	Brake Handle ASM	25	116-0940	1	Tie-Cable
2	3230-2	2	Bolt-CARR	26	3219-1	2	Nut-Hex
3	104-8300	2	Nut-Flange, NI				
4	60-1730	2	Pin-Clevis				
5	3272-1	2	Pin-Cotter				
6	117-6163	2	Wheel Hub And Stud ASM				
6:2	1-633926	4	Stud-Wheel				
7	109-3248	2	Wheel And Tire ASM				
7:1	109-2871	1	Rim ASM				
7:2	103-2744	1	Tire				
7:3	232-27	1	Stem-Valve				
8	242-50	8	Nut-Lug				
9	109-2889	2	Caliper-Brake				
10	109-0958	2	Plate-Mount, Brake				
11	323-7	4	Screw-HH				
12	112-8379	2	Swivel				
13	104-7201	2	Nut-HF				
17	3296-13	2	Nut-Lock NI				
18	116-0165	2	Decal-Hub, Wheel				
19	115-3584	1	Cable				
20	115-3585	1	Cable				
22	1-809036	2	Nut-HH				
23	1-806800	2	Pin-Cotter				
24	3256-24	4	Washer-Flat				

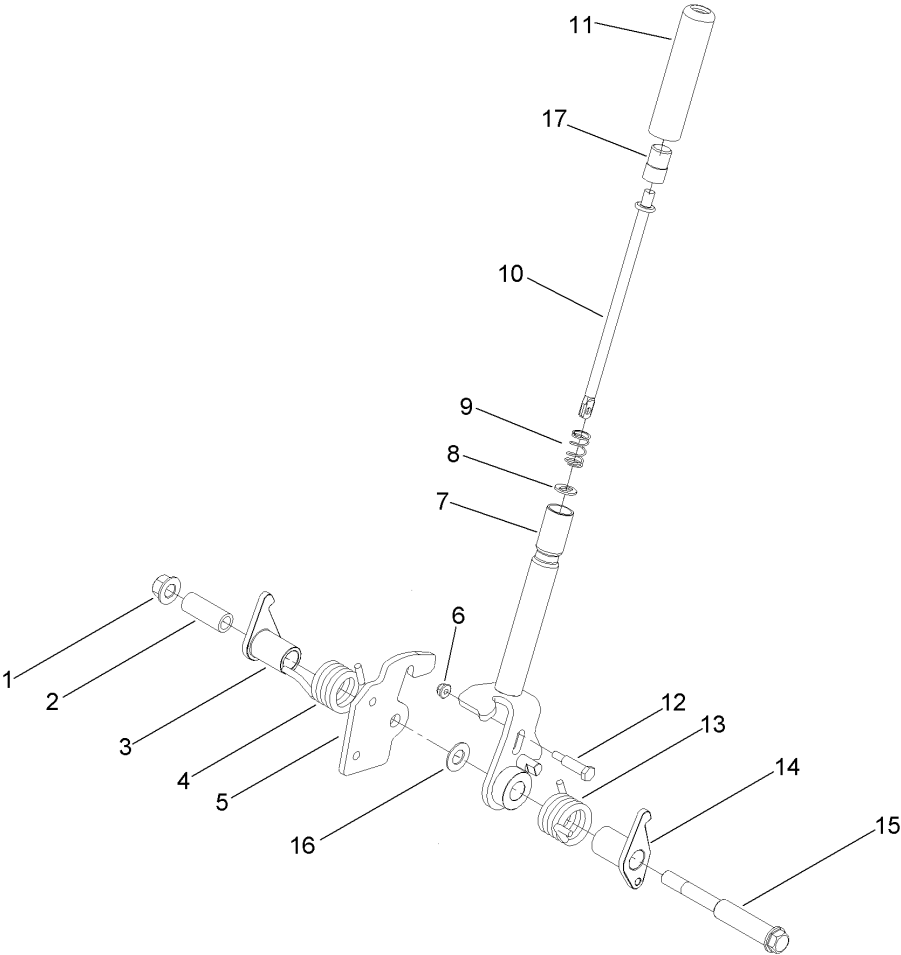


Brake Handle Assembly No. 116-1878

Ref	Part No.	Qty.	Description				
1	99-5107	1	Nut-Lock				
2	117-0380	1	Spacer				
3	115-3580	1	Arm-Brake, LH				
4	117-0376	1	Spring-Torsion, RH				
5	115-3574	1	Plate-Latch				
6	104-7201	1	Nut-HF				
7	116-1876-03	1	Brake Handle ASM				
8	114-1207	1	Washer-Special				
9	114-8187	1	Spring-Compression				
10	115-3581	1	Rod-Release, Brake				
11	115-3592	1	Grip				
12	112-8387	1	Bolt-Shoulder				
13	117-0375	1	Spring-Torsion, LH				
14	115-3579	1	Arm-Brake, RH				
15	117-0379	1	Bolt-Shoulder				
16	117-0378	1	Washer				
17	115-2750	1	Knob				

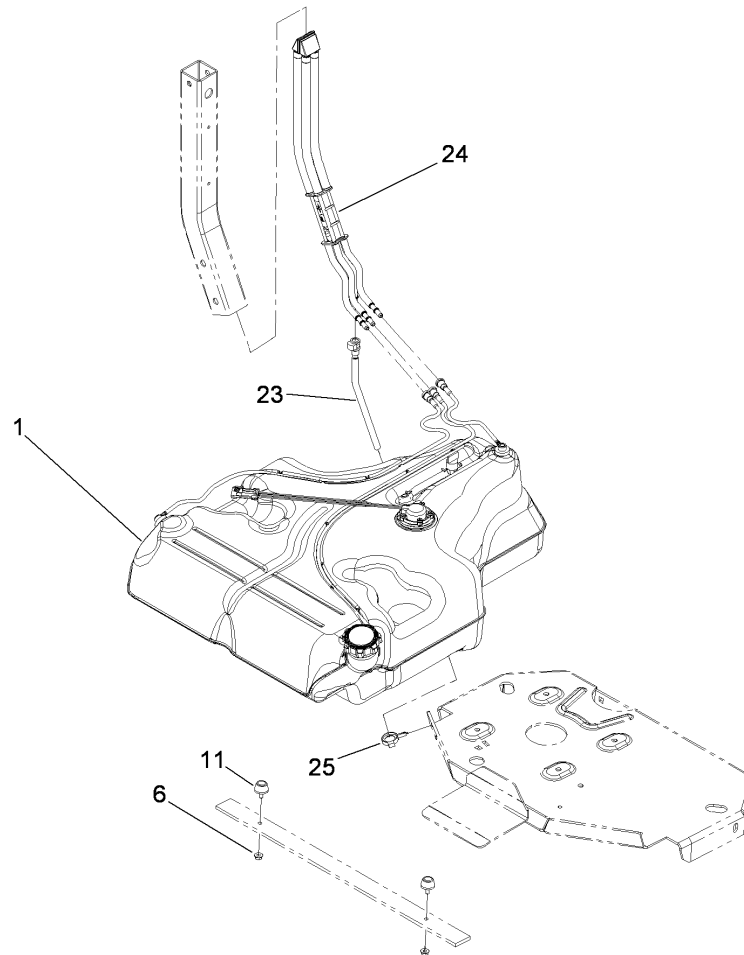


Fuel System Assembly

Ref	Part No.	Qty.	Description
1	109-9656	1	Fuel Tank ASM (W/O Sender)
1	109-9357	1	Fuel Tank ASM
6	32128-33	2	Nut-HF
11	109-2365	2	Bumper-Rubber (W/Stud)
23	109-9450	1	Tube-Vent, Fuel Drain
24	109-9491	1	Fuel Manifold Vent ASM
25	105-1853	1	Clamp-Hose

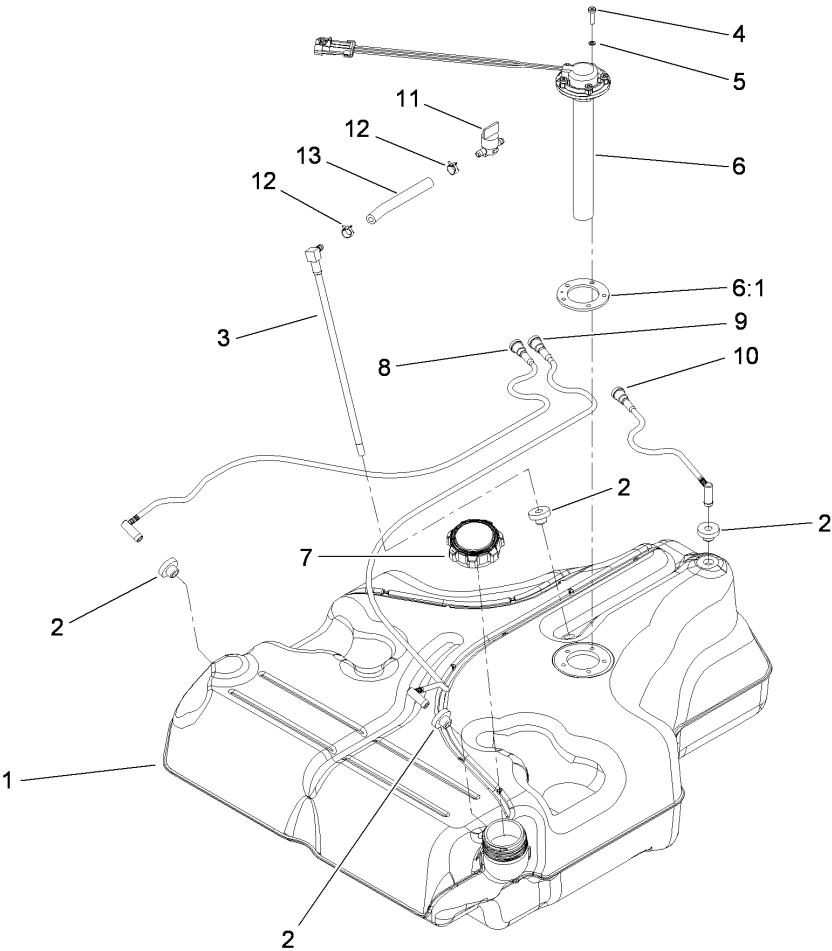


Fuel Tank Assembly No. 109-9357

Ref	Part No.	Qty.	Description				
1		1	Tank-Fuel, Belly				
2	46-6560	4	Bushing				
3	109-9364	1	Fitting-Fuel (W/Line And Screen)				
4	9107944	5	Screw-Pan				
5	3253-17	5	Washer-Lock				
6	116-0003	1	Sender-Fuel Level				
6:1	109-9620	1	Gasket-Sender, Fuel				
7	109-9619	1	Cap-Fuel				
8	109-9447	1	Tube-Vent, RH				
9	109-9448	1	Tube-Vent, LH				
10	109-9449	1	Tube-Vent, Rear				
11	1-603770	1	Valve-Fuel				
12	2412-98	2	Clamp				
13	109-0650	1	Hose-Fuel				

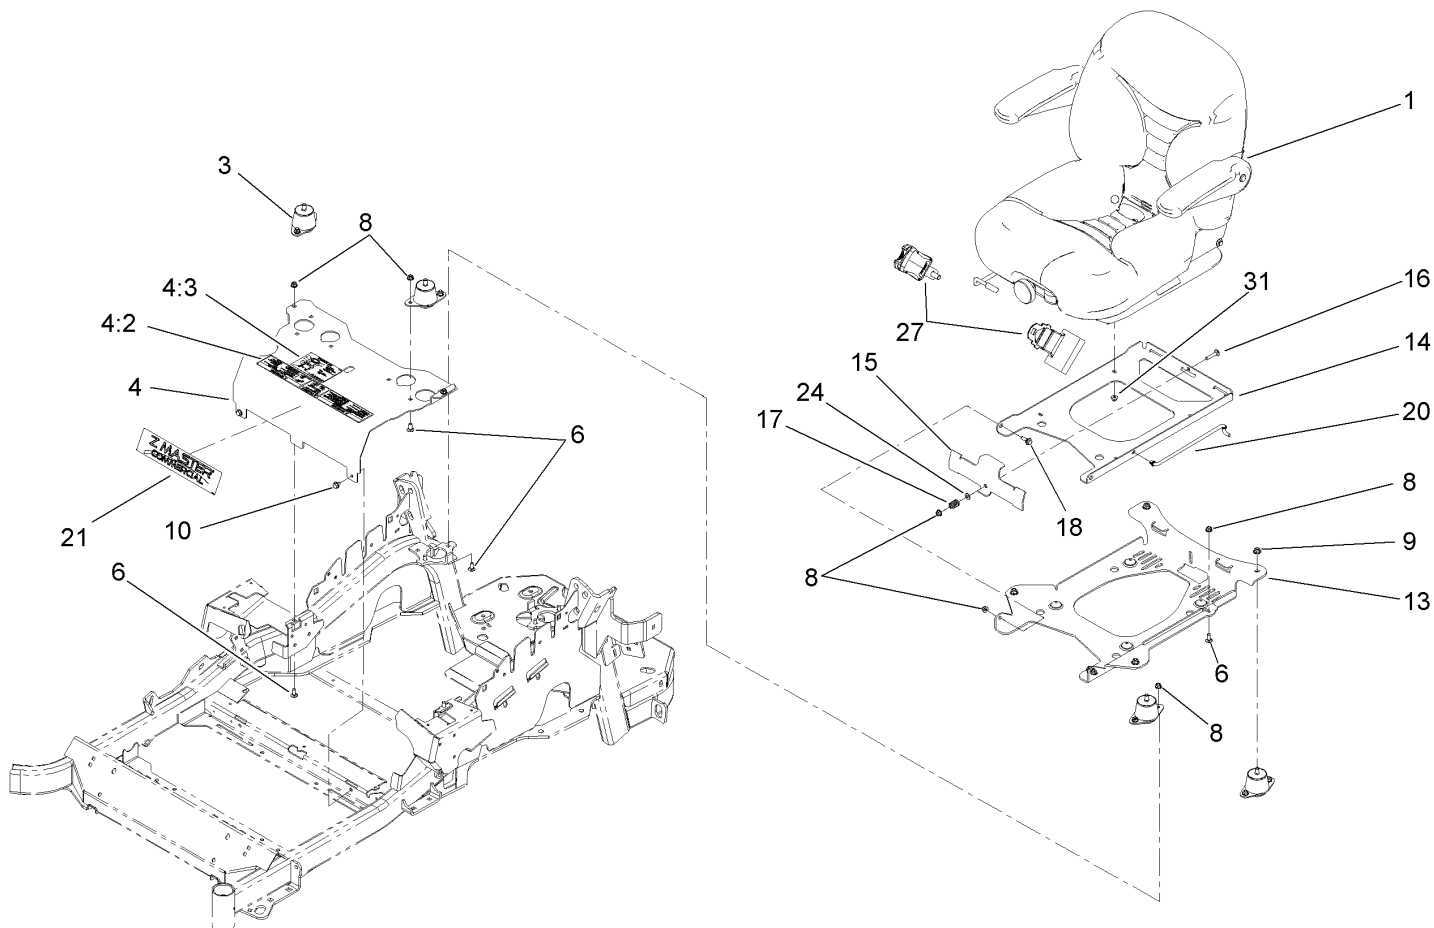


Seat Mounting Assembly

Ref	Part No.	Qty.	Description
1	109-9903	1	Seat ASM
3	109-9034	4	Isolator-Seat
4	109-9036	1	Mount-Seat
4:2	109-7069	1	Decal-Console
4:3	116-0211	1	Decal-Service Aid
6	3230-23	11	Screw-CARR
8	104-8300	14	Nut-Flange, NI
9	104-8301	4	Nut-Flange, NI
10	9266934	2	Screw
13	116-0181-03	1	Plate-Support, Seat Tilt
14	116-0179-03	1	Plate-Frame, Seat Tilt
15	109-9881-03	1	Plate-Latch, Seat
16	3230-4	1	Screw-CARR
17	107-3017	1	Spring-Compression
18	116-1297	2	Screw, Shoulder
20	116-0070	1	Rod-Prop
21	114-5878	1	Decal-Dash
24	3256-23	1	Washer-Flat
27	116-0751	1	Seat Belt Kit (Short)
31	32128-25	4	Nut-HF

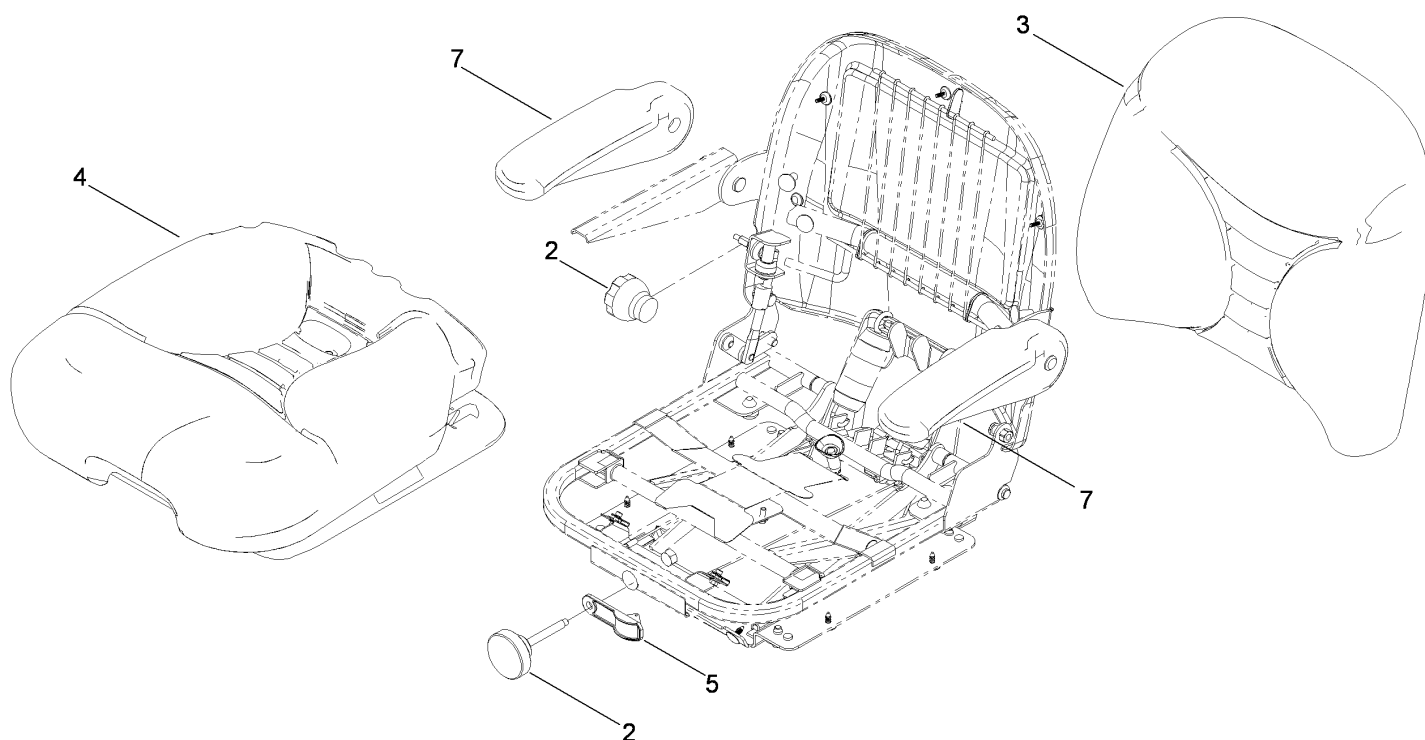

Seat Assembly No.109-9903


Ref	Part No.	Qty.	Description
2	107-1881	1	Knob Kit
3	107-1882	1	Back Cushion Kit
4	107-1883	1	Bottom Cushion Kit
5	107-1885	1	Weight Indicator Kit
7	107-1887	1	Armrest Kit

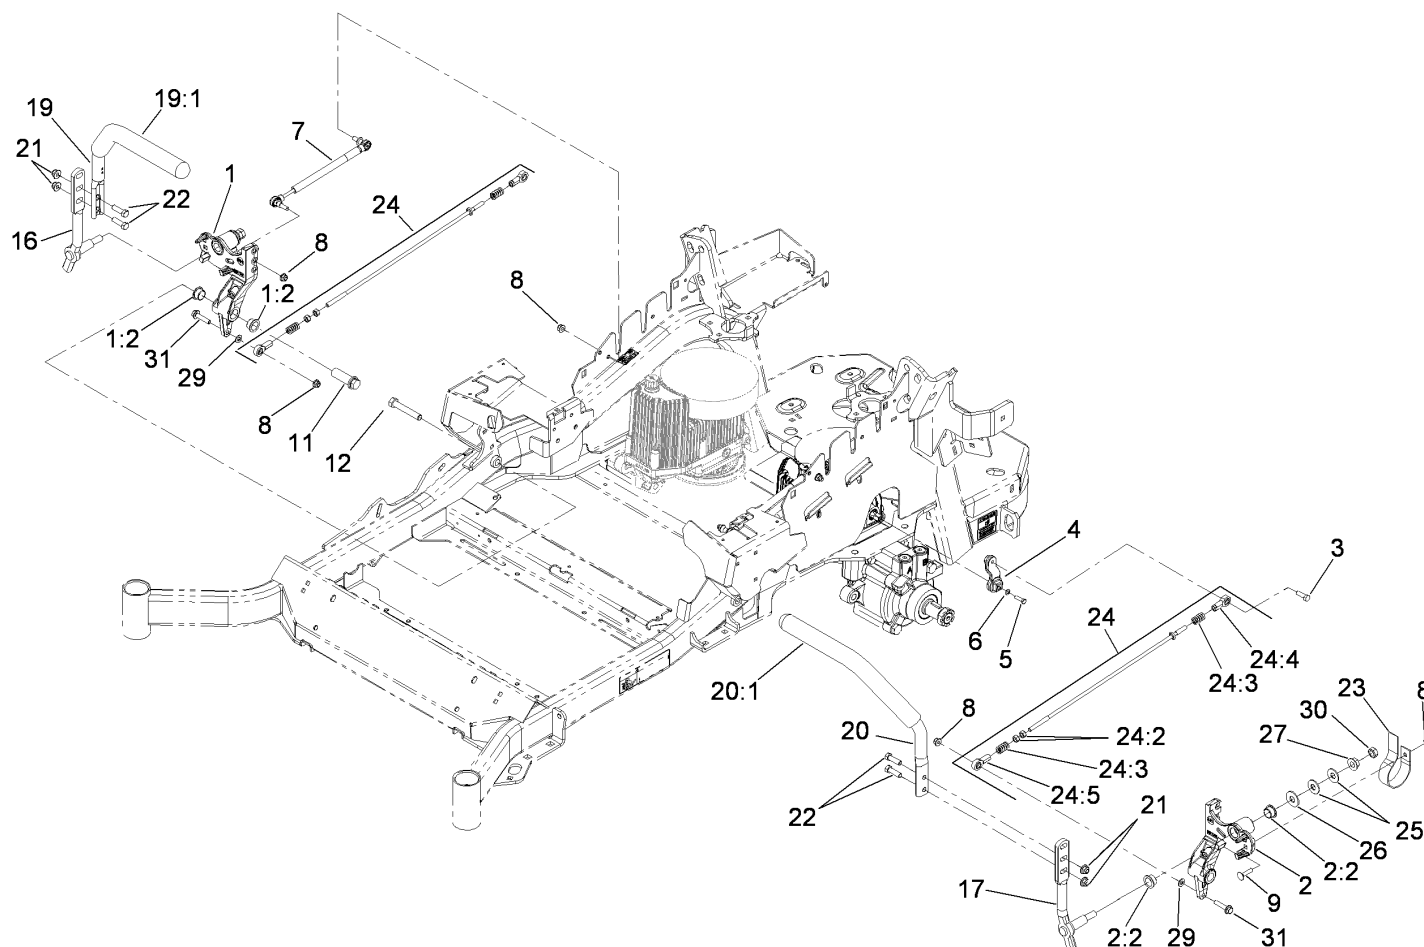

Motion Control Assembly


Ref	Part No.	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-Thread Locking
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH
6	1-303435	2	Washer-Spring
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Flange, NI
9	3230-2	2	Bolt-CARR
11	109-5891	2	Hub-Threaded
12	325-12	2	Screw-HH
16	116-0039	1	Lever-Control Motion, RH
17	116-0040	1	Lever-Control Motion, LH
19	109-6591	1	RH Steering Handle ASM
19:1	106-9987	1	Grip-Control, Motion
20	109-6592	1	LH Steering Handle ASM
20:1	106-9987	1	Grip-Control, Motion
21	104-8301	4	Nut-Flange, NI
22	323-7	4	Screw-HH
23	109-5575	2	Spring-Leaf

Ref	Part No.	Qty.	Description
24	109-8106	2	Front Pump Linkage ASM
24:2	3219-2	2	Nut-Hex
24:3	1-323245	2	Spring-Compression
24:4	1-633152	1	Balljoint-LH
24:5	1-543017	1	Balljoint-RH
25	109-9505	4	Washer-Spring
26	3256-6	2	Washer-Flat
27	32128-56	2	Nut-HF
29	3256-23	2	Washer-Flat
30	3218-5	2	Nut-Jam
31	115-1794	2	Screw-HHF

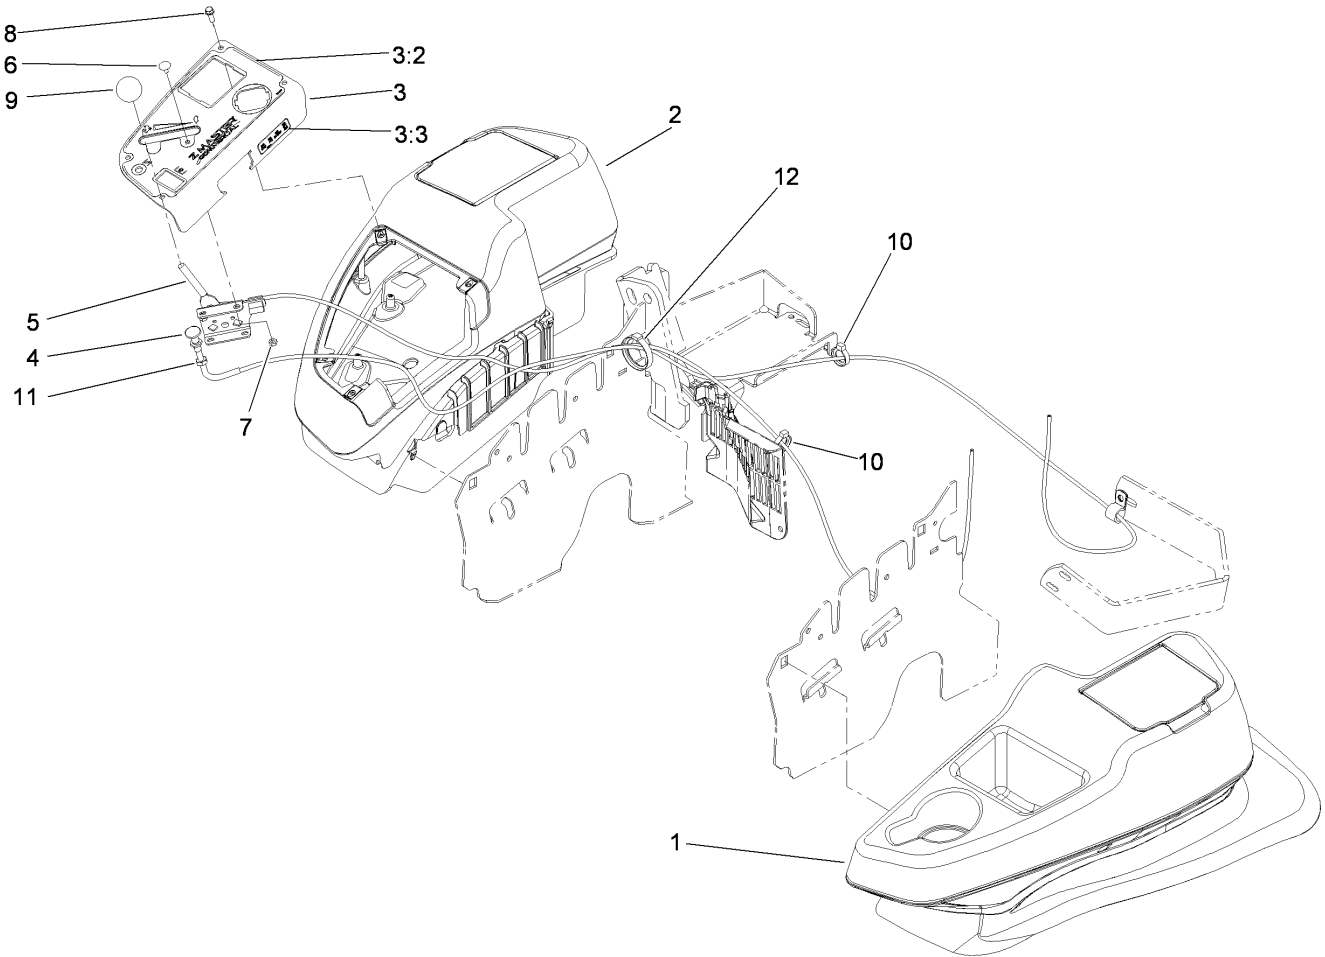


Fender, Console and Control Assembly

Ref	Part No.	Qty.	Description				
1	115-7401	1	LH Wide Fender/Console ASM				
2	115-7400	1	RH Wide Fender/Console ASM				
3	114-9836	1	Control Panel ASM				
3:2	114-9834	1	Decal-Panel, Control				
3:3	114-4466	1	Decal-Fuses				
4	115-2754	1	Control-Choke ASM				
5	115-2751	1	Control-Throttle ASM				
6	1-807513	2	Bolt-CARR				
7	3296-2	2	Nut-Lock, NI				
8	32105-15	4	Screw				
9	1-603175	1	Knob-Ball				
10	105-1853	3	Clamp-Hose				
11	3220-3	1	Nut-HJ				
12	117-7817	1	Clamp-Harness				

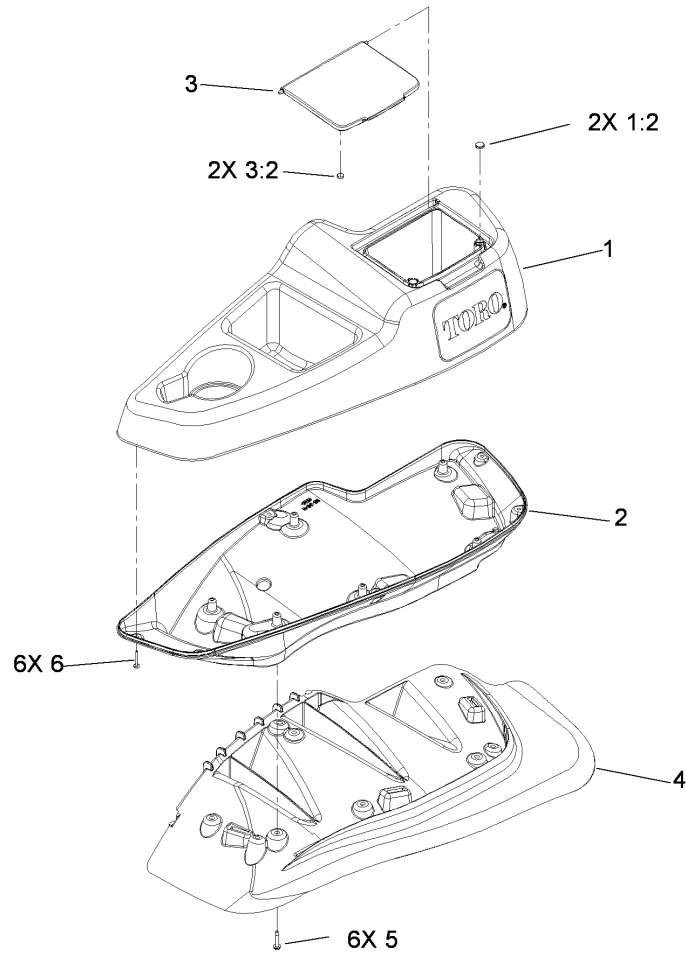


LH Console Assembly No. 115-7401

Ref	Part No.	Qty.	Description				
1	114-1539	1	LH Wide Console Top ASM				
1:2	117-0883	2	Puck				
2	115-3641	1	Console-Lwr, LH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9085	1	Fender-Wide, LH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

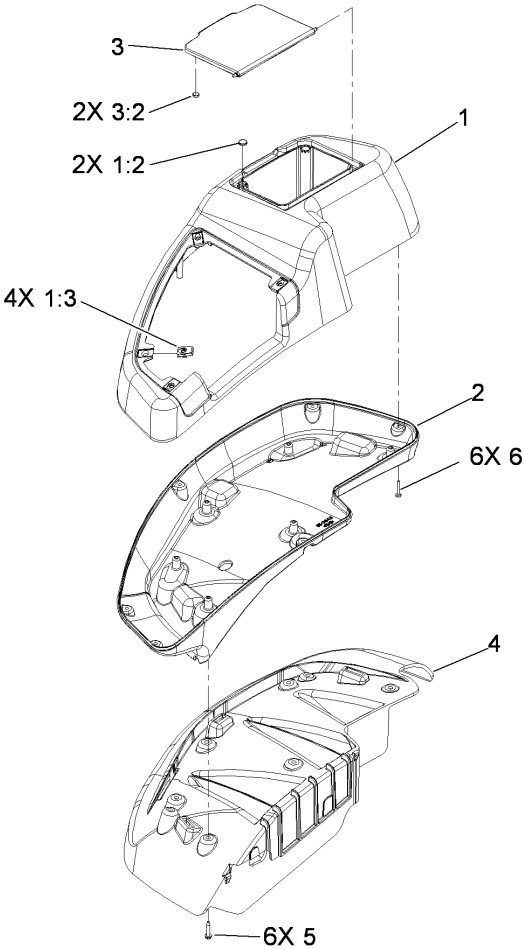

RH Console Assembly No. 115-7400


Ref	Part No.	Qty.	Description				
1	114-1538	1	RH Wide Top Console ASM				
1:2	117-0883	2	Puck				
1:3	107069	4	Clip				
2	115-3643	1	Console-Lwr, RH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9083	1	Fender-Wide, RH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

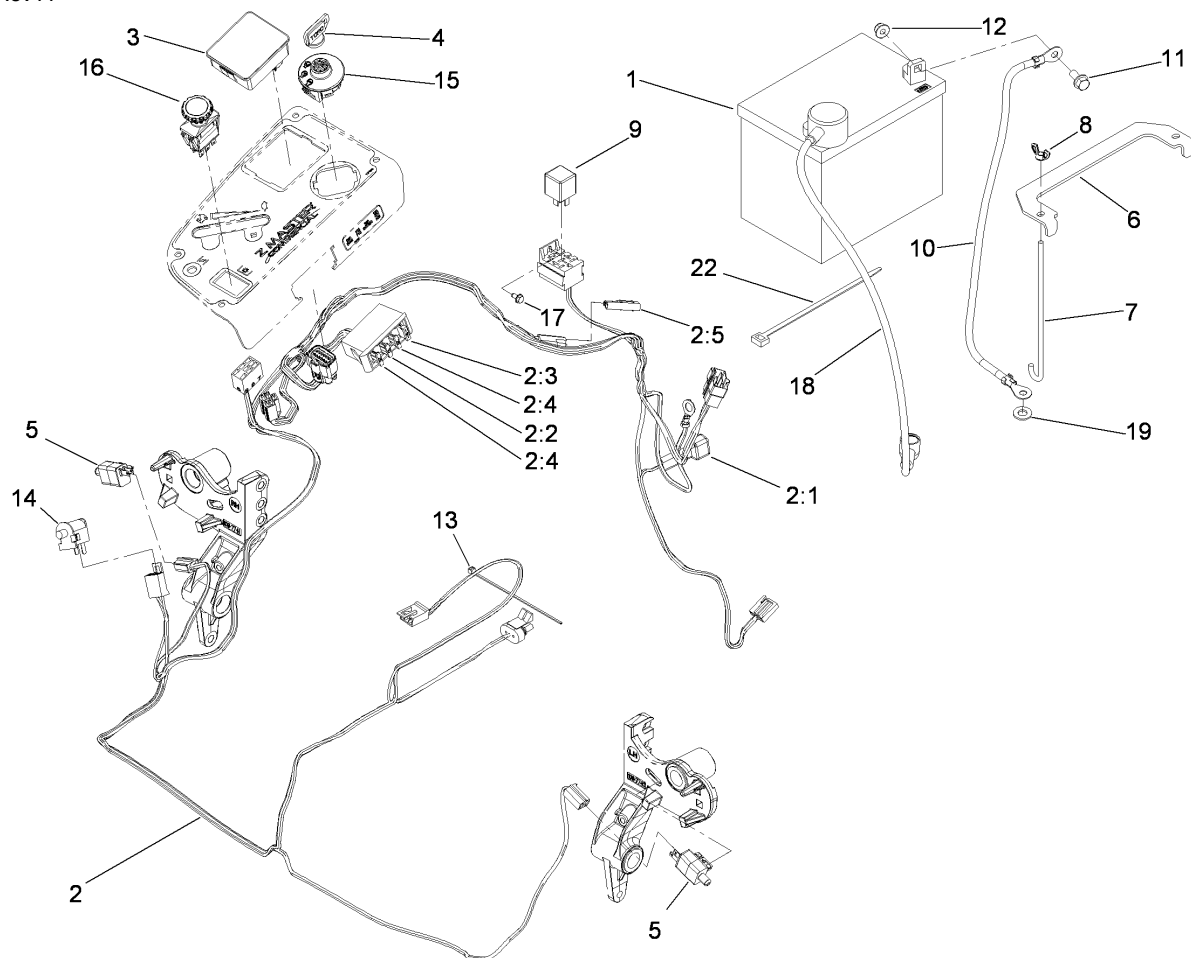

Electrical System Assembly

Ref	Part No.	Qty.	Description
1	104-2492	1	Battery
2	115-2796	1	Harness-Wire, Main
2:1	103-3895	1	Diode-Tvs
2:2	218-578	1	Fuse-10 Amp
2:3	109355	1	Fuse-15 Amp
2:4	109102	2	Fuse-25 Amp
2:5	116-0053	1	Cap-Plug
3	116-0916	1	Module-Meter, Hour
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch-Single Pole No
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-Flange, NI
13	1-303287	3	Tie-Plastic
14	82-2190	1	Switch-Bail
15	116-0229	1	Switch-Ignition
16	116-0124	1	Switch-PTO, 10A
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
19	3256-24	1	Washer-Flat


Ref	Part No.	Qty.	Description
22	1-303335	1	Tie-Plastic

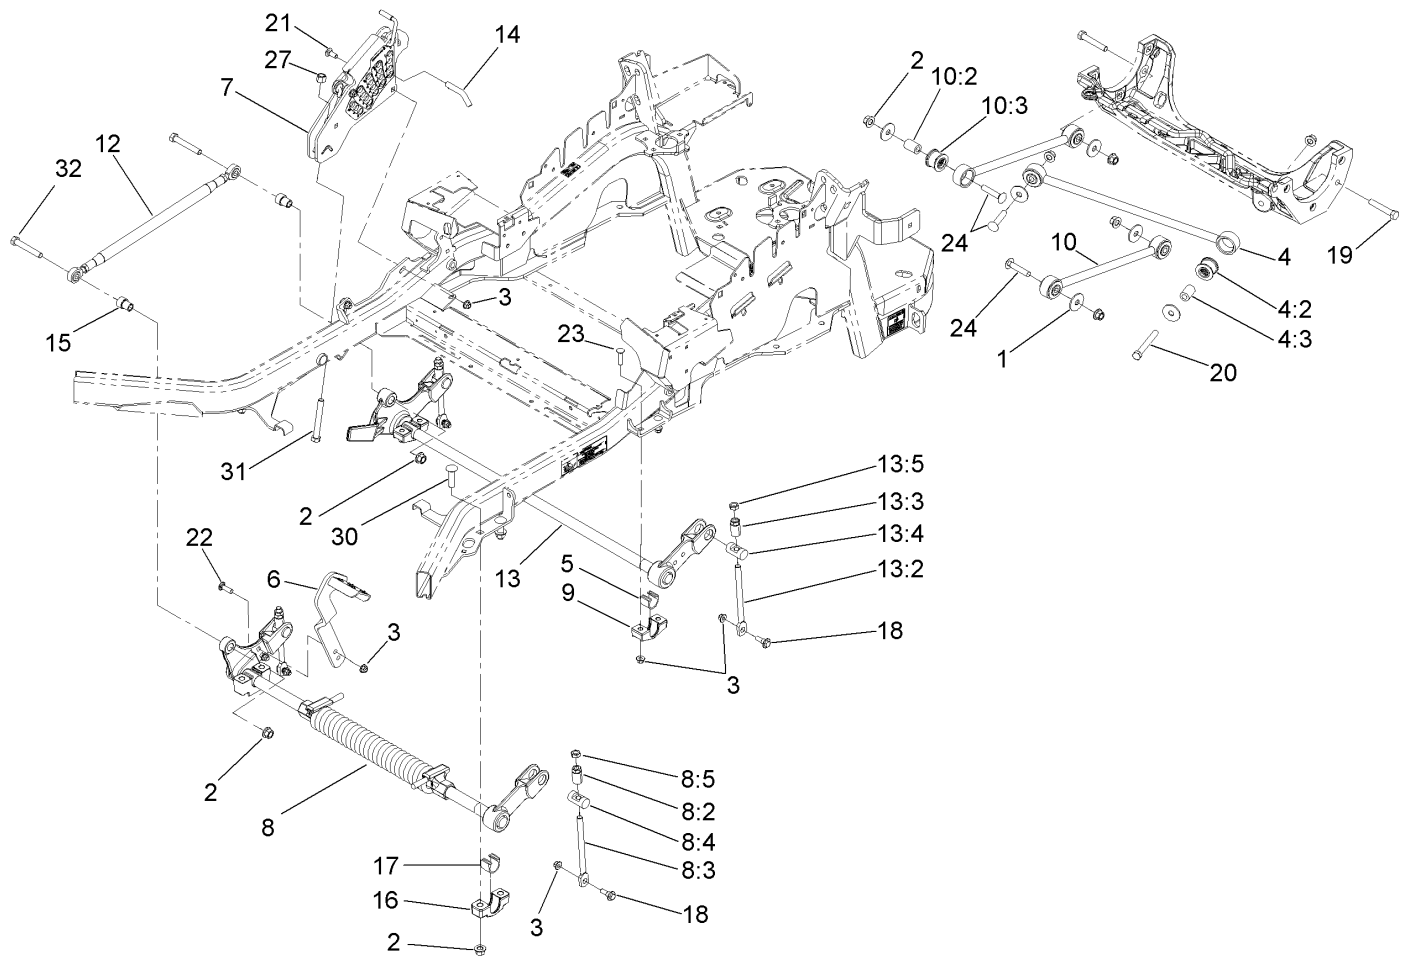

Deck Lift Assembly


Ref	Part No.	Qty.	Description
1	86-1990	6	Washer
2	99-5107	12	Nut-Lock
3	104-8301	12	Nut-Flange, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross, Rear Shaft
6	109-8737-01	1	Pedal-Foot
7	109-7438	1	HOC ASM
8	116-1651	1	Front Cross Shaft ASM
8:2	109-7840	2	Adjuster-Lift, Deck
8:3	109-8007	2	Link-Adjuster, Deck Lift
8:4	109-8353	2	Trunnion
8:5	3218-5	2	Nut-Jam
9	116-0818-03	2	Support-Bearing, Cross Shaft Rear
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
12	116-0806	1	Side Link ASM
13	116-1619	1	Rear Cross Shaft ASM
13:2	109-8007	2	Link-Adjuster, Deck Lift
13:3	109-7840	2	Adjuster-Lift, Deck
13:4	109-8353	2	Trunnion

Ref	Part No.	Qty.	Description
13:5	3218-5	2	Nut-Jam
14	109-8757	1	Pin-HOC
15	116-0795	2	Bushing-Flange
16	109-9409	2	Support-Cross Shaft, Bearing Front
17	109-9410	2	Bearing-Shaft Front, Cross
18	109-9840	4	Screw-Shoulder, HHF
19	325-12	2	Screw-HH
20	325-17	1	Screw-HH
21	3231-2	2	Screw-CARR
22	3231-4	2	Screw-CARR
23	3231-5	4	Screw-CARR
24	3233-34	3	Screw-CARR
27	3296-23	1	Nut-Lock, NI
30	3233-37	4	Screw-CARR, Short Neck
31	116-0559	1	Bolt-TAP
32	325-13	2	Screw-HH

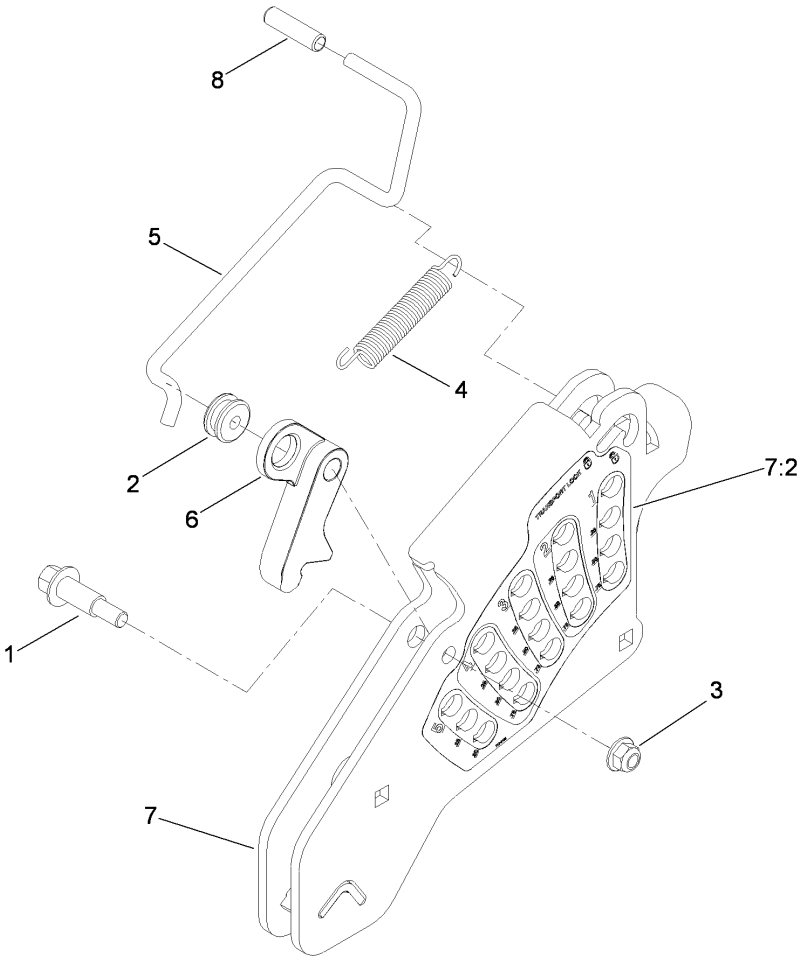


Height-of-Cut Assembly No. 109-7438

Ref	Part No.	Qty.	Description				
1	62-1330	1	Bolt-Shoulder				
2	109-7130	1	Grommet				
3	104-8301	1	Nut-Flange, NI				
4	109-7124	1	Spring-Extension				
5	109-7128	1	Rod-Lock, Transport				
6	116-0118	1	Pawl-Transport, HOC				
7	109-7335	1	HOC Plate ASM				
7:2	116-0752	1	Decal-HOC				
8	109-8250	1	Grip-Lever				

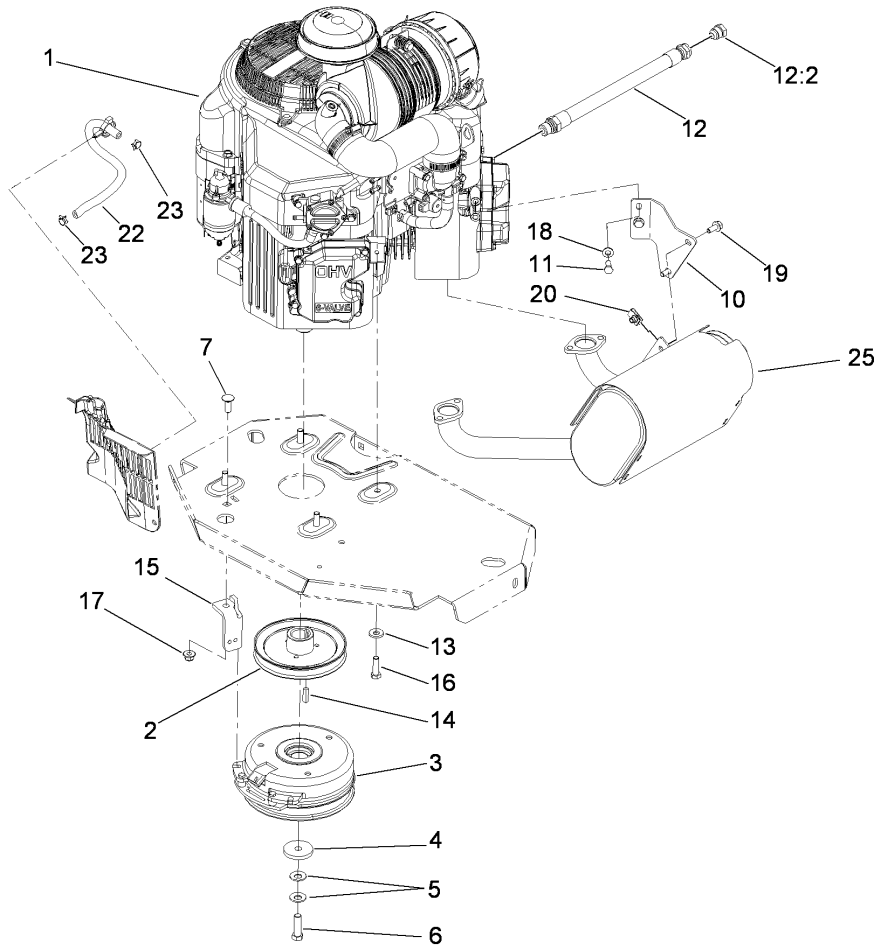

Engine, Muffler and Clutch Assembly


Ref	Part No.	Qty.	Description				
1		1	Engine-Kawasaki, Fxt00V-As06				
2	109-9905	1	Sheave				
3	116-1621	1	Clutch Kit				
4	109-6919	1	Washer-Clutch				
5	1-603610	2	Washer-Spring				
6	109-9761	1	Screw-HH W/Loctite				
7	3231-22	1	Screw-CARR				
10	116-1587	1	Bracket-Muffler				
11	33114-020	2	Screw-HH				
12	109-4490	1	Oil Drain Hose ASM				
12:2	109-1012	1	Plug				
13	98-5975	4	Washer-Belleville				
14	1-807259	1	Key				
15	109-8138-01	1	Anchor-Clutch				
16	323-7	4	Screw-HH				
17	104-8301	1	Nut-Flange, NI				
18	1-303334	2	Washer-Spring				
19	3234-5	2	Screw-HHF				
20	94-2413	2	U-Nut				
22	109-0296	1	Hose-Fuel				
23	2412-98	2	Clamp				
25	116-1707	1	Muffler-Big Block, Kawasaki				

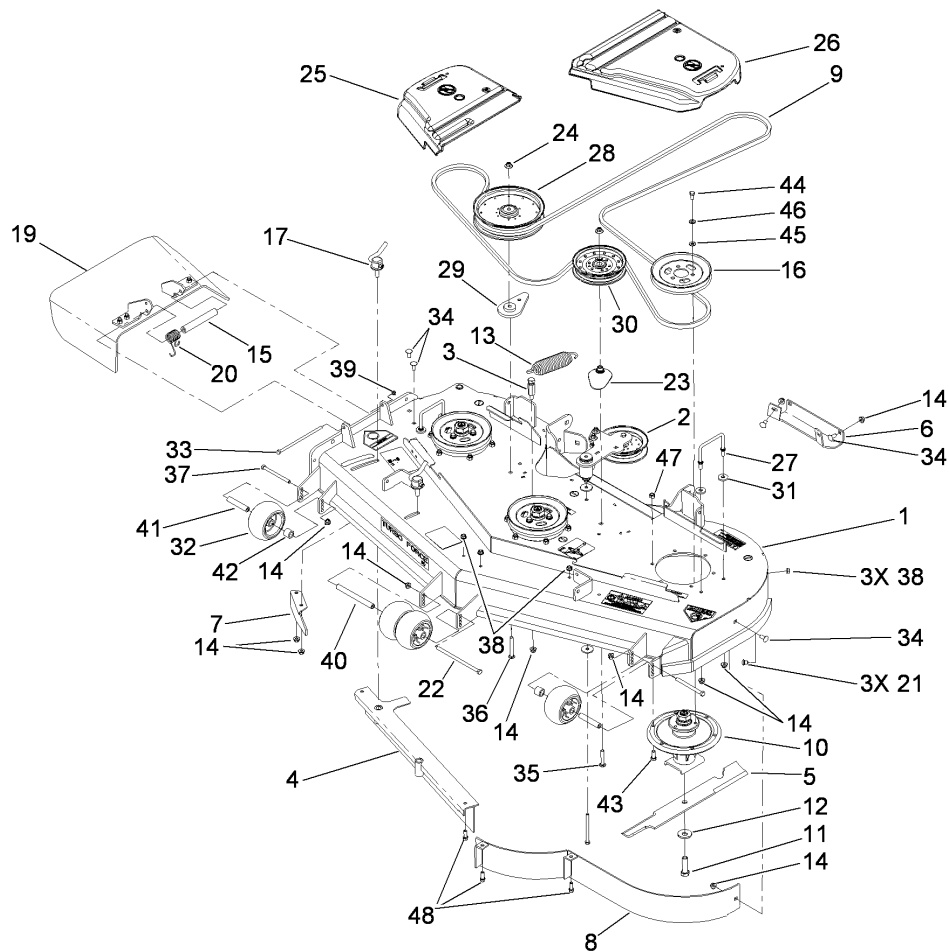

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-4180	1	Deck Decal ASM
2	114-5875	1	Idler Arm ASM
3	114-5867	1	Anchor-Spring, Tall
4	105-7669-01	1	Baffle ASM
5	105-7718-03	3	Blade-Hi Flow
6	105-8792-01	1	Plate-Skid
7	106-3216-01	1	Baffle-Discharge
8	114-5842-01	1	Baffle ASM
9	114-5858	1	Belt-V
10	117-3840	3	Spindle ASM
11	51-4060	3	Screw-Blade
12	103-0865	3	Washer-Blade Bolt, Heavy
13	116-0133	1	Extension-Spring
14	104-8301	15	Nut-Flange, NI
15	105-4622	1	Spacer
16	105-7734	3	Pulley
17	107-1664	2	Lever ASM
19	108-2792	1	Rubber Deflector ASM
20	108-4052	1	Spring-Torsion
21	108-5387	3	Screw-CARR
22	108-5388	1	Screw-HH
23	109-2872	1	Spacer-Pulley
24	109-6658	2	Nut-Flange, NI (Split)
25	116-0094	1	Cover-Belt, RH

Ref	Part No.	Qty.	Description
26	109-6938	1	Cover-Belt, LH
27	109-6982	2	Wireform-Cover
28	109-8590	1	Pulley-Idler
29	109-9416	1	Spacer-Idler
30	114-5895	1	Pulley-Idler, Flat
31	1-373034	4	Washer
32	1-603299	4	Roller-Scalp, Anti
33	322-50	1	Screw-HH
34	3231-27	7	Screw-CARR
35	3231-40	1	Bolt-CARR
36	3231-42	1	Screw-CARR
37	323-23	2	Screw-HH
38	3290-357	6	Nut-HHF, Whiz
39	3296-47	1	Nut-Lock, NI
40	98-5967	1	Spacer-Wheel
41	98-7912	2	Tube-Spanner
42	98-7913	2	Tube-Spacer
43	33115-025	18	Screw-HH
44	323-4	9	Screw-HH
45	3256-24	9	Washer-Flat
46	3290-455	9	Washer-Belleville
47	33025-00	18	Nut-Lock
48	92-1624	3	Screw-HWH

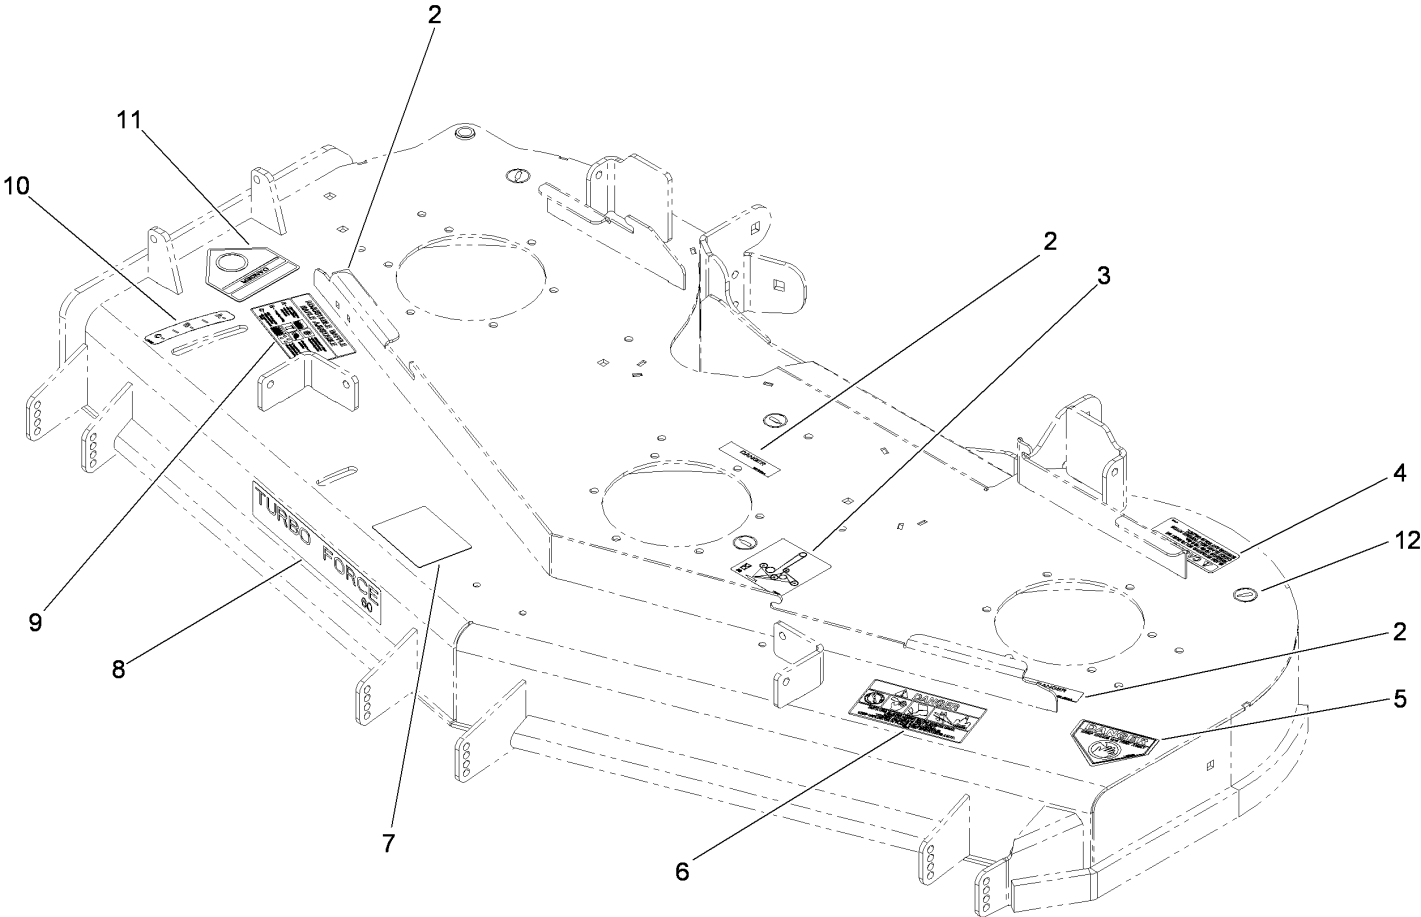


Deck Decal Assembly No. 112-4180

Ref	Part No.	Qty.	Description				
2	98-5954	3	Decal-Cover, Missing				
3	115-7445	1	Decal-Routing, Deck Belt				
4	68-8340	1	Decal-Torque				
5	1-403005	1	Decal-Danger				
6	66-1340	1	Decal-Danger, Thrown Object				
7	105-7798	1	Decal-Scalp, Anti				
8	107-1619	1	Decal				
9	110-2068	1	Decal-Adjustment, Baffle				
10	110-2067	1	Decal-Setting, Baffle				
11	54-9220	1	Decal-Danger				
12	58-6520	4	Decal-Grease				

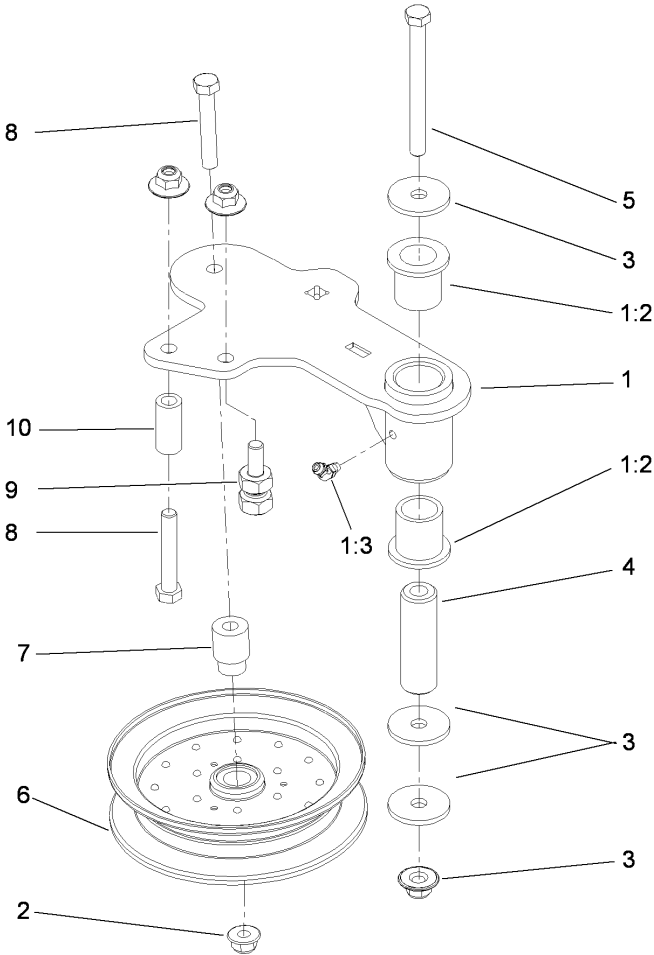

Idler Assembly

Ref	Part No.	Qty.	Description				
1	114-5870	1	Idler Arm ASM				
1:2	1-303514	2	Bearing-Flanged				
1:3	1481	1	Fitting-Grease				
2	109-6658	4	Nut-Flange, NI (Split)				
3	1-213069	3	Washer				
4	114-5848	1	Spacer-Plain				
5	98-5961	1	Screw-HH				
6	103-8743	1	Pulley-Idler, Flanged				
7	112-4212	1	Mount-Pulley				
8	323-11	2	Screw-HH				
9	114-5866	1	Anchor-Spring, Short				
10	104-0151	1	Spacer				

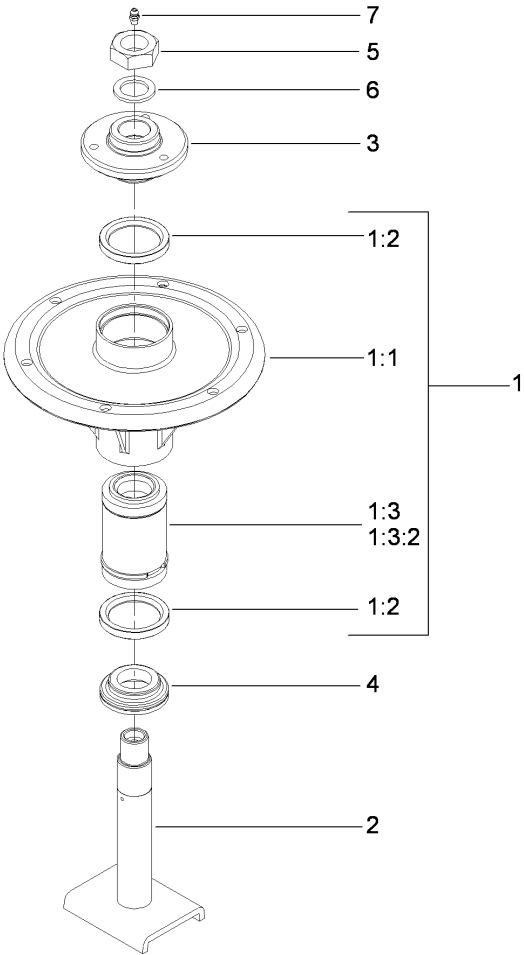


Spindle Assembly No. 117-3840

Ref	Part No.	Qty.	Description				
② 1		1	Spindle Bearing ASM				
② 1:1		1	Housing-Spindle				
1:2	253-154	2	Seal-Oil				
1:3	71-2530	1	Bearing/Spacer Kit				
② 1:3:2		1	Spacer-Bearing				
2	117-3841	1	Spindle Shaft ASM				
3	114-1161	1	Hub-Spline				
4	69-6950	1	Spacer-Shaft, Spindle				
5	3296-49	1	Nut-Lock, NI				
6	3-8514	1	Washer-Thrust				
7	302-57	1	Fitting-Grease				


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

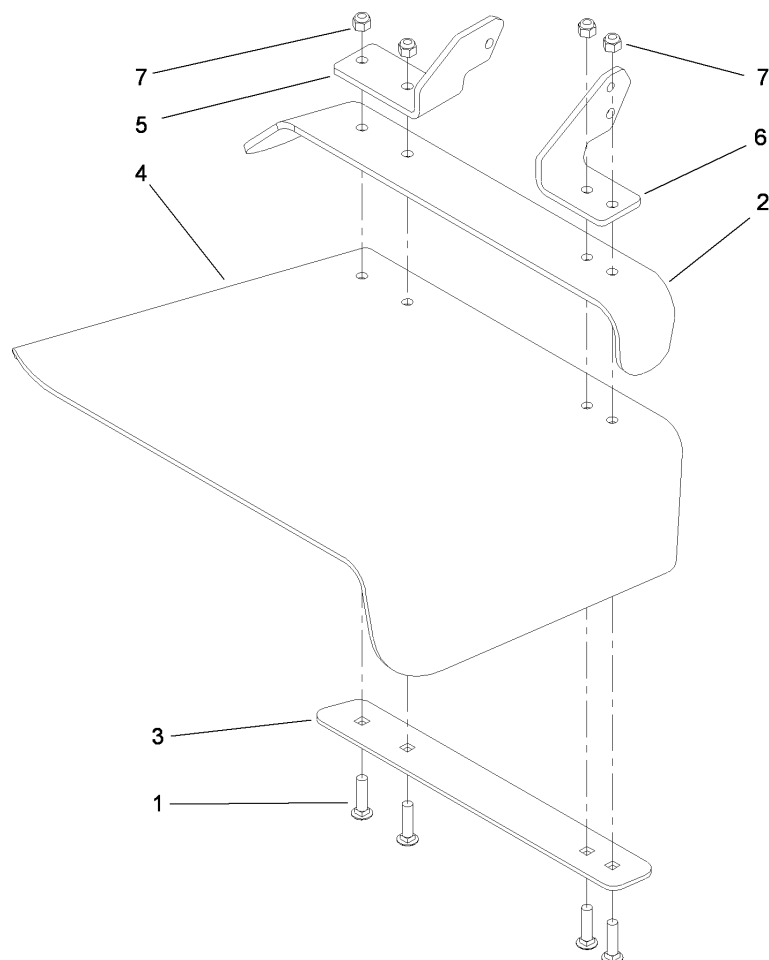


Rubber Deflector Assembly No. 108-2792

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	108-5029	1	Deflector-Rubber				
5	108-4059-01	1	Plate-Hinge, Rear				
6	106-3253-01	1	Plate-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

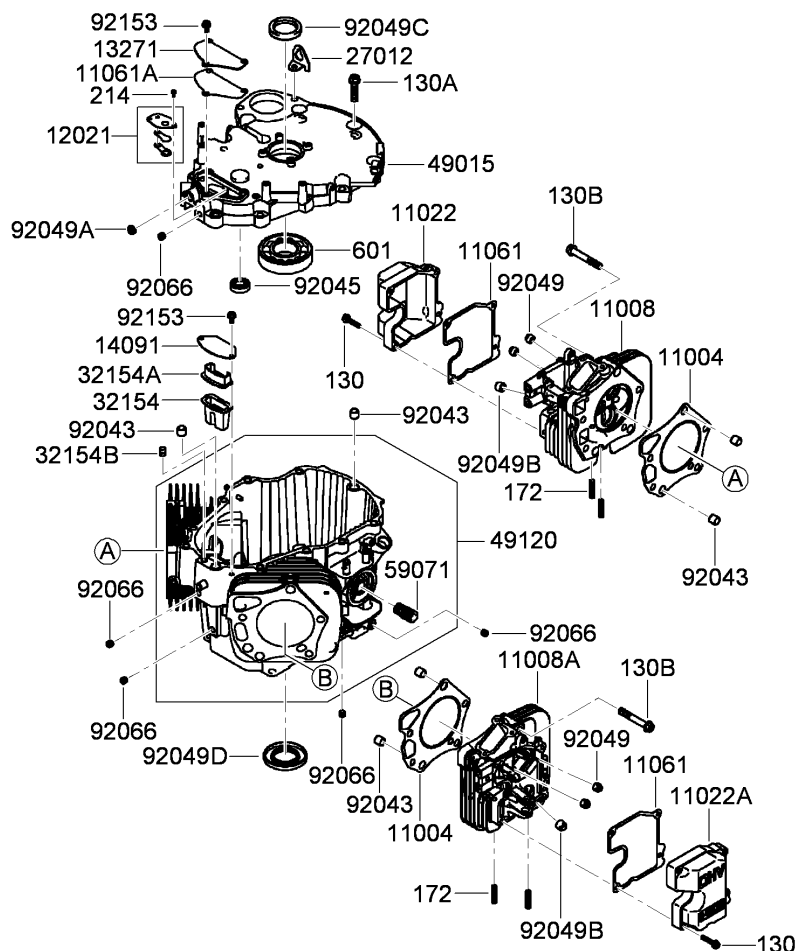


Cylinder and Crankcase Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
● 130	130AA0630	8	Bolt-Flanged (6X30)	● 92045	92045-7002	1	Bearing-Ball, A (15X32X9 6002)
● 130A	130CA1040	11	Bolt-Flanged (10X40)	● 92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
● 130B	130CA1065	10	Bolt-Flanged (10X65)	● 92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S)
● 172	172BA0818	4	Bolt-Stud (8X18)	● 92049B	92049-7020	2	Seal-Oil (7X15X13)
● 214	214AA0408	2	Screw-Pan +- (4X8)	● 92049C	92049-7024	1	Seal-Oil, S D (40X54X9 R Hs)
● 601	601A6308	1	Bearing-Ball	● 92049D	92049-7025	1	Seal-Oil, S D (40X72X8 L Vs)
● 11004	11004-7023	2	Gasket-Head	● 92066	92066-7002	5	Plug
● 11008	11008-7034	1	Head-Cylinder, No.1	● 92153	92153-7043	5	Bolt (6X12)
● 11008A	11008-7035	1	Head-Cylinder, No.2				
● 11022	11022-7012	1	Case-Rocker, No.1				
● 11022A	11022-7013	1	Case-Rocker, No.2				
● 11061	11061-7055	2	Gasket-Case, Rocker				
● 11061A	11061-7065	1	Gasket-Cover, Breather				
● 12021	12021-7003	1	Breather Reed Valve ASM				
● 13271	13271-7037	1	Plate-Cover, Breather				
● 14091	14091-7052	1	Cover-Breather				
● 27012	27012-7004	1	Hook				
● 32154	32154-7014	1	Pipe-Breather				
● 32154A	32154-7015	1	Pipe-Breather				
● 32154B	32154-7019	1	Pipe				
● 49015	49015-7060	1	Cover-Crankcase				
● 49120	49120-6174	1	Crankcase				
● 59071	59071-2079	1	Joint				
● 92043	92043-1266	6	Pin				

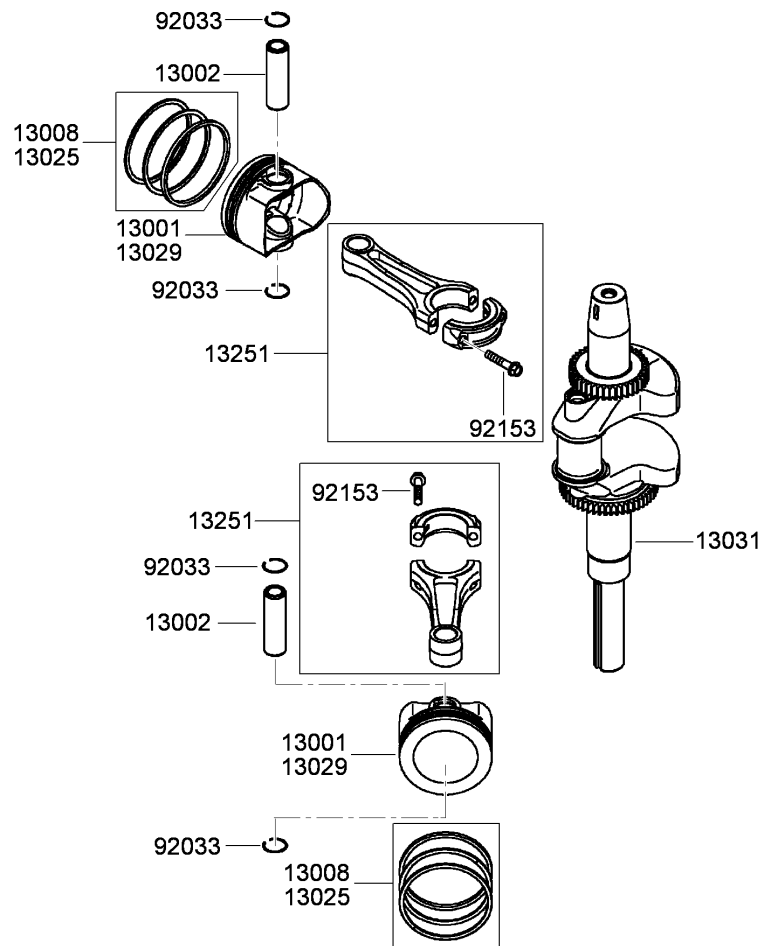


Piston and Crankshaft Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
13001	13001-7021	2	Piston-Engine				
13002	13002-7004	2	Pin-Piston				
13008	13008-7004	2	Piston Ring Set				
13025	13025-7008	1	Piston Ring Set (L, 0.5)				
13029	13029-7009	1	Piston-Engine (L, 0.5)				
13031	13031-7080	1	Crankshaft				
13251	13251-7018	2	Connecting Rod ASM				
92033	92033-2176	4	Ring-Snap				
92153	92153-2054	4	Bolt (7X35.2)				

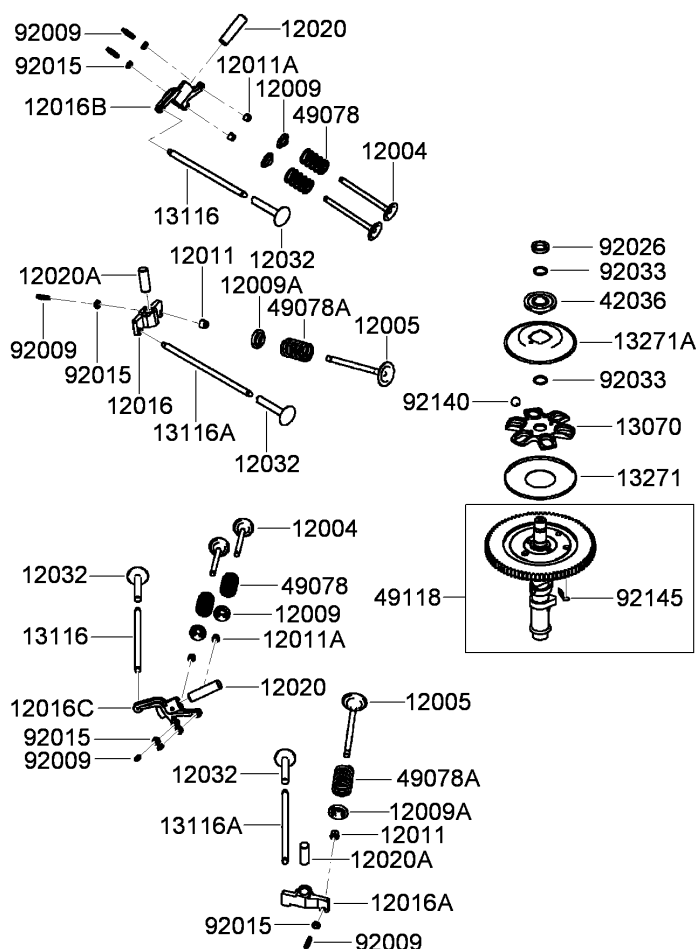


Valve and Camshaft Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
① 12004	12004-7006	4	Valve-Intake	① 92026	92026-7019	1	Spacer
① 12005	12005-7007	2	Valve-Exhaust	① 92033	92033-7001	2	Ring-Snap
① 12009	12009-7001	4	Retainer-Spring, Valve	① 92140	92140-7005	6	Ball
① 12009A	12009-7002	2	Retainer-Spring, Valve	① 92145	92145-7001	1	Spring
① 12011	12011-2052	4	Collet				
① 12011A	12011-2056	8	Collet				
① 12016	12016-7011	1	Arm-Rocker (No.1 Ex)				
① 12016A	12016-7013	1	Arm-Rocker (No.2 Ex)				
① 12016B	12016-7014	1	Arm-Rocker (No.1 Intake)				
① 12016C	12016-7015	1	Arm-Rocker (No.2 Intake)				
① 12020	12020-7001	2	Shaft-Rocker (Intake)				
① 12020A	12020-7002	2	Shaft-Rocker (Ex)				
① 12032	12032-7002	4	Tappet				
① 13070	13070-7004	1	Guide				
① 13116	13116-2054	2	Rod-Push				
① 13116A	13116-7005	2	Rod-Push				
① 13271	13271-7007	1	Plate				
① 13271A	13271-7021	1	Plate-Governor				
① 42036	42036-7010	1	Sleeve				
① 49078	49078-7002	4	Spring-Valve, Engine (Intake)				
① 49078A	49078-7004	2	Spring-Valve, Engine (Exhaust)				
① 49118	49118-7018	1	Camshaft ASM				
① 92009	92009-1109	6	Screw				
① 92015	92015-1137	6	Nut				

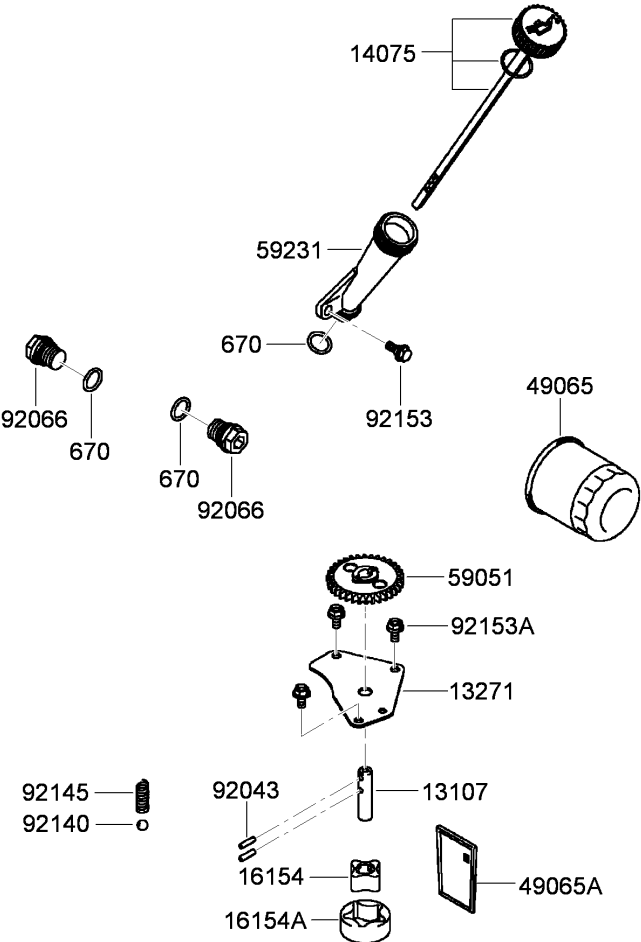

Lubrication Equipment Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description				
❶670	670D2016	3	O-Ring (16Mm)				
❶13107	13107-7009	1	Shaft				
❶13271	13271-7034	1	Plate-Rotor, Pump				
❶14075	14075-7011	1	Cap ASM				
❶16154	16154-7007	1	Rotor-Pump (In)				
❶16154A	16154-7008	1	Rotor-Pump (Out)				
❶49065	49065-2078	1	Filter-Oil				
❶49065A	49065-7004	1	Filter-Oil				
❶59051	59051-7026	1	Gear-Spur, Oil Pump				
❶59231	59231-7011	1	Filler				
❶92043	92043-7003	2	Pin				
❶92066	92066-7003	2	Plug				
❶92140	92140-7003	1	Ball				
❶92145	92145-7046	1	Spring				
❶92153	92153-7007	1	Bolt				
❶92153A	92153-7043	3	Bolt (6X12)				

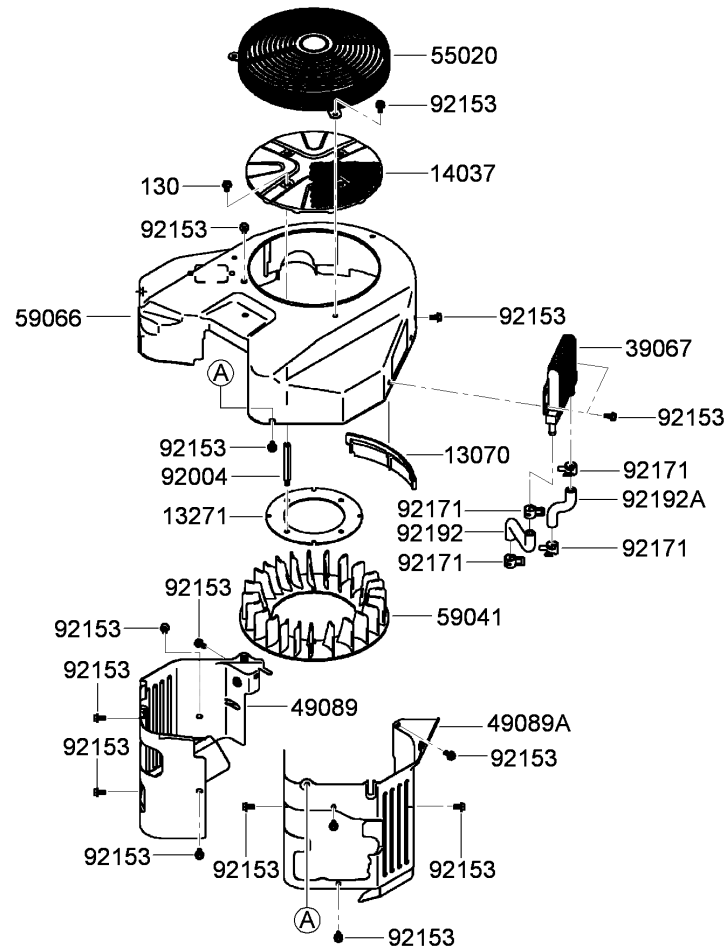

Cooling Equipment Assembly


Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
❶130	130AA0610	4	Bolt-Flanged (6X10)				
❶13070	13070-7013	1	Guide				
❶13271	13271-7035	1	Plate-Fan				
❶14037	14037-7029-9H	1	Screen				
❶39067	39067-7007	1	Cooler-Oil				
❶49089	49089-7062-753	1	Shroud-Engine				
❶49089A	49089-7063-753	1	Shroud-Engine				
❶55020	55020-7010	1	Guard				
❶59041	59041-7013	1	Fan				
❶59066	59066-7040-753	1	Housing-Fan				
❶92004	92004-7021	4	Stud-Screen				
❶92153	92153-7043	18	Bolt (6X12)				
❶92171	92171-7015	4	Clamp				
❶92192	92192-7078	1	Tube				
❶92192A	92192-7079	1	Tube				

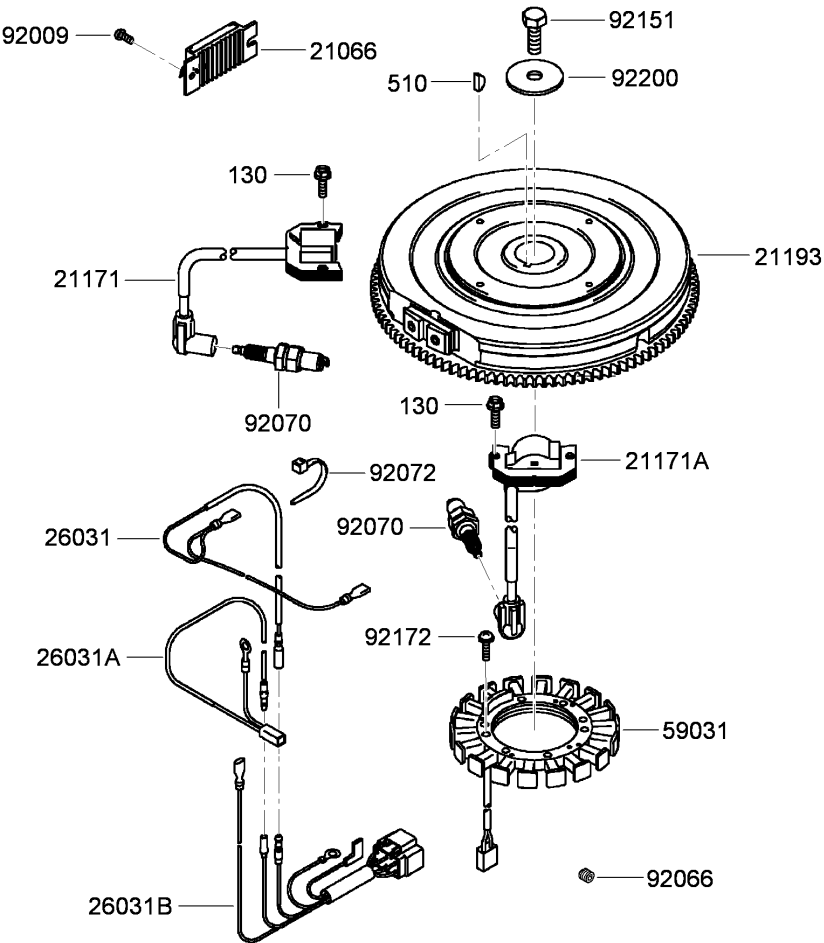


Electric Equipment Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
❶130	130AA0620	4	Bolt-Flanged (6X20)				
❶510	510A5100	1	Key-Woodruff				
❶21066	21066-7011	1	Regulator-Voltage				
❶21171	21171-7028	1	Coil-Ignition (No.1 Cyl)				
❶21171A	21171-7029	1	Coil-Ignition (No.2 Cyl)				
❶21193	21193-7034	1	Flywheel ASM				
❶26031	26031-7033	1	Harness				
❶26031A	26031-7034	1	Harness				
❶26031B	26031-7039	1	Harness				
❶59031	59031-7009	1	Coil-Charging				
❶92009	92009-2308	2	Screw				
❶92066	92066-7002	1	Plug				
❶92070	92070-2088	2	Spark Plug, B P R 5E S (N G K) Solid				
❶92072	92072-7003	3	Band				
❶92151	92151-2097	1	Bolt (12X30)				
❶92172	92172-7018	4	Screw (5X20)				
❶92200	92200-7040	1	Washer (12.2X46X3)				

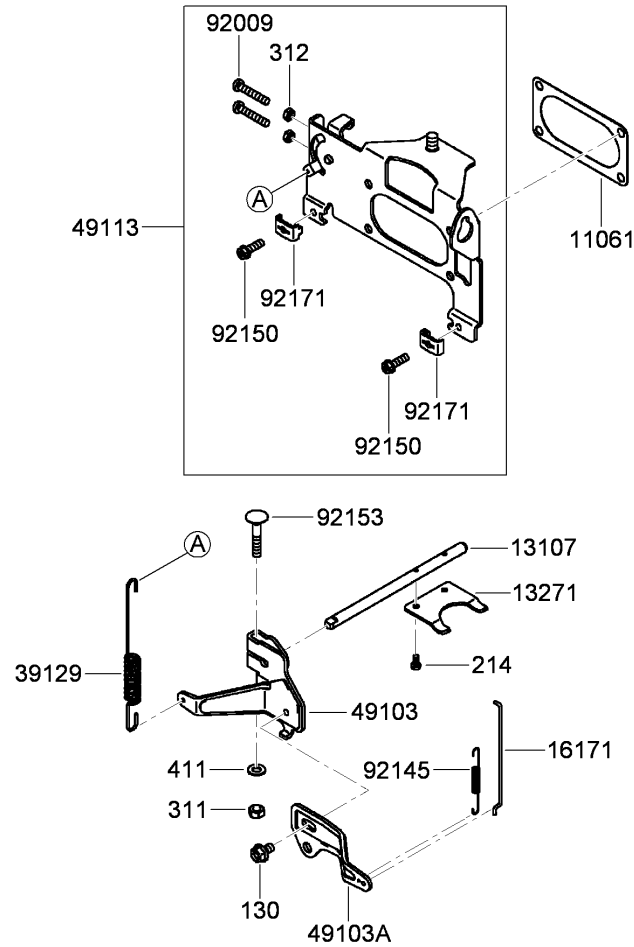

Control Equipment Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description				
❶130	130BA0610	1	Bolt-Flanged (6X10)				
❷214	214AA0408	2	Screw-Pan +- (4X8)				
❸311	311B0600	1	Nut-Hex (6Mm)				
❹312	312B0500	2	Nut-Hex (5Mm)				
❺411	411B0600	1	Washer-Plain (6Mm)				
❻11061	11061-7056	1	Gasket-Pipe, Intake				
❼13107	13107-7040	1	Shaft				
❼13271	13271-7038	1	Plate				
❼16171	16171-7018	1	Link				
❸39129	39129-7017	1	Spring-Governor				
❸49103	49103-7009	1	Arm-Governor				
❸49103A	49103-7010	1	Arm-Governor				
❸49113	49113-7048	1	Control Panel ASM				
❸92009	92009-2381	2	Screw (5X30)				
❸92145	92145-7050	1	Spring				
❸92150	92150-2182	2	Bolt (5X18)				
❸92153	92153-7033	1	Bolt (6X35)				
❸92171	92171-7018	2	Clamp				

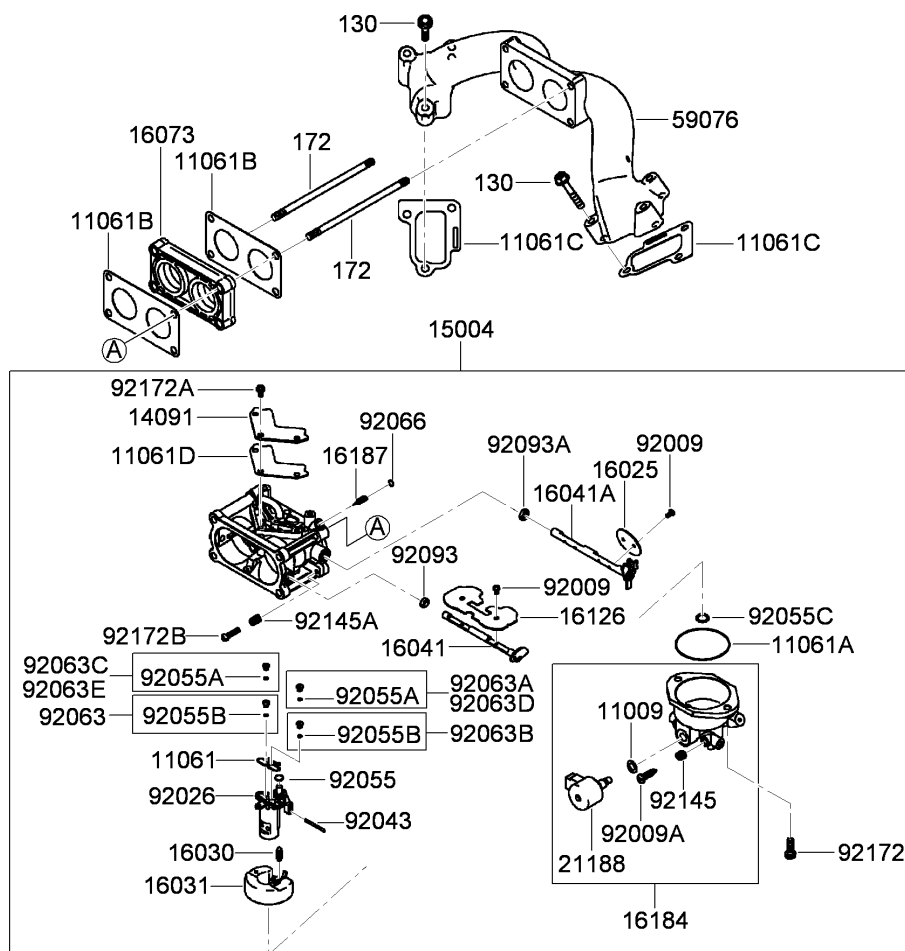

Carburetor Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
①130	130AA0635	6	Bolt-Flanged (6X35)
①172	172BA06120	2	Bolt-Stud (6X120)
①11009	11009-2056	1	Gasket
①11061	11061-7037	1	Gasket
①11061A	11061-7038	1	Gasket
①11061B	11061-7057	2	Gasket-Insulator
①11061C	11061-7062	2	Gasket-Manifold
①11061D	11061-7067	1	Gasket
①14091	14091-7059	1	Cover
①15004	15004-7037	1	Carburetor ASM
①16025	16025-7012	2	Valve-Throttle
①16030	16030-7004	1	Valve-Float
①16031	16031-7003	1	Float
①16041	16041-7035	1	Shaft-Chock, Carburetor
①16041A	16041-7036	1	Shaft-Throttle, Carburetor
①16073	16073-7010	1	Insulator
①16126	16126-7019	1	Valve-Chock
①16184	16184-7021	1	Float Chamber ASM
①16187	16187-7005	2	Needle-Jet
①21188	21188-7003	1	Solenoid
①59076	59076-7010	1	Manifold-Intake
①92009	92009-7003	6	Screw
①92009A	92009-7006	1	Screw-Drain
①92026	92026-7022	1	Spacer


Ref	Part No.	Qty.	Description
①92043	92043-7014	1	Pin
①92055	92055-7012	1	O-Ring
①92055A	92055-7013	1	O-Ring
①92055B	92055-7013	2	O-Ring
①92055C	92055-7016	1	O-Ring
①92063	92063-7099	1	Jet-Main (No.134, 6560 Ft)
①92063A	92063-7099	1	Jet-Main (No.134, 6560 Ft)
①92063B	92063-7100	1	Jet-Main (No.140)
①92063C	92063-7101	1	Jet-Main (No.131, 3280 Ft)
①92063D	92063-7102	1	Jet-Main (No.137, 3280 Ft)
①92063E	92063-7103	1	Jet-Main (No.128, 6560 Ft)
①92066	92066-7009	2	Plug-Expansion
①92093	92093-7001	1	Seal (I D 5.9)
①92093A	92093-7002	1	Seal (I D 6.9)
①92145	92145-7011	1	Spring
①92145A	92145-7039	1	Spring
①92172	92172-7005	2	Screw (M5)
①92172A	92172-7006	3	Screw (M4)
①92172B	92172-7031	1	Screw-Adjust, Throttle

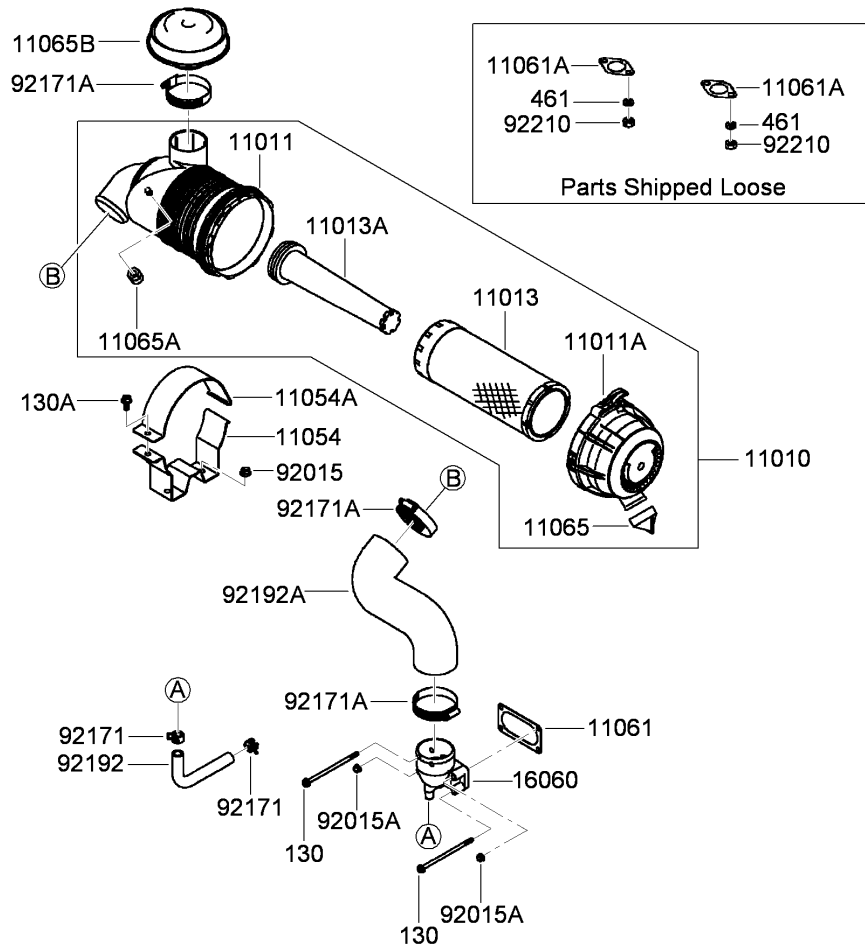

Air Filter and Muffler Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❶130	130AA06120	2	Bolt-Flanged (6X120)
❶130A	130AA0816	1	Bolt-Flanged (8X16)
❶461	461F0800	4	Washer-Spring (8Mm)
❶11010	11010-7020	1	Air Filter ASM
❶11011	11011-7047	1	Case-Filter, Air
❶11011A	11011-7050	1	Case-Filter, Air
❶11013	11013-7038	1	Element-Filter, Air
❶11013A	11013-7039	1	Element-Filter, Air
❶11054	11054-7012-9X	1	Bracket
❶11054A	11054-7013-9X	1	Bracket
❶11061	11061-7056	1	Gasket-Pipe, Intake
❶11061A	11061-7061	2	Gasket-Muffler
❶11065	11065-7008	1	Cap
❶11065A	11065-7009	1	Cap
❶11065B	11065-7017	1	Cap
❶16060	16060-6006	1	Pipe-Intake
❶92015	92015-1143	2	Nut
❶92015A	92015-1193	2	Nut
❶92171	92171-7013	2	Clamp
❶92171A	92171-7023	3	Clamp-Filter, Air
❶92192	92192-7075	1	Tube (12.6X18.6X183)
❶92192A	92192-7096	1	Tube-Filter, Air

Ref	Part No.	Qty.	Description
❶92210	92210-7027	4	Nut (M8)

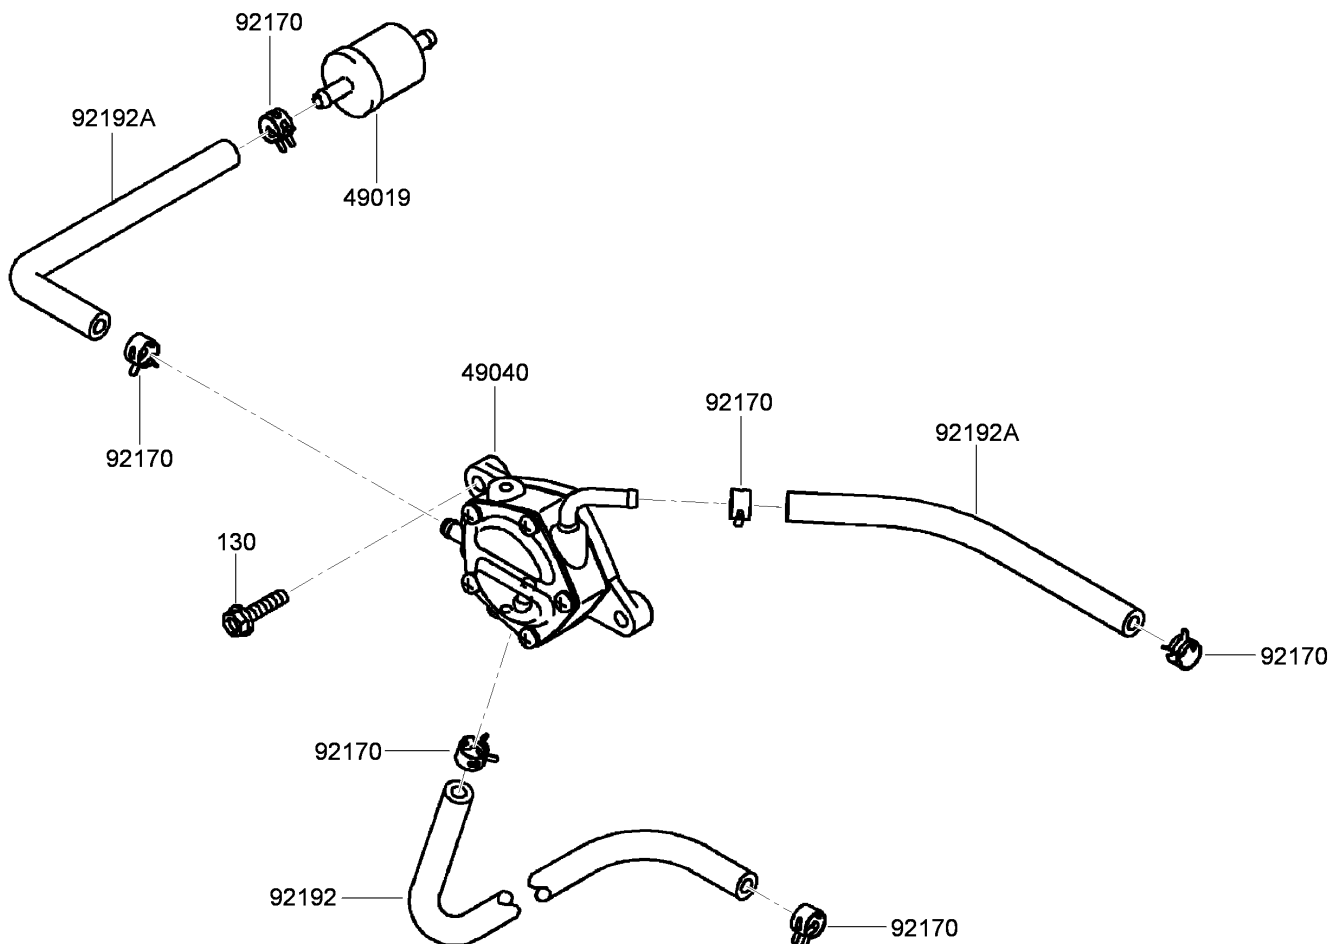


Fuel Tank and Fuel Valve Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
③130	130AA0625	2	Bolt-Flanged (6X25)				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7006	1	Pump-Fuel				
③92170	92170-2088	6	Clamp				
③92192	92192-7077	1	Tube (6.4X12.7X318)				
③92192A	92192-7101	2	Tube (6.35X12.7X185)				

56014



56033

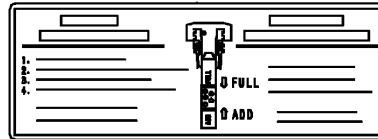

56070



Label Set
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
⑤56014	56014-7001	1	Emblem
⑤56033	56033-7002	1	Label-Manual
⑤56070	56070-7001	1	Label-Warning

Attachments and Accessories

For 74965CP - Z Master G3 Riding Mower, with 60in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Mid Flow, 20.5 Inch	105-7715-03
Blade-Lo Flow, 20.5 Inch	105-7716-03
Blade-Hi Flow, 20.5 Inch	105-7718-03
Blade-Recycler, 20.5 Inch	105-7777-03
Blade-Atomic, 20.5 Inch	105-8777-03
6 Pack Blade, 20.5 Inch Hi-Flow	108-1114
6 Pack-Blade, 20.5 Inch Atomic	108-1115
6 Pack Blade, 20.5 Inch Mid-Flow	108-1123
6 Pack-Blade, 20.5 Inch Lo Flow	108-1128
Hitch Kit	109-9487
6 Pack-Blade, 20.5 Inch Recycler	110-0405
HYPR-OIL 500 (Quart)	114-4713
HYPR-OIL 500 (Gallon)	114-4714
HYPR-OIL 500-5 (5 Gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Recycler Kit	115-7468
Light Kit	116-1154
Z Stand Kit	117-0350
Operator-Controlled Discharge Chute Kit	117-3600
Blower and Drive Kit	78553
E-Z Vac Triple Bagging System	78563
E-Z Vac DFS Collection System	78567
Trash Holder Kit	TC26

NOTES

NOTES

NOTES

