



Z Master[®] G3 Riding Mower with 72in TURBO FORCE[®] Side Discharge Mower

Model No. 74967CP - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame, Caster Whee and Z Stand Assembly	 4	Idler Assembly	 29
Roll-Over Protection System Assembly No. 116-0232	 5	Spindle Assembly No. 117-3840	 30
Caster Wheel and Fork Assembly	 6	Lever Assembly No. 107-1664	 31
Z Stand Assembly	 7	Rubber Deflector Assembly No. 108-2792	 32
Hydraulic Pump, Idler and Belt Assembly	 8	Cylinder and Crankcase Assembly Kawasaki FXT00V-AS06	 33
Pump Ilder Assembly No. 116-1255	 9	Piston and Crankshaft Assembly Kawasaki FXT00V-AS06	 34
LH Hydro Assembly No. 116-1382	 10	Valve and Camshaft Assembly Kawasaki FXT00V-AS06	 35
RH Hydro Assembly No. 116-1383	 11	Lubrication Equipment Assembly Kawasaki FXT00V-AS06	 36
Rear Wheel and Park Brake Assembly	 12	Cooling Equipment Assembly Kawasaki FXT00V-AS06	 37
Brake Handle Assembly No. 116-1878	 13	Electric Equipment Assembly Kawasaki FXT00V-AS06	 38
Fuel System Assembly	 14	Control Equipment Assembly Kawasaki FXT00V-AS06	 39
Fuel Tank Assembly No. 109-9357	 15	Carburetor Assembly Kawasaki FXT00V-AS06	 40
Seat Mounting Assembly	 16	Air Filter and Muffler Assembly Kawasaki FXT00V-AS06	 41
Seat Assembly No.109-9903	 17	Fuel Tank and Fuel Valve Assembly Kawasaki FXT00V-AS06	 42
Motion Control Assembly	 18	Starter Assembly Kawasaki FXT00V-AS06	 43
Fender, Console and Control Assembly	 19	Label Set Kawasaki FXT00V-AS06	 44
LH Console Assembly No. 115-7401	 20	Attachments and Accessories List	 45
RH Console Assembly No. 115-7400	 21		
Electrical System Assembly	 22		
Deck Lift Assembly	 23		
Height-of-Cut Assembly No. 109-7438	 24		
Engine, Muffler and Clutch Assembly	 25		
Deck Assembly	 26		
Deck Decal Assembly No. 112-4195	 28		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HWHTF.	hex washer head thread forming
ASM.	assembly	HYD.	hydraulic
BBC.	blade brake clutch	LH.	left hand
CARR.	carriage	NI.	nylon insert
CCW.	counter clock wise	NPTF.	national pipe thread fine
CW.	clockwise	PFH.	phillips flat head
DEG.	degrees	PPH.	phillips pan head
ECM.	electronic control module	PPHTF.	phillips pan head thread forming
EXT.	external	PRH.	phillips round head
FH.	flat head	PTH.	phillips truss head
GA.	gauge	PTO.	power-take-off
HD.	heavy-duty	RH.	right hand
HF.	hex flange	ROPS.	roll-over protection system
HH.	hex head	SFH.	slotted fillister head
HHF.	hex head flange	SHH.	slotted hex head
HHFTF.	hex head flange thread forming	SHWH.	slotted hex washer head
HJ.	hex jam	SPH.	slotted pan head
HLH.	hex lag head	SQH.	square head
HOC.	height-of-cut	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head		

Footnotes

- ❶ Not illustrated
- ❸ Obtain parts from www.kawpowerepc.com


- ❷ Not serviced separately

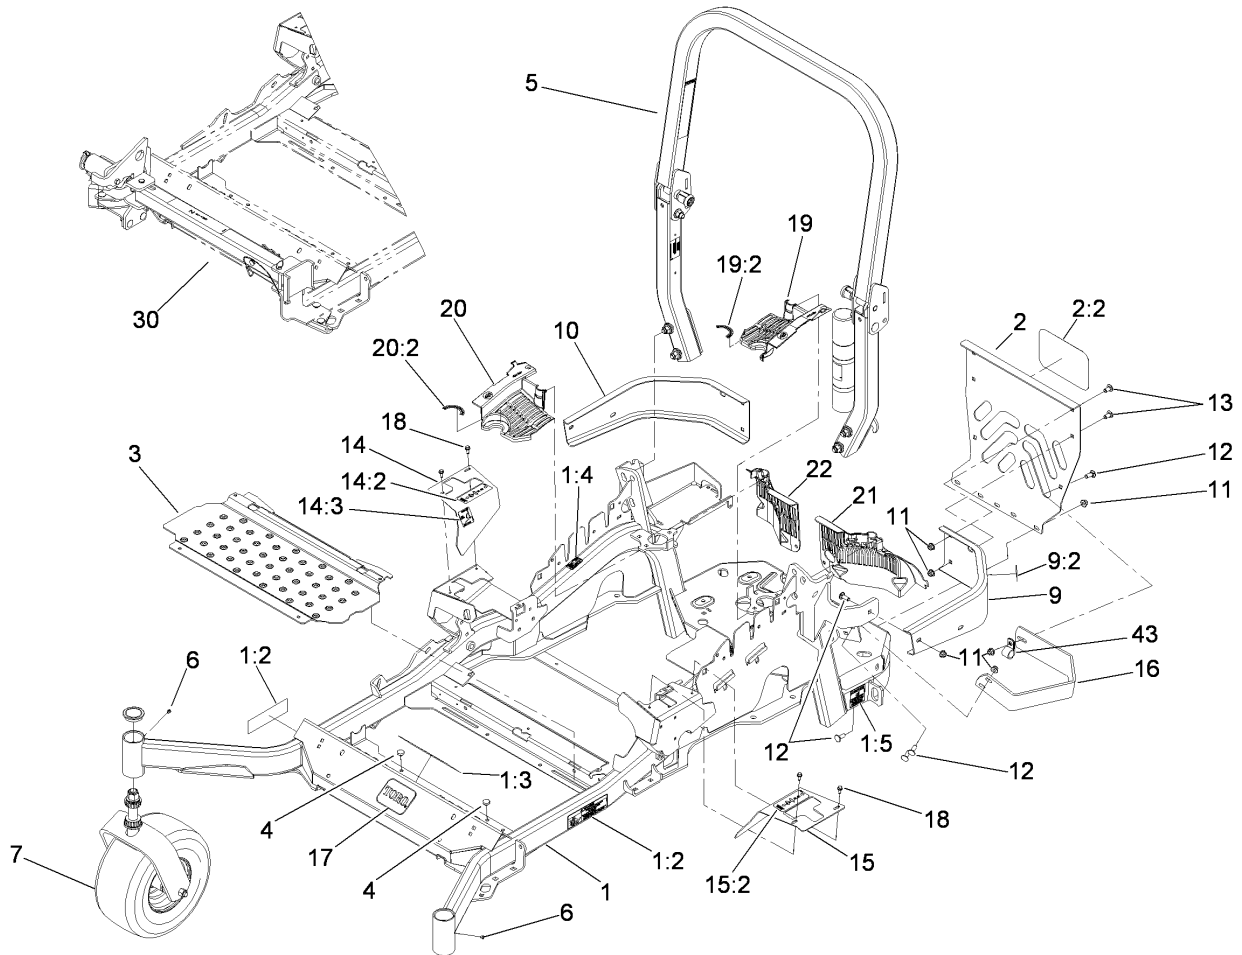

Front Frame, Caster Wheel and Z Stand Assembly


Ref	Part No.	Qty.	Description
1	109-7349	1	Main Frame ASM
1:2	109-9477	2	Decal-Warning
1:3	107-2112	1	Decal-Warning
1:4	103-2076	2	Decal-Caution
1:5	116-0205	2	Decal-Belt Drive
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	116-0024-01	1	Floorpan
4	1-513658	2	Bumper
5	116-0232	1	ROPS ASM
6	1-811010	2	Plug
7		2	Caster Wheel ASM
9	116-0180	1	LH Bumper ASM
9:2	103-2076	1	Decal-Caution
10	116-0057-03	1	Bumper-RH
11	104-8301	11	Nut-Flange, NI
12	3231-22	7	Screw-CARR
13	3231-21	4	Screw-CARR
14	116-0579	1	RH Motion Control Cover ASM
14:2	109-7232	1	Decal-Motion Control
14:3	109-7929	1	Decal-Park Brake
15	116-0580	1	LH Motion Control Cover ASM
15:2	109-7232	1	Decal-Motion Control
16	116-0043-03	1	Guard-Muffler

Ref	Part No.	Qty.	Description
17	68-3640	1	Decal
18	32144-10	4	Screw-HWH
19	116-0170	1	LH Hydro Guard ASM
19:2	116-0157	1	Decal-Hydro Oil
20	116-0171	1	RH Hydro Guard ASM
20:2	116-0157	1	Decal-Hydro Oil
21	109-9057	1	Guard-Hydro, Rear LH
22	109-9058	1	Guard-Hydro, Rear RH
30		1	Z Stand ASM
43	1-633396	1	Clip-Loom

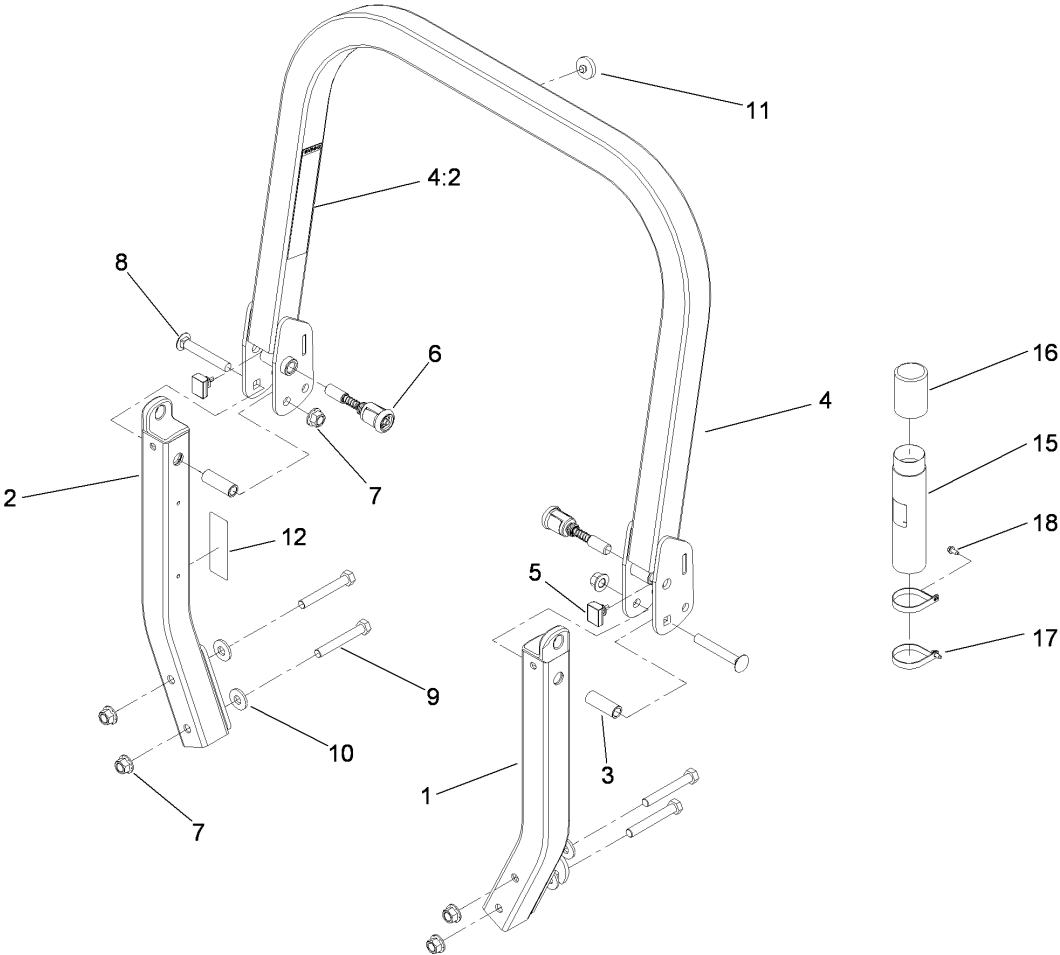 


Roll-Over Protection System Assembly No. 116-0232

Ref	Part No.	Qty.	Description				
②1		1	Leg-ROPS, LH				
②2		1	Leg-ROPS, RH				
3	109-6653	2	Spacer				
②4		1	Upper ROPS ASM				
4:2	107-3069	1	Decal-Warning, Folding ROPS				
5	109-5337	2	Bumper-ROPS				
6	116-0104	2	Spring Pin ASM				
7	99-5107	6	Nut-Lock				
8	3233-10	2	Screw-CARR				
9	325-17	4	Screw-HH				
10	109-9505	4	Washer-Spring				
11	109-9233	1	Bumper-Push-In, Rubber				
12	117-0346	1	Decal-Caution, Fuel Vent				
15	104-7050	1	Tube-Manual				
16	104-7048	1	Cap-Housing				
17	107-1865	2	R-Clamp				
18	32144-10	2	Screw-HWH				

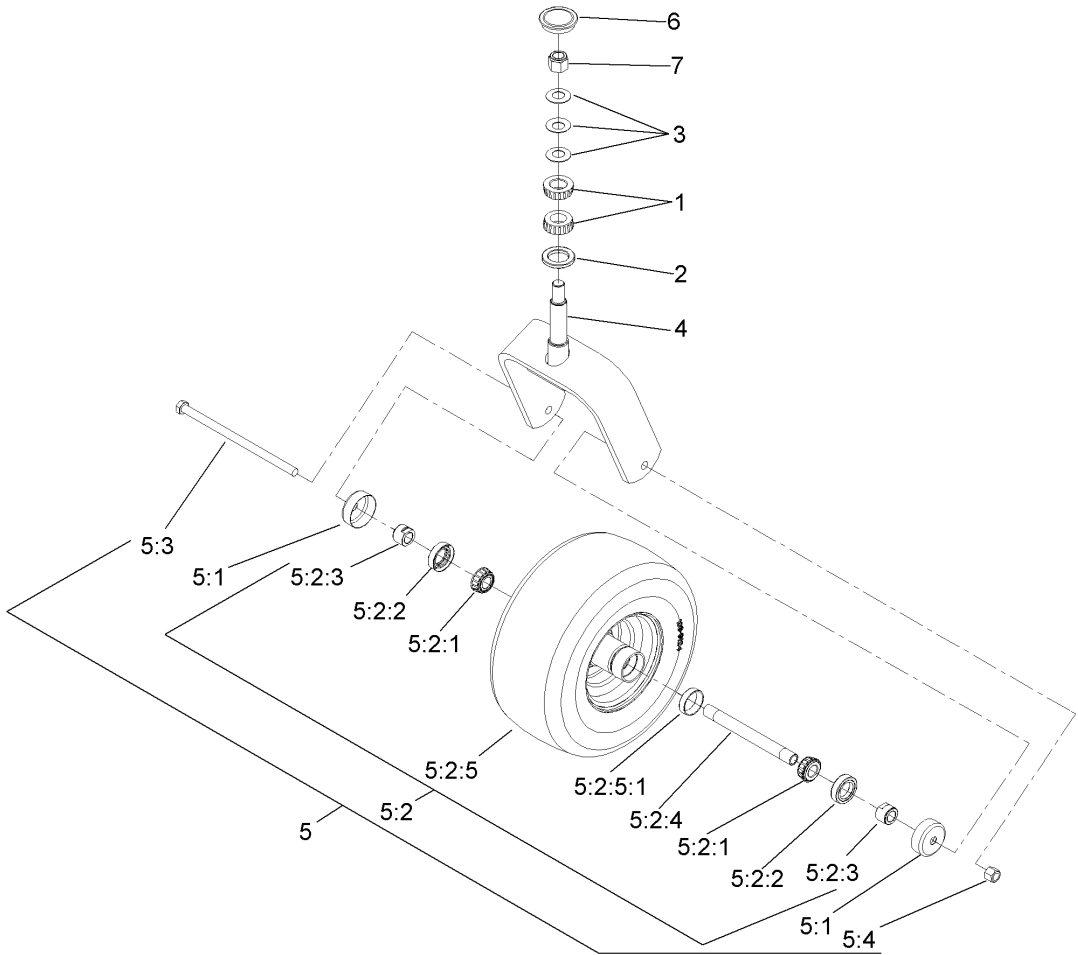 


Caster Wheel and Fork Assembly

Ref	Part No.	Qty.	Description				
1	1-543509	2	Bearing-Roller, Tapered				
2	1-543511	1	Seal-Grease				
3	1-633508	3	Washer-Bellville				
4	103-1474-01	1	Caster-Fork				
5	109-9127	1	Wheel And Tire ASM				
5:1	103-2768	2	Guard-Seal				
5:2		1	Wheel And Tire ASM				
5:2:1	1-633585	2	Bearing-Cone, Taper				
5:2:2	103-0063	2	Seal-Caster				
5:2:3	103-3051	2	Spacer-Nut				
5:2:4	103-5156	1	Axle-Caster				
5:2:5	109-9124	1	Wheel And Tire ASM				
5:2:5:1	1-633584	1	Bearing-Cup				
5:3	325-39	1	Screw-HH				
5:4	3296-23	1	Nut-Lock, NI				
6	103-4882	1	Cap-Grease				
7	3296-51	1	Nut-Lock, NI				

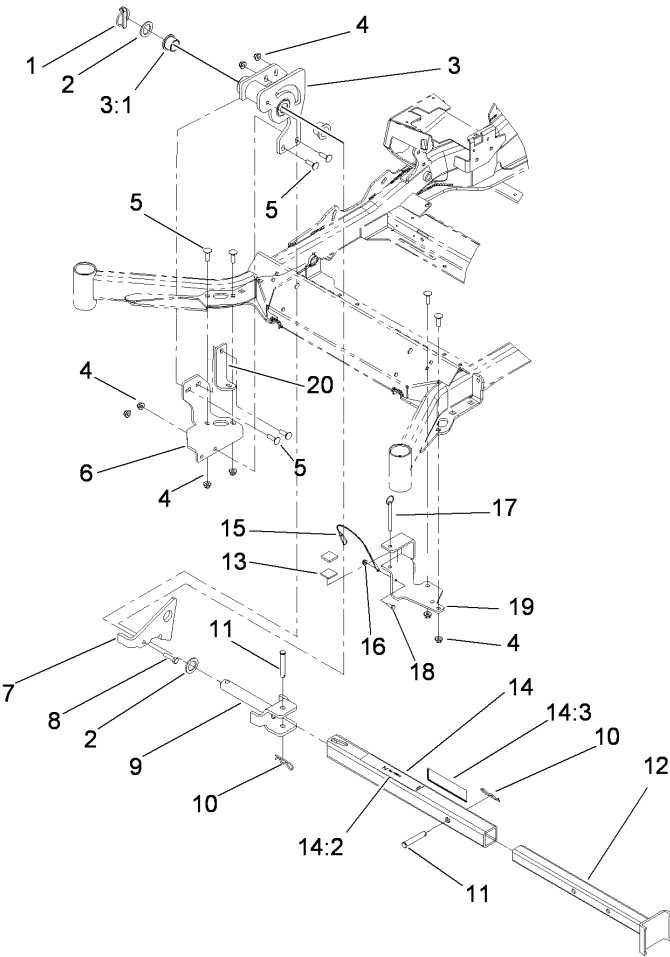 


Z Stand Assembly

Ref	Part No.	Qty.	Description				
1	283-71	1	Pin-Lynch				
2	3-6781	2	Washer-Thrust				
3	117-0353	1	Z Stand Pivot ASM				
3:1	94-1291	2	Bushing				
4	104-8301	9	Nut-Flange, NI				
5	3231-25	8	Screw-CARR				
6	117-0351-01	1	Bracket-Z Stand, Pivot Mount				
7	100-9686-01	1	Bracket-Latch				
8	323-8	1	Screw-HH				
9	100-9692-01	1	Pivot Pin ASM				
10	3290-355	2	Pin-Hair				
11	283-55	2	Pin-Clevis				
12	115-3631-01	1	Inner Tube ASM				
13	115-3613	2	Cushion Rubber				
14	117-0360	1	Outer Tube ASM				
14:2	106-7464	1	Decal-Z Stand				
14:3	107-3969	1	Decal-Warning				
15	100-9385	1	Lanyard-Nylon				
16	104-7201	1	Nut-HF				
17	105-1647	1	Pin-Hitch, Cotterless				
18	321-4	1	Screw-HH				
19	115-3625-01	1	Z Stand Cradle ASM				
20	117-0398-01	1	Bracket-Support				

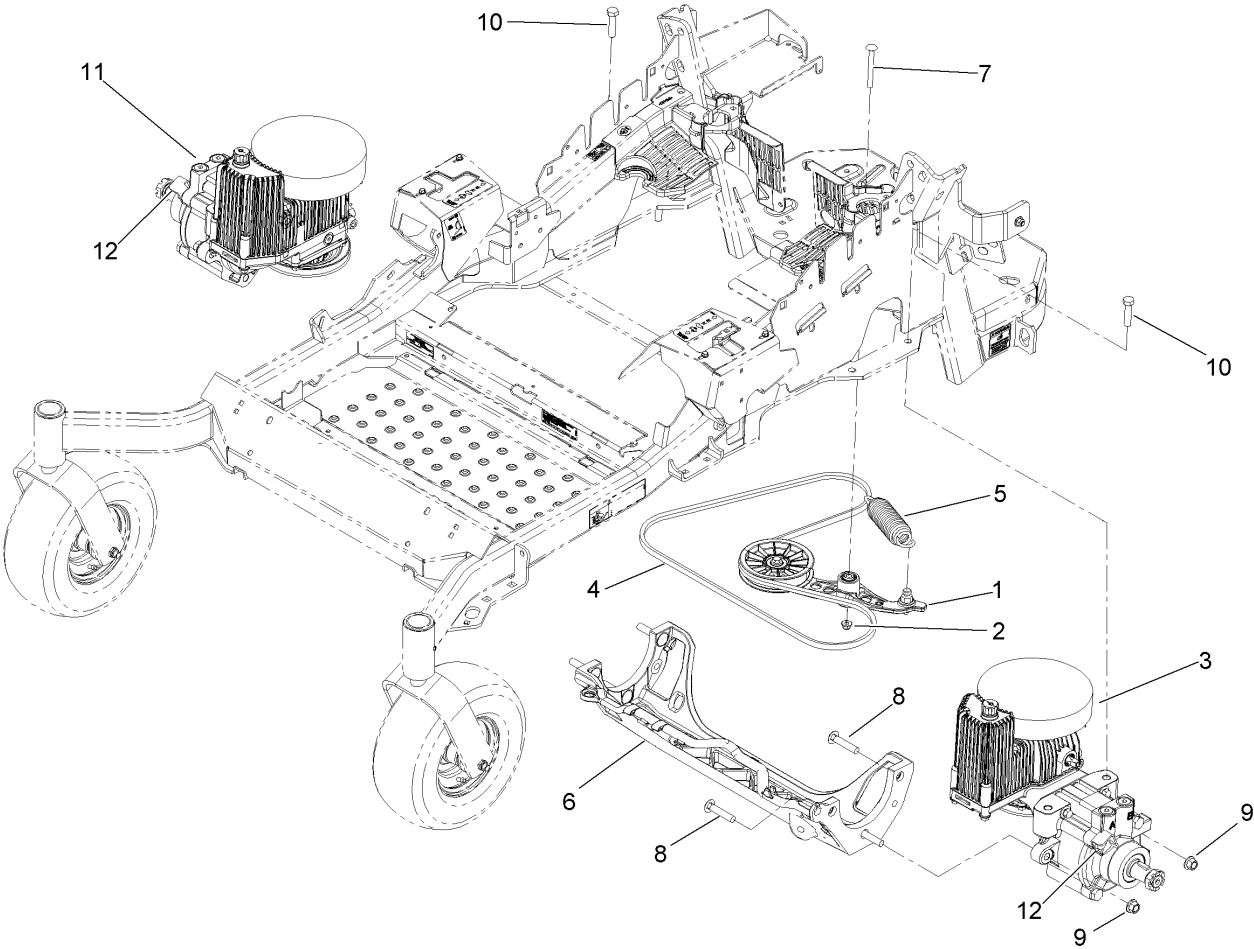 


Hydraulic Pump, Idler and Belt Assembly

Ref	Part No.	Qty.	Description				
1	116-1255	1	Pump Idler ASM				
2	109-6658	1	Nut-Flange, NI (Split)				
3	116-1382	1	LH Hydro ASM (16Cc W/Shock)				
4	109-3388	1	Belt				
5	116-0133	1	Extension-Spring				
6	109-9375	1	Cradle-Hydro, Machined				
7	3231-41	1	Bolt-Carriage				
8	3233-34	6	Screw-CARR				
9	99-5107	6	Nut-Lock				
10	325-8	4	Screw-HH				
11	116-1383	1	RH Hydro ASM (16Cc W/Shock)				
12	116-1758	2	Bracket-Anchor, Cable				
●99	114-4713	1	Hypr-Oil 500 (Quart)				
●99	114-4714	1	Hypr-Oil 500 (Gallon)				
●99	114-4715	1	Hypr-Oil 500-5 (5 Gallon)				
●99	117-0390	1	Filter-Hydro				

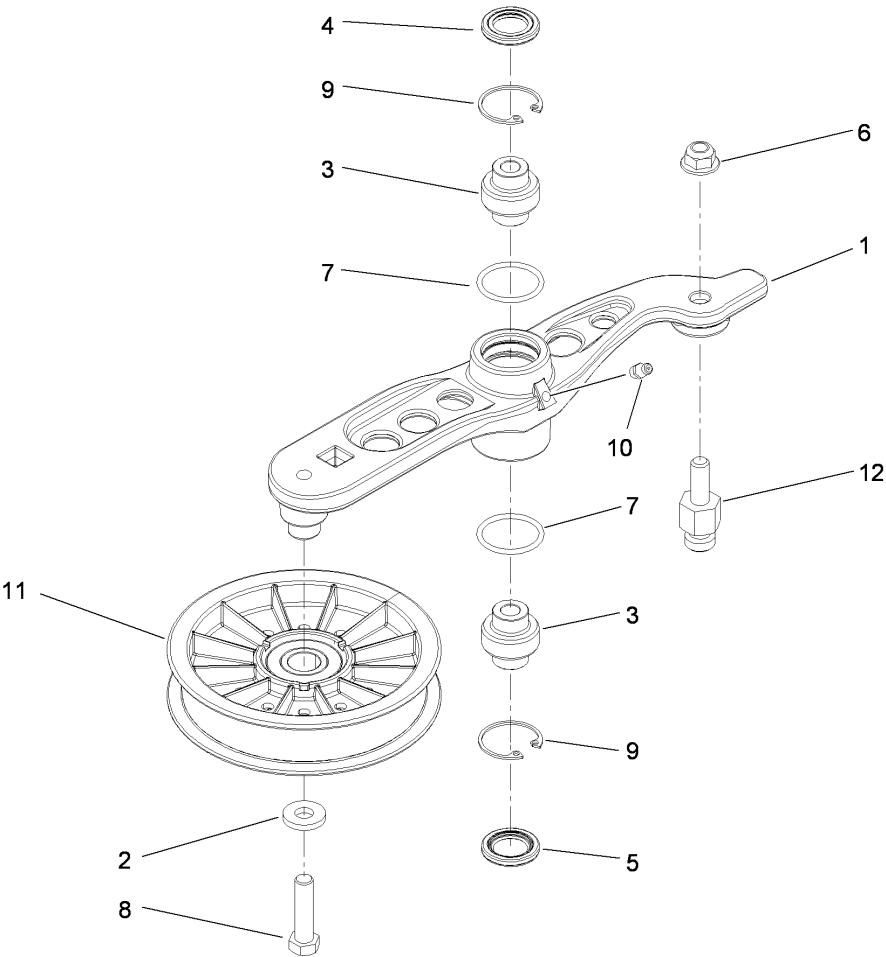 


Pump Idler Assembly No. 116-1255

Ref	Part No.	Qty.	Description				
1		1	Arm-Pump, Idler				
2	43-0940	1	Spacer-Hub, Blower				
3	103-3504	2	Bearing-Spherical				
4	103-3505	1	Seal-Double Lip				
5	103-3506	1	Seal-Single Lip				
6	109-6658	1	Nut-Flange, NI (Split)				
7	106-7159	2	O-Ring				
8	323-8	1	Screw-HH				
9	32120-10	2	Ring-Snap				
10	302-19	1	Fitting-Grease				
11	109-8076	1	Pulley-Idler				
12	109-7399	1	Pin-Anchor, Spring				

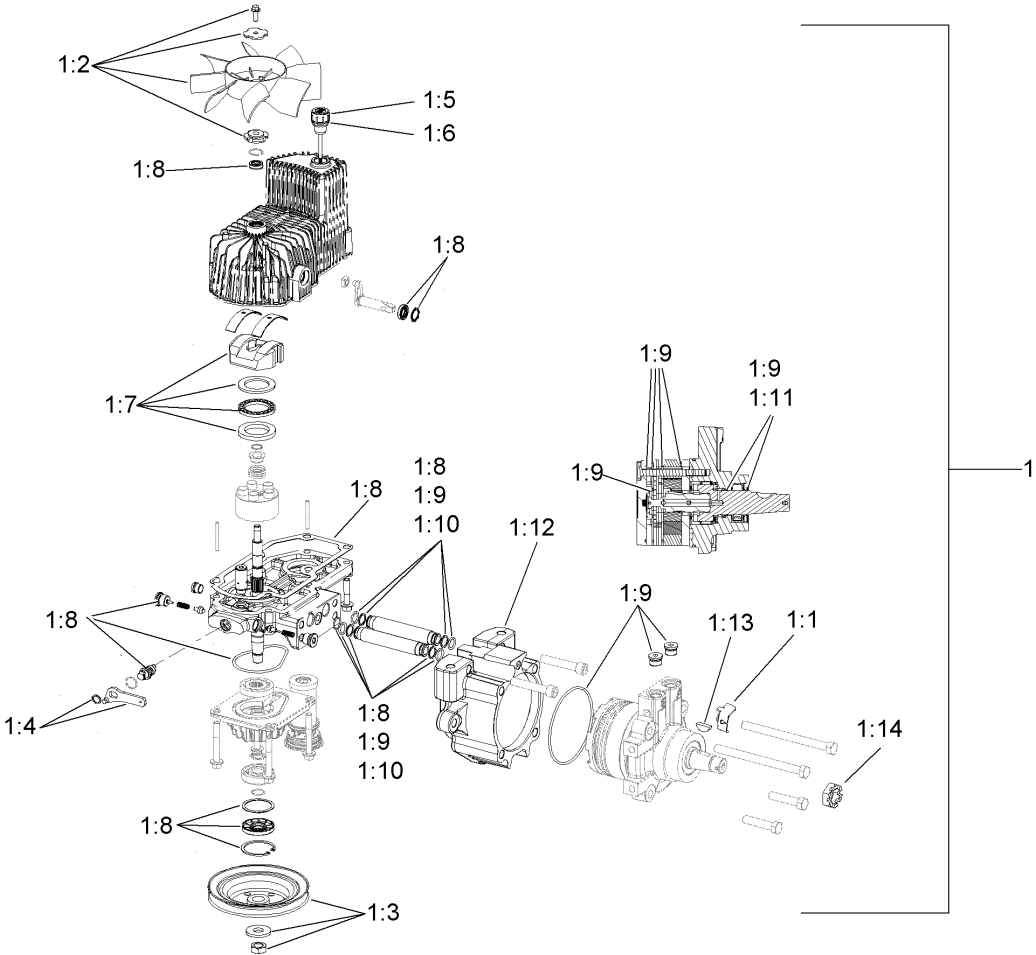 


LH Hydro Assembly No. 116-1382

Ref	Part No.	Qty.	Description				
② 1		1	Hydro-LH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
① 1:99	116-1373	1	Flow Test Kit				

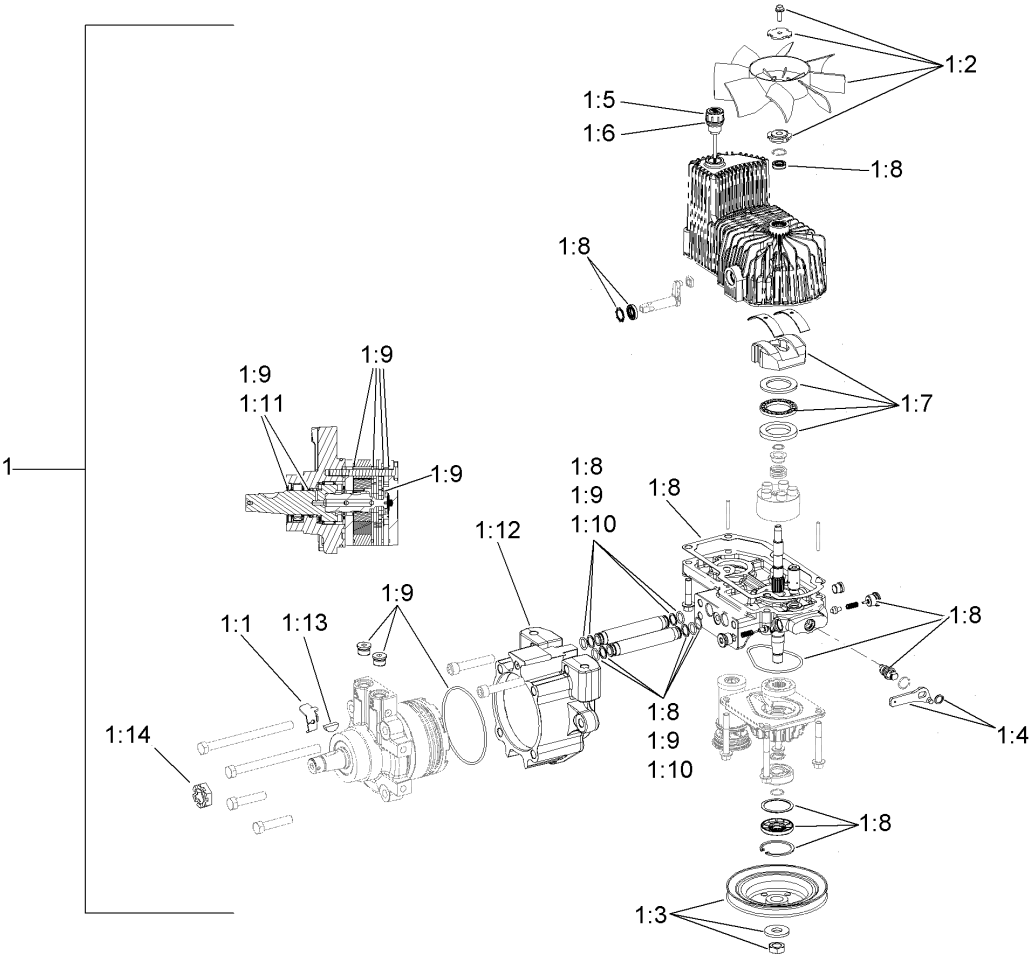 


RH Hydro Assembly No. 116-1383

Ref	Part No.	Qty.	Description				
● 1		1	Hydro-RH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
● 1:99	116-1373	1	Flow Test Kit				

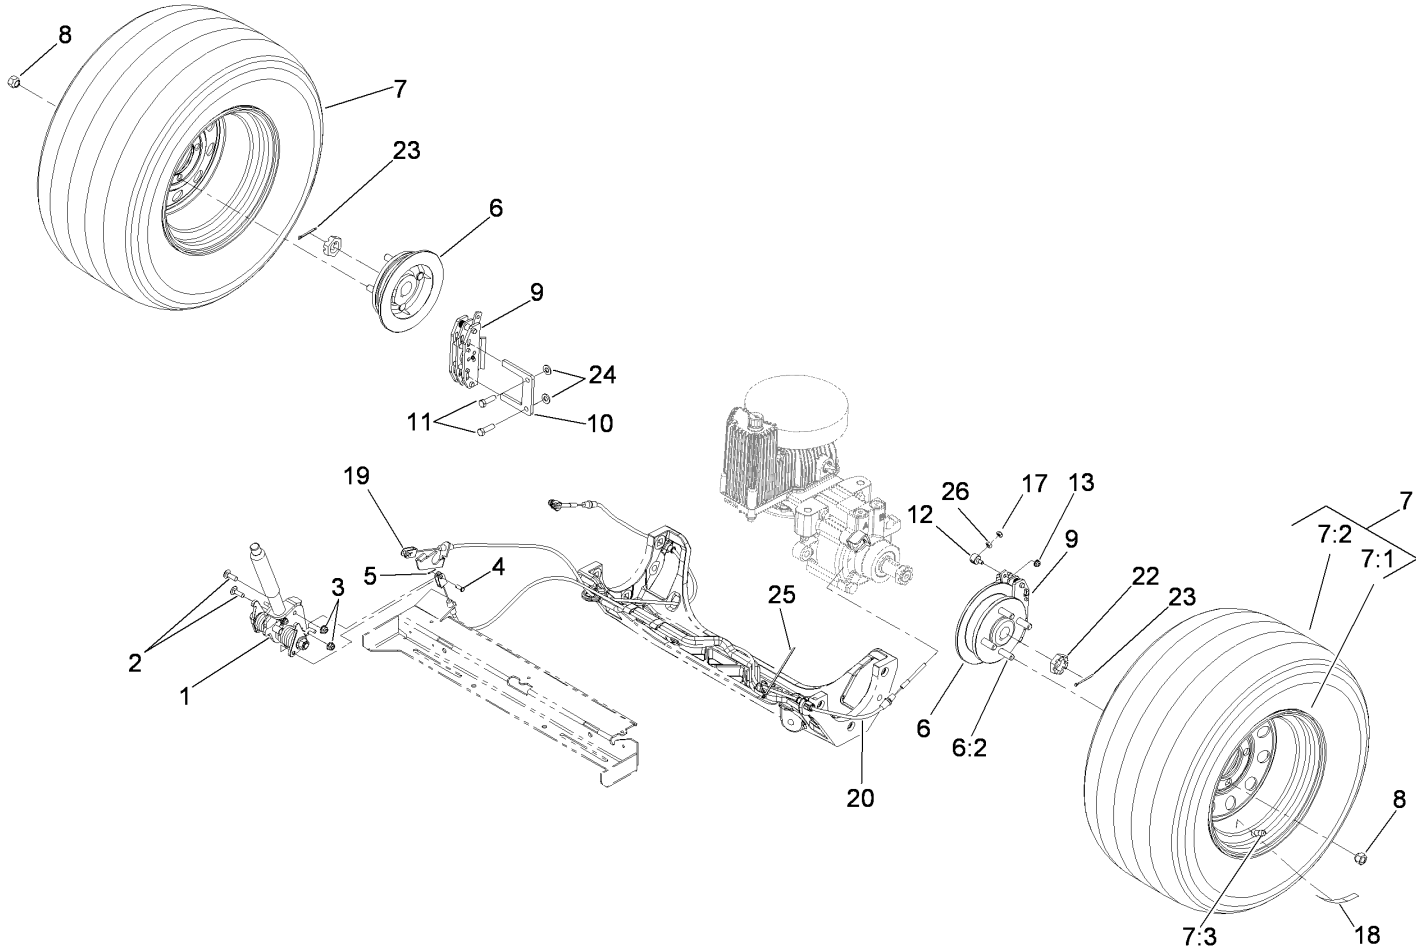 


Rear Wheel and Park Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	116-1878	1	Brake Handle ASM	25	116-0940	1	Tie-Cable
2	3230-2	2	Bolt-CARR	26	3219-1	2	Nut-Hex
3	104-8300	2	Nut-Flange, NI				
4	60-1730	2	Pin-Clevis				
5	3272-1	2	Pin-Cotter				
6	117-6163	2	Wheel Hub And Stud ASM				
6:2	1-633926	4	Stud-Wheel				
7	109-3158	2	Wheel & Tire ASM				
7:1	109-3156	1	Rim ASM				
7:2	103-2744	1	Tire				
7:3	232-27	1	Stem-Valve				
8	242-50	8	Nut-Lug				
9	109-2889	2	Caliper-Brake				
10	109-0958	2	Plate-Mount, Brake				
11	323-7	4	Screw-HH				
12	112-8379	2	Swivel				
13	104-7201	2	Nut-HF				
17	3296-13	2	Nut-Lock NI				
18	116-0165	2	Decal-Hub, Wheel				
19	115-3584	1	Cable				
20	115-3585	1	Cable				
22	1-809036	2	Nut-HH				
23	1-806800	2	Pin-Cotter				
24	3256-24	4	Washer-Flat				

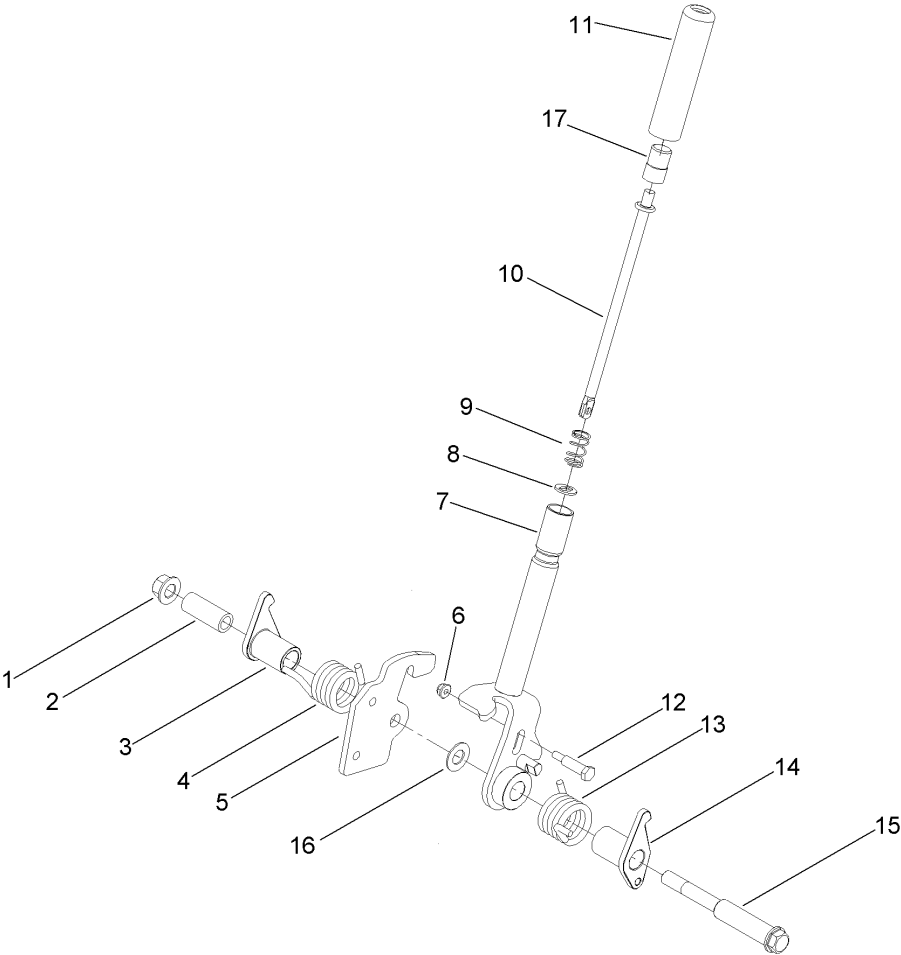 


Brake Handle Assembly No. 116-1878

Ref	Part No.	Qty.	Description				
1	99-5107	1	Nut-Lock				
2	117-0380	1	Spacer				
3	115-3580	1	Arm-Brake, LH				
4	117-0376	1	Spring-Torsion, RH				
5	115-3574	1	Plate-Latch				
6	104-7201	1	Nut-HF				
7	116-1876-03	1	Brake Handle ASM				
8	114-1207	1	Washer-Special				
9	114-8187	1	Spring-Compression				
10	115-3581	1	Rod-Release, Brake				
11	115-3592	1	Grip				
12	112-8387	1	Bolt-Shoulder				
13	117-0375	1	Spring-Torsion, LH				
14	115-3579	1	Arm-Brake, RH				
15	117-0379	1	Bolt-Shoulder				
16	117-0378	1	Washer				
17	115-2750	1	Knob				

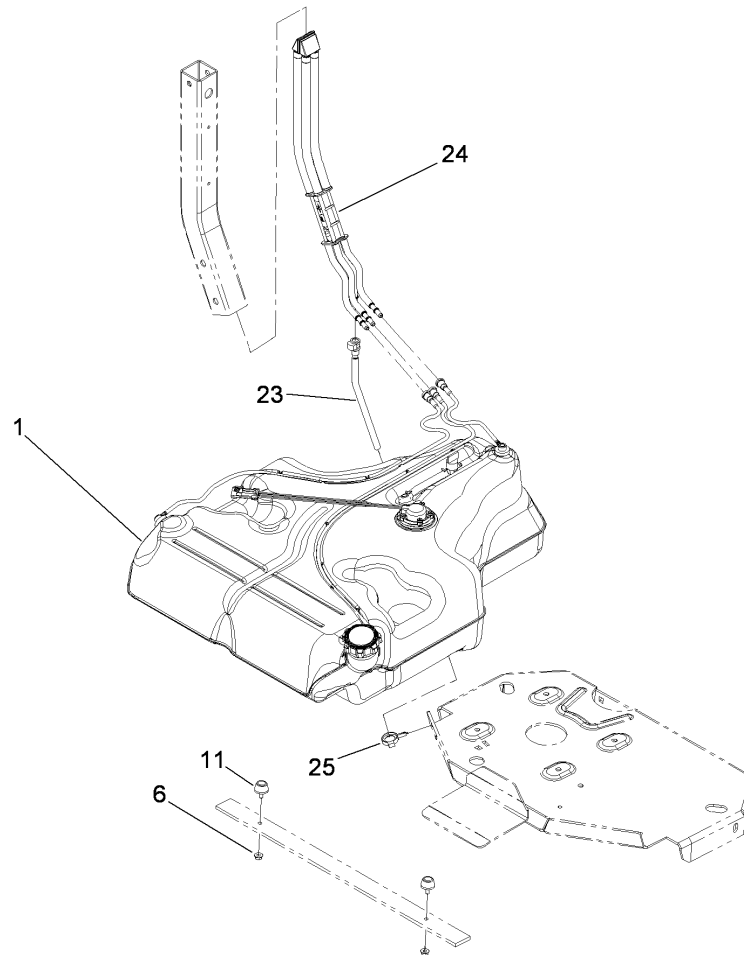 


Fuel System Assembly

Ref	Part No.	Qty.	Description
1	109-9656	1	Fuel Tank ASM (W/O Sender)
1	109-9357	1	Fuel Tank ASM
6	32128-33	2	Nut-HF
11	109-2365	2	Bumper-Rubber (W/Stud)
23	109-9450	1	Tube-Vent, Fuel Drain
24	109-9491	1	Fuel Manifold Vent ASM
25	105-1853	1	Clamp-Hose

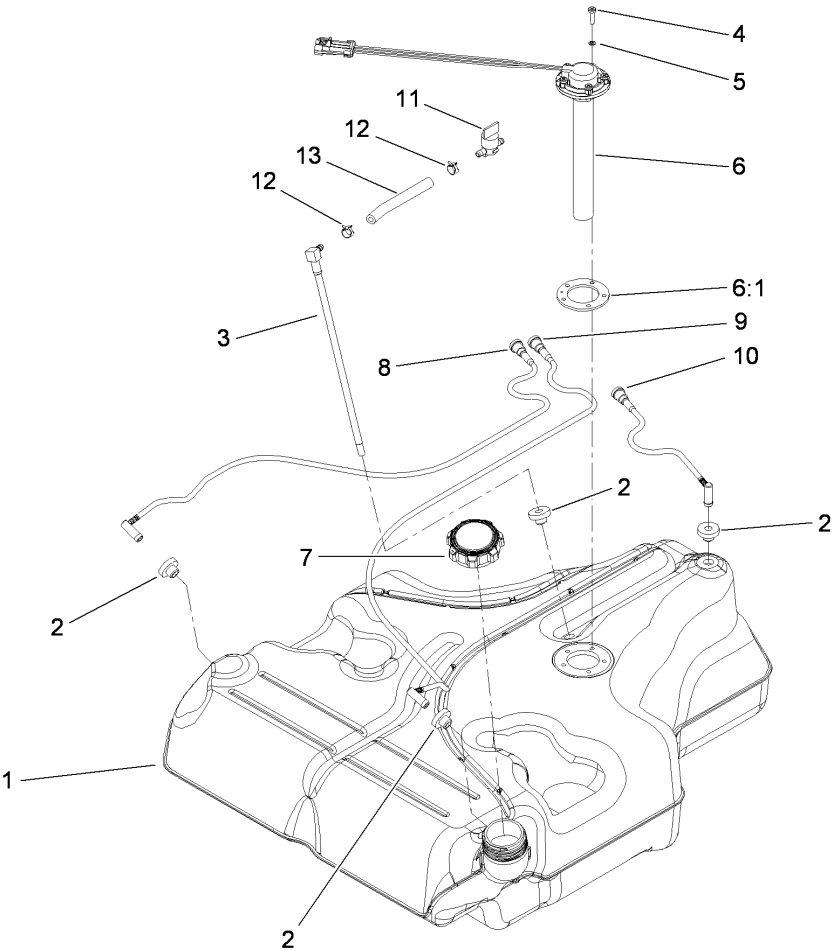 


Fuel Tank Assembly No. 109-9357

Ref	Part No.	Qty.	Description				
1		1	Tank-Fuel, Belly				
2	46-6560	4	Bushing				
3	109-9364	1	Fitting-Fuel (W/Line And Screen)				
4	9107944	5	Screw-Pan				
5	3253-17	5	Washer-Lock				
6	116-0003	1	Sender-Fuel Level				
6:1	109-9620	1	Gasket-Sender, Fuel				
7	109-9619	1	Cap-Fuel				
8	109-9447	1	Tube-Vent, RH				
9	109-9448	1	Tube-Vent, LH				
10	109-9449	1	Tube-Vent, Rear				
11	1-603770	1	Valve-Fuel				
12	2412-98	2	Clamp				
13	109-0650	1	Hose-Fuel				

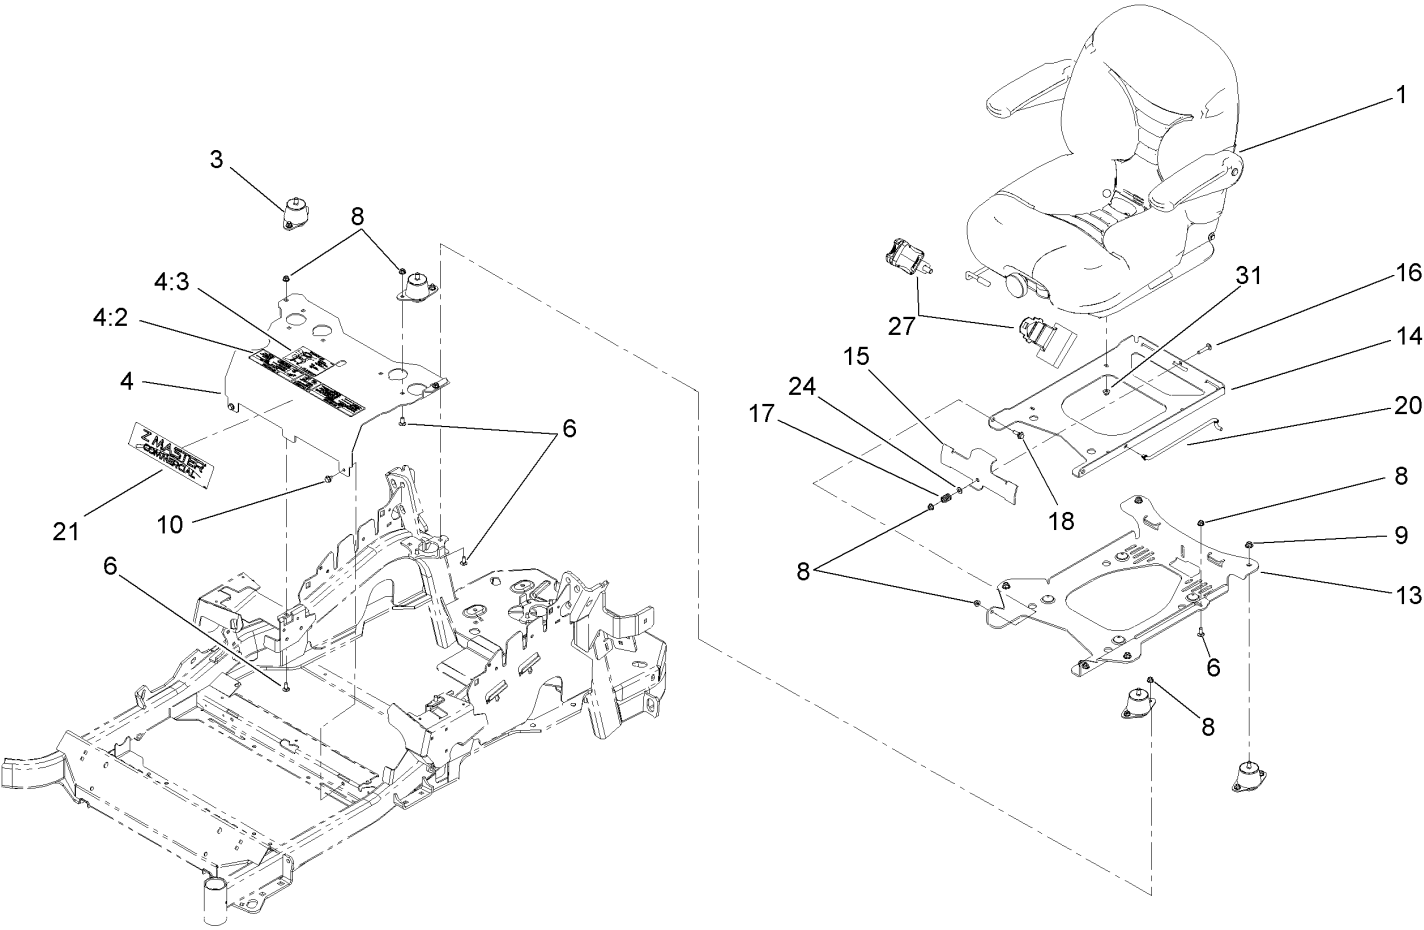 


Seat Mounting Assembly

Ref	Part No.	Qty.	Description				
1	109-9903	1	Seat ASM				
3	109-9034	4	Isolator-Seat				
4	109-9036	1	Mount-Seat				
4:2	109-7069	1	Decal-Console				
4:3	116-0211	1	Decal-Service Aid				
6	3230-23	11	Screw-CARR				
8	104-8300	14	Nut-Flange, NI				
9	104-8301	4	Nut-Flange, NI				
10	9266934	2	Screw				
13	116-0181-03	1	Plate-Support, Seat Tilt				
14	116-0179-03	1	Plate-Frame, Seat Tilt				
15	109-9881-03	1	Plate-Latch, Seat				
16	3230-4	1	Screw-CARR				
17	107-3017	1	Spring-Compression				
18	116-1297	2	Screw, Shoulder				
20	116-0070	1	Rod-Prop				
21	114-5878	1	Decal-Dash				
24	3256-23	1	Washer-Flat				
27	116-0751	1	Seat Belt Kit (Short)				
31	32128-25	4	Nut-HF				

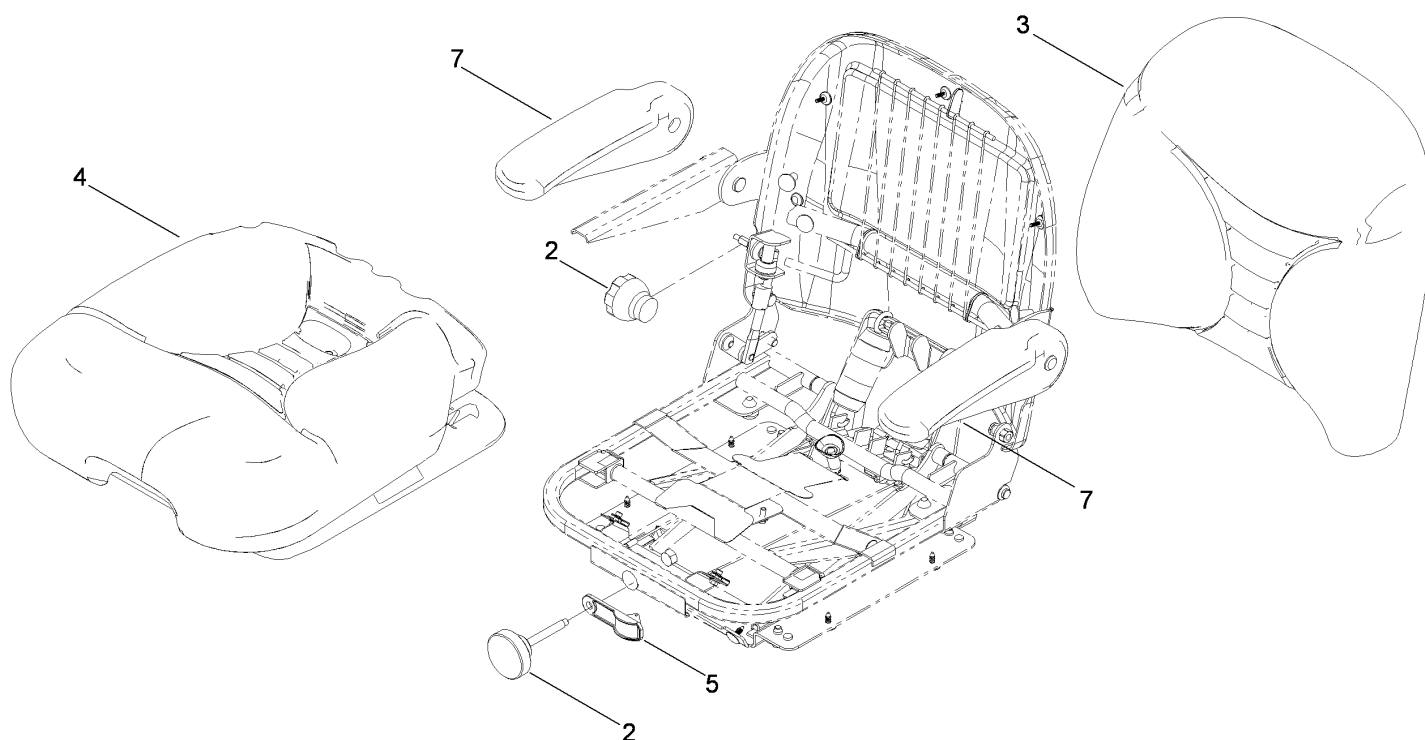 

Seat Assembly No.109-9903


Ref	Part No.	Qty.	Description
2	107-1881	1	Knob Kit
3	107-1882	1	Back Cushion Kit
4	107-1883	1	Bottom Cushion Kit
5	107-1885	1	Weight Indicator Kit
7	107-1887	1	Armrest Kit

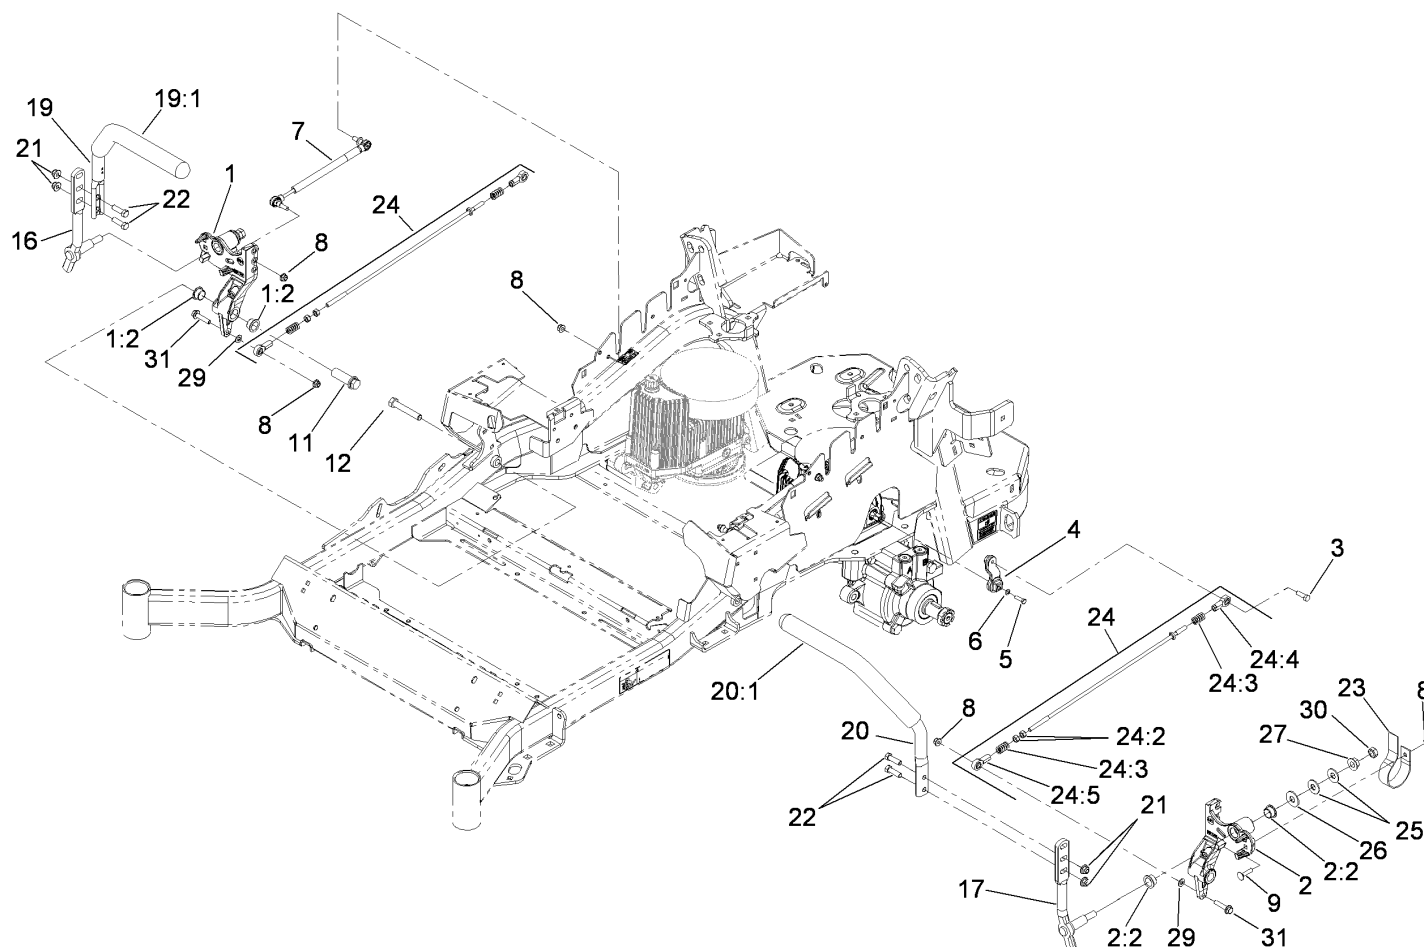 

Motion Control Assembly


Ref	Part No.	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-Thread Locking
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH
6	1-303435	2	Washer-Spring
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Flange, NI
9	3230-2	2	Bolt-CARR
11	109-5891	2	Hub-Threaded
12	325-12	2	Screw-HH
16	116-0039	1	Lever-Control Motion, RH
17	116-0040	1	Lever-Control Motion, LH
19	109-6591	1	RH Steering Handle ASM
19:1	106-9987	1	Grip-Control, Motion
20	109-6592	1	LH Steering Handle ASM
20:1	106-9987	1	Grip-Control, Motion
21	104-8301	4	Nut-Flange, NI
22	323-7	4	Screw-HH
23	109-5575	2	Spring-Leaf

Ref	Part No.	Qty.	Description
24	109-8106	2	Front Pump Linkage ASM
24:2	3219-2	2	Nut-Hex
24:3	1-323245	2	Spring-Compression
24:4	1-633152	1	Balljoint-LH
24:5	1-543017	1	Balljoint-RH
25	109-9505	4	Washer-Spring
26	3256-6	2	Washer-Flat
27	32128-56	2	Nut-HF
29	3256-23	2	Washer-Flat
30	3218-5	2	Nut-Jam
31	115-1794	2	Screw-HHF

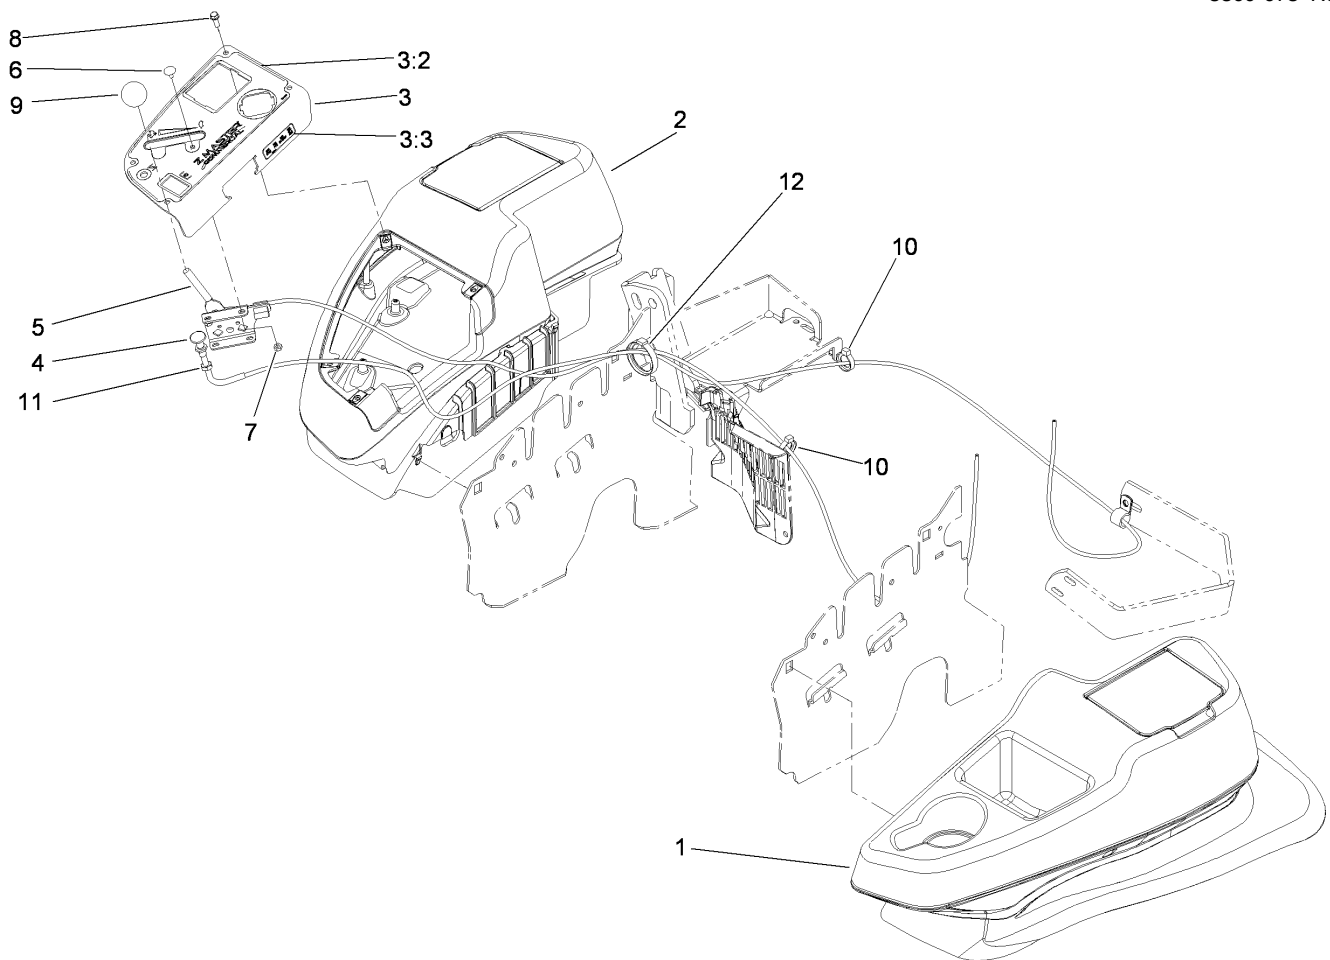 


Fender, Console and Control Assembly

Ref	Part No.	Qty.	Description				
1	115-7401	1	LH Wide Fender/Console ASM				
2	115-7400	1	RH Wide Fender/Console ASM				
3	114-9836	1	Control Panel ASM				
3:2	114-9834	1	Decal-Panel, Control				
3:3	114-4466	1	Decal-Fuses				
4	115-2754	1	Control-Choke ASM				
5	115-2751	1	Control-Throttle ASM				
6	1-807513	2	Bolt-CARR				
7	3296-2	2	Nut-Lock, NI				
8	32105-15	4	Screw				
9	1-603175	1	Knob-Ball				
10	105-1853	2	Clamp-Hose				
11	3220-3	1	Nut-HJ				
12	117-7817	1	Clamp-Harness				

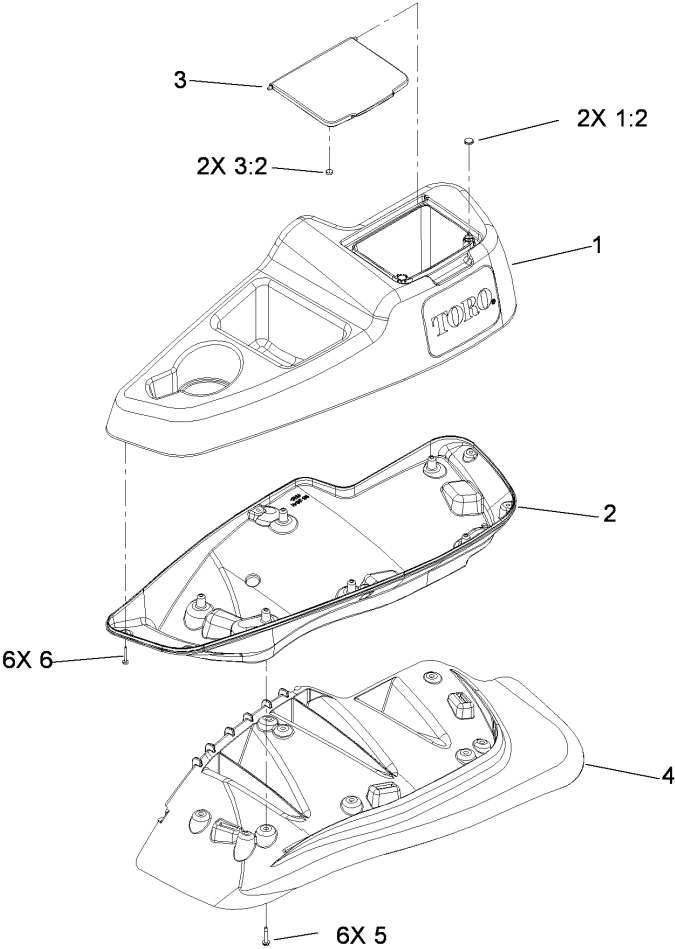 


LH Console Assembly No. 115-7401

Ref	Part No.	Qty.	Description				
1	114-1539	1	LH Wide Console Top ASM				
1:2	117-0883	2	Puck				
2	115-3641	1	Console-Lwr, LH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9085	1	Fender-Wide, LH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

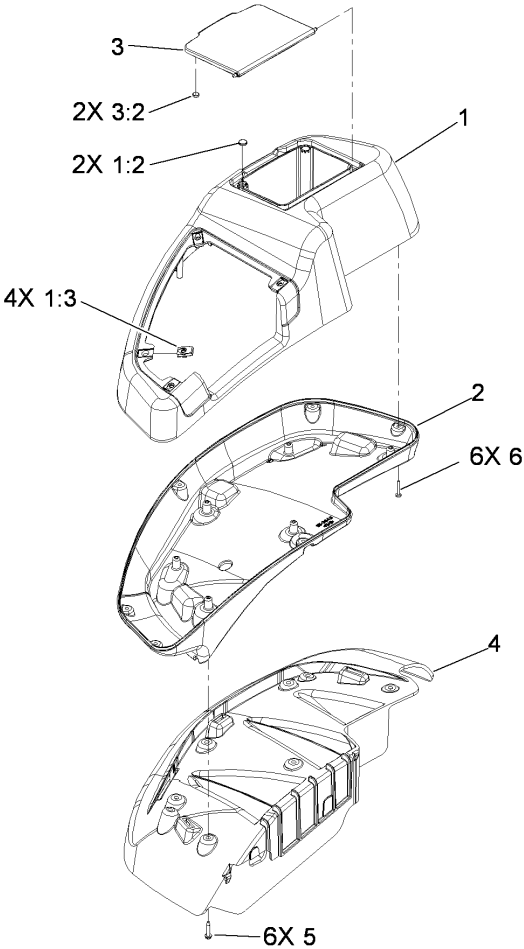 


RH Console Assembly No. 115-7400

Ref	Part No.	Qty.	Description				
1	114-1538	1	RH Wide Top Console ASM				
1:2	117-0883	2	Puck				
1:3	107069	4	Clip				
2	115-3643	1	Console-Lwr, RH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9083	1	Fender-Wide, RH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

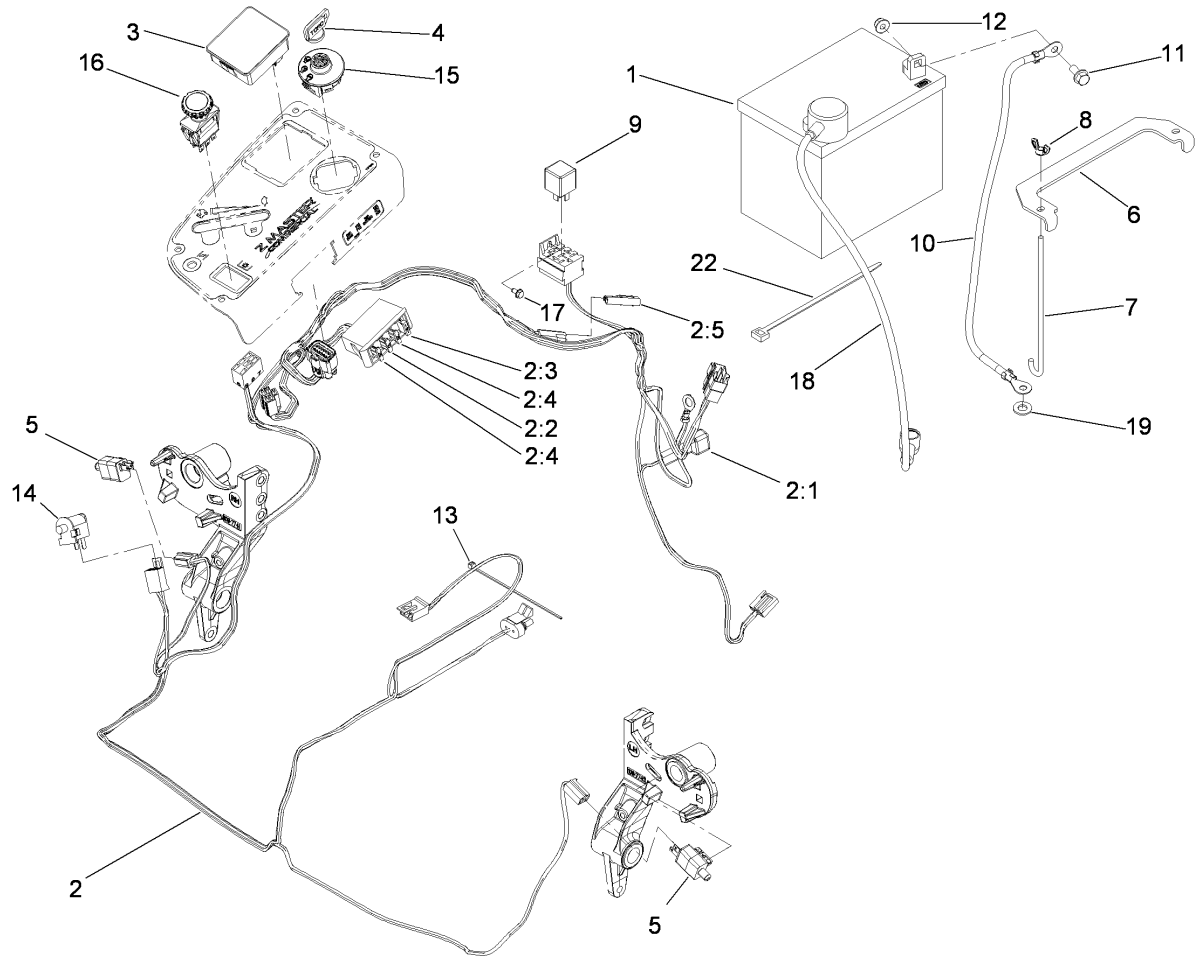 

Electrical System Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-2492	1	Battery	22	1-303335	1	Tie-Plastic
2	115-2796	1	Harness-Wire, Main				
2:1	103-3895	1	Diode-Tvs				
2:2	218-578	1	Fuse-10 Amp				
2:3	109355	1	Fuse-15 Amp				
2:4	109102	2	Fuse-25 Amp				
2:5	116-0053	1	Cap-Plug				
3	116-0916	1	Module-Meter, Hour				
4	63-8360	1	Key-Ignition				
5	110-6765	2	Switch-Single Pole No				
6	116-0042-03	1	Strap-Tie Down, Battery				
7	1-633651	2	Bolt-Holddown				
8	1-543792	2	Wingnut				
9	1-643275	1	Relay				
10	114-1218	1	Cable-Battery, Negative				
11	3234-5	2	Screw-HHF				
12	104-8300	2	Nut-Flange, NI				
13	1-303287	3	Tie-Plastic				
14	82-2190	1	Switch-Bail				
15	116-0229	1	Switch-Ignition				
16	116-0124	1	Switch-PTO, 10A				
17	104-2065	1	Screw-HWH				
18	115-3864	1	Cable-Battery, Positive				
19	3256-24	1	Washer-Flat				

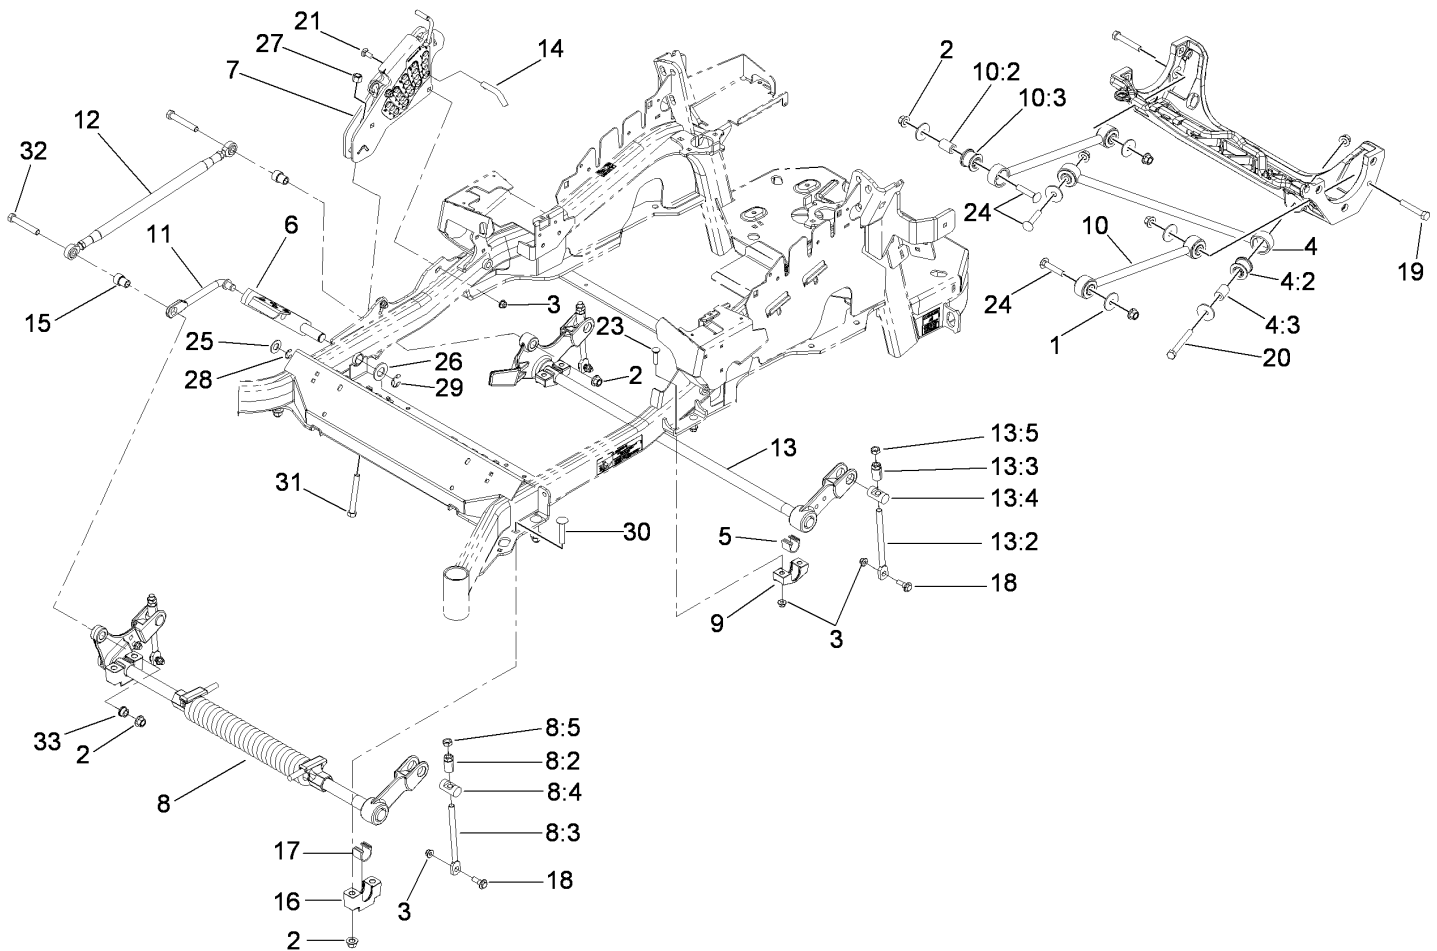 

Deck Lift Assembly


Ref	Part No.	Qty.	Description
1	86-1990	6	Washer
2	99-5107	12	Nut-Lock
3	104-8301	10	Nut-Flange, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross, Rear Shaft
6	109-7202-01	1	Lever-Foot
7	109-7438	1	HOC ASM
8	116-1651	1	Front Cross Shaft ASM
8:2	109-7840	2	Adjuster-Lift, Deck
8:3	109-8007	2	Link-Adjuster, Deck Lift
8:4	109-8353	2	Trunnion
8:5	3218-5	2	Nut-Jam
9	116-0818-03	2	Support-Bearing, Cross Shaft Rear
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
11	109-8004	1	Link-Lever, Foot
12	116-0806	1	Side Link ASM
13	116-1619	1	Rear Cross Shaft ASM
13:2	109-8007	2	Link-Adjuster, Deck Lift
13:3	109-7840	2	Adjuster-Lift, Deck

Ref	Part No.	Qty.	Description
13:4	109-8353	2	Trunnion
13:5	3218-5	2	Nut-Jam
14	109-8757	1	Pin-HOC
15	116-0795	2	Bushing-Flange
16	109-9409	2	Support-Cross Shaft, Bearing Front
17	109-9410	2	Bearing-Shaft Front, Cross
18	109-9840	4	Screw-Shoulder, HHF
19	325-12	2	Screw-HH
20	325-17	1	Screw-HH
21	3231-2	2	Screw-CARR
23	3231-5	4	Screw-CARR
24	3233-34	3	Screw-CARR
25	3256-27	1	Washer-Flat
26	3256-29	1	Washer-Flat
27	3296-23	1	Nut-Lock, NI
28	32120-19	1	E-Ring
29	32151-103	1	Ring-Retaining, EXT
30	3233-37	4	Screw-CARR, Short Neck
31	116-0559	1	Bolt-TAP
32	325-13	2	Screw-HH
33	116-0796	1	Bushing-Flange

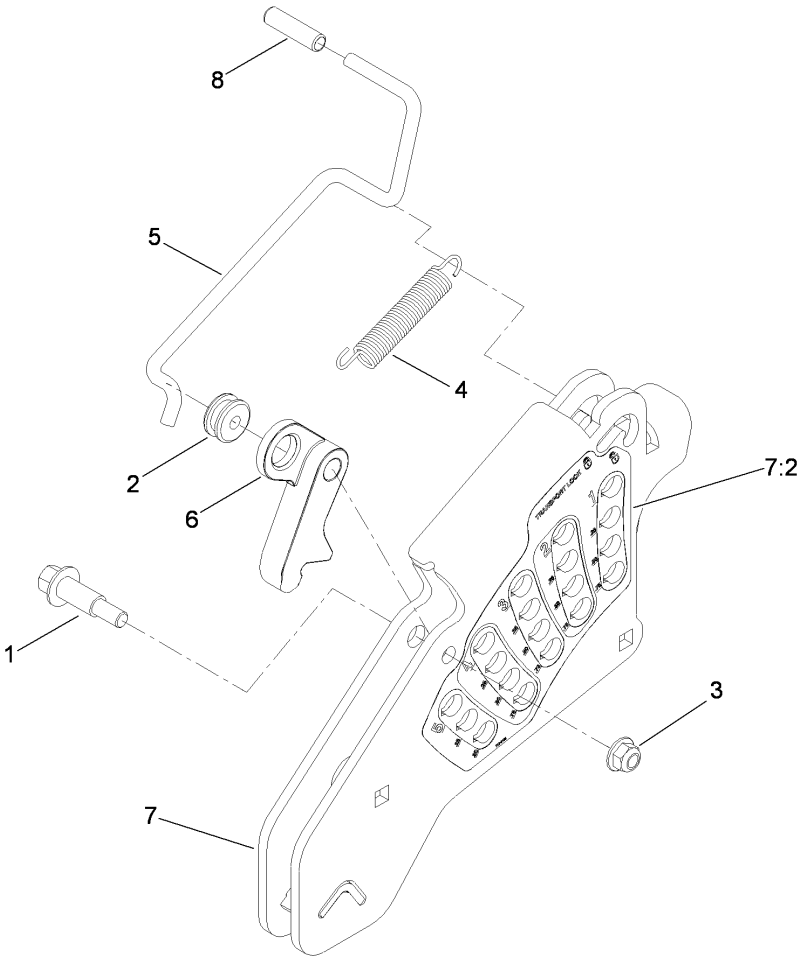 


Height-of-Cut Assembly No. 109-7438

Ref	Part No.	Qty.	Description				
1	62-1330	1	Bolt-Shoulder				
2	109-7130	1	Grommet				
3	104-8301	1	Nut-Flange, NI				
4	109-7124	1	Spring-Extension				
5	109-7128	1	Rod-Lock, Transport				
6	116-0118	1	Pawl-Transport, HOC				
7	109-7335	1	HOC Plate ASM				
7:2	116-0752	1	Decal-HOC				
8	109-8250	1	Grip-Lever				

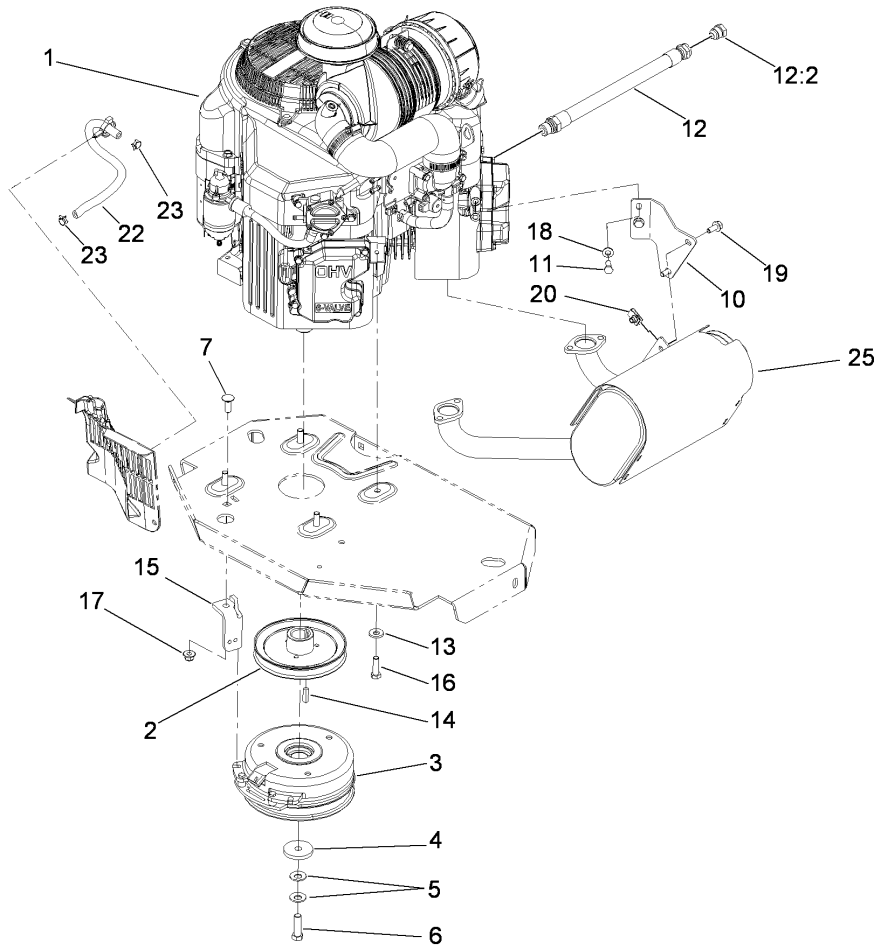 


Engine, Muffler and Clutch Assembly

Ref	Part No.	Qty.	Description				
1		1	Engine-Kawasaki, Fxt00V-As06				
2	109-9905	1	Sheave				
3	116-1621	1	Clutch Kit				
4	109-6919	1	Washer-Clutch				
5	1-603610	2	Washer-Spring				
6	109-9761	1	Screw-HH W/Loctite				
7	3231-22	1	Screw-CARR				
10	116-1587	1	Bracket-Muffler				
11	33114-020	2	Screw-HH				
12	109-4490	1	Oil Drain Hose ASM				
12:2	109-1012	1	Plug				
13	98-5975	4	Washer-Belleville				
14	1-807259	1	Key				
15	109-8138-01	1	Anchor-Clutch				
16	323-7	4	Screw-HH				
17	104-8301	1	Nut-Flange, NI				
18	1-303334	2	Washer-Spring				
19	3234-5	2	Screw-HHF				
20	94-2413	2	U-Nut				
22	109-0296	1	Hose-Fuel				
23	2412-98	2	Clamp				
25	116-1707	1	Muffler-Big Block, Kawasaki				

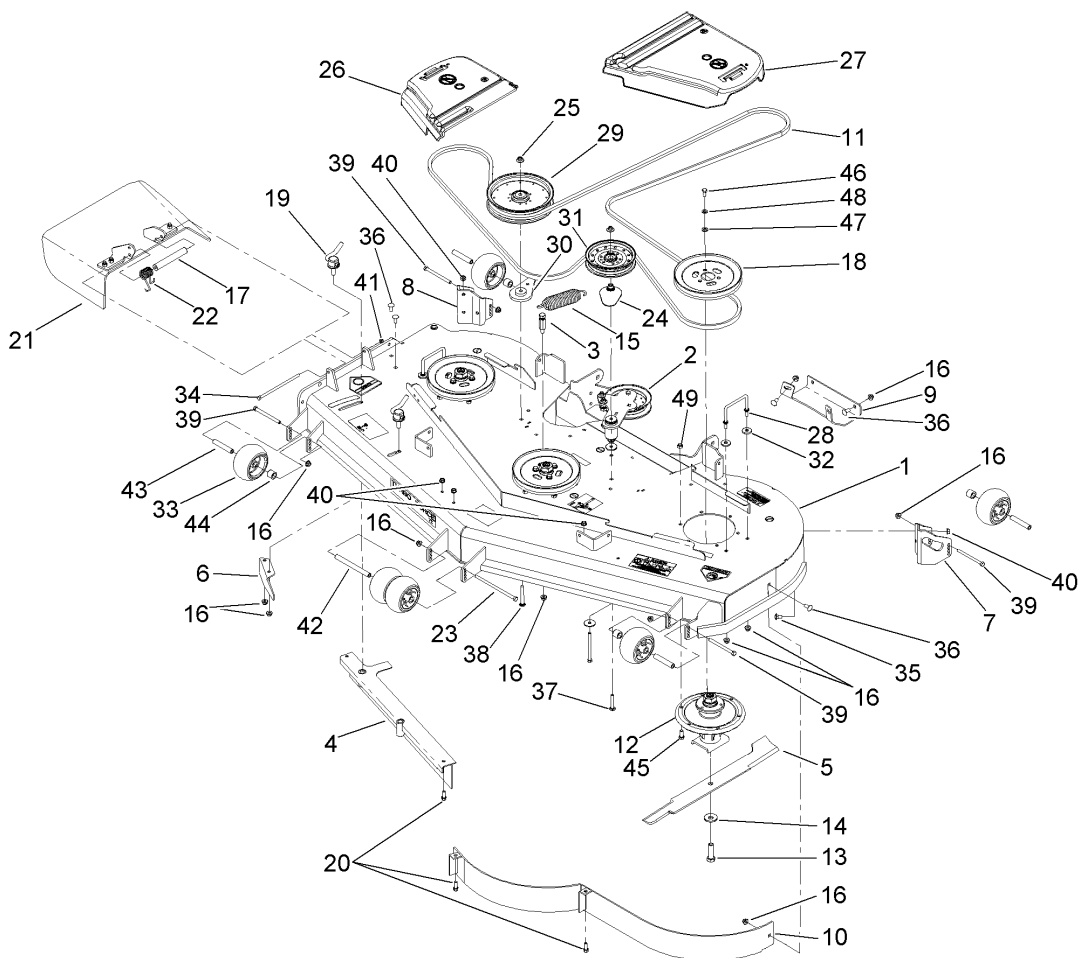 


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-4195	1	Deck And Decal ASM	25	109-6658	2	Nut-Flange, NI (Split)
2	114-5875	1	Idler Arm ASM	26	116-0094	1	Cover-Belt, RH
3	114-5867	1	Anchor-Spring, Tall	27	109-6938	1	Cover-Belt, LH
4	105-7669-01	1	Baffle ASM	28	109-6982	2	Wireform-Cover
5	105-7784-03	3	Blade-Hi Flow, 24.5 Inch	29	109-8590	1	Pulley-Idler
6	106-3216-01	1	Baffle-Discharge	30	109-9416	1	Spacer-Idler
7	106-7354-01	1	Mount-Wheel, LH	31	114-5895	1	Pulley-Idler, Flat
8	106-7355-01	1	Mount-Wheel, RH	32	1-373034	4	Washer
9	112-4230-01	1	Plate-Skid	33	1-603299	6	Roller-Scalp, Anti
10	114-5843-01	1	Baffle ASM	34	322-50	1	Screw-HH
11	114-5859	1	Belt-V	35	3231-1	6	Screw-CARR
12	117-3840	3	Spindle ASM	36	3231-27	7	Screw-CARR
13	51-4060	3	Screw-Blade	37	3231-40	1	Bolt-CARR
14	103-0865	3	Washer-Blade Bolt, Heavy	38	3231-42	1	Screw-CARR
15	116-0133	1	Extension-Spring	39	323-23	4	Screw-HH
16	104-8301	17	Nut-Flange, NI	40	3290-357	9	Nut-HHF, Whiz
17	105-4622	1	Spacer	41	3296-47	1	Nut-Lock, NI
18	105-7733	3	Pulley	42	98-5967	1	Spacer-Wheel
19	107-1664	2	Lever ASM	43	98-7912	4	Tube-Spanner
20	92-1624	3	Screw-HWH	44	98-7913	4	Tube-Spacer
21	108-2792	1	Rubber Deflector ASM	45	33115-025	18	Screw-HH
22	108-4052	1	Spring-Torsion	46	323-4	9	Screw-HH
23	108-5388	1	Screw-HH	47	3256-24	9	Washer-Flat
24	109-2872	1	Spacer-Pulley	48	3290-455	9	Washer-Belleville

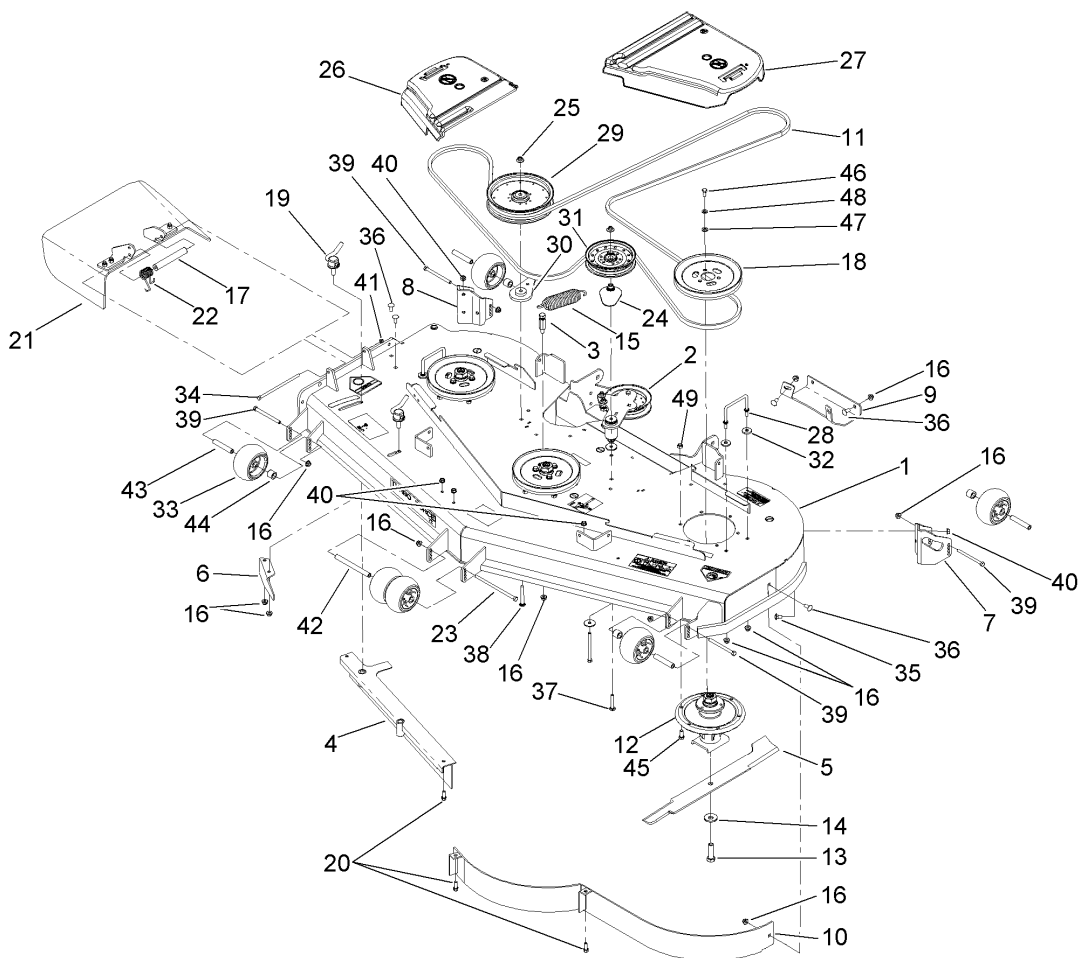 


Deck Assembly (continued)

Ref	Part No.	Qty.	Description
49	33025-00	18	Nut-Lock

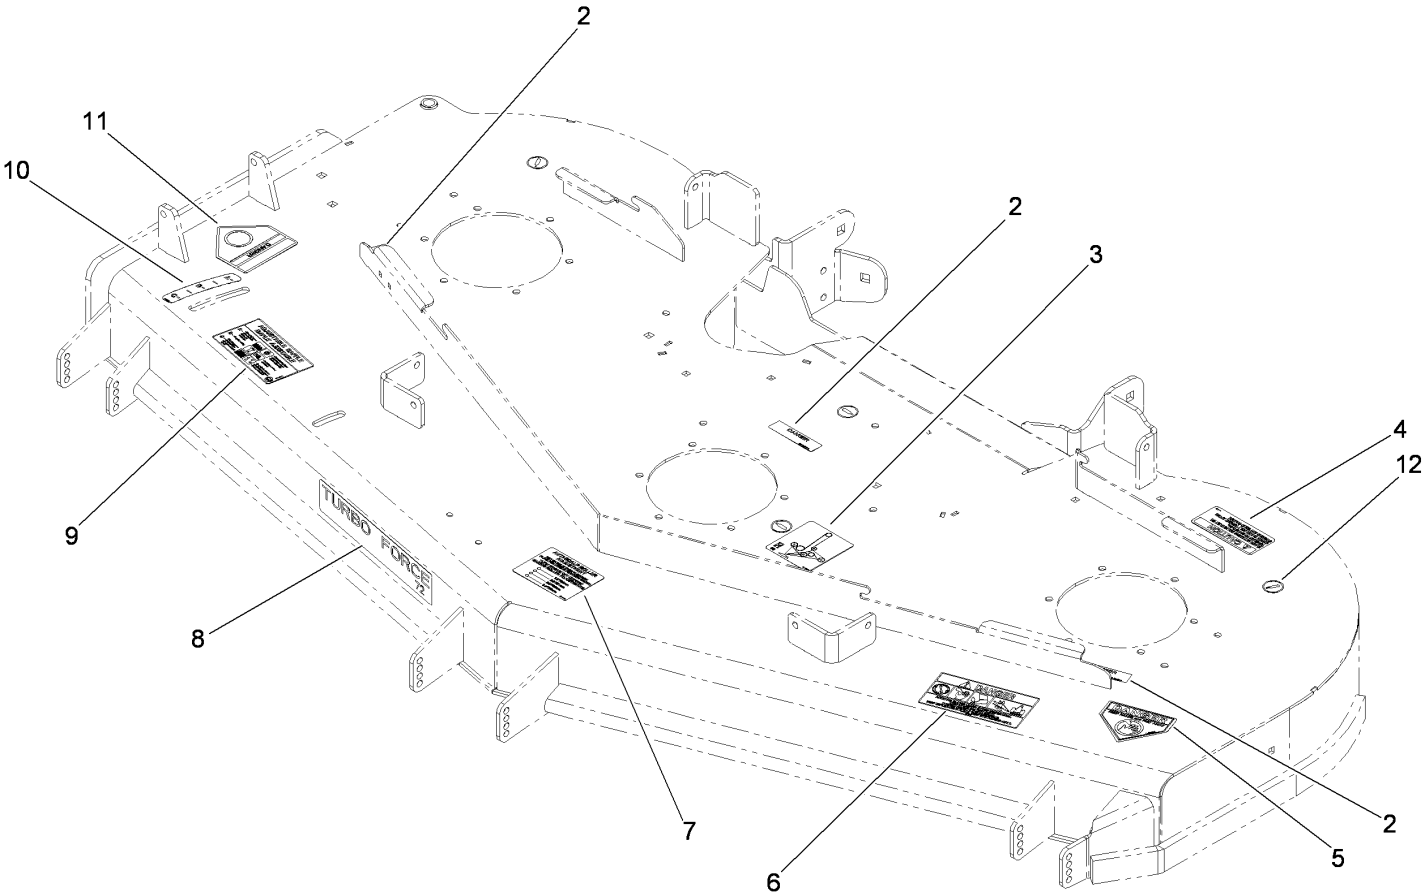 


Deck Decal Assembly No. 112-4195

Ref	Part No.	Qty.	Description				
2	98-5954	3	Decal-Cover, Missing				
3	115-7445	1	Decal-Routing, Deck Belt				
4	68-8340	1	Decal-Torque				
5	1-403005	1	Decal-Danger				
6	66-1340	1	Decal-Danger, Thrown Object				
7	105-7798	1	Decal-Scalp, Anti				
8	107-1620	1	Decal				
9	110-2068	1	Decal-Adjustment, Baffle				
10	110-2067	1	Decal-Setting, Baffle				
11	54-9220	1	Decal-Danger				
12	58-6520	4	Decal-Grease				

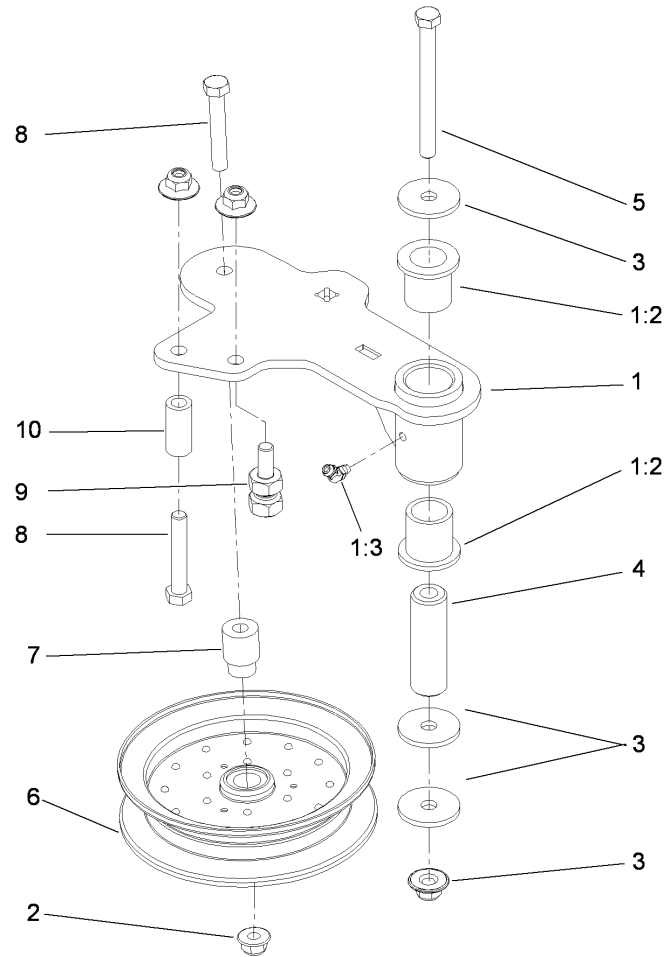 

Idler Assembly

Ref	Part No.	Qty.	Description				
1	114-5870	1	Idler Arm ASM				
1:2	1-303514	2	Bearing-Flanged				
1:3	1481	1	Fitting-Grease				
2	109-6658	4	Nut-Flange, NI (Split)				
3	1-213069	3	Washer				
4	114-5848	1	Spacer-Plain				
5	98-5961	1	Screw-HH				
6	103-8743	1	Pulley-Idler, Flanged				
7	112-4212	1	Mount-Pulley				
8	323-11	2	Screw-HH				
9	114-5866	1	Anchor-Spring, Short				
10	104-0151	1	Spacer				

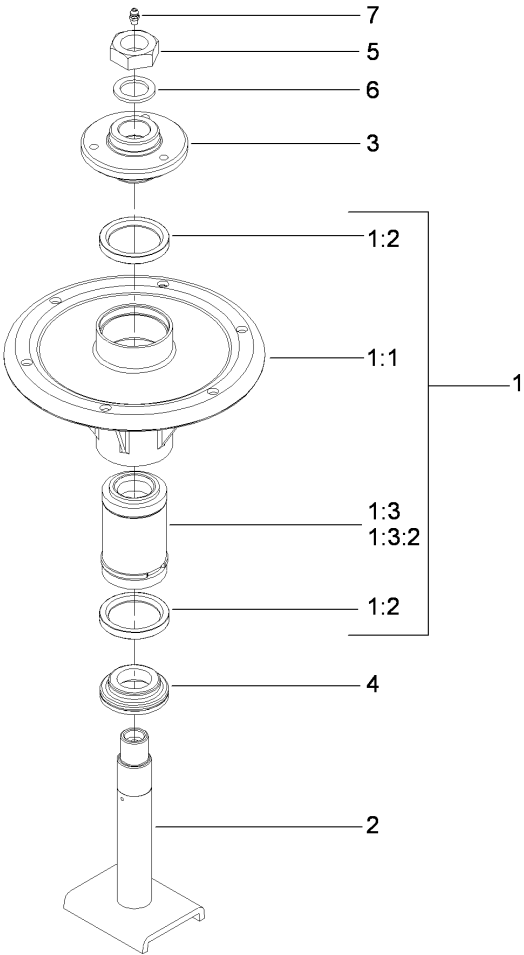 


Spindle Assembly No. 117-3840

Ref	Part No.	Qty.	Description				
② 1		1	Spindle Bearing ASM				
② 1:1		1	Housing-Spindle				
1:2	253-154	2	Seal-Oil				
1:3	71-2530	1	Bearing/Spacer Kit				
② 1:3:2		1	Spacer-Bearing				
2	117-3841	1	Spindle Shaft ASM				
3	114-1161	1	Hub-Spline				
4	69-6950	1	Spacer-Shaft, Spindle				
5	3296-49	1	Nut-Lock, NI				
6	3-8514	1	Washer-Thrust				
7	302-57	1	Fitting-Grease				


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

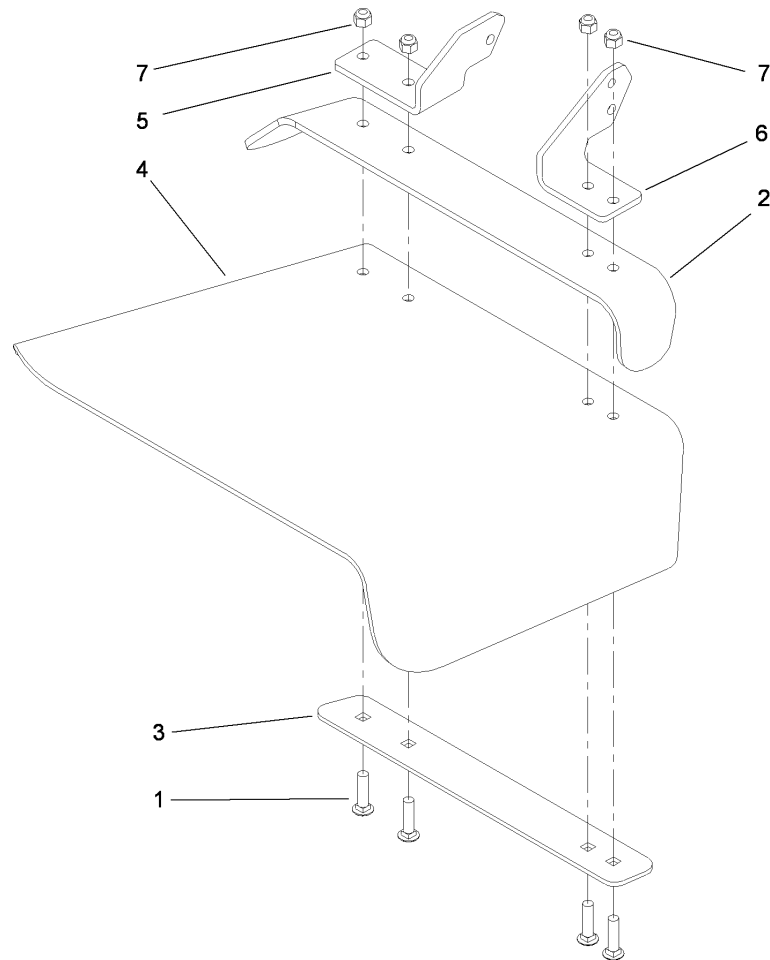 


Rubber Deflector Assembly No. 108-2792

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	108-5029	1	Deflector-Rubber				
5	108-4059-01	1	Plate-Hinge, Rear				
6	106-3253-01	1	Plate-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

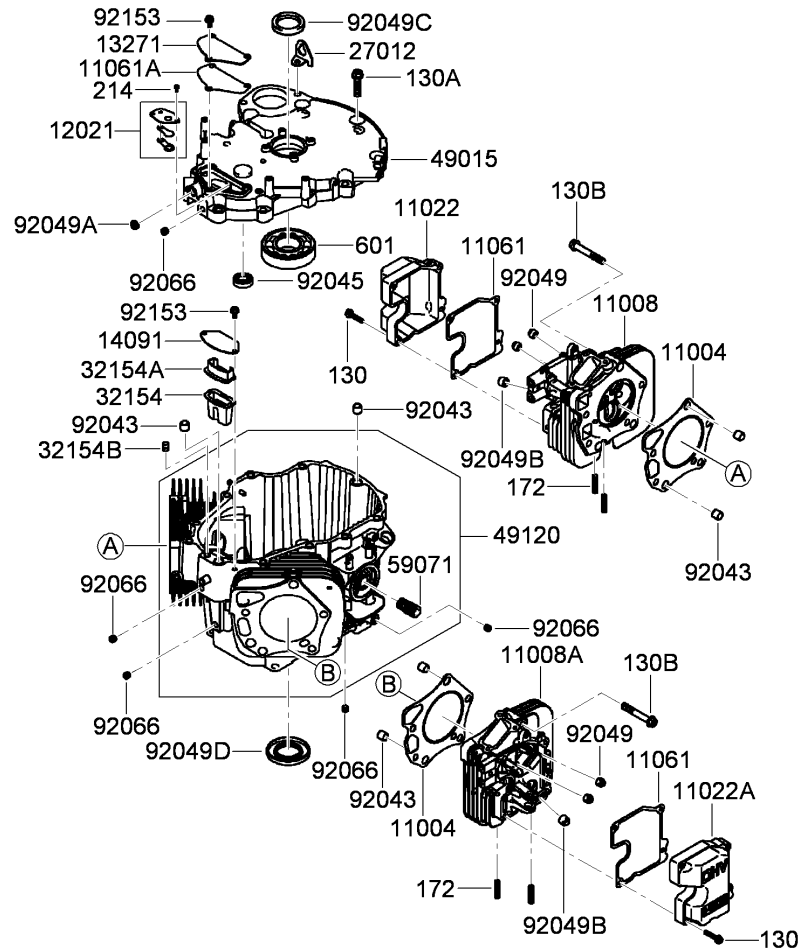 


Cylinder and Crankcase Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶130	130AA0630	8	Bolt-Flanged (6X30)	❶92045	92045-7002	1	Bearing-Ball, A (15X32X9 6002)
❶130A	130CA1040	11	Bolt-Flanged (10X40)	❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❶130B	130CA1065	10	Bolt-Flanged (10X65)	❶92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S)
❶172	172BA0818	4	Bolt-Stud (8X18)	❶92049B	92049-7020	2	Seal-Oil (7X15X13)
❶214	214AA0408	2	Screw-Pan +- (4X8)	❶92049C	92049-7024	1	Seal-Oil, S D (40X54X9 R Hs)
❶601	601A6308	1	Bearing-Ball	❶92049D	92049-7025	1	Seal-Oil, S D (40X72X8 L Vs)
❶11004	11004-7023	2	Gasket-Head	❶92066	92066-7002	5	Plug
❶11008	11008-7034	1	Head-Cylinder, No.1	❶92153	92153-7043	5	Bolt (6X12)
❶11008A	11008-7035	1	Head-Cylinder, No.2				
❶11022	11022-7012	1	Case-Rocker, No.1				
❶11022A	11022-7013	1	Case-Rocker, No.2				
❶11061	11061-7055	2	Gasket-Case, Rocker				
❶11061A	11061-7065	1	Gasket-Cover, Breather				
❶12021	12021-7003	1	Breather Reed Valve ASM				
❶13271	13271-7037	1	Plate-Cover, Breather				
❶14091	14091-7052	1	Cover-Breather				
❶27012	27012-7004	1	Hook				
❶32154	32154-7014	1	Pipe-Breather				
❶32154A	32154-7015	1	Pipe-Breather				
❶32154B	32154-7019	1	Pipe				
❶49015	49015-7060	1	Cover-Crankcase				
❶49120	49120-6174	1	Crankcase				
❶59071	59071-2079	1	Joint				
❶92043	92043-1266	6	Pin				

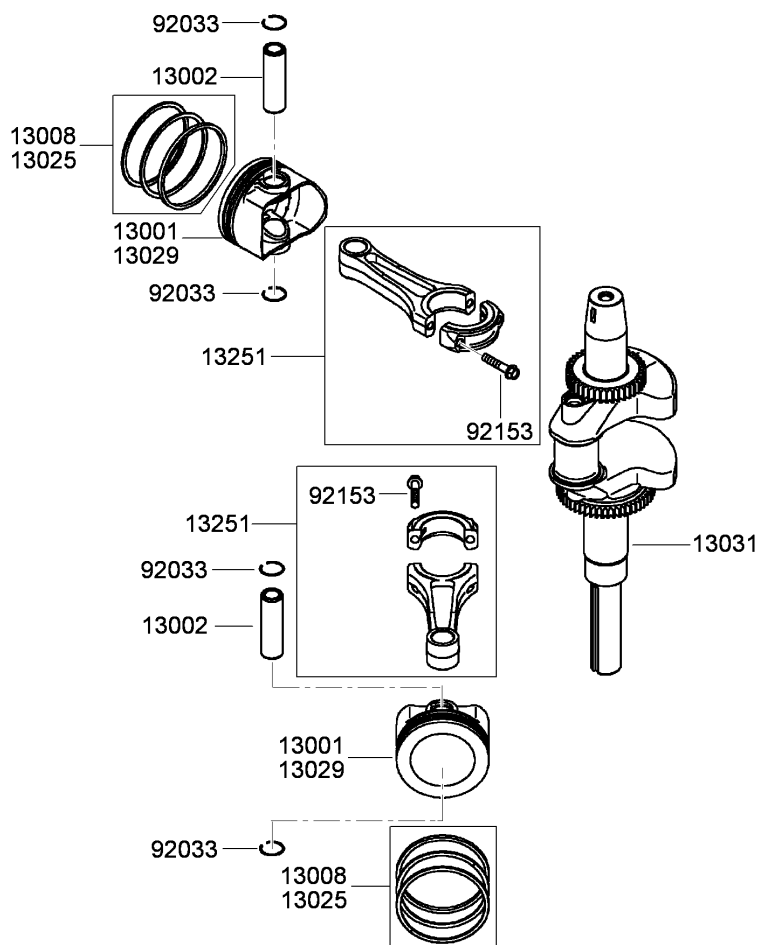 


Piston and Crankshaft Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
⑨13001	13001-7021	2	Piston-Engine				
⑨13002	13002-7004	2	Pin-Piston				
⑨13008	13008-7004	2	Piston Ring Set				
⑨13025	13025-7008	1	Piston Ring Set (L, 0.5)				
⑨13029	13029-7009	1	Piston-Engine (L, 0.5)				
⑨13031	13031-7080	1	Crankshaft				
⑨13251	13251-7018	2	Connecting Rod ASM				
⑨92033	92033-2176	4	Ring-Snap				
⑨92153	92153-2054	4	Bolt (7X35.2)				

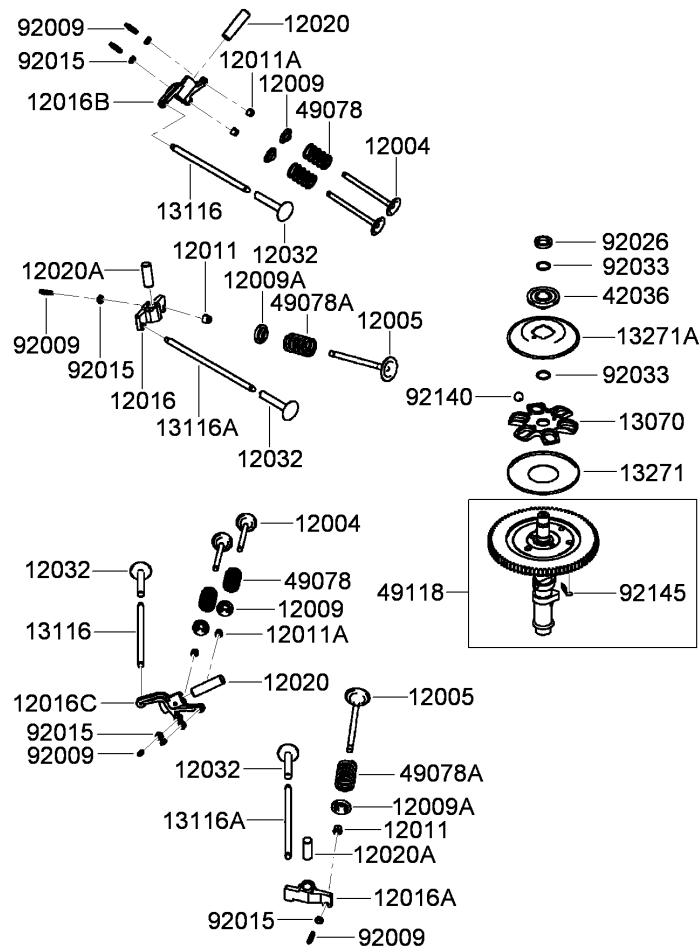 

Valve and Camshaft Assembly Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③12004	12004-7006	4	Valve-Intake	③92026	92026-7019	1	Spacer
③12005	12005-7007	2	Valve-Exhaust	③92033	92033-7001	2	Ring-Snap
③12009	12009-7001	4	Retainer-Spring, Valve	③92140	92140-7005	6	Ball
③12009A	12009-7002	2	Retainer-Spring, Valve	③92145	92145-7001	1	Spring
③12011	12011-2052	4	Collet				
③12011A	12011-2056	8	Collet				
③12016	12016-7011	1	Arm-Rocker (No.1 Ex)				
③12016A	12016-7013	1	Arm-Rocker (No.2 Ex)				
③12016B	12016-7014	1	Arm-Rocker (No.1 Intake)				
③12016C	12016-7015	1	Arm-Rocker (No.2 Intake)				
③12020	12020-7001	2	Shaft-Rocker (Intake)				
③12020A	12020-7002	2	Shaft-Rocker (Ex)				
③12032	12032-7002	4	Tappet				
③13070	13070-7004	1	Guide				
③13116	13116-2054	2	Rod-Push				
③13116A	13116-7005	2	Rod-Push				
③13271	13271-7007	1	Plate				
③13271A	13271-7021	1	Plate-Governor				
③42036	42036-7010	1	Sleeve				
③49078	49078-7002	4	Spring-Valve, Engine (Intake)				
③49078A	49078-7004	2	Spring-Valve, Engine (Exhaust)				
③49118	49118-7018	1	Camshaft ASM				
③92009	92009-1109	6	Screw				
③92015	92015-1137	6	Nut				

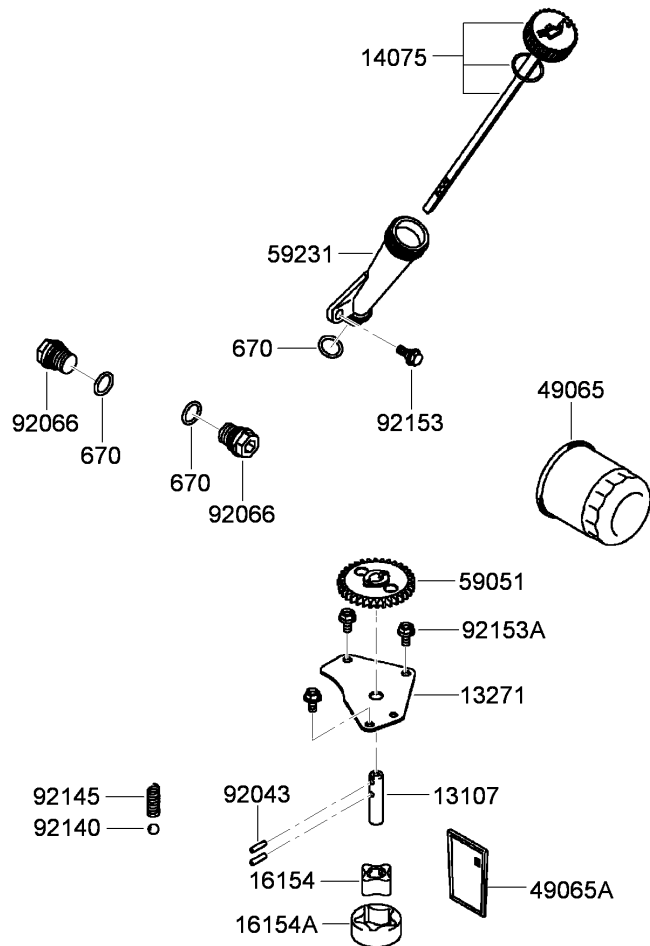 

Lubrication Equipment Assembly


Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
③670	670D2016	3	O-Ring (16Mm)				
③13107	13107-7009	1	Shaft				
③13271	13271-7034	1	Plate-Rotor, Pump				
③14075	14075-7011	1	Cap ASM				
③16154	16154-7007	1	Rotor-Pump (In)				
③16154A	16154-7008	1	Rotor-Pump (Out)				
③49065	49065-2078	1	Filter-Oil				
③49065A	49065-7004	1	Filter-Oil				
③59051	59051-7026	1	Gear-Spur, Oil Pump				
③59231	59231-7011	1	Filler				
③92043	92043-7003	2	Pin				
③92066	92066-7003	2	Plug				
③92140	92140-7003	1	Ball				
③92145	92145-7046	1	Spring				
③92153	92153-7007	1	Bolt				
③92153A	92153-7043	3	Bolt (6X12)				

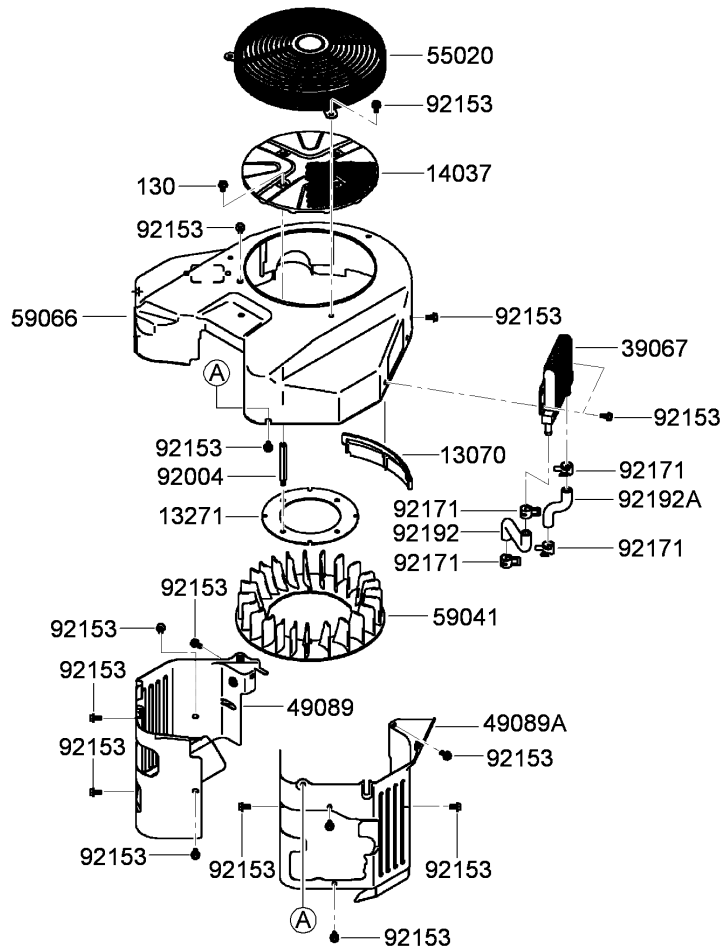 


Cooling Equipment Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
❶130	130AA0610	4	Bolt-Flanged (6X10)				
❶13070	13070-7013	1	Guide				
❶13271	13271-7035	1	Plate-Fan				
❶14037	14037-7029-9H	1	Screen				
❶39067	39067-7007	1	Cooler-Oil				
❶49089	49089-7062-753	1	Shroud-Engine				
❶49089A	49089-7063-753	1	Shroud-Engine				
❶55020	55020-7010	1	Guard				
❶59041	59041-7013	1	Fan				
❶59066	59066-7040-753	1	Housing-Fan				
❶92004	92004-7021	4	Stud-Screen				
❶92153	92153-7043	18	Bolt (6X12)				
❶92171	92171-7015	4	Clamp				
❶92192	92192-7078	1	Tube				
❶92192A	92192-7079	1	Tube				

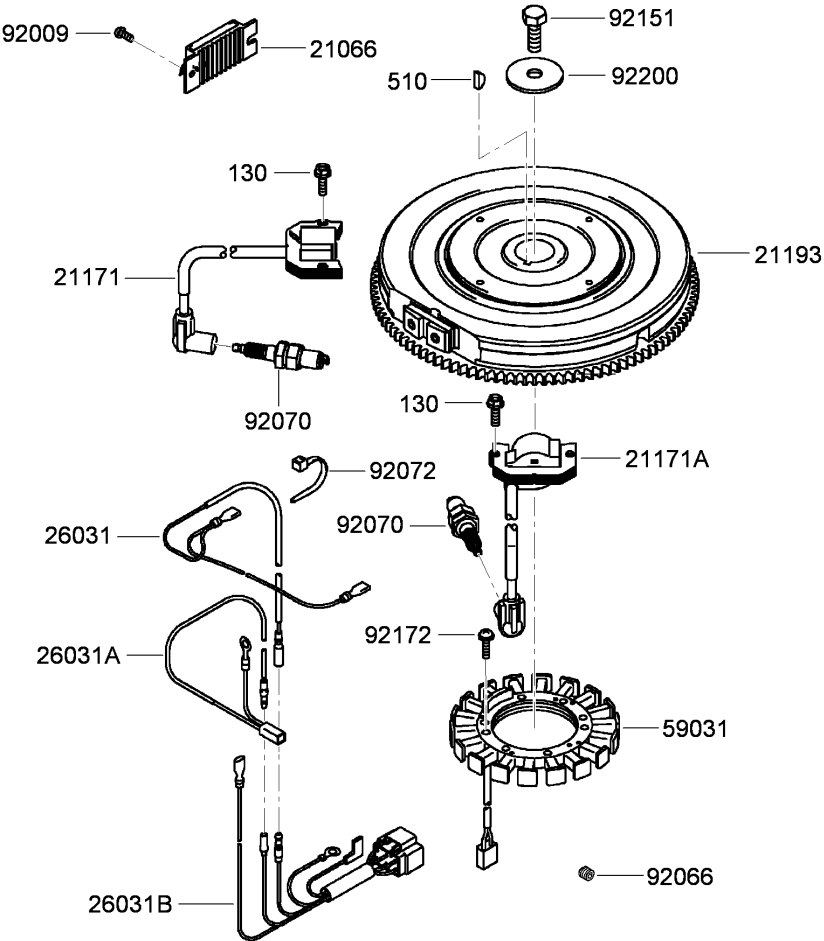 

Electric Equipment Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description				
130	130AA0620	4	Bolt-Flanged (6X20)				
510	510A5100	1	Key-Woodruff				
21066	21066-7011	1	Regulator-Voltage				
21171	21171-7028	1	Coil-Ignition (No.1 Cyl)				
21171A	21171-7029	1	Coil-Ignition (No.2 Cyl)				
21193	21193-7034	1	Flywheel ASM				
26031	26031-7033	1	Harness				
26031A	26031-7034	1	Harness				
26031B	26031-7039	1	Harness				
59031	59031-7009	1	Coil-Charging				
92009	92009-2308	2	Screw				
92066	92066-7002	1	Plug				
92070	92070-2088	2	Spark Plug, B P R 5E S (N G K) Solid				
92072	92072-7003	3	Band				
92151	92151-2097	1	Bolt (12X30)				
92172	92172-7018	4	Screw (5X20)				
92200	92200-7040	1	Washer (12.2X46X3)				

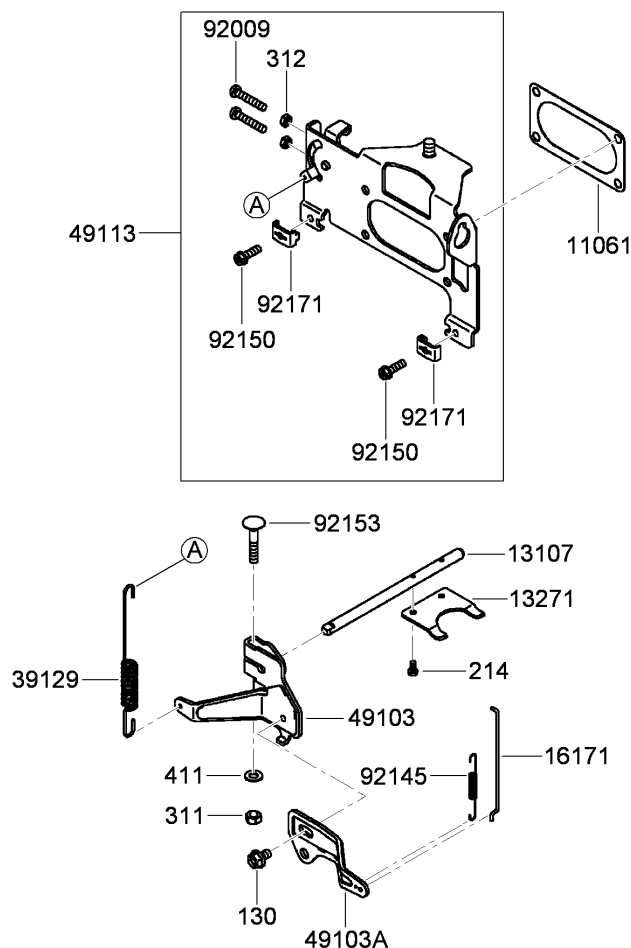 

Control Equipment Assembly

Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description				
③130	130BA0610	1	Bolt-Flanged (6X10)				
③214	214AA0408	2	Screw-Pan +- (4X8)				
③311	311B0600	1	Nut-Hex (6Mm)				
③312	312B0500	2	Nut-Hex (5Mm)				
③411	411B0600	1	Washer-Plain (6Mm)				
③11061	11061-7056	1	Gasket-Pipe, Intake				
③13107	13107-7040	1	Shaft				
③13271	13271-7038	1	Plate				
③16171	16171-7018	1	Link				
③39129	39129-7017	1	Spring-Governor				
③49103	49103-7009	1	Arm-Governor				
③49103A	49103-7010	1	Arm-Governor				
③49113	49113-7048	1	Control Panel ASM				
③92009	92009-2381	2	Screw (5X30)				
③92145	92145-7050	1	Spring				
③92150	92150-2182	2	Bolt (5X18)				
③92153	92153-7033	1	Bolt (6X35)				
③92171	92171-7018	2	Clamp				

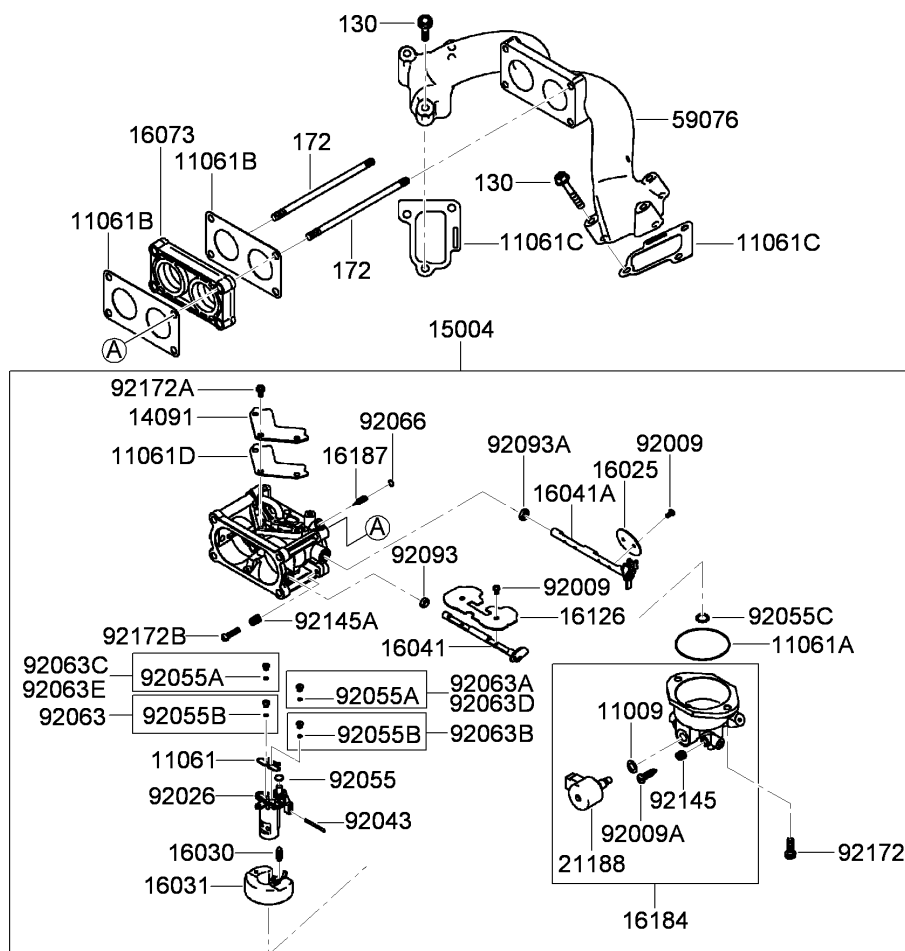 

Carburetor Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
③130	130AA0635	6	Bolt-Flanged (6X35)
③172	172BA06120	2	Bolt-Stud (6X120)
③11009	11009-2056	1	Gasket
③11061	11061-7037	1	Gasket
③11061A	11061-7038	1	Gasket
③11061B	11061-7057	2	Gasket-Insulator
③11061C	11061-7062	2	Gasket-Manifold
③11061D	11061-7067	1	Gasket
③14091	14091-7059	1	Cover
③15004	15004-7037	1	Carburetor ASM
③16025	16025-7012	2	Valve-Throttle
③16030	16030-7004	1	Valve-Float
③16031	16031-7003	1	Float
③16041	16041-7035	1	Shaft-Chock, Carburetor
③16041A	16041-7036	1	Shaft-Throttle, Carburetor
③16073	16073-7010	1	Insulator
③16126	16126-7019	1	Valve-Chock
③16184	16184-7021	1	Float Chamber ASM
③16187	16187-7005	2	Needle-Jet
③21188	21188-7003	1	Solenoid
③59076	59076-7010	1	Manifold-Intake
③92009	92009-7003	6	Screw
③92009A	92009-7006	1	Screw-Drain
③92026	92026-7022	1	Spacer


Ref	Part No.	Qty.	Description
92043	92043-7014	1	Pin
92055	92055-7012	1	O-Ring
92055A	92055-7013	1	O-Ring
92055B	92055-7013	2	O-Ring
92055C	92055-7016	1	O-Ring
92063	92063-7099	1	Jet-Main (No.134, 6560 Ft)
92063A	92063-7099	1	Jet-Main (No.134, 6560 Ft)
92063B	92063-7100	1	Jet-Main (No.140)
92063C	92063-7101	1	Jet-Main (No.131, 3280 Ft)
92063D	92063-7102	1	Jet-Main (No.137, 3280 Ft)
92063E	92063-7103	1	Jet-Main (No.128, 6560 Ft)
92066	92066-7009	2	Plug-Expansion
92093	92093-7001	1	Seal (I D 5.9)
92093A	92093-7002	1	Seal (I D 6.9)
92145	92145-7011	1	Spring
92145A	92145-7039	1	Spring
92172	92172-7005	2	Screw (M5)
92172A	92172-7006	3	Screw (M4)
92172B	92172-7031	1	Screw-Adjust, Throttle

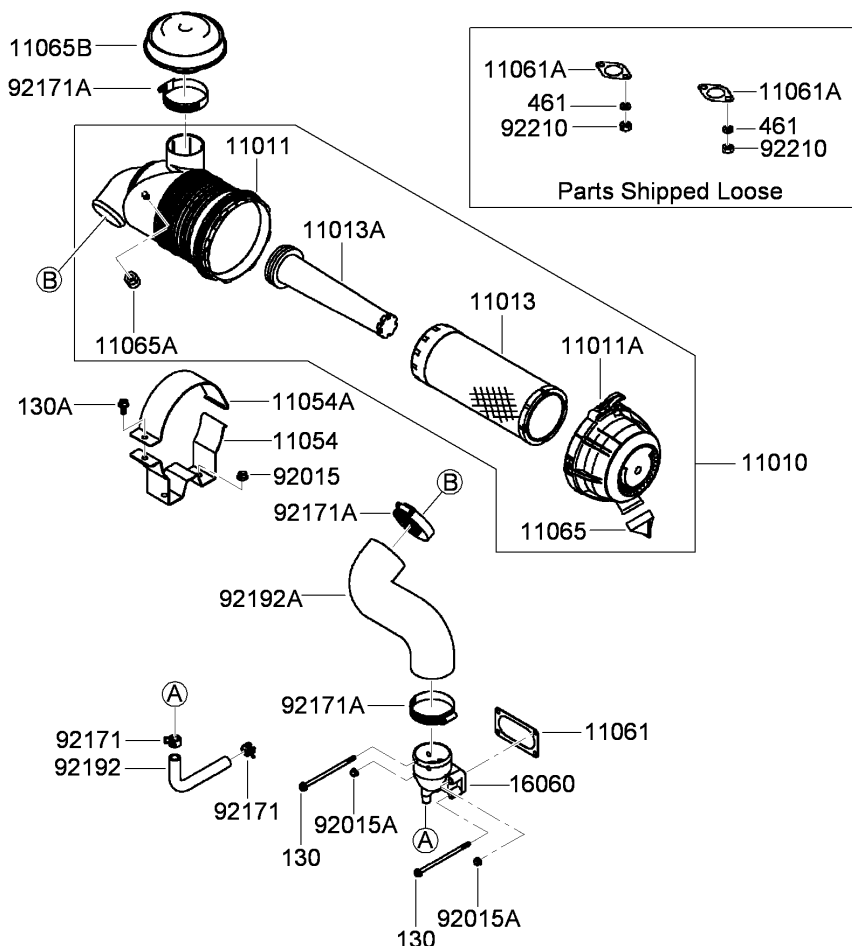 

Air Filter and Muffler Assembly Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description
③ 130	130AA06120	2	Bolt-Flanged (6X120)
③ 130A	130AA0816	1	Bolt-Flanged (8X16)
③ 461	461F0800	4	Washer-Spring (8Mm)
③ 11010	11010-7020	1	Air Filter ASM
③ 11011	11011-7047	1	Case-Filter, Air
③ 11011A	11011-7050	1	Case-Filter, Air
③ 11013	11013-7038	1	Element-Filter, Air
③ 11013A	11013-7039	1	Element-Filter, Air
③ 11054	11054-7012-9X	1	Bracket
③ 11054A	11054-7013-9X	1	Bracket
③ 11061	11061-7056	1	Gasket-Pipe, Intake
③ 11061A	11061-7061	2	Gasket-Muffler
③ 11065	11065-7008	1	Cap
③ 11065A	11065-7009	1	Cap
③ 11065B	11065-7017	1	Cap
③ 16060	16060-6006	1	Pipe-Intake
③ 92015	92015-1143	2	Nut
③ 92015A	92015-1193	2	Nut
③ 92171	92171-7013	2	Clamp
③ 92171A	92171-7023	3	Clamp-Filter, Air
③ 92192	92192-7075	1	Tube (12.6X18.6X183)
③ 92192A	92192-7096	1	Tube-Filter, Air

Ref	Part No.	Qty.	Description
③ 92210	92210-7027	4	Nut (M8)

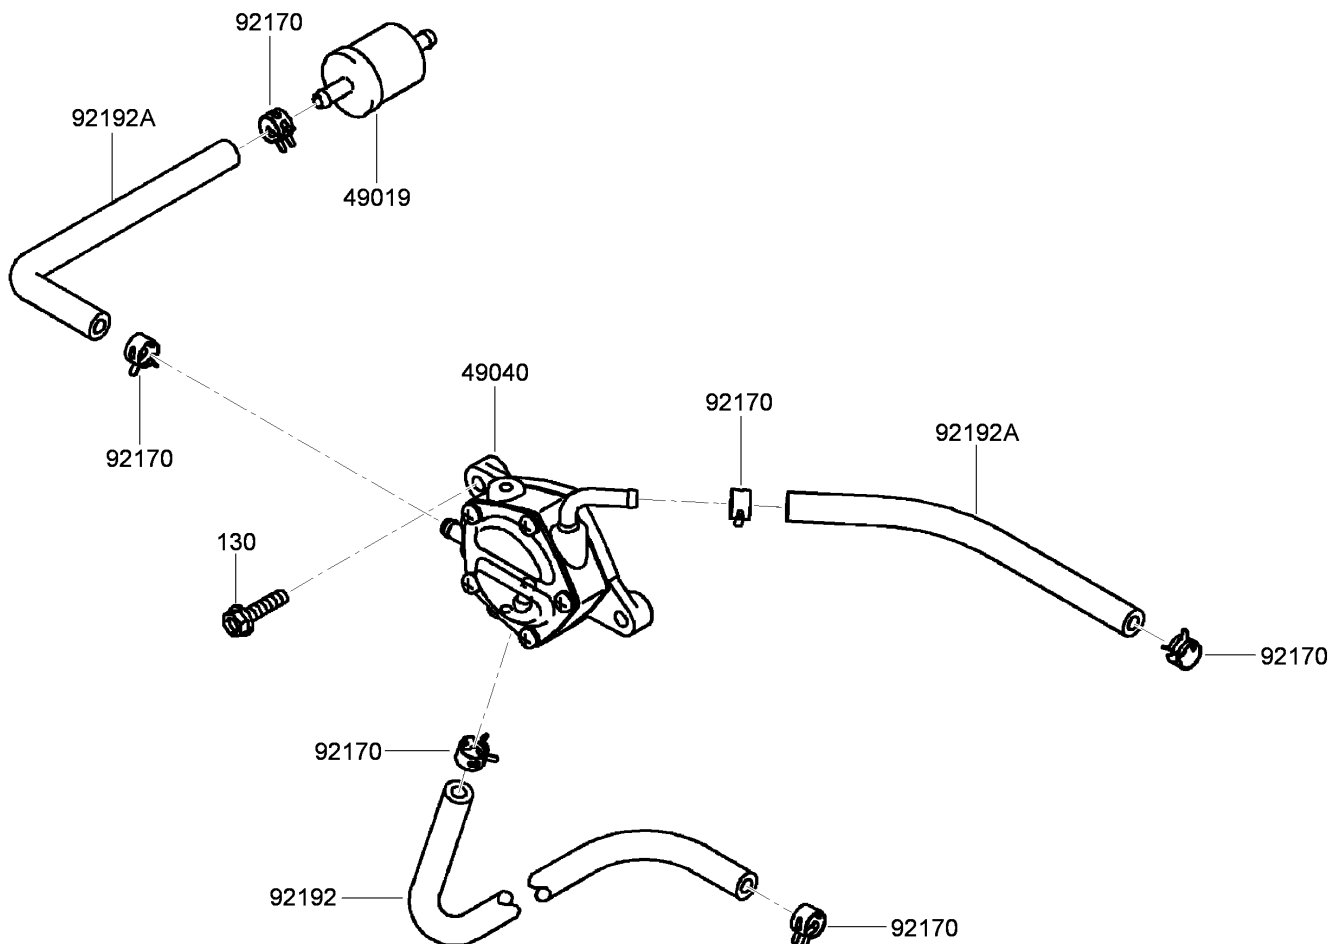 

Fuel Tank and Fuel Valve Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
③130	130AA0625	2	Bolt-Flanged (6X25)
③49019	49019-7001	1	Filter-Fuel
③49040	49040-7006	1	Pump-Fuel
③92170	92170-2088	6	Clamp
③92192	92192-7077	1	Tube (6.4X12.7X318)
③92192A	92192-7101	2	Tube (6.35X12.7X185)

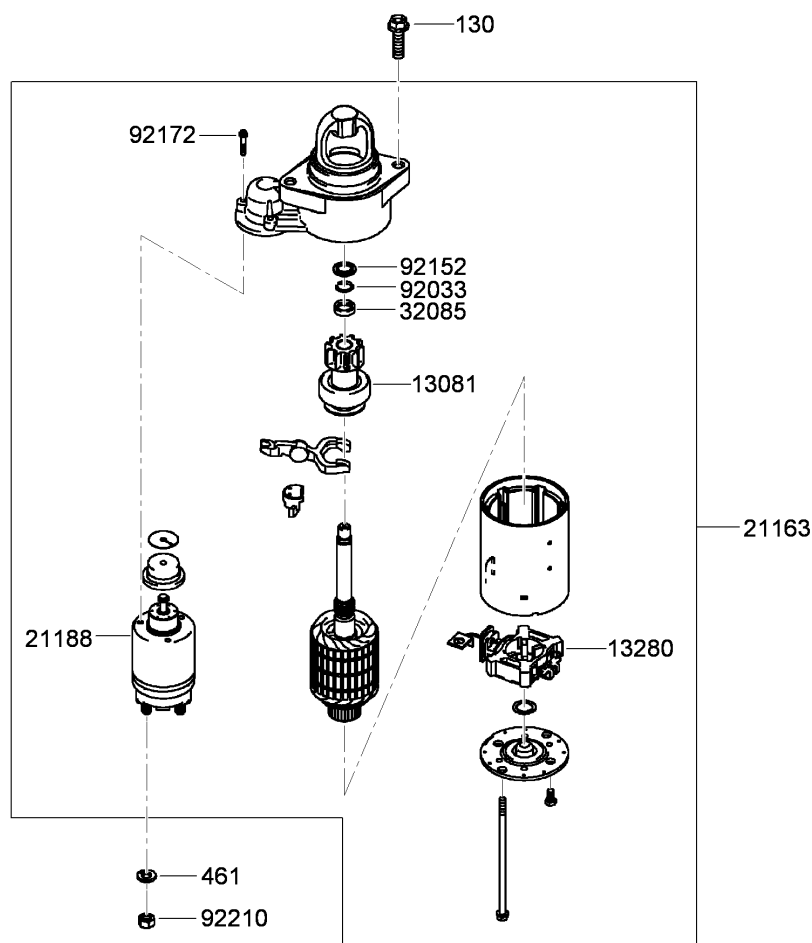 


Starter Assembly Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description				
③130	130AA0830	2	Bolt-Flanged (8X30)				
③461	461DA0800	1	Washer-Spring (8Mm)				
③13081	13081-7001	1	Clutch ASM				
③13280	13280-7002	1	Holder				
③21163	21163-7021	1	Starter-Electric				
③21188	21188-7005	1	Solenoid				
③32085	32085-7001	1	Stopper				
③92033	92033-7014	1	Ring-Snap				
③92152	92152-7013	1	Collar				
③92172	92172-7032	3	Screw				
③92210	92210-7027	1	Nut (M8)				

56014



 56033

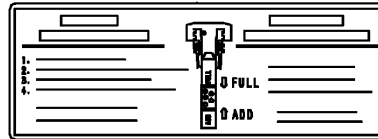

56070



Label Set

Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
⑤56014	56014-7001	1	Emblem
⑤56033	56033-7002	1	Label-Manual
⑤56070	56070-7001	1	Label-Warning

Attachments and Accessories

For 74967CP - Z Master G3 Riding Mower, with 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Mid Flow, 24.5 Inch	105-7711-03
Blade-Lo Flow, 24.5 Inch	105-7712-03
Blade-Atomic, 24.5 Inch	105-7719-03
Blade-Recycler, 24.5 Inch	105-7778-03
Blade-Hi Flow, 24.5 Inch	105-7784-03
6 Pack Blade, 24.5 Inch Hi-Flow	108-1120
6 Pack Blade, 24.5 Inch Atomic	108-1126
Hitch Kit	109-9487
6 Pack-Blade, 24.5 Inch Mid-Flow	110-0404
6 Pack-Blade, 24.5 Inch Lo-Flow	110-0410
6 Pack-Blade, 24.5 Inch Recycler	110-0411
HYPR-OIL 500 (Quart)	114-4713
HYPR-OIL 500 (Gallon)	114-4714
HYPR-OIL 500-5 (5 Gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Recycler Kit	115-7469
Light Kit	116-1154
Z Stand Kit	117-0354
Operator-Controlled Discharge Chute Kit	117-3600
Blower and Drive Kit	78554
E-Z Vac Triple Bagging System	78564
E-Z Vac DFS Collection System	78568
Trash Holder Kit	TC26

NOTES

NOTES

