




MODEL NO. 20434-390001 & UP

PARTS CATALOG

21" RECYCLER[®]
Mower

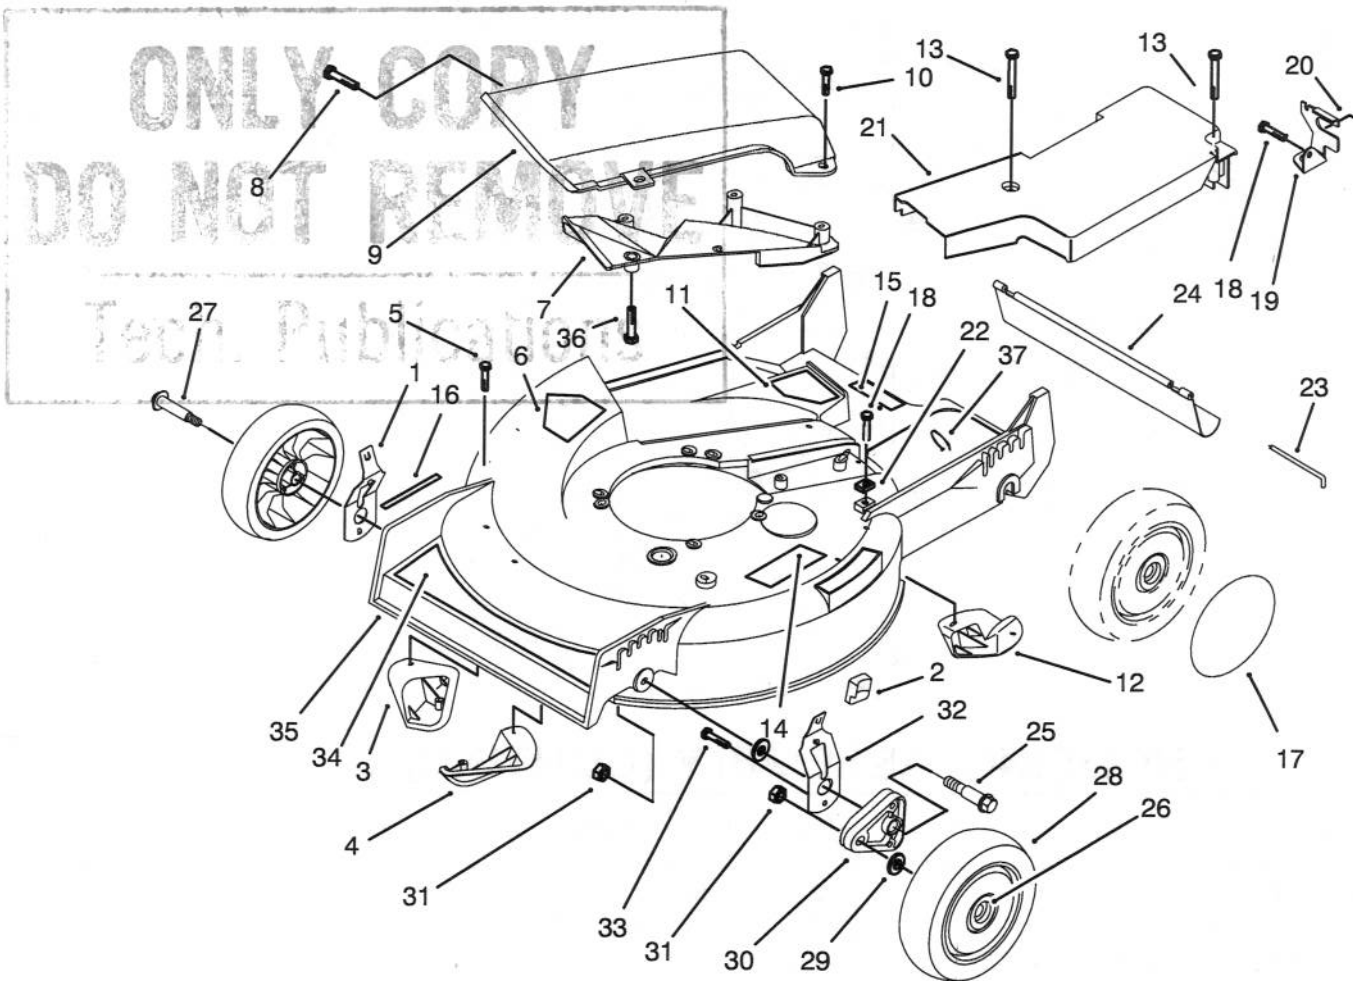


C-1453

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0560	Spring Arm Ass'y R.H.	1
2	25-7740	Knob - Arm	2
3	92-1720	Plate - Kicker Right Front	1
4	92-1730	Plate - Kicker Left Front	1
5	32144-111	Screw - Plastite	6
6	39-5770	Decal - Danger	1
7		Deflector - Recycler	1
8	46-6810	Screw & Washer Assembly	1
9	14-4069	Recycler Cover Assembly (Incl. Ref. #7 & 36)	1
10	46-6811	Screw & Washer Assembly	3
11	82-8450	Decal - Danger	1
12	92-1750	Plate - Kicker Left Rear	1
13	37-7260	Screw - Hex Hd. Tapping	1
14	71-1280	Decal - Danger	1
15	92-1779	Decal - Warning	1


Ref. No.	Part No.	Description	No. Used
16	92-2279	Decal - H.O.C.	4
17	91-2253	Cover - Wheel	1
18	32144-70	Screw - Thread Forming Hex Washer Hd.	2
19	82-5680	Bracket - Traction Adj.	1
20	46-7030	Retainer - Cable	1
21	52-7406	Cover - Belt Ass'y	1
22	62-3720	Clamp - Cable	1
23	33-3208	Rod - Shield	1
24	44-0580	Shield - Trailing	1
25	66-0560	Screw - Shoulder	2
26	27-6250	Bushing - Wheel	4
27	27-6232	Bolt - Wheel	2
28	11-9509	Wheel & Tire Assembly (Incl. Ref. #26)	2
29	40-1940	Washer - Wheel Bolt	4

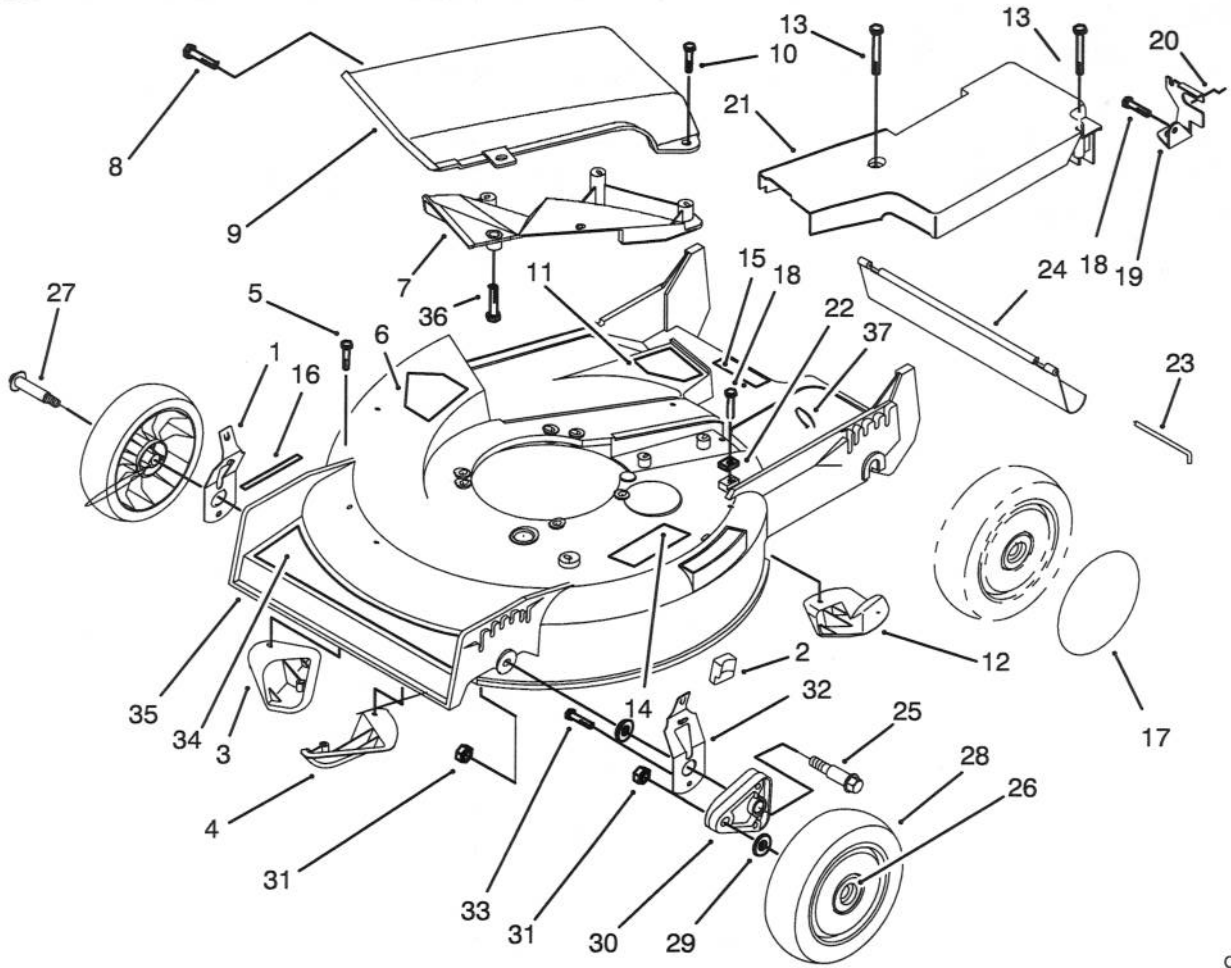

C-1453

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
30	66-0580	Arm - Pivot	2	36		Screw - Plastite	5
31	3296-6	Nut - Lock	4	37	3290-378	Tie - Cable	1
32	71-0570	Spring Arm Assembly L.H.	1				
33	32144-85	Screw - Thread Forming	2				
34	92-2283	Decal - Deck	1				
35	16-1599	Housing (Incl. Ref. #3-6, 11, 12, & 14-16 pg. 1) (Incl. Ref. #6, & 7 pg.3)	1				

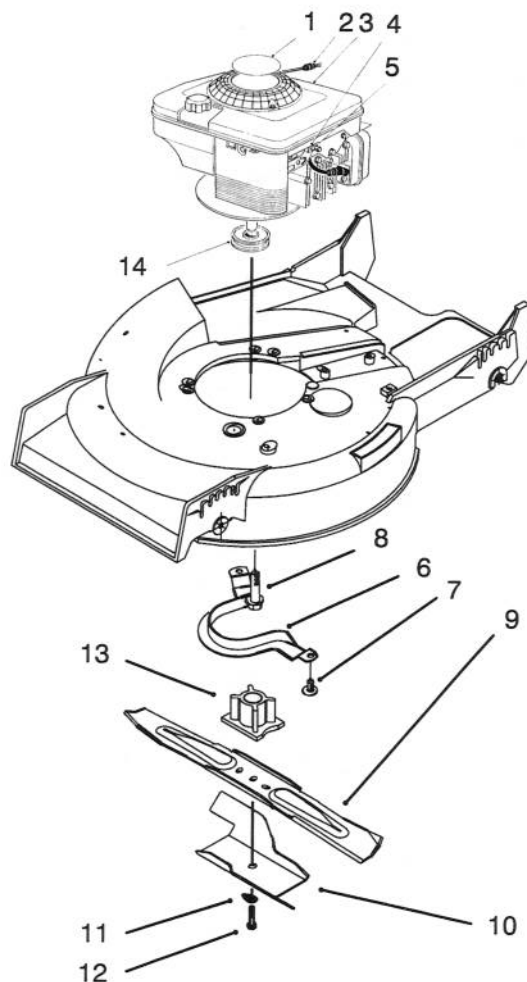


C-1393

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2294	Decal - Engine	1
† 2	2210-316	Stop - Rope	1
3		Engine	1
† 4	2210-249	Clamp - Casing	1
† 5	2210-313	Screw - Clamp	1
6	66-0570	Guide - Belt	1
7	32144-70	Screw - Thread Forming Hex Washer Head	2

Ref. No.	Part No.	Description	No. Used
8	32144-102	Screw - Thread Forming	3
9	14-9419	Blade - 21"	1
10	92-1599	Stiffener - Blade	1
11	3253-22	Lockwasher	1
12	26-0670	Screw - Blade	1
13	62-7540	Retainer - Blade	1
14	62-7550	Pulley - Driver	1

† Provided with Engine

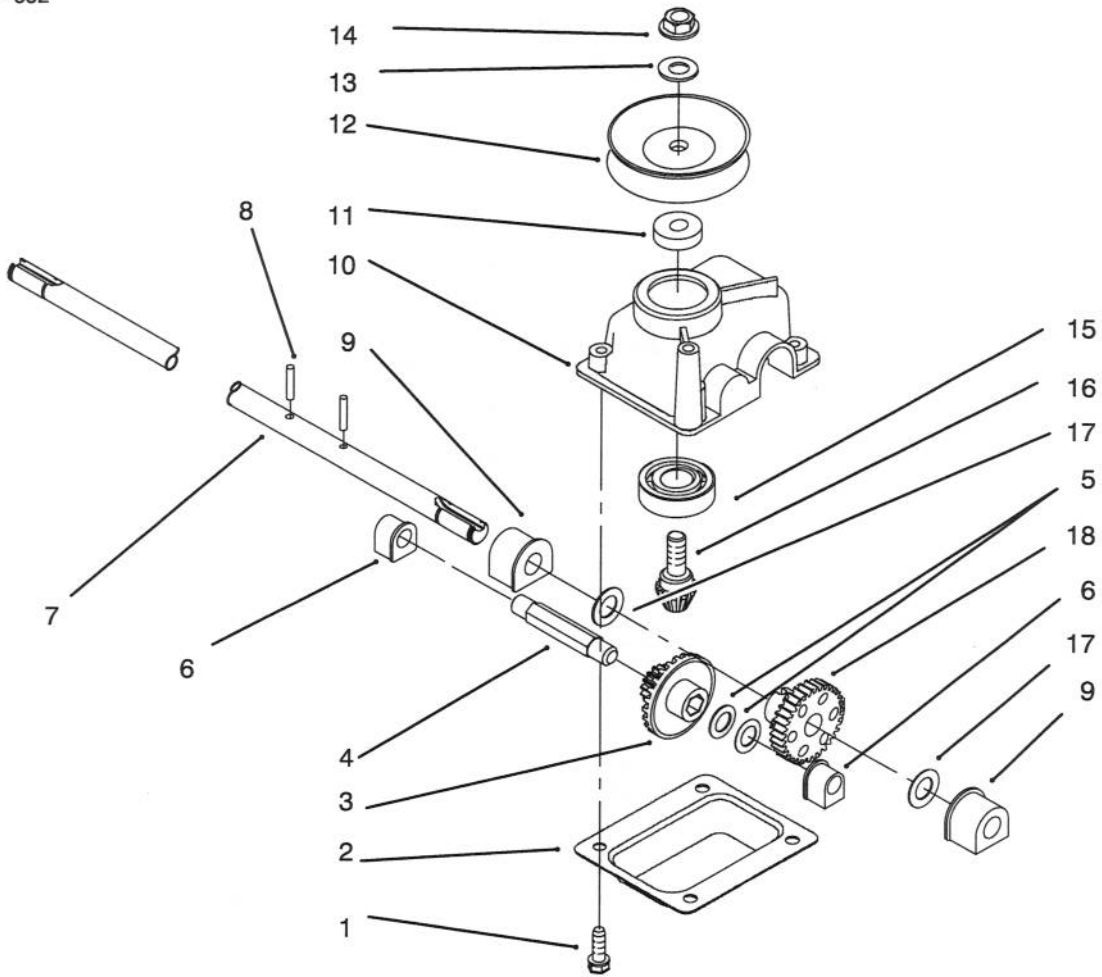


C-1292

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	92-3131	Shaft - Output	1
8	3285-19	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	60-8840	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	2
18	614596	Gear 34 Tooth	1
*	92-2259	Gearcase Ass'y Complete	1

*Not Illustrated

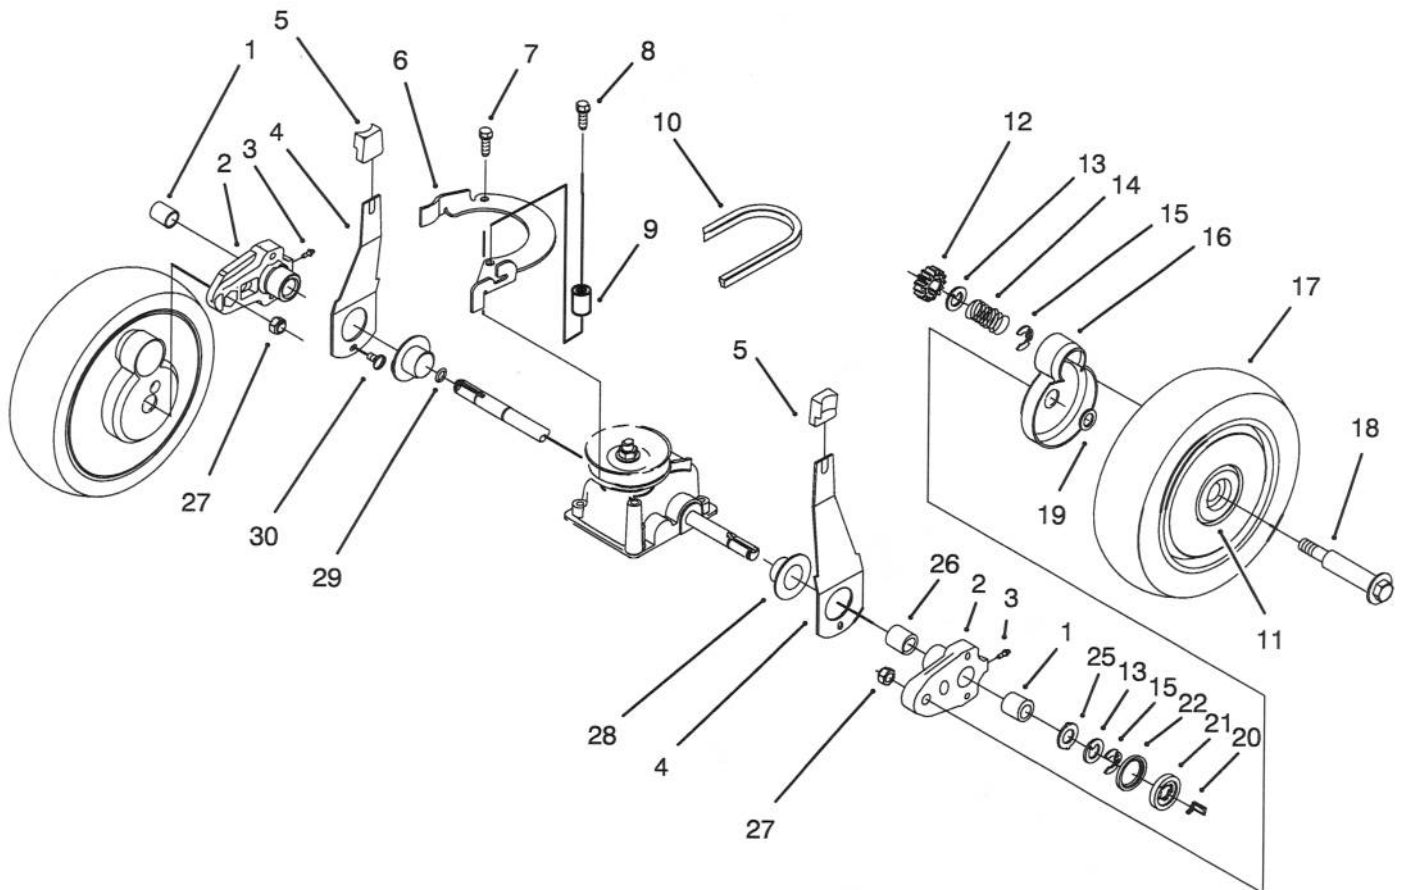


C-1439

REAR AXLE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	48-2060	Bearing - Needle	2
2	63-8701	Pivot Arm Assembly (Incl. Ref. #1, 3, & 26)	2
3	302-56	Fitting - Grease	2
4	63-8720	Spring Arm Assembly	2
5	25-7740	Knob - Arm	2
6	92-2264	Bracket - Belt Guide	1
7	49-2040	Screw - Self Tapping	1
8	92-1616	Screw - Taptite	1
9	614673	Bushing	1
10	91-2258	V-Belt	1
11	27-6250	Bushing - Wheel	4
12	65-4750	Pinion	2
13	65-4740	Thrust Washer	4
14	65-4720	Spring	2
15	65-2720	Ring - Retaining	4

Ref. No.	Part No.	Description	No. Used
16	74-1660	Cover - Wheel	2
17	11-9519	Wheel - Tire & Gear Ass'y (Incl. Ref. #11)	2
18	27-6232	Bolt - Wheel	2
19	74-1671	Spacer - Wheel Cover	2
20	66-6050	Key - Rocker L.H.	1
*	66-6040	Key - Rocker R.H.	2
21	65-4760	Washer - Clutch	2
22	65-4710	Ring - Friction	2
25	65-4730	Thrust Washer	2
26	70-9760	Bushing	2
27	3296-6	Locknut	2
28	42-3520	Cap - End	2
29	237-153	O-Ring	2
30	32144-85	Screw	2

*Not Illustrated

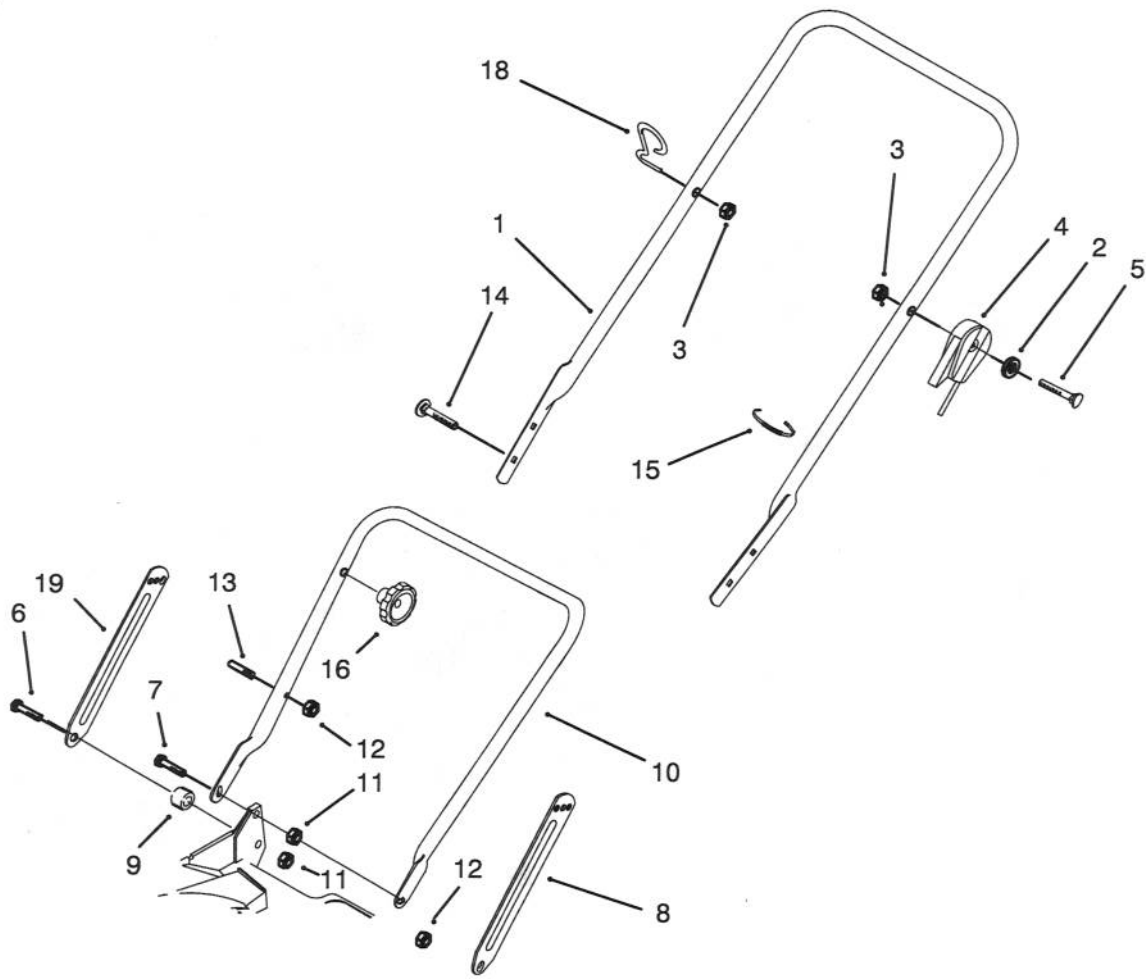


C-1440

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-3136	Handle - Upper	1
2	3256-1	Washer - Flat	1
3	3296-73	Nut - Lock	2
4	92-4069	Control - Throttle (Bend Type #3) (Sheath Lg. 47") (Wire Lg. 1-3/4")	
5	321-48	Screw - Hex Hd. Cap	1
6	27-7210	Screw - Shoulder	2
7	27-7211	Screw - Shoulder	2
8	84-8360	Latch - Handle L.H.	1

Ref. No.	Part No.	Description	No. Used
9	3-3287	Spacer	2
10	82-5530	Lower Handle Assembly	1
11	3296-72	Nut - Lock	3
†12	3296-47	Nut - Lock	3
†13	49-2750	Pin - Handle	2
14	92-2260	Screw - Handle	2
15	3290-378	Tie - Cable	2
16	19-4050	Knob - Handle Release	2
18	86-9671	Guide - Rope	1
19	84-8400	Latch - Handle R.H.	1

†Service Replacement Part

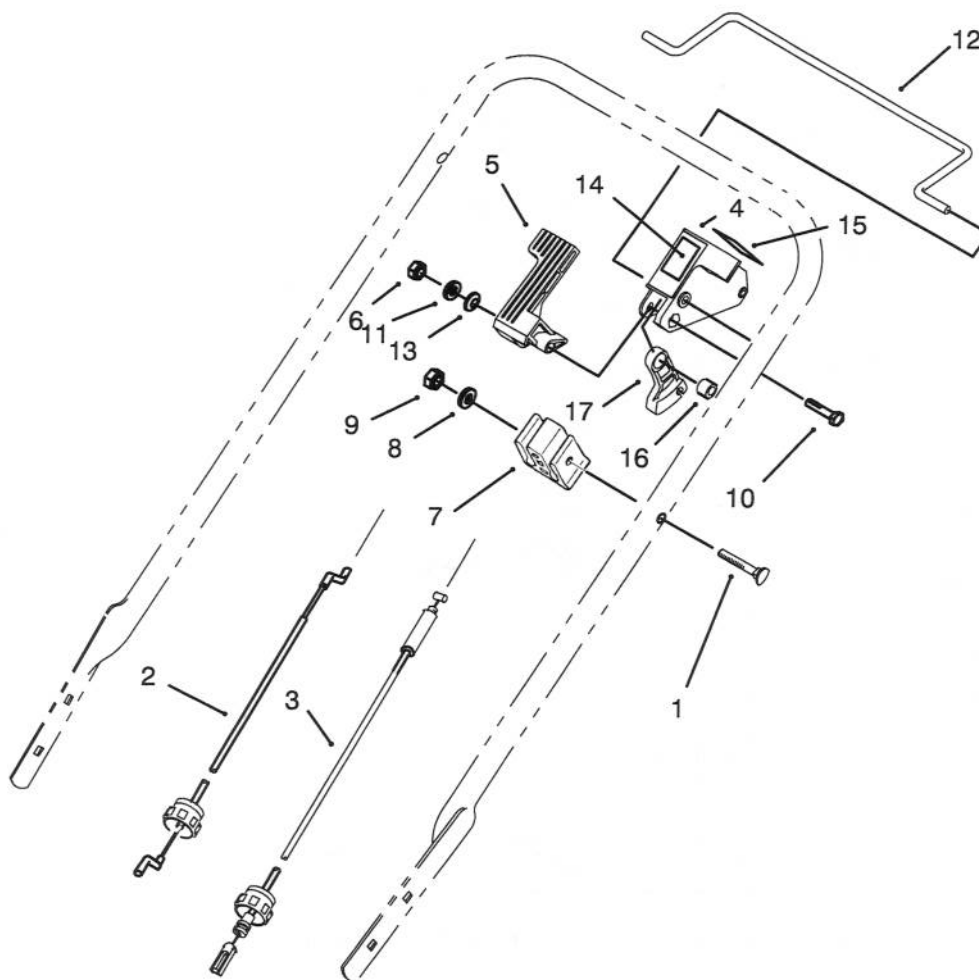


C-1444

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2269	Screw - Handle	1
2	92-4066	Cable - Brake	1
3	46-5481	Cable - Traction	1
4	92-2265	Stop - Pivot	1
5	92-2299	Lever - Shift	1
6	3296-2	Nut - Lock	1
7	46-6980	Support - Cable	1
8	3256-1	Washer - Flat	1
9	3296-73	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
10	92-3132	Bolt - Shoulder	1
11	3256-49	Washer - Flat	1
12	92-3135	Bar - Control	1
13	92-2298	Washer - Spring	1
14	92-2280	Decal - Instruction	1
15	92-2292	Decal - Instruction	1
16	92-3133	Spacer - Traction Lever	1
17	46-5520	Lever - Traction	1

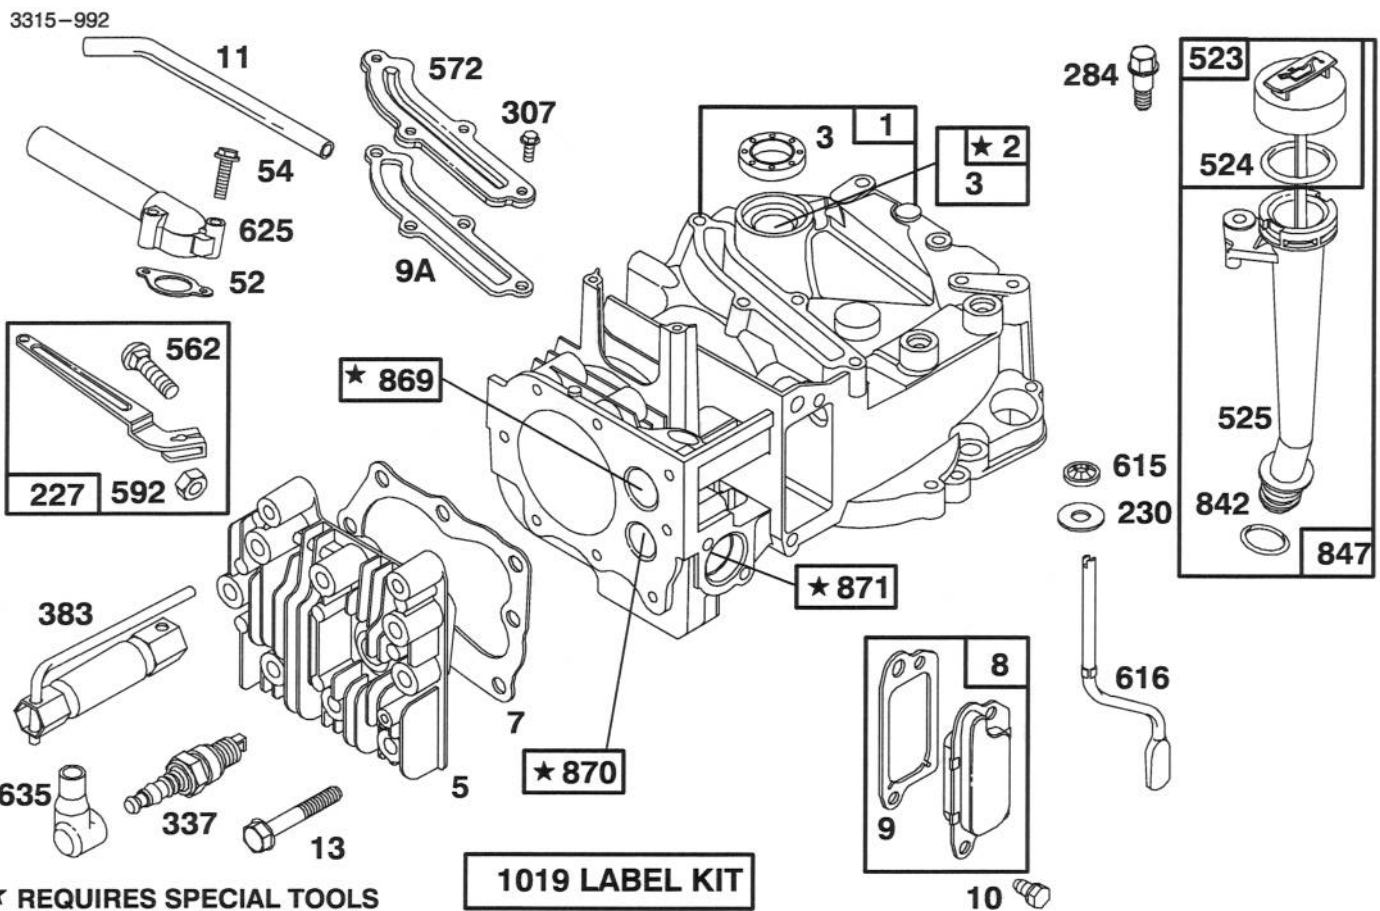

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frames

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing—Cylinder	1
★3	299819	Seal—Oil	1
5	213861	Head—Cylinder	1
★7	272200	Gasket—Cylinder Head	1
8	495786	Breather—Valve Chamber	1
★9	272481	Gasket—Valve Cover	1
★9A	272238	Gasket—Baffle Plate	1
10	94650	Screw—Breather Mtg.	1
11	231685	Tube—Breather	1
13	94547	Screw—Cylinder Head	1
★52	272199	Gasket—Intake Elbow	1
54	94526	Screw—Intake Elbow Mtg.	1
227	492349	Lever Assembly—Gov.	1
230	67072	Washer—Gov. Crank	1
284	94511	Screw—Hex. Head	1
307	94515	Screw—Hex. Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick—Oil Filler	1
★524	280393	Seal—Filler Tube	1
525	495265	Tube—Oil Filler	1
562	92613	Bolt—Governor Lever	1
572	224328	Baffle—Cylinder	1
592	231082	Nut—Hex.	1
615	94474	Pushnut (Governor Crank)	1
616	262578	Crank—Governor	1
625	492717	Tube—Fuel Intake	1
635	66538	Elbow—Spark Plug	1
★842	280966	Seal—O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat—Intake Valve	1
870	213513	Seat—Exhaust Valve	1
871	262001	Guide—Exhaust Valve	1
		Note: 63709 Guide—Intake Valve	1
1019	494256	Label Kit	1

★ Included in Gasket Set—Part No. 493263.

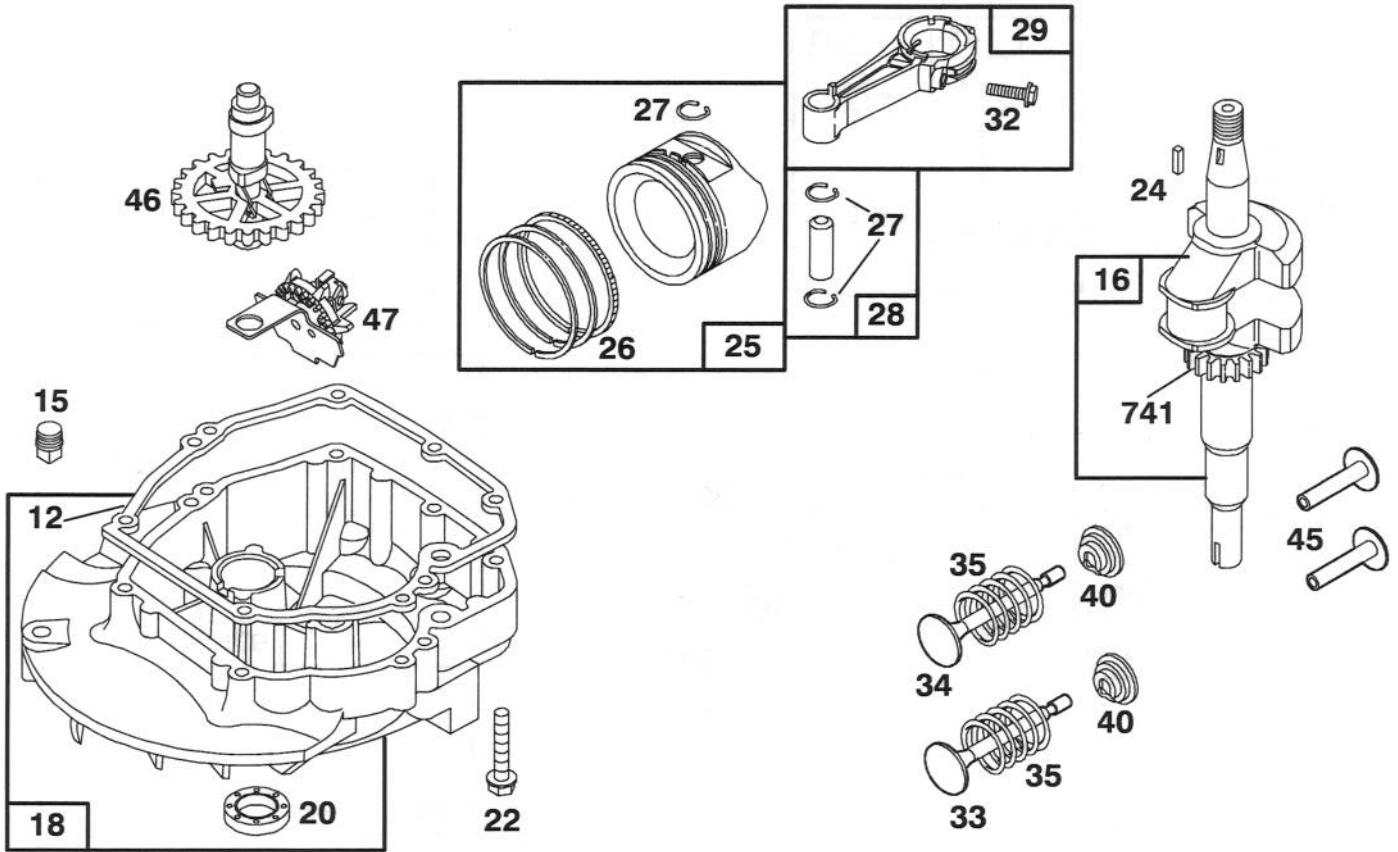


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket—Crankcase	1
15	94720	Plug—Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump—Engine	1
★20	399781	Seal—Oil	1
22	94220	Screw—Sump Mounting Serr	1
		Note: 94612 Screw—Sump Mtg. (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key—Flywheel	1
25	493262	Piston Assy. (Std.)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set—Piston (Standard)	1
	493388	Ring Set—Piston (.010" O.S.)	1
	493389	Ring Set—Piston (.020" O.S.)	1
	493390	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock—Piston Pin	1
28	298909	Pin Assembly—Piston (Standard)	1
	298908	Pin Assembly—Piston (.005" O.S.)	1
29	490566	Rod Assembly— Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing— Order No. 490743.	1
32	94405	Screw—Connecting Rod	1
33	262651	Valve—Exhaust	1
34	262652	Valve—Intake	1
35	262224	Spring—Valve	1
40	93312	Retainer—Valve Spring	1
45	262204	Tappet—Valve	1
46	492828	Gear—Cam	1
47	493737	Oil Slinger Gear and Bracket	1
741	262598	Gear—Timing	1

★ Included in Gasket Set—Part No. 493263.

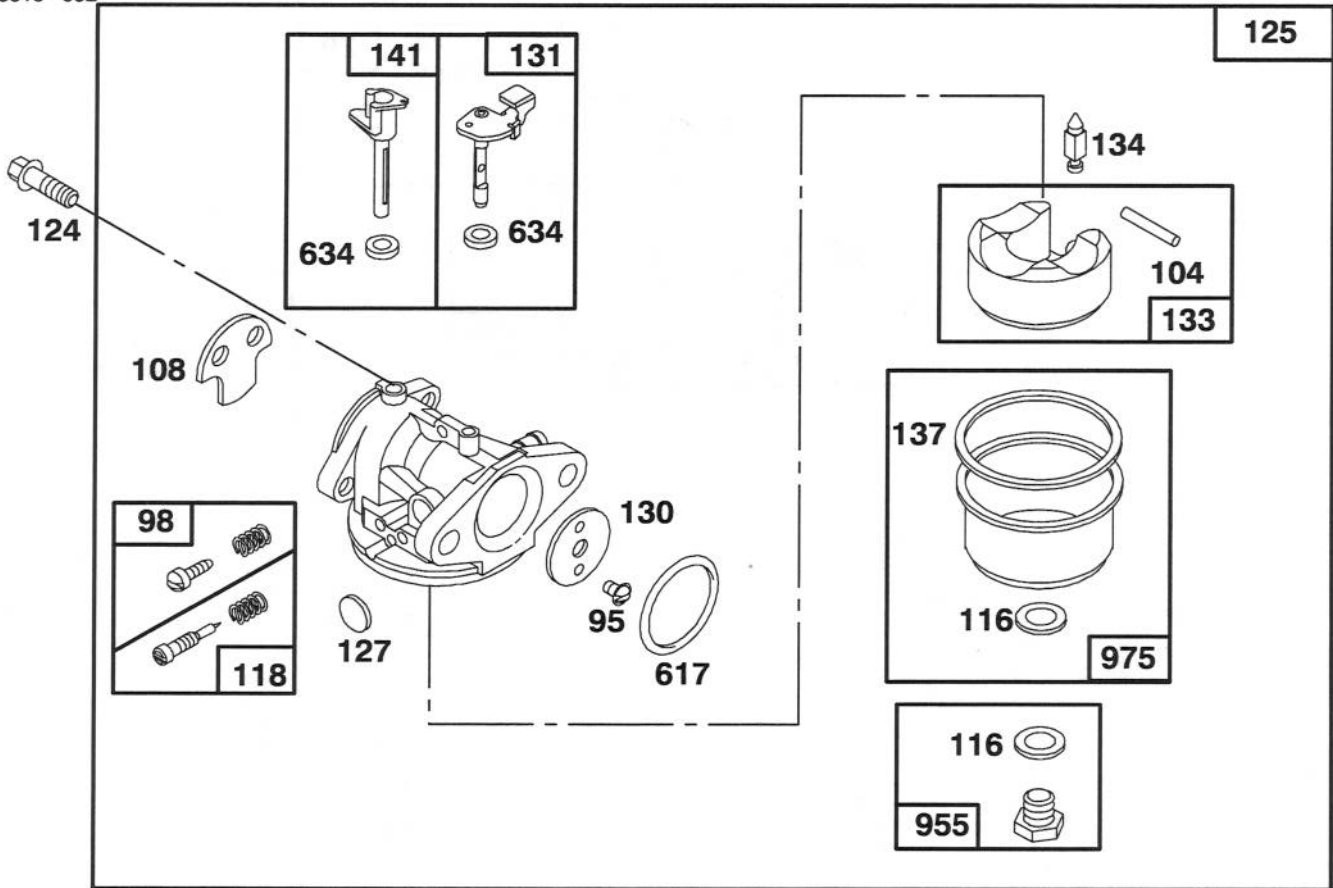

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw-Throttle Valve Mtg.	1
98	398185	Screw-Idle Adjustment	1
●104	231371	Pin-Float Hinge	1
108	223471	Valve-Choke	1
◆◆116		Gasket-Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring- Needle	1
124	94525	Screw-Carburetor Mtg.	1
125	494216	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only).	1
130	223470	Valve-Throttle	1

Ref. No.	Part No.	Description	No. Used
131	493267	Shaft and Lever-Throttle	1
133	398187	Float Assy.-Carburetor	1
●134	398188	Valve-Inlet (Includes Seat)	1
◆◆137		Gasket-Bowl (Sold in Kit Only).	1
141	494218	Shaft-Choke	1
◆◆617	270344	Seal-Fuel Intake Tube	1
◆◆634		Washer-Shaft (Sold in Kit Only).	1
955	493763	Screw-Bowl Mtg.	1
975	493640	Bowl Assy.-Carburetor	1

● Included in Carburetor Overhaul Kit-Part No. 493762.

◆ Included in Carburetor Gasket Set-Part No. 490937.

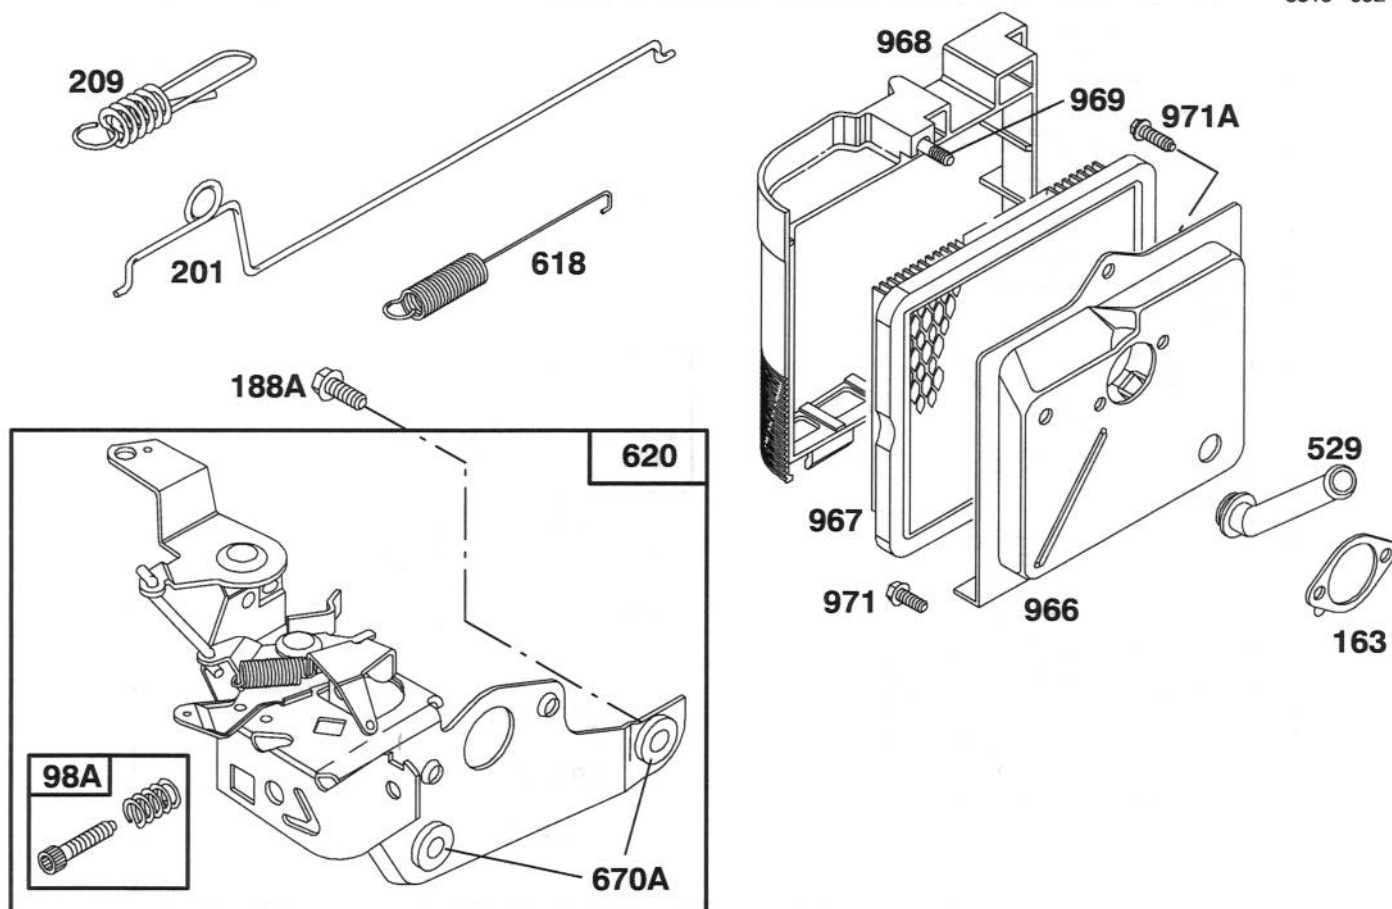


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw Assy.—Speed Adjust	1
★163	272296	Gasket—Air Cleaner	1
188A	94644	Screw—Hex. Head	1
201	262579	Link—Governor	1
209	262661	Spring—Governor	1
529	280943	Grommet—Breather	1
618	262749	Spring—Choke Return	1
620	493894	Bracket Assembly—Carburetor Control	1

Ref. No.	Part No.	Description	No. Used
670A	493823	Spacer—Carburetor Bracket	1
966	492363	Base—Air Cleaner	1
967	491588	Filter—Air	1
968	280937	Cover—Air Cleaner	1
969	94120	Screw—Cover Mtg.	1
971	94269	Screw—Air Cleaner	1
971A	94121	Screw—Base to Carb.	1

★ Included in Gasket Set—Part No. 493263.

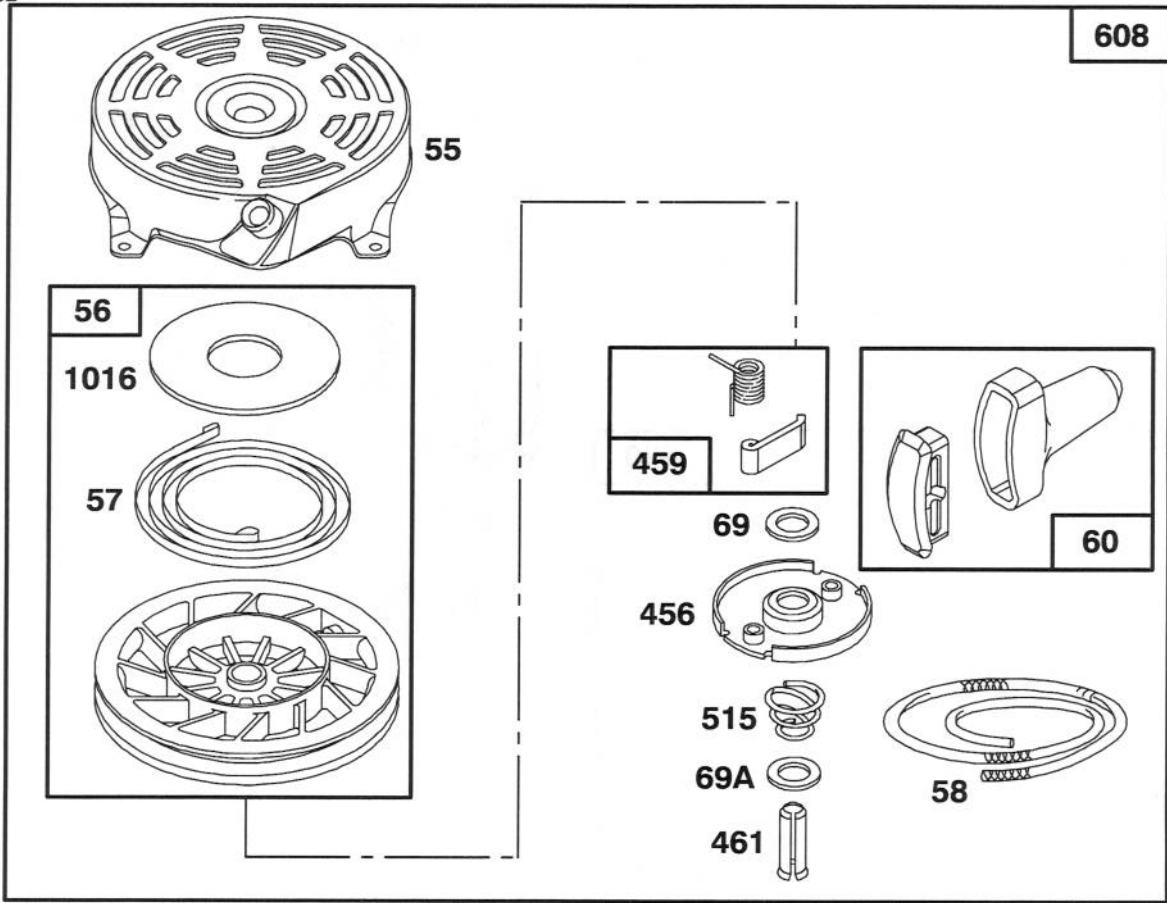


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing—Rewind Starter	1
56	492832	Pulley—Rewind Starter	1
57	262594	Spring—Rewind Starter	1
58	280399	Rope—Rewind Starter	1
60	393152	Handle—Rewind Starter	1
69	280973	Washer—Rewind Starter	1
69A	224322	Washer—Rewind Starter	1
456	224321	Retainer—Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl—Starter	1
461	262626	Pin—Starter	1
515	262625	Spring—Torsion	1
608	493295	Starter Assy.—Rewind Includes: 94128 Screw—Hex. Head 92987 Nut—Hex.	1
1016	224278	Cover—Rewind Starter	1

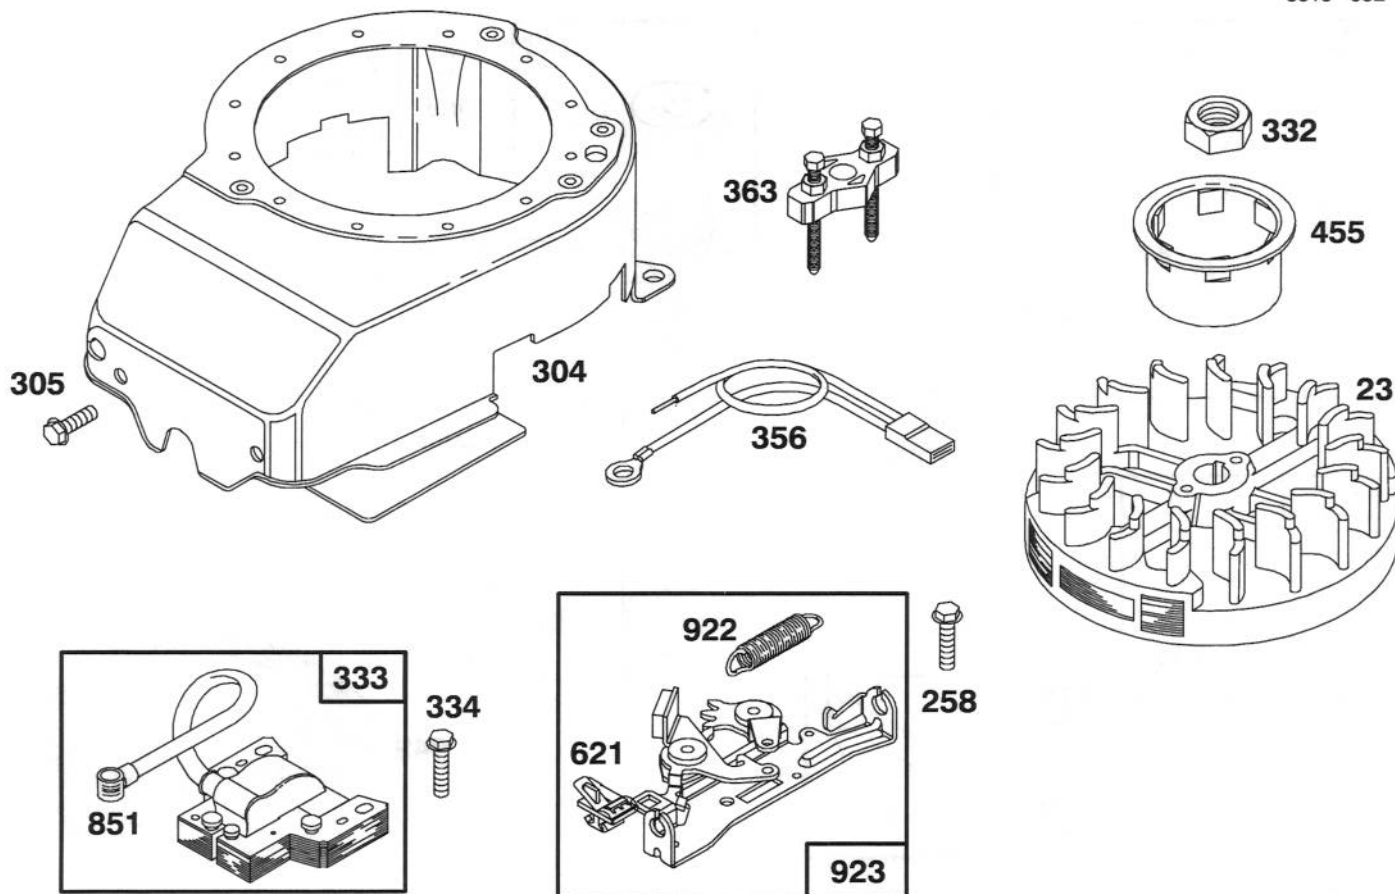


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel—Magneto	1
258	94512	Screw—Hex. Head	1
304	493293	Housing—Blower	1
305	94513	Screw—Hex. Head Sem	1
332	92284	Nut—Flywheel	1
333	802574	Armature—Magneto	1
334	94731	Screw—Armature Mtg.	1
356	398808	Wire—Ground	1

Ref. No.	Part No.	Description	No. Used
363	19069	Puller—Flywheel (Optional Accessory)	1
455	224250	Cup—Starter	1
621	396847	Switch—Stop	1
851	221798	Terminal—Ignition Cable	1
922	262640	Spring—Brake	1
923	492918	Brake Assembly	1

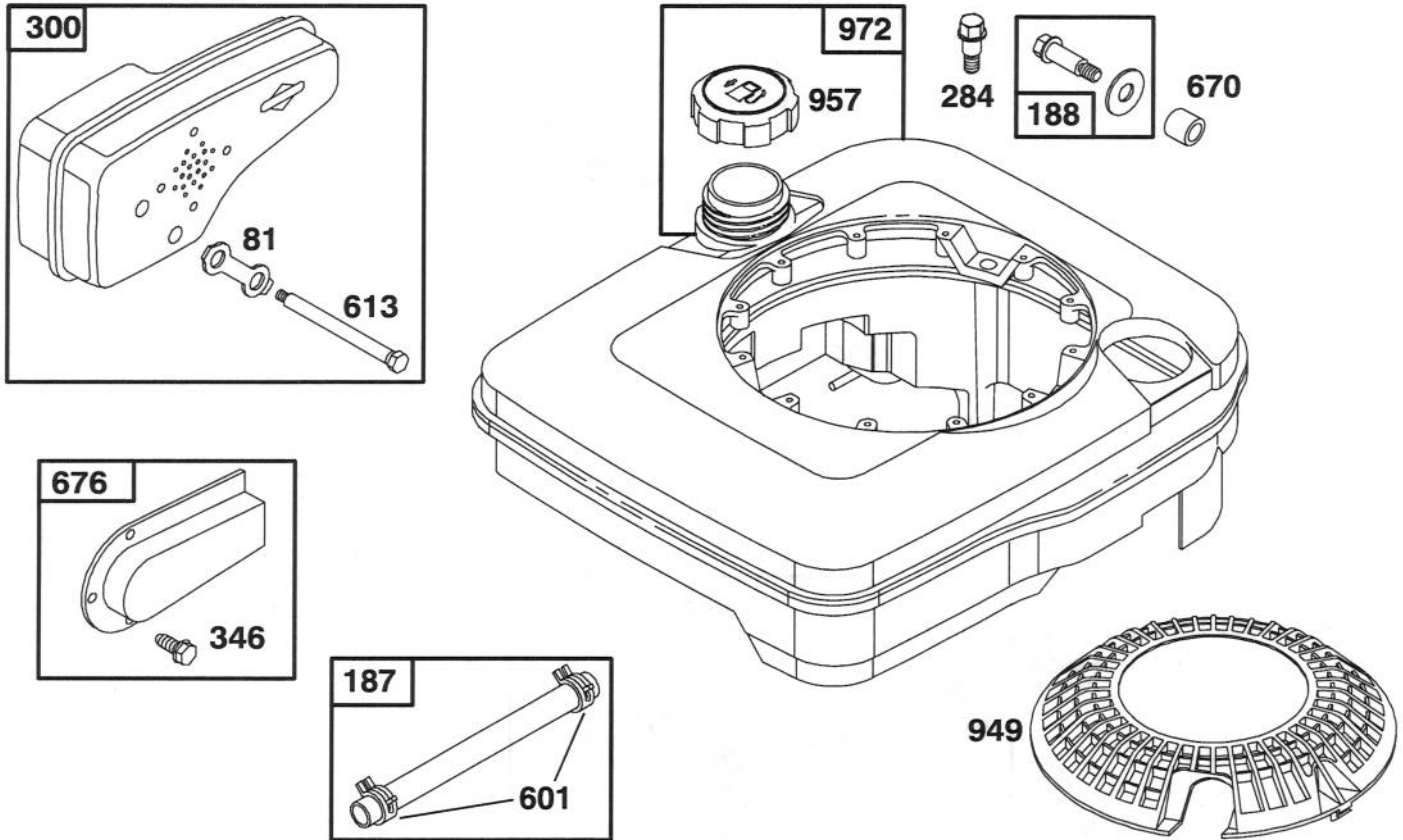


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock-Muffler Screw	1
187	492790	Hose-Fuel (Cut To Suit)	1
188	398540	Screw-Tank Mounting (Includes Washer)	1
284	94511	Screw-Hex. Head	1
300	490547	Muffler-Exhaust	1
346	93705	Screw-Hex. Head	1


Ref. No.	Part No.	Description	No. Used
601	93807	Clamp-Hose	1
613	94231	Screw-Muffler Mtg.	1
670	280512	Spacer-Fuel Tank	1
676	493871	Deflector-Muffler	1
949	281136	Guard-Finger	1
957	397974	Cap Assy.-Fuel	1
972	494358	Tank Assembly-Fuel	1

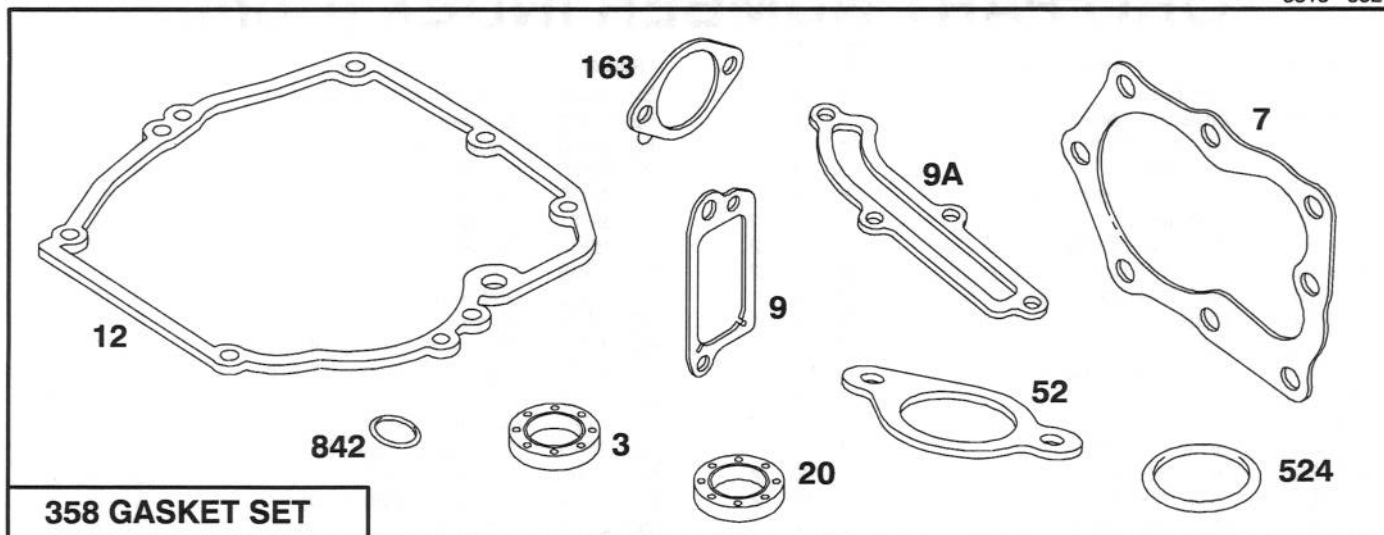

358 GASKET SET

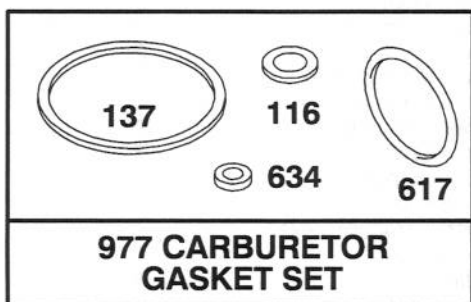

977 CARBURETOR GASKET SET

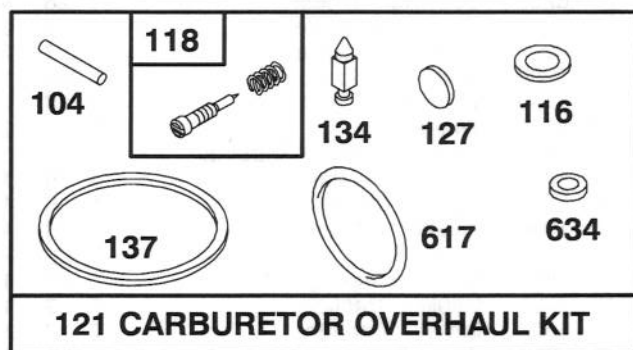

121 CARBURETOR OVERHAUL KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal-Oil	1
★7	272200	Gasket-Cylinder Hd.	1
★9	272481	Gasket-Valve Cover	1
★9A	272238	Gasket-Baffle Plate	1
★12	272198	Gasket-Crankcase	1
★20	399781	Seal-Oil	1
★52	272199	Gasket-Intake Elbow	1
●104	231371	Pin-Float Hinge	1
◆116		Gasket-Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring-Needle	1
121	493762	Carburetor Overhaul Kit	1
●127		Plug-Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve-Inlet (Includes Seat)	1
◆137		Gasket-Bowl (Sold in Kit Only).	1
★163	272296	Gasket-Air Cleaner	1
358	493263	Gasket Set	1
★524	280393	Seal-Filler Tube	1
◆617	270344	Seal-Fuel Intake Tube	1
◆634		Washer-Shaft (Sold in Kit Only).	1
★842	280966	Seal-O-Ring	1
977	490937	Gasket Set-Carburetor	1

● Included in Carburetor Overhaul Kit-Part No. 493762.
 ◆ Included in Carburetor Gasket Set-Part No. 490937.

★ Included in Gasket Set-Part No. 493263.

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
614578	Gearcase	4	10	1	82-5530	Lower Handle Assembly	6	10	1
614596	Gear 34 Tooth	4	18	1	82-5680	Bracket - Traction Adj.	1	19	1
614668	Cover - Gear Case	4	2	1	82-8450	Decal - Danger	1	11	1
614673	Bushing	5	9	1	84-8360	Latch - Handle L.H.	6	8	1
614696	Shaft - Intermediate	4	4	1	84-8400	Latch - Handle R.H.	6	19	1
3-3287	Spacer	6	9	2	86-9671	Guide - Rope	6	18	1
11-9509	Wheel & Tire Assembly	1	28	2	91-2253	Cover - Wheel	1	17	1
11-9519	Wheel - Tire & Gear Ass'y	5	17	2	91-2258	V-Belt	5	10	1
14-4069	Recycler Cover Assembly	1	9	1	92-1599	Stiffener - Blade	3	10	1
14-9419	Blade - 21	3	9	1	92-1616	Screw - Taptite	5	8	1
16-1599	Housing	2	35	1	92-1720	Plate - Kicker Right Front	1	3	1
19-4050	Knob - Handle Release	6	16	2	92-1730	Plate - Kicker Left Front	1	4	1
25-7740	Knob - Arm	1	2	2	92-1750	Plate - Kicker Left Rear	1	12	1
25-7740	Knob - Arm	5	5	2	92-1779	Decal - Warning	1	15	1
26-0670	Screw - Blade	3	12	1	92-2259	Gearcase Ass'y Complete	4	*	1
27-6232	Bolt - Wheel	5	18	2	92-2260	Screw - Handle	6	14	2
27-6232	Bolt - Wheel	1	27	2	92-2264	Bracket - Belt Guide	5	6	1
27-6250	Bushing - Wheel	5	11	4	92-2265	Stop - Pivot	7	4	1
27-6250	Bushing - Wheel	1	26	4	92-2269	Screw - Handle	7	1	1
27-7210	Screw - Shoulder	6	6	2	92-2279	Decal - H.O.C.	1	16	4
27-7211	Screw - Shoulder	6	7	2	92-2280	Decal - Instruction	7	14	1
33-3208	Rod - Shield	1	23	1	92-2283	Decal - Deck	2	34	1
36-4780	Washer - Thrust	4	17	2	92-2292	Decal - Instruction	7	15	1
36-4791	Washer	4	5	2	92-2294	Decal - Engine	3	1	1
37-7260	Screw - Hex Hd. Tapping	1	13	1	92-2298	Washer - Spring	7	13	1
38-7820	Bearing - Ball	4	15	1	92-2299	Lever - Shift	7	5	1
39-5770	Decal - Danger	1	6	1	92-3131	Shaft - Output	4	7	1
40-1940	Washer - Wheel Bolt	1	29	4	92-3132	Bolt - Shoulder	7	10	1
42-3520	Cap - End	5	28	2	92-3133	Spacer - Traction Lever	7	16	1
44-0580	Shield - Trailing	1	24	1	92-3135	Bar - Control	7	12	1
46-5481	Cable - Traction	7	3	1	92-3136	Handle - Upper	6	1	1
46-5520	Lever - Traction	7	17	1	92-4066	Cable - Brake	7	2	1
46-6810	Screw & Washer Assembly	1	8	1	92-4069	Control - Throttle	6	4	
46-6811	Screw & Washer Assembly	1	10	3	2210-249	Clamp - Casing	3	4	1
46-6980	Support - Cable	7	7	1	2210-313	Screw - Clamp	3	5	1
46-7030	Retainer - Cable	1	20	1	2210-316	Stop - Rope	3	2	1
48-2060	Bearing - Needle	5	1	2	237-153	O-Ring	5	29	2
49-2040	Screw - Self Tapping	5	7	1	302-56	Fitting - Grease	5	3	2
49-2040	Screw - Taptite	4	1	4	321-48	Screw - Hex Hd. Cap	6	5	1
49-2750	Pin - Handle	6	13	2	3253-22	Lockwasher	3	11	1
52-7406	Cover - Belt Ass'y	1	21	1	3256-1	Washer - Flat	6	2	1
55-3760	Pinion - 15 Tooth	4	3	1	3256-1	Washer - Flat	7	8	1
60-8750	Bushing	4	6	2	3256-24	Washer	4	13	1
60-8840	Pulley - Half	4	12	2	3256-49	Washer - Flat	7	11	1
60-8850	Bushing - Output	4	9	2	3285-19	Pin - Groove	4	8	2
60-8890	Gear - Bevel Pinion	4	16	1	3290-378	Tie - Cable	6	15	2
62-3720	Clamp - Cable	1	22	1	3290-378	Tie - Cable	2	37	1
62-6660	Spacer	4	11	1	3296-2	Nut - Lock	7	6	1
62-7540	Retainer - Blade	3	13	1	3296-5	Nut	4	14	1
62-7550	Pulley - Driver	3	14	1	3296-6	Locknut	5	27	2
63-8701	Pivot Arm Assembly	5	2	2	3296-6	Nut - Lock	2	31	4
63-8720	Spring Arm Assembly	5	4	2	3296-47	Nut - Lock	6	12	3
65-2720	Ring - Retaining	5	15	4	3296-72	Nut - Lock	6	11	3
65-4710	Ring - Friction	5	22	2	3296-73	Nut - Lock	6	3	2
65-4720	Spring	5	14	2	3296-73	Nut - Lock	7	9	1
65-4730	Thrust Washer	5	25	2	32144-70	Screw - Thread Forming	3	7	2
65-4740	Thrust Washer	5	13	4	32144-70	Screw - Thread Forming	1	18	2
65-4750	Pinion	5	12	2	32144-85	Screw	5	30	2
65-4760	Washer - Clutch	5	21	2	32144-85	Screw - Thread Forming	2	33	2
66-0560	Screw - Shoulder	1	25	2	31244-102	Screw - Thread Forming	3	8	3
66-0570	Guide - Belt	3	6	1	32144-111	Screw - Plastite	1	5	6
66-0580	Arm - Pivot	2	30	2					
66-6040	Key - Rocker R.H.	5	*	2					
66-6050	Key - Rocker L.H.	5	20	1					
70-9760	Bushing	5	26	2					
71-0560	Spring Arm Ass'y R.H.	1	1	1					
71-0570	Spring Arm Assembly L.H.	2	32	1					
71-1280	Decal - Danger	1	14	1					
74-1660	Cover - Wheel	5	16	2					
74-1671	Spacer - Wheel Cover	5	19	2					

OPTIONAL EQUIPMENT

Recycler Side Discharge Kit Model No. 59189
 Wear Plate Kit Part No. 49-4080
 Recycler Bagging Kit Model No. 59174
 Dethatcher Kit Model No. 59131