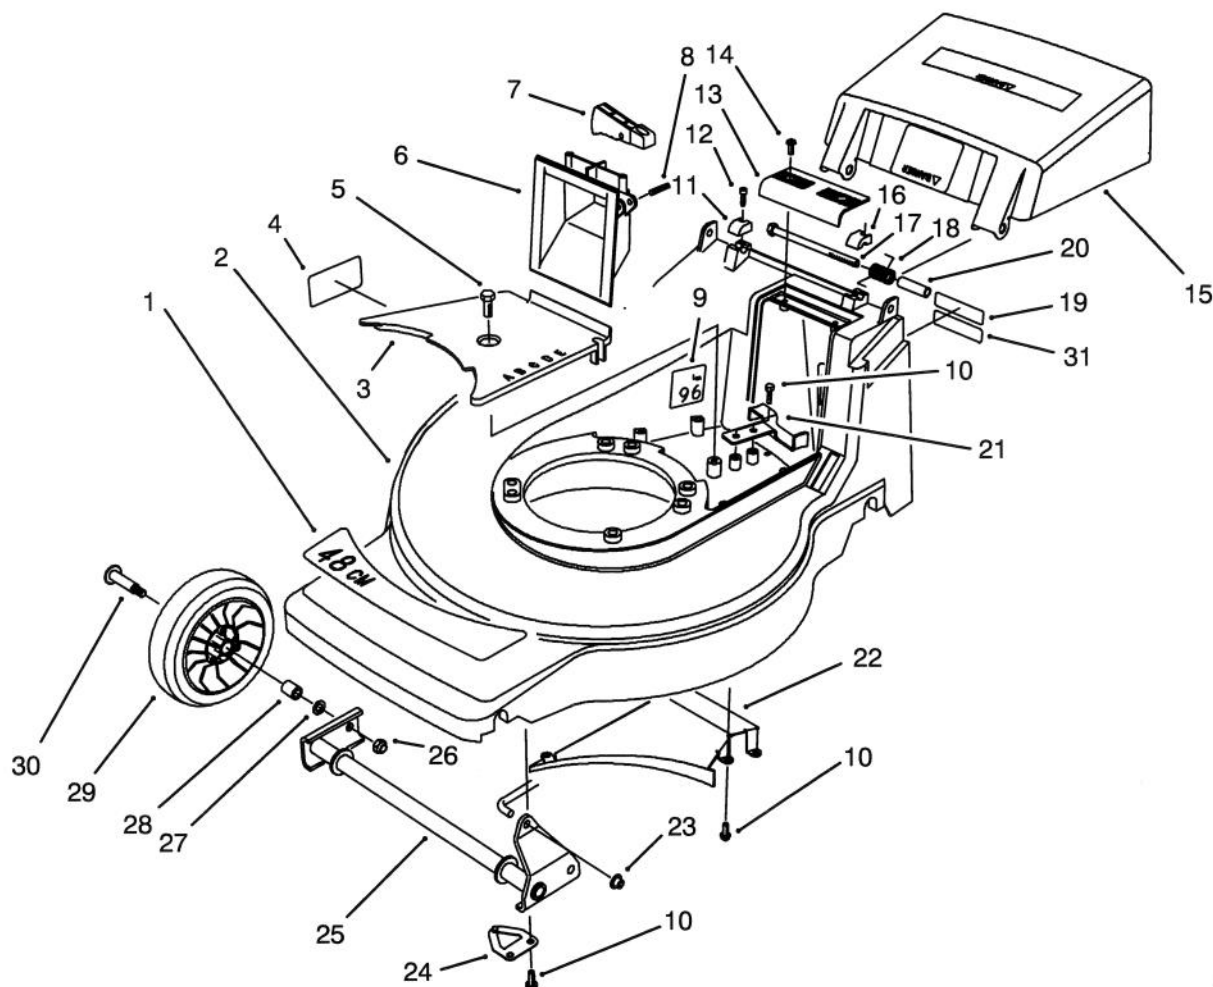 


TORO®

MODEL NO. 20907B-3900001 & UP


**PARTS
CATALOG****48cm REAR BAGGING MOWER**

C-1515

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-9860	Decal - 48cm	1
2	16-1669	Housing - 48cm (Incl. Ref. #4)	1
3	71-7920	Cover - Belt	1
4	62-3860	Decal - Danger	1
5	32144-70	Screw - Hex. Flange Hd.	1
6	71-7870	Grip - Lower	1
7	71-7930	Trigger - H.O.C.	1
8	3284-5	Pin - Roll	1
9		Decal - Noise Rating	1
10	32144-4	Screw - Thread Forming	10
11	71-7910	Cap - Hinge Bolt R.H.	1
12	65-5210	Screw - Thread Forming	2
13	71-7860	Grip - Upper	1
14	32144-97	Screw - Thread Forming	2
15	71-9800	Door - Discharge	1
16	71-7900	Cap - Hinge Bolt L.H.	1

Ref. No.	Part No.	Description	No. Used
17	322-29	Screw - Cap Hex. Hd.	2
18	71-9840	Spring - Door	2
19	66-0680	Decal - French Regulation	1
20	71-8580	Spacer - Door	2
21	71-7890	Guide - Belt Rear	1
22	71-7990	Ramp - Discharge	1
23	32112-11	Nut - Push	1
24	71-8830	Retainer - Shaft	2
25	71-7820	Pivot - Front	1
26	3296-5	Nut - Lock	2
27	40-1940	Washer - Wheel	2
28	27-6250	Bushing - Wheel	4
29	46-1113	Wheel & Tire Assembly (Incl. Ref. #28)	2
30	27-6230	Bolt - Wheel	2
31		Decal - Power Rating	1

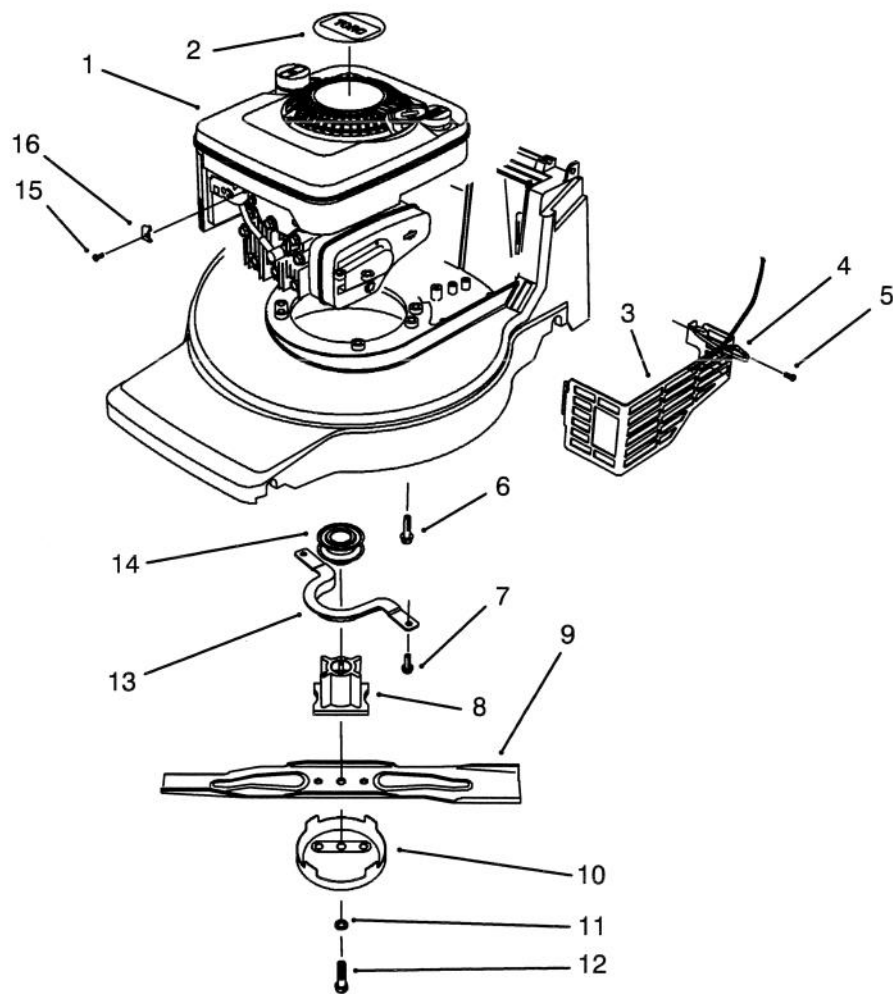 


C-1516

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine - B&S Quantum	1
2	71-8460	Decal - Engine	1
3	82-8550	Shield - Muffler	1
4	3290-378	Tie - Cable	1
5	32144-73	Screw - Muffler	3
6	32144-102	Screw - Engine Mount	3
7	32144-4	Screw - Thr'd Forming	2
8	71-7940	Retainer - Blade	1

Ref. No.	Part No.	Description	No. Used
9	71-8210	Blade - 48cm	1
10	80-2770	Cup - Anti-Scalp	1
11	3253-22	Washer - Lock	1
12	26-0672	Bolt - Blade	1
13	71-7960	Guide - Engine Belt	1
14	62-7550	Pulley - Driver	1
15	86-7990	Screw - Clamp	1
16	2210-249	Clamp - Cable	1

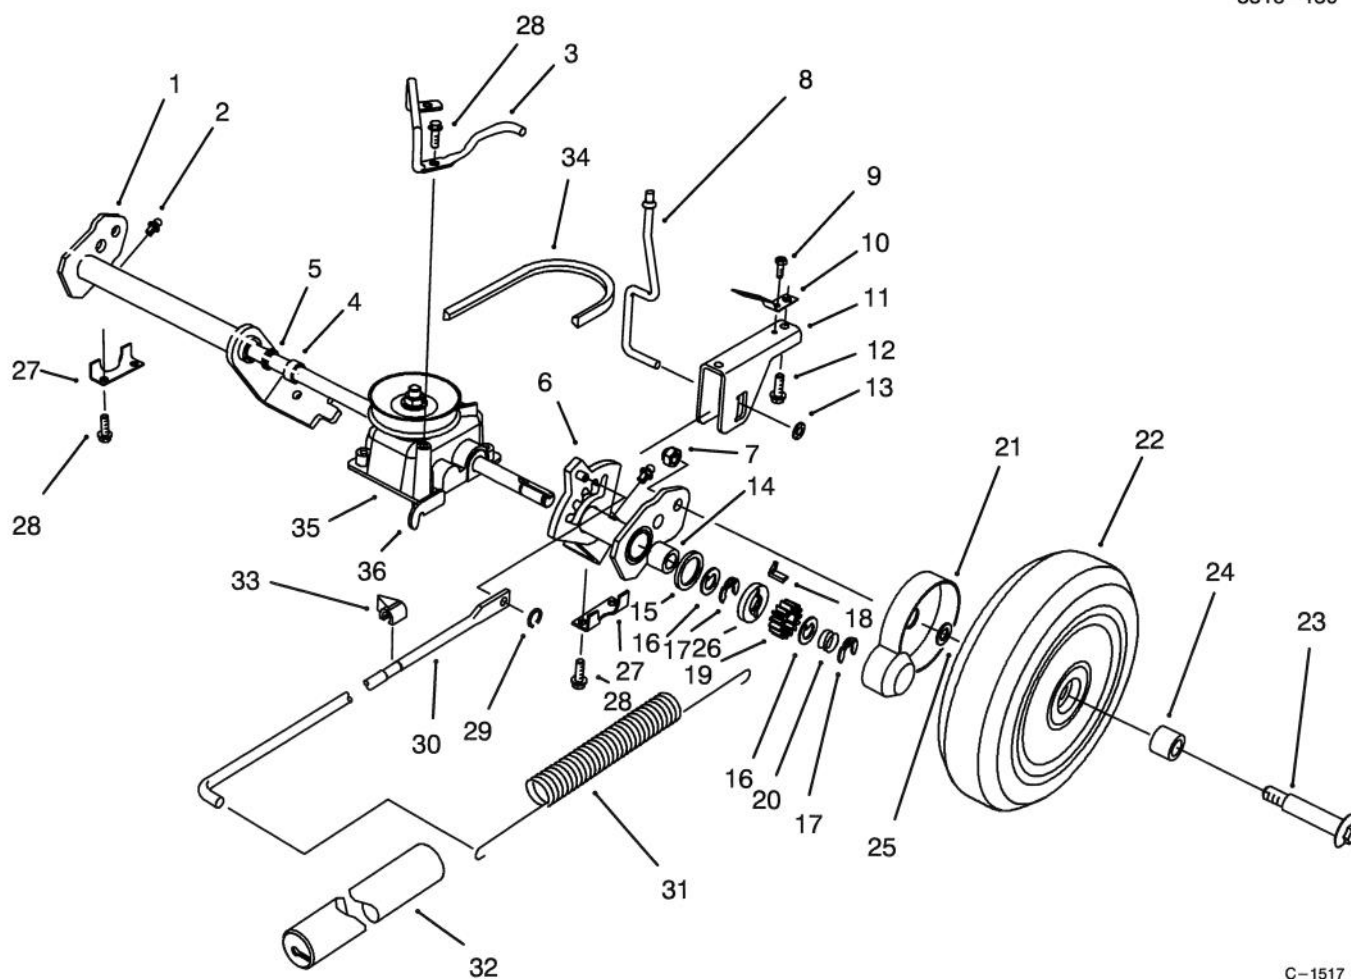 


C-1517

S. P. REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-9820	Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14)	1
2	302-26	Fitting - Grease	2
3	71-9850	Retainer - Belt	1
4	47-2890	Bushing - Sleeve	2
5	47-6730	Seal - Grease	2
6	71-9810	Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14)	1
7	3296-5	Nut - Lock	2
8	71-7840	Rod - Trigger	1
9	32144-31	Screw - Thread Forming	1
10	71-8060	Spring - Trigger Return	2
11	71-8080	Saddle - H.O.C.	1
12	63-8590	Screw - Thread Forming	2
13	32112-13	Nut - Push	1
14	48-2060	Bearing - Needle	2
15	65-4710	Washer - Friction	2
16	65-4740	Washer - Keyed Thrust	4
17	65-2720	Ring - Retaining	4
18	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1

Ref. No.	Part No.	Description	No. Used
19	65-4750	Gear - Pinion	2
20	65-4720	Spring - Compression	2
21	74-1660	Cover - Wheel	2
22	14-9959	Wheel, Tire & Gear Assy. (Incl. Ref. #24)	2
23	27-6230	Bolt - Wheel	2
24	27-6250	Bushing - Wheel	4
25	74-1670	Spacer - Wheel	2
26	65-4760	Washer - Clutch	2
27	71-7770	Plate - Rear Securing	2
28	32144-4	Screw - Thread Forming	6
29	32151-93	Ring - Grip	1
30	71-7970	Rod - Link	1
31	71-7740	Spring - Counterbalance	1
32	71-8450	Cover - Spring	1
33	71-7980	Indicator - H.O.C.	1
34	71-9450	V-Belt	1
35	71-9600	Gearcase Assembly (Incl. Ref. #36)	1
36	71-9630	Bracket - Traction	1

 *Not Illustrated

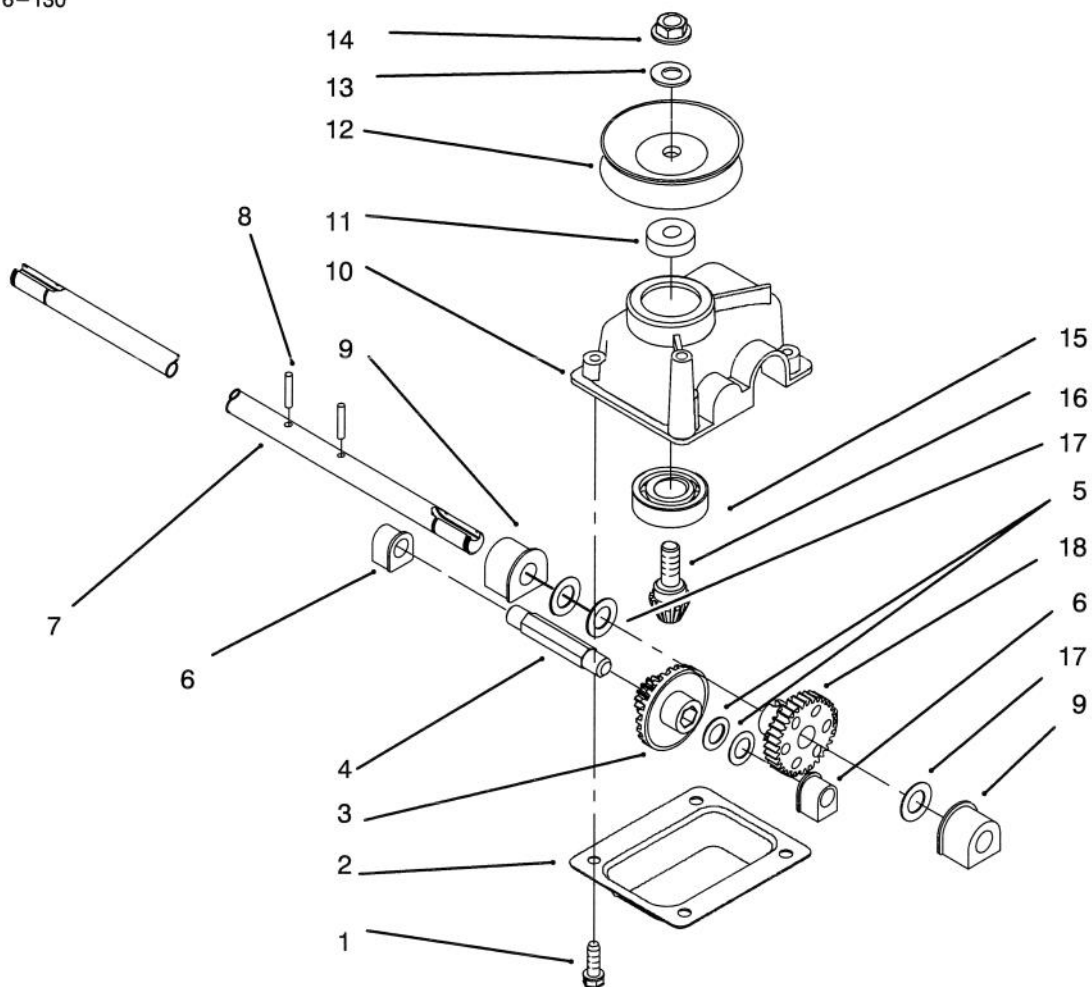


C-1292a

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-114	Pin - Spirol	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
*	71-9600	Gear Case Ass'y Complete	1

 *Not Illustrated

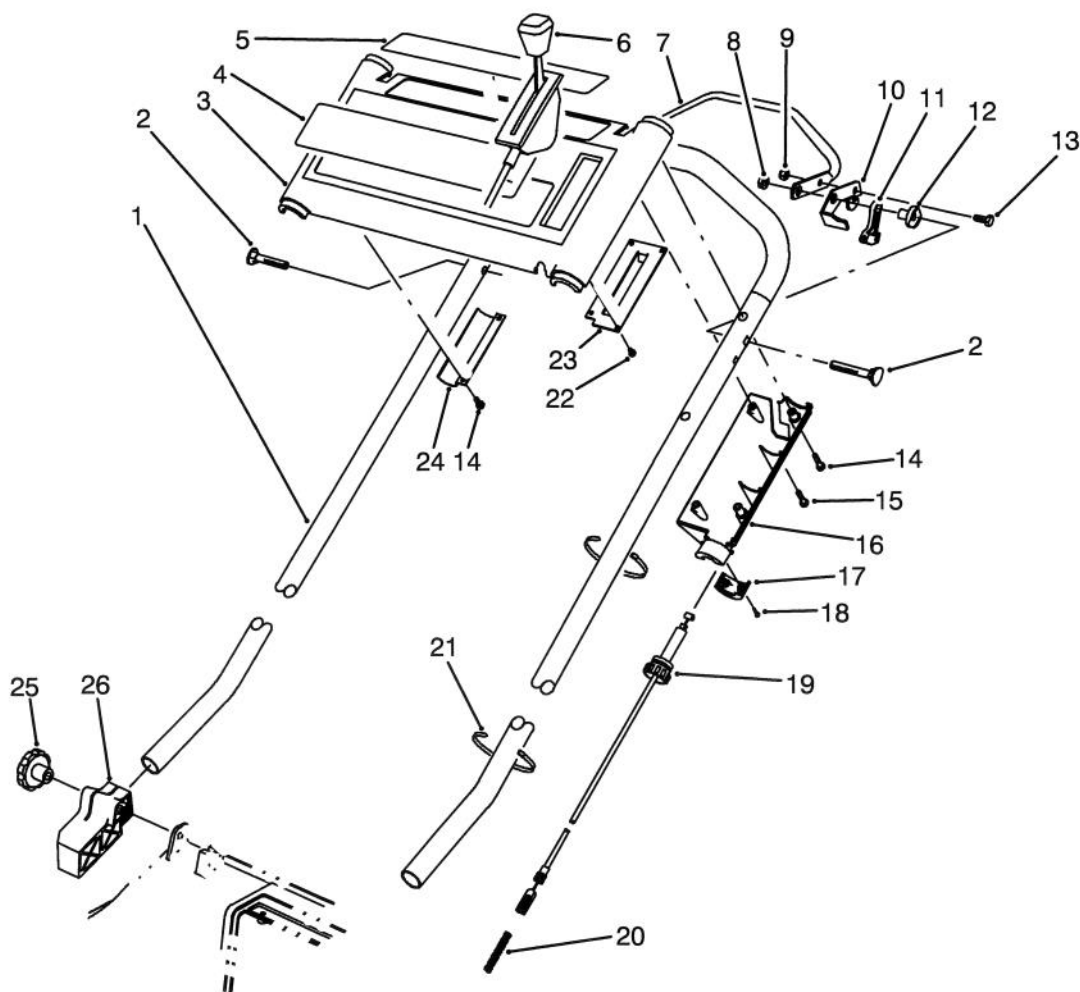


C-0367

S. P. HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-9020	Handle	1
2	17-9426	Screw - Handle	2
3	16-1689	Panel - Control (Incl. Ref. #4 & 5)	1
4	71-9861	Decal - TORO 4 Cyc.	1
5	71-9865	Decal - Danger	1
6	66-0235	Control - Throttle Bend Type #1 Sheath Lg. 55.50 Wire Lg. 2 1/2	1
7	46-9900	Bar - Control	1
8	3296-29	Nut - Flange Lock	2
9	3296-42	Nut - Lock	1
10	46-8800	Lever - Control	1
11	46-5520	Lever - Traction	1
12	66-0330	Support - Spacer	2

Ref. No.	Part No.	Description	No. Used
13	321-3	Screw - Cap Hex. Hd.	1
14	32144-97	Screw - Thread Forming	5
15	32104-121	Screw - Thread Forming	1
16	71-7680	Cover - Throttle Lower	1
17	71-7630	Cap - Throttle Lower	1
18	32144-99	Screw - Thread Forming	2
19	71-8110	Cable - Traction	1
20	71-8310	Spring - Compression	1
21	3290-378	Tie - Cable	2
22	32144-98	Screw - Thread Forming	4
23	71-8040	Plate - Throttle	1
24	71-8130	Bracket - Panel	1
25	19-4050	Knob - Handle	2
26	71-8100	Mount - Handle R.H.	1
*	71-8090	Mount - Handle L.H.	1

 *Not Illustrated

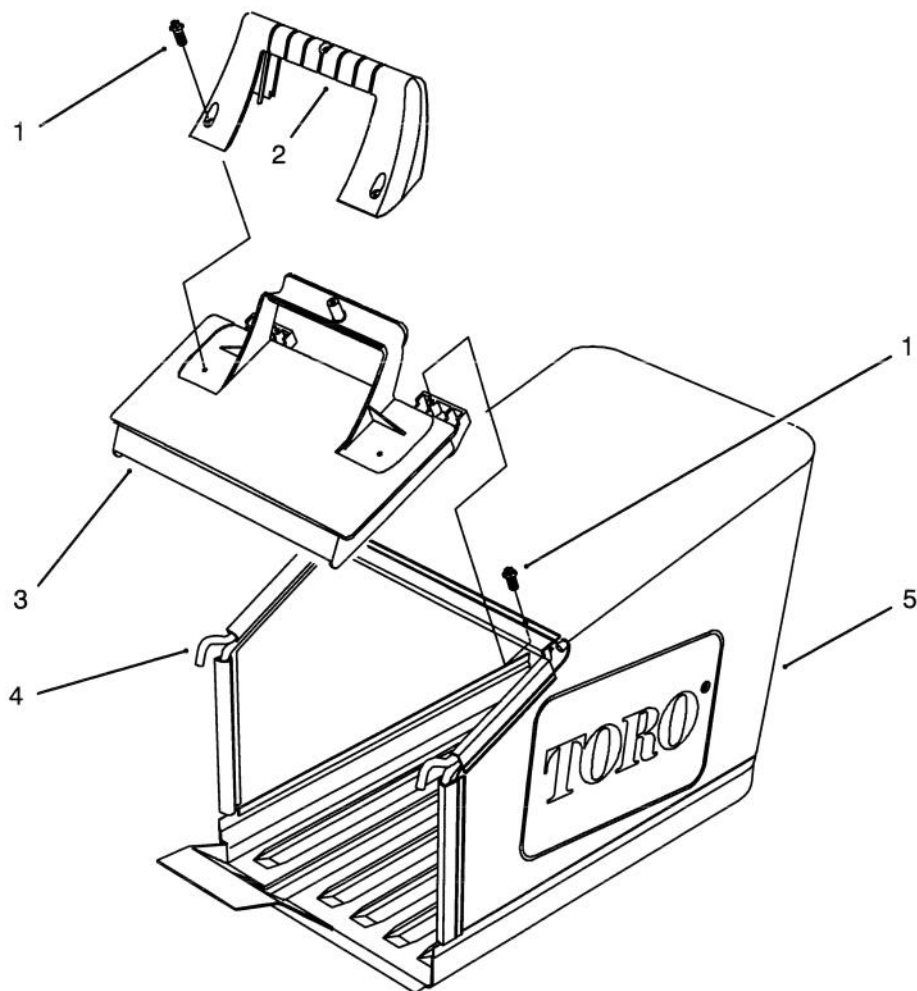


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Thr'd Form	5
2	71-9480	Handle - Door	1
3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

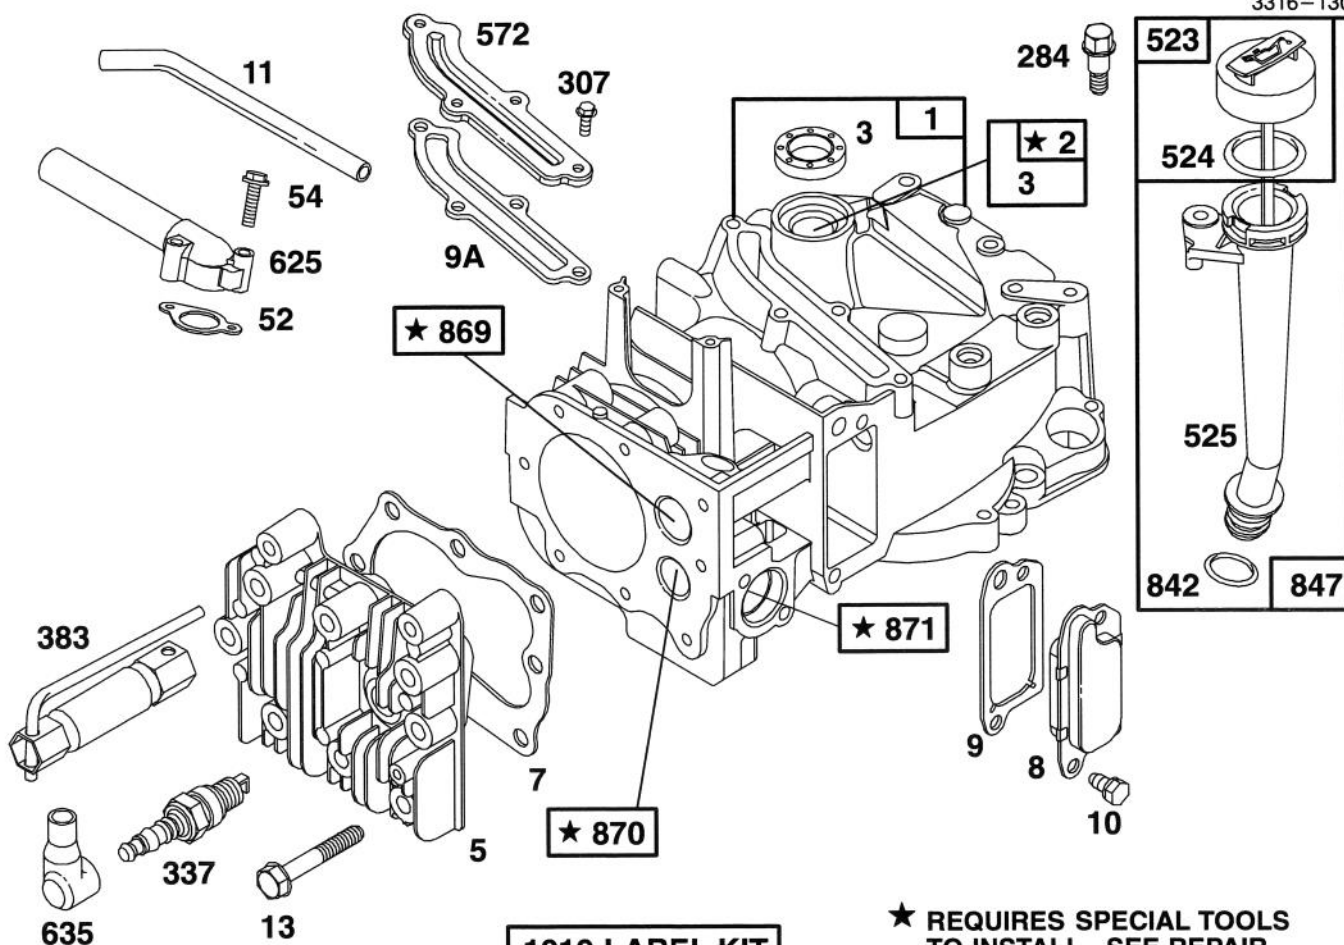 


ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing—Cylinder	1
		Note: Requires Special Tools for Installation.	
*3	393862	Seal—Oil	1
5	213861	Head—Cylinder	1
*7	272200	Gasket—Cylinder Hd.	1
8	399717	Breather—Vlv. Chamber	1
*9	271904	Gasket—Valve Cover	1
*9A	272238	Gasket—Baffle Plate	1
10	94222	Screw—Breather Mtg.	1
11	231685	Tube—Breather	1
13	94547	Screw—Cylinder Hd.	1
*52	272199	Gasket—Intake Elbow	1
54	94526	Screw—Intake Elbow Mtg.	1
284	94511	Screw—Hex. Head	1
307	94515	Screw—Hex. Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	493950	Cap with Dipstick—Oil Filler	1
524	280393	Seal—Filler Tube	1
525	493952	Tube—Oil Filler	1
572	224328	Baffle—Cylinder	1
625	492717	Tube—Fuel Intake	1
635	66538	Elbow—Spark Plug	1
842	280966	Seal—O-Ring	1
847	493459	Dipstick and Tube Assy.—Oil Filler	1
869	213512	Seat—Intake Valve (Std.)	1
870	213513	Seat—Exhaust Valve (Std.)	1
871	262001	Guide—Exhaust Valve Note: 63709 Guide—Intake Valve See Repair Instruction Manual.	1
1019	494256	Label Kit	1

 ★ Included in Gasket Set—Part No. 493263.

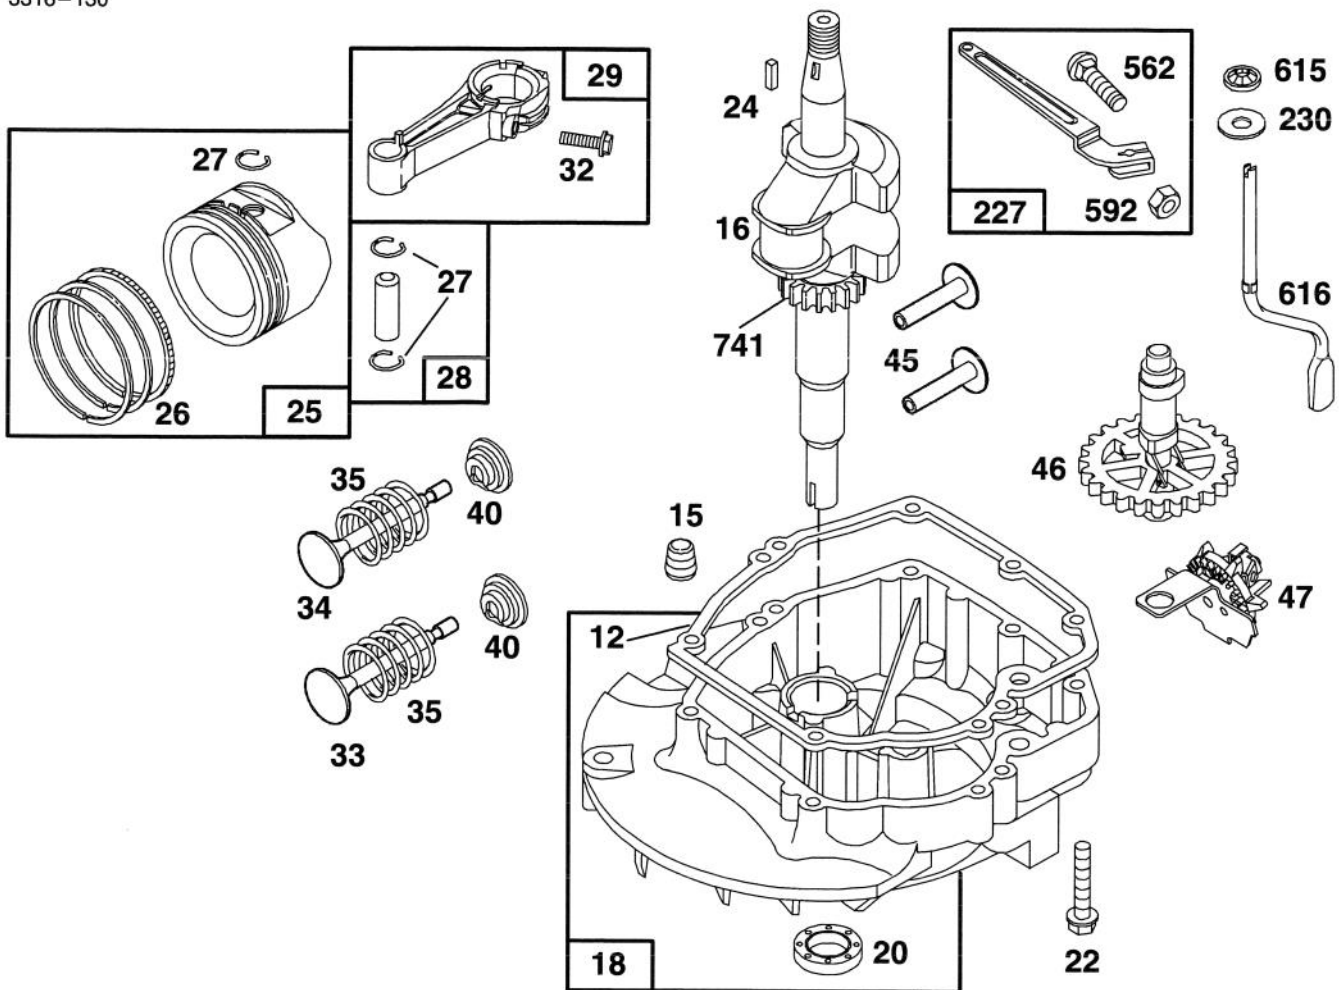


ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket—Crankcase	1
15	93418	Plug—Oil Drain	1
16	494547	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump—Engine	1
★20	399781	Seal—Oil	1
22	94220	Screw—Sump Mtg. Sem	1
		Note: 94612 Screw—Sump Mtg. One Used in Hole Nearest Breather.	
24	222698	Key—Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
		PISTON RING SETS:	
26	493261	Ring Set—Piston (Std.)	1
	493388	Ring Set—Piston (.010" O.S.)	1
	493389	Ring Set—Piston (.020" O.S.)	1
	493390	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock—Piston Pin	1
28	298909	Pin Assembly—Piston (Std.)	1
29	490566	Rod Assembly—Connecting	1
		Note: For Connecting Rod with .020" Undersize Crankpin	
		Bearing—Order No. 490743.	1
32	94405	Screw—Connecting Rod	1
33	262651	Valve—Exhaust	1
34	262652	Valve—Intake	1
35	262224	Spring—Valve	1
40	93312	Retainer—Valve Spring	1
45	262204	Tappet—Valve	1
46	492828	Gear—Cam	1
47	493737	Oil Slinger Gear and Bracket	1
227	492349	Lever Assembly—Gov.	1
230	67072	Washer—Gov. Crank	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex	1
615	94474	Pushnut (Governor Crank)	1
616	262578	Crank—Governor	1
741	262598	Gear—Timing	1

 ★ Included in Gasket Set—Part No. 493263.

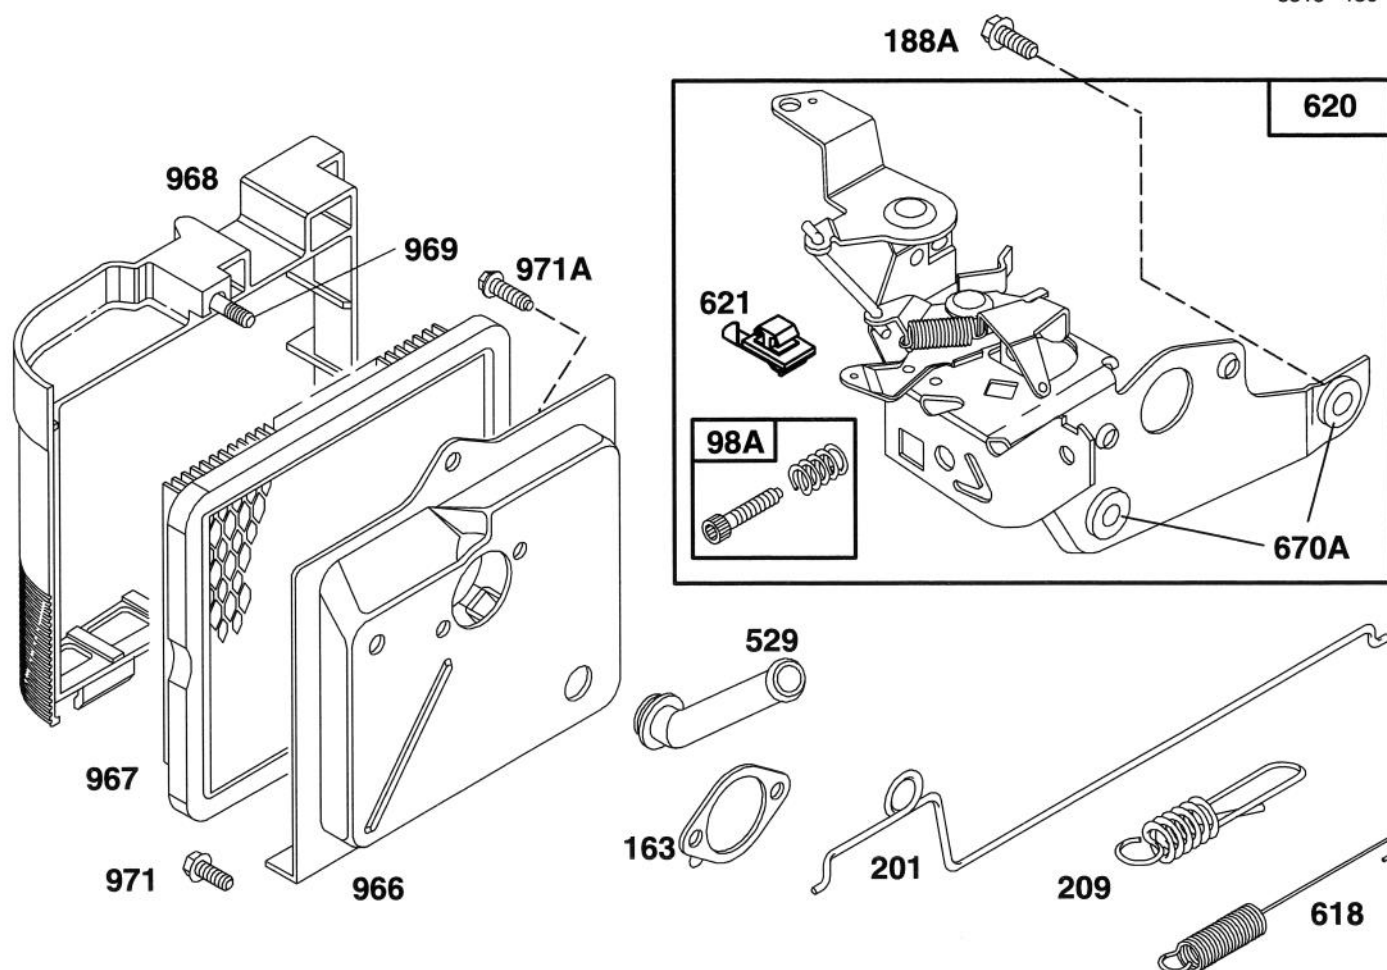


ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw Assy.—Speed Adj.	1
★163	272296	Gasket—Air Cleaner	1
188A	94644	Screw—Hex. Head	1
201	262579	Link—Governor	1
209	262661	Spring—Governor	1
529	280943	Grommet—Breather	1
618	262749	Spring—Choke Return	1
620	493894	Bracket Assembly—Carburetor Control	1
621	396847	Switch—Stop	1

Ref. No.	Part No.	Description	No. Used
670A	493823	Spacer—Carburetor Brkt. (Includes 2)	1
966	492363	Base—Air Cleaner	1
967	491588	Filter—Air	1
968	280937	Cover—Air Cleaner	1
969	94120	Screw—Cover Mtg.	1
971	94269	Screw—Air Cleaner	1
971A	94121	Screw—Air Cleaner (Base to Carburetor)	1

 ★ Included in Gasket Set—Part No. 493263.

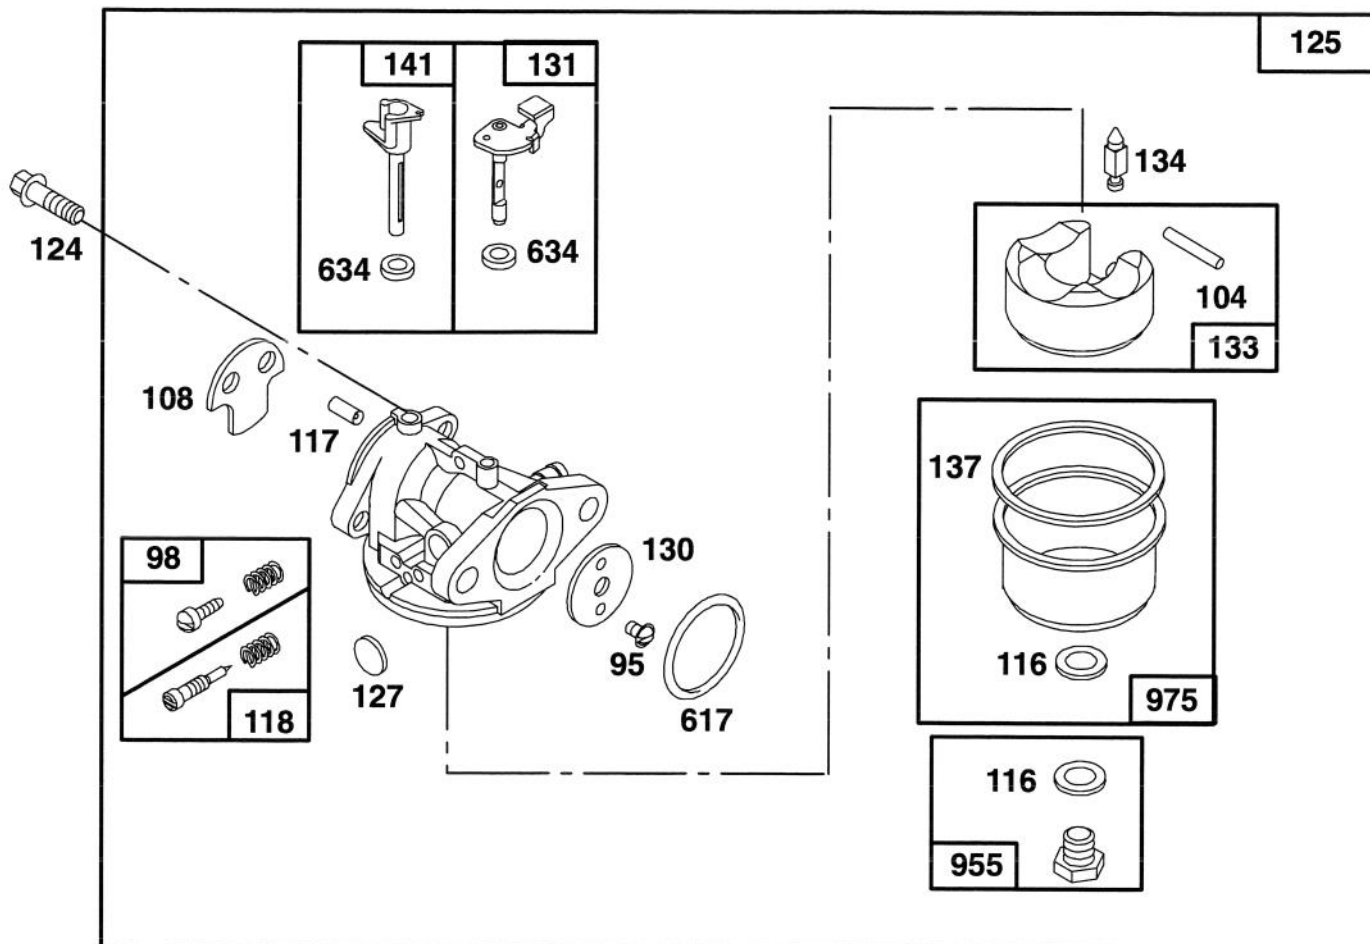


ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw—Throttle Valve Mounting	1
98	398185	Screw—Idle Adjustment	1
•104	231371	Pin—Float Hinge	1
108	223471	Valve—Choke	1
••116		Gasket—Sealing (Sold in Kit Only).	1
•117		Jet (Sold in Kit Only).	1
118	493765	Valve and Spring—Needle	1
124	94525	Screw—Carburetor Mtg.	1
125	494216	Carburetor Assembly	1
•127		Plug—Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	223470	Valve—Throttle	1
131	493267	Shaft and Lever—Throttle	1
133	398187	Float Assy.—Carburetor	1
•134	398188	Valve—Inlet (Includes Seat)	1
••137		Gasket—Bowl (Sold in Kit Only).	1
141	494218	Shaft—Choke	1
••617	270344	Seal—Fuel Intake Tube	1
••634		Washer—Shaft (Sold in Kit Only).	1
955	493763	Screw—Fuel Bowl	1
975	493640	Bowl—Carburetor	1

• Included in Carburetor Overhaul Kit—Part No. 493762.

 
◆ Included in Carburetor Gasket Set—Part No. 490937.

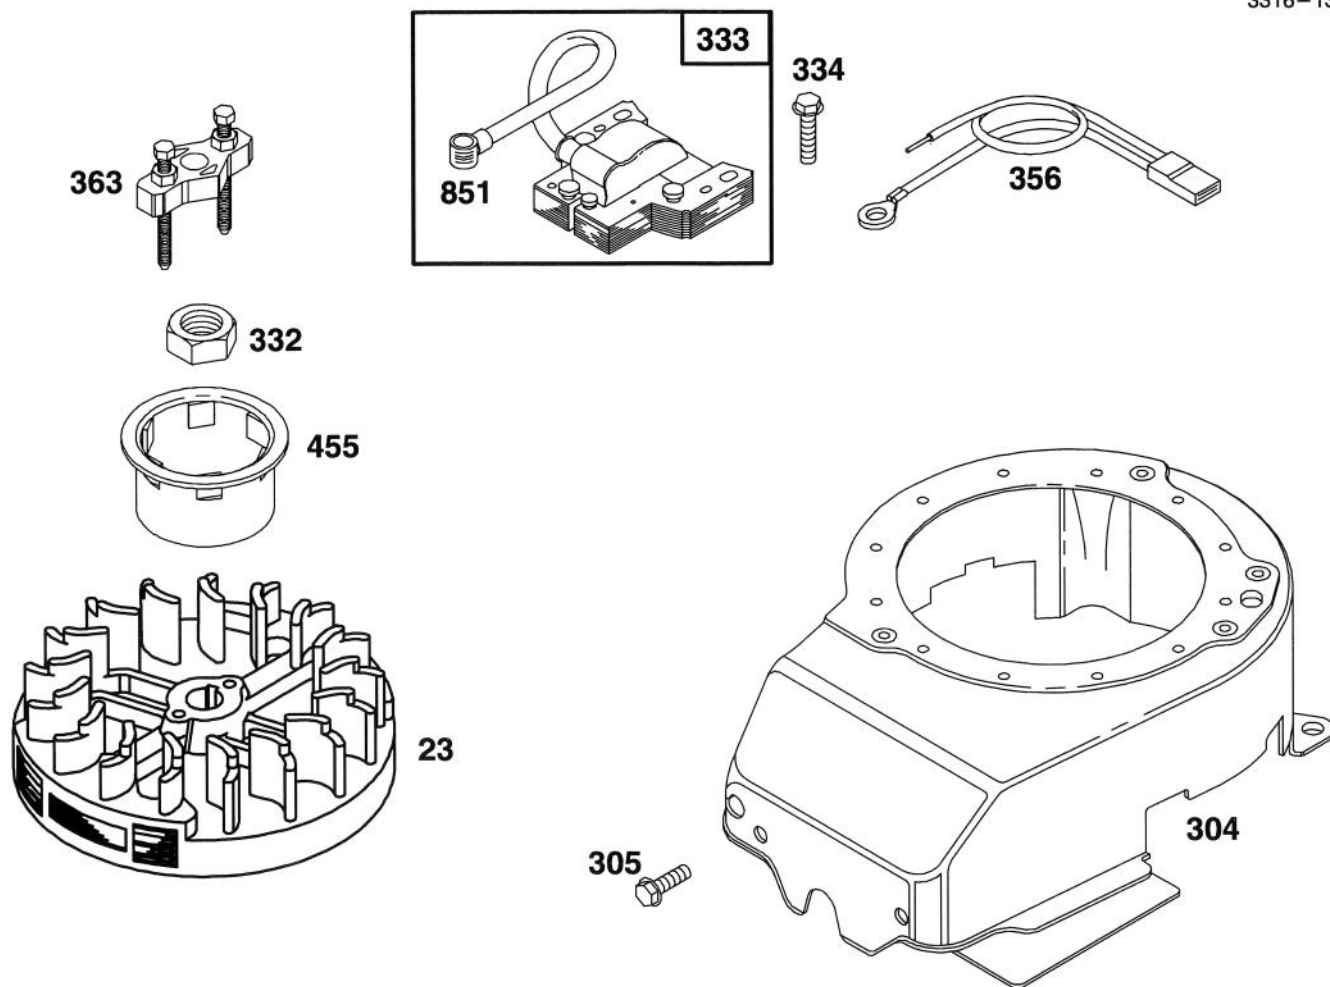

ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel Assembly	1
304	493294	Housing-Blower	1
305	94513	Screw-Hex Head Sem	1
332	92284	Nut-Flywheel	1
333	802574	Armature-Magneto	1


Ref. No.	Part No.	Description	No. Used
334	93381	Screw-Armature Mounting	1
356	398808	Wire-Ground	1
363	19069	Puller-Flywheel	1
455	224250	Cup-Starter	1
851	221798	Terminal-Ignition Cable	1

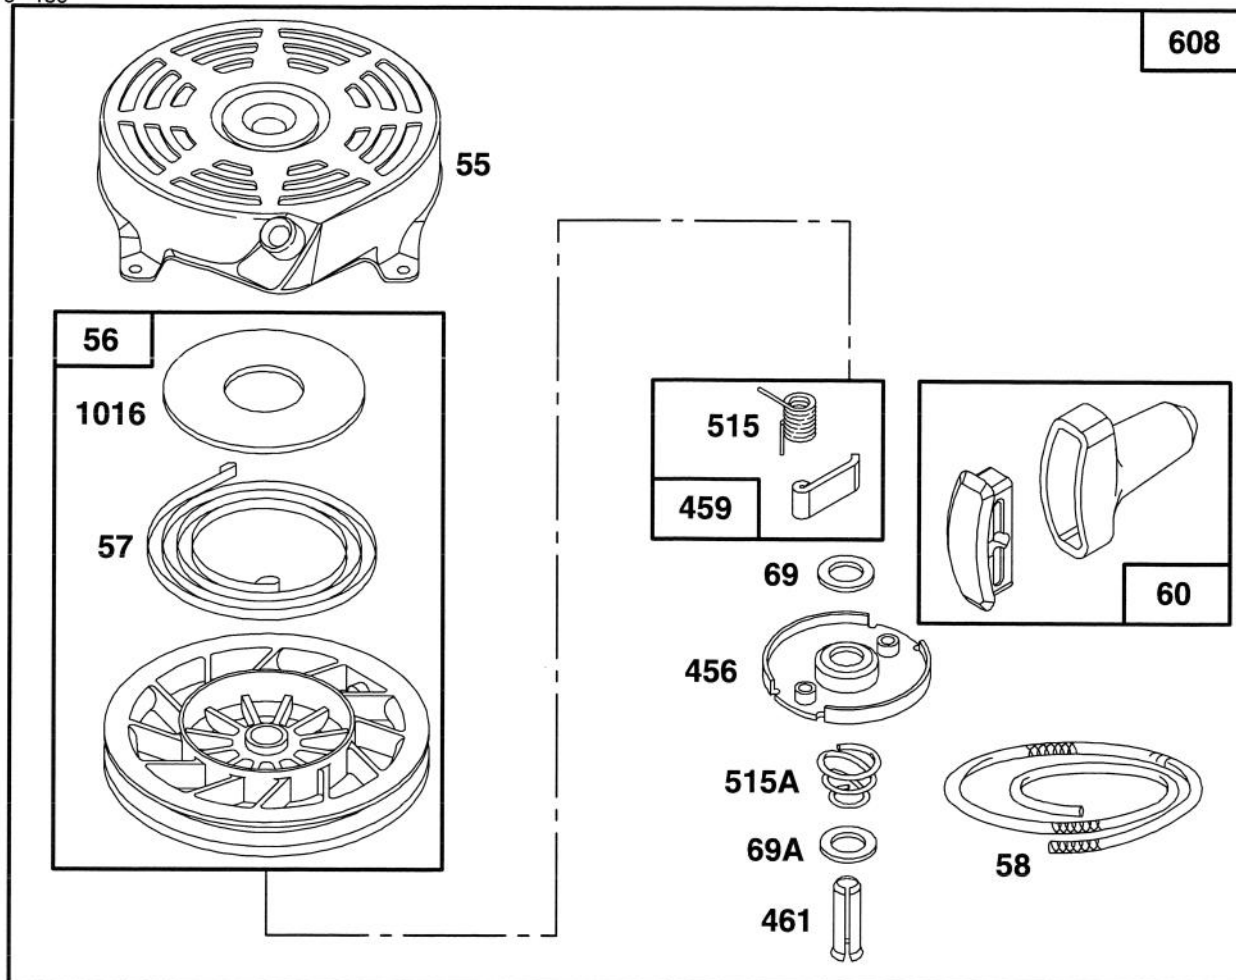 

ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing—Rewind Starter	1
56	492832	Pulley—Rewind Starter	1
57	262594	Spring—Rewind Starter	1
58	280399	Rope—Rewind Starter (Cut to 88-5/8")	1
60	393152	Handle—Rewind Starter	1
69	280973	Washer—Rewind Starter	1
69A	224322	Washer—Rewind Starter	1
456	224321	Retainer—Rewind Starter	1




Ref. No.	Part No.	Description	No. Used
459	492833	Pawl—Starter	1
461	262626	Pin—Starter	1
515	262556	Spring—Pawl	1
515A	262625	Spring—Torsion	1
608	493295	Starter Assy.—Rewind Includes: 94128 Screw—Hex. Hd. 92987 Nut—Hex.	1
1016	224278	Cover—Rewind Starter	1

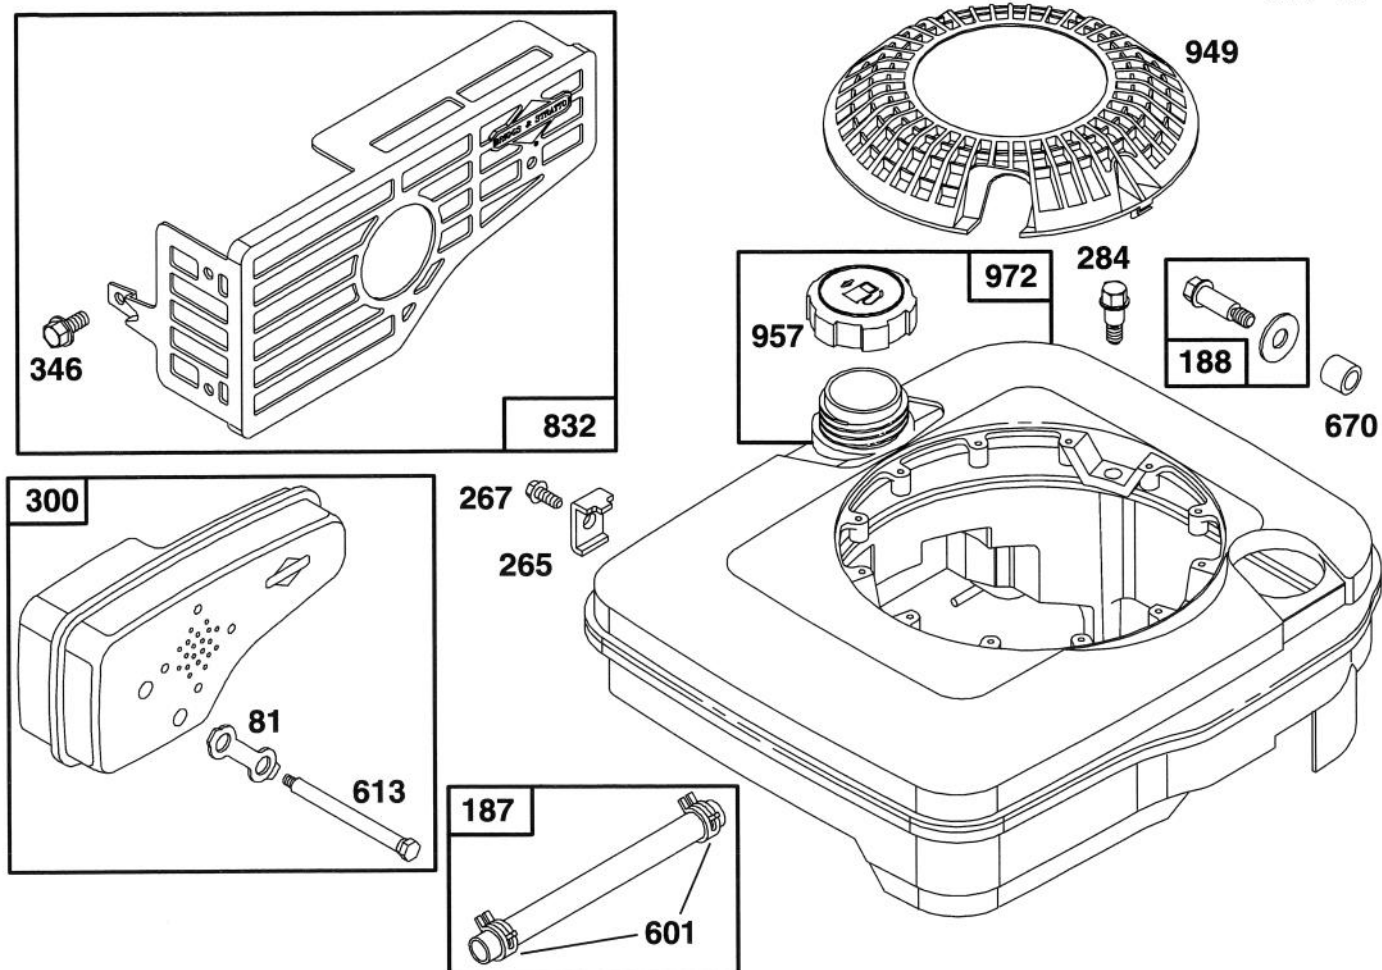 

ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock-Muffler Screw	1
187	492790	Hose-Fuel	1
188	398540	Screw-Tank Mounting (Includes Washer)	1
265	221535	Clamp-Casing	1
267	94204	Screw-Clamp Mtg.	1
284	94511	Screw-Hex Head	1
300	490547	Muffler-Exhaust	1

Ref. No.	Part No.	Description	No. Used
346	94602	Screw-Hex. Head	1
601	93807	Clamp-Hose	1
613	94231	Screw-Muffler Mtg.	1
670	280512	Spacer-Fuel Tank	1
832	494224	Guard-Muffler	1
949	281136	Guard-Finger	1
957	397974	Cap Assembly-Fuel	1
972	494528	Tank Assembly-Fuel	1

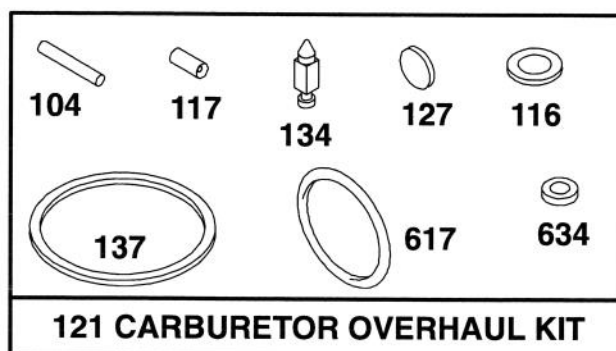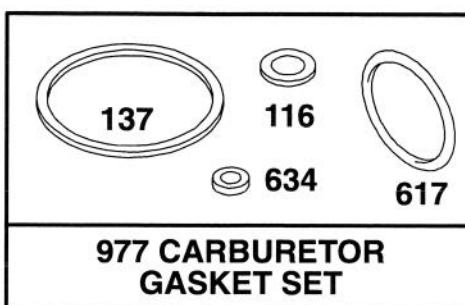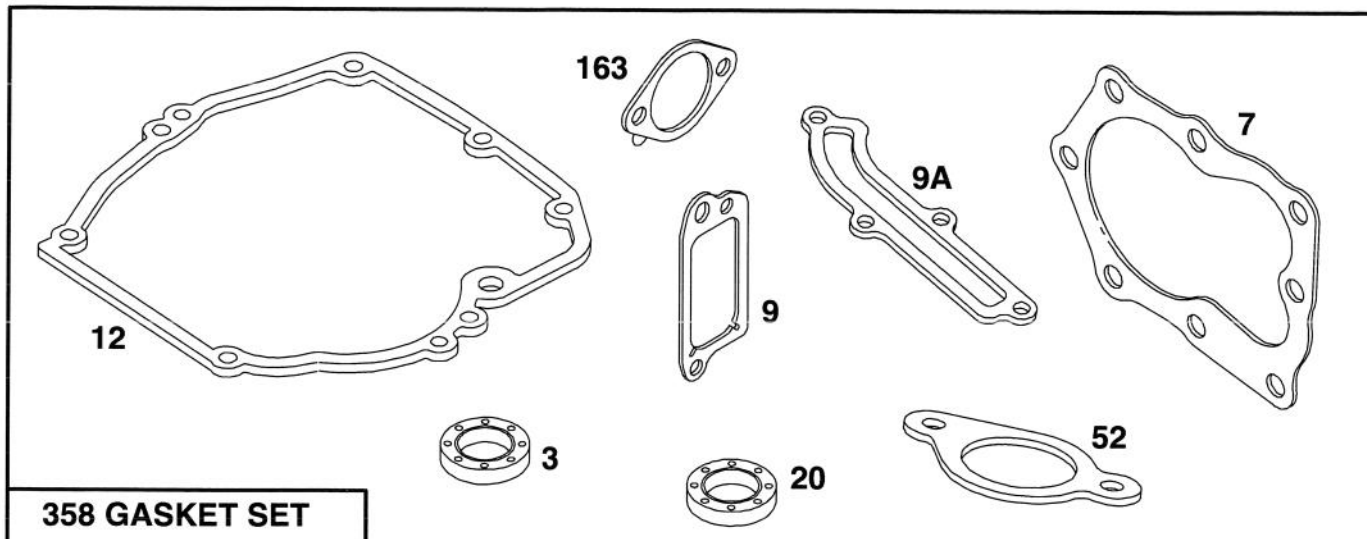   

ENGINE BRIGGS & STRATTON MODEL 122702-0182-01

Ref. No.	Part No.	Description	No. Used
★3	393862	Seal—Oil	1
★7	272200	Gasket—Cylinder Hd.	1
★9	271904	Gasket—Valve Cover	1
★9A	272238	Gasket—Baffle Plate	1
★12	272198	Gasket—Crankcase	1
★20	399781	Seal—Oil	1
★52	272199	Gasket—Intake Elbow	1
•104	231371	Pin—Float Hinge	1
•♦116		Gasket—Sealing (Sold in Kit Only).	1
•117		Jet (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
121	493762	Carburetor Overhaul Kit	1
•127		Plug—Welch (Sold in Kit Only).	1
•134	398188	Valve—Inlet (Includes Seat)	1
•♦137		Gasket—Bowl (Sold in Kit Only).	1
★163	272296	Gasket—Air Cleaner	1
358	493263	Gasket Set	1
•♦617	270344	Seal—Fuel Intake Tube	1
•♦634		Washer—Shaft (Sold in Kit Only).	1
977	490937	Gasket Set—Carburetor	1

• Included in Carburetor Overhaul Kit—Part No. 493762.

♦ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 493263.

TORO PART NUMBER INDEX

3316-130

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
	Decal - Noise Rating	1 9 1	71-8060	Spring - TriggerReturn	3 10 2
	Decal - PowerRating	1 31 1	71-8080	Saddle - H.O.C.	3 11 1
	Engine - B & S Quantum	2 1 1	71-8090	Mount - Handle L.H.	5 * 1
614578	Gearcase	4 10 1	71-8100	Mount - Handle R.H.	5 26 1
614596	Gear 34 Tooth	4 18 1	71-8110	Cable - Traction	5 19 1
614668	Cover - Gear Case	4 2 1	71-8130	Bracket - Panel	5 24 1
614696	Shaft - Intermediate	4 4 1	71-8210	Blade - 48cm	2 9 1
14-9959	Wheel, Tire & Gear Assy.	3 22 2	71-8310	Spring - Compression	5 20 1
16-1669	Housing - 48cm	1 2 1	71-8450	Cover - Spring	3 32 1
16-1689	Panel - Control	5 3 1	71-8460	Decal - Engine	2 2 1
17-9426	Screw - Handle	5 2 2	71-8580	Spacer - Door	1 20 2
19-4050	Knob - Handle	5 25 2	71-8830	Retainer - Shaft	1 24 2
26-0672	Bolt - Blade	2 12 1	71-9020	Handle	5 1 1
27-6230	Bolt - Wheel	3 23 2	71-9450	V-Belt	3 34 1
27-6230	Bolt - Wheel	1 30 2	71-9460	Bag - Grass	6 5 1
27-6250	Bushing - Wheel	3 24 4	71-9470	Door - Bag	6 3 1
27-6250	Bushing - Wheel	1 28 4	71-9480	Handle - Door	6 2 1
36-4780	Washer - Thrust	4 17 3	71-9600	Gear Case Ass'y Complete	4 * 1
36-4791	Washer	4 5 2	71-9600	GearcaseAssembly	3 35 1
38-7820	Bearing - Ball	4 15 1	71-9610	Pulley - Half	4 12 2
40-1940	Washer - Wheel	1 27 2	71-9620	Shaft - Output	4 7 1
46-1113	Wheel & Tire Assembly	1 29 2	71-9630	Bracket - Traction	3 36 1
46-5520	Lever - Traction	5 11 1	71-9800	Door - Discharge	1 15 1
46-8800	Lever - Control	5 10 1	71-9810	Rear Pivot Assembly L.H.	3 6 1
46-9900	Bar - Control	5 7 1	71-9820	Rear Pivot Assembly R.H.	3 1 1
47-2890	Bushing - Sleeve	3 4 2	71-9840	Spring - Door	1 18 2
47-6730	Seal - Grease	3 5 2	71-9850	Retainer - Belt	3 3 1
48-2060	Bearing - Needle	3 14 2	71-9860	Decal - 48cm	1 1 1
49-2040	Screw - Taptitte	4 1 4	71-9861	Decal - TORO 4 Cyc.	5 4 1
55-3760	Pinion - 15 Tooth	4 3 1	71-9865	Decal - Danger	5 5 1
60-8750	Bushing	4 6 2	71-9900	Frame - Bag	6 4 1
60-8850	Bushing - Output	4 9 2	74-1660	Cover - Wheel	3 21 2
60-8890	Gear - Bevel Pinion	4 16 1	74-1670	Spacer - Wheel	3 25 2
62-3860	Decal - Danger	1 4 1	80-2770	Cup - Anti-Scalp	2 10 1
62-6660	Spacer	4 11 1	82-8550	Shield - Muffler	2 3 1
62-7550	Pulley - Driver	2 14 1	86-7990	Screw - Clamp	2 15 1
63-8590	Screw - Thread Forming	3 12 2	2210-249	Clamp - Cable	2 16 1
65-2720	Ring - Retaining	3 17 4	302-26	Fitting - Grease	3 2 2
65-4710	Washer - Friction	3 15 2	321-3	Screw - Cap Hex. Hd.	5 13 1
65-4720	Spring - Compression	3 20 2	322-29	Screw - Cap Hex. Hd.	1 17 2
65-4740	Washer - KeyedThrust	3 16 4	3253-22	Washer - Lock	2 11 1
65-4750	Gear - Pinion	3 19 2	3256-24	Washer	4 13 1
65-4760	Washer - Clutch	3 26 2	3284-5	Pin - Roll	1 8 1
65-5210	Screw - Thread Forming	1 12 2	3290-378	Tie - Cable	2 4 1
66-0235	Control - Throttle	5 6 1	3290-378	Tie - Cable	5 21 2
66-0330	Support - Spacer	5 12 2	3296-5	Nut	4 14 1
66-0680	Decal - FrenchRegulation	1 19 1	3296-5	Nut - Lock	3 7 2
66-6040	Key - Rocking R.H.	3 * 1	3296-5	Nut - Lock	1 26 2
66-6050	Key - Rocking L.H.	3 18 1	3296-29	Nut - Flange Lock	5 8 2
71-7630	Cap - Throttle Lower	5 17 1	3296-42	Nut - Lock	5 9 1
71-7680	Cover - Throttle Lower	5 16 1	32104-121	Screw - Thread Forming	5 15 1
71-7740	Spring - Counterbalance	3 31 1	32112-11	Nut - Push	1 23 1
71-7770	Plate - Rear Securing	3 27 2	32112-13	Nut - Push	3 13 1
71-7820	Pivot - Front	1 25 1	32121-114	Pin - Spirol	4 8 2
71-7840	Rod - Trigger	3 8 1	32144-4	Screw - Thr'd Forming	2 7 2
71-7860	Grip - Upper	1 13 1	32144-4	Screw - Thread Forming	1 10 10
71-7870	Grip - Lower	1 6 1	32144-4	Screw - Thread Forming	3 28 6
71-7890	Guide - Belt Rear	1 21 1	32144-31	Screw - Thread Forming	3 9 1
71-7900	Cap - Hinge Bolt L.H.	1 16 1	32144-70	Screw - Hex. Flange Hd.	1 5 1
71-7910	Cap - Hinge Bolt R.H.	1 11 1	32144-73	Screw - Muffler	2 5 3
71-7920	Cover - Belt	1 3 1	32144-97	Screw - Thread Forming	1 14 2
71-7930	Trigger - H.O.C.	1 7 1	32144-97	Screw - Thread Forming	5 14 5
71-7940	Retainer - Blade	2 8 1	32144-98	Screw - Thread Forming	5 22 4
71-7960	Guide - Engine Belt	2 13 1	32144-99	Screw - Thread Forming	5 18 2
71-7970	Rod - Link	3 30 1	32144-102	Screw - Engine Mount	2 6 3
71-7980	Indicator - H.O.C.	3 33 1	32144-111	Screw - Thr'd Form	6 1 5
71-7990	Ramp - Discharge	1 22 1	32151-93	Ring - Grip	3 29 1
71-8040	Plate - Throttle	5 23 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]