



DH 220 Lawn Tractor

Model No. 74591 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Seat Assembly	 4	Cutting Pan, Mower Housing Assembly	 27
Front Axle Assembly	 6	Cutting Pan and Bag on Demand Assembly	 28
Steering Assembly	 7	Belt Cover and Drive System Assembly	 29
Body and Hood Assembly	 8	Mower Lift Assembly	 31
Engine, Muffler and Fuel Tank Assembly	 9	Battery and Electrical Harness Assembly	 32
Operation - Brake and Bypass Assembly	 10	Electrical Switch Assembly No. 1	 33
Operation and Travel Pedal Assembly	 11	Electrical Switch Assembly No. 2	 34
Transmission Drive Assembly	 12	Electrical Switch Assembly No. 3	 35
Control Shaft Assembly Transmission Assembly No. 104-2889	 14	Cylinder Assembly Briggs and Stratton 441577-0120-E1	 36
Differential Gear Assembly Transmission Assembly No. 104-2889	 15	Head Assembly Briggs and Stratton 441577-0120-E1	 37
Final Pinion Assembly Transmission Assembly No. 114-3155	 16	Crankshaft Assembly Briggs and Stratton 441577-0120-E1	 38
Axle Shaft Assembly Transmission Assembly No. 114-3155	 17	Crankcase Assembly Briggs and Stratton 441577-0120-E1	 39
Brake Assembly Transmission Assembly No. 104-2889	 18	Oil Filter, Tube and Pump Assembly Briggs and Stratton 441577-0120-E1	 40
Fan Pulley Assembly Transmission Assembly No. 114-3155	 19	Carburetor Assembly Briggs and Stratton 441577-0120-E1	 41
Range Shift Assembly Transmission Assembly No. 114-3155	 20	Air Cleaner Assembly Briggs and Stratton 441577-0120-E1	 42
Center Case Assembly Transmission Assembly No. 114-3155	 21	Governor Assembly Briggs and Stratton 441577-0120-E1	 43
Pump Shaft Assembly Transmission Assembly No. 114-3155	 22	Flywheel Assembly Briggs and Stratton 441577-0120-E1	 44
Motor Shaft Assembly Transmission Assembly No. 114-3155	 23	Starter Assembly Briggs and Stratton 441577-0120-E1	 45
Transaxle Case Assembly Transmission Assembly No. 114-3155	 24	358 Engine and 1095 Valve Gasket Sets Briggs and Stratton 441577-0120-E1	 46
Grass Collector Assembly No. 106-5760	 25	977 Carburetor Gasket Set and 121	
Collector Assembly	 26	Carburetor Overhaul Kit Briggs and Stratton 441577-0120-E1	 47

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

Footnotes


- | | | | |
|---|--|---|---|
| ❶ | Not serviced separately | ❷ | Obtain from your local Briggs & Stratton dealer |
| ❸ | Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ | Included in Engine Gasket Set (Ref. No. 358) |
| ❺ | Included in Carburetor Gasket Set (Ref. No. 977) | ❻ | Included in Valve Gasket Set (Ref. No. 1095) |

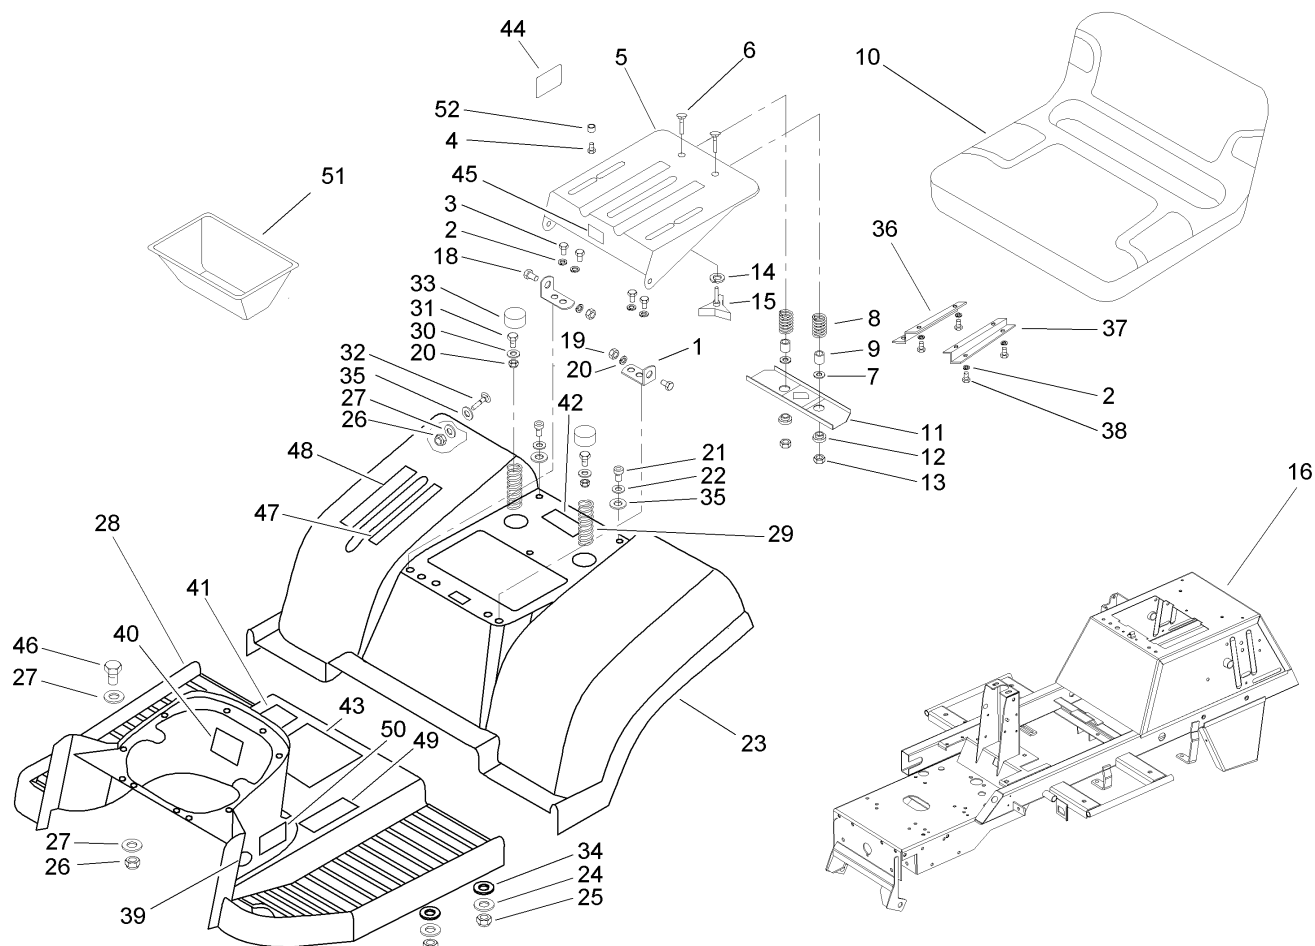

Frame and Seat Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	8	Washer-Lock, Spring
3	33114-025	10	Screw-HH
4	322-3	2	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2213	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	6	Washer-Plain
20	33024-00	8	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	106-5752	1	Fender
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock

Ref	Part No.	Qty.	Description
26	87-5140	6	Nut-Lock
27	104-2943	6	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	6	Washer-Plain
31	33114-020	2	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	2	Washer-Rubber
35	104-2952	2	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	4	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation

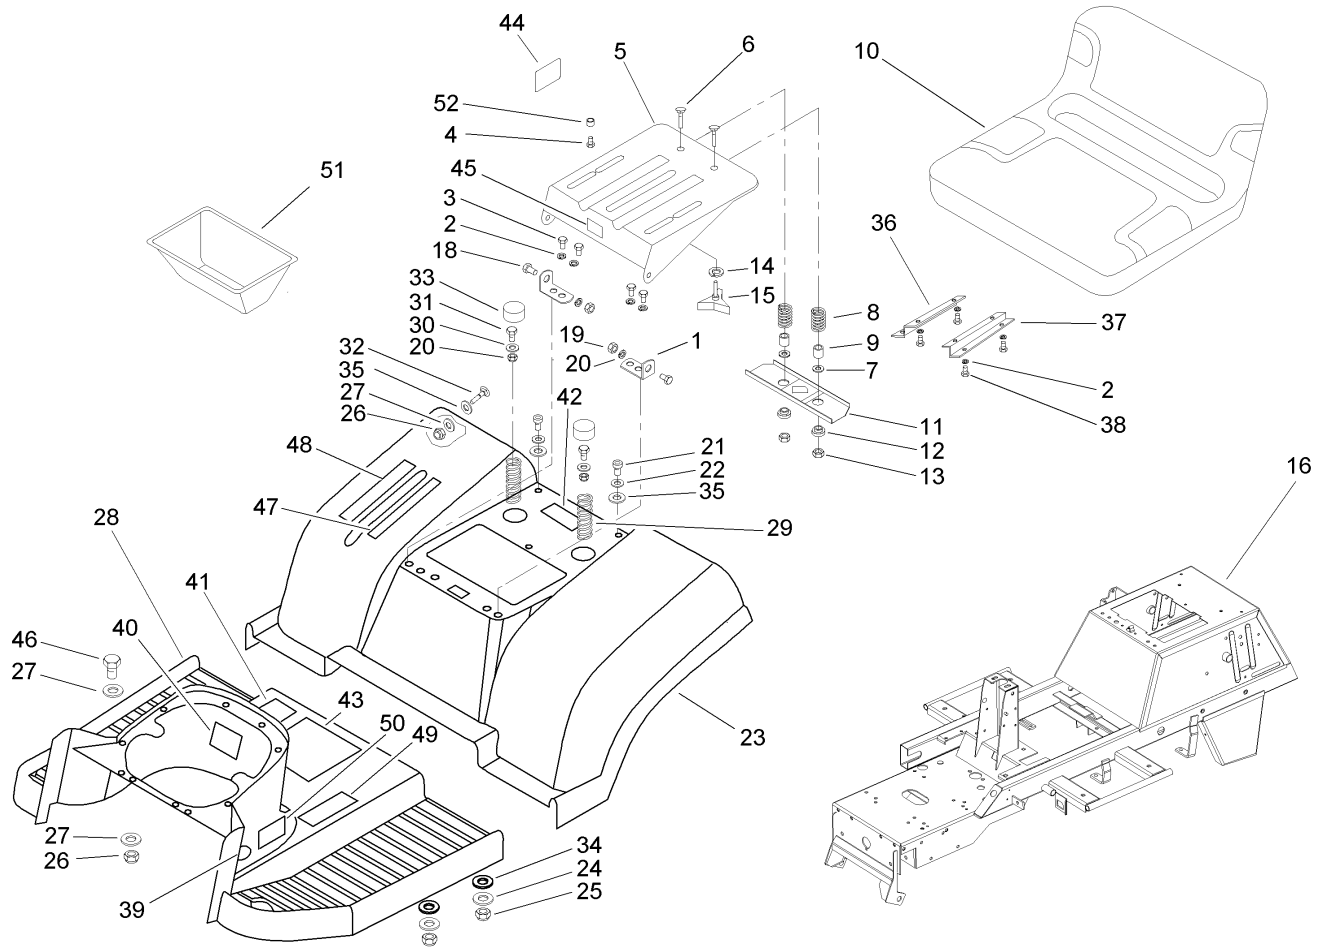 

Frame and Seat Assembly (continued)


Ref	Part No.	Qty.	Description
50	107-8976	2	Decal-Tower
51	106-5756	1	Box-Battery
52	107-8924	2	Shim-Seat

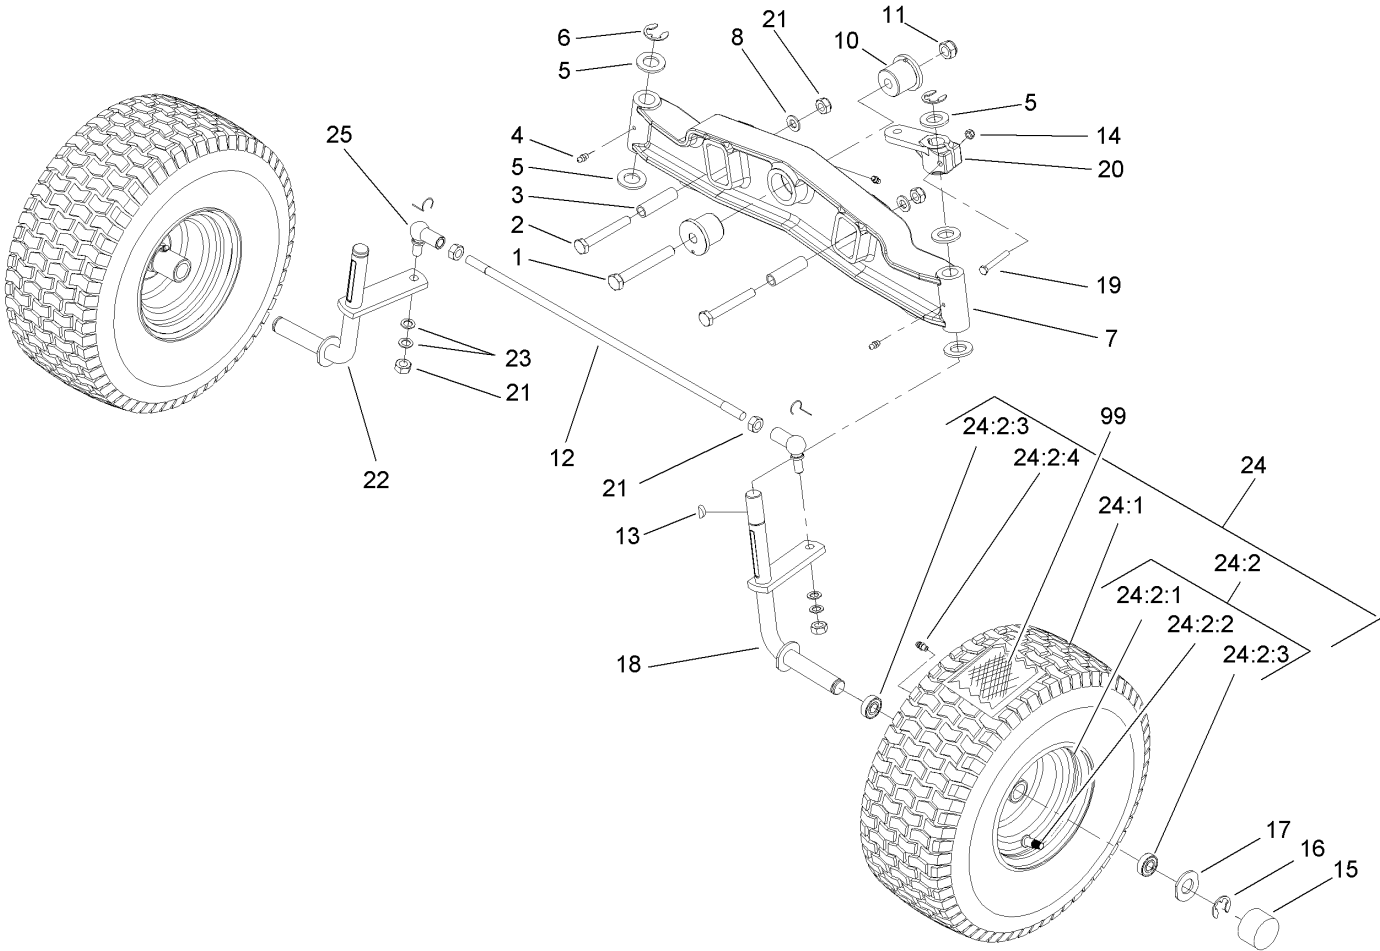 

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	5	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8773	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	110-9084	1	Spindle-RH
23	106-5757	4	Washer
24	110-9085	2	Wheel/Tire ASM
24:1	99-3696	1	Tire

Ref	Part No.	Qty.	Description
24:2	110-9086	1	Wheel ASM
24:2:1		1	Rim
24:2:2	106-8596	1	Valve-Tire
24:2:3	110513	2	Bearing-Wheel
24:2:4		1	Fitting-Grease
25	104-2876	2	Joint-Ball, Angle
99	112819	1	Tube-Inner

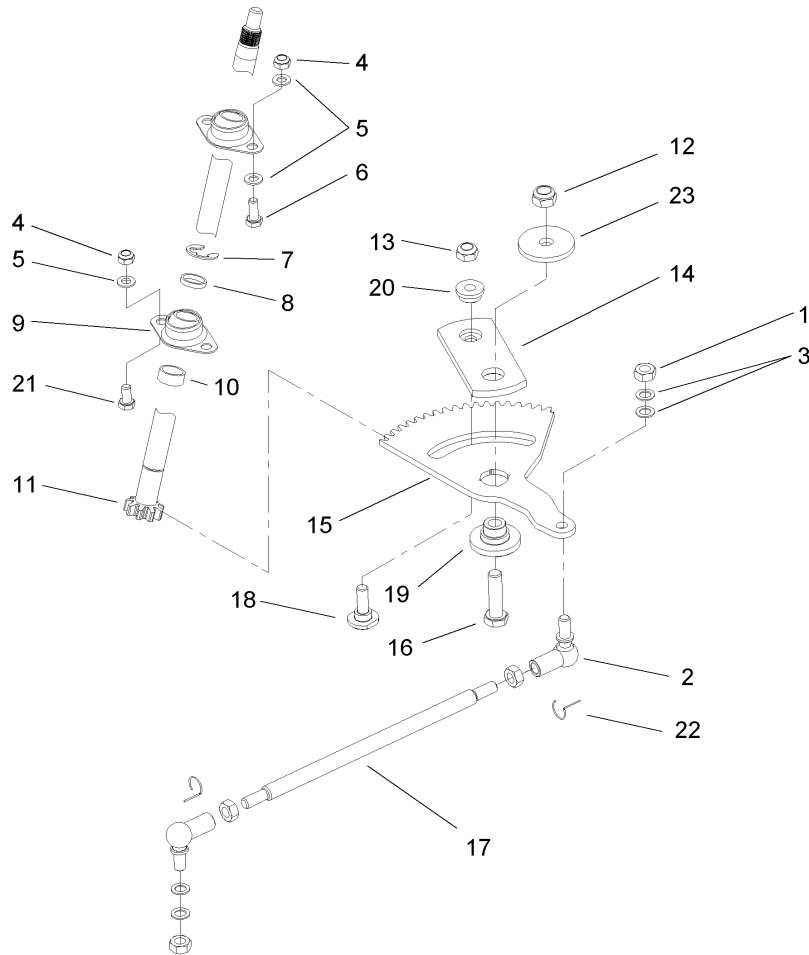 

Steering Assembly


Ref	Part No.	Qty.	Description				
1	33025-00	4	Nut-Lock				
2	104-2876	2	Joint-Ball, Angle				
3	106-5757	4	Washer				
4	33024-00	4	Nut-Lock				
5	33094-00	6	Washer-Plain				
6	33114-020	2	Screw-HH				
7	104-2891	1	Clip-Spring				
8	104-2877	1	Spacer-Upper				
9	104-2878	2	Bearing-Spherical				
10	104-2879	1	Spacer-Lower				
11	106-5773	1	Shaft-Steering				
12	33026-00	1	Nut-Lock				
13	33025-00	1	Nut-Lock				
14	105-1238	1	Plate-Steering				
15	104-2883	1	Gear-Sector				
16	104-2910	1	Screw-Hex				
17	104-2886	1	Link-Drag				
18	105-1239	1	Bolt-Shoulder				
19	105-1240	1	Pivot-Steering				
20	105-1241	1	Bushing				
21	33114-016	2	Screw-HH				
23	108-8892	1	Washer				

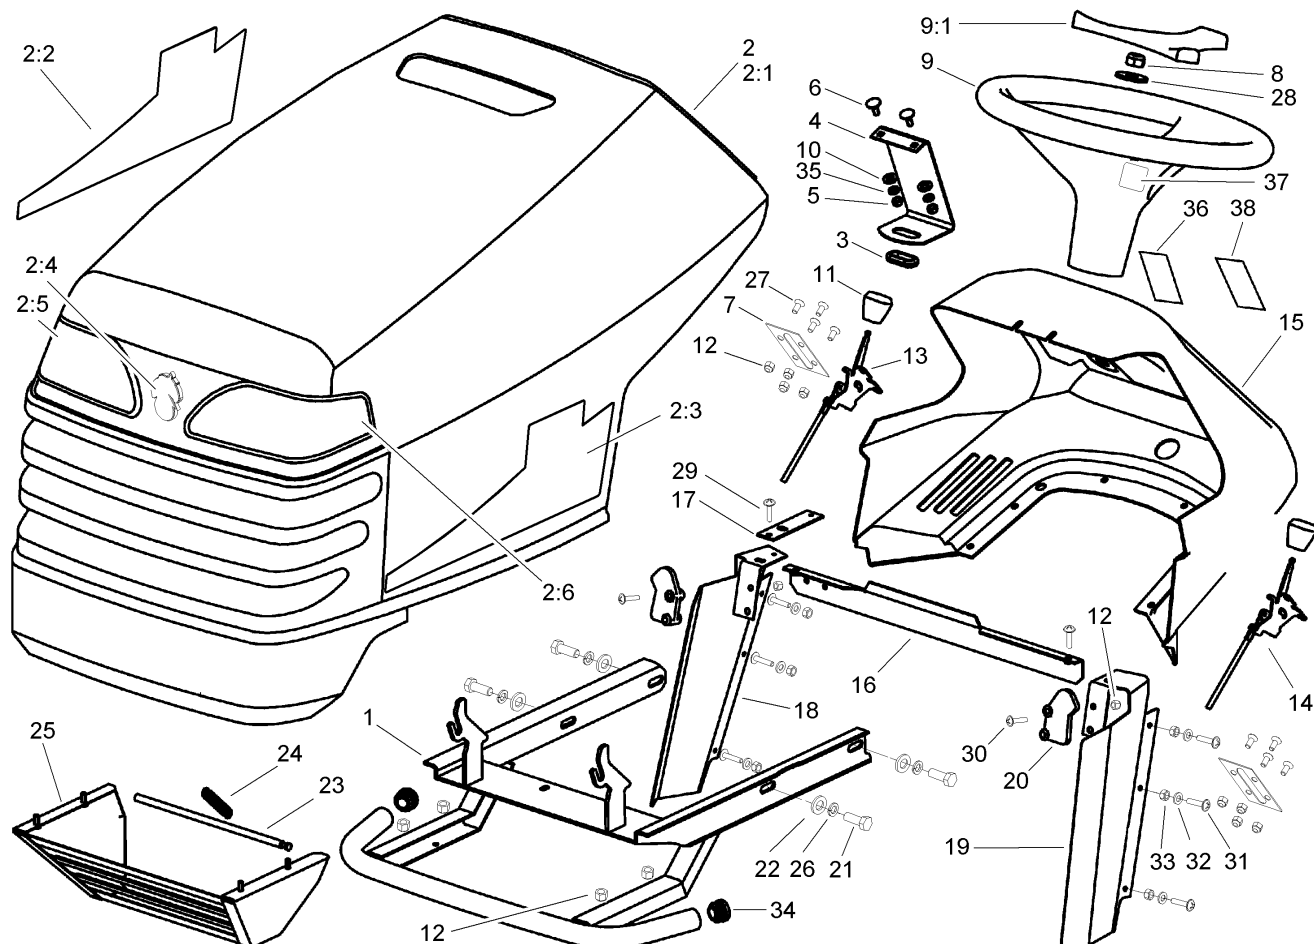 

Body and Hood Assembly

Ref	Part No.	Qty.	Description
2	107-8990	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	104-2959	1	Bushing
4	104-2960	1	Holder-Tank, Fuel
5	33023-00	2	Nut-Lock
6	104-2961	2	Screw
7	104-2962	2	Brace
8	33026-00	1	Nut-Lock
9	98-1472	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
10	33094-00	2	Washer-Plain
11	66-0120	2	Knob
12	87-5140	18	Nut-Lock
13	92-6784	1	Control-Throttle, Twin
14	92-6783	1	Control-Choke, Twin
15	104-2968	1	Panel-Dash
16	104-2970	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left


Ref	Part No.	Qty.	Description
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	8	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
30	104-2981	4	Screw
31	107-8918	6	Screw
32	104-3175	6	Washer
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
35	43-5930	2	Washer-Spring
36	104-3234	1	Decal
37	98-1459	1	Decal
38	104-3233	1	Decal-Choke/PTO

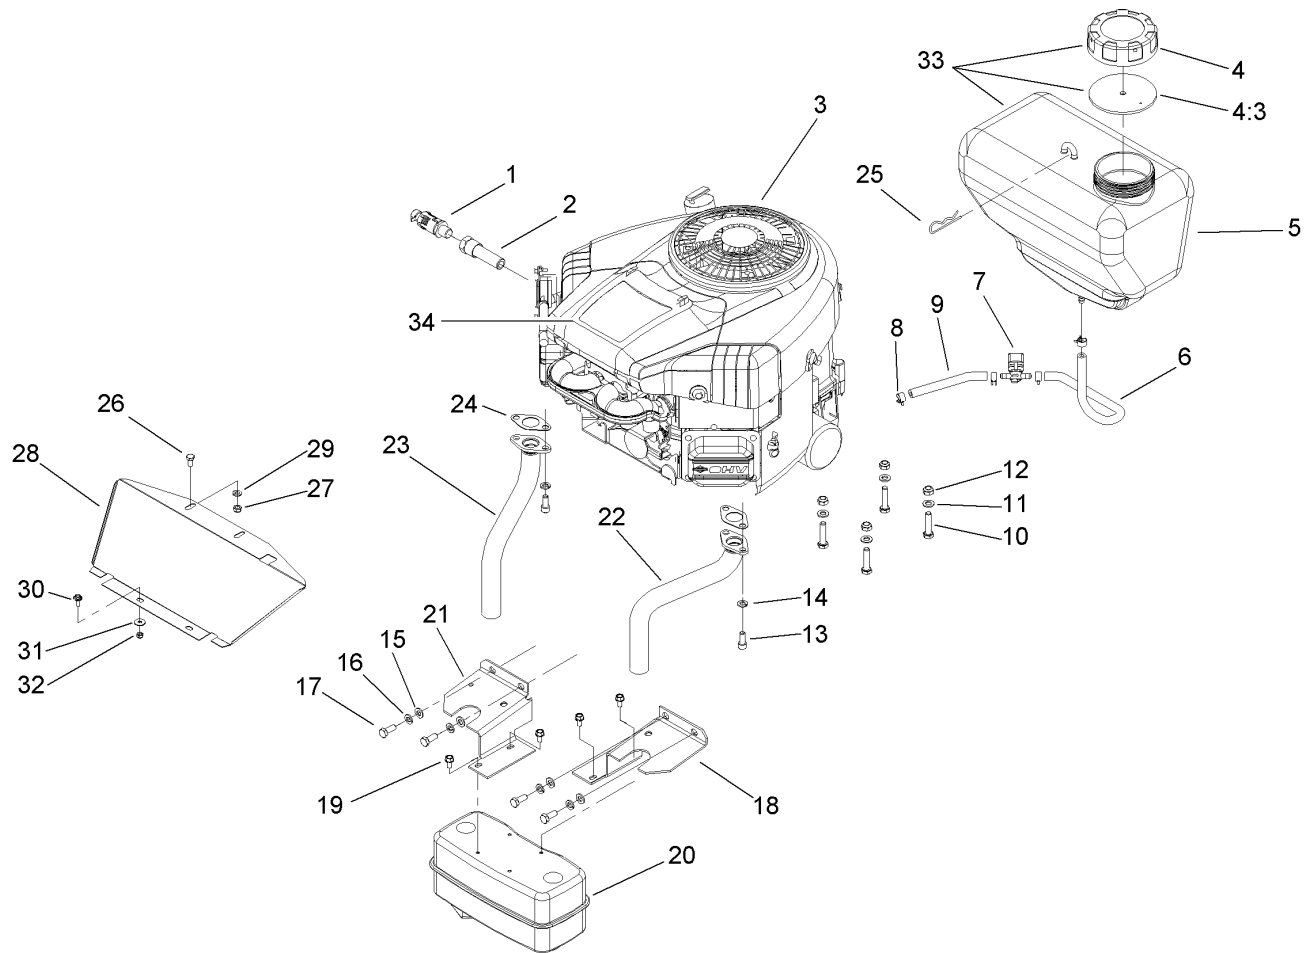 

Engine, Muffler and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	104-3208	1	Valve-Oil Drain
2	106-5764	1	Coupler-Oil Drain
1 2 3		1	Engine- Briggs And Stratton, 441577-0120-E1
4	88-3980	1	Gas Cap ASM
4:3	88-4010	1	Gasket-Cap, Gas
5	104-3057	1	Tank-Fuel
6	106-0890	1	Line-Fuel
7	104-3224	1	Valve-Tank, Fuel
8	104-3212	4	Clamp-Line, Fuel
9	106-0891	1	Line-Fuel
10	33114-035	4	Screw-HH
11	33094-00	4	Washer-Plain
12	33024-00	4	Nut-Lock
13	104-2927	4	Washer-Spring
14	322-3	4	Screw-HH
15	33094-00	4	Washer-Plain
16	104-2927	4	Washer-Spring
17	33114-020	4	Screw-HH
18	104-3214	1	Guard-Muffler, LH
19	106-5763	4	Screw
20	104-3225	1	Muffler
21	104-3215	1	Guard-Muffler, RH
22	104-3216	1	Tube-Exhaust, LH


Ref	Part No.	Qty.	Description
23	104-3217	1	Tube-Exhaust, RH
24	104-3226	2	Gasket-Exhaust
25	104-3144	1	Pin-Hair
26	33113-012	2	Screw-HH
27	33023-00	2	Nut-Lock
28	104-3219	1	Shield-Heat
29	33093-00	2	Washer-Flat
30	104-2980	2	Screw
31	104-2943	2	Washer-Flat
32	87-5140	2	Nut-Lock
33	104-3220	1	Tank-Fuel W/Cap
34	110-6516	1	Decal

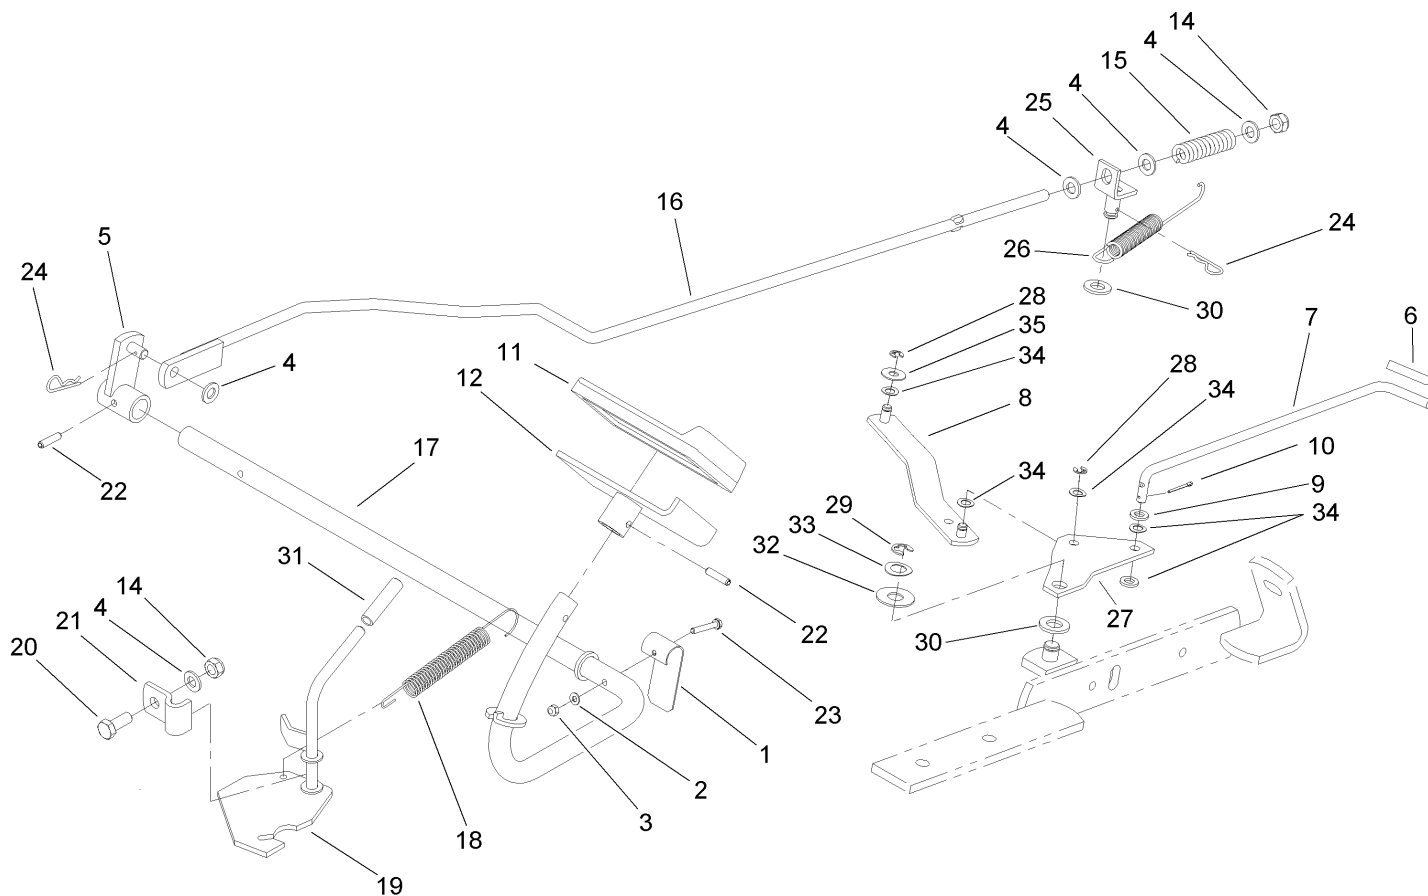 

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	104-3324	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-2998	1	Pad-Pedal
12	104-2999	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3246	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

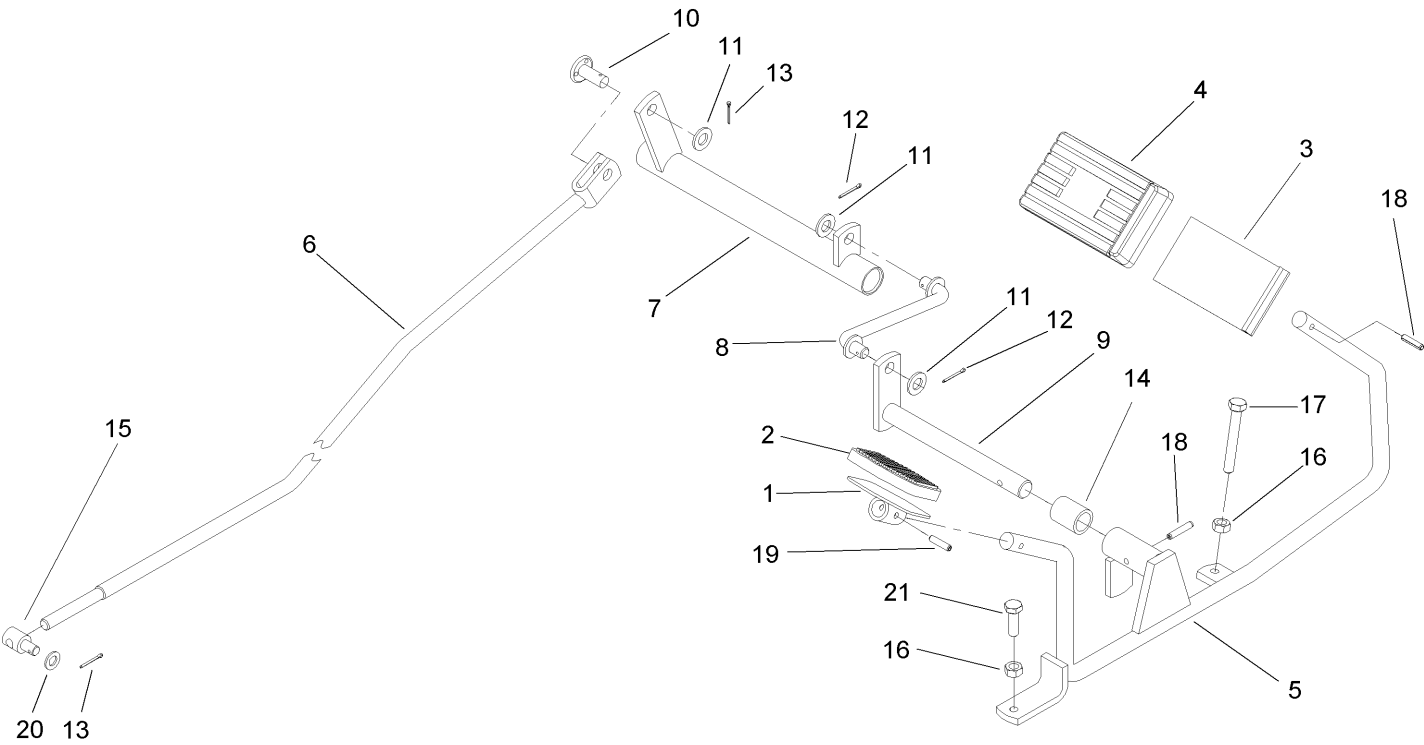 

Operation and Travel Pedal Assembly


Ref	Part No.	Qty.	Description				
1	104-3017	1	Pedal-Rear, Travel				
2	104-3018	1	Pad-Pedal				
3	104-3019	1	Pedal-Travel, Front				
4	104-3020	1	Pad-Pedal, Front				
5	104-3021	1	Pad-Travel				
6	104-3022	1	Rod-Tie				
7	104-3023	1	Shaft-Diagonal				
8	104-3024	1	Link-Formed				
9	104-3025	1	Shaft-Diagonal				
10	104-3026	1	Pin				
11	33095-00	3	Washer-Flat				
12	104-3016	2	Pin-Cotter				
13	104-3027	2	Pin-Cotter				
14	104-3028	1	Spacer				
15	104-3029	1	Pin				
16	33014-00	2	Nut-Hex				
17	33114-060	1	Screw-HH				
18	104-3008	2	Pin-Spring				
19	104-3030	1	Pin-Spring				
20	104-3031	1	Washer				
21	33114-025	1	Screw-HH				

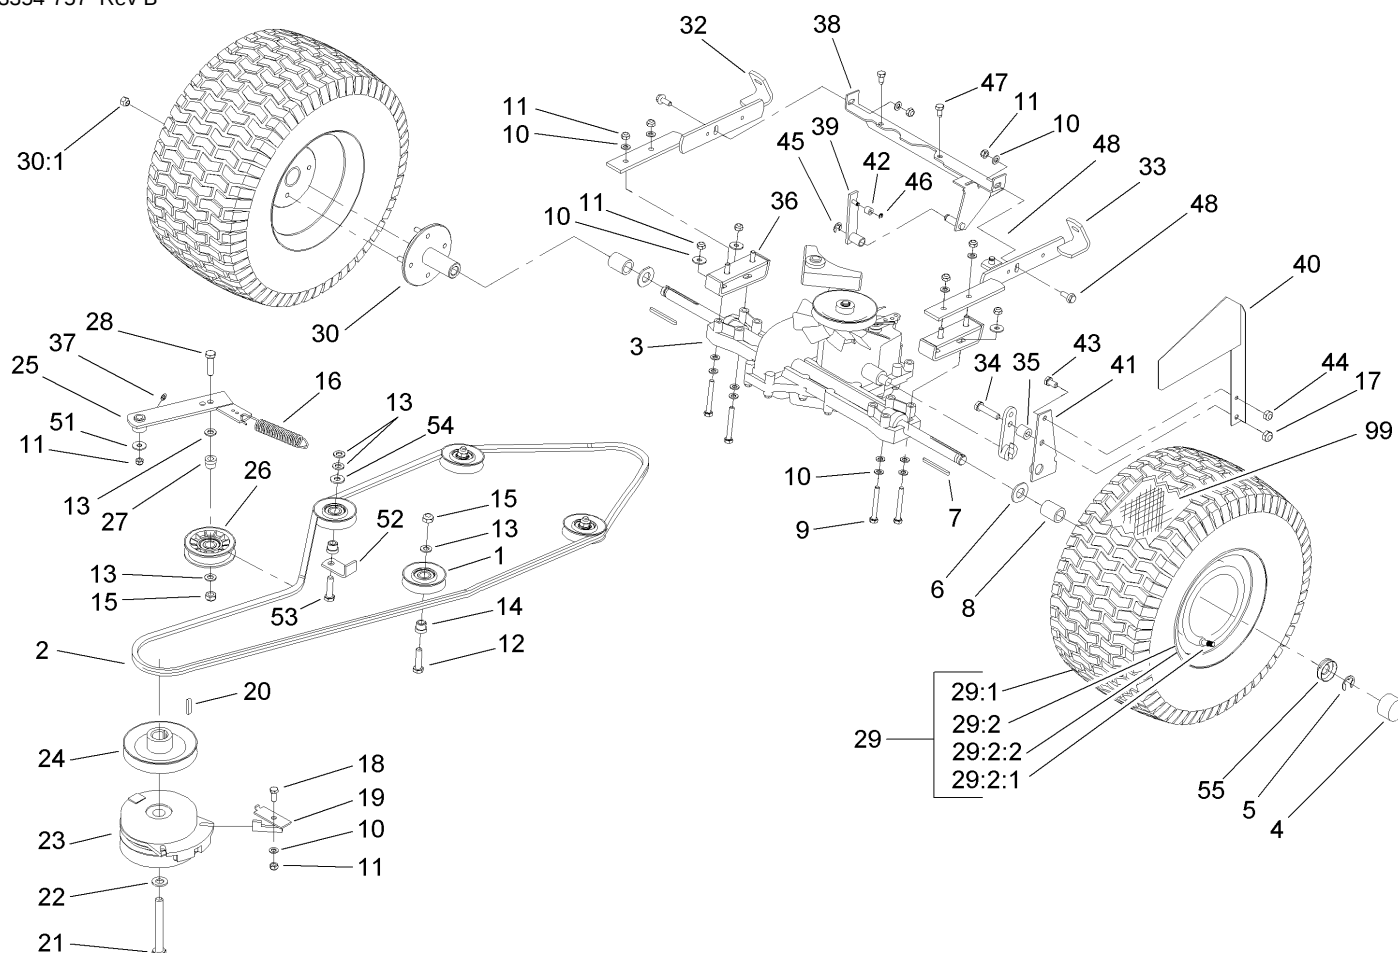 

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	104-2889	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	10	Washer-Plain
11	33024-00	8	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
40	104-3325	1	Arm-Control, Cruise
41	104-3326	1	Tenon
42	104-3329	1	Roller
43	33114-010	1	Screw-HH
45	104-3341	1	Stirrup

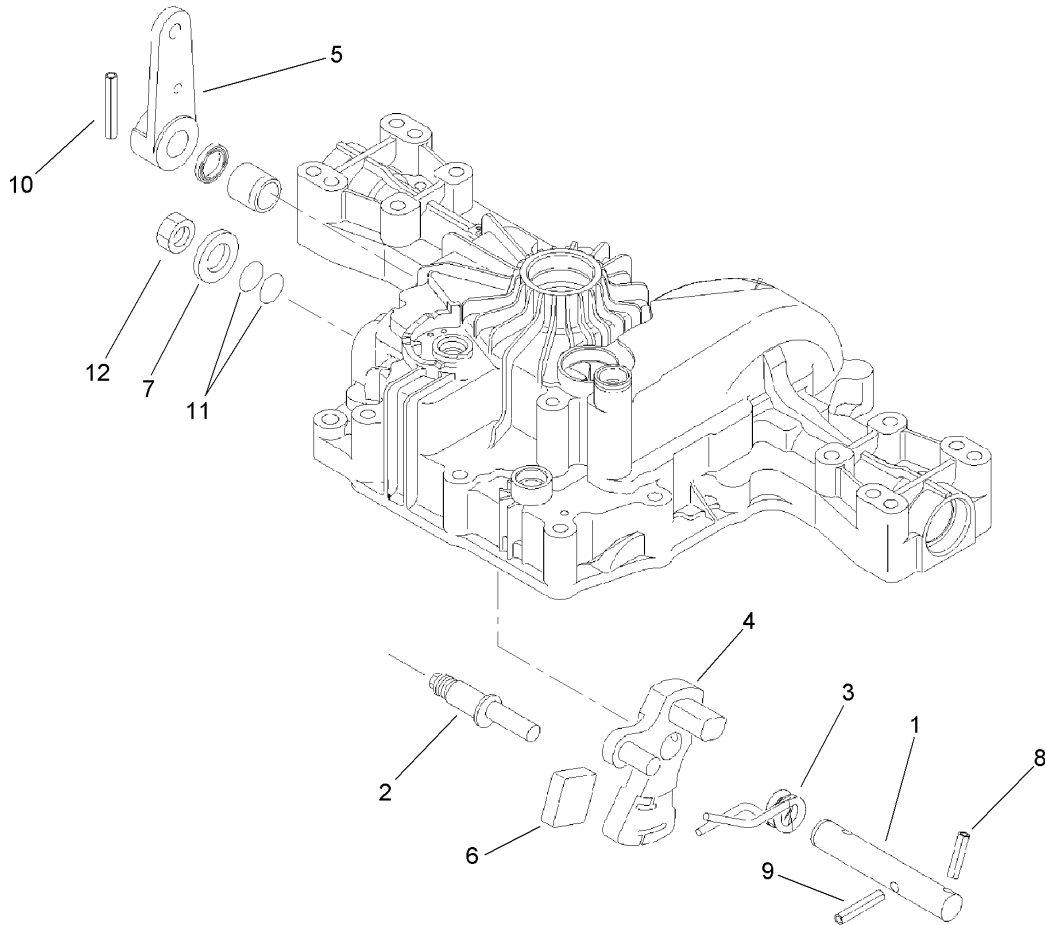

Control Shaft Assembly
Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description				
1	114-3181	1	Shaft-Control				
2	104-3292	1	Fulcrum-Eccentricity				
3	104-3293	1	Spring-Torsion				
4	114-3180	1	Arm-Control				
5	104-3342	1	Arm-Transaxle				
6	104-3296	1	Plate-Jerky				
7	93-0417	1	Washer				
8	114-3182	1	Pin-Cotter				
9	104-3297	1	Pin				
10	93-0411	1	Pin-Roll				
11	104-3298	2	Packing				
12	93-0420	1	Nut				

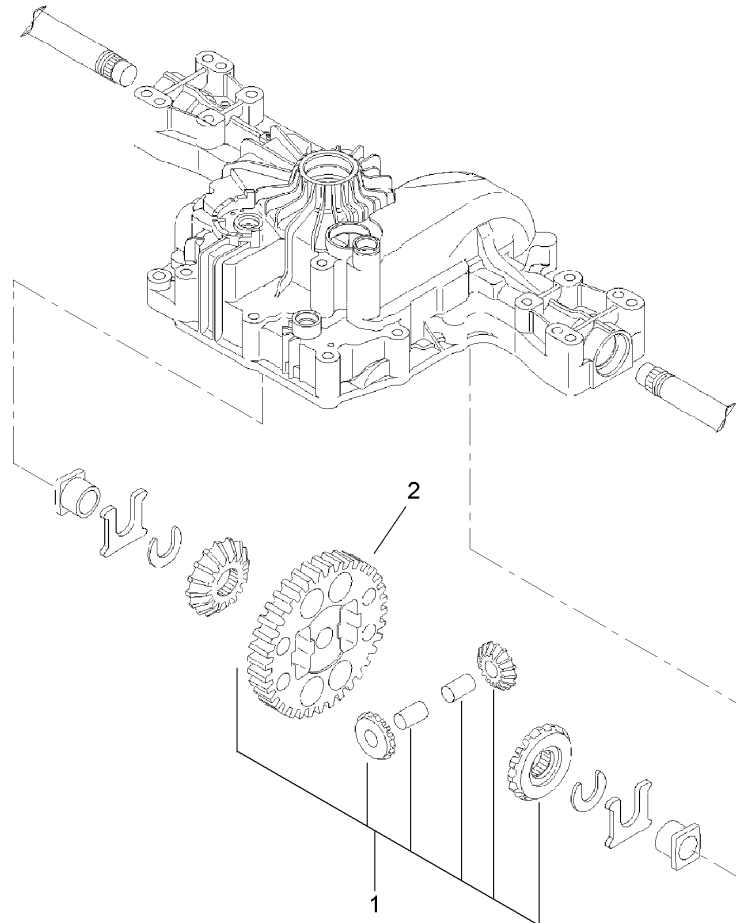

Differential Gear Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

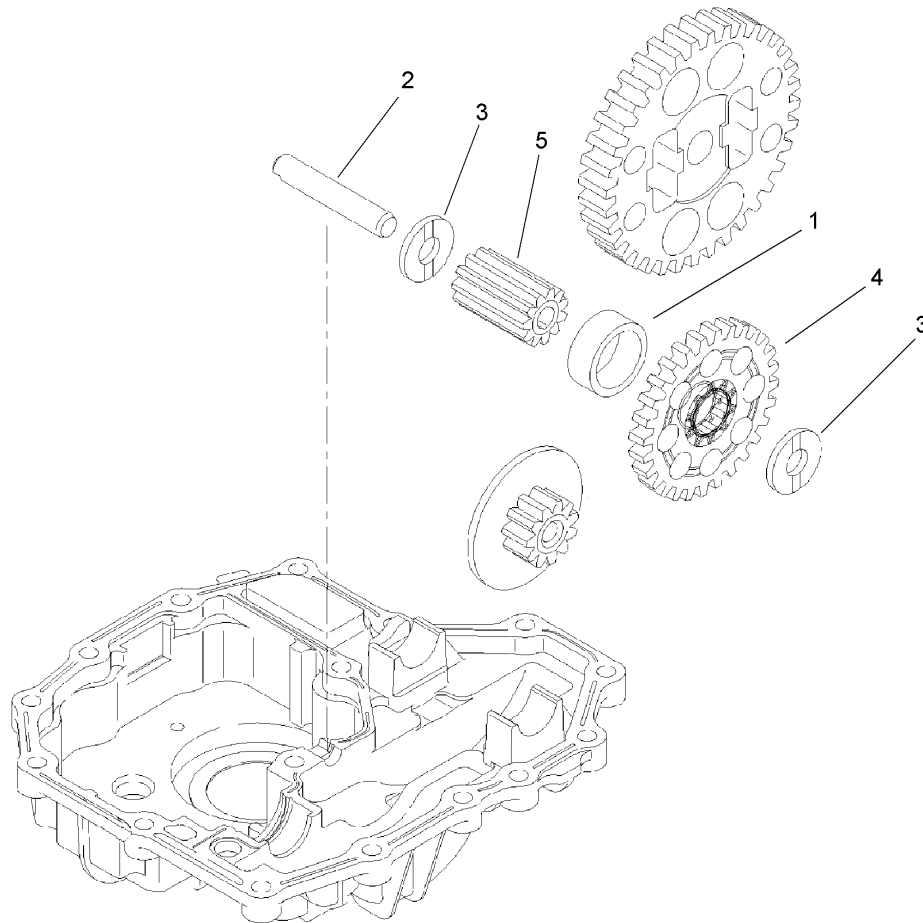 

Final Pinion Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

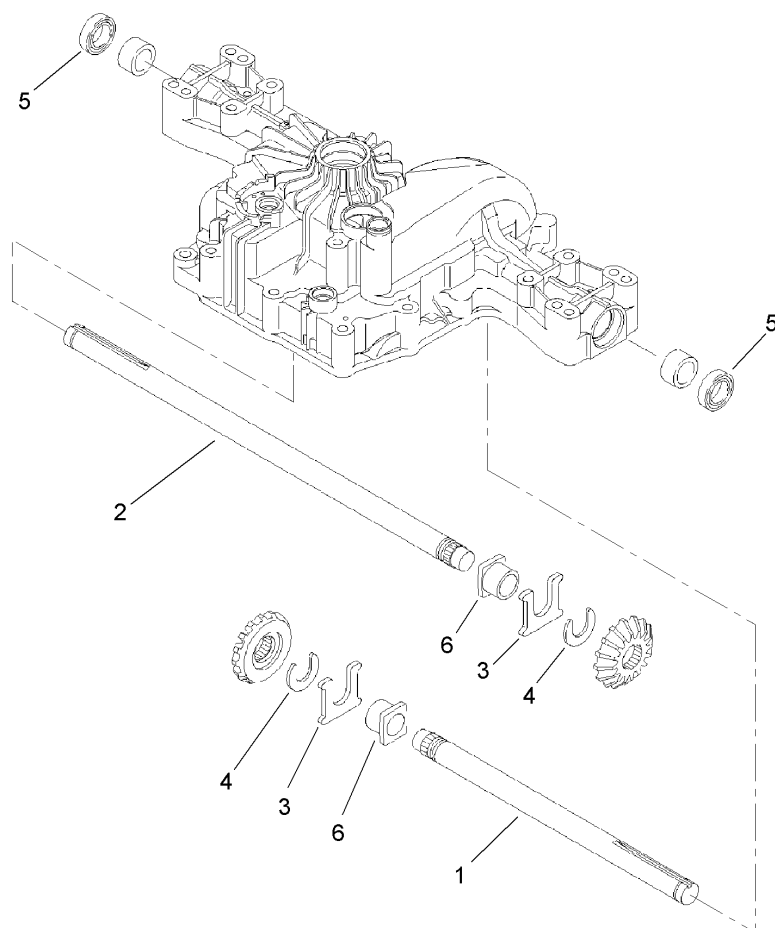 

Axle Shaft Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

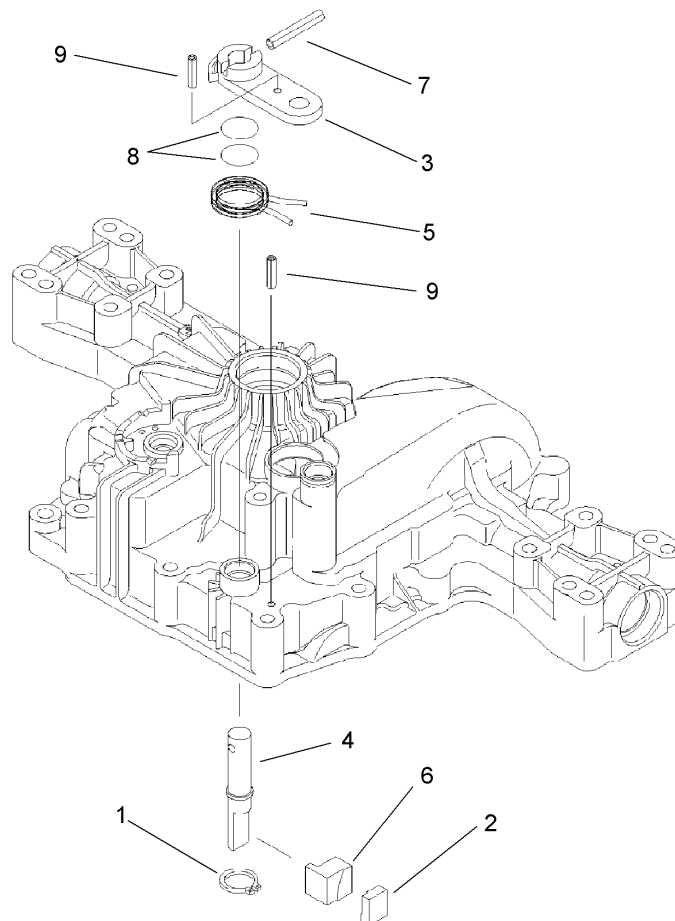

Brake Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	92-0786	2	O-Ring
9	104-3319	2	Pin

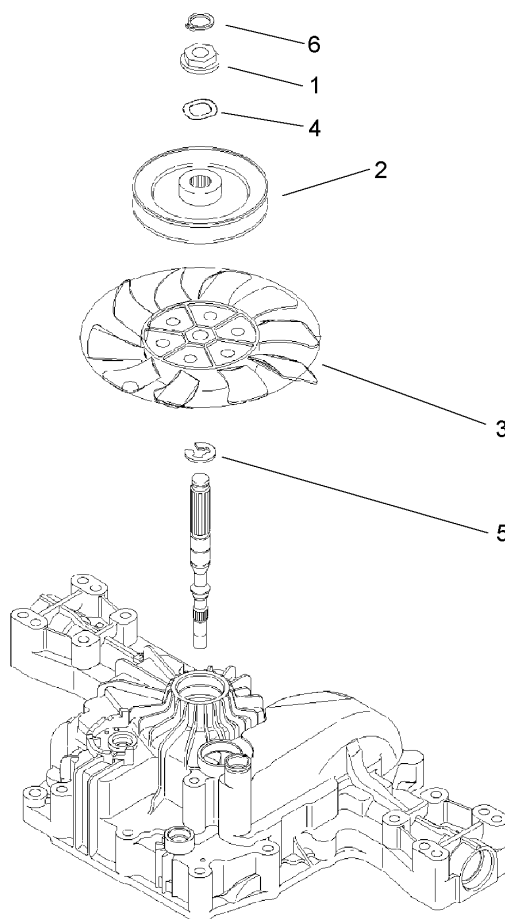

Fan Pulley Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3320	1	Collar-Spline				
2	104-3197	1	Pulley-Transmission				
3	104-3199	1	Fan- Transmission				
4	104-3321	1	Washer-Lock				
5	93-0387	1	E-Ring				
6	104-3198	1	E-Ring				

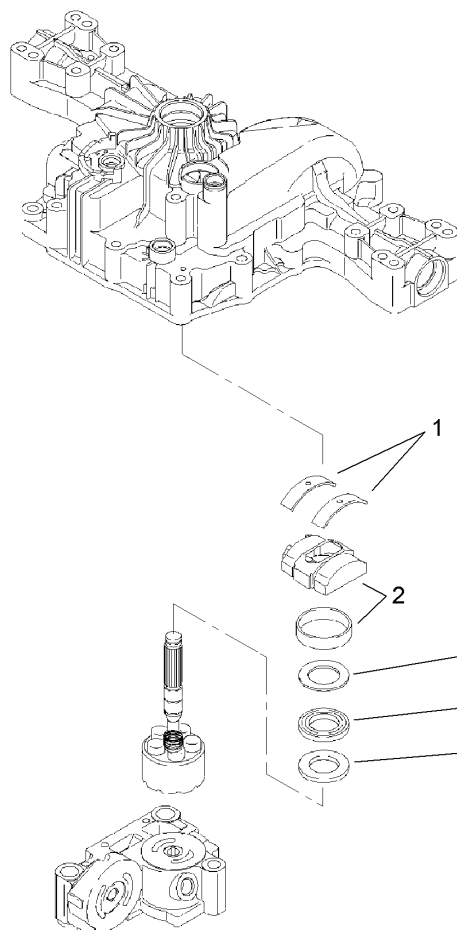 

Range Shift Assembly


Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

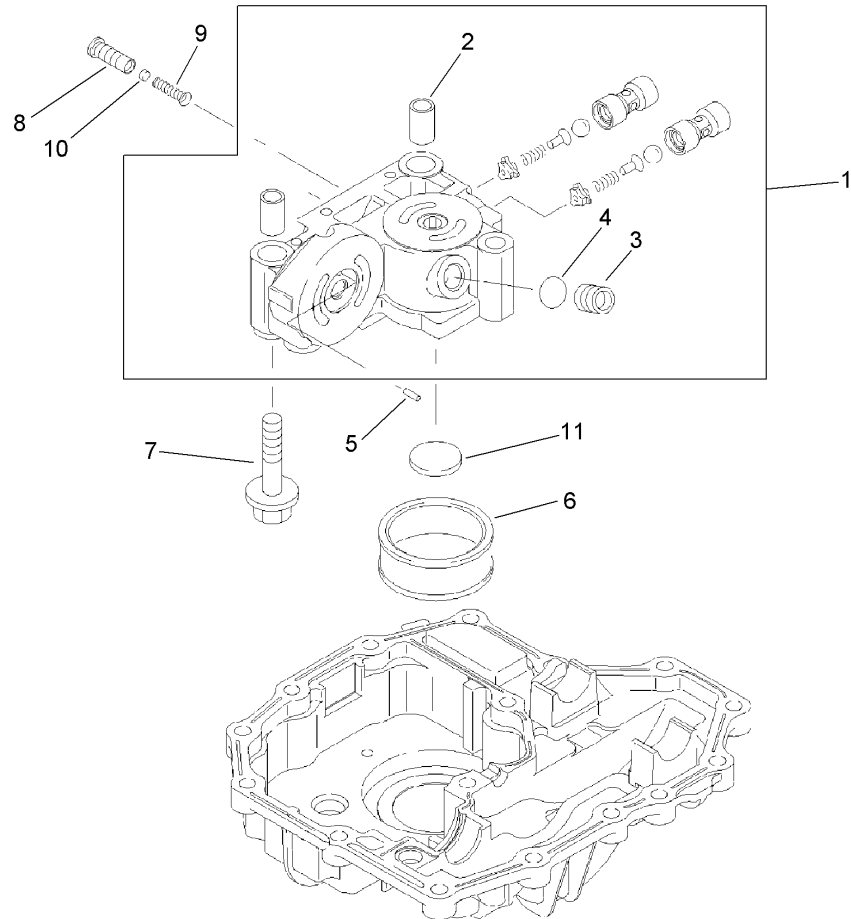 


Center Case Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description				
1	104-3267	1	Case-Center				
2	104-3268	2	Pin-Knock				
3	104-3269	1	Plug				
4	93-0419	1	Packing				
5	104-3270	1	Pin				
6	104-3271	1	Filter				
7	104-3272	3	Bolt				
8	104-3273	2	Valve				
9	104-3274	2	Spring				
10	104-3275	2	Filter				
11	104-3257	1	Magnet				

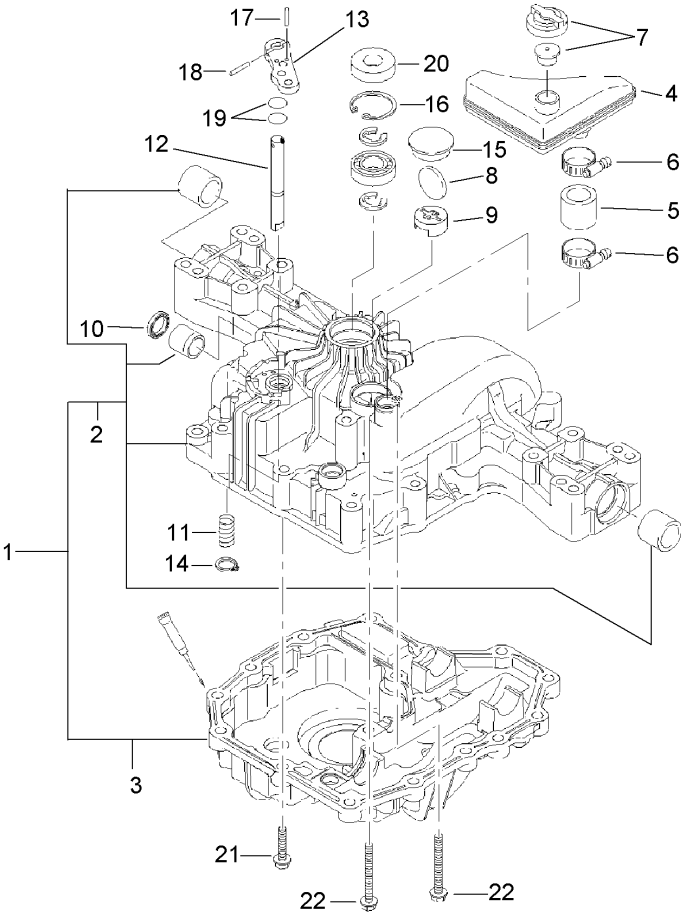

Transaxle Case Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3251	1	Transaxle Case Set				
2	104-3252	1	Housing-Upper				
3	104-3253	1	Housing-Lower				
4	104-2914	1	Tank-Reservoir, With Cap				
5	104-3254	1	Tube				
6	104-3255	2	Clamp-Miniature				
7	104-3256	1	Valve-Vent, 15				
8	104-3257	1	Magnet				
9	104-3258	1	Holder-Magnet				
10	104-3259	1	Seal-Oil				
11	93-0396	1	Spring				
12	104-3260	1	Shaft-Bypass				
13	104-3261	1	Lever-Bypass				
14	104-3262	1	Ring				
15	104-3263	1	Plug-Bore				
16	93-0360	1	Ring				
17	104-3264	1	Pin				
18	104-3265	1	Pin				
19	93-0419	2	Packing				
20	93-0361	1	Seal				
21	93-0363	14	Screw-TAP				
22	104-3266	2	Screw-TAP				

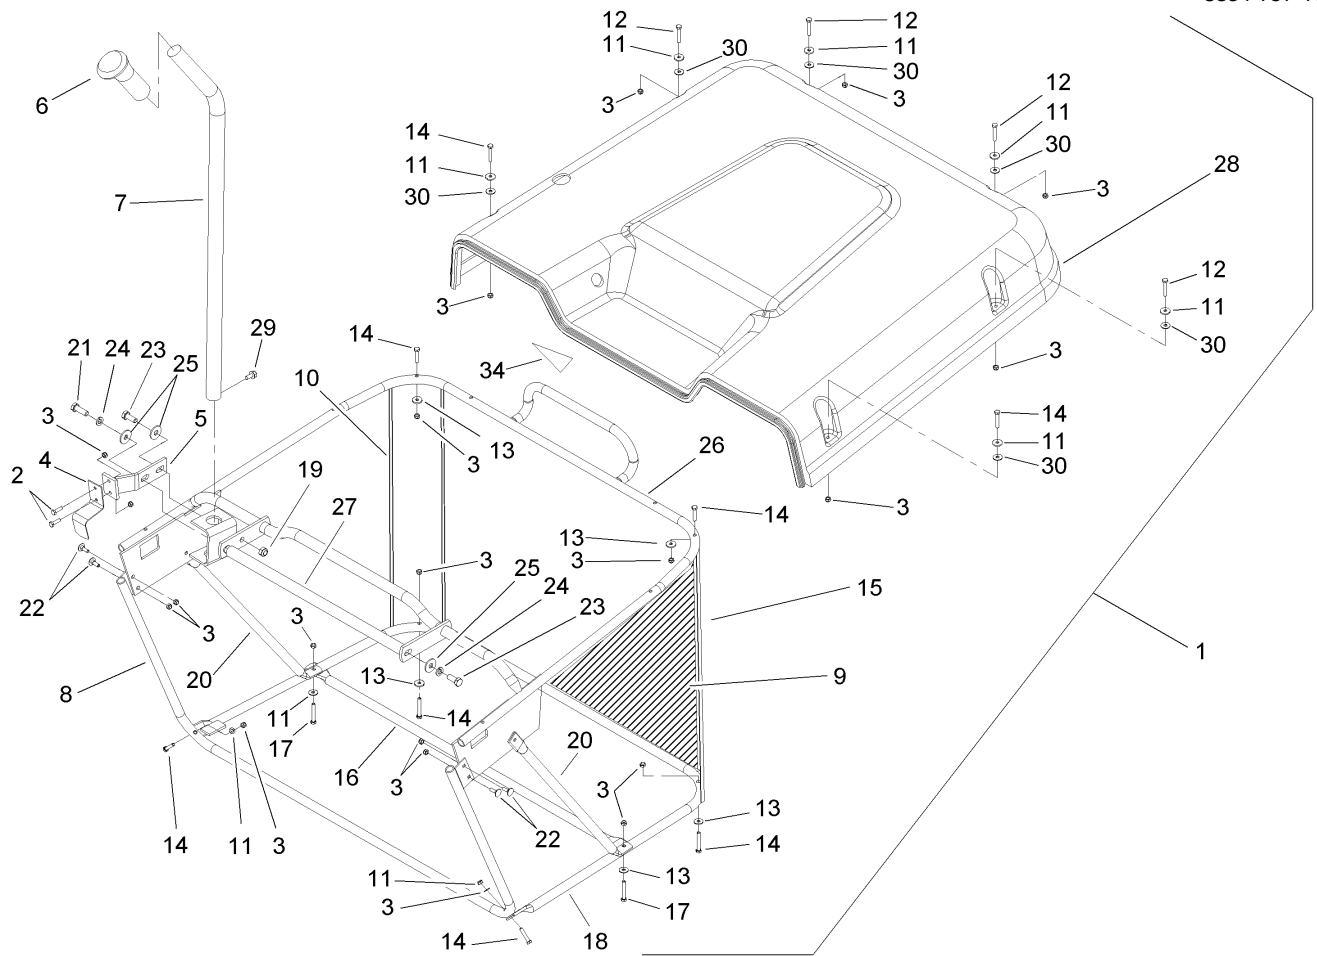 

Grass Collector Assembly No. 106-5760

Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring


Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

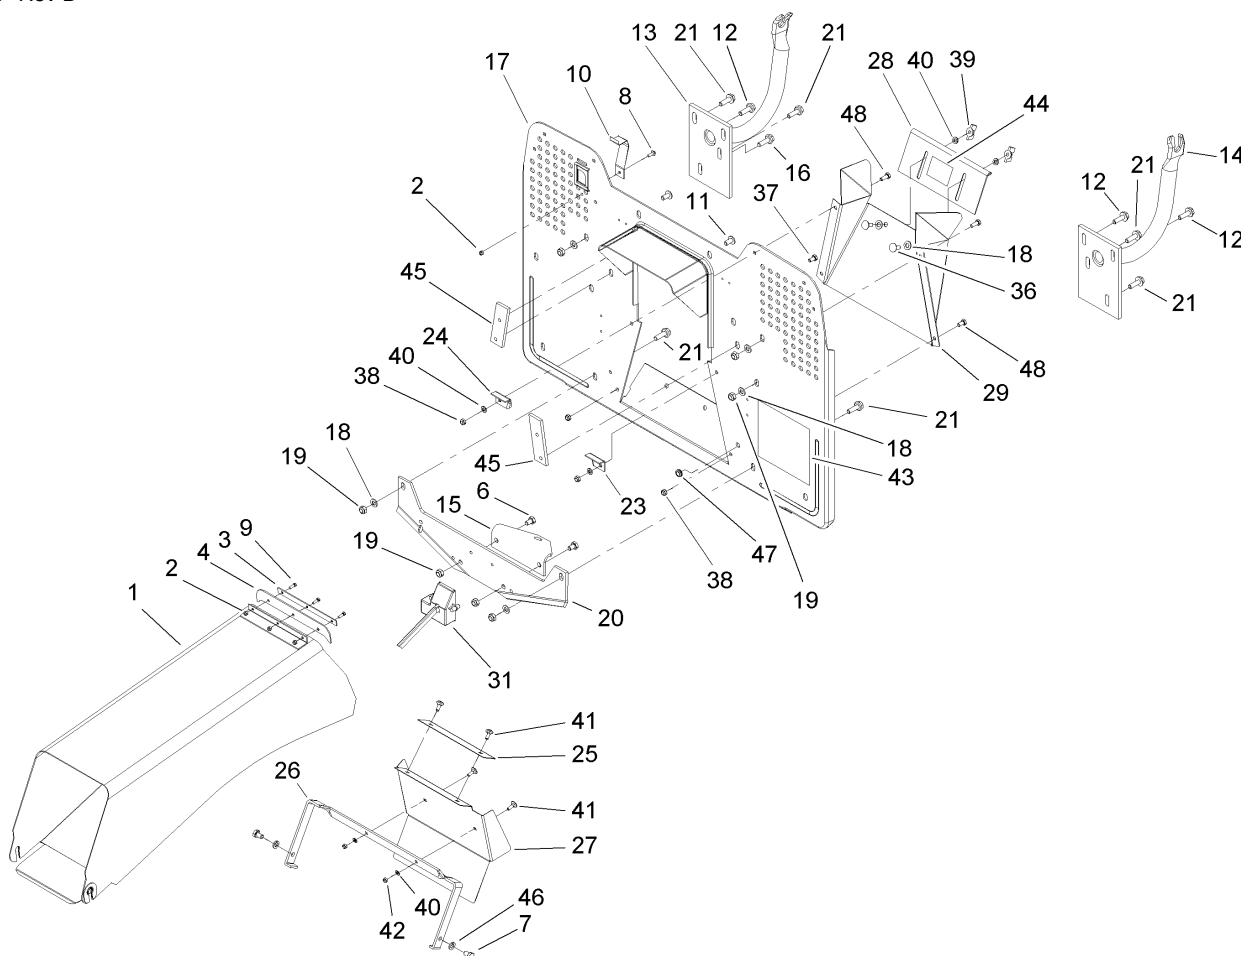 

Collector Assembly

Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
16	104-3065	6	Screw-Hex
17	104-3066	1	Collector Plate ASM
18	33095-00	9	Washer-Flat
19	33024-00	9	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective


Ref	Part No.	Qty.	Description
27	104-3070	1	Shield-Protective
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	2	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	4	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH

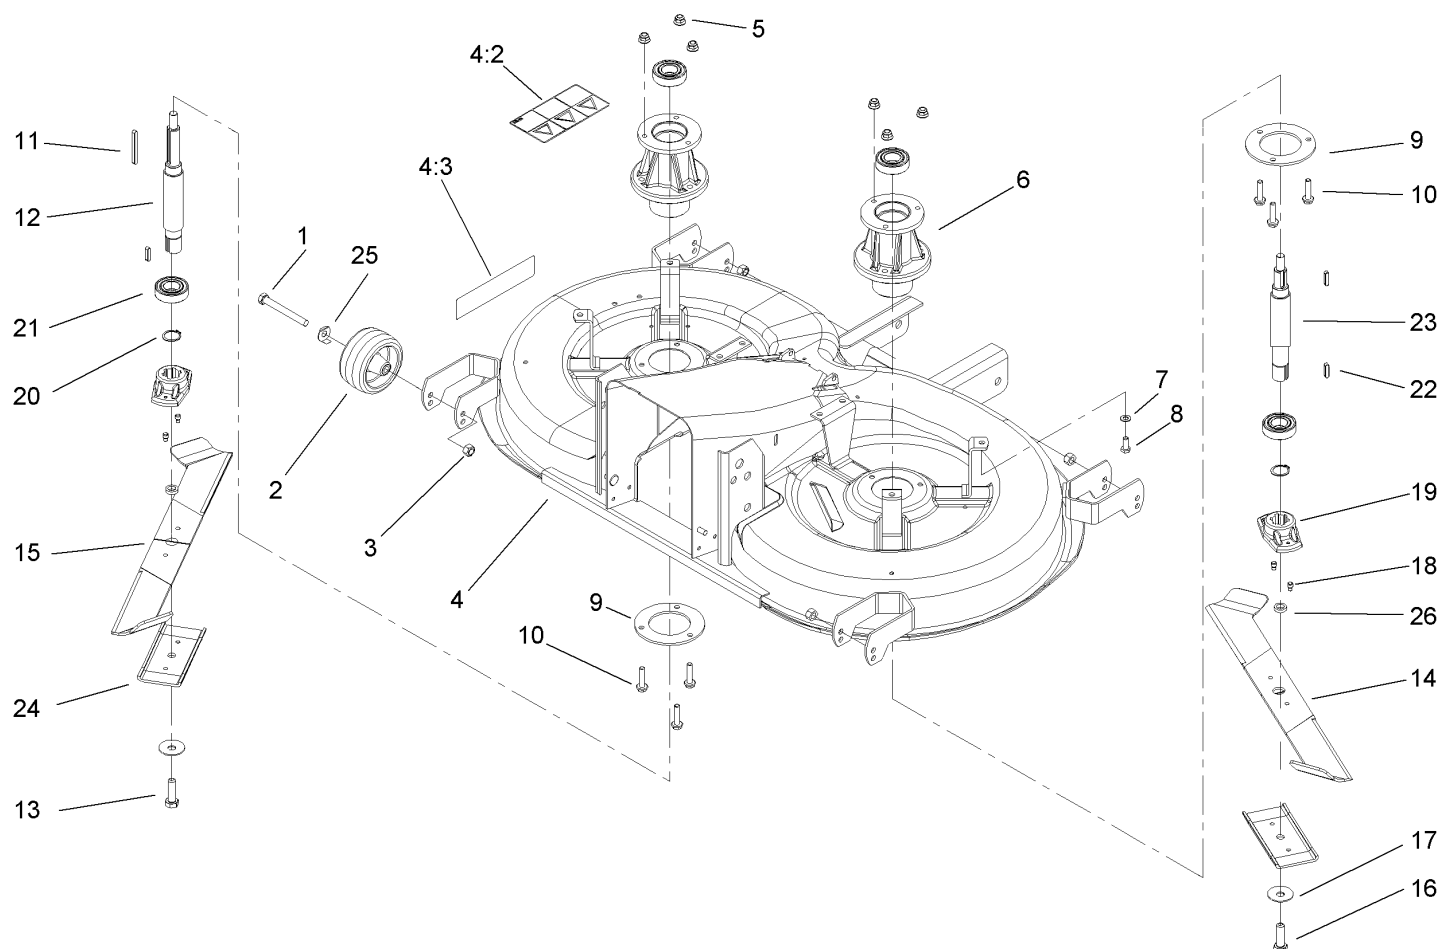 

Cutting Pan, Mower Housing Assembly


Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	110-9071	1	Deck ASM
4:2	93-7824	2	Decal-Danger
4:3	106-8563	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	8	Washer-Plain
8	33114-020	8	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square

Ref	Part No.	Qty.	Description
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	106-5767	4	Washer
26	106-6530	2	Spacer

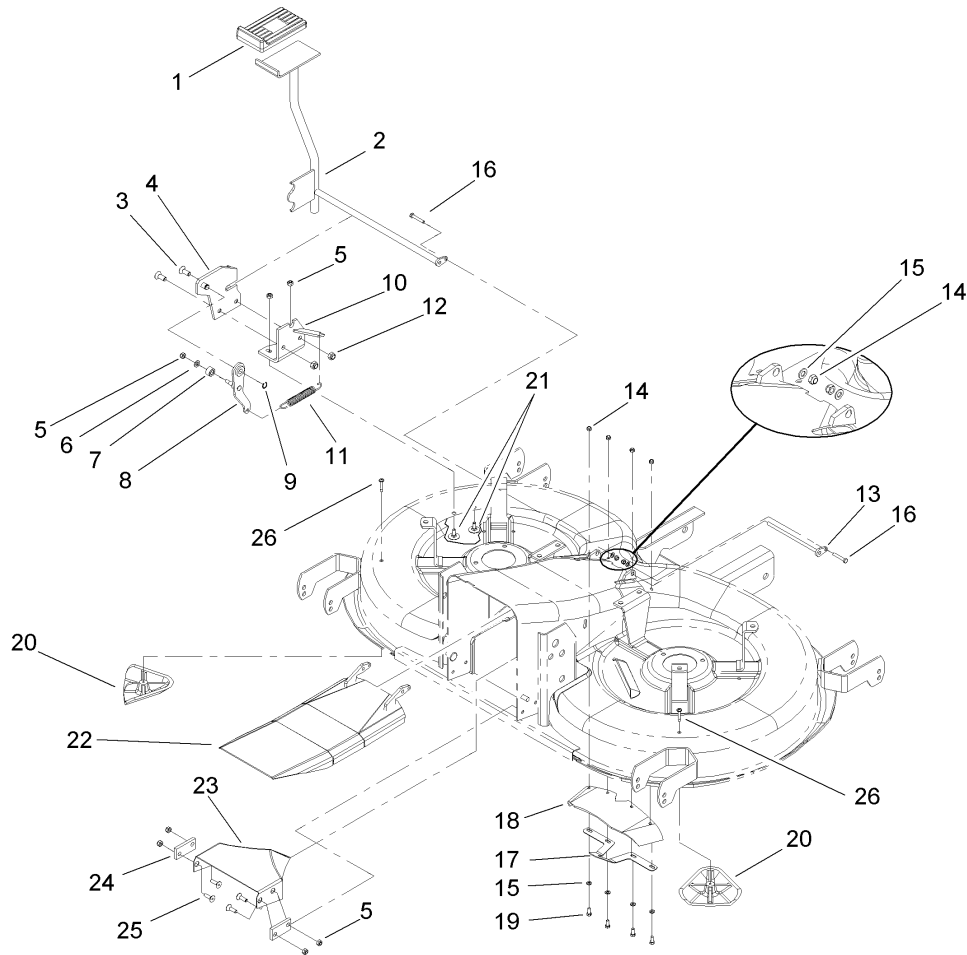

Cutting Pan and Bag on Demand Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot	25	106-8574	4	Screw
2	106-8582	1	Lever-Foot	26	104-1451	2	Screw-TAP, PPH
3	100-8159	2	Screw-HSFH				
4	106-8578	1	Plate-Stop				
5	33023-00	7	Nut-Lock				
6	33093-00	1	Washer-Flat				
7	106-8581	1	Roller				
8	106-8579	1	Lever-Spring				
9	106-8592	1	Ring-Locking				
10	106-8577	1	Bracket-Mounting				
11	106-8580	1	Spring				
12	48-9510	2	Nut				
13	106-8585	1	Rod-Door, Mulch				
14	87-5140	6	Nut-Lock				
15	52-6430	6	Washer				
16	87-5150	2	Bolt				
17	106-8567	2	Guide				
18	106-8586	1	Gasket-Door, Mulch				
19	106-8575	4	Screw-HH				
20	106-8587	1	Kicker				
21	33123-016	2	Screw-CARR				
22	107-8968	1	Door-Mulch				
23	106-8573	1	Baffle-Center				
24	106-8572	2	Plate-Baffel, Center				

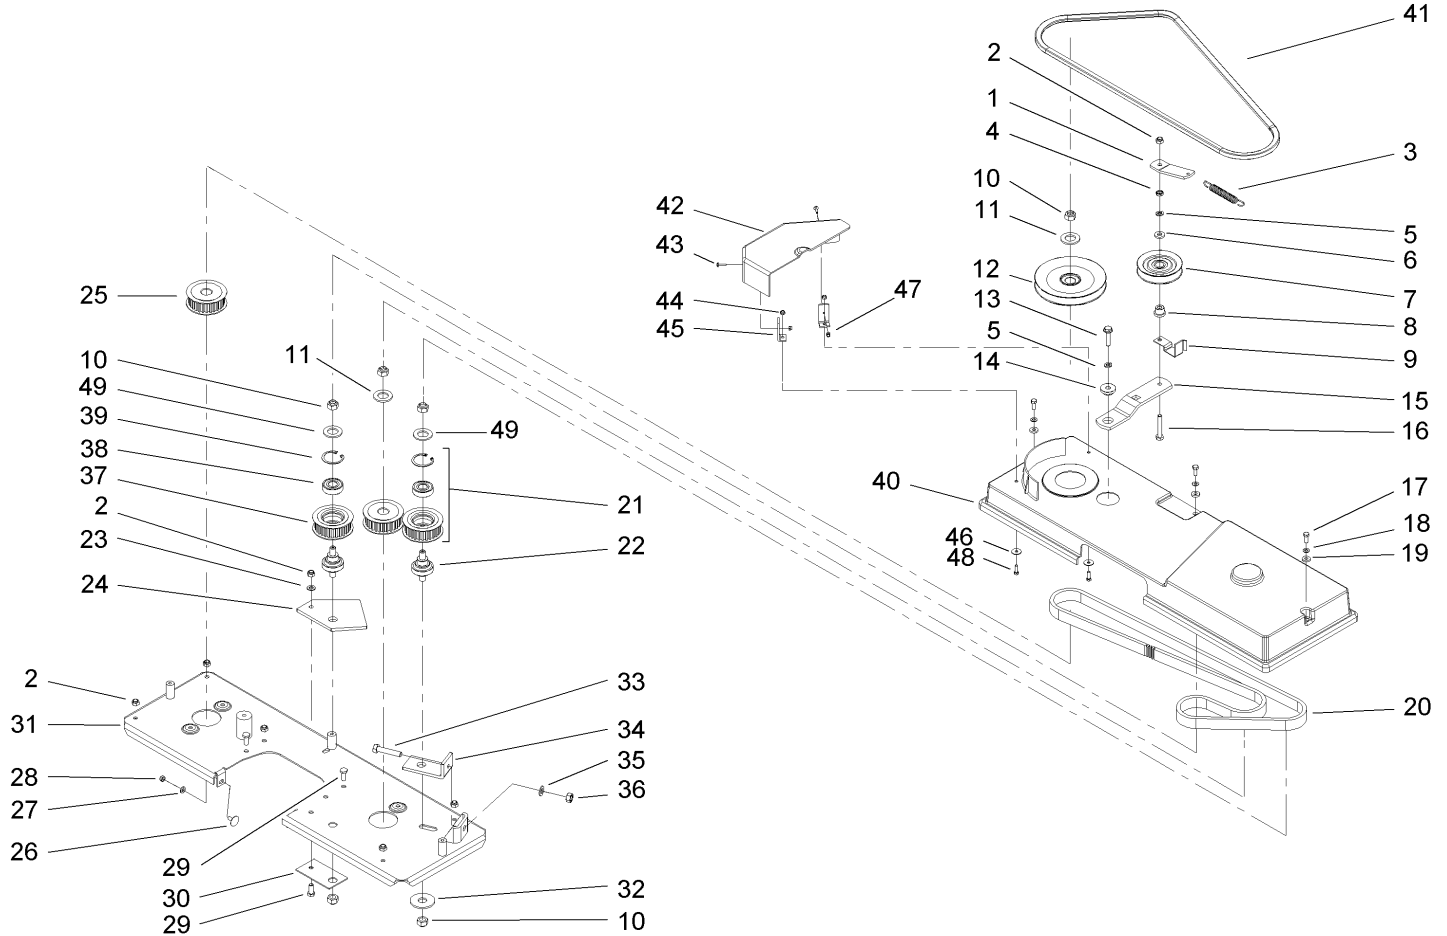

Belt Cover and Drive System Assembly


Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley

Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	1	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3126	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

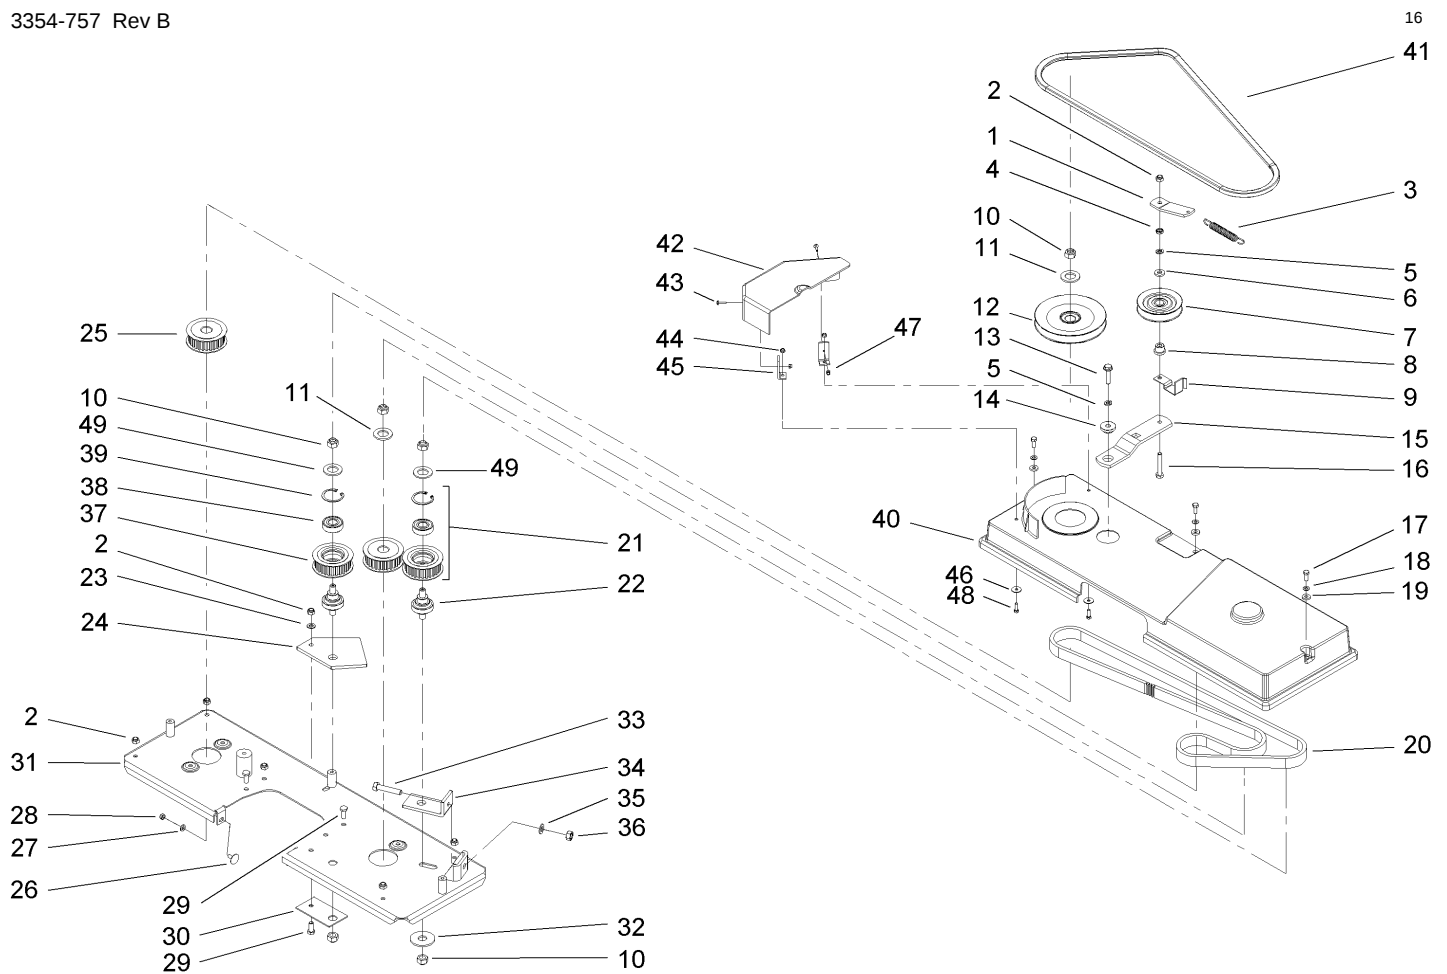 

Belt Cover and Drive System Assembly (continued)


Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat

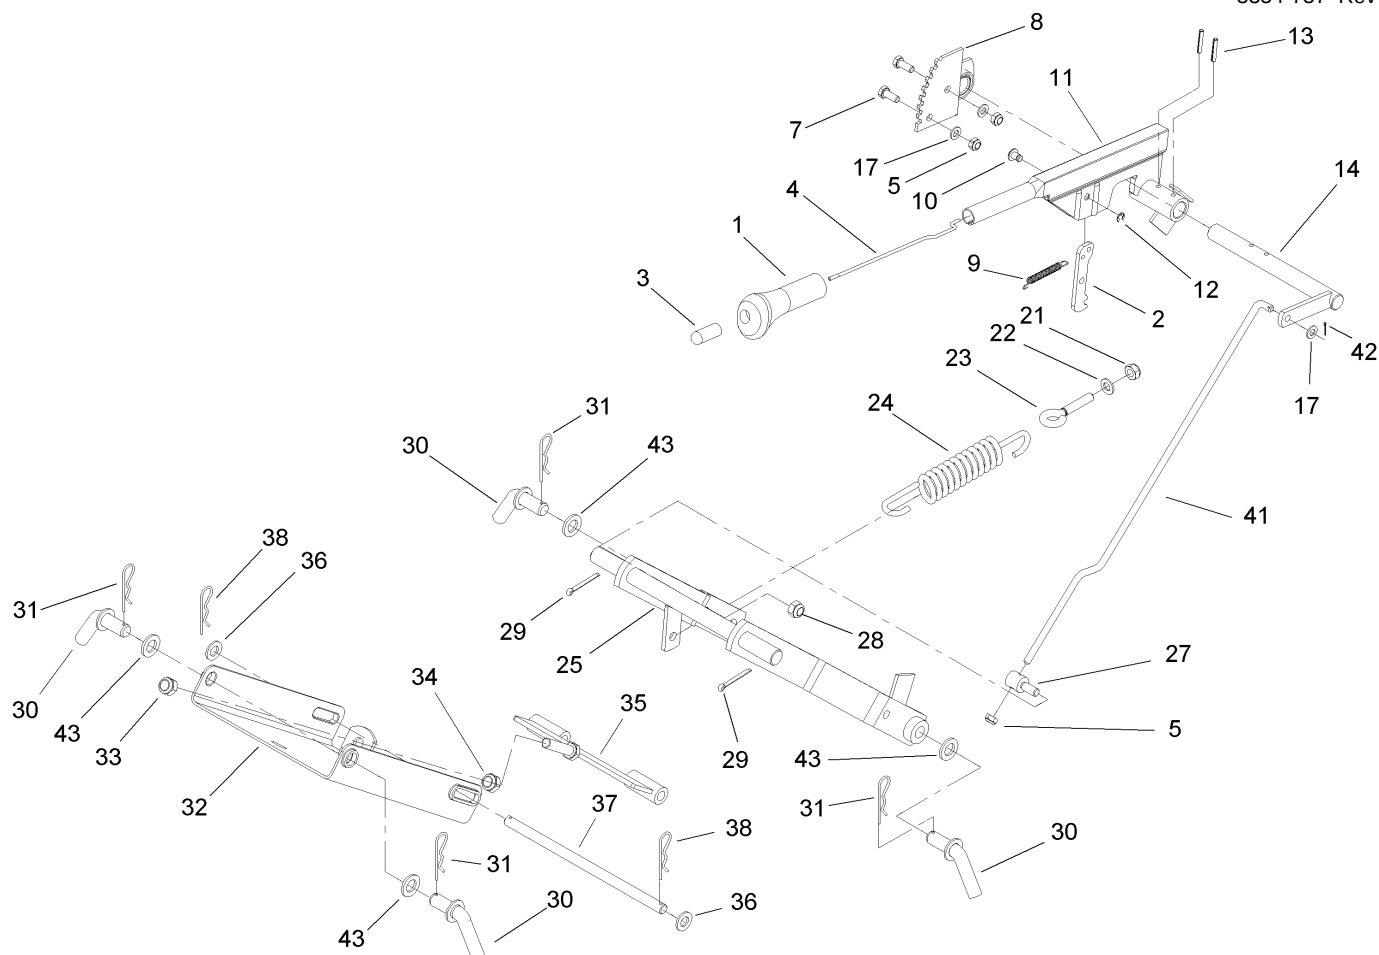 

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	104-3133	1	Segment-Gear
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	104-3138	1	Shaft-Height Adj.
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

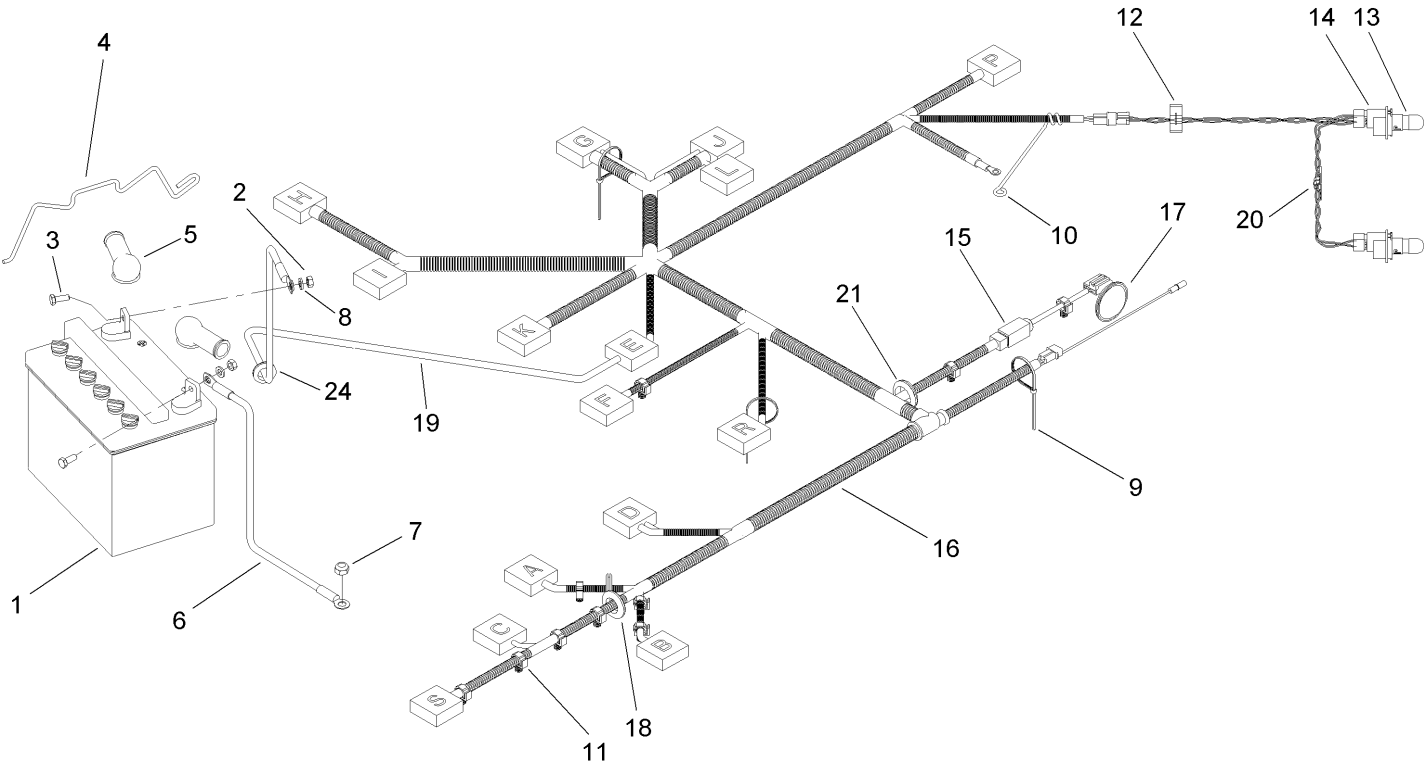 





Battery and Electrical Harness Assembly

Ref	Part No.	Qty.	Description				
1	104-3152	1	Battery-12V				
2	33013-00	2	Nut-Hex				
3	33113-016	2	Screw-HH				
4	104-3153	1	Clamp-Battery				
5	104-3154	2	Boot-Rubber				
6	104-3155	1	Cable-Battery, Negative				
7	33024-00	1	Nut-Lock				
8	33093-00	2	Washer-Flat				
9	3334-945	3	Tie-Cable				
10	104-3156	1	Holder- Harness, Wiring				
11	104-3157	10	Clip-Snap				
12	88-4320	1	Harness-Wire, Lights				
13	104-3158	2	Bulb-Light				
14	104-3159	2	Socket-Light				
15	104-3160	1	Harness-Clutch				
16	108-8750	1	Harness-Wiring				
17	104-3163	1	Cap				
18	104-3165	2	Bushing				
19	104-3166	1	Cable-Battery Positive				
20	104-3167	2	Clip-Nylon				
21	104-3168	1	Bushing				
24	107-8950	1	Grommet				

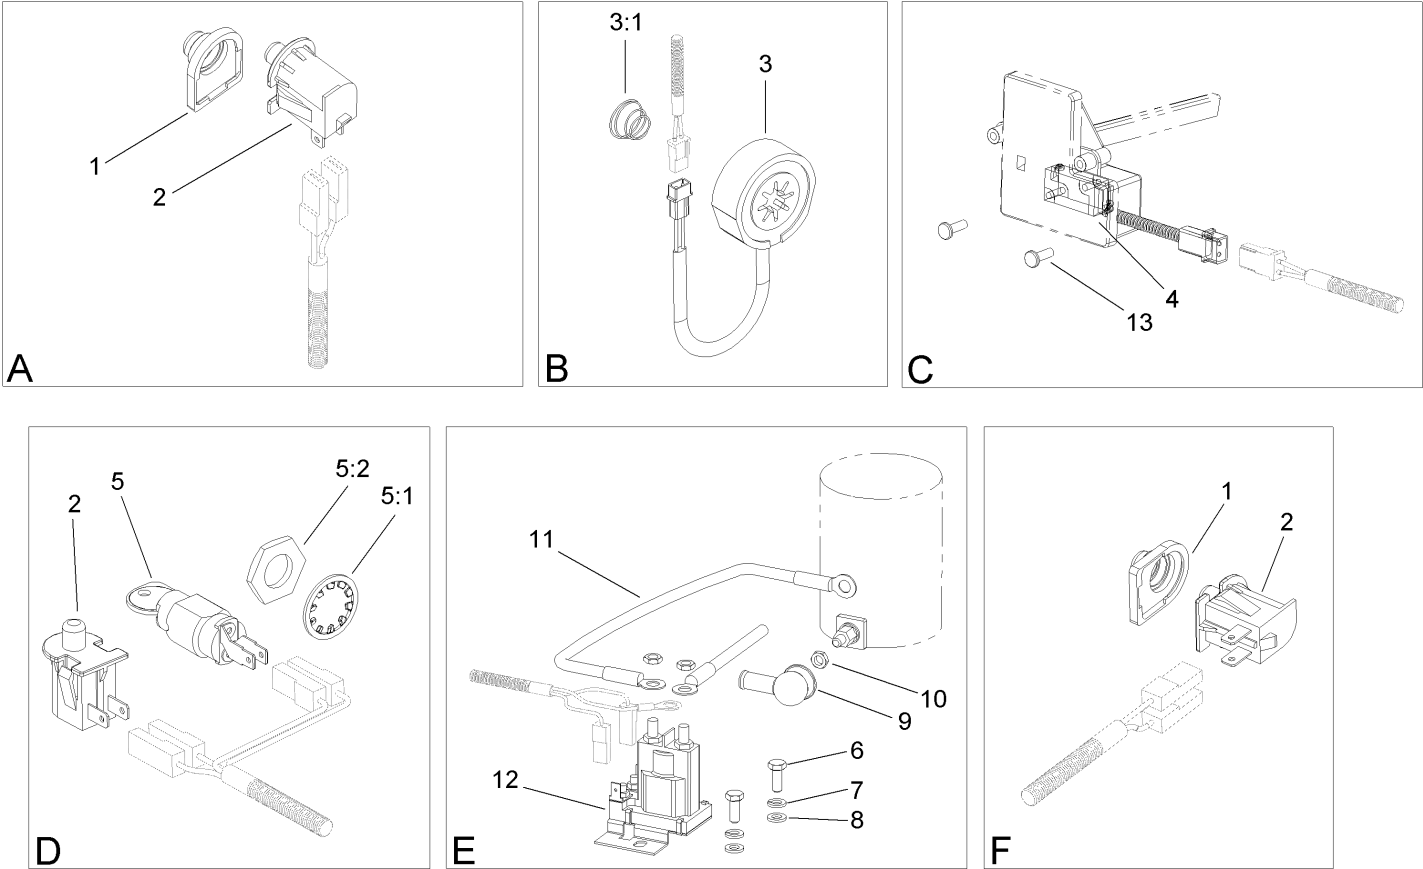 


Electrical Switch Assembly No. 1

Ref	Part No.	Qty.	Description				
1	104-3178	2	Cover-Protective				
2	104-3179	3	Switch-Delta				
3	99-8090	1	Magnet ASM				
3:1	93-6601	1	Spring-Compression				
4	104-3185	1	Switch-Omron				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	33113-012	2	Screw-HH				
7	104-3186	2	Washer-Spring				
8	33093-00	2	Washer-Flat				
9	32128-32	3	Nut-HHF				
10	104-3187	1	Boot-Rubber				
11	104-3188	1	Lead-Starter, Electric				
12	104-3189	1	Solenoid				
13	104-3349	2	Screw				

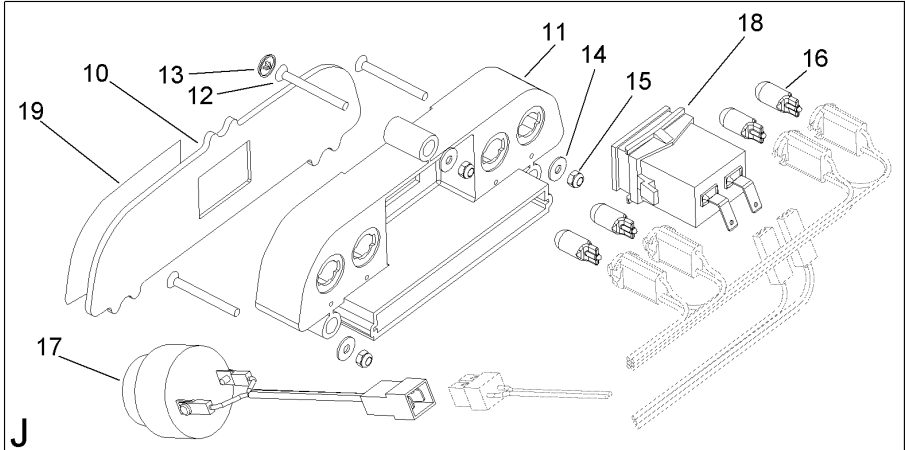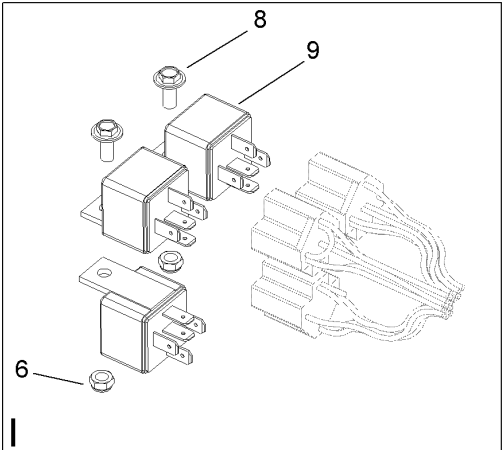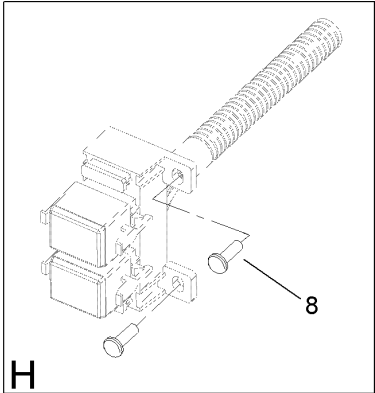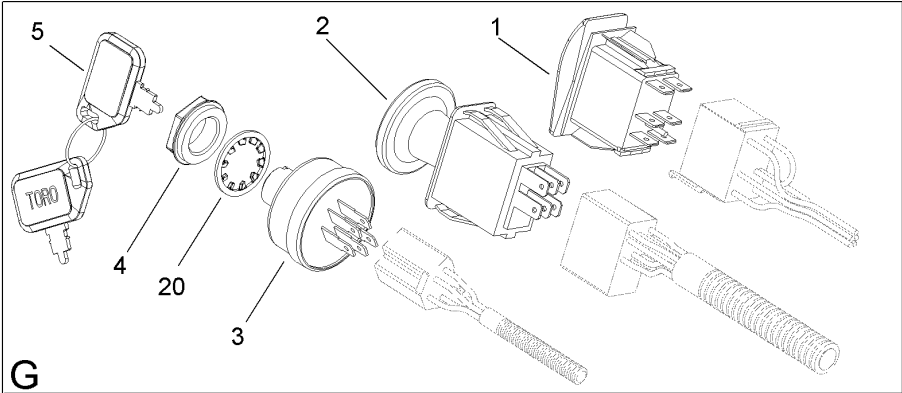    

Electrical Switch Assembly No. 2


Ref	Part No.	Qty.	Description				
1	93-0527	1	Switch-Cruise				
2	93-9998	1	Switch-PTO				
3	92-6785	1	Switch-Ignition				
4	218-461	1	Nut-HH				
5	62-7770	2	Key-Ignition				
6	87-5140	2	Nut-Lock				
8	104-2978	4	Screw-Hex				
9	104-3173	3	Relay				
10	92-6705	1	Lens-Dash				
11	92-6732	1	Housing-Light, Indicator				
12	104-3191	3	Screw				
13	104-3174	3	Screw-Cap				
14	104-3175	3	Washer				
15	104-2985	3	Nut-Hex				
16	104-3176	4	Bulb				
17	104-3177	1	Buzzer				
18	94-4208	1	Hourmeter				
19	104-2854	1	Decal-Dash				
20	3254-5	1	Washer-Tooth				

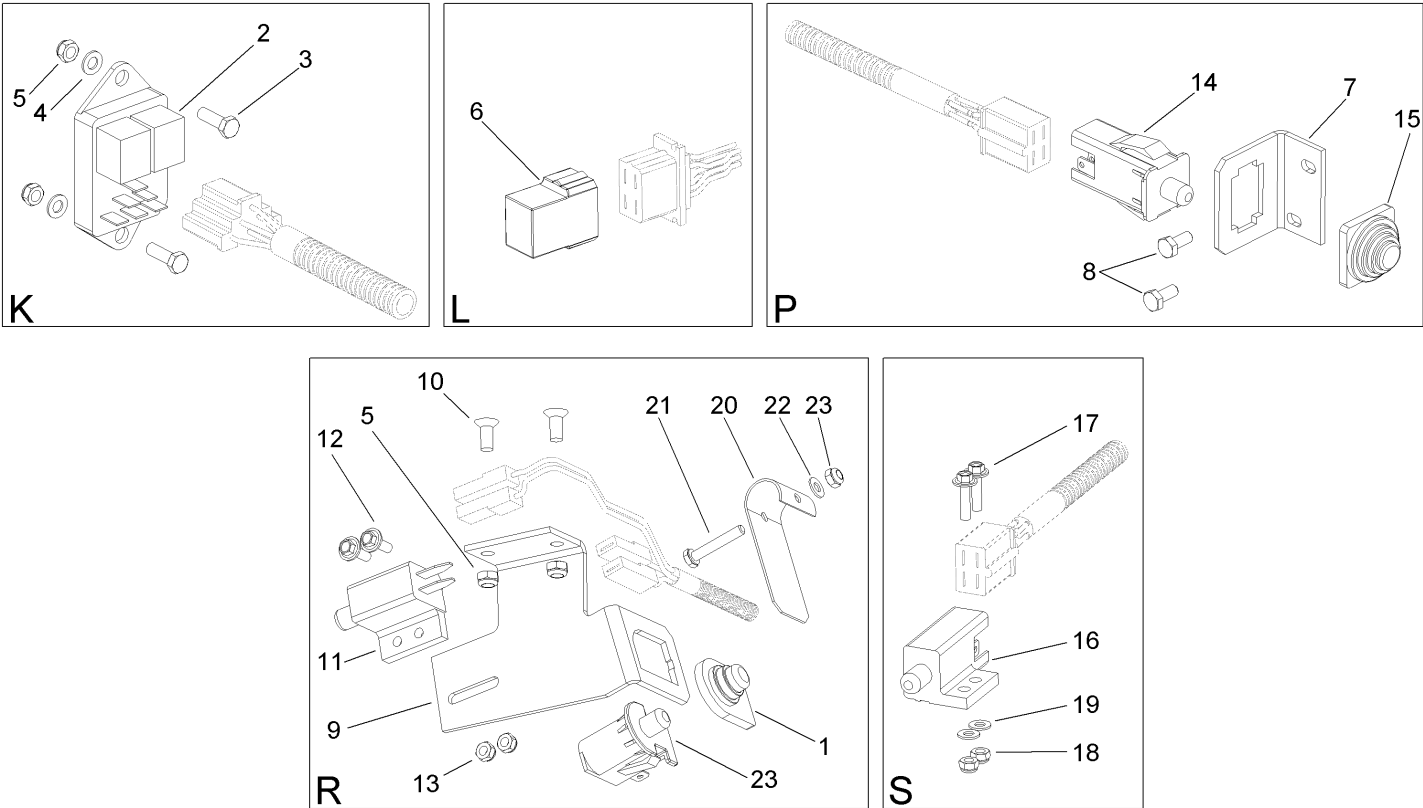 

Electrical Switch Assembly No. 3


Ref	Part No.	Qty.	Description				
1	104-3178	1	Cover-Protective				
2	99-3701	1	Module-Clutch				
3	60-6910	2	Screw				
4	52-6430	2	Washer				
5	87-5140	4	Nut-Lock				
6	104-3169	1	Circuit-Memory				
7	104-3333	1	Holder-Switch				
8	104-3190	2	Screw				
9	104-3332	1	Holder-Switch				
10	104-2980	2	Screw				
11	95-1653	1	Switch-Pole, Single				
12	104-2983	2	Screw				
13	104-2985	3	Nut-Hex				
14	104-3338	1	Switch-Delta				
15	104-3339	1	Cover-Switch				
16	104-3330	1	Switch-Delta				
17	104-3331	2	Bolt				
18	46-0430	2	Nut-Lock				
19	52-6430	2	Washer				
20	106-5765	1	Lever-Spring				
21	104-3009	1	Screw-Hex				
22	106-5766	1	Washer				
23	104-3179	1	Switch-Delta				

 48 SHORT BLOCK

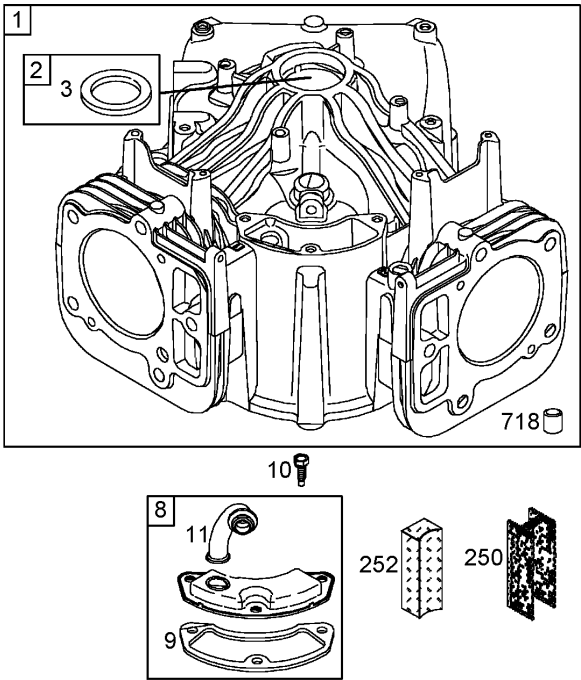


Cylinder Assembly
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
1	699753	1	Cylinder ASM				
2	499585	1	Bushing And Seal Kit				
3	391086s	1	Seal-Oil				
8	792185	1	Breather ASM				
9	690937	1	Gasket-Breather				
10	691108	1	Screw				
11	690942	1	Tube-Breather				
48	698172	1	Short Block				
250	690957	1	Retainer-Breather				
252	690956	1	Collector-Oil				
718	690959	1	Pin-Locating				

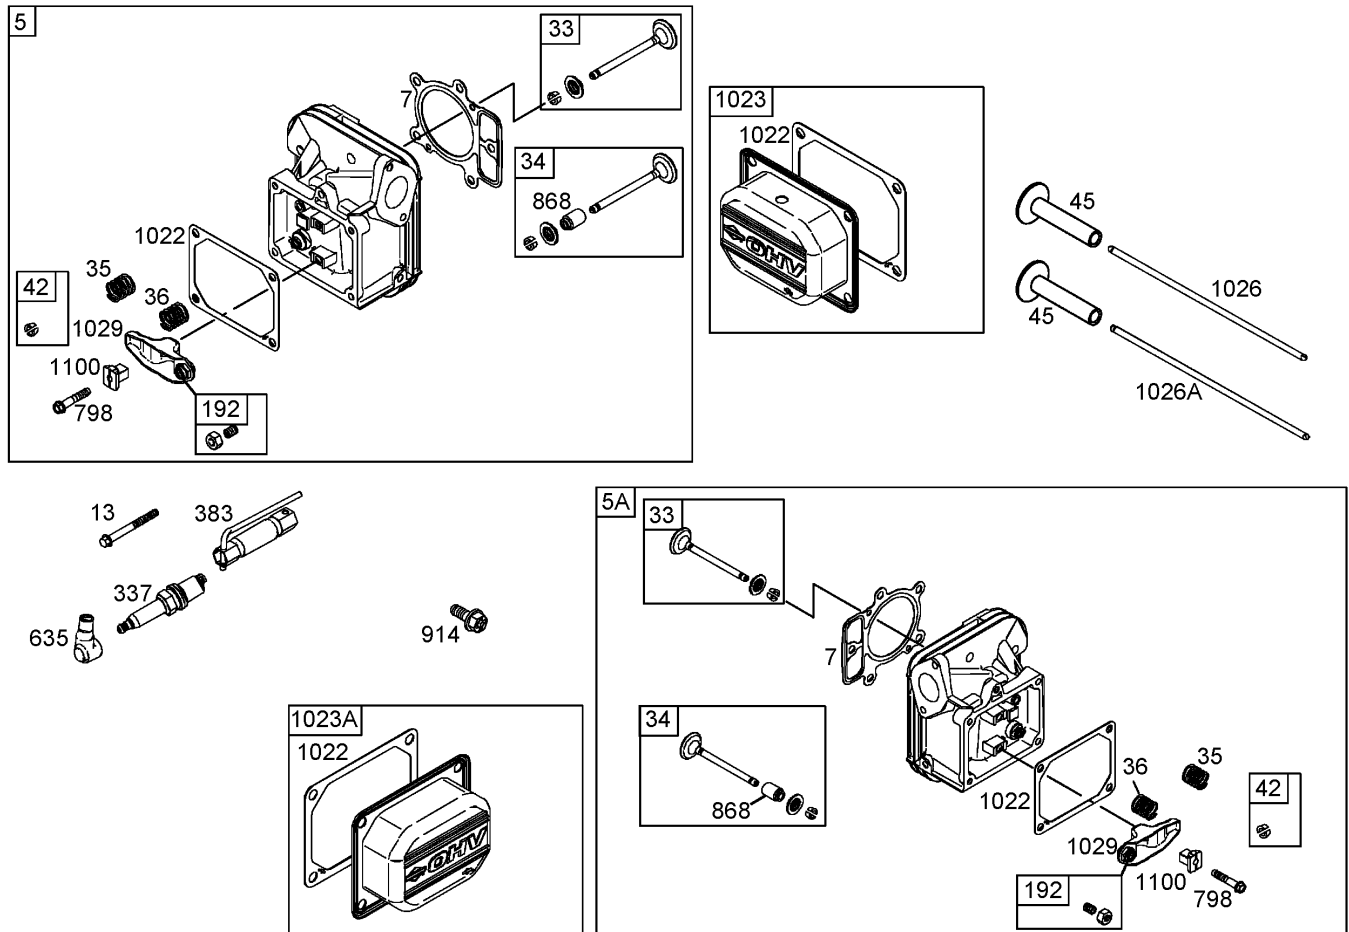 

Head Assembly Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
25	693998	1	Head-Cylinder	21029	690972	1	Arm-Rocker
25A	693999	1	Head-Cylinder	21100	791959	1	Pivot-Arm, Rocker
247	693997	1	Gasket-Head, Cylinder				
6							
213	791130	1	Screw				
233	499596	1	Valve-Exhaust				
234	697464	1	Valve-Intake				
235	690963	1	Spring-Valve				
236	690963	1	Spring-Valve				
242	499586	1	Keeper-Valve				
245	690977	1	Tappet-Valve				
2192	690083	1	Adjuster-Arm, Rocker				
2337	691043	1	Spark Plug				
2383	19374s	1	Wrench-Spark Plug				
2635	66538s	1	Boot-Spark Plug				
2798	697890	1	Screw				
24868	690968	1	Seal-Valve				
6							
2914	691127	1	Screw				
241022	690971	1	Gasket-Cover, Rocker				
6							
21023	499599	1	Cover-Rocker				
21023A	499600	1	Cover-Arm, Rocker				
21026	690981	1	Rod-Push (Steel)				
21026A	690982	1	Rod-Push (Aluminum)				

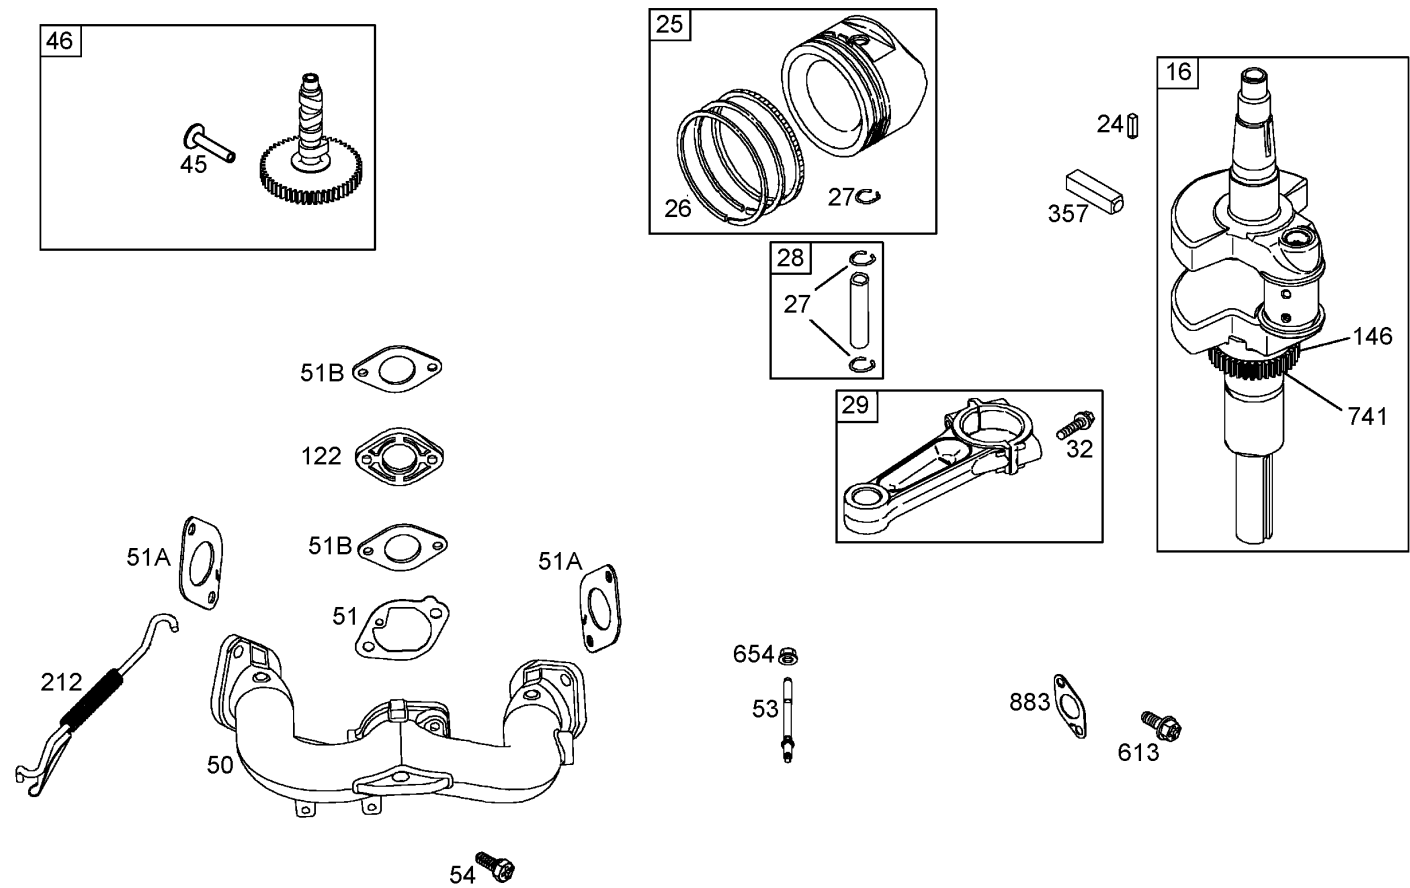 

Crankshaft Assembly


Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
16	699700	1	Crankshaft	613	690341	1	Screw (Muffler)
24	222698s	1	Key-Flywheel	654	690958	1	Nut
25	792117	1	Piston ASM (STD)	741	690980	1	Gear-Timing
25	792144	1	Piston ASM (.020 O S)	883	690970	1	Gasket-Exhaust
26	792026	1	Ring Set (STD)				
26	792073	1	Ring Set (.020 O S)				
27	690975	1	Lock-Pin, Piston				
28	690229	1	Pin-Piston (STD)				
29	699699	1	Rod-Connecting				
32	690976	1	Screw				
45	690977	1	Tappet-Valve				
46	790562	1	Camshaft				
50	699801	1	Manifold-Intake				
51	690949	1	Gasket-Intake				
51A	699800	1	Gasket-Intake				
51B	699803	1	Gasket-Intake				
53	690951	1	Stud				
54	699816	1	Screw				
122	699802	1	Spacer-Carburetor				
146	690979	1	Key-Timing				
212	792265	1	Link-Throttle				
357	691483	1	Key-Pulley, Drive				

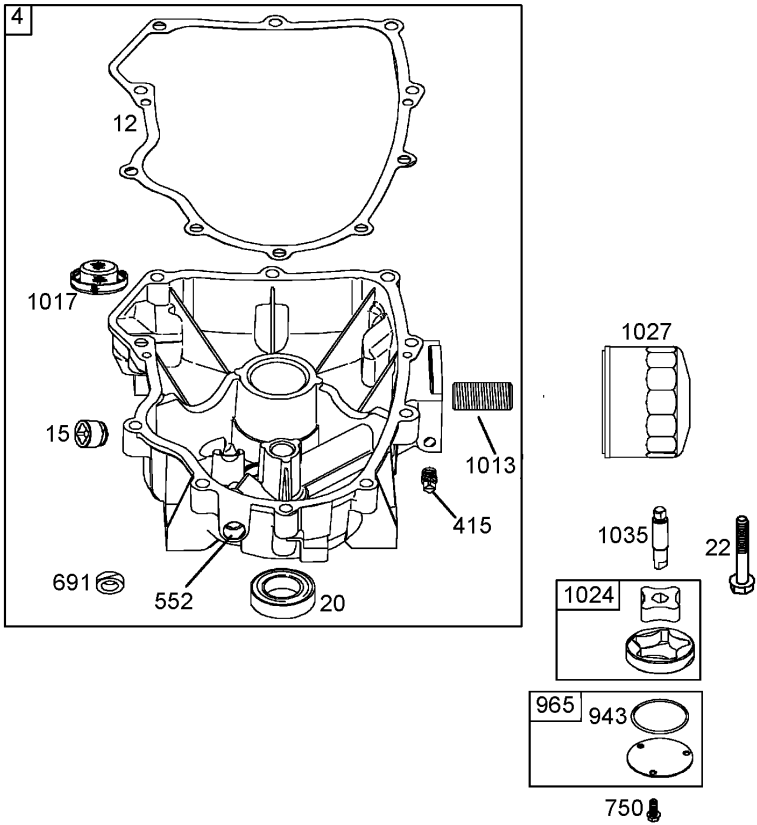 


Crankcase Assembly
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
24	699747	1	Sump-Engine				
2412	697227	1	Gasket-Crankcase				
215	690946	1	Plug-Drain, Oil				
2420	690947	1	Seal-Oil				
222	694966	1	Screw				
2415	91488	1	Plug-Oil				
2552	690552	1	Bushing-Crank, Governor				
24691	790574	1	Seal-Shaft, Governor				
2750	696999	1	Screw				
24943	690589	1	Seal-O Ring				
2965	499613	1	Cover-Pump, Oil				
21013	690954	1	Nipple-Filter, Oil				
21017	690770	1	Screen-Pump, Oil				
21024	499054	1	Pump-Oil				
21027	492932s	1	Filter-Oil				
21035	691042	1	Shaft-Pump, Oil				

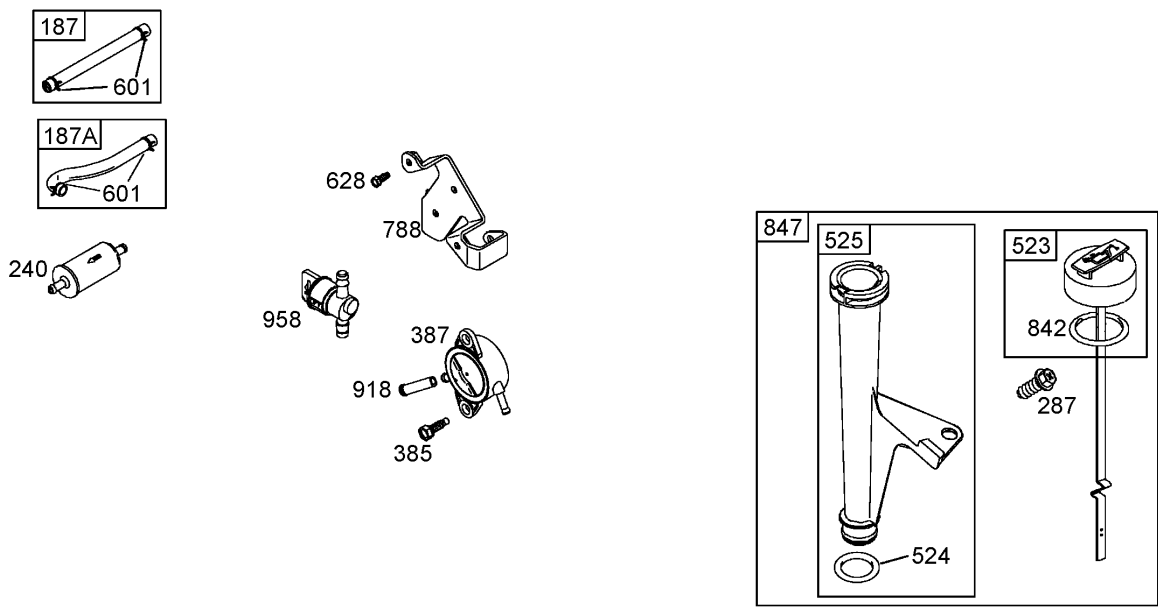 


Oil Filter, Tube and Pump Assembly
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
2 187	791744	1	Line-Fuel				
2 187A	791872	1	Line-Fuel (Molded)				
2 240	691035	1	Filter-Fuel				
2 287	691108	1	Screw				
2 385	691108	1	Screw				
2 387	808656	1	Pump-Fuel				
2 523	691036	1	Dipstick				
2 4 524	691032	1	Seal-O Ring				
2 525	691037	1	Tube-Dipstick				
2 601	691038	1	Clamp-Hose				
2 628	691108	1	Screw				
2 788	691039	1	Bracket-Pump, Fuel				
2 4 842	691031	1	Seal-O Ring				
2 847	499602	1	Dipstick And Tube ASM				
2 918	694000	1	Hose-Vacuum				
2 958	698183	1	Valve-Shut Off, Fuel				

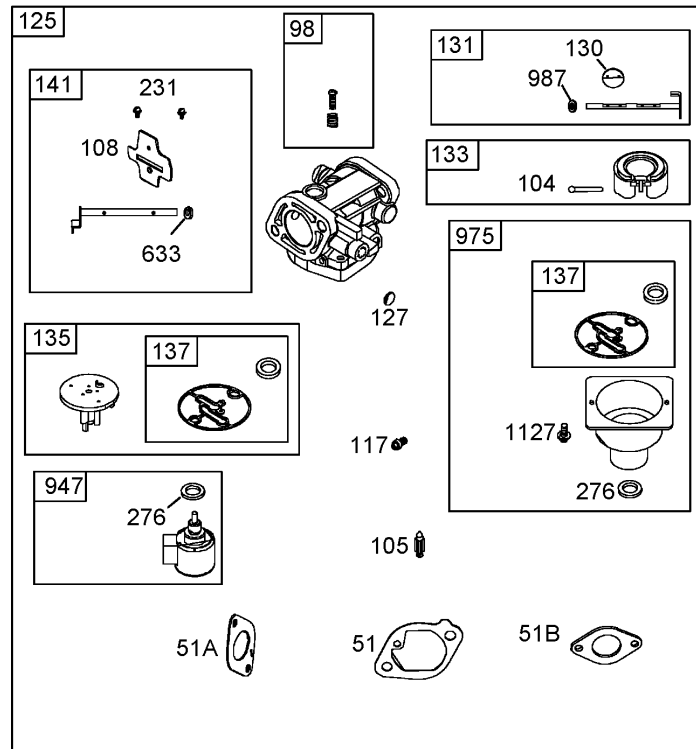 


Carburetor Assembly Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2 3 51	690949	1	Gasket-Intake	2 1127	695407	1	Screw
4							
2 3 51A	699800	1	Gasket-Intake				
4							
2 3 51B	699803	1	Gasket-Intake				
4							
2 98	699721	1	Idle Speed Kit				
2 3 104	694918	1	Pin-Hinge, Float				
2 3 105	698537	1	Valve-Needle, Float				
2 108	699808	1	Valve-Choke				
2 117	791406	1	Jet-Main (Standard)				
2 125	699807	1	Carburetor				
2 127	699810	1	Plug-Welch				
2 130	699809	1	Valve-Throttle				
2 131	499812	1	Carburetor Gasket Set				
2 133	694914	1	Carburetor Float ASM				
2 135	792022	1	Tube-Transfer, Fuel				
2 3 137	698781	1	Gasket-Bowl, Float				
2 141	699811	1	Choke Shaft Kit				
2 231	690718	1	Screw				
2 3 276	695410	1	Washer-Sealing				
2 3 633	695414	1	Seal-Shaft, Choke And Throttle				
2 947	699728	1	Solenoid-Fuel				
2 975	699502	1	Bowl-Float				
2 3 987	699813	1	Seal-Shaft, Throttle				

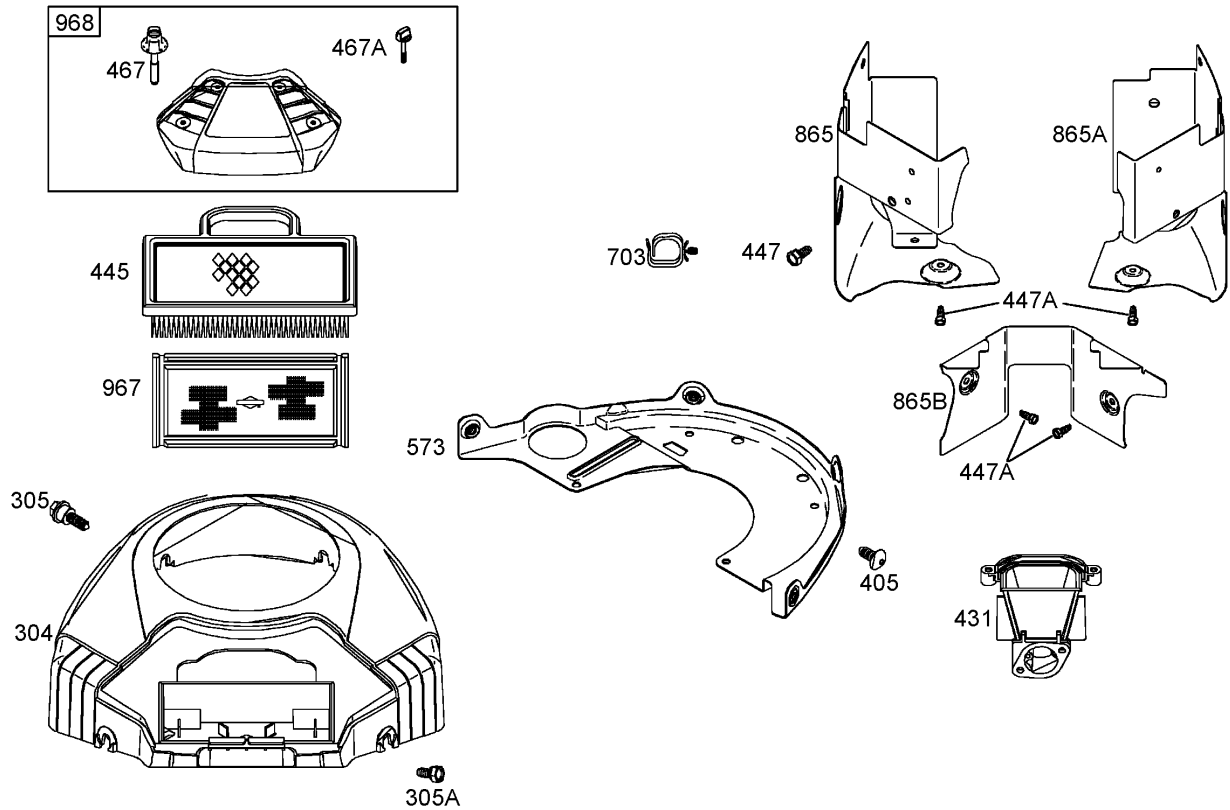 


Air Cleaner Assembly
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
2304	790688	1	Housing-Blower				
2305	691005	1	Screw				
2305A	790690	1	Screw				
2405	697820	1	Screw				
2431	790628	1	Elbow-Cleaner, Air				
2445	499486s	1	Filter-Cartridge, Air Cleaner				
2447	691003	1	Screw				
2447A	691108	1	Screw				
2467	790697	1	Knob-Cleaner, Air				
2467A	691008	1	Knob-Cleaner, Air				
2573	790444	1	Plate-Back				
2703	691010	1	Clip				
2865	691012	1	Cover-Guide, Air				
2865A	691014	1	Cover-Guide, Air (Cylinder 2)				
2865B	691015	1	Cover-Guide, Air (Valley)				
2967	273638s	1	Filter-Pre Cleaner				
2968	790689	1	Cover-Cleaner, Air				

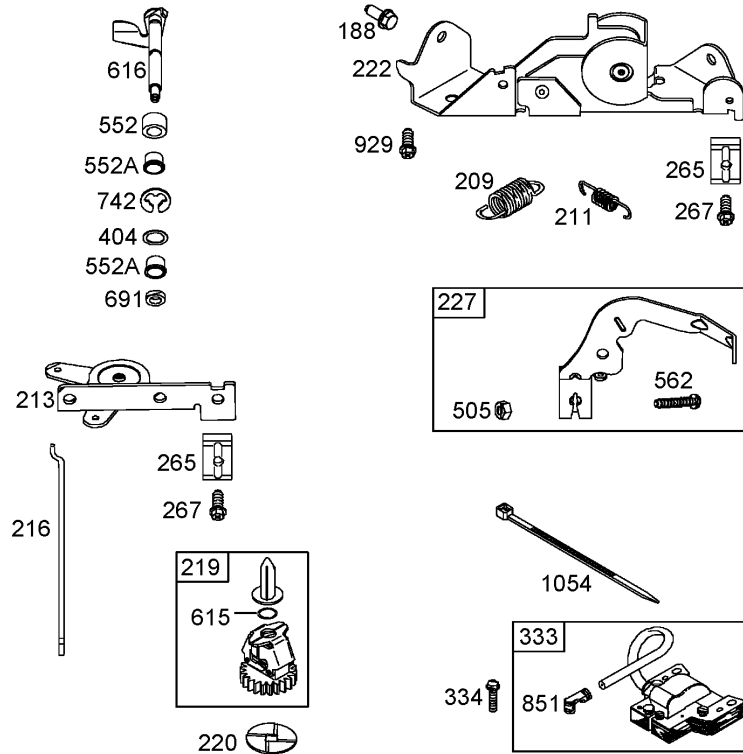 


Governor Assembly Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②188	691108	1	Screw	②1054	280275	1	Tie-Cable
②209	697674	1	Spring-Governor				
②211	691019	1	Spring-Idle, Governed				
②213	691021	1	Bracket-Control, Choke				
②216	691022	1	Link-Choke				
②219	698231	1	Gear-Governor				
②220	690412	1	Washer				
②222	698761	1	Bracket-Control				
②227	792492	1	Lever-Control, Governor				
②265	691024	1	Clamp-Casing				
②267	691044	1	Screw (Casing Clamp)				
②333	691060	1	Armature-Magneto				
②334	691061	1	Screw				
②404	690442	1	Washer				
②505	691029	1	Nut				
②552	690552	1	Bushing-Crank, Governor				
②552A	690553	1	Bushing-Crank, Governor				
②562	690311	1	Bolt				
②615	698290	1	Retainer-Shaft, Governor				
②616	691045	1	Crank-Governor				
②691	790574	1	Seal-Shaft, Governor				
②742	690328	1	Retainer-E Ring				
②851	493880s	1	Terminal-Spark Plug				
②929	691003	1	Screw				

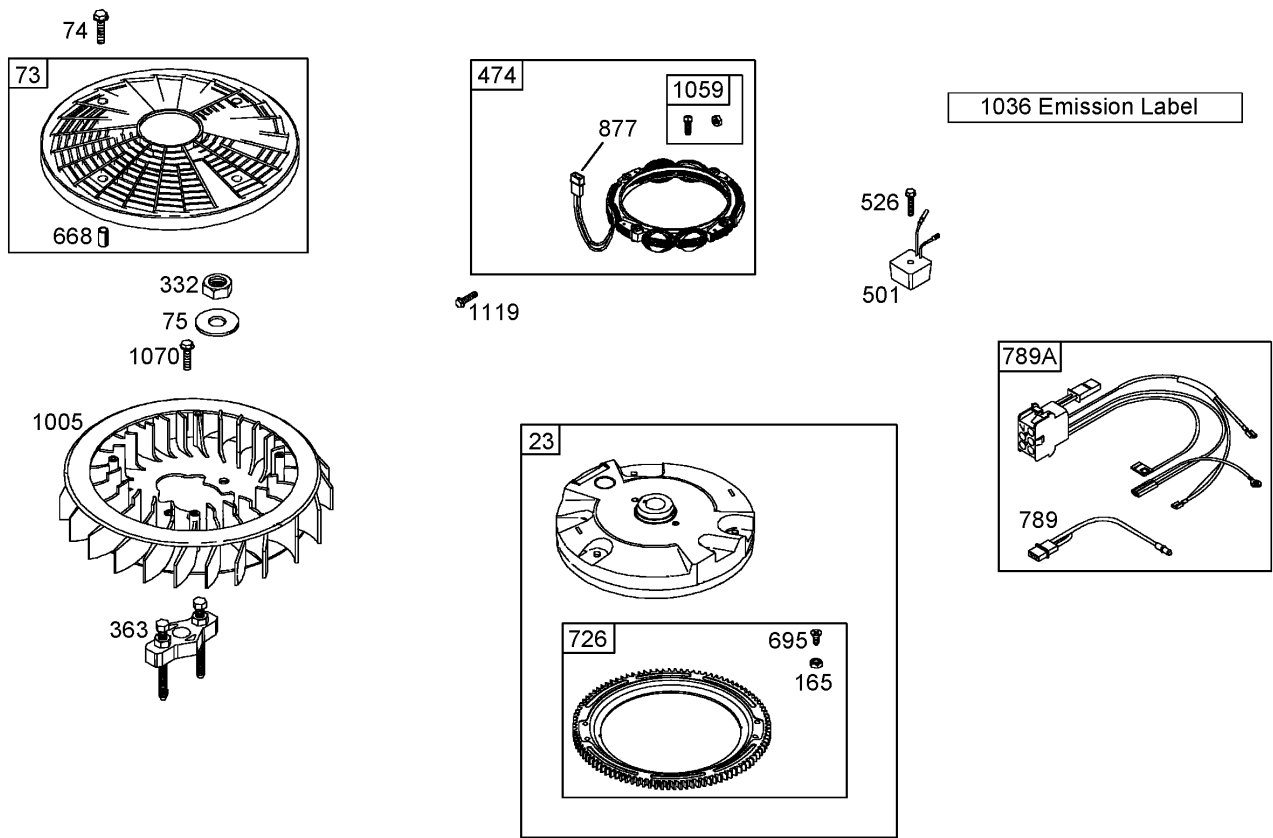 

Flywheel Assembly
Briggs and Stratton 441577-0120-E1



Ref	Part No.	Qty.	Description				
23	691053	1	Flywheel				
73	494439	1	Screen-Rotating				
74	698425	1	Screw				
75	691056	1	Washer				
165	693148	1	Nut				
332	691059	1	Nut				
363	19203	1	Puller-Flywheel				
474	696457	1	Alternator				
501	691188	1	Regulator				
526	691129	1	Screw				
668	691500	1	Spacer				
695	693149	1	Screw				
726	499612	1	Gear-Ring				
789	790544	1	Harness-Wiring				
789A	698330	1	Harness-Wiring				
877	393537	1	Connector-Wire, Tri Circuit				
1005	790698	1	Fan-Flywheel				
1036	792577	1	Label-Emissions				
1059	698516	1	Screw And Washer Kit				
1070	690372	1	Screw				
1119	691183	1	Screw				

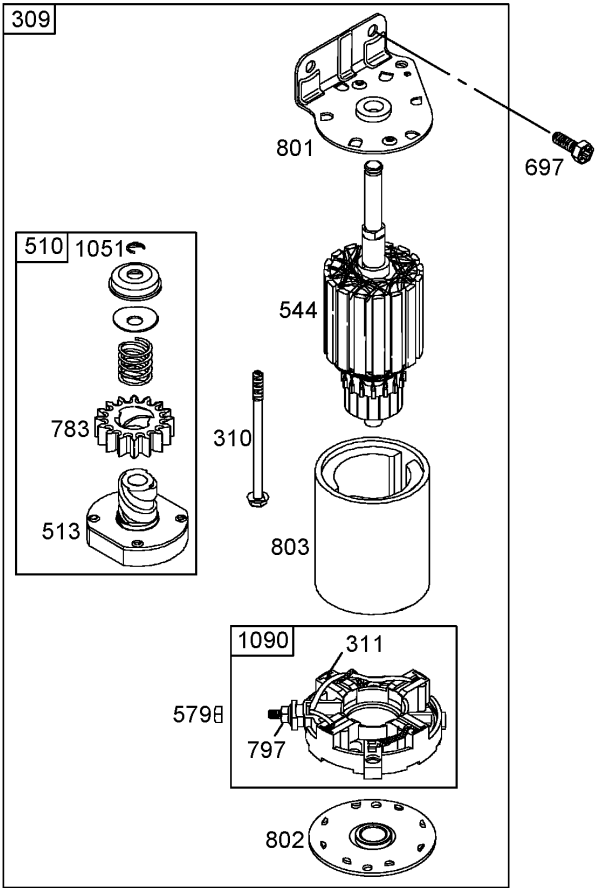 

Starter Assembly



Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
2 309	499521	1	Motor-Starter				
2 310	691263	1	Bolt				
2 311	497608	1	Brush Set				
2 510	696541	1	Drive-Starter				
2 513	692024	1	Clutch-Drive				
1 2 544		1	Armature-Starter (Service With 499521 Starter Motor)				
2 579	691029	1	Nut				
2 697	690372	1	Screw				
2 783	693058	1	Gear-Pinion				
2 797	693167	1	Nut				
2 801	691283	1	Cap-Drive				
2 802	691286	1	Cap-End				
1 2 803		1	Housing-Starter (Service With 499521 Starter Motor)				
2 1051	691265	1	Ring-Retaining				
2 1090	691293	1	Retainer-Brush				

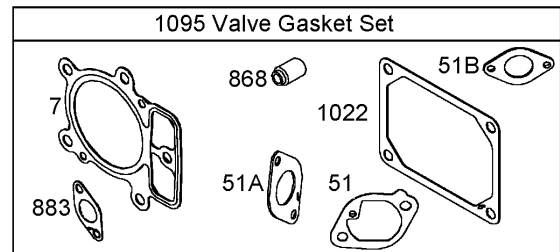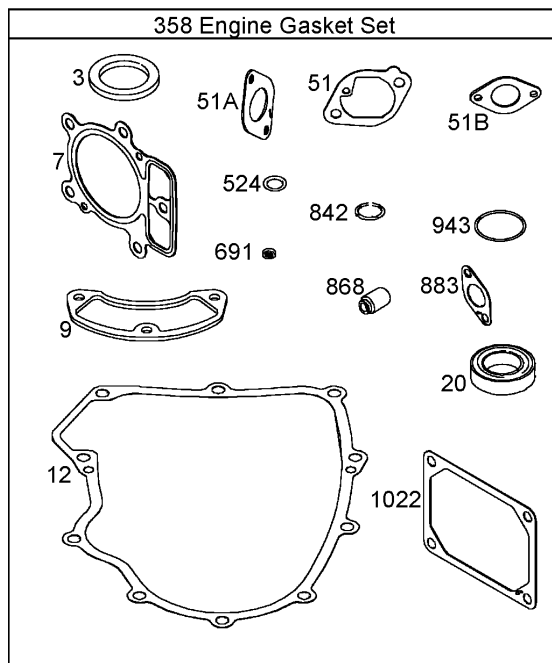  

358 Engine and 1095 Valve Gasket Sets Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
23	391086s	1	Seal-Oil				
27	693997	1	Gasket-Head, Cylinder				
29	690937	1	Gasket-Breather				
212	697227	1	Gasket-Crankcase				
220	690947	1	Seal-Oil				
2351	690949	1	Gasket-Intake				
5							
2351A	699800	1	Gasket-Intake				
2351B	699803	1	Gasket-Intake				
2358	699823	1	Engine Gasket Set				
2524	691032	1	Seal-O Ring				
2691	790574	1	Seal-Shaft, Governor				
2842	691031	1	Seal-O Ring				
2868	690968	1	Seal-Valve				
2883	690970	1	Gasket-Exhaust				
2943	690589	1	Seal-O Ring				
21022	690971	1	Gasket-Cover, Rocker				
21095	699822	1	Valve Gasket Set				

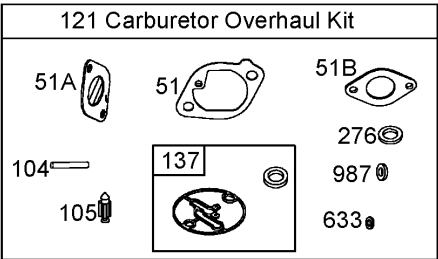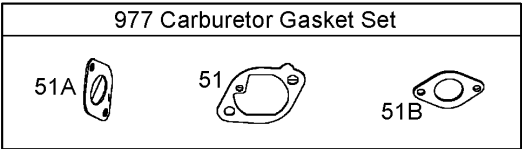  

977 Carburetor Gasket Set and 121 Carburetor Overhaul Kit
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description				
2 51	690949	1	Gasket-Intake				
2 51A	699800	1	Gasket-Intake				
2 51B	699803	1	Gasket-Intake				
2 104	694918	1	Pin-Hinge, Float				
2 105	698537	1	Valve-Needle, Float				
2 121	699814	1	Carburetor Overhaul Kit				
2 137	698781	1	Gasket-Bowl, Float				
2 276	695410	1	Washer-Sealing				
2 633	695414	1	Seal-Shaft, Choke And Throttle				
2 977	699815	1	Carburetor Gasket Set				
2 987	699813	1	Seal-Shaft, Throttle				

