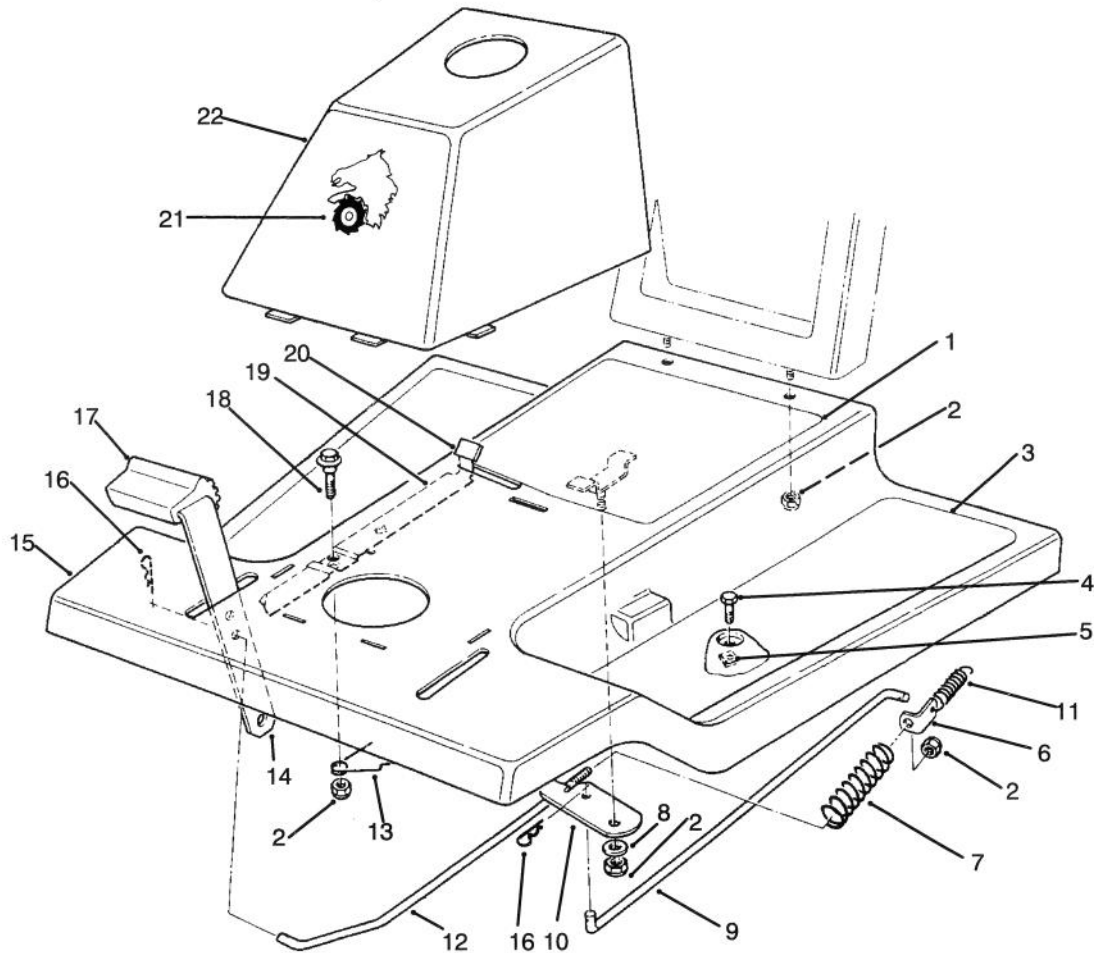


TORO®


MODEL NO. 70060-3900001 & UP

**PARTS
CATALOG****WHEEL HORSE®
8-25 RIDING MOWER**

C-0004

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-1620	Decal - Instruction	1	13	19-1970	Spring - Brake, Parking	1
2	3296-29	Nut - Lock	5	14	67-1130-03	Pedal - Brake & Clutch	2
3	44-7030	Tread - Foot Rest	2	15	67-1070-01	Body W.A. - Front	1
4	32104-110	Screw - Cap Hex. Hd.	4	16	3290-250	Pin - Hair, Cotter	2
5	3290-347	Nut - U-Type	4	17	65-2920	Pad - Pedal	2
6	67-1590	Bracket - Brake Return	1	18	19-1470	Bolt - Shoulder	1
7	67-1430	Spring - Compression	1	19	19-1610	Lever - Brake, Parking	1
8	26-9530	Washer - Pivot	1	20	19-2200	Tip - Brake, Parking	1
9	67-1340	Rod - Brake, Transmission	1	21	76-3870	Decal	1
10	67-1330-03	Lever - Brake, Bellcrank	1	22	55-7101	Tower (Incl. Ref. #21)	1
11	67-1450	Spring - Extension	1				
12	67-1350	Rod - Front, Brake	1				

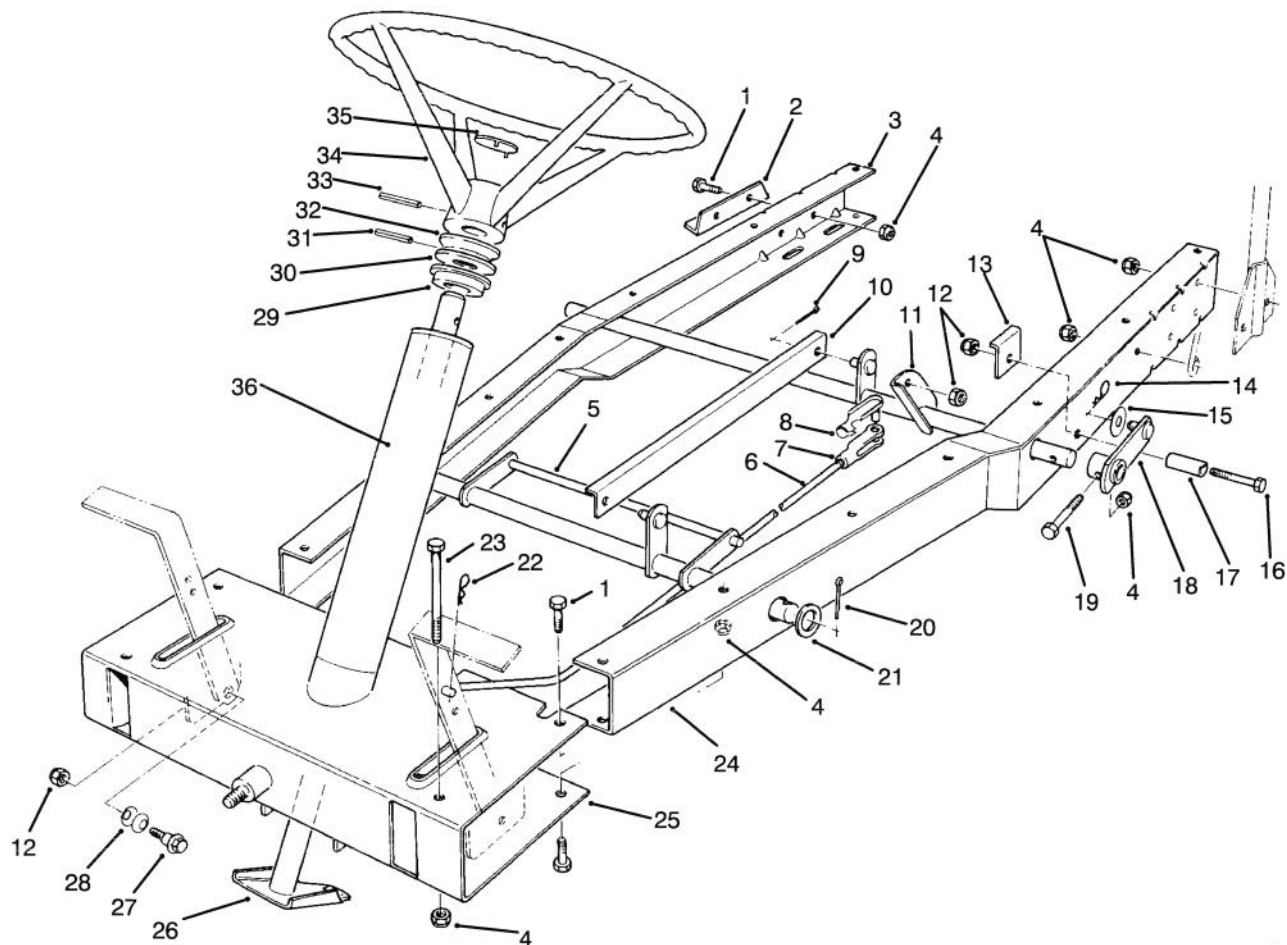


C-0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140-01	Mount - Bearing, Axle	1
3	67-0520-01	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010-01	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8		Assembly - Pin, Clevis	1
9	3272-6	Pin - Cotter	2
10	76-3890-01	Bracket - Link, H.O.C.	1
11	67-0050-01	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510-03	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	76-3790-01	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530-01	Channel - L.H.	1
25	67-0450-01	Frame W.A. - Front	1
26	67-0830-03	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3241	Wheel - Steering	1
35	88-9840	Insert - Wheel, Steering	1
36	76-4080	Decal	1
*	13-6049	Kit - Loose parts	1


*Not Illustrated

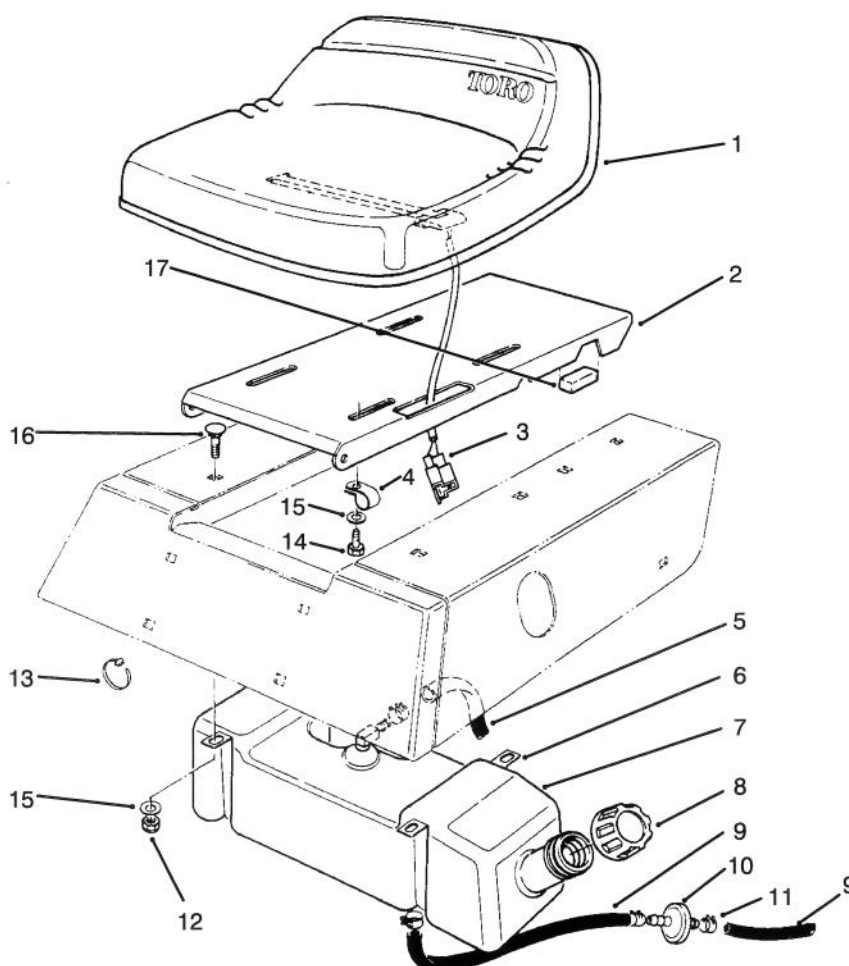

C-0002A

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-6680	Seat	1	10	56-6360	Filter	1
2	67-1241-01	Base - Seat	1	11	2412-98	Clamp - Hose	5
3	38-1420	Switch - Seat	1	12	3296-29	Nut - Lock	4
4	18-2970	R-Clamp	1	13	3290-378	Tie - Cable	1
5	47-2986	Hose - Gas	1	14	322-3	Screw - Cap Hex. Hd.	4
6	67-0950	Strap - Tank, Gas	2	15	3256-23	Washer - Flat	8
7	80-4580	Tank - Gas	1	16	3230-20	Bolt - Carriage	6
8	55-3576	Assembly - Cap, Gas	1	17	66-6920	Pad - Isolator	2
9	47-2964	Hose - Gas	2				

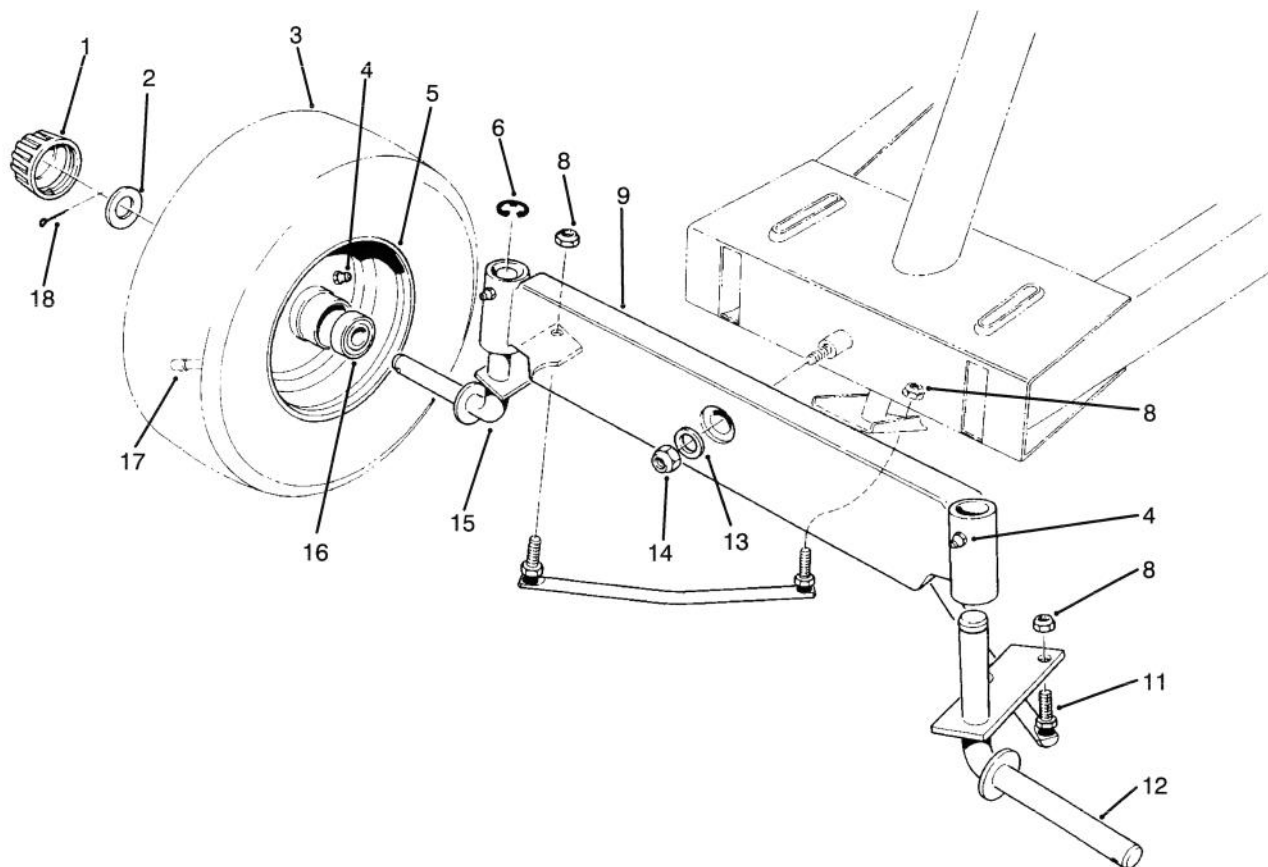


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	231-116	Tire	2
4	302-67	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990-01	Axle - Front	1

Ref. No.	Part No.	Description	No. Used
11	67-0880	Assembly - Tie Rod	2
12	67-0810-01	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800-01	Spindle - R.H.	1
16	251-210	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2

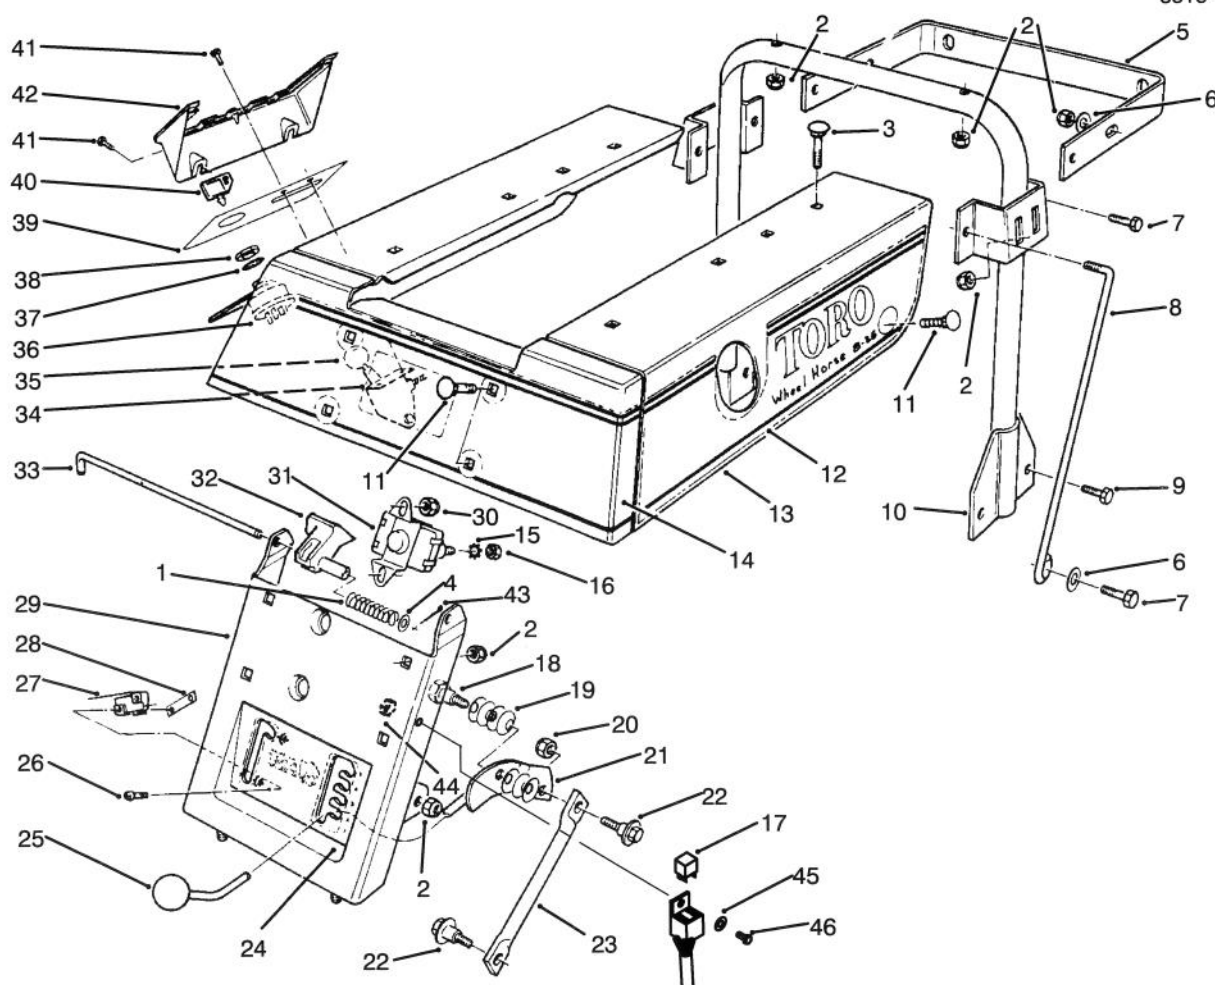


C-0007A

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1	24	76-3910	Decal - H.O.C. Deck Engage	1
2	3296-29	Nut - Lock	11	25	233-22	Knob	1
3	3230-3	Bolt - Carriage	2	26	3290-313	Screw - Pan Head	2
4	3256-22	Washer - Flat	1	27	40-8200	Switch - Micro	1
5	67-1500-03	Bar - Stand	1	28	3290-354	Nut - Double	1
6	3256-23	Washer - Flat	4	29	67-1090-01	Support W.A. - Seat	1
7	322-5	Screw - Cap Hex. Hd.	4	30	3296-42	Nut - Lock	2
8	67-1480	Brace - Support, Seat	2	31	47-1910	Solenoid	1
9	322-3	Screw - Cap Hex. Hd.	4	32	80-4330	Prop - Seat	1
10	67-0790-03	Support W.A. - Seat	1	33	80-4550	Rod - Base, Seat	1
11	3230-20	Bolt - Carriage	1	34	66-6640	Control - Throttle	1
12	76-3840	Decal - Toro L.H.	1	35	233-59	Knob	1
*	76-3880	Decal - Toro R.H.	1	36	23-0660	Switch - Ignition (Incl. Ref. #37 & 38)	1
13	67-0231-01	Body W.A. - Rear	1	37	3254-5	Washer - Lock, Int. Tooth	1
14	76-3850	Decal - Front	1	38	218-461	Nut - Hex.	1
15	3255-7	Washer - Lock, Int. Tooth	2	39	67-1270	Decal - Panel, Control	1
16	3218-1	Nut - Jam	2	40	63-8360	Key	2
17	116397	Relay	1	41	32144-42	Screw - Hex. Hd. Tapping	4
18	28-0540	Bolt - Shoulder	1	42	67-1030	Cover - Panel, Control	1
19	3290-413	Washer - Belleville	7	43	3274-4	Pin - Cotter	1
20	3296-39	Nut - Lock	1	44	3296-2	Nut - Lock	1
21	67-0270	Handle W.A. - H.O.C.	1	45	3256-14	Washer - Flat	1
22	67-0870	Bolt - Shoulder	2	46	3290-134	Screw - Cap Mach. Hd.	1
23	67-0080	Link - H.O.C.	1				

*Not Illustrated

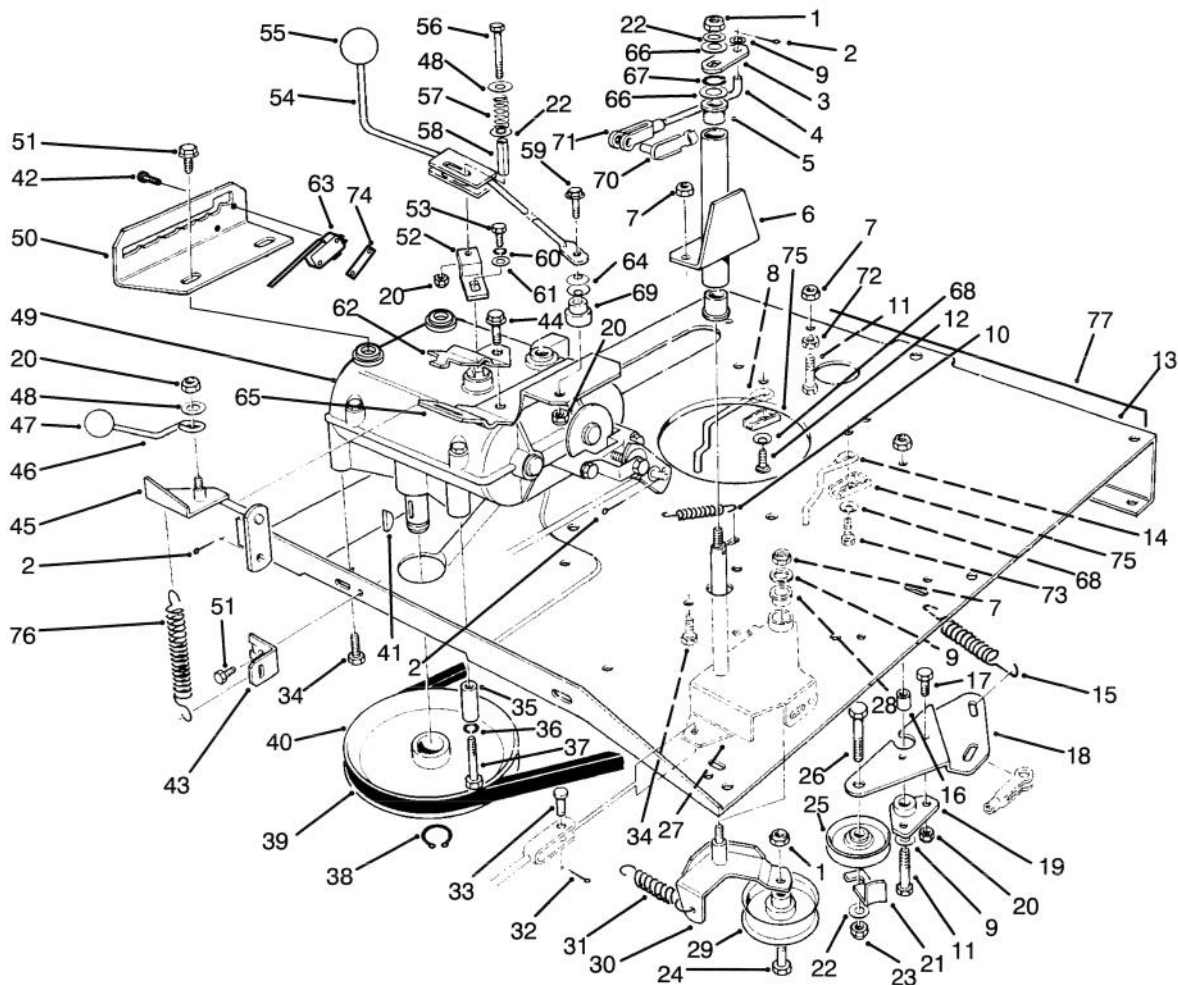


C-1506

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	2
2	3272-6	Pin - Cotter	1
3	67-0690-03	Flat - Deck Engage	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	3
6	67-0540-03	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	8
8	67-0930	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	1
12	3230-2	Bolt - Carriage	1
13	76-4090-01	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420-03	Plate - Mount, Idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
24	323-10	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360-03	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330-03	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3274-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	5
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
42	147665	Screw - Tapping	2
43	67-0750-01	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600-03	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage	1

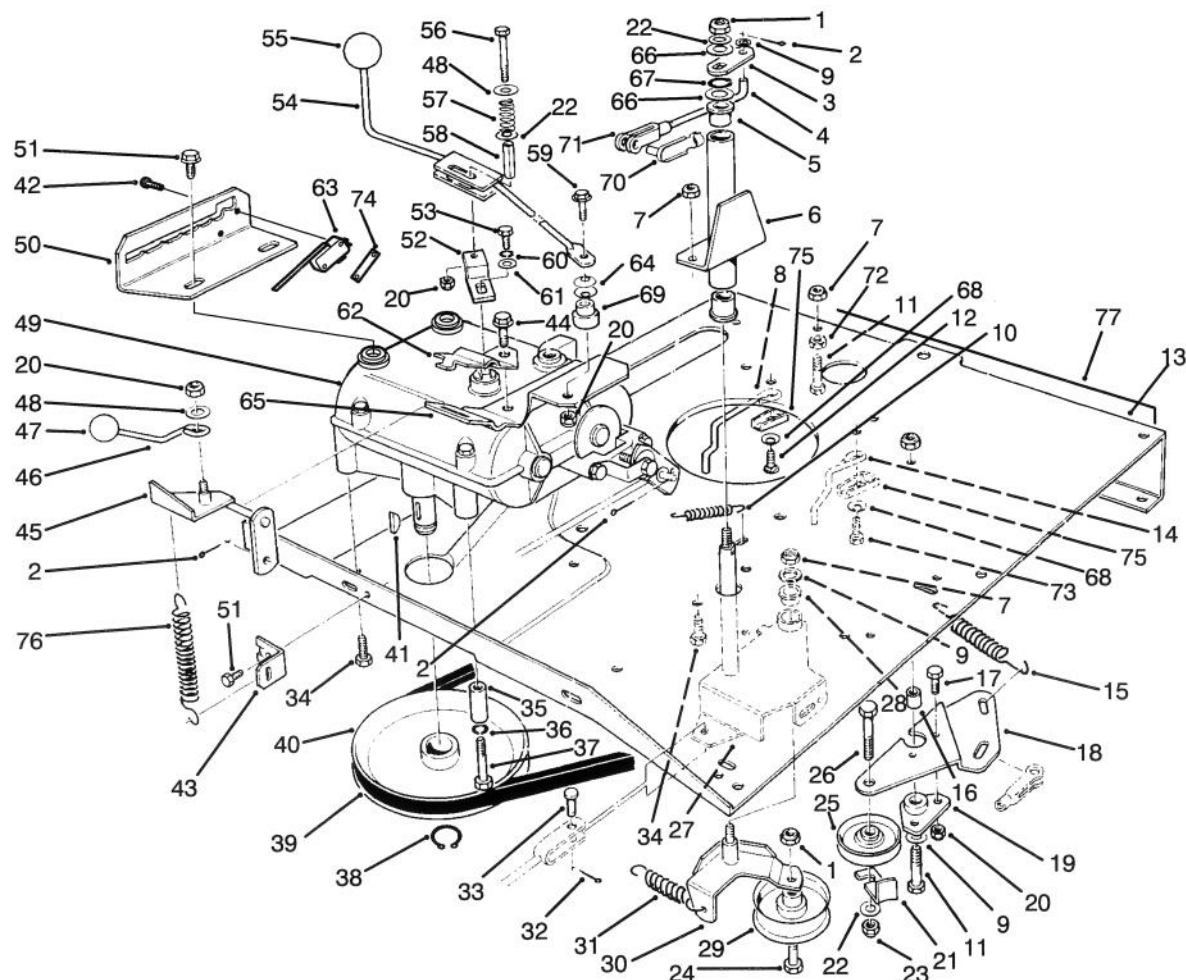


C-1506

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
47	233-22	Knob	1
48	3256-55	Washer - Fender	2
49	67-1400	Transmission	1
50	88-9810-03	Gate - Shift	1
51	32144-14	Screw - Wash. Hd., Tap.	4
52	56-7620	Lever - Shift	1
53	329-4	Screw - Cap Hex. Hd.	1
54	76-3940-03	Lever W.A. - Shift	1
55	233-48	Knob	1
56	321-15	Screw - Cap Hex. Hd.	1
57	56-7730	Spring	1
58	56-7740	Spacer	1
59	321-8	Screw - Cap Hex. Hd.	1
60	3253-3	Washer - Lock	1
61	3256-22	Washer - Flat	5
62	67-0670	Bracket - Engage, Deck	1

Ref. No.	Part No.	Description	No. Used
63	88-9930	Switch - Micro	1
64	3290-478	Washer - Belleville	2
65	67-0660	Bracket - Mount, Shifter	1
66	20-3220	Washer - Flat	2
67	32151-62	Ring - Retaining	1
68	3290-456	Washer - Belleville	2
69	76-3970	Spacer - Pivot	1
70	67-1530	Assembly - Pin, Clevis	1
71	282-27	Clevis	1
72	3218-2	Nut - Jam	1
73	32144-26	Screw - Thread Forming	1
74	3290-354	Nut - Double	1
75	76-3820	Anchor - Guide, Belt	2
76	76-4660	Spring	1
77	76-3860	Decal	1

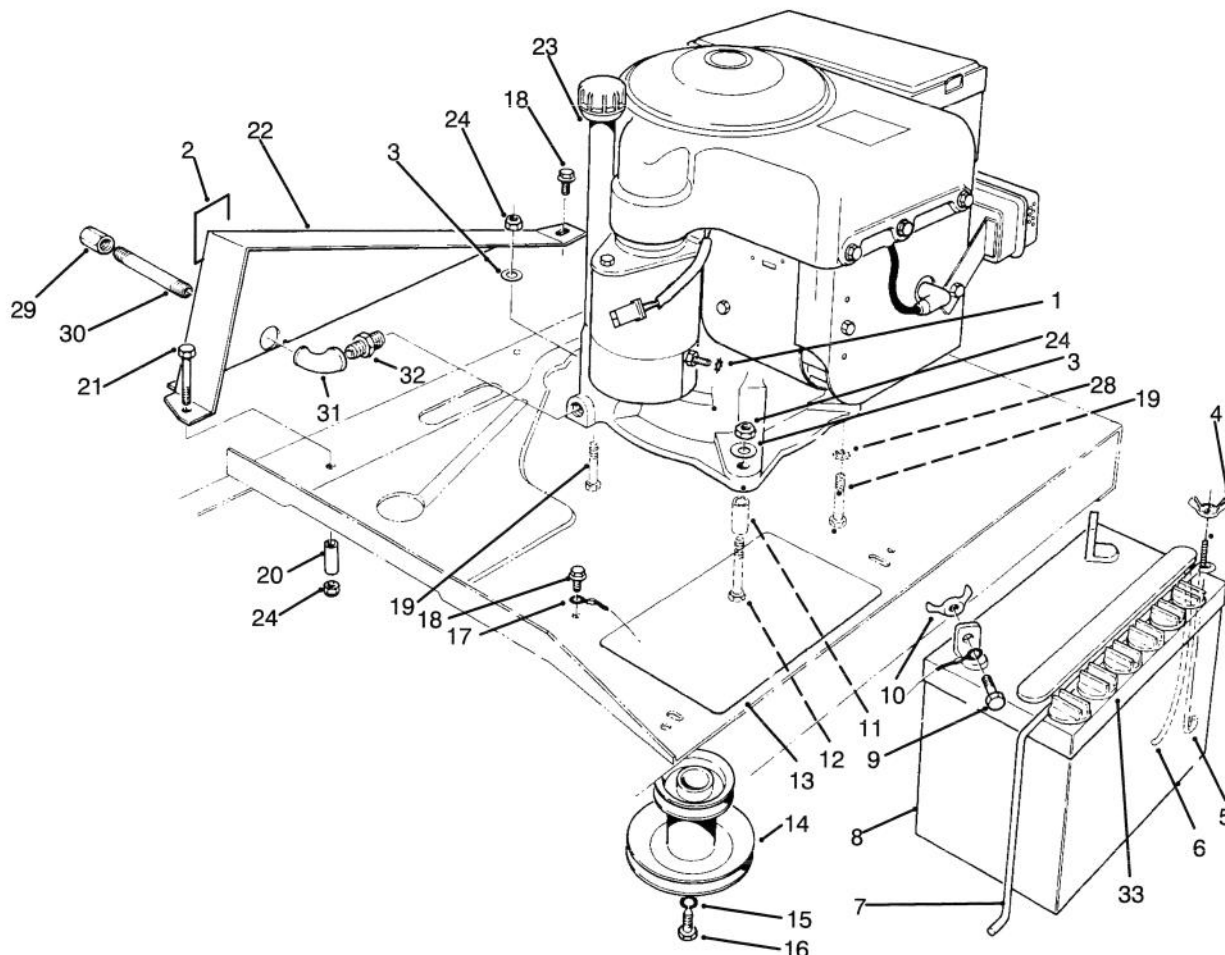


C-1525A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3255-7	Washer - Lock, Int. Tooth	1
2	76-3930	Decal - Noise	1
3	3256-23	Washer - Flat	4
4	32103-14	Nut - Wing	1
5	56-7720	Post - Hold Down, Battery	1
6	56-2540	Tube - Drain	1
7	56-7710	Hold Down - Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw - Cap Hex. Hd.	2
10	32103-22	Nut - Wing	2
11	80-4560	Spacer	1
12	322-12	Screw - Cap Hex. Hd.	1
13	62-4300	Pad - Anti-Skid	1
14	83-4840	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	62-3760	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
17	56-7870	Assembly - Wire Battery to Ground	2
18	32144-14	Screw - Self Tapping	2
19	322-7	Screw - Cap Hex. Hd.	3
20	67-0920	Guide - Belt	1
21	322-10	Screw - Cap Hex. Hd.	1
22	67-0962-01	Guard - Chain	1
23		Engine - 8 H.P. B & S	1
24	3296-29	Nut - Lock	5
28	3255-8	Washer - Lock	4
29	288-2	Cap - Pipe	1
30	289-34	Nipple - Pipe	1
31	2811-17	Elbow - Street	1
32	2812-1	Reducer	1
33	84-8470	Cap - Battery	6
*	88-4490	Reducer - Throttle	1


*Not Illustrated

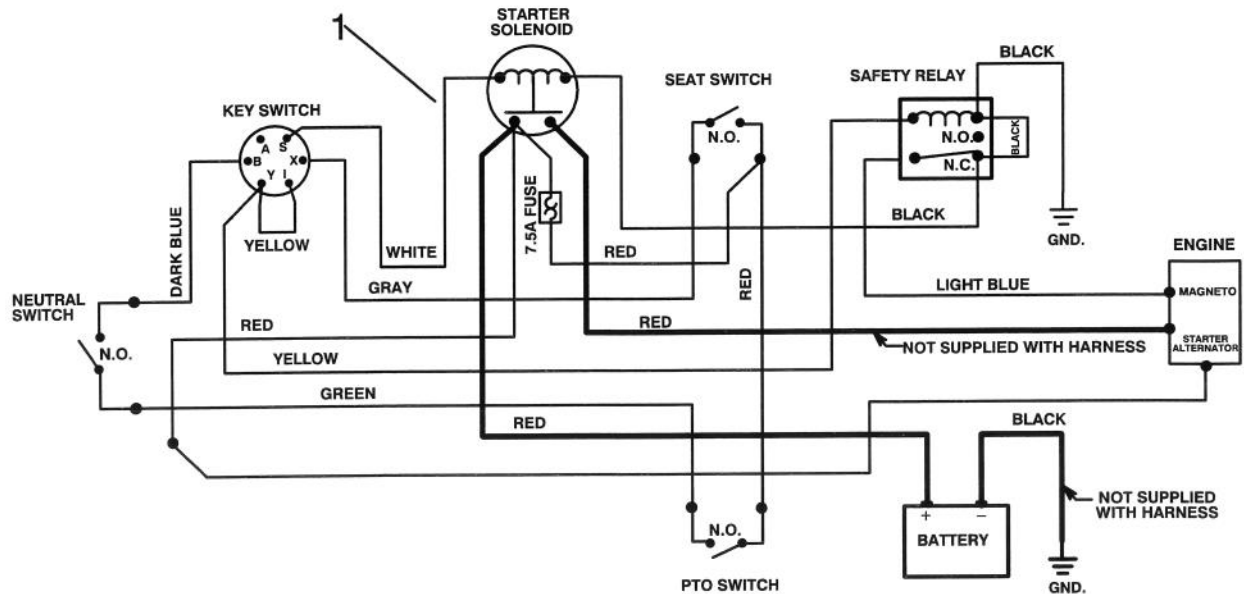

C-1578

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	88-9870	Harness - Wire	1

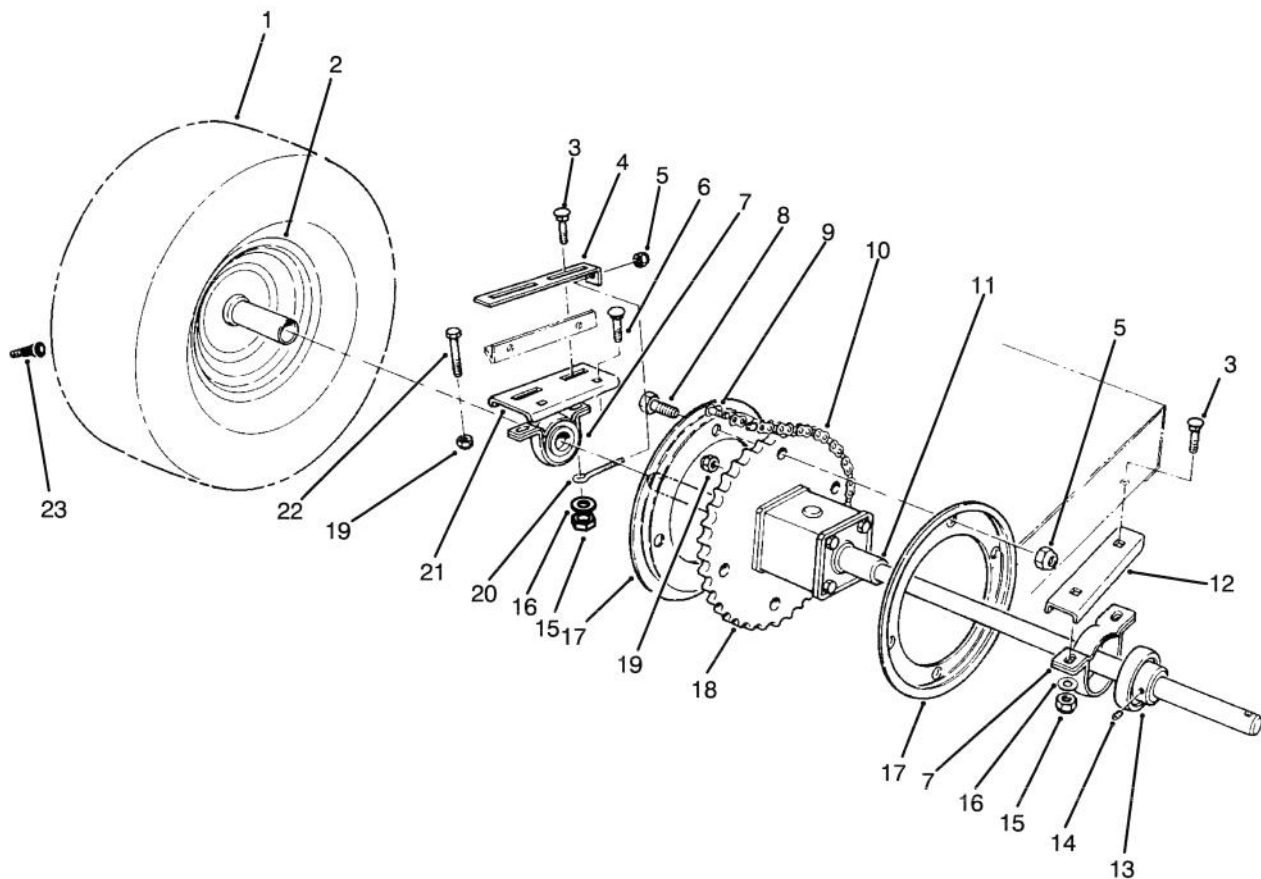


C-0008A

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231-115	Tire	2
2	44-9760	Rim	2
3	3231-4	Bolt - Carriage	2
4	61-9990	Plate - Adjusting	1
5	3296-42	Nut - Lock	5
6	3231-25	Bolt - Carriage	4
7	47-1480	Mount - Bearing	2
8	321-4	Screw - Cap Hex. Hd.	4
9	2710-11	Link - Connecting	1
10	67-0910	Chain	1
		(Incl. Ref. #9)	1
11	56-9960	Differential	1
12	66-6630-01	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47-1490	Bearing	2
		(Incl. Ref. #14)	
14	3245-32	Screw - Set	4
15	3296-39	Nut - Lock	6
16	3256-24	Washer - Flat	4
17	76-1580-03	Guide - Chain	2
18	76-4010	Sprocket	1
19	3296-29	Nut - Lock	6
20	61-9980	Screw - Adjusting	1
21	66-6620-01	Support R.H.	1
22	46-2511	Bolt - Axle	2
23	232-27	Valve Stem w/Cap	2
*	11-0410	Kit - Tire Chains (Optional)	1

*Not Illustrated

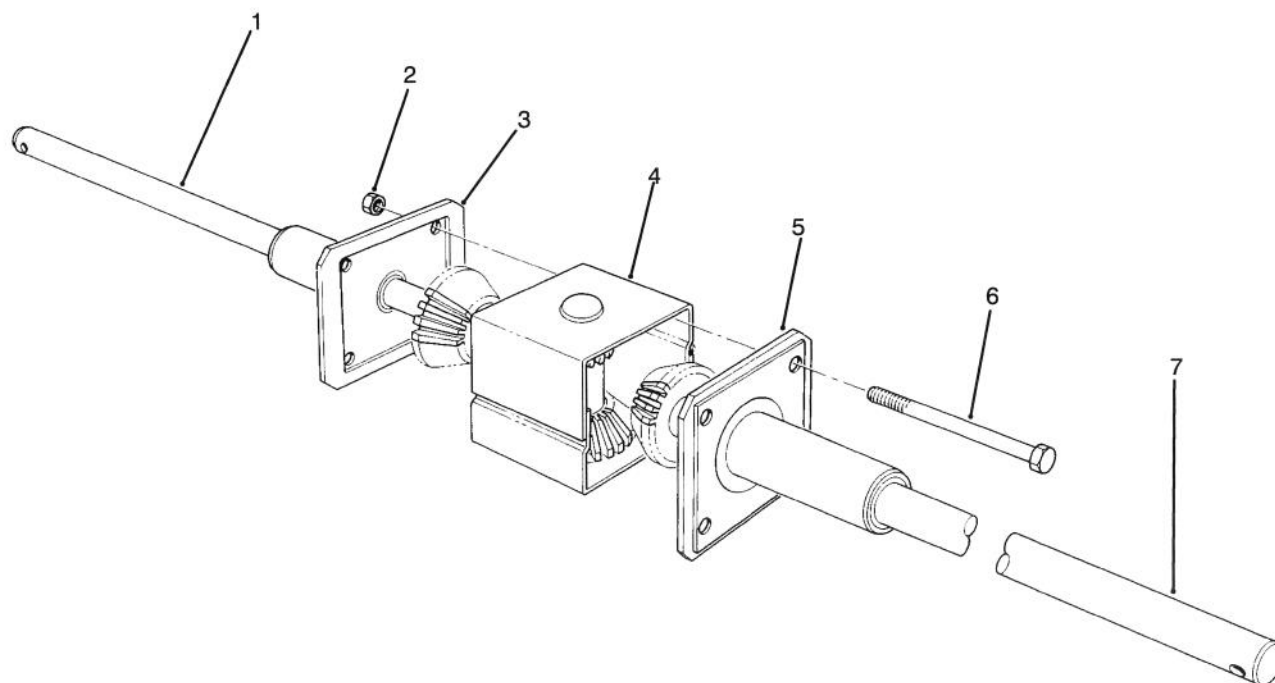


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1	5	55-7771	Cap - End, L.H.	1
2	32152-1	Nut - Lock	4	6	322-22	Screw - Cap Hex. Hd.	4
3	55-7770	Cap - End, R.H.	1	7	55-7763	Axle - L.H.	1
4	55-7780	Case - Gear, Transfer	1	*	56-9960	Differential - Complete	1

*Not Illustrated

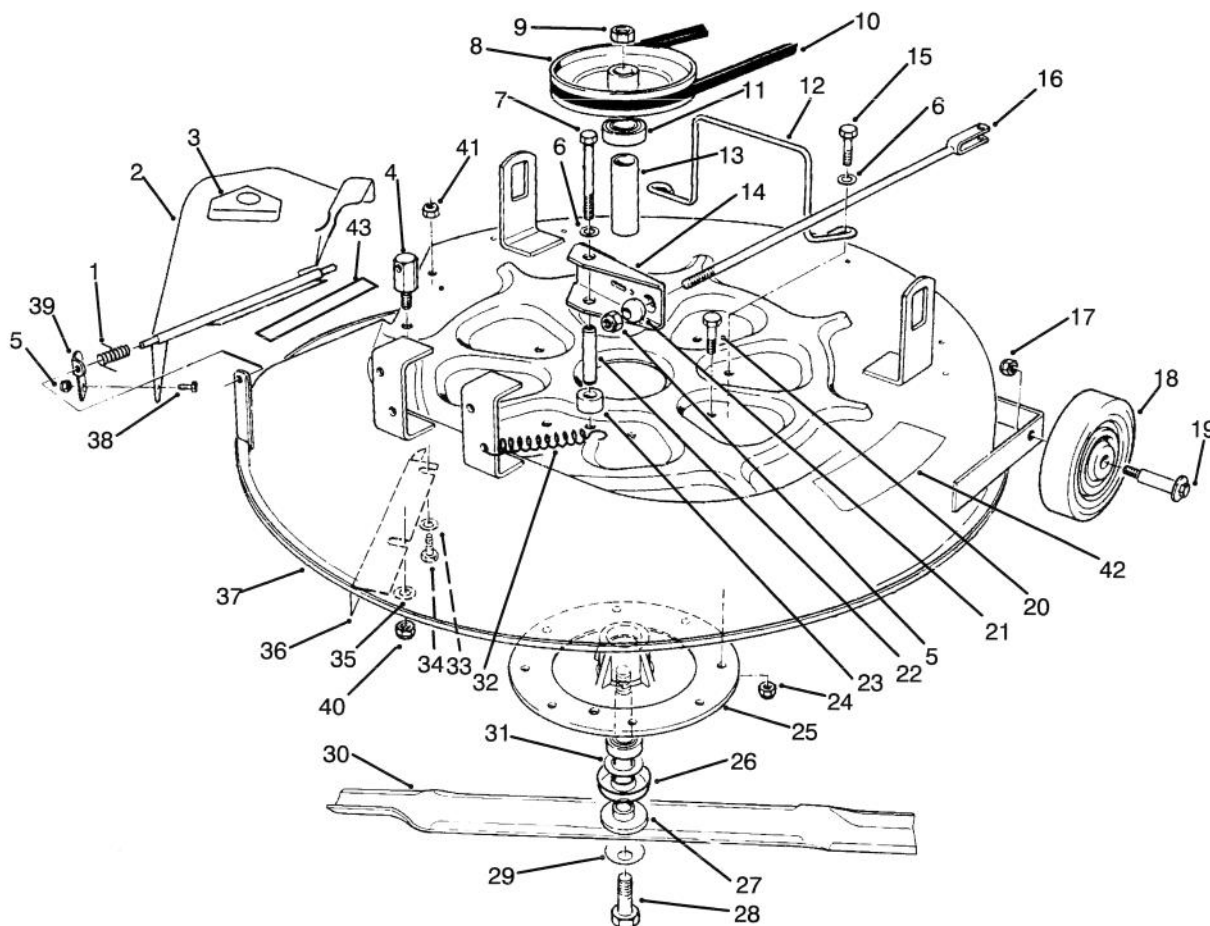


C-0001A

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1
2	67-1150-01	Deflector (Incl. Ref. #3)	1
3	54-9220	Decal - Danger	1
4	67-0140	Post - Pivot	1
5	3296-8	Nut - Lock	2
6	3256-23	Washer - Lock	3
7	322-19	Screw - Cap Hex. Hd.	1
8	80-4460	Pulley - Deck	1
9	3219-6	Nut - Hex.	1
10	67-1390	V-Belt	1
11	38-7820	Bearing - Ball	2
12	80-4520	Guide - Belt	1
13	62-3660	Spacer - Bearing	1
14	67-1370-01	Assy. - Brake, Deck	1
15	322-6	Screw - Cap Hex. Hd.	2
16	67-0570	Rod W.A. - Brake, Deck	1
17	3296-39	Nut - Lock	2
18	61-9760	Wheel - Deck	2
19	56-6590	Bolt - Wheel	2
20	322-3	Screw - Cap Hex. Hd.	6
21	67-0710	Ball - Swivel	1
22	67-0730	Post - Mount, Brake	1

Ref. No.	Part No.	Description	No. Used
23	76-3810	Spacer - Brake, Deck	1
24	3296-29	Nut - Lock	9
25	67-0970	Hub - Spindle	1
26	80-4360	Shield - Bearing	1
27	80-4340	Shaft - Spindle	1
28	26-0671	Bolt - Blade	1
29	3290-465	Washer - Belleville	1
30	67-0200	Blade	1
31	80-4380	Spacer - Spindle	1
32	67-1440	Spring - Brake	1
33	3256-22	Washer - Flat	1
34	3234-21	Screw - Cap Hex. Hd.	1
35	3256-24	Washer - Flat	1
36	67-0130-03	Baffle	1
37	16-2199	Deck (Incl. Ref. #42)	1
38	321-4	Screw - Cap Hex. Hd.	1
39	67-1600-01	Bracket - Deflector	1
40	3296-59	Nut - Lock	1
41	3296-42	Nut - Lock	1
42	76-4070	Decal - Danger	1
43	68-3650	Decal - Warning	1

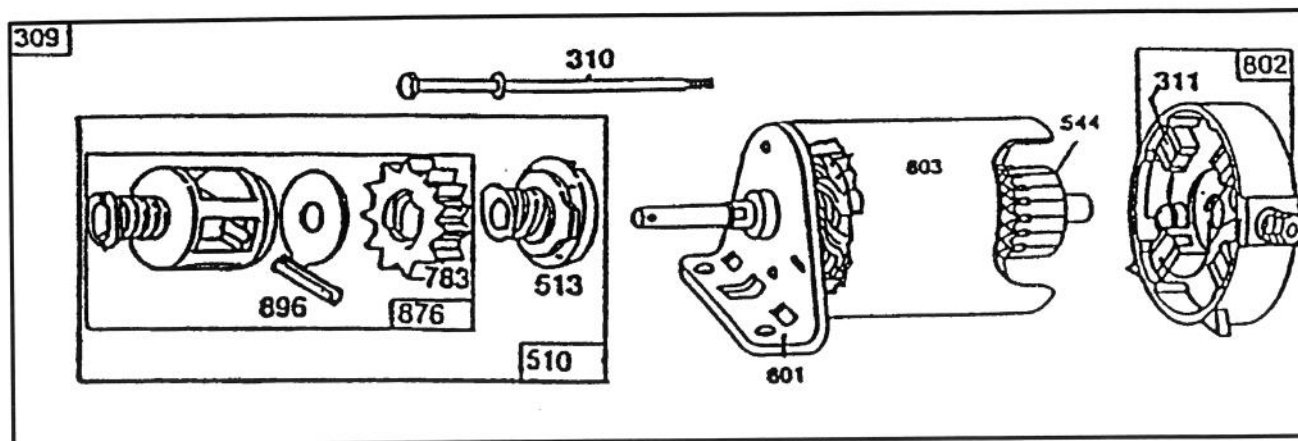


C-0784

STARTER – BRIGGS & STRATTON NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used
309	394805	Assembly – Motor & Drive	1
310	94003	Assembly – Thru Bolt	2
311	395538	Assembly – Brush	2
510	490421	Assembly – Drive (Incl. Ref. #513, 783, 876 & 896)	1
513	398003	Assembly – Clutch	1
544	390837	Assembly – Armature	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Assembly – End Cap	1
802	395537	Assembly – Commutator, End Cap	1
803	398159	Assembly – Housing (3-21/32" Long)	1
876	490467	Kit – Retainer	1
896	94288	Pin – Roll	1

BRIGGS & STRATTON MODEL NO. 191707-0121-01

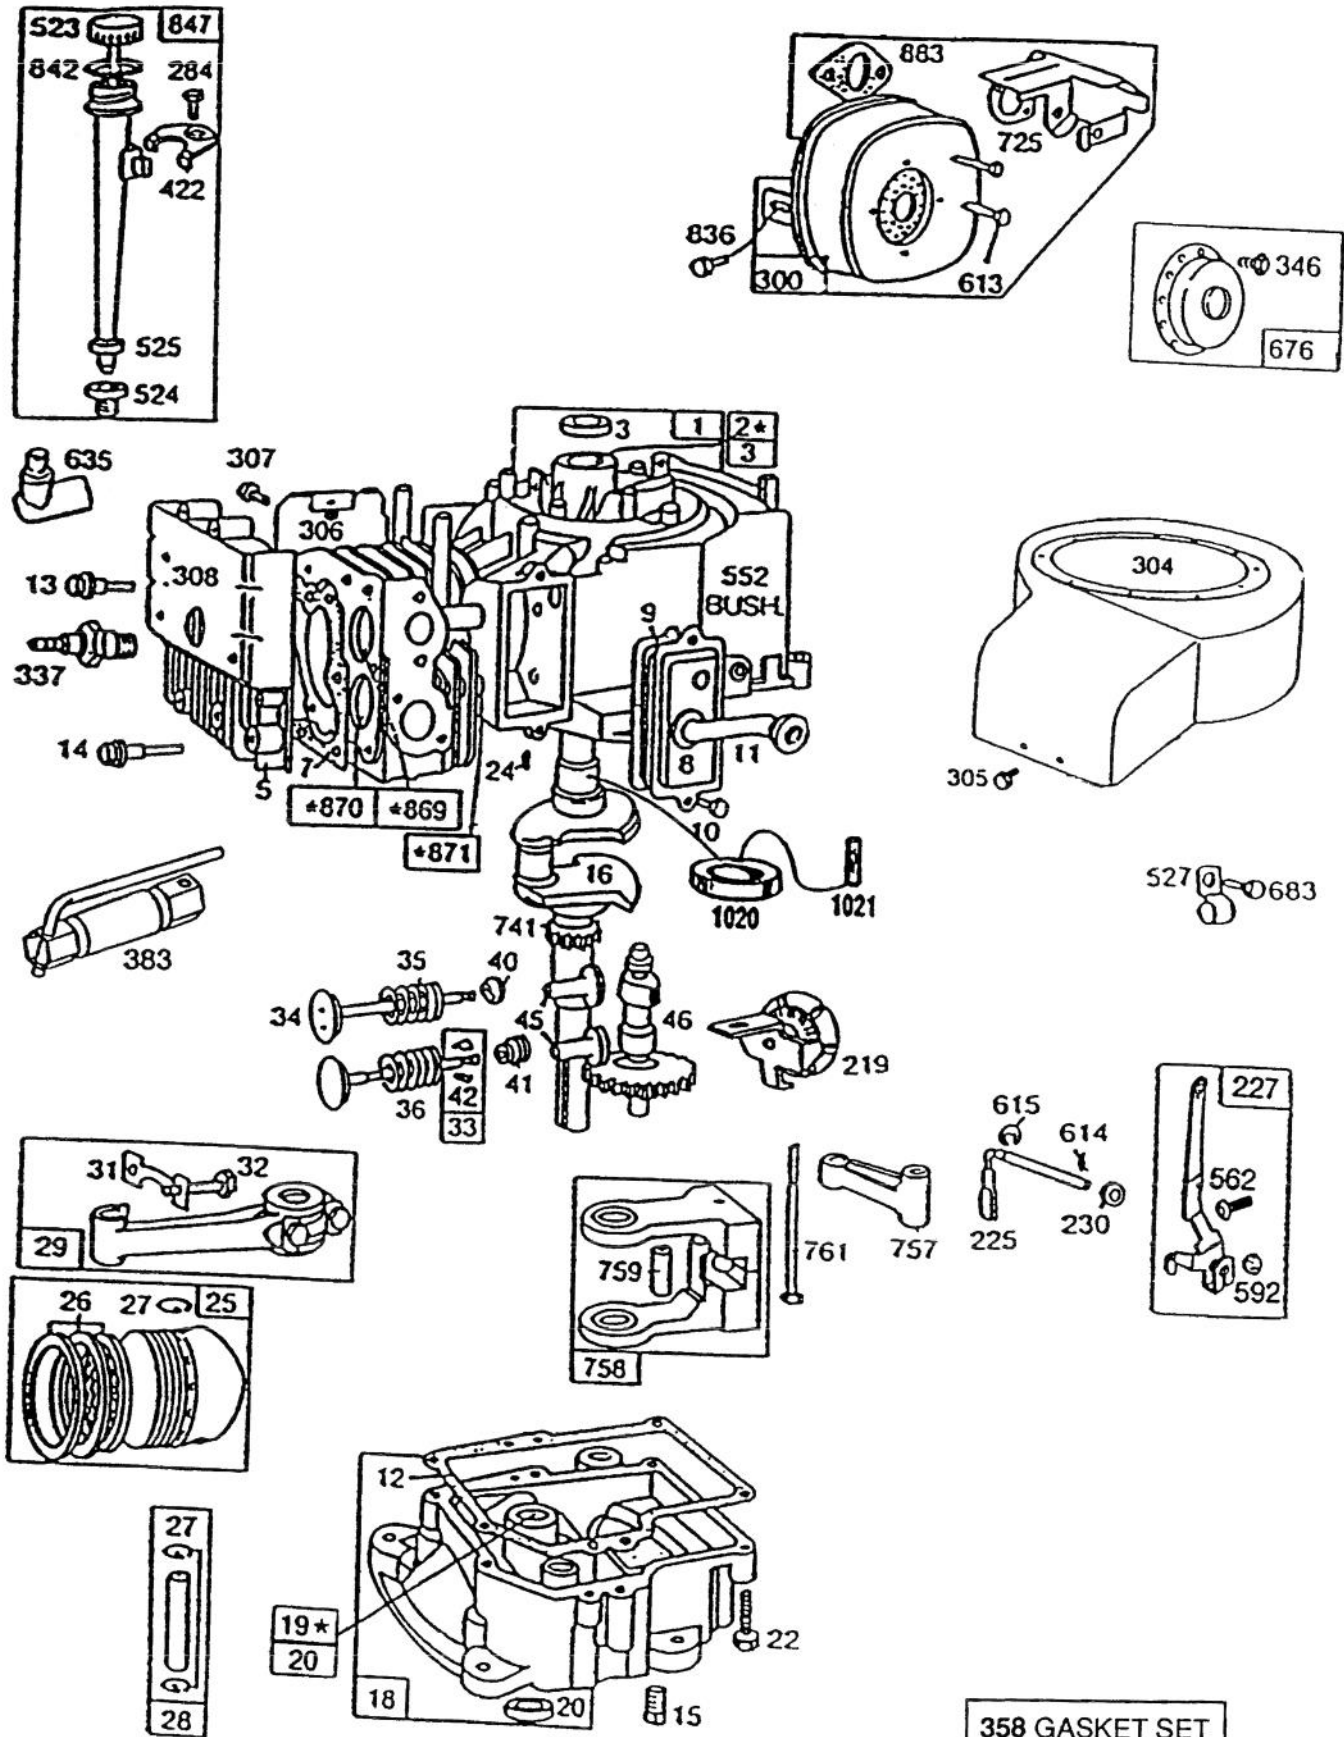

* REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


C-1172

BRIGGS & STRATTON MODEL NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	396269	Assembly - Cylinder	1	34	261055	Valve - Intake	1
2	399267	Bearing - Cylinder Note: Requires special tools for installation.	1	35	65906	Spring - Valve, Intake	1
3	294606	Seal - Oil	1	36	26828	Spring - Valve, Exhaust	1
5	212286	Head - Cylinder	1	40	221596	Retainer - Valve, Intake	1
*7	272163	Gasket - Head, Cylinder	1	41	292260	Rotocoil - Valve, Exhaust	1
8	391406	Assembly - Breather	1	42	93630	Retainer - Valve, Exhaust Rotocoil	2
*9	27803	Gasket - Cover, Valve	1	45	260933	Tappet - Valve	1
10	94621	Screw	1	46	211689	Gear - Cam	1
11	280005	Tube - Breather	1	225	231058	Crank - Gov. (1/4" Dia.)	1
*12	271701	Gasket - Cover, Crankcase 1/64" Thick	1	227	43935	Assy. Lever - Governor for 1/4" Dia. Crank	1
*	27876	Gasket - Cover, Crankcase .005" Thick	1	230	222450	Washer - Lever, Governor (1/4" Inside Diameter)	1
*	27877	Gasket - Cover, Crankcase .009" Thick	1	284	94419	Screw - Clamp, Mounting	1
13	94565	Screw - Head, Cylinder	1	300	398507	Muffler - Exhaust	1
14	93723	Screw - Head, Cylinder (3" Long)	1	304	494084	Housing - Blower	1
15	94239	Plug - Drain, Oil	1	305	94608	Screw - Blower Hsg., Sems	1
16	396876	Crankshaft Note: Order Part 94388 for timing gear pin replacement.	1	306	224543	Shield - Cylinder	1
18	392548	Base - Engine	1	307	93949	Screw - Shield, Cylinder	1
19	295963	Bushing - Base, Engine Note: Requires special tool for installation.	1	308	222636	Cover - Head, Cylinder	1
20	391086	Seal - Oil	1	337	802592	Plug - Spark	1
22	93585	Screw - Base, Mounting	1	346	93705	Screw	1
24	222698	Key - Flywheel	1	358	299577	Gasket Set	1
25	391673	Assy. - Piston, Std.	1	383	89838	Wrench - Spark Plug	1
	391674	Assy. - Piston, .010" O.S.	1	422	223394	Clamp - Tube, Oil Filler	1
	391675	Assy. - Piston, .020" O.S.	1	523	391840	Cap & Dipstick - Oil Filler	1
	391676	Assy. - Piston, .030" O.S.	1	524	68838	Seal - Tube, Filler	1
		PISTON RING SETS Note: For Chrome Piston Ring Set - Standard Size - Order No. 299743.		525	280133	Tube - Filler, Oil	1
26	391669	Ring Set - Piston, Std.	1	527	221428	Clamp	1
	391670	Ring Set - Piston, .010" O.S.	1	552	491986	Bushing - Crank, Gov.	1
	391671	Ring Set - Piston, .020" O.S.	1	562	92613	Bolt - Lever, Governor	1
	391672	Ring Set - Piston, .030" O.S.	1	592	231082	Nut - Hex.	1
27	68546	Lock - Piston Pin	1	613	94042	Screw - Muffler	1
28	295840	Assy. - Piston Pin, Std.	1	614	93306	Pin - Hair, Cotter	1
	295841	Assy. - Piston Pin, .005" O.S.	1	615	93307	Retainer - E-Ring	1
29	390402	Assy. - Rod, Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bore - Order No. 390773.	1	635	66538	Elbow - Plug, Spark	1
31	222114	Lock - Screw, Conn. Rod	1	676	395700	Deflector - Exhaust	1
32	92659	Screw - Connecting Rod	1	683	93572	Screw	1
33	390419	Valve - Exhaust	1	725	223540	Shield - Muffler	1
				741	262479	Gear - Timing	1
				757	212359	Link - Counterweight	1
				758	390172	Assy. - Counterweight	1
				759	298909	Pin - Counterweight	1
				761	93874	Screw - Counterweight	1
				836	93559	Screw	1
				842	270920	Seal - Cap, Filler	1
				847	392066	Filler Group - Oil	1
				869	211661	Seat - Valve, Intake (Std.)	1
				870	211661	Seat - Valve, Exhaust (Std.)	1
				871	231218	Guide - Exhaust or Intake Valve, See repair manual	1
				883	272309	Gasket - Pipe, Exhaust	1
				1020	261190	Eccentric	1
				1021	94160	Pin - Eccentric	1


*Included in Gasket Set - Part No. 299577.

BRIGGS & STRATTON MODEL NO. 191707-0121-01

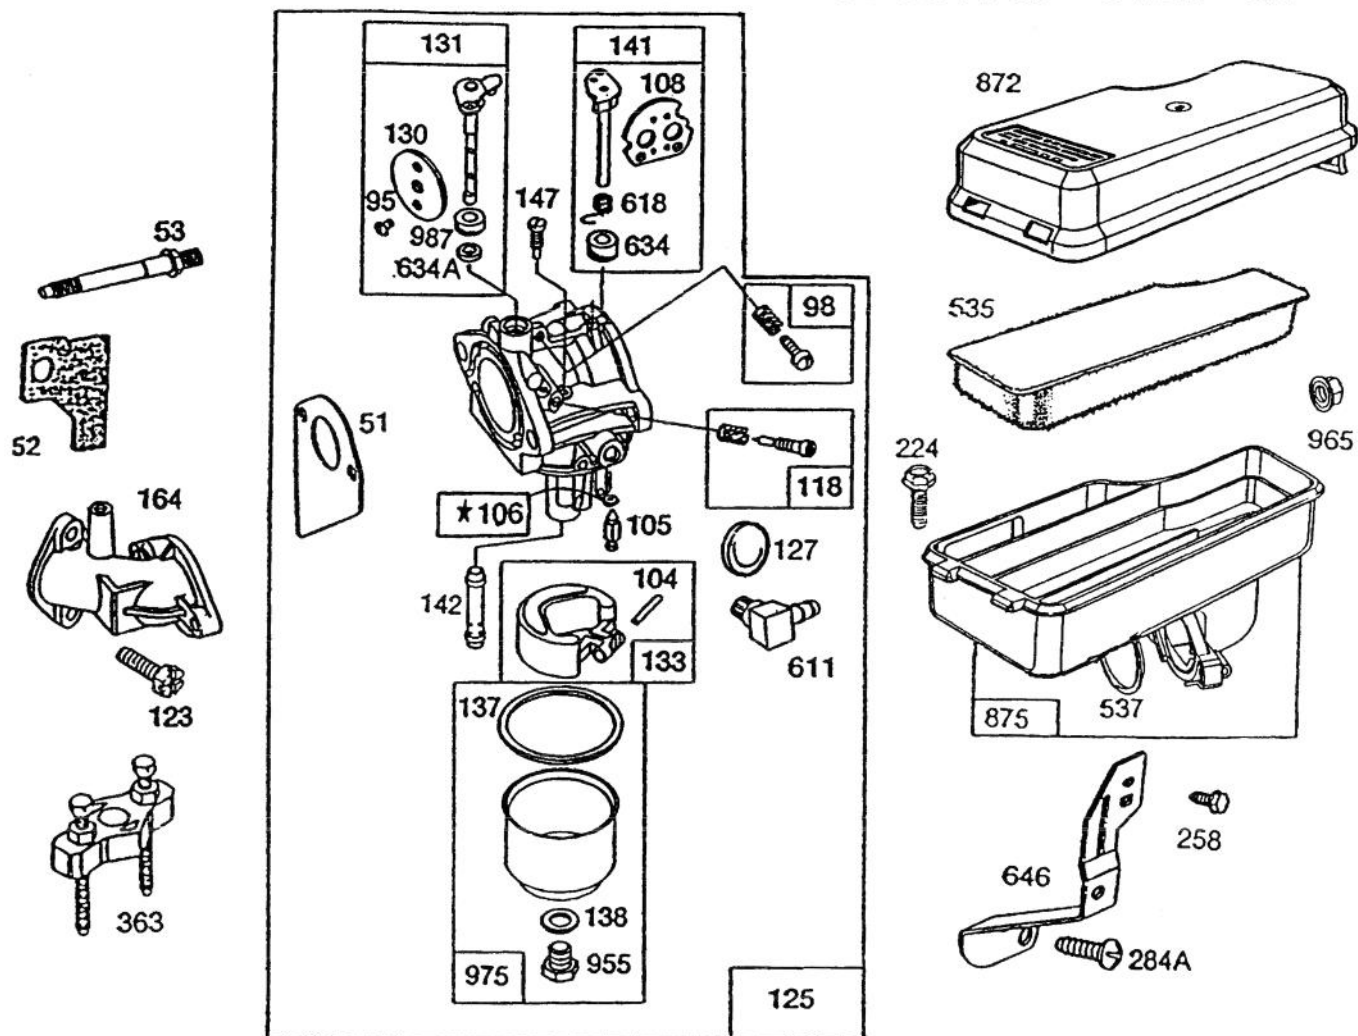

121 CARBURETOR OVERHAUL KIT

977 CARBURETOR GASKET SET

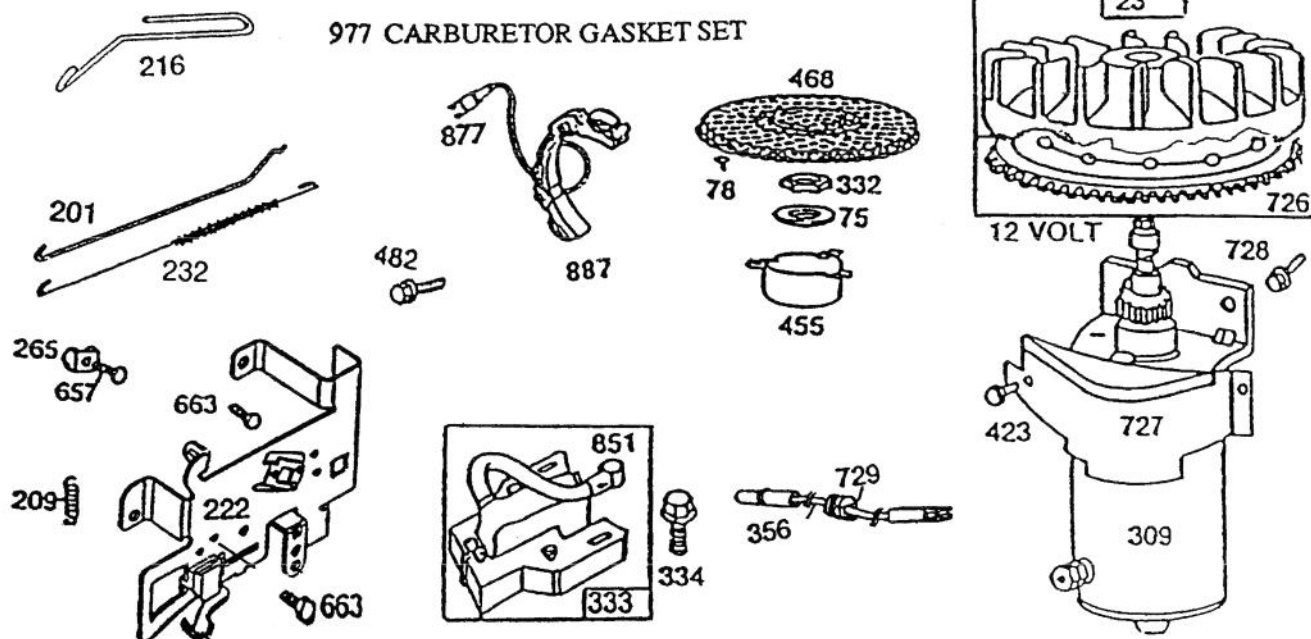

★ REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


BRIGGS & STRATTON MODEL NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
223	391983	Flywheel and Ring Gear Assy. - Magneto (Incl. Aluminum Ring Gear)	1			See Chart for Replacement Parts for Starting Motor on Illustrated Pages	1
*#51	272465	Gasket - Carburetor (Carb. to Elbow)	1	332	92284	Nut - Flywheel	1
‡52	270824	Gasket - Carb. Mtg.	1	333	398811	Armature Assembly	1
53	94637	Stud - Gasket Mtg.	1	334	93381	Screw - Armature Mtg. Sem	1
75	224061	Washer - Spring	1	356	494328	Wire - Ground	1
78	93805	Screw - Sem	1	363	19165	Puller - Flywheel	1
*95	94098	Screw - Throttle	1	423	94073	Screw - Sem	1
98	494382	Screw - Idle Speck	1	455	222561	Cup - Screen Mounting	1
*104	231789	Pin - Float Hinge	1	468	222562	Screen - Flush Rotating	1
*105	231790	Valve Assy. - Inlet Needle	1	482	93621	Screw - Sem	1
*106	281169	Inlet Valve Seat	1	535	272405	Element - Foam Air Cleaner	1
108	224540	Valve - Choke	1	537	281106	O-Ring - Air Cleaner	1
118	494383	Valve - Needle	1	611	494451	Fuel Inlet Tube	1
121	494880	Carburetor Overhaul Kit	1	618	262803	Spring - Choke Return	1
123	94616	Screw - Carburetor Mtg.	1	*634	281168	Seal - Choke Shaft	1
125	494894	Carburetor Assembly	1	*634A	281167	Washer - Throttle Shaft	1
*127		Plug - Welch (Kit Only)	1	646	224614	Brace - Air Cleaner	1
130	224668	Valve - Throttle	1	657	93496	Screw - Sem	1
131	494885	Shaft & Lever - Throttle	1	663	94419	Screw	1
133	494381	Float - Carburetor	1	726	392134	Gear - Ring (Aluminum) (Incl. Mtg. Parts)	1
*#137	281165	Gasket - Float Bowl	1	727	395405	Cover - Starter (Incl. Mtg. Screws)	1
*#138	281164	Washer - Float Bowl	1	728	93535	Screw - Sem	1
141	494380	Shaft & Lever - Choke	1	729	281159	Clip - Lead Wire	1
*142	494877	Nozzle - Carburetor	1	851	221798	Terminal - Ignition Cable	1
*147	231794	Screw - Nozzle	1	872	281108	Cover - Air Cleaner	1
164	213819	Carburetor Elbow	1	875	494745	Body - Air Cleaner	1
201	262769	Link - Governor	1	877	393814	Diode & Connector Assy.	1
209	260871	Spring - Governor	1	887	391529	Stator Assembly - Alternator (D.C.)	1
216	262768	Link - Choke	1	955	94642	Screw - Fuel Bowl	1
222	493896	Plate - Gov. Plate	1	965	94108	Nut - Lock	1
224	94513	Screw - Sem	1	975	494378	Bowl Assy. - Carburetor	1
232	262787	Spring - Governor Link	1	*987	281166	Seal - Throttle Shaft	1
258	94620	Screw - Hex. Tapping	1				
265	221535	Clamp - Casing	1				
284A	94326	Screw - Brace Mtg.	1				
309		Motor - Starting (12 Volt)	1				

*Included in Carburetor Overhaul Set - Part No. 494880.

#Included in Carburetor Gasket Set - Part No. 494385.

‡Included in Gasket Set - Part No. 299577.

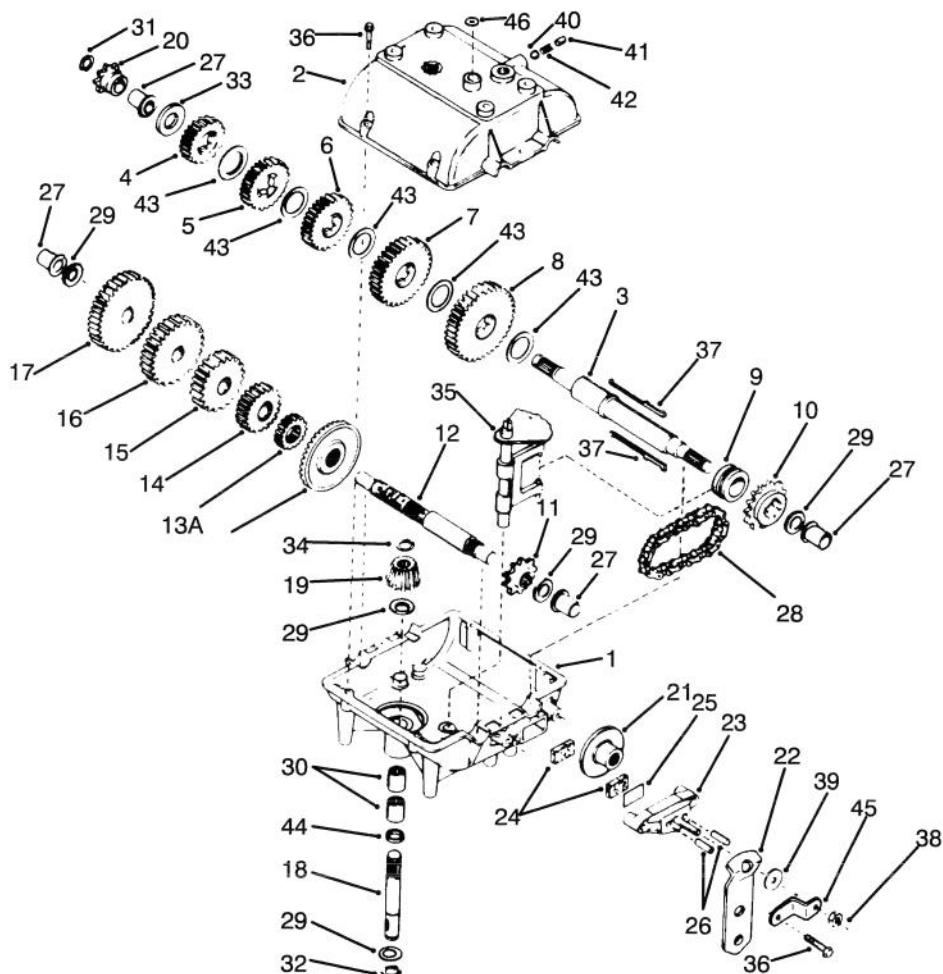

C-0441

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used
1	770061	Case - Transmission	1
2	772083	Cover - Transmission	1
3	776217	Shaft - Output	1
4	778121A	Gear - Spur (20 Teeth)	1
5	778122A	Gear - Spur (22 Teeth)	1
6	778123A	Gear - Spur (25 Teeth)	1
7	778124A	Gear - Spur (30 Teeth)	1
8	778125	Gear - Spur (35 Teeth)	1
9	784266	Collar - Shift	1
10	786083	Sprocket (18 Teeth)	1
11	786082	Sprocket (9 Teeth)	1
12	776134	Shaft - Counter	1
13	788137A	Gear - Bevel (42 Teeth)	1
13A	778136	Gear - Spur (15 Teeth)	1
14	778126A	Gear - Spur (20 Teeth)	1
15	778127A	Gear - Spur (25 Teeth)	1
16	778128A	Gear - Spur (28 Teeth)	1
17	778129A	Gear - Spur (30 Teeth)	1
18	776135	Shaft - Input	1
19	778113A	Bevel - Pinion, Input	1
20	786047	Sprocket (8 Teeth)	1
21	790003	Disk - Brake	1
22	790008A	Lever - Brake	1
23	790025	Holder - Pad, Brake	1

Ref. No.	Part No.	Description	No. Used
24	790006	Pad - Brake	2
25	790007	Plate - Pad, Brake	1
26	786026	Pin - Dowel	2
27	780105A	Bushing - Flange	4
28	786081	Chain - Roller (No. 41 Chain, 24 Links)	1
29	780072	Washer - Thrust	5
30	780086	Bearing - Needle	2
31	792072	Ring - Retaining	1
32	792035	Ring - Retaining	1
33	780109	Washer	1
34	788040	Ring - Retaining	1
35	784267	Assy. Rod & Fork - Shift	1
36	792073	Screw - Thread Forming	8
37	792089A	Key	2
38	792075	Nut - Lock	1
39	792076	Washer	1
40	792077	Ball - Steel	1
41	792078	Screw - Set	1
42	792079	Spring	1
43	780108	Washer - Thrust	5
44	792001	O-Ring	1
45	786086	Bracket - Lever, Brake	1
46	788069	Seal - Square Cut	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
116397	Relay	5 17 1	67-0430	Rod - Clutch	2 6 1
147665	Screw - Tapping	6 42 2	67-0440	Spacer - Steering	2 32 1
11-0410	Kit - Tire Chains (Optional)	10 * 1	67-0450-01	Frame W.A. - Front	2 25 1
12-5820	Pulley - Idler, Traction	6 25 1	67-0520-01	Channel - R.H.	2 3 1
12-9020	Retainer - Belt	6 21 1	67-0530-01	Channel - L.H.	2 24 1
13-6049	Kit - Loose parts	2 * 1	67-0540-03	Tube W.A. - Pivot	6 6 1
16-2199	Deck	12 37 1	67-0570	Rod W.A. - Brake, Deck	12 16 1
18-2970	R-Clamp	3 4 1	67-0600-03	Lever W.A. - Deck Engage	6 45 1
19-1470	Bolt - Shoulder	1 18 1	67-0640	Handle - Deck Engage	6 46 1
19-1610	Lever - Brake, Parking	1 19 1	67-0660	Bracket - Mount, Shifter	7 65 1
19-1970	Spring - Brake, Parking	1 13 1	67-0670	Bracket - Engage, Deck	7 62 1
19-2200	Tip - Brake, Parking	1 20 1	67-0690-03	Flat - Deck Engage	6 3 1
20-3220	Washer - Flat	7 66 2	67-0710	Ball - Swivel	12 21 1
23-0660	Switch - Ignition	5 36 1	67-0730	Post - Mount, Brake	12 22 1
26-0671	Bolt - Blade	12 28 1	67-0750-01	Bracket - Mount, Spring	6 43 1
26-6700	Spring - Return, Brake	6 10 1	67-0790-03	Support W.A. - Seat	5 10 1
26-9530	Washer - Pivot	1 8 1	67-0800-01	Spindle - R.H.	4 15 1
28-0540	Bolt - Shoulder	5 18 1	67-0810-01	Spindle - L.H.	4 12 1
28-2480	Washer - Flat	4 2 2	67-0830-03	Shaft W.A. - Steering	2 26 1
28-8010	Spring	12 1 1	67-0850	Bushing - Steering	2 29 2
38-1420	Switch - Seat	3 3 1	67-0860	Washer - Steering	2 30 1
38-7820	Bearing - Ball	12 11 2	67-0870	Bolt - Shoulder	5 22 2
40-8200	Switch - Micro	5 27 1	67-0870	Bolt - Shoulder	2 27 2
44-7030	Tread - Foot Rest	1 3 2	67-0880	Assembly - Tie Rod	4 11 2
44-7140-01	Mount - Bearing, Axle	2 2 1	67-0900	Belt - Traction	6 39 1
44-9760	Rim	10 2 2	67-0910	Chain	10 10 1
46-2511	Bolt - Axle	10 22 2	67-0920	Guide - Belt	8 20 1
46-2511	Bolt - Mounting, Axle	2 19 2	67-0920	Guide - Belt	6 35 1
47-1480	Mount - Bearing	10 7 2	67-0930	Guide R.H. - Belt, Engine	6 8 1
47-1490	Bearing	10 13 2	67-0940	Guide L.H. - Belt, Engine	6 14 1
47-1910	Solenoid	5 31 1	67-0950	Strap - Tank, Gas	3 6 2
47-2964	Hose - Gas	3 9 2	67-0962-01	Guard - Chain	8 22 1
47-2986	Hose - Gas	3 5 1	67-0970	Hub - Spindle	12 25 1
49-3241	Wheel - Steering	2 34 1	67-0990-01	Axle - Front	4 9 1
54-9220	Decal - Danger	12 3 1	67-1030	Cover - Panel, Control	5 42 1
55-3576	Assembly - Cap, Gas	3 8 1	67-1070-01	Body W.A. - Front	1 15 1
55-7101	Tower	1 22 1	67-1090-01	Support W.A. - Seat	5 29 1
55-7762	Axle - R.H.	11 1 1	67-1130-03	Pedal - Brake & Clutch	1 14 2
55-7763	Axle - L.H.	11 7 1	67-1150-01	Deflector	12 2 1
55-7770	Cap - End, R.H.	11 3 1	67-1241-01	Base - Seat	3 2 1
55-7771	Cap - End, L.H.	11 5 1	67-1270	Decal - Panel, Control	5 39 1
55-7780	Case - Gear, Transfer	11 4 1	67-1330-03	Lever - Brake, Bellcrank	1 10 1
56-2540	Tube - Drain	8 6 1	67-1340	Rod - Brake, Transmission	1 9 1
56-6360	Filter	3 10 1	67-1350	Rod - Front, Brake	1 12 1
56-6590	Bolt - Wheel	12 19 2	67-1370-01	Assy. - Brake, Deck	12 14 1
56-7620	Lever - Shift	7 52 1	67-1390	V-Belt	12 10 1
56-7710	Hold Down - Battery	8 7 1	67-1400	Transmission	7 49 1
56-7720	Post - Hold Down, Battery	8 5 1	67-1430	Spring - Compression	1 7 1
56-7730	Spring	7 57 1	67-1440	Spring - Brake	12 32 1
56-7740	Spacer	7 58 1	67-1450	Spring - Extension	1 11 1
56-7870	Assembly - Wire	8 17 2	67-1460	Washer - Flat	2 15 2
56-9870	Pulley - Idler, Deck	6 29 1	67-1480	Brace - Support, Seat	5 8 2
56-9960	Differential	10 11 1	67-1500-03	Bar - Stand	5 5 1
56-9960	Differential - Complete	11 * 1	67-1510-03	Brace - Stop, Deck	2 13 2
61-9760	Wheel - Deck	12 18 2	67-1530	Assembly - Pin, Clevis	7 70 1
61-9780	Cap - Hub	4 1 2	67-1590	Bracket - Brake Return	1 6 1
61-9980	Screw - Adjusting	10 20 1	67-1600-01	Bracket - Deflector	12 39 1
61-9990	Plate - Adjusting	10 4 1	67-9170	Spring	6 31 1
62-3660	Spacer - Bearing	12 13 1	68-3650	Decal - Warning	12 43 1
62-3760	Screw - Cap Hex. Hd.	8 16 1	68-8370	Link - Deck Engage	6 4 1
62-4300	Pad - Anti-Skid	8 13 1	68-8380	Spacer - Stop, Deck	2 17 2
63-8360	Key	5 40 2	68-9950	Spring - Traction	6 15 1
65-2920	Pad - Pedal	1 17 2	71-8310	Spring - Prop, Seat	5 1 1
66-6620-01	Support R.H.	10 21 1	76-1580-03	Guide - Chain	10 17 2
66-6630-01	Support L.H.	10 12 1	76-1620	Decal - Instruction	1 1 1
66-6640	Control - Throttle	5 34 1	76-3790-01	Lever W.A. - H.O.C.	2 18 2
66-6680	Seat	3 1 1	76-3810	Spacer - Brake, Deck	12 23 1
66-6920	Pad - Isolator	3 17 2	76-3820	Anchor - Guide, Belt	7 75 2
67-0010-01	Lift W.A. - Front, Deck	2 5 1	76-3840	Decal - Toro L.H.	5 12 1
67-0050-01	Tube W.A. - Support, Rear	2 11 1	76-3850	Decal - Front	5 14 1
67-0080	Link - H.O.C.	5 23 1	76-3860	Decal	7 77 1
67-0130-03	Baffle	12 36 1	76-3870	Decal	1 21 1
67-0140	Post - Pivot	12 4 1	76-3880	Decal - Toro R.H.	5 * 1
67-0200	Blade	12 30 1	76-3890-01	Bracket - Link, H.O.C.	2 10 1
67-0231-01	Body W.A. - Rear	5 13 1	76-3910	Decal - H.O.C. Deck Engage.	5 24 1
67-0270	Handle W.A. - H.O.C.	5 21 1	76-3930	Decal - Noise	8 2 1
67-0330-03	Idler - Plate, Mount	6 30 1	76-3940-03	Lever W.A. - Shift	7 54 1
67-0360-03	Bracket - Arm, Idler	6 27 1	76-3970	Spacer - Pivot	7 69 1
67-0400	Mount - Pivot	6 19 1	76-4010	Sprocket	10 18 1
67-0410	Spacer - Pivot	6 16 1	76-4070	Decal - Danger	12 42 1
67-0420-03	Plate - Mount, Idler	6 18 1	76-4080	Decal	2 36 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-4090-01	Plate - Engine	6 13 1	3254-5	Washer - Lock, Int. Tooth	5 37 1
76-4660	Spring	7 76 1	3255-7	Washer - Lock, Int. Tooth	8 1 1
80-2600	Battery 12V	8 8 1	3255-7	Washer - Lock, Int. Tooth	5 15 2
80-4330	Prop - Seat	5 32 1	3255-8	Washer - Lock	8 28 4
80-4340	Shaft - Spindle	12 27 1	3256-14	Washer - Flat	5 45 1
80-4360	Shield - Bearing	12 26 1	3256-22	Washer - Flat	5 4 1
80-4380	Spacer - Spindle	12 31 1	3256-22	Washer - Flat	12 33 1
80-4460	Pulley - Deck	12 8 1	3256-22	Washer - Flat	7 61 5
80-4520	Guide - Belt	12 12 1	3256-23	Washer - Flat	5 6 4
80-4550	Rod - Base, Seat	5 33 1	3256-23	Washer - Flat	8 3 4
80-4560	Spacer	8 11 1	3256-23	Washer - Flat	6 9 3
80-4580	Tank - Gas	3 7 1	3256-23	Washer - Flat	3 15 8
82-6450	Pulley - Transmission	6 40 1	3256-23	Washer - Lock	12 6 3
83-4840	Pulley - Engine	8 14 1	3256-24	Washer - Flat	10 16 4
84-8470	Cap - Battery	8 33 6	3256-24	Washer - Flat	6 22 3
88-4490	Reducer - Throttle	8 * 1	3256-24	Washer - Flat	12 35 1
88-9810-03	Gate - Shift	7 50 1	3256-25	Washer - Flat	8 15 1
88-9840	Insert - Wheel, Steering	2 35 1	3256-26	Washer - Flat	4 13 1
88-9870	Harness - Wire	9 1 1	3256-29	Washer - Flat	2 21 2
88-9930	Switch - Micro	7 63 1	3256-55	Washer - Fender	7 48 2
217-80	Rim	4 5 2	3257-23	Key	6 41 1
218-461	Nut - Hex.	5 38 1	3272-6	Pin - Cotter	6 2 1
231-115	Tire	10 1 2	3272-6	Pin - Cotter	2 9 2
231-116	Tire	4 3 2	3272-12	Pin - Cotter	4 18 2
232-27	Valve Stem w/Cap	4 17 2	3272-23	Pin - Cotter	2 20 2
232-27	Valve Stem w/Cap	10 23 2	3274-4	Pin - Cotter	5 43 1
233-22	Knob	5 25 1	3274-4	Pin - Cotter	6 32 1
233-22	Knob	7 47 1	3290-134	Screw - Cap Mach. Hd.	5 46 1
233-48	Knob	7 55 1	3290-250	Pin - Hair, Cotter	2 22 1
233-59	Knob	5 35 1	3290-250	Pin - Hair, Cotter	1 16 2
2412-98	Clamp - Hose	3 11 5	3290-313	Screw - Pan Head	5 26 2
251-210	Bearing	4 16 4	3290-347	Nut - U-Type	1 5 4
256-90	Bushing	6 5 3	3290-354	Nut - Double	5 28 1
256-155	Bushing	6 28 1	3290-354	Nut - Double	7 74 1
2710-11	Link - Connecting	10 9 1	3290-355	Pin - Hair, Cotter	2 14 2
282-27	Clevis	2 7 1	3290-378	Tie - Cable	3 13 1
282-27	Clevis	7 71 1	3290-413	Washer - Belleville	5 19 7
283-67	Pin - Clevis	6 33 1	3290-413	Washer - Belleville	2 28 4
288-2	Cap - Pipe	8 29 1	3290-456	Washer - Belleville	7 68 2
289-34	Nipple - Pipe	8 30 1	3290-465	Washer - Belleville	12 29 1
2811-17	Elbow - Street	8 31 1	3290-478	Washer - Belleville	7 64 2
2812-1	Reducer	8 32 1	3296-2	Nut - Lock	5 44 1
302-67	Fitting - Grease	4 4 4	3296-4	Nut - Lock	4 8 4
321-4	Screw - Cap Hex. Hd.	10 8 4	3296-8	Nut - Lock	12 5 2
321-4	Screw - Cap Hex. Hd.	8 9 2	3296-25	Nut - Lock	4 14 1
321-4	Screw - Cap Hex. Hd.	6 17 2	3296-29	Nut - Lock	1 2 5
321-4	Screw - Cap Hex. Hd.	12 38 1	3296-29	Nut - Lock	5 2 11
321-8	Screw - Cap Hex. Hd.	7 59 1	3296-29	Nut - Lock	2 4 16
321-15	Screw - Cap Hex. Hd.	7 56 1	3296-29	Nut - Lock	6 7 8
322-3	Screw - Cap Hex. Hd.	2 1 6	3296-29	Nut - Lock	3 12 4
322-3	Screw - Cap Hex. Hd.	5 9 4	3296-29	Nut - Lock	10 19 6
322-3	Screw - Cap Hex. Hd.	3 14 4	3296-29	Nut - Lock	12 24 9
322-3	Screw - Cap Hex. Hd.	12 20 6	3296-29	Nut - Lock	8 24 5
322-3	Screw - Cap Hex. Hd.	6 34 5	3296-39	Nut - Lock	6 1 2
322-5	Screw - Cap Hex. Hd.	5 7 4	3296-39	Nut - Lock	2 12 5
322-6	Screw - Cap Hex. Hd.	6 11 1	3296-39	Nut - Lock	10 15 6
322-6	Screw - Cap Hex. Hd.	12 15 2	3296-39	Nut - Lock	12 17 2
322-7	Screw - Cap Hex. Hd.	8 19 3	3296-39	Nut - Lock	5 20 1
322-10	Screw - Cap Hex. Hd.	8 21 1	3296-42	Nut - Lock	10 5 5
322-10	Screw - Cap Hex. Hd.	6 37 1	3296-42	Nut - Lock	6 20 5
322-12	Screw - Cap Hex. Hd.	8 12 1	3296-42	Nut - Lock	5 30 2
322-14	Screw - Cap Hex. Hd.	2 23 2	3296-42	Nut - Lock	12 41 1
322-19	Screw - Cap Hex. Hd.	12 7 1	3296-59	Nut - Lock	6 23 1
322-22	Screw - Cap Hex. Hd.	11 6 4	3296-59	Nut - Lock	12 40 1
323-8	Screw - Cap Hex. Hd.	6 26 1	32103-14	Nut - Wing	8 4 1
323-10	Screw - Cap Hex. Hd.	2 16 2	32103-22	Nut - Wing	8 10 2
323-10	Screw - Cap Hex. Hd.	6 24 1	32104-110	Screw - Cap Hex. Hd.	1 4 4
329-4	Screw - Cap Hex. Hd.	7 53 1	32120-64	Ring - Retaining	6 38 1
3218-1	Nut - Jam	5 16 2	32121-32	Pin - Roll	2 31 1
3218-2	Nut - Jam	7 72 1	32121-78	Pin - Roll	2 33 1
3219-6	Nut - Hex.	12 9 1	32144-14	Screw - Self Tapping	8 18 2
3230-2	Bolt - Carriage	6 12 1	32144-14	Screw - Wash. Hd., Tap.	7 51 4
3230-3	Bolt - Carriage	5 3 2	32144-26	Screw - Thread Forming	7 73 1
3230-20	Bolt - Carriage	5 11 1	32144-42	Screw - Hex. Hd. Tapping	5 41 4
3230-20	Bolt - Carriage	3 16 6	32144-70	Screw - Hex. Hd. Tapping	6 44 1
3231-4	Bolt - Carriage	10 3 2	32151-48	Ring - Retaining	4 6 2
3231-25	Bolt - Carriage	10 6 4	32151-62	Ring - Retaining	7 67 1
3234-21	Screw - Cap Hex. Hd.	12 34 1	32152-1	Nut - Lock	11 2 4
3245-32	Screw - Set	10 14 4			
3253-3	Washer - Lock	7 60 1			
3253-4	Washer - Lock	6 36 1			

*Not Illustrated