



22in Recycler[®] Lawn Mower

Model No. 20332C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute and Rear Door Assembly	 3	Air Cleaner Assembly Briggs and Stratton	
Front Axle Assembly	 4	126T02-0216-B1	 13
Engine and Blade Assembly	 5	Governor Assembly Briggs and Stratton	
Rear Axle and Transmission Assembly	 6	126T02-0216-B1	 14
Handle Assembly	 7	Muffler and Fuel Tank Assembly Briggs and	
Rear Bag Assembly	 8	Stratton 126T02-0216-B1	 15
Cylinder Assembly Briggs and Stratton		Blower Housing Assembly Briggs and Stratton	
126T02-0216-B1	 9	126T02-0216-B1	 16
Crankshaft Assembly Briggs and Stratton		Starter Assembly Briggs and Stratton 126T02-	
126T02-0216-B1	 10	0216-B1	 17
Crankcase Assembly Briggs and Stratton		Engine Gasket Set Briggs and Stratton	
126T02-0216-B1	 11	126T02-0216-B1	 18
Carburetor Assembly Briggs and Stratton		Carburetor Overhaul Kit Briggs and Stratton	
126T02-0216-B1	 12	126T02-0216-B1	 19
		Attachments and Accessories List	 20


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHE. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |

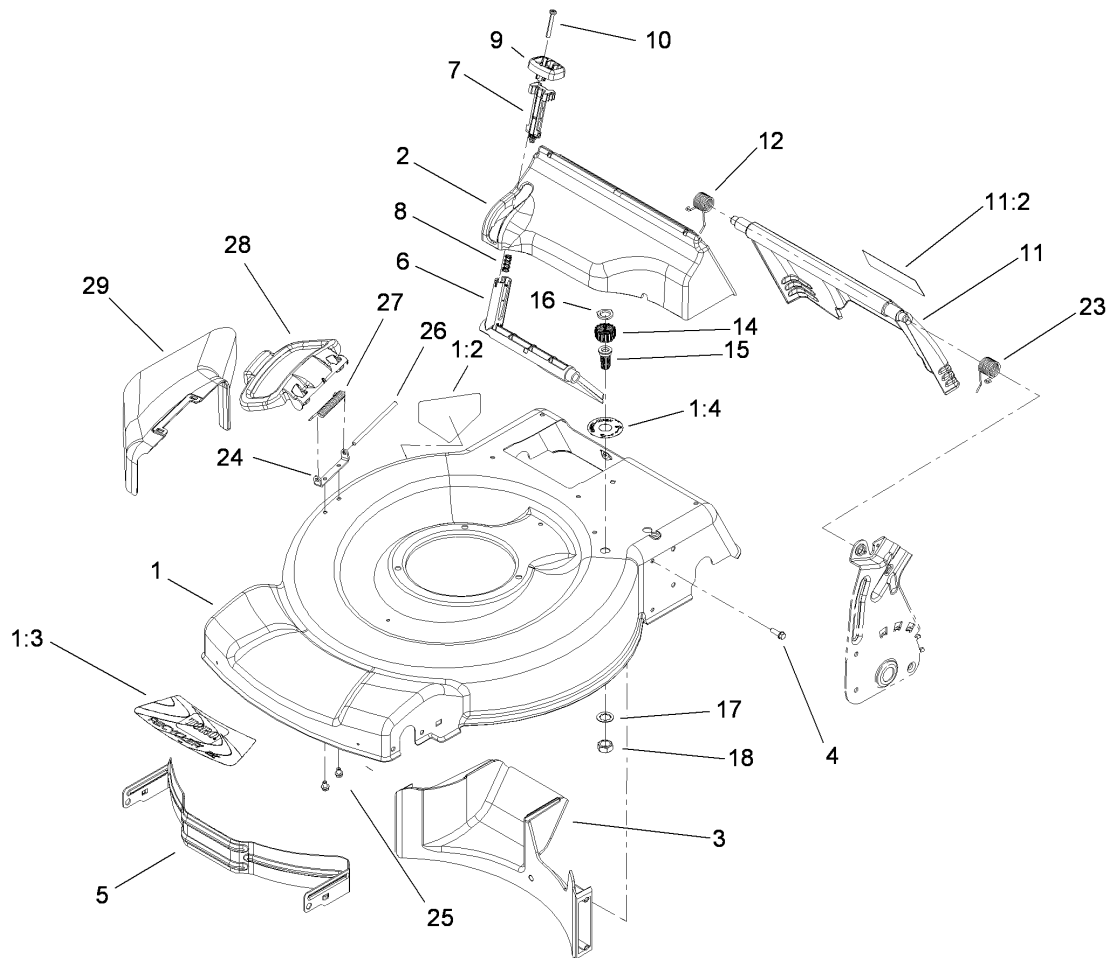


Deck, Side Chute and Rear Door Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	117-1084	1	Housing ASM	26	99-5291	1	Rod-Cover
1:2	94-8072	1	Decal-Danger	27	99-5293	1	Spring-Torsion
1:3	115-4676	1	Decal-Recycler	28	115-8449	1	Deflector-Side
1:4	112-8867	1	Decal	29	115-8447	1	Chute-Discharge, Side
2	115-4677	1	Chute-Recycle				
3	114-7961	1	Baffle-Rear				
4	46-8091	9	Screw-HWH				
5	114-7963-01	1	Baffle-Front				
6	114-7960	1	Deflector-Recycle				
7	114-7959	1	Latch-Recycle				
8	117-1031	1	Spring-Compression				
9	114-7958	1	Knob-Recycle				
10	32104-120	2	Screw-PPH				
11	114-7992	1	Rear Door ASM				
11:2	114-7982	1	Decal-Warning				
12	114-7924	1	Spring-Torsion				
14	112-6401	1	Coupling-Hose, Washout Port				
15	112-6400	1	Port-Washout				
16	112-6438	1	Washer-Seal, Washout Port				
17	3254-5	1	Washer-Tooth				
18	3218-6	1	Nut-Jam				
23	115-2859	1	Spring-Torsion				
24	112-6416	1	Bracket-Cover				
25	99-8445	2	Screw-HWH				

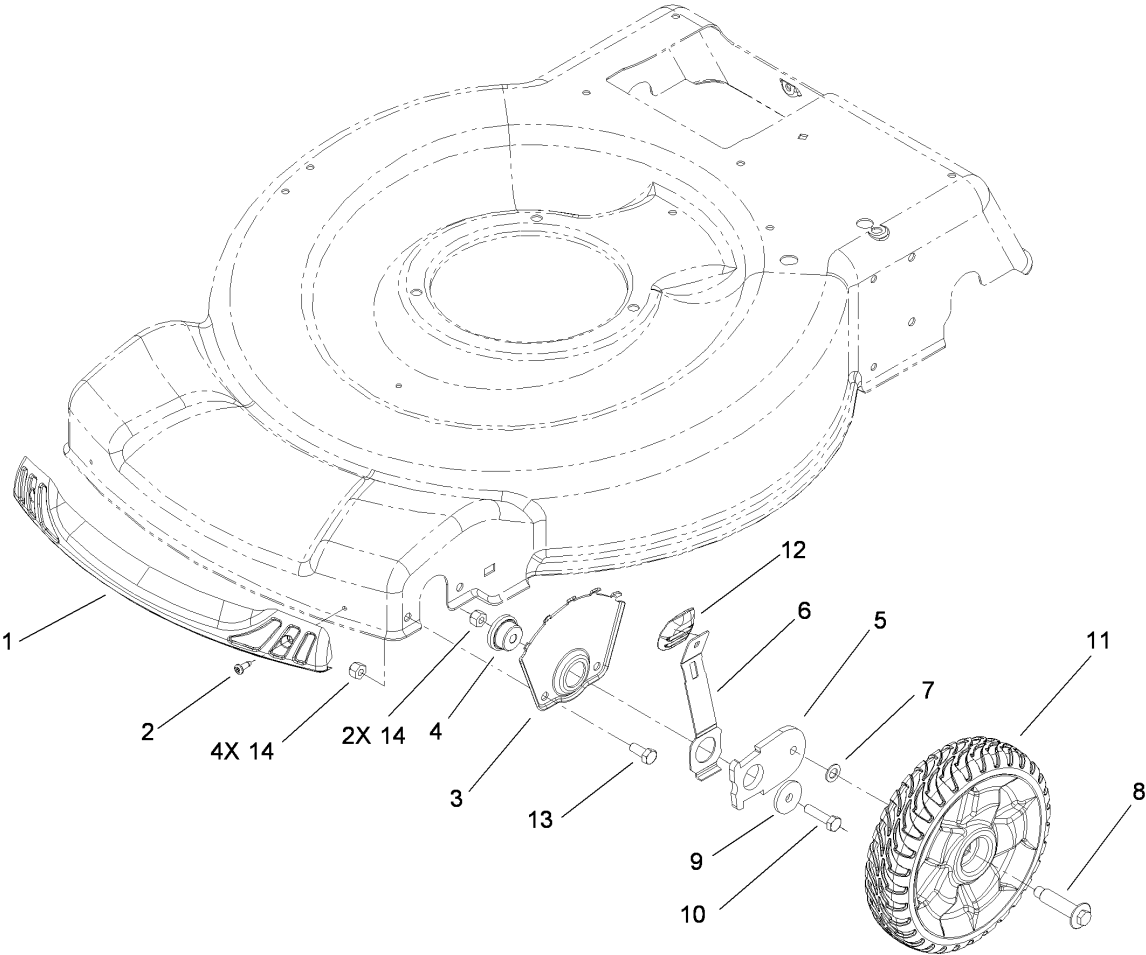


Front Axle Assembly

Ref	Part No.	Qty.	Description				
1	114-7987	1	Bumper				
2	105-6849	2	Screw-Thread Forming				
3	115-1956-03	2	Plate-HOC, Front				
4	105-1818	2	Bushing-Mount, HOC				
5	105-1807	2	Arm-Pivot, Front				
6	105-1809	2	Arm-Spring				
7	40-1940	2	Washer				
8	614650	2	Bolt-Shoulder				
9	105-3048	2	Washer-Flat				
10	322-6	2	Screw-HH				
11	115-2894	2	8In Wheel ASM				
12	105-3042	2	Knob-Lever, HOC				
13	322-3	4	Screw-HH				
14	3296-29	6	Nut-Lock, NI				

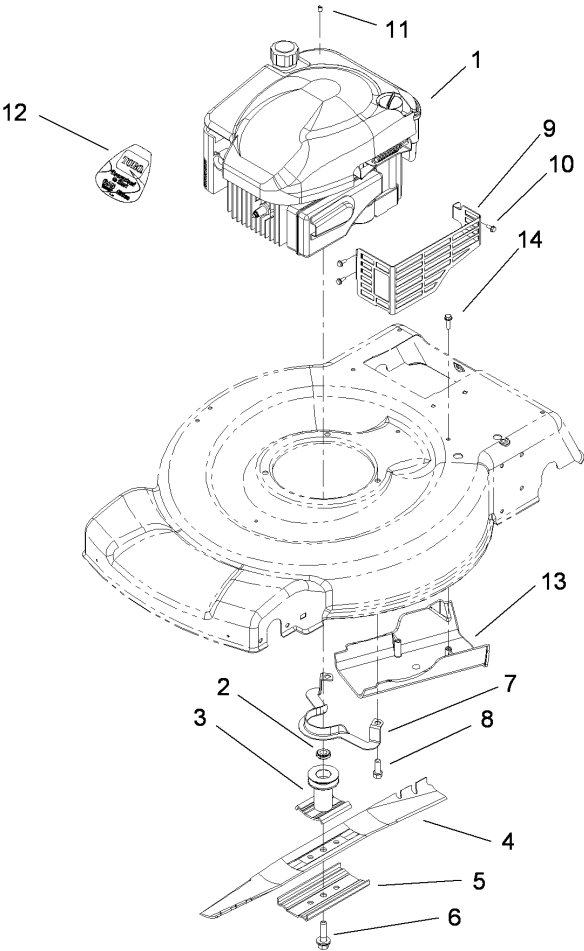


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1		1	Engine-Briggs, 126T02-0216-B1				
2	106-3999	1	Spacer-Driver				
3	106-3987	1	Blade Driver ASM				
4	108-9764-03	1	Blade-22 Inch				
5	108-3766-03	1	Support-Blade				
6	105-8579	1	Bolt-Blade				
7	105-3030-03	1	Guide-Belt				
8	95-1726	3	Screw-Taptite				
9	104-7577-03	1	Shield-Muffler				
10	32144-1	3	Screw-Taptite				
11	2210-316	1	Stop-Rope				
12	117-1017	1	Decal				
13	114-7937	1	Cover-Belt				
14	46-8091	2	Screw-HWH				

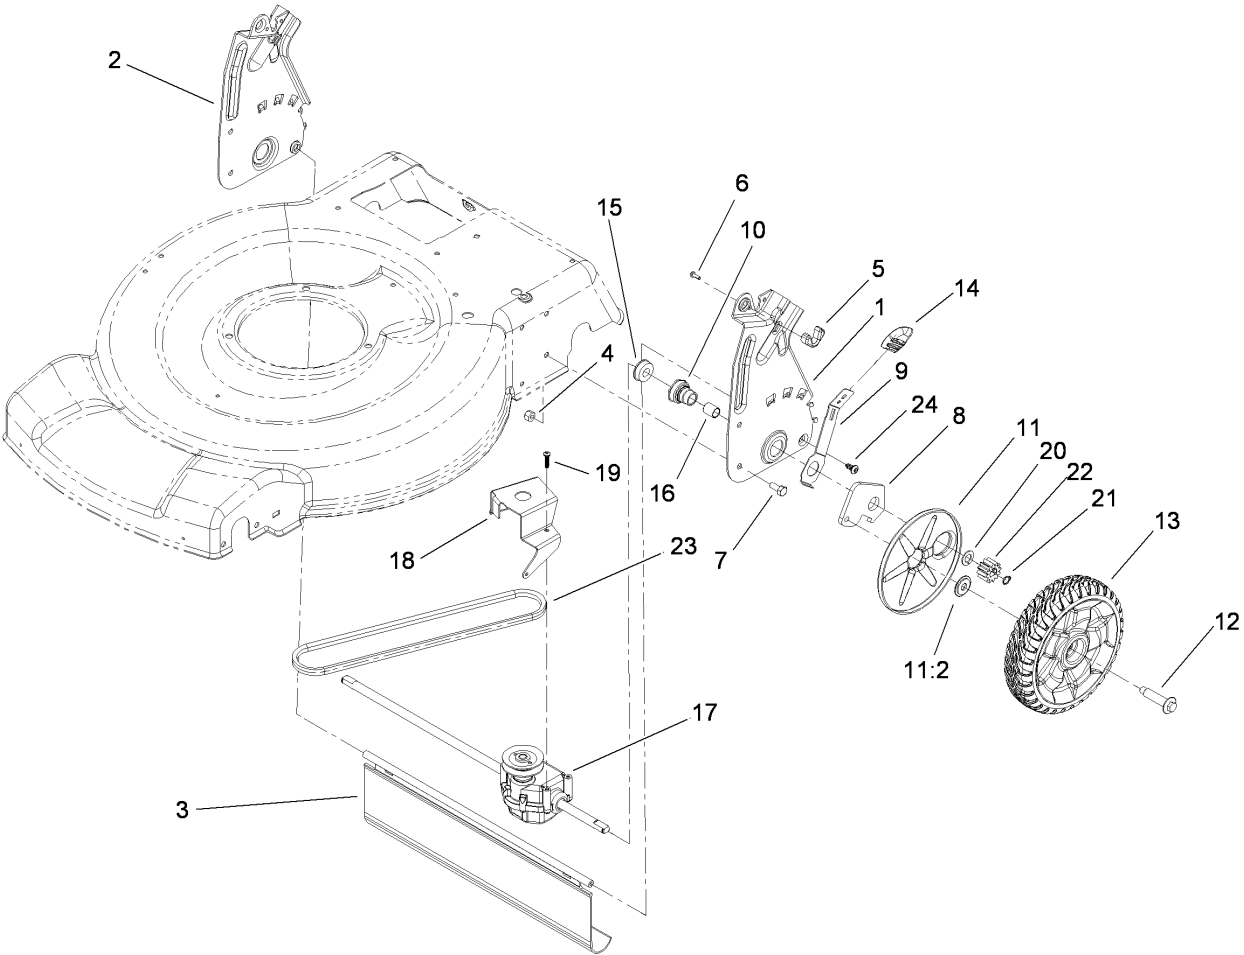


Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-7955-03	1	Plate-LH, Rear HOC	23	115-4669	1	V-Belt
2	114-7956-03	1	Plate-RH, Rear HOC	24	117-1092	2	Screw-PPH
3	115-2893	1	Shield-Trailing				
4	3296-29	4	Nut-Lock, NI				
5	115-8406	2	Anchor-Bag (Rwd)				
6	105-9437	2	Screw-PPH				
7	322-3	4	Screw-HH				
8	108-9781	2	Arm-Pivot, Rear				
9	108-9780	2	Arm-Spring				
10	108-9779	2	Retainer-Bushing, HOC				
11	110-1792	2	Wheel Cover ASM				
11:1		1	Cover-Wheel				
11:2	614426	1	Washer-Stepped				
12	614650	2	Bolt-Shoulder				
13	115-4695	2	Wheel Gear ASM				
14	105-3042	2	Knob-Lever, HOC				
15	104-8699	2	Bearing-Ball				
16	108-9782	2	Bushing-Sleeve				
17	115-4652	1	Transmission (4.5/1)				
18	114-7977-03	1	Bracket-Transmission				
19	108-7476	3	Screw-Plastite				
20	110-7191	2	Washer-Thrust				
21	32151-61	2	Ring-Retaining				
22	115-4668	2	Gear-Pinion, 12T				

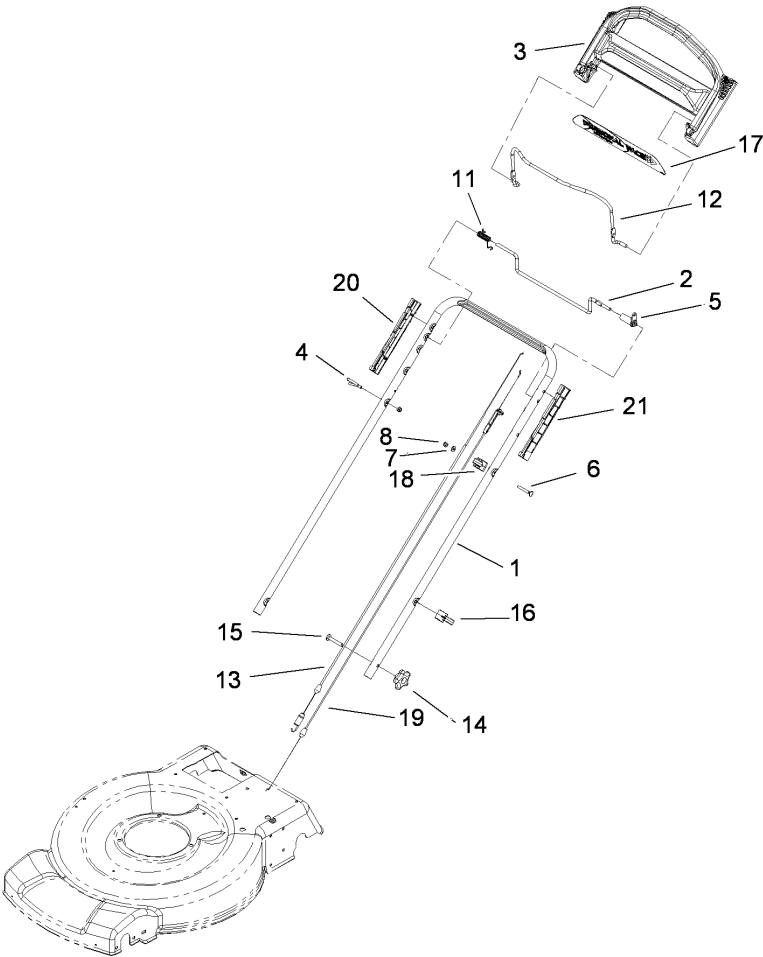


Handle Assembly

Ref	Part No.	Qty.	Description				
1	114-0333-05	1	Handle				
2	99-1588	1	Bar-Control, Traction				
3	104-8678	1	Handle-Control				
4	86-9671	1	Guide-Rope				
5	99-1589	1	Lever-Traction				
6	95-4453	1	Screw				
7	3256-1	1	Washer-Flat				
8	3296-73	2	Nut-Lock, NI				
11	104-8690	1	Spring-Torsion				
12	104-8679-03	1	Bail-Brake				
13	115-8435	1	Cable-Traction				
14	108-8162	2	Knob-Locking				
15	3230-6	2	Screw-CARR				
16	106-6805	1	Guide-Cable				
17	117-1019	1	Decal				
18	99-5239	1	Anchor-Cable				
19	115-8437	1	Cable-Brake				
20	105-6841	1	Guide-RH				
21	105-6842	1	Guide-LH				

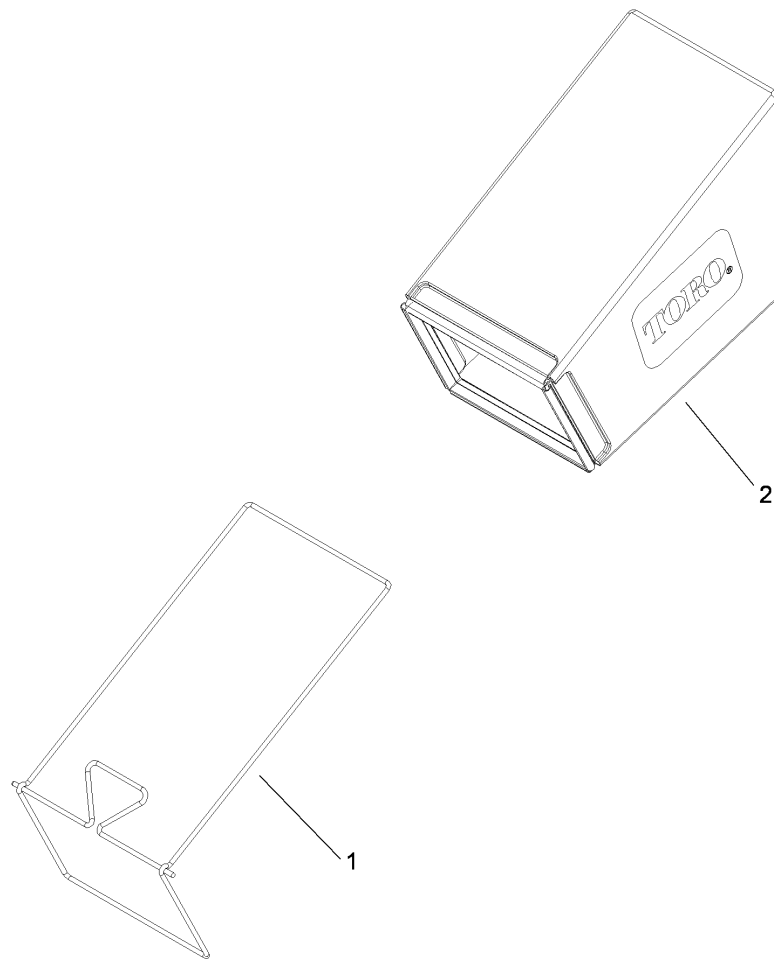

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	114-2679-03	1	Bag Frame ASM
2	115-4673	1	Grass Bag ASM

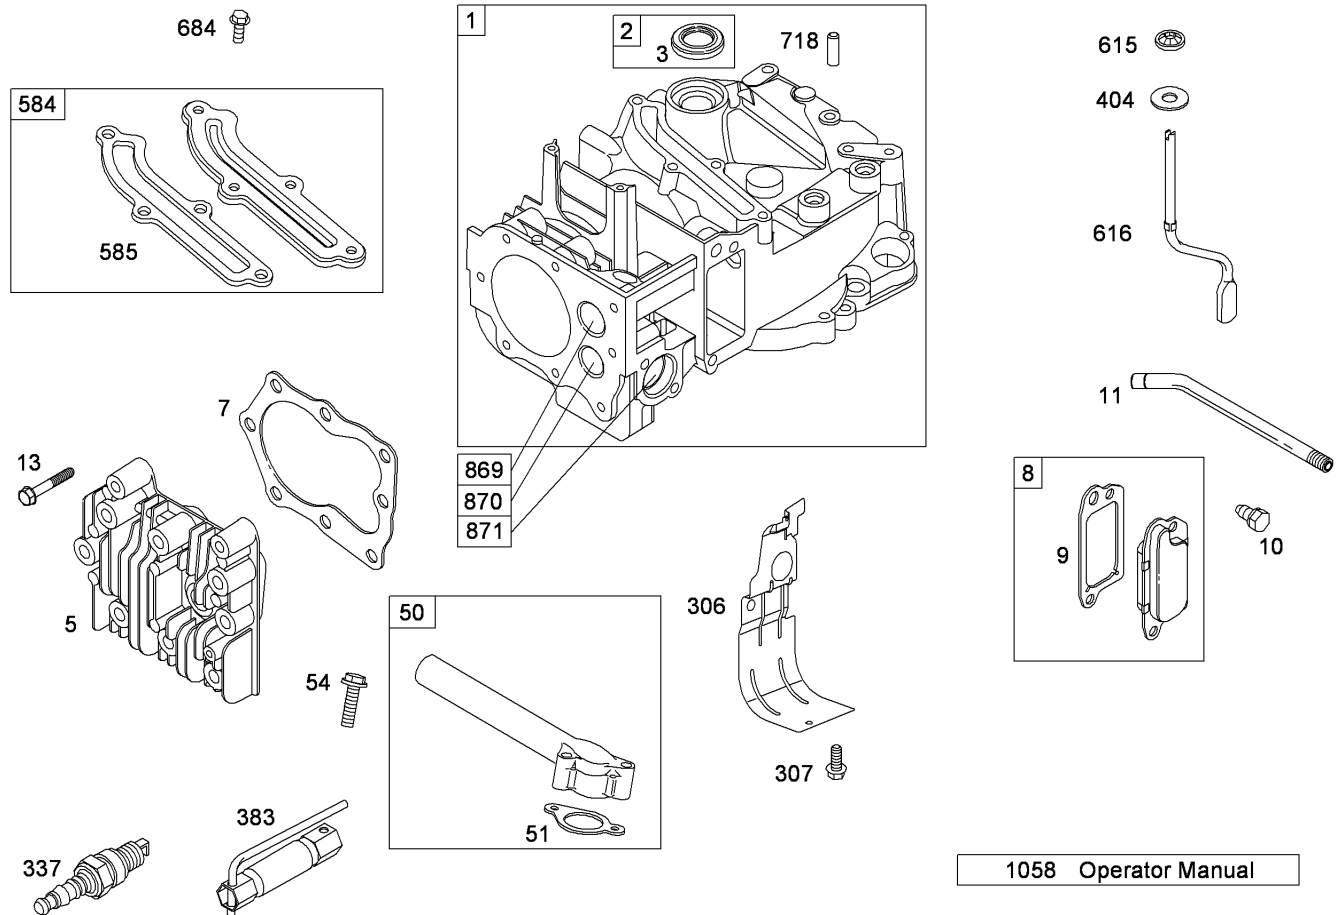






Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	696125	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	794305	1	Manifold-Intake
51	794306	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	790836	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
337	802592s	1	Plug-Spark
383	89838s	1	Wrench-Spark Plug
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
684	690345	1	Screw (Breather Passage Cover)
718	690959	1	Pin-Locating

Ref	Part No.	Qty.	Description
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	277039TRI	1	Operator Manual

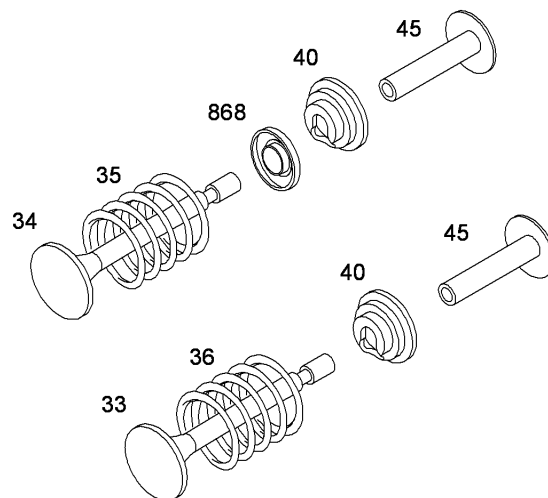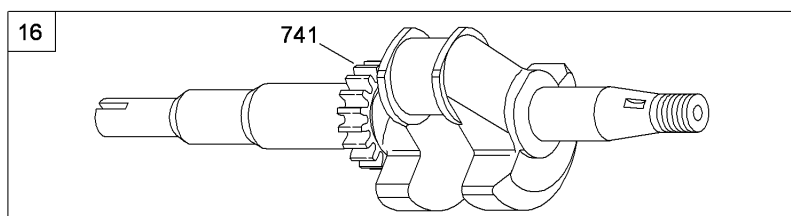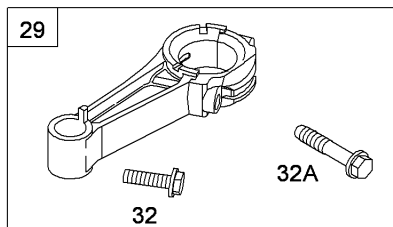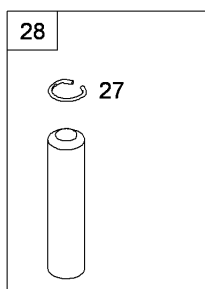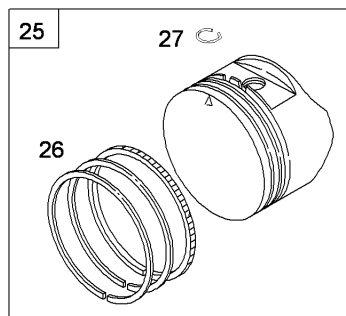


Assemblies include all parts shown in frames

Crankshaft Assembly


Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
③16	696009	1	Crankshaft
③24	222698s	1	Key-Flywheel
③25	795429	1	Piston ASM (STD)
③25	795430	1	Piston ASM (.020 Oversize)
③26	795431	1	Ring Set (STD)
③26	795432	1	Ring Set (.020 Oversize)
③27	691866	1	Lock-Pin, Piston
③28	499423	1	Pin-Piston (STD)
③29	499424	1	Rod-Connecting
③32	691664	1	Screw (Connecting Rod)
③32A	695759	1	Screw (Connecting Rod)
③33	262651s	1	Valve-Exhaust
③34	262652s	1	Valve-Intake
③35	691270	1	Spring-Valve (Intake)
③36	691270	1	Spring-Valve (Exhaust)
③40	692194	1	Retainer-Valve
③45	690548	1	Tappet-Valve
③741	790345	1	Gear-Timing
③868	697338	1	Seal-Valve

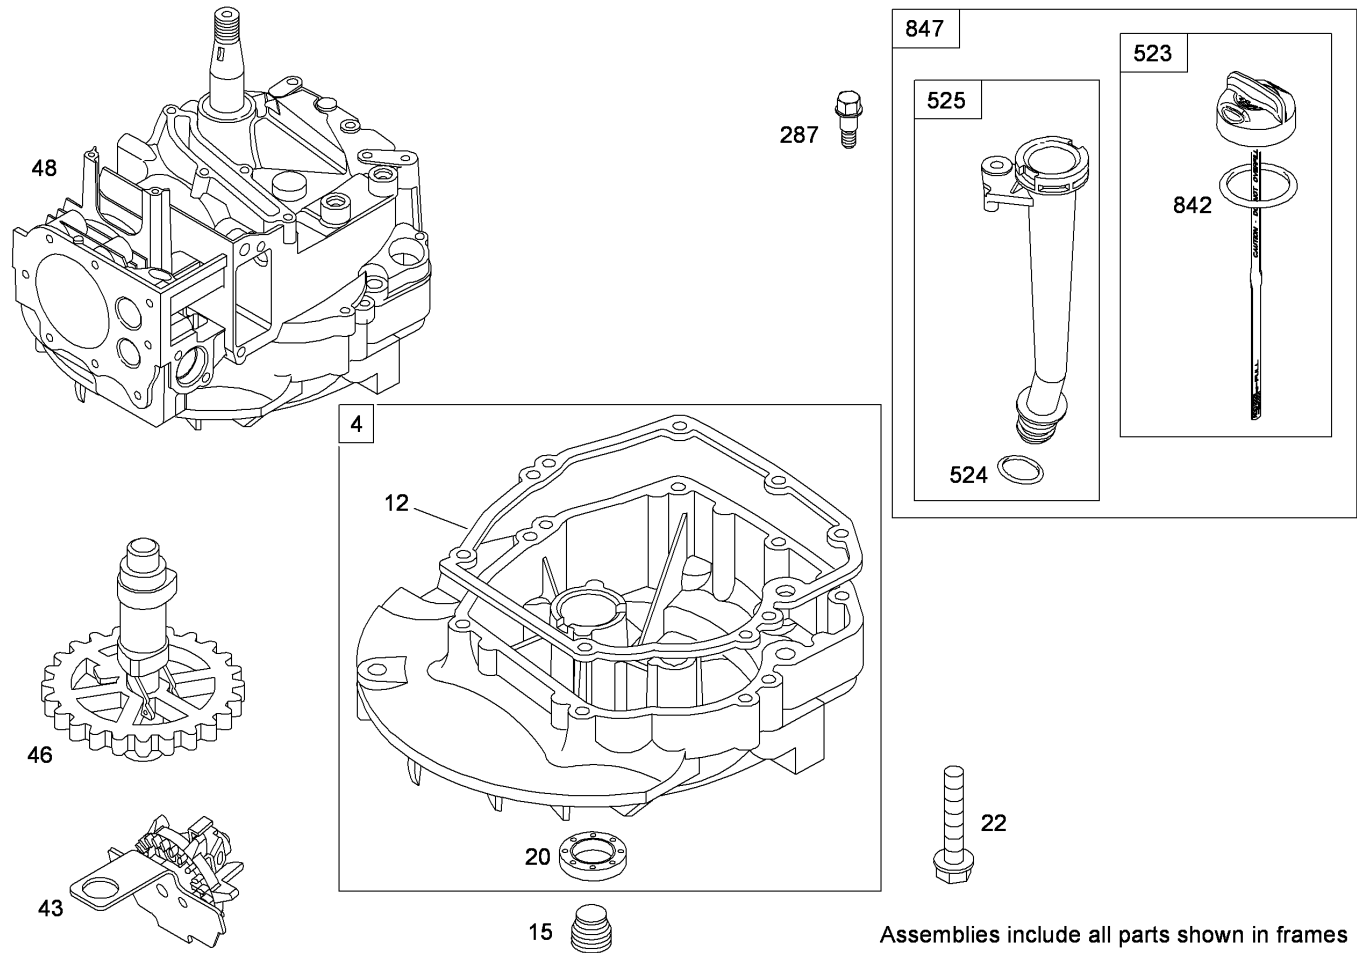

Crankcase Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 STD)				
15	691680	1	Plug-Drain, Oil				
20	399781s	1	Seal-Oil (PTO Side)				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Oil, Governor				
46	691449	1	Camshaft				
48	792742	1	Block-Short				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal-O Ring (Dipstick Tube)				
525	495265	1	Tube-Dipstick				
842	691031	1	Seal-O Ring (Dipstick Tube)				
847	692047	1	Dipstick Tube ASM				


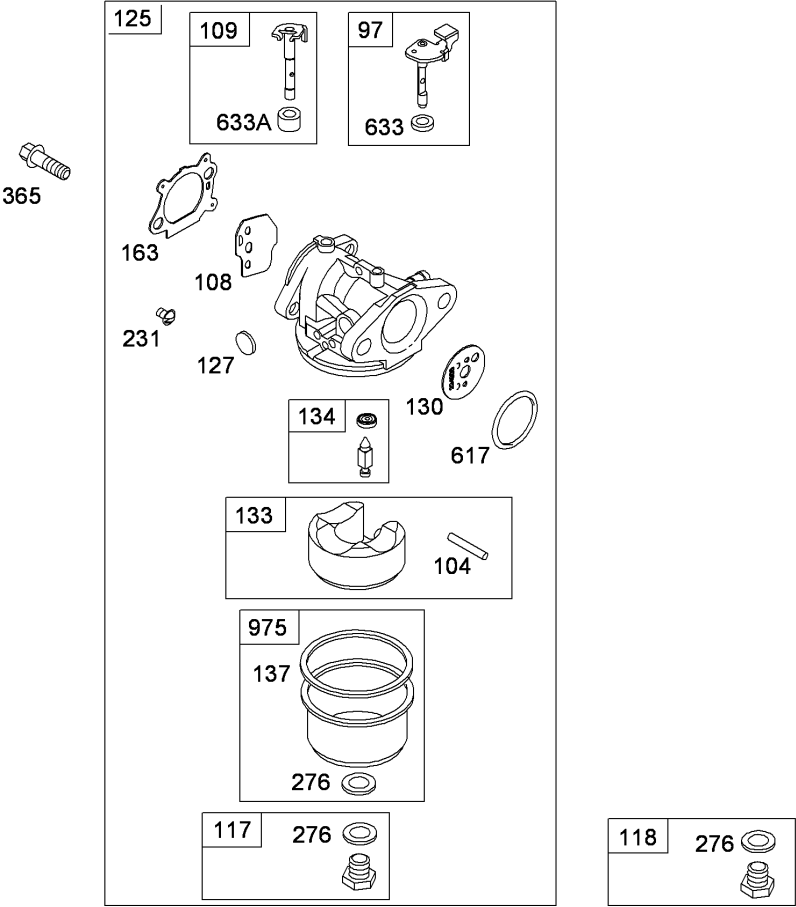


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description				
③ 97	696565	1	Shaft-Throttle				
③ ④ 104	691242	1	Pin-Hinge, Float				
③ 108	790844	1	Valve-Choke				
③ 109	790843	1	Shaft-Choke				
③ 117	691428	1	Jet-Main (Standard)				
③ 118	498977	1	Jet-Main (High Altitude)				
③ 125	794304	1	Carburetor				
③ ④ 127	694468	1	Plug-Welch				
③ 130	696564	1	Valve-Throttle				
③ 133	398187	1	Float-Carburetor				
③ ④ 134	398188	1	Needle And Seat Kit				
③ ④ 137	693981	1	Gasket-Bowl, Float				
⑤							
③ ④ 163	272653s	1	Gasket-Cleaner, Air				
⑤ ⑥							
③ 231	691636	1	Screw (Choke Valve)				
③ ④ 276	271716	1	Washer-Sealing				
⑤							
③ 365	692524	1	Screw (Carburetor)				
③ ④ 617	270344s	1	Seal-O Ring (Intake Manifold)				
⑤							
③ ④ 633	691321	1	Seal-Shaft, Choke Throttle				
⑤							
③ ④ 633A	693867	1	Seal-Shaft, Choke Throttle				
⑤							
③ 975	493640	1	Bowl-Float				

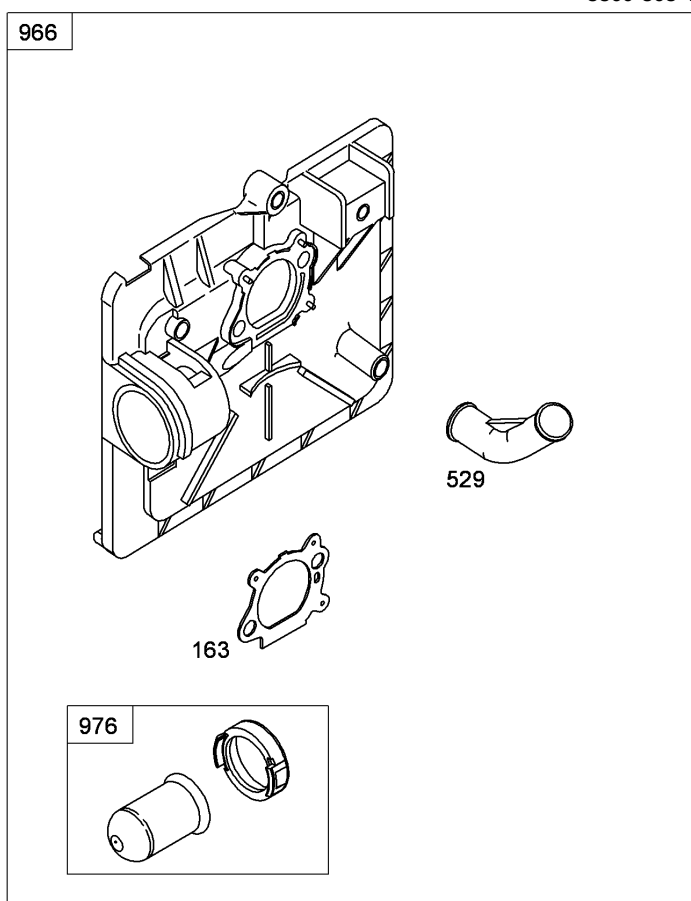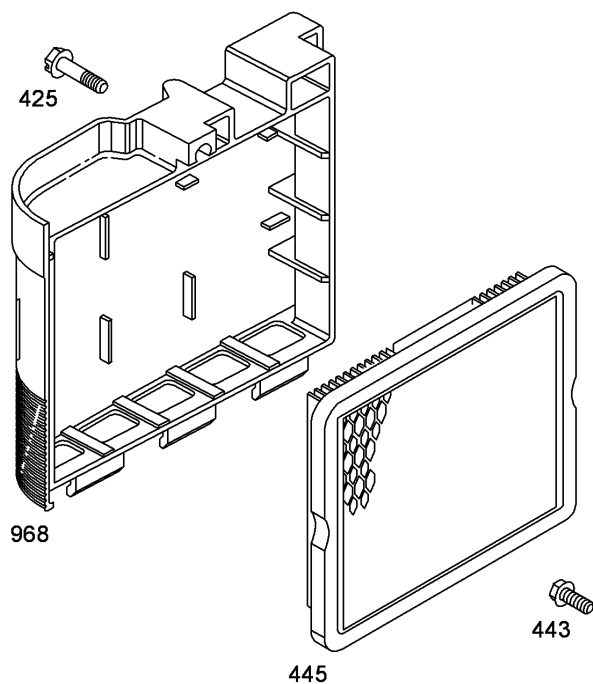


Assemblies include all parts shown in frames

Air Cleaner Assembly

Briggs and Stratton 126T02-0216-B1








Ref	Part No.	Qty.	Description
③ ④ 163 ⑤ ⑥	272653s	1	Gasket-Cleaner, Air
③ 425	690670	1	Screw (Air Cleaner Cover)
③ 443	692523	1	Screw (Air Cleaner Primer Base)
③ 445	491588s	1	Filter-Cartridge, Air Cleaner
③ 529	691923	1	Grommet
③ 966	792040	1	Base-Primer, Air Cleaner
③ 968	692298	1	Cover-Cleaner, Air
③ 976	694395	1	Primer-Carburetor

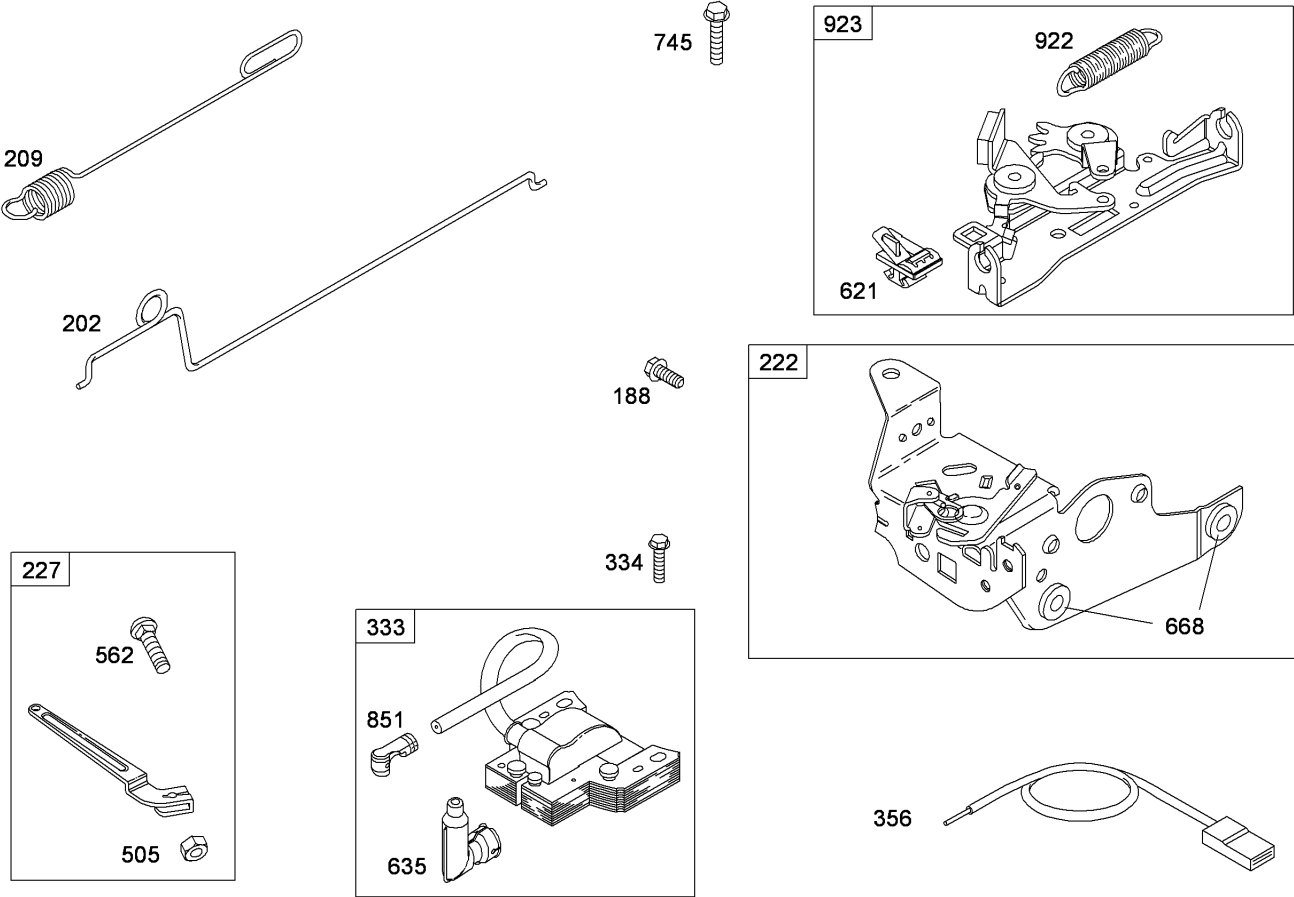

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description				
188	693399	1	Screw (Control Bracket)				
202	691829	1	Link-Governor, Mechanical				
209	691292	1	Spring-Governor				
222	793754	1	Bracket-Control				
227	690783	1	Lever-Control, Governor				
333	793353	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
356	692390	1	Wire-Stop				
505	691251	1	Nut (Governor Control Lever)				
562	691119	1	Bolt (Governor Control Lever)				
621	692310	1	Switch-Stop				
635	793351	1	Boot-Spark Plug				
668	493823	1	Spacer				
745	691648	1	Screw (Brake)				
851	692424	1	Terminal-Spark Plug				
922	691831	1	Spring-Brake				
923	691994	1	Brake ASM				

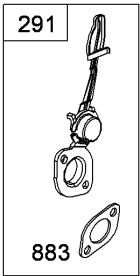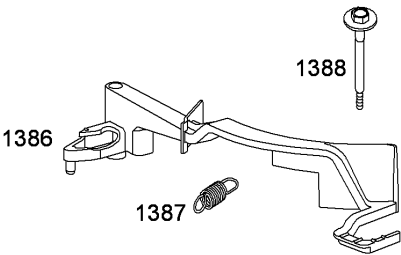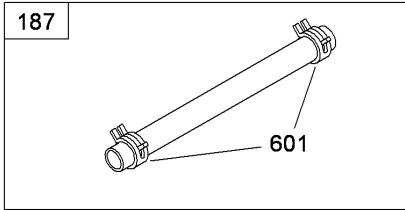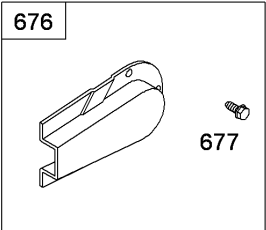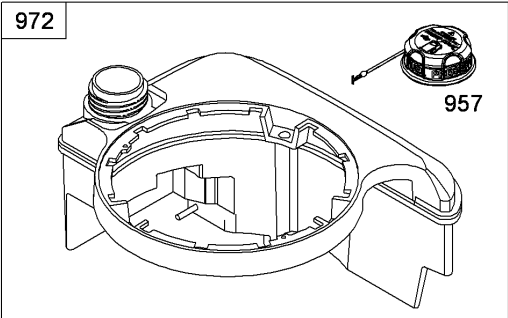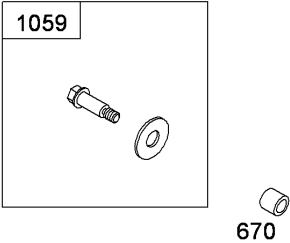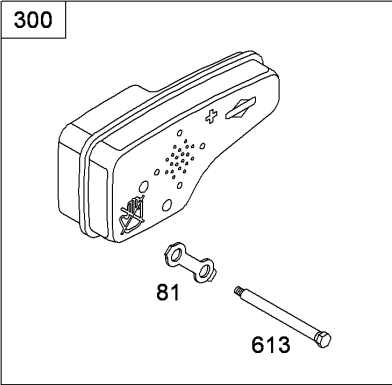


Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly

Briggs and Stratton 126T02-0216-B1


Ref	Part No.	Qty.	Description				
81	691740	1	Lock-Screw, Muffler				
187	791766	1	Line-Fuel (Cut To Required Length)				
190	690940	1	Screw (Fuel Tank)				
291	790830	1	Thermostat				
300	692038	1	Muffler				
601	791850	1	Clamp-Hose				
613	691340	1	Screw (Muffler)				
670	692294	1	Spacer-Tank, Fuel				
676	493871	1	Deflector-Muffler				
677	690661	1	Screw (Muffler Deflector)				
883	691881	1	Gasket-Exhaust				
957	699985	1	Cap-Tank, Fuel				
972	699374	1	Tank-Fuel				
1059	692311	1	Screw And Washer Kit				
1386	790848	1	Vane-Air				
1387	790849	1	Spring-Vane, Air				
1388	790850	1	Screw (Air Vane)				

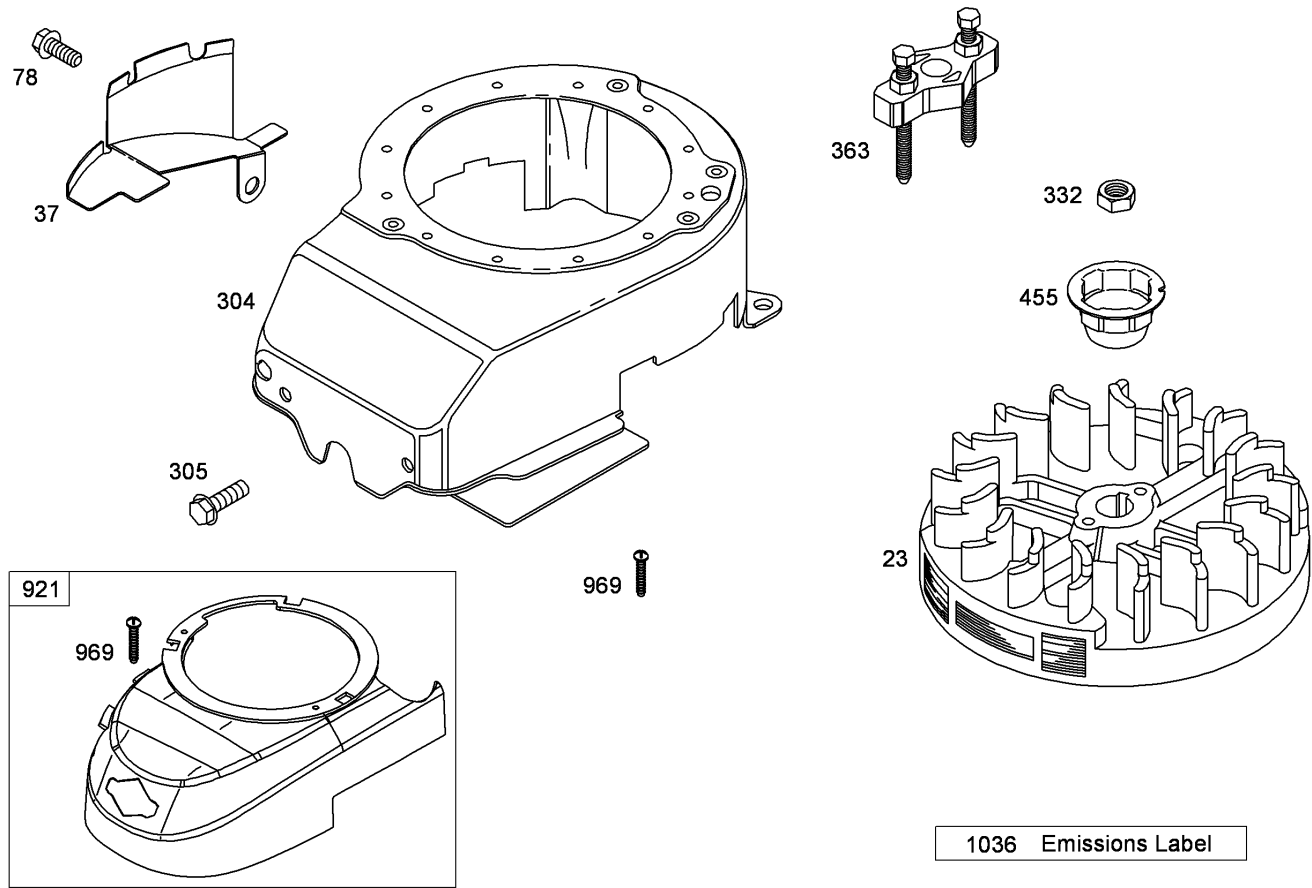

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description				
❶23	691987	1	Flywheel				
❶37	694086	1	Guard-Flywheel				
❶78	691108	1	Screw (Flywheel Guard)				
❶304	790983	1	Housing-Blower				
❶305	691108	1	Screw (Blower Housing)				
❶332	690662	1	Nut (Flywheel)				
❶363	19069	1	Puller-Flywheel				
❶455	791760	1	Cup-Flywheel				
❶921	790036	1	Cover-Housing, Blower				
❶969	691138	1	Screw (Blower Housing Cover)				
❶1036		1	Label-Emissions				

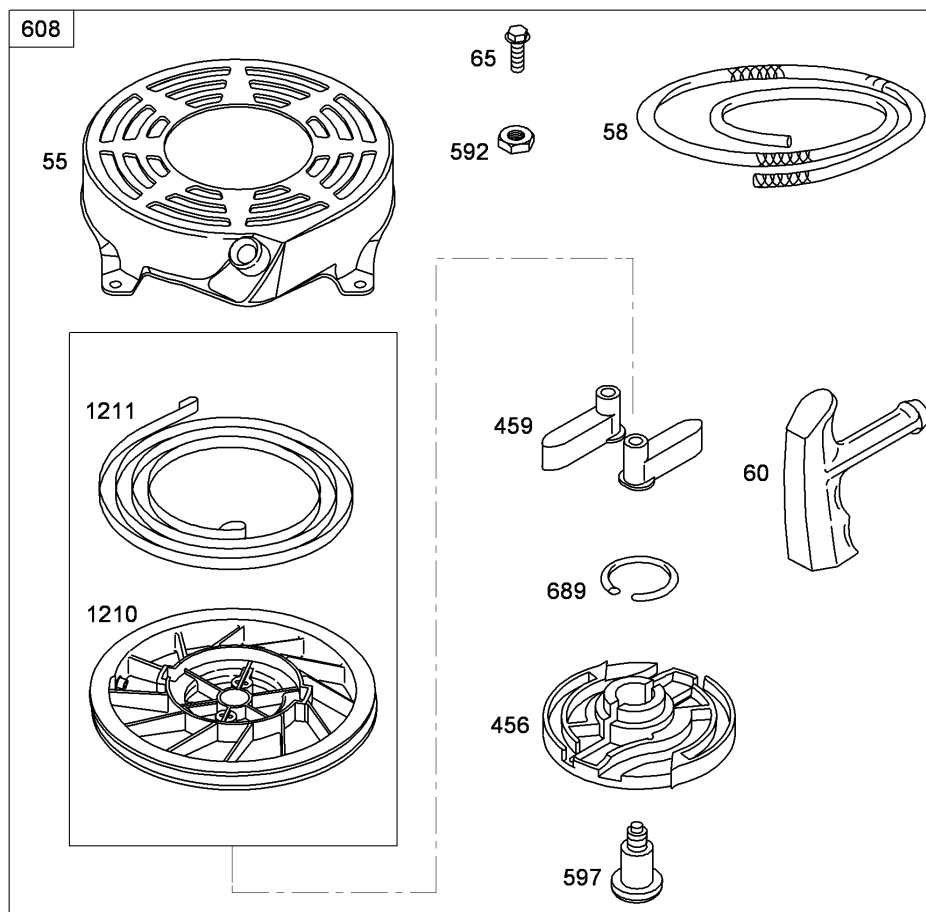


Assemblies include all parts shown in frames

Starter Assembly

Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
355	691421	1	Housing-Starter, Rewind
358	697316	1	Rope-Starter (Cut To Required Length)
360	281434s	1	Grip-Rope, Starter
365	690837	1	Screw (Rewind Starter)
3456	692299	1	Plate-Friction, Pawl
3459	281505s	1	Ratchet-Pawl
3592	690800	1	Nut (Rewind Starter)
3597	691696	1	Screw (Pawl Friction Plate)
3608	497680	1	Starter-Rewind
3689	691855	1	Spring-Friction
31210	498144	1	Pulley And Spring ASM (Pulley)
31211	498144	1	Pulley And Spring ASM (Spring)


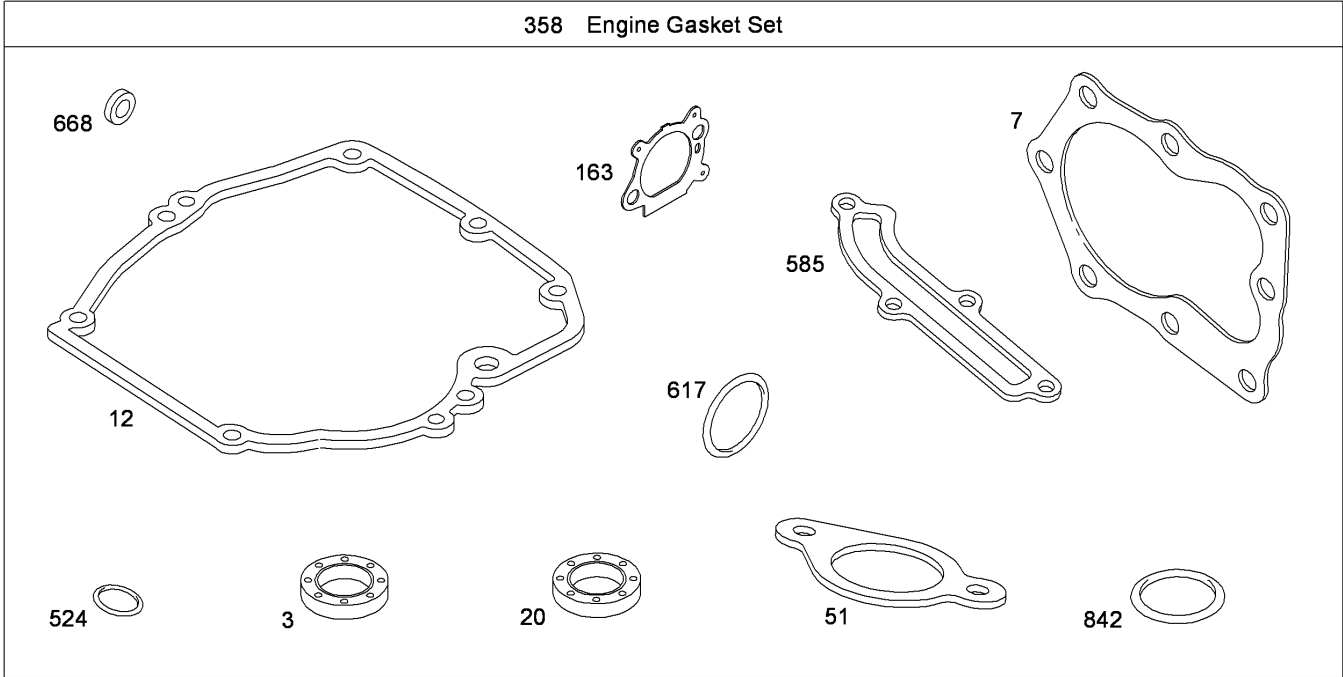


Assemblies include all parts shown in frames

Engine Gasket Set

Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description				
353	299819s	1	Seal-Oil (Magneto Side)				
357	692249	1	Gasket-Head, Cylinder				
3512	692232	1	Gasket-Crankcase (.015 STD)				
3520	399781s	1	Seal-Oil (PTO Side)				
3551	794306	1	Gasket-Intake				
34163	272653s	1	Gasket-Cleaner, Air				
36							
358	794307	1	Engine Gasket Set				
35524	692296	1	Seal-O Ring (Dipstick Tube)				
35585	691879	1	Gasket-Passage, Breather				
34617	270344s	1	Seal-O Ring (Intake Manifold)				
36							
35668	493823	1	Spacer				
35842	691031	1	Seal-O Ring (Dipstick)				

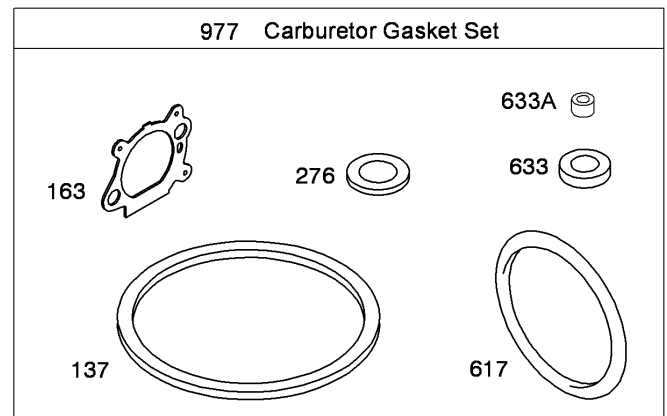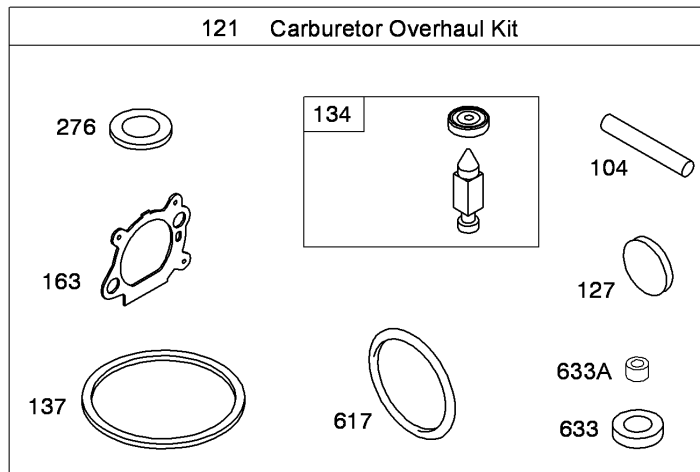

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description				
34104	691242	1	Pin-Hinge, Float				
3121	498260	1	Carburetor Overhaul Kit				
34127	694468	1	Plug-Welch				
34134	398188	1	Needle And Seat Kit				
34137	693981	1	Gasket-Bowl, Float				
6							
34163	272653s	1	Gasket-Cleaner, Air				
56							
34276	271716	1	Washer-Sealing				
6							
34617	270344s	1	Seal-O Ring (Intake Manifold)				
56							
34633	691321	1	Seal-Shaft, Choke Throttle				
6							
34633A	693867	1	Seal-Shaft, Choke Throttle				
6							
3977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20332C - 22in Recycler Lawn Mower

Product Name	Model/Part
Traction Assist Handle Kit	108-8120
Loose Parts Kit	117-4133
Replacement Bag	59310
Replacement Bag Kit	59312
22 Inch Blade Kit	59534

NOTES

NOTES

NOTES

