



## 22in Recycler<sup>®</sup> Lawn Mower

Model No. 20334 - 290000001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                             | Page     | Description                                   | Page     |
|-----------------------------------------|----------|-----------------------------------------------|----------|
| Deck, Side Chute and Rear Door Assembly | ..... 3  | Air Cleaner Assembly Briggs and Stratton      |          |
| Front Axle Assembly                     | ..... 4  | 126T05-0933-B1                                | ..... 14 |
| Rear Axle and Transmission Assembly     | ..... 5  | Governor Assembly Briggs and Stratton         |          |
| Engine Assembly                         | ..... 6  | 126T05-0933-B1                                | ..... 15 |
| Handle Assembly                         | ..... 7  | Muffler and Fuel Tank Assembly Briggs and     |          |
| Electric Start Assembly                 | ..... 8  | Stratton 126T05-0933-B1                       | ..... 16 |
| Rear Bag Assembly                       | ..... 9  | Blower Housing Assembly Briggs and Stratton   |          |
| Cylinder Assembly Briggs and Stratton   |          | 126T05-0933-B1                                | ..... 17 |
| 126T05-0933-B1                          | ..... 10 | Starter Assembly Briggs and Stratton 126T05-  |          |
| Crankshaft Assembly Briggs and Stratton |          | 0933-B1                                       | ..... 18 |
| 126T05-0933-B1                          | ..... 11 | Electric Starter Assembly Briggs and Stratton |          |
| Crankcase Assembly Briggs and Stratton  |          | 126T05-0933-B1                                | ..... 19 |
| 126T05-0933-B1                          | ..... 12 | Engine Gasket Set Briggs and Stratton         |          |
| Carburetor Assembly Briggs and Stratton |          | 126T05-0933-B1                                | ..... 20 |
| 126T05-0933-B1                          | ..... 13 | Carburetor Overhaul Kit Briggs and Stratton   |          |
|                                         |          | 126T05-0933-B1                                | ..... 21 |
|                                         |          | Attachments and Accessories List              | ..... 22 |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHE. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HS. .... hex socket head                   | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |

## Footnotes

- |                                                   |                                                      |
|---------------------------------------------------|------------------------------------------------------|
| ❶ Not illustrated                                 | ❷ Not serviced separately                            |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358)    | ❻ Included in Carburetor Gasket Set (Ref. No. 977)   |



## Deck, Side Chute and Rear Door Assembly

| Ref  | Part No.    | Qty. | Description                 | Ref | Part No. | Qty. | Description           |
|------|-------------|------|-----------------------------|-----|----------|------|-----------------------|
| 1    | 117-1084    | 1    | Housing ASM                 | 26  | 99-5291  | 1    | Rod-Cover             |
| 1:2  | 94-8072     | 1    | Decal-Danger                | 27  | 99-5293  | 1    | Spring-Torsion        |
| 1:3  | 115-4676    | 1    | Decal-Recycler              | 28  | 115-8449 | 1    | Deflector-Side        |
| 1:4  | 112-8867    | 1    | Decal                       | 29  | 115-8447 | 1    | Chute-Discharge, Side |
| 2    | 114-7957    | 1    | Chute-Recycle               |     |          |      |                       |
| 3    | 114-7961    | 1    | Baffle-Rear                 |     |          |      |                       |
| 4    | 46-8091     | 9    | Screw-HWH                   |     |          |      |                       |
| 5    | 114-7963-01 | 1    | Baffle-Front                |     |          |      |                       |
| 6    | 114-7960    | 1    | Deflector-Recycle           |     |          |      |                       |
| 7    | 114-7959    | 1    | Latch-Recycle               |     |          |      |                       |
| 8    | 117-1031    | 1    | Spring-Compression          |     |          |      |                       |
| 9    | 114-7958    | 1    | Knob-Recycle                |     |          |      |                       |
| 10   | 32104-120   | 2    | Screw-PPH                   |     |          |      |                       |
| 11   | 114-7992    | 1    | Rear Door ASM               |     |          |      |                       |
| 11:2 | 114-7982    | 1    | Decal-Warning               |     |          |      |                       |
| 12   | 114-7924    | 1    | Spring-Torsion              |     |          |      |                       |
| 14   | 112-6401    | 1    | Coupling-Hose, Washout Port |     |          |      |                       |
| 15   | 112-6400    | 1    | Port-Washout                |     |          |      |                       |
| 16   | 112-6438    | 1    | Washer-Seal, Washout Port   |     |          |      |                       |
| 17   | 3254-5      | 1    | Washer-Tooth                |     |          |      |                       |
| 18   | 3218-6      | 1    | Nut-Jam                     |     |          |      |                       |
| 23   | 115-2859    | 1    | Spring-Torsion              |     |          |      |                       |
| 24   | 112-6416    | 1    | Bracket-Cover               |     |          |      |                       |
| 25   | 99-8445     | 2    | Screw-HWH                   |     |          |      |                       |



Front Axle Assembly

| Ref | Part No.    | Qty. | Description          |  |  |  |  |
|-----|-------------|------|----------------------|--|--|--|--|
| 1   | 114-7987    | 1    | Bumper               |  |  |  |  |
| 2   | 105-6849    | 2    | Screw-Thread Forming |  |  |  |  |
| 3   | 115-1956-03 | 2    | Plate-HOC, Front     |  |  |  |  |
| 4   | 105-1818    | 2    | Bushing-Mount, HOC   |  |  |  |  |
| 5   | 105-1807    | 2    | Arm-Pivot, Front     |  |  |  |  |
| 6   | 105-1809    | 2    | Arm-Spring           |  |  |  |  |
| 7   | 40-1940     | 2    | Washer               |  |  |  |  |
| 8   | 614650      | 2    | Bolt-Shoulder        |  |  |  |  |
| 9   | 105-3048    | 2    | Washer-Flat          |  |  |  |  |
| 10  | 322-6       | 2    | Screw-HH             |  |  |  |  |
| 11  | 115-2894    | 2    | 8In Wheel ASM        |  |  |  |  |
| 12  | 105-3042    | 2    | Knob-Lever, HOC      |  |  |  |  |
| 13  | 322-3       | 4    | Screw-HH             |  |  |  |  |
| 14  | 3296-29     | 6    | Nut-Lock, NI         |  |  |  |  |



## Rear Axle and Transmission Assembly

 
| Ref  | Part No.    | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 114-7955-03 | 1    | Plate-LH, Rear HOC    |
| 2    | 114-7956-03 | 1    | Plate-RH, Rear HOC    |
| 3    | 115-2893    | 1    | Shield-Trailing       |
| 4    | 3296-29     | 4    | Nut-Lock, NI          |
| 5    | 115-8406    | 2    | Anchor-Bag (Rwd)      |
| 6    | 105-9437    | 2    | Screw-PPH             |
| 7    | 322-3       | 4    | Screw-HH              |
| 8    | 108-9781    | 2    | Arm-Pivot, Rear       |
| 9    | 108-9780    | 2    | Arm-Spring            |
| 10   | 108-9779    | 2    | Retainer-Bushing, HOC |
| 11   | 110-1792    | 2    | Wheel Cover ASM       |
| 11:1 |             | 1    | Cover-Wheel           |
| 11:2 | 614426      | 1    | Washer-Stepped        |
| 12   | 614650      | 2    | Bolt-Shoulder         |
| 13   | 115-4695    | 2    | Wheel Gear ASM        |
| 14   | 105-3042    | 2    | Knob-Lever, HOC       |
| 15   | 104-8699    | 2    | Bearing-Ball          |
| 16   | 108-9782    | 2    | Bushing-Sleeve        |
| 17   | 115-4652    | 1    | Transmission (4.5/1)  |
| 18   | 114-7977-03 | 1    | Bracket-Transmission  |
| 19   | 108-7476    | 3    | Screw-Plastite        |
| 20   | 110-7191    | 2    | Washer-Thrust         |
| 21   | 32151-61    | 2    | Ring-Retaining        |
| 22   | 115-4668    | 2    | Gear-Pinion, 12T      |

| Ref | Part No. | Qty. | Description |
|-----|----------|------|-------------|
| 23  | 115-4669 | 1    | V-Belt      |
| 24  | 117-1092 | 2    | Screw-PPH   |




Engine Assembly

| Ref | Part No.    | Qty. | Description                   |  |  |  |  |
|-----|-------------|------|-------------------------------|--|--|--|--|
| 1   |             | 1    | Engine-Briggs, 126T05-0933-B1 |  |  |  |  |
| 2   | 106-3999    | 1    | Spacer-Driver                 |  |  |  |  |
| 3   | 106-3987    | 1    | Blade Driver ASM              |  |  |  |  |
| 4   | 108-9764-03 | 1    | Blade-22 Inch                 |  |  |  |  |
| 5   | 108-3766-03 | 1    | Support-Blade                 |  |  |  |  |
| 6   | 105-8579    | 1    | Bolt-Blade                    |  |  |  |  |
| 7   | 105-3030-03 | 1    | Guide-Belt                    |  |  |  |  |
| 8   | 95-1726     | 3    | Screw-Taptite                 |  |  |  |  |
| 9   | 104-7577-03 | 1    | Shield-Muffler                |  |  |  |  |
| 10  | 32144-1     | 3    | Screw-Taptite                 |  |  |  |  |
| 11  | 2210-316    | 1    | Stop-Rope                     |  |  |  |  |
| 12  | 117-1017    | 1    | Decal                         |  |  |  |  |
| 13  | 114-7937    | 1    | Cover-Belt                    |  |  |  |  |
| 14  | 46-8091     | 2    | Screw-HWH                     |  |  |  |  |

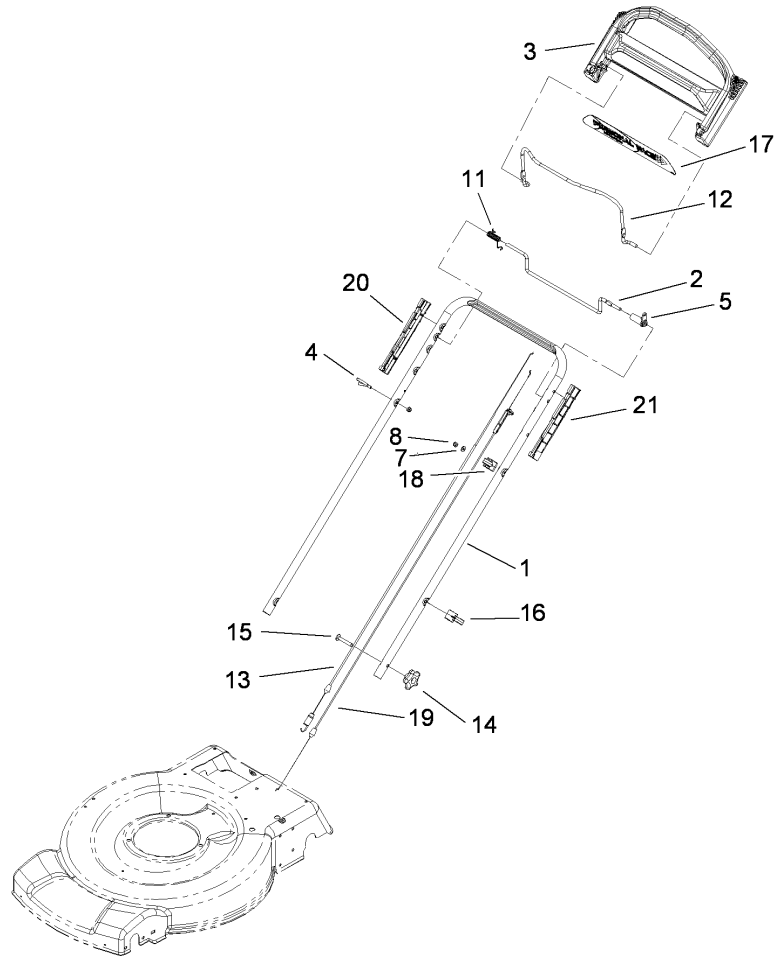

## Handle Assembly

 
| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 114-0333-05 | 1    | Handle                |  |  |  |  |
| 2   | 99-1588     | 1    | Bar-Control, Traction |  |  |  |  |
| 3   | 104-8678    | 1    | Handle-Control        |  |  |  |  |
| 4   | 86-9671     | 1    | Guide-Rope            |  |  |  |  |
| 5   | 99-1589     | 1    | Lever-Traction        |  |  |  |  |
| 7   | 3256-1      | 1    | Washer-Flat           |  |  |  |  |
| 8   | 3296-73     | 2    | Nut-Lock, NI          |  |  |  |  |
| 11  | 104-8690    | 1    | Spring-Torsion        |  |  |  |  |
| 12  | 104-8679-03 | 1    | Bail-Brake            |  |  |  |  |
| 13  | 115-8435    | 1    | Cable-Traction        |  |  |  |  |
| 14  | 108-8162    | 2    | Knob-Locking          |  |  |  |  |
| 15  | 3230-6      | 2    | Screw-CARR            |  |  |  |  |
| 16  | 106-6805    | 1    | Guide-Cable           |  |  |  |  |
| 17  | 117-1019    | 1    | Decal                 |  |  |  |  |
| 18  | 99-5239     | 1    | Anchor-Cable          |  |  |  |  |
| 19  | 115-8437    | 1    | Cable-Brake           |  |  |  |  |
| 20  | 105-6841    | 1    | Guide-RH              |  |  |  |  |
| 21  | 105-6842    | 1    | Guide-LH              |  |  |  |  |

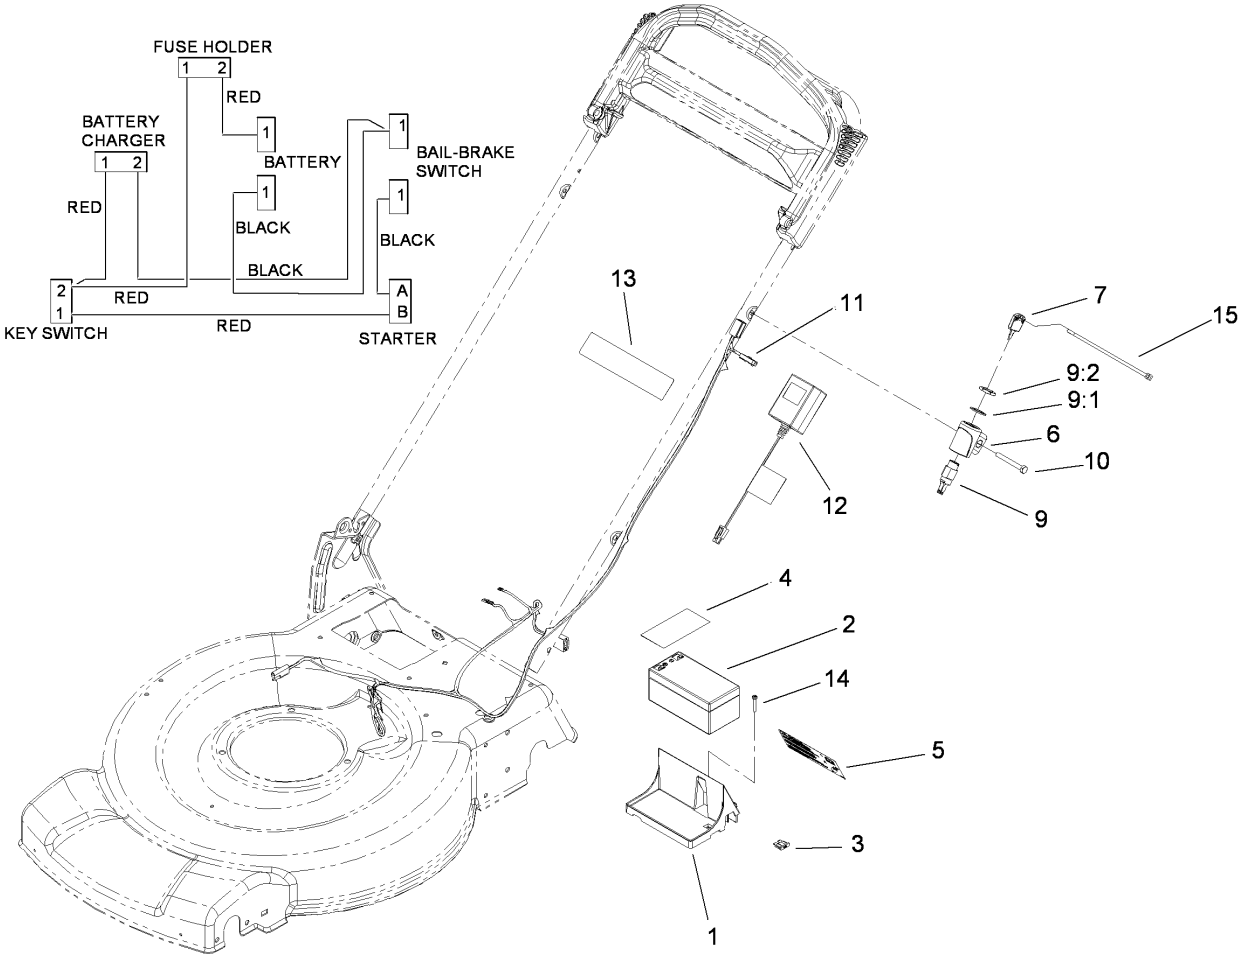

# Electric Start Assembly
 
| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 1   | 114-7936 | 1    | Tray-Battery            |  |  |  |  |
| 2   | 106-8397 | 1    | Battery-12 Volt         |  |  |  |  |
| 3   | 99-6124  | 2    | Fuse-40 Amp             |  |  |  |  |
| 4   | 112-8763 | 1    | Decal-Terminal, Battery |  |  |  |  |
| 5   | 117-1054 | 1    | Decal                   |  |  |  |  |
| 6   | 108-9760 | 1    | Mount-Switch            |  |  |  |  |
| 7   | 700918   | 1    | Key                     |  |  |  |  |
| 9   | 46-5780  | 1    | Switch-Starter          |  |  |  |  |
| 9:1 | 3254-5   | 1    | Washer-Tooth            |  |  |  |  |
| 9:2 | 218-461  | 1    | Nut-HH                  |  |  |  |  |
| 10  | 321-50   | 1    | Screw-HH                |  |  |  |  |
| 11  | 115-4675 | 1    | Harness-Wire            |  |  |  |  |
| 12  | 104-7401 | 1    | Charger-12 Volt         |  |  |  |  |
| 13  | 104-7953 | 1    | Decal-Harness           |  |  |  |  |
| 14  | 32144-97 | 1    | Screw-PPH, Plastite     |  |  |  |  |
| 15  | 614249   | 1    | Strap-Tie               |  |  |  |  |



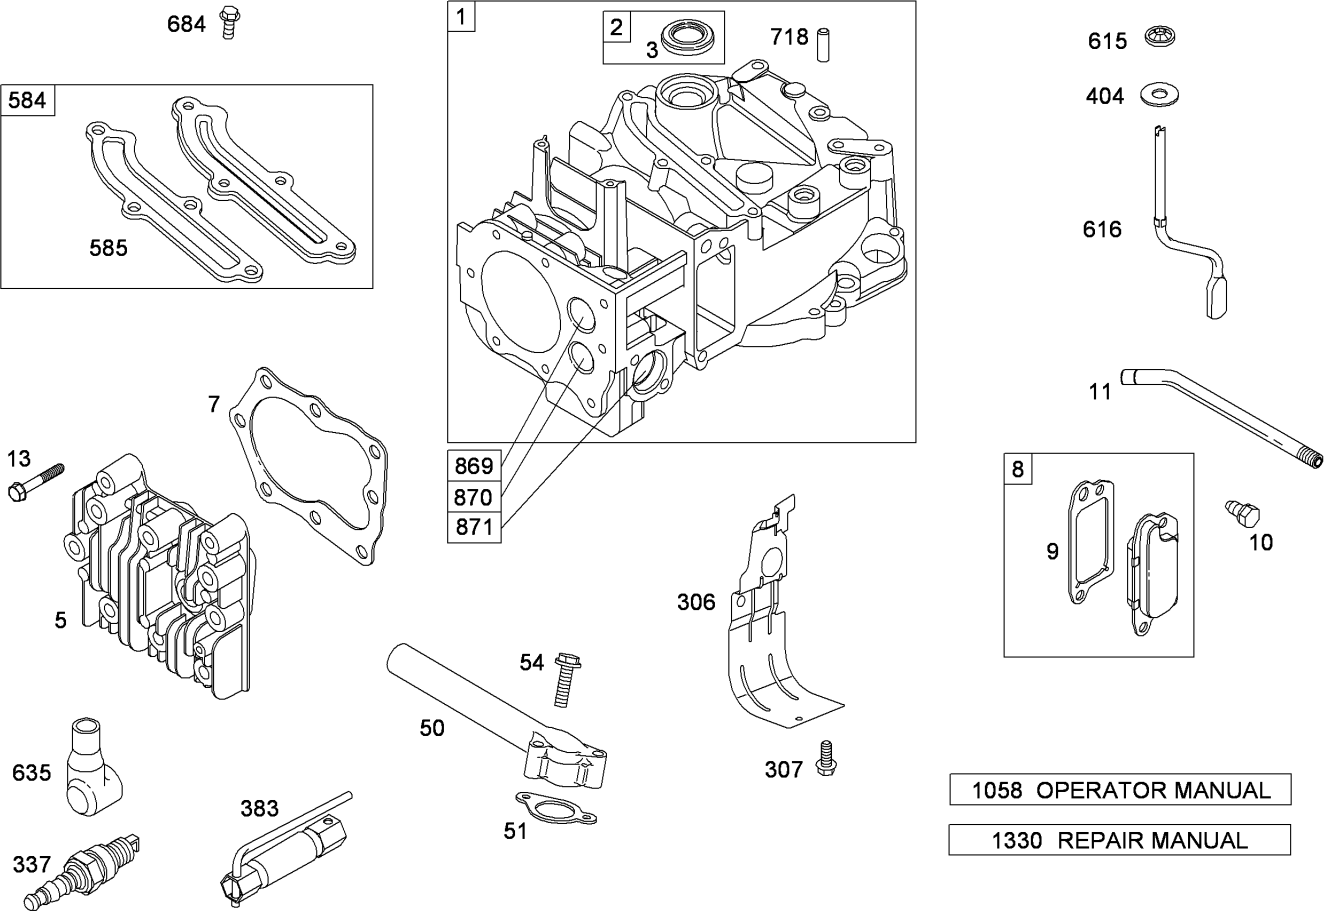

Assemblies include all parts shown in frames

# Cylinder Assembly

## Briggs and Stratton 126T05-0933-B1

| Ref | Part No. | Qty. | Description                    |
|-----|----------|------|--------------------------------|
| 1   | 697322   | 1    | Cylinder ASM                   |
| 2   | 399269   | 1    | Bushing And Seal Kit           |
| 3   | 299819s  | 1    | Seal-Oil (Magneto Side)        |
| 5   | 691160   | 1    | Head-Cylinder                  |
| 7   | 692249   | 1    | Gasket-Head, Cylinder          |
| 8   | 695250   | 1    | Breather ASM                   |
| 9   | 696125   | 1    | Gasket-Breather                |
| 10  | 691125   | 1    | Screw (Breather ASM)           |
| 11  | 691781   | 1    | Tube-Breather                  |
| 13  | 690912   | 1    | Screw (Cylinder Head)          |
| 50  | 794305   | 1    | Manifold-Intake                |
| 51  | 794306   | 1    | Gasket-Intake                  |
| 54  | 691650   | 1    | Screw (Intake Manifold)        |
| 306 | 790836   | 1    | Shield-Cylinder                |
| 307 | 690345   | 1    | Screw (Cylinder Shield)        |
| 337 | 802592s  | 1    | Plug-Spark                     |
| 383 | 89838s   | 1    | Wrench-Spark Plug              |
| 404 | 690272   | 1    | Washer (Governor Crank)        |
| 584 | 697734   | 1    | Cover-Passage, Breather        |
| 585 | 691879   | 1    | Gasket-Passage, Breather       |
| 615 | 690340   | 1    | Retainer-Shaft, Governor       |
| 616 | 698801   | 1    | Crank-Governor                 |
| 635 | 66538s   | 1    | Boot-Spark Plug                |
| 684 | 690345   | 1    | Screw (Breather Passage Cover) |

| Ref  | Part No.  | Qty. | Description             |
|------|-----------|------|-------------------------|
| 718  | 690959    | 1    | Pin-Locating            |
| 869  | 691155    | 1    | Seat-Valve (Intake)     |
| 870  | 690380    | 1    | Seat-Valve (Exhaust)    |
| 871  | 262001    | 1    | Bushing-Guide (Exhaust) |
| 871  | 63709     | 1    | Bushing-Guide (Intake)  |
| 1058 | 277039TRI | 1    | Operator Manual         |
| 1330 | 270962    | 1    | Repair Manual           |

 


**Assemblies include all parts shown in frames**

# Crankshaft Assembly


## Briggs and Stratton 126T05-0933-B1

| Ref  | Part No. | Qty. | Description            |  |  |  |  |
|------|----------|------|------------------------|--|--|--|--|
| ③16  | 696009   | 1    | Crankshaft             |  |  |  |  |
| ③24  | 222698s  | 1    | Key-Flywheel           |  |  |  |  |
| ③25  | 791097   | 1    | Piston ASM (STD)       |  |  |  |  |
| ③25  | 791326   | 1    | Piston ASM (.020 O S)  |  |  |  |  |
| ③26  | 791098   | 1    | Ring Set (STD)         |  |  |  |  |
| ③26  | 791324   | 1    | Ring Set (.020 O S)    |  |  |  |  |
| ③27  | 691866   | 1    | Lock-Pin, Piston       |  |  |  |  |
| ③28  | 499423   | 1    | Pin-Piston (STD)       |  |  |  |  |
| ③29  | 499424   | 1    | Rod-Connecting (STD)   |  |  |  |  |
| ③32  | 691664   | 1    | Screw (Connecting Rod) |  |  |  |  |
| ③32A | 695759   | 1    | Screw (Connecting Rod) |  |  |  |  |
| ③33  | 262651s  | 1    | Valve-Exhaust          |  |  |  |  |
| ③34  | 262652s  | 1    | Valve-Intake           |  |  |  |  |
| ③35  | 691270   | 1    | Spring-Valve (Intake)  |  |  |  |  |
| ③36  | 691270   | 1    | Spring-Valve (Exhaust) |  |  |  |  |
| ③40  | 692194   | 1    | Retainer-Valve         |  |  |  |  |
| ③45  | 690548   | 1    | Tappet-Valve           |  |  |  |  |
| ③741 | 790345   | 1    | Gear-Timing            |  |  |  |  |
| ③868 | 697338   | 1    | Seal-Valve             |  |  |  |  |

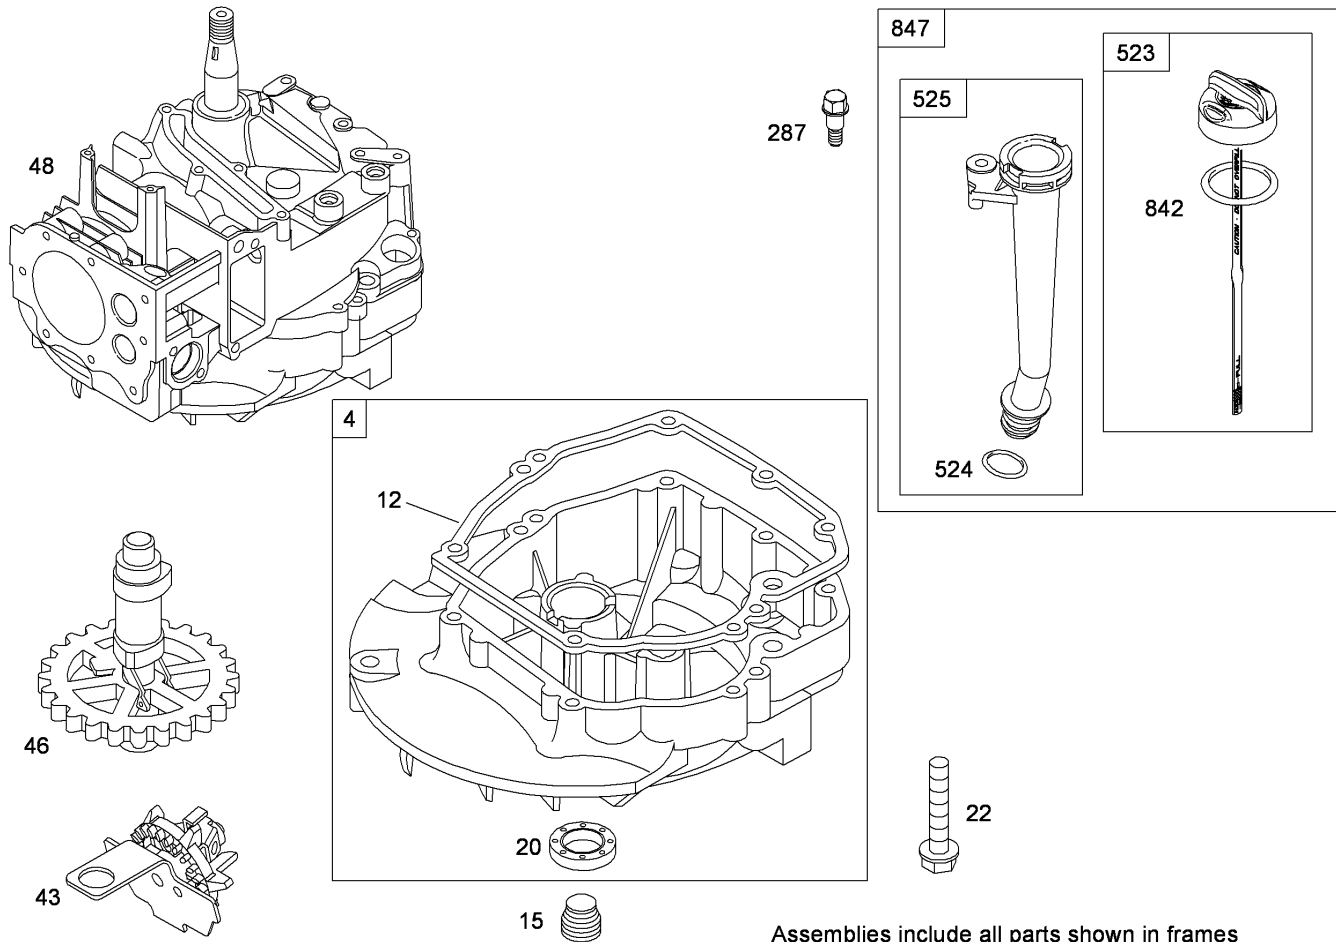

**Crankcase Assembly**  
**Briggs and Stratton 126T05-0933-B1**

| Ref | Part No. | Qty. | Description                 |  |  |  |  |
|-----|----------|------|-----------------------------|--|--|--|--|
| 4   | 493279   | 1    | Sump-Engine                 |  |  |  |  |
| 12  | 692232   | 1    | Gasket-Crankcase (.015 STD) |  |  |  |  |
| 15  | 691680   | 1    | Plug-Drain, Oil             |  |  |  |  |
| 20  | 399781s  | 1    | Seal-Oil (PTO Side)         |  |  |  |  |
| 22  | 691092   | 1    | Screw (Engine Sump)         |  |  |  |  |
| 43  | 691997   | 1    | Slinger-Oil, Governor       |  |  |  |  |
| 46  | 691449   | 1    | Camshaft                    |  |  |  |  |
| 48  | 792742   | 1    | Block-Short                 |  |  |  |  |
| 287 | 690940   | 1    | Screw (Dipstick Tube)       |  |  |  |  |
| 523 | 499621   | 1    | Dipstick                    |  |  |  |  |
| 524 | 692296   | 1    | Seal-O Ring (Dipstick Tube) |  |  |  |  |
| 525 | 495265   | 1    | Tube-Dipstick               |  |  |  |  |
| 842 | 691031   | 1    | Seal-O Ring (Dipstick Tube) |  |  |  |  |
| 847 | 692047   | 1    | Dipstick Tube ASM           |  |  |  |  |

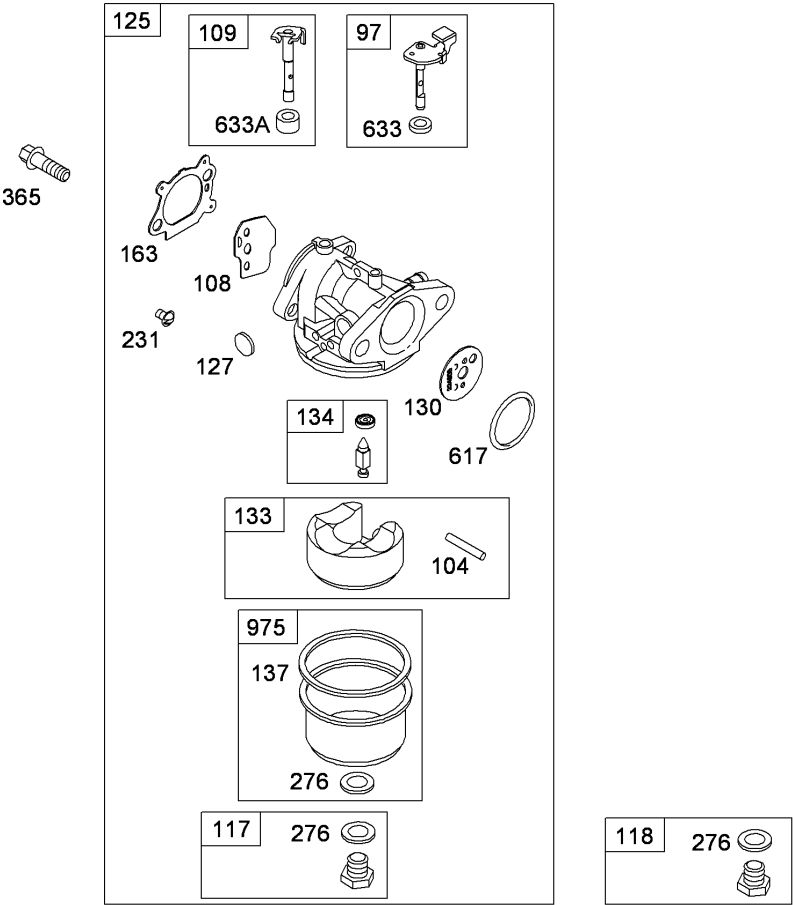 


Assemblies include all parts shown in frames

# Carburetor Assembly
 
## Briggs and Stratton 126T05-0933-B1

| Ref      | Part No. | Qty. | Description                   |  |  |  |  |
|----------|----------|------|-------------------------------|--|--|--|--|
| 3 97     | 696565   | 1    | Shaft-Throttle                |  |  |  |  |
| 3 4 104  | 691242   | 1    | Pin-Hinge, Float              |  |  |  |  |
| 3 108    | 790844   | 1    | Valve-Choke                   |  |  |  |  |
| 3 109    | 790843   | 1    | Shaft-Choke                   |  |  |  |  |
| 3 117    | 691428   | 1    | Jet-Main (Standard)           |  |  |  |  |
| 3 118    | 498977   | 1    | Jet-Main (High Altitude)      |  |  |  |  |
| 3 125    | 794304   | 1    | Carburetor                    |  |  |  |  |
| 3 4 127  | 694468   | 1    | Plug-Welch                    |  |  |  |  |
| 3 130    | 696564   | 1    | Valve-Throttle                |  |  |  |  |
| 3 133    | 398187   | 1    | Float-Carburetor              |  |  |  |  |
| 3 4 134  | 398188   | 1    | Needle And Seat Kit           |  |  |  |  |
| 3 4 137  | 693981   | 1    | Gasket-Bowl, Float            |  |  |  |  |
| 5 6      |          |      |                               |  |  |  |  |
| 3 4 163  | 272653s  | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| 5 6      |          |      |                               |  |  |  |  |
| 3 231    | 691636   | 1    | Screw (Choke Valve)           |  |  |  |  |
| 3 4 276  | 271716   | 1    | Washer-Sealing                |  |  |  |  |
| 5 6      |          |      |                               |  |  |  |  |
| 3 365    | 692524   | 1    | Screw (Carburetor)            |  |  |  |  |
| 3 4 617  | 270344s  | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| 5 6      |          |      |                               |  |  |  |  |
| 3 4 633  | 691321   | 1    | Seal-Shaft, Choke Throttle    |  |  |  |  |
| 5 6      |          |      |                               |  |  |  |  |
| 3 4 633A | 693867   | 1    | Seal-Shaft, Choke Throttle    |  |  |  |  |
| 5 6      |          |      |                               |  |  |  |  |
| 3 975    | 493640   | 1    | Bowl-Float                    |  |  |  |  |

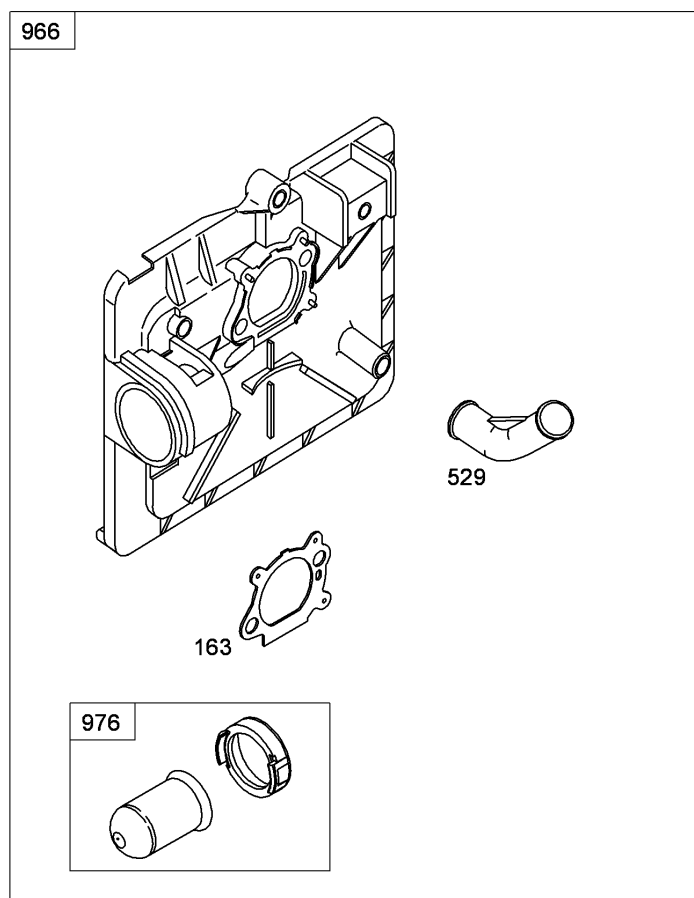


**Assemblies include all parts shown in frames**

# Air Cleaner Assembly

## Briggs and Stratton 126T05-0933-B1

| Ref     | Part No. | Qty. | Description                     |
|---------|----------|------|---------------------------------|
| ③ ④ 163 | 272653s  | 1    | Gasket-Cleaner, Air             |
| ⑤ ⑥     |          |      |                                 |
| ③ 425   | 690670   | 1    | Screw (Air Cleaner Cover)       |
| ③ 443   | 692523   | 1    | Screw (Air Cleaner Primer Base) |
| ③ 445   | 491588s  | 1    | Filter-Cartridge, Air Cleaner   |
| ③ 529   | 691923   | 1    | Grommet                         |
| ③ 966   | 792040   | 1    | Base-Primer, Air Cleaner        |
| ③ 968   | 692298   | 1    | Cover-Cleaner, Air              |
| ③ 976   | 694395   | 1    | Primer-Carburetor               |







 
|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

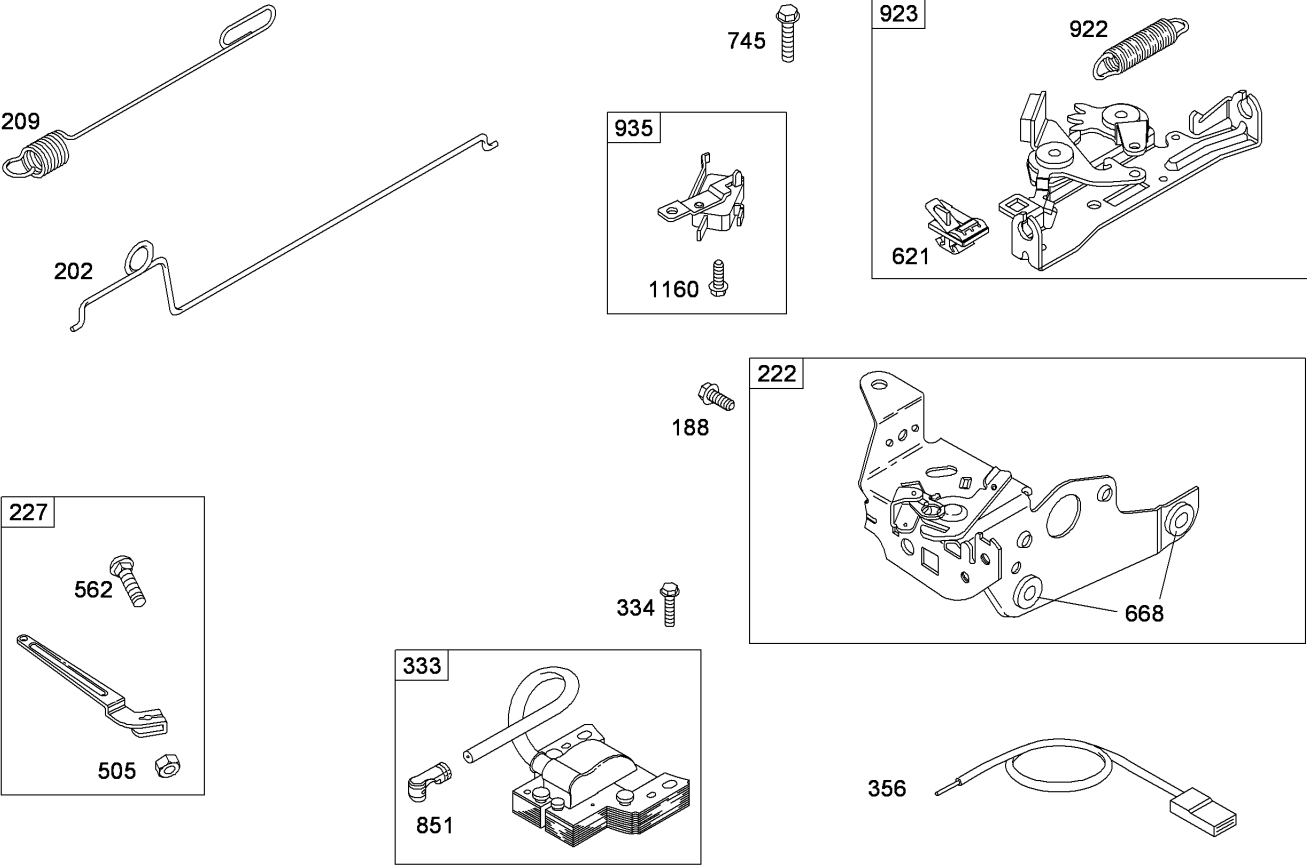

Assemblies include all parts shown in frames

**Governor Assembly**  
**Briggs and Stratton 126T05-0933-B1**

| Ref     | Part No. | Qty. | Description                    |  |  |  |  |
|---------|----------|------|--------------------------------|--|--|--|--|
| ③ 188   | 693399   | 1    | Screw (Control Bracket)        |  |  |  |  |
| ③ 202   | 691829   | 1    | Link-Governor, Mechanical      |  |  |  |  |
| ③ 209   | 691292   | 1    | Spring-Governor                |  |  |  |  |
| ③ 222   | 793754   | 1    | Bracket-Control                |  |  |  |  |
| ③ 227   | 690783   | 1    | Lever-Control, Governor        |  |  |  |  |
| ③ 333   | 802574   | 1    | Armature-Magneto               |  |  |  |  |
| ③ 334   | 691061   | 1    | Screw (Magneto Armature)       |  |  |  |  |
| ③ 356   | 692390   | 1    | Wire-Stop                      |  |  |  |  |
| ③ 505   | 691251   | 1    | Nut (Governor Control Lever)   |  |  |  |  |
| ③ 562   | 691119   | 1    | Screw (Governor Control Lever) |  |  |  |  |
| ③ 621   | 692310   | 1    | Switch-Stop                    |  |  |  |  |
| ③ ③ 668 | 493823   | 1    | Spacer                         |  |  |  |  |
| ③ 745   | 691648   | 1    | Screw (Brake)                  |  |  |  |  |
| ③ 851   | 493880s  | 1    | Terminal-Spark Plug            |  |  |  |  |
| ③ 922   | 691831   | 1    | Spring-Brake                   |  |  |  |  |
| ③ 923   | 691994   | 1    | Brake ASM                      |  |  |  |  |
| ③ 935   | 499421   | 1    | Switch-Interlock               |  |  |  |  |
| ③ 1160  | 691627   | 1    | Screw (Interlock Switch)       |  |  |  |  |

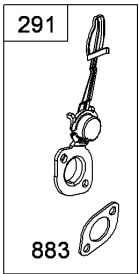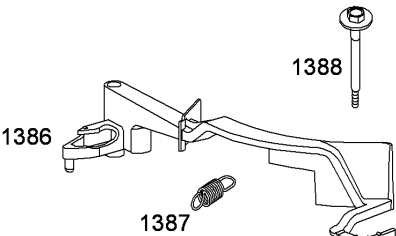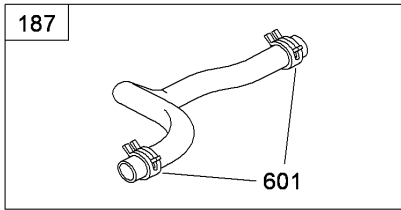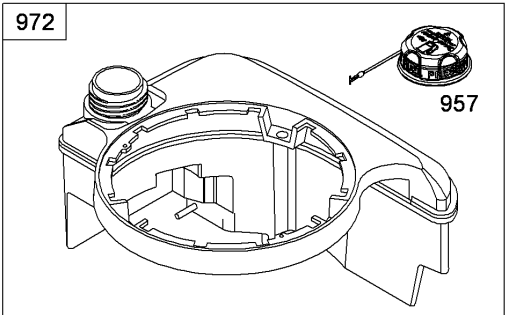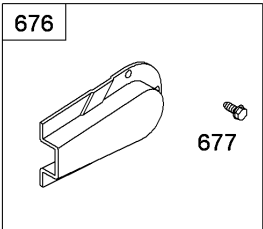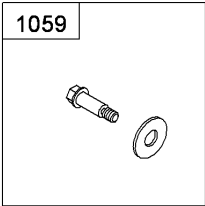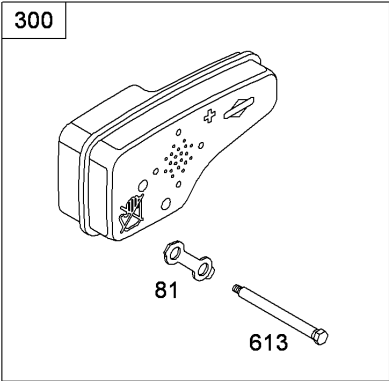       


Assemblies include all parts shown in frames

# Muffler and Fuel Tank Assembly
 
## Briggs and Stratton 126T05-0933-B1

| Ref  | Part No. | Qty. | Description                                 |  |  |  |  |
|------|----------|------|---------------------------------------------|--|--|--|--|
| 81   | 691740   | 1    | Lock-Screw, Muffler                         |  |  |  |  |
| 187  | 791873   | 1    | Line-Fuel (Molded) (Cut To Required Length) |  |  |  |  |
| 190  | 690940   | 1    | Screw (Fuel Tank)                           |  |  |  |  |
| 291  | 790830   | 1    | Thermostat                                  |  |  |  |  |
| 300  | 692038   | 1    | Muffler                                     |  |  |  |  |
| 601  | 791850   | 1    | Clamp-Hose                                  |  |  |  |  |
| 613  | 691340   | 1    | Screw (Muffler)                             |  |  |  |  |
| 670  | 692294   | 1    | Spacer-Tank, Fuel                           |  |  |  |  |
| 676  | 493871   | 1    | Deflector-Muffler                           |  |  |  |  |
| 677  | 690661   | 1    | Screw (Muffler Deflector)                   |  |  |  |  |
| 883  | 691881   | 1    | Gasket-Exhaust                              |  |  |  |  |
| 957  | 699985   | 1    | Cap-Tank, Fuel                              |  |  |  |  |
| 972  | 699374   | 1    | Tank-Fuel                                   |  |  |  |  |
| 1059 | 692311   | 1    | Screw And Washer Kit                        |  |  |  |  |
| 1386 | 790848   | 1    | Vane-Air                                    |  |  |  |  |
| 1387 | 790849   | 1    | Spring-Vane, Air                            |  |  |  |  |
| 1388 | 790850   | 1    | Screw (Air Vane)                            |  |  |  |  |

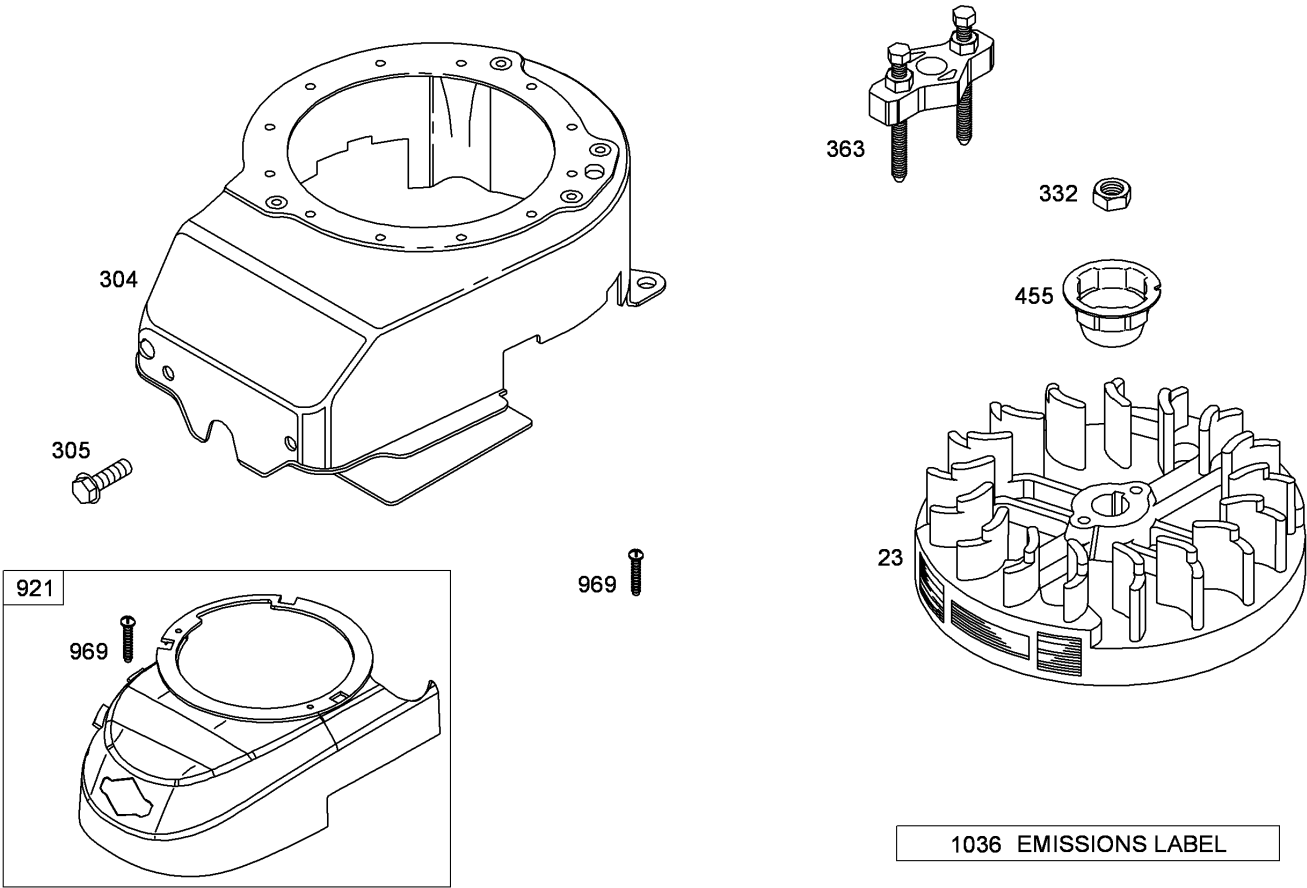

Assemblies include all parts shown in frames

**Blower Housing Assembly**  
**Briggs and Stratton 126T05-0933-B1**

| Ref      | Part No. | Qty. | Description                  |  |  |  |  |
|----------|----------|------|------------------------------|--|--|--|--|
| ❶ 23     | 691987   | 1    | Flywheel                     |  |  |  |  |
| ❶ 304    | 790983   | 1    | Housing-Blower               |  |  |  |  |
| ❶ 305    | 691108   | 1    | Screw (Blower Housing)       |  |  |  |  |
| ❶ 332    | 690662   | 1    | Nut (Flywheel)               |  |  |  |  |
| ❶ 363    | 19069    | 1    | Puller-Flywheel              |  |  |  |  |
| ❶ 455    | 791760   | 1    | Cup-Flywheel                 |  |  |  |  |
| ❶ 921    | 790036   | 1    | Cover-Housing, Blower        |  |  |  |  |
| ❶ 969    | 691138   | 1    | Screw (Blower Housing Cover) |  |  |  |  |
| ❷ ❶ 1036 |          | 1    | Label-Emissions              |  |  |  |  |



# Starter Assembly

 
## Briggs and Stratton 126T05-0933-B1

| Ref   | Part No. | Qty. | Description                           |  |  |  |  |
|-------|----------|------|---------------------------------------|--|--|--|--|
| ③55   | 691421   | 1    | Housing-Starter, Rewind               |  |  |  |  |
| ③58   | 697316   | 1    | Rope-Starter (Cut To Required Length) |  |  |  |  |
| ③60   | 281434s  | 1    | Grip-Rope, Starter                    |  |  |  |  |
| ③65   | 690837   | 1    | Screw (Rewind Starter)                |  |  |  |  |
| ③456  | 692299   | 1    | Plate-Friction, Pawl                  |  |  |  |  |
| ③459  | 281505s  | 1    | Ratchet-Pawl                          |  |  |  |  |
| ③592  | 690800   | 1    | Nut (Rewind Starter)                  |  |  |  |  |
| ③597  | 691696   | 1    | Screw (Pawl Friction Plate)           |  |  |  |  |
| ③608  | 497680   | 1    | Starter-Rewind                        |  |  |  |  |
| ③689  | 691855   | 1    | Spring-Friction                       |  |  |  |  |
| ③1210 | 498144   | 1    | Pulley And Spring ASM (Pulley)        |  |  |  |  |
| ③1211 | 498144   | 1    | Pulley And Spring ASM (Spring)        |  |  |  |  |



**Electric Starter Assembly**  
**Briggs and Stratton 126T05-0933-B1**



| Ref  | Part No. | Qty. | Description                |  |  |  |  |
|------|----------|------|----------------------------|--|--|--|--|
| 309  | 795092   | 1    | Motor-Starter              |  |  |  |  |
| 510  | 795093   | 1    | Drive-Starter              |  |  |  |  |
| 513  | 692358   | 1    | Clutch-Drive               |  |  |  |  |
| 651  | 691660   | 1    | Screw (Starter Gear Cover) |  |  |  |  |
| 697  | 691127   | 1    | Screw (Drive Cap)          |  |  |  |  |
| 742  | 93941    | 1    | Retainer-E Ring            |  |  |  |  |
| 783  | 691918   | 1    | Gear-Pinion                |  |  |  |  |
| 783A | 691269   | 1    | Gear-Pinion                |  |  |  |  |
| 784  | 7950951  | 1    | Cover-Gear, Starter        |  |  |  |  |
| 785  | 692352   | 1    | Gasket-Cover, Starter      |  |  |  |  |
| 937  | 691325   | 1    | Spline-Starter             |  |  |  |  |

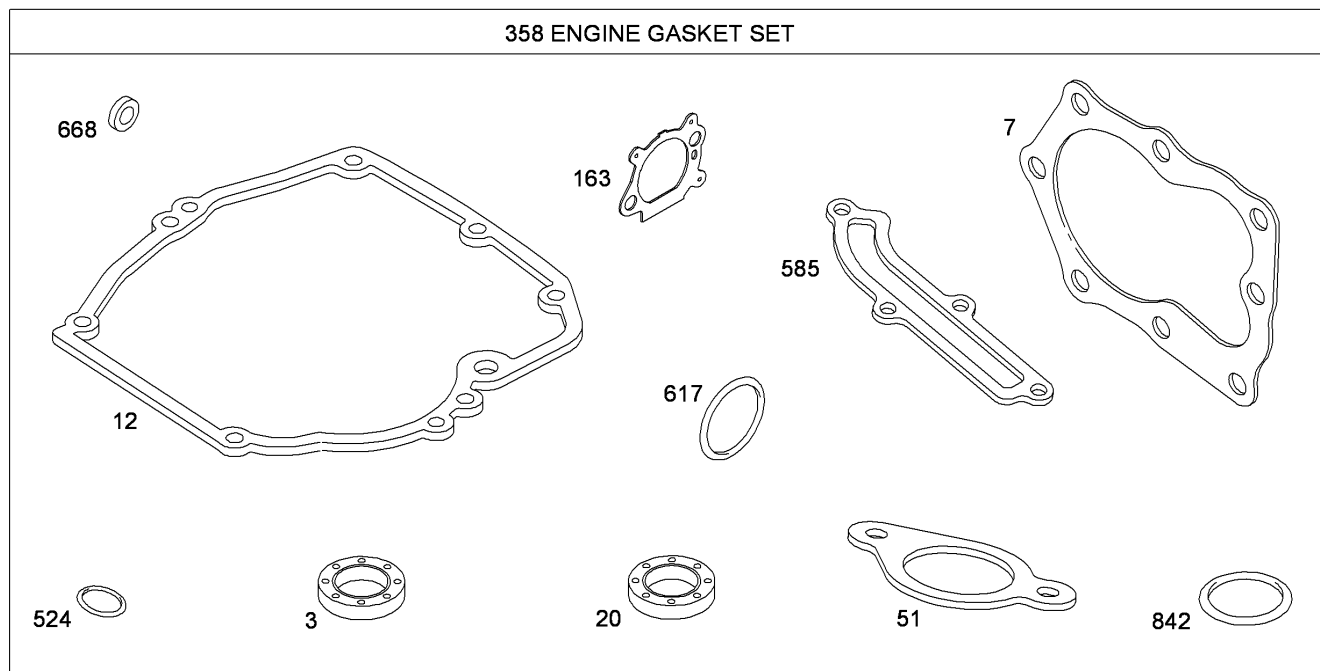

Assemblies include all parts shown in frames

# Engine Gasket Set Briggs and Stratton 126T05-0933-B1
  
| Ref          | Part No. | Qty. | Description                   |  |  |  |  |
|--------------|----------|------|-------------------------------|--|--|--|--|
| <b>353</b>   | 299819s  | 1    | Seal-Oil (Magneto Side)       |  |  |  |  |
| <b>357</b>   | 692249   | 1    | Gasket-Head, Cylinder         |  |  |  |  |
| <b>3512</b>  | 692232   | 1    | Gasket-Crankcase (.015 STD)   |  |  |  |  |
| <b>3520</b>  | 399781s  | 1    | Seal-Oil (PTO Side)           |  |  |  |  |
| <b>3551</b>  | 794306   | 1    | Gasket-Intake                 |  |  |  |  |
| <b>34163</b> | 272653s  | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| <b>56</b>    |          |      |                               |  |  |  |  |
| <b>3358</b>  | 794307   | 1    | Engine Gasket Set             |  |  |  |  |
| <b>35524</b> | 692296   | 1    | Seal-O Ring (Dipstick Tube)   |  |  |  |  |
| <b>35585</b> | 691879   | 1    | Gasket-Passage, Breather      |  |  |  |  |
| <b>34617</b> | 270344s  | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| <b>56</b>    |          |      |                               |  |  |  |  |
| <b>35668</b> | 493823   | 1    | Spacer                        |  |  |  |  |
| <b>35842</b> | 691031   | 1    | Seal-O Ring (Dipstick)        |  |  |  |  |

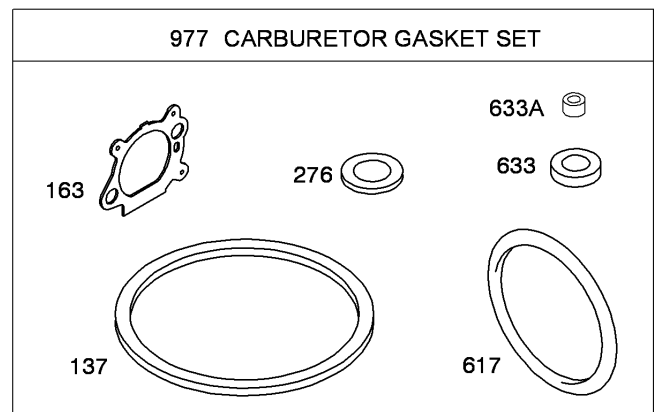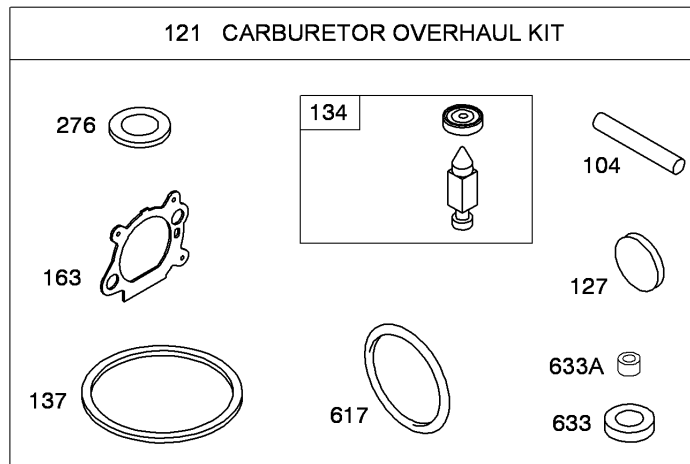

**Assemblies include all parts shown in frames**

# Carburetor Overhaul Kit

## Briggs and Stratton 126T05-0933-B1

| Ref    | Part No. | Qty. | Description                |  |  |  |  |
|--------|----------|------|----------------------------|--|--|--|--|
| 34104  | 691242   | 1    | Pin-Hinge, Float           |  |  |  |  |
| 3121   | 498260   | 1    | Carburetor Overhaul Kit    |  |  |  |  |
| 34127  | 694468   | 1    | Plug-Welch                 |  |  |  |  |
| 34134  | 398188   | 1    | Needle And Seat Kit        |  |  |  |  |
| 34137  | 693981   | 1    | Gasket-Bowl, Float         |  |  |  |  |
| 6      |          |      |                            |  |  |  |  |
| 34163  | 272653s  | 1    | Gasket-Cleaner, Air        |  |  |  |  |
| 56     |          |      |                            |  |  |  |  |
| 34276  | 271716   | 1    | Washer-Sealing             |  |  |  |  |
| 6      |          |      |                            |  |  |  |  |
| 34617  | 270344s  | 1    | Seal-O Ring                |  |  |  |  |
| 56     |          |      |                            |  |  |  |  |
| 34633  | 691321   | 1    | Seal-Shaft, Choke Throttle |  |  |  |  |
| 6      |          |      |                            |  |  |  |  |
| 34633A | 693867   | 1    | Seal-Shaft, Choke Throttle |  |  |  |  |
| 6      |          |      |                            |  |  |  |  |
| 3977   | 498261   | 1    | Carburetor Gasket Set      |  |  |  |  |

# Attachments and Accessories

For 20334 - 22in Recycler Lawn Mower

| Product Name                         | Model/Part |
|--------------------------------------|------------|
| Traction Assist Handle Kit . . . . . | 108-8120   |
| Loose Parts Kit . . . . .            | 117-4134   |
| Replacement Bag . . . . .            | 59310      |
| Replacement Bag Kit . . . . .        | 59312      |
| 22 Inch Blade Kit . . . . .          | 59534      |

## NOTES

