



22in Recycler[®] Lawn Mower

Model No. 20334 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute and Rear Door Assembly	 3	Air Cleaner Assembly Briggs and Stratton	
Front Axle Assembly	 4	126T05-0933-B1	 14
Rear Axle and Transmission Assembly	 5	Governor Assembly Briggs and Stratton	
Engine Assembly	 6	126T05-0933-B1	 15
Handle Assembly	 7	Muffler and Fuel Tank Assembly Briggs and	
Electric Start Assembly	 8	Stratton 126T05-0933-B1	 16
Rear Bag Assembly	 9	Blower Housing Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		126T05-0933-B1	 17
126T05-0933-B1	 10	Starter Assembly Briggs and Stratton 126T05-	
Crankshaft Assembly Briggs and Stratton		0933-B1	 18
126T05-0933-B1	 11	Electric Starter Assembly Briggs and Stratton	
Crankcase Assembly Briggs and Stratton		126T05-0933-B1	 19
126T05-0933-B1	 12	Engine Gasket Set Briggs and Stratton	
Carburetor Assembly Briggs and Stratton		126T05-0933-B1	 20
126T05-0933-B1	 13	Carburetor Overhaul Kit Briggs and Stratton	
		126T05-0933-B1	 21
		Attachments and Accessories List	 22

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHE. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |



Deck, Side Chute and Rear Door Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	117-1084	1	Housing ASM	26	99-5291	1	Rod-Cover
1:2	94-8072	1	Decal-Danger	27	99-5293	1	Spring-Torsion
1:3	115-4676	1	Decal-Recycler	28	115-8449	1	Deflector-Side
1:4	112-8867	1	Decal	29	115-8447	1	Chute-Discharge, Side
2	114-7957	1	Chute-Recycle				
3	114-7961	1	Baffle-Rear				
4	46-8091	9	Screw-HWH				
5	114-7963-01	1	Baffle-Front				
6	114-7960	1	Deflector-Recycle				
7	114-7959	1	Latch-Recycle				
8	117-1031	1	Spring-Compression				
9	114-7958	1	Knob-Recycle				
10	32104-120	2	Screw-PPH				
11	114-7992	1	Rear Door ASM				
11:2	114-7982	1	Decal-Warning				
12	114-7924	1	Spring-Torsion				
14	112-6401	1	Coupling-Hose, Washout Port				
15	112-6400	1	Port-Washout				
16	112-6438	1	Washer-Seal, Washout Port				
17	3254-5	1	Washer-Tooth				
18	3218-6	1	Nut-Jam				
23	115-2859	1	Spring-Torsion				
24	112-6416	1	Bracket-Cover				
25	99-8445	2	Screw-HWH				



Front Axle Assembly

Ref	Part No.	Qty.	Description				
1	114-7987	1	Bumper				
2	105-6849	2	Screw-Thread Forming				
3	115-1956-03	2	Plate-HOC, Front				
4	105-1818	2	Bushing-Mount, HOC				
5	105-1807	2	Arm-Pivot, Front				
6	105-1809	2	Arm-Spring				
7	40-1940	2	Washer				
8	614650	2	Bolt-Shoulder				
9	105-3048	2	Washer-Flat				
10	322-6	2	Screw-HH				
11	115-2894	2	8In Wheel ASM				
12	105-3042	2	Knob-Lever, HOC				
13	322-3	4	Screw-HH				
14	3296-29	6	Nut-Lock, NI				



Rear Axle and Transmission Assembly

 
Ref	Part No.	Qty.	Description
1	114-7955-03	1	Plate-LH, Rear HOC
2	114-7956-03	1	Plate-RH, Rear HOC
3	115-2893	1	Shield-Trailing
4	3296-29	4	Nut-Lock, NI
5	115-8406	2	Anchor-Bag (Rwd)
6	105-9437	2	Screw-PPH
7	322-3	4	Screw-HH
8	108-9781	2	Arm-Pivot, Rear
9	108-9780	2	Arm-Spring
10	108-9779	2	Retainer-Bushing, HOC
11	110-1792	2	Wheel Cover ASM
11:1		1	Cover-Wheel
11:2	614426	1	Washer-Stepped
12	614650	2	Bolt-Shoulder
13	115-4695	2	Wheel Gear ASM
14	105-3042	2	Knob-Lever, HOC
15	104-8699	2	Bearing-Ball
16	108-9782	2	Bushing-Sleeve
17	115-4652	1	Transmission (4.5/1)
18	114-7977-03	1	Bracket-Transmission
19	108-7476	3	Screw-Plastite
20	110-7191	2	Washer-Thrust
21	32151-61	2	Ring-Retaining
22	115-4668	2	Gear-Pinion, 12T

Ref	Part No.	Qty.	Description
23	115-4669	1	V-Belt
24	117-1092	2	Screw-PPH




Engine Assembly

Ref	Part No.	Qty.	Description				
1		1	Engine-Briggs, 126T05-0933-B1				
2	106-3999	1	Spacer-Driver				
3	106-3987	1	Blade Driver ASM				
4	108-9764-03	1	Blade-22 Inch				
5	108-3766-03	1	Support-Blade				
6	105-8579	1	Bolt-Blade				
7	105-3030-03	1	Guide-Belt				
8	95-1726	3	Screw-Taptite				
9	104-7577-03	1	Shield-Muffler				
10	32144-1	3	Screw-Taptite				
11	2210-316	1	Stop-Rope				
12	117-1017	1	Decal				
13	114-7937	1	Cover-Belt				
14	46-8091	2	Screw-HWH				

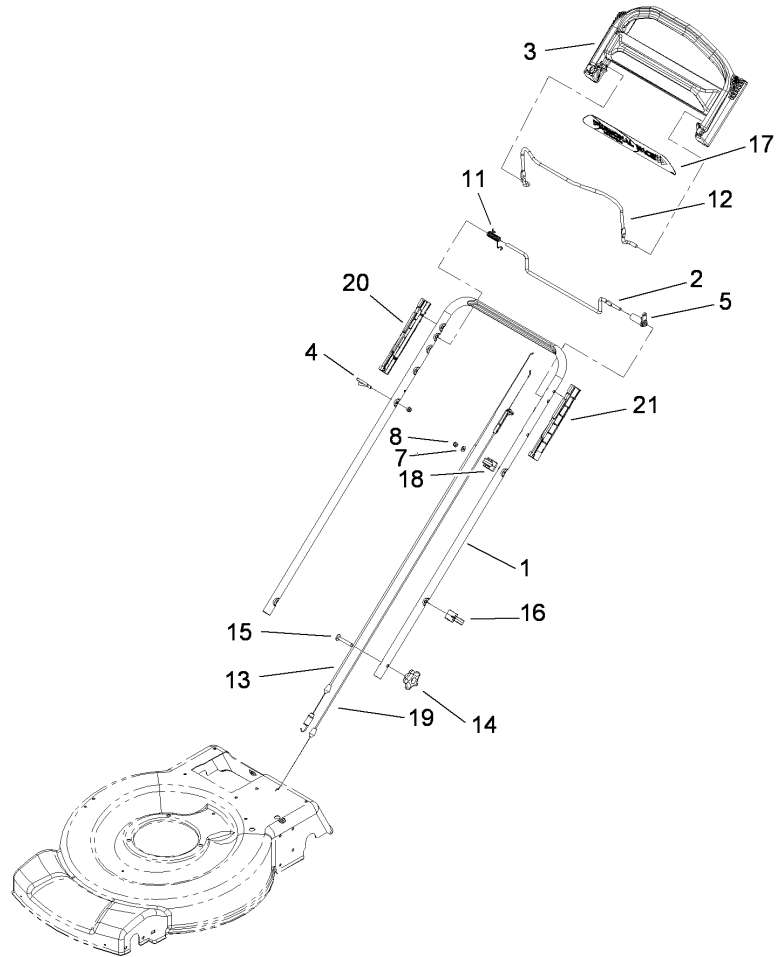


Handle Assembly

Ref	Part No.	Qty.	Description				
1	114-0333-05	1	Handle				
2	99-1588	1	Bar-Control, Traction				
3	104-8678	1	Handle-Control				
4	86-9671	1	Guide-Rope				
5	99-1589	1	Lever-Traction				
7	3256-1	1	Washer-Flat				
8	3296-73	2	Nut-Lock, NI				
11	104-8690	1	Spring-Torsion				
12	104-8679-03	1	Bail-Brake				
13	115-8435	1	Cable-Traction				
14	108-8162	2	Knob-Locking				
15	3230-6	2	Screw-CARR				
16	106-6805	1	Guide-Cable				
17	117-1019	1	Decal				
18	99-5239	1	Anchor-Cable				
19	115-8437	1	Cable-Brake				
20	105-6841	1	Guide-RH				
21	105-6842	1	Guide-LH				

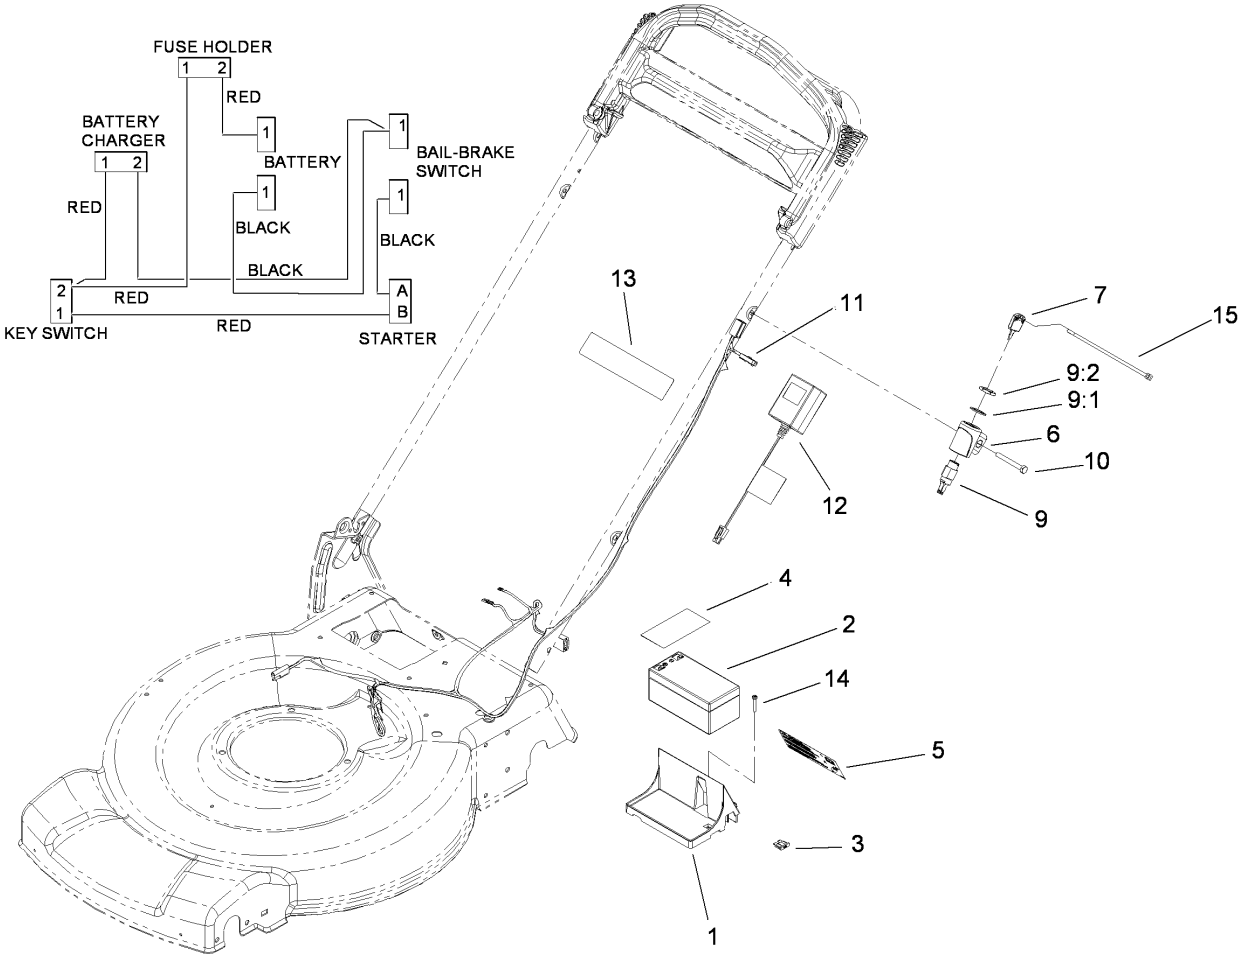 

Electric Start Assembly

Ref	Part No.	Qty.	Description				
1	114-7936	1	Tray-Battery				
2	106-8397	1	Battery-12 Volt				
3	99-6124	2	Fuse-40 Amp				
4	112-8763	1	Decal-Terminal, Battery				
5	117-1054	1	Decal				
6	108-9760	1	Mount-Switch				
7	700918	1	Key				
9	46-5780	1	Switch-Starter				
9:1	3254-5	1	Washer-Tooth				
9:2	218-461	1	Nut-HH				
10	321-50	1	Screw-HH				
11	115-4675	1	Harness-Wire				
12	104-7401	1	Charger-12 Volt				
13	104-7953	1	Decal-Harness				
14	32144-97	1	Screw-PPH, Plastite				
15	614249	1	Strap-Tie				

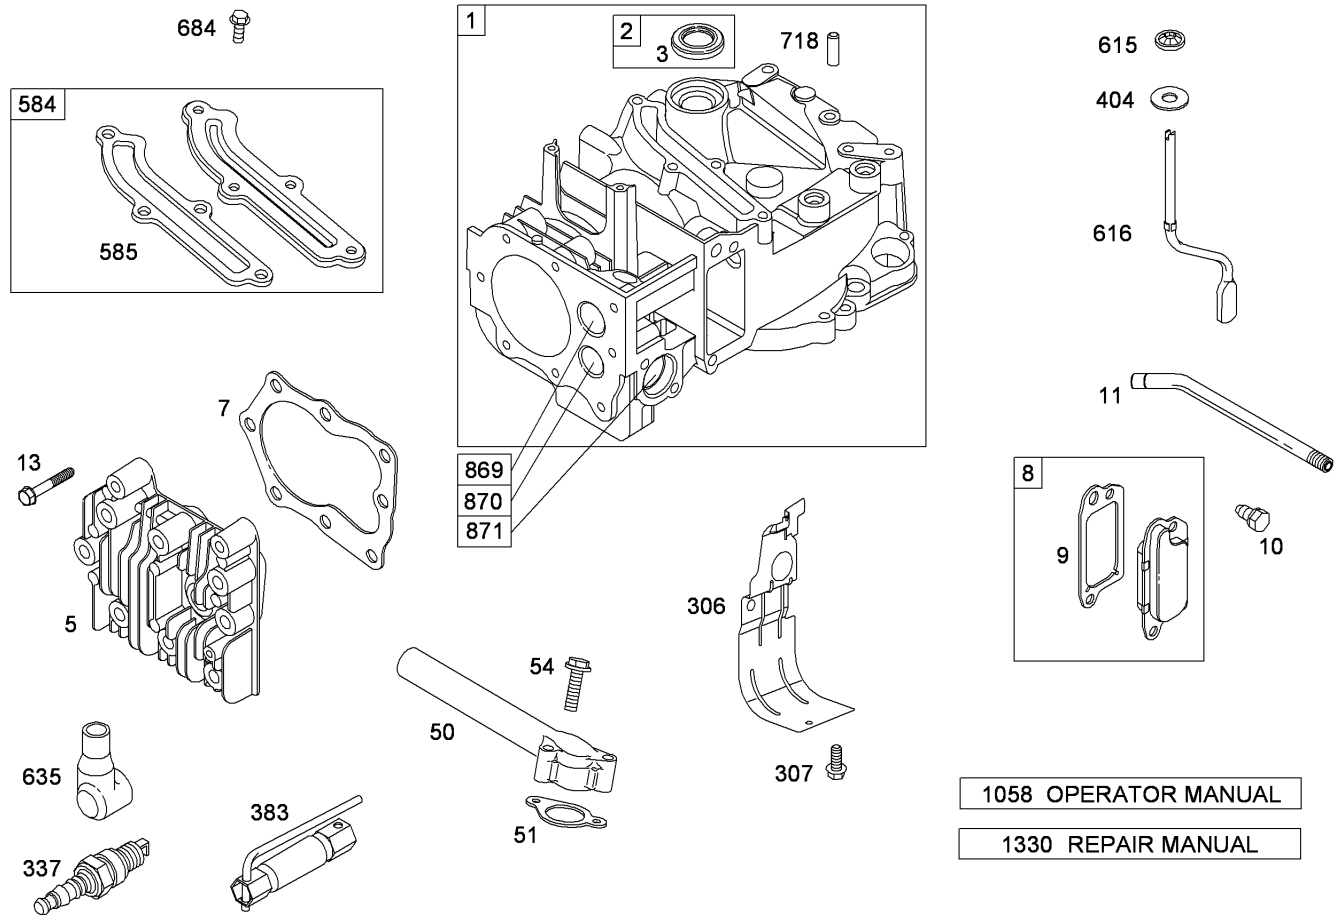 

Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description
❶1	697322	1	Cylinder ASM
❷2	399269	1	Bushing And Seal Kit
❸❹❸3	299819s	1	Seal-Oil (Magneto Side)
❹5	691160	1	Head-Cylinder
❹❹7	692249	1	Gasket-Head, Cylinder
❹8	695250	1	Breather ASM
❹9	696125	1	Gasket-Breather
❹10	691125	1	Screw (Breather ASM)
❹11	691781	1	Tube-Breather
❹13	690912	1	Screw (Cylinder Head)
❹50	794305	1	Manifold-Intake
❹❹51	794306	1	Gasket-Intake
❹54	691650	1	Screw (Intake Manifold)
❹306	790836	1	Shield-Cylinder
❹307	690345	1	Screw (Cylinder Shield)
❹337	802592s	1	Plug-Spark
❹383	89838s	1	Wrench-Spark Plug
❹404	690272	1	Washer (Governor Crank)
❹584	697734	1	Cover-Passage, Breather
❹❹585	691879	1	Gasket-Passage, Breather
❹615	690340	1	Retainer-Shaft, Governor
❹616	698801	1	Crank-Governor
❹635	66538s	1	Boot-Spark Plug
❹684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
❹718	690959	1	Pin-Locating
❹869	691155	1	Seat-Valve (Intake)
❹870	690380	1	Seat-Valve (Exhaust)
❹871	262001	1	Bushing-Guide (Exhaust)
❹871	63709	1	Bushing-Guide (Intake)
❹1058	277039TRI	1	Operator Manual
❹1330	270962	1	Repair Manual




Assemblies include all parts shown in frames

Crankshaft Assembly


Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
③16	696009	1	Crankshaft				
③24	222698s	1	Key-Flywheel				
③25	791097	1	Piston ASM (STD)				
③25	791326	1	Piston ASM (.020 O S)				
③26	791098	1	Ring Set (STD)				
③26	791324	1	Ring Set (.020 O S)				
③27	691866	1	Lock-Pin, Piston				
③28	499423	1	Pin-Piston (STD)				
③29	499424	1	Rod-Connecting (STD)				
③32	691664	1	Screw (Connecting Rod)				
③32A	695759	1	Screw (Connecting Rod)				
③33	262651s	1	Valve-Exhaust				
③34	262652s	1	Valve-Intake				
③35	691270	1	Spring-Valve (Intake)				
③36	691270	1	Spring-Valve (Exhaust)				
③40	692194	1	Retainer-Valve				
③45	690548	1	Tappet-Valve				
③741	790345	1	Gear-Timing				
③868	697338	1	Seal-Valve				

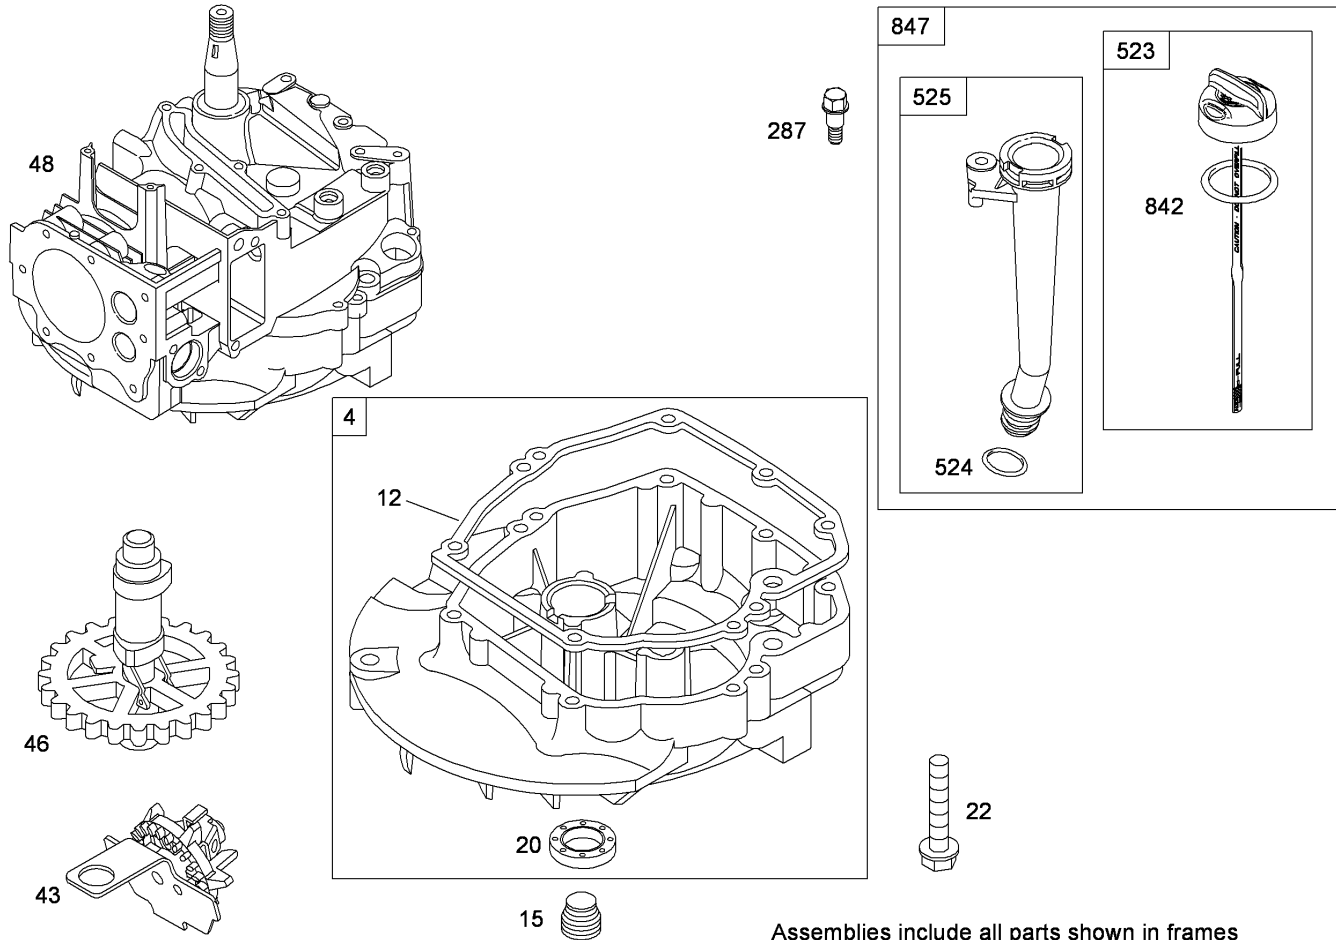 

Crankcase Assembly
Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 STD)				
15	691680	1	Plug-Drain, Oil				
20	399781s	1	Seal-Oil (PTO Side)				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Oil, Governor				
46	691449	1	Camshaft				
48	792742	1	Block-Short				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal-O Ring (Dipstick Tube)				
525	495265	1	Tube-Dipstick				
842	691031	1	Seal-O Ring (Dipstick Tube)				
847	692047	1	Dipstick Tube ASM				

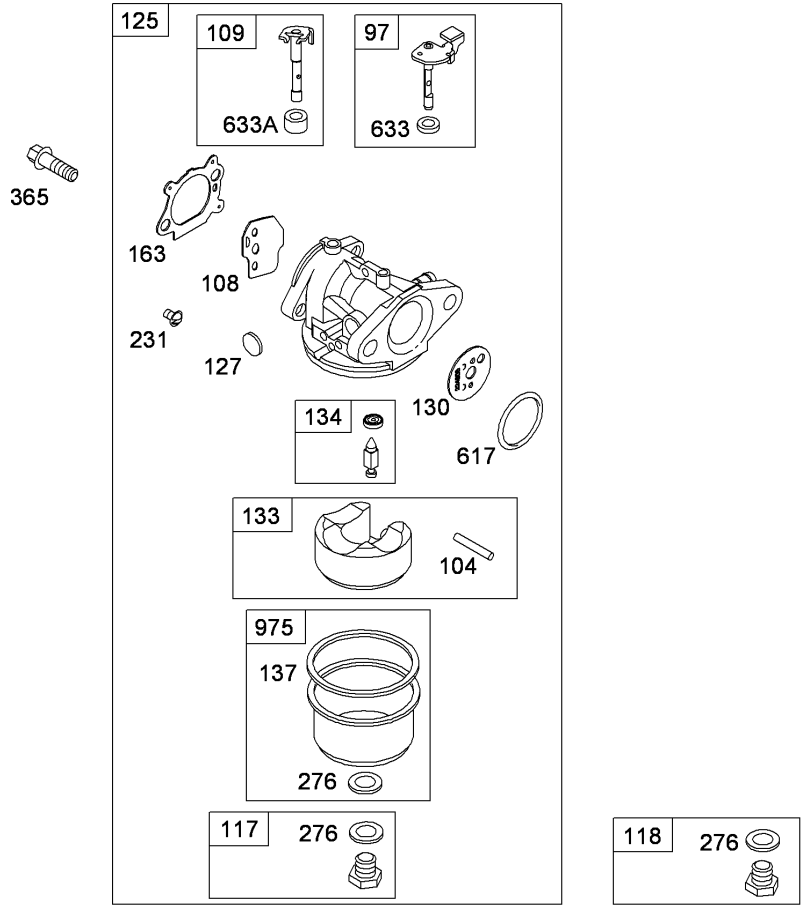 


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
③ 97	696565	1	Shaft-Throttle				
③ ④ 104	691242	1	Pin-Hinge, Float				
③ 108	790844	1	Valve-Choke				
③ 109	790843	1	Shaft-Choke				
③ 117	691428	1	Jet-Main (Standard)				
③ 118	498977	1	Jet-Main (High Altitude)				
③ 125	794304	1	Carburetor				
③ ④ 127	694468	1	Plug-Welch				
③ 130	696564	1	Valve-Throttle				
③ 133	398187	1	Float-Carburetor				
③ ④ 134	398188	1	Needle And Seat Kit				
③ ④ 137	693981	1	Gasket-Bowl, Float				
⑤							
③ ④ 163	272653s	1	Gasket-Cleaner, Air				
⑤ ⑥							
③ 231	691636	1	Screw (Choke Valve)				
③ ④ 276	271716	1	Washer-Sealing				
⑤							
③ 365	692524	1	Screw (Carburetor)				
③ ④ 617	270344s	1	Seal-O Ring (Intake Manifold)				
⑤							
③ ④ 633	691321	1	Seal-Shaft, Choke Throttle				
⑤							
③ ④ 633A	693867	1	Seal-Shaft, Choke Throttle				
⑤							
③ 975	493640	1	Bowl-Float				

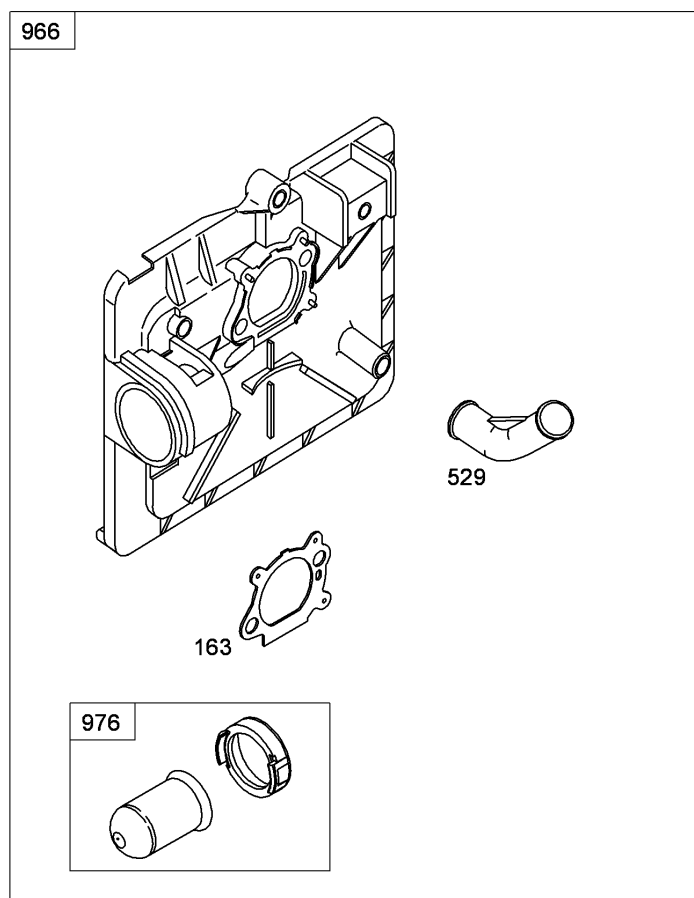 


Assemblies include all parts shown in frames

Air Cleaner Assembly

Briggs and Stratton 126T05-0933-B1


Ref	Part No.	Qty.	Description
③ ④ 163	272653s	1	Gasket-Cleaner, Air
⑤ ⑥			
③ 425	690670	1	Screw (Air Cleaner Cover)
③ 443	692523	1	Screw (Air Cleaner Primer Base)
③ 445	491588s	1	Filter-Cartridge, Air Cleaner
③ 529	691923	1	Grommet
③ 966	792040	1	Base-Primer, Air Cleaner
③ 968	692298	1	Cover-Cleaner, Air
③ 976	694395	1	Primer-Carburetor

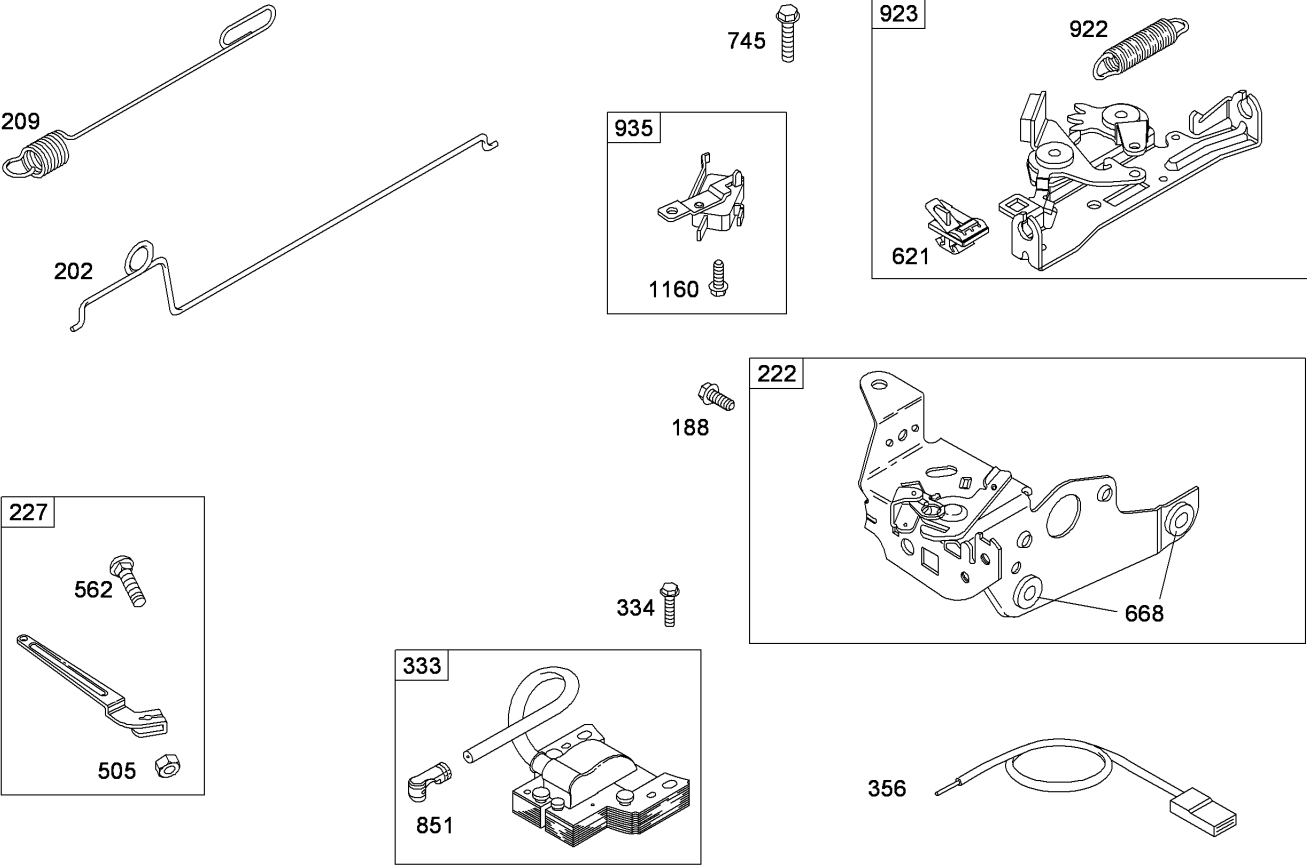 

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T05-0933-B1


Ref	Part No.	Qty.	Description				
❶ 188	693399	1	Screw (Control Bracket)				
❶ 202	691829	1	Link-Governor, Mechanical				
❶ 209	691292	1	Spring-Governor				
❶ 222	793754	1	Bracket-Control				
❶ 227	690783	1	Lever-Control, Governor				
❶ 333	802574	1	Armature-Magneto				
❶ 334	691061	1	Screw (Magneto Armature)				
❶ 356	692390	1	Wire-Stop				
❶ 505	691251	1	Nut (Governor Control Lever)				
❶ 562	691119	1	Screw (Governor Control Lever)				
❶ 621	692310	1	Switch-Stop				
❶ ❶ 668	493823	1	Spacer				
❶ 745	691648	1	Screw (Brake)				
❶ 851	493880s	1	Terminal-Spark Plug				
❶ 922	691831	1	Spring-Brake				
❶ 923	691994	1	Brake ASM				
❶ 935	499421	1	Switch-Interlock				
❶ 1160	691627	1	Screw (Interlock Switch)				

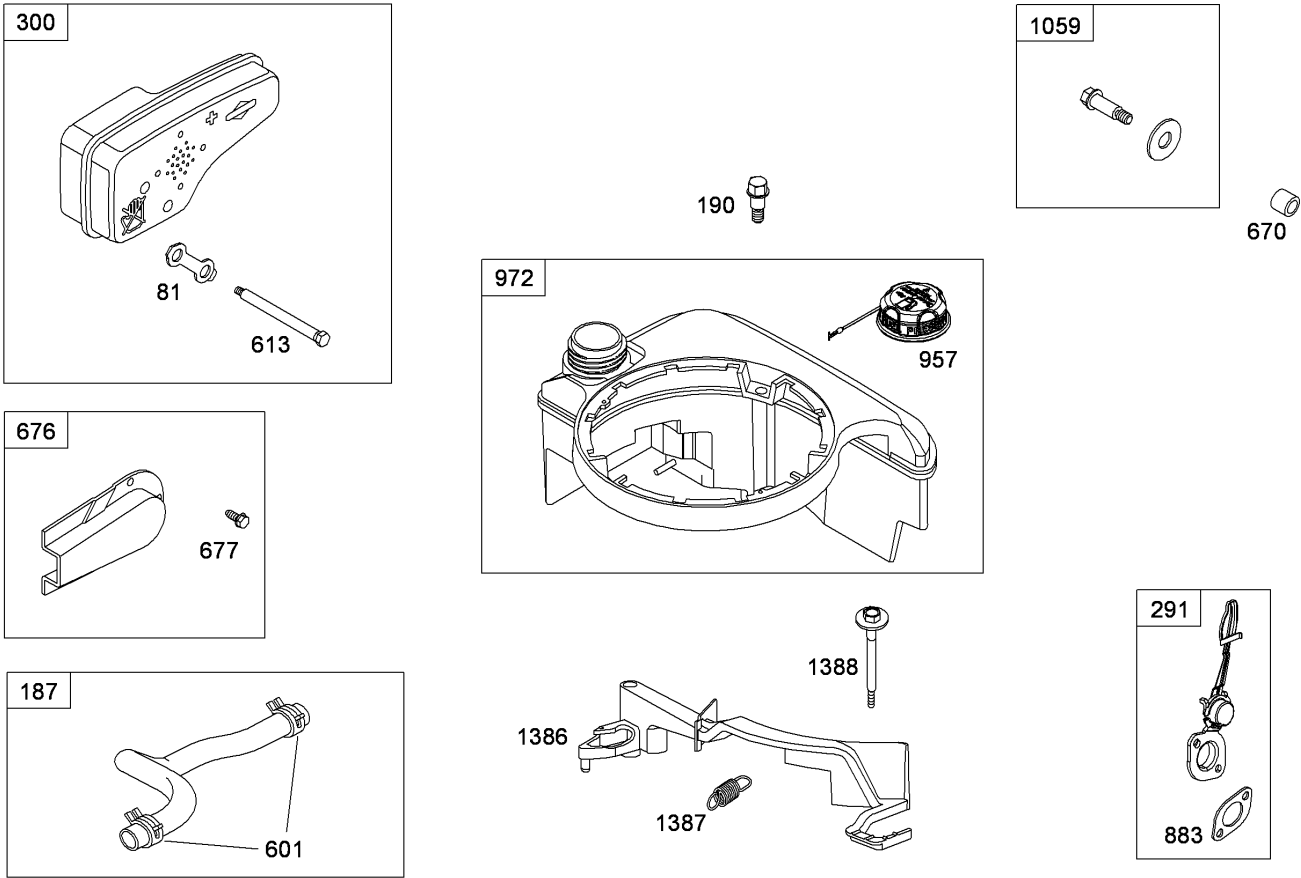 

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly
Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
❸81	691740	1	Lock-Screw, Muffler				
❸187	791873	1	Line-Fuel (Molded) (Cut To Required Length)				
❸190	690940	1	Screw (Fuel Tank)				
❸291	790830	1	Thermostat				
❸300	692038	1	Muffler				
❸601	791850	1	Clamp-Hose				
❸613	691340	1	Screw (Muffler)				
❸670	692294	1	Spacer-Tank, Fuel				
❸676	493871	1	Deflector-Muffler				
❸677	690661	1	Screw (Muffler Deflector)				
❸883	691881	1	Gasket-Exhaust				
❸957	699985	1	Cap-Tank, Fuel				
❸972	699374	1	Tank-Fuel				
❸1059	692311	1	Screw And Washer Kit				
❸1386	790848	1	Vane-Air				
❸1387	790849	1	Spring-Vane, Air				
❸1388	790850	1	Screw (Air Vane)				

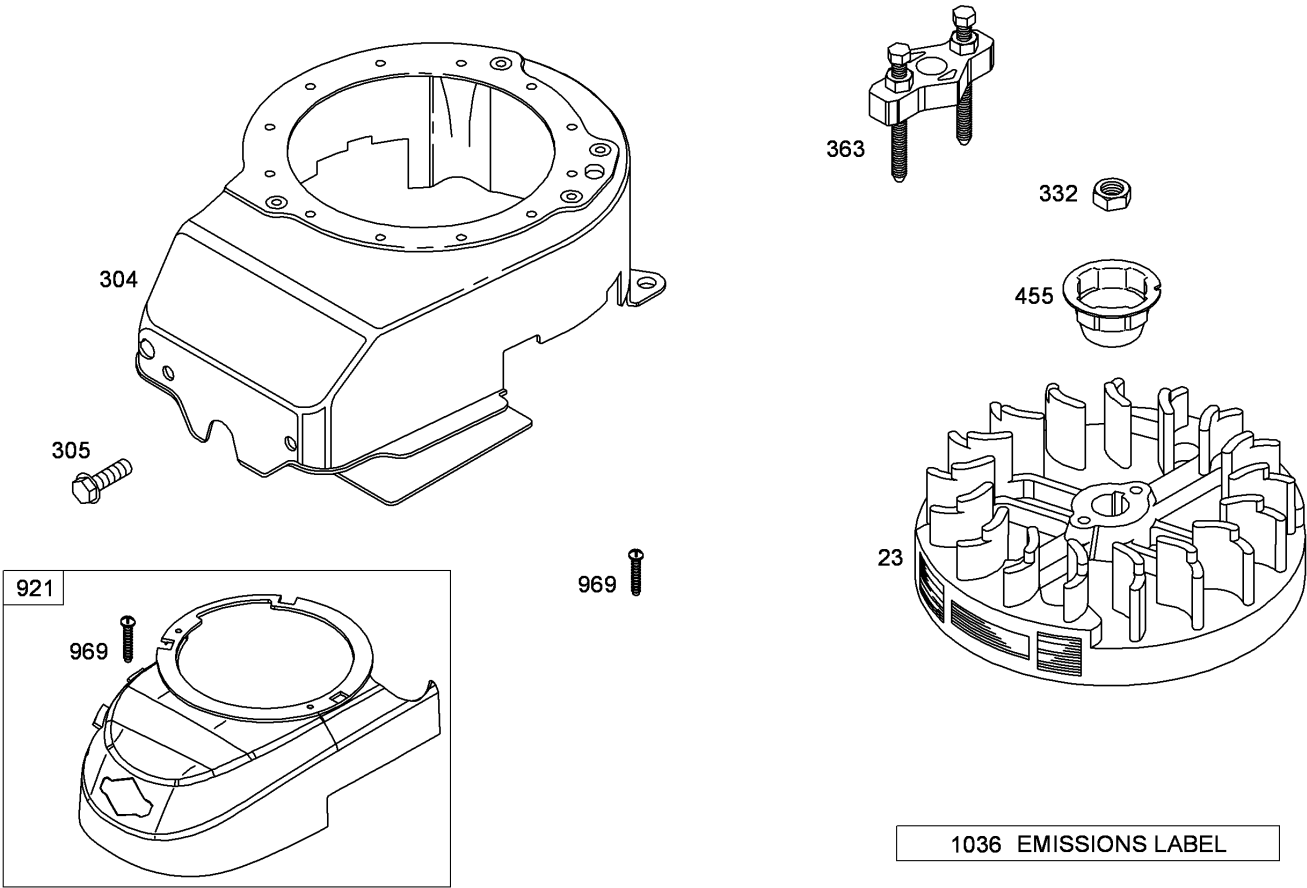 

Assemblies include all parts shown in frames

Blower Housing Assembly

Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
❶ 23	691987	1	Flywheel				
❶ 304	790983	1	Housing-Blower				
❶ 305	691108	1	Screw (Blower Housing)				
❶ 332	690662	1	Nut (Flywheel)				
❶ 363	19069	1	Puller-Flywheel				
❶ 455	791760	1	Cup-Flywheel				
❶ 921	790036	1	Cover-Housing, Blower				
❶ 969	691138	1	Screw (Blower Housing Cover)				
❷ ❶ 1036		1	Label-Emissions				




Starter Assembly
Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description
③55	691421	1	Housing-Starter, Rewind
③58	697316	1	Rope-Starter (Cut To Required Length)
③60	281434s	1	Grip-Rope, Starter
③65	690837	1	Screw (Rewind Starter)
③456	692299	1	Plate-Friction, Pawl
③459	281505s	1	Ratchet-Pawl
③592	690800	1	Nut (Rewind Starter)
③597	691696	1	Screw (Pawl Friction Plate)
③608	497680	1	Starter-Rewind
③689	691855	1	Spring-Friction
③1210	498144	1	Pulley And Spring ASM (Pulley)
③1211	498144	1	Pulley And Spring ASM (Spring)



Electric Starter Assembly
Briggs and Stratton 126T05-0933-B1



Ref	Part No.	Qty.	Description				
309	795092	1	Motor-Starter				
510	795093	1	Drive-Starter				
513	692358	1	Clutch-Drive				
651	691660	1	Screw (Starter Gear Cover)				
697	691127	1	Screw (Drive Cap)				
742	93941	1	Retainer-E Ring				
783	691918	1	Gear-Pinion				
783A	691269	1	Gear-Pinion				
784	7950951	1	Cover-Gear, Starter				
785	692352	1	Gasket-Cover, Starter				
937	691325	1	Spline-Starter				

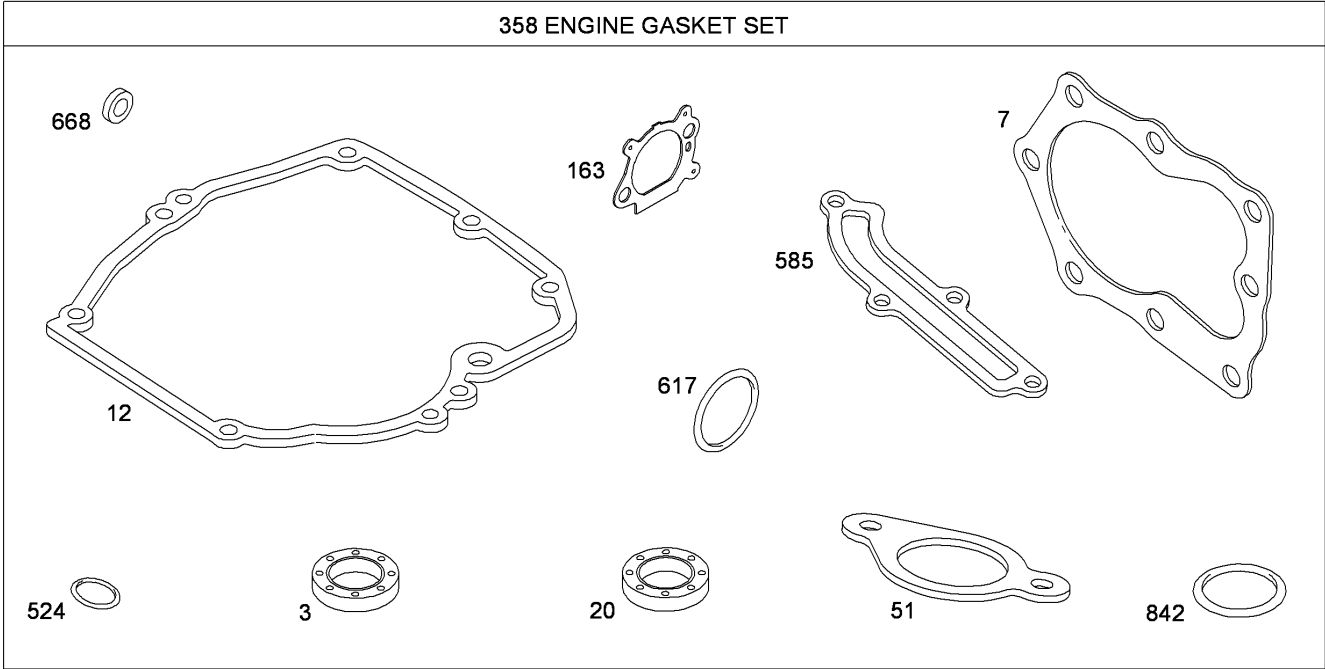 

Assemblies include all parts shown in frames

Engine Gasket Set
Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
353	299819s	1	Seal-Oil (Magneto Side)				
357	692249	1	Gasket-Head, Cylinder				
3512	692232	1	Gasket-Crankcase (.015 STD)				
3520	399781s	1	Seal-Oil (PTO Side)				
3551	794306	1	Gasket-Intake				
34163	272653s	1	Gasket-Cleaner, Air				
36							
3358	794307	1	Engine Gasket Set				
35524	692296	1	Seal-O Ring (Dipstick Tube)				
35585	691879	1	Gasket-Passage, Breather				
34617	270344s	1	Seal-O Ring (Intake Manifold)				
36							
35668	493823	1	Spacer				
35842	691031	1	Seal-O Ring (Dipstick)				

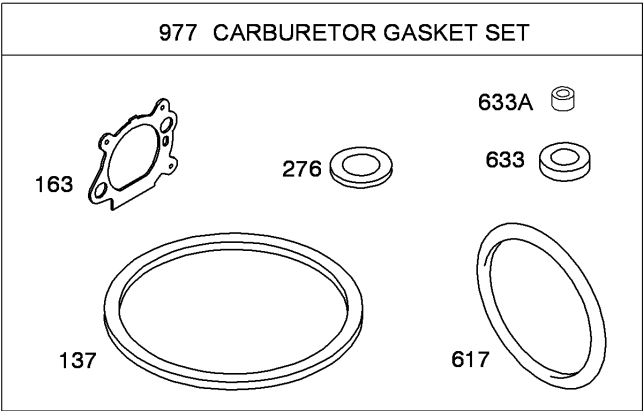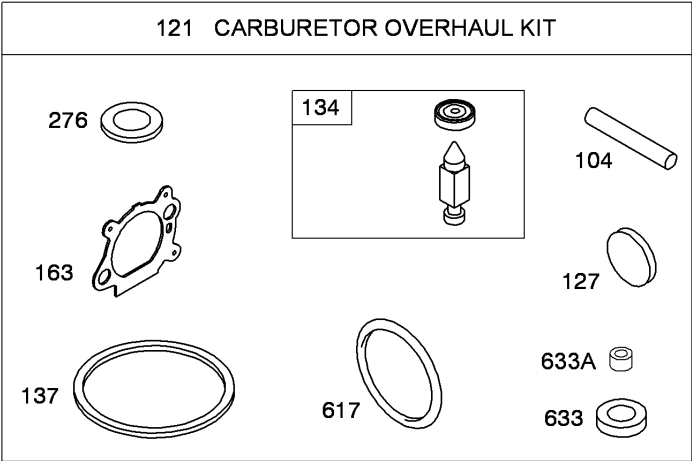  

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 126T05-0933-B1

Ref	Part No.	Qty.	Description				
3 4 104	691242	1	Pin-Hinge, Float				
3 121	498260	1	Carburetor Overhaul Kit				
3 4 127	694468	1	Plug-Welch				
3 4 134	398188	1	Needle And Seat Kit				
3 4 137	693981	1	Gasket-Bowl, Float				
6							
3 4 163	272653s	1	Gasket-Cleaner, Air				
5 6							
3 4 276	271716	1	Washer-Sealing				
6							
3 4 617	270344s	1	Seal-O Ring				
5 6							
3 4 633	691321	1	Seal-Shaft, Choke Throttle				
6							
3 4 633A	693867	1	Seal-Shaft, Choke Throttle				
6							
3 977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20334 - 22in Recycler Lawn Mower

Product Name	Model/Part
Traction Assist Handle Kit	108-8120
Loose Parts Kit	117-4134
Replacement Bag	59310
Replacement Bag Kit	59312
22 Inch Blade Kit	59534

NOTES

