



Emotion 43cm Lawn Mower

Model No. 21025 - 400000 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Assembly	 3	Cylinder Assembly Briggs and Stratton 122T02-2059-B1	 13
Drive Assembly	 4	Air Cleaner Assembly Briggs and Stratton 122T02-2059-B1	 14
Front Wheel Assembly	 5	Governor, Controls, Brake and Ignition Assembly Briggs and Stratton 122T02-2059-B1	 15
Engine Assembly	 6	Muffler and Fuel Tank Assembly Briggs and Stratton 122T02-2059-B1	 16
Lower Handle Assembly	 7	Blower Housing and Flywheel Assembly Briggs and Stratton 122T02-2059-B1	 17
Upper Handle Assembly	 8	Starter Assembly Briggs and Stratton 122T02-2059-B1	 18
Grass Bag Assembly	 9	Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 122T02-2059-B1	 19
Cylinder Assembly Briggs and Stratton 122T02-2059-B1	 10		
Crankshaft Assembly Briggs and Stratton 122T02-2059-B1	 11		
Crankcase Assembly Briggs and Stratton 122T02-2059-B1	 12		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Valve Gasket Set (Ref. No. 1095) | |

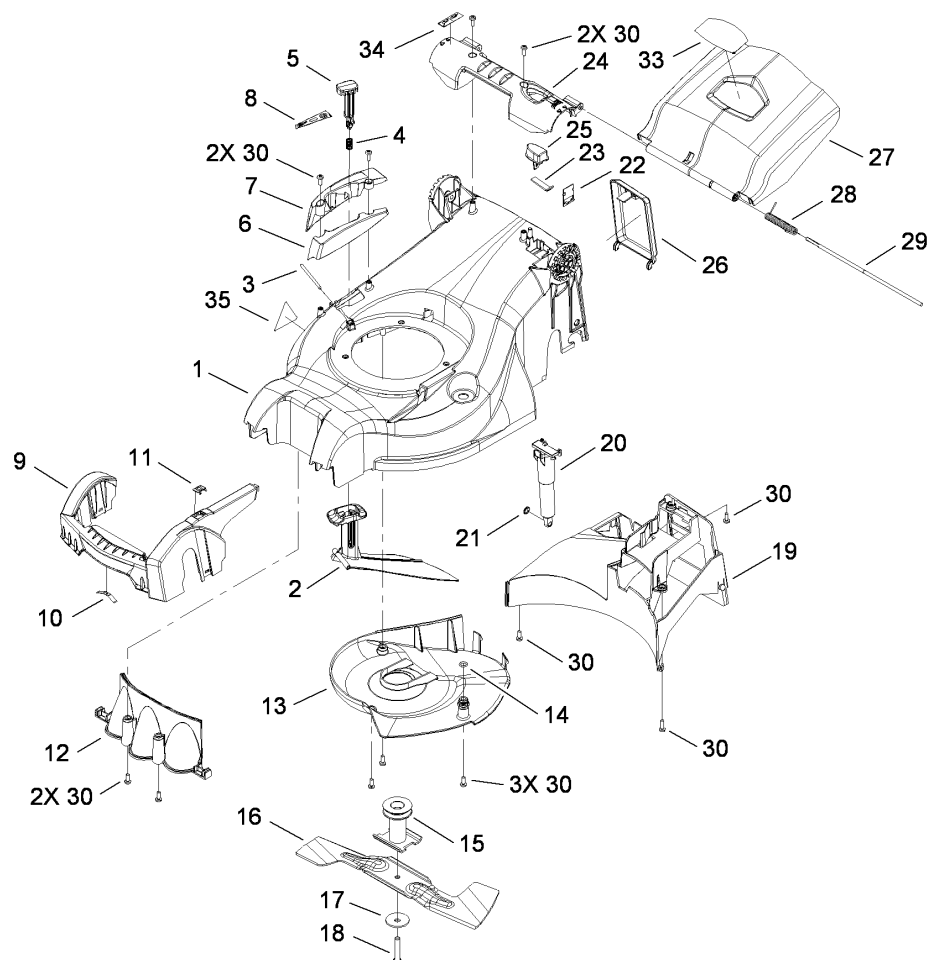

Deck Assembly


Ref	Part No.	Qty.	Description
1	110-9342	1	Deck Assembly
2	110-9269	1	Door-Rod
3	110-9271	1	Pin-Door, Rod
4	110-9274	1	Spring-Door, Rod
5	110-9270	1	Button-Rod
6	110-9272	1	Cover-Rod, Left
7	110-9273	1	Cover-Rod, Right
8	110-9333	1	Decal
9	110-9258	1	Bumper-Front
10	110-9305	1	Spring-Leaf, Front
11	110-9259	1	Lense-HOC
12	110-9257	1	Baffle-Front
13	95-6987	1	Cover-Deck
14	46-6290	1	O-Ring
15	110-9290	1	Blade Driver ASM
16	110-9289	1	Blade-Rotary
17	95-6727	1	Washer-Spring
18	95-6728	1	Screw-HH
19	95-6986	1	Baffle-Rear
20	95-6991	1	HOC Cylinder ASM
21	115-3125	1	Clip-Push
22	110-9295	1	Plate-Locking
23	110-9279	1	Lever-Button, HOC
24	110-9267	1	Handle-Deck, Rear

Ref	Part No.	Qty.	Description
25	110-9277	1	Button-HOC
26	110-9285	1	Cover-Battery
27	110-9268	1	Door-Rear
27	114-5361	1	Rear Door ASM
28	110-9276	1	Spring-Door, Rear
29	110-9275	1	Pin-Door, Rear
30	114-5356	12	Screw-SPH, Thread Roll
33	110-9328	1	Decal-Warning
34	112-8554	1	Decal
35	114-5357	1	Decal

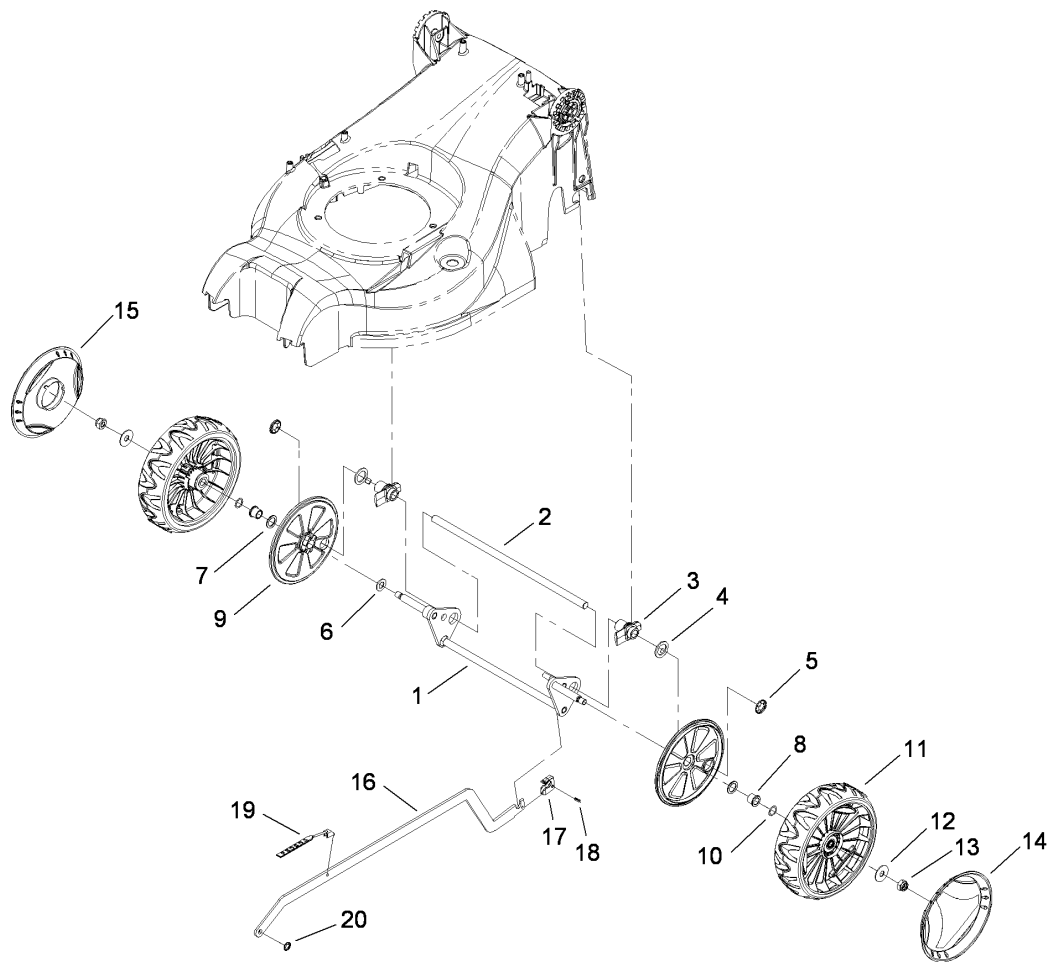


Drive Assembly

Ref	Part No.	Qty.	Description				
1	110-9280	1	Pivot Bar ASM				
2	110-9334	1	Shaft-Axle, Rear				
3	95-6992	2	Support-Axle, Rear				
4	112-8582	2	Washer-Lock				
5	110-9336	2	Clip-Push				
6	112-8616	1	Washer-Plain				
7	112-3945	2	Washer-Plain				
8	110-9312	2	Hub-Axle, Rear				
9	110-9284	2	Cover-Wheel, Inner				
10	99-1713	2	Washer-Spring				
11	110-9256	2	Rear Wheel ASM				
12	114-5360	2	Washer-Plain				
13	93-4098	2	Nut-HH				
14	110-9338	1	Smart Wheel Cover ASM				
15	110-9250	1	Cover-Wheel, Rear				
16	110-9282	1	Bar-Connection, HOC				
17	110-9283	1	Clip-Bar, Connection				
18	112-8573	1	Pin-Groove				
19	110-9260	1	Scale-HOC				
20	115-3125	1	Clip-Push				

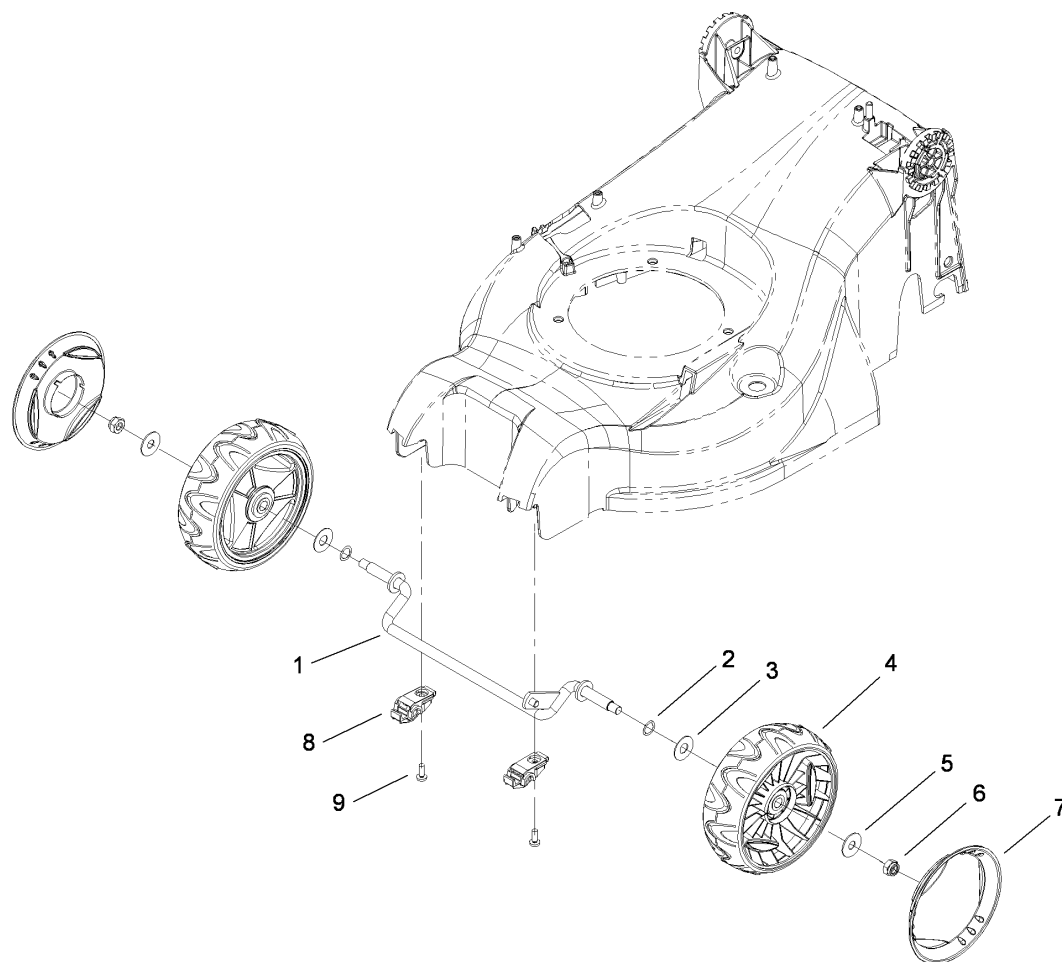


Front Wheel Assembly

Ref	Part No.	Qty.	Description				
1	110-9266	1	Front Axle ASM				
2	99-1713	2	Washer-Spring				
3	114-5351	2	Washer-Plain				
4	95-6993	2	Front Wheel ASM				
5	114-5360	2	Washer-Plain				
6	93-4098	2	Nut-HH				
7	110-9253	2	Cover-Wheel, Front				
8	110-9261	2	Clamp-Axle, Front				
9	114-5356	2	Screw-SPH, Thread Roll				

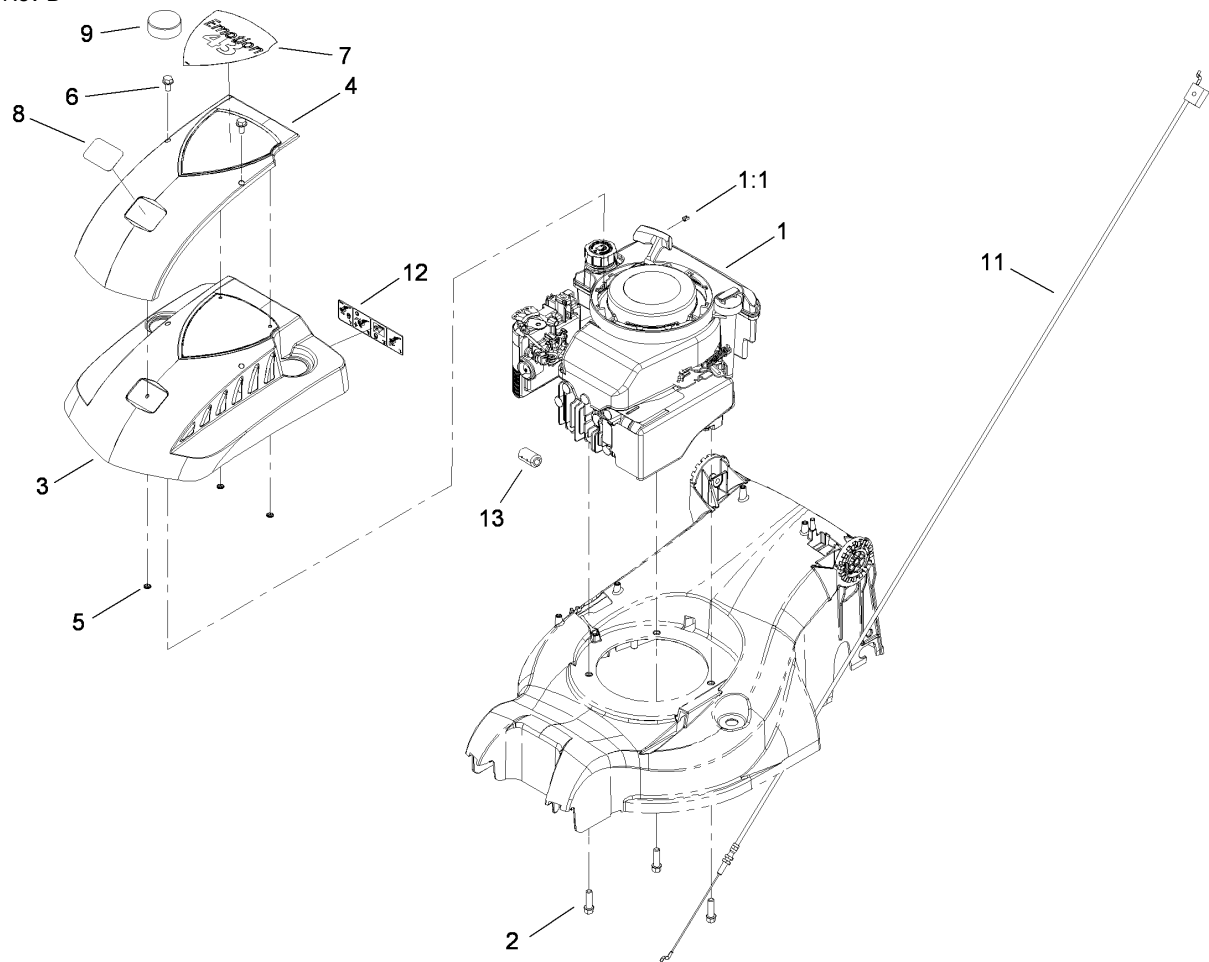


Engine Assembly

Ref	Part No.	Qty.	Description				
1		1	Engine-Briggs And Stratton, 122T02-2059-B1				
1:1	2210-316	1	Stop-Rope				
2	95-1727	3	Screw-Taptite				
3	110-9287	1	Shroud-Engine				
4	110-9288	1	Cover-Shroud, Engine				
5	110-9350	3	Clip-Push				
6	32144-14	2	Screw-HWHTF				
7	110-9349	1	Decal				
8	95-6970	1	Decal				
9	112-8561	1	Cap-Gas				
11	110-9325	1	Cable-Brake				
12	110-9330	1	Decal				
13	112-1540	1	Ferrite-Snap On				

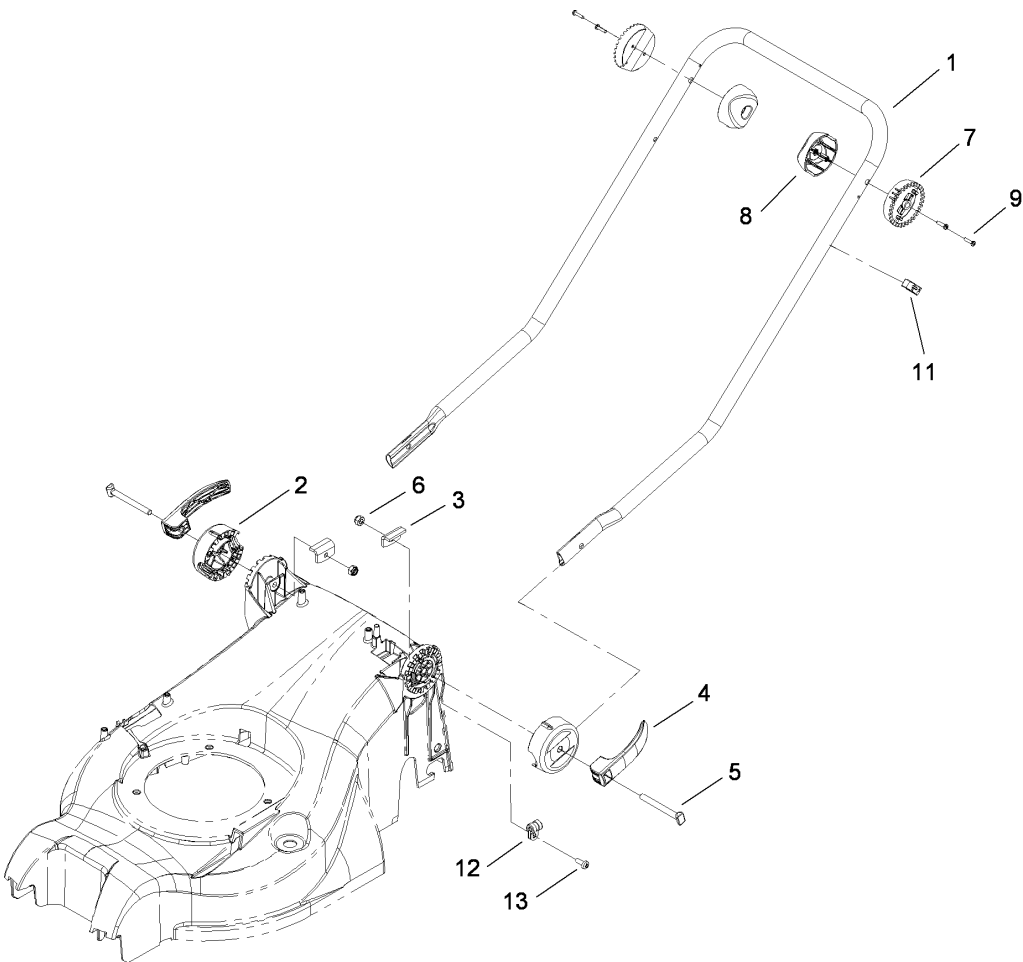

Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	110-9297	1	Handle-Lower				
2	110-9351	2	Disc-Handle, Lower				
3	110-9376	2	Bracket-Adjust, Handle				
4	110-9296	2	Lever-Locking, Handle				
5	95-6988	2	Bolt-T Head, Lower				
6	106-4757	2	Nut-Hex				
7	110-9314	2	Mount-Handle				
8	110-9315	2	Clamp-Handle				
9	95-6598	4	Screw				
11	110-9294	1	Guide-Cable				
12	115-3126	1	Clamp-Cable				
13	114-5356	1	Screw-SPH, Thread Roll				

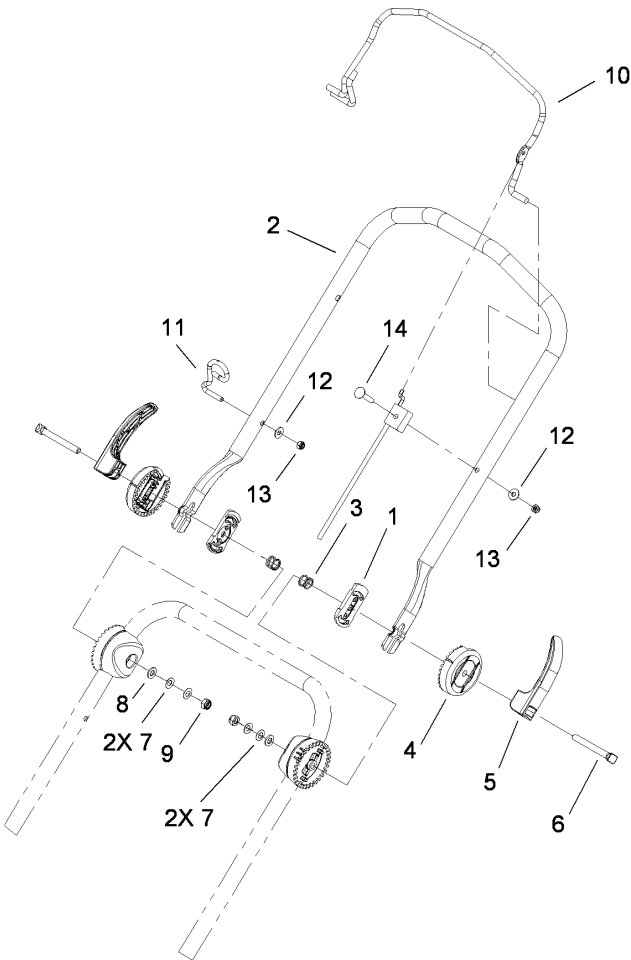


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	110-9313	2	Plate-Adjust, Handle				
2	110-9318	1	Handle-Upper				
3	110-9392	2	Spring-Adjust, Handle				
4	110-9316	2	Mount-Handle, Upper				
5	110-9296	2	Lever-Locking, Handle				
6	95-6996	2	Bolt-T Head, Upper				
7	110-9335	4	Washer-Spring				
8	106-4756	2	Washer-Plain				
9	106-4757	2	Nut-Hex				
10	110-9323	1	Brake Bail ASM				
11	112-8586	1	Guide-Rope				
12	3256-1	2	Washer-Flat				
13	106-8576	2	Nut-Hex				
14	114-5355	1	Bolt-RH				

1058 Operator Manual

1330 Repair Manual

48 Short Block

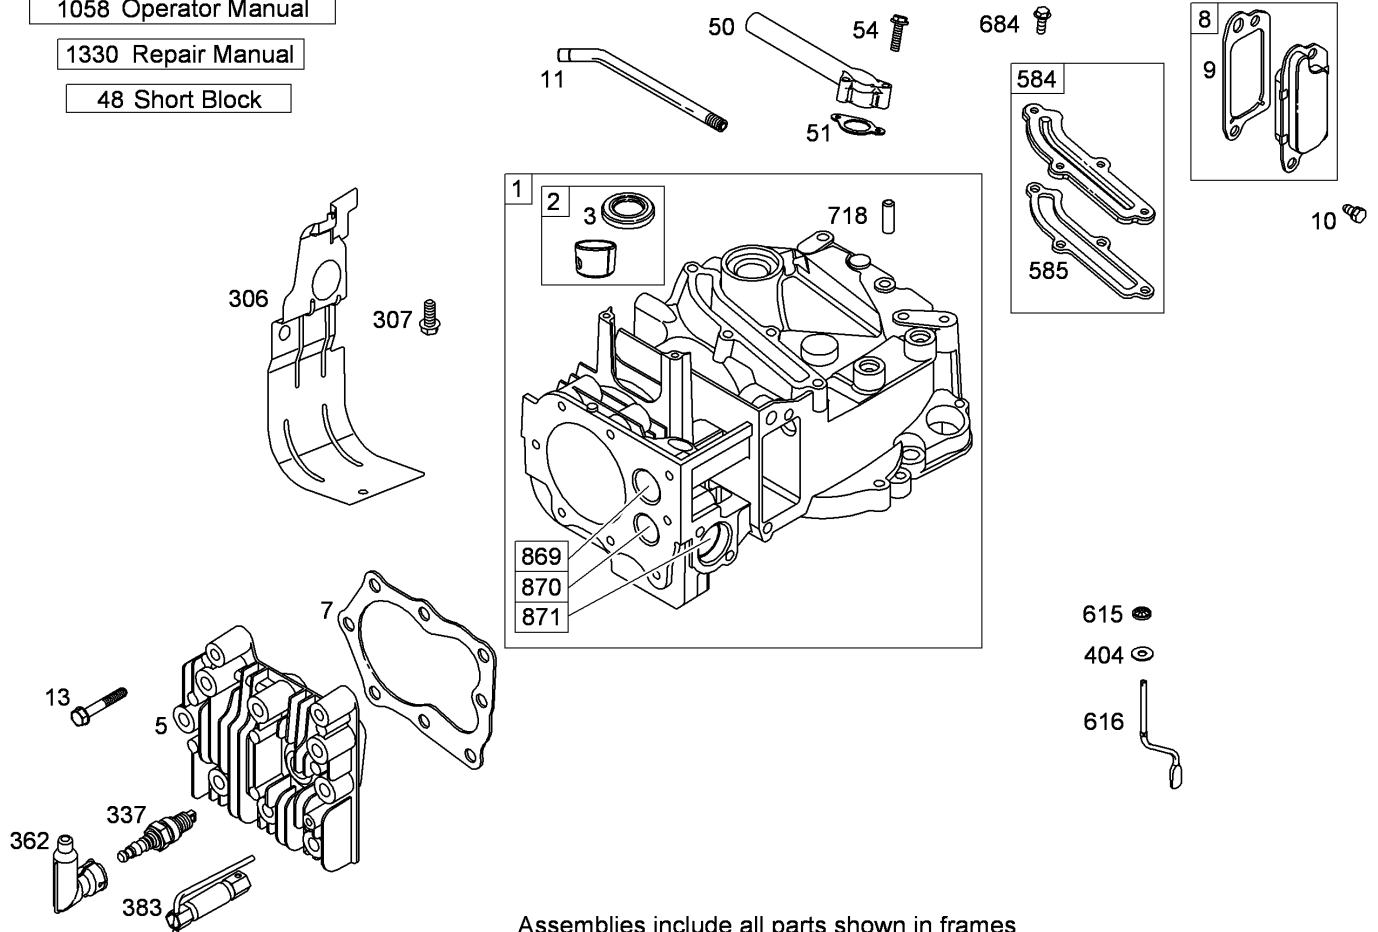


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 122T02-2059-B1

Ref	Part No.	Qty.	Description
21	697322	1	Cylinder ASM
22	399269	1	Bushing And Seal Kit
243	299819s	1	Seal-Oil (Magneto Side)
25	691160	1	Head-Cylinder
247	692249	1	Gasket-Head, Cylinder
5			
28	695250	1	Breather ASM
249	699472	1	Gasket-Breather
5			
210	691125	1	Screw (Breather ASM)
211	691781	1	Tube-Breather
213	690912	1	Screw (Cylinder Head)
248	792741	1	Short Block
250	497465	1	Manifold-Intake
2451	272199s	1	Gasket-Intake
254	691650	1	Screw (Intake Manifold)
2306	790836	1	Shield-Cylinder
2307	690345	1	Screw (Cylinder Shield)
2337	802592s	1	Plug-Spark
2362	793351	1	Boot-Spark Plug
2383	89838s	1	Wrench-Spark Plug
2404	690272	1	Washer (Governor Crank)
2584	697734	1	Cover-Passage, Breather
24585	691879	1	Gasket-Passage, Breather

Ref	Part No.	Qty.	Description
2615	690340	1	Retainer-Shaft, Governor
2616	698801	1	Crank-Governor
2684	690345	1	Screw (Breather Passage Cover)
2718	690959	1	Pin-Locating
2869	691155	1	Seat-Valve (Intake)
2870	690380	1	Seat-Valve (Exhaust)
2871	262001	1	Bushing-Guide (Exhaust)
2871	63709	1	Bushing-Guide (Intake)
21058	277039	1	Operator Manual
21330	270962	1	Repair Manual



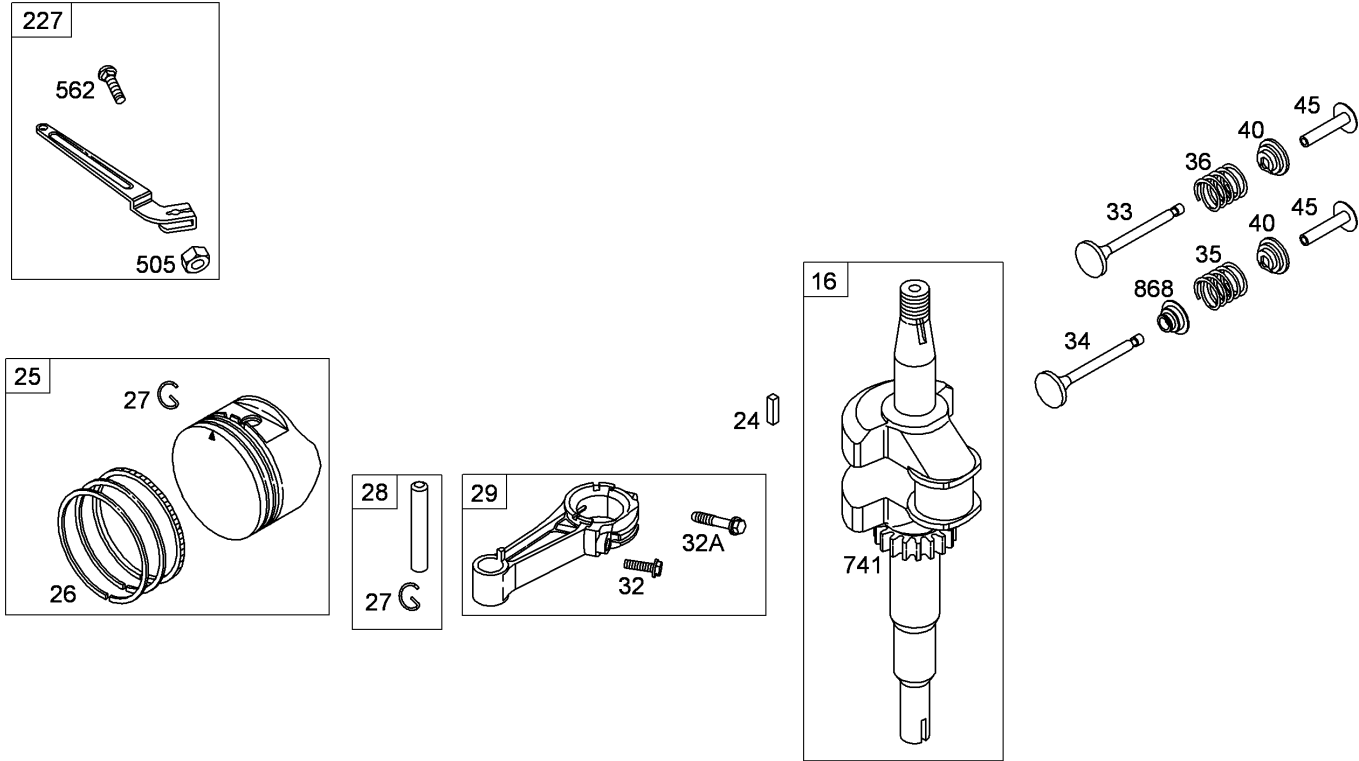


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 122T02-2059-B1


Ref	Part No.	Qty.	Description				
16	691450	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	795429	1	Piston ASM (Standard)				
25	795430	1	Piston ASM (.020 Oversize)				
26	795431	1	Ring Set (Standard)				
26	795432	1	Ring Set (.020 Oversize)				
27	691866	1	Lock-Pin, Piston				
28	499423	1	Pin-Piston				
29	499424	1	Rod-Connecting				
32	691664	1	Screw (Connecting Rod) (Short)				
32A	695759	1	Screw (Connecting Rod) (Long)				
33	262651s	1	Valve-Exhaust				
34	262652s	1	Valve-Intake				
35	691270	1	Spring-Valve (Intake)				
36	691270	1	Spring-Valve (Exhaust)				
40	692194	1	Retainer-Valve				
45	690548	1	Tappet-Valve				
227	690783	1	Lever-Control, Governor				
505	691251	1	Nut (Governor Control Lever)				
562	92613	1	Bolt (Governor Control Lever)				
741	795755	1	Gear-Timing				
868	697338	1	Seal-Valve				

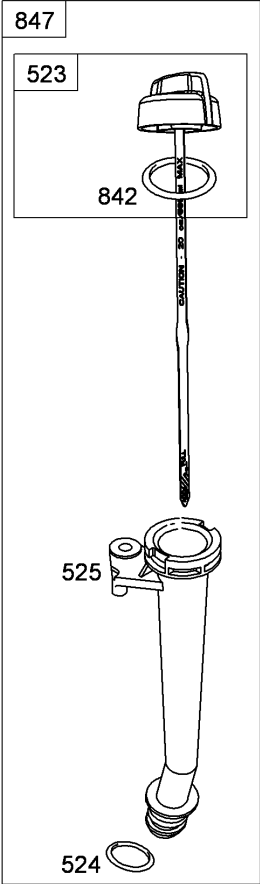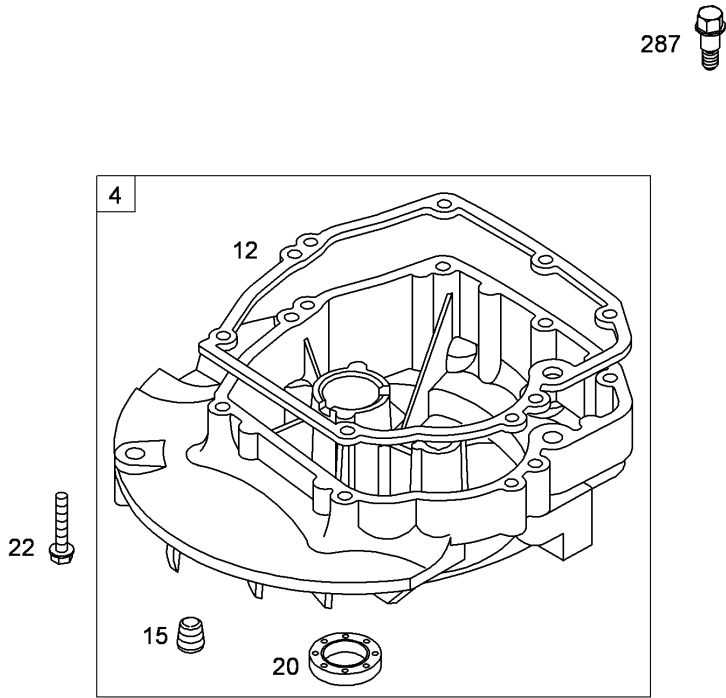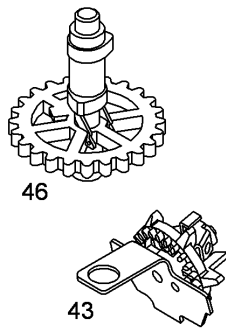

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 122T02-2059-B1

Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase				
215	691680	1	Plug-Drain, Oil				
2420	399781s	1	Seal-Oil (PTO Side)				
222	691092	1	Screw (Crankcase Cover/Sump)				
243	691997	1	Slinger-Oil, Governor				
246	691449	1	Camshaft				
2287	690940	1	Screw (Dipstick Tube)				
2523	499621	1	Dipstick				
24524	692296	1	Seal-O Ring				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal-O Ring (Dipstick Tube)				
2847	692047	1	Dipstick Tube ASM				

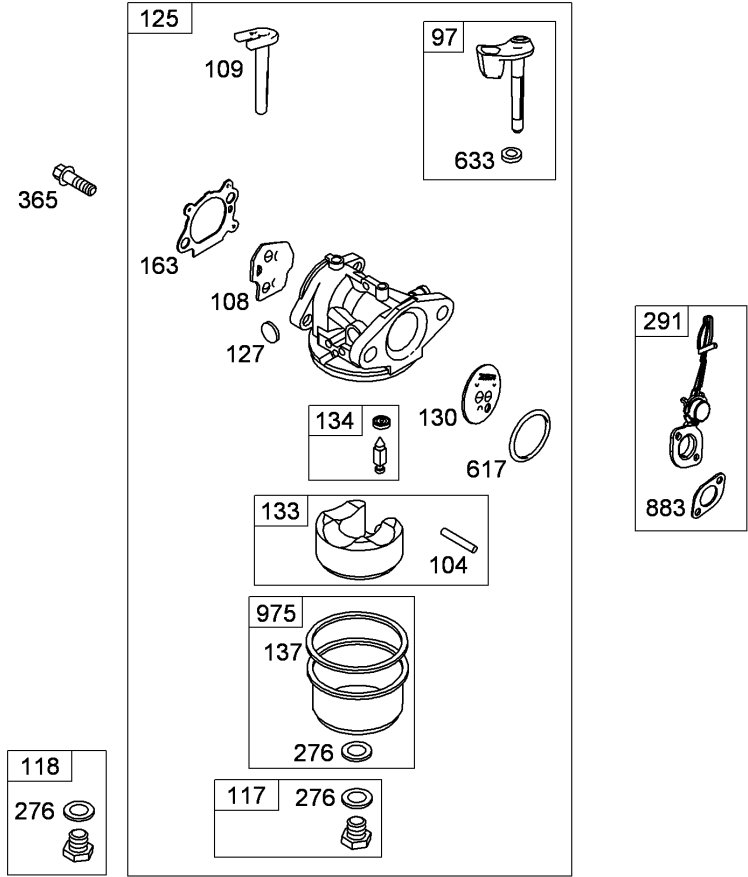


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 122T02-2059-B1






Ref	Part No.	Qty.	Description				
297	696565	1	Shaft-Throttle				
23104	691242	1	Pin-Hinge, Float				
2108	795935	1	Valve-Choke				
2109	494218	1	Shaft-Choke				
2117	697355	1	Jet-Main (Standard)				
2118	692677	1	Jet-Main (High Altitude)				
2125	790845	1	Carburetor				
23127	694468	1	Plug-Welch				
2130	696564	1	Valve-Throttle				
2133	398187	1	Float-Carburetor				
23134	398188	1	Needle And Seat Kit				
23137	693981	1	Gasket-Bowl, Float				
23163	272653s	1	Gasket-Cleaner, Air				
4							
23276	271716	1	Washer-Sealing				
2291	790830	1	Thermostat				
2365	691688	1	Screw (Carburetor)				
23617	270344s	1	Seal-O Ring (Intake Manifold)				
4							
23633	691321	1	Seal-Shaft, Choke Throttle				
24883	691881	1	Gasket-Exhaust				
5							
2975	493640	1	Bowl-Float				

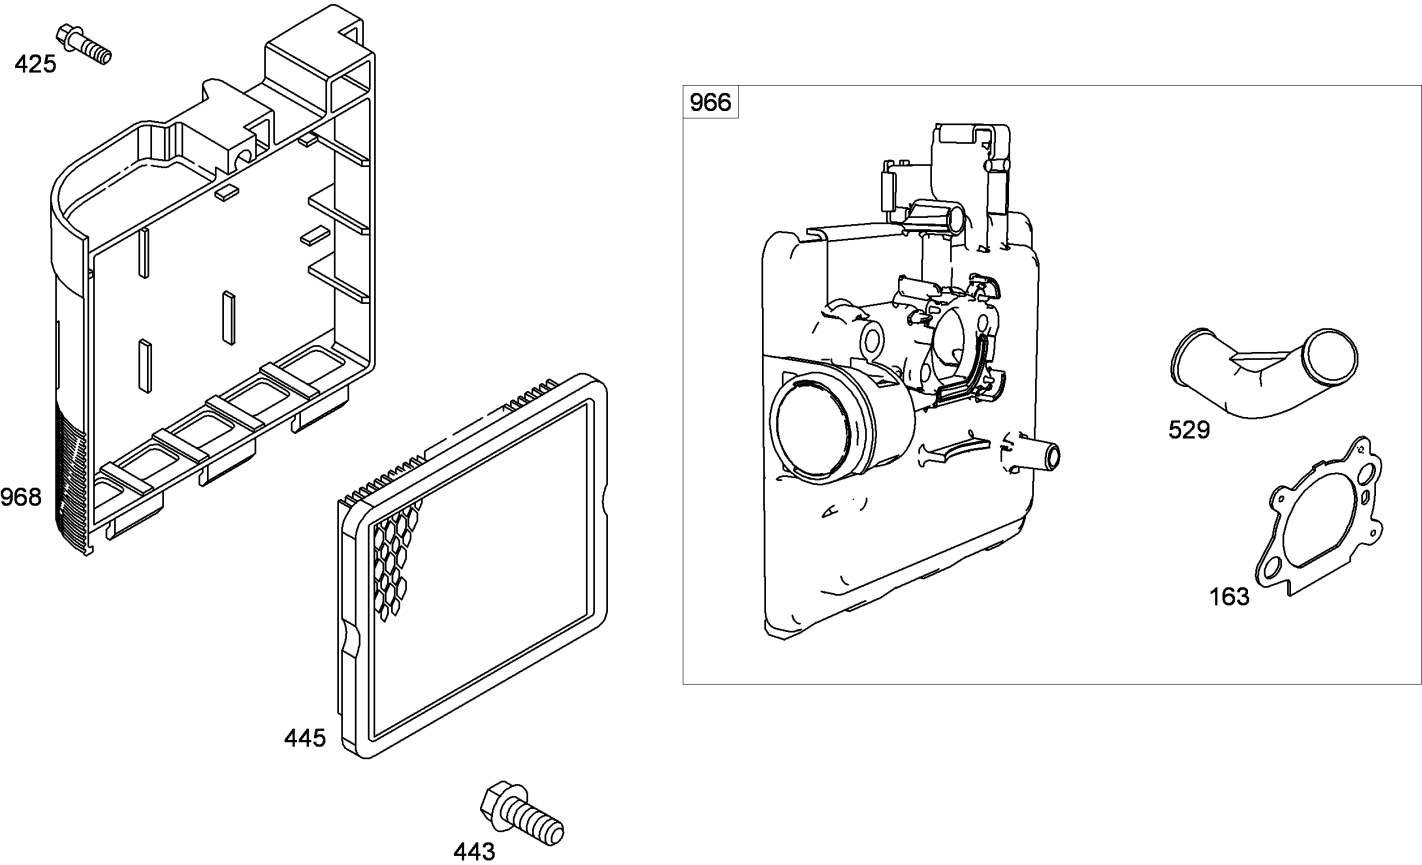

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 122T02-2059-B1


Ref	Part No.	Qty.	Description				
2 3 163	272653s	1	Gasket-Cleaner, Air				
4							
2 425	690670	1	Screw (Air Cleaner Cover)				
2 443	692523	1	Screw (Air Cleaner Primer Base)				
2 445	491588s	1	Filter-Cartridge, Air Cleaner				
2 529	691923	1	Grommet (Air Cleaner Backplate)				
2 966	496116	1	Base-Primer, Air Cleaner				
2 968	692298	1	Cover-Cleaner, Air				

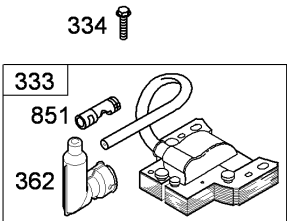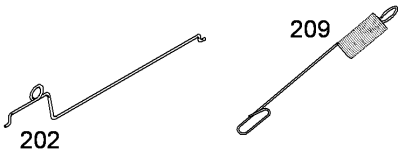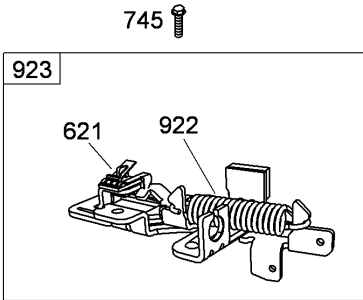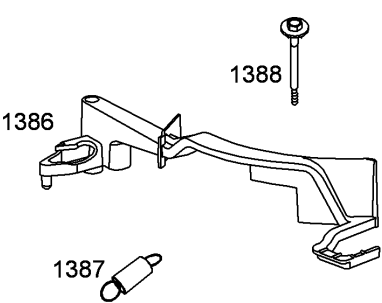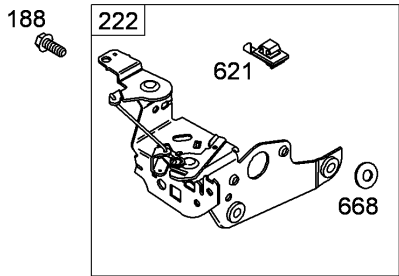

Assemblies include all parts shown in frames

Governor, Controls, Brake and Ignition Assembly
Briggs and Stratton 122T02-2059-B1

Ref	Part No.	Qty.	Description				
2188	693399	1	Screw (Control Bracket)				
2202	691829	1	Link-Governor, Mechanical				
2209	691292	1	Spring-Governor (Brown)				
2222	790143	1	Bracket-Control				
2333	793353	1	Armature-Magneto				
2334	691061	1	Screw (Magneto Armature)				
2356	692390	1	Wire-Stop				
2362	793351	1	Boot-Spark Plug				
2621	692310	1	Switch-Stop				
24668	493823	1	Spacer (Control Bracket)				
2745	691648	1	Screw (Brake)				
2851	692424	1	Terminal-Spark Plug				
2922	692135	1	Spring-Brake				
2923	796136	1	Brake				
21386	790848	1	Vane-Air				
21387	790849	1	Spring-Vane, Air				
21388	790850	1	Screw (Air Vane)				




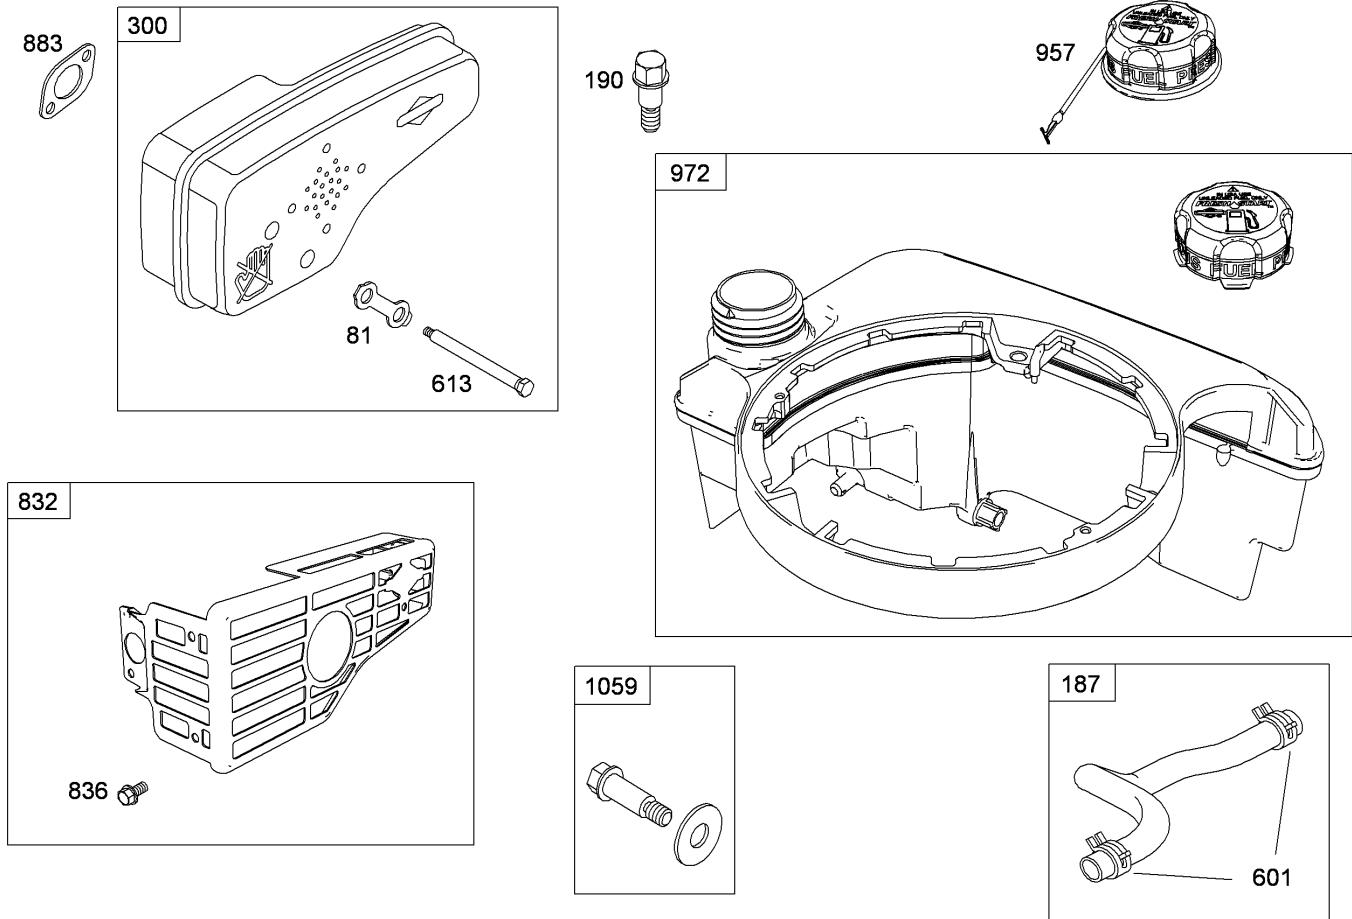


Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly

Briggs and Stratton 122T02-2059-B1

Ref	Part No.	Qty.	Description				
281	691740	1	Lock-Screw, Muffler				
2187	791766	1	Line-Fuel (Cut To Required Length)				
2190	690940	1	Screw (Fuel Tank)				
2300	790828	1	Muffler				
2601	791850	1	Clamp-Hose				
2613	790833	1	Screw (Muffler)				
2832	499034	1	Guard-Muffler				
2836	690664	1	Screw (Muffler Guard)				
24883	691881	1	Gasket-Exhaust				
5							
2957	793606	1	Cap-Tank, Fuel (Fuel Fresh)				
2972	699374	1	Tank-Fuel				
21059	692311	1	Screw And Washer Kit				

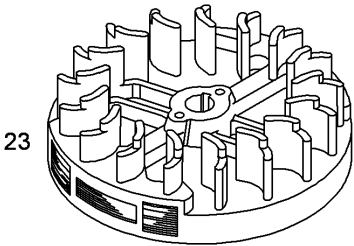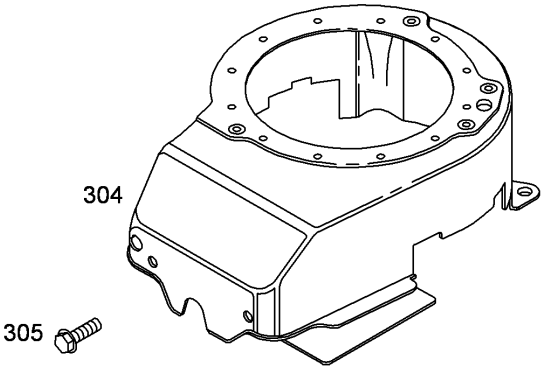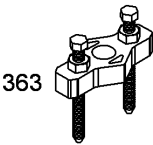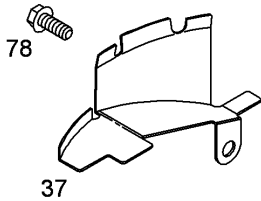


1036 Emissions Label

Assemblies include all parts shown in frames

Blower Housing and Flywheel Assembly
Briggs and Stratton 122T02-2059-B1




Ref	Part No.	Qty.	Description				
223	691987	1	Flywheel				
237	793756	1	Guard-Flywheel				
278	691108	1	Screw (Flywheel Guard)				
2304	790826	1	Housing-Blower				
2305	691108	1	Screw (Blower Housing)				
2332	690662	1	Nut (Flywheel)				
2363	19069	1	Puller-Flywheel				
2455	791760	1	Cup-Flywheel				
21036		1	Label-Emissions				

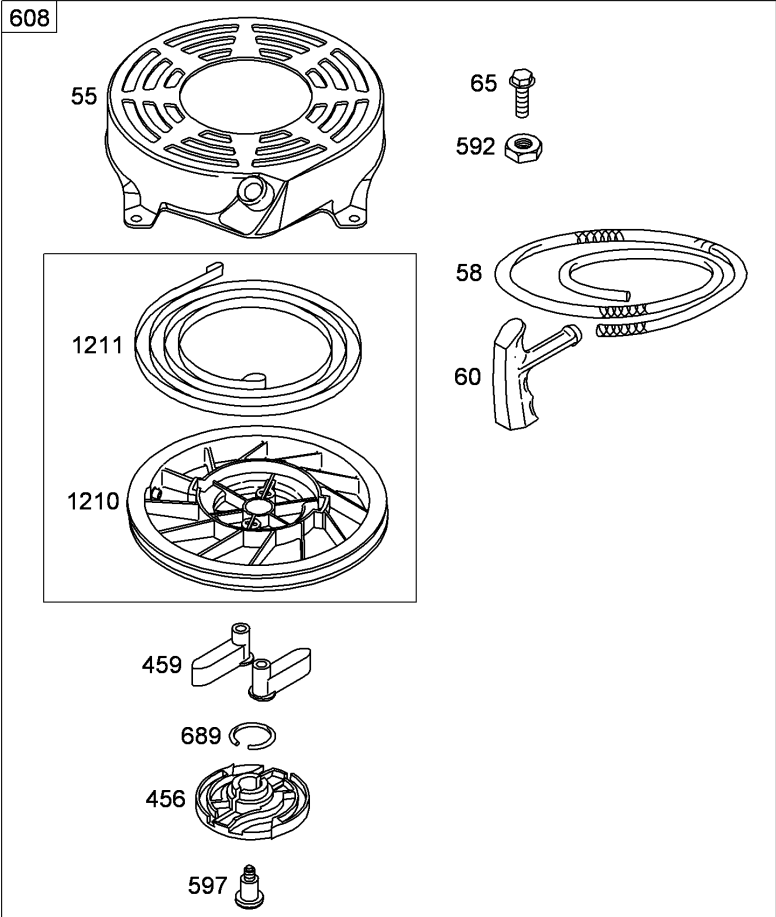

Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton 122T02-2059-B1

Ref	Part No.	Qty.	Description				
255	691421	1	Housing-Starter, Rewind				
258	697316	1	Rope-Starter (Cut To Required Length)				
260	281434s	1	Grip-Rope, Starter				
265	690837	1	Screw (Rewind Starter)				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2592	690800	1	Nut (Rewind Starter)				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	497680	1	Starter-Rewind				
2689	691855	1	Spring-Friction				
21210	498144	1	Pulley And Spring ASM (Pulley)				
21211	498144	1	Pulley And Spring ASM (Spring)				

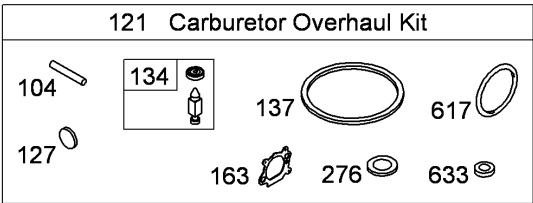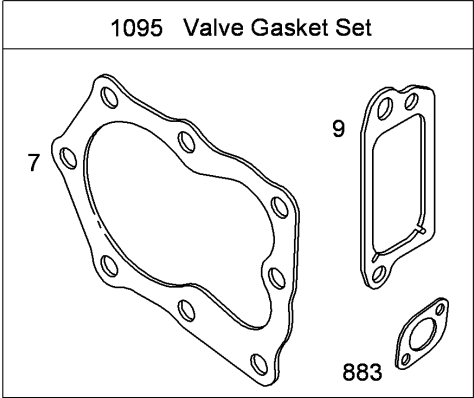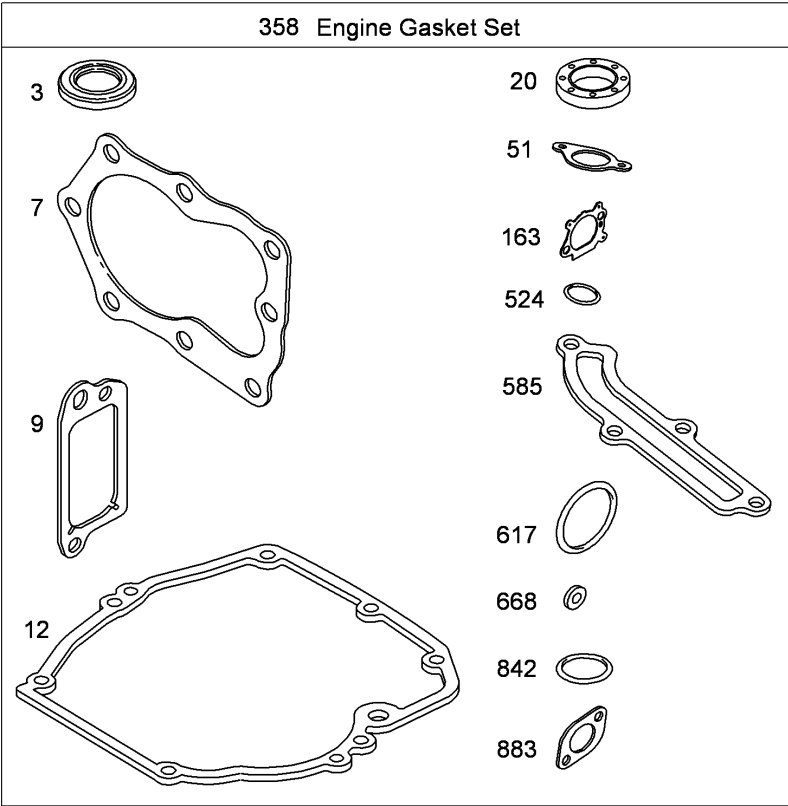

Assemblies include all parts shown in frames

Engine and Valve Gaskets and Carburetor Overhaul Kit

Briggs and Stratton 122T02-2059-B1

Ref	Part No.	Qty.	Description
243	299819s	1	Seal-Oil (Magneto Side)
247	692249	1	Gasket-Head, Cylinder
5			
249	699472	1	Gasket-Breather
5			
2412	692232	1	Gasket-Crankcase
2420	399781s	1	Seal-Oil (PTO Side)
2451	272199s	1	Gasket-Intake
23104	691242	1	Pin-Hinge, Float
2121	498260	1	Carburetor Overhaul Kit
23127	694468	1	Plug-Welch
23134	398188	1	Needle And Seat Kit
23137	693981	1	Gasket-Bowl, Float
23163	272653s	1	Gasket-Cleaner, Air
4			
23276	271716	1	Washer-Sealing
2358	497316	1	Engine Gasket Set
24524	692296	1	Seal-O Ring (Dipstick Tube)
24585	691879	1	Gasket-Passage, Breather
23617	270344s	1	Seal-O Ring (Intake Manifold)
4			
23633	691321	1	Seal-Shaft, Choke Throttle
24668	493823	1	Spacer (Control Bracket)
24842	691031	1	Seal-O Ring (Dipstick)
24883	691881	1	Gasket-Exhaust
5			

Ref	Part No.	Qty.	Description
21095	498528	1	Valve Gasket Set

