



Emotion 43cm Lawn Mower

Model No. 21027 - 400000 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Assembly	 3	Cylinder Assembly Briggs and Stratton 122T07-2058-B1	 13
Drive Assembly	 4	Air Cleaner Assembly Briggs and Stratton 122T07-2058-B1	 14
Front Wheel Assembly	 5	Governor, Controls, Brake and Ignition Assembly Briggs and Stratton 122T07-2058-B1	 15
Engine Assembly	 6	Muffler and Fuel Tank Assembly Briggs and Stratton 122T07-2058-B1	 16
Lower Handle Assembly	 7	Blower Housing and Flywheel Assembly Briggs and Stratton 122T07-2058-B1	 17
Upper Handle Assembly	 8	Rewind Starter Assembly Briggs and Stratton 122T07-2058-B1	 18
Grass Bag Assembly	 9	Electric Starter Assembly Briggs and Stratton 122T07-2058-B1	 19
Cylinder Assembly Briggs and Stratton 122T07-2058-B1	 10	Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 122T07-2058-B1	 20
Crankshaft Assembly Briggs and Stratton 122T07-2058-B1	 11		
Crankcase Assembly Briggs and Stratton 122T07-2058-B1	 12		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Valve Gasket Set (Ref. No. 1095) | |

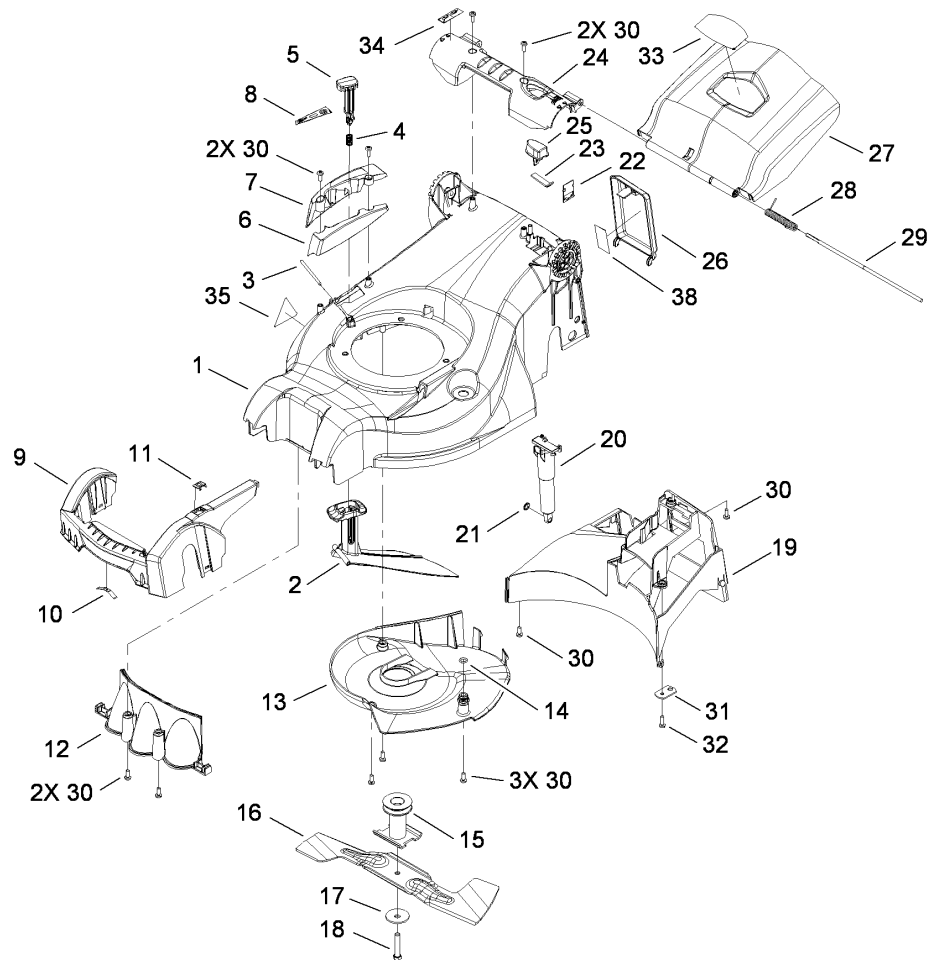

Deck Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-8550	1	Deck ASM	25	110-9277	1	Button-HOC
2	110-9269	1	Door-Rod	26	110-9285	1	Cover-Battery
3	110-9271	1	Pin-Door, Rod	27	110-9268	1	Door-Rear
4	110-9274	1	Spring-Door, Rod	28	110-9276	1	Spring-Door, Rear
5	110-9270	1	Button-Rod	29	110-9275	1	Pin-Door, Rear
6	110-9272	1	Cover-Rod, Left	30	114-5356	11	Screw-SPH, Thread Roll
7	110-9273	1	Cover-Rod, Right	31	110-9332	1	Support-Cable, Traction
8	110-9333	1	Decal	32	93-4095	1	Screw-RH
9	110-9258	1	Bumper-Front	33	110-9328	1	Decal-Warning
10	110-9305	1	Spring-Leaf, Front	34	112-8554	1	Decal
11	110-9259	1	Lense-HOC	35	114-5357	1	Decal
12	110-9257	1	Baffle-Front	38	112-8592	1	Decal-Battery
13	95-6987	1	Cover-Deck				
14	46-6290	1	O-Ring				
15	110-9291	1	Blade Driver ASM				
16	110-9289	1	Blade-Rotary				
17	95-6727	1	Washer-Spring				
18	95-6728	1	Screw-HH				
19	110-9397	1	Baffle-Rear				
20	95-6991	1	HOC Cylinder ASM				
21	115-3125	1	Clip-Push				
22	110-9295	1	Plate-Locking				
23	110-9279	1	Lever-Button, HOC				
24	110-9267	1	Handle-Deck, Rear				

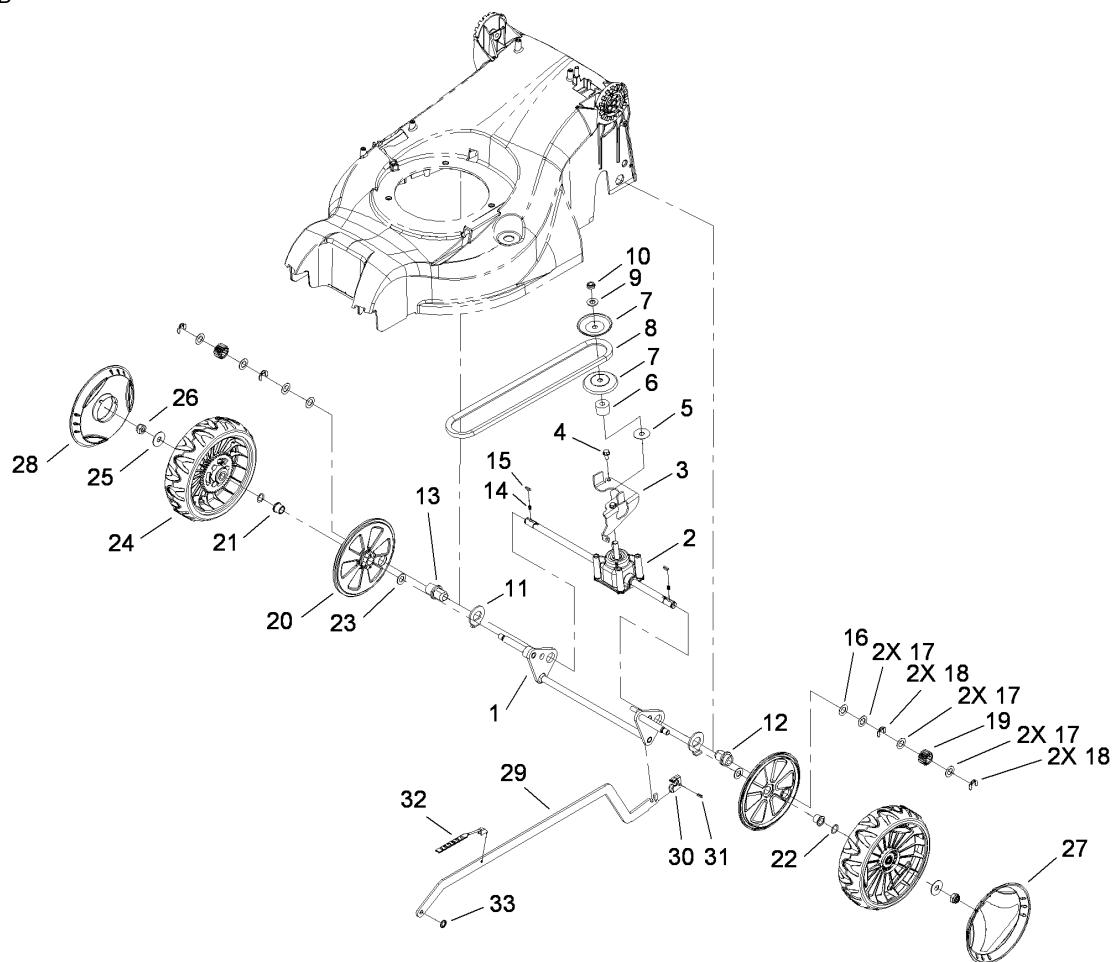 

Drive Assembly


Ref	Part No.	Qty.	Description
1	110-9280	1	Pivot Bar ASM
2	108-8757	1	Transmission ASM
3	110-9292	1	Bracket-Case, Gear
4	32144-4	2	Screw-HWH
5	105-6814	1	Washer-Plain
6	92-5791	1	Spacer
7	100-1176	2	Pulley-Half
8	36-8070	1	V-Belt
9	3256-24	1	Washer-Flat
10	3296-5	1	Nut-Lock
11	112-8591	2	Clip-Bushing
12	112-8589	1	Bushing-Wheel, Left
13	112-8590	1	Bushing-Wheel, Right
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	36-4780	2	Washer-Plain
17	105-6840	6	Washer-Thrust
18	65-2720	4	Ring-Clip, Locking
19	105-3040	2	Gear-Pinion, 15T
20	110-9284	2	Cover-Wheel, Inner
21	110-9312	2	Hub-Axle, Rear
22	99-1713	2	Washer-Spring
23	112-8616	2	Washer-Plain
24	95-6994	2	Rear Wheel ASM

Ref	Part No.	Qty.	Description
25	114-5360	2	Washer-Plain
26	93-4098	2	Nut-HH
27	110-9338	1	Smart Wheel Cover ASM
28	110-9250	1	Cover-Wheel, Rear
29	110-9282	1	Bar-Connection, HOC
30	110-9283	1	Clip-Bar, Connection
31	112-8573	1	Pin-Groove
32	110-9260	1	Scale-HOC
33	115-3125	1	Clip-Push

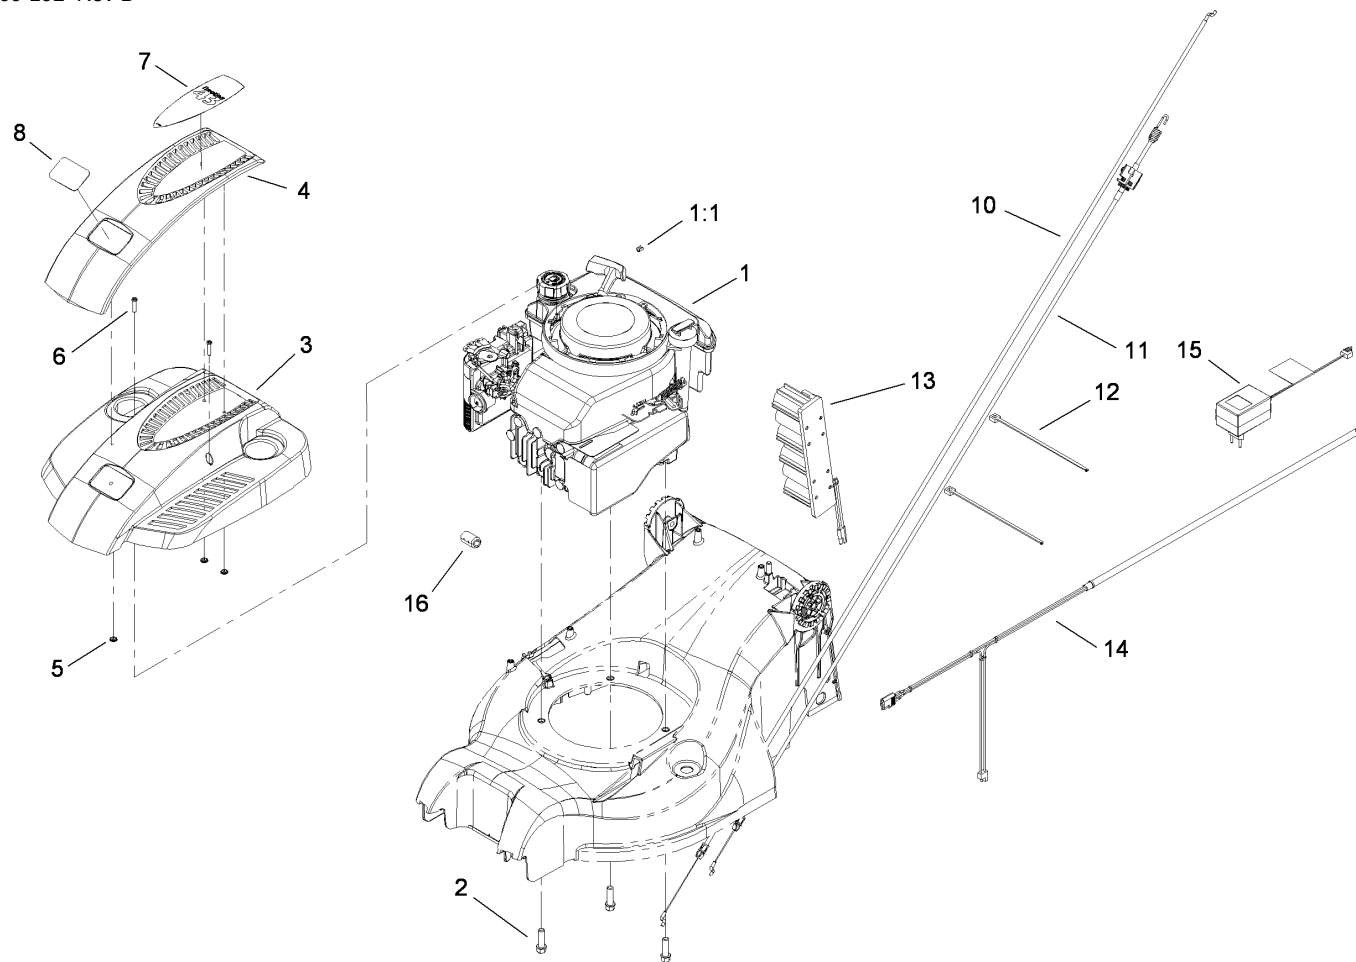 


Engine Assembly

Ref	Part No.	Qty.	Description				
1		1	Engine-Briggs And Stratton, 122T07-2058-B1				
1:1	2210-316	1	Stop-Rope				
2	95-1727	3	Screw-Taptite				
3	110-9156	1	Shroud-Engine				
4	110-9157	1	Cover-Shroud				
5	110-9350	3	Clip-Push				
6	93-0231	2	Screw-PPH				
7	110-9399	1	Decal				
8	95-6970	1	Decal				
10	110-9324	1	Cable-Brake				
11	110-9326	1	Cable-Traction				
12	115-3113	2	Tie-Cable				
13	99-5296	1	Battery				
14	110-9286	1	Harness-Wiring				
15	98-2391	1	Charger-European, 12V Dc				
16	112-1540	1	Ferrite-Snap On				

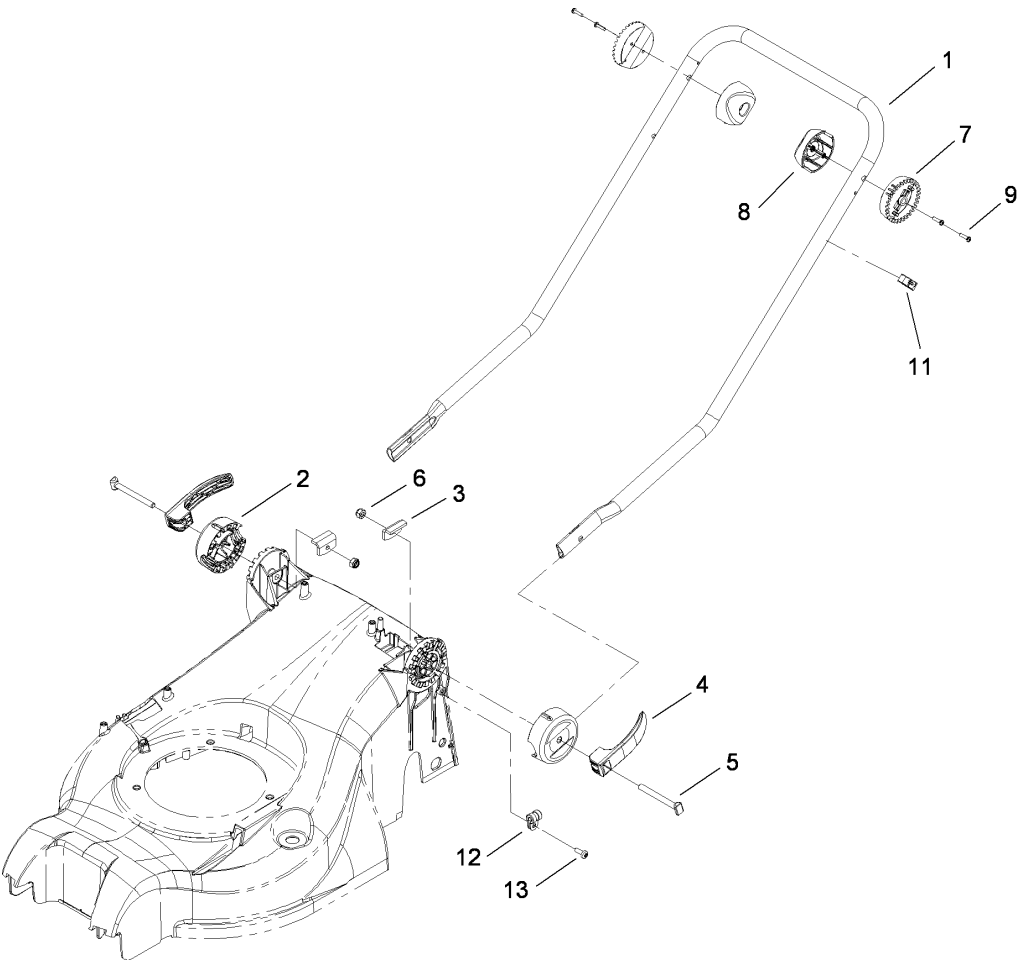 

Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	110-9297	1	Handle-Lower				
2	110-9351	2	Disc-Handle, Lower				
3	110-9376	2	Bracket-Adjust, Handle				
4	110-9296	2	Lever-Locking, Handle				
5	95-6988	2	Bolt-T Head, Lower				
6	106-4757	2	Nut-Hex				
7	110-9314	2	Mount-Handle				
8	110-9315	2	Clamp-Handle				
9	95-6598	4	Screw				
11	110-9293	1	Cable-Guide				
12	115-3126	1	Clamp-Cable				
13	114-5356	1	Screw-SPH, Thread Roll				

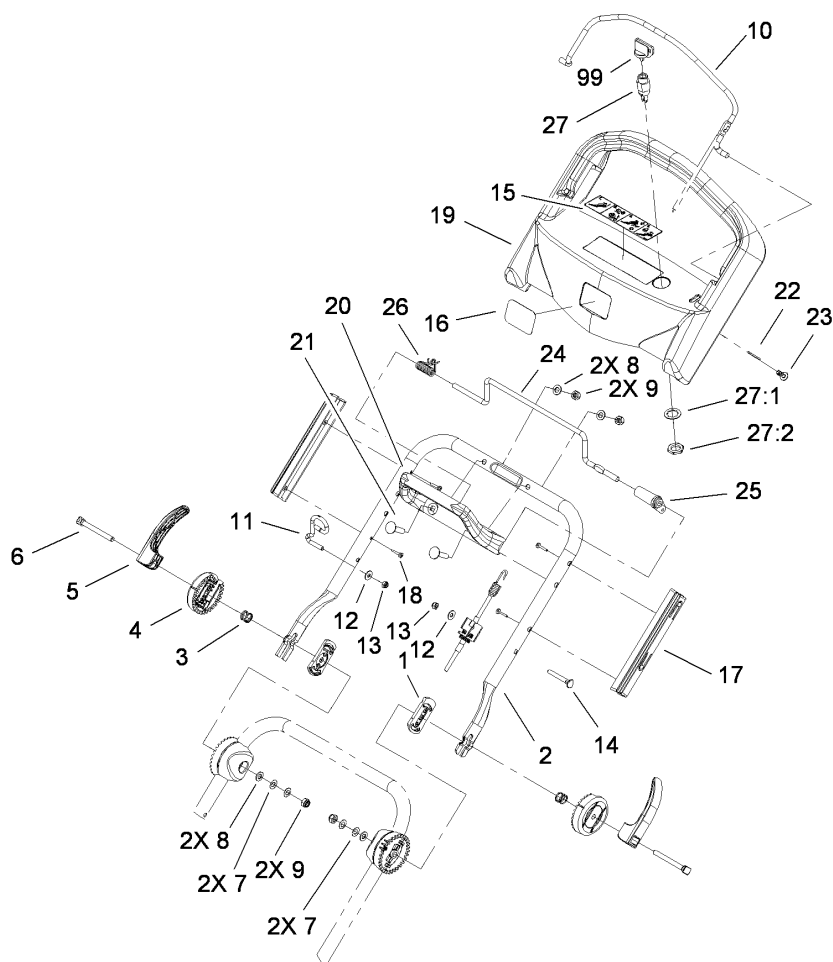 


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	110-9313	2	Plate-Adjust, Handle
2	110-9317	1	Handle-Upper
3	110-9392	2	Spring-Adjust, Handle
4	110-9316	2	Mount-Handle, Upper
5	110-9296	2	Lever-Locking, Handle
6	95-6996	2	Bolt-T Head, Upper
7	110-9335	4	Washer-Spring
8	106-4756	4	Washer-Plain
9	106-4757	4	Nut-Hex
10	110-9359	1	Bail-Brake
11	112-8586	1	Guide-Rope
12	3256-1	2	Washer-Flat
13	106-8576	2	Nut-Hex
14	114-5350	1	Bolt-Carriage
15	110-9329	1	Decal
16	95-6970	1	Decal
17	99-1590	2	Guide-Handle, Control
18	94-4496	4	Screw-PPH
19	95-6998	1	Handle-Control
20	99-1591	1	Handle-Assist, Traction
21	106-4755	2	Bolt-RH
22	104-2946	1	Washer-Plain
23	110-9352	1	Screw-Round Head, Pozidrive
24	110-9304	1	Bar-Control, Traction

Ref	Part No.	Qty.	Description
25	99-1589	1	Lever-Traction
26	95-6849	1	Spring-Torsion
27	46-5780	1	Switch-Starter
27:1	3254-5	1	Washer-Tooth
27:2	218-461	1	Nut-HH
99	63-8360	1	Key-Ignition

 - 1058 Operator Manual
- 1330 Repair Manual
- 48 Short Block

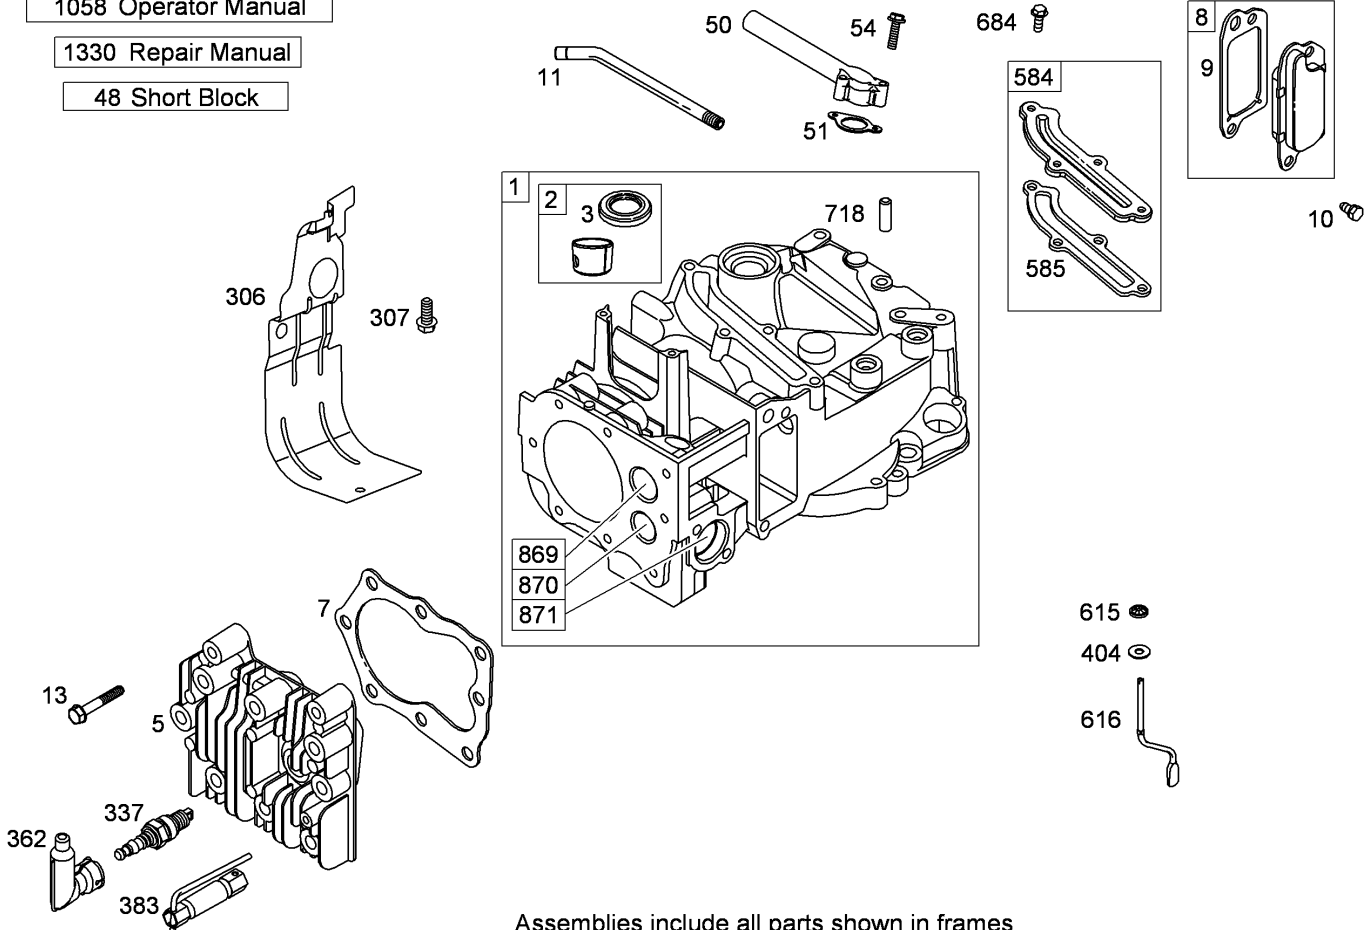


Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
21	697322	1	Cylinder ASM
22	399269	1	Bushing And Seal Kit
243	299819s	1	Seal-Oil (Magneto Side)
25	691160	1	Head-Cylinder
247	692249	1	Gasket-Head, Cylinder
5			
28	695250	1	Breather ASM
249	699472	1	Gasket-Breather
5			
210	691125	1	Screw (Breather ASM)
211	691781	1	Tube-Breather
213	690912	1	Screw (Cylinder Head)
248	792741	1	Short Block
250	497465	1	Manifold-Intake
2451	272199s	1	Gasket-Intake
254	691650	1	Screw (Intake Manifold)
2306	790836	1	Shield-Cylinder
2307	690345	1	Screw (Cylinder Shield)
2337	802592s	1	Plug-Spark
2362	793351	1	Boot-Spark Plug
2383	89838s	1	Wrench-Spark Plug
2404	690272	1	Washer (Governor Crank)
2584	697734	1	Cover-Passage, Breather
24585	691879	1	Gasket-Passage, Breather

Ref	Part No.	Qty.	Description
2615	690340	1	Retainer-Shaft, Governor
2616	698801	1	Crank-Governor
2684	690345	1	Screw (Breather Passage Cover)
2718	690959	1	Pin-Locating
2869	691155	1	Seat-Valve (Intake)
2870	690380	1	Seat-Valve (Exhaust)
2871	262001	1	Bushing-Guide (Exhaust)
2871	63709	1	Bushing-Guide (Intake)
21058	277039	1	Operator Manual
21330	270962	1	Repair Manual



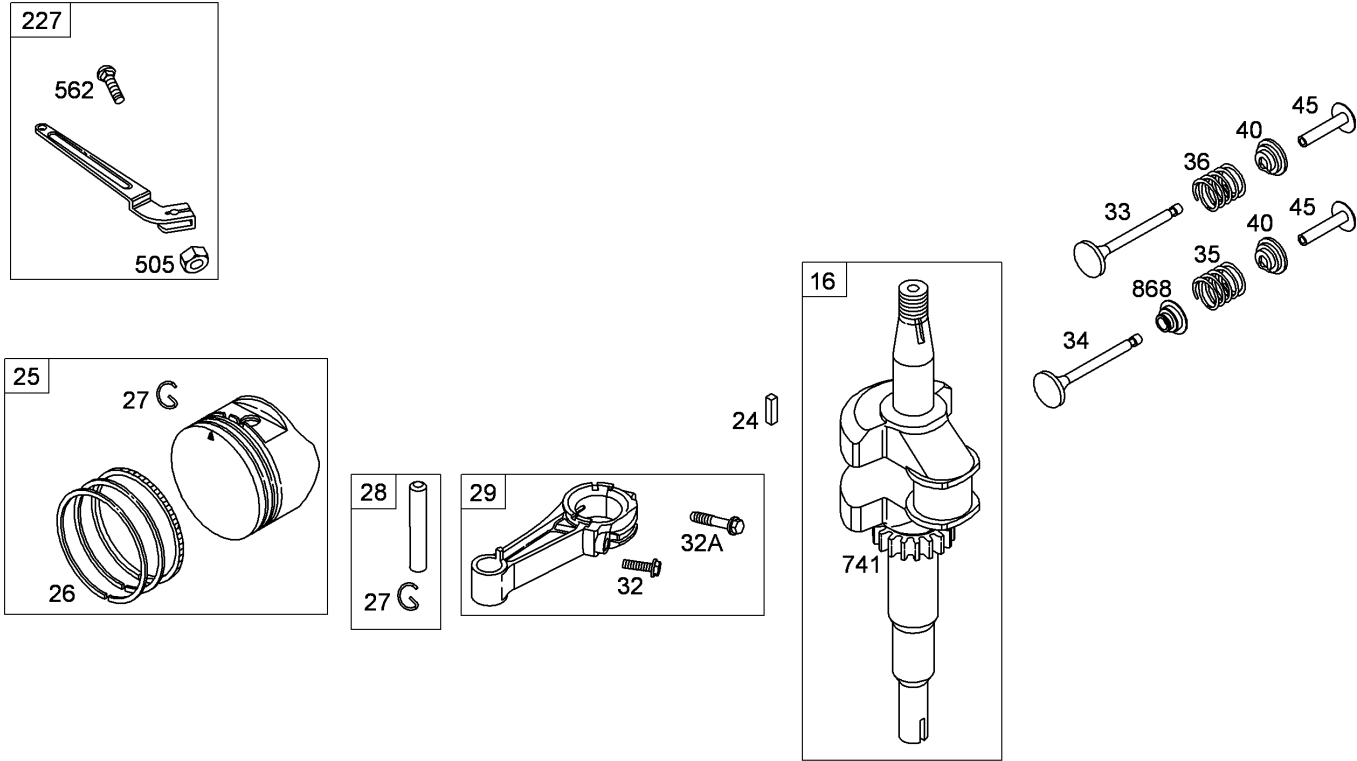 


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description				
16	691450	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	795429	1	Piston ASM (Standard)				
25	795430	1	Piston ASM (.020 Oversize)				
26	795431	1	Ring Set (Standard)				
26	795432	1	Ring Set (.020 Oversize)				
27	691866	1	Lock-Pin, Piston				
28	499423	1	Pin-Piston				
29	499424	1	Rod-Connecting				
32	691664	1	Screw (Connecting Rod) (Short)				
32A	695759	1	Screw (Connecting Rod) (Long)				
33	262651s	1	Valve-Exhaust				
34	262652s	1	Valve-Intake				
35	691270	1	Spring-Valve (Intake)				
36	691270	1	Spring-Valve (Exhaust)				
40	692194	1	Retainer-Valve				
45	690548	1	Tappet-Valve				
227	690783	1	Lever-Control, Governor				
505	691251	1	Nut (Governor Control Lever)				
562	92613	1	Bolt (Governor Control Lever)				
741	795755	1	Gear-Timing				
868	697338	1	Seal-Valve				

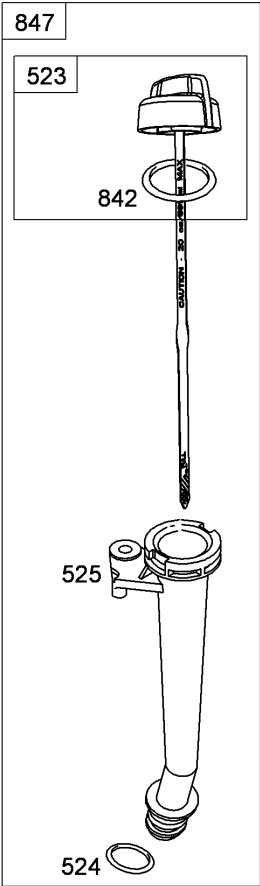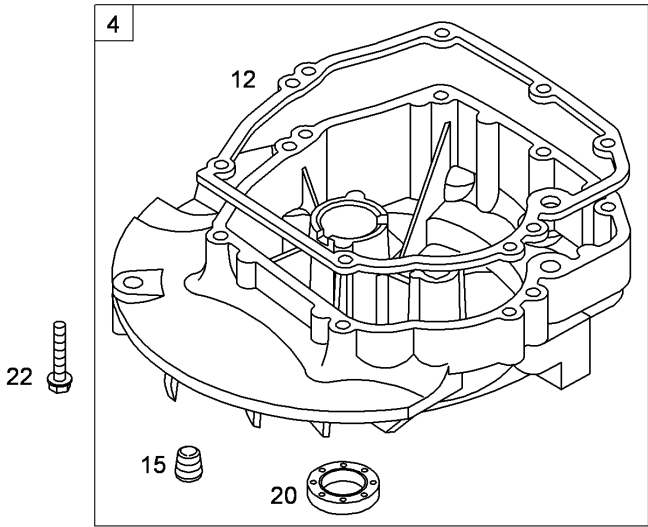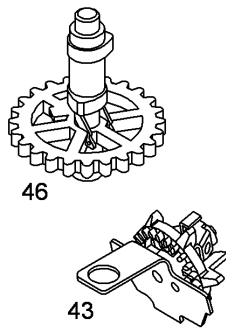   

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase				
215	691680	1	Plug-Drain, Oil				
2420	399781s	1	Seal-Oil (PTO Side)				
222	691092	1	Screw (Crankcase Cover/Sump)				
243	691997	1	Slinger-Oil, Governor				
246	691449	1	Camshaft				
2287	690940	1	Screw (Dipstick Tube)				
2523	499621	1	Dipstick				
24524	692296	1	Seal-O Ring (Dipstick Tube)				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal-O Ring (Dipstick Tube)				
2847	692047	1	Dipstick Tube ASM				

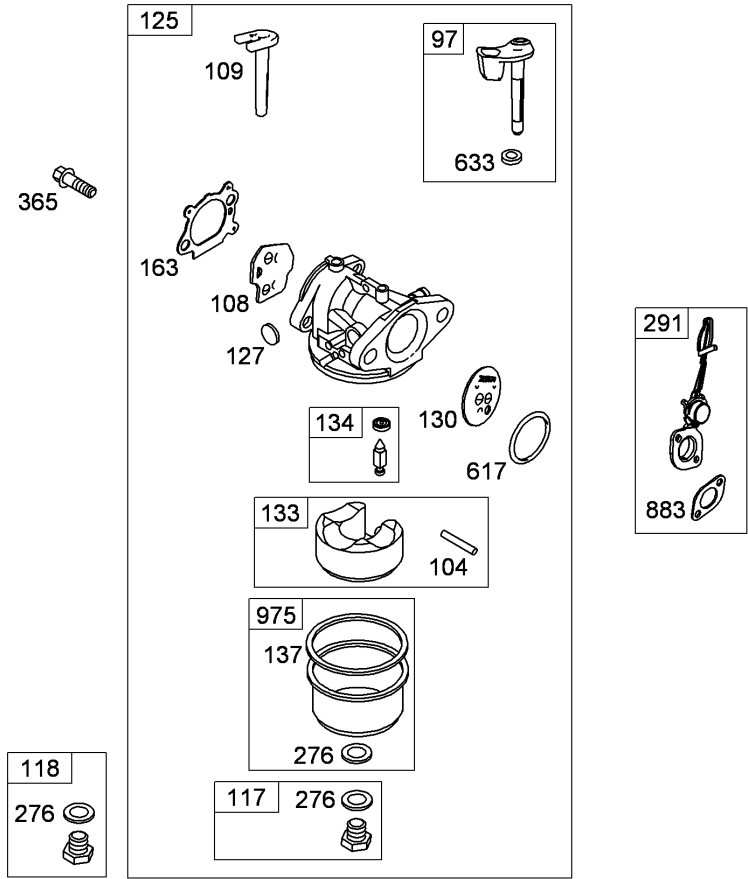 


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description				
297	696565	1	Shaft-Throttle				
23104	691242	1	Pin-Hinge, Float				
2108	795935	1	Valve-Choke				
2109	494218	1	Shaft-Choke				
2117	697355	1	Jet-Main (Standard)				
2118	692677	1	Jet-Main (High Altitude)				
2125	790845	1	Carburetor				
23127	694468	1	Plug-Welch				
2130	696564	1	Valve-Throttle				
2133	398187	1	Float-Carburetor				
23134	398188	1	Needle And Seat Kit				
23137	693981	1	Gasket-Bowl, Float				
23163	272653s	1	Gasket-Cleaner, Air				
4							
23276	271716	1	Washer-Sealing				
2291	790830	1	Thermostat				
2365	691688	1	Screw (Carburetor)				
23617	270344s	1	Seal-O Ring (Intake Manifold)				
23633	691321	1	Seal-Shaft, Choke Throttle				
24883	691881	1	Gasket-Exhaust				
5							
2975	493640	1	Bowl-Float				

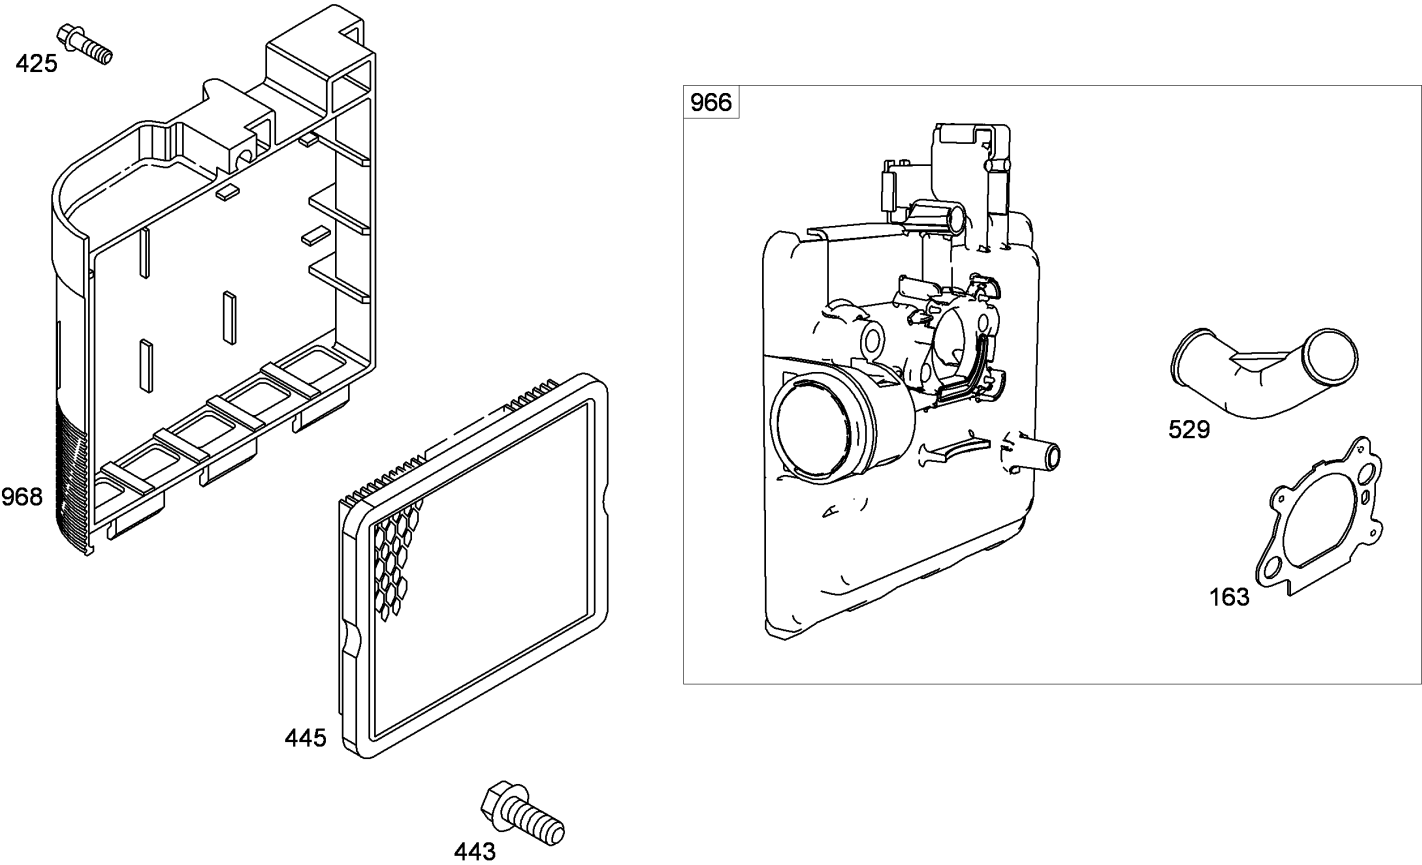 

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description				
2 3 163	272653s	1	Gasket-Cleaner, Air				
4							
2 425	690670	1	Screw (Air Cleaner Cover)				
2 443	692523	1	Screw (Air Cleaner Primer Base)				
2 445	491588s	1	Filter-Cartridge, Air Cleaner				
2 529	691923	1	Grommet (Air Cleaner Backplate)				
2 966	496116	1	Base-Primer, Air Cleaner				
2 968	692298	1	Cover-Cleaner, Air				

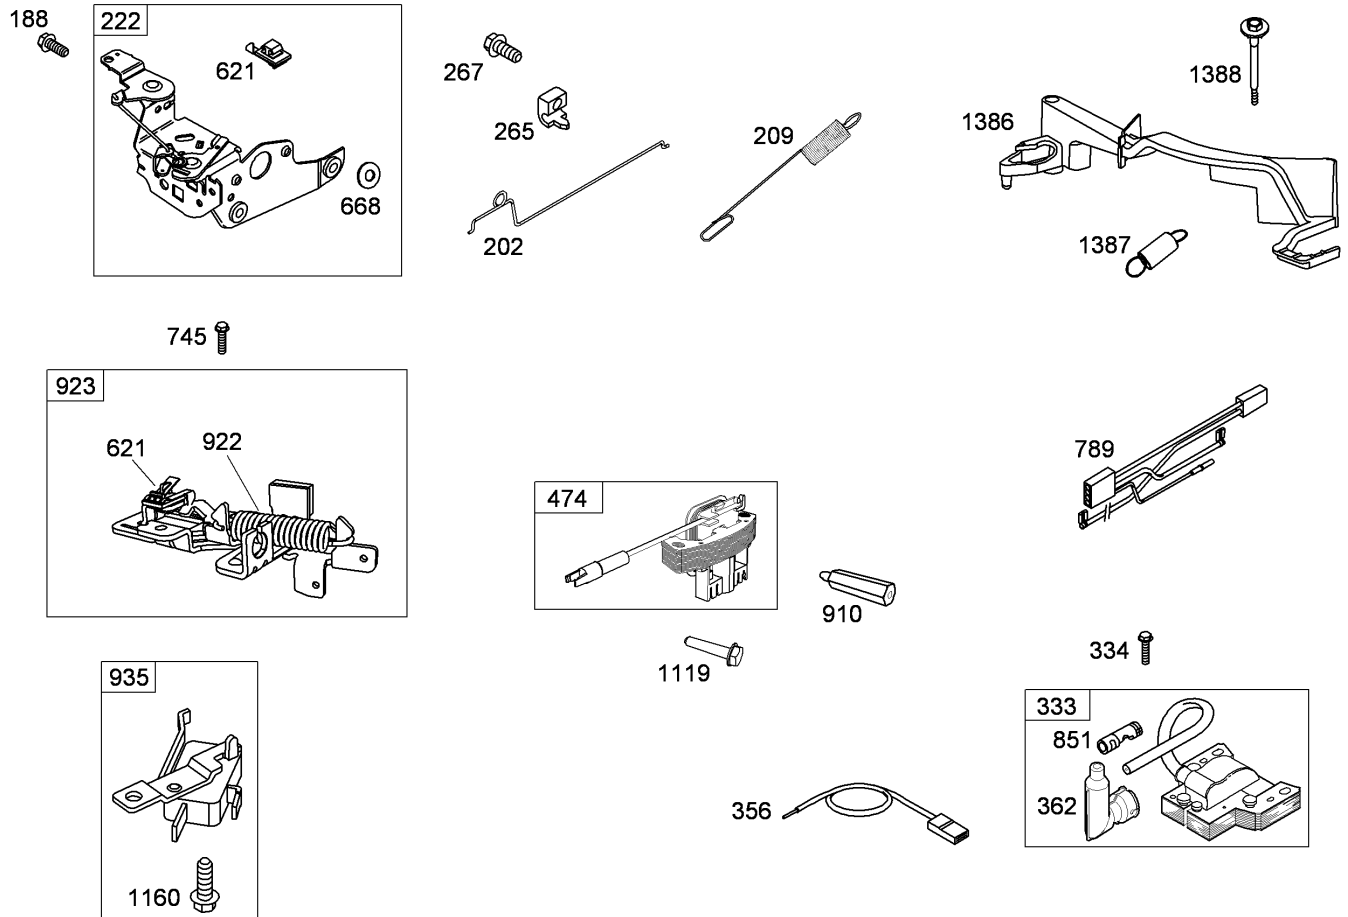 


Assemblies include all parts shown in frames

Governor, Controls, Brake and Ignition Assembly Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
②188	693399	1	Screw (Control Bracket)
②202	691829	1	Link-Governor, Mechanical
②209	691292	1	Spring-Governor (Brown)
②222	790143	1	Bracket-Control
②265	690798	1	Clamp-Casing
②267	691044	1	Screw (Casing Clamp)
②333	793353	1	Armature-Magneto
②334	691061	1	Screw (Magneto Armature)
②356	692390	1	Wire-Stop
②362	793351	1	Boot-Spark Plug
②474	691991	1	Alternator
②621	692310	1	Switch-Stop
②④668	493823	1	Spacer (Control Bracket)
②745	691648	1	Screw (Brake)
②789	792685	1	Harness-Wiring
②851	692424	1	Terminal-Spark Plug
②910	691094	1	Stud (Alternator)
②922	692135	1	Spring-Brake
②923	796136	1	Brake
②935	499421	1	Switch-Interlock
②1119	692979	1	Screw (Alternator)
②1160	691627	1	Screw (Interlock Switch)
②1386	790848	1	Vane-Air
②1387	790849	1	Spring-Vane, Air

Ref	Part No.	Qty.	Description
②1388	790850	1	Screw (Air Vane)




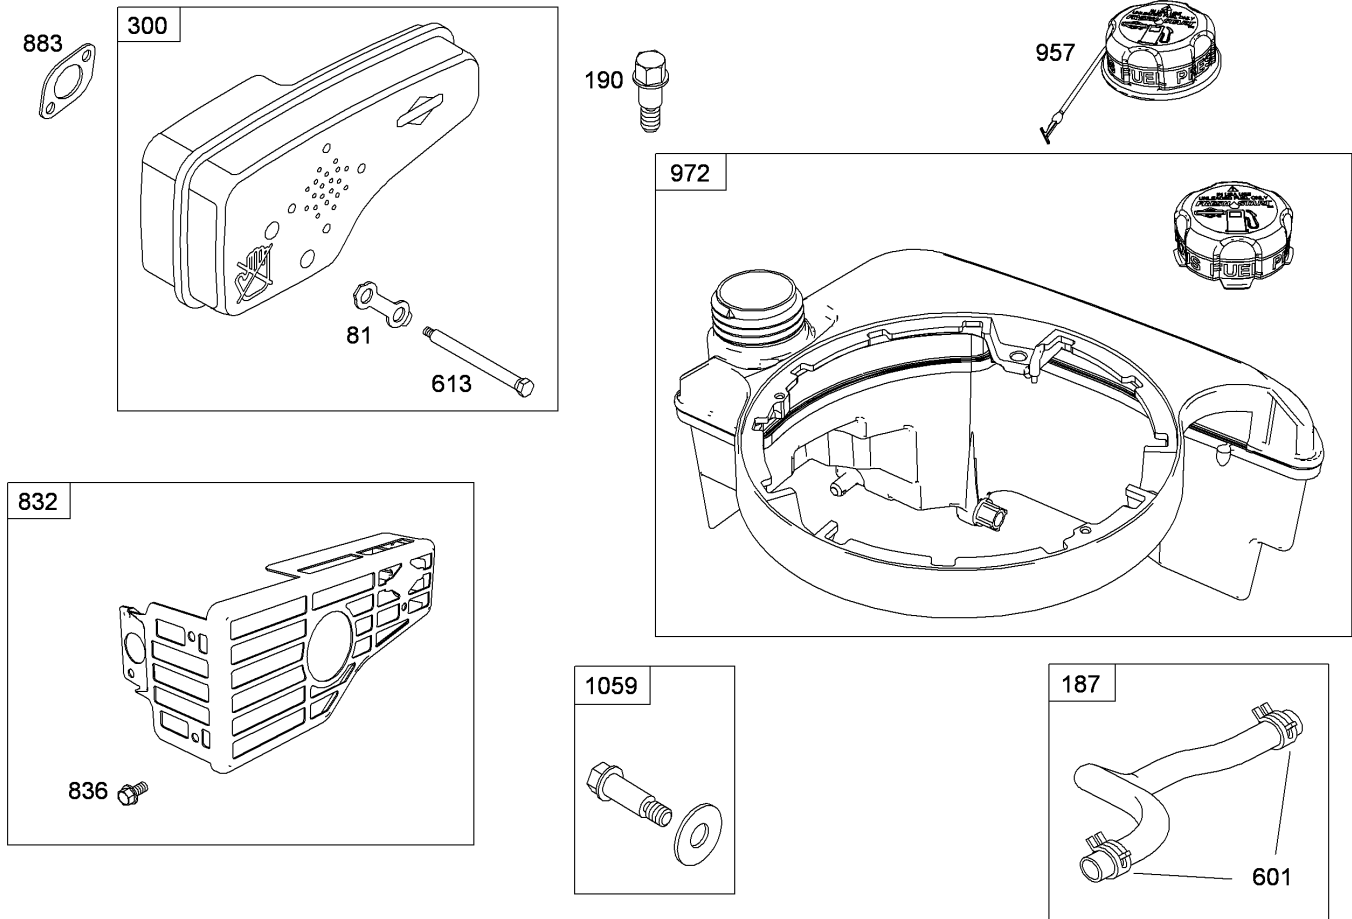 


Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly

Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description				
281	691740	1	Lock-Screw, Muffler				
2187	791766	1	Line-Fuel (Cut To Required Length)				
2190	690940	1	Screw (Fuel Tank)				
2300	790828	1	Muffler				
2601	791850	1	Clamp-Hose				
2613	790663	1	Screw (Muffler)				
2832	499034	1	Guard-Muffler				
2836	690664	1	Screw (Muffler Guard)				
24883	691881	1	Gasket-Exhaust				
5							
2957	793606	1	Cap-Tank, Fuel (Fuel Fresh)				
2972	699374	1	Tank-Fuel				
21059	692311	1	Screw And Washer Kit				

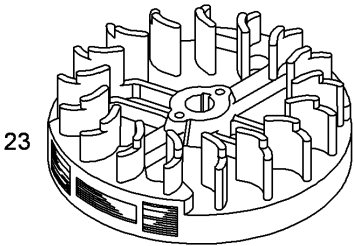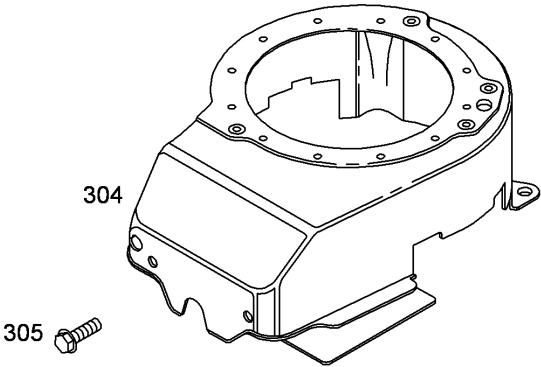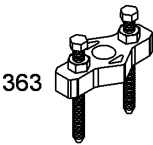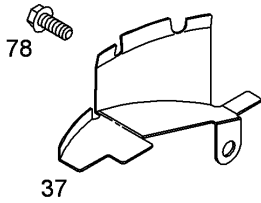    


1036 Emissions Label

Assemblies include all parts shown in frames

Blower Housing and Flywheel Assembly
Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description				
223	691987	1	Flywheel				
237	793756	1	Guard-Flywheel				
278	691108	1	Screw (Flywheel Guard)				
2304	790826	1	Housing-Blower				
2305	691108	1	Screw (Blower Housing)				
2332	690662	1	Nut (Flywheel)				
2363	19069	1	Puller-Flywheel				
2455	791760	1	Cup-Flywheel				
21036		1	Label-Emissions				

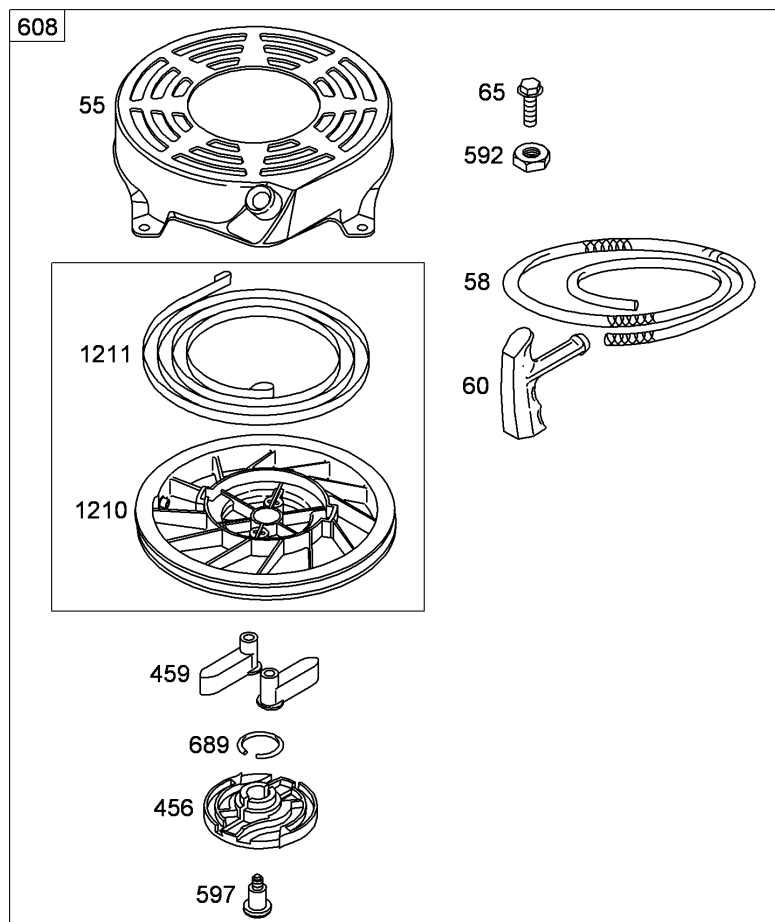 

Assemblies include all parts shown in frames

Rewind Starter Assembly Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description				
255	691421	1	Housing-Starter, Rewind				
258	697316	1	Rope-Starter (Cut To Required Length)				
260	281434s	1	Grip-Rope, Starter				
265	690837	1	Screw (Rewind Starter)				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2592	690800	1	Nut (Rewind Starter)				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	497680	1	Starter-Rewind				
2689	691855	1	Spring-Friction				
21210	498144	1	Pulley And Spring ASM (Pulley)				
21211	498144	1	Pulley And Spring ASM (Spring)				

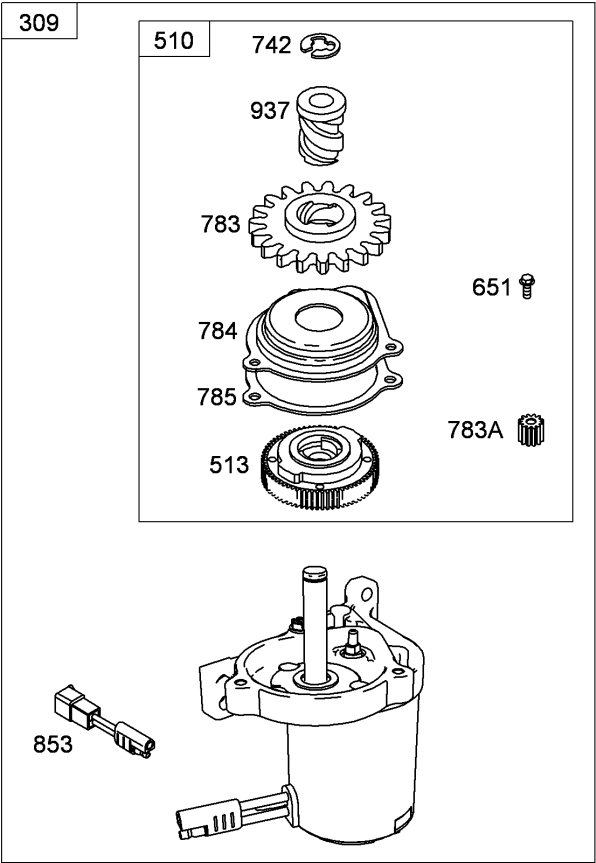 




 1009

Assemblies include all parts shown in frames

Electric Starter Assembly

Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description				
2309	795092	1	Motor-Starter				
2510	795093	1	Drive-Starter				
2513	795100	1	Clutch-Drive				
2651	690345	1	Screw (Starter Gear Cover)				
2742	795094	1	Retainer-E Ring				
2783	795096	1	Gear-Pinion				
2783A	691269	1	Gear-Pinion				
2784	795095	1	Cover-Starter Gear				
2785	795097	1	Gasket-Starter Cover				
2853	695268	1	Adapter-Wire				
2937	795098	1	Spline-Starter				
21009	691127	1	Screw (Starter Motor)				

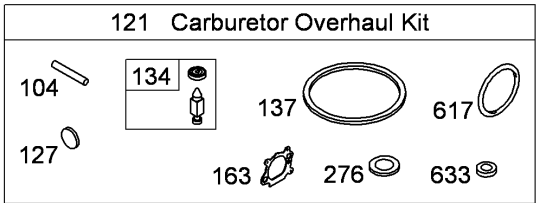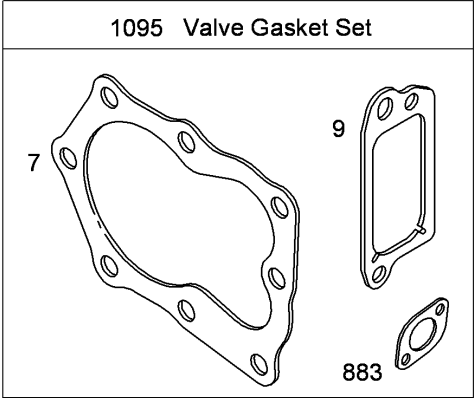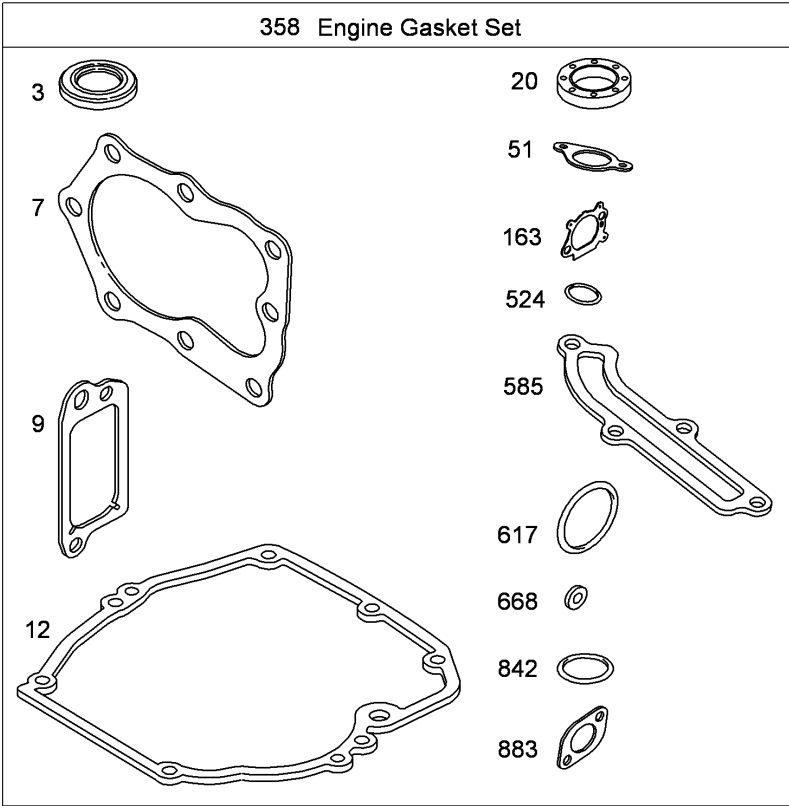   

Assemblies include all parts shown in frames

Engine and Valve Gaskets and Carburetor Overhaul Kit

Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
243	299819s	1	Seal-Oil (Magneto Side)
247	692249	1	Gasket-Head, Cylinder
5			
249	699472	1	Gasket-Breather
5			
2412	692232	1	Gasket-Crankcase
2420	399781s	1	Seal-Oil (PTO Side)
2451	272199s	1	Gasket-Intake
23104	691242	1	Pin-Hinge, Float
2121	498260	1	Carburetor Overhaul Kit
23127	694468	1	Plug-Welch
23134	398188	1	Needle And Seat Kit
23137	693981	1	Gasket-Bowl, Float
23163	272653s	1	Gasket-Cleaner, Air
4			
23276	271716	1	Washer-Sealing
2358	497316	1	Engine Gasket Set
24524	692296	1	Seal-O Ring (Dipstick Tube)
24585	691879	1	Gasket-Passage, Breather
23617	270344s	1	Seal-O Ring (Intake Manifold)
23633	691321	1	Seal-Shaft, Choke Throttle
24668	493823	1	Spacer (Control Bracket)
24842	691031	1	Seal-O Ring (Dipstick)
24883	691881	1	Gasket-Exhaust
5			

Ref	Part No.	Qty.	Description
21095	498528	1	Valve Gasket Set

NOTES

NOTES

NOTES

