


TORO®

MODEL NO. 26635B-3900001 & UP
MODEL NO. 26635BG-3900001 & UP

PARTS CATALOG

53cm KEY-LECTRIC® Rear Bagging Mower

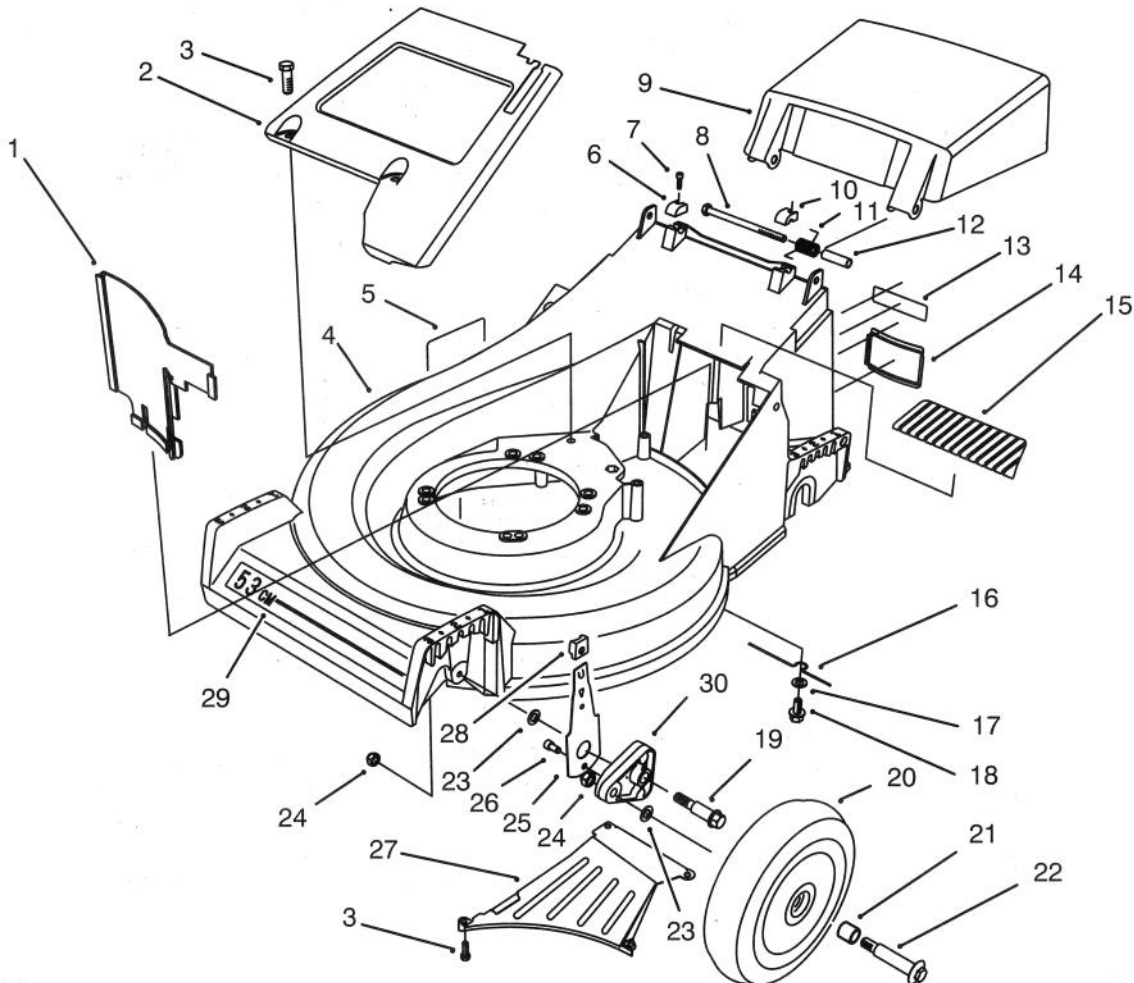


C-1568

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	6
4	16-1769	Housing - 53cm (Incl. Ref. #5 & 29)	1
5	62-3860	Decal - Danger	1
6	71-7910	Cap - Hinge Bolt R.H.	1
7	65-5210	Screw - Thread Forming	2
8	322-29	Screw - Hex Hd. Cap	2
9	71-9800	Door - Discharge	1
10	71-7900	Cap - Hinge Bolt L.H.	1
11	71-9840	Spring - Door	2
12	71-8580	Spacer - Door	2
13	66-0680	Decal - French Regulation	1
14	71-9650	Access - Cover	1

Ref. No.	Part No.	Description	No. Used
15	71-9920	Cover - Top	1
16	66-0620	Retainer - Belt	1
17	3256-24	Washer - Flat	1
18	32144-15	Screw - Hex Flange Hd.	1
19	66-0560	Screw - Shoulder	2
20	14-9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27-6250	Bushing - Wheel	4
22	27-6231	Bolt - Wheel	2
23	40-1940	Washer - Wheel Bolt	4
24	3296-6	Nut - Lock	4
25	66-0540	Arm - Spring Front	2
26	65-5220	Screw - Cap Socket Hd.	2
27	71-9640	Ramp - Discharge	1
28	25-7740	Knob - Arm	2

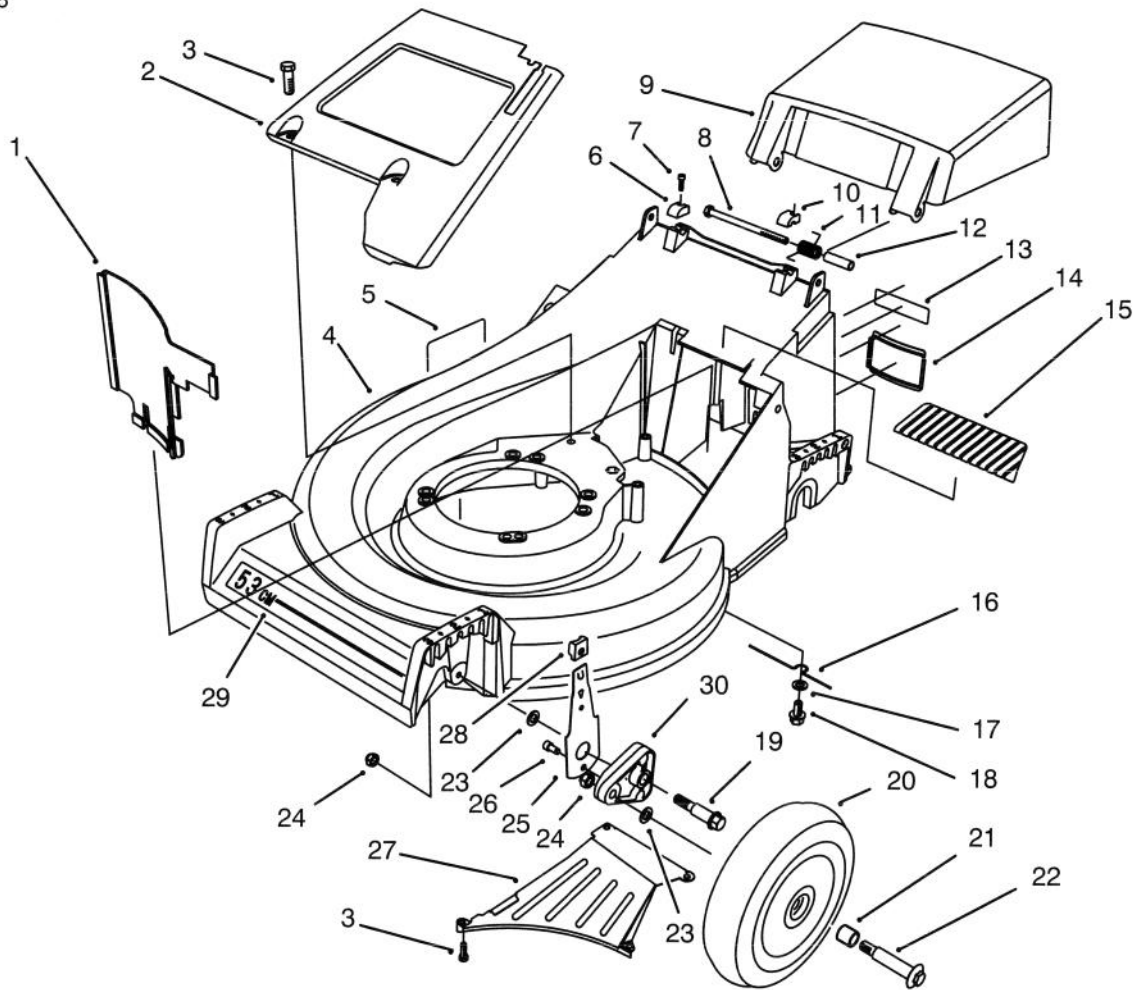


C-1568

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	71-9870	Decal - Deck 53cm (Model No. 26635B Only)	1
30	66-0580	Arm - Pivot	2
*	17368	Decal - Front (Model No. 26635BG Only)	1
*	11715	Decal - Triangle (Model No. 26635BG Only)	1

Ref. No.	Part No.	Description	No. Used
*	17738	Decal - Safety (Model No. 26635BG Only)	1
*	18076	Decal - Specification (Model No. 26635BG Only)	1

*Not Illustrated

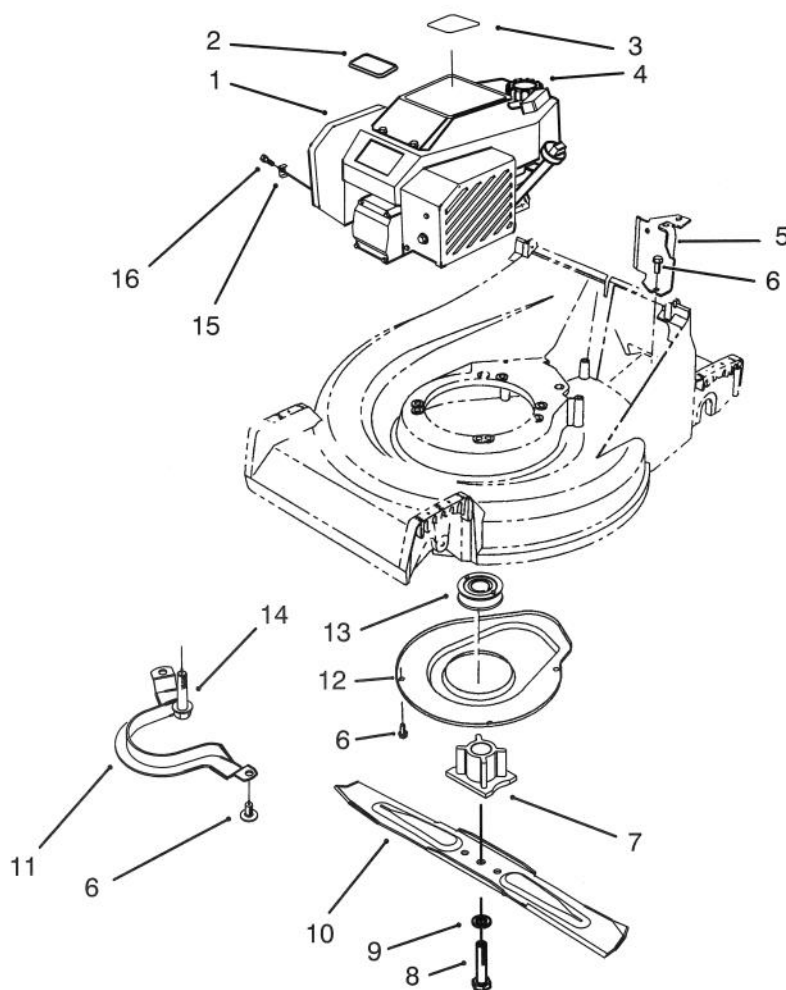


C-1566

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-8950	Engine - OHV	1
2	92-2289	Plate - TORO Logo	1
3	80-4800	Decal - Recoil	1
4	55-3570	Gas Cap Assembly	1
5	66-0030	Bracket - Cable Support	1
6	32144-70	Screw - Hex Hd. Cap	7
7	62-7540	Retainer - Blade	1
8	26-0670	Bolt - Blade	1

Ref. No.	Part No.	Description	No. Used
9	3253-22	Washer - Blade	1
10	62-7700	Blade - 21"	1
11	66-0570	Guide - Belt	1
12	65-5200	Cover	1
13	62-7550	Pulley - Engine	1
14	32144-102	Screw - Hex Hd. Cap	3
15	2210-249	Clamp - Casing	1
16	86-7990	Screw - Clamp	1

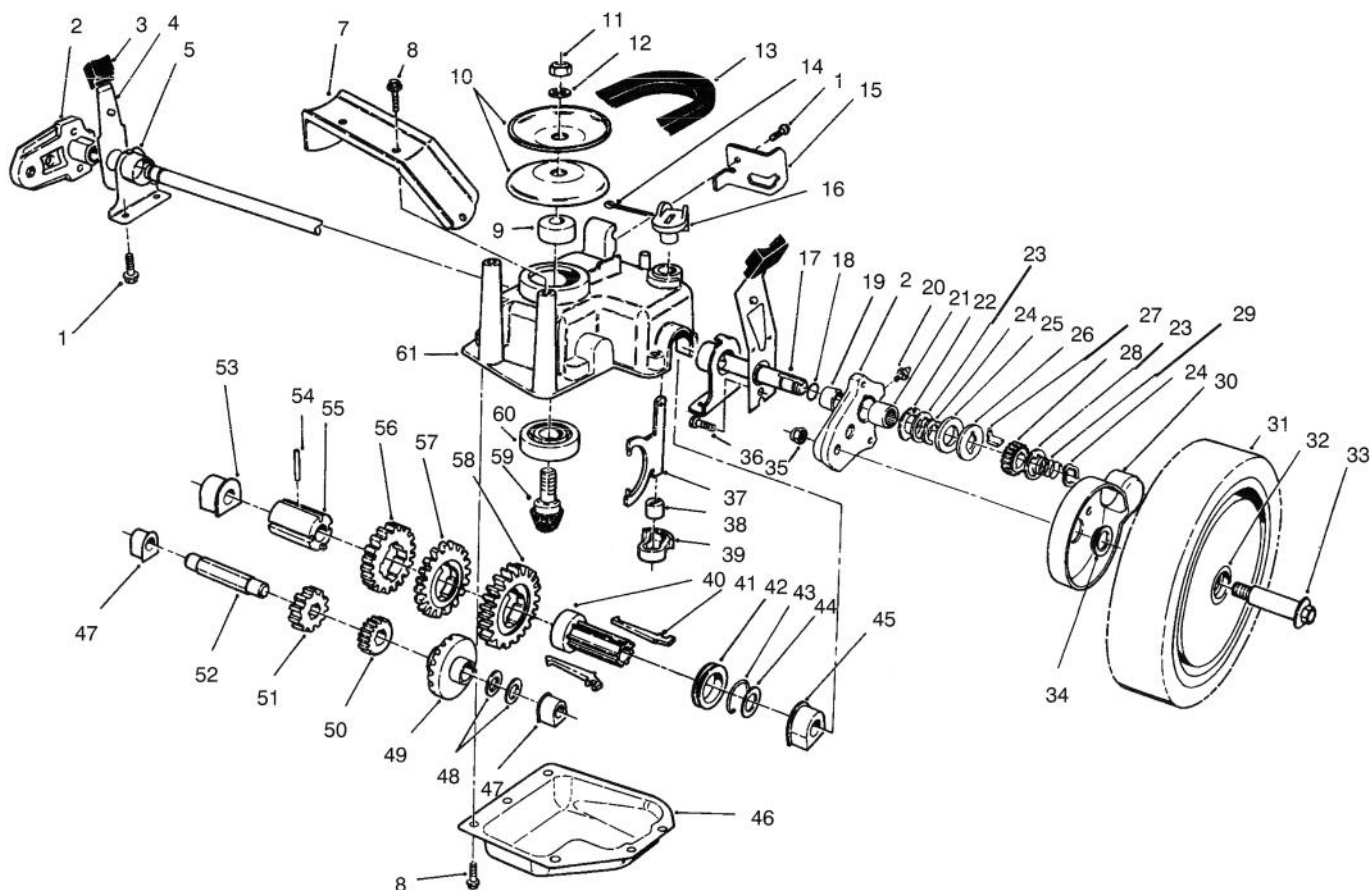


C-1555

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	3
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O"Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1671	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

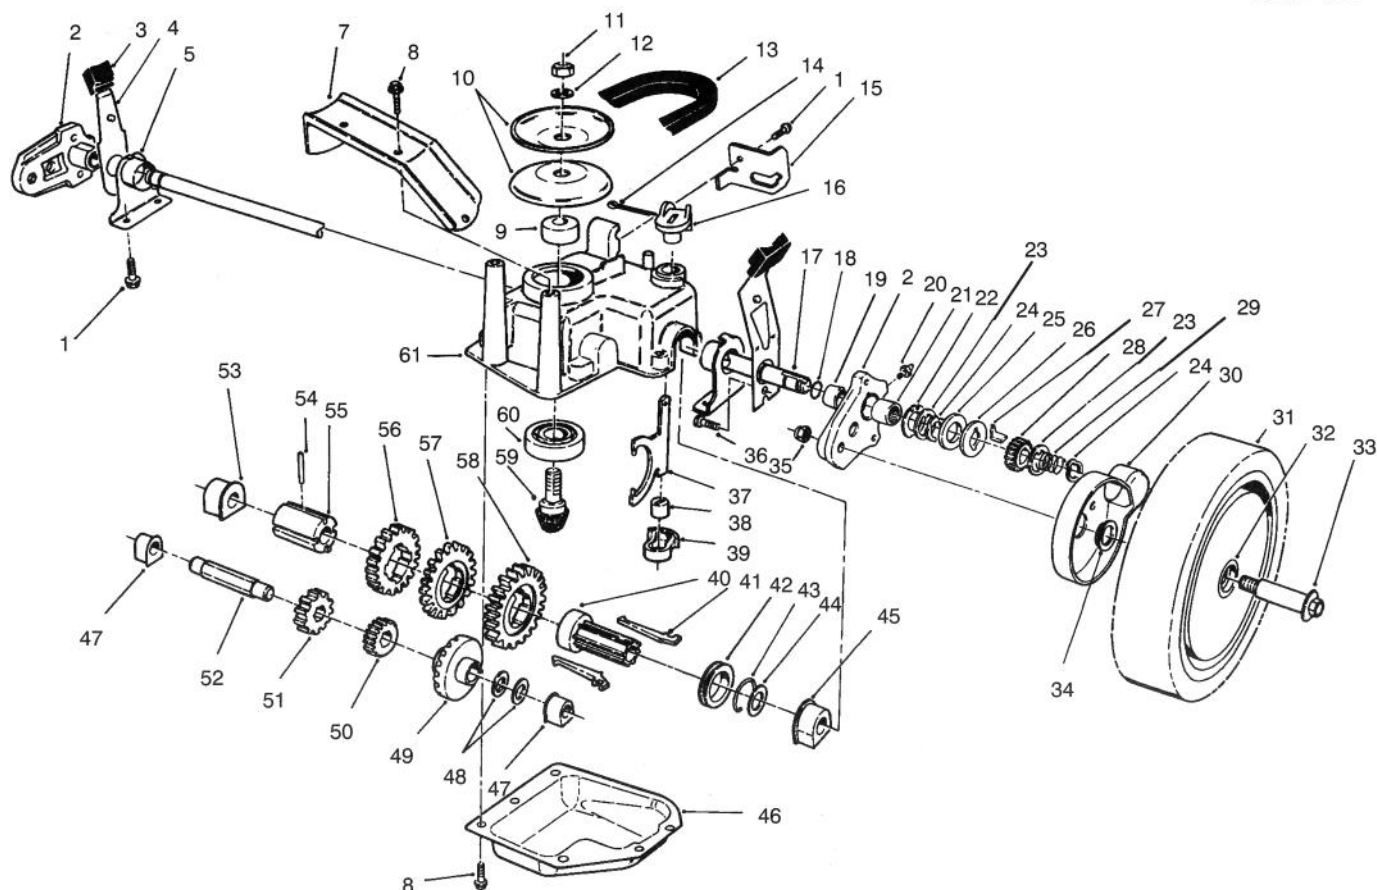


C-1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1	54	32121-120	Pin - Coil	1
46	60-8730	Cover - Gear Case	1	55	60-8790	Sleeve - Gear	1
47	60-8750	Bushing - Intrmdt. Shaft	2	56	55-3810	Gear - 39T (3rd Gear)	1
48	36-4791	Washer - Thrust	2	57	55-3790	Gear - 44T (2nd Gear)	1
49	55-3760	Gear - Pinion 15T	1	58	55-3770	Gear - 49T (1st Gear)	1
50	55-3780	Gear - Pinion 20T	1	59	60-8890	Pinion - Bevel	1
51	55-3800	Gear - Pinion 25T	1	60	38-7820	Bearing - Ball	1
52	60-8800	Shaft - Intermediate	1	61	60-8710	Case - Gear (Upper)	1
53	60-8850	Bushing - Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

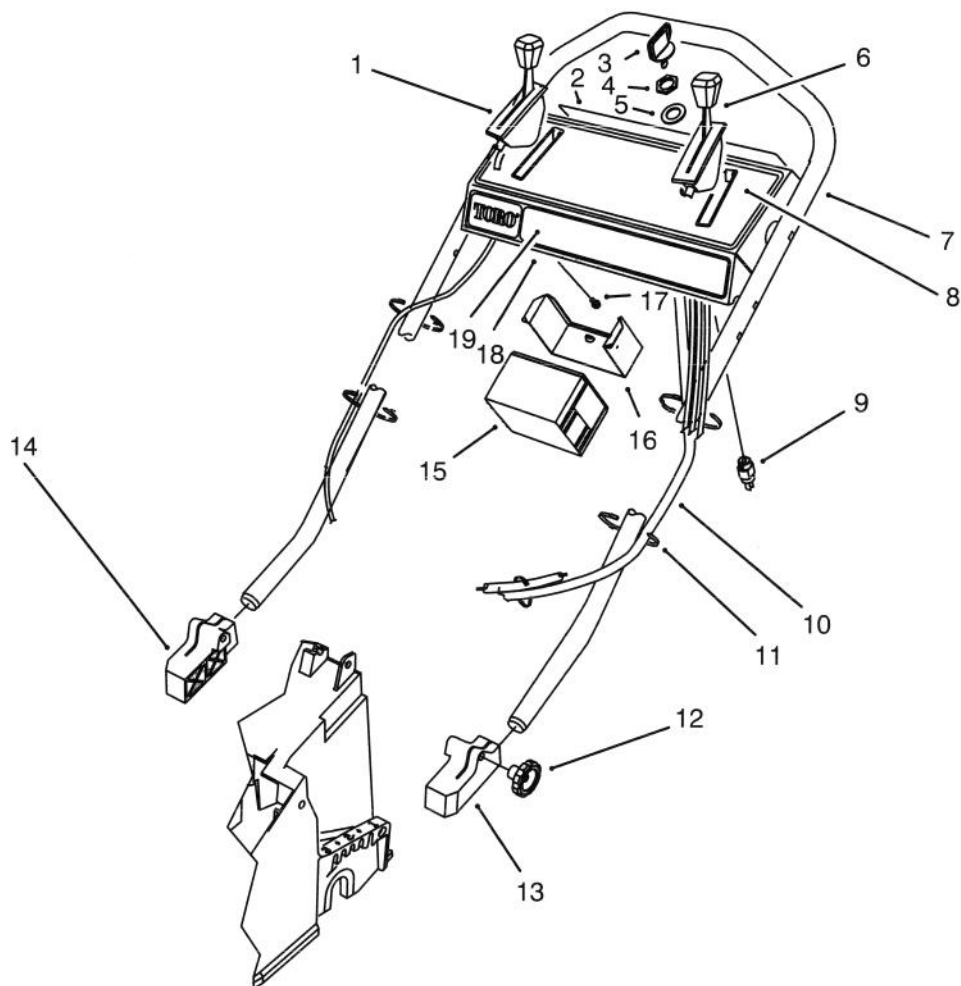


C-1583

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-2713	Control - Ground Speed	1
2	66-1790	Decal - Danger	
3	63-8360	Key - Ignition	1
4	218-461	Nut - Lock	1
5	3254-5	Washer - Lock	1
6	66-0236	Control - Throttle	
		Bend Type #3	
		Sheath Lg. 57"	
		(145cm)	
		Wire Lg. 2-3/8" (6cm)	1
7	71-9690	Handle	1
8	71-9875	Decal - Instruction	1
9	46-5780	Switch - Starter	
		(Incl. Ref. #4 & 5)	1

Ref. No.	Part No.	Description	No. Used
10	80-4791	Harness - Wire	1
11	3290-378	Tie - Cable	5
12	19-4050	Knob - Handle Release	2
13	71-8090	Mount - Handle L.H.	1
14	71-8100	Mount - Handle R.H.	1
15	63-8570	Battery	1
16	63-8480	Retainer - Battery	1
17	32104-76	Screw - Self Tapping	5
18	16-1739	Panel - Control	
		(Incl. Ref. #2, 8 & 19)	1
19	71-9871	Decal - TORO	1
*	22-4710	Charger - Battery (220V)	1

*Not Illustrated

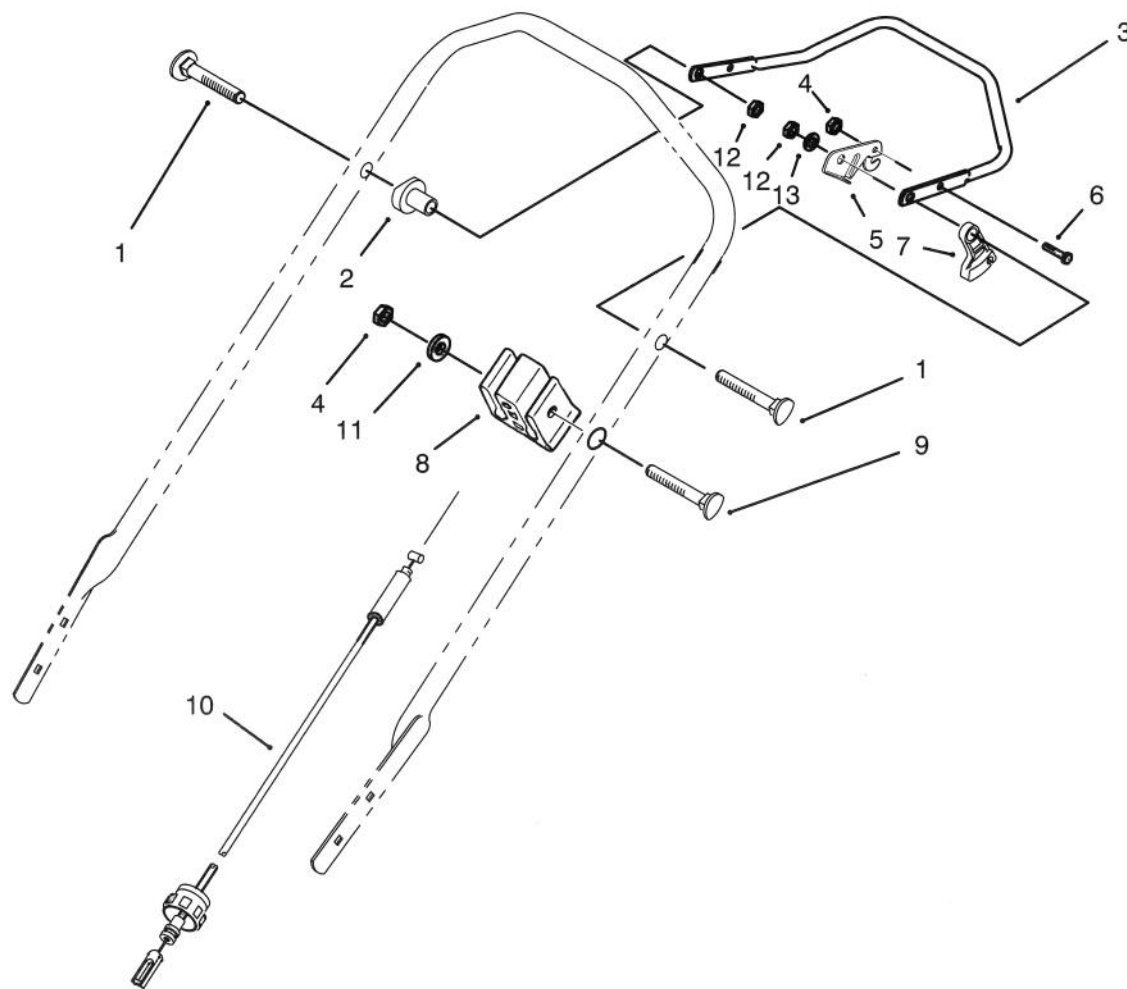


C-1567

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2
2	66-0330	Support - Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut - Lock	2
5	46-8800	Lever - Control	1
6	321-3	Screw - Hex. Hd. Cap	1
7	46-5520	Lever - Traction	1

Ref. No.	Part No.	Description	No. Used
8	71-0960	Support - Cable	1
9	46-6432	Screw - Handle	1
10	71-0620	Cable - Traction	1
11	3256-22	Washer - Flat	1
12	3296-58	Nut - Lock	2
13	3256-23	Washer - Flat	2

ENGINE GTS-150

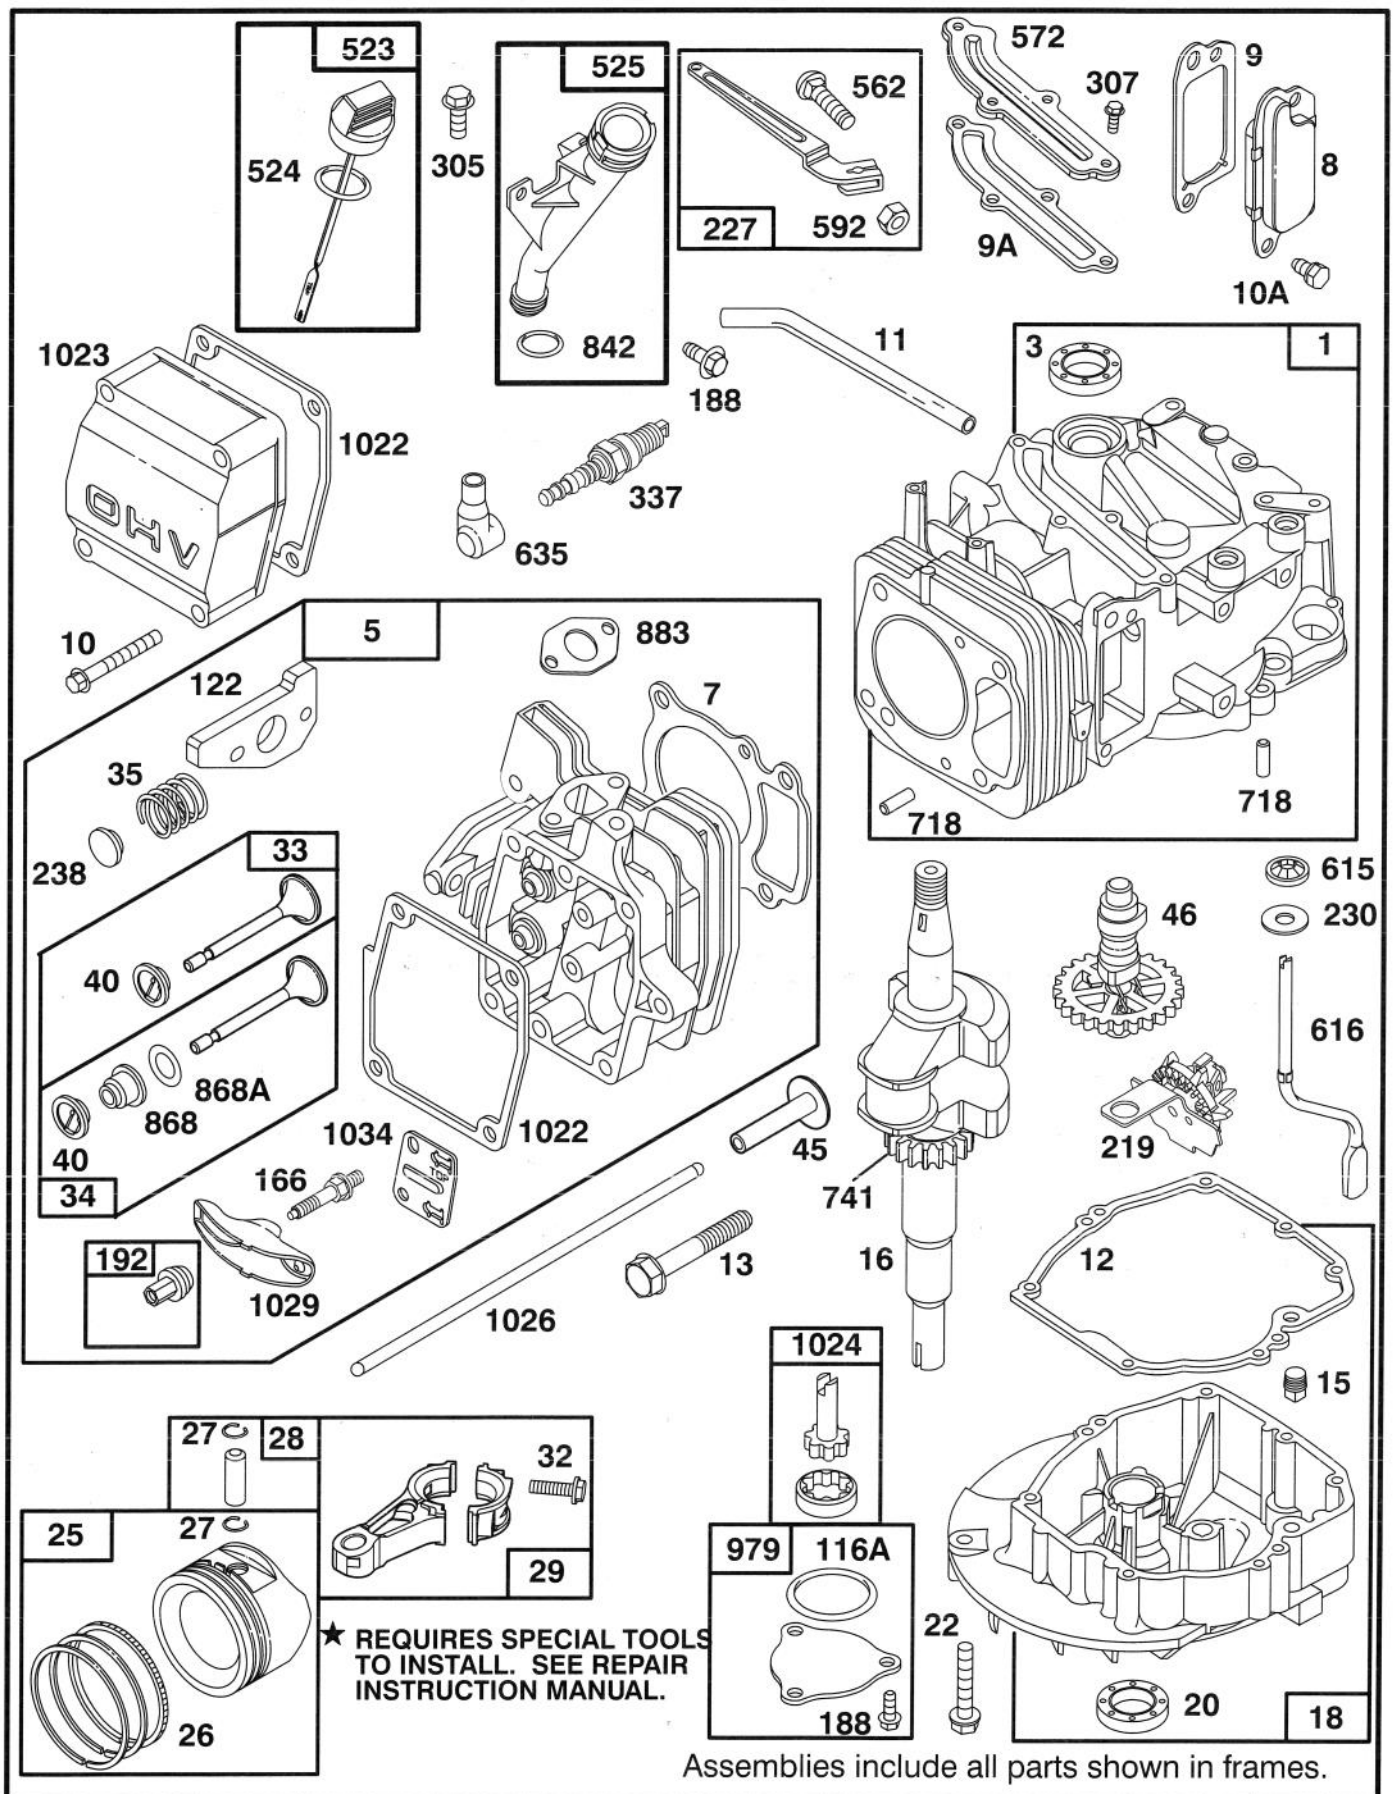

ENGINE GTS-150


Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy.	1
*3	77-9060	Seal - Oil	1
5	77-7730	Head - Cylinder	1
*7	77-7740	Gasket - Cylinder Head	1
8	77-9260	Breather Valve	1
*9	77-9250	Gasket - Breather	1
*9A	77-7410	Gasket - Breather	1
10	77-7360	Screw - Hex. Head (valve cover)	4
10A	77-9200	Screw - Hex Hd.	2
11	77-7350	Tube - Breather	1
*12	77-7550	Gasket - Engine Base	1
13	77-7630	Screw - Cylinder Head	4
15	77-9240	Plug - Pipe	1
16	77-7520	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key	
18	77-7560	Base - Engine	1
*20	77-7570	Seal - Oil	1
22	77-9070	Screw - Engine Base	7
		Note: Order Part No. 77-9080 For Hole Nearest Breather	
25	77-7690	Piston Assy. (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock - Piston Pin	2
28	77-7720	Pin - Piston (STD)	1
29	77-7670	Rod - Connecting	1
32	77-7680	Screw - Connecting Rod	2
33	77-7860	Valve - Exhaust	1
34	77-7880	Valve - Intake	1
35	77-7810	Spring - Valve	2
40	77-7870	Retainer - Spring	2
45	77-7610	Tappet - Valve	2
46	77-7490	Gear - Cam	1
*116A	77-7660	Seal - O Ring	1
†122	77-7820	Adapter Assy.	1
166	77-7780	Stud - Rocker Arm	2
188	77-7450	Screw - Sem (Breather Mounting, pump cover)	5

Ref. No.	Part No.	Description	No. Used
192	77-7910	Nut - Hex Special	2
219	77-7500	Gear - Governor	1
227	77-7370	Lever - Governor	1
230	77-7470	Washer - Thrust	1
238	77-7800	Cap - Valve	2
305	77-8310	Screw - Hex. Head	2
307	77-7420	Screw - Sem (Breather Cover)	4
337	77-7330	Plug - Spark	1
523	77-7260	Dipstick - Oil	1
*524	77-7270	Seal - Intake Elbow	1
525	77-7280	Tube - Oil Filler	1
562	77-7380	Bolt - Governor Lever	1
572	77-7400	Baffle - Cylinder	1
592	77-7390	Nut - Hex.	1
615	77-7480	Push Nut	1
616	77-7460	Crank - Governor	1
635	77-7340	Elbow - Spark Plug	1
718	77-7600	Dowel - Sleeve	2
741	77-7530	Gear - Timing	1
*842	77-7300	Seal - O Ring	1
*868	77-7890	Seal Assy. - Valve	1
*868A	77-7900	Gasket - Valve	1
*883	77-7760	Gasket - Exhaust	1
979	77-7650	Cover - Oil Pump	1
*1022	77-7320	Gasket - Rocker Cover	1
1023	77-7060	Cover - Valve	1
1024	77-7640	Pump - Oil	1
1026	77-7620	Rod - Push	2
1029	77-7790	Arm - VLV Rocker	2
1034	77-7770	Guide - Push Rod	1
	77-9020	Short Block (Incl. Ref. #1, 7, 9, 9A, 16, 18, 25, 28, 29, 45, 46, 122, 219, 230, 615, 616, 883, 979, 1022, 1024 pg. 8) (Incl. Ref. #163 pg. 10)	1

*Included in Gasket Set

†Included in Carburetor Overhaul Kit

ENGINE GTS-150

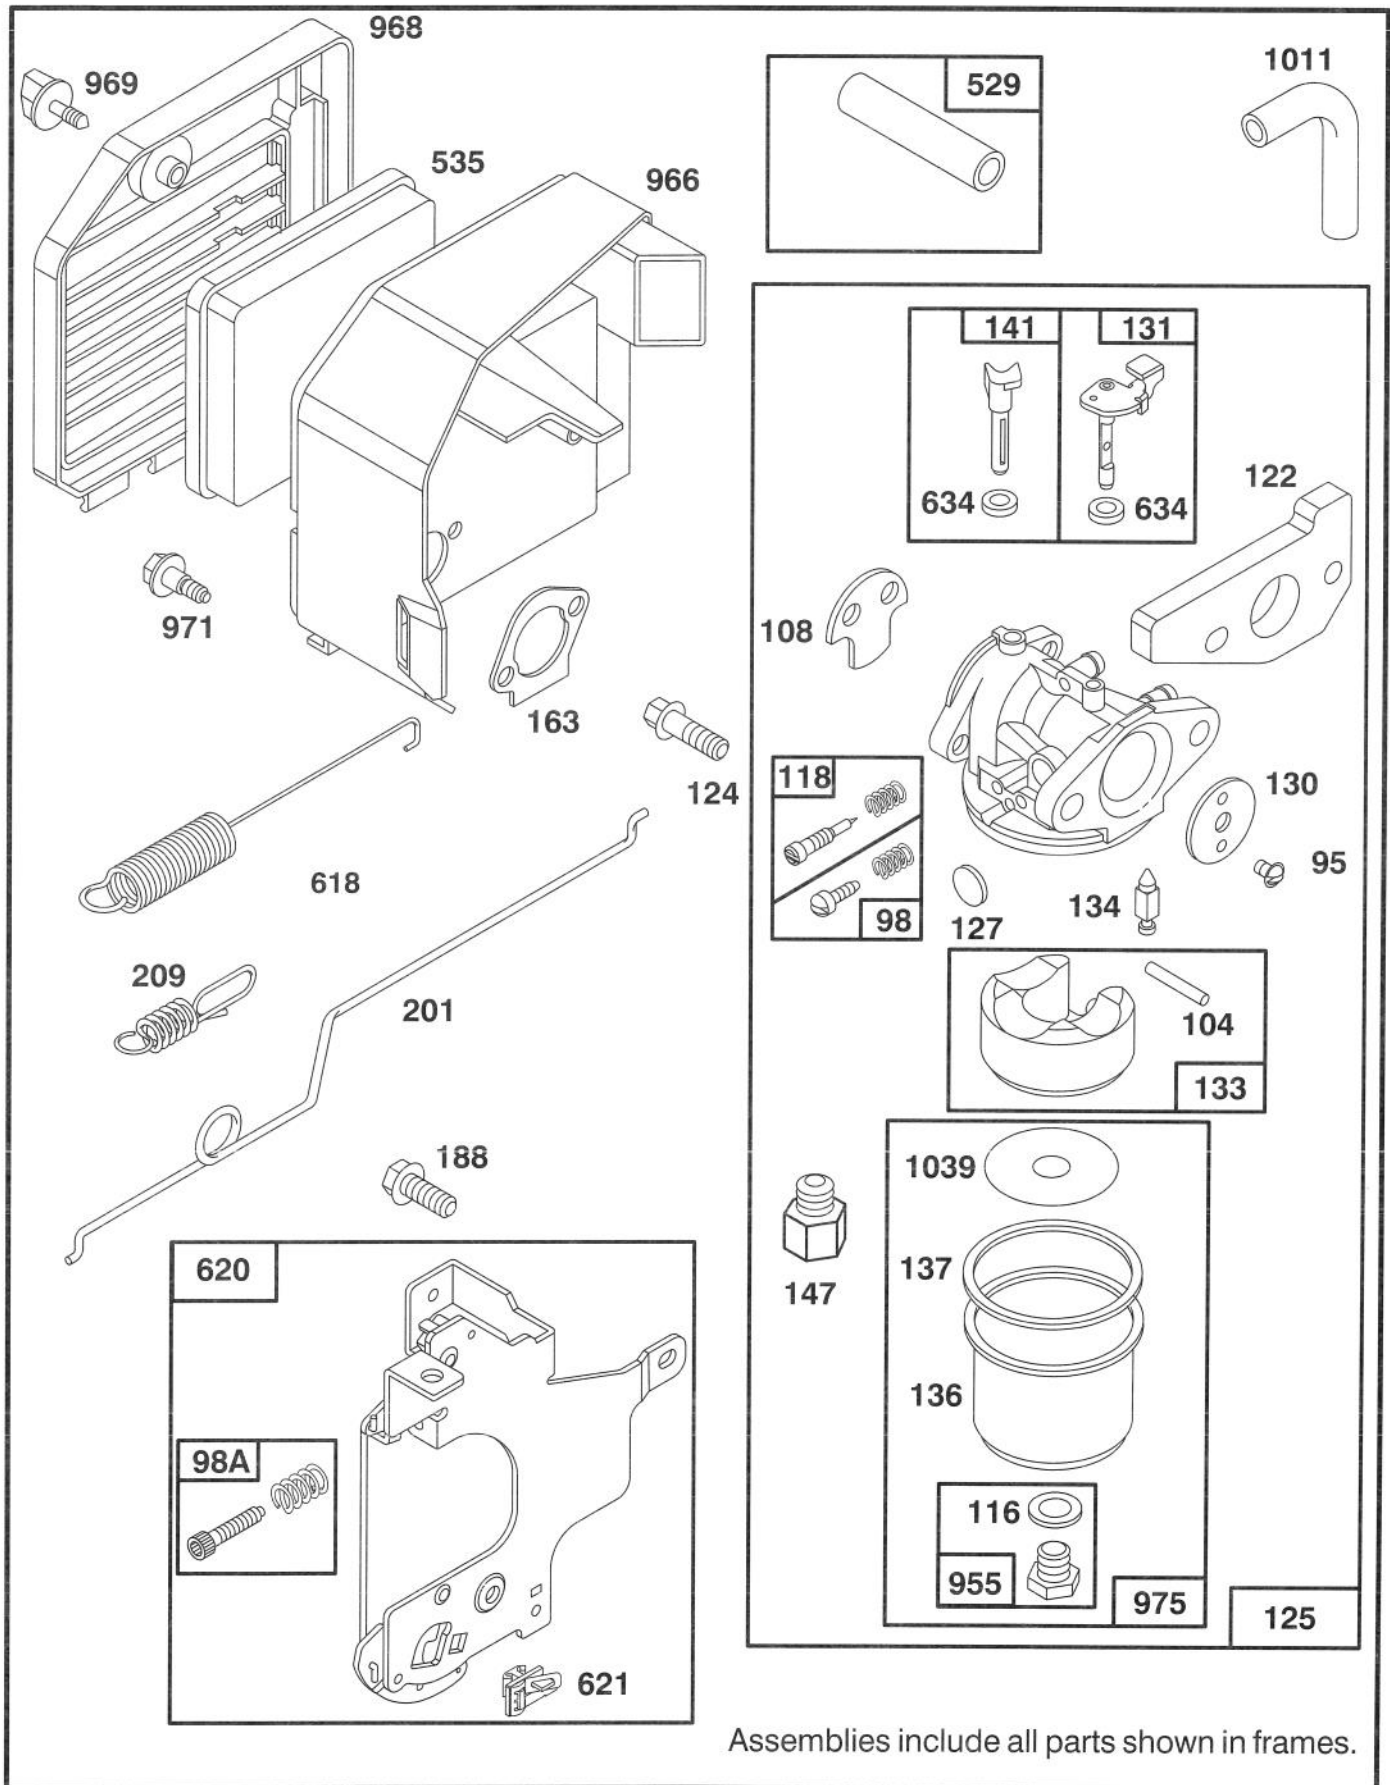

ENGINE GTS-150


Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw - Round Head	1
98	77-8240	Screw - Idle Adj.	1
98A	77-8020	Screw Assy - Speed Adj.	1
†104	77-8180	Pin - Float Hinge	1
108	77-8070	Valve - Choke	1
†116	77-8210	Washer - Fuel Bowl	1
†118	77-8230	Valve & Kit - Needle	1
†122	77-7820	Adapter Assy.	1
124	77-7970	Screw - Hex Head (Carburetor Mounting)	2
125	77-8050	Carburetor Assy.	1
†127	77-8100	Plug - Welch	1
130	77-8080	Valve - Throttle	1
131	77-8160	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
†134	77-8110	Valve - Float (Includes Seat)	1
136	77-7240	Bowl - Fuel	1
†137	77-8200	Gasket - Fuel Bowl	1
141	77-8130	Shaft - Choke	1
147	77-8120	Adapter - Jet Note: For High Altitude Jet, Order Part No. 77-9000	1

Ref. No.	Part No.	Description	No. Used
*163	77-7960	Gasket - Air Cleaner	1
188	77-7450	Screw - Hex. Head (connecting bracket)	2
201	77-7980	Link - Governor	1
209	77-7990	Spring - Governor	1
529	77-8030	Tube - Breather	1
535	77-7950	Element - Filter Note: 77-9010 - Element Paper (Optional)	1
618	77-8140	Spring - Return	1
620	77-8000	Bracket - Carburetor	1
621	77-8010	Switch - Stop	1
†634	77-8150	Washer - Seal	2
955	77-8220	Screw - Hex. Head	1
966	77-7940	Base Air Cleaner	1
968	77-7040	Cover - Air Cover	1
969	77-7920	Screw - Air Cleaner	1
971	77-7930	Screw - Air Cleaner	3
975	77-8190	Bowl Assy. - Carburetor	1
1011	77-8040	Tube - Vent	1
†1039	77-7250	Limiter - Float	1

*Included in Gasket Set

†Included in Carburetor Overhaul Kit

ENGINE GTS-150

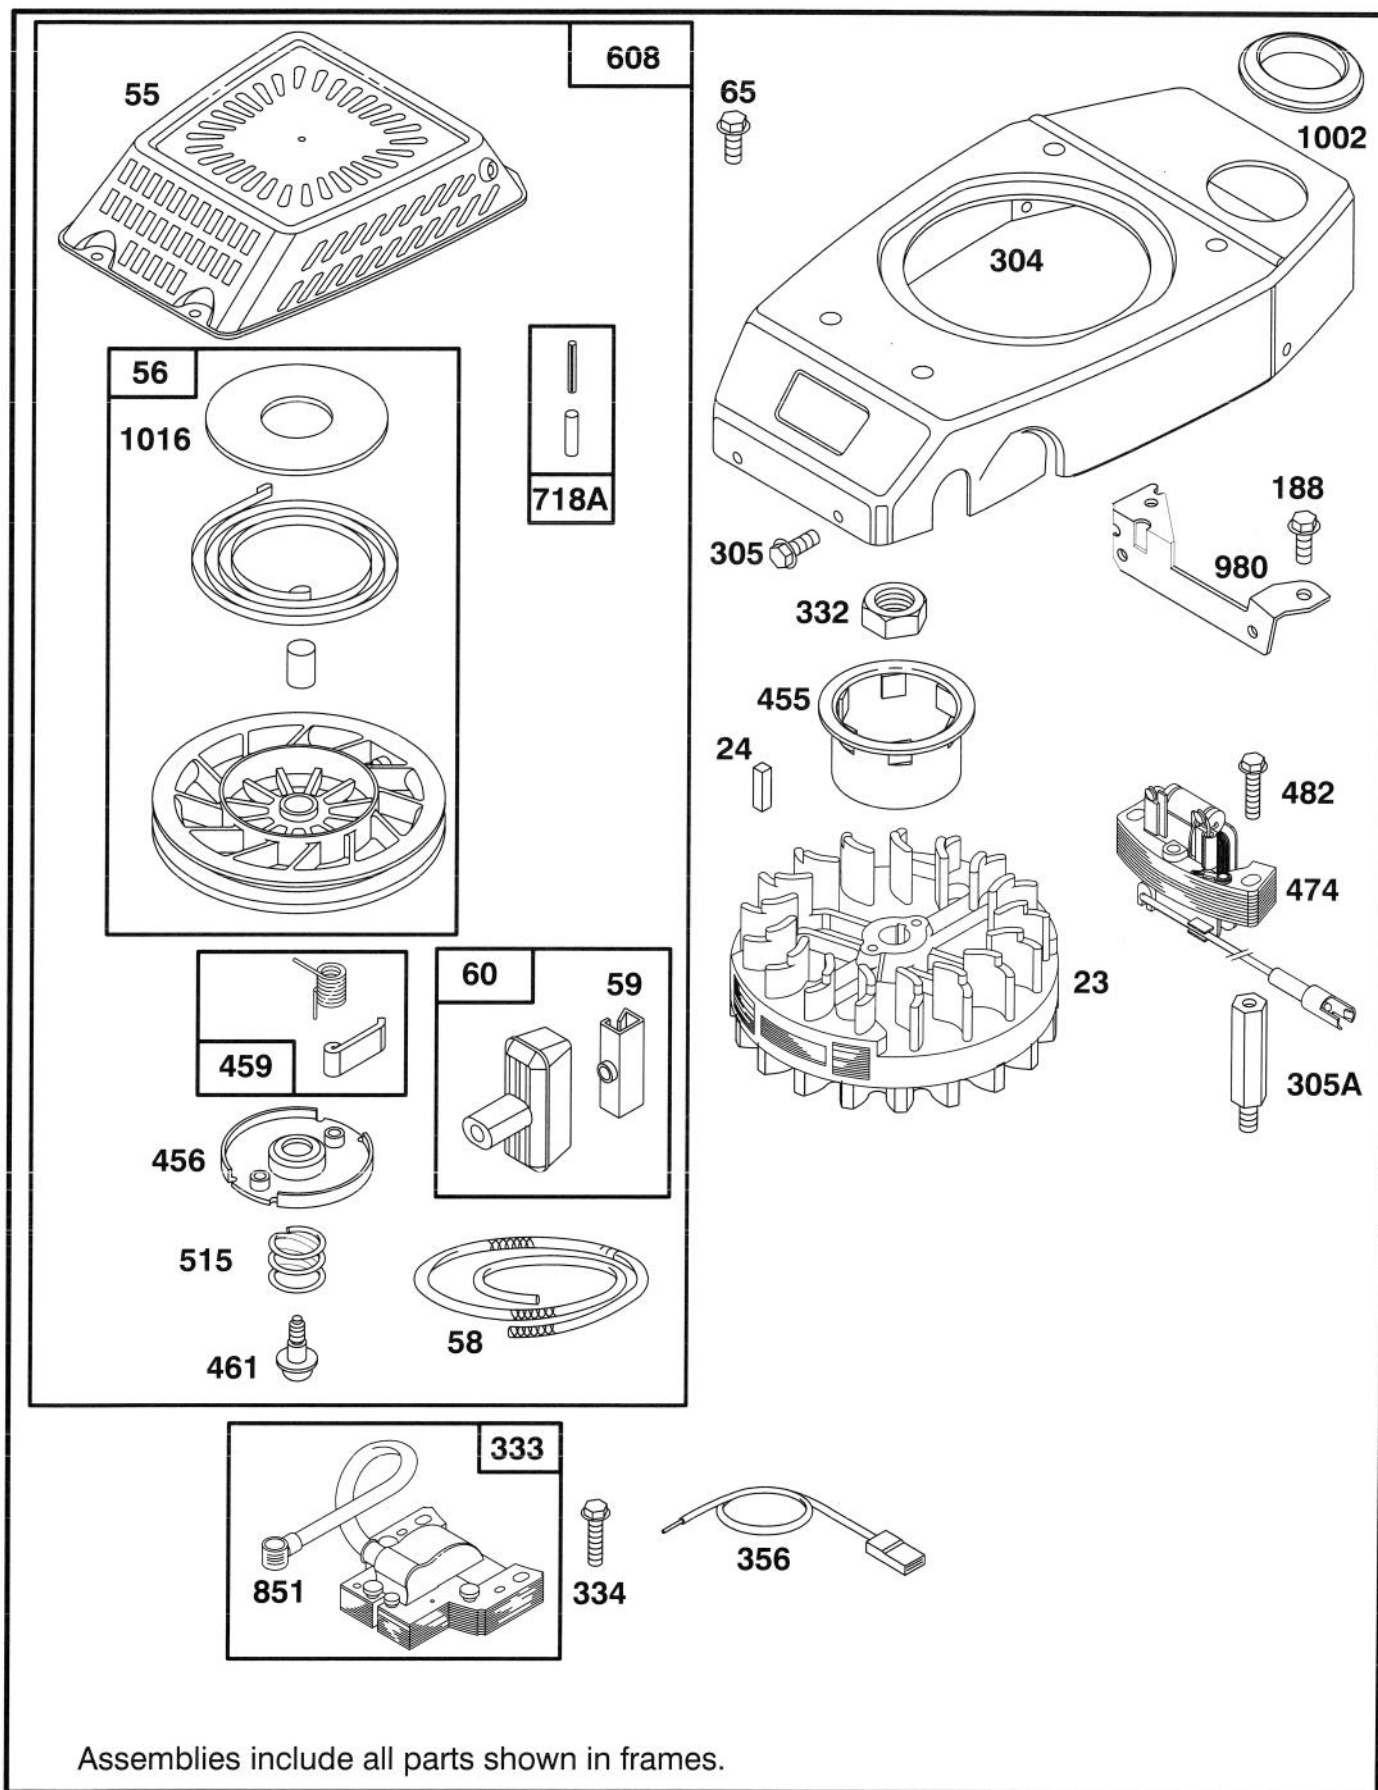


ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
23	77-8320	Flywheel - Magneto	1
24	77-8340	Key - Flywheel	1
55	77-8460	Housing - Rewind Starter	1
56	77-9270	Pulley - Rewind Starter	1
58	77-8480	Spool - Starter Rope (Cut To Suit)	1
59	77-7210	Insert - Starter Grip	1
60	77-8520	Grip - Starter Rope	1
65	77-8300	Screw - Hex. Head	4
188	77-7450	Screw - Hex. Head (Blower bracket)	2
304	77-8250	Housing - Blower	1
305	77-8310	Screw - Hex. Head (Blower Housing)	4
305A	77-8390	Stud - Mtg.	2
332	77-8360	Nut - Hexagon	1

Ref. No.	Part No.	Description	No. Used
333	77-8420	Armature - Magneto	1
334	77-8440	Screw - Sem	2
356	77-8400	Wire - Ground	1
455	77-8350	Cup - Starter	1
456	77-8470	Retainer - Spring	1
459	77-8530	Pawl & spring - Ratchet	2
461	77-8490	Screw - Rewind Starter	1
474	77-8370	Alternator	1
482	77-8870	Screw - Sem	2
515	77-8500	Spring - Retainer	1
608	77-8840	Starter Assy. - Rewind	1
718A	77-8550	Dowel - Sleeve	1
851	77-8430	Terminal - Spark Plug	1
980	77-7140	Bracket - Blower Housing	1
1002	77-7180	Grommet	1
1016	77-8570	Cover - Pulley	1

ENGINE GTS-150

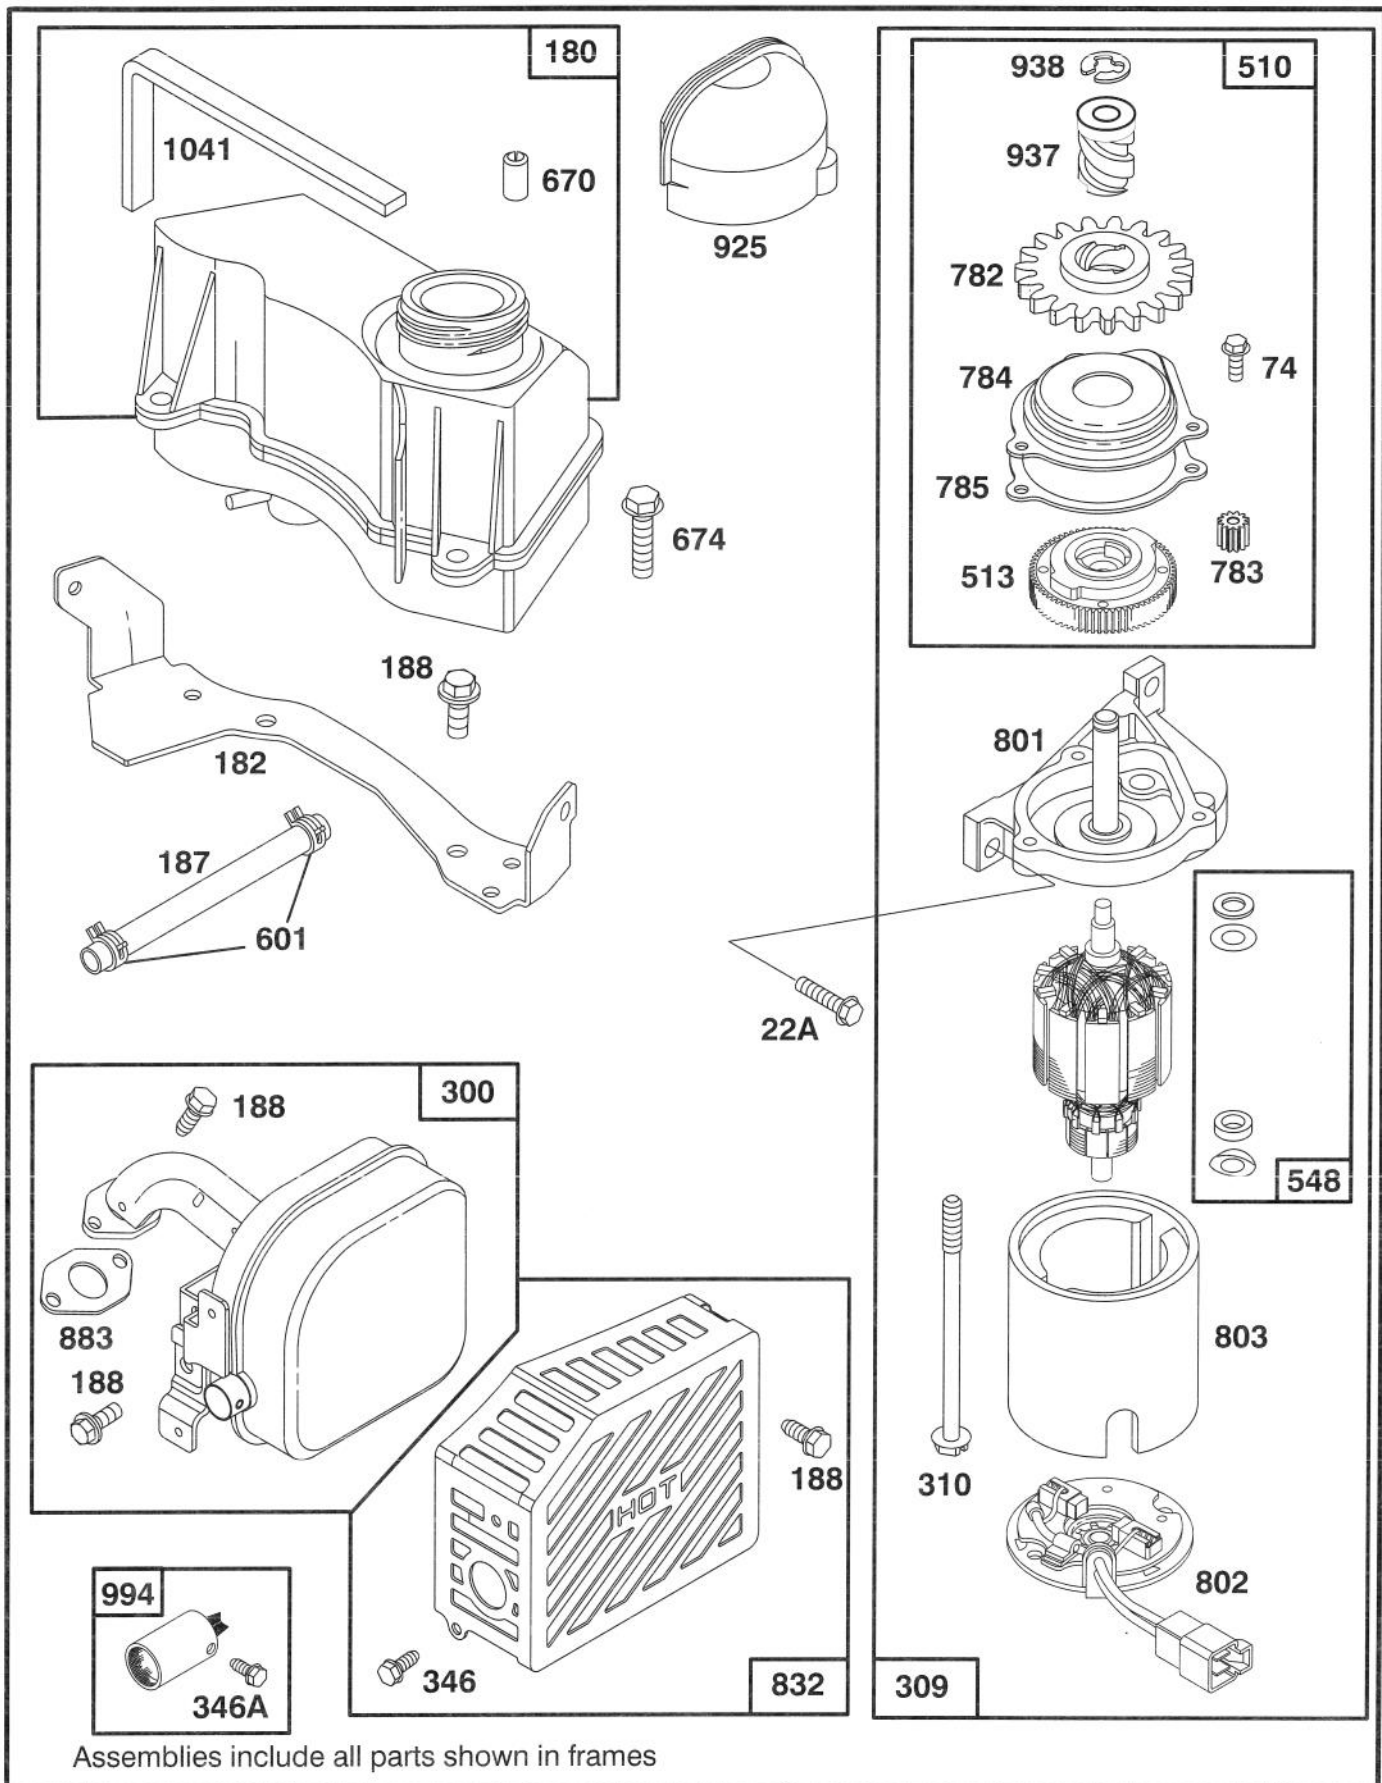




ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
22A	77-8720	Screw - Carb. Mtg.	2
74	77-8800	Screw - Sem	3
180	77-8580	Tank Assy. - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	77-8620	Hose - Fuel (Cut To Suit)	1
188	77-7450	Screw - Hex. Head (Muffler guard, muffler manifold to head, connecting bracket, Tk bracket)	7
300	77-8640	Muffler - Exhaust	1
309	77-8670	Motor Starter	1
310	77-8710	Bolt - Thru	2
346	77-8650	Screw - Self Tap (Muffler Guard)	2
346A	77-9050	Screw - Arrester Mtg.	1
510	77-8910	Drive - Starter	1
513	77-8770	Clutch - Starter	1

Ref. No.	Part No.	Description	No. Used
548	77-8740	Washer - Starter	1
601	77-8630	Clamp - Fuel Hose	2
670	77-9030	Spacer - Fuel Tank (Incl. 2)	1
674	77-8600	Screw - Tank Mtg.	2
782	77-8810	Gear - Starter	1
783	77-8760	Gear - Pinion	1
784	77-8780	Cover - Gear	1
785	77-8790	Gasket - Gear Cover	1
801	77-8680	Cap - Drive	1
802	77-8690	Cap - End	1
803	77-8700	Housing - Starter	1
832	77-9290	Guard - Muffler	1
*883	77-7760	Gasket - Exhaust	1
925	77-7200	Cover - Starter	1
937	77-8820	Drive - Starter	1
938	77-8830	Retainer - Lock	1
994	77-9040	Arrester - Spark	1
*1041	77-8590	Seal - Foam	1

*Included in Gasket Set

ENGINE GTS-150

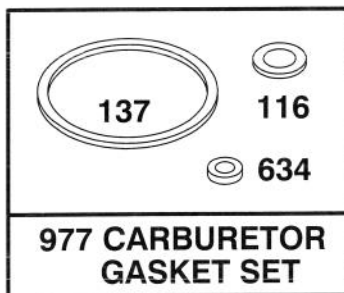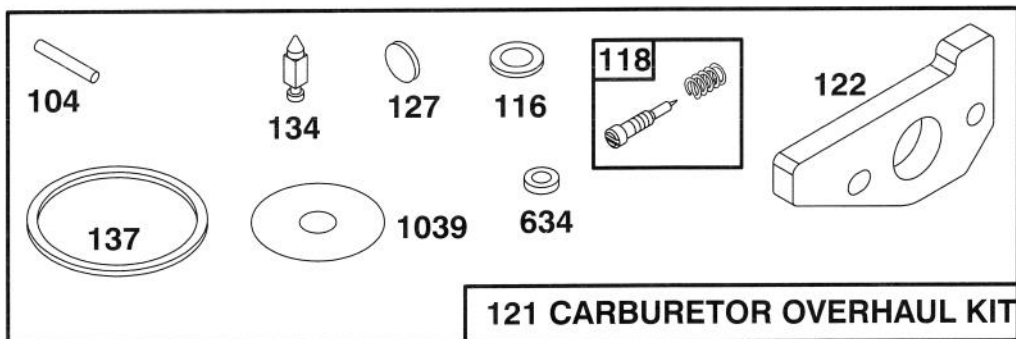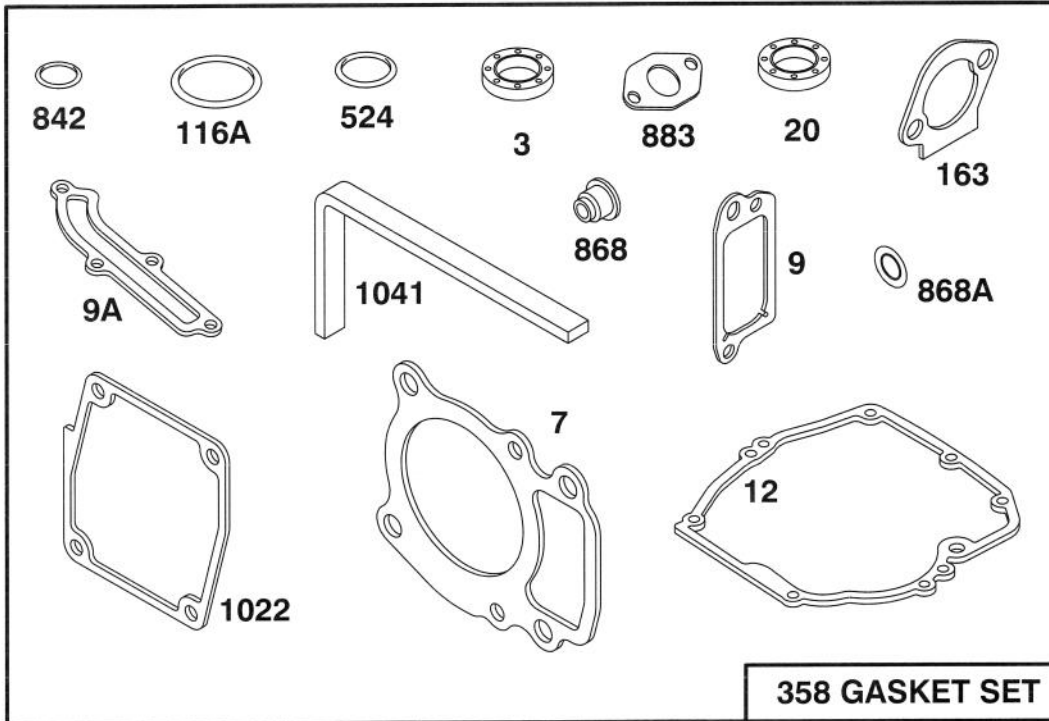

Assemblies include all parts shown in frames.

ENGINE GTS-150


Ref. No.	Part No.	Description	No. Used
* 3	77-9060	Seal - Oil	1
* 7	77-7740	Gasket - Cylinder Head	1
* 9	77-9250	Gasket - Valve Cover	1
* 9A	77-7410	Gasket - Breather	1
* 12	77-7550	Gasket - Engine Base	1
* 20	77-7570	Seal - Oil	1
† 104	77-8180	Pin - Float Hinge	1
†‡116	77-8210	Washer - Fuel Bowl	1
*116A	77-7660	Seal - O Ring	1
† 118	77-8230	Valve & Kit - Needle	1
† 121	77-8920	Overhaul Kit - Carburetor	1
† 122	77-7820	Adapter Assy.	1
† 127	77-8100	Plug - Welch	1
† 134	77-8110	Valve - Float (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
†‡137	77-8200	Gasket - Fuel Bowl	1
* 163	77-7960	Gasket - Air Cleaner	1
358	77-8900	Gasket Set	1
* 524	77-7270	Seal - Intake Elbow	1
‡ 634	77-8150	Washer - Seal	2
* 842	77-7300	Seal - O Ring	1
* 868	77-7890	Seal Assy. - Valve	1
*868A	77-7900	Gasket - Valve	1
* 883	77-7760	Gasket - Exhaust	1
977	77-8930	Gasket Set - Carburetor	1
*1022	77-7320	Gasket - Rocker Cover	1
†1039	77-7250	Limiter - Float	1
*1041	77-8590	Seal - Foam	1

† Included In Carburetor Overhaul Kit

*Included In Gasket Set

‡ Included In Carburetor Gasket Set

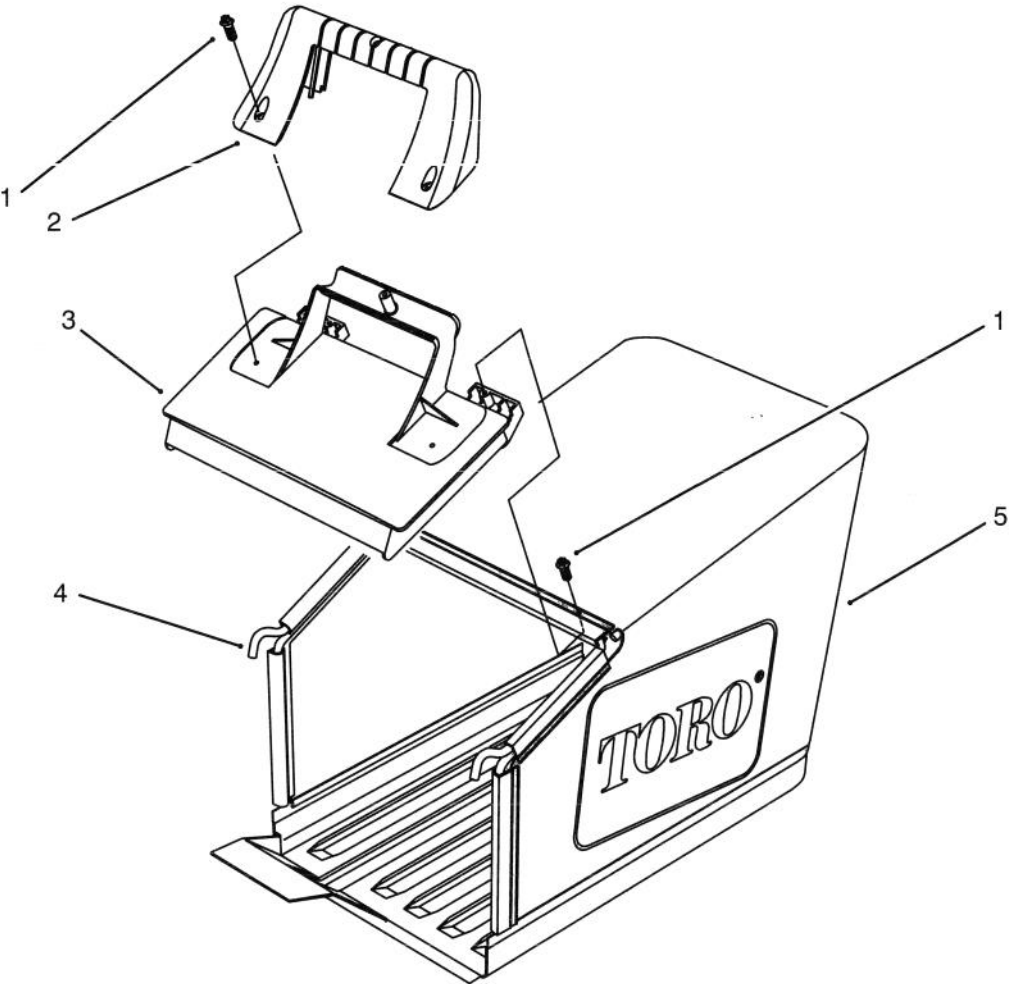

C-1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Index Hex Washer Head	5
2	71-9480	Handle - Door	1

Ref. No.	Part No.	Description	No. Used
3	71-9470	Door - Bag	1
4	71-9930	Frame - Grass Bag	1
5	71-9680	Bag - Grass 53cm	1

TORO PART NUMBER INDEX

3316-185

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
11715	Decal - Triangle	2 * 1	65-5190	Bracket - Belt Guide	4 7 1
17368	Decal - Front	2 * 1	65-5200	Cover	3 12 1
17738	Decal - Safety	2 * 1	65-5210	Screw - Thread Forming	1 7 2
18076	Decal - Specification	2 * 1	65-5220	Screw - Cap Socket Hd.	1 26 2
14-9949	Wheel & Tire Assembly	1 20 2	65-5220	Screw - Socket Hd. Cap	4 36 2
14-9959	Wheel Tire & Gear Assy.	4 31 2	65-5250	Clip - Spring	4 43 1
16-1739	Panel - Control	6 18 1	65-5440	Spring Arm Assembly	4 4 2
16-1769	Housing - 53cm	1 4 1	65-5660	Panel - Screen	1 2 1
17-9426	Screw - Handle	7 1 2	66-0020	Panel - Vertical	1 1 1
19-4050	Knob - Handle Release	6 12 2	66-0030	Bracket - Cable Support	3 5 1
22-4710	Charger - Battery (220V)	6 * 1	66-0210	V-Belt	4 13 1
25-7740	Knob - Arm	4 3 2	66-0236	Control - Throttle	6 6 1
25-7740	Knob - Arm	1 28 2	66-0330	Support - Spacer	7 2 2
26-0670	Bolt - Blade	3 8 1	66-0360	Cap - End	4 5 2
27-6231	Bolt - Wheel	1 22 2	66-0540	Arm - Spring Front	1 25 2
27-6231	Bolt - Wheel	4 33 2	66-0560	Screw - Shoulder	1 19 2
27-6250	Bushing - Wheel	1 21 4	66-0570	Guide - Belt	3 11 1
27-6250	Bushing - Wheel	4 32 4	66-0580	Arm - Pivot	2 30 2
29-9570	Bushing - Yoke	4 38 1	66-0620	Retainer - Belt	1 16 1
36-4780	Washer - Thrust	4 44 1	66-0680	Decal - French Regulation	1 13 1
36-4791	Washer - Thrust	5 48 2	66-1790	Decal - Danger	6 2
38-7820	Bearing - Ball	5 60 1	66-6040	Key - Rocking (R.H.)	4 * 1
40-1940	Washer - Wheel Bolt	1 23 4	66-6050	Key - Rocking (L.H.)	4 27 1
46-5520	Lever - Traction	7 7 1	70-9760	Bushing - Sleeve	4 19 2
46-5780	Switch - Starter	6 9 1	71-0620	Cable - Traction	7 10 1
46-6432	Screw - Handle	7 9 1	71-0960	Support - Cable	7 8 1
46-8800	Lever - Control	7 5 1	71-7900	Cap - Hinge Bolt L.H.	1 10 1
48-2060	Bearing - Needle	4 21 2	71-7910	Cap - Hinge Bolt R.H.	1 6 1
49-2040	Screw - Self Tapping	4 8 8	71-8090	Mount - Handle L.H.	6 13 1
52-7430	Control Bar Assembly	7 3 1	71-8100	Mount - Handle R.H.	6 14 1
55-3570	Gas Cap Assembly	3 4 1	71-8580	Spacer - Door	1 12 2
55-3760	Gear - Pinion 15T	5 49 1	71-9470	Door - Bag	18 3 1
55-3770	Gear - 49T (1st Gear)	5 58 1	71-9480	Handle - Door	18 2 1
55-3780	Gear - Pinion 20T	5 50 1	71-9640	Ramp - Discharge	1 27 1
55-3790	Gear - 44T (2nd Gear)	5 57 1	71-9650	Access - Cover	1 14 1
55-3800	Gear - Pinion 25T	5 51 1	71-9680	Bag - Grass 53cm	18 5 1
55-3810	Gear - 39T (3rd Gear)	5 56 1	71-9690	Handle	6 7 1
60-8710	Case - Gear (Upper)	5 61 1	71-9800	Door - Discharge	1 9 1
60-8730	Cover - Gear Case	5 46 1	71-9840	Spring - Door	1 11 2
60-8750	Bushing - Intrmdt. Shaft	5 47 2	71-9870	Decal - Deck 53cm	2 29 1
60-8770	Bushing - Output Shaft	5 45 1	71-9871	Decal - TORO	6 19 1
60-8790	Sleeve - Gear	5 55 1	71-9875	Decal - Instruction	6 8 1
60-8800	Shaft - Intermediate	5 52 1	71-9920	Cover - Top	1 15 1
60-8810	Retainer - Shift Fork	4 39 1	71-9930	Frame - Grass Bag	18 4 1
60-8840	Pulley - Half	4 10 2	74-1660	Cover - Wheel	4 30 2
60-8850	Bushing - Output Shaft	5 53 1	74-1671	Spacer - Wheel Cover	4 34 2
60-8870	Yoke - Shift	4 37 1	76-0760	Key - Shift	4 41 2
60-8890	Pinion - Bevel	5 59 1	76-0770	Collar - Shift	4 42 1
62-3860	Decal - Danger	1 5 1	76-0780	Sleeve - Shift Key	4 40 1
62-6660	Spacer	4 9 1	76-0920	Lever - Shift	4 16 1
62-6673	Gear Case Assy. Complete	5 * 1	76-2713	Control - Ground Speed	6 1 1
62-7540	Retainer - Blade	3 7 1	76-2930	Retainer - Cable	4 15 1
62-7550	Pulley - Engine	3 13 1	77-7040	Cover - Air Cover	11 968 1
62-7700	Blade - 21	3 10 1	77-7060	Cover - Valve	9 1023 1
63-8360	Key - Ignition	6 3 1	77-7140	Bracket - Blower Housing	13 980 1
63-8480	Retainer - Battery	6 16 1	77-7170	Bracket - Fuel Tank	15 182 1
63-8570	Battery	6 15 1	77-7180	Grommet	13 1002 1
65-2720	Ring - Retaining	4 24 4	77-7200	Cover - Starter	15 925 1
65-4710	Ring - Friction	4 25 2	77-7210	Insert - Starter Grip	13 59 1
65-4720	Spring - Compression	4 29 2	77-7240	Bowl - Fuel	11 136 1
65-4730	Washer - Thrust (Inner)	4 22 2	77-7250	Limiter - Float	11 1039 1
65-4740	Washer - Thrust (Keyed)	4 23 4	77-7250	Limiter - Float	17 1039 1
65-4750	Pinion	4 28 2	77-7260	Dipstick - Oil	9 523 1
65-4760	Washer - Clutch	4 26 2	77-7270	Seal - Intake Elbow	17* 524 1
65-4770	Shaft - Output	4 17 1	77-7270	Seal - Intake Elbow	9 *524 1
65-5042	Pivot Arm Assembly	4 2 2	77-7280	Tube - Oil Filler	9 525 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-7300	Seal - O Ring	9 *842 1	77-7900	Gasket - Valve	17* 868A 1
77-7300	Seal - O Ring	17* 842 1	77-7910	Nut - Hex Special	9 192 2
77-7320	Gasket - Rocker Cover	9*1022 1	77-7920	Screw - Air Cleaner	11 969 1
77-7320	Gasket - Rocker Cover	17* 1022 1	77-7930	Screw - Air Cleaner	11 971 3
77-7330	Plug - Spark	9 337 1	77-7940	Base Air Cleaner	11 966 1
77-7340	Elbow - Spark Plug	9 635 1	77-7950	Element - Filter	11 535 1
77-7350	Tube - Breather	9 11 1	77-7960	Gasket - Air Cleaner	11 *163 1
77-7360	Screw - Hex. Head	9 10 4	77-7960	Gasket - Air Cleaner	17* 163 1
77-7370	Lever - Governor	9 227 1	77-7970	Screw - Hex Head	11 124 2
77-7380	Bolt - Governor Lever	9 562 1	77-7980	Link - Governor	11 201 1
77-7390	Nut - Hex.	9 592 1	77-7990	Spring - Governor	11 209 1
77-7400	Baffle - Cylinder	9 572 1	77-8000	Bracket - Carburetor	11 620 1
77-7410	Gasket - Breather	9 *9A 1	77-8010	Switch - Stop	11 621 1
77-7410	Gasket - Breather	17* 9A 1	77-8020	Screw Assy - Speed Adj.	11 98A 1
77-7420	Screw - Sem	9 307 4	77-8030	Tube - Breather	11 529 1
77-7450	Screw - Hex. Head	11 188 2	77-8040	Tube - Vent	11 1011 1
77-7450	Screw - Hex. Head	13 188 2	77-8050	Carburetor Assy.	11 125 1
77-7450	Screw - Hex. Head	15 188 7	77-8070	Valve - Choke	11 108 1
77-7450	Screw - Sem	9 188 5	77-8080	Valve - Throttle	11 130 1
77-7460	Crank - Governor	9 616 1	77-8090	Screw - Round Head	11 95 1
77-7470	Washer - Thrust	9 230 1	77-8100	Plug - Welch	11 127 1
77-7480	Push Nut	9 615 1	77-8100	Plug - Welch	17 127 1
77-7490	Gear - Cam	9 46 1	77-8110	Valve - Float	11 134 1
77-7500	Gear - Governor	9 219 1	77-8110	Valve - Float	17 134 1
77-7520	Crankshaft	9 16 1	77-8120	Adapter - Jet	11 147 1
77-7530	Gear - Timing	9 741 1	77-8130	Shaft - Choke	11 141 1
77-7550	Gasket - Engine Base	9 *12 1	77-8140	Spring - Return	11 618 1
77-7550	Gasket - Engine Base	17* 12 1	77-8150	Washer - Seal	11 634 2
77-7560	Base - Engine	9 18 1	77-8150	Washer - Seal	17 634 2
77-7570	Seal - Oil	9 *20 1	77-8160	Shaft - Throttle	11 131 1
77-7570	Seal - Oil	17* 20 1	77-8170	Float - Carburetor	11 133 1
77-7590	Cylinder Assy.	9 1 1	77-8180	Pin - Float Hinge	11 104 1
77-7600	Dowel - Sleeve	9 718 2	77-8180	Pin - Float Hinge	17 104 1
77-7610	Tappet - Valve	9 45 2	77-8190	Bowl Assy. - Carburetor	11 975 1
77-7620	Rod - Push	9 1026 2	77-8200	Gasket - Fuel Bowl	11 137 1
77-7630	Screw - Cylinder Head	9 13 4	77-8200	Gasket - Fuel Bowl	17 137 1
77-7640	Pump - Oil	9 1024 1	77-8210	Washer - Fuel Bowl	11 116 1
77-7650	Cover - Oil Pump	9 979 1	77-8210	Washer - Fuel Bowl	17 116 1
77-7660	Seal - O Ring	17* 116A 1	77-8220	Screw - Hex. Head	11 955 1
77-7660	Seal - O Ring	9*116A 1	77-8230	Valve & Kit - Needle	11 118 1
77-7670	Rod - Connecting	9 29 1	77-8230	Valve & Kit - Needle	17 118 1
77-7680	Screw - Connecting Rod	9 32 2	77-8240	Screw - Idle Adj.	11 98 1
77-7690	Piston Assy. (Std.)	9 25 1	77-8250	Housing - Blower	13 304 1
77-7700	Ring Set (Std.)	9 26 1	77-8300	Screw - Hex. Head	13 65 4
77-7710	Lock - Piston Pin	9 27 2	77-8310	Screw - Hex. Head	13 305 4
77-7720	Pin - Piston (STD)	9 28 1	77-8310	Screw - Hex. Head	9 305 2
77-7730	Head - Cylinder	9 5 1	77-8320	Flywheel - Magneto	13 23 1
77-7740	Gasket - Cylinder Head	9 *7 1	77-8340	Key - Flywheel	13 24 1
77-7740	Gasket - Cylinder Head	17* 7 1	77-8350	Cup - Starter	13 455 1
77-7760	Gasket - Exhaust	15 *883 1	77-8360	Nut - Hexagon	13 332 1
77-7760	Gasket - Exhaust	9 *883 1	77-8370	Alternator	13 474 1
77-7760	Gasket - Exhaust	17* 883 1	77-8390	Stud - Mtg.	13 305A 2
77-7770	Guide - Push Rod	9 1034 1	77-8400	Wire - Ground	13 356 1
77-7780	Stud - Rocker Arm	9 166 2	77-8420	Armature - Magneto	13 333 1
77-7790	Arm - VLV Rocker	9 1029 2	77-8430	Terminal - Spark Plug	13 851 1
77-7800	Cap - Valve	9 238 2	77-8440	Screw - Sem	13 334 2
77-7810	Spring - Valve	9 35 2	77-8460	Housing - Rewind Starter	13 55 1
77-7820	Adapter Assy.	11 122 1	77-8470	Retainer - Spring	13 456 1
77-7820	Adapter Assy.	9 122 1	77-8480	Spool - Starter Rope	13 58 1
77-7820	Adapter Assy.	17 122 1	77-8490	Screw - Rewind Starter	13 461 1
77-7860	Valve - Exhaust	9 33 1	77-8500	Spring - Retainer	13 515 1
77-7870	Retainer - Spring	9 40 2	77-8520	Grip - Starter Rope	13 60 1
77-7880	Valve - Intake	9 34 1	77-8530	Pawl & spring - Ratchet	13 459 2
77-7890	Seal Assy. - Valve	9 *868 1	77-8550	Dowel - Sleeve	13 718A 1
77-7890	Seal Assy. - Valve	17* 868 1	77-8570	Cover - Pulley	13 1016 1
77-7900	Gasket - Valve	9*868A 1	77-8580	Tank Assy. - Fuel	15 180 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-185

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-8590	Seal - Foam	15*1041 1	77-9270	Pulley - Rewind Starter	13 56 1
77-8590	Seal - Foam	17* 1041 1	77-9290	Guard - Muffler	15 832 1
77-8600	Screw - Tank Mtg.	15 674 2	80-4791	Harness - Wire	6 10 1
77-8620	Hose - Fuel	15 187 1	80-4800	Decal - Recoil	3 3 1
77-8630	Clamp - Fuel Hose	15 601 2	86-7990	Screw - Clamp	3 16 1
77-8640	Muffler - Exhaust	15 300 1	92-2289	Plate - TORO Logo	3 2 1
77-8650	Screw - Self Tap	15 346 2	218-461	Nut - Lock	6 4 1
77-8670	Motor Starter	15 309 1	2210-249	Clamp - Casing	3 15 1
77-8680	Cap - Drive	15 801 1	237-153	Seal - ORing	4 18 2
77-8690	Cap - End	15 802 1	302-56	Fitting - Grease	4 20 2
77-8700	Housing - Starter	15 803 1	321-3	Screw - Hex. Hd. Cap	7 6 1
77-8710	Bolt - Thru	15 310 2	322-29	Screw - Hex Hd. Cap	1 8 2
77-8720	Screw - Carb. Mtg.	15 22A 2	3253-22	Washer - Blade	3 9 1
77-8740	Washer - Starter	15 548 1	3254-5	Washer - Lock	6 5 1
77-8760	Gear - Pinion	15 783 1	3256-22	Washer - Flat	7 11 1
77-8770	Clutch - Starter	15 513 1	3256-23	Washer - Flat	7 13 2
77-8780	Cover - Gear	15 784 1	3256-24	Washer - Flat	4 12 1
77-8790	Gasket - Gear Cover	15 785 1	3256-24	Washer - Flat	1 17 1
77-8800	Screw - Sem	15 74 3	3272-5	Pin - Cotter	4 14 1
77-8810	Gear - Starter	15 782 1	3290-378	Tie - Cable	6 11 5
77-8820	Drive - Starter	15 937 1	3296-5	Nut - Lock	4 11 1
77-8830	Retainer - Lock	15 938 1	3296-6	Nut - Lock	1 24 4
77-8840	Starter Assy. - Rewind	13 608 1	3296-6	Nut - Lock	4 35 2
77-8870	Screw - Sem	13 482 2	3296-42	Nut - Lock	7 4 2
77-8900	Gasket Set	17 358 1	3296-58	Nut - Lock	7 12 2
77-8910	Drive - Starter	15 510 1	32104-76	Screw - Self Tapping	6 17 5
77-8920	Overhaul Kit - Carburetor	17 121 1	32121-120	Pin - Coil	5 54 1
77-8930	Gasket Set - Carburetor	17 977 1	32144-15	Screw - Hex Flange Hd.	1 18 1
77-8950	Engine - OHV	3 1 1	32144-70	Screw - Cap Hex. Hd.	1 3 6
77-9020	Short Block	9 * 1	32144-70	Screw - Hex Hd. Cap	3 6 7
77-9030	Spacer - Fuel Tank	15 670 1	32144-70	Screw - Hex. Washer Hd.	4 1 3
77-9040	Arrester - Spark	15 994 1	32144-102	Screw - Hex Hd. Cap	3 14 3
77-9050	Screw - Arrester Mtg.	15 346A 1	32144-111	Screw - Index Hex Washer	18 1 5
77-9060	Seal - Oil	9 *3 1			
77-9060	Seal - Oil	17* 3 1			
77-9070	Screw - Engine Base	9 22 7			
77-9200	Screw - Hex Hd.	9 10A 2			
77-9240	Plug - Pipe	9 15 1			
77-9250	Gasket - Breather	9 *9 1			
77-9250	Gasket - Valve Cover	17* 9 1			
77-9260	Breather Valve	9 8 1			

OPTIONAL EQUIPMENT

Leaf Shredder Kit Model No. 59180
Dethatcher Kit Model No. 59131
Spark Arrestor Kit Part No. 77-9040

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

MAINTENANCE RECORD

[illegible]