



DH 220 Lawn Tractor

Model No. 74592 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 4	Deck Housing Assembly	 27
Front Axle Assembly	 6	Cutting Pan and Bag on Demand Assembly	 28
Steering Assembly	 7	Belt Cover and Drive System Assembly	 29
Hood Assembly	 8	Mower Lift Assembly	 31
Engine Assembly	 9	Harness Assembly	 32
Operation - Brake and Bypass Assembly	 10	Electrical Starter Assembly	 33
Operation and Travel Pedal Assembly	 11	Electrical Switch Assembly No. 2	 34
Transmission Assembly	 12	Electrical Switch Assembly No. 3	 35
Control Shaft Assembly Transmission Assembly No. 104-2889	 14	Cylinder Assembly Briggs and Stratton 441677-0136-E1	 36
Motor Shaft Assembly Transmission Assembly No. 104-2889	 15	Cylinder Head Assembly Briggs and Stratton 441677-0136-E1	 37
Transaxle Case Assembly Transmission Assembly No. 104-2889	 16	Crankshaft Assembly Briggs and Stratton 441677-0136-E1	 38
Differential Gear Assembly Transmission Assembly No. 104-2889	 17	Crankcase Assembly Briggs and Stratton 441677-0136-E1	 39
Final Pinion Assembly Transmission Assembly No. 104-2889	 18	Carburetor Assembly Briggs and Stratton 441677-0136-E1	 40
Axle Shaft Assembly Transmission Assembly No. 104-2889	 19	Governor Assembly Briggs and Stratton 441677-0136-E1	 41
Brake Assembly Transmission Assembly No. 104-2889	 20	Blower Housing Assembly Briggs and Stratton 441677-0136-E1	 42
Fan Pulley Assembly Transmission Assembly No. 104-2889	 21	Flywheel Assembly Briggs and Stratton 441677-0136-E1	 43
Range Shift Assembly Transmission Assembly No. 104-2889	 22	Fuel Line and Pump Assembly Briggs and Stratton 441677-0136-E1	 44
Center Case Assembly Transmission Assembly No. 104-2889	 23	Starter Motor Assembly Briggs and Stratton 441677-0136-E1	 45
Pump Shaft Assembly Transmission Assembly No. 104-2889	 24	Gasket Set Briggs and Stratton 441677-0136-E1	 46
Grass Collector Assembly No. 106-5760	 25	Carburetor Overhaul Kit Briggs and Stratton 441677-0136-E1	 47
Tunnel Assembly	 26	Attachments and Accessories List	 48

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

Footnotes


- | | | | |
|---|---|---|--|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain from your local Briggs & Stratton dealer | ❹ | Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ | Included in Engine Gasket Set (Ref. No. 358) | ❻ | Included in Carburetor Gasket Set (Ref. No. 977) |
| ❽ | Included in Valve Gasket Set (Ref. No. 1095) | | |

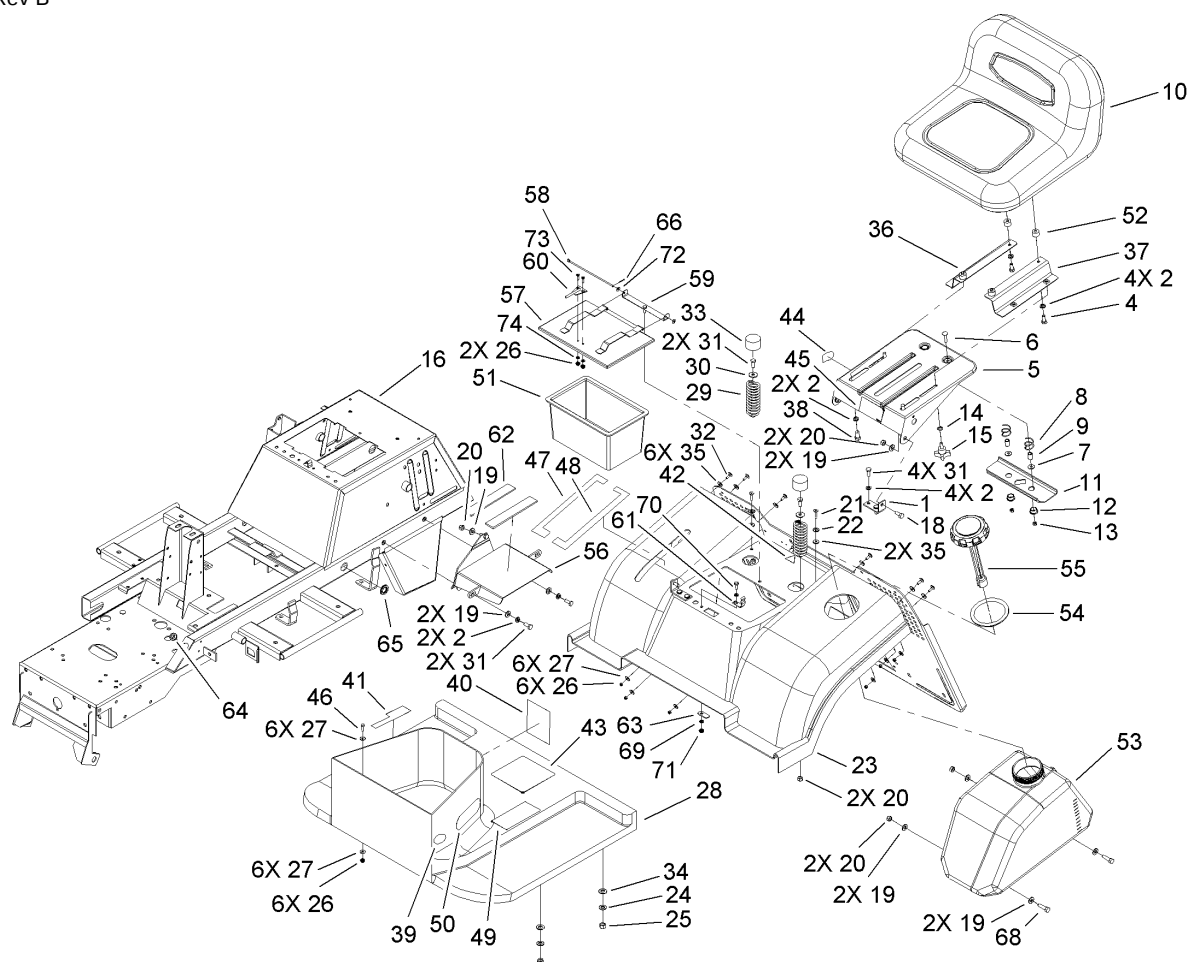

Frame Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	12	Washer-Lock, Spring
4	322-3	4	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2213	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	9	Washer-Plain
20	33024-00	7	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	110-8668	1	Fender-Rear
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock
26	87-5140	14	Nut-Lock

Ref	Part No.	Qty.	Description
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	2	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8976	2	Decal-Tower

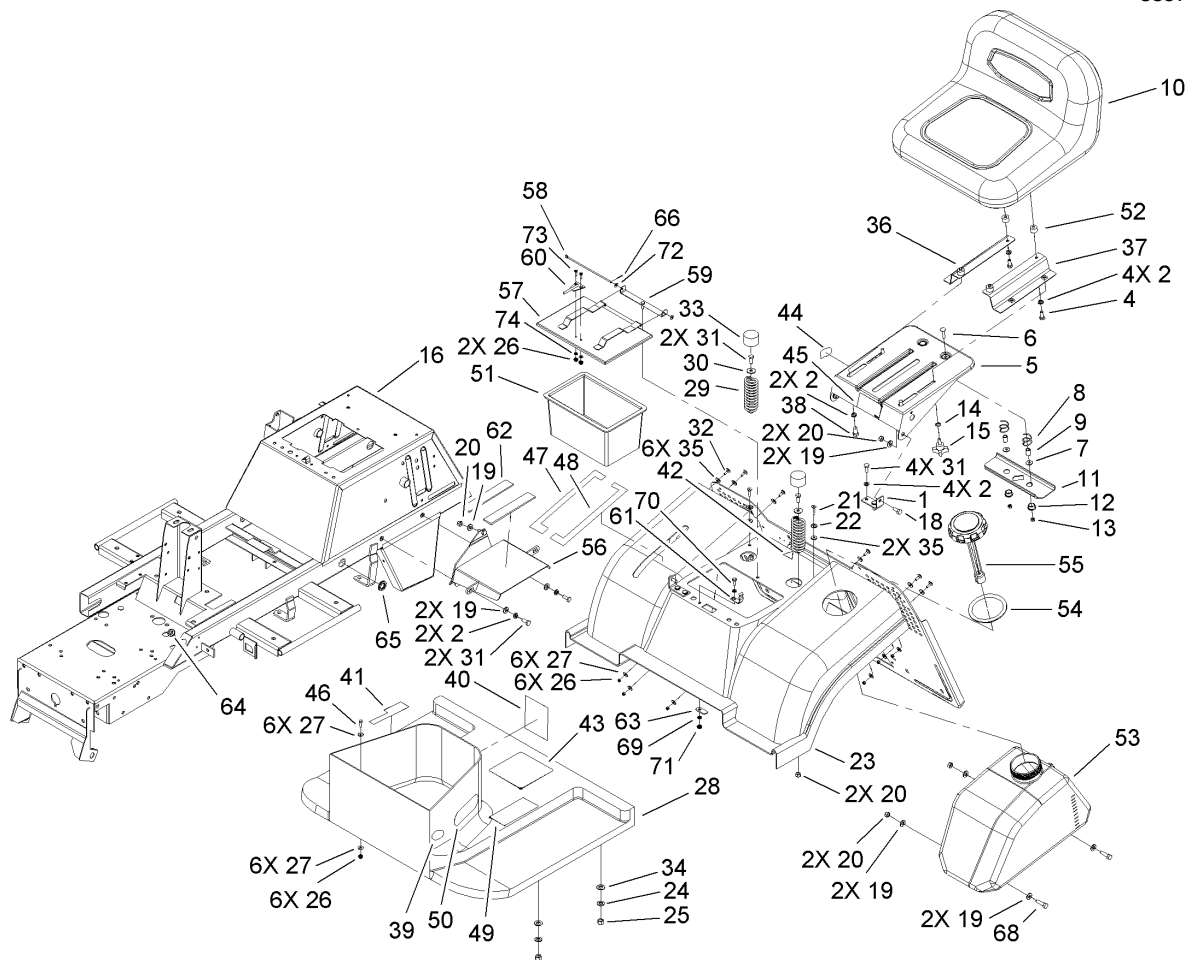 

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
51	106-5756	1	Box-Battery
52	107-8924	2	Shim-Seat
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Filler Neck
55	110-8697	1	Cap-Fuel, Assembly
56	110-8684	1	Bracket-Fuel, Tank
57	110-8669	1	Cover-Storage
58	110-8662	1	Hinge-Storage, Cover
59	110-8671	1	Bracket-Storage, Hinge
60	110-8670	1	Latch-Storage, Cover
61	110-8667	1	Catch-Storage, Latch
62	110-8690	2	Strip-Rubber, Fuel Tank
63	110-8666	1	Support-Latch
64	107-8950	1	Grommet
65	110-8683	1	Grommet
66	3272-1	1	Pin-Cotter
68	33114-030	2	Screw-HH
69	33093-00	2	Washer-Flat
70	33113-016	1	Screw-HH
71	33013-00	1	Nut-Hex
72	104-3175	2	Washer
73	106-5759	2	Screw
74	52-6430	2	Washer

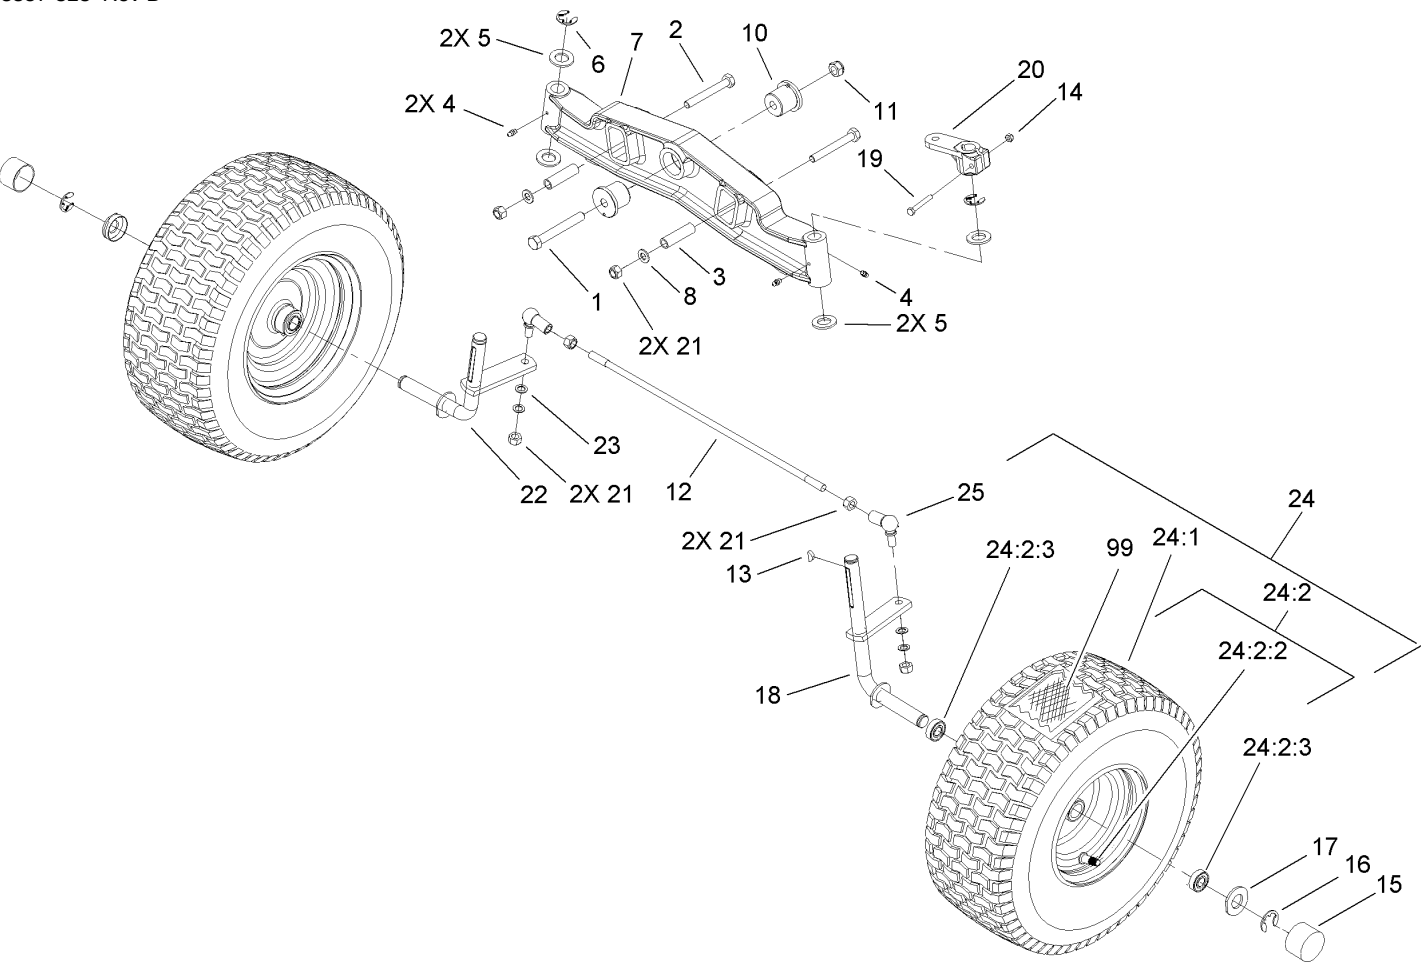 

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8773	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	110-9084	1	Spindle-RH
23	106-5757	4	Washer
24	110-9085	2	Wheel/Tire ASM
24:1	99-3696	1	Tire

Ref	Part No.	Qty.	Description
24:2	110-9086	1	Wheel ASM
24:2:2	106-8596	1	Valve-Tire
24:2:3	110513	2	Bearing-Wheel
25	104-2876	2	Joint-Ball, Angle
99	112819	1	Tube-Inner

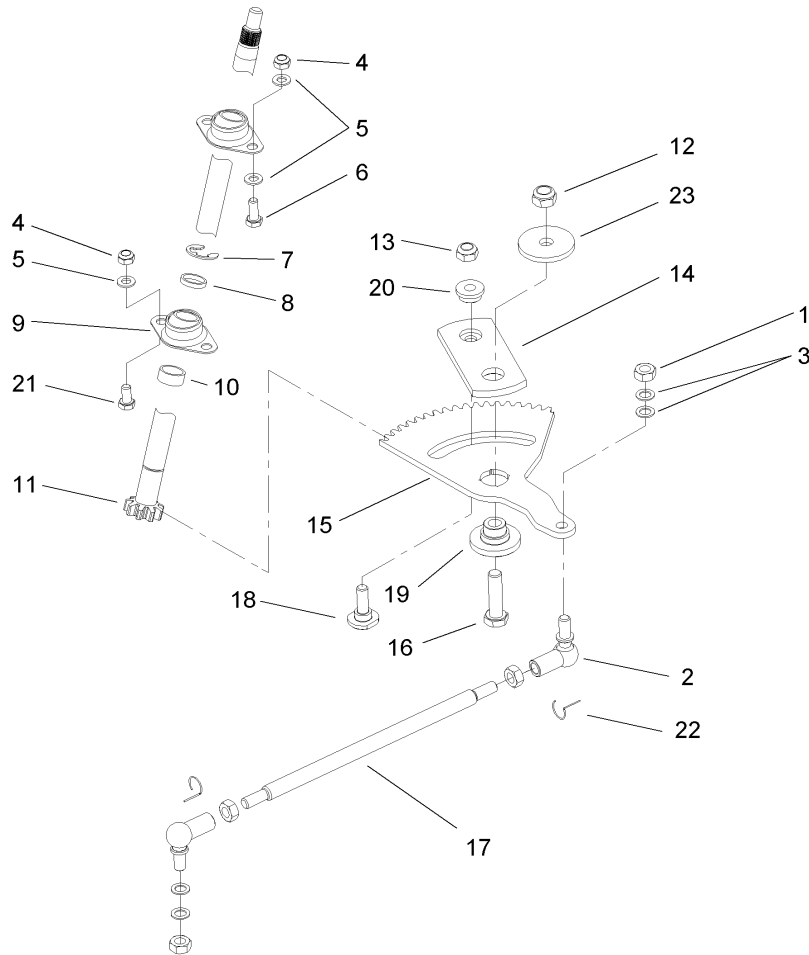 

Steering Assembly


Ref	Part No.	Qty.	Description				
1	33025-00	4	Nut-Lock				
2	104-2876	2	Joint-Ball, Angle				
3	106-5757	4	Washer				
4	33024-00	4	Nut-Lock				
5	33094-00	6	Washer-Plain				
6	33114-020	2	Screw-HH				
7	104-2891	1	Clip-Spring				
8	104-2877	1	Spacer-Upper				
9	104-2878	2	Bearing-Spherical				
10	104-2879	1	Spacer-Lower				
11	106-5773	1	Shaft-Steering				
12	33026-00	1	Nut-Lock				
13	33025-00	1	Nut-Lock				
14	105-1238	1	Plate-Steering				
15	104-2883	1	Gear-Sector				
16	104-2910	1	Screw-Hex				
17	104-2886	1	Link-Drag				
18	105-1239	1	Bolt-Shoulder				
19	105-1240	1	Pivot-Steering				
20	105-1241	1	Bushing				
21	33114-016	2	Screw-HH				
22	104-2865	2	Stirrups-Locking				
23	108-8892	1	Washer				

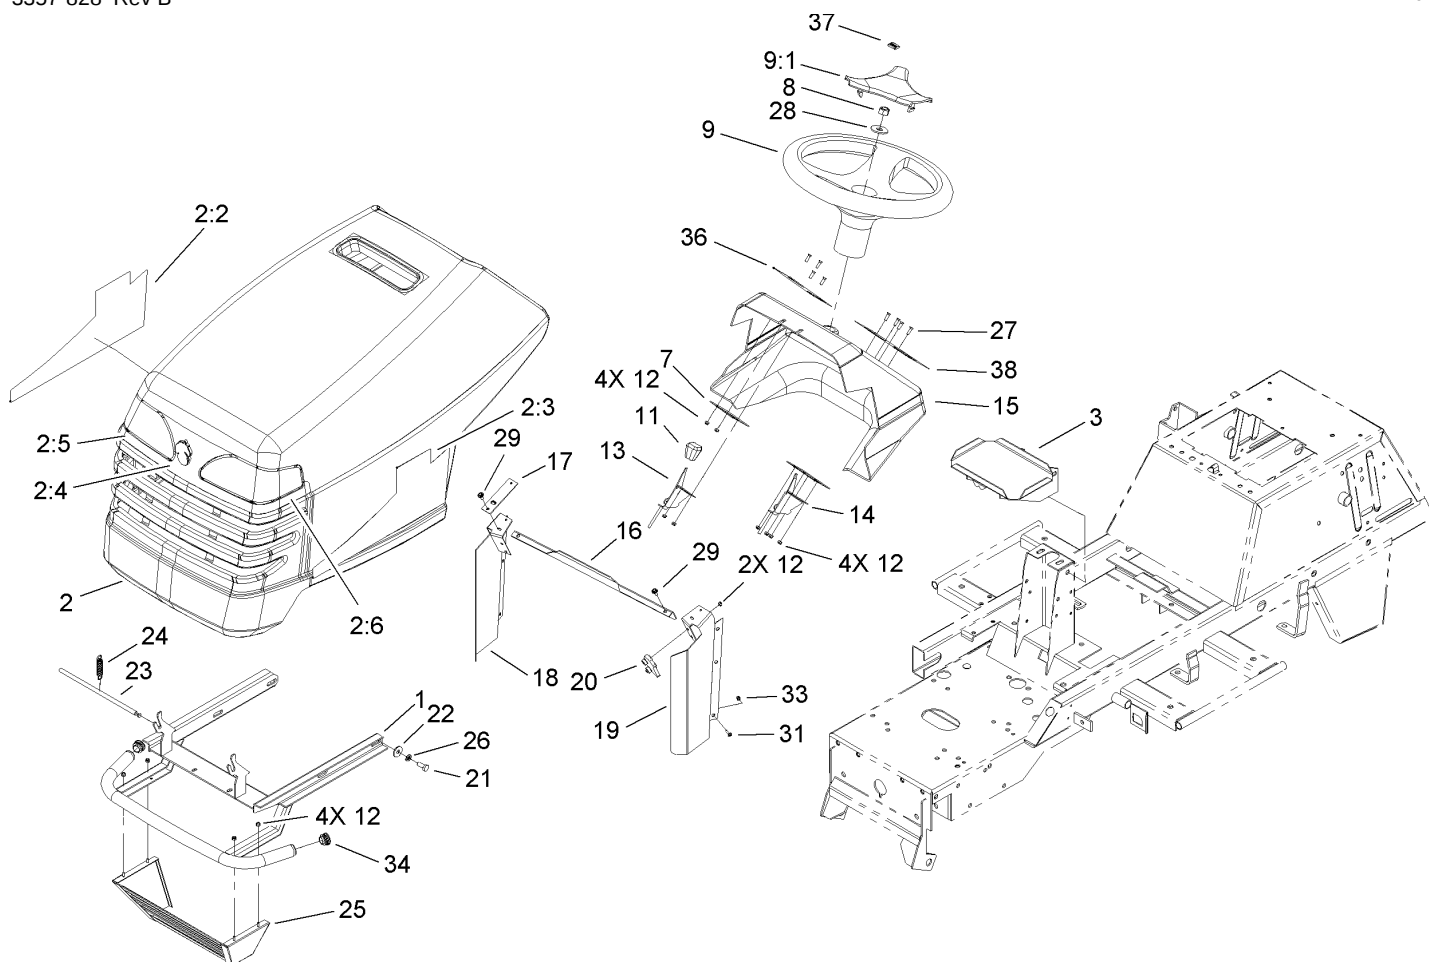 

Hood Assembly

Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8990	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	2	Brace
8	33026-00	1	Nut-Lock
9	98-1472	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	2	Knob
12	87-5140	14	Nut-Lock
13	92-6784	1	Control-Throttle, Twin
14	92-6783	1	Control-Choke, Twin
15	104-2968	1	Panel-Dash
16	104-2970	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain


Ref	Part No.	Qty.	Description
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	8	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
36	104-3234	1	Decal
37	98-1459	1	Decal
38	104-3233	1	Decal-Choke/PTO

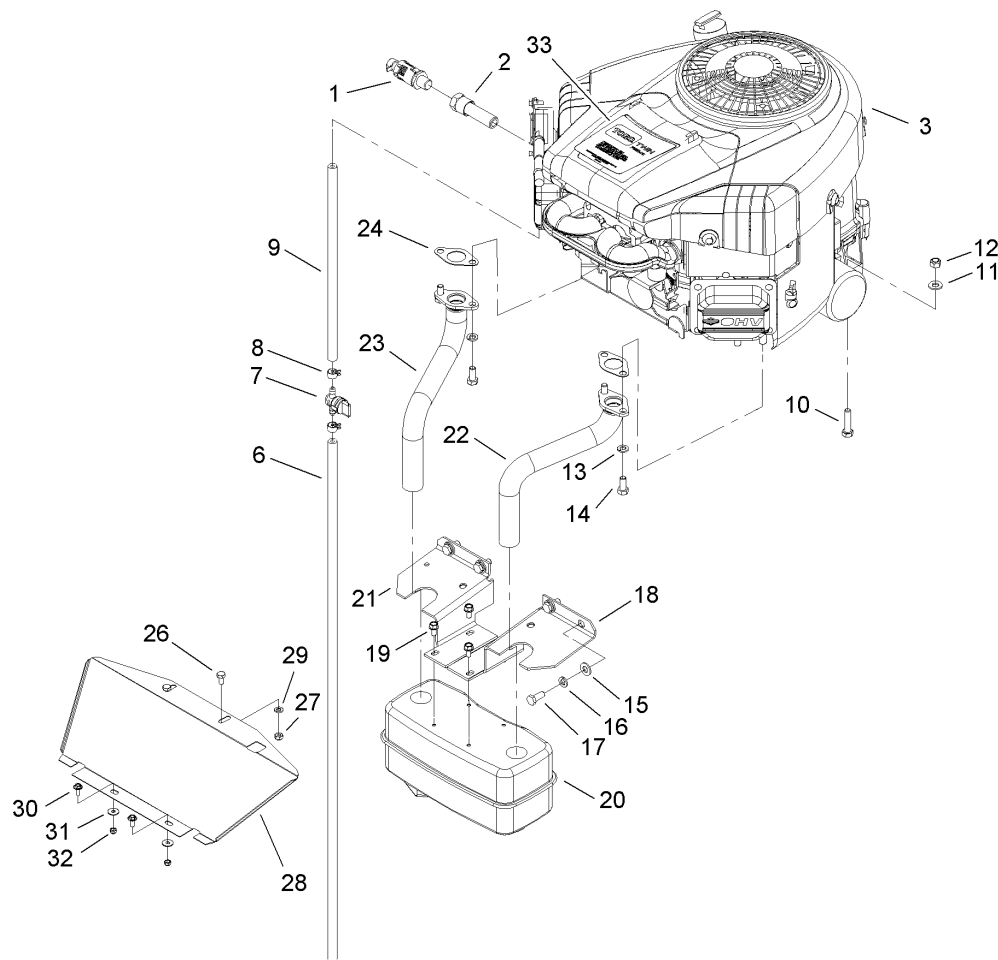 

Engine Assembly

Ref	Part No.	Qty.	Description
1	104-3208	1	Valve-Oil Drain
2	106-5764	1	Coupler-Oil Drain
2 3 3		1	Engine-Briggs And Stratton, 441677-0136-E1
6	110-8692	1	Line-Fuel
7	104-3224	1	Valve-Tank, Fuel
8	104-3212	4	Clamp-Line, Fuel
9	110-8696	1	Line-Fuel
10	33114-035	4	Screw-HH
11	33094-00	4	Washer-Plain
12	33024-00	4	Nut-Lock
13	104-2927	4	Washer-Spring
14	322-3	4	Screw-HH
15	33094-00	4	Washer-Plain
16	104-2927	4	Washer-Spring
17	33114-020	4	Screw-HH
18	104-3214	1	Guard-Muffler, LH
19	106-5763	4	Screw
20	104-3225	1	Muffler
21	104-3215	1	Guard-Muffler, RH
22	104-3216	1	Tube-Exhaust, LH
23	104-3217	1	Tube-Exhaust, RH
24	104-3226	2	Gasket-Exhaust
26	33113-012	2	Screw-HH


Ref	Part No.	Qty.	Description
27	33023-00	2	Nut-Lock
28	104-3219	1	Shield-Heat
29	33093-00	2	Washer-Flat
30	104-2980	2	Screw
31	104-2943	2	Washer-Flat
32	87-5140	2	Nut-Lock
33	110-6516	1	Decal

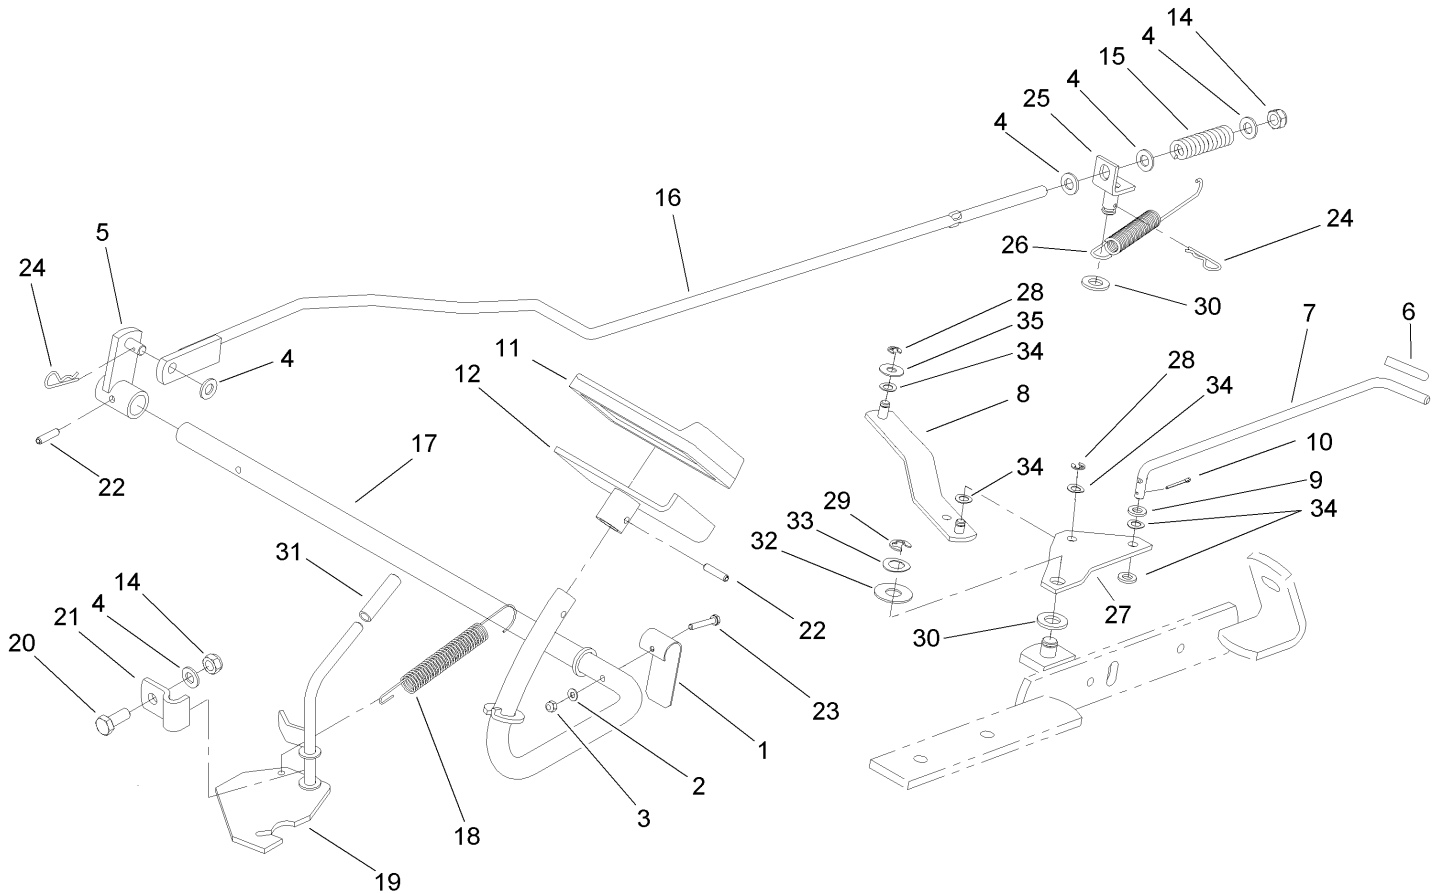 

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	104-3324	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-2998	1	Pad-Pedal
12	104-2999	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3246	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

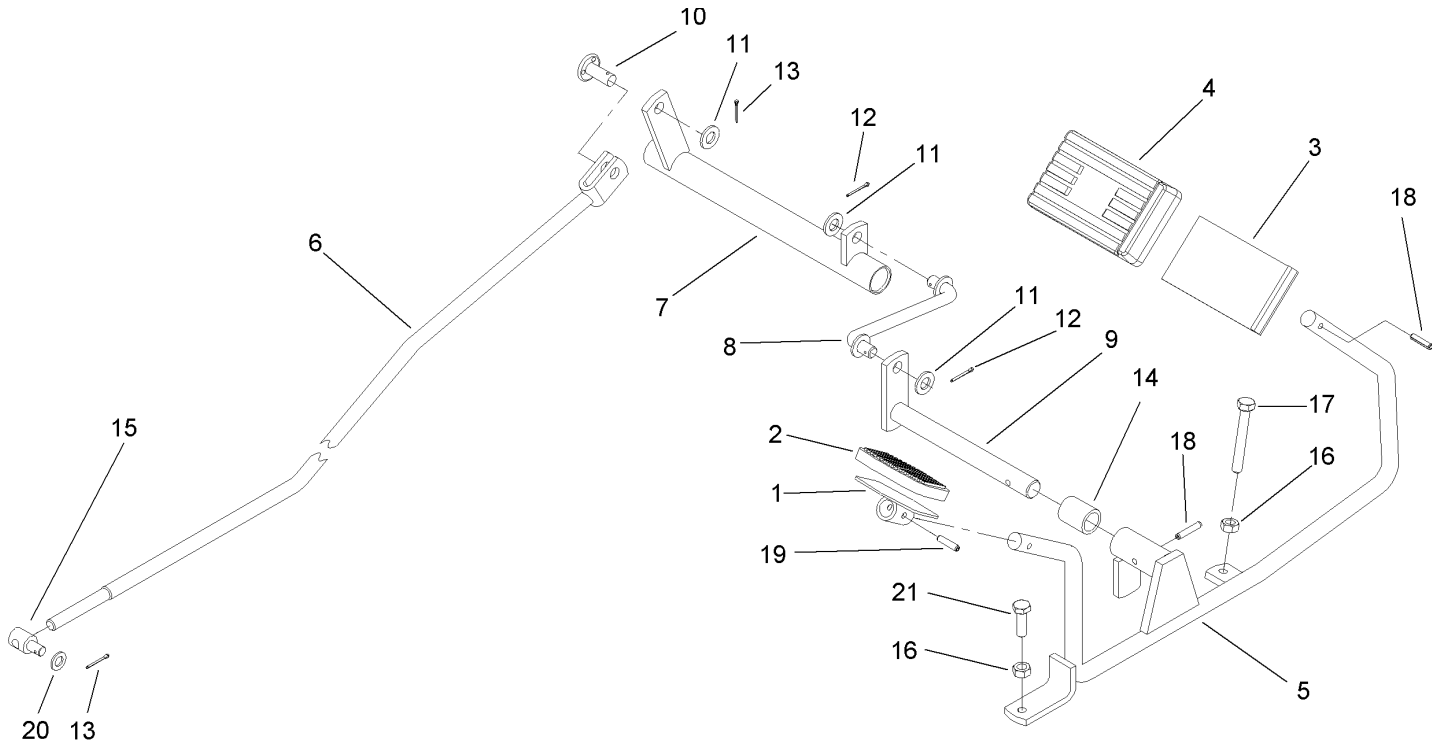 

Operation and Travel Pedal Assembly


Ref	Part No.	Qty.	Description				
1	104-3017	1	Pedal-Rear, Travel				
2	104-3018	1	Pad-Pedal				
3	104-3019	1	Pedal-Travel, Front				
4	104-3020	1	Pad-Pedal, Front				
5	104-3021	1	Pad-Travel				
6	104-3022	1	Rod-Tie				
7	104-3023	1	Shaft-Diagonal				
8	104-3024	1	Link-Formed				
9	104-3025	1	Shaft-Diagonal				
10	104-3026	1	Pin				
11	33095-00	3	Washer-Flat				
12	104-3016	2	Pin-Cotter				
13	104-3027	2	Pin-Cotter				
14	104-3028	1	Spacer				
15	104-3029	1	Pin				
16	33014-00	2	Nut-Hex				
17	33114-060	1	Screw-HH				
18	104-3008	2	Pin-Spring				
19	104-3030	1	Pin-Spring				
20	104-3031	1	Washer				
21	33114-025	1	Screw-HH				

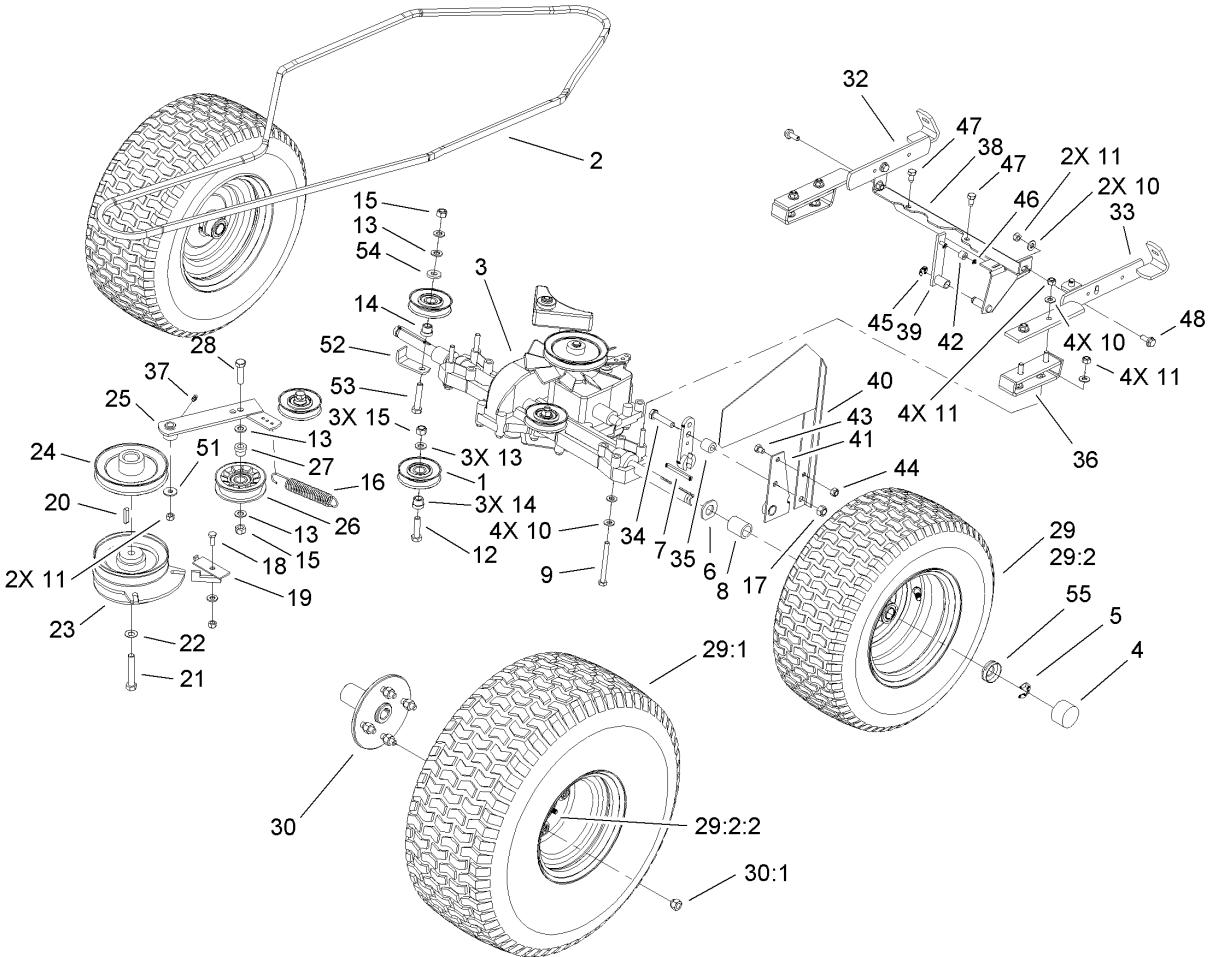 

Transmission Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	104-2889	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	10	Washer-Plain
11	33024-00	12	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	6	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
40	104-3325	1	Arm-Control, Cruise
41	104-3326	1	Tenon
42	104-3329	1	Roller
43	33114-010	1	Screw-HH
44	33024-00	1	Nut-Lock

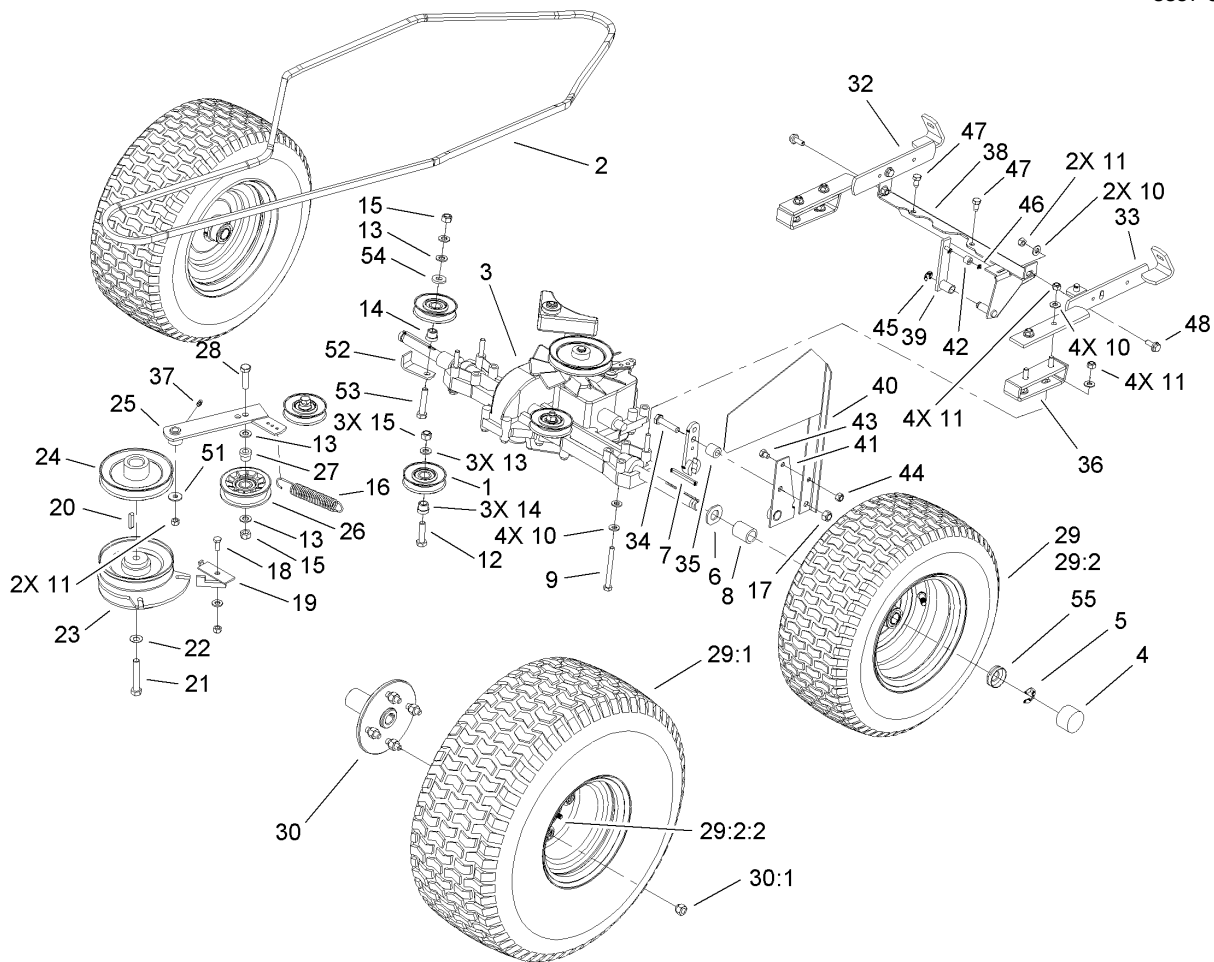 


Transmission Assembly (continued)

Ref	Part No.	Qty.	Description				
45	104-3341	1	Stirrup				
46	104-3014	1	Stirrup				
47	104-3344	2	Screw-Thread Forming				
48	104-3065	2	Screw-Hex				
51	104-2946	2	Washer-Plain				
52	108-8732	1	Retainer-Belt				
53	33115-050	1	Screw-HH				
54	108-8709	1	Washer-Flat				
55	107-8998	2	Retainer-Cap, Hub				
99	232-37	1	Tube				

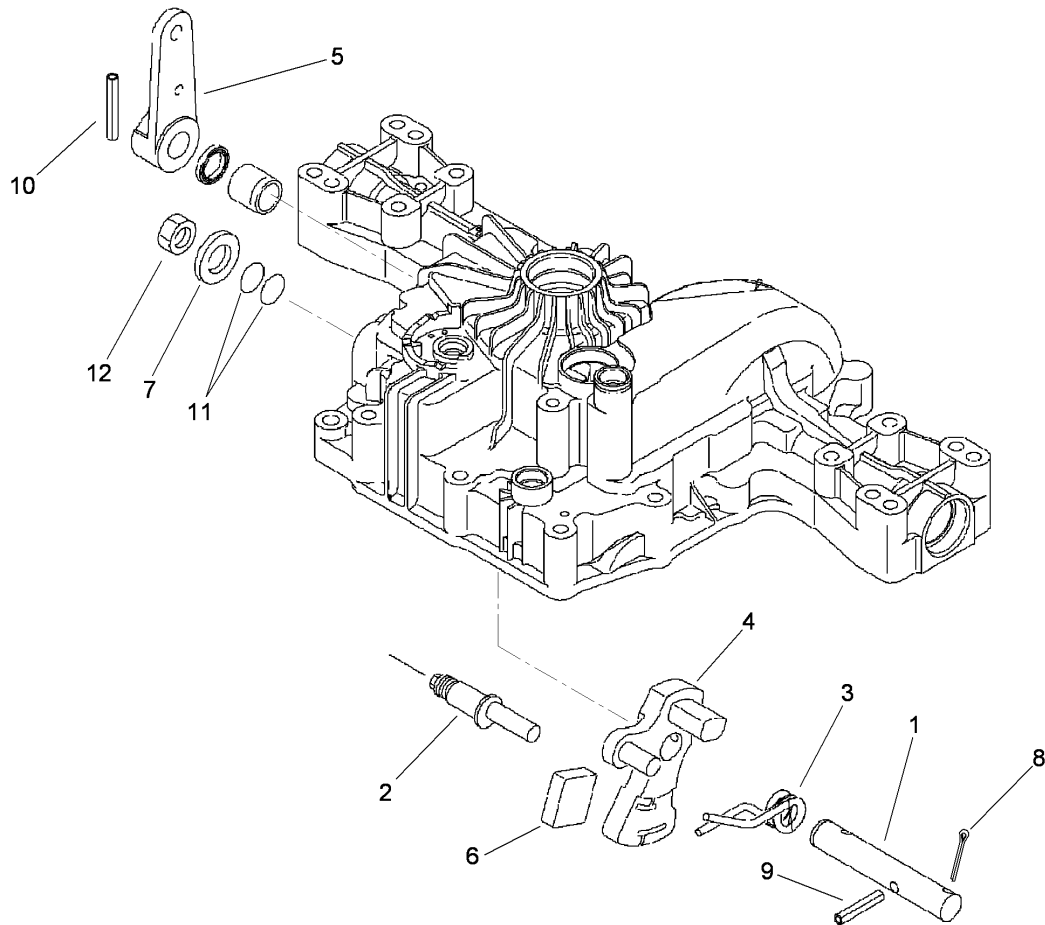 


Control Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description				
1	114-3181	1	Shaft-Control				
2	104-3292	1	Fulcrum-Eccentricity				
3	104-3293	1	Spring-Torsion				
4	114-3180	1	Arm-Control				
5	104-3342	1	Arm-Transaxle				
6	104-3296	1	Plate-Jerky				
7	93-0417	1	Washer				
8	114-3182	1	Pin-Cotter				
9	104-3297	1	Pin				
10	93-0411	1	Pin-Roll				
11	104-3298	2	Packing				
12	93-0420	1	Nut				

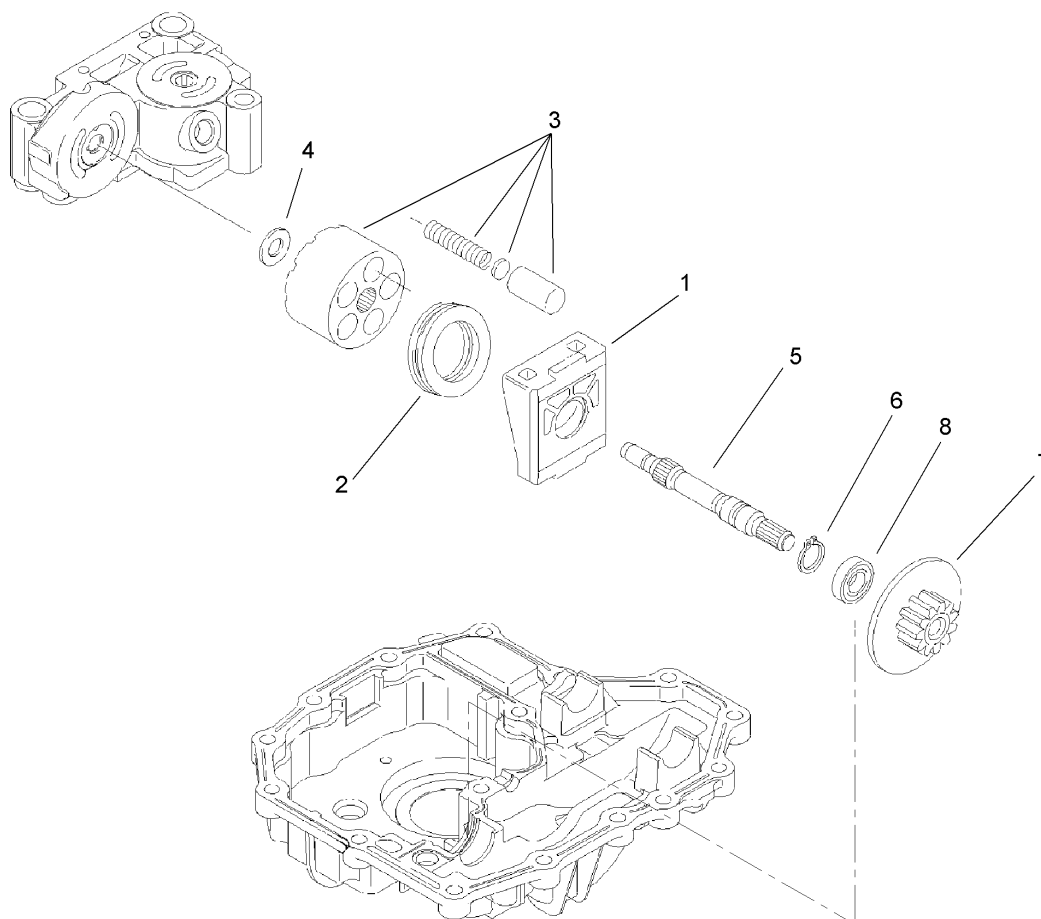 


Motor Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

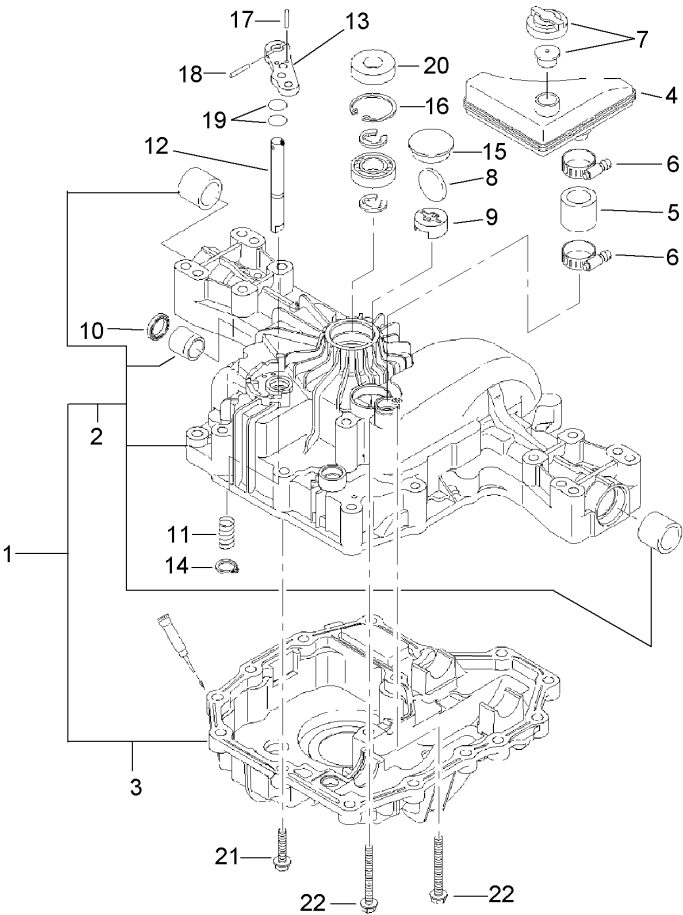 

Transaxle Case Assembly
Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description				
1	104-3251	1	Transaxle Case Set				
2	104-3252	1	Housing-Upper				
3	104-3253	1	Housing-Lower				
4	104-2914	1	Tank-Reservoir, With Cap				
5	104-3254	1	Tube				
6	104-3255	2	Clamp-Miniature				
7	104-3256	1	Valve-Vent, 15				
8	104-3257	1	Magnet				
9	104-3258	1	Holder-Magnet				
10	104-3259	1	Seal-Oil				
11	93-0396	1	Spring				
12	104-3260	1	Shaft-Bypass				
13	104-3261	1	Lever-Bypass				
14	104-3262	1	Ring				
15	104-3263	1	Plug-Bore				
16	93-0360	1	Ring				
17	104-3264	1	Pin				
18	104-3265	1	Pin				
19	93-0419	2	Packing				
20	93-0361	1	Seal				
21	93-0363	14	Screw-TAP				
22	104-3266	2	Screw-TAP				

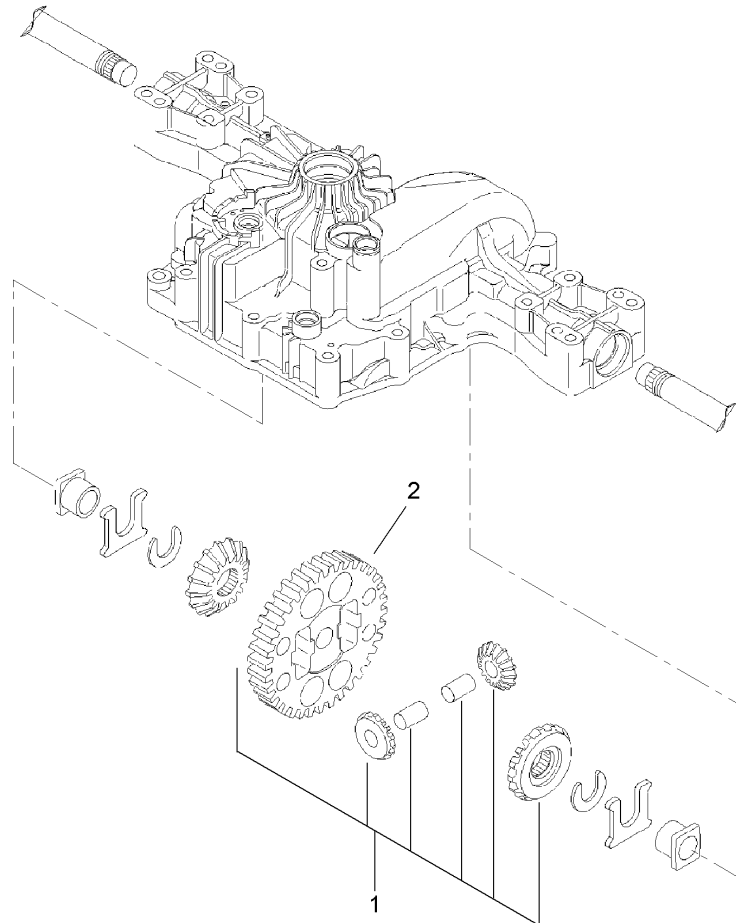 

Differential Gear Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

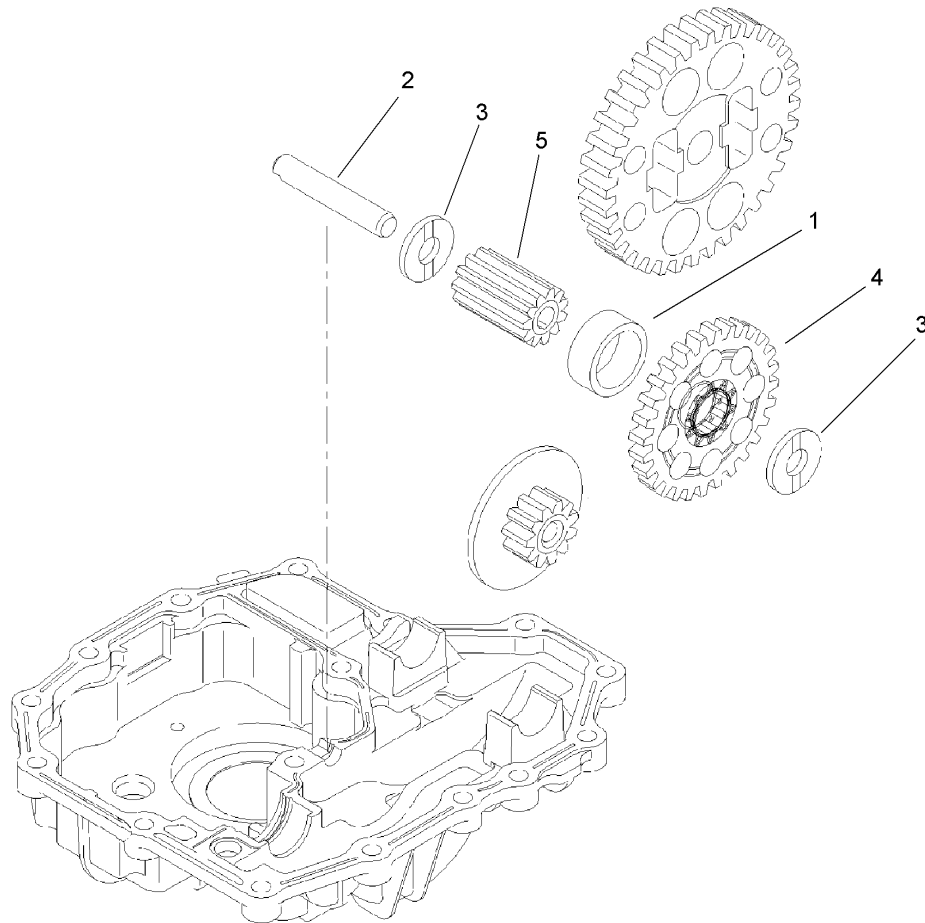 

Final Pinion Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

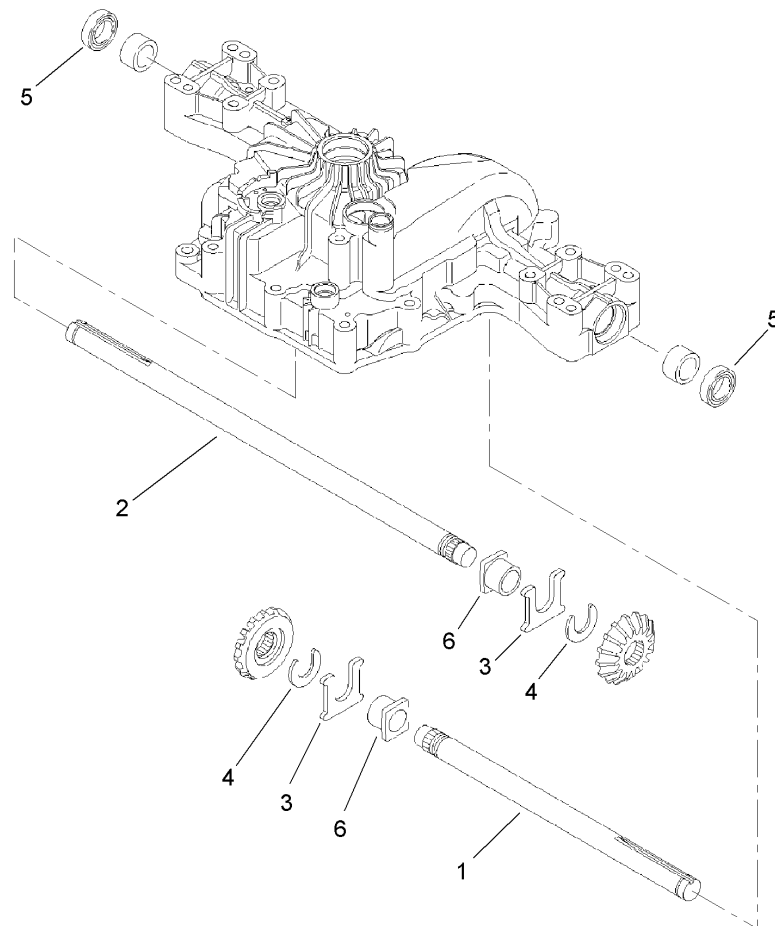 

Axle Shaft Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description				
1	104-3307	1	Shaft-Axle, LH				
2	104-3308	1	Shaft-Axle, RH				
3	104-3309	2	Washer-Thrust				
4	104-3310	2	Ring				
5	104-3311	2	Seal				
6	104-3312	2	Bushing				

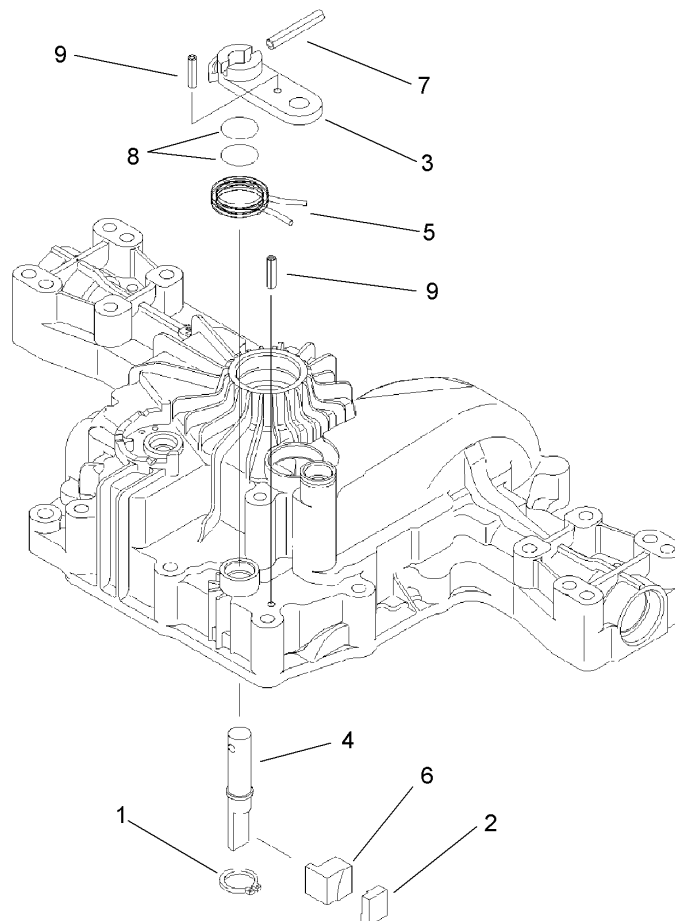 

Brake Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	92-0786	2	O-Ring
9	104-3319	2	Pin

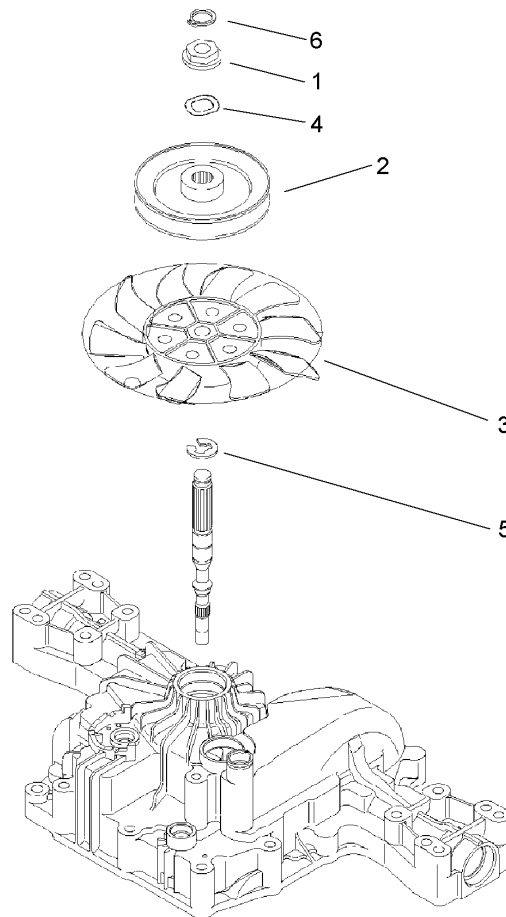 

Fan Pulley Assembly

Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description				
1	104-3320	1	Collar-Spline				
2	104-3197	1	Pulley-Transmission				
3	104-3199	1	Fan- Transmission				
4	104-3321	1	Washer-Lock				
5	93-0387	1	E-Ring				
6	104-3198	1	E-Ring				

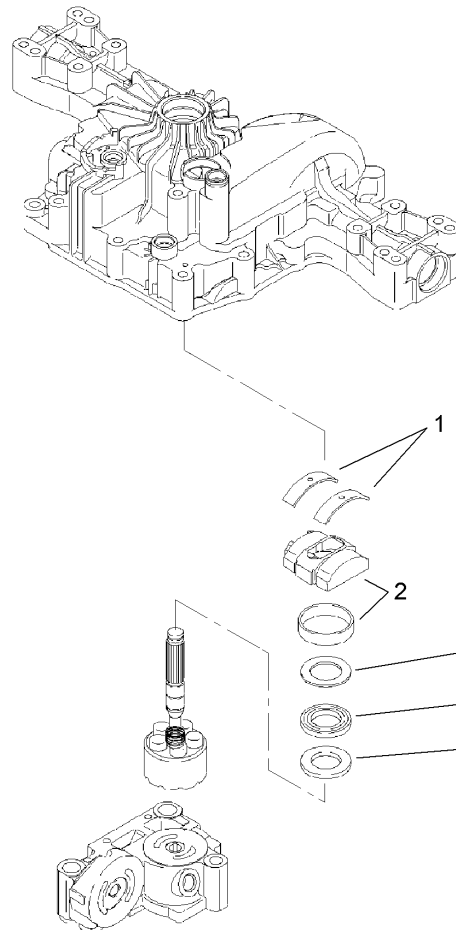 

Range Shift Assembly


Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

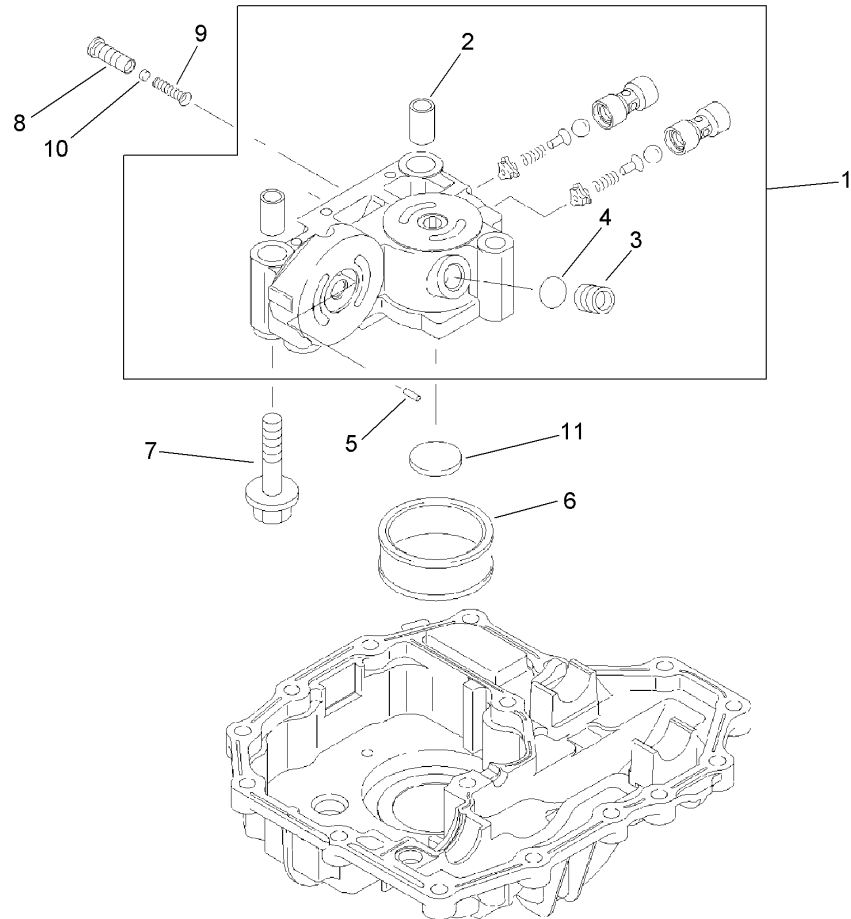 


Center Case Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description				
1	104-3267	1	Case-Center				
2	104-3268	2	Pin-Knock				
3	104-3269	1	Plug				
4	93-0419	1	Packing				
5	104-3270	1	Pin				
6	104-3271	1	Filter				
7	104-3272	3	Bolt				
8	104-3273	2	Valve				
9	104-3274	2	Spring				
10	104-3275	2	Filter				
11	104-3257	1	Magnet				

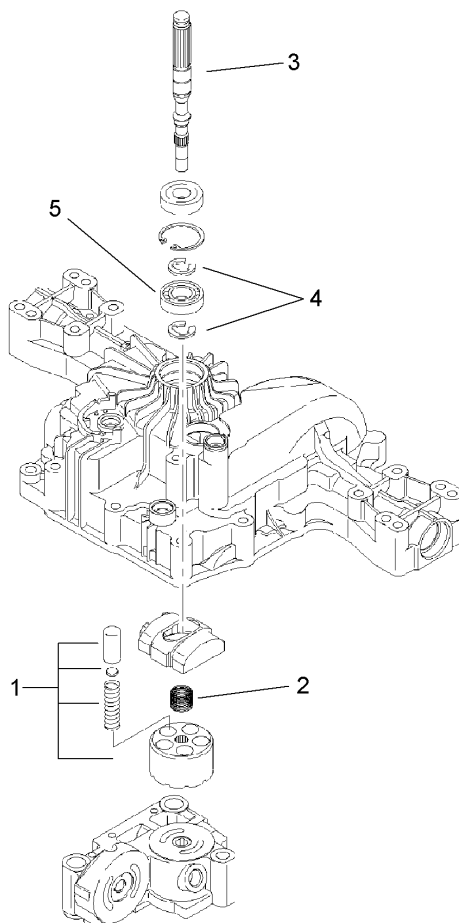 

Pump Shaft Assembly
Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

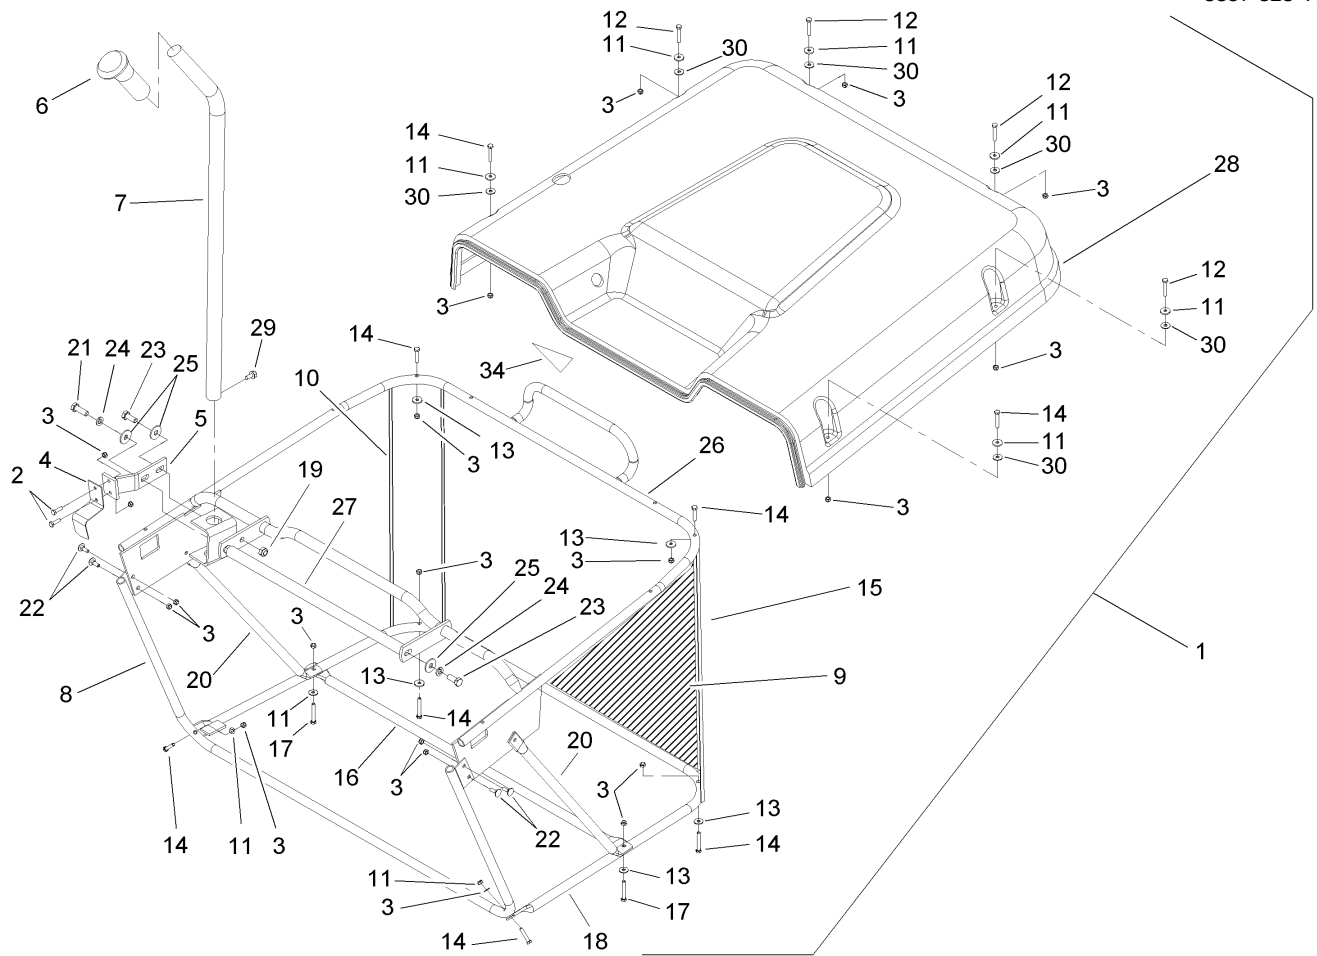 

Grass Collector Assembly No. 106-5760


Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring

Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

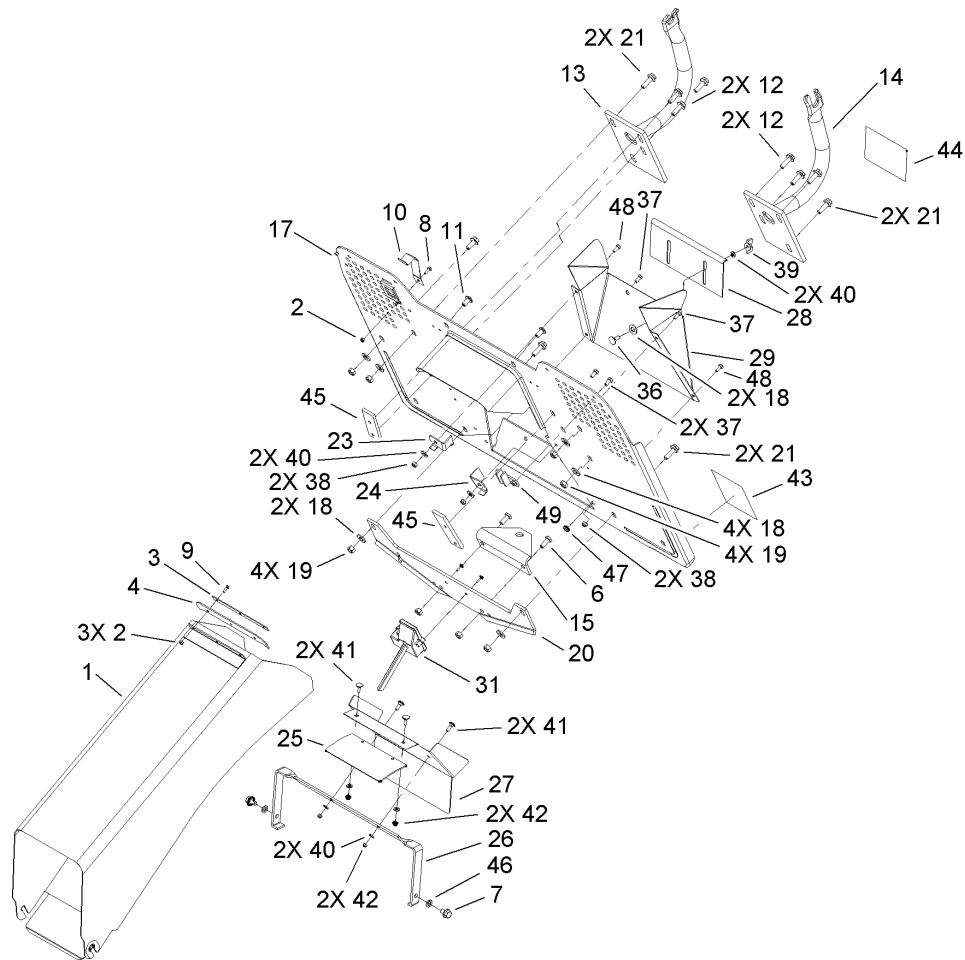 


Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel	28	104-3336	1	Shield-Adjustable
2	104-2985	4	Nut-Hex	29	104-3335	1	Hopper-Receiving
3	104-3055	1	Plate-Support	31	104-3074	1	Overload Switch ASM
4	104-3056	1	Seal-Rubber	36	104-2961	2	Screw
6	33114-020	2	Screw-HH	37	33113-012	4	Screw-HH
7	68-9410	2	Screw-Flange	38	33023-00	4	Nut-Lock
8	104-2983	1	Screw	39	32103-28	2	Nut-Wing
9	104-3058	3	Screw-SFH	40	33093-00	6	Washer-Flat
10	104-3059	1	Cover-Switch	41	104-2948	4	Bolt-Carriage
11	104-3060	2	Bolt-Carriage	42	87-5140	4	Nut-Lock
12	104-3061	4	Screw	43	104-3243	1	Decal-Bypass, Hydro
13	104-3062	1	Support-Collector, Right	44	104-2853	1	Decal-Position, Bagging
14	104-3063	1	Support-Collector, Left	45	104-3347	2	Plate-Reinforcing
15	104-3064	1	Hitch-Tow	46	104-3348	2	Washer-Spring
17	104-3066	1	Collector Plate ASM	47	106-5772	1	Bushing
18	33095-00	8	Washer-Flat	48	106-8575	2	Screw-HH
19	33024-00	8	Nut-Lock	49	110-8688	1	Bracket-Support, Fuel Tank
20	104-3067	1	Support-Hitch, Tow				
21	104-3068	6	Screw-Hex				
23	106-8597	1	Support-Tunnel, Left				
24	106-8598	1	Support-Tunnel, Right				
25	106-8599	1	Shield-Rubber				
26	104-3069	1	Bracket-Shield, Protective				
27	104-3070	1	Shield-Protective				

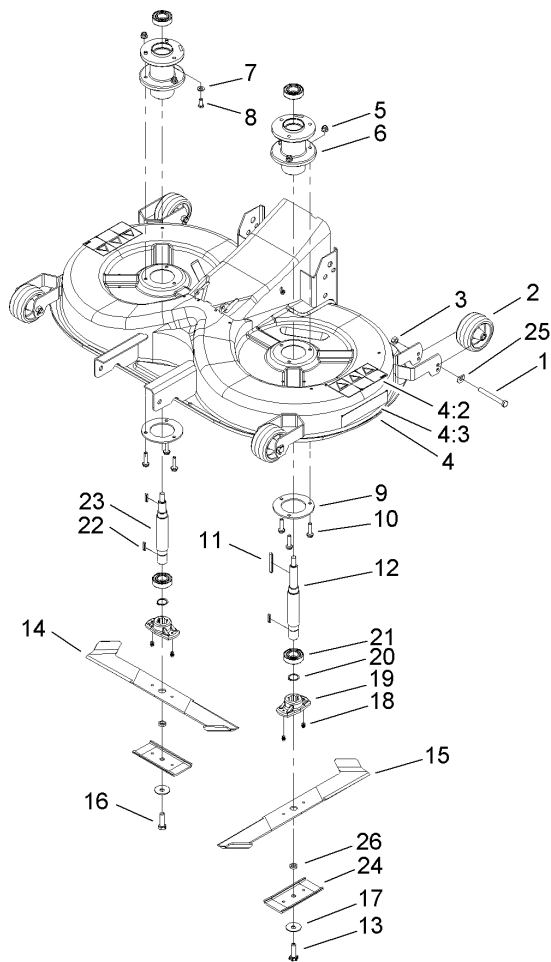


Deck Housing Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH	23	106-8566	1	Shaft-Blade, Right
2	104-3080	4	Wheel-Gauge	24	106-6533	2	Stiffener-Blade
3	33025-00	4	Nut-Lock	25	106-5767	4	Washer
4	110-9071	1	Deck ASM	26	106-6530	2	Spacer
4:2	93-7824	2	Decal-Danger				
4:3	106-8563	1	Decal-Recycler				
5	104-3082	6	Nut-Lock, HF				
6	107-8992	2	Housing-Spindle				
7	33094-00	6	Washer-Plain				
8	33114-020	6	Screw-HH				
9	104-3084	2	Support-Ring				
10	104-3085	6	Bolt-HHF				
11	104-3086	1	Key				
12	106-8565	1	Shaft-Blade, Left				
13	106-5797	1	Bolt-HH, Blade				
14	106-8557	1	Blade-RH				
15	106-8558	1	Blade-LH				
16	106-5798	1	Bolt-Blade, HH				
17	106-6532	2	Washer-Blade				
18	104-3093	4	Pin-Shear, Grooved				
19	106-4185	2	Adapter-Blade				
20	104-3095	2	Ring-Locking				
21	104-6325	4	Bearing-Ball				
22	104-3097	3	Key-Square				

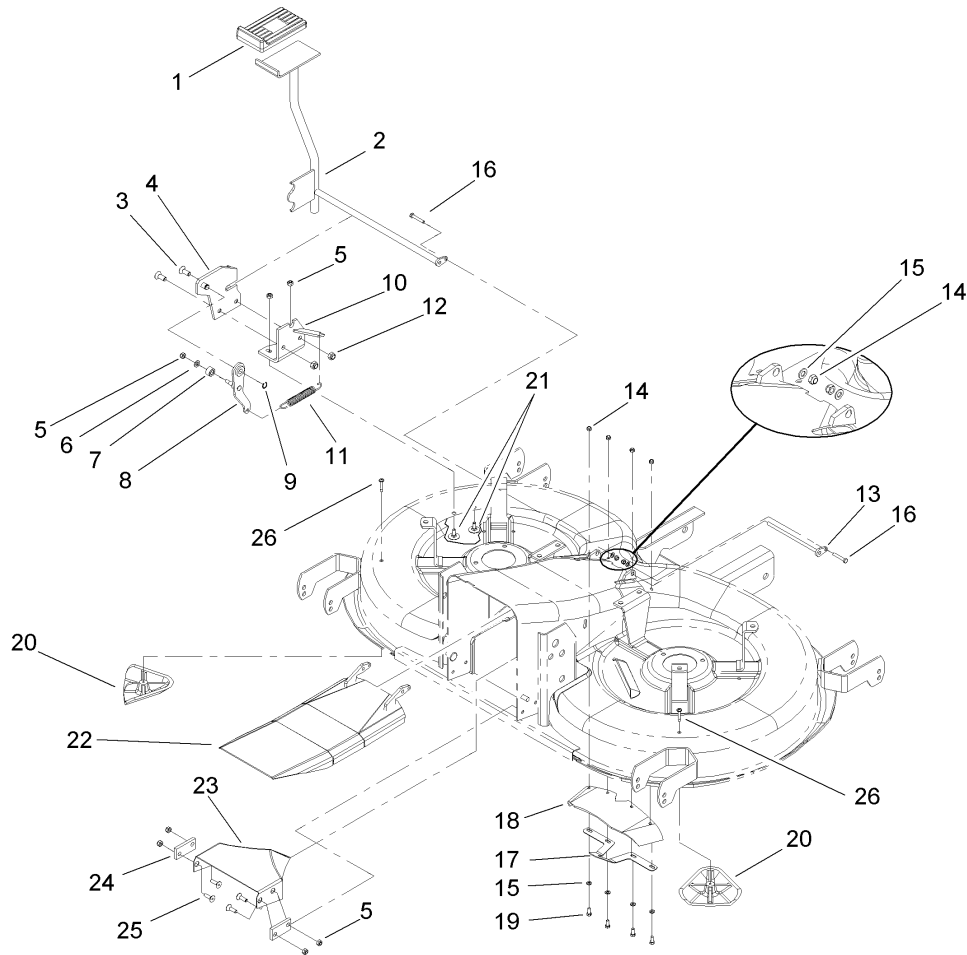

Cutting Pan and Bag on Demand Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot	25	106-8574	4	Screw
2	106-8582	1	Lever-Foot	26	104-1451	2	Screw-TAP, PPH
3	100-8159	2	Screw-HSFH				
4	106-8578	1	Plate-Stop				
5	33023-00	7	Nut-Lock				
6	33093-00	1	Washer-Flat				
7	106-8581	1	Roller				
8	106-8579	1	Lever-Spring				
9	106-8592	1	Ring-Locking				
10	106-8577	1	Bracket-Mounting				
11	106-8580	1	Spring				
12	48-9510	2	Nut				
13	106-8585	1	Rod-Door, Mulch				
14	87-5140	6	Nut-Lock				
15	52-6430	6	Washer				
16	87-5150	2	Bolt				
17	106-8567	2	Guide				
18	106-8586	1	Gasket-Door, Mulch				
19	106-8575	4	Screw-HH				
20	106-8587	1	Kicker				
21	33123-016	2	Screw-CARR				
22	107-8968	1	Door-Mulch				
23	106-8573	1	Baffle-Center				
24	106-8572	2	Plate-Baffel, Center				

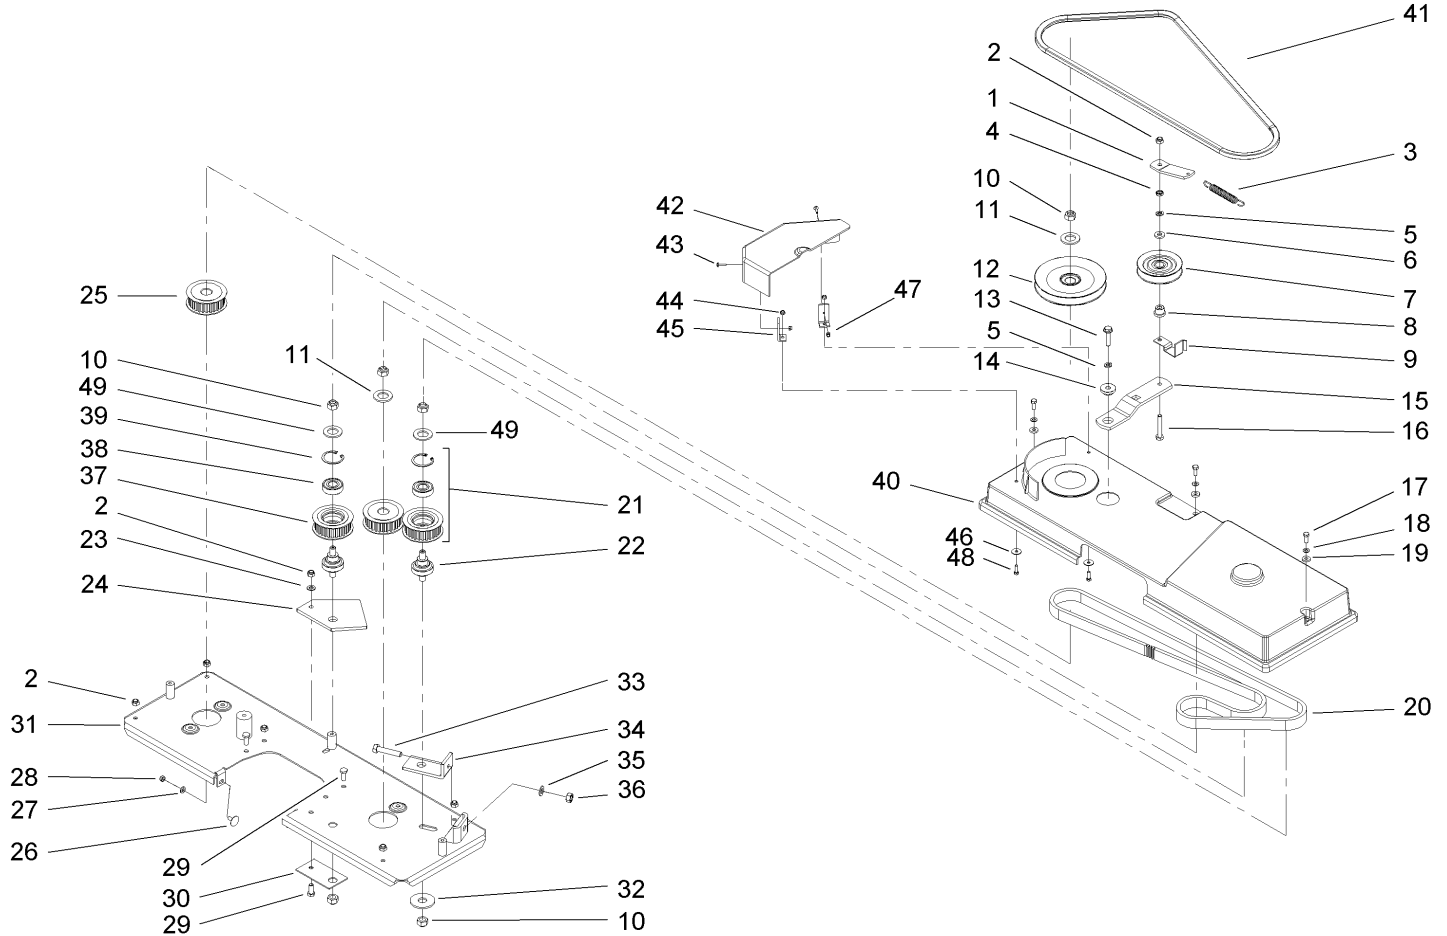

Belt Cover and Drive System Assembly

Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley


Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	1	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3126	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

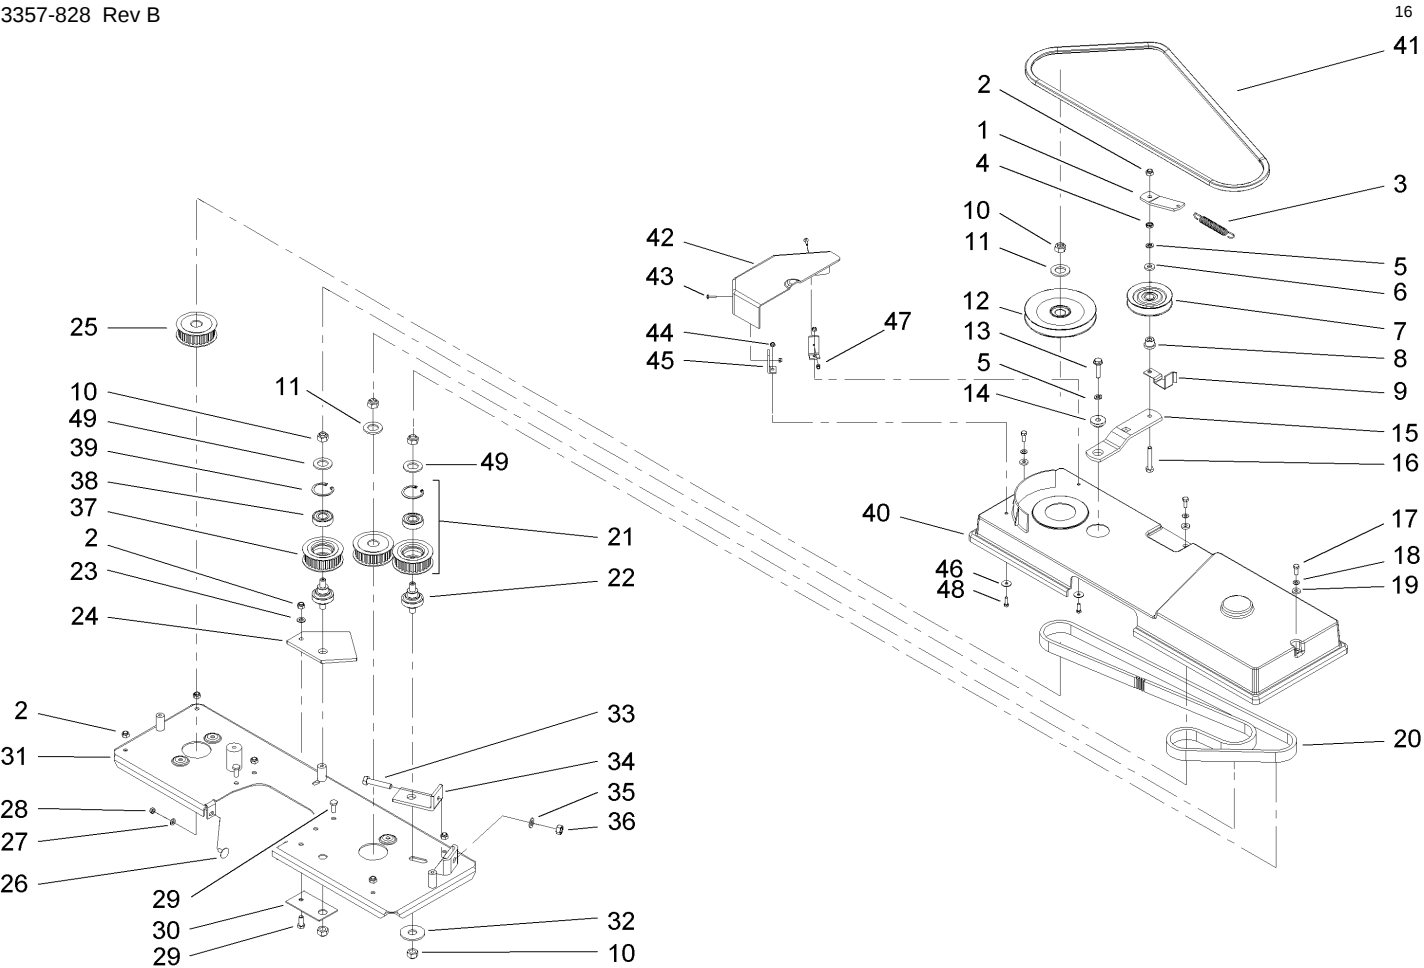 

Belt Cover and Drive System Assembly (continued)

Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat


--	--	--	--

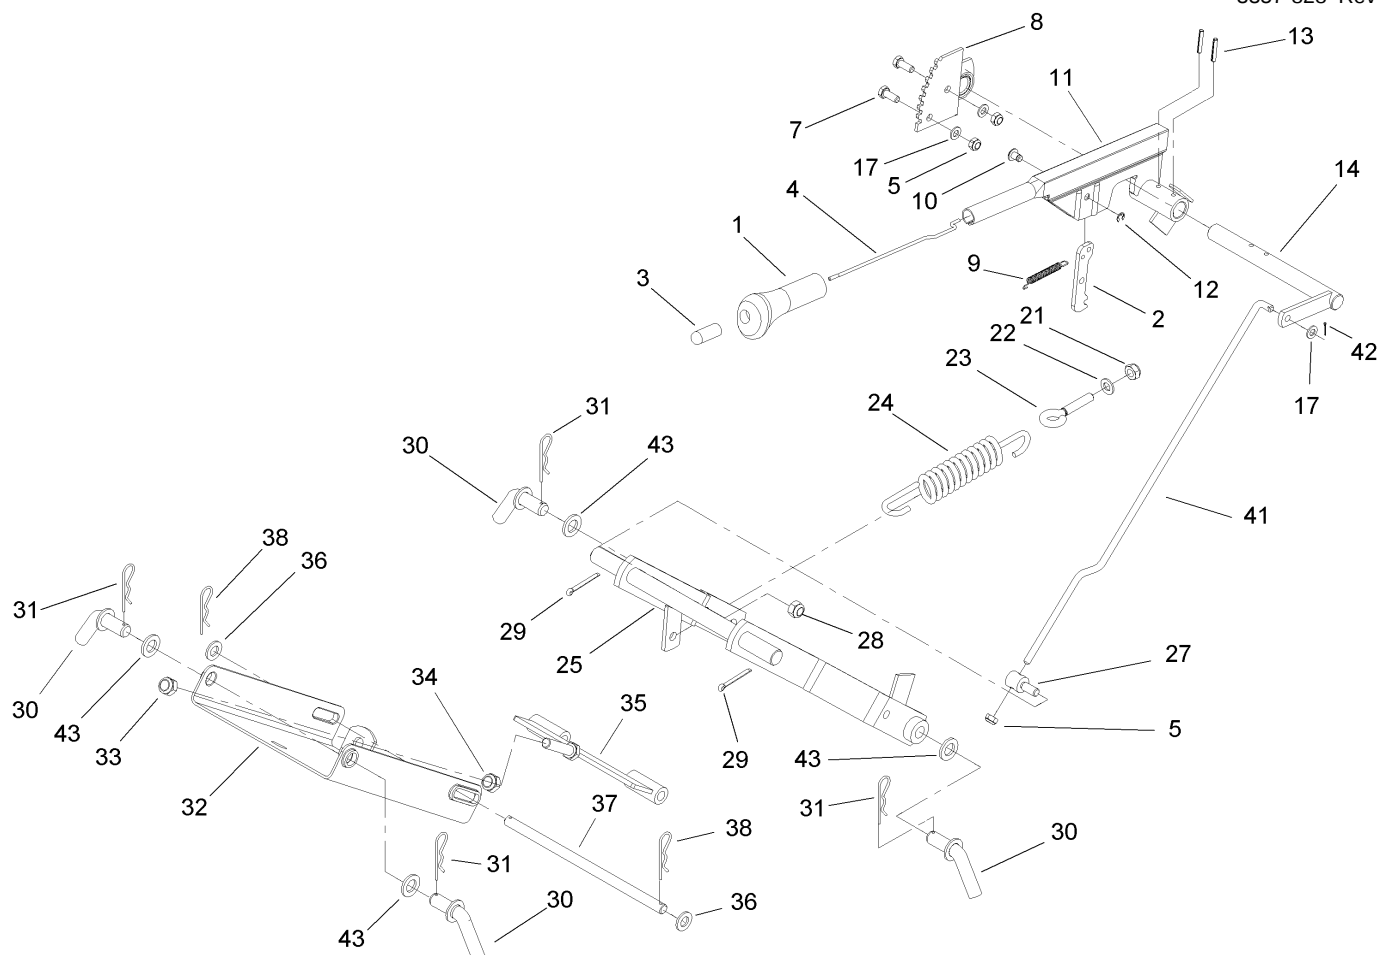 

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	104-3133	1	Segment-Gear
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	104-3138	1	Shaft-Height Adj.
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

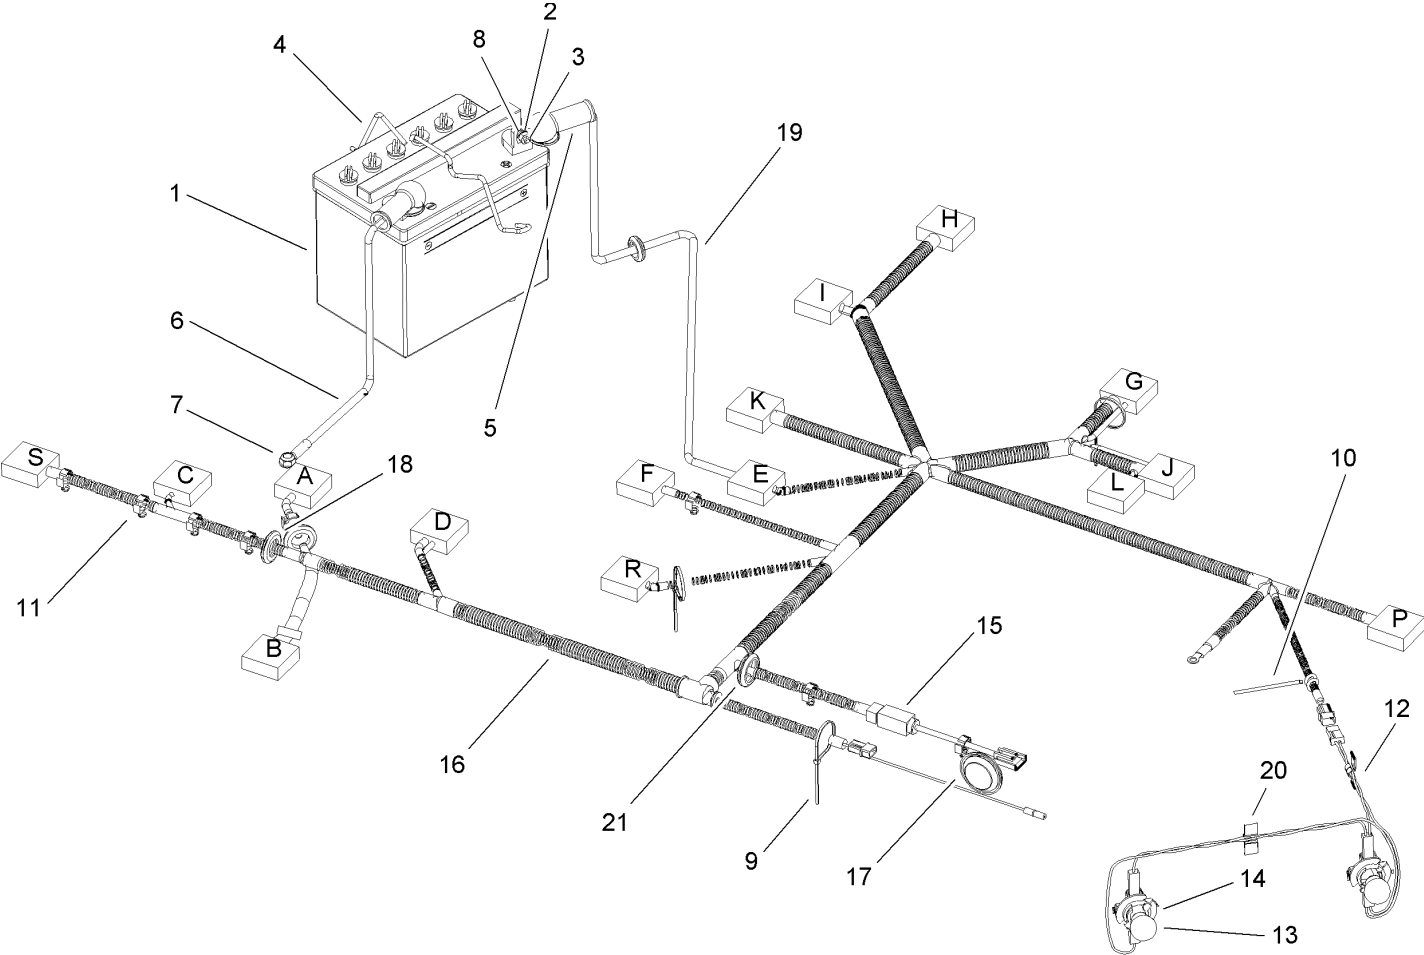 



Harness Assembly

Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery				
2	33013-00	2	Nut-Hex				
3	33113-016	2	Screw-HH				
4	110-8676	1	Clamp-Battery				
5	104-3154	2	Boot-Rubber				
6	110-8678	1	Cable-Battery, Negative				
7	33024-00	1	Nut-Lock				
8	33093-00	2	Washer-Flat				
9	3334-945	3	Tie-Cable				
10	104-3156	1	Holder- Harness, Wiring				
11	104-3157	10	Clip-Snap				
12	88-4320	1	Harness-Wire, Lights				
13	104-3158	2	Bulb-Light				
14	104-3159	2	Socket-Light				
15	104-3160	1	Harness-Clutch				
16	108-8750	1	Harness-Wiring				
17	104-3163	1	Cap				
18	104-3165	2	Bushing				
19	110-8677	1	Cable-Battery, Positive				
20	104-3167	2	Clip-Nylon				
21	104-3168	1	Bushing				

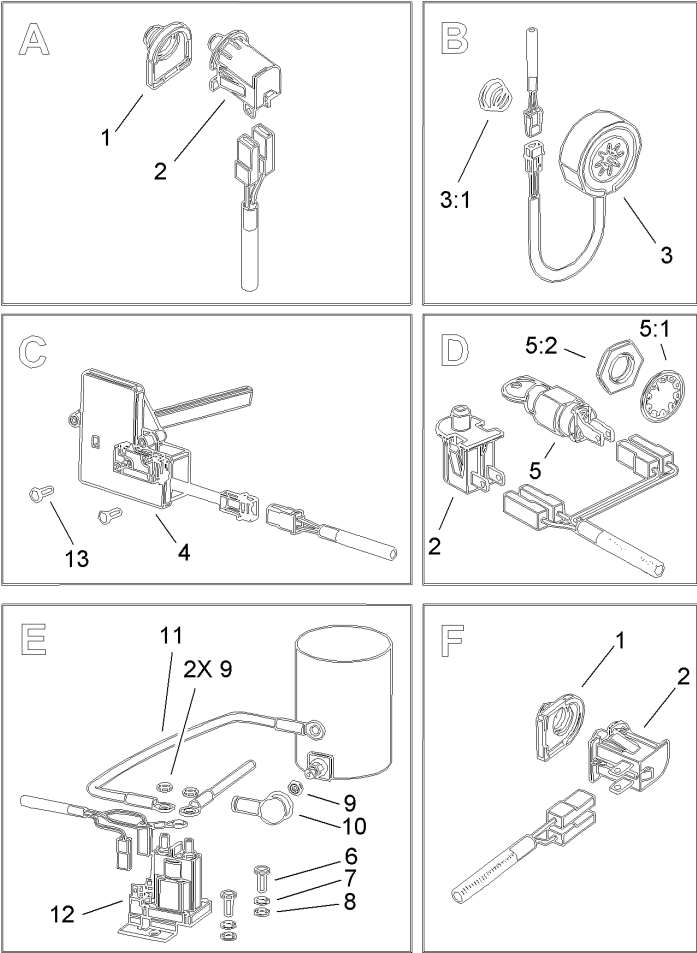 


Electrical Starter Assembly

Ref	Part No.	Qty.	Description				
1	104-3178	2	Cover-Protective				
2	104-3179	3	Switch-Delta				
3	99-8090	1	Magnet ASM				
3:1	93-6601	1	Spring-Compression				
4	104-3185	1	Switch-Omron				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	33113-012	2	Screw-HH				
7	104-3186	2	Washer-Spring				
8	33093-00	2	Washer-Flat				
9	32128-32	3	Nut-HHF				
10	104-3187	1	Boot-Rubber				
11	104-3188	1	Lead-Starter, Electric				
12	104-3189	1	Solenoid				
13	104-3349	2	Screw				

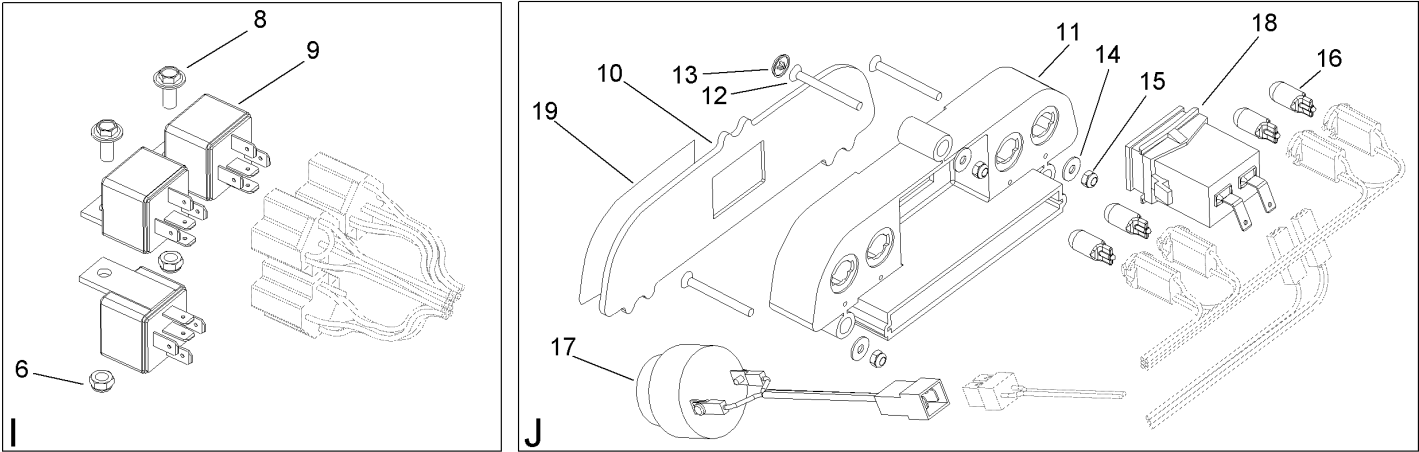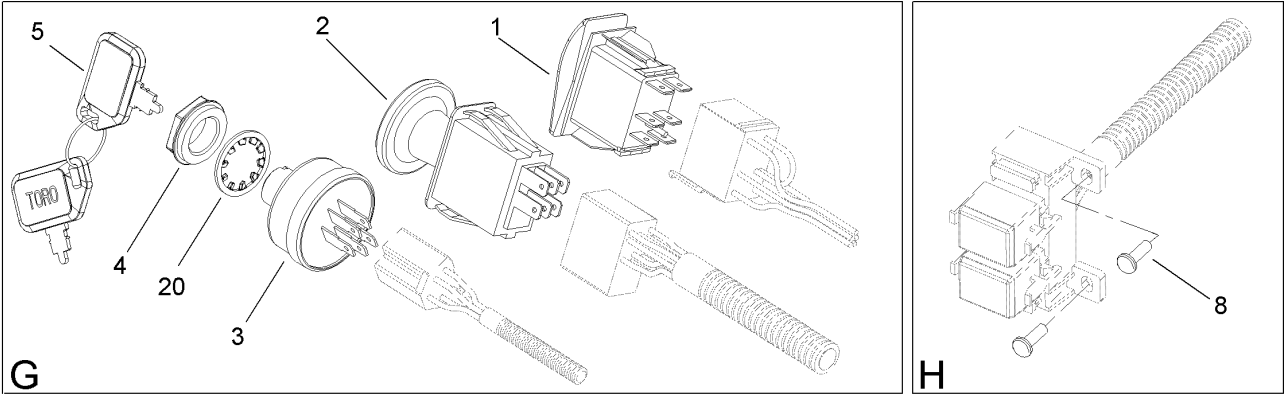  

Electrical Switch Assembly No. 2



Ref	Part No.	Qty.	Description				
1	93-0527	1	Switch-Cruise				
2	93-9998	1	Switch-PTO				
3	92-6785	1	Switch-Ignition				
4	218-461	1	Nut-HH				
5	62-7770	2	Key-Ignition				
6	87-5140	2	Nut-Lock				
8	104-2978	4	Screw-Hex				
9	104-3173	3	Relay				
10	92-6705	1	Lens-Dash				
11	92-6732	1	Housing-Light, Indicator				
12	104-3191	3	Screw				
13	104-3174	3	Screw-Cap				
14	104-3175	3	Washer				
15	104-2985	3	Nut-Hex				
16	104-3176	4	Bulb				
17	104-3177	1	Buzzer				
18	94-4208	1	Hourmeter				
19	104-2854	1	Decal-Dash				
20	3254-5	1	Washer-Tooth				

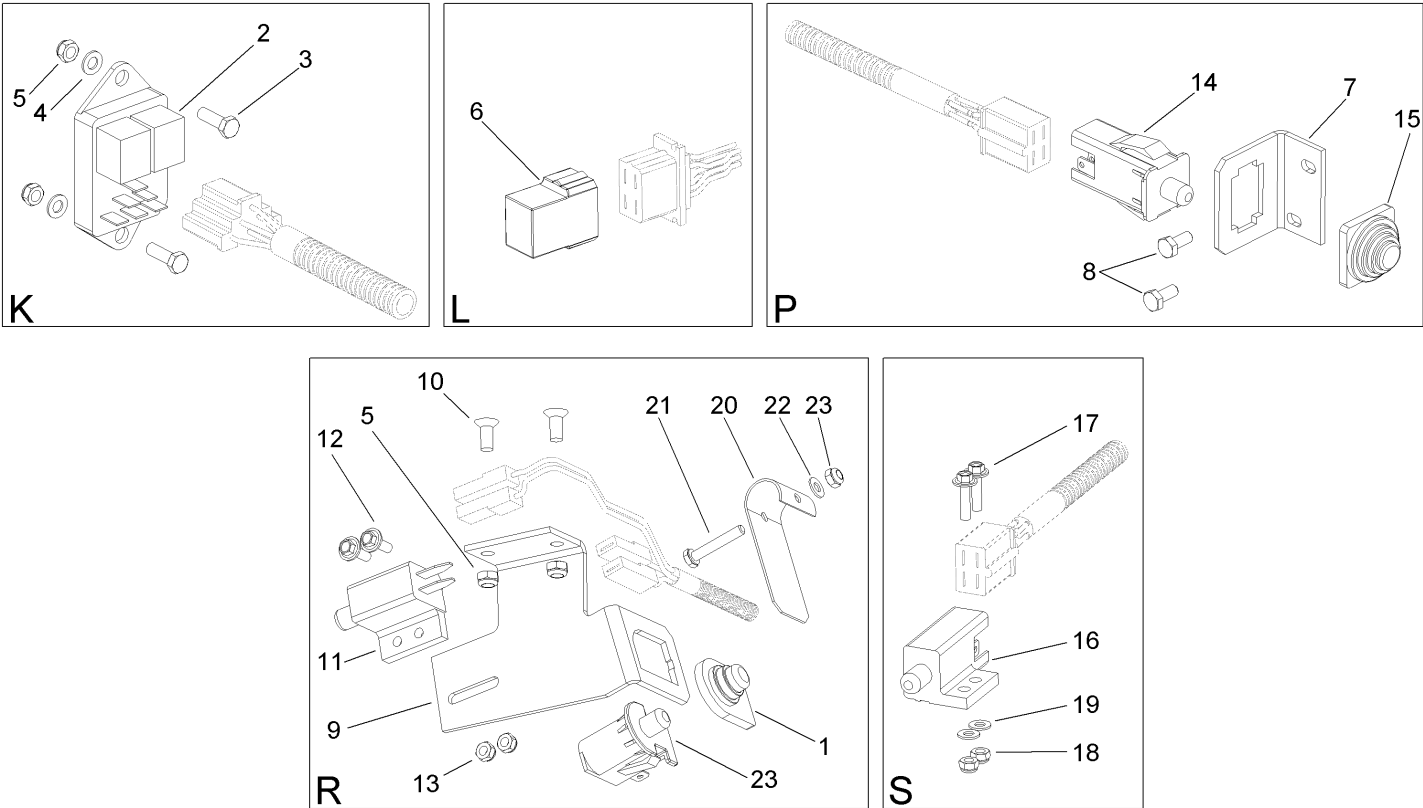 


Electrical Switch Assembly No. 3

Ref	Part No.	Qty.	Description				
1	104-3178	1	Cover-Protective				
2	99-3701	1	Module-Clutch				
3	60-6910	2	Screw				
4	52-6430	2	Washer				
5	87-5140	4	Nut-Lock				
6	104-3169	1	Circuit-Memory				
7	104-3333	1	Holder-Switch				
8	104-3190	2	Screw				
9	104-3332	1	Holder-Switch				
10	104-2980	2	Screw				
11	95-1653	1	Switch-Pole, Single				
12	104-2983	2	Screw				
13	104-2985	3	Nut-Hex				
14	104-3338	1	Switch-Delta				
15	104-3339	1	Cover-Switch				
16	104-3330	1	Switch-Delta				
17	104-3331	2	Bolt				
18	46-0430	2	Nut-Lock				
19	52-6430	2	Washer				
20	106-5765	1	Lever-Spring				
21	104-3009	1	Screw-Hex				
22	106-5766	1	Washer				
23	104-3179	1	Switch-Delta				

  48 SHORT BLOCK

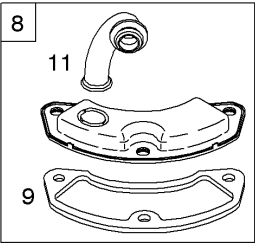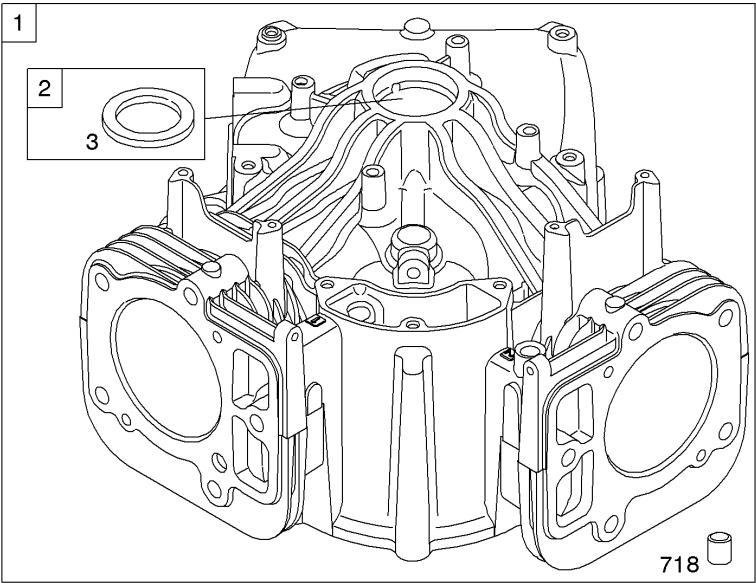

252

 



250






Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description				
1	699753	1	Cylinder ASM				
2	499585	1	Bushing And Seal Kit (Magneto Side)				
3	391086s	1	Seal-Oil (Magneto Side)				
8	792185	1	Breather ASM				
9	690937	1	Gasket-Breather				
10	691108	1	Screw (Breather ASM)				
11	792184	1	Tube-Breather				
48	698172	1	Short Block				
250	690957	1	Retainer-Breather				
252	690956	1	Collector-Oil				
718	690959	1	Pin-Locating				

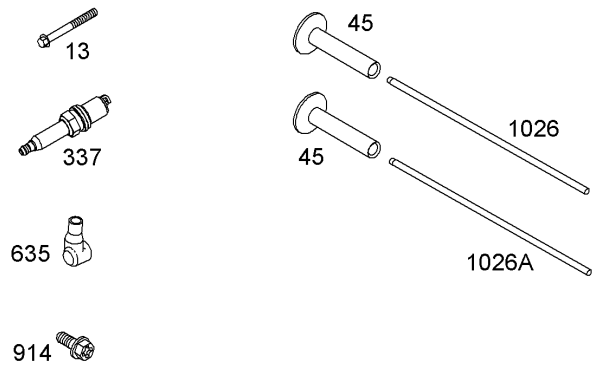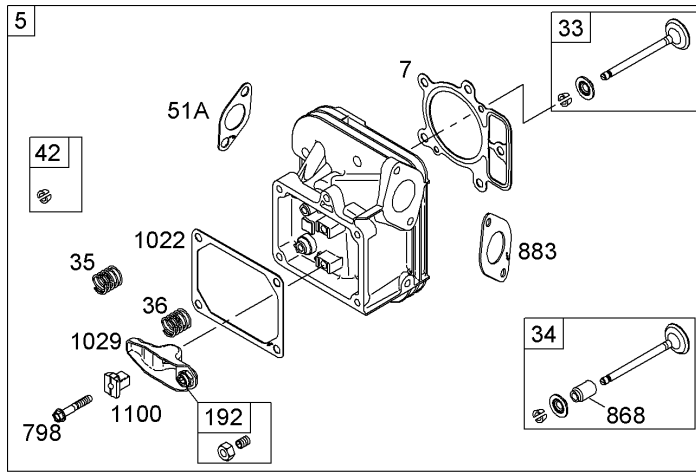  


 
 
 
Assemblies include all parts shown in frames

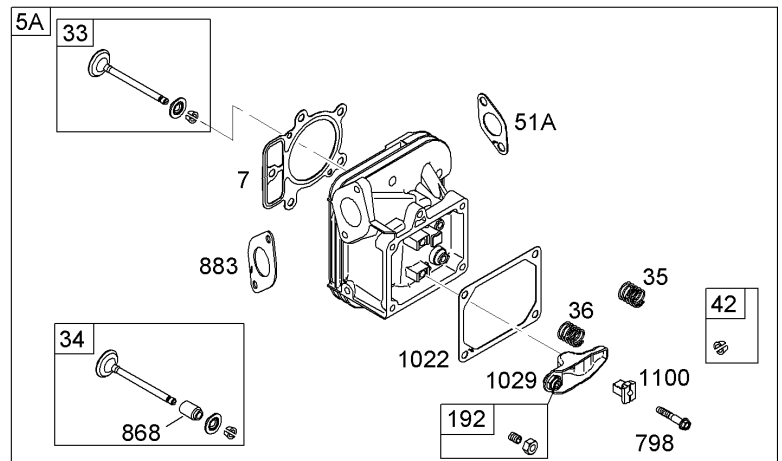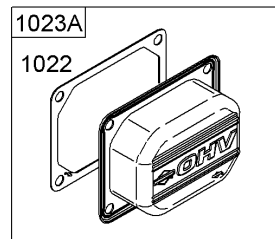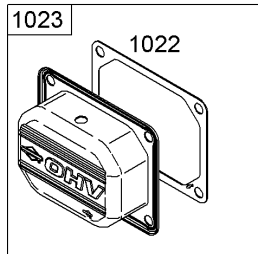

Cylinder Head Assembly Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
5	792299	1	Head-Cylinder (Cylinder No.1)
5A	792300	1	Head-Cylinder (Cylinder No.2)
5 7	693997	1	Gasket-Head, Cylinder
7			
13	791130	1	Screw (Cylinder Head)
33	499596	1	Valve-Exhaust
34	792200	1	Valve-Intake
35	694865	1	Spring-Valve (Intake)
36	694865	1	Spring-Valve (Exhaust)
42	499586	1	Keeper-Valve
45	690977	1	Tappet-Valve
5 51A	690949	1	Gasket-Intake
6			
192	690083	1	Adjuster-Arm, Rocker
337	691043	1	Spark Plug
635	66538s	1	Boot-Spark Plug
798	697890	1	Screw (Rocker Arm)
5 868	690968	1	Seal-Valve
7			
5 883	690970	1	Gasket-Exhaust
7			
914	691127	1	Screw (Rocker Cover)
5 1022	690971	1	Gasket-Cover, Rocker
7			
1023	793146	1	Cover-Arm, Rocker

Ref	Part No.	Qty.	Description
1023A	499600	1	Cover-Arm, Rocker (Cylinder No.2)
1026	690981	1	Rod-Push (Steel) (Intake)
1026A	690982	1	Rod-Push (Aluminum) (Exhaust)
1029	690972	1	Arm-Rocker
1100	791959	1	Pivot-Arm, Rocker

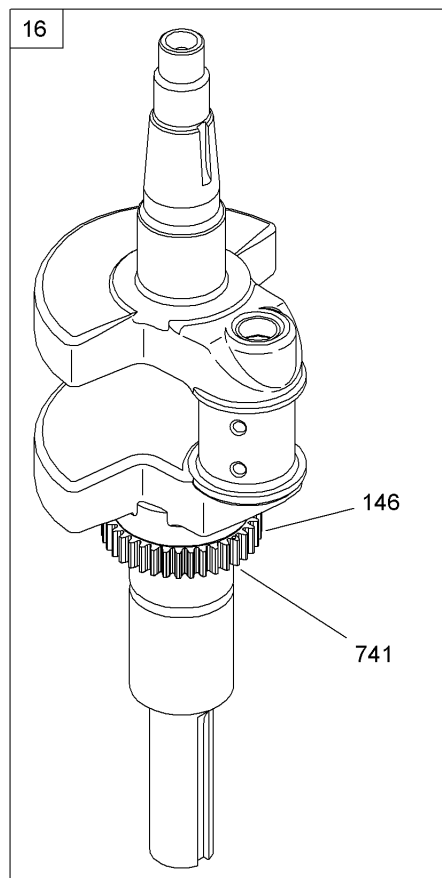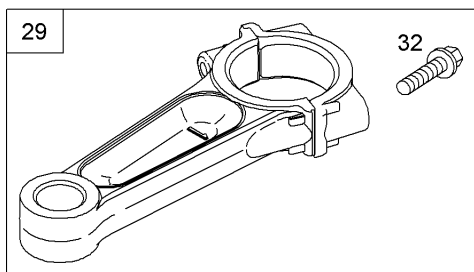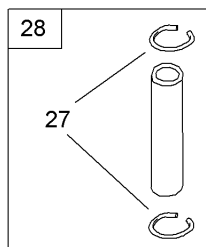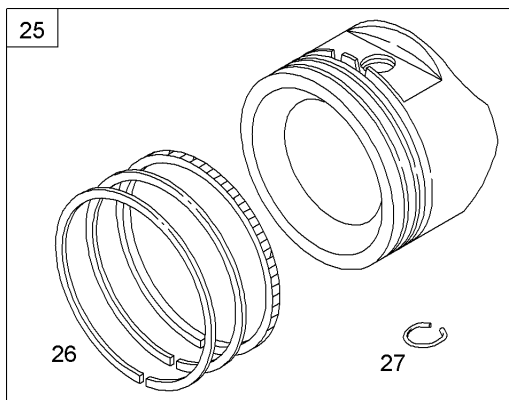    24



357

Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
③16	699700	1	Crankshaft
③24	222698s	1	Key-Flywheel
③25	792023	1	Piston ASM (STD)
③25	792072	1	Piston ASM (.020 O S)
③26	792026	1	Ring Set (STD)
③26	792073	1	Ring Set (.020 O S)
③27	690975	1	Lock-Pin, Piston
③28	690229	1	Pin-Piston (STD)
③29	699699	1	Rod-Connecting
③32	690976	1	Screw (Connecting Rod)
③146	690979	1	Key-Timing
③357	691483	1	Key-Pulley, Drive
③741	690980	1	Gear-Timing

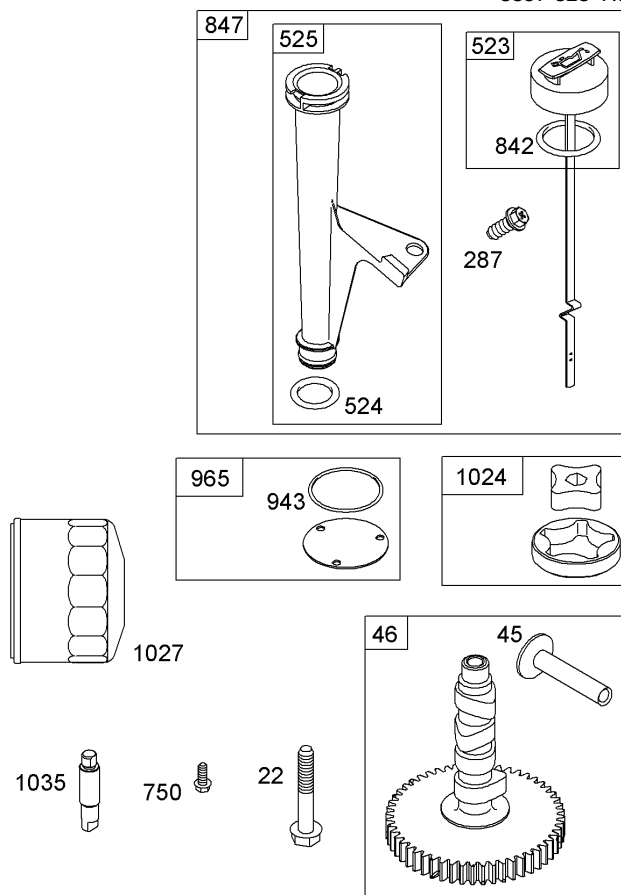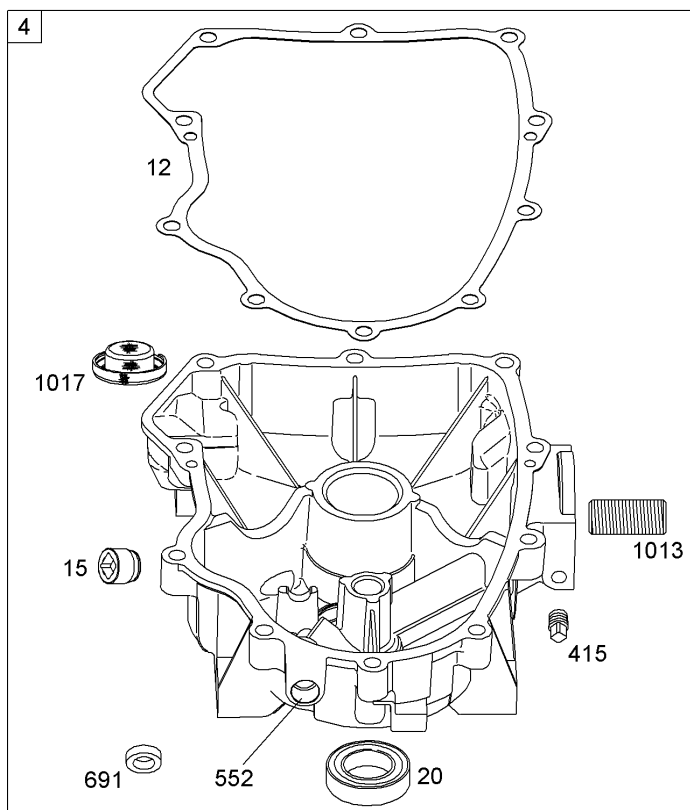  


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
34	699747	1	Sump-Engine
3512	697227	1	Gasket-Crankcase
315	690946	1	Plug-Drain, Oil
3520	791892	1	Seal-Oil (P-T-O Side)
322	694966	1	Screw (Crankcase Sump Cover)
345	690977	1	Tappet-Valve
346	792555	1	Camshaft
3287	691108	1	Screw (Dipstick And Tube ASM)
3415	91488	1	Plug-Oil
3523	691036	1	Dipstick
35524	691032	1	Seal, O-Ring (Dipstick Tube)
3525	691037	1	Tube-Dipstick
3552	690552	1	Bushing-Crank, Governor
35691	790574	1	Seal-Shaft, Governor
3750	696999	1	Screw (Oil Pump Cover)
35842	691031	1	Seal, O-Ring (Dipstick)
3847	499602	1	Dipstick And Tube ASM
35943	690589	1	Seal, O-Ring (Oil Pump Cover)
3965	499613	1	Cover-Pump, Oil
31013	690954	1	Nipple-Filter, Oil
31017	690770	1	Screen-Pump, Oil
31024	499054	1	Pump-Oil
31027	492932s	1	Filter-Oil
31035	691042	1	Shaft-Pump, Oil

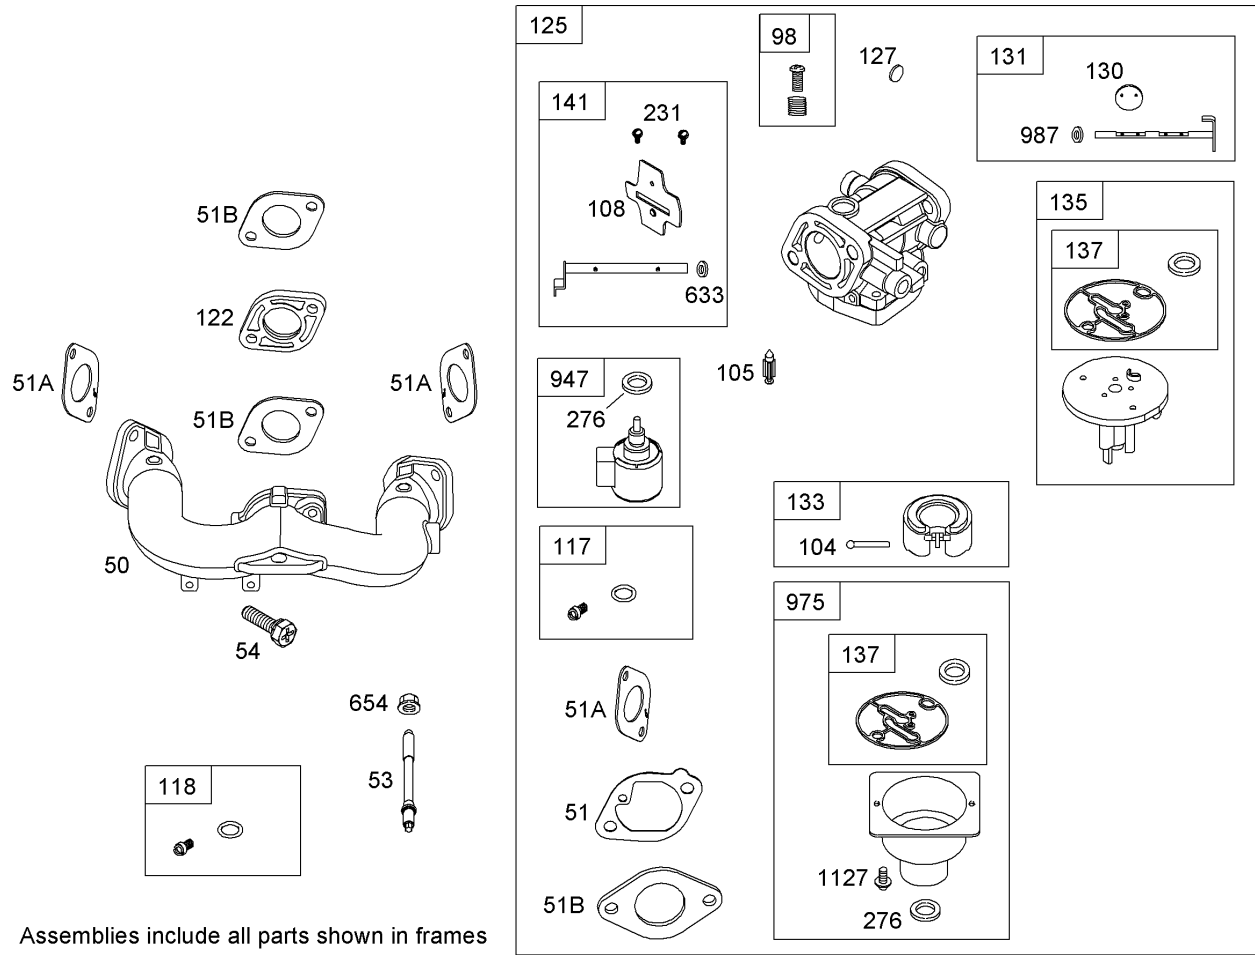 


Carburetor Assembly

Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
③ 50	699801	1	Manifold-Intake
④ ⑤ 51	699800	1	Gasket-Intake
③ ⑤ 51A	690949	1	Gasket-Intake
④ ⑤ 51B	699803	1	Gasket-Intake
③ 53	690951	1	Stud (Carburetor)
③ 54	699816	1	Screw (Intake Manifold)
③ 98	699721	1	Idle Speed Kit
③ ④ 104	694918	1	Pin-Hinge, Float
③ 105	698537	1	Valve-Needle, Float
③ 108	699808	1	Valve-Choke
③ 117	791406	1	Jet-Main (Standard)
③ 118	699820	1	Jet-Main (High Altitude)
③ 122	699802	1	Spacer-Carburetor
③ 125	699807	1	Carburetor
③ 127	699810	1	Plug-Welch
③ 130	699809	1	Valve-Throttle
③ 131	699812	1	Throttle Shaft Kit
③ 133	694914	1	Carburetor Float ASM
③ 135	792022	1	Tube-Transfer, Fuel
③ ④ 137	698781	1	Gasket-Bowl, Float
③ 141	699811	1	Choke Shaft Kit
③ 231	690718	1	Screw (Choke Valve)

Ref	Part No.	Qty.	Description
③ ④ 276	695410	1	Washer-Sealing
③ ④ 633	695414	1	Seal-Shaft, Choke And Throttle
③ 654	690958	1	Nut (Carburetor)
③ 947	699728	1	Solenoid-Fuel
③ 975	699502	1	Bowl-Float
③ ④ 987	699813	1	Seal-Shaft, Throttle
③ 1127	695407	1	Screw (Float Bowl)

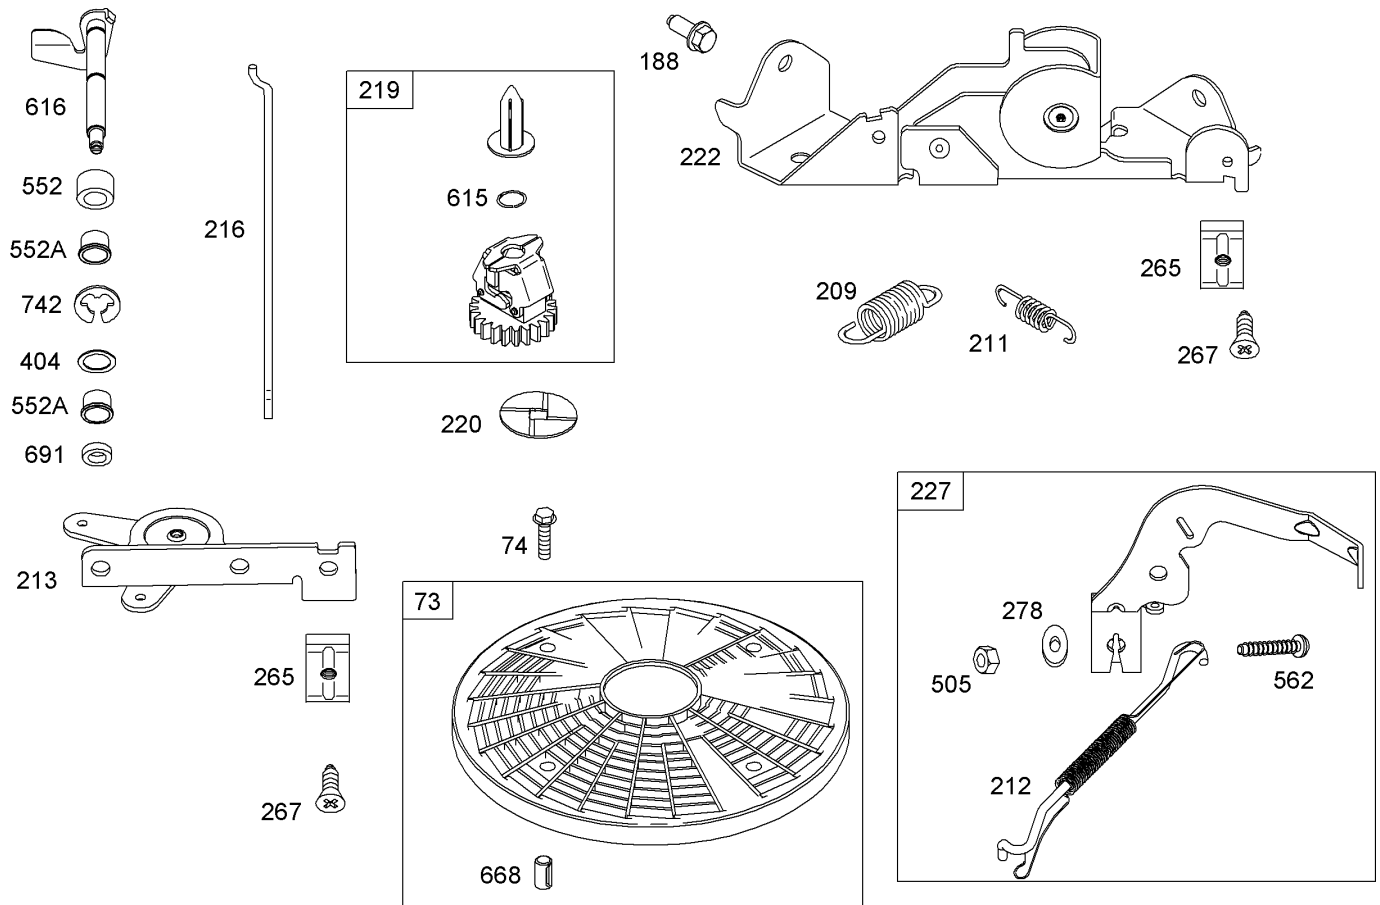 


Assemblies include all parts shown in frames

Governor Assembly

Briggs and Stratton 441677-0136-E1


Ref	Part No.	Qty.	Description
73	494439	1	Screen-Rotating
74	698425	1	Screw (Rotating Screen)
188	691108	1	Screw (Control Bracket)
209	793527	1	Spring-Governor
211	691019	1	Spring-Idle, Governed
212	792265	1	Link-Throttle
213	691021	1	Bracket-Control, Choke
216	691022	1	Link-Choke
219	793338	1	Gear-Governor
220	690412	1	Washer (Governor Gear)
222	698761	1	Bracket-Control
227	792492	1	Lever-Control, Governor
265	691024	1	Clamp-Casing
267	792629	1	Screw (Casing Clamp)
278	792651	1	Washer (Governor Control Lever)
404	690442	1	Washer (Governor Crank)
505	691029	1	Nut (Governor Control Lever)
552	690552	1	Bushing-Crank, Governor
552A	690553	1	Bushing-Crank, Governor
562	690311	1	Bolt (Governor Control Lever)
615	698290	1	Retainer-Shaft, Governor
616	691045	1	Crank-Governor
668	691215	1	Spacer
691	790574	1	Seal-Shaft, Governor

Ref	Part No.	Qty.	Description
742	690328	1	Retainer-E Ring

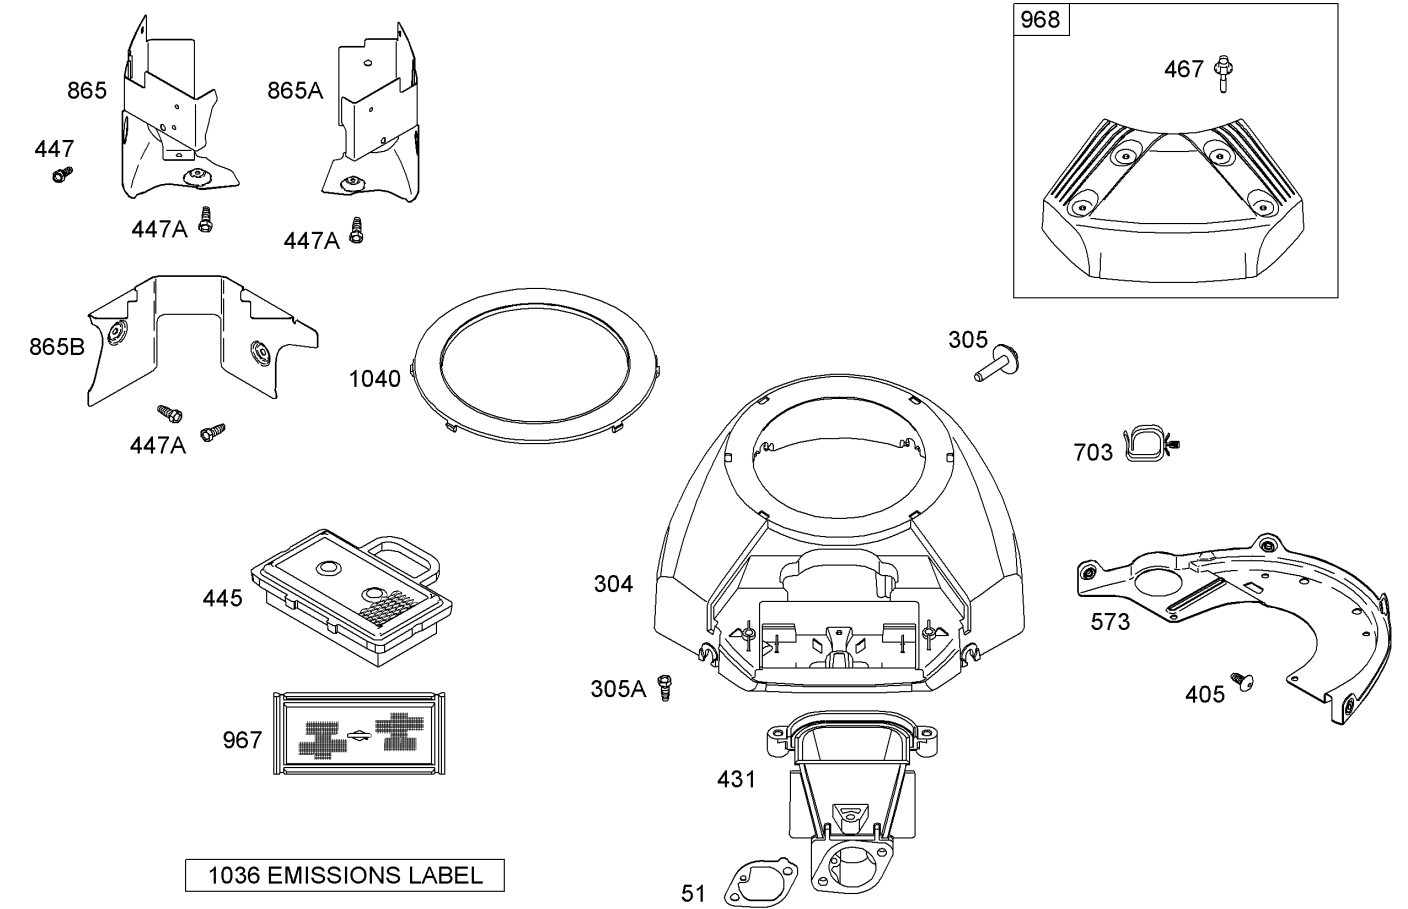 


Blower Housing Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description				
4 5 51	699800	1	Gasket-Intake				
6							
304	791243	1	Housing-Blower				
305	691005	1	Screw (Blower Housing)				
305A	790690	1	Screw (Blower Housing)				
405	697820	1	Screw (Backplate)				
431	790628	1	Elbow-Cleaner, Air				
445	499486s	1	Filter-Cartridge, Air Cleaner				
447	691108	1	Screw (Air Guide Cover)				
447A	691003	1	Screw (Air Guide Cover)				
467	691008	1	Knob-Cleaner, Air				
573	790444	1	Plate-Back				
703	691010	1	Clip				
865	691012	1	Cover-Guide, Air				
865A	793205	1	Cover-Guide, Air				
865B	691015	1	Cover-Guide, Air (Valley)				
967	273638s	1	Filter-Cleaner, Pre				
968	791242	1	Cover-Cleaner, Air				
1036		1	Label-Emissions				
1040	791237	1	Plate-Trim				



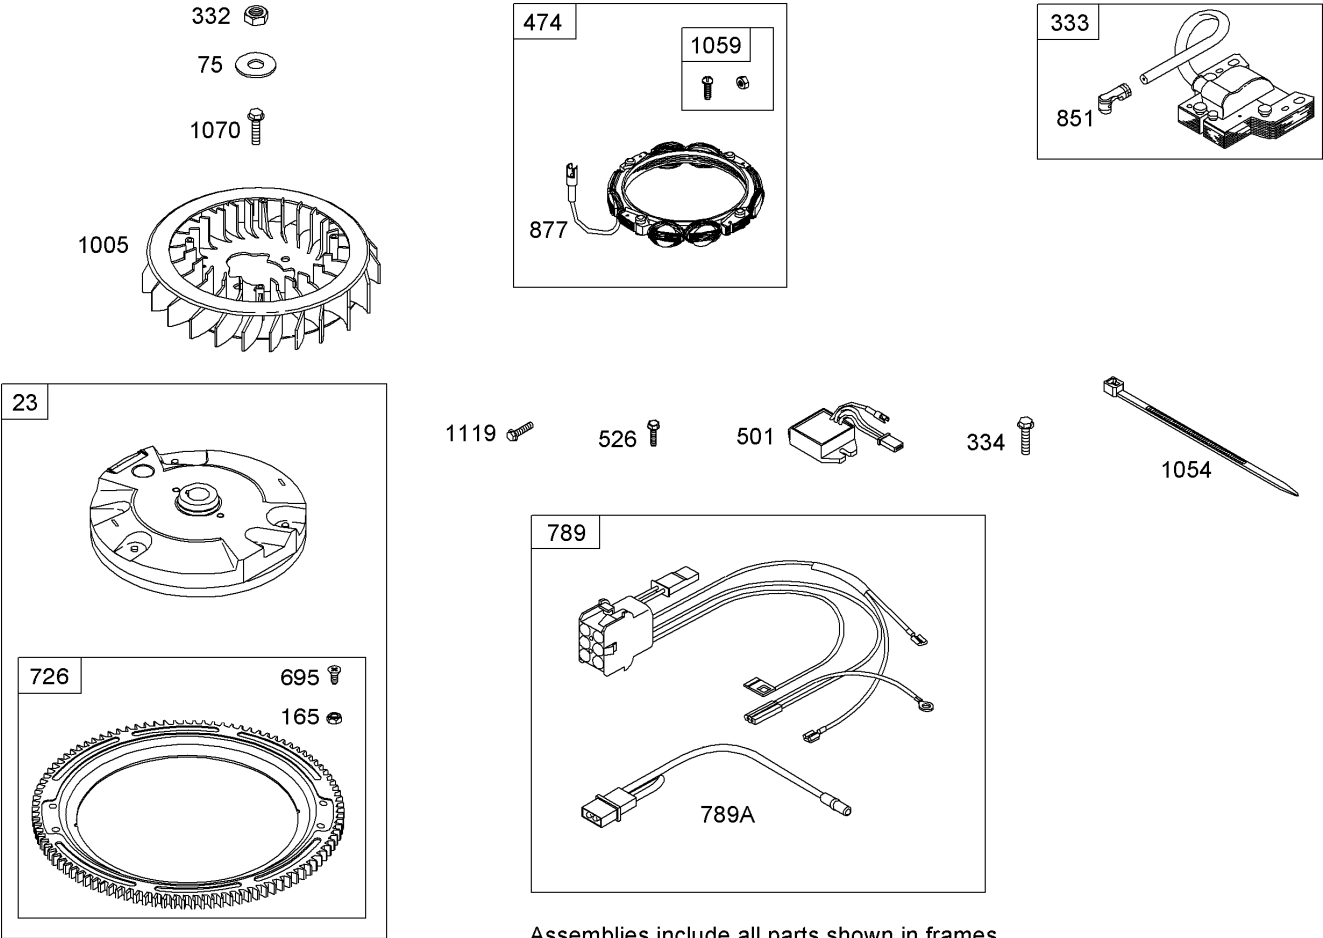 


Flywheel Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description				
③23	691053	1	Flywheel				
③75	691056	1	Washer (Flywheel)				
③165	693148	1	Nut (Ring Gear)				
③332	691059	1	Nut (Flywheel)				
③333	691060	1	Armature-Magneto				
③334	691061	1	Screw (Magneto Armature)				
③474	696457	1	Alternator				
③501	691188	1	Regulator				
③526	691129	1	Screw (Regulator)				
③695	693149	1	Screw (Ring Gear)				
③726	499612	1	Gear-Ring				
③789	698330	1	Harness-Wiring				
③789A	790544	1	Harness-Wiring				
③851	493880s	1	Terminal-Spark Plug				
③877	393537	1	Connector-Wire, Tri Circuit (Alternator)				
③1005	791236	1	Fan-Flywheel				
③1054	280275	1	Tie-Cable				
③1059	698516	1	Screw And Washer Kit				
③1070	690372	1	Screw (Flywheel Fan)				
③1119	691183	1	Screw (Alternator)				

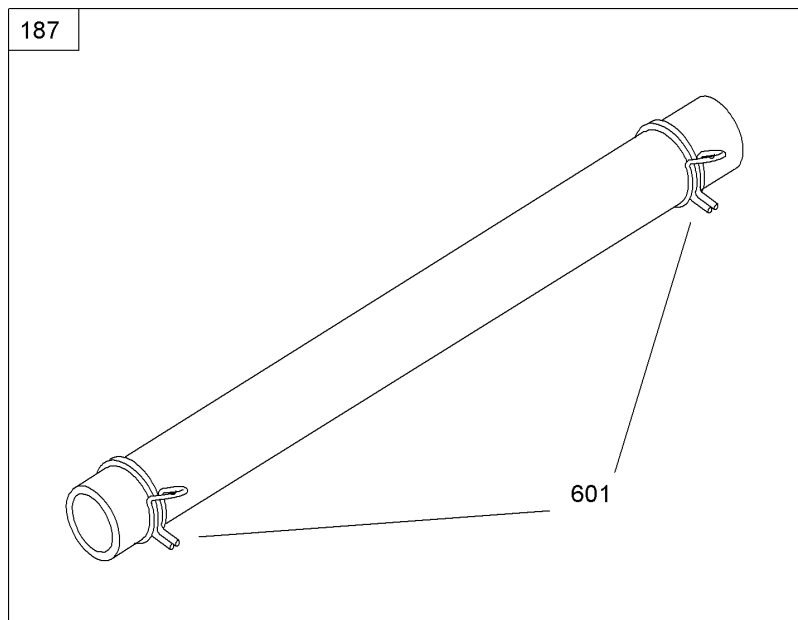 


   Assemblies include all parts shown in frames

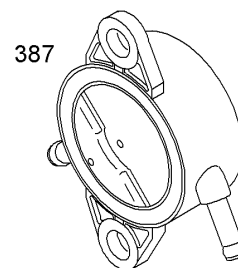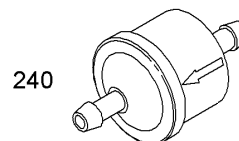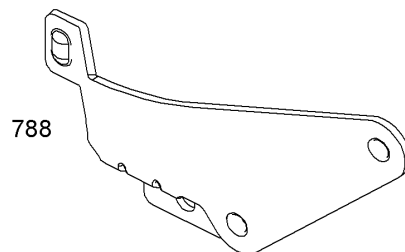

Fuel Line and Pump Assembly Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
③187	791766	1	Line-Fuel (Cut To Required Length)
③240	691035	1	Filter-Fuel
③385	691108	1	Screw (Fuel Pump Bracket)
③387	808656	1	Pump-Fuel
③601	791850	1	Clamp-Hose
③788	793145	1	Bracket-Pump, Fuel
③918	793147	1	Hose-Vacuum


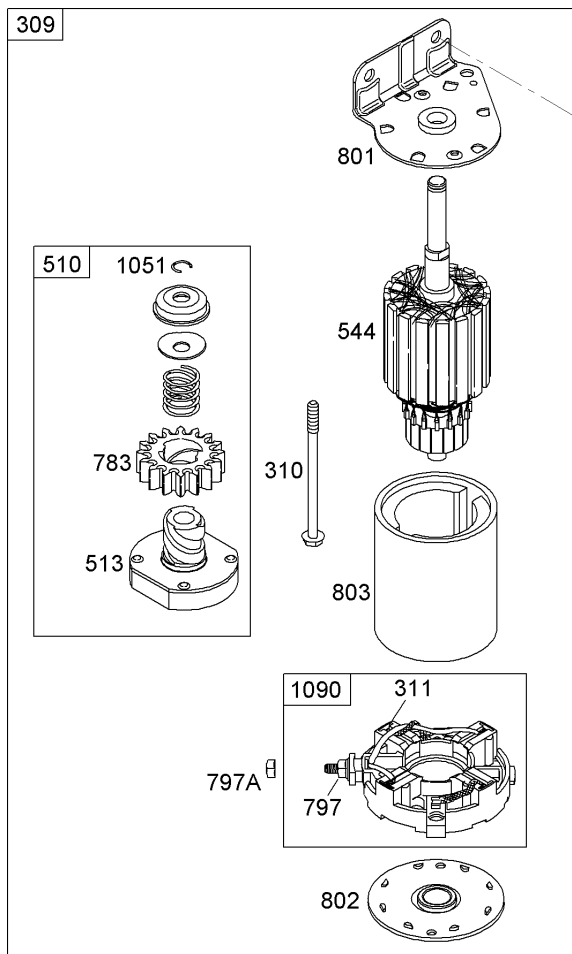 


Assemblies include all parts shown in frames

Starter Motor Assembly

Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description				
③309	499521	1	Motor-Starter				
③310	691263	1	Bolt (Starter Motor)				
③311	497608	1	Brush Set				
③510	696541	1	Drive-Starter				
③513	692024	1	Clutch-Drive				
③544		1	Armature-Starter (For Service Order 499521, Starter Motor)				
③697	690372	1	Screw (Drive Cap)				
③783	695708	1	Gear-Pinion				
③797	691029	1	Nut (Brush Retainer)				
③797A	693167	1	Nut (Brush Retainer)				
③801	691283	1	Cap-Drive				
③802	691286	1	Cap-End				
③803		1	Housing-Starter (For Service Order 499521, Starter Motor)				
③1051	691265	1	Ring-Retaining				
③1090	691293	1	Retainer-Brush				

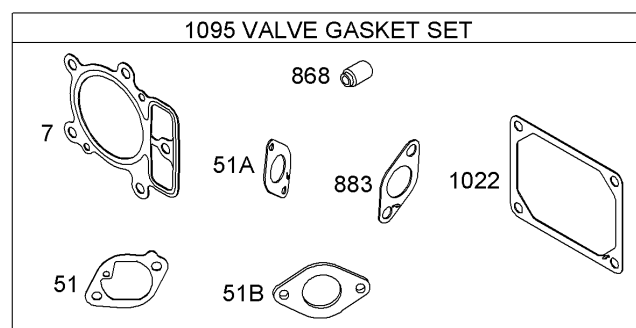 
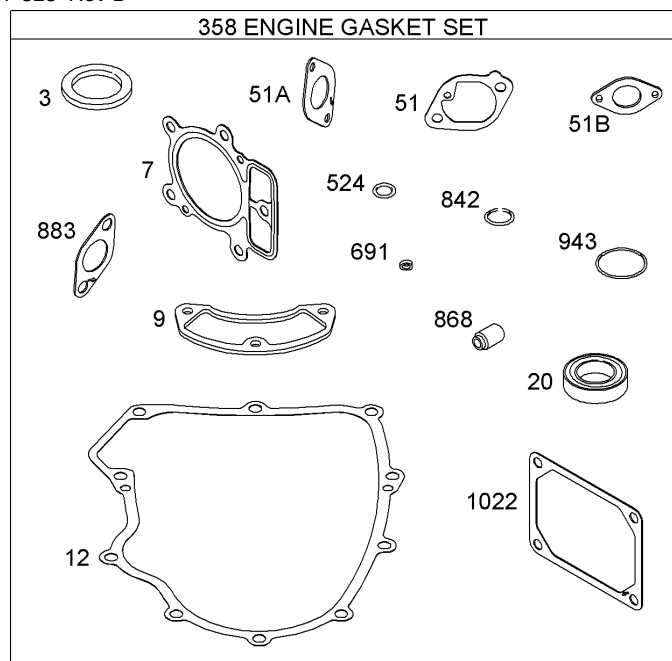 


Assemblies include all parts shown in frames

Gasket Set

Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
353	391086s	1	Seal-Oil (Magneto Side)
357	693997	1	Gasket-Head, Cylinder
7			
359	690937	1	Gasket-Breather
3512	697227	1	Gasket-Crankcase
3520	791892	1	Seal-Oil (P-T-O Side)
4551	699800	1	Gasket-Intake
6			
3551A	690949	1	Gasket-Intake
6			
4551B	699803	1	Gasket-Intake
6			
3558	699823	1	Engine Gasket Set
35524	691032	1	Seal, O-Ring (Dipstick Tube)
35691	790574	1	Seal-Shaft, Governor
35842	691031	1	Seal, O-Ring (Dipstick)
35868	690968	1	Seal-Valve
7			
35883	690970	1	Gasket-Exhaust
7			
35943	690589	1	Seal, O-Ring (Oil Pump Cover)
351022	690971	1	Gasket-Cover, Rocker
7			
31095	699822	1	Valve Gasket Set

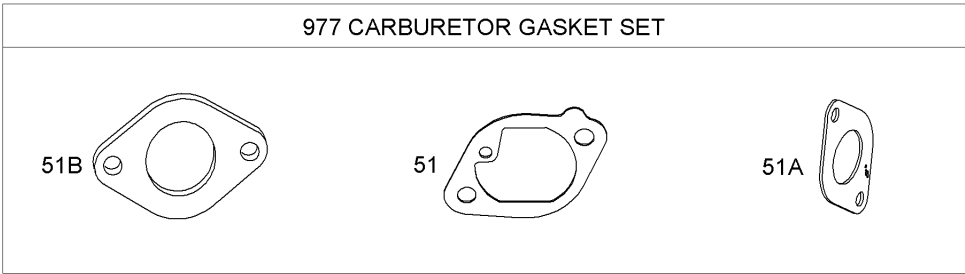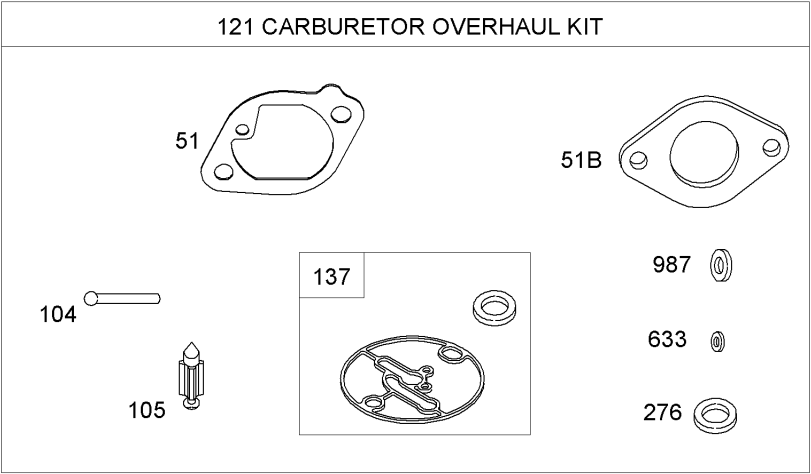  

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description				
4 5 51	699800	1	Gasket-Intake				
3 5 51A	690949	1	Gasket-Intake				
4 5 51B	699803	1	Gasket-Intake				
3 4 104	694918	1	Pin-Hinge, Float				
3 4 105	698537	1	Valve-Needle, Float				
3 121	699814	1	Carburetor Overhaul Kit				
3 4 137	698781	1	Gasket-Bowl, Float				
3 4 276	695410	1	Washer-Sealing				
3 4 633	695414	1	Seal-Shaft, Choke And Throttle				
3 977	699815	1	Carburetor Gasket Set				
3 4 987	699813	1	Seal-Shaft, Throttle				

Attachments and Accessories

For 74592 - DH 220 Lawn Tractor

Product Name	Model/Part
Rear Discharge Kit	79471

NOTES

NOTES

NOTES

