



LX426 Lawn Tractor

Model No. 13AL60RG048 - 1L107H10100 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front and Rear Wheel Assembly	 3	Crankshaft and Piston/Ring Assembly Briggs and Stratton 331777-0946-B2	 17
Steering Shaft and Front Axle Assembly	 4	Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2	 18
Frame, Battery and PTO Engage Assembly	 5	Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2	 19
Seat and Fender Assembly	 6	Governor Control Assembly Briggs and Stratton 331777-0946-B2	 20
Fuel Tank, Hood and Dash Assembly	 7	Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 331777-0946-B2	 21
Transimission, Brake and Traction Pedal Assembly	 8	Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2	 22
Single Speed Transmission Assembly No. 112-6083	 10	Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2	 23
Deck Assembly	 12	Attachments and Accessories List	 24
Muffler and Guard Assembly	 14		
Cylinder Assembly Briggs and Stratton 331777-0946-B2	 15		
Cylinder Head Assembly Briggs and Stratton 331777-0946-B2	 16		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|---|
| ❶ Not illustrated | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Valve Gasket Set (Ref. No. 1095) | |

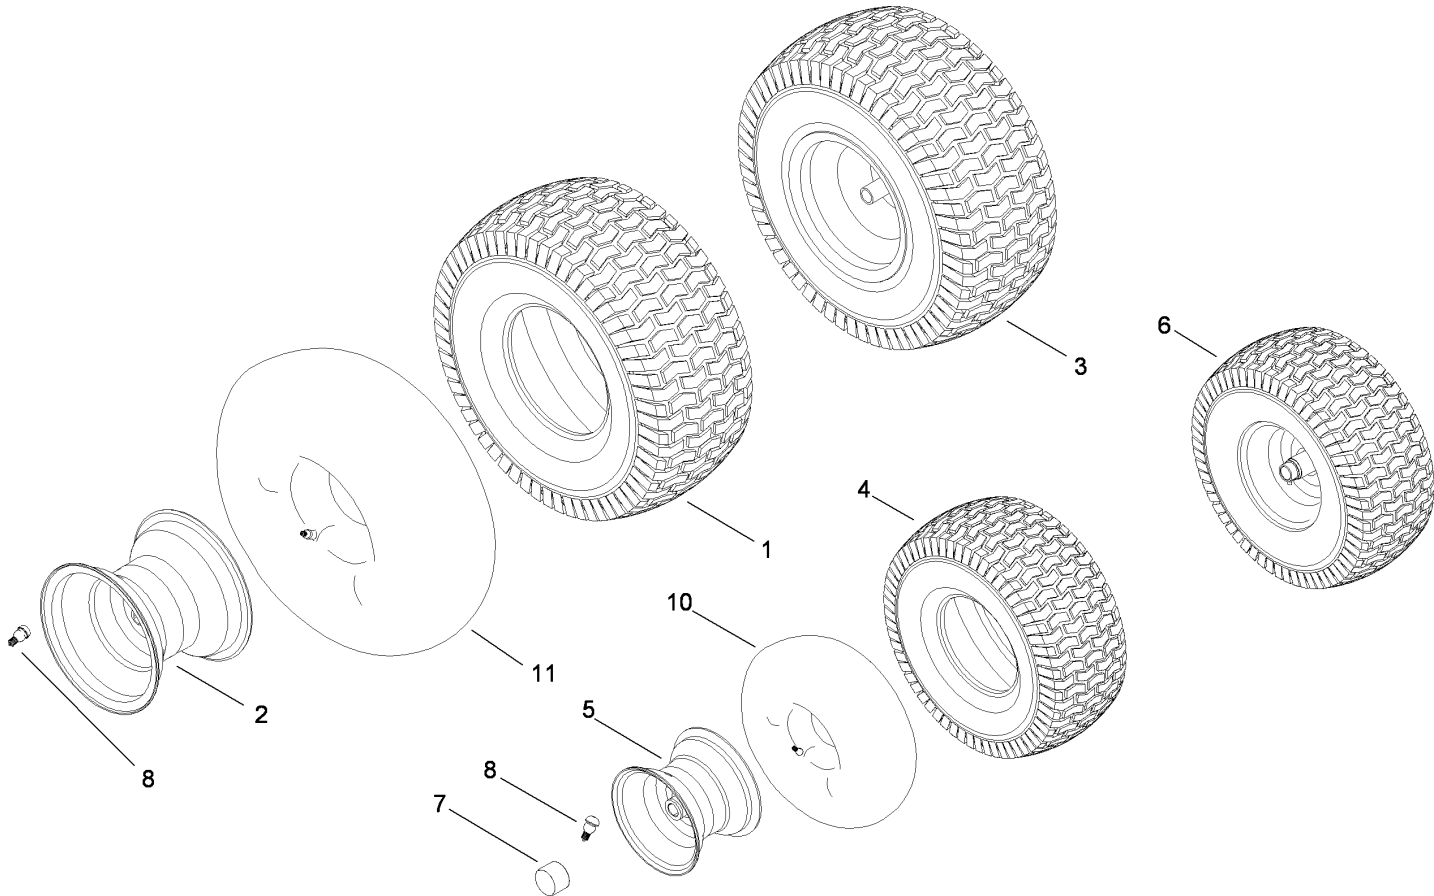


Front and Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1	112-0713	1	Tire-Multi Trac				
2	112-6093	1	Rim-Wheel, Rear				
3	112-0496	1	Rear Wheel ASM				
4	112-0576	1	Tire-Front				
5	112-0468	1	Rim-Wheel, Front				
6	112-0491	1	Front Wheel ASM				
7	112-5968	1	Cap-Hub				
8	112-0503	1	Valve-Air, Tubeless				
10	232-39	1	Tube-Inner				
11	93-3893	1	Tube-Inner				

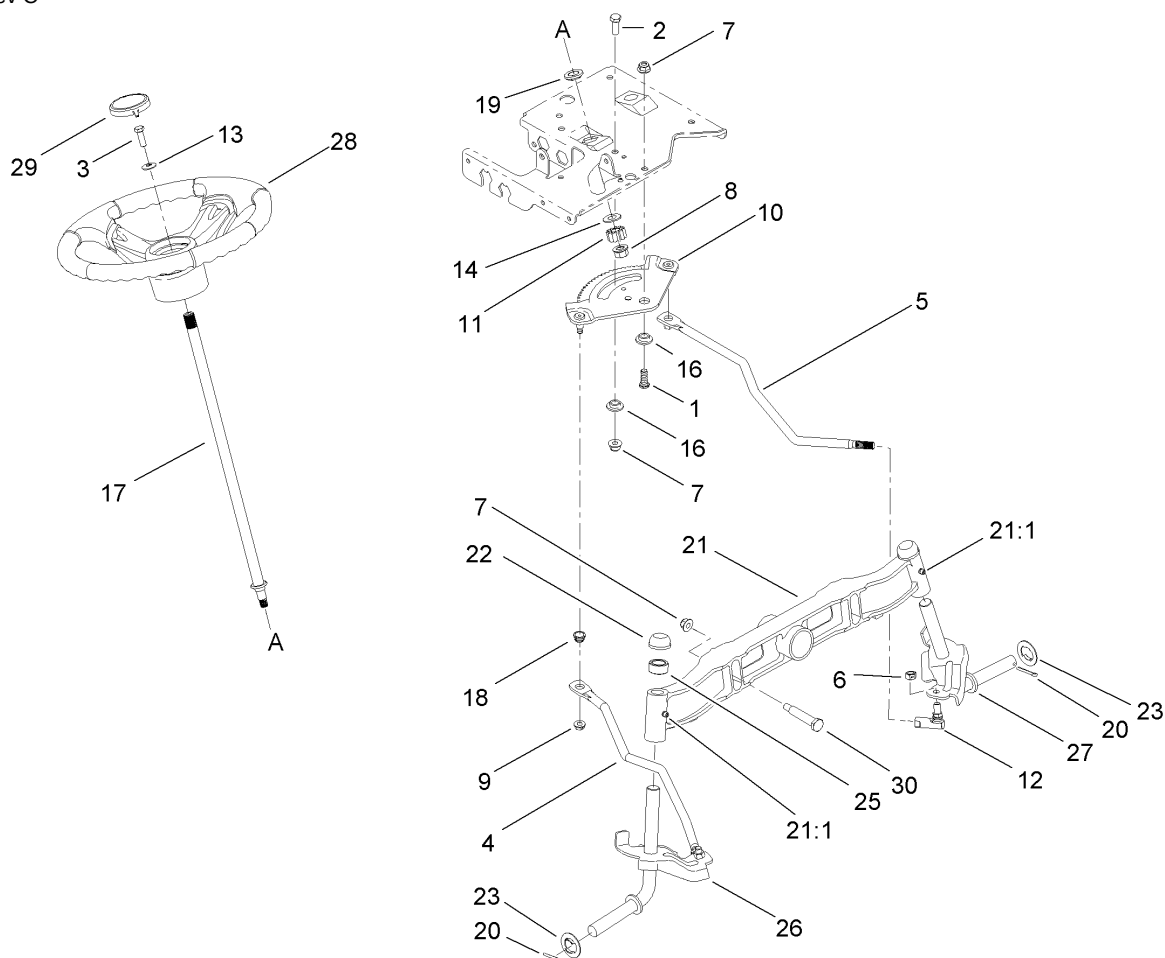 

Steering Shaft and Front Axle Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0631	1	Screw-HH	26	112-0547	1	RH Axle ASM
2	112-0492	1	Screw-HH	27	112-0562	1	LH Axle ASM
3	112-0473	1	Screw-HH	28	112-6100	1	3 Spoke Wheel Steering ASM
4	112-0355	1	Link-Drag, RH	29	112-3734	1	Cap-Wheel, Steering
5	112-0346	1	Link-Drag, LH	30	112-0699	1	Bolt-Shoulder
6	112-0483	1	Nut-Hex, Lock				
7	112-0668	1	Nut-Lock, Flange				
8	112-0859	1	Nut-Lock, Flange				
9	112-0511	1	Nut-Lock, Flange				
10	112-0862	1	Gear-Steering				
11	112-0863	1	Gear-Pinion, Steering				
12	112-0917	1	Ball Joint ASM				
13	112-0924	1	Washer-Flat				
14	112-0925	1	Washer-Flat				
16	112-0881	1	Spacer-Shoulder				
17	112-6097	1	Shaft-Steering				
18	112-0929	1	Bushing				
19	112-6098	1	Bearing-Flange, Hex				
20	112-0860	1	Pin-Cotter				
21	112-6099	1	Pivot-Axle, Cast Iron				
21:1	112-0926	1	Fitting-Grease				
22	112-0323	1	Cap				
23	112-5972	1	Washer-Flat				
25	112-6136	1	Spacer				

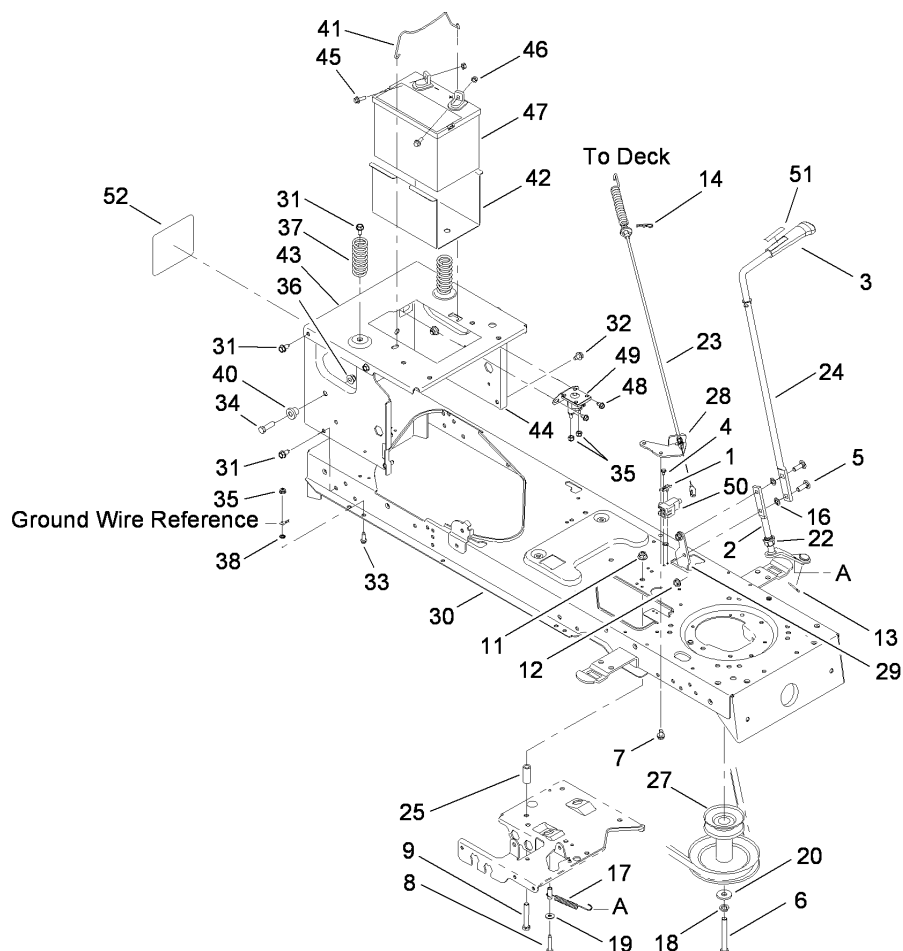 

Frame, Battery and PTO Engage Assembly


Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-6007	1	Lever-Engage, PTO
3	112-6011	1	Knob-PTO
4	112-0651	1	Screw-TAP
5	112-0598	1	Bolt-CARR
6	112-6008	1	Screw-HH
7	112-0676	1	Screw-TAP
8	112-0843	1	Screw-HWH
9	112-0700	1	Screw-HH
11	112-0668	1	Nut-Lock, Flange
12	112-0511	1	Nut-Lock, Flange
13	112-6010	1	Pin-Cotter
14	112-0398	1	Pin-Click
16	112-0645	1	Nut-Push
17	112-0567	1	Spring-Extension
18	112-0428	1	Washer-Lock
19	112-3695	1	Washer-Flat
20	112-0380	1	Washer-Flat
22	112-0384	1	Bearing-Flange, Hex (Split)
23	112-6137	1	Cable-Engage, Deck
24	112-0393	1	Handle-Engage, Deck
25	112-0433	1	Spacer
27	112-0333	1	Pulley-Engine
28	112-6105	1	Bracket-Mount, Cable

Ref	Part No.	Qty.	Description
29	112-0516	1	Bracket-Stop
30	112-5974	1	Lower Frame ASM
31	112-6070	1	Screw-TAP
32	112-0676	1	Screw-TAP
33	112-0587	1	Screw-TAP
34	112-0557	1	Screw-HH
35	112-0636	1	Nut-Lock, Flange
36	112-0668	1	Nut-Lock, Flange
37	112-0501	1	Spring-Compression
38	112-0703	1	Washer-Lock, External
40	112-0661	1	Spacer-Shoulder
41	112-0581	1	Rod-Holddown, Battery
42	112-0570	1	Tray-Battery
43	112-0647	1	Bracket-Frame, Seat
44	112-6107	1	Frame-Upper
45	112-1070	1	Bolt-Carriage
46	112-0546	1	Nut-Sems
47	112-0425	1	Battery-245, Cca (Dry Flat Top)
48	112-6108	1	Screw-TAP
49	112-6073	1	Solenoid-12V, 2 Post 2 Tab
50	112-0455	1	Switch-Interlock
51	112-1274	1	Decal-PTO, Manual
52	112-1284	1	Decal

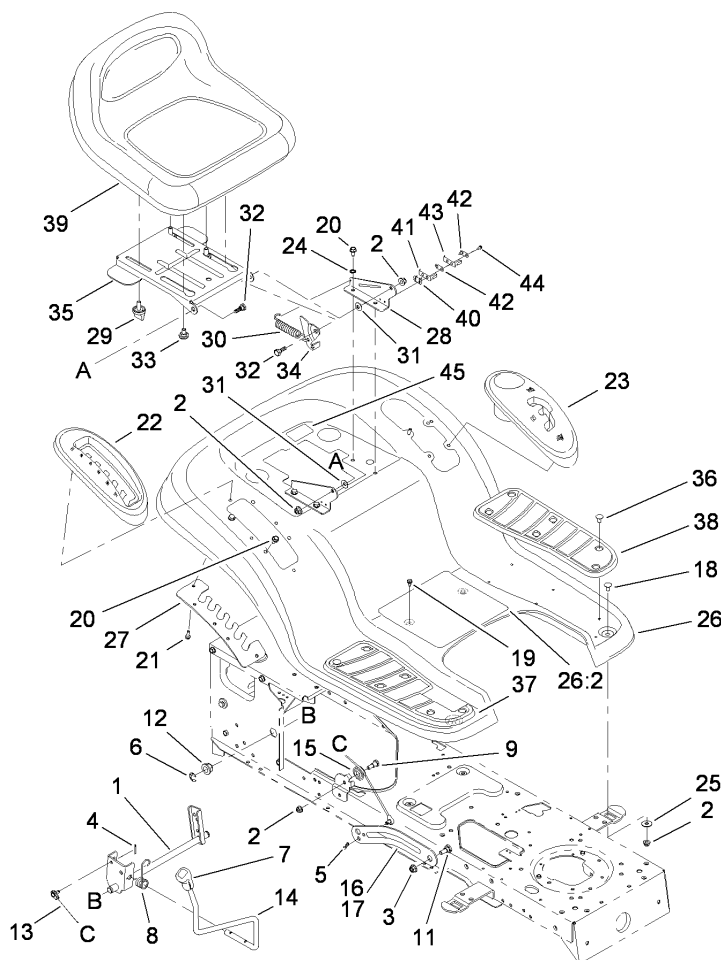 

Seat and Fender Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-5969	1	Lift Shaft ASM	26	112-6112	1	Fender
2	112-0650	1	Nut-Lock, Flange	26:2	112-1262	1	Decal-Danger
3	112-0668	1	Nut-Lock, Flange	27	112-0629	1	Bracket-Adjusting, Lift
4	112-0459	1	Pin-Cotter	28	112-6046	1	Bracket-Mount, Seat
5	112-0568	1	Pin-Cotter	29	112-0409	1	Knob
6	112-0586	1	Ring-E	30	112-0616	1	Spring-Extension
7	112-0585	1	Grip-Handle	31	112-0435	1	Washer-Bell
8	112-0477	1	Spring-Torsion	32	112-0575	1	Bolt-Shoulder
9	112-0443	1	Bolt-Shoulder	33	112-0554	1	Bolt-Shoulder
11	112-0669	1	Bolt-Shoulder	34	112-0646	1	Bracket-Lift, LH
12	112-0347	1	Bearing-Flange	35	112-6113	1	Bracket-Pivot, Seat
13	112-0374	1	Cable-Lift	36	112-0549	1	Clip-Ratchet, Fastener
14	112-5970	1	Handle-Lift	37	112-0540	1	Pad-Foot, RH
15	112-0502	1	Pulley-Roller	38	112-0545	1	Pad-Foot, LH
16	112-6109	1	Arm-Lift, RH	39	112-6114	1	Seat-Medium
17	112-6110	1	Arm-Lift, LH	40	112-0637	1	Plate-Boss, Insulator
18	112-0426	1	Bolt-CARR	41	112-0532	1	Switch-Spring, Inner
19	112-0524	1	Screw-HWHTF	42	112-0635	1	Plate-Insulator
20	112-6070	1	Screw-TAP	43	112-0529	1	Switch-Spring
21	112-0509	1	Screw-TAP	44	112-0626	1	Screw-HWHTF
22	112-0869	1	Cover-Lever, Lift	45	112-1260	1	Decal-Service (Toro Hotline)
23	112-6111	1	Cover-Holder (W/Cup)				
24	112-0517	1	Washer-Lock, External				
25	112-0582	1	Washer-Flat				

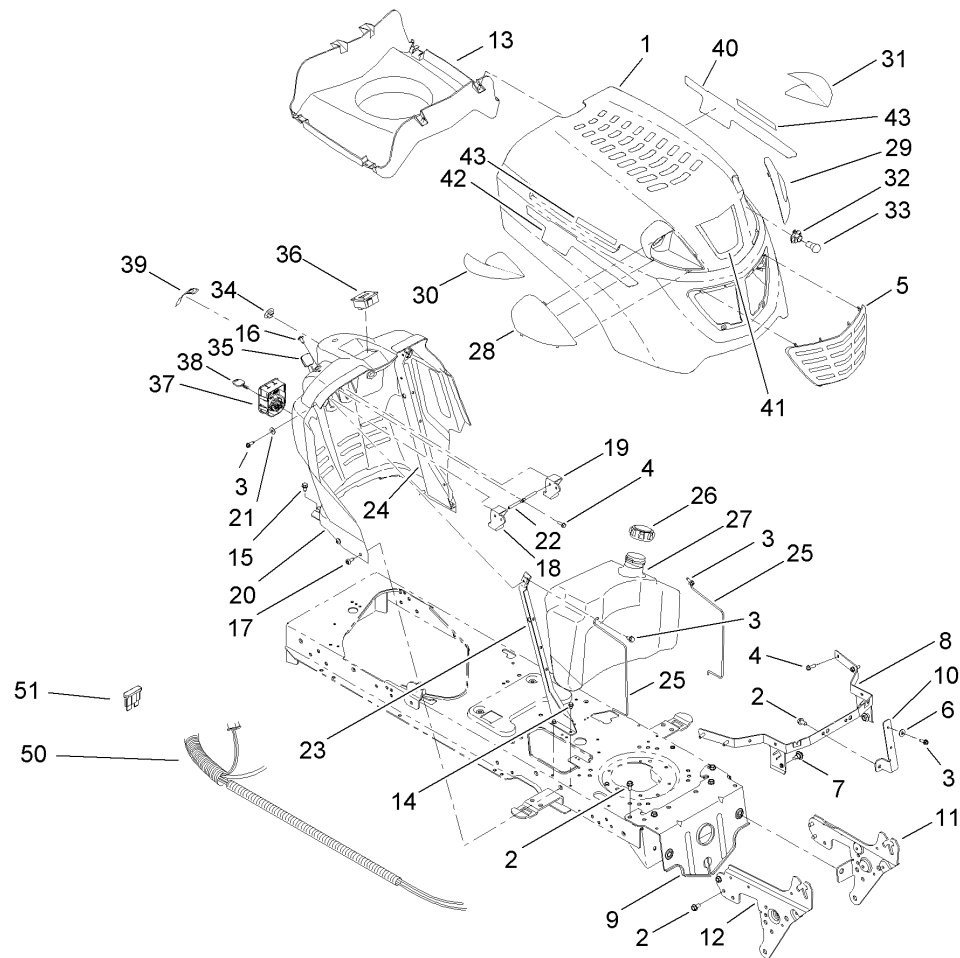 


Fuel Tank, Hood and Dash Assembly

Ref	Part No.	Qty.	Description
1	112-0444	1	Hood
2	112-6070	1	Screw-TAP
3	112-0587	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0381	1	Grill
6	112-3695	1	Washer-Flat
7	112-6128	1	Bolt-Shoulder, TAP
8	112-5985	1	Bracket-Pivot
9	112-6127	1	Bracket-Pivot
10	112-5986	1	Bracket-Support, Hood
11	112-6126	1	Bracket-Pivot, Support (LH)
12	112-6125	1	Bracket-Pivot, Support (RH)
13	112-6124	1	Plenum-Hood
14	112-3696	1	Screw-TAP
15	112-0676	1	Screw-TAP
16	112-0550	1	Screw-TAP
17	112-0563	1	Screw-TAP
18	112-0526	1	Lever-Cruise
19	112-0580	1	Lever-Brake
20	112-6123	1	Dash-Manual, PTO
21	112-0485	1	Washer-Spring
22	112-0604	1	Rod-Lever, Bent
23	112-6122	1	Support-Dash, RH
24	112-6121	1	Support-Dash, LH

Ref	Part No.	Qty.	Description
25	112-0678	1	Rod-Support
26	112-6120	1	Cap-Fuel
27	112-6119	1	Tank-Fuel, 3 Gal
28	112-0447	1	Lens-RH
29	112-0446	1	Lens-LH
30	112-5810	1	Reflector-RH
31	112-5811	1	Reflector-LH
32	112-0408	1	Socket-Headlight
33	112-0402	1	Lamp-12V, Miniature
34	112-0535	1	Plug-Choke
35	112-6118	1	Cable-Throttle / Choke
36	112-6117	1	Meter-Hour
37	112-6116	1	Module-Switch, Ignition
38	112-6115	1	Key-Ignition
39	112-1271	1	Decal-Throttle, Dash
40	112-5952	1	Decal-Hood, Left Side
41	112-3716	1	Decal-Hood
42	112-5953	1	Decal-Hood, Right Side
43	112-6189	1	Decal
50	112-6187	1	Harness-Wire
51	112-5943	1	Fuse-20 Amp

 Transimission, Brake and Traction Pedal Assembly

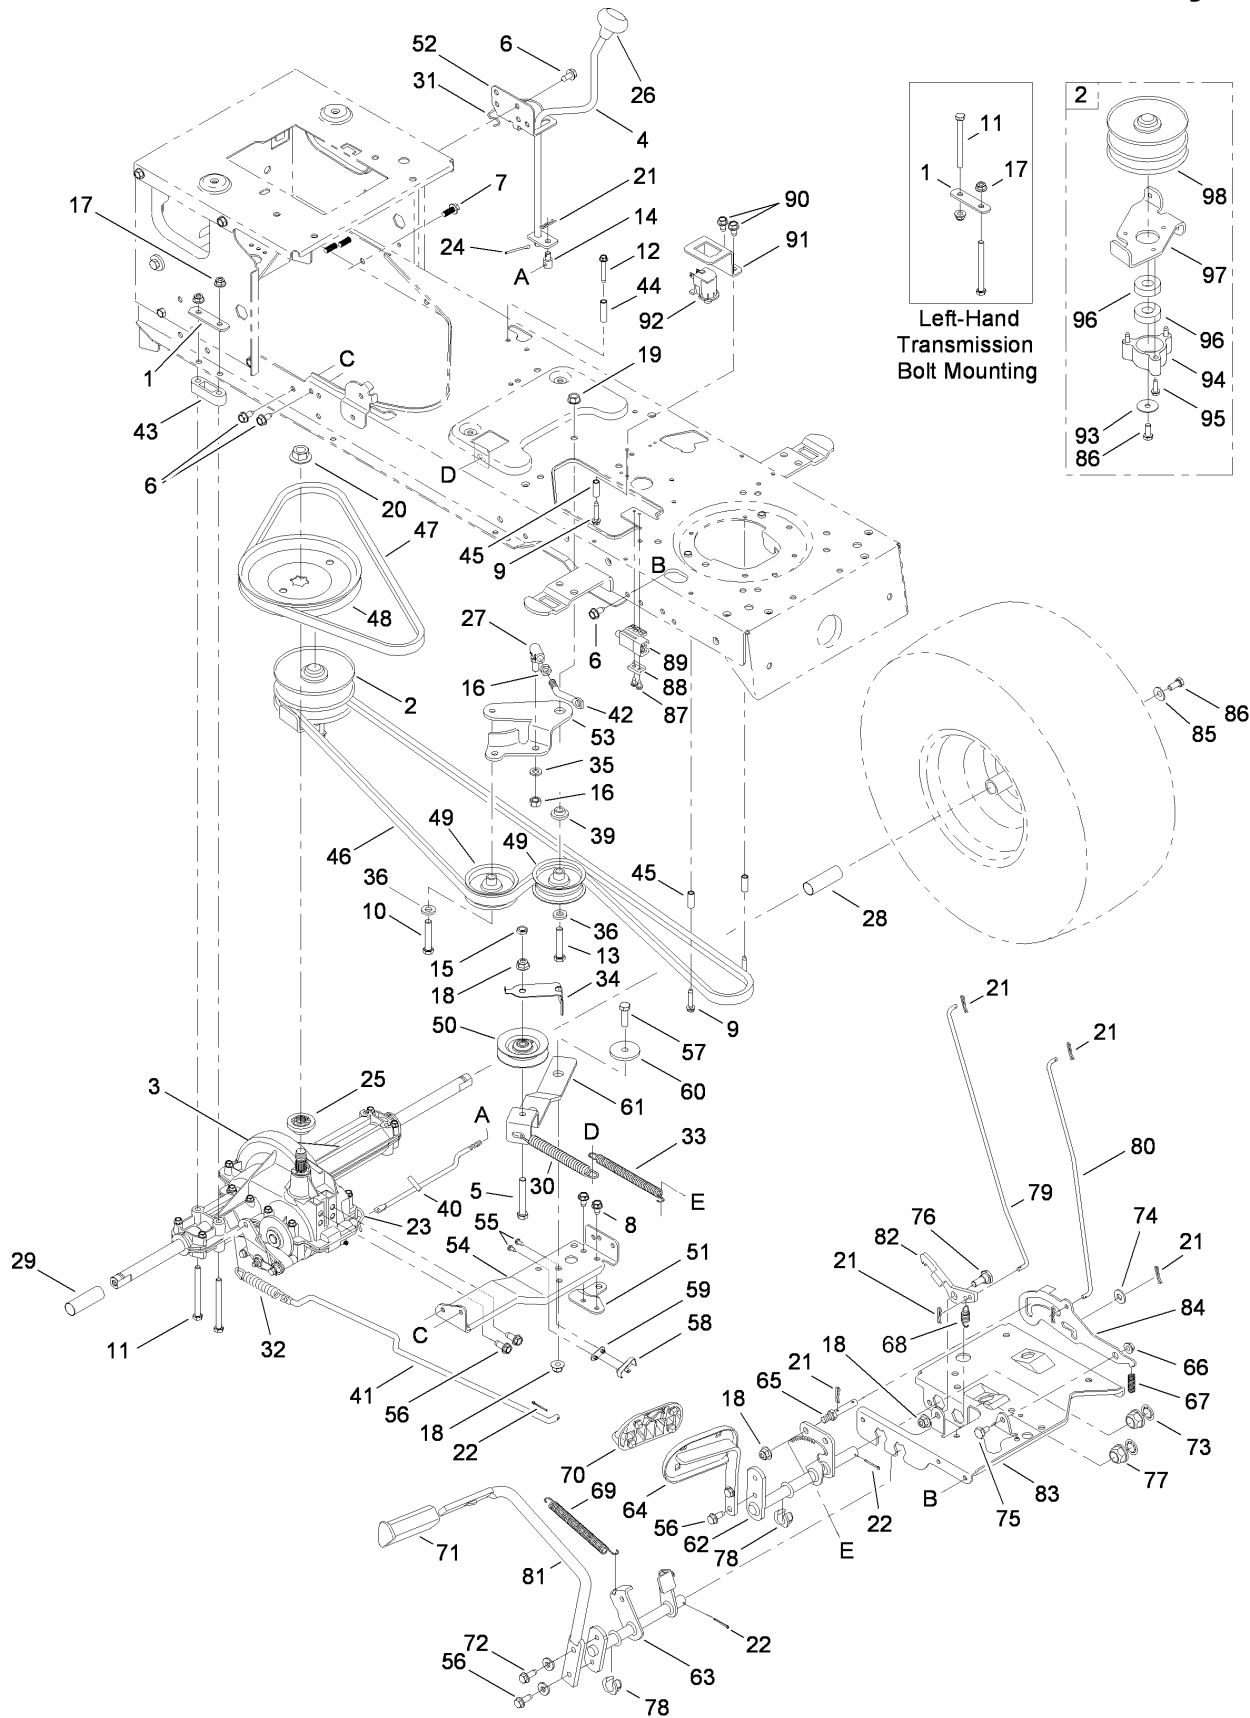


Transmission, Brake and Traction Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
2	112-6129	1	Pulley ASM
3	112-6083	1	Single Speed Transaxle ASM
4	112-0627	1	Shift Lever ASM
5	112-6130	1	Screw-HH
6	112-6070	1	Screw-TAP
7	112-6131	1	Screw-HH
8	112-0676	1	Screw-TAP
9	112-0603	1	Screw-HH
10	112-0469	1	Screw-TAP
11	112-0667	1	Screw-HH
12	112-0839	1	Screw-TAP
13	112-0421	1	Screw-HH
14	112-0592	1	Ferrule-Adjustable
15	112-6132	1	Nut-Jam, Lock
16	112-0343	1	Nut-Hex
17	112-0650	1	Nut-Lock, Flange
18	112-0668	1	Nut-Lock, Flange
19	112-0385	1	Nut-Lock, Flange
20	112-0451	1	Nut-Flange
21	112-0459	1	Pin-Cotter
22	112-0568	1	Pin-Cotter
23	112-0639	1	Pin-Hair
24	112-0412	1	Pin-Cotter
25	112-0450	1	Hub-Pulley
26	112-0514	1	Knob-Shift
27	112-0306	1	Ball Joint ASM
28	112-0670	1	Sleeve
29	112-0683	1	Sleeve
30	112-5991	1	Spring-Extension
31	112-0357	1	Clip-Spring, Shifter
32	112-0350	1	Spring-Extension
33	112-0348	1	Spring-Extension
34	112-5883	1	Guide-Belt, Traction
35	112-0415	1	Washer-Lock
36	112-0544	1	Washer-Flat
39	112-0345	1	Spacer-Shoulder
40	112-5992	1	Rod-Shift
41	112-0655	1	Rod-Brake
42	112-0538	1	Rod-Adjustment, Idler
43	112-0673	1	Spacer-Transaxle
44	112-5831	1	Spacer
45	112-0644	1	Spacer
46	112-0301	1	Belt-Drive, Variable Speed
47	112-0305	1	Belt-Drive, Transmission
48	112-0379	1	Pulley-V (W/Hub)
49	112-0313	1	Pulley-Idler, Flat
50	112-6133	1	Pulley-Idler, V-Type
51	112-0701	1	Bracket-Shift
52	112-0638	1	Bracket-Shift
53	112-0525	1	Bracket-Idler, Center Double
54	112-6134	1	Bracket ASM

Ref	Part No.	Qty.	Description
55	112-0626	1	Screw-HWHTF
56	112-0395	1	Screw-HWH
57	112-0557	1	Screw-HH
58	112-0602	1	Switch-Spring, Short
59	112-0625	1	Plate-Insulator
60	112-0584	1	Spacer-Shoulder
61	112-6135	1	Bracket-Idler
62	112-0539	1	Speed Control ASM
63	112-5998	1	Speed Control ASM
64	112-0680	1	Pedal ASM
65	112-0599	1	Pin
66	112-0511	1	Nut-Lock, Flange
67	112-0506	1	Spring
68	112-0510	1	Spring-Extension
69	112-0348	1	Spring-Extension
70	112-0543	1	Pad-Pedal
71	112-6001	1	Pad-Brake
72	112-0366	1	Washer-Lock
73	112-0339	1	Washer-Flat
74	112-0541	1	Washer-Flat
75	112-0542	1	Bolt-Shoulder
76	112-0442	1	Bolt-Shoulder
77	112-0347	1	Bearing-Flange
78	112-0387	1	Bearing-Flange, Hex (Split)
79	112-0675	1	Rod-Brake, Lock Control
80	112-0662	1	Rod-Control, Cruise
81	112-6005	1	Pedal-Brake
82	112-6004	1	Latch-Cruise
83	112-0681	1	Bracket-Support, Steering
84	112-0679	1	Bracket-Lockout
85	112-0435	1	Washer-Bell
86	112-0551	1	Screw-HH
87	112-0651	1	Screw-TAP
88	112-0671	1	Plate-Switch
89	112-0455	1	Switch-Interlock
90	112-0524	1	Screw-HWHTF
91	112-3737	1	Bracket-Switch, Parking Brake
92	112-0441	1	Switch-Mount, Snap
93	112-0500	1	Washer-Flat
94	112-5996	1	Cup-Bearing
95	112-0843	1	Screw-HWH
96	112-0928	1	Bearing-Ball
97	112-5995	1	Bracket-Pulley
98	112-6129	1	Pulley ASM

 
Single Speed Transmission Assembly No. 112-6083

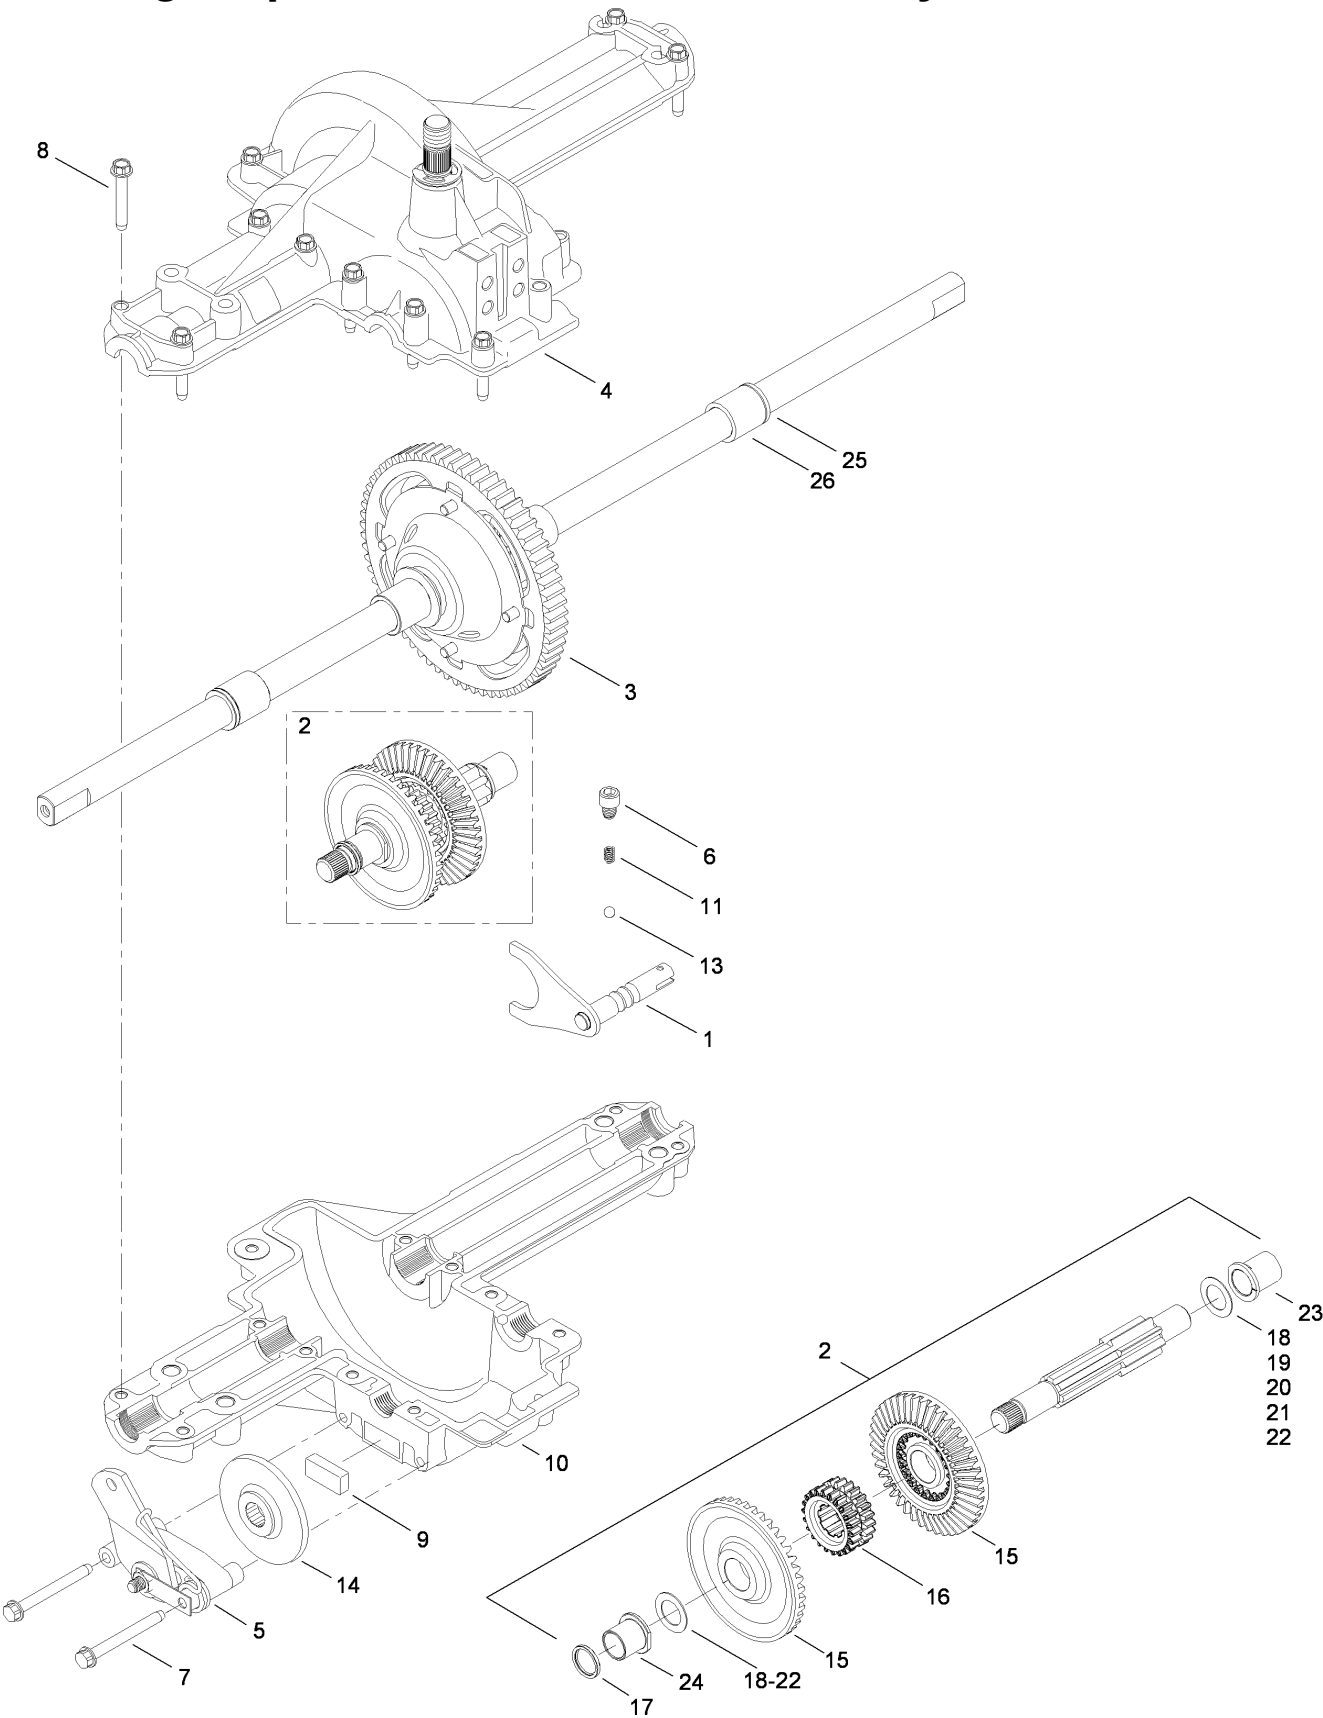

Single Speed Transmission Assembly No. 112-6083

Ref	Part No.	Qty.	Description				
1	112-0806	1	Shift Fork ASM				
2	112-6084	1	Drive Shaft ASM				
3	112-6085	1	Differential ASM				
4	112-6086	1	Upper Housing ASM				
5	112-0832	1	Brake ASM				
6	112-6087	1	Screw-TAP				
7	112-0698	1	Screw-HWH				
8	112-0839	1	Screw-TAP				
9	112-0741	1	Puck-Brake				
10	112-6088	1	Housing-Lower				
11	112-0801	1	Spring-Detent				
13	112-0799	1	Ball-Detent				
14	112-0817	1	Disc-Brake				
15	112-6089	1	Gear-Bevel, 42T (Spline)				
16	112-6090	1	Collar-Cluster				
17	112-6091	1	Seal				
18	112-0748	1	Washer-Flat				
19	112-0750	1	Washer-Flat				
20	112-0745	1	Washer-Flat				
21	112-0773	1	Washer-Thrust				
22	112-0755	1	Washer-Thrust				
23	112-0794	1	Bearing-Flange				
24	112-0795	1	Bearing-Flange				
25	112-0800	1	Seal				
26	112-6092	1	Bearing-Sleeve				

 
Deck Assembly

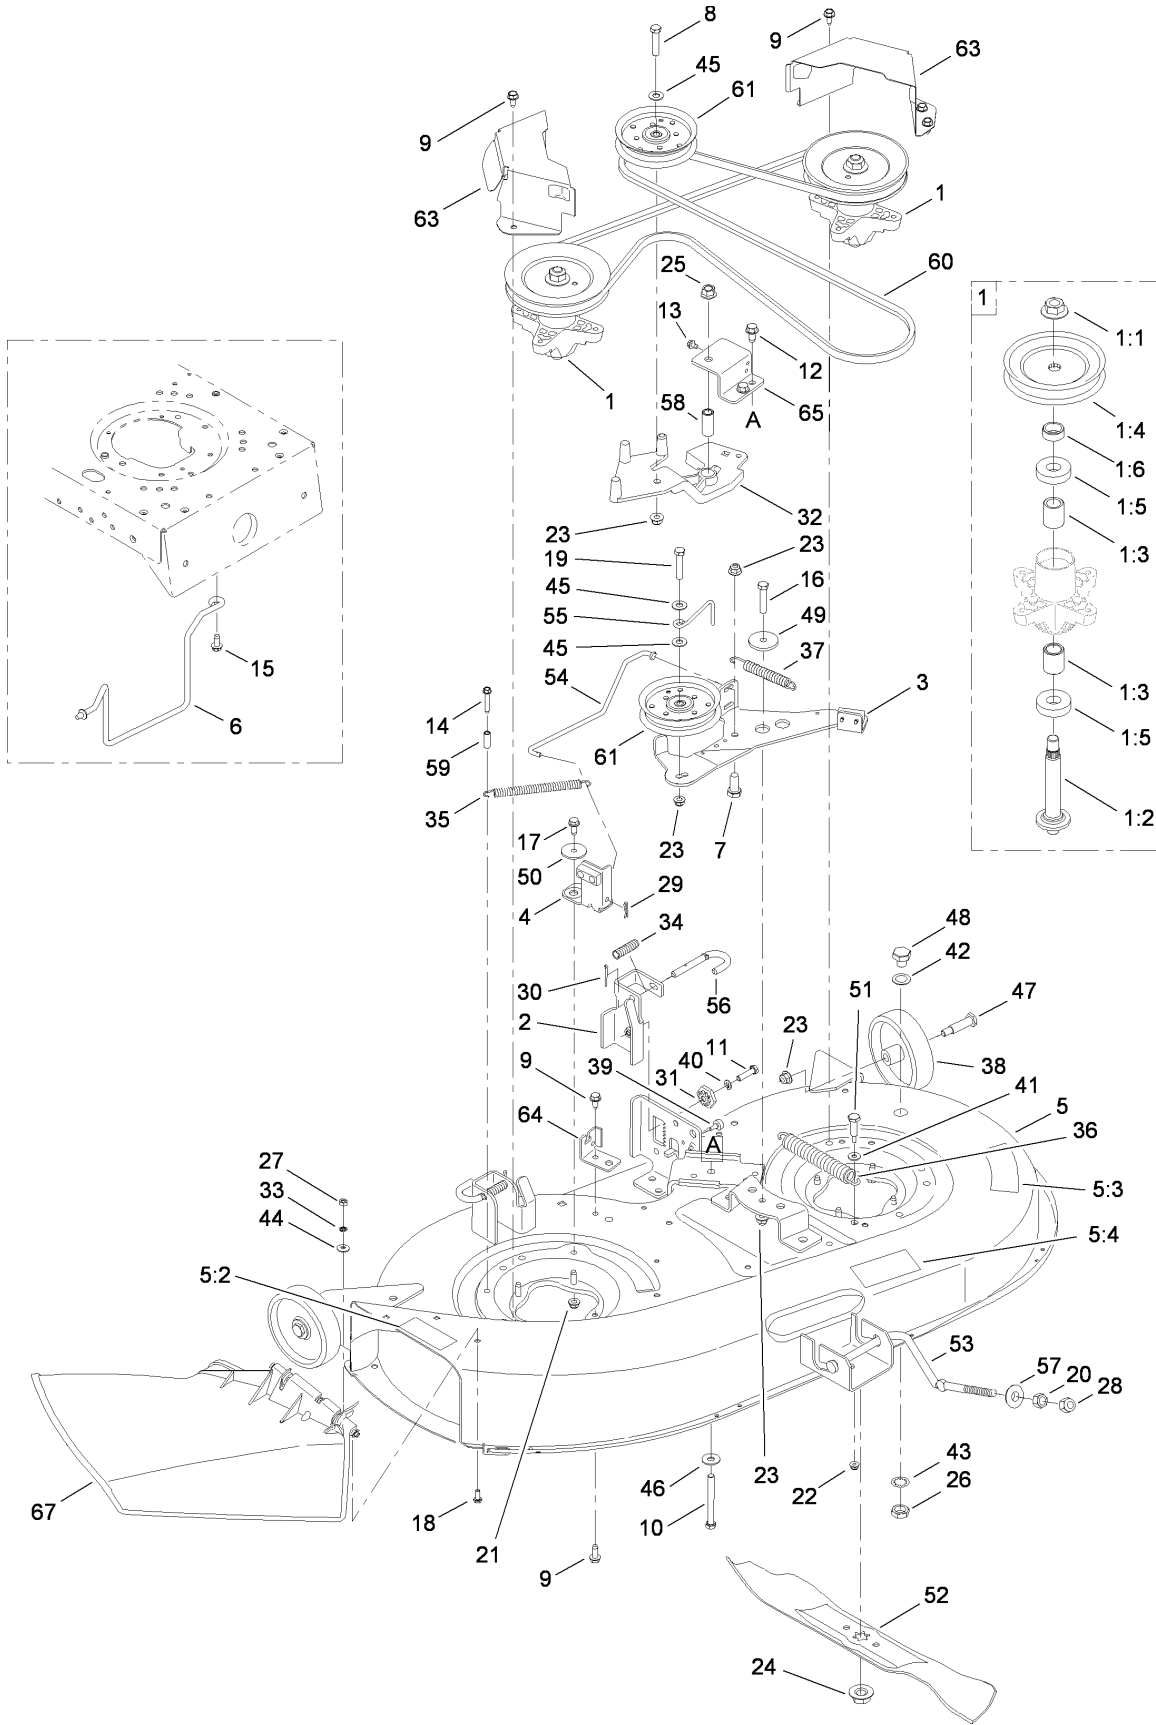

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-6063	1	Spindle ASM
1:1	112-0330	1	Nut-Flange, Hex
1:2	112-6062	1	Shaft-Spindle
1:3	112-0389	1	Spacer
1:4	112-0613	1	Pulley-Deck
1:5	112-0377	1	Bearing-Ball
1:6	112-6061	1	Spacer
2	112-0413	1	LH Hanger Bracket ASM
3	112-0606	1	Deck Brake ASM
4	112-3742	1	Brake ASM
5	112-5857	1	Deck And Decal ASM
5:2	112-1267	1	Decal-Danger
5:3	112-1265	1	Decal-Danger
5:4	112-1270	1	Decal-Routing, Belt
6	112-6071	1	Rod-Keeper, Belt
7	112-0855	1	Screw-HH
8	112-0513	1	Screw-HH
9	112-6070	1	Screw-TAP
10	112-3745	1	Screw-HH
11	112-0373	1	Screw-HH
12	112-0906	1	Screw-HWHTF
13	112-6022	1	Screw-TAP
14	112-0843	1	Screw-HWH
15	112-0395	1	Screw-HWH
16	112-0557	1	Screw-HH
17	112-1090	1	Screw-HH
18	112-0499	1	Screw-HH
19	112-0421	1	Screw-HH
20	112-0458	1	Nut-Hex
21	112-0650	1	Nut-Lock, Flange
22	112-0636	1	Nut-Lock, Flange
23	112-0668	1	Nut-Lock, Flange
24	112-0330	1	Nut-Flange, Hex
25	112-0859	1	Nut-Lock, Flange
26	112-0351	1	Nut-Hex
27	112-0522	1	Nut-Hex
28	112-0476	1	Nut-Lock, Hex (Nylon)
29	112-0459	1	Pin-Cotter
30	112-0412	1	Pin-Cotter
31	112-0327	1	Gear-Adjustment, Deck
32	112-6069	1	Bracket-Idler
33	112-0623	1	Retainer-Bolt
34	112-0406	1	Spring-Compression
35	112-0528	1	Spring-Extension
36	112-6043	1	Spring-Extension
37	112-3746	1	Spring-Extension
38	112-0337	1	Wheel-Deck, Rear
39	112-1016	1	Bumper
40	112-0366	1	Washer-Lock
41	112-3695	1	Washer-Flat
42	112-0339	1	Washer-Flat
43	112-0643	1	Washer-Lock

Ref	Part No.	Qty.	Description
44	112-0485	1	Washer-Spring
45	112-0572	1	Washer-Flat
46	112-0380	1	Washer-Flat
47	112-0334	1	Bolt-Shoulder
48	112-0577	1	Plug
49	112-0584	1	Spacer-Shoulder
50	112-3747	1	Spacer-Shoulder
51	112-6068	1	Bolt-Shoulder
52	112-0315	1	Blade
53	112-0607	1	Rod-Deck, Front Adjustment
54	112-3748	1	Rod-Brake
55	112-5879	1	Rod-Keeper, Belt
56	112-0436	1	Pin-Handle, Deck Release
57	112-0641	1	Cup-Pivot, Lift
58	112-3749	1	Spacer
59	112-0644	1	Spacer
60	112-5800	1	Belt-V Type
61	112-0314	1	Pulley-Idler
63	112-6067	1	Cover-Belt
64	112-0718	1	Bracket-Cable, Deck
65	112-6066	1	Support-Bracket, Pivot
67	112-0353	1	Discharge Chute ASM

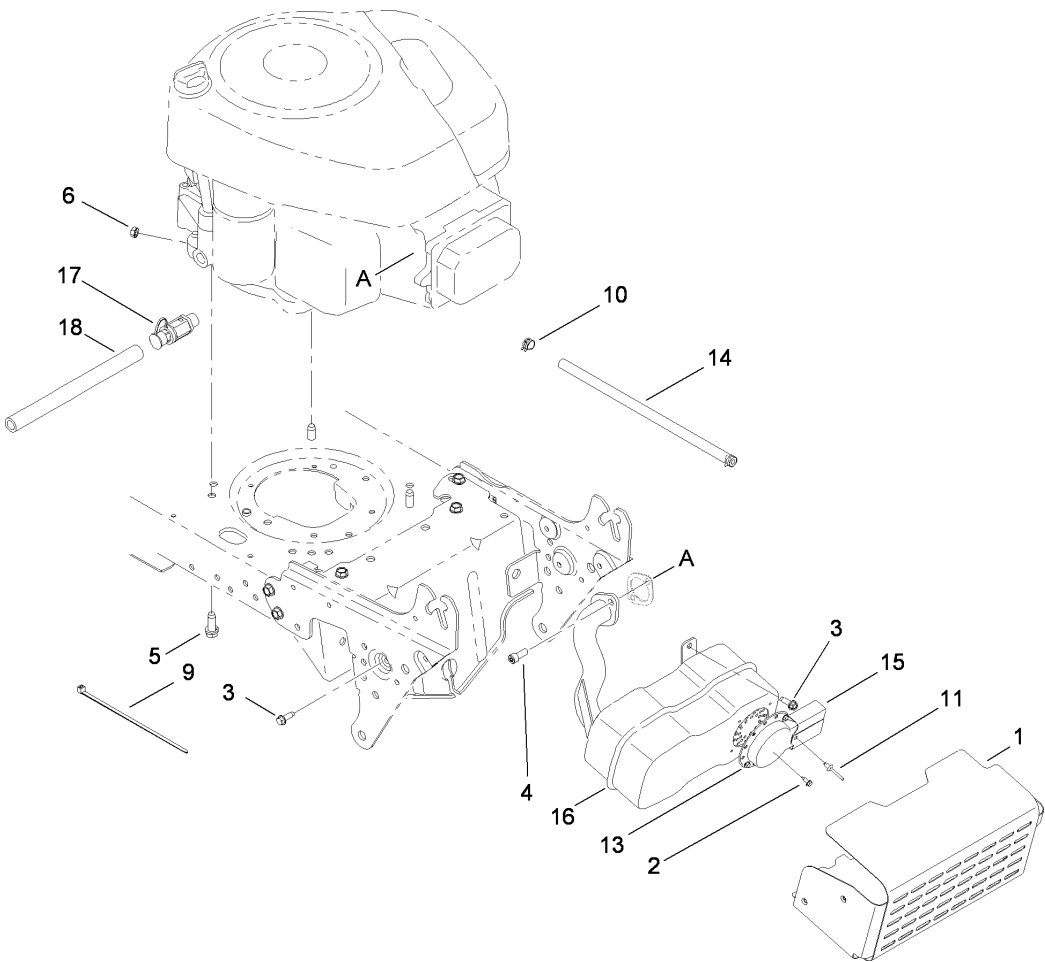 

Muffler and Guard Assembly

Ref	Part No.	Qty.	Description				
1	112-6096	1	Shield-Muffler				
2	112-0626	1	Screw-HWHTF				
3	112-0587	1	Screw-TAP				
4	112-6012	1	Screw-HSH				
5	112-0487	1	Screw-TAP				
6	112-0546	1	Nut-Sems				
9	112-0527	1	Tie-Cable				
10	112-0573	1	Clamp-Hose				
11	112-3741	1	Rivet-Pop				
13	112-0453	1	Deflector-Muffler				
14	112-0720	1	Hose-Fuel				
15	112-0730	1	Deflector-Muffler, Long				
16	112-6095	1	Muffler-Single Inlet				
17	112-6094	1	Drain-Oil				
18	112-0553	1	Hose-Drain				

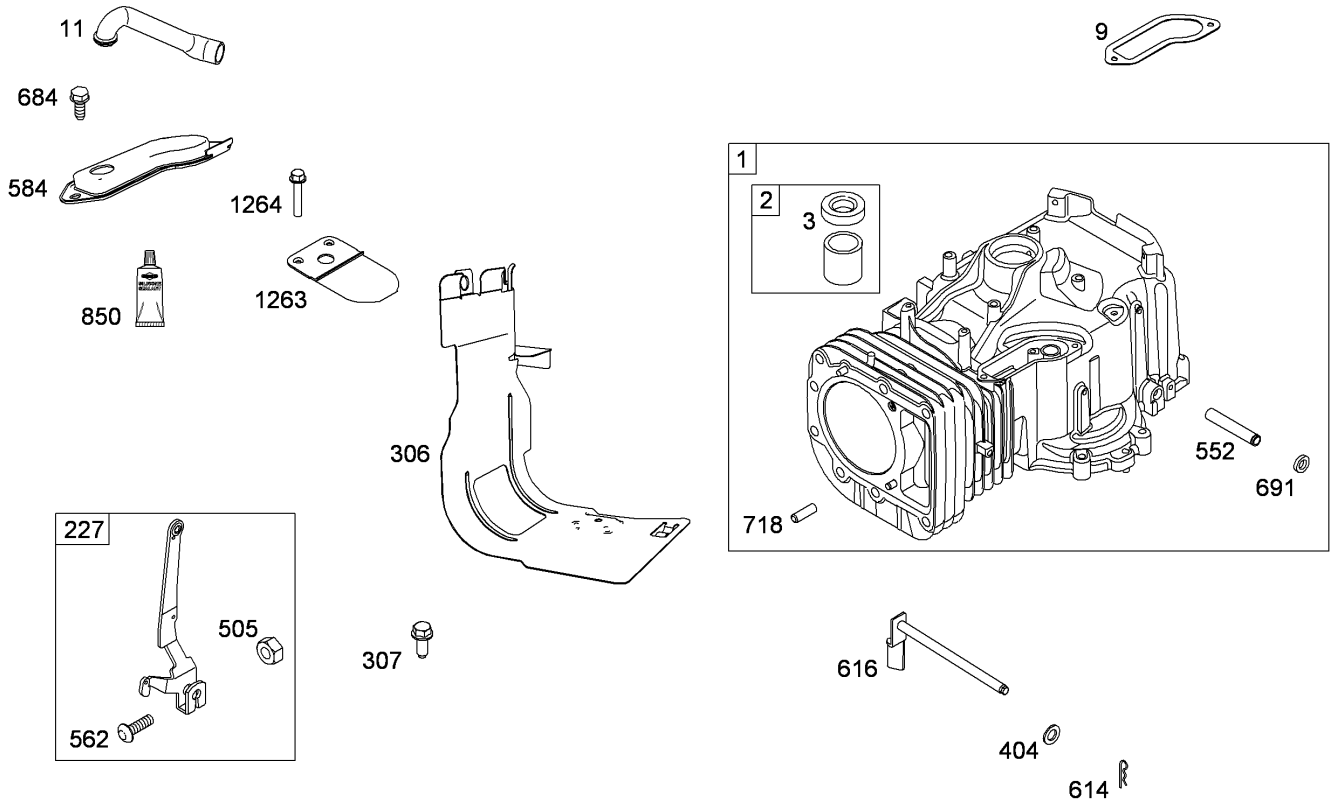 

1330 Repair Manual

48 Short Block

1058 Operator Manual







Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
1	794128	1	Cylinder Assembly
2	399265	1	Bushing And Seal Kit (Magneto Side)
3	391086s	1	Seal-Oil (Magneto Side)
9	697109	1	Gasket-Breather
11	794683	1	Tube-Breather
48	795446	1	Short Block
227	691374	1	Lever-Control, Governor
306	794953	1	Shield-Cylinder
307	691003	1	Screw (Cylinder Shield)
404	691691	1	Washer (Governor Crank)
505	691251	1	Nut (Governor Control Lever)
552	697144	1	Bushing-Crank, Governor
562	691119	1	Bolt (Governor Control Lever)
584	794682	1	Cover-Passage, Breather (Use With Liquid Sealant, Ref 850)
614	691620	1	Pin-Cotter
616	692012	1	Crank-Governor
684	697157	1	Screw (Breather Passage Cover)
691	692407	1	Seal-Shaft, Governor
718	690959	1	Pin-Locating
850	100106	1	Sealant-Liquid
1058	276352	1	Operator Manual
1263	697124	1	Reed-Breather

Ref	Part No.	Qty.	Description
1264	697104	1	Screw (Breather Reed)
1330	273521	1	Repair Manual

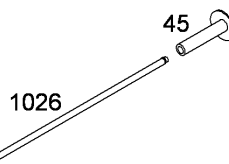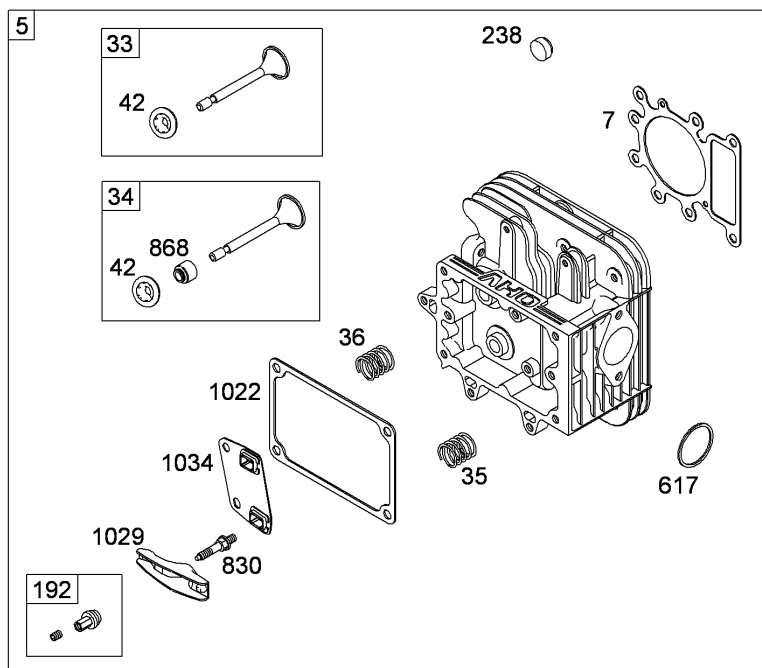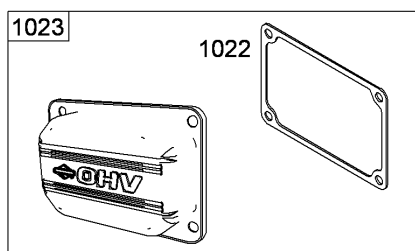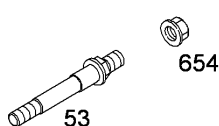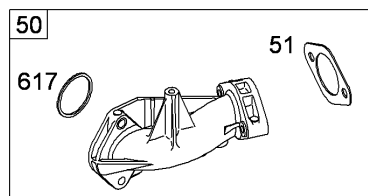      


Assemblies include all parts shown in frames

Cylinder Head Assembly

Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
25	796005	1	Head-Cylinder
247	794114	1	Gasket-Head, Cylinder
5			
213	793988	1	Screw (Cylinder Head)
233	792688	1	Valve-Exhaust
234	791935	1	Valve-Intake
235	691279	1	Spring-Valve (Intake)
236	691279	1	Spring-Valve (Exhaust)
242	499586	1	Keeper-Valve
245	690564	1	Tappet-Valve
250	690193	1	Manifold-Intake
251	692137	1	Gasket-Intake
45			
253	690227	1	Stud (Carburetor)
254	691148	1	Screw (Intake Manifold)
2192	691986	1	Adjustor-Arm, Rocker
2238	691843	1	Cap-Valve
2337	491055s	1	Plug-Spark
2383	89838s	1	Wrench-Spark Plug
25617	692138	1	Seal-O Ring (Intake Manifold)
4			(Red)
2635	691909	1	Boot-Spark Plug
2654	690958	1	Nut (Carburetor)
2830	691095	1	Stud-Arm, Rocker


Ref	Part No.	Qty.	Description
2850	100106	1	Sealant-Liquid (Use To Install Rocker Cover)
24868	690968	1	Seal-Valve
5			
2914	697551	1	Screw (Rocker Cover)
241022	272475s	1	Gasket-Cover, Rocker
5			
21023	791079	1	Cover-Rocker (Use With Liquid Sealant, Ref 850)
21026	692003	1	Rod-Push (Intake)
21026	692011	1	Rod-Push (Exhaust)
21029	691751	1	Arm-Rocker
21034	690822	1	Guide-Rod, Push

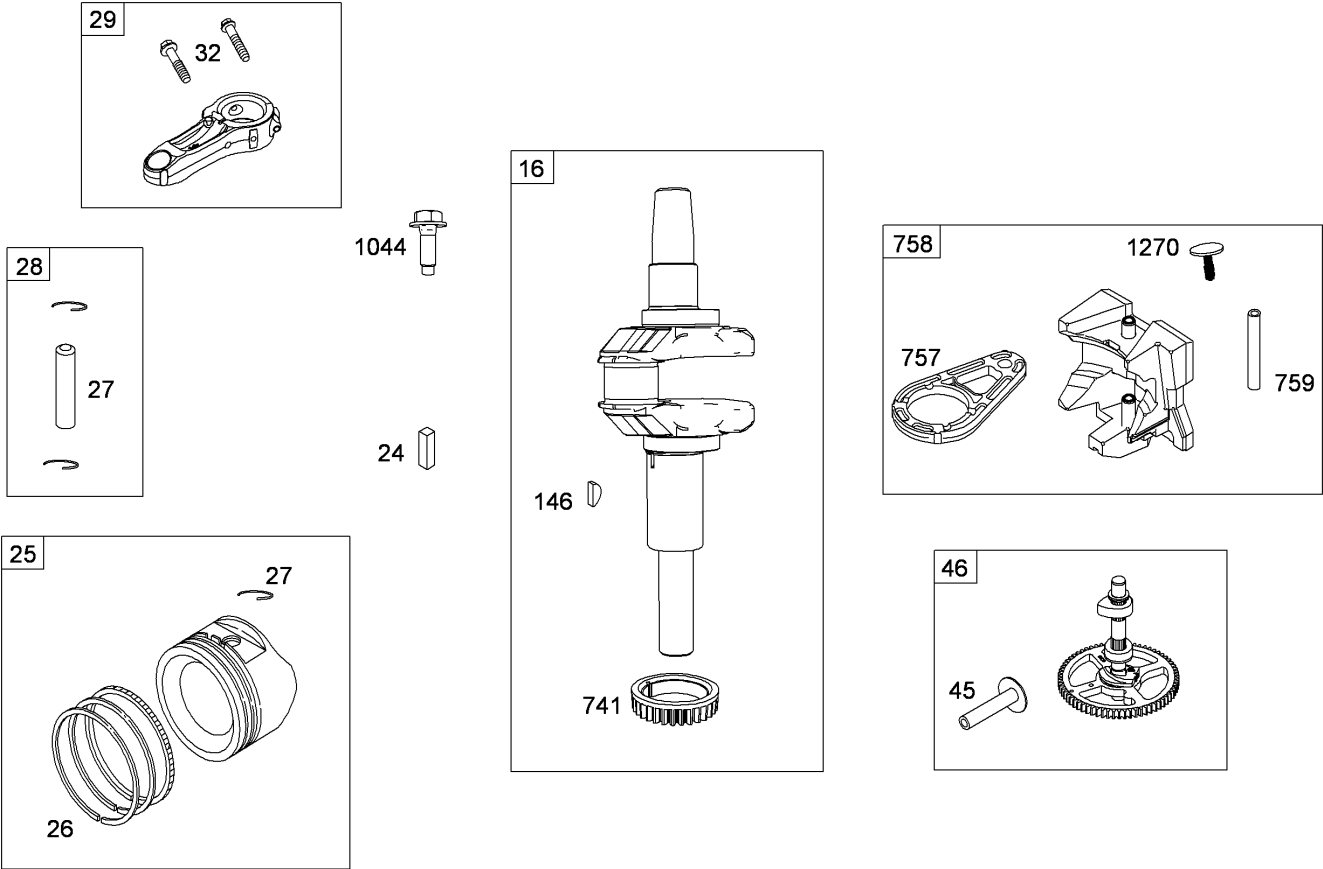 

Assemblies include all parts shown in frames

Crankshaft and Piston/Ring Assembly
Briggs and Stratton 331777-0946-B2


Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	794124	1	Piston ASM (Standard)				
25	794125	1	Piston ASM (.020 Oversize)				
26	794126	1	Ring Set (Standard)				
26	794127	1	Ring Set (.020 Oversize)				
27	698469	1	Lock-Pin, Piston				
28	794143	1	Pin-Piston				
29	794122	1	Rod-Connecting				
32	791118	1	Screw (Connecting Rod)				
45	690564	1	Tappet-Valve				
46	793880	1	Camshaft				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	793242	1	Link-Counterweight				
758	793763	1	Counterweight				
759	697392	1	Pin-Counterweight				
1044	698139	1	Screw (Flywheel)				
1270	793243	1	Plug-Counterweight, A V S				

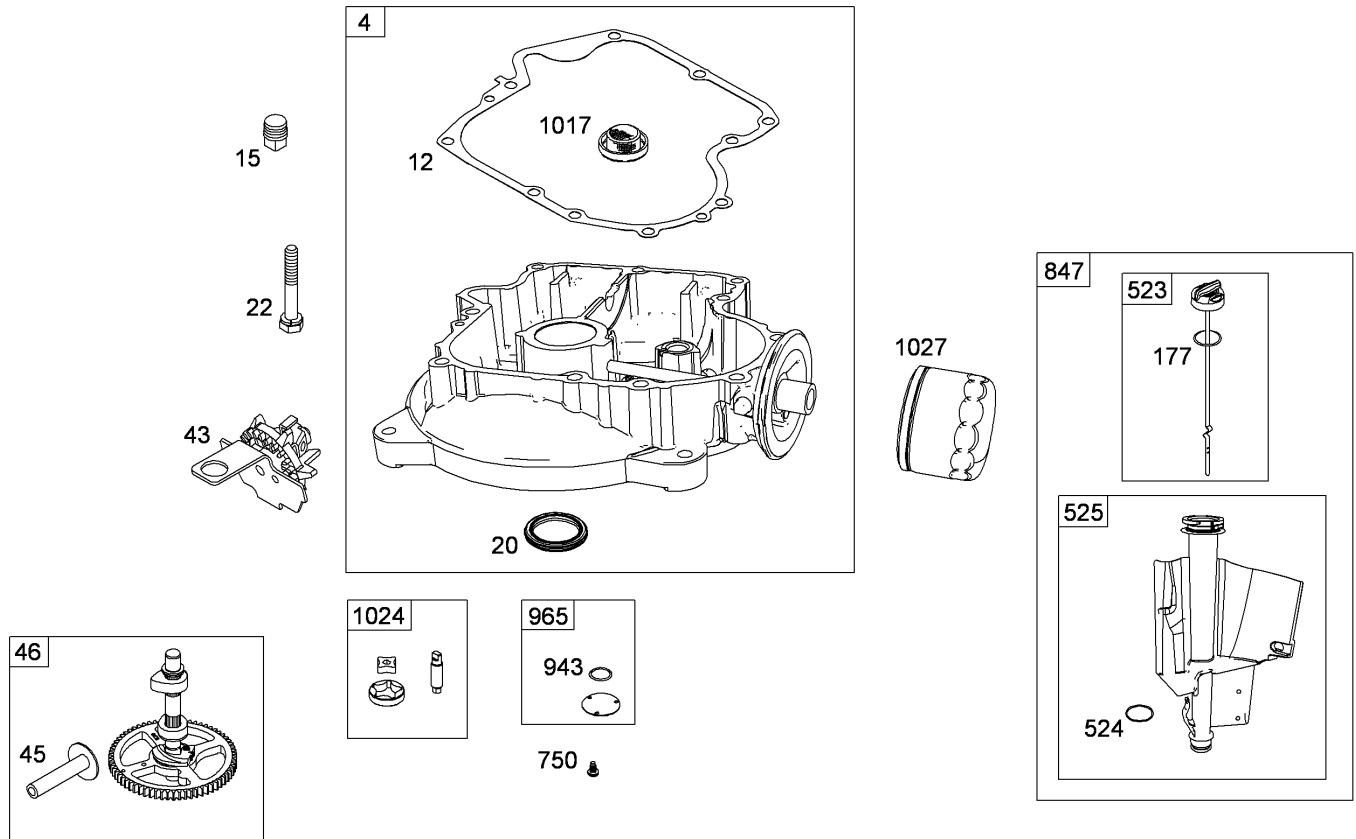 

Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2


Ref	Part No.	Qty.	Description				
2 4	795993	1	Sump-Engine				
2 412	697110	1	Gasket-Crankcase				
2 15	690946	1	Plug-Drain, Oil				
2 420	795387	1	Seal-Oil (PTO Side)				
2 22	692125	1	Screw (Crankcase/Cover/Sump)				
2 43	691968	1	Slinger-Governor, Oil				
2 45	690564	1	Tappet-Valve				
2 46	793880	1	Camshaft				
2 4177	691031	1	Seal-O Ring (Dipstick Tube)				
2 523	699908	1	Dipstick				
2 4524	691032	1	Seal-O Ring (Dipstick Tube)				
2 525	697184	1	Tube-Dipstick				
2 750	790832	1	Screw (Oil Pump Cover)				
2 847	790442	1	Dipstick And Tube ASM				
2 4943	690589	1	Seal-O Ring (Oil Pump Cover)				
2 965	499613	1	Cover-Pump, Oil				
2 1017	690770	1	Screen-Pump, Oil				
2 1024	794644	1	Pump-Oil				
2 1027	492932s	1	Filter-Oil				

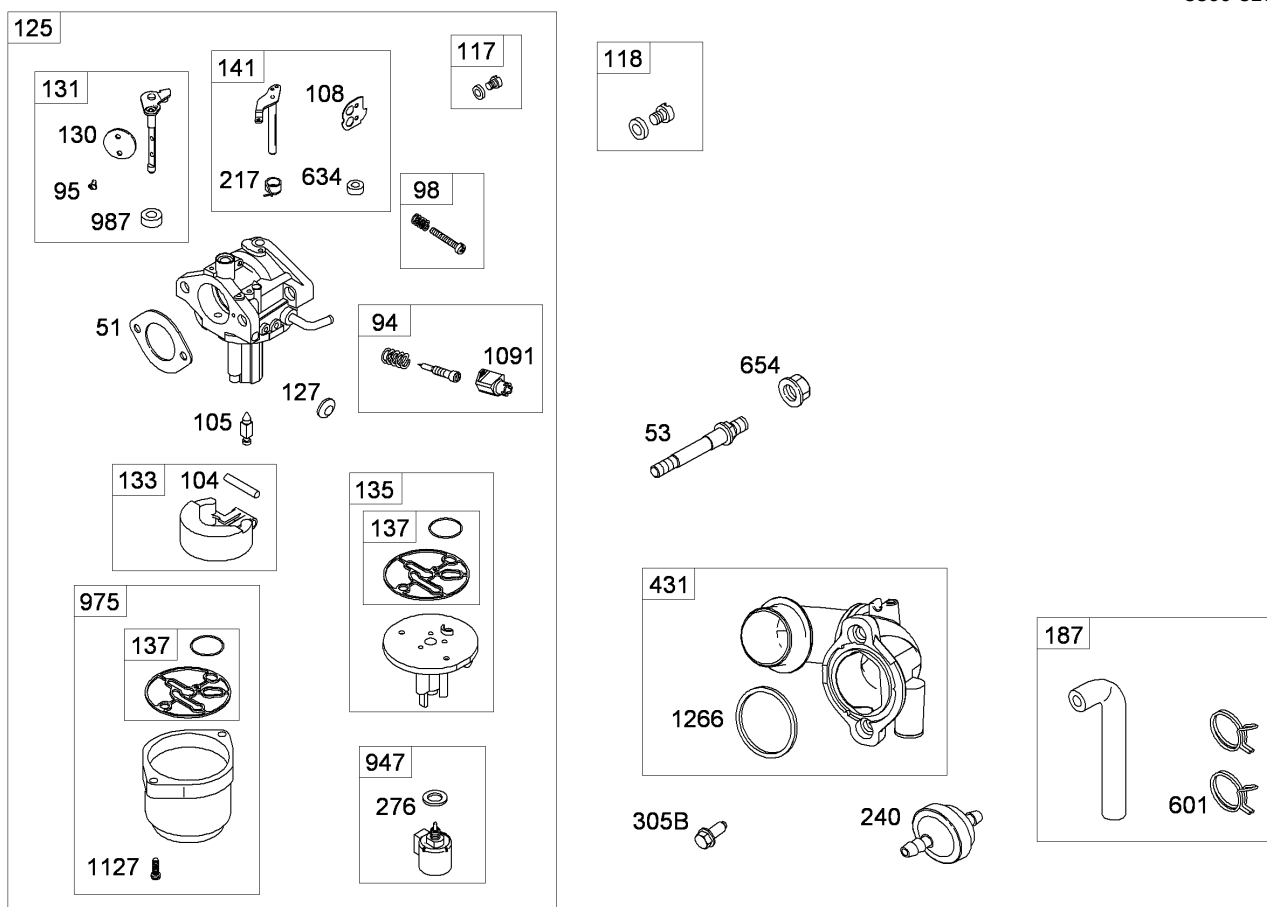 

Assemblies include all parts shown in frames

Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2 51	692137	1	Gasket-Intake	2 305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)
1 5				2 431	794145	1	Elbow-Intake
2 53	690227	1	Stud (Carburetor)	2 601	791850	1	Clamp-Hose
2 94	793610	1	Idle Mixture Kit	2 634	698779	1	Spring And Seal ASM (Choke Shaft)
2 95	690718	1	Screw (Throttle Valve)	2 654	690958	1	Nut (Carburetor)
2 98	695408	1	Idle Speed Kit	2 947	699915	1	Solenoid, Fuel
2 104	694918	1	Pin-Hinge, Float	2 975	699502	1	Bowl-Float
2 105	696136	1	Valve-Float, Needle	2 987	698777	1	Seal-Shaft, Throttle
2 108	695419	1	Valve-Choke	2 1091	691333	1	Cap-Limiter
2 117	791501	1	Jet-Main (Standard)	2 1127	695407	1	Screw (Float Bowl)
2 118	843099	1	Jet-Main (High Altitude)	2 1266	691917	1	Seal-O Ring (Intake Elbow) (Red)
2 125	794136	1	Carburetor	4			
2 127	690727	1	Plug-Welch				
2 130	792747	1	Valve-Throttle				
2 131	792765	1	Throttle Shaft Kit				
2 133	694914	1	Carburetor Float ASM				
2 135	698780	1	Fuel Transfer Tube ASM				
2 137	698781	1	Gasket-Bowl, Float				
2 141	792777	1	Choke Shaft Kit				
2 187	791805	1	Line-Fuel (Formed) (Cut To Required Length)				
2 217	695409	1	Spring-Return, Choke				
2 240	394358s	1	Filter-Fuel				
2 276	695410	1	Washer-Sealing				

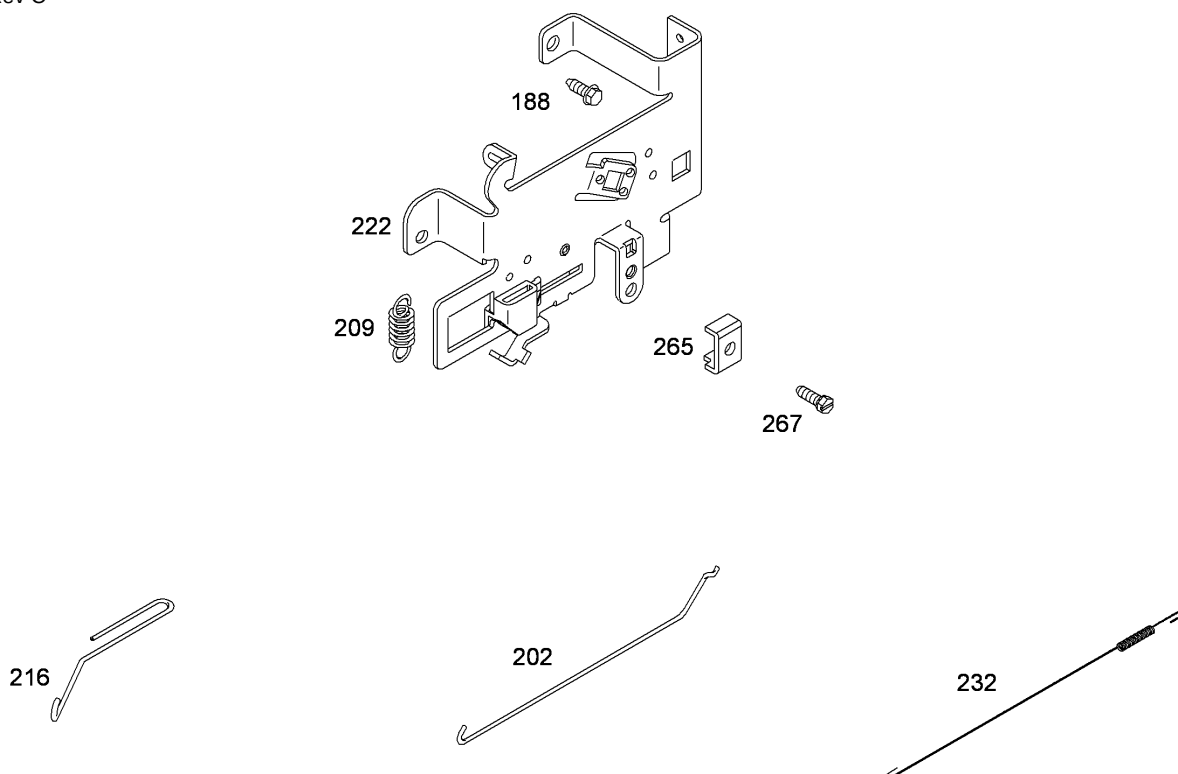 


Assemblies include all parts shown in frames

Governor Control Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description				
2188	691693	1	Screw (Control Bracket)				
2202	691841	1	Link-Governor, Mechanical				
2209	692208	1	Spring-Governor (Green)				
2216	691840	1	Link-Choke				
2222	694042	1	Bracket-Control				
2232	691842	1	Spring-Link, Governor				
2265	691024	1	Clamp-Casing				
2267	794904	1	Screw (Casing Clamp)				

 
1036 Emissions Label

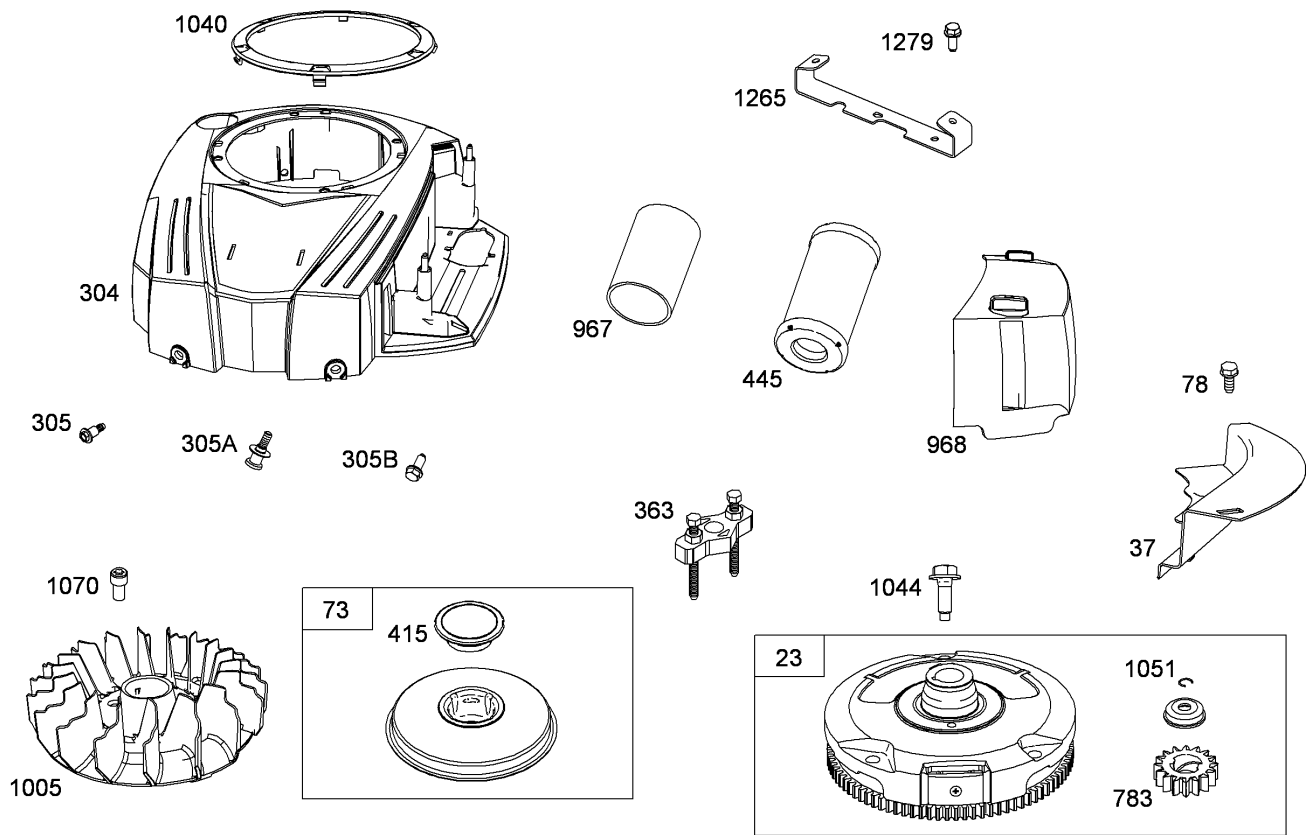

Assemblies include all parts shown in frames

Blower Housing, Flywheel and Air Guide Assembly
Briggs and Stratton 331777-0946-B2




Ref	Part No.	Qty.	Description				
223	693557	1	Flywheel				
237	699882	1	Guard-Flywheel				
273	794357	1	Screen-Rotating				
278	691003	1	Screw (Flywheel Guard)				
2304	794918	1	Housing-Blower				
2305	697102	1	Screw (Blower Housing)				
2305A	793376	1	Screw (Blower Housing)				
2305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)				
2363	19203	1	Puller-Flywheel				
2415	794129	1	Plug (Rotating Screen)				
2445	793569	1	Filter-Cartridge, Air Cleaner				
2783	693713	1	Gear-Pinion				
2967	693958	1	Filter-Cleaner, Pre				
2968	794140	1	Cover-Cleaner, Air				
21005	794121	1	Fan-Flywheel				
21036		1	Label-Emissions				
21040	698368	1	Plate-Trim				
21044	698139	1	Screw (Flywheel)				
21051	691265	1	Ring-Retaining				
21070	690363	1	Screw (Flywheel Fan)				
21265	794151	1	Support-Housing, Blower				
21279	697551	1	Screw (Blower Housing Support)				

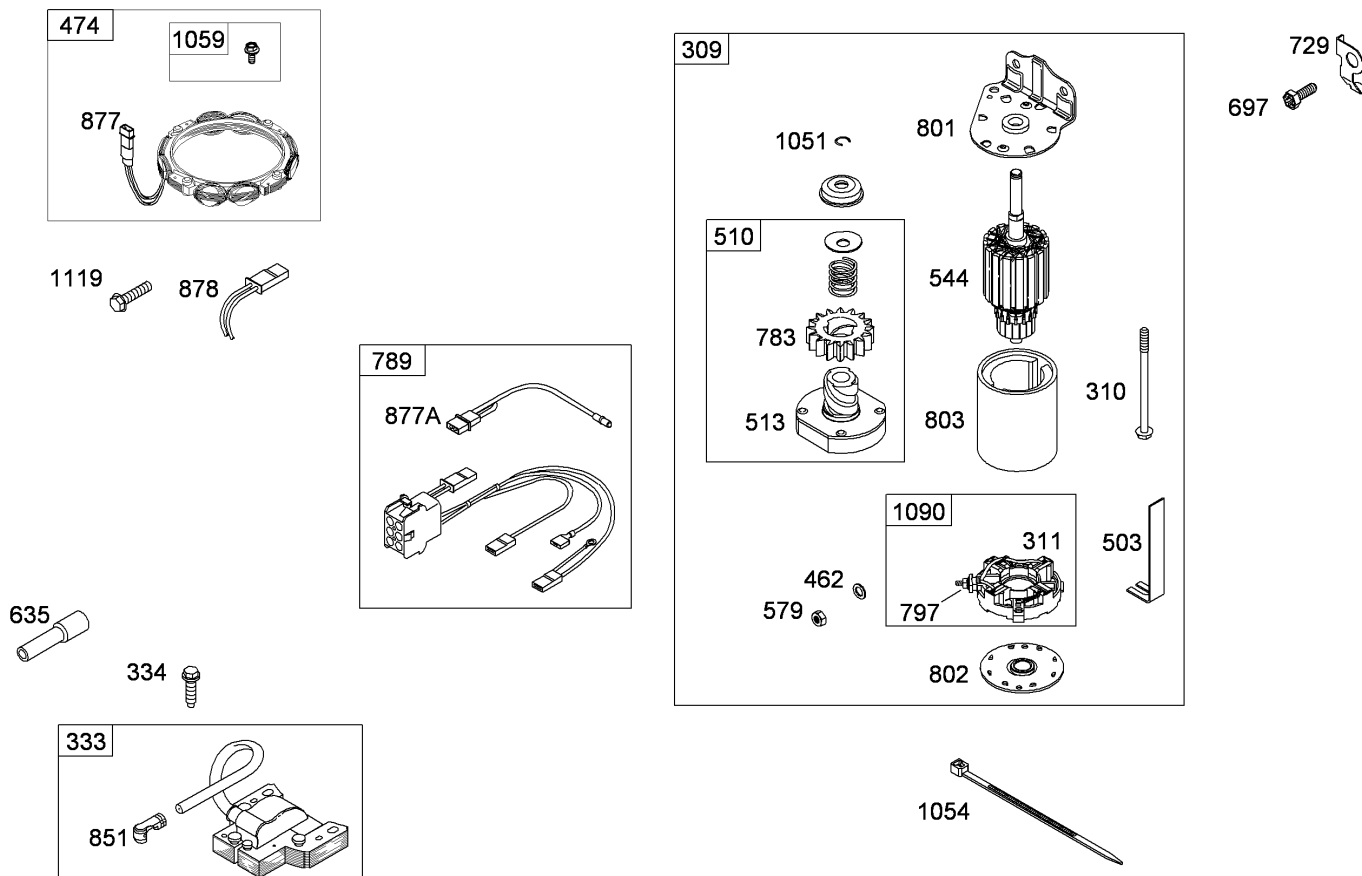 

Assemblies include all parts shown in frames

Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②309	693551	1	Motor-Starter	②877A	790544	1	Harness-Wiring
②310	690323	1	Screw (Starter Motor)	②878	398661	1	Harness-Alternator
②311	497608	1	Brush Set	②1051	691265	1	Ring-Retainer (Starter Motor)
②333	795315	1	Armature-Magneto	②1054	280275	1	Tie-Cable
②334	691061	1	Screw (Magneto Armature)	②1059	698516	1	Screw And Washer Kit
②462	691261	1	Washer (Starter Cable)	②1090	691293	1	Retainer-Brush
②474	696459	1	Alternator	②1119	691183	1	Screw (Alternator)
②503	691532	1	Strap-Starter				
②510	693699	1	Drive-Starter				
②513	692024	1	Clutch-Drive				
②544	692034	1	Armature-Starter				
②579	691029	1	Nut (Starter Cable)				
②635	691909	1	Boot-Spark Plug				
②697	690372	1	Screw (Drive Cap)				
②729	691224	1	Clip-Wire				
②783	693713	1	Gear-Pinion				
②789	698330	1	Harness-Wiring				
②797	693167	1	Nut (Brush Retainer)				
②801	691283	1	Cap-Drive				
②802	691286	1	Cap-End				
②803		1	Housing-Starter (Serviced By Ref 309, 693551-Starter Motor)				
②851	692424	1	Terminal-Spark Plug				
②877	393456	1	Wire-Connector / Alternator				

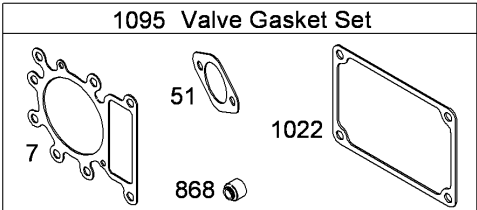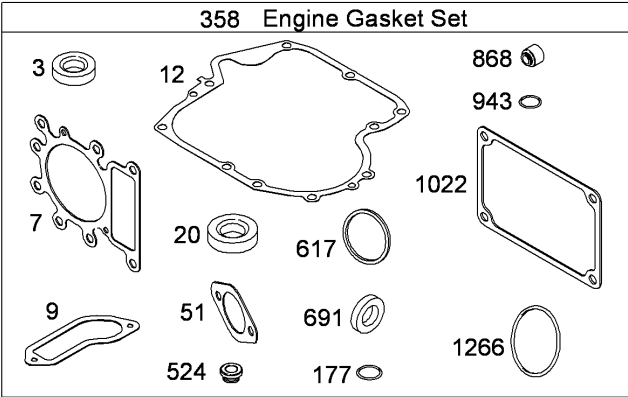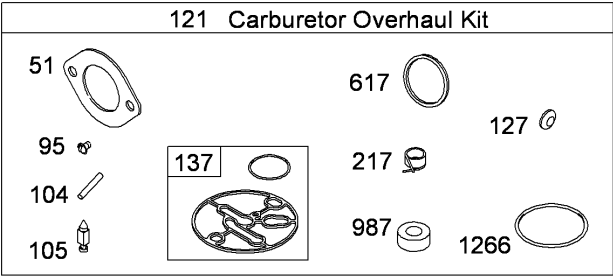   

Assemblies include all parts shown in frames

Engine Gasket and Carburetor Overhaul Kit
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
243	391086s	1	Seal-Oil (Magneto Side)	241022	272475s	1	Gasket-Cover, Rocker
247	794114	1	Gasket-Head, Cylinder	5			
5				21095	794158	1	Valve Gasket Set
249	697109	1	Gasket-Breather	231266	691917	1	Seal-O Ring (Intake Elbow) (Red)
2412	697110	1	Gasket-Crankcase	4			
2420	795387	1	Seal-Oil (PTO Side)				
2351	692137	1	Gasket-Intake				
45							
2395	690718	1	Screw (Throttle Valve)				
23104	694918	1	Pin-Hinge, Float				
23105	696136	1	Valve-Float, Needle				
2121	792369	1	Carburetor Overhaul Kit				
23127	690727	1	Plug-Welch				
23137	698781	1	Gasket-Bowl, Float				
24177	691031	1	Seal-O Ring (Dipstick Tube)				
23217	695409	1	Spring-Return, Choke				
2358	794150	1	Engine Gasket Set				
24524	691032	1	Seal-O Ring (Dipstick Tube)				
23617	692138	1	Seal-O Ring (Intake Manifold) (Red)				
4							
24691	692407	1	Seal-Shaft, Governor				
24868	690968	1	Seal-Valve				
5							
24943	690589	1	Seal-O Ring (Oil Pump Cover)				
23987	698777	1	Seal-Shaft, Throttle				

Attachments and Accessories

For 13AL60RG048 - LX426 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Blade Kit, Extreme (42 Inch)	112-6048
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Blade Kit (2 Blades, 42 Inch Decks)	98022

NOTES

NOTES

NOTES

