



LX426 Lawn Tractor

Model No. 13AL60RG544 - 1L107H10100 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front and Rear Wheel Assembly	 3	Crankshaft and Piston/Ring Assembly Briggs and Stratton 331777-0946-B2	 17
Steering Shaft and Front Axle Assembly	 4	Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2	 18
Frame, Battery and PTO Engage Assembly	 5	Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2	 19
Seat and Fender Assembly	 6	Governor Control Assembly Briggs and Stratton 331777-0946-B2	 20
Dash, Fuel Tank and Hood Assembly	 7	Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 331777-0946-B2	 21
Transmission, Brake and Traction Pedal Assembly	 8	Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2	 22
Single Speed Transmission Assembly No. 112-6083	 10	Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2	 23
Deck Assembly	 12	Attachments and Accessories List	 24
Muffler and Guard Assembly	 14		
Cylinder Assembly Briggs and Stratton 331777-0946-B2	 15		
Cylinder Head Assembly Briggs and Stratton 331777-0946-B2	 16		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|---|--|
| ❶ Obtain from your local Briggs & Stratton dealer | ❷ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❸ Included in Engine Gasket Set (Ref. No. 358) | ❹ Included in Valve Gasket Set (Ref. No. 1095) |

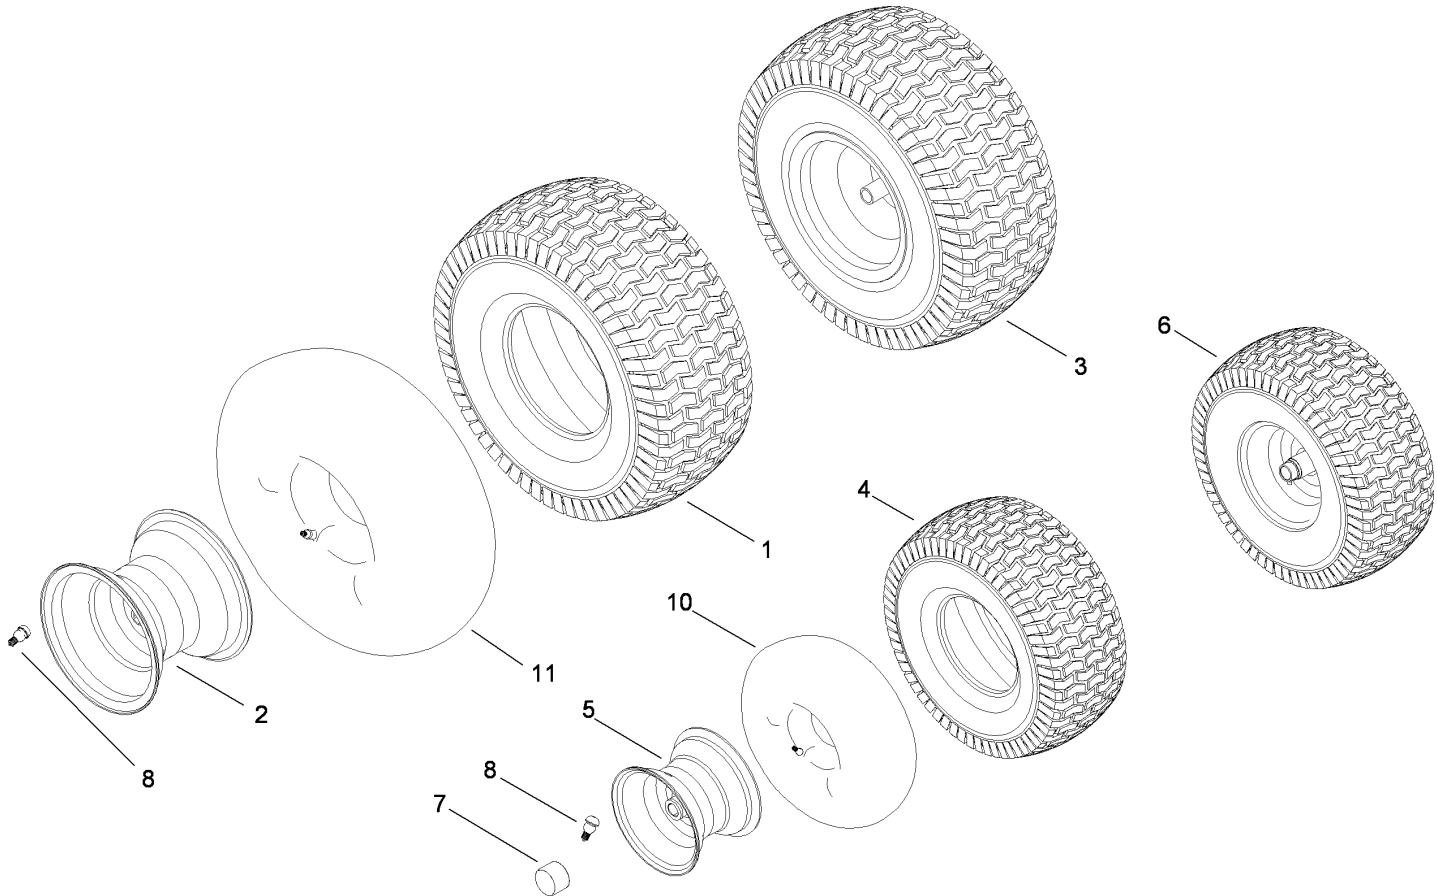


Front and Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1	112-0713	1	Tire-Multi Trac				
2	112-6093	1	Rim-Wheel, Rear				
3	112-0496	1	Rear Wheel ASM				
4	112-0576	1	Tire-Front				
5	112-0468	1	Rim-Wheel, Front				
6	112-0491	1	Front Wheel ASM				
7	112-5968	1	Cap-Hub				
8	112-0503	1	Valve-Air, Tubeless				
10	232-39	1	Tube-Inner				
11	93-3893	1	Tube-Inner				

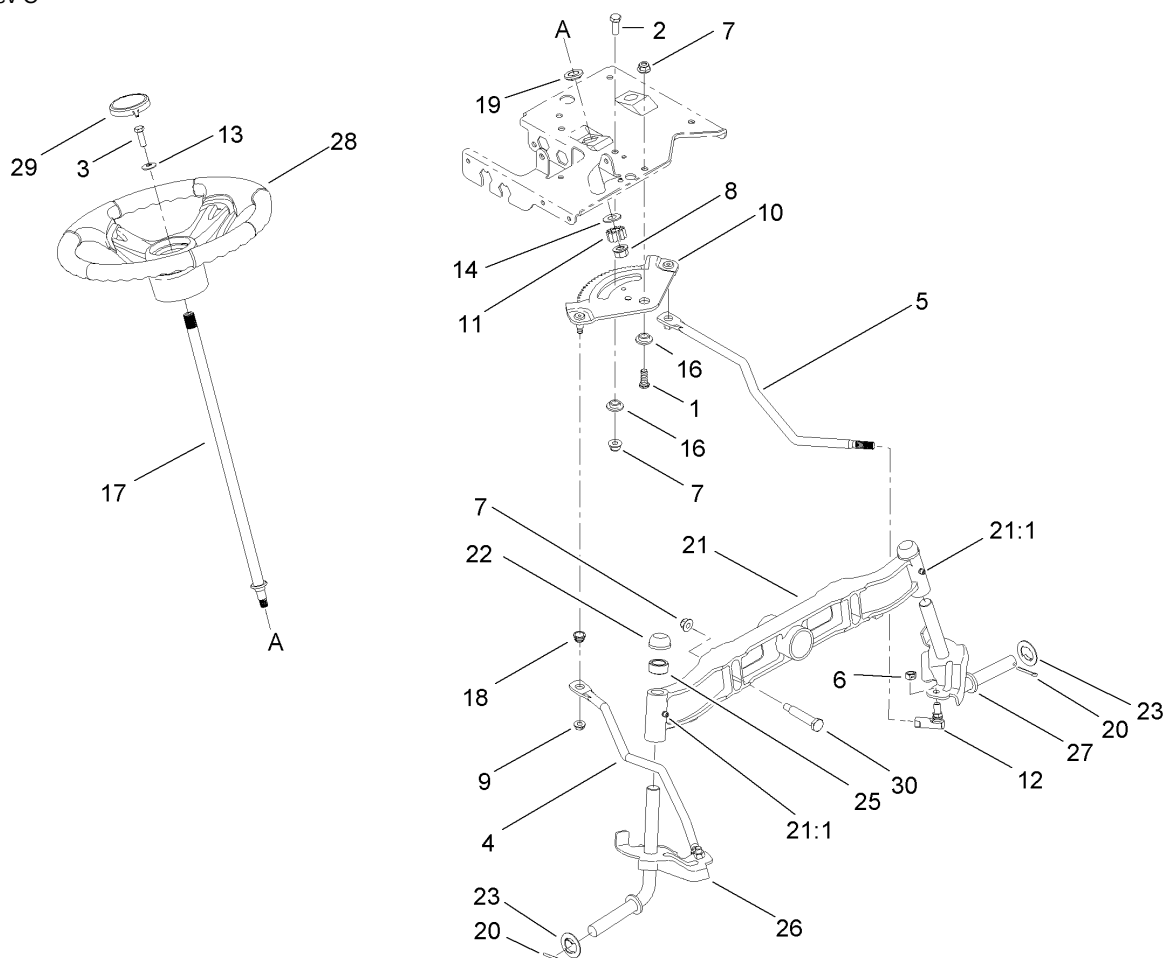

Steering Shaft and Front Axle Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-0631	1	Screw-HH	26	112-0547	1	RH Axle ASM
2	112-0492	1	Screw-HH	27	112-0562	1	LH Axle ASM
3	112-0473	1	Screw-HH	28	112-6100	1	3 Spoke Wheel Steering ASM
4	112-0355	1	Link-Drag, RH	29	112-3734	1	Cap-Wheel, Steering
5	112-0346	1	Link-Drag, LH	30	112-0699	1	Bolt-Shoulder
6	112-0483	1	Nut-Hex, Lock				
7	112-0668	1	Nut-Lock, Flange				
8	112-0859	1	Nut-Lock, Flange				
9	112-0511	1	Nut-Lock, Flange				
10	112-0862	1	Gear-Steering				
11	112-0863	1	Gear-Pinion, Steering				
12	112-0917	1	Ball Joint ASM				
13	112-0924	1	Washer-Flat				
14	112-0925	1	Washer-Flat				
16	112-0881	1	Spacer-Shoulder				
17	112-6097	1	Shaft-Steering				
18	112-0929	1	Bushing				
19	112-6098	1	Bearing-Flange, Hex				
20	112-0860	1	Pin-Cotter				
21	112-6099	1	Pivot-Axle, Cast Iron				
21:1	112-0926	1	Fitting-Grease				
22	112-0323	1	Cap				
23	112-5972	1	Washer-Flat				
25	112-6136	1	Spacer				

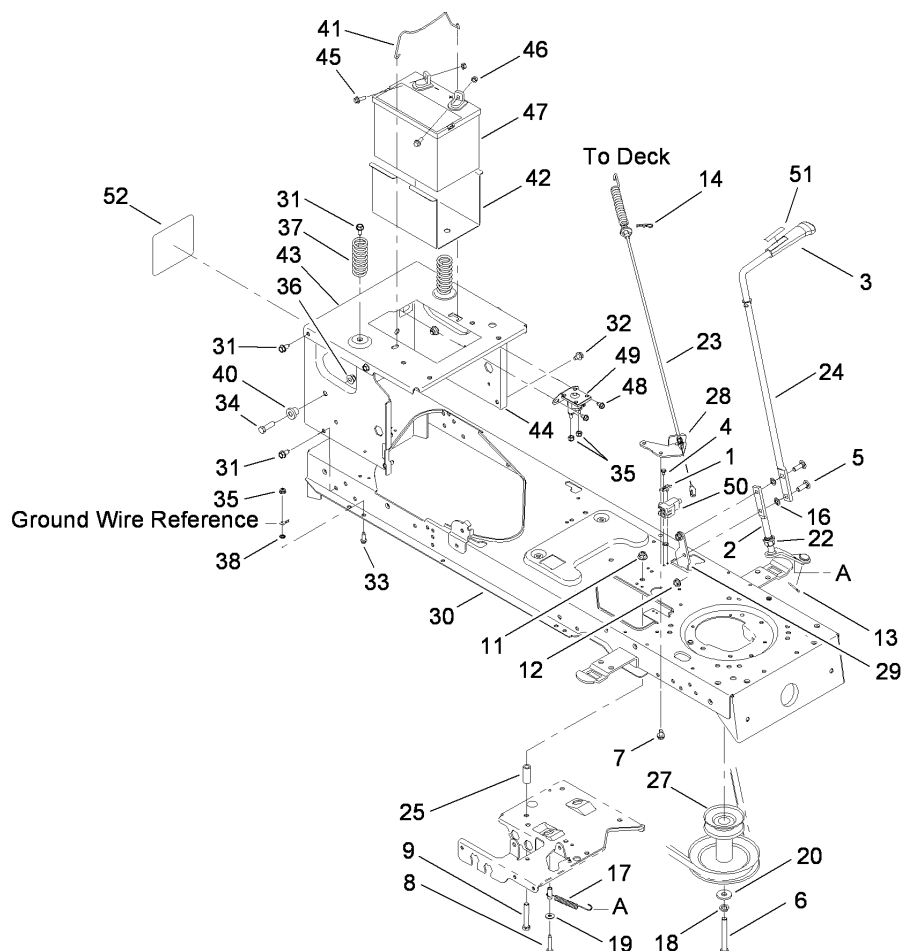

Frame, Battery and PTO Engage Assembly


Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-6007	1	Lever-Engage, PTO
3	112-6011	1	Knob-PTO
4	112-0651	1	Screw-TAP
5	112-0598	1	Bolt-CARR
6	112-6008	1	Screw-HH
7	112-0676	1	Screw-TAP
8	112-0843	1	Screw-HWH
9	112-0700	1	Screw-HH
11	112-0668	1	Nut-Lock, Flange
12	112-0511	1	Nut-Lock, Flange
13	112-6010	1	Pin-Cotter
14	112-0398	1	Pin-Click
16	112-0645	1	Nut-Push
17	112-0567	1	Spring-Extension
18	112-0428	1	Washer-Lock
19	112-3695	1	Washer-Flat
20	112-0380	1	Washer-Flat
22	112-0384	1	Bearing-Flange, Hex (Split)
23	112-6137	1	Cable-Engage, Deck
24	112-0393	1	Handle-Engage, Deck
25	112-0433	1	Spacer
27	112-0333	1	Pulley-Engine
28	112-6105	1	Bracket-Mount, Cable

Ref	Part No.	Qty.	Description
29	112-0516	1	Bracket-Stop
30	112-5974	1	Lower Frame ASM
31	112-6070	1	Screw-TAP
32	112-0676	1	Screw-TAP
33	112-0587	1	Screw-TAP
34	112-0557	1	Screw-HH
35	112-0636	1	Nut-Lock, Flange
36	112-0668	1	Nut-Lock, Flange
37	112-0501	1	Spring-Compression
38	112-0703	1	Washer-Lock, External
40	112-0661	1	Spacer-Shoulder
41	112-0581	1	Rod-Holddown, Battery
42	112-0570	1	Tray-Battery
43	112-0647	1	Bracket-Frame, Seat
44	112-6107	1	Frame-Upper
45	112-1070	1	Bolt-Carriage
46	112-0546	1	Nut-Sems
47	112-0425	1	Battery-245, Cca (Dry Flat Top)
48	112-6108	1	Screw-TAP
49	112-6073	1	Solenoid-12V, 2 Post 2 Tab
50	112-0455	1	Switch-Interlock
51	112-1274	1	Decal-PTO, Manual
52	112-1284	1	Decal

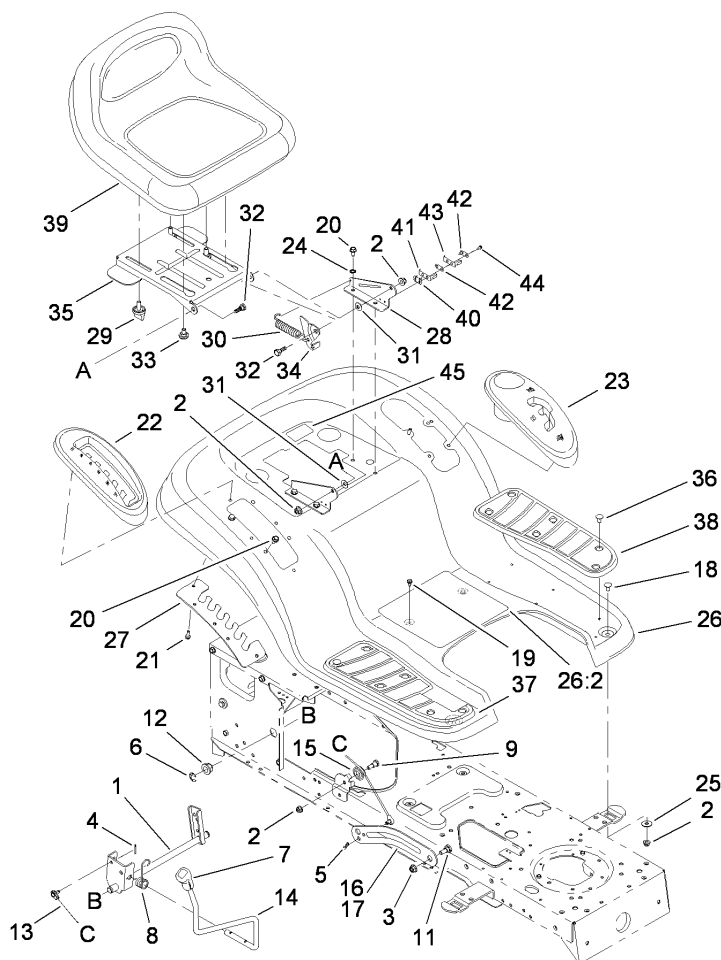

Seat and Fender Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-5969	1	Lift Shaft ASM	26	112-6112	1	Fender
2	112-0650	1	Nut-Lock, Flange	26:2	112-1262	1	Decal-Danger
3	112-0668	1	Nut-Lock, Flange	27	112-0629	1	Bracket-Adjusting, Lift
4	112-0459	1	Pin-Cotter	28	112-6046	1	Bracket-Mount, Seat
5	112-0568	1	Pin-Cotter	29	112-0409	1	Knob
6	112-0586	1	Ring-E	30	112-0616	1	Spring-Extension
7	112-0585	1	Grip-Handle	31	112-0435	1	Washer-Bell
8	112-0477	1	Spring-Torsion	32	112-0575	1	Bolt-Shoulder
9	112-0443	1	Bolt-Shoulder	33	112-0554	1	Bolt-Shoulder
11	112-0669	1	Bolt-Shoulder	34	112-0646	1	Bracket-Lift, LH
12	112-0347	1	Bearing-Flange	35	112-6113	1	Bracket-Pivot, Seat
13	112-0374	1	Cable-Lift	36	112-0549	1	Clip-Ratchet, Fastener
14	112-5970	1	Handle-Lift	37	112-0540	1	Pad-Foot, RH
15	112-0502	1	Pulley-Roller	38	112-0545	1	Pad-Foot, LH
16	112-6109	1	Arm-Lift, RH	39	112-6114	1	Seat-Medium
17	112-6110	1	Arm-Lift, LH	40	112-0637	1	Plate-Boss, Insulator
18	112-0426	1	Bolt-CARR	41	112-0532	1	Switch-Spring, Inner
19	112-0524	1	Screw-HWHTF	42	112-0635	1	Plate-Insulator
20	112-6070	1	Screw-TAP	43	112-0529	1	Switch-Spring
21	112-0509	1	Screw-TAP	44	112-0626	1	Screw-HWHTF
22	112-0869	1	Cover-Lever, Lift	45	112-1260	1	Decal-Service (Toro Hotline)
23	112-6111	1	Cover-Holder (W/Cup)				
24	112-0517	1	Washer-Lock, External				
25	112-0582	1	Washer-Flat				

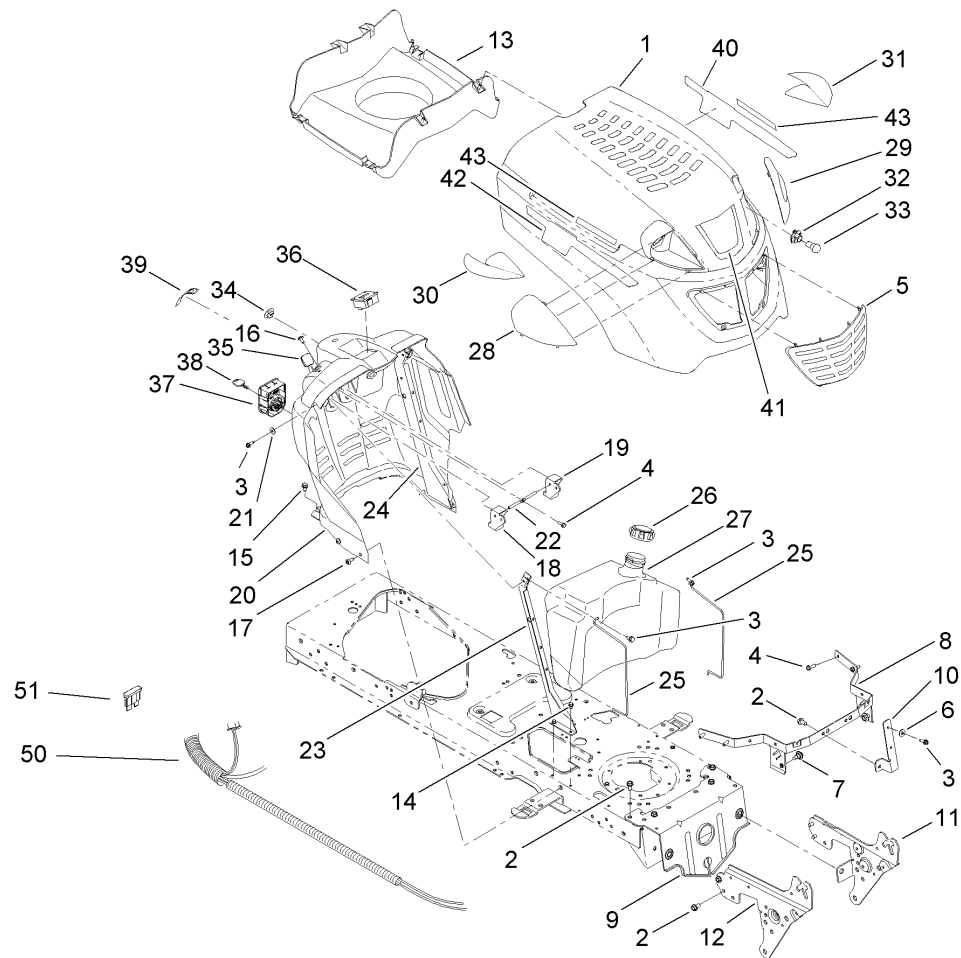


Dash, Fuel Tank and Hood Assembly

Ref	Part No.	Qty.	Description
1	112-0444	1	Hood
2	112-6070	1	Screw-TAP
3	112-0587	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0381	1	Grill
6	112-3695	1	Washer-Flat
7	112-6128	1	Bolt-Shoulder, TAP
8	112-5985	1	Bracket-Pivot
9	112-6127	1	Bracket-Pivot
10	112-5986	1	Bracket-Support, Hood
11	112-6126	1	Bracket-Pivot, Support (LH)
12	112-6125	1	Bracket-Pivot, Support (RH)
13	112-6124	1	Plenum-Hood
14	112-3696	1	Screw-TAP
15	112-0676	1	Screw-TAP
16	112-0550	1	Screw-TAP
17	112-0563	1	Screw-TAP
18	112-0526	1	Lever-Cruise
19	112-0580	1	Lever-Brake
20	112-6123	1	Dash-Manual, PTO
21	112-0485	1	Washer-Spring
22	112-0604	1	Rod-Lever, Bent
23	112-6122	1	Support-Dash, RH
24	112-6121	1	Support-Dash, LH

Ref	Part No.	Qty.	Description
25	112-0678	1	Rod-Support
26	112-6120	1	Cap-Fuel
27	112-6119	1	Tank-Fuel, 3 Gal
28	112-0447	1	Lens-RH
29	112-0446	1	Lens-LH
30	112-5810	1	Reflector-RH
31	112-5811	1	Reflector-LH
32	112-0408	1	Socket-Headlight
33	112-0402	1	Lamp-12V, Miniature
34	112-0535	1	Plug-Choke
35	112-6118	1	Cable-Throttle / Choke
36	112-6117	1	Meter-Hour
37	112-6116	1	Module-Switch, Ignition
38	112-6115	1	Key-Ignition
39	112-3702	1	Decal-Throttle
40	112-5952	1	Decal-Hood, Left Side
41	112-3716	1	Decal-Hood
42	112-5953	1	Decal-Hood, Right Side
43	112-6189	1	Decal
50	112-6187	1	Harness-Wire
51	112-5943	1	Fuse-20 Amp

Transmission, Brake and Traction Pedal Assembly

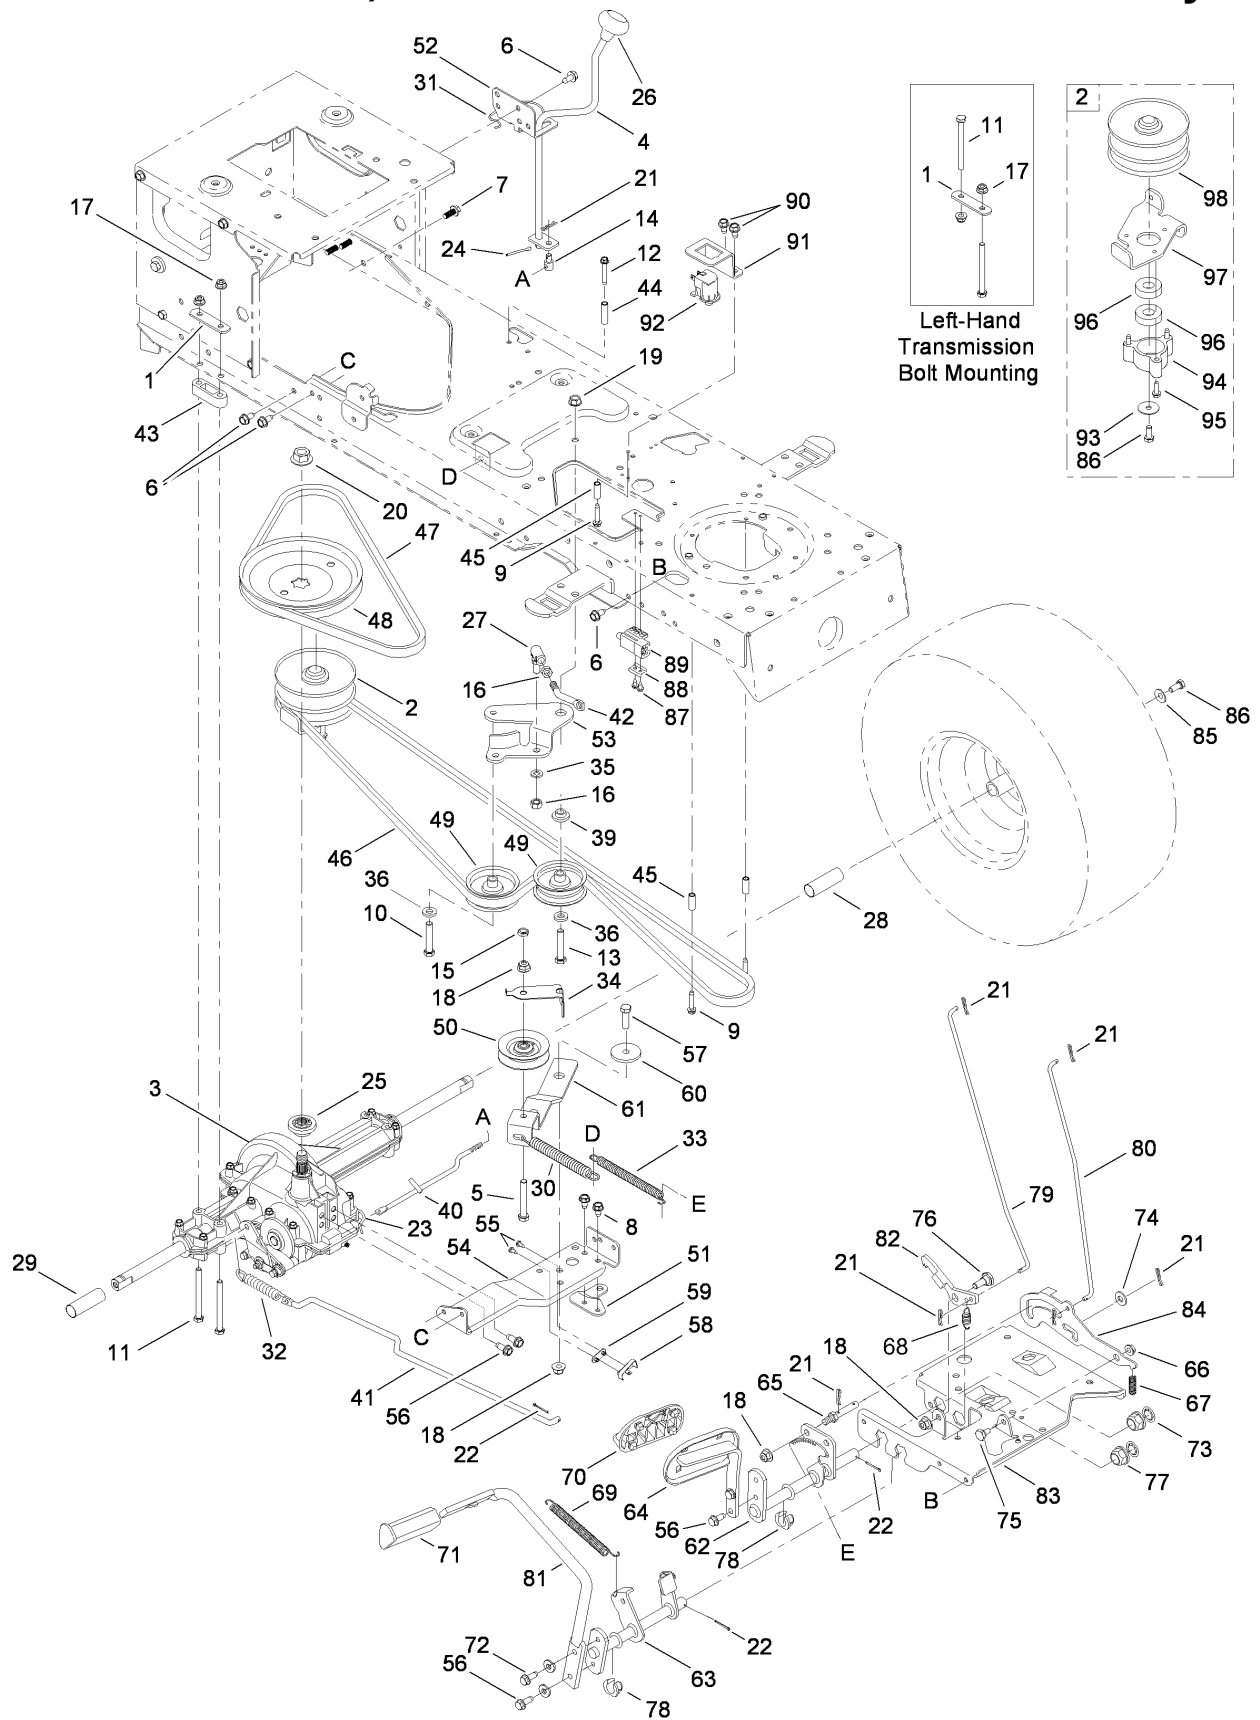


Transmission, Brake and Traction Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
2	112-6129	1	Pulley ASM
3	112-6083	1	Single Speed Transaxle ASM
4	112-0627	1	Shift Lever ASM
5	112-6130	1	Screw-HH
6	112-6070	1	Screw-TAP
7	112-6131	1	Screw-HH
8	112-0676	1	Screw-TAP
9	112-0603	1	Screw-HH
10	112-0469	1	Screw-TAP
11	112-0667	1	Screw-HH
12	112-0839	1	Screw-TAP
13	112-0421	1	Screw-HH
14	112-0592	1	Ferrule-Adjustable
15	112-6132	1	Nut-Jam, Lock
16	112-0343	1	Nut-Hex
17	112-0650	1	Nut-Lock, Flange
18	112-0668	1	Nut-Lock, Flange
19	112-0385	1	Nut-Lock, Flange
20	112-0451	1	Nut-Flange
21	112-0459	1	Pin-Cotter
22	112-0568	1	Pin-Cotter
23	112-0639	1	Pin-Hair
24	112-0412	1	Pin-Cotter
25	112-0450	1	Hub-Pulley
26	112-0514	1	Knob-Shift
27	112-0306	1	Ball Joint ASM
28	112-0670	1	Sleeve
29	112-0683	1	Sleeve
30	112-5991	1	Spring-Extension
31	112-0357	1	Clip-Spring, Shifter
32	112-0350	1	Spring-Extension
33	112-0348	1	Spring-Extension
34	112-5883	1	Guide-Belt, Traction
35	112-0415	1	Washer-Lock
36	112-0544	1	Washer-Flat
39	112-0345	1	Spacer-Shoulder
40	112-5992	1	Rod-Shift
41	112-0655	1	Rod-Brake
42	112-0538	1	Rod-Adjustment, Idler
43	112-0673	1	Spacer-Transaxle
44	112-5831	1	Spacer
45	112-0644	1	Spacer
46	112-0301	1	Belt-Drive, Variable Speed
47	112-0305	1	Belt-Drive, Transmission
48	112-0379	1	Pulley-V (W/Hub)
49	112-0313	1	Pulley-Idler, Flat
50	112-6133	1	Pulley-Idler, V-Type
51	112-0701	1	Bracket-Shift
52	112-0638	1	Bracket-Shift
53	112-0525	1	Bracket-Idler, Center Double
54	112-6134	1	Bracket ASM

Ref	Part No.	Qty.	Description
55	112-0626	1	Screw-HWHTF
56	112-0395	1	Screw-HWH
57	112-0557	1	Screw-HH
58	112-0602	1	Switch-Spring, Short
59	112-0625	1	Plate-Insulator
60	112-0584	1	Spacer-Shoulder
61	112-6135	1	Bracket-Idler
62	112-0539	1	Speed Control ASM
63	112-5998	1	Speed Control ASM
64	112-0680	1	Pedal ASM
65	112-0599	1	Pin
66	112-0511	1	Nut-Lock, Flange
67	112-0506	1	Spring
68	112-0510	1	Spring-Extension
69	112-0348	1	Spring-Extension
70	112-0543	1	Pad-Pedal
71	112-6001	1	Pad-Brake
72	112-0366	1	Washer-Lock
73	112-0339	1	Washer-Flat
74	112-0541	1	Washer-Flat
75	112-0542	1	Bolt-Shoulder
76	112-0442	1	Bolt-Shoulder
77	112-0347	1	Bearing-Flange
78	112-0387	1	Bearing-Flange, Hex (Split)
79	112-0675	1	Rod-Brake, Lock Control
80	112-0662	1	Rod-Control, Cruise
81	112-6005	1	Pedal-Brake
82	112-6004	1	Latch-Cruise
83	112-0681	1	Bracket-Support, Steering
84	112-0679	1	Bracket-Lockout
85	112-0435	1	Washer-Bell
86	112-0551	1	Screw-HH
87	112-0651	1	Screw-TAP
88	112-0671	1	Plate-Switch
89	112-0455	1	Switch-Interlock
90	112-0524	1	Screw-HWHTF
91	112-3737	1	Bracket-Switch, Parking Brake
92	112-0441	1	Switch-Mount, Snap
93	112-0500	1	Washer-Flat
94	112-5996	1	Cup-Bearing
95	112-0843	1	Screw-HWH
96	112-0928	1	Bearing-Ball
97	112-5995	1	Bracket-Pulley
98	112-6129	1	Pulley ASM


Single Speed Transmission Assembly No. 112-6083

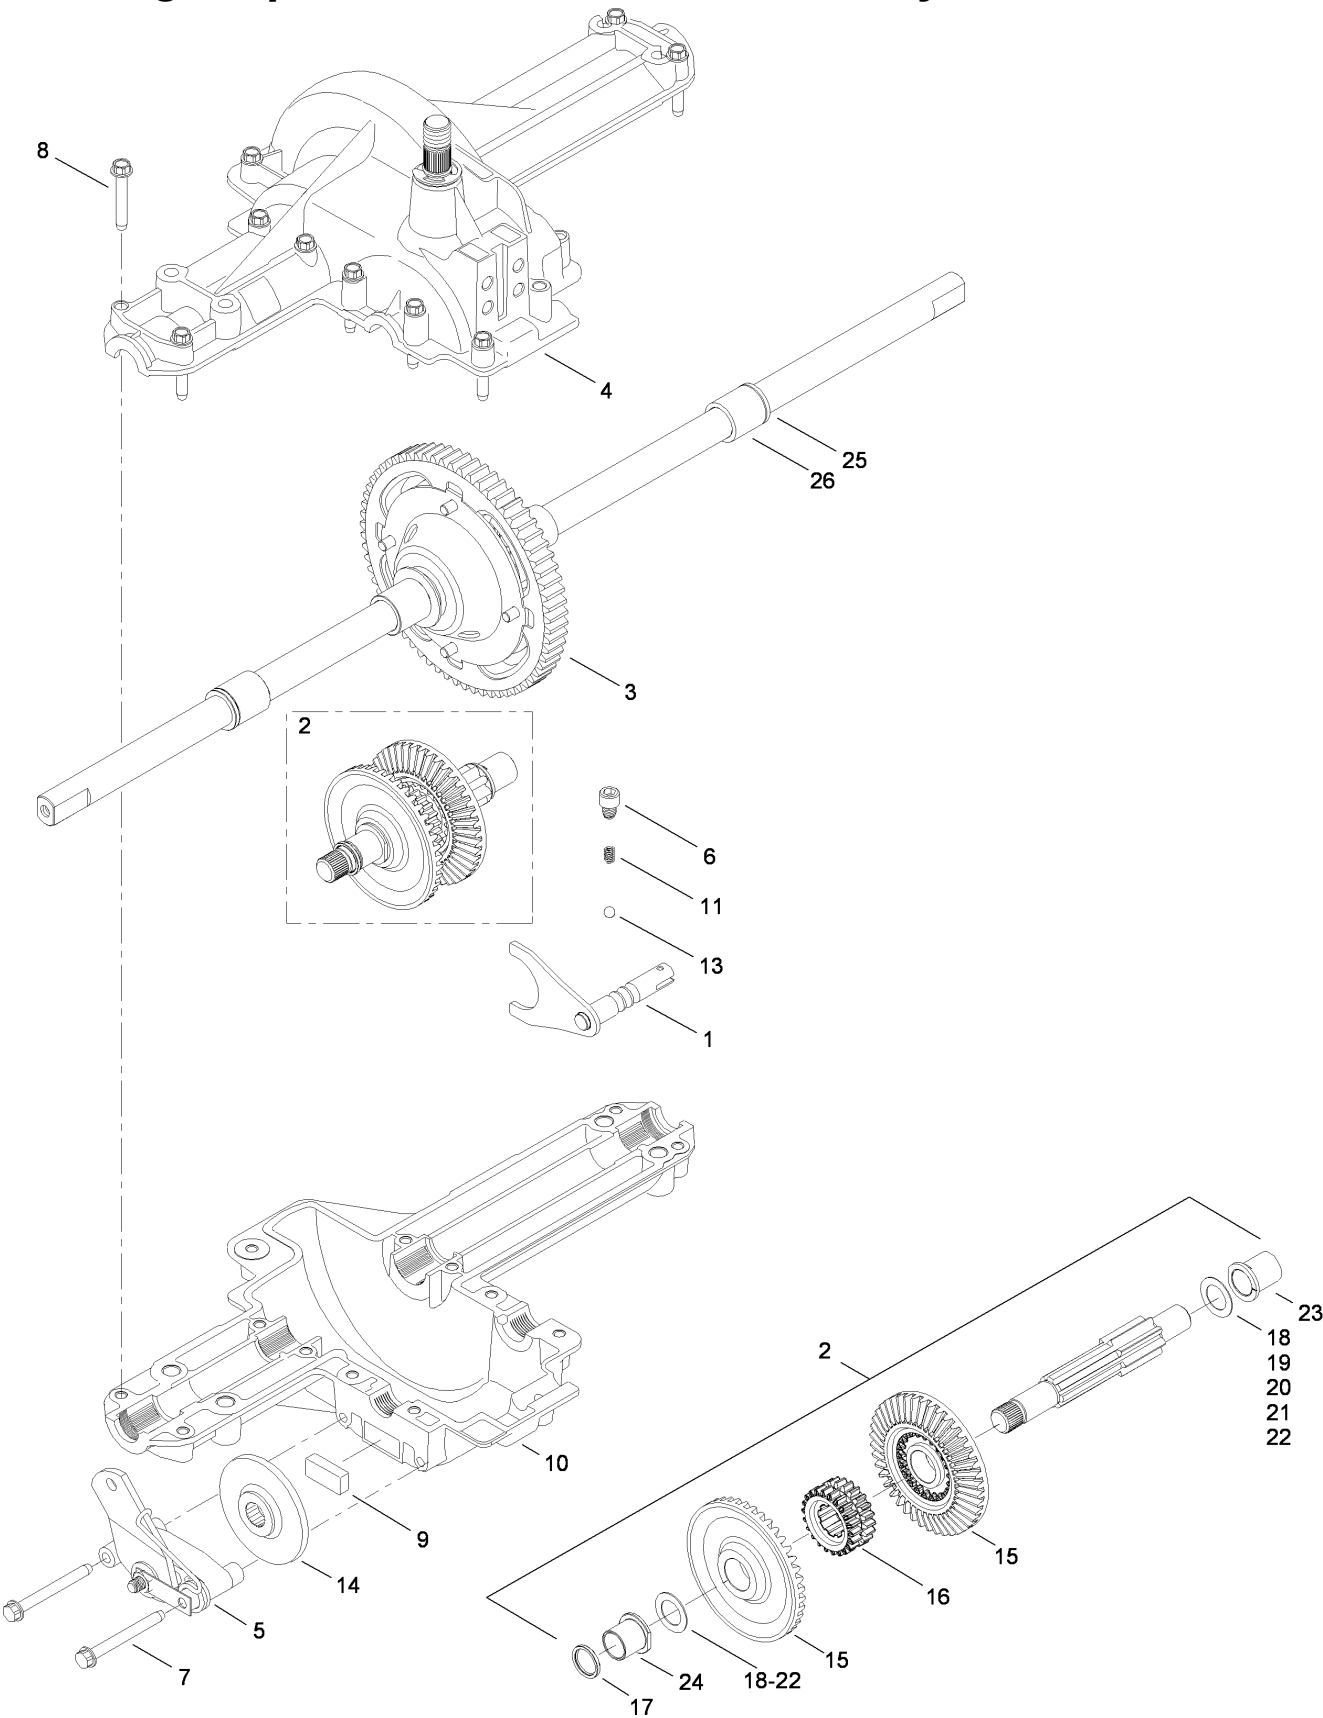

Single Speed Transmission Assembly No. 112-6083

Ref	Part No.	Qty.	Description				
1	112-0806	1	Shift Fork ASM				
2	112-6084	1	Drive Shaft ASM				
3	112-6085	1	Differential ASM				
4	112-6086	1	Upper Housing ASM				
5	112-0832	1	Brake ASM				
6	112-6087	1	Screw-TAP				
7	112-0698	1	Screw-HWH				
8	112-0839	1	Screw-TAP				
9	112-0741	1	Puck-Brake				
10	112-6088	1	Housing-Lower				
11	112-0801	1	Spring-Detent				
13	112-0799	1	Ball-Detent				
14	112-0817	1	Disc-Brake				
15	112-6089	1	Gear-Bevel, 42T (Spline)				
16	112-6090	1	Collar-Cluster				
17	112-6091	1	Seal				
18	112-0748	1	Washer-Flat				
19	112-0750	1	Washer-Flat				
20	112-0745	1	Washer-Flat				
21	112-0773	1	Washer-Thrust				
22	112-0755	1	Washer-Thrust				
23	112-0794	1	Bearing-Flange				
24	112-0795	1	Bearing-Flange				
25	112-0800	1	Seal				
26	112-6092	1	Bearing-Sleeve				


Deck Assembly

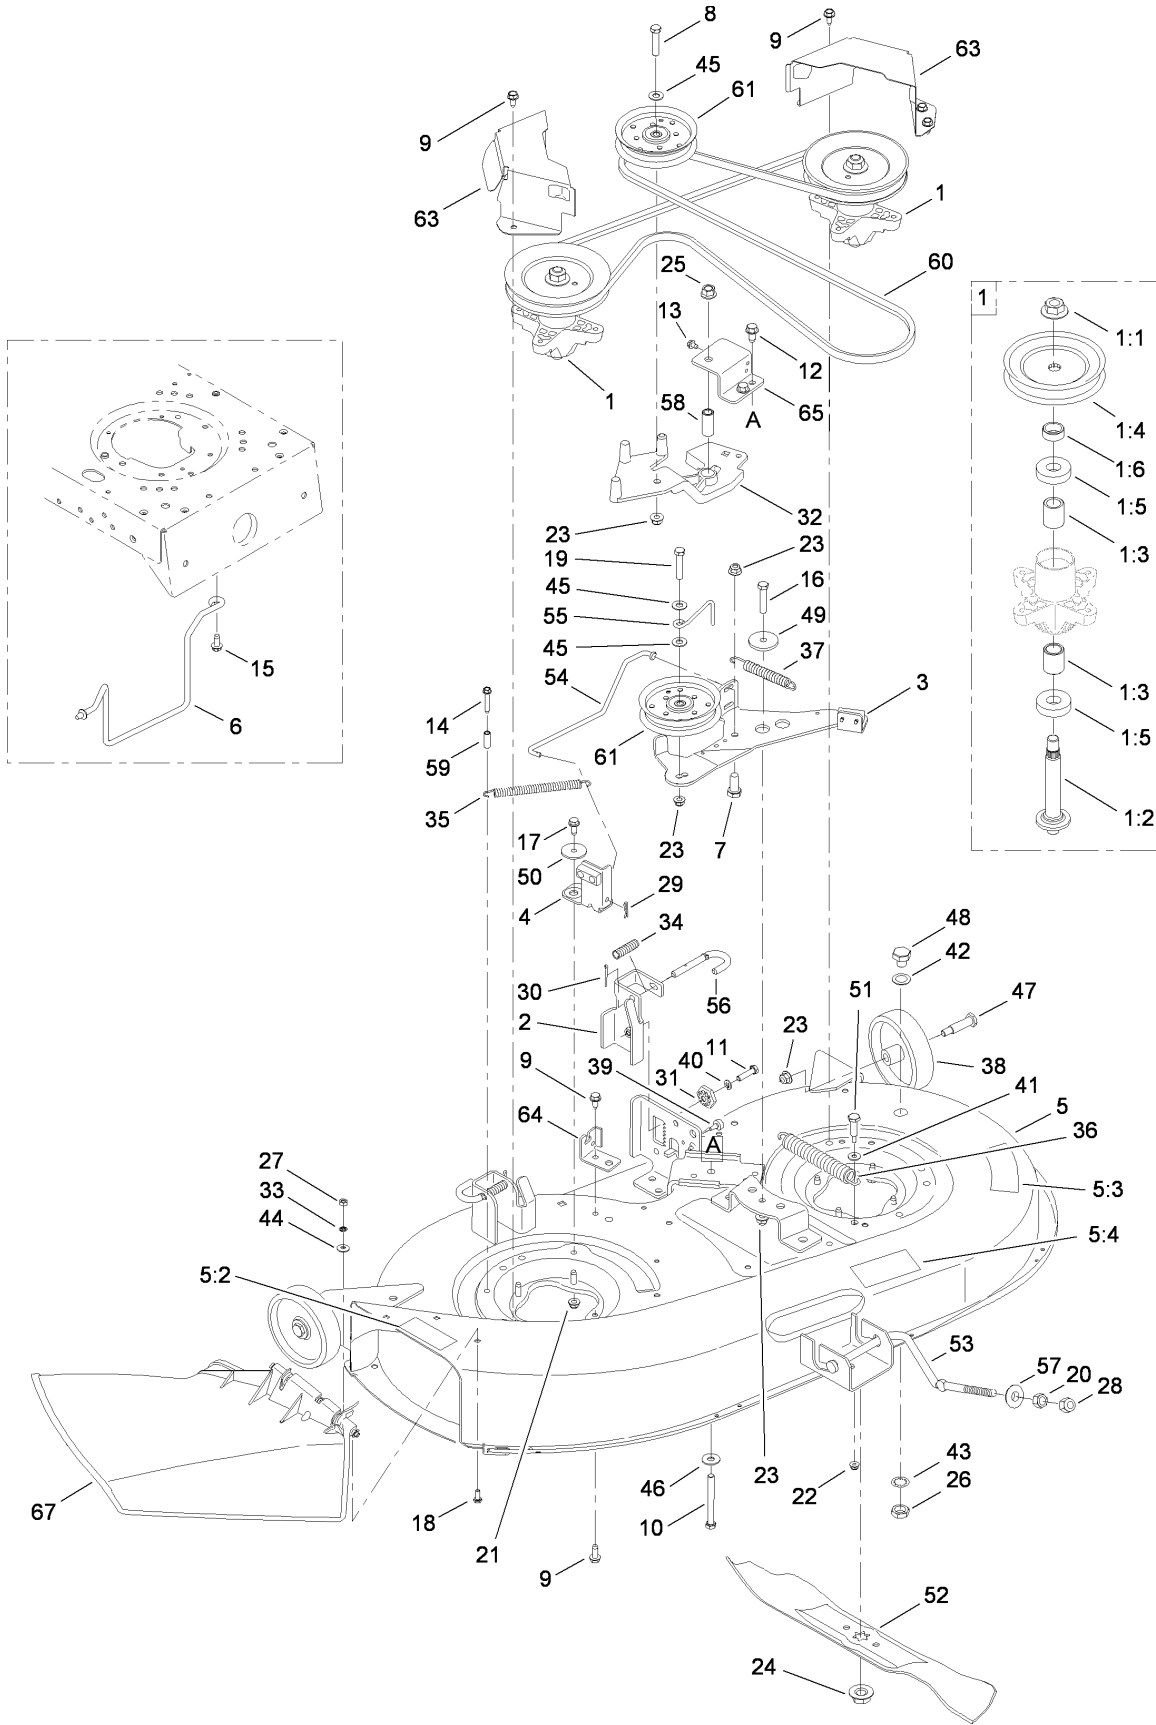

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-6063	1	Spindle ASM
1:1	112-0330	1	Nut-Flange, Hex
1:2	112-6062	1	Shaft-Spindle
1:3	112-0389	1	Spacer
1:4	112-0613	1	Pulley-Deck
1:5	112-0377	1	Bearing-Ball
1:6	112-6061	1	Spacer
2	112-0413	1	LH Hanger Bracket ASM
3	112-0606	1	Deck Brake ASM
4	112-3742	1	Brake ASM
5	112-5857	1	Deck And Decal ASM
5:2	112-1267	1	Decal-Danger
5:3	112-1265	1	Decal-Danger
5:4	112-1270	1	Decal-Routing, Belt
6	112-6071	1	Rod-Keeper, Belt
7	112-0855	1	Screw-HH
8	112-0513	1	Screw-HH
9	112-6070	1	Screw-TAP
10	112-3745	1	Screw-HH
11	112-0373	1	Screw-HH
12	112-0906	1	Screw-HWHTF
13	112-6022	1	Screw-TAP
14	112-0843	1	Screw-HWH
15	112-0395	1	Screw-HWH
16	112-0557	1	Screw-HH
17	112-1090	1	Screw-HH
18	112-0499	1	Screw-HH
19	112-0421	1	Screw-HH
20	112-0458	1	Nut-Hex
21	112-0650	1	Nut-Lock, Flange
22	112-0636	1	Nut-Lock, Flange
23	112-0668	1	Nut-Lock, Flange
24	112-0330	1	Nut-Flange, Hex
25	112-0859	1	Nut-Lock, Flange
26	112-0351	1	Nut-Hex
27	112-0522	1	Nut-Hex
28	112-0476	1	Nut-Lock, Hex (Nylon)
29	112-0459	1	Pin-Cotter
30	112-0412	1	Pin-Cotter
31	112-0327	1	Gear-Adjustment, Deck
32	112-6069	1	Bracket-Idler
33	112-0623	1	Retainer-Bolt
34	112-0406	1	Spring-Compression
35	112-0528	1	Spring-Extension
36	112-6043	1	Spring-Extension
37	112-3746	1	Spring-Extension
38	112-0337	1	Wheel-Deck, Rear
39	112-1016	1	Bumper
40	112-0366	1	Washer-Lock
41	112-3695	1	Washer-Flat
42	112-0339	1	Washer-Flat
43	112-0643	1	Washer-Lock

Ref	Part No.	Qty.	Description
44	112-0485	1	Washer-Spring
45	112-0572	1	Washer-Flat
46	112-0380	1	Washer-Flat
47	112-0334	1	Bolt-Shoulder
48	112-0577	1	Plug
49	112-0584	1	Spacer-Shoulder
50	112-3747	1	Spacer-Shoulder
51	112-6068	1	Bolt-Shoulder
52	112-0315	1	Blade
53	112-0607	1	Rod-Deck, Front Adjustment
54	112-3748	1	Rod-Brake
55	112-5879	1	Rod-Keeper, Belt
56	112-0436	1	Pin-Handle, Deck Release
57	112-0641	1	Cup-Pivot, Lift
58	112-3749	1	Spacer
59	112-0644	1	Spacer
60	112-5800	1	Belt-V Type
61	112-0314	1	Pulley-Idler
63	112-6067	1	Cover-Belt
64	112-0718	1	Bracket-Cable, Deck
65	112-6066	1	Support-Bracket, Pivot
67	112-0353	1	Discharge Chute ASM

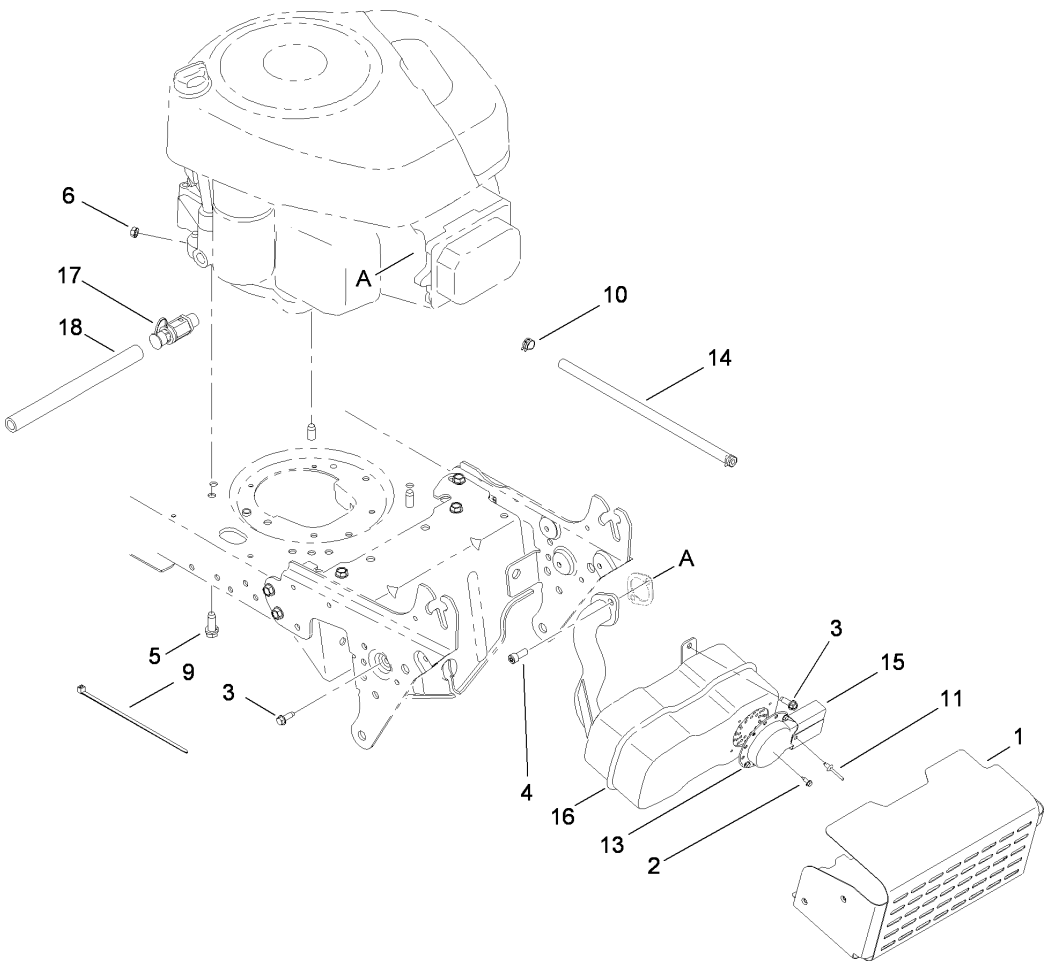

Muffler and Guard Assembly

Ref	Part No.	Qty.	Description				
1	112-6096	1	Shield-Muffler				
2	112-0626	1	Screw-HWHTF				
3	112-0587	1	Screw-TAP				
4	112-6012	1	Screw-HSH				
5	112-0487	1	Screw-TAP				
6	112-0546	1	Nut-Sems				
9	112-0527	1	Tie-Cable				
10	112-0573	1	Clamp-Hose				
11	112-3741	1	Rivet-Pop				
13	112-0453	1	Deflector-Muffler				
14	112-0720	1	Hose-Fuel				
15	112-0730	1	Deflector-Muffler, Long				
16	112-6095	1	Muffler-Single Inlet				
17	112-6094	1	Drain-Oil				
18	112-0553	1	Hose-Drain				

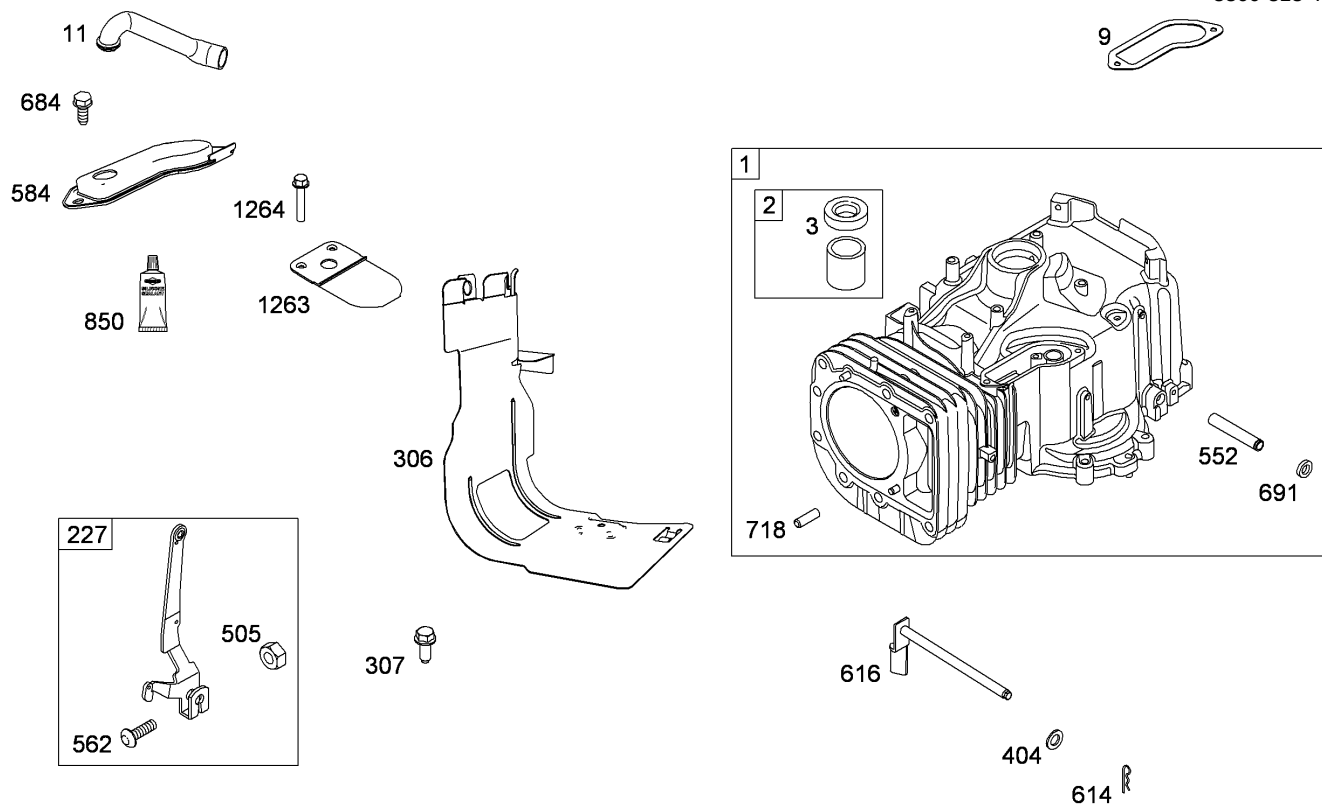

1330 Repair Manual

48 Short Block

1058 Operator Manual







Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶1	794128	1	Cylinder Assembly
❷2	399265	1	Bushing And Seal Kit (Magneto Side)
❸3	391086s	1	Seal-Oil (Magneto Side)
❹9	697109	1	Gasket-Breather
❺11	794683	1	Tube-Breather
❻48	795446	1	Short Block
❼227	691374	1	Lever-Control, Governor
❽306	794953	1	Shield-Cylinder
❿307	691003	1	Screw (Cylinder Shield)
⓫404	691691	1	Washer (Governor Crank)
⓬505	691251	1	Nut (Governor Control Lever)
⓭552	697144	1	Bushing-Crank, Governor
⓮562	691119	1	Bolt (Governor Control Lever)
⓯584	794682	1	Cover-Passage, Breather (Use With Liquid Sealant, Ref 850)
⓰614	691620	1	Pin-Cotter
⓱616	692012	1	Crank-Governor
⓲684	697157	1	Screw (Breather Passage Cover)
⓳691	692407	1	Seal-Shaft, Governor
⓴718	690959	1	Pin-Locating
⓵850	100106	1	Sealant-Liquid
⓶1058	276352	1	Operator Manual
⓷1263	697124	1	Reed-Breather

Ref	Part No.	Qty.	Description
❶1264	697104	1	Screw (Breather Reed)
❷1330	273521	1	Repair Manual

 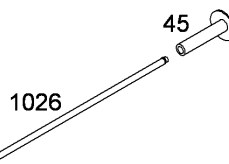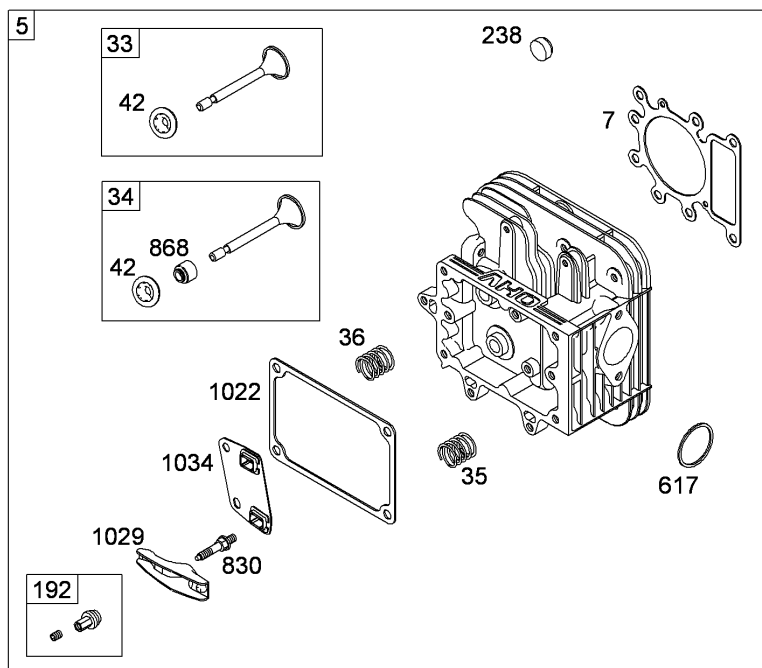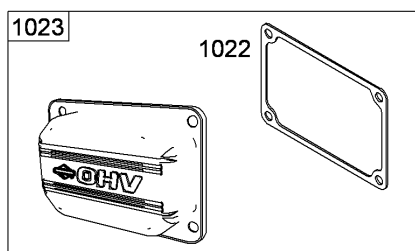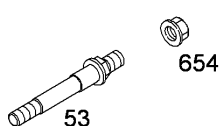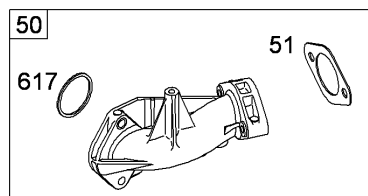


Assemblies include all parts shown in frames

Cylinder Head Assembly

Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
1 5	796005	1	Head-Cylinder
1 3 7	794114	1	Gasket-Head, Cylinder
4			
1 13	793988	1	Screw (Cylinder Head)
1 33	792688	1	Valve-Exhaust
1 34	791935	1	Valve-Intake
1 35	691279	1	Spring-Valve (Intake)
1 36	691279	1	Spring-Valve (Exhaust)
1 42	499586	1	Keeper-Valve
1 45	690564	1	Tappet-Valve
1 50	690193	1	Manifold-Intake
1 2 51	692137	1	Gasket-Intake
3 4			
1 53	690227	1	Stud (Carburetor)
1 54	691148	1	Screw (Intake Manifold)
1 192	691986	1	Adjustor-Arm, Rocker
1 238	691843	1	Cap-Valve
1 337	491055s	1	Plug-Spark
1 383	89838s	1	Wrench-Spark Plug
1 2 617	692138	1	Seal-O Ring (Intake Manifold)
3			(Red)
1 635	691909	1	Boot-Spark Plug
1 654	690958	1	Nut (Carburetor)
1 830	691095	1	Stud-Arm, Rocker


Ref	Part No.	Qty.	Description
1 850	100106	1	Sealant-Liquid (Use To Install Rocker Cover)
1 3 868	690968	1	Seal-Valve
4			
1 914	697551	1	Screw (Rocker Cover)
1 3 1022	272475s	1	Gasket-Cover, Rocker
4			
1 1023	791079	1	Cover-Rocker (Use With Liquid Sealant, Ref 850)
1 1026	692003	1	Rod-Push (Intake)
1 1026	692011	1	Rod-Push (Exhaust)
1 1029	691751	1	Arm-Rocker
1 1034	690822	1	Guide-Rod, Push

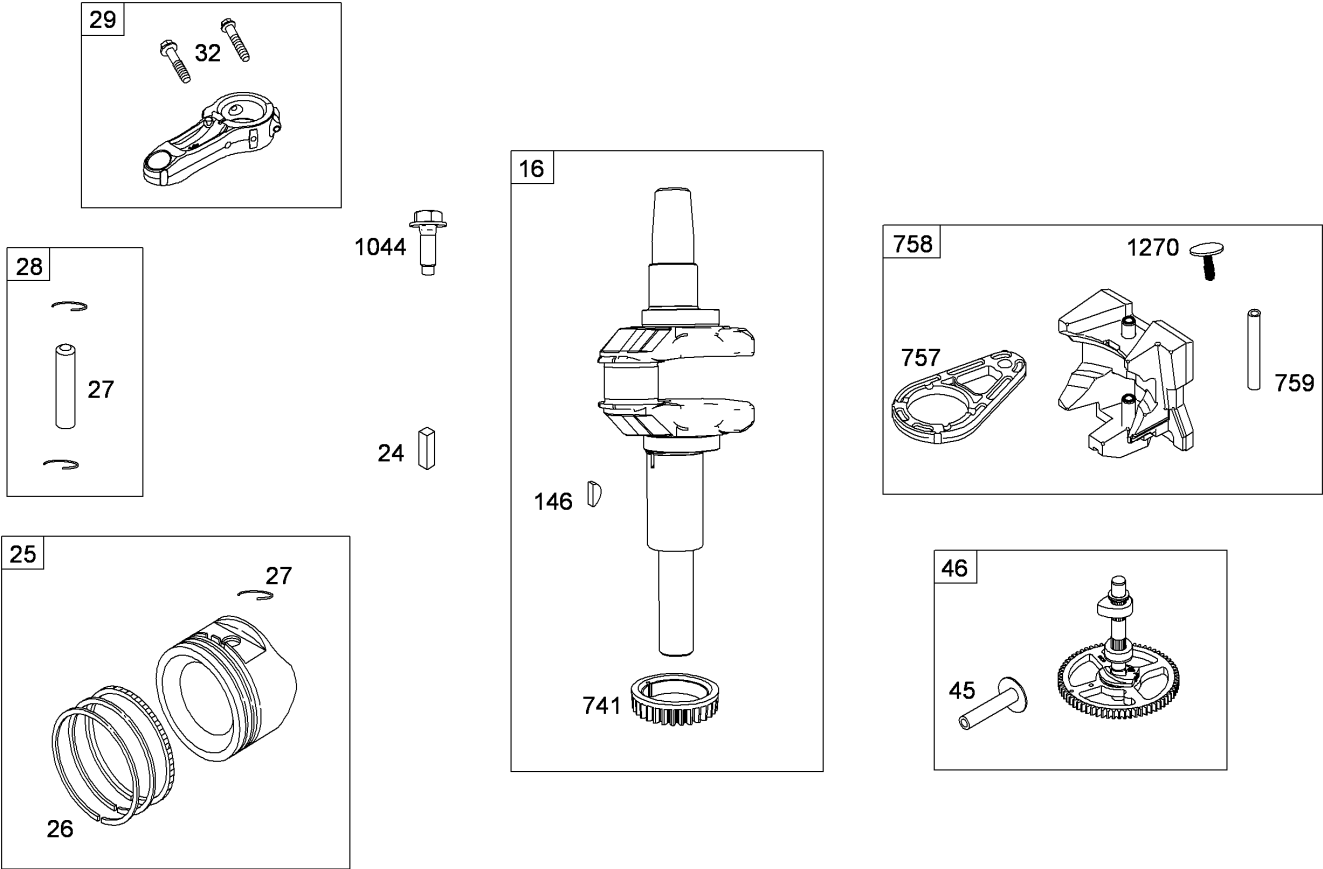

Assemblies include all parts shown in frames

Crankshaft and Piston/Ring Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description				
❶16	697127	1	Crankshaft				
❶24	222698s	1	Key-Flywheel				
❶25	794124	1	Piston ASM (Standard)				
❶25	794125	1	Piston ASM (.020 Oversize)				
❶26	794126	1	Ring Set (Standard)				
❶26	794127	1	Ring Set (.020 Oversize)				
❶27	698469	1	Lock-Pin, Piston				
❶28	794143	1	Pin-Piston				
❶29	794122	1	Rod-Connecting				
❶32	791118	1	Screw (Connecting Rod)				
❶45	690564	1	Tappet-Valve				
❶46	793880	1	Camshaft				
❶146	691639	1	Key-Timing				
❶741	697128	1	Gear-Timing				
❶757	793242	1	Link-Counterweight				
❶758	793763	1	Counterweight				
❶759	697392	1	Pin-Counterweight				
❶1044	698139	1	Screw (Flywheel)				
❶1270	793243	1	Plug-Counterweight, A V S				

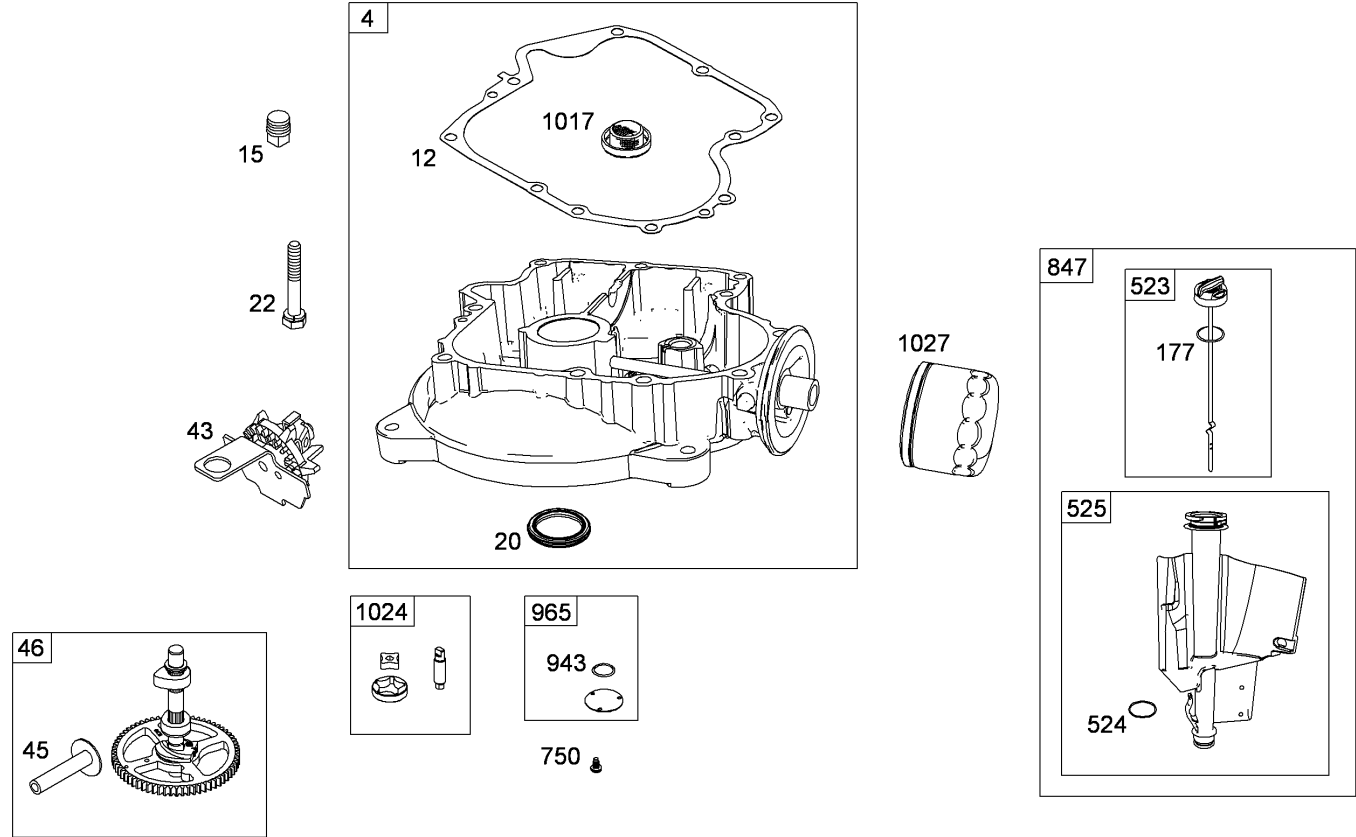


Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly

Briggs and Stratton 331777-0946-B2


Ref	Part No.	Qty.	Description				
14	795993	1	Sump-Engine				
112	697110	1	Gasket-Crankcase				
115	690946	1	Plug-Drain, Oil				
120	795387	1	Seal-Oil (PTO Side)				
122	692125	1	Screw (Crankcase/Cover/Sump)				
143	691968	1	Slinger-Governor, Oil				
145	690564	1	Tappet-Valve				
146	793880	1	Camshaft				
1177	691031	1	Seal-O Ring (Dipstick Tube)				
1523	699908	1	Dipstick				
1524	691032	1	Seal-O Ring (Dipstick Tube)				
1525	697184	1	Tube-Dipstick				
1750	790832	1	Screw (Oil Pump Cover)				
1847	790442	1	Dipstick And Tube ASM				
1943	690589	1	Seal-O Ring (Oil Pump Cover)				
1965	499613	1	Cover-Pump, Oil				
11017	690770	1	Screen-Pump, Oil				
11024	794644	1	Pump-Oil				
11027	492932s	1	Filter-Oil				

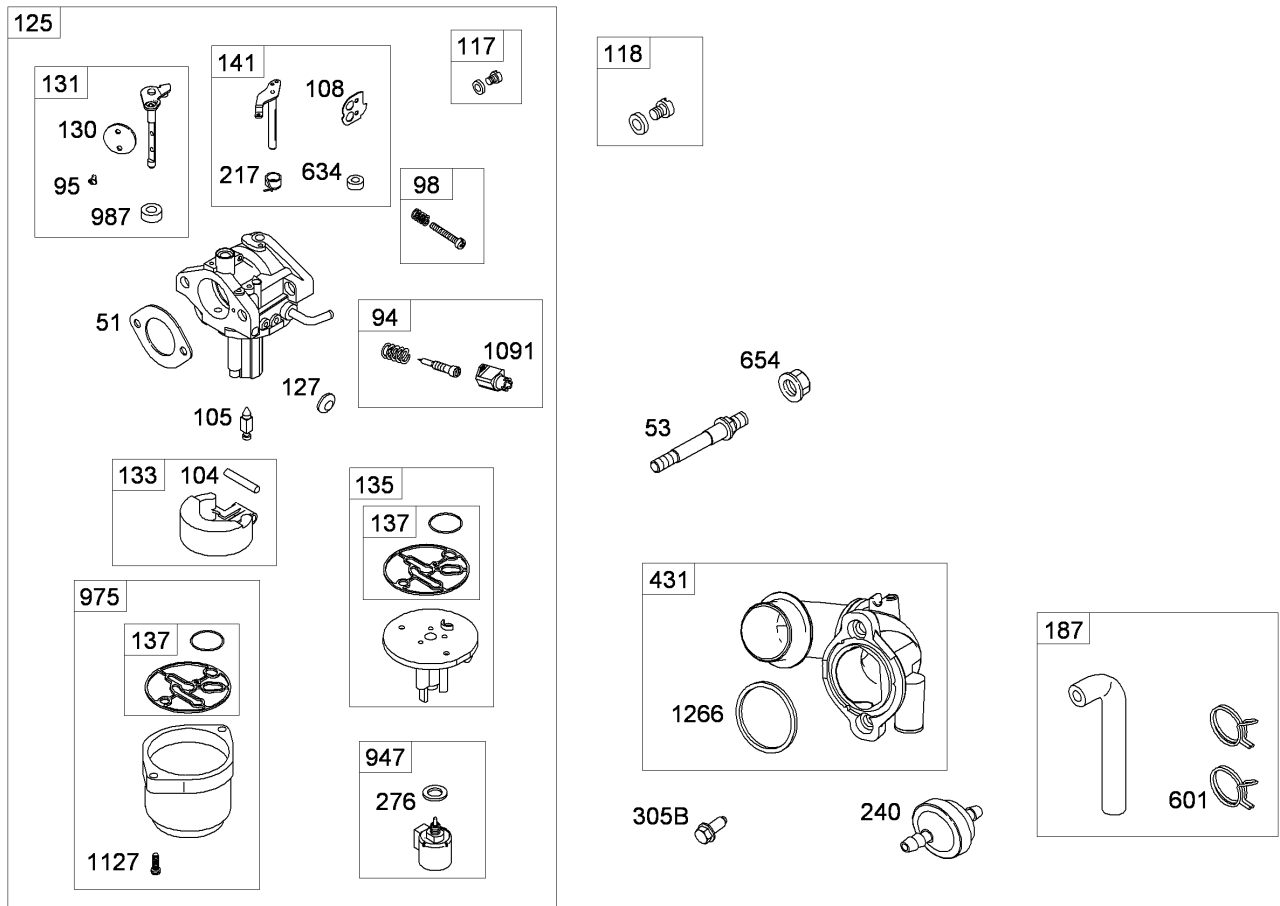

Assemblies include all parts shown in frames

Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1 2 51	692137	1	Gasket-Intake	1 305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)
3 4				1 431	794145	1	Elbow-Intake
1 53	690227	1	Stud (Carburetor)	1 601	791850	1	Clamp-Hose
1 94	793610	1	Idle Mixture Kit	1 634	698779	1	Spring And Seal ASM (Choke Shaft)
1 2 95	690718	1	Screw (Throttle Valve)	1 654	690958	1	Nut (Carburetor)
1 98	695408	1	Idle Speed Kit	1 947	699915	1	Solenoid, Fuel
1 2 104	694918	1	Pin-Hinge, Float	1 975	699502	1	Bowl-Float
1 2 105	696136	1	Valve-Float, Needle	1 2 987	698777	1	Seal-Shaft, Throttle
1 108	695419	1	Valve-Choke	1 1091	691333	1	Cap-Limiter
1 117	791501	1	Jet-Main (Standard)	1 1127	695407	1	Screw (Float Bowl)
1 118	843099	1	Jet-Main (High Altitude)	1 2 1266	691917	1	Seal-O Ring (Intake Elbow) (Red)
1 125	794136	1	Carburetor	3			
1 2 127	690727	1	Plug-Welch				
1 130	792747	1	Valve-Throttle				
1 131	792765	1	Throttle Shaft Kit				
1 133	694914	1	Carburetor Float ASM				
1 135	698780	1	Fuel Transfer Tube ASM				
1 2 137	698781	1	Gasket-Bowl, Float				
1 141	792777	1	Choke Shaft Kit				
1 187	791805	1	Line-Fuel (Formed) (Cut To Required Length)				
1 2 217	695409	1	Spring-Return, Choke				
1 240	394358s	1	Filter-Fuel				
1 276	695410	1	Washer-Sealing				

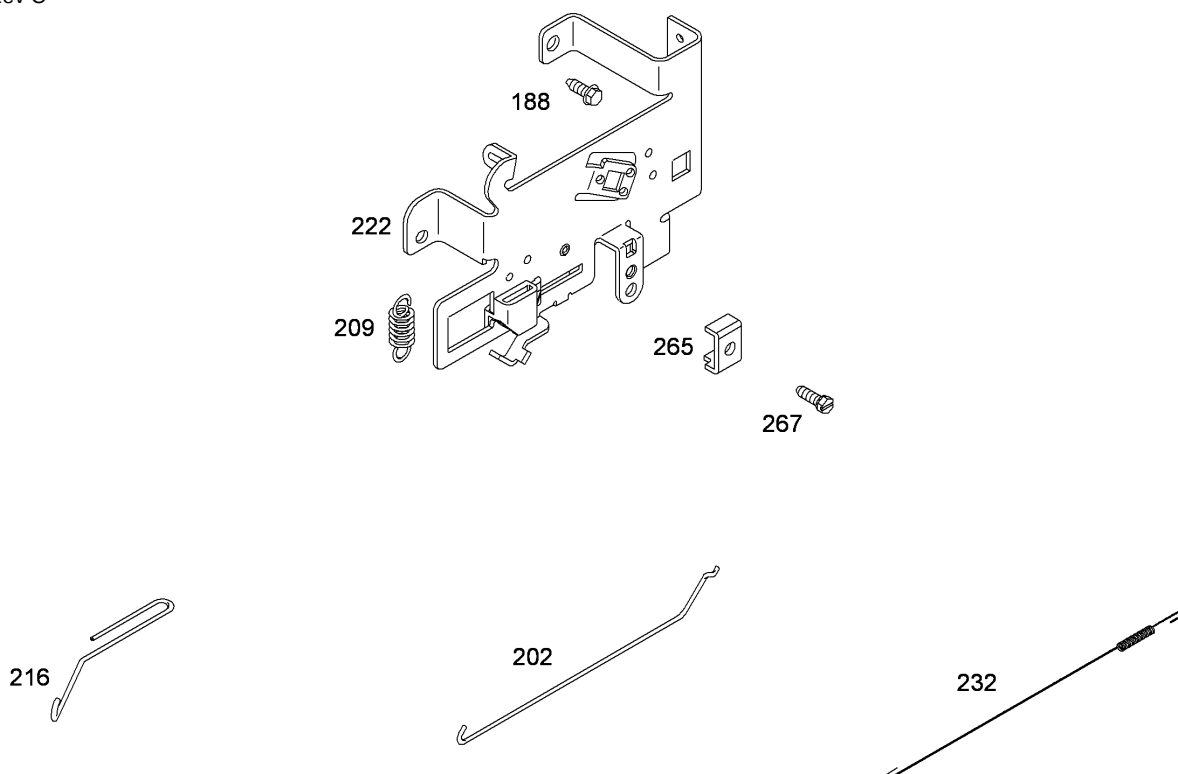


Assemblies include all parts shown in frames

**Governor Control Assembly
Briggs and Stratton 331777-0946-B2**

Ref	Part No.	Qty.	Description				
①188	691693	1	Screw (Control Bracket)				
①202	691841	1	Link-Governor, Mechanical				
①209	692208	1	Spring-Governor (Green)				
①216	691840	1	Link-Choke				
①222	694042	1	Bracket-Control				
①232	691842	1	Spring-Link, Governor				
①265	691024	1	Clamp-Casing				
①267	794904	1	Screw (Casing Clamp)				


1036 Emissions Label

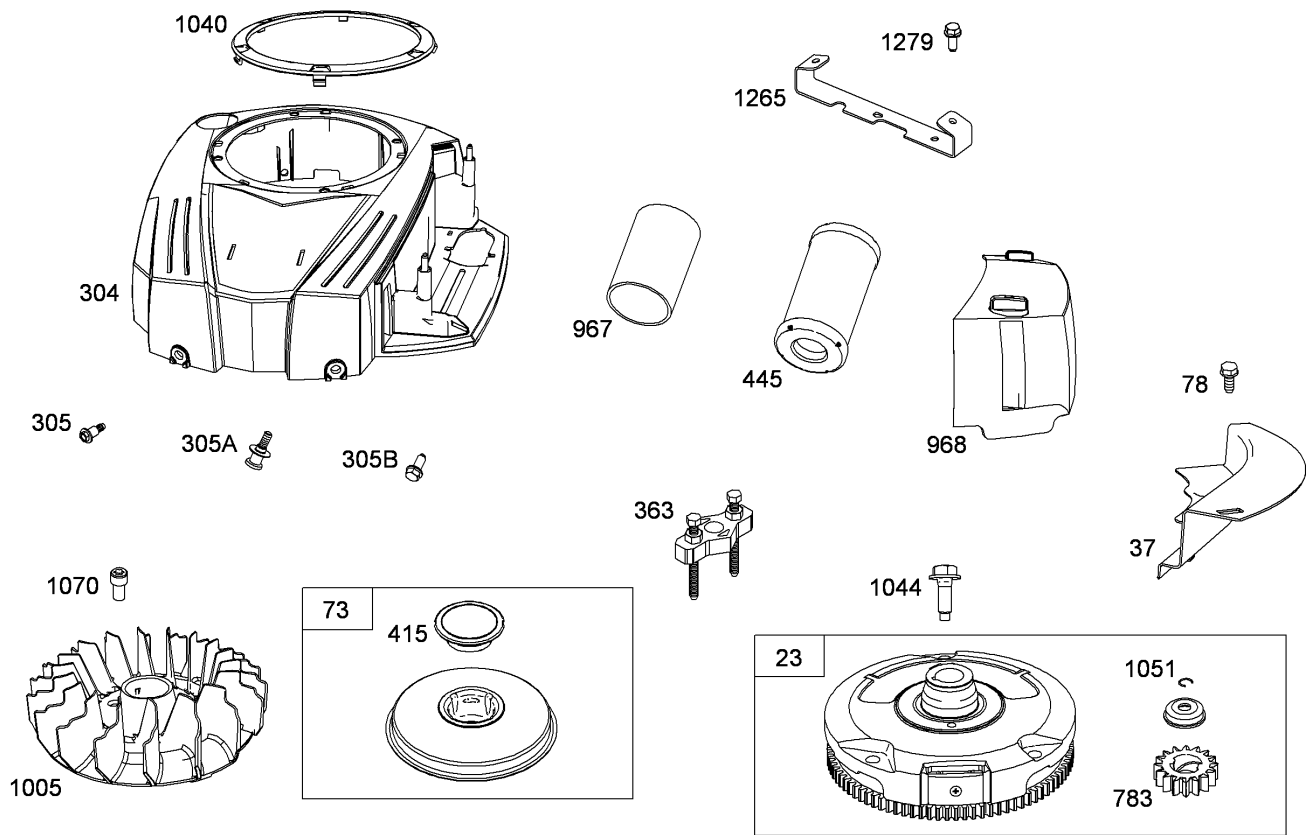

Assemblies include all parts shown in frames

Blower Housing, Flywheel and Air Guide Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description				
❶23	693557	1	Flywheel				
❶37	699882	1	Guard-Flywheel				
❶73	794357	1	Screen-Rotating				
❶78	691003	1	Screw (Flywheel Guard)				
❶304	794918	1	Housing-Blower				
❶305	697102	1	Screw (Blower Housing)				
❶305A	793376	1	Screw (Blower Housing)				
❶305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)				
❶363	19203	1	Puller-Flywheel				
❶415	794129	1	Plug (Rotating Screen)				
❶445	793569	1	Filter-Cartridge, Air Cleaner				
❶783	693713	1	Gear-Pinion				
❶967	693958	1	Filter-Cleaner, Pre				
❶968	794140	1	Cover-Cleaner, Air				
❶1005	794121	1	Fan-Flywheel				
❶1036		1	Label-Emissions				
❶1040	698368	1	Plate-Trim				
❶1044	698139	1	Screw (Flywheel)				
❶1051	691265	1	Ring-Retaining				
❶1070	690363	1	Screw (Flywheel Fan)				
❶1265	794151	1	Support-Housing, Blower				
❶1279	697551	1	Screw (Blower Housing Support)				



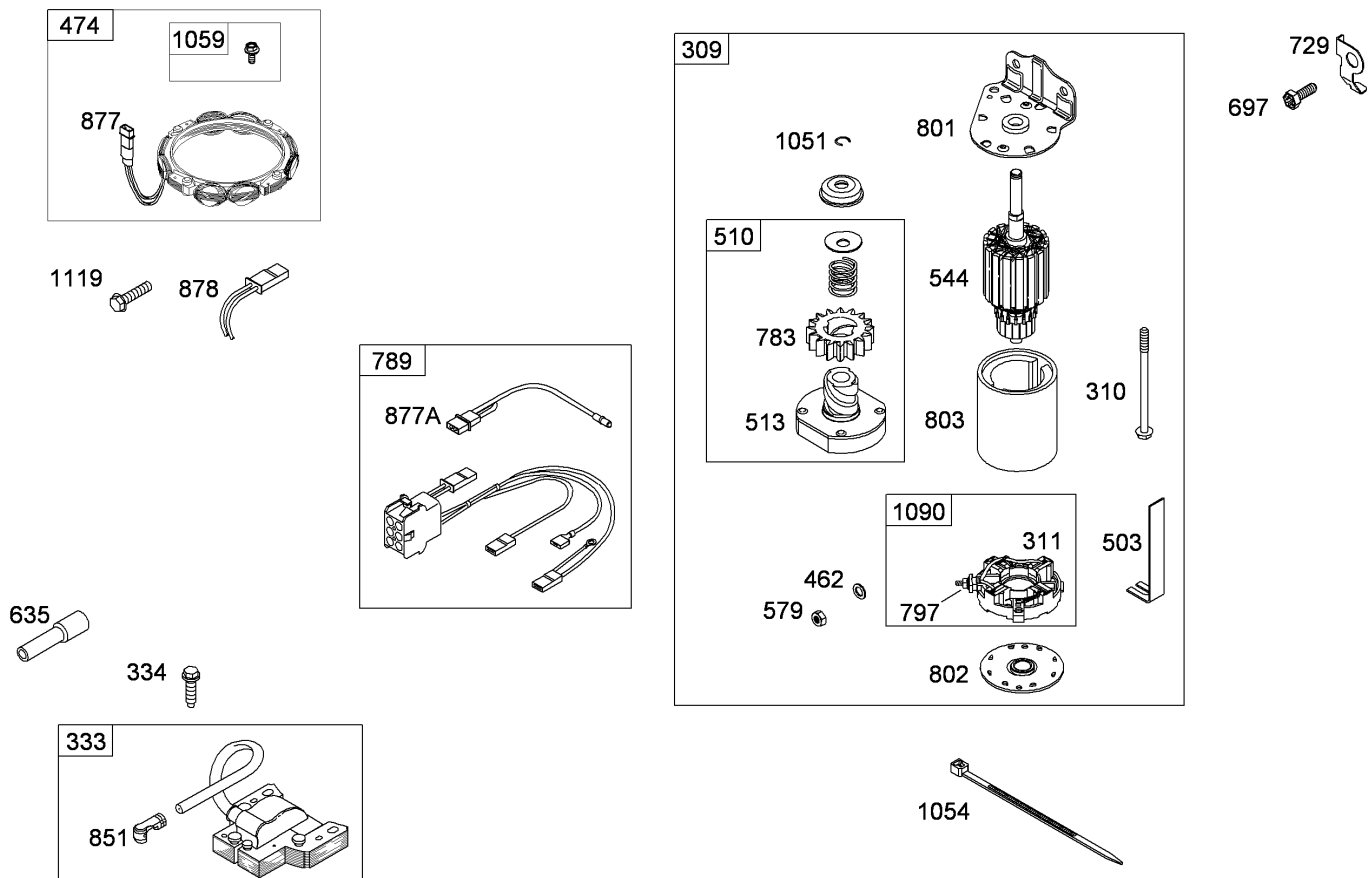


Assemblies include all parts shown in frames

Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
●309	693551	1	Motor-Starter
●310	690323	1	Screw (Starter Motor)
●311	497608	1	Brush Set
●333	795315	1	Armature-Magneto
●334	691061	1	Screw (Magneto Armature)
●462	691261	1	Washer (Starter Cable)
●474	696459	1	Alternator
●503	691532	1	Strap-Starter
●510	693699	1	Drive-Starter
●513	692024	1	Clutch-Drive
●544	692034	1	Armature-Starter
●579	691029	1	Nut (Starter Cable)
●635	691909	1	Boot-Spark Plug
●697	690372	1	Screw (Drive Cap)
●729	691224	1	Clip-Wire
●783	693713	1	Gear-Pinion
●789	698330	1	Harness-Wiring
●797	693167	1	Nut (Brush Retainer)
●801	691283	1	Cap-Drive
●802	691286	1	Cap-End
●803		1	Housing-Starter (Serviced By Ref 309, 693551-Starter Motor)
●851	692424	1	Terminal-Spark Plug
●877	393456	1	Wire-Connector / Alternator

Ref	Part No.	Qty.	Description
●877A	790544	1	Harness-Wiring
●878	398661	1	Harness-Alternator
●1051	691265	1	Ring-Retainer (Starter Motor)
●1054	280275	1	Tie-Cable
●1059	698516	1	Screw And Washer Kit
●1090	691293	1	Retainer-Brush
●1119	691183	1	Screw (Alternator)

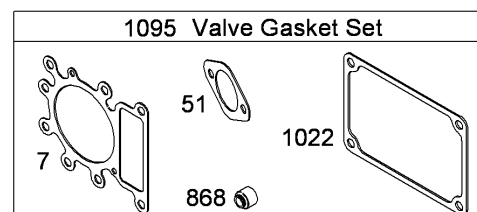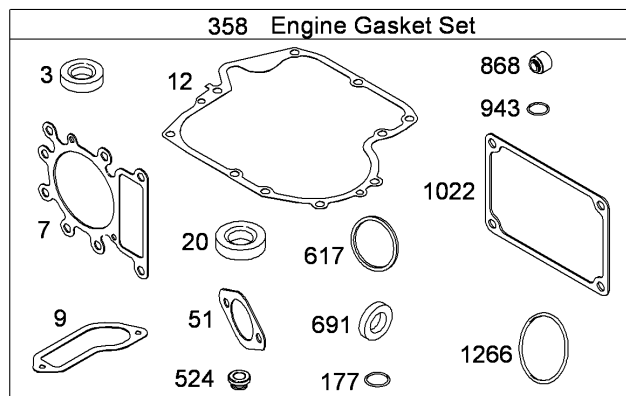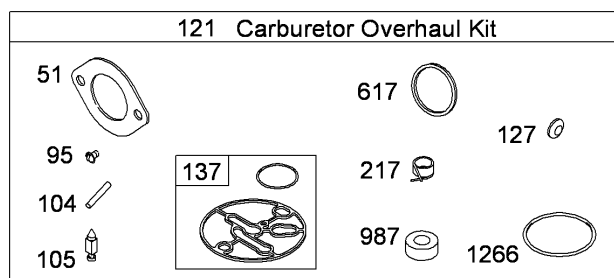

Assemblies include all parts shown in frames

Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1 3 3	391086s	1	Seal-Oil (Magneto Side)	1 3 1022	272475s	1	Gasket-Cover, Rocker
1 3 7	794114	1	Gasket-Head, Cylinder	4			
4				1 1095	794158	1	Valve Gasket Set
1 3 9	697109	1	Gasket-Breather	1 2 1266	691917	1	Seal-O Ring (Intake Elbow) (Red)
1 3 12	697110	1	Gasket-Crankcase	3			
1 3 20	795387	1	Seal-Oil (PTO Side)				
1 2 51	692137	1	Gasket-Intake				
3 4							
1 2 95	690718	1	Screw (Throttle Valve)				
1 2 104	694918	1	Pin-Hinge, Float				
1 2 105	696136	1	Valve-Float, Needle				
1 121	792369	1	Carburetor Overhaul Kit				
1 2 127	690727	1	Plug-Welch				
1 2 137	698781	1	Gasket-Bowl, Float				
1 3 177	691031	1	Seal-O Ring (Dipstick Tube)				
1 2 217	695409	1	Spring-Return, Choke				
1 358	794150	1	Engine Gasket Set				
1 3 524	691032	1	Seal-O Ring (Dipstick Tube)				
1 2 617	692138	1	Seal-O Ring (Intake Manifold) (Red)				
3							
1 3 691	692407	1	Seal-Shaft, Governor				
1 3 868	690968	1	Seal-Valve				
4							
1 3 943	690589	1	Seal-O Ring (Oil Pump Cover)				
1 2 987	698777	1	Seal-Shaft, Throttle				

Attachments and Accessories

For 13AL60RG544 - LX426 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Blade Kit, Extreme (42 Inch)	112-6048
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Blade Kit (2 Blades, 42 Inch Decks)	98022

Attachments and Accessories

For 13RL60RG544 - LX426 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Blade Kit, Extreme (42 Inch)	112-6048
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Blade Kit (2 Blades, 42 Inch Decks)	98022

NOTES

NOTES

NOTES

