



## LX426 Lawn Tractor

Model No. 13AL60RG544 - 1L107H10100 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                                               | Page     | Description                                                                        | Page     |
|-----------------------------------------------------------|----------|------------------------------------------------------------------------------------|----------|
| Front and Rear Wheel Assembly                             | ..... 3  | Crankshaft and Piston/Ring Assembly Briggs and Stratton 331777-0946-B2             | ..... 17 |
| Steering Shaft and Front Axle Assembly                    | ..... 4  | Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2                   | ..... 18 |
| Frame, Battery and PTO Engage Assembly                    | ..... 5  | Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2               | ..... 19 |
| Seat and Fender Assembly                                  | ..... 6  | Governor Control Assembly Briggs and Stratton 331777-0946-B2                       | ..... 20 |
| Dash, Fuel Tank and Hood Assembly                         | ..... 7  | Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 331777-0946-B2 | ..... 21 |
| Transmission, Brake and Traction Pedal Assembly           | ..... 8  | Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2        | ..... 22 |
| Single Speed Transmission Assembly No. 112-6083           | ..... 10 | Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2       | ..... 23 |
| Deck Assembly                                             | ..... 12 | Attachments and Accessories List                                                   | ..... 24 |
| Muffler and Guard Assembly                                | ..... 14 |                                                                                    |          |
| Cylinder Assembly Briggs and Stratton 331777-0946-B2      | ..... 15 |                                                                                    |          |
| Cylinder Head Assembly Briggs and Stratton 331777-0946-B2 | ..... 16 |                                                                                    |          |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HSH. .... hex socket head                  | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |


## Footnotes

- |                                                   |                                                      |
|---------------------------------------------------|------------------------------------------------------|
| ❶ Obtain from your local Briggs & Stratton dealer | ❷ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❸ Included in Engine Gasket Set (Ref. No. 358)    | ❹ Included in Valve Gasket Set (Ref. No. 1095)       |

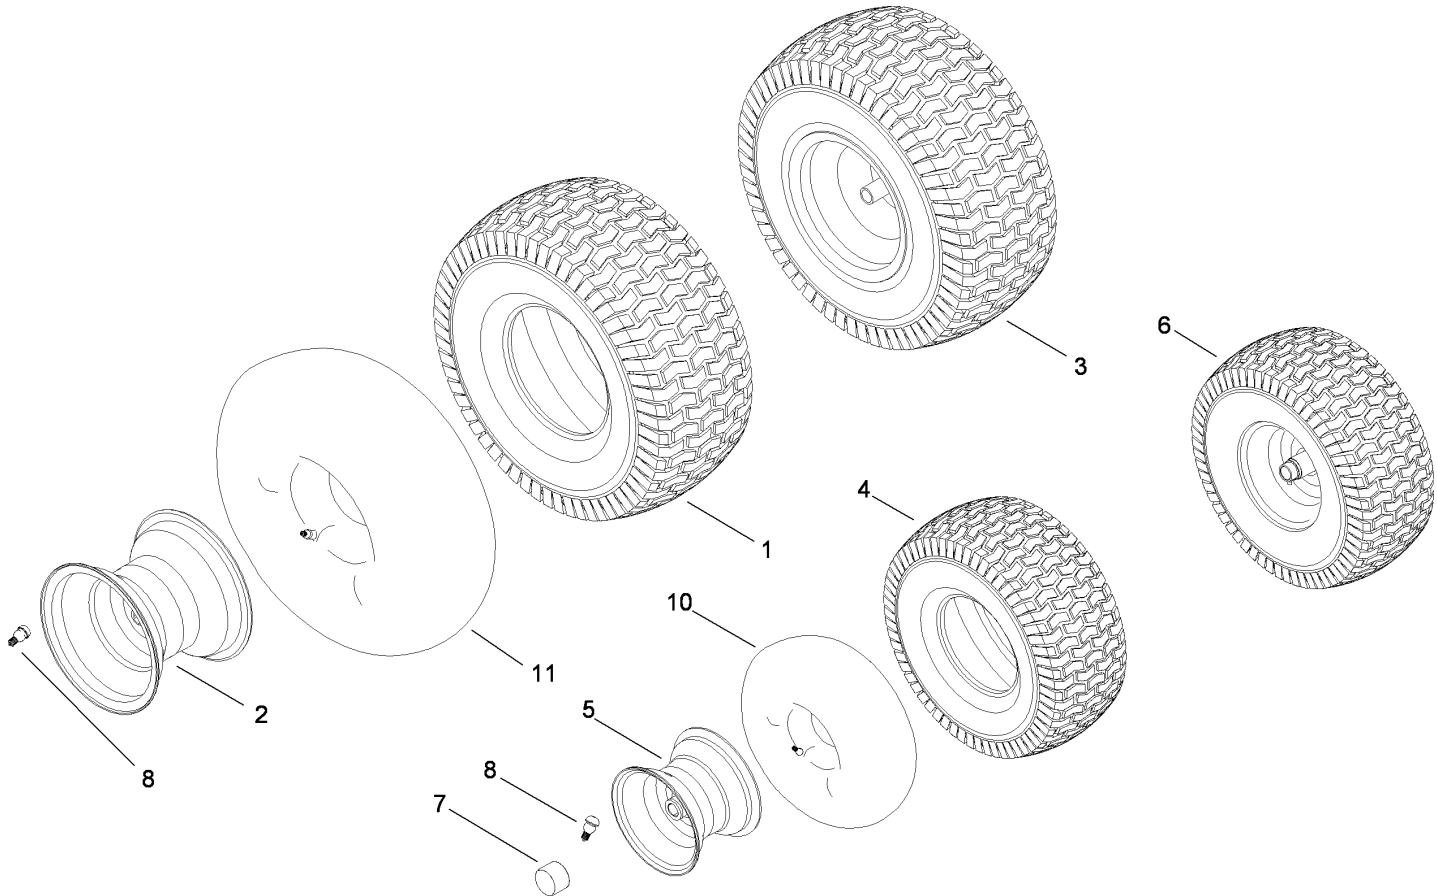


**Front and Rear Wheel Assembly**

| Ref | Part No. | Qty. | Description         |  |  |  |  |
|-----|----------|------|---------------------|--|--|--|--|
| 1   | 112-0713 | 1    | Tire-Multi Trac     |  |  |  |  |
| 2   | 112-6093 | 1    | Rim-Wheel, Rear     |  |  |  |  |
| 3   | 112-0496 | 1    | Rear Wheel ASM      |  |  |  |  |
| 4   | 112-0576 | 1    | Tire-Front          |  |  |  |  |
| 5   | 112-0468 | 1    | Rim-Wheel, Front    |  |  |  |  |
| 6   | 112-0491 | 1    | Front Wheel ASM     |  |  |  |  |
| 7   | 112-5968 | 1    | Cap-Hub             |  |  |  |  |
| 8   | 112-0503 | 1    | Valve-Air, Tubeless |  |  |  |  |
| 10  | 232-39   | 1    | Tube-Inner          |  |  |  |  |
| 11  | 93-3893  | 1    | Tube-Inner          |  |  |  |  |

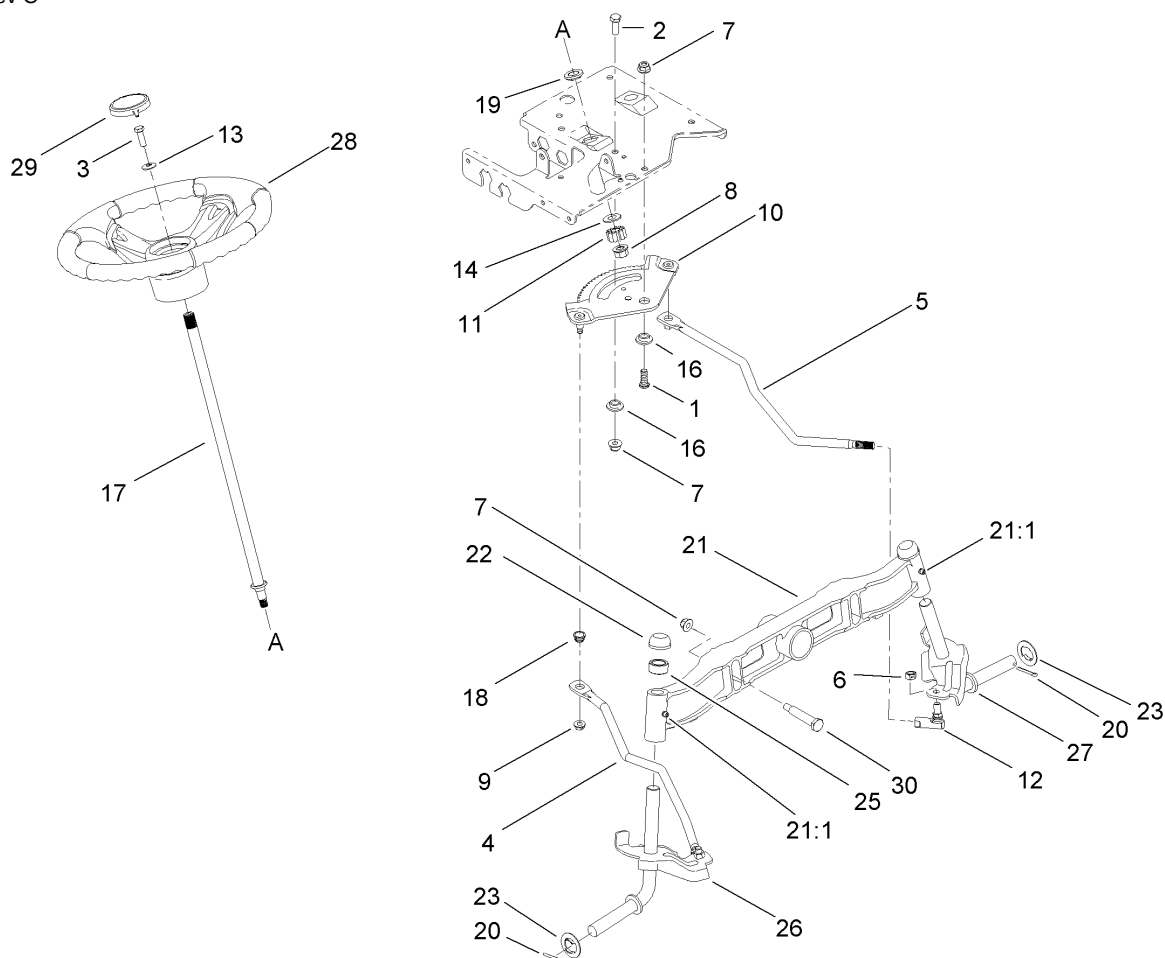

## Steering Shaft and Front Axle Assembly


| Ref  | Part No. | Qty. | Description           | Ref | Part No. | Qty. | Description                |
|------|----------|------|-----------------------|-----|----------|------|----------------------------|
| 1    | 112-0631 | 1    | Screw-HH              | 26  | 112-0547 | 1    | RH Axle ASM                |
| 2    | 112-0492 | 1    | Screw-HH              | 27  | 112-0562 | 1    | LH Axle ASM                |
| 3    | 112-0473 | 1    | Screw-HH              | 28  | 112-6100 | 1    | 3 Spoke Wheel Steering ASM |
| 4    | 112-0355 | 1    | Link-Drag, RH         | 29  | 112-3734 | 1    | Cap-Wheel, Steering        |
| 5    | 112-0346 | 1    | Link-Drag, LH         | 30  | 112-0699 | 1    | Bolt-Shoulder              |
| 6    | 112-0483 | 1    | Nut-Hex, Lock         |     |          |      |                            |
| 7    | 112-0668 | 1    | Nut-Lock, Flange      |     |          |      |                            |
| 8    | 112-0859 | 1    | Nut-Lock, Flange      |     |          |      |                            |
| 9    | 112-0511 | 1    | Nut-Lock, Flange      |     |          |      |                            |
| 10   | 112-0862 | 1    | Gear-Steering         |     |          |      |                            |
| 11   | 112-0863 | 1    | Gear-Pinion, Steering |     |          |      |                            |
| 12   | 112-0917 | 1    | Ball Joint ASM        |     |          |      |                            |
| 13   | 112-0924 | 1    | Washer-Flat           |     |          |      |                            |
| 14   | 112-0925 | 1    | Washer-Flat           |     |          |      |                            |
| 16   | 112-0881 | 1    | Spacer-Shoulder       |     |          |      |                            |
| 17   | 112-6097 | 1    | Shaft-Steering        |     |          |      |                            |
| 18   | 112-0929 | 1    | Bushing               |     |          |      |                            |
| 19   | 112-6098 | 1    | Bearing-Flange, Hex   |     |          |      |                            |
| 20   | 112-0860 | 1    | Pin-Cotter            |     |          |      |                            |
| 21   | 112-6099 | 1    | Pivot-Axle, Cast Iron |     |          |      |                            |
| 21:1 | 112-0926 | 1    | Fitting-Grease        |     |          |      |                            |
| 22   | 112-0323 | 1    | Cap                   |     |          |      |                            |
| 23   | 112-5972 | 1    | Washer-Flat           |     |          |      |                            |
| 25   | 112-6136 | 1    | Spacer                |     |          |      |                            |

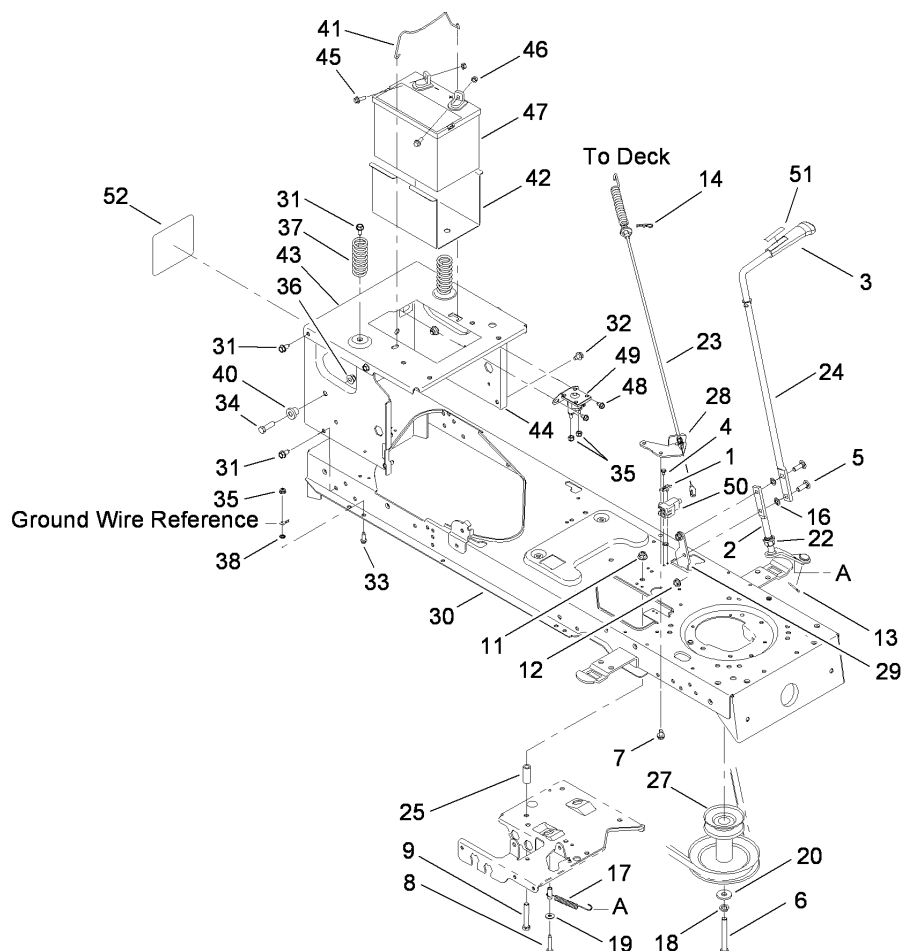

## Frame, Battery and PTO Engage Assembly


| Ref | Part No. | Qty. | Description                 |
|-----|----------|------|-----------------------------|
| 1   | 112-0671 | 1    | Plate-Switch                |
| 2   | 112-6007 | 1    | Lever-Engage, PTO           |
| 3   | 112-6011 | 1    | Knob-PTO                    |
| 4   | 112-0651 | 1    | Screw-TAP                   |
| 5   | 112-0598 | 1    | Bolt-CARR                   |
| 6   | 112-6008 | 1    | Screw-HH                    |
| 7   | 112-0676 | 1    | Screw-TAP                   |
| 8   | 112-0843 | 1    | Screw-HWH                   |
| 9   | 112-0700 | 1    | Screw-HH                    |
| 11  | 112-0668 | 1    | Nut-Lock, Flange            |
| 12  | 112-0511 | 1    | Nut-Lock, Flange            |
| 13  | 112-6010 | 1    | Pin-Cotter                  |
| 14  | 112-0398 | 1    | Pin-Click                   |
| 16  | 112-0645 | 1    | Nut-Push                    |
| 17  | 112-0567 | 1    | Spring-Extension            |
| 18  | 112-0428 | 1    | Washer-Lock                 |
| 19  | 112-3695 | 1    | Washer-Flat                 |
| 20  | 112-0380 | 1    | Washer-Flat                 |
| 22  | 112-0384 | 1    | Bearing-Flange, Hex (Split) |
| 23  | 112-6137 | 1    | Cable-Engage, Deck          |
| 24  | 112-0393 | 1    | Handle-Engage, Deck         |
| 25  | 112-0433 | 1    | Spacer                      |
| 27  | 112-0333 | 1    | Pulley-Engine               |
| 28  | 112-6105 | 1    | Bracket-Mount, Cable        |

| Ref | Part No. | Qty. | Description                     |
|-----|----------|------|---------------------------------|
| 29  | 112-0516 | 1    | Bracket-Stop                    |
| 30  | 112-5974 | 1    | Lower Frame ASM                 |
| 31  | 112-6070 | 1    | Screw-TAP                       |
| 32  | 112-0676 | 1    | Screw-TAP                       |
| 33  | 112-0587 | 1    | Screw-TAP                       |
| 34  | 112-0557 | 1    | Screw-HH                        |
| 35  | 112-0636 | 1    | Nut-Lock, Flange                |
| 36  | 112-0668 | 1    | Nut-Lock, Flange                |
| 37  | 112-0501 | 1    | Spring-Compression              |
| 38  | 112-0703 | 1    | Washer-Lock, External           |
| 40  | 112-0661 | 1    | Spacer-Shoulder                 |
| 41  | 112-0581 | 1    | Rod-Holddown, Battery           |
| 42  | 112-0570 | 1    | Tray-Battery                    |
| 43  | 112-0647 | 1    | Bracket-Frame, Seat             |
| 44  | 112-6107 | 1    | Frame-Upper                     |
| 45  | 112-1070 | 1    | Bolt-Carriage                   |
| 46  | 112-0546 | 1    | Nut-Sems                        |
| 47  | 112-0425 | 1    | Battery-245, Cca (Dry Flat Top) |
| 48  | 112-6108 | 1    | Screw-TAP                       |
| 49  | 112-6073 | 1    | Solenoid-12V, 2 Post 2 Tab      |
| 50  | 112-0455 | 1    | Switch-Interlock                |
| 51  | 112-1274 | 1    | Decal-PTO, Manual               |
| 52  | 112-1284 | 1    | Decal                           |

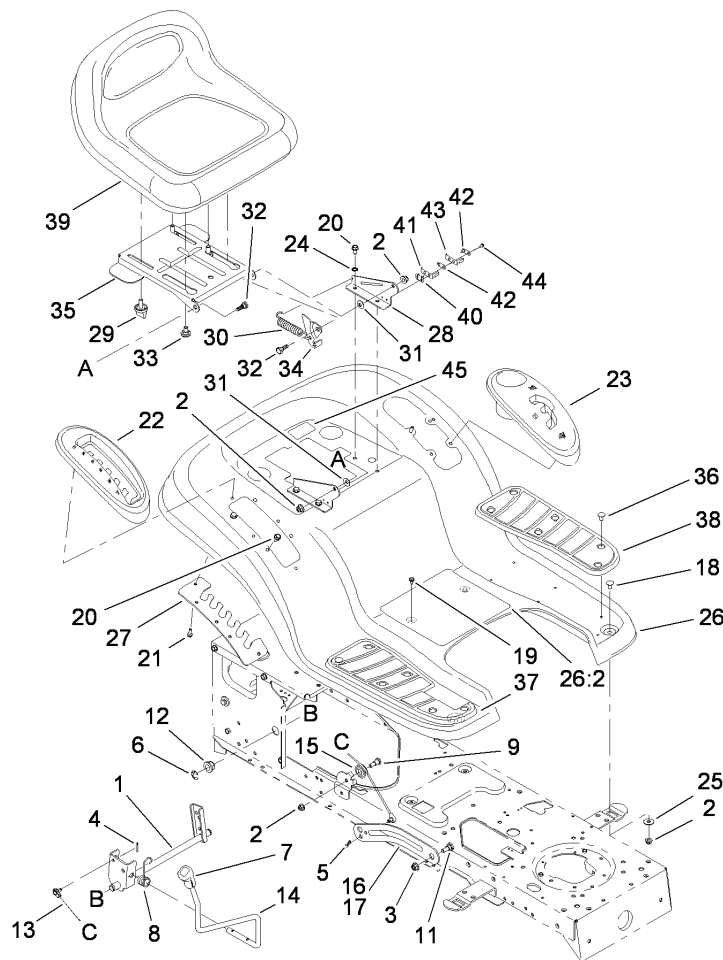

## Seat and Fender Assembly

| Ref | Part No. | Qty. | Description           | Ref  | Part No. | Qty. | Description                  |
|-----|----------|------|-----------------------|------|----------|------|------------------------------|
| 1   | 112-5969 | 1    | Lift Shaft ASM        | 26   | 112-6112 | 1    | Fender                       |
| 2   | 112-0650 | 1    | Nut-Lock, Flange      | 26:2 | 112-1262 | 1    | Decal-Danger                 |
| 3   | 112-0668 | 1    | Nut-Lock, Flange      | 27   | 112-0629 | 1    | Bracket-Adjusting, Lift      |
| 4   | 112-0459 | 1    | Pin-Cotter            | 28   | 112-6046 | 1    | Bracket-Mount, Seat          |
| 5   | 112-0568 | 1    | Pin-Cotter            | 29   | 112-0409 | 1    | Knob                         |
| 6   | 112-0586 | 1    | Ring-E                | 30   | 112-0616 | 1    | Spring-Extension             |
| 7   | 112-0585 | 1    | Grip-Handle           | 31   | 112-0435 | 1    | Washer-Bell                  |
| 8   | 112-0477 | 1    | Spring-Torsion        | 32   | 112-0575 | 1    | Bolt-Shoulder                |
| 9   | 112-0443 | 1    | Bolt-Shoulder         | 33   | 112-0554 | 1    | Bolt-Shoulder                |
| 11  | 112-0669 | 1    | Bolt-Shoulder         | 34   | 112-0646 | 1    | Bracket-Lift, LH             |
| 12  | 112-0347 | 1    | Bearing-Flange        | 35   | 112-6113 | 1    | Bracket-Pivot, Seat          |
| 13  | 112-0374 | 1    | Cable-Lift            | 36   | 112-0549 | 1    | Clip-Ratchet, Fastener       |
| 14  | 112-5970 | 1    | Handle-Lift           | 37   | 112-0540 | 1    | Pad-Foot, RH                 |
| 15  | 112-0502 | 1    | Pulley-Roller         | 38   | 112-0545 | 1    | Pad-Foot, LH                 |
| 16  | 112-6109 | 1    | Arm-Lift, RH          | 39   | 112-6114 | 1    | Seat-Medium                  |
| 17  | 112-6110 | 1    | Arm-Lift, LH          | 40   | 112-0637 | 1    | Plate-Boss, Insulator        |
| 18  | 112-0426 | 1    | Bolt-CARR             | 41   | 112-0532 | 1    | Switch-Spring, Inner         |
| 19  | 112-0524 | 1    | Screw-HWHTF           | 42   | 112-0635 | 1    | Plate-Insulator              |
| 20  | 112-6070 | 1    | Screw-TAP             | 43   | 112-0529 | 1    | Switch-Spring                |
| 21  | 112-0509 | 1    | Screw-TAP             | 44   | 112-0626 | 1    | Screw-HWHTF                  |
| 22  | 112-0869 | 1    | Cover-Lever, Lift     | 45   | 112-1260 | 1    | Decal-Service (Toro Hotline) |
| 23  | 112-6111 | 1    | Cover-Holder (W/Cup)  |      |          |      |                              |
| 24  | 112-0517 | 1    | Washer-Lock, External |      |          |      |                              |
| 25  | 112-0582 | 1    | Washer-Flat           |      |          |      |                              |

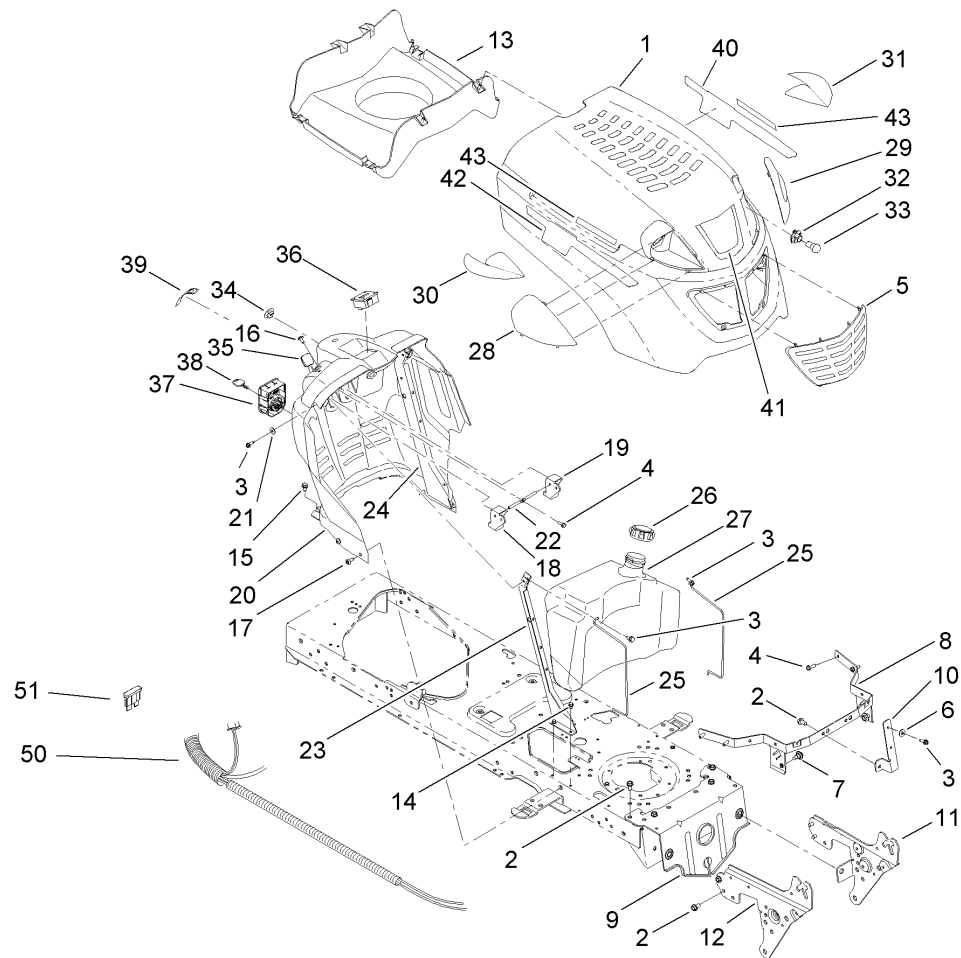


## Dash, Fuel Tank and Hood Assembly

| Ref | Part No. | Qty. | Description                 |
|-----|----------|------|-----------------------------|
| 1   | 112-0444 | 1    | Hood                        |
| 2   | 112-6070 | 1    | Screw-TAP                   |
| 3   | 112-0587 | 1    | Screw-TAP                   |
| 4   | 112-0509 | 1    | Screw-TAP                   |
| 5   | 112-0381 | 1    | Grill                       |
| 6   | 112-3695 | 1    | Washer-Flat                 |
| 7   | 112-6128 | 1    | Bolt-Shoulder, TAP          |
| 8   | 112-5985 | 1    | Bracket-Pivot               |
| 9   | 112-6127 | 1    | Bracket-Pivot               |
| 10  | 112-5986 | 1    | Bracket-Support, Hood       |
| 11  | 112-6126 | 1    | Bracket-Pivot, Support (LH) |
| 12  | 112-6125 | 1    | Bracket-Pivot, Support (RH) |
| 13  | 112-6124 | 1    | Plenum-Hood                 |
| 14  | 112-3696 | 1    | Screw-TAP                   |
| 15  | 112-0676 | 1    | Screw-TAP                   |
| 16  | 112-0550 | 1    | Screw-TAP                   |
| 17  | 112-0563 | 1    | Screw-TAP                   |
| 18  | 112-0526 | 1    | Lever-Cruise                |
| 19  | 112-0580 | 1    | Lever-Brake                 |
| 20  | 112-6123 | 1    | Dash-Manual, PTO            |
| 21  | 112-0485 | 1    | Washer-Spring               |
| 22  | 112-0604 | 1    | Rod-Lever, Bent             |
| 23  | 112-6122 | 1    | Support-Dash, RH            |
| 24  | 112-6121 | 1    | Support-Dash, LH            |

| Ref | Part No. | Qty. | Description             |
|-----|----------|------|-------------------------|
| 25  | 112-0678 | 1    | Rod-Support             |
| 26  | 112-6120 | 1    | Cap-Fuel                |
| 27  | 112-6119 | 1    | Tank-Fuel, 3 Gal        |
| 28  | 112-0447 | 1    | Lens-RH                 |
| 29  | 112-0446 | 1    | Lens-LH                 |
| 30  | 112-5810 | 1    | Reflector-RH            |
| 31  | 112-5811 | 1    | Reflector-LH            |
| 32  | 112-0408 | 1    | Socket-Headlight        |
| 33  | 112-0402 | 1    | Lamp-12V, Miniature     |
| 34  | 112-0535 | 1    | Plug-Choke              |
| 35  | 112-6118 | 1    | Cable-Throttle / Choke  |
| 36  | 112-6117 | 1    | Meter-Hour              |
| 37  | 112-6116 | 1    | Module-Switch, Ignition |
| 38  | 112-6115 | 1    | Key-Ignition            |
| 39  | 112-3702 | 1    | Decal-Throttle          |
| 40  | 112-5952 | 1    | Decal-Hood, Left Side   |
| 41  | 112-3716 | 1    | Decal-Hood              |
| 42  | 112-5953 | 1    | Decal-Hood, Right Side  |
| 43  | 112-6189 | 1    | Decal                   |
| 50  | 112-6187 | 1    | Harness-Wire            |
| 51  | 112-5943 | 1    | Fuse-20 Amp             |

# Transmission, Brake and Traction Pedal Assembly

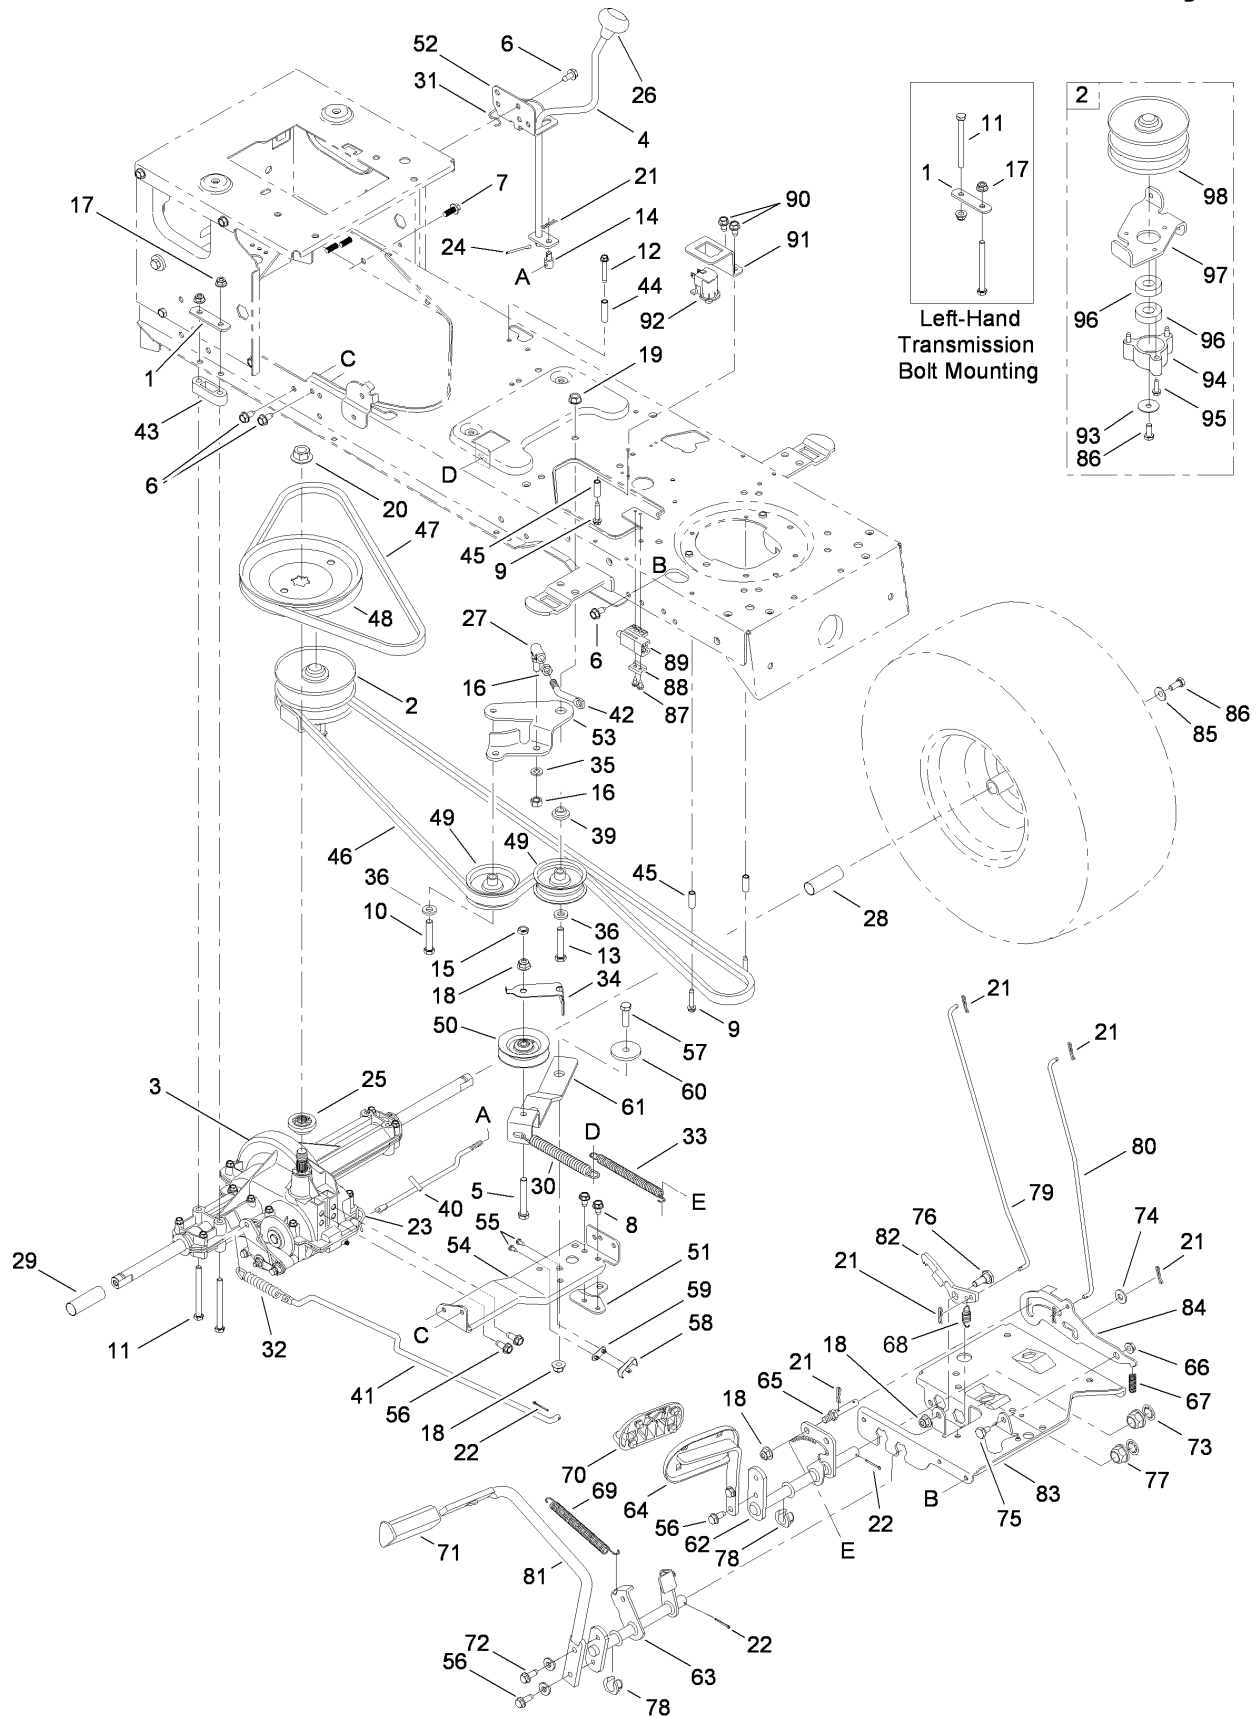


# Transmission, Brake and Traction Pedal Assembly

| Ref | Part No. | Qty. | Description                    |
|-----|----------|------|--------------------------------|
| 1   | 112-0628 | 1    | Bracket-Mounting, Transmission |
| 2   | 112-6129 | 1    | Pulley ASM                     |
| 3   | 112-6083 | 1    | Single Speed Transaxle ASM     |
| 4   | 112-0627 | 1    | Shift Lever ASM                |
| 5   | 112-6130 | 1    | Screw-HH                       |
| 6   | 112-6070 | 1    | Screw-TAP                      |
| 7   | 112-6131 | 1    | Screw-HH                       |
| 8   | 112-0676 | 1    | Screw-TAP                      |
| 9   | 112-0603 | 1    | Screw-HH                       |
| 10  | 112-0469 | 1    | Screw-TAP                      |
| 11  | 112-0667 | 1    | Screw-HH                       |
| 12  | 112-0839 | 1    | Screw-TAP                      |
| 13  | 112-0421 | 1    | Screw-HH                       |
| 14  | 112-0592 | 1    | Ferrule-Adjustable             |
| 15  | 112-6132 | 1    | Nut-Jam, Lock                  |
| 16  | 112-0343 | 1    | Nut-Hex                        |
| 17  | 112-0650 | 1    | Nut-Lock, Flange               |
| 18  | 112-0668 | 1    | Nut-Lock, Flange               |
| 19  | 112-0385 | 1    | Nut-Lock, Flange               |
| 20  | 112-0451 | 1    | Nut-Flange                     |
| 21  | 112-0459 | 1    | Pin-Cotter                     |
| 22  | 112-0568 | 1    | Pin-Cotter                     |
| 23  | 112-0639 | 1    | Pin-Hair                       |
| 24  | 112-0412 | 1    | Pin-Cotter                     |
| 25  | 112-0450 | 1    | Hub-Pulley                     |
| 26  | 112-0514 | 1    | Knob-Shift                     |
| 27  | 112-0306 | 1    | Ball Joint ASM                 |
| 28  | 112-0670 | 1    | Sleeve                         |
| 29  | 112-0683 | 1    | Sleeve                         |
| 30  | 112-5991 | 1    | Spring-Extension               |
| 31  | 112-0357 | 1    | Clip-Spring, Shifter           |
| 32  | 112-0350 | 1    | Spring-Extension               |
| 33  | 112-0348 | 1    | Spring-Extension               |
| 34  | 112-5883 | 1    | Guide-Belt, Traction           |
| 35  | 112-0415 | 1    | Washer-Lock                    |
| 36  | 112-0544 | 1    | Washer-Flat                    |
| 39  | 112-0345 | 1    | Spacer-Shoulder                |
| 40  | 112-5992 | 1    | Rod-Shift                      |
| 41  | 112-0655 | 1    | Rod-Brake                      |
| 42  | 112-0538 | 1    | Rod-Adjustment, Idler          |
| 43  | 112-0673 | 1    | Spacer-Transaxle               |
| 44  | 112-5831 | 1    | Spacer                         |
| 45  | 112-0644 | 1    | Spacer                         |
| 46  | 112-0301 | 1    | Belt-Drive, Variable Speed     |
| 47  | 112-0305 | 1    | Belt-Drive, Transmission       |
| 48  | 112-0379 | 1    | Pulley-V (W/Hub)               |
| 49  | 112-0313 | 1    | Pulley-Idler, Flat             |
| 50  | 112-6133 | 1    | Pulley-Idler, V-Type           |
| 51  | 112-0701 | 1    | Bracket-Shift                  |
| 52  | 112-0638 | 1    | Bracket-Shift                  |
| 53  | 112-0525 | 1    | Bracket-Idler, Center Double   |
| 54  | 112-6134 | 1    | Bracket ASM                    |

| Ref | Part No. | Qty. | Description                   |
|-----|----------|------|-------------------------------|
| 55  | 112-0626 | 1    | Screw-HWHTF                   |
| 56  | 112-0395 | 1    | Screw-HWH                     |
| 57  | 112-0557 | 1    | Screw-HH                      |
| 58  | 112-0602 | 1    | Switch-Spring, Short          |
| 59  | 112-0625 | 1    | Plate-Insulator               |
| 60  | 112-0584 | 1    | Spacer-Shoulder               |
| 61  | 112-6135 | 1    | Bracket-Idler                 |
| 62  | 112-0539 | 1    | Speed Control ASM             |
| 63  | 112-5998 | 1    | Speed Control ASM             |
| 64  | 112-0680 | 1    | Pedal ASM                     |
| 65  | 112-0599 | 1    | Pin                           |
| 66  | 112-0511 | 1    | Nut-Lock, Flange              |
| 67  | 112-0506 | 1    | Spring                        |
| 68  | 112-0510 | 1    | Spring-Extension              |
| 69  | 112-0348 | 1    | Spring-Extension              |
| 70  | 112-0543 | 1    | Pad-Pedal                     |
| 71  | 112-6001 | 1    | Pad-Brake                     |
| 72  | 112-0366 | 1    | Washer-Lock                   |
| 73  | 112-0339 | 1    | Washer-Flat                   |
| 74  | 112-0541 | 1    | Washer-Flat                   |
| 75  | 112-0542 | 1    | Bolt-Shoulder                 |
| 76  | 112-0442 | 1    | Bolt-Shoulder                 |
| 77  | 112-0347 | 1    | Bearing-Flange                |
| 78  | 112-0387 | 1    | Bearing-Flange, Hex (Split)   |
| 79  | 112-0675 | 1    | Rod-Brake, Lock Control       |
| 80  | 112-0662 | 1    | Rod-Control, Cruise           |
| 81  | 112-6005 | 1    | Pedal-Brake                   |
| 82  | 112-6004 | 1    | Latch-Cruise                  |
| 83  | 112-0681 | 1    | Bracket-Support, Steering     |
| 84  | 112-0679 | 1    | Bracket-Lockout               |
| 85  | 112-0435 | 1    | Washer-Bell                   |
| 86  | 112-0551 | 1    | Screw-HH                      |
| 87  | 112-0651 | 1    | Screw-TAP                     |
| 88  | 112-0671 | 1    | Plate-Switch                  |
| 89  | 112-0455 | 1    | Switch-Interlock              |
| 90  | 112-0524 | 1    | Screw-HWHTF                   |
| 91  | 112-3737 | 1    | Bracket-Switch, Parking Brake |
| 92  | 112-0441 | 1    | Switch-Mount, Snap            |
| 93  | 112-0500 | 1    | Washer-Flat                   |
| 94  | 112-5996 | 1    | Cup-Bearing                   |
| 95  | 112-0843 | 1    | Screw-HWH                     |
| 96  | 112-0928 | 1    | Bearing-Ball                  |
| 97  | 112-5995 | 1    | Bracket-Pulley                |
| 98  | 112-6129 | 1    | Pulley ASM                    |


# Single Speed Transmission Assembly No. 112-6083

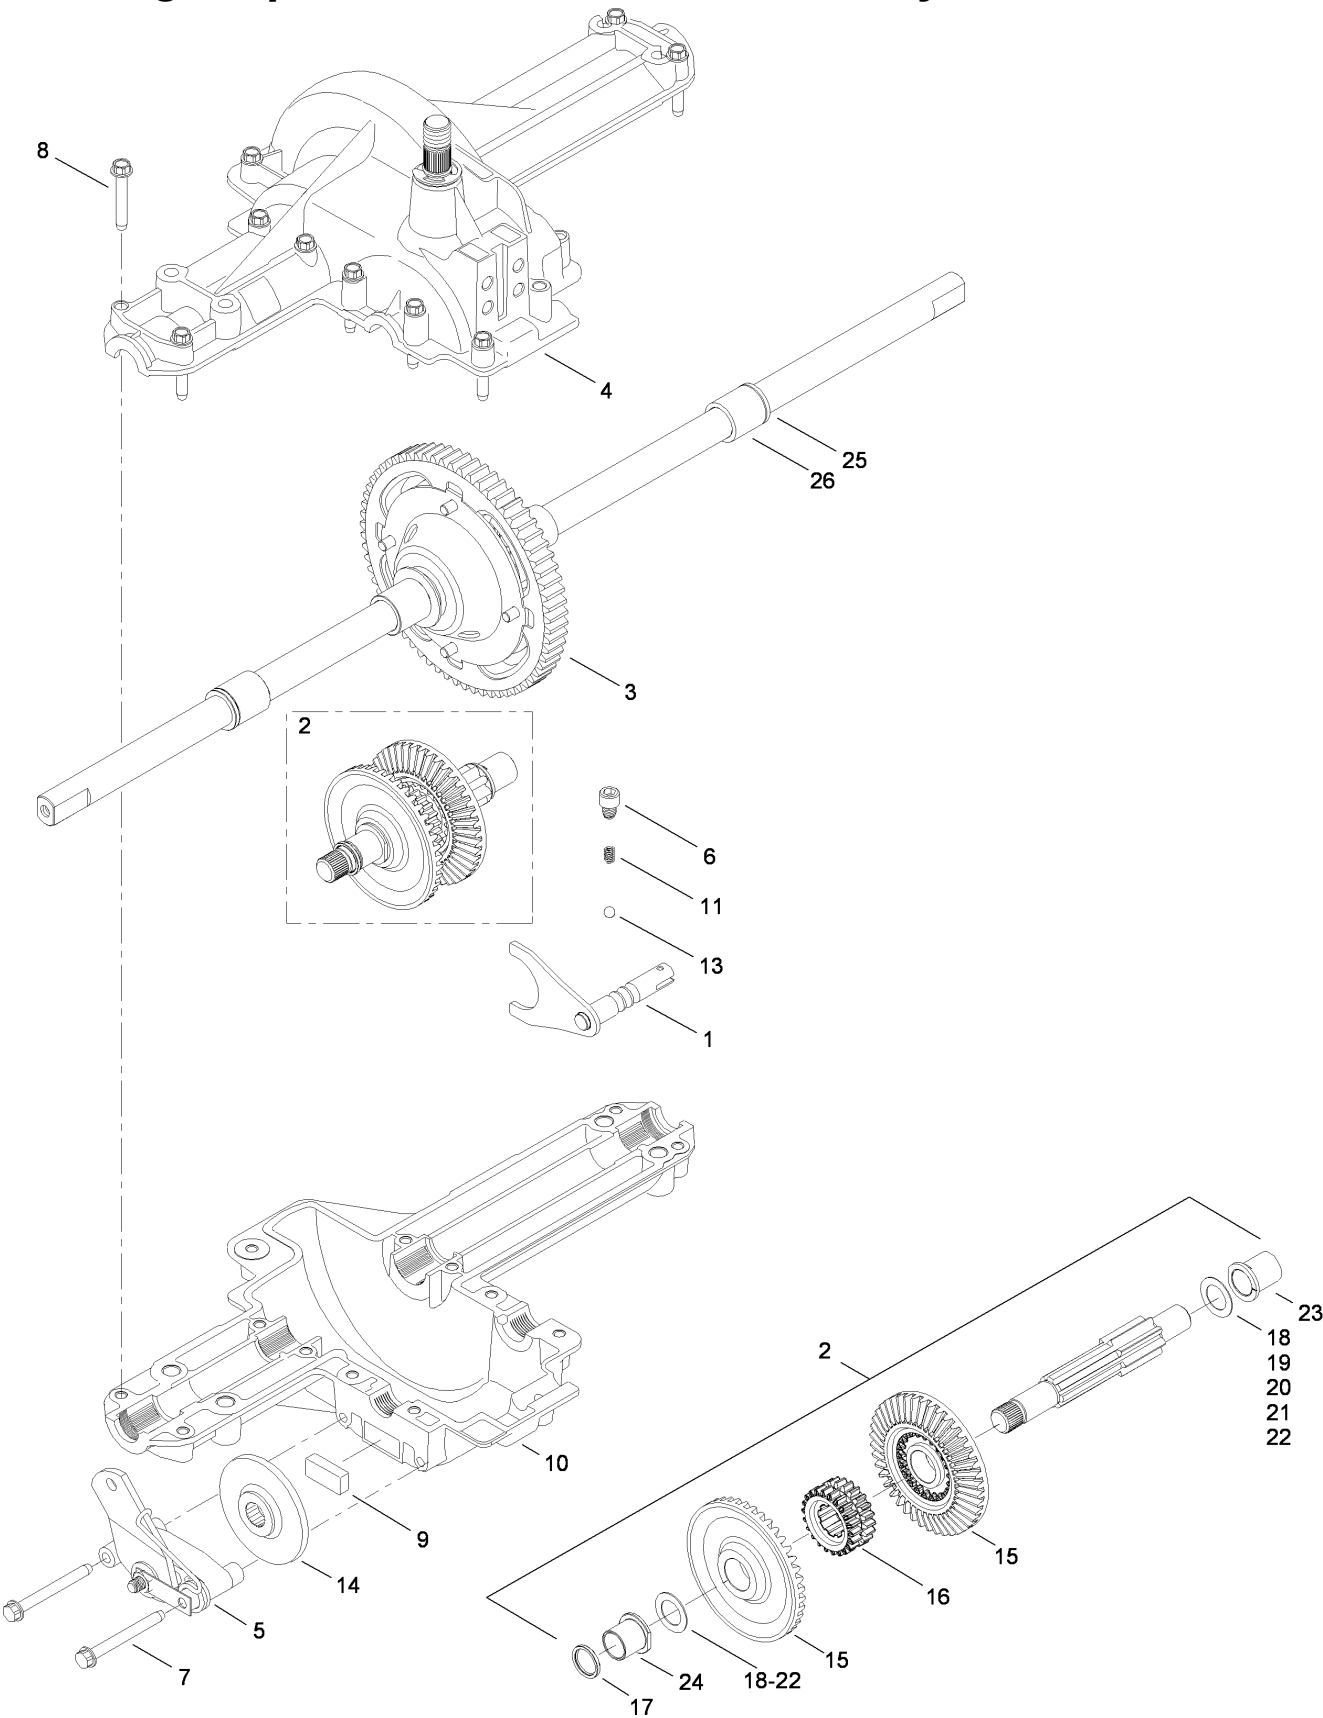

# Single Speed Transmission Assembly No. 112-6083

| Ref | Part No. | Qty. | Description              |  |  |  |  |
|-----|----------|------|--------------------------|--|--|--|--|
| 1   | 112-0806 | 1    | Shift Fork ASM           |  |  |  |  |
| 2   | 112-6084 | 1    | Drive Shaft ASM          |  |  |  |  |
| 3   | 112-6085 | 1    | Differential ASM         |  |  |  |  |
| 4   | 112-6086 | 1    | Upper Housing ASM        |  |  |  |  |
| 5   | 112-0832 | 1    | Brake ASM                |  |  |  |  |
| 6   | 112-6087 | 1    | Screw-TAP                |  |  |  |  |
| 7   | 112-0698 | 1    | Screw-HWH                |  |  |  |  |
| 8   | 112-0839 | 1    | Screw-TAP                |  |  |  |  |
| 9   | 112-0741 | 1    | Puck-Brake               |  |  |  |  |
| 10  | 112-6088 | 1    | Housing-Lower            |  |  |  |  |
| 11  | 112-0801 | 1    | Spring-Detent            |  |  |  |  |
| 13  | 112-0799 | 1    | Ball-Detent              |  |  |  |  |
| 14  | 112-0817 | 1    | Disc-Brake               |  |  |  |  |
| 15  | 112-6089 | 1    | Gear-Bevel, 42T (Spline) |  |  |  |  |
| 16  | 112-6090 | 1    | Collar-Cluster           |  |  |  |  |
| 17  | 112-6091 | 1    | Seal                     |  |  |  |  |
| 18  | 112-0748 | 1    | Washer-Flat              |  |  |  |  |
| 19  | 112-0750 | 1    | Washer-Flat              |  |  |  |  |
| 20  | 112-0745 | 1    | Washer-Flat              |  |  |  |  |
| 21  | 112-0773 | 1    | Washer-Thrust            |  |  |  |  |
| 22  | 112-0755 | 1    | Washer-Thrust            |  |  |  |  |
| 23  | 112-0794 | 1    | Bearing-Flange           |  |  |  |  |
| 24  | 112-0795 | 1    | Bearing-Flange           |  |  |  |  |
| 25  | 112-0800 | 1    | Seal                     |  |  |  |  |
| 26  | 112-6092 | 1    | Bearing-Sleeve           |  |  |  |  |


Deck Assembly

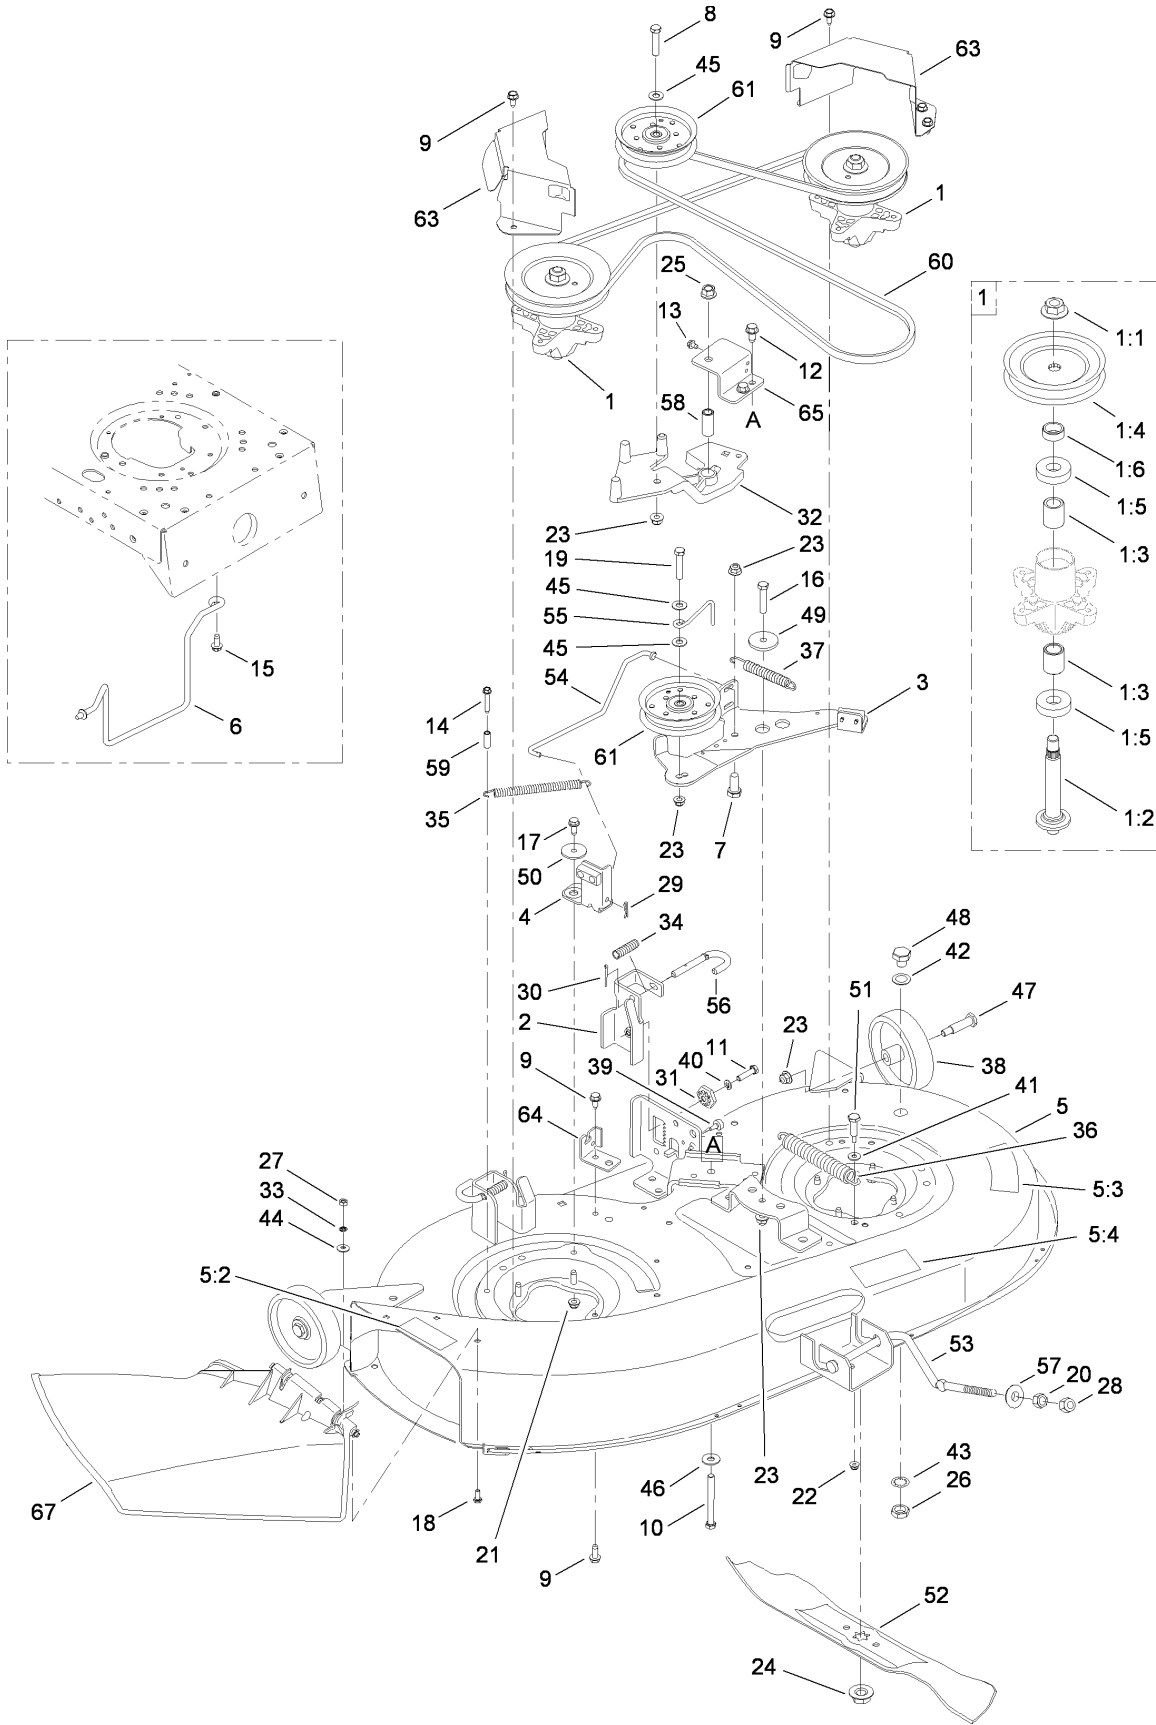

# Deck Assembly


| Ref | Part No. | Qty. | Description           |
|-----|----------|------|-----------------------|
| 1   | 112-6063 | 1    | Spindle ASM           |
| 1:1 | 112-0330 | 1    | Nut-Flange, Hex       |
| 1:2 | 112-6062 | 1    | Shaft-Spindle         |
| 1:3 | 112-0389 | 1    | Spacer                |
| 1:4 | 112-0613 | 1    | Pulley-Deck           |
| 1:5 | 112-0377 | 1    | Bearing-Ball          |
| 1:6 | 112-6061 | 1    | Spacer                |
| 2   | 112-0413 | 1    | LH Hanger Bracket ASM |
| 3   | 112-0606 | 1    | Deck Brake ASM        |
| 4   | 112-3742 | 1    | Brake ASM             |
| 5   | 112-5857 | 1    | Deck And Decal ASM    |
| 5:2 | 112-1267 | 1    | Decal-Danger          |
| 5:3 | 112-1265 | 1    | Decal-Danger          |
| 5:4 | 112-1270 | 1    | Decal-Routing, Belt   |
| 6   | 112-6071 | 1    | Rod-Keeper, Belt      |
| 7   | 112-0855 | 1    | Screw-HH              |
| 8   | 112-0513 | 1    | Screw-HH              |
| 9   | 112-6070 | 1    | Screw-TAP             |
| 10  | 112-3745 | 1    | Screw-HH              |
| 11  | 112-0373 | 1    | Screw-HH              |
| 12  | 112-0906 | 1    | Screw-HWHTF           |
| 13  | 112-6022 | 1    | Screw-TAP             |
| 14  | 112-0843 | 1    | Screw-HWH             |
| 15  | 112-0395 | 1    | Screw-HWH             |
| 16  | 112-0557 | 1    | Screw-HH              |
| 17  | 112-1090 | 1    | Screw-HH              |
| 18  | 112-0499 | 1    | Screw-HH              |
| 19  | 112-0421 | 1    | Screw-HH              |
| 20  | 112-0458 | 1    | Nut-Hex               |
| 21  | 112-0650 | 1    | Nut-Lock, Flange      |
| 22  | 112-0636 | 1    | Nut-Lock, Flange      |
| 23  | 112-0668 | 1    | Nut-Lock, Flange      |
| 24  | 112-0330 | 1    | Nut-Flange, Hex       |
| 25  | 112-0859 | 1    | Nut-Lock, Flange      |
| 26  | 112-0351 | 1    | Nut-Hex               |
| 27  | 112-0522 | 1    | Nut-Hex               |
| 28  | 112-0476 | 1    | Nut-Lock, Hex (Nylon) |
| 29  | 112-0459 | 1    | Pin-Cotter            |
| 30  | 112-0412 | 1    | Pin-Cotter            |
| 31  | 112-0327 | 1    | Gear-Adjustment, Deck |
| 32  | 112-6069 | 1    | Bracket-Idler         |
| 33  | 112-0623 | 1    | Retainer-Bolt         |
| 34  | 112-0406 | 1    | Spring-Compression    |
| 35  | 112-0528 | 1    | Spring-Extension      |
| 36  | 112-6043 | 1    | Spring-Extension      |
| 37  | 112-3746 | 1    | Spring-Extension      |
| 38  | 112-0337 | 1    | Wheel-Deck, Rear      |
| 39  | 112-1016 | 1    | Bumper                |
| 40  | 112-0366 | 1    | Washer-Lock           |
| 41  | 112-3695 | 1    | Washer-Flat           |
| 42  | 112-0339 | 1    | Washer-Flat           |
| 43  | 112-0643 | 1    | Washer-Lock           |

| Ref | Part No. | Qty. | Description                |
|-----|----------|------|----------------------------|
| 44  | 112-0485 | 1    | Washer-Spring              |
| 45  | 112-0572 | 1    | Washer-Flat                |
| 46  | 112-0380 | 1    | Washer-Flat                |
| 47  | 112-0334 | 1    | Bolt-Shoulder              |
| 48  | 112-0577 | 1    | Plug                       |
| 49  | 112-0584 | 1    | Spacer-Shoulder            |
| 50  | 112-3747 | 1    | Spacer-Shoulder            |
| 51  | 112-6068 | 1    | Bolt-Shoulder              |
| 52  | 112-0315 | 1    | Blade                      |
| 53  | 112-0607 | 1    | Rod-Deck, Front Adjustment |
| 54  | 112-3748 | 1    | Rod-Brake                  |
| 55  | 112-5879 | 1    | Rod-Keeper, Belt           |
| 56  | 112-0436 | 1    | Pin-Handle, Deck Release   |
| 57  | 112-0641 | 1    | Cup-Pivot, Lift            |
| 58  | 112-3749 | 1    | Spacer                     |
| 59  | 112-0644 | 1    | Spacer                     |
| 60  | 112-5800 | 1    | Belt-V Type                |
| 61  | 112-0314 | 1    | Pulley-Idler               |
| 63  | 112-6067 | 1    | Cover-Belt                 |
| 64  | 112-0718 | 1    | Bracket-Cable, Deck        |
| 65  | 112-6066 | 1    | Support-Bracket, Pivot     |
| 67  | 112-0353 | 1    | Discharge Chute ASM        |

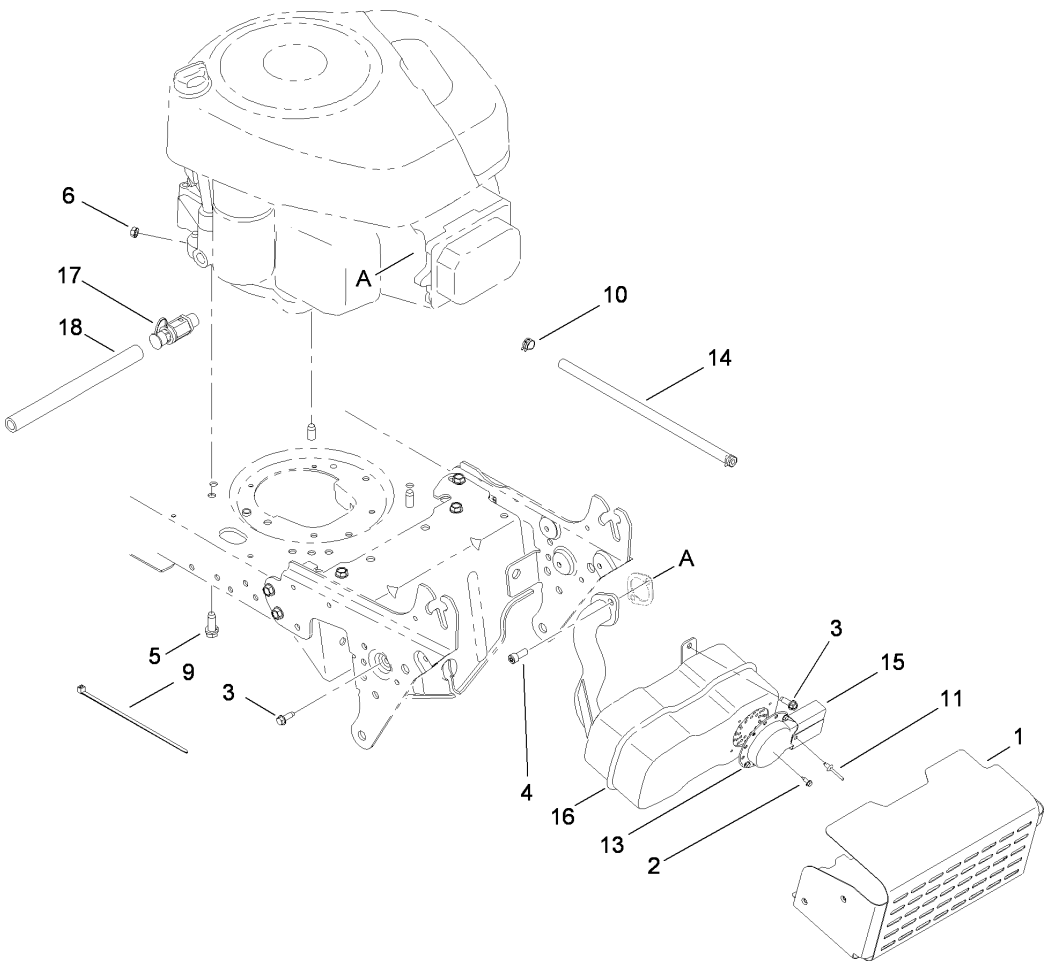

Muffler and Guard Assembly

| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 1   | 112-6096 | 1    | Shield-Muffler          |  |  |  |  |
| 2   | 112-0626 | 1    | Screw-HWHTF             |  |  |  |  |
| 3   | 112-0587 | 1    | Screw-TAP               |  |  |  |  |
| 4   | 112-6012 | 1    | Screw-HSH               |  |  |  |  |
| 5   | 112-0487 | 1    | Screw-TAP               |  |  |  |  |
| 6   | 112-0546 | 1    | Nut-Sems                |  |  |  |  |
| 9   | 112-0527 | 1    | Tie-Cable               |  |  |  |  |
| 10  | 112-0573 | 1    | Clamp-Hose              |  |  |  |  |
| 11  | 112-3741 | 1    | Rivet-Pop               |  |  |  |  |
| 13  | 112-0453 | 1    | Deflector-Muffler       |  |  |  |  |
| 14  | 112-0720 | 1    | Hose-Fuel               |  |  |  |  |
| 15  | 112-0730 | 1    | Deflector-Muffler, Long |  |  |  |  |
| 16  | 112-6095 | 1    | Muffler-Single Inlet    |  |  |  |  |
| 17  | 112-6094 | 1    | Drain-Oil               |  |  |  |  |
| 18  | 112-0553 | 1    | Hose-Drain              |  |  |  |  |

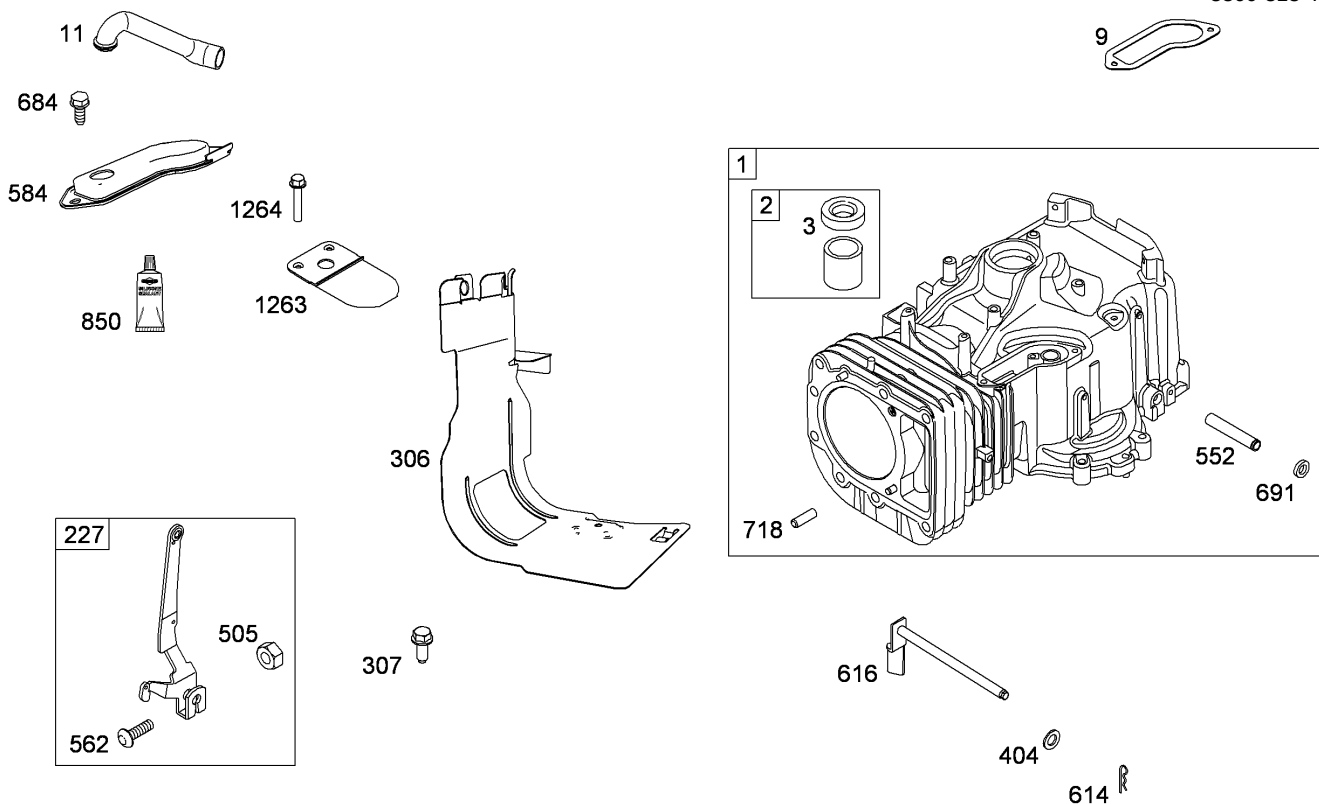

1330 Repair Manual

48 Short Block

1058 Operator Manual






Assemblies include all parts shown in frames

## Cylinder Assembly

### Briggs and Stratton 331777-0946-B2

| Ref   | Part No. | Qty. | Description                                                |
|-------|----------|------|------------------------------------------------------------|
| ❶1    | 794128   | 1    | Cylinder Assembly                                          |
| ❷2    | 399265   | 1    | Bushing And Seal Kit (Magneto Side)                        |
| ❸3    | 391086s  | 1    | Seal-Oil (Magneto Side)                                    |
| ❹9    | 697109   | 1    | Gasket-Breather                                            |
| ❺11   | 794683   | 1    | Tube-Breather                                              |
| ❻48   | 795446   | 1    | Short Block                                                |
| ❼227  | 691374   | 1    | Lever-Control, Governor                                    |
| ❽306  | 794953   | 1    | Shield-Cylinder                                            |
| ❾307  | 691003   | 1    | Screw (Cylinder Shield)                                    |
| ❿404  | 691691   | 1    | Washer (Governor Crank)                                    |
| ⓫505  | 691251   | 1    | Nut (Governor Control Lever)                               |
| ⓬552  | 697144   | 1    | Bushing-Crank, Governor                                    |
| ⓭562  | 691119   | 1    | Bolt (Governor Control Lever)                              |
| ⓮584  | 794682   | 1    | Cover-Passage, Breather (Use With Liquid Sealant, Ref 850) |
| ⓯614  | 691620   | 1    | Pin-Cotter                                                 |
| ⓰616  | 692012   | 1    | Crank-Governor                                             |
| ⓱684  | 697157   | 1    | Screw (Breather Passage Cover)                             |
| ⓲691  | 692407   | 1    | Seal-Shaft, Governor                                       |
| ⓳718  | 690959   | 1    | Pin-Locating                                               |
| ⓴850  | 100106   | 1    | Sealant-Liquid                                             |
| ⓵1058 | 276352   | 1    | Operator Manual                                            |
| ⓶1263 | 697124   | 1    | Reed-Breather                                              |

| Ref   | Part No. | Qty. | Description           |
|-------|----------|------|-----------------------|
| ❶1264 | 697104   | 1    | Screw (Breather Reed) |
| ❷1330 | 273521   | 1    | Repair Manual         |

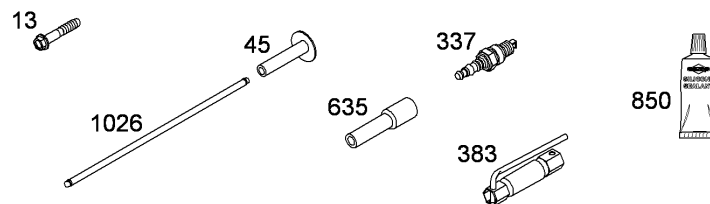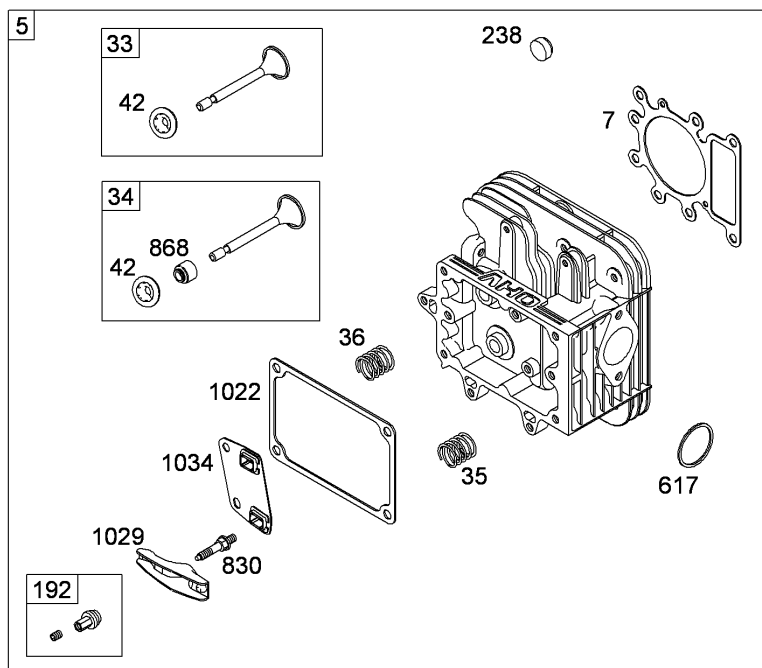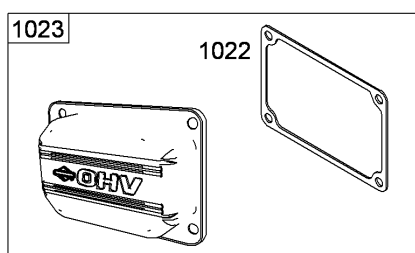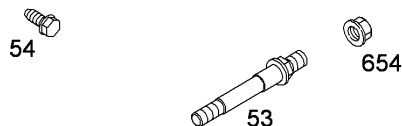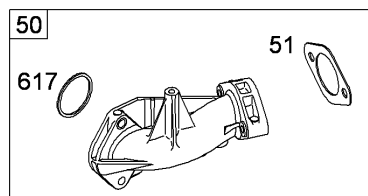


Assemblies include all parts shown in frames

## Cylinder Head Assembly

### Briggs and Stratton 331777-0946-B2

| Ref     | Part No. | Qty. | Description                   |
|---------|----------|------|-------------------------------|
| 1 5     | 796005   | 1    | Head-Cylinder                 |
| 1 3 7   | 794114   | 1    | Gasket-Head, Cylinder         |
| 1 4     |          |      |                               |
| 1 13    | 793988   | 1    | Screw (Cylinder Head)         |
| 1 33    | 792688   | 1    | Valve-Exhaust                 |
| 1 34    | 791935   | 1    | Valve-Intake                  |
| 1 35    | 691279   | 1    | Spring-Valve (Intake)         |
| 1 36    | 691279   | 1    | Spring-Valve (Exhaust)        |
| 1 42    | 499586   | 1    | Keeper-Valve                  |
| 1 45    | 690564   | 1    | Tappet-Valve                  |
| 1 50    | 690193   | 1    | Manifold-Intake               |
| 1 2 51  | 692137   | 1    | Gasket-Intake                 |
| 1 3 4   |          |      |                               |
| 1 53    | 690227   | 1    | Stud (Carburetor)             |
| 1 54    | 691148   | 1    | Screw (Intake Manifold)       |
| 1 192   | 691986   | 1    | Adjustor-Arm, Rocker          |
| 1 238   | 691843   | 1    | Cap-Valve                     |
| 1 337   | 491055s  | 1    | Plug-Spark                    |
| 1 383   | 89838s   | 1    | Wrench-Spark Plug             |
| 1 2 617 | 692138   | 1    | Seal-O Ring (Intake Manifold) |
| 1 3     |          |      | (Red)                         |
| 1 635   | 691909   | 1    | Boot-Spark Plug               |
| 1 654   | 690958   | 1    | Nut (Carburetor)              |
| 1 830   | 691095   | 1    | Stud-Arm, Rocker              |


| Ref      | Part No. | Qty. | Description                                     |
|----------|----------|------|-------------------------------------------------|
| 1 850    | 100106   | 1    | Sealant-Liquid (Use To Install Rocker Cover)    |
| 1 3 868  | 690968   | 1    | Seal-Valve                                      |
| 1 4      |          |      |                                                 |
| 1 914    | 697551   | 1    | Screw (Rocker Cover)                            |
| 1 3 1022 | 272475s  | 1    | Gasket-Cover, Rocker                            |
| 1 4      |          |      |                                                 |
| 1 1023   | 791079   | 1    | Cover-Rocker (Use With Liquid Sealant, Ref 850) |
| 1 1026   | 692003   | 1    | Rod-Push (Intake)                               |
| 1 1026   | 692011   | 1    | Rod-Push (Exhaust)                              |
| 1 1029   | 691751   | 1    | Arm-Rocker                                      |
| 1 1034   | 690822   | 1    | Guide-Rod, Push                                 |

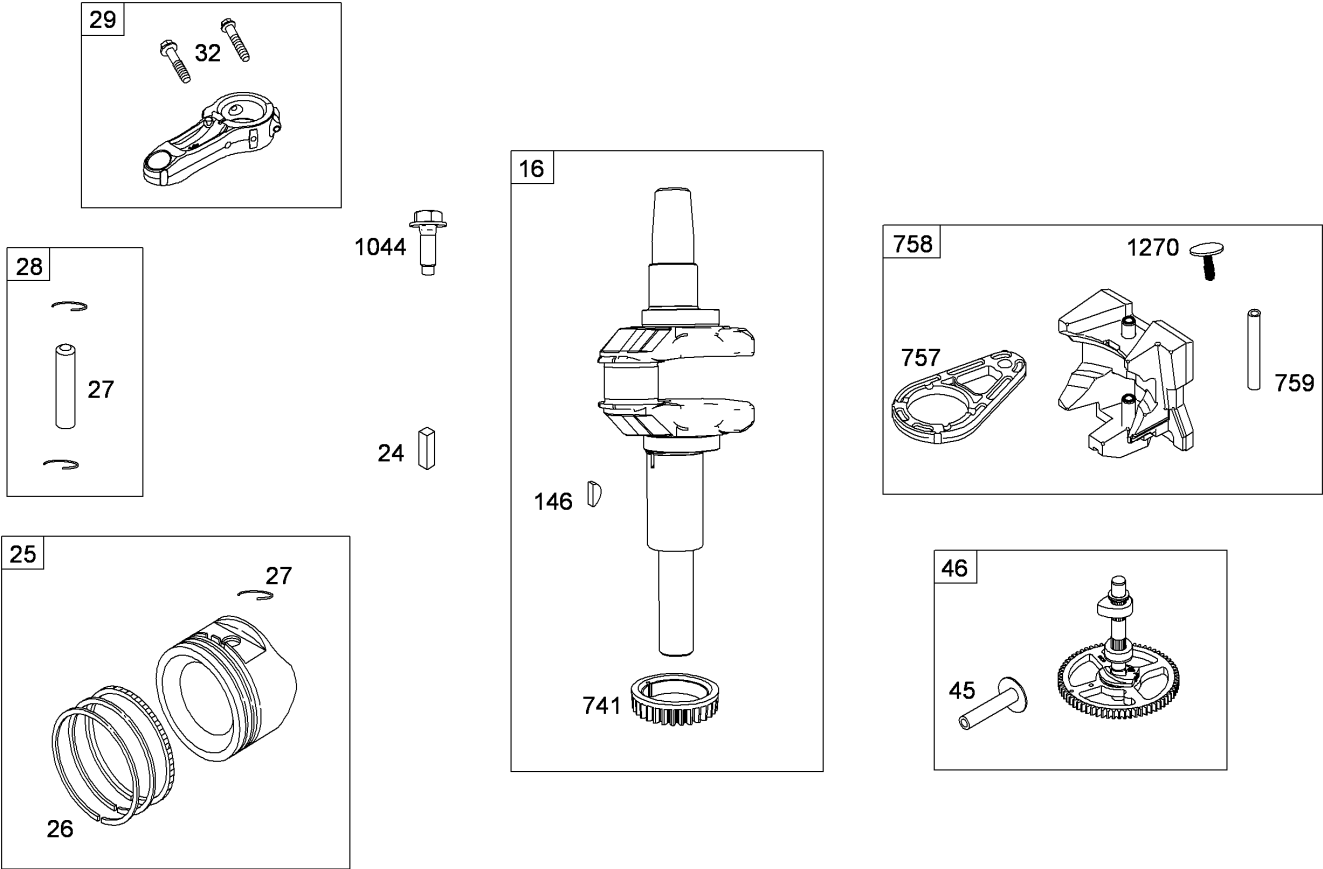

Assemblies include all parts shown in frames

**Crankshaft and Piston/Ring Assembly**  
**Briggs and Stratton 331777-0946-B2**


| Ref   | Part No. | Qty. | Description                |  |  |  |  |
|-------|----------|------|----------------------------|--|--|--|--|
| ❶16   | 697127   | 1    | Crankshaft                 |  |  |  |  |
| ❶24   | 222698s  | 1    | Key-Flywheel               |  |  |  |  |
| ❶25   | 794124   | 1    | Piston ASM (Standard)      |  |  |  |  |
| ❶25   | 794125   | 1    | Piston ASM (.020 Oversize) |  |  |  |  |
| ❶26   | 794126   | 1    | Ring Set (Standard)        |  |  |  |  |
| ❶26   | 794127   | 1    | Ring Set (.020 Oversize)   |  |  |  |  |
| ❶27   | 698469   | 1    | Lock-Pin, Piston           |  |  |  |  |
| ❶28   | 794143   | 1    | Pin-Piston                 |  |  |  |  |
| ❶29   | 794122   | 1    | Rod-Connecting             |  |  |  |  |
| ❶32   | 791118   | 1    | Screw (Connecting Rod)     |  |  |  |  |
| ❶45   | 690564   | 1    | Tappet-Valve               |  |  |  |  |
| ❶46   | 793880   | 1    | Camshaft                   |  |  |  |  |
| ❶146  | 691639   | 1    | Key-Timing                 |  |  |  |  |
| ❶741  | 697128   | 1    | Gear-Timing                |  |  |  |  |
| ❶757  | 793242   | 1    | Link-Counterweight         |  |  |  |  |
| ❶758  | 793763   | 1    | Counterweight              |  |  |  |  |
| ❶759  | 697392   | 1    | Pin-Counterweight          |  |  |  |  |
| ❶1044 | 698139   | 1    | Screw (Flywheel)           |  |  |  |  |
| ❶1270 | 793243   | 1    | Plug-Counterweight, A V S  |  |  |  |  |

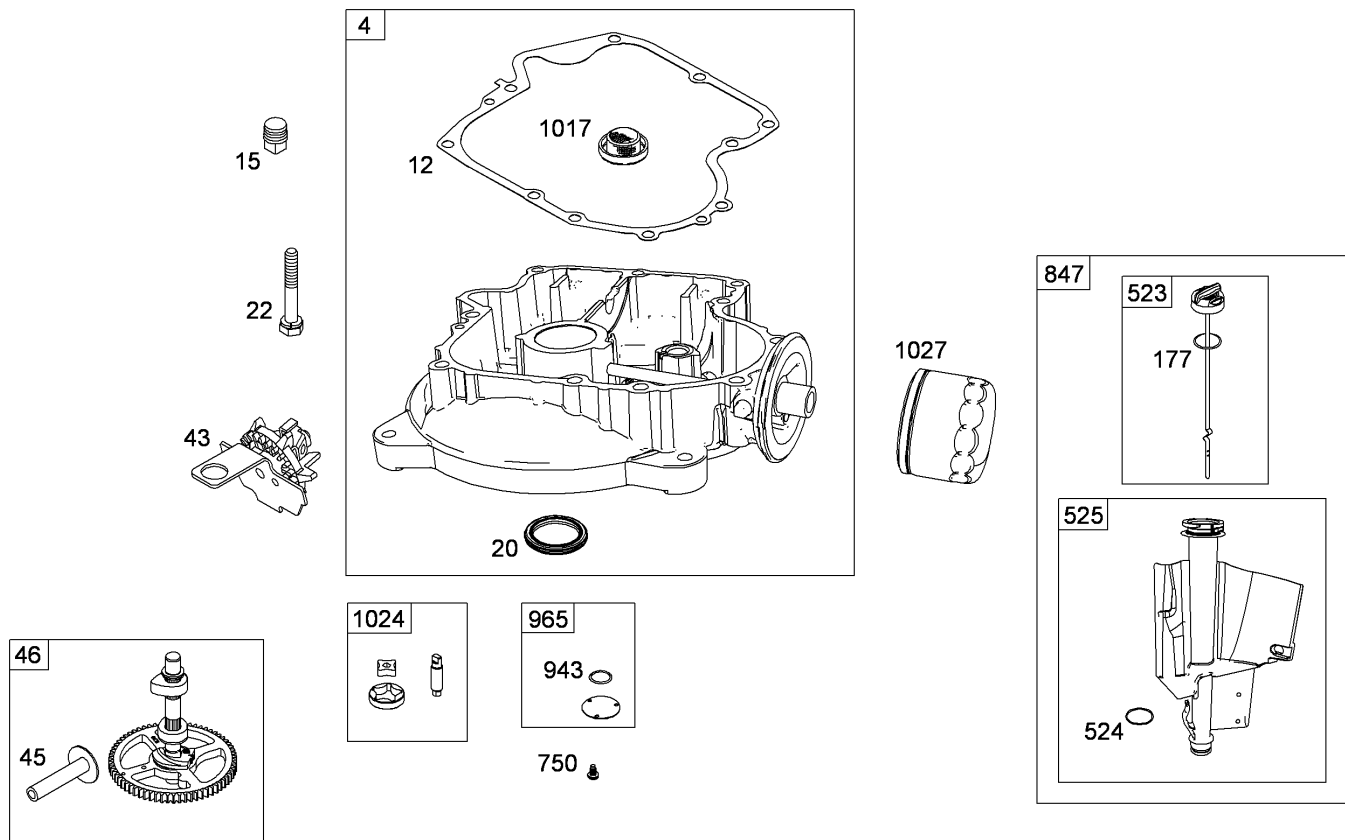

Assemblies include all parts shown in frames

# Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2

| Ref   | Part No. | Qty. | Description                  |  |  |  |  |
|-------|----------|------|------------------------------|--|--|--|--|
| 14    | 795993   | 1    | Sump-Engine                  |  |  |  |  |
| 1312  | 697110   | 1    | Gasket-Crankcase             |  |  |  |  |
| 115   | 690946   | 1    | Plug-Drain, Oil              |  |  |  |  |
| 1320  | 795387   | 1    | Seal-Oil (PTO Side)          |  |  |  |  |
| 122   | 692125   | 1    | Screw (Crankcase/Cover/Sump) |  |  |  |  |
| 143   | 691968   | 1    | Slinger-Governor, Oil        |  |  |  |  |
| 145   | 690564   | 1    | Tappet-Valve                 |  |  |  |  |
| 146   | 793880   | 1    | Camshaft                     |  |  |  |  |
| 13177 | 691031   | 1    | Seal-O Ring (Dipstick Tube)  |  |  |  |  |
| 1523  | 699908   | 1    | Dipstick                     |  |  |  |  |
| 13524 | 691032   | 1    | Seal-O Ring (Dipstick Tube)  |  |  |  |  |
| 1525  | 697184   | 1    | Tube-Dipstick                |  |  |  |  |
| 1750  | 790832   | 1    | Screw (Oil Pump Cover)       |  |  |  |  |
| 1847  | 790442   | 1    | Dipstick And Tube ASM        |  |  |  |  |
| 13943 | 690589   | 1    | Seal-O Ring (Oil Pump Cover) |  |  |  |  |
| 1965  | 499613   | 1    | Cover-Pump, Oil              |  |  |  |  |
| 11017 | 690770   | 1    | Screen-Pump, Oil             |  |  |  |  |
| 11024 | 794644   | 1    | Pump-Oil                     |  |  |  |  |
| 11027 | 492932s  | 1    | Filter-Oil                   |  |  |  |  |

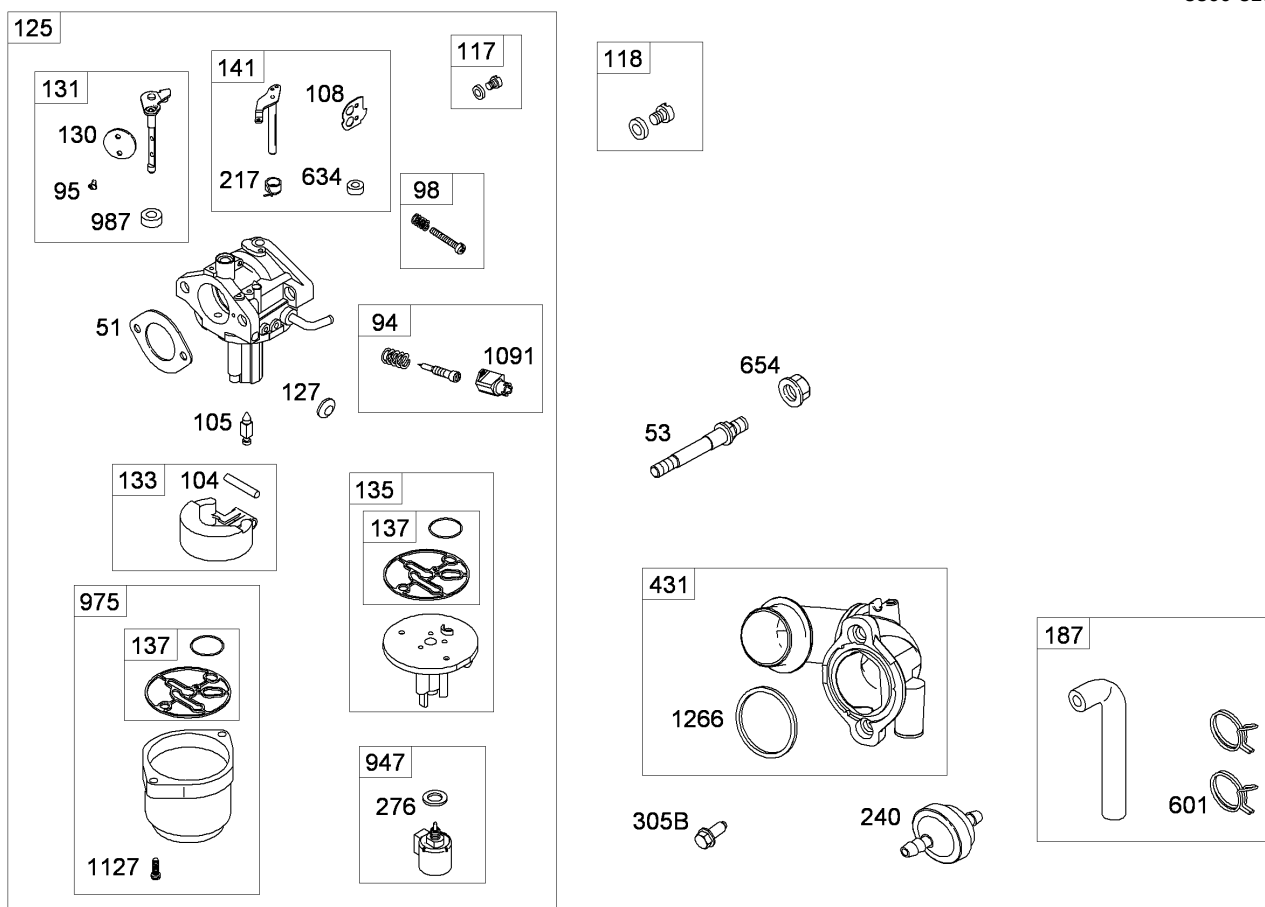


Assemblies include all parts shown in frames

## Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2

| Ref                                               | Part No. | Qty. | Description                                    |
|---------------------------------------------------|----------|------|------------------------------------------------|
| <b>1</b> <del>2</del> 51<br><b>3</b> <del>4</del> | 692137   | 1    | Gasket-Intake                                  |
| <b>1</b> 53                                       | 690227   | 1    | Stud (Carburetor)                              |
| <b>1</b> 94                                       | 793610   | 1    | Idle Mixture Kit                               |
| <b>1</b> <del>2</del> 95                          | 690718   | 1    | Screw (Throttle Valve)                         |
| <b>1</b> 98                                       | 695408   | 1    | Idle Speed Kit                                 |
| <b>1</b> <del>2</del> 104                         | 694918   | 1    | Pin-Hinge, Float                               |
| <b>1</b> <del>2</del> 105                         | 696136   | 1    | Valve-Float, Needle                            |
| <b>1</b> 108                                      | 695419   | 1    | Valve-Choke                                    |
| <b>1</b> 117                                      | 791501   | 1    | Jet-Main (Standard)                            |
| <b>1</b> 118                                      | 843099   | 1    | Jet-Main (High Altitude)                       |
| <b>1</b> 125                                      | 794136   | 1    | Carburetor                                     |
| <b>1</b> <del>2</del> 127                         | 690727   | 1    | Plug-Welch                                     |
| <b>1</b> 130                                      | 792747   | 1    | Valve-Throttle                                 |
| <b>1</b> 131                                      | 792765   | 1    | Throttle Shaft Kit                             |
| <b>1</b> 133                                      | 694914   | 1    | Carburetor Float ASM                           |
| <b>1</b> 135                                      | 698780   | 1    | Fuel Transfer Tube ASM                         |
| <b>1</b> <del>2</del> 137                         | 698781   | 1    | Gasket-Bowl, Float                             |
| <b>1</b> 141                                      | 792777   | 1    | Choke Shaft Kit                                |
| <b>1</b> 187                                      | 791805   | 1    | Line-Fuel (Formed) (Cut To<br>Required Length) |
| <b>1</b> <del>2</del> 217                         | 695409   | 1    | Spring-Return, Choke                           |
| <b>1</b> 240                                      | 394358s  | 1    | Filter-Fuel                                    |
| <b>1</b> 276                                      | 695410   | 1    | Washer-Sealing                                 |

| Ref           | Part No. | Qty. | Description                                             |
|---------------|----------|------|---------------------------------------------------------|
| ① 305B        | 795891   | 1    | Screw (Blower Housing) (Blower Housing To Intake Elbow) |
| ① 431         | 794145   | 1    | Elbow-Intake                                            |
| ① 601         | 791850   | 1    | Clamp-Hose                                              |
| ① 634         | 698779   | 1    | Spring And Seal ASM (Choke Shaft)                       |
| ① 654         | 690958   | 1    | Nut (Carburetor)                                        |
| ① 947         | 699915   | 1    | Solenoid, Fuel                                          |
| ① 975         | 699502   | 1    | Bowl-Float                                              |
| ① ② 987       | 698777   | 1    | Seal-Shaft, Throttle                                    |
| ① 1091        | 691333   | 1    | Cap-Limiter                                             |
| ① 1127        | 695407   | 1    | Screw (Float Bowl)                                      |
| ① ② 1266<br>⑤ | 691917   | 1    | Seal-O Ring (Intake Elbow) (Red)                        |

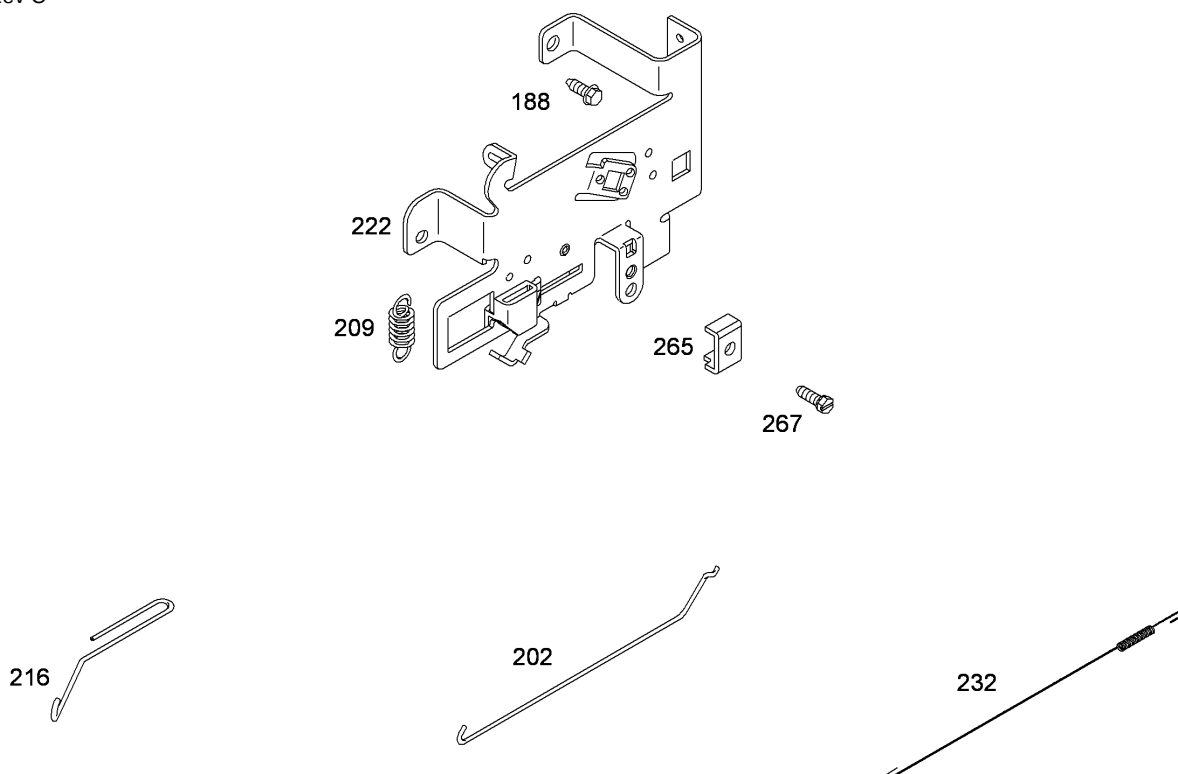


Assemblies include all parts shown in frames

**Governor Control Assembly  
Briggs and Stratton 331777-0946-B2**

| Ref  | Part No. | Qty. | Description               |  |  |  |  |
|------|----------|------|---------------------------|--|--|--|--|
| ①188 | 691693   | 1    | Screw (Control Bracket)   |  |  |  |  |
| ①202 | 691841   | 1    | Link-Governor, Mechanical |  |  |  |  |
| ①209 | 692208   | 1    | Spring-Governor (Green)   |  |  |  |  |
| ①216 | 691840   | 1    | Link-Choke                |  |  |  |  |
| ①222 | 694042   | 1    | Bracket-Control           |  |  |  |  |
| ①232 | 691842   | 1    | Spring-Link, Governor     |  |  |  |  |
| ①265 | 691024   | 1    | Clamp-Casing              |  |  |  |  |
| ①267 | 794904   | 1    | Screw (Casing Clamp)      |  |  |  |  |


## 1036 Emissions Label

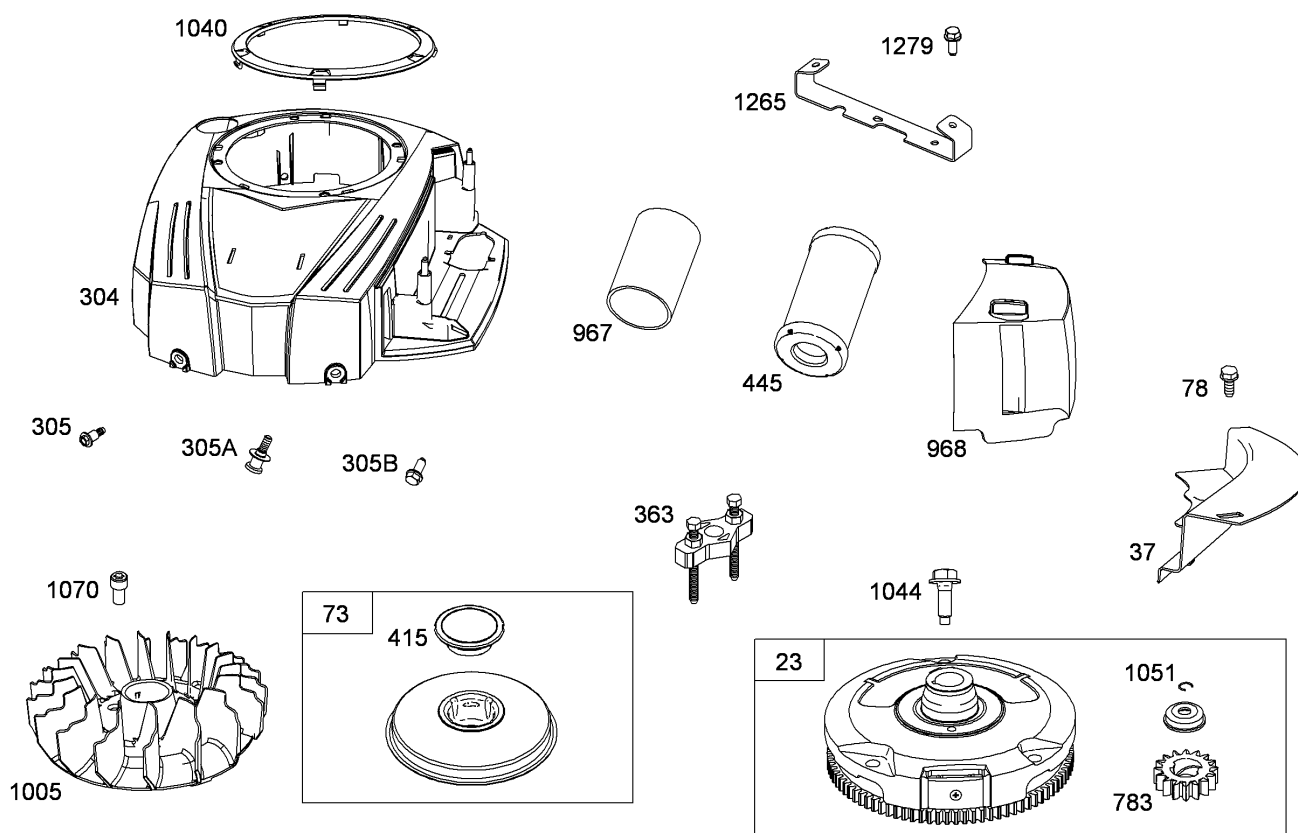

Assemblies include all parts shown in frames

# Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 331777-0946-B2

| Ref   | Part No. | Qty. | Description                                             |  |  |  |  |
|-------|----------|------|---------------------------------------------------------|--|--|--|--|
| ①23   | 693557   | 1    | Flywheel                                                |  |  |  |  |
| ①37   | 699882   | 1    | Guard-Flywheel                                          |  |  |  |  |
| ①73   | 794357   | 1    | Screen-Rotating                                         |  |  |  |  |
| ①78   | 691003   | 1    | Screw (Flywheel Guard)                                  |  |  |  |  |
| ①304  | 794918   | 1    | Housing-Blower                                          |  |  |  |  |
| ①305  | 697102   | 1    | Screw (Blower Housing)                                  |  |  |  |  |
| ①305A | 793376   | 1    | Screw (Blower Housing)                                  |  |  |  |  |
| ①305B | 795891   | 1    | Screw (Blower Housing) (Blower Housing To Intake Elbow) |  |  |  |  |
| ①363  | 19203    | 1    | Puller-Flywheel                                         |  |  |  |  |
| ①415  | 794129   | 1    | Plug (Rotating Screen)                                  |  |  |  |  |
| ①445  | 793569   | 1    | Filter-Cartridge, Air Cleaner                           |  |  |  |  |
| ①783  | 693713   | 1    | Gear-Pinion                                             |  |  |  |  |
| ①967  | 693958   | 1    | Filter-Cleaner, Pre                                     |  |  |  |  |
| ①968  | 794140   | 1    | Cover-Cleaner, Air                                      |  |  |  |  |
| ①1005 | 794121   | 1    | Fan-Flywheel                                            |  |  |  |  |
| ①1036 |          | 1    | Label-Emissions                                         |  |  |  |  |
| ①1040 | 698368   | 1    | Plate-Trim                                              |  |  |  |  |
| ①1044 | 698139   | 1    | Screw (Flywheel)                                        |  |  |  |  |
| ①1051 | 691265   | 1    | Ring-Retaining                                          |  |  |  |  |
| ①1070 | 690363   | 1    | Screw (Flywheel Fan)                                    |  |  |  |  |
| ①1265 | 794151   | 1    | Support-Housing, Blower                                 |  |  |  |  |
| ①1279 | 697551   | 1    | Screw (Blower Housing Support)                          |  |  |  |  |



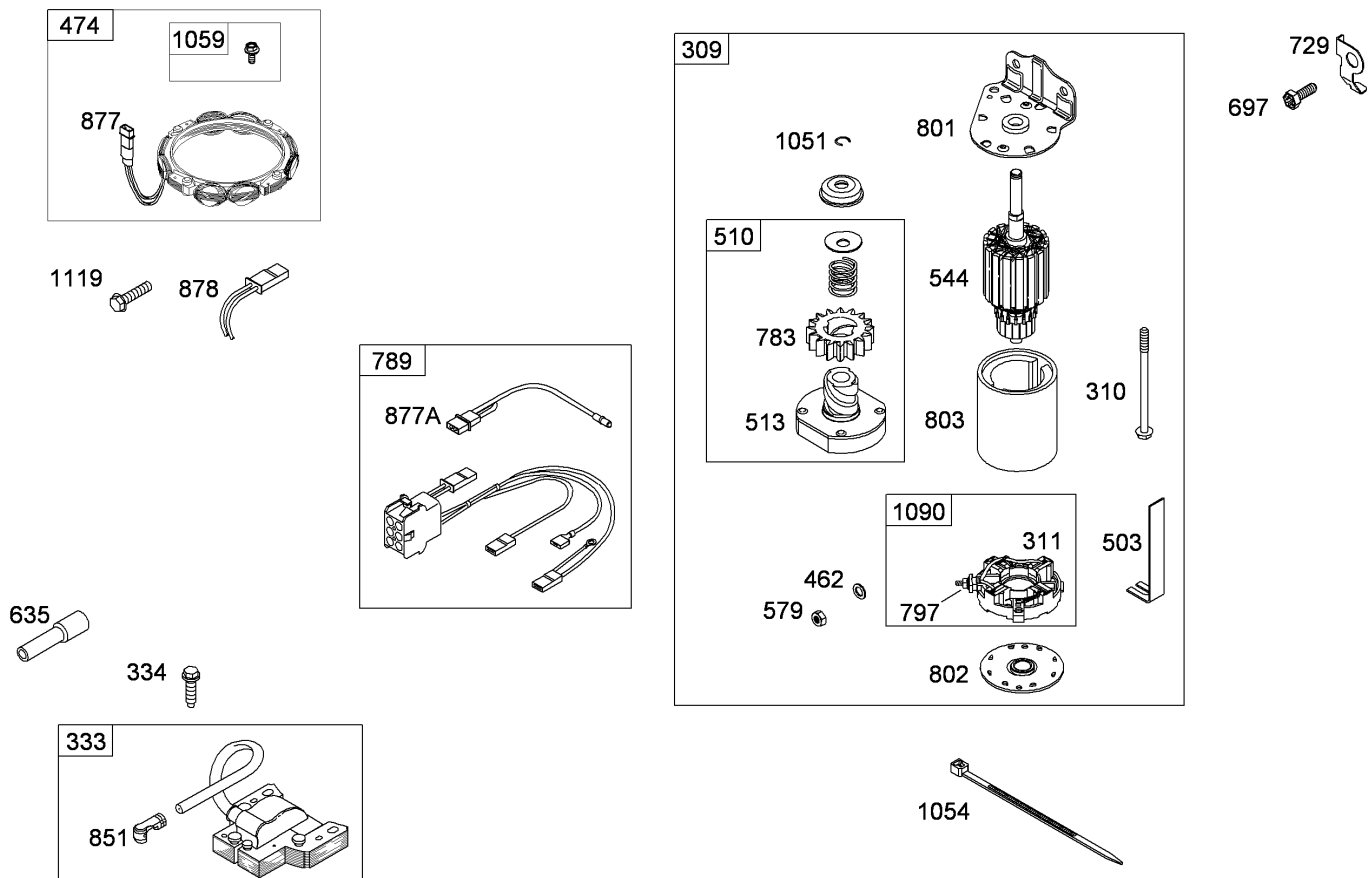


Assemblies include all parts shown in frames

## Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2

| Ref  | Part No. | Qty. | Description                                                 |
|------|----------|------|-------------------------------------------------------------|
| ●309 | 693551   | 1    | Motor-Starter                                               |
| ●310 | 690323   | 1    | Screw (Starter Motor)                                       |
| ●311 | 497608   | 1    | Brush Set                                                   |
| ●333 | 795315   | 1    | Armature-Magneto                                            |
| ●334 | 691061   | 1    | Screw (Magneto Armature)                                    |
| ●462 | 691261   | 1    | Washer (Starter Cable)                                      |
| ●474 | 696459   | 1    | Alternator                                                  |
| ●503 | 691532   | 1    | Strap-Starter                                               |
| ●510 | 693699   | 1    | Drive-Starter                                               |
| ●513 | 692024   | 1    | Clutch-Drive                                                |
| ●544 | 692034   | 1    | Armature-Starter                                            |
| ●579 | 691029   | 1    | Nut (Starter Cable)                                         |
| ●635 | 691909   | 1    | Boot-Spark Plug                                             |
| ●697 | 690372   | 1    | Screw (Drive Cap)                                           |
| ●729 | 691224   | 1    | Clip-Wire                                                   |
| ●783 | 693713   | 1    | Gear-Pinion                                                 |
| ●789 | 698330   | 1    | Harness-Wiring                                              |
| ●797 | 693167   | 1    | Nut (Brush Retainer)                                        |
| ●801 | 691283   | 1    | Cap-Drive                                                   |
| ●802 | 691286   | 1    | Cap-End                                                     |
| ●803 |          | 1    | Housing-Starter (Serviced By Ref 309, 693551-Starter Motor) |
| ●851 | 692424   | 1    | Terminal-Spark Plug                                         |
| ●877 | 393456   | 1    | Wire-Connector / Alternator                                 |

| Ref   | Part No. | Qty. | Description                   |
|-------|----------|------|-------------------------------|
| ●877A | 790544   | 1    | Harness-Wiring                |
| ●878  | 398661   | 1    | Harness-Alternator            |
| ●1051 | 691265   | 1    | Ring-Retainer (Starter Motor) |
| ●1054 | 280275   | 1    | Tie-Cable                     |
| ●1059 | 698516   | 1    | Screw And Washer Kit          |
| ●1090 | 691293   | 1    | Retainer-Brush                |
| ●1119 | 691183   | 1    | Screw (Alternator)            |

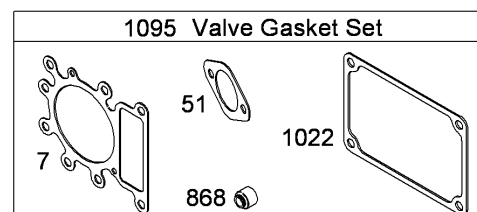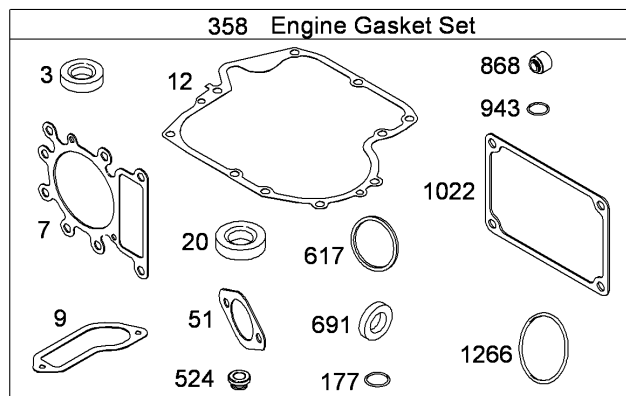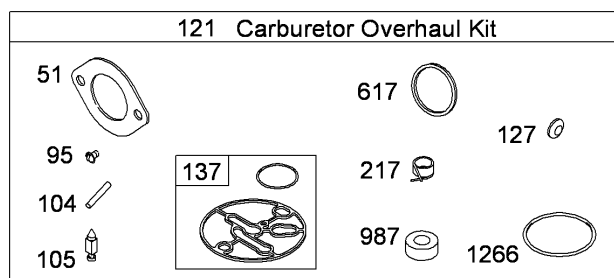

Assemblies include all parts shown in frames

## Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2

| Ref    | Part No. | Qty. | Description                         | Ref     | Part No. | Qty. | Description                      |
|--------|----------|------|-------------------------------------|---------|----------|------|----------------------------------|
| 1 33   | 391086s  | 1    | Seal-Oil (Magneto Side)             | 1 31022 | 272475s  | 1    | Gasket-Cover, Rocker             |
| 1 37   | 794114   | 1    | Gasket-Head, Cylinder               | 4       |          |      |                                  |
| 4      |          |      |                                     | 1 1095  | 794158   | 1    | Valve Gasket Set                 |
| 1 39   | 697109   | 1    | Gasket-Breather                     | 1 21266 | 691917   | 1    | Seal-O Ring (Intake Elbow) (Red) |
| 1 312  | 697110   | 1    | Gasket-Crankcase                    | 3       |          |      |                                  |
| 1 320  | 795387   | 1    | Seal-Oil (PTO Side)                 |         |          |      |                                  |
| 1 251  | 692137   | 1    | Gasket-Intake                       |         |          |      |                                  |
| 3 4    |          |      |                                     |         |          |      |                                  |
| 1 295  | 690718   | 1    | Screw (Throttle Valve)              |         |          |      |                                  |
| 1 2104 | 694918   | 1    | Pin-Hinge, Float                    |         |          |      |                                  |
| 1 2105 | 696136   | 1    | Valve-Float, Needle                 |         |          |      |                                  |
| 1 121  | 792369   | 1    | Carburetor Overhaul Kit             |         |          |      |                                  |
| 1 2127 | 690727   | 1    | Plug-Welch                          |         |          |      |                                  |
| 1 2137 | 698781   | 1    | Gasket-Bowl, Float                  |         |          |      |                                  |
| 1 3177 | 691031   | 1    | Seal-O Ring (Dipstick Tube)         |         |          |      |                                  |
| 1 2217 | 695409   | 1    | Spring-Return, Choke                |         |          |      |                                  |
| 1 358  | 794150   | 1    | Engine Gasket Set                   |         |          |      |                                  |
| 1 3524 | 691032   | 1    | Seal-O Ring (Dipstick Tube)         |         |          |      |                                  |
| 1 2617 | 692138   | 1    | Seal-O Ring (Intake Manifold) (Red) |         |          |      |                                  |
| 3      |          |      |                                     |         |          |      |                                  |
| 1 3691 | 692407   | 1    | Seal-Shaft, Governor                |         |          |      |                                  |
| 1 3868 | 690968   | 1    | Seal-Valve                          |         |          |      |                                  |
| 4      |          |      |                                     |         |          |      |                                  |
| 1 3943 | 690589   | 1    | Seal-O Ring (Oil Pump Cover)        |         |          |      |                                  |
| 1 2987 | 698777   | 1    | Seal-Shaft, Throttle                |         |          |      |                                  |

## Attachments and Accessories

### For 13AL60RG544 - LX426 Lawn Tractor

| Product Name                                  | Model/Part  |
|-----------------------------------------------|-------------|
| Washout Port Kit . . . . .                    | 112-5803    |
| Blade Kit, Extreme (42 Inch) . . . . .        | 112-6048    |
| 42 Inch Two-Stage Snowthrower . . . . .       | 190-032-101 |
| 42 Inch Twin Bagger . . . . .                 | 190-180-190 |
| 46 Inch Front Blade . . . . .                 | 190-833-000 |
| 8 Inch Rear Wheel Weight Kit . . . . .        | 59159       |
| Mulch Kit (42 Inch Deck) . . . . .            | 77210       |
| 10 cu. ft. Dump Cart . . . . .                | 79901       |
| 10 cu. ft. Poly Dump Cart . . . . .           | 79935       |
| Folding Loading Ramp . . . . .                | 79949       |
| Sweeper . . . . .                             | 79985       |
| Tire Chain Kit . . . . .                      | 82722       |
| Blade Kit (2 Blades, 42 Inch Decks) . . . . . | 98022       |

## Attachments and Accessories

### For 13RL60RG544 - LX426 Lawn Tractor

| Product Name                                  | Model/Part  |
|-----------------------------------------------|-------------|
| Washout Port Kit . . . . .                    | 112-5803    |
| Blade Kit, Extreme (42 Inch) . . . . .        | 112-6048    |
| 42 Inch Two-Stage Snowthrower . . . . .       | 190-032-101 |
| 42 Inch Twin Bagger . . . . .                 | 190-180-190 |
| 46 Inch Front Blade . . . . .                 | 190-833-000 |
| 8 Inch Rear Wheel Weight Kit . . . . .        | 59159       |
| Mulch Kit (42 Inch Deck) . . . . .            | 77210       |
| 10 cu. ft. Dump Cart . . . . .                | 79901       |
| 10 cu. ft. Poly Dump Cart . . . . .           | 79935       |
| Folding Loading Ramp . . . . .                | 79949       |
| Sweeper . . . . .                             | 79985       |
| Tire Chain Kit . . . . .                      | 82722       |
| Blade Kit (2 Blades, 42 Inch Decks) . . . . . | 98022       |

## NOTES

## NOTES

## NOTES

