



48cm Recycler[®]/Rear Bagging Lawn Mower

Model No. 20817 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Carburetor Assembly Briggs and Stratton 126T02-0231-B1	 13
Height-of-Cut and Wheel Assembly	 4	Air Cleaner Assembly Briggs and Stratton 126T02-0231-B1	 14
Drive Assembly	 5	Governor Assembly Briggs and Stratton 126T02-0231-B1	 15
Gear Case Assembly No. 104-7593	 6	Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0231-B1	 16
Engine and Blade Assembly	 7	Blower Housing Assembly Briggs and Stratton 126T02-0231-B1	 17
Handle Assembly	 8	Starter Assembly Briggs and Stratton 126T02- 0231-B1	 18
Rear Bag Assembly	 9	Engine Gasket Set Briggs and Stratton 126T02-0231-B1	 19
Cylinder Assembly Briggs and Stratton 126T02-0231-B1	 10	Carburetor Overhaul Kit Briggs and Stratton 126T02-0231-B1	 20
Crankshaft Assembly Briggs and Stratton 126T02-0231-B1	 11		
Crankcase Assembly Briggs and Stratton 126T02-0231-B1	 12		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |

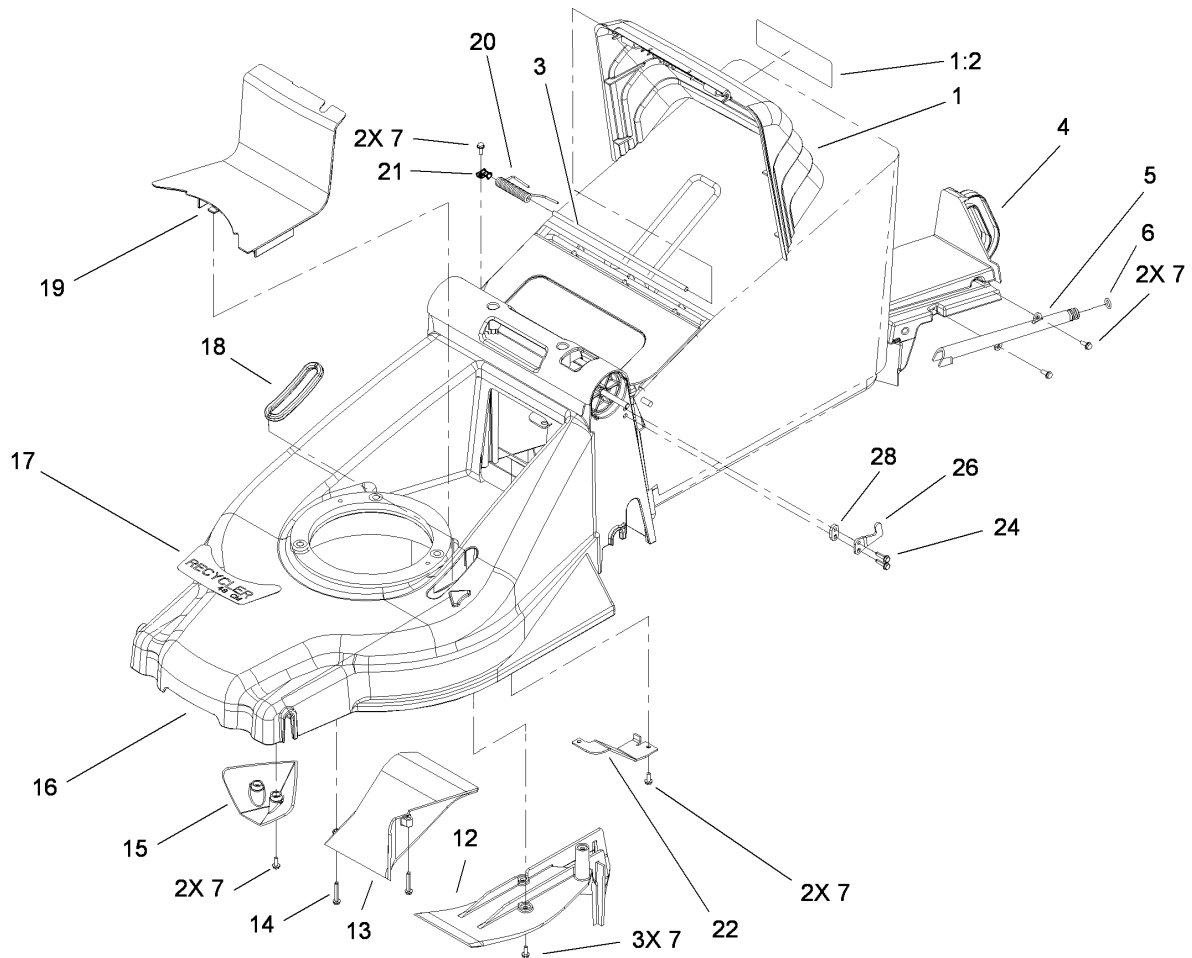

Housing Assembly


Ref	Part No.	Qty.	Description				
1	100-9115	1	Door ASM				
1:2	112-8759	1	Decal-Warning				
3	100-1509	1	Rod-Pivot				
4	100-1505	1	Plug-Kicker, Recycler				
5	100-1522	1	Fitting-Washout				
6	46-6290	1	O-Ring				
7	32144-1	11	Screw-Taptite				
12	99-6486	1	Cover-Kicker, Rear				
13	100-1506	1	Ramp-Discharge				
14	100-4352	2	Screw-HWH				
15	99-6485	1	Kicker-Front				
16	104-7579	1	Deck				
17	110-9169	1	Decal-Recycler, Deck				
18	100-3932	1	Boot-HOC				
19	99-6479	1	Cover-Belt				
20	104-7594	1	Spring-Torsion				
21	98-2256	2	Clamp				
22	100-9123-03	1	Bracket-Deck				
24	100-4351	4	Screw-HWH				
26	104-7557	1	Hook-Left				
27	104-7558	1	Hook-Right				
28	104-7556	2	Spacer				

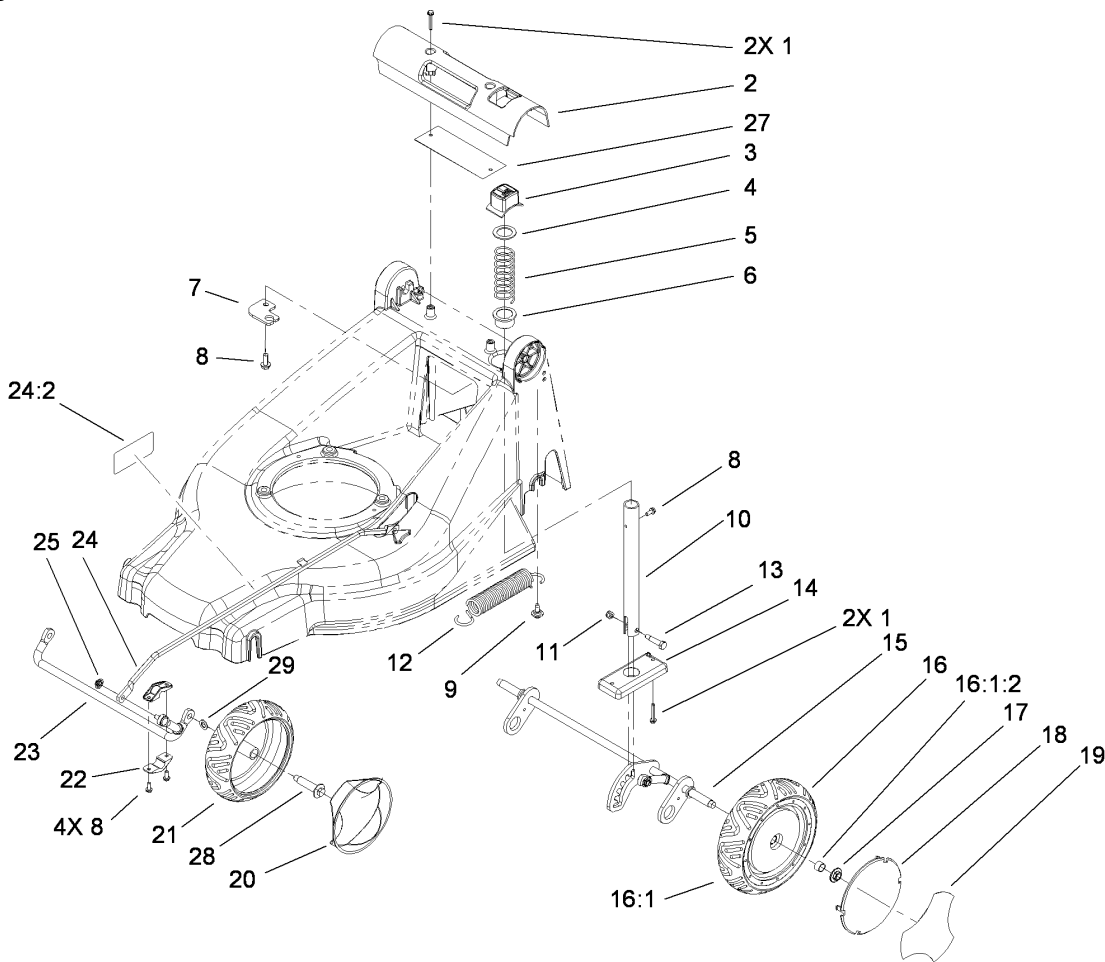 

Height-of-Cut and Wheel Assembly


Ref	Part No.	Qty.	Description
1	100-4352	4	Screw-HWH
2	99-6487	1	Handle-Deck
3	99-6480	1	Button-HOC
4	88-7540	1	Washer-Backup
5	99-6481	1	Spring-Compression, HOC
6	99-6483	1	Bushing-HOC
7	100-1525	1	Bracket-Cable, Traction
8	32144-1	6	Screw-Taptite
9	92-9698	1	Screw-Shoulder
10	99-6458	1	Pipe-HOC
11	3296-73	1	Nut-Lock, NI
12	100-4384	1	Spring-Extension, HOC
13	99-6459	1	Bolt-Shoulder
14	99-6460	1	Plate-Support, HOC
15	99-6478	1	Rear Axle ASM
16	99-6471	2	Wheel And Tire ASM
16:1		1	Wheel ASM
16:1:2	27-6250	2	Bushing
17	108-8890	2	Nut-Jam, Lock
18	100-4366	2	Cover-Wheel, Smart
19	100-9114	2	Decal-Smart Wheel
20	95-6543	2	Cover-Wheel
21	99-6470	2	Wheel ASM
22	100-1500	4	Mount-Axle, Front

Ref	Part No.	Qty.	Description
23	104-7562	1	Front Axle ASM
24	100-9116	1	Rod ASM
24:2	100-4355	1	Decal-HOC
25	100-3939	2	Palnut
27	100-4383-03	1	Cover-Handle
28	614650	2	Bolt-Shoulder
29	40-1940	2	Washer

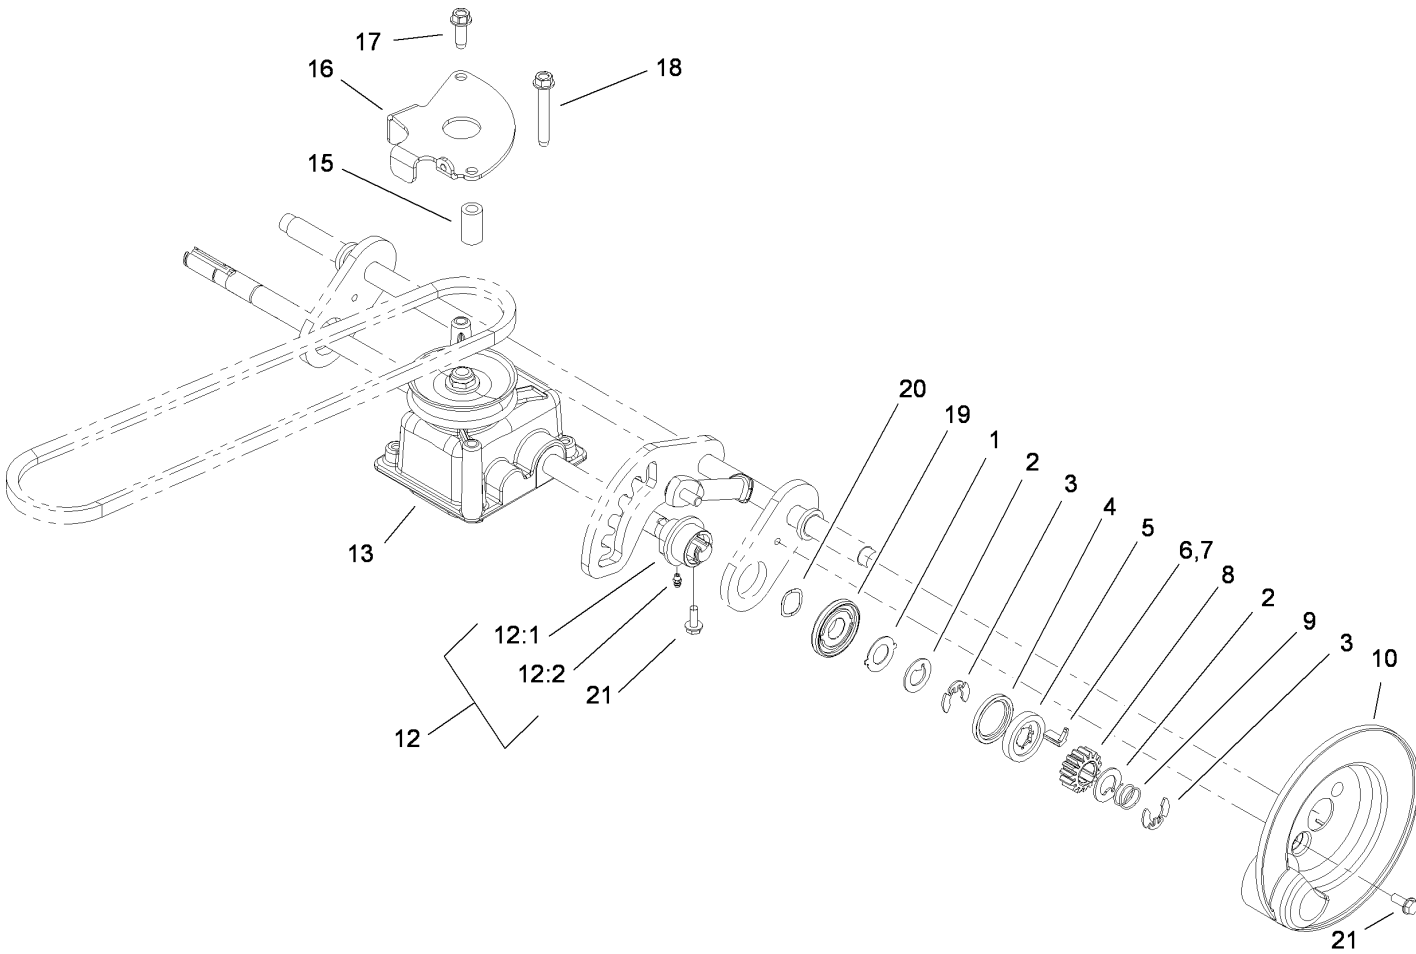 


Drive Assembly

Ref	Part No.	Qty.	Description				
1	65-4730	2	Washer-Arm, Pivot				
2	65-4740	4	Washer-Thrust, Keyed				
3	65-2720	4	Ring-Clip, Locking				
4	65-4710	2	Ring-Friction				
5	65-4760	2	Washer-Clutch				
6	66-6040	1	Key-Rocking, RH				
7	66-6050	1	Key-Rocking, LH				
8	65-4750	2	Gear-Pinion				
9	65-4720	2	Spring-Compression				
10	100-1513	2	Cover-Gear				
12	100-9118	2	Bushing ASM				
12:1	99-6463	1	Bushing				
12:2	302-56	1	Fitting-Grease				
13	104-7593	1	Gear Case ASM				
15	614673	1	Bushing-Plate, Actuator				
16	100-1524-03	1	Guide-Transmission				
17	49-2040	1	Screw-HWTF				
18	92-1616	1	Screw-HWTF				
19	100-1511	2	Retainer-Ring				
20	100-1515	2	Washer-Wave				
21	32144-1	4	Screw-Taptite				

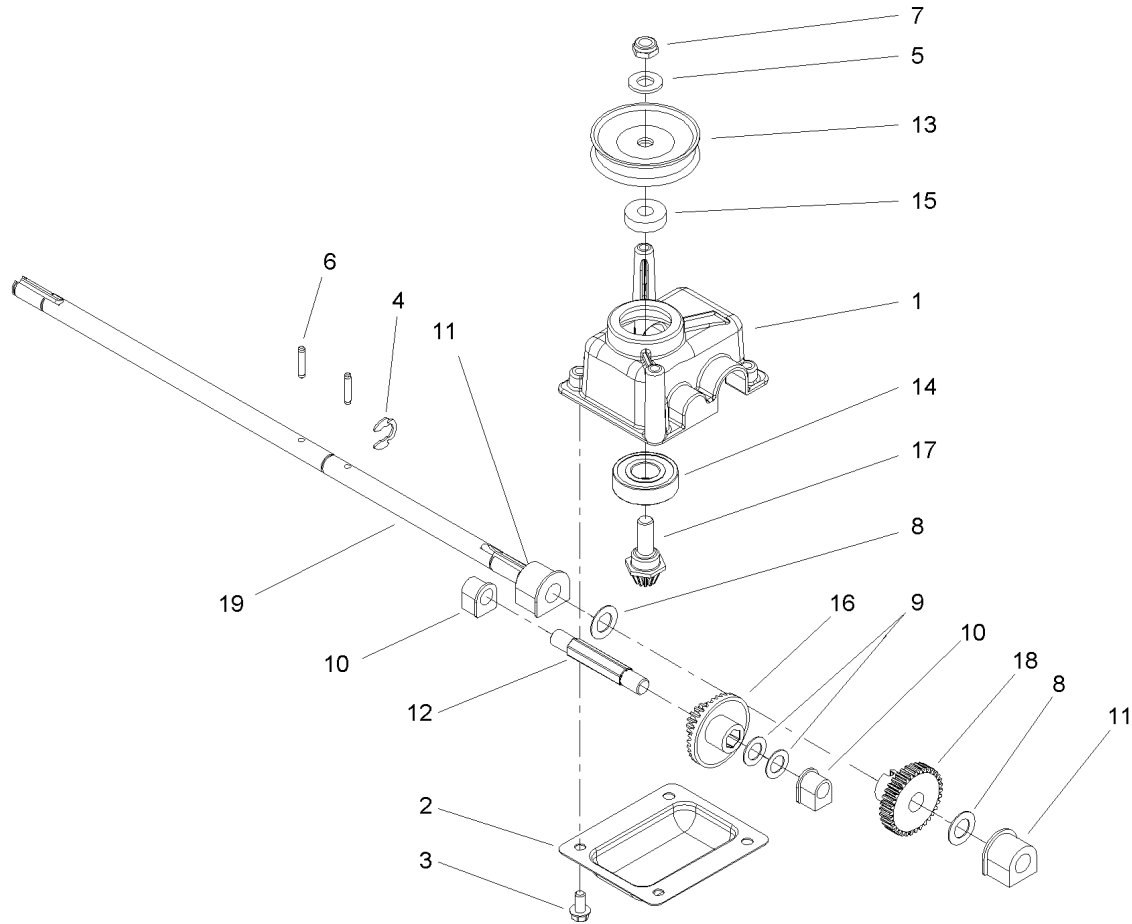 


Gear Case Assembly No. 104-7593

Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer-Plain				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-7668	1	Gear-15T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	614596	1	Gear				
19	100-1514	1	Shaft-Output				

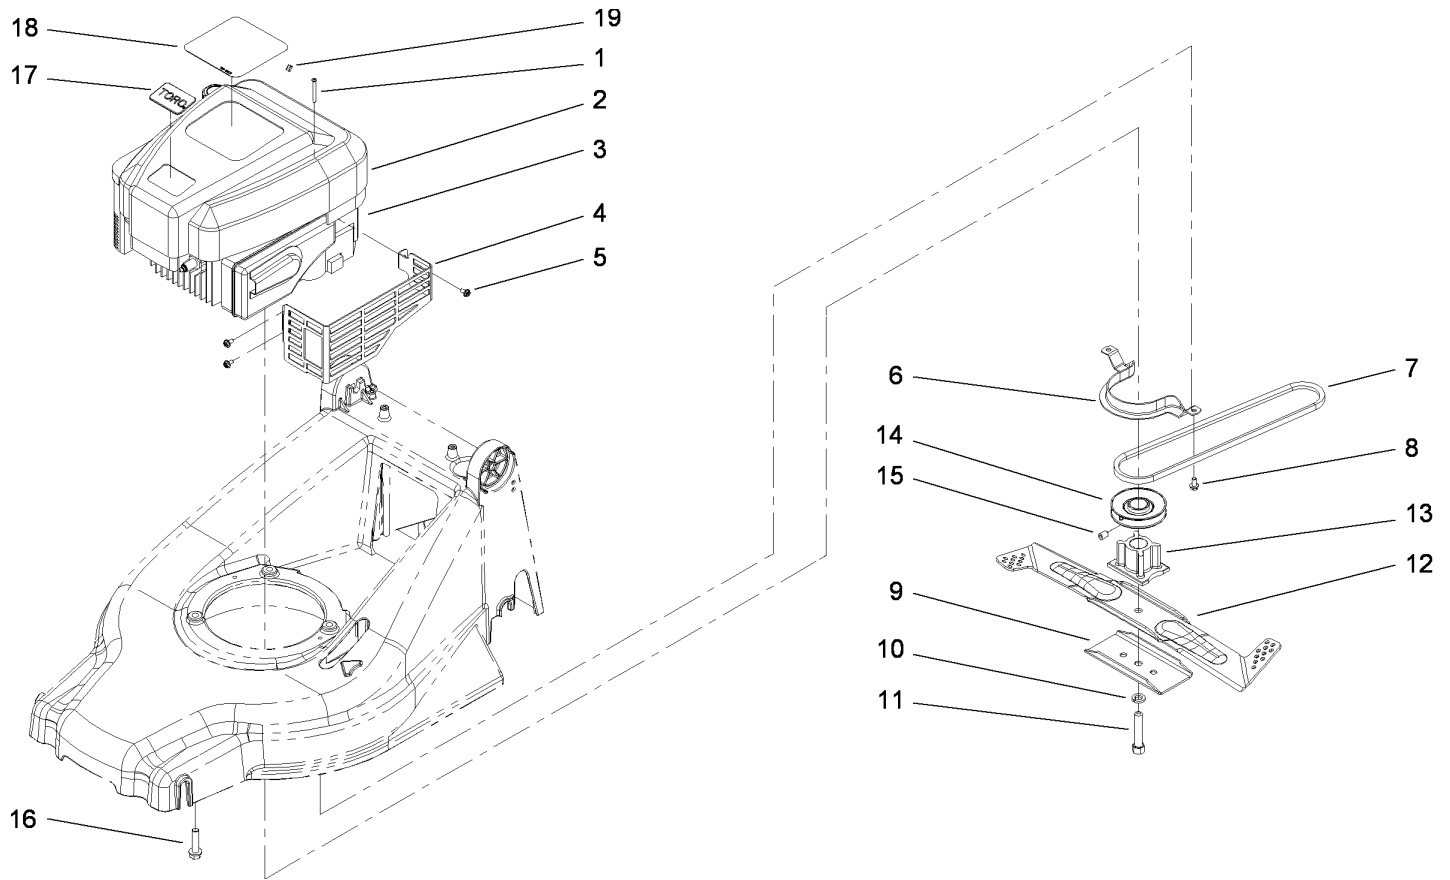 

Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	32144-121	2	Screw-PPH				
2	93-0243	1	Shroud-Engine				
2 3 3		1	Engine-Briggs And Stratton, 126T02-0231-B1				
4	104-7577-03	1	Shield-Muffler				
5	104-2065	3	Screw-HWH				
6	100-1523-03	1	Guide-Belt, Engine				
7	93-0232	1	V-Belt				
8	32144-4	2	Screw-HWH				
9	80-0510-03	1	Stiffener-Blade				
10	3253-22	1	Washer-Lock				
11	100-4368	1	Bolt-Blade				
12	105-0525-03	1	Blade				
13	104-7554	1	Retainer-Blade				
14	100-1102	1	Pulley ASM				
15	104-0214	1	Screw-Set				
16	32144-102	3	Screw-HWH				
17	98-3206	1	Decal				
18	114-5364	1	Decal-Engine				
19	2210-316	1	Stop-Rope				

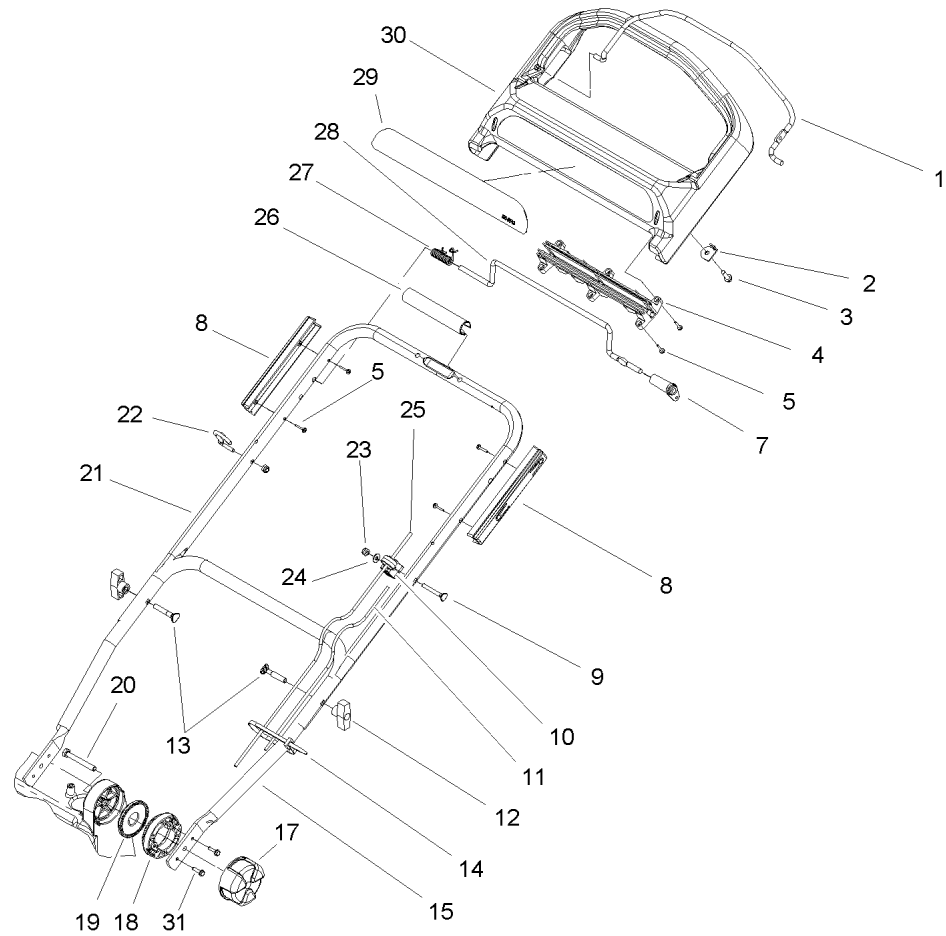 


Handle Assembly

Ref	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake
2	106-2662	1	Retainer-Cable
3	46-8091	1	Screw-HWH
4	99-6008	1	Retainer-Control Rod, Traction
5	94-4496	10	Screw-PPH
7	99-1589	1	Lever-Traction
8	99-1590	2	Guide-Handle, Control
9	95-4453	1	Screw
10	99-5239	1	Anchor-Cable
11	100-3936	1	Cable-Traction
12	98-7134	2	Knob-Handle
13	92-2260	2	Screw-Handle
14	3290-378	2	Tie-Cable
15	100-1502-05	1	Handle-Lower
17	100-4396	2	Knob-Adjusting, Handle
18	104-7553-03	2	Disk-Adjusting, Handle
19	100-1517	2	Disk-Holding, Handle
20	60-6690	2	Capscrew
21	99-1596-05	1	Handle-Upper
22	86-9671	1	Guide-Rope
23	3296-73	2	Nut-Lock, NI
24	3256-1	1	Washer-Flat
25	100-3937	1	Cable-Brake
26	100-5970	1	Cover-Handle

Ref	Part No.	Qty.	Description
27	99-1592	1	Spring-Torsion, RH
28	99-1588	1	Bar-Control, Traction
29	105-8643	1	Decal-Panel
30	99-1582	1	Handle-Control
31	100-4351	4	Screw-HWH



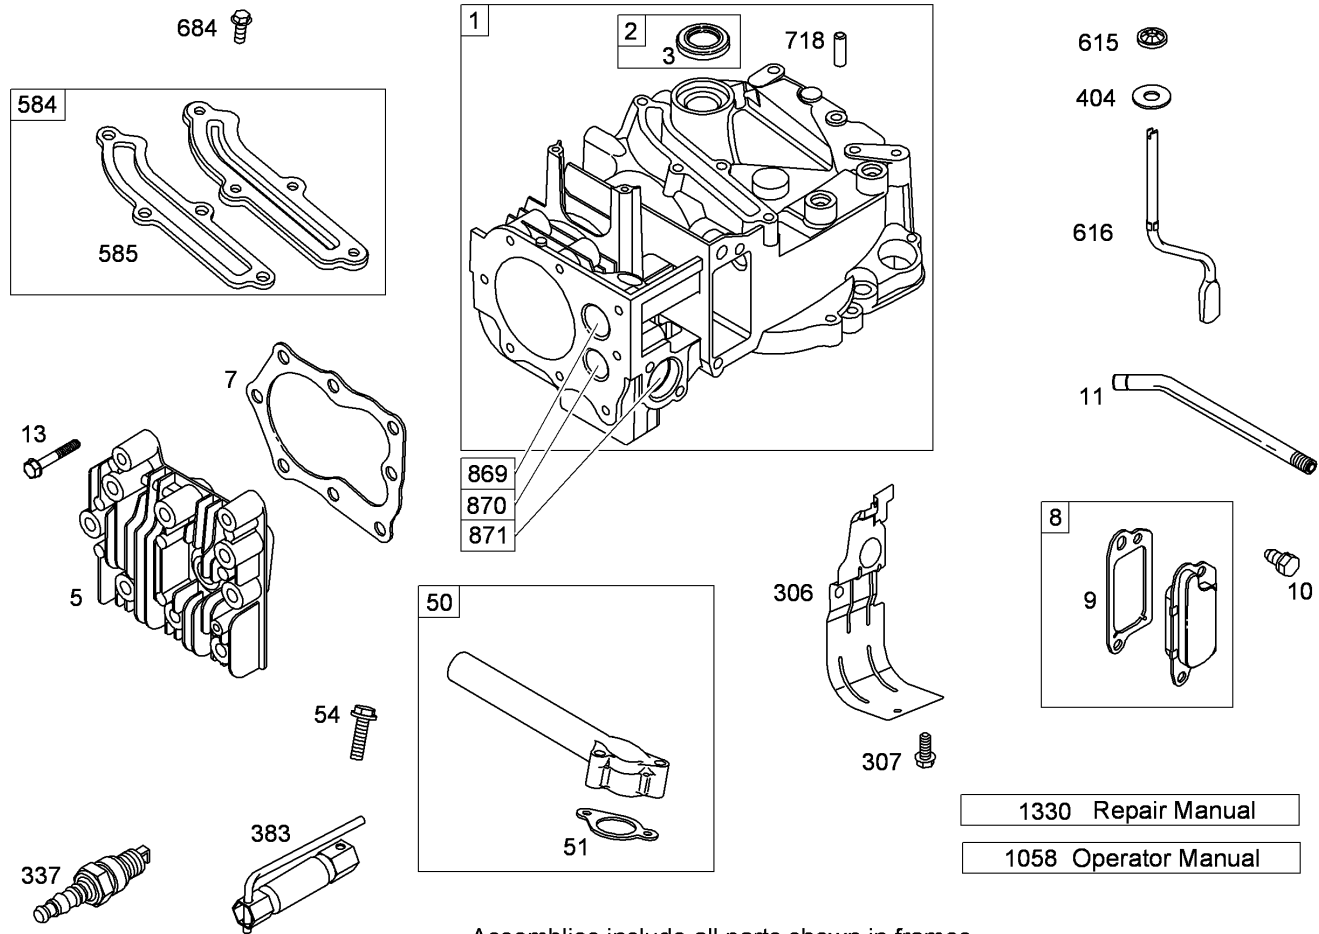 






Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	696125	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	794305	1	Manifold-Intake
51	794306	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	790836	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
337	802592s	1	Plug-Spark
383	89838s	1	Wrench-Spark Plug
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
684	690345	1	Screw (Breather Passage Cover)
718	690959	1	Pin-Locating

Ref	Part No.	Qty.	Description
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	MS3262	1	Operator Manual
1330	270962	1	Repair Manual

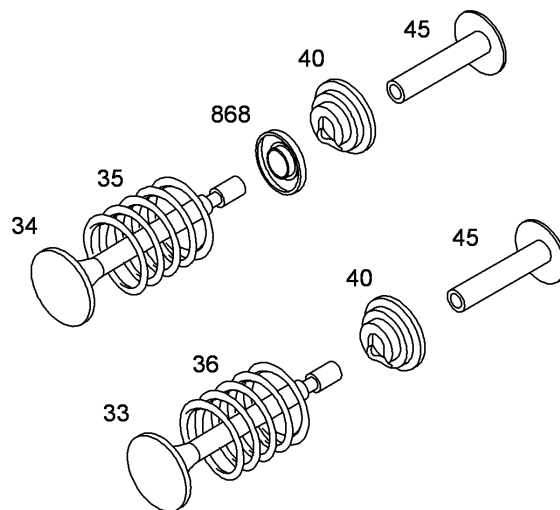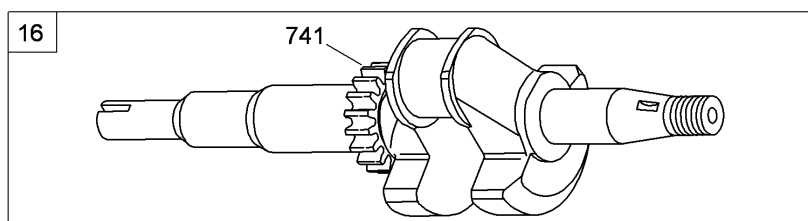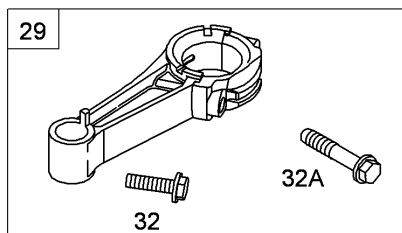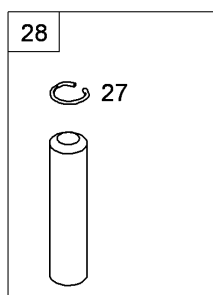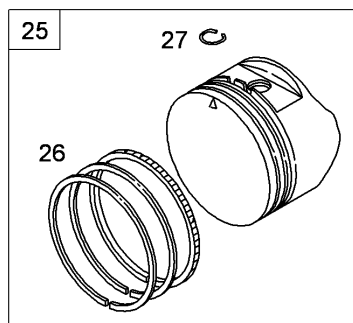     


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description
③16	696009	1	Crankshaft
③24	222698s	1	Key-Flywheel
③25	795429	1	Piston ASM (STD)
③25	795430	1	Piston ASM (.020 Oversize)
③26	795431	1	Ring Set (STD)
③26	795432	1	Ring Set (.020 Oversize)
③27	691866	1	Lock-Pin, Piston
③28	499423	1	Pin-Piston (STD)
③29	499424	1	Rod-Connecting
③32	691664	1	Screw (Connecting Rod)
③32A	695759	1	Screw (Connecting Rod)
③33	262651s	1	Valve-Exhaust
③34	262652s	1	Valve-Intake
③35	691270	1	Spring-Valve (Intake)
③36	691270	1	Spring-Valve (Exhaust)
③40	692194	1	Retainer-Valve
③45	690548	1	Tappet-Valve
③741	790345	1	Gear-Timing
③868	697338	1	Seal-Valve

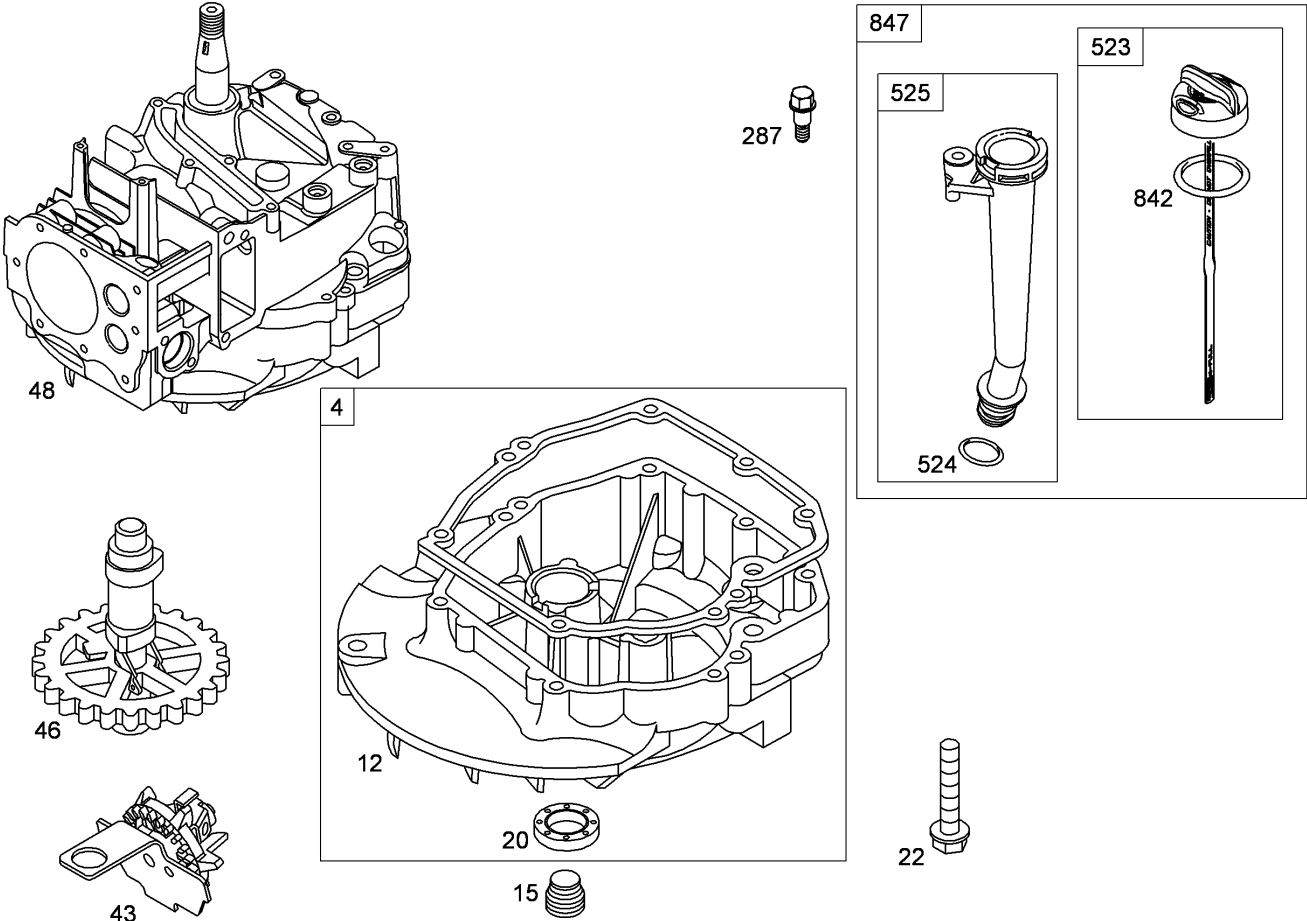 


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 STD)				
15	691680	1	Plug-Drain, Oil				
20	399781s	1	Seal-Oil (PTO Side)				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Oil, Governor				
46	691449	1	Camshaft				
48	692748	1	Short Block				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal-O Ring (Dipstick Tube)				
525	495265	1	Tube-Dipstick				
842	691031	1	Seal-O Ring				
847	692047	1	Dipstick Tube ASM				


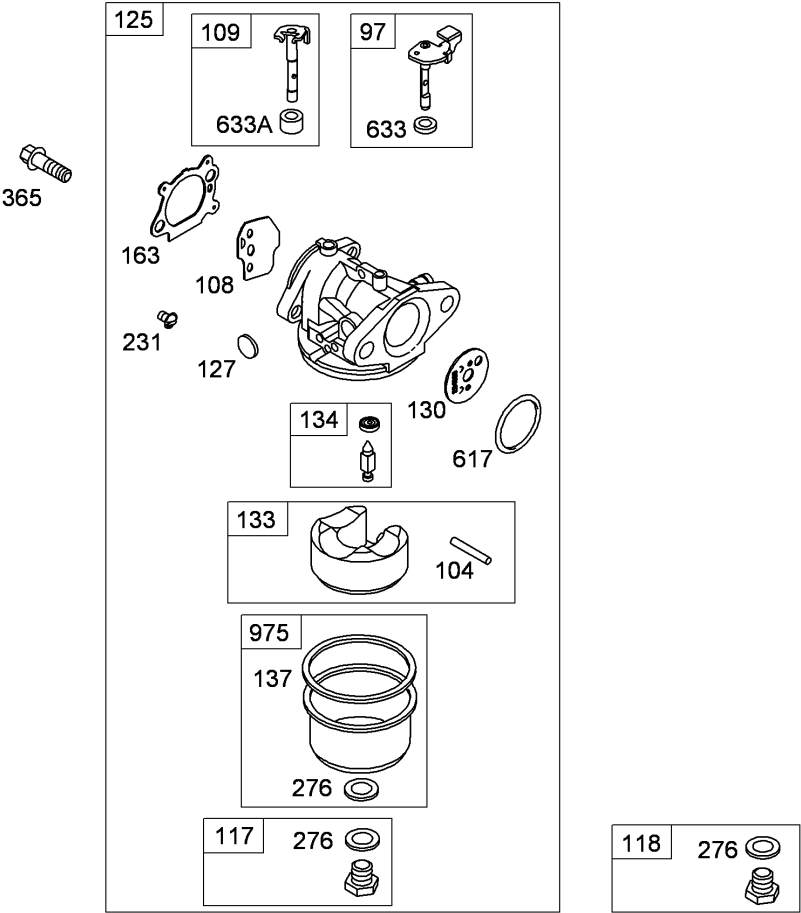 


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T02-0231-B1







Ref	Part No.	Qty.	Description				
③ 97	696565	1	Shaft-Throttle				
③ ④ 104	691242	1	Pin-Hinge, Float				
③ 108	790844	1	Valve-Choke				
③ 109	790843	1	Shaft-Choke				
③ 117	691428	1	Jet-Main (Standard)				
③ 118	498977	1	Jet-Main (High Altitude)				
③ 125	794304	1	Carburetor				
③ ④ 127	694468	1	Plug-Welch				
③ 130	696564	1	Valve-Throttle				
③ 133	398187	1	Float-Carburetor				
③ ④ 134	398188	1	Needle And Seat Kit				
③ ④ 137	693981	1	Gasket-Bowl, Float				
⑤							
③ ④ 163	272653s	1	Gasket-Cleaner, Air				
⑤ ⑥							
③ 231	691636	1	Screw (Choke Valve)				
③ ④ 276	271716	1	Washer-Sealing				
⑤							
③ 365	692524	1	Screw (Carburetor)				
③ ④ 617	270344s	1	Seal-O Ring (Intake Manifold)				
⑤							
③ ④ 633	691321	1	Seal-Shaft, Choke Throttle				
⑤							
③ ④ 633A	693867	1	Seal-Shaft, Choke Throttle				
⑤							
③ 975	493640	1	Bowl-Float				

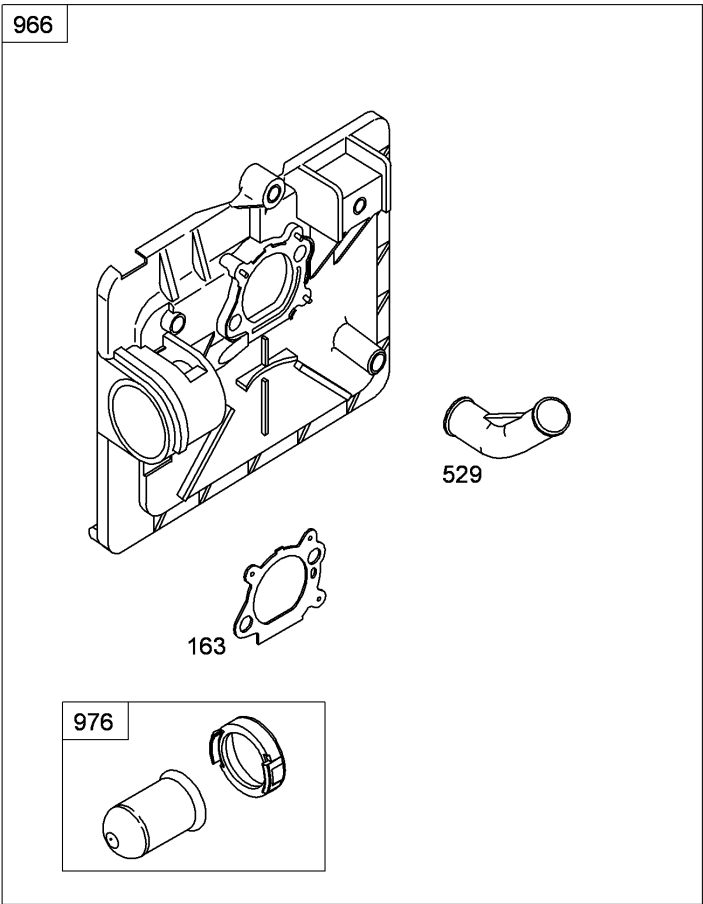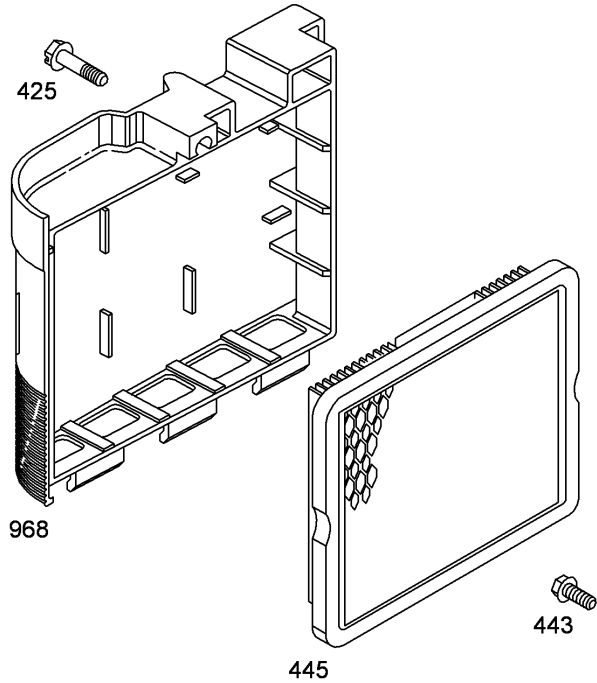  

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126T02-0231-B1








Ref	Part No.	Qty.	Description				
③ ④ 163	272653s	1	Gasket-Cleaner, Air				
③ ⑥							
③ 425	690670	1	Screw (Air Cleaner Cover)				
③ 443	692523	1	Screw (Air Cleaner Primer Base)				
③ 445	491588s	1	Filter-Cartridge, Air Cleaner				
③ 529	691923	1	Grommet				
③ 966	792040	1	Base-Primer, Air Cleaner				
③ 968	692298	1	Cover-Cleaner, Air				
③ 976	694395	1	Primer-Carburetor				

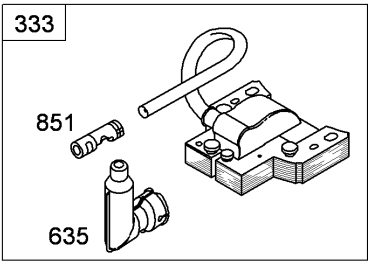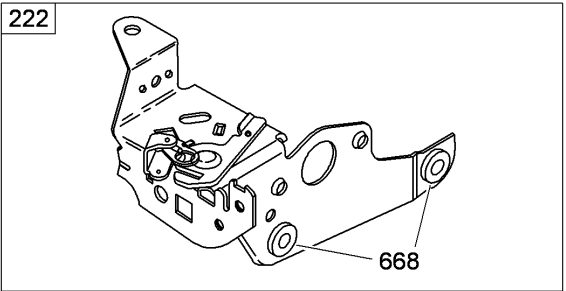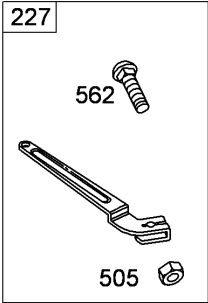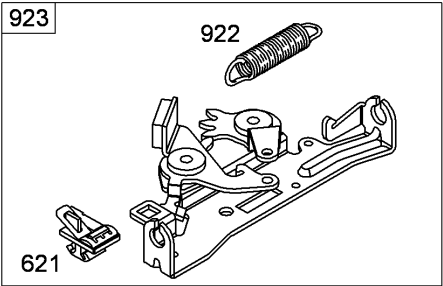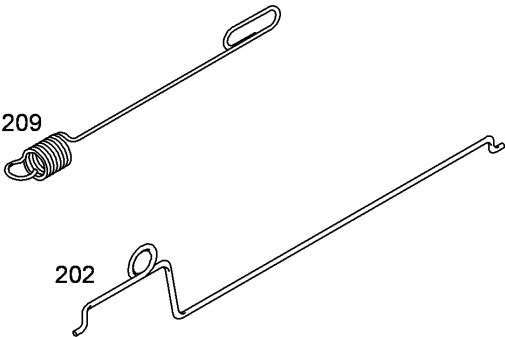      

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T02-0231-B1






Ref	Part No.	Qty.	Description				
188	693399	1	Screw (Control Bracket)				
202	691829	1	Link-Governor, Mechanical				
209	691852	1	Spring-Governor				
222	793754	1	Bracket-Control				
227	690783	1	Lever-Control, Governor				
333	793353	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
356	692390	1	Wire-Stop				
505	691251	1	Nut (Governor Control Lever)				
562	691119	1	Bolt (Governor Control Lever)				
621	692310	1	Switch-Stop				
635	793351	1	Boot-Spark Plug				
668	493823	1	Spacer				
745	691648	1	Screw				
851	692424	1	Terminal-Spark Plug				
922	691831	1	Spring-Brake				
923	691994	1	Brake ASM				

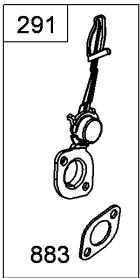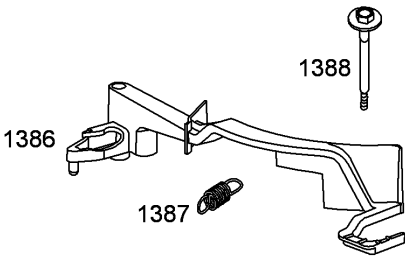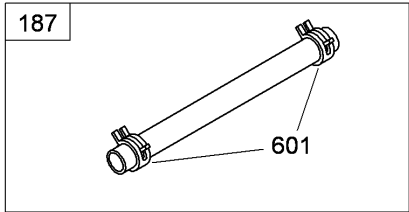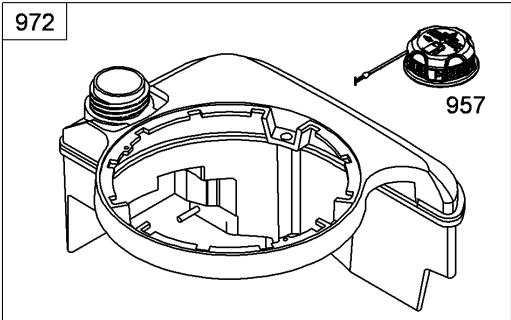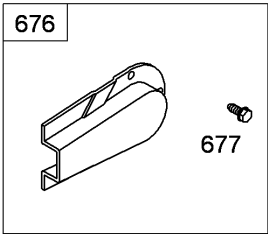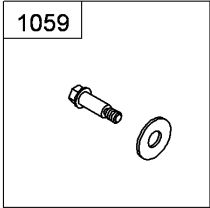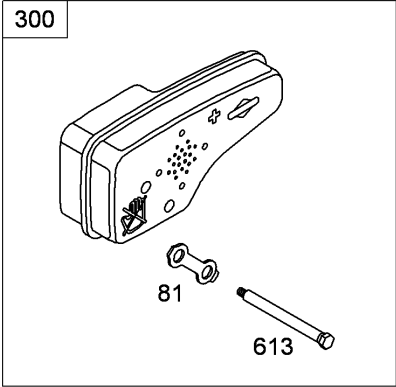       

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly
Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description				
81	691740	1	Lock-Screw, Muffler				
187	791766	1	Line-Fuel (Cut To Required Length)				
190	690940	1	Screw (Fuel Tank)				
291	790830	1	Thermostat				
300	692038	1	Muffler				
601	791850	1	Clamp-Hose				
613	691340	1	Screw (Muffler)				
670	692294	1	Spacer-Tank, Fuel				
676	493871	1	Deflector-Muffler				
677	690661	1	Screw (Muffler Deflector)				
883	691881	1	Gasket-Exhaust				
957	699985	1	Cap-Tank, Fuel				
972	699374	1	Tank-Fuel				
1059	692311	1	Screw And Washer Kit				
1386	790848	1	Vane-Air				
1387	790849	1	Spring-Vane, Air				
1388	790850	1	Screw (Air Vane)				

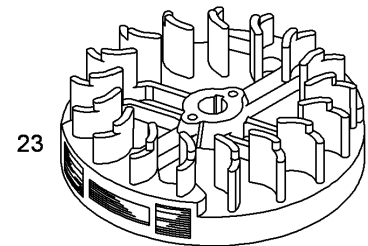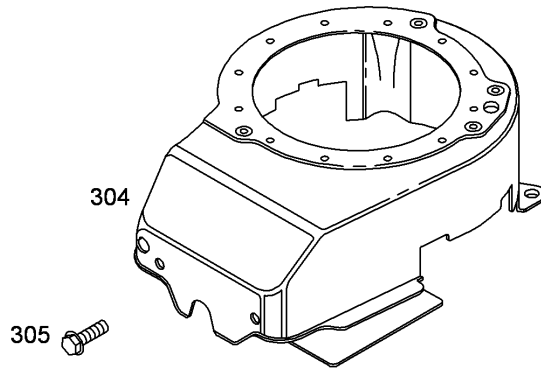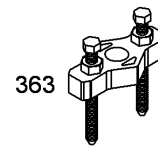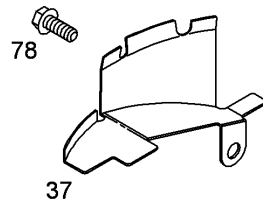     


1036 Emissions Label

Assemblies include all parts shown in frames

Blower Housing Assembly Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description				
③23	691987	1	Flywheel				
③37	793756	1	Guard-Flywheel				
③78	691108	1	Screw (Flywheel Guard)				
③304	790983	1	Housing-Blower				
③305	691108	1	Screw (Blower Housing)				
③332	690662	1	Nut (Flywheel)				
③363	19069	1	Puller-Flywheel				
③455	791760	1	Cup-Flywheel				
③1036		1	Label-Emissions				

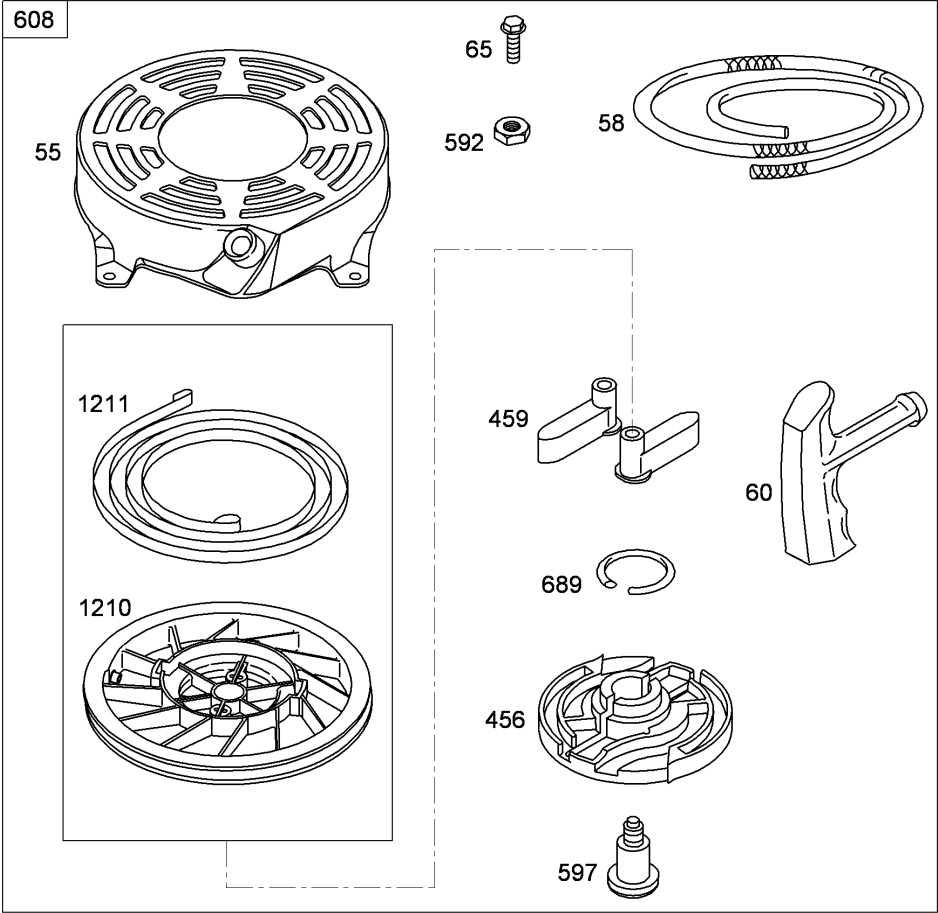 


Assemblies include all parts shown in frames

Starter Assembly

Briggs and Stratton 126T02-0231-B1



Ref	Part No.	Qty.	Description				
❶55	691421	1	Housing-Starter, Rewind				
❶58	697316	1	Rope-Starter (Cut To Required Length)				
❶60	281434s	1	Grip-Rope, Starter				
❶65	690837	1	Screw (Rewind Starter)				
❶456	692299	1	Plate-Friction, Pawl				
❶459	281505s	1	Ratchet-Pawl				
❶592	690800	1	Nut (Rewind Starter)				
❶597	691696	1	Screw (Pawl Friction Plate)				
❶608	497680	1	Starter-Rewind				
❶689	691855	1	Spring-Friction				
❶1210	498144	1	Pulley And Spring ASM (Pulley)				
❶1211	498144	1	Pulley And Spring ASM (Spring)				

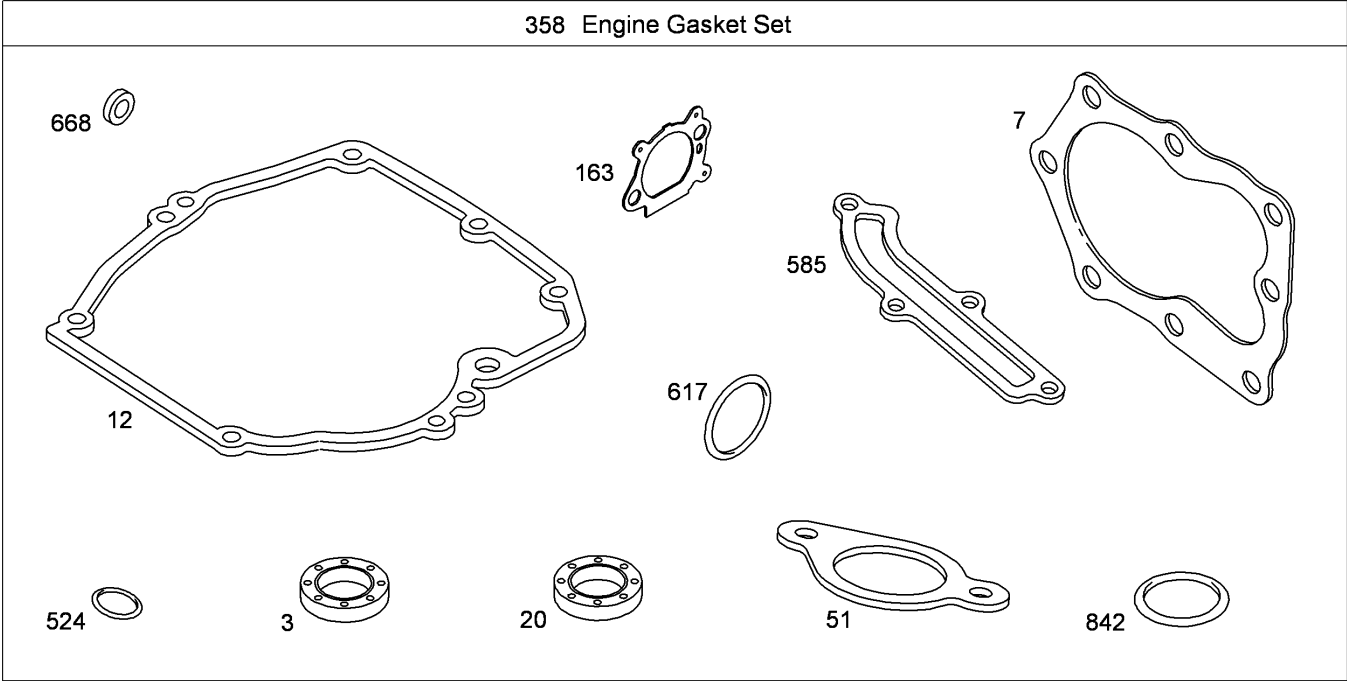 

Assemblies include all parts shown in frames

Engine Gasket Set
Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description				
353	299819s	1	Seal-Oil (Magneto Side)				
357	692249	1	Gasket-Head, Cylinder				
3512	692232	1	Gasket-Crankcase (.015 STD)				
3520	399781s	1	Seal-Oil (PTO Side)				
3551	794306	1	Gasket-Intake				
34163	272653s	1	Gasket-Cleaner, Air				
36							
358	794307	1	Engine Gasket Set				
3524	692296	1	Seal-O Ring (Dipstick Tube)				
3585	691879	1	Gasket-Passage, Breather				
34617	270344s	1	Seal-O Ring (Intake Manifold)				
36							
35668	493823	1	Spacer				
35842	691031	1	Seal-O Ring (Dipstick)				

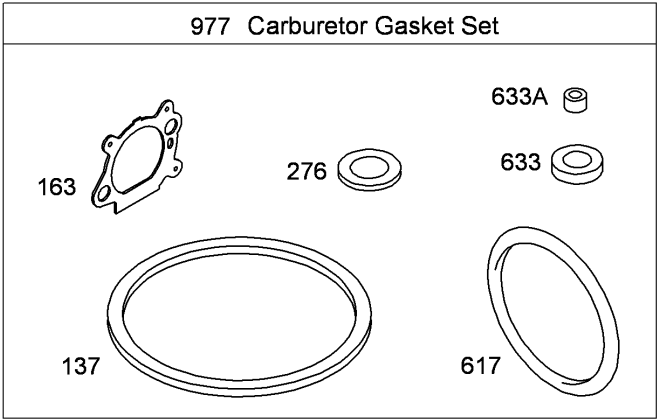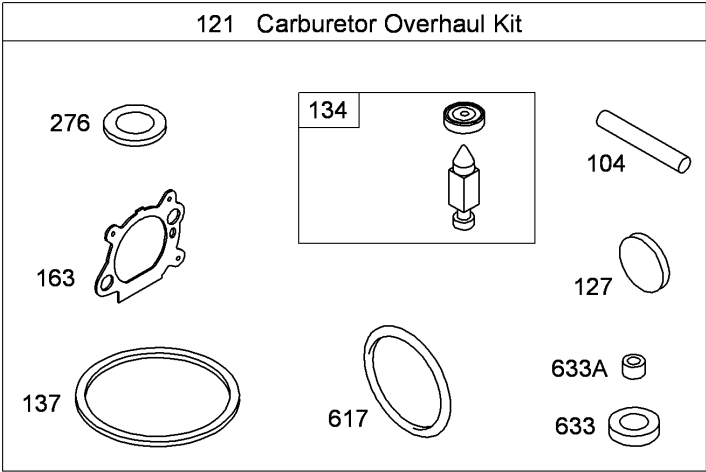  

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 126T02-0231-B1

Ref	Part No.	Qty.	Description				
3 4 104	691242	1	Pin-Hinge, Float				
3 121	498260	1	Carburetor Overhaul Kit				
3 4 127	694468	1	Plug-Welch				
3 4 134	398188	1	Needle And Seat Kit				
3 4 137	693981	1	Gasket-Bowl, Float				
6							
3 4 163	272653s	1	Gasket-Cleaner, Air				
5 6							
3 4 276	271716	1	Washer-Sealing				
6							
3 4 617	270344s	1	Seal-O Ring (Intake Manifold)				
5 6							
3 4 633	691321	1	Seal-Shaft, Choke Throttle				
6							
3 4 633A	693867	1	Seal-Shaft, Choke Throttle				
6							
3 977	498261	1	Carburetor Gasket Set				

NOTES

NOTES

NOTES

